

Errata

Title & Document Type: 419A DC Null Voltmeter Operating and Service Manual

Manual Part Number: 00419-90004

Revision Date: December 1972

About this Manual

We've added this manual to the Agilent website in an effort to help you support your product. This manual provides the best information we could find. It may be incomplete or contain dated information, and the scan quality may not be ideal. If we find a better copy in the future, we will add it to the Agilent website.

HP References in this Manual

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, life sciences, and chemical analysis businesses are now part of Agilent Technologies. The HP XXXX referred to in this document is now the Agilent XXXX. For example, model number HP8648A is now model number Agilent 8648A. We have made no changes to this manual copy.

Support for Your Product

Agilent no longer sells or supports this product. You will find any other available product information on the Agilent Test & Measurement website:

www.agilent.com

Search for the model number of this product, and the resulting product page will guide you to any available information. Our service centers may be able to perform calibration if no repair parts are needed, but no other support from Agilent is available.




Agilent Technologies

HP 419A

OPERATING AND SERVICE MANUAL

DC NULL VOLTMETER 419A

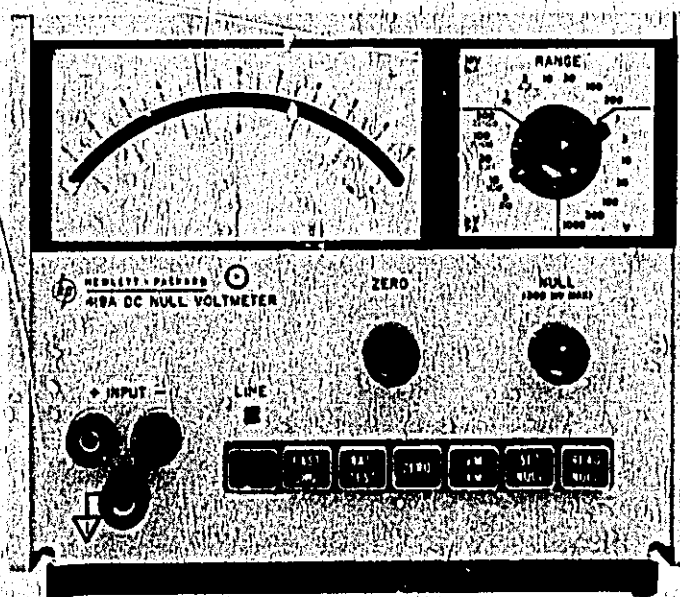

HEWLETT **hp** PACKARD

HP 419A

HEWLETT  PACKARD

CERTIFICATION

The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facility.

WARRANTY AND ASSISTANCE

All Hewlett-Packard products are warranted against defects in materials and workmanship. This warranty applies for one year from the date of delivery, or, in the case of certain major components listed in the operating manual, for the specified period. We will repair or replace products which prove to be defective during the warranty period provided they are returned to Hewlett-Packard. No other warranty is expressed or implied. We are not liable for consequential damages.

Service contracts or customer assistance agreements are available for Hewlett-Packard products that require maintenance and repair on-site.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.



OPERATING AND SERVICE MANUAL

-hp-MANUAL PART NO. 00419-90004

-hp-MICROFICHE PART NO. 00419-90054

MODEL 419A DC NULL VOLTMETER

SERIALS PREFIXED: 0948A

If other serial prefixes require modification of this manual, the changes will appear in Appendix C or in an associated "Manual Changes" supplement.

Copyright Hewlett-Packard Company, 1966
P. O. Box 301, Loveland, Colorado, 80537 U.S.A.

Printed: DECEMBER 1972

TABLE OF CONTENTS

Section	Page
I GENERAL INFORMATION	1-1
1-1. Introduction	1-1
1-3. Specifications	1-1
1-5. Description and Purpose	1-1
1-9. Instrument/Manual Identification	1-2
1-11. Accessory Equipment Supplied	1-2
1-13. Accessory Equipment Available	1-2

Section	Page
II INSTALLATION	2-1
2-1. Introduction	2-1
2-3. Initial Inspection	2-1
2-5. Power Requirements	2-1
2-7. Grounding Requirements	2-1
2-10. Installation	2-1
2-12. Bench Mounting	2-1
2-14. Rack Mounting	2-1
2-16. Combination Mounting	2-1
2-18. Repackaging for Shipment	2-1

Section	Page
III OPERATING INSTRUCTIONS	3-1
3-1. Introduction	3-1
3-3. Controls, Indicators, and Connectors	3-1
3-5. Operating Instructions	3-1
3-7. Turn-On Procedure (Battery Operation)	3-1
3-8. Turn-On Procedure (AC Line Operation)	3-1
3-9. DC Voltage Measurements	3-1
3-10. DC Current Measurements	3-2
3-17. Applications	3-2
3-25. Storage	3-4

Section	Page
IV THEORY OF OPERATION	4-1
4-1. Introduction	4-1
4-3. General Description	4-1
4-11. Detailed Description	4-1
4-12. Bucking Supply (See Figure 6-3)	4-1
4-15. Input Attenuator	4-2
4-17. Input Filter	4-2
4-19. Modulator/Demodulator	4-2
4-23. AC Amplifier	4-2
4-26. DC Amplifier	4-2
4-30. Meter Circuit	4-3
4-33. Feedback Control	4-3
4-35. Power Supply and Neon Driver (Figure 6-4)	4-3

Section	Page
V MAINTENANCE	5-1
5-1. Introduction	5-1
5-3. Test Equipment	5-1
5-5. Performance Tests	5-1
5-7. Voltmeter Accuracy Test	5-1
5-9. Bucking Voltage Test	5-1
5-11. Ammeter Accuracy Test	5-2
5-13. Response Time Test	5-2
5-15. Superimposed AC Rejection Test	5-2
5-17. Noise Test	5-2
5-19. Input Resistance Test	5-3
5-21. Repair Procedures	5-3
5-22. Cover Removal	5-3
5-24. Servicing Printed Circuit Boards	5-3
5-29. Adjustment and Calibration	5-4
5-31. Mechanical Zero Adjustment	5-4
5-33. Chopper Adjustment	5-4
5-35. Electrical Zero Adjustment	5-5
5-37. Full Scale Calibration	5-5
5-39. Battery Test Calibration	5-5
5-41. Troubleshooting	5-5
5-43. No Response to Input	5-5
5-45. Positive or Negative Foldover	5-6
5-47. Excessive Noise	5-6
5-49. Troubleshooting the Input Attenuator	5-6
5-51. Replacement of Factory Selected Components	5-6

Section	Page
VI CIRCUIT DIAGRAMS	6-1
6-1. Introduction	6-1
6-3. Schematic Diagrams	6-1
6-5. Component Location Diagrams	6-1

Section	Page
VII REPLACEABLE PARTS	7-1
7-1. Introduction	7-1
7-4. Ordering Information	7-1
7-6. Non-Listed Parts	7-1

Appendix
A CODE LIST OF MANUFACTURERSAppendix
B SALES AND SERVICE OFFICESAppendix
C MANUAL BACKDATING CHANGES

LIST OF TABLES

Number	Page
1-1. Model 419A Specifications	1-1
1-2. Accessory Equipment Supplied	1-2
1-3. Accessory Equipment Available	1-2
4-1. Model 419A Attenuation and Gain Characteristics	4-2

Number	Page
5-1. Test Equipment Required	5-0
5-2. Accuracy Performance Test, Supplemental Data	5-1
5-3. Ammeter Accuracy Test	5-2
7-1. Replaceable Parts	7-2

LIST OF ILLUSTRATIONS

Number	Page	Number	Page
3-1. Front and Rear Panel Controls, Indicators, and Connectors	3-0	5-4. Neon Drive Waveform (A2TP2)	5-5
3-2. Leakage Measurement	3-3	6-1. Model 419A, Component Location Diagram	6-2
3-3. Calibrating a DC Standard	3-3	6-2. Range Switch S1, Component Location Diagram	6-2
3-4. Measuring Power Supply Drift	3-4	6-3. Amplifier and Amplifier Switching, Schematic and Component Location Diagrams	6-3/6-4
4-1. Model 419A Block Diagram	4-1	6-4. Power Supply and Neon Driver, Schematic and Component Location Diagrams	6-5/6-6
5-1. Voltmeter Accuracy Performance Test Setup	5-0		
5-2. Ammeter Accuracy Test Setup	5-2		
5-3. Superimposed AC Rejection Performance Test Setup	5-3		

SECTION I GENERAL INFORMATION

1-1. INTRODUCTION.

1-2. This section contains general information about the Model 419A DC Null Voltmeter (Figure 1-1). Included are Specifications, Description and Purpose, Instrument Identification, Accessory Equipment Supplied, and Accessory Equipment Available.

1-3. SPECIFICATIONS.

1-4. Table 1-1 contains the specifications for the Model 419A.

1-5. DESCRIPTION AND PURPOSE.

1-6. The Model 419A is housed in a standard -hp- 1/2 module case. A rechargeable battery power supply allows operation independent of ac line. Range and function switching is accomplished by front panel controls.

1-7. The Model 419A provides 18 end scale dc voltage ranges in a 1, 3, 10 sequence from 3 microvolts to 1000 volts. The Model 419A also provides 7 end scale dc current ranges from 30 picoamps to 30 nanoamps.

Table 1-1. Model 419A Specifications

VOLTMETER	
Ranges: $\pm 3 \mu\text{V}$ to ± 1000 volts dc end scale in 18 zero center ranges.	Output Impedance: Depends on setting of output level control. < 35 ohms when output level is set to maximum.
Accuracy: $\pm (2\%$ of end scale $+ 0.1 \mu\text{V})$.	Noise: 0.01 Hz to 5 Hz: Same as voltmeter (referred to input). > 5 Hz: rms noise < 10 mV (referred to output).
Limits of Zero Control: $\pm 15 \mu\text{V}$.	DC AMMETER
Input Resistance:	
3 μV to 3 mV ranges: $100\text{k}\Omega$ (infinite when nulled).	Current Ranges: ± 30 pA, ± 100 pA, ± 300 pA, ± 1 nA, ± 3 nA, ± 10 nA and ± 30 nA.
10 mV to 30 mV ranges: $1\text{M}\Omega$ (infinite when nulled).	Accuracy: $\pm (3\%$ of end scale $+ 1$ pA).
100 mV to 300 mV ranges: $10\text{M}\Omega$ (infinite when nulled).	GENERAL
1 volt to 1000 volt ranges: $100\text{M}\Omega$	
Internal Bucking Voltage: $\pm 120\%$ end scale, 3 μV through 300 mV range.	Overload Voltages: 50 Vdc max, 3 μV to 3 mV ranges; 500 Vdc max, 10 mV to 300 mV ranges; 1200 Vdc max on 1 volt range and above.
Response Time: 95% of final reading within 3 sec on the 3 μV range. 95% of final reading within 1 sec on the 10 μV to 1000 V ranges.	Overload Recovery Time: Meter indicates within 3 seconds for a 10^5 overload on the 3 μV range; indicates within 3 sec for a 10^5 overload on all other ranges.
Superimposed AC Rejection: Ac voltages 60 Hz and above: 80 db greater than end scale--affects reading less than 2%. Peak ac voltage not to exceed max overload voltage.	Input Terminals: Positive and negative terminals are solid copper, gold flashed.
Drift: $< 0.5 \mu\text{V/day}$ after 30 minutes warmup. T.C. $< 0.05 \mu\text{V}/^\circ\text{C}$ from 0° to $+50^\circ\text{C}$.	Input Isolation: $> 10^{10}$ ohms shunted by 250 pF. May be operated up to 500 Vdc or 350 Vac (rms) above ground.
Noise*: $< 0.3 \mu\text{V}$ peak-to-peak.	Operating Temperature: 0° to $+50^\circ\text{C}$.
* Peak-to-peak noise is less than $0.3 \mu\text{V}$ 95% of the time, since the noise amplitude approximates a Gaussian distribution where the standard deviation (which is also the rms value) $\approx 0.075 \mu\text{V}$.	Storage Temperature: -40°C to $+60^\circ\text{C}$.
AMPLIFIER	
Gain: 110db maximum at recorder output terminals. Gain depends on range.	Power Source: 4 internal rechargeable batteries (furnished). Thirty hour operation per recharge. The 419A may be operated during recharge from ac line. 115 or 230 V $\pm 10\%$, 48 to 440 Hz, approximately 3 watts.
Output: 0 to ± 1 volt at 1 mA max for end scale reading. Output level is adjustable for convenience when used with recorders.	Dimensions: Standard -hp- 1/2 module; 6" high, 7-3/4" wide, 8" deep (152 x 197 x 203 mm).

An internal bucking supply allows voltages up to 300 millivolts to be measured with infinite input impedance. The input impedance for the higher ranges is 100 MΩ.

1-8. Recorder output terminals are provided on the rear panel. The voltage available is proportional to the meter deflection and is adjustable from 0 to 1 volt at full scale.

1-9 INSTRUMENT AND MANUAL IDENTIFICATION.

1-10. Hewlett-Packard uses a two-section serial number. If the first section (serial prefix) of the serial number on your instrument does not agree with those on the title page of this manual, change sheets supplied with the manual will define the differences between your instrument and the Model 419A described in this manual. Some serial numbers have a letter separating the two sections of the number. This letter indicates the country in which the instrument was manufactured.

1-11. ACCESSORY EQUIPMENT SUPPLIED.

1-12. The accessory equipment supplied with each Model 419A is listed and described in Table 1-2.

1-13. ACCESSORY EQUIPMENT AVAILABLE.

1-14. The accessory equipment available is listed in Table 1-3. For further information, contact your local -hp- Sales and Service Office. (See Appendix B for office locations.)

Table 1-2. Accessory Equipment Supplied

IDENTIFICATION NUMBER	QUANTITY	DESCRIPTION
8120-1348	1	Power Cord
00419-90004	1	Operating and Service Manual

Table 1-3. Accessory Equipment Available

IDENTIFICATION NUMBER	DESCRIPTION
5060-0630	22-Pin Printed Circuit Board Extender
11000A	Dual Banana Plugs to Dual Banana Plugs (44")
11002A	Dual Banana Plugs to Alligator Clips (60")
11003A	Dual Banana Plugs to Probe and Alligator Clip (60")

SECTION II INSTALLATION

2-1. INTRODUCTION.

2-2. This section contains information and instructions necessary for the installation and shipping of the Model 419A DC Null Voltmeter. Included are initial inspection procedures, power and grounding requirements, installation information, and instructions for repackaging for shipment.

2-3. INITIAL INSPECTION.

2-4. This instrument was carefully inspected both mechanically and electrically before shipment. It should be physically free of marks or scratches and in perfect electrical order upon receipt. To confirm this, the instrument should be inspected for physical damage in transit. Also check for supplied accessories, and test the electrical performance of the instrument using the procedure outlined in Paragraph 5-5. If there is damage or deficiency, see the warranty on the inside front cover of this manual.

2-5. POWER REQUIREMENTS.

2-6. The Battery Power Supply in the Model 419A can be charged from any source of 115 or 230 volts ($\pm 10\%$), at 48 to 440 Hz. With the instrument disconnected from the ac power source, move the slide switch (located on the rear panel) until the desired line voltage appears. Power Dissipation is approximately 3 watts.

2-7. GROUNDING REQUIREMENTS.

2-8. To protect operating personnel, the National Electrical Manufacturers' Association (NEMA) recommends that the instrument panel and cabinet be grounded. This instrument is equipped with a three-conductor power cable which, when plugged into an appropriate receptacle, grounds the instrument. The offset pin on the power cable three-prong connector is the ground wire.

2-9. To preserve the protection feature when operating the instrument from a two-contact outlet, use a three-prong to two-prong adapter and connect the green pilot on the adapter to ground.

2-10. INSTALLATION.

2-11. The Model 419A is fully transistorized; therefore, no special cooling is required. However, the instrument should not be operated where the ambient temperature exceeds 50°C (122°F).

2-12. BENCH MOUNTING.

2-13. The Model 419A is shipped with plastic feet and tilt stand in place, ready for use as a bench instrument.

2-14. RACK MOUNTING.

2-15. The Model 419A may be rack mounted by using an Adapter Frame (-hp- Part No. 5060-0797). The

adapter frame is a rack frame that accepts any combination of submodular units. It can be rack mounted only. For additional information, address inquiries to your -hp- Sales and Service Office. (See Appendix B for office locations.)

2-16. COMBINATION MOUNTING.

2-17. The Model 419A may be mounted in combination with other submodular units by using a Combining Case (-hp- Models 1051A and 1052A). The Combining Case is a full-module unit which accepts various combinations of submodular units. Being a full-module unit, it can be bench or rack mounted and is analogous to any full-module instrument.

2-18. REPACKAGING FOR SHIPMENT.

2-19. The following paragraphs contain a general guide for repackaging of the instrument for shipment. Refer to Paragraph 2-20 if the original container is to be used; 2-21 if it is not. If you have any questions, contact your local -hp- Sales and Service Office. (See Appendix B for office locations.)

NOTE

If the instrument is to be shipped to Hewlett-Packard for service or repair, attach a tag to the instrument identifying the owner and indicating the service or repair to be accomplished; include the model number and full serial number of the instrument. In any correspondence, identify the instrument by model number, serial number, and serial number prefix.

2-20. If original container is to be used, proceed as follows:

- Place instrument in original container. If original container is not available, one can be purchased from your nearest -hp- Sales and Service Office.
- Ensure that container is well sealed with strong tape or metal bands.

2-21. If original container is not to be used, proceed as follows:

- Wrap instrument in heavy paper or plastic before placing in an inner container.
- Place packing material around all sides of instrument and protect panel face with cardboard strips.
- Place instrument and inner container in a heavy carton or wooden box and seal with strong tape or metal bands.
- Mark shipping container with "DELICATE INSTRUMENT," "FRAGILE" etc.

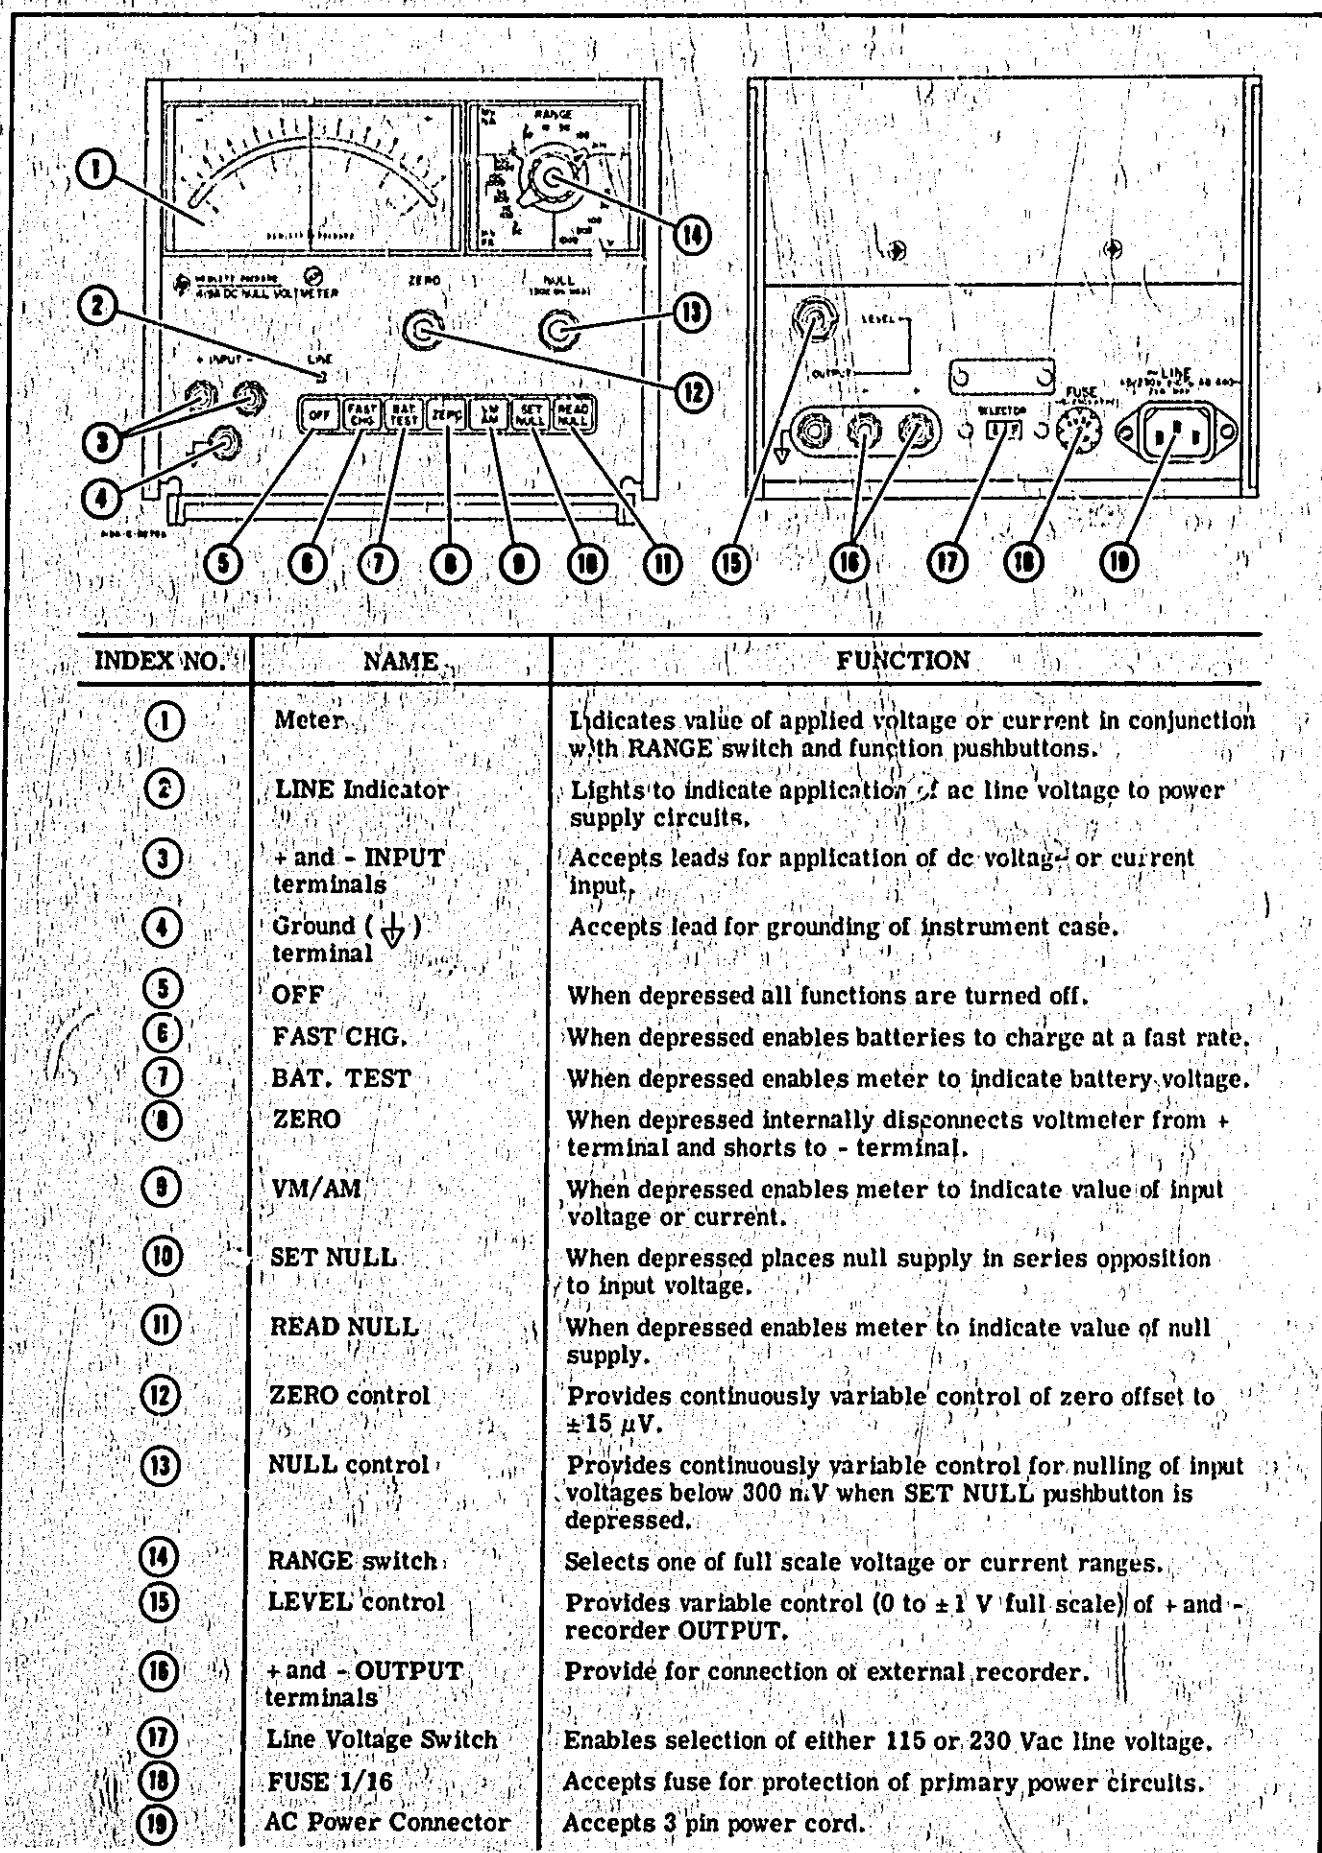


Figure 3-1: Front and Rear Panel Controls, Indicators, and Connectors

SECTION III OPERATING INSTRUCTIONS

3-1. INTRODUCTION.

3-2. The Model 419A functions as a dc voltmeter with full (end) scale ranges from 3 μ V to 1000 V. An internal bucking supply allows essentially infinite input impedance to be achieved on the 3 μ V to 300 mV ranges. The Model 419A can also measure low level dc currents with full (end) scale ranges from 30 pA to 30 nA. This section describes the operating procedures and presents some applications for the Model 419A.

3-3. CONTROLS, INDICATORS AND CONNECTORS.

3-4. Each operating control, indicator and connector, located on the Model 419A is identified in Figure 3-1. The description of each component is keyed to the illustration of that component which is included within the figure.

3-5. OPERATING INSTRUCTIONS.

3-6. The Model 419A may be operated on its internal battery power supply or from an ac line. The instrument operates on its internal batteries whenever the ac power cable is removed from the ac power connector. Line operation occurs automatically whenever the power cable is connected to the power connector.

WARNING

WHEN USED IN BATTERY OPERATION, THERE IS NO GROUND RETURN THROUGH THE POWER CORD. USE CAUTION TO AVOID ELECTRICAL SHOCK.

NOTE

Best isolation characteristics and freedom from ground loop problems results when the 419A is operated on its internal battery supply.

3-7. TURN-ON PROCEDURE (BATTERY OPERATION).

NOTE

Disconnect the power cable from the power receptacle for battery operation.

- a. Depress BAT. TEST pushbutton; if meter does not indicate within BAT limits, perform battery charging procedure (Paragraph 3-13).

NOTE

When the 419A is received or after a period of storage (especially at high temperatures), the batteries may require changing. Erratic and inaccurate operation may result if the instrument is operated on weak batteries.

- b. Set RANGE switch to 1 V.
- c. Depress ZERO pushbutton. If meter does not indicate zero, perform the meter zero adjustments (Paragraphs 5-31 thru 5-36).
- d. Zero meter on 3 μ V range with ZERO control. Periodically recheck setting of ZERO control on the 3 μ V range.

NOTE

When measuring small voltages, zero the Model 419A in VM mode with test leads connected to circuit being tested, if possible. (Circuit must be de-energized.) This will cancel the effects of thermal and galvanic offset voltages generated in the test setup.

3-8. TURN-ON PROCEDURE (AC LINE OPERATION).

- a. Set line voltage two-position slide switch (rear panel) to correct position for available line voltage.

CAUTION

DAMAGE TO INSTRUMENT MAY RESULT IF LINE VOLTAGE SWITCH IS SET INCORRECTLY.

- b. Connect ac power connector to the line using the ac power cable supplied.
- c. Set RANGE switch to 1 V.
- d. Depress ZERO pushbutton. If meter does not indicate zero, perform meter zero adjustments (Paragraphs 5-31 thru 5-36).
- e. Zero meter on 3 μ V range with ZERO control. Periodically recheck setting of zero control on the 3 μ V range.

3-9. DC VOLTAGE MEASUREMENTS.

- a. Turn on the Model 419A and zero it according to the steps in Paragraph 3-7 (battery operation) or Paragraph 3-8 (AC Line Operation). Allow at least ten minutes warmup time if low voltages (below 1 mV) are to be measured.
- b. Connect test leads to + and - INPUT terminals. (See Table 1-3 for a list of test leads available.)

- c. Set RANGE switch to range nearest above input voltage. If in doubt, start on the 1000 V range and downrange as necessary.

CAUTION

TO PREVENT DAMAGE TO THE MODEL 419A, DO NOT EXCEED THE FOLLOWING OVERLOAD LIMITS.

RANGE	MAXIMUM INPUT VOLTAGE
3 μ V to 3 mV	50 Vdc
10 mV to 300 mV	500 Vdc
1 V to 1000 V	1200 Vdc

- d. Connect test leads to voltage to be measured.

CAUTION

DO NOT FLOAT MODEL 419A - INPUT TERMINAL MORE THAN ± 500 VDC FROM GROUND (∇).

- e. Depress VM/AM pushbutton. Read value of input voltage on meter scale.

NOTE

If input voltage is 300 mV or less, infinite input impedance may be obtained by proceeding with steps f thru h.

- f. Depress SET NULL pushbutton.
g. Rotate NULL control until meter indicates exactly zero.

NOTE

NULL control gives both coarse and fine adjustment. Rotate control until pointer is slightly down scale from zero; then reverse direction to obtain fine adjustment.

- h. Depress READ NULL pushbutton. Read value of input voltage on meter.

3-10. DC CURRENT MEASUREMENTS.

- a. Turn on and zero the Model 419A according to the steps in Paragraph 3-7 (Battery Operation) or 3-8 (AC Line Operation). Allow at least ten minutes warmup time if low value currents (below 10 nA) are to be measured.
b. Connect test leads to + and - INPUT terminals.
c. Set RANGE to range nearest above current to be measured. If in doubt, start on 300 nA position and reduce as necessary.

- d. Connect test leads in series with current to be measured.

- e. Depress VM/AM pushbutton. Read value of input current on meter scale.

3-11. Amplifier Output.

3-12. The rear panel OUTPUT terminals provide a dc voltage which is proportional to meter deflection. The LEVEL control adjusts the maximum value of output voltage. With the LEVEL control turned fully cw, the voltage varies from 0 to ± 1 Vdc into a 1 k Ω load. Polarity of the voltage depends upon polarity of the meter deflection.

3-13. Battery Charging Procedure.

3-14. The batteries are automatically trickle charged whenever the Model 419A is connected to an ac power line and the ZERO, VM/AM, SET NULL or READ NULL pushbutton is depressed. The instrument may be used while trickle charging occurs except when the batteries have been almost completely discharged. Under this condition the Model 419A may not operate properly and the batteries should be at least partially recharged before using the instrument. Generally, 72 hours of trickle charging will restore the batteries to their fully charged state; however, the batteries may be trickle charged indefinitely without damage.

3-15. The batteries may be fast charged by connecting the Model 419A to an ac power line and depressing the FAST CHG. pushbutton. The instrument cannot be used to make measurements while fast charging the batteries. The batteries should reach full charge in approximately 15 hours.

3-16. To obtain maximum battery life, the following points should be observed.

- Do not allow the batteries to discharge below the BAT limits on the meter scale.
- Use fast charge only when necessary.
- Charge the batteries in moderate temperatures ($80^{\circ}\text{F} \pm 10^{\circ}\text{F}$, $27^{\circ}\text{C} \pm 5.6^{\circ}\text{C}$) whenever possible.
- Do not store the instrument at temperatures above 122°F (50°C) or below -40°F (-20°C).

3-17. APPLICATIONS.

3-18. In addition to straightforward dc voltage and current measurements, the Model 419A has a number of applications. Several of these are presented in the following paragraphs.

3-19. Measuring Leakage.

3-20. By using the Model 419A as a sensitive dc ammeter, very high resistance leakage paths in insulating materials can be detected and measured. Leakage is observed by connecting the output of a dc power supply across the insulating material and placing the Model

419A in series with one of the power supply leads. By noting the current flow on the Model 419A, the leakage resistance can be calculated from the formula:

$$R_{(\text{leakage})} = \frac{E_{(\text{power supply})}}{I_{(419A)}}$$

Example:

Assume the leakage between 2 points (A and B) in a standards laboratory oil bath is to be measured. A 100 V power supply and the 419A are connected as shown in Figure 3-2.

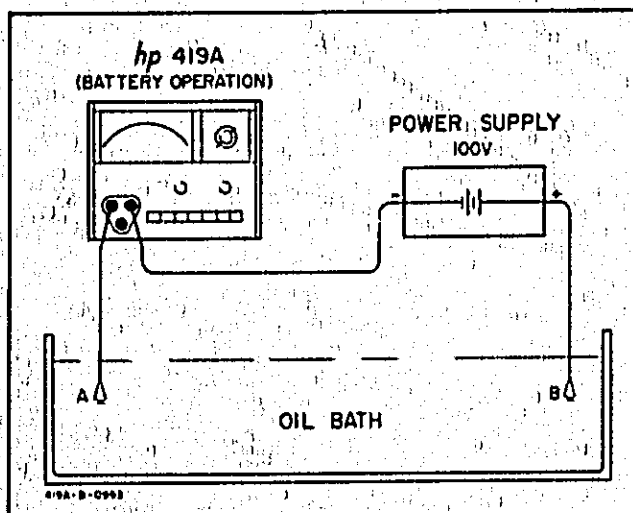


Figure 3-2. Leakage Measurement

Assume the 419A indicates 10 pA. The leakage of the oil can then be calculated.

$$R_{(\text{leakage})} = \frac{E_{(\text{power supply})}}{I_{(419A)}}$$

$$R_{(\text{leakage})} = \frac{100 \text{ V}}{10 \text{ pA}}$$

$$R_{(\text{leakage})} = 10^{13} \Omega$$

$$R_{(\text{leakage})} = 10^7 \text{ M}\Omega$$

3-21. Calibrating A Voltage Source.

3-22. The Model 419A can serve as a very sensitive and accurate null detector. These features can be especially useful when matching the output of an adjustable voltage source to a reference standard. The adjustable voltage source and the reference standard are connected in series opposition with the Model 419A in series with one of the leads. The adjustable voltage source is then adjusted for a null indication on the Model 419A.

Example:

Assume the output of a dc standard (-hp- Model 741B) is to be matched to the output of a 1 V transfer standard (-hp- Model 735A). These instruments and the Model 419A are connected as shown in Figure 3-3.

The reference standard and the adjustable voltage source are both set for a 1 V output. The Model 419A indicates any deviations between the two outputs. By making internal adjustments affecting the output of the voltage source until null is reached on the Model 419A's 3 μ V range, the output of the adjustable voltage source is very accurately matched to the reference standard.

3-23. Measuring and Recording Drift.

3-24. The rear panel OUTPUT terminals provide a dc voltage (0 to ± 1 V) proportional to meter deflection. This output can be used to record the drift of a dc voltage source when that source is compared to a very stable reference voltage.

Example:

Assume that the drift of a 10 V power supply is to be observed and recorded. The power supply, Model 419A, stable voltage source (-hp- Model 740B) and

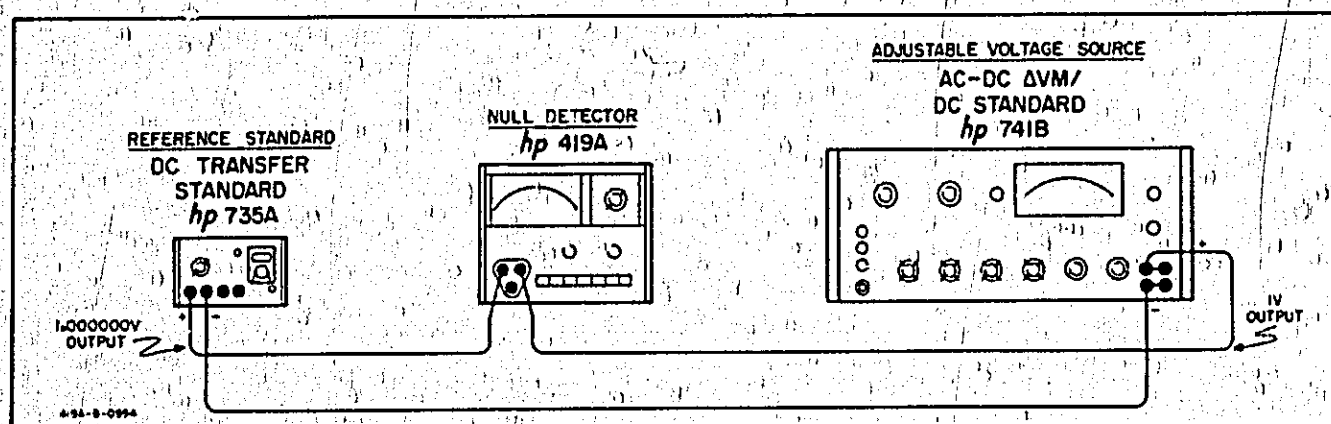


Figure 3-3. Calibrating A DC Standard

a strip chart recorder (hp-Model 7701A) are connected as shown in Figure 3-4.

The output of the stable voltage source or the power supply is adjusted until the Model 419A indicates null. The voltage range used on the Model 419A depends on how much drift is anticipated from the power supply. If the power supply output drifts 8 mV over a period of time, the Model 419A will indicate this variation (on the 10 mV range) and supply the strip chart recorder with a voltage that changes from 0 to 0.8 V over the same period. In this case, the drift is amplified by a factor of 100. Gains as high as 333,000 (on the 3 μ V range) are available when the Model 419A is used on the lower ranges.

3-25 STORAGE

CAUTION

FOR PROLONGED STORAGE (PERIODS OF SEVERAL MONTHS) THE INSTRUMENT SHOULD BE EITHER LEFT ON OR PERIODICALLY TURNED ON. THIS WILL GREATLY PROLONG THE LIFE OF THE PHOTOCOPPER SINCE THE PHOTOCOPPER'S RESPONSE TENDS TO DETERIORATE IN DARKNESS.

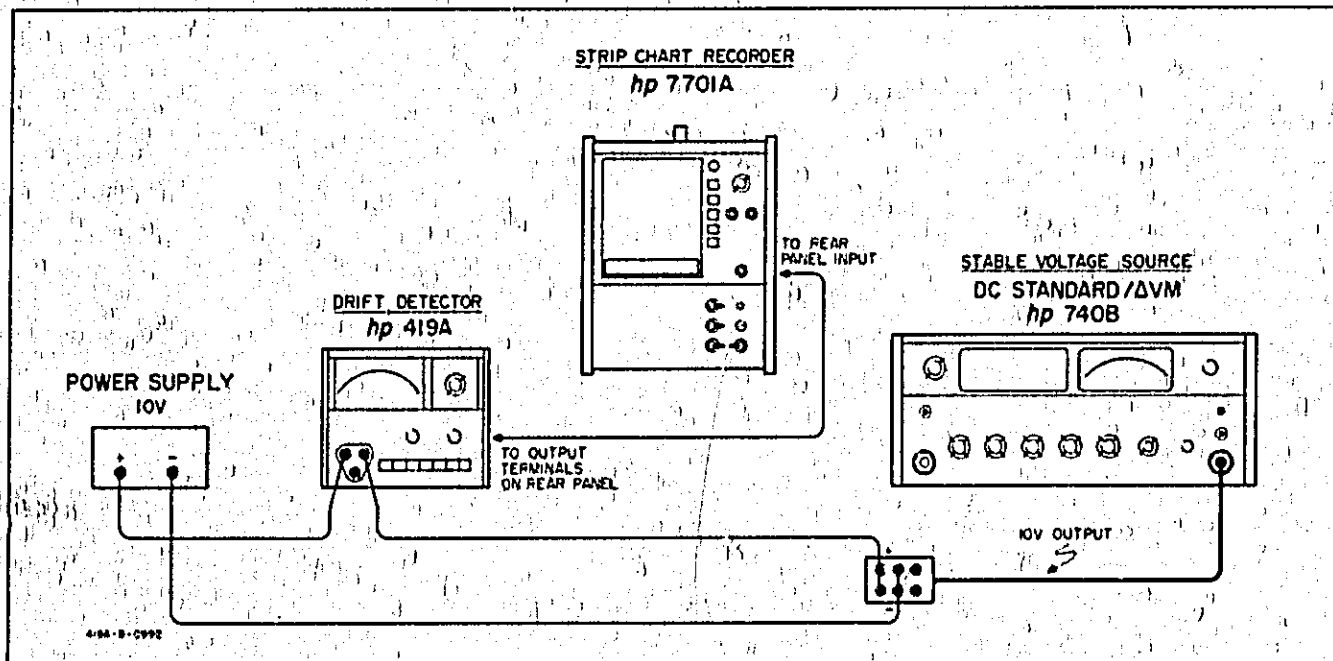


Figure 3-4. Measuring Power Supply Drift

SECTION IV THEORY OF OPERATION

4-1. INTRODUCTION.

4-2. This section contains the theory of operation of the Model 419A DC Null Voltmeter.

4-3. GENERAL DESCRIPTION.

4-4. The Model 419A functions as a dc voltmeter, a dc null voltmeter and a dc ammeter. When used as a dc voltmeter, the Model 419A provides end scale ranges from 3 μ V to 1000 V with an input resistance of 100 k Ω to 100 M Ω , depending on the range selected. When used as a dc null voltmeter, end scale ranges from 3 μ V to 300 mV are provided with infinite input resistance. End scale ranges from 30 pA to 30 nA are provided in the ammeter function with a constant 100 k Ω input resistance.

4-5. When used as an ammeter, circuit operation is identical to the voltmeter mode of operation. Current values are derived from the voltage drop across the constant 100 k Ω input resistance on the 30 pA (3 μ V) to 30 nA (3 mV) ranges.

4-6. A dc voltage being measured with the Model 419A is applied to the Input Attenuator through the + and - INPUT terminals, located on the front panel. In the dc voltmeter and ammeter modes, the input is applied to the input attenuator through S1R26. In the dc null voltmeter mode, the output of the Bucking Supply is applied to S1R26 in series opposition to the input dc voltage. The difference between the Bucking Supply output and the input dc voltage is applied to the Input Attenuator. Table 4-1 lists the attenuation factors provided by the Input Attenuator for all ranges.

4-7. The dc output of the Input Attenuator is modulated by the Modulator. The Modulator is comprised of two photocells which are alternately illuminated by two neon lamps. The output of the modulator is a square wave whose amplitude is proportional to the difference between the amplitudes of the input dc voltage and the feedback.

4-8. The square wave output of the modulator is amplified by the AC Amplifier. The AC Amplifier is a six-stage, high gain amplifier. Its output is applied to the Demodulator. The Demodulator output is a dc level whose amplitude is proportional to the amplitude of the square wave. The Demodulator output is applied to the DC Amplifier, a three-stage voltage and power amplifier.

4-9. The forward gain provided by the AC and DC Amplifiers for each range is listed in Table 4-1. The output of the DC Amplifier (approximately 1 Vdc for end scale meter deflection) is applied to M1 and is also available at the OUTPUT + and - terminals.

4-10. The Feedback Control circuit is ganged to the Input Attenuator by the RANGE switch S1. The feedback provided by the Feedback Control circuit is listed in Table 4-1. Algebraic addition of attenuation factor, forward gain and feedback gives the closed loop gain. The closed loop gain provides 18 end scale ranges in 10 dB steps.

4-11. DETAILED DESCRIPTION.

4-12. BUCKING SUPPLY (See Figure 6-3).

4-13. Dc input voltages up to 300 mV may be measured in either the dc voltmeter mode or the null voltmeter

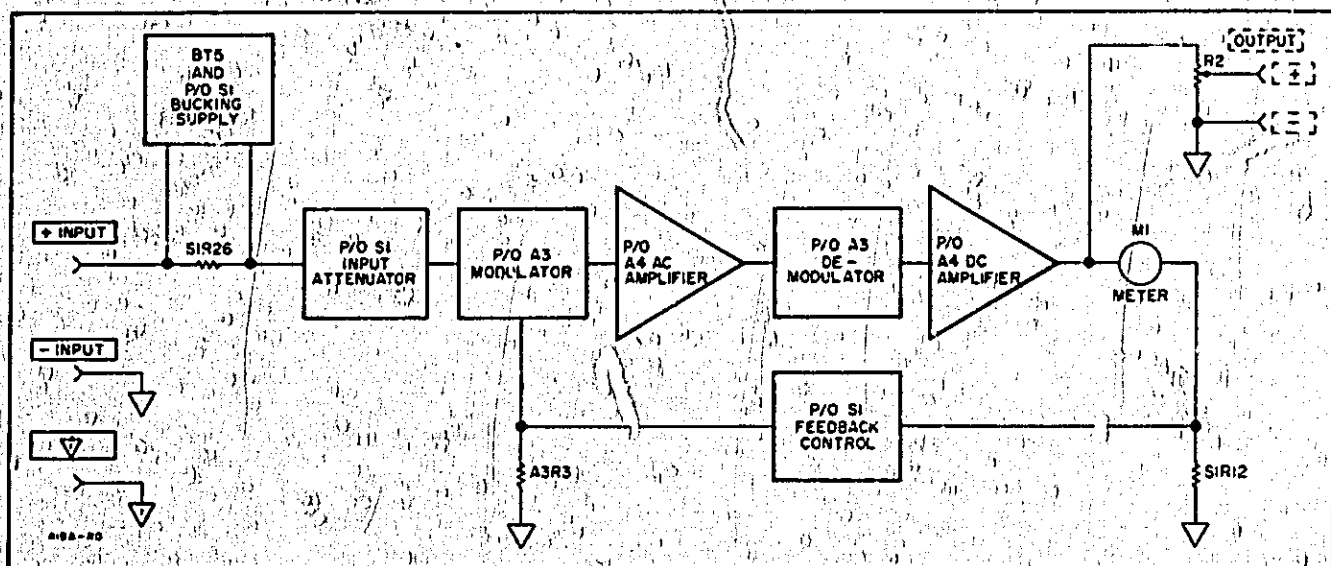


Figure 4-1. Model 419A Block Diagram.

Table 4-1. Model 419A Attenuation and Gain Characteristics

RANGE	ATTENUATION FACTOR	FORWARD GAIN	FEEDBACK	CLOSED LOOP GAIN
3 μ V/ 30 pA	0 dB	+150 dB	-40 dB	+110 dB
10 μ V/ 100 pA	0 dB	+150 dB	-50 dB	+100 dB
30 μ V/ 300 pA	0 dB	+150 dB	-60 dB	+ 90 dB
100 μ V/ 1000 pA	0 dB	+150 dB	-70 dB	+ 80 dB
300 μ V/ 3000 pA	0 dB	+130 dB	-60 dB	+ 70 dB
1 mV/ 10 nA	0 dB	+130 dB	-70 dB	+ 60 dB
3 mV/ 30 nA	0 dB	+120 dB	-70 dB	+ 50 dB
10 mV	- 20 dB	+120 dB	-60 dB	+ 40 dB
30 mV	- 20 dB	+120 dB	-70 dB	+ 30 dB
100 mV	- 40 dB	+120 dB	-60 dB	+ 20 dB
300 mV	- 40 dB	+120 dB	-70 dB	+ 10 dB
1 V	- 60 dB	+120 dB	-60 dB	0 dB
3 V	- 60 dB	+120 dB	-70 dB	- 10 dB
10 V	- 80 dB	+120 dB	-60 dB	- 20 dB
30 V	- 80 dB	+120 dB	-70 dB	- 30 dB
100 V	-100 dB	+120 dB	-60 dB	- 40 dB
300 V	-100 dB	+120 dB	-70 dB	- 50 dB
1000 V	-120 dB	+120 dB	-60 dB	- 60 dB

mode. In the dc voltmeter mode, the input voltage is applied to the Input Attenuator through the + and - INPUT terminals and through S1R26. In the null voltmeter mode, the input is applied in the same manner, but is opposed by the bucking voltage applied to S1R26.

4-14. When the SET NULL Pushbutton is depressed, the BT5 voltage is applied through R4 and R5 and the voltage divider network (S1R1 thru S1R11) to S1R26. The difference between the input voltage and the bucking voltage is indicated on the Meter M1. The bucking voltage is then adjusted through the use of course and fine NULL controls (R4 and R5) until a null is indicated on the Meter. When the READ NULL Pushbutton is depressed, the input voltage is disconnected and the polarity of the bucking voltage is reversed. The value of the bucking voltage (equal to input voltage) is indicated on the Meter M1.

4-15. INPUT ATTENUATOR.

4-16. All voltages and currents to be measured are applied to the input attenuator, which is a resistive divider consisting of S1R20 to S1R25 and R3. The attenuation factor depends upon the position of the RANGE switch. The attenuator is divided into two separate networks to provide the proper impedance levels for filter capacitors A3C2 and A3C3. (Table 4-1 lists the attenuation factors for all ranges.)

4-17. INPUT FILTER.

4-18. L1 and L2, and A3C2 and A3C3 filter superimposed ac noise from the input signal.

4-19. MODULATOR/DEMODULATOR.

4-20. The modulator/demodulator is a photo-conductive chopper. It consists of a neon oscillator with two neon bulbs and four photocells mounted in one assembly. The photocells have an extremely high resistance when not illuminated, and a very low resistance when illuminated.

4-21. Assume that A3V1 is illuminated and A3V2 is not. The resistance of A3V2 will be many times greater than the resistance of A3V1. The voltage across A3V2 (input voltage) will be applied through A3C4 to the base of Q1. The oscillator will then switch off the bulb illuminating A3V1, and switch on a bulb which illuminates A3V2. A3V1 now has the greatest resistance, and A3V2 is a virtual short to the feedback which is coupled to Q1. The modulator provides a square wave output proportional to the difference between the dc input and dc feedback signals. The square wave frequency will depend upon the switching frequency of the neon oscillator.

4-22. The demodulator is operated by the neon oscillator in the same manner. It provides a dc output proportional to the amplitude of the square wave input.

4-23. AC AMPLIFIER.

4-24. Amplification of the square wave output from the modulator is provided by a six stage direct-coupled amplifier. Dc feedback from the base of Q4 to the base of Q1 provides bias stabilization. Ac feedback from the emitter of Q3 to the emitter of Q1 is used to vary the gain of Q1 thru Q3. This is accomplished by varying the amount of feedback to Q1, due to the position of the RANGE Switch. In the 3 μ V to 1 mV range, resistor R7 is shorted out, decreasing the negative feedback applied to Q1.

4-25. Feedback from the emitters of Q5 and Q7 is also controlled to vary the gain of Q4 thru Q7. In the 3 μ V to 100 μ V range resistor R16 is shorted out, decreasing the negative feedback applied to Q4. Capacitors A3C4 and A4C9 couple the ac input and output and block the dc bias voltages.

4-26. DC AMPLIFIER.

4-27. The output of the demodulator is applied to a four stage voltage and power amplifier. Q9 provides temperature compensation for the circuit. When Q8 and Q9 increase conduction due to a rise in tempera-

ture, the emitter to base voltage of Q4 decreases, which decreases the Q8 forward bias. This maintains Q8 conduction at a constant level.

4-28. The final stage of amplification is a complementary symmetry amplifier consisting of Q12, Q13, CR13 and CR14. The diodes bias the transistors at a constant idling state, with no input signal applied. When an input is applied, the transistor responds immediately with an output. The input does not have to reach a certain amplitude to cause conduction in the transistors, since they are already at an idling condition.

4-29. The output of the dc amplifier will be ± 1 V for end scale input on all ranges. An output is also applied to the + and - OUTPUT terminals J5 and J6. Adjustable resistor R2 provides control of the recorder output from 0 to ± 1 volt end scale. Diode network CR5 to CR12 protects the amplifier circuit from an overload.

4-30. METER CIRCUIT.

4-31. The meter is a current driven device which utilizes a taut band movement. A 1 volt output of the dc amplifier provides end scale needle deflection on all ranges. During FAST CHARGE and off (positions 1 and 2 of Function Switch S2), the meter is protected from transient voltages by a short across it. During the BATTERY TEST mode (position 3 of Function Switch S2), resistor S2R1 provides the amplifier load, because the meter is disconnected from the amplifier circuit.

4-32. Resistors R41 to R44 provide for calibration of the meter. The resistors are connected in parallel with the meter as a function of the RANGE switch setting.

4-33. FEEDBACK CONTROL.

4-34. Control of feedback is accomplished through a deck of the RANGE switch. The amount of feedback depends upon the position of the RANGE switch. The closed loop gain of the amplifier may be determined by subtracting the feedback from the forward gain. The feedback provided for each range is listed in Table 4-1.

4-35. POWER SUPPLY AND NEON DRIVER

(Figure 6-4).

4-36. The power source for the 419A is four rechargeable batteries, which supply a +13 V and a -13 V output. The 419A may also be operated from line voltage, which will trickle-charge the batteries during operation.

4-37. The line input may be either 115 V or 230 V from 50 to 1000 Hz. The input is rectified by CR1 thru CR4 and applied to series regulator Q1.

4-38. Zener diode CR5 supplies a constant reference to the base of Q1. The emitter of Q1 is referenced to the voltage across R2 or R3. If the output current increases, Q1 will conduct less, due to less emitter to base bias. This will decrease the output current. If either output decreases, Q1 will conduct harder, increasing the output current.

4-39. The neon driver consists of a series regulator circuit, a blocking oscillator, and a neon circuit. Transistor Q5 and zener diode CR9 provide a constant reference to series regulator Q4. The frequency of the blocking oscillator is controlled by varying the voltage across C3. This is accomplished through adjustable resistor R9, which controls the bias on the base of Q4.

4-40. Due to inherent characteristics, either Q2 or Q3 will conduct harder when power is applied. Assume that Q2 conducts more than Q3. As Q2 conducts, a negative going signal is coupled through T2 to the base of Q3. This causes Q3 to cut off completely. At the same time, a positive going signal is coupled to the base of Q2, causing it to conduct more. While Q2 is conducting, a negative output will be coupled to the neon circuit.

4-41. When T2 becomes saturated, the positive signal is removed from the base of Q2, and it cuts off. At the same time, the negative signal is removed from the base of Q3, allowing it to start conducting. As Q3 conducts, a negative going signal is applied to the base of Q2, holding it cut off, and a positive going signal is applied to the base of Q3. Q3 continues to conduct, causing a positive output to be coupled to the neon circuit. This will continue until T2 becomes saturated, and starts the cycle over again.

4-42. The output of the oscillator is coupled through T2 to the neon circuit. When an input is applied to the circuit, due to inherent resistance characteristics, either DS1 or DS2 will light, depending upon which has the least resistance.

4-43. Assume that DS1 lights when the input is applied to T2. Capacitor C1 charges until the oscillator switches the input, and DS1 goes off. When the oscillator switches again, the charge on C1 insures that DS2 fires, and DS1 stays off. This cycle continues with DS1 and the DS2 firing, as long as there is an output from the oscillator. CR1 and CR2 prevent the capacitor from discharging through R1 and R2.

Table 5-1. Test Equipment Required

INSTRUMENT TYPE	REQUIRED CHARACTERISTICS	RECOMMENDED MODEL
Voltmeter Calibrator	DC Voltage Range: 0.3 mV to 300 V Accuracy: $\pm 0.2\%$	-hp- Model 738BR Voltmeter Calibrator
Strip Chart Recorder	Voltage Range: 1 Vdc Speed: 50 mm/sec Frequency Response: 5 Hz	-hp- Model 7701A Strip Chart Recorder
Oscillator	Output Freq: 60 Hz Output Voltage: 0.5 V rms	-hp- Model 208A Oscillator
Oscilloscope	Horizontal Sensitivity: 2 ms/cm Vertical Sensitivity: 50 mV/cm Frequency Response: 100 kHz	-hp- Model 130C Oscilloscope
Electronic Counter	Counting Range: 300 to 400 pps Accuracy: ± 1 count	-hp- Model 5211A Electronic Counter
DC Voltmeter	Voltage Range: 30 Vdc Accuracy: $\pm 2\%$	-hp- Model 427A Voltmeter
Capacitor	0.1 μ F $\pm 20\%$ 10 Vac	-hp- Part No. 0170-0085
Resistors	100 $\Omega \pm 1\%$ 1/8 W ww 600 $\Omega \pm 1\%$ 1/8 W met flm 10 k $\Omega \pm 0.25\%$ 1/8 W met flm 100 k $\Omega \pm 0.25\%$ 1/8 W met flm 900 k $\Omega \pm 0.5\%$ 1/2 W met flm 1 M $\Omega \pm 0.1\%$ 1/8 W ww 9 M $\Omega \pm 0.5\%$ 1/2 W met flm	-hp- Part No. 0811-0398 -hp- Part No. 0757-1100 -hp- Part No. 0698-3193 -hp- Part No. 0698-4057 -hp- Part No. 0698-5488 -hp- Part No. 0811-0473 -hp- Part No. 0698-5443

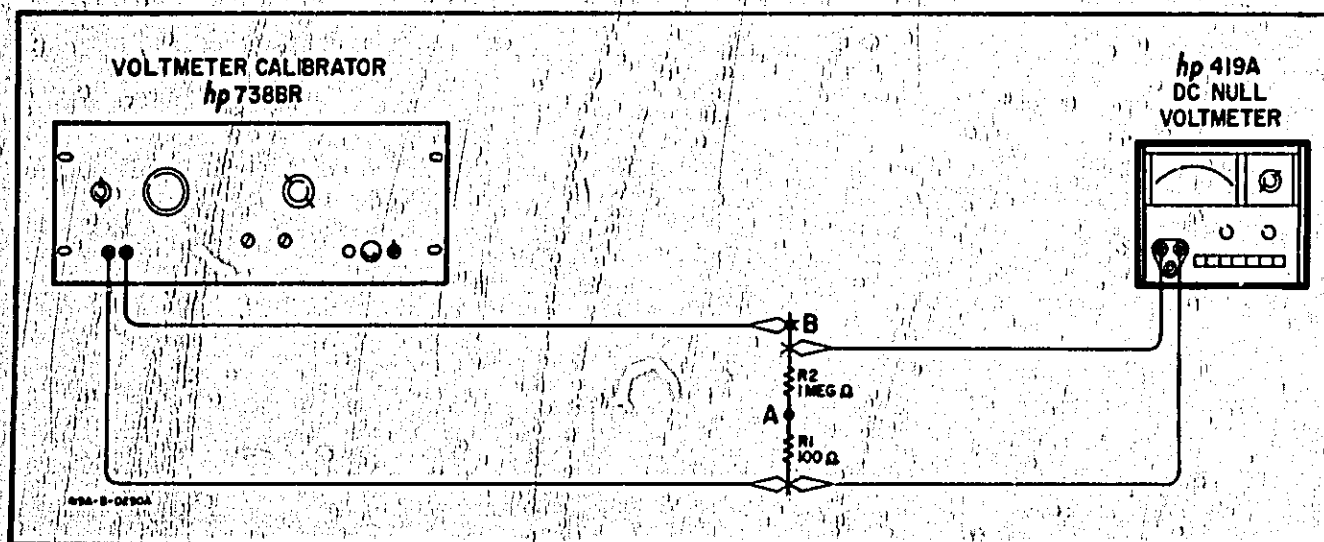


Figure 5-1. Voltmeter Accuracy Performance Test Setup

SECTION V MAINTENANCE

5-1. INTRODUCTION.

5-2. This section contains the information necessary for maintenance of the Model 419A DC Null Voltmeter. Included are performance tests, repair procedures, adjustment and calibration procedures, and troubleshooting procedures.

5-3. TEST EQUIPMENT.

5-4. The test equipment required for maintenance of the Model 419A is listed in Table 5-1. Equipment having similar characteristics may be substituted for the equipment listed.

5-5. PERFORMANCE TESTS.

5-6. The performance tests presented in this section are front-panel procedures designed to compare the Model 419A with its published specifications (Table 1-1). These tests may be incorporated in periodic maintenance, post repair, and incoming quality control inspection. These tests should be conducted before any attempt is made at instrument calibration.

5-7. VOLTMETER ACCURACY TEST.

5-8. The voltmeter accuracy performance test setup is illustrated in Figure 5-1. A voltmeter calibrator (-hp- Model 738BR), a 100 Ω resistor (-hp- Part No. 0811-0398), and a 1 M Ω resistor (-hp- Part No. 0811-0473) are required for this test.

- Connect test setup illustrated in Figure 5-1.
- Make control settings indicated in step 1 of Table 5-2; if Model 419A reading is not within tolerances listed, perform Full Scale Calibration procedure (Paragraph 5-37).
- Repeat step b for remaining steps in Table 5-2.

5-9. BUCKING VOLTAGE TEST.

5-10. No external test equipment is required for the bucking voltage performance test.

- Depress 419A READ NULL pushbutton; set RANGE to 300 mV.
- Rotate NULL control fully clockwise and then fully counterclockwise; if 419A meter does not peg in negative and positive direction, respectively, replace BT5.

Table 5-2. Accuracy Performance Test, Supplemental Data

STEP	VOLTMETER CALIBRATOR DC OUTPUT	POINT OF MEASUREMENT FIGURE 5-1	419A RANGE	419A READING
1	30 mV	A	3 μ V	2.84 to 3.16
2	100 mV	A	10 μ V	9.7 to 10.3
3	300 mV	A	30 μ V	29.3 to 30.7
4	1.0 V	A	100 μ V	97.9 to 102.1
5	0.3 mV	B	300 μ V	293.9 to 306.1
6	1 mV	B	1 mV	0.98 to 1.02
7	3 mV	B	3 mV	2.94 to 3.06
8	10 mV	B	10 mV	9.8 to 10.2
9	30 mV	B	30 mV	29.4 to 30.6
10	100 mV	B	100 mV	98 to 102
11	300 mV	B	300 mV	294 to 306
12	1 V	B	1 V	0.98 to 1.02
13	3 V	B	3 V	2.94 to 3.06
14	10 V	B	10 V	9.8 to 10.2
15	30 V	B	30 V	29.4 to 30.6
16	100 V	B	100 V	98 to 102
17	300 V	B	300 V	294 to 306
18	300 V	B	1000 V	280 to 320

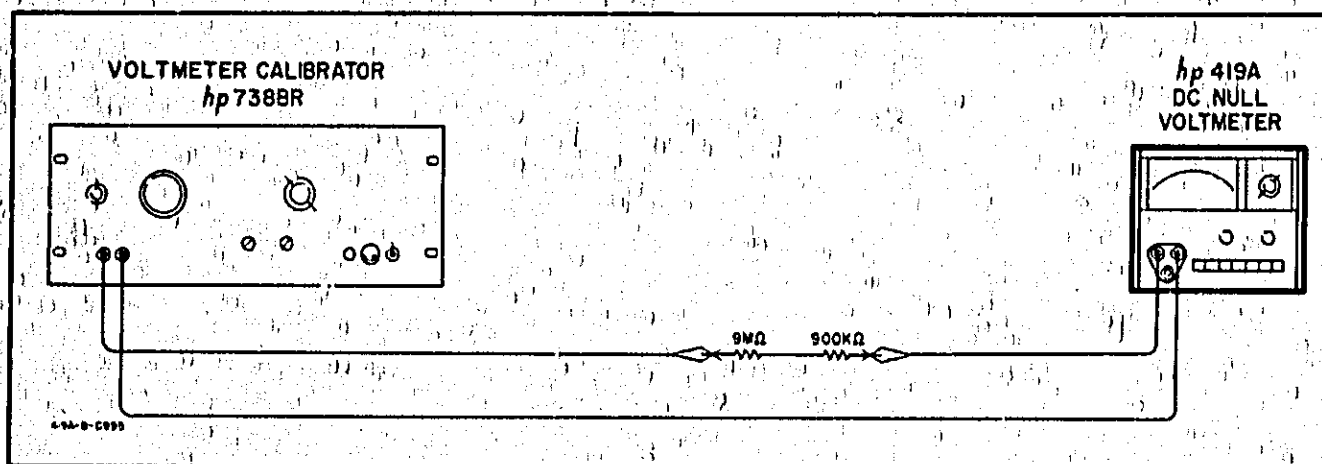


Figure 5-2. Ammeter Accuracy Test Setup

5-11. AMMETER ACCURACY TEST.

5-12. The ammeter accuracy performance test is illustrated in Figure 5-2. A voltmeter calibrator (-hp- Model 738BR), a 9 MΩ resistor (-hp- Part No. 0698-5443) and a 900 kΩ resistor (-hp- Part No. 0698-5488) are required for this test.

- Connect test setup illustrated in Figure 5-2.
- Set Model 419A and voltmeter calibrator controls as indicated in step 1 of Table 5-3. If Model 419A reading is not within the listed tolerances, troubleshoot the input attenuator (Paragraph 5-49).

Table 5-3. Ammeter Accuracy Test

STEP	VOLTMETER CALIBRATOR DC OUTPUT	419A RANGE	419A READING
1	.3 mV	30 pA	28.1 to 31.9
2	.001 V	100 pA	96 to 104
3	.003 V	300 pA	290 to 310
4	.01 V	1000 pA	970 to 1030
5	.03 V	3000 pA	2910 to 3090
6	.1 V	10 nA	9.7 to 10.3
7	.3 V	30 nA	29.1 to 30.9

5-13. RESPONSE TIME TEST.

5-14. A strip chart recorder (-hp- Model 7701A), a voltmeter calibrator (-hp- Model 738BR), a 100 Ω resistor (-hp- Part No. 0811-0398), and a 1 MΩ resistor (-hp- Part No. 0811-0473) are required for this test.

- Connect strip chart recorder to 419A + and - OUTPUT terminals.
- Construct test setup illustrated in Figure 5-1; turn voltmeter calibrator dc output off and set for 30 mV output; connect 419A + INPUT terminal to Point A.
- Set 419A RANGE switch to 3 μV position; depress VM/AM pushbutton.

- Start strip chart recorder and turn voltmeter calibrator dc output on; if strip chart recorder does not show OUTPUT at 95% between 2 and 3 seconds, perform Chopper Adjustment (Paragraph 5-33).
- Turn voltmeter calibrator dc output off and set for 100 mV output; set 419A RANGE switch to 10 μV position.
- Start strip chart recorder and turn voltmeter calibrator dc output on; if strip chart recorder does not show OUTPUT at 95% within 1 second, perform Chopper Adjustment (Paragraph 5-33).

5-15. SUPERIMPOSED AC REJECTION TEST.

5-16. The superimposed ac rejection test setup is illustrated in Figure 5-3. An oscillator (-hp- Model 208A), a 600 Ω resistor (-hp- Part No. 0727-0081), a 10 kΩ resistor (-hp- Part No. 0684-1031), and a 0.1 μF capacitor (-hp- Part No. 0170-0085) are required for this test.

- Connect test setup illustrated in Figure 5-3; do not connect oscillator.
- Depress 419A SET NULL pushbutton; set NULL control for +9 μV on 10 μV range.
- Connect oscillator and set its output frequency for 60 Hz; output voltage for 0.5 volts rms. Model 419A reading should not vary more than ±0.2 μV after the initial transient.

5-17. NOISE TEST.

5-18. No external test equipment is required for the noise test.

- Short 419A + and - INPUT terminals.
- Zero 419A in VM function on 3 μV RANGE.
- If noise displayed on 419A meter exceeds 0.3 μV p-p, perform Chopper Adjustment (Paragraph 5-33).

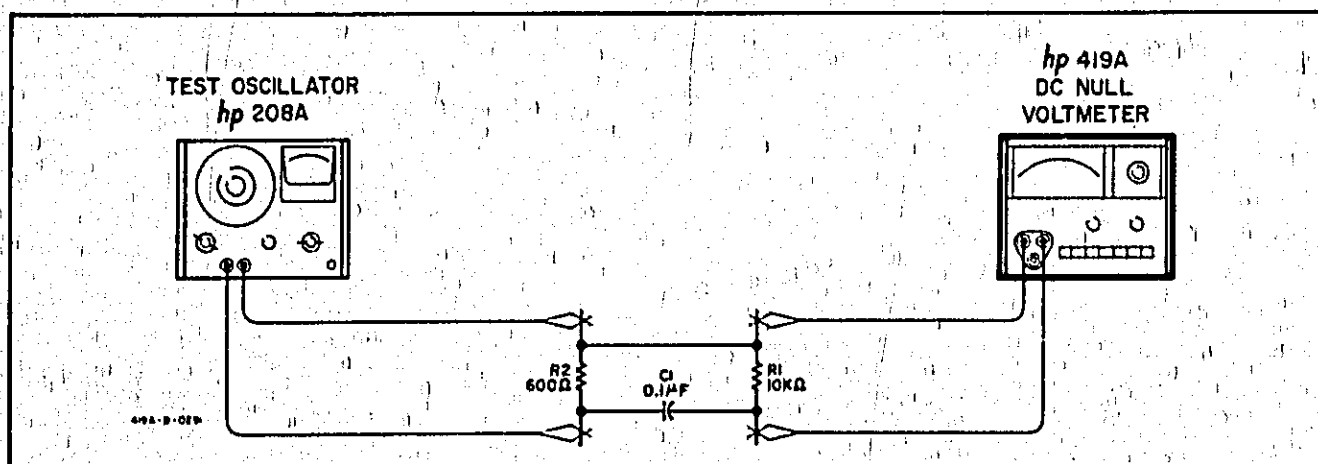


Figure 5-3. Superimposed AC Rejection Performance Test Setup

5-19. INPUT RESISTANCE TEST.

5-20. A Voltmeter Calibrator (-hp- Model 738BR), a 10 kΩ resistor (-hp- Part No. 0698-3193), a 100 kΩ resistor (-hp- Part No. 0698-4057), a 1 MΩ resistor (-hp- Part No. 0757-1054) and a 10 MΩ resistor (-hp- Part No. 0698-4128) are required for this test.

- Connect a 10 kΩ resistor to Model 419A + INPUT terminal.
- Connect voltmeter calibrator dc output terminals to 10 kΩ resistor and -INPUT terminal on the Model 419A.
- Set Model 419A RANGE to 3 mV; set voltmeter calibrator output to 3 mV (.003 V).
- The Model 419A should indicate 2.73 mV which verifies an input resistance of 100 kΩ on the 3 mV range, as given by the following formula:

$$R_{in} = \frac{R_s \times E_m}{E_o - E_m}$$

where R_{in} is the 419A input resistance, R_s is the series resistance, E_m is the voltage indicated on the Model 419A meter and E_o is the voltmeter calibrator output voltage.

NOTE

The input resistance may vary slightly and a tolerance of ±3% should be allowed.

- Replace the 10 kΩ resistor with a 100 kΩ resistor.
- Set Model 419A RANGE to 10 mV; set voltmeter calibrator output to 10 mV (.01 V).
- Model 419A should read 9.09 mV which verifies an input resistance of 1 MΩ on the 10 mV range.
- Replace the 100 kΩ resistor with a 1 MΩ resistor.

- Set Model 419A RANGE to 100 mV; set voltmeter calibrator output to 100 mV (.1 V).
- Model 419A should read 90.9 mV which verifies an input resistance of 10 MΩ on the 100 mV range.
- Replace the 1 MΩ resistor with a 10 MΩ resistor.
- Set Model 419A RANGE to 1 V; set voltmeter calibrator output to 1 V.
- Model 419A should read 0.909 V which verifies an input resistance of 100 MΩ on the 1 V range.

5-21. REPAIR PROCEDURES.**5-22. COVER REMOVAL.**

5-23. When it is necessary to repair or adjust the Model 419A, one or more covers will have to be removed. Refer to the following steps for cover removal procedure.

- TOP COVER.** Remove top cover screws; slide cover to rear and lift to remove.
- SIDE COVERS.** Remove four screws from side cover; lift to remove.
- BOTTOM COVER.** Remove bottom cover screws at rear of cover. Slide cover to rear and remove.

5-24. SERVICING PRINTED CIRCUIT BOARDS.

5-25. The Model 419A has two etched circuit boards. Use caution when removing to avoid damaging mounted components. The assembly and -hp- part number are etched on the interior of the circuit board to identify them. Refer to Section VII for parts replacement and -hp- part number information.

5-26. The etched circuit boards are a plated-through type. The electrical connection between sides of the board is made by a layer of metal plated through the component holes. When working on these boards, observe the following general rules.

- a. To avoid contamination, wear clean lint-free cotton or rubber gloves.
- b. Use a low-heat (25 to 50 watts) small-tip soldering iron and a small diameter rosin core solder.
- c. Circuit components can be removed by placing the soldering iron on the component lead on either side of the board and pulling up on lead. If a component is obviously damaged, clip leads as close to component as possible and then remove. Excess heat can cause the circuit and board to separate or cause damage to the component.
- d. Component lead hole should be cleaned before inserting new lead.
- e. To replace components, shape new leads and insert them in holes. Reheat with iron and add solder as required to insure a good electrical connection.
- f. Clean excess flux from the connection and adjoining area.
- g. To avoid surface contamination of the printed circuit, clean with weak solution of warm water and mild detergent after repair. Rinse thoroughly with clean water. When completely dry, spray lightly with Krylon (#1302 or equivalent).

5-27. INSTALLATION OF REPLACEMENT NEON SUBASSEMBLY (-hp- Part No. 1990-0214).

5-28. Physical alignment and neon selection are critical. When trouble is isolated to the neon subassembly, the complete subassembly should be changed rather than replacing the defective neons.

- a. Remove the top and side cover on the meter side of the instrument.
- b. Disconnect the neon subassembly leads from pins on A2 board. (Note location for reconnecting the new leads). Maneuver subassembly cable through the grommet on the inner shield.
- c. Remove the two photochopper assembly mounting screws and remove neon subassembly.
- d. Install new neon subassembly. Note that the rubber grommet on the subassembly is offset toward the top of the instrument.
- e. Route the neon subassembly cable through the inner shield and reconnect the cable to the A2 board.
- f. Replace the side cover and recalibrate the Model 419A as outlined in Paragraph 5-29.

5-29. ADJUSTMENT AND CALIBRATION.

5-30. The following is a complete adjustment and calibration procedure for the Model 419A. These proce-

5-4

dures should be conducted only if it has been previously established by Performance Tests (Paragraphs 5-5 to 5-20) that the Model 419A is out of adjustment.

5-31. MECHANICAL ZERO ADJUSTMENT.

5-32. The mechanical zero adjustment is located on the instrument front panel. If the meter pointer does not indicate zero when the instrument power has been off for at least one minute, mechanically zero the meter following the procedure outlined below.

- a. Turn instrument power off; disconnect input signal; remove output cable; and allow one minute for meter pointer to stabilize.
- b. Rotate zero adjustment CW until pointer is to left of zero, moving upscale. Continue until pointer is at zero. If pointer overshoots zero, repeat operation.
- c. When the pointer is exactly at zero, rotate zero adjustment slightly CCW to free it. If the meter pointer moves to the left during this step, repeat steps b and c.

5-33. CHOPPER ADJUSTMENT.

5-34. An Oscilloscope (-hp- Model 130C) and an Electronic Counter (-hp- Model 5211A) are required for the chopper adjustment.

NOTE

If Serial Prefix of Instrument is 514-, refer to Appendix C for chopper adjustment information.

- a. Remove 419A top cover and shield.
- b. Connect Oscilloscope and Electronic Counter to A2TP2.
- c. Set Oscilloscope for 2 ms/cm horizontal sensitivity and 50 mV/cm vertical sensitivity.
- d. Adjust A2R9 (FREQ.) for Electronic Counter indication of 320 to 340. (This corresponds to chopper rate of 160-170 pps as Electronic Counter also counts smaller pulses.) Adjust A2R5 (NEON CURRENT) for waveform amplitude of 140 to 160 mV. Figure 5-4 shows the chopper waveform.

NOTE

If the Neon Waveform is unstable, an intermittent neon bulb is indicated. See Paragraph 5-27 for replacement information.

- e. If correct waveform is obtained and response time is still not within limits of Paragraph 5-13, A4R26 will have to be reselected. If response on 3 μ V range is longer than 3 seconds, the value of A4R26 should be decreased. If response on 3 μ V range is less than 2 seconds,

A4R26 should be increased. A4R26 should be between 6.8 k Ω and 15 k Ω with a typical value of 10 k Ω . A4R26 is an Allen-Bradley, composition, 1/4 watt $\pm 10\%$, resistor.

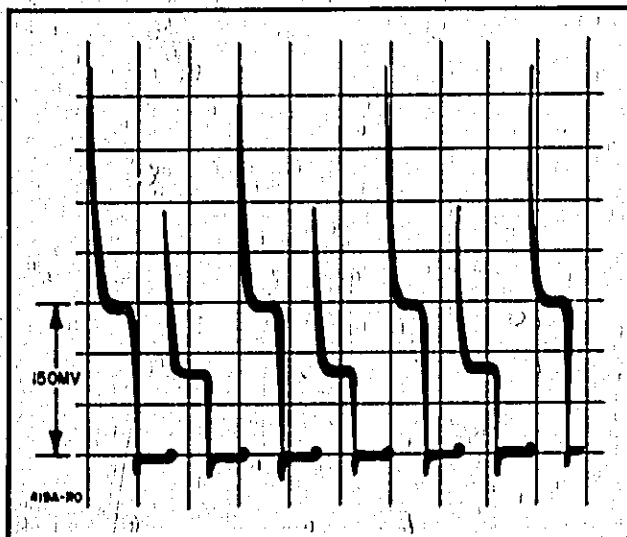


Figure 5-4. Neon Drive Waveform (A2TP2)

5-35. ELECTRICAL ZERO ADJUSTMENT.

5-36. The electrical zero adjustment should be performed when the meter pointer does not indicate zero on the 1 volt range when instrument power has been on for at least one minute. No external equipment is required for this adjustment.

- Set 419A controls as follows:
 RANGE 1 V
 ZERO pushbutton Depressed
- Remove top cover; adjust A4R14 (1 V ZERO) for zero deflection on 419A meter.

5-37. FULL SCALE CALIBRATION.

5-38. The full scale calibration consists of performing the 3 μ V, 10 μ V, 1 mV, and 1 V adjustments. A Voltmeter Calibrator (-hp- Model 738BR), a 100 Ω Resistor (-hp- Part No. 0811-0398) and a 1 M Ω Resistor (-hp- Part No. 0811-0473) are required for this test.

- Connect test setup illustrated in Figure 5-1.
- Remove 419A top cover; depress VM/AMP pushbutton.
- Set Voltmeter Calibrator for 30 mV output; connect 419A to Point A; adjust A4R41 (3 μ V) for full scale deflection on 3 μ V range.
- Set Voltmeter Calibrator for 100 mV output; connect 419A to Point A; adjust A4R42 (10 μ V) for full scale deflection on 10 μ V range.

NOTE

Remove resistive attenuator before performing steps e and f.

- Set Voltmeter Calibrator for 1 mV output; connect 419A to Point B; adjust A4R43 (1 mV) for full scale deflection on 1 mV range.

- Set Voltmeter Calibrator for 1 V output; connect 419A to Point B; adjust A4R44 (1 V) for full scale deflection on 1 V range.

5-39. BATTERY TEST CALIBRATION.

5-40. A DC Voltmeter (-hp- Model 427A) is required for the battery test calibration.

NOTE

Batteries must be fully charged before performing this procedure. (See Paragraph 3-13).

- Remove 419A top cover and shield.
- Connect DC Voltmeter across BT1 thru BT4. If DC Voltmeter indicates less than 26 V, recharge battery power supply in accordance with Paragraph 3-13. If DC Voltmeter indicates at least 26 V, proceed to step c.
- Depress Model 419A BAT TEST Pushbutton; adjust A4R45 (BAT TEST CAL) for Model 419A Meter reading (0-3 scale) equal to DC Voltmeter reading in step b.

5-41. TROUBLESHOOTING.

5-42. This section contains information designed to assist in the isolation of malfunctions. These checks should be undertaken only after it has been established that the trouble cannot be eliminated by the Adjustment and Calibration Procedures, Paragraph 5-29.

NOTE

The 419A operates erratically when the charge on the batteries is marginal. Since the exact capacity of the Nickel Cadmium batteries cannot be determined by voltage measurements, it is advisable to charge the batteries before troubleshooting.

5-43. NO RESPONSE TO INPUT.

5-44. If the meter does not respond to input (usually accompanied by a constant offset near full scale after meter has been on for one or two minutes), proceed as follows:

- If one neon is bad, all the pulses at A2TP2 will be the same amplitude. If the blocking oscillator is bad, there will be no pulses at A2TP2.
- Check for approximately 8 volts dc at the emitter of Q4 to isolate between the blocking oscillator and its voltage regulator.
- If the neon waveform at A2TP2 is correct, the trouble is in the amplifier.

5-45. POSITIVE OR NEGATIVE FOLDOVER.

5-46. Foldover is when the meter needle pegs and then returns on scale when the input is overloaded.

- a. If positive foldover occurs, check A4Q12 for low gain.
- b. If negative foldover occurs, check for low gain in A4Q13 and for a leaky A4C8 or C12.

5-47. EXCESSIVE NOISE.

5-48. If the 419A meter noise is in excess of 0.3 μ V peak-to-peak, proceed as follows:

- a. Check the batteries for low charge.
- b. Check the chopper frequency in accordance with Paragraph 5-33. Misadjustment of chopper frequency or drive or a misfiring neon bulb will cause noise.
- c. Clean the pin connectors on the A4 board with a fiberglass brush or typewriter eraser and ensure they are making good connections.
- d. Check the transistors in the AC Amplifier for noise (A4Q1 or Q2 most probable).

5-49. TROUBLESHOOTING THE INPUT ATTENUATOR.

5-50. If trouble is suspected in the input attenuator or feedback divider, proceed as follows:

- a. Rotate the range switch through all positions several times to clean the switch contacts.
- b. Check the 90 M Ω resistor (S1R3) for dust accumulation; clean if necessary.
- c. If trouble persists, carefully check the input attenuator and feedback divider resistors.

NOTE

Parallel paths exist for several of the resistors. Before replacing a suspected resistor, unsolder one lead and check the resistor again.

5-51. REPLACEMENT OF FACTORY SELECTED COMPONENTS.

5-52. Certain components within the Model 419A are individually selected in order to compensate for slightly varying circuit parameters. These components are identified by an asterisk (*) on the schematic diagrams and a typical value is shown. The following paragraphs describe the function of the factory selected components and give replacement instructions.

5-53. A4R26*.

5-54. A4R26* is factory selected to provide proper amplifier response time. Response time can be evaluated by performing the Response Time Test (Paragraph 5-13). A4R26* should be replaced only if response time cannot be corrected by performing the chopper adjustment procedure (Paragraphs 5-33). Paragraph 5-34 step e gives specific replacement instructions.

5-55. A4R47*.

5-56. A4R47* is factory selected to provide approximately 1.1 Vdc at the rear panel OUTPUT terminals into a 1 k Ω load with the LEVEL control turned fully cw and a full scale input applied to the INPUT terminals. Once A4R47* has been selected at the factory, there should be no reason to change its value unless one of the output transistors A4Q12 and A4Q13 or one of the diodes A4CR13 and A4CR14 is replaced. Factory values of A4R47* range from 16 k Ω to 20 k Ω with a typical value of 18 k Ω . A4R47* is an Allen-Bradley composition $\pm 5\%$ 1/2 watt resistor. If the value of A4R47* must be changed, proceed as follows:

- a. Apply a 1 Vdc input to the Model 419A, INPUT terminals (1 V range).
- b. Connect a 1 k Ω load across the rear panel OUTPUT terminals.
- c. Turn LEVEL control fully cw.
- d. Measure the voltage across the load. If the voltage is less than 1.0 Vdc, increase the value of A4R47*; if the voltage is greater than 1.15 Vdc, reduce the value of A4R47*.
- e. After replacing A4R47*, perform the Full Scale Calibration procedure (Paragraph 5-37).

PERFORMANCE CHECK TEST CARD

HEWLETT-PACKARD MODEL 419A
DC NULL VOLTMETER
SERIAL NO.

TEST PERFORMED BY _____

DATE _____

Paragraph 5-7. Voltmeter Accuracy

419A Range

419A Reading

TEST LIMITS

3 μ V
10 μ V
30 μ V
100 μ V
300 μ V
1 mV
3 mV
10 mV
30 mV
100 mV
300 mV
1 V
3 V
10 V
30 V
100 V
300 V
1000 V

2.84 to 3.16
9.7 to 10.3
29.3 to 30.7
97.9 to 102.1
293.9 to 306.1
.98 to 1.02
2.94 to 3.06
9.8 to 10.2
29.4 to 30.6
98 to 102
294 to 306
.98 to 1.02
2.94 to 3.06
9.8 to 10.2
29.4 to 30.6
98 to 102
294 to 306
280 to 320

5-11. Ammeter Accuracy

30 pA
100 pA
300 pA
1000 pA
3000 pA
10 nA
30 nA

28.1 to 31.9
96 to 104
290 to 310
970 to 1030
2910 to 3090
9.7 to 10.3
29.1 to 30.9

5-13. Response Time

3 μ V

--

95%/1 sec.

5-15. Superimposed AC Rejection

10 μ V

--

< 0.2 μ V Change

5-17. Noise

3 μ V

--

< 0.3 μ V

5-19. Input Resistance

3 mV
10 mV
100 mV
1 V

100 K Ω $\pm$ 3%
1 M Ω $\pm$ 3%
10 M Ω $\pm$ 3%
100 M Ω $\pm$ 3%

SECTION VI CIRCUIT DIAGRAMS

6-1. INTRODUCTION.

6-2. This section contains the circuit diagrams necessary for the operation and maintenance of the Model 419A DC Null Voltmeter. Included are schematic and component location diagrams.


6-3. SCHEMATIC DIAGRAMS.

6-4. The electrical configuration of the 419A is shown on the schematic diagrams. Individual schematics

are provided for the metering circuit and the power supply circuit.

6-5. COMPONENT LOCATION DIAGRAMS.

6-6. The physical configuration of the 419A is shown on the component location diagrams. Each component is identified by reference designation.

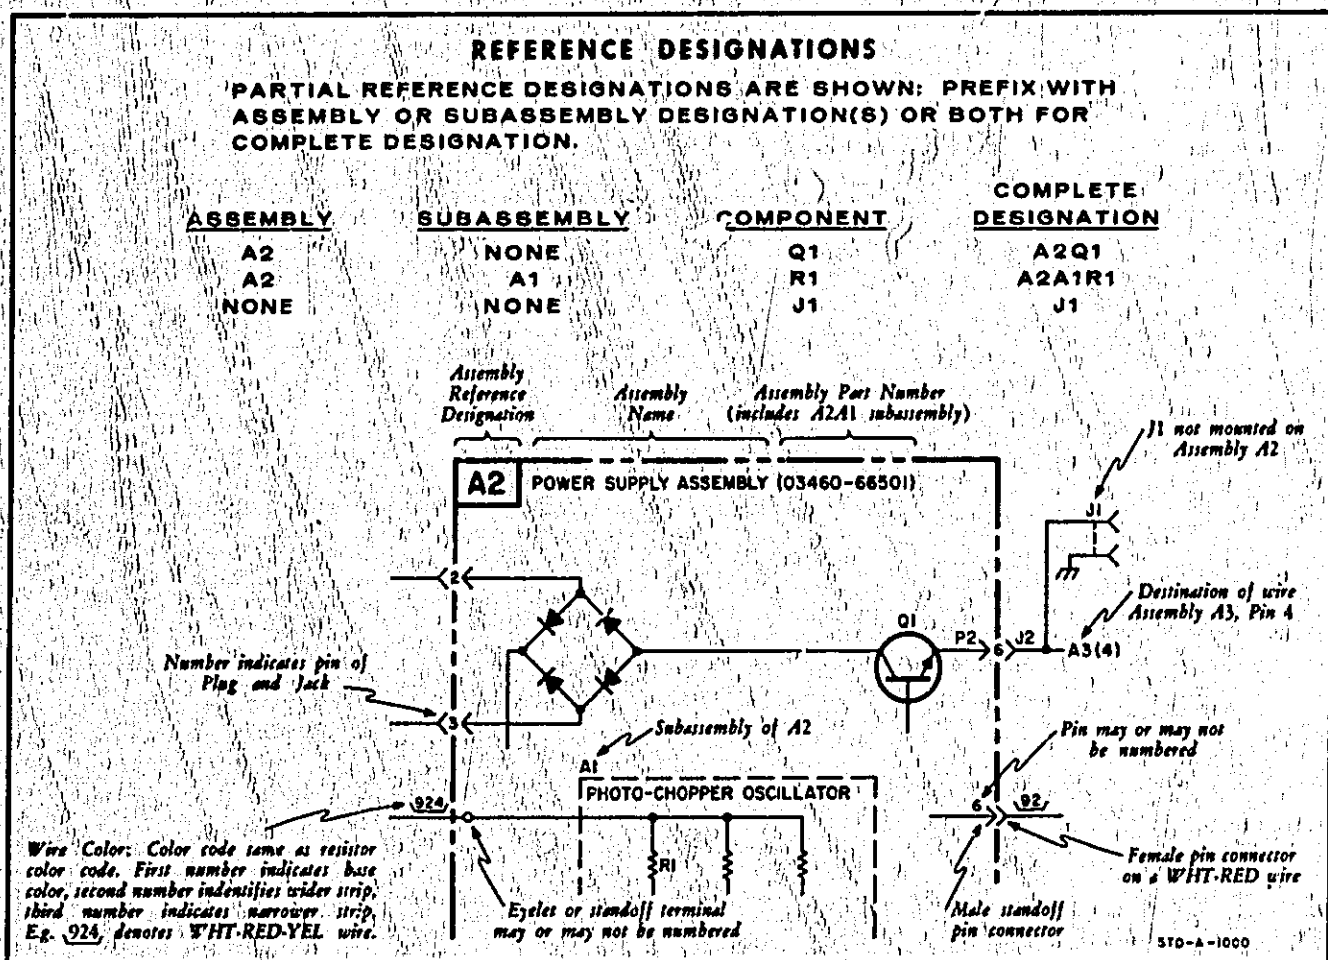

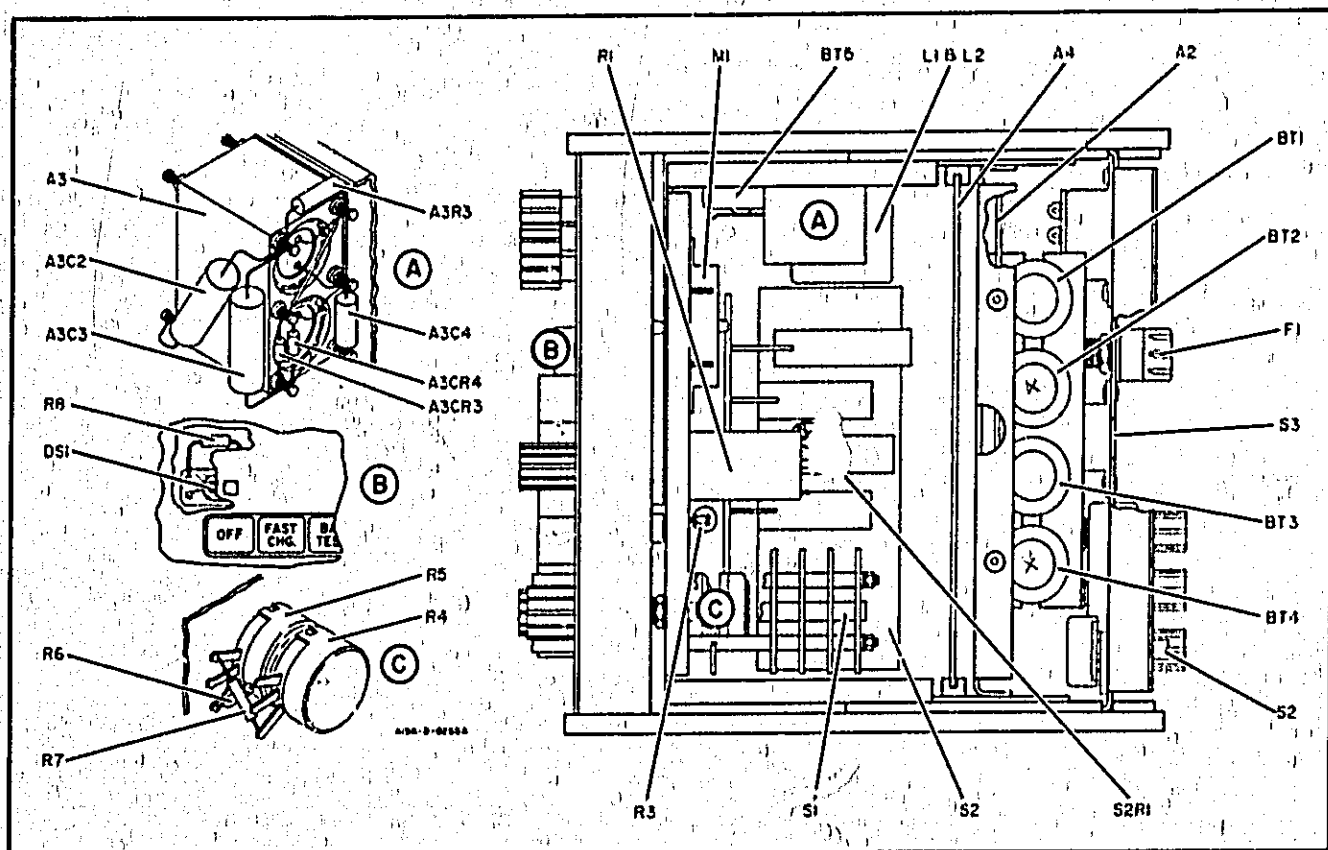


Figure 6-1. Model 419A, Component Location Diagram




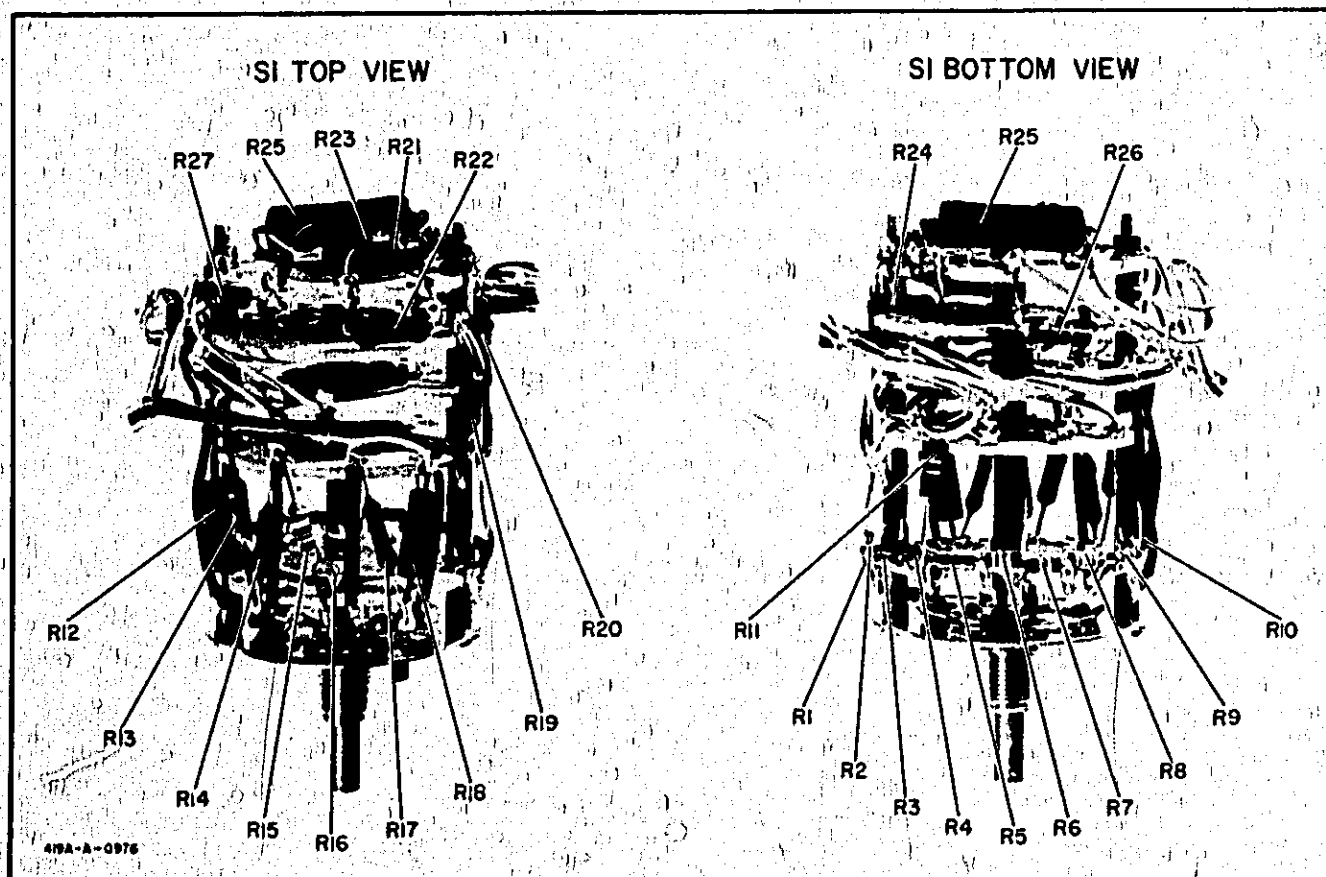


Figure 6-2. Range Switch S1, Component Location Diagram

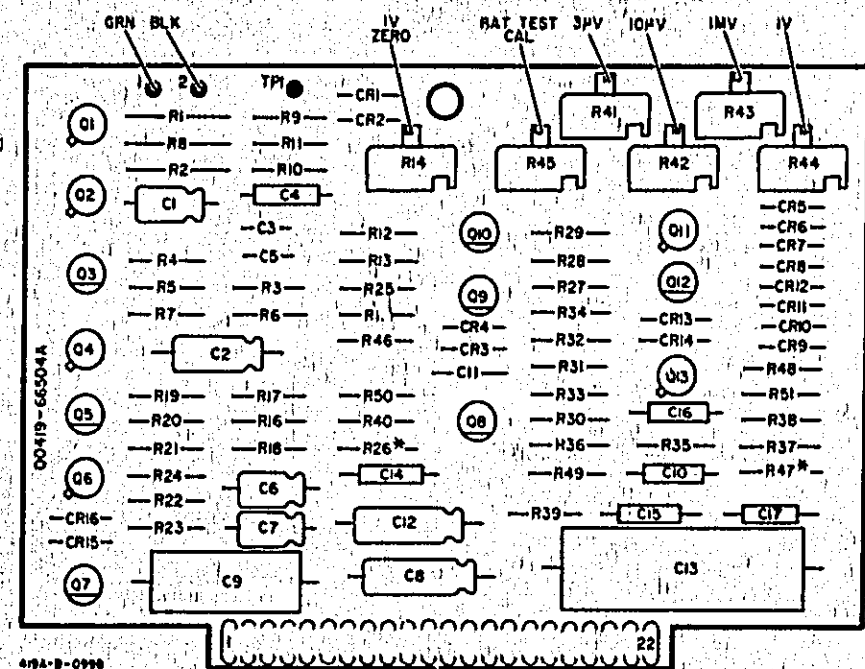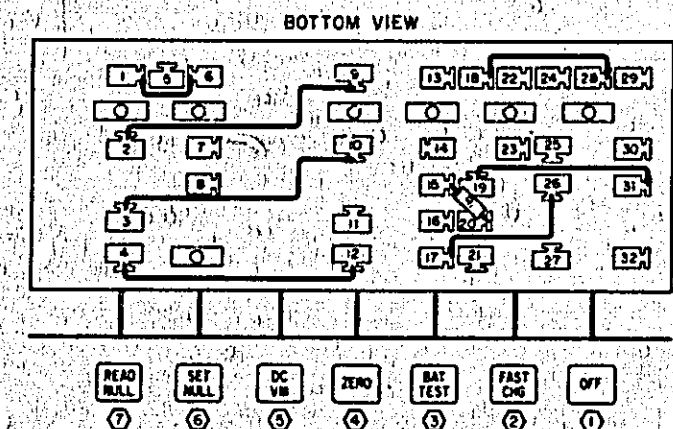

A4
(hp Part No. 00419 66504)

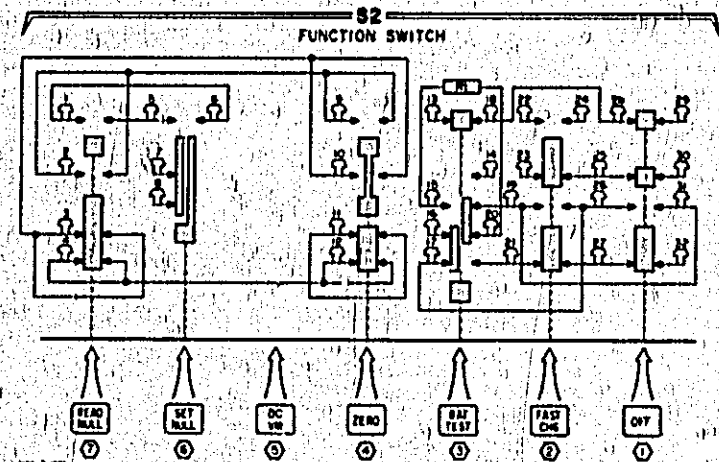

- NOTES
- PARTIAL REFERENCE DESIGNATIONS ARE SHOWN. PREFIX WITH ASSEMBLY OR SUBASSEMBLY DESIGNATION(S) OR BOTH FOR COMPLETE DESIGNATION.
 - COMPONENT VALUES ARE SHOWN AS FOLLOWS UNLESS OTHERWISE NOTED.
RESISTANCE IN OHMS
CAPACITANCE IN MICROFARADS
 - ▽ DENOTES CHASSIS COMMON (MAY BE CONNECTED TO GROUND THROUGH LOWER LAYER)
▽ DENOTES SIGNAL COMMON
▽ DENOTES POWER SUPPLY COMMON
 - DENOTES ASSEMBLY.
— DENOTES MAIN SIGNAL PATH.
— DENOTES DC FEEDBACK PATH.
— DENOTES AC FEEDBACK PATH.
 - DENOTES FRONT PANEL MARKING.
□ DENOTES REAR PANEL MARKING.
 - ⊙ DENOTES SCREWDRIVER ADJUST.

- WIRE COLOR: COLOR CODE SAME AS RESISTOR COLOR CODE. FIRST NUMBER IDENTIFIES BASE COLOR. SECOND NUMBER IDENTIFIES WIDER STRIP. THIRD NUMBER IDENTIFIES NARROWER STRIP (e.g., 221 - WHITE, RED, YELLOW.)
- AVERAGE VALUE SHOWN. OPTIMUM VALUE SELECTED AT FACTORY. SEE PARAGRAPH 5-51 FOR REPLACEMENT INSTRUCTIONS.
- DENOTES TWISTED PAIR.
- VOLTAGES INDICATED IN RED ARE MEASURED WITH VM PUSHBUTTON DEPRESSED. 1 V RANGE, INPUT SHORTED. ALL VOLTAGES ARE 10V.

WIRE COLOR
0 BLK
1 BRN
2 RED
3 ORN
4 YEL
5 GRN
6 BLU
7 VIO
8 CRP
9 WHT


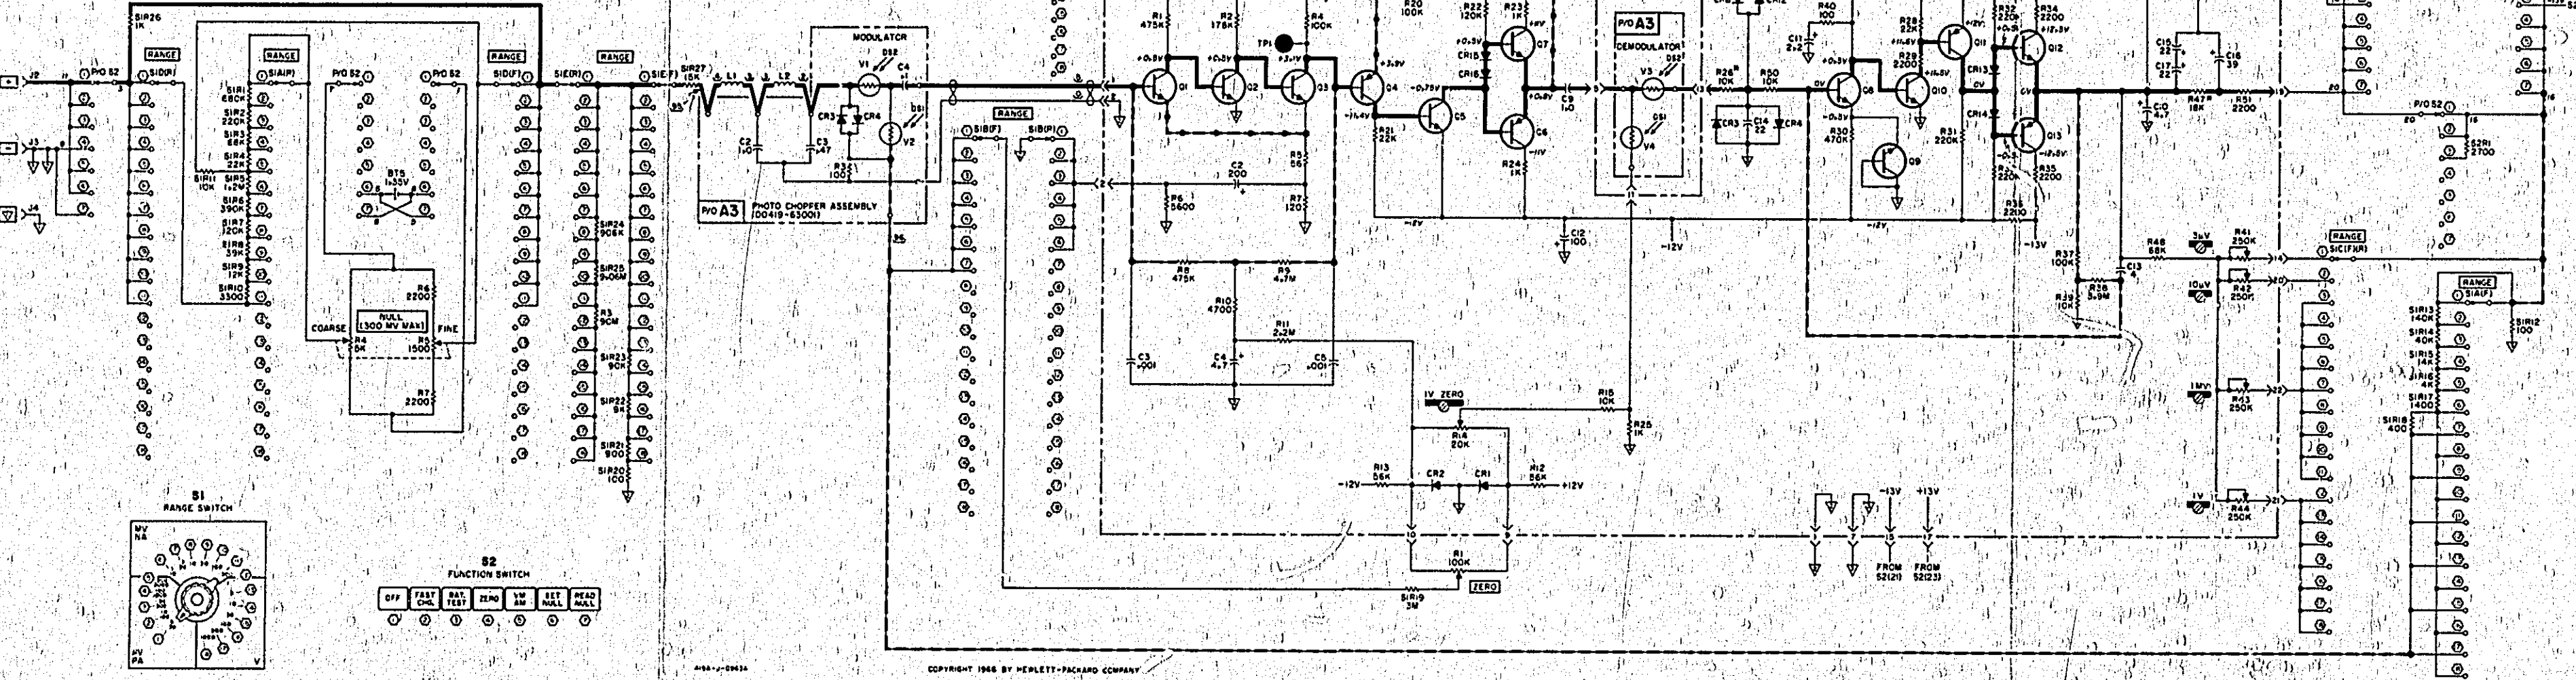


Figure 6-3. Amplifier and Amplifier Switching Schematic and Component Location Diagrams

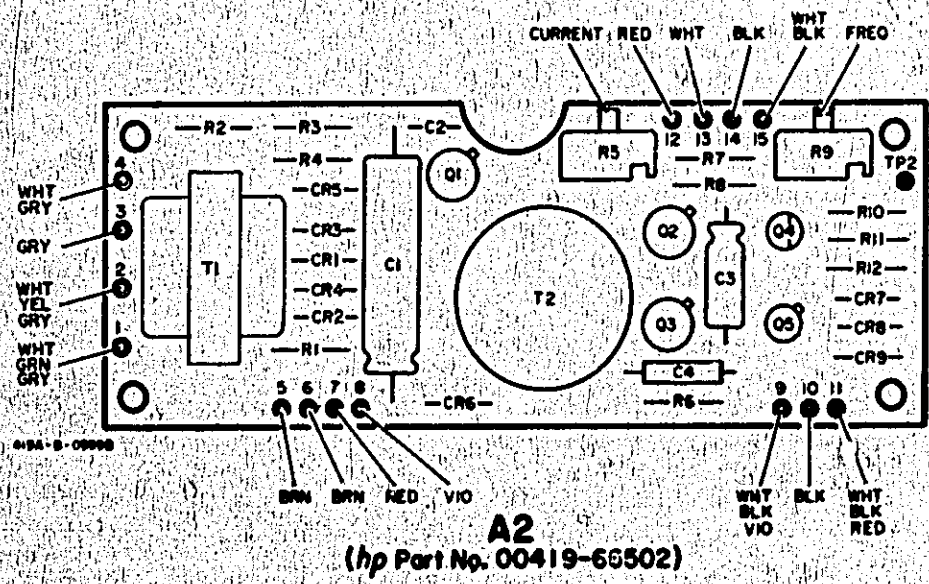

- NOTES
- PARTIAL REFERENCE DESIGNATIONS ARE SHOWN. PREFIX WITH ASSEMBLY OR SUBASSEMBLY DESIGNATION(S) OR BOTH FOR COMPLETE DESIGNATION.
 - COMPONENT VALUES ARE SHOWN AS FOLLOWS UNLESS OTHERWISE NOTED.
RESISTANCE IN OHMS
CAPACITANCE IN MICROFARADS
 - ⊥ DENOTES POWER LINE GROUND
▽ DENOTES CHASSIS COMMON (MAY BE CONNECTED TO GROUND THROUGH POWER LINE)
▽ DENOTES POWER SUPPLY COMMON
 - DENOTES ASSEMBLY.
--- DENOTES SUBASSEMBLY.
 - DENOTES COMPONENTS NOT MOUNTED ON ASSEMBLY.
 - DENOTES REAR PANEL MARKING.
 - DENOTES SCREWDRIVER ADJUST.
 - WIRE COLOR: COLOR CODE SAME AS RESISTOR COLOR CODE. FIRST NUMBER IDENTIFIES BASE COLOR. SECOND NUMBER IDENTIFIES WIDER STRIP. THIRD NUMBER IDENTIFIES NARROWER STRIP. (e.g., 024 = WHITE, RED, YELLOW.)
- | WIRE COLOR | |
|------------|-----|
| 0 | BLK |
| 1 | BRN |
| 2 | RED |
| 3 | ORN |
| 4 | YEL |
| 5 | GRN |
| 6 | BLU |
| 7 | VIO |
| 8 | GY |
| 9 | WHT |
8. INDIVIDUAL COMPONENTS ON AS1 ARE NOT SEPARATELY REPLACEABLE. SEE PARAGRAPHS 3-27.

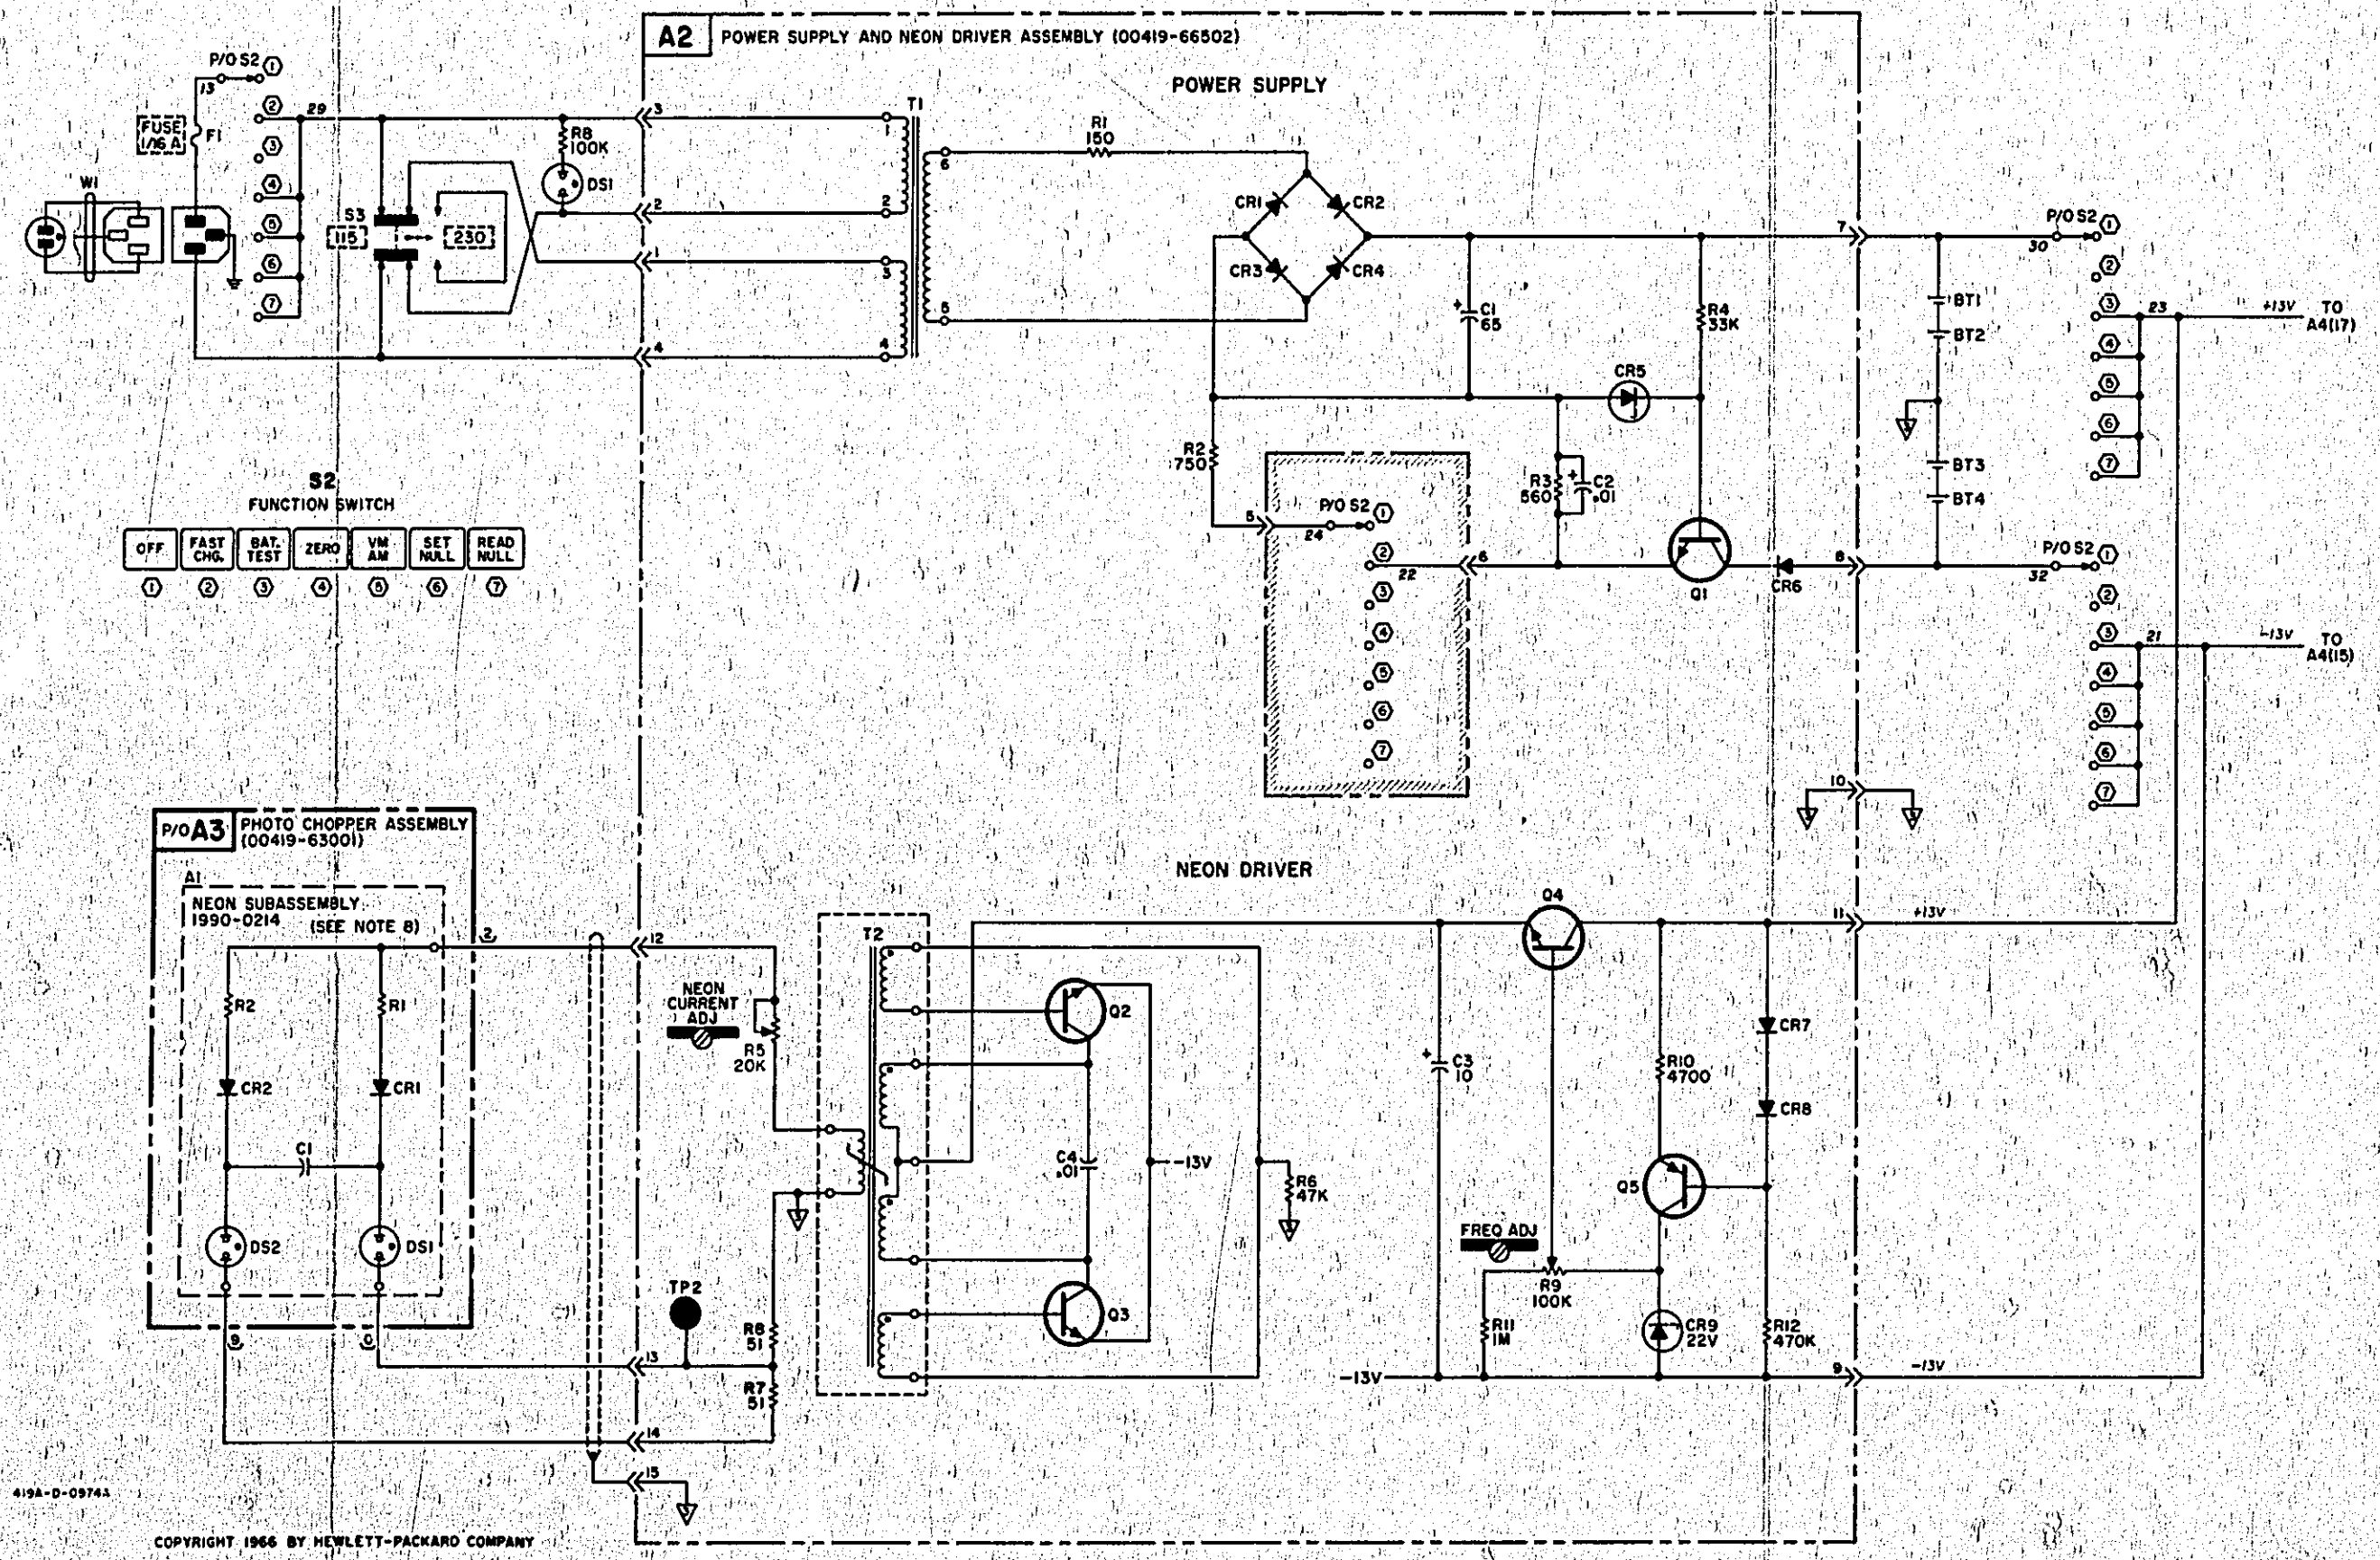


Figure 6-4. Power Supply and Neon Driver, Schematic and Component Location Diagrams

SECTION VII REPLACEABLE PARTS

7-1. INTRODUCTION.

7-2. This section contains information for ordering replacement parts. Table 7-1 lists parts in alphanumeric order of their reference designators and indicates the description, -hp- part number of each part, together with any applicable notes, and provides the following:

- a. Total quantity used in the instrument (TQ column). The total quantity of a part is given the first time the part number appears.
- b. Description of the part. (See list of abbreviations below.)
- c. Typical manufacturer of the part in a five-digit code. (See Appendix A for list of manufacturers.)
- d. Manufacturer's part number.

7-3. Miscellaneous parts are listed at the end of Table 7-1.

7-4. ORDERING INFORMATION.

7-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Field Office. (See Appendix B for list of office locations.) Identify parts by their Hewlett-Packard part numbers. Include instrument model and serial numbers.

7-6. NON-LISTED PARTS.

7-7. To obtain a part that is not listed, include:

- a. Instrument model number.
- b. Instrument serial number.
- c. Description of the part.
- d. Function and location of the part.

DESIGNATORS

A = assembly
B = motor
DT = battery
C = capacitor
CR = diode
DL = delay line
DS = lamp
E = misc electronic part

F = fuse
FL = filter
HR = heater
IC = integrated circuit
J = jack
K = relay
L = inductor
M = meter

MP = mechanical part
P = plug
Q = transistor
QCR = transistor-diode
R = resistor
RT = thermistor
S = switch
T = transformer

TC = thermocouple
V = vacuum tube, neon bulb, photocell, etc.
W = cable
X = socket
XDS = lampholder
XF = fuseholder
Z = network

ABBREVIATIONS

Ag = silver
Al = aluminum
A = ampere (s)
Au = gold
C = capacitor
cer = ceramic
coef = coefficient
com = common
comp = composition
conn = connection
dep = deposited
DPDT = double-pole double-throw
DPST = double-pole single-throw
elect = electrolytic
encap = encapsulated
F = farad (s)
FET = field effect transistor
fxd = fixed
GaAs = gallium arsenide
GHz = gigahertz = 10^9 hertz
gd = guard (ed)
Ge = germanium
grd = ground (ed)
H = henry (lea)
Hg = mercury
Hz = hertz (cycle (s) per second)

ID = inside diameter
imp = impregnated
incd = incandescent
ins = insulation (ed)
k Ω = kilohm (s) = 10^3 ohms
kHz = kilohertz = 10^3 hertz
L = inductor
lin = linear taper
log = logarithmic taper
m = milli = 10^{-3}
mA = milliamper (s) = 10^{-3} amperes
MHz = megahertz = 10^6 hertz
M Ω = megohm (s) = 10^6 ohms
met film = metal film
mfr = manufacturer
m/g = mounting
mV = millivolt (s) = 10^{-3} volts
 μ = micro = 10^{-6}
 μ V = microvolt (s) = 10^{-6} volts
my = Mylar
nA = nanoampere (s) = 10^{-9} amperes
NC = normally closed
Ne = neon
NO = normally open
NPO = negative positive zero (zero temperature coefficient)

ns = nanosecond (s) = 10^{-9} seconds
nsr = not separately replaceable
 Ω = ohm (s)
obd = order by description
OD = outside diameter
p = peak
pc = printed circuit
pF = picofarad (s) = 10^{-12} farads
piv = peak inverse voltage
p/o = part of
pos = position (s)
poly = polystyrene
pot = potentiometer
p-p = peak-to-peak
ppm = parts per million
prec = precision (temperature coefficient, long term stability, and/or tolerance)
R = resistor
Rh = rhodium
rms = root-mean-square
rot = rotary
Se = selenium
sect = section (s)
Si = silicon

sl = slide
SPDT = single-pole double-throw
SPST = single-pole single-throw
Ta = tantalum
TC = temperature coefficient
TiO₂ = titanium dioxide
tog = toggle
tol = tolerance
trim = trimmer
TSTR = transistor
V = volt (s)
vacw = alternating current working voltage
var = variable
vdcw = direct current working voltage
W = watt (s)
w/ = with
wiv = working inverse voltage
w/o = without
ww = wirewound
* = optimum value selected at factory, average value shown (part may be omitted)
** = no standard type number assigned (selected or special type)

® Dupont de Nemours

Table 7-1. Replaceable Parts

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO.
A1			Not Assigned		
A2	00419-66502	1	Assembly: Power Supply		
A2C1	0180-0149	1	C: fxd Al elect 65 μ F +100% -10% 60 vdcw	56289	Type 30D obd
A2C2	0150-0093	1	C: fxd 0.01 μ F +80% -20% 100 vdcw	91418	TA obd
A2C3	0180-0059	1	C: fxd elect 10 μ F +100% -10% 25 vdcw	56289	30D106G025
A2C4	0160-0161	1	C: fxd 0.01 μ F $\pm$ 10%	56289	BB4 102P10392
A2CR1 thru A2CR4	1901-0025	2	Diode: Si 100 mA at +1 V 100 pV 12 pF	93332	D3072
A2CR5	1902-0048	1	Diode: breakdown 6.81 V $\pm$ 5%	07910	CD35658
A2CR6 thru A2CR8	1901-0025		Diode: Si 100 mA at +1 V 100 pV 12 pF	93332	D3072
A2CR9	1902-0563	1	Diode: breakdown 100 μ A 22.1 V $\pm$ 2%	04713	SZ11327
A2Q1 thru A2Q3	1854-0039	3	Transistor: NPN Si 2N3053	86684	2N3053
A2Q4	1854-0033	9	Transistor: NPN Si 2N3391	24446	2N3391
A2Q5	1853-0010	4	Transistor: PNP Si**	04713	SM4713
A2R1	0687-1511	1	R: fxd comp 150 Ω $\pm$ 10% 1/2 W	01121	EB1511
A2R2	0686-7515	1	R: fxd comp 750 Ω $\pm$ 5% 1/2 W	01121	EB7515
A2R3	0687-5611	1	R: fxd comp 560 Ω $\pm$ 10% 1/2 W	01121	EB5611
A2R4	0687-3331	1	R: fxd comp 33 k Ω $\pm$ 10% 1/2 W	01121	EB3331
A2R5	2100-1410	5	R: var lin 20 k Ω $\pm$ 30% 1/8 W	71450	XQS-200 obd
A2R6	0687-4731	1	R: fxd comp 47 k Ω $\pm$ 10% 1/2 W	01121	EB4731
A2R7, A2R8	0686-5105	1	R: fxd comp 51 Ω $\pm$ 5% 1/2 W	01121	EB5105
A2R9	2100-0362	1	R: var lin 100 k Ω $\pm$ 30% 1/8 W	71450	XQS-200 obd
A2R10	0687-4721	2	R: fxd comp 4700 Ω $\pm$ 10% 1/2 W	01121	EB4721
A2R11	0687-1051	1	R: fxd comp 1 M Ω $\pm$ 10% 1/2 W	01121	EB1051
A2R12	0687-4741	1	R: fxd comp 470 k Ω $\pm$ 10% 1/2 W	01121	EB4741
A2T1	9100-0172	1	Transformer: power	28480	9100-0172
A2T2	9100-1319	1	Transformer: neon driver	28480	9100-1319
A3	00419-63001	1	Assembly: Photochopper	28480	00419-63001
A3A1	1990-0214	1	Subassembly: Neon Driver	28480	1990-0214
A3C1			Not Assigned		
A3C2	0160-0859	2	C: fxd my die 1.0 μ F $\pm$ 10% 50 vdcw	56289	148P obd
A3C3	0170-0064	1	C: fxd my die 0.47 μ F $\pm$ 10% 100 vdcw	56289	148P4791
A3C4	0160-2446	1	C: fxd poly die 0.1 μ F $\pm$ 20% 200 vdcw	84411	863 UW
A3CR1, A3CR2			Not Assigned		
A3CR3, A3CR4	1901-0156	2	Diode: Si 50 mA at 1 Vdc 20 pV	01281	PS5553
A3R1, A3R2			Not Assigned		
A3R3	0811-1505	2	R: fxd prec ww 100 Ω $\pm$ 0.1% 1/2 W	01686	E-20 obd
A3V1 thru A3V4	00419-63001		Photocells: part of A3 (not separately replaceable)	28480	00419-63001
A4	00419-66504	1	Assembly: amplifier	28480	00419-66504
A4C1	0180-0224	3	C: fxd Al elect 10 μ F +75% -10% 15 vdcw	56289	30D106G015
A4C2	0180-0060	1	C: fxd elect 200 μ F +100% -10% 3 vdcw	56289	BA4 30D207G003
A4C3	0150-0069	2	C: fxd cer die 0.001 μ F +100% -20% 500 vdcw	72982	DC4 #801-010X5G
A4C4	0180-0100	1	C: fxd Ta die 4.7 μ F $\pm$ 10% 35 vdcw	56289	0102Z 150D475X903
A4C5	0150-0069		C: fxd cer die 0.001 μ F +100% -20% 500 vdcw	72982	5B2 #801-010X5G 0102Z

Table 7-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO.
A4C6, A4C7	0180-0224		C: fxd Al elect 10 μ F +75% -10% 15 vdcw	56289	30D106G015 BA4
A4C8	0180-0061	2	C: fxd elect 100 μ F +100% -10% 15 vdcw	56289	30D107G015 DD4
A4C9	0160-0850		C: fxd my die 1.0 μ F $\pm$ 10% 10 vdcw	56289	148P
A4C10	0180-0100	1	C: fxd Ta die 4.7 μ F $\pm$ 10% 35 vdcw	56289	150D476X9035 B2
A4C11	0180-0155	1	C: fxd Ta elect 2.2 μ F $\pm$ 20% 20 vdcw	56289	150D225X0020 AZ
A4C12	0180-0061		C: fxd elect 100 μ F +100% -10% 15 vdcw	56289	30D107G015 DD4
A4C13	0160-0932	1	C: fxd my die 4 μ F $\pm$ 20% 30 vdcw	56289	Type 148P
A4C14, A4C15	0180-0228	2	C: fxd Ta elect 22 μ F $\pm$ 10% 15 vdcw	56289	150D226X9015 B2-DYS
A4C16	0180-0393	1	C: fxd Ta elect 39 μ F $\pm$ 10% 10 vdcw	56289	150D396X9010 B2-DYS
A4C17	0180-0228		C: fxd Ta elect 22 μ F $\pm$ 10% 15 vdcw	56289	150D226X9015 B2-DYS
A4CR1 thru CR4	1901-0025		Diode: Si 100 mA at +1 V 100 pV 12 pF	93332	D3072
A4CR13-CR16					
A4CR5-CR12	1901-0537		Diode: Si select 100 mA 100 wV	03877	NV244
A4Q1, A4Q2	1854-0226	2	Transistor: NPN Si	56289	TN-56
A4Q3	1854-0033		Transistor: NPN Si 2N3391	24446	2N3391
A4Q4	1853-0010		Transistor: PNP Si**	04713	SM4713
A4Q5	1854-0033		Transistor: NPN Si 2N3391	24446	2N3391
A4Q6	1853-0010		Transistor: PNP Si**	04713	SM4713
A4Q7 thru A4Q10	1854-0033		Transistor: NPN Si 2N3391	24446	2N3391
A4Q11	1853-0010		Transistor: PNP Si**	04713	SM4713
A4Q12	1854-0033		Transistor: NPN Si 2N3391	24446	2N3391
A4Q13	1853-0010		Transistor: PNP Si**	04713	SM4713
A4R1	0757-0374	2	R: fxd prec met flm 475 k Ω $\pm$ 1% 1/2 W	19701	MF7C T-O
A4R2	0757-0129	1	R: fxd prec met flm 178 k Ω $\pm$ 1% 1/2 W	19701	MF7C T-O
A4R3	0687-1241	3	R: fxd comp 120 k Ω $\pm$ 10% 1/2 W	01121	EB1241
A4R4	0687-1041	5	R: fxd comp 100 k Ω $\pm$ 10% 1/2 W	01121	EB1041
A4R5	0687-5601	1	R: fxd comp 56 Ω $\pm$ 10% 1/2 W	01121	EB5601
A4R6	0687-5621	1	R: fxd comp 5600 Ω $\pm$ 10% 1/2 W	01121	EB5621
A4R7	0687-1211	1	R: fxd comp 120 Ω $\pm$ 10% 1/2 W	01121	EB1211
A4R8	0757-0374		R: fxd prec met flm 475 k Ω $\pm$ 1% 1/2 W	19701	MF7C T-O
A4R9	0687-4751	1	R: fxd comp 4.7 M Ω $\pm$ 10% 1/2 W	01121	EB4751
A4R10	0687-4721		R: fxd comp 4700 Ω $\pm$ 10% 1/2 W	01121	EB4721
A4R11	0687-2251	1	R: fxd comp 2.2 M Ω $\pm$ 10% 1/2 W	01121	EB2251
A4R12, A4R13	0687-5631	2	R: fxd comp 36 k Ω $\pm$ 10% 1/2 W	01121	EB5631
A4R14	2100-1410		R: var lin 20 k Ω $\pm$ 30% 1/8 W	71450	XQS-200
A4R15	0687-1031	4	R: fxd comp 10 k Ω $\pm$ 10% 1/2 W	01121	EB1031
A4R16	0687-1041		R: fxd comp 100 k Ω $\pm$ 10% 1/2 W	01121	EB1041
A4R17	0687-1241		R: fxd comp 120 k Ω $\pm$ 10% 1/2 W	01121	EB1241
A4R18	0687-1031		R: fxd comp 10 k Ω $\pm$ 10% 1/2 W	01121	EB1031
A4R19	0687-1021	4	R: fxd comp 1000 Ω $\pm$ 10% 1/2 W	01121	EB1021
A4R20	0687-1041		R: fxd comp 100 k Ω $\pm$ 10% 1/2 W	01121	EB1041
A4R21	0687-2231	3	R: fxd comp 22 k Ω $\pm$ 10% 1/2 W	01121	EB2231
A4R22	0687-1241		R: fxd comp 120 k Ω $\pm$ 10% 1/2 W	01121	EB1241
A4R23 thru A4R25	0687-1021		R: fxd comp 1000 Ω $\pm$ 10% 1/2 W	01121	EB1021
A4R26*			See Paragraph 5-53		
A4R27	0687-1051		R: fxd comp 1 M Ω $\pm$ 10% 1/2 W	01121	EB1051
A4R28	0687-2231		R: fxd comp 22 k Ω $\pm$ 10% 1/2 W	01121	EB2231

Table 7-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO.
A4R29	0687-2221	7	R: fxd comp 2200 $\Omega \pm 10\%$ 1/2 W	01121	EB2221
A4R30	0687-4741		R: fxd comp 470 k $\Omega \pm 10\%$ 1/2 W	01121	EB4741
A4R31 thru A4R33	0687-2241	3	R: fxd comp 220 k $\Omega \pm 10\%$ 1/2 W	01121	EB2241
A4R34 thru A4R36	0687-2221		R: fxd comp 2200 $\Omega \pm 10\%$ 1/2 W	01121	EB2221
A4R37	0687-1041		R: fxd comp 100 k $\Omega \pm 10\%$ 1/2 W	01121	EB1041
A4R38	0687-3951	2	R: fxd comp 3.9 M $\Omega \pm 10\%$ 1/2 W	01121	EB3951
A4R39	0687-1031		R: fxd comp 10 k $\Omega \pm 10\%$ 1/2 W	01121	EB1031
A4R40	0687-1011		R: fxd comp 100 $\Omega \pm 10\%$ 1/2 W	01121	EB1011
A4R41 thru A4R44	2100-1795		R: var comp lin 250 k $\Omega \pm 20\%$ 1/8 W	71450	QS 200
A4R45	2100-1470	1	R: var lin 500 k $\Omega \pm 30\%$ 1/10 W	71450	XQS-200
A4R46	0687-3941	1	R: fxd comp 390 k $\Omega \pm 10\%$ 1/2 W	01121	EB3941
A4R47*			See Paragraph 5-55		
A4R48	0687-6831	1	R: fxd comp 68 k $\Omega \pm 10\%$ 1/2 W	01121	EB6831
A4R49	0687-2221		R: fxd comp 2200 $\Omega \pm 10\%$ 1/2 W	01121	EB2221
A4R50	0687-1031		R: fxd comp 10 k $\Omega \pm 10\%$ 1/2 W	01121	EB1031
A4R51	0687-2221		R: fxd comp 2200 $\Omega \pm 10\%$ 1/2 W	01121	EB2221
BT1 thru BT4	1420-0015	4	Battery: rechargeable nickel cadmium 6.25 V	61637	Y-5201
BT5	1420-0004	1	Battery: mercury 1.34 V cylindrical	09569	316469
DS1	2140-0008	1	Lamp: glow type NE-2 neon	28480	2140-0008
F1	2110-0011	1	Fuse: cartridge 1/16 A	75915	312.125
J1	1251-2357	1	Socket: 3-pin Male Power Receptacle	82389	EAC-301
J2	5080-1278	1	Binding Post: red with solder turret (+ INPUT)	28480	5080-1278
	0340-0159	2	Insulator Cup: binding post	28480	0340-0159
	0340-0100	2	Insulator Spacer: binding post	28480	0340-0100
	00419-21701	2	Guard: binding post, threaded	28480	00419-21701
J3	5080-1277		Binding Post: black with solder turret (- INPUT)	28480	5080-1277
	0340-0159		Insulator Cup: binding post	28480	0340-0159
	0340-0100		Insulator Spacer: binding post	28480	0340-0100
	00419-21701		Guard: binding post, threaded	28480	00419-21701
J4	1510-0011	3	Binding Post: black with solder turret ($\frac{1}{2}$)	28480	1510-0011
	0340-0099	1	Insulator: binding post	28480	0340-0099
J5	1510-0010	1	Binding Post: red with solder turret (+ OUTPUT)	28480	1510-0010
J6	1510-0011		Binding Post: black with solder turret (- OUTPUT)	28480	1510-0011
J7	1510-0011		Binding Post: black with solder turret ($\frac{1}{2}$)	28480	1510-0011
	0340-0086	1	Insulator: binding post, dual	28480	0340-0086
	0340-0091	1	Insulator: binding post, triple	28480	0340-0091
L1, L2	9100-1318	1	Inductor: input	28480	9100-1318
M1	1120-0312	1	Meter	28480	1120-0312
R1	2100-1557	1	R: var prec ww 10 turn 100 k $\Omega \pm 5\%$ 2 W	12697	Series 62 CM 33147
R2	2100-2200	1	R: var lin 20 k $\Omega \pm 20\%$ 1/3 W	71450	Series 45
R3	0698-3463	1	R: fxd prec c flm 90 M $\Omega \pm 1\%$ 2 W	03888	HV2000
R4, R5	2100-2199	2	R: var comp 2 sect lin tandem ganged 1500 Ω and 5000 $\Omega \pm 20\%$	12697	Series 53M
R6, R7	0687-2221		R: fxd comp 2200 $\Omega \pm 10\%$ 1/2 W	01121	EB2221
R8	0687-1041		R: fxd comp 100 k $\Omega \pm 10\%$ 1/2 W	01121	EB1041

Table 7-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO.
S1	00419-61901	1	Switch Assembly: range	28480	00419-61901
S1R1	0683-6845	1	R: fxd comp 680 k Ω $\pm$ 5% 1/4 W	01121	CB6845
S1R2	0684-2241	1	R: fxd 220 k Ω $\pm$ 10% 1/4 W	01121	CB2241
S1R3	0684-6831	1	R: fxd comp 68 k Ω $\pm$ 10% 1/4 W	01121	CB6831
S1R4	0684-2231	1	R: fxd comp 22 k Ω $\pm$ 10% 1/4 W	01121	CB2231
S1R5	0683-1255	1	R: fxd comp 1.2 M Ω $\pm$ 5% 1/4 W	01121	CB1255
S1R6	0684-3941	1	R: fxd comp 390 k Ω $\pm$ 10% 1/4 W	01121	CB3941
S1R7	0683-1245	1	R: fxd comp 120 k Ω $\pm$ 5% 1/4 W	01121	CB1245
S1R8	0683-3935	1	R: fxd comp 39 k Ω $\pm$ 5% 1/4 W	01121	CB3935
S1R9	0684-1231	1	R: fxd comp 12 k Ω $\pm$ 10% 1/4 W	01121	CB1231
S1R10	0684-3321	1	R: fxd comp 3300 Ω $\pm$ 10% 1/4 W	01121	EB3321
S1R11	0687-1031		R: fxd 10 k Ω $\pm$ 10% 1/2 W	01121	EB1031
S1R12	0811-1505		R: fxd prec ww 100 Ω $\pm$ 0.1% 1/2 W	01686	E-20
S1R13	0698-3373	1	R: fxd met flm 140 k Ω $\pm$ 0.25% 1/4 W	19701	MF6C T-O
S1R14	0698-3372	1	R: fxd prec met flm 40 k Ω $\pm$ 0.25% 1/4 W	19701	MF6C T-O
S1R15	0698-3371	1	R: fxd prec met flm 14 k Ω $\pm$ 0.25% 1/4 W	19701	MF6C T-O
S1R16	0698-3370	1	R: fxd prec met flm 4000 Ω $\pm$ 0.25% 1/4 W	19701	MF6C T-O
S1R17	0698-3369	1	R: fxd prec met flm 1400 Ω $\pm$ 0.25% 1/4 W	19701	MF6C T-O
S1R18	0811-1506	1	R: fxd prec ww 400 Ω $\pm$ 0.1% 1/4 W	01686	E-20
S1R19	0686-3055	1	R: fxd 3.0 M Ω $\pm$ 5% 1/2 W	01121	EB3055
S1R20	0698-3363	1	R: fxd prec c flm 100 Ω $\pm$ 0.5% 1/2 W	94459	CVS
S1R21	0698-3364	1	R: fxd prec c flm 900 Ω $\pm$ 0.5% 1/2 W	94459	CVS
S1R22	0698-3365	1	R: fxd prec c flm 9000 Ω $\pm$ 0.5% 1/2 W	94459	CVS
S1R23	0698-3366	1	R: fxd prec c flm 90 k Ω $\pm$ 0.5% 1/2 W	94459	CVS
S1R24	0698-3367	1	R: fxd prec c flm 906 k Ω $\pm$ 0.5% 1/2 W	94459	CVS
S1R25	0698-3368	1	R: fxd prec c flm 9.06 M Ω $\pm$ 0.5% 1 W	91637	DC-1
S1R26	0686-1025	1	R: fxd comp 1000 Ω $\pm$ 5% 1/2 W	01121	EB1025
S1R27	0687-1531	1	R: fxd comp 15 k Ω $\pm$ 10% 1/2 W	01121	EB1531
S2	3101-0803	1	Switch: pushbutton function	76854	
S2R1	0687-2721	1	R: fxd comp 2700 Ω $\pm$ 10% 1/2 W	01121	EB2721
S3	3101-1234	1	Switch: slide DPDT 6A 250 Vac	82389	11A-1242A
W1	8120-1348	1	Cable Assembly: power	70903	KHS-7041
MISCELLANEOUS					
	1251-0172	1	Connector: 22 ribbon type contacts	07233	250-22-30-210
	5000-8581	1	Cover: bottom 7 x 8	28480	5000-0716
	5000-8563	2	Cover: side 6 x 8	28480	5000-0702
	5060-8571	1	Cover: top 7 x 8	28480	5060-0717
	241A-44A	1	Foot Assembly: half module	28480	241A-44A
	5060-0728	1	Foot Assembly: half module (front)	28480	5060-0728
	5040-0615	1	Holder: battery (BT1 thru BT4)	28480	5040-4524
	00419-66401	1	Holder: battery phenolic base (BT5)	28480	5040-0615
	1400-0084	1	Holder: fuse extractor post type	74915	342014
	00419-04301	1	Insert: RANGE	28480	00419-04301
	0370-0121	7	Knob: pushbutton rectangular gray plastic	28480	0370-0121
	0370-0137	2	Knob: round 5/8" diam black (ZERO and NULL)	28480	0370-0137
	0370-0112	1	Knob: skirted bar 3/4" diam black (RANGE)	28480	0370-0112
	5000-3217	1	Label: pushbutton BAT. TEST	28480	5000-3217
	5000-3216	1	Label: pushbutton FAST CHG.	28480	5000-3216
	00419-01201		Switch Panel, Black Plastic, RANGE		

Table 7-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO.
	5000-0251	1	Label: pushbutton OFF	28480	5000-0251
	5000-3213	1	Label: pushbutton READ NULL	28480	5000-3213
	5000-3214	1	Label: pushbutton SET NULL	28480	5000-3214
	5000-3345	1	Label: pushbutton VM/AM	28480	5000-3345
	5000-3215	1	Label: pushbutton ZERO	28480	5000-3215
	00419-90004	1	Manual: Operating and Service	28480	00419-90003
	00419-00204	1	Panel: front	28480	00419-00201
	00419-00203	1	Panel: rear	28480	00419-00202
	00419-00606	1	Shield: bottom	28480	00419-00606
	00419-00601	1	Shield: front	28480	00419-00601
	00419-00602	1	Shield: rear	28480	00419-00602
	00419-00604	1	Shield: side left	28480	00419-00604
	00419-00603	1	Shield: side right	28480	00419-00603
	00419-00605	1	Shield: top	28480	00419-00605
	1490-0032	1	Stand: half module tilt stainless steel rod	91260	odd

CODE LIST OF MANUFACTURERS

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of revision and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 Handbooks.

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
00000	U. S. A. Common	Any supplier of U.S.	05347	Ultronix, Inc.	San Mateo, Cal.	11236	CTS of Berne, Inc.	Berne, Ind.
00116	McCoy Electronics	Mount Holly Springs, Pa.	05397	Union Carbide Corp., Elect.		11237	Chicago Telephone of	
00213	Sage Electronics Corp.	Rochester, N.Y.		Div.	New York, N.Y.		California, Inc.	So. Pasadena, Cal.
00287	Cemco, Inc.	Danielson, Conn.	05574	Viking Ind. Inc.	Canoga Park, Cal.	11242	Ray State Electronics Corp.	Waltham, Mass.
00334	Humidial	Colton, Calif.	05593	Icove Electro-Plastics Inc.	Sunnyvale, Cal.	11312	Teledyne Inc., Microwave	
00348	Mictron, Co., Inc.	Valley Stream, N.Y.	05610	Cosmo Plastic (c/o Electrical			Div.	Palo Alto, Cal.
01373	Garlock Inc.	Cherry Hill, N.J.		Spec. Co.)	Cleveland, Ohio	11314	National Seal	Downey, Cal.
00666	Aerovox Corp.	New Bedford, Mass.	05624	Barber Colman Co.	Rockford, Ill.	11453	Precision Connector Corp.	Jamaica, N.Y.
00779	Amp, Inc.	Harrisburg, Pa.	05728	Tiffen Optical Co.		11534	Duncan Electronics Inc.	Costa Mesa, Cal.
00781	Aircraft Radio Corp.	Boonton, N.J.			Roslyn Heights, Long Island, N.Y.	11711	General Instrument Corp.	
00809	Cruven, Ltd.	Whitby, Ontario, Canada	05729	Metro-Tel Corp.	Westbury, N.Y.		Semiconductor Division Products	
00815	Northern Engineering		05783	Stewart Engineering Co.	Santa Cruz, Cal.		Group	Newark, N.J.
	Laboratories, Inc.	Durlington, Wis.	05820	Wakefield Engineering Inc.	Wakefield, Mass.	11717	Imperial Electronic, Inc.	Buena Park, Cal.
00853	Sangamo Electric Co.		06004	Basick Co., Div. of Stewart		11870	Melabs, Inc.	Palo Alto, Cal.
	Pickens Div.	Pickens, S.C.	06090	Warner Corp.	Bridgeport, Conn.	12136	Philadelphia Handle Co.	Camden, N.J.
00866	Goe Engineering Co.	City of Industry, Cal.	06175	Raychem Corp.	Redwood City, Cal.	12361	Grove Mfg. Co., Inc.	Shady Grove, Pa.
00891	Carl E. Holmes Corp.	Los Angeles, Cal.		Bausch and Lomb Optical		12574	Gulton Ind. Inc., Data System	
00929	Microlab Inc.	Livingston, N.J.		Co.	Rochester, N.Y.		Div.	Albuquerque, N.M.
01002	General Electric Co.		06402	E. T. A. Products Co. of	Chicago, Ill.	12697	Clarostat Mfg. Co.	Dover, N.H.
	Capacitor Dept.	Hudson Falls, N.Y.	06540	Amatom Electronic Hardware		12728	Elmar Filter Corp.	W. Haven, Conn.
01009	Alden Products Co.	Brockton, Mass.		Co., Inc.	New Rochelle, N.Y.	12859	Nippon Electric Co., Ltd.	Tokyo, Japan
01121	Allen Bradley Co.	Milwaukee, Wis.	06555	Berde Electrical Instrument		12881	Metex Electronics Corp.	Clark, N.J.
01255	Liton Industries, Inc.	Beverly Hills, Cal.		Co., Inc.	Peracook, N.H.	12930	Delta Semiconductor Inc.	Newport Beach, Cal.
01281	TRW Semiconductors, Inc.	Lawndale, Cal.	06666	General Devices Co., Inc.	Indianapolis, Ind.	12954	Dickson Electronics Corp.	Scottsdale, Arizona
01295	Texas Instruments, Inc.		06751	Components Inc., Ariz. Div.	Phoenix, Arizona	13019	Airco Supply Co., Inc.	Wichita, Kansas
	Transistor Products Div.	Dallas, Texas	06812	Torrington Mfg. Co., West Div.	Van Nuys, Cal.	13061	Wilco Products	Detroit, Mich.
01349	The Alliance Mfg. Co.	Alliance, Ohio	06980	Varian Assoc. Etmac Div.	San Carlos, Cal.	13103	Thermolloy	Dallas, Texas
01538	Small Parts Inc.	Los Angeles, Cal.	07088	Kelvin Electric Co.	Van Nuys, Cal.	13327	Solitron Devices Inc.	Tappan, N.Y.
01589	Pacific Relays, Inc.	Van Nuys, Cal.	07126	Digitron Co.	Pasadena, Cal.	13396	Telefunken (GmbH)	Hanover, Germany
01670	Gudebrod Bros. Sisk Co.	New York, N.Y.	07137	Transistor Electronics		13835	Midland-Wright Div. of	
01930	Amerock Corp.	Rockford, Ill.		Corp.	Minneapolis, Minn.		Pacific Industries, Inc.	Kansas City, Kansas
01960	Pulse Engineering Co.	Santa Clara, Cal.	07138	Westinghouse Electric		14099	Sem-Tech	Newbury Park, Cal.
02114	Ferrocube Corp. of			Corp., Electronic Tube Div.	Elmira, N.Y.	14193	Calif. Resistor Corp.	Santa Monica, Cal.
	America	Saugerties, N.Y.	07149	Filmohm Corp.	New York, N.Y.	14298	American Components, Inc.	Conshohocken, Pa.
02116	Wheelock Signals, Inc.	Long Branch, N.J.	07227	Cinch-Graphik Co.	City of Industry, Cal.	14433	ITT Semiconductor, a Div. of	
02284	Cole Rubber and Plastics Inc.	Sunnyvale, Cal.	07256	Silicon Transistor Corp.	Carle Place, N.Y.		Int. Telephone and Telegraph	
02660	Amphenol-Borg Electronics		07261	Avnet Corp.	Culver City, Cal.		Corporation	West Palm Beach, Fla.
	Corp.	Brooklyn, Ill.	07263	Fairchild Camera & Inst. Corp.		14493	Hewlett-Packard Company	Loveland, Colo.
02735	Radio Corp. of America, Semi-			Semiconductor Div.	Mountain View, Cal.	14655	Cornell Dublier Electric Corp.	Newark, N.J.
	conductor and Materials		07322	Minnesota Rubber Co.	Minneapolis, Minn.	14674	Corning Glass Works	Corning, N.Y.
	Division	Somerville, N.J.	07387	Bircher Corp., The	Monterey Park, Cal.	14752	Electro Cube Inc.	San Gabriel, Cal.
02771	Vocaline Co. of America,		07391	Sylvania Elect. Prod. Inc.		14960	Williams Mfg. Co.	San Jose, Cal.
	Inc.	Old Saybrook, Conn.		Mt. View Operations	Mountain View, Cal.	15106	The Sphere Co., Inc.	Little Falls, N.J.
02777	Hopkins Engineering Co.	San Fernando, Cal.	07700	Technical Wire Products		15203	Webster Electronics Co.	New York, N.Y.
02875	Hudson Tool & Die	Newark, N.J.		Inc.	Cranford, N.J.	15287	Sclonics Corp.	Northridge, Cal.
03296	Nylon Molding Corp.	Springfield, N.J.	07829	Bodine Elect. Co.	Chicago, Ill.	15291	Adjustable Bushing Co.	N. Hollywood, Cal.
03508	G. E. Semiconductor Prod.		07910	Continental Device Corp.	Hawthorne, Cal.	15558	Micron Electronics, Garden City, Long Island, N.Y.	
	Dept.	Syracuse, N.Y.	07933	Raytheon Mfg. Co., Semi-		15568	Amprobe Inst. Corp.	Lynbrook, N.Y.
03705	Apex Machine & Tool Co.	Dayton, Ohio		conductor Div.	Mountain View, Cal.	15631	Cabletronics	Costa Mesa, Cal.
03787	Eldema Corp.	Corpton, Calif.	07980	Hewlett-Packard Co.		15772	Twentieth Century Coil	
03818	Parker Seal Co.	Los Angeles, Cal.		New Jersey Division	Rockaway, N.J.		Spring Co.	Santa Clara, Cal.
03877	Transitron Electric Corp.	Wakefield, Mass.	08145	U.S. Engineering Co.	Los Angeles, Cal.	15801	Fenwal Elect. Inc.	Framingham, Mass.
03888	Pyrofilm Resistor Co.		08289	Blinn, Delbert Co.	Pomona, Cal.	15818	Amelco Inc.	Mountain View, Cal.
	Inc.	Cedar Knolls, N.J.	08358	Durgess Battery Co.		16037	Spruce Pine Mica Co.	Spruce Pine, N.C.
03954	Singer Co., Diehl Div.			Niagara Falls, Ontario, Canada		16179	Omni-Spectra Inc.	Detroit, Ill.
	Flanders Plant	Sumerville, N.J.	08524	Deutch Fastener Corp.	Los Angeles, Cal.	16352	Computer Diode Corp.	Lodi, N.J.
04009	Arrow, Hart and Hegeman		08664	Bristol Co., The	Waterbury, Conn.	16554	Electroid Co.	Union, N.J.
	Elect. Co.	Hartford, Conn.	08717	Sloan Company	Sun Valley, Cal.	16585	Boots Aircraft Nut Corp.	Pasadena, Cal.
04013	Tarus Corp.	Lambertville, N.J.	08718	ITT Cannon Electric Inc.		16688	Ideal Prec. Meter Co., Inc.	
04062	Arco Electronic Inc.	Great Neck, N.Y.		Phoenix Div.	Phoenix, Arizona		De Jur Meter Div.	Brooklyn, N.Y.
04217	Essex Wire	Los Angeles, Cal.	08727	National Radio Lab. Inc.	Paramus, N.J.	16758	DeJco Radio Div. of G. M. Corp.	Kokomo, Ind.
04222	Hi-Q Division of Aerovox	Myrtle Beach, S.C.	08792	CBS Electronics Semiconductor		17109	Thermonetics Inc.	Canoga Park, Cal.
04354	Precision Paper Tube Co.	Wheeling, Ill.		Operations, Div. of CBS Inc.	Lowell, Mass.	17474	Tranex Company	Mountain View, Cal.
04404	Palo Alto Division of Hewlett-		08806	General Electric Co.		17675	Hamilin Metal Products Corp.	Akron, Ohio
	Packard Co.	Palo Alto, Cal.		Miniature Lamp Dept.	Cleveland, Ohio	17745	Angstrom Prec. Inc.	No. Hollywood, Cal.
04651	Sylvania Electric Products		08984	Mel-Rain	Indianapolis, Ind.	17856	Siliconix Inc.	Sunnyvale, Cal.
	Microwave Device Div.	Mountain View, Cal.	09026	Bubcock Re'lys Div.	Costa Mesa, Cal.	17870	McGraw-Edison Co.	Manchester, N.H.
04673	Dakota Engr. Inc.	Culver City, Cal.	09097	Electronic Enclosures Inc.	Los Angeles, Calif.	18042	Power Design Pacific Inc.	Palo Alto, Cal.
04713	Motorola Inc. Semiconductor		09134	Texas Capacitor Co.	Houston, Texas	18083	Clevite Corp. Semiconductor Div.	Palo Alto, Cal.
	Prod. Div.	Phoenix, Arizona	09145	Tech. Ind. Inc. Atcham		18324	Signetics Corp.	Sunnyvale, Cal.
04732	Filttron Co., Inc. Western			Elect.	Burbank, Cal.	18476	Ty-Car Mfg. Co., Inc.	Holliston, Mass.
	Div.	Culver City, Cal.	09250	Electro Assemblies, Inc.	Chicago, Ill.	18486	TRW Elect. Comp. Div.	Des Plaines, Ill.
04773	Automatic Electric Co.	Northlake, Ill.	09353	C & K Components Inc.	Newton, Mass.	18565	Chomerics	Plainville, Mass.
04796	Sequela Wire Co.	Redwood City, Cal.	09569	Mallory Battery Co. of		18583	Curtis Instrument, Inc.	Mt. Kisco, N.Y.
04811	Precision Coil Spring Co.	El Monte, Cal.		Canada, Ltd.	Toronto, Ontario, Canada	18612	Vishay Instruments Inc.	Malvern, Pa.
04870	P. M. Motor Company	Westchester, Ill.	09795	Pennsylvania Fluorocarbon	Clifton Heights, Penn.	18873	E. I. DuPont and Co., Inc.	Wilmington, Del.
04919	Component Mfg. Service		09922	Burndy Corp.	Norwalk, Conn.	18911	Durant Mfg. Co.	Milwaukee, Wis.
	Co.	W. Bridgewater, Mass.	10214	General Transistor Western		19315	The Bendix Corp., Navigation &	
05006	Twentieth Century Plastics			Corp.	Los Angeles, Cal.		Control Div.	Teterboro, N.J.
	Inc.	Los Angeles, Cal.	10411	Ti-Tal, Inc.	Berkeley, Cal.	19500	Thomas A. Edison Industries	West Orange, N.J.
05277	Westinghouse Electric Corp.		10646	Carborundum Co.	Niagara Falls, N.Y.	19589	Concoa	Baldwin Park, Cal.

00015-49
Revised: May, 1970

From: Handbook Supplements
H4-1 Dated January 1970

CODE LIST OF MANUFACTURERS (Continued)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
19644	LRC Electronics	Horseheads, N.Y.	71482	C. P. Clare & Co.	Chicago, Ill.	78452	Thompson-Bremer & Co.	Chicago, Ill.
19701	Electra Mfg. Co.	Independence, Kansas	71500	Centralab Div. of		78451	Tilley Mfg. Co.	San Francisco, Cal.
20183	General Altronics Corp.	Philadelphia, Pa.		Globe Union Inc.	Milwaukee, Wis.	78488	Stackpole Carbon Co.	St. Marys, Pa.
21226	Executone, Inc.	Long Island City, N.Y.	71516	Commercial Plastics Co.	Chicago, Ill.	78493	Standard Thomson Corp.	Waltham, Mass.
21355	Fafnir Bearing Co., The	New Britain, Conn.	71700	Cornish Wire Co., The	New York, N.Y.	78553	Tinnerman Products, Inc.	Cleveland, Ohio
21520	Fansteel Metallurgical Corp.	N. Chicago, Ill.	71707	Coto Coil Co., Inc.	Providence, R.I.	78790	Transformer Engineers	San Gabriel, Cal.
23020	General Rued Co.	Metuchen, N.J.	71744	Chicago Miniature Lamp Works	Chicago, Ill.	78947	Uchile Co.	Newtonville, Mass.
23042	Texscan Corp.	Indianapolis, Ind.	71785	Cinch Mfg. Co.		79136	Waldes Kohinor Inc.	Long Island City, N.Y.
23783	British Radio Electronics Ltd.	Washington, D.C.		Howard B. Jones Div.	Chicago, Ill.	79142	Veeder Root, Inc.	Hartford, Conn.
24455	G. E. Lamp Division, Nela Park	Cleveland, Ohio	71984	Dow Corning Corp.	Midland, Mich.	79251	Wenco Mfg. Co.	Chicago, Ill.
24655	General Radio Co.	West Concord, Mass.	72135	Electro Motive Mfg. Co., Inc.		79727	Continental-Wirt Electronics Corp.	
24681	Memcor Inc., Comp. Div.	Huntington Ind.			Williamantic, Conn.			Philadelphia, Pa.
26365	Gries Reproductor Corp.	New Rochelle, N.Y.	72519	Dialight Corp.	Brooklyn, N.Y.	79963	Zierick Mfg. Corp.	New Rochelle, N.Y.
26462	Grobart File Co. of America, Inc.	Carlstadt, N.J.	72556	Indiana General Corp.		80031	Mepec Division of Seasons Clock Co.	
26831	Compac/Hollister Co.	Hollister, Cal.		Electronics Div.	Kenaby, N.J.	80033	Prestole Corp.	Morrisstown, N.J.
26992	Hamilton Watch Co.	Lancaster, Pa.	72799	General Instrument Corp.,		80120	Schnitzer Alloy Products Co.	Ellenbeth, N.J.
26480	Hewlett-Packard Co.	Palo Alto, Cal.		Cap Division	Newark, N.J.	80131	Electronic Industries Association.	
28520	Heyman Mfg. Co.	Kenilworth, N.J.	72765	Drake Mfg. Co.	Harwood Heights, Ill.		Standard tube or semi-conductor device,	
30817	Instrument Specialties Co.,		72825	Hugh H. Eby Inc.	Philadelphia, Pa.		any manufacturer.	
	Inc.	Little Falls, N.J.	72928	Gudeman Co.	Chicago, Ill.	80207	Unimax Switch, Div. Maxon Electronics	
33173	G. E. Receiving Tube Dept.	Owensboro, Ky.	72962	Elastic Stop Nut Corp.	Union, N.J.		Corp.	Wallingford, Conn.
35434	Lectrom Inc.	Chicago, Ill.	72964	Robert M. Hadley Co.	Los Angeles, Cal.	80223	United Transformer Corp.	New York, N.Y.
36196	Stanwyck Coil Products,		72982	Erle Technological Products, Inc.	Erie, Pa.	80248	Oxford Electric Corp.	Chicago, Ill.
	Ltd.	Hawkesbury, Ontario, Canada	73061	Hansen Mfg. Co., Inc.	Princeton, Ind.	80294	Bourne Inc.	Riverside, Cal.
36287	Jurmingham, W. H. & Hill,		73076	H. M. Harper Co.	Chicago, Ill.	80411	Arco Div. of Robertshaw Controls Co.	
	Ltd.	Toronto, Ontario, Canada	73138	Helipot Div. of Beckman Inst., Inc.				Columbus, Ohio
37942	P. R. Mallory & Co., Inc.	Indianapolis, Ind.			Fullerton, Cal.	80486	All Star Products Inc.	Defiance, Ohio
39543	Mechanical Industries Prod. Co.	Akron, Ohio	73293	Hughes Products Division of		80509	Avery Label Co.	Monrovia, Cal.
40920	Miniature Precision Bearings, Inc.	Keene, N.H.		Hughes Aircraft Co.	Newport Beach, Cal.	80583	Hammarlund Co., Inc.	Mary Hill, N.C.
40931	Honeywell Inc.	Minneapolis, Minn.	73445	Amperex Elect. Co.	Hicksville, L.I., N.Y.	80640	Stevens, Arnold, Co., Inc.	Boston, Mass.
42190	Muter Co.	Chicago, Ill.	73506	Bradley Semiconductor Corp.		80813	Dimeo Gray Co.	Dayton, Ohio
43990	C. A. Norgren Co.	Englewood, Colo.			New Haven, Conn.	81030	International Inst. Inc.	Orange, Conn.
44655	Ohmite Mfg. Co.	Skokie, Ill.	73559	Carling Electric, Inc.	Hartford, Conn.	81073	Grayhill Co.	LaGrange, Ill.
46384	Penn Eng. & Mfg. Corp.	Doylestown, Pa.	73586	Circle F Mfg. Co.	Trenton, N.J.	81095	Triad Transformer Corp.	Venice, Cal.
47964	Polaroid Corp.	Cambridge, Mass.	73682	George K. Garrett Co.		81312	Winchester Elec. Div. Litton Ind., Inc.	
48620	Precision Thermometer &			Div. MSI Industries, Inc.	Philadelphia, Pa.			Oakville, Conn.
	Inst. Co.	Southampton, Pa.	73734	Federal Screw Products, Inc.	Chicago, Ill.	81349	Military Specification	
49956	Microwave & Power Tube Div.	Waltham, Mass.	73743	Fischer Special Mfg. Co.	Cincinnati, Ohio	81483	International Rectifier Corp.	El Segundo, Cal.
52090	Hovan Controller Co.	Westminster, Md.	73793	General Industries Co., The	Elyria, Ohio	81541	Alrpa Electronics, Inc.	Cambridge, Maryland
52983	HP Co., Med. Elec. Div.	Waltham, Mass.	73846	Goshen Stamping & Tool Co.	Goshen, Ind.	81860	Barry Controls, Div. Barry Wright Corp.	
54294	Shallcross Mfg. Co.	Selma, N.C.	73899	JFD Electronics Corp.	Brooklyn, N.Y.			Watertown, Mass.
55026	Simpson Electric Co.	Chicago, Ill.	73905	Jennings Radio Mfg. Corp.	San Jose, Cal.	82042	Carter Precision Electric Co.	Skokie, Ill.
55933	Sonotone Corp.	Elmsford, N.Y.	73957	Groove-Pin Corp.	Ridgely, N.J.	82047	Speer Faraday Inc., Copper Hewitt	
55938	Raytheon Co. Commercial Apparatus		74276	Signalite Inc.	Neptune, N.J.		Electric Div.	Hoboken, N.J.
	& System Div.	So. Norwalk, Conn.	74455	J. H. Winns, and Sons	Winchester, Mass.	82116	Electric Regulator Corp.	Norwalk, Conn.
56137	Spaulding Fibre Co., Inc.	Tonawanda, N.Y.	74861	Industrial Condenser Corp.	Chicago, Ill.	82142	Jellera Electronics Division of	
56289	Sprague Electric Co.	North Adams, Mass.	74868	R. F. Products Division of			Speer Carbon Co.	Du Bois, Pa.
58474	Superior Elect. Co.	Bristol, Conn.		Amphenol-Borg Electronic Corp.		82170	Fairchild Camera & Inst. Corp.	
58446	Telex Corp.	Tulsa, Okla.	74970	E. F. Johnson Co.	Danbury, Conn.		Space & Defense Systems Div.	Paramus, N.J.
59730	Thomas & Betts Co.	Elizabeth, N.J.	75042	International Resistance Co.	Philadelphia, Pa.	82209	Magurie Industries, Inc.	Greenwich, Conn.
60741	Triplett Electrical Inst. Co.	Bluffton, Ohio	75263	Keystone Carbon Co., Inc.	St. Marys, Pa.	82219	Sylvania Electric Prod., Inc.	
61775	Union Switch and Signal Div. of		75376	CTS Knights, Inc.	Sandwich, Ill.		Electronic Tube Division	Emporium, Pa.
	Westinghouse Air Brake Co.	Pittsburgh, Pa.	75382	Kulka Electric Corp.	Mt. Vernon, N.Y.	82376	Astron Corp.	East Newark, Harrison, N.J.
62119	Universal Electric Co.	Owosso, Mich.	75819	Lenz Electric Mfg. Co.	Chicago, Ill.	82389	Switchcraft, Inc.	Chicago, Ill.
63743	Ward-Leonard Electric Co.	Mt. Vernon, N.Y.	75915	Littlefuse, Inc.	Des Plaines, Ill.	82647	Metals & Controls Inc.	
64959	Western Electric Co., Inc.	New York, N.Y.	76005	Lord Mfg. Co.	Erie, Pa.		Spencer Products	Attleboro, Mass.
65092	Weston Inst. Inc.	Weston-Newark, Newark, N.J.	76210	C.W. Marwedel	San Francisco, Cal.	82768	Phillips-Advance Control Co.	Joliet, Ill.
66295	Witte Mfg. Co.	Chicago, Ill.	76433	General Instrument Corp.		82863	Research Products Corp.	Madison, Wis.
66346	Minnesota Mining & Mfg. Co.			Nicomol Division	Newark, N.J.	82877	Rolton Mfg. Co., Inc.	Woodstock, N.Y.
	Reverse Mincom Div.	St. Paul, Minn.	76487	James Millen Mfg. Co., Inc.	Malden, Mass.	82893	Vector Electronic Co.	Glendale, Cal.
70276	Allen Mfg. Co.	Hartford, Conn.	76493	J.W. Miller Co.	Los Angeles, Cal.	83058	Carr Fastener Co.	Cambridge, Mass.
70309	Allied Control	New York, N.Y.	76530	Cinch-Monadnock, Div. of United Carr		83086	New Hampshire Ball	
70318	Allmetal Screw Product Co., Inc.			Fastener Corp.	San Leandro, Cal.		Bearing, Inc.	Peterborough, N.H.
		Garden City, N.Y.	76545	Mueller Electric Co.	Cleveland, Ohio	83125	General Instrument Corp.	
70417	Amplex, Div. of Chrysler Corp.	Detroit, Mich.	76703	National Union	Newark, N.J.		Capacitor Div.	Darlington, S.C.
70485	Alliant India Rubber Works, Inc.	Chicago, Ill.	76854	Oak Manufacturing Co.	Crystal Lake, Ill.	83148	ITT Wire and Cable Div.	Los Angeles, Cal.
70563	Amperite Co., Inc.	Union City, N.J.	77068	The Bendix Corp.		83186	Victory Eng. Corp.	Springfield, N.J.
70674	ADC Products Inc.	Minneapolis, Minn.		Electrodynamics Div.	N. Hollywood, Cal.	83298	Bendix Corp., Red Bank Div.	Red Bank, N.J.
70503	Belden Mfg. Co.	Chicago, Ill.	77075	Pacific Metals Co.	San Francisco, Cal.	83315	Hobbs Corp.	Mundelein, Ill.
70998	Bird Electric Corp.	Cleveland, Ohio	77221	Phasotron Instrument and		83324	Rosan Inc.	Newport Beach, Cal.
71002	Birnbach Radio Co.	New York, N.Y.		Electronic Co.	So. Pasadena, Cal.	83330	Smith, Herman H., Inc.	Brooklyn, N.Y.
71034	Bliley Electric Co., Inc.	Erie, Pa.	77252	Philadelphia Steel and		83332	Tech Labs	Palisades Park, N.Y.
71041	Boston Gear Works Div. of			Wire Corp.	Philadelphia, Pa.	83385	Central Screw Co.	Chicago, Ill.
	Murray Co. of Texas	Quincey, Mass.	77342	American Machine & Foundry Co.		83501	Gavitt Wire and Cable Co., Div. of	
71218	Bud Radio, Inc.	Willoughby, Ohio		Potter & Brumfield Div.	Princeton, Ind.		Amerace Corp.	Brookfield, Mass.
71279	Cambridge Thermionics Corp.	Cambridge, Mass.	77630	TRW Electronic Components Div.	Camden, N.J.	83594	Burroughs Corp., Electronic	
71286	Camloc Fastener Corp.	Paramus, N.J.	77638	General Instrument Corp.			Tube Div.	Plainfield, N.J.
71313	Cardwell Condenser Corp.			Rectifier Division	Brooklyn, N.Y.	83740	Union Carbide Corp., Consumer	
		Lindenhurst, L.I., N.Y.	77764	Resistance Products Co.	Harrisburg, Pa.		Prod. Div.	New York, N.Y.
71400	Bussmann Mfg. Div. of		77969	Rubbercraft Corp. of Calif.	Torrance, Cal.	83777	Model Eng. and Mfg., Inc.	Huntington, Ind.
	McGraw-Edison Co.	St. Louis, Mo.	78189	Shakeproof Division of		83821	Lloyd Scruggs Co.	Festus, Mo.
71436	Chicago Condenser Corp.	Chicago, Ill.		Illinois Tool Works	Elgin, Ill.	83942	Aeronautical Inst. & Radio Co.	Lodi, N.J.
71447	Calif. Spring Co., Inc.	Pico-Rivera, Cal.	78277	Sigma	So. Braintree, Mass.	84171	Arco Electronics Inc.	Great Neck, N.Y.
71450	CTS Corp.	Elkhart, Ind.	78283	Signal Indicator Corp.	New York, N.Y.	84396	A.J. Giesener Co., Inc.	San Francisco, Cal.
71484	ITT Cannon Electric Inc.	Los Angeles, Cal.	78290	Struthers-Dunn Inc.	Pitman, N.J.	84411	TRW Capacitor Div.	Ogallala, Neb.
71471	Cinema, Div. Aerovox Corp.	Burbank, Cal.						

CODE LIST OF MANUFACTURERS (Continued)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
94870	Sarkis Tarran, Inc.	Bloomington, Ind.	91920	Honeywell Inc., Micro Switch Division	Freeport, Ill.	96095	Hi-Q Div. of Aerovox Corp.	Olean, N.Y.
95454	Boonton Molding Company	Boonton, N.J.			Oakland, Cal.	96286	Thordarson-Melssner Inc.	Mt. Carmel, Ill.
95471	A. B. Boyd Co.	San Francisco, Cal.	91961	Nahn Bros. Spring Co.	Peabody, Mass.	96296	Solar Mfg. Co.	Los Angeles, Cal.
95474	R. M. Bracamonte & Co.	San Francisco, Cal.	92180	Tru-Connector Corp.	Rochester, N.Y.	96396	Microswitch, Div. of	Freeport, Ill.
95660	Kolled Kords, Inc.	Hamden, Conn.	92367	Elgeet Optical Co., Inc.	Tarrytown, N.Y.		Minn.-Honeywell	Chicago, Ill.
95911	Seamless Rubber Co.	Chicago, Ill.	92607	Tensolite Insulated Wire Co., Inc.	Westbury, L.I., N.Y.	96330	Carlton Screw Co.	Chicago, Ill.
96174	Fafnir Bearing Co.	Los Angeles, Calif.			Kearney, N.J.	96341	Microvase Associates, Inc.	Burlington, Mass.
96197	Clifton Precision Products Co., Inc.	Clifton Heights, Pa.	92702	IMC Magnetics Corp.	Westbury, L.I., N.Y.	96501	Excel Transformer Co.	Oakland, Cal.
96579	Precision Rubber Products Corp.	Dayton, Ohio	92966	Hudson Lamp Co.	Woburn, Mass.	96506	Xcelite, Inc.	Orchard Park, N.Y.
96684	Radio Corp. of America, Electronic Comp. & Devices Division	Harrison, N.J.	93332	Sylvania Electric Prod. Inc., Semiconductor Div.	Philaides Park, N.J.	96733	San Fernando Elec. Mfg. Co.	San Fernando, Cal.
96928	Seastrom Mfg. Co.	Glendale, Cal.	93410	Stemco Controls, Div. of Essex Wire Corp.	Long Island, N.Y.	96841	Thomson Ind. Inc.	Long Island, N.Y.
97034	Marco Industries	Anaheim, Cal.			Livingston, N.J.	97464	Industrial Retaining Ring Co.	Irrington, N.J.
97218	Philco Corporation (Lansdale Division)	Lansdale, Pa.	93632	Waters Mfg. Co.	Bayonne, N.J.	97539	Automatic & Precision Mfg.	Englewood, N.J.
97473	Western Fibrous Glass Products Co.	San Francisco, Cal.	93929	G. V. Controls	Quincy, Mass.	97579	Recon Resistor Corp.	Yonkers, N.Y.
97664	Van Waters & Rogers Inc.	San Francisco, Cal.	94137	General Cable Corp.	Quincy, Mass.	97983	Litton System Inc., Adler-Westrex Commun. Div.	New Rochelle, N.Y.
97930	Tower Mfg. Corp.	Providence, R.I.	94144	Ravineon Co., Comp. Div., Ind. Comp. Operations	Quincy, Mass.	98141	R-Tronics, Inc.	Jamaica, N.Y.
98140	Cutler-Hammer, Inc.	Lincoln, Ill.	94148	Scientific Electronics Products, Inc.	Loveland, Colo.	98159	Rubber Tech, Inc.	Gardena, Cal.
98220	Gould-National Batteries, Inc.	St. Paul, Minn.	94154	Wagner Elect. Corp.	Loveland, Colo.	98220	Hewlett-Packard Co., Medical Elec. Div.	Pasadena, Cal.
98598	General Mills, Inc.	Buffalo, N.Y.			Newark, N.J.	98278	Microdot, Inc.	So. Pasadena, Cal.
99231	Graybar Electric Co.	Oakland, Cal.	94197	Tung-Sol Div., Curtiss-Wright Corp., Electronics Div.	East Patterson, N.J.	98291	Sealectro Corp.	Mamaroneck, N.Y.
99473	G.E. Distributing Corp.	Schenectady, N.Y.	94222	South Chester Corp.	Chesler, Pa.	98376	Zero Mfg. Co.	Burbank, Cal.
99479	Security Co.	Detroit, Mich.	94330	Wire Cloth Products, Inc.	Bellwood, Ill.	98410	Etc Inc.	Cleveland, Ohio
99665	United Transformer Co.	Chicago, Ill.	94375	Automatic Metal Products Co.	Brooklyn, N.Y.	98731	General Mills Inc., Electronics Div.	Minneapolis, Minn.
99930	United Shoe Machinery Corp.	Beverly, Mass.	94682	Worcester Pressed Aluminum Corp.	Worcester, Mass.	98734	Pasco Division of Hewlett-Packard Co.	Palo Alto, Cal.
99979	U. S. Rubber Co., Consumer Ind. & Plastics Prod. Div.	Pataskie, N.J.	94696	Magnecraft Electric Co.	Chicago, Ill.	98821	North Hills Electronics, Inc.	Glen Cove, N.Y.
99986	Belleville Speciality Tool Mfg., Inc.	Belleville, Ill.	95023	George A. Philbrick Researches, Inc.	Boston, Mass.	98878	International Electronic Research Corp.	Burbank, Cal.
99983	United Carr Fastener Corp.	Chicago, Ill.	95146	Alco Elect. Mfg. Co.	Lawrence, Mass.	99109	Columbia Technical Corp.	New York, N.Y.
99970	Bearing Engineering Co.	San Francisco, Cal.	95236	Allies Products Corp.	Dania, Fla.	99313	Varian Associates	Palo Alto, Cal.
99146	ITT Cannon Elect. Inc., Salem Div.	Salem, Mass.	95238	Continental Connector Corp.	Woodside, N.Y.	99378	Atlas Corp.	Winchester, Mass.
99160	Connor Spring Mfg. Co.	San Francisco, Cal.	95263	Levercraft Mfg. Co., Inc.	Long Island, N.Y.	99515	Marshall Ind., Capacitor Div.	Monrovia, Cal.
99145	Miller Dial & Nameplate Co.	El Monte, Cal.	95265	National Coil Co.	Sheridan, Wyo.	99707	Control Switch Division, Controls Co. of America	El Segundo, Cal.
99148	Radio Materials Co.	Chicago, Ill.	95275	Vitramon, Inc.	Bridgeport, Conn.	99800	Delevan Electronics Corp.	East Aurora, N.Y.
991506	Augat Inc.	Attleboro, Mass.	95348	Gordas Corp.	Bloomfield, N.J.	99845	Wilco Corporation	Indianapolis, Ind.
991537	Dale Electronics, Inc.	Columbus, Nebr.	95354	Method Mfg. Co.	Rolling Meadows, Ill.	99928	Branson Corp.	Whippany, N.J.
991562	Elco Corp.	Willow Grove, Pa.	95566	Arnold Engineering Co.	Marengo, Ill.	99934	Rembrandt, Inc.	Boston, Mass.
991573	Epiphone Inc.	New York, N.Y.	95712	Dage Electric Co., Inc.	Franklin, Ind.	99942	Hoffman Electronics Corp., Semiconductor Division	El Monte, Cal.
991737	Gremar Mfg. Co., Inc.	Wakefield, Mass.	95984	Siemon Mfg. Co.	Wayne, Ill.	99957	Technology-Instrument Corp. of California	Newbury Park, Cal.
991827	K F Development Co.	Redwood City, Cal.	95987	Weckesser Co.	Chicago, Ill.			
991886	Malco Mfg., Inc.	Chicago, Ill.	96067	Microwave Assoc., West, Inc.	Sunnyvale, Cal.			

The following HP Vendors have no number assigned in the latest supplement to the Federal Supply Code for Manufacturers Handbook.

0000F	Malco Tool and Die	Los Angeles, Calif.	000CS	Hewlett-Packard Co., Colorado Springs Div.	Colorado Springs, Colorado	000QQ	Cooltron	Oakland, Cal.
0000Z	Willow Leather Products Corp.	Newark, N.J.	000MM	Rubber Eng. & Development	Hayward, Cal.	000WW	California Eastern Lab.	Burlington, Cal.
000AB	ETA	England	000NN	A "N" D Mfg. Co.	San Jose, Cal.	000YY	S.K. Smith Co.	Los Angeles, Cal.
000BB	Precision Instrument Comp. Co.	Van Nuys, Cal.						

MANUAL BACKDATING CHANGES

MODEL 419A

DC NULL VOLTMETER

This manual backdating sheet makes this manual applicable to earlier instruments. Instrument-component values that differ from those in the manual, yet are not listed in the backdating sheet, should be replaced using the part number given in the manual.

Instrument Serial Prefix	Make Manual Changes	Instrument Serial Prefix	Make Manual Changes
646-	1, 5, 6	below 948-03336	5, 6
532-0401 and above	1, 2, 5, 6	All	6
532-0400 and below	1, 2, 3, 5, 6		
514-	1, 2, 3, 4, 5, 6		

CHANGE 1

Figures 6-1 and 6-3: Substitute Figures C-1 and C-2 for the ones in Figures 6-1 and 6-3.

Table 7-1: Change all "A4" reference designators to "A1."

Change -hp- Part No. of A1 to 00419-66504.

Change A1C13 to -hp- Part No. 0180-0022, C: fxd, elect 3.9 μ F 35 vdcw.

Delete A1C14 thru A1C17.

Change "A1C1" thru A1C16" to "A1CR1 thru A1CR14."

Change A1R to -hp- Part No. 0686-3055, R: fxd comp 3 M Ω $\pm$ 5% 1/2 W.

Change A1R41 thru A1R44 to -hp- Part No. 2100-1410, R: var lin 20 k Ω $\pm$ 30% 1/8 W.

Change A1R48 to -hp- Part No. 0687-6821, R: fxd comp 6.8 k Ω $\pm$ 10% 1/2 W.

Delete A1R50 and A1R51.

Add C1, -hp- Part No. 0180-0283, C: fxd A1 elect 60 μ F +75% -10% 10 vdcw.

CHANGE 2

Table 7-1: Change J2 to -hp- Part No. 1510-0010.

Change J3 to -hp- Part No. 1510-0011.

Change J5 to -hp- Part No. 1510-0026.

Change J6 to -hp- Part No. 1510-0027.

If BT5 battery holder (-hp- Part No. 00419-66401) is replaced, a new right shield (as viewed from rear of instrument) -hp- Part No. 00419-00603 must be installed. The new battery holder is not compatible with the old right shield.

CHANGE 3

Figure 6-3: Change A1R26* (10 K) to A1R26* (22 K).

Move A1R26 between A1CR3 and 4 and Q8 Base.

Delete C10 (3.7 μ F) in emitter of Q12 and Q13.

Add C10 (20 μ F) between A1-13 and

Short R40 (100 Ω) in base of Q10.

Add R40 (39 k Ω) between A1C13 and A1R39.

Table 7-1: Change A1C10 to C: fxd A1 elect 20 μ F +75% -10% 25 vdcw; -hp- Part No. 0180-0045.

Change A1R26* to R: fxd 22 K $\pm$ 10% 1/2 W; -hp- Part No. 0687-1031.

Change A1R40 to R: fxd 39 K $\pm$ 10% 1/2 W; -hp- Part No. 0687-3931.

MANUAL BACKDATING CHANGES

CHANGE 4

Change Paragraph 5-34 steps d and e as follows:

d. A2R12, CHOPPER CURRENT, affects both the chopper frequency and current. Adjust A2R12 for waveshape shown in Figure 5-3 with peak amplitude of 140 to 160 mV and frequency of 320 to 340 pps (this corresponds to chopper rate of 160 to 170 pps as counter also counts smaller pulses).

e. . . . A1R26 should be between 10 k Ω and 39 k Ω with a typical value of 22 k Ω .

Figure 6-4: Substitute Figure C-3 and C-4 for the ones in Figure 6-4.

Table 7-1: Change A2Q1 to -hp- Part No. 1854-0039, Transistor: NPN, Si, 2N3053
 Change A2Q2, A2Q3 to -hp- Part No. 1854-0033, Transistor: NPN, Si, 2N2925
 Change A2Q4, A2Q5 to -hp- Part No. 1854-0039, Transistor: NPN, Si, 2N3053
 Change A2R1 to -hp- Part No. 0687-5611, R: fxd, comp, 560 $\Omega \pm 10\%$, 1/2 W
 Change A2R2 to -hp- Part No. 0687-6811, R: fxd, comp, 680 $\Omega \pm 10\%$, 1/2 W
 Change A2R3 to -hp- Part No. 0687-3331, R: fxd, comp, 33 k $\Omega \pm 10\%$, 1/2 W
 Change A2R4 to -hp- Part No. 0687-3321, R: fxd, comp, 3300 $\Omega \pm 10\%$, 1/2 W
 Change A2R5 to -hp- Part No. 0687-6801, R: fxd, comp, 68 $\Omega \pm 10\%$, 1/2 W
 Change A2R6 to -hp- Part No. 0687-2731, R: fxd, comp, 27 k $\Omega \pm 10\%$, 1/2 W
 Change A2R7 to -hp- Part No. 0687-4731, R: fxd, comp, 47 k $\Omega \pm 10\%$, 1/2 W
 Change A2R8, A2R9 to -hp- Part No. 0687-4701, R: fxd, comp, 47 $\Omega \pm 10\%$, 1/2 W
 Change A2R10 to -hp- Part No. 0687-1511, R: fxd, comp, 150 $\Omega \pm 10\%$, 1/2 W
 Change A2R11 to -hp- Part No. 0687-3341, R: fxd, comp, 330 k $\Omega \pm 10\%$, 1/2 W
 Change A2R12 to -hp- Part No. 2100-0227, R: var, ww, 20 $\Omega \pm 10\%$, 1-1/2 W
 Change A2T1 to -hp- Part No. 9100-0172, Transformer: power
 Change A2T2 to -hp- Part No. 9100-1314, Transformer: neon driver

CHANGE 5

Page 7-4: Change J1 Part No. to 1251-0148

Page 7-5: Change W1 Part No. to 8120-0078

Page 7-6: Change "Panel: Rear" Part No. to 00419-00202

CHANGE 6

Pages 7-5 and 7-6:

The part numbers listed in Table 7-1 for the front panel and 419A covers are for brown instruments. The part numbers for blue instruments appear below.

5000-0716	Cover: bottom
5000-0702	Cover: side
5060-0717	Cover: top
00419-00201	Panel: front


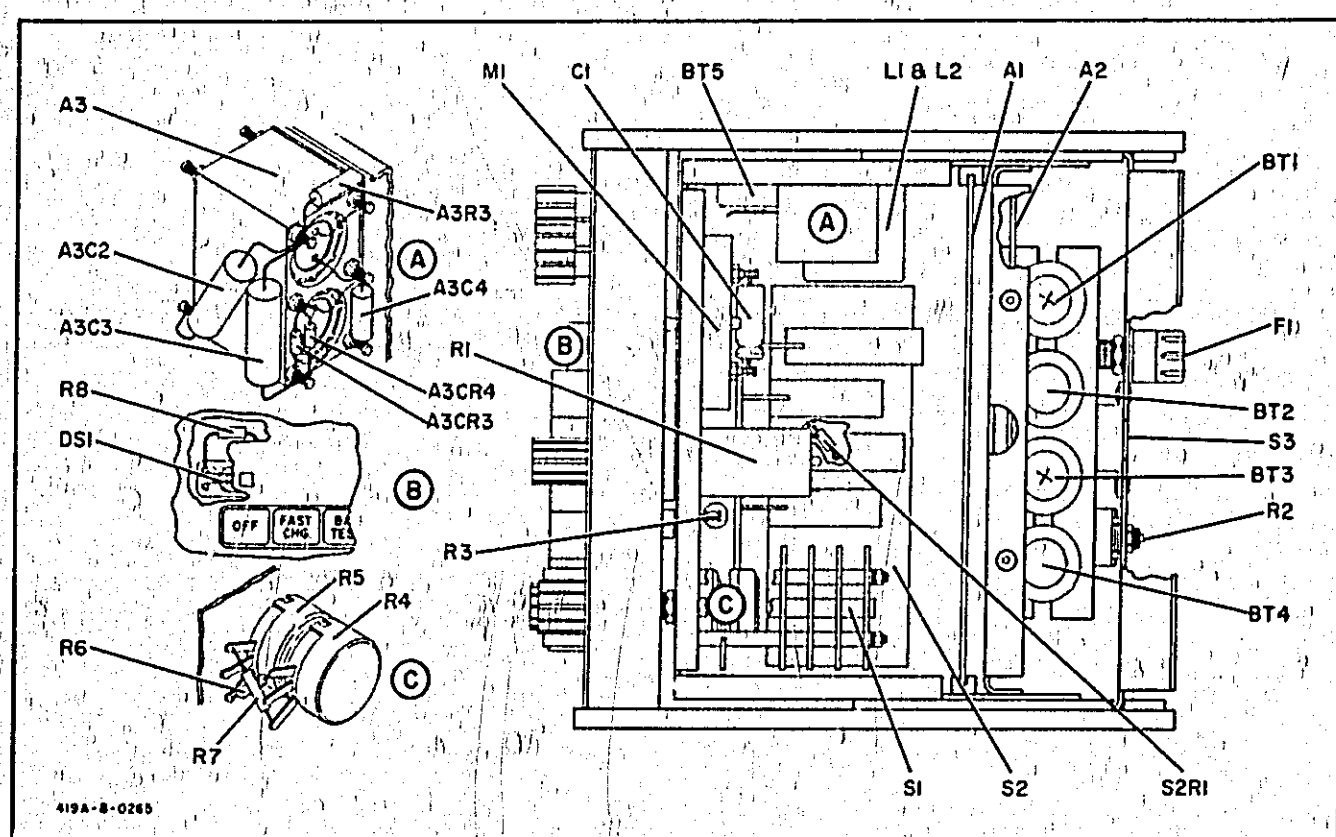


Figure C-1. Model 419A, Component Location Diagram
(Serials Prefixed 514-, 532-, 646-)

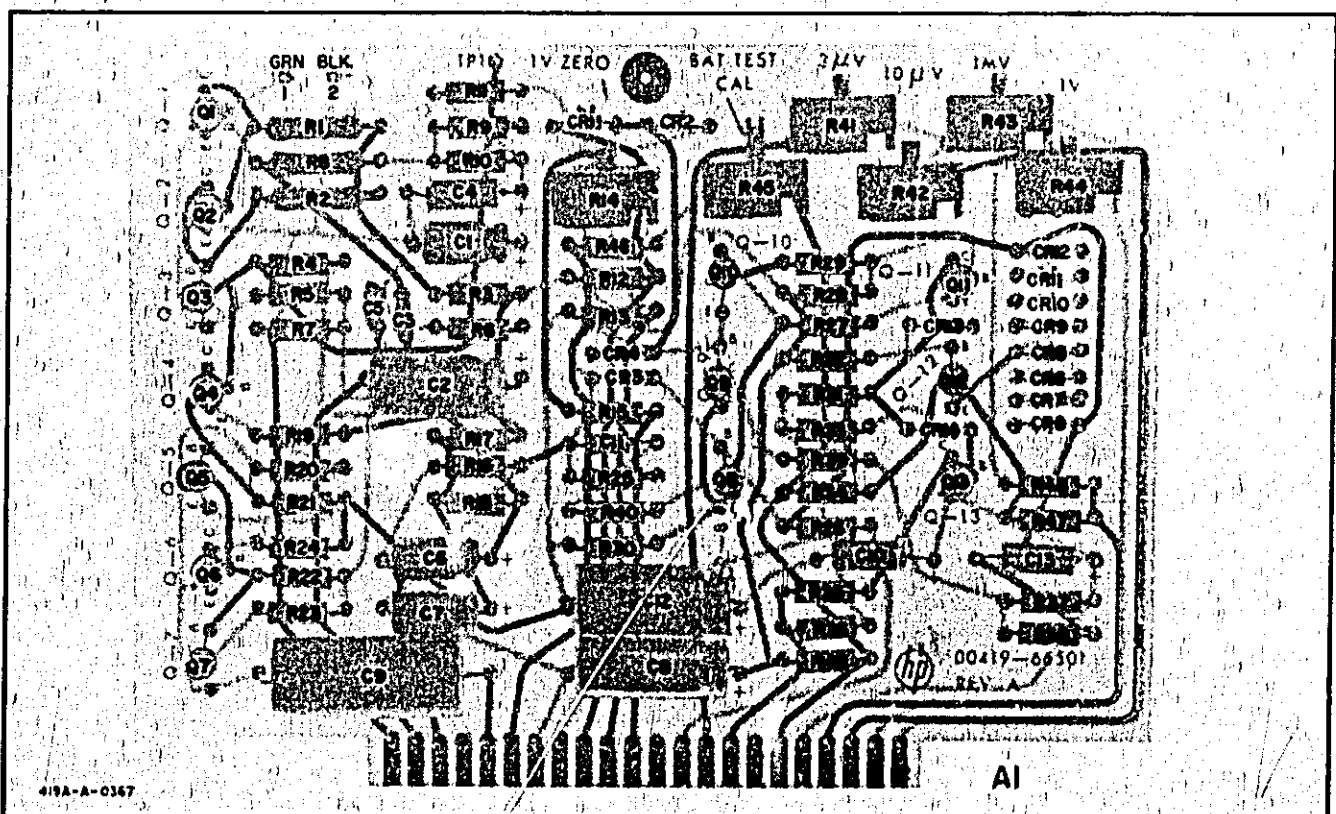

Part of Figure C2. A1 Amplifier (00419-66501)
(Serials Prefixed 514-, 532-, 646-)

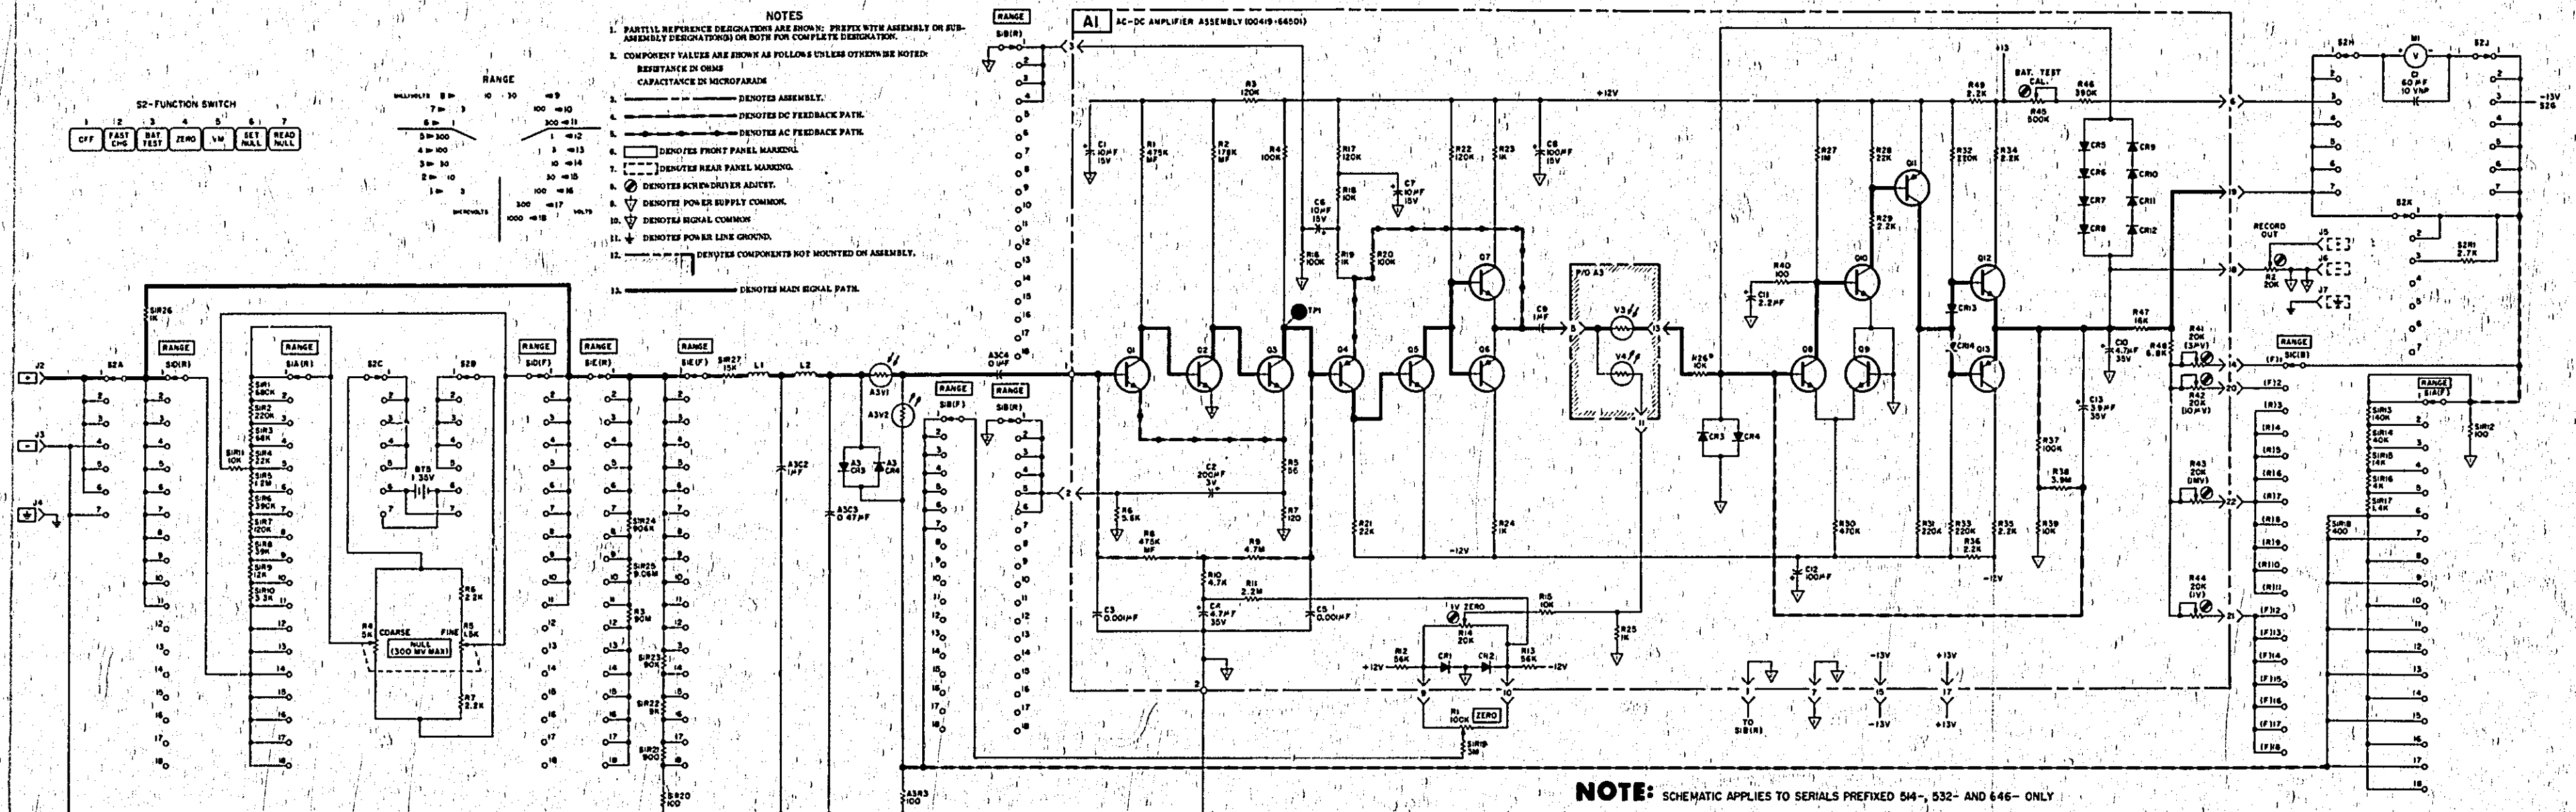


Figure C-2. Amplifier and Amplifier Switching,
Schematic and Component Location
Diagrams (Serial Prefixed 514-,
532-, 646-)



MANUAL CHANGES

Model 419A

DC NULL VOLTMETER

Manual Part No. 00419-90004

New or Revised Item

ERRATA:

Page 5-2, Para. 5-16. Delete Steps a through c and replace with the following:

- a. Connect test set-up illustrated in Figure 5-3 with 419A in battery operation. Do not connect oscillator.

NOTE

If oscillator with 50 Ω output impedance is used, R2 must be changed to 50 $\Omega \pm 1\%$, -hp- Part No. 0698-5068 or 11048C 50 Ω Feedthru termination.

- b. Ground 419A chassis to oscillator chassis ground.
- c. Set 419A RANGE to 30 μ V. Depress ZERO pushbutton and zero meter.
- d. Depress SET NULL pushbutton; set NULL to read +0.9 on the top scale.
- e. Set oscillator frequency to 60 Hz. Connect oscillator to test set-up. Adjust output of oscillator to provide 1.5 V rms across R2.
- f. Model 419A reading should return to +0.9 $\pm$ 1 division on the top scale after the initial transient.

Performance Check Test Card at the end of Section V.

Change 419A Range and Test Limits for superimposed AC Rejection test to 30 μ V and < 1 division change, respectively.

Table 7-1. Replaceable Parts.

Change A2R5 to Part No. 2100-2550.
Change A2R9 to Part No. 2100-2454.
Change A3A1 to Part No. 1990-0202.
Change A4R14 to Part No. 2100-2550.
Change A4R41 thru A4R44 to Part No. 2100-2476.
Change A4R45 to Part No. 2100-2551.
Change DS1 to DS1, DS2; TQ = 2.
Change Knob: Pushbutton rectangular gray plastic to Part No. 0370-1390.
Add Spacer: Black (around RANGE switch), Part No. 5040-0701.

CHANGE NO. 1 applies to serial numbers 0948A05301 and greater.

Page 7-4, Table 7-1. Change the -hp- Part Numbers and descriptions of the following:

J2, J3	1510-0535	Bdg Post Assy (grey/red)
	0340-0750	Insulator (large)
	0340-0752	Insulator
J4, J7	1510-0107	Bdg Post Assy (grey/black)
J6, J5	1510-0091	Bdg Post Assy (grey/red)
J8	1510-0038	Bdg Post Single

Page 7-6, Table 7-1. Change the -hp- Part Numbers to the following:

Panel: rear, 00419-00206
Shield: front, 00419-00607
Shield: rear, 00419-00608
Shield: side left, 00419-00610
Shield: side right, 00419-00609

ERRATA:

Page 5-1, Paragraph 5-8. Between Steps a and b add the following note:

NOTE

In Steps 1 through 4 of Table 5-2 it is necessary to zero the Model 419A for each measurement. This can be accomplished by turning off the 738BR and adjusting the zero control on the 419A for "0" at center scale. The 738BR can then be turned on and the measurement made as outlined in Steps b and c.

CHANGE NO. 2 applies to all serial numbers prefixed 0948A.

Page 1-2. Add the following new paragraph.

1-15. Options.

1-16. Option 910. An additional Operating & Service Manual, part number 00419-90004.

Page 2-1, Section II. Add the following paragraph between 2-17 and 2-18.

Options.

Options 910. An additional Operating and Service Manual, part number 00419-90004.

CHANGE NO. 3 applies to serial numbers 0948A05830 and greater.

Page 7-4, Table 7-1. Change part number BT1 thru BT4 from 1420-0015 to 1420-0243 Δ s.

Page 7-5, Table 7-1. Change part number 5040-0615, qty 1 to 1420-0689 Δ s, qty 4 (Clamp: Battery BT1 - BT4).

22 June 1978

Supplement A for the 00419-90004

ERRATA:

Page 6-3/6-4, Figure 6-3. Change the schematic to Figure 1.

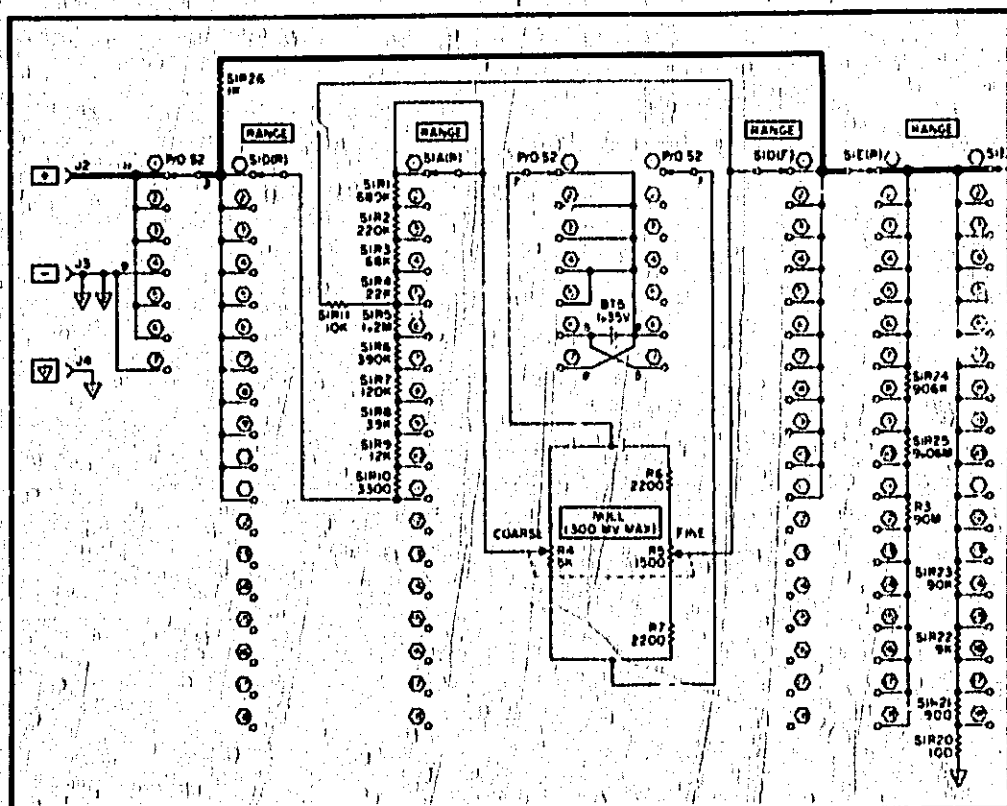


Figure 1.

CHANGE NO. 4 applies to serial numbers 0948A06038 and greater.

Page 7-2. Change A2CR1 - CR4 from -hp- part number 1901-0025 to 1901-0028 Δ s, qty 4. Diode: Pwr Rect 750 mA 400 V, mfr. code 28480, mfr. part number 1901-0028.

Change A2R2 from -hp- part number 0686-7515 to 0683-6815 Δ s, R:Fxd 680 $\Omega \pm 5\%$.25 W, mfr. code 01607, mfr. part number CB6815.

Change A2R3 from -hp- part number 0687-5611 to 0683-3015 Δ s, R:Fxd 300 $\Omega \pm 5\%$.25 W, mfr. code 01607, mfr. part number CB3015.

CHANGE NO. 5 applies to serial number 0948A06064 and greater.

Page 7-2. Add -hp- part number 9170-0894, qty 2, Core-Shielding Bead, mfr. code 28480, mfr. part number 9170-0894.

CHANGE NO. 6 applies to serial number 0948A06098 and greater.

Page 7-2. Change -hp- part number 9170-0894 to 9170-0125, qty 2, Core-Shielding Bead, mfr. code 28480, mfr. part number 9170-0125.

CHANGE NO. 7 add to Parts List Notes.

Δ s These parts were changed to accommodate the use of new batteries for serial number 0948A06830 and greater. Reference Service Notes 419A-9A and -19A-10.