

Errata

Title & Document Type: 6236A and 6237A Triple Output Power Supply Operating and Service Manual

Manual Part Number: 5950-1737

Revision Date: February 1976

About this Manual

We've added this manual to the Agilent website in an effort to help you support your product. This manual provides the best information we could find. It may be incomplete or contain dated information, and the scan quality may not be ideal. If we find a better copy in the future, we will add it to the Agilent website.

HP References in this Manual

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, life sciences, and chemical analysis businesses are now part of Agilent Technologies. The HP XXXX referred to in this document is now the Agilent XXXX. For example, model number HP8648A is now model number Agilent 8648A. We have made no changes to this manual copy.

Support for Your Product

Agilent no longer sells or supports this product. You will find any other available product information on the Agilent Test & Measurement website:

www.agilent.com

Search for the model number of this product, and the resulting product page will guide you to any available information. Our service centers may be able to perform calibration if no repair parts are needed, but no other support from Agilent is available.



Agilent Technologies



**TRIPLE OUTPUT
POWER SUPPLY
MODELS 6236A AND 6237A**

**OPERATING AND SERVICE MANUAL FOR:
MODEL 6236A, SERIALS 1507A-00141 AND ABOVE
MODEL 6237A, SERIALS 1507A-00101 AND ABOVE**

*** For Serials above 1507A-00141 or 1507A-00101,
a change page may be included.***

Howlett-Packard

HP Part No. 5950-1737

Printed: February, 1975

SECTION I GENERAL INFORMATION

1-1 INTRODUCTION

1-2 This manual covers two triple output power supply models, the 6236A and the 6237A. Both models are compact general-purpose bench supplies that are particularly useful for powering developmental IC circuits, both linear and digital. Unless one model or the other is specifically identified, all information in this manual applies to both the 6236A and the 6237A.

CAUTION

Carefully read Sections II and III of this manual before attempting to operate the power supply.

1-3 DESCRIPTION

1-4 Both models have a dual output of 0 to ± 20 volts at 0 to 0.5amps. The voltages of the two 20-volt outputs are adjusted by a single front-panel control and track one another within 1%. The +20V and -20V outputs can also be used in series for a single 0 to 40V 0.5A output. The third output differs in the two models and is 0 to +6 volts at up to 2.5amps in the 6236A and 0 to +18 volts at 0 to 1amp in the 6237A.

1-5 All controls, meters, and output terminals are located on the front panel. Two single-turn potentiometers control the +6V (or +18V) and ± 20 V outputs. A three-position meter switch selects one of the supplies for display of its voltage and current on two dual-range meters. The +6V (or +18V) and ± 20 V outputs share a common output terminal which is isolated from chassis ground.

1-6 All outputs are protected against overload or short-circuit damage. The +18V output in the 6237A and the ± 20 V outputs in both models are protected by circuits which limit output current to 110% of its nominal maximum. The overload protection circuit for the +6V output in the 6236A has a current foldback characteristic which reduces the output current as an overload increases until only 1A flows through a short circuit. For this output, the current limit depends on the output terminal voltage and varies linearly between 2.75A at 6V and 1A at zero volts.

1-7 The instrument is available in three line voltage op-

tions in addition to the standard 104-127Vac 47-63Hz split and is furnished with a permanently attached 6-foot 3-wire grounding-type line cord.

1-8 SPECIFICATIONS

1-8 Table 1-1 lists detailed specifications for the power supply.

1-10 OPTIONS

1-11 Options are factory modifications of a standard instrument that are requested by the customer. The following options are available for the instrument covered by this manual.

<u>OPTION NO.</u>	<u>DESCRIPTION</u>
100	Input Power: 87-106Vac, 47-63Hz, single-phase.
220	Input Power: 181-233Vac, 47-63Hz, single-phase.
240	Input Power: 208-260Vac, 47-63Hz, single-phase.

1-12 Before the supply is shipped from the factory, an internal line voltage selector switch is set and the proper fuse installed for the line voltage specified on the order. A label on the rear heat sink identifies the line voltage option.

CAUTION

Before applying power to the supply, make certain that its line voltage selector switch (S3) is set for the line voltage to be used. (See CAUTION notice in Paragraph 3-2 for additional information on S3).

The user can convert an instrument from one line voltage option to another, by following the instructions in Paragraph 3-4.

1-13 ACCESSORIES

1-14 The accessories listed below may be ordered from your local Hewlett-Packard field sales office either

with the power supply or separately. (Refer to the list at the rear of the manual for addresses.)

HP PART NO.	DESCRIPTION
14513A	Rack Mounting Kit for mounting one 3 1/2" high supply in a standard 19" relay rack.
14523A	Rack Mounting Kit for mounting two 3 1/2" high supplies side by side in a standard 19" relay rack.

1-15 INSTRUMENT AND MANUAL IDENTIFICATION

1-16 Hewlett-Packard power supplies are identified by a two part serial number. The first part is the serial number prefix, a number-letter combination that denotes the date of a significant design change and the country of manufac-

ture. The first two digits indicate the year (10 = 1970, 11 = 1971, etc.) the second two digits indicate the week, and the letter "A" designates the U.S.A. as the country of manufacture. The second part is the power supply serial number; a different sequential number is assigned to each power supply, starting with 00101.

1-17 If the serial number on your instrument does not agree with those on the title page of the manual, Change Sheets supplied with the manual or Manual Backdating Changes define the difference between your instrument and the instrument described by this manual.

1-18 ORDERING ADDITIONAL MANUALS

1-19 One manual is shipped with each power supply. Additional manuals may be purchased from your local Hewlett-Packard field office (see the list at the rear of this manual for addresses). Specify the model number, serial number prefix, and the HP Part number provided on the title page.

Table 1-1. Specifications, Models 6236A and 6237A

NOTE	
Specifications apply to both models unless otherwise indicated.	
INPUT POWER:	TRACKING:
Standard Option: 104-127Vac (120Vac nominal), 47-63Hz, single phase, 112W, 140VA (Other line voltage options are listed in Paragraph 1-11.)	The +20V and -20V outputs track within 1%.
DC OUTPUT AND OVERLOAD PROTECTION:	LOAD EFFECT (Load Regulation):
0 to ±20V Outputs: Maximum rated output current is 0.5A. Short circuit output current is 0.55A ±5% and a fixed current limit circuit limits the output of each supply to this maximum at any output voltage setting. Unbalanced loads within current rating are permitted.	All Outputs: Less than 0.01% plus 2mV for a full load to no load change in output current.
Model 6236A	SOURCE EFFECT (Line Regulation):
0 to +6V Output: Maximum rated output current is 2.6A at 6V. The maximum available output current decreases with the output voltage setting. A current foldback current limits the output to 2.75A ±5% at 6 volts and, with decreasing voltage, reduces the current limit linearly to 1A ±15% at zero volts (short circuited).	All Outputs: Less than 0.01% plus 2mV for any line voltage change within rating.
Model 6237A	PARD (Ripple and Noise):
0 to +18V Output: Maximum rated output current is 1.0A. Short circuit output current is 1.1A ±5% and a fixed current limit circuit limits the output to this maximum at any output voltage setting.	All Outputs: Less than 0.35mV rms and 1.5mV p-p (20 Hz to 20 MHz).
	DRIFT (Stability):
	All Outputs: Less than 0.1% plus 5mV (0 to 20 Hz) during 8 hours at constant line, load, and ambient after an initial warm-up time of 30 minutes.
	LOAD TRANSIENT RECOVERY TIME:
	All Outputs: Less than 50µsec for output recovery to within 15mV of nominal output voltage following a load change from full load to half load (or vice versa).
	OUTPUT VOLTAGE OVERSHOOT:
	All Outputs: During turn-on or turn-off of ac power, output plus overshoot will not exceed 1V if the output control is set for less than 1V. If the control is set for 1V or higher, there is no overshoot.

Table 1-1. Specifications, Models 6236A and 6237A (Continued)

<p>TEMPERATURE COEFFICIENT: All Outputs: Less than 0.02% plus 1mV voltage change per degree Celsius over the operating range from 0 to 40°C after 30 minutes warm-up.</p> <p>OUTPUT IMPEDANCE (typical) 0 to +20V Output: 0.5mΩ plus 1.5μH 0 to -20V Output: 0.5mΩ plus 1.5μH</p> <p>Model 6236A 0 to +6V Output: 0.3mΩ plus 1μH</p> <p>Model 6237A 0 to +18V Output: 0.3Ω plus 1.5μH</p> <p>Operating characteristics listed as typical and provided for the user's information only and are not warranted specifications.</p> <p>RESOLUTION: (Minimum output voltage change obtainable using front panel voltage control)</p> <p>0 to +20V Outputs: 70mV Model 6236A 0 to +6V Output: 20mV</p> <p>Model 6237A 0 to +18V Output: 70mV</p>	<p>TEMPERATURE RANGES: Operating: 0 to +40°C ambient. *At higher temperatures, output current is derated linearly to 80% at 55°C. Storage: -40°C to +75°C.</p> <p>METER RANGES: 0 to +20V Output: 0-25V, 0-0.6A 0 to -20V Output: 0-25V, 0-0.6A</p> <p>Model 6236A 0 to +6V Output: 0-7V, 0-3A</p> <p>Model 6237A 0 to +18V Output: 0-21V, 0-1.2A</p> <p>METER ACCURACY: ±1% of full scale</p> <p>DIMENSIONS: 3 15/32 H x 8 7/32 W x 12 9/16 D (88mm H x 206mm W x 319mm D)</p> <p>WEIGHT: 9.5 lb (4.3kg)</p>
---	--

SECTION II INSTALLATION

2-1 INITIAL INSPECTION

2-2 Before shipment, this instrument was inspected and found to be free of mechanical and electrical defects. As soon as the instrument is unpacked, inspect for any damage that may have occurred in transit. Save all packing materials until the inspection is completed. If damage is found, file claim with carrier immediately. The Hewlett-Packard Sales and Service office should be notified as soon as possible.

2-3 Mechanical Check

2-4 This check should confirm that there are no broken knobs or connectors, that the cabinet and panel surfaces are free of dents and scratches, and that the meter is not scratched or cracked.

2-5 Electrical Check

2-6 The instrument should be checked against its electrical specifications. Section V includes an "in-cabinet" performance check to verify proper instrument operation.

2-7 INSTALLATION DATA

2-8 The instrument is shipped ready for bench operation. Before applying power to the instrument, see the CAUTION notice in Paragraph 3-2.

2-9 Location

2-10 This instrument is air cooled. Sufficient space should be allotted so that a free flow of cooling air can reach the rear of the instrument when it is in operation. It should be used in an area where the ambient temperature does not exceed 40°C (up to 55°C with derating).

2-11 Outline Diagram

2-12 Figure 2-1 illustrates the outline shape and dimensions of this supply.

2-13 Rack Mounting

2-14 This instrument may be rack mounted in a standard 19-inch rack panel either by itself or alongside a similar unit. Figures 2-2 and 2-3 show the components of the rack mounting kits available for this power supply. Ordering information for rack mounting accessories is given in Paragraph 1-13.

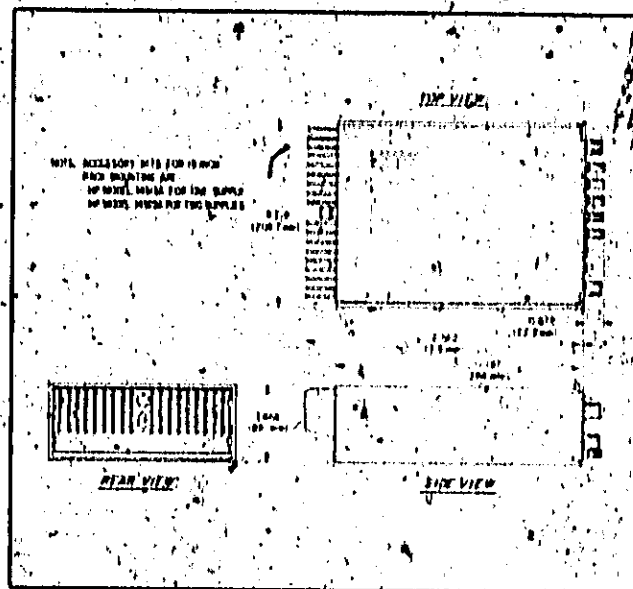


Figure 2-1. Outline Diagram

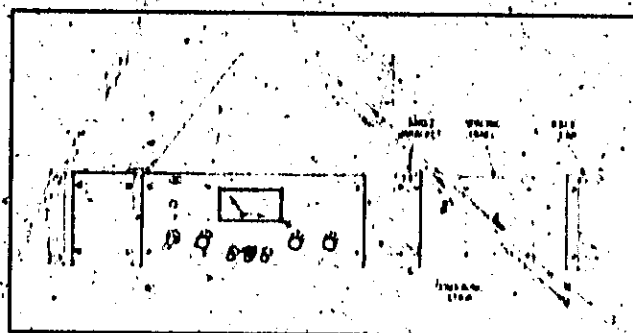


Figure 2-2. Rack Mounting, One Unit

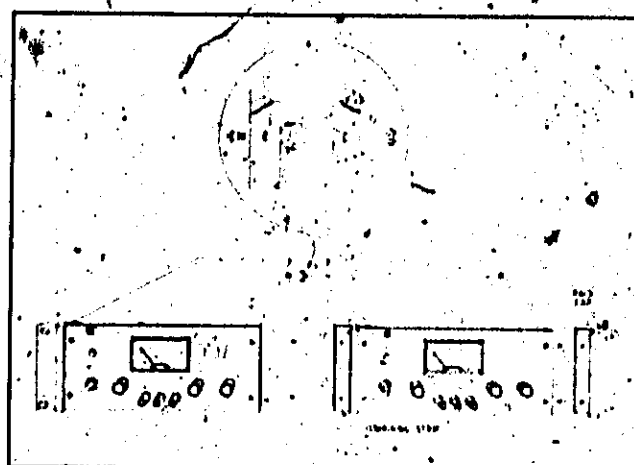


Figure 2-3. Rack Mounting, Two Units

2-15 Input Power Requirements

2-16 Depending on the line voltage option ordered, the supply is ready to be operated from one of the power sources listed in Table 2-1. The input voltage range, and the input current and power at high line voltage and full load is listed for each option. A label on the rear heat sink identifies the line voltage option of your supply. All options of this model operate from a 47-63 Hz single-phase line.

2-17 If desired, the user can easily convert the unit from any of these options to another by following the instructions in Paragraph 3-4. A unit is converted by resetting an internal line voltage selector switch, replacing the fuse, and changing the line voltage tag.

CAUTION

If the supply might possibly have been converted to a line voltage option other than the one marked on its identifying label without being relabeled in some way, check the setting of the line voltage selector switch and the fuse rating before applying power. (See CAUTION in Paragraph 3-2)

2-18 Power Cable

2-18 To protect operating personnel, the National Electrical Manufacturers Association (NEMA) recommends that the instrument panel and cabinet be grounded. This instrument is equipped with a three conductor power cable. The third conductor is the ground conductor and when the cable is plugged into an appropriate receptacle, the instrument is grounded. The offset pin on the power cable three-prong connector is the ground connection. In no event shall this instrument be operated without an adequate cabinet ground connection.

2-20 To preserve the protection feature when operating the instrument from a two-contact outlet, use a three-prong to two-prong adapter (if permitted by local regulations) and connect the green lead on the adapter to ground.

2-21 Model 6236A and 6237A supplies are equipped at the factory with a power cord plug appropriate for the user's location. Figure 2-4 illustrates the standard configurations of power cord plugs used by HP. Above each drawing is the HP option number for that configuration of power connector pins. Below each drawing is the HP part number for a replacement power cord equipped with a plug of that configuration. Notify the nearest HP Sales and Service Office if the appropriate power cord is not included with the instrument.

2-22 Repackaging for Shipment

2-22 To insure safe shipment of the instrument, it is recommended that the package designed for the instrument be used. The original packaging material is reusable. If it is not available, contact your local Hewlett-Packard field office to obtain the materials. This office will also furnish the address of the nearest service office to which the instrument can be shipped and provide the Authorized Return label necessary to expedite the handling of your instrument return. Be sure to attach a tag to the instrument which specifies the owner, model number, full serial number, and service required, or a brief description of the trouble.

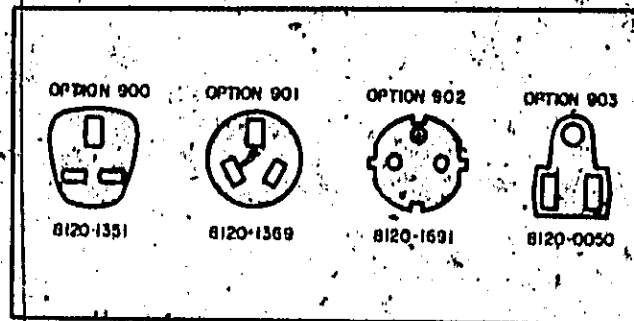


Figure 2-4. Power Cord Configurations

Table 2-1. Input Power Requirements

Option	Line Voltage Range	Input Current	Input Power
100 (100 Vac)	87-106 Vac	1.3A	140 VA
Standard (120 Vac)	104-127 Vac	1.1A	140 VA
220 (220 Vac)	191-233 Vac	0.6A	140 VA
240 (240 Vac)	208-250 Vac	0.55A	140 VA

OPERATION

SECTION III OPERATING INSTRUCTIONS

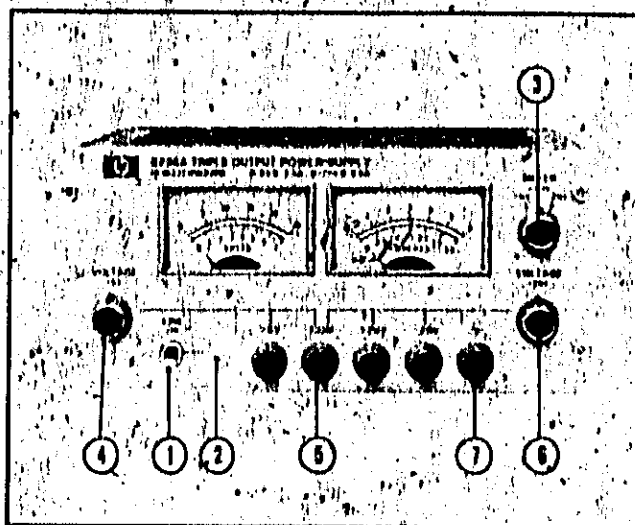


Figure 3-1. Controls and Indicators

3-1 TURN-ON CHECKOUT PROCEDURE

3-2 The following steps describe the use of the Model 6236A or 6237A front panel controls and indicators illustrated in Figure 3-1 and serve as a brief check that the supply is operational. This checkout procedure or the more detailed performance test of Paragraph 5-6 should be followed when the instrument is received and before it is connected to any load equipment. Proceed to the more detailed procedures beginning in Paragraph 5-6 if any difficulties are encountered.

CAUTION

Before applying power to the supply, make certain that its line voltage selector switch (S3) is set for the line voltage to be used. This switch is mounted on the circuit board behind the voltmeter and is visible through the perforations in the top cover. The positions of the two white marks on the switch indicate the switch setting (see Figure 3-2). If the switch setting does not correspond to the intended power source, proceed to Paragraph 3-4 before applying power.

NOTE

For the Model 6237A, substitute +18V for +6V in the following steps.

- a. Connect line cord to power source and turn LINE switch ① on. LINE ON indicator ② will light.
- b. Set METER switch ③ to the +6V position and, with no load connected, vary +6V VOLTAGE control ④ over its range and check that the voltmeter responds to the control setting and the ammeter indicates zero.
- c. Set the +6V VOLTAGE control for a 6-volt meter indication and short the +6V output terminal to COM (common) terminal ⑤ with an insulated test lead. The ammeter should indicate a short-circuit output current of approximately 1.0A (1.1A in the 6237A). Remove the short from the output terminals.
- d. Set the METER switch to the +20V position and, with no load connected, vary +20V VOLTAGE control ⑥ over its range and check that the voltmeter responds to the control setting and the ammeter indicates zero.
- e. Set the +20V VOLTAGE control for a 20-volt meter indication and short the +20V output terminal to the common terminal with an insulated test lead. The ammeter should indicate a short-circuit output current of 0.55A $\pm 5\%$. Remove the short from the output terminals.
- f. Repeat steps (d) and (e), but substitute the -20V position of the METER switch and the -20V output terminal.

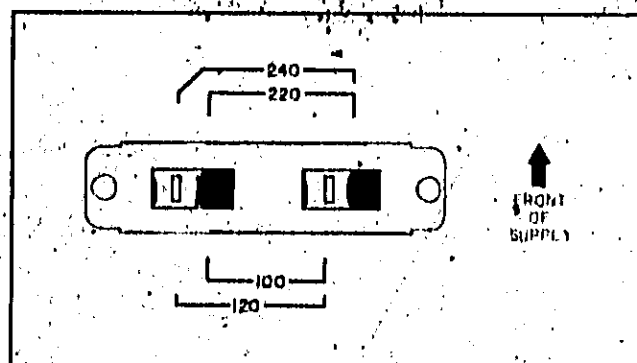


Figure 3-2. Line Voltage Selector (Set for 120 Vac)

3-3 If this brief checkout procedure or later use of the supply reveals a possible malfunction, see Section V of this manual for detailed test, troubleshooting, and adjustment procedures.

3-4 LINE VOLTAGE OPTION CONVERSION

3-5 To convert the supply from one line voltage option to another, the following three steps are necessary:

1. After making certain that the line cord is disconnected from a source of power, remove the top cover from the supply and set the two sections of the line voltage selector switch for the desired line voltage (see Figure 3-2).

2. Check the rating of the installed fuse and replace it with the correct value, if necessary. For Options 100 or 120, use a normal time-constant 2-amp fuse (HP Part No. 2110-0002); for Options 220 or 240, use a normal time-constant 1-amp fuse (HP Part No. 2110-0001).

3. Mark the instrument clearly with a tag or label indicating the correct line voltage to be used.

3-6 OPERATION

3-7 This power supply can be operated individually or in parallel with another supply (see Paragraph 3-17). All output terminals are isolated from ground. The $\pm 20\text{V}$ and $\pm 18\text{V}$ outputs use a single common output terminal. This common (COM) terminal or any one of the other output terminals may be grounded to the chassis at the front panel ground terminal (7 in Figure 3-1), or all outputs may be left floating. Loads can be connected separately between each of the 0 to 20V output terminals and the COM terminal, or between the -20V and the $+20\text{V}$ terminals for a 0 to 40V output.

3-8 Overload Protection Circuits

3-9 $\pm 20\text{V}$ Volt Current Limit. The $+20\text{V}$ and -20V outputs are individually protected against overload or short-circuit damage by separate current limit circuits which are adjusted at the factory to limit the output current to $0.55\text{A} \pm 5\%$. (This is 110% of the rated maximum output of 0.5A .) The current limits can be set by adjusting resistor R6 for the $+20\text{V}$ output and R26 for the -20V output. (See Paragraph 5-47 for current limit calibration instructions.) No deterioration of supply performance occurs if the output current remains below the current limit setting. If a single load is connected between the $+20\text{V}$ and -20V outputs, the circuit set for the lesser current limit will limit the output.

3-10 $+6\text{V}$ Current Foldback (Model 6236A). The overload and short-circuit protection circuit for the $+6\text{V}$ output of the Model 6236A reduces the output current limit as the output terminal voltage decreases. (The operating region of the $+6\text{V}$ output is enclosed by heavy lines in Figure 3-3). The maximum rated output current is 2.5A and the current limit is factory-adjusted to operate at $2.75\text{A} \pm 5\%$ when the

output is 6 volts. At lower output voltages, the circuit reduces the maximum obtainable output current linearly until $1\text{A} \pm 15\%$ flows when the output is shorted. The short-circuit current cannot be adjusted, but R40 can be set to limit the maximum current at 6V to $2.75\text{A} \pm 5\%$. (See Paragraph 5-47 for current limit calibration instructions.)

3-11 $+18\text{V}$ Volt Current Limit (Model 6237A). The $+18\text{V}$ output of the Model 6237A is protected by a fixed current limit circuit which operates at 1.1A (110% of its maximum rated output of 1.0A). The circuit is similar to the ones in the $\pm 20\text{V}$ supplies. (See Paragraph 5-47 for calibration instructions.)

3-12 Operation Beyond Rated Output

3-13 The supply may be able to provide voltages and currents greater than its rated maximum outputs if the line voltage is at or above its nominal value. Operation can extend into the shaded areas on the meter faces without damage to the supply, but performance cannot be guaranteed to meet specifications. If the line voltage is maintained in the upper end of the input voltage range, however, the supply probably will operate within its specifications.

3-14 Connecting Loads

3-15 Each load should be connected to the power supply output terminals using separate pairs of connecting wires. This minimizes mutual coupling between loads and takes full advantage of the low output impedance of the power supply. Connecting wires to the load must be of adequately heavy gage to maintain satisfactory regulation at the load. Each pair of connecting wires should be as short as possible and twisted or shielded to reduce noise pickup. If shielded wire is used, connect one end of the shield to the power supply ground terminal and leave the other end unconnected.

3-16 If load considerations require that the output power distribution terminals be remotely located from the power supply, then the power supply output terminals should be connected to the remote distribution terminals by a pair of twisted or shielded wires and each load separately connected to the remote distribution terminals.

3-17 Parallel Operation

3-18 Two or more power supplies can be connected in parallel to obtain a total output current greater than that available from one power supply. The total output current is the sum of the output currents of the individual power supplies. The output voltage controls of one power supply should be set to the desired output voltage, and the other power supply should be set for a slightly larger output volt-

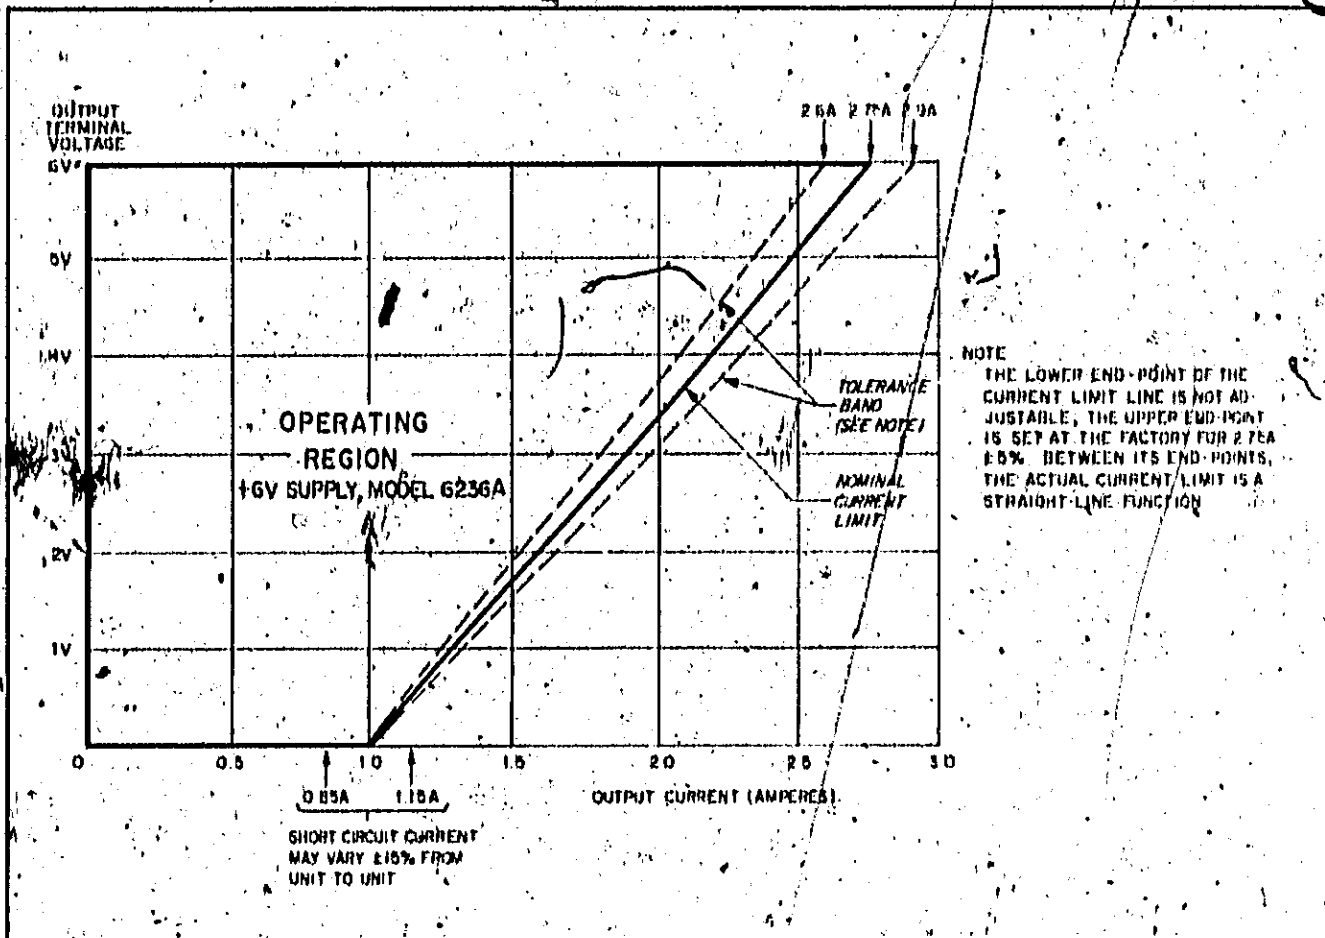


Figure 3-3. Current Limit Characteristics of the 6V Supply (Model 6236A)

age. The supply set to the lower output voltage will act as a constant voltage source, while the supply set to the higher output will act as a current-limited source, dropping its output voltage until it equals that of the other supply. The constant voltage source will deliver only that fraction of its total rated output current which is necessary to fulfill the total current demand.

3-19 Special Operating Considerations

3-20 Pulse Loading. The power supply will automatically cross over from constant voltage to current limit operation in response to an increase in the output current over the preset limit. Although the preset limit may be set higher than the average output current, high peak currents as occur in pulse loading may exceed the preset current limit and cause crossover to occur and degrade performance.

3-21 Output Capacitance. An internal capacitor across the output terminals of the power supply helps to supply high-current pulses of short duration during constant voltage operation. Any capacitance added externally will improve the pulse current capability, but will decrease the load protection provided by the current limiting circuit. A

high-current output pulse may damage load components before the average output current is large enough to cause the current limiting circuit to operate.

3-22 Reverse Current Loading. An active load connected to the power supply may actually deliver a reverse current to the power supply during a portion of its operating cycle. An external source cannot be allowed to pump current into the supply without loss of regulation and possible damage to the output capacitor. To avoid these effects, it is necessary to preload the supply with a dummy load resistor so that the power supply delivers current through the entire operating cycle of the load device.

3-23 Reverse Voltage Protection. Internal diodes connected with reverse polarity across the output terminals protect the output electrolytic capacitors and the driver transistors from the effects of a reverse voltage applied across a supply output. Since series regulator transistors cannot withstand reverse voltage either, diodes are also connected across them. When operating supplies in parallel these diodes protect an unenergized supply that is in parallel with an energized supply.

THEORY

SECTION IV PRINCIPLES OF OPERATION

4-1 OVERALL DESCRIPTION

4-2 This section presents the principles of operation of the Model 6236A and 6237A Triple Output Power Supply. Throughout this section refer to the combined schematic diagram of Figure 7-1.

NOTE

All information in this section applies to both models unless otherwise indicated.

4-3 The two primary windings of the power transformer are connected in one of four different ways by setting the two slide switches mounted on the circuit board. These switches select one of the nominal ac input voltages for which the supply is designed: 100V, 120V, 220V, or 240V.

4-4 The transformer secondaries, together with rectifiers and capacitor filters, provide raw dc for the three output regulator circuits and for another regulator which provides reference and bias voltages to the output regulators.

4-5 By comparing its output to a high-stability reference, the 0 to +6-volt regulator (6236A) or 0 to +18-volt regulator (6237A) holds its output voltage at the value determined by a front panel control. Any error in the actual output as compared to the desired output is amplified by an operational amplifier and applied as feedback to control the conduction of a series regulator transistor. As a result, the voltage across the series transistor varies so as to hold the output voltage constant at the desired level. The high gain of the voltage comparison amplifier and the stability of the reference voltage ensure that input voltage, or load current variations have little effect on the output voltage.

4-6 The 0 to +6-volt output in the Model 6236A is protected by a current foldback limiter which minimizes dissipation in the series regulator transistor during overloads. In a current foldback circuit, the current limit depends on the output terminal voltage and in this regulator ranges from 2.75A $\pm 5\%$ at 6 volts to 1A $\pm 15\%$ with the output shorted. (An output of 2.75A is 110% of the rated maximum of 2.5A at 6 volts.) The operating region of the +6-volt regulator output is enclosed by a heavy line in Figure 3-3. If the operating point reaches the diagonal current limit line, a decrease in load resistance moves the operating point

down the line, reducing the output voltage and current. Current foldback is controlled by a second operational amplifier in the regulator which monitors the dc output current. This current comparison amplifier takes control of the output away from the voltage comparison amplifier when the current reaches the design limit. Removing the overload restores constant voltage operation automatically.

4-7 The +20-volt regulator has a fixed current limit at 110% of its 0.5 amp maximum rated output but is otherwise similar to the +6-volt regulator.

4-8 The 0 to -20-volt regulator is, in turn, similar to the +20-volt regulator except that it resembles a complementary mirror image of the latter. The output voltages of the +20-volt and -20-volt supplies are both set by the same front panel control and track each other within 1%. Precise tracking of the two outputs is achieved by controlling the positive output conventionally, and using that output as the reference voltage for the negative output.

4-9 The 0 to +18-volt regulator in the Model 6237A is similar to the +20-volt regulator. It has a fixed current limit at 110% of its 1.0 amp output.

4-10 The reference and bias supply provides reference and bias voltages for the output regulators.

4-11 The turn-on/turn-off control circuit prevents output transients when the supply is turned on or off. It does this by delaying the application of certain bias and reference voltages at turn-on and removing them shortly after turn-off.

4-12 A three-position meter switch selects which of the supplies has its output voltage and current indicated on the front panel meters. The proper range of the dual-range meters is selected automatically.

4-13 DETAILED CIRCUIT DESCRIPTION

4-14 0 To +20-Volt Regulator

4-15 **Voltage Comparison Amplifier.** The voltage comparison amplifier in the +20-volt supply controls the conduction of series regulator transistor Q1 so that the voltages at the two inputs of the amplifier remain equal. A fixed voltage divider holds its inverting input (U1-2) at -16mV. Its non-inverting input (U1-3) monitors the output voltage in

series with the voltage across R1. Since R2 is connected between the -6.2V reference supply and a point which feedback action holds near -10mV, its current remains constant. This current flows through R1 to produce a voltage drop across R1 proportional to its resistance setting, thus the output voltage of the supply is proportional to the resistance setting of R1. At the output of the voltage comparison amplifier (U1-1), a positive voltage change corresponds to a decrease in the conduction of Q1.

4-16 CR2 and CR3 protect the input of the amplifier against transient overloads, C2 and R4 speed up loop response time, and C4 and R12 stabilize the supply's high frequency characteristics.

4-17 OR-Gate. To permit either the voltage comparison amplifier or the current comparison amplifier to control the series regulator transistor, the outputs of both amplifiers are connected to the base of driver Q2 through an OR-gate composed of CR5 and CR6. CR5 is normally reverse biased by a negative output from the current comparison amplifier, permitting the voltage comparison amplifier to drive Q2 through CR6. An overload drives the output of the current comparison amplifier positive, forward biasing CR5 and reducing the supply output. When the overload is removed, CR5 is reverse biased again and the voltage comparison amplifier resumes control of the output.

4-18 Driver and Series Regulator. The -12.4V output of the bias supply provides the turn-on bias for series regulator transistor Q1. Its complete current path includes Q16, CR6, R14, and Q1, and returns to common through current monitoring resistor RB. (It is because this bias current flows through RB that the output ammeter requires the zero offset bias circuit described in paragraph 4-43.) Through the OR-gate, either the voltage or the current comparison amplifier controls the conduction of driver Q2, which regulates the flow of turn-off bias through Q1's base-emitter circuit. The algebraic sum of the nearly constant turn-on bias through R14 and the variable turn-off bias through Q2 controls the conduction of series regulator transistor Q1.

4-19 Current Limit Circuit. In the +20-volt regulator, the current comparison amplifier compares the voltage across current monitoring resistor RB to the fixed voltage across part of current limit adjust potentiometer R6. The current limit adjustment is set so that the input voltage to the current comparison amplifier is negative in the normal operating region, but becomes zero when the output current increases to 0.55 amps. When the amplifier's input voltage reaches zero, it takes control of the regulator output voltage and reduces it as necessary to keep the output current from exceeding 0.55 amps. When the overload is removed, the output of the current comparison amplifier goes negative, reverse biasing CR5 and returning control to the voltage

comparison amplifier.

4-20 Turn-On/Turn-Off Control. When the power supply is turned on or off, Q16 in the turn-on control circuit withholds turn-on bias from Q1 while the regulator bias voltages are too low. This prevents an output voltage transient from occurring before the amplifiers are properly biased. The output of the -6.2V reference supply is also temporarily held at a low voltage by Q14, which conducts to short that output.

4-21 Circuit Protection Components. Diodes CR1, CR7, and CR8 each protect the +20-volt supply from specific hazards. Output diode CR1 protects the supply components if a reverse voltage is applied to the output terminals. A common way for this to occur is for an unenergized supply to be connected in series with another that is energized. If the output voltage is turned down quickly while a large capacitor is connected across the output, CR7 protects driver Q2 from excessive dissipation by shunting some of its base current to common. The series regulator diode, CR8, protects the series regulator transistor from reverse voltage. Series regulator voltage could occur if a deenergized supply were connected in parallel with an energized one.

4-22 0 To -20-Volt Regulator

4-23 Instead of using an NPN driver and a PNP series regulator in the negative output line as in the +20-volt regulator, the -20-volt regulator uses a PNP driver and an NPN series regulator in the positive output line. The -20-volt regulator circuit is the complementary equivalent of the +20-volt circuit in other respects, as well. Their current limit circuits operate similarly. At the outputs of the current and voltage comparison amplifiers in the -20-volt circuit, a negative voltage change corresponds to a decrease in series regulator conduction. The turn-on bias for its series regulator transistor, Q3, is supplied from a positive voltage source, the +7.5V bias supply, and is switched on and off by Q13 in the turn-on control circuit.

4-24 The -20-volt supply uses the output of the +20-volt supply as its reference voltage. As a result, both outputs are set by a single front panel control and track each other within 1%. Two resistors in resistor network Z1 are connected in series between the +20-volt and -20-volt outputs. These resistors are closely matched in resistance and temperature coefficient so that the voltage across each is exactly half of the total. The midpoint of this divider is connected to the non-inverting input of the -20-volt supply's voltage comparison amplifier. The amplifier's inverting input is connected to common through R12 to hold it at zero volts. The amplifier keeps its differential input voltage at zero by matching the output voltage of the -20-volt supply to that of the +20-volt supply.

4-25 0 To +6-Volt Regulator (Model 6236A)

4-26 Except for differing component designations and values, paragraphs 4-15 through 4-18, 4-20, and 4-21, which describe the voltage comparison amplifier, OR-gate, driver, series regulator, turn-on control, and circuit protection components of the +20-volt regulator circuit, also apply to the +6-volt regulator. The only difference in circuit operation lies in the control of the current comparison amplifier, and thus the type of current limit the supply has.

4-27 **Current Foldback Circuit:** (For this discussion refer to the Figure 7-1 schematic and to Figure 4-1.) The differential input signal to the current comparison amplifier is the algebraic sum of three circuit voltages:

1. The voltage across $R49$. E_{R49} remains constant at -305mV .
2. The voltage across the lower part of $R46$ (see Figure 4-1). E_{R46} is proportional to the regulator output voltage and equals 440mV when the supply output is 6 volts.
3. The voltage across current monitoring resistor $R48$. E_{R48} is proportional to the sum of the regulator output current and the 0.22A bias current that flows through $R54$ and $R48$.

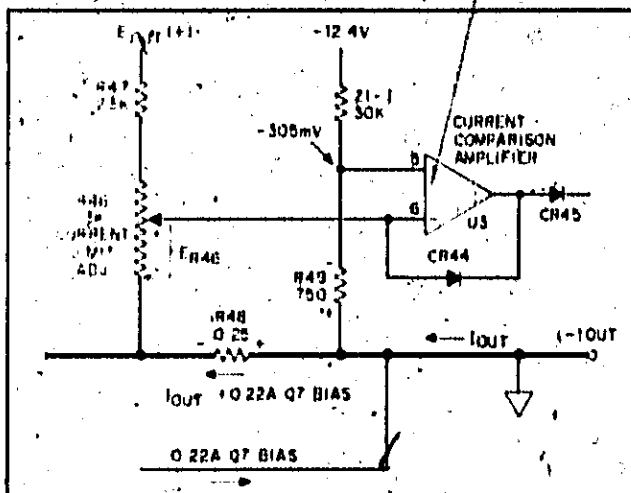


Figure 4-1. Foldback Current Limit Circuit in 6V Supply

4-28 When the supply's output current is below the current limit that corresponds to its output terminal voltage (see Figure 3-3), the inverting input (U3-6) of the current comparison amplifier is more positive than its non-inverting input (U3-5), which is held at -305mV . The negative amplifier output which results is clamped by CR44 and reverse biases OR-gate diode CR45, leaving the voltage comparison amplifier in control of the supply's output. If the load resistance is decreased, the higher output current increases E_{R48} until the algebraic sum of E_{R48} and E_{R46} makes the current comparison amplifier's inverting input slightly more negative than the -305mV potential on its non-inverting in-

put. When this happens, the output of this amplifier goes positive and forward biases CR45. Since the current through CR45 tends to reduce the output of the supply, the output of the voltage comparison amplifier goes negative in opposition to this change and reverse biases CR45 to leave the current comparison amplifier in control of the output. Now that the current comparison amplifier is in control and for as long as the overload remains, the supply's output voltage and current vary so as to maintain this amplifier's differential input signal near zero volts. This results in the output current limit characteristics shown in Figure 3-3.

4-29 If we assume for example that the voltage control is set for 5 volts and the load resistance is slowly decreased, the supply goes into current limit at about 2.47 amps. Here is why it occurs at that value. At a 5-volt supply output, E_{R46} is 5/6 of 440mV , or 367mV . In order for the algebraic sum of E_{R46} and E_{R48} to go as far negative as -305mV and drive the amplifier output positive, E_{R48} must reach -672mV . Once E_{R48} reaches this value, the current comparison amplifier controls the series regulator transistor so as to prevent $R48$ (and thus the supply's output current) from increasing further. At 0.25 ohms, $R48$ develops -672mV at 2.69 amps. Since 0.22 amps of the current through $R48$ is bias current for Q7, the nominal current limit corresponding to a 5-volt output is 2.69 amps minus 0.22 amps, or about 2.47 amps.

4-30 If the load resistance continues to decrease, it pulls the output voltage lower. This reduces E_{R46} until at a zero output voltage E_{R46} becomes zero, leaving E_{R48} equal in magnitude to E_{R49} . This -305mV drop across $R48$ corresponds to a 1.22-amp current through $R48$ and a 1-amp short-circuit current at the output of the supply.

4-31 In the +6-volt regulator, as in the +20-volt regulator, the turn-on bias current for the series regulator transistor is switched on and off by Q15 in the turn-on control circuit to prevent output voltage transients.

4-32 0 To +18-Volt Regulator (Model 6237A)

4-33 Except for differing component designations and values, paragraphs 4-15 through 4-21, which describe the voltage comparison amplifier, OR-gate, driver, series regulator, current limit circuit, turn-on control, and circuit protection components of the +20-volt regulator circuit, also apply to the +18-volt regulator. In the +18-volt regulator, as in the +20-volt regulator, the turn-on bias current for the series regulator transistor is switched on and off by Q15 in the turn-on control circuit to prevent output voltage transients.

4-34 Reference and Bias Supply

4-35 The reference and bias supply powers the operational amplifiers and provides the bias and reference voltages used throughout the supply. A shunt zener regulates its +7.5V output. A series transistor regulates its -12.4V output, using 6.2-volt zener VR1 as its voltage reference. The -12.4V output provides a constant current to VR1, which is the primary voltage reference for the entire supply.

4-36 Two equal resistors are connected in series across the -12.4V output. To regulate this output, voltage comparison amplifier U4 compares the voltage across one of these resistors to the -6.2V reference and controls the conduction of series regulator Q11 through driver Q12. The voltage drop across Q11 is controlled by feedback so that the voltages at the two inputs of U4 remain equal. Driver Q12 controls Q11 by shunting part of the base bias supplied by R6B.

4-37 During turn-on, the -6.2V reference supply is temporarily shorted by Q14 in the turn-on control circuit. By trying to match this low reference, Q11 is initially turned off. While Q11 is turned off, R6B bypasses current to the -12.4V output until the output reaches -9 volts and the turn-on control circuit removes the short from the reference and enables the -12.4-volt regulator to operate normally.

4-38 Turn-On/Turn-Off Control Circuit

4-39 Immediately after the supply is energized and until the output of the -12.4-volt regulator reaches about -9 volts, the turn-on control circuit withholds turn-on bias from series regulator transistors Q1, Q3, and Q7 and holds

the -6.2V reference at a low value. This prevents an output voltage transient by ensuring that the operational amplifiers are energized and other essential bias voltages are present before the series regulator transistors are turned on. The circuit also prevents an output transient when the supply is turned off by removing the turn-on bias from the series regulators and shorting the -6.2V reference supply as the voltage of the -12.4V supply falls below -9 volts.

4-40 Q13 switches the bias to the -20-volt regulator on and off, Q14 switches the short across the -6.2-volt reference supply, and Q15 switches the bias to the +20-volt and +16-volt or +18-volt regulators. Q15 remains turned off until VR2 conducts at 0 volts to switch it on. While Q15 is off, it holds Q13 biased off and Q14 on; when Q15 conducts, it turns Q13 and Q14 off.

4-41 Meter Circuits

4-42 Voltmeter. Two of the resistors in resistor network Z1 are range resistors for the voltmeter. The accurate ratio of these resistors permits a single calibration potentiometer, R5B, to adjust both ranges simultaneously.

4-43 Ammeter. The range switch connects the ammeter across the current monitoring resistor of a supply: R4B in the +6-volt or +18-volt supply, R8 in the +20-volt supply, or R2B in the -20-volt supply. Each of these resistors conducts a constant bias current for its series regulator transistor in addition to the supply's output current. If no compensation were used, this additional current would raise the indicated output by up to 8% of full scale. The resistor networks connected to each range of the ammeter selector switch apply a bias to the meter to offset this error. R5B calibrates all ammeter ranges.

MAINTENANCE

SECTION V MAINTENANCE

5-1 INTRODUCTION

5-2 Upon receipt of the power supply, the performance test of Paragraph 5-6 can be made. This test is suitable for incoming inspection. Section III contains a quick but less comprehensive checkout procedure which can be used in lieu of the performance test if desired.

5-3 If a fault is detected in the power supply while making the performance test or during normal operation, proceed to the troubleshooting procedure in Paragraph 5-32. After troubleshooting and repair, repeat the performance test to ensure that the fault has been properly corrected and that no other faults exist. Before performing any maintenance checks, turn on the power supply and allow a half-hour warm-up.

5-4 TEST EQUIPMENT REQUIRED

5-5 Table 5-1 lists the test equipment required to perform the various procedures described in this section.

5-6 PERFORMANCE TEST

5-7 The following test can be used as an incoming inspection check and appropriate portions of the test can be repeated to check the operation of the instrument after repairs. If the correct result is not obtained for a particular check, proceed to the troubleshooting procedures of Paragraph 5-32.

CAUTION

Before applying power to the supply, make certain that its line voltage selector switch (S3) is set for the line voltage to be used. (See CAUTION notice in Paragraph 3-2 for additional information on S3.)

Table 5-1. Test Equipment Required

TYPE	REQUIRED CHARACTERISTICS	USE	RECOMMENDED MODEL
Digital Voltmeter	Sensitivity: 100 μ V full scale (min.). Input impedance: 10 megohms (min.).	Measure DC voltages; calibration procedures	HP 3450A
Variable Voltage Transformer	Range: 00-130 Vac Equipped with voltmeter accurate within 1 volt	Vary AC input
Oscilloscope	Sensitivity: 100 μ V/cm. Differential input.	Display transient response and ripple and noise waveforms.	HP 180A with 1821A, and 1801A or 1803A plug-ins.
Repetitive Load Sw.	Rate: 60 Hz, 2 μ sec. rise and fall time	Measure transient response.	See Figure 5-5.
Resistive Loads	Value: See Paragraph 5-11. Tolerance: \pm 5%	Power supply load resistor (fixed resistor or rheostat).	James G. Biddle ("Lubri-Tact" Rheostat)
Current Sampling Resistor (Shunt)	Value: See Paragraph 5-13. Accuracy: 1% (minimum)	Measure output current	Simpson Portable Shunt, 06703.

5-B General Measurement Techniques

5-9 Connecting Measuring Devices. To achieve valid results when measuring the load effect, PARD (ripple and noise), and transient recovery time of the supply, measuring devices must be connected as close to the output terminals as possible. A measurement made across the load includes the impedance of the leads to the load. The impedance of the load leads can easily be several orders of magnitude greater than the supply impedance and thus invalidate the measurement. To avoid mutual coupling effects, each measuring device must be connected directly to the output terminals by separate pairs of leads.

5-10 When measurements are made at the front panel terminals, the monitoring leads must be connected at point A, as shown in Figure 5-1, and not at point B. Connecting the measuring device at point B would result in a measurement that includes the resistance of the leads between the output terminals and the point of connection.

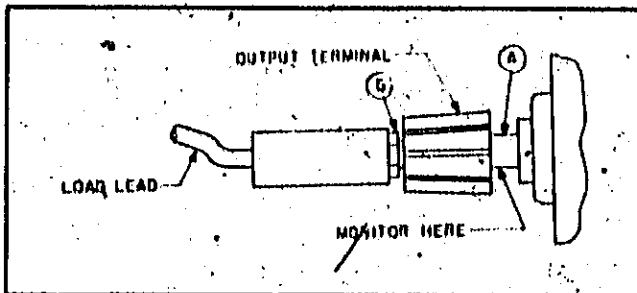


Figure 5-1. Front Panel Terminal Connections

5-11 Selecting Load Resistors. Power supply specifications are checked with a full load resistance connected across the supply output. The resistance and wattage of the load resistor, therefore, must permit operation of the supply at its rated output voltage and current. For example, a supply rated at 20 volts and 0.5 amperes would require a load resistance of 40 ohms at the rated output voltage. The wattage rating of this resistor would have to be at least 10 watts.

5-12 Either a fixed or variable resistor (rheostat) can be used as the load resistance. Using a rheostat (alone or in series with a fixed resistor) is often more convenient than using fixed resistors as loads because the latter may be more difficult to obtain in the exact resistance required. A supplier of rheostats appropriate for testing these supplies is listed in Table 5-1.

5-13 Output Current Measurements. For accurate output current measurements, a current sampling resistor should be inserted between the load resistor and the output of the supply. An accurate voltmeter is then placed across the sampling resistor and the output current calculated by

dividing the voltage across the sampling resistor by its ohmic value. The total resistance of the series combination should be equal to the full load resistance as determined in the preceding paragraphs. Of course, if the value of the sampling resistor is very low when compared to the full load resistance, the value of the sampling resistor may be ignored. The motor shunt recommended in Table 5-1, for example, has a resistance of only 1 milliohm and can be neglected when calculating the load resistance of the supply.

5-14 Figure 5-2 shows a four terminal meter shunt. The load current through a shunt must be led to the extremes of the wire leading to the resistor while the sampling connections are made as close as possible to the resistance portion itself.

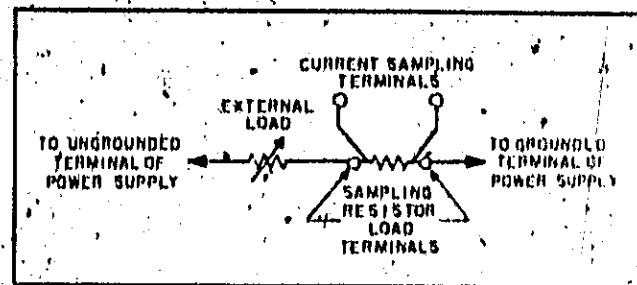


Figure 5-2. Current Sampling Resistor Connections

NOTE

All instructions in this section apply to Models 6236A and 6237A unless otherwise indicated.

5-15 Rated Output, Tracking, Meter Accuracy, and Current Limit

5-16 To check that all supplies will furnish their maximum rated output voltage and current, that the $\pm 20\text{V}$ outputs track each other, that the front panel meters are accurate, and that the current limit circuits function, proceed as follows:

Voltmeter Accuracy

- With no loads connected: energize the supply, connect a digital voltmeter between the 16V terminal (+18V in Model 6237A) and common (COM), and set the +6V (+18V) VOLTAGE control so that the DVM indication is as near as possible to 6 volts (18 volts).
- Set the METER switch to the +6V (+18V) range and check the front panel voltmeter indication. It should be within 4% of the DVM indication.
- Check the $\pm 20\text{V}$ and $\pm 20\text{V}$ ranges of the panel voltmeter similarly by connecting the DVM to each of these outputs in turn, setting the $\pm 20\text{V}$ VOLTAGE control for

20V DVM indication, and verifying that the panel meter is accurate within 4%.

Tracking

d. Connect the DVM to the +20V output, set the +20V VOLTAGE control for a DVM indication of 20 volts, and reconnect the DVM to the -20V output without disturbing the voltage control. The voltage at the -20V output should be within 1% of the +20V output.

Rated Output and Ammeter Accuracy

e. Connect 40Ω 10W load resistors across both of the 20V outputs of the supply and set the +20V VOLTAGE control for a +20V output. (All three supplies must be fully loaded while checking the rated output voltage and current of each supply.)

f. Connect the test setup shown in Figure 5-3 to the +6V (or +18V) output. Make the total resistance of R_L and the current sampling resistor 2.4 ohms for the Model 6236A (or 18 ohms for the 6237A) to permit operating (the output at full load). R_L should have a power rating of at least 20 watts.

g. Close the switch and set the +6V (+18V) VOLTAGE control so that the DVM indicates a voltage drop across the current sampling resistor that corresponds to a current of 2.5 amps (6236A) or 1.0 amp (6237A).

h. Set the METER switch to the +6V (+18V) range and verify that the front panel ammeter indication is within 4% of 2.5 amps (6236A) or 1.0 amp (6237A).

i. Connect the DVM directly across the output terminals of the +6V (+18V) supply, record the DVM reading, and then open the switch in the 6V (18V) load circuit without disturbing the supply's output terminals. The DVM indication should not change by more than 2.6mV (6236A) or 3.8mV (6237A).

j. Check the rated output and ammeter accuracy of the +20V and -20V supplies similarly by connecting the test setup of Figure 5-3 to each output in turn. For each 20V supply: make the total resistance of R_L and the current sampling resistor 40 ohms, set the +20V VOLTAGE control for a current indication on the DVM of 0.5A, check that the panel meter indication is within 4% of 0.5A, connect the DVM to the fully loaded output terminals, and compare the output voltage before and after the load circuit is opened. The voltage should not change by more than 4mV. While checking each supply, the other two must be fully loaded.

Current Limit

k. Disconnect all loads from the supply.

l. Connect the test setup shown in Figure 5-3 to the +20V output. Substitute a short for R_L and leave the load circuit switch open.

m. Set the voltage of the +20V supplies to 20 volts.

n. Close the load switch and determine the current flow through the current sampling resistor (meter shunt) by measuring its voltage drop with the DVM. The current

should be 0.55A ±5%.

p. Check the current limit of the -20V supply in the same way. Its short-circuit current should also be 0.55A ±5%.

o. (Model 6237A only). Check the current limit of the +18V supply similarly by setting its output for 18 volts and using a DVM to measure the current which flows through a low-resistance current sampling resistor. The short-circuit current of the +18V supply should be 1.1A ±5%.

q. (Steps (q) through (s) apply to the 6236A only.) Connect the test setup shown in Figure 5-3 to the +6V output. Close the switch, set the total resistance of R_L and the current sampling resistor to an initial value of 2.4 ohms or greater, and set the output voltage to 6 volts.

r. Reduce the value of R_L gradually while observing the output current indicated by the DVM. The current should increase to a maximum of 2.75A ±5% before it begins to decrease.

s. Connect a short across R_L and then recheck the current indicated by the DVM. The short-circuit current of this output should be 1A ±5%. Disconnect the test setup from the supply.

5-17 Load Effect (Load Regulation)

Definition: The change ΔE_{OUT} in the static value of dc output voltage resulting from a change in load resistance from open circuit to a value which yields maximum rated output current (or vice versa):

5-18 To check the load effect:

a. Connect a full load resistance and a digital voltmeter across the output of the +20V supply.

b. Turn on the supply and adjust its voltage to its maximum rated value.

c. Record the voltage indicated on the DVM.

d. Disconnect the load resistance and recheck the DVM indication. It should be within .01% plus 2mV of the reading in step (c).

e. Repeat steps (a) through (d) for each of the remaining supply outputs.

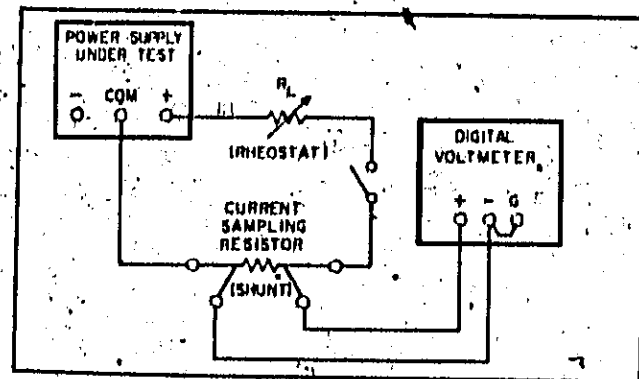


Figure 5-3. Output Current, Test Setup

5-19 Source Effect (Line Regulation)

Definition: The change, ΔE_{OUT} , in the static value of dc output voltage resulting from a change in ac input voltage over the specified range from low line (typically 104 Vac) to high line (typically 127 Vac), or from high line to low line.

5-20 To test the source effect:

- Connect a variable autotransformer between the input power source and the power supply line plug.
- Connect a full load resistance and a digital voltmeter across the output of the +20V supply.
- Adjust the autotransformer for a low line input.
- Turn on the power, adjust the output of the supply to its maximum rated voltage, and record the DVM indication.
- Adjust the autotransformer for a high line input and recheck the DVM indication. It should be within .01% plus .2mV of the reading in step (d).
- Repeat steps (b) through (e) for each of the remaining supply outputs.

5-21 PARD (Ripple and Noise)

Definition: The residual ac voltage which is superimposed on the dc output of a regulated power supply. Ripple and noise may be specified and measured in terms of its rms or peak-to-peak value.

5-22 Measurement Techniques. Figure 5-4A shows an incorrect method of measuring p-p ripple. Note that a continuous ground loop exists from the third wire of the input power cord of the supply to the third wire of the input power cord of the oscilloscope via the grounded power supply case, the wire between the negative output terminal of the power supply and the vertical input of the scope, and the grounded scope case. Any ground current circulating in this loop as a result of the difference in potential E_G between the two ground points causes an IR drop which is in series with the scope input. This IR drop, normally having a 60 Hz line frequency fundamental, plus any pickup on the unshielded leads interconnecting the power supply and scope, appears on the face of the CRT. The magnitude of this resulting signal can easily be much greater than the true ripple developed between the plus and minus output terminals of the power supply and can completely invalidate the measurement.

5-23 The same ground current and pickup problems can exist if an rms voltmeter is substituted in place of the oscilloscope in Figure 5-4. However, the oscilloscope display, unlike the true rms meter reading, tells the observer immediately whether the fundamental period of the signal displayed is 0.3 milliseconds (1/120 Hz) or 16.7 milliseconds (1/60 Hz). Since the fundamental ripple frequency present on the output of an HP supply is 120 Hz (due to full-wave

rectification), an oscilloscope display showing a 120 Hz fundamental component is indicative of a "clean" measurement setup, while the presence of a 60 Hz fundamental usually means that an improved setup will result in a more accurate (and lower) value of measured ripple.

5-24 Figure 5-4B shows a correct method of measuring the output ripple of a constant voltage power supply using a single-ended scope. The ground loop path is broken by floating the power supply output. To insure that no potential difference exists between the supply and the oscilloscope, it is recommended that they both be plugged into the same ac power plug. If the same plug cannot be used, both ac grounds must be at earth ground potential.

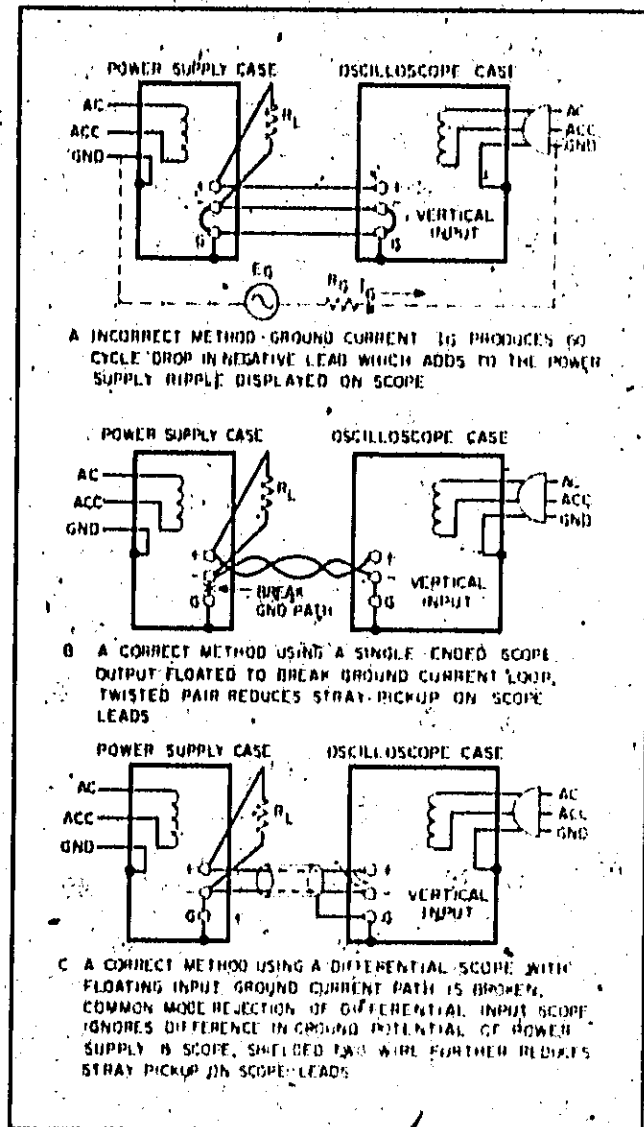


Figure 5-4. Ripple and Noise Test Setup

6-26 Either a twisted pair or, preferably, a shielded two wire cable should be used to connect the output terminals of the power supply to the vertical input terminals of the scope. When using a twisted pair, care must be taken that one of the two wires is connected to the grounded input terminal of the oscilloscope to ensure that the supply output is safely grounded. When using shielded two-wire, it is essential for the shield to be connected to ground at one end only to prevent ground current flowing through this shield from inducing a signal in the shielded leads.

6-26 To verify that the oscilloscope is not displaying ripple that is induced in the leads or picked up from the grounds, the (+) scope lead should be shorted to the (-) scope lead at the power supply terminals. The ripple value obtained when the leads are shorted should be subtracted from the actual ripple measurement.

6-27 In most cases, the single-ended scope method of Figure 5-4B will be adequate to eliminate non-real components of ripple so that a satisfactory measurement may be obtained. However, in more stubborn cases (or if high frequency noise up to 20 MHz must be measured), it may be necessary to use a differential scope with floating input as shown in Figure 5-4C. If desired, two single-conductor shielded cables may be substituted in place of the shielded two-wire cable with equal success. Because of its common mode rejection, a differential oscilloscope displays only the difference in signal between its two vertical input terminals, thus ignoring the effects of any common mode signal produced by the difference in the ac potential between the power supply case and scope case. Before using a differential input scope in this manner, however, it is imperative that the common mode rejection capability of the scope be verified by shorting together its two input leads at the power supply and observing the trace on the CRT. If this trace is a straight line, then the scope is properly ignoring any common mode signal present. If this trace is not a straight line, then the scope is not rejecting the ground signal and must be realigned in accordance with the manufacturer's instructions until proper common mode rejection is attained.

6-28 **Measurement Procedure.** To measure the ripple and noise on each supply output, follow the steps below. If a high frequency noise measurement is desired, an oscilloscope with sufficient bandwidth (20 MHz) must be used. Ripple and noise measurements can be made at any input ac line voltage combined with any dc output voltage and load current within rating.

- Connect an oscilloscope or rms voltmeter across an output of the supply as shown in Figures 5-4B or 5-4C.
- Energize the supply and observe the oscilloscope or meter indication. The ripple and noise should not be greater than 0.35mV rms or 1.5mV peak-to-peak.

c. Repeat for the remaining supply outputs.

5-29 Load Transient Recovery Time

Definition: The time "X" for output voltage recovery to within "Y" millivolts of the nominal output voltage following a "Z" amp step change in load current, where: "X" equals 60μsec, "Y" equals 15mV, and "Z" is the specified load current change, equal to half of the current rating of the supply. The nominal output voltage is defined as the dc level halfway between the static output voltage before and after the imposed load change.

6-30 **Measurement Techniques.** Care must be taken in switching the load resistance on and off. A hand-operated switch in series with the load is not adequate since the resulting one-shot displays are difficult to observe on most oscilloscopes and the arc energy occurring during switching completely masks the display with a noise burst. Transistor load switching devices are expensive if reasonably rapid load current changes are to be achieved. Instead, a mercury-wetted relay should be used for loading and unloading the supply. Connect it in the load switching circuit shown in Figure 5-5. When this load switch is connected to a 60 Hz ac input, the mercury-wetted relay will open and close 60 times per second. The 25K control adjusts the duty cycle of the load current switching to reduce jitter in the oscilloscope display. This relay may also be used with a 60 Hz ac input.

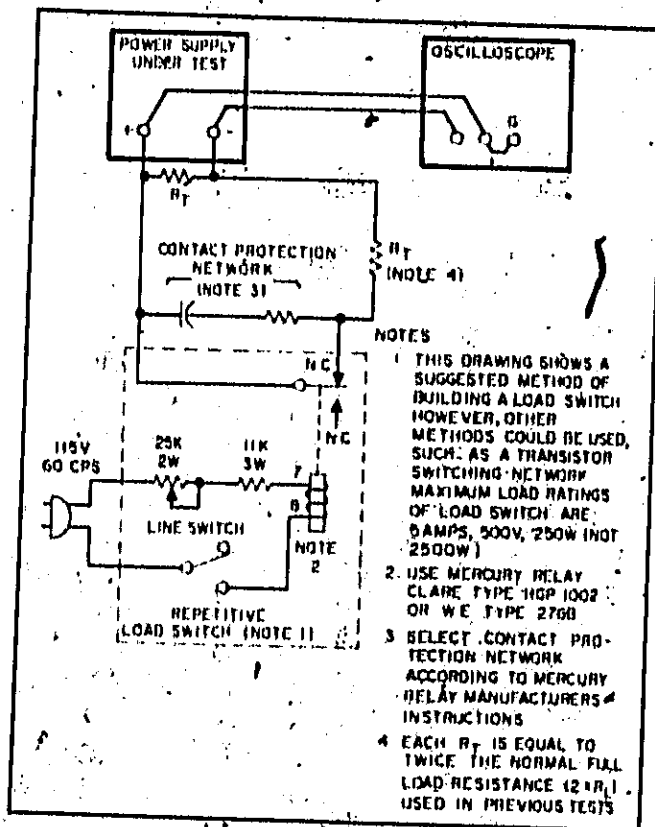


Figure 5-5. Load Transient Recovery Time, Test Setup

5-31 Measurement Procedure. To measure the load transient recovery time, follow the steps below for each supply output. Transient recovery time may be measured at any input line voltage and any output voltage within rating. For this supply the specified load change is between half load and full load.

- a. Connect the test setup shown in Figure 5-6. Both load resistors (R_L) are twice the normal value of a full load resistance.
- b. Turn on the supply and close the line switch on the repetitive load switch.
- c. Set the oscilloscope for internal sync and lock on either the positive or negative load transient spike.
- d. Set the vertical input of the oscilloscope for ac coupling so that small dc level changes in the output voltage of the power supply will not cause the display to shift.
- e. Adjust the horizontal positioning control so that the trace starts at a point coincident with a major graticule division. This point then represents time zero.
- f. Adjust the vertical centering of the scope so that the tall ends of the no-load and full-load waveforms are symmetrically displaced about the horizontal center line of the oscilloscope. This center line now represents the nominal output voltage defined in the specification.
- g. Increase the sweep rate so that a single transient spike can be examined in detail.
- h. Adjust the sync controls separately for the positive and negative going transients so that not only the recovery waveshape but also as much as possible of the rise time of the transient is displayed.
- i. Starting from the major graticule division representing time zero, count to the right 50 μ sec and vertically 15mV. Recovery should be within these tolerances, as illustrated in Figure 5-6.

5-32 TROUBLESHOOTING

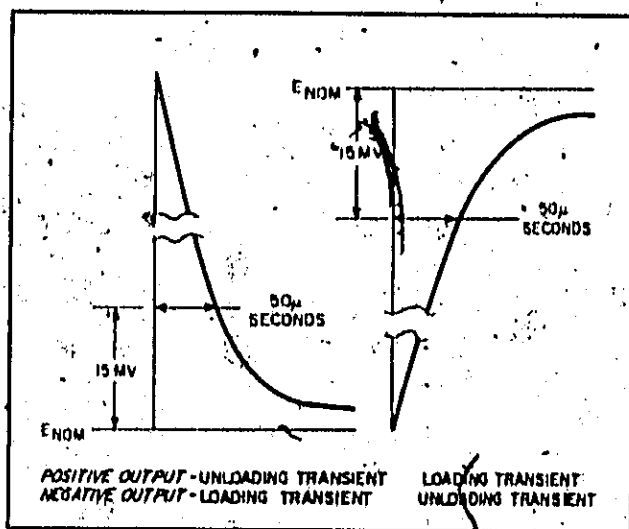


Figure 5-6. Load Transient Recovery Time Waveforms

5-33 Before attempting to troubleshoot this instrument, ensure that the fault is in the instrument itself and not in an associated piece of equipment. You can determine this without removing the covers from the instrument by using the appropriate portions of the performance test of Paragraph 5-6.

5-34 A good understanding of the principles of operation is a helpful aid in troubleshooting, and the reader is advised to review Section IV of the manual before beginning detailed troubleshooting. Once the principles of operation are understood, proceed to the initial troubleshooting procedures in Paragraph 5-35.

CAUTION

Before applying power to the supply, make certain that its line voltage selector switch (S3) is set for the line voltage to be used. (See CAUTION notice in Paragraph 3-2 for additional information on S3.)

5-35 Initial Troubleshooting Procedure

5-36 If a malfunction is found, follow the steps below:

- a. Disconnect input power from the supply and remove all loads from the output.
- b. Table 5-2 lists the symptoms and probable causes of several possible troubles. If the symptom is one of those listed, make the recommended check.
- c. If none of the symptoms of Table 5-2 apply, proceed to Table 5-3. This table provides an initial troubleshooting procedure that also directs you to the more detailed procedures which follow it.

5-37 The numbered test points referred to in the troubleshooting procedures are identified on the circuit schematic and on the component location diagram at the rear of the manual.

5-38 Open Fuse Troubleshooting

5-39 Although transients or fatigue can cause a fuse to blow, it is a good idea to inspect the unit for obvious shorts such as damaged wiring, charred components, or extraneous metal parts or wire clippings in contact with circuit board conductors before replacing the fuse. The rating of the correct replacement fuse depends on the line voltage option of the instrument: for Options 100 or 120, use a normal time-constant 2-amp fuse (HP Part No. 2110-0002); for Options 220 or 240, use a normal time-constant 1-amp fuse (HP Part No. 2110-0001).

Table 5-2. Miscellaneous Troubles

SYMPTOM	CHECK - PROBABLE CAUSE
High ripple	<ul style="list-style-type: none"> a. Check operating setup for ground loops (see Paragraph 5-22). b. Check main rectifiers (CR11, CR12, CR31, CR32, CR51, CR52) for open. c. Supply may be operating in current limit mode. Check current limit adjustment, Paragraph 5-16, steps (k) thru (s).
Will not current limit	Check for open OR-gate diodes (CR5, CR25, CR45) or defective current limit amplifier (U1, U2, U3).
Poor load or line regulation	<ul style="list-style-type: none"> a. Check bias and reference voltages, Table 5-4. b. Check main rectifiers and filters for opens.
Oscillation or poor transient recovery time	<ul style="list-style-type: none"> a. High frequency oscillations (above 50 KHz) can be caused by an open C4, C14, or C24. b. A defective output capacitor (C1, C11, or C21) can cause oscillations in one of many frequency ranges. c. Oscillation only in the current limiting mode can be caused by an open C3, C13, or C23.
Transient voltage overshoot at turn-on or turn-off.	<ul style="list-style-type: none"> a. Overshoot only in the -20V supply can be caused by a shorted Q13. b. Overshoot in all three supply outputs can be caused by an open Q14 or a shorted Q15.

Table 5-3. Initial Troubleshooting Procedure

STEP	ACTION	RESPONSE	NEXT ACTION
1	Check output voltage of +20V supply.	<ul style="list-style-type: none"> a. Normal b. Zero volts c. Output voltage lower or higher than rating. 	<ul style="list-style-type: none"> a. Proceed to step (2). b. Check dc line fuse (F1). If blown, proceed to Paragraph 5-38. If not blown, check bias and reference voltages (Table 5-4). c. Check bias and reference voltages (Table 5-4).
2	Check output voltage of -20V supply.	<ul style="list-style-type: none"> a. Normal b. High, low, or zero output voltage. 	<ul style="list-style-type: none"> a. If +20V and -20V outputs are both normal with no load, a supply might be current limiting under load. To check this adjustment see Paragraph 5-16, steps (k) thru (s). b. Proceed to -20V supply troubleshooting, Table 5-6.

Table 5-3. Initial Troubleshooting Procedure (Continued)

STEP	ACTION	RESPONSE	NEXT ACTION
3	Check output of +6V supply (Model 6236A) or +18V supply (Model 6237A).	a. Normal b. High, low, or zero output voltage.	a. If the output of this supply is normal unloaded but its voltage falls when loaded, check the current limit adjustment, Paragraph 5-16, steps (p) thru (s). b. Proceed to Table 5-7.

Table 5-4. Bias and Reference Voltage Check

STEP	ACTION	RESPONSE	PROBABLE CAUSE
1	Check +7.5V bias, TP1 to common	a. Normal (+7.5V ±5%) b. Voltage high c. Voltage low	a. Proceed to step (2). b. Check VR3 for open. c. Check VR3 for short. Note: A short within U1, U2, U3, or U4 can cause low +7.5V or -12.4V bias voltages
2	Check -6.2V reference, TP2 to common	a. Normal (-6.2V ±5%) b. Voltage high c. Voltage low	a. Proceed to step (3). b. Check VR1 for open. c. Check VR1 and Q14 for short, VR2 and Q15 for open. (A short within U4 could reduce this voltage.)
3	Check -12.4V bias, TP3 to common	a. Normal (-12.4V ±5%) b. High voltage c. Low voltage	a. Proceed to +20V supply troubleshooting, Table 5-5. b. Check Q11 for short, Q12 for open, and Z1 for open between pins 3 and 5. c. Check Q11 for open, Q12 for short, and Z1 for open between pins 1 and 3.

Table 5-5. +20V Supply Troubleshooting

SYMPTOM	STEP - ACTION	RESPONSE - PROBABLE CAUSE
High output voltage (higher than rating)	<ol style="list-style-type: none"> Attempt to turn down loop by shorting Q15 emitter-to-base. Measure voltage at output of OR-gate (TP4). 	<ol style="list-style-type: none"> If output voltage remains high, check Q1, Q15, and CR9 for short. If output voltage falls to near zero, remove short from Q15 and proceed to step (2). <ol style="list-style-type: none"> If TP4 is approx. -0.7V, check for open CR6 or R1, and defective U1. If TP4 is approx. +0.7V, check for defective Q2.
Low output voltage (lower than rating)	<ol style="list-style-type: none"> Measure voltage at output of OR-gate (TP4). Measure voltage at TP8. Measure voltage at TP7. Measure voltage at TP13. 	<ol style="list-style-type: none"> If TP4 is between zero and -0.7V, check for open Q1, Q15, R14, or CR59, and defective Q2. If TP4 is approx. +0.7V, proceed to step (2). <ol style="list-style-type: none"> If voltage at TP8 is positive, check Z1 for open between pins 6 and 13, check RB for open, and check for defective R6 or U1. If TP8 is approx. -0.7V, proceed to step (3). <ol style="list-style-type: none"> If TP7 is approx. +0.7V, check CR6 for short. If TP7 is approx. +1.4V, proceed to step (4). <ol style="list-style-type: none"> If TP13 is approx. -0.7V, replace U1. If TP13 is zero volts, check for open R10, and shorted CR2 or CR3. If TP13 is approx. +0.7V, check for open R2, shorted R1, or leaky or shorted C2.

Table 5-6. -20V Supply Troubleshooting

SYMPTOM	STEP - ACTION	RESPONSE - PROBABLE CAUSE
High output voltage (more than 1% greater than +20V supply)	<p>NOTE: The +20V supply must operate properly before troubleshooting the -20V supply.</p> <ol style="list-style-type: none"> Attempt to turn down loop by shorting Q13 emitter-to-base. Measure voltage at output of OR-gate (TP5). 	<ol style="list-style-type: none"> If output voltage remains high, check Q3, CR29, and Q13 for short. If output falls to near zero, remove short from Q13 and proceed to step (2). <ol style="list-style-type: none"> If voltage at TP5 is zero or negative, check for defective Q4. If TP5 is positive, proceed to step (3)

Table 5-6. -20V Supply Troubleshooting (Continued)

SYMPTOM	STEP - ACTION	RESPONSE - PROBABLE CAUSE
	3. Measure voltage at TP14.	a. If TP14 is approx. -0.7V, check for open CR26 or defective U2. b. If TP14 is approx. +0.7V, check Z1 for open from pin 7 to 12 or for short from pin 8 to 12.
Low output voltage (more than 1% lower than +20V supply)	1. Measure voltage at TP5. 2. Measure voltage at TP9. 3. Measure voltage at TP10. 4. Measure voltage at TP14.	a. If voltage at TP5 is zero or positive, check for open Q3, Q13, or R34, and defective Q4. b. If TP5 voltage is approx. -0.7V, proceed to step (2). a. If TP9 is negative, check for open Z1 between pins 6 and 15, open R28, and defective R26 or U2. b. If TP9 is approx. +0.7V, proceed to step (3). a. If TP10 is approx. -0.7V, check CR26 for short. b. If TP10 is -1.0 to -1.4V, proceed to step (4). a. If TP14 is approx. +0.7V, replace U2. b. If TP14 is zero volts, check for shorted CR22 or CR23. c. If TP14 is approx. -0.7V, check Z1 for open between pins 6 and 12 or short between pins 7 and 12, and check for leaky or shorted C12.

Table 5-7. +6V or +18V Supply Troubleshooting

SYMPTOM	STEP - ACTION	RESPONSE - PROBABLE CAUSE
High output voltage (higher than rating)	1. Attempt to turn down loop by shorting Q15 emitter-to-base. 2. Measure voltage at output of OR-gate (TP6).	a. If output voltage remains high, check Q7, Q15, and CR49 for short. b. If output voltage falls to near zero, remove short from Q15 and proceed to step (2). a. If TP6 is approx. -0.7V, check for open CR46 or R41, and defective U3. b. If TP6 is approx. +0.7V, check for defective Q8.
Low output voltage (lower than rating)	1. Measure voltage at output of OR-gate (TP6).	a. If TP6 is between zero and -0.7V, check for open Q7, Q15, R54, or CR59, and defective Q8. b. If TP6 is approx. +0.7V, proceed to step (2).

Table 5-7. +6V or +18V Supply Troubleshooting (Continued)

SYMPTOM	STEP - ACTION	RESPONSE - PROBABLE CAUSE
	2. Measure voltage at TP12.	a. If voltage at TP12 is positive, check for shorted R40, open R48, open Z1 between pins 5 and 14, and defective R46 or U3.
	3. Measure voltage at TP11.	a. If TP11 is approx. +0.7V, check CR46 for short. b. If TP11 is approx. +1.4V, proceed to step (4).
	4. Measure voltage at TP15.	a. If TP15 is approx. -0.7V, replace U3. b. If TP15 is zero volts, check for open R50, and shorted CR42 or CR43. c. If TP15 is approx. +0.7V, check for shorted R41, open R42, or leaky or shorted C22.

5-40 REPAIR AND REPLACEMENT

5-41 Series Regulator Replacement

5-42 To remove and replace a series regulator transistor:

- Remove the top and bottom covers from the instrument.
- Remove the collector screws and unsolder the base and emitter leads from the board to remove the transistor.
- To replace the transistor, follow the below reassembly order, as viewed from the bottom of the heat sink: collector screws, P. C. board, heat sink, two insulating bushings (in collector screw holes in heat sink), silicon grease (Dow DC-3 or HP6040-0200), mica insulator, another coating of silicon grease, transistor, lock washers, and hex-nuts.
- Resolder the emitter and base pins to the circuit board.

5-43 Semiconductor Replacement

5-44 Table 5-8 contains replacement data for the semiconductors used in this power supply. When replacing a semiconductor, use the listed Hewlett-Packard part or exact commercial replacement if these are available. If neither of these are immediately available and a part is needed without delay for operation or troubleshooting verification, the parts listed in the Alternate column can be tried with a high probability of success.

5-45 Notice that both the commercial and alternate replacements listed in Table 5-8 apply only to the HP power supplies covered by this manual and their use in any other Hewlett-Packard instrument is not necessarily recommended

because of inclusion in this table.

5-46 ADJUSTMENT AND CALIBRATION

5-47 Current Limit Adjustment

5-48 ±20V Supplies. Perform the following steps to adjust the current limit circuit in the +20V or -20V supply. Potentiometer R6 sets the +20V and R26 the -20V current limit.

- Turn the current limit adjustment pot (R6 or R26) fully counterclockwise to its minimum setting.
- Connect the test circuit of Figure 5-3 to the output of the supply to be adjusted. Use a 40Ω 10W resistor for R_L .
- Turn on the supply and set the ±20V VOLTAGE control for maximum output (fully clockwise).
- Turn the current limit pot (R6 or R26) slowly clockwise until the DVM indicates a voltage drop across the shunt corresponding to a current of 0.56A ±5%.

5-49 +6V Supply (Model 6236A). To adjust the current limit circuit in the +6V supply, proceed as follows:

- Check the setting of the current limit by performing steps (q) and (r) of Paragraph 5-16. (Be sure to set the output voltage to 6 volts.) If reducing the load resistance permits the current to exceed 2.9A, stop, turn R46 slightly clockwise, and repeat the test. If, instead, the current begins to fall before it reaches 2.6A, turn R46 slightly counterclockwise and repeat the test.
- Recheck the setting and readjust R46 until the test shows that the current limit circuit begins to reduce the current when a decreasing load resistance increases it to 2.75A ±5%.

Table 5-B. Semiconductor Replacement Data

Reference Designator	HP Part No.	Exact Commercial Replacement	Alternate
CR1, 9, 11-12, 21, 28-29, 31-32, 55-58, 59	1001-0327	1N6059	
CR2-7, 22-26, 42, 43, 45-47	1001-0033	1N485B	
CR41, 49, 51-52	1001-0416	1N4099	
CR44, 57	1001-0460	6TB523	
Q1, 7	1853-0063	6J152B	
Q2, 12, 15	1854-0448		6S1147 Motorola 2N3055
Q3, 8	1854-0563		
Q4	1853-0012	2N2904A	
Q11	1853-0052	2N3740	
Q13	1853-0041	2N4036	
Q14	1854-0027	2N2714A	CA 3468T RCA
U1-3	1826-0092		
U4	1820-0223	LM 301AH National	
VR1	1902-1221	1N825	
VR2	1902-316	1N4353B	
VR3	1902-0850	1N5343B	

5-50 +18V Supply (Model 6237A). To adjust the current limit circuit in the +18V supply, proceed as follows:

- Turn current limit adjustment pot (R46) fully clockwise to its minimum setting.
- Connect the test circuit of Figure 5-3 to the output of the +18V supply. Use an 18Ω 20W resistor for R_L.
- Turn on the supply and set the +18V VOLTAGE control for maximum output (fully clockwise).
- Turn current limit pot (R46) slowly counterclockwise until the DVM indicates a voltage drop across the shunt corresponding to a current of 1.1A ±5%.

5-51 Meter Calibration

5-52 Panel Voltmeters. Check the accuracy of the panel voltmeter by performing steps (a), (b), and (c) of the procedure in Paragraph 5-16. Since the same range resistors are used in both 20-volt ranges, their accuracy will be the same. Adjust R58 so that the percentage error in the +6V range (or +18V range) is equal to the error in the 20-volt ranges. Turn R58 clockwise to increase the indications or counterclockwise to decrease them. If R58 cannot calibrate all voltmeter ranges to within the ±4% specification, check the values of the resistors in the voltmeter circuit.

5-53 Panel Ammeter. Check and calibrate the panel ammeter by following the steps below.

- Connect the test setup shown in Figure 5-3 to the +6V (or +18V) output. Make the total resistance of R_L and the current sampling resistor 2.4 ohms (Model 6236A) or 1R ohms (6237A) to permit operating the supply at its full rated output. R_L should have a power rating of at least 20 watts.
- Close the switch and set the +6V (+18V) VOLTAGE control so that the DVM indicates an output of 2.5A (6236A) or 1.0A (6237A).
- Check and record the panel ammeter accuracy on the +6V or +18V range.
- Check each of the 20-volt ammeter ranges similarly, using the same test setup but making R_L a 40Ω 10W resistor and setting the voltage control for a 0.5A output. Record the panel ammeter accuracy on each 20-volt range.
- Turn R59 clockwise to increase the indications on all three ranges or counterclockwise to decrease them.
- If R59 cannot calibrate all three ammeter ranges within the ±4% specification, check the values of the resistors in the circuit, including current monitoring resistors R8, R28, and R48.

PARTS LIST

SECTION VI REPLACEABLE PARTS

6-1 INTRODUCTION

6-2 This section contains information for ordering replacement parts. Table 6-4 lists parts in alpha-numeric order by reference designators and provides the following information:

- a. Reference Designators. Refer to Table 6-1.
- b. Description. Refer to Table 6-2 for abbreviations.
- c. Total Quantity (TQ). Given only the first time the part number is listed except in instruments containing many sub-modular assemblies, in which case the TQ appears the first time the part number is listed in each assembly.
- d. Manufacturer's Part Number or Type.
- e. Manufacturer's Federal Supply Code Number. Refer to Table 6-3 for manufacturer's name and address.
- f. Hewlett-Packard Part Number.
- g. Recommended Spare Parts Quantity (RS) for complete maintenance of one instrument during one year of isolated service.
- h. Parts not identified by a reference designator are listed at the end of Table 6-4 under Mechanical and/or Miscellaneous. The former consists of parts belonging to and grouped by individual assemblies; the latter consists of all parts not immediately associated with an assembly.

6-3 ORDERING INFORMATION

6-4 To order a replacement part, address order or inquiry to your local Hewlett-Packard sales office (see lists at rear of this manual for addresses). Specify the following information for each part: Model, complete serial number, and any Option or special modification (J) numbers of the instrument; Hewlett-Packard part number; circuit reference designator; and description. To order a part not listed in Table 6-4, give a complete description of the part, its function, and its location.

Table 6-1. Reference Designators

A	= assembly	E	= miscellaneous electronic part
B	= blower (fan)	F	= fuse
C	= capacitor	J	= jack, jumper
CB	= circuit breaker	K	= relay
CR	= diode	L	= inductor
DS	= device, signaling (lamp)	M	= meter

Table 6-1. Reference Designators (Continued)

P	= plug	V	= vacuum tube, neon bulb, photocell, etc.
Q	= transistor	VR	= zener diode
R	= resistor	X	= socket
S	= switch	Z	= integrated circuit or network
T	= transformer		
TB	= terminal block		
TS	= thermal switch		

Table 6-2. Description Abbreviations

A	= ampere	mod.	= modular or modified
ac	= alternating current	mtg	= mounting
assy.	= assembly	n	= nano = 10^{-9}
bd	= board	NC	= normally closed
bkt	= bracket	NO	= normally open
°C	= degree Centigrade	NP	= nickel-plated
cd	= card	Ω	= ohm
coef	= coefficient	ord	= order by description
comp	= composition	OD	= outside diameter
CRT	= cathode-ray tube	p	= pico = 10^{-12}
CT	= center-tapped	P.C.	= printed circuit
dc	= direct current	pot.	= potentiometer
DPDT	= double pole, double throw	p-p	= peak-to-peak
DPST	= double pole, single throw	ppm	= parts per million
elect	= electrolytic	pvr	= peak reverse voltage
encap	= encapsulated	rect	= rectifier
F	= farad	rms	= root mean square
°F	= degree Fahrenheit	Si	= silicon
fxd	= fixed	SPDT	= single pole, double throw
Ge	= germanium	SPST	= single pole, single throw
H	= Henry	SS	= small signal
Hz	= Hertz	†	= slow-blow
IC	= integrated circuit	tan.	= tantalum
ID	= inside diameter	Ti	= titanium
incnd	= incandescent	V	= volt
k	= kilo = 10^3	var	= variable
m	= milli = 10^{-3}	ww	= wirewound
M	= mega = 10^6	W	= Watt
μ	= micro = 10^{-6}		
met.	= metal		
mfr	= manufacturer		

Table G-3. Code List of Manufacturers.

CODE	MANUFACTURER	ADDRESS	CODE	MANUFACTURER	ADDRESS
00020	EBY Sales Co., Inc.	Jamaica, N.Y.	07137	Transistor Electronics Corp.	Minneapolis, Minn.
00050	Autovox Corp.	New Bedford, Mass.	07138	Westinghouse Electric Corp.	Elmira, N.Y.
00053	Spingano Electric Co.	Pickens, S.C.	07203	Fairchild Camera and Instrument	Mountain View, Calif.
01121	S. Carolina Div.	Pickens, S.C.	07307	Bircher Corp., The	Los Angeles, Calif.
01121	Allen Bradley Co.	Milwaukee, Wis.	07307	Sylvania Electric Prod. Inc.	Mountainview, Calif.
01255	Litton Ind.	Beverly Hills, Calif.	07710	IRC Div. of TRW Inc.	Burlington, Iowa
01281	TRW Semiconductors, Inc.	Lawndale, Calif.	07010	Continental Device Corp.	Hawthorne, Calif.
01206	Texas Instruments, Inc.	Dallas, Texas	07033	Raytheon Co. Components Div.	Mountain View, Calif.
01080	RCL Electronics, Inc.	Manchester, N.H.	08484	Breeze Corporations, Inc.	Union, N.J.
01030	Amerock Corp.	Rockford, Ill.	08530	Rafanica Mica Corp.	Brooklyn, N.Y.
02107	Sparta Mfg. Co.	Dover, Ohio	08717	Sloan Company, The	Sun Valley, Calif.
02114	Ferroxcube Corp.	Saugerties, N.Y.	08730	Vemaline Products Co. Inc.	Wyckoff, N.J.
02008	Fenwal Laboratories	Morton Grove, Ill.	08806	General Elect. Co. Miniature	Lamp Dept. Cleveland, Ohio
02600	Amphenol Corp.	Broadview, Ill.	08863	Nylomatic Corp.	Norrisville, Pa.
02735	Radio Corp. of America, Solid State and	Saneriville, N.J.	08010	RCH Supply Co.	Vernon, Calif.
03508	Receiving Tube Div. G.E. Semiconductor Products Dept.	Syracuse, N.Y.	09021	Alrco Spear Electronic Components	Bradford, Pa.
03707	Eldema Corp.	Compton, Calif.	09182	*Hewlett-Packard Co. New Jersey Div.	Rockaway, N.J.
03877	Transifon Electronic Corp.	Wakelield, Mass.	09213	General Elect. Co. Semiconductor	Prod. Dept. Buffalo, N.Y.
03888	Pyrofilm Resistor Co., Inc.	Cedar Knolls, N.J.	09214	General Elect. Co. Semiconductor	Prod. Dept. Auburn, N.Y.
04009	Arrow, Hart and Hegeman Electric Co.	Hartford, Conn.	09353	C & K Components Inc.	Newton, Mass.
04072	ADC Electronics, Inc.	Harbor City, Calif.	09922	Burndy Corp.	Norwalk, Conn.
04213	Caddell & Burns Mfg. Co. Inc.	Mineola, N.Y.	11116	Wagner Electric Corp.	Tung-Sol Div. Bloomfield, N.J.
04404	*Hewlett-Packard Co. Palo Alto Div.	Palo Alto, Calif.	11236	CTS of Berne, Inc.	Berne, Ind.
04713	Motorola Semiconductor Prod. Inc.	Phoenix, Arizona	11237	Chicago Telephone of Cal. Inc.	So. Pasadena, Calif.
05277	Westinghouse Electric Corp.	Semiconductor Dept. Youngwood, Pa.	11502	IRC Div. of TRW Inc.	Boone, N.C.
05347	Ultronix, Inc.	Grand Junction, Colo.	11711	General Instrument Corp.	Newark, N.J.
05820	Wakefield Engr. Inc.	Wakefield, Mass.	12136	Philadelphia Handle Co.	Camden, N.J.
06001	General Elect. Co. Electronic	Capacitor & Battery Dept. Irmo, S.C.	12616	U.S. Terminals, Inc.	Cincinnati, Ohio
06004	Basik Div. Stewart-Warner Corp.	Bridgeport, Conn.	12617	Hamlin Inc.	Lake Mills, Wisconsin
06486	IRC Div. of TRW Inc.	Semiconductor Plant Lynn, Mass.	12697	Clarostat Mfg. Co. Inc.	Dover, N.H.
06540	Amatom Electronic Hardware Co. Inc.	New Rochelle, N.Y.	13103	Thermalloy Co.	Dallas, Texas
06555	Beede Electrical Instrument Co.	Penacook, N.H.	14493	*Hewlett-Packard Co.	Loveland, Colo.
06666	General Devices Co.	Indianapolis, Ind.	14655	Cornell-Dubilier Electronics Div.	Federal Pacific Electric Co.
06751	Seimoor Div. Components, Inc.	Phoenix, Arizona	14936	General Instrument Corp. Semicon-	ductor Prod. Group Hicksville, N.Y.
06776	Robinson Nugent, Inc.	New Albany, N.Y.	15801	Fenwal Elect.	Frammingham, Mass.
06812	Torrington Mfg. Co.	Van Nuys, Calif.	16289	Corning Glass Works	Raleigh, N.C.

*Use Code 28480 assigned to Hewlett-Packard Co., Palo Alto, California

Table G-3. Code List of Manufacturers

CODE	MANUFACTURER	ADDRESS
16760	Dalco Radio Div. of General Motors Corp.	Kokomo, Ind.
17646	Atlantic Semiconductors, Inc.	Ashbury Park, N.J.
17803	Fairchild Camera and Instrument Corp.	Mountain View, Calif.
17870	Daven Div. Thomas A. Edison Industries McGraw-Edison Co.	Orange, N.J.
18324	Signetics Corp.	Sunnyvale, Calif.
10315	Bendix Corp. The Navigation and Control Div.	Teterboro, N.J.
19701	Electra/Midland Corp.	Mineral Wells, Texas
21620	Fansteel Metallurgical Corp.	No. Chicago, Ill.
22229	Union Carbide Corp. Electronics Div.	Mountain View, Calif.
22753	UID Electronics Corp.	Hollywood, Fla.
23035	Pamotor, Inc.	Pampa, Texas
24446	General Electric Co.	Schenectady, N.Y.
24455	General Electric Co.	Nela Park, Cleveland, Ohio
24655	General Radio Co.	West Concord, Mass.
24681	LTV Electrosystems Inc. Memcor/Components Operations	Huntington, Ind.
26992	Dynacool Mfg. Co. Inc.	Saugerties, N.Y.
27014	National Semiconductor Corp.	Santa Clara, Calif.
28480	Hewlett-Packard Co.	Palo Alto, Calif.
28520	Heyman Mfg. Co.	Kenilworth, N.J.
28875	IMC Magnetics Corp.	Rochester, N.H.
31514	SAE Advance Packaging, Inc.	Santa Ana, Calif.
31827	Budwig Mfg. Co.	Ramona, Calif.
33173	G.E. Co. Tube Dept.	Owensboro, Ky.
35434	Lectrohm, Inc.	Chicago, Ill.
37942	P.R. Mallory & Co.	Indianapolis, Ind.
42190	Muter Co.	Chicago, Ill.
43334	New Departure-Hyatt Bearings Div. General Motors Corp.	Sandusky, Ohio
44655	Ohmite Manufacturing Co.	Skokie, Ill.
46384	Penn Engr. and Mfg. Corp.	Doylestown, Pa.
47904	Polaroid Corp.	Cambridge, Mass.
49956	Raytheon Co.	Lexington, Mass.
55026	Simpson Electric Co. Div. of American Gauge and Machine Co.	Chicago, Ill.
56289	Sprague Electric Co.	North Adams, Mass.
58474	Superior Electric Co.	Bristol, Conn.
58840	Syntron Div. of FMC Corp.	Homer City, Pa.

CODE	MANUFACTURER	ADDRESS
60730	Thomas and Butts Co.	Philadelphia, Pa.
61037	Union Carbide Corp.	New York, N.Y.
63743	Ward Leonard Electric Co.	Mt. Vernon, N.Y.
70563	Amperite Co. Inc.	Union City, N.J.
70901	Beumer Engrg Co.	Fort Washington, Pa.
70903	Belden Corp.	Chicago, Ill.
71218	Bud Radio, Inc.	Willoughby, Ohio
71279	Cambridge Thermionic Corp.	Cambridge, Mass.
71400	Busmann Mfg. Div. of McGraw & Edison Co.	St. Louis, Mo.
71460	CTS Corp.	Elkhart, Ind.
71468	I.T.T. Cannon Electric Inc.	Los Angeles, Calif.
71590	Globe-Union Inc.	Milwaukee, Wis.
71700	General Cable Corp. Cornish Wire Co. Div.	Williamstown, Mass.
71707	Coto Coll Co. Inc.	Providence, R.I.
71744	Chicago Miniature Lamp Works	Chicago, Ill.
71785	Cinch Mfg. Co. and Howard B. Jones Div.	Chicago, Ill.
71984	Dow Corning Corp.	Midland, Mich.
72136	Electro Motive Mfg. Co. Inc.	Willimantic, Conn.
72619	Dialight Corp.	Brooklyn, N.Y.
72699	General Instrument Corp.	Newark, N.J.
72765	Drake Mfg. Co.	Harwood Heights, Ill.
72962	Elastic Stop Nut Div. of Amerace Esna Corp.	Union, N.J.
72982	Erie Technological Products	Erie, Pa.
73096	Hart Mfg. Co.	Hartford, Conn.
73138	Beckman Instruments	Fullerton, Calif.
73168	Fenwal, Inc.	Ashland, Mass.
73293	Hughes Aircraft Co. Electron Dynamics Div.	Torrance, Calif.
73445	Amperex Electronic	Hicksville, N.Y.
73506	Bradley Semiconductor Corp.	New Haven, Conn.
73559	Carling Electric, Inc.	Hartford, Conn.
73734	Federal Screw Products, Inc.	Chicago, Ill.
74193	Heinemann Electric Co.	Trenton, N.J.
74545	Hubbell Harvey Inc.	Bridgeport, Conn.
74868	Amphenol Corp.	Amphenol RF Div. Danbury, Conn.
74970	E.F. Johnson Co.	Waseca, Minn.

Table G-3. Code List of Manufacturers

CODE	MANUFACTURER	ADDRESS
75042	IRC Div. of TRW, Inc.	Philadelphia, Pa.
75183	Howard B. Jones Div. of Cinch Mfg. Corp.	New York, N.Y.
75370	Kurz and Kasch, Inc.	Dayton, Ohio
75382	Kilka Electric Corp.	Mt. Vernon, N.Y.
75915	Littlefuse, Inc.	Des Plaines, Ill.
76381	Minnesota Mining and Mfg. Co.	St. Paul, Minn.
76385	Minbr Rubber Co. Inc.	Bloomfield, N.J.
76487	James Millon Mfg. Co. Inc.	Malden, Mass.
76493	J.W. Miller Co.	Compton, Calif.
76530	Cinch	City of Industry, Calif.
76854	Oak Mfg. Co. Div. of Oak Electro-Netics Corp.	Crystal Lake, Ill.
77068	Bendix Corp., Electrodynamics Div.	No. Hollywood, Calif.
77122	Palnut Co.	Mountainside, N.J.
77147	Patton-MacGuyer Co.	Providence, R.I.
77221	Phaotron Instrument and Electronic Co.	South Pasadena, Calif.
77252	Philadelphia Steel and Wire Corp.	Philadelphia, Pa.
77342	American Machine and Foundry Co.	Princeton, Ind.
77630	TRW Electronic Components Div.	Camden, N.J.
77764	Resistance Products Co.	Harrisburg, Pa.
78189	Illinois Tool Works Inc.	Elgin, Ill.
78452	Everlook Chicago, Inc.	Chicago, Ill.
78488	Stackpole Carbon Co.	St. Marys, Pa.
78526	Stahwyck Winding Div. Electric Mfg. Co. Inc.	San Fernando Newburgh, N.Y.
78553	Tinnerman Products, Inc.	Cleveland, Ohio
78584	Stewart Stamping Corp.	Yonkers, N.Y.
79136	Waldes Kohinoor, Inc.	L.I.C., N.Y.
79307	Whitehead Metals Inc.	New York, N.Y.
79727	Continental-Wirt Electronics Corp.	Philadelphia, Pa.
79963	Zierick Mfg. Co.	Mt. Kisco, N.Y.
80031	Meppco	Morristown, N.J.
80294	Bourns, Inc.	Riverside, Calif.
81042	Howard Industries	Racine, Wisc.
81073	Grayhill, Inc.	La Grange, Ill.
81483	International Rectifier	El Segundo, Calif.
81751	Columbus Electronics	Yonkers, N.Y.
82099	Goodyear Sundries & Mechanical Co. Inc.	New York, N.Y.
82142	Airco Speer Electronic Components	Du Bois, Pa.
82219	Sylvania Electric Products Inc.	Emporium, Pa.
82389	Switchcraft, Inc.	Chicago, Ill.
82647	Metals and Controls Inc.	Attleboro, Mass.

CODE	MANUFACTURER	ADDRESS
82806	Research Products Corp.	Madison, Wisc.
82877	Rotron Inc.	Woolstonk, N.Y.
82893	Vector Electronic Co.	Glendale, Calif.
83058	Carr Fastener Co.	Cambridge, Mass.
83186	Victory Engineering	Springfield, N.J.
83298	Bendix Corp.	Eatontown, N.J.
83330	Heriman H. Smith, Inc.	Brooklyn, N.Y.
83395	Central Screw Co.	Chicago, Ill.
83501	Gavitt Wire and Cable	Brookfield, Mass.
83508	Grant Pulley and Hardware Co.	West Nyack, N.Y.
83594	Burroughs Corp.	Plainfield, N.J.
83835	U.S. Radium Corp.	Morrisstown, N.J.
83877	Yardeny Laboratories	New York, N.Y.
84171	Arco Electronics, Inc.	Great Neck, N.Y.
84411	TRW Capacitor Div.	Ogallala, Neb.
86684	RCA Corp.	Harrison, N.J.
86838	Rummel Fibre Co.	Newark, N.J.
87034	Marco & Oak Industries	Anaheim, Calif.
87216	Philco Corp.	Lansdale, Pa.
87585	Stockwell Rubber Co.	Philadelphia, Pa.
87929	Tower-Olschan Corp.	Bridgeport, Conn.
88140	Cutler-Hammer Inc.	Lincoln, Ill.
88245	Litton Precision Products Inc.	USECO Van Nuys, Calif.
90834	Gulton Industries Inc.	Metuchen, N.J.
90763	United-Car Inc.	Chicago, Ill.
91345	Miller Dial and Nameplate Co.	El Monte, Calif.
91418	Radio Materials Co.	Chicago, Ill.
91506	Augat, Inc.	Attleboro, Mass.
91637	Dale Electronics, Inc.	Columbus, Neb.
91662	Elco Corp.	Willow Grove, Pa.
91929	Honeywell Inc.	Freeport, Ill.
92825	Whitso, Inc.	Schiller Pk., Ill.
93332	Sylvania Electric Prod.	Wohurn, Mass.
93410	Essex Wire Corp.	Mansfield, Ohio
94144	Raytheon Co.	Quincy, Mass.
94154	Wagner Electric Corp.	Livingston, N.J.
94222	Southco Inc.	Lester, Pa.
95263	Leecraft Mfg. Co. Inc.	L.I.C., N.Y.
95354	Methods Mfg. Co.	Rolling Meadows, Ill.
95712	Bendix Corp.	Franklin, Ind.
95987	Weckesser Co. Inc.	Chicago, Ill.
96791	Amphenol Corp.	Janesville, Wis.
97404	Industrial Retaining Ring Co.	Irvington, N.J.
97702	IMC Magnetics Corp.	Westbury, N.Y.
98291	Sealectro Corp.	Mamaroneck, N.Y.
98410	ETC Inc.	Cleveland, Ohio
98978	International Electronic Research Corp.	Burbank, Calif.
99934	Reynbrandt, Inc.	Boston, Mass.

*Use Code 71785 assigned to Cinch Mfg. Co., Chicago, Ill.

Table G-4. Replaceable Parts

REF. DESIG.	DESCRIPTION	QTY	MFR. PART NO.	MFR. CODE	HP PART NO.	RS
	Printed Circuit Board Assy.					
C1	fxd, elect 100 μ F 50V	2/3		28480	0180-0834	1
C2	fxd, tant 0.5 μ F 35V	3	150D885X9035B2	56289	0180-0116	1
C3, 4	fxd, mylar 0022 μ F 200V	2	292P22282-PTS	56289	0160-0164	1
C7	fxd, elect 1450 μ F 45V	2	(Type 88D) D38532	56289	0180-1883	1
C8, 9	fxd, cer .05 μ F 400V	6/4	33C17A3-CDH	56289	0150-0052	1
C11	fxd, elect 100 μ F 50V			28480	0180-0834	
C12	fxd, tant 0.5 μ F 35V		150D885X9035B2	56289	0180-0116	
C15	fxd, mylar .01 μ F 200V	2	292P10382-PTS	56289	0160-0161	1
C17	fxd, mylar .0033 μ F 200V	1	202P33282-PTS	56289	0160-0155	1
C17*	fxd, elect 1450 μ F 45V		(Type 88D) D38532	56289	0180-1883	
C18, 19	fxd, cer .05 μ F 400V		33C17A3-CDH	56289	0150-0052	
C24						
6236A	fxd, elect 1000 μ F 12V	1		28480	0180-0633	1
6237A	fxd, elect 100 μ F 50V			28480	0180-0634	
C22	fxd, tant 0.5 μ F 35V		150D885X9035B2	56289	0180-0116	
C23	fxd, cer .005 μ F 100V	1	C0236101E602MS27	56289	0160-2639	1
C24	fxd, mylar .01 μ F 200V		292P10382-PTS	56289	0160-0161	
C27						
6236A	fxd, elect 6800 μ F 25V	1	(Type 32D) D40018	56289	0180-1821	1
6237A	fxd, elect 3000 μ F 40V	1	32D5278-DQB	56289	0180-1889	1
C28, 29						
6236A	fxd, cer .05 μ F 400V		33C17A3-CDH	56289	0150-0052	
6237A	Not used					
C30						
6236A	Not used					
6237A	fxd, cer 0.1 μ F 500V	1	41C82B5-CDH	56289	0160-0260	1
C31						
6236A	fxd, tant 0.47 μ F 35V	1	150D474X9035A2	56289	0180-0376	1
6237A	fxd, elect 0.15 μ F 35V	1	T110A164K035AS	61637	0180-0218	1
C32	fxd, mica 330pF 500V	1	abd	72136	0160-2012	1
C33	fxd, elect 490 μ F 85V	1	(Type 88D) D38618	56289	0180-1888	1
C34	fxd, mylar 0.1 μ F 250Vac	1		28480	0160-4065	1
CR1	Diode, Si 1A 200V	13/15	1N5059	28480	1901-0327	7
CR2-7	Diode, Si	17	1N4858	28480	1901-0033	7
CR9, 11, 12, 21	Diode, Si 1A 200V		1N5059	28480	1901-0327	
CR22-26	Diode, Si		1N4858	28480	1901-0033	
CR28, 29, 31, 32	Diode, Si 1A 200V		1N5059	28480	1901-0327	
CR41	Diode, Si 1.5A 200V	3	1N4899	28480	1901-0416	3
CR42, 43	Diode, Si		1N4858	28480	1901-0033	
CR44	Diode, stabistor 150mA 15V	2	STB523	03508	1901-0460	2
CR45-47	Diode, Si		1N4858	28480	1901-0033	
CR49	Diode, Si 1A 200V		1N5059	28480	1901-0327	
CR51, 52	Diode, Si 1.5A 200V		1N4899	28480	1901-0416	
CR53, 54						
6236A	Not used					
6237A	Diode, Si 1A 200V		1N5059	28480	1901-0327	
CR55, 56	Diode, Si 1A 200V		1N5059	28480	1901-0327	
CR57	Diode, stabistor 150mA 15V		STB523	03508	1901-0460	
CR59	Diode, Si 1A 200V		1N5059	28480	1901-0327	

6236A/6237A

Table G-4. Replaceable Parts (Continued)

REF. DESIG.	DESCRIPTION	QTY	MFR. PART NO.	MFR. CODE ²	HP PART NO.	RS
CR60	Diode, Si		1N485B	28480	1801-0033	
L1, 2	Inductor, ferrite bead	2	GG-590-85/4A6	02114	0174-0804	1
Q2	SS NPN Si	3		28480	1864-0448	3
Q4	SS PNP Si	1	2N2804A	04713	1863-0012	1
Q11	Power PNP Si	1	2N3740	04713	1863-0062	1
Q12	SS NPN Si			28480	1864-0448	1
Q13	SS PNP Si	1	2N4036	28480	1863-0041	1
Q14	SS NPN Si	1	2N2714A	28480	1864-0027	1
Q16	SS NPN Si			28480	1864-0448	1
R2	fxd, film 2.61k 1% 1/8W	1	Type MF4C, T-0	19701	0698-0092	1
R3	fxd, ww 0.1 10% 3W	2	K46505	14841	0811-1827	1
R4	fxd, comp 18 5% 1/2W	3	EB1805	01121	0686-1805	1
R6	var, ww 3k	3	Type 110-F4	71460	2100-1823	1
R8	fxd, ww 1.25 1/2% 5W	2		28480	0811-3384	1
R9	fxd, film 5.49k 1% 1/8W	1	Type MF4C, T-0	19701	0698-3382	1
R10	fxd, film 1.5k 1% 1/8W	1	Type MF4C, T-0	19701	0757-0427	1
R11	fxd, film 110k 1% 1/8W	2	Type MF4C, T-0	19701	0757-0466	1
R12	fxd, film 139 1% 1/8W	3	Type CEA, T-0	07716	0698-4099	1
R13	fxd, comp 15k 5% 1/2W	1	EB1636	01121	0686-1636	1
R14	fxd, comp 510 5% 1W	1	GB5115	01121	0686-5115	1
R15	fxd, comp 10k 5% 1/2W	2	EB1036	01121	0686-1036	1
R23	fxd, ww 0.25 10% 3W	1	K46503	14841	0811-1829	1
R24	fxd, comp 18 5% 1/2W		EB1805	01121	0686-1805	1
R26	var, ww 3k		Type 110-F4	71460	2100-1823	1
R28	fxd, ww 1.25 1/2% 5W			28480	0811-3384	1
R32	fxd, film 139 1% 1/8W		Type CEA, T-0	07716	0698-4099	1
R33	fxd, film 15k 1% 1/8W	2	Type MF4C, T-0	19701	0757-0446	1
R34	fxd, comp 510 5% 1/2W	1	EB5115	01121	0686-5115	1
R35	fxd, comp 10k 5% 1/2W		EB1036	01121	0686-1036	1
R42						
6236A	fxd, film 8.66k 1% 1/8W	1	Type MF4C, T-0	19701	0698-8076	1
6237A	fxd, film 2.87k 1% 1/8W	1	Type MF4C, T-0	19701	0698-7631	1
R43	fxd, ww 0.1 10% 3W		K46505	14841	0811-1827	1
R44	fxd, comp 18 5% 1/2W		EB1805	01121	0686-1805	1
R45						
6236A	Not used					
6237A	fxd, film 2k 1% 1/8W	1	CEA993	07716	0757-0283	1
R46	var, ww 3k		Type 110-F4	71460	2100-1823	1
R47						
6236A	fxd, film 23k 1% 1/8W	1	Type MF4C, T-0	19701	0698-3269	1
6237A	Not used					
R48						
6236A	fxd, ww 0.25 1/2% 5W	1		28480	0811-3383	1
6237A	fxd, ww 0.625 1/2% 5W	1		28480	0811-3395	1
R49						
6236A	fxd, film 750 1% 1/8W	1	Type MF4C, T-0	19701	0757-0420	1
6237A	Not used					

Table 6-4. Replaceable Parts (Continued)

REF. DESIG.	DESCRIPTION	TQ	MFR. PART NO.	MFR. CODE	HP PART NO.	RS
R60						
6236A	fxd, film 330 1% 1/8W	1	Type MF4C, T-0	10701	0698-5393	1
6237A	fxd, film 3.83k 1% 1/8W	1	Type MF4C-1	10701	0698-3153	1
R61	fxd, film 110k 1% 1/8W	1	Type MF4G, T-0	10701	0757-0466	1
R62	fxd, film 139 1% 1/8W	1	Type GEA, T-0	07716	0698-4099	1
R63	fxd, comp 7.5k 5% 1/2W	1	EB7525	01121	0686-7525	1
R64						
6236A	fxd, ww 60 5% 10W	1	Type 247E	56289	0811-1902	1
6237A	fxd, ww 135 5% 10W	1	Type 247E	56289	0811-1905	1
R65						
6236A	fxd, comp 2.2k 5% 1/2W	1	EB2225	01121	0686-2225	1
6237A	fxd, comp 11k 5% 1/2W	1	EB1135	01121	0686-1135	1
R66	fxd, film 270 1% 1/8W	1	Type CEA, T-0	07716	0757-0269	1
R67	fxd, film 221k 1% 1/8W	1	Type MF4C, T-0	10701	0757-0473	1
R68, 69	var. ww 250	2	Type 110	71450	2100-0439	1
R69	fxd, film 15k 1% 1/8W	1	Type MF4C, T-0	10701	0757-0446	1
R61	fxd, comp 240 5% 1/2W	1	EB2415	01121	0686-2415	1
R62	fxd, film 11k 1% 1/8W	2	Type MF4C, T-0	10701	0757-0443	1
R63	fxd, film 3.6k 2% 1/8W	1	Type MF4C, T-0	10701	0757-0937	1
R64	fxd, film 11k 1% 1/8W	1	Type MF4C, T-0	10701	0757-0443	1
R65	fxd, film 16.2k 1% 1/8W	1	Type MF4C, T-0	10701	0757-0447	1
R66	fxd, film 470 1% 1/4W	1	Type MF52C, T-0	10701	0698-3506	1
R67						
6236A	fxd, ww 135 5% 3W	1	Type 242E	56289	0812-0112	1
6237A	fxd, ww 220 5% 2W	1	Type BWH	75042	0811-1763	1
R68						
6236A	fxd, ww 250 5% 3W	1	Type 242E	56289	0811-1219	1
6237A	fxd, ww 490 5% 3W	1	Type 242E	56289	0811-1801	1
R69						
6236A	fxd, ww 100 5% 10W	1	Type 247E	56289	0811-1903	1
6237A	fxd, ww 150 5% 10W	1	Type 247E	56289	0811-1906	1
R70						
6236A	fxd, ww 40 5% 5W	1	Type 243E	56289	0812-0083	1
6237A	fxd, ww 75 5% 5W	1	Type 5XM	14841	0812-0097	1
R71	fxd, film 471 1% 1/8W	1	Type CMF-55-1, T-1	91637	0698-5514	1
R72	fxd, comp 33k 5% 1/2W	1	EB3335	01121	0686-3335	1
R73						
6236A	Not used					
6237A	fxd, comp 1.1m 5% 1/2W	1	EB1155	01121	0686-1155	1
R74						
6236A	(jumper installed)					
6237A	fxd, film 0.98k 1% 1/8W	1	Type CMF-55-1, T-1	91637	0698-4470	1
S3	slide switch, dual DPDT	1		28480	3101-1914	1
T1	Power Transformer	1		28480	06236-80091	1
U1-3	Dual op amp, IC	3		28480	1826-0092	1
U4	Operational amp, IC	1	LM301AH	27014	1820-0223	1
VR1	Diode, zener 6.2V	1	1N825	28480	1902-1221	1
VR2	Diode, zener 9.09V	1	1N4353B	28480	1902-3149	1
VR3	Diode, zener 7.5V	1		28480	1902-0650	1
Z1	Resistor network	1		28480	1810-0217	1

Table 6-4. Replaceable Parts (Continued)

REF. DESIG.	DESCRIPTION	TO*	MFR. PART NO.	MFR. CODE	HP PART NO.	RS
DS1	Front Panel - Electrical					
M1	Indicator light, LINE ON	1	699-237-WHITE	72765	1450-0410	1
6236A	Voltmeter	1		28480	1120-1380	1
6237A	Voltmeter	1		28480	1120-1382	1
M2						
6236A	Ammeter	1		28480	1120-1381	1
6237A	Ammeter	1		28480	1120-1383	1
S1	Toggle Switch, LINE ON	1	7318-PHI	09353	3101-1694	1
S2	3-position rotary switch, MEYER	1		28480	3100-1943	1
R1, R41	var. 10k	2	Series 43	12697	2100-1854	1
F1	Rear Heat Sink - Electrical					
	Fuse, 2A 250V (Std. Option and Option 100)	1	312002	75915	2110-0002	5
F1	Fuse, 1A 250V (Options 220 and 240)	1	312001	75915	2110-0001	5
Q1, 7	Power PNP Si	2	SJ1528	04713	1853-0063	2
Q3, B	Power NPN Si	2		28480	1854-0563	2
	Circuit Board - Mechanical					
	Heat Dissipator (CR51, 52, Q2 in 6236A; Q2 in 6237A)	3/1	207-CB	05820	1205-0033	
	Heat Sink (Q11)	1		28480	5000-6025	
	Spacer (for Q11 heat sink)	2		28480	0380-0716	
	Rubber bumper	4		28480	0403-0086	
	Front Panel - Mechanical					
	Binding Post, red	4		28480	1510-0091	
	Binding Post, black	1		28480	1510-0107	
	Hex nut, nylon, 3/8-32	5		28480	2950-0144	
	Meter bezel	2		28480	4040-0571	
	Spring, compression (meter mount)	8		28480	1460-0720	
	Retainer, push-on (for DS1)	1		28480	0510-0509	
	Knob (R1, R41, S2)	3		28480	0370-1699	
	Miscellaneous					
	Bushing, transistor insulator	8		28480	0340-0168	
	Transistor insulator, mica	4		28480	0340-0174	
	Fuse holder	1	342014	75915	1400-0084	
	Lockwasher, fuseholder	1		28480	2190-0054	
	Nut, nylon 1/2 - 24	1		28480	2950-0131	
	Foot, rubber	4		28480	0403-0088	
	Line cord strain relief	1		28480	0400-0013	
	Line cord	1			see par. 2-21	
	Chassis assembly, left	1		28480	5060-7955	
	Chassis assembly, right	1		28480	5060-7956	
	Front panel (6236A)	1		28480	06236-60001	
	Front panel (6237A)	1		28480	06236-60001	
	Heat sink, rear	1		28480	5020-8423	
	Cover, top and bottom	2		28480	5000-9424	
	Packing carton	1		28480	9211-0848	
	Floater pad, packing carton	2		28480	9220-1218	

SCHEMATIC DIAGRAMS


SECTION VII CIRCUIT DIAGRAMS

7-1 COMPONENT LOCATION DIAGRAM

7-3 SCHEMATIC DIAGRAM

7-2 The component location diagram for power supply Models 6236A and 6237A is given below. The illustration shows the physical locations and reference designations of parts mounted on the printed circuit card. (Not all parts are used in both models.)

7-4 Figure 7-1 is a combined schematic diagram of the 6236A and 6237A. The test points (circled numbers) shown on the schematic correspond to those on the component location diagram and in the troubleshooting procedure in Section V. The hatched areas on the schematic indicate components and jumpers used in one model only.

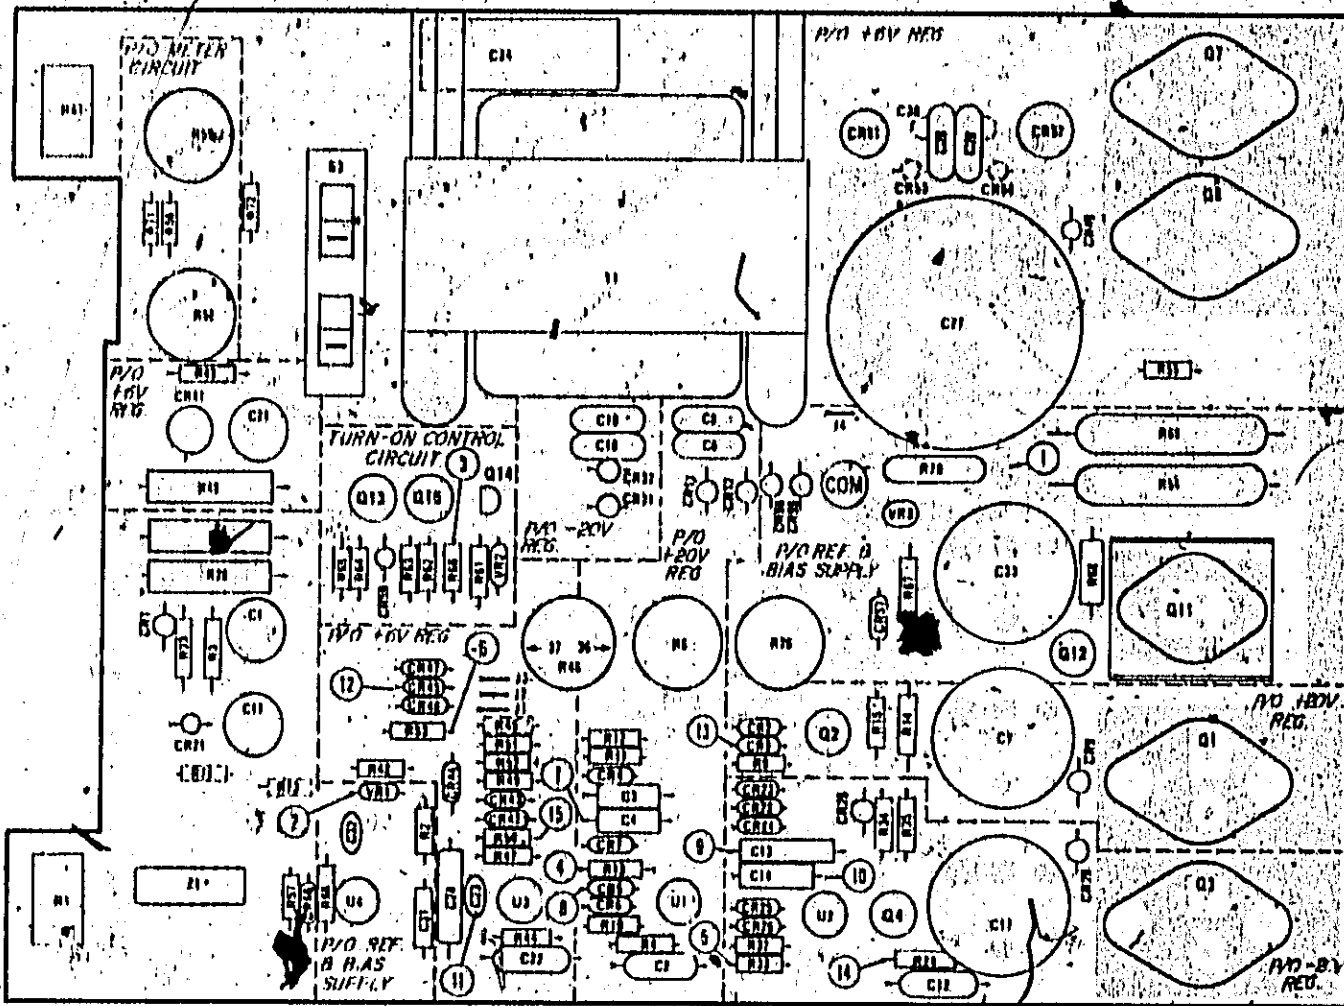

Models 6236A and 6237A, Component Locations


SCHEMATIC NOTES


1. ALL COMPONENTS ARE LOCATED ON PCB BOARD, UNLESS OTHERWISE INDICATED
2. P DENOTES CHASSIS MOUNTED COMPONENTS
3. --- DENOTES CONSTANT VOLTAGE FEEDBACK PATH
4. - - - DENOTES CURRENT LIMIT FEEDBACK PATH
5. ALL RESISTORS IN OHMS, UNLESS OTHERWISE INDICATED
6. THE SQUARE PLATED PADS ON THE PCB BOARD INDICATE ONE OF THE FOLLOWING:
 - A - PIN 1 OF AN IC OR TRANSFORMER
 - B - POSITIVE END OF A POLARIZED CAPACITOR
 - C - CATHODE OF A DIODE OR EMITTER OF A TRANSISTOR
7. IN RESISTOR NETWORK Z1 Z1-1 AND Z1-2 ARE MATCHED TO WITHIN 1%, AND Z1-1 AND Z1-2 ARE MATCHED TO WITHIN 0.5% AND TRACK WITHIN 1.00 PPM/°C
8. FOR 100% OR 100% OPERATION USE A 5A FUSE, HP PART NO. 810-0002, 5/16" RIGID OR 5/16" OPERATION USE A 1A FUSE, HP PART NO. 2110-0001
9. THE LOCATION AND ORIENTATION OF R46 IS THE SAME FOR MODEL'S 6236A AND 6237A, BUT ITS ORIENTATION ON THE BOARD DIFFERS
10. THE HATCHED AREAS ON THE SCHEMATIC INDICATE COMPONENTS AND JUMPERS THAT ARE USED IN ONE MODEL ONLY

11. PIN LOCATIONS FOR TRANSISTORS ARE SHOWN BELOW



12. PIN LOCATIONS FOR INTEGRATED CIRCUITS AND THE RESISTOR NETWORK ARE SHOWN BELOW.

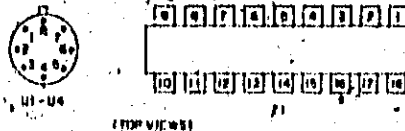

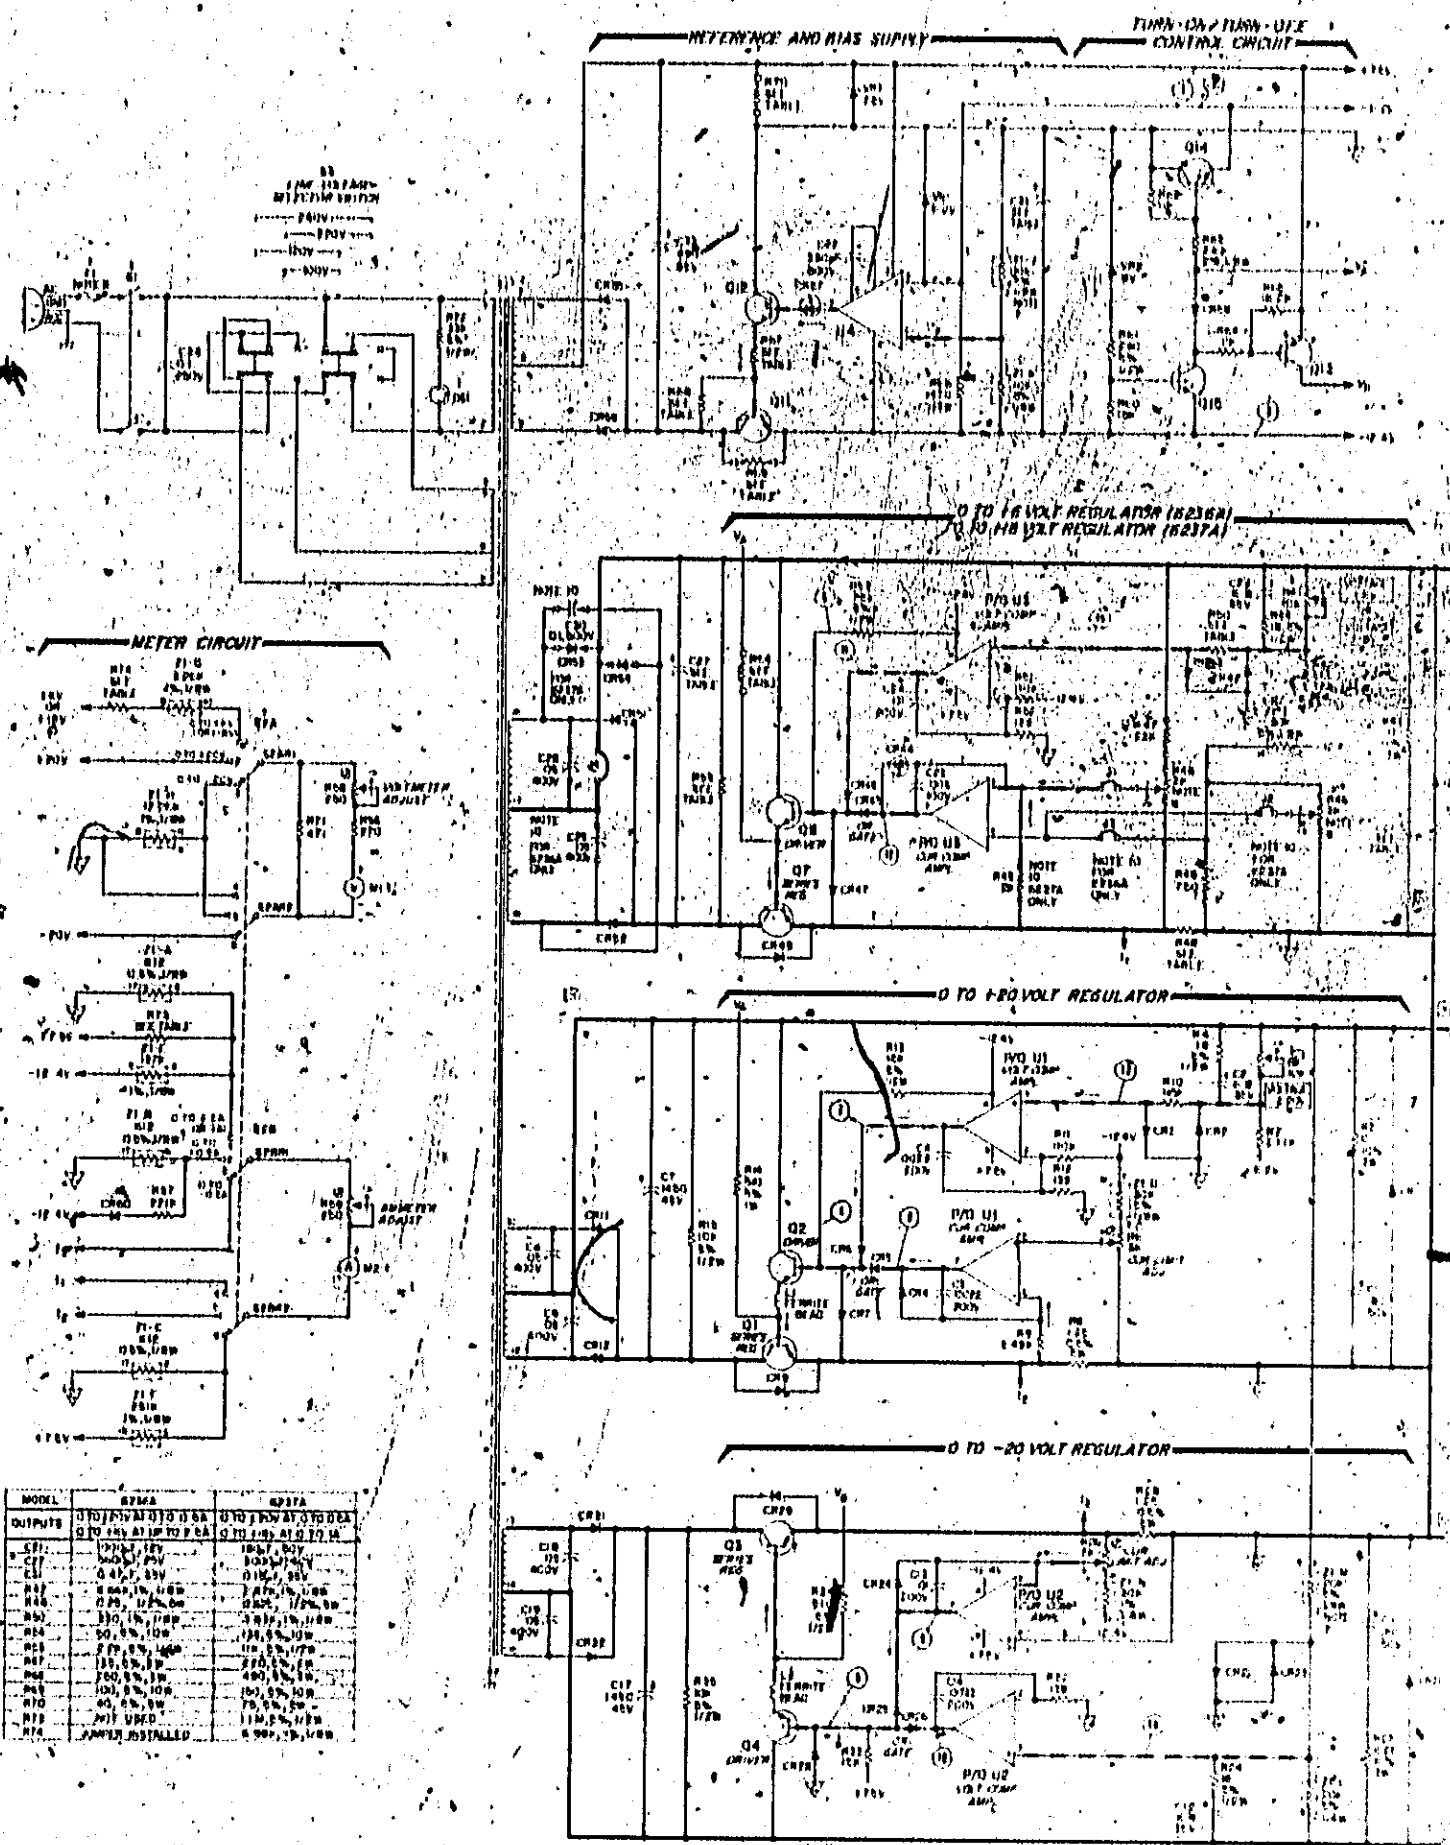

MODEL	6236A	6237A
OUTPUTS	0 TO 15V AT 0.5A 0 TO 5V AT 1.0A	0 TO 15V AT 0.5A 0 TO 5V AT 1.0A
R1	100K, 1/2W	100K, 1/2W
R2	100K, 1/2W	100K, 1/2W
R3	100K, 1/2W	100K, 1/2W
R4	100K, 1/2W	100K, 1/2W
R5	100K, 1/2W	100K, 1/2W
R6	100K, 1/2W	100K, 1/2W
R7	100K, 1/2W	100K, 1/2W
R8	100K, 1/2W	100K, 1/2W
R9	100K, 1/2W	100K, 1/2W
R10	100K, 1/2W	100K, 1/2W
R11	100K, 1/2W	100K, 1/2W
R12	100K, 1/2W	100K, 1/2W
R13	100K, 1/2W	100K, 1/2W
R14	100K, 1/2W	100K, 1/2W

Figure 7-1. Models 6236A and 6237A, Schematic Diagram