



**Agilent N9340B
Handheld Spectrum Analyzer**

Quick Start Tutorial



Agilent Technologies

www.valuetronics.com

Notice

© Agilent Technologies, Inc. 2008-2010

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

Manual Part Number

N9340-90006

Edition

Second Edition, Jan 2010

Printed in China

Agilent Technologies, Inc.

No. 116 Tuo Xin West 1st Street

Hi-Tech Industrial Zone (South)

Chengdu 610041, China

Is your product software up-to-date?

Periodically, Agilent releases software updates to fix known defects and incorporate product enhancements. To search for software updates for your product, go to the Agilent Technical Support website at www.agilent.com/find/techsupport.

Warranty

The material contained in this document is provided “as is,” and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as “Commercial computer software” as defined in DFAR 252.227-7014 (June 1995), or as a “commercial item” as defined in FAR 2.101(a) or as “Restricted computer software” as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies’ standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

N9340B at a Glance



Power on your N9340B for the first time

Easy two steps:



1. Install the battery



2. Press the power switch to power on the analyzer

Tip: Fully charge the battery when you use it for the first time. Charge the battery only when it is installed in the analyzer with the AC-DC adapter in the shipment.

Adjusting screen display

Press **[SYS]** > **{Brightness}** and rotate the knob to adjust the brightness of the screen.

Using soft carrying case



Making a basic measurement

Assume you are going to measure a signal of a frequency of 1 GHz and an amplitude of -10 dBm, refer to the following steps::

1. Connect the cable to the **RF IN** connector.
2. Press [**Preset**] to set the analyzer to its factory default settings.
3. Press [**FREQ**] > [**1**] > {**GHz**} to set the center frequency to 1 GHz.
4. Press [**SPAN**] > [**500**] > {**MHz**} to set the frequency span to 500 MHz.
5. Press [**AMPTD**] > [**0**] > {**dBm**} to set the reference level to 0 dBm.
6. Press [**Marker**] > {**Peak search**} to place a marker (labeled 1) at the highest peak on the display.



Learn more about making measurements and using power suite from *N9340B User's Guide*.

Saving/Loading a trace

Before saving a trace, you need to identify whether to save the trace into the locale memory of the analyzer or an external USB memory stick by pressing **[SYS] > {File} > {File Setup} > {Save Path}**.

Quick saving a trace

Press **[ESC/CLR] > [SAVE]** to quick save the current trace into the designated memory (**Local/USB**), with a given file name HYTRACE.DAT. The subsequent saved trace will be automatically assigned with associated file name, such as HYTRACE_1.DAT, HYTRACE_2.DAT.

Loading a trace

1. Press **[SYS] > {File} > {View}** to identify a memory where a trace will be recalled.
2. Press **[SYS] > {File} > {File Setup} > {File Type}** to select the Trace file.
3. Rotate the knob to select a trace (*.DAT), then press **{Load Now}** to load the trace immediately.

Refer to *N9340B User's Guide* for more information about the managing the file types, such as:

- Trace (*.DAT)
- Screen (*.JPG)
- State (*.STA)
- Limit Pattern (*.PTN)
- Spectrum Mask (*.MSK)
- System Setup (*.SET)

www.agilent.com

© Agilent Technologies, Inc. 2008-2010

Second Edition



N9340-90006



Agilent Technologies

www.valuetronics.com