



**High Power
DC Electronic Load
63200 Series
Operation & Programming
Manual**

Version 2.3
July 2009
P/N A11 000599

Legal Notices

The information in this document is subject to change without notice.

Chroma ATE INC. makes no warranty of any kind with regard to this manual, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Chroma ATE INC. shall not be held liable for errors contained herein or direct, indirect, special, incidental or consequential damages in connection with the furnishing, performance, or use of this material.

CHROMA ATE INC.

66 Hwa-Ya 1st Rd., Hwa-Ya Technical Park, Kuei-Shan Hsiang, Taoyuan Hsien, Taiwan

Copyright Notices. Copyright 2003-2009 Chroma ATE INC., all rights reserved.

Reproduction, adaptation, or translation of this document without prior written permission is prohibited, except as allowed under the copyright laws.

Warranty

All Chroma instruments are warranted against defects in material and workmanship for a period of one year after date of shipment. Chroma agrees to repair or replace any assembly or component found to be defective, under normal use during this period. Chroma's obligation under this warranty is limited solely to repairing any such instrument, which in Chroma's sole opinion proves to be defective within the scope of the warranty when returned to the factory or to an authorized service center. Transportation to the factory or service center is to be prepaid by purchaser. Shipment should not be made without prior authorization by Chroma.

This warranty does not apply to any products repaired or altered by persons not authorized by Chroma, or not in accordance with instructions furnished by Chroma. If the instrument is defective as a result of misuse, improper repair, or abnormal conditions or operations, repairs will be billed at cost.

Chroma assumes no responsibility for its product being used in a hazardous or dangerous manner either alone or in conjunction with other equipment. High voltage used in some instruments may be dangerous if misused. Special disclaimers apply to these instruments. Chroma assumes no liability for secondary charges or consequential damages and in any event, Chroma's liability for breach of warranty under any contract or otherwise, shall not exceed the purchase price of the specific instrument shipped and against which a claim is made.

Any recommendations made by Chroma for use of its products are based upon tests believed to be reliable, but Chroma makes no warranty of the results to be obtained. This warranty is in lieu of all other warranties, expressed or implied, and no representative or person is authorized to represent or assume for Chroma any liability in connection with the sale of our products other than set forth herein.

CHROMA ATE INC.

66 Hwa-Ya 1st Rd., Hwa-Ya Technical Park,
Kuei-Shan Hsiang, Taoyuan Hsien, Taiwan
Tel: 886-3-327-9999
Fax: 886-3-327-2886
<http://www.chromaate.com>

Material Contents Declaration

A regulatory requirement of The People's Republic of China defined by specification SJ/T 11364-2006 mandates that manufacturers provide material contents declaration of electronic products, and for Chroma products are as below:

Part Name	Hazardous Substances					
	Lead	Mercury	Cadmium	Hexavalent Chromium	Polybrominated Biphenyls	Polybromodiphenyl Ethers
	Pb	Hg	Cd	Cr ⁶⁺	PBB	PBDE
PCBA	×	O	O	O	O	O
CHASSIS	×	O	O	O	O	O
ACCESSORY	×	O	O	O	O	O
PACKAGE	O	O	O	O	O	O
<p>“O” indicates that the level of the specified chemical substance is less than the threshold level specified in the standards of SJ/T-11363-2006 and EU 2005/618/EC.</p> <p>“×” indicates that the level of the specified chemical substance exceeds the threshold level specified in the standards of SJ/T-11363-2006 and EU 2005/618/EC.</p> <ol style="list-style-type: none"> 1. Chroma is not fully transitioned to lead-free solder assembly at this moment; however, most of the components used are RoHS compliant. 2. The environment-friendly usage period of the product is assumed under the operating environment specified in each product's specification. 						

Disposal

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new one, the retailer is legally obligated to take back your old appliances for disposal at least for free of charge.



CE-Conformity Declaration

For the following equipment:

Product Name: DC Electronic Load

Model Name: 63201, 63202, 63203, 63204, 63205, 63206, 63207, 63208, 63209, 63210

Manufacturer's Name: Chroma ATE Inc.

Manufacturer's Address: 66 Hwa-Ya 1st Rd., Hwa-Ya Technical Park,
Kuei-Shan Hsiang, Taoyuan Hsien, Taiwan

is herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States Relating to Electromagnetic Compatibility (89/336/EEC) and electrical equipment designed for use within certain voltage limits (73/23/EEC;93/68/EEC)

For electromagnetic compatibility, the following standards were applied:


EMC: EN61326-1(1997):CISPR22:1994+A1 Class A
 IEC 1000-3-2:1995 Harmonics Current
 IEC 1000-3-3:1995 Voltage Fluctuations
 IEC 1000-4-2:1995 Electrostatic Discharge
 IEC 1000-4-3:1995 Radio-Frequency Electromagnetic Field
 IEC 1000-4-4:1995 Fast Transient Burst
 IEC 1000-4-5:1995 Surge Immunity test
 IEC 1000-4-6:1995 Immunity To Conducted Disturbances, Induced
 By Radio Frequency Fields
 IEC 1000-4-11:1994 Voltage Dips, Short Interruptions and Voltage
 Variations Immunity Test

For safety requirement, the following standard was applied:

Safety: EN61010-1(1993)+A2(1995)

Taiwan
Place

May 2005
Date

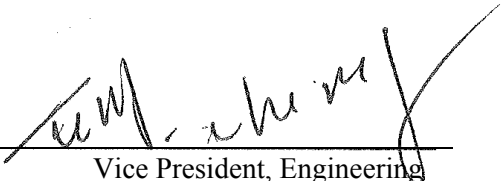
Vice President, Engineering

Warning:

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

SAFETY SUMMARY

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or specific WARNINGS given elsewhere in this manual will violate safety standards of design, manufacture, and intended use of the instrument. *Chroma* assumes no liability for the customer's failure to comply with these requirements.

BEFORE APPLYING POWER

Verify that the product is set to match the available line voltage and the correct fuse is installed.

PROTECTIVE GROUNDING

Make sure to connect the protective grounding to prevent an electric shock before turning on the power.

NECESSITY OF PROTECTIVE GROUNDING

Never cut off the internal or external protective grounding wire, or disconnect the wiring of protective grounding terminal. Doing so will cause a potential shock hazard that may bring injury to a person.

FUSES

Only fuses with the required rated current, voltage, and specified type (normal blow, time delay, etc.) should be used. Do not use repaired fuses or short-circuited fuse holders. To do so could cause a shock or fire hazard. **Caution:** *Be sure to remove the power cord before changing the fuses.*

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE

Do not operate the instrument in the presence of flammable gases or fumes.




DO NOT REMOVE THE COVER OF THE INSTRUMENT

Operating personnel must not remove the cover of the instrument. Component replacement and internal adjustment can be done only by qualified service personnel.

CLEANING THE INSTRUMENT

Please use a clean and dry cloth to clean the instrument surface.

SAFETY SYMBOLS

	DANGER – High voltage.
	Explanation: To avoid injury, death of personnel, or damage to the instrument, the operator must refer to an explanation in the instruction manual.
	Protective grounding terminal: To protect against electrical shock in case of a fault. This symbol indicates that the terminal must be connected to ground before operation of equipment.
WARNING	The WARNING sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a WARNING sign until the indicated conditions are fully understood and met.
CAUTION	The CAUTION sign denotes a hazard. It calls attention to an operating procedure, or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the products. Do not proceed beyond a CAUTION sign until the indicated conditions are fully understood and met.

Revision History

The following lists the additions, deletions and modifications in this manual at each revision.

Date	Version	Revised Sections
Mar. 2003	1.3	Update “ <i>CE Conformity Declaration</i> ” to add model 63205/63207/63209 Update “ <i>Specifications</i> ” for changes and addition of model 63205/63207/ 63209 Add the rear panel of Model 63205/630206/63207/63208/63209 in “ <i>Rear Panel Description</i> ”
May 2003	1.4	Add a note to the “ <i>Specifications</i> ” for the fuse of 63205
Jan. 2004	1.5	Modify the “ <i>Specifications</i> ” in Chapter 1 for power rating changes for all models. Add a section of “ <i>Dimension Outline for 63200 Series</i> ” in Chapter 1.
Jan. 2005	1.6	Add the following sections: – “ <i>Diagram of RS485 Parallel Connections</i> ” in Chapter 2. – “ <i>Load Surge Capability</i> ” in Chapter 3. – “ <i>Timer Function for Battery Discharge Testing</i> ” in Chapter 3. Modify the following sections: – “ <i>Specifications</i> ” in Chapter 1. – “ <i>Protection Features</i> ” in Chapter 3.
Jun. 2005	1.7	Change the address of Chroma in CE-Conformity Declaration
Nov. 2005	1.8	Modify the “ <i>Specifications</i> ” in Chapter 1.
Jun. 2006	1.9	Modify the followings: – “ <i>Specifications</i> ” to add a new model 63210. – Description in the section of “ <i>Parallel Connections</i> ”. – “ <i>Load Connections</i> ” in the section of “ <i>Application Connection</i> ”. – Commands in the chapter of “ <i>Language Dictionary</i> ”. – “ <i>Questionable Status</i> ” in the chapter of “ <i>Status Reporting</i> ”. – “ <i>Command Summary</i> ” in the chapter of “ <i>Index</i> ”. Add “ <i>Installing the 63200 Protective Cover</i> ” in the section of “ <i>Dimension Outline for 63200 Series</i> ”.
Dec. 2006	2.0	Add the following: – “ <i>Von Protection</i> ”, “ <i>CR Offset Error Compensation</i> ” and the GPIB related commands in the chapters of “ <i>Operation Overview</i> ”, “ <i>Local Operation</i> ” and “ <i>Language Dictionary</i> ”. – “ <i>Battery Discharge</i> ” and the GPIB related commands in the chapters of “ <i>Local Operation</i> ” and “ <i>Language Dictionary</i> ”. Modify the contents of “ <i>Voltage & Current Monitor</i> ” in the chapter of “ <i>Operation Overview</i> ”.
Mar. 2007	2.1	Add “ <i>Material Contents Declaration</i> ”.
Mar. 2008	2.2	Delete GPIB cable from the section of “ <i>Inspection</i> ” in the chapter of “ <i>Installation.</i> ” Modify the contents of “ <i>Load Connections</i> ” in the chapter of “ <i>Installation.</i> ” Modify the figure of “ <i>Timer Function for Battery Discharge Testing</i> ” in the chapter of “ <i>Operation Overview.</i> ”

July 2009 2.3 Add Battery commands to the section of “*Command Summary*.”
Update the detail specifications and descriptions in the table of
“*Specification*” section.

Table of Contents

1. General Information	1-1
1.1 Introduction	1-1
1.2 Description	1-1
1.3 Overview of Key Features.....	1-2
1.4 Specifications	1-2
1.5 Dimension Outline for 63200 Series.....	1-12
2. Installation	2-1
2.1 Introduction	2-1
2.2 Inspection	2-1
2.3 Installing.....	2-1
2.3.1 Changing Line Voltage	2-1
2.3.2 Turn-On Self-Test	2-2
2.4 Application Connection	2-3
2.4.1 Load Connections.....	2-3
2.4.2 Remote Sensing Connections.....	2-4
2.4.3 Parallel Connections.....	2-5
2.4.4 Diagram of RS485 Parallel Connections	2-6
2.5 Remote Control Connection.....	2-7
3. Operation Overview.....	3-1
3.1 Introduction	3-1
3.2 Front Panel Description.....	3-1
3.3 Rear Panel Description.....	3-2
3.4 Local/Remote Control	3-4
3.5 Modes of Operation.....	3-5
3.5.1 Constant Current Mode	3-5
3.5.2 Constant Resistance Mode	3-7
3.5.3 Constant Voltage Mode.....	3-8
3.5.4 Constant Power Mode	3-8
3.5.5 Load Surge Capability.....	3-9
3.5.6 Timer Function for Battery Discharge Testing	3-10
3.6 Measurements.....	3-11
3.7 Slew Rate & Minimum Transient Time	3-11
3.8 Start/Stop Sink Current	3-12
3.9 Short On/Off.....	3-13
3.10 Load On/Off.....	3-14
3.11 Protection Features.....	3-14
3.12 Save/Recall Setting	3-16
3.13 Program	3-16
3.14 External Waveform Control	3-16
3.15 Voltage & Current Monitor.....	3-16
3.16 Von Protection.....	3-16
3.17 CR Offset Error Compensation	3-19
4. Local Operation.....	4-1
4.1 Introduction	4-1
4.2 Local Operation.....	4-1

4.2.1	Setting the Operation Mode	4-4
4.2.2	Setting the Program	4-10
4.2.3	Running the Program	4-12
4.2.4	Setting the Specification	4-13
4.2.5	Setting the Configuration	4-13
4.2.6	Recalling Files	4-18
4.2.7	Saving File/Default/Program	4-18
4.2.8	Going To Local	4-18
4.2.9	Setting System and RS-232C Connection	4-19
4.2.10	Online Change Level	4-20
5.	Basic Information for Programming	5-1
5.1	Introduction	5-1
5.1.1	Setting the GPIB Address and RS-232C Parameters	5-1
5.1.2	Wire Connection of RS-232C	5-1
5.2	GPIB Capability of the Electronic Load	5-2
5.3	RS-232C in Remote Control	5-3
6.	Introduction to Programming	6-1
6.1	Basic Definition	6-1
6.2	Numerical Data Formats	6-2
6.3	Character Data Formats	6-3
6.4	Separators and Terminators	6-3
7.	Language Dictionary	7-1
7.1.1	Common Commands	7-1
7.1.2	Common Command Dictionary	7-1
7.2	Specific Commands	7-4
7.2.1	CONFigure Sub-system	7-5
7.2.2	COMMunicate Sub-system	7-10
7.2.3	CURRENT Sub-system	7-12
7.2.4	FETCH Sub-system	7-15
7.2.5	LOAD Sub-system	7-17
7.2.6	MEASure Sub-system	7-19
7.2.7	MODE Sub-system	7-21
7.2.8	POWER Sub-system	7-22
7.2.9	PROGram Sub-system	7-23
7.2.10	RESistance Sub-system	7-27
7.2.11	SPECification Sub-system	7-29
7.2.12	STATus Sub-system	7-31
7.2.13	VOLTage Sub-system	7-33
7.2.14	SYSTem Sub-system	7-35
8.	Status Reporting	8-1
8.1	Introduction	8-1
8.2	Register Information in Common	8-1
8.3	Questionable Status	8-2
8.4	Output Queue	8-3
8.5	Standard Event Status	8-3
8.6	Status Byte Register	8-4
8.7	Service Request Enable Register	8-5

9. INDEX.....	9-1
9.1 Command Summary.....	9-1
9.2 Parallel Operation.....	9-5

1. General Information

1.1 Introduction

This manual contains specifications, installation, operation, and programming instructions of 63200 series high power electronic loads. All the machines are tested according to safety standard EN61010-1: TYPE POLLUTION II and INSTALLTION CATEGORY II.

1.2 Description

The functions of the 63200 series loads are the same except the variations on input voltage, load current, and power ratings. They can be operated independently in constant current (CC) mode, constant resistance (CR) mode, constant voltage (CV) mode or constant power (CP) mode.

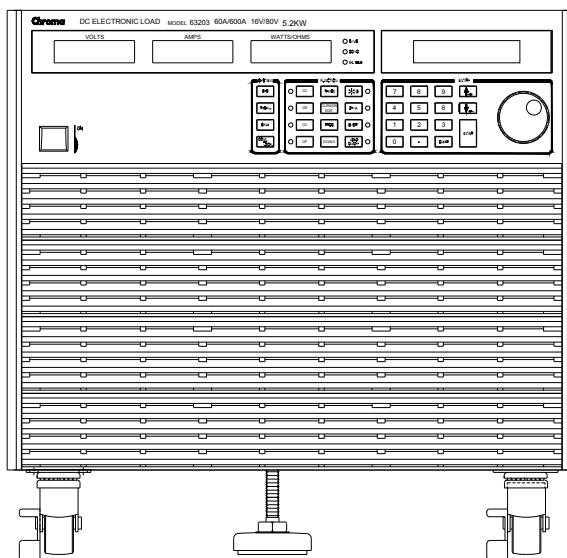


Figure 1-1 The Front Panel of the Electronic Load

There are three groups of keypads on the electronic load front panel shown in Figure 1-1. They are System keypad, Function keypad and Entry keypad from left to right.

1.3 Overview of Key Features

- Local operation on front panel keypad.
- Remote control via GPIB, RS-232C interface or remote controller (optional).
- Photo-couple isolation supplies true floating Load.
- Automatic fan speed control to reduce audio noise.
- Constant current (CC), constant resistance (CR), constant voltage (CV) and constant power (CP) operation modes.
- Programmable slew rate, load level, load period and conduct voltage (Von).
- Programmable dynamic loading with speed up to 20KHz.
- Minimum input resistance allows load to sink high current even with low input voltage.
- Selective voltage and current ranges.
- Remote sensing capability.
- 100 sets of memories to save/recall user-definable setups.
- 10 sets of programs to link files for automatic test.
- 15-bit A/D converter with precision measurement.
- Short circuit simulation.
- Automatic GO/NG inspection to confirm UUT within spec.
- Isolated voltage and current monitoring waveforms output.
- Isolated external Vdc reference input to control the load current.

1.4 Specifications

AC input:	115/230 interchangeable Vac line
Fuse:	3.15A, 250V *
Amplitude:	±10%
Frequency:	47 to 63 Hz
Maximum VA:	300VA

* The fuses in 63201, 63202 are specified as 2A, 250V. The fuses in 63203, 63204, 63205, 63208, 63209 and 63210 are specified as 2.5A, 250V. The specifications of Load are listed below.

① Notice

1. The equipment is for indoor use only.
 2. The altitude up to 2000 meters is allowed to use the equipment.
 3. All specifications are tested under 20°C ~ 30°C except otherwise stated.
 4. The range for operation temperature is 0°C ~ 40°C.
 5. The relative humidity is from 10% to 90%.
 6. The specifications of DC current accuracy are tested after the input is applied for 30 seconds.
 7. The typical temperature coefficient is 100ppm.
-

⚡ CAUTION

This equipment is not intended for performing measurements on CAT I, II, III or IV.

CAT IV – is for measurements performed at the source of the low-voltage installation.


CAT III – is for measurements performed in the building installation.

CAT II – is for measurements performed on circuits directly connected to the low-voltage installation.


CAT I – is for measurements performed on circuits directly connected to mains.

SPECIFICATION


Model	63201		63202		63203	
Power*1	260W	2600W	260W	2600W	520W	5200W
Current	0-30A	0-300A	0-5A	0-50A	0-60A	0-600A
Voltage	0-80V		0-500V		0-80V	
Min. operating voltage	0.5V @ 15A	0.5V @ 150A	1.25V @ 2.5A	1.25V @ 25A	0.5V @ 30A	0.5V @ 300A
	1V @ 30A	1V @ 300A	2.5V @ 5A	2.5V @ 50A	1V @ 60A	1V @ 600A
Constant Current mode						
Range	0-30A	0-300A	0-5A	0-50A	0-60A	0-600A
Resolution	7.5mA	75mA	1.25mA	12.5mA	15mA	150mA
Accuracy	0.1%+0.1%FS	0.2%+0.1%FS	0.1%+0.1%FS	0.2%+0.1%FS	0.1%+0.1%FS	0.2%+0.1%FS
Constant Resistance mode						
Range	0.005-20ohm	0.25-1000ohm	0.25-1000ohm	10-40000ohm	0.0025-10ohm	0.125-500ohm
Resolution	12 bits	12 bits	12 bits	12 bits	12 bits	12 bits
Accuracy*2	0.104mho +0.35%	0.9mho+0.1%	0.0023mho +0.35%	0.04mho+0.1%	0.208 mho +0.35% *4	1.2mho+0.1%
Accuracy*3 (Vin>7V)	0.104mho +0.35%	0.0021 mho +0.35%	0.0023mho +0.35%	57.56u mho +0.35%	0.208 mho +0.35%	0.0042 mho +0.35%
Constant Voltage mode						
Range	1-16V	1-80V	2.5-125V	2.5-500V	1-16V	1-80V
Resolution	4mV	20mV	31mV	125mV	4mV	20mV
Accuracy	0.05%+0.1%FS	0.05%+0.1%FS	0.05%+0.1%FS	0.05%+0.1%FS	0.05%+0.1%FS	0.05%+0.1%FS
Constant Power mode						
Range	0.6-260W	6-2600W	0.625-260W	6.25-2600W	1.2-520W	12-5200W
Resolution	7.5mW	75mW	3.125mW	31.25mW	22.5mW	225mW
Accuracy	0.5%+0.5%FS	0.5%+0.5%FS	0.5%+0.5%FS	0.5%+0.5%FS	0.5%+0.5%FS	0.5%+0.5%FS
Dynamic mode						
Timing						
T1&T2	0.025-10mS	1mS-30S	0.025-10mS	1mS-30S	0.025-10mS	1mS-30S
Resolution	1uS	1mS	1uS	1mS	1uS	1mS
Accuracy	1uS+100ppm	1mS+100ppm	1uS+100ppm	1mS+100ppm	1uS+100ppm	1mS+100ppm
Slew rate	5mA-1.25A/uS	50mA-12.5A/uS	0.8mA-0.2A/uS	8mA-2A/uS	10mA-2.5A/uS	100mA-25A/uS
Resolution	5mA/uS	50mA/uS	0.8mA/uS	8mA/uS	10mA/uS	100mA/uS
Min. Rise Time	24uS (Typical)		24uS (Typical)		24uS (Typical)	
Current						
Range	0-30A	0-300A	0-5A	0-50A	0-60A	0-600A
Resolution	7.5mA	75mA	1.25mA	12.5mA	15mA	150mA
Accuracy	0.4%FS		0.4%FS		0.4%FS	

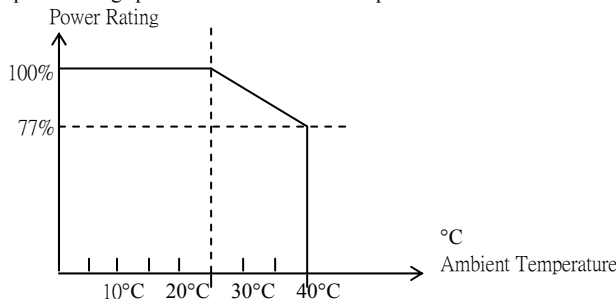Measurement						
Voltage read back						
Range	0-16V	0-80V	0-125V	0-500V	0-16V	0-80V
Resolution	15 bits	15 bits	15 bits	15 bits	15 bits	15 bits
Accuracy	0.05%+0.05%FS		0.05%+0.05%FS		0.05%+0.05%FS	
Current read back						
Range	0-30A	0-300A	0-5A	0-50A	0-60A	0-600A
Resolution	15 bits	15 bits	15 bits	15 bits	15 bits	15 bits
Accuracy	0.1%+0.1%FS		0.1%+0.1%FS		0.1%+0.1%FS	
Power read back						
Range	0-260W	0-2600W	0-260W	0-2600W	0-520W	0-5200W
Resolution	15 bits	15 bits	15 bits	15 bits	15 bits	15 bits
Accuracy*5	0.3%+0.3%FS		0.3%+0.3%FS		0.3%+0.3%FS	
General						
Short circuit						
Current	30A	300A	5A	50A	60A	600A
Dimension (H × W × D)	177 × 440 × 589.4 mm / 6.96 × 17.32 × 23.2 inch		177 × 440 × 589.4 mm / 6.96 × 17.32 × 23.2 inch		353 × 440 × 589.4 mm / 13.89 × 17.32 × 23.2 inch	
Weight	30 kg / 66.13 lbs		30 kg / 66.13 lbs		62 kg / 136.68 lbs	
EMC & Safety	CE		CE		CE	
*Specifications are subject to change without notice.						
1. The power rating specifications at ambient temperature = 25°C and see the diagram below for power derating.						
<div></div>						
2. The Vin must be greater than min. operating voltage of each model.						
3. The Vin must be greater than 7V of each model.						
All CR mode accuracy should be referring to the CC mode accuracy.						
4. Setting error will be 1% for R < 0.005Ω at CRL range.						
5. Power F.S. = Vrange F.S. × Irang F.S.						


Model	63204		63205		63206	
Power*1	520W	5200W	650W	6500W	1040W	10400W
Current	0-10A	0-100A	0-18A	0-180A	0-60A	0-600A
Voltage	0-500V*6		0-80V		0-80V	
Min. operating voltage	1.25V @ 5A	1.25V @ 50A	0.5V @ 9A	0.5V @ 90A	0.5V @ 30A	0.5V @ 300A
	2.5V @ 10A	2.5V @ 100A	1V @ 18A	1V @ 180A	1V @ 60A	1V @ 600A
Constant Current mode						
Range	0-10A	0-100A	0-18A	0-180A	0-60A	0-600A
Resolution	2.5mA	25mA	4.5mA	45mA	15mA	150mA
Accuracy	0.1%+0.1%FS	0.2%+0.1%FS	0.1%+0.2%FS	0.1%+0.2%FS	0.1%+0.2%FS	0.1%+0.2%FS
Constant Resistance mode						
Range	0.125-500ohm	5-20000ohm	0.008-32ohm	0.4-1600ohm	0.0025-10ohm	0.125-500ohm
Resolution	12 bits	12 bits	12 bits	12 bits	12 bits	12 bits
Accuracy*2	0.0046 mho +0.35%	0.08mho+0.1%	0.07mho +0.35%	0.75mho+0.1%	0.225 mho +0.35%*4	1.2mho+0.1%
Accuracy*3 (Vin>7V)	0.0046 mho +0.35%	115.51u mho +0.35%	0.07mho +0.35%	0.0014 mho +0.35%	0.225 mho +0.35%	0.0045 mho +0.35%
Constant Voltage mode						
Range	2.5-125V	2.5-500V	1-16V	1-80V	1-16V	1-80V
Resolution	31mV	125mV	4mV	20mV	4mV	20mV
Accuracy	0.05%+0.1%FS	0.05%+0.1%FS	0.05%+0.1%FS	0.05%+0.1%FS	0.05%+0.1%FS	0.05%+0.1%FS
Constant Power mode						
Range	1.25-520W	12.5-5200W	0.36-650W	3.6-6500W	1.2-1040W	12-10400W
Resolution	6.25mW	62.5mW	4.6mW	46mW	22.5mW	225mW
Accuracy	0.5%+0.5%FS	0.5%+0.5%FS	0.5%+0.5%FS	0.5%+0.5%FS	0.5%+0.5%FS	0.5%+0.5%FS
Dynamic mode						
Timing						
T1&T2	0.025-10mS	1mS-30S	0.025-10mS	1mS-30S	0.025-10mS	1mS-30S
Resolution	1uS	1mS	1uS	1mS	1uS	1mS
Accuracy	1uS+100ppm	1mS+100ppm	1uS+100ppm	1mS+100ppm	1uS+100ppm	1mS+100ppm
Slew rate	1.6mA-0.4A/uS	16mA-4A/uS	3mA-0.75A/uS	30mA-7.5A/uS	12mA-3A/uS	100mA-25A/uS
Resolution	1.6mA/uS	16mA/uS	3mA/uS	30mA/uS	12mA/uS	100mA/uS
Min. Rise Time	24uS (Typical)		24uS (Typical)		20uS (Typical)	
Current						
Range	0-10A	0-100A	0-18A	0-180A	0-60A	0-600A
Resolution	2.5mA	25mA	4.68mA	46.8mA	15mA	150mA
Accuracy	0.4%FS		0.4%FS		0.4%FS	

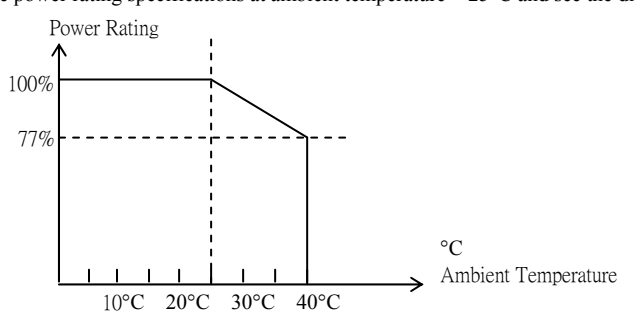Measurement						
Voltage read back						
Range	0-125V	0-500V	0-16V	0-80V	0-16V	0-80V
Resolution	15 bits	15 bits	15 bits	15 bits	15 bits	15 bits
Accuracy	0.05%+0.05%FS		0.05%+0.05%FS		0.05%+0.05%FS	
Current read back						
Range	0-10A	0-100A	0-18A	0-180A	0-60A	0-600A
Resolution	15 bits	15 bits	15 bits	15 bits	15 bits	15 bits
Accuracy	0.1%+0.1%FS		0.1%+0.1%FS		0.1%+0.1%FS	
Power read back						
Range	0-520W	0-5200W	0-650W	0-6500W	0-1040W	0-10400W
Resolution	15 bits	15 bits	15 bits	15 bits	15 bits	15 bits
Accuracy*5	0.3%+0.3%FS		0.3%+0.3%FS		0.3%+0.3%FS	
General						
Short circuit						
Current	10A	100A	18A	180A	60A	600A
Dimension (H × W × D)	353 × 440 × 589.4 mm / 13.89 × 17.32 × 23.2 inch		310 × 440 × 589.4 mm / 12.2 × 17.32 × 23.2 inch		443.7 × 440 × 589.4 mm / 17.46 × 17.32 × 23.2 inch	
Weight	62 kg / 136.68 lbs		62 kg / 136.68 lbs		90 kg / 198.41 lbs	
EMC & Safety	CE		CE		CE	
*Specifications are subject to change without notice.						
1. The power rating specifications at ambient temperature = 25°C and see the diagram below for power derating.						
<div></div>						
2. The Vin must be greater than min. operating voltage of each model.						
3. The Vin must be greater than 7V of each model.						
All CR mode accuracy should be referring to the CC mode accuracy.						
4. Setting error will be 1% for R < 0.005Ω at CRL range.						
5. Power F.S. = Vrange F.S. × Irang F.S.						
6. 600V modification available.						

Model	63207		63208		63209	
Power*1	1040W	10400W	1560W	15600W	1560W	15600W
Current	0-30A	0-300A	0-60A	0-600A	0-100A	0-1000A
Voltage	0-80V		0-80V		0-80V	
Min. operating voltage	0.5V @ 15A	0.5V @ 150A	0.5V @ 30A	0.5V @ 300A	0.5V @ 50A	0.5V @ 500A
	1V @ 30A	1V @ 300A	1V @ 60A	1V @ 600A	1V @ 100A	1V @ 1000A
Constant Current mode						
Range	0-30A	0-300A	0-60A	0-600A	0-100A	0-1000A
Resolution	9.3mA	75mA	15mA	150mA	31.25mA	250mA
Accuracy	0.1%+0.2%FS	0.1%+0.2%FS	0.1%+0.2%FS	0.1%+0.2%FS	0.1%+0.2%FS	0.1%+0.2%FS
Constant Resistance mode						
Range	0.005-20ohm	0.25-1000ohm	0.0025-10ohm	0.125-500ohm	0.0015-6ohm	0.075-300ohm
Resolution	12 bits	12 bits	12 bits	12 bits	12 bits	12 bits
Accuracy*2	0.111 mho +0.35%	0.9mho+0.1%	0.22 mho +0.35%*4	1.2mho+0.1%	0.373mho +0.35%*4	1.2mho+0.1%
Accuracy*3 (Vin>7V)	0.111 mho +0.35%	0.0022 mho +0.35%	0.22 mho +0.35%	0.0044mho +0.35%	0.373mho +0.35%	0.0075mho +0.35%
Constant Voltage mode						
Range	1-16V	1-80V	1-16V	1-80V	1-16V	1-80V
Resolution	4mV	20mV	4mV	20mV	4mV	20mV
Accuracy	0.05%+0.1%FS	0.05%+0.1%FS	0.05%+0.1%FS	0.05%+0.1%FS	0.05%+0.1%FS	0.05%+0.1%FS
Constant Power mode						
Range	0.744-1040W	6-10400W	1.2-1560W	12-15600W	2.5-1560W	20-15600W
Resolution	9.3mW	75mW	22.5mW	225mW	31.255mW	250mW
Accuracy	0.5%+0.5%FS	0.5%+0.5%FS	0.5%+0.5%FS	0.5%+0.5%FS	0.5%+0.5%FS	0.5%+0.5%FS
Dynamic mode						
Timing						
T1&T2	0.025-10mS	1mS-30S	0.025-10mS	1mS-30S	0.025-10mS	1mS-30S
Resolution	1uS	1mS	1uS	1mS	1uS	1mS
Accuracy	1uS+100ppm	1mS+100ppm	1uS+100ppm	1mS+100ppm	1uS+100ppm	1mS+100ppm
Slew rate	6mA-1.5A/uS	50mA-12.5A/uS	12mA-3A/uS	100mA-25A/uS	20mA-5A/uS	166mA-41.6A/uS
Resolution	6mA/uS	50mA/uS	12mA/uS	100mA/uS	20mA/uS	166mA/uS
Min. Rise Time	20uS (Typical)		20uS (Typical)		20uS (Typical)	
Current						
Range	0-30A	0-300A	0-60A	0-600A	0-100A	0-1000A
Resolution	9.37mA	75mA	15mA	150mA	31.25mA	250mA
Accuracy	0.4%FS		0.4%FS		0.4%FS	

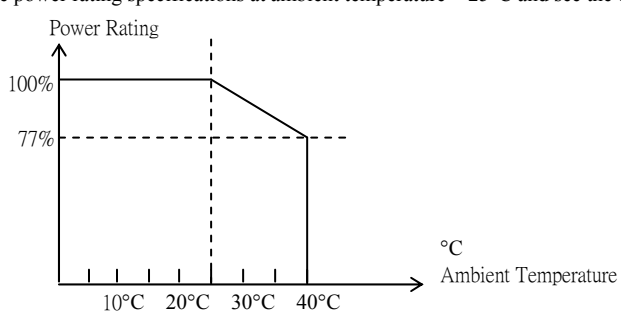
Measurement						
Voltage read back						
Range	0-16V	0-80V	0-16V	0-80V	0-16V	0-80V
Resolution	15 bits	15 bits	15 bits	15 bits	15 bits	15 bits
Accuracy	0.05%+0.05%FS		0.05%+0.05%FS		0.05%+0.05%FS	
Current read back						
Range	0-30A	0-300A	0-60A	0-600A	0-100A	0-1000A
Resolution	15 bits	15 bits	15 bits	15 bits	15 bits	15 bits
Accuracy	0.1%+0.1%FS		0.1%+0.1%FS		0.1%+0.1%FS	
Power read back						
Range	0-1040W	0-10400W	0-1560W	0-15600W	0-1560W	0-15600W
Resolution	15 bits	15 bits	15 bits	15 bits	15 bits	15 bits
Accuracy*5	0.3%+0.3%FS		0.3%+0.3%FS		0.3%+0.3%FS	
General						
Short circuit						
Current	30A	300A	60A	600A	100A	1000A
Dimension (H × W × D)	443.7 × 440 × 589.4 mm / 17.46 × 17.32 × 23.2 inch		762.8 × 546 × 700 mm / 30.03 × 21.49 × 27.55 inch		762.8 × 546 × 700 mm / 30.03 × 21.49 × 27.55 inch(cabinet)	
Weight	90 kg / 198.41 lbs		170 kg / 374.78 lbs		170 kg / 374.78 lbs	
EMC & Safety	CE		CE		CE	
*Specifications are subject to change without notice.						
1. The power rating specifications at ambient temperature = 25°C and see the diagram below for power derating.						
<div></div>						
2. The Vin must be greater than min. operating voltage of each model.						
3. The Vin must be greater than 7V of each model.						
All CR mode accuracy should be referring to the CC mode accuracy.						
4. Setting error will be 1% for R < 0.005Ω at CRL range.						
5. Power F.S. = Vrange F.S. × Irange F.S.						

Model	63210	
Power*1	1450W	14500W
Current	0-15A	0-150A
Voltage	0-500V	
Min. operating voltage	1.25V @ 7.5A	1.25V @ 75A
	2.5V @ 15A	2.5V @ 150A
Constant Current mode		
Range	0-15A	0-150A
Resolution	3.75mA	37.5mA
Accuracy	0.1%+0.1%FS	0.2%+0.1%FS
Constant Resistance mode		
Range	0.083-333ohm	3.3-13200ohm
Resolution	12 bits	12 bits
Accuracy*2	0.0064mho+0.35%	0.092mho+0.1%
Accuracy*3 (Vin>7V)	0.0064mho+0.35%	161u mho+0.35%
Constant Voltage mode		
Range	2.5-125V	2.5-500V
Resolution	31mV	125mV
Accuracy	0.05%+0.1%FS	0.05%+0.1%FS
Constant Power mode		
Range	5-1450W	50-14500W
Resolution	25mW	250mW
Accuracy	0.5%+0.5%FS	0.5%+0.5%FS
Dynamic mode		
Timing		
T1&T2	0.025-10mS	1mS-30S
Resolution	1uS	1mS
Accuracy	1uS+100ppm	1mS+100ppm
Slew rate	3mA-0.75A/uS	25mA-6A/uS
Resolution	3mA/uS	25mA/uS
Min. Rise Time	24uS (Typical)	
Current		
Range	0-15A	0-150A
Resolution	3.75mA	37.5mA
Accuracy	0.4%FS	

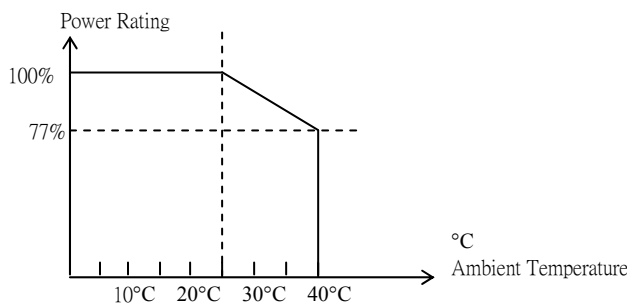
Measurement		
Voltage read back		
Range	0-125V	0-500V
Resolution	15 bits	15 bits
Accuracy	0.05%+0.05%FS	
Current read back		
Range	0-15A	0-150A
Resolution	15 bits	15 bits
Accuracy	0.1%+0.1%FS	
Power read back		
Range	0-1450W	0-14500W
Resolution	15 bits	15 bits
Accuracy*5	0.3%+0.3%FS	
General		
Short circuit		
Current	15A	150A
Dimension (H × W × D)	762.8 × 546 × 700 mm / 30.03 × 21.49 × 27.55 inch(cabinet)	
Weight	170 kg / 374.78 lbs	
EMC & Safety	CE	
*Specifications are subject to change without notice.		
1. The power rating specifications at ambient temperature = 25°C and see the diagram below for power derating.		
<div></div>		
2. The Vin must be greater than min. operating voltage of each model.		
3. The Vin must be greater than 7V of each model.		
All CR mode accuracy should be referring to the CC mode accuracy.		
4. Setting error will be 1% for R < 0.005Ω at CRL range.		
5. Power F.S. = Vrange F.S. × Irang F.S.		

1.5 Dimension Outline for 63200 Series


- Model 63201 and 63202

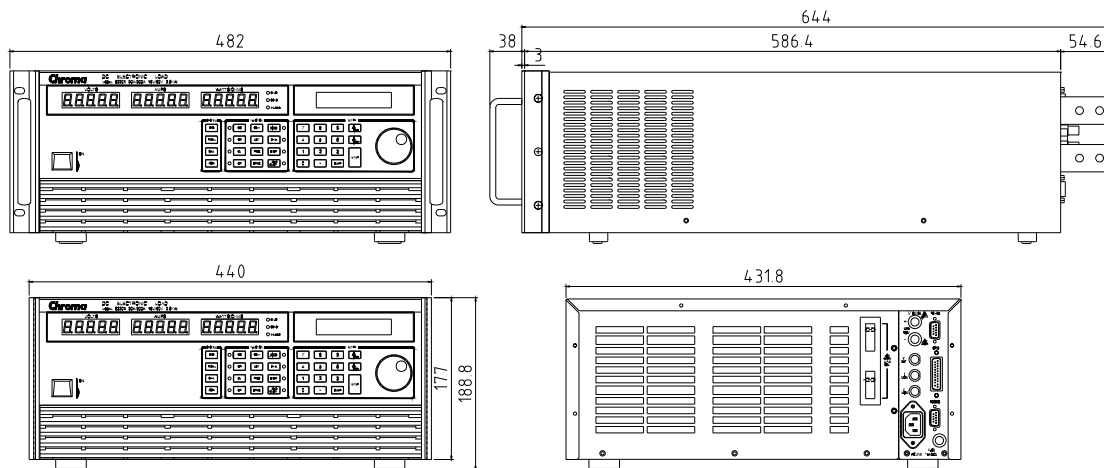


- Model 63203 and 63204

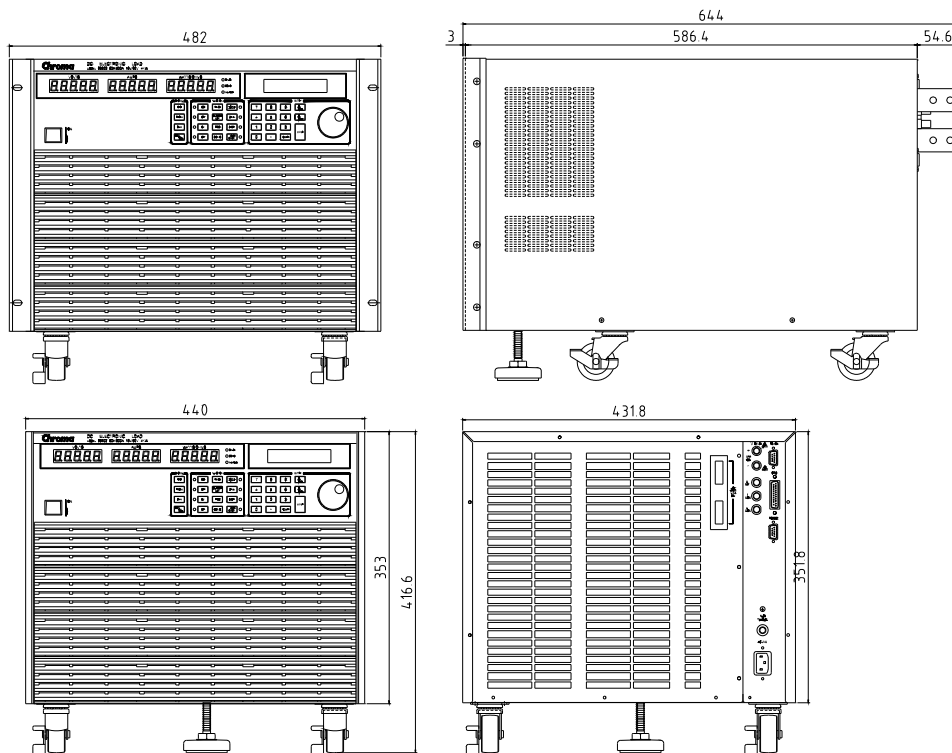


● Model 63205

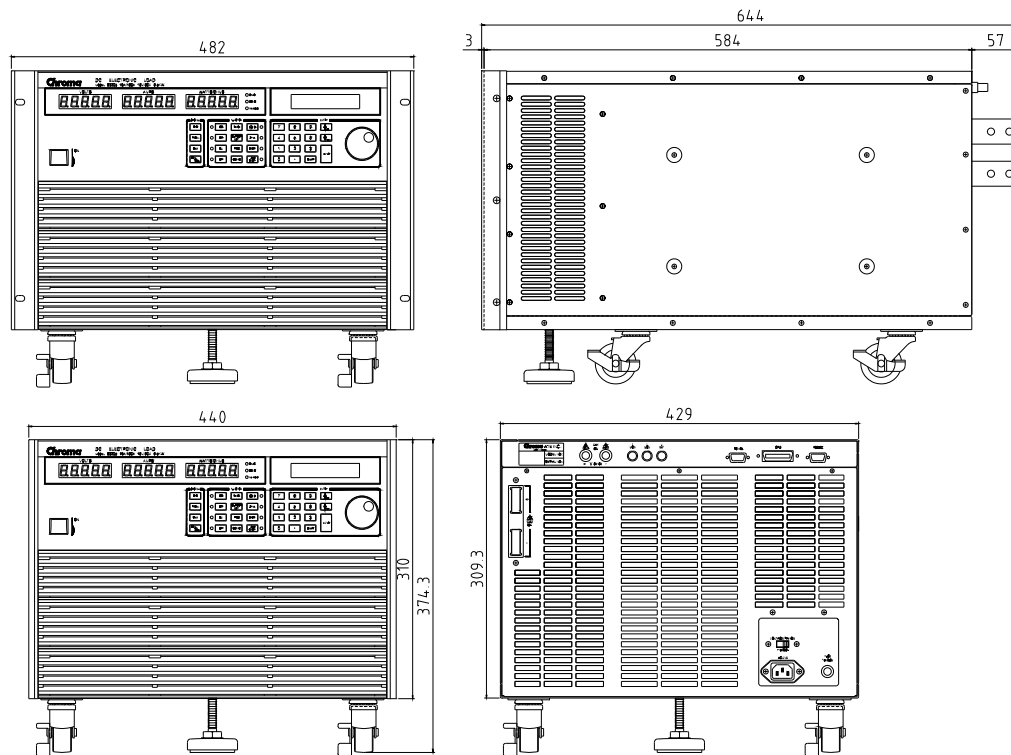

● Model 63206 and 63207

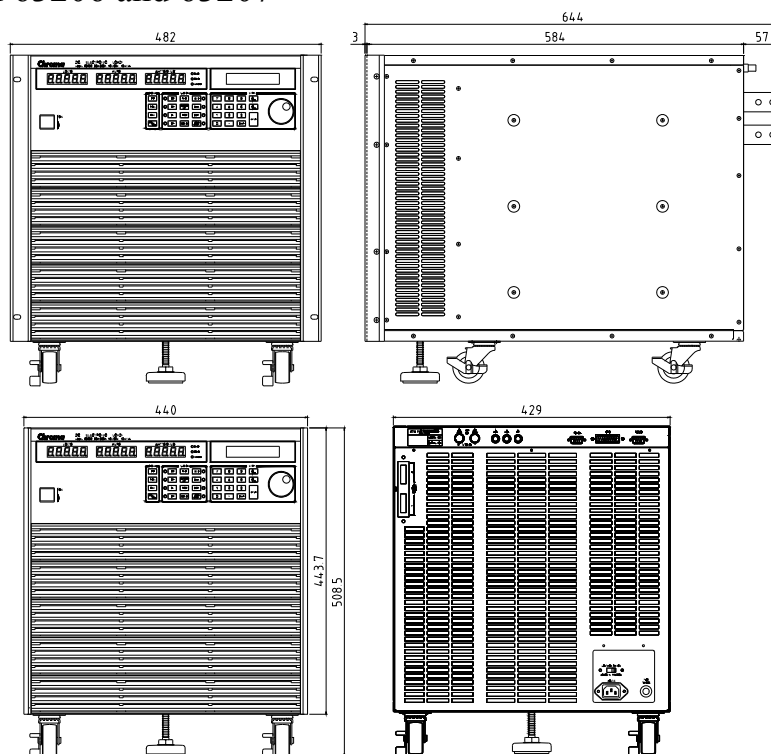


● Model 63208 and 63209 and 63210
(Top View)

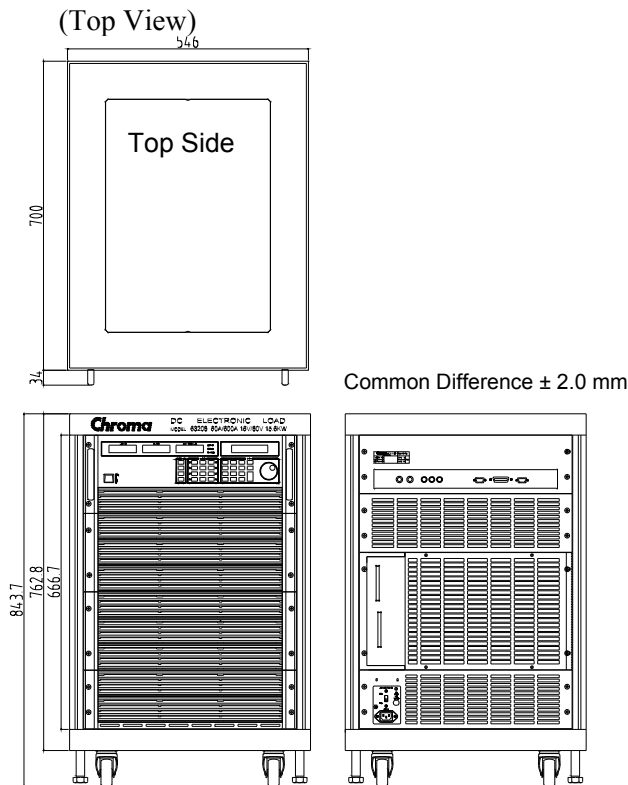

Unit: mm

Rack mount note for model 63207:

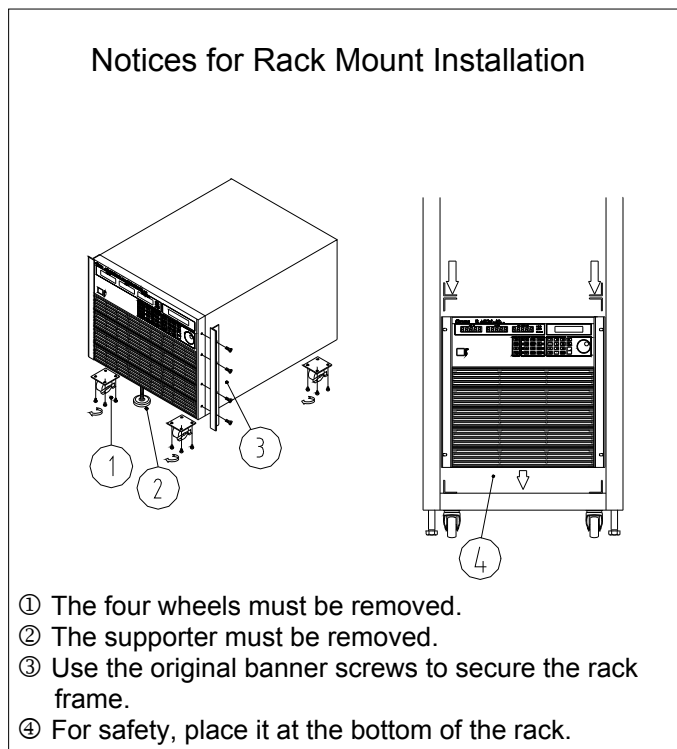

Installing the 63200 Protective Cover:

Step 1: Insert the cable into protective cover.


Step 2: Socket the Bakelite into the positive/negative copper plate until it touches the chassis and then secure the M6x20L screw and M6 screw nut to block the Bakelite.

Step 3: Place a washer on the M6x20L screw and let it go through the positive/negative copper plate. Connect the two cables with an insulator to secure the cables on the positive/negative copper plate.

Step 4: Cover the positive/negative copper plate with protective cover on the rear panel.

Step 5: Use the attached M6x10L screw to secure the protective cover.

Step 6: Complete installation.

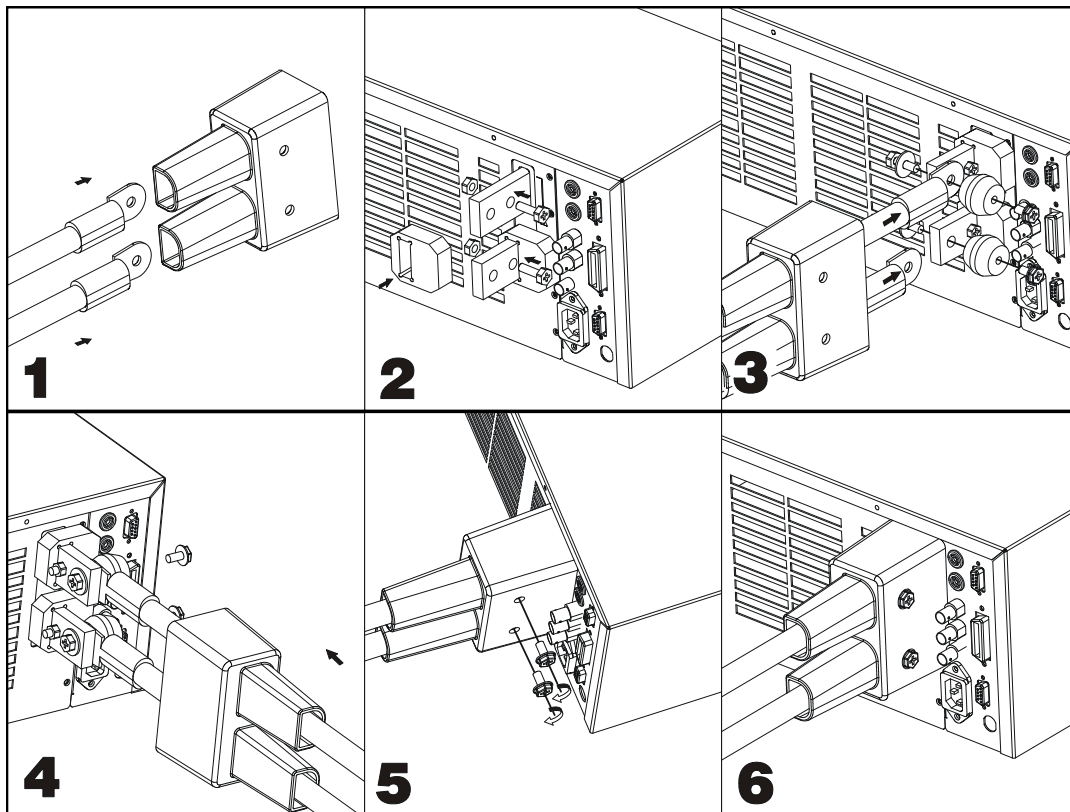

2. Installation

2.1 Introduction

This chapter describes how to install the 63200 series Load as well as a turn-on check procedure and application considerations.

2.2 Inspection

As soon as the instrument is unpacked, inspect any damage that might have occurred in shipping. Keep all packing materials in case that the instrument has to be returned. If any damage is found, please file a claim to the carrier immediately. Do not return the instrument to Chroma without prior approval.

In addition to this manual, be sure that the following items are also received – a power cord, this manual, a pair of load terminal screws kit and a V-sense cable.

2.3 Installing

The Electric Loads can operate well within the temperature range from 0 to 40 °C. However, you must install the Electric Load in an area that has enough space around the unit for adequate air flowing through and escaping from the back.

2.3.1 Changing Line Voltage

The Electronic Load can operate with a 115/230 Vac input as indicated on the left hand side of the unit (facing the unit). If the factory set voltage does not correspond to your nominal line voltage, set the switch to the correct line voltage as shown in Figure 2-1 before plugging in the power cord and turning on the power.

① Notice

Line fuses do not need to be changed when the line voltage is changed. The line fuses will protect the Electronic Load for incorrect voltage setting.

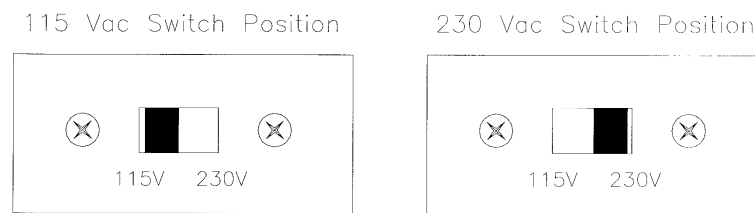


Figure 2-1 Line Voltage Switch

2.3.2 Turn-On Self-Test

Check the following before turning on the Load.

1. The unit has been set to the correct line voltage by factory. Refer to the line voltage indicated on the left hand side of the panel.
2. The power cord is connected to the AC input socket.

WARNING

The power supplies a chassis ground through a third connector. Be sure that your outlet is of three-conductor type with the correct pin connected to ground.

Turn on the Load by the power switch on the front panel and observe the display. Immediately after turning on, the Electronic Load executes a self-test to check the RS232, GPIB interface board and the system.

The LCD displays

```
FRONT PANEL TESTING
[ RS232 ]    PASS
```

```
FRONT PANEL TESTING
CHECKSUM    PASS
```

```
GPIB ADDRESS    X
```

```
CHROMA ATE INC.
MODEL 632XX
```

and then it goes to the output mode setting display.

All of the 7-segment LEDs which display the measuring V, I, P (or R) will be activated when the self-test completes. If any error is found in self-test, the display will stop here.

In case of failure, return the Load to Chroma sales or service office for repair.

2.4 Application Connection

2.4.1 Load Connections

WARNING

To satisfy safety requirements, load wires must be heavy enough not to overheat while carrying the short-circuit output current of the device connected to the Electronic Load.

Input connections are made to the + and – terminal block on the rear of the Load. The major considerations in making input connections are the wire size, length and polarity. The minimum wire size required to avoid overheating may not be enough to maintain good regulation. The wires should be large enough to limit the voltage drop to less than 0.5V per lead. The wires should be as short as possible, and bundled or tied together to minimize inductance and noise. Connect the wire from the PLUS (+) terminal to the HIGH potential output terminal of the power supply (UUT). Connect the wire from the MINUS (–) terminal to the LOW potential output terminal of the power supply (UUT). Figure 2-2 illustrates the typical setup of the Load to the UUT. When using Model 63208, 63209 and 63210 the distance should be 1 meter for chassis front and 2.5 meters for rear without any foreign object blocking the vents or the hardware temperature may rise and cause OTP.

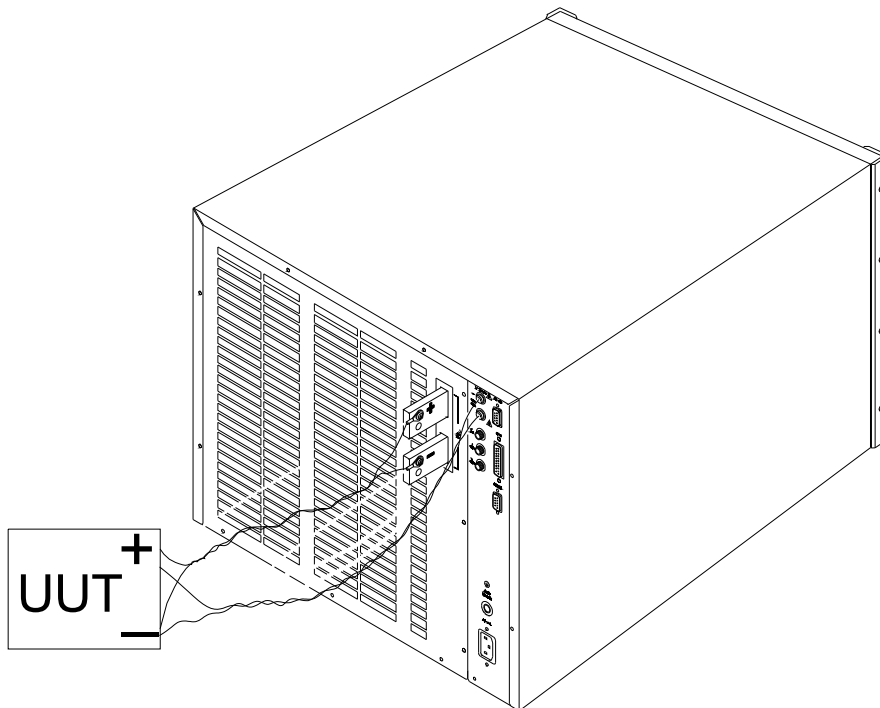


Figure 2-2 Load & Remote Sensing Connection

⚠ WARNING

In case the MOSFETs in the electronic load fail in the short circuit status, there is no internal means of interrupting the current that is flowing from the Unit Under Test (UUT). User should consider added external circuit elements for protection as described below. MOSFET failures are rare when instruments are used within their rated voltage/current/power and temperature ranges.

Recommended safety precautions:

Ensure wiring, external circuit elements, etc are sized to the maximum rating of the LOAD even if intended UUTs are smaller. This provides protection in the event that users inadvertently apply full rated voltage, current or power or larger UUTs are tested in the future.

User should take into account the power dissipated in the output cable under worse case conditions to ensure the wire the gauge and cooling is adequate.

Ensure the load always receives adequate ambient cooling air at all times and air filters, ducts, etc are maintained regularly. If loads are used with a cabinet, precautions should be taken to minimize heating within the cabinet.

If the UUT may be damaged or an unsafe condition may occur in the event of a load short circuit (e.g. certain types of batteries), or if there is no means of de-energizing the UUT in the event of a load failure, user may consider including a suitably rated circuit breaker, fuse or other means of disconnecting the load from the UUT under emergency conditions.

※ If there are any questions regarding safe operation of the equipment or adding external protection circuits, please contact Chroma's service personnel.

2.4.2 Remote Sensing Connections

There are two sensing points for the Electronic Load. One is measurement at Load terminal, and another is measurement at Vsense. The Load will automatically switch to Vsense when Vsense terminals are connected to UUT, otherwise it will measure at Load terminals. Remote sensing compensates for voltage drop in applications that require long lead lengths. It is useful when the load is operating in CV or CR mode, or when it needs precise measurement. Figure 2-2 also illustrates a typical setup for remote sensing operation.

① Notice

The potential of V-sense red connector must be higher than that of V-sense black connector.

2.4.3 Parallel Connections

63200 series Loads can be paralleled to increase power dissipation. The Loads can be directly paralleled in CC mode for static or dynamic operation while in CR and CP modes the Loads can be paralleled for static operation only. It is not suggested to parallel Loads in CV mode.

The Loads is linked via RS-485 cable to RS485 port. RS485 address represents the ID of each Load in the parallel group.

There are two operation modes in this parallel function:


The first is MASTER mode. The master gets the total setting commands from the remote control or front panel and then informs the slaves what setting current they should do according to their model. (The slave model has to be ready first.) So the only one you need to program is the master.

The second is MASTER SYNC mode. Each Load gets the current setting from its own remote control or front panel, the master controls the loads H/W synchronization action so that all loads can be operated with same action at the same time no matter in static or dynamic mode.


Referred to Section 4.2.9 for detail information of setting the Loads parallel function parameters.

2.4.4 Diagram of RS485 Parallel Connections

2.4.4.1 Pin Assignment

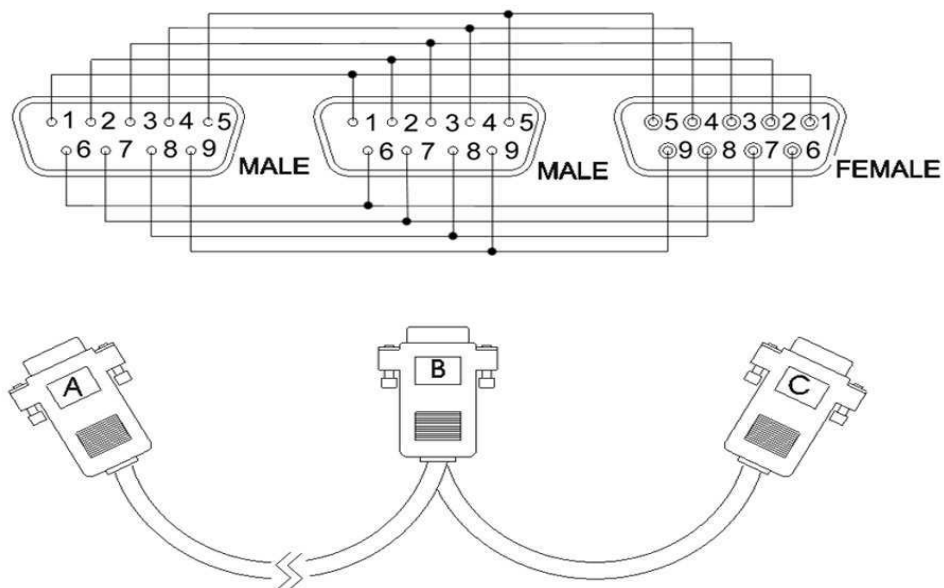

2.4.4.2 Connecting Master & Slave

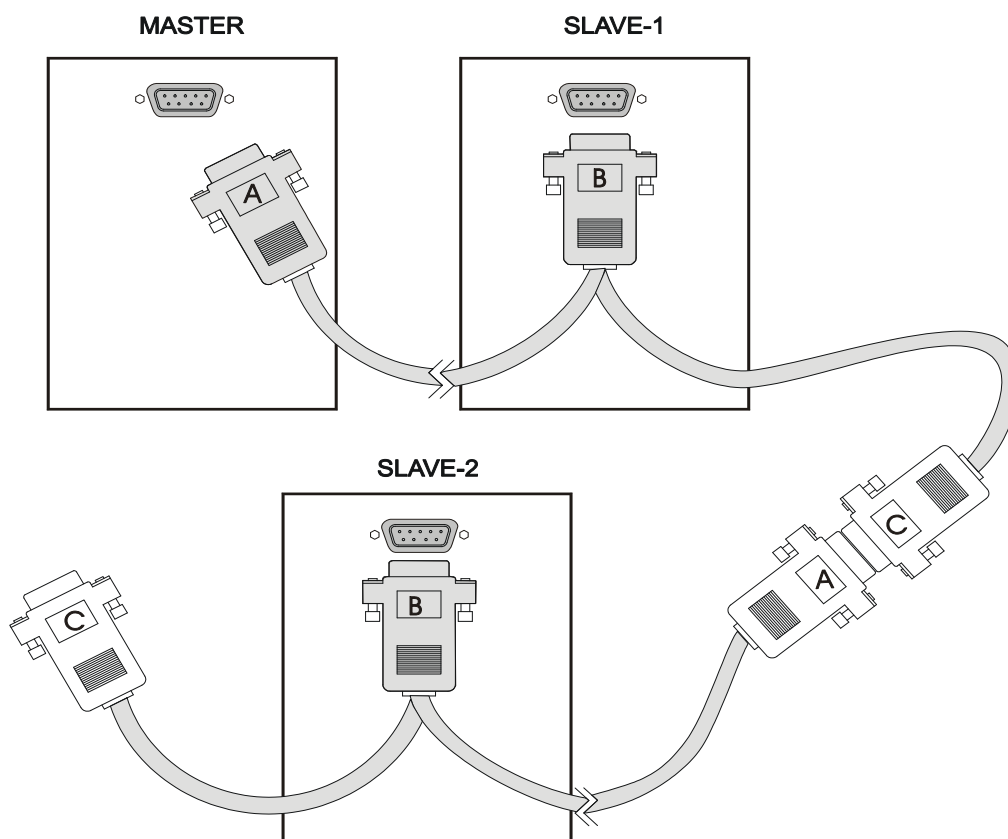

2.5 Remote Control Connection

The remote operation of Load can be done through GPIB, RS-232C or remote controller. These connectors on the rear panel connect the Load to the controller or computer. The GPIB interface of the electronic load is standard. The remote controller is optional. The 63200 series Remote Controller can control the load via RS-232C port. Connect the Remote Controller to the Electronic Load before powering it on.

3. Operation Overview

3.1 Introduction

Chroma 63200 series electronic loads are suitable for design, manufacturing, testing and quality assurance. It contains a processor, GPIB and RS-232C connectors, front panel keypad, display, and power stage. Its built-in remote control function allows you to control, read back current, voltage and status. The Save/Recall feature allows you to save up to 100 files, 10 programs, and one default setting. All of them can be saved in load EEPROM for future use.

The load contains four cooling fans. The fan speed increases or decreases automatically when the load power rises or falls. This feature reduces the overall noise level as the fans do not always run at the maximum speed.

Each load can operate in constant current (CC), constant resistance (CR), constant voltage (CV), and constant power (CP) modes. If the application is larger than one of DC load can provide in power or current rating, the DC loads operation in parallel is a suggested way. However, it can be applied in CC mode, CP mode and CR mode.

3.2 Front Panel Description

The front panel of the load includes a 20×2 characters LCD display, three segment LED, 9 led status indicators, and keypads. The LCD display will show which function is being performed when you use the keypads. One of the keys has two functions. Figure 3-1 shows the front panel of the loads.

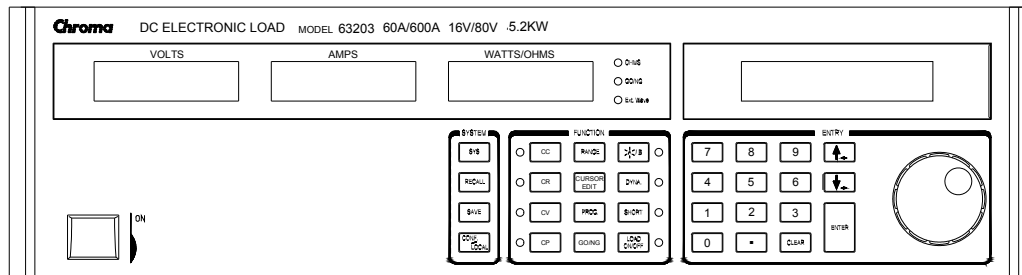


Figure 3-1 The Front Panel

3.3 Rear Panel Description

The Mainframe rear panel includes ports of RS-232C, RS485, GPIB, two remote sense, three BNC connectors, a pair of input terminals, an AC LINE socket, and a fuse holder. Figure 3-2 shows the rear panel of Mainframe 63200.

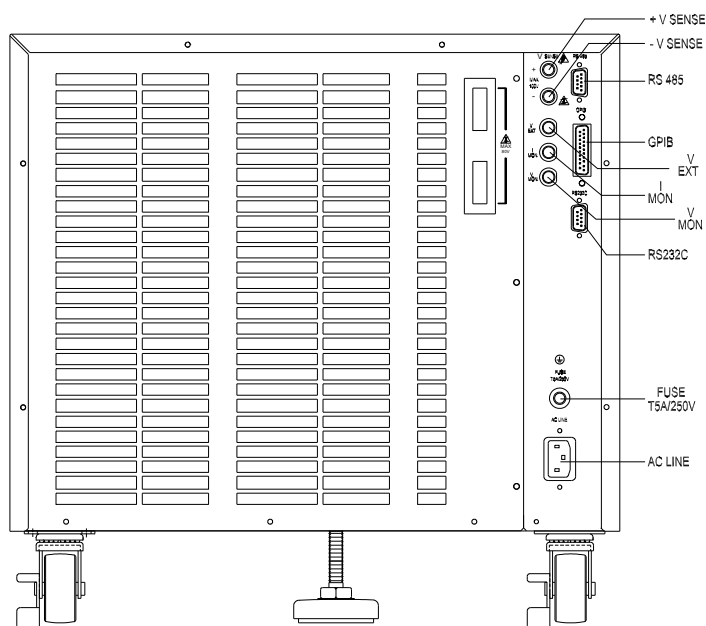


Figure 3-2A The Rear Panel of 63201/63202/63203/63204

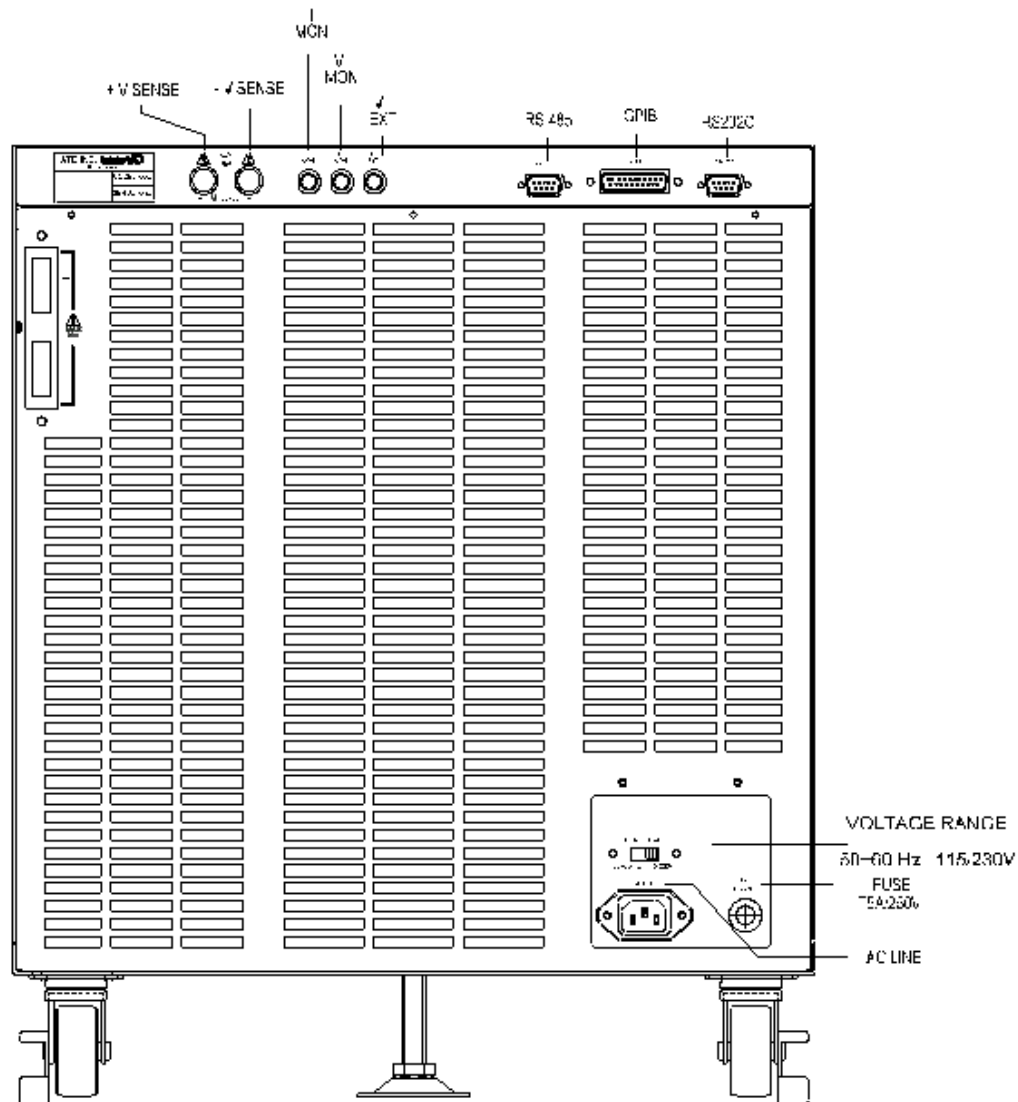


Figure 3-2B The Rear Panel of 63205/63206/63207/63208/63209/63210

3.4 Local/Remote Control

Local (front panel) control is in effect immediately after the power is applied. The front panel keypad and display allow manual control when Load is used in bench test applications. Remote control goes into effect as soon as the Load receives a command via GPIB, RS-232C or remote controller. When the remote control is in effect, only the computer can control the Load. The front panel keypad has no effect except the **LOCAL** key. You can return to local control by pressing **LOCAL** key.

Most of the functions that perform remotely can be done locally too at the Load front panel. Details of local operation are given in Chapter 4 *Local Operation*. Fundamentals of remote programming are described in the latter part of this manual.

3.5 Modes of Operation

There are four modes of operation: Constant Current (CC), Constant Resistance (CR), Constant Voltage (CV), and Constant Power (CP).

You can select the mode by pressing **CC**, **CR**, **CV**, or **CP** keys under the FUNCTION keypad. The parameters in current, resistance, voltage or power mode can be programmed easily when the mode is selected.

All data set in CC/CR/CV/CP mode will be rescaled to fit the resolution of current/voltage levels or slew rate. In local mode any value can be set to the Load from the keypad. There is no upper and lower limit that would cause an error. The Load automatically selects data, which is rescaled from the programmed value, truncates and checks high, low boundary before fitting it into the memory. When the programmed data is over the boundary, the Load will set the maximum or minimum level for it. In remote mode the programmed value cannot be over boundary. An error will occur when data is over the maximum or minimum value.

3.5.1 Constant Current Mode

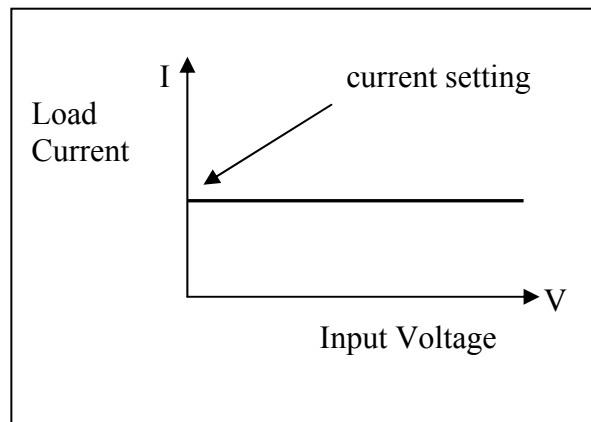


Figure 3-3 Constant Current Mode

In CC mode, the Load will sink a current in accordance with the programmed value regardless of the input voltage. The CC mode can be set by **CC** key in the front panel.

Press **A/B** key to select the current waveform in Static mode. Static function checks the stability of output voltage from a power supply.

Press **DYNA** key to select the current waveform in Dynamic mode. This key is only valid under CC mode, and Dynamic function checks the transient response.

Press **RANGE** key to select the current range suitable for your application no matter in static or dynamic current mode. Low range can supply better current resolution

You can program two different static settings, A and B under all static CC, CR, CV, and CP modes. Both A and B states use the same range. You can select A or B through the **A/B** key. Slew rate determines the rate that Load level changes from one state to another. Figure 3-4 shows the load current level after pressing **A/B** key.

CCLA: 4A, CCLB:2A, CCL \nearrow : 0.2A/ μ S, CCL \searrow : 0.08A/ μ S

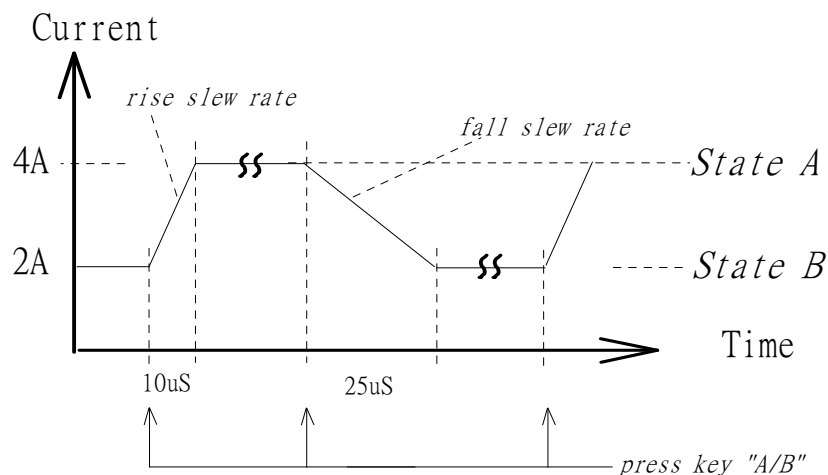


Figure 3-4 Load Level after Pressing **A/B** Key

Dynamic load operation enables you to program two load levels (CCDL1, CCDL2), load duration (CCDLT1, CCDLT2), and slew rate (CCDL \nearrow , CCDL \searrow). The loading level is switched between those two load levels according to your specific setting during operation. The dynamic load is commonly used to test the UUT's performance under transient loading condition. Figure 3-5 shows current waveform of dynamic function.

CCDL1:4A, CCDL2:2A, CCDL \nearrow : 1A/ μ S, CCDL \searrow : 1A/ μ S,
CCDLT1:10mS, CCDLT2:10mS

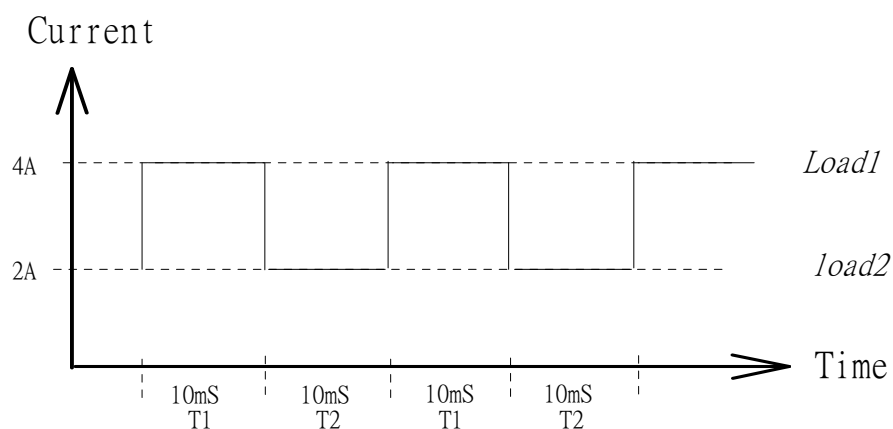


Figure 3-5 Dynamic Current Waveform

Slew Rate (Rise, Fall A/ μ S)

Slew rate determines the rate at which the current input of changes to a newly programmed value. There are two slew rate values, which are rise rate and fall rate.

CC mode voltage specification setting

The Load can do GO/NG test by pressing the **GO/NG** key under loading condition. It will check if the measured data is within the specification that set at the end of each mode setting. We can select are two types of parameters, percent or value, under the configure setting. This operation will be described in detail in section 4.2.4 *Setting the Specification*.

3.5.2 Constant Resistance Mode

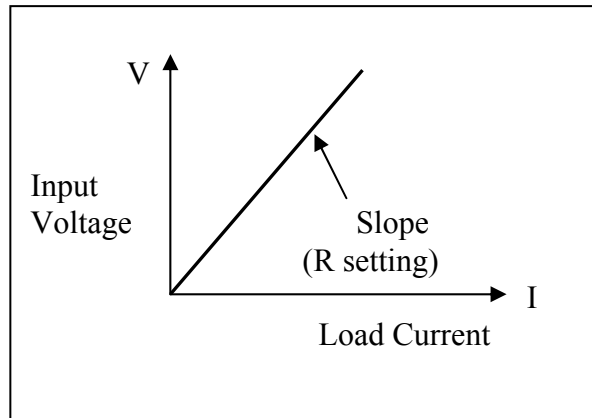


Figure 3-6 Constant Resistance Mode

In CR mode, the Load will sink a current linearly proportional to the input voltage in accordance with the programmed resistance. There is a double pole RC filter of input voltage, so high frequency parts will be removed. The load sink current of CR mode is proportioned to the input voltage through a double pole RC filter. To prevent the load current change caused by the input voltage variation, the power source impedance should be as low as possible, and remote sensing cable must be used to sense load input voltage when high sink current (low setting resistance) is programmed.

Resistance can be programmed in either of low range or high range by the **RANGE** key. The low range is used for input voltage in low voltage range while the high range is for the input voltage over low voltage range. The current range of CR mode is high range.

There are two resistance levels (A or B) for CR function as static CC mode. Both A and B states use the same range. You can select CRLA or CRLB using **A/B** key. Slew rate determines the rate that the load level changes from one state to another.

3.5.3 Constant Voltage Mode

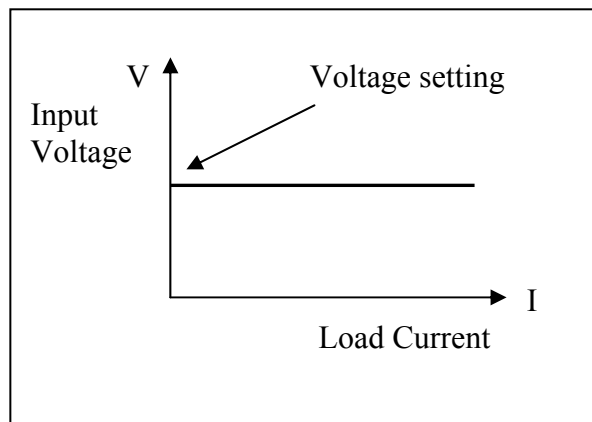


Figure 3-7 Constant Voltage Mode

In CV mode the Load will sink current to control the voltage source in programmed value. There are two response speeds of CV modes: fast and slow. The fast/slow response speed is the slew rate of current change.

Voltage can be programmed in either of low range or high range by the **RANGE** key. The low range is used for input voltage in low voltage range while the high range is for the input voltage over low voltage range.

There are two voltage levels (A or B) for CV function. You can select CVHA or CVHB using **A/B** key.

3.5.4 Constant Power Mode

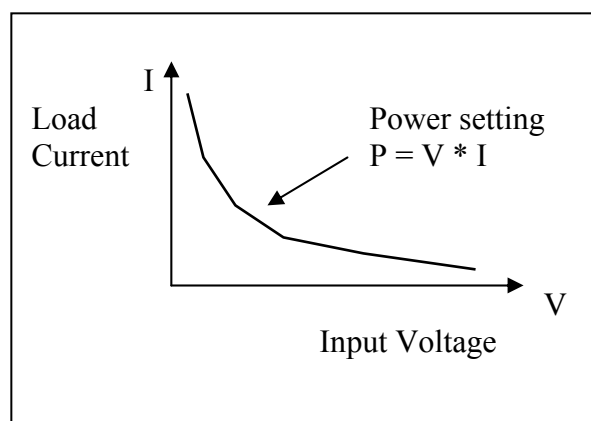


Figure 3-8 Constant Power Mode

In CP mode, the Load will sink a current according to the programmed power. This mode is operated under the F/W calculation. That is, take the measured V data, divide the Power setting and get the I setting value. High frequency parts will be removed as there is a lower

pass filter for the measuring data.

Power can be programmed in either of low range or high range by the **RANGE** key. The low power range is operated under low current range mode while the high power range is under high current range mode.

There are two power levels (A or B) for CP function as other modes. Both A and B states use the same range. You can select CPLA or CPLB using **A/B** key. Slew rate determines the rate that the load level changes from one state to another.

3.5.5 Load Surge Capability

Chroma's 63200 Series DC Loads provide a unique load surge simulation capability, which allows users to overdrive the loads up to 2.7 times their rated power for short periods. This feature is ideal when the average power require by the UUT is low compared to short-term peak power demands. Plasma Display Panel (PDPs) testing is one typical application, others include battery 3C discharge, breaker & fuse over rating (300% to 1000%) tests, car engine startup simulation and DC motor startup simulation.

The amount of surge loading available using the 63200 loads is related to the initial loading conditions. Figures 3-9 and 3-10 show the relationship of initial state (Load_Low under Dynamic mode) and the maximum acceptable overdrive power.

Under this operation, the load will display an Over Power Protection Alarm (OPP) and will disable the load current if the user violates the maximum load surge capability showed in the figures below.

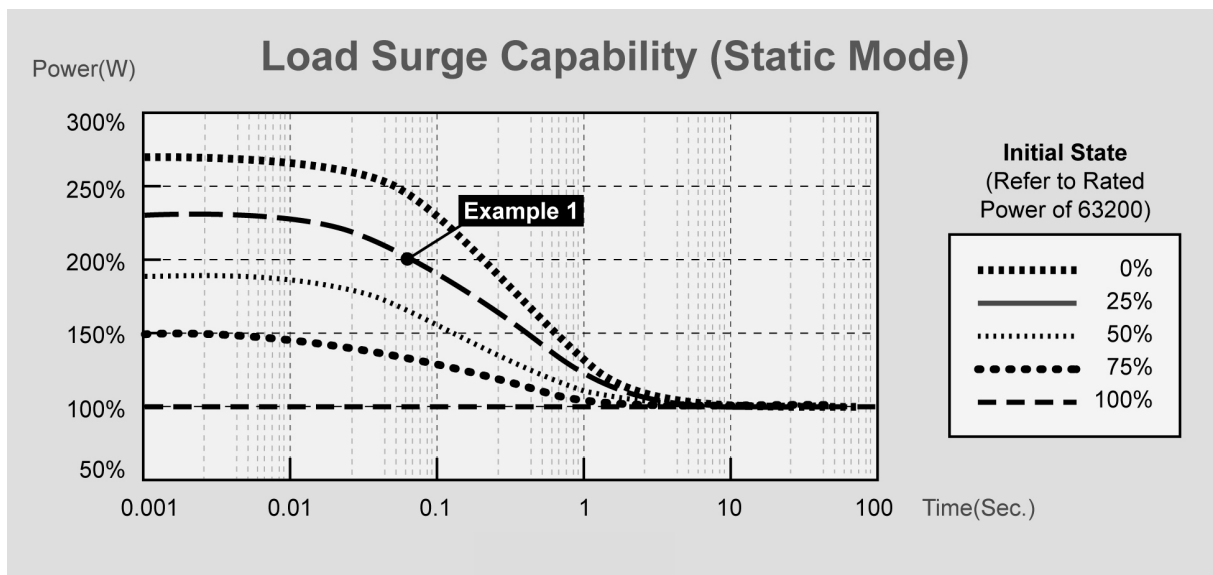


Figure 3-9 Load Surge Capability (Static Mode)

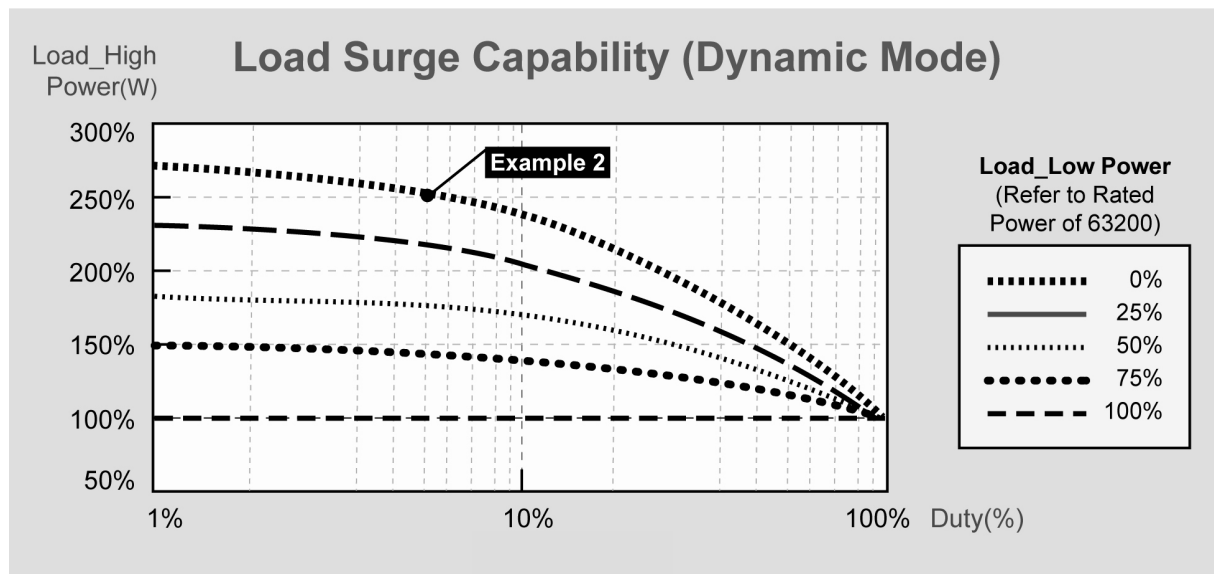


Figure 3-10 Load Surge Capability (Dynamic Mode)

- Note 1: The Initial state under Static Mode should last at least 1 second.
- Note 2: This load surge capability will be regulated by the temperature de-rating characteristics. (Refer to *Note 1* in *Specifications*)
- Note 3: Examples below assume the use of the Model 63201 load with a continuous rating of 2600W/300A/1-80VDC.

Example 1: STATIC LOADING

The Model 63201 can be overdriven to approximately 5200W (200% of its rated continuous power rating) for 0.06 seconds when the starting power is 650W (25% of its rated power). This is represented by DOT on the blue curve in Figure 3-9.

Example 2: DYNAMIC LOADING

The Model 63201 is capable of a zero – to- 6500W (250%) pulse at a duty cycle of 5%. This is represented by the DOT on the purple curve in Figure 3-10.

3.5.6 Timer Function for Battery Discharge Testing

The 63200 Loads include unique timing & measurement function allowing for precision time settings and measurements in the range of 1s to 99999s. This feature allows users to set a final voltage & timeout value for battery discharge testing and similar applications.

For example, Figure 3-11 below shows that the 63200's internal timer can be initiated automatically when the battery voltage falls below a preset value. The timer will continue counting until the second preset voltage value is reached.

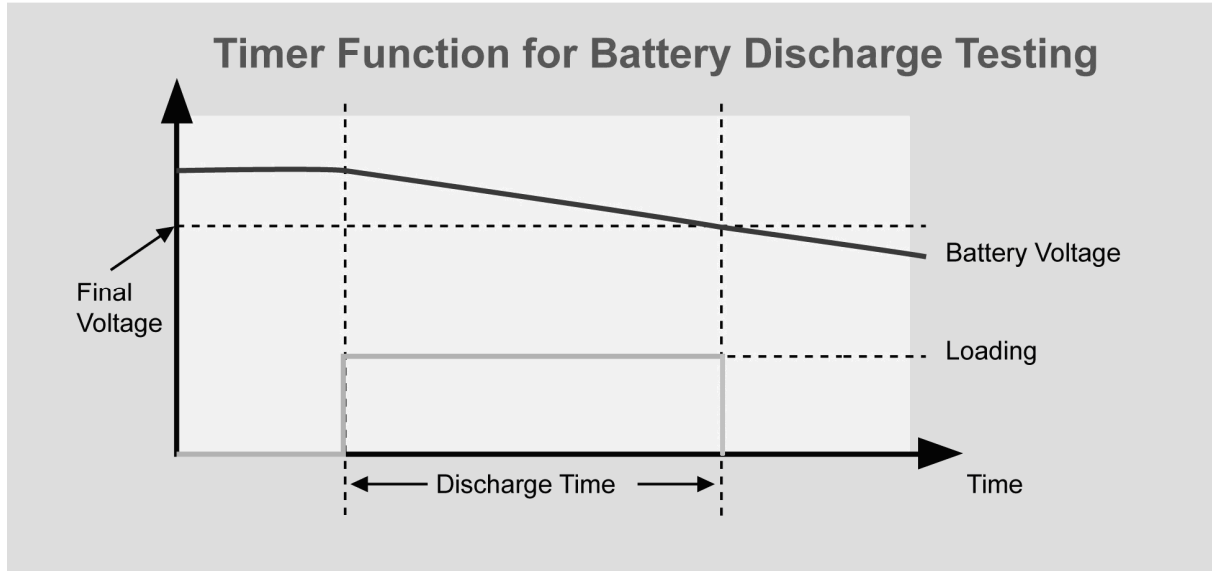


Figure 3-11

3.6 Measurements

The Load measures current, voltage, and power of the UUT and resistance of the Loading. The sampling rate is about 8 mS. Voltage and current measurements are performed with a 15-bit resolution of full-scale ratings.

There are three sets of 7-segment LEDs for the measuring data. One is for voltage, another is for current, and the other is for Power or Resistance that you can select under the configuration setting. The OHMS led will be on when you select the resistance measurement.

3.7 Slew Rate & Minimum Transient Time

Slew rate is defined as the change in current over time. A programmable slew rate allows a controlled transition from one load setting to another to minimize induced voltage drops on inductive power wiring, or to control induced transients on a test device. If the transient from one setting to another is large, the actual transient time can be calculated by dividing the current transition by the slew rate. The actual transition time is defined as the time required for the change of input from 10% to 90% or from 90% to 10% of the programmed excursion. If the transition from one setting to another is small, the small signal bandwidth of Load will limit the minimum transition time for all programmable slew rates. Because of the limit, the actual transition time is longer than the expected time based on the slew rate. Therefore, both minimum transition time and slew rate must be considered in the determination of actual transition time. The minimum transition time is from 24 μ S to 6 mS depending on the slew rate setting.

3.8 Start/Stop Sink Current

To simulate the transient characteristics of load to UUT, the critical problems are when and how the Load starts sinking current to UUT. You may set the conducting voltage V_{on} to solve the problems. The Load will start or stop sinking current when the UUT output voltage reaches the V_{on} voltage. You can start sinking current when the load is ON, and the input voltage is over V_{on} voltage, but stop sinking when the load is OFF, or the input voltage is below V_{on} voltage. See Figure 3-12 and 3-13 for start and stop sinking current.

There are two operation modes for V_{on} control, latch and non-latch. Latch means that when voltage is over V_{on} voltage, Load will start sinking current continuously in spite of the input voltage drop is below V_{on} voltage. Non-latch means that when the input voltage is below V_{on} voltage, the Load will stop sinking current. The V_{on} voltage and operation mode are set in configuration.

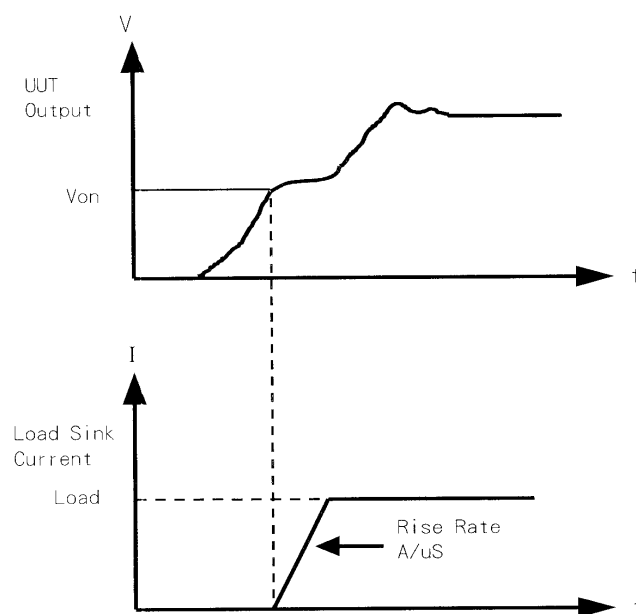


Figure 3-12 Start Sinking Current (V_{on} Non-Latch)

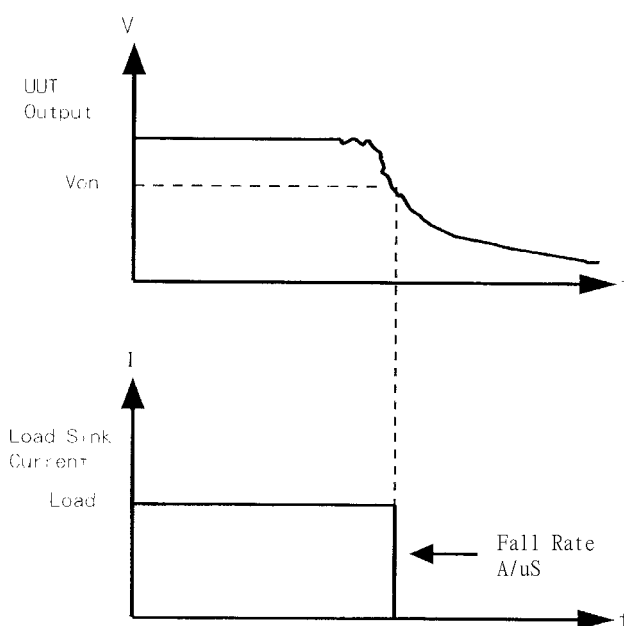


Figure 3-13 Stop Sinking Current (Von Non-Latch)

3.9 Short On/Off

The Load can simulate a short circuit at input by setting it on with full-scale current. The short circuit can be on/off from the front panel or via remote control. There are two operations for **SHORT** key on the front panel. One is toggled on/off, and the other is controlled by key. They are selected in configuration. The **SHORT** key will be enabled only when the Load is ON.

Toggled on/off means pressing **SHORT** once to enable short circuit, and again to disable it. Control by Key means pressing **SHORT** and holding it to enable short circuit, and releasing it to return to normal operation.

The actual value of electronic short depends on the mode and range that are active when the short is turned on. Its basic limit is the maximum power range the Load can supply. In CC mode it is equivalent to the programming of full-scale current. In CR mode it is equivalent to the programming of the minimum resistance for the present resistance range. In CV mode it is equivalent to the programming of zero voltage. In CP mode it is equivalent to the programming of the maximum power for the present power range. Turning on the short circuit does not affect the programmed setting, and Load input will return to the previous programmed values when the short circuit is turned off.

Note that turning on the short circuit may cause the Load to sink so much current to trigger protection circuit, and will turn off the Load.

① Notice

The 63200 series have a TTL signal from RS-485 pin 6 for your application to control the external short relay. TTL indicates high/low when the short key is set on/off.

3.10 Load On/Off

A module's input can be toggled on/off through the blue **LOAD ON/OFF** key on the front panel, or the remote control. The on/off change for input is done according to the slew rate.

Turning off the load does not affect the programmed setting. The load will return to the previous programmed values when the Load is turned on again.

3.11 Protection Features

The load includes the protection features: Over power, Over temperature, Fan fail, and Abnormal Alarms for Reverse Voltage and Over Voltage.

The appropriate bits in the Load status registers are set when any of the protection features or alarm listed above is active. The Load's buzzer will beep to inform you till protection or alarm status is reset. When any of the protection or alarm occurs, the Load input will turn off.

- Over voltage

The over voltage alarm circuit is set at a level slightly above the voltage range specified in the Load specification. The over voltage status register bit is set when the OV condition occurs and will remain set till it is reset. The Load will appear OVP as below when over voltage alarm occurs.

PROTECTION OVP

- Over current

When Load is operating in CR or CV mode, it is possible to attempt to sink current more than it is rated for. The limit level of current is set at a level slightly above the current of the Load. The over current status register bit is set when the OC condition occurs, and will remain set till it is reset. The Load will appear as below when over current protection occurs.

PROTECTION OCP

- Over power

The over power protection circuit is set at a level slightly above the power range specified in the Load specifications. The over power status register bit is set when the OP condition occurs, and will remain set till it is reset. The Load will appear as below when over power protection occurs. This protection will be activated also if the power exceeds the maximum surge load capability mentioned in section 3.5.5.

PROTECTION OPP

- Over temperature

The Load has an over temperature protection circuit, which will turn off the load if internal temperature exceeds the safe limit. The over temperature status register bit is set when the OT condition occurs, and will remain set till it is reset. Load will appear as below when over temperature protection occurs.

PROTECTION OTP

- Reverse Voltage

The Load can conduct a reverse current when the polarity of UUT connection is not correct. The maximum safe reverse current is same as the Load rated current. If the UUT reverse current is over the Load rated current, the Load may be damaged. If a reverse voltage condition is detected, you must turn off the power to UUT immediately and correct the connection. The reverse voltage status register bit is set when the RV condition occurs, and will remain set till it is reset. The Load will appear as below when reverse voltage alarm occurs.

PROTECTION REV

- FAN FAIL

The Load has a fan fail protection circuit, which will turn off the load if any of the four fans is out of order. The fan fail status register bit is set when the condition occurs, and will remain set till it is reset. The Load will appear as below when fan fail protection occurs.

FAN FAIL

All of the protections or alarms will latch when they are tripped. When any protection or alarm occurs, the load will turn off the input, and beep till you remove the condition and reset the protection by pressing **ENTER**.

⚡ CAUTION

To protect the Electronic Load from possible damage, the input voltage must not exceed the maximum input voltage rating specification. In addition, the Load + terminal potential must be more than the – terminal potential.

3.12 Save/Recall Setting

The Electronic Load setting can be saved and recalled for various test setups use. This simplifies the repetitive programming for different things. The present setting of mode parameters (CC, CR, CV, CP), programs and power on status (DEFAULT) can be saved in EEPROM using the **SAVE** key. Later you can recall the settings from the specified file via **RECALL** key.

3.13 Program

The program feature is very powerful. It allows you to simulate various test conditions. There are ten programs in the Electronic Load. Each program has ten sequences. The setting mapped to the program sequence in file is one on one. It means that program 1, sequence 1 maps to file 1, and program 3, sequence 4 maps to file 24. Please see section 4.2.2 and 4.2.3 for setting and running the program.

3.14 External Waveform Control

The external dynamic test, operated in the CC mode, is similar to that under the Dynamic test, but the load level switching is controlled by the duty cycle of an External TTL signal. It works the same way as the dynamic test except that the Period control signals are not generated internally, but are inputted from V EXT. Connectors are on the rear panel. A 0-to-10V external signal corresponds to the 0-to-full scale input range, so that users should apply DC offset for the external signal in the range from 0 to 10V. For the configuration of external waveform control usage, refer to section 4.2.5 for details.

3.15 Voltage & Current Monitor

The 63200 series have two isolated BNC connectors to monitor load voltage and current, the output signal from I MON and V MON. They are on the rear panel. A signal that maps to full scale will output from BNC connector. VMON is 0 ~ 10V maps to 0V ~ full-scale voltage and IMON is 0 ~ 10V maps to 0A ~ full-scale high range current. When in low range the IMON voltage of full-scale current for 63201~63205 is 10V and for 63206~63210 is 8V.

3.16 Von Protection

The design of Von Protection is to protect the Von point from setting to 0V when in “LOAD ON”, or the overshoot that may occur when the voltage of UUT sudden drops to 0V and rises again in restrain current state. The UUT and DC Load may be damaged if the UUT is connected.

Von Protection is a default protection value for voltage. Though the DC Load is in loading mode under the voltage value, there is no real current loading action until the external voltage is larger than the default of Von Protection. Even if the Von point is set to 0V or the voltage is sudden dropped to 0V and risen again under restrain current state, there will be no overshoot. This is to prevent the overshoot from damaging the UUT and the DC Load.

(Note: When high voltage models (63202, 63204 and 63210) are in use, “CC, CP V RANGE SELECT” are in “HIGH” range and “Von Protection” is enabled, the maximum current may not be applied under minimum working voltage as the default voltage protection range of Von Protection is 0.5V~3.5V.)

Example:

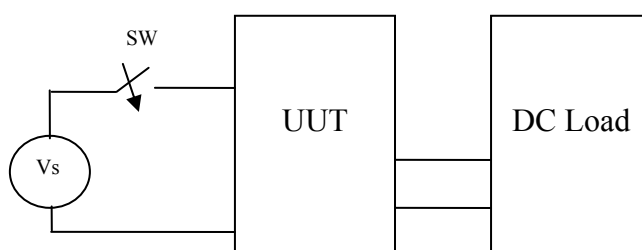


Figure 3-14 Connection of Power, UUT and DC Load

- (1) When it is “LOAD ON”, VON POINT is set to 0V and Von Protection is disabled, the DC LOAD will occur overshoot when the SW is turned off. It will damage the UUT and DC Load as Figure 3-15 shows.

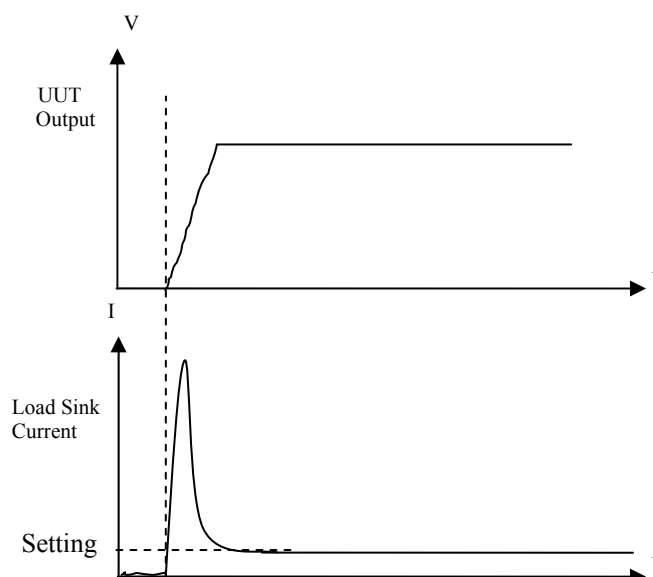


Figure 3-15 When Von Point is set to 0V without Protection

- (2) When it is “LOAD ON”, VON POINT is set to 0V and Von Protection is enabled, the DC Load starts loading when the external voltage exceeds the protection voltage. No overshoot will occur under this condition as Figure 3-16 shows.

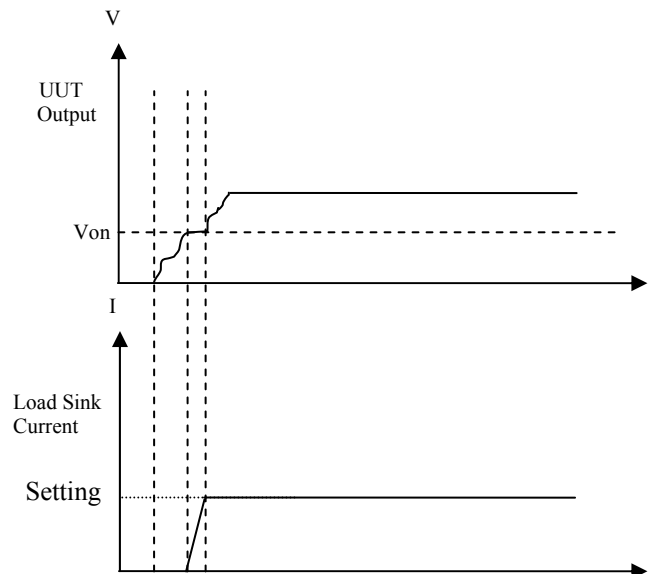


Figure 3-16 When Von Point is set to 0V with Protection

- (3) When it is “LOAD ON”, VON POINT is not set to 0V and Von Protection is enabled, switch the SW to on after it was turned off for a period of time and then turn it off again. There will be no current loading when the power is lower than the default protection voltage, and once the SW is turned off and the power is larger than the default voltage, the loading state will regain as Figure 3-17 shows.

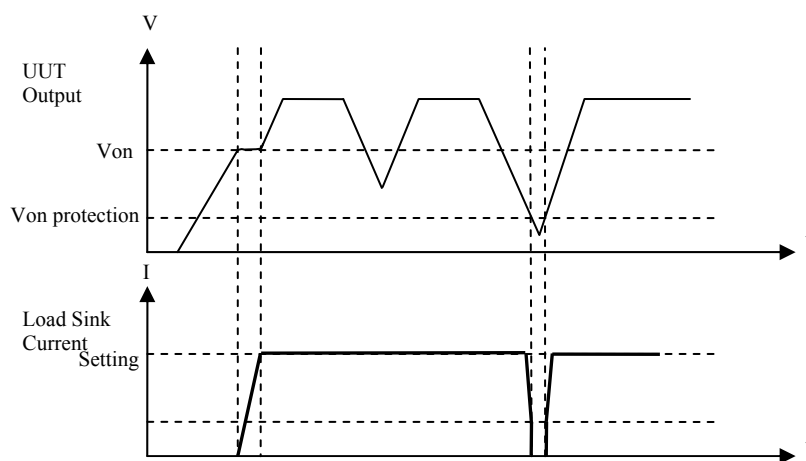


Figure 3-17 When Von Point is not set to 0V with Protection

- (4) When it is “LOAD ON”, VON POINT is not set to 0V and Von Protection is disabled, switch the SW to on after it was turned off for a period of time and then turn it off again. The current loading still goes on when there is no power, and overshoot may occur once the SW is turned off with any power input as Figure 3-18 shows. It may damage the UUT and the DC Load in this case.

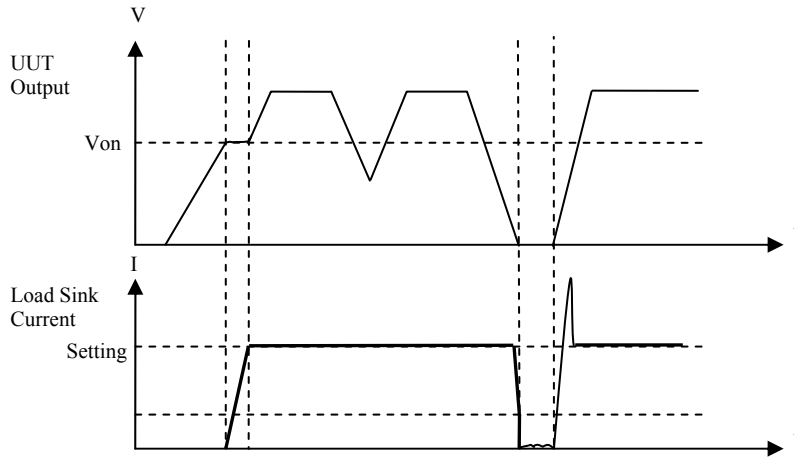


Figure 3-18 Von Point is not set to 0V without Protection

3.17 CR Offset Error Compensation

In CR mode the DC Load will follow the preprogrammed resistance to restrain the current to input voltage by linear ratio, and the change of input voltage causes the load current to change. CR compensation enables the input voltage of any kind to be accurate in CR mode. The resistance may generate the different offset errors, which could be very big due to various input voltage if there is no CR compensation.

CR Compensation:

- (1) Advantage: The measurement in CR mode will be more accurate because of compensation and the accuracy of 63200 Series is based on the compensated result.
- (2) Disadvantage: Controlling current is the mechanism of compensation and in the process of continuous compensation; the current will fluctuate until reaching stable state to get accurate and stable current.

No CR Compensation:

- (1) Advantage: The loading current will not fluctuate due to the compensation mechanism.
- (2) Disadvantage: The reading in CR mode will be varied with voltage and same for the accuracy.

4. Local Operation

4.1 Introduction

This chapter describes how to operate the electronic load from the local panel in details. The descriptions include panel control and indicators.

4.2 Local Operation

In order to use the front panel keys to control the electronic load, local operation must be in effect. Immediately after the power is applied, local operation will be in effect. When local operation is in effect, you can use the display with keypad on the front panel to control the Load. The display can be used to view the programmed setting. The input voltage, current, power or resistance is displayed on the three 7-segment LEDs.

① Notice

When you edit setting, the display will blink to let you know which setting is to be edited or has been selected.

In the remote state, the keys on the front panel have no effect. Only remote controller can program the Load. The 7-segment will show the present input voltage and current readings. The Load LCD display will show REMOTE message.

① Notice

When setting the load level, the resolution of current, voltage, power, resistance and slew rate will be different from the entered values. The displayed value will remain as the one entered. But the output will be the actual value D/A programmed in the load. These parameters except resistance will be degraded to low values when entered.

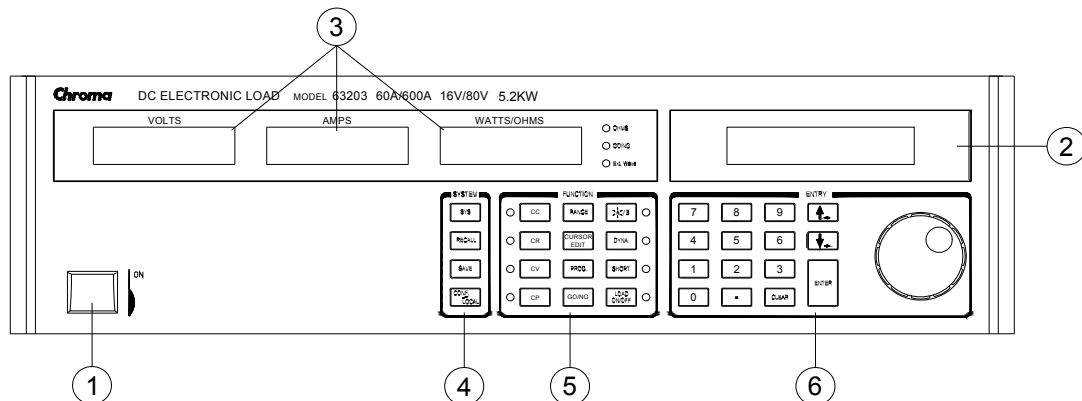


Figure 4-1 Front Panel of the Load

1. Line switch
2. LCD display
3. 7-segment LEDs
4. System keys

Turn the ac power on/off.
Display setting information normally.
Show the V, I, P, R measured data.

SYS

To set the remote control status, ext. wave enable and Parallel function parameters.

RECALL

To recall the saved settings from EEPROM, and all settings from specified files (1 to 101).

SAVE

To save all of the present mode settings in the specified files (1 to 100). The save program is from 1 to 10. Saving DEFAULT is to save the status for the next time the Electronic Load is turned on. All saved settings are stored in EEPROM, and will not be lost when ac power is cycled.

CONF

To select configuration data for editing.

5. Function keys

CC

To select the constant current mode for editing and the CC led aside this key will be on.

CR

To select the constant resistance mode for editing and the CR LED aside this key will be on.

CV

To select the constant voltage mode for editing and the CV led

aside this key will be on.

CP

To select the constant power mode for editing and the CP LED aside this key will be on.

RANGE

To select the setting level range for each mode.

CURRSOR EDIT

Enable to edit the digit by rotary knob under loading condition. This key is valid only when the Load is in on status.

PROG.

To select a program for settings or running.

GO/NG

To enable the SPEC. checking test.
The GO/NG LED will turn red when any of the SPEC fails. It will turn green when the check is all right.

A/B

To select one of the two static settings.
The LED aside this key will be on when you choose A setting, and off when you choose B setting.

DYNA.

Choose the dynamic current waveform and run the setting under Constant current mode. This key is only valid in CC mode and the LED aside this key will be on when in this status.

SHORT

The Load can simulate a short circuit across the input. The short circuit can be enabled when this key is pressed. When the input is shorted, the LED aside this key will be active. The **SHORT** key can be set in configuration to toggled on/off, or active by pressing.

LOAD ON/OFF

The input can be toggled on or off by pressing **LOAD**. When the input is turned on, the LED aside this key will be active.

6. Entry keys

▲, ▼

They let you scroll through the choices in a parameter list for a specific command. Parameter lists are circular. You can return to the starting position by pressing either key continuously.

CLEAR

To clear the digit entered from keypad. This key lets you correct wrong digits before they are entered.

ENTER

It executes the entered value or the parameter for the command accessed presently. The parameters you have entered with other keys are displayed but not entered into the Load until you press this key. Before pressing **ENTER** you can change or abort anything entered into the display previously.

0 - 9

They are used for entering numeric values.



It is a decimal point.



Rotary knob allows you to change the setting value continuously by turning this knob.

4.2.1 Setting the Operation Mode

The **CC**, **CR**, **CV**, and **CP** keys are used to select the Load modes for local control.

The load levels and slew rates are common to CC, CR, and CP modes. CV mode sets voltage level and response speed. There are two level settings for CC, CR, CV, and CP modes. They can be switched by the **A/B** key.

Setting CC Values

There are four modes for CC operation: CCL, CCH, CCDL, CCDH. The current levels are programmed in Amps. The slew rate levels are programmed in Amps/μS. The timings are programmed in millisecond. The setting buffers of four CC modes are independent. Changing the operation range doesn't affect the settings of other ranges. The following examples show how to set the CC values for the Load model number 63203 channel.

1. Select mode

Press **CC** key to go into the CC static mode.

CCLA :	0.000A
CCLB :	0.000A

2. Select range

Press **RANGE** key to choose the high range constant current mode.

CCHA :	0.00A
CCHB :	0.00A

If press **RANGE** again, it will go back to the low range constant current mode.

3. Set Current Level

There are 4000 discrete steps from 0 to full scale in each range. Set level A current level to 200 amps by pressing **2**, **0**, **0**, **ENTER**. Set level B current level to 5 amp by pressing **5**, **ENTER**.

CCHA :	200.00A
CCHB :	5.00A

4. Set Slew Rate

There are 250 discrete steps in each range. Set the rise 20 A/ μ S and fall slew rates to 0.5A/ μ S by pressing **2**, **0**, **ENTER** for rise and **0**, **.**, **5** **ENTER** for fall slew rate.

CCH 	: 20.0A/ μ S
CCH 	: 0.5A/ μ S

5. Set Voltage spec

Set the high voltage spec. to 6 V by pressing **6**, **ENTER**.

CCH	VOLTAGE	SPEC.
HIGH :		6.000V

Set the low voltage spec. to 4 V by pressing **4**, **ENTER**.

CCH	VOLTAGE	SPEC.
LOW :		4.000V

Then the display will go to the first editing page again.

① Notice

Spec. value can also be programmed by PERCENT under Configure setting. You have to input the CENTER Voltage, and then enter the HIGH and LOW percent to the center voltage.

6. Set dynamic current mode.

Press **DYNA** key under CC mode, and select current range by **RANGE** key. Program the high current level to 50A by pressing **5**, **0**, **ENTER** keys. Program the low current level to 5A by pressing **5**, **ENTER** keys.

CCDL1:	50.000A
CCDL2:	5.000A

Then set the dynamic function period T1 to 0.1 mS, period T2 to 0.2 mS by pressing **0**, **.**, **1**, **ENTER** and **0**, **.**, **2**, **ENTER**. The range of dynamic period is from 0.025 mS to 30 Sec.

CCDLT1 :	0.100mS
CCDLT2 :	0.200mS

The slew rate and Voltage Spec settings are same as those of static current mode.

① Notice

If you press **ENTER** key, and the blinked data do not go to next, change the configuration setting Enter Data Next to YES.

Setting CR Values

The Load CR mode is programmed by pressing **CR**. The resistance values can be programmed in low voltage (CRL) or high voltage (CRH) range. The current is always in high range. All resistance levels are programmed in ohm. The slew rate is in A/μS.

Following examples illustrate how to set the CR values for Load model number 63203.

1. Select range

Press **RANGE** key to choose the high range CR mode.

CRHA :	500.000Ω
CRHB :	500.000Ω

If press **RANGE** again, it will go back to the low range CR mode

2. Set Resistance Level

Set level A resistance level to 200 Ohm by pressing **2, 0, 0, ENTER**. Set level B resistance level to 1 Ohm by pressing **1, ENTER**.

CRHA :	200.000Ω
CRHB :	1.000Ω

3. Set Slew Rate

Set the rise 20 A/μS and fall slew rates to 0.5A/μS by pressing **2, 0, ENTER** for rise and **0, ., 5, ENTER** for fall slew rate.

CRH  :	20.0A/μS
CRH  :	0.5A/μS

4. Set Voltage spec

Set the high voltage spec. to 6 V by pressing **6**, **ENTER**.

CRH	VOLTAGE	SPEC.
HIGH :		6.000V

Set the low voltage spec. to 4 V by pressing **4**, **ENTER**.

CRH	VOLTAGE	SPEC.
LOW :		4.000V

Then the display will go to the first editing page again.

Setting CV Values

The CV mode for the Load is programmed by pressing **CV**. The voltage values can be programmed in low voltage (CVL) or high voltage (CVH) range. The current is always in high range. All voltage levels are programmed in Volt.

The following examples illustrate how to set CV values for Load model number 63203.

1. Select range

Press **RANGE** key to choose the low range CV mode.

CVLA :	16.000V
CVLB :	16.000V

If press **RANGE** again, it will go back to the high range CV mode.

2. Set voltage Level

Set level A voltage level to 10 V by pressing **1**, **0**, **ENTER**.

Set level B voltage level to 8 V by pressing **8**, **ENTER**.

CVLA :	10.000V
CVLB :	8.000V

3. Set Response Speed

There are two response speeds for CV mode, fast and slow for different UUT testing. Refer to Figure 4-2 and 4-3 for transfer functions.

CVL RESPONSE 1: FAST 2: SLOW

Press **2**, **ENTER** to choose the slow response.

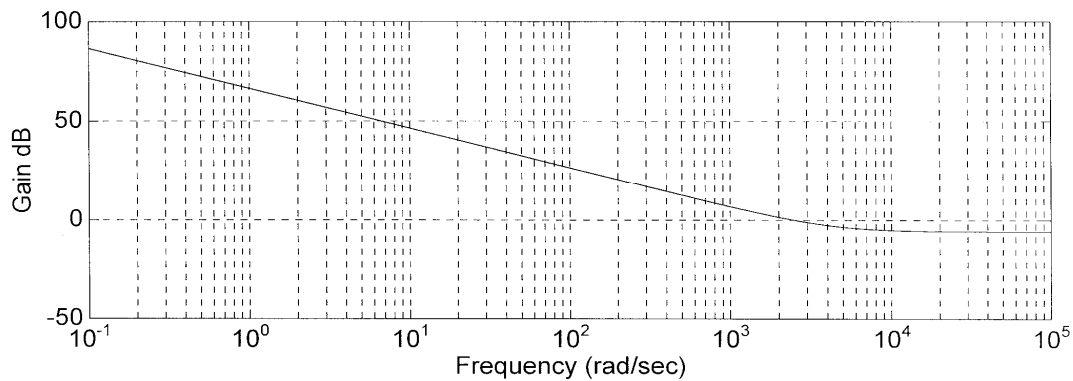


Figure 4-2 CV Response Transfer Function (FAST)

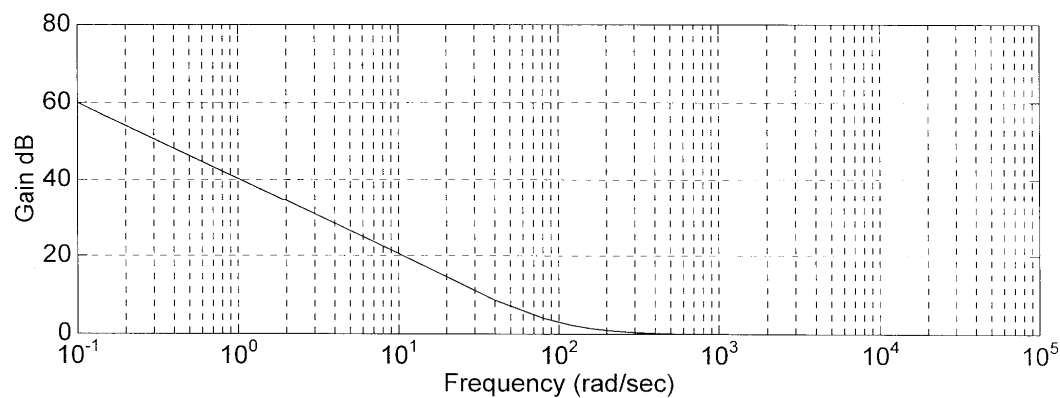


Figure 4-3 CV Response Transfer Function (SLOW)

4. Set Current spec

Set the high current spec. to 8 A by pressing **8**, **ENTER**.

CVL CURRENT SPEC. HIGH : 8.000A

Set the low current spec. to 4 A by pressing **4**, **ENTER**.

CVL CURRENT SPEC. LOW : 4.000A

Then the display will go to the first editing page again.

Setting CP Values

The CP mode for the Load is programmed by pressing **CP**. The power values can be programmed in low current (CPL) or high current (CPH) range. All power levels are programmed in Watt. The slew rate is in A/μS.

The following examples illustrate how to set CP values for Load model number 63203.

1. Select range

Press **RANGE** key to choose the high range CP mode.

CPHA :	12.000W
CPHB :	12.000W

If press **RANGE** again, it will go back to the low range CP mode

2. Set Power Level

Set level A power level to 200 W by pressing **2, 0, 0, ENTER**.

Set level B power level to 4000 W by pressing **4, 0, 0, 0, ENTER**.

CPHA :	200.000W
CPHB :	4000.000W

3. Set Slew Rate

Set the rise 20 A/μS and fall slew rates to 0.5A/μS by pressing **2, 0, ENTER** for rise and **0, ., 5, ENTER** for fall slew rate.

CPH  :	20.0A/uS
CPH  :	0.5A/uS

4. Set Voltage spec

Set the high voltage spec. to 6 V by pressing **6, ENTER**.

CPH VOLTAGE SPEC.	
HIGH :	6.000V

Set the low voltage spec. to 4 V by pressing **4, ENTER**.

CPH VOLTAGE SPEC.	
LOW :	4.000V

Then the display will go to the first editing page again.

4.2.2 Setting the Program

The Electronic Load is able to select customized basic tests, and link them to a program test for automatic execution.

The **PROG.** key is used to select program or recall program for local control. There are ten programs (1-10). Each program has ten sequences to map files from 1 to 100. Program 1 maps files from 1 to 10. Table 4-1 shows the relationship between the program sequence and the corresponding file.

Program 1 Sequence No.	1	2	3	4	5	6	7	8	9	10
Corresponding File No.	1	2	3	4	5	6	7	8	9	10
Program 2 Sequence No.	1	2	3	4	5	6	7	8	9	10
Corresponding File No.	11	12	13	14	15	16	17	18	19	20
:										
:										
Program 10 Sequence No.	1	2	3	4	5	6	7	8	9	10
Corresponding File No.	91	92	93	94	95	96	97	98	99	100

Table 4-1 The Relationship of the Program Sequence and the Corresponding File.

When running a program you must set its corresponding file parameters first. If one program sequence is not enough for you to test the UUT, you can use program chain function to get more sequences.

Press **PROG.** key, and the LCD will display as follows. Press number 1 -10 followed by **ENTER** to recall program from EEPROM, or use **▲**, **▼** keys to edit the program.

PROGRAM	SELECT
No :	1

1. Setting the Program Chain

The chain function of program enables you to chain program so as to get more sequences for testing. Set program chain number to 0 means no program chained. Program chain function can chain itself for loop test, or other programs.

Press **1**, **ENTER** to chain itself for loop test. The default setting is 0.




PROGRAM	CHAIN
No :	1



2. Setting the Sequence Mode

There are three modes to control the method of sequence execution.

SKIP: Skip the sequence. Load will not change the input status.

AUTO: Use ON/OFF time to control Load input on/off. When ON/OFF time passes, the Load will get to the next sequence automatically.

MANUAL: Use ,  or number 0 to 9 to control the execution sequence. Pressing number key lets you select a random sequence number to execute. Pressing  means to go to sequence 10.



Press ,  keys to set sequence 1 to manual mode. You need to set ten sequence settings for one program. The default setting is SKIP.

[SEQ 1]	1: AUTO
0: SKIP	2: MANUAL

3. Setting the Sequence Load ON/OFF Time

The sequence ON/OFF time controls the Load input ON/OFF when the program's sequence is executed. The ON/OFF time range is 0 to 60 seconds. (30S each)

SEQUENCE 1
LOAD ON TIME : 20.0 S

Press ,  keys to set OFF time for 8 seconds. The default setting is 0 second for OFF time.

SEQUENCE 1
LOAD OFF TIME : 8.0 S

4. Setting the Short Delay/ON Time

The range of short delay and on time is from 0 to 60 Sec. The short delay time starts from the beginning of the Load on time. If the short time is set to 0 Sec., the Load will not short. The default setting is 0 Sec.

SEQUENCE 1
SHORT DELAY : 0.0 S

Press ,  to set SHORT on time for 8 seconds.

```
SEQUENCE  1
SHORT ON TIME :  8.0 S
```

5. Setting the Sequence P/F Delay/ON Time

The sequence Pass/Failure Delay/ON time let you set the delay time for P/F checking and on time for how long it checks when load condition changes. The failure status of the sequence will latch when a program is executed. It means that any failure will be memorized even when the UUT becomes stable within the specifications later. The range of P/F delay and ON time is from 0 to 60 seconds. Press **1**, **ENTER** to set the sequence P/F delay time for 1 second and then **5**, **ENTER** for P/F on time for 5 seconds. Both default setting are 0 second.

```
SEQUENCE  1
P / F  DELAY :    1.0 S
```

```
SEQUENCE  1
P / F  ON  TIME :  8.0 S
```

4.2.3 Running the Program

Press **LOAD ON/OFF** to run program when the program function is selected. The display shows as below.

```
PROG.  1    SEQ.  1
[ON ] [ KEY ] [ PASS ] [ S ]
```

The upper line shows the executed program and sequence number while the lower line shows the Load, key, test result and short status.



ON/OFF:	It shows the Load input status.
KEY:	It displays when MANUAL mode is active and waiting for key input.
PASS/FAIL:	It shows the test result compared with SPEC setting.
S:	It display if Load is Short now.

When executing the program, the setting of sequence will recall files from EEPROM, and the SPEC function is always ON. All function keys are disabled until **LOAD ON/OFF** is pressed to stop the program execution, or the program run finishes. When the program run stops or finishes, the LCD will display as follows.

```
PROGRAM  OFF
RESULT   :   PASS
```

It means that all sequences have passed in the program tests. If the test fails, LCD will show as follows.

PROG. XX Err. REPORT 1, 2, 3,10

PROG. XX indicates the file number of the program failed, 1 to 10. In addition, 1, 2, 3...10 shown by LCD stand for the failed sequence numbers. During program chain testing, if the failed program files are more than one set, you can use ,  to read the contents of failed programs.

4.2.4 Setting the Specification

The **GO/NG** key is to enable/disable specification checking function. The Load will compare measurement data with the set specifications for HIGH and LOW boundary when the SPEC TEST is ON, and the LED, GO/NG, is lighted on the panel. To set specifications for the load; please refer to the section 3.5 at the end of each mode for parameters setting. The specification unit for CC, CR, and CP modes is volt while CV mode is current. There are three levels for each mode: CENTER, HIGH and LOW. The CENTER level must be set by the value of channel input reference level. The HIGH and LOW levels can be set by the value or percentage selected in configuration **SPEC.ENTRY MODE**. The HIGH/LOW percentage range is from 0 to 100%.

The default setting of HIGH and LOW is 100%. The CENTER value is half of the range. Please refer to section 4.2.5 for the specification selection set by Value or Percentage.

4.2.5 Setting the Configuration

The Electronic Load provides useful features such as Von point, Current limit, Auto Load On, etc. To use these powerful features, you must set relevant parameters in accordance with application needs by the configuration setup. This procedure is only needed for initial setup of a test operation. The configuration of the Load is stored in EEPROM. To set configuration you must press the **CONF** key.

Set the voltage range for CC, CP mode. There are two voltage ranges for CC or CP mode. High range is for high voltage and low range is for low voltage so as to get better voltage resolution. The default setting of V range is HIGH.

CC, CP V RANGE SELECT 1: HIGH 2: LOW
--

Set Von Protection in two ways. 1. When Von Protection is set to YES, the default voltage protection value will be set, see 3.16 Von Protection for detail description. 2. When NO is selected there will be no default voltage protection value. A warning of “CAUTION: If Voltage rise of UUT is < 250us, it may cause damages of 63200s.” will prompt when NO is set.

Von PROTECTION 1: YES 2: NO

① NOTE

When high voltage models (63202, 63204 and 63210) are in use, “CC, CP V RANGE SELECT” are in “HIGH” range and “Von Protection” is enabled, the maximum current may not be applied under minimum working voltage as the default voltage protection range of Von Protection is 0.5V~3.5V.

Von Protection is a default for the version of 1.21, 1.30 and 1.40 in <LOAD FW> MAIN, and it is an option in version 1.50 and above.

Set Von point. Von is the conduction voltage level when the Electronic Load starts to sink current and the UUT output reaches the Von voltage. The default setting of Von voltage is 1V.

Von POINT VOLTAGE = 1.000V

Set Von latch. There are two operation modes for Von control. Von latch ON means that Load will sink current continuously when it reaches Von voltage. Von latch OFF means that Load will stop sinking current when UUT voltage is under Von voltage. The default setting of Von latch is OFF. Figure 4-4 and 4-5 show the Von LATCH ON and OFF current waveform respectively.

Von LATCH ENABLE 1: YES 2: NO

⚡ CAUTION

If Von is set to 0V, the Load circuit will be ON in spite of no UUT. This will get overshoot spike. If a UUT is applied, the overshoot may damage the UUT even though the Load current sets small. So, do not set Von to 0V.

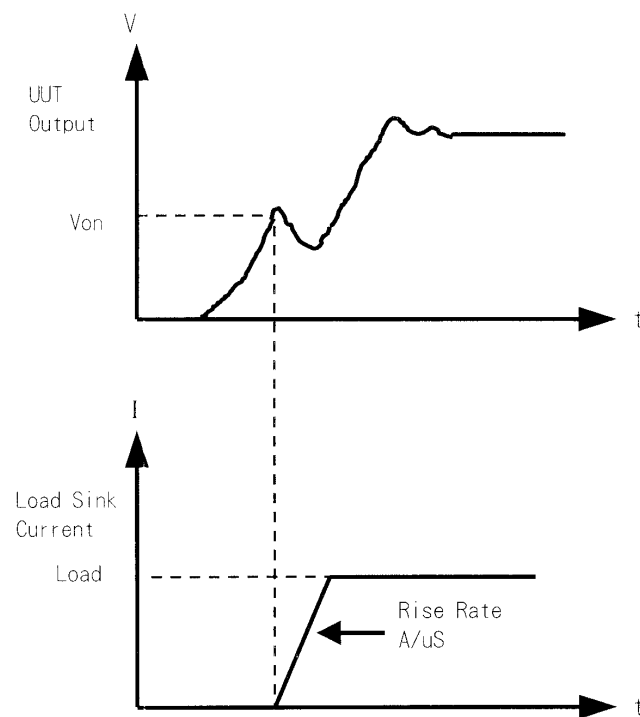


Figure 4-4 Von LATCH ON Current Waveform

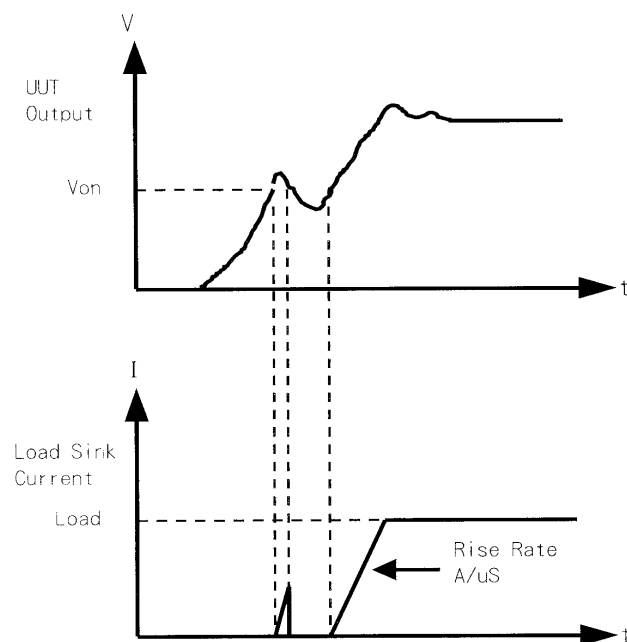


Figure 4-5 Von LATCH OFF Current Waveform

Set CV mode CURR_LIMIT. This function will limit the Load current sinking to protect the UUT in CV mode. The default setting of current limit is the maximum Load current.

CV	CURRENT	LIMIT
CURRENT	=	200.000A

Set sign of voltage for display. The Electronic Load will show minus sign of the voltage if MINUS is selected. No sign will show if select PLUS. The default setting is PLUS. Selecting MINUS of SIGN OF VOLT. will occupy one digit. The displayed digits are five.

SIGN OF VOLTAGE	
1. PLUS	2. MINUS

Set POWER/OHM for display. The right one of the three 7-segment LEDs can be selected to display POWER or OHM measurement data. The default setting is POWER. The LED "OHMS" will be lighted if you select OHM by pressing **2**, **ENTER**.

POWER / OHM	SELECT
1: POWER	2: OHM

Set the specifications of entry mode. The specifications of Load can be set by VALUE or Percentage for HIGH and LOW data. The percentage values refer to CENTER value of specification. The default setting of SPEC entry mode is percentage.

SPEC. ENTRY MODE	
1: VALUE	2: PCet

Select data entry mode by ENTER. If YES is selected for data entry, the setting will go to the next one after pressing **ENTER**. If NO is selected for data entry, the setting will remain at the same line for you to change it again and again. The default setting is NO.

ENTER DATA	NEXT
1: YES	2: NO

Select SOUND ENABLE. When you press the key on the module, it will produce a sound if sound = YES. The default setting for sound is YES.

SOUND	ENABLE
1: YES	2: NO

Select Load input status when it is powered ON. If YES is selected, the module will be active according to AUTO LOAD ON mode setting. The default setting of AUTO LOAD ON is NO.

```
AUTO LOAD ON
1: YES      2: NO
```

Select the load on mode if AUTO LOAD ON is ON. If LOAD is selected, the Load will be active as DEFAULT setting. If PROG is selected, the Load will be active as the program saved last time. The default setting of AUTO LOAD ON MODE is LOAD.

```
AUTO LOAD ON MODE
1: PROG     2: LOAD
```

Select short key mode. Set **SHORT** key mode for the Load. The default setting of SHORT mode is TOGGLE.

```
SHORT KEY MODE
1: TOGGLE   2: HOLD
```

Set Battery Discharge. If setting Battery Discharge to Yes, a Final Voltage window will appear. Enter the end voltage for Battery Discharge, see 3.5.6 for detail description.


```
Battery Discharge:
1: YES   2: NO
```

Set CR Offset. Select if performing CR compensation. It is enabled if Yes is selected and the accuracy of CR will be enhanced, see 3.17 for detail description.

```
CR Offset ENABLE:
1: YES   2: NO
```

Display the versions of host, load, and Panel.

```
<HOST FW>   WRTR: 00.85
BOOT: 00.85 MAIN: 00.85
```

Press  key and the display will show:

```
<LOAD FW>   WRTR: 00.85
BOOT: 00.85 MAIN: 00.85
```

Press  key and the display will show:

```
<PANEL FW>  WRTR: 00.85
BOOT: 00.85 MAIN: 00.85
```

4.2.6 Recalling Files

Press **RECALL** to recall files from 1 to 100. Files 1 to 100 are user data. File 101 is factor set state. After a file is recalled, the display will go to mode editor for you to edit or view the file. Pressing **RECALL** the display will show the file no. last recalled. The default file no. is 1 when the Load is powered on.

Press **RECALL**, **3**, **ENTER** to recall the number 3.

```
RECALL  FILE
FILE NO : 3
```

The data of the Load will be recalled when you execute file recall.

4.2.7 Saving File/Default/Program

There are 100 file locations (1 to 100) for you to save files. Press **SAVE**, **2**, **0**, **ENTER** to save a file to location 20.

```
SAVE      FILE
FILE NO : 20
```

Press **SAVE**, **▲**, **▼** until the display shows as follows. The DEFAULT states are used for Electronic Load after power-on. Press **1**, **ENTER** to save DEFAULT to EEPROM.

```
SAVE      DEFAULT
1: YES    2: NO
```

Press **SAVE**, **▲**, **▼** until the display shows as follows.
Press **1**, **ENTER** to save program.

```
SAVE      PROGRAM
1: YES    2: NO
```

4.2.8 Going To Local

The **CONF./LOCAL** key operates as local key when Electronic Load is in remote mode. You can press **CONF./LOCAL** key to go to local operation when Load is in remote state. In local operation, **CONF./LOCAL** key operates as **CONF** key.

4.2.9 Setting System and RS-232C Connection

GPIB Address setting. Press **8**, **ENTER** to set the Load GPIB address to 8.

GPIB ADDRESS
8

RS485 Address setting. Press **3**, **ENTER** to set the Load RS485 address to 3. This is for setting the models ID when used in parallel mode.

RS485 ADDRESS
3

RS-232C parameters setting. There are four parameters for you to set: Baud Rate, Parity Check and Data Bit number.

Baud Rate: 0:4800, 1:9600, 2:19200, 3:38400, 4:57600, 5: 115200 bits/second
 Parity Check: 0: NONE, 1: EVEN, 2: ODD
 Data Bit: 1: 7 bits, 2: 8 bits
 Stop Bit: 1: 1 bit, 2: 2 bits

The RS-232C connector on the rear panel is a 9-pin connector (DB-9, male connector). The RS-232C connector bus signal is defined as below.

RS-232C Connector

Pin Number	Input/Output	Description
1	---	+5V
2	Input	RxD
3	Output	TxD
4	Output	DTR
5	---	GND
6	Input	DSR
7	Output	RTS
8	Input	CTS
9	---	+5V

Note: Pin 1 and pin 9 (+5V) are for 63200 series Remote Controller only.

External wave Enable. The Load current can be controlled by the external DC voltage input via the Vext BNC connector on the rear panel if this function is selected 1: YES. The default is 2: NO. The Ext. Wave LED will be lighted when operating in this mode.

Parallel mode function. The Loads can be used in parallel to increase the loading power capacity. There is only one master in the parallel group, the rest are slaves. These Loads can be operated synchronized in static or dynamic mode via the master control. There are

four different types for the Load to set in operation. There are maximum six models in parallel.

PARALLEL	=	NONE
PRESS	0 → 3	TO SELECT

- 0: NONE: Disable the parallel mode function.
- 1: MASTER: Used as the master for the parallel group, and this is the only one controlled by front panel or PC in this group. Not only do the synchronized operation, but also tell the slaves how many current they should sink.
- Measurement Display:
Choose 1. SUM to show the total current on the master or
2. Sole to show the current the loads owned.
- SLAVE X MODEL:
Press 0 → 6 to setup the slaves' model to use in parallel. NONE means not exist.
- 2: SLAVE: Setup the Load as slave.
- 3: MASTER SYN: Same as 1: MASTER except this just do the SYNC parallel function, all the loading data of the slaves is decided by the front panel or PC input.

4.2.10 Online Change Level

The Load provides you two ways for changing level online. They are convenient for you to change load directly with the rotary knob when LOADON. These two operation modes are described below.

- By Rotary knob: In LOADON, change load with the rotary knob in resolution unit. When the rotary knob rotates clockwise, it means as follows.
- CC mode: raise the current value.
 - CR mode: raise the resistance value.
 - CV mode: raise the voltage value.
 - CP mode: raise the power value.
- When the rotary knob rotates counterclockwise, it means as follows.
- CC mode: lower the current value.
 - CR mode: lower the resistance value.
 - CV mode: lower the voltage value.
 - CP mode: lower the power value.

- By CURSOR EDIT: In LOAD ON, press the mode key **CC**, **CR**, **CV**, or **CP** to make the display show numeric values for the setting. Press **CURSOR EDIT** to see the cursor blinking on the display. Press **▲**, **▼** keys to move the cursor to the digit you want to edit. Change the value by rotary knob. Press the **CURSOR EDIT** key again to disable the cursor.

5. Basic Information for Programming

5.1 Introduction

The following sections describe how to program the 63200 series electronic load remotely from a GPIB controller or RS232C. The command set introduced here can be applied to all 63200 series electronic loads including 63203, 63204, that equipped with GPIB or RS232C.

Either GPIB or RS232C can be used one at a time. They cannot be used simultaneously. If GPIB is used first in remote control, RS-232C will be disabled unless the machine is reset, and vice versa.

5.1.1 Setting the GPIB Address and RS-232C Parameters

The electronic load is shipped with the GPIB address set to 5. The address can be only changed via the “SYS” functional list menu (please see section 4.2.9). This menu is also used to select the RS-232C interface, and specify the parameters such as baud rate and parity.

5.1.2 Wire Connection of RS-232C

The Electronic Load is shipped with the baud rate set to 115200, parity set to is None, and data length 8 bits, stop1 bit. For RS-232C interface, only TxD and RxD signals are used for data transfer. The RS-232C connector is a 9-pin D male connector. Following table shows you the RS-232C connector pins and signals.

Pin No.	Input/Output	Description
1	---	+5V
2	INPUT	RxD
3	OUTPUT	TxD
4	OUTPUT	DTR
5	---	GND
6	INPUT	DSR
7	OUTPUT	RTS
8	INPUT	CTS
9	---	+5V

The connection between the computer (IBM PC compatible) and the Electronic Load is illustrated below:

PIN	IBM PC	Electronic Load
1	DCD	No Connection
2	RX	
3	TX	
4	DTR	No Connection
5	GND	GND
6	DSR	No Connection
7	RTS	No Connection
8	CTS	No Connection
9	RI	No Connection

5.2 GPIB Capability of the Electronic Load

GPIB Capability	Response	Interface Functions
Talker/Listener	All electronic load functions are programmable over the GPIB. The electronic load can send and receive messages over the GPIB. Status information is sent using a serial poll.	AH1, SH1, T6, L4
Service Request	The electronic load will set the SRQ line true if there is an enabled service request condition.	SR1
Remote/Local	In local mode, the electronic load is controlled from the front panel but will also execute commands sent over the GPIB. The electronic load powers up in local mode and remains there until it receives a command over the GPIB. Once the electronic load is in remote mode, REMOTE will be shown on the front panel LCD, all front panel keys except LOCAL are disabled. Pressing LOCAL key on the front panel will return to local mode. Local can be disabled using local lockout, so only the controller or the power switch can return to local mode.	RL1

5.3 RS-232C in Remote Control

When you use RS-232C in remote control, you have to send the remote command **CONFigure : REMote ON** first to let control procedure enter into remote state, and then execute other command set. When control comes to an end, you have to send the command **CONFigure : REMote OFF** to let control procedure return to local operation mode.

The RS-232C control commands are same as those of GPIB. When the RS-232C command string comes to an end for sending, <nl> should be added. Its ASCII code is 0A hexadecimal (or 10 decimal).

6. Introduction to Programming

6.1 Basic Definition

GPIB statement includes instrument control and query commands. A command statement sends an instruction to the electronic load and query command request information from the electronic load.

Simple Command

A simple command statement consists of a command or keyword usually followed by a parameter or data:

LOAD ON
or LOAD:SHORT OFF

Compound Command

When two or more keywords are connected by colons (:), it creates a compound command statement. The last keyword usually is followed by a parameter or data:

CURRent:STATic:L1 3
or CONFigure:VOLTagE:RANGe H

Query Command

A simple query command consists of a keyword followed by a question mark:

MEASure:VOLTagE?
MEASure:CURRent?
or CHAN?

Forms of Keywords

Every keyword has two forms:

- | | |
|------------|--|
| Long-Form | In this form, the word is spelled out completely to identify its function. For instance, CURRENT, VOLTAGE, and MEASURE are long-form keywords. |
| Short-Form | In this form, the word contains only the first three or four letters of the long-form. For instance, CURR, VOLT, and MEAS are short-form keywords. |

In keyword definitions and diagrams, the short-form part of each keyword is emphasized in UPPER CASE letters to help you remember it. However, the electronic load will accept Volt, volt, voltage, VOLTAGE, volTAGE, etc. regardless to which form you apply. If the keyword is incomplete, for example, “VOL” or “curre”, it will not be recognized.

6.2 Numerical Data Formats

Chroma 63200 electronic load accepts the numerical data type listed in Table 2-1. Numeric data may be followed by a suffix to specify the dimension of the data. A suffix may be preceded by a multiplier. Chroma 63200 makes use of the suffixes listed in Table 2-2 and multipliers listed in Table 2-3.

Symbol	Description	Example
NR1	Digits with no decimal point. The decimal point is assumed to be to the right of the least-significant digit.	123, 0123
NR2	Digits with a decimal point.	123., 12.3, 0.123, .123
NR3	Digit with a decimal point and an exponent.	1.23E+3, 1.23E-3
NRf	Flexible decimal form that includes NR1 or NR2 or NR3.	123, 12.3, 1.23E+3
NRf+	Expanded decimal form that includes NRf and MIN, MAX. MIN and MAX are the minimum and maximum limit values for the parameter.	123, 12.3, 1.23E+3, MIN, MAX

Table 2-1 Numerical Data Type

Mode	Class	Preferred Suffix	Secondary Suffix	Referenced Unit
CC	Current	A		Ampere
CR	Resistance	OHM		Ohm
CV	Amplitude	V		Volt
CP	Power	W		Watt
ALL	Time	S		Second
ALL	Slew Rate	A/μS		Amperes/micro Second

Table 2-2 Suffix Elements

Multiplier	Mnemonic	Definition
1E6	MA	mega
1E3	K	kilo
1E-3	M	milli
1E-6	U	Micro
1E-9	N	Nano

Table 2-3 Suffix Multipliers

6.3 Character Data Formats

For command statements, the <NRf+> data format permits entry of required characters. For query statements, character strings may be returned in either of the forms shown in the following table. It depends on the length of the returned string.

Symbol	Character Form
Crđ	Character Response Data. They permit the return up to 12 characters.
aard	Arbitrary ASCII Response Data. They permits the return of undelimited 7-bit ASCII. This data type is an implied message terminator (refer to <i>Separators and Terminators</i>).

6.4 Separators and Terminators

In addition to keywords and parameters, GPIB program statements require the following:

Data Separators:

Data must be separated from the previous command keyword by a space. This is shown in examples as a space (CURR 3) and on diagrams by the letters *SP* inside a circle.

Keyword Separators:

Keywords (or headers) are separated by colon (:), semicolon (;), or both. For example:

- **LOAD:SHOR ON**
- **MEAS:CURR?;VOLT?**
- **CURR:STAT:L1 3;:VOLT:L1 5**

Program Line Separators:

A terminator to inform GPIB that it has reached the end of a statement. Normally, this is sent automatically by your GPIB programming statements. Termination also occurs with other terminator codes, such as EOI. In this manual, the terminator is assumed at the end of each example line of code. If it needs to be indicated, it is shown by the symbol <nl>, which indicates “new line” and represents the ASCII coded byte as 0A hexadecimal (or 10 decimal).

Traversing the Command Tree:

- The colon “:” separates keywords from each other which represents changes in branch level to the next lower one. For example:

CONF:VOLT:ON 5

CONF is a root-level command, **VOLT** is the first branch, and **ON** is the second branch. Each “:” moves the command interpretation downward to the next branch.

- The semicolon “;” allows you to combine command statements into one line. It returns the command interpretation to the previous colon.

For example: Combine the following two command statements:

RES:RISE 100 <nl> and

RES:L1 400 <nl>

which can be formed into one command line as follows:

RES:RISE 100;L1 400 <nl>

5. To return to the root-level form you can
 1. Enter a new-line character. This is symbolized as "<nl>" and can be linefeed "LF" or/and end-of-line "EOL". Or else,
 2. Enter a semicolon followed by a colon ";;".

Please refer to the following figure.

1. (root):VOLT:L1: 30<nl>
Starting a New Line to return to the Root.
2. (root):SPEC:VOLT:H 30;
:L 5;;
(root)RES:L1 400;
:RISE 1000;;

7. Language Dictionary

Commands for operating the 63200 Electronic Load remotely are grouped into subsystems. Each command belonging to the same subsystem is arranged in alphabetic order. A syntax chart of the subsystem that contains the commands in the same group is included. Subsystems are ordered alphabetically according to their names in the following sections.

7.1.1 Common Commands

Common commands defined by the IEEE488.2 standard are generic commands and queries. The first part of the language dictionary covers the commands. Each of them has a leading “*”.

Common Commands Syntax

*CLS	Clear status
*ESE <NR1>	Standard event status enable
*ESE?	Return standard event status enable
*ESR?	Return event status enable
*IDN?	Return instrument identification
*OPC	Enable “operation complete” bit in ESR
*OPC?	Return a “1” when operation complete
*RCL <NRf>	Recall instrument state
*RST	Reset
*SAV <NRf>	Save instrument state
*SRE <NR1>	Set service request enable register
*SRE?	Return service request enable register
*STB?	Return status byte

7.1.2 Common Command Dictionary

*CLS Clear Status Command

Description	This command clears the following actions: <ol style="list-style-type: none">1. Clear Questionable Status Event register2. Clear Standard Event Status Event register3. Clear Status Byte4. Clear the Error Queue
Syntax	*CLS
Parameter	None

*ESE Standard Event Status Enable Command/Query

Description	This command sets the condition of the Standard Event Status Enable register to determine which event the Standard Event Status Event register (see *ESR?) is allowed to set the ESB (Event Summary Bit) for the Status Byte register. A "1" in the bit position enables the corresponding event. All the events enabled by Standard Event Status Event register are logically ORed to cause the ESB (bit 5) of the Status Byte register to be set. See the descriptions of these registers in Chapter 8 <i>Status Reporting</i> .		
Syntax	*ESE <NRf>		
Parameter	0 to 255		
Example	*ESE 48 This command enables the CME and EXE events for the Standard Event Status Event register.		
Query Syntax	*ESE?		
Return Parameter	<NR1>		
Query Example	*ESE? This query returns the current setting for "Standard Event Status Enable".		

*ESR? Standard Event Status Register Query

Description	This query reads the Standard Event Status register. Reading the register clears it. See detailed explanation of this register in Chapter 8 <i>Status Reporting</i> .
-------------	---

Bit Configuration of Standard Event Status Event Register

Bit Position	7	6	5	4	3	2	1	0
Bit Name	0	0	CME	EXE	DDE	QYE	0	OPC
Bit Weight	128	64	32	16	8	4	2	1
CME = Command error				DDE = Device-dependent error				
EXE = Execution error				OPC = Operation complete				
QYE = Query error								

Query Syntax	*ESR?
Return Parameter	<NR1>
Query Example	*ESR? Return the Standard Event Status Register readings.
Return Example	48

*IDN? Identification Query

Description	This query requests the Electronic Frame (632xx) to identify itself.		
Query Syntax	*IDN?		
Return Parameter	<aard>		
Query Example	*IDN?		

String	Information
Chroma	Manufacture
632xx	Model name
12345678	Serial number
01.00	Firmware version

Return Example Chroma,63203,12345678,01.00

***OPC Operation Complete Command**

Description This command causes the interface to set the OPC bit (bit 0) of the Standard Event Status register when the Electronic Frame (6320) has completed all pending operations.

Syntax *OPC

Parameter None

***OPC? Operation Complete Query**

Description This query returns an ASCII "1" when all pending operations are completed.

Query Syntax *OPC?

Return Parameter <NR1>

Query Example 1

***RCL Recall Instrument State Command**

Description This command restores the electronic load to a state that was previously stored in memory with *SAV command to the specified location (see *SAV).

Syntax *RCL <NRf>

Parameter 1 to 100

Example *RCL 50

***RST Reset Command**

Description This command forces an ABORT, *CLS, LOAD:PROT:CLE command.

Syntax *RST

Parameter None

***SAV Save Command**

Description This command stores the present state of electronic load in a specified location in memory.

Syntax *SAV <NRf>

Parameter 1 to 100

Example *SAV 50

***SRE Service Request Enable Command/Query**

Description This command sets the condition of the Service Request Enable register to determine which event of the Status Byte register (see *STB) is allowed to set the MSS (Master Status Summary) bit. A "1" in the bit position enabled by bits is logically ORed to cause Bit 6 (the Master Summary Status Bit) of the Status Byte register to be set. See details regarding the Status Byte register in Chapter 8 *Status Reporting*.

Syntax *SRE <NRf>

Parameter 0 to 255
 Example *SRE 24 Enable the QUES and MAV bit of the Service Request Enable
 Query Syntax *SRE?
 Return Parameter <NR1>
 Query Example *SRE? Return the current setting for "Service Request Enable".

***STB? Read Status Byte Query**

Description This query reads the Status Byte register. Note that the MSS (Master Summary Status) bit is returned in Bit 6 instead of RQS bit. This bit indicates if the electronic load has at least one reason for requesting service. *STB? does not clear the Status Byte register. It is cleared only when subsequent action has cleared all bits set. Refer to Chapter 8 *Status Reporting* for more information about this register.

Bit Configuration of Standard Byte Register

Bit Position	7	6	5	4	3	2	1	0
Bit Name	0	MSS RQS	ESB	MAV	QUES	0	0	0
Bit Weight	128	64	32	16	8	4	2	1
MSS = master status summary			ESB = event status byte summary					
RQS = request for service			QUES = questionable status summary					
MAV = message available								

Query Syntax *STB?
 Return Parameter <NR1>
 Query Example *STB? Return the contents of "Status Byte".
 Return Example 24

7.2 Specific Commands

The 63200 series products are built-in with the following specific GPIB commands.

7.2.1 CONFigure Sub-system

CONFigure
:AUTO
:LOAD
:MODE
:DISPlay
:KEY
:REMOte
:SAVE
:SOUNd
:VOLTage
:LATCh
:RESet
:ON
:POLarity
:RANGe
:PROTection
:BATT
:VOLT
:Capacity
:TIME
:CROFFSET

CONFigure:AUTO:LOAD

Description	Set if the load module will do Auto Load On during power-on.	
Syntax	CONFigure:AUTO:LOAD <NR1 CHAR>	
Parameter	0 OFF, 1 ON	
Example	CONF:AUTO:LOAD ON	Start Auto Load On during power on.
	CONF:AUTO:LOAD OFF	Close Auto Load On during power on.
Query Syntax	CONFigure:AUTO:LOAD?	
Return Parameter	0 1	
Query Example	CONF: AUTO: LOAD?	
Return Example	0 (OFF)	Return the status of Auto Load On

CONFigure:AUTO:MODE

Description	Set type of Auto Load On as LOAD ON or PROGRAM ON.	
Syntax	CONFigure:AUTO:MODE <NR1 CHAR>	
Parameter	0 PROGRAM, 1 LOAD	
Example	CONF:AUTO:MODE LOAD	Set Auto Load On as general Load On.
	CONF:AUTO:MODE PROGRAM	Set Auto Load On as Program On.
Query Syntax	CONFigure:AUTO:MODE?	
Return Parameter	0 1	

Query Example	CONF:AUTO:MODE?	Return the execution type of Auto Load On.
Return Example	0 (PROGRAM)	

CONFigure:DISPlay

Description	Set measure display mode	
Command Syntax	CONFigure:DISPlay <NR1 CHAR>	
Parameter	0 RESISTANCE, 1 POWER	
Example	CONF:DISP POWER	Set the power display mode.
	CONF:DISP 0	Set resistance display mode.
Query Syntax	CONFigure:DISPlay?	
Return Parameter	0 1	
Query Example	CONF:DISP?	Return the execution type of display mode.
Return Example	1 (POWER)	

CONFigure:KEY

Description	Set enter data key mode	
Command Syntax	CONFigure:KEY <NR1 CHAR>	
Parameter	0 HOLD, 1 NEXT	
Example	CONF:KEY 1	Set enter data next mode.
	CONF:KEY HOLD	Set enter data hold mode.
Query Syntax	CONFigure:KEY?	
Return Parameter	0 1	
Query Example	CONF:KEY?	Return the execution type to enter data mode.
Return Example	1 (NEXT)	

CONFigure:REMOte

Description	Set the status of remote control (only effective in RS232C).	
Syntax	CONFigure:REMOte <NR1 CHAR>	
Parameter	0 OFF, 1 ON	
Example	CONF:REM ON	Set to remote control.

CONFigure:SAVE

Description	Save the setting of CONFigure for next power-on use.	
Syntax	CONFigure:SAVE	
Parameter	None	
Example	CONF:SAVE	

CONFigure:SOUNd

Description	Set the buzzer sound ON/OFF.	
Syntax	CONFigure:SOUNd <NR1 CHAR>	
Parameter	0 OFF, 1 ON	
Example	CONF:SOUN 0	
	CONF:SOUN OFF	
Query Syntax	CONFigure:SOUNd?	
Return Parameter	0 1	
Query Example	CONF:SOUN?	Return the control status of the buzzer sound.

Return Example : 0 (OFF)

CONFigure:VOLTage:LATCh

Description	Set the action type to Von.	
Syntax	CONFigure:VOLTage:LATCh <NR1 CHAR>	
Parameter	0 OFF, 1 ON	
Example	CONF:VOLT:LATC 1	Set the action type to Von as Latch.
	CONF:VOLT:LATC OFF	Set the action type to Von as Non Latch (Refer to the former part of this manual for detailed).
Query Syntax	CONFigure:VOLTage:LATCh?	
Return Parameter	0 1	
Query Example	CONF:VOLT: LATC?	Return the action type to Von.
Return Example	0 (OFF)	

CONFigure:VOLTage:LATCh:RESet

Description	Reset Von signal.
Syntax	CONFigure:VOLTage:LATCh:RESet
Parameter	None
Example	CONF:VOLT:LATC:RES

CONFigure:VOLTage:ON

Description	Set the voltage of sink current to on.	
Syntax	CONFigure:VOLTage:ON <NRf> [suffix]	
Parameter	For valid voltage range refer to respective specification.	
Example	CONF:VOLT:ON 1	Set Von=1V.
	CONF:VOLT:ON 300mV	Set Von=300mV.
Query Syntax	CONFigure:VOLTage:ON?	
Return Parameter	<NR2> [Unit=Voltage]	
Query Example	CONF:VOLT:ON?	Return the setting of Von value.
Return Example	3.5	

CONFigure:VOLTage:POLarity

Description	Set the voltage display polarity.	
Syntax	CONFigure:VOLTage:POLarity <NR1 CHAR>	
Parameter	0 MINUS, 1 PLUS,	
Example	CONF:VOLT:POL 0	Set voltage display to minus.
	CONF:VOLT:POL PLUS	Set voltage display to plus.
Query Syntax	CONFigure:VOLTage:POLarity?	
Return Parameter	0 1	
Query Example	CONF:VOLT:POL?	Return the display polarity.
Return Example	0 (MINUS)	

CONFigure:VOLTage:RANGe

Description	Set voltage measurement range in CC mode.
Syntax	CONFigure:VOLTage:RANGe <NR1 CHAR>
Parameter	0 L, 1 H

Example	CONF:VOLT:RANG 1	Set full-range to High.
	CONF:VOLT:RANG L	Set full-range to Low.
Query Syntax	CONF:VOLTage:RANGe?	
Return Parameter	0 1	
Query Example	CONF:VOLT:RANG?	Return Voltage range.
Return Example	1 (H)	

CONF:VOLTage:PROTection

Description	Set Load On protection.	
Syntax	CONF:VOLTage:PROTection <NR1 CHAR>	
Parameter	0 OFF, 1 ON	
Example	CONF:VOLT:PROT 1	Enable Load On protection.
	CONF:VOLT:PROT OFF	Disable Load On protection.
Query Syntax	CONF:VOLTage:PROTection?	
Return Parameter	0 1	
Query Example	CONF:VOLT:PROT?	Return Load On protection.
Return Example	1 (ON)	

CONF:VOLTage:BATT

Description	Set the battery discharge measurement.	
Syntax	CONF:VOLTage:BATT <NR1 CHAR>	
Parameter	0 OFF, 1 ON	
Example	CONF:BATT 1	Enable battery discharge.
	CONF:BATT OFF	Disable battery discharge.
Query Syntax	CONF:VOLTage:BATT?	
Return Parameter	0 1	
Query Example	CONF:BATT?	Return battery discharge state.
Return Example	1 (ON)	

CONF:VOLTage:BATT:VOLT

Description	Set the end voltage for battery discharge.	
Syntax	CONF:VOLTage:BATT:VOLT <NRf> [suffix]	
Parameter	For valid voltage range refer to respective specification.	
Example	CONF:BATT:VOLT 1	Set end voltage =1V.
	CONF:BATT:VOLT 500mV	Set end voltage =500mV.
Query Syntax	CONF:VOLTage:BATT:VOLT?	
Return Parameter	<NR2> [Unit=Voltage]	
Query Example	CONF:BATT:VOLT?	Return the end voltage of battery discharge.
Return Example	2.5	

CONF:VOLTage:BATT:Capacity?

Description	Query the battery capacity when doing battery discharge.	
Query Syntax	CONF:VOLTage:BATT:Capacity?	
Return Parameter	<NR2> [Unit=Ah]	
Query Example	CONF:BATT:Capacity?	Return the battery capacity.
Return Example	2.5	

CONFigure:BATT:TIME?

Description	Query the battery discharge duration.	
Query Syntax	CONFigure:BATT:TIME?	
Return Parameter	<NR2> [Unit=Second]	
Query Example	CONF:BATT:TIME?	Return the battery discharge duration.
Return Example	3	

CONFigure:CROFFSET

Description	Set compensation mechanism in CR mode.	
Syntax	CONFigure:CROFFSET <NR1 CHAR>	
Parameter	0 OFF, 1 ON	
Example	CONF:CROFFSET 1	Enable CR compensation.
	CONF:CROFFSET OFF	Disable CR compensation.
Query Syntax	CONFigure:CROFFSET?	
Return Parameter	0 1	
Query Example	CONF:CROFFSET?	Return CR compensation state.
Return Example	1 (ON)	

7.2.2 COMMunicate Sub-system

COMMunicate
:ADDRess
:GPIB
:RS485
:SERial
:BAUD
:BITS
:PARity
:SBITs

COMMunicate:ADDRess:GPIB

Description	Set the GPIB address	
Syntax	COMMunicate:ADDRess:GPIB <NR1>	
Parameter	1 – 30	
Example	COMM:ADDR:GPIB 16	
Query Syntax	COMMunicate:ADDRess:GPIB?	
Return Parameter	<NR1>	
Query Example	COMM:ADDR:GPIB?	Return GPIB address.
Return Example	16	

COMMunicate:ADDRess:RS485

Description	Set the RS485 address	
Syntax	COMMunicate:ADDRess:RS485 <NR1>	
Parameter	1 – 5	
Example	COMM:ADDR:RS485 5	
Query Syntax	COMMunicate:ADDRess:RS485?	
Return Parameter	<NR1>	
Query Example	COMM:ADDR:RS485?	Return RS485 address.
Return Example	5	

COMMunicate:SERial:BAUD

Description	Set the baud rate	
Syntax	COMMunicate:SERial:BAUD <NR1 CHAR>	
Parameter	0 BAUD_48, 1 BAUD_96, 2 BAUD_192, 3 BAUD_384, 4 BAUD_576, 5 BAUD_1152	
Example	COMM: SER:BAUD 5 COMM: SER:BAUD BAUD_1152	
Query Syntax	COMMunicate:SERial:BAUD?	
Return Parameter	0 1 2 3 4 5	
Query Example	COMM:SER:BAUD?	Return RS232 baud rate.
Return Example	5 (BAUD_1152)	

COMMunicate:SERial:BITS

Description	Set the number of the data bits	
Syntax	COMMunicate:SERial:BITS	
Parameter	0 BITS_8, 1 BITS_7 <NR1 CHAR>	
Example	COMM: SER:BITS 0	
	COMM: SER:BITS BITS_8	
Query Syntax	COMMunicate:SERial:BITS?	
Return Parameter	0 1	
Query Example	COMM:SER:BITS?	Return RS232 data bits parameter.
Return Example	0 (BITS_8)	

COMMunicate:SERial:PARity

Description	Set the parity scheme that is to be used for transmission	
Syntax	COMMunicate:SERial:PARity <NR1 CHAR>	
Parameter	0 NONE, 1 EVEN, 2 ODD	
Example	COMM: SER:PAR 0	
	COMM: SER:PAR NONE	
Query Syntax	COMMunicate:SERial:PARity?	
Return Parameter	0 1 2	
Query Example	COMM:SER:PAR?	Return the parity of RS232.
Return Example	0 (NONE)	

COMMunicate:SERial:SBITs

Description	Set the number of the stop bits	
Syntax	COMMunicate:SERial:SBITs <NR1 CHAR>	
Parameter	0 SBITS_2, 1 SBITS_1	
Example	COMM: SER:SBITS 0	
	COMM: SER:SBIT SBITS_2	
Query Syntax	COMMunicate:SERial:SBITs?	
Return Parameter	0 1	
Query Example	COMM:SER:SBIT?	Return RS232 stop bits parameter.
Return Example	0	

7.2.3 CURRENT Sub-system

CURRent

:STATic

:L1

:L2

:RISE

:FALL

:DYNamic

:L1

:L2

:RISE

:FALL

:T1

:T2

CURRent:STATic

Description Set A or B Static in CC mode for load.

Syntax CURRent:STATic <NR1 | CHAR>

Parameter 0 | B, 1 | A

Example CURR:STAT 0 Set CC Mode to Static B.

CURR:STAT A Set CC Mode to Static A.

CURRent:STATic:L1/L2

Description Set Static Load Current to constant current mode.

Syntax CURRent:STATic:L1 <NRf+>[suffix]

CURRent:STATic:L2 <NRf+>[suffix]

Parameter For valid value range refer to respective specification.

Example CURR:STAT:L1 20 Set Constant Current = 20A for Static Load L1.

CURR:STAT:L2 10 Set Constant Current = 10A for Static Load L2.

CURR:STAT:L1 MAX Set Constant Current = maximum value for Static Load L1.

CURR:STAT:L2 MIN Set Constant Current = minimum value for Static Load L2.

Query Syntax CURRent:STATic:L1?
CURRent:STATic:L2?
CURRent:STATic:L1? MAX
CURRent:STATic:L2? MIN

Return Parameter <NR2> [Unit=Ampere]

Query Example CURR:STAT:L1? Return the set current value of Static Load L1.

Return Example 3.12

CURRent:STATic:RISE/FALL

Description	Set the current slew rate for constant current static mode.	
Syntax	CURRent:STATic:RISE <NRf+>[suffix] CURRent:STATic:FALL <NRf+> [suffix]	
Parameter	For valid value range refer to respective specification.	
Example	CURR:STAT:RISE 2.5	Set rise slew rate to 2.5A/μS for static load.
	CURR:STAT:FALL 1A/μS	Set fall slew rate to 1A/μS for static load.
Query Syntax	CURRent:STATic:RISE? CURRent:STATic:FALL? CURRent:STATic:RISE? MAX CURRent:STATic:FALL? MIN	
Return Parameter	<NR2> [Unit=A/μS]	
Query Example	CURR:STAT:RISE?	Return the rise slew rate of static load.
Return Example	2.5	

CURRent:DYNamic:L1/L2

Description	Set Dynamic Load Current during constant current mode.	
Syntax	CURRent:DYNamic:L1 <NRf+>[suffix] CURRent:DYNamic:L2 <NRf+>[suffix]	
Parameter	For valid value range refer to respective specification.	
Example	CURR:DYN:L1 20	Set dynamic load parameter L1 = 20A.
	CURR:DYN:L2 10	Set dynamic load parameter L2 = 10A.
	CURR:DYN:L1 MAX	Set dynamic load parameter L1 = max. value
	CURR:DYN:L2 MIN	Set dynamic load parameter L2 = min. value.
Query Syntax	CURRent:DYNamic:L1? CURRent:DYNamic:L2? CURRent:DYNamic:L1? MAX CURRent:DYNamic:L2? MIN	
Return Parameter	<NR2> [Unit=Ampere]	
Query Example	CURR:DYN:L1?	Return the setting current in dynamic load L1.
Return Example	35.6	

CURRent:DYNamic:RISE/FALL

Description	Set current slew rate of constant current dynamic mode.	
Syntax	CURRent:DYNamic:RISE <NRf+>[suffix] CURRent:DYNamic:FALL <NRf+>[suffix]	
Parameter	For valid value range refer to respective specification.	
Example	CURR:DYN:RISE 2.5	Set rise slew rate to 2.5A/μS.
	CURR:DYN:FALL 1A/μS	Set fall slew rate to 1A/μS.
	CURR:DYN:RISE MAX	Set rise slew rate to the maximum

		CURR:DYN:FALL MIN	value of dynamic load. Set fall slew rate to the minimum value of dynamic load.
Query Syntax		CURRent:DYNamic:RISE? CURRent:DYNamic:FALL? CURRent:DYNamic:RISE? MAX CURRent:DYNamic:FALL? MIN	
Return Parameter		<NR2> [Unit=A/μS]	
Query Example		CURR:DYN:RISE?	Return the rise slew rate of dynamic load.
Return Example	2.5		

CURRent:DYNamic:T1/T2

Description		Set the duration parameter T1 or T2 for dynamic load.	
Syntax		CURRent:DYNamic:T1 <NRf+>[suffix] CURRent:DYNamic:T2 <NRf+>[suffix]	
Parameter		For valid value range refer to respective specification.	
Example		CURR:DYN:T1 10mS	Set dynamic duration T1 = 10mS.
		CURR:DYN:T2 2S	Set dynamic duration T2 = 2S.
		CURR:DYN:T1 MAX	Set dynamic duration T1 to the maximum value.
		CURR:DYN:T2 MIN	Set dynamic duration T2 to the minimum value.
Query Syntax		CURRent:DYNamic:T1? CURRent:DYNamic:T2? CURRent:DYNamic:T1? MAX CURRent:DYNamic:T2? MIN	
Return Parameter		<NR2> [Unit=Sec]	
Query Example		CURR:DYN:T1?	Return the dynamic duration parameter T1.
Return Example	0.15		

7.2.4 FETCh Sub-system

FETCh

:CURRent

:POWer

:RESistance

:VOLTAGE

:STATus

FETCh:CURRent?

Description	Return the current measured at the input of the load.
Query Syntax	FETCh:CURRent?
Return Parameter	<NR2> [Unit=Ampere]
Query Example	FETC:CURR?
Return Example	3.15

FETCh:POWer?

Description	Return the power measured at the input of the load.
Query Syntax	FETCh:POWer?
Return Parameter	<NR2> [Unit=Watt]
Query Example	FETC:POW?
Return Example	3.15

FETCh:RESistance?

Description	Return the resistance measured at the input of the load
Query Syntax	FETCh:RESistance?
Return Parameter	<NR2> [Unit=OHM]
Query Example	FETC:RSE?
Return Example	10.22

FETCh:VOLTage?

Description	Return the voltage measured at the input of the load.
Query Syntax	FETCh:VOLTage?
Return Parameter	<NR2> [Unit=Voltage]
Query Example	FETC:VOLT?
Return Example	8.12

FETCh:STATus?

Description	Return the load state.
Query Syntax	FETCh:STATus?
Return Parameter	<NR1>

Bit Position	15	14	13	12	11	10	9	8
Condition	×	PR	RS	FF	×	×	×	SP
Bit Weight	×	16384	8192	4096	×	×	×	256
Bit Position	7	6	5	4	3	2	1	0
Condition	PF	ST	LD	OT	RV	OP	OV	OC
Bit Weight	128	64	32	16	8	4	2	1

Query Example FETC:STAT?
Return Example 4

Read back the present status of the load.

7.2.5 LOAD Sub-system

LOAD
[:STATe]
:SHORT
[:STATe]
:KEY
:PROTection
:CLEAr
:SAVE

LOAD[:STATe]

Description	The LOAD command makes the electronic load active on or off.	
Syntax	LOAD[:STATe] <NR1 CHAR >	
Parameter	0 OFF, 1 ON	
Example	LOAD ON	Activate the electronic load.
	LOAD OFF	Inactivate the electronic load.
Query Syntax	LOAD[:STATe]?	
Return Parameter	0 1	
Query Example	LOAD?	Return if the electronic load is active.
Return Example	1 (ON)	

LOAD:SHORT[:STATe]

Description	Activate or inactivate short-circuited simulation.	
Syntax	LOAD:SHORT[:STATe] <NR1 CHAR >	
Example	LOAD:SHOR 1	Enable short-circuited simulation.
	LOAD:SHOR OFF	Disable short-circuited simulation.
Parameter	0 OFF, 1 ON	
Query Syntax	LOAD:SHORT[:STATe]?	
Return Parameter	0 1	
Query Example	LOAD:SHOR?	Return the short-circuit simulation state.
Return Example	1 (ON)	

LOAD:SHORT:KEY

Description	Set the short key mode in the electronic load.	
Syntax	LOAD:SHORT:KEY <NR1 CHAR >	
Parameter	0 HOLD, 1 TOGGLE	
Example	LOAD:SHOR:KEY TOGGLE	Set short key mode to Toggle.
	LOAD:SHOR:KEY 0	Set short key mode to Hold.
Query Syntax	LOAD:SHORT:KEY?	
Return Parameter	0 1	
Query Example	LOAD:SHOR:KEY?	Return the short key mode in the electronic load.
Return Example	1 (TOGGLE)	

LOAD:PROTection?

Description This command returns the status of the electronic load.
 Query Syntax LOAD:PROTection?
 Return Parameter <NR1>

Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Condition	0	0	0	0	0	0	0	0	0	0	0	OT	RV	OP	OV	OC
Bit Weight												16	8	4	2	1

Query Example LOAD:PROT? Return the status of the electronic load.
 Return Example 0

LOAD:PROTection:CLEar

Description This command resets status of the electronic load.
 Syntax LOAD:PROTection:CLEar
 Parameter For valid value range refer to respective specification.
 Example LOAD:PROT:CLE

LOAD:SAVE

Description This command saves the present state of electronic load as default.
 Syntax LOAD:SAVE
 Parameter None
 Example LOAD:SAVE

7.2.6 MEASure Sub-system

MEASure
:CURRent
:INPut
:POWer
:RESistance
:STATus
:VOLTage

MEASure:CURRent?

Description	Return the real time current measured at the input of the electronic load.
Query Syntax	MEASure:CURRent?
Return Parameter	<NR2> [Unit=Ampere]
Query Example	MEAS:CURR?
Return Example	3.15

MEASure:INPut

Description	Select the input port of the electronic load to measure voltage.
Syntax	MEASure:INPut <NR1 CHAR>
Parameter	0 LOAD, 1 UUT
Example	MEAS:INP UUT MEAS:INP LOAD
Query Syntax	MEASure:INPut? Return the input port that has been set.
Return Parameter	0 1
Query Example	MEAS:INP?
Return Example	0 (LOAD)

MEASure:RESistance?

Description	Return the real time resistance measured at the input of the electronic load.
Query Syntax	MEASure:RESistance?
Return Parameter	<NR2> [Unit=OHM]
Query Example	MEAS:RES?
Return Example	8.12

MEASure:STATus?

Description	Return the real time state of DC Load.
Query Syntax	MEASure:STATus?
Return Parameter	<NR1>

Bit Position	15	14	13	12	11	10	9	8
Condition	×	PR	RS	FF	×	×	×	SP
Bit Weight	×	16384	8192	4096	×	×	×	256
Bit Position	7	6	5	4	3	2	1	0
Condition	PF	ST	LD	OT	RV	OP	OV	OC
Bit Weight	128	64	32	16	8	4	2	1

Query Example MEAS:STAT? Return the real time state of load.
 Return Example 4

MEASure:POWer?

Description Return the real time power measured at the input of the electronic load.
 Query Syntax MEASure:POWer?
 Return Parameter <NR2> [Unit=Watt]
 Query Example MEAS:POW?
 Return Example 8.12

MEASure:VOLTAge?

Description Return the real time voltage measured at the input of the electronic load.
 Query Syntax MEASure:VOLTAge?
 Return Parameter <NR2> [Unit=Voltage]
 Query Example MEAS:VOLT?
 Return Example 8.12

7.2.7 MODE Sub-system

MODE

MODE

Description	This command sets operational modes of the electronic load.	
Syntax	MODE <NR1 CHAR>	
Parameter	0 CCL, 1 CCH, 2 CCDL, 3 CCDH, 4 CRL, 5 CRH, 6 CVL, 7 CVH, 8 CPL, 9 CPH, 10 CCEL, 11 CCEH.	
Example	MODE CPL	Set CP mode to low range
	MODE 5	Set CR mode to high range
Query Syntax	MODE?	Return the operational mode of the electronic load.
Return Parameter	<NR1>	
Query Example	MODE?	
Return Example	1 (CCH)	

7.2.8 POWer Sub-system

POWer

:L1

:L2

:RISE

:FALL

POWer

Description	Set A or B Static in CP mode for load.	
Syntax	POWer <NR1 CHAR>	
Parameter	0 B, 1 A	
Example	POW 0	Set CP mode to Static B.

POWer:L1/L2

Description	Set the Static Load Current of constant power mode.	
Syntax	POWer: L1 <NRf+>[suffix] POWer: L1 <NRf+>[suffix]	
Parameter	For valid value range refer to respective specification.	
Example	POW:L1 20	Set Constant Power = 20W for Static Load L1.
	POW:L2 10	Set Constant Power = 10W for Static Load L2.
	POW:L1 MAX	Set Constant Power = max. value for Static Load L1.
	POW:L2 MIN	Set Constant Power = min. value for Static Load L2.
Query Syntax	POWer:L1?	
	POWer:L2?	
	POWer:L1? MAX	
	POWer:L2? MIN	
Return Parameter	<NR2> [Unit=Watt]	
Query Example	POW:L1?	Return the set power of Static Load L1.
Return Example	3.12	

POWer:RISE/FALL

Description	Set current slew rate of constant power static mode.	
Syntax	POWer:RISE <NRf+>[suffix] POWer:FALL <NRf+>[suffix]	
Parameter	For valid value range refer to respective specification.	
Example	POW:RISE 2.5	Set rise slew rate to 2.5A/μS for static load.
	POW:FALL 1A/μS	Set fall slew rate to 1A/μS for static load.
Query Syntax	POWer:RISE?	
	POWer:FALL?	
	POWer:RISE? MAX	
	POWer:FALL? MIN	
Return Parameter	<NR2> [Unit=A/μS]	
Query Example	POW:RISE?	Return the rise slew rate of static load.
Return Example	2.5	

7.2.9 PROGram Sub-system

PROGram

:CHAIIn

:FILE

:KEY

:ONTime

:OFFTime

:PF

:DELaY

:TIME

:RUN

:SAVE

:SEQuence

:MODE

:SHORt

:DELaY

:TIME

PROGram:CHAIIn

Description	Set the type of program file in serial execution.
Syntax	PROGram:CHAIIn <NRf>
Parameter	0 to 10 (0 does not chain.)
Example	PROG:CHA 7
Query Syntax	PROGram:CHAIIn?
Return Parameter	<NR1>
Query Example	PROG:CHA?
Return Example	7

PROGram:FILE

Description	Set the program number.	
Syntax	PROG:FILE <NRf>	
Parameter	1 to 10	
Example	PROG:FILE 10	
Query Syntax	PROG:FILE?	Return the active program number.
Return Parameter	<NR1>	
Query Example	PROG:FILE?	
Return Example	10	

PROGram:KEY

Description	Set the next step of program manual sequence
Syntax	PROGram:KEY <CHAR>
Parameter	K0~K9 KU KD
Example	PROG:KEY KD

PROGram:ONTime

Description	Set the load on time of program file.
Syntax	PROGram:ONTime <NRf>[suffix]
Parameter	0~30 Sec
Example	PROG:ONT 10 PROG:ONT 100mS
Query Syntax	PROGram:ONTime?
Return Parameter	<NR2> [Unit=Sec]
Query Example	PROG:ONT?
Return Example	10

PROGram:OFFTime

Description	Set the load off time of program file
Syntax	PROGram:OFFTime <NRf>[suffix]
Parameter	0~30 Sec
Example	PROG:OFFT 20 PROG:OFFT 200mS
Query Syntax	PROGram:OFFTime?
Return Parameter	<NR2> [Unit=Sec]
Query Example	PROG:OFFT?
Return Example	0.2

PROGram:PF:DElAy

Description	Set the pass/fail measurement delay time of program file.
Syntax	PROGram:PF:DElAy <NRf>[suffix]
Parameter	0~60 Sec
Example	PROG:PF:DElAy 20 PROG:PF:DElAy 200mS
Query Syntax	PROGram:PF:DElAy?
Return Parameter	<NR2> [Unit=Sec]
Query Example	PROG:PF:DEL?
Return Example	0.2

PROGram:PF:TIME

Description	Set the pass/fail measurement time of program file
Syntax	PROGram:PF:TIME <NRf>[suffix]
Parameter	0~60 Sec
Example	PROG:PF:TIME 20 PROG:PF:TIME 200mS
Query Syntax	PROGram:PF:TIME?
Return Parameter	<NR2> [Unit=Sec]
Query Example	PROG:PF:TIME?
Return Example	0.2

PROGram:RUN

Description	Execute the program run according to the set program file.
Syntax	PROGram:RUN <NR1 CHAR>
Parameter	0 OFF, 1 ON
Example	PROG:RUN ON PROG:RUN 0
Query Syntax	PROGram:RUN?
Return Parameter	0 1
Query Example	PROG:RUN?
Return Example	0 (OFF)

PROGram:SAVE

Description	Save the program setting.
Syntax	PROGram:SAVE
Parameter	NONE
Example	PROG:SAVE

PROGram:SEQuence

Description	Set the program file sequence.
Syntax	PROGram:SEQuence <NRf>
Parameter	1 to 10
Example	PROG:SEQ 3
Query Syntax	PROGram:SEQuence?
Return Parameter	<NR1>
Query Example	PROG:SEQ?
Return Example	3

PROGram:SEQuence:MODE

Description	Set the sequence type.
Syntax	PROGram:SEQuence:MODE <NR1 CHAR>
Parameter	0 SKIP, 1 AUTO, 2 MANUAL
Example	PROG:SEQ:MODE SKIP PROG:SEQ:MODE AUTO PROG:SEQ:MODE MANUAL
Query Syntax	PROGram:SEQuence:MODE?
Return Parameter	0 1 2
Query Example	PROG:SEQ:MODE?
Return Example	1

PROGram:SEQuence:SHORt:DELay

Description	Set the short on delay time of program file.
Syntax	PROGram:SEQuence:SHORt:DELay <NRf>[suffix]
Parameter	0~60 Sec
Example	PROG:SEQ:SHOR:DELay 20 PROG:SEQ:SHOR:DELay 100mS
Query Syntax	PROGram:SEQuence:SHORt:DELay?

Return Parameter	<NR2> [Unit=Sec]
Query Example	PROG:SEQ:SHOR:DEL?
Return Example	0.1

PROG:SEQ:SHOR:TIME

Description	Set the program file short on time.
Syntax	PROG:SEQ:SHOR:TIME <NRf>[suffix]
Parameter	0~60 Sec
Example	PROG:SEQ:SHOR:TIME 20 PROG:SEQ:SHOR:TIME 200mS
Query Syntax	PROG:SEQ:SHOR:TIME?
Return Parameter	<NR2> [Unit=Sec]
Query Example	PROG:SEQ:SHOR:TIME?
Return Example	0.2

7.2.10 RESistance Sub-system

RESistance

:L1
:L2
:RISE
:FALL

RESistance

Description	Set A or B Static in CR mode for load.	
Syntax	RESistance <NR1 CHAR>	
Parameter	0 B, 1 A	
Example	RES 0	Set CR mode to Static B.

RESistance:L1/L2

Description	Set the static resistance level for constant resistance mode.	
Syntax	RESistance:L1 <NRf+>[suffix] RESistance:L2 <NRf+>[suffix]	
Parameter	For valid value range refer to respective specification.	
Example	RES:L1 20 OHM	Set constant resistance = 20 ohm for Load L1.
	RES:L2 10 OHM	Set constant resistance = 10 ohm for Load L2
	RES:L1 MAX	Set constant resistance = max.L1 value for Load L1.
	RES:L2 MIN	Set constant resistance = min. L2 value for Load L2.
Query Syntax	RESistance:L1? RESistance:L2? RESistance:L1? MAX RESistance:L2? MIN	
Return Parameter	<NR2> [Unit=OHM]	
Query Example	RES:L1?	Return the set resistance value of Load L1
Return Example	10	

RESistance:RISE/FALL

Description	Set resistive slew rate of constant resistance.	
Syntax	RESistance:RISE <NRf+>[suffix] RESistance:FALL <NRf+>[suffix]	
Parameter	For valid value range refer to respective specification.	
Example	RES:RISE 2.5	Set CR rise slew rate to 2.5A/μS.
	RES:FALL 1A/μS	Set CR fall slew rate to 1A/μS.
	RES:RISE MAX	Set CR rise slew rate to the max. programmable value.
	RES:FALL MIN	Set CR fall slew rate to the min. programmable value.

Query Syntax	RESistance:RISE?	
	RESistance:FALL?	
	RESistance:RISE? MAX	
	RESistance:FALL? MIN	
Return Parameter	<NR2> [Unit=OHM]	
Query Example	RES:RISE?	Return the CR rise slew rate.
Return Example	2.5	

7.2.11 SPECification Sub-system

SPECification

:C

:L

:H

[:PASS]

:TEST

:UNIT

SPECification:C/L/H

Description	Set the voltage (CC, CR, CP mode) or current (CV mode) specification.
Syntax	SPECification:H SPECification:L SPECification:C
Parameter	For valid value range refer to respective specification.
Example	SPEC:H <NRf+>[suffix] SPEC:L <NRf+>[suffix] SPEC:C <NRf+>[suffix]
Query Syntax	SPECification:H? SPECification:L? SPECification:C?
Query Example	SPEC:H?
Return Parameter	<NR2> [CC,CR,CP mode Unit=Voltage], [CV mode Unit=Current]
Return Example	4.75

SPECification[:PASS]?

Description	Request to refer all channels specifications for GO-NG result.
Query Syntax	SPECification?
Query Example	SPEC? Return all channels GO-NG result.
Return Parameter	0 1
Return Example	0 (NG), 1 (GO)

SPECification:TEST

Description	Start or close the specification test.
Syntax	SPECification:TEST <NR1 CHAR>
Parameter	0 OFF, 1 ON
Example	SPEC: TEST 1 SPEC: TEST OFF
Query Syntax	SPECification:TEST?
Query Example	SPEC:TEST?
Return Parameter	0 1
Return Example	1 (ON)

SPECification:UNIT

Description	Set the specific entry mode.
Syntax	SPECification:UNIT <NR1 CHAR>
Parameter	0 PERCENT, 1 VALUE,
Example	SPEC:UNIT 1 SPEC: UNIT PERCENT
Query Syntax	SPECification:UNIT?
Query Example	SPEC:UNIT?
Return Parameter	0 1
Return Example	0 (PERCENT)

7.2.12 STATus Sub-system

STATus
:QUESTionable
:CONDition
:ENABle
[:EVENT]
:NTRansition
:PTRansition

STATus:QUESTionable:CONDition

Description Real-time ("live") recording for Questionable data
 Query Syntax STATus:QUESTionable:CONDition?
 Return Parameter <NR1>
 Query Example STAT:QUES:COND? Return the channel status.
 Return Example 6

STATus:QUESTionable:ENABle

Description Mask the bits in the Event register that are allowed to be summed into the QUES bit of the Status Byte register.
 Syntax STATus:QUESTionable:ENABle
 Parameter

Bit Configuration of Questionable Status Register

Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Condition	0	0	0	0	0	0	0	0	0	0	0	OT	RV	OP	OV	OC
Bit Weight												16	8	4	2	1

Example STAT:QUES:ENAB 24
 Query Syntax STATus:QUESTionable:ENABle?
 Return Parameter <NR1>
 Query Example STAT:QUES:ENAB Return the setting of the Status Questionable Enable register.
 Return Example 24

STATus:QUESTionable[:EVENT]?

Description Record all Questionable conditions that have occurred since last time the register was read.
 Query Syntax STATus:QUESTionable:EVENT?
 Return Parameter <NR1>
 Query Example STAT:QUES:EVEN? Return the contents of the Questionable Event register.
 Return Example 24

STATus:QUEStionable:PTRansition/NTRansition

Description	Programmable filters determine what type of transition (0-to-1 or 1-to-0) in the Condition register will set the corresponding bit of the Event register.	
Syntax	STATus:QUEStionable:PTRansition <NRf> STATus:QUEStionable:NTRansition <NRf>	
Parameter	0 ~ 65535	
Example	STAT:QUES:PTR 4	Set OP(over power bit 2) to 0-to-1.
	STAT:QUES:NTR 4	Set OP(over power bit 2) to 1-to-0.
Query Syntax	STATus:QUEStionable:PTRansition? STATus:QUEStionable:NTRansition?	
Return Parameter	<NR1>	
Query Example	STAT:QUES:PTR?	Return the setting on the QUEStionable Ptransition/Ntransition.
Return Example	4	

7.2.13 VOLTage Sub-system

VOLTage
:CURRent
:L1
:L2
:MODE

VOLTage

Description	Set A or B Static in CV mode for load.
Syntax	VOLTage <NR1 CHAR>
Parameter	0 B, 1 A
Example	VOLT 0 Set CV mode to Static B.

VOLTage:CURRent

Description	Set the current limit for constant voltage mode.
Syntax	VOLTage:CURRent <NRf+>[suffix]
Parameter	For valid value range refer to respective specification.
Example	VOLT:CURR 3 Set loading current limit to 3A during constant voltage mode.
	VOLT:CURR MAX Set loading current limit to the max. value during constant voltage mode.
	VOLT:CURR MIN Set loading current limit to the min. value during constant voltage mode.
Query Syntax	VOLTage:CURRent?
Return Parameter	<NR2> [Unit=Ampere]
Query Example	VOLT:CURR?
Return Example	3

VOLTage:L1/L2

Description	Set voltage of static load during constant voltage mode.
Syntax	VOLTage:L1 <NRf+>[suffix] VOLTage:L2 <NRf+>[suffix]
Parameter	For valid value range refer to respective specification.
Example	VOLT:L1 8V Set the voltage of load L1 to 8V.
	VOLT:L2 24V Set the voltage of load L2 to 24V.
	VOLT:L1 MAX Set the voltage of load L1 to the max. value.
	VOLT:L2 MIN Set the voltage of load L2 to the min. value.
Query Syntax	VOLTage:L1? VOLTage:L2? VOLTage:L1? MAX VOLT:L2? MIN
Return Parameter	<NR2> [Unit=Voltage]
Query Example	VOLT:L1? Return the set voltage value of load L1.
Return Example	0

VOLTage:MODE

Description	Set the response speed of CV mode.
Syntax	VOLTage:MODE <NR1 CHAR>
Parameter	0 SLOW, 1 FAST
Example	VOLT: MODE 1 VOLT:MODE SLOW
Query Syntax	VOLTage:MODE?
Return Parameter	0 1
Query Example	VOLT:MODE?
Return Example	0 (SLOW)

7.2.14 SYSTem Sub-system

SYSTem
:WAVE
:PARallel
:DATA
:DISPlay
:MODE
:SLAVe
:CHANnel
:MODEl

SYSTem:WAVE

Description	Set the waveform source.
Syntax	SYSTem:WAVE <NR1 CHAR>
Parameter	0 INTERNAL, 1 EXTERNAL
Example	SYST:WAVE 1 SYST:WAVE INTERNAL
Query Syntax	SYSTem:WAVE?
Return Parameter	0 1
Query Example	SYST:WAVE?
Return Example	0

SYSTem:PARallel:DATA

Description	Set for the parallel data transfer.
Syntax	SYSTem:PARallel:DATA
Parameter	None

SYSTem:PARallel:DISPlay

Description	Set parallel mode for measured current display type.
Syntax	SYSTem:PARallel:DISPlay <NR1 CHAR>
Parameter	0 SOLE, 1 SUM
Example	SYST:PAR:DISP 1 SYST:PAR:DISP SOLE
Query Syntax	SYSTem:PARallel:DISPlay?
Return Parameter	0 1
Query Example	SYST:PAR:DISP?
Return Example	0

SYSTem:PARallel:MODE

Description	Set parallel mode.
Syntax	SYSTem:PARallel:MODE <NR1 CHAR>
Parameter	0 NONE, 1 MASTER, 2 SLAVE, 3 MSTSYNC
Example	SYST:PAR:MODE 0 SYST:PAR:MODE SLAVE
Query Syntax	SYSTem:PARallel:MODE?

Return Parameter 0 | 1 | 2 | 3
Query Example SYST:PAR:MODE?
Return Example 0

SYSTem:PARallel:SLAVe:CHANnel

Description Set parallel mode for slave channel.
Syntax SYSTem:PARallel:SLAVe:CHANnel <NR1>
Parameter 1~5
Example SYST:PAR:SLAV:CHAN 1
Query Syntax SYSTem:PARallel:SLAVe:CHANnel?
Return Parameter <NR1>
Query Example SYST:PAR:SLAV:CHAN?
Return Example 0

SYSTem:PARallel:SLAVe:MODEl

Description Set parallel for slave model.
Syntax SYSTem:PARallel:SLAVe:MODEl <NR1 | CHAR>
Parameter 0 | NONE
1 | M63201,
2 | M63202,
3 | M63203,
4 | M63204,
5 | M63206,
6 | M63208,
7 | M63205,
8 | M63207,
9 | M63209,
10 | M63210
Example SYST:PAR:SLAV:MODE 0
SYST:PAR:SLAV:MODE M63203
Query Syntax SYSTem:PARallel:SLAVe:MODEl?
Return Parameter 0~10
Query Example SYST:PAR:SLAV:MODE?
Return Example 0 (NONE)

8. Status Reporting

8.1 Introduction

This chapter covers the status data structure of Chroma 63200 series electronic load as shown in Figure 8-1(on the next page). The standard registers, such as the Event Status register group, the Output Queue, the Status Byte and Service Request Enable registers perform standard GPIB functions and are defined in IEEE-488.2 Standard Digital Interface for Programmable Instrumentation. Other status register groups implement the specific status reporting requirements for the electronic load.

8.2 Register Information in Common

■ *Condition register*

The condition register represents the present status of electronic load signals. Reading the condition register does not change the state of its bits. Only changes in electronic load conditions affect the contents of this register.

■ *PTR/NTR Filter, Event register*

The Event register captures changes in conditions corresponding to condition bits in a condition register, or to a specific condition in the electronic load. An event becomes true when the associated condition makes one of the following electronic load-defined transitions:

Positive TRansition (0 - to - 1)

Negative TRansition (1 - to - 0)

Positive or Negative TRansition (0-to-1 or 1-to-0)

The PTR/NTR filters determine what type of condition transitions set the bits in the Event register. Questionable Status allows transitions to be programmed. Standard Event Status register group uses an implied Rise (0-to-1) condition transition to set bits in the Event register. Reading an Event register clears the register (all bits set to zero).

■ *Enable register*

The Enable register can be programmed to enable which bit in the corresponding Event register is logically ORed into the Channel Summary bit.

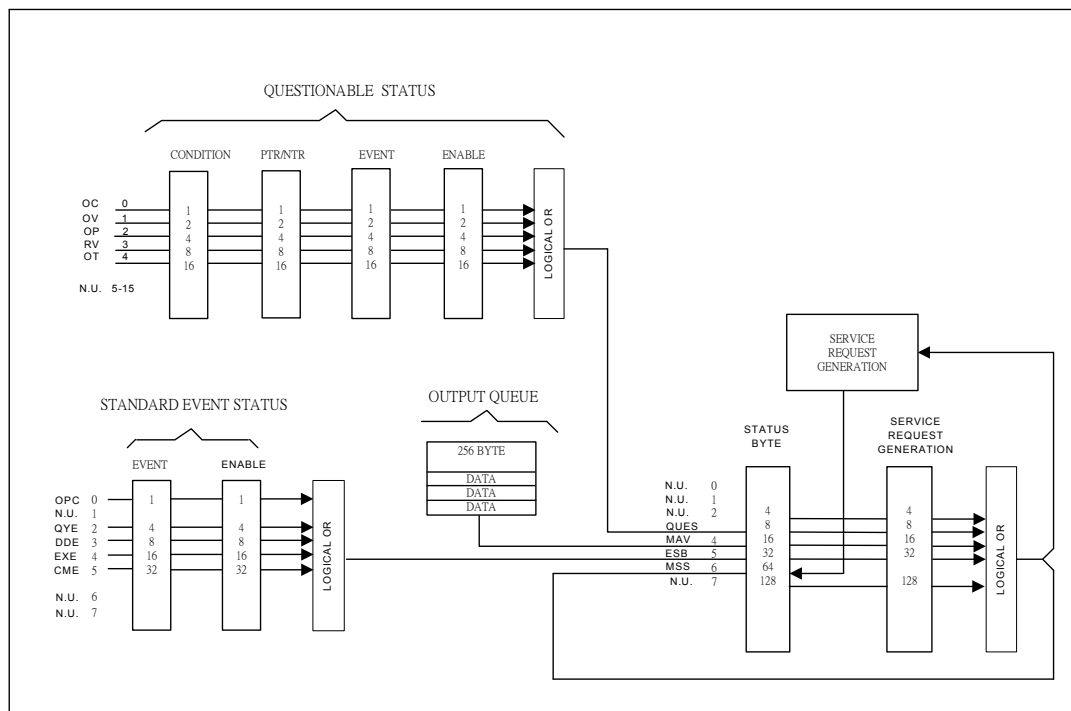


Figure 8-1 The Status Registers of Electronic Load

8.3 Questionable Status

- The Questionable Status registers inform you one or more questionable status conditions, which indicate certain errors or faults have occurred. Table 8-1 lists the questionable status conditions that are applied to the electronic load.
- When the corresponding bit of Questionable Status Condition register is set, it indicates the condition is true.
- Program the PTR/NTR filter to select the way of condition transition in the Questionable Status Condition register will be set in the Event registers.
- Reading of the Questionable Status Event register will reset it to zero.
- The Questionable status Enable register can be programmed to specify the questionable status event bit that is logically ORed to become Bit 3 (QUES bit) in the Status Byte register.

Mnemonic	Bit	Value	Meaning
OC	0	1	<i>Over current.</i> When an over current condition has occurred on a channel, Bit 0 is set and remains set until the over current condition is removed and LOAD:PROT:CLE is programmed.
OV	1	2	<i>Over voltage.</i> When an over voltage condition has occurred on a channel, Bit 1 is set and remains set until the over voltage condition is removed and LOAD:PROT:CLE is programmed.

OP	2	4	<i>Overpower.</i> An overpower condition has occurred on a channel, Bit 2 is set and remains set until the overpower condition is removed and LOAD:PROT:CLE is programmed.
RV	3	8	<i>Reverse voltage on input.</i> When a channel has a reverse voltage applied to it, Bit 3 is set. It remains set until the reverse voltage is removed and LOAD:PROT:CLE is programmed.
OT	4	16	<i>Over temperature.</i> When over temperature condition has occurred on a channel, Bit 4 is set and the channel is turned off. It remains set until the channel has cooled down well below the over temperature trip point and LOAD:PROT:CLE is programmed.
LD	5	32	<i>Load on.</i> Once any channel goes to “Load On” condition, the bit will be set until “Load On” disappears in all channels.
ST	6	64	<i>Short on.</i> Once any channel goes to “Short On” condition, the bit will be set until “Short On” disappears in all channels.
PF	7	128	<i>SPEC TEST pass/fail indicator.</i> Under “SPEC TEST On” condition, “1” represents SPEC TEST pass, “0” represents SPEC TEST fail.
SP	8	256	<i>SPEC TEST on.</i> As long as specification checking function is enabled, the bit will be set. Otherwise, the bit is reset.
FF	12	4096	<i>Fan fail.</i> “Fan Fail” means that the fan on any module is out of order. Once the condition happens, “1” will reflect on the bit. Users can program “LOAD:PROT:CLE” to clear the condition. If the fan doesn’t function well after programming the command, the bit will still be set in seconds.
RS	13	8192	<i>Remote Sensing Connection.</i> Once Vsense terminals are connected to UUT, the bit is set until the connection disjoined.
PR	14	16384	<i>Program run.</i> When a program is running, the bit is set and remains set until the program comes to an end.

Table 8-1 Bit Description of Questionable Status

8.4 Output Queue

- The Output Queue stores output messages until they are read from the electronic load.
- The Output Queue stores messages sequentially on a FIFO (First-In, First-Out) basis.
- When there is data in the queue, it sets it to 4 (MAV bit) in the Status Byte register.

8.5 Standard Event Status

- All programming errors that have occurred will set one or more of the error bits in the Standard Event Status register. Table 8-2 describes the standard events that apply to the electronic load.

- Reading of the Standard Event Status register will reset it to zero.
- The Standard Event Enable register can be programmed to specify the standard event bit that is logically ORed to become Bit 5 (ESB bit) in the Status Byte register.

Mnemonic	Bit	Value	Meaning
OPC	0	1	<i>Operation Complete.</i> This event bit generated is responding to the *OPC command. It indicates that the device has completed all selected pending operations.
QYE	2	4	<i>Query Error.</i> The output queue was read when no data were present or the data in the queue were lost.
DDE	3	8	<i>Device Dependent Error.</i> Memory was lost, or self-test failed.
EXE	4	16	<i>Execution Error.</i> A command parameter was outside the legal range or inconsistent with the electronic load's operation, or the command could not be executed due to some operating condition.
CME	5	32	<i>Command Error.</i> A syntax or semantic error has occurred, or the electronic load has received a <GET> within a program message.

Table 8-2 Bit Description of Standard Event Status

8.6 Status Byte Register

- The Status Byte register summarizes all of the status events from all status registers. Table 8-3 describes the status events that are applied to the electronic load.
- The Status Byte register can be read with a serial pull or *STB? query.
- The RQS bit is the only bit that is automatically cleared after a serial pull.
- When the Status Byte register is read with a *STB? query, Bit 6 of the Status Byte register will contain the MSS bit. The MSS bit indicates that the load has at least one reason for requesting service. *STB? does not affect the status byte.
- The Status Byte register is cleared by *CLS command.

Mnemonic	Bit	Value	Meaning
CSUM	2	4	<i>Channel Summary.</i> It indicates if an enabled channel event has occurred. It is affected by Channel Condition, Channel Event and Channel Summary Event registers.
QUES	3	8	<i>Questionable.</i> It indicates if an enabled questionable event has occurred.
MAV	4	16	<i>Message Available.</i> It indicates if the Output Queue contains data.
ESB	5	32	<i>Event Status Bit.</i> It indicates if an enabled standard event has occurred.
RQS/MSS	6	64	<i>Request Service/Master Summary Status.</i> During a serial pull, RQS is returned and cleared. For an *STB? query, MSS is returned without being cleared.

Table 8-3 Bit Description of Status Byte

8.7 Service Request Enable Register

- The Service Request Enable register can be programmed to specify the bit in the Status Byte register that will generate service requests.

9. INDEX

9.1 Command Summary

Common Commands

- *CLS
- *ESE <NR1>
- *ESE?
- *ESR?
- *IDN?
- *OPC
- *OPC?
- *RCL <NRf>
- *RST
- *SAV <NRf>
- *SRE <NR1>
- *SRE?
- *STB?

Instrument Commands

CONFigure

- :AUTO
- :LOAD
- :MODE
- :DISPlay
- :KEY
- :REMOte
- :SAVE
- :SOUNd
- :VOLTage
- :LATCh
- :RESet
- :ON
- :POLarity
- :RANGe
- :PROTection
- :BATT
- :VOLT
- :Capacity?
- :TIME?

CROFFSET

COMMunicate

:ADDRess
:GPIB
:RS485
:SERial
:BAUD
:BITS
:PARity
:SBITs

CURRent

:STATic
:L1
:L2
:RISE
:FALL
:DYNamic
:L1
:L2
:RISE
:FALL
:T1
:T2

FETCh

:CURRent
:POWER
:RESistance
:VOLTAGE
:STATus

LOAD

[:STATe]
:SHORT
[:STATe]
:KEY
:PROTection
:CLEar
:SAVE

MEASure

:CURRent
:INPut
:POWER
:RESistance
:STATus

:VOLTage

MODE

POWer

:L1

:L2

:RISE

:FALL

PROGram

:CHAIIn

:FILE

:KEY

:ONTime

:OFFTime

:PF

:DELay

:TIME

:RUN

:SAVE

:SEQuence

:MODE

:SHORT

:DLEay

:TIME

RESistance

:L1

:L2

:RISE

:FALL

SPECification

:C

:L

:H

[:PASS]

:TEST

:UNIT

STATus

:QUEStionable

:CONDition

:ENABle

[:EVENT]

:NTRansition

:PTRansition

VOLTage

:CURRent
:L1
:L2
:MODE

SYSTem

:WAVE
:PARallel
:DATA
:DISPlay
:MODE
:SLAVe
 :CHANnel
 :MODEl

9.2 Parallel Operation

