

712 RTD Calibrator

Compact, lightweight, and easy to carry



712 RTD Calibrator

- Measure temperature from RTD output
- Simulate RTD output
- Rosemount pulsed RTD transmitter compatible
- Operates with seven types of RTDs
- · Measure additional RTDs using Ohms measurement function
- Simulate additional RTDs using Ohms source function
- °F or °C selectable
- · Four shrouded banana jacks

General features

- Compact and lightweight
- Simple controls
- Clear, 5-digit, liquid crystal display
- Operating temperature: -10°C to 55°C
- Safety: CSA C22.2 No. 1010.1:1992
- Three-year warranty
- Included:
 - Fluke 712 RTD Calibrator
- Protective Yellow Holster with Flex-Stand"
- Test leads and alligator clips
- Single 9V alkaline battery
- Instructions (14 languages)

General specifications

Maximum voltage: 30 volts Non-operating temperature:

-40°C to 60°C

Operating temperature: -10°C to 55°C Relative humidity: 95% (10°C to 30°C); 75% (30°C to 40°C); 45% (40°C to 50° C); 35% (50° C to 55° C)

Operating altitude: 3,000m max

Shock: 1m drop test

Vibration: random, 2g, 5-500 Hz Safety: CSA C22.2 No. 1010.1:1992

EMC: EN50082-1:1992 and EN55022:1994 Class B

Size/weight: 187 mm Lx87 mm Wx 32 mm D (7.35 in L x 3.41 in W x 1.25 in D) 330g (12 oz)

Size/weight, (with holster and FlexStand ™): 201 mm L x 98 mm W x

52 mm D (7.93 in L x 3.86 in W x 2.06 in D) 600g (21 oz)

Power: 9V battery ANSI/NEDA 1604A or IEC 6LR619V alkaline

Battery Life: 4 to 20 hours, typical,

depending on functions used Warranty: Three years



Specifications (18° to 28°C, one year)

Function	Range	Resolution	Accuracy	Notes
Measure/simulate RTD	-200 to 800°C (Pt 100)	0.1°C, 0.1°F	0.33°C, 0.6°F (Pt 100)	Pt; 100 200 500 1000 (385); Pt 100 (392); Pt 100 (392) JIS; Ni 120 (672)
Measure/simulate resistance	15 Ω to 3200 Ω	0.1 Ω	0.1 Ω to 1 Ω	

Ordering Inform a tion

Fluke-712 RTD Calibrator

Need technical assistance? Call:

1-800-44-FLUKE

Toll-free in the U.S. (905) 890-7600 in Canada (425) 356-5500 other countries

For more information to be sent to you by fax, call 1-800-FLUKE-FAX in the U.S. and Canada. Or, visit our Website at http://www.fluke.com

Fluke. Keeping your world up and running.