



HP 75000 SERIES B

Installing an HP E1306A Command Module-Based System

Configuration Guide



Copyright© Hewlett-Packard Company, 1994



E1303-90000
E01094

Manual Part Number: E1303-90000
Microfiche Part Number: E1303-99000

Printed: October 1994 Edition 1
Printed in U.S.A. E1094

Printing History

The Printing History shown below lists all Editions and Updates of this manual and the printing date(s). The first printing of the manual is Edition 1. The Edition number increments by 1 whenever the manual is revised. Updates, which are issued between Editions, contain replacement pages to correct the current Edition of the manual. Updates are numbered sequentially starting with Update 1. When a new Edition is created, it contains all the Update information for the previous Edition. Each new Edition or Update also includes a revised copy of this printing history page. Many product updates or revisions do not require manual changes and, conversely, manual corrections may be done without accompanying product changes. Therefore, do not expect a one-to-one correspondence between product updates and manual updates.

Edition 1 (Part Number E1303-90000) October 1994

NOTICE

The information contained in this document is subject to change without notice. HEWLETT-PACKARD (HP) MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HP shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material. This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company. HP assumes no responsibility for the use or reliability of its software on equipment that is not furnished by HP.

Restricted Rights Legend

Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subdivision (b)(3)(ii) of the Rights in Technical Data and Computer Software clause at 52.227-7013. Hewlett-Packard Company; 3000 Hanover Street; Palo Alto, California 94304

 
Safety Symbols



Instruction manual symbol affixed to product. Indicates that the user must refer to the manual for specific Warning or Caution information to avoid personal injury or damage to the product.



Indicates the field wiring terminal that must be connected to earth ground before operating the equipment—protects against electrical shock in case of fault.



OR



Frame or chassis ground terminal—typically connects to the equipment's metal frame.



Alternating current (AC).



Direct current (DC).



Indicates hazardous voltages.

WARNING

Calls attention to a procedure, practice, or condition that could cause bodily injury or death.

CAUTION

Calls attention to a procedure, practice, or condition that could possibly cause damage to equipment or permanent loss of data.

WARNINGS

The following general safety precautions must be observed during all phases of operation, service, and repair of this product. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the product. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.

Ground the equipment: For Safety Class 1 equipment (equipment having a protective earth terminal), an uninterruptible safety earth ground must be provided from the mains power source to the product input wiring terminals or supplied power cable.

DO NOT operate the product in an explosive atmosphere or in the presence of flammable gases or fumes.

For continued protection against fire, replace the line fuse(s) only with fuse(s) of the same voltage and current rating and type. DO NOT use repaired fuses or short-circuited fuse holders.

Keep away from live circuits: Operating personnel must not remove equipment covers or shields. Procedures involving the removal of covers or shields are for use by service-trained personnel only. Under certain conditions, dangerous voltages may exist even with the equipment switched off. To avoid dangerous electrical shock, DO NOT perform procedures involving cover or shield removal unless you are qualified to do so.

DO NOT operate damaged equipment: Whenever it is possible that the safety protection features built into this product have been impaired, either through physical damage, excessive moisture, or any other reason, REMOVE POWER and do not use the product until safe operation can be verified by service-trained personnel. If necessary, return the product to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

DO NOT service or adjust alone: Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

Trademarks

Microsoft® is a U.S. registered trademark of Microsoft Corporation
Windows™ is a U.S. trademark of Microsoft Corporation
Windows NT™ is a U.S. trademark of Microsoft Corporation

MANUAL COMMENT SHEET

Installing an HP E1306A Command Module-Based System
 Manual Part Number E1303-90000
 Edition 1 (October 1994)

You can help us improve our manuals by sharing your comments and suggestions. Please complete this questionnaire after becoming familiar with the manual and then return it to us. In appreciation of your time, we will enter your name in a quarterly drawing for a Hewlett-Packard Palmtop Personal Computer.

Please describe the system controller, operating system, programming language, and plug-in modules you are using with your mainframe.

Please pencil-in one circle for each statement below as it applies to this documentation:

	←-----→				
	Disagree			Agree	
• The manual is well organized.	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
• Instructions are easy to understand.	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
• The manual is clearly written.	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
• Examples are clear and useful.	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
• The manual contains enough examples.	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
• Illustrations are clear and helpful.	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
• The manual meets my overall expectations.	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

Please write any comments and/or suggestions in the space provided below. Use additional pages if you wish. The more specific your comments, the more useful they are to us.

Your Name: _____

Company: _____

Address: _____

Job Title: _____

City/State: _____

Telephone: _____

Zip/Postal Code: _____

 
Today's Date: _____

Country: _____

Please fold and tape for mailing.

Cut Along This Line


Fold Along This Line First



HEWLETT-PACKARD COMPANY
VXI SYSTEMS DIVISION
Learning Products Department
P.O. box 301
LOVELAND, COLORADO 80539

POSTAGE WILL BE PAID BY ADDRESSEE

BUSINESS REPLY MAIL
FIRST CLASS / PERMIT NO. 37 / LOVELAND, COLORADO

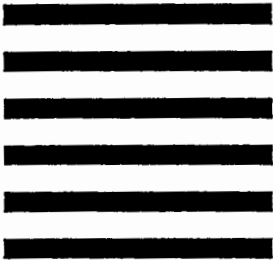

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES



Fold Along This Line Next

Tape — Do Not Staple

Contents

Warnings and Cautions	vii
Chapter 1 Installing the System	
Should I Use this Guide or HP VIC?	1-1
Installation Steps	1-2
Step 1: Install Correct Fuse for Your Line Voltage	1-3
Step 2: Rack Mount the Mainframe (Optional)	1-4
Step 3: Install Command Module	1-5
Step 4: Determine Instrument Configurations	1-6
Step 5: Set Plug-In Module Logical Addresses	1-9
Step 6: Install Plug-In Modules	1-12
Step 7: Connect Bus Cables (Multiple Module Instruments Only)	1-13
Step 8: Connect Interface Cables	1-14
Step 9: Apply AC Power	1-16
Step 10: Connect Standby DC Power (Optional)	1-17
Step 11: Download Device Drivers	1-18
Step 12: Verify Operation	1-19
Where to go Next	1-22
Chapter 2 Sending SCPI Commands	
Verification and Example Programs	2-1
Primary and Secondary HP-IB Addressing	2-1
Using Visual BASIC and HP SICL	2-2
What's Needed	2-2
How to Run a Program	2-2
Sending SCPI Commands and Receiving Data	2-2
Program Example	2-4
Using C/C++ and HP SICL	2-5
What's Needed	2-5
How to Run a Program	2-5
Sending SCPI Commands and Receiving Data	2-6
Program Example to Send and Read Unformatted Data	2-8
Example to Read Formatted Data	2-9
Example to Send and Read Formatted Data	2-9
Using C and the HP-IB Command Library	2-10
Supported C Programs	2-10
Executing a Program	2-10
Compiling a Program	2-11
Sending SCPI Commands	2-11
Receiving Data	2-11
Program Example	2-12
Using HP BASIC	2-13
Sending SCPI Commands	2-13

Receiving Data	2-13
Program Example	2-14
Using a Terminal	2-15
Connecting the Terminal	2-15
Sending SCPI Commands	2-15

Appendix A In Case Of Difficulty

No Communication Between Command Module And Computer	A-1
Start-Up Errors and Messages	A-2
Error: 1: Failed Device	A-2
Error: 3: Config warning. Device driver not found	A-3
Error 10: Config error 10. Insufficient system memory	A-3
Error 11: Config error 11. Invalid instrument address	A-3
Error 13: Config error 13. Logical address or IACK switch set wrong	A-3
System Errors and Messages	A-3
Reading the Error Queue	A-3
Error Types	A-4
System Error Message Listing	A-4

Appendix B Debugging VXI SCPI Programs

Introduction	B-1
Steps To Debug Programs	B-1
Step 1: Verify Instrument Communication	B-1
Step 2: Reset Each instrument at the Start of the Program	B-3
Step 3: Query the Instruments for Errors	B-4
Step 4: Query All Command Parameter Settings that are Set	B-4
Step 5: Check the Program is Trying to Enter the Same Amount	B-5
Step 6: Check the Instrument's Arm/Trigger Subsystem	B-5
Step 7: Check that Coupled Commands are Sent as a Group	B-6
Step 8: Check for Command Synchronization	B-6
Automating the Debugging Steps	B-7
RN13_RMB Program	B-7
Using other Program Languages	B-7
Using the Program	B-7
Program Description	B-8
Program Theory	B-9



Warnings and Cautions

WARNING **SHOCK HAZARD.** Only service-trained personnel who are aware of the hazards involved should install, remove, or configure the system. Before you perform any procedures in this guide, disconnect AC power and field wiring from the mainframe.

Caution Do not install modules into the mainframe with power applied. Doing so may damage the modules and the mainframe.

Caution **STATIC ELECTRICITY.** Static electricity is a major cause of component failure. To prevent damage to the electrical components in the mainframe and plug-in modules, observe anti-static techniques whenever installing a module into the mainframe.


Chapter 1

Installing the System


This chapter describes how to install the HP E1306A Command Module and B-size plug-in modules into a B-Size VME/VXI mainframe. The mainframe referenced in the examples is an HP E1302A. If you are using a different mainframe, refer to that mainframe's documentation for specific mainframe details.

Should I Use this Guide or HP VIC?

In an effort to make installation of your B-size VME/VXI system as easy as possible, we have included HP VIC (HP VME/VXI Installation Consultant) with the Command Module. HP VIC is a Microsoft® Windows 3.1™ compatible program that helps you configure and install your system. If you are using an external Personal Computer to control the system, we recommend that you configure your system using HP VIC instead of this Configuration Guide. For all other computers, use this Configuration Guide.

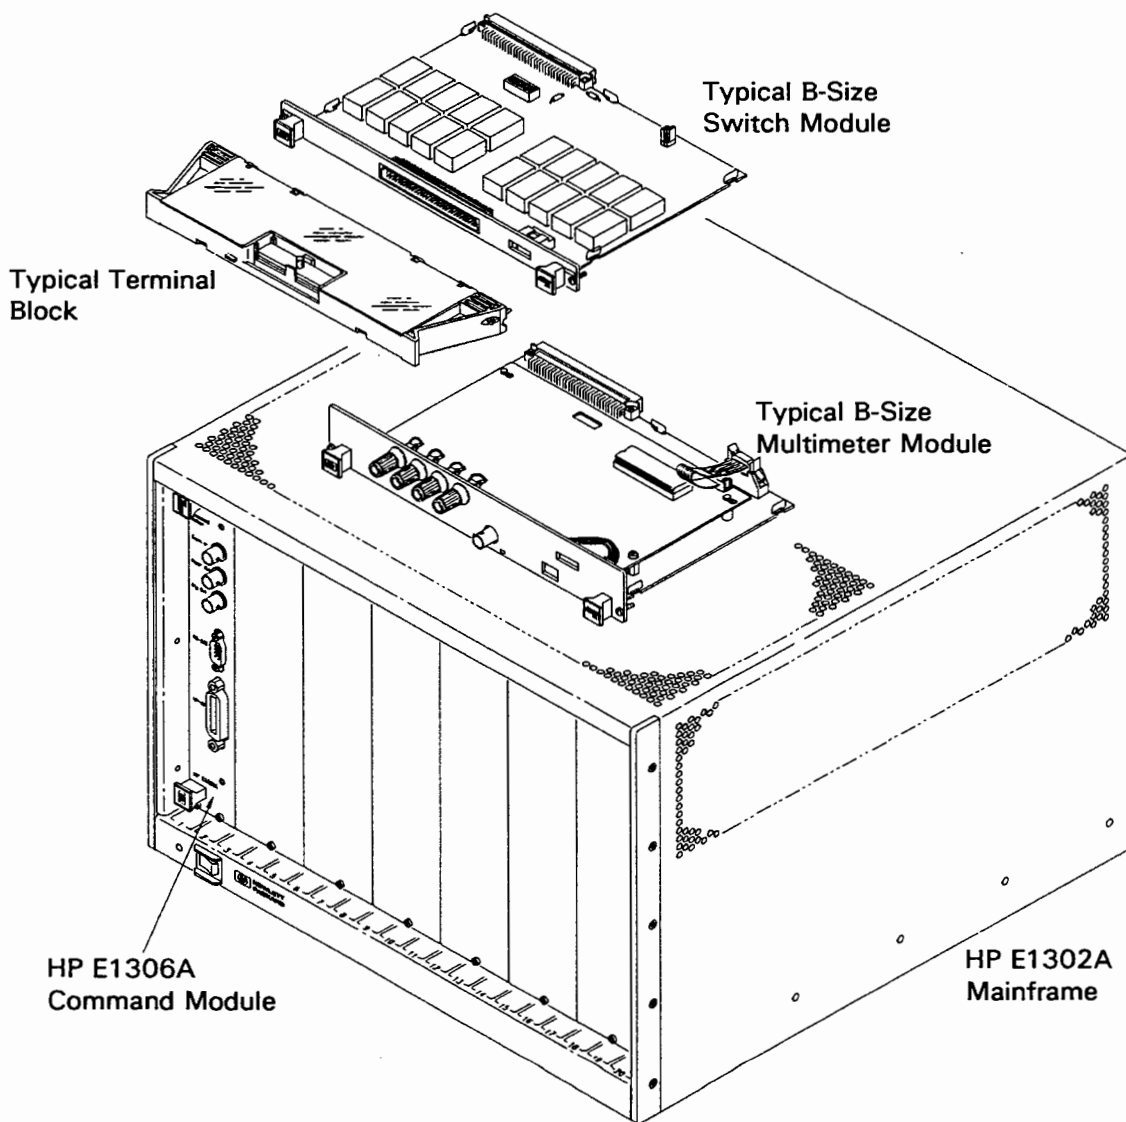


Installation Steps

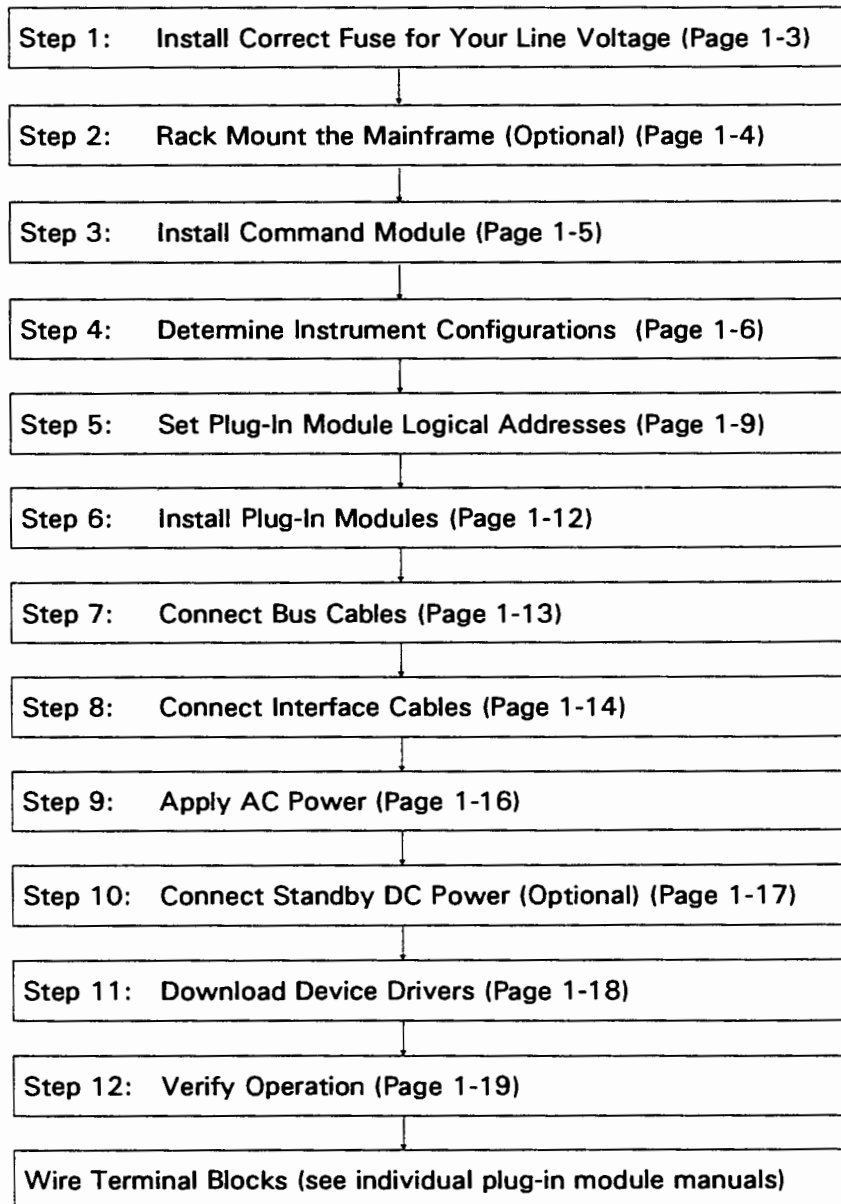




Step 1: Install Correct Fuse for Your Line Voltage

WARNING SHOCK HAZARD. Disconnect power from the mainframe before doing any installation steps.

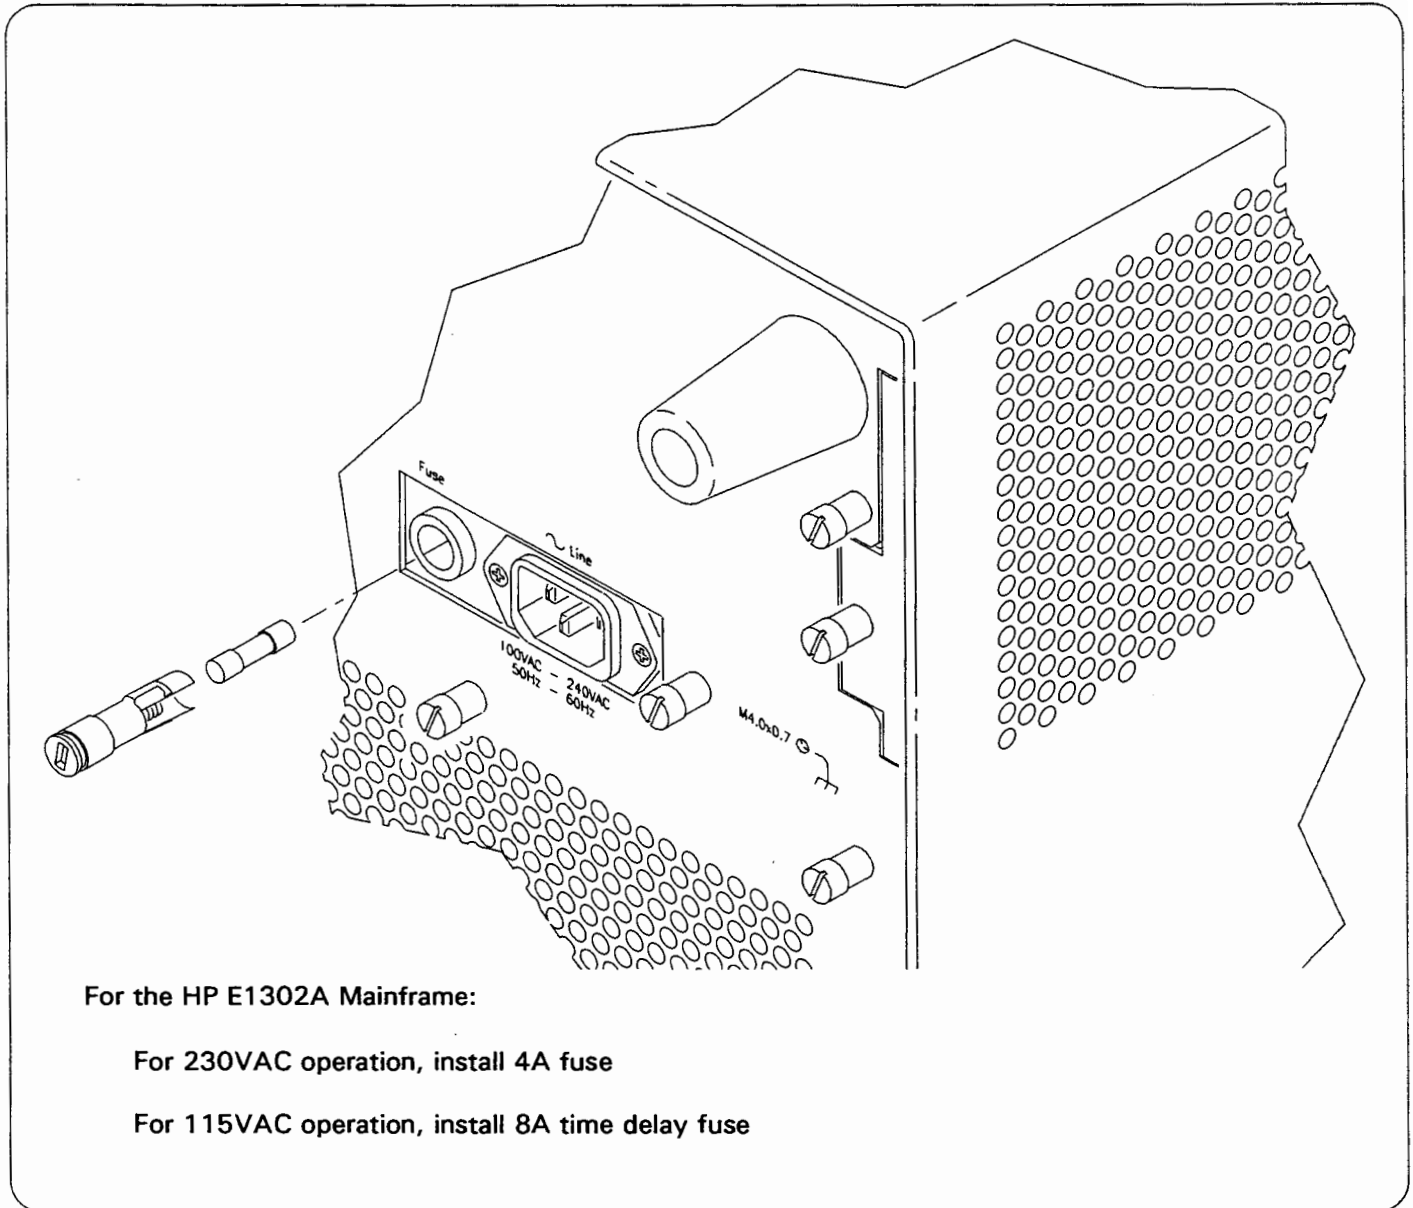

Step 2: Rack Mount the Mainframe (Optional)


Note Simplified rack mount installation steps are shown here. Refer to the instructions provided with the rack mount kits for specific details.

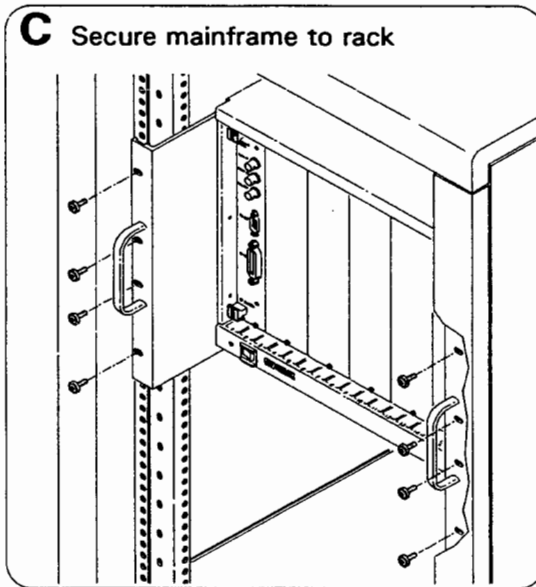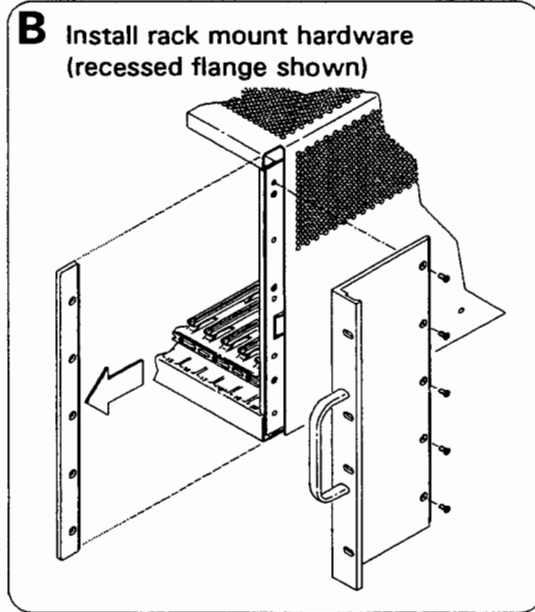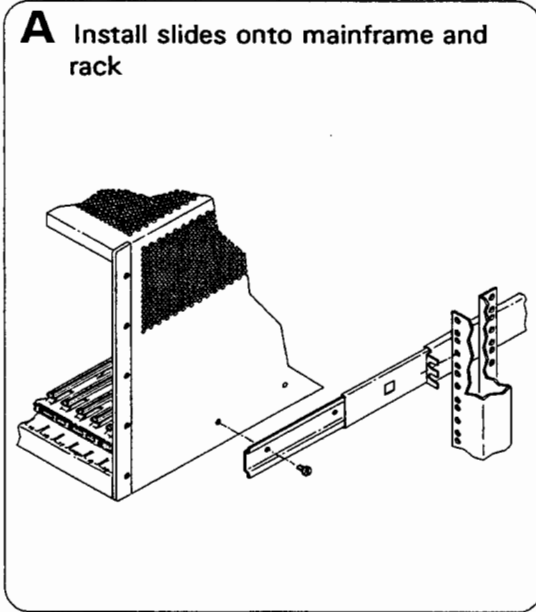

Step 3: Install Command Module

Warning **SHOCK HAZARD.** Secure Command Module tightly to the mainframe.

Caution To prevent equipment damage, **DISCONNECT** the mainframe's power before installing any module into the mainframe.

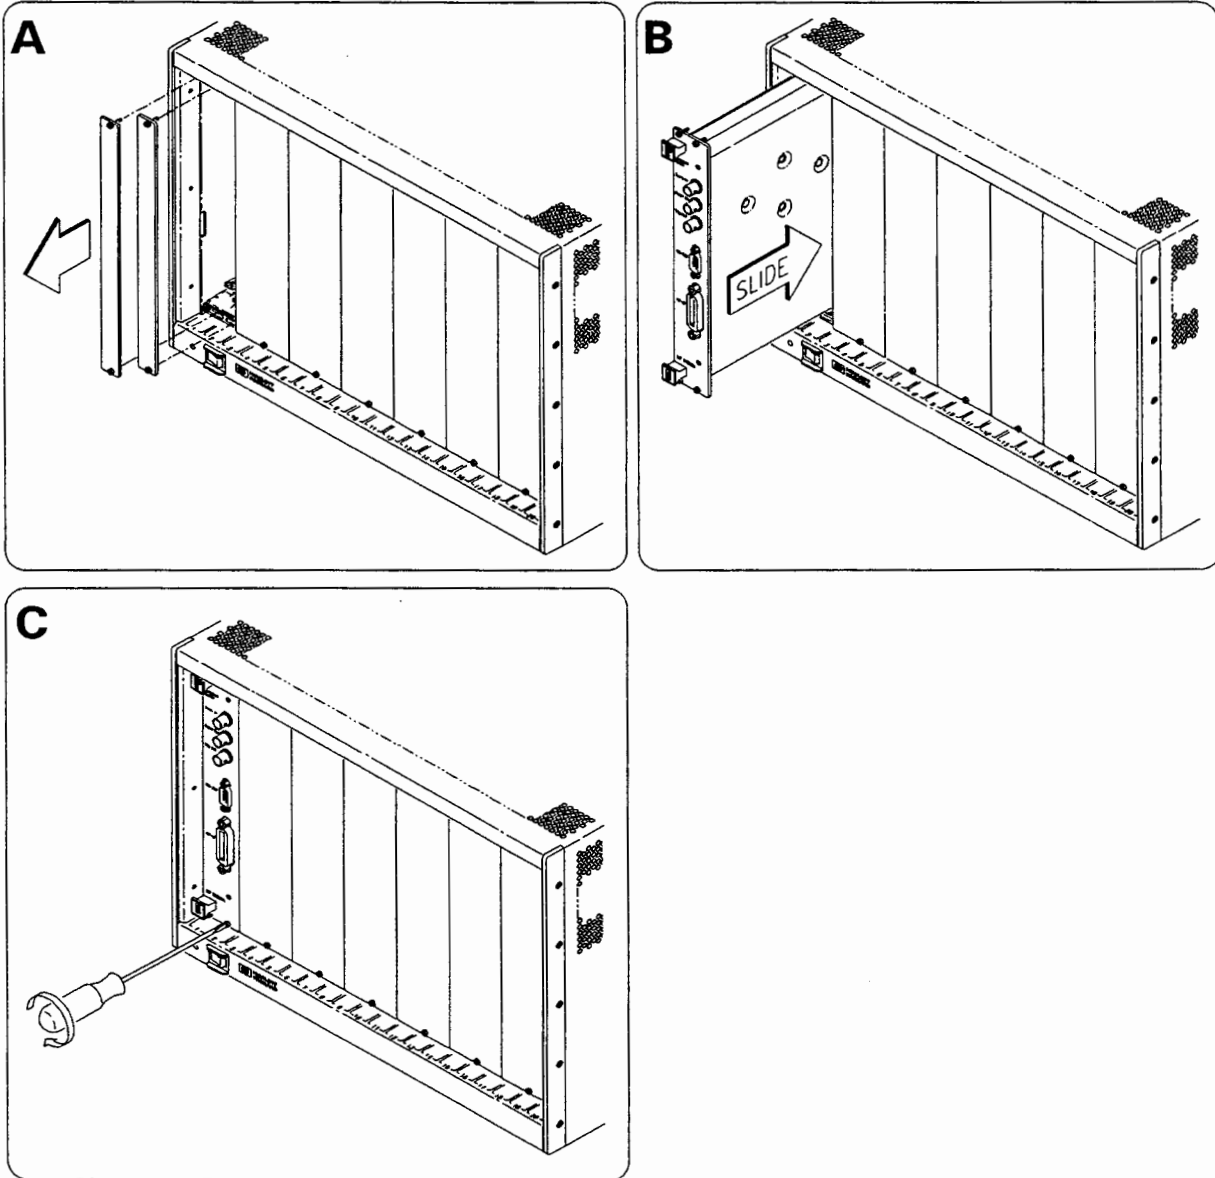

HP E1306A Command Module Installation Restrictions:

- The Command Module must be installed in slots 1 and 2.
- The Command Module must be the Resource Manager and there can be no other bus managers in the mainframe.
- The Command Module cannot be used in the HP E1300A/E1301A Mainframe.

Step 4: Determine Instrument Configurations

In this step, you determine the instrument configurations that best suit your application. You will create the instruments in the next step “Step 5: Set Plug-In Module Logical Addresses.”

A module can be set up as a single module instrument or as part of a multiple module instrument. For example, many HP plug-in modules can be configured as part of a multiple module Scanning Multimeter or Switchbox instrument. A single module instrument is programmed and operated independently from the other modules in the mainframe. Multiple module instruments are programmed and operated together as one instrument. You designate whether a module is a single module instrument or part of a multiple module instrument by how you set its logical address switch.

Single Module Instruments

To create a single module instrument, simply set the module’s logical address to a multiple of 8 (such as 8, 16, 24 ...256). In most cases, you can use the factory set logical address—provided no other modules are set to the same address. Single module instruments are recommended when you want to program the module independently and the module will have little or no interaction with other switching modules. Figure 1-1 is a block diagram showing four single module instruments and their logical addresses.

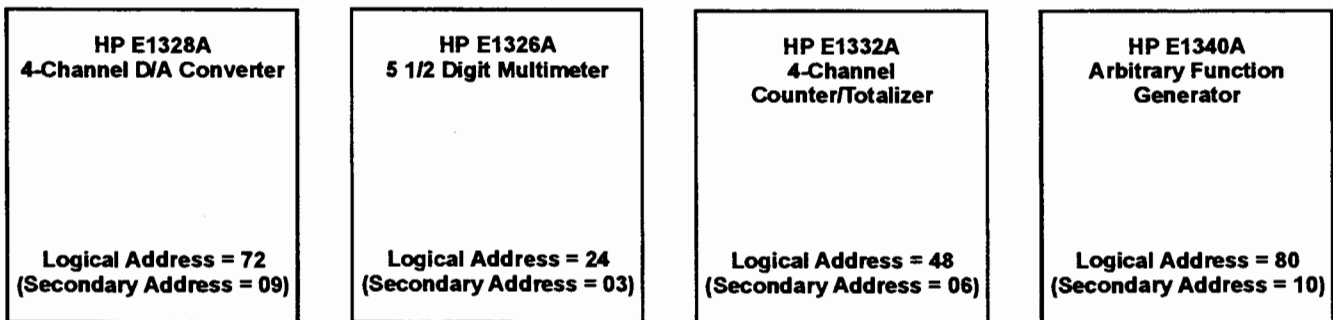


Figure 1-1. Single Module Instruments Block Diagram

Notice that each instrument has an HP-IB* secondary address which is its logical address divided by eight (for example, $72/8 = 09$). This secondary address is used when programming the instruments.

*HP-IB is Hewlett-Packard’s implementation of IEEE Standard 488.1-1978 (GP-IB).

Scanning Multimeter Instrument

The Scanning Multimeter instrument consists of an HP E1326B Multimeter and one or more multiplexer modules. In this configuration, the multiplexer modules scan measurement channels and feed the signal through the analog bus to the multimeter where the measurements take place. Programming is simplified because one command controls both the measurement type and the channels to be scanned. The Scanning Multimeter configuration is recommended when:

- Using the multimeter to make measurements on a series of channels (scanned channels).
- The fastest execution speed for scanned measurements is needed.
- Only one channel closure at a time is needed.

To create a Scanning Multimeter instrument, you set the multimeter module's logical address to a multiple of eight and assign the multiplexer modules successive logical addresses. You then connect the Analog Bus cables between all modules (this is shown in detail later in Step 7).

For example, as shown in Figure 1-2, if the multimeter's logical address is 24, the multiplexers would be 25, 26, and so on. In this example, the Scanning Multimeter will be programmed at HP-IB secondary address 03. This address is derived by dividing the multimeter's logical address by eight ($24/8 = 03$).

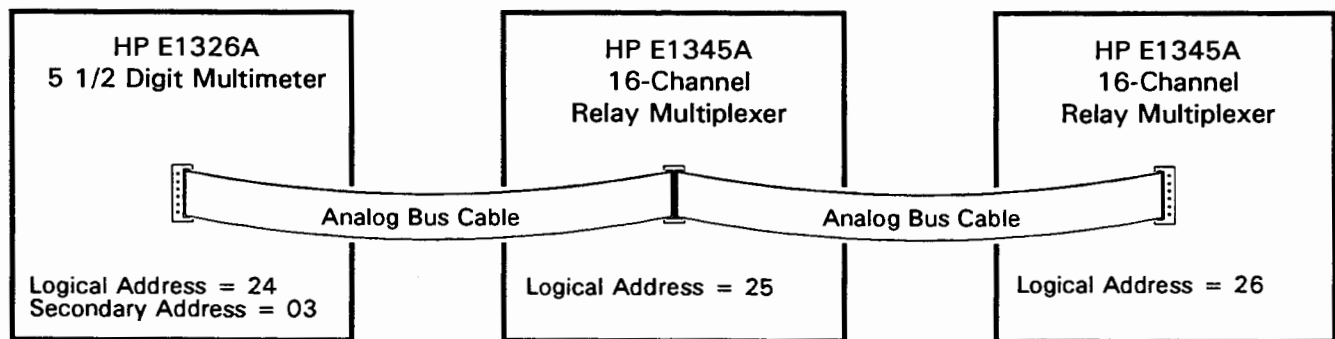


Figure 1-2. Scanning Multimeter Instrument Block Diagram

These multiplexer modules can be part of a Scanning Multimeter:

- E1343A 16-Channel High Voltage Multiplexer
- E1345A 16-Channel Relay Multiplexer
- E1346A 48-Channel Single Ended Relay Multiplexer
- E1347A 16-Channel Thermocouple Relay Multiplexer
- E1351A 16-Channel FET Multiplexer
- E1352A 32-Channel Single-Ended FET Multiplexer
- E1353A 16-Channel Thermocouple FET Multiplexer
- E1355A 8-Channel 120Ω Strain Relay Multiplexer
- E1356A 8-Channel 350Ω Strain Relay Multiplexer
- E1357A 8-Channel 120Ω Strain FET Multiplexer
- E1358A 8-Channel 350Ω Strain FET Multiplexer

Switchbox Instrument

The Switchbox instrument is composed of one or more switch modules. The single module Switchbox behaves as an independent instrument as described earlier. When using the multiple module Switchbox, all switch modules are programmed together and behave as if they are one instrument. The multiple module Switchbox configuration is recommended when you need to:

- Simplify the programming of multiple switch modules.
- Group multiplexers together to create a larger multiplexer.
- Make scanned measurements but are not using the HP E1326B Multimeter (if you are using the HP E1326B, use the Scanning Multimeter configuration).
- Close channels on more than one module simultaneously.

To create a multiple module Switchbox, set one switch module's logical address to a multiple of eight and assign the other switch modules successive logical addresses. If applicable, you then connect the Analog Bus cables between all modules (this is shown in detail later in Step 7).

Figure 1-3 is a block diagram example of a Switchbox instrument containing three multiplexers. In this example, one multiplexer has a logical address of 112, the other multiplexers have successive logical addresses of 113 and 114. The multiplexers are linked together using the Analog Bus to form a larger (48-channel) multiplexer. In this example, the Switchbox will be programmed at HP-IB secondary address 14. This address is derived by dividing the first multiplexer's logical address by eight ($112/8 = 14$).

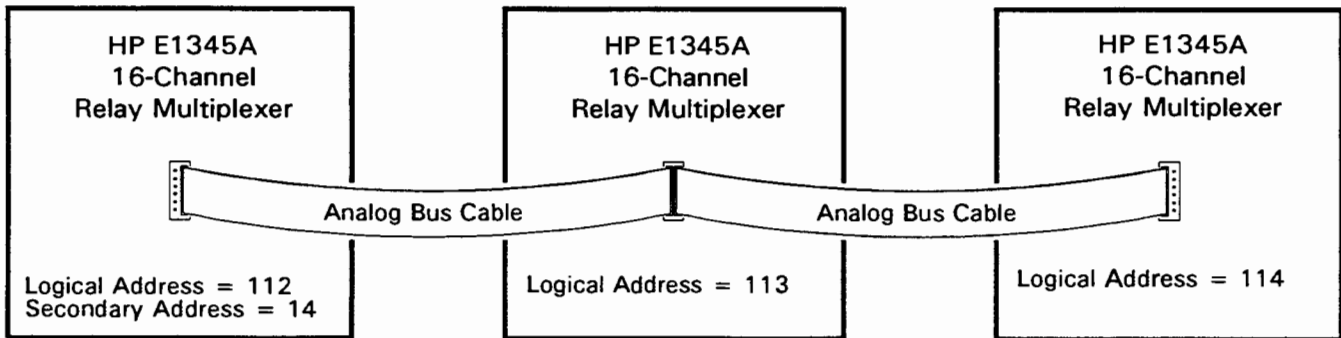


Figure 1-3. Switchbox Instrument Block Diagram

These modules can be used to form a switchbox:

E1343A 16-Ch. High Voltage Multiplexer	E1357A 8-Ch. 120W Strain FET Multiplexer
E1344A 16-Ch Thermocouple High Volt Multiplexer	E1358A 8-Ch. 350W Strain FET Multiplexer
E1345A 16-Ch. Relay Multiplexer	E1361A 4 x 4 Relay Matrix
E1346A 48-Ch. Single Ended Relay Multiplexer	E1364A 16-Ch. Form C Switch
E1347A 16-Ch. Thermocouple Relay Multiplexer	E1366A 50W RF Multiplexer (2 x 4:1)
E1351A 16-Ch. FET Multiplexer	E1367A 75W RF Multiplexer (2 x 4:1)
E1352A 32-Ch. Single-Ended FET Multiplexer	E1368A 18 GHz Microwave Switch
E1353A 16-Ch. Thermocouple FET Multiplexer	E1369A Microwave Switch Driver
E1355A 8-Ch. 120W Strain Relay Multiplexer	E1370A Switch Microwave/Attenuator Driver
E1356A 8-Ch. 350W Strain Relay Multiplexer	

Step 5: Set Plug-In Module Logical Addresses

As shown in Figure 1-4, a logical address switch contains eight individual switches. To determine the logical address, add together the decimal values of the switches that are set (position 1 = set, 0 = not set). For example, in Figure 1-4, switches 4, 5, and 6 are set, the other switches are not set. The logical address is the sum of the decimal values of the set switches: $16 + 32 + 64 = 112$.


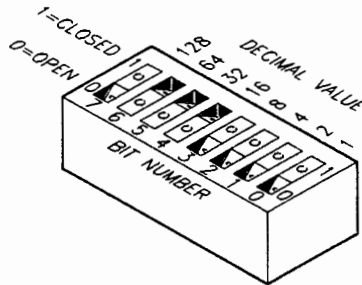


Figure 1-4. Logical Address Switch


Guidelines for Setting Logical Addresses

- Each plug-in module must have a unique logical address. If you have modules with the same factory-set logical address, you must change some logical addresses so that each module has a different address.
- Each instrument, whether single or multiple module, must have one module assigned as an **instrument identifier**. The instrument identifier is the module with its logical address set to a multiple of 8, such as 8, 16, or 24. An instrument's **secondary address** (used to program the module from HP-IB) is derived by dividing the instrument identifier by 8. For example, a logical address of 24 is a secondary address of 03.
- Examples showing the settings for a single module instrument, a multiple module Switchbox instrument, and a Scanning Multimeter instrument are shown on the following pages.
- A plug-in module with a logical address that is not a multiple of 8, or that is not part of a Scanning Multimeter or Switchbox instrument, is an unassigned module. Such modules must be programmed at the register level, rather than with SCPI commands.
- Refer to the individual plug-in module manuals for logical address switch locations and the types of switches used (slide, rocker, etc.)


Locate and Set the Logical Address Switch on all Modules:

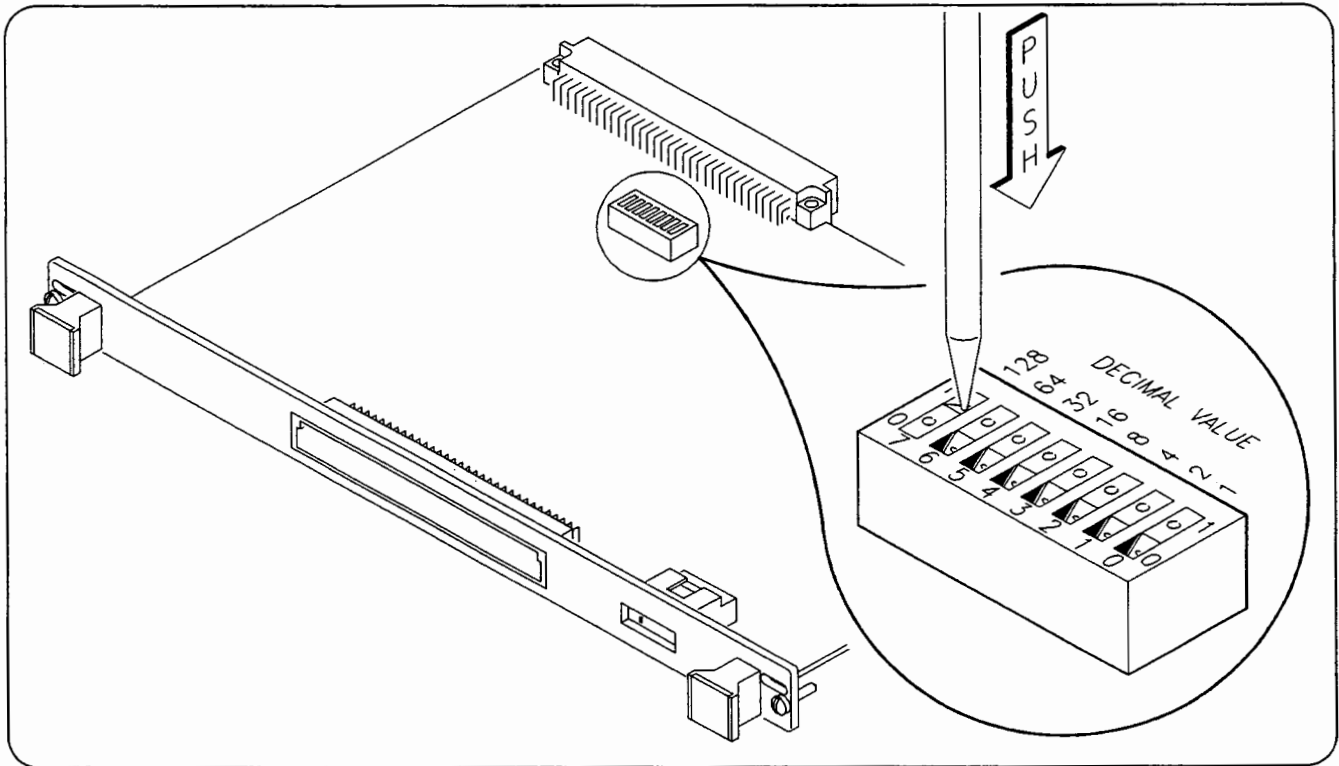


Example 1-1. Single Module Instruments:

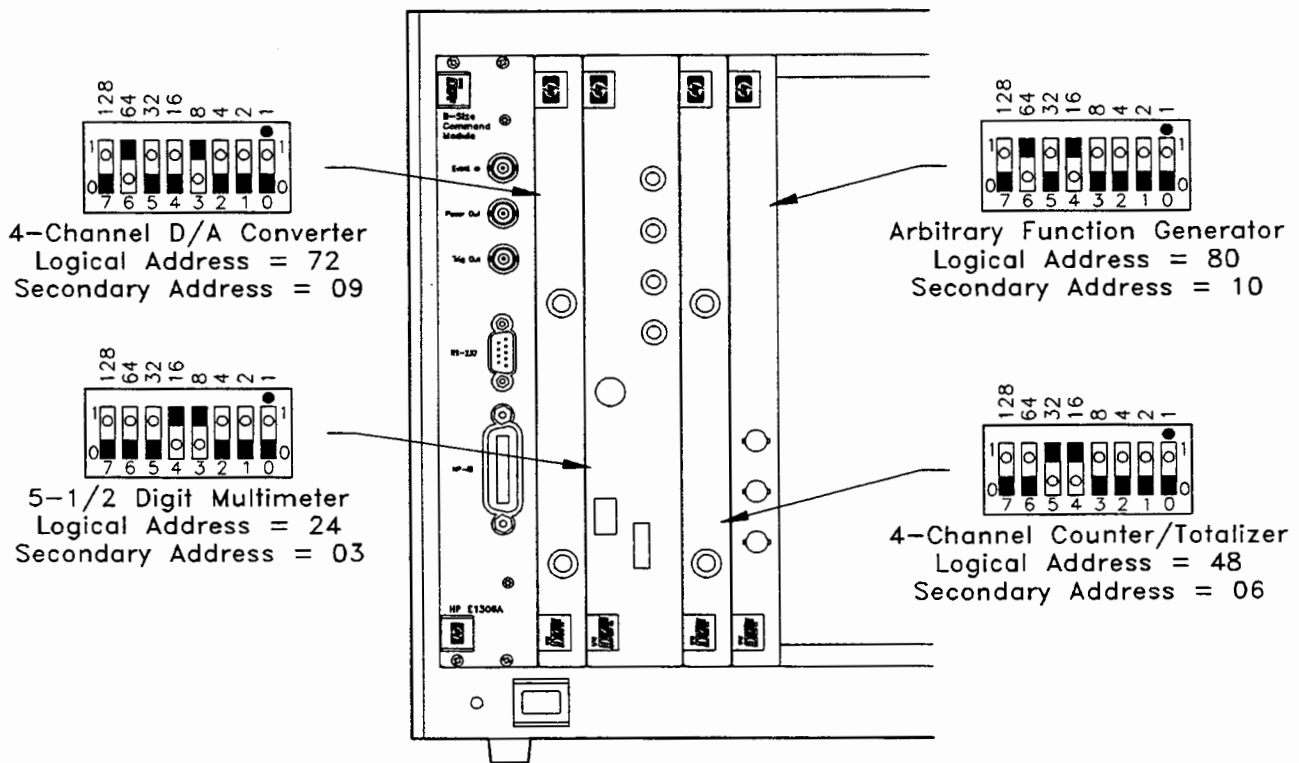

Example 1-2. Scanning Multimeter Instrument:

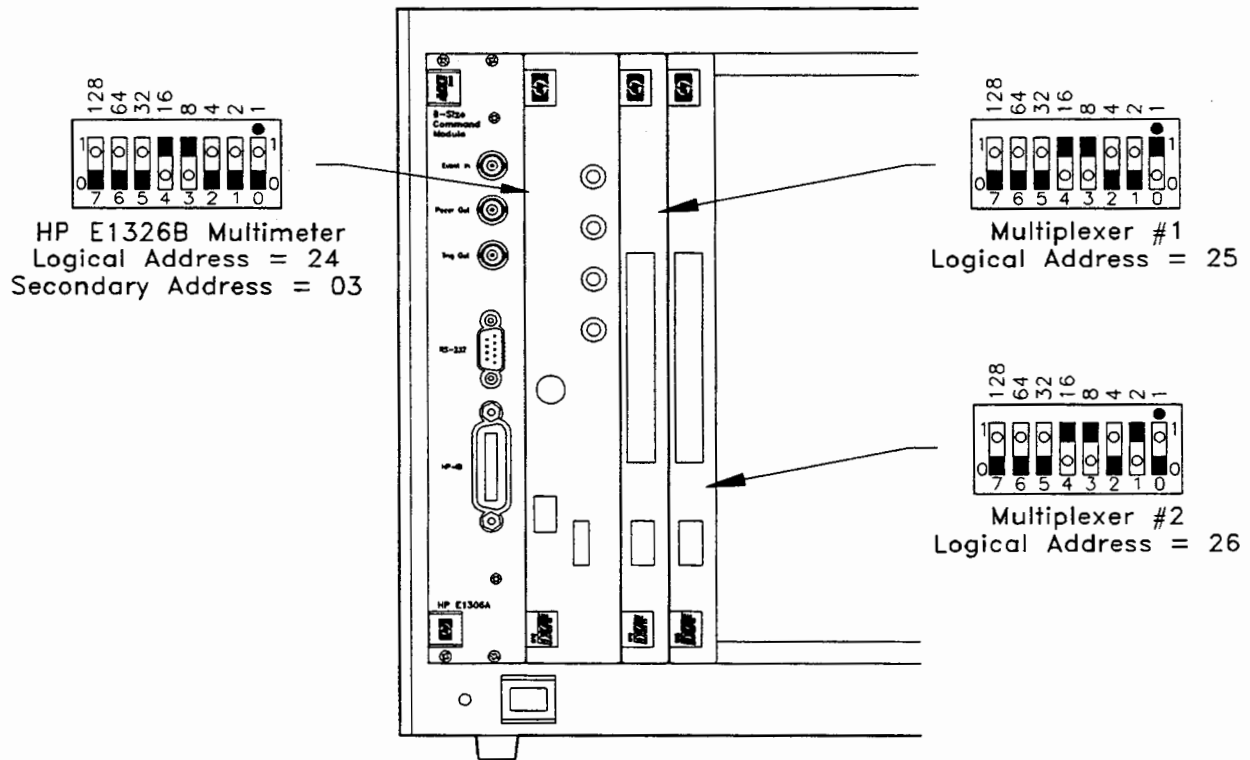





Example 1-3. Multiple Module Switchbox Instrument:

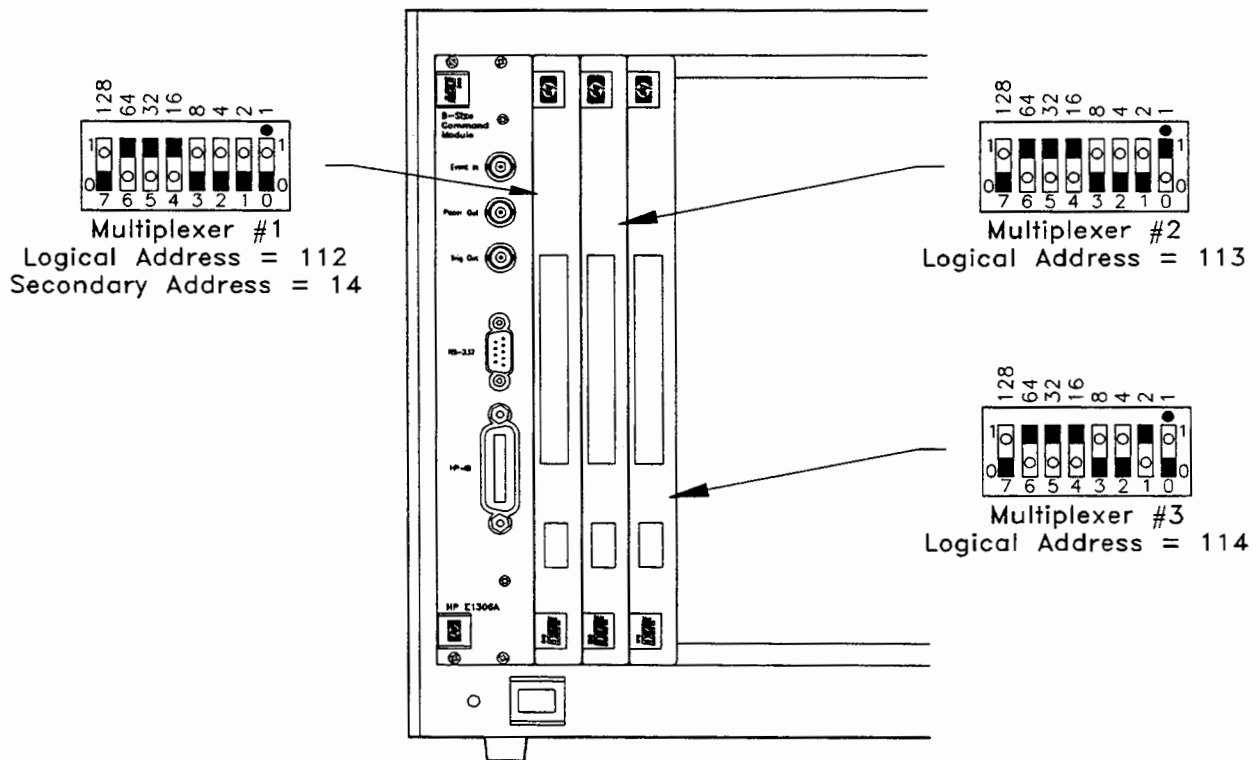

Step 6: Install Plug-In Modules

Warning **SHOCK HAZARD.** Secure modules tightly to the mainframe and cover all unused slots.

Caution To prevent equipment damage, **DISCONNECT** the mainframe's power before installing any module into the mainframe.

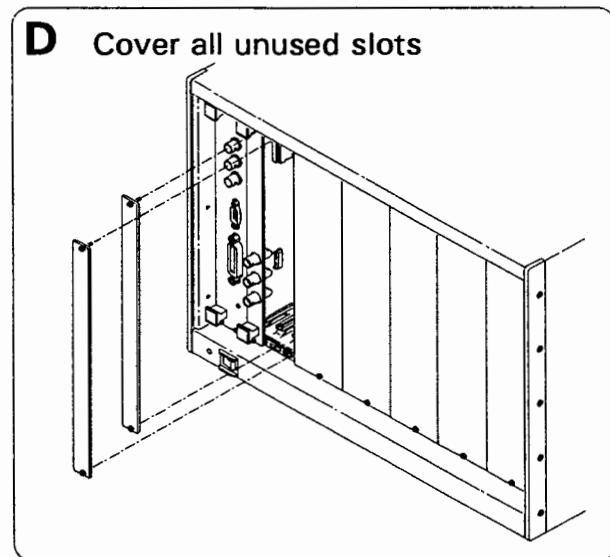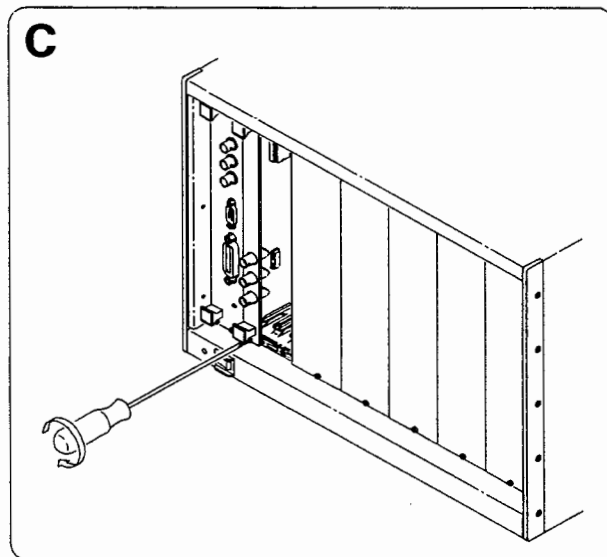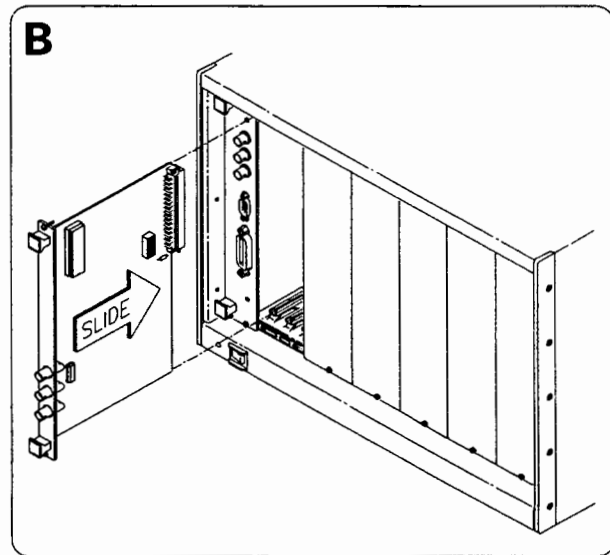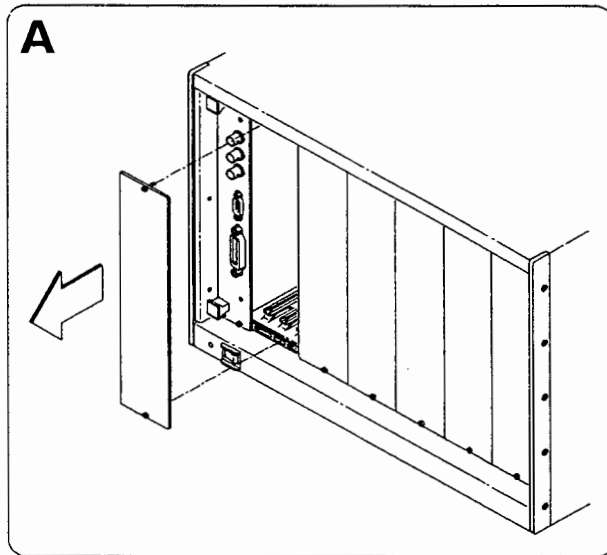


Step 7: Connect Bus Cables (Multiple Module Instruments Only)

The **Analog Bus** creates an analog signal path between modules. The Analog Bus cables are **always** used in the Scanning Multimeter instrument and can also be used to link multiplexers in a Switchbox instrument.

Step 7A: Connect Analog Bus Cables

Multimeter Module

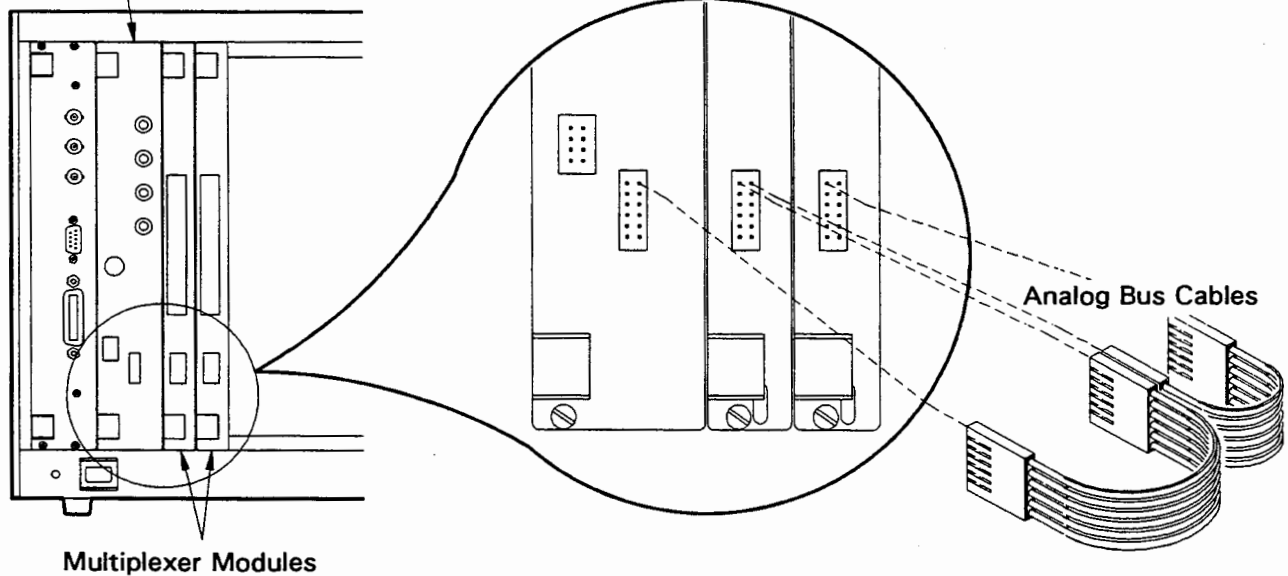


Multiplexer Modules

The **Digital Bus** ensures maximum scanning rates when using a Scanning Multimeter containing FET type multiplexers (HP E1351A, E1352A, E1353A, E1357A or E1358A). The Digital Bus is **not** used with relay type multiplexers such as the HP E1345A.

Step 7B: Connect Digital Bus Cables (FET Multiplexers Only)


Multimeter Module

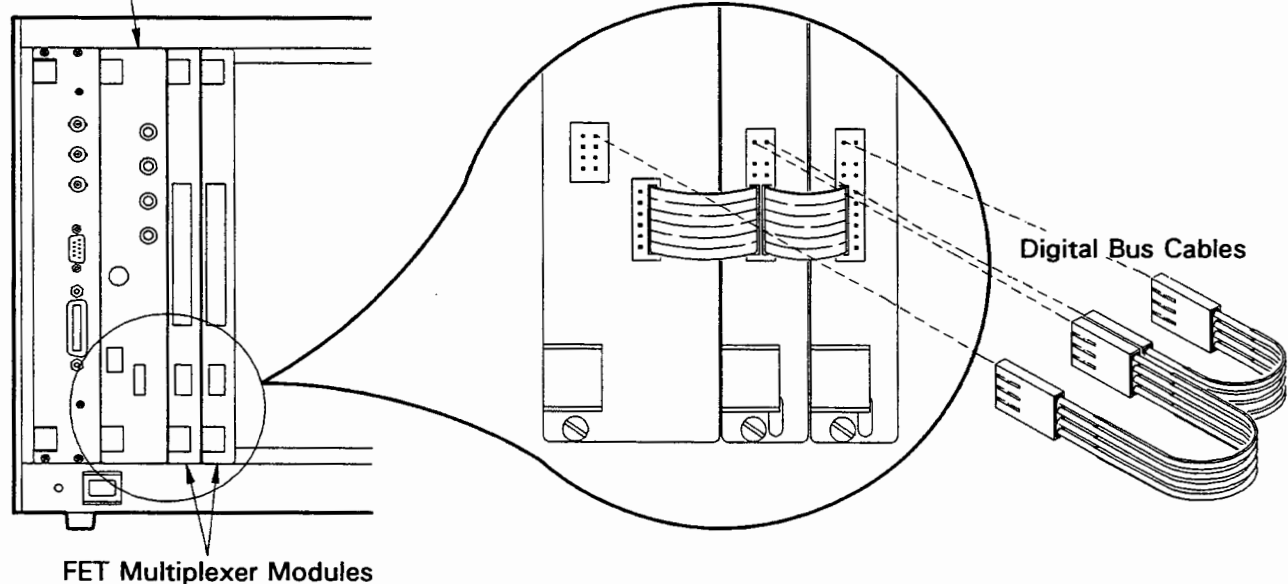

FET Multiplexer Modules

Step 8: Connect Interface Cables



Connect the HP-IB Cable to External Controller/HP-IB Peripherals:

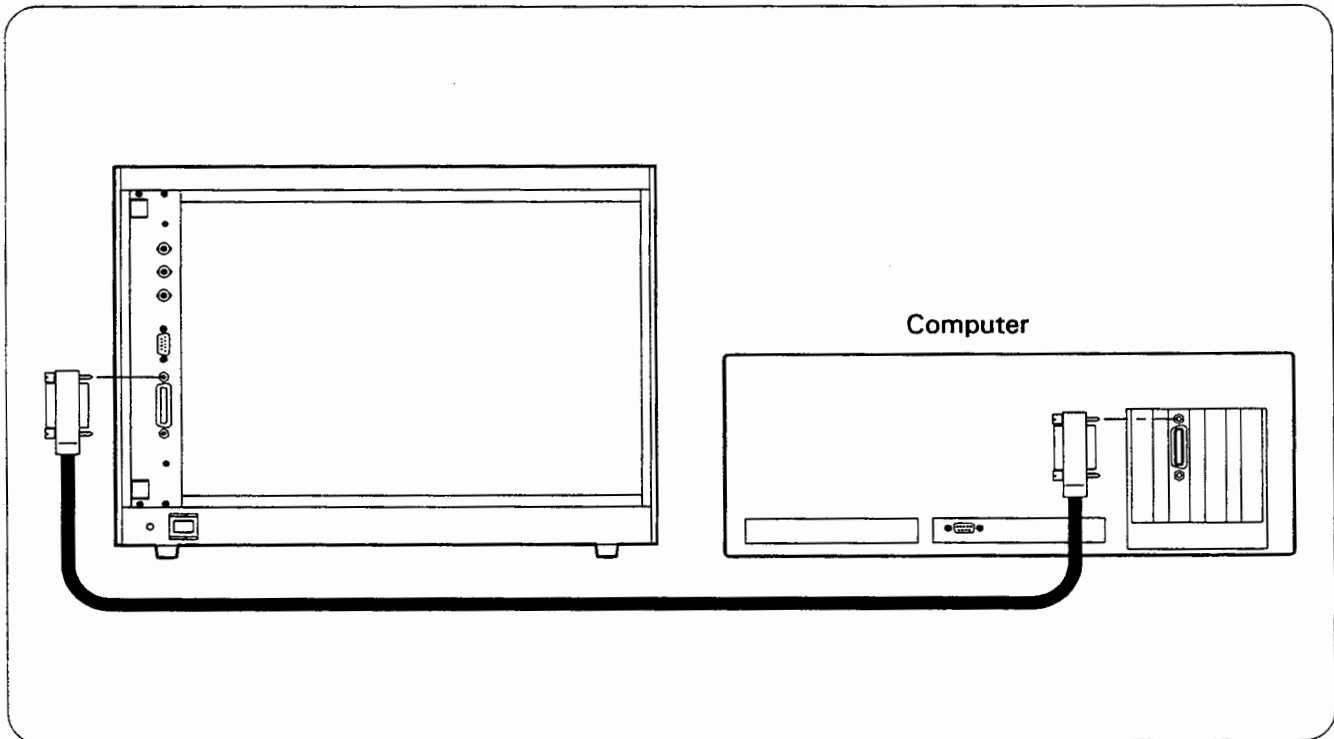

The available HP-IB cables and their HP part numbers are:

- 0.5 meter HP 10833D
- 1 meter HP 10833A
- 2 meter HP 10833B
- 4 meter HP 10833C

Connect the RS-232 Cable to a Computer or Terminal:

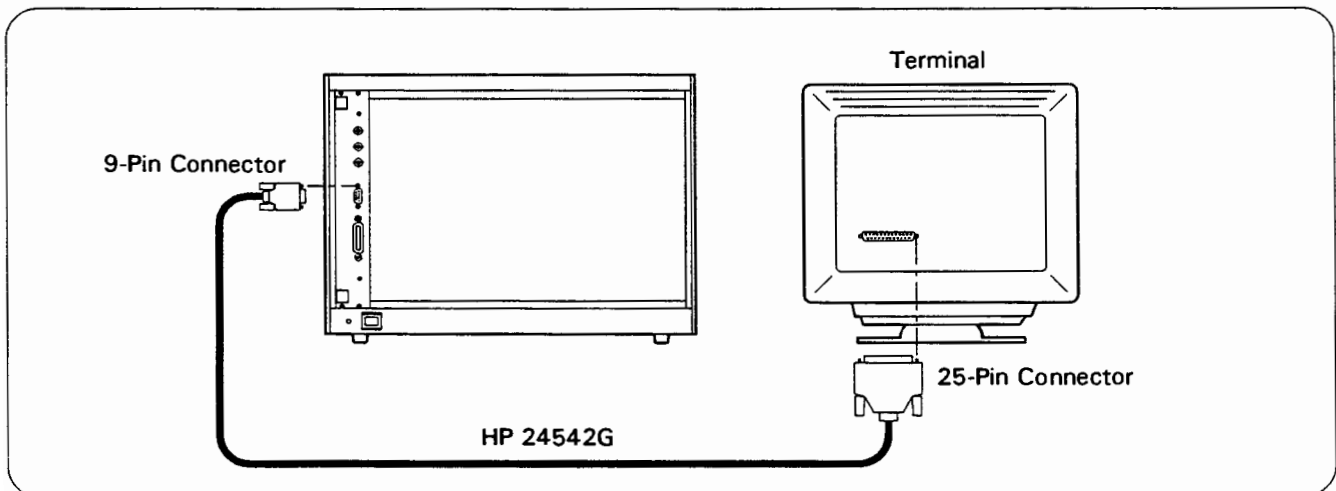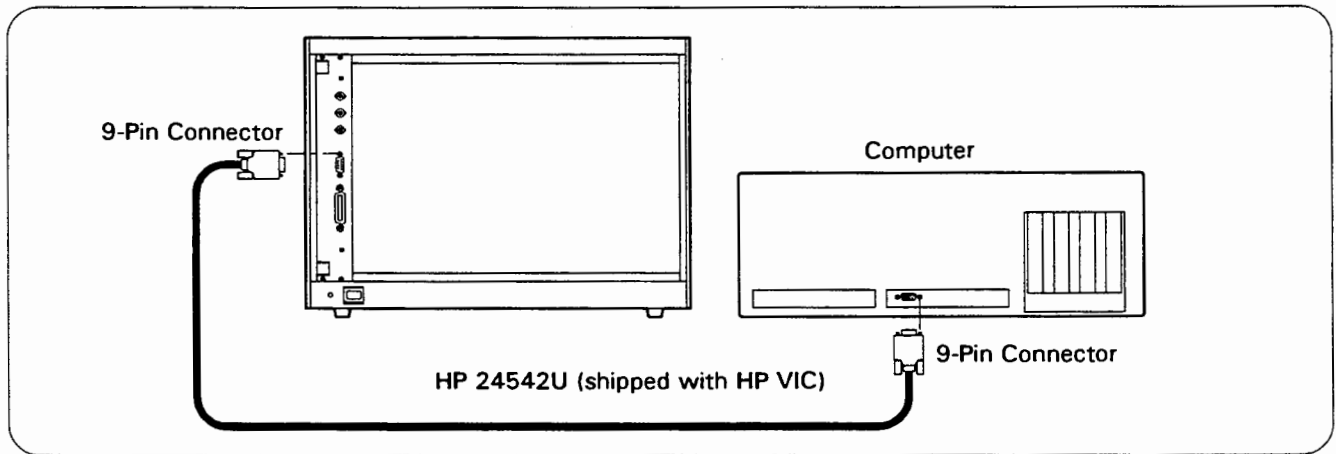

Set your computer or terminal communications protocol to:


- Baud Rate — 9600
- Parity/Data Bit — None/8
- Pacing — XON/XOFF
- Enq/Ack — Off
- 1 Stop bit

Notes

1. The RS-232 cable will be necessary if you need to download device drivers (Step 11).
2. For longer distances, you may need a custom built cable. A wiring diagram for 9-pin to 9-pin and 9-pin to 25-pin cables is shown in Appendix C of the HP E1306A Command Module User's Manual.

Step 9: Apply AC Power


Warning The power cord must be plugged into an approved three-contact electrical outlet. The outlet must have its own ground connector connected to an electrical ground.

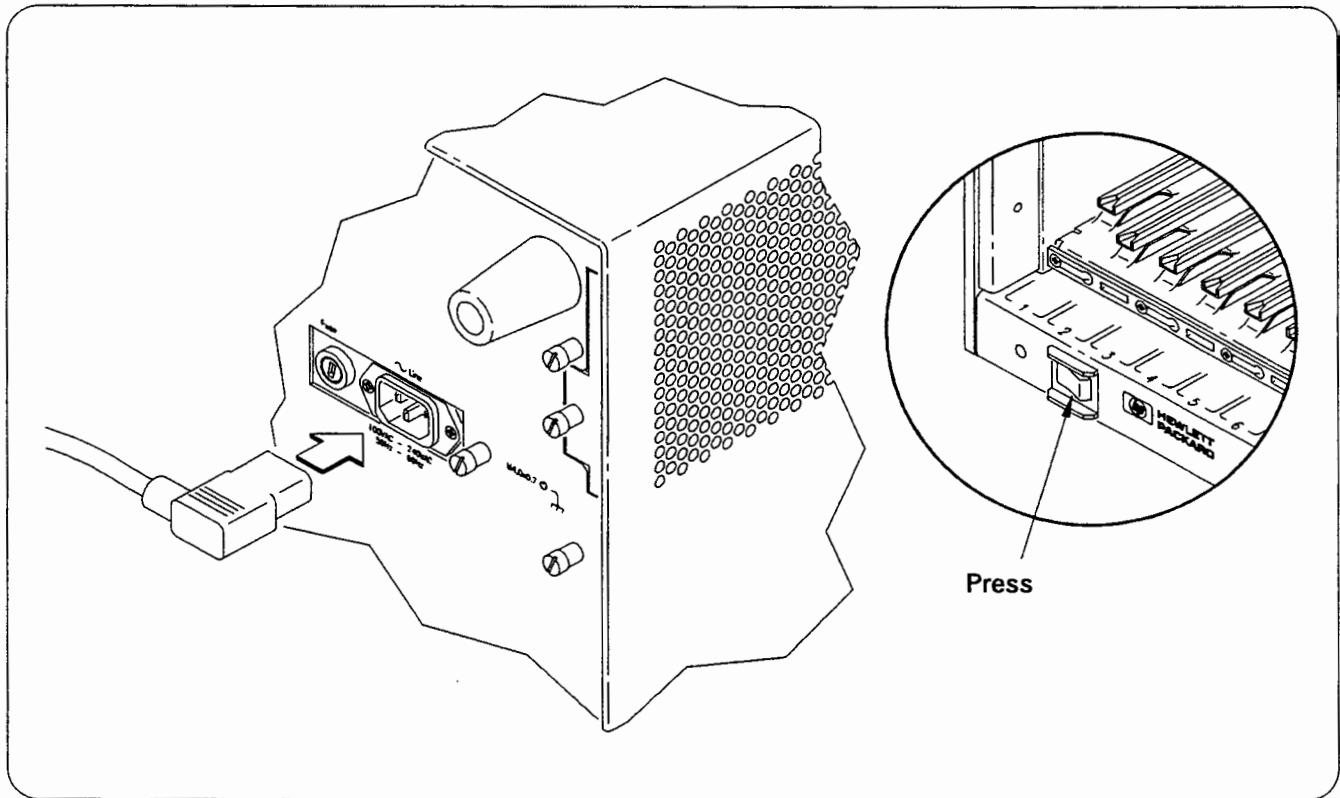

Step 10: Connect Standby DC Power (Optional)

Many mainframes have a +5VDC Standby input which is connected to the +5VSTDBY line on the backplane J1 connector. You can connect an external battery or power supply to this input to sustain memory, clocks, and so on when AC power to the mainframe is cut-off. (Note that the HP E1306A Command Module also has a built-in battery for sustaining its non-volatile memory.) The HP E1302A mainframe's +5VDC Standby input is shown below.

Caution: The HP E1302A's +5VDC Standby input IS NOT protected from an over-current situation. To prevent equipment damage, use a power source that is current-limited (3A max.) or install a 3A fast-blow fuse in series in the +5V line.

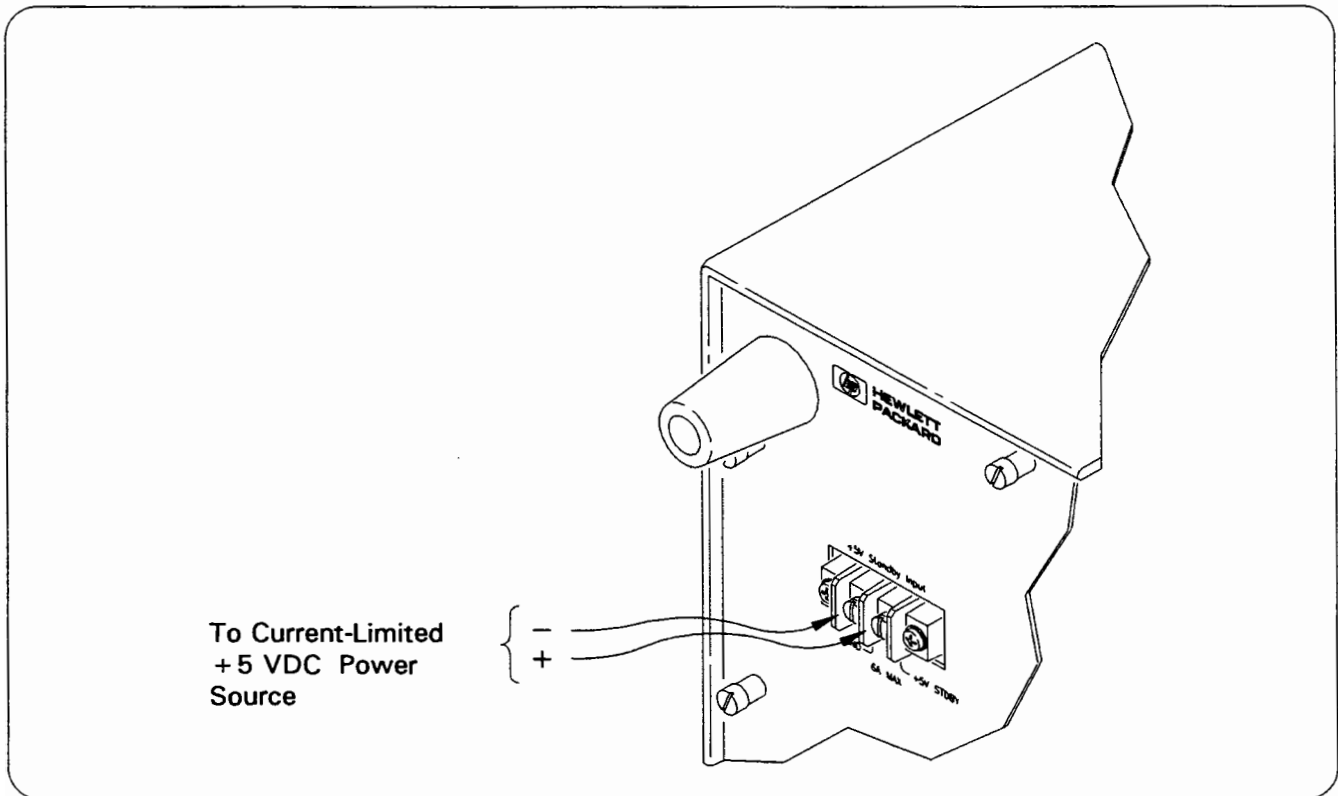

Step 11: Download Device Drivers

If your instrument is **not** listed in the table below, you must download the device driver so that the Command Module can interpret the instrument's SCPI (Standard Commands for Programmable Instruments) commands. Device drivers enable register-based modules to be programmed using SCPI commands.

Factory Installed Device Drivers:

Register-Based Device Model Number	Device Description
HP E1326B	5 1/2-Digit Multimeter
HP E1328A	4-Channel D/A Converter
HP E1330B	Quad 8-Bit Digital Input/Output
HP E1332A	4-Channel Counter/Totalizer
HP E1333A	3-Channel Universal Counter
Most Switch Modules	Multiplexers, Matrix, General Purpose

Drivers that are not factory-installed are on a disk shipped with the module. Instructions for downloading the drivers are included in the Downloading Device Drivers Installation Note. If a driver is not installed, the Command Module will report the following message to an external terminal at the end of the power-on sequence:

WARNING: DEVICE DRIVER NOT FOUND

Step 12: Verify Operation

This step verifies Command Module operation by:

- Checking for start-up errors
- Checking for system errors
- Checking/Setting the System Time
- Checking/Setting System Date
- Determining the Installed Instruments

Use Step 12A to verify using a program supplied on the “Verification and Example Program Disk”, or use Step 12B to verify using other programs.

Note If errors are noted or your computer is unable to communicate with the mainframe, go to Appendix A “In Case Of Difficulty” for troubleshooting information.

Step 12A: Verify Using The VERF_XXX Program

Use the program called “VERF_XXX” (the “XXX” identifies program type) to verify the Command Module operation. There are two programs for Windows, three for DOS, and one for HP computers with HP BASIC. The programs can be found on the “Verification and Example Programs” disks that came with the Command Module. Included on the disks are both the executable files and source codes (to allow customizing the programs).

Note To verify Command Module operation using a program and language other than those provided, go to page 1-20.

Programs for DOS

- VERF_CC.EXE - this program requires an HP 82335 HP-IB Interface Card. The program was written in the C language using the HP-IB Command Library, which comes with the HP 82335 HP-IB Interface Card.
- VERF_QBC.EXE - this program requires an HP 82335 HP-IB Interface Card. The program was written in Microsoft® QuickBASIC using the HP-IB Command Library which comes with the HP 82335 HP-IB Interface Card.
- VERF_QBT.EXE - use this program if you wish to verify the Command Module using the RS-232 port on the PC computer. The program was written in Microsoft® QuickBASIC.

Programs for Windows™

- VERF_VBS.EXE - this program requires either an HP 82335, 82340, or 82341 HP-IB Interface Card. The program was written in Visual BASIC using the HP Standard Instrument Control Library (SICL), which comes with the HP 82340 or 82341 HP-IB Interface Card.
- VERF_VCS.EXE - this program requires either an HP 82335, 82340, or 82341 HP-IB Interface Card. The program was written in Visual C/C++ using the HP Standard Instrument Control Library (SICL), which comes with the HP 82340 or 82341 HP-IB Interface Card.

Program for HP BASIC

- VERF_RMB - this program requires the HP-IB interface connection of an HP computer that has HP-IB capability (i.e., a series 200/300).

Load and run the appropriate program and follow the directions on the screen.

Note For information on how to control Command Module operation using the languages listed above, refer to Chapter 2.

Step 12B: Verifying Using Other Than The VERF_XXX Program

To verify mainframe operation using your own program language, send the following SCPI commands (Standard Commands for Programmable Instruments). (Refer to the "HP E1300/E1301 User's Manual" for more information on the mainframe SCPI commands.)

Checking for Start-Up Errors

To check for start-up errors, do the following:

1. Send the following SCPI command:

```
VXI:CONFigure:DeviceLIST?
```

2. The returned message should look similar to the one below:

```
+0,-1,+4095,+1301,-1,+0,HYB,NONE,#H00000000,#H00000000,READY,"","","SYSTEM IN
STALLED AT SECONDARY ADDR 0";+80,+0,+4095,+65440,-1,+0,REG,A16,#H00000000,#H00
000000,READY,"","","ARB INSTALLED AT SECONDARY ADDR 10";+112,+0,+4095,+65296,
-1,+0,REG,A16,#H00000000,#H00000000,READY,"","","SWITCH INSTALLED AT SECONDA
RY ADDR 14"
```

3. If the message indicates a start-up error, it may look similar to the one shown below (where the text in *italics* shows the actual error message):

```
+0,-1,+4095,+1301,-1,+0,HYB,NONE,#H00000000,#H00000000,READY,"","","CNFG ERRO
R: 13";+112,+0,+4095,+65280,-1,+0,REG,A16,#H00000000,#H00000000,READY,"","",
`CNFG ERROR: 13`"
```

For example, “CNFG ERROR: 13” shows that the Logical Address Switch may be set wrong. See Appendix Y for the different error messages and possible causes.

Note If “CNFG ERROR: 3” is noted, download the driver for the module that caused this error. After the driver is downloaded, perform the above step again. The procedure for downloading drivers is in the Operating Note that came with the driver.

Checking for System Errors

Send the following SCPI command:

```
SYSTem:ERRor?
```

If the mainframe is operational, the command returns this error message:

```
+0, "No error"
```

Checking and Setting the System Time

To check the system time, send:

```
SYSTem:TIME?
```

The returned message for the time is a comma separated list:

```
hh,mm,ss
```

where “hh” is the hour, “mm” are the minutes, and “ss” are the second. For example, if the returned message is “+23,+5,+38”, it shows a time of 23:05:38 or 11:05:39 P.M. The time is in the 24 hour format.

To set the time, send:

```
SYSTem:TIME <hour> ,<minute> ,<second>
```

For example, to set the time for 10:15:00 AM, send:

```
SYST:TIME 10,15,00
```

Checking and Setting the System Date

To check the system date, send:

```
SYSTem:DATE?
```

The returned message for the date is a comma separated list:

```
yyyy,mm,dd
```

where “yyyy” is the year, “mm” is the month, and “dd” is the day. For example, if the returned message is “+1994,+7,+24”, it shows a date of 7/24/1994 or July 24, 1994.

To set the system date, send:

```
SYSTem:DATE <year>,<month>,<day>
```

For example, to set the date for May 31, 1994, send:

```
SYST:DATE 1994,5,31
```

Where to go Next

Your B-Size system should now be installed and operational. Next, you should wire the terminal blocks and begin programming. Refer to the individual module manuals for wiring schematics and specific terminal block wiring information.

The next chapter (Chapter 2) shows how to program instruments using a variety of languages. Shipped with the command module are two “Verification and Example Programs” disks. These disks (one DOS and one LIF disk) contain example programs in various languages. Refer to the “README” files on the disks for information on the various programs on the disks.

Chapter 2

Sending SCPI Commands

This chapter shows how to send Standard Commands for Programmable Instruments (SCPI) and IEEE 488.2 Common Commands to the HP E1306 Command Module from a computer over the Hewlett-Packard Interface Bus (HP-IB)*, or from a Terminal. Chapter contents are:

- Using Visual BASIC and HP SIDL (HP Standard Instrument Control Library) 2-2
- Using C/C++ and HP SIDL (HP Standard Instrument Control Library) 2-5
- Using C and the HP-IB Command Library 2-10
- Using HP BASIC 2-13
- Using a Terminal 2-15

Verification and Example Programs

Shipped with the HP E1306 Command Module are two disks that contain verification and example programs for the command module. One disk (HP Part Number: E1300-10307) is in the LIF format and contains programs written for HP BASIC/IBASIC. The other disk (HP Part Number: E1300-10308) is in the DOS format and contains programs written in C/C++, Visual BASIC, QuickBASIC, and HP IBASIC.

Refer to the “README” files on the disks for information on the various programs on the disks.

Primary and Secondary HP-IB Addressing

The plug-in modules in the mainframe are considered individual instruments. This requires them to have a unique HP-IB Secondary address. This is because the Primary HP-IB address of each instrument is the same, which is the primary address of the mainframe itself. To determine the Secondary HP-IB address, divide the Logical Address of an instrument by 8.

For example, a typical HP-IB address is:

70903

where:

- “7” is the Select Code
- “09” is the Primary HP-IB address (default value)
- “03” is the Secondary HP-IB address (default value of the HP E1326 Multimeter); the “03” Secondary HP-IB address is derived from a Logical Address of 24 (i.e., $24 / 8 = 3$)

* HP-IB is Hewlett-Packard’s implementation of the IEEE Standard 488.1-1978

Using Visual BASIC and HP SICL

The following shows how to use the Visual BASIC program language (version 3.0) with the HP Standard Instrument Control Library (SICL) and the HP 82335, HP 82340, or HP 82341 HP-IB Interface Card. Both the HP-IB Card and SICL are used in a PC type computer under Microsoft® Windows™ or Windows NT™.

The HP Standard Instrument Control Library provides the sub calls to send the SCPI commands that control instrument operation. To send a SCPI command, the appropriate sub call requires the HP-IB address of the instrument and the SCPI command. To receive data from the instrument, the appropriate sub call requires the HP-IB address and the returned data format. To send commands and to receive data is a multiple step process, as follows:

1. SICL first opens an I/O session between Visual BASIC and the instrument.
2. Send the commands and return the data to and from the instrument.
3. Close the the I/O session between Visual BASIC and the mainframe.
4. If using Microsoft® Windows™, cleanup SICL (not needed for Windows NT™).

Typical sub calls are as follows (refer to the “SICL Manual” for other commands):

What’s Needed

Include the “SICL.BAS” program file to the Visual BASIC project. This file came with SICL. To add the file, press Ctrl-D and enter the path and file name, or select the Add File menu under the File menu (see Visual BASIC documentation for more information).

How to Run a Program


You can run the program in the Visual BASIC environment or compile it to make an executable file. Use the appropriate menu in the environment to make the executable file. Note that the file can only operate under Windows™.

Sending SCPI Commands and Receiving Data

The following shows how to send SCPI commands and receive data. To do this, open the communication path between Visual BASIC and the instrument. The following shows how to open the path, and send and receive data.


Open Communication Path

Use the `iopen` subroutine to open the communication path between the instrument and Visual BASIC. The command requires the complete HP-IB address.

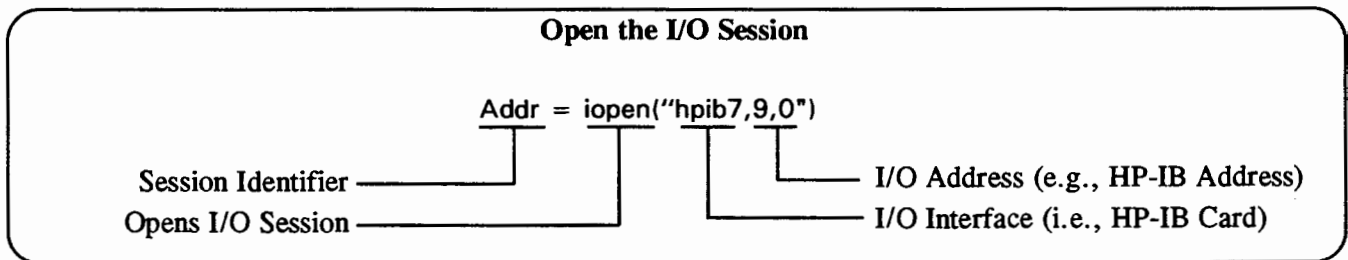


Sending SCPI Commands

The following shows how to send SCPI commands to an instrument using the `iwrite` subroutine from the HP Standard Instrument Control Library (SICL).

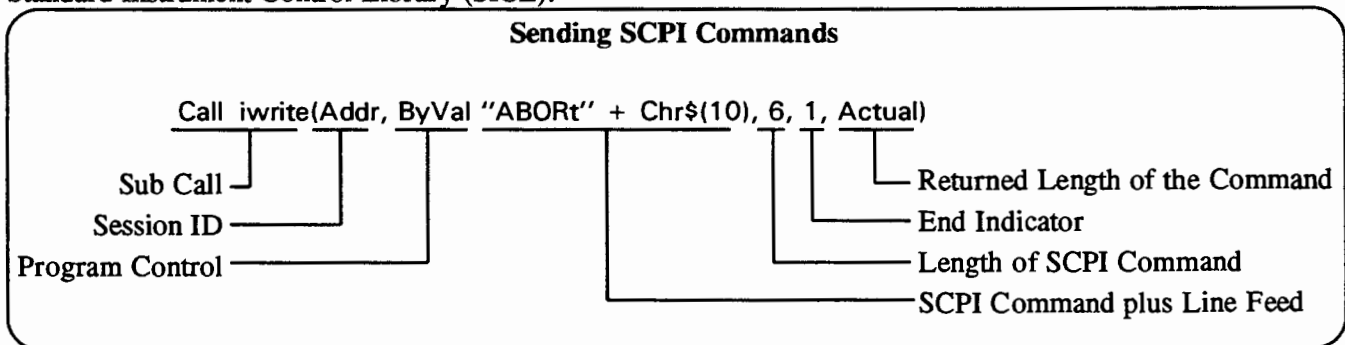

Receiving Data

The following shows how to use the `iread` subroutine from the HP Standard Instrument Library to receive string data from an instrument.

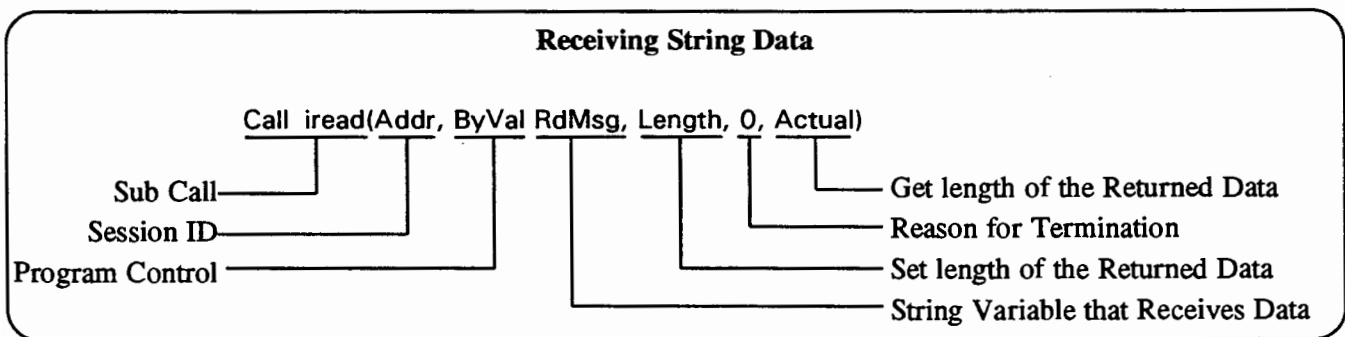

Program Example

The following program example sends a SCPI command and returns the data into a string variable.

```
Sub Main ()

Dim Addr As Integer
Dim Cmd As String
Dim RdMsg As String * 256
Dim Length As Integer
Dim Actual As Long

' SCPI command
Cmd = "SYSTem:ERRor?" + Chr$(10)

' Open communication path using HP-IB address
Addr = iopen("hpib7,9,0")

' Send SCPI command
Call iwrite(Addr, ByVal Cmd, Len(Cmd), 1, Actual)

' Set space for returned data
Length = 256

' Get readings
Call iread(Addr, ByVal RdMsg, Length, 0, Actual)

' Show readings
MsgBox RdMsg, 0

' Close communication with instrument
Call iclose(Addr)

' Clean up sicl (for Windows only)
Call sicleanup

End

End Sub
```

Using C/C++ and HP SICL

The following shows how to use the Visual C/C++ program language with the HP Standard Instrument Control Library (SICL) and the HP 82335, HP 82340, or HP 82341 HP-IB Interface Card. Both the HP-IB Card and SICL are used in a PC type computer under Microsoft® Windows™ or Windows NT™.

The HP Standard Instrument Control Library provides the functions to send the SCPI commands that control instrument operation. To send a SCPI command, the appropriate function requires the HP-IB address of the instrument and the SCPI command. To receive data from the mainframe, the appropriate function requires the HP-IB address and the returned data format. To send commands and receive data is a multiple step process, as follows:

1. SICL first opens an I/O session between C/C++ and the mainframe.
2. Send the commands and return the data to and from the mainframe.
3. Close the the I/O session between C/C++ and the mainframe.
4. If using Microsoft® Windows™, cleanup SICL (not needed for Windows NT™).

Typical functions are as follows (refer to the “SICL Manual” for other commands):

What's Needed

You need the the following libraries and header files. These are supplied with SICL.

- msapp16.lib - for Microsoft® Visual C++ and C++
- bcapp16.lib - Borland C and C++
- sicl16.lib
- sicl.h

How to Run a Program

To run a program, first compile and link the program to make an executable file using the Large memory model. You can compile from the command line or the Windows™ interface. The two methods are:

From the Command Line

Make sure the program to be compiled and the appropriate libraries are in a project file. Do this in the C/C++ environment. Then do the following:

- For Borland compilers, type:
`MAKE <project_name>.MAK` and press Enter
- For Microsoft compilers used in Windows, type:
`NMAKE <project_name>.MAK` and press Enter

From the Windows Interface

Select the C/C++ Windows environment and make sure the program to be compiled and the appropriate libraries are in a project file. Then do the following:

- For Borland compilers, select:

Project | Open Project to open the project, then
Compile | Build All to compile the program

- For Microsoft compilers used in Windows, type:


Project | Open to open the project, then
Project | Re-build All to compile the program

Sending SCPI Commands and Receiving Data

The following shows how to send SCPI commands and receive data using several different functions. To do this, open the communication path between Visual C/C++ and the instrument. The following shows how to open the path, and send and receive data.

Open Communication Path

Use the `iopen` function to open the communication path between the instrument and Visual C/C++. The command requires the complete HP-IB address.

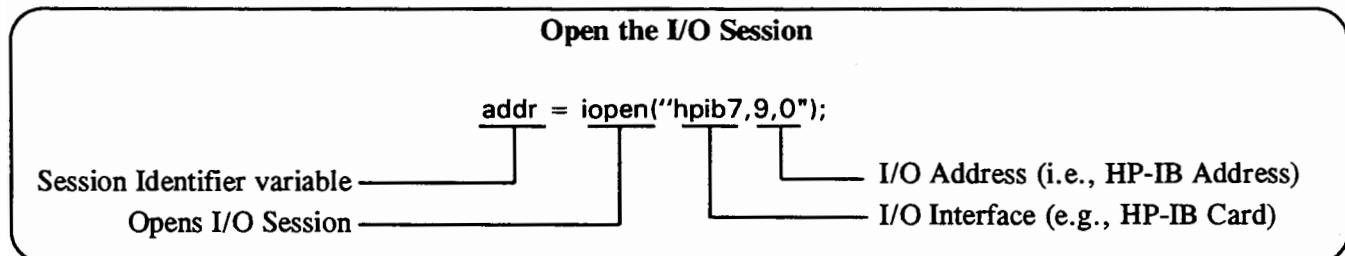


Sending SCPI Commands


The following shows two ways to send SCPI commands. One way uses the `iprintf` function from the HP Standard Instrument Library to send the commands as formatted data to the instrument. The other way uses the `iwrite` function to send the commands in a block of data.

Use the `iwrite` function to send SCPI commands that will not change and use the `iprintf` function to send SCPI commands where the parameters may change. The format for the `iprintf` command are the same format used by C/C++ (e.g., `%s`, `%i`, `%f`, etc.).

Sending SCPI Commands as Formatted Data

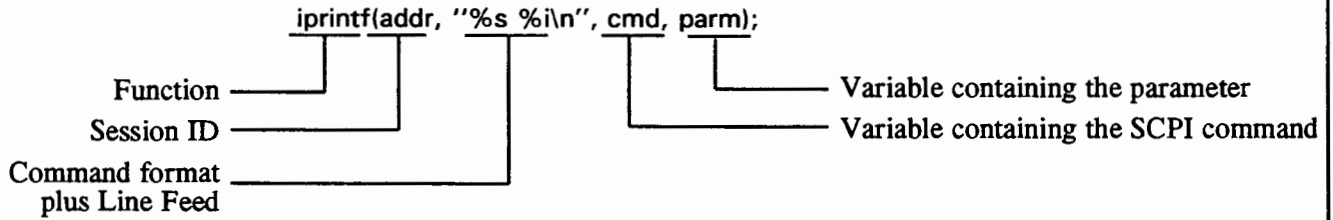


Sending SCPI Commands as a Block of Data

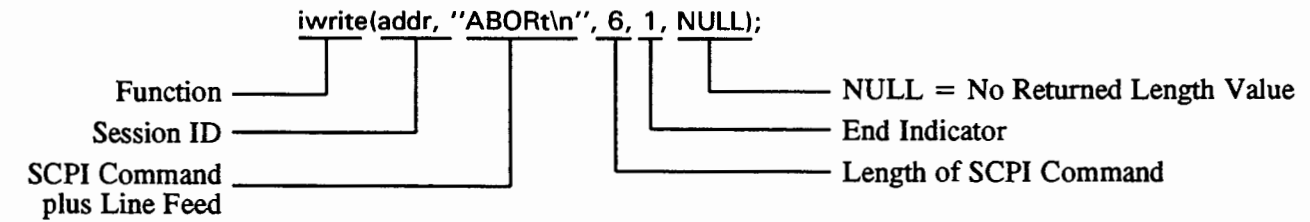


Receiving Data

The following shows two ways to receive data. One way shows how to use the `iscanf` function from the HP Standard Instrument Library to receive formatted data from an instrument. The other way uses the `iread` function to receive unformatted data.

Receiving Formatted Data

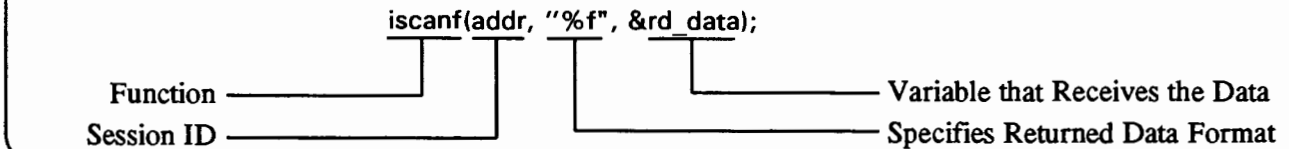


Receiving Unformatted Data

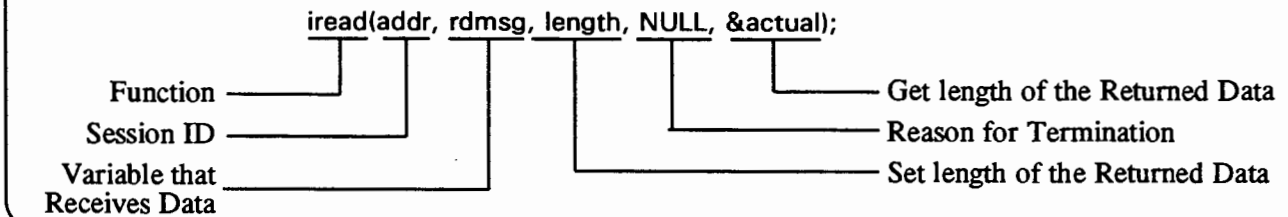

Using Single Function to Send and Receive Data

The `ipromptf` function sends formatted SCPI commands and immediately reads the returned data as formatted data. This function is a combination of the `iprintf` and `iscanf` functions.

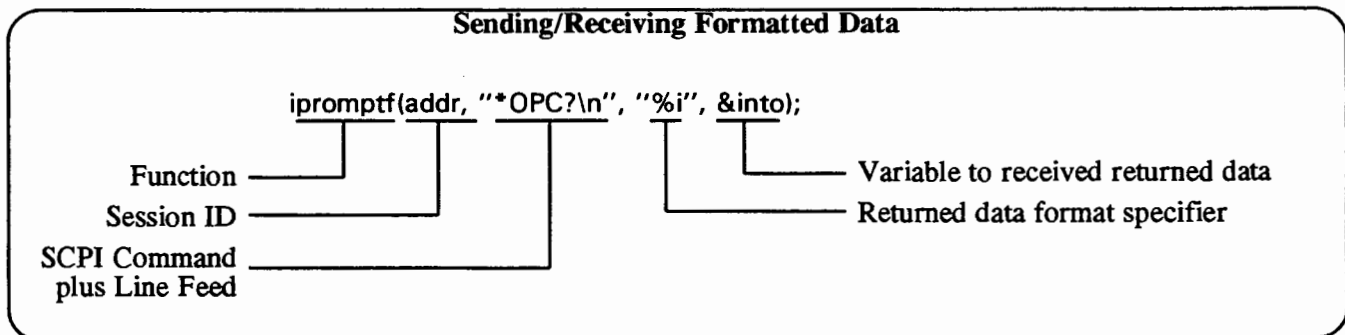

Program Example to Send and Read Unformatted Data

The following program example uses the “`iread`” function to read unformatted raw data.

```
#include <stdio.h>
#include <string.h>
#include <sicl.h> /* Included with SICL */

#define DEV_ADDR "hpib7,9,0" /* Assign the instrument HP-IB address */

/*****/
void main(void)
{
    INST  addr;
    unsigned long actual;
    int    length = 256;
    char   into[256],
          *cmd = "SYSTem:ERRor?\\n"; /* SCPI command */

    #if defined( _BORLANDC_ ) && !defined( _WIN_32 )
        _InitEasyWin(); /* Required for Borland EasyWin program */
    #endif

    /* Enable communication path to the instrument */
    addr = iopen(DEV_ADDR);

    /* Send SCPI command */
    iwrite(addr, cmd, strlen(cmd), 1, NULL);
```

Continued on Next Page

```

    /* Read returned data */
    iread(addr, into, length, NULL, &actual);

    /* NULL terminates result string and print the results */
    if (actual)
    {
        into[actual - 1] = (char) 0;
        printf("\n%s", into);
    }

    /* Close communication */
    iclose(addr);

    /* Release SICL resource allocation; not needed for Windows NT */
    _sicleanup();
}

```

Example to Read Formatted Data

To read formatted data, replace the “iread” function in the above program with the “iscanf” function.

```

    /* Read returned data */
    iscanf(addr, "%t", into);

    /* Print the results */
    printf("\n%s", into);

```

Example to Send and Read Formatted Data

To send and read formatted data, replace the “iscanf” and “iprintf” functions with the “ipromptf” function.

```

    /* Send SCPI command and read returned data */
    ipromptf(addr, "SYSTem:ERRor?\n", "%t", into);

```

Using C and the HP-IB Command Library

The following shows how to use the C program language with the HP-IB Command Library and the HP 82335 HP-IB Interface Card (the command library is supplied with the HP-IB Card). Both the HP-IB Card and Command Library are used in a PC type computer.

The HP-IB Command Library provides the functions to send the SCPI commands that control instrument operation. To send a SCPI command, the C function requires the HP-IB address of the instrument (e.g., 70900) and the SCPI command. To receive data from the instrument, the C function requires the HP-IB address and the returned data format. Typical functions to send commands and to receive data are as follows (refer to the "HP-IB Command Library Manual" for other commands).

Supported C Programs

The supported C programs are:

- Microsoft® C + and C++
- Borland C and C++

What's Needed

You need the the following libraries and header files. These are supplied with the command library.

- clhplib.lib - for Microsoft® C + and C+
- tchhplib.lib - for Borland C and C++
- cfunc.h - for the Small memory model only

Executing a Program

To execute a program, first compile and link the program to make an executable file. To compile the program from the command line:

- Link the appropriate HP-IB C library (from the HP-IB Command Library files). Use one of the following libraries:
 - Microsoft® C + and C++, and QuickC®: clhplib.lib
 - Borland C and C++: tchhplib.lib
- If using the Small memory model, include "cfunc.h" header file (from the HP-IB Command Library files). This file is not needed when using the Large/Huge memory models.
- Be sure the necessary paths have been added to the AUTOEXEC.BAT file for the compilers to find the correct library and header file (see your C Language documentation to set the proper paths).

Compiling a Program

To compile a program from the DOS command line using the Large memory model, execute the following:

- Microsoft® C/ and C++:

```
cl /AL <path\program name.C> path\clhplib.lib
```


- Borland C and C++:

```
tcc -ml <path\program name.C> path\tchhplib.lib
```

When using the Small memory model, change the “AL” or “-ml” parameters to “AS” or “-ms”.


Sending SCPI Commands

The following shows how to use the IOOUTPUTS function from the HP-IB Command Library to send SCPI commands to an instrument. The function needs the complete HP-IB address of the instrument.

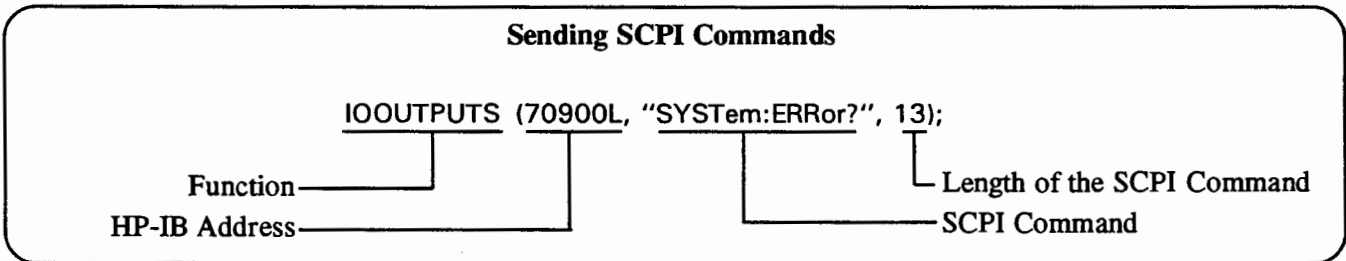

Receiving Data

The following shows how to use the IOENTERS function from the HP-IB Command Library to receive character data from an instrument. The function needs the complete HP-IB address of the instrument.

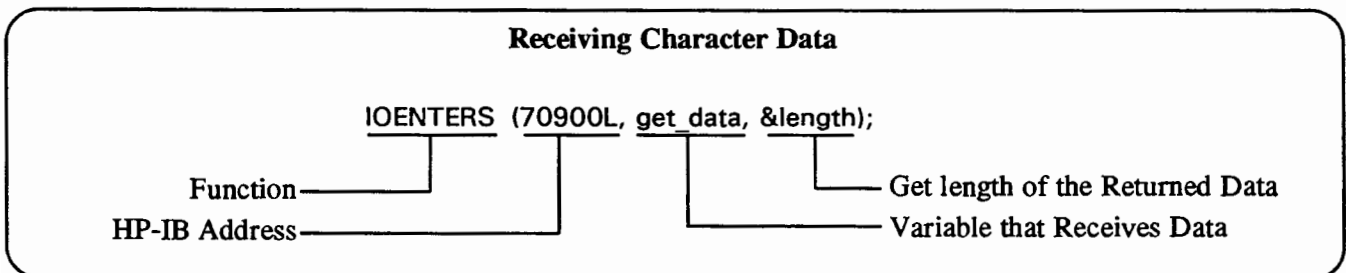

Program Example

The following program example sends a SCPI command and returns the data into a character string.

```
#include <stdio.h>
#include <string.h>
#include <cfunc.h> /* This file is from the HP-IB Command Library Disk */

#define ADDR 70900L /* Defines the HP-IB address */

/*****
void main(void)
{
    char    *cmd = "SYSTem:ERRor?", /* SCPI command */
           rd_msg[257];
    int     length = 256;

    /* Send SCPI command */
    IOOUTPUTS(ADDR, cmd, strlen(cmd));

    /* Read returned data */
    IOENTERS(ADDR, rd_msg, &length);

    /* Print returned data */
    printf("\n%s",rd_msg);
}
```


Using HP BASIC

The following shows how to use the HP BASIC program language (version 5.0 and above). HP BASIC language is in a variety of HP computers, including many Series 200/300 computers. These computers normally have the means for HP-IB connections.

HP BASIC has the means to directly send commands to the instruments and to directly receive data from the instruments over HP-IB. To send a SCPI command, the program requires the HP-IB address of the instrument and the SCPI command. To receive data from the instrument, the program requires the HP-IB address. Typical commands are as follows (refer to the HP BASIC documentation for other commands).


Sending SCPI Commands

The following shows how to send SCPI commands to an instrument using the HP BASIC OUTPUT command. The command needs the complete HP-IB address of the instrument.

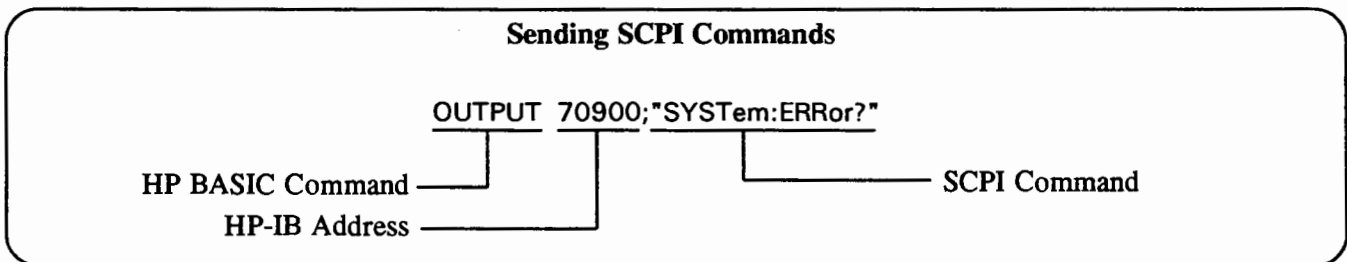

Receiving Data

The following shows how to use the hp BASIC ENTER command to receive data from an instrument. The command needs the complete HP-IB address of the instrument.

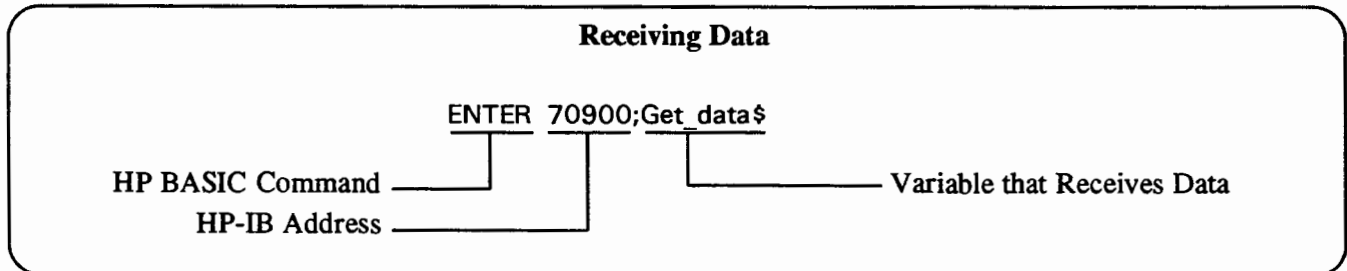

Program Example

A typical program example is as follows. This example sends a SCPI command and returns the data into a string variable.

```
10 DIM A$(256)
20 !
30 ! Send SCPI command
40 OUTPUT 70900.;"SYSTem:ERRor?"
50 !
60 ! Read data
70 ENTER 70900.;A$
80 !
90 ! Print returned data
100 PRINT A$
110 END
```

Using a Terminal

The following shows how to use a supported terminal to send SCPI commands to an instrument and display returned data. The supported terminals are:

- HP 700/92
- HP 700/94
- HP 700/22
- HP 700/43
- DEC® VT100®
- DEC® VT220®
- WYSE® WY-30™
- HP AdvanceLink terminal emulation software (configured as an HP 2392A Terminal)

Connecting the Terminal

The terminal must be connected to the RS-232 connector on the computer. The Baud Rate must be 9600.

Sending SCPI Commands

To send SCPI commands to an instrument, make sure the instrument is selected. You can select the instrument either in the main menu or in an instrument menu, as follows:

Select Instrument from Main Menu

The Main Menu is the one that is shown after the mainframe is turned on and it has gone through its turn-on cycle. The prompt “Select an instrument” is displayed when the mainframe is ready to select an instrument. Do the following:

1. **Supported Terminal:** The installed instruments are shown on the terminal’s functions keys. To select an instrument, press the appropriate function key. For example, if you wish to select the system (i.e., mainframe), press the function key labeled “SYSTEM”.
2. **Non-Supported Terminal:** Do one of the following:

- a. Type:

SI <instrument name> press Return

where, <instrument name> is the name of the instrument to be selected. For example, the function key labeled “VOLTMTR” for the HP E1326 Multimeter.

or type:

SA <logical lddress>

where <logical address> is the Logical Address of the instrument to be selected. For example, "SA 24" selects the HP E1326 Multimeter.

Select Instrument from an Instrument Menu

An Instrument Menu is normally indicated by the instrument title shown on the display. For example, if the system is selected, the title is typically displayed as "SYSTEM_0:". Do the following:

1. **Supported Terminal:** Do the following:
 - a. Press the function key labeled "UTILS", if displayed. Continue with the next step if the label is displayed or not.
 - b. Press the function key labeled "SEL_INST". This should bring you to the Main Menu (i.e., the "Select an instrument." prompt shown). Use the procedure under the "Select Instrument from Main Menu" heading to select the instrument.
2. **Non-Supported Terminal:** Press Ctrl-D to select the Main Menu (i.e., the "Select an instrument." prompt shown). Use the procedure under the "Select Instrument from Main Menu" heading to select the instrument.

Sending the Commands

Once the instrument menu is shown, type in the SCPI command and press 'Return'. For example, to display an error message, type:

```
SYST:ERR?
```

and the returned error message from the selected instrument will be displayed.

Appendix A

In Case Of Difficulty

This appendix gives possible failures and troubleshooting information for the mainframe. Included are start-up and system errors, and their descriptions.

No Communication Between Command Module And Computer

When the command module is unable to communicate with the computer, do the following:

1. Check for poor interface connections (HP-IB or Serial I/O) between the computer and mainframe. If connections are good, continue with step 2.
2. Turn the mainframe off.
3. Remove all plug-in modules, except the command module, from the mainframe.
4. Turn the mainframe on; wait until it goes through its turn on cycle (about 8 seconds).
5. Try to communicate with the command module again (send the "VXI:CONFigure:DeviceLIST?" command or use the "VERF_XXX" program from the B-Size Verification Disk).
6. If the command module is now operative, do the following:
 - a. Turn the mainframe off.
 - b. Plug in one plug-in module.
 - c. Turn the mainframe on.
 - d. Check for correct operation again (see step 4).
 - e. If the command module is now inoperative, the last module installed is defective. If the command module still operates, repeat steps 5-a to 5-d to check any other modules one at a time until you find the defective one.
7. If the mainframe is still inoperative, make sure the computer operates correctly. If it appear to operate correctly, the mainframe is inoperative.

Start-Up Errors and Messages

The Start-up errors and descriptions are listed in Table A-1.

Table A-1. Start-Up Errors

Code	Message	Cause
1	Failed Device	VXI device failed its self test.
2	Unable to combine device	Device type can not combine into an instrument such as a scanning voltmeter or a switchbox.
3	Config warning. Device driver not found	Identification of device does not match list of drivers available.
5	Config error 5. A24 memory overflow	More A24 memory installed in the command module that can be configured into available A24 memory space.
8	Config error 8. Inaccessible A24 memory	An A24 memory device overlaps a memory space reserved in the mainframe's operating system.
10	Config error 10. Insufficient system memory	Too many instruments installed for the amount of RAM available in the command module. Cannot configure the instruments. Only the command module is started.
11	Config error 11. Invalid instrument address	A device that is not part of a combined instrument has a logical address that is not a multiple of 8.
13	Config error 13. Logical address or or IACK switch set wrong	Duplicate logical addresses set or interrupt bypass switches set improperly. Only the command module is started.
29	Config warning. Sysfail detected	A device asserted SYSFAIL on the backplane during startup.
30	Config error 30. Pseudo instrument logical address unavailable	A physical device has the same logical address as IBASIC (i.e., 30).
31	Config error 31. File system start up failed	Insufficient system resources to allow the IBASIC file system to start.
45	Config warning. Non-volatile RAM contents lost	NVRAM was corrupted or a cold boot was executed.
48	Config warning. Driver RAM contents lost.	Driver RAM was corrupted or a cold boot was executed.

Error: 1: Failed Device

This indicates that a plug-in module in the mainframe is inoperative. To determine which module is defective, do the following:

1. Remove AC power from the mainframe.
2. Unplug a module (except the command module).
3. Re-apply AC power to the mainframe and check for Start-Up errors again.
4. If the error has not returned, the last module unplugged is the cause. Otherwise, repeat steps 1 to 3 to check the other modules.

Error: 3: Config warning. Device driver not found

The command module generates this error when it detects a module that has no driver present. Many instruments, like the HP E1326 Multimeter and HP E1345/E1346/E1347, etc. switches, have the built-in drivers in ROM. For other modules, like the HP E1340 Arbitrary Function Generator, its driver must be downloaded.

When Error: 3 is generated, check and be sure all drivers are installed. Refer to the Downloadable Driver Operating Note that came with module to download the drivers.

Error 10: Config error 10. Insufficient system memory

The system has a set amount of RAM memory available for use. If attempting to download instrument drivers that require more RAM memory than available, the system generates this error message. Either install more RAM or remove a downloadable driver to get more memory.

Error 11: Config error 11. Invalid instrument address

The command module generates this error if a Logical Address of a module is other than a multiple of 8. The only exception is the Scanning Voltmeter or Switchbox configuration. However, the first module in these configurations must be set at a multiple of 8.

Error 13: Config error 13. Logical address or IACK switch set wrong

Multiple modules with the same Logical Address causes this error. Be sure each module has its own unique Logical Address.

System Errors and Messages

All system errors generated by the command module are stored into an error queue until full. When full, all subsequent errors are not stored. Before the error queue is full, the last error message stored is called:

-350, "Too many errors"

Reading the Error Queue

The SCPI command "SYSTem:ERRor?" reads the error queue and returns the error message. The command reads the oldest message to the newest/ Whenever a message is read, it is removed from the queue. When all messages are removed, the command returns:

+0, "No error"

Error Types

The returned error message consists of a number and a message. A positive number shows instrument specific errors. Negative numbers determined different types of errors as summarized in Table A-2. The different negative numbered types are explained following the table.

Table A-2. Negative Error Numbers

Error Number	Error Type
-199 to -100	Command Errors
-299 to -200	Execution Errors
-399 to -300	Device-Specific Errors
-499 to -400	Query Errors

Command Errors

The command module cannot execute or understand a command. Possible causes are:

- A syntax error. For example, wrong data type for a particular command was received.
- A command was not recognized. For example, the SCPI or Common Command is incorrect.

Execution Errors

The command module is unable to perform the action or operation requested by the command. Possible causes are:

- A parameter within the command is outside the limits or inconsistent with the capabilities of the command module.
- A valid command cannot be executed due to a failure in the command module.

Device-Specific Errors

This shows that an operation cannot complete due to an abnormal hardware or firmware condition, like a self-test failure.

Query Errors

This shows that a problem has occurred in the output queue. Possible causes are:

- An attempt was made to read an empty output queue (i.e., no data present in the queue).
- Data in the output queue has been lost for some unknown reason.

System Error Message Listing

For a listing of all system errors, refer to Tables A-3 and A-4.

Table A-3. System Errors

Code	Message	Cause
-101	Invalid character	Unrecognized character in specified parameter.
-102	Syntax error	Command is missing a space or comma between parameters.
-103	Invalid separator	Command parameter is separated by some character other than a comma.
-104	Data type error	The wrong data type (i.e. number, character, string expression) was used when specifying a parameter.
-108	Parameter not allowed	Parameter specified in a command which does not require one (e.g., SYSTem:ERRor? 10).
-109	Missing parameter	No parameter specified in the command in which a parameter is required.
-113	Undefined header	Command header was incorrectly specified (e.g., *IDN1?).
-123	Numeric overflow	A parameter specifies a value greater than the command allows.
-128	Numeric data not allowed	A number was specified for a parameter when a letter is required.
-131	Invalid suffix	Parameter suffix incorrectly specified (e.g. .SSECOND rather than .SS or .SSEC).
-138	Suffix not allowed	Parameter suffix is specified when one is not allowed.
-141	Invalid character data	The discrete parameter specified is not allowed (e.g. TRIG:SOUR INT - INT is not a choice.).
-178	Expression data not allowed	A parameter is enclosed in parentheses that should not be.
-211	Trigger Ignored	Trigger occurred while the Pacer is in the idle state, or a trigger occurred from a source other than the specified source.
-222	Data out of range	The parameter value specified is too large or too small.
-224	Illegal parameter value	The numeric value specified is not allowed.
-240	Hardware error	Hardware error detected during power-on cycle. Return command module to Hewlett-Packard for repair.
-310	System error	If caused by *DMC, then macro memory is full.
-350	Too many errors	The error queue is full as more than 30 errors have occurred.
-410	Query interrupted	Data is not read from the output buffer before another command is executed.
-420	Query unterminated	Controller tried to read data without first sending a complete query message.
-430	Query deadlocked	Command execution cannot continue since the command module's command input and data output buffers are full. Clearing the instrument restores control.
+ 1500	External trigger source	"Event In" signal already allocated to another already allocated instrument such as a Switchbox.
+ 2002	Invalid logical address	A value less than 0 or greater than 255 was specified for for a logical address.

Table A-4. System Errors (cont.)

Code	Message	Cause
+ 2003	Invalid word address	A odd address was specified for a 16 bit read or write. Always use even addresses for 16 bit (word) accesses.
+ 2005	No module at logical address	A non-existent logical address was specified with the VXI:READ? or VXI:WRITE command.
+ 2101	Failed Device	VXI device failed its self test.
+ 2102	Unable to combine device	Device type can not be combined into an instrument such as a scanning multimeter or a switchbox.
+ 2103	Config warning, Device driver not found	ID of device does not match list of drivers available. Warning only.
+ 2105	Config error 5, A24 memory overflow	More A24 memory installed in the command module than can be configured into the available A24 memory space.
+ 2108	Config error 8, Inaccessible A24 memory	A24 memory device overlaps memory space reserved by the command module's operating system.
+ 2110	Config error 10, Insufficient system memory	Too many instruments installed for the amount of RAM installed in the command module. Cannot configure instruments. Only the system is started.
+ 2111	Config error 11, Invalid instrument address	A device's logical address is not a multiple of 8 and the device is not part of a combined instrument.
+ 2113	Config error 13, Logical address or IACK switch set wrong	Duplicate logical addresses set or interrupt bypass switches set improperly. Only the system is started.
+ 2129	Config warning, Sysfail detected	A device was asserting SYSFAIL on the backplane during startup.
+ 2130	Config error 30, Pseudo instrument logical address unavailable	A physical device has the same logical address as IBASIC (240).
+ 2131	Config error 31, File system start up failed	Insufficient system resources to allow IBASIC file system to start.
+ 2145	Config warning, Non-volatile RAM contents lost	NVRAM was corrupted or a cold boot was executed.
+ 2148	Config warning, Driver RAM contents lost	Driver RAM was corrupted or a cold boot was executed.
+ 2202	Unexpected interrupt from non-message based module	A register-based module interrupted when an interrupt service routine had not been set up.
+ 2809	Interrupt line has not been set up	A DIAG:INT:ACT or DIAG:INT:RESP command was executed before setting the interrupt with DIAG:INT:SET.

Appendix B

Debugging VXI SCPI Programs

Introduction

This appendix shows how to debug programs for the command module and other installed modules using the Standard Commands for Programmable Instruments (SCPI). SCPI provides a common language for the mainframe and modules to simplify programming and debugging. For specific commands, refer to the command module and other module's User's manuals.

Steps To Debug Programs

Perform the following steps if your program does not produce the expected results. Steps 1 to 4 help find most programming errors and steps 5 to 8 find the more difficult errors that the previous steps may not find.

1. Verify Instrument Communication
2. Reset Each instrument at the Start of the Program
3. Query the Instruments for Errors
4. Query All Command Parameter Settings that are Set
5. Check the Program is Trying to Enter the Same Amount of Data the instrument is Trying to Output
6. Check the Instrument's Arm/Trigger Subsystem
7. Check that Coupled Commands are Sent as a Group
8. Check for Command Synchronization

Note Most of the examples in the following steps use HP BASIC as the program language.

Step 1: Verify Instrument Communication

Use this step to determine if the program can communicate with the instruments in the mainframe.

Logical and HP-IB Addressing

The HP VXI system contains either a command module or a mainframe with a built-in command module. The default Logical Address of the command module is normally 0 which makes the HP-IB Secondary address 0. The default Primary HP-IB address is 09. If the program can communicate with the mainframe/command module using these addresses, the program can determine other instruments in the mainframe. The first code in the HP-IB address is the Select Code. Most computers will most likely use a Select Code of 7.

Typical HP-IB addresses for different program languages and libraries are:

- 70900 - HP BASIC
- 70900 - sent as a Long Integer in QuickBASIC using the HP-IB Command Library
- 70900L - sent as Long Integer in C using the HP-IB Command Library
- hpib7,9,0 - sent as string in Visual BASIC using the HP Standard Instrument Control Library (SICL)
- hpib7,9,0 - sent as character string in Visual C/C++ using the HP Standard Instrument Control Library (SICL)

Determining System Information

The VXI-5 document specifies a standard set of commands to access VXI system information. These commands follow the convention used in SCPI and IEEE 488.2. Use the following commands to determine system information.

Determine Logical Addresses

Use the VXI:CONFigure:LADdress? command to determine all Logical Addresses in the mainframe. This allows you to determine the Secondary HP-IB address of each instrument and also make sure the Logical Address switches are set correctly. A common mistake is to interpret the Most Significant Bit (MSB) for the Least Significant Bit (LSB), or a 1 for a 0. Execute from BASIC:

```
DIM A$(128)                ! Dim variable for returned data
OUTPUT 70900;"VXI:CONF:LADD?" ! Send SCPI command
ENTER 70900.;A$           ! Enter returned data
PRINT A$                  ! Print returned data
```

The command typically returns the data which returns data that may typically look like this:

```
+0,+24,+112,+113
```

Note that an instrument must have a Logical Address that is a multiple of 8.

Determine Additional Information

Execute the following commands to determine additional information about an instrument. Execute from HP BASIC:

```
DIM A$(128)                ! Dim variable for returned data
OUTPUT 70900;"VXI:CONF:SEL 24" ! Select instrument at Logical Address 24
OUTPUT 70900;"VXI:CONF:INF?"  ! Get instrument information
ENTER 70900.;A$           ! Enter returned data
PRINT A$                  ! Print returned data
```

Determining Instrument Communication

Use the *IDN? command to determine if the computer can communicate with the instrument. Send the command using the Secondary HP-IB address (i.e., Logical Address / 8) of the instrument. The following HP BASIC sends to command to an instrument at Logical Address 24 (Secondary HP-IB address of 03)::

DIM A\$(128)	<i>! Dim variable for returned data</i>
OUTPUT 70903;"*IDN?"	<i>! Send *IDN? command to instrument at Logical Address 24</i>
ENTER 70903;A\$	<i>! Enter returned data</i>
PRINT A\$	<i>! Print returned data</i>

Program Message Terminator

All command sequences must end with a proper program message terminator. This could be a Line Feed (LF), a Line Feed with an EOI statement, or an EOI statement. Programs like HP BASIC, or the functions/subroutines of the HP-IB Command Library automatically provides a Line Feed at the end of an OUTPUT or IOOUTPUTS statement, respectively. For the functions/subroutines of the HP Standard Instrument Library (SICL), the program must supply the terminator.

Step 2: Reset Each instrument at the Start of the Program

After a power-on occurs (i.e., mainframe is turned on), each instrument in the mainframe is fully reset. Since after using an instrument, it may be in a different state than when first turned on. The only way to reset to its power-on condition, is to go through the following three stages of reset.

1. Issue an IEEE 488 Interface Clear command. This command opens any handshaking between the computer and all instruments on the bus selected by the HP-IB Select Code. The following lists the Interface Clear command for several languages:
 - a. ABORT <select code> - HP BASIC
 - b. IOABORT (<select code>) - QuickBASIC using the HP-IB Command Library
 - c. IOABORT (select code) - C/C++ using the HP-IB Command Library
2. Issue an IEEE 488 (or HP-IB) Selected Device Clear. This command terminates instrument activity and clears input/output buffers to prepare to receive ASCII commands. The following lists the Interface Clear command for several languages:
 - a. CLEAR <HP-IB address> - HP BASIC
 - b. IOCLEAR(<device_address>) - C using the HP-IB Command Library
 - c. iclear(<device_session_id>) - using the Standard Instrument Control Library (SICL)
3. Reset all features of each instrument and wait for its completion, shown as follows using an HP BASIC program:

```
OUTPUT 70900;"*RST;*CLS;*ESE 0;*SRE 0;*OPC?"
ENTER 70900;A
```

The *CLS;*ESE 0;*SRE 0 resets the instrument status system that is defined by IEEE 488.2.

The *OPC? command outputs a "1" after all previous commands are completed (see "Step 8: Check for Command Synchronization" for more information on the command).

Step 3: Query the Instruments for Errors

All instruments that follow the SCPI definition have an Error Queue. Each error that occurs is stored into the queue. To read the queue, send the command:

```
SYSTEM:ERRor?
```

the returned message consists of an error number and message. If no errors are in the queue, the command returns:

```
+0, "No error"
```

This command is a very useful command since it can determine if the correct SCPI command has been sent to an instrument and that the parameters sent with the command are correct. If, for example, an incorrect command was sent, an error message is stored in the error queue after the command is parsed. Since the incorrect command may not otherwise indicate an error condition, the only way to find out is to query the Error Queue. The following shows how to continuously read the Error Queue until no more errors are stored using HP BASIC:

```
REPEAT                ! Start a continuous loop
  OUTPUT 70900;"SYST:ERR?" ! Send query command
  ENTER 70900;A,A$      ! Enter returned data
  PRINT A;A$           ! Print error number and message
UNTIL A=0              ! Loop until no errors are returned
```

Step 4: Query All Command Parameter Settings that are Set

If there is an error in the Error Queue, you must find out which command caused the error. A command with parameters that are incorrect will not be executed, but will generate an error in the queue. Reading the queue may not tell you which parameter caused the error. To do this, query the command itself to determine which parameters have been set. When the queried setting is different than what it is intended to be, the error is then located. For example, the following shows a typical command and the query form of the command:

```
:SOUR:CLOSE (@100)  command to close a channel
:SOUR:CLOSE? (@100) command to query a channel
```

SCPI commands have levels similar to a computer path name. A colon separates the different levels. The spelling in each level must be correct or the instrument generates an error. Note that each command also has an abbreviated version. However, the command can only be sent as the full command or the abbreviated version. The abbreviated version are normally shown as upper case letters in the instrument manuals. All commands can be sent either using upper or lower case letters or a combination thereof.

Some common command errors are as follows:

- command spelling
- missing the space between the command and parameter

- parameter out of range
- setting conflict caused by coupled commands not sent as a group (see “Step 8: Check that Coupled Commands are Sent as a Group”)

Step 5: Check the Program is Trying to Enter the Same Amount

An error is caused if the program is set to receive different amount of data than the instrument is attempting to output. Do the following:

- Check the parameters in Step 4 and make sure the number of data items that you programmed to receive
- Determine if the arrays in the program are dimensioned correctly (e.g., arrays start with 0 or 1)
- Be sure you know that multiple results are returned as a comma separated list

The following HP BASIC is a typical example that receives multiple readings:

```
DIM A(1:10)                ! Dimension array for 10 readings
OUTPUT 70903;"SAMP:COUNT 10;;READ?" ! Take 10 readings using the HP 1326 Multimeter
ENTER 70903;A(*)          ! Enter all 10 readings
```

Step 6: Check the Instrument’s Arm/Trigger Subsystem

All SCPI instruments follow an Arm/Trigger model that is described in the SCPI document. This model has both required and optional levels, as follows:

Model Level	Required/Optional	Comment
IDLE	Required	
INITiated	Required	
LAYER <x>	Optional	This is the slowest occurring enabling event
LAYER <2>	Optional	
LAYer1	Optional	
TRIGger	Optional	This is the fastest occurring enabling event
Sequence Operation	Required	This is the final action

The Arm/Trigger subsystem starts with the IDLE state which occurs after a power-on, :ABORt, *RST, or a previous Arm/Trigger cycle has completed. When in the IDLE state, each of the lower levels is configured for their parameters. Some examples are:

- SOURCE - The source of the enabling signal, i.e., BUS, EXTernal
- SLOPe - Selects if an event occurs on POSitive or NEGative edges
- COUNT - Specifies the number of times the ARMING will be true
- ECOUNT - Specifies the number of times the ARMING signal occurs before one true condition, etc.

After configuring all the layers, send the INITiate command to move into the INITIATED state. This then enables all lower layers to start their activity. Since each instrument uses different layers, consult the manual before programming. Look for a Trigger diagram and then look at the commands it references. Some examples using HP BASIC are as follows:

1. Take One Voltmeter Reading - This example uses the HP E1326 Multimeter


```
OUTPUT 70903;"CONF:VOLT:DC (@100)    ! Setup multimeter to take one reading
```



```
OUTPUT 70903;"INIT;;FETCH?"           ! Initiate and read data
ENTER 70903;A                          ! Enter the reading
```

2. Function Generator is to Output 100 Cycles of a Waveform after an External Trigger - This example uses the HP E1340 Arbitrary Function Generator to output the waveforms after receiving a trigger signal on its "Aux In" port.

```
OUTPUT 70910;"ARM:STAR:LAY2:SOUR EXT;"; ! Arm source = Aux In port
OUTPUT 70910;"ARM:STAR:LAY2:COUN INF;"; ! Infinite number of Aux In arms
OUTPUT 70910;"ARM:STAR:LAY1:COUN 1e2"   ! Set for 100 cycles
OUTPUT 70910;"INIT"                     ! Enable everything to begin
```

Step 7: Check that Coupled Commands are Sent as a Group

Coupled commands are SCPI commands that have parameters which all must be sent to the instrument before they can be executed. This is necessary to transition from one set of parameters to another set. If coupled commands are not sent as one, the instrument generates a "Setting conflict" error.

To send coupled commands, each command must be separated by a semicolon. Once the coupled commands are sent, a normal Line Feed (LF), Line Feed with EOI, or an EOI should be sent to indicate the end of the coupled commands. Use the following two methods to send coupled commands in HP BASIC.

1. Send as separate commands, except disable the Line Feed with EOI by placing a semicolon at then end of the OUTPUT statement. Note that the last OUTPUT statement sends a Line Feed with EOI.

```
OUTPUT 70910;"SOUR:ROSC:SOUR INT;";
OUTPUT 70910;":SOUR:FREQ:MODE FSK;";
OUTPUT 70910;":SOUR:FREQ:FSK 10e3,20e3;"
OUTPUT 70910;":SOUR:FUNC:SHAP SIN;";
OUTPUT 70910;":SOUR:VOLT:LEV:IMM:AMPL 5V"
```

2. Send all commands in a single command string, shown as follows:

```
OUTPUT 70910;"SOUR:ROSC:SOUR INT;;SOUR:FREQ:MODE FSK;;SOUR:FREQ:FSK
10e3,20e3;;SOUR:FUNC:SHAP SIN;;SOUR:VOLT:LEV:IMM:AMPL 5V"
```

Step 8: Check for Command Synchronization

IEEE 488.2 specifies that all instruments have an input buffer and that execution of commands does not start until a program message terminator is received (i.e., Line Feed, Line Feed with EOI, or EOI). For a single instrument this causes no problems. However, if a single computer sends commands to more than one instrument, the second instrument may execute the commands before the first instrument executes the commands.

So synchronize instruments, send a command to the first instrument to output data. The computer then waits for the data to be returned before it sends the commands to the second instrument. A special IEEE 488.2

command known as *OPC? was created to do this. This command outputs a "1" whenever the instrument has completed executing all previous commands.

The following is an example that closes relays on a switch module, waits for the command to complete, and then initiates a multimeter to make a measurement.

```
OUTPUT 70914;"CLOSE (@100,101,190);*OPC?"    ! Close the relays
ENTER 70914;A                                ! Wait for relays to close
OUTPUT 70903;"READ?"                          ! Make the measurement
```

Automating the Debugging Steps

The previous information defines a general process for debugging programs that control VXI SCP instruments. The following describes how to automate many debugging steps previously explained. The following uses a program that detects errors and displays the information you need to debug your program.

RN13_RMB Program

The "RN13_RMB" program used here uses HP BASIC as the program language. To fully understand this programming language, refer to its manual. However, several of the important debugging features are highlighted when describing the theory of the "RN13_RMB" program. The program "RN13_RMB" has been developed for the HP E1306 Command Module and the HP E1326 5 1/2 Digit Multimeter. The program is available on the "Verification and Example Programs Disk" that came with the command module.

Using other Program Languages

The "Verification and Example Programs Disk" also contains the "RN13_RMB" program using other program languages and libraries. These include the following:

- Visual BASIC using the HP Standard Instrument Control Library (SICL) - RN13_VB.FRM program
- C/C++ using the HP Standard Instrument Control Library (SICL) - RN13_VC.C program
- C using the HP HP-IB Command Library - RN13_CC.C program
- QuickBASIC using the HP HP-IB Command Library - RN13_QBC.BAS program

Note that the C or C/C++ programs use functions instead of subprograms to separate the different program operations.

Using the Program

The following shows how to use the program with your application code.

Step 1: Run Program Without Application Code

Run the program with no application code in Subprogram "Main". This verifies that you can successfully communicate with both the HP E1326 and the System instrument. If errors occur, calling Subprogram "E1300_stat", or pressing the softkey "SYS_STAT", shows information about all modules in the

mainframe. The logical addresses along with the VXI information about the card will enable you to check that correct addresses are being used.

Step 2: Begin Writing the Application program

Begin writing your application in Subprogram "Main". The first thing you should always do is fully reset any instruments your application will be using. Lines 2250-2280 in Subprogram "Main" reset the HP E1326.

Step 3: Writing Your Application

Now write your application and then run the program. If your application terminates successfully, you will see the messages:

```
Checking for E 13xx Errors at the end of the program
SYSTEM ERROR +0,"No error"
DVM ERROR +0,"No error"
```

Program Description

In Subprogram "Main", lines 2300-2330 are the beginning of an application that written with an error in it to demonstrate the program's error handling. The error is in line 2310, as follows:

```
2310 OUTPUT @Dvm;"SAMP:COUNT5::READ?"
```

When running the program, the resultant output shows this error:

```
ERROR 168 IN 2330 I/O timeout
DVM ERROR "Undefined header"
```

Next, the program automatically queried all of the HP E1326 command parameters and showed that:

```
SAMP:COUNT? = +1
```

Note that the I/O timeout in line 2320 was caused by an undefined header (i.e., incorrect SCPI command) in some command. The actual SAMP:COUNT is 1, not 5, as intended thus, the undefined header is probably in "SAMP:COUNT5". Consulting the manual on this command shows that a space is necessary between the "T" and the "5".

The second error:

```
DVM ERROR "Query UNTERMINATED"
```

is ignored because the process of querying for errors caused it. A "Query UNTERMINATED" error occurs any time a second query command (i.e., a command with a "?" in it) occurs before the data from the first is retrieved.

Program Theory

Now that you have seen how to use this Debugging, ERROR and TIMEOUT handling program, the following explains some of the theory and mechanics of how it works.

Checking the Error Queue

In any VXI SCPI instrument, command errors such as syntax errors accumulate in the instrument's error queue. When an error is present in a command that is received, no action on that command is executed other than logging a message into the instrument error queue. Reading the error queue is critical because no visible indication of an error may be generated.

When the error queue has an error in it, the task is to discover which command caused it. Since most commands set parameters, when a command has a error, this parameter is not executed. A very effective debugging technique is to query previously sent commands for their current setting. When a queried setting doesn't match what you intended it to be, you have just located the error.

Using TIMEOUTS

Checking for errors after every command will find most errors. However, this decreases your overall system performance even after all bugs have been removed. Most errors in a program causes your application program to "hang up". Thus, TIMEOUTs are an excellent indication that an error has occurred. A strategy of checking for errors at the end of your program (or whenever your program hangs up) produces a program with no speed penalty and is very effective at finding errors.

This debugging technique is automated by the program "RN13_RMB". The shell program traps BASIC ERRORS and TIMEOUTS. It then queries for instrument errors, and if any occur, it reads and prints out the queries to its entire command set. It also does the error query at the very end of your application program. Use this information to compare the HP E1326 DMM state with the intended parameters.

For rapid debugging, you need to see program flow, program variables, instrument errors and instrument states. Making this all visible and easily accessible is the main advantage of a good DEBUGGING, ERROR and TIMEOUT handling shell such as "RN13_RMB".

Preventing Hang-Ups

The "Main" section of the program (lines 10-220) act as a shell that prevents your basic program from ever hanging up due to I/O that is not proceeding. It identifies the LINE NUMBER of lines that have RUN TIME ERRORS or that have TIMED OUT.

Lines 70 and 80, combined with placing all application code in a lower level context (Main), is what causes a TIMEOUT to be reported as an ERROR. BASIC ERRORS contain the line number whereas, TIMEOUTs do not. The BASIC ERRORS method provides the advantage of providing the line number of a TIMEOUT. The "ON TIMEOUT 8,3 GOTO End" interrupt branching can only occur if you are in the same context when the TIMEOUT occurs. Since all application code is in a lower level context (Main), this branch cannot be taken. Since this is a fatal condition, BASIC reports the timeout as a ERROR.

Context levels in BASIC provide a level of interrupt flow control. In BASIC the interrupt destinations specified by GOSUB or GOTO are only taken when you are in the defining context. CALL or RECOVER destinations are branched to when in the current or lower level context. All lower level contexts inherit the interrupt specifications of the current context, however, lower contexts may freely redefine this. This allows application code starting in SUB Main to override the ON TIMEOUT and ON ERROR that are established in lines 70 and 80. However, if this is not done a very good default error handler is already in effect because of the inheritance.

Using the "E13xx_errors" Subprogram

When the shell detects an ERROR, it will call the subprogram "E13xx_errors". This queries instruments for errors. Querying instruments for errors is one of the most important steps in debugging I/O code. Often timeouts are caused by doing an ENTER after having sent incorrect commands to instruments. If the subprogram "E13xx_errors" detects any errors in an instrument, it also calls a routine that queries instruments for all of its command parameter values. You can use this information to help locate the bug.

To expand this shell to include more instruments, add the following:

1. ASSIGN a name and address to the new instrument i.e. lines 40, 50.
2. Place the new instrument name into the labeled common "COM /Instr".
3. Add an error reading loop for each instrument in the system (lines 300-380) into the subprogram "E13xx_errors".
4. Add a subprogram such as "E1300_stat" or "E1326_stat" that reads all of the command parameter values for the new instrument. Writing this program is an excellent way to become familiar with a new instrument.

Using "PAUSE", "Step", and "CONT"

Since the Shell prevents I/O hang ups, BASIC's PAUSE, STEP, and CONT may now be used effectively to debug programs. When a program doesn't seem to be proceeding correctly, use PAUSE then STEP to trace the flow. Type variable names to see their value when PAUSED, and finally use CONT to proceed at full speed.

Using Softkeys

The following four softkeys to aid in debugging are provided as a feature of the main line of this program.

QUIT& ?	Checks for instrument errors and then stop.
END!	Ends the program immediately with no error checking.
SYS_STAT	Queries the System instrument for all command parameter settings and print out information on logical addresses in the system.
DVM_STAT	Queries the DMM instrument for all command parameter settings.

Starting the Application Code

Application code must start in the Subprogram "Main" for this shell to catch errors and time outs.

Index

A

AC power fuse, installing, 1-3
Address, unique logical, 1-9
Address:
 logical, 1-9
 secondary HP-IB, 1-6 - 1-8
 setting plug-in module, 1-9
Addresses, determine logical, B-2
Addressing
 HP-IB, B-1
 logical, B-1
Addressing, HP-IB, 2-1
Analog bus cables, connecting, 1-13
Apply AC power, 1-16
Automating the Debugging Steps, B-7

B

BASIC, using HP, 2-13
Block, terminal, 1-1
Bus cables:
 analog bus, 1-13
 digital bus, 1-13

C

Cables:
 analog bus, 1-13
 connecting interface, 1-14
 connecting scanning multimeter, 1-13
 custom RS-232, 1-15
 digital bus, 1-13
 HP-IB, 1-14
 HP-IB, part numbers, 1-14
 RS-232, 1-15
Cardcage
 See mainframe
Caution:
 disconnect power before installing modules, 1-5,
 1-12
 installing modules, vii
 static electricity, vii
Channels, scanned, 1-7

Checking:

 and setting the system time, 1-21
 for start-up errors, 1-20
 for system errors, 1-21
 the error queue, B-9

Closing channels on multiple modules, 1-8

Code, starting the application, B-11

Command errors, A-4

Command module, installing, 1-5

Commands, sending SCPI, 2-2

 C, 2-11

 C/C+ +, 2-6

 HP BASIC, 2-13

 Terminal, 2-15

 Visual BASIC, 2-3

Communication Between Mainframe And
Computer. none, A-1

Communication, determining instrument, B-3

Compiling a program, C, 2-11

Config error 11. invalid instrument address, A-3

Config error 13. logical address or IACK switch set
wrong, A-3

Configurations, instrument, 1-6

Configuring:

 scanning multimeter instrument, 1-7

 single module instruments, 1-6

 switchbox instrument, 1-8

Connecting the terminal, 2-15

Connecting:

 analog bus cables, 1-13

 HP-IB cable, 1-14

 interface cables, 1-14

 RS-232 cable, 1-15

 scanning multimeter cables, 1-13

 standby DC power, 1-17

Creating a scanning multimeter, 1-7

Creating a switchbox, 1-8

Custom cable, RS-232, 1-15

D

Data, example to read formatted C/C+ +, 2-9

Data, example to send and read formatted

C/C+ +, 2-9

Data, example to send formatted C/C+ +, 2-9

- Data, program example to read unformatted C/C++ , 2-8
- Data, program example to send and read unformatted C/C++ , 2-8
- Data, program example to send unformatted C/C++ , 2-8
- Data, receiving, 2-2
 - C, 2-11
 - C/C++ , 2-6 - 2-7
 - HP BASIC, 2-13
 - Visual BASIC, 2-3
- Data, sending SCPI commands and receiving C/C++ , 2-6
 - Visual BASIC, 2-2
- Data, using single functions to send and receive C/C++ , 2-8
- DC power:
 - connecting, 1-17
- Description, program, B-8
- Determine:
 - additional information, B-2
 - instrument configurations, 1-6
 - logical addresses, B-2
- Determining instrument communication, B-3
- Determining system information, B-2
- Device driver not found warning, 1-18
- Device drivers, downloading, 1-18
- Device-Specific errors, A-4
- Digital bus cables, connecting, 1-13
- DOS, programs for, 1-19
- Download device drivers, 1-18
- Driver not found warning, 1-18
- Drivers, downloading device, 1-18
- DVM or DMM
 - See multimeter

E

- Error types, A-4
- Error: 3: config warning. device driver not found, A-3
- Errors:
 - checking for start-up, 1-20
 - checking for system, 1-21
- Errors:
 - command, A-4
 - device-specific, A-4
 - execution, A-4
 - query, A-4
- Example:
 - programs, 2-1
 - scanning multimeter instrument, 1-11

- single module instrument, 1-10
- switchbox instrument, 1-11
 - to read formatted data C/C++ , 2-9
 - to send and read formatted data C/C++ , 2-9
 - to send formatted data C/C++ , 2-9
- Example program:
 - C, 2-12
 - HP BASIC, 2-14
 - Visual BASIC, 2-4
- Executing a program, C, 2-10
- Execution errors, A-4

F

- From the command line C/C++ , 2-5
- From the windows interface C/C++ , 2-6
- Fuse, installing, 1-3

G

- Grounding and power warning, 1-16
- Guidelines, logical address, 1-9

H

- Hang-ups, preventing, B-9
- How to run a program:
 - C/C++ , 2-5
 - Visual BASIC, 2-2
- HP E1326B Multimeter in scanning multimeter, 1-7
- HP part numbers:
 - HP-IB cables, 1-14
 - RS-232 cables, 1-15
- HP VIC, 1-1
- HP-IB:
 - addressing, 2-1
 - cable part numbers, 1-14
 - cable, connecting, 1-14
 - command library, 2-10
 - secondary address, 1-6 - 1-8

I

- Identifier, instrument, 1-9
- Information, determine additional, B-2
- Information, determining system, B-2
- Installation steps, 1-2
- Installing modules caution, vii
- Installing plug-in modules, 1-12
- Instrument:

- configurations, determining, 1-6
- identifier, 1-9
- scanning multimeter, 1-11
- single module, 1-10
- switchbox, 1-11

Instruments:

- scanning multimeter configuration, 1-7
- scanning multimeter, configuring, 1-7
- single module configuration, 1-6
- switchbox configuration, 1-8

Interface cables, connecting RS-232, 1-15

Interface, from the windows C/C++ , 2-6

L

Languages, using other program, B-7

Line power fuse, installing, 1-3

Listing, system error message, A-4

Logical address or IACK switch set wrong, A-3
config error, A-3

Logical address:

- guidelines, 1-9
- scanning multimeter, 1-11
- setting plug-in module, 1-9
- single module instrument, 1-10
- switchbox instrument, 1-11
- unique, 1-9

Logical and HP-IB addressing, B-1

M

Mainframe:

- applying AC power, 1-16
- connecting DC power, 1-17
- installing fuse, 1-3
- installing modules in, 1-12
- rack mounting, 1-4

Measurements, scanned, 1-7 - 1-8

Menu, select instrument from an instrument, 2-16

Menu, select instrument from main, 2-15

Messages, A-2 - A-3

Modules:

- allowed in scanning multimeter, 1-7
- allowed in switchbox, 1-8
- installing plug-in, 1-12
- multiple module instruments, 1-7
- scanning multimeter example, 1-11
- single example, 1-10
- single module instruments, 1-6
- switchbox example, 1-11
- unassigned, 1-9

Multimeter, scanning:, 1-11

- creating, 1-7

Multiple module instruments, configuring, 1-7 - 1-8

Multiplexers:

- allowed in switchbox, 1-8
- as part of scanning multimeter, 1-7
- grouping together, 1-8

Mux

See multiplexer

N

No Communication Between Mainframe And Computer, A-1

O

Open communication path

- C/C++ , 2-6
- Visual BASIC, 2-3

Operation, verify, 1-19

P

Part numbers:

- HP-IB cables, 1-14
- RS-232 cables, 1-15

Path, open communication

- C/C++ , 2-6
- Visual BASIC, 2-3

Plug-in module address setting, 1-10

Power and grounding warning, 1-16

Power applied:

- caution, vii
- warning, 1-3

Power fuse, installing, 1-3

Power, applying, 1-16

Preventing hang-ups, B-9

Program description, B-8

Program example

- C, 2-12
- HP BASIC, 2-14
- Visual BASIC, 2-4

Program example to read unformatted data C/C++ , 2-8

Program example to send and read unformatted data C/C++ , 2-8

Program example to send unformatted data C/C++ , 2-8

Program message terminator, B-3

Program theory, B-9

Program, compiling a C, 2-11

Program, executing a C, 2-10

Program, how to run:
 C/C++ , 2-5
 Visual BASIC, 2-2
Program, RN26_RMB, B-7
Program, Step 12A: verify using the VERF_XXX,
1-19
Program, step 12B: verifying using other than the
VERF_XXX, 1-20
Program, using the, B-7
Programs:
 example, 2-1
 for DOS, 1-19
 for windows, 1-20
 steps to debug, B-1
 supported C, 2-10
 verification, 2-1
 verification and example, 2-1
Protocol settings, RS-232, 1-15

Q

Query errors, A-4
Queue, checking the error, B-9
Queue, reading the error, A-3

R

Rack mounting the mainframe, 1-4
Reading the error queue, A-3
Receiving data, 2-2
 C, 2-11
 C/C++ , 2-6 - 2-7
 HP BASIC, 2-13
 Visual BASIC, 2-3
RN26_RMB program, B-7
RS-232:
 cable, connecting, 1-15
RS-232:
 custom cable, 1-15
 protocol settings, 1-15

S

Scanning DVM or DMM
 See Scanning multimeter
Scanning multimeter example, 1-11
Scanning multimeter:, 1-11
 connecting cables, 1-13
 instrument, configuration, 1-7
 multiplexers in, 1-7
Scanning voltmeter
 See scanning multimeter

Scanning:
 channels, 1-7
 maximum rates, 1-13
 measurements, 1-8
Schematic, RS-232 cable, 1-15
Secondary address, HP-IB, 1-7 - 1-8
Secondary address:
 HP-IB, 1-6
Select instrument from an instrument menu, 2-16
Select instrument from main menu, 2-15
Sending SCPI commands, 2-2
 C, 2-11
 C/C++ , 2-6
 HP BASIC, 2-13
 Terminal, 2-15
 Visual BASIC, 2-3
Sending SCPI commands and receiving data
 C/C++ , 2-6
 Visual BASIC, 2-2
Setting:
 logical address, 1-10
 plug-in module logical addresses, 1-9
Shock hazard warnings, vii
SICL
 HP, 2-2, 2-5
 using C/C++ , 2-5
 using visual basic, 2-2
Single module instrument example, 1-10
Single module instrument:
 configuring, 1-6
 example, 1-10
Softkeys, using, B-10
Standalone instruments, configuring, 1-6
Standby DC power, connecting, 1-17
Start-Up errors and messages, A-2
Starting the application code, B-11
Static electricity caution, vii
Step 2: rack mount the mainframe, 1-4
Step 3: install command module, 1-5
Step 4: determine instrument configurations, 1-6
Step 5: set plug-in module logical addresses, 1-9
Step 6: install plug-in modules, 1-12
Step 7: connect analog bus cables, 1-13
Step 8: connect interface cables, 1-14
Step 9: apply AC power, 1-16
Step 10: connect standby DC power, 1-17
Step 11: download device drivers, 1-18
Step 12: verify operation, 1-19
Step 12A: verify using the VERF_XXX program,
1-19
Step 12B: verifying using other than the
VERF_XXX program, 1-20

Step 1: install fuse, 1-3

Steps:

- automating the debugging steps, B-7

- installation, 1-2

- to debug programs, B-1

Subprogram, using the "E13xx_errors", B-10

Supported C programs, 2-10

Switch

- See also multiplexer

Switch modules allowed in switchbox, 1-8

Switchbox example, 1-11

Switchbox:

- configuring, 1-8

- logical addresses, 1-11

- modules allowed, 1-8

- multiple module, 1-8

- single module, 1-8

System error message listing, A-4

System errors, A-3

System errors and messages, A-3

System time

- checking, 1-21

- setting, 1-21

T

Terminal block, 1-1

Terminal, connecting the, 2-15

Terminal, using a, 2-15

Terminator, program message, B-3

Theory, program, B-9

TIMEOUTS, using, B-9

Types, error, A-4

U

Unassigned module, 1-9

Unique logical address, 1-9

Using a terminal, 2-15

Using:

- C and the HP-IB command library, 2-10

- C/C++ and HP SICL, 2-5

- HP BASIC, 2-13

- other program languages, B-7

- single functions to receive data C/C++, 2-8

- single functions to send and receive data C/C++,

2-8

- single functions to send data C/C++, 2-8

- softkeys, B-10

- the "E13xx_errors" subprogram, B-10

- TIMEOUTS, B-9

- visual BASIC and HP SICL, 2-2

V

Verification and example programs, 2-1

Verification programs, 2-1

VIC, 1-1

Virtual instrument

- See scanning multimeter or switchbox

W

Warning:

- device driver not found, 1-18

- power and grounding requirements, 1-16

- remove power cord, 1-3

- shock hazards, vii

Warnings and cautions, vii

Windows, programs for, 1-20

Wiring, RS-232 cable, 1-15

HEADQUARTERS OFFICES

If there is no sales office listed for your area, contact one of these headquarters offices.

NORTH/CENTRAL AFRICA

Hewlett-Packard S.A.
7, rue du Bois-du-Lan
CH-1217 MEYRIN 1, Switzerland
Tel: (022) 83 12 12
Telex: 27835 hmea
Cable: HEWPACKSA Geneva

ASIA

Hewlett-Packard Asia Ltd.
47/F, 26 Harbour Rd.,
Wanchai, HONG KONG
G.P.O. Box 863, Hong Kong
Tel: 5-8330833
Telex: 76793 HPA HX
Cable: HPASIAL TD

EASTERN EUROPE

Hewlett-Packard Ges.m.b.H.
Liebigasse 1
P.O.Box 72
A-1222 VIENNA, Austria
Tel: (222) 2500-0
Telex: 13 4425 HEPA A

NORTHERN EUROPE

Hewlett-Packard S.A.
V. D. Hooplaan 241
P.O.Box 999
NL-1183 AG AMSTELVEEN
The Netherlands
Tel: 20 547999
Telex: 18 919 hpner

SOUTH EAST EUROPE

Hewlett-Packard S.A.
World Trade Center
110 Avenue Louis Casai
1215 Cointrin, GENEVA, Switzerland
Tel: (022) 98 96 51
Telex: 27225 hpser

EASTERN USA

Hewlett-Packard Co.
4 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 948-6370

MIDWESTERN USA

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800

SOUTHERN USA

Hewlett-Packard Co.
2000 South Park Place
ATLANTA, GA 30339
Tel: (404) 955-1500

WESTERN USA

Hewlett-Packard Co.
5161 Lankershim Blvd.
NORTH HOLLYWOOD, CA 91601
Tel: (818) 505-5600

MEDITERRANEAN AND MIDDLE EAST

Hewlett-Packard S.A.
Mediterranean and Middle East
Operations
Atrina Centre
3z Kifissias Ave.
Paradissos-Amarousion, ATHENS
Greece
Tel: 682 88 11
Telex: 21-6588 HPAT GR
Cable: HEWPACKSA Athens

OTHER INTERNATIONAL AREAS

Hewlett-Packard Co.
Intercontinental Headquarters
3495 Deer Creek Road
PALO ALTO, CA 94304
Tel: (415) 857-1501
Telex: 034-8300
Cable: HEWPACK

ARGENTINA

Hewlett-Packard Argentina S.A.
Montaneses 2140/50
1428 BUENOS AIRES
Tel: 781-4059/69
Cable: HEWPACKARG

AUSTRALIA

Hewlett-Packard Australia Ltd.
31-41 Joseph Street
P.O. Box 221
BLACKBURN, Victoria 3130
Tel: 895-2895
Telex: 31-024
Cable: HEWPARD Melbourne

Hewlett-Packard Australia Ltd.
17-23 Talavera Road
P.O. Box 308
NORTH RYDE, N.S.W. 2113
Tel: 888-4444
Telex: 21561
Cable: HEWPARD Sydney

AUSTRIA

Hewlett-Packard Ges.m.b.H.
Liebigasse 1
P.O. Box 72
A-1222 VIENNA
Tel: (0222) 2500-0
Telex: 134425 HEPA A

BELGIUM

Hewlett-Packard Belgium S.A./N.V.
Blvd de la Woluwe, 100
Woluwedal
B-1200 BRUSSELS
Tel: (02) 762-32-00
Telex: 23-494 paloben bru

BRAZIL

Hewlett-Packard do Brasil
I.e.C. Ltda.
Alameda Rio Negro, 750
ALPHAVILLE
06400 Barueri SP
Tel: (011) 421.1311
Telex: (011) 33872 HPBR-BR
Cable: HEWPACK Sao Paulo

Hewlett-Packard do Brasil
I.e.C. Ltda.
Praia de Botafogo 228
6° Andar-conj 614

Edificio Argentina - Ala A
22250 RIO DE JANEIRO, RJ
Tel: (021) 552-6422
Telex: 21905 HPBR-BR
Cable: HEWPACK Rio de Janeiro

CANADA

Hewlett-Packard (Canada) Ltd.
11120-178th Street
EDMONTON, Alberta T5S 1P2
Tel: (403) 486-6666

Hewlett-Packard (Canada) Ltd.
17500 Trans Canada Highway
South Service Road
KIRKLAND, Quebec H9J 2X8
Tel: (514) 697-4232
Telex: 058-21521

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
Telex: 069-8644

Hewlett-Packard (Canada) Ltd.
2670 Queensview Dr.
OTTAWA, Ontario K2B 8K1
Tel: (613) 820-6483

CHINA, People's Republic of

China Hewlett-Packard Co., Ltd.
P.O. Box 9610, Beijing
4th Floor, 2nd Watch Factory Main
Bldg.
Shuang Yu Shou, Bei San Huan Road
Hai Dian District
BEIJING
Tel: 28-0567
Telex: 22601 CTSHP CN
Cable: 1920 Beijing

DENMARK

Hewlett-Packard A/S
Kongevej 25
DK-3460 BIRKERØED
Tel: (02) 81-66-40
Telex: 37409 hpas dk

FINLAND

Hewlett-Packard Oy
Pilsankalliontie 17
02200 ESPOO
Tel: 00358-0-88721
Telex: 121563 HEWPA SF

FRANCE

Hewlett-Packard France
Chemin des Mouilles
Boîte Postale 162
69131 ECULLY Cedex (Lyon)
Tel: (78) 133-81-25
Telex: 310617F

Hewlett-Packard France
Parc d'activités du Bois Briard
Avenue du Lac
91040 EVRY Cedex
Tel: (60) 77-83-83
Telex: 692315F

Hewlett-Packard France
Zone Industrielle de Courtaboeuf
Avenue des Tropiques
91947 LES ULIS Cedex (Orsay)
Tel: (69) 07-78-25
Telex: 600048F

GERMAN FEDERAL REPUBLIC

Hewlett-Packard GmbH
Vertriebszentrum Mitte
Hewlett-Packard-Strasse
D-6380 BAD HOMBURG
Tel: (06172) 16-0
Fax: (06172) 16-1309

Hewlett-Packard GmbH
Vertriebszentrum Südwest
Schickardstrasse 2
D-7030 BÖBLINGEN
Tel: (07031) 14-0
Fax: (07031) 14-6429

Hewlett-Packard GmbH
Vertriebszentrum Süd
Eschenstrasse 5
D-8028 TAUFKIRCHEN
Tel: (089) 61207-0
Fax: (089) 61207-300

GREECE

Hewlett-Packard A.E.
178, Kifissias Avenue
6th Floor
Halandri-ATHENS
Greece
Tel: 647 1543, 647 1673, 6472971
Telex: 221 286 HPHLGR

HONG KONG

Hewlett-Packard Hong Kong, Ltd.
G.P.O. Box 795
5th Floor, Sun Hung Kai Centre
30 Harbour Road
HONG KONG
Tel: 5-8323211
Telex: 66678 HEWPA HX
Cable: HEWPACK HONG KONG

ICELAND

Hewlett-Packard Iceland
Hoefdabakka 9
110 REYKJAVIK
Tel: (1) 67 1000

INDIA

Blue Star Ltd.
13 Community Center
New Friends Colony
NEW DELHI 110 065
Tel: 633182, 636674
Telex: 031-61120
Cable: BLUEFROST

INDONESIA

BERCA Indonesia P.T.
P.O.Box 2497/Jkt
Antara Bldg., 11th Floor
Jl. Medan Merdeka Selatan 17
JAKARTA-PUSAT
Tel: 343989
Telex: 46748 BERSAL IA

IRELAND

Hewlett-Packard Ireland Ltd.
82/83 Lower Leeson Street
DUBLIN 2
Tel: 0001 608800
Telex: 30439

ISRAEL

Computation and Measurement
Systems (CMS) Ltd.
11 Masad Street
67060
TEL-AVIV
Tel: 388 388
Telex: 33569 Motil IL

ITALY

Hewlett-Packard Italiana S.p.A.
Via G. di Vittorio 9
I-20063 CERNUSCO SUL
NAVIGLIO
(Milano)
Tel: (02) 923691
Telex: 334632

Hewlett-Packard Italiana S.p.A.
Viale C. Pavese 340
I-00144 ROMA EUR
Tel: (06) 54831
Telex: 610514

JAPAN

Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg.,
4-20 Nishinakajima, 5 Chome
Yodogawa-ku
OSAKA, 532
Tel: (06) 304-6021
Telex: YHPOSA 523-3624
Yokogawa-Hewlett-Packard Ltd.
29-21 Takaido-Higashi, 3 Chome
Suginami-ku TOKYO 168
Tel: (03) 331-6111
Telex: 232-2024 YHPTOK

Yokogawa-Hewlett-Packard Ltd.
Yasuda Seimei Nishiguchi Bldg.
30-4 Tsuruya-cho, 3 Chome
Kanagawa-ku, YOKOHAMA 221
Tel: (045) 312-1252



SALES & SUPPORT OFFICES

Arranged alphabetically by country

KOREA

Samsung Hewlett-Packard Co. Ltd.
Dongbang Yeoeuido Building
12-16th Floors
36-1 Yeoeuido-Dong
Youngdeungpo-Ku
SEOUL
Tel: 784-4666, 784-2666
Telex: 25166 SAMSAN K

MALAYSIA

Hewlett-Packard Sales (Malaysia)
Sdn. Bhd.
9th Floor
Chung Khia Bank Building
46, Jalan Raja Laut
50350 KUALA LUMPUR
Tel: 2986555
Telex: 31011 HPSM MA

MEXICO

Hewlett-Packard de Mexico,
S.A. de C.V.
Monte Pelvoux No. 111
Lomas de Chapultepec
11000 MEXICO, D.F.
Tel: 5-40-62-28, 72-66, 50-25
Telex: 17-74-507 HEWPACK MEX

NETHERLANDS

Hewlett-Packard Nederland B.V.
Startbaan 16
NL-1187 XR AMSTELVEEN
P.O. Box 667
NL-1180 AR AMSTELVEEN
Tel: (020) 547-6911
Telex: 13 216 HEPA NL

NORWAY

Hewlett-Packard Norge A/S
Osterdalen 16-18
P.O. Box 34
N-1345 OEESTERAAS
Tel: 0047/2/24 60 90
Telex: 76621 hpnas n

PUERTO RICO

Hewlett-Packard Puerto Rico
101 Muñoz Rivera Av
Esu. Calle Ochoa
HATO REY, Puerto Rico 00918
Tel: (809) 754-7800

SAUDI ARABIA

Modern Electronics Establishment
Hewlett-Packard Division
P.O. Box 1228
Redec Plaza, 6th Floor
JEDDAH
Tel: 644 96 28
Telex: 4027 12 FARNAS SJ
Cable: ELECTA JEDDAH

SINGAPORE

Hewlett-Packard Singapore (Sales)
Pte. Ltd.
#08-00 Inchcape House
450-2 Alexandra Road
Alexandra P.O. Box 58
SINGAPORE, 9115
Tel: 4731788
Telex: 34209 HPSGSO RS
Cable: HEWPACK, Singapore

SOUTH AFRICA

Hewlett-Packard So Africa (Pty.) Ltd.
9 Eastern Service Road
Eastgate Ext. 3
SANDTON 2144
Tel: 802-5111, 802-5125
Telex: 4-20877 SA
Cable: HEWPACK Johannesburg

SPAIN

Hewlett-Packard Española, S.A.
Ctra. de la Coruña, Km. 16, 400
Las Rozas
E-MADRID
Tel: (1) 637.00.11
Telex: 23515 HPE

SWEDEN

Hewlett-Packard Sverige AB
Skalhottsgatan 9, Kista
Box 19
S-16393 SPÅNGA
Tel: (08) 750-2000
Telex: (854) 17886
Telefax: (08) 7527781

SWITZERLAND

Hewlett-Packard (Schweiz) AG
7, rue du Bois-du-Lan
Case postale 365
CH-1217 MEYRIN 1
Tel: (0041) 22-83-11-11
Telex: 27333 HPAG CH

TAIWAN

Hewlett-Packard Taiwan Ltd.
8th Floor, Hewlett-Packard Building
337 Fu Hsing North Road
TAIPEI
Tel: (02) 712-0404
Telex: 24439 HEWPACK
Cable: HEWPACK Taipei

TURKEY

Teknim Company Ltd.
Iran Caddesi No. 7
Karaklidere
ANKARA
Tel: 275800
Telex: 42155 TKNM TR

UNITED KINGDOM

ENGLAND

Hewlett-Packard Ltd.
Heathside Park Road
Cheadle Heath
STOCKPORT
Cheshire
SK3 ORB
Tel: 061-428-0828
Telex: 668068

Hewlett-Packard Ltd.

King Street Lane
Winnersh, WOKINGHAM
Berkshire RG11 5AR
Tel: 0734 784774
Telex: 847178

SCOTLAND

Hewlett-Packard Ltd.
SOUTH QUEENSFERRY
West Lothian, EH30 9TG
Tel: 031 331 1188
Telex: 72682

UNITED STATES

Alabama

Hewlett-Packard Co.
420 Wynn Drive
HUNTSVILLE, AL 35805
Tel: (205) 830-2000

Arizona

Hewlett-Packard Co.
8080 Pointe Parkway West
PHOENIX, AZ 85044
Tel: (602) 273-8000

California

Hewlett-Packard Co.
1421 S. Manhattan Av.
FULLERTON, CA 92631
Tel: (714) 999-6700

Hewlett-Packard Co.

5651 West Manchester Ave.
LOS ANGELES, CA 90045
Tel: (213) 337-8000
Telex: 910-325-6608

Hewlett-Packard Co.

9606 Aero Drive
SAN DIEGO, CA 92123
Tel: (619) 279-3200

Hewlett-Packard Co.

3003 Scott Boulevard
SANTA CLARA, CA 95054
Tel: (408) 988-7000
Telex: 910-338-0586

Colorado

Hewlett-Packard Co.
24 Inverness Place, East
ENGLEWOOD, CO 80112
Tel: (303) 649-5000

Connecticut

Hewlett-Packard Co.
47 Barnes Industrial Road South
WALLINGFORD, CT 06492
Tel: (203) 265-7801

Florida

Hewlett-Packard Co.
2901 N.W. 62nd Street
FORT LAUDERDALE, FL 33309
Tel: (305) 973-2600

Hewlett-Packard Co.

6177 Lake Ellenor Drive
ORLANDO, FL 32809
Tel: (305) 859-2900

Georgia

Hewlett-Packard Co.
2000 South Park Place
ATLANTA, GA 30339
Tel: (404) 955-1500
Telex: 810-766-4890

Illinois

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800
Telex: 910-687-1066

Indiana

Hewlett-Packard Co.
11911 N. Meridian St.
CARMEL, IN 46032
Tel: (317) 844-4100

Louisiana

Hewlett-Packard Co.
160 James Drive East
ST. ROSE, LA 70087
P.O. Box 1449
KENNER, LA 70063
Tel: (504) 467-4100

Maryland

Hewlett-Packard Co.
3701 Koppers Street
BALTIMORE, MD 21227
Tel: (301) 644-5800
Telex: 710-862-1943

Hewlett-Packard Co.

2 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 948-6370

Massachusetts

Hewlett-Packard Co.
1775 Minuteman Road
ANDOVER, MA 01810
Tel: (617) 682-1500

Michigan

Hewlett-Packard Co.
39550 Orchard Hill Place Drive
NOVI, MI 48050
Tel: (313) 349-9200

Minnesota

Hewlett-Packard Co.
2025 W. Larpenteur Ave.
ST. PAUL, MN 55113
Tel: (612) 644-1100

Missouri

Hewlett-Packard Co.
1001 E. 101st Terrace Suite 120
KANSAS CITY, MO 64131-3368
Tel: (816) 941-0411

Hewlett-Packard Co.

13001 Hollenberg Drive
BRIDGETON, MO 63044
Tel: (314) 344-5100

New Jersey

Hewlett-Packard Co.
120 W. Century Road
PARAMUS, NJ 07653
Tel: (201) 265-5000

New Mexico

Hewlett-Packard Co.
7801 Jefferson N.E.
ALBUQUERQUE, NM 87109
Tel: (505) 823-6100

New York

Hewlett-Packard Co.
9600 Main Street
CLARENCE, NY 14031
Tel: (716) 759-8621

Hewlett-Packard Co.

7641 Henry Clay Blvd.
LIVERPOOL, NY 13088
Tel: (315) 451-1820

Hewlett-Packard Co.

3 Crossways Park West
WOODBURY, NY 11797
Tel: (516) 682-7800

North Carolina

Hewlett-Packard Co.
5605 Roanne Way
GREENSBORO, NC 27420
Tel: (919) 852-1800

Ohio

Hewlett-Packard Co.
15885 Sprague Road
CLEVELAND, OH 44136
Tel: (216) 243-7300

Hewlett-Packard Co.

9080 Springboro Pike
MIAMISBURG, OH 45342
Tel: (513) 433-2223

Hewlett-Packard Co.

675 Brooksedge Blvd.
WESTERVILLE, OH 43081
Tel: (614) 891-3344

Oklahoma

Hewlett-Packard Co.
3525 N.W. 56th St.
Suite C-100
OKLAHOMA CITY, OK 73112
Tel: (405) 946-9499

Oregon

Hewlett-Packard Co.
9255 S. W. Pioneer Court
WILSONVILLE, OR 97070
Tel: (503) 682-8000

Pennsylvania

Hewlett-Packard Co.
111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400

Hewlett-Packard Co.
2750 Monroe Boulevard
VALLEY FORGE, PA 19482
Tel: (215) 666-9000

Texas

Hewlett-Packard Co.
1826-P Kramer Lane
AUSTIN, TX 78758
Tel: (812) 835-6771

Hewlett-Packard Co.

10535 Harwin Drive
HOUSTON, TX 77036
Tel: (713) 776-6400

Hewlett-Packard Co.
930 E. Campbell Rd.
RICHARDSON, TX 75081
Tel: (214) 231-6101

Hewlett-Packard Co.
1020 Central Parkway South
SAN ANTONIO, TX 78232
Tel: (512) 494-9336

Utah

Hewlett-Packard Co.
3530 W. 2100 South St.
SALT LAKE CITY, UT 84119
Tel: (801) 974-1700

Virginia

Hewlett-Packard Co.
4305 Cox Road
GLEN ALLEN, VA 23060
Tel: (804) 747-7750

Washington

Hewlett-Packard Co.
15815 S.E. 37th Street
BELLEVUE, WA 98006
Tel: (206) 643-4000

Wisconsin

Hewlett-Packard Co.
275 N. Corporate Dr.
BROOKFIELD, WI 53005
Tel: (414) 794-8800

VENEZUELA

Hewlett-Packard de Venezuela C.A.
3A Transversal Los Ruices Norte
Edificio Segre 2 & 3
Apartado 50933
CARACAS 1050
Tel: (582) 239-4133
Telex: 251046 HEWPACK

YUGOSLAVIA

Do Herms
General Zdanova 4
YU-11000 BEOGRAD
Tel: (011) 342 641
Telex: 11433