


## **CHP Electric Screwdriver Torque Reference Charts**


Charts below show the approximate fastening torque of CHP electric screwdriver corresponding to screwdriver's torque scale. Use these charts as reference ONLY for setting the torque value on the CHP electric screwdriver. Verify the actual torque value with calibrated torque testing device.


Output torque (lbf-in)


## **Standard Brushless Series**

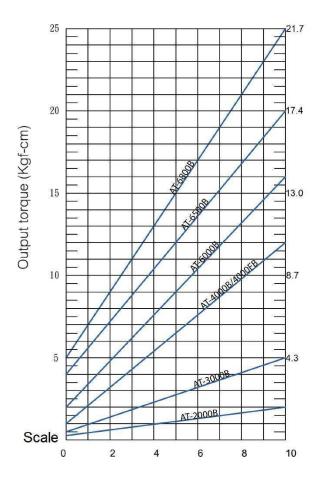


## **Mini-brushless Series**

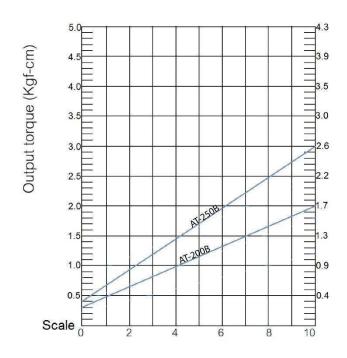

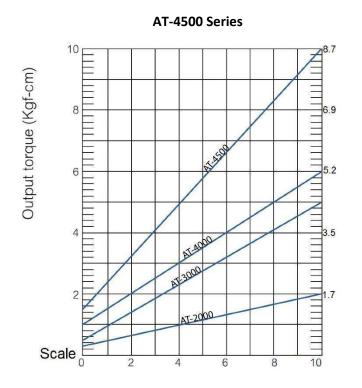

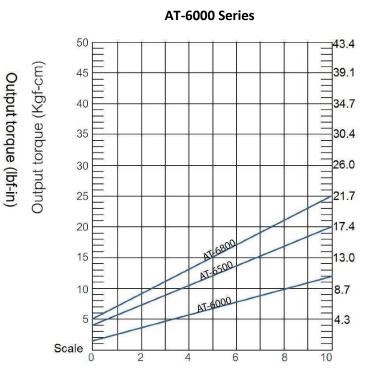

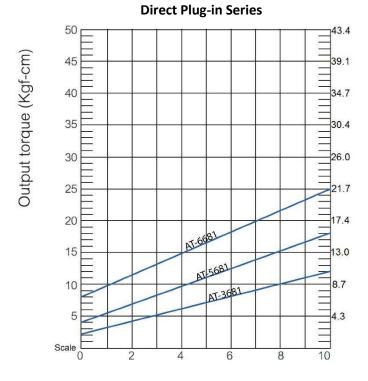

Output torque (lbf-in)