

Keysight 11667A DC to 18 GHz Power Splitter

Notices

Copyright Notice

© Keysight Technologies 2014 - 2019

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies as governed by United States and international copyright laws.

Manual Part Number

11667-90003

Edition

Edition 2, January 18, 2019

Printed in:

Printed in Malaysia

Published by:

Keysight Technologies
Bayan Lepas Free Industrial Zone,
11900 Penang, Malaysia

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Declaration of Conformity

Declarations of Conformity for this product and for other Keysight products may be downloaded from the Web. Go to <http://www.keysight.com/go/conformity>. You can then search by product number to find the latest Declaration of Conformity.

U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at <http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR OF ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT SHALL CONTROL.

Safety Information

CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Safety Symbols

The following symbols on the instrument and in the documentation indicate precautions which must be taken to maintain safe operation of the instrument.

	<p>When you see this symbol on your instrument, you should refer to the instrument's instruction manual for important information.</p>		<p>This symbol indicates hazardous voltages.</p>
	<p>The laser radiation symbol is marked on products that have a laser output.</p>		<p>This symbol indicates that the instrument requires alternating current (ac) input.</p>
	<p>This symbol indicates that the power line switch is ON.</p>		<p>This symbol indicates that the power line switch is OFF or in STANDBY position.</p>

Regulatory Markings

	<p>The CE mark is a registered trademark of the European Community. This CE mark shows that the product complies with all the relevant European Legal Directives.</p>		<p>The CSA mark is a registered trademark of the Canadian Standards Association.</p>
<p>ISM 1-A</p>	<p>This text indicates that the instrument is an Industrial Scientific and Medical Group 1 Class A product (CISPER 11, Clause 4).</p>		

Waste Electrical and Electronic Equipment (WEEE) Directive

This instrument complies with the WEEE Directive marking requirement. This affixed product label indicates that you must not discard this electrical or electronic product in domestic household waste.

Product category:

With reference to the equipment types in the WEEE directive Annex 1, this instrument is classified as a “Monitoring and Control Instrument” product.

The affixed product label is as shown below.



Do not dispose in domestic household waste.

To return this unwanted instrument, contact your nearest Keysight Service Center, or visit <http://about.keysight.com/en/companyinfo/environment/takeback.shtml> for more information.

Sales and Technical Support

To contact Keysight for sales and technical support, refer to the support links on the following Keysight websites:

- www.keysight.com/find/mta
(product-specific information and support, software and documentation updates)
- www.keysight.com/find/assist
(worldwide contact information for repair and service)

Table of Contents

Safety Symbols	3
Regulatory Markings	3
Waste Electrical and Electronic Equipment (WEEE) Directive	4
Product category:	4
Sales and Technical Support	4
List of Figures	7
List of Tables	9
General Information	11
Specifications	11
Options	12
Installation	14
Initial inspection	14
Storage and shipment	15
Operation	16
Environment	16
Adjustments	16
Service	17
Replacing the APC-7 center contact (Option 002 only)	17
Troubleshooting	17
Ordering Information	17
Repair	18
Contacting Keysight	20

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

List of Figures

Figure 1	Leveling or ratio measurement source match graph	12
Figure 2	Typical power splitter diagram	12
Figure 3	Simplified diagram of a network analyzer system	13
Figure 4	Three-resistor power splitter	13
Figure 5	11667A power splitter schematic	13
Figure 6	Device features	14

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

List of Tables

Table 1	11667A specifications	11
Table 2	Typical operating characteristics	11
Table 3	Replaceable parts	18
Table 4	Asia call center numbers	20

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

General Information

The 11667A power splitter is a two-resistor type power splitter for use in network measurements where one arm of the power splitter is used for leveling or to supply a reference signal for a ratio measurement.

Specifications

The specifications are listed in [Table 1](#). These specifications are the performance standards or limits, against which the power splitter may be tested. The typical operating characteristics are provided in [Table 2](#). They are included as additional information only; they are not specifications.

Table 1 11667A specifications

	Frequency (GHz)		
	DC to 4	4 to 8	8 to 18
Input SWR	≤1.15	≤1.25	≤1.45
Equivalent output SWR (Leveling or ratio measurement)	≤1.10	≤1.20	≤1.33 ^[a]
Output tracking (between output arms)	0.15 dB	0.20 dB	0.25 dB

[a] ≤ 1.38 for Option 002

Frequency range: DC to 18 GHz

Maximum input power: +27 dBm

Connectors:

Type-N female on all ports

Option 001: Type-N male on the input and type-N female on the output ports

Option 002: Type-N female on the input and APC-7 on the output ports

Dimensions: 52mm wide x 46mm high x 21.3mm deep (2.06 in. x 1.82 in. x 0.84 in.)

Shipping weight: 0.22 kg (8 oz.)

Table 2 Typical operating characteristics

	Frequency (GHz)		
	DC to 4	4 to 8	8 to 18
Phase tracking (between output arms), typically:	≤0.5°	≤1.5°	≤3.0°
Insertion loss: 6 dB nominal (input to either output)	≤-0.2, +0.6 dB	≤-0.2, +1.0 dB	≤-0.2, +1.8 dB

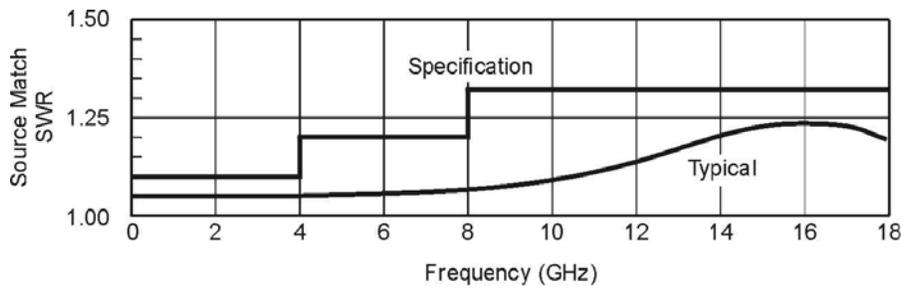


Figure 1 Leveling or ratio measurement source match graph

CAUTION

Applying a signal greater than +27 dBm (0.5 Watts) may result in damage to the power splitter.

Options

The standard 11667A power splitter is supplied with a female type-N on all three ports. The Option 001 provides a type-N male connector on the input and two type-N female connectors on the output ports. The Option 002 is supplied with a type-N female connector on the input and APC-7 connectors on the output ports.

Description

The 11667A is a two-resistor power splitter for use in measurement systems where one arm is an active arm. The active arm may be a leveling loop, or a reference channel of the network analyzer for making a ratio measurement.

Power splitters used for wide-frequency coverage are usually of the resistive type. The generalized form of a power splitter is shown in [Figure 2](#).

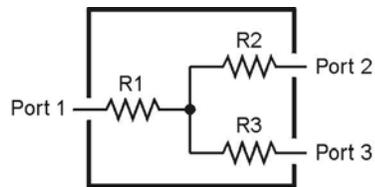


Figure 2 Typical power splitter diagram

For simple power-dividing, a resistance value of $16 \frac{2}{3} \Omega$ in each arm will give an output impedance of 50Ω on any port, provided that all other ports are terminated in the characteristic impedance of 50Ω .

A network analyzer measurement system, as shown in [Figure 3](#), uses the recommended two-resistor type power splitter. Here $R2 = R3 = 50 \Omega$, and $R1 = 0 \Omega$. The two-resistor power splitter, such as model 11667A, provides a better output SWR when used in leveling or in ratio measurement applications.

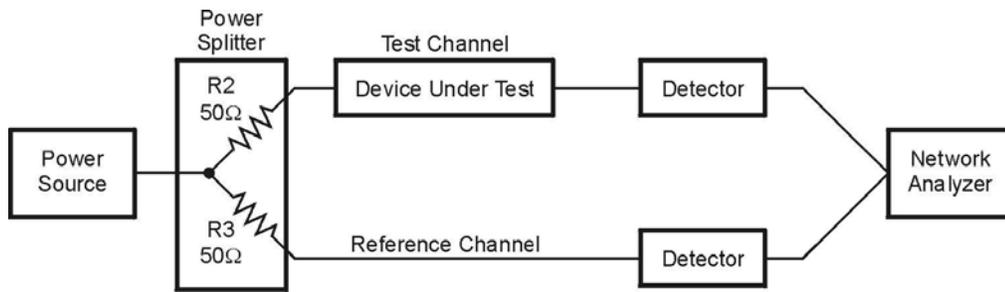


Figure 3 Simplified diagram of a network analyzer system

When a power splitter is used in a network analyzer system, the node at the fork of the power splitter is kept at a fixed voltage by the AGC action of the network analyzer's reference channel. Since this action forces the node to be held at a constant voltage, a virtual ground is present.

If a three-resistor power splitter, as shown in [Figure 4](#), is used in leveling or ratio measurement applications, each port will have an output impedance of $16\frac{2}{3}\Omega$ to ground. This would be a 3:1 mismatch which could cause significant measurement errors.

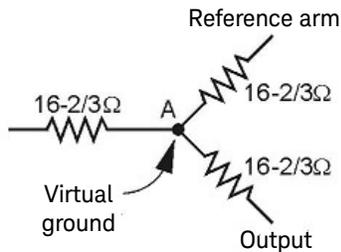


Figure 4 Three-resistor power splitter

However, the 11667A power splitter uses two 50Ω resistors, as shown in [Figure 5](#). The network analyzer creates a virtual ground at the fork, enabling the resistance in each output arm of the power splitter to be a matched 50 ohms.

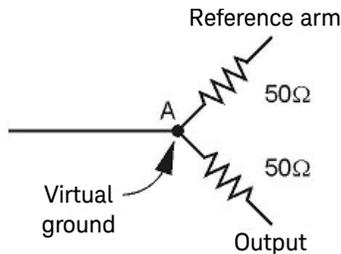



Figure 5 11667A power splitter schematic

Although optimized for leveling or ratio measurements when used as a coupler, the power splitter still provides excellent frequency response tracking for direct power splitting applications with typically $<1.8:1$ SWR.

Installation

Initial inspection

Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked mechanically and electrically. If the contents are incomplete, or if there is mechanical damage or defects, or if the device does not meet specifications, notify the nearest Keysight office. If the shipping container is damaged, or the cushioning material shows signs of stress, notify the carrier as well as the Keysight office. Keep the shipping materials for the carrier's inspection. The office will arrange for repair or replacement without waiting for claim settlement.

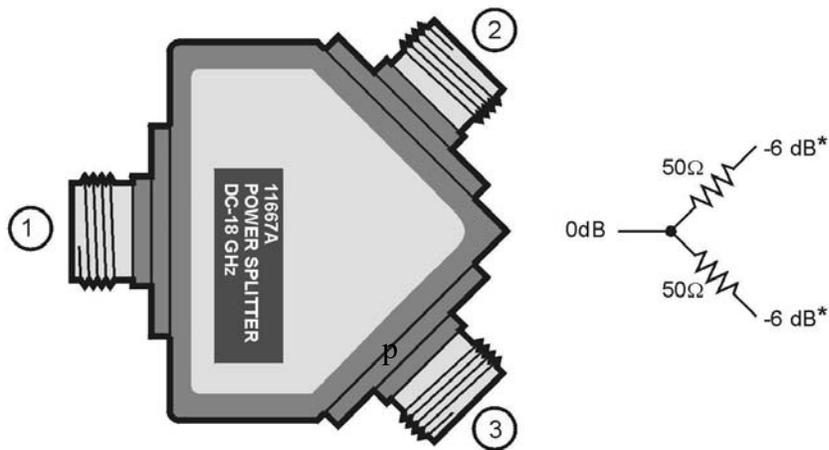

- ① INPUT PORT for incoming signal
 - ② ③ OUTPUT PORTS used as exit ports for outgoing signal. Output signal is 6 dB down in power from input signal. Either port may be used as test or reference port since power is equal in both ports.
- * Typical in 50W system

Figure 6 Device features

Storage and shipment

Environment

The splitter should be stored in a clean, dry environment. The following environmental limitations apply to storage and shipment:

Temperature: -40 °C to +75 °C

Humidity: <95% relative

Altitude: <25,000 feet

Original packaging

If you need to ship the splitter for any reason, be sure to use the original (or comparable) packaging materials. If the device is being returned to Hewlett-Packard for servicing, attach a tag indicating the type of service required, return address, model number, and full serial number. Also mark the container FRAGILE to assure careful handling. In any correspondence, refer to the instrument model number and full serial number.

Operation

Environment

The operating environment should be within the following limits:

Temperature: 0 °C to +55 °C

Humidity: <95% relative

Altitude: <15,000 feet

Adjustments

The 11667A power splitter requires no electrical or mechanical adjustments.

Service

Replacing the APC-7 center contact (Option 002 only)

This contact is a small, four-pronged, spring-action contact which snaps into a recess in the center conductor. It is normally held in place by the spring-action of the four prongs. With a magnifying glass, examine the contact to determine if it needs replacement.

CAUTION

Do not remove this contact for inspection. It may be damaged by removal.

The contact should be free of burrs or wear and the prongs should be equally spaced. Push the contact in with your fingernail and note the spring action. If the contact needs replacing, proceed as follows:

- 1 Place the power splitter so that the connector face is down.
- 2 Tap the pin connector lightly and the contact should protrude slightly. Insert the centering pin of the contact extractor (part number 5060-0236) with the jaws open. If this tool is not available, an ordinary draftsman's mechanical pencil may be used. (The end of the jaws may have to be filed to get a good grasp at the very end.)
- 3 Allow the jaws of the tool to close and pull straight away from the connector without twisting. The contact should come out with the tool. If not, repeat the process. Do not reuse the contact.
- 4 Insert a new contact (part number 1250-0907) with the fingernail.

Troubleshooting

Troubleshooting the 11667A power splitter usually takes advantage of the fact that the circuit elements are split into two channels. Malfunctions will usually occur in only one channel at a time. Therefore, malfunctions can be confirmed by reversing connections to the splitter.

Since the power splitter works to DC, an ohmmeter can be used to check the inner conductor connections. The resistance from either output center conductor to the input center conductor should be $50\ \Omega \pm 2\ \Omega$.

Ordering Information

To obtain replacement parts, contact the nearest Keysight Technologies. [Table 3](#) lists the replaceable parts. Do not try to replace any parts not listed.

Table 3 Replaceable parts

Part number	Quantity	Description
2200-0165	6	Screw: machine 4-40 x 0.312-inch Pozidriv flat head
Standard 11667A and Type-N female on Option 002		
1250-0549	3	Connector Type-N
1250-0915	3	Contact: center conductor female
5040-0306	3	Insulator
5020-9108	3	Conductor: center
5020-9107	3	Conductor: outer
Model 11667A Option 001 (male Type-N input)		
1250-2184	1	Retaining ring
5021-1746	1	Connector flange
1250-0916	1	Connector body Type-N
1250-0917	1	Male pin Type-N
1250-0918	1	Connector nut Type-N
5020-9778	1	Center conductor extension
Model 11667A Option 002 (APC-7 connectors Only)		
1250-0909	2	Connector assembly: APC-7
5021-1746	2	Connector flange
85130-20002	2	Contact holder: center conductor
85050-20001	2	Contact: center conductor

Repair

CAUTION

Do not open the 11667A power splitter. Opening the 11667A power splitter voids the warranty.

Replace only the parts shown in [Table 3](#). To replace these parts, proceed as follows:

Standard model 11667A and Type-N connectors on Options 001 and 002

- 1** Loosen and remove the two Pozidriv screws on the faulty connector. Remove the flange.
- 2** With a rotating motion, pull the center conductor assembly loose.
- 3** Use a pin vise to unscrew the two pins.
- 4** Replace the defective part.
- 5** Apply a small amount of Loctite to the threads of the contact and screw the center conductor assembly together.
- 6** Push the end of the conductor assembly into the connector hole while rotating the assembly. Do not force it on. It should slide on.
- 7** Complete the remainder of the assembly in reverse order of disassembly.

Option 002 (APC-7 connectors)

- 1** With a thin 1/2-inch open wrench, remove the outer connector assembly on the faulty connector.
- 2** Loosen and remove the two Pozidriv screws. Remove the flange.
- 3** With a rotating motion, pull the center conductor assembly loose.
- 4** Use a pin vise to unscrew the two pins.
- 5** Replace the defective part.
- 6** Apply a small amount of Loctite to the threads of the contact and screw the center conductor assembly together.
- 7** Push the end of the center conductor assembly into the connector hole while rotating the assembly. Do not force it on: it should slide on.
- 8** Complete the remainder of the assembly in reverse order of disassembly.

Contacting Keysight

By internet, phone, or fax, get assistance with all your test and measurement needs.

Online assistance: www.keysight.com/find/assist

United States (tel) 1 800 452 4844	Latin America (tel) (305) 269 7500 (fax) (305) 269 7599	Canada (tel) 1 877 894 4414 (fax) (905) 282-6495	Europe (tel) (+31) 20 547 2323 (fax) (+31) 20 547 2390
New Zealand (tel) 0 800 738 378 (fax) (+64) 4 495 8950	Japan (tel) (+81) 426 56 7832 (fax) (+81) 426 56 7840	Australia (tel) 1 800 629 485 (fax) (+61) 3 9210 5947	

Table 4 Asia call center numbers

Country	Phone number	Fax number
Singapore	1-800-375-8100	(65) 836-0252
Malaysia	1-800-828-848	1-800-801664
Philippines	(632) 8426802 1-800-16510170 (PLDT subscriber only)	(632) 8426809 1-800-16510288 (PLDT subscriber only)
Thailand	(088) 226-008 (outside Bangkok) (662) 661-3999 (within Bangkok)	(66) 1-661-3714
Hong Kong	800-930-871	(852) 2506 9233
Taiwan	0800-047-866	(886) 2 25456723
People's Republic of China	800-810-0189 (preferred) 10800-650-0021	10800-650-0121
India	1-600-11-2929	000-800-650-1101



This information is subject to change without notice. Always refer to the Keysight website for the latest revision.

© Keysight Technologies 2014 - 2019
Edition 2, January 18, 2019

Printed in Malaysia



11667-90003

www.keysight.com