

R&S®ESRP

EMI Test Receiver

User Manual



1175.7445.02 – 05



ROHDE & SCHWARZ

www.valuetronics.com

Test & Measurement

User Manual

This manual covers the following products:

- R&S ESRP3 (1316.4500.03)
- R&S ESRP7 (1316.4500.07)
- R&S FSV-B9 (1310.9545.02)
- R&S ESRP-K53 (1316.4639.02)
- R&S ESRP-K56 (1316.4897.02)

The contents of this manual correspond to firmware version 2.17 or higher.

© 2014 Rohde & Schwarz GmbH & Co. KG

Mühlhofstr. 15, 81671 München, Germany

Phone: +49 89 41 29 - 0

Fax: +49 89 41 29 12 164

E-mail: info@rohde-schwarz.com

Internet: www.rohde-schwarz.com

Subject to change – Data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

The following abbreviations are used throughout this manual: R&S®ESRP is abbreviated as R&S ESRP.

Basic Safety Instructions

Always read through and comply with the following safety instructions!

All plants and locations of the Rohde & Schwarz group of companies make every effort to keep the safety standards of our products up to date and to offer our customers the highest possible degree of safety. Our products and the auxiliary equipment they require are designed, built and tested in accordance with the safety standards that apply in each case. Compliance with these standards is continuously monitored by our quality assurance system. The product described here has been designed, built and tested in accordance with the EC Certificate of Conformity and has left the manufacturer's plant in a condition fully complying with safety standards. To maintain this condition and to ensure safe operation, you must observe all instructions and warnings provided in this manual. If you have any questions regarding these safety instructions, the Rohde & Schwarz group of companies will be happy to answer them.

Furthermore, it is your responsibility to use the product in an appropriate manner. This product is designed for use solely in industrial and laboratory environments or, if expressly permitted, also in the field and must not be used in any way that may cause personal injury or property damage. You are responsible if the product is used for any purpose other than its designated purpose or in disregard of the manufacturer's instructions. The manufacturer shall assume no responsibility for such use of the product.

The product is used for its designated purpose if it is used in accordance with its product documentation and within its performance limits (see data sheet, documentation, the following safety instructions). Using the product requires technical skills and, in some cases, a basic knowledge of English. It is therefore essential that only skilled and specialized staff or thoroughly trained personnel with the required skills be allowed to use the product. If personal safety gear is required for using Rohde & Schwarz products, this will be indicated at the appropriate place in the product documentation. Keep the basic safety instructions and the product documentation in a safe place and pass them on to the subsequent users.

 
 
Observing the safety instructions will help prevent personal injury or damage of any kind caused by dangerous situations. Therefore, carefully read through and adhere to the following safety instructions before and when using the product. It is also absolutely essential to observe the additional safety instructions on personal safety, for example, that appear in relevant parts of the product documentation. In these safety instructions, the word "product" refers to all merchandise sold and distributed by the Rohde & Schwarz group of companies, including instruments, systems and all accessories. For product-specific information, see the data sheet and the product documentation.

Safety labels on products

The following safety labels are used on products to warn against risks and dangers.

Symbol	Meaning	Symbol	Meaning
	Notice, general danger location Observe product documentation	○	ON/OFF supply voltage
	Caution when handling heavy equipment	⏻	Standby indication
	Danger of electric shock	— — —	Direct current (DC)

Basic Safety Instructions

Symbol	Meaning	Symbol	Meaning
	Warning! Hot surface		Alternating current (AC)
	Protective conductor terminal		Direct/alternating current (DC/AC)
	Ground		Device fully protected by double (reinforced) insulation
	Ground terminal		EU labeling for batteries and accumulators For additional information, see section "Waste disposal/Environmental protection", item 1.
	Be careful when handling electrostatic sensitive devices		EU labeling for separate collection of electrical and electronic devices For additional information, see section "Waste disposal/Environmental protection", item 2.
	Warning! Laser radiation For additional information, see section "Operation", item 7.		

Signal words and their meaning

The following signal words are used in the product documentation in order to warn the reader about risks and dangers.



Indicates a hazardous situation which, if not avoided, will result in death or serious injury.



Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



Indicates information considered important, but not hazard-related, e.g. messages relating to property damage.
In the product documentation, the word ATTENTION is used synonymously.

These signal words are in accordance with the standard definition for civil applications in the European Economic Area. Definitions that deviate from the standard definition may also exist in other economic areas or military applications. It is therefore essential to make sure that the signal words described here are always used only in connection with the related product documentation and the related product. The use of signal words in connection with unrelated products or documentation can result in misinterpretation and in personal injury or material damage.

Basic Safety Instructions

Operating states and operating positions

The product may be operated only under the operating conditions and in the positions specified by the manufacturer, without the product's ventilation being obstructed. If the manufacturer's specifications are not observed, this can result in electric shock, fire and/or serious personal injury or death. Applicable local or national safety regulations and rules for the prevention of accidents must be observed in all work performed.

1. Unless otherwise specified, the following requirements apply to Rohde & Schwarz products: predefined operating position is always with the housing floor facing down, IP protection 2X, use only indoors, max. operating altitude 2000 m above sea level, max. transport altitude 4500 m above sea level. A tolerance of $\pm 10\%$ shall apply to the nominal voltage and $\pm 5\%$ to the nominal frequency, overvoltage category 2, pollution severity 2.
2. Do not place the product on surfaces, vehicles, cabinets or tables that for reasons of weight or stability are unsuitable for this purpose. Always follow the manufacturer's installation instructions when installing the product and fastening it to objects or structures (e.g. walls and shelves). An installation that is not carried out as described in the product documentation could result in personal injury or even death.
3. Do not place the product on heat-generating devices such as radiators or fan heaters. The ambient temperature must not exceed the maximum temperature specified in the product documentation or in the data sheet. Product overheating can cause electric shock, fire and/or serious personal injury or even death.

Electrical safety

If the information on electrical safety is not observed either at all or to the extent necessary, electric shock, fire and/or serious personal injury or death may occur.

1. Prior to switching on the product, always ensure that the nominal voltage setting on the product matches the nominal voltage of the AC supply network. If a different voltage is to be set, the power fuse of the product may have to be changed accordingly.
2. In the case of products of safety class I with movable power cord and connector, operation is permitted only on sockets with a protective conductor contact and protective conductor.
3. Intentionally breaking the protective conductor either in the feed line or in the product itself is not permitted. Doing so can result in the danger of an electric shock from the product. If extension cords or connector strips are implemented, they must be checked on a regular basis to ensure that they are safe to use.
4. If there is no power switch for disconnecting the product from the AC supply network, or if the power switch is not suitable for this purpose, use the plug of the connecting cable to disconnect the product from the AC supply network. In such cases, always ensure that the power plug is easily reachable and accessible at all times. For example, if the power plug is the disconnecting device, the length of the connecting cable must not exceed 3 m. Functional or electronic switches are not suitable for providing disconnection from the AC supply network. If products without power switches are integrated into racks or systems, the disconnecting device must be provided at the system level.
5. Never use the product if the power cable is damaged. Check the power cables on a regular basis to ensure that they are in proper operating condition. By taking appropriate safety measures and carefully laying the power cable, ensure that the cable cannot be damaged and that no one can be hurt by, for example, tripping over the cable or suffering an electric shock.

Basic Safety Instructions

6. The product may be operated only from TN/TT supply networks fuse-protected with max. 16 A (higher fuse only after consulting with the Rohde & Schwarz group of companies).
7. Do not insert the plug into sockets that are dusty or dirty. Insert the plug firmly and all the way into the socket provided for this purpose. Otherwise, sparks that result in fire and/or injuries may occur.
8. Do not overload any sockets, extension cords or connector strips; doing so can cause fire or electric shocks.
9. For measurements in circuits with voltages $V_{rms} > 30$ V, suitable measures (e.g. appropriate measuring equipment, fuse protection, current limiting, electrical separation, insulation) should be taken to avoid any hazards.
10. Ensure that the connections with information technology equipment, e.g. PCs or other industrial computers, comply with the IEC60950-1/EN60950-1 or IEC61010-1/EN 61010-1 standards that apply in each case.
11. Unless expressly permitted, never remove the cover or any part of the housing while the product is in operation. Doing so will expose circuits and components and can lead to injuries, fire or damage to the product.
12. If a product is to be permanently installed, the connection between the protective conductor terminal on site and the product's protective conductor must be made first before any other connection is made. The product may be installed and connected only by a licensed electrician.
13. For permanently installed equipment without built-in fuses, circuit breakers or similar protective devices, the supply circuit must be fuse-protected in such a way that anyone who has access to the product, as well as the product itself, is adequately protected from injury or damage.
14. Use suitable overvoltage protection to ensure that no overvoltage (such as that caused by a bolt of lightning) can reach the product. Otherwise, the person operating the product will be exposed to the danger of an electric shock.
15. Any object that is not designed to be placed in the openings of the housing must not be used for this purpose. Doing so can cause short circuits inside the product and/or electric shocks, fire or injuries.
16. Unless specified otherwise, products are not liquid-proof (see also section "Operating states and operating positions", item 1). Therefore, the equipment must be protected against penetration by liquids. If the necessary precautions are not taken, the user may suffer electric shock or the product itself may be damaged, which can also lead to personal injury.
17. Never use the product under conditions in which condensation has formed or can form in or on the product, e.g. if the product has been moved from a cold to a warm environment. Penetration by water increases the risk of electric shock.
18. Prior to cleaning the product, disconnect it completely from the power supply (e.g. AC supply network or battery). Use a soft, non-linting cloth to clean the product. Never use chemical cleaning agents such as alcohol, acetone or diluents for cellulose lacquers.

Operation

1. Operating the products requires special training and intense concentration. Make sure that persons who use the products are physically, mentally and emotionally fit enough to do so; otherwise, injuries or material damage may occur. It is the responsibility of the employer/operator to select suitable personnel for operating the products.

Basic Safety Instructions

2. Before you move or transport the product, read and observe the section titled "Transport".
3. As with all industrially manufactured goods, the use of substances that induce an allergic reaction (allergens) such as nickel cannot be generally excluded. If you develop an allergic reaction (such as a skin rash, frequent sneezing, red eyes or respiratory difficulties) when using a Rohde & Schwarz product, consult a physician immediately to determine the cause and to prevent health problems or stress.
4. Before you start processing the product mechanically and/or thermally, or before you take it apart, be sure to read and pay special attention to the section titled "Waste disposal/Environmental protection", item 1.
5. Depending on the function, certain products such as RF radio equipment can produce an elevated level of electromagnetic radiation. Considering that unborn babies require increased protection, pregnant women must be protected by appropriate measures. Persons with pacemakers may also be exposed to risks from electromagnetic radiation. The employer/operator must evaluate workplaces where there is a special risk of exposure to radiation and, if necessary, take measures to avert the potential danger.
6. Should a fire occur, the product may release hazardous substances (gases, fluids, etc.) that can cause health problems. Therefore, suitable measures must be taken, e.g. protective masks and protective clothing must be worn.
7. Laser products are given warning labels that are standardized according to their laser class. Lasers can cause biological harm due to the properties of their radiation and due to their extremely concentrated electromagnetic power. If a laser product (e.g. a CD/DVD drive) is integrated into a Rohde & Schwarz product, absolutely no other settings or functions may be used as described in the product documentation. The objective is to prevent personal injury (e.g. due to laser beams).
8. EMC classes (in line with EN 55011/CISPR 11, and analogously with EN 55022/CISPR 22, EN 55032/CISPR 32)
 - Class A equipment:
Equipment suitable for use in all environments except residential environments and environments that are directly connected to a low-voltage supply network that supplies residential buildings
Note: Class A equipment is intended for use in an industrial environment. This equipment may cause radio disturbances in residential environments, due to possible conducted as well as radiated disturbances. In this case, the operator may be required to take appropriate measures to eliminate these disturbances.
 - Class B equipment:
Equipment suitable for use in residential environments and environments that are directly connected to a low-voltage supply network that supplies residential buildings

Repair and service

1. The product may be opened only by authorized, specially trained personnel. Before any work is performed on the product or before the product is opened, it must be disconnected from the AC supply network. Otherwise, personnel will be exposed to the risk of an electric shock.

Basic Safety Instructions

- Adjustments, replacement of parts, maintenance and repair may be performed only by electrical experts authorized by Rohde & Schwarz. Only original parts may be used for replacing parts relevant to safety (e.g. power switches, power transformers, fuses). A safety test must always be performed after parts relevant to safety have been replaced (visual inspection, protective conductor test, insulation resistance measurement, leakage current measurement, functional test). This helps ensure the continued safety of the product.

Batteries and rechargeable batteries/cells

If the information regarding batteries and rechargeable batteries/cells is not observed either at all or to the extent necessary, product users may be exposed to the risk of explosions, fire and/or serious personal injury, and, in some cases, death. Batteries and rechargeable batteries with alkaline electrolytes (e.g. lithium cells) must be handled in accordance with the EN 62133 standard.

- Cells must not be taken apart or crushed.
- Cells or batteries must not be exposed to heat or fire. Storage in direct sunlight must be avoided. Keep cells and batteries clean and dry. Clean soiled connectors using a dry, clean cloth.
- Cells or batteries must not be short-circuited. Cells or batteries must not be stored in a box or in a drawer where they can short-circuit each other, or where they can be short-circuited by other conductive materials. Cells and batteries must not be removed from their original packaging until they are ready to be used.
- Cells and batteries must not be exposed to any mechanical shocks that are stronger than permitted.
- If a cell develops a leak, the fluid must not be allowed to come into contact with the skin or eyes. If contact occurs, wash the affected area with plenty of water and seek medical aid.
- Improperly replacing or charging cells or batteries that contain alkaline electrolytes (e.g. lithium cells) can cause explosions. Replace cells or batteries only with the matching Rohde & Schwarz type (see parts list) in order to ensure the safety of the product.
- Cells and batteries must be recycled and kept separate from residual waste. Rechargeable batteries and normal batteries that contain lead, mercury or cadmium are hazardous waste. Observe the national regulations regarding waste disposal and recycling.

Transport

- The product may be very heavy. Therefore, the product must be handled with care. In some cases, the user may require a suitable means of lifting or moving the product (e.g. with a lift-truck) to avoid back or other physical injuries.
- Handles on the products are designed exclusively to enable personnel to transport the product. It is therefore not permissible to use handles to fasten the product to or on transport equipment such as cranes, fork lifts, wagons, etc. The user is responsible for securely fastening the products to or on the means of transport or lifting. Observe the safety regulations of the manufacturer of the means of transport or lifting. Noncompliance can result in personal injury or material damage.
- If you use the product in a vehicle, it is the sole responsibility of the driver to drive the vehicle safely and properly. The manufacturer assumes no responsibility for accidents or collisions. Never use the product in a moving vehicle if doing so could distract the driver of the vehicle. Adequately secure the product in the vehicle to prevent injuries or other damage in the event of an accident.

Instrucciones de seguridad elementales

Waste disposal/Environmental protection

1. Specially marked equipment has a battery or accumulator that must not be disposed of with unsorted municipal waste, but must be collected separately. It may only be disposed of at a suitable collection point or via a Rohde & Schwarz customer service center.
2. Waste electrical and electronic equipment must not be disposed of with unsorted municipal waste, but must be collected separately.
Rohde & Schwarz GmbH & Co. KG has developed a disposal concept and takes full responsibility for take-back obligations and disposal obligations for manufacturers within the EU. Contact your Rohde & Schwarz customer service center for environmentally responsible disposal of the product.
3. If products or their components are mechanically and/or thermally processed in a manner that goes beyond their intended use, hazardous substances (heavy-metal dust such as lead, beryllium, nickel) may be released. For this reason, the product may only be disassembled by specially trained personnel. Improper disassembly may be hazardous to your health. National waste disposal regulations must be observed.
4. If handling the product releases hazardous substances or fuels that must be disposed of in a special way, e.g. coolants or engine oils that must be replenished regularly, the safety instructions of the manufacturer of the hazardous substances or fuels and the applicable regional waste disposal regulations must be observed. Also observe the relevant safety instructions in the product documentation. The improper disposal of hazardous substances or fuels can cause health problems and lead to environmental damage.

For additional information about environmental protection, visit the Rohde & Schwarz website.

Instrucciones de seguridad elementales

¡Es imprescindible leer y cumplir las siguientes instrucciones e informaciones de seguridad!

El principio del grupo de empresas Rohde & Schwarz consiste en tener nuestros productos siempre al día con los estándares de seguridad y de ofrecer a nuestros clientes el máximo grado de seguridad. Nuestros productos y todos los equipos adicionales son siempre fabricados y examinados según las normas de seguridad vigentes. Nuestro sistema de garantía de calidad controla constantemente que sean cumplidas estas normas. El presente producto ha sido fabricado y examinado según el certificado de conformidad de la UE y ha salido de nuestra planta en estado impecable según los estándares técnicos de seguridad. Para poder preservar este estado y garantizar un funcionamiento libre de peligros, el usuario deberá atenerse a todas las indicaciones, informaciones de seguridad y notas de alerta. El grupo de empresas Rohde & Schwarz está siempre a su disposición en caso de que tengan preguntas referentes a estas informaciones de seguridad.

Además queda en la responsabilidad del usuario utilizar el producto en la forma debida. Este producto está destinado exclusivamente al uso en la industria y el laboratorio o, si ha sido expresamente autorizado, para aplicaciones de campo y de ninguna manera deberá ser utilizado de modo que alguna persona/cosa pueda sufrir daño. El uso del producto fuera de sus fines definidos o sin tener en cuenta las instrucciones del fabricante queda en la responsabilidad del usuario. El fabricante no se hace en ninguna forma responsable de consecuencias a causa del mal uso del producto.

 
Instrucciones de seguridad elementales

Se parte del uso correcto del producto para los fines definidos si el producto es utilizado conforme a las indicaciones de la correspondiente documentación del producto y dentro del margen de rendimiento definido (ver hoja de datos, documentación, informaciones de seguridad que siguen). El uso del producto hace necesarios conocimientos técnicos y ciertos conocimientos del idioma inglés. Por eso se debe tener en cuenta que el producto solo pueda ser operado por personal especializado o personas instruidas en profundidad con las capacidades correspondientes. Si fuera necesaria indumentaria de seguridad para el uso de productos de Rohde & Schwarz, encontraría la información debida en la documentación del producto en el capítulo correspondiente. Guarde bien las informaciones de seguridad elementales, así como la documentación del producto, y entréguelas a usuarios posteriores.


Tener en cuenta las informaciones de seguridad sirve para evitar en lo posible lesiones o daños por peligros de toda clase. Por eso es imprescindible leer detalladamente y comprender por completo las siguientes informaciones de seguridad antes de usar el producto, y respetarlas durante el uso del producto. Deberán tenerse en cuenta todas las demás informaciones de seguridad, como p. ej. las referentes a la protección de personas, que encontrarán en el capítulo correspondiente de la documentación del producto y que también son de obligado cumplimiento. En las presentes informaciones de seguridad se recogen todos los objetos que distribuye el grupo de empresas Rohde & Schwarz bajo la denominación de "producto", entre ellos también aparatos, instalaciones así como toda clase de accesorios. Los datos específicos del producto figuran en la hoja de datos y en la documentación del producto.

Señalización de seguridad de los productos

Las siguientes señales de seguridad se utilizan en los productos para advertir sobre riesgos y peligros.

Símbolo	Significado	Símbolo	Significado
	Aviso: punto de peligro general Observar la documentación del producto		Tensión de alimentación de PUESTA EN MARCHA / PARADA
	Atención en el manejo de dispositivos de peso elevado		Indicación de estado de espera (standby)
	Peligro de choque eléctrico		Corriente continua (DC)
	Advertencia: superficie caliente		Corriente alterna (AC)
	Conexión a conductor de protección		Corriente continua / Corriente alterna (DC/AC)
	Conexión a tierra		El aparato está protegido en su totalidad por un aislamiento doble (reforzado)
	Conexión a masa		Distintivo de la UE para baterías y acumuladores Más información en la sección "Eliminación/protección del medio ambiente", punto 1.

 Instrucciones de seguridad elementales

Símbolo	Significado	Símbolo	Significado
	Aviso: Cuidado en el manejo de dispositivos sensibles a la electrostática (ESD)		Distintivo de la UE para la eliminación por separado de dispositivos eléctricos y electrónicos Más información en la sección "Eliminación/protección del medio ambiente", punto 2.
	Advertencia: rayo láser Más información en la sección "Funcionamiento", punto 7.		

Palabras de señal y su significado

En la documentación del producto se utilizan las siguientes palabras de señal con el fin de advertir contra riesgos y peligros.



Indica una situación de peligro que, si no se evita, causa lesiones graves o incluso la muerte.



Indica una situación de peligro que, si no se evita, puede causar lesiones graves o incluso la muerte.



Indica una situación de peligro que, si no se evita, puede causar lesiones leves o moderadas.



Indica información que se considera importante, pero no en relación con situaciones de peligro; p. ej., avisos sobre posibles daños materiales.
En la documentación del producto se emplea de forma sinónima el término CUIDADO.

Las palabras de señal corresponden a la definición habitual para aplicaciones civiles en el área económica europea. Pueden existir definiciones diferentes a esta definición en otras áreas económicas o en aplicaciones militares. Por eso se deberá tener en cuenta que las palabras de señal aquí descritas sean utilizadas siempre solamente en combinación con la correspondiente documentación del producto y solamente en combinación con el producto correspondiente. La utilización de las palabras de señal en combinación con productos o documentaciones que no les correspondan puede llevar a interpretaciones equivocadas y tener por consecuencia daños en personas u objetos.

Estados operativos y posiciones de funcionamiento

El producto solamente debe ser utilizado según lo indicado por el fabricante respecto a los estados operativos y posiciones de funcionamiento sin que se obstruya la ventilación. Si no se siguen las indicaciones del fabricante, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte. En todos los trabajos deberán ser tenidas en cuenta las normas nacionales y locales de seguridad del trabajo y de prevención de accidentes.

Instrucciones de seguridad elementales

1. Si no se convino de otra manera, es para los productos Rohde & Schwarz válido lo que sigue: como posición de funcionamiento se define por principio la posición con el suelo de la caja para abajo, modo de protección IP 2X, uso solamente en estancias interiores, utilización hasta 2000 m sobre el nivel del mar, transporte hasta 4500 m sobre el nivel del mar. Se aplicará una tolerancia de $\pm 10\%$ sobre el voltaje nominal y de $\pm 5\%$ sobre la frecuencia nominal. Categoría de sobrecarga eléctrica 2, índice de suciedad 2.
2. No sitúe el producto encima de superficies, vehículos, estantes o mesas, que por sus características de peso o de estabilidad no sean aptos para él. Siga siempre las instrucciones de instalación del fabricante cuando instale y asegure el producto en objetos o estructuras (p. ej. paredes y estantes). Si se realiza la instalación de modo distinto al indicado en la documentación del producto, se pueden causar lesiones o, en determinadas circunstancias, incluso la muerte.
3. No ponga el producto sobre aparatos que generen calor (p. ej. radiadores o calefactores). La temperatura ambiente no debe superar la temperatura máxima especificada en la documentación del producto o en la hoja de datos. En caso de sobrecalentamiento del producto, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte.

Seguridad eléctrica

Si no se siguen (o se siguen de modo insuficiente) las indicaciones del fabricante en cuanto a seguridad eléctrica, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte.

1. Antes de la puesta en marcha del producto se deberá comprobar siempre que la tensión preseleccionada en el producto coincida con la de la red de alimentación eléctrica. Si es necesario modificar el ajuste de tensión, también se deberán cambiar en caso dado los fusibles correspondientes del producto.
2. Los productos de la clase de protección I con alimentación móvil y enchufe individual solamente podrán enchufarse a tomas de corriente con contacto de seguridad y con conductor de protección conectado.
3. Queda prohibida la interrupción intencionada del conductor de protección, tanto en la toma de corriente como en el mismo producto. La interrupción puede tener como consecuencia el riesgo de que el producto sea fuente de choques eléctricos. Si se utilizan cables alargadores o regletas de enchufe, deberá garantizarse la realización de un examen regular de los mismos en cuanto a su estado técnico de seguridad.
4. Si el producto no está equipado con un interruptor para desconectarlo de la red, o bien si el interruptor existente no resulta apropiado para la desconexión de la red, el enchufe del cable de conexión se deberá considerar como un dispositivo de desconexión. El dispositivo de desconexión se debe poder alcanzar fácilmente y debe estar siempre bien accesible. Si, p. ej., el enchufe de conexión a la red es el dispositivo de desconexión, la longitud del cable de conexión no debe superar 3 m). Los interruptores selectores o electrónicos no son aptos para el corte de la red eléctrica. Si se integran productos sin interruptor en bastidores o instalaciones, se deberá colocar el interruptor en el nivel de la instalación.
5. No utilice nunca el producto si está dañado el cable de conexión a red. Compruebe regularmente el correcto estado de los cables de conexión a red. Asegúrese, mediante las medidas de protección y de instalación adecuadas, de que el cable de conexión a red no pueda ser dañado o de que nadie pueda ser dañado por él, p. ej. al tropezar o por un choque eléctrico.

Instrucciones de seguridad elementales

6. Solamente está permitido el funcionamiento en redes de alimentación TN/TT aseguradas con fusibles de 16 A como máximo (utilización de fusibles de mayor amperaje solo previa consulta con el grupo de empresas Rohde & Schwarz).
7. Nunca conecte el enchufe en tomas de corriente sucias o llenas de polvo. Introduzca el enchufe por completo y fuertemente en la toma de corriente. La no observación de estas medidas puede provocar chispas, fuego y/o lesiones.
8. No sobrecargue las tomas de corriente, los cables alargadores o las regletas de enchufe ya que esto podría causar fuego o choques eléctricos.
9. En las mediciones en circuitos de corriente con una tensión $U_{\text{eff}} > 30 \text{ V}$ se deberán tomar las medidas apropiadas para impedir cualquier peligro (p. ej. medios de medición adecuados, seguros, limitación de tensión, corte protector, aislamiento etc.).
10. Para la conexión con dispositivos informáticos como un PC o un ordenador industrial, debe comprobarse que éstos cumplan los estándares IEC60950-1/EN60950-1 o IEC61010-1/EN 61010-1 válidos en cada caso.
11. A menos que esté permitido expresamente, no retire nunca la tapa ni componentes de la carcasa mientras el producto esté en servicio. Esto pone a descubierto los cables y componentes eléctricos y puede causar lesiones, fuego o daños en el producto.
12. Si un producto se instala en un lugar fijo, se deberá primero conectar el conductor de protección fijo con el conductor de protección del producto antes de hacer cualquier otra conexión. La instalación y la conexión deberán ser efectuadas por un electricista especializado.
13. En el caso de dispositivos fijos que no estén provistos de fusibles, interruptor automático ni otros mecanismos de seguridad similares, el circuito de alimentación debe estar protegido de modo que todas las personas que puedan acceder al producto, así como el producto mismo, estén a salvo de posibles daños.
14. Todo producto debe estar protegido contra sobretensión (debida p. ej. a una caída del rayo) mediante los correspondientes sistemas de protección. Si no, el personal que lo utilice quedará expuesto al peligro de choque eléctrico.
15. No debe introducirse en los orificios de la caja del aparato ningún objeto que no esté destinado a ello. Esto puede producir cortocircuitos en el producto y/o puede causar choques eléctricos, fuego o lesiones.
16. Salvo indicación contraria, los productos no están impermeabilizados (ver también el capítulo "Estados operativos y posiciones de funcionamiento", punto 1). Por eso es necesario tomar las medidas necesarias para evitar la entrada de líquidos. En caso contrario, existe peligro de choque eléctrico para el usuario o de daños en el producto, que también pueden redundar en peligro para las personas.
17. No utilice el producto en condiciones en las que pueda producirse o ya se hayan producido condensaciones sobre el producto o en el interior de éste, como p. ej. al desplazarlo de un lugar frío a otro caliente. La entrada de agua aumenta el riesgo de choque eléctrico.
18. Antes de la limpieza, desconecte por completo el producto de la alimentación de tensión (p. ej. red de alimentación o batería). Realice la limpieza de los aparatos con un paño suave, que no se deshilache. No utilice bajo ningún concepto productos de limpieza químicos como alcohol, acetona o diluyentes para lacas nitrocelulósicas.

Funcionamiento

1. El uso del producto requiere instrucciones especiales y una alta concentración durante el manejo. Debe asegurarse que las personas que manejen el producto estén a la altura de los requerimientos necesarios en cuanto a aptitudes físicas, psíquicas y emocionales, ya que de otra manera no se pueden excluir lesiones o daños de objetos. El empresario u operador es responsable de seleccionar el personal usuario apto para el manejo del producto.
2. Antes de desplazar o transportar el producto, lea y tenga en cuenta el capítulo "Transporte".
3. Como con todo producto de fabricación industrial no puede quedar excluida en general la posibilidad de que se produzcan alergias provocadas por algunos materiales empleados —los llamados alérgenos (p. ej. el níquel)—. Si durante el manejo de productos Rohde & Schwarz se producen reacciones alérgicas, como p. ej. irritaciones cutáneas, estornudos continuos, enrojecimiento de la conjuntiva o dificultades respiratorias, debe avisarse inmediatamente a un médico para investigar las causas y evitar cualquier molestia o daño a la salud.
4. Antes de la manipulación mecánica y/o térmica o el desmontaje del producto, debe tenerse en cuenta imprescindiblemente el capítulo "Eliminación/protección del medio ambiente", punto 1.
5. Ciertos productos, como p. ej. las instalaciones de radiocomunicación RF, pueden a causa de su función natural, emitir una radiación electromagnética aumentada. Deben tomarse todas las medidas necesarias para la protección de las mujeres embarazadas. También las personas con marcapasos pueden correr peligro a causa de la radiación electromagnética. El empresario/operador tiene la obligación de evaluar y señalizar las áreas de trabajo en las que exista un riesgo elevado de exposición a radiaciones.
6. Tenga en cuenta que en caso de incendio pueden desprenderse del producto sustancias tóxicas (gases, líquidos etc.) que pueden generar daños a la salud. Por eso, en caso de incendio deben usarse medidas adecuadas, como p. ej. máscaras antigás e indumentaria de protección.
7. Los productos con láser están provistos de indicaciones de advertencia normalizadas en función de la clase de láser del que se trate. Los rayos láser pueden provocar daños de tipo biológico a causa de las propiedades de su radiación y debido a su concentración extrema de potencia electromagnética. En caso de que un producto Rohde & Schwarz contenga un producto láser (p. ej. un lector de CD/DVD), no debe usarse ninguna otra configuración o función aparte de las descritas en la documentación del producto, a fin de evitar lesiones (p. ej. debidas a irradiación láser).
8. Clases de compatibilidad electromagnética (conforme a EN 55011 / CISPR 11; y en analogía con EN 55022 / CISPR 22, EN 55032 / CISPR 32)
 - Aparato de clase A:
Aparato adecuado para su uso en todos los entornos excepto en los residenciales y en aquellos conectados directamente a una red de distribución de baja tensión que suministra corriente a edificios residenciales.
Nota: Los aparatos de clase A están destinados al uso en entornos industriales. Estos aparatos pueden causar perturbaciones radioeléctricas en entornos residenciales debido a posibles perturbaciones guiadas o radiadas. En este caso, se le podrá solicitar al operador que tome las medidas adecuadas para eliminar estas perturbaciones.
 - Aparato de clase B:
Aparato adecuado para su uso en entornos residenciales, así como en aquellos conectados directamente a una red de distribución de baja tensión que suministra corriente a edificios residenciales.

Reparación y mantenimiento

1. El producto solamente debe ser abierto por personal especializado con autorización para ello. Antes de manipular el producto o abrirlo, es obligatorio desconectarlo de la tensión de alimentación, para evitar toda posibilidad de choque eléctrico.
2. El ajuste, el cambio de partes, el mantenimiento y la reparación deberán ser efectuadas solamente por electricistas autorizados por Rohde & Schwarz. Si se reponen partes con importancia para los aspectos de seguridad (p. ej. el enchufe, los transformadores o los fusibles), solamente podrán ser sustituidos por partes originales. Después de cada cambio de partes relevantes para la seguridad deberá realizarse un control de seguridad (control a primera vista, control del conductor de protección, medición de resistencia de aislamiento, medición de la corriente de fuga, control de funcionamiento). Con esto queda garantizada la seguridad del producto.

Baterías y acumuladores o celdas

Si no se siguen (o se siguen de modo insuficiente) las indicaciones en cuanto a las baterías y acumuladores o celdas, pueden producirse explosiones, incendios y/o lesiones graves con posible consecuencia de muerte. El manejo de baterías y acumuladores con electrolitos alcalinos (p. ej. celdas de litio) debe seguir el estándar EN 62133.

1. No deben desmontarse, abrirse ni triturarse las celdas.
2. Las celdas o baterías no deben someterse a calor ni fuego. Debe evitarse el almacenamiento a la luz directa del sol. Las celdas y baterías deben mantenerse limpias y secas. Limpiar las conexiones sucias con un paño seco y limpio.
3. Las celdas o baterías no deben cortocircuitarse. Es peligroso almacenar las celdas o baterías en estuches o cajones en cuyo interior puedan cortocircuitarse por contacto recíproco o por contacto con otros materiales conductores. No deben extraerse las celdas o baterías de sus embalajes originales hasta el momento en que vayan a utilizarse.
4. Las celdas o baterías no deben someterse a impactos mecánicos fuertes indebidos.
5. En caso de falta de estanqueidad de una celda, el líquido vertido no debe entrar en contacto con la piel ni los ojos. Si se produce contacto, lavar con agua abundante la zona afectada y avisar a un médico.
6. En caso de cambio o recarga inadecuados, las celdas o baterías que contienen electrolitos alcalinos (p. ej. las celdas de litio) pueden explotar. Para garantizar la seguridad del producto, las celdas o baterías solo deben ser sustituidas por el tipo Rohde & Schwarz correspondiente (ver lista de recambios).
7. Las baterías y celdas deben reciclarse y no deben tirarse a la basura doméstica. Las baterías o acumuladores que contienen plomo, mercurio o cadmio deben tratarse como residuos especiales. Respete en esta relación las normas nacionales de eliminación y reciclaje.

Transporte

1. El producto puede tener un peso elevado. Por eso es necesario desplazarlo o transportarlo con precaución y, si es necesario, usando un sistema de elevación adecuado (p. ej. una carretilla elevadora), a fin de evitar lesiones en la espalda u otros daños personales.

Instrucciones de seguridad elementales

2. Las asas instaladas en los productos sirven solamente de ayuda para el transporte del producto por personas. Por eso no está permitido utilizar las asas para la sujeción en o sobre medios de transporte como p. ej. grúas, carretillas elevadoras de horquilla, carros etc. Es responsabilidad suya fijar los productos de manera segura a los medios de transporte o elevación. Para evitar daños personales o daños en el producto, siga las instrucciones de seguridad del fabricante del medio de transporte o elevación utilizado.
3. Si se utiliza el producto dentro de un vehículo, recae de manera exclusiva en el conductor la responsabilidad de conducir el vehículo de manera segura y adecuada. El fabricante no asumirá ninguna responsabilidad por accidentes o colisiones. No utilice nunca el producto dentro de un vehículo en movimiento si esto pudiera distraer al conductor. Asegure el producto dentro del vehículo debidamente para evitar, en caso de un accidente, lesiones u otra clase de daños.

Eliminación/protección del medio ambiente

1. Los dispositivos marcados contienen una batería o un acumulador que no se debe desechar con los residuos domésticos sin clasificar, sino que debe ser recogido por separado. La eliminación se debe efectuar exclusivamente a través de un punto de recogida apropiado o del servicio de atención al cliente de Rohde & Schwarz.
2. Los dispositivos eléctricos usados no se deben desechar con los residuos domésticos sin clasificar, sino que deben ser recogidos por separado.
Rohde & Schwarz GmbH & Co.KG ha elaborado un concepto de eliminación de residuos y asume plenamente los deberes de recogida y eliminación para los fabricantes dentro de la UE. Para desechar el producto de manera respetuosa con el medio ambiente, dirijase a su servicio de atención al cliente de Rohde & Schwarz.
3. Si se trabaja de manera mecánica y/o térmica cualquier producto o componente más allá del funcionamiento previsto, pueden liberarse sustancias peligrosas (polvos con contenido de metales pesados como p. ej. plomo, berilio o níquel). Por eso el producto solo debe ser desmontado por personal especializado con formación adecuada. Un desmontaje inadecuado puede ocasionar daños para la salud. Se deben tener en cuenta las directivas nacionales referentes a la eliminación de residuos.
4. En caso de que durante el trato del producto se formen sustancias peligrosas o combustibles que deban tratarse como residuos especiales (p. ej. refrigerantes o aceites de motor con intervalos de cambio definidos), deben tenerse en cuenta las indicaciones de seguridad del fabricante de dichas sustancias y las normas regionales de eliminación de residuos. Tenga en cuenta también en caso necesario las indicaciones de seguridad especiales contenidas en la documentación del producto. La eliminación incorrecta de sustancias peligrosas o combustibles puede causar daños a la salud o daños al medio ambiente.

Se puede encontrar más información sobre la protección del medio ambiente en la página web de Rohde & Schwarz.

Quality management and environmental management

Certified Quality System
ISO 9001

Certified Environmental System
ISO 14001

Sehr geehrter Kunde,

Sie haben sich für den Kauf eines Rohde&Schwarz Produktes entschieden. Sie erhalten damit ein nach modernsten Fertigungsmethoden hergestelltes Produkt. Es wurde nach den Regeln unserer Qualitäts- und Umweltmanagementsysteme entwickelt, gefertigt und geprüft. Rohde&Schwarz ist unter anderem nach den Managementsystemen ISO 9001 und ISO 14001 zertifiziert.

Der Umwelt verpflichtet

- Energie-effiziente, RoHS-konforme Produkte
- Kontinuierliche Weiterentwicklung nachhaltiger Umweltkonzepte
- ISO 14001-zertifiziertes Umweltmanagementsystem

Dear customer,

You have decided to buy a Rohde&Schwarz product. This product has been manufactured using the most advanced methods. It was developed, manufactured and tested in compliance with our quality management and environmental management systems. Rohde&Schwarz has been certified, for example, according to the ISO 9001 and ISO 14001 management systems.

Environmental commitment

- Energy-efficient products
- Continuous improvement in environmental sustainability
- ISO 14001-certified environmental management system

Cher client,

Vous avez choisi d'acheter un produit Rohde&Schwarz. Vous disposez donc d'un produit fabriqué d'après les méthodes les plus avancées. Le développement, la fabrication et les tests de ce produit ont été effectués selon nos systèmes de management de qualité et de management environnemental. La société Rohde&Schwarz a été homologuée, entre autres, conformément aux systèmes de management ISO 9001 et ISO 14001.

Engagement écologique

- Produits à efficience énergétique
- Amélioration continue de la durabilité environnementale
- Système de management environnemental certifié selon ISO 14001



Customer Support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz equipment, contact one of our Customer Support Centers. A team of highly qualified engineers provides telephone support and will work with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz equipment.

Up-to-date information and upgrades

To keep your instrument up-to-date and to be informed about new application notes related to your instrument, please send an e-mail to the Customer Support Center stating your instrument and your wish. We will take care that you will get the right information.

Europe, Africa, Middle East

Phone +49 89 4129 12345
customersupport@rohde-schwarz.com

North America

Phone 1-888-TEST-RSA (1-888-837-8772)
customer.support@rsa.rohde-schwarz.com

Latin America

Phone +1-410-910-7988
customersupport.la@rohde-schwarz.com

Asia/Pacific

Phone +65 65 13 04 88
customersupport.asia@rohde-schwarz.com

China

Phone +86-800-810-8228 /
+86-400-650-5896
customersupport.china@rohde-schwarz.com



Contents

1	Preface.....	15
1.1	Documentation Overview.....	15
1.2	Conventions Used in the Documentation.....	16
1.2.1	Typographical Conventions.....	16
1.2.2	Conventions for Procedure Descriptions.....	17
1.3	How to Use the Help System.....	17
2	Measurement Modes.....	19
2.1	Receiver Mode.....	19
2.2	Spectrum Mode.....	19
2.3	I/Q Analyzer Mode.....	20
2.4	Measurement Mode Root Menus (HOME Key).....	20
3	Receiver Mode.....	21
3.1	Measurements and Result Displays.....	21
3.1.1	Bargraph Measurement.....	21
3.1.2	IF Spectrum Analysis.....	22
3.1.3	Scans.....	23
3.1.3.1	Stepped Scans in the Frequency Domain.....	24
3.1.3.2	Time Domain Scans in the Frequency Domain.....	25
3.1.3.3	The Scan Table.....	25
3.1.4	Peak List and Data Reduction.....	26
3.1.5	Final Measurement.....	28
3.1.6	Spectrogram.....	29
3.1.6.1	How a Spectrogram Works.....	29
3.1.6.2	Color Map.....	30
3.1.7	Measurement Control.....	34
3.1.7.1	Running Scans and Measurements.....	34
3.1.7.2	Selecting the Result Display.....	34
3.1.7.3	Bargraph Control.....	35
3.1.7.4	Scan Control.....	36
3.1.7.5	Final Measurement Control.....	38
3.1.7.6	Measurement Settings.....	40

3.1.7.7	Spectrogram Configuration.....	42
3.2	Measurement Basics.....	44
3.2.1	Measurement Bandwidth.....	44
3.2.2	Measurement Time.....	45
3.2.3	Detectors.....	46
3.2.4	Trace Modes.....	50
3.2.5	AF Demodulation.....	52
3.2.6	V-Networks Control (LISN).....	52
3.2.7	Transducers.....	54
3.2.8	Preamplifier.....	55
3.2.9	Exported Peak List.....	55
3.2.10	Formats for Returned Values: ASCII Format and Binary Format.....	56
3.3	Common Measurement Settings.....	58
3.3.1	Defining the Frequency and Span.....	58
3.3.2	Configuring the Level Display and the RF Input.....	60
3.3.3	Selecting the Bandwidth.....	63
3.3.4	Configuring the Scan.....	64
3.3.5	Configuring the Trigger	65
3.3.6	Controlling Inputs and Outputs.....	65
3.3.7	Test Automation.....	66
3.3.7.1	Overview	66
3.3.7.2	Scan Table.....	68
3.3.7.3	Peak Search.....	70
3.3.7.4	Peak Lists.....	72
3.3.7.5	Trace / Final Meas.....	74
3.3.7.6	LISN Settings.....	74
3.4	Common Analysis Functions.....	76
3.4.1	Trace Configuration.....	76
3.4.2	Markers.....	78
3.4.2.1	Controlling Markers.....	78
3.4.2.2	Positioning Markers.....	82
3.4.2.3	Markers in Spectrograms.....	85
3.4.3	(Limit) Lines.....	86

3.4.3.1	Softkeys of the Lines Menu.....	87
3.4.3.2	Display Lines.....	91
3.4.3.3	Limit Lines (Frequency/Time Lines).....	92
3.4.3.4	Working with Lines.....	93
3.4.3.5	Selecting a Limit Line.....	93
3.4.3.6	Creating a New Limit Line.....	94
3.4.3.7	Editing an Existing Limit Line.....	97
3.4.3.8	Creating a New Limit Line Based upon an Existing Limit Line.....	97
3.4.3.9	Activating/Deactivating a Limit Line.....	98
4	Spectrum Measurements.....	99
4.1	Measurements.....	99
4.1.1	Power Measurements – MEAS Key.....	99
4.1.1.1	Softkeys of the Power Measurement Menu.....	100
4.1.1.2	Measuring Channel Power and Adjacent-Channel Power.....	103
4.1.1.3	Measuring the Carrier-to-Noise Ratio.....	127
4.1.1.4	Measuring the Occupied Bandwidth.....	130
4.1.1.5	Measuring with Spectrum Emission Masks.....	134
4.1.1.6	Measuring Spurious Emissions.....	161
4.1.1.7	Measuring the Power in Zero Span.....	172
4.1.1.8	Performing EMI Measurements.....	175
4.1.1.9	Calculating Signal Amplitude Statistics.....	184
4.1.1.10	Measuring the Third Order Intercept Point (TOI).....	203
4.1.1.11	Measuring the AM Modulation Depth.....	209
4.1.1.12	Measuring Harmonic Distortion.....	210
4.1.2	Measurement Configuration – MEAS CONFIG Key.....	214
4.1.3	Performing Measurements – RUN SINGLE/RUN CONT Keys.....	214
4.2	Configuration.....	215
4.2.1	Initializing the Configuration – PRESET Key.....	215
4.2.1.1	Presetting the Instrument.....	215
4.2.1.2	Initial Configuration.....	216
4.2.2	Selecting the Frequency and Span – FREQ Key.....	217
4.2.2.1	Softkeys of the Frequency Menu.....	217
4.2.2.2	Specifying the Frequency Axis by the Start and Stop Frequency.....	221

4.2.2.3	Specifying the Frequency Axis by the Center Frequency and the Span.....	221
4.2.2.4	Specifying the Step Size for the Arrow Keys and the Rotary Knob.....	222
4.2.2.5	Modifying the Frequency Axis by an Offset.....	222
4.2.2.6	Tracking Signals (Span > 0).....	222
4.2.3	Setting the Frequency Span – SPAN Key.....	223
4.2.3.1	Softkeys of the Span Menu.....	223
4.2.3.2	Specifying the Span (Alternatives).....	224
4.2.4	Setting the Level Display and Configuring the RF Input – AMPT Key.....	224
4.2.4.1	Softkeys of the Amplitude Menu.....	224
4.2.4.2	Specifying the Amplitude.....	229
4.2.5	Defining Automatic Settings – AUTO SET Key.....	230
4.2.5.1	Softkeys of the Auto Set Menu.....	230
4.2.6	Setting the Bandwidths and Sweep Time – BW Key.....	233
4.2.6.1	Softkeys of the Bandwidth Menu.....	233
4.2.6.2	Specifying the Bandwidth.....	239
4.2.6.3	Selecting the Appropriate Filter Type.....	239
4.2.6.4	List of Available RRC and Channel Filters.....	240
4.2.7	Configuring the Sweep Mode – SWEEP Key.....	242
4.2.7.1	Softkeys of the Sweep Menu.....	242
4.2.7.2	Specifying the Sweep Settings.....	247
4.2.8	Triggering the Sweep – TRIG Key.....	247
4.2.8.1	Softkeys of the Trigger Menu.....	247
4.2.8.2	Specifying the Trigger Settings.....	253
4.2.8.3	Using Gated Sweep Operation.....	254
4.2.9	Input/Output Configuration – INPUT/OUTPUT Key.....	256
4.2.9.1	Softkeys of the Input/Output Menu.....	256
4.2.9.2	Using Active Probes for Input.....	257
4.3	Analysis.....	260
4.3.1	Trace Configuration.....	260
4.3.1.1	Softkeys of the Trace Menu.....	261
4.3.1.2	Configuring Traces.....	269
4.3.1.3	Specifying the Trace Settings.....	270
4.3.1.4	Description of the Averaging Method.....	271

4.3.1.5	Detector Overview.....	272
4.3.1.6	ASCII File Export Format.....	273
4.3.2	Spectrogram.....	274
4.3.2.1	Working with Spectrograms.....	274
4.3.2.2	Softkeys of the Spectrogram Menu.....	277
4.3.3	Markers.....	278
4.3.3.1	Controlling Markers.....	278
4.3.3.2	Positioning Markers (MKR→ Key).....	283
4.3.3.3	Performing Peak Searches with Markers – PEAK SEARCH Key.....	288
4.3.3.4	Measuring with Markers (MKR FUNC Key).....	288
4.3.4	Lines.....	301
4.4	Advanced Measurement Examples.....	302
4.4.1	Test Setup.....	302
4.4.2	Measurement of Harmonics.....	303
4.4.3	Measuring the Spectra of Complex Signals.....	305
4.4.3.1	Separating Signals by Selecting an Appropriate Resolution Bandwidth.....	305
4.4.3.2	Intermodulation Measurements.....	306
4.4.4	Measuring Signals in the Vicinity of Noise.....	308
4.4.4.1	Measurement Example – Measuring Level at Low S/N Ratios.....	309
4.4.5	Noise Measurements.....	313
4.4.5.1	Measuring Noise Power Density.....	314
4.4.5.2	Measurement of Noise Power within a Transmission Channel.....	316
4.4.5.3	Measuring Phase Noise.....	318
4.4.6	Measurements on Modulated Signals.....	320
4.4.6.1	Measuring Channel Power and Adjacent Channel Power.....	320
4.4.6.2	Amplitude Distribution Measurements.....	327
5	I/Q Analyzer.....	330
5.1	Softkeys and Parameters of the I/Q Analyzer Menu.....	331
5.2	Softkeys of the Amplitude Menu in I/Q Analyzer Mode.....	336
5.3	Softkeys of the Marker To Menu in I/Q Analyzer Mode.....	340
5.4	Softkeys of the Trigger Menu in I/Q Analyzer Mode.....	340
5.5	Working with I/Q Data.....	344
5.5.1	Sample Rate and Maximum Usable Bandwidth (RF Input).....	345

6	Tracking Generator.....	347
6.1	Softkeys of the Tracking Generator Menu.....	347
6.2	Configuring Tracking Generators.....	351
6.2.1	Internal Tracking Generator.....	352
6.3	Tracking Generator Functions.....	353
6.3.1	Calibration mechanism.....	353
6.3.2	Calibrating for transmission and reflection measurement.....	354
6.3.3	Transmission measurement.....	355
6.3.4	Reflection measurement.....	355
6.3.5	Normalization.....	356
6.3.6	Modulation (internal Tracking Generator only).....	359
6.4	Displayed Information and Errors.....	361
7	System Configuration.....	363
7.1	Manual Operation – Local Menu.....	363
7.2	User-Defined Menu – USER key.....	364
7.3	Instrument Setup and Interface Configuration – SETUP Key.....	365
7.3.1	Softkeys of the Setup Menu.....	365
7.3.2	Activating or Deactivating the LXI Class C Functionality.....	388
7.3.3	LXI Class C Functionality.....	389
8	Data Management and Documentation.....	390
8.1	Saving and Recalling Settings Files – SAVE/RCL Key.....	390
8.1.1	Softkeys of the SAVE/RCL Menu.....	390
8.1.2	File Selection Dialog Boxes.....	396
8.1.3	Importing and Exporting I/Q Data.....	399
8.1.3.1	iq-tar File Format Specification.....	399
8.2	Measurement Documentation – PRINT Key.....	404
8.3	Working with Test Reports.....	406
8.3.1	Designing a Test Report Template.....	407
8.3.2	Creating a Test Report.....	410
9	Remote Control.....	413
9.1	Remote Control - Basics.....	413
9.1.1	Remote Control Interfaces and Protocols.....	413

9.1.1.1	VISA Libraries.....	415
9.1.1.2	Messages.....	415
9.1.1.3	LAN Interface.....	416
9.1.1.4	GPIB Interface (IEC 625/IEEE 418 Bus Interface).....	419
9.1.2	Starting a Remote Control Session.....	423
9.1.3	Returning to Manual Operation.....	424
9.1.4	SCPI Command Structure.....	424
9.1.4.1	Syntax for Common Commands.....	424
9.1.4.2	Syntax for Device-Specific Commands.....	425
9.1.4.3	SCPI Parameters.....	427
9.1.4.4	Overview of Syntax Elements.....	430
9.1.4.5	Structure of a command line.....	430
9.1.4.6	Responses to Queries.....	431
9.1.5	Command Sequence and Synchronization.....	432
9.1.5.1	Preventing Overlapping Execution.....	433
9.1.6	Status Reporting System.....	435
9.1.6.1	Hierarchy of Status Registers.....	435
9.1.6.2	Structure of a SCPI Status Register.....	436
9.1.6.3	Contents of the Status Register.....	437
9.1.6.4	Application of the Status Reporting System.....	449
9.1.6.5	Reset Values of the Status Reporting System.....	451
9.1.7	General Programming Recommendations.....	452
9.1.8	The IECWIN Tool.....	452
9.2	Selecting the Operating Mode.....	454
9.3	Remote Commands in Receiver Mode.....	455
9.3.1	Measurements and Result Displays.....	455
9.3.1.1	Display Configuration.....	455
9.3.1.2	Bargraph Control.....	456
9.3.1.3	Scan Control.....	458
9.3.1.4	Final Measurements and Automated Test Sequence Control.....	460
9.3.1.5	Trace Data and Result Query.....	461
9.3.1.6	Demodulating Analog Signals.....	465
9.3.1.7	Spectrogram Control.....	466

9.3.2	Defining the Frequency.....	482
9.3.3	Configuring the Vertical Axis.....	484
9.3.4	Selecting the Bandwidth.....	486
9.3.5	Controlling Inputs and Outputs.....	488
9.3.6	Test Automation.....	489
9.3.6.1	General Scan Configuration.....	489
9.3.6.2	Scan Table.....	490
9.3.6.3	Peak Search.....	494
9.3.6.4	Peak Lists.....	497
9.3.6.5	Trace Configuration.....	498
9.3.6.6	LISN Settings.....	499
9.3.7	Working with Markers.....	502
9.3.7.1	Configuring Marker Functionality.....	503
9.3.7.2	Using Markers.....	506
9.3.7.3	Using Delta Markers.....	511
9.3.8	Limit Lines.....	517
9.3.8.1	Using Display Lines.....	517
9.3.8.2	Using Frequency Lines.....	518
9.3.8.3	Using Limit Lines.....	519
9.4	Remote Commands in Spectrum Analyzer Mode.....	532
9.4.1	Measurements and Result Displays.....	532
9.4.1.1	Controlling Power Measurements.....	533
9.4.1.2	Measuring Channel Power.....	540
9.4.1.3	Measuring the Occupied Bandwidth.....	560
9.4.1.4	Measuring Spurious Emissions.....	561
9.4.1.5	Testing Against a Spectrum Emission Mask.....	570
9.4.1.6	Performing EMI Measurements.....	588
9.4.1.7	Measuring the Modulation Depth.....	594
9.4.1.8	Measuring the Harmonic Distortion.....	596
9.4.1.9	Measuring the Carrier-to-Noise Ratio.....	599
9.4.1.10	Measuring the Third Order Intercept Point.....	599
9.4.1.11	Measuring Statistics.....	601
9.4.1.12	Measuring in the Time Domain.....	608

9.4.1.13	Measuring the Pulse Power.....	619
9.4.1.14	Performing List Evaluations.....	623
9.4.1.15	Probe Configuration.....	629
9.4.2	Configuring Spectrum Measurements.....	630
9.4.2.1	Frequency Settings.....	630
9.4.2.2	Automatic Measurement Configuration.....	635
9.4.2.3	Bandwidth Settings.....	637
9.4.2.4	Sweep Configuration.....	640
9.4.2.5	Trigger Configuration.....	643
9.4.2.6	Vertical Axis Configuration.....	649
9.4.3	Analyzing Spectrum Measurements.....	652
9.4.3.1	Trace Configuration.....	652
9.4.3.2	Spectrogram.....	661
9.4.3.3	Limit Lines.....	665
9.4.3.4	Markers.....	666
9.5	Remote Commands in I/Q Analyzer Mode.....	691
9.5.1	Using the I/Q Analyzer.....	691
9.5.2	I/Q Gating.....	702
9.6	Remote Commands to Control the Tracking Generator.....	703
9.7	Common Commands.....	709
9.8	System Configuration.....	713
9.8.1	General System Configuration.....	713
9.8.2	Checking the System Configuration.....	718
9.8.3	Coupling Parameters.....	721
9.8.4	Controlling In- and Outputs.....	724
9.8.5	Configuring the Reference Frequency.....	727
9.8.6	Calibrating the R&S ESRP.....	728
9.8.7	Using Service Functions.....	730
9.9	Data Management.....	732
9.9.1	Managing Data Files.....	732
9.9.2	Saving and Restoring Customized Data.....	738
9.10	Using Transducers.....	741
9.11	Documentation.....	748

9.12 Working with Test Reports.....	757
9.12.1 Designing a Test Report Template.....	757
9.12.1.1 Selecting the Test Report Contents.....	757
9.12.1.2 Designing the Header of the Test Report.....	759
9.12.1.3 Defining the Contents of the Title Page.....	761
9.12.1.4 Managing Templates.....	762
9.12.2 Creating a Test Report.....	763
9.12.2.1 Configuring and Printing the Test Report.....	763
9.12.2.2 Adding and Removing Datasets.....	764
9.12.2.3 Selecting Datasets for the Report.....	765
9.12.3 Deprecated Commands (Test Report).....	766
9.13 Display Configuration.....	767
9.13.1 Controlling Display Elements.....	767
9.13.2 Selecting Items to Store and Restore.....	774
9.14 Network Connection.....	777
9.14.1 Configuring Network Connections.....	777
9.14.2 Emulating HP Instruments.....	780
9.15 Status Register.....	782
9.15.1 General Status Register Commands.....	783
9.15.2 Reading out the EVENT Part.....	783
9.15.3 Reading Out the CONDition Part.....	784
9.15.4 Controlling the ENABLE Part.....	784
9.15.5 Controlling the Negative Transition Part.....	785
9.15.6 Controlling the Positive Transition Part.....	785
9.16 Remote Control – Programming Examples.....	786
9.16.1 Service Request.....	787
9.16.1.1 Initiate Service Request.....	787
9.16.1.2 Waiting for the Arrival of a Service Request.....	788
9.16.1.3 Waiting Without Blocking the Keyboard and Mouse.....	789
9.16.1.4 Service Request Routine.....	790
9.16.1.5 Reading Out the Output Buffer.....	791
9.16.1.6 Reading Error Messages.....	791
9.16.1.7 Evaluation of SCPI Status Registers.....	792

9.16.1.8	Evaluation of Event Status Register.....	793
9.16.2	Using Marker and Delta Marker.....	794
9.16.2.1	Shape Factor Measurement (using n dB down).....	794
9.16.2.2	Measuring the Third Order Intercept Point.....	795
9.16.2.3	Measuring the AM Modulation Depth.....	796
9.16.3	Limit Lines and Limit Test.....	797
9.16.4	Measuring the Channel and Adjacent Channel Power.....	798
9.16.5	Occupied Bandwidth Measurement.....	802
9.16.6	Time Domain Power Measurement.....	802
9.16.7	Fast Power Measurement on Power Ramps.....	803
9.16.7.1	Power Measurement with Multi-Summary Marker.....	803
9.16.7.2	Multi-Burst Power Measurement.....	805
9.16.8	Fast Level Measurement Using Frequency Lists.....	807
9.16.9	Level Correction of Transducers.....	808
9.16.10	Measuring the Magnitude and Phase of a Signal.....	809
9.16.11	Reading and Writing Files.....	811
9.16.11.1	Reading a File from the Instrument.....	811
9.16.11.2	Creating a File on the Instrument.....	812
9.16.12	Spectrum Emission Mask Measurement.....	813
9.16.12.1	Using Predefined Standard Wibro.....	813
9.16.12.2	Defining 5 Ranges with all Parameters.....	814
9.16.13	Spurious Emissions Measurement.....	817
9.16.14	Averaging I/Q Data.....	819
9.16.15	Using IQ Gating.....	820
9.16.16	Usage of Four Spectrum Instances.....	826
9.17	GPIO Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E.....	828
9.17.1	GPIO Languages.....	828
9.17.2	Command Set of Models 8560E, 8561E, 8562E, 8563E, 8564E, 8565E, 8566A/B, 8568A/B, 8591E, 8594E, 71100C, 71200C, and 71209A.....	830
9.17.3	Special Features of the Syntax Parsing Algorithms for 8566A and 8568A Models....	853
9.17.4	Special Behavior of Commands.....	854
9.17.5	Model-Dependent Default Settings.....	855
9.17.6	Data Output Formats.....	856
9.17.7	Trace Data Output Formats.....	856

9.17.8	Trace Data Input Formats.....	857
9.17.9	GPIB Status Reporting.....	857
	List of Commands.....	858
	Index.....	875

1 Preface

1.1 Documentation Overview

The user documentation for the R&S ESRP is divided as follows:

- Quick Start Guide
- Operating Manuals for base unit and options
- Service Manual
- Online Help
- Release Notes

Quick Start Guide

This manual is delivered with the instrument in printed form and in PDF format on the CD. It provides the information needed to set up and start working with the instrument. Basic operations and basic measurements are described. Also a brief introduction to remote control is given. The manual includes general information (e.g. Safety Instructions) and the following chapters:

Chapter 1	Introduction, General information
Chapter 2	Front and Rear Panel
Chapter 3	Preparing for Use
Chapter 4	Firmware Update and Installation of Firmware Options
Chapter 5	Basic Operations
Chapter 6	Basic Measurement Examples
Chapter 7	Brief Introduction to Remote Control
Appendix	LAN Interface

Operating Manuals

The Operating Manuals are a supplement to the Quick Start Guide. Operating Manuals are provided for the base unit and each additional (software) option.

The Operating Manual for the base unit provides basic information on operating the R&S ESRP in general, and the "Spectrum" mode in particular. Furthermore, the software options that enhance the basic functionality for various measurement modes are described here. The set of measurement examples in the Quick Start Guide is expanded by more advanced measurement examples. In addition to the brief introduction to remote control in the Quick Start Guide, a description of the basic analyzer commands and programming examples is given. Information on maintenance, instrument interfaces and error messages is also provided.

In the individual option manuals, the specific instrument functions of the option are described in detail. For additional information on default settings and parameters, refer

to the data sheets. Basic information on operating the R&S ESRP is not included in the option manuals.

These manuals are available in PDF format on the CD delivered with the instrument.

Service Manual

This manual is available in PDF format on the CD delivered with the instrument. It describes how to check compliance with rated specifications, instrument function, repair, troubleshooting and fault elimination. It contains all information required for repairing the R&S ESRP by replacing modules. The manual includes the following chapters:

Chapter 1	Performance Test
Chapter 2	Adjustment
Chapter 3	Repair
Chapter 4	Software Update / Installing Options
Chapter 5	Documents

Release Notes

The release notes describe the installation of the firmware, new and modified functions, eliminated problems, and last minute changes to the documentation. The corresponding firmware version is indicated on the title page of the release notes. The current release notes are provided in the Internet.

1.2 Conventions Used in the Documentation

1.2.1 Typographical Conventions

The following text markers are used throughout this documentation:

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks.
KEYS	Key names are written in capital letters.
File names, commands, program code	File names, commands, coding samples and screen output are distinguished by their font.
<i>Input</i>	Input to be entered by the user is displayed in italics.

Convention	Description
Links	Links that you can click are displayed in blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

1.2.2 Conventions for Procedure Descriptions

When describing how to operate the instrument, several alternative methods may be available to perform the same task. In this case, the procedure using the touchscreen is described. Any elements that can be activated by touching can also be clicked using an additionally connected mouse. The alternative procedure using the keys on the instrument or the on-screen keyboard is only described if it deviates from the standard operating procedures.

The term "select" may refer to any of the described methods, i.e. using a finger on the touchscreen, a mouse pointer in the display, or a key on the instrument or on a keyboard.

1.3 How to Use the Help System

Calling context-sensitive and general help

- To display the general help dialog box, press the HELP key on the front panel.
The help dialog box "View" tab is displayed. A topic containing information about the current menu or the currently opened dialog box and its function is displayed.



For standard Windows dialog boxes (e.g. File Properties, Print dialog etc.), no context-sensitive help is available.

- If the help is already displayed, press the softkey for which you want to display help.
A topic containing information about the softkey and its function is displayed.



If a softkey opens a submenu and you press the softkey a second time, the submenu of the softkey is displayed.

Contents of the help dialog box

The help dialog box contains four tabs:

- "Contents" - contains a table of help contents
- "View" - contains a specific help topic

- "Index" - contains index entries to search for help topics
- "Zoom" - contains zoom functions for the help display

To change between these tabs, press the tab on the touchscreen.

Navigating in the table of contents

- To move through the displayed contents entries, use the UP ARROW and DOWN ARROW keys. Entries that contain further entries are marked with a plus sign.
- To display a help topic, press the ENTER key. The "View" tab with the corresponding help topic is displayed.
- To change to the next tab, press the tab on the touchscreen.

Navigating in the help topics

- To scroll through a page, use the rotary knob or the UP ARROW and DOWN ARROW keys.
- To jump to the linked topic, press the link text on the touchscreen.

Searching for a topic

1. Change to the "Index" tab.
2. Enter the first characters of the topic you are interested in. The entries starting with these characters are displayed.
3. Change the focus by pressing the ENTER key.
4. Select the suitable keyword by using the UP ARROW or DOWN ARROW keys or the rotary knob.
5. Press the ENTER key to display the help topic.

The "View" tab with the corresponding help topic is displayed.

Changing the zoom

1. Change to the "Zoom" tab.
2. Set the zoom using the rotary knob. Four settings are available: 1-4. The smallest size is selected by number 1, the largest size is selected by number 4.

Closing the help window

- Press the ESC key or a function key on the front panel.

2 Measurement Modes

The R&S ESRP provides several measurement modes for different analysis tasks. When you activate a measurement mode, a new measurement channel is created. The channel determines the settings for that measurement mode. Each channel is displayed in a separate tab on the screen.

SCPI command:

`INSTRument[:SElect]` on page 455

To change the measurement mode

1. Press the MODE key.
A menu with the currently available measurement modes is displayed.
2. To activate a different mode, press the corresponding softkey.

2.1 Receiver Mode

In Receiver mode, the R&S ESRP measures the signal level at a particular frequency. It also provides tools (e.g. detectors or bandwidths) necessary to measure the signal according to EMC standards. The Receiver mode is the default mode of the R&S ESRP.

The R&S ESRP also provides function for IF analysis if you have equipped your R&S ESRP with firmware application R&S ESRP-K53. IF analysis is not a separate measurement mode but is integrated into the Receiver mode.

For more information on functionality available for the Receiver mode see [chapter 3, "Receiver Mode"](#), on page 21.

SCPI command:

`INST REC`

2.2 Spectrum Mode

In Spectrum mode the provided functions correspond to those of a conventional spectrum analyzer. The analyzer measures the frequency spectrum of the RF input signal over the selected frequency range with the selected resolution and sweep time, or, for a fixed frequency, displays the waveform of the video signal.

The Spectrum mode also provides spectrogram measurements. The spectrogram is not a separate measurement mode, but rather a trace evaluation mode. Note also that the Spectrogram available in Spectrum mode is independent of that available in real time mode. It provides similar functionality but uses different data acquisition methods.

For more information on functionality available for the Spectrum mode see [chapter 4, "Spectrum Measurements"](#), on page 99.

SCPI command:

`INST SAN`

2.3 I/Q Analyzer Mode

The I/Q Analyzer mode provides measurement and display functions for digital I/Q signals.

For more information on functionality available for the I/Q Analyzer see [chapter 5, "I/Q Analyzer"](#), on page 330.

SCPI command:

`TRACe<n>:IQ[:STATe]` on page 701

2.4 Measurement Mode Root Menus (HOME Key)

The HOME key provides a quick access to the root menu of the current measurement mode.

3 Receiver Mode

In receiver mode, the R&S ESRP measures the level at the set frequency with a selected bandwidth and measurement time. Signal weighting is by means of detectors.

A frequency scan can be performed after setting the start and stop frequency and the step width. Scan subranges are defined in a table.

Functions for data reduction and the control of line impedance simulating network are available.

Preselection is always switched on in receiver mode.

3.1 Measurements and Result Displays

The R&S ESRP provides several types of measurements.

- The bargraph result display shows the signal level on a single frequency.
 - Fast prescans together with several data reduction methods are used to reduce the amount of data in the final measurements. The final measurement is then performed only on frequencies that have a high interferer level.
 - The final measurement may be either automatic or in interactive mode. Automatic control functions for line impedance stabilization networks (LISN) are available.
 - Time domain scans (option R&S ESRP-K53) reduce the required overall measurement times enormously by using fast fourier transform (FFT) of frequency sections. Time domain scan may even eliminate the need for preliminary measurements.
 - IF spectrum analysis mode for manual tuning.
 - The spectrogram result display provides an additional data evaluation method by showing the signals over time.
- | | |
|--|----|
| • Bargraph Measurement | 21 |
| • IF Spectrum Analysis | 22 |
| • Scans | 23 |
| • Peak List and Data Reduction | 26 |
| • Final Measurement | 28 |
| • Spectrogram | 29 |
| • Measurement Control | 34 |

3.1.1 Bargraph Measurement

The bargraph result display shows the signal level on a single frequency. It is a basic result display that indicates the signal level numerically and graphically.

The length of the bar represents the signal level at the current receiver frequency evaluated with the currently selected detector.


Up to four bargraphs with different detector weighting can be displayed simultaneously. The R&S ESRP assigns a different color to each detector. This provides an easy way to compare the signal level with different weighting factors.



- 1 = current level unit
- 2 = current receiver frequency
- 3 = detectors
- 4 = measured levels (numerically)
- 5 = measured levels (graphically)

The results in the bargraph are shown upon entering the receiver mode. Either single or continuous measurement can be selected. The level range is always 100 dB, the unit of the displayed signal level can be selected.

An enabled maxhold function shows the maximum level that has been measured for each active detector in addition to the live results. If a new maximum has been found, the result indication is updated accordingly. The display keeps the overall maximum level even after changing the frequency until a reset of the maxhold function.

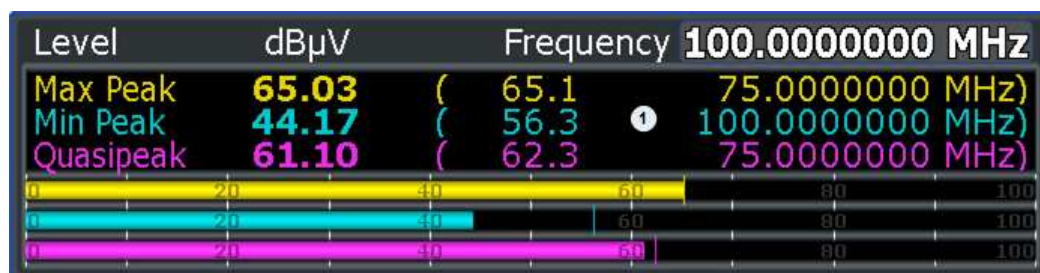

- 1 = maximum levels; note that the maximum and quasipeak peaks have been measured at frequency different to the current receiver frequency

3.1.2 IF Spectrum Analysis

The IF spectrum analysis is a very comfortable means for exact frequency tuning of the receiver and for identification of signals and of their bandwidth.

In IF spectrum analysis, the spectrum of the RF input signal is displayed in the vicinity of the receiver frequency. The center frequency of the displayed spectrum is always the current receive frequency.

The IF analysis provides a fast overview of the assignment of the spectrum adjacent to the measuring channel proper, or, with a large resolution bandwidth, the spectral distribution of a modulated signal in the channel. Interference of the received useful signal can also be detected quickly, whether it is CW interference appearing as unmodulated carrier or pulse-like interference which is represented in the form of narrow horizontal lines on the screen.

The accuracy of the frequency axis corresponds to the reference used (internal or external). The frequency display range (span) can be selected between 1 kHz and 10 MHz in steps of 1, 2 and 5. With the bandwidths 10 Hz to 100 kHz in steps of 1, 3, 10 the frequency resolution can be matched to the span.

In contrast to normal spectrum analyzer operation, the measured values are determined using FFT from samples recorded from the A/D-converter. Thus the receiver stays tuned to the center frequency. It may continue to measure with the selected measurement time and display the signal level with the bargraph. For example, the quasi-peak level measured with one second measurement time may be displayed in the upper half of the display while in the lower half the spectrum may be refreshed every few milliseconds.

The measurement time of the bargraph may be longer than the measurement time of the IF analysis. If the measurement time of the bargraph is set to a smaller value than the measurement time of the IF analysis, the bargraph will as often be refreshed as the display of the IF analysis.

The level display of the IF analysis is unweighted. It is independent of the selected detector for the bargraph measurement, e.g. average or quasi peak. A maximum of three traces can be displayed in parallel. The display mode "Clear / Write", "Max Hold", "Min Hold", "Average", "View" or "Blank" may be selected independent for each trace.



The displayed level values do have the full accuracy of the instrument only at the center frequency. At all other frequencies, the level is typically lower due to the frequency response of the IF filter and the preselector.

The IF display does switch on the 6 dB EMI resolution bandwidth filters for the bargraph measurement. 3 dB or channel filters are not possible in the IF analysis mode. The maximum span for the IF analysis is limited to ten times the selected resolution bandwidth for the bar graph measurement. This is due to the dynamic range of the bar graph measurement.

3.1.3 Scans

In scan mode, the R&S ESRP measures in a predefined frequency range with selectable step width and measurement time for each frequency.

A scan is either based on the current receiver settings or on the settings defined in the "Scan Table" (see [chapter 3.1.3.3, "The Scan Table"](#), on page 25).

Transducer factors or transducer sets and limit lines can be defined and displayed separately and are not part of the scan data record.

The scanned frequency range is defined by the start and stop frequency set independently of the scan table. A scan table can thus be defined for each measurement task.

The scan can be performed as a single scan or continuously. In the case of single scan it is stopped when the stop frequency is reached. The continuous scan can be interrupted or terminated any time.

The maximal number of measured frequencies is limited to 4.000.000 per detector. The data can be stored for postprocessing. If the scan subranges are defined so that more than the possible values would be measured, a respective message is output upon the scan start. Afterwards the scan is performed up to the maximum value.

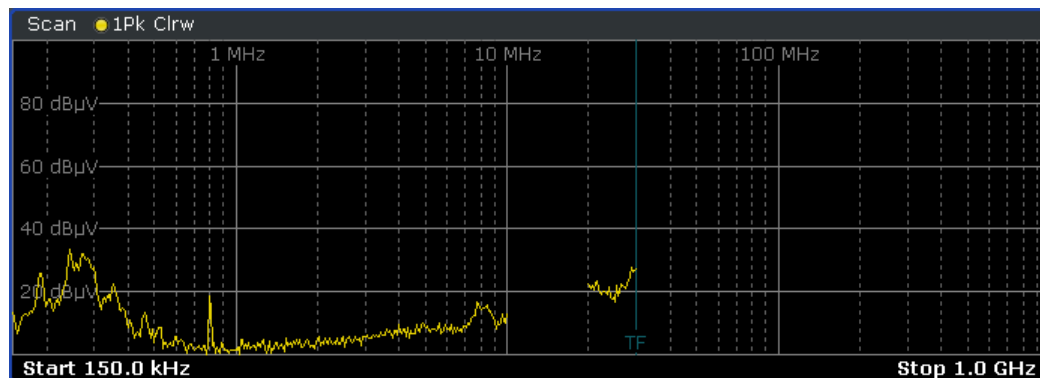


Fig. 3-1: Scan on selected frequencies showing gaps in the trace

The R&S ESRP offers three types of scans:

- **Stepped scan in the frequency domain**
In stepped scan mode, step width and frequency spacing (step mode) can be selected.
- **Time domain scan in the frequency domain**
In time domain measurement systems, up to 30 MHz of the spectrum at the receiver input are measured in parallel by using fast fourier transform (FFT) of frequency sections. Time Domain scans require option R&S ESRP-K53.
- [Stepped Scans in the Frequency Domain](#).....24
- [Time Domain Scans in the Frequency Domain](#).....25
- [The Scan Table](#).....25

3.1.3.1 Stepped Scans in the Frequency Domain

In stepped scan mode, the step width and the frequency spacing (step mode) can be selected. Linear, logarithmic or automatic frequency spacing is available. In automatic mode, the step width is selected so that it is always smaller than the bandwidth.

EMI measurements may involve much time. Time saving procedures are explained in [chapter 3.1.4, "Peak List and Data Reduction"](#), on page 26. They reduced the total measurement time by reducing the number of quasipeak measurements to a minimum.

Nevertheless, this time is still very long, often in the order of hours, especially for the CISPR radiated emissions tests. A way out of this situation can be time-domain measurements, see [chapter 3.1.3.2, "Time Domain Scans in the Frequency Domain"](#), on page 25.

3.1.3.2 Time Domain Scans in the Frequency Domain

Time Domain scan are available with firmware application R&S ESRP-K53. Measurement results fully comply with CISPR 16-1-1 standards.

Time domain scan reduce the overall measurement time enormously. For applications like voltage tests, no preliminary measurement for data reduction is required, because the final measurement with the quasipeak detector is already fast enough. For more time consuming tests like field strength test with mast and turn table, prescans are still recommended. However, due to the increased measurement speed both in prescan and final scan, the overall measurement still is considerably reduced.

Whereas in conventional EMI measurement systems, only the spectrum within the measurement bandwidth can be measured during a certain measurement time of e.g. 100 ms, in this measurement systems, large parts of the spectrum at the receiver input can be measured in parallel using fast fourier transform (FFT) of frequency sections.

For measurements with prescan, the prescan is used to get a detailed overview of the emission spectrum. The prescan result is then analyzed and the critical frequencies can be determined. On the critical frequencies, if further maximization with antenna mast and turntable movement is needed, the R&S ESRP can be used in its conventional measurement function with quasipeak and/or average detection.


3.1.3.3 The Scan Table

Either the current receiver settings or the settings defined in the Scan table are used for stepped or time domain scans.

In the scan table, up to 10 subranges can be defined within one scan. They need not be next to each other. The subranges are then scanned by R&S ESRP one after the other. Measurement ranges should not overlap. The parameters to be measured in each subrange can be selected independently. For more information on the available range parameters see [chapter 3.3.7.2, "Scan Table"](#), on page 68.

Example:

The graph below shows a scan performed in four subranges. The scan start at the start frequency of subrange 1. Between subrange 2 and 3 is a frequency gap, where no measurement is performed. In subrange 4, the part of the frequency range that is outside the overall scan range is also not considered for the scan results.

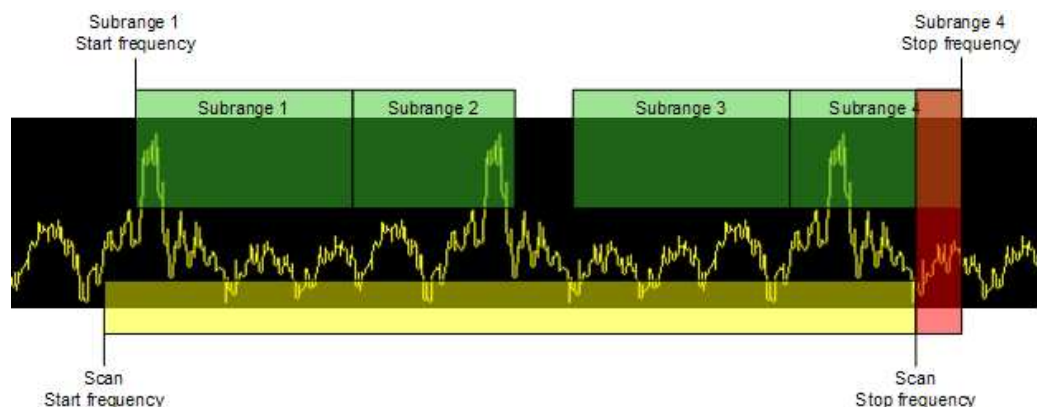

Scan Table

Scan Start: 100.0 kHz Time Domain Scan:

Scan Stop: 101.0 kHz

Step Mode: AUTO

	Range 1	Range 2	Range 3
Range Start	9.0 kHz	150.0 kHz	30.0 MHz
Range Stop	150.0 kHz	30.0 MHz	1.0 GHz
Step Size	50.0 Hz	2.25 kHz	30.0 kHz
Res BW	200.0 Hz	9.0 kHz	120.0 kHz
Meas Time	1 s	1 s	1 s
Auto Ranging	<input checked="" type="button" value="OFF"/> ON	<input checked="" type="button" value="OFF"/> ON	<input checked="" type="button" value="OFF"/> ON
RF Attenuation	50 dB	10 dB	10 dB
Preamplifier	OFF	OFF	OFF

Range Start = Start frequency of the scan range. To avoid overlapping scan ranges, the stop frequency of the previous scan range is adjusted if necessary.

Range Stop = Stop frequency of the scan range. To avoid overlapping scan ranges, the start range of the next scan range is adjusted if necessary.

Stepsize = Frequency stepsize within the scan range. If you define a stepsize that is larger than the range itself, the R&S ESRP only measures the start and stop frequencies of the scan range. The step size is available if the [Step Mode](#) is either linear or logarithmic. If the step mode is linear, the step size is a value in Hz. If the step mode is logarithmic, the step size is a percentage.

Res BW = Measurement bandwidth used within the scan range, see [chapter 3.2.1, "Measurement Bandwidth"](#), on page 44

Meas Time = Measurement time for the scan range, see [chapter 3.2.2, "Measurement Time"](#), on page 45

Auto Ranging = Turns automatic selection of the input attenuation on and off, see [Auto Range \(On Off\)](#)

RF Attenuation = Attenuation level at the RF input.

Preamplifier = Turns the preamplifier on and off. If you select "Auto", the preamplifier is also considered in the auto ranging process.

RF Input = Selects the RF input.

3.1.4 Peak List and Data Reduction

Peak List

The Peak Search function of the R&S ESRP can be used to create a peak list containing only the measurement values of high interferers. In a fast prescan the signal is measured against a limit line, and the level values above the set margin are written into the peak list. The resulting peak list then is used for the final measurement where only the frequencies in the peak list are measured with the required detector.

If the scan uses the detector stipulated by the specifications, the peak list already provides the final measurement data.


Data Reduction using the Peak List

EMI measurements may involve much time because the time constants of up to 160 ms prescribed by the standard for the quasipeak weighting lead to long measurement times per each value. In addition, some standards stipulate procedures for finding local EMI maxima such as shifting the absorbing clamp, variation of the test antenna height and rotating the DUT. Measuring with quasipeak weighting at each frequency and for each setting of the test configuration would lead to unacceptably long measurement times. For this reason, a method is used which reduces the time-consuming measurements to a minimum with an optimum reliability of detection.

The interference spectrum is first pre-analyzed in a fast prescan to optimize the duration of the measurement. Data reduction follows so that the time-consuming final measurement is performed only at critical frequencies.

Several data reduction methods are used:

- Generating subrange maxima (search method "Subranges").
The whole frequency range is divided into equidistant frequency subranges. A selectable number of subrange maxima are determined for each subrange. In the final measurement, the interference spectrum is further analyzed at frequencies with the highest interference level of a frequency subrange.

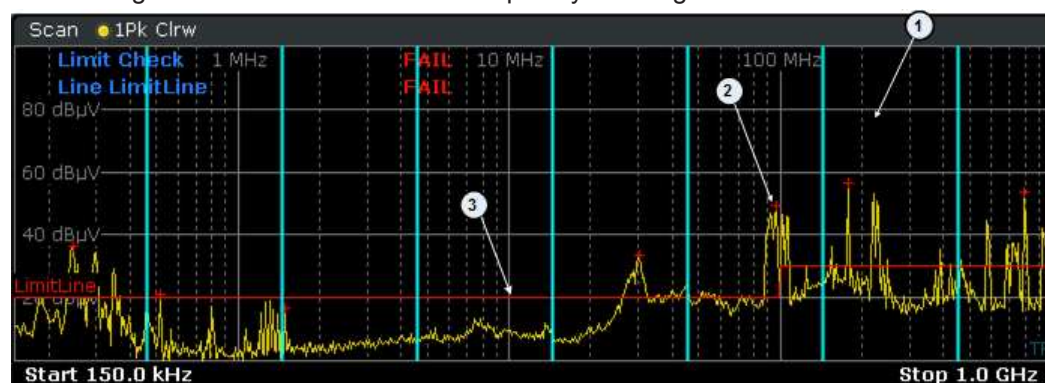

1 = Subrange
2 = Subrange maximum
3 = Limit line

- Determination of a specific number of peak values relative to the limit lines with the level values being independent of their frequency spectral distribution (search method "Peaks").
Determining the level maxima irrespective of their distribution in the frequency spectrum is suitable for measurement regulations that demand determination of the relatively highest level irrespective of the distribution in the measured frequency range, e.g. FCC.

If the prescan is performed in parallel with several detectors, typically Peak and Average, the maxima are determined separately for the two detectors so that the distribution of narrowband and wideband sources of interference can be taken into account. For example, the frequency of the maximum determined with the average detector can be used for the final measurement performed with the CISPR Avg detector and the frequency found in the prescan carried out with the peak detector is taken for the final measurement using the quasipeak detector.

Consideration of the limit lines ensures that the final measurement is not performed at frequencies at which the inference level is far below the limit value. A margin below the limit line can be defined (in dB). Peak values measured in the margin area are also considered in the final measurement. The margin is valid for all limit lines. Each limit line is allocated to a trace, i.e. different limit lines are taken for the different detectors.

If no limit lines are activated, the measurement procedure is as if all measured values would exceed the limit line.

Data Reduction by Editing the Peak List

As an alternative method, it is possible to preset a list of frequencies at which the final measurements are performed. A typical application is, for example, the statistical analysis of several units.

The peak list can be either edited manually or can be filled with desired values by adopting the marker values.

3.1.5 Final Measurement

A final measurement is performed after data reduction, thus reducing the overall measurement time.

The final measurement analyzes only the data that still remains after the preliminary measurement stages, in other words those frequencies that have been collected in the peak list. Detectors defined for the final measurement replace those that have been used during preliminary measurements.

Because the peak list contains a manageable set of frequencies only, the final measurement is also usable in combination with a configuration that requires long measurement times. It is then still possible to perform the measurement in a reasonable time frame.

During the final measurement, the R&S ESRP performs a measurement on each frequency in the peak list. When done, it updates the preliminary results in the peak list with those found during the final measurement.

Automatic vs interactive final measurements

The R&S ESRP provides two methods to perform a final measurement: an automatic and interactive final measurement.

An automatic final measurement measures all frequencies in the peak list automatically. The measurement can be interrupted or aborted, or the measurement mode can be switched to interactive. Measurement settings can not be changed. The advantage is that the measurement runs on its own.

Control of the final measurement is possible in interactive final measurement mode.

In interactive final measurement mode, the R&S ESRP stops on each frequency of the peak list. If required, the frequency can be fine tuned, e.g. if the interferer has shifted. For fine tuning, the bargraph display can be used to find the new peak value. The level measurement is performed only after initialization by the user.

It is possible to start with an automatic measurement and later change into interactive mode. Likewise, it is possible to start measuring in interactive mode and later change into automatic mode.

3.1.6 Spectrogram

In receiver mode, the R&S ESRP provides a spectrogram result display for scans and for IF analysis. For both result displays, the spectrogram allows you to view and evaluate the signal characteristics over time.

3.1.6.1 How a Spectrogram Works

A spectrogram shows the spectral density of a signal in the frequency domain and over time simultaneously. It provides an overview of the spectrum over time and so allows for an easy detection of anomalies and interfering signals.

The horizontal axis represents the frequency span. The vertical axis represents time. Time in the spectrogram runs chronologically from top to bottom. Therefore, the top of the diagram is the most recently recorded data. A spectrogram also shows the power levels that have been measured. To display the level information, the R&S ESRP maps different colors to each power level that has been measured.

Creating a spectrogram consists of several stages.

- Data acquisition based on the scan or the IF analysis
- Result coloring
- Data processing

The stages occur simultaneously.

Data acquisition

The spectrogram uses the traces of the scan or the IF analysis as its data basis. The data capture process is therefore the same as that of these two measurements.

Note that if you use the Scan or IF Analysis result displays, the R&S ESRP saves spectrogram data even if the spectrogram result display is off.

After the data has been captured, the R&S ESRP transforms the data of the traces into the spectrogram result display.

Result coloring

To get the final looks of the spectrogram, the R&S ESRP applies colors to visualize the power levels in a two dimensional diagram.

Each color in the spectrogram corresponds to a particular power level that is shown in the color map in the title bar of the result display. The color the R&S ESRP assigns to each power level depends on:

- the color scheme you have selected
- the (customized) color mapping settings

In the default configuration, the R&S ESRP displays low power levels in 'cold' colors (blue, green etc.) and higher power levels in 'warm' colors (red, yellow etc.).

For more information, see [chapter 3.1.6.2, "Color Map"](#), on page 30.

Data processing

Now that the data is available, the R&S ESRP processes the data to display it in the spectrogram result display.

To understand the structure and contents of the spectrogram, it is best to look at it in combination with the scan or IF analysis result display. The data that is shown in the spectrogram is always based on the data of the scan or IF analysis trace.

The spectrogram is made up out of a number of horizontal lines, each one a pixel high, that are called (time) frames.

- When you use a spectrogram in combination with a scan, each frame corresponds to a single sweep of the frequency range you are scanning.
- When you use a spectrogram in combination with IF analysis, a single sweep may consist of several frames. The exact number of frames depends on the measurement time of the bargraph.

In the default state, a frame is added to the spectrogram after a sweep is done. As the spectrogram in the R&S ESRP runs from top to bottom, the outdated frame(s) move down one position, so that the most recently recorded frame is always on top of the diagram.

The number of frames the R&S ESRP can display simultaneously is only limited by the vertical screen size. The number of frames the R&S ESRP stores in its memory is bigger. The maximum number of frames you can record is 100.000. The actual number, however, depends on the measurement configuration. With markers, you can navigate to any frame that has been saved.

Note that the contents of the spectrograms for scan and IF analysis are independent from one another: the R&S ESRP saves the data you have already recorded and the current configuration when you switch to another result display. It keeps the data until you start a new measurement or the capture buffer is full.

3.1.6.2 Color Map

Colors are an important part of the spectrogram. Therefore, the R&S ESRP provides various ways to customize the display for best viewing results.

You can access the Color Mapping dialog via the "Color Mapping" softkey or by tapping on the color map. For the spectrogram the R&S ESRP maps power levels (dBm).

Selecting the color scheme

Before adjusting the details of the color map, you should select the color scheme you are most comfortable with. You can select from four different color schemes:

- 

The "Hot" color scheme shows the results in colors ranging from blue to red. Blue colors indicate low probabilities or levels respectively. Red colors indicate high ones.

- 

The "Cold" color scheme shows the results in colors ranging from red to blue. Red colors indicate low probabilities or levels respectively. Blue colors indicate high ones.

The "Cold" color scheme is the inverse "Hot" color scheme.

- 

The "Radar" color scheme shows the colors ranging from black over green to light turquoise with shades of green in between. Dark colors indicate low probabilities or levels respectively. Light colors indicate high ones.

- 

The "Grayscale" color scheme shows the results in shades of gray. Dark grays indicate low probabilities or levels respectively. Light grays indicate high ones.

If a result lies outside the defined range of the color map, it is colored in black at the lower end of the color range. On the upper end of the color range it is always the lightest color possible, regardless of differences in amplitude (e.g. black and blue in case of the "Cold" scheme).

Defining the Range of the Color Map


The current configuration could be a color map that you can optimize for better visualization of the measured signal, for example if the results cover only a small part of the color map. In the resulting trace, it would be hard to distinguish between values that are close together.

There are several ways to optimize the distribution of the colors over the results and then get the best viewing results.

Note that the following examples are based on the "Hot" color scheme.

The easiest way to adjust the colors is to use the color range sliders in the "Color Mapping" dialog.

In the histogram that is in the background of the color curve pane (grey bars), you can observe the distribution of measurement results. If no significant shifts in result distribution occur after evaluating this for a time, you can adjust the color map to the overall shape of the measurement results. To do so and still cover the whole signal, move the sliders in a way that the first and last bar of the histogram are still inside the range. You can optimize the display further, if you suppress the noise by excluding the lower 10 to 20 dB of the distribution. Note that the color map has to cover at least 10% of the range of the horizontal axis.

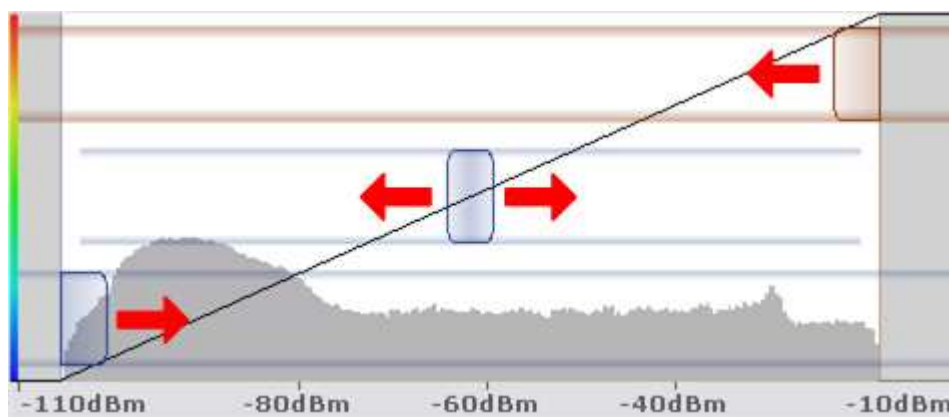

Alternatively, you can set the range in the numeric input field. In that field, you have to enter the distance from the right and left border as a percentage.

Example:

The color map starts at -100 dBm and ends at 0 dBm (i.e. a range of 100 dB). You, however, want the color map to start at -90 dBm. To do so, you have to enter 10% in the Start field. The R&S ESRP shifts the start point 10% to the right, to -90 dBm.

In the spectrogram, cutting the range as far as possible is also a good way if you want to observe and put the focus on signals with a certain amplitude only. Then, only those signal amplitudes that you really want see are displayed. The rest of the display remains dark (or light, depending on the color scheme). It is also a good way to eliminate noise from the display. In the spectrogram you can do this easily by excluding the corresponding power levels at the low end of the power level distribution.



Fig. 3-2: Spectrogram that shows the peaks of a pulsed signal only



Adjusting the reference level and level range

Changing the reference level and level range also affects the color scheme in the spectrogram.

Make sure, however, that you never adjust in a way that could overload the R&S ESRP.

Defining the shape of the color curve

Now that the color scheme and range of the color map suit your needs, you can improve the color map even more by changing the shape of the color curve.

The color curve is a tool to shift the focus of the color distribution on the color map. By default, the color curve is linear. The color curve is linear, i.e. the colors on the color map are distributed evenly. If you shift the curve to the left or right, the distribution becomes non-linear. The slope of the color curve increases or decreases. One end of the color palette then covers a large amount results while the other end distributes a lot of colors on relatively small result range.

You can use this feature to put the focus on a particular region in the diagram and to be able to detect small variations of the signal.

Example:



Fig. 3-3: Linear color curve shape = 0

The color map above is based on a linear color curve. Colors are distributed evenly over the complete result range.



Fig. 3-4: Non-linear color curve shape = -0.5

After shifting the color curve to the left (negative value), more colors cover the range from -105.5 dBm to -60 dBm (blue, green and yellow). In the color map based on the linear color curve, the same range is covered by blue and a few shades of green only. The range from -60 dBm to -20 dBm on the other hand is dominated by various shades of red, but no other colors. In the linear color map, the same range is covered by red, yellow and a few shades of green.

The result of shifting the color curve is that results in a particular result range (power levels in case of the spectrogram and densities in the case of the spectral histogram) become more differentiated.

You can adjust the color curve by moving the middle slider in the color curve pane to a place you want it to be. Moving the slider to the left shifts the focus in the direction of low values. Most of the colors in the color map are then concentrated on the low power levels (spectrogram) or densities (histogram), while only a few colors cover the upper end of the color map or high power levels or densities. Moving the slider to the right shifts the focus to the higher amplitudes or densities.

Alternatively, you can enter the shape of the color curve in the corresponding input field below the color curve pane. A value of 0 corresponds to a linear shape, negative values up to -1 shift the curve to the left, positive values up to 1 shift the curve to the right.

3.1.7 Measurement Control

Measurements in receiver mode allow you to control the course of the measurement. This way, you can make use of the automated test sequences but still be able to change the setup once the test sequence is already running.

• Running Scans and Measurements	34
• Selecting the Result Display	34
• Bargraph Control	35
• Scan Control	36
• Final Measurement Control	38
• Measurement Settings	40
• Spectrogram Configuration	42

3.1.7.1 Running Scans and Measurements

The RUN SINGLE and RUN CONT hardkeys initiate scans and measurements.

- RUN SINGLE starts a single scan or measurement. A single measurement lasts until the defined frequency range has been measured once under the configured conditions. When it has finished, the measurement stops.
In case of measurements in the time domain, a single measurement lasts until the defined measurement time has passed.
- RUN CONT starts a continuous scan or measurement. A continuous measurement lasts until it is interrupted or stopped.

SCPI command:

`INITiate<n>:CONTinuous` on page 459

`INITiate<n>[:IMMediate]` on page 459

3.1.7.2 Selecting the Result Display

The R&S ESRP allows you to display the results in various combinations.

You can display up to three results simultaneously, for example the Bargraph, the Scan diagram and the Spectrogram.

The "Meas" menu contains the basic measurement settings and the selection of result displays.

- ▶ Press the MEAS key.
The R&S ESRP opens the "Meas" menu.
- ▶ Press the "More Display Options" softkey.
The submenu contains more result displays.

Note that the Spectrogram is available for the Scan display and the IF Analysis. To add the Spectrogram, either Scan or IF Analysis have to be turned on already. If you are using the Scan and IF Analysis simultaneously, the Spectrogram is unavailable.

The Spectrogram of the Scan is independent of the Spectrogram available for IF Analysis and vice versa. Therefore you should regard the two Spectrograms as separate result displays. For more information see [chapter 3.1.6, "Spectrogram"](#), on page 29.

Remote command:

[CALCulate<n>:FEED](#) on page 456

Bargraph + Scan

Shows the Bargraph and Scan result displays.

Bargraph + IF Analysis

Shows the Bargraph and IF Analysis result displays.

Bargraph

Turns the Bargraph result display on and off.

IF Analysis

Turns the IF Analysis result display on and off.

Scan

Turns the Scan result display on and off.

Spectrogram

Turns the Spectrogram result display on and off.

3.1.7.3 Bargraph Control

The "Measurement Configuration" menu contains functionality to configure the bargraph.

SCPI commands:

Querying the signal level:

["Querying bargraph results"](#) on page 462

Querying the upper and lower value of the bargraph scale:

[DISPlay:BARGraph:LEVel:LOWer?](#) on page 456

[DISPlay:BARGraph:LEVel:UPPer?](#) on page 456

Continuous Bargraph / Single Bargraph	35
Bargraph Maxhold	36
Maxhold Reset	36

Continuous Bargraph / Single Bargraph

Selects single or continuous bargraph measurements.

Continuous bargraph measurements continuously evaluate the signal level at the receiver frequency.

A single bargraph measurement evaluates the signal level at the receiver frequency once and then stops.

Remote command:

`INITiate<n>:CONTInuous` on page 459

Bargraph Maxhold

Turns the maxhold bargraph on and off. The maxhold bargraph shows the highest level that has been measured.

Remote command:

`DISPlay:BARGraph:PHOLd` on page 457

Maxhold Reset

Resets the maxhold bargraph.

After reset, collection of maximum values starts again.

Remote command:

`DISPlay:BARGraph:PHOLd:RESet` on page 457

3.1.7.4 Scan Control

At the start of a scan, the R&S ESRP opens a softkey menu to control the measurement.

Interrupting a scan

The R&S ESRP allows to interrupt a scan any time. If you interrupt it, the scan stops immediately. The scan stops at the frequency at which it was interrupted until it is continued. While the scan is stopped, the receiver settings can be changed, e.g. for a detailed analysis of the recorded trace. You have two options to continue the scan or you can abort it.

- Continue at a set receiver frequency - "Continue at Rec Frequency".
The receiver frequency can be set to a frequency that was already measured. As soon as the "Continue at Rec Frequency" softkey is pressed, the scan restarts at this frequency. This function can be used repeat part of the measurement.
- Continue at the hold frequency - "Continue at Hold"
Resumes the scan at the frequency it has been interrupted.
- Continue at a spectrogram frame - "Continue at Frame"
Resumes the scan at a spectrogram frame that was already recorded.
- Stop the scan - "Abort Scan"
Aborts the scan.

Hold Scan.....	37
Continue at Rec Frequency.....	37
Continue at Hold.....	37
Continue at Frame.....	37
Stop Scan.....	37

Hold Scan

Interrupts the scan and opens a submenu that contains functionality to control the scan.

Data that has already been collected is kept in the memory.

Remote command:

[HOLD](#) on page 459

Continue at Rec Frequency

Resumes the scan at a set receiver frequency.

After "Hold", the receiver frequency can be set to a frequency that was already measured, i.e. which is lower than the frequency at which the scan was interrupted. As soon as the "Continue at Rec Frequency" softkey is pressed, the scan restarts at this frequency. This function can be used repeat part of the measurement.

If a frequency is set that is higher than the frequency at which the scan was interrupted the scan continues at the frequency at which it was interrupted.

The scan is continued with the settings in the scan table.

Remote command:

[HOLD](#) on page 459

[\[SENSe:\]FREQuency:CENTer](#) on page 482

[INITiate<n>\[:IMMediate\]](#) on page 459

Continue at Hold

Resumes the scan at the frequency it was interrupted.

The scan is continued with the settings in the scan table.

Remote command:

[INITiate<n>:CONMeas](#) on page 459

Continue at Frame

Resumes the scan at a previously recorded spectrogram frame.

The data recorded between the selected frame and the current frame is recorded again, including minimum and maximum hold information.

Available for scans that are combined with a spectrogram measurement and the minimum or maximum hold trace mode.

Remote command:

not supported

Stop Scan

Aborts the scan.

Data that has already been collected is lost.

Remote command:

[ABORT](#) on page 458

3.1.7.5 Final Measurement Control

The final measurement is started in the "Test Automation" menu . The R&S ESRP provides two methods to perform a final measurement: an automatic and interactive final measurement.

At the start of a final measurement, the R&S ESRP opens a softkey menu to control the measurement.

The measurement configuration is as defined in the scan table.

Sequence for automatic final measurements

Generally, the automatic final measurements requires no interactions. however, the measurement can be interrupted, e.g. to change the mode or to analyze the signal in detail.

- ▶ Press the "Hold Final Measurement" softkey.

The R&S ESRP interrupts the measurement. While the measurement is interrupted, the receiver settings can be changed in order to examine the signal in detail.

The interruption also changes the contents of the "Measurement" menu. Several actions are available:

- Switch the mode of the final measurement ("Automatic" or "Interactive").
- Resume the final measurement ("Measure").
The final measurement starts or continues at the next entry of the peak list.
- Abort the final measurement ("Stop Final Measurement").
The collected data is lost.

After all frequencies in the peak list have been measured, the R&S ESRP opens the "Final Peak List" with the results for the final measurement.

Sequence for interactive final measurements

For an interactive final measurement, the R&S ESRP initiates the following sequence.

1. The R&S ESRP tunes to the first frequency in the peak list (or the next frequency).
2. The R&S ESRP stops the measurement and positions a marker on the frequency.
3. If required, the frequency can be fine tuned, e.g. if the interferer has shifted. For fine tuning, the bargraph display can be used to find the new peak value.

In addition, you have several options:

- Skip the current frequency ("Skip Frequency")
Positions the marker on the next frequency in the peak list without performing a final measurement on the current frequency.
- Get maxhold result for the current frequency ("Get Maxhold")
Writes the maximum level that has been measured on this frequency during the prescan to the final peak list without performing a final measurement.
- Stop the final measurement ("Stop Final Meas")

4. The level measurement on the current frequency is initiated after you press the "Measure" softkey.
5. After the final measurement on the current frequency is done, the R&S ESRP replaces the scan result in the peak list with the result of the final measurement. If the frequency has drifted compared to the one of the prescan, it also updates the frequency in the peak list.
6. The R&S ESRP moves to the next frequency in the peak list, positions the marker on that frequency etc.
7. After all frequencies in the peak list are finished, the R&S ESRP opens the "Final Peak List" with the results for the final measurement.



Note that it is possible to start with an automatic measurement and later change into interactive mode. Likewise, it is possible to start measuring in interactive mode and later change into automatic mode.

Hold Final Measurement.....	39
Automatic Final.....	39
Interactive Final.....	39
Skip Frequency.....	40
Get Maxhold.....	40
Measure.....	40
Stop Final Measurement.....	40

Hold Final Measurement

Interrupts the final measurement and opens a submenu that contains functionality to control the final measurement.

Data that has already been collected is kept in the memory.

Remote command:

[HOLD](#) on page 459

Automatic Final

Selects an automatic final measurement.

See also [chapter 3.1.5, "Final Measurement"](#), on page 28.

Remote command:

[\[SENSe:\] FMEasurement: AUTO](#) on page 461

Interactive Final

Selects interactive final measurements.

See also [chapter 3.1.5, "Final Measurement"](#), on page 28.

Remote command:

[\[SENSe:\] FMEasurement: AUTO](#) on page 461

Skip Frequency

Skips the peak list entry the final measurement is due to measure next and proceeds with the next peak.

Available for interactive final measurements.

Remote command:

-

Get Maxhold

Uses the highest level that was measured during the scan for the final results instead of the signal level measured during the final measurement.

Remote command:

-

Measure

Initiates a final measurement on the current peak.

Available for interactive final measurements.

Remote command:

-

Stop Final Measurement

Aborts the final measurement.

Data that has already been collected is lost.

Remote command:

[ABORT](#) on page 458

3.1.7.6 Measurement Settings

The "Meas" menu contains the basic measurement settings and the selection of result displays ([chapter 3.1.7.2, "Selecting the Result Display"](#), on page 34).

- Press the MEAS key.

The R&S ESRP opens the "Measurement" menu.

Receiver Frequency.....	40
Bargraph Detector.....	41
L Couple to Scan Trace.....	41
Measurement Time.....	41
Demod.....	41
L Demod (On Off).....	41
L AM / FM.....	41
L Squelch.....	42
Add To Peak List.....	42
Test Automation.....	42

Receiver Frequency

Defines the receiver frequency.

The tuning frequency has to be set to at least twice the IF bandwidth.

When the tuning frequency is lower than twice the IF bandwidth, the IF bandwidth is automatically reduced so that this condition is met again.

Remote command:

[\[SENSe:\] FREQuency:CENTer](#) on page 482

Bargraph Detector

Opens a submenu to select the detector for the bargraph result display.

Each detector you select adds another bargraph to the result display. Up to four bargraphs at the same time are possible.

For more information see [chapter 3.2.3, "Detectors"](#), on page 46.

Remote command:

[\[SENSe:\] DETector:RECeiver\[:FUNCTION\]](#) on page 457

Couple to Scan Trace ← Bargraph Detector

Couples or decouples the bargraph detector and scan detectors.

If on, the R&S ESRP does as follows.

- Turns on a scan detector for every active bargraph.
If you add a new bargraph detector, the corresponding scan trace is automatically turned on.
- Matches the scan trace number to the number of the bargraph.
- Matches the color of the scan trace to a particular bargraph detector.

If you couple bargraph and scan trace, the R&S ESRP replaces the detectors of all other active scan traces with the new detector type.

Remote command:

[DISPlay:BARGraph:TCoupling](#) on page 457

Measurement Time

Defines the measurement time for a scan and the bargraph.

Remote command:

[\[SENSe:\] SWEep:TIME](#) on page 458

Demod

Opens a submenu to configure AM or FM demodulation.

Demod (On Off) ← Demod

Turns demodulation at the receiver frequency on and off.

Remote command:

[\[SENSe:\] DEMod](#) on page 465

AM / FM ← Demod

Selects AM or FM demodulation.

Remote command:

[\[SENSe:\] DEMod](#) on page 465

Squelch ← Demod

Defines the minimum level for the signal to be demodulated.

For more information see [chapter 3.2.5, "AF Demodulation"](#), on page 52.

Remote command:

Turning on the squelch:

[SENSe:]DEMod:SQUelch[:STATe] on page 466

Defining a squelch level:

[SENSe:]DEMod:SQUelch:LEVel on page 466

Add To Peak List

Adds the current receiver frequency to the peak list.

Remote command:

-

Test Automation

Opens a dialog box to configure automated test sequences.

For more information see [chapter 3.3.7, "Test Automation"](#), on page 66.

Remote command:

-

3.1.7.7 Spectrogram Configuration

The "MeasConfig" menu contains functionality to configure the spectrogram.

The R&S ESRP provides two spectrograms in receiver mode: one for scans and one for IF analysis. You can configure the spectrograms independently from one another. The R&S ESRP saves the settings accordingly.

- Press the MEAS CONFIG key.

The R&S ESRP opens the "MeasConfig" menu.

Clear Spectrogram	42
History Depth	42
Color Mapping	43
Trace to Spectrogram	43

Clear Spectrogram

Clears the contents of the spectrogram.

If you clear the spectrogram of either scan or IF analysis, the other one remains in the internal memory of the R&S ESRP.

History Depth

Defines the amount of frames that the R&S ESRP is able to store in its memory.


The R&S ESRP can store a maximum of 100.000 frames. However, the actual size of the history buffer depends on the measurement configuration.

Using markers, you can recall the traces to any of the frames in the history buffer. The R&S ESRP shows the trace to the frame the marker is currently on.

Color Mapping

Opens a dialog box to define the color map of the spectrogram.

For more information see [chapter 3.1.6.2, "Color Map"](#), on page 30.

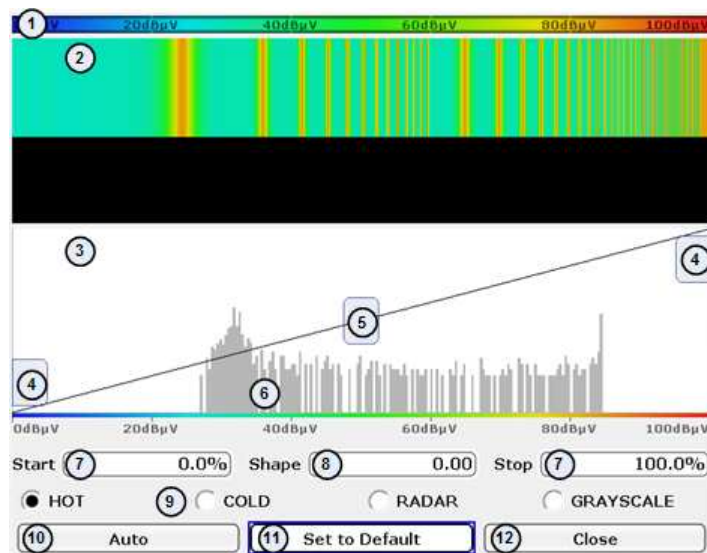

- 1 = Color map: shows the current color distribution
- 2 = Preview pane: shows a preview of the spectrogram with any changes that you make to the color scheme
- 3 = Color curve pane: graphic representation of all settings available to customize the color scheme
- 4 = Color range start and stop sliders: define the range of the color map (amplitudes for the spectrogram)
- 5 = Color curve slider: adjusts the focus of the color curve
- 6 = Histogram: shows the distribution of measured values
- 7 = Color range start and stop: numerical input to define the range of the color map
- 8 = Color curve: numerical input to define the shape of the color curve
- 9 = Color scheme selection
- 10 = Auto button: automatically sets the value range of the color map
- 11 = Default button: resets the color settings
- 12 = Close button: closes the dialog box

Remote command:

See ["Configuring Spectrograms"](#) on page 466

Trace to Spectrogram

Selects the trace the spectrogram is coupled to.

The availability depends on how many traces you have turned on in the scan or IF analysis. You cannot assign a spectrogram to a "Blank" trace.

Remote command:

[CALCulate:SGRam:TRACe](#) on page 469

3.2 Measurement Basics

Measurement basics explain various terms and principles used in the context of EMI measurements. They also assist you in finding the right configuration for your measurement tasks.

• Measurement Bandwidth	44
• Measurement Time	45
• Detectors	46
• Trace Modes	50
• AF Demodulation	52
• V-Networks Control (LISN)	52
• Transducers	54
• Preamplifier	55
• Exported Peak List	55
• Formats for Returned Values: ASCII Format and Binary Format	56

3.2.1 Measurement Bandwidth

The measurement bandwidth ("RES BW") defines the bandwidth of the resolution filter. The RF signal is evaluated and displayed according to the bandpass characteristics of the resolution filter.

The receiver mode supports the following types of resolution filter.

- Filters with a 3 dB bandwidth (*normal* filters).
The R&S ESRP provides bandwidths from 10 Hz to 10 MHz with a stepsize of 1-2-3-5-10-...
- Filters with a 6 dB bandwidth (*EMI* filters).
The 6 dB bandwidths are designed and required for EMI tests and measurements. The R&S ESRP provides the following bandwidths that comply to commercial and military standards:
 - 10 Hz (with option R&S ESRP-B29)
 - 100 Hz (with option R&S ESRP-B29)
 - 200 Hz (CISPR bandwidth)
 - 1 kHz (with option R&S ESRP-B29)
 - 9 kHz (CISPR bandwidth)
 - 100 kHz (with option R&S ESRP-B29)
 - 120 kHz (CISPR bandwidth)
 - 1 MHz (CISPR bandwidth)

Note that the available bandwidth is limited by the current receiver frequency. The measurement bandwidth must be less than or equal to half of the current receiver frequency:

$$BW \leq f_{in} / 2$$

**Additional 6 dB bandwidths**

Installing option R&S ESRP-B29 adds additional 6 dB bandwidths that are specified for and comply to MIL, DO and automotive standards.

The resolution filters are implemented as digital Gaussian bandpass filters. Concerning the attenuation characteristic, the filters behave like analog filters, but their measurement speed is much higher than the measurement speed of comparable analog filters. This is due to the fact that the transient response can be compensated because the filters have an accurately defined behavior.

The highest sensitivity is obtained at the smallest bandwidth (10 Hz). If the bandwidth is increased, the reduction in sensitivity is proportional to the change in bandwidth. Increasing the bandwidth by a factor of 3 increases the displayed noise by approx. 5 dB (4.77 dB precisely). If the bandwidth is increased by a factor of 10, the displayed noise increases by a factor of 10, i.e. 10 dB.

The higher spectral resolution with smaller bandwidths leads to longer measurement times at each frequency, because the measurement time has to allow the resolution filters to settle during a sweep at all signal levels and frequencies to be displayed.

For large measurement bandwidths, signal parts that are very far away (e.g. from a different signal) are considered in the measurement and distort the results. The displayed noise increases.

For small measurement bandwidths, the measurement time increases.

**Bandwidths and detectors**

If you use the Quasipeak, CISPR Average or RMS Average detector, the R&S ESRP by default couples the resolution bandwidth to the receiver frequency.

If you need a different bandwidth, you can decouple the bandwidth from the frequency. When decoupled, you can select any of the supported CISPR bandwidths.

3.2.2 Measurement Time

The measurement time is the time during which the R&S ESRP measures the input signal and forms a measurement result weighted by the selected detector. The measurement time does not include settling times of the synthesizer and the IF filter. The R&S ESRP automatically waits until transients are over.

The measurement time can be set in the range from 50 μ s to 100 s.

The measurement time has the following restrictions.

- When you use the Quasipeak detector, the minimum measurement time is 0.5 ms.
- When you use the CISPR Average or RMS Average detector, the minimum measurement time depends on the CISPR band.
 - 50 ms for Band A
 - 1 ms for Band B
 - 100 μ s for Bands C/D/E

- When you use the Max Peak, Min Peak, Average or RMS detectors, the minimum measurement time depends on the selected resolution bandwidth.

Table 3-1: Smallest possible measurement time for Max Peak, min Peak, Average or RMS detectors

Bandwidth	Max and Min Peak	Average and RMS
≤ 100 Hz	10 ms	1 s
100 Hz	1 ms	100 ms
200 Hz to 500 Hz	1 ms	50 ms
1 kHz to 5 kHz	100 µs	10 ms
9 kHz to 50 kHz	100 µs	1 ms
≥ 100 kHz	50 µs	100 µs

Measurement time for time domain scans in the frequency domain

The available measurement times for time domain scans depend on the resolution bandwidth.

Table 3-2: Possible measurement times for time domain scans

Resolution bandwidth	Min. measurement time	Max. measurement time
10 Hz to 50 Hz	10 ms	100 s
100 Hz to 500 Hz	1 ms	100 s
1 kHz to 30 kHz	100 µs	100 s
50 kHz	100 µs	50 s
100 kHz to 120 kHz	10 µs	30 s
200 kHz	10 µs	16 s
300 kHz	10 µs	10 s
500 kHz	10 µs	6 s
1 MHz	10 µs	3 s

3.2.3 Detectors

The task of the detector is to determine which of the samples that have been recorded are displayed for each sweep point. The result obtained from the selected detector for a sweep point is displayed as the signal level at this frequency point in the trace.

The detectors of the R&S ESRP are implemented as digital devices. All detectors work in parallel in the background, which means that the measurement speed is independent of the detector combination used for different traces.

The receiver mode of the R&S ESRP provides several detectors, including detectors that are especially designed for and required by EMI applications.

You can use several detectors at the same time. The combined use of several detectors (multiple detection) is important for EMI measurements. This is due to specifica-

tions in the standards, for example commercial standards specify limits for quasipeak and average values. In that case, multiple detection requires only one measurement.



The R&S ESRP allows you to use different detectors for the bargraph, scan and final measurement.

Maximum and Minimum peak detector

The max/min detector yields the maximum/minimum level occurred during the set measurement time. The peak detector is reset at the beginning of each measurement.

Regarding measurement time,

- unmodulated signals can be measured with the shortest possible measurement time.
- for pulses, the selected measurement time must be long enough for at least one pulse to occur during the measurement time.

The peak detectors are digital detectors. Therefore, discharging is irrelevant even with long measurement times.

Average detector

The average detector yields the average level of the samples of the samples measured during the set measurement time.

With average detection selected, the video voltage (envelope of IF signal) is averaged during the measurement time. Averaging is digital, i.e. the digitized values of the video voltage are summed up and divided by the number of samples at the end of the measurement time. This corresponds to a filtering with a rectangular window in the time domain and a filtering with $\sin x/x$ characteristic in the frequency domain.

With modulated signals the measurement time is determined by the lowest modulation frequency to be averaged. With pulse signals, the selected measurement time should be long enough for sufficient number of pulses (>10) to occur in the measurement window for averaging.

Regarding measurement time,

- with unmodulated signals the shortest possible measurement time can be selected.
- with modulated signals the measurement time is determined by the lowest modulation frequency to be averaged.
- with pulse signals, the selected measurement time should be long enough for sufficient number of pulses (>10) to occur in the measurement window for averaging.

RMS detector

The RMS detector evaluates the root mean square (RMS) value over the specified measurement time and displays the resulting value. The integration time is the specified measurement time.

Regarding measurement time,

- with unmodulated signals the shortest possible measurement time can be selected.

- with modulated signals the measurement time is determined by the lowest modulation frequency to be averaged.
- with pulse signals, the selected measurement time should be long enough for sufficient number of pulses (>10) to occur in the measurement window for averaging.



RMS detector and VBW

If the RMS detector is selected, the video bandwidth in the hardware is bypassed. Thus, duplicate trace averaging with small VBWs and RMS detector no longer occurs. However, the VBW is still considered when calculating the measurement time. This leads to a longer sweep time for small VBW values. Thus, you can reduce the VBW value to achieve more stable trace curves even when using an RMS detector. Normally, if the RMS detector is used the measurement time should be increased to get more stable traces.

Sample detector

The sample detector displays the instantaneous value of the level at a pixel. It routes through the sampled data without any further evaluation.

The sample detector is used for IF analysis and for noise or phase noise marker calculation in analyzer mode. However, it is unreliable if the displayed span is much wider than the resolution bandwidth or if the tuning steps of the local oscillator are too large.

Quasipeak detector

The quasipeak detector yields the maximum detected value weighted to CISPR 16-1-1 that was detected during the measurement time.

Depending on the set frequency, the R&S ESRP automatically selects the detectors and IF bandwidths defined for bands A, B and C/D listed in the following table:

	Band A	Band B	Band C/D
Frequency range	< 150 kHz	150 kHz to 30 MHz	> 30 MHz
Resolution bandwidth	200 Hz	9 kHz	120 kHz
Charge time constant	45 ms	1 ms	1 ms
Discharge time constant	500 ms	160 ms	550 ms
Time constant of the mechanical device	160 ms	160 ms	100 ms

The coupling of the resolution bandwidth to the frequency range with activated quasipeak detector can be cancelled using the "CISPR RBW uncoupled" softkey.

Regarding measurement time, the relatively long time constants used with quasipeak detectors entail long measurement times to obtain correct results.

- With unknown signals the measurement time should be at least 1 s. This ensures correct weighting of pulses down to a pulse frequency of 5 Hz.
- With known signals much shorter measurement times can be used.

After internal switching, the R&S ESRP waits until the measurement result has stabilized before it starts the actual measurement. Since the level does not change during a frequency scan, known signals (e.g. broadband RFI) can be correctly measured with a much shorter measurement time.

CISPR Average detector

The CISPR Average detector yields a weighted average signal level according to CISPR 16-1-1. The average value according to CISPR 16-1-1 is the maximum value of the linear average during the set measurement time.

The detector is used, for example, to measure pulsed sinusoidal signals with a low pulse frequency. It is calibrated with the rms value of an unmodulated sinusoidal signal. Averaging is with lowpass filters of the 2nd order (simulation of a mechanical instrument).

The lowpass time constants and the IF bandwidths are fixed depending on the frequency. The main parameters are listed in the following table:

	Band A	Band B	Band C/D	Band E
Frequency range	< 150 kHz	150 kHz to 30 MHz	30 MHz to 1 GHz	> 1 GHz
Resolution bandwidth	200 Hz	9 kHz	120 kHz	1 MHz
Time constant of the mechanical device	160 ms	160 ms	100 ms	100 ms

The coupling of the resolution bandwidth to the frequency range with activated CISPR average detector can be cancelled using the "CISPR RBW uncoupled" softkey.

Regarding measurement time, the relatively long time constants used with CISPR average and RMS average detector result in long measurement times in order to obtain a correct measurement result.

- With unknown signals the measurement time should be at least 1 s. This ensures correct weighting of pulses down to a pulse frequency of 5 Hz.
- With unmodulated sinusoidal signals as well as signals with high modulation frequency much shorter measurement times can be used.
- Slowly fluctuating signals or pulse signals require longer measurement times.



Measurement times shorter than 20 ms

With measurement times shorter than 20 ms the detector weighting changes to plain average weighting.

When you change the receiver frequency or the attenuation, the R&S ESRP waits until the lowpass filter has settled before starting the measurement. The measurement time in that case depends on the resolution bandwidth and the characteristics of the signal.

RMS Average detector

The RMS Average detector is a combination of the RMS detector (for pulse repetition frequencies above a corner frequency) and the Average detector (for pulse repetition frequencies below the corner frequency). It thus achieves a pulse response curve with the following characteristics: 10 dB/decade above the corner frequency and 20 dB/decade below the corner frequency. The average value is determined by lowpass filters of the 2nd order (simulation of a mechanical instrument).

The detector is used, for example, to measure broadband emissions and may replace the quasipeak detector in the future.

The filter bandwidth and time constants of the detector are coupled to the receiver frequency.

Table 3-3: RMS Average detector

	Band A	Band B	Band C/D	Band E
Frequency range	< 150 kHz	150 kHz to 30 MHz	30 MHz to 1 GHz	> 1 GHz
Resolution bandwidth	200 Hz	9 kHz	120 kHz	1 MHz
Time constant of the mechanical device	160 ms	160 ms	100 ms	100 ms
Corner frequency	10 Hz	100 Hz	100 Hz	1 kHz

Regarding measurement time, see CISPR Average detector.



Measurement times shorter than 20 ms

With measurement times shorter than 20 ms the detector weighting changes to plain RMS weighting.

3.2.4 Trace Modes

The traces can be activated individually for a measurement or frozen after a measurement has been performed. Traces that are not active are not visible. Each time the trace mode is changed, the selected trace memory is cleared.

Note that in Spectrum mode, the Max Hold and Min Hold modes are unavailable for statistics measurements.

Clear Write

Overwrite mode: the trace is overwritten by each sweep. This is the default setting.

All available detectors can be selected.

Remote command:

DISP:TRAC:MODE WRIT, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 498

Max Hold

The maximum value is determined over several sweeps and displayed. The R&S ESRP saves the sweep result in the trace memory only if the new value is greater than the previous one.

This mode is especially useful with modulated or pulsed signals. The signal spectrum is filled up upon each sweep until all signal components are detected in a kind of envelope.

Remote command:

DISP:TRAC:MODE MAXH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 498

Min Hold

The minimum value is determined from several measurements and displayed. The R&S ESRP saves the smallest of the previously stored/currently measured values in the trace memory.

This mode is useful e.g. for making an unmodulated carrier in a composite signal visible. Noise, interference signals or modulated signals are suppressed whereas a CW signal is recognized by its constant level.

Remote command:

DISP:TRAC:MODE MINH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 498

View

The current contents of the trace memory are frozen and displayed.

Note: If a trace is frozen, the instrument settings, apart from level range and reference level (see below), can be changed without impact on the displayed trace. The fact that the displayed trace no longer matches the current instrument setting is indicated by the  icon on the tab label.

If the level range or reference level is changed, the R&S ESRP automatically adapts the measured data to the changed display range. This allows an amplitude zoom to be made after the measurement in order to show details of the trace.

Remote command:

DISP:TRAC:MODE VIEW, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 498

Blank

Hides the selected trace.

Remote command:

DISP:TRAC OFF, see [DISPlay\[:WINDow<n>\]:TRACe<t>\[:STATe\]](#) on page 655

3.2.5 AF Demodulation

CAUTION

Risk of hearing damage when using headphones

To protect your hearing, make sure that the volume setting is not too high before putting on the headphones.

The volume for the headphones is controlled using the rotary knob next to the "AF Output" interface on the front panel of the instrument or with the `SYSTem:SPEaker:VOLume` command.

The R&S ESRP provides demodulators for AM and FM signals. With these demodulators, a displayed signal can be identified and monitor acoustically through the use of the internal loudspeaker or with headphones.

The R&S ESRP demodulates the signal on the receiver frequency in a bandwidth corresponding to the resolution bandwidth to the audio output.

A squelch function that is linked to the video trigger defines the level that the signal must at least have to be demodulated. If you turn the squelch on, the R&S ESRP automatically turns on the video trigger. The squelch level and trigger level are the same.

3.2.6 V-Networks Control (LISN)

For measurements with power lines, the R&S ESRP provides functionality to directly control a line impedance stabilization network (LISN). The configuration is then taken into account in the scan and final measurement.

You can connect the LISN with an adapter (R&S EZ-27, order no. 1142.8271.02) to the userport that controls the phases during the scan and the final measurement. The R&S ESRP supports several V-networks.

- Four-line V-networks
 - R&S ESH2-Z5
 - R&S ENV4200
- Two-line V-networks
 - R&S ESH3-Z5
 - R&S ENV216

For the R&S ENV216 network, a 150 kHz high pass filter is available for protection of the input.

After selecting the type of network, you can define the phase you want to test for interferences. Phase N and L1 are available for two-line networks. Four-line networks in addition have access to phase L2 and L3.

- During scans, you can control several phases simultaneously.
- During final measurements the R&S ESRP supports the control of several phases.

When you select more than one phase, the R&S ESRP measures all phase combinations and determines the maximum value.

For an automatic phase selection with the networks, a connection between the R&S ESRP and network has to be established with a control line. To connect the control line to the R&S ESRP, adapter R&S EZ-27 is required. The following illustrations show the right PIN assignment.

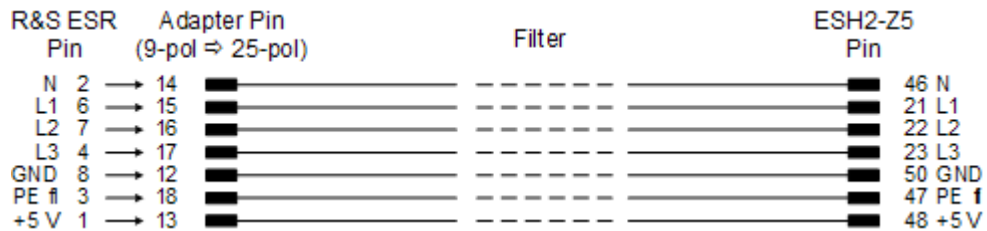


Fig. 3-5: Connection from R&S ESRP to R&S ESH2-Z5

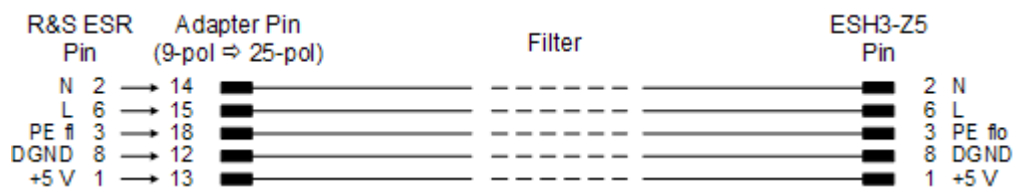


Fig. 3-6: Connection from R&S ESRP to R&S ESH3-Z5

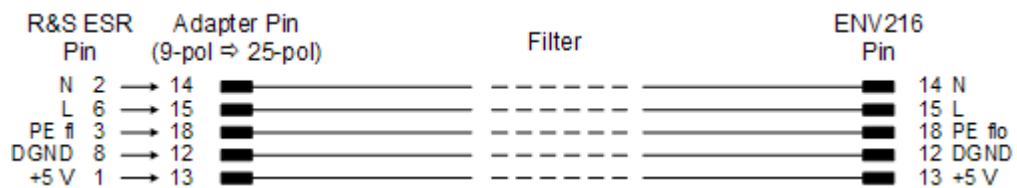


Fig. 3-7: Connection from R&S ESRP to R&S ESH216

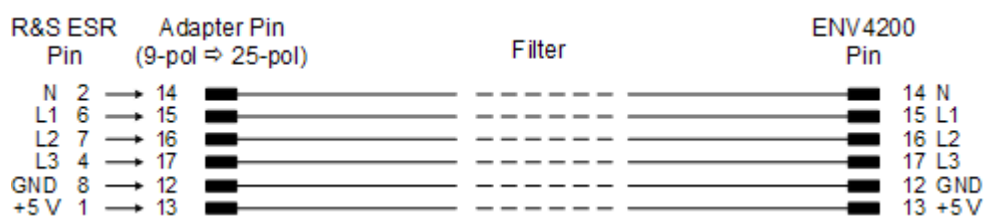


Fig. 3-8: Connection from R&S ESRP to R&S ENV4200

To control the phase selection and PE simulating network of the V-Networks R&S ESH2-Z5, R&S ESH3-Z5 and R&S ENV4200, the +5 V supply voltage and some control lines have to be routed through the wall of the shielded room.

You can also use a direct connection without a filter, e.g. when you use the R&S ESRP in a shielded room. In that case, you can use the following cables.

- R&S ESH2-Z5: EZ-5, EZ-13, EZ14
- R&S ESH3-Z5: EZ-6, EZ-14

- R&S ENV216: EZ14
- R&S ENV4200: EZ-14, EZ-21

3.2.7 Transducers

A transducer is often connected ahead of the R&S ESRP both during the measurement of useful signals and EMI and converts the useful or interference variable such as field strength, current or RFI voltage into a voltage across 50 Ω . Because most transducers such as antennas, probes or current probes have a characteristic frequency response, it is necessary to correct the measurement results by the frequency characteristics of the transducer. These characteristics are defined in a transducer factor or transducer sets. The transducer factor can be stored in the R&S ESRP and automatically has the correct unit during level measurement.

If a transducer is switched on it is considered as part of the unit during the measurement, i.e. the measured values are displayed in the correct unit and magnitude. When working with two measurement windows, the transducer is always assigned to two windows.

The R&S ESRP distinguishes between transducer factor and transducer set.

A transducer factor takes the frequency response of a single transfer element, e.g. an antenna into consideration. A transducer set can summarize different transducer factors in several subranges (several transducer factors at the same time), e.g. an antenna, a cable and a diplexer.

Transducer factors

A transducer factor takes the frequency response of a single transfer element into account. It consists of a series of reference values defined with frequency, transducer factor and the unit. For the measurement between frequency values linear or logarithmic interpolation of the transducer factor can be chosen. The transducer factor may consist of up to 625 reference values.

Transducer sets

Several transducer factors can be compiled in a transducer set provided that all factors have the same unit or unit "dB". The frequency range covered by a set can be subdivided into max. 10 subranges (each with up to 4 transducer factors) which follow each other without a gap, i.e. the stop frequency of a subrange is the start frequency of the next subrange.

The transducer factors used in a subrange have to fully cover the subrange.

The definition of a transducer set is recommended if different transducers are used in the frequency range to be measured or if a cable attenuation or an amplifier has to be taken into consideration.

If a transducer set is defined during a frequency sweep, the latter can be stopped at the interface between two transducer ranges and the user is asked to exchange the transducer.

A message informs that the limit has been reached. It is possible either to continue the sweep by confirming the message or to switch off the transducer. With the automatic switchover of the transducer used, the frequency sweep is not interrupted.

Transducer management

The R&S ESRP provides functionality to store and use the transducer factors during a measurement.

For more information on creating and managing transducer factors see ["Transducer"](#) on page 368.

3.2.8 Preamplifier

Switching on the preamplifier reduces the noise figure of the R&S ESRP, thus increasing the sensitivity. The preamplifier follows the preselection filters so that the risk of an overload by strong out-of-band signals is reduced to a minimum. For frequencies between 100 Hz to 7 GHz, the signal level of the subsequent mixer is 20 dB higher so that the maximum input level is reduced by the gain of the preamplifier. For frequencies above 7 GHz, the gain is 30 dB.

The use of the preamplifier is recommended when measurements with a maximum sensitivity are to be performed. If the measurement should be performed at maximum dynamic range, the preamplifier should be switched off.

The gain of the preamplifier is automatically considered in the level display. The disadvantage of a poorer large-signal immunity (intermodulation) is reduced by the connected preselector.

3.2.9 Exported Peak List

When you export the (final) peak list, the results are saved in an ASCII file. The contents of the file are split into several sections.

- The header contains general information about the measurement and instrument settings and characteristics.
It consists of three columns, separated by a semicolon: parameter name; numeric value; unit
- The data section contains information about the evaluation of the data and the contents of the peak list.
The data section always starts with `Trace <n> [Final]:.`

Table 3-4: Example of an exported peak list with a description of the contents

Type;ESR-7;	instrument model and type
Version;1.76;	Firmware version
Date;07.May 12;	Date of the export
Mode;Receiver;	Operating mode
Start;150000.000000;Hz	Start frequency

Stop;1000000000.000000;Hz	Stop frequency
x-axis;log;	X-axis scaling
Scan count;1;	Number of scans in a single measurement
Transducer;Antenna;;;;;	Active transducer(s)
Scan <x>:	Results for scan range <x>
Start;150000.000000;Hz	Start frequency of scan range <x>
Stop;30000000.000000;Hz	Stop frequency of scan range <x>
Step;4000.000000;Hz	Frequency stepsize in scan range <x>
RBW;9000.000000;Hz	Resolution bandwidth in scan range <x>
Meas time;0.001000;s	Measurement time in scan range <x>
Auto ranging;OFF;	Autoranging state for scan range <x>
RF Att;10.000000;dB	RF attenuation level in scan range <x>
Auto Preamp;OFF;	Auto preamplification state for scan range <x>
Preamp;0.000000;dB	Preamplification state for scan range <x>
TRACE <x> FINAL	Peak list contents for trace <x> after scan [or final measurement]
Trace Mode;CLR/WRITE;	Trace mode for trace <x>
Detector;QUASI PEAK;	Detector for trace <x>
x-Unit;Hz;	Unit of the x-axis
y-Unit;dBμV;	Unit of the y-axis
Final Meas Time;1.000000;s	Final measurement time
Margin;6.000000;dB	Margin of the peaks
Value;26;	Number of result values
1;2150000.000000;84.210000;;;	Peak list entries:
1;6150000.000000;84.210000;;;	<Trace>;<Frequency>;<Level>;<DeltaLimit>;<Phase>;<Unused>
etc.	

3.2.10 Formats for Returned Values: ASCII Format and Binary Format

ASCII Format (FORMat ASCII)

The command reads out a list of comma separated values (CSV) of the measured values in floating point format.



Reading out data in binary format is quicker than in ASCII format. Thus, binary format is recommended for large amounts of data.

Binary Format (FORMAT REAL,32)

The command reads out binary data (Definite Length Block Data according to IEEE 488.2), each measurement value being formatted in 32 Bit IEEE 754 Floating-Point-Format.

Depending on the number of samples to be transferred, 2 different kinds of syntax are used:

For $<10^{10}$ samples:

The schema of the result string is as follows:

#<NoOfDigits><NoOfDataBytes><value1><value2>...<value n>, with

#	Header prefix, 1 byte
<NoOfDigits>	Number of digits of the following number of data bytes (= 4 in the example), 1 byte
<NoOfDataBytes>	Number of following data bytes in decimal form (= 1024 in the example), 1...9 bytes
<Value>	Data values, each one is a 4-byte floating point value

Example:

#41024<value1><value2>...<value 256>

4: the following number of data bytes has 4 digits

1024: 1024 Bytes of following data; float: 4 Bytes / value => 1024 / 4 = 256 values (128 I and 128 Q values)

<value x>: 4 Byte values, must be interpreted as float

For $\geq 10^{10}$ samples:

The schema of the result string is as follows:

#(<NoOfDataBytes>)<value1><value2>...<value n>, with

#	Header prefix, 1 byte
(	1 byte
<NoOfDataBytes>	number of following data bytes (= 1024 in the example), 10 bytes
)	1 byte
<Value>	Data values, each one is a 4-byte floating point value

Example:

#(1677721600)<value 1><value 2> ... <value 419430400>

(1677721600): 1677721600 Bytes of following data; float: 4 Bytes / value ==> 1677721600 / 4 = 419430400 values (200Ms I and 200Ms Q values)

<value x>: 4 Byte values, must be interpreted as float

3.3 Common Measurement Settings

• Defining the Frequency and Span.....	58
• Configuring the Level Display and the RF Input.....	60
• Selecting the Bandwidth.....	63
• Configuring the Scan.....	64
• Configuring the Trigger	65
• Controlling Inputs and Outputs.....	65
• Test Automation.....	66

3.3.1 Defining the Frequency and Span

The frequency and span settings define the scope of the signal to be analyzed. The settings are available in the **FREQ** and **SPAN** menus.

Span settings and signal tracking are only available for IF Analysis (firmware application R&S ESRP-K56).

Receiver Frequency.....	58
Stepsize.....	58
Start / Stop Frequency.....	59
IF Span Manual.....	59
Full Span.....	59
Last Span.....	60
Signal Track.....	60

Receiver Frequency

Defines the receiver frequency.

The tuning frequency has to be set to at least twice the IF bandwidth.

When the tuning frequency is lower than twice the IF bandwidth, the IF bandwidth is automatically reduced so that this condition is met again.

Remote command:

[SENSe:] FREQuency:CENTer on page 482

Stepsize

Opens a submenu to define the receiver frequency step size.

By default, the frequency step size is coupled to the receiver frequency. Alternatively, you can define a custom step size.

"Auto Coarse" The step size is coupled to the receiver frequency.
 When you change the frequency with the rotary knob, the R&S ESRP increases or decreases the 4th digit of the receiver frequency.
 When you change the frequency with the cursor keys, the R&S ESRP increases or decreases the 2nd digit of the receiver frequency.

"Auto Fine"	The step size is coupled to the receiver frequency. When you change the frequency with the rotary knob, the R&S ESRP increases or decreases the 7th digit of the receiver frequency. When you change the frequency with the cursor keys, the R&S ESRP increases or decreases the 5th digit of the receiver frequency.
"Stepsize Manual"	The step size is a fixed custom value. When you change the frequency with the rotary knob, the R&S ESRP increases or decreases the frequency by 1 % of the manual step size. When you change the frequency with the cursor keys, the R&S ESRP increases or decreases the frequency by the manual step size.
"Stepsize = Freq"	The step size is equal to the current receiver frequency. Defining a step size equal to the receiver frequency is useful during measurements of the harmonic content of a signal. Each change of the receiver frequency with the cursor key or the rotary knob selects the next harmonic.

Remote command:

[\[SENSe:\] FREQuency:CENTer:STEP](#) on page 482

Start / Stop Frequency

Defines the start and stop frequency for the scan.

The range for the start frequency is $f_{\min}$ to $(f_{\max} - 10 \text{ Hz})$.

The range for the stop frequency is $(f_{\min} + 10 \text{ Hz})$ to $f_{\max}$.

$f_{\min}$ and $f_{\max}$ are defined in the datasheet.

Remote command:

Start frequency:

[\[SENSe:\] FREQuency:START](#) on page 483

Stop frequency:

[\[SENSe:\] FREQuency:STOP](#) on page 483

IF Span Manual

Defines the span for IF spectrum analysis.

The receiver (center) frequency is kept constant. Possible span values are in the range from 10 kHz to 10 MHz.

Available for IF Analysis (firmware application R&S ESRP-K56).

Remote command:

[\[SENSe:\] FREQuency:SPAN](#) on page 633

Full Span

Restores the span to the full available frequency range.

The full span is specified in the data sheet.

In receiver mode, full span is available for IF Analysis and is limited to 10 MHz.

Remote command:

[\[SENSe:\] FREQuency:SPAN:FULL](#) on page 633

Last Span

Sets the span to the previous value. With this function e.g. a fast change between overview measurement and detailed measurement is possible.

Remote command:

-

Signal Track

Opens a submenu to define and enable the signal tracking:

- search bandwidth
- threshold value
- trace

Signal tracking is available for IF analysis and is defined in the FREQ menu. After each sweep the center frequency is set to the maximum signal found within the searched bandwidth. If no maximum signal above the set threshold value is found in the searched bandwidth, the track mechanism stops.

For a description of the softkeys of the submenu, see "[Signal Track \(span > 0\)](#)" on page 220.

3.3.2 Configuring the Level Display and the RF Input

The settings to define the level display range for the scan and to configure the RF input are available in the AMPT menu.

RF Atten Manual	60
Preamp On/Off	61
10 dB Min	61
Auto Range (On Off)	61
Auto Preamp (On Off)	61
Unit	62
Grid Range / Grid Min Level	62
Input 50 Ω/75 Ω	62

RF Atten Manual

Opens an edit dialog box to enter the attenuation.

The RF attenuation defines the level at the input mixer according to the formula:

$$\text{level}_{\text{mixer}} = \text{level}_{\text{input}} - \text{RF attenuation} + \text{RF preamplifier gain}$$

You can attenuate the signal in 5 dB steps. The range is specified in the data sheet.

Note that receiver mode, an attenuation of 10 dB or less is possible only if you turn [10 dB Min](#) off.

Note: The maximum mixer level allowed is **0 dBm**. Mixer levels above this value may lead to incorrect measurement results, which are indicated by the "OVLD" status display. The increased mixer level allows for an improved signal, but also increases the risk of overloading the instrument.

When measuring spurious emissions in spectrum mode, this softkey automatically opens the "Sweep List" dialog box, see "[Sweep List dialog box](#)" on page 167.

Remote command:

[INPut:ATTenuation](#) on page 485

Preamp On/Off

Switches the preamplifier on and off.

Remote command:

[INPut:GAIN:STATe](#) on page 486

10 dB Min

Determines whether the 10 dB setting of the attenuator may be used in the manual or automatic setting of the attenuator.

If on, the attenuation level is always at least 10 dB to protect the input mixer and avoid accidental setting of 0 dB, especially if you measure DUTs with high RFI voltage.

"10dB Min" ON is the default value, i.e. an RF attenuation of at least 10 dB is always set on the R&S ESRP to protect the input mixer.

An attenuation of 0 dB cannot be set manually either. This avoids 0 dB being switched on inadvertently, particularly when DUTs with high RFI voltage are measured.

Remote command:

[INPut:ATTenuation:PROTection\[:STATe\]](#) on page 485

Auto Range (On Off)

Turns automatic configuration of the attenuation level on and off.

If off, the R&S ESRP uses the manual RF attenuation that you have defined.

If on, the R&S ESRP defines an attenuation level that results in a good S/N ration without overloading the receiver stages. Note that it is possible that the R&S ESRP does not utilize the maximum possible dynamic range. However, measurement results are still valid in that case, because it is ensured that performing scans does not result in an overload.

NOTICE! Risk of damage to the input mixer. If you apply a 0 dB RF attenuation in combination with auto ranging, make sure that the signal level at the RF input does not exceed the allowed limits.

Exceeding the limit might damage the input mixer.

Do not use a 0 dB attenuation under any circumstances when you measure RFI voltage (or unknown signals) in combination with an artificial network, because such a test setup generates very high pulses during phase switching.

Remote command:

[INPut:ATTenuation:AUTO](#) on page 485

Auto Preamp (On Off)

Turns automatic selection of the preamplifier state on and off.

If on, the R&S ESRP considers the preamplifier in the autorange process. The preamplifier is cut in when the RF attenuation is reduced to the minimum settable value.

If off, the preamplifier is not considered in the autorange procedure.

Remote command:

`INPut:GAIN:AUTO` on page 486

Unit

Opens a submenu to select the display unit.

The receiver mode supports the following units.

- dBm
- dBpW
- dBmV
- dBμV
- dBμA
- dBpT

The default unit is dBμV.

In general, the R&S ESRP measures the signal voltage at the RF input. The level display is calibrated in RMS values of an unmodulated sine wave signal. Via the known input impedance (50 Ω or 75 Ω), conversion to other units is possible.

The conversion from one unit to another is also possible if you are using a transducer.

The conversion to 1 MHz is done with the pulse bandwidth of the selected resolution bandwidth according to the following equation.

$$P\left[\frac{dB\mu V}{MHz}\right] = 20 \cdot \log \frac{B_{imp}[MHz]}{1[MHz]} + P[dB\mu V]$$

with

P = display level

B_{imp} = resolution bandwidth

Remote command:

`CALCulate<n>:UNIT:POWer` on page 484

Grid Range / Grid Min Level

Defines the scale of the vertical diagram axis.

The display ranges go from 10 to 200 dB in 10-dB steps. Invalid entries are rounded off to the nearest valid value.

"Grid Range" Defines the level display range for the scan diagram.

"Grid Min Level" Defines the minimum level of the display range.

Remote command:

Defining the range of the grid:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]` on page 650

Defining the minimum level displayed on the axis:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:BOTTom` on page 484

Input 50 Ω/75 Ω

Uses 50 Ω or 75 Ω as reference impedance for the measured levels. Default setting is 50 Ω.

The setting 75 Ω should be selected if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = 10 log (75 Ω /50 Ω).

All levels specified in this Operating Manual refer to the default setting of the instrument (50 Ω).

Remote command:

`INPut:IMPedance` on page 486

3.3.3 Selecting the Bandwidth

The bandwidth settings are available in the BW menu.

<code>Res BW Manual</code>	63
<code>CISPR RBW Uncoupled</code>	63
<code>Filter Type</code>	63
<code>IF Analysis RBW</code>	64

Res BW Manual

Opens an input field to define the measurement or resolution bandwidth.

The R&S ESRP supports a selected set of resolution bandwidths. If you enter a number that is not supported, the R&S ESRP rounds the value up to next available bandwidth.

You can also select some bandwidths directly with the corresponding softkeys in the "Bandwidth" menu.

For more information see [chapter 3.2.1, "Measurement Bandwidth"](#), on page 44.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]` on page 487

CISPR RBW Uncoupled

Cancels the coupling of the IF bandwidth to the frequency range with the activated quasipeak detector, CISPR Average or RMS average detector.

See also [chapter 3.2.3, "Detectors"](#), on page 46.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:AUTO` on page 487

Filter Type

Selects the filter type.

The available resolution bandwidths depend on the filter selection.

The R&S ESRP provides the following filter types:

- **EMI CISPR / MIL**
Gaussian filter with a 6 bandwidth. 6 dB bandwidths that comply with CISPR and MIL standards are available.
- **CISPR only**

Gaussian filter with a 6 bandwidth. 6 dB bandwidths that comply with CISPR standards are available.

- **MIL Std only**

Gaussian filter with a 6 bandwidth. 6 dB bandwidths that comply with military standards are available.

- **3 dB Bandwidth**

Gaussian filter with a 3 dB bandwidth.

6 dB bandwidths correspond approximately to the pulse bandwidth..

3 dB bandwidths correspond approximately to the noise bandwidth.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:TYPE` on page 487

IF Analysis RBW

Selects the resolution bandwidth for IF spectrum analysis

Available for IF Analysis (firmware application R&S ESRP-K56).

Remote command:

`[SENSe:]BANDwidth:IF` on page 486

3.3.4 Configuring the Scan

The following settings for configuring the scan are available in the SWEEP menu.

Run Continuous / Run Single.....	64
Edit Scan Table.....	64
Freq Axis (Lin Log).....	64

Run Continuous / Run Single

Initiates a continuous or single measurement.

See also [chapter 3.1.7.1, "Running Scans and Measurements"](#), on page 34.

Remote command:

Selecting single and continuous measurements:

`INITiate<n>:CONTinuous` on page 459

Initiating a measurement:

`INITiate<n>[:IMMediate]` on page 459

Edit Scan Table

Opens a dialog box to create or edit a scan table.

For more information see [chapter 3.1.3.3, "The Scan Table"](#), on page 25

Freq Axis (Lin Log)

Switches between linear and logarithmic frequency axis.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:X:SPACing` on page 482

3.3.5 Configuring the Trigger

The trigger settings are available in the TRIG menu.

External.....	65
Free Run.....	65
Video.....	65
Trigger Polarity.....	65

External

Selects an external trigger source.

The external trigger source is a TTL signal fed in at the EXT TRIG/GATE IN interface on the rear panel.

Remote command:

TRIGger<n>[:SEQuence]:SOURce on page 645

Free Run

Selects free run mode. In free run mode, a measurement is not triggered. Once a measurement is completed, another is started immediately.

Remote command:

TRIGger<n>[:SEQuence]:SOURce on page 645

Video

Selects the video trigger. The trigger event is a certain voltage level.

For the video triggering mode, a level line showing the trigger threshold is displayed. Using the level line, the threshold can be adjusted between 0% and 100% of the diagram height.

Video mode is only available in the time domain.

Remote command:

TRIGger<n>[:SEQuence]:SOURce on page 645

TRIGger<n>[:SEQuence]:LEVel:VIDeo on page 645

Trigger Polarity

Selects the polarity of the trigger source.

The scan starts after a positive or negative edge of the trigger signal. The default setting is "Pos".

The trigger polarity is unavailable for the free run trigger source.

Remote command:

TRIGger<n>[:SEQuence]:SLOPe on page 645

3.3.6 Controlling Inputs and Outputs

The input/output settings are available in the INPUT/OUTPUT menu.

For information on the LISN control see [chapter 3.3.7.6, "LISN Settings"](#), on page 74.

Input (AC/DC).....	66

Input (AC/DC)

Toggles the RF input of the R&S ESRP between AC and DC coupling.

Remote command:

[INPut:COUPling](#) on page 488

3.3.7 Test Automation

The test automation settings are available in the MEAS and MEAS CONFIG menu.

The Test Automation dialog box contains functionality to configure automated test sequences.

It is made up of several tabs, each of which contains the settings for one of the stages in an automated test sequence (see also [chapter 3.1, "Measurements and Result Displays"](#), on page 21).

The "Peak Search" and "Run Final Test" buttons at the bottom of each of the tabs initiate the corresponding measurement function.

SCPI command:

[CALCulate<n>:PEAKsearch|PSEarch\[:IMMediate\]](#) on page 495


[INITiate<n>:FMEasurement](#) on page 460

Peak Search

In addition to the "Peak Search" button, you can initiate a peak search with the PEAK SEARCH key on the R&S ESRP front panel.

3.3.7.1 Overview

The "Overview" tab in the "Test Automation" dialog box contains general functions to configure automated test sequences.

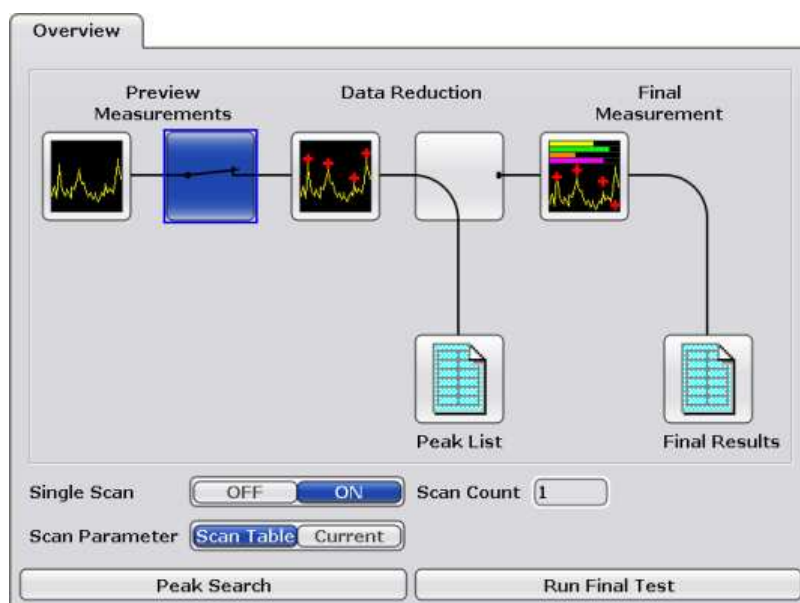

The main part of the "Overview" tab represents a complete test sequence (scan, peak search and final measurement).

- The  item opens the [Scan Table](#) tab.
- The  item includes (blue state) or excludes (grey state) the peak search and later stages from the test sequence.
- The  item opens the [Peak Search](#) tab.
- The  item includes (blue state) or excludes (grey state) the final measurement from the test sequence. Note that if you include the final measurement, the R&S ESRP automatically includes the peak search in the test sequence.
- The  item opens the [Trace / Final Meas](#) tab.
- The  item opens the peak list after the scan or the final measurement.

Below the diagram, the source for the scan parameter settings is determined, and the number of scans set.

Scan Count

Defines the number of scans performed in a single scan or the number of scans included in calculating the moving average in a continuous scan.

Remote command:

Defining the scan count:

[\[SENSe:\] SWEep:COUNT](#) on page 489

Querying the number of started scans:

[\[SENSe:\] SWEep:COUNT:CURRent](#) on page 489

Scan Parameter

Selects the configuration the scan is based on.

"Scan Table" The scan is performed based on the settings defined of the scan table.

"Current"

The scan is performed based on the current setting of the R&S ESRP.

Remote command:

not supported

3.3.7.2 Scan Table

The "Scan Table" tab in the "Test Automation" dialog box contains the scan table were parameters for the individual subranges can be set.

Scan Table

Scan Start

100.0 kHz

Scan Stop

101.0 kHz

Step Mode

AUTO

Time Domain Scan

OFF ON

Adjust Axis

Delete Range

Insert Range Before

Insert Range After

	Range 1	Range 2	Range 3
Range Start	9.0 kHz	150.0 kHz	30.0 MHz
Range Stop	150.0 kHz	30.0 MHz	1.0 GHz
Step Size	50.0 Hz	2.25 kHz	30.0 kHz
Res BW	200.0 Hz	9.0 kHz	120.0 kHz
Meas Time	1 s	1 s	1 s
Auto Ranging	OFF ON	OFF ON	OFF ON
RF Attenuation	50 dB	10 dB	10 dB
Preamplifier	OFF	OFF	OFF

Prev Range

Next Range

Start / Stop Frequency.....

68

Step Mode.....

69

Time Domain Scan (On Off).....

69

Adjust Axis.....

69

Insert Range Before / After.....

69

Delete Range.....

69

Range 1 to 10.....

69

Prev / Next Range.....

70

Start / Stop Frequency

Defines the start and stop frequency for the scan.

The range for the start frequency is f_{min} to $(f_{max} - 10 \text{ Hz})$.

The range for the stop frequency is $(f_{min} + 10 \text{ Hz})$ to f_{max} .

f_{min} and f_{max} are defined in the datasheet.

Remote command:

Start frequency:

[SENSe:] FREQuency: START on page 483

Stop frequency:

[SENSe:] FREQuency: STOP on page 483

Step Mode

Selects the mode for frequency steps.

Note that the frequency stepsize for time domain scans (R&S ESRP-K53) is always selected automatically.

"AUTO"	Linear frequency steps. The stepsize is coupled to the current resolution bandwidth and is about a third of the resolution bandwidth. In this way, the probability to detect all signals in the scan range is very good.
"LIN"	Linear frequency steps. The stepsize is fix and depends on the Stepsize .
"LOG"	Logarithmic frequency steps. The stepsize is a percentage of the current frequency.

Remote command:

[\[\[SENSe:\] SWEep:SPACing](#) on page 494

Time Domain Scan (On Off)

Turns the time domain scan on and off.

For more information see [chapter 3.1.3.2, "Time Domain Scans in the Frequency Domain"](#), on page 25.

Note that time domain scans are available with option R&S ESRP-K53.

Remote command:

[\[\[SENSe:\] FREQuency:MODE](#) on page 483

Adjust Axis

Adjusts the scale of the horizontal axis if the overall scan range is different than the scan range defined by the scan subranges.

Remote command:

not supported

Insert Range Before / After

Inserts a new scan range before or after the currently selected range.

Except for the start and stop frequencies, the configuration of the new scan range is the same as the one that has been selected previously. The selected range is highlighted in orange.

Remote command:

The suffix at `SCAN<range>` of the commands listed in [chapter 9.3.6.2, "Scan Table"](#), on page 490 defines the ranges.

Delete Range

Deletes the currently selected scan range.

Remote command:

not supported

Range 1 to 10

Configures the currently selected scan range.

You can use and configure up to 10 individual scan ranges. For each range you can customize the following parameters.

- Range Start / Range Stop
- Frequency Stepsize
- Resolution Bandwidth
- Meas Time
- Auto Ranging
- RF Attenuation
- Preamplifier

For more information see [chapter 3.1.3.3, "The Scan Table"](#), on page 25.

Remote command:

See [chapter 9.3.6.2, "Scan Table"](#), on page 490

Prev / Next Range

Selects the scan range to the left or right of the currently selected scan range.

Remote command:

not supported

3.3.7.3 Peak Search

The "Peak Search" tab in the "Test Automation" dialog box contains functionality to control the peak search.

Peak Search Mode (Peaks Subranges).....	71
No Of Peaks.....	71
No of Subranges / Peaks per Subrange.....	71
Peak Excursion.....	71
Margin.....	71
Select Limit Line.....	71

Peak Search Mode (Peaks Subranges)

Selects the peak search mode.

"Peaks"	Looks for a particular number of peaks over the complete scan range.
"Subranges"	Divides the scan range into smaller subranges and looks for a particular number of peaks in each subrange.

Remote command:

`CALCulate<n>:PEAKsearch|PSEarch:METHod` on page 496

No Of Peaks

Defines the number of peaks the R&S ESRP looks for during a peak search.

The range is from 1 to 500 peaks.

The number of peaks only takes effect if the peak search mode is "Peaks".

Remote command:

`CALCulate<n>:PEAKsearch|PSEarch:SUBRanges` on page 496

No of Subranges / Peaks per Subrange

Defines the number of subranges for a subrange peak search and the number of peaks that the R&S ESRP looks for in each subrange.

Note that the maximum number of peaks is 500. Thus, the maximum number of peaks per subrange depends on the number of subranges you have defined.

These parameters only take effect if the peak search mode is "Subranges".

Remote command:

Number of subranges:

`CALCulate<n>:PEAKsearch|PSEarch:SUBRanges` on page 496

Peaks per subrange:

`CALCulate<n>:PEAKsearch|PSEarch:SUBRanges:PCOunt` on page 497

Peak Excursion

Defines the relative signal level to determine a peak during a peak search.

For more information see [chapter 3.1.4, "Peak List and Data Reduction"](#), on page 26.

Remote command:

`CALCulate<n>:MARKer<m>:PEXCursion` on page 495

Margin

Defines an additional level margin relative to a limit line that is considered during a peak search.

For more information see [chapter 3.1.4, "Peak List and Data Reduction"](#), on page 26.

Remote command:

`CALCulate<n>:PEAKsearch|PSEarch:MARGin` on page 496

Select Limit Line

Applies one or more limit lines for the peak search.

For more information on limit lines see [chapter 3.4.3, "\(Limit\) Lines"](#), on page 86.

"Assign to Trace"	Assigns the limit line to one or more traces.

"Deselect all
Traces"

"Limitcheck (On Off)" Turns the limit check on and off.

3.3.7.4 Peak Lists

The peak list dialog box is available for the prescan results and the final measurement results. Both dialog boxes contain the same elements.

Trace/Detector	Frequency	Level dBμV	DeltaLimit
1 Max Peak	2.1500 MHz	84.21	
1 Max Peak	6.1500 MHz	84.21	
1 Max Peak	10.1500 MHz	84.21	
1 Max Peak	14.1500 MHz	84.21	
1 Max Peak	18.1500 MHz	84.21	
1 Max Peak	22.1500 MHz	84.21	
1 Max Peak	26.1500 MHz	84.21	

Insert Frequency Delete Frequency Sort by Delta Limit

Symbols ☐ OFF ☒ ON Peak List Export Decim Sep ☐ . ☒ ,

Peak List.....	72
Insert Frequency.....	73
Delete Frequency.....	73
Sort by Delta Limit.....	73
Symbols (On Off).....	73
Peak List Export.....	73

Peak List

Contains information about the peaks that were found during the peak search.

- **Trace / Detector**
Shows the number of trace that the peak is on and the detector with which the peak has been measured.
- **Frequency**
Shows the frequency of the peak level.
- **Level**
Shows the signal level of the peak. The unit depends on the one you have selected.
- **Delta Limit**
Shows the distance of the peak to a limit line. The delta limit is only calculated if you have activated a limit line and have assigned it to one more traces.

Insert Frequency

Adds a new frequency to the peak list that is considered in the next scan.

Remote command:

[CALCulate<n>:PEAKsearch|PSEarch:ADD](#) on page 495

Delete Frequency

Deletes the currently selected peak list table row (grey highlighting).

Remote command:

not supported

Sort by Delta Limit

Sort the entries of the peak list according to the delta limit results.

The delta limit is the distance of a peak to a limit line, if one has been assigned.

Remote command:

not supported

Symbols (On Off)

Turns the labels on the peak position in the diagram on and off.

The peak labels have a different color and shape depending on the trace they are on. Trace 1, for example, has red crosses as the peak label. By default they are on.

Remote command:

[DISPlay\[:WINDow<n>\]:TRACe<t>:SYMBOL](#) on page 497

Peak List Export

Opens a dialog box to export and save the contents of the peak list in ASCII format to a *.dat file.

The file consists of a header and the results of the scan or the final measurement.

- The header is a list of general instrument settings and characteristics. It consists of three columns, each column separated by a semicolon: <parameter>;<value>;<unit>.
- The results are split into several data sections, one for each active trace. The data section begins with the entry `Trace <x> [Final] :`, followed by the trace characteristics and the peak list data itself.

For a description of the data see [chapter 4.3.1.6, "ASCII File Export Format"](#), on page 273 .

By default, decimal places are separated by a point in the exported list. If required, you can use a comma instead of a point as the decimal separator.

Remote command:

Export the peak list of the scan results:

[MMEMory:STORe:PEAKlist](#) on page 498

Export the peak list of the final measurement:

[MMEMory:STORe:FINAl](#) on page 498

Select the decimal separator:

[FORMat:DEXPort:DSEParator](#) on page 656

3.3.7.5 Trace / Final Meas

The Trace / Final Meas tab in the Test Automation dialog box contains functionality to configure the traces for the scan and the final measurement.

Final Measurement Time.....	74
Interactive Mode.....	74
Trace 1 to 6.....	74

Final Measurement Time

Defines the measurement time for the final measurement.

For more information see [chapter 3.2.2, "Measurement Time"](#), on page 45.

Interactive Mode

Turns interactive final measurements on and off.

Remote command:

`[SENSe:] FMEasurement:AUTO` on page 461

Trace 1 to 6

Selects the characteristics of each trace.

In addition to the trace mode, you can select a detector for the scan and the final measurement. For more information see

- [chapter 3.1.3, "Scans"](#), on page 23
- [chapter 3.1.5, "Final Measurement"](#), on page 28
- [chapter 3.2.4, "Trace Modes"](#), on page 50
- [chapter 3.2.3, "Detectors"](#), on page 46

Remote command:

Trace mode:

`DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 498

Scan detector:

`[SENSe:] [WINDow:] DETector<trace>[:FUNCTION]` on page 498

Final measurement detector:

`[SENSe:] DETector<t>:FMEasurement` on page 460

3.3.7.6 LISN Settings

The "LISN Settings" tab in the "Test Automation" dialog box contains functionality to control line impedance networks.

LISN Type.....	75
Prescan Phase.....	75
Final Test Phase.....	75
150 kHz Highpass Filter.....	76

LISN Type

Selects the V-network to be controlled via the user port.

For more information see [chapter 3.2.6, "V-Networks Control \(LISN\)"](#), on page 52.

Remote command:

For the scan:

`INPut:LISN[:TYPE]` on page 502

For the final measurement:

`[SENSe:]FMEasurement:LISN[:TYPE]` on page 500

Prescan Phase

Selects the phase of the network you want to control during the scan.

During the scan, you can control more than one phase at a time.

For more information see [chapter 3.2.6, "V-Networks Control \(LISN\)"](#), on page 52.

Remote command:

`INPut:LISN:PHASe` on page 501

Final Test Phase

Selects the phase of the network you want to control during the final measurement.

During the final measurement you can control more than one phase.

For more information see [chapter 3.2.6, "V-Networks Control \(LISN\)"](#), on page 52.

Remote command:

`[SENSe:]FMEasurement:LISN:PHASe` on page 500

150 kHz Highpass Filter

Turns the highpass filter available with the R&S ENV216 network on and off.

For more information see [chapter 3.2.6, "V-Networks Control \(LISN\)"](#), on page 52.

Remote command:

Highpass filter for the scan:

`INPut:LISN:FILTER:HPAS[:STATe]` on page 501

Highpass filter for the final measurement:

`[SENSe:]FMEasurement:LISN:FILTER:HPAS[:STATe]` on page 500

3.4 Common Analysis Functions

3.4.1 Trace Configuration

The TRACE key is used to configure the data acquisition for measurement and the analysis of the measurement data.

The R&S ESRP is capable of displaying up to six different traces at a time in a diagram. A trace consists of a maximum of 691 displayed measurement points on the horizontal axis (frequency or time). If more measured values than measurement points are available, several measured values are combined in one displayed measurement point.

The trace functions include the following:

- Display mode of the trace
For details on trace modes see [chapter 3.2.4, "Trace Modes"](#), on page 50.
- Evaluation of individual measurement points of a trace. For details on detectors see [chapter 3.2.3, "Detectors"](#), on page 46.

To open the Trace menu

- Press the TRACE key.
The "Trace" menu is displayed.

Further information

- [chapter 3.2.4, "Trace Modes"](#), on page 50
- [chapter 3.2.3, "Detectors"](#), on page 46
- [chapter 4.3.1.6, "ASCII File Export Format"](#), on page 273

Tasks

- [chapter 4.3.1.2, "Configuring Traces"](#), on page 269
- [chapter 4.3.1.3, "Specifying the Trace Settings"](#), on page 270

The following table shows all softkeys available in the "Trace" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available

with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Trace 1 - 6.....	77
More Traces.....	77
Copy Trace.....	77
Trace Wizard.....	77
ASCII Trace Export.....	77
Decim Sep.....	78

Trace 1 - 6

Opens a submenu to select the trace mode and detector (for both scan and final measurement).

For more information see [chapter 3.2.3, "Detectors"](#), on page 46 and [chapter 3.2.4, "Trace Modes"](#), on page 50.

Remote command:

Selecting the trace mode:

`DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 498

Selecting the detector for the scan:

`[SENSe:] [WINDow:] DETector<trace>[:FUNction]` on page 658

Selecting the detector for the final measurement:

`[SENSe:] DETector<t>:FMEasurement` on page 460

More Traces

Opens a submenu to select one of the traces not currently displayed in the main menu.

Copy Trace

Opens an edit dialog box to enter the number of the trace memory in which the currently selected trace will be copied.

Remote command:

`TRACe<n>:COPY` on page 659

Trace Wizard

Opens the "Trace Wizard" dialog box.

For more information see [chapter 3.3.7.5, "Trace / Final Meas"](#), on page 74.

ASCII Trace Export

Opens the "ASCII Trace Export Name" dialog box and saves the active trace in ASCII format to the specified file and directory.

The file consists of the header containing important scaling parameters and a data section containing the trace data. For details on an ASCII file see [chapter 4.3.1.6, "ASCII File Export Format"](#), on page 273.

This format can be processed by spreadsheet calculation programs, e.g. MS-Excel. It is necessary to define ';' as a separator for the data import. Different language versions of evaluation programs may require a different handling of the decimal point. It is therefore possible to select between separators '.' (decimal point) and ',' (comma) using the "Decim Sep" softkey (see ["Decim Sep"](#) on page 78).

If the spectrogram display is selected when you perform this function, the entire histogram buffer with all frames is exported to a file. The data corresponding to a particular frame begins with information about the frame number and the time that frame was recorded. For large history buffers the export operation may take some time.

Remote command:

`FORMat:DEXPort:DSEParator` on page 656

`MMEMory:STORe<n>:TRACe` on page 656

`MMEMory:STORe:SGRam` on page 469

Decim Sep

Selects the decimal separator with floating-point numerals for the ASCII Trace export to support evaluation programs (e.g. MS-Excel) in different languages. The values '.' (decimal point) and ',' (comma) can be set.

Remote command:

`FORMat:DEXPort:DSEParator` on page 656

3.4.2 Markers

3.4.2.1 Controlling Markers

The markers are used for marking points on traces, reading out measurement results and for selecting a display section quickly. The R&S ESRP provides 16 markers per trace.

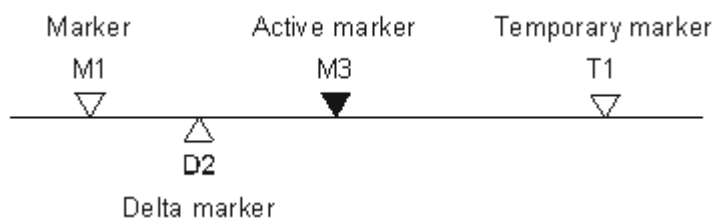


Fig. 3-9: Marker types

All markers can be used either as markers or delta markers. The marker that can be moved by the user is defined in the following as the active marker. Temporary markers are used in addition to the markers and delta markers to evaluate the measurement results. They disappear when the associated function is deactivated.

The measurement results of the active marker (also called marker values) are displayed in the marker field, which is located at the upper right corner of the diagram, or in a separate table beneath the diagram. The marker information includes the following:

- marker type (M1 in the example)
- trace in square brackets ([1] in the example)
- level (-33.09 dBm in the example)
- marker location (3 GHz in the example)

M1[1] -33.09 dBm
 3.000000000 GHz

Fig. 3-10: Marker values

The MKR key is used to select and position the absolute and relative measurement markers (markers and delta markers). In addition, the functions for the frequency counter, a fixed reference point for relative measurement markers, and for enlargement of the measurement area are assigned to this key.

To open the Marker menu

- Press the MKR key.
 The "Marker" menu is displayed. If no marker is active, marker 1 is activated and a peak search on the trace is carried out. Otherwise, the edit dialog box for the last activated marker is opened and the current frequency/time value is displayed.

Further information

- ["Displayed Marker Information"](#) on page 282
- [chapter 3.4.2.2, "Positioning Markers"](#), on page 82.

Tasks

- ["Basic Marker Functions"](#) on page 280

Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta

The "Marker X" softkey activates the corresponding marker and opens an edit dialog box to enter a value for the marker to be set to. Pressing the softkey again deactivates the selected marker.

If a marker value is changed using the rotary knob, the step size is defined via the [Stepsize Standard](#) or [Stepsize Sweep Points](#) softkeys.

Marker 1 is always the reference marker for relative measurements. If activated, markers 2 to 16 are delta markers that refer to marker 1. These markers can be converted into markers with absolute value display using the "Marker Norm/Delta" softkey. If marker 1 is the active marker, pressing the "Marker Norm/Delta" softkey switches on an additional delta marker.

Remote command:

[CALCulate<n>:MARKer<m>\[:STATe\]](#) on page 509

[CALCulate<n>:MARKer<m>:X](#) on page 510

[CALCulate<n>:MARKer<m>:Y](#) on page 510

[CALCulate<n>:DELTamarker<m>\[:STATe\]](#) on page 515

[CALCulate<n>:DELTamarker<m>:X](#) on page 516

[CALCulate<n>:DELTamarker<m>:X:RELative?](#) on page 516

[CALCulate<n>:DELTamarker<m>:Y](#) on page 516

More Markers

Opens a sub-menu to select one of up to 16 available markers. See ["Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta"](#) on page 79.

Marker to Trace

Opens an edit dialog box to enter the number of the trace on which the marker is to be placed.

Remote command:

[CALCulate<n>:MARKer<m>:TRACe](#) on page 510

[CALCulate<n>:DELTaMarker<m>:TRACe](#) on page 515

Marker Wizard

Opens a configuration dialog for markers. The marker wizard allows you to configure and activate up to 16 different markers in one dialog. The first 8 markers are displayed on one tab, the last 8 markers on a second tab. For each marker, the following settings are available:



"Selected/
State"

When you press the "Selected" or "State" field the corresponding marker is activated and the marker row is highlighted.

"Normal/Delta"

Defines whether it is a normal marker or delta marker. For delta markers you can define a reference marker.

"Ref. Marker"

Reference marker for delta markers. The marker values for the delta marker are indicated relative to the specified reference marker. The reference marker can either be another active marker, or a fixed reference marker ("FXD", see ["Ref Fixed"](#) on page 291).

"Trace" Trace for which the marker is to be set.

Remote command:

`CALCulate<n>:MARKer<m>[:STATe]` on page 509

`CALCulate<n>:DELTamarker<m>[:STATe]` on page 515

`CALCulate<n>:MARKer<m>:TRACe` on page 510

`CALCulate<n>:DELTamarker<m>:TRACe` on page 515

`CALCulate<n>:DELTamarker<m>:MREF` on page 671

All Marker Off ← Marker Wizard

Switches all markers off. It also switches off all functions and displays that are associated with the markers/delta markers.

Remote command:

`CALCulate<n>:MARKer<m>:AOFF` on page 506

All Marker Off

Switches all markers off. It also switches off all functions and displays that are associated with the markers/delta markers.

Remote command:

`CALCulate<n>:MARKer<m>:AOFF` on page 506

Marker Table

Defines how the marker information is displayed.

For more information, see [Displayed Marker Information](#).

"On" Displays the marker information in a table in a separate area beneath the diagram.

"Off" Displays the marker information within the diagram area.

"Aut" (Default) The marker table is displayed automatically if more than 2 markers are active, and removed if only 1 or 2 markers are active. This helps keep the information in the display clear.

Remote command:

`DISPlay:MTABle` on page 670

Marker Info (On Off)

Turns the numerical marker information in the diagram area on and off.

Remote command:

`DISPlay[:WINDow<n>]:MINFo:STATe` on page 506

Tune to Marker

Defines the marker frequency as the new center frequency.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTion:CENTer` on page 503

Marker Track

Turns marker frequency tracking on and off.

If on, the R&S ESRP changes the center frequency to the marker frequency when you change the marker position.

Remote command:

[CALCulate<n>:MARKer<m>:COUPled\[:STATe\]](#) on page 503

Settings Coupled

Couples or decouples the receiver settings to the scan range settings when you use "Marker Tracking".

If on, the R&S ESRP changes the receiver settings according to the scan range the marker frequency is currently in.

Remote command:

[CALCulate<n>:MARKer<m>:SCOupled\[:STATe\]](#) on page 504

3.4.2.2 Positioning Markers

The MKR → key is used for search functions of measurement markers, assignment of the marker frequency as center frequency, restriction of the search area and characterization of maxima and minima. For details on markers in general, see [chapter 3.4.2.1, "Controlling Markers"](#), on page 78.

To open the Marker To menu

- Press the MKR → key.
The "Marker To" menu is displayed. If no marker is active, marker 1 will be activated and a peak search on the trace carried out. Otherwise, the edit dialog box for the last activated marker is opened and the current frequency/time value is displayed.

Further information

- ["Effect of Different Peak Excursion Settings \(Example\)"](#) on page 286

Tasks

- ["Searching for a Maximum"](#) on page 285
- ["Searching for a Minimum"](#) on page 285
- ["Specifying the Search Limits"](#) on page 285
- ["Specifying the Search Range"](#) on page 285
- ["Examining a Signal at the Center in Detail"](#) on page 285
- ["Specifying the Suitable Peak Excursion"](#) on page 286

Select Marker (No)

Opens a submenu to select one of 16 markers and define whether the marker is a normal or a delta marker (see ["Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta"](#) on page 79). "(No)" indicates the number of the currently active marker.

Peak

Sets the active marker/delta marker to the highest maximum of the trace.

Remote command:

`CALCulate<n>:MARKer<m>:MAXimum[:PEAK]` on page 507

`CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]` on page 513

Next Peak

Sets the active marker/delta marker to the next maximum of the selected trace.

Remote command:

`CALCulate<n>:MARKer<m>:MAXimum:NEXT` on page 507

`CALCulate<n>:DELTamarker<m>:MAXimum:NEXT` on page 512

Min

Sets the active marker/delta marker to the minimum of the selected trace.

Remote command:

`CALCulate<n>:MARKer<m>:MINimum[:PEAK]` on page 509

`CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]` on page 514

Next Min

Sets the active marker/delta marker to the next minimum of the selected trace.

Remote command:

`CALCulate<n>:MARKer<m>:MINimum:NEXT` on page 508

`CALCulate<n>:DELTamarker<m>:MINimum:NEXT` on page 514

Next Mode

Selects the mode of the [Next Peak](#) or [Next Min](#) softkey.

Three settings are available:

"<"	Sets the active marker/delta marker to the next maximum/minimum left to the marker of the selected trace.
"abs"	Sets the active marker/delta marker to the next lower maximum/higher minimum of the selected trace.

">" Sets the active marker/delta marker to the next maximum/minimum right to the marker of the selected trace.

Remote command:

Next Peak:

CALC:MARK:MAX:LEFT (<): CALCulate<n>:MARKer<m>:MAXimum:LEFT

on page 506

CALCulate<n>:DELTamarker<m>:MAXimum:LEFT on page 512

CALC:MARK:MAX:RIGH (>): CALCulate<n>:MARKer<m>:MAXimum:RIGHT

on page 507

CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT on page 513

CALC:DELT:MAX:NEXT (abs): CALCulate<n>:MARKer<m>:MAXimum:NEXT

on page 507

CALCulate<n>:DELTamarker<m>:MAXimum:NEXT on page 512

Next Min:

CALC:MARK:MIN:LEFT (>): CALCulate<n>:MARKer<m>:MINimum:LEFT

on page 508

CALCulate<n>:DELTamarker<m>:MINimum:LEFT on page 513

CALC:MARK:MIN:RIGH (>): CALCulate<n>:MARKer<m>:MINimum:RIGHT

on page 509

CALCulate<n>:DELTamarker<m>:MINimum:RIGHT on page 514

CALC:MARK:MIN:NEXT (abs): CALCulate<n>:MARKer<m>:MINimum:NEXT

on page 508

CALCulate<n>:DELTamarker<m>:MINimum:NEXT on page 514

Search Limits

Opens a submenu to set the limits for maximum or minimum search in the x and y direction.

Remote command:

CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] on page 505

Left Limit ← Search Limits

Opens an edit dialog box to enter a value for the lower limit (left vertical line: S1 for span > 0; T1 for zero span). The search is performed between the lines of the left and right limit (see also [Right Limit](#) softkey).

Remote command:

CALCulate<n>:MARKer<m>:X:SLIMits:LEFT on page 504

Right Limit ← Search Limits

Opens an edit dialog box to enter a value for the upper limit (left vertical line: S2 for span > 0; T2 for zero span). The search is performed between the lines of the left and right limit (see also [Left Limit](#) softkey). If no value is set, the upper limit corresponds to the stop frequency.

Remote command:

CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT on page 505

Threshold ← Search Limits

Opens an edit dialog box to define the threshold line. The threshold line represents the lower level limit for a "Peak" search and the upper level limit for a "Min" search.

Remote command:

`CALCulate<n>:THReshold:STATe` on page 670

`CALCulate<n>:THReshold` on page 670

Use Zoom Limits ← Search Limits

Restricts the marker search to the zoomed area.

Note that the marker zoom is only available in Spectrum mode.

Remote command:

`CALCulate<n>:MARKer<m>:X:SLIMits:ZOOM` on page 669

Search Lim Off ← Search Limits

Deactivates all limits of the search range.

Remote command:

`CALCulate<n>:MARKer<m>:X:SLIMits[:STATe]` on page 505

`CALCulate<n>:THReshold:STATe` on page 670

Peak Excursion

Opens an edit dialog box for level measurements to enter the minimum level value by which a signal must rise or fall so that it will be identified as a maximum or a minimum by the search functions. Entries from 0 dB to 80 dB are allowed; the resolution is 0.1 dB. The default setting for the peak excursion is 6 dB.

Remote command:

`CALCulate<n>:MARKer<m>:PEXCursion` on page 495

3.4.2.3 Markers in Spectrograms

In addition to the marker functionality described above, spectrograms support the following marker positioning functionality.

Search Mode.....	85
L Next Mode X.....	85
L Next Mode Y.....	86
L Marker Search Type.....	86
L Select Search Area.....	86

Search Mode

Opens a submenu to select the marker search mode.

Next Mode X ← Search Mode

Sets the search mode for the marker peak search if a search in the x-direction is active. Three modes are available:

"<" Sets the active marker/delta marker to the next maximum/minimum left of the marker of the selected trace.

- "abs" Sets the active marker/delta marker to the next lower maximum/higher minimum of the selected trace.
- ">" Sets the active marker/delta marker to the next maximum/minimum right of the marker of the selected trace.

Remote command:

See [chapter 9.3.1.7, "Spectrogram Control"](#), on page 466

Next Mode Y ← Search Mode

Sets the search mode for the marker peak search if a search in the y direction is active. Three modes are available:

- "up" Places the active marker or deltamarker to the next peak value above the current marker position.
- "abs" Places the active marker or deltamarker to the next peak either to the left or to the right of the current position.
- "dn" Places the active marker or deltamarker to the next peak value below the current marker position.

Remote command:

See [chapter 9.3.1.7, "Spectrogram Control"](#), on page 466

Marker Search Type ← Search Mode

Opens a dialog box to select the marker search direction.

- **X Search**
Performs a search in the currently selected frame.
- **Y Search**
Performs a search on the marker frequency (span > 0) or time (span = 0) over all captured frames.
- **XY Search**
Performs a search in the frequency domain (span > 0) or time domain (span = 0) and over all captured frames at the same time.
An XY Search is possible for searches that are independent on direction (< and >)

Select Search Area ← Search Mode

Opens a dialog box to specify the search area.

- **Visible**
Performs a search in the visible Spectrogram area only.
Note that if the Spectrogram is not visible for any reason (e.g. if the Spectrum Analyzer is in full screen mode), the search area is the data stored in the memory.
- **Memory**
Performs a search over all captured frames that are stored in the memory of the R&S ESRP

Remote command:

[CALCulate<n>:MARKer<m>:SGRam:SARea](#) on page 471

3.4.3 (Limit) Lines

The LINES key is used to configure limit and display lines.

To open the Lines menu

- Press the LINES key.

The "Lines" menu and the "Select Limit Line" dialog box are displayed. For details on the "Select Limit Line" dialog box refer to [chapter 3.4.3.5, "Selecting a Limit Line"](#), on page 93.

Menu and softkey description

- [chapter 3.4.3.1, "Softkeys of the Lines Menu"](#), on page 87

Further information

- [chapter 3.4.3.2, "Display Lines"](#), on page 91
- [chapter 3.4.3.3, "Limit Lines \(Frequency/Time Lines\)"](#), on page 92

Tasks

- [chapter 3.4.3.4, "Working with Lines"](#), on page 93
- [chapter 3.4.3.5, "Selecting a Limit Line"](#), on page 93
- [chapter 3.4.3.6, "Creating a New Limit Line"](#), on page 94
- [chapter 3.4.3.7, "Editing an Existing Limit Line"](#), on page 97
- [chapter 3.4.3.8, "Creating a New Limit Line Based upon an Existing Limit Line"](#), on page 97
- [chapter 3.4.3.9, "Activating/Deactivating a Limit Line"](#), on page 98

3.4.3.1 Softkeys of the Lines Menu

The following table shows all softkeys available in the "Lines" menu.

Further information

- [chapter 3.4.3.2, "Display Lines"](#), on page 91
- [chapter 3.4.3.3, "Limit Lines \(Frequency/Time Lines\)"](#), on page 92

Tasks

- [chapter 3.4.3.4, "Working with Lines"](#), on page 93
- [chapter 3.4.3.5, "Selecting a Limit Line"](#), on page 93
- [chapter 3.4.3.6, "Creating a New Limit Line"](#), on page 94
- [chapter 3.4.3.7, "Editing an Existing Limit Line"](#), on page 97
- [chapter 3.4.3.8, "Creating a New Limit Line Based upon an Existing Limit Line"](#), on page 97
- [chapter 3.4.3.9, "Activating/Deactivating a Limit Line"](#), on page 98

Select Traces to check.....	88
Deselect All.....	88
New.....	88
L Edit Name.....	88

L Edit Comment.....	89
L Edit Margin.....	89
L Edit Value.....	89
L Insert Value.....	89
L Delete Value.....	89
L Save Limit Line.....	89
Edit.....	89
Copy to.....	90
Delete.....	90
X Offset.....	90
Y Offset.....	90
Display Lines.....	90
L Display Line 1 / Display Line 2.....	91
L Frequency Line 1 / Frequency Line 2.....	91
L Time Line 1 / Time Line 2.....	91
L Tuned Frequency (On Off).....	91

Select Traces to check

Opens a dialog box to activate the selected limit line for a trace. One limit line can be activated for several traces simultaneously. For details see also [chapter 3.4.3.9, "Activating/Deactivating a Limit Line"](#), on page 98.

Remote command:

`CALCulate<n>:LIMit<k>:TRACe` on page 521

`CALCulate<n>:LIMit<k>:STATe` on page 532

Deselect All

Deactivates the selected limit line for all assigned traces. For details see also [chapter 3.4.3.9, "Activating/Deactivating a Limit Line"](#), on page 98.

Remote command:

`CALCulate<n>:LIMit<k>:STATe` on page 532

New

Opens the "Edit Limit Line" dialog box and a submenu to define a new limit line. For details see also [chapter 3.4.3.3, "Limit Lines \(Frequency/Time Lines\)"](#), on page 92 and [chapter 3.4.3.5, "Selecting a Limit Line"](#), on page 93.

Edit Name ← New

Sets the focus on the "Name" field to enter or change the limit line name. All names must be compatible with the Windows XP conventions for file names. The limit line data are stored under this name. The instrument stores all limit lines with LIM as extension.

Remote command:

`CALCulate<n>:LIMit<k>:LOWer:MODE` on page 525

Edit Comment ← New

Sets the focus on the "Comment" field to enter or change a comment for the limit line. The text must not exceed 40 characters.

Remote command:

[CALCulate<n>:LIMit<k>:COMMeNt](#) on page 519

Edit Margin ← New

Sets the focus on the "Margin" field to enter or change a margin for the limit line. The default setting is 0 dB (i.e. no margin).

Edit Value ← New

Opens an edit dialog box to change an existing x or y value, depending on the selected column. The softkey is only available if an existing value is selected.

The desired data points are entered in ascending order (two repeated frequencies/time values are permitted).

Remote command:

[CALCulate<n>:LIMit<k>:CONTRol\[:DATA\]](#) on page 522

[CALCulate<n>:LIMit<k>:UPPer\[:DATA\]](#) on page 528

[CALCulate<n>:LIMit<k>:LOWer\[:DATA\]](#) on page 524

Insert Value ← New

Creates an empty line above the selected data point to enter a new data point.

It is also possible to add a data point at the end of the list, if the focus is set below the last entry line of the list.

The data points are entered in ascending order (two repeated frequencies/time values are permitted). If the entered values are not in accordance with the ascending order rule, an error message is displayed and the values are discarded.

Delete Value ← New

Deletes the selected data point (x and y value). All succeeding data points are shifted up accordingly. This softkey is only available if an existing value is selected.

Save Limit Line ← New

Saves the currently edited limit line under the name defined in the "Name" field.

Edit

Opens a submenu to edit limit lines. For details see also [chapter 3.4.3.3, "Limit Lines \(Frequency/Time Lines\)"](#), on page 92 and [chapter 3.4.3.7, "Editing an Existing Limit Line"](#), on page 97.

The submenu contains the same commands as the "New" menu, see ["New"](#) on page 88.

Remote command:

see ["Using Display Lines"](#) on page 665

Copy to

Copies the data of the selected limit line and displays it in the "Edit Limit Line" dialog box. If the limit line is edited and saved under a new name, a new limit line can be easily generated by parallel translation or editing of an existing limit line.

For details see also [chapter 3.4.3.3, "Limit Lines \(Frequency/Time Lines\)"](#), on page 92 and [chapter 3.4.3.8, "Creating a New Limit Line Based upon an Existing Limit Line"](#), on page 97.

The submenu contains the same commands as the "New" menu, see ["New"](#) on page 88.

Remote command:

[CALCulate<n>:LIMit<k>:COPY](#) on page 520

Delete

Deletes the selected limit line.

Remote command:

[CALCulate<n>:LIMit<k>:DELeTe](#) on page 520

X Offset

Horizontally shifts a limit line that has been specified for relative frequencies or times (x-axis). The softkey opens an edit dialog box in which the value for shifting can be entered numerically or via the rotary knob.

Note: This softkey does not have any effect on limit lines that represent absolute values for the x-axis.

Remote command:

[CALCulate<n>:LIMit<k>:CONTrol:OFFSet](#) on page 523

Y Offset

Vertically shifts a limit line that has relative values for the y-axis (levels or linear units such as volt). The softkey opens an edit dialog box in which the value for shifting can be entered numerically or via the rotary knob.

Note: This softkey does not have any effect on limit lines that represent absolute values for the y-axis.

Remote command:

[CALCulate<n>:LIMit<k>:LOWer:OFFSet](#) on page 526

[CALCulate<n>:LIMit<k>:UPPer:OFFSet](#) on page 529

Display Lines

Opens a submenu to enable, disable and set display lines. Which softkeys are available depends on the display mode (frequency or time range).

For details see also [chapter 3.4.3.2, "Display Lines"](#), on page 91 and [chapter 3.4.3.4, "Working with Lines"](#), on page 93.

The submenu contains the following functions:

- ["Display Line 1 / Display Line 2"](#) on page 91
- ["Display Line 1 / Display Line 2"](#) on page 91
- ["Frequency Line 1 / Frequency Line 2 "](#) on page 91
- ["Frequency Line 1 / Frequency Line 2 "](#) on page 91

- "Time Line 1 / Time Line 2" on page 91
- "Time Line 1 / Time Line 2" on page 91
- "Tuned Frequency (On Off)" on page 91

Display Line 1 / Display Line 2 ← Display Lines

Enables or disables the level lines 1/2 and opens an edit dialog box to enter the position of the lines.

For details see also [chapter 3.4.3.2, "Display Lines"](#), on page 91 and [chapter 3.4.3.4, "Working with Lines"](#), on page 93.

Remote command:

`CALCulate<n>:DLINe<k>` on page 517

`CALCulate<n>:DLINe<k>:STATe` on page 518

Frequency Line 1 / Frequency Line 2 ← Display Lines

Enables or disables the frequency lines 1/2 (span > 0) and opens an edit dialog box to enter the position of the lines.

For details see also [chapter 3.4.3.2, "Display Lines"](#), on page 91 and [chapter 3.4.3.4, "Working with Lines"](#), on page 93.

Remote command:

`CALCulate<n>:FLINe<k>` on page 518

`CALCulate<n>:FLINe<k>:STATe` on page 518

Time Line 1 / Time Line 2 ← Display Lines

Enables or disables the time lines 1/2 (zero span) and opens an edit dialog box to enter the position of the lines.

For details see also [chapter 3.4.3.2, "Display Lines"](#), on page 91 and [chapter 3.4.3.4, "Working with Lines"](#), on page 93.

Note that time lines are only available in Spectrum mode.

Remote command:

`CALCulate<n>:TLINe<Line>` on page 666

`CALCulate<n>:TLINe<Line>:STATe` on page 666

Tuned Frequency (On Off) ← Display Lines

Turns a frequency line coupled to the receiver frequency on and off.

The line that marks the receiver frequency is a green line labeled "TF".

Available for the Scan result display.

Remote command:

`CALCulate:TFLine:STATe` on page 519

3.4.3.2 Display Lines

Display lines help to evaluate a trace – as do markers. The function of a display line is comparable to that of a ruler that can be shifted on the trace in order to mark absolute values. They are used exclusively to visually mark relevant frequencies or points in time (span = 0), as well as constant level values. It is not possible to check automatically whether the points are below or above the marked level values.

For details on setting and switching the display lines on/off see [chapter 3.4.3.4, "Working with Lines"](#), on page 93.

Two different types of display lines are provided:

- Two horizontal level lines for marking levels – Display Line 1 and 2
The level lines are continuous horizontal lines across the entire width of a diagram and can be shifted in y direction.
- Two vertical frequency or time lines for marking frequencies or points in time – Frequency/Time Line 1 and 2
The frequency or time lines are continuous vertical lines across the entire height of the diagram and can be shifted in x direction.

Labels

Each line is identified by one of the following abbreviations in the display:

- D1: Display Line 1
- D2: Display Line 2
- F1: Frequency Line 1
- F2: Frequency Line 2
- T1: Time Line 1
- T2: Time Line 2

3.4.3.3 Limit Lines (Frequency/Time Lines)

Limit lines are used to define amplitude curves or spectral distribution boundaries on the display screen which are not to be exceeded. They indicate, for example, the upper limits for interference radiation or spurious waves which are allowed from a device under test (DUT). For transmission of information in TDMA systems (e.g. GSM), the amplitude of the bursts in a timeslot must adhere to a curve that falls within a specified tolerance band. The lower and upper limits may each be specified by a limit line. Then, the amplitude curve can be controlled either visually or automatically for any violations of the upper or lower limits (GO/NOGO test).

The instrument supports limit lines with a maximum of 50 data points. 8 of the limit lines stored in the instrument can be activated simultaneously. The number of limit lines stored in the instrument is only limited by the capacity of the flash disk used. Which softkeys are available depends on the display mode (frequency or time range). For details see also [chapter 3.4.3.5, "Selecting a Limit Line"](#), on page 93.

Limit lines are compatible with the current measurement settings, if the following applies:

- The x unit of the limit line has to be identical to the current setting.
- The y unit of the limit line has to be identical to the current setting with the exception of dB based units; all dB based units are compatible with each other.

At the time of entry, the R&S ESRP immediately checks that all limit lines are in accordance with the following guidelines:

- The frequencies/times for each data point must be entered in ascending order, however, for any single frequency/time, two data points may be entered (vertical segment of a limit line).
- The data points are allocated in order of ascending frequency/time. Gaps are not allowed. If gaps are desired, two separate limit lines must be defined and then both enabled.
- The entered frequencies/times need not necessarily be selectable in R&S ESRP. A limit line may also exceed the specified frequency or time range. The minimum frequency for a data point is -200 GHz, the maximum frequency is 200 GHz. For the time range representation, negative times may also be entered. The allowed range is -1000 s to +1000 s.

3.4.3.4 Working with Lines

If a line is switched on, the softkey is highlighted.

Switching a line on or off


1. Press the **Display Lines** softkey.
2. Press the softkey for the required line, e.g. **Display Line 1 / Display Line 2**.
An edit dialog box is opened to enter the position of the line. If the line was switched off, it is switched on. If it was switched on, it remains switched on.
3. If another softkey is pressed, the edit dialog box for the line is closed, but the line remains switched on (softkey with highlighted background).
4. When you press the **Display Line 1 / Display Line 2** softkey for the second time, the edit dialog box for the line is opened again.
5. When you press the **Display Line 1 / Display Line 2** softkey the third time, the line is switched off (softkey without highlighted background).

3.4.3.5 Selecting a Limit Line

- To display the "Select Limit Line" dialog box, press the **LINES** key.

All limit lines saved in the default directory and all subdirectories are displayed. For each limit line, the following information is given:

"Unit"	unit of the y-axis
"Traces"	selected traces to check
"Show"	limit line displayed in the measurement diagram or hidden
"Compatible"	compatibility of the limit line to the current measurement settings
"Offset"	user-definable X- and Y-offset for the limit line

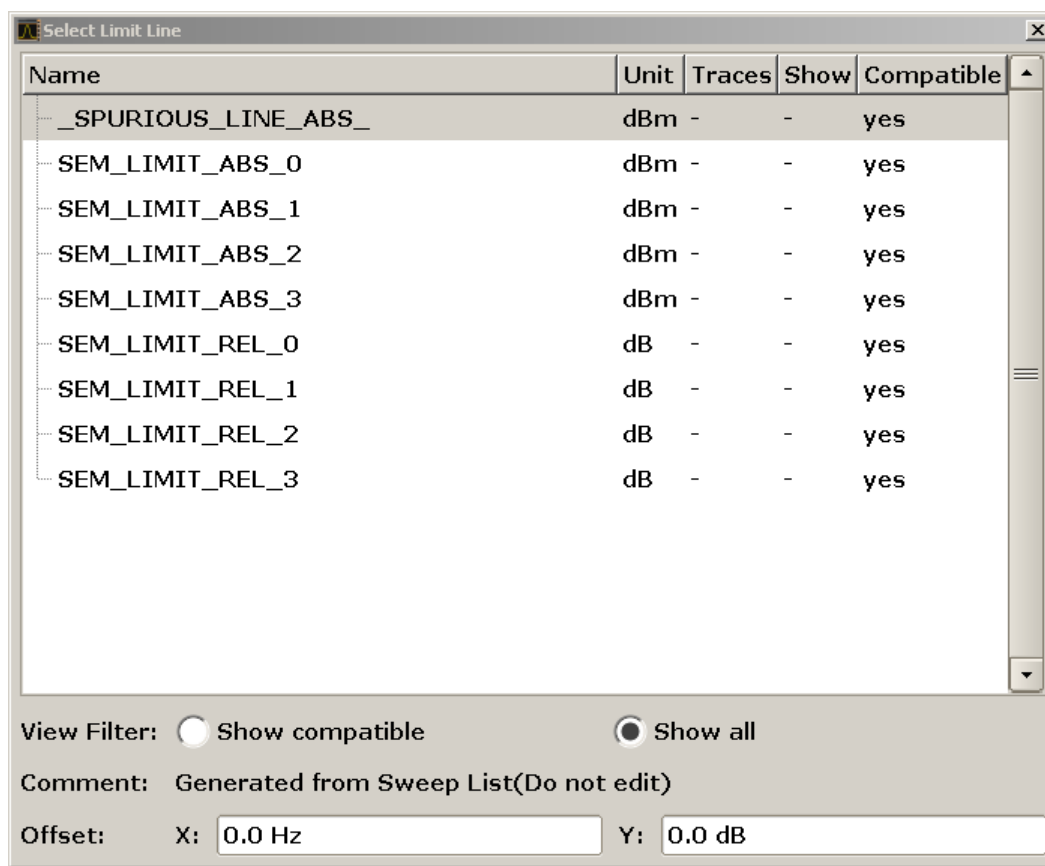

- To display only the limit lines that are compatible, activate the "Show compatible" option. For details on compatibility refer to [chapter 3.4.3.3, "Limit Lines \(Frequency/Time Lines\)"](#), on page 92.

3.4.3.6 Creating a New Limit Line

Press the **New** softkey to define a new limit line.

The "Edit Limit Line" dialog box is displayed. For more details on limit lines refer also to [chapter 3.4.3.3, "Limit Lines \(Frequency/Time Lines\)"](#), on page 92. The following settings can be defined:

Setting	Description
Name	The name under which the limit line is to be stored in the main directory. To save the limit line in an existing subdirectory, enter the relative path. A new subdirectory can only be created using the FILE key (for details refer to "Save File / Recall File" on page 391).
Comment	Optional description
Threshold	Absolute threshold value that works as a lower limit for the relative limit values (only for relative scaling of the y-axis).
Margin	A fixed distance to the limit line. Margins are not as strict as limits and belong to the valid value range, but violation is also indicated in the display.

Setting	Description
Position	Position of data point
Value	Value of data point
X-Axis:	
Span setting	• "Hz" for span > 0 Hz • "s" for zero span
Scale mode	• Absolute: The frequencies or times are interpreted as absolute physical units. • Relative: In the data point table, the frequencies are referred to the currently set center frequency. In the zero span mode, the left boundary of the diagram constitutes the reference. Relative scaling is always suitable if masks for bursts are to be defined in zero span or if masks for modulated signals are required for span > 0 Hz.
Scale	• Linear • Logarithmic
Y-Axis:	
Scale unit	Unit of the y-axis
Scale mode	• Absolute: The limit values refer to absolute levels or voltages. • Relative: The limit values refer to the reference level (Ref Level). Limit values with the unit dB are always relative values.
Limit type	• Upper limit • Lower limit


In addition, the following functions are available for the limit line:

Defining a threshold

If the scaling of the y-axis is relative, you can define an absolute threshold value that works as a lower limit for the relative limit values (see figure below).

- Enter a value in the "Threshold" field of the "Edit Limit Line" dialog box.

The function is especially useful for mobile radio applications provided the limit values are defined in relation to the carrier power as long as they are above an absolute limit value.

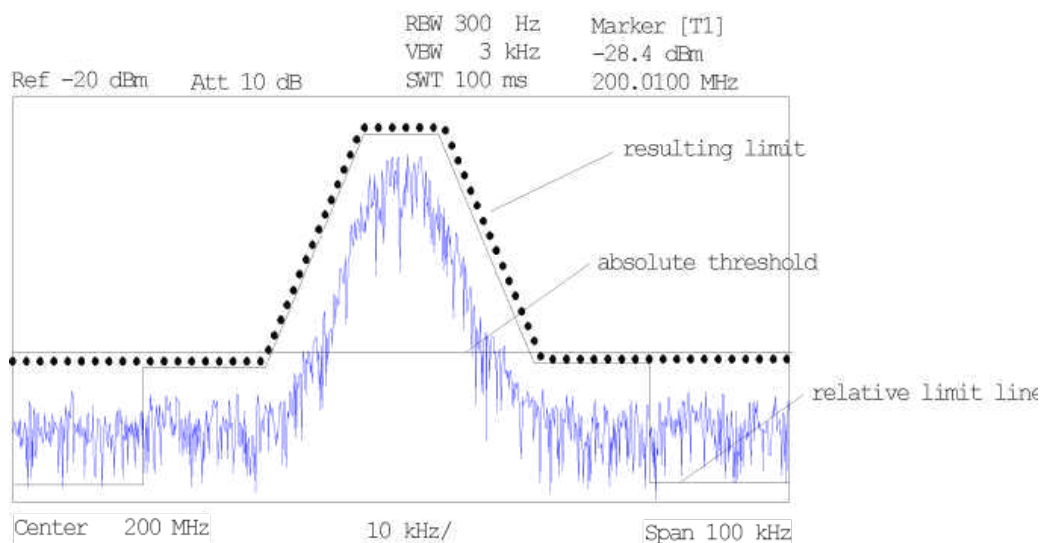

Defining a margin

A margin is similar to a limit, but less strict and it still belongs to the valid data range. It can be used as a warning that the limit is almost reached. The margin is not indicated by a separate line in the display.

- ▶ Enter a value in the "Margin" field of the "Edit limit Line" dialog box.
 If the limit line is defined as an upper limit, the margin is below the limit line. If the limit line is defined as a lower limit, the margin is above the limit line.

Entering a new data point

1. Press the "Insert value" button in the dialog, or select an existing data point in the table and press the [Insert Value](#) softkey.
2. Enter the new position (x) and value (y) in the edit dialog box.

Changing a data point

1. Press on the data point to be changed in the table.
2. Enter the new position (x) and value (y) in the edit dialog box.

Deleting a data point

1. Press on the data point to be deleted in the table.
2. Press the "Delete" button in the dialog.

Shifting a limit line horizontally

- ▶ Select the "Shift x" button and enter a shift width for the x value in the edit dialog box.

Shifting a limit line vertically

- ▶ Select the "Shift y" button and enter a shift width for the y value in the edit dialog box.

Saving the limit line settings

- ▶ Press the "Save" button in the dialog.
If an existing name is used, a message box is displayed. You have to confirm before the limit line is overwritten.

3.4.3.7 Editing an Existing Limit Line

In the "Select Limit Line" dialog box, select the limit line you want to change. For details see also [chapter 3.4.3.5, "Selecting a Limit Line"](#), on page 93.



Note that any changes to the special limit lines for spurious and SEM measurements are automatically overwritten when the sweep list settings are changed.

1. Press the "Edit" on page 89 softkey.
2. Edit the data as described in [chapter 3.4.3.6, "Creating a New Limit Line"](#), on page 94.
3. Save the limit line ("Save Limit Line" on page 89 softkey).

3.4.3.8 Creating a New Limit Line Based upon an Existing Limit Line

1. In the "Select Limit Line" dialog box, select the limit line you want to use as a basis for a new limit line. For details see also [chapter 3.4.3.5, "Selecting a Limit Line"](#), on page 93.
2. Press the [Copy to](#) softkey to transfer the data of the limit line into the "Edit Limit Line" dialog box.
3. Press the [Edit Name](#) softkey and enter a new name.
4. To shift the complete limit line parallel in the horizontal direction, select the "Shift x" button and enter an x shift value. In this manner, a new limit line can be easily generated based upon an existing limit line which has been shifted horizontally.
5. To shift the complete limit line parallel in the vertical direction, select the "Shift y" button and enter a y shift value. In this manner, a new limit line can be easily generated based upon an existing limit line which has been shifted vertically.
6. If required, edit the data as described in [chapter 3.4.3.5, "Selecting a Limit Line"](#), on page 93.
7. Save the limit line ([Save Limit Line](#) softkey).

3.4.3.9 Activating/Deactivating a Limit Line

Prerequisites:

The x- and y-units of limit line and current measurement setting have to be compatible. For details refer to [chapter 3.4.3.3, "Limit Lines \(Frequency/Time Lines\)"](#), on page 92.

The limit line has to consist of 2 or more data points.

1. In the "Select Limit Line" dialog box, select the limit line you want to activate/deactivate. For details see also [chapter 3.4.3.5, "Selecting a Limit Line"](#), on page 93.
2. To activate or deactivate a limit line for a trace, press the ["Select Traces to check"](#) on page 88 softkey and select or deselect the trace(s) to which this limit line applies.
3. To deactivate the limit line for all traces, press the ["Deselect All"](#) on page 88 softkey.

4 Spectrum Measurements

You can also perform conventional spectrum analysis with the R&S ESRP.

When you start the R&S ESRP for the first time or after a preset, it starts in receiver mode. If it is inactive, press the MODE key and select the "Spectrum" softkey in the corresponding menu to enter the spectrum mode.

This chapter of the manual describes all functionality that is available in spectrum mode.

- [chapter 4.1, "Measurements"](#), on page 99
This section describes how to configure and perform specific measurements that are available in Spectrum mode.
Measurement examples are provided in the Quick Start Guide, chapter 5 "Basic Measurement Examples" and the Operating Manual, chapter "Advanced Measurement Examples".
- [chapter 4.3, "Analysis"](#), on page 260
This section describes the tools that are available to analyze measurement results.
- [chapter 4.2, "Configuration"](#), on page 215
This section describes general measurement parameters. The general measurement parameters apply to all measurements performed in Spectrum mode.

4.1 Measurements

In the Spectrum mode, the R&S ESRP provides a variety of different measurement functions.

The individual functions are described in detail in the following sections.

4.1.1 Power Measurements – MEAS Key

With its power measurement functions, the R&S ESRP is able to measure all the necessary parameters with high accuracy in a wide dynamic range.

A modulated carrier is almost always used (except e.g. SSB-AM) for high-frequency transmission of information. Due to the information modulated upon the carrier, the latter covers a spectrum which is defined by the modulation, the transmission data rate and the signal filtering. Within a transmission band each carrier is assigned a channel taking into account these parameters. In order to ensure error-free transmission, each transmitter must be conforming to the specified parameters. These include among others:

- the output power
- the occupied bandwidth, i.e. the bandwidth which must contain a defined percentage of the power
- the power dissipation allowed in the adjacent channels

The MEAS key is used for complex measurement functions as power measurements, occupied bandwidth, signal statistic, carrier to noise spacing, AM modulation depth, third-order intercept point, harmonics and spurious emissions. For measurement examples refer to the Quick Start Guide, "Basic Measurement Examples".

The following measurements can be performed:

- Channel power and adjacent-channel power with span > 0 and with a single or several carriers ("CH Power ACLR" softkey, for details see [chapter 4.1.1.2, "Measuring Channel Power and Adjacent-Channel Power"](#), on page 103)
- Carrier-to-noise ratio ("C/N C/NO" softkey, for details see [chapter 4.1.1.3, "Measuring the Carrier-to-Noise Ratio"](#), on page 127)
- Occupied bandwidth ("OBW" softkey, for details see [chapter 4.1.1.4, "Measuring the Occupied Bandwidth"](#), on page 130)
- Spectrum Emission Mask measurements ("Spectrum Emission Mask" softkey, for details see [chapter 4.1.1.5, "Measuring with Spectrum Emission Masks"](#), on page 134)
- Spurious Emissions measurements ("Spurious Emissions" softkey, for details see [chapter 4.1.1.6, "Measuring Spurious Emissions"](#), on page 161)
- Power in zero span ("Time Domain Power" softkey, for details see [chapter 4.1.1.7, "Measuring the Power in Zero Span"](#), on page 172).
- EMI Measurement softkey, for details see [chapter 4.1.1.8, "Performing EMI Measurements"](#), on page 175
- Amplitude probability distribution ("APD" and "CCDF" softkeys, for details see [chapter 4.1.1.9, "Calculating Signal Amplitude Statistics"](#), on page 184)
- 3rd order intercept ("TOI" softkey, for details see [chapter 4.1.1.10, "Measuring the Third Order Intercept Point \(TOI\)"](#), on page 203)
- Modulation depth ("AM Mod Depth" softkey, for details see [chapter 4.1.1.11, "Measuring the AM Modulation Depth"](#), on page 209)
- Harmonic Distortion measurements ("Harmonic Distortion" softkey, for details see [chapter 4.1.1.12, "Measuring Harmonic Distortion"](#), on page 210)

To open the power measurement menu

- Press the MEAS key.
The measurement menu for spectrum analysis is displayed (see [chapter 4.1.1.1, "Softkeys of the Power Measurement Menu"](#), on page 100).

4.1.1.1 Softkeys of the Power Measurement Menu

The following table shows all softkeys available in the power measurement menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Ch Power ACLR.....	101
C/N, C/No (span > 0).....	101
OBW (span > 0).....	101

Spectrum Emission Mask.....	101
Spurious Emissions.....	101
Time Domain Power (zero span).....	102
All Functions Off.....	102
APD.....	102
CCDF.....	102
TOI.....	102
AM Mod Depth.....	102
Harmonic Distortion.....	103
All Functions Off.....	103

Ch Power ACLR

Activates the active channel or adjacent-channel power measurement either for a single carrier signal or for several carrier signals, depending on the current measurement configuration, and opens a submenu to configure the channel power measurement.

For details see [chapter 4.1.1.2, "Measuring Channel Power and Adjacent-Channel Power"](#), on page 103.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:SElect` on page 533

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult?` on page 534

`CALCulate<n>:MARKer<m>:FUNCTION:POWER[:STATe]` on page 536

C/N, C/No (span > 0)

Opens a submenu to configure the carrier/noise ratio measurement. Measurements without (C/N) and measurements with reference to the bandwidth (C/No) are possible.

For details see [chapter 4.1.1.3, "Measuring the Carrier-to-Noise Ratio"](#), on page 127.

OBW (span > 0)

Activates measurement of the occupied bandwidth according to the current configuration and opens a submenu to configure the measurement. For details see [chapter 4.1.1.4, "Measuring the Occupied Bandwidth"](#), on page 130.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:SElect` on page 533

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult?` on page 534

`CALCulate<n>:MARKer<m>:FUNCTION:POWER[:STATe]` on page 536

Spectrum Emission Mask

Opens a submenu to configure the Spectrum Emission Mask measurement.

The Spectrum Emission Mask (SEM) measurement defines a measurement that monitors compliance with a spectral mask.

For details see [chapter 4.1.1.5, "Measuring with Spectrum Emission Masks"](#), on page 134.

Remote command:

`SENS:SWE:MODE ESP`, see `[SENSe:]SWEep:MODE` on page 572

Spurious Emissions

Opens a submenu to configure the Spurious Emissions measurement.

The Spurious Emissions measurement defines a measurement that monitors unwanted RF products outside the assigned frequency band generated by an amplifier.

For details see [chapter 4.1.1.6, "Measuring Spurious Emissions"](#), on page 161.

Remote command:

`SENS:SWE:MODE LIST`, see `[SENSe:]SWEep:MODE` on page 572

Time Domain Power (zero span)

Activates the power measurement in zero span and opens a submenu to configure the power measurement. For details see [chapter 4.1.1.7, "Measuring the Power in Zero Span"](#), on page 172.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY[:STATe]` on page 610

All Functions Off

Switches off all power measurement functions.

APD

Activates the function to measure the amplitude probability density (APD) and opens a submenu.

For details see [chapter 4.1.1.9, "Calculating Signal Amplitude Statistics"](#), on page 184.

Remote command:

`CALCulate<n>:STATistics:APD[:STATe]` on page 601

CCDF

Activates the function to measure the complementary cumulative distribution function (CCDF) and opens a submenu.

For details see [chapter 4.1.1.9, "Calculating Signal Amplitude Statistics"](#), on page 184.

Remote command:

`CALCulate<n>:STATistics:CCDF[:STATe]` on page 601

TOI

Opens a submenu and activates the measurement of the 3rd order intercept point.

For details see [chapter 4.1.1.10, "Measuring the Third Order Intercept Point \(TOI\)"](#), on page 203.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:TOI[:STATe]` on page 600

`CALCulate<n>:MARKer<m>:FUNCTION:TOI:RESult?` on page 600

AM Mod Depth

Opens a submenu and activates the measurement of the AM modulation depth. An AM-modulated carrier is required on the screen to ensure correct operation.

For details see [chapter 4.1.1.11, "Measuring the AM Modulation Depth"](#), on page 209.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:MDEPth[:STATe]` on page 595

`CALCulate<n>:MARKer<m>:FUNCTION:MDEPth:RESult?` on page 594

Harmonic Distortion

Opens a submenu to determine the settings for harmonics measurement and activates the harmonic distortion measurement.

For details see [chapter 4.1.1.12, "Measuring Harmonic Distortion"](#), on page 210.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:HARMonics[:STATe]` on page 598

`CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:DISToRTion?` on page 596

`CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:LIST?` on page 597

All Functions Off

Switches off all power measurement functions.

4.1.1.2 Measuring Channel Power and Adjacent-Channel Power

Measuring the power in channels adjacent to the carrier or transmission channel is useful to detect interference. The results are displayed as a bar chart for the individual channels.

- [About Channel Power Measurements](#)..... 103
- [Channel Power Measurement Results](#)..... 107
- [Configuring and Performing Channel Power Measurements](#)..... 109
- [Softkeys for Channel and Adjacent-Channel Power Measurements](#)..... 113
- [Predefined CP/ACLR Standards](#)..... 124
- [Optimized Settings for CP/ACLR Test Parameters](#)..... 125

About Channel Power Measurements

Measuring channel power and adjacent channel power is one of the most important tasks in the field of digital transmission for a signal analyzer with the necessary test routines. While, theoretically, channel power could be measured at highest accuracy with a power meter, its low selectivity means that it is not suitable for measuring adjacent channel power as an absolute value or relative to the transmit channel power. The power in the adjacent channels can only be measured with a selective power meter.

A signal analyzer cannot be classified as a true power meter, because it displays the IF envelope voltage. However, it is calibrated such as to correctly display the power of a pure sine wave signal irrespective of the selected detector. This calibration cannot be applied for non-sinusoidal signals. Assuming that the digitally modulated signal has a Gaussian amplitude distribution, the signal power within the selected resolution bandwidth can be obtained using correction factors. These correction factors are normally used by the signal analyzer's internal power measurement routines in order to determine the signal power from IF envelope measurements. These factors apply if and only if the assumption of a Gaussian amplitude distribution is correct.

Apart from this common method, the R&S ESRP also has a true power detector, i.e. an RMS detector. It correctly displays the power of the test signal within the selected resolution bandwidth irrespective of the amplitude distribution, without additional correction factors being required. The absolute measurement uncertainty of the R&S ESRP is < 1.5 dB and a relative measurement uncertainty of < 0.5 dB (each with a confidence level of 95 %).

Measurement Methods

The channel power is defined as the integration of the power across the channel bandwidth.

The **Adjacent Channel Power Ratio (ACPR)**, also known as the **Adjacent Channel Leakage Power Ratio (ACLR)**, is defined as the ratio between the total power of the adjacent channel to the carrier channel's power. An ACLR measurement with several carrier (transmission) channels (TX channels) is also possible and is referred to as a "multi-carrier ACLR measurement".

There are two possible methods for measuring channel and adjacent channel power with a signal analyzer:

- IBW method (Integration Bandwidth Method)
- Zero-span method (Fast ACLR), i.e. using a channel filter
- [IBW method](#)..... 104
- [Fast ACLR](#)..... 105

IBW method

When measuring the channel power, the R&S ESRP integrates the linear power which corresponds to the levels of the pixels within the selected channel. The signal analyzer uses a resolution bandwidth which is far smaller than the channel bandwidth. When sweeping over the channel, the channel filter is formed by the passband characteristics of the resolution bandwidth (see [figure 4-1](#)).

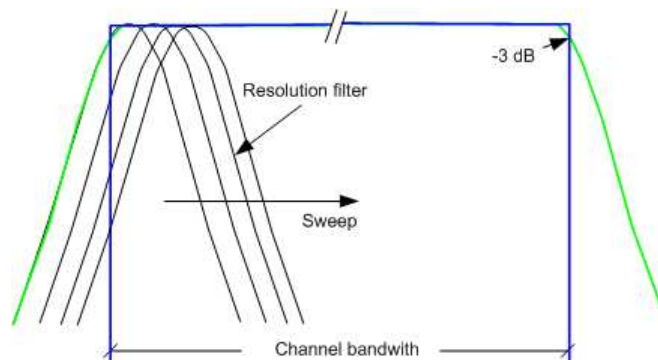


Fig. 4-1: Approximating the channel filter by sweeping with a small resolution bandwidth

The following steps are performed:

1. The linear power of all the trace pixels within the channel is calculated.

$$P_i = 10^{(L_i/10)}$$
 where P_i = power of the trace pixel i
 L_i = displayed level of trace point i
2. The powers of all trace pixels within the channel are summed up and the sum is divided by the number of trace pixels in the channel.
3. The result is multiplied by the quotient of the selected channel bandwidth and the noise bandwidth of the resolution filter (RBW).

Since the power calculation is performed by integrating the trace within the channel bandwidth, this method is called the IBW method (Integration **B**andwidth method).

Fast ACLR

Using Fast ACLR, the R&S ESRP sets the center frequency to the different channel center frequencies consecutively and measures the power with the selected measurement time (= sweep time/number of channels).

The RBW filters suitable for the selected standard and frequency offset are automatically used (e.g. root raised cos with IS 136).

The RMS detector is used for obtaining correct power measurement results. Therefore no software correction factors are required.

Measurement Repeatability

The repeatability of the results, especially in the narrow adjacent channels, strongly depends on the measurement time for a given resolution bandwidth. A longer sweep time may increase the probability that the measured value converges to the true value of the adjacent channel power, but obviously increases measurement time.

The integrated bandwidth method (IBW) calculates channel power and ACLR from the trace data obtained during a continuous sweep over the selected span. Most parts of this sweep are neither part of the channel itself nor the defined adjacent channels. Therefore, most of the samples taken during the sweeptime cannot be used for channel power or ACLR calculation.

To obtain a high repeatability with short measurement times, the R&S ESRP offers a "Fast ACLR" mode. In the Fast ACLR mode, the R&S ESRP measures the power of each channel at the defined channel bandwidth, while being tuned to the center frequency of the channel in question. The digital implementation of the resolution bandwidths makes it possible to select filter characteristics that are precisely tailored to the signal. In case of CDMA2000, the power in the useful channel is measured with a bandwidth of 1.23 MHz and that of the adjacent channels with a bandwidth of 30 kHz. Therefore the R&S ESRP changes from one channel to the other and measures the power at a bandwidth of 1.23 MHz or 30 kHz using the RMS detector. The power of the frequency range between the channels of interest is not measured in Fast ACLR mode, because it is not required for channel power or ACLR calculation. The measurement time per channel is set with the sweep time. It is equal to the selected measurement time divided by the selected number of channels.

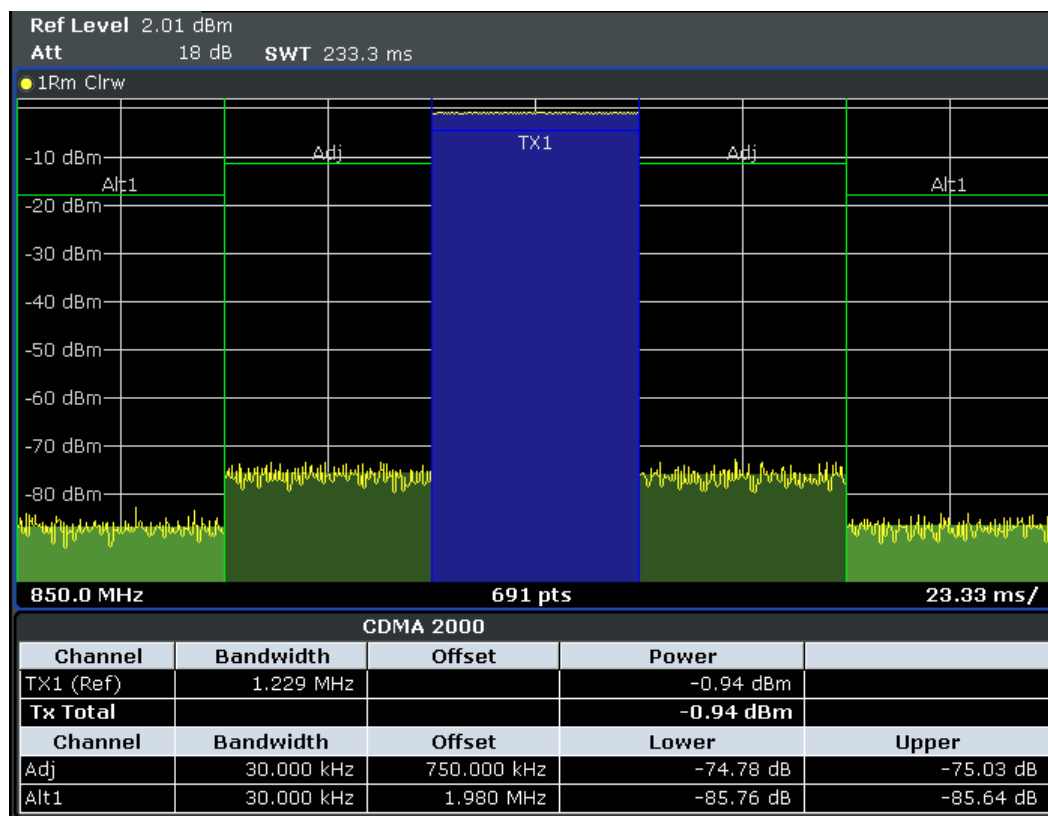


Fig. 4-2: Measuring the channel power and adjacent channel power ratio for CDMA2000 1X signals with zero span (Fast ACP)

Assuming a measurement with five channels (1 channel plus 2 lower and 2 upper adjacent channels) and a sweep time of 100 ms, a measurement time per channel of 20 ms is required. The number of effective samples taken into account for power calculation in one channel is the product of sweeptime in channel times the selected resolution bandwidth.

Assuming a sweeptime of 100 ms, there are $(30 \text{ kHz} / 4.19 \text{ MHz}) * 100 \text{ ms} * 10 \text{ kHz} \approx 7$ samples. Whereas in Fast ACLR mode, there are $(100 \text{ ms} / 5) * 30 \text{ kHz} \approx 600$ samples. Comparing these numbers explains the increase of repeatability with a 95% confidence level (2σ) from $\pm 2.8 \text{ dB}$ to $\pm 0.34 \text{ dB}$ for a sweeptime of 100 ms (as shown in figure 4-3 and).

For the same repeatability, the sweep time would have to be set to 8.5 s with the integration method. The figure 4-4 shows the standard deviation of the results as a function of the sweep time.

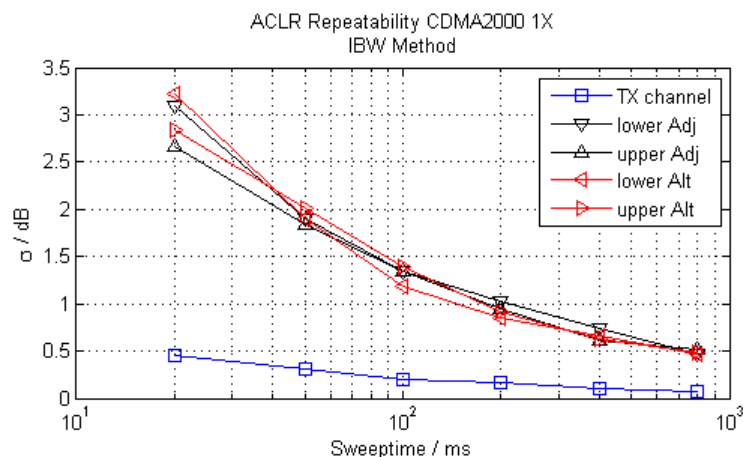


Fig. 4-3: Repeatability of adjacent channel power measurement on CDMA2000 standard signals if the integration bandwidth method is used

The [figure 4-4](#) shows the repeatability of power measurements in the transmit channel and of relative power measurements in the adjacent channels as a function of sweep time. The standard deviation of measurement results is calculated from 100 consecutive measurements. Take scaling into account if comparing power values.


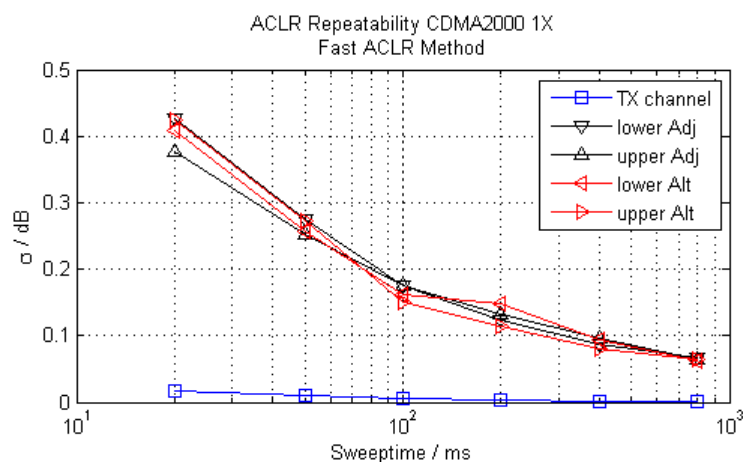


Fig. 4-4: Repeatability of adjacent channel power measurements on CDMA2000 signals in the fast ACP mode

Channel Power Measurement Results

For channel or adjacent-channel power measurements, the individual channels are indicated by different colored bars in the diagram. The height of each bar corresponds to the measured power of that channel. In addition, the name of the channel ("Adj", "Alt1", "TX1", etc. or a user-defined name) is indicated above the bar (separated by a line which has no further meaning).

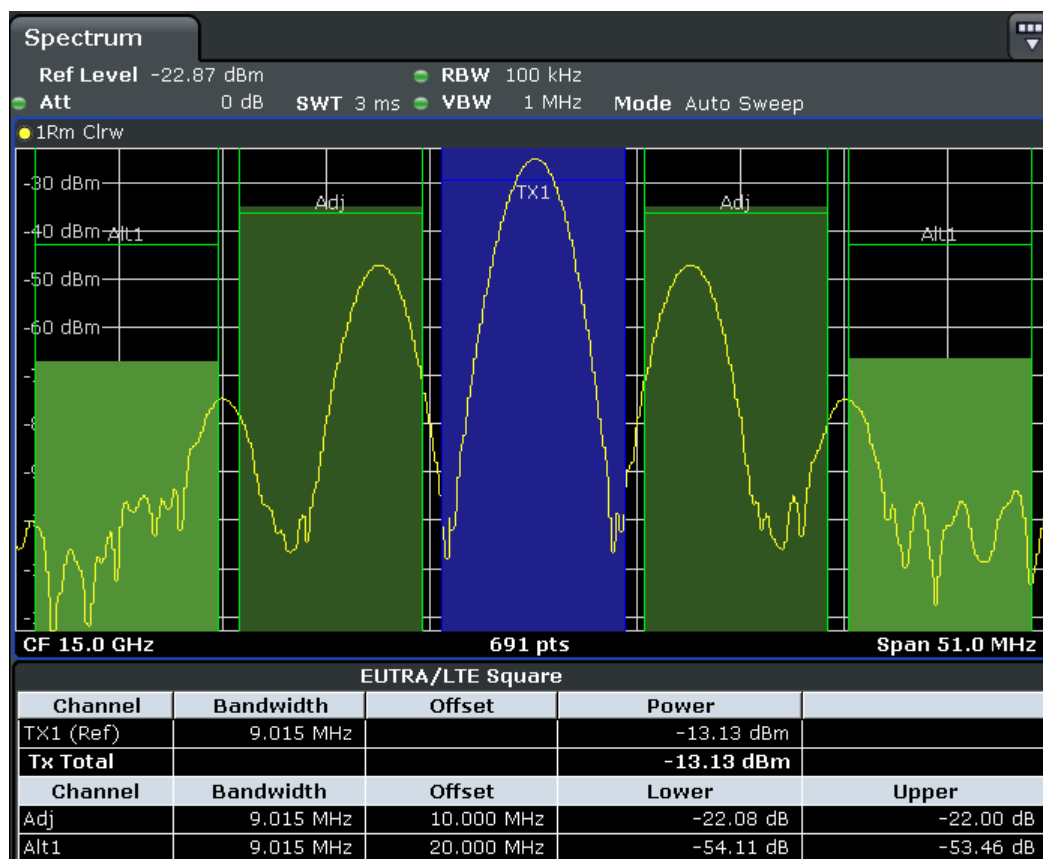

Results are provided for the TX channel and the number of defined adjacent channels *above and below* the TX channel. If more than one TX channel is defined, the carrier channel to which the relative adjacent-channel power values should be referenced must be defined.

The measured power values for the TX and adjacent channels are also output as a table in the second screen. Which powers are measured depends on the number of configured channels, see "[# of Adj Chan](#)" on page 115.

For each channel, the following values are displayed:

Label	Description
Channel	Channel name as specified in the "Channel Settings" (see " Names " on page 118).
Bandwidth	Configured channel bandwidth (see " Bandwidth " on page 116)
Offset	Offset of the channel to the TX channel (Configured channel spacing, see " Spacing " on page 117)
Power (Lower/Upper)	The measured power values for the TX and lower and upper adjacent channels. The powers of the transmission channels are output in dBm or dBm/Hz, or in dBc, relative to the specified reference TX channel.

Retrieving Results via Remote Control

All or specific channel power measurement results can be retrieved using the `CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult?` command from a remote computer.

Alternatively, the results can be output as channel power density, i.e. in reference to the measurement bandwidth (see `CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult:PHZ` on page 558).

In addition, the `TRACe<n>:DATA` command queries the trace data. In case of channel power measurements, the trace data is the power levels that have been measured for each sweep point (max. 691).

Configuring and Performing Channel Power Measurements

Predefined standards contain the main measurement settings for standard measurements. When such a standard is loaded, the required channel settings are automatically set on the R&S ESRP. However, the settings can be changed, and measurements with user-defined configurations are also possible.

Once the channels have been set up, other instrument settings such as the used filter bandwidths, frequency span and detector and trace settings can be optimized automatically (see "Adjust Settings" on page 121).

For an overview of the softkeys and menus see "Softkeys for Channel and Adjacent-Channel Power Measurements" on page 113.

Selecting a Predefined Standard

Predefined standards contain the main measurement settings for standard measurements. When such a standard is loaded, the required channel settings are automatically set on the R&S ESRP.

The selected standard defines the following settings:

- "Bandwidth" on page 116
- "Spacing" on page 117
- Detector, see "Optimized Settings for CP/ACLR Test Parameters" on page 125
- Trace averaging, see "Average Mode" on page 266
- RBW, see "Optimized Settings for CP/ACLR Test Parameters" on page 125
- "Weighting Filter" on page 118

► Select a predefined standard via the `CP/ACLR Standard` softkey.

Setting up the Channels

Channel definition is the basis for measuring power levels in certain frequency ranges. Usually, the power levels in one or more carrier (TX) channels and possibly the adjacent channels are of interest. Up to 18 carrier channels and up to 12 adjacent channels can be defined.



In the R&S ESRP's display, only the first neighboring channel of the carrier (TX) channel is labelled "Adj" (adjacent) channel; all others are labelled "Alt" (alternate) channels. In this manual, "adjacent" refers to both adjacent and alternate channels.

When an ACLR measurement is started by pressing the "Ch Power ACLR" softkey, all settings including the channel bandwidths and channel spacings are set according to the selected standard and can be adjusted afterwards.

Channel setup consists of the following settings:

- The number of transmission (TX) and adjacent channels
- The bandwidth of each channel
- For multi-carrier ACLR measurements: which TX channel is used as a reference ("ACLR Reference")
- The spacing between the individual channels
- Optionally: the names of the channels displayed in the diagram and result table
- Optionally: the influence of individual channels on the total measurement result ("Weighting Filter")
- Optionally: limits for a limit check on the measured power levels



Changes to an existing standard can be stored as a user-defined standard, see "[User-Defined Configurations](#)" on page 112.

- ▶ In the "Ch Power" menu, press [Channel Setup](#), then press the [Channel Setup](#) softkey to configure the channels in the "Channel Setup" dialog box.



In the "Channel Setup" dialog box you define the channel settings for all channels, independent of the defined number of *used* TX or adjacent channels.

- [Defining Channel Bandwidths](#)..... 110
- [Defining Channel Spacings](#)..... 111
- [Configuring a Limit Check](#)..... 112

Defining Channel Bandwidths

The transmission-channel bandwidth is normally defined by the transmission standard. The correct bandwidth is set automatically for the selected standard (see "[Optimized Settings for CP/ACLR Test Parameters](#)" on page 125).

For measurements that require channel bandwidths which deviate from those defined in the selected standard, use the IBW method (see [Fast ACLR \(On/Off\)](#) softkey). With the IBW method, the channel bandwidth borders are right and left of the channel center frequency. Thus, you can visually check whether the entire power of the signal under test is within the selected channel bandwidth.

- ▶ In the "Channel Setup" dialog box, select the "Bandwidth" tab to define the channel bandwidths.

The value entered for any TX channel is automatically also defined for all subsequent TX channels. Thus, only one value needs to be entered if all TX channels have the same bandwidth.

The value entered for any ADJ or ALT channel is automatically also defined for all alternate (ALT) channels. Thus, only one value needs to be entered if all adjacent channels have the same bandwidth.

Defining Channel Spacings

Channel spacings are normally defined by the selected standard but can be changed.

If the spacings are not equal, the channel distribution according to the center frequency is as follows:

Odd number of TX channels	The middle TX channel is centered to center frequency.
Even number of TX channels	The two TX channels in the middle are used to calculate the frequency between those two channels. This frequency is aligned to the center frequency.

- In the "Channel Setup" dialog box, select the "Spacing" tab to define the channel spacings.
The value entered for any TX channel is automatically also defined for all subsequent TX channels. Thus, only one value needs to be entered if all TX channels have the same spacing.
If the channel spacing for the adjacent or an alternate channel is changed, all higher alternate channel spacings are multiplied by the same factor (new spacing value/old spacing value). The lower adjacent-channel spacings remain unchanged.
Only one value needs to be entered for equal channel spacing.

Example: Defining channel spacing

In the default setting, the adjacent channels have the following spacing: 20 kHz ("ADJ"), 40 kHz ("ALT1"), 60 kHz ("ALT2"), 80 kHz ("ALT3"), 100 kHz ("ALT4"), ...

If the spacing of the first adjacent channel ("ADJ") is set to 40 kHz, the spacing of all other adjacent channels is multiplied by factor 2 to result in 80 kHz ("ALT1"), 120 kHz ("ALT2"), 160 kHz ("ALT3"), ...

If, starting from the default setting, the spacing of the 5th adjacent channel ("ALT4") is set to 150 kHz, the spacing of all higher adjacent channels is multiplied by factor 1.5 to result in 180 kHz ("ALT5"), 210 kHz ("ALT6"), 240 kHz ("ALT7"), ...



For the R&S ESRP, the channel spacing is defined as the distance between the center frequency of the adjacent channel and the center frequency of the transmission channel. The definition of the adjacent-channel spacing in standards IS95C and CDMA 2000 is different. These standards define the adjacent-channel spacing from the center of the transmission channel to the closest border of the adjacent channel. This definition is also used for the R&S ESRP if the standards marked with an asterisk *) are selected.

Configuring a Limit Check

During an ACLR measurement, the power values can be checked whether they exceed user-defined limits. A relative or absolute limit can be defined, or both. Both limit types are considered, regardless whether the measured levels are absolute or relative values. The check of both limit values can be activated independently. If any active limit value is exceeded, the measured value is displayed in red and marked by a preceding asterisk in the result table.

W-CDMA 3GPP FWD				
Channel	Bandwidth	Offset	Power	
TX1 (Ref)	3.840 MHz		-124.39 dBm	
Tx Total			-124.39 dBm	
Channel	Bandwidth	Offset	Lower	Upper
Adj*	3.840 MHz	5.000 MHz	81.17 dB*	81.17 dB*
Alt1*	3.840 MHz	10.000 MHz	0.00 dB*	0.00 dB*

To configure a limit check

1. In the "Channel Setup" dialog box, select the "Limits" tab to define a limit check.
2. For each channel, define a relative or absolute value that should not be exceeded.
3. Select the channels to be included in the limit check by activating the "Check" option.
4. Activate limit checking for the selected channels by setting "Limit Checking" to *On*.

Performing a Channel Power Measurement

A channel power measurement is started automatically according to the currently selected standard when you press the "Ch Power ACLR" softkey in the MEAS menu.

- To start a new measurement after changing the settings, press the RUN SINGLE or RUN CONT hardkeys.
Alternatively, you can save your settings as a user standard (see ["User-Defined Configurations"](#) on page 112), then select that standard and start the measurement as usual by pressing the "Ch Power ACLR" softkey.

The configured measurement is performed (depending on the number of defined channels, see ["# of Adj Chan"](#) on page 115) and the results are displayed in the graphic and the result table.

User-Defined Configurations

You can define measurement configurations independently of a predefined standard and save the current ACLR configuration as a "user standard" in an xml file. You can then load the file and thus the settings again at a later time.

User-defined standards are not supported for "Fast ACLR" and Multi-Carrier ACLR measurements.



Compatibility to R&S FSP

User standards created on an analyzer of the R&S FSP family are compatible to the R&S ESRP. User standards created on an R&S ESRP, however, are not necessarily compatible to the analyzers of the R&S FSP family and may not work there.

To store a user-defined configuration

1. Select the "User Standard" softkey in the "Ch Power" menu.
2. Press "Save".
3. Define a file name for the user standard and select its storage location.
By default, the xml file is stored in C:\R_S\Instr\acp_std\. However, you can define any other storage location.
4. Press "Save".

The following parameter definitions are saved:

- ["# of Adj Chan"](#) on page 115
- Channel spacing and adjacent-channel spacing, see ["Spacing"](#) on page 117
- Channel bandwidth of transmission (Tx), adjacent (Adj) and alternate (Alt) channels, see ["Bandwidth"](#) on page 116
- Resolution bandwidth, see ["Res BW Auto"](#) on page 234
- Video bandwidth, see ["Video BW Auto"](#) on page 235
- Detector, see ["Detector"](#) on page 264
- ACLR limits and their state, see ["Limits"](#) on page 119
- Sweep time and sweep time coupling, see ["Sweep Time"](#) on page 121
- Trace and power mode, see ["Select Trace"](#) on page 121 and ["Power Mode"](#) on page 120

To load a user-defined configuration

- Press "User Standard > Load" and select the user standard file.

Softkeys for Channel and Adjacent-Channel Power Measurements

Ch Power ACLR	114
L CP/ACLR Standard	114
L CP/ACLR Settings	115
L # of TX Chan	115
L # of Adj Chan	115
L Channel Setup	115
L Bandwidth	116
L ACLR Reference	117
L Spacing	117
L Names	118
L Weighting Filter	118
L Limits	119
L Limit Checking	119
L Relative Limit	120
L Absolute Limit	120

L Check.....	120
L Chan Pwr/Hz.....	120
L Power Mode.....	120
L Clear/Write.....	121
L Max Hold.....	121
L Select Trace.....	121
L ACLR (Abs/Rel).....	121
L Adjust Settings.....	121
L Sweep Time.....	121
L Fast ACLR (On/Off).....	122
L Set CP Reference.....	122
L User Standard.....	123
L Load.....	123
L Save.....	123
L Delete.....	123
L Noise Correction.....	123
L Adjust Ref Lvl.....	124

Ch Power ACLR

Activates the active channel or adjacent-channel power measurement either for a single carrier signal or for several carrier signals, depending on the current measurement configuration, and opens a submenu to configure the channel power measurement. With default settings the measurement is performed by integrating the powers at the display points within the specified channels (IBW method).

If several TX channels (carriers) are activated, the number of measured values is increased to ensure that adjacent-channel powers are measured with adequate accuracy.

For general information on performing channel or adjacent-channel power measurements, see [chapter 4.1.1.2, "Measuring Channel Power and Adjacent-Channel Power"](#), on page 103.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:SElect` on page 533

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult?` on page 534

`CALCulate<n>:MARKer<m>:FUNCTION:POWER[:STATe]` on page 536

CP/ACLR Standard ← Ch Power ACLR

Opens an edit dialog box to select the settings according to predefined standards. For details on the available standards see ["Predefined CP/ACLR Standards"](#) on page 124. By default no standard is set.

The selection of the standard influences the following parameters (see ["Optimized Settings for CP/ACLR Test Parameters"](#) on page 125):

- channel spacing and adjacent-channel spacing
- channel bandwidth, adjacent-channel bandwidth, and type of filtering
- resolution bandwidth
- video bandwidth
- detector
- # of adjacent channels

- trace averaging (switched off)

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:PRESet` on page 540

CP/ACLR Settings ← Ch Power ACLR

Opens a submenu to configure the channel power and adjacent channel power measurement independently of the predefined standards (for details see also "[Predefined CP/ACLR Standards](#)" on page 124 and "[Optimized Settings for CP/ACLR Test Parameters](#)" on page 125).

of TX Chan ← CP/ACLR Settings ← Ch Power ACLR

Opens an edit dialog box to enter the number of carrier signals to be taken into account in channel and adjacent-channel power measurements. Values from 1 to 18 are allowed.

Remote command:

`[SENSe:] POWER:ACHannel:TXChannel:COUNT` on page 545

of Adj Chan ← CP/ACLR Settings ← Ch Power ACLR

Opens an edit dialog box to enter the number of adjacent channels to be considered in the adjacent-channel power measurement. Values from 0 to 12 are allowed.

The following measurements are performed depending on the number of the channels:

0	Only the channel powers are measured.
1	The channel powers and the power of the upper and lower adjacent channel are measured.
2	The channel powers, the power of the upper and lower adjacent channel, and of the next higher and lower channel (alternate channel 1) are measured.
3	The channel power, the power of the upper and lower adjacent channel, the power of the next higher and lower channel (alternate channel 1), and of the next but one higher and lower adjacent channel (alternate channel 2) are measured.
...	...
12	The channel power, the power of the upper and lower adjacent channel, and the power of the all higher and lower channels (alternate channel 1 to 11) are measured.

Remote command:

`[SENSe:] POWER:ACHannel:ACPairs` on page 542

Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Opens a dialog to define the channel settings for all channels, independent of the defined number of *used* TX or adjacent channels.

Channel	Bandwidth	Channel	Bandwidth
TX 1	14.0 kHz	ADJ	14.0 kHz
TX 2	14.0 kHz	ALT1	14.0 kHz
TX 3	14.0 kHz	ALT2	14.0 kHz
TX 4	14.0 kHz	ALT3	14.0 kHz
TX 5	14.0 kHz	ALT4	14.0 kHz
TX 6	14.0 kHz	ALT5	14.0 kHz
TX 7	14.0 kHz	ALT6	14.0 kHz
TX 8	14.0 kHz	ALT7	14.0 kHz
TX 9	14.0 kHz	ALT8	14.0 kHz
TX 10	14.0 kHz	ALT9	14.0 kHz
TX 11	14.0 kHz	ALT10	14.0 kHz
TX 12	14.0 kHz	ALT11	14.0 kHz

ACLR Reference: TX CHANNEL 1

The dialog contains the following tabs:

- ["Bandwidth"](#) on page 116
- ["Spacing"](#) on page 117
- ["Names"](#) on page 118
- ["Weighting Filter"](#) on page 118
- ["Limits"](#) on page 119

Bandwidth ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Define the channel bandwidths for the transmission channels and the adjacent channels. "TX" is only available for the multi-carrier ACLR measurement. When you change the bandwidth for one channel, the value is automatically also defined for all subsequent channels of the same type.

The transmission-channel bandwidth is normally defined by the transmission standard. The correct bandwidth is set automatically for the selected standard (see ["Optimized Settings for CP/ACLR Test Parameters"](#) on page 125).

- Measurements in zero span (see [Fast ACLR \(On/Off\)](#) softkey) are performed in the zero span mode. The channel limits are indicated by vertical lines. For measurements requiring channel bandwidths deviating from those defined in the selected standard the IBW method is to be used.
- With the IBW method (see [Fast ACLR \(On/Off\)](#) softkey), the channel bandwidth limits are marked by two vertical lines right and left of the channel center frequency. Thus you can visually check whether the entire power of the signal under test is within the selected channel bandwidth.

If measuring according to the IBW method ("Fast ACLR Off"), the bandwidths of the different adjacent channels are to be entered numerically. Since all adjacent channels often have the same bandwidth, the other alternate channels are set to the bandwidth of the adjacent channel when it is changed. Thus, only one value needs to be entered in case of equal adjacent channel bandwidths.

For details on available channel filters see [chapter 4.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 239.

Remote command:

[SENSe:] POWER:ACHannel:BANDwidth|BWIDth[:CHANnel<channel>]

on page 543

[SENSe:] POWER:ACHannel:BANDwidth|BWIDth:ACHannel on page 542

[SENSe:] POWER:ACHannel:BANDwidth|BWIDth:ALTErnate<channel>

on page 543

ACLR Reference ← Bandwidth ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Select the transmission channel to which the relative adjacent-channel power values should be referenced.

TX Channel 1	Transmission channel 1 is used.
Min Power TX Channel	The transmission channel with the lowest power is used as a reference channel.
Max Power TX Channel	The transmission channel with the highest power is used as a reference channel.
Lowest & Highest Channel	The outer left-hand transmission channel is the reference channel for the lower adjacent channels, the outer right-hand transmission channel that for the upper adjacent channels.

Remote command:

[SENSe:] POWER:ACHannel:REFeRence:TXCHannel:MANual on page 549

[SENSe:] POWER:ACHannel:REFeRence:TXCHannel:AUTO on page 548

Spacing ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Define the channel spacings for the TX channels and for the adjacent channels.

- TX channels (left column)

TX1-2	spacing between the first and the second carrier
TX2-3	spacing between the second and the third carrier
...	...

The spacings between all adjacent TX channels can be defined separately. When you change the spacing for one channel, the value is automatically also defined for all subsequent TX channels in order to set up a system with equal TX channel spacing quickly. For different spacings, a setup from top to bottom is necessary.

If the spacings are not equal, the channel distribution according to the center frequency is as follows:

Odd number of TX channels	The middle TX channel is centered to center frequency.
Even number of TX channels	The two TX channels in the middle are used to calculate the frequency between those two channels. This frequency is aligned to the center frequency.

- Adjacent channels (right column)

Since all the adjacent channels often have the same distance to each other, the modification of the adjacent-channel spacing (ADJ) causes a change in all higher adjacent-channel spacings (ALT1, ALT2, ...): they are all multiplied by the same factor (new spacing value/old spacing value). Thus only one value needs to be entered in case of equal channel spacing. A modification of a higher adjacent-channel spacing (ALT1, ALT2, ...) causes a change by the same factor in all higher adjacent-channel spacings, while the lower adjacent-channel spacings remain unchanged.

Example:

In the default setting, the adjacent channels have the following spacing: 20 kHz ("ADJ"), 40 kHz ("ALT1"), 60 kHz ("ALT2"), 80 kHz ("ALT3"), 100 kHz ("ALT4"), ...
If the spacing of the first adjacent channel ("ADJ") is set to 40 kHz, the spacing of all other adjacent channels is multiplied by factor 2 to result in 80 kHz ("ALT1"), 120 kHz ("ALT2"), 160 kHz ("ALT3"), ...

If, starting from the default setting, the spacing of the 5th adjacent channel ("ALT4") is set to 150 kHz, the spacing of all higher adjacent channels is multiplied by factor 1.5 to result in 180 kHz ("ALT5"), 210 kHz ("ALT6"), 240 kHz ("ALT7"), ...

If a ACLR or MC-ACLR measurement is started, all settings according to the standard including the channel bandwidths and channel spacings are set and can be adjusted afterwards.

Remote command:

[SENSe:] POWER:ACHannel:SPACing:CHANnel<channel> on page 545

[SENSe:] POWER:ACHannel:SPACing[:ACHannel] on page 544

[SENSe:] POWER:ACHannel:SPACing:ALternate<channel> on page 545

Names ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Define user-specific channel names for each channel. The names defined here are displayed in the result diagram and result table.

Remote command:

[SENSe:] POWER:ACHannel:NAME:ACHannel on page 543

[SENSe:] POWER:ACHannel:NAME:ALternate<channel> on page 544

[SENSe:] POWER:ACHannel:NAME:CHANnel<channel> on page 544

Weighting Filter ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Define weighting filters for all channels. Weighting filters are not available for all supported standards and cannot always be defined manually where they are available.

The dialog contains the following fields:

Field	Description
Channel	- TX 1-18: TX channels - ADJ: Adjacent channel - ALT1-11: Alternate channels
Active	Activates/Deactivates the weighting filter for the selected and any subsequent channels of the same type
Alpha	Defines the alpha value for the weighting filter for the selected and any subsequent channels of the same type

Remote command:

POW:ACH:FILT:CHAN1 ON, see [SENSe:]POWer:ACHannel:FILTer[:STATe]:CHANnel<channel> on page 547

Activates the weighting filter for TX channel 1.

POW:ACH:FILT:ALPH:CHAN1 0,35 see [SENSe:]POWer:ACHannel:FILTer:ALPHa:CHANnel<channel> on page 547

Sets the alpha value for the weighting filter for TX channel 1 to 0,35.

POW:ACH:FILT:ACH ON see [SENSe:]POWer:ACHannel:FILTer[:STATe]:ACHannel on page 547

Activates the weighting filter for the adjacent channel.

POW:ACH:FILT:ALPH:ACH 0,35 see [SENSe:]POWer:ACHannel:FILTer:ALPHa:ACHannel on page 546

Sets the alpha value for the weighting filter for the adjacent channel to 0,35.

POW:ACH:FILT:ALT1 ON see [SENSe:]POWer:ACHannel:FILTer[:STATe]:ALTErnate<channel> on page 547

Activates the alpha value for the weighting filter for the alternate channel 1.

POW:ACH:FILT:ALPH:ALT1 0,35 see [SENSe:]POWer:ACHannel:FILTer:ALPHa:ALTErnate<channel> on page 546

Sets the alpha value for the weighting filter for the alternate channel 1 to 0,35.

Limits ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Activate and define the limits for the ACLR measurement.

Limit Checking ← Limits ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Activate or deactivate limit checking for the ACLR measurement.

The following rules apply for the limits:

- A separate limit can be defined for each adjacent channel. The limit applies to both the upper and the lower adjacent channel.
- A relative and/or absolute limit can be defined. The check of both limit values can be activated independently.
- The R&S ESRP checks adherence to the limits irrespective of whether the limits are absolute or relative or whether the measurement is carried out with absolute or

relative levels. If both limits are active and if the higher of both limit values is exceeded, the measured value is marked by a preceding asterisk.

Remote command:

[CALCulate<n>:LIMit<k>:ACPower\[:STATe\]](#) on page 557

[CALCulate<n>:LIMit<k>:ACPower:ACHannel:RESult](#) on page 552

[CALCulate<n>:LIMit<k>:ACPower:ALternate<channel>\[:RELative\]](#)
on page 555

Relative Limit ← Limits ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Defines a limit relative to the carrier signal.

Remote command:

[CALC:LIM:ACP ON](#), see [CALCulate<n>:LIMit<k>:ACPower\[:STATe\]](#)
on page 557

[CALC:LIM:ACP:<adjacent-channel> 0dBc, 0dBc](#)

[CALC:LIM:ACP:<adjacent-channel>:STAT ON](#)

Absolute Limit ← Limits ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Defines an absolute limit.

Remote command:

[CALC:LIM:ACP ON](#), see [CALCulate<n>:LIMit<k>:ACPower\[:STATe\]](#)
on page 557

[CALC:LIM:ACP:<adjacent-channel>:ABS -10dBm, -10dBm](#)

[CALC:LIM:ACP:<adjacent-channel>:ABS:STAT ON](#), see [CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute:STATe](#) on page 550

Check ← Limits ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Activate or deactivate the limit to be considered during a limit check. The check of both limit values can be activated independently.

Chan Pwr/Hz ← CP/ACLR Settings ← Ch Power ACLR

If deactivated, the channel power is displayed in dBm. If activated, the channel power density is displayed instead. Thus, the absolute unit of the channel power is switched from dBm to dBm/Hz. The channel power density in dBm/Hz corresponds to the power inside a bandwidth of 1 Hz and is calculated as follows:

"channel power density = channel power – log₁₀(channel bandwidth)"

By means of this function it is possible e.g. to measure the signal/noise power density or use the additional functions "[ACLR \(Abs/Rel\)](#)" on page 121 and "[ACLR Reference](#)" on page 117 to obtain the signal to noise ratio.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult:PHZ](#) on page 558

Power Mode ← CP/ACLR Settings ← Ch Power ACLR

Opens a submenu to select the power mode.

Clear/Write ← Power Mode ← CP/ACLR Settings ← Ch Power ACLR

If this mode is activated, the channel power and the adjacent channel powers are calculated directly from the current trace (default mode).

Remote command:

CALC:MARK:FUNC:POW:MODE WRIT, see [CALCulate<n>:MARKer<m>:FUNCTION:POWer:MODE](#) on page 537

Max Hold ← Power Mode ← CP/ACLR Settings ← Ch Power ACLR

If this mode is activated, the power values are calculated from the current trace and compared with the previous power value using a maximum algorithm. The higher value is retained. If activated, the enhancement label "Pwr Max" is displayed.

Remote command:

CALC:MARK:FUNC:POW:MODE MAXH, see [CALCulate<n>:MARKer<m>:FUNCTION:POWer:MODE](#) on page 537

Select Trace ← CP/ACLR Settings ← Ch Power ACLR

Opens an edit dialog box to enter the trace number on which the CP/ACLR measurement is to be performed. Only activated traces can be selected.

For details on trace modes see [chapter 3.2.4, "Trace Modes"](#), on page 50.

Remote command:

[SENSe:]POWer:TRACe on page 537

ACLR (Abs/Rel) ← CP/ACLR Settings ← Ch Power ACLR

Switches between absolute and relative power measurement in the adjacent channels.

Abs	The absolute power in the adjacent channels is displayed in the unit of the y-axis, e.g. in dBm, dBμV.
Rel	The level of the adjacent channels is displayed relative to the level of the transmission channel in dBc.

Remote command:

[SENSe:]POWer:ACHannel:MODE on page 558

Adjust Settings ← CP/ACLR Settings ← Ch Power ACLR

Automatically optimizes all instrument settings for the selected channel configuration (channel bandwidth, channel spacing) within a specific frequency range (channel bandwidth). The adjustment is carried out only once. If necessary, the instrument settings can be changed later.

For details on the settings of span, resolution bandwidth, video bandwidth, detector and trace averaging see ["Optimized Settings for CP/ACLR Test Parameters"](#) on page 125.

Remote command:

[SENSe:]POWer:ACHannel:PRESet on page 538

Sweep Time ← Ch Power ACLR

Opens an edit dialog box to enter the sweep time. With the RMS detector, a longer sweep time increases the stability of the measurement results.

The function of this softkey is identical to the [Sweptime Manual](#) softkey in the "Bandwidth" menu.

Remote command:

[SENSe:] SWEep:TIME on page 641

Fast ACLR (On/Off) ← Ch Power ACLR

Switches between the IBW method ("Fast ACLR Off") and the zero span method ("Fast ACLR On").

When switched on, the R&S ESRP sets the center frequency consecutively to the different channel center frequencies and measures the power with the selected measurement time (= sweep time/number of channels). The RBW filters suitable for the selected standard and frequency offset are automatically used (e.g. root raised cos with IS 136). For details on available channel filters see [chapter 4.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 239.

The RMS detector is used for obtaining correct power measurement results. Therefore this requires no software correction factors.

Measured values are output as a list. The powers of the transmission channels are output in dBm, the powers of the adjacent channels in dBm.

The sweep time is selected depending on the desired reproducibility of results. Reproducibility increases with sweep time since power measurement is then performed over a longer time period. As a general approach, it can be assumed that approx. 500 non-correlated measured values are required for a reproducibility of 0.5 dB (99 % of the measurements are within 0.5 dB of the true measured value). This holds true for white noise. The measured values are considered as non-correlated if their time interval corresponds to the reciprocal of the measured bandwidth.

With IS 136 the measurement bandwidth is approx. 25 kHz, i.e. measured values at an interval of 40 µs are considered as non-correlated. A measurement time of 40 ms is thus required per channel for 1000 measured values. This is the default sweep time which the R&S ESRP sets in coupled mode. Approx. 5000 measured values are required for a reproducibility of 0.1 dB (99 %), i.e. the measurement time is to be increased to 200 ms.

Remote command:

[SENSe:] PWeR:HSpeEd on page 559

Set CP Reference ← Ch Power ACLR

Defines the currently measured channel power as the reference value if channel power measurement is activated. The reference value is displayed in the "Tx1 (Ref) Power" field; the default value is 0 dBm.

The softkey is available only for multi carrier ACLR measurements.

In adjacent-channel power measurement with one or several carrier signals, the power is always referenced to a transmission channel, i.e. no value is displayed for "Tx1 (Ref) Power".

Remote command:

[SENSe:] PWeR:ACHannel:REference:AUTO ONCE on page 548

User Standard ← Ch Power ACLR

Opens a submenu to configure customized standards.

Load ← User Standard ← Ch Power ACLR

Opens a dialog to select and load a user defined ACLR standard.

Remote command:

Querying available standards:

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:STANDARD:CATALOG?`

on page 541

Loading a standard:

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:PRESet` on page 540

Save ← User Standard ← Ch Power ACLR

Saves the current ACLR configuration in an xml file in order for you to use it again at a later time. You can define the drive, path and file name in the corresponding dialog.

The default location is `C:\R_S\Instr\acp_std\`.

Note that the ACLR user standard is not supported by Fast ACLR and Multi Carrier ACLR measurements.

If you create your own standard, you can customize the following parameters:

- number of adjacent channels
- channel bandwidth of transmission (Tx), adjacent (Adj) and alternate (Alt) channels
- channel spacings
- resolution and video bandwidth
- ACLR limits and their state
- sweep time and sweep time coupling
- detector
- trace mode

Remote command:

Configuring channels:

see ["Configuring ACLR Channels"](#) on page 542 and ["Defining Weighting Filters"](#) on page 546

Saving custom channel configurations:

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:STANDARD:SAVE` on page 541

Delete ← User Standard ← Ch Power ACLR

Deletes the user standard that you select in the corresponding dialog box. Note that the R&S ESRP deletes the file without further notice.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:STANDARD:DELETE` on page 541

Noise Correction ← Ch Power ACLR

If activated, the results are corrected by the instrument's inherent noise, which increases the dynamic range.

"ON"	A reference measurement of the instrument's inherent noise is carried out. The noise power measured is then subtracted from the power in the channel that is being examined. The inherent noise of the instrument depends on the selected center frequency, resolution bandwidth and level setting. Therefore, the correction function is disabled whenever one of these parameters is changed. A disable message is displayed on the screen. Noise correction must be switched on again manually after the change.
"OFF"	No noise correction is performed.
"AUTO"	Noise correction is performed. After a parameter change, noise correction is restarted automatically and a new correction measurement is performed.

Remote command:

[SENSe:]POWer:NCORrection on page 559

Adjust Ref Lvl ← Ch Power ACLR

Adjusts the reference level to the measured channel power. This ensures that the settings of the RF attenuation and the reference level are optimally adjusted to the signal level without overloading the R&S ESRP or limiting the dynamic range by a too small S/N ratio.

For details on manual settings see "Optimized Settings for CP/ACLR Test Parameters" on page 125.

The reference level is not influenced by the selection of a standard. To achieve an optimum dynamic range, the reference level has to be set in a way that places the signal maximum close to the reference level without forcing an overload message. Since the measurement bandwidth for channel power measurements is significantly lower than the signal bandwidth, the signal path may be overloaded although the trace is still significantly below the reference level.

Remote command:

[SENSe:]POWer:ACHannel:PRESet:RLEVel on page 538

Predefined CP/ACLR Standards

When using predefined standards for ACLR measurement, the test parameters for the channel and adjacent-channel measurements are configured automatically. The available standards are listed below.



Predefined standards are selected using the "CP/ACLR Standard" softkey or the CALC:MARK:FUNC:POW:PRES command.

Standard	GUI-Parameter	SCPI-Parameter
EUTRA/LTE Square	EUTRA/LTE Square	EUTRa
EUTRA/LTE Square/RRC	EUTRA/LTE Square/RRC	REUTRa
W-CDMA 3.84 MHz forward	W-CDMA 3GPP FWD	FW3G
W-CDMA 3.84 MHz reverse	W-CDMA 3GPP REV	RW3G

Standard	GUI-Parameter	SCPI-Parameter
CDMA IS95A forward	CDMA IS95A FWD	F8CD FIS95a
CDMA IS95A reverse	CDMA IS95A REV	R8CD RIS95a
CDMA IS95C Class 0 forward*)	CDMA IS95C Class 0 FWD	FIS95c0
CDMA IS95C Class 0 reverse*)	CDMA IS95C Class 0 REV	RIS95c0
CDMA J-STD008 forward	CDMA J-STD008 FWD	F19C FJ008
CDMA J-STD008 reverse	CDMA J-STD008 REV	R19C RJ008
CDMA IS95C Class 1 forward*)	CDMA IS95C Class 1 FWD	FIS95c1
CDMA IS95C Class 1 reverse*)	CDMA IS95C Class 1 REV	RIS95c1
CDMA 2000	CDMA 2000	S2CD
TD-SCDMA forward	TD SCDMA FWD	FTCD TCDMa
TD-SCDMA reverse	TD SCDMA REV	RTCD
WLAN 802.11A	WLAN 802.11A	AWLan
WLAN 802.11B	WLAN 802.11B	BWLan
WiMAX	WiMAX	WiMAX
WIBRO	WIBRO	WIBRO
GSM	GSM	GSM
RFID 14443	RFID 14443	RFID14443
TETRA	TETRA	TETRA
PDC	PDC	PDC
PHS	PHS	PHS
CDPD	CDPD	CDPD
APCO-25 Phase 2	APCO-25 P2	PAPCo25



For the R&S ESRP, the channel spacing is defined as the distance between the center frequency of the adjacent channel and the center frequency of the transmission channel. The definition of the adjacent-channel spacing in standards IS95C and CDMA 2000 is different. These standards define the adjacent-channel spacing from the center of the transmission channel to the closest border of the adjacent channel. This definition is also used for the R&S ESRP if the standards marked with an asterisk *) are selected.

Optimized Settings for CP/ACLR Test Parameters

The "Adjust Settings" softkey (see ["Adjust Settings"](#) on page 121) automatically optimizes all instrument settings for the selected channel configuration, as described in the following:

- **Frequency span**

The frequency span must at least cover the channels to be measured plus a measurement margin of approx. 10 %.

If the frequency span is large in comparison to the channel bandwidth (or the adjacent-channel bandwidths) being examined, only a few points on the trace are available per channel. This reduces the accuracy of the waveform calculation for the channel filter used, which has a negative effect on the measurement accuracy. It is therefore strongly recommended that the formulas mentioned be taken into consideration when selecting the frequency span.

For channel power measurements the [Adjust Settings](#) softkey sets the frequency span as follows:

"(No. of transmission channels – 1) x transmission channel spacing + 2 x transmission channel bandwidth + measurement margin"

For adjacent-channel power measurements, the [Adjust Settings](#) softkey sets the frequency span as a function of the number of transmission channels, the transmission channel spacing, the adjacent-channel spacing, and the bandwidth of one of adjacent-channels ADJ, ALT1 or ALT2, whichever is furthest away from the transmission channels:

"(No. of transmission channels – 1) x transmission channel spacing + 2 x (adjacent-channel spacing + adjacent-channel bandwidth) + measurement margin"

The measurement margin is approx. 10 % of the value obtained by adding the channel spacing and the channel bandwidth.

- **Resolution bandwidth (RBW)**

To ensure both, acceptable measurement speed and required selection (to suppress spectral components outside the channel to be measured, especially of the adjacent channels), the resolution bandwidth must not be selected too small or too large. As a general approach, the resolution bandwidth is to be set to values between 1% and 4% of the channel bandwidth.

A larger resolution bandwidth can be selected if the spectrum within the channel to be measured and around it has a flat characteristic. In the standard setting, e.g. for standard IS95A REV at an adjacent channel bandwidth of 30 kHz, a resolution bandwidth of 30 kHz is used. This yields correct results since the spectrum in the neighborhood of the adjacent channels normally has a constant level.

With the exception of the IS95 CDMA standards, the [Adjust Settings](#) softkey sets the resolution bandwidth (RBW) as a function of the channel bandwidth:

" $RBW \leq 1/40$ of channel bandwidth"

The maximum possible resolution bandwidth (with respect to the requirement $RBW \leq 1/40$) resulting from the available RBW steps (1, 3) is selected.

- **Video bandwidth (VBW)**

For a correct power measurement, the video signal must not be limited in bandwidth. A restricted bandwidth of the logarithmic video signal would cause signal averaging and thus result in a too low indication of the power (-2.51 dB at very low video bandwidths). The video bandwidth should therefore be selected at least three times the resolution bandwidth:

" $VBW \geq 3 \times RBW$ "

The [Adjust Settings](#) softkey sets the video bandwidth (VBW) as a function of the channel bandwidth (see formula above) and the smallest possible VBW with regard to the available step size will be selected.

- **Detector**

The [Adjust Settings](#) softkey selects the RMS detector. This detector is selected since it correctly indicates the power irrespective of the characteristics of the signal to be measured. The whole IF envelope is used to calculate the power for each measurement point. The IF envelope is digitized using a sampling frequency which is at least five times the resolution bandwidth which has been selected. Based on the sample values, the power is calculated for each measurement point using the following formula:

$$P_{\text{RMS}} = \sqrt{\frac{1}{N} \cdot \sum_{i=1}^N s_i^2}$$

where:

" s_i = linear digitized video voltage at the output of the A/D converter"

"N = number of A/D converter values per measurement point"

" P_{RMS} = power represented by a measurement point"

When the power has been calculated, the power units are converted into decibels and the value is displayed as a measurement point.

In principle, the sample detector would be possible as well. Due to the limited number of measurement points used to calculate the power in the channel, the sample detector would yield less stable results.

- **Trace averaging**

The [Adjust Settings](#) softkey switches off this function. Averaging, which is often performed to stabilize the measurement results, leads to a too low level indication and should therefore be avoided. The reduction in the displayed power depends on the number of averages and the signal characteristics in the channel to be measured.

- **Reference level**

The [Adjust Settings](#) softkey does not influence the reference level. It can be adjusted separately using the "Adjust Ref Lvl" softkey (see "[Adjust Ref Lvl](#)" on page 124).

4.1.1.3 Measuring the Carrier-to-Noise Ratio

The R&S ESRP can easily determine the carrier-to-noise ratio, also normalized to a 1 Hz bandwidth.

The largest signal in the frequency span is the carrier. It is searched when the C/N or C/NO function is activated (see "[C/N, C/No](#)" on page 129) and is marked using a fixed reference marker ("FXD").

To determine the noise power, a channel at the defined center frequency is examined. The bandwidth of the channel is defined by the "Channel Bandwidth" setting. The power within this channel is integrated to obtain the noise power level. (If the carrier is within this channel, an extra step is required to determine the correct noise power level, see below.)

The noise power of the channel is subtracted from the maximum carrier signal level, and in the case of a C/NO measurement, it is referred to a 1 Hz bandwidth.



For this measurement, the RMS detector is activated.

The carrier-to-noise measurements are only available in the frequency domain (span >0).

There are two methods to measure the carrier-to-noise ratio:

- The carrier is outside the examined channel: In this case, it is sufficient to switch on the desired measurement function and to set the channel bandwidth. The carrier/noise ratio is displayed on the screen.
- The carrier is inside the examined channel: In this case, the measurement must be performed in two steps:
 - First, perform the reference measurement by switching on either the C/N or the C/NO measurement and waiting for the end of the next measurement run. The fixed reference marker is set to the maximum of the measured carrier signal.
 - Then, switch off the carrier so that only the noise of the test setup is active in the channel. The carrier-to-noise ratio is displayed after the subsequent measurement has been completed.



The frequency span should be set to approximately 4 times the channel bandwidth in order to measure the carrier-to-noise ratio correctly. This setting is defined automatically by the "Adjust Settings" function.

To determine the carrier-to-noise ratio

1. Press the "C/N, C/NO" softkey to configure the carrier-to-noise ratio measurement.
2. To change the channel bandwidth to be examined, press the "Channel Bandwidth" softkey.
3. To optimize the settings for the selected channel configuration, press the "Adjust Settings" softkey.
4. To activate the measurements without reference to the bandwidth, press the "C/N" softkey.
To activate the measurements with reference to the bandwidth, press the "C/NO" softkey .
5. If the carrier signal is located within the examined channel bandwidth, switch off the carrier signal so that only the noise is displayed in the channel and perform a second measurement.

The carrier-to-noise ratio is displayed after the measurement has been completed.

Measurement results

As a result of the carrier-to-noise measurement the evaluated bandwidth and the calculated C/N ratio are indicated beneath the diagram.

You can also query the determined carrier-to-noise ratio via the remote command `CALC:MARK:FUNC:POW:RES? CN` or `CALC:MARK:FUNC:POW:RES? CN0`, see [CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult?](#) on page 534.

Softkeys for Carrier-to-Noise Ratio Measurements

C/N, C/No	129
L C/N	129
L C/No	129
L Channel Bandwidth	129
L Adjust Settings	130

C/N, C/No

Opens a submenu to configure the carrier/noise ratio measurement. Measurements without (C/N) and measurements with reference to the bandwidth (C/No) are possible.

Carrier-to-noise measurements are not available in zero span mode.

Note: Carrier-to-noise measurements are also available in the I/Q Analyzer, but only for **Spectrum** displays (see ["Display Config"](#) on page 332).

For general information on performing carrier-to-noise ratio measurements see [chapter 4.1.1.3, "Measuring the Carrier-to-Noise Ratio"](#), on page 127.

C/N ← C/N, C/No

Switches the measurement of the carrier/noise ratio on or off. If no marker is active, marker 1 is activated.

The measurement is performed on the trace that marker 1 is assigned to. To shift marker 1 and measure another trace, use the [Marker to Trace](#) softkey in the "Marker To" menu.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:POWer:SElect](#) on page 533

[CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult?](#) on page 534

[CALCulate<n>:MARKer<m>:FUNCTION:POWer\[:STATe\]](#) on page 536

C/No ← C/N, C/No

Switches the measurement of the carrier/noise ratio with reference to a 1 Hz bandwidth on or off. If no marker is active, marker 1 is activated.

The measurement is performed on the trace that marker 1 is assigned to. To shift marker 1 and measure another trace, use the [Marker to Trace](#) softkey in the "Marker To" menu.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:POWer:SElect](#) on page 533

[CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult?](#) on page 534

[CALCulate<n>:MARKer<m>:FUNCTION:POWer\[:STATe\]](#) on page 536

Channel Bandwidth ← C/N, C/No

Opens an edit dialog box to enter the measurement channel bandwidth for each channel.

The default setting is 14 kHz.

Note that in the I/Q Analyzer the channel bandwidth does not change the measurement span or sampling rate; it merely defines the range for the carrier-to-noise analysis.

Remote command:

`[SENSe:]POWER:ACHannel:ACPairs` on page 542

Adjust Settings ← C/N, C/No

Enables the RMS detector (see also [chapter 4.3.1.5, "Detector Overview"](#), on page 272) and adjusts the span to the selected channel bandwidth according to:

"4 x channel bandwidth + measurement margin"

The adjustment is performed once; if necessary, the setting can be changed later on.

Note: in the I/Q Analyzer, this function is not available. The channel bandwidth defines the range for the carrier-to-noise analysis.

Remote command:

`[SENSe:]POWER:ACHannel:PRESet` on page 538

4.1.1.4 Measuring the Occupied Bandwidth

An important characteristic of a modulated signal is its occupied bandwidth. In a radio communications system for instance the occupied bandwidth must be limited to enable distortion-free transmission in adjacent channels. The occupied bandwidth is defined as the bandwidth containing a defined percentage of the total transmitted power. A percentage between 10 % and 99.9 % can be set.

The measurement principle is the following: The bandwidth containing 99% of the signal power is to be determined, for example. The routine first calculates the total power of all displayed points of the trace. In the next step, the points from the right edge of the trace are summed up until 0.5 % of the total power is reached. Auxiliary marker 1 is positioned at the corresponding frequency. Then the points from the left edge of the trace are summed up until 0.5 % of the power is reached. Auxiliary marker 2 is positioned at this point. 99 % of the power is now between the two markers. The distance between the two frequency markers is the occupied bandwidth which is displayed in the marker field.



New: OBW now also possible within defined search limits - multi-carrier OBW measurement in one sweep

The occupied bandwidth of the signal can be determined within defined search limits instead of for the entire signal. Thus, only a single sweep is required to determine the OBW for a multi-carrier signal. To do so, search limits are defined for an individual carrier and the OBW measurement is restricted to the frequency range contained within those limits. Then the search limits are adapted for the next carrier and the OBW is automatically re-calculated for the new range.



The OBW measurement uses the same search limits as defined for marker search (see ["Search Limits"](#) on page 84). However, only the left and right limits are considered.

To ensure correct power measurement, especially for noise signals, and to obtain the correct occupied bandwidth, the following prerequisites and settings are necessary:

- Only the signal to be measured is displayed on the screen. An additional signal would falsify the measurement.
- $RBW \ll \text{occupied bandwidth}$
(approx. 1/20 of occupied bandwidth, for voice communication type 300 Hz or 1 kHz)
- $VBW \geq 3 \times RBW$
- RMS detector
- $\text{Span} \geq 2 \text{ to } 3 \times \text{occupied bandwidth}$

Some of the measurement specifications (e.g. PDC, RCR STD-27B) require measurement of the occupied bandwidth using a peak detector. The detector setting of the R&S ESRP has to be changed accordingly then.



A remote control programming example is described in [chapter 9.16.5, "Occupied Bandwidth Measurement"](#), on page 802.

To determine the occupied bandwidth

1. Press the **OBW** softkey to activate the measurement of the occupied bandwidth.
The corresponding submenu is displayed.
2. Press the "% Power Bandwidth" softkey to enter the percentage of power (see ["% Power Bandwidth \(span > 0\)"](#) on page 133).
3. To change the channel bandwidth for the transmission channel, press the "Channel Bandwidth" softkey (see ["Channel Bandwidth \(span > 0\)"](#) on page 133).
4. To optimize the settings for the selected channel configuration, press the **Adjust Settings** softkey. For details see also ["Optimized Settings for CP/ACLR Test Parameters"](#) on page 125.
5. To adjust the reference level to the measured total power after the first sweep, press the **Adjust Ref Lvl** softkey.

Measurement results

As a result of the OBW measurement the occupied bandwidth ("Occ BW") is indicated in the marker results. Furthermore, the marker at the center frequency and the temporary markers are indicated.



The OBW calculation is repeated if the [Search Limits](#) are changed, without performing a new sweep. Thus, the OBW for a multi-carrier signal can be determined using only one sweep.

The determined occupied bandwidth can also be queried using the remote command `CALC:MARK:FUNC:POW:RES? OBW` or `CALC:MARK:FUNC:POW:RES? AOBW`. While the **OBW** parameter returns only the occupied bandwidth, the **AOBW** parameter also returns the position and level of the temporary markers T1 and T2 used to calculate the occupied bandwidth.

Softkeys for Occupied Bandwidth (OBW) Measurements

OBW	132
L % Power Bandwidth (span > 0).....	133
L Channel Bandwidth (span > 0).....	133
L Adjust Ref Lvl (span > 0).....	133
L Adjust Settings.....	133

OBW

Activates measurement of the occupied bandwidth according to the current configuration and opens a submenu to configure the measurement. The occupied bandwidth is displayed in the marker display field and marked on the trace by temporary markers. For details see [chapter 4.1.1.4, "Measuring the Occupied Bandwidth"](#), on page 130.

This measurement is not available in zero span.

The measurement is performed on the trace with marker 1. In order to evaluate another trace, marker 1 must be placed on another trace (see the [Marker to Trace](#) softkey in the "Marker" menu).

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:POWER:SElect](#) on page 533

[CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult?](#) on page 534

[CALCulate<n>:MARKer<m>:FUNCTION:POWER\[:STATe\]](#) on page 536

% Power Bandwidth (span > 0) ← OBW

Opens an edit dialog box to enter the percentage of total power in the displayed frequency range which defines the occupied bandwidth. Values from 10% to 99.9% are allowed.

Remote command:

[\[SENSe:\] POWER:BANDwidth|BWIDth](#) on page 561

Channel Bandwidth (span > 0) ← OBW

Opens an edit dialog box to enter the channel bandwidth for the transmission channel. The specified channel bandwidth is used for optimization of the test parameters (for details see "[Optimized Settings for CP/ACLR Test Parameters](#)" on page 125). The default setting is 14 kHz.

For measurements in line with a specific transmission standard, the bandwidth specified by the standard for the transmission channel must be entered.

Remote command:

[\[SENSe:\] POWER:ACHannel:BANDwidth|BWIDth\[:CHANnel<channel>\]](#)
on page 543

Adjust Ref Lvl (span > 0) ← OBW

Adjusts the reference level to the measured total power of the signal. the softkey is activated after the first sweep with active measurement of the occupied bandwidth has been completed and the total power of the signal is thus known.

Adjusting the reference level ensures that the signal path will not be overloaded and the dynamic range not limited by too low a reference level. Since the measurement bandwidth for channel power measurements is significantly lower than the signal bandwidth, the signal path may be overloaded although the trace is distinctly below the reference level. If the measured channel power is equal to the reference level, the signal path cannot be overloaded.

Remote command:

[\[SENSe:\] POWER:ACHannel:PRESet:RLEVel](#) on page 538

Adjust Settings ← OBW

Automatically optimizes all instrument settings for the selected channel configuration (channel bandwidth, channel spacing) within a specific frequency range (channel bandwidth). The adjustment is carried out only once. If necessary, the instrument settings can be changed later.

For details on the settings of span, resolution bandwidth, video bandwidth, detector and trace averaging see ["Optimized Settings for CP/ACLR Test Parameters"](#) on page 125.

Remote command:

`[SENSe:] POWER:ACHannel:PRESet` on page 538

4.1.1.5 Measuring with Spectrum Emission Masks

The Spectrum Emission Mask (SEM) measurement defines a measurement that monitors compliance with a spectral mask. The SEM measurement is used to measure the excess emissions of a TX channel that would interfere to other channels or to other systems.

The SEM measurement of the base unit allows a flexible definition of all parameters in the SEM measurement. It is performed using the [Spectrum Emission Mask](#) softkey in the "Measurement" menu. Most parameters are defined in the "Sweep List" dialog box (see ["Sweep List dialog box"](#) on page 136). After a preset, the sweep list contains a set of default ranges and parameters. For each range, you can change the parameters. For information on other SEM settings, see the description of the corresponding softkeys (["Spectrum Emission Mask"](#) on page 136).

If you want a parameter set to be available permanently, you can create an XML file for this configuration and, if necessary, export this file to another application (for details refer to ["Format Description of Spectrum Emission Mask XML Files"](#) on page 153 and ["ASCII File Export Format \(Spectrum Emission Mask\)"](#) on page 158).

Some predefined XML files are provided that contain ranges and parameters according to the selected standard (see ["Provided XML Files for the Spectrum Emission Mask Measurement"](#) on page 150).

In order to improve the performance of the R&S ESRP for spectrum emission mask measurements, a "Fast SEM" mode is available. For details see ["Fast Spectrum Emission Mask Measurements"](#) on page 159.

Monitoring compliance of the spectrum is supported by a special limit check for SEM measurements, see ["Working with Limit Lines in SEM Measurements"](#) on page 149.



A remote control programming example is described in [chapter 9.16.12, "Spectrum Emission Mask Measurement"](#), on page 813.

Softkeys for Spectrum Emission Mask (SEM) Measurements.....	135
Result Evaluation.....	146
Ranges and Range Settings.....	147
Working with Limit Lines in SEM Measurements.....	149
Provided XML Files for the Spectrum Emission Mask Measurement.....	150

Format Description of Spectrum Emission Mask XML Files.....	153
ASCII File Export Format (Spectrum Emission Mask).....	158
Fast Spectrum Emission Mask Measurements.....	159

Softkeys for Spectrum Emission Mask (SEM) Measurements


Spectrum Emission Mask.....	136
L Sweep List.....	136
L Sweep List dialog box.....	136
L Range Start / Range Stop.....	137
L Fast SEM.....	137
L Filter Type.....	137
L RBW.....	137
L VBW.....	138
L Sweep Time Mode.....	138
L Sweep Time.....	138
L Ref. Level.....	138
L RF Att. Mode.....	138
L RF Attenuator.....	138
L Preamp.....	138
L Transd. Factor.....	138
L Limit Check 1-4.....	139
L Abs Limit Start.....	139
L Abs Limit Stop.....	139
L Rel Limit Start.....	139
L Rel Limit Stop.....	140
L Close Sweep List.....	140
L Insert before Range.....	140
L Insert after Range.....	140
L Delete Range.....	140
L Symmetric Setup.....	140
L Edit Reference Range.....	141
L List Evaluation.....	142
L List Evaluation (On/Off).....	142
L Margin.....	142
L Show Peaks.....	142
L Save Evaluation List.....	142
L ASCII File Export.....	142
L Decim Sep.....	143
L Edit Reference Range.....	143
L Edit Power Classes.....	144
L Used Power Classes.....	144
L PMin/PMAX.....	144
L Sweep List.....	145
L Add/Remove.....	145
L Load Standard.....	145
L Save As Standard.....	145
L Meas Start/Stop.....	145
L Restore Standard Files.....	145

Spectrum Emission Mask

Opens a submenu to configure the Spectrum Emission Mask measurement.

The Spectrum Emission Mask (SEM) measurement defines a measurement that monitors compliance with a spectral mask. The SEM measurement of the base unit allows a flexible definition of all parameters in the SEM measurement.

For general information on performing SEM measurements, see [chapter 4.1.1.5, "Measuring with Spectrum Emission Masks"](#), on page 134.

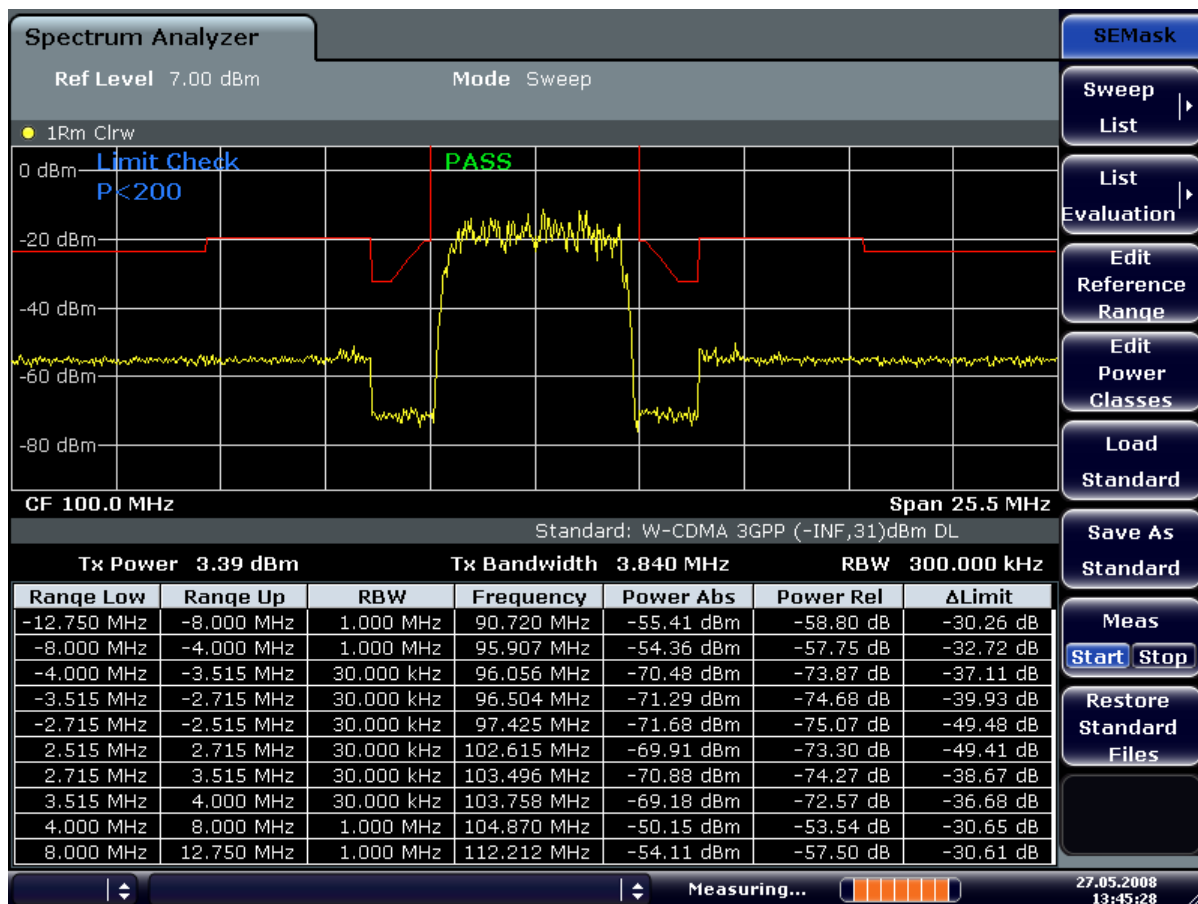

Remote command:

SENS:SWE:MODE ESP, see [\[SENSe:\]SWEep:MODE](#) on page 572

Sweep List ← Spectrum Emission Mask

Opens a submenu to edit the sweep list and displays the "Sweep List" dialog box.

Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

After a preset, the sweep list contains a set of default ranges and parameters. For each range, you can change the parameters listed below. To insert or delete ranges, use the "Insert Before Range", "Insert After Range", "Delete Range" softkeys. The measurement results are not updated during editing but on closing the dialog box ("Edit Sweep List/ Close Sweep List" softkey, see ["Close Sweep List"](#) on page 140).

The changes of the sweep list are only kept until you load another parameter set (by pressing PRESET or by loading an XML file). If you want a parameter set to be available permanently, create an XML file for this configuration (for details refer to ["Format Description of Spectrum Emission Mask XML Files"](#) on page 153).

If you load one of the provided XML files ("Load Standard" softkey, see ["Load Standard"](#) on page 145), the sweep list contains ranges and parameters according to the selected standard. For further details refer also to ["Provided XML Files for the Spectrum Emission Mask Measurement"](#) on page 150.

Note: If you edit the sweep list, always follow the rules and consider the limitations described in ["Ranges and Range Settings"](#) on page 147.

Range Start / Range Stop ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the start frequency/stop frequency of the selected range. Follow the rules described in ["Ranges and Range Settings"](#) on page 147.

In order to change the start/stop frequency of the first/last range, select the appropriate span with the SPAN key. If you set a span that is smaller than the overall span of the ranges, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz. The first and last ranges are adapted to the given span as long as the minimum span of 20 Hz is not violated.

Frequency values for each range have to be defined relative to the center frequency. The reference range has to be centered on the center frequency. The minimum span of the reference range is given by the current TX Bandwidth.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>\[:FREQuency\]:START](#) on page 575

[\[SENSe:\]ESpectrum:RANGe<range>\[:FREQuency\]:STOP](#) on page 576

Fast SEM ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Activates "Fast SEM" mode for all ranges in the sweep list. For details see ["Fast Spectrum Emission Mask Measurements"](#) on page 159.

Note: If "Fast SEM" mode is deactivated while [Symmetric Setup](#) mode is on, "Symmetrical Setup" mode is automatically also deactivated.

If "Fast SEM" mode is activated while "Symmetrical Setup" mode is on, not all range settings can be set automatically.

Remote command:

[\[SENSe:\]ESpectrum:HighSPeed](#) on page 573

Filter Type ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the filter type for this range. For details on filters see also [chapter 4.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 239.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:FILTer:TYPE](#) on page 575

RBW ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the RBW value for this range.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:BANDwidth\[:RESolution\]](#) on page 574

VBW ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the VBW value for this range.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:BANDwidth:VIDeo](#) on page 574

Sweep Time Mode ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Activates or deactivates the auto mode for the sweep time.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:SWEep:TIME:AUTO](#) on page 580

Sweep Time ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the sweep time value for the range.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:SWEep:TIME](#) on page 580

Ref. Level ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the reference level for the range.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:RLEVel](#) on page 579

RF Att. Mode ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Activates or deactivates the auto mode for RF attenuation.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:INPut:ATTenuation:AUTO](#) on page 577

RF Attenuator ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the attenuation value for that range.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:INPut:ATTenuation](#) on page 576

Preamplifier ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Switches the preamplifier on or off.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:INPut:GAIN:STATE](#) on page 577

Transd. Factor ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets a transducer for the specified range. You can only choose a transducer that fulfills the following conditions:

- The transducer overlaps or equals the span of the range.
- The x-axis is linear.

- The unit is dB.

Remote command:

[SENSe:]ESpectrum:RANGe<range>:TRANsducer on page 580

Limit Check 1-4 ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the type of limit check for all ranges.

For details on limit checks see ["Working with Limit Lines in SEM Measurements"](#) on page 149.

For details on limit checks see the base unit description ["Working with Lines in SEM"](#).

The limit state affects the availability of all limit settings (["Abs Limit Start"](#) on page 139, ["Abs Limit Stop"](#) on page 139, ["Rel Limit Start"](#) on page 139, ["Rel Limit Stop"](#) on page 140).

Depending on the number of active power classes (see ["Power Class"](#) dialog box), the number of limits that can be set varies. Up to four limits are possible. The sweep list is extended accordingly.

Remote command:

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:STATe on page 579
CALCulate<n>:LIMit<k>:FAIL? on page 531

Abs Limit Start ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets an absolute limit value at the start frequency of the range [dBm].

This parameter is only available if the limit check is set accordingly (see ["Limit Check 1-4"](#) on page 139).

Remote command:

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:START on page 578

Abs Limit Stop ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets an absolute limit value at the stop frequency of the range [dBm].

This parameter is only available if the limit check is set accordingly (see ["Limit Check 1-4"](#) on page 139).

Remote command:

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:STOP on page 578

Rel Limit Start ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets a relative limit value at the start frequency of the range [dBc].

This parameter is only available if the limit check is set accordingly (see ["Limit Check 1-4"](#) on page 139).

Remote command:

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:START on page 578

Rel Limit Stop ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets a relative limit value at the stop frequency of the range [dBc].

This parameter is only available if the limit check is set accordingly (see ["Sweep List dialog box"](#) on page 136).

Remote command:

`[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:STOP`
on page 579

Close Sweep List ← Sweep List ← Spectrum Emission Mask

Closes the "Sweep List" dialog box and updates the measurement results.

Insert before Range ← Sweep List ← Spectrum Emission Mask

Inserts a new range to the left of the currently focused range. The range numbers of the currently focused range and all higher ranges are increased accordingly. The maximum number of ranges is 20.

For further details refer to ["Ranges and Range Settings"](#) on page 147.

Remote command:

`ESP:RANG3:INS BEF`, see `[SENSe:]ESpectrum:RANGe<range>:INSert`
on page 577

Insert after Range ← Sweep List ← Spectrum Emission Mask

Inserts a new range to the right of the currently focused range. The range numbers of all higher ranges are increased accordingly. The maximum number of ranges is 20.

For further details refer to ["Ranges and Range Settings"](#) on page 147.

Remote command:

`ESP:RANG1:INS AFT`, see `[SENSe:]ESpectrum:RANGe<range>:INSert`
on page 577

Delete Range ← Sweep List ← Spectrum Emission Mask

Deletes the currently focused range, if possible. The range numbers are updated accordingly. For further details refer to ["Ranges and Range Settings"](#) on page 147.

Remote command:

`[SENSe:]ESpectrum:RANGe<range>:DELete` on page 575

Symmetric Setup ← Sweep List ← Spectrum Emission Mask

If activated, the current sweep list configuration is changed to define a symmetrical setup regarding the reference range. The number of ranges to the left of the reference range is reflected to the right, i.e. any missing ranges on the right are inserted, while superfluous ranges are removed. The values in the ranges to the right of the reference range are adapted symmetrically to those in the left ranges.

Any changes to the range settings in active "Symmetric Setup" mode lead to symmetrical changes in the other ranges (where possible). In particular, this means:

- Inserting ranges: a symmetrical range is inserted on the other side of the reference range
- Deleting ranges: the symmetrical range on the other side of the reference range is also deleted


- Editing range settings: the settings in the symmetrical range are adapted accordingly

Note: If "Fast SEM" mode is deactivated while "Symmetric Setup" mode is on, "Sym Setup" mode is automatically also deactivated.

If "Fast SEM" mode is activated while "Symmetric Setup" mode is on, not all range settings can be set automatically.

Edit Reference Range ← Sweep List ← Spectrum Emission Mask

Opens the "Reference Range" dialog box to edit the additional settings used for SEM measurements.

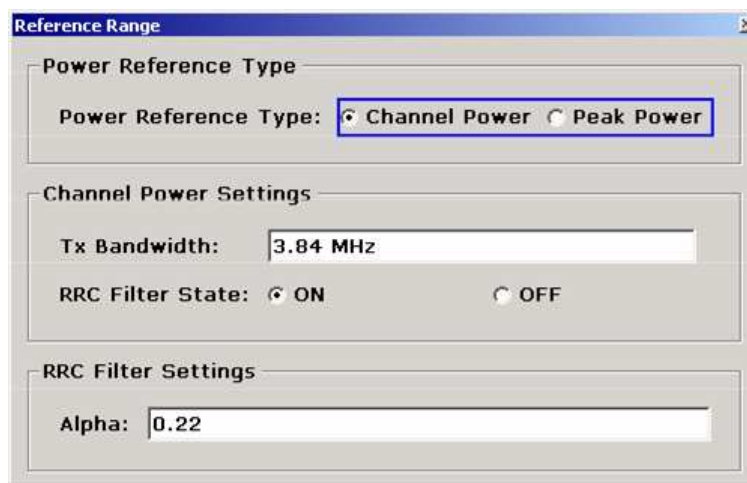

Two different power reference types are supported:

- "Peak Power"
Measures the highest peak within the reference range.
- "Channel Power"
Measures the channel power within the reference range (integral bandwidth method).
If the "Channel Power" reference power type is activated, the dialog box is extended to define additional settings:
- "Tx Bandwidth"
Defines the bandwidth used for measuring the channel power:
minimum span ≤ value ≤ span of reference range
- "RRC Filter State"
Activates or deactivates the use of an RRC filter.
- "RRC Filter Settings"
Sets the alpha value of the RRC filter. This window is only available if the RRC filter is activated.

For further details refer to ["Ranges and Range Settings"](#) on page 147.

Remote command:

`[SENSe:]ESpectrum:RTYPE` on page 582

`[SENSe:]ESpectrum:BWID` on page 581

`[SENSe:]ESpectrum:FILTer[:RRC][:STATe]` on page 582

`[SENSe:]ESpectrum:FILTer[:RRC]:ALPha` on page 581

List Evaluation ← Spectrum Emission Mask

Opens a submenu to edit the list evaluation settings.

List Evaluation (On/Off) ← List Evaluation ← Spectrum Emission Mask

Activates or deactivates the list evaluation.

Remote command:

Turning list evaluation on and off:

`CALCulate<n>:PEAKsearch|PSEarch:AUTO` on page 569

Querying list evaluation results:

`TRACe<n>:DATA` on page 538

Margin ← List Evaluation ← Spectrum Emission Mask

Opens an edit dialog box to enter the margin used for the limit check/peak search.

Remote command:

`CALCulate<n>:PEAKsearch|PSEarch:MARGin` on page 496

Show Peaks ← List Evaluation ← Spectrum Emission Mask

In the diagram, marks all peaks with blue squares that have been listed during an active list evaluation.

Remote command:

`CALCulate<n>:ESpectrum:PSEarch|:PEAKsearch:PSHow` on page 588

Save Evaluation List ← List Evaluation ← Spectrum Emission Mask

Opens the "ASCII File Export Name" dialog box to save the result in ASCII format to a specified file and directory. For further details refer also to the "ASCII File Export" softkey ("[ASCII File Export](#)" on page 142).

Remote command:

`MMEMory:STORe<n>:LIST` on page 587

ASCII File Export ← Save Evaluation List ← List Evaluation ← Spectrum Emission Mask

Opens the "ASCII File Export Name" dialog box and saves the active peak list in ASCII format to the specified file and directory.

The file consists of the header containing important scaling parameters and a data section containing the marker data. For details on an ASCII file see [chapter 4.3.1.6, "ASCII File Export Format"](#), on page 273.

This format can be processed by spreadsheet calculation programs, e.g. MS-Excel. It is necessary to define ';' as a separator for the data import. Different language versions of evaluation programs may require a different handling of the decimal point. It is therefore possible to select between separators '.' (decimal point) and ',' (comma) using the "Decim Sep" softkey (see "[Decim Sep](#)" on page 78).

An example of an output file for Spectrum Emission Mask measurements is given in "[ASCII File Export Format \(Spectrum Emission Mask\)](#)" on page 158.

Remote command:

`FORMat:DEXPort:DSEPARATOR` on page 656

`MMEMory:STORe<n>:LIST` on page 587

Decim Sep ← Save Evaluation List ← List Evaluation ← Spectrum Emission Mask


Selects the decimal separator with floating-point numerals for the ASCII Trace export to support evaluation programs (e.g. MS-Excel) in different languages. The values '.' (decimal point) and ',' (comma) can be set.

Remote command:

[FORMat:DEXPort:DSEParator](#) on page 656

Edit Reference Range ← Spectrum Emission Mask

Opens the "Reference Range" dialog box to edit the additional settings used for SEM measurements.

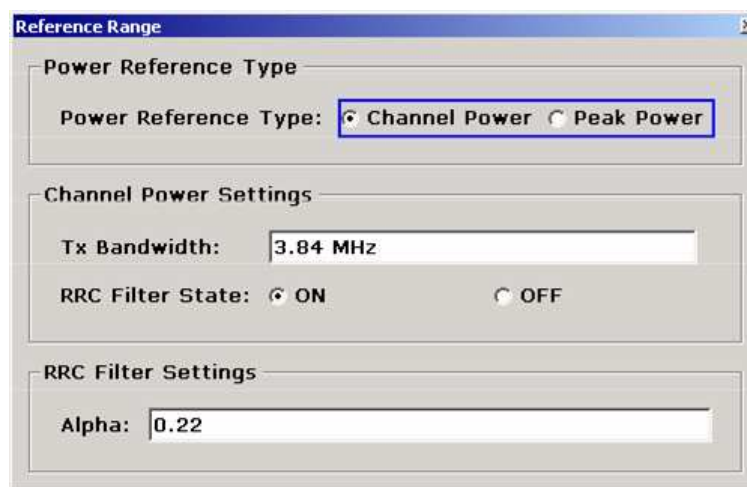

Two different power reference types are supported:

- "Peak Power"
Measures the highest peak within the reference range.
- "Channel Power"
Measures the channel power within the reference range (integral bandwidth method).
If the "Channel Power" reference power type is activated, the dialog box is extended to define additional settings:
- "Tx Bandwidth"
Defines the bandwidth used for measuring the channel power:
minimum span ≤ value ≤ span of reference range
- "RRC Filter State"
Activates or deactivates the use of an RRC filter.
- "RRC Filter Settings"
Sets the alpha value of the RRC filter. This window is only available if the RRC filter is activated.

For further details refer to ["Ranges and Range Settings"](#) on page 147.

Remote command:

[\[SENSe:\]ESpectrum:RTYPE](#) on page 582

[\[SENSe:\]ESpectrum:BWID](#) on page 581

[\[SENSe:\]ESpectrum:FILTer\[:RRC\]\[:STATe\]](#) on page 582

[\[SENSe:\]ESpectrum:FILTer\[:RRC\]:ALPha](#) on page 581

Edit Power Classes ← Spectrum Emission Mask

Opens a dialog box to modify the power class settings.

Power Class	PMin	<=P<	PMax	
Power Class 1	-INF	-63.5 dBm	-63.5 dBm	Sweep List
Power Class 2	-63.5 dBm	-40.0 dBm	-40.0 dBm	Sweep List
Power Class 3	-40.0 dBm	+INF	+INF	Sweep List

Buttons: Add, Remove

Used Power Classes ← Edit Power Classes ← Spectrum Emission Mask

Choose the power classes to be used from this dropdown menu. It is only possible to select either one of the defined power classes or all of the defined power classes together.

Only power classes for which limits are defined are available for selection.

If "All" is selected, the power class that corresponds to the currently measured power in the reference range is used. The limits assigned to that power class are applied (see "PMin/PMAX" on page 144).

Remote command:

`CALCulate<n>:LIMit<k>:ESpectrum:PClass<Class>[:EXCLusive]`

on page 584

To define all limits in one step:

`CALCulate<n>:LIMit<k>:ESpectrum:PClass<Class>:LIMit[:STATe]`

on page 584

PMin/PMAX ← Edit Power Classes ← Spectrum Emission Mask

Defines the level limits for each power class. The range always starts at -200 dBm (-INF) and always stops at 200 dBm (+INF). These fields cannot be modified. If more than one Power Class is defined, the value of "PMin" must be equal to the value of "PMAX" of the last Power Class and vice versa.

Note that the power level may be equal to the lower limit, but must be lower than the upper limit:

$$P_{\min} \leq P < P_{\max}$$

Remote command:

[CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:MINimum](#) on page 586

[CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:MAXimum](#) on page 585

Sweep List ← Edit Power Classes ← Spectrum Emission Mask

See ["Sweep List"](#) on page 136

Add/Remove ← Edit Power Classes ← Spectrum Emission Mask

Activates or deactivates power classes to be defined. Up to four power classes can be defined. The number of active power classes affects the availability of the items of the Used Power Classes dropdown menu.

Remote command:

[CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>\[:EXCLUSIVE\]](#)

on page 584

Load Standard ← Spectrum Emission Mask

Opens a dialog box to select an XML file which includes the desired standard specification. For details on the provided XML files refer to ["Provided XML Files for the Spectrum Emission Mask Measurement"](#) on page 150.

Remote command:

[\[SENSe:\]ESpectrum:PRESet\[:STANDARD\]](#) on page 571

Save As Standard ← Spectrum Emission Mask

Opens the "Save As Standard" dialog box, in which the currently used SEM settings and parameters can be saved and exported into an *.xml file. Enter the name of the file in the "File name" field. For details on the structure and contents of the XML file refer to ["Format Description of Spectrum Emission Mask XML Files"](#) on page 153.

Remote command:

[\[SENSe:\]ESpectrum:PRESet:STORe](#) on page 571

Meas Start/Stop ← Spectrum Emission Mask

Aborts/restarts the current measurement and displays the status:

"Start" The measurement is currently running.

"Stop" The measurement has been stopped, or, in single sweep mode, the end of the sweep has been reached.

Remote command:

[ABORt](#) on page 458

[INITiate<n>:ESpectrum](#) on page 572

Restore Standard Files ← Spectrum Emission Mask

Copies the XML files from the C:\R_S\instr\sem_backup folder to the C:\R_S\instr\sem_std folder. Files of the same name are overwritten.

Remote command:


[\[SENSe:\]ESpectrum:PRESet:REStore](#) on page 571

Result Evaluation

As a result of the Spectrum Emission Mask measurement, the measured signal levels, the result of the limit check (mask monitoring) and the defined limit line are displayed in a diagram (see also ["Working with Limit Lines in SEM Measurements"](#) on page 149). Furthermore, the TX channel power "P" is indicated in relation to the defined power class ranges.

Example:

For example, "P<31" is indicated if the lowest power class is defined from infinity to 31 and the power is currently 17 dBm.

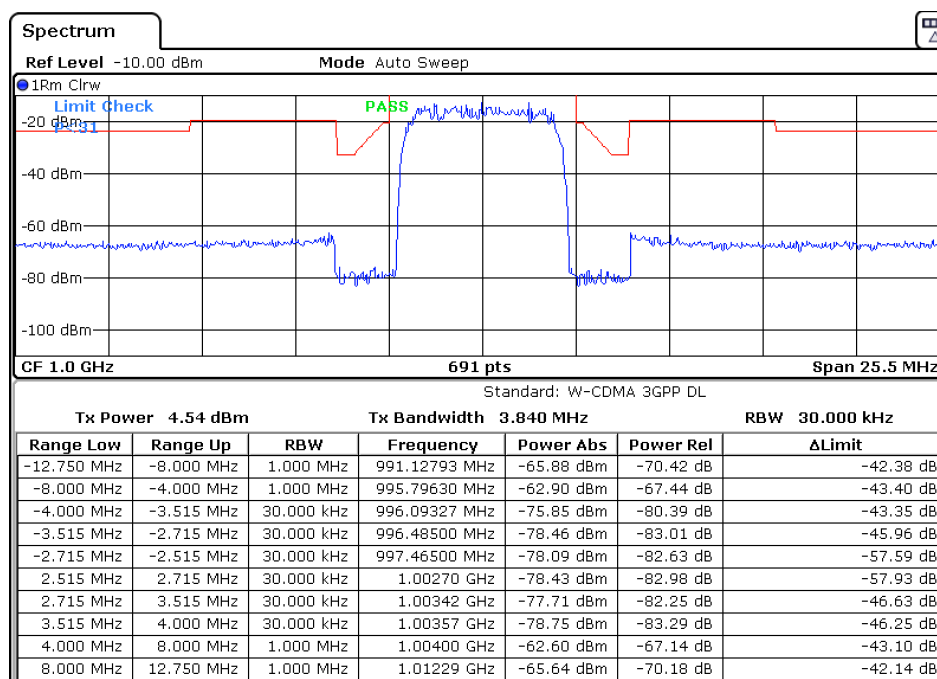

In addition to the graphical results of the SEM measurement displayed in the diagram, a result table is displayed to evaluate the limit check results (see also ["Working with Limit Lines in SEM Measurements"](#) on page 149).


The following information is provided in the result table:

Label	Description
General Information	
Standard	Loaded standard settings
Tx Power	Tx channel power
Tx Bandwidth	Tx channel bandwidth
RBW	RBW for the Tx channel
Range results	
Range Low	Frequency range start for range the peak value belongs to

Label	Description
Range Up	Frequency range stop for range the peak value belongs to
RBW	RBW of the range
Frequency	Frequency
Power Abs	Absolute power level
Power Rel	Power level relative to the TX channel power
Δ Limit	Deviation of the power level from the defined limit

In which detail the data is displayed in the result table can be defined in the [List Evaluation](#) menu. By default, one peak per range is displayed. However, you can change the settings to display only peaks that exceed a threshold ("Margin").

In addition to listing the peaks in the list evaluation, detected peaks can be indicated by blue squares in the diagram ("Show Peaks").

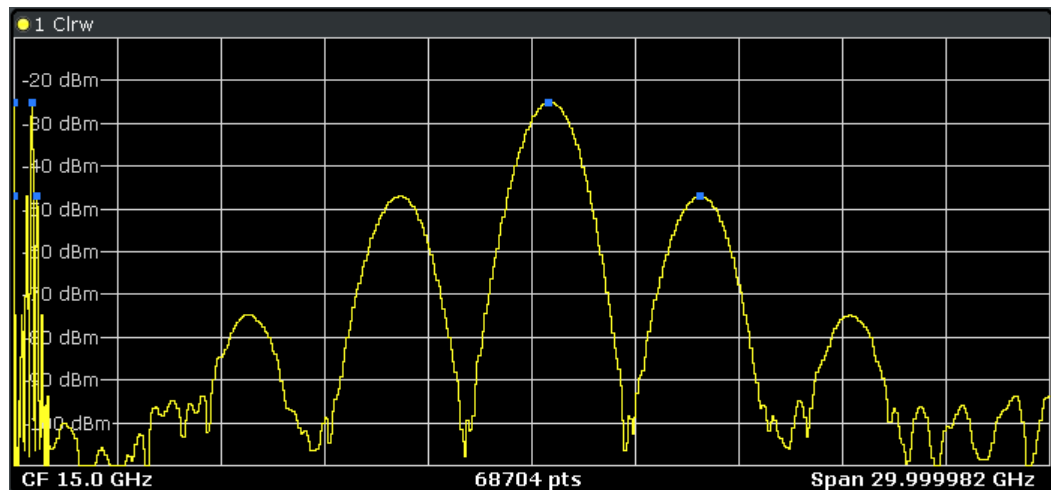

Furthermore, you can save the evaluation list to a file ("Save Evaluation List").

Retrieving Results via Remote Control

The measurement results of the spectrum emission mask test can be retrieved using the `CALCulate<n>:LIMit<k>:FAIL?` command from a remote computer.

The power result for the reference range can be queried using `CALC:MARK:FUNC:POW:RES? CPOW`, the peak power for the reference range using `CALC:MARK:FUNC:POW:RES? PPOW`.

For details see `CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult?` on page 534.

Ranges and Range Settings

In the Spectrum Emission Mask measurements, a range defines a segment for which you can define the following parameters separately:

- Start and stop frequency

- RBW
- VBW
- Sweep time
- Sweep points
- Reference level
- Attenuator settings
- Limit values

Via the sweep list, you define the ranges and their settings. For details on settings refer to ["Sweep List dialog box"](#) on page 136.

For details on defining the limits (masks) see ["Working with Limit Lines in SEM Measurements"](#) on page 149.

For details on defining the limits (masks) see the base unit description ["Working with Lines in SEM"](#).

The following rules apply to ranges:

- The minimum span of a range is 20 Hz.
- The individual ranges must not overlap (but need not directly follow one another).
- The maximum number of ranges is 20.
- A minimum of three ranges is mandatory.
- The reference range cannot be deleted (it is marked in blue color).
- The reference range has to be centered on the center frequency.
- The minimum span of the reference range is given by the current TX Bandwidth.
- Frequency values for each range have to be defined relative to the center frequency.

In order to change the start frequency of the first range or the stop frequency of the last range, select the appropriate span with the SPAN key. If you set a span that is smaller than the overall span of the ranges, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz. The first and last ranges are adapted to the given span as long as the minimum span of 20 Hz is not violated.



Symmetrical ranges

You can easily define a sweep list with symmetrical range settings, i.e. the ranges to the left and right of the center range are defined symmetrically. In the "Sweep List" menu, select the "Symmetrical Setup" softkey to activate symmetrical setup mode. The current sweep list configuration is changed to define a symmetrical setup regarding the reference range. The number of ranges to the left of the reference range is reflected to the right, i.e. any missing ranges on the right are inserted, while superfluous ranges are removed. The values in the ranges to the right of the reference range are adapted symmetrically to those in the left ranges.

For details see ["Symmetric Setup"](#) on page 140.


Symmetrical ranges fulfill the conditions required for "Fast SEM" mode (see ["Fast Spectrum Emission Mask Measurements"](#) on page 159).

Working with Limit Lines in SEM Measurements

Using the R&S ESRP, the spectrum emission mask is defined using limit lines. Limit lines allow you to check the measured data against specified limit values. Generally, it is possible to define limit lines for any measurement in Spectrum mode using the **LINES** key. For SEM measurements, however, special limit lines are available via the "Sweep List", and it is strongly recommended that you use only these limit line definitions.

In the "Sweep List" you can define a limit line for each power class that varies its level according to the specified frequency ranges. Distinguished limit lines ("_SEM_LINE_ABS<0...3>"/ "_SEM_LINE_REL<0...3>") are automatically defined for each power class according to the current "Sweep List" settings every time the settings change.

The limit line defined for the current power class is indicated by a red line in the display, and the result of the limit check is indicated at the top of the diagram. Note that only "Pass" or "Fail" is indicated; a "margin" function as for general limit lines is not available.

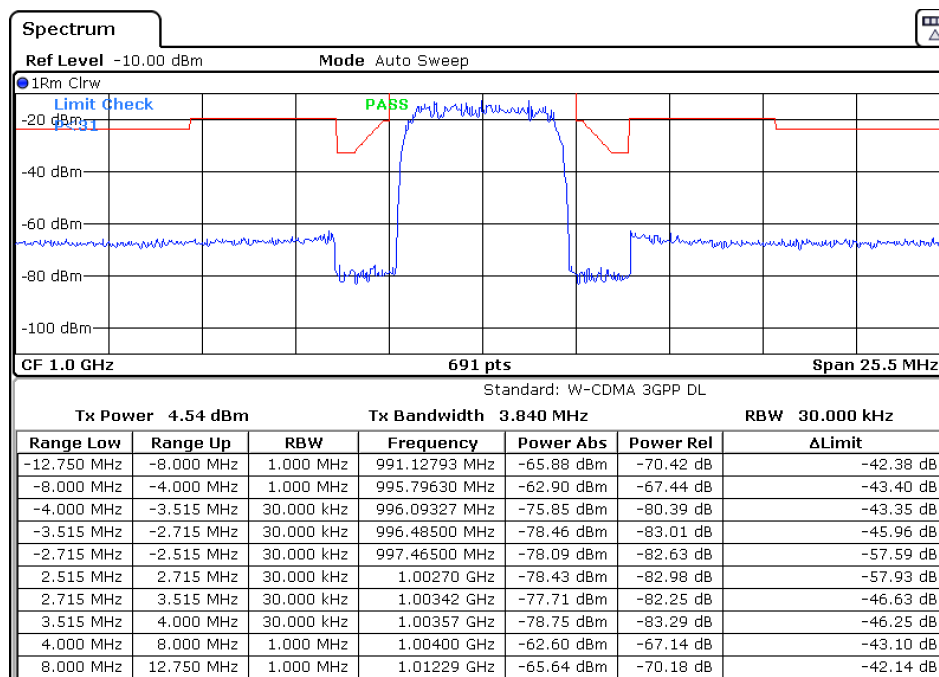


The indicated limit line depends on the settings in the "Sweep List". Several types of limit checks are possible:

Limit check type	Pass/fail criteria	Indicated limit line
Absolute	Absolute power levels may not exceed limit line	Defined by the "Abs Limit Start"/ "Abs Limit Stop" values for each range
Relative	Power deviations relative to the TX channel power may not exceed limit line	Defined by the "Rel Limit Start"/ "Rel Limit Stop" values (relative to the center frequency) for each range

Limit check type	Pass/fail criteria	Indicated limit line
Abs and Rel	Only if the power exceeds both the absolute and the relative limits, the check fails.	The less strict (higher) limit line is displayed for each range.
Abs or Rel	If the power exceeds either the absolute or the relative limits, the check fails.	The stricter (lower) limit line is displayed for each range.

The largest deviations of the power from the limit line for each range are displayed in the evaluation list. Furthermore, the absolute powers for those values, as well as the relative deviation from the TX channel power are displayed. Values that exceed the limit are indicated in red and by an asterisk (*).

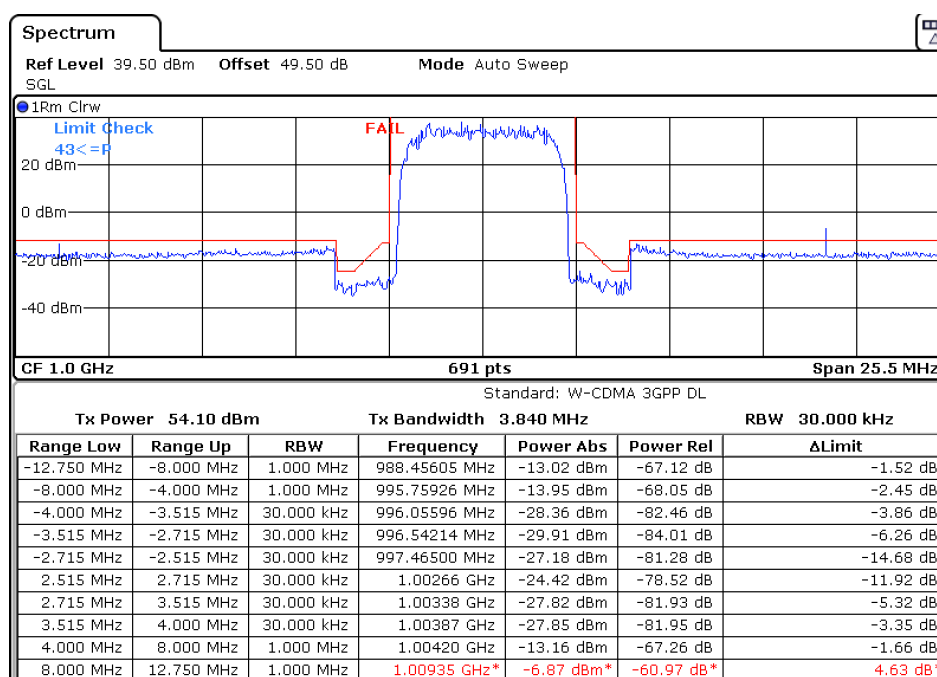

Although a margin functionality is not available for the limit check, a margin (threshold) for the peak values to be displayed in the evaluation list can be defined in the list evaluation settings. For details see ["Result Evaluation"](#) on page 146.

Provided XML Files for the Spectrum Emission Mask Measurement

You can change the settings manually or via XML files. The XML files offer a quick way to change the configuration. A set of ready-made XML files for different standards is already provided. For details see [table 4-1](#). You can also create and use your own XML files (for details see ["Format Description of Spectrum Emission Mask XML Files"](#) on page 153). All XML files are stored under "C:\r_s\instr\sem_std". Use the "Load Standard" softkey for quick access to the available XML files (see ["Load Standard"](#) on page 145).

Table 4-1: Provided XML files

Path	XML file name	Displayed standard characteristics*
cdma2000\DL	default0.xml	CDMA2000 BC0 DL
	default1.xml	CDMA2000 BC1 DL
cdma2000\UL	default0.xml	CDMA2000 BC0 UL
	default1.xml	CDMA2000 BC1 UL
WCDMA\3GPP\DL	PowerClass_31_39.xml	W-CDMA 3GPP (31,39)dBm DL
	PowerClass_39_43.xml	W-CDMA 3GPP (39,43)dBm DL
	PowerClass_43_INF.xml	W-CDMA 3GPP (43,INF)dBm DL
	PowerClass_negINF_31.xml	W-CDMA 3GPP (-INF,31)dBm DL
WiBRO\DL	PowerClass_29_40.xml	WiBro TTA (29,40)dBm DL
	PowerClass_40_INF.xml	WiBro TTA (40,INF)dBm DL
	PowerClass_negINF_29.xml	WiBro TTA (-INF,29)dBm DL
WiBRO\UL	PowerClass_23_INF.xml	WiBro TTA (23,INF)dBm UL
	PowerClass_negINF_23.xml	WiBro TTA (23,INF)dBm UL
WIMAX\DL\ETSI\...MHz (1.75 MHz, 2.00 MHz, 3.5 MHz, 7.00 MHz, 14.00 MHz, 28 MHz)	System_Type_E.xml	WIMAX System Type E DL
	System_Type_F.xml	WIMAX System Type F DL
	System_Type_G.xml	WIMAX System Type G DL
WIMAX\DL\IEEE	10MHz.xml	WIMAX 10MHz DL
	20MHz.xml	WIMAX 20MHz DL
WIMAX\UL\ETSI\...MHz (1.75 MHz, 2.00 MHz, 3.5 MHz, 7.00 MHz, 14.00 MHz, 28 MHz)	System_Type_E.xml	WIMAX System Type E UL
	System_Type_F.xml	WIMAX System Type F UL
	System_Type_G.xml	WIMAX System Type G UL
WIMAX\UL\IEEE	10MHz.xml	WIMAX 10MHz UL
	20MHz.xml	WIMAX 20MHz UL
WLAN\802_11_TURBO	ETSI.xml	IEEE 802.11
	IEEE.xml	IEEE 802.11
WLAN\802_11a	ETSI.xml	IEEE 802.11a
	IEEE.xml	IEEE 802.11a
WLAN\802_11b	IEEE.xml	IEEE 802.11b
WLAN\802_11j_10MHz	ETSI.xml	IEEE.802.11j

Path	XML file name	Displayed standard characteristics*
	IEEE.xml	IEEE.802.11j
WLAN\802_11j_20MHz	ETSI.xml	IEEE 802.11j
	IEEE.xml	IEEE 802.11j
EUTRA-LTE\DL\CategoryA\	BW_01_4_MHz__CFhigher1GHz.xml	LTE Cat. A >1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_01_4_MHz__CFlower1GHz.xml	LTE Cat. A <1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_03_0_MHz__CFhigher1GHz.xml	LTE Cat. A >1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_03_0_MHz__CFlower1GHz.xml	LTE Cat. A <1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_05_0_MHz__CFhigher1GHz.xml	LTE Cat. A >1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_05_0_MHz__CFlower1GHz.xml	LTE Cat. A <1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_10_0_MHz__CFhigher1GHz.xml	LTE Cat. A >1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_10_0_MHz__CFlower1GHz.xml	LTE Cat. A >1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_15_0_MHz__CFhigher1GHz.xml	LTE Cat. A >1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_15_0_MHz__CFlower1GHz.xml	LTE Cat. A <1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_20_0_MHz__CFhigher1GHz.xml	LTE Cat. A >1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_20_0_MHz__CFlower1GHz.xml	LTE Cat. A <1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_01_4_MHz__CFhigher1GHz.xml	LTE Cat. B >1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_01_4_MHz__CFlower1GHz.xml	LTE Cat. B <1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_03_0_MHz__CFhigher1GHz.xml	LTE Cat. B >1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_03_0_MHz__CFlower1GHz.xml	LTE Cat. B <1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_05_0_MHz__CFhigher1GHz.xml	LTE Cat. B >1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_05_0_MHz__CFlower1GHz.xml	LTE Cat. B <1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_10_0_MHz__CFhigher1GHz.xml	LTE Cat. B >1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_10_0_MHz__CFlower1GHz.xml	LTE Cat. B >1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_15_0_MHz__CFhigher1GHz.xml	LTE Cat. B >1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_15_0_MHz__CFlower1GHz.xml	LTE Cat. B <1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_20_0_MHz__CFhigher1GHz.xml	LTE Cat. B >1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_20_0_MHz__CFlower1GHz.xml	LTE Cat. B <1GHz DL

Path	XML file name	Displayed standard characteristics*
EUTRA-LTEUL\Standard\	BW_05_0_MHz.xml	LTE UL
EUTRA-LTEUL\Standard\	BW_10_0_MHz.xml	LTE UL
EUTRA-LTEUL\Standard\	BW_15_0_MHz.xml	LTE UL
EUTRA-LTEUL\Standard\	BW_20_0_MHz.xml	LTE UL

*Used abbreviations:

BC: band class

UL: uplink

DL: downlink

TTA: Telecommunications Technology Association

Format Description of Spectrum Emission Mask XML Files

The files for importing range settings are in XML format and therefore obey the rules of the XML standard. Below, the child nodes, attributes, and structure defined for the data import is described. Build your own XML files according to these conventions because the R&S ESRP can only interpret XML files of a known structure. For example files look in the C:\r_s\instr\sem_std directory.

Spectrum Emission Mask							Standard: W-CDMA 3GPP (39,43)dBm DL	
Tx Power -47.93 dBm			Tx Bandwidth 3.840 MHz		RBW 30.000 kHz			
Range Low	Range Up	RBW	Frequency	Power Abs	Power Rel	ΔLimit		
-12.750 MHz	-8.000 MHz	1.000 MHz	14.99094 GHz*	-74.76 dBm*	-26.83 dB*	27.67 dB*		
-8.000 MHz	-4.000 MHz	1.000 MHz	14.99598 GHz	-36.79 dBm	11.14 dB	-25.29 dB		
-4.000 MHz	-3.515 MHz	30.000 kHz	14.99628 GHz	-100.18 dBm	-52.25 dB	-75.68 dB		
-3.515 MHz	-2.715 MHz	30.000 kHz	14.99648 GHz	-103.55 dBm	-55.63 dB	-79.05 dB		
-2.715 MHz	-2.515 MHz	30.000 kHz	14.99747 GHz	-108.91 dBm	-60.98 dB	-96.41 dB		
2.515 MHz	2.715 MHz	30.000 kHz	15.00251 GHz	-48.25 dBm	-0.32 dB	-35.75 dB		
2.715 MHz	3.515 MHz	30.000 kHz	15.00272 GHz	-52.48 dBm	-4.56 dB	-39.98 dB		
3.515 MHz	4.000 MHz	30.000 kHz	15.00398 GHz	-74.53 dBm	-26.60 dB	-50.03 dB		
4.000 MHz	8.000 MHz	1.000 MHz	15.00769 GHz	-74.76 dBm	-26.83 dB	-63.26 dB		
8.000 MHz	12.750 MHz	1.000 MHz	15.01273 GHz*	-36.79 dBm*	11.14 dB*	65.64 dB*		

Fig. 4-5: Example Spectrum emission mask standard file (PowerClass_39_43.xml)



Be sure to follow the structure exactly as shown below or else the R&S ESRP is not able to interpret the XML file and error messages are shown on the screen. Therefore, we recommend you make a copy of an existing file (see [Save As Standard](#) softkey) and edit the copy of the file.

Alternatively, edit the settings using the "Spectrum Emission Mask" softkey and the [Sweep List dialog box](#) and save the XML file with the [Save As Standard](#) softkey afterwards. This way, no modifications have to be done in the XML file itself.

Basically, the file consists of three elements that can be defined:

- The "BaseFormat" element
- The "PowerClass" element

- The "Range" element

The "BaseFormat" element

It carries information about basic settings. In this element only the "ReferencePower" child node has any effects on the measurement itself. The other attributes and child nodes are used to display information about the Spectrum Emission Mask Standard on the measurement screen. The child nodes and attributes of this element are shown in [table 4-2](#).

In the example above (`PowerClass_39_43.xml` under `C:\r_s\instr\sem_std\WCDMA\3GPP`, see [figure 4-5](#)), these attributes are defined as follows:

- `Standard="W-CDMA 3GPP"`
- `LinkDirection="DL"`
- `PowerClass="(39,43)dBm"`

The "PowerClass" element

It is embedded in the "BaseFormat" element and contains settings information about the power classes. Up to four different power classes can be defined. For details refer to the "Sweep List" softkey ("[Sweep List](#)" on page 136) and the corresponding parameter description. The child nodes and attributes of this element are shown in [table 4-3](#).

The "Range" element

This element is embedded in the "PowerClass" element. It contains the settings information of the range. There have to be at least three defined ranges: one reference range and at least one range to either side of the reference range. The maximum number of ranges is 20. Note that the R&S ESRP uses the same ranges in each power class. Therefore, the contents of the ranges of each defined power class have to be identical to the first power class. An exception are the Start and Stop values of the two Limit nodes that are used to determine the power class. Note also, that there are two Limit nodes to be defined: one that gives the limit in absolute values and one in relative values. Make sure units for the Start and Stop nodes are identical for each Limit node.

For details refer to the "Sweep List" softkey ("[Sweep List](#)" on page 136) and the corresponding parameter description. The child nodes and attributes of this element are shown in [table 4-4](#).

The following tables show the child nodes and attributes of each element and show if a child node or attribute is mandatory for the R&S ESRP to interpret the file or not. Since the hierarchy of the XML can not be seen in the tables, either view one of the default files already stored on the R&S ESRP in the "`C:\r_s\instr\sem_std`" directory or check the structure as shown below.

Below, a basic example of the structure of the file is shown, containing all mandatory attributes and child nodes. Note that the "PowerClass" element and the range element are themselves elements of the "BaseFormat" element and are to be inserted where noted. The separation is done here simply for reasons of a better overview. Also, no example values are given here to allow a quick reference to the tables above. *Italic font* shows the placeholders for the values.

- The "BaseFormat" element is structured as follows:
 - `<RS_SEM_ACP_FileFormat Version=""1.0.0.0"">`
`<Name>"Standard"</Name>`
`<Instrument>`
`<Type>"Instrument Type"</Type>`
`<Application>"Application"</Application>`
`</Instrument>`
`<LinkDirection Name=""Name"">`
`<ReferencePower>`
`<Method>"Method"</Method>`
`</ReferencePower>`
`<PowerClass Index=""n"">`
`<!-- For contents of the PowerClass node see`
`table 4-3 -->`
`<!-- Define up to four PowerClass nodes -->`
`</PowerClass>`
`</LinkDirection>`
`</RS_SEM_ACP_File>`
- The "PowerClass" element is structured as follows:
 - `<PowerClass Index=""n"">`
`<StartPower Unit=""dBm"" InclusiveFlag=""true"" Value=""StartPowerValue""/>`
`<StopPower Unit=""dBm"" InclusiveFlag=""false"" Value=""StopPowerValue""/>`
`<DefaultLimitFailMode>"Limit Fail Mode"</DefaultLimitFailMode>`
`<Range Index=""n"">`
`<!-- For contents of the Range node see table 4-4 -->`
`<!-- Define up to twenty Range nodes -->`
`</Range>`
`...`
`</PowerClass>`
- The "Range" element is structured as follows:
 - `<Range Index=""n"">`
`<Name=""Name"">`
`<ChannelType>"Channel Type"</Channel Type>`
`<WeightingFilter>`
`<Type>"FilterType"</Type>`
`<RollOffFactor>"Factor"</RollOffFactor>`
`<Bandwidth>"Bandwidth"</Bandwidth>`
`</WeightingFilter>`
`<FrequencyRange>`
`<Start>"RangeStart"</Start>`
`<Stop>"RangeStop"</Stop>`
`</FrequencyRange>`
`<Limit>`
`<Start Unit=""Unit"" Value=""Value""/>`
`<Stop Unit=""Unit"" Value=""Value""/>`
`</Limit>`
`<Limit>`
`<Start Unit=""Unit"" Value=""Value""/>`
`<Stop Unit=""Unit"" Value=""Value""/>`

```

</Limit>
<RBW Bandwidth=""Bandwidth"" Type=""FilterType""/>
<VBW Bandwidth=""Bandwidth""/>
<Detector>"Detector"</Detector>
<Sweep Mode=""SweepMode"" Time=""SweepTime""/>
<Amplitude>
<ReferenceLevel Unit=""dBm"" Value=""Value""/>
<RFAttenuation Mode=""Auto"" Unit=""dB"" Value=""Value""/>
<Preamplifier State=""State""/>
</Amplitude>
</Range>

```

Table 4-2: Attributes and child nodes of the BaseFormat element

Child Node	Attribute	Value	Parameter Description	Mand.
	FileFormatVersion	1.0.0.0		Yes
	Date	YYYY-MM-DD HH:MM:SS	Date in ISO 8601 format	No
Name		<string>	Name of the standard	Yes
Instrument	Type	FSL	Name of the instrument	No
	Application	SA K72 K82	Name of the application	No
LinkDirection	Name	Downlink Uplink None		Yes
	ShortName	DL UL		No
Reference- Power				Yes
Method	TX Channel Power TX Channel Peak Power			Yes
Reference- Channel	<string>			No

Table 4-3: Attributes and child nodes of the PowerClass element

Child Node	Attribute	Value	Parameter Description	Mand.
StartPower	Value	<power in dBm>	The start power must be equal to the stop power of the previous power class. The StartPower value of the first range is -200	Yes
	Unit	dBm		Yes
	InclusiveFlag	true		Yes
StopPower	Value	<power in dBm>	The stop power must be equal to the start power of the next power class. The StopPower value of the last range is 200	Yes
	Unit	dBm		

Child Node	Attribute	Value	Parameter Description	Mand.
	InclusiveFlag	false		Yes
DefaultLimitFailMode		Absolute Relative Absolute and Relative Absolute or Relative		Yes

Table 4-4: Attributes and child nodes of the Range element (normal ranges)

Child Node	Attribute	Value	Parameter Description	Mand.
	Index	0...19	Indices are continuous and have to start with 0	Yes
	Name	<string>	Name of the range	Only if ReferenceChannel contains a name and the range is the reference range
	Short-Name	<string>	Short name of the range	No
ChannelType		TX Adjacent		Yes
WeightingFilter				Only if ReferencePower method is TX Channel Power and the range is the reference range
Type		RRC CFilter	Type of the weighting filter	Yes
Roll Off Factor		0...1	Excess bandwidth of the filter	Only if the filter type is RRC
Bandwidth		<bandwidth in Hz>	Filter bandwidth	Only if the filter type is RRC
FrequencyRange				Yes
Start		<frequency in Hz>	Start value of the range	Yes
Stop		<frequency in Hz>	Stop value of the range	Yes
Limit		dBm/Hz dBm dBc dBr dB	A Range must contain exactly two limit nodes; one of the limit nodes has to have a relative unit (e.g. dBc), the other one must have an absolute unit (e.g. dBm)	Yes
Start	Value	<numeric_value>	Power limit at start frequency	Yes
	Unit	dBm/Hz dBm dBc dBr dB	Sets the unit of the start value	
Stop	Value	<numeric_value>	Power limit at stop frequency	

Child Node	Attribute	Value	Parameter Description	Mand.
	Unit	dBm/Hz dBm dBc dBr dB	Sets the unit of the stop value	
LimitFailMode		Absolute Relative Absolute and Relative Absolute or Relative	If used, it has to be identical to DefaultLimitFailMode	No
RBW	Bandwidth	<bandwidth in Hz>	"RBW" on page 137	Yes
	Type	NORM PULS CFIL RRC		No
VBW	Bandwidth	<bandwidth in Hz>	"VBW" on page 138	Yes
Detector		NEG POS SAMP RMS AVER QUAS	If used, it has to be identical in all ranges.	No
Sweep	Mode	Manual Auto	"Sweep Time Mode" on page 138	Yes
	Time	<time in sec>	"Sweep Time" on page 138	No
Amplitude				No
ReferenceLevel	Value	<power in dBm>	"Ref. Level" on page 138	Yes, if the ReferenceLevel child node is used
	Unit	dBm	Defines dBm as unit	Yes, if the ReferenceLevel node is used
RFAttenuation	Mode	Manual Auto	"RF Att. Mode" on page 138	Yes, if the ReferenceLevel child node is used
Preamplifier		ON OFF	"Preamp" on page 138	Yes

ASCII File Export Format (Spectrum Emission Mask)

The first part of the file lists information about the signal analyzer and the general setup. For a detailed description refer to [chapter 4.3.1.6, "ASCII File Export Format"](#), on page 273.

File contents	Description
RefType; CPOWER; TxBandwidth;9540000;Hz Filter State; ON; Alpha;0.22;	reference range setup, for details see "Edit Reference Range" on page 141
PeaksPerRange;1; Values;4;	evaluation list information
0;-22500000;-9270000;1000000;2986455000;-74.762840270996094; -10.576210021972656;-45.762840270996094;PASS; 1;-9270000;-4770000;1000000;2991405000;-100.17695617675781; -35.990325927734375;-1.490325927734375;PASS 3;4770000;9270000;1000000;3005445000;-100.17695617675781; -35.990325927734375;-1.490325927734375;PASS; 4;9270000;22500000;1000000;3018225000;-74.762840270996094; -10.576210021972656;-45.762840270996094;PASS;	information about each peak: <range number>; <start frequency>; <stop frequency>; <resolution bandwidth of range>; <frequency of peak>; <absolute power in dBm of peak>; <relative power in dBc of peak (related to the channel power)>; <distance to the limit line in dB (positive value means above the limit)>; <limit fail (pass = 0, fail =1)>;

Fast Spectrum Emission Mask Measurements

In order to improve the performance of the R&S ESRP for spectrum emission mask measurements, a "Fast SEM" mode is available. If this mode is activated, several consecutive ranges with identical sweep settings are combined to one sweep internally, which makes the measurement considerably more efficient. The displayed results remain unchanged and still consist of several ranges. Thus, measurement settings that apply only to the results, such as limits or transducer factors, can nevertheless be defined individually for each range.

Prerequisites

"Fast SEM" mode is available if the following criteria apply:

- The frequency ranges are consecutive, without frequency gaps
- The following sweep settings are identical:
 - "Filter Type", see ["Filter Type"](#) on page 137
 - "RBW", see ["RBW"](#) on page 137
 - "VBW", see ["VBW"](#) on page 138
 - "Sweep Time Mode", see ["Sweep Time Mode"](#) on page 138
 - "Ref Level", see ["Ref. Level"](#) on page 138
 - "Rf Att. Mode", see ["RF Att. Mode"](#) on page 138
 - "RF Attenuator", see ["RF Att. Mode"](#) on page 138
 - "Preamp", see ["Preamp"](#) on page 138

Activating Fast SEM mode

"Fast SEM" mode is activated in the sweep list (see ["Fast SEM"](#) on page 137) or using a remote command. Activating the mode for one range automatically activates it for all ranges in the sweep list.

In the provided XML files for the Spectrum Emission Mask measurement, "Fast SEM" mode is activated by default.

SCPI command:

`[SENSe:]ESpectrum:HighSpeed` on page 573

Consequences


When the "Fast SEM" mode is activated, the ranges for which these criteria apply are displayed as one single range. The sweep time is defined as the sum of the individual sweep times, initially, but can be changed. When the "Fast SEM" mode is deactivated, the originally defined individual sweep times are reset.



If "Symmetrical Setup" mode is active when "Fast SEM" mode is activated, not all sweep list settings can be configured symmetrically automatically (see also ["Symmetric Setup"](#) on page 140).

Any other changes to the sweep settings of the combined range are applied to each included range and remain changed even after deactivating "Fast SEM" mode.

Example

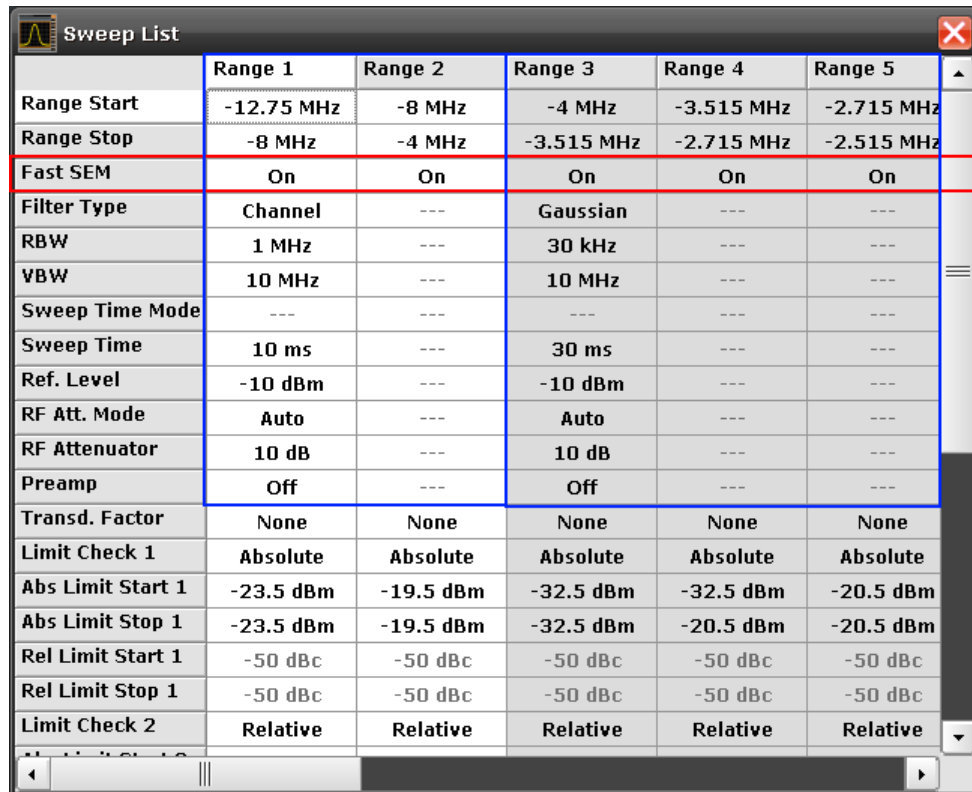


	Range 1	Range 2	Range 3	Range 4	Range 5	
Range Start	-12.75 MHz	-8 MHz	-4 MHz	-3.515 MHz	-2.715 MHz	
Range Stop	-8 MHz	-4 MHz	-3.515 MHz	-2.715 MHz	-2.515 MHz	
Fast SEM	On	On	On	On	On	
Filter Type	Channel	---	Gaussian	---	---	
RBW	1 MHz	---	30 kHz	---	---	
VBW	10 MHz	---	10 MHz	---	---	
Sweep Time Mode	---	---	---	---	---	
Sweep Time	10 ms	---	30 ms	---	---	
Ref. Level	-10 dBm	---	-10 dBm	---	---	
RF Att. Mode	Auto	---	Auto	---	---	
RF Attenuator	10 dB	---	10 dB	---	---	
Preamp	Off	---	Off	---	---	
Transd. Factor	None	None	None	None	None	
Limit Check 1	Absolute	Absolute	Absolute	Absolute	Absolute	
Abs Limit Start 1	-23.5 dBm	-19.5 dBm	-32.5 dBm	-32.5 dBm	-20.5 dBm	
Abs Limit Stop 1	-23.5 dBm	-19.5 dBm	-32.5 dBm	-20.5 dBm	-20.5 dBm	
Rel Limit Start 1	-50 dBc	-50 dBc	-50 dBc	-50 dBc	-50 dBc	
Rel Limit Stop 1	-50 dBc	-50 dBc	-50 dBc	-50 dBc	-50 dBc	
Limit Check 2	Relative	Relative	Relative	Relative	Relative	

Fig. 4-6: Sweep list using Fast SEM mode

In [figure 4-6](#), a sweep list is shown for which Fast SEM is activated. The formerly 5 separately defined ranges are combined to 2 sweep ranges internally.

4.1.1.6 Measuring Spurious Emissions

The Spurious Emissions measurement defines a measurement that monitors unwanted RF products outside the assigned frequency band generated by an amplifier. The spurious emissions are usually measured across a wide frequency range. The Spurious Emissions measurement allows a flexible definition of all parameters. A result table indicates the largest deviations of the absolute power from the limit line for each range, and the results can be checked against defined limits automatically.

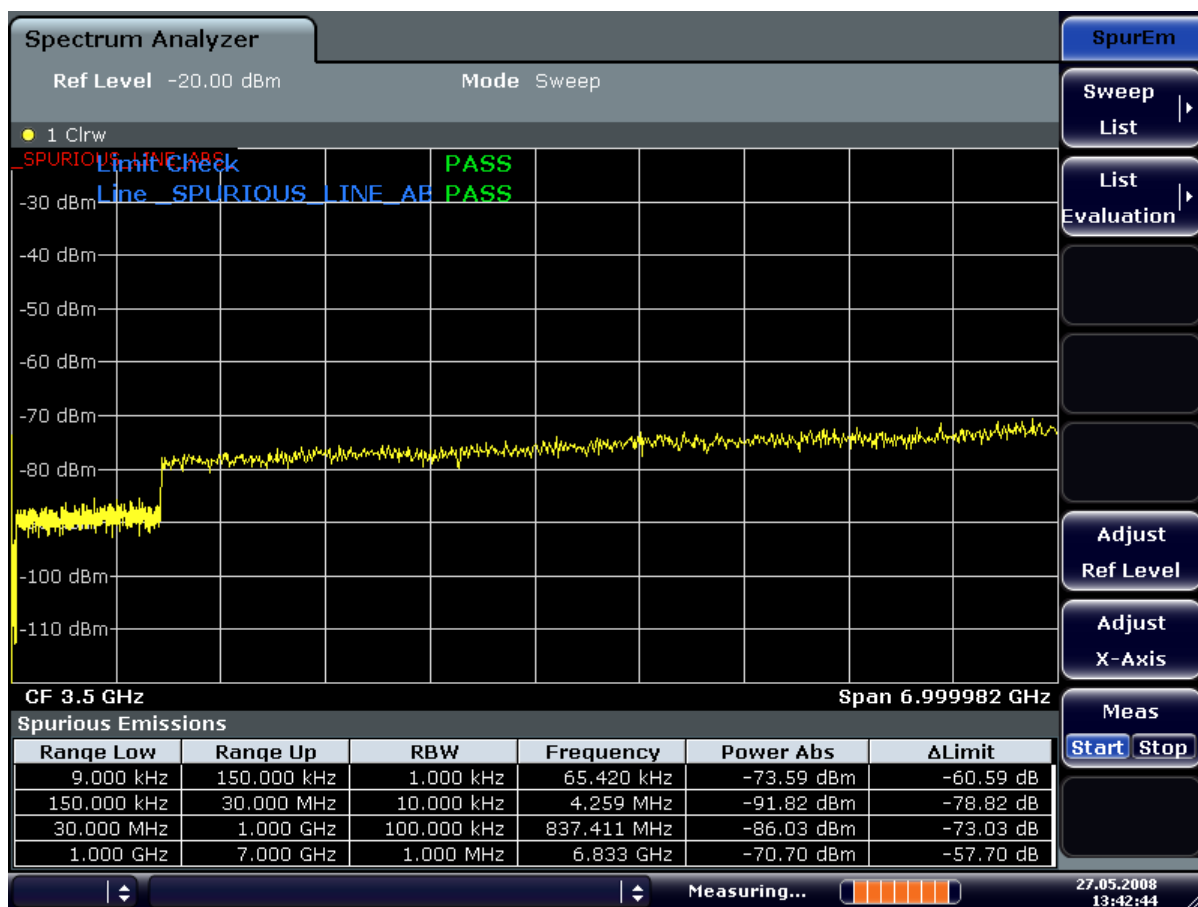

Spurious Emissions measurements are performed using the "Spurious Emissions" softkey in the "Measurement" menu (see ["Spurious Emissions"](#) on page 167).

Most parameters are defined in the "Sweep List" dialog box (see ["Sweep List dialog box"](#) on page 167). For information on other parameters, see the corresponding softkeys (["Spurious Emissions"](#) on page 167).

Conditions for ranges

The following rules apply to ranges:

- The minimum span of a range is 20 Hz.
- The individual ranges must not overlap (but need not directly follow one another).
- The maximum number of ranges is 20.
- The maximum number of sweep points in all ranges is limited to 100001.

In order to change the start/stop frequency of the first/last range, select the appropriate span with the SPAN key. If you set a span that is smaller than the overall span of the ranges, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz. The first and last ranges are adapted to the given span as long as the minimum span of 20 Hz is not violated.



Defining ranges by remote control

In Spurious Emissions measurements, there are no remote commands to insert new ranges between existing ranges directly. However, you can delete or re-define the existing ranges to create the required order.

A remote command example for defining parameters and ranges in spurious emissions measurements can be found in chapter 7 "Remote Control – Programming Examples" of the Operating manual on the CD-ROM.

Result Evaluation

In addition to the graphical results of the spurious measurement displayed in the diagram, a result table can be displayed to evaluate the limit check results (see also ["Working with Limit Lines in Spurious Measurements"](#) on page 164). Which data is displayed in the evaluation list can be defined in the "List Evaluation" menu (see ["List Evaluation"](#) on page 171).


The following information is provided in the evaluation list:

Column	Description
Range Low	Frequency range start for range the peak value belongs to
Range Up	Frequency range stop for range the peak value belongs to
RBW	RBW of the range
Frequency	Frequency at the peak value
Power Abs	Absolute power level at the peak value
Δ Limit	Deviation of the absolute power level from the defined limit for the peak value

By default, one peak per range is displayed. However, you can change the settings to:

- Display all peaks ("Details ON")
- Display a certain number of peaks per range ("Details ON" + "Peaks per Range")
- Display only peaks that exceed a threshold ("Margin")

In addition to listing the peaks in the list evaluation, detected peaks can be indicated by blue squares in the diagram ("Show Peaks").

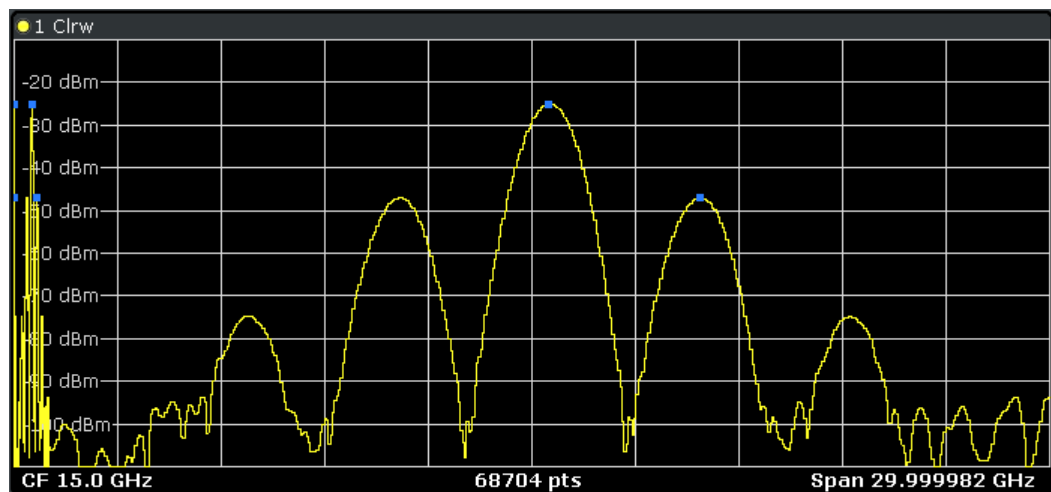

Furthermore, you can save the evaluation list to a file ("Save Evaluation List").

Retrieving Results via Remote Control

The spurious measurement results can be retrieved using the `CALC:PSE?` command from a remote computer (see `CALCulate<n>:PEAKsearch|PSEarch[:IMMEDIATE]` for a detailed description).


In addition, the `TRACe<n>:DATA` command queries the trace data. In case of spurious emission measurements, the trace data is the power levels that have been measured for each sweep point (max. 691).

Working with Limit Lines in Spurious Measurements

Limit lines allow you to check the measured data against specified limit values. Generally, it is possible to define limit lines for any measurement in Spectrum mode using the `LINES` key. For Spurious measurements, however, a special limit line is available via the "Sweep List", and it is strongly recommended that you use only this limit line definition.

In the "Sweep List" you can define a limit line that varies its level according to the specified frequency ranges. A distinguished limit line ("`_SPURIOUS_LINE_ABS`") is automatically defined according to the current "Sweep List" settings every time the settings change.

If a limit check is activated in the "Sweep List", the "`_SPURIOUS_LINE_ABS`" limit line is indicated by a red line in the display, and the result of the limit check is indicated at the top of the diagram. Note that only "Pass" or "Fail" is indicated; a "margin" function as for general limit lines is not available. Also, only absolute limits can be checked, not relative ones.

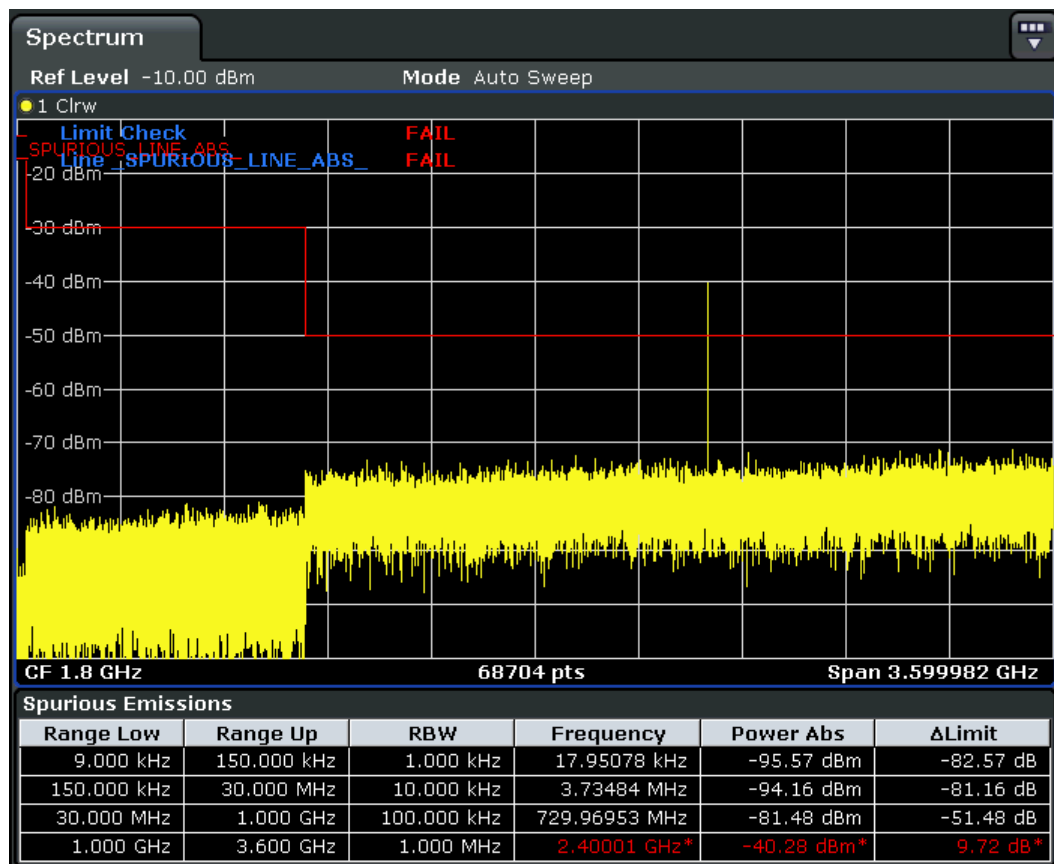

As for general limit lines, the results of each limit line check are displayed (here: "_SPURIOUS_LINE_ABS"), as well as the combined result for all defined limit lines ("Limit Check").

In addition to the limit line itself, the largest deviations of the absolute power from the limit line for each range are displayed in the evaluation list if the limit check is activated. Values that exceed the limit are indicated in red and by an asterisk (*).



Although a margin functionality is not available for the limit check, a margin (threshold) for the peak values to be displayed in the evaluation list can be defined in the list evaluation settings. Furthermore, you can define how many peaks per range are listed. For details see ["Result Evaluation"](#) on page 163.

To define a limit check for spurious measurements

The limit check is defined in the "Sweep List" dialog box, see ["Sweep List dialog box"](#) on page 167 for details.

1. Press the MEAS CONFIG key to open the main "Spurious" menu.
2. Press the "Sweep List" softkey to open the "Sweep List" dialog box.

3. In the "Sweep List" dialog box, define the limit line for each range using the "Abs Limit Start" and "Abs Limit Stop" settings.
The limit values are absolute values for the absolute power level.
4. Set the "Limit Check" setting to "Absolute" to activate the limit check.
5. Close the "Sweep List" dialog box.
The limit line and the result of the limit check are displayed in the diagram and the result table displays the largest deviations from the limit for each range.
6. To reduce the number of displayed delta values, change the margin (threshold) for peak detection in the list evaluation. By default, this value is very high (200 dB), so that initially all peaks are detected.
In the "Spurious" menu, press "List Evaluation > Margin" and enter a value in dB.
Only delta values that exceed this margin are displayed in the result table.

Softkeys for Spurious Emissions Measurement

Spurious Emissions.....	167
L Sweep List.....	167
L Sweep List dialog box.....	167
L Range Start / Range Stop.....	167
L Filter Type.....	168
L RBW.....	168
L VBW.....	168
L Sweep Time Mode.....	168
L Sweep Time.....	168
L Detector.....	168
L Ref. Level.....	168
L RF Att. Mode.....	168
L RF Attenuator.....	169
L Preamp.....	169
L Sweep Points.....	169
L Stop After Sweep.....	169
L Transd. Factor.....	169
L Limit Check 1-4.....	169
L Abs Limit Start.....	169
L Abs Limit Stop.....	170
L Close Sweep List.....	170
L Insert before Range.....	170
L Insert after Range.....	170
L Delete Range.....	170
L Adjust Ref Lvl (span > 0).....	170
L Adjust X-Axis.....	171
L List Evaluation.....	171
L List Evaluation (On/Off).....	171
L Details On/Off.....	171
L Margin.....	171
L Peaks per Range.....	171
L Show Peaks.....	171
L Save Evaluation List.....	171

L ASCII File Export.....	172
L Decim Sep.....	172
L Adjust Ref Lvl (span > 0).....	172
L Adjust X-Axis.....	172
L Meas Start/Stop.....	172

Spurious Emissions

Opens a submenu to configure the Spurious Emissions measurement and immediately starts a measurement.

For general information on performing Spurious Emissions measurements see [chapter 4.1.1.6, "Measuring Spurious Emissions"](#), on page 161.

Remote command:

[SENSe:] SWEep:MODE on page 572

Sweep List ← Spurious Emissions

Opens a submenu to edit the sweep list and displays the "Sweep List" dialog box.

Note: If you edit the sweep list, always follow the rules described in [chapter 4.1.1.6, "Measuring Spurious Emissions"](#), on page 161.

Sweep List dialog box ← Sweep List ← Spurious Emissions

After a preset, the sweep list contains a set of default ranges and parameters. For each range, you can change the parameters listed below. To insert or delete ranges, use the "Insert Before Range", "Insert After Range", "Delete Range" softkeys. The measurement results are not updated during editing but on closing the dialog box.

For details and limitations regarding spurious emissions configuration, see [chapter 4.1.1.6, "Measuring Spurious Emissions"](#), on page 161.

Range Start / Range Stop ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the start frequency/stop frequency of the selected range. Follow the rules described in [chapter 4.1.1.6, "Measuring Spurious Emissions"](#), on page 161.

In order to change the start/stop frequency of the first/last range, select the appropriate span with the SPAN key. If you set a span that is smaller than the overall span of the ranges, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz. The first and last ranges are adapted to the given span as long as the minimum span of 20 Hz is not violated.

Frequency values for each range have to be defined relative to the center frequency. The reference range has to be centered on the center frequency. The minimum span of the reference range is given by the current TX Bandwidth.

Remote command:

[SENSe:] LIST:RANGe<range>[:FREQuency]:START on page 565

[SENSe:] LIST:RANGe<range>[:FREQuency]:STOP on page 565

Filter Type ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the filter type for this range. For details on filters see also [chapter 4.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 239.

Remote command:

`[SENSe:]LIST:RANGe<range>:FILTer:TYPE` on page 564

RBW ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the RBW value for this range.

Remote command:

`[SENSe:]LIST:RANGe<range>:BANDwidth[:RESolution]` on page 562

VBW ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the VBW value for this range.

Remote command:

`[SENSe:]LIST:RANGe<range>:BANDwidth:VIDeo` on page 562

Sweep Time Mode ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Activates or deactivates the auto mode for the sweep time.

Remote command:

`[SENSe:]LIST:RANGe<range>:SWEep:TIME:AUTO` on page 568

Sweep Time ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the sweep time value for the range.

Remote command:

`[SENSe:]LIST:RANGe<range>:SWEep:TIME` on page 568

Detector ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the detector for the range. For details refer to [chapter 4.3.1.5, "Detector Overview"](#), on page 272.

Remote command:

`[SENSe:]LIST:RANGe<range>:DETector` on page 564

Ref. Level ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the reference level for the range.

Remote command:

`[SENSe:]LIST:RANGe<range>:RLEVel` on page 568

RF Att. Mode ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Activates or deactivates the auto mode for RF attenuation.

Remote command:

`[SENSe:]LIST:RANGe<range>:INPut:ATTenuation:AUTO` on page 566

RF Attenuator ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the attenuation value for that range.

Remote command:

[\[SENSe:\]LIST:RANGe<range>:INPut:ATTenuation](#) on page 565

Preamp ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Switches the preamplifier on or off.

Remote command:

[\[SENSe:\]LIST:RANGe<range>:INPut:GAIN:STATe](#) on page 566

Sweep Points ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the number of sweep points for the specified range.

Remote command:

[\[SENSe:\]LIST:RANGe<range>:POINTs](#) on page 567

Stop After Sweep ← Sweep List dialog box ← Sweep List ← Spurious Emissions

This command configures the sweep behavior.

"ON" The R&S ESRP stops after one range is swept and continues only if you confirm (a message box is displayed).

"OFF" The R&S ESRP sweeps all ranges in one go.

Remote command:

[\[SENSe:\]LIST:RANGe<range>:BREak](#) on page 563

Transd. Factor ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets a transducer for the specified range. You can only choose a transducer that fulfills the following conditions:

- The transducer overlaps or equals the span of the range.
- The x-axis is linear.
- The unit is dB.

Remote command:

[\[SENSe:\]LIST:RANGe<range>:TRANsducer](#) on page 568

Limit Check 1-4 ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the type of limit check for all ranges. Possible states are:

Absolute	Checks the absolute limits defined.
None	No limit check performed.

The limit settings are only available if limit check is activated ("Absolute"). If activated, the limit line and the results of the check are indicated in the diagram.

Remote command:

[\[SENSe:\]LIST:RANGe<range>:LIMit:STATe](#) on page 567

[CALCulate<n>:LIMit<k>:FAIL?](#) on page 531

Abs Limit Start ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets an absolute limit value at the start frequency of the range [dBm].

This parameter is only available if the limit check is set to "Absolute" (see ["Limit Check 1-4"](#) on page 169).

Remote command:

`[SENSe:]LIST:RANGe<range>:LIMit:START` on page 566

Abs Limit Stop ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets an absolute limit value at the stop frequency of the range [dBm].

This parameter is only available if the limit check is set to "Absolute" (see ["Limit Check 1-4"](#) on page 169).

Remote command:

`[SENSe:]LIST:RANGe<range>:LIMit:STOP` on page 567

Close Sweep List ← Sweep List ← Spurious Emissions

Closes the "Sweep List" dialog box and updates the measurement results.

Insert before Range ← Sweep List ← Spurious Emissions

Inserts a new range to the left of the currently focused range. The range numbers of the currently focused range and all higher ranges are increased accordingly. The maximum number of ranges is 20.

For further details refer to ["Ranges and Range Settings"](#) on page 147.

Insert after Range ← Sweep List ← Spurious Emissions

Inserts a new range to the right of the currently focused range. The range numbers of all higher ranges are increased accordingly. The maximum number of ranges is 20.

For further details refer to ["Ranges and Range Settings"](#) on page 147.

Delete Range ← Sweep List ← Spurious Emissions

Deletes the currently focused range, if possible. The range numbers are updated accordingly. For further details refer to ["Ranges and Range Settings"](#) on page 147.

Remote command:

`[SENSe:]LIST:RANGe<range>:DELeTe` on page 563

Adjust Ref Lvl (span > 0) ← Sweep List ← Spurious Emissions

Adjusts the reference level to the measured total power of the signal. The softkey is activated after the first sweep with active measurement of the occupied bandwidth has been completed and the total power of the signal is thus known.

Adjusting the reference level ensures that the signal path will not be overloaded and the dynamic range not limited by too low a reference level. Since the measurement bandwidth for channel power measurements is significantly lower than the signal bandwidth, the signal path may be overloaded although the trace is distinctly below the reference level. If the measured channel power is equal to the reference level, the signal path cannot be overloaded.

Remote command:

`[SENSe:]POWER:ACHannel:PRESet:RLEVel` on page 538

Adjust X-Axis ← Sweep List ← Spurious Emissions

Adjusts the frequency axis of measurement diagram automatically so that the start frequency matches the start frequency of the first sweep range, and the stop frequency of the last sweep range.

List Evaluation ← Spurious Emissions

Opens a submenu to edit the list evaluation settings.

For more information on list evaluation see ["Result Evaluation"](#) on page 163.

List Evaluation (On/Off) ← List Evaluation ← Spurious Emissions

Activates or deactivates the list evaluation.

Remote command:

[CALCulate<n>:PEAKsearch|PSEarch:AUTO](#) on page 569

[TRACe<n>:DATA](#) on page 538

Details On/Off ← List Evaluation ← Spurious Emissions

Configures the list contents.

On	Displays the whole list contents.
Off	Displays only the highest peaks (one peak per range).

Margin ← List Evaluation ← Spurious Emissions

Opens an edit dialog box to enter the margin used for the limit check/peak search.

Only peaks that exceed the limit and are larger than the specified margin are indicated in the evaluation list.

Remote command:

[CALCulate<n>:PEAKsearch|PSEarch:MARGin](#) on page 496

Peaks per Range ← List Evaluation ← Spurious Emissions

Opens an edit dialog box to enter the number of peaks per range that are stored in the list. Once the selected number of peaks has been reached, the peak search is stopped in the current range and continued in the next range. The maximum value is 50.

Remote command:

[CALCulate<n>:PEAKsearch|PSEarch:SUBRanges](#) on page 570

Show Peaks ← List Evaluation ← Spurious Emissions

In the diagram, marks all peaks with blue squares that have been listed during an active list evaluation.

Remote command:

[CALCulate<n>:PEAKsearch|PSEarch:PSHow](#) on page 570

Save Evaluation List ← List Evaluation ← Spurious Emissions

Opens the "ASCII File Export Name" dialog box and a submenu to save the result in ASCII format to a specified file and directory.

Remote command:

[MMEMory:STORe<n>:LIST](#) on page 587

ASCII File Export ← Save Evaluation List ← List Evaluation ← Spurious Emissions

Saves the evaluation list in ASCII format to a specified file and directory.

Remote command:

[MMEMory:STORe<n>:LIST](#) on page 587

Decim Sep ← Save Evaluation List ← List Evaluation ← Spurious Emissions

Selects the decimal separator with floating-point numerals for the ASCII Trace export to support evaluation programs (e.g. MS-Excel) in different languages. The values '.' (decimal point) and ',' (comma) can be set.

Remote command:

[FORMat:DEXPort:DSEParator](#) on page 656

Adjust Ref Lvl (span > 0) ← Spurious Emissions

Adjusts the reference level to the measured total power of the signal. The softkey is activated after the first sweep with active measurement of the occupied bandwidth has been completed and the total power of the signal is thus known.

Adjusting the reference level ensures that the signal path will not be overloaded and the dynamic range not limited by too low a reference level. Since the measurement bandwidth for channel power measurements is significantly lower than the signal bandwidth, the signal path may be overloaded although the trace is distinctly below the reference level. If the measured channel power is equal to the reference level, the signal path cannot be overloaded.

Remote command:

[\[SENSe:\]POWER:ACHannel:PRESet:RLEVEL](#) on page 538

Adjust X-Axis ← Spurious Emissions

Adjusts the frequency axis of measurement diagram automatically so that the start frequency matches the start frequency of the first sweep range, and the stop frequency of the last sweep range.

Meas Start/Stop ← Spurious Emissions

Aborts/restarts the current measurement and displays the status:

"Start"	The measurement is currently running.
"Stop"	The measurement has been stopped, or, in single sweep mode, the end of the sweep has been reached.

4.1.1.7 Measuring the Power in Zero Span

Using the power measurement function, the R&S ESRP determines the power of the signal in zero span by summing up the power at the individual measurement points and dividing the result by the number of measurement points. Thus it is possible to measure the power of TDMA signals during transmission, for example, or during the muting phase. Both the mean power and the RMS power can be measured.

For this measurement, the sample detector is activated.

Measurement results

Several different power results can be determined simultaneously:

Mode	Description
Peak	Peak value from the points of the displayed trace or a segment thereof.
RMS	RMS value from the points of the displayed trace or a segment thereof.
Mean	Mean value from the points of the displayed trace or a segment thereof. The linear mean value of the equivalent voltages is calculated. For example to measure the mean power during a GSM burst
Std Dev	The standard deviation of the measurement points from the mean value.

The result is displayed in the marker results, indicated by "Power" and the selected power mode, e.g. "RMS". The measured values are updated after each sweep or averaged over a user-defined number of sweeps (trace averaging).

You can query the measurement results with the commands described in ["Retrieving Measurement Results"](#) on page 610.

Restricting the measurement range using limit lines

The range of the measured signal to be evaluated for the power measurement can be restricted using limit lines. The left and right limit lines (S1, S2) define the evaluation range and are indicated by vertical red lines in the diagram. If activated, the power results are only calculated from the levels within the limit lines.

For example, if both the on and off phase of a burst signal are displayed, the measurement range can be limited to the transmission or to the muting phase. The ratio between signal and noise power of a TDMA signal for instance can be measured using a measurement as a reference value and then varying the measurement range.

To measure the power in the time domain

1. Press the "Time Domain Power" softkey to activate the power measurement.
2. Select the type of power measurement using the "Peak", "Mean", "RMS" or "Std Dev" softkeys.
3. To limit the power evaluation range, switch on the limits ("Limits (On/Off)" softkey) and enter the limits using the "Left Limit" and "Right Limit" softkeys.

Softkeys for Time Domain Power Measurements

Time Domain Power.....	174
L Peak.....	174
L RMS.....	174
L Mean.....	174
L Std Dev.....	174

L Limits (On/Off).....	174
L Left Limit.....	175
L Right Limit.....	175

Time Domain Power

Activates the power measurement in zero span and opens a submenu to configure the power measurement. For more details see also [chapter 4.1.1.7, "Measuring the Power in Zero Span"](#), on page 172.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY[:STATe]` on page 610

Peak ← Time Domain Power

Activates the calculation of the peak value from the points of the displayed trace or a segment thereof.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PPEak[:STATe]` on page 615

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PPEak:RESult?` on page 614

RMS ← Time Domain Power

Activates the calculation of the RMS value from the points of the displayed trace or a segment thereof.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:RMS[:STATe]` on page 617

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:RMS:RESult?` on page 616

Mean ← Time Domain Power

Activates the calculation of the mean value from the points of the displayed trace or a segment thereof. The linear mean value of the equivalent voltages is calculated.

This can be used for instance to measure the mean power during a GSM burst.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:MEAN[:STATe]` on page 613

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:MEAN:RESult?` on page 612

Std Dev ← Time Domain Power

Activates the calculation of the standard deviation of measurement points from the mean value and displays them as measured value. The measurement of the mean power is automatically switched on at the same time.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:SDEviation[:STATe]`
on page 619

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:SDEviation:RESult?`
on page 618

Limits (On/Off) ← Time Domain Power

Switches the limitation of the evaluation range on or off. Default setting is off.

If switched off, the evaluation range is not limited. If switched on, the evaluation range is defined by the left and right limit. If only one limit is set, it corresponds to the left limit and the right limit is defined by the stop frequency. If the second limit is also set, it defines the right limit.

Remote command:

`CALCulate<n>:MARKer<m>:X:SLIMits[:STATe]` on page 505

Left Limit ← Time Domain Power

Opens an edit dialog box to enter a value for line 1.

Remote command:

`CALCulate<n>:MARKer<m>:X:SLIMits:LEFT` on page 504

Right Limit ← Time Domain Power

Opens an edit dialog box to enter a value for line 2.

Remote command:

`CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT` on page 505

4.1.1.8 Performing EMI Measurements

The R&S ESRP features EMI measurement functionality in Spectrum mode. This functionality is suitable for measurements according to EMS standards.

The EMI functionality is integrated into the measurement and marker functions that are available in Spectrum mode.

Measurement Background

EMI measurements can be very time-consuming, especially if weighting detectors are required by the standard. In addition, EMC standards specify various procedures to locate local EMI maxima. Such procedures include movements of an absorbing clamp, variations in the height of the test antenna or the rotation of the DUT.

Covering all test setups with one of the (slow) EMI weighting detectors over the required frequency range would lead to unacceptable measurement times.

Splitting the measurement procedure into several stages eliminates this problem.

The first stage, or peak search, is used to get a rough idea about the location of peak powers that may indicate interference over the required frequency range. You can use a detector that allows for a fast sweep time, e.g. the peak detector.

During the second stage, or final evaluation, the analyzer performs the actual EMC test, with detectors designed for and required by EMC standards. To keep measurement times brief, the analyzer measures only those frequencies you have marked with markers or delta markers. You can assign a different detector to every marker and thus test a particular frequency easily for compliance.

Selecting a Detector

For more information on EMI detectors see [chapter 3.2.3, "Detectors"](#), on page 46.


Selecting the Measurement Bandwidth

For more information on the measurement bandwidth in EMI test setups see [chapter 3.2.1, "Measurement Bandwidth"](#), on page 44.

Setting the Number of Sweep Points

The number of sweep points defines the number of measurement values collected during one sweep. Thus, increasing the sweep points also increases the accuracy of the results regarding the frequency resolution.


Because EMI measurements often cover a large frequency range you should define an adequate number of sweep points, especially when performing the measurement on a logarithmic axis. Like on a linear axis, the distance from one sweep point to the next is calculated graphically on a logarithmic axis, and is not based on the frequency itself. Thus, the frequency resolution between two sweep points deteriorates with higher frequencies.

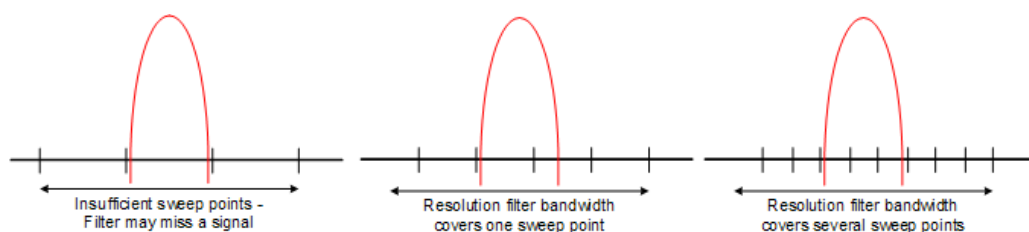

The resolution bandwidth should cover at least one sweep point (more is better). If this condition is not met, signals or interferences could be missed during final evaluation of narrowband interferers.


Example:

 Linear axis:



In case of a linear axis, the distance between the sweep points is equal, e.g. 200 kHz.

 Logarithmic axis:



In case of a logarithmic axis, the distance between sweep points is variable. In the spectrum from 10 Hz to 100 Hz, the distance is a few Hz. Between 100 MHz and 1 GHz, the distance is several MHz.

The R&S ESRP supports a maximum of 200000 sweep points. This number is based on typical bands measured with a single resolution bandwidth. There are sufficient sweep points to make sure that a signal is found when doing the final evaluation. Even when covering 30 MHz to 1 GHz with logarithmic scaling and 120 kHz RBW.

Controlling V-Networks

For more information on Line Impedance Stability Networks see [chapter 3.2.6, "V-Networks Control \(LISN\)"](#), on page 52.

Using Transducer Factors

For more information on transducer factors see [chapter 3.2.7, "Transducers"](#), on page 54.

Performing a Peak Search

The purpose of a peak search is to find signals with a high interference level quickly. Usually the peak search is done with a fast detector like the peak or average detector. The marker peak search is the basis for a possible final evaluation of interferences with the detectors specific to EMI measurements.

You can control markers in the [Marker Configuration](#) dialog box or turn them on with the "Marker <x>" softkey. The results of the peak search are summarized in the [Marker Table](#).

There are two ways to perform a peak search, automatic and manual.

Automatic peak search

By default, the automatic peak search starts as soon as you turn on the EMI measurement marker. During the peak search, the application looks for the strongest peaks in the frequency range you are measuring and positions a marker on those peaks. When a limit line is assigned to the trace, the level difference between the trace and the limit line determines the peak search. The number of peaks it will find during the search depends on the number of markers you have turned on. You can use up to 16 markers simultaneously.

The first marker is always on the most powerful peak while the last marker is always on the least powerful peak. If the application finds a more powerful peak, it will move one of the markers to that position and adjust the order of the other markers.

The application allows you to distribute markers among several traces. If you do so, the marker with the lowest number assigned to a particular trace will be positioned on the most powerful peak of the corresponding trace.

Manual peak search

If you turn the automatic peak search off, you can put the markers manually to any frequency you need more information about. You can change the marker position with the rotary knob, the cursor keys or position it to a particular frequency with the number keys.

Setting markers is the same as setting markers in normal spectrum mode. For more information see the manual of the base unit.

Searching for peaks over several traces

You can measure on six traces with a different weighting detector simultaneously.

In that case, the application searches for peaks on all traces separately, given that you have assigned at least one marker to that trace.

A typical selection for EMI measurement is to use the peak and the average detector. If the premeasurement is done, the application would look for peaks on the peak trace and the average trace separately so that the distribution of narrowband and wideband sources of interference can be taken into account.

For example, the frequency of the maximum determined with the average detector can be used for the final measurement performed with this detector and the frequency found in the premeasurement carried out with the peak detector is taken for the final measurement using the quasipeak detector.

Measuring at the Marker Position

Finding peaks with the help of a peak search reduces data to be evaluated and thus measurement time.

The measurement at the marker frequency may have a different detector during the peak search. This way, the measurement consumes much less time because detectors with a long measurement time are needed only at the critical frequency.

The application also allows you to use multiple detectors for the final evaluation. The advantage of multiple detection is that you will only need one test run to see if the results comply with the limits specified in a standard. You can select and assign detectors for EMI markers in the ["Marker Configuration"](#) on page 181 dialog box.

As EMC tests often require special measurement times, you can also specify a dwell time for the measurement with the EMI markers.

The application shows the results in the [Marker Table](#).

Defining a Dwell Time for the Final Measurement

The dwell time defines for how long the R&S ESRP measures the signal at the frequencies of the marker positions. Thus the dwell time defines the amount of data that is included in the detection of the displayed results. As each detector needs a different period of time to fully charge and discharge, the minimum dwell time should not be shorter than the slowest detector in use.

Evaluating the Results

For more information on functionality to evaluate measurement results see [chapter 3.2.5, "AF Demodulation"](#), on page 52 and [chapter 3.4.3, "\(Limit\) Lines"](#), on page 86.

Configuration and Analysis

Measurement Configuration

The reference section contains an overview of all functions that are part of the chapter and lists the associated elements of the user interface.

For a list and description of supported detectors see [chapter 3.2.3, "Detectors"](#), on page 46.

Filter Type

Opens a submenu to select the filter type.

When measuring Spurious Emissions, using this softkey automatically opens the "Sweep List" dialog (see ["Sweep List dialog box"](#) on page 167).

The submenu contains the following softkeys:

- Normal (3 dB)
- CISPR (6 dB)
- MIL Std (6 dB)

Note that the 6 dB bandwidths are available only with option R&S FSV-K54.

- Channel
- RRC
- 5-Pole (not available for sweep type "FFT")

For detailed information on filters see [chapter 4.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 239 and [chapter 4.2.6.4, "List of Available RRC and Channel Filters"](#), on page 240.

Remote command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:TYPE](#) on page 487

Res BW CISPR / CISPR (6 dB)

Selects the measurement bandwidth for commercial EMC standards according to CISPR.

If you select the bandwidth with the "Res BW CISPR" softkey, the R&S ESRP automatically changes the filter type to a 6 dB bandwidth.

Remote command:

Filter type:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:TYPE](#) on page 487

Filter bandwidth:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]](#) on page 487

Res BW Mil Std / MIL Std (6 dB)

Selects the measurement bandwidths for military EMC standards.

If you select the bandwidth with the "Res BW Mil Std" softkey, the R&S ESRP automatically changes the filter type to a 6 dB bandwidth.

Remote command:

Filter type:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:TYPE](#) on page 487

Filter bandwidth:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]](#) on page 487

Sweep Points

Opens an edit dialog box to enter the number of measured values collected during a single measurement.

For more information see ["Setting the Number of Sweep Points"](#) on page 176.

Remote command:

[\[SENSe:\]SWEep:POINTs](#) on page 641

Freq (Lin Log)

Turns logarithmic scaling of the frequency axis on and off.

By default, the frequency axis has linear scaling. Logarithmic scaling of the frequency axis, however, is common for EMI measurements over large frequency ranges as it enhances the resolution of the lower frequencies. On the other hand, high frequencies get more crowded and become harder to distinguish.


Because it shows the lower frequencies more clearly, logarithmic scaling is used for tests that focus on those frequencies, for example acoustic tests and measurements.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:X:SPACing` on page 482

LISN Control

Opens a dialog box to control a LISN.

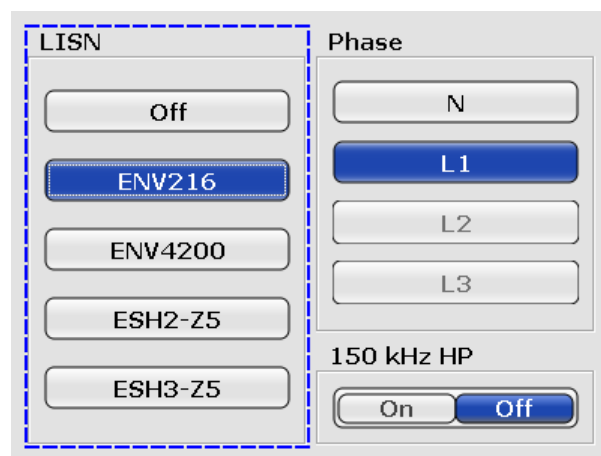

The dialog box contains the following elements.

- **LISN**
Selects the V-network that you have in use. The R&S FSV-K54 supports
 - two two-line networks (ESH3-Z5 and ENV 216)
 - two four line nwtworks (ESH2-Z5 and ENV 4200)
- **Phase**
Selects the phase to be measured. Phase N and L1 are included in all four LISN. Phase L2 and L3 are only included in four-line networks. You can select one phase for a measurement only.
- **150 kHz HP**
Turns on a 150 kHz highpass filter. The filter is available for the ENV 216 network only.

Remote command:

LISN type:

Phase:

Highpass filter:

Peak Search

The reference section contains an overview of all functions that are part of the chapter and lists the associated elements of the user interface.

Auto Peak Search

Turns the automatic marker peak search on and off.

For more information see ["Performing a Peak Search"](#) on page 177.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:PSearch:AUTO`
on page 591

Marker Configuration

To make the process of configuring markers as easy as possible, the R&S FSV-K54 features a "Marker Configuration" dialog box that contains all marker characteristics necessary to perform successful EMI measurements.

The dialog box is made up out of two tabs. The first tab controls markers 1 to 8, the second tab controls markers 9 to 16.



- **Selected**
Selects one of the markers. The currently selected marker is highlighted in orange color. The label indicates the marker type and its number.
- **State**
Turns the marker on and off.
- **Type**
Selects the marker type.
The first marker always is a normal marker (abbreviated 'N'). Normal markers determine absolute signal levels. In the diagram area, they are drawn as a triangle pointing up (▲).

If you add more markers, these will be delta markers by default (abbreviated 'D'). Delta markers show signal levels in relation to another (normal) marker, by default in relation to the first marker. If necessary, you can still change the reference marker in the "Ref" column. In the diagram area, delta markers are drawn as a triangle pointing down (.

When performing EMI measurements however, you usually want to have absolute marker readouts for all markers that you are using.

- Ref
Selects the reference marker for delta markers.
By default, the reference marker for all delta markers is the first marker.
This is active only for delta markers.
- Trace
Selects the trace number the marker is positioned on.
You can place markers on any of the active traces. The R&S FSV-K54 supports the use of up to four traces.
- Detector
Selects the detector for the final measurement.
- Auto Peak
Turns automatic peak search for all markers on and off.
For more information see ["Performing a Peak Search"](#) on page 177.
- Dwell Time
Sets the dwell time for all markers.
For more information see ["Measuring at the Marker Position"](#) on page 178.
- All Markers Off
Turns all markers off.

Remote command:

Reference marker:

`CALCulate<n>:DELTaMarker<m>:MREF`

Trace:

`CALCulate<n>:DELTaMarker<m>:TRACe` on page 515

`CALCulate<n>:MARKer<m>:TRACe` on page 510

Detector:

`CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:DETECTOR` on page 590

`CALCulate<n>:DELTaMarker<m>:FUNCTION:FMEasurement:DETECTOR`
on page 589

Auto peak:

`CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:PSEarch:AUTO`
on page 591

Dwell time:

`CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:DWELL` on page 590

All marker off:

`CALCulate<n>:MARKer<m>:AOFF` on page 506

`CALCulate<n>:DELTaMarker<m>:AOFF` on page 512

See also the documentation of the base unit for information on how to remotely work with markers in general.

Final Evaluation

The reference section contains an overview of all functions that are part of the chapter and lists the associated elements of the user interface.

Dwell Time

Sets the dwell time for the EMI marker measurement.

For more information see ["Measuring at the Marker Position"](#) on page 178.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:DWELL` on page 590

Marker Table

If more than two markers have been activated, the application adds a marker table to the display below the diagram area. The size of the table depends on the number of markers that are active. It contains the following information for every marker.

EMI Measurement Marker							
Type	Ref	Trace	Frequency	Level	Detector	ΔLimit	Result
N1		1	999.28 MHz	-25.87 dBm	Peak	14.13 dB	-25.87 dBm*
N2		1	925.47 MHz	-47.77 dBm	Peak	-7.77 dB	-47.77 dBm
N3		1	1.07525 GHz	-47.77 dBm	Quasi Peak	-7.77 dB	-47.77 dBm
N4		1	849.493 MHz	-75.28 dBm	Quasi Peak	---	-75.28 dBm
N5		1	1.017366 GHz	-40.45 dBm	Quasi Peak	-0.45 dB	-40.45 dBm

- **Type**
Shows the marker type. The marker type is either a normal marker (N) or delta marker (D).
- **Ref**
Shows the reference marker. Applicable only for delta markers.
- **Trace**
Trace number the marker is positioned on. You can turn on a maximum of six traces at the same time. Each trace has a different color.
- **Frequency**
Frequency of a peak that was detected during the peak search. For normal markers this is a absolute value, for delta markers this is a relative value. The corresponding reference marker for delta markers is indicated in the "Ref" column.
- **Level**
Signal level at the marker position according to the trace detector. For normal markers this is an absolute value, for delta markers this is a relative value. The corresponding reference marker for delta markers is indicated in the "Ref" column. The unit for absolute markers depends on the selected unit. The unit for relative markers is dB.
- **Detector**
Detector that has been assigned to the EMI measurement marker.
- **ΔLimit**
Shows the distance of the marker level to all active limit lines.
The order of results depends on the order in that you have loaded the limit lines and is the same as the order in the status register.
The result is either a relative value in dB or three dashes (---). In case of three dashes the marker is either
 - on a different trace than the limit line or

- on a horizontal position that is not covered by the limit line.

The delta limit is shown only if you have assigned a detector to the measurement marker.

- **Result**

Shows the signal level at the marker position according to the detector assigned to the corresponding marker. The result is only displayed after the final measurement is done. The overall measurement time depends on the dwell time.

If a limit line is active, the result can have three colors.

- green indicates that the marker has passed the limit check.
- yellow indicates that the marker is in the margins of the limit line.
- red and a star (*) indicate that the marker has failed the limit check.

For more information on limit lines see the documentation of the base unit.

The result is shown only if you have assigned a detector to the measurement marker.

Remote command:

Detector:

Δ Limit:

`CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:LIMit<k>:DELta?`

on page 593

`CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:LIMit<k>:`

`CONDition ?` on page 592

`CALCulate<n>:DELTamarker<m>:FUNCTION:FMEasurement:LIMit<k>:`

`DELta?` on page 592

`CALCulate<n>:DELTamarker<m>:FUNCTION:FMEasurement:LIMit<k>:`

`CONDition ?` on page 591

Result:

`CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:RESult?` on page 593

`CALCulate<n>:DELTamarker<m>:FUNCTION:FMEasurement:RESult?`

on page 592

4.1.1.9 Calculating Signal Amplitude Statistics

To measure the amplitude distribution, the R&S ESRP has simple measurement functions to determine both the APD = Amplitude Probability Distribution and CCDF = Complementary Cumulative Distribution Function.

To determine the amplitude distribution

- To activate and configure the measurement of the amplitude probability distribution (APD), press the "APD" softkey (see "APD" on page 102).
To activate and configure the measurement of the complementary cumulative distribution (CCDF), press the "CCDF" softkey (see "CCDF" on page 102).

Only one of the signal statistic functions can be switched on at a time. When a statistic function is switched on, the R&S ESRP is set into zero span mode automatically. The R&S ESRP measures the statistics of the signal applied to the RF input with the defined resolution bandwidth. To avoid affecting the peak amplitudes the video band-

width is automatically set to 10 times the resolution bandwidth. The sample detector is used for detecting the video voltage.

About the Statistical Measurements.....	185
Result Evaluation.....	186
Softkeys for APD Measurements.....	189
Softkeys for CCDF Measurements.....	194
Defining Gated Triggering for APD and CCDF.....	200

About the Statistical Measurements

Digital modulated signals are similar to white noise within the transmit channel, but are different in their amplitude distribution. In order to transmit the modulated signal without distortion all amplitudes of the signal have to be transmitted linearly, e.g. from the output power amplifier. Most critical are the peak amplitude values. Degradation in transmit quality caused by a transmitter two port network is dependent on the amplitude of the peak values as well as on their probability.

If modulation types are used that do not have a constant zero span envelope, the transmitter has to handle peak amplitudes that are greater than the average power. This includes all modulation types that involve amplitude modulation, QPSK for example. CDMA transmission modes in particular may have power peaks that are large compared to the average power.

For signals of this kind, the transmitter must provide large reserves for the peak power to prevent signal compression and thus an increase of the bit error rate at the receiver. The peak power or the crest factor of a signal is therefore an important transmitter design criterion. The crest factor is defined as the peak power/mean power ratio or, logarithmically, as the peak level minus the average level of the signal. To reduce power consumption and cut costs, transmitters are not designed for the largest power that could ever occur, but for a power that has a specified probability of being exceeded (e.g. 0.01 %).

The probability of amplitude values can be measured with the APD function (Amplitude Probability Distribution). During a selectable measurement time all occurring amplitude values are assigned to an amplitude range. The number of amplitude values in the specific ranges is counted and the result is displayed as a histogram.

Alternatively, the Complementary Cumulative Distribution Function (CCDF) can be displayed. It shows the probability that the mean signal power amplitude will be exceeded in percent.

Bandwidth selection

When the amplitude distribution is measured, the resolution bandwidth must be set so that the complete spectrum of the signal to be measured falls within the bandwidth. This is the only way of ensuring that all the amplitudes will pass through the IF filter without being distorted. If the selected resolution bandwidth is too small for a digitally modulated signal, the amplitude distribution at the output of the IF filter becomes a Gaussian distribution according to the central limit theorem and thus corresponds to a

white noise signal. The true amplitude distribution of the signal therefore cannot be determined.

Selecting the number of samples

For statistics measurements with the R&S ESRP, the number of samples to be measured is defined instead of the sweep time. Since only statistically independent samples contribute to statistics, the acquisition or sweep time is calculated automatically and displayed in the channel bar (AQT). The samples are statistically independent if the time difference is at least 1/RBW. The acquisition time AQT is, therefore, expressed as follows:

$$\text{AQT} = N_{\text{Samples}} / \text{RBW}$$

Statistic measurements on pulsed signals

Statistic measurements on pulsed signals can be performed using a gated trigger. An external frame trigger is required as a time (frame) reference. For details see ["Defining Gated Triggering for APD and CCDF"](#) on page 200.

Result Evaluation

Amplitude Probability Distribution (APD)

As a result of the APD function (Amplitude Probability Distribution), the probability of measured amplitude values is displayed. During a selectable measurement time all occurring amplitude values are assigned to an amplitude range. The number of amplitude values in the specific ranges is counted and the result is displayed as a histogram. Each bar of the histogram represents the percentage of measured amplitudes within the specific amplitude range. The x-axis is scaled in absolute values in dBm.

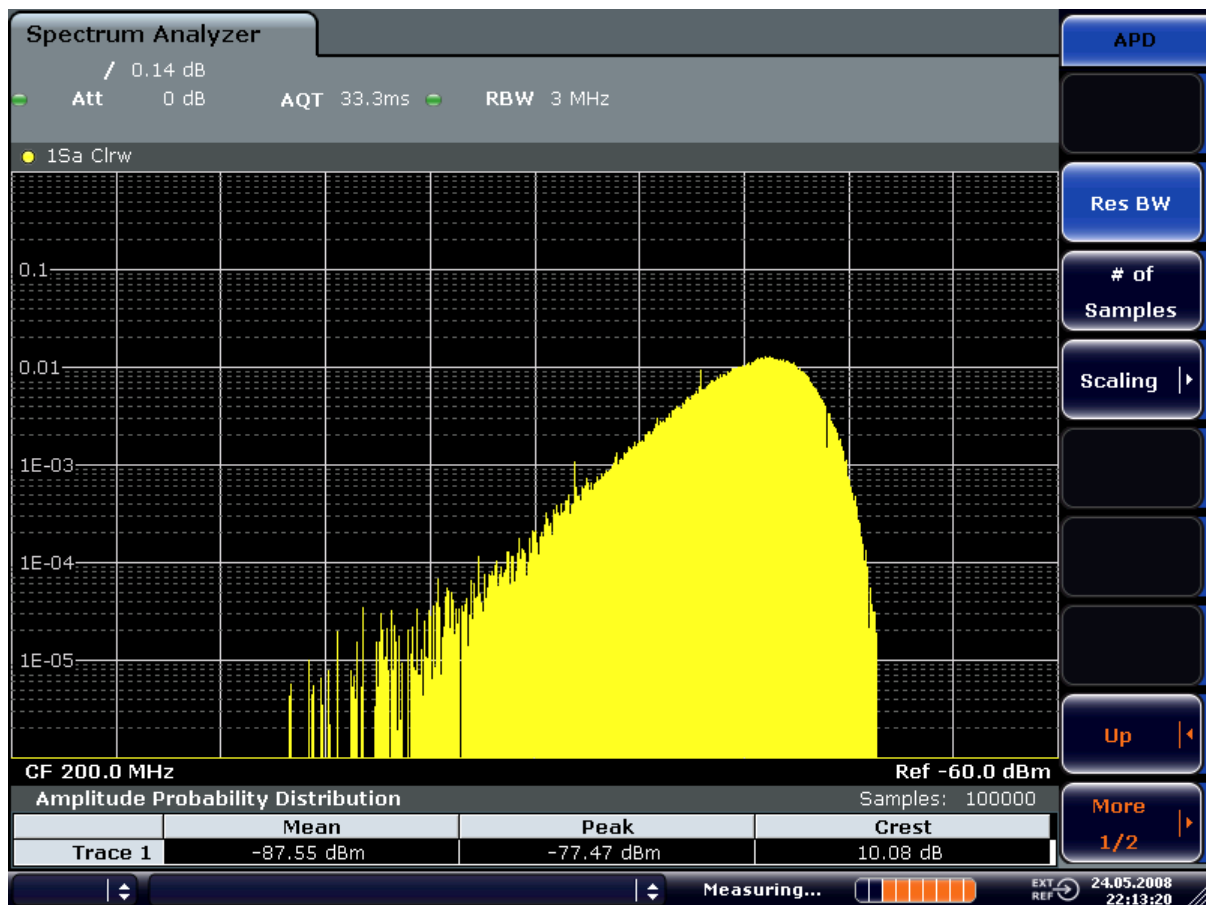


Fig. 4-7: Amplitude probability distribution of white noise

In addition to the histogram, a result table is displayed containing the following information:

- Number of samples used for calculation
- For each displayed trace:
 - Mean amplitude
 - Peak amplitude
 - Crest factor

Complementary Cumulative Distribution Function (CCDF)

The Complementary Cumulative Distribution Function (CCDF) shows the probability that the mean signal power amplitude will be exceeded in percent. The level above the mean power is plotted along the x-axis of the graph. The origin of the axis corresponds to the mean power level. The probability that a level will be exceeded is plotted along the y-axis.

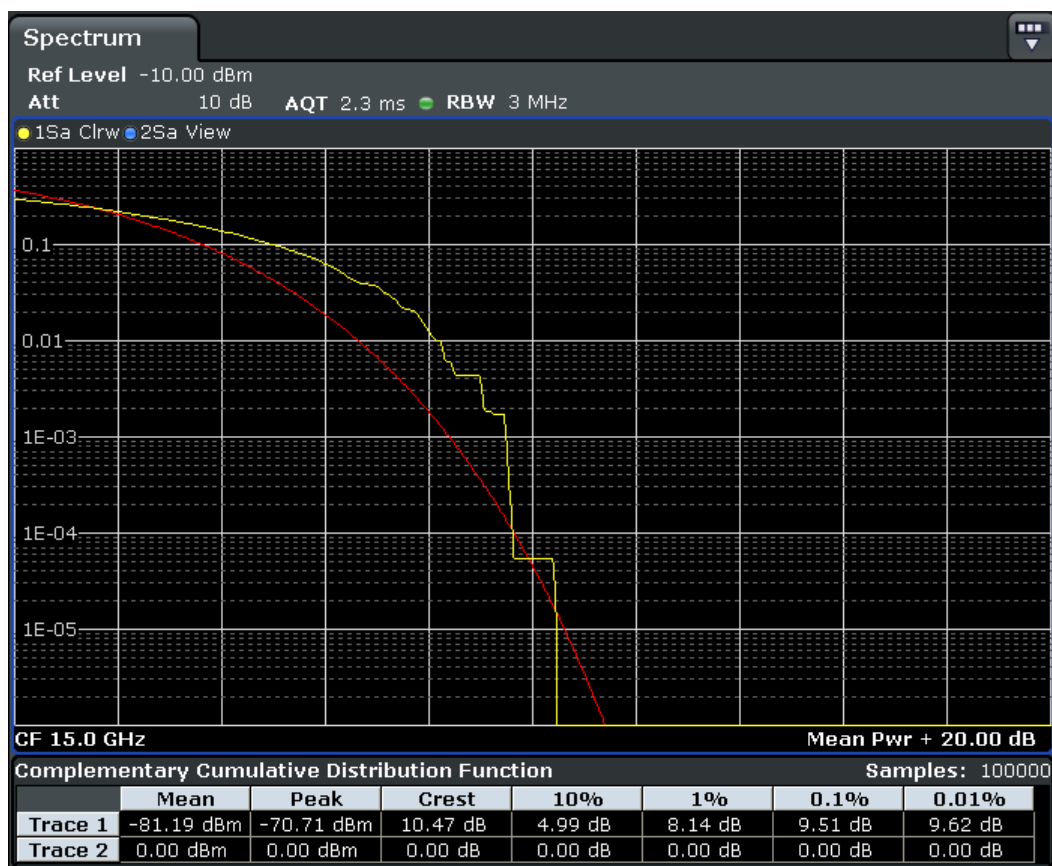


Fig. 4-8: CCDF of white noise



A red line indicates the ideal Gaussian distribution for the measured amplitude range (white noise).

The displayed amplitude range is indicated as "Mean Pwr + <x dB>"

In addition to the histogram, a result table is displayed containing the following information:

- Number of samples used for calculation
- For each displayed trace:

Mean	Mean power
Peak	Peak power
Crest	Crest factor (peak power – mean power)
0,01 %	Level values over 0,01 % above mean power
0,1 %	Level values over 0,1 % above mean power

1 %	Level values over 1 % above mean power
10 %	Level values over 10 % above mean power

Softkeys for APD Measurements

APD.....	189
L Res BW.....	189
L # of Samples.....	190
L Scaling.....	190
L x-Axis Ref Level.....	190
L x-Axis Range.....	190
L Range Log 100 dB.....	190
L Range Log 50 dB.....	191
L Range Log 10 dB.....	191
L Range Log 5 dB.....	191
L Range Log 1 dB.....	191
L Range Log Manual.....	192
L Range Linear %.....	192
L Range Lin. Unit.....	192
L y-Axis Max Value.....	192
L y-Axis Min Value.....	192
L y-Unit % / Abs.....	193
L Default Settings.....	193
L Adjust Settings.....	193
L Gated Trigger (On/Off).....	193
L Gate Ranges.....	193
L Adjust Settings.....	194

APD

Activates the function to measure the amplitude probability density (APD) and opens a submenu.

For general information on calculating signal statistics see [chapter 4.1.1.9, "Calculating Signal Amplitude Statistics"](#), on page 184.

Remote command:

`CALCulate<n>:STATistics:APD[:STATe]` on page 601

Res BW ← APD

Opens an edit dialog box to set the resolution bandwidth directly.

For correct measurement of the signal statistics the resolution bandwidth has to be wider than the signal bandwidth in order to measure the actual peaks of the signal amplitude correctly. In order not to influence the peak amplitudes the video bandwidth is automatically set to 10 MHz. The sample detector is used for detecting the video voltage.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]` on page 487

of Samples ← APD

Opens an edit dialog box to set the number of power measurements that are taken into account for the statistics.

Apart from the number of measurements the overall measurement time depends also on the set resolution bandwidth as the resolution bandwidth directly influences the sampling rate.

For details see ["Selecting the number of samples"](#) on page 186.

Remote command:

`CALCulate<n>:STATistics:NSAMples` on page 602

Scaling ← APD

Opens a submenu to change the scaling parameters of x- and y-axis.

x-Axis Ref Level ← Scaling ← APD

Opens an edit dialog box to enter the reference level in the currently active unit (dBm, dBμV, etc). The function of this softkey is identical to the "Ref Level" softkey in the "Amplitude" menu (see ["Ref Level"](#) on page 225).

For the APD function this value is mapped to the right diagram border. For the CCDF function there is no direct representation of this value on the diagram as the x-axis is scaled relatively to the measured mean power.

Remote command:

`CALCulate<n>:STATistics:SCALE:X:RLEVel` on page 606

x-Axis Range ← Scaling ← APD

Opens the "Range" submenu to select a value for the level range to be covered by the statistics measurement selected.

Remote command:

`CALCulate<n>:STATistics:SCALE:X:RANGe` on page 606

Range Log 100 dB ← x-Axis Range ← Scaling ← APD

Sets the level display range to 100 dB.

Remote command:

Logarithmic scaling:

`DISP:WIND:TRAC:Y:SPAC LOG`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 484

Display range:

`DISP:WIND:TRAC:Y 100DB`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]` on page 650

Range Log 50 dB ← x-Axis Range ← Scaling ← APD

Sets the level display range to 50 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Display range:

DISP:WIND:TRAC:Y 50DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 650

Range Log 10 dB ← x-Axis Range ← Scaling ← APD

Sets the level display range to 10 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Display range:

DISP:WIND:TRAC:Y 10DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 650

Range Log 5 dB ← x-Axis Range ← Scaling ← APD

Sets the level display range to 5 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Display range:

DISP:WIND:TRAC:Y 5DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 650

Range Log 1 dB ← x-Axis Range ← Scaling ← APD

Sets the level display range to 1 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Display range:

DISP:WIND:TRAC:Y 1DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 650

Range Log Manual ← x-Axis Range ← Scaling ← APD

Opens an edit dialog box to define the display range of a logarithmic level axis manually.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:](#)

[SPACing](#) on page 484

Display range:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 650

Range Linear % ← x-Axis Range ← Scaling ← APD

Selects linear scaling for the level axis in %.

The grid is divided into decadal sections.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in % referenced to the voltage value at the position of marker 1. This is the default setting for linear scaling.

Remote command:

DISP:TRAC:Y:SPAC LIN, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#)

on page 484

Range Lin. Unit ← x-Axis Range ← Scaling ← APD

Selects linear scaling in dB for the level display range, i.e. the horizontal lines are labeled in dB.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in dB referenced to the power value at the position of marker 1.

Remote command:

DISP:TRAC:Y:SPAC LDB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#)

on page 484

y-Axis Max Value ← Scaling ← APD

Opens an edit dialog box to define the upper limit of the displayed probability range. Values on the y-axis are normalized which means that the maximum value is 1.0. The y-axis scaling is defined via the [y-Unit % / Abs](#) softkey. The distance between max and min value must be at least one decade.

Remote command:

[CALCulate<n>:STATistics:SCALE:Y:UPPer](#) on page 607

y-Axis Min Value ← Scaling ← APD

Opens an edit dialog box to define the lower limit of the displayed probability range. Values in the range $1e^{-9} < value < 0.1$ are allowed. The y-axis scaling is defined via the [y-Unit % / Abs](#) softkey. The distance between max and min value must be at least one decade.

Remote command:

[CALCulate<n>:STATistics:SCALE:Y:LOWer](#) on page 607

y-Unit % / Abs ← Scaling ← APD

Defines the scaling type of the y-axis. The default value is absolute scaling.

Remote command:

`CALCulate<n>:STATistics:SCALE:Y:UNIT` on page 607

Default Settings ← Scaling ← APD

Resets the x- and y-axis scalings to their preset values.

x-axis ref level:	-10 dBm
x-axis range APD:	100 dB
x-axis range CISPR APD:	100 dB
x-axis range CCDF:	20 dB
y-axis upper limit:	1.0
y-axis lower limit:	1E-6

Remote command:

`CALCulate<n>:STATistics:PRESet` on page 605

Adjust Settings ← Scaling ← APD

Adjusts the level settings according to the measured difference between peak and minimum power for APD measurement or peak and mean power for CCDF measurement in order to obtain maximum power resolution. Adjusts the reference level to the current input signal. For details see also the [Adjust Ref Lvl](#) softkey.

Remote command:

`CALCulate<n>:STATistics:SCALE:AUTO ONCE` on page 606

Gated Trigger (On/Off) ← APD

Activates and deactivates the gating for statistics functions for the ACP and the CCDF channel. The trigger source is changed to "EXTERN" if this function is switched on. The gate ranges are defined using the ["Gate Ranges"](#) on page 193 softkey.

Remote command:

`[SENSe:]SWEep:EGATe` on page 647

`[SENSe:]SWEep:EGATe:SOURce` on page 648

Gate Ranges ← APD

Opens a dialog to configure up to 3 gate ranges for each trace.

For details on configuration, see ["Defining Gated Triggering for APD and CCDF"](#) on page 200.

Gate Ranges						
	Trace 1	Trace 2	Trace 3	Trace 4	Trace 5	Trace 6
Comment	SlotA					
Period	8 ms	8 ms	8 ms	8 ms	8 ms	8 ms
Range 1 Start	1 ms	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s
Range 1 Stop	3 ms	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s
Range 1 Use	On	Off	Off	Off	Off	Off
Range 2 Start	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s
Range 2 Stop	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s
Range 2 Use	Off	Off	Off	Off	Off	Off
Range 3 Start	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s
Range 3 Stop	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s
Range 3 Use	Off	Off	Off	Off	Off	Off

Remote command:

SWE:EGAT ON (see [SENSe:]SWEep:EGATe on page 647)

Switches on the external gate mode.

SWE:EGAT:TRAC1:COMM "SlotA" (see [SENSe:]SWEep:EGATe:TRACe<k>:COMMENT on page 603)

Adds a comment to trace 1.

SWE:EGAT:TRAC1:STAT1 ON (see [SENSe:]SWEep:EGATe:TRACe<k>[:STATe<range>] on page 604)

Activates tracing for range 1 of trace 1.

SWE:EGAT:TRAC1:STAR1 3ms (see [SENSe:]SWEep:EGATe:TRACe<k>:STARTe<range> on page 604)

Sets the starting point for range 1 on trace 1 at 3 ms.

SWE:EGAT:TRAC1:STOp1 5ms (see [SENSe:]SWEep:EGATe:TRACe<k>:STOPe<range> on page 605)

Sets the stopping point for range 1 on trace 1 at 5 ms.

SWE:EGAT:TRAC1:PER 5ms (see [SENSe:]SWEep:EGATe:TRACe<k>:PERIOD on page 604)

Defines the period for gated triggering to 5 ms.

Adjust Settings ← APD

Adjusts the level settings according to the measured difference between peak and minimum power for APD measurement or peak and mean power for CCDF measurement in order to obtain maximum power resolution. Adjusts the reference level to the current input signal. For details see also the [Adjust Ref Lvl](#) softkey.

Remote command:

CALCulate<n>:STATistics:SCALE:AUTO ONCE on page 606

Softkeys for CCDF Measurements

CCDF.....	195
L Percent Marker.....	195
L Res BW.....	196
L # of Samples.....	196
L Scaling.....	196
L x-Axis Ref Level.....	196

L x-Axis Range.....	196
L Range Log 100 dB.....	197
L Range Log 50 dB.....	197
L Range Log 10 dB.....	197
L Range Log 5 dB.....	197
L Range Log 1 dB.....	198
L Range Log Manual.....	198
L Range Linear %.....	198
L Range Lin. Unit.....	198
L y-Axis Max Value.....	198
L y-Axis Min Value.....	199
L y-Unit % / Abs.....	199
L Default Settings.....	199
L Adjust Settings.....	199
L Gated Trigger (On/Off).....	199
L Gate Ranges.....	199
L Adjust Settings.....	200

CCDF

Activates the function to measure the complementary cumulative distribution function (CCDF) and opens a submenu.

After a CCDF measurement, the results are displayed in a table beneath the diagram.

Mean	Mean power
Peak	Peak power
Crest	Crest factor (peak power – mean power)
0,01 %	Level values over 0,01 % above mean power
0,1 %	Level values over 0,1 % above mean power
1 %	Level values over 1 % above mean power
10 %	Level values over 10 % above mean power

In addition, a red reference line indicating the calculated Gauss distribution is displayed.

Remote command:

`CALCulate<n>:STATistics:CCDF[:STATE]` on page 601

Activates the CCDF measurement.

`CALCulate<n>:STATistics:CCDF:X<Trace>` on page 602

Reads out the level values for 1 % probability.

Percent Marker ← CCDF

Opens an edit dialog box to enter a probability value and to position marker 1. Thus, the power which is exceeded with a given probability can be determined very easily. If marker 1 is deactivated, it will be switched on automatically.

As all markers, the percent marker can be moved simply by touching it with a finger or mouse cursor and dragging it to the desired position.

Remote command:

[CALCulate<n>:MARKer<m>:Y:PERCent](#) on page 669

Res BW ← CCDF

Opens an edit dialog box to set the resolution bandwidth directly.

For correct measurement of the signal statistics the resolution bandwidth has to be wider than the signal bandwidth in order to measure the actual peaks of the signal amplitude correctly. In order not to influence the peak amplitudes the video bandwidth is automatically set to 10 MHz. The sample detector is used for detecting the video voltage.

Remote command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]](#) on page 487

of Samples ← CCDF

Opens an edit dialog box to set the number of power measurements that are taken into account for the statistics.

Apart from the number of measurements the overall measurement time depends also on the set resolution bandwidth as the resolution bandwidth directly influences the sampling rate.

For details see ["Selecting the number of samples"](#) on page 186.

Remote command:

[CALCulate<n>:STATistics:NSAMples](#) on page 602

Scaling ← CCDF

Opens a submenu to change the scaling parameters of x- and y-axis.

x-Axis Ref Level ← Scaling ← CCDF

Opens an edit dialog box to enter the reference level in the currently active unit (dBm, dBμV, etc). The function of this softkey is identical to the "Ref Level" softkey in the "Amplitude" menu (see ["Ref Level"](#) on page 225).

For the APD function this value is mapped to the right diagram border. For the CCDF function there is no direct representation of this value on the diagram as the x-axis is scaled relatively to the measured mean power.

Remote command:

[CALCulate<n>:STATistics:SCALE:X:RLEVel](#) on page 606

x-Axis Range ← Scaling ← CCDF

Opens the "Range" submenu to select a value for the level range to be covered by the statistics measurement selected.

Remote command:

[CALCulate<n>:STATistics:SCALE:X:RANGe](#) on page 606

Range Log 100 dB ← x-Axis Range ← Scaling ← CCDF

Sets the level display range to 100 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Display range:

DISP:WIND:TRAC:Y 100DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 650

Range Log 50 dB ← x-Axis Range ← Scaling ← CCDF

Sets the level display range to 50 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Display range:

DISP:WIND:TRAC:Y 50DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 650

Range Log 10 dB ← x-Axis Range ← Scaling ← CCDF

Sets the level display range to 10 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Display range:

DISP:WIND:TRAC:Y 10DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 650

Range Log 5 dB ← x-Axis Range ← Scaling ← CCDF

Sets the level display range to 5 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Display range:

DISP:WIND:TRAC:Y 5DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 650

Range Log 1 dB ← x-Axis Range ← Scaling ← CCDF

Sets the level display range to 1 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Display range:

DISP:WIND:TRAC:Y 1DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 650

Range Log Manual ← x-Axis Range ← Scaling ← CCDF

Opens an edit dialog box to define the display range of a logarithmic level axis manually.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Display range:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 650

Range Linear % ← x-Axis Range ← Scaling ← CCDF

Selects linear scaling for the level axis in %.

The grid is divided into decadal sections.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in % referenced to the voltage value at the position of marker 1. This is the default setting for linear scaling.

Remote command:

DISP:TRAC:Y:SPAC LIN, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Range Lin. Unit ← x-Axis Range ← Scaling ← CCDF

Selects linear scaling in dB for the level display range, i.e. the horizontal lines are labeled in dB.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in dB referenced to the power value at the position of marker 1.

Remote command:

DISP:TRAC:Y:SPAC LDB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

y-Axis Max Value ← Scaling ← CCDF

Opens an edit dialog box to define the upper limit of the displayed probability range.

Values on the y-axis are normalized which means that the maximum value is 1.0. The y-axis scaling is defined via the [y-Unit % / Abs](#) softkey. The distance between max and min value must be at least one decade.

Remote command:

[CALCulate<n>:STATistics:SCALE:Y:UPPer](#) on page 607

y-Axis Min Value ← Scaling ← CCDF

Opens an edit dialog box to define the lower limit of the displayed probability range. Values in the range $1e^{-9} < value < 0.1$ are allowed. The y-axis scaling is defined via the [y-Unit % / Abs](#) softkey. The distance between max and min value must be at least one decade.

Remote command:

[CALCulate<n>:STATistics:SCALE:Y:LOWer](#) on page 607

y-Unit % / Abs ← Scaling ← CCDF

Defines the scaling type of the y-axis. The default value is absolute scaling.

Remote command:

[CALCulate<n>:STATistics:SCALE:Y:UNIT](#) on page 607

Default Settings ← Scaling ← CCDF

Resets the x- and y-axis scalings to their preset values.

x-axis ref level:	-10 dBm
x-axis range APD:	100 dB
x-axis range CISPR APD:	100 dB
x-axis range CCDF:	20 dB
y-axis upper limit:	1.0
y-axis lower limit:	1E-6

Remote command:

[CALCulate<n>:STATistics:PRESet](#) on page 605

Adjust Settings ← Scaling ← CCDF

Adjusts the level settings according to the measured difference between peak and minimum power for APD measurement or peak and mean power for CCDF measurement in order to obtain maximum power resolution. Adjusts the reference level to the current input signal. For details see also the [Adjust Ref Lvl](#) softkey.

Remote command:

[CALCulate<n>:STATistics:SCALE:AUTO](#) [ONCE](#) on page 606

Gated Trigger (On/Off) ← CCDF

Activates and deactivates the gating for statistics functions for the ACP and the CCDF channel. The trigger source is changed to "EXTERN" if this function is switched on. The gate ranges are defined using the ["Gate Ranges"](#) on page 193 softkey.

Remote command:

[\[SENSe:\]SWEep:EGATe](#) on page 647

[\[SENSe:\]SWEep:EGATe:SOURce](#) on page 648

Gate Ranges ← CCDF

Opens a dialog to configure up to 3 gate ranges for each trace.

For details on configuration, see ["Defining Gated Triggering for APD and CCDF"](#) on page 200.

Gate Ranges						
	Trace 1	Trace 2	Trace 3	Trace 4	Trace 5	Trace 6
Comment	SlotA					
Period	8 ms	8 ms	8 ms	8 ms	8 ms	8 ms
Range 1 Start	1 ms	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s
Range 1 Stop	3 ms	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s
Range 1 Use	On	Off	Off	Off	Off	Off
Range 2 Start	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s
Range 2 Stop	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s
Range 2 Use	Off	Off	Off	Off	Off	Off
Range 3 Start	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s
Range 3 Stop	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s
Range 3 Use	Off	Off	Off	Off	Off	Off

Remote command:

SWE:EGAT ON (see [\[SENSe:\]SWEep:EGATe](#) on page 647)

Switches on the external gate mode.

SWE:EGAT:TRAC1:COMM "SlotA" (see [\[SENSe:\]SWEep:EGATe:TRACe<k>:COMMENT](#) on page 603)

Adds a comment to trace 1.

SWE:EGAT:TRAC1:STAT1 ON (see [\[SENSe:\]SWEep:EGATe:TRACe<k>\[:STATe<range>\]](#) on page 604)

Activates tracing for range 1 of trace 1.

SWE:EGAT:TRAC1:STAR1 3ms (see [\[SENSe:\]SWEep:EGATe:TRACe<k>:STARTe<range>](#) on page 604)

Sets the starting point for range 1 on trace 1 at 3 ms.

SWE:EGAT:TRAC1:STOp1 5ms (see [\[SENSe:\]SWEep:EGATe:TRACe<k>:STOPe<range>](#) on page 605)

Sets the stopping point for range 1 on trace 1 at 5 ms.

SWE:EGAT:TRAC1:PER 5ms (see [\[SENSe:\]SWEep:EGATe:TRACe<k>:PERIOD](#) on page 604)

Defines the period for gated triggering to 5 ms.

Adjust Settings ← CCDF

Adjusts the level settings according to the measured difference between peak and minimum power for APD measurement or peak and mean power for CCDF measurement in order to obtain maximum power resolution. Adjusts the reference level to the current input signal. For details see also the [Adjust Ref Lvl](#) softkey.

Remote command:

CALCulate<n>:STATistics:SCALE:AUTO ONCE on page 606


Defining Gated Triggering for APD and CCDF

Statistic measurements on pulsed signals can be performed using GATED TRIGGER. An external frame trigger is required as a time (frame) reference.

The gate ranges define the part of the I/Q capture data taken into account for the statistics calculation. These ranges are defined relative to a reference point $T=0$. The gate interval is repeated for each period until the end of the I/Q capture buffer.

The reference point $T=0$ is defined by the external trigger event and the instrument's trigger offset.

For each trace you can define up to 3 separate ranges of a single period to be traced.

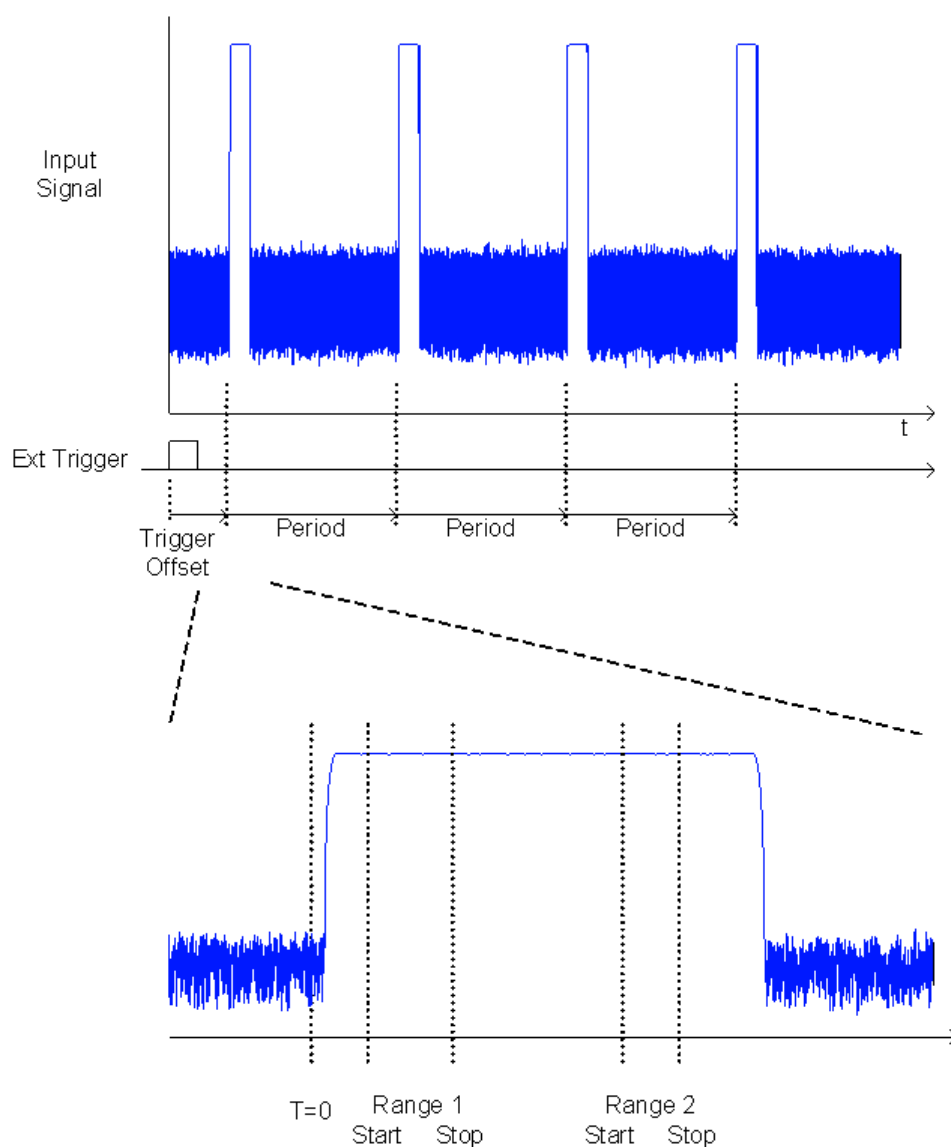

Defining gated triggering

1. Press the "Gated Trigger" softkey to activate gated triggering (see ["Gated Trigger \(On/Off\)"](#) on page 193).
2. Press the "Gate Ranges" softkey to open the "Gate Ranges" dialog (see ["Gate Ranges"](#) on page 193).

3. Define the length of the period to be analyzed in the "Period" field.

Note: The period is the same for all traces. If you change the period for one trace, it is automatically changed for all traces.

Make sure the defined period is not longer than the acquisition time of the current measurement. Keep in mind that the acquisition time depends on the bandwidth and the number of samples settings (see ["Selecting the number of samples"](#) on page 186). The current acquisition time is indicated as "AQT" in the channel bar.

4. Optionally, define a description of the trace in the "Comment" field.
5. Activate tracing for the range by selecting "On" in the "Range <number> Use" field for the corresponding range and trace.


The start and stop time edit fields are ready for input.

Note: The time values have full numerical resolution and are only rounded for display.

6. Define the starting point of the range within the period.
7. Define the stopping point for the range within the period. Make sure the value for the stopping time is smaller than the length of the period.
8. To define further ranges for the same period in the same trace, repeat steps 5- 7 for the same trace.
To define further ranges for the same period in a different trace, repeat steps 4- 7 for a different trace.
9. If necessary, activate the configured traces in the "Trace" menu.

Gated statistics configuration example

A statistics evaluation has to be done over the useful part of the signal between t_3 and t_4 . The period of the GSM signal is 4.61536 ms

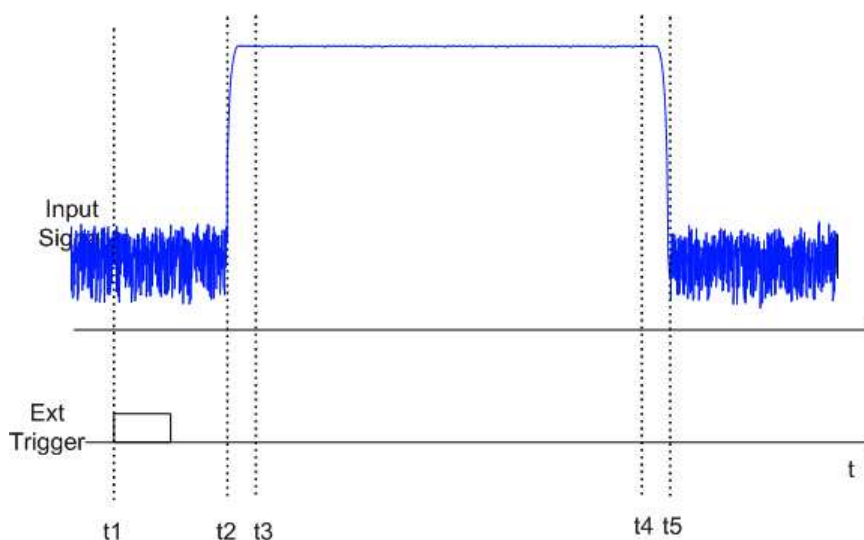

t1: External positive trigger slope

t2: Begin of burst (after 25 μ s)

t3: Begin of useful part, to be used for statistics (after 40 μ s)

t4: End of useful part, to be used for statistics (after 578 μ s)

t5: End of burst (after 602 μ s)

The instrument has to be configured as follows:

Trigger Offset	$t2 - t1 = 25 \mu\text{s}$	now the gate ranges are relative to t2
Range1 Start	$t3 - t2 = 15 \mu\text{s}$	start of range 1 relative to t2
Range1 End	$t4 - t2 = 553 \mu\text{s}$	end of range 1 relative to t2

4.1.1.10 Measuring the Third Order Intercept Point (TOI)

In order to measure the third order intercept point (TOI), a two-tone signal with equal carrier levels is expected at the R&S ESRP input. Marker 1 and marker 2 (both normal markers) are set to the maximum of the two signals. Marker 3 and marker 4 are placed on the intermodulation products.

The R&S ESRP calculates the third order intercept point from the level difference between the first 2 markers and the markers 3 and 4 and displays it in the marker field.

The third order intercept point is measured using the "TOI" softkey, see "TOI" on page 102.

About TOI Measurement

If several signals are applied to a transmission two-port device with nonlinear characteristic, intermodulation products appear at its output at the sums and differences of the signals. The nonlinear characteristic produces harmonics of the useful signals which intermodulate at the characteristic. The intermodulation products of lower order have a special effect since their level is largest and they are near the useful signals. The intermodulation product of third order causes the highest interference. It is the intermodulation product generated from one of the useful signals and the 2nd harmonic of the second useful signal in case of two-tone modulation.

The frequencies of the intermodulation products are above and below the useful signals. The [figure 4-9](#) shows intermodulation products P_{I1} and P_{I2} generated by the two useful signals P_{U1} and P_{U2} .

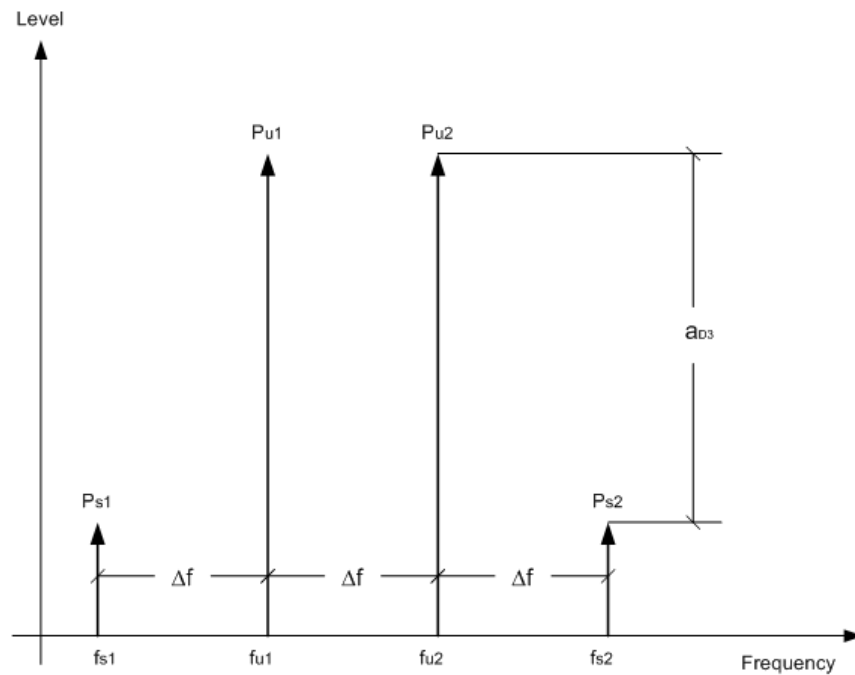


Fig. 4-9: Intermodulation products PU1 and PU2

The intermodulation product at f_{i2} is generated by mixing the 2nd harmonic of useful signal P_{U2} and signal P_{U1} , the intermodulation product at f_{i1} by mixing the 2nd harmonic of useful signal P_{U1} and signal P_{U2} .

$$f_{i1} = 2 \times f_{u1} - f_{u2} \quad (6)$$

$$f_{i2} = 2 \times f_{u2} - f_{u1} \quad (7)$$

Dependency on level of useful signals

The level of the intermodulation products depends on the level of the useful signals. If the two useful signals are increased by 1 dB, the level of the intermodulation products increases by 3 dB, which means that spacing a_{D3} between intermodulation signals and useful signals are reduced by 2 dB. This is illustrated in [figure 4-10](#).

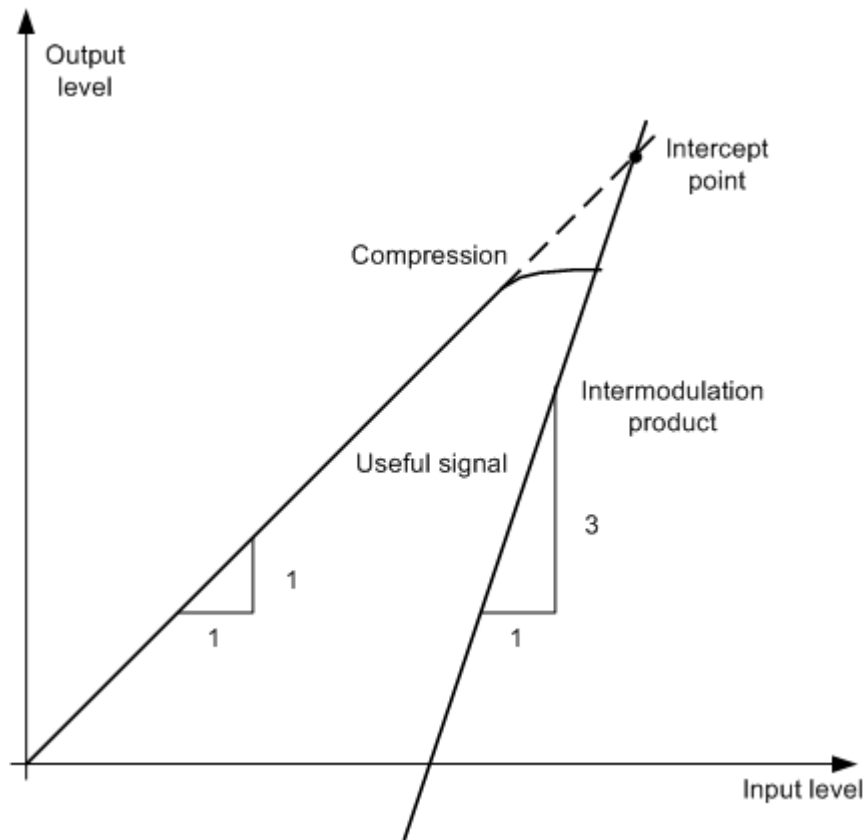


Fig. 4-10: Dependency of intermodulation level on useful signal level

The useful signals at the two-port output increase proportionally with the input level as long as the two-port is in the linear range. A level change of 1 dB at the input causes a level change of 1 dB at the output. Beyond a certain input level, the two-port goes into compression and the output level stops increasing. The intermodulation products of the third order increase three times as much as the useful signals. The intercept point is the fictitious level where the two lines intersect. It cannot be measured directly since the useful level is previously limited by the maximum two-port output power.

Calculation method

It can be calculated from the known line slopes and the measured spacing a_{D3} at a given level according to the following formula:

$$IP3 = \frac{a_{D3}}{2} + P_N$$

The 3rd order intercept point (TOI), for example, is calculated for an intermodulation of 60 dB and an input level P_U of -20 dBm according to the following formula:

$$IP3 = \frac{60}{2} + (-20\text{dBm}) = 10\text{dBm}$$

Intermodulation-free dynamic range

The "Intermodulation-free dynamic range", i.e. the level range in which no internal intermodulation products are generated if two-tone signals are measured, is determined by the 3rd order intercept point, the phase noise and the thermal noise of the signal analyzer. At high signal levels, the range is determined by intermodulation products. At low signal levels, intermodulation products disappear below the noise floor, i.e. the noise floor and the phase noise of the signal analyzer determine the range. The noise floor and the phase noise depend on the resolution bandwidth that has been selected. At the smallest resolution bandwidth, the noise floor and phase noise are at a minimum and so the maximum range is obtained. However, a large increase in sweep time is required for small resolution bandwidths. It is, therefore, best to select the largest resolution bandwidth possible to obtain the range that is required. Since phase noise decreases as the carrier-offset increases, its influence decreases with increasing frequency offset from the useful signals.

The following diagrams illustrate the intermodulation-free dynamic range as a function of the selected bandwidth and of the level at the input mixer (= signal level – set RF attenuation) at different useful signal offsets.

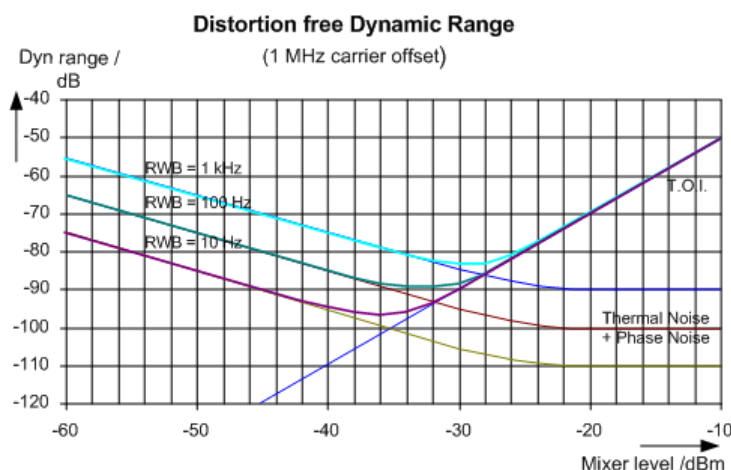


Fig. 4-11: Intermodulation-free range of the R&S ESRP as a function of level at the input mixer and the set resolution bandwidth

(Useful signal offset = 1 MHz, DANL = -145 dBm/Hz, TOI = 15 dBm; typical values at 2 GHz)

The optimum mixer level, i.e. the level at which the intermodulation distance is at its maximum, depends on the bandwidth. At a resolution bandwidth of 10 Hz, it is approx. -35 dBm and at 1 kHz increases to approx. -30 dBm.

Phase noise has a considerable influence on the intermodulation-free range at carrier offsets between 10 and 100 kHz (figure 4-11). At greater bandwidths, the influence of the phase noise is greater than it would be with small bandwidths. The optimum mixer level at the bandwidths under consideration becomes almost independent of bandwidth and is approx. -40 dBm.

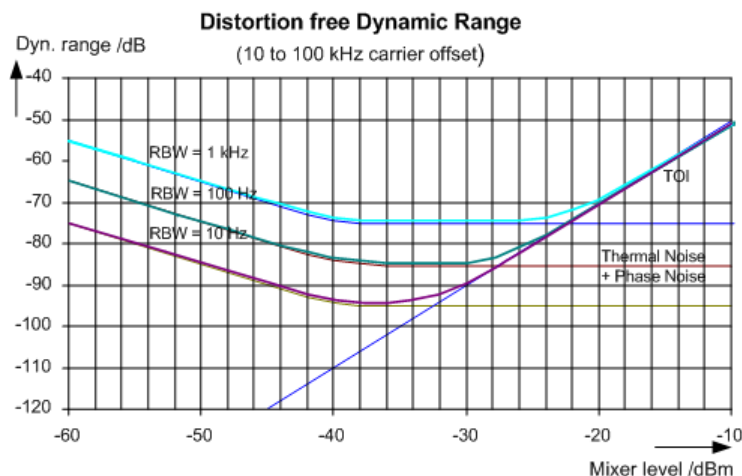


Fig. 4-12: Intermodulation-free dynamic range of the R&S ESRP as a function of level at the input mixer and of the selected resolution bandwidth

(Useful signal offset = 10 to 100 kHz, DANL = -145 dBm/Hz, TOI = 15 dBm; typical values at 2 GHz).



If the intermodulation products of a DUT with a very high dynamic range are to be measured and the resolution bandwidth to be used is therefore very small, it is best to measure the levels of the useful signals and those of the intermodulation products separately using a small span. The measurement time will be reduced- in particular if the offset of the useful signals is large. To find signals reliably when frequency span is small, it is best to synchronize the signal sources and the R&S ESRP.

Measurement Results

As a result of the TOI measurement, the following values are displayed in the marker area of the diagram:

Label	Description
TOI	Third-order intercept point
M1	Maximum of first useful signal
M2	Maximum of second useful signal
M3	First intermodulation product
M4	Second intermodulation product

Remote command

The TOI can also be queried using the remote command `CALCulate<n>:MARKer<m>:FUNCTION:TOI:RESult?` on page 600.

Softkeys for TOI Measurements

TOI.....	208
L Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta.....	208
L Search Signals.....	208

TOI

Opens a submenu and activates the measurement of the 3rd order intercept point.

A two-tone signal with equal carrier levels is expected at the R&S ESRP input. Marker 1 and marker 2 (both normal markers) are set to the maximum of the two signals. Marker 3 and marker 4 are placed on the intermodulation products.

The R&S ESRP calculates the third order intercept point from the level difference between the first 2 markers and the markers 3 and 4 and displays it in the marker field.

For general information on measuring the TOI see [chapter 4.1.1.10, "Measuring the Third Order Intercept Point \(TOI\)"](#), on page 203.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:TOI[:STATe]` on page 600

`CALCulate<n>:MARKer<m>:FUNCTION:TOI:RESult?` on page 600

Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta ← TOI

The "Marker X" softkey activates the corresponding marker and opens an edit dialog box to enter a value for the marker to be set to. Pressing the softkey again deactivates the selected marker.

If a marker value is changed using the rotary knob, the step size is defined via the [Stepsize Standard](#) or [Stepsize Sweep Points](#) softkeys.

Marker 1 is always the reference marker for relative measurements. If activated, markers 2 to 16 are delta markers that refer to marker 1. These markers can be converted into markers with absolute value display using the "Marker Norm/Delta" softkey. If marker 1 is the active marker, pressing the "Marker Norm/Delta" softkey switches on an additional delta marker.

Remote command:

`CALCulate<n>:MARKer<m>[:STATe]` on page 509

`CALCulate<n>:MARKer<m>:X` on page 510

`CALCulate<n>:MARKer<m>:Y` on page 510

`CALCulate<n>:DELTamarker<m>[:STATe]` on page 515

`CALCulate<n>:DELTamarker<m>:X` on page 516

`CALCulate<n>:DELTamarker<m>:X:RELative?` on page 516

`CALCulate<n>:DELTamarker<m>:Y` on page 516

Search Signals ← TOI

Activates all markers.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:TOI:SEARChsignal ONCE` on page 599

4.1.1.11 Measuring the AM Modulation Depth

The AM modulation depth, also known as a modulation index, indicates by how much the modulated signal varies around the carrier amplitude. It is defined as:

$MDepth = \text{peak signal amplitude} / \text{unmodulated carrier amplitude}$

So for $MDepth = 0.5$, for example, the carrier amplitude varies by 50% above and below its unmodulated level, and for $h = 1.0$ it varies by 100%.

You can measure the modulation depth of a modulated signal using the [AM Mod Depth](#) function.

When this function is activated, marker 1 is set to the peak level, which is considered to be the carrier level. Deltamarkers 2 and 3 are automatically set symmetrically to the carrier on the adjacent peak values of the trace. The markers can be adjusted manually, if necessary.

The R&S ESRP calculates the power at the marker positions from the measured levels. The AM modulation depth is calculated as the ratio between the power values at the reference marker and at the delta markers. If the powers of the two AM side bands are unequal, the mean value of the two power values is used for AM modulation depth calculation.



A remote control programming example is described in [chapter 9.16.2.3, "Measuring the AM Modulation Depth"](#), on page 796 and a example of how to perform the measurement manually in the First Steps in chapter "Measurement Examples".

Measurement results

The AM modulation depth in percent is displayed as a result of the measurement, indicated in the marker results as "MDepth".

It can also be queried using the remote command `CALCulate<n>:MARKer<m>:FUNCTION:MDEPTH:RESult?` on page 594.

Softkeys for AM Modulation Depth Measurements

AM Mod Depth	209
L Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta	210
L Search Signals	210

AM Mod Depth

Activates the measurement of the AM modulation depth. An AM-modulated carrier is required on the screen to ensure correct operation.

When this function is activated, marker 1 is set to the peak level, which is considered to be the carrier level. Deltamarkers 2 and 3 are automatically set symmetrically to the carrier on the adjacent peak values of the trace. An edit dialog box is displayed for deltamarker 2 in order to adjust the position manually.

When the position of deltamarker 2 is changed, deltamarker 3 is moved symmetrically with respect to the reference marker 1.

Deltamarker 3, on the other hand, can be moved for fine adjustment irrespective of marker 2.

Marker 1 can also be moved manually for re-adjustment without affecting the position of the deltamarkers.

For general information on measuring the AM modulation depth see [chapter 4.1.1.11, "Measuring the AM Modulation Depth"](#), on page 209.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:MDEPth[:STATe]` on page 595

`CALCulate<n>:MARKer<m>:FUNCTION:MDEPth:RESult?` on page 594

Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta ← AM Mod Depth

The "Marker X" softkey activates the corresponding marker and opens an edit dialog box to enter a value for the marker to be set to. Pressing the softkey again deactivates the selected marker.

If a marker value is changed using the rotary knob, the step size is defined via the [Stepsize Standard](#) or [Stepsize Sweep Points](#) softkeys.

Marker 1 is always the reference marker for relative measurements. If activated, markers 2 to 16 are delta markers that refer to marker 1. These markers can be converted into markers with absolute value display using the "Marker Norm/Delta" softkey. If marker 1 is the active marker, pressing the "Marker Norm/Delta" softkey switches on an additional delta marker.

Remote command:

`CALCulate<n>:MARKer<m>[:STATe]` on page 509

`CALCulate<n>:MARKer<m>:X` on page 510

`CALCulate<n>:MARKer<m>:Y` on page 510

`CALCulate<n>:DELTamarker<m>[:STATe]` on page 515

`CALCulate<n>:DELTamarker<m>:X` on page 516

`CALCulate<n>:DELTamarker<m>:X:RELative?` on page 516

`CALCulate<n>:DELTamarker<m>:Y` on page 516

Search Signals ← AM Mod Depth

Activates all markers.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:MDEPth:SEARChsignal ONCE`
on page 594

4.1.1.12 Measuring Harmonic Distortion

The harmonics and their distortion can be measured using the ["Harmonic Distortion"](#) on page 103 function.

With this measurement it is possible to measure the harmonics e.g. from a VCO easily. In addition the THD (total harmonic distortion) is calculated in % and dB.

With span > 0 Hz, an automatic search for the first harmonic is carried out within the set frequency range. Also the level is adjusted. In zero span, the center frequency is unchanged.

As a result, the zero span sweeps on all harmonics are shown, as well as the RMS values and the THD (total harmonic distortion).

About Harmonics Distortion Measurement

Measuring the harmonics of a signal is a frequent problem which can be solved best using a signal analyzer. In general, every signal contains harmonics which are larger than others. Harmonics are particularly critical regarding high-power transmitters such as transceivers because large harmonics can interfere with other radio services.

Harmonics are generated by nonlinear characteristics. They can often be reduced by low pass filters. Since the signal analyzer has a nonlinear characteristic, e.g. in its first mixer, measures must be taken to ensure that harmonics produced in the signal analyzer do not cause spurious results. If necessary, the fundamental wave must be selectively attenuated with respect to the other harmonics with a high pass filter.

Obtainable dynamic range

When harmonics are being measured, the obtainable dynamic range depends on the second harmonic intercept of the signal analyzer. The second harmonic intercept is the virtual input level at the RF input mixer at which the level of the 2nd harmonic becomes equal to the level of the fundamental wave. In practice, however, applying a level of this magnitude would damage the mixer. Nevertheless, the available dynamic range for measuring the harmonic distance of a DUT can be calculated relatively easily using the second harmonic intercept.

As shown in [figure 4-13](#), the level of the 2nd harmonic drops by 20 dB if the level of the fundamental wave is reduced by 10 dB.

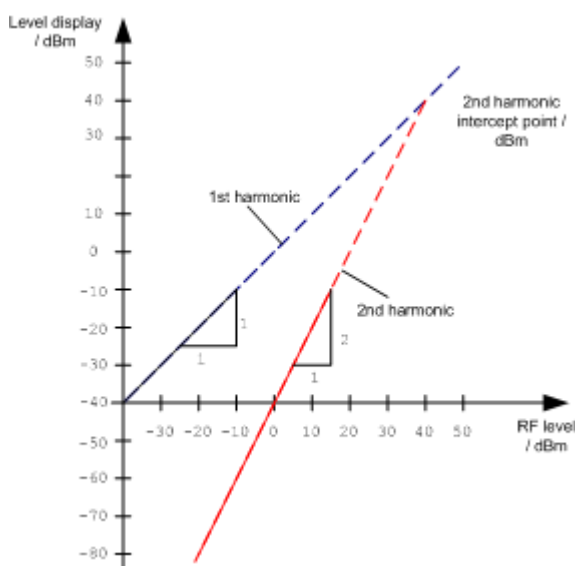


Fig. 4-13: Extrapolation of the 1st and 2nd harmonics to the 2nd harmonic intercept at 40 dBm

The following formula for the obtainable harmonic distortion d_2 in dB is derived from the straight-line equations and the given intercept point:

$$d_2 = \text{S.H.I.} - P_1 \quad (1)$$

where:

d_2	=	harmonic distortion
P_1	=	mixer level/dBm
S.H.I.	=	second harmonic intercept



The mixer level is the RF level applied to the RF input minus the set RF attenuation.

The formula for the internally generated level P_1 at the 2nd harmonic in dBm is:

$$P_1 = 2 * P_i - \text{S.H.I.} \quad (2)$$

The lower measurement limit for the harmonic is the noise floor of the signal analyzer. The harmonic of the measured DUT should – if sufficiently averaged by means of a video filter – be at least 4 dB above the noise floor so that the measurement error due to the input noise is less than 1 dB.

The following rules for measuring high harmonic ratios can be derived:

- Select the smallest possible IF bandwidth for a minimal noise floor.
- Select an RF attenuation which is high enough to just measure the harmonic ratio.

The maximum harmonic distortion is obtained if the level of the harmonic equals the intrinsic noise level of the receiver. The level applied to the mixer, according to (2), is:

$$P_1 = \frac{P_{\text{noise}} / \text{dBm} + \text{IP2}}{2}$$

At a resolution bandwidth of 10 Hz (noise level -143 dBm, S.H.I. = 40 dBm), the optimum mixer level is – 51.5 dBm. According to (1) a maximum measurable harmonic distortion of 91.5 dB minus a minimum S/N ratio of 4 dB is obtained.



If the harmonic emerges from noise sufficiently (approx. >15 dB), it is easy to check (by changing the RF attenuation) whether the harmonics originate from the DUT or are generated internally by the signal analyzer. If a harmonic originates from the DUT, its level remains constant if the RF attenuation is increased by 10 dB. Only the displayed noise is increased by 10 dB due to the additional attenuation. If the harmonic is exclusively generated by the signal analyzer, the level of the harmonic is reduced by 20 dB or is lost in noise. If both – the DUT and the signal analyzer – contribute to the harmonic, the reduction in the harmonic level is correspondingly smaller.

High-Sensitivity Harmonics Measurements

If harmonics have very small levels, the resolution bandwidth required to measure them must be reduced considerably. The sweep time is, therefore, also increased considerably. In this case, the measurement of individual harmonics is carried out with the R&S ESRP set to a small span. Only the frequency range around the harmonics will then be measured with a small resolution bandwidth.

Measurement Results

As a result of the harmonics distortion measurement, the zero span sweeps on all detected harmonics are shown in the diagram, separated by red display lines. This provides a very good overview of the measurement.

In addition, a result table is displayed providing the following information:

- 1st harmonic frequency
- THD (total harmonic distortion), relative and absolute values
- For each detected harmonic:
 - Frequency
 - RBW
 - Power

The results can also be queried using the remote commands:

THD: `CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:DISToRTion?`

on page 596

List of harmonics: `CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:LIST?`

on page 597

Softkeys for Harmonic Distortion Measurements

Harmonic Distortion.....	213
L No. of Harmonics.....	214
L Harmonic Sweep Time.....	214
L Harmonic RBW Auto.....	214
L Adjust Settings.....	214

Harmonic Distortion

Opens a submenu to determine the settings for harmonics measurement and activates the harmonic distortion measurement.

With this measurement you can measure the harmonics of a signal. In addition the THD (total harmonic distortion) is calculated in % and dB.

With span > 0 Hz, an automatic search for the first harmonic is carried out within the set frequency range. Also the level is adjusted. In zero span, the center frequency is unchanged.

In the upper window, the zero span sweeps on all harmonics are shown, separated by display lines. In the lower window, the mean RMS results are displayed in numerical values. The THD values are displayed in the marker field.

For details see [chapter 4.1.1.12, "Measuring Harmonic Distortion"](#), on page 210.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:HARMonics[:STATe]` on page 598

`CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:DISToRTion?` on page 596

`CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:LIST?` on page 597

No. of Harmonics ← Harmonic Distortion

Sets the number of harmonics that shall be measured. The range is from 1 to 26.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:NHARMonics` on page 597

Harmonic Sweep Time ← Harmonic Distortion

For details refer to the [Sweeptime Manual](#) softkey in the "Bandwidth" menu.

Harmonic RBW Auto ← Harmonic Distortion

Enables/disables the automatic adjustment of the resolution bandwidth for filter types Normal (3dB) (Gaussian) and 5-Pole filters. The automatic adjustment is carried out according to:

$$RBW_n = RBW_1 * n$$

If RBW_n is not available, the next higher value is used.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:BANDwidth:AUTO`

on page 596

Adjust Settings ← Harmonic Distortion

Activates the frequency search in the frequency range that was set before starting the harmonic measurement (if harmonic measurement was with span > 0) and adjusts the level.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:PRESet` on page 598

4.1.2 Measurement Configuration – MEAS CONFIG Key

The MEAS CONFIG key displays the submenu of the currently activated and running measurement function, e.g. the submenu of "TOI" or "Harmonic Distortion" (see [chapter 4.1.1, "Power Measurements – MEAS Key"](#), on page 99, for quick access to the measurement configuration. If no measurement function is activated, this key has no effect.

4.1.3 Performing Measurements – RUN SINGLE/RUN CONT Keys

The RUN SINGLE and RUN CONT keys are used to start measurement tasks.

- RUN SINGLE switches to single sweep mode and performs a single sweep, just as the [Single Sweep](#) softkey in the "Sweep" menu does.

- RUN CONT switches to continuous sweep mode and starts sweeping, just as the [Continuous Sweep](#) softkey in the "Sweep" menu does.

4.2 Configuration

Basic measurement settings that are common to many measurement tasks are described here. If you are performing a specific measurement task or using an operating mode other than Spectrum mode, be sure to check the specific measurement or mode description for settings that may deviate from these common settings.

4.2.1 Initializing the Configuration – PRESET Key

The PRESET key resets the instrument to the default setting and therefore provides a defined initial state as a known starting point for measurements.



If the "local lockout" function is active in the remote control mode, the PRESET key is disabled.

Further information

- [chapter 4.2.1.2, "Initial Configuration"](#), on page 216

Task

- [chapter 4.2.1.1, "Presetting the Instrument"](#), on page 215

4.2.1.1 Presetting the Instrument

1. Define the data set for the presetting:
 - a) To retrieve the originally provided settings file (see [chapter 4.2.1.2, "Initial Configuration"](#), on page 216), deactivate the "Startup Recall" softkey in the "SAVE/RCL" menu.
 - b) To retrieve a customized settings file, in the "File" menu, activate the "Startup Recall" softkey, press the "Startup Recall Setup" softkey, and select the corresponding file.
For details refer to [chapter 8.1, "Saving and Recalling Settings Files – SAVE/RCL Key"](#), on page 390.
2. Press the PRESET key to perform a preset.

Remote: *RST or [SYSTem:PRESet](#)



After you use the PRESET function, the history of previous actions is deleted, i.e. any actions performed previously cannot be undone or redone using the UNDO/REDO keys.

4.2.1.2 Initial Configuration

The initial configuration is selected such that the RF input is always protected against overload, provided that the applied signal levels are in the allowed range for the instrument.

The parameter set of the initial configuration can be customized using the "Startup Recall" softkey in the "Save/Rcl" menu. For further information refer to [chapter 8.1](#), "Saving and Recalling Settings Files – SAVE/RCL Key", on page 390.

Table 4-5: Initial configuration

Parameter	Setting
mode	Spectrum
sweep mode	auto
center frequency	$f_{\max}/2$
center frequency step size	$0.1 * \text{span}$
span	maximum possible (depends on instrument model)
RF attenuation	0 dB
reference level	-10 dBm
level range	100 dB log
level unit	dBm
sweep time	auto
resolution bandwidth	auto (3 MHz)
video bandwidth	auto (3 MHz)
FFT filters	off
span/RBW	100
RBW/VBW	1
sweep	cont
trigger	free run
trace 1	clr write
trace 2/3/4/5/6	blank
detector	auto peak
frequency offset	0 Hz
reference level offset	0 dB
reference level position	100 %

Parameter	Setting
grid	abs
cal correction	on
noise source	off
input	RF

4.2.2 Selecting the Frequency and Span – FREQ Key

The FREQ key is used to configure the frequency axis, to set the frequency offset and the signal track function. You can configure the frequency axis either by the start and stop frequency or the center frequency and the span.

To open the Frequency menu

- Press the FREQ key.
The "Frequency" menu is displayed. The "Frequency Center" edit dialog box is displayed.

Menu and softkey description

- [chapter 4.2.2.1, "Softkeys of the Frequency Menu"](#), on page 217

Tasks

- [chapter 4.2.2.2, "Specifying the Frequency Axis by the Start and Stop Frequency"](#), on page 221
- [chapter 4.2.2.3, "Specifying the Frequency Axis by the Center Frequency and the Span"](#), on page 221
- [chapter 4.2.2.4, "Specifying the Step Size for the Arrow Keys and the Rotary Knob"](#), on page 222
- [chapter 4.2.2.5, "Modifying the Frequency Axis by an Offset"](#), on page 222
- [chapter 4.2.2.6, "Tracking Signals \(Span > 0\)"](#), on page 222

4.2.2.1 Softkeys of the Frequency Menu

The following chapter describes all softkeys available in the "Frequency" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Center.....	218
CF Stepsize.....	218
L 0.1*Span (span > 0).....	218
L 0.1*RBW (span > 0).....	218
L 0.5*Span (span > 0).....	219
L 0.5*RBW (span > 0).....	219
L x*Span (span > 0).....	219

L x*RBW (span > 0).....	219
L =Center.....	219
L =Marker.....	220
L Manual.....	220
Start.....	220
Stop.....	220
Frequency Offset.....	220
Signal Track (span > 0).....	220
L Track On/Off (span > 0).....	221
L Track BW (span > 0).....	221
L Track Threshold (span > 0).....	221
L Select Trace (span > 0).....	221

Center

Opens an edit dialog box to enter the center frequency. The allowed range of values for the center frequency depends on the frequency span.

span > 0: $\text{span}_{\min}/2 \leq f_{\text{center}} \leq f_{\text{max}} - \text{span}_{\min}/2$

span = 0: $0 \text{ Hz} \leq f_{\text{center}} \leq f_{\text{max}}$

f_{max} and $\text{span}_{\min}$ are specified in the data sheet.

Remote command:

[SENSe:] FREQuency:CENTer on page 631

CF Stepsize

Opens a submenu to set the step size of the center frequency.

The step size defines the value by which the center frequency is increased or decreased when the arrow keys are pressed. When you use the rotary knob the center frequency changes in steps of 10% of the "Center Frequency Stepsize".

The step size can be set to a fraction of the span (span > 0) or a fraction of the resolution bandwidth (span = 0) or it can be set to a fixed value manually.

Apart from the =Center, =Marker and Manual softkeys, the other softkeys are displayed depending on the selected frequency span.

0.1*Span (span > 0) ← CF Stepsize

Sets the step size for the center frequency to 10 % of the span.

Remote command:

FREQ:CENT:STEP:LINK SPAN, see [SENSe:] FREQuency:CENTer:STEP:LINK on page 631

FREQ:CENT:STEP:LINK:FACT 10PCT, see [SENSe:] FREQuency:CENTer:STEP:LINK:FACTor on page 631

0.1*RBW (span > 0) ← CF Stepsize

Sets the step size for the center frequency to 10 % of the resolution bandwidth.

This is the default setting.

Remote command:

FREQ:CENT:STEP:LINK RBW, see [SENSe:]FREQuency:CENTer:STEP:LINK on page 631

FREQ:CENT:STEP:LINK:FACT 10PCT, see [SENSe:]FREQuency:CENTer:STEP:LINK:FACTor on page 631

0.5*Span (span > 0) ← CF Stepsize

Sets the step size for the center frequency to 50 % of the span.

Remote command:

FREQ:CENT:STEP:LINK SPAN, see [SENSe:]FREQuency:CENTer:STEP:LINK on page 631

FREQ:CENT:STEP:LINK:FACT 50PCT, see [SENSe:]FREQuency:CENTer:STEP:LINK:FACTor on page 631

0.5*RBW (span > 0) ← CF Stepsize

Sets the step size for the center frequency to 50 % of the resolution bandwidth.

Remote command:

FREQ:CENT:STEP:LINK RBW, see [SENSe:]FREQuency:CENTer:STEP:LINK on page 631

FREQ:CENT:STEP:LINK:FACT 50PCT, see [SENSe:]FREQuency:CENTer:STEP:LINK:FACTor on page 631

x*Span (span > 0) ← CF Stepsize

Opens an edit dialog box to set the step size for the center frequency as a percentage (%) of the span.

Remote command:

FREQ:CENT:STEP:LINK SPAN, see [SENSe:]FREQuency:CENTer:STEP:LINK on page 631

FREQ:CENT:STEP:LINK:FACT 20PCT, see [SENSe:]FREQuency:CENTer:STEP:LINK on page 631

x*RBW (span > 0) ← CF Stepsize

Opens an edit dialog box to set the step size for the center frequency as a percentage (%) of the resolution bandwidth. Values between 1 % and 100 % in steps of 1 % are allowed. The default setting is 10 %.

Remote command:

FREQ:CENT:STEP:LINK RBW, see [SENSe:]FREQuency:CENTer:STEP:LINK on page 631

FREQ:CENT:STEP:LINK:FACT 20PCT, see [SENSe:]FREQuency:CENTer:STEP:LINK on page 631

=Center ← CF Stepsize

Sets the step size to the value of the center frequency and removes the coupling of the step size to span or resolution bandwidth.

This function is especially useful for measurements of the signal harmonics. In this case, each stroke of the arrow key selects the center frequency of another harmonic.

=Marker ← CF Stepsize

Sets the step size to the value of the current marker and removes the coupling of the step size to span or resolution bandwidth.

This function is especially useful for measurements of the signal harmonics. In this case, each stroke of the arrow key selects the center frequency of another harmonic.

Manual ← CF Stepsize

Opens an edit dialog box to enter a fixed step size for the center frequency.

Remote command:

[\[SENSe:\] FREQuency:CENTer:STEP](#) on page 482

Start

Opens an edit dialog box to define the start frequency. The following range of values is allowed:

$$f_{\min} \leq f_{\text{start}} \leq f_{\max} - \text{span}_{\min}$$

$f_{\min}$, $f_{\max}$ and $\text{span}_{\min}$ are specified in the data sheet.

Remote command:

[\[SENSe:\] FREQuency:START](#) on page 632

Stop

Opens an edit dialog box to define the stop frequency. The following range of values for the stop frequency is allowed:

$$f_{\min} + \text{span}_{\min} \leq f_{\text{stop}} \leq f_{\max}$$

$f_{\min}$, $f_{\max}$ and $\text{span}_{\min}$ are specified in the data sheet.

Remote command:

[\[SENSe:\] FREQuency:STOP](#) on page 633

Frequency Offset

Opens an edit dialog box to enter a frequency offset that shifts the displayed frequency range by the specified offset.

The softkey indicates the current frequency offset. The allowed values range from -100 GHz to 100 GHz. The default setting is 0 Hz.

Remote command:

[\[SENSe:\] FREQuency:OFFSet](#) on page 632

Signal Track (span > 0)

Opens a submenu to define the signal tracking characteristics:

- search bandwidth
- threshold value
- trace

The search bandwidth and the threshold value are shown in the diagram by two vertical lines and one horizontal line, which are labeled as "TRK". After each sweep the center frequency is set to the maximum signal found within the searched bandwidth. If no maximum signal above the set threshold value is found in the searched bandwidth, the track mechanism stops.

The submenu contains the following softkeys:

- "Track On/Off (span > 0)" on page 221
- "Track BW (span > 0)" on page 221
- "Track Threshold (span > 0)" on page 221
- "Select Trace (span > 0)" on page 221

Track On/Off (span > 0) ← Signal Track (span > 0)

Switches the signal tracking on and off.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:STRack[:STATe]` on page 634

Track BW (span > 0) ← Signal Track (span > 0)

Opens an edit dialog box to set the search bandwidth for signal tracking. The frequency range is calculated as a function of the center frequency.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:STRack:BANDwidth|BWIDth`
on page 633

Track Threshold (span > 0) ← Signal Track (span > 0)

Opens an edit dialog box to set the threshold value for signal tracking.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:STRack:THReshold` on page 634

Select Trace (span > 0) ← Signal Track (span > 0)

Opens an edit dialog box to select the trace on which the signal is tracked.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:STRack:TRACe` on page 634

4.2.2.2 Specifying the Frequency Axis by the Start and Stop Frequency

1. Press the **Start** softkey and enter a start frequency.
2. Press the **Stop** softkey and enter a stop frequency.

4.2.2.3 Specifying the Frequency Axis by the Center Frequency and the Span

1. Press the FREQ key and enter a center frequency in the "Frequency Center" edit dialog box.
2. Press the SPAN key and enter the bandwidth you want to analyze.



Entering a value of 0 Hz causes a change to the zero span analysis mode.

4.2.2.4 Specifying the Step Size for the Arrow Keys and the Rotary Knob

1. Press the **CF Stepsize** softkey.
The available softkeys depend on the selected frequency span (zero span or span > 0).
2. To define the step size of the center frequency:
 - a) If span > 0:
Press "0.1*Span", "0.5*Span" or "x*Span" to define the step size for the center frequency as percentage of the span (see **CF Stepsize**).
 - b) If span = 0:
Press "0.1*RBW", "0.5*RBW", or "x*RBW" to define the step size for the center frequency as percentage of the resolution bandwidth (see **CF Stepsize**).
 - c) Press the **=Center** softkey to set the step size to the value of the center frequency and remove the dependency of the step size to span or resolution bandwidth.
 - d) Press the **=Marker** softkey to set the step size to the value of the marker and remove the dependency of the step size to span or resolution bandwidth.
 - e) Press the **Manual** softkey and enter a fixed step size for the center frequency.



The step size assigned to arrow keys corresponds to the selected value.
The step size of the rotary knob is always 10 % of it.

4.2.2.5 Modifying the Frequency Axis by an Offset

- Press the **Frequency Offset** softkey and enter the offset to shift the displayed frequency span.

4.2.2.6 Tracking Signals (Span > 0)

Note that signal tracking is available for frequency spans > 0.

- Press the **Signal Track (span > 0)** softkey to open the submenu and start and stop signal tracking with specified parameters.
- Press the **Track On/Off (span > 0)** softkey to switch signal tracking on or off.
- Press the **Track BW (span > 0)** softkey and enter a bandwidth for signal tracking.
- Press the **Track Threshold (span > 0)** softkey and enter the threshold for signal tracking.
- Press the **Select Trace (span > 0)** softkey and select the trace for signal tracking.

4.2.3 Setting the Frequency Span – SPAN Key

The SPAN key is used to set the frequency span to be analyzed.

To open the Span menu

- Press the SPAN key.
The "Span" menu is displayed. For span > 0 an edit dialog box to enter the frequency is displayed. For zero span, an edit dialog box to enter the sweep time is displayed.

Menu and softkey description

- [chapter 4.2.3.1, "Softkeys of the Span Menu"](#), on page 223

Task

- [chapter 4.2.3.2, "Specifying the Span \(Alternatives\)"](#), on page 224

4.2.3.1 Softkeys of the Span Menu

The following chapter describes all softkeys available in the "Span" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Functions to configure the span described elsewhere:

- ["Last Span"](#) on page 60
- ["Full Span"](#) on page 59

Span Manual	223
Zero Span	223

Span Manual

Opens an edit dialog box to enter the frequency span. The center frequency remains the same when you change the span.

The following range is allowed:

span = 0: 0 Hz

span >0: $\text{span}_{\min} \leq f_{\text{span}} \leq f_{\max}$

$f_{\max}$ and $\text{span}_{\min}$ are specified in the data sheet.

Remote command:

[\[SENSe:\] FREQuency: SPAN](#) on page 633

Zero Span

Sets the span to 0 Hz (zero span). The x-axis becomes the time axis with the grid lines corresponding to 1/10 of the current sweep time ("SWT").

Remote command:

FREQ:SPAN 0Hz, see [\[SENSe:\] FREQuency: SPAN](#) on page 633

4.2.3.2 Specifying the Span (Alternatives)

1. To set the span, use the [Span Manual](#), [Full Span](#), [Zero Span](#) and [Last Span](#) softkeys.
2. To define a frequency range, use the [Start](#) and [Stop](#) softkeys of the "Frequency" menu.
3. In zero span, the span corresponds to the sweep time. In that case, press the [SweepTime Manual](#) softkey and enter a sweep time.

4.2.4 Setting the Level Display and Configuring the RF Input – AMPT Key

The AMPT key is used to set the reference level, the level range and unit, the scaling and the RF attenuation.

To open the amplitude menu

- Press the AMPT key.
The "Amplitude" menu is displayed. The "Reference Level" dialog box is displayed.

Menu and softkey description

- [chapter 4.2.4.1, "Softkeys of the Amplitude Menu"](#), on page 224

Tasks

- [chapter 4.2.4.2, "Specifying the Amplitude"](#), on page 229

4.2.4.1 Softkeys of the Amplitude Menu

The following table shows all softkeys available in the "Amplitude" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Functions to configure the amplitude described elsewhere:

- ["RF Atten Manual"](#) on page 60

Ref Level	225
Range	225
L Range Log 100 dB	225
L Range Log 50 dB	225
L Range Log 10 dB	226
L Range Log 5 dB	226
L Range Log 1 dB	226
L Range Log Manual	226
L Range Linear %	226
L Range Lin. Unit	227
Unit	227

Preamplifier On/Off.....	227
RF Atten Auto.....	227
Ref Level Offset.....	228
Ref Level Position.....	228
Grid Abs/Rel	228
Noise Correction.....	228
Input (AC/DC).....	229
Input 50 Ω /75 Ω	229

Ref Level

Opens an edit dialog box to enter the reference level in the current unit (dBm, dB μ V, etc).

The reference level is the maximum value the AD converter can handle without distortion of the measured value. Signal levels above this value will not be measured correctly, which is indicated by the "IFOVL" status display.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel` on page 651

Range

Opens a submenu to define the display range of the level axis.

- Range Log 100 dB
- Range Log 50 dB
- Range Log 10 dB
- Range Log 5 dB
- Range Log 1 dB
- Range Log Manual
- Range Linear %
- Range Lin. Unit

Range Log 100 dB ← Range

Sets the level display range to 100 dB.

Remote command:

Logarithmic scaling:

`DISP:WIND:TRAC:Y:SPAC LOG`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 484

Display range:

`DISP:WIND:TRAC:Y 100DB`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 650

Range Log 50 dB ← Range

Sets the level display range to 50 dB.

Remote command:

Logarithmic scaling:

`DISP:WIND:TRAC:Y:SPAC LOG`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 484

Display range:

`DISP:WIND:TRAC:Y 50DB`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 650

Range Log 10 dB ← Range

Sets the level display range to 10 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:](#)

[SPACing](#) on page 484

Display range:

DISP:WIND:TRAC:Y 10DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 650

Range Log 5 dB ← Range

Sets the level display range to 5 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:](#)

[SPACing](#) on page 484

Display range:

DISP:WIND:TRAC:Y 5DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 650

Range Log 1 dB ← Range

Sets the level display range to 1 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:](#)

[SPACing](#) on page 484

Display range:

DISP:WIND:TRAC:Y 1DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 650

Range Log Manual ← Range

Opens an edit dialog box to define the display range of a logarithmic level axis manually.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:](#)

[SPACing](#) on page 484

Display range:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 650

Range Linear % ← Range

Selects linear scaling for the level axis in %.

The grid is divided into decadal sections.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in % referenced to the voltage value at the position of marker 1. This is the default setting for linear scaling.

Remote command:

DISP:TRAC:Y:SPAC LIN, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Range Lin. Unit ← Range

Selects linear scaling in dB for the level display range, i.e. the horizontal lines are labeled in dB.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in dB referenced to the power value at the position of marker 1.

Remote command:

DISP:TRAC:Y:SPAC LDB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Unit

Opens the "Unit" submenu to select the unit for the level axis.

The default setting in spectrum mode is dBm.

If a transducer is switched on, the softkey is not available.

In general, the signal analyzer measures the signal voltage at the RF input. The level display is calibrated in RMS values of an unmodulated sine wave signal. In the default state, the level is displayed at a power of 1 mW (= dBm). Via the known input impedance (50 Ω or 75 Ω), conversion to other units is possible. The following units are available and directly convertible:

- dBm
- dBmV
- dBμV
- dBμA
- dBpW
- Volt
- Ampere
- Watt

Remote command:

[CALCulate<n>:UNIT:POWer](#) on page 650

Preamp On/Off

Switches the preamplifier on and off.

Remote command:

[INPut:GAIN:STATe](#) on page 486

RF Atten Auto

Sets the RF attenuation automatically as a function of the selected reference level. This ensures that the optimum RF attenuation is always used. It is the default setting.

When measuring spurious emissions, using this softkey automatically opens the "Sweep List" dialog, see ["Sweep List dialog box"](#) on page 167.

Remote command:

`INPut:ATTenuation:AUTO` on page 652

Ref Level Offset

Opens an edit dialog box to enter the arithmetic level offset. This offset is added to the measured level irrespective of the selected unit. The scaling of the y-axis is changed accordingly. The setting range is ± 200 dB in 0.1 dB steps.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet` on page 651

Ref Level Position

Opens an edit dialog box to enter the reference level position, i.e. the position of the maximum AD converter value on the level axis. The setting range is from -200 to +200 %, 0 % corresponding to the lower and 100 % to the upper limit of the diagram.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition` on page 651

Grid Abs/Rel

Switches between absolute and relative scaling of the level axis (not available with "Linear" range).

"Abs"	Absolute scaling: The labeling of the level lines refers to the absolute value of the reference level. Absolute scaling is the default setting.
"Rel"	Relative scaling: The upper line of the grid is always at 0 dB. The scaling is in dB whereas the reference level is always in the set unit (for details on unit settings see the "Unit" softkey).

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE` on page 650

Noise Correction

If activated, the results are corrected by the instrument's inherent noise, which increases the dynamic range.

"ON"	A reference measurement of the instrument's inherent noise is carried out. The noise power measured is then subtracted from the power in the channel that is being examined. The inherent noise of the instrument depends on the selected center frequency, resolution bandwidth and level setting. Therefore, the correction function is disabled whenever one of these parameters is changed. A disable message is displayed on the screen. Noise correction must be switched on again manually after the change.
"OFF"	No noise correction is performed.

"AUTO" Noise correction is performed. After a parameter change, noise correction is restarted automatically and a new correction measurement is performed.

Remote command:

[\[SENSe:\]POWer:NCORrection](#) on page 559

Input (AC/DC)

Toggles the RF input of the R&S ESRP between AC and DC coupling.

Remote command:

[INPut:COUPling](#) on page 488

Input 50 Ω /75 Ω

Uses 50 Ω or 75 Ω as reference impedance for the measured levels. Default setting is 50 Ω .

The setting 75 Ω should be selected if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = 10 log (75 Ω /50 Ω).

All levels specified in this Operating Manual refer to the default setting of the instrument (50 Ω).

Remote command:

[INPut:IMPedance](#) on page 486

4.2.4.2 Specifying the Amplitude

1. Set the reference level, offset and position using the "Ref Level", "Ref Level Offset" and "Ref Level Position" softkeys (see ["Ref Level"](#) on page 225, ["Ref Level Offset"](#) on page 228 and ["Ref Level Position"](#) on page 228).
2. Select the level range and the unit for the level axis using the "Range" and "Unit" softkeys (see ["Range"](#) on page 225 and ["Unit"](#) on page 227).
3. Set the scaling using the "Ref Level Position" and/or "Grid Abs/Rel" softkeys (see ["Ref Level Position"](#) on page 228 and ["Grid Abs/Rel"](#) on page 228).
4. Set the attenuation using the "RF Atten Manual" or "RF Atten Auto" (see ["RF Atten Manual"](#) on page 60 and ["RF Atten Auto"](#) on page 227).
5. Define the RF input coupling using the "Input (AC/DC)" softkey, or a reference impedance using the "Input (50 Ω /75 Ω)" softkey (see ["Input \(AC/DC\)"](#) on page 66, ["Input 50 \$\Omega\$ /75 \$\Omega\$ "](#) on page 62).
6. Activate or deactivate the RF Preamplifier using the "Preamp" softkey (see ["Preamp On/Off"](#) on page 61).

4.2.5 Defining Automatic Settings – AUTO SET Key

The "Auto Set" menu allows you define automatic settings for measurements quickly.

To open the Auto Set menu

- Press the AUTO SET key.
The "Auto Set" menu is displayed.

Menu and softkey description

- [chapter 4.2.5.1, "Softkeys of the Auto Set Menu"](#), on page 230

4.2.5.1 Softkeys of the Auto Set Menu

The following table shows all softkeys available in the "Auto Set" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.



Adjusting settings automatically during triggered measurements

When you select an auto adjust function a measurement is performed to determine the optimal settings. If you select an auto adjust function for a triggered measurement, you can select how the R&S ESRP should behave:

- (default:) The measurement for adjustment waits for the next trigger
- The measurement for adjustment is performed without waiting for a trigger.
The trigger source is temporarily set to "Free Run". After the measurement is completed, the original trigger source is restored. The trigger level is adjusted as follows:
 - For IF Power and RF Power triggers:
Trigger Level = Reference Level - 15 dB
 - For Video trigger:
Trigger Level = 85 %

SCPI command:

[\[SENSe:\]ADJust:CONFigure:TRIG](#) on page 636

Auto All.....	231
Auto Freq.....	231
Auto Level.....	231
Settings.....	231
L Meas Time Manual.....	231
L Meas Time Auto.....	231
L Upper Level Hysteresis.....	232
L Lower Level Hysteresis.....	232
Sweep Type.....	232
L FFT.....	232
L Auto.....	232

L FFT Filter Mode.....	232
L Auto.....	232
L Narrow.....	233

Auto All

Performs all automatic settings.

- "Auto Freq" on page 231
- "Auto Level" on page 231

Remote command:

[SENSe:]ADJust:ALL on page 635

Auto Freq

Defines the center frequency automatically by determining the highest frequency level in the frequency span. This function uses the signal counter; thus it is intended for use with sinusoidal signals.

Remote command:

[SENSe:]ADJust:FREQuency on page 637

Auto Level

Defines the optimal reference level for the current measurement automatically.

The measurement time for automatic leveling can be defined using the [Settings](#) softkey.

You can define a threshold that the signal must exceed before the reference level is adjusted, see "[Upper Level Hysteresis](#)" on page 232 and "[Lower Level Hysteresis](#)" on page 232.

Remote command:

[SENSe:]ADJust:LEVel on page 637

Settings

Opens a submenu to define settings for automatic leveling.

Possible settings are:

- "[Meas Time Manual](#)" on page 231
- "[Meas Time Auto](#)" on page 231

Meas Time Manual ← Settings

Opens an edit dialog box to enter the duration of the level measurement in seconds.

The level measurement is used to determine the optimal reference level automatically (see the "Auto Level" softkey, "[Auto Level](#)" on page 231). The default value is 1 ms.

Remote command:

[SENSe:]ADJust:CONFigure:LEVel:DURation on page 636

Meas Time Auto ← Settings

The level measurement is used to determine the optimal reference level automatically (see the [Auto Level](#) softkey).

Upper Level Hysteresis ← Settings

Defines an upper threshold the signal must exceed before the reference level is automatically adjusted when the "Auto Level" function is performed.

Remote command:

[\[SENSe:\]ADJust:CONFiguration:HYSTeresis:UPPer](#) on page 636

Lower Level Hysteresis ← Settings

Defines a lower threshold the signal must exceed before the reference level is automatically adjusted when the "Auto Level" function is performed.

Remote command:

[\[SENSe:\]ADJust:CONFiguration:HYSTeresis:LOWer](#) on page 635

Sweep Type

Opens a submenu to define the sweep type.

Selecting the sweep type is not available for the I/Q analyzer.

In frequency sweep mode, the analyzer provides several possible methods of sweeping:

- "FFT" on page 232 (not available with 5-Pole filters, channel filters or RRC filters, see [chapter 4.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 239)
- "Auto" on page 232

FFT ← Sweep Type

Sets the [Sweep Type](#) to FFT mode.

The FFT sweep mode samples on a defined frequency value and transforms it to the spectrum by fast Fourier transformation (FFT).

FFT is not available when using 5-Pole filters, Channel filters or RRC filters. In this case, sweep mode is used.

Remote command:

[SWE:TYPE FFT](#), see [\[SENSe:\]SWEep:TYPE](#) on page 642

Auto ← Sweep Type

Selects the sweep type automatically. Supported sweep types are either FFT sweeps or analog frequency sweeps.

Remote command:

[SWE:TYPE AUTO](#), see [\[SENSe:\]SWEep:TYPE](#) on page 642

FFT Filter Mode ← Sweep Type

Defines the filter mode to be used for FFT filters by defining the partial span size. The partial span is the span which is covered by one FFT analysis.

Auto ← FFT Filter Mode ← Sweep Type

The firmware determines whether to use wide or narrow filters to obtain the best measurement results.

Remote command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:FFT](#) on page 638

Narrow ← FFT Filter Mode ← Sweep Type

For an RBW $\leq 10\text{kHz}$, the FFT filters with the smaller partial span are used. This allows you to perform measurements near a carrier with a reduced reference level due to a narrower analog prefilter.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:FFT` on page 638

4.2.6 Setting the Bandwidths and Sweep Time – BW Key

The BW key is used to set the resolution bandwidth, video bandwidth (VBW) and sweep time (SWT). The values available for resolution bandwidth and video bandwidth depend on the selected filter type. For details on channel filters see also [chapter 4.2.6.4, "List of Available RRC and Channel Filters"](#), on page 240 .

To open the bandwidth menu

- Press the BW key.
The "Bandwidth" menu is displayed.

Menu and softkey description

- [chapter 4.2.6.1, "Softkeys of the Bandwidth Menu"](#), on page 233

Further information

- [chapter 4.2.6.4, "List of Available RRC and Channel Filters"](#), on page 240
- [table 4-6](#)

Tasks

- [chapter 4.2.6.2, "Specifying the Bandwidth"](#), on page 239
- [chapter 4.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 239

4.2.6.1 Softkeys of the Bandwidth Menu

The following table shows all softkeys available in the "Bandwidth" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.



For Spurious Emission Measurements, the settings are defined in the "Sweep List" dialog, see ["Sweep List dialog box"](#) on page 167.

Res BW Manual	234
Res BW Auto	234
Video BW Manual	234
Video BW Auto	235
Sweptime Manual	235

Sweptime Auto.....	236
Sweep Type.....	236
L FFT.....	236
L Auto.....	236
L FFT Filter Mode.....	236
L Auto.....	237
L Narrow.....	237
Coupling Ratio.....	237
L RBW/VBW Sine [1/1].....	237
L RBW/VBW Pulse [.1].....	237
L RBW/VBW Noise [10].....	237
L RBW/VBW Manual.....	238
L Span/RBW Auto [100].....	238
L Span/RBW Manual.....	238
L Default Coupling.....	238
Filter Type.....	238

Res BW Manual

Opens an edit dialog box to enter a value for the resolution bandwidth. The available resolution bandwidths are specified in the data sheet.

For details on the correlation between resolution bandwidth and filter type refer to [chapter 4.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 239.

Numeric input is always rounded to the nearest possible bandwidth. For rotary knob or UP/DNARROW key inputs, the bandwidth is adjusted in steps either upwards or downwards.

The manual input mode of the resolution bandwidth is indicated by a green bullet next to the "RBW" display in the channel bar.

When measuring Spurious Emissions, using this softkey automatically opens the "Sweep List" dialog (see ["Sweep List dialog box"](#) on page 167).

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:AUTO` on page 637

`[SENSe:]BANDwidth|BWIDth[:RESolution]` on page 487

Res BW Auto

Couples the resolution bandwidth to the selected span (for span > 0). If you change the span, the resolution bandwidth is automatically adjusted.

This setting is recommended if you need the ideal resolution bandwidth in relation to a particular span.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:AUTO` on page 637

Video BW Manual

Opens an edit dialog box to enter the video bandwidth. The available video bandwidths are specified in the data sheet.

Numeric input is always rounded to the nearest possible bandwidth. For rotary knob or UP/DOWN key inputs, the bandwidth is adjusted in steps either upwards or downwards.

The manual input mode of the video bandwidth is indicated by a green bullet next to the "VBW" display in the channel bar.

Note: RMS detector and VBW.

If an RMS detector is used, the video bandwidth in the hardware is bypassed. Thus, duplicate trace averaging with small VBWs and RMS detector no longer occurs. However, the VBW is still considered when calculating the sweep time. This leads to a longer sweep time for small VBW values. Thus, you can reduce the VBW value to achieve more stable trace curves even when using an RMS detector. Normally, if the RMS detector is used the sweep time should be increased to get more stable trace curves. For details on detectors see [chapter 4.3.1.5, "Detector Overview"](#), on page 272.

When measuring Spurious Emissions, using this softkey automatically opens the "Sweep List" dialog (see ["Sweep List dialog box"](#) on page 167).

Remote command:

[\[SENSe:\]BANDwidth|BWIDth:VIDeo:AUTO](#) on page 639

[\[SENSe:\]BANDwidth|BWIDth:VIDeo](#) on page 639

Video BW Auto

Couples the video bandwidth to the resolution bandwidth. If you change the resolution bandwidth, the video bandwidth is automatically adjusted.

This setting is recommended if a minimum sweep time is required for a selected resolution bandwidth. Narrow video bandwidths result in longer sweep times due to the longer settling time. Wide bandwidths reduce the signal/noise ratio.

Remote command:

[\[SENSe:\]BANDwidth|BWIDth:VIDeo:AUTO](#) on page 639

Sweeptime Manual

Opens an edit dialog box to enter the sweep time.

Sweep time	
absolute max. sweep time value:	16000 s
absolute min. sweep time value:	zero span: 1 μ s
	span > 0: depends on device model (refer to data sheet)

Allowed values depend on the ratio of span to RBW and RBW to VBW. For details refer to the data sheet.

Numeric input is always rounded to the nearest possible sweep time. For rotary knob or UPARROW/DNARROW key inputs, the sweep time is adjusted in steps either downwards or upwards.

The manual input mode of the sweep time is indicated by a green bullet next to the "SWT" display in the channel bar. If the selected sweep time is too short for the selected bandwidth and span, level measurement errors will occur due to a too short settling time for the resolution or video filters. In this case, the R&S ESRP displays the error message "UNCAL" and marks the indicated sweep time with a red bullet.

When measuring Spurious Emissions, using this softkey automatically opens the "Sweep List" dialog, see ["Sweep List dialog box"](#) on page 167.

Remote command:

SWE:TIME:AUTO OFF, see [\[SENSe:\]SWEep:TIME:AUTO](#) on page 642

[\[SENSe:\]SWEep:TIME](#) on page 641

Sweeptime Auto

Couples the sweep time to the span, video bandwidth (VBW) and resolution bandwidth (RBW) (not available for zero span). If you change the span, resolution bandwidth or video bandwidth, the sweep time is automatically adjusted.

The R&S ESRP always selects the shortest sweep time that is possible without falsifying the signal. The maximum level error is < 0.1 dB, compared to using a longer sweep time.

When measuring Spurious Emissions, using this softkey automatically opens the "Sweep List" dialog, see ["Sweep List dialog box"](#) on page 167.

Remote command:

[\[SENSe:\]SWEep:TIME:AUTO](#) on page 642

Sweep Type

Opens a submenu to define the sweep type.

Selecting the sweep type is not available for the I/Q analyzer.

In frequency sweep mode, the analyzer provides several possible methods of sweeping:

- ["FFT"](#) on page 232 (not available with 5-Pole filters, channel filters or RRC filters, see [chapter 4.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 239)
- ["Auto"](#) on page 232

FFT ← Sweep Type

Sets the [Sweep Type](#) to FFT mode.

The FFT sweep mode samples on a defined frequency value and transforms it to the spectrum by fast Fourier transformation (FFT).

FFT is not available when using 5-Pole filters, Channel filters or RRC filters. In this case, sweep mode is used.

Remote command:

SWE:TYPE FFT, see [\[SENSe:\]SWEep:TYPE](#) on page 642

Auto ← Sweep Type

Selects the sweep type automatically. Supported sweep types are either FFT sweeps or analog frequency sweeps.

Remote command:

SWE:TYPE AUTO, see [\[SENSe:\]SWEep:TYPE](#) on page 642

FFT Filter Mode ← Sweep Type

Defines the filter mode to be used for FFT filters by defining the partial span size. The partial span is the span which is covered by one FFT analysis.

Auto ← FFT Filter Mode ← Sweep Type

The firmware determines whether to use wide or narrow filters to obtain the best measurement results.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:FFT` on page 638

Narrow ← FFT Filter Mode ← Sweep Type

For an RBW ≤ 10 kHz, the FFT filters with the smaller partial span are used. This allows you to perform measurements near a carrier with a reduced reference level due to a narrower analog prefilter.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:FFT` on page 638

Coupling Ratio

Opens a submenu to select the coupling ratios for functions coupled to the bandwidth.

RBW/VBW Sine [1/1] ← Coupling Ratio

Sets the following coupling ratio:

"video bandwidth = resolution bandwidth"

This is the default setting for the coupling ratio resolution bandwidth/video bandwidth.

This is the coupling ratio recommended if sinusoidal signals are to be measured.

This setting takes effect if you define the video bandwidth automatically ([Video BW Auto](#)).

Remote command:

`BAND:VID:RAT 1`, see `[SENSe:]BANDwidth|BWIDth:VIDeo:RATio` on page 639

RBW/VBW Pulse [.1] ← Coupling Ratio

Sets the following coupling ratio:

"video bandwidth = 10 × resolution bandwidth or"

"video bandwidth = 10 MHz (= max. VBW)."

This coupling ratio is recommended whenever the amplitudes of pulsed signals are to be measured correctly. The IF filter is exclusively responsible for pulse shaping. No additional evaluation is performed by the video filter.

This setting takes effect if you define the video bandwidth automatically ([Video BW Auto](#)).

Remote command:

`BAND:VID:RAT 10`, see `[SENSe:]BANDwidth|BWIDth:VIDeo:RATio` on page 639

RBW/VBW Noise [10] ← Coupling Ratio

Sets the following coupling ratio:

"video bandwidth = resolution bandwidth/10"

At this coupling ratio, noise and pulsed signals are suppressed in the video domain. For noise signals, the average value is displayed.

This setting takes effect if you define the video bandwidth automatically ([Video BW Auto](#)).

Remote command:

BAND:VID:RAT 0.1, see [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#) on page 639

RBW/VBW Manual ← Coupling Ratio

Activates the manual input of the coupling ratio.

The resolution bandwidth/video bandwidth ratio can be set in the range 0.001 to 1000.

This setting takes effect if you define the video bandwidth automatically ([Video BW Auto](#)).

Remote command:

BAND:VID:RAT 10, see [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#) on page 639

Span/RBW Auto [100] ← Coupling Ratio

Sets the following coupling ratio:

"resolution bandwidth = span/100"

This coupling ratio is the default setting of the R&S ESRP.

This setting takes effect if you define the resolution bandwidth automatically ([Res BW Auto](#)).

Remote command:

BAND:VID:RAT 0.001, see [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#) on page 639

Span/RBW Manual ← Coupling Ratio

Activates the manual input of the coupling ratio.

This setting takes effect if you define the resolution bandwidth automatically ([Res BW Auto](#)).

The span/resolution bandwidth ratio can be set in the range 1 to 10000.

Remote command:

BAND:RAT 0.1, see [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:RATio](#) on page 638

Default Coupling ← Coupling Ratio

Sets all coupled functions to the default state ("AUTO").

In addition, the ratio "RBW/VBW" is set to "SINE [1/1]" and the ratio "SPAN/RBW" to 100.

Remote command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:AUTO](#) on page 637

[\[SENSe:\]BANDwidth|BWIDth:VIDeo:AUTO](#) on page 639

[\[SENSe:\]SWEep:TIME:AUTO](#) on page 642

Filter Type

Opens a submenu to select the filter type.

When measuring Spurious Emissions, using this softkey automatically opens the "Sweep List" dialog (see ["Sweep List dialog box"](#) on page 167).

The submenu contains the following softkeys:

- Normal (3 dB)
- CISPR (6 dB)
- MIL Std (6 dB)

Note that the 6 dB bandwidths are available only with option R&S FSV-K54.

- Channel
- RRC
- 5-Pole (not available for sweep type "FFT")

For detailed information on filters see [chapter 4.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 239 and [chapter 4.2.6.4, "List of Available RRC and Channel Filters"](#), on page 240.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:TYPE` on page 487

4.2.6.2 Specifying the Bandwidth

1. Set the resolution bandwidth using the [Res BW Manual](#) or [Res BW Auto](#) softkey.
2. Set the video bandwidth using the [Video BW Manual](#) or [Video BW Auto](#) softkey.
3. Set the sweep time using the [Sweptime Manual](#) or [Sweptime Auto](#) softkey.
4. Press the [Filter Type](#) softkey and select the appropriate filters.

4.2.6.3 Selecting the Appropriate Filter Type

All resolution bandwidths are realized with digital filters.

The video filters are responsible for smoothing the displayed trace. Using video bandwidths that are small compared to the resolution bandwidth, only the signal average is displayed and noise peaks and pulsed signals are repressed. If pulsed signals are to be measured, it is advisable to use a video bandwidth that is large compared to the resolution bandwidth ($VBW * 10 \times RBW$) for the amplitudes of pulses to be measured correctly.

The following filter types are available:

- Normal (3dB) (Gaussian) filters
The Gaussian filters are set by default. The available bandwidths are specified in the data sheet.
- CISPR (6 dB) filters
For more information see [chapter 3.2.1, "Measurement Bandwidth"](#), on page 44.
- MIL Std (6 dB) filters
For more information see [chapter 3.2.1, "Measurement Bandwidth"](#), on page 44.
- Channel filters

For details see [chapter 4.2.6.4, "List of Available RRC and Channel Filters"](#), on page 240 .

Channel filters do not support FFT mode.

- RRC filters

For details see [chapter 4.2.6.4, "List of Available RRC and Channel Filters"](#), on page 240 .

RRC filters do not support FFT mode.

- 5-Pole filters

The available bandwidths are specified in the data sheet.

5-Pole filters do not support FFT mode.

4.2.6.4 List of Available RRC and Channel Filters

For power measurement a number of especially steep-edged channel filters are available (see the following table). The indicated filter bandwidth is the 3 dB bandwidth. For RRC filters, the fixed roll-off factor (α) is also indicated.

Table 4-6: Filter types

Filter Bandwidth	Filter Type	Application
100 Hz	CFILter	
200 Hz	CFILter	A0
300 Hz	CFILter	
500 Hz	CFILter	
1 kHz	CFILter	
1.5 kHz	CFILter	
2 kHz	CFILter	
2.4 kHz	CFILter	SSB
2.7 kHz	CFILter	
3 kHz	CFILter	
3.4 kHz	CFILter	
4 kHz	CFILter	DAB, Satellite
4.5 kHz	CFILter	
5 kHz	CFILter	
6 kHz	CFILter	
6 kHz, $\alpha=0.2$	RRC	APCO
8.5 kHz	CFILter	ETS300 113 (12.5 kHz channels)
9 kHz	CFILter	AM Radio
10 kHz	CFILter	

Filter Bandwidth	Filter Type	Application
12.5 kHz	CFILter	CDMAone
14 kHz	CFILter	ETS300 113 (20 kHz channels)
15 kHz	CFILter	
16 kHz	CFILter	ETS300 113 (25 kHz channels)
18 kHz, $\alpha=0.35$	RRC	TETRA
20 kHz	CFILter	
21 kHz	CFILter	PDC
24.3 kHz, $\alpha=0.35$	RRC	IS 136
25 kHz	CFILter	
30 kHz	CFILter	CDPD, CDMAone
50 kHz	CFILter	
100 kHz	CFILter	
150 kHz	CFILter	FM Radio
192 kHz	CFILter	PHS
200 kHz	CFILter	
300 kHz	CFILter	
500 kHz	CFILter	J.83 (8-VSB DVB, USA)
1 MHz	CFILter	CDMAone
1.228 MHz	CFILter	CDMAone
1.28 MHz, $\alpha=0.22$	RRC	
1.5 MHz	CFILter	DAB
2 MHz	CFILter	
3 MHz	CFILter	
3.75 MHz	CFILter	
3.84 MHz, $\alpha=0.22$	RRC	W-CDMA 3GPP
4.096 MHz, $\alpha=0.22$	RRC	W-CDMA NTT DOCoMo
5 MHz	CFILter	
20 MHz	CFILter	
28 MHz	CFILter	
40 MHz	CFILter	

4.2.7 Configuring the Sweep Mode – SWEEP Key

The SWEEP key is used to configure the sweep mode. Continuous sweep or single sweep is possible. The sweep time and the number of measured values are set.

To open the Sweep menu

- Press the SWEEP key.
The "Sweep" menu is displayed.

Menu and softkey description

- [chapter 4.2.7.1, "Softkeys of the Sweep Menu"](#), on page 242

Task

- [chapter 4.2.7.2, "Specifying the Sweep Settings"](#), on page 247

4.2.7.1 Softkeys of the Sweep Menu

The following table shows all softkeys available in the "Sweep" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Continuous Sweep.....	242
Single Sweep.....	243
Continue Single Sweep.....	243
Sweeptime Manual.....	243
Sweeptime Auto.....	243
Sweep Type.....	244
L FFT.....	244
L Auto.....	244
L FFT Filter Mode.....	244
L Auto.....	244
L Narrow.....	245
Sweep Count.....	245
Sweep Points.....	245
Select Frame.....	245
Continue Frame (On Off).....	246
Frame Count.....	246
Spectrogram Clear.....	246

Continuous Sweep

Sets the continuous sweep mode: the sweep takes place continuously according to the trigger settings. This is the default setting.

The trace averaging is determined by the sweep count value (see the "Sweep Count" softkey, ["Sweep Count"](#) on page 245).

Remote command:

`INITiate<n>:CONTinuous` on page 459

Single Sweep

Sets the single sweep mode: after triggering, starts the number of sweeps that are defined by using the **Sweep Count** softkey. The measurement stops after the defined number of sweeps has been performed.

Remote command:

INITiate<n>:**CONTinuous** on page 459

Continue Single Sweep

Repeats the number of sweeps set by using the **Sweep Count** softkey, without deleting the trace of the last measurement.

This is particularly of interest when using the trace configurations "Average" or "Max Hold" to take previously recorded measurements into account for averaging/maximum search.

For details on trace configuration refer to [chapter 4.3.1, "Trace Configuration"](#), on page 260.

Remote command:

INITiate<n>:**CONMeas** on page 640

Sweeptime Manual

Opens an edit dialog box to enter the sweep time.

Sweep time	
absolute max. sweep time value:	16000 s
absolute min. sweep time value:	zero span: 1 μ s
	span > 0: depends on device model (refer to data sheet)

Allowed values depend on the ratio of span to RBW and RBW to VBW. For details refer to the data sheet.

Numeric input is always rounded to the nearest possible sweep time. For rotary knob or UPARROW/DNARROW key inputs, the sweep time is adjusted in steps either downwards or upwards.

The manual input mode of the sweep time is indicated by a green bullet next to the "SWT" display in the channel bar. If the selected sweep time is too short for the selected bandwidth and span, level measurement errors will occur due to a too short settling time for the resolution or video filters. In this case, the R&S ESRP displays the error message "UNCAL" and marks the indicated sweep time with a red bullet.

When measuring Spurious Emissions, using this softkey automatically opens the "Sweep List" dialog, see ["Sweep List dialog box"](#) on page 167.

Remote command:

SWE:TIME:AUTO OFF, see **[SENSe:] SWEep:TIME:AUTO** on page 642

[SENSe:] SWEep:TIME on page 641

Sweeptime Auto

Couples the sweep time to the span, video bandwidth (VBW) and resolution bandwidth (RBW) (not available for zero span). If you change the span, resolution bandwidth or video bandwidth, the sweep time is automatically adjusted.

The R&S ESRP always selects the shortest sweep time that is possible without falsifying the signal. The maximum level error is < 0.1 dB, compared to using a longer sweep time.

When measuring Spurious Emissions, using this softkey automatically opens the "Sweep List" dialog, see ["Sweep List dialog box"](#) on page 167.

Remote command:

[\[SENSe:\] SWEep:TIME: AUTO](#) on page 642

Sweep Type

Opens a submenu to define the sweep type.

Selecting the sweep type is not available for the I/Q analyzer.

In frequency sweep mode, the analyzer provides several possible methods of sweeping:

- ["FFT"](#) on page 232 (not available with 5-Pole filters, channel filters or RRC filters, see [chapter 4.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 239)
- ["Auto"](#) on page 232

FFT ← Sweep Type

Sets the [Sweep Type](#) to FFT mode.

The FFT sweep mode samples on a defined frequency value and transforms it to the spectrum by fast Fourier transformation (FFT).

FFT is not available when using 5-Pole filters, Channel filters or RRC filters. In this case, sweep mode is used.

Remote command:

[SWE:TYPE FFT](#), see [\[SENSe:\] SWEep:TYPE](#) on page 642

Auto ← Sweep Type

Selects the sweep type automatically. Supported sweep types are either FFT sweeps or analog frequency sweeps.

Remote command:

[SWE:TYPE AUTO](#), see [\[SENSe:\] SWEep:TYPE](#) on page 642

FFT Filter Mode ← Sweep Type

Defines the filter mode to be used for FFT filters by defining the partial span size. The partial span is the span which is covered by one FFT analysis.

Auto ← FFT Filter Mode ← Sweep Type

The firmware determines whether to use wide or narrow filters to obtain the best measurement results.

Remote command:

[\[SENSe:\] BANDwidth|BWIDth\[:RESolution\]:FFT](#) on page 638

Narrow ← FFT Filter Mode ← Sweep Type

For an RBW ≤ 10 kHz, the FFT filters with the smaller partial span are used. This allows you to perform measurements near a carrier with a reduced reference level due to a narrower analog prefilter.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:FFT` on page 638

Sweep Count

Opens an edit dialog box to enter the number of sweeps to be performed in the single sweep mode. Values from 0 to 32767 are allowed. If the values 0 or 1 are set, one sweep is performed. The sweep count is applied to all the traces in a diagram.

If the trace configurations "Average", "Max Hold" or "Min Hold" are set, the sweep count value also determines the number of averaging or maximum search procedures.

In continuous sweep mode, if sweep count = 0 (default), averaging is performed over 10 sweeps. For sweep count = 1, no averaging, maxhold or minhold operations are performed.

For details on trace configuration see [chapter 4.3.1, "Trace Configuration"](#), on page 260.

Example:

- Press the TRACE key > [Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6](#) softkey > ["Max Hold"](#) on page 51 softkey.
- Press the SWEEP key > "Sweep Count" softkey.
- In the "Average Sweep Count" dialog box, enter 10.
- Press the ["Single Sweep"](#) on page 243 softkey:
R&S ESRP performs the "Max Hold" function over 10 sweeps.

Remote command:

`[SENSe:]SWEep:COUNT` on page 641

Sweep Points

Opens an edit dialog box to enter the number of measured values to be collected during one sweep.

- Entry via rotary knob:
 - In the range from 101 to 1001, the sweep points are increased or decreased in steps of 100 points.
 - In the range from 1001 to 32001, the sweep points are increased or decreased in steps of 1000 points.
- Entry via keypad:
All values in the defined range can be set.

The default value is 691 sweep points.

When measuring spurious emissions, using this softkey automatically opens the "Sweep List" dialog, see ["Sweep List dialog box"](#) on page 167.

Remote command:

`[SENSe:]SWEep:POINTs` on page 641

Select Frame

For spectrogram measurements only.

Opens a dialog box to select a specific frame and loads the corresponding trace from the memory.

Note that activating a marker or changing the position of the active marker automatically selects the frame that belongs to that marker.

This softkey is available in single sweep mode or if the sweep is stopped.

Remote command:

[CALCulate<n>:SGRam:FRAMe:SElect](#) on page 662

Continue Frame (On Off)

For spectrogram measurements only.

Determines whether the results of the last measurement are deleted before starting a new measurement.

- **On**
Repeats the single sweep measurement without deleting the spectrogram results of the last measurement. One of the following trace modes is to be used: Max Hold, Min Hold, Average.
- **Off**
Deletes the last measurement results before performing a single sweep measurement.

This softkey is available in single sweep mode.

Remote command:

[CALCulate<n>:SGRam:CONT](#) on page 662

Frame Count

For spectrogram measurements only.

Opens a dialog box to set the number of frames to be captured in a single sweep.

Therefore, the frame count defines the number of traces the R&S ESRP plots in the Spectrogram result display in a single sweep. The maximum number of possible frames depends on the history depth (see [CALCulate<n>:SGRam:HDEPth](#) on page 468).

The sweep count, on the other hand, determines how many sweeps are combined in one frame in the Spectrogram, i.e. how many sweeps the R&S ESRP performs to plot one trace in the Spectrogram result display (see ["Sweep Count"](#) on page 245).

This softkey is available in single sweep mode.

Remote command:

[CALCulate<n>:SGRam:FRAMe:COUNt](#) on page 662

Spectrogram Clear

For spectrogram measurements only.

Resets the Spectrogram result display and clears its history buffer.

Remote command:

[CALCulate<n>:SGRam:CLEAr\[:IMMediate\]](#) on page 467

4.2.7.2 Specifying the Sweep Settings

1. Press the [Sweep Count](#) softkey and enter the sweep count.
2. Press the [Sweep Time Manual](#) or [Sweep Time Auto](#) softkey to set the sweep time.
3. Press the [Sweep Type](#) softkey to select the sweep type.
4. Press the [Sweep Points](#) softkey and enter the number of sweep points.
5. Press the [Continuous Sweep](#) or [Single Sweep](#) softkey to select the sweep mode.
6. Press the [Continue Single Sweep](#) softkey to repeat the single sweep.

4.2.8 Triggering the Sweep – TRIG Key

The TRIG key is used to select trigger mode, trigger threshold, trigger delay, trigger polarity and for gated sweep the gate configuration.

To open the Trigger menu

- Press the TRIG key.
The "Trigger" menu is displayed.

Menu and softkey description

- [chapter 4.2.8.1, "Softkeys of the Trigger Menu"](#), on page 247

Tasks

- [chapter 4.2.8.2, "Specifying the Trigger Settings"](#), on page 253
- [chapter 4.2.8.3, "Using Gated Sweep Operation"](#), on page 254

4.2.8.1 Softkeys of the Trigger Menu

The following table shows all softkeys available in the "Trigger" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Trg/Gate Source.....	248
L Free Run.....	248
L External.....	248
L Video.....	248
L RF Power.....	249
L IF Power/BB Power.....	249
L Time.....	250
Trg/Gate Level.....	250
Trg/Gate Polarity.....	250
Trigger Offset.....	250
Repetition Interval.....	251

Trigger Hysteresis.....	251
Trigger Holdoff.....	251
Gated Trigger.....	251
Gate Settings.....	252
L Gate Mode (Lvl/Edge).....	252
L Gate Delay.....	252
L Gate Length (Gate Mode Edge).....	253
L Trg/Gate Source.....	253
L Trg/Gate Level.....	253
L Trg/Gate Polarity.....	253
L Sweep Time.....	253
L Res BW Manual.....	253

Trg/Gate Source

Opens the "Trigger/Gate Source" dialog box to select the trigger/gate mode.

As gate modes, all modes except "Power Sensor" are available. For details see also [chapter 4.2.8.3, "Using Gated Sweep Operation"](#), on page 254.

The default setting is "Free Run". If a trigger mode other than "Free Run" has been set, the enhancement label "TRG" is displayed and the trigger source is indicated.

Note: When triggering or gating is activated, the squelch function is automatically disabled (see ["Squelch"](#) on page 293).

Remote command:

[TRIGger<n>\[:SEquence\]:SOURce](#) on page 645

[\[SENSe:\]SWEep:EGATe:SOURce](#) on page 648

Free Run ← Trg/Gate Source

The start of a sweep is not triggered. Once a measurement is completed, another is started immediately.

Remote command:

[TRIG:SOUR IMM](#), see [TRIGger<n>\[:SEquence\]:SOURce](#) on page 645

External ← Trg/Gate Source

Defines triggering via a TTL signal at the "EXT TRIG/GATE IN" input connector on the rear panel.

Remote command:

[TRIG:SOUR EXT](#), see [TRIGger<n>\[:SEquence\]:SOURce](#) on page 645

[SWE:EGAT:SOUR EXT](#) for gated triggering, see [\[SENSe:\]SWEep:EGATe:SOURce](#) on page 648

Video ← Trg/Gate Source

Defines triggering by the displayed voltage.

A horizontal trigger line is shown in the diagram. It is used to set the trigger threshold from 0 % to 100 % of the diagram height.

Video mode is only available in the time domain.

Remote command:

TRIG:SOUR VID, see TRIGger<n>[:SEQuence]:SOURce on page 645

SWE:EGAT:SOUR VID for gated triggering, see [SENSe:]SWEep:EGATe:SOURce on page 648

RF Power ← Trg/Gate Source

Defines triggering of the measurement via signals which are outside the measurement channel.

In RF Power trigger mode the instrument uses a level detector at the first intermediate frequency. The detector threshold can be selected in a range between - 50 dBm and -10 dBm at the input mixer. The resulting trigger level at the RF input lies within the following range:

$(-24\text{dBm} + \text{RF Att}) \leq \text{Triggerlevel} \leq (+5\text{dBm} + \text{RF Att})$, max. 30 dBm, for Preamp = OFF

$(-40\text{dBm} + \text{RF Att}) \leq \text{Triggerlevel} \leq (-11\text{dBm} + \text{RF Att})$, max. 30 dBm, for Preamp = ON

with

$500\text{ MHz} \leq \text{InputSignal} \leq 7\text{ GHz}$

Note: If input values outside of this range occur (e.g. for fullspan measurements), the sweep may be aborted and a message indicating the allowed input values is displayed in the status bar.

A [Trigger Offset](#), [Trg/Gate Polarity](#) and [Trigger Holdoff](#) can be defined for the RF trigger to improve the trigger stability, but no hysteresis.

Remote command:

TRIG:SOUR RFP, see TRIGger<n>[:SEQuence]:SOURce on page 645

SWE:EGAT:SOUR RFP for gated triggering, see [SENSe:]SWEep:EGATe:SOURce on page 648

IF Power/BB Power ← Trg/Gate Source

For this purpose, the R&S ESRP uses a level detector at the second intermediate frequency.

The available trigger levels depend on the RF attenuation and preamplification. A reference level offset, if defined, is also considered.

For details on available trigger levels and trigger bandwidths see the data sheet.

The bandwidth at the intermediate frequency depends on the RBW and sweep type:

Sweep mode:

- RBW > 500 kHz: 40 MHz, nominal
- RBW ≤ 500 kHz: 6 MHz, nominal

FFT mode:

- RBW > 20 kHz: 40 MHz, nominal
- RBW ≤ 20 kHz: 6 MHz, nominal

Note: Be aware that in auto sweep type mode, due to a possible change in sweep types, the bandwidth may vary considerably for the same RBW setting.

The R&S ESRP is triggered as soon as the trigger level is exceeded around the selected frequency (= start frequency in the frequency sweep).

Thus, the measurement of spurious emissions, e.g. for pulsed carriers, is possible even if the carrier lies outside the selected frequency span.

Remote command:

TRIG:SOUR IFP, see [TRIGger<n>\[:SEquence\]:SOURce](#) on page 645

SWE:EGAT:SOUR IFP for gated triggering, see [\[SENSe:\]SWEep:EGATe:SOURce](#) on page 648

Time ← Trg/Gate Source

Opens an edit dialog box to define a repetition interval in which the measurement is triggered. The shortest interval is 2 ms.

Remote command:

TRIG:SOUR TIME[TRIGger<n>\[:SEquence\]:SOURce](#) on page 645

Trg/Gate Level

Opens an edit dialog box to enter the trigger/gate level.

For details see also [chapter 4.2.8.3, "Using Gated Sweep Operation"](#), on page 254.

In the trigger modes "Time" and "Power Sensor", this softkey is not available.

Remote command:

[TRIGger<n>\[:SEquence\]:LEVel:IFPower](#) on page 644

[TRIGger<n>\[:SEquence\]:LEVel:VIDeo](#) on page 645

Trg/Gate Polarity

Sets the polarity of the trigger/gate source.

The sweep starts after a positive or negative edge of the trigger signal. The default setting is "Pos". The setting applies to all trigger modes with the exception of the "Free Run", "Power Sensor" and "Time" mode.

For details also see [chapter 4.2.8.3, "Using Gated Sweep Operation"](#), on page 254.

"Pos" Level triggering: the sweep is stopped by the logic "0" signal and restarted by the logical "1" signal after the gate delay time has elapsed.

"Neg" Edge triggering: the sweep is continued on a "0" to "1" transition for the gate length duration after the gate delay time has elapsed.

Remote command:

[TRIGger<n>\[:SEquence\]:SLOPe](#) on page 645

[\[SENSe:\]SWEep:EGATe:POLarity](#) on page 648

Trigger Offset

Opens an edit dialog box to enter the time offset between the trigger signal and the start of the sweep.

offset > 0:	Start of the sweep is delayed
offset < 0:	Sweep starts earlier (pre-trigger) Only possible for span = 0 (e.g. I/Q Analyzer mode) and gated trigger switched off Maximum allowed range limited by the sweep time: $\text{pretrigger}_{\text{max}} = \text{sweep time}$

In the "External" or "IF Power" trigger mode, a common input signal is used for both trigger and gate. Therefore, changes to the gate delay will affect the trigger delay (trigger offset) as well.

Tip: To determine the trigger point in the sample (for "External" or "IF Power" trigger mode), use the `TRACe<n>:IQ:TPISample?` command.

In the "Time" trigger mode, this softkey is not available.

Remote command:

`TRIGger<n>[:SEquence]:HOLDoFF[:TIME]` on page 643

Repetition Interval

Opens an edit dialog box to define a repetition interval in which the measurement is triggered. The shortest interval is 2 ms. This softkey is only available if the trigger source "Time" is selected (see "Time" on page 250).

Remote command:

`TRIGger<n>[:SEquence]:TIME:RINterval` on page 646

Trigger Hysteresis

Defines the value for the trigger hysteresis for "IF power" or "RF Power" trigger sources. The hysteresis in dB is the value the input signal must stay below the power trigger level in order to allow a trigger to start the measurement. The range of the value is between 3 dB and 50 dB with a step width of 1 dB.

Remote command:

`TRIGger<n>[:SEquence]:IFPower:HYSTeresis` on page 644

Trigger Holdoff

Defines the value for the trigger holdoff. The holdoff value in s is the time which must pass before triggering, in case another trigger event happens.

This softkey is only available if "IFPower", "RF Power" or "BBPower" is the selected trigger source.

Remote command:

`TRIGger<n>[:SEquence]:IFPower:HOLDoFF` on page 643

Gated Trigger

Switches the sweep mode with gate on or off.

This softkey requires the following "Trigger Mode" (see "Trg/Gate Source" on page 248):

span > 0	External or IF Power/BB PowerIF Power
span = 0	External or IF Power/BB PowerIF Power or Video

If a different mode is active, the **IF Power/BB Power** trigger mode is automatically selected.

Note: When triggering or gating is activated, the squelch function is automatically disabled (see **"Squelch"** on page 293).

If the gate is switched on, a gate signal applied to the rear panel connector "EXT TRIGGER/GATE" or the internal IF power detector controls the sweep of the analyzer.

In the trigger mode **Time**, this softkey is not available.

For details also see [chapter 4.2.8.3, "Using Gated Sweep Operation"](#), on page 254.

Remote command:

[SENSe:] SWEep:EGATe on page 647

[SENSe:] SWEep:EGATe:SOURce on page 648

Gate Settings

Opens a submenu to make all the settings required for gated sweep operation.

In the "Time" trigger mode, this softkey is not available.

For details also see [chapter 4.2.8.3, "Using Gated Sweep Operation"](#), on page 254.

Gate Mode (Lvl/Edge) ← Gate Settings

Sets the gate mode. As settings level-triggered or edge-triggered gate mode can be selected.

For details also see [chapter 4.2.8.3, "Using Gated Sweep Operation"](#), on page 254.

"Edge" Edge-triggered gate mode

"Lvl" Level-triggered gate mode

This mode is not supported when using R&S Power Sensors as power triggers ("Trg/Gate Source" = *Power Sensor* or *External*).

Remote command:

[SENSe:] SWEep:EGATe:TYPE on page 649

Gate Delay ← Gate Settings

Opens an edit dialog box to enter the gate delay time between the gate signal and the continuation of the sweep. The delay position on the time axis in relation to the sweep is indicated by a line labeled "GD".

This is useful for e.g. taking into account a delay between the gate signal and the stabilization of an RF carrier.

As a common input signal is used for both trigger and gate when selecting the "External" or "IF Power" trigger mode, changes to the gate delay will affect the trigger delay (trigger offset) as well.

For details also see [chapter 4.2.8.3, "Using Gated Sweep Operation"](#), on page 254.

Remote command:

[SENSe:] SWEep:EGATe:HOLDoff on page 648

Gate Length (Gate Mode Edge) ← Gate Settings

Opens an edit dialog box to enter the gate length. The gate length in relation to the sweep is indicated by a line labeled "GL".

The length of the gate signal defines if the sweep is to be interrupted. Only in the edge-triggered mode the gate length can be set, while in the level-triggered the gate length depends on the length of the gate signal.

For details also see [chapter 4.2.8.3, "Using Gated Sweep Operation"](#), on page 254.

Remote command:

`[SENSe:] SWEep:EGATe:LENGth` on page 648

Trg/Gate Source ← Gate Settings

See ["Trg/Gate Source"](#) on page 248.

Trg/Gate Level ← Gate Settings

See ["Trg/Gate Level"](#) on page 250.

Trg/Gate Polarity ← Gate Settings

See ["Trg/Gate Polarity"](#) on page 250.

Sweep Time ← Gate Settings

Opens an edit dialog box to change the sweep time in order to obtain a higher resolution for positioning gate delay and gate length. When leaving the "Gate Settings" sub-menu, the original sweep time is retrieved.

For details also see [chapter 4.2.8.3, "Using Gated Sweep Operation"](#), on page 254.

Res BW Manual ← Gate Settings

Opens an edit dialog box to enter a value for the resolution bandwidth. The available resolution bandwidths are specified in the data sheet.

For details on the correlation between resolution bandwidth and filter type refer to [chapter 4.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 239.

Numeric input is always rounded to the nearest possible bandwidth. For rotary knob or UP/DNARROW key inputs, the bandwidth is adjusted in steps either upwards or downwards.

The manual input mode of the resolution bandwidth is indicated by a green bullet next to the "RBW" display in the channel bar.

When measuring Spurious Emissions, using this softkey automatically opens the "Sweep List" dialog (see ["Sweep List dialog box"](#) on page 167).

Remote command:

`[SENSe:] BANDwidth|BWIDth[:RESolution]:AUTO` on page 637

`[SENSe:] BANDwidth|BWIDth[:RESolution]` on page 487

4.2.8.2 Specifying the Trigger Settings

1. Press the "Trg/Gate Source" softkey to select the trigger mode (for details see ["Trg/Gate Source"](#) on page 248).

2. Press the [Trg/Gate Level](#) softkey to set the trigger level.
3. Press the [Trigger Offset](#) softkey to set the trigger offset. In addition, a [Trigger Hysteresis](#) and [Trigger Holdoff](#) can be defined via the corresponding softkeys.

For details on gated sweep operation, see [chapter 4.2.8.3, "Using Gated Sweep Operation"](#), on page 254.

4.2.8.3 Using Gated Sweep Operation

By using a gate in sweep mode and stopping the measurement while the gate signal is inactive, the spectrum for pulsed RF carriers can be displayed without the superposition of frequency components generated during switching. Similarly, the spectrum can also be examined for an inactive carrier. The sweep can be controlled by an external gate or by the internal power trigger.

Gated sweep operation is also possible for span = 0. This enables – e.g. in burst signals – level variations of individual slots to be displayed versus time.

1. Press the [Gate Settings](#) softkey to define the settings of the gate mode.
At the center frequency a transition to zero span is made and the time parameters gate delay and gate length are displayed as vertical lines to adjust them easily.
When quitting the [Gate Settings](#) submenu, the original span is retrieved so the desired measurement can be performed with the accurately set gate.
2. Setting the parameters gate delay and gate length highly accurate, press the [Sweep Time](#) softkey to alter the x-axis in a way that the signal range concerned (e.g. one full burst) is displayed.
3. Press the [Gate Delay](#) softkey to set the sampling time in a way that the desired portion of the signal is shown.
4. Press the [Gate Mode \(Lvl/Edge\)](#) softkey to set the gate mode.
5. If the "Edge" gate mode has been selected, press the [Gate Length \(Gate Mode Edge\)](#) softkey to set the sampling duration in a way that the desired portion of the signal is shown.
6. Press the [Trg/Gate Polarity](#) softkey to set the polarity of the trigger source.
7. Press the [Gated Trigger](#) softkey to activate the gated sweep mode.

To indicate that a gate is used for the sweep, the enhancement label "GAT" is displayed on the screen. This label appears to the right of the window for which the gate is configured.

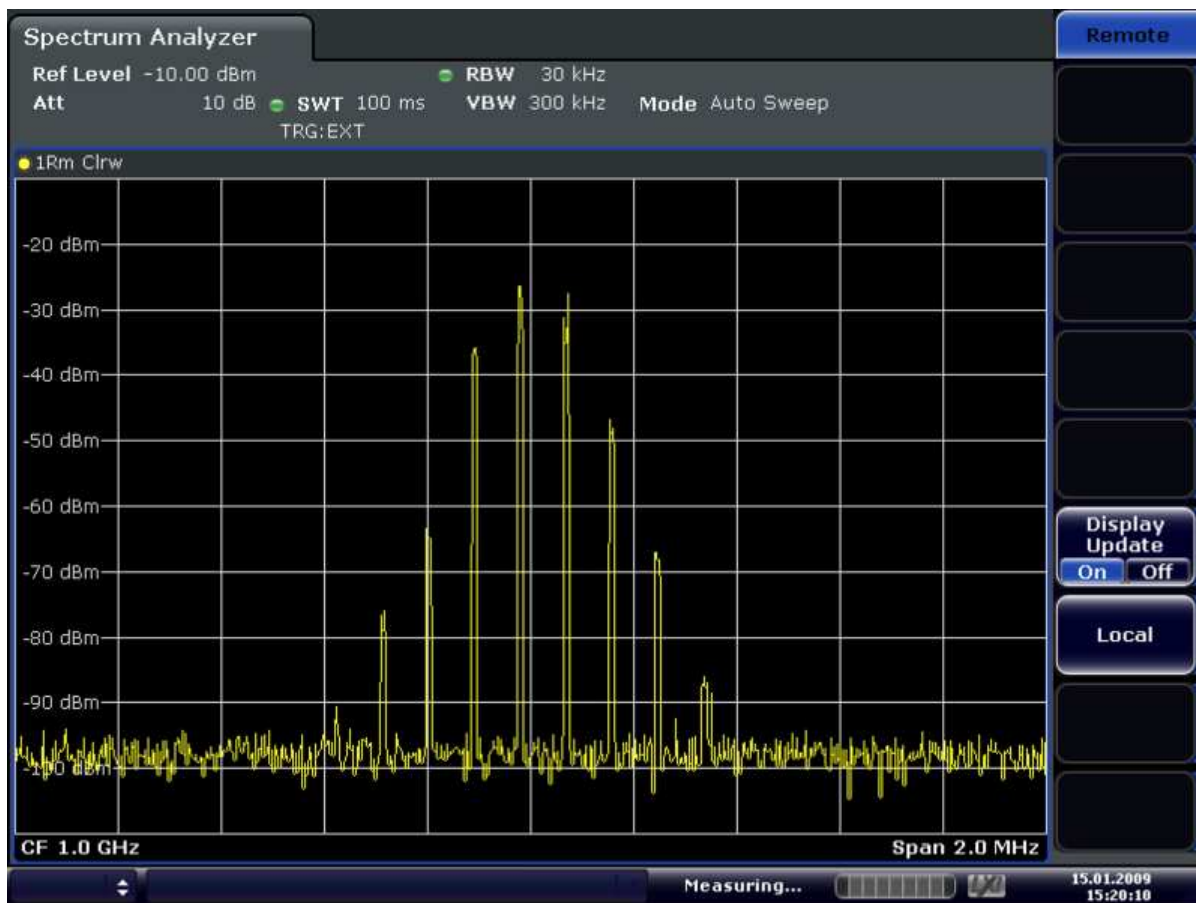


Fig. 4-14: TDMA signal with GATE OFF

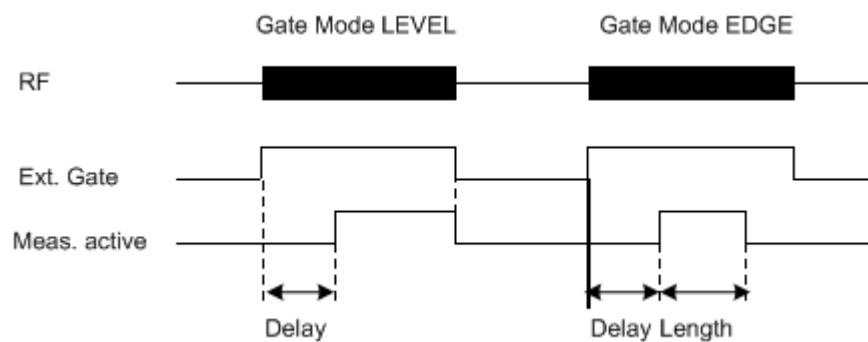


Fig. 4-15: Timing diagram for GATE, GATE DELAY and GATE LENGTH

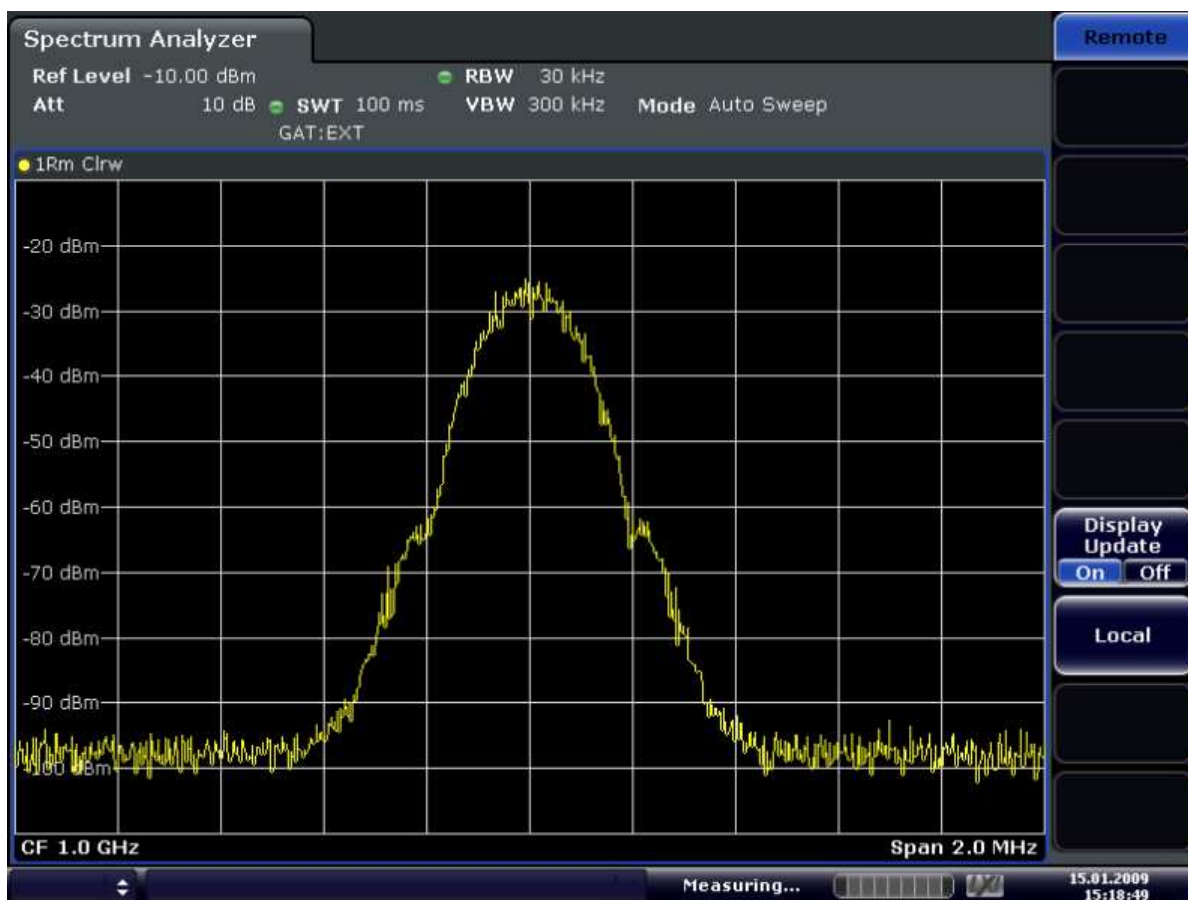


Fig. 4-16: TDMA signal with GATE ON

4.2.9 Input/Output Configuration – INPUT/OUTPUT Key

The INPUT/OUTPUT key is used to configure input and output sources for measurement functions.

4.2.9.1 Softkeys of the Input/Output Menu

The following table shows all softkeys available in the "Input/Output" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Input (AC/DC).....	257
Preselector (On Off).....	257
Noise Source.....	257
Video Output.....	257
Trigger Out.....	257
Probe Config.....	257

Input (AC/DC)

Toggles the RF input of the R&S ESRP between AC and DC coupling.

Remote command:

[INPut:COUPling](#) on page 488

Preselector (On Off)

Turns the preselector on and off.

The preselector is available with option R&S ESRP-B2.

Remote command:

[INPut:PRESelection:STAt](#) on page 726

Noise Source

Switches the supply voltage for an external noise source on or off. For details on connectors refer to the First Steps, "Front and Rear Panel" chapter.

Remote command:

[DIAGnostic<n>:SERVice:NSource](#) on page 724

Video Output

Sends a video output signal according to the measured level to the connector on the rear panel of the R&S ESRP.

Note: Video output does not return valid values in IQ or FFT mode.

Remote command:

[OUTPut:IF VID](#), see [OUTPut:IF\[:SOURce\]](#) on page 725

Trigger Out

Sets the Trigger Out port to low or high. Thus, you can trigger an additional device via the external trigger port, for example.

Remote command:

[OUTPut:TRIGger](#) on page 725

Probe Config

Opens an edit dialog box to activate and configure a connected probe which is to provide an input signal. It is only available if a probe is connected to the instrument's RF INPUT and USB connectors.

For details see [chapter 4.2.9.2, "Using Active Probes for Input"](#), on page 257.

Remote command:

[PROBe\[:STATe\]](#) on page 630

[PROBe:SETup:MODE](#) on page 629

4.2.9.2 Using Active Probes for Input

When the input from the device under test requires high impedance, an active probe can be connected between the device and the R&S ESRP.

The R&S ESRP supports active probes from the R&S RT-ZS series when using the new probe adapter RT-ZA9.

When the probe has been connected to and recognized by the R&S ESRP, a pre-defined "Generic Probe" transducer factor with 20 dB is automatically activated and the unit of the spectrum analyzer is changed to dB μ V. (The same applies after presetting the instrument.) Then the system is ready to analyze circuit points that cannot be loaded with the 50 Ω of the analyzer input, but require a higher impedance.

Optionally, the probe can be deactivated while remaining connected to the R&S ESRP, for instance to analyze the digital input from the probe without considering the transducer factor.

All RT probes (except for ZS10E) have a micro button. The action for the micro button can be defined. Currently, either a single sweep or no action can be performed when the button is pressed. By default, when you press the probe's micro button, the R&S ESRP is set to single sweep mode and a single sweep is performed. This allows you to start a measurement whilst applying the probe to a certain pin on the board under test.

When using RT probes, consider the following:

- Active probes require operating power from the instrument and have a proprietary interface to the instrument.
- The probe is automatically recognized by the instrument, no adjustment is required.
- Connections should be as short as possible to keep the usable bandwidth high.
- Observe the operating voltage range.

For more information on RT probes, refer to the probe's documentation.


Connecting Active Probes

In order to use active probes with an R&S ESRP, an RT-ZA9 adapter is required. The RT-ZA9 provides an interface between the probe's BNC socket and the analyzer's N-socket and provides the necessary supply voltages for the probe via the USB connection. Using this adapter, the following probes are currently supported:

- R&S RT-ZS10
- RT-ZS10E
- RT-ZS20
- RT-ZS30

To connect an active probe, proceed as follows:

1. Connect the adapter to the RF Input connector on the R&S ESRP.
2. Connect the adapter's USB cable to a USB connector on the R&S ESRP.
3. Connect the probe to the adapter.

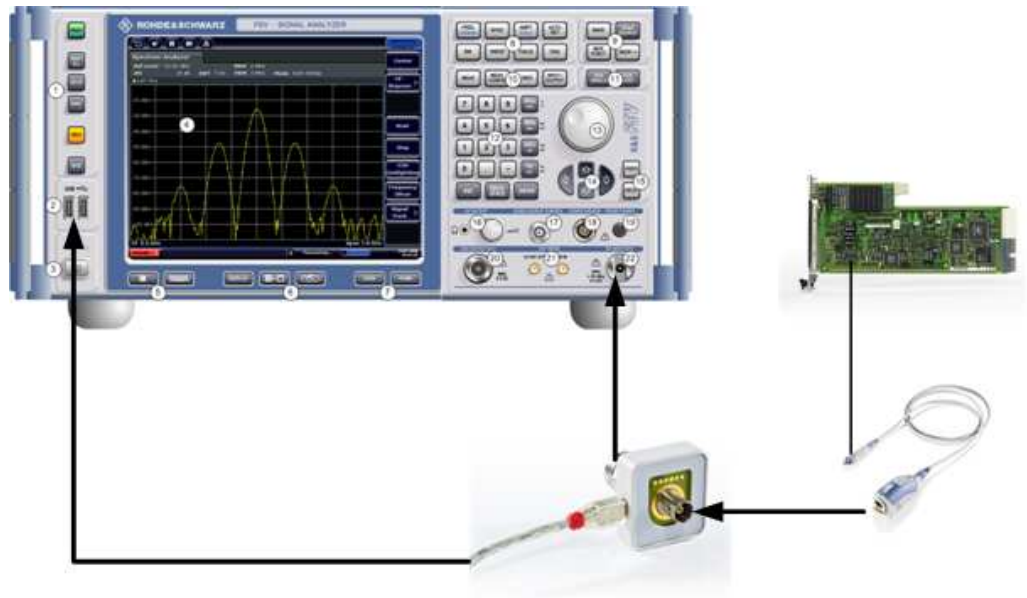

Once the probe and adapter have been connected to the R&S ESRP correctly and the analyzer has recognized the probe, the "Generic Probe" transducer is activated and you can start a measurement.



To determine whether the probe has been connected properly and recognized by the R&S ESRP, use the remote control command `PROB:SET:STAT?` (see [PROBe:SETup:STATe?](#) on page 630).

To perform a measurement with the probe

- Place the probe on the required position on the test equipment, then press the micro button on the probe to perform a single sweep measurement.

Probe Configuration

Principally, the probe is automatically recognized by the instrument and no further adjustment is required. However, you can switch off the probe while leaving it connected, and you can configure which action is to be performed when the probe's micro button is pressed.

To display the "Probe Configuration" dialog box, select the INPUT/OUTPUT key and then the "Probe Config" softkey.

The following settings are available:

State.....	260
Name.....	260
Serial Number.....	260
Part number.....	260
Micro Button Action.....	260

State

Activates a connected probe. Use this command to switch off the probe and measure the digital input without considering the transducer factor of the probe.

Remote command:

[PROBe\[:STATe\]](#) on page 630

Name

Indicates the name of the connected probe.

Remote command:

[PROBe:SETup:NAME?](#) on page 629

Serial Number

Indicates the serial number of the connected probe.

Remote command:

[PROBe:ID:SRNumber?](#) on page 629

Part number

Indicates the material part number of the connected probe.

Remote command:

[PROBe:ID:PARTnumber?](#) on page 629

Micro Button Action

Defines which action is taken when the probe's micro button is pressed.

"RunSingle" A single sweep is performed.

"No Action" No action is taken.

Remote command:

[PROBe:SETup:MODE](#) on page 629

4.3 Analysis

General methods and basic settings to display and analyze measurements. If you are performing a specific measurement task or using an operating mode other than Spectrum mode, be sure to check the specific measurement or mode description for settings and functions that may deviate from these general ones.

- [Trace Configuration](#).....260
- [Spectrogram](#).....274
- [Markers](#).....278
- [Lines](#).....301

4.3.1 Trace Configuration

The TRACE key is used to configure the data acquisition for measurement and the analysis of the measurement data.

The R&S ESRP is capable of displaying up to six different traces at a time in a diagram. A trace consists of a maximum of 691 displayed measurement points on the horizontal axis (frequency or time). If more measured values than measurement points are available, several measured values are combined in one displayed measurement point.

The trace functions include the following:

- Display mode of the trace
For details on trace modes see [chapter 3.2.4, "Trace Modes"](#), on page 50.
- Evaluation of the trace as a whole
For details on averaging see [chapter 4.3.1.4, "Description of the Averaging Method"](#), on page 271.
- Evaluation of individual measurement points of a trace. For details on detectors see [chapter 4.3.1.5, "Detector Overview"](#), on page 272.

To open the Trace menu

- Press the TRACE key.
The "Trace" menu is displayed. The "Trace Configuration" dialog box is displayed.

Menu and softkey description

- [chapter 4.3.1.1, "Softkeys of the Trace Menu"](#), on page 261

Further information

- [chapter 3.2.4, "Trace Modes"](#), on page 50
- [chapter 4.3.1.5, "Detector Overview"](#), on page 272
- [chapter 4.3.1.6, "ASCII File Export Format"](#), on page 273

Tasks

- [chapter 4.3.1.2, "Configuring Traces"](#), on page 269
- [chapter 4.3.1.3, "Specifying the Trace Settings"](#), on page 270

4.3.1.1 Softkeys of the Trace Menu

The following table shows all softkeys available in the "Trace" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Functions to configure traces described elsewhere:

- ["More Traces"](#) on page 77
- ["Copy Trace"](#) on page 77
- ["Trace Wizard"](#) on page 77
- ["ASCII Trace Export"](#) on page 77
- ["Decim Sep"](#) on page 78

Functions to configure traces exclusive in Spectrum mode

Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6.....	262
L Clear Write.....	262
L Max Hold.....	263
L Min Hold.....	263
L Average.....	263
L View.....	263
L Blank.....	264
L Hold/Cont.....	264
L Detector.....	264
L Auto Select.....	264
L Auto Peak.....	265
L Positive Peak.....	265
L Negative Peak.....	265
L Sample.....	265
L RMS.....	265
L Average.....	265
L Quasipeak.....	266
L CISPR Average.....	266
L RMS Average.....	266
Average Mode.....	266
L Lin.....	266
L Log.....	267
L Power.....	267
Trace Math.....	267
Trace Math Mode.....	267
L Lin.....	268
L Log.....	268
L Power.....	268
Trace Math Position.....	268
Trace Math Off.....	268

Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the active trace (1, 2, 3, 4, 5, 6) and opens the "Trace Mode" submenu for the selected trace.

In the default state, trace 1 is in [Clear Write](#) mode. The other traces are turned off. For details see [chapter 3.2.4, "Trace Modes"](#), on page 50.

Tip: To configure several traces in one step, use the functionality of the Trace Configuration dialog box. To access the dialog box, press the [Trace Wizard](#) softkey.

Remote command:

Selected via numeric suffix of: TRACe<1 . . . 6> commands

Clear Write ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Overwrite mode: the trace is overwritten by each sweep. This is the default setting.

All available detectors can be selected.

Remote command:

DISP:TRAC:MODE WRIT, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 498

Max Hold ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

The maximum value is determined over several sweeps and displayed. The R&S ESRP saves the sweep result in the trace memory only if the new value is greater than the previous one.

This mode is especially useful with modulated or pulsed signals. The signal spectrum is filled up upon each sweep until all signal components are detected in a kind of envelope.

Remote command:

DISP:TRAC:MODE MAXH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 498

Min Hold ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

The minimum value is determined from several measurements and displayed. The R&S ESRP saves the smallest of the previously stored/currently measured values in the trace memory.

This mode is useful e.g. for making an unmodulated carrier in a composite signal visible. Noise, interference signals or modulated signals are suppressed whereas a CW signal is recognized by its constant level.

Remote command:

DISP:TRAC:MODE MINH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 498

Average ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

The average is formed over several sweeps. The [Sweep Count](#) determines the number of averaging procedures.

All available detectors can be selected. If the detector is automatically selected, the sample detector is used (see [chapter 4.3.1.5, "Detector Overview"](#), on page 272).

This mode is not available for statistics measurements.

Remote command:

DISP:TRAC:MODE AVER, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 498

View ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

The current contents of the trace memory are frozen and displayed.

Note: If a trace is frozen, the instrument settings, apart from level range and reference level (see below), can be changed without impact on the displayed trace. The fact that the displayed trace no longer matches the current instrument setting is indicated by the  icon on the tab label.

If the level range or reference level is changed, the R&S ESRP automatically adapts the measured data to the changed display range. This allows an amplitude zoom to be made after the measurement in order to show details of the trace.

Remote command:

DISP:TRAC:MODE VIEW, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 498

Blank ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Hides the selected trace.

Remote command:

DISP:TRAC OFF, see [DISPlay\[:WINDow<n>\]:TRACe<t>\[:STATe\]](#) on page 655

Hold/Cont ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Switches the reset of the traces in Min Hold, Max Hold and Average mode after some specific parameter changes have been made on and off. The default setting is off.

Normally, the measurement is started anew after parameter changes, before the measurement results are evaluated (e.g. using a marker). In all cases that require a new measurement after parameter changes, the trace is reset automatically to avoid false results (e.g. with span changes). For applications that require no reset after parameter changes, the automatic reset can be switched off.

Remote command:

[DISPlay\[:WINDow<n>\]:TRACe<t>:MODE:HCONTinuous](#) on page 654

Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Opens a submenu to select the detector manually, or activate automatic selection.

Note: When measuring spurious emissions, using this softkey automatically opens the Sweep List dialog, see ["Sweep List dialog box"](#) on page 167.

If a detector was selected manually, the "MAN" indicator is highlighted.

If "AUTO" is selected, the detector is defined automatically, depending on the selected trace mode:

Trace mode	Detector
Clear Write	Auto Peak
Max Hold	Positive Peak
Min Hold	Negative Peak
Average	Sample Peak
View	–
Blank	–

Auto Select ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the best detector for the selected trace and filter mode. This is the default setting.

Trace mode	Detector
Clear/Write	Auto Peak
Average	Sample

Trace mode	Detector
Max Hold	Max Peak
Min Hold	Min Peak

Remote command:

[SENSe:] [WINDow:] DETector<trace>[:FUNCTION]:AUTO on page 658

Auto Peak ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "Auto Peak" detector.

The "Auto Peak" detector determines the maximum and minimum value within a measurement point. The Auto Peak detector is not available for SEM measurements.

Remote command:

DET APE, see [SENSe:] [WINDow:] DETector<trace>[:FUNCTION]
on page 658

Positive Peak ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "Positive Peak" detector.

Remote command:

DET POS, see [SENSe:] [WINDow:] DETector<trace>[:FUNCTION]
on page 658

Negative Peak ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "Negative Peak" detector.

Remote command:

DET NEG, see [SENSe:] [WINDow:] DETector<trace>[:FUNCTION]
on page 658

Sample ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "Sample" detector.

Remote command:

DET SAMP, see [SENSe:] [WINDow:] DETector<trace>[:FUNCTION]
on page 658

RMS ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "RMS" detector.

Remote command:

DET RMS, see [SENSe:] [WINDow:] DETector<trace>[:FUNCTION]
on page 658

Average ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "Average" detector.

Remote command:

DET AVER, see [SENSe:] [WINDow:] DETector<trace>[:FUNCTION]
on page 658

Quasipeak ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the "Quasipeak" detector.

Remote command:

DET QPE, see [SENSe:] [WINDow:] DETector<trace>[:FUNCTION]

on page 658

CISPR Average ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the "CISPR Average" detector.

Remote command:

DET CAV, see [SENSe:] [WINDow:] DETector<trace>[:FUNCTION]

on page 658

RMS Average ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the "RMS Average" detector.

Remote command:

DET CRMS, see [SENSe:] [WINDow:] DETector<trace>[:FUNCTION]

on page 658

Average Mode

Opens a submenu to select the averaging method for the average trace mode. The following methods are available:

- Lin
- Log
- Power

Logarithmic averaging is recommended to display signals with a low signal to noise ratio. While positive peak values are decreased in logarithmic averaging due to the characteristics involved, it is also true that negative peaks are increased relative to the average value. If the distorted amplitude distribution is averaged, a value is obtained that is smaller than the actual average value. The difference is -2.5 dB.

This low average value is usually corrected in noise power measurements by a 2.5 dB factor. Therefore the R&S ESRP offers the selection of linear averaging. The trace data is converted to linear values prior to averaging, then averaged and reconverted to logarithmic values. After these conversions the data is displayed on the screen. The average value is always correctly displayed irrespective of the signal characteristic.

In case of stationary sinusoidal signals both logarithmic and linear averaging has the same results.

Lin ← Average Mode

Activates linear averaging. Linear averaging means that the power level values are converted into linear units prior to averaging. After the averaging, the data is converted back into its original unit.

This softkey takes effect if the grid is set to a linear scale (see "Range Linear" softkey, "Range Linear %" on page 192). In this case, the averaging is done in two ways (depending on the set unit – see "Unit" softkey):

- The unit is set to either W or dBm: the data is converted into W prior to averaging, i.e. averaging is done in W.

- The unit is set to either V, A, dBmV, dBμV, dBμA or dBpW: the data is converted into V prior to averaging, i.e. averaging is done in V.

Remote command:

SENS: AVER1: TYPE LIN, see [SENSe:] AVERage<n>: TYPE on page 657

Log ← Average Mode

Activates logarithmic averaging.

This averaging method only takes effect if the grid is set to a logarithmic scale ("Range" softkey), i.e. the unit of the data is dBm. In this case the values are averaged in dBm. Otherwise (i.e. with linear scaling), the behavior is the same as with linear averaging (see Lin softkey). For further information on logarithmic scaling refer to the "Average Mode" softkey.

Remote command:

SENS: AVER1: TYPE VID, see [SENSe:] AVERage<n>: TYPE on page 657

Power ← Average Mode

Activates linear power averaging.

The power level values are converted into unit Watt prior to averaging. After the averaging, the data is converted back into its original unit.

Unlike the linear mode, the averaging is always done in W.

Remote command:

SENS: AVER1: TYPE POW, see [SENSe:] AVERage<n>: TYPE on page 657

Trace Math

Opens the "Trace Mathematics" dialog box to define which trace is subtracted from trace 1. The result is displayed in trace 1 and refers to the zero point defined with the Trace Math Position softkey. The following subtractions can be performed:

"T1"->"T1"- "T2"	Subtracts trace 2 from trace 1.
"T1"->"T1"- "T3"	Subtracts trace 3 from trace 1
"T1"->"T1"- "T4"	Subtracts trace 4 from trace 1
"T1"->"T1"- "T5"	Subtracts trace 5 from trace 1
"T1"->"T1"- "T6"	Subtracts trace 6 from trace 1

To switch off the trace math, use the Trace Math Off softkey.

Remote command:

CALCulate<n>: MATH[:EXPression] [:DEFine] on page 653

CALCulate<n>: MATH: STATe on page 654

Trace Math Mode

Opens a submenu to select the mode for the trace math calculations.

Lin ← Trace Math Mode

Activates linear subtraction, which means that the power level values are converted into linear units prior to subtraction. After the subtraction, the data is converted back into its original unit.

This softkey takes effect if the grid is set to a linear scale (see [Range](#) softkey). In this case, subtraction is done in two ways (depending on the set unit – see [Unit](#) softkey):

- The unit is set to either W or dBm: the data is converted into W prior to subtraction, i.e. averaging is done in W.
- The unit is set to either V, A, dBmV, dBμV, dBμA or dBpW: the data is converted into V prior to subtraction, i.e. subtraction is done in V.

Remote command:

CALC:MATH:MODE LIN, see [CALCulate<n>:MATH:MODE](#) on page 653

Log ← Trace Math Mode

Activates logarithmic subtraction.

This subtraction method only takes effect if the grid is set to a logarithmic scale (see [Range](#) softkey), i.e. the unit of the data is dBm. In this case the values are subtracted in dBm. Otherwise (i.e. with linear scaling) the behavior is the same as with linear subtraction (see [Lin](#) softkey). For further information on logarithmic scaling refer to the [Average Mode](#) softkey.

Remote command:

CALC:MATH:MODE LOG, see [CALCulate<n>:MATH:MODE](#) on page 653

Power ← Trace Math Mode

Activates linear power subtraction.

The power level values are converted into unit Watt prior to subtraction. After the subtraction, the data is converted back into its original unit.

Unlike the linear mode, the subtraction is always done in W.

Remote command:

CALC:MATH:MODE POW, see [CALCulate<n>:MATH:MODE](#) on page 653

Trace Math Position

Opens an edit dialog box to define the zero point in % of the diagram height. The range of values extends from -100 % to +200 %.

Remote command:

[CALCulate<n>:MATH:POSition](#) on page 654

Trace Math Off

Deactivates any previously selected trace math functions.

Remote command:

CALC:MATH:STAT OFF, see [CALCulate<n>:MATH:STATe](#) on page 654


4.3.1.2 Configuring Traces

1. To open the trace wizard, press the TRACE key and then the "Trace Wizard" softkey (see ["Trace Wizard"](#) on page 77).

Tip: Context-sensitive menus for traces. Traces have context-sensitive menus. If you right-click on a trace in the display or a trace setting in the information channel bar (or touch it for about 1 second), a menu is displayed which corresponds to the softkey functions available for traces. This is useful, for example, when the softkey display is hidden.

If a menu entry contains an arrow to the right of it, a submenu is available for that entry.

To close the menu, press the ESC key or click in the display outside of the menu.

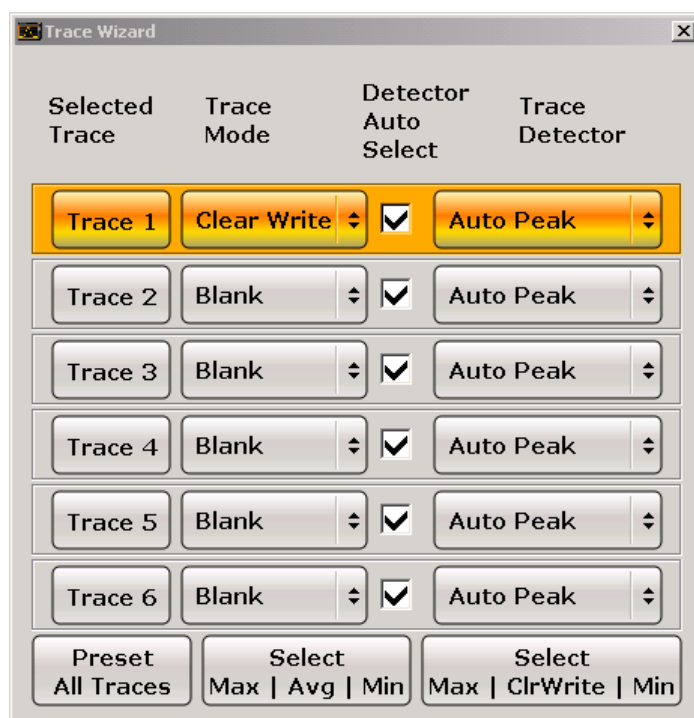

2. For each trace you can define the following settings:

Display Mode	• Clear Write • Max Hold • Min Hold • Average • View • Blank For details see chapter 3.2.4, "Trace Modes", on page 50.
Detector Auto Select	Activates automatic detector selection (see Auto Select softkey). If activated, the "Trace Detector" setting is ignored.
Trace Detector	Defines a specific trace detector. If one of the following settings is defined, the "Detector Auto Select" option is deactivated. • "Auto Select" on page 264 • "Auto Peak" on page 265 • "Positive Peak" on page 265 • "Negative Peak" on page 265 • "Sample" on page 265 • "RMS" on page 265 • "Average" on page 265

3. To configure several traces to predefined display modes in one step, press the button for the required function:

Preset All Traces	Trace 1: Clear Write Trace 2-6: Blank
Select Max Avg Min	Trace 1: Max Hold Trace 2: Average Trace 3: Min Hold Trace 4-6: Blank
Select Max ClrWrite Min	Trace 1: Max Hold Trace 2: Clear Write Trace 3: Min Hold Trace 4-6: Blank

For details see [chapter 3.2.4, "Trace Modes"](#), on page 50.

4.3.1.3 Specifying the Trace Settings

1. To configure one or more traces, see [chapter 4.3.1.2, "Configuring Traces"](#), on page 269.
2. To select the trace mode for the selected trace, press the softkey for the corresponding trace (for details see [chapter 3.2.4, "Trace Modes"](#), on page 50).
3. To select a detector, press the [Auto Select](#) softkey for automatic detector selection, or press the [Detector](#) softkey (for details see [chapter 4.3.1.5, "Detector Overview"](#), on page 272).
4. To change the sweep count setting, which also determines trace averaging, press the [Sweep Count](#) softkey.

5. To deactivate the reset of the traces in "Min Hold" and "Max Hold" mode after some specific parameter changes, press the [Trace Math](#) softkey.
6. To copy a trace into another trace memory, press the [Copy Trace](#) softkey. Upon copying, the contents of the selected memory are overwritten and the new contents are displayed in the View mode.
7. To export the active trace in ASCII format:
 - a) Press the "More" softkey.
 - b) If necessary, press the [Decim Sep](#) softkey to change the decimal separator with floating-point numerals.
 - c) Press the [ASCII File Export](#) softkey to enter the ASCII file export name. The active trace is saved in ASCII format on the hddisk on or an external storage device.

4.3.1.4 Description of the Averaging Method

Averaging is carried out over the measurement points derived from the measurement samples. Several measured values may be combined in a measurement point. This means that with linear level display the average is formed over linear amplitude values. The sweep mode (continuous or single sweep, for details see [chapter 4.2.7, "Configuring the Sweep Mode – SWEEP Key"](#), on page 242) and running averaging apply to the average display analogously. In principle, two methods for calculating the average are used: continuous averaging and averaging over the selected number of sweeps.

- sweep count > 1
Depending on the relation of the following two parameters, two different situations exist:
n = number of sweeps performed since measurement start
c = sweep count (number of sweeps forming one statistics cycle)
 - $n \leq c$
In single sweep or continuous sweep mode during the first statistics cycle, averaging over the selected number of sweeps is performed. The average trace "n" is calculated at each measurement point according to:

$$Avg(n) = \frac{n-1}{n} Avg(n-1) + \frac{1}{n} Curr(n)$$

Fig. 4-17: Equation 1

with Avg = average trace; Curr = current trace

Until the first statistics cycle is completed ($n < c$), a preliminary average is displayed which represents the arithmetic mean value over all measured sweeps. With n increasing, the displayed trace is increasingly smoothed since there are more single sweeps for averaging.

When the first statistics cycle is completed ($n = c$), the average trace is saved in the trace memory.

- $n > c$

In continuous sweep mode after the first statistics cycle, continuous averaging is performed. The average trace "n" is calculated at each measurement point according to:

$$Avg(n) = \frac{c-1}{c} Avg(n-1) + \frac{1}{c} Curr(n)$$

Fig. 4-18: Equation 2

with Avg = average trace; Curr = current trace

In single sweep mode, the same formula is valid if the [Continue Single Sweep](#) softkey is pressed.

- sweep count = 0
In continuous sweep mode, a continuous average is calculated according to [figure 4-18](#) with c = 10:

$$Avg(n) = \frac{9}{10} Avg(n-1) + \frac{1}{10} Curr(n)$$

Fig. 4-19: Equation 3

with Avg = average trace; Curr = current trace

Due to the weighting between the current trace and the average trace, past values have practically no influence on the displayed trace after about ten sweeps. With this setting, signal noise is effectively reduced without need for restarting the averaging process after a change of the signal.

- sweep count = 1
The current trace is displayed. No averaging is performed. This is a special case of [figure 4-17](#) with n = 0.

4.3.1.5 Detector Overview

The measurement detector for the individual display modes can be selected directly by the user or set automatically by the R&S ESRP. The detector activated for the specific trace is indicated in the corresponding trace display field by an abbreviation.

For more information on available detectors see [chapter 3.2.3, "Detectors"](#), on page 46.

All detectors work in parallel in the background, which means that the measurement speed is independent of the detector combination used for different traces.



Number of measured values

During a frequency sweep, the R&S ESRP increments the first local oscillator in steps that are smaller than approximately 1/10 of the bandwidth. This ensures that the oscillator step speed is conform to the hardware settling times and does not affect the precision of the measured power.

The number of measured values taken during a sweep is independent of the number of oscillator steps. It is always selected as a multiple or a fraction of 691 (= default number of trace points displayed on the screen). Choosing less than 691 measured values (e.g. 125 or 251) will lead to an interpolated measurement curve, choosing more than 691 points (e.g. 1001, 2001 ...) will result in several measured values being overlaid at the same frequency position.



RMS detector and VBW

If the RMS detector is selected, the video bandwidth in the hardware is bypassed. Thus, duplicate trace averaging with small VBWs and RMS detector no longer occurs. However, the VBW is still considered when calculating the sweep time. This leads to a longer sweep time for small VBW values. Thus, you can reduce the VBW value to achieve more stable trace curves even when using an RMS detector. Normally, if the RMS detector is used the sweep time should be increased to get more stable trace curves.

4.3.1.6 ASCII File Export Format

The data of the file header consist of three columns, each separated by a semicolon: parameter name; numeric value; basic unit. The data section starts with the keyword "Trace <n>" (<n> = number of stored trace), followed by the measured data in one or several columns (depending on measurement) which are also separated by a semicolon.

File contents: header and data section	Description
Type;ESRP;	
Version;1.78;	
Date;01.Apr 2010;	Date of data set storage
Screen;A;	Instrument mode
Points per Symbol;4;	Points per symbol
x Axis Start;-13;sym;	Start value of the x axis
x Axis Stop;135;sym;	Stop value of the x axis
Ref value y axis;-10.00;dBm;	Y axis reference value
Ref value position;100;%;	Y axis reference position
Trace;1;	Trace number
Meas;Result;	Result type
Meas Signal;Magnitude;	Result display

File contents: header and data section	Description
Demodulator;Offset QPSK;	Demodulation type
ResultMode;Trace;	Result mode
x unit;sym;	Unit of the x axis
y unit;dBm;	Unit of the y axis
Trace Mode;Clear Write;	Trace mode
Values;592;	Number of results
<values>	List of results

4.3.2 Spectrogram

The spectrogram is a graphical overview of changes in the frequency and amplitude over time.

The spectrogram uses the configuration of the Spectrum mode and vice versa.

Note that not all measurements of the Spectrum mode support a spectrogram result display.

Menus and softkeys

The main menu of the Spectrogram result display is part of the "Trace" menu in Spectrum mode. For more information see .

Some special functions supported by the spectrogram are available in the "Sweep" menu in Spectrum mode. For more information see [chapter 4.2.7.1, "Softkeys of the Sweep Menu"](#), on page 242.

4.3.2.1 Working with Spectrograms

Functions of the spectrogram described elsewhere:

- [chapter 3.1.6, "Spectrogram"](#), on page 29

General Information

This section provides some basic information about using the firmware application and about performing measurements with the firmware application.

Screen Layout

The Spectrogram view is divided into two screens: the spectrum analyzer result display (upper screen) and the spectrogram result display (lower screen).

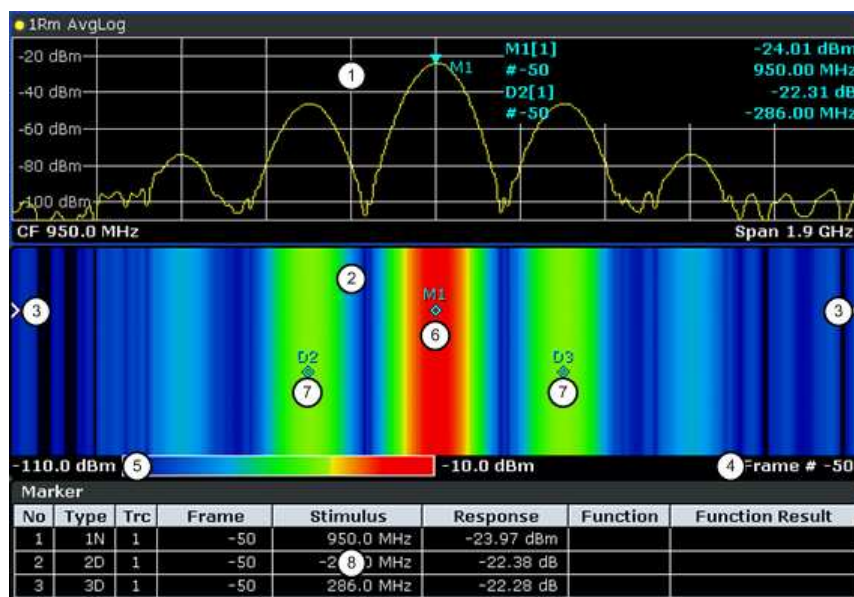


Fig. 4-20: Screen layout of the spectrogram result display

- 1 = Spectrum result display
- 2 = Spectrogram result display
- 3 = Frame indicator
- 4 = Time stamp / frame number
- 5 = Color map
- 6 = Marker
- 7 = Deltamarker
- 8 = Marker list

- Spectrum Analyzer result display (1 in [figure 4-20](#))

This result display is the same as the Spectrum Analyzer with the x-axis representing the frequency span or time (span = 0) and the y-axis the power level. Configure and use this display in the same way as you would in Spectrum Analyzer mode. All traces are available and you can view those traces just like in the base unit (see [chapter 3.2.4, "Trace Modes"](#), on page 50). The trace modes View and Blank are not available for trace 1.

While performing a measurement the trace is updated continuously. You can also restore the trace to a point that has already been recorded by selecting a specific frame (see ["Select Frame"](#) on page 245). This is possible in Single Sweep mode or if the sweep has been stopped.
- Spectrogram result display (2)

The data displayed in the Spectrogram is always based on the data of trace 1 in the Spectrum Analyzer result display. The Spectrogram can handle measurements in the frequency domain (span > 0) as well as measurements in the time domain (span = 0)

The Spectrogram is a cartesian diagram. The x-axis shows the power distribution of a measured signal over a specified frequency or time range. Different power levels are displayed in different colors. The y-axis represents the time with the top of the diagram being the current timeframe (the measurement runs from top to bottom). Each line (or trace) of the y-axis represents one captured frame. The frames are sorted in chronological order. One frame is equal to a certain number of sweep points, depending on the dimension of the x-axis. If there are more measurement

values than measurement points, several measured values are combined in one measurement point using the selected detector (see [chapter 4.3.1.5, "Detector Overview"](#), on page 272). Frames are sorted in chronological order, beginning with the most recently recorded frame or frame number 0 at the top of the diagram. After that and below frame 0 is the frame recorded before the current frame (frame -1) and so on until the maximum number of captured frames is reached. The maximum number of frames that you can capture is summarized in the table below (see [table 4-7](#)). A marker in the form of an arrow (3) on the left and right border of the Spectrogram indicates the currently selected frame.

The actual number of the currently selected frame is shown below the diagram (4). If the time stamp is active, the R&S ESRP shows the time stamp instead of the frame number (see [Time Stamp \(On Off\)](#)).

Below the diagram there is also a color map (5) that shows the power levels corresponding to the displayed colors. The minimum value of the y-axis is on the left of the color map. The maximum value is on the right of the map. You can also change the color scheme in use (see [Color Mapping](#)). The colors corresponding to the power levels, however, are always assigned automatically.


Markers and deltamarkers (6) (7) take the form of diamonds in the Spectrogram. They are only displayed in the Spectrogram, if the marker position is inside the visible area of the spectrogram. If more than two markers are active, it is possible to display a [Marker Table](#) at the bottom of the display (8).

Table 4-7: Correlation between number of sweep points and number of frames stored in the history buffer

Sweep Points	Max. History Depth
≤1250	20000
2001	12488
4001	6247
8.001	3124
16.001	1562
32.001	781

Markers and Marker Values

 In the Spectrum Analyzer result display, the markers and their frequency and level values (1) are displayed in the marker field just like in the base unit (see [chapter 3.4.2, "Markers"](#), on page 78). In addition to the base unit functionality, the frame number is displayed to indicate the position of the marker in time (2).



In the Spectrogram result display, you can activate up to 16 markers or deltamarkers at the same time. Any marker can be assigned to a different frame. Therefore, in addition to the frequency (1) you can set the frame number (2) when activating a new marker. If no frame number is specified, the marker is positioned on the currently selected frame.

The diagram shows two input fields. The first field, labeled with a circled '1', contains the text '950.0 MHz'. The second field, labeled with a circled '2', contains the text '0'. The second field is outlined with a dashed blue border.

① Input Field for Marker Frequency

② Input Field for Marker Frame Number

In the Spectrogram result display all markers are visible that are positioned on a visible frame.

In the Spectrum Analyzer result display, only the markers positioned on the currently selected frame are visible. In Continuous Sweep mode this means that only markers positioned on frame 0 are visible. To view markers that are positioned on a frame other than frame 0 in the Spectrum Analyzer result display, it is necessary to stop the measurement and select the corresponding frame.

4.3.2.2 Softkeys of the Spectrogram Menu

Softkeys of the Spectrogram Menu

The following chapter describes all softkeys available in the "Spectrogram" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

To display the "Spectrogram" menu, press the TRACE key and then select the "Spectrogram" softkey.

Spectrogram.....	277
L Spectrogram (On Off).....	277
L History Depth.....	277
L Color Mapping.....	278
L Time Stamp (On Off).....	278
L Clear Spectrogram.....	278

Spectrogram

Opens the submenu for the spectrogram view.

Spectrogram (On Off) ← Spectrogram

Activates and deactivates the Spectrogram result display

Remote command:

`CALCulate<n>:SGRam[:STATe]` on page 663

History Depth ← Spectrogram

Sets the number of frames that the R&S ESRP stores in its memory. The maximum number of frames depends on the Sweep Points (see "General Information" on page 274).

If the memory is full, the R&S ESRP deletes the oldest frames stored in the memory and replaces them with the new data.

Remote command:

`CALCulate<n>:SGRam:HDEPth` on page 468

Color Mapping ← Spectrogram

Displays the "Color Mapping" dialog box to configure the display of the spectrogram (assignment of colors to power levels).

For more information see [chapter 3.1.6.2, "Color Map"](#), on page 30.

Remote command:

`CALCulate<n>:SGRam:COLor` on page 661

`DISPlay:WINDow:SGRam:COLor:LOWer` on page 467

`DISPlay:WINDow:SGRam:COLor:UPPer` on page 467

Time Stamp (On Off) ← Spectrogram

Activates and deactivates the time stamp. The time stamp shows the system time while the measurement is running. In single sweep mode or if the sweep is stopped, the time stamp shows the time and date of the end of the sweep.

When active, the time stamp replaces the display of the frame number.

Remote command:

`CALCulate<n>:SGRam:TSTamp[:STATe]` on page 663

Clear Spectrogram ← Spectrogram

Resets the Spectrogram result display and clears the history buffer.

Remote command:

`CALCulate<n>:SGRam:CLEar[:IMMediate]` on page 467

4.3.3 Markers

4.3.3.1 Controlling Markers

The markers are used for marking points on traces, reading out measurement results and for selecting a display section quickly. The R&S ESRP provides 16 markers per trace.

To open the Marker menu

- Press the MKR key.
The "Marker" menu is displayed. If no marker is active, marker 1 is activated and a peak search on the trace is carried out. Otherwise, the edit dialog box for the last activated marker is opened and the current frequency/time value is displayed.

Further information

- ["Displayed Marker Information"](#) on page 282

- [chapter 3.4.2.2, "Positioning Markers"](#), on page 82.

Tasks

- ["Basic Marker Functions"](#) on page 280

Softkeys of the Marker Menu

Functions to control markers described elsewhere:

- ["Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta"](#) on page 79
- ["Marker to Trace"](#) on page 80
- ["Marker Wizard"](#) on page 80
- ["All Marker Off"](#) on page 81
- ["Marker Table"](#) on page 81
- ["Marker Info \(On Off\)"](#) on page 81

Functions to control markers exclusive in Spectrum mode

Marker Stepsize	279
L Stepsize Standard	279
L Stepsize Sweep Points	279
Marker Zoom (span > 0)	280
Link Mkr1 and Delta1	280

Marker Stepsize

Opens a submenu to set the step size of all markers and delta markers.

Default value for the marker step size is [Stepsize Sweep Points](#).

Stepsize Standard ← Marker Stepsize

Moves the marker or delta marker from one measurement point to the next, if the marker or delta marker value is changed via the rotary knob ("Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta" softkeys, see ["Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta"](#) on page 79). If more measured values than measurement points exist, it is not possible to read out all measured values. In this case, use the [Stepsize Sweep Points](#) softkey.

Remote command:

CALC:MARK:X:SSIZ STAN (see [CALCulate<n>:MARKer<m>:X:SSize](#) on page 669)

Stepsize Sweep Points ← Marker Stepsize

Moves the marker or delta marker from one measured value to the next, if the marker or delta marker value is changed via the rotary knob ("Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta" softkeys, see ["Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta"](#) on page 79). If more measured values than measurement points exist, every single measured value is accessible and its value is displayed in the marker field.

The number of measured values is defined in the ""Sweep"" menu via the [Sweep Points](#) softkey.

This functionality is not available for statistical measurements (APD and CCDF).

Remote command:

CALC:MARK:X:SSIZ POIN (see [CALCulate<n>:MARKer<m>:X:SSize](#) on page 669)

Marker Zoom (span > 0)

Opens an edit dialog box to enter a display range for the zoom. The area around marker 1 is expanded accordingly and more details of the result can be seen. If no marker is activated, marker 1 is switched on and set on the largest signal.

The following sweep is stopped at the position of the reference marker. The frequency of the signal is counted and the measured frequency becomes the new center frequency. The zoomed display range is then configured and the new settings are used by the R&S ESRP for further measurements.

If the display has not yet been switched to the new frequency display range and you press the softkey, the procedure is aborted. If an instrument setting is changed during this operation, the procedure is also aborted.

This function is not available in I/Q Analyzer mode.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:ZOOM](#) on page 504

Link Mkr1 and Delta1

The delta marker 1 is linked to marker 1, so if the x-axis value of the marker 1 is changed, the delta marker 1 will follow on the same x-position. The link is off by default.

You can set the two markers on different traces to measure the difference (e.g. between a max hold trace and a min hold trace or between a measurement and a reference trace).

Remote command:


[CALCulate<n>:DELTAmarker<m>:LINK](#) on page 512

Basic Marker Functions

- To open the "Marker" menu, press the MKR key.
Marker 1 is activated and positioned on the maximum value of the trace as a normal marker. If several traces are displayed, the marker is set to the maximum value (peak) of the trace which has the lowest number (1 to 3) and is not frozen (View mode). In case a marker is already located there, the new marker is set to the frequency of the next lowest level (next peak).
- To change marker settings quickly, right-click on the marker in the display (or touch it for about 1 second). A context-sensitive menu is displayed which corresponds to the softkey functions available for markers.
- To configure and activate several markers at once, select the "Marker Wizard" to open a configuration dialog for all markers.
- To change to another trace, press the "Marker to Trace" softkey ("[Marker to Trace](#)" on page 80) and enter the number of the trace on which the marker is to be placed.

The marker changes to the selected trace, but remains on the previous frequency or time. If a trace is turned off, the corresponding markers and marker functions are also deactivated.

- To switch to another marker, click on the marker label in the diagram. Alternatively, select the corresponding softkey. If necessary, select the **More Markers** softkey first to open a submenu that contains all marker numbers.
- To move the marker to a different position, click the marker label in the diagram and then drag it to the new position. When a marker label is selected, a vertical line is displayed which indicates the marker's current x-value.

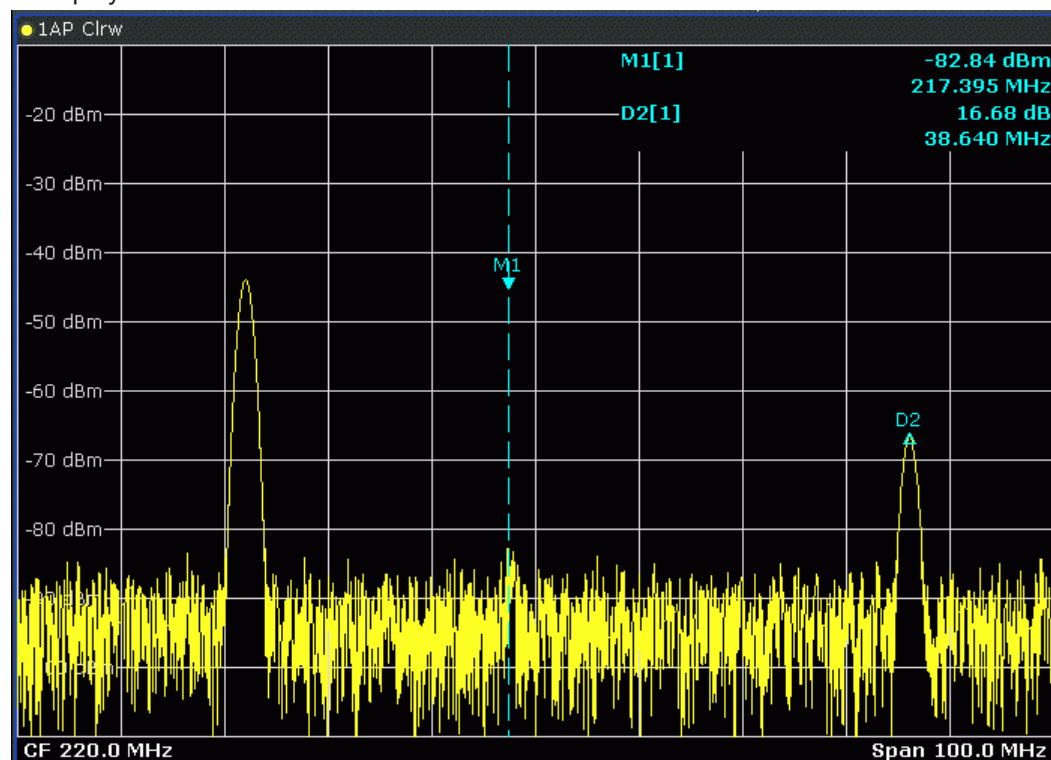

- To switch on a delta marker, select the softkey for the corresponding marker, then press the "Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta" ("**Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta**" on page 79) until "Delta" is highlighted.
The selected marker is switched on as a delta marker. The frequency and level of the marker are displayed in relation to marker 1 in the marker field.
- To change the marker type of a marker, select the softkey for the corresponding marker, then press the "Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta" softkey ("**Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta**" on page 79).
For a normal marker, the frequency and level are displayed as absolute values in the marker field. For a delta marker, the frequency and level of the marker are displayed in relation to marker 1 in the marker field.
- To switch off a marker, press the corresponding softkey again.
The marker is deactivated. Marker 1 becomes the active marker for entry. The frequency and level of marker 1 are displayed in the marker field.
- To switch off all markers, press the **All Marker Off** softkey.

- To change the stepsize between one measured value and the next when the marker or delta marker value is changed via the rotary knob, press either the [Stepsize Standard](#) softkey or the [Stepsize Sweep Points](#) softkey.
- To zoom into the display around a marker, press the ["Marker Zoom \(span > 0\)"](#) on page 280 softkey and enter a span.
- To link the delta marker1 to marker1, so if the x-axis value of the marker 1 is changed, the delta marker 1 follows on the same x-position, press the [Link Mkr1 and Delta1](#) softkey.

Displayed Marker Information

The following additional information is displayed within the diagram grid or in a marker table beneath the diagram. The marker table is displayed automatically if more than 2 markers are active. You can hide or show the table using the [Marker Table](#) softkey.

Marker information in Diagram Grid

The x and y axis positions of the last 2 markers or delta markers that were set, as well as their index, are displayed within the diagram grid, if available. The value in the square brackets after the index indicates the trace to which the marker is assigned. (Example: M1[1] defines marker 1 on trace 1.) For more than 2 markers, a separate marker table is displayed beneath the diagram.

If applicable, the active measurement function for the marker and its main results are indicated, as well. The functions are indicated with the following abbreviations:

FXD	Reference fixed marker active
PHNoise	Phase noise measurement active
CNT	Frequency counter active
TRK	Signal track active
NOIse	Noise measurement active
MDepth	Measurement of the AM modulation depth active
TOI	TOI measurement active
Occ BW	Occupied bandwidth

Marker Information in Marker Table

In addition to the marker information displayed within the diagram grid, a separate marker table may be displayed beneath the diagram. This table provides the following information for all active markers:

No.	Serial number
Type	Marker type: N (normal), D (delta), T (temporary, internal)
Dgr	Diagram number
Trc	Trace to which the marker is assigned
Stimulus	x-value of the marker

Response	y-value of the marker
Func	Activated marker or measurement function
Func.Result	Result of the active marker or measurement function

4.3.3.2 Positioning Markers (MKR→ Key)

The MKR→ key is used for search functions of measurement markers, assignment of the marker frequency as center frequency, restriction of the search area and characterization of maxima and minima. For details on markers in general, see [chapter 4.3.3.1, "Controlling Markers"](#), on page 278.

To open the Marker To menu

- Press the MKR→ key.
The "Marker To" menu is displayed. If no marker is active, marker 1 will be activated and a peak search on the trace carried out. Otherwise, the edit dialog box for the last activated marker is opened and the current frequency/time value is displayed.

Menu and softkey description

- ["Softkeys of the Marker To Menu"](#) on page 283

Further information

- ["Effect of Different Peak Excursion Settings \(Example\)"](#) on page 286

Tasks

- ["Searching for a Maximum"](#) on page 285
- ["Searching for a Minimum"](#) on page 285
- ["Specifying the Search Limits"](#) on page 285
- ["Specifying the Search Range"](#) on page 285
- ["Examining a Signal at the Center in Detail"](#) on page 285
- ["Specifying the Suitable Peak Excursion"](#) on page 286

Softkeys of the Marker To Menu

The following table shows all softkeys available in the "Marker To" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Functions to position markers described elsewhere:

- ["Select Marker \(No\)"](#) on page 82
- ["Peak"](#) on page 83
- ["Next Peak"](#) on page 83
- ["Marker to Trace"](#) on page 80

- "Min" on page 83
- "Next Min" on page 83
- "Next Mode" on page 83
- "Search Limits" on page 84
- "Peak Excursion" on page 85
- Spectrogram: [chapter 3.4.2.3, "Markers in Spectrograms"](#), on page 85

Functions to position markers exclusive in Spectrum mode

Center =Mkr Freq (span > 0).....	284
Ref Lvl =Mkr Lvl.....	284
Auto Max Peak/Auto Min Peak.....	284
Exclude LO.....	284

Center =Mkr Freq (span > 0)

Sets the center frequency to the current marker or delta marker frequency. A signal can thus be set to as center frequency, for example to examine it in detail with a smaller span.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:CENTer](#) on page 503

Ref Lvl =Mkr Lvl

Sets the reference level to the current marker level.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:REFerence](#) on page 667

Auto Max Peak/Auto Min Peak

Adds an automatic peak search action for marker 1 at the end of each particular sweep. This function may be used during adjustments of a device under test to keep track of the current peak marker position and level.

The current marker search limit settings ([Left Limit](#), [Right Limit](#), [Threshold](#) softkeys) are taken into account.

Remote command:

[CALCulate<n>:MARKer<m>:MAXimum:AUTO](#) on page 668

[CALCulate<n>:MARKer<m>:MINimum:AUTO](#) on page 668

Exclude LO

Switches the frequency range limit for the marker search functions on or off.

"ON" The minimum frequency included in the peak search range is $\geq 5 \times$ resolution bandwidth (RBW).
Due to the interference by the first local oscillator to the first intermediate frequency at the input mixer, the LO is represented as a signal at 0 Hz. To avoid the peak marker jumping to the LO signal at 0 Hz, this frequency is excluded from the peak search.

"OFF" No restriction to the search range. The frequency 0 Hz is included in the marker search functions.

Remote command:

CALCulate<n>:MARKer<m>:LOEXclude on page 667

Searching for a Maximum

- To search for the highest maximum, press the **Peak** softkey.
- To define the search mode for the next maximum, use the **Next Mode** softkey.
- To start the search, press the **Next Peak** softkey.



You can define an automatic peak search action for marker 1 at the end of each particular sweep using the **Auto Max Peak/Auto Min Peak** softkey.

Searching for a Minimum

- To search for the minimum, press the **Min** softkey.
- To define the search mode for the next minimum, use the **Next Mode** softkey.
- To start the search, press the **Next Min** softkey.



You can define an automatic peak search action for marker 1 at the end of each particular sweep using the **Auto Max Peak/Auto Min Peak** softkey.

Specifying the Search Limits

- To define the lower limit, press the **Left Limit** softkey.
- To define the upper limit, press the **Right Limit** softkey.
- To define the threshold, press the **Threshold** softkey.
- To switch the search limits off, press the **Search Lim Off** softkey.

Specifying the Search Range

- Press the **Exclude LO** softkey to deactivate the "Exclude LO" mode in order to include the frequency down to 0 Hz in the marker search functions.

Examining a Signal at the Center in Detail

1. Press the PRESET key to set the R&S ESRP to the default setting.
2. Press the MKR -> key to open the "Marker To" menu.
3. Marker 1 is activated and set to the largest signal of the trace.
4. Press the **Center =Mkr Freq (span > 0)** softkey to set to the marker frequency.
5. The span is adapted in such a way that the minimum frequency (= 0 Hz) or the maximum frequency is not exceeded.

6. Press the **Ref Lvl =Mkr Lvl** softkey to set the reference level to the measured marker level.
7. Press the **SPAN** key.
8. The edit dialog box to enter a frequency span is displayed.
9. Reduce the span, e.g. using the rotary knob.

Specifying the Suitable Peak Excursion

1. If the **Peak Excursion** softkey is used, the default value is sufficient, since, in this mode, the next lower maximum or next higher minimum will always be detected.
2. If the **< or >** of the softkey **Next Mode** is used, the 6 dB level change set as a default value may already be attained by the inherent noise of the instrument. To avoid identifying noise peaks as maxima or minima, enter a peak excursion value that is higher than the difference between the highest and the lowest value measured for the displayed inherent noise.

Effect of Different Peak Excursion Settings (Example)

The following figure shows a trace to be examined.

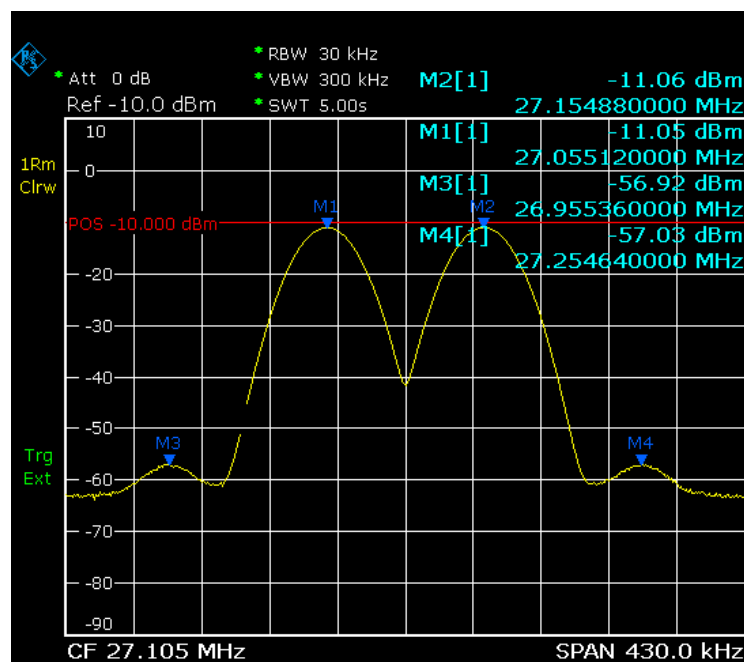


Fig. 4-21: Trace example

The following table lists the signals as indicated by the marker numbers in the diagram above, as well as the minimum of the amplitude decrease to both sides of the signal:

Signal #	Min. amplitude decrease to both sides of the signal
1	30 dB
2	29.85 dB
3	7 dB
4	7 dB

The detected signals and their order are different depending on the peak excursion setting and the peak search method (whether the next lower maximum or the next relative maximum is searched). The following results are obtained. All tests start with the marker set to signal 1 by pressing the **Peak** softkey.

- 40 dB peak excursion
Result: With both methods apart from signal 1 no signal is detected, as the signal level does not decrease by more than 30 dB to either side of any signal.

Next lower maximum	Next relative maximum
Next Mode abs: signal 1 (no further signal detected)	Next Mode <: signal 1 (no further signal detected)
	Next Mode >: signal 1 (no further signal detected)

- 20 dB peak excursion
Result: With both methods apart from signal 1 signal 2 is detected, as the signal level decreases at least by 29.85 dB to either side of this signal, which is now greater than the peak excursion.

Next lower maximum	Next relative maximum
Next Mode abs: signal 2	Next Mode <: signal 1 (no further signal detected)
Next Mode abs: signal 2 (no further signal detected)	Next Mode >: signal 2
	Next Mode >: signal 2 (no further signal detected)

- 6 dB peak excursion
Result: With both methods all signals are detected.

Next lower maximum	Next relative maximum
Next Mode abs: signal 2	Next Mode <: signal 3
Next Mode abs: signal 3	Next Mode >: signal 1
Next Mode abs: signal 4	Next Mode >: signal 2
	Next Mode >: signal 4

4.3.3.3 Performing Peak Searches with Markers – PEAK SEARCH Key

The PEAK SEARCH key is used to perform a peak search with the currently active marker. If no marker is active, marker 1 is activated in normal mode and set as the peak.

If the selected diagram does not support markers, this key is ignored.

4.3.3.4 Measuring with Markers (MKR FUNC Key)

The MKR FUNC key provides various functions for markers, e.g.

- Phase Noise measurements
- Setting reference points
- Marker demodulation
- Defining Marker peak lists
- Signal counts
- Measuring the power for a band around the marker

To open the marker function menu

- Press the MKR FUNC key.
The "Mkr Func" (marker function) menu is displayed.

Menu and softkey description

- ["Softkeys of the Marker Function Menu"](#) on page 288

Further information

- ["AF Demodulation"](#) on page 298
- ["Frequency Measurement with the Frequency Counter"](#) on page 298
- ["Measurement of Noise Density"](#) on page 299
- ["Measurement example for Phase Noise Auto Peak Search"](#) on page 300

Tasks

- ["Setting a Fixed Reference Point \(Phase Noise Measurement\)"](#) on page 297
- ["Setting the Demodulation Mode and Duration"](#) on page 297
- ["Performing Band Power Measurements"](#) on page 300

Softkeys of the Marker Function Menu

The following table shows all softkeys available in the marker function menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Select Marker (No).....	289
Signal Count.....	289
Noise Meas On/Off.....	290

Phase Noise.....	290
L Phase Noise On/Off.....	290
L Ref Point Level.....	290
L Ref Point Frequency (span > 0)/Ref Point Time (zero span).....	290
L Peak Search.....	291
L Ph. Noise Auto Peak Search.....	291
L Select Marker (No).....	291
Ref Fixed.....	291
L Ref. Fixed On/Off.....	291
L Ref Point Level.....	291
L Ref Point Frequency (span > 0)/Ref Point Time (zero span).....	292
L Peak Search.....	292
Marker Demod.....	292
L Mkr Demod On/Off.....	292
L AM.....	292
L FM.....	292
L Mkr Stop Time.....	292
L Continuous Demod (span > 0).....	293
L Squelch.....	293
L Squelch Level.....	293
n dB down.....	293
Marker Peak List.....	294
L Peak List On/Off.....	294
L Sort Mode Freq/Lvl.....	294
L Max Peak Count.....	294
L Peak Excursion.....	295
L Left Limit.....	295
L Right Limit.....	295
L Threshold.....	295
L ASCII File Export.....	295
L Decim Sep.....	296
L Marker Number.....	296
Band Power.....	296
L Select Marker (No).....	296
L Band Power On/Off.....	296
L Span.....	296
L Power.....	297
L Density.....	297

Select Marker (No)

Opens a submenu to select one of 16 markers and define whether the marker is a normal or a delta marker (see "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta](#)" on page 79). "(No)" indicates the number of the currently active marker.

See "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta](#)" on page 79.

Signal Count

Switches the frequency counter on or off, and opens an edit dialog box to define the resolution of the frequency counter, if enabled. The frequency is counted at the position of the reference marker (marker 1). If no marker is activate, marker 1 is switched on and positioned on the largest signal.

The sweep stops at the reference marker until the frequency counter has delivered a result. The result is displayed in the marker field (see [figure 3-9](#)), labeled with [Tx CNT].

For more information see ["Frequency Measurement with the Frequency Counter"](#) on page 298.

Remote command:

`CALCulate<n>:MARKer<m>:COUNT` on page 674

`CALCulate<n>:MARKer<m>:COUNT:FREQuency?` on page 675

Noise Meas On/Off

Switches the noise measurement for the active marker on or off. The corresponding marker becomes the normal marker.

For more information on noise measurement see ["Measurement of Noise Density"](#) on page 299.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:NOISe[:STATe]` on page 676

`CALCulate<n>:MARKer<m>:FUNCTION:NOISe:RESult` on page 676

Phase Noise

This softkey opens a submenu that contains functionality to configure and perform phase noise measurements.

Phase Noise On/Off ← Phase Noise

Switches the phase noise measurement with all active delta markers on and off. The correction values for the bandwidth and the log amplifier are taken into account in the measurement.

Marker 1 is activated, if necessary, and a peak search is performed. If marker 1 is activated, its position becomes the reference point for the measurement.

Deltamarker 2 is activated and can be used to read out the phase noise value at a given frequency offset.

Remote command:

`CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise[:STATe]` on page 678

`CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise:RESult?` on page 677

Ref Point Level ← Phase Noise

Opens an edit dialog box to enter a reference level value. All relative level values of the delta markers refer to this reference level.

Remote command:

`CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPoint:Y` on page 673

Ref Point Frequency (span > 0)/Ref Point Time (zero span) ← Phase Noise

Opens an edit dialog box to enter a frequency reference or time value. All relative frequency or time values of the delta markers refer to this frequency reference. For phase noise measurement, input of reference time is not possible.

Remote command:

`CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPoint:X` on page 672

Peak Search ← Phase Noise

Sets the maximum value of the selected trace as the reference point.

Remote command:

`CALCulate<n>:DELTaMarker<m>:FUNCTION:FIXed:RPOint:MAXimum[:PEAK]`
on page 672

Ph. Noise Auto Peak Search ← Phase Noise

Activates an automatic peak search for the reference fixed marker 1 at the end of each particular sweep.

This function can be used to track a drifting source during a phase noise measurement. The delta marker 2, which shows the phase noise measurement result, keeps the delta frequency value. Therefore the phase noise measurement leads to reliable results in a certain offset although the source is drifting. Only if the marker 2 reaches the border of the span, the delta marker value is adjusted to be within the span. In these cases, select a larger span.

Remote command:

`CALCulate<n>:DELTaMarker<m>:FUNCTION:PNOise:AUTO` on page 677

Select Marker (No) ← Phase Noise

Opens a submenu to select one of 16 markers and define whether the marker is a normal or a delta marker (see "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta](#)" on page 79). "(No)" indicates the number of the currently active marker.

See "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta](#)" on page 79.

Ref Fixed

Opens a submenu to set all values of a reference point. Instead of using the current values of the reference marker (marker 1) as reference point for the delta markers, level and frequency or time are set to fixed values and used as reference point.

Ref. Fixed On/Off ← Ref Fixed

Switches the relative measurement to a fixed reference value on or off. The level and frequency or time values of marker 1 immediately become the reference point, but can be altered using the corresponding softkeys ("[Ref Point Level](#)" on page 290, "[Ref Point Frequency \(span > 0\)/Ref Point Time \(zero span\)](#)" on page 290 and "[Peak Search](#)" on page 291).

When set to ON, all delta markers which previously referenced marker 1 are automatically set to reference the fixed marker.

The reference marker assignment can be changed using the "Marker Wizard" (see "[Marker Wizard](#)" on page 80).

Remote command:

`CALCulate<n>:DELTaMarker<m>:FUNCTION:FIXed[:STATe]` on page 674

Ref Point Level ← Ref Fixed

Opens an edit dialog box to enter a reference level value. All relative level values of the delta markers refer to this reference level.

Remote command:

`CALCulate<n>:DELTaMarker<m>:FUNCTION:FIXed:RPOint:Y` on page 673

Ref Point Frequency (span > 0)/Ref Point Time (zero span) ← Ref Fixed

Opens an edit dialog box to enter a frequency reference or time value. All relative frequency or time values of the delta markers refer to this frequency reference. For phase noise measurement, input of reference time is not possible.

Remote command:

`CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPoint:X` on page 672

Peak Search ← Ref Fixed

Sets the maximum value of the selected trace as the reference point.

Remote command:

`CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPoint:MAXimum[:PEAK]` on page 672

Marker Demod

The marker demodulation function sends the AM data at the current marker frequency (in a bandwidth corresponding to the RBW) to the audio output. The "Marker Demod" softkey opens a submenu to set the demodulation output settings.

For more information see "AF Demodulation" on page 298.

Marker demodulation is not available for Spectrum Emission Mask measurements.

Mkr Demod On/Off ← Marker Demod

Switches the demodulation output on or off.

For more information see "AF Demodulation" on page 298.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:DEModulation[:STATe]` on page 679

AM ← Marker Demod

Sets AM as the output demodulation mode. This is the default setting.

For more information see "AF Demodulation" on page 298.

Remote command:

`CALC:MARK1:FUNC:DEM:SEL AM`, see `CALCulate<n>:MARKer<m>:FUNCTION:DEModulation:SElect` on page 679

FM ← Marker Demod

Sets FM as the output demodulation mode. Default setting is AM.

For more information see "AF Demodulation" on page 298.

Remote command:

`CALC:MARK1:FUNC:DEM:SEL FM`, see `CALCulate<n>:MARKer<m>:FUNCTION:DEModulation:SElect` on page 679

Mkr Stop Time ← Marker Demod

Opens an edit dialog box to define how long demodulation should be output for span > 0.

For more information see ["AF Demodulation"](#) on page 298.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:DEModulation:HOLDoff` on page 679

Continuous Demod (span > 0) ← Marker Demod

Switches the continuous demodulation on or off. If the sweep time is long enough, the set frequency range can be monitored acoustically.

For more information see ["AF Demodulation"](#) on page 298.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:DEModulation:CONTinuous`

on page 678

Squelch ← Marker Demod

Activates the squelch function, i.e. the audible AF is cut off below a defined threshold level. Thus, you avoid hearing noise at the audio output when no signal is available.

The squelch function activates the video trigger function (see ["Video"](#) on page 248) and deactivates any other trigger or gating settings. The squelch level and trigger level are set to the same value.

The trigger source in the channel information bar is indicated as "SQL" for squelch. The squelch level is indicated by a red line in the diagram.

Remote command:

`[SENSe:]DEMod:SQUelch[:STATe]` on page 466

Squelch Level ← Marker Demod

Defines the level threshold below which the audible AF is cut off if squelching is enabled. The video trigger level is set to the same value.

The squelch level is indicated by a red line in the diagram.

Remote command:

`[SENSe:]DEMod:SQUelch:LEVel` on page 466

n dB down

Opens an edit dialog box to enter a value to define the level spacing of the two temporary markers to the right and left of marker 1 (default setting: 3 dB). Activates the temporary markers T1 and T2. The values of the temporary markers (T1, T2) and the entered value (ndB) are displayed in the marker field.

If a positive value is entered, the markers T1 and T2 are placed below the active reference marker. If a negative value (e.g. for notch filter measurements) is entered, the markers T1 and T2 are placed above the active reference marker. Marker T1 is placed to the left and marker T2 to the right of the reference marker.

In the marker table, the following results are displayed:

Span setting	Parameter name	Description
span > 0	Bw	frequency spacing of the two temporary markers
	Q factor	quality of the displayed bandwidth value (Bw)
span = 0	PWid	pulse width between the two temporary markers

If it is not possible to form the frequency spacing for the n dB value (e.g. because of noise display), dashes instead of a measured value are displayed.

Remote command:

CALC:MARK1:FUNC:NDBD:STAT ON, see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:STATe](#) on page 682

CALC:MARK1:FUNC:NDBD 3dB, see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown](#) on page 680

CALC:MARK1:FUNC:NDBD:RES? , see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:RESult?](#) on page 681

CALC:MARK:FUNC:NDBD:QFAC?, see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:QFACtor](#) on page 681

CALC:MARK1:FUNC:NDBD:FREQ? (span > 0), see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:FREQuency?](#) on page 680

CALC:MARK1:FUNC:NDBD:TIME? (span = 0), see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:TIME?](#) on page 682

Marker Peak List

Opens the "Peak List" submenu to define criteria for the sort order and the contents of the peak list. For each listed peak the frequency ("Stimulus") and level ("Response") values are given. In addition, the peaks are indicated in the trace display. A maximum of 50 entries are listed.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:COUNT?](#) on page 684

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:X](#) on page 686

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:Y?](#) on page 687

Peak List On/Off ← Marker Peak List

Activates/deactivates the marker peak list. If activated, the peak list is displayed and the peaks are indicated in the trace display.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:STAT](#) on page 686

Sort Mode Freq/Lvl ← Marker Peak List

Defines the criteria for sorting:

"Freq" sorting in ascending order of frequency values (span > 0) or time values (span = 0)

"Lvl" sorting in ascending order of the level

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SORT](#) on page 686

Max Peak Count ← Marker Peak List

Defines the maximum number of peaks to be determined and displayed.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:LIST:SIZE](#) on page 685

Peak Excursion ← Marker Peak List

Opens an edit dialog box for level measurements to enter the minimum level value by which a signal must rise or fall so that it will be identified as a maximum or a minimum by the search functions. Entries from 0 dB to 80 dB are allowed; the resolution is 0.1 dB. The default setting for the peak excursion is 6 dB.

Remote command:

`CALCulate<n>:MARKer<m>:PEXCursion` on page 495

Left Limit ← Marker Peak List

Opens an edit dialog box to enter a value for the lower limit (left vertical line: S1 for span > 0; T1 for zero span). The search is performed between the lines of the left and right limit (see also [Right Limit](#) softkey).

Remote command:

`CALCulate<n>:MARKer<m>:X:SLIMits:LEFT` on page 504

Right Limit ← Marker Peak List

Opens an edit dialog box to enter a value for the upper limit (left vertical line: S2 for span > 0; T2 for zero span). The search is performed between the lines of the left and right limit (see also [Left Limit](#) softkey). If no value is set, the upper limit corresponds to the stop frequency.

Remote command:

`CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT` on page 505

Threshold ← Marker Peak List

Opens an edit dialog box to define the threshold line. The threshold line represents the lower level limit for a "Peak" search and the upper level limit for a "Min" search.

Remote command:

`CALCulate<n>:THReshold:STATe` on page 670

`CALCulate<n>:THReshold` on page 670

ASCII File Export ← Marker Peak List

Opens the "ASCII File Export Name" dialog box and saves the active peak list in ASCII format to the specified file and directory.

The file consists of the header containing important scaling parameters and a data section containing the marker data. For details on an ASCII file see [chapter 4.3.1.6, "ASCII File Export Format"](#), on page 273.

This format can be processed by spreadsheet calculation programs, e.g. MS-Excel. It is necessary to define ';' as a separator for the data import. Different language versions of evaluation programs may require a different handling of the decimal point. It is therefore possible to select between separators '.' (decimal point) and ',' (comma) using the "Decim Sep" softkey (see ["Decim Sep"](#) on page 78).

An example of an output file for Spectrum Emission Mask measurements is given in ["ASCII File Export Format \(Spectrum Emission Mask\)"](#) on page 158.

Remote command:

`FORMat:DEXPort:DSEPARATOR` on page 656

`MMEMory:STORe<n>:LIST` on page 587

Decim Sep ← Marker Peak List

Selects the decimal separator with floating-point numerals for the ASCII Trace export to support evaluation programs (e.g. MS-Excel) in different languages. The values '.' (decimal point) and ',' (comma) can be set.

Remote command:

[FORMat:DEXPort:DSEParator](#) on page 656

Marker Number ← Marker Peak List

If enabled, the determined peaks are indicated by their corresponding marker number in the trace display.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:ANN:LAB:STAT](#) on page 683

Band Power

Opens a submenu to activate and configure a band power marker. Band power markers allow you to measure the integrated power for a defined span (band) around a marker. The result can be displayed either as a power (dBm) or density (dBm/Hz). The span is indicated by lines in the diagram.

Band power markers are only available for standard frequency measurements in Spectrum mode.

Note: Band Power markers are also available in the I/Q Analyzer, but only for **Spectrum** displays (see ["Display Config"](#) on page 332).

For more information see ["Performing Band Power Measurements"](#) on page 300.

Select Marker (No) ← Band Power

Opens a submenu to select one of 16 markers and define whether the marker is a normal or a delta marker (see ["Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta"](#) on page 79). "(No)" indicates the number of the currently active marker.

See ["Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta"](#) on page 79.

Band Power On/Off ← Band Power

Activates or deactivates the band power marker. When switched to on, if no marker is active yet, marker 1 is activated. Otherwise, the currently active marker is used as a band power marker (all other marker functions for this marker are deactivated). All markers can be defined as band power markers, each with a different span.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:BPOWER\[:STATe\]](#) on page 689

Span ← Band Power

Defines the span (band) around the marker for which the power is measured. The span is indicated by lines in the diagram.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:BPOWER:SPAN](#) on page 688

Power ← Band Power

Selects the power mode for the band power marker, i.e. the result is displayed in dBm.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:BPOWer:MODE` on page 688

`CALCulate<n>:MARKer<m>:FUNCTION:BPOWer:RESult?` on page 688

Density ← Band Power

Selects the density mode for the band power marker, i.e. the result is displayed in dBm/Hz.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:BPOWer:MODE` on page 688

`CALCulate<n>:MARKer<m>:FUNCTION:BPOWer:RESult?` on page 688

Setting a Fixed Reference Point (Phase Noise Measurement)

1. Press the **Phase Noise** softkey.

The submenu with the **Phase Noise On/Off** softkey switched on is displayed. The level and frequency or time values of marker 1 immediately become the reference point.

2. Setting the maximum of the selected trace as reference point, press the **Peak Search** softkey.
3. To define the values for the reference point, proceed as follows:
 - a) Press the **Ref Fixed** softkey.
 - b) Press the **Ref Point Level** softkey and enter a reference level value.
 - c) If span > 0, press the **Ref Point Frequency (span > 0)/Ref Point Time (zero span)** softkey and enter a frequency reference value.
 - d) If span = 0, press the "Ref Point Time" softkey and enter a reference time value (see "**Ref Point Frequency (span > 0)/Ref Point Time (zero span)**" on page 290).

Setting the Demodulation Mode and Duration

1. Press the **Marker Demod** softkey.
The submenu with the **Mkr Demod On/Off** softkey switched on is displayed.
2. To change the demodulation mode, press the **AM** or **FM** softkey.
3. For details see "**AF Demodulation**" on page 298.
4. To modify the demodulation time for span > 0, press the **Mkr Stop Time** softkey.
5. To change to continuous demodulation for span > 0, press the **Continuous Demod (span > 0)** softkey.

AF Demodulation

The R&S ESRP provides demodulators for AM and FM signals. With these demodulators, a displayed signal can be identified acoustically by using headphones.

CAUTION

Risk of hearing damage

To protect your hearing, make sure that the volume setting is not too high before putting on the headphones.

The volume for the headphones is controlled using the rotary knob next to the "AF Output" interface on the front panel of the instrument.

For span > 0, the demodulation is not continuous. The frequency at which the demodulation takes place is determined by the active marker. The demodulation bandwidth corresponds to the RBW. If the level of the selected frequency is above the threshold line, the sweep stops for the selected time (stop time) and the RF signal is demodulated. For span = 0, the demodulation is continuously active irrespective of the stop time set.

Frequency Measurement with the Frequency Counter

In order to accurately determine the frequency of a signal, the R&S ESRP is equipped with a frequency counter which measures the frequency of the RF signal at the intermediate frequency. Using the measured IF, the R&S ESRP calculates the frequency of the RF input signal by applying the known frequency conversion factors.

The frequency measurement uncertainty depends only upon the accuracy of the frequency reference used (external or internal reference). Although the R&S ESRP always operates synchronously irrespective of the set span, the frequency counter delivers a more exact result than a measurement performed with a marker. This is due to the following:

- The marker measures only the position of the point on the trace and infers from this value the signal frequency. The trace, however, contains only a limited number of points. Depending upon the selected span, each point may contain many measurement values, which therefore limits the frequency resolution.
- The resolution with which the frequency can be measured with a marker is dependant on the selected resolution bandwidth, which in return affects the necessary measurement time. For this reason, the bandwidth is normally defined as wide as possible and the sweep time as short as possible. This results in a loss of frequency resolution. For the measurement with the frequency counter, the sweep is stopped at the reference marker, the frequency is counted with the desired resolution and then the sweep is allowed to continue.
In I/Q Analyzer mode (see [chapter 5, "I/Q Analyzer"](#), on page 330), the resolution with which the frequency can be measured with a marker is always the filter bandwidth, which is derived from the defined sample rate.

Measurement of Noise Density

During noise measurement, the noise power density is measured at the position of the marker. For span = 0, all points of the trace are used to determine the noise power density. For span > 0, two points to the right and left of the marker are used for the measurement to obtain a stable result.

The noise power density is indicated in the marker field. With logarithmic amplitude units (dBm, dBmV, dBm μ V, dB μ A), the noise power density is output in dBm/Hz, i.e. as level in 1 Hz bandwidth with reference to 1 mW. With linear amplitude units (V, A, W), the noise voltage density is evaluated in μ V/Hz, the noise current density in μ A/Hz or the noise power density in μ W/Hz.

In the default setting, the R&S ESRP uses the sample detector for the noise function.

With the sample detector, the trace can additionally be set to AVERAGE to stabilize the measured values. With RMS detector used, trace averaging must not be used since in this case it produces too low noise levels which cannot be corrected. Instead, the sweep time can be increased to obtain stable measurement results.

Prerequisite settings

The following settings have to be made to ensure that the power density measurement yields correct values:

- Detector: Sample or RMS
- Video bandwidth:
 - ≤ 0.1 resolution bandwidth with sample detector
 - $\geq 3 \times$ resolution bandwidth with RMS detector
- Trace averaging:

With the sample detector, the trace can additionally be set to average to stabilize the measured values. With RMS detector used, trace averaging must not be used since in this case it produces too low noise levels which cannot be corrected. Instead, the sweep time can be increased to obtain stable measurement results.

Correction factors

The R&S ESRP uses the following correction factors to evaluate the noise density from the marker level:

- Since the noise power is indicated with reference to 1 Hz bandwidth, the bandwidth correction value is deducted from the marker level. It is $10 \times \lg(1 \text{ Hz}/\text{BW}_{\text{Noise}})$, where BW_{Noise} is the noise or power bandwidth of the set resolution filter (RBW).
- RMS detector: With the exception of bandwidth correction, no further corrections are required since this detector already indicates the power with every point of the trace.
- Sample detector: As a result of video filter averaging and trace averaging, 1.05 dB is added to the marker level. This is the difference between the average value and the RMS value of white noise. With a logarithmic level axis, 1.45 dB is added additionally. Logarithmic averaging is thus fully taken into account which yields a value that is 1.45 dB lower than that of linear averaging.

- To allow a more stable noise display the adjacent (symmetric to the measurement frequency) points of the trace are averaged.
- For span > 0, the measured values are averaged versus time (after a sweep).



The R&S ESRP noise figure can be calculated from the measured power density level. It is calculated by deducting the set RF attenuation (RF Att) from the displayed noise level and adding 174 to the result.

Measurement example for Phase Noise Auto Peak Search

The phase noise of a CW signal at 100 MHz with 0 dBm level is to be measured at 800 kHz from the carrier.


1. PRESET
The R&S FSP is set to the default setting.
2. **FREQ > "CENTER": 100 MHz**
The center frequency is set to 100 MHz.
3. **SPAN: 2 MHz**
The span is set to 2 MHz.
4. **AMPT: 0 dBm**
The reference level is set to 0 dBm.
5. **MKR FCTN > "MARKER 1"**
Marker 1 is switched on and positioned at the maximum of the displayed trace.
6. **"PHASE NOISE": 800 kHz**
The phase noise measurement is switched on. The delta marker is positioned on the main marker and the measured phase noise value is displayed in the marker info field. The sample detector is used and the video bandwidth is set to $3 \times \text{RBW}$. When the phase noise measurement function is enabled, the entry of the delta marker frequency is activated. It can be entered directly.

Performing Band Power Measurements

Band power markers allow you to measure the integrated power (similar to ACP measurements) for a defined span (band) around a marker. By default, 5 % of the current span is used. The span is indicated by colored lines in the diagram. The result can be displayed either as a power (dBm) or density (dBm/Hz).



Band power markers are only available for standard frequency measurements in Spectrum mode (not zero span, I/Q Analyzer etc.).

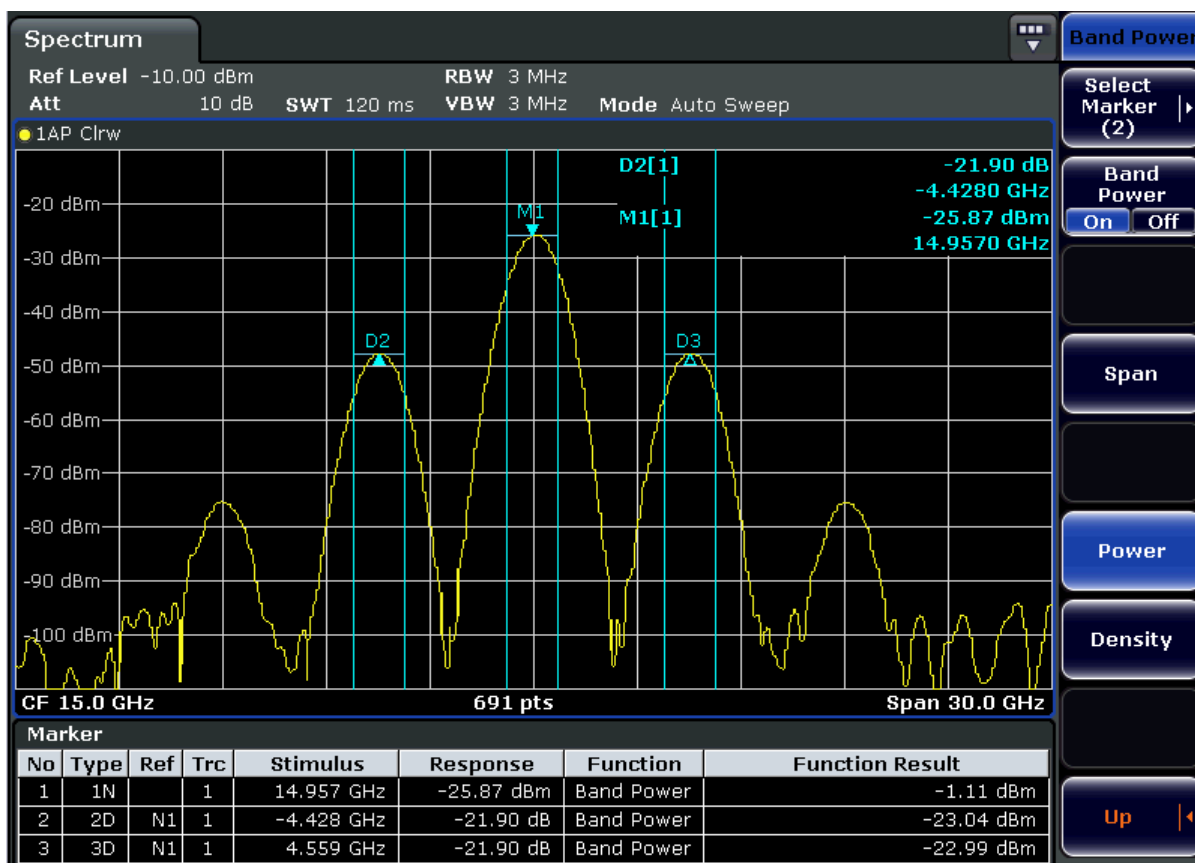

All markers can be defined as band power markers, each with a different span. When a band power marker is activated, if no marker is active yet, marker 1 is activated. Otherwise, the currently active marker is used as a band power marker (all other marker functions for this marker are deactivated).

If the detector mode for the marker trace is set to "AutoSelect", the RMS detector is used.

1. In the MKR FUNC menu, press "Band Power".
2. In the "Band Power" menu, press "Span" and enter the width of the band around the marker for which the power is to be measured.
3. To display the measurement result in dBm/Hz, press "Density". By default, the result is displayed as a power in dBm.
4. Press "Band Power On" to activate the band power marker.

The measurement results are displayed as usual in the marker table or in the diagram.

4.3.4 Lines

The LINES key is used to configure limit and display lines.

To open the Lines menu

- Press the LINES key.

The "Lines" menu and the "Select Limit Line" dialog box are displayed. For details on the "Select Limit Line" dialog box refer to [chapter 3.4.3.5, "Selecting a Limit Line"](#), on page 93.

Menu and softkey description

- [chapter 3.4.3.1, "Softkeys of the Lines Menu"](#), on page 87

Further information

- [chapter 3.4.3.2, "Display Lines"](#), on page 91
- [chapter 3.4.3.3, "Limit Lines \(Frequency/Time Lines\)"](#), on page 92

Tasks

- [chapter 3.4.3.4, "Working with Lines"](#), on page 93
- [chapter 3.4.3.5, "Selecting a Limit Line"](#), on page 93
- [chapter 3.4.3.6, "Creating a New Limit Line"](#), on page 94
- [chapter 3.4.3.7, "Editing an Existing Limit Line"](#), on page 97
- [chapter 3.4.3.8, "Creating a New Limit Line Based upon an Existing Limit Line"](#), on page 97
- [chapter 3.4.3.9, "Activating/Deactivating a Limit Line"](#), on page 98

4.4 Advanced Measurement Examples

This chapter explains how to operate the R&S ESRP in spectrum mode using typical measurements as examples. Additional background information on the settings is given. For more detailed information on all available softkeys and the corresponding instrument functions, see [chapter 4, "Spectrum Measurements"](#), on page 99.

• Test Setup	302
• Measurement of Harmonics	303
• Measuring the Spectra of Complex Signals	305
• Measuring Signals in the Vicinity of Noise	308
• Noise Measurements	313
• Measurements on Modulated Signals	320

4.4.1 Test Setup

All of the following examples are based on the standard settings of the R&S ESRP. These are set with the PRESET key. A complete listing of the standard settings can be found in chapter "Instrument Functions", section "Initializing the Configuration – PRE-SET Key".

In the following examples, a signal generator is used as a signal source. The RF output of the signal generator is connected to the RF input of R&S ESRP.

If a 64 MHz signal is required for the test setup, as an alternative to the signal generator, the internal 64 MHz reference generator can be used:

1. Switch on the internal reference generator.
 - a) Press the SETUP key.
 - b) Press the "More" key.
 - c) Press the "Service" softkey.
 - d) Press the "Input RF/Cal" softkey, until "Cal" is highlighted.
The internal 64 MHz reference generator is now on. The R&S ESRP's RF input is switched off.
2. Switch on the RF input again for normal operation of the R&S ESRP. Two ways are possible:
 - a) Press the PRESET key.
or:
 - b) Press the SETUP key.
 - c) Press the "Service" softkey.
 - d) Press the "Input RF/Cal" softkey, until "RF" is highlighted.
The internal signal path of the R&S ESRP is switched back to the RF input in order to resume normal operation.

4.4.2 Measurement of Harmonics

Signal generator settings (e.g. R&S ESRP SMU):

Frequency:	128 MHz
Level:	- 25 dBm

Procedure on the R&S ESRP:

1. Set the R&S ESRP to its default state by pressing the PRESET key.
2. Set the center frequency to *128 MHz* and the span to *100 kHz*.
3. Switch on the marker by pressing the MKR key.
The marker is positioned on the trace maximum.
4. Set the measured signal frequency and the measured level as reference values.
 - a) Press the MKR FUNC key
 - b) Press the "Ref Fixed" softkey.
The position of the marker becomes the reference point. The reference point level is indicated by a horizontal line, the reference point frequency with a vertical line. At the same time, the delta marker 2 is switched on.

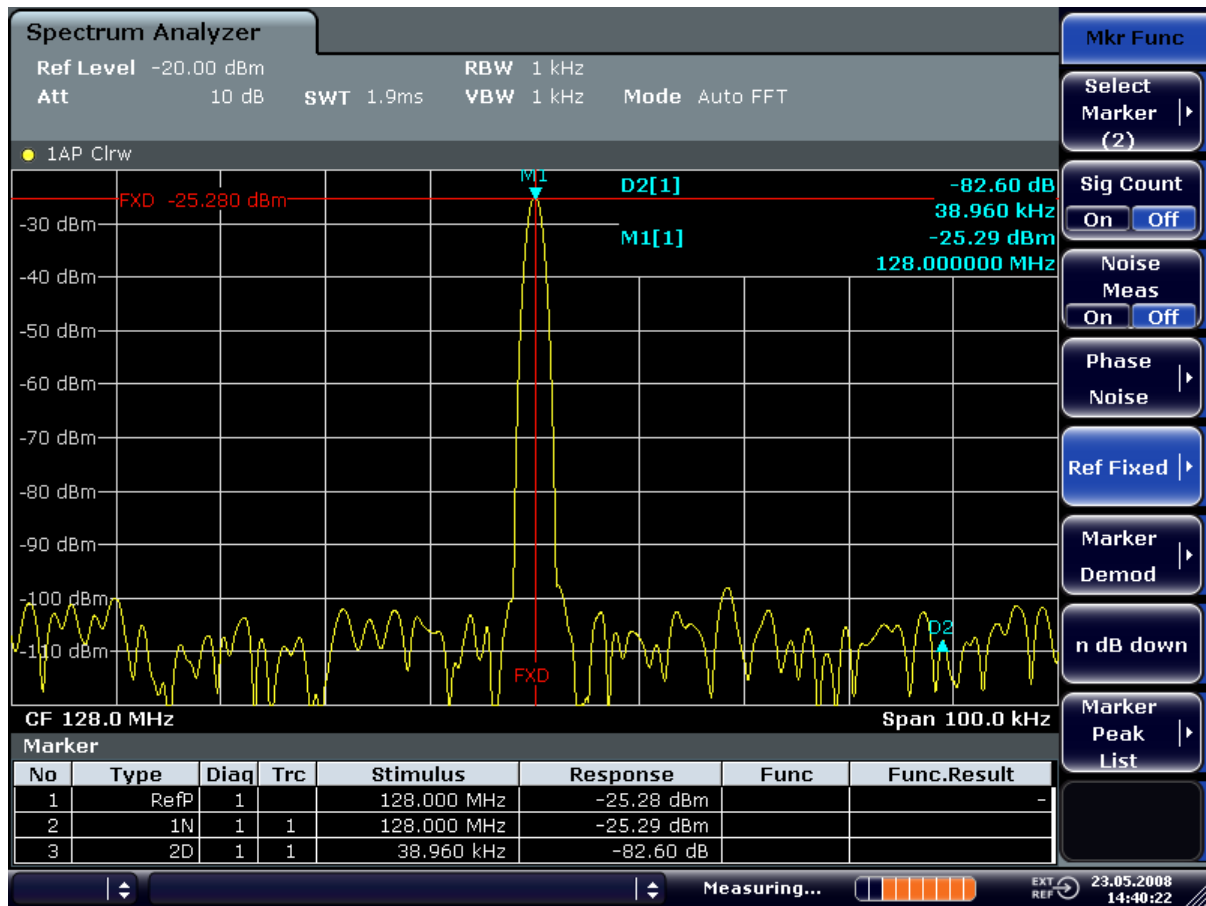


Fig. 4-22: Fundamental wave and the frequency and level reference point

5. Make the step size for the center frequency equal to the signal frequency
 - a) Press the FREQ key.
 - b) Press the "CF-Stepsize" softkey and press the "= Marker" softkey in the sub-menu.

The step size for the center frequency is now equal to the marker frequency.

6. Set the center frequency to the second harmonic of the signal.

- a) Press the FREQ key.
- b) Press the UPARROW key once.

The center frequency is set to the second harmonic.

7. Place the delta marker on the second harmonic.

- a) Press the MKR -> key.
- b) Press the "Peak" softkey.

The delta marker moves to the maximum of the second harmonic. The displayed level result is relative to the reference point level (= fundamental wave level).

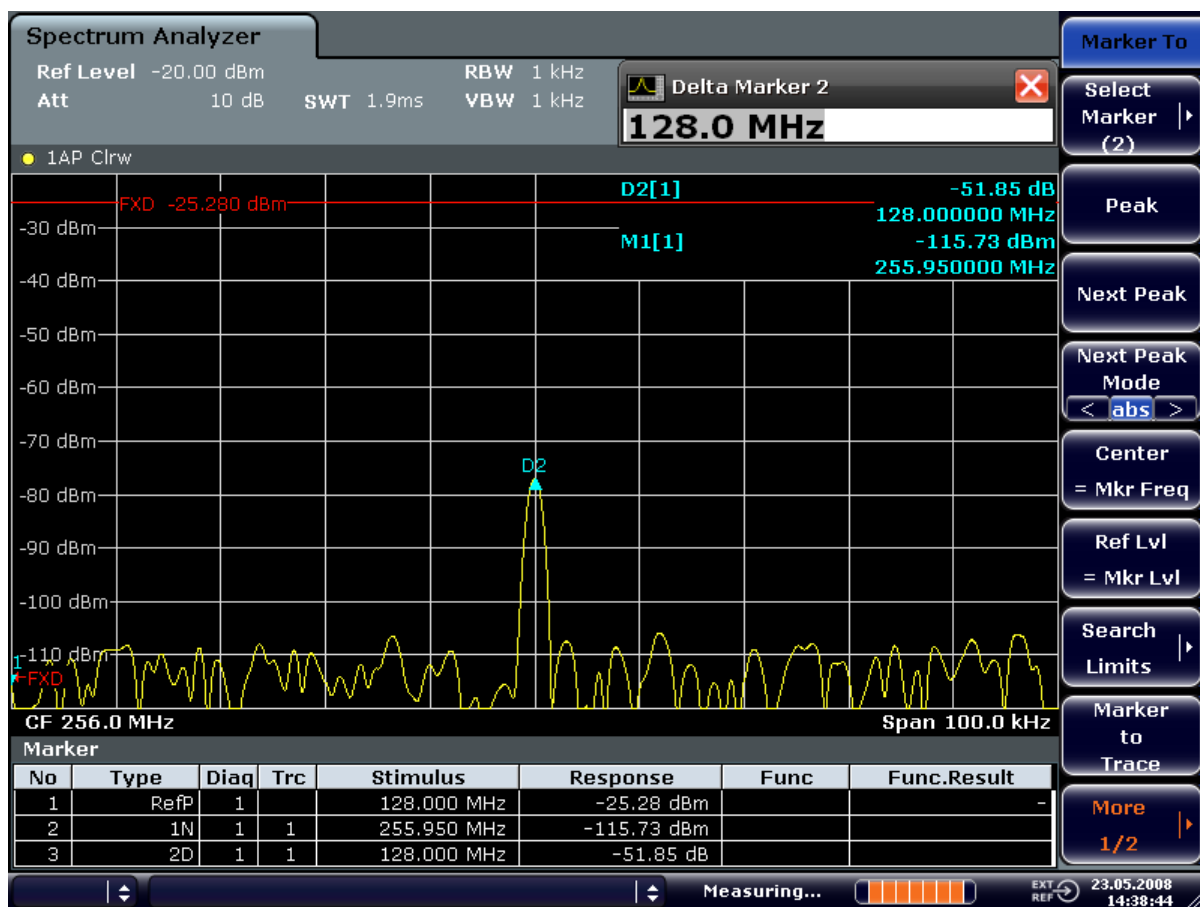


Fig. 4-23: Measuring the level difference between the fundamental wave (= reference point level) and the 2nd harmonic

The other harmonics are measured with steps 5 and 6, the center frequency being incremented or decremented in steps of 128 MHz using the UPARROW or DNARROW key.

4.4.3 Measuring the Spectra of Complex Signals

4.4.3.1 Separating Signals by Selecting an Appropriate Resolution Bandwidth

A basic feature of a signal analyzer is being able to separate the spectral components of a mixture of signals. The resolution at which the individual components can be separated is determined by the resolution bandwidth. Selecting a resolution bandwidth that is too large may make it impossible to distinguish between spectral components, i.e. they are displayed as a single component.

An RF sinusoidal signal is displayed by means of the passband characteristic of the resolution filter (RBW) that has been set. Its specified bandwidth is the 3 dB bandwidth of the filter.

Two signals with the same amplitude can be resolved if the resolution bandwidth is smaller than or equal to the frequency spacing of the signal. If the resolution bandwidth is equal to the frequency spacing, the spectrum display screen shows a level drop of 3 dB precisely in the center of the two signals. Decreasing the resolution bandwidth makes the level drop larger, which thus makes the individual signals clearer.

If there are large level differences between signals, the resolution is determined by selectivity as well as by the resolution bandwidth that has been selected. The measure of selectivity used for signal analyzers is the ratio of the 60 dB bandwidth to the 3 dB bandwidth (= shape factor).

For the R&S ESRP, the shape factor for bandwidths is < 5 , i.e. the 60 dB bandwidth of the 30 kHz filter is < 150 kHz.


The higher spectral resolution with smaller bandwidths is won by longer sweep times for the same span. The sweep time has to allow the resolution filters to settle during a sweep at all signal levels and frequencies to be displayed.

4.4.3.2 Intermodulation Measurements

If several signals are applied to a transmission two-port device with nonlinear characteristic, intermodulation products appear at its output at the sums and differences of the signals. The nonlinear characteristic produces harmonics of the useful signals which intermodulate at the characteristic. The intermodulation products of lower order have a special effect since their level is largest and they are near the useful signals. The intermodulation product of third order causes the highest interference. It is the intermodulation product generated from one of the useful signals and the 2nd harmonic of the second useful signal in case of two-tone modulation.

Measurement Example – Measuring the R&S ESRP's Intrinsic Intermodulation

Test setup:

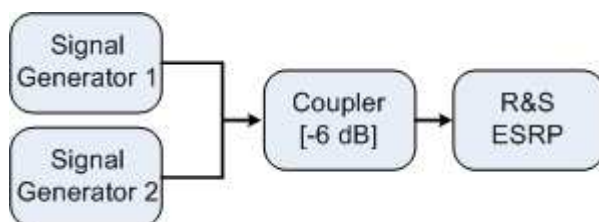

Signal generator settings (e.g. R&S ESRP SMU):

	Level	Frequency
Signal generator 1	-4 dBm	999.7 MHz
Signal generator 2	-4 dBm	1000.3 MHz

Setting up the measurement

1. Set the R&S ESRP to its default settings by pressing the PRESET key.

The R&S ESRP is in its default state.

2. Set center frequency to *1 GHz* and the frequency span to *3 MHz*.
3. Set the reference level to *-10 dBm* and RF attenuation to *0 dB*.
4. Set the resolution bandwidth to *10 kHz*.
The noise is reduced, the trace is smoothed further and the intermodulation products can be clearly seen.
5. Set the VBW to "1 kHz".

Measuring intermodulation using the 3rd order intercept (TOI) measurement function

1. Press the MEAS key and then the "TOI" softkey.

The R&S ESRP activates four markers to measure the intermodulation distance. Two markers are positioned on the useful signals and two on the intermodulation products. The 3rd order intercept is calculated from the level difference between the useful signals and the intermodulation products. It is then displayed on the screen:


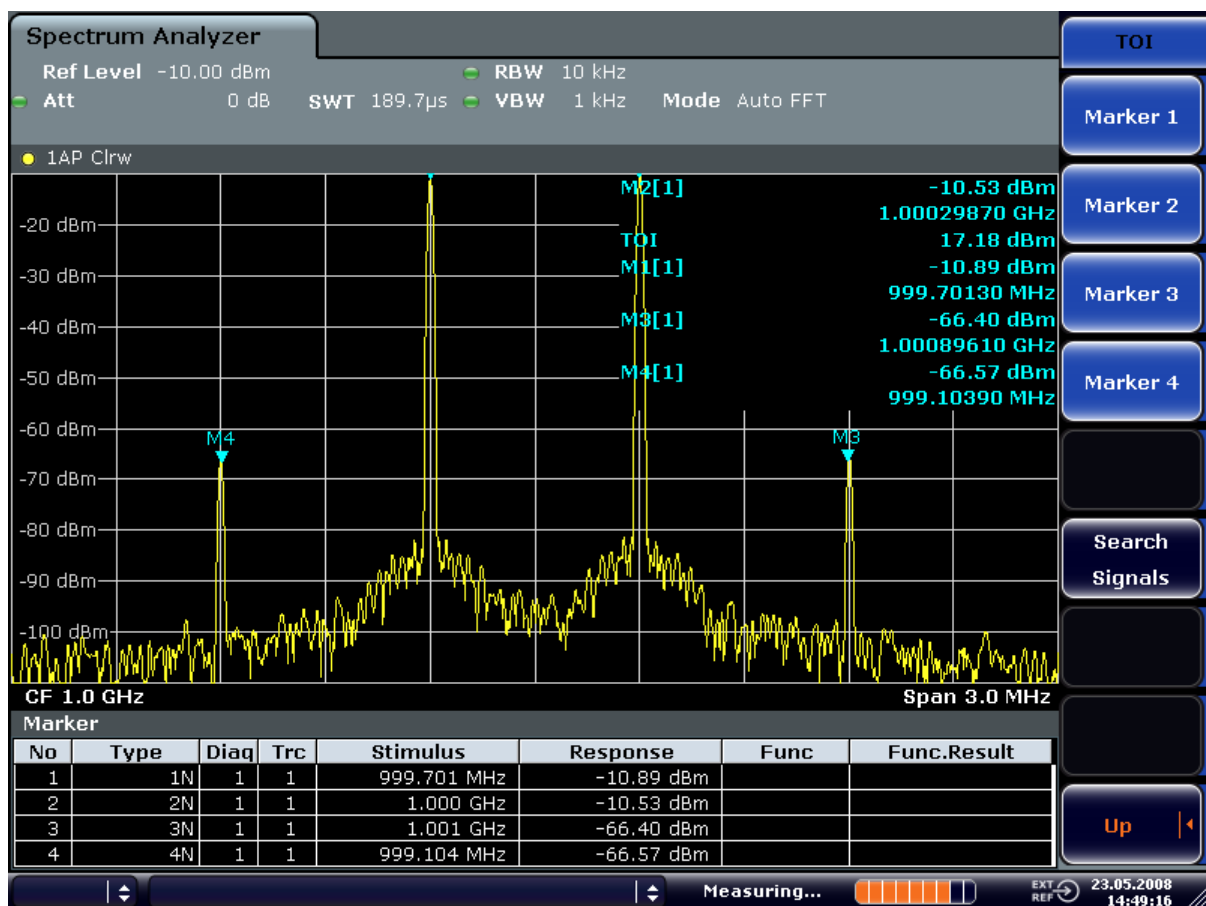


Fig. 4-24: Result of intrinsic intermodulation measurement on the R&S ESRP.

The 3rd order intercept (TOI) is displayed at the top right corner of the grid.

- The level of a signal analyzer's intrinsic intermodulation products depends on the RF level of the useful signals at the input mixer. When the RF attenuation is added, the mixer level is reduced and the intermodulation distance is increased. With an additional RF attenuation of 10 dB, the levels of the intermodulation products are reduced by 20 dB. The noise level is, however, increased by 10 dB. Increase the RF attenuation to 20 dB to reduce intermodulation products.

The R&S ESRP's intrinsic intermodulation products disappear below the noise floor.

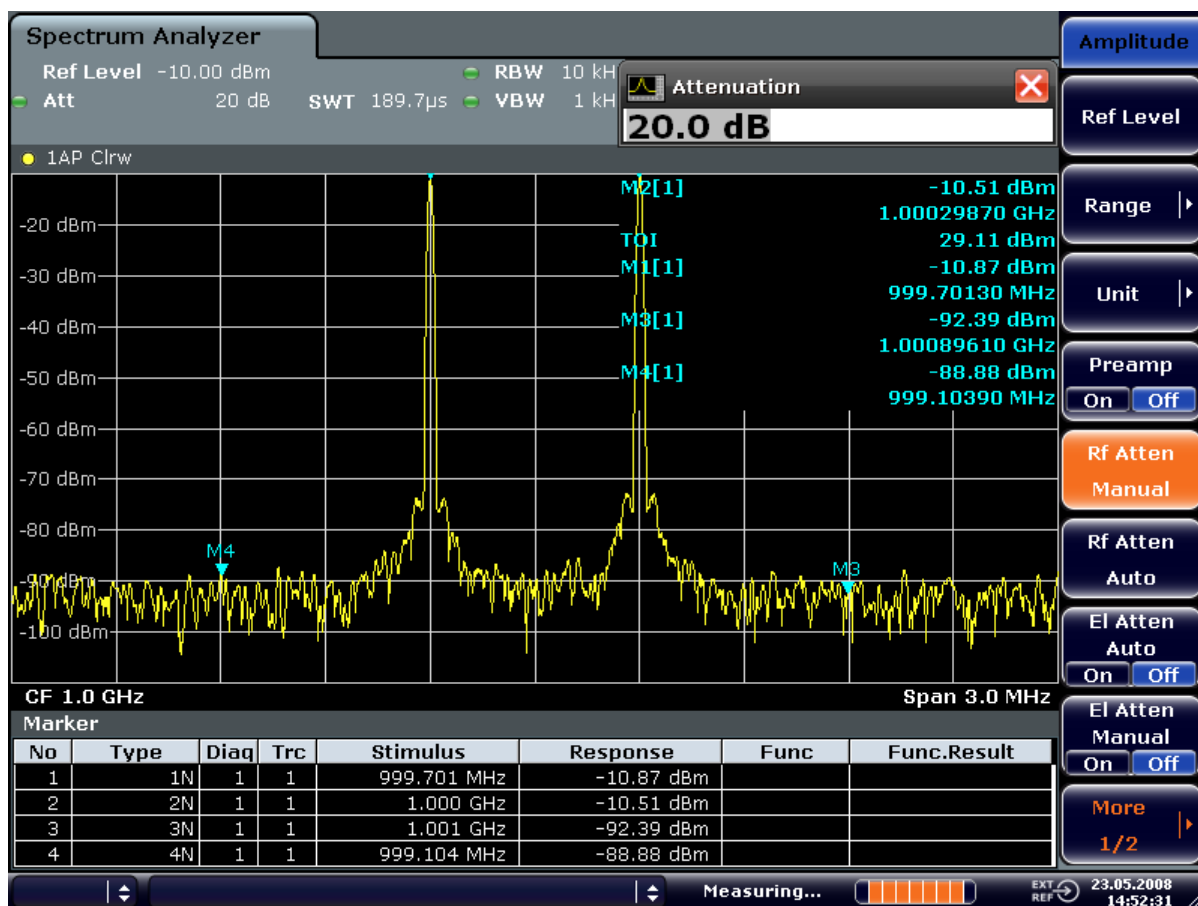

4.4.4 Measuring Signals in the Vicinity of Noise

The minimum signal level a signal analyzer can measure is limited by its intrinsic noise. Small signals can be swamped by noise and therefore cannot be measured. For signals that are just above the intrinsic noise, the accuracy of the level measurement is influenced by the intrinsic noise of the signal analyzer.

The displayed noise level of a signal analyzer depends on its noise figure, the selected RF attenuation, the selected reference level, the selected resolution and video bandwidth and the detector. The effect of the different parameters is explained in the following.

Impact of the RF attenuation setting

The sensitivity of a signal analyzer is directly influenced by the selected RF attenuation. The highest sensitivity is obtained at a RF attenuation of 0 dB. The attenuation can be set in 10 dB steps up to 70 dB. Each additional 10 dB step reduces the sensitivity by 10 dB, i.e. the displayed noise is increased by 10 dB.

Impact of the resolution bandwidth

The sensitivity of a signal analyzer also directly depends on the selected bandwidth. The highest sensitivity is obtained at the smallest bandwidth (1 Hz). If the bandwidth is increased, the reduction in sensitivity is proportional to the change in bandwidth. The R&S ESRP has bandwidth settings in 1, 2, 3, 5 sequence. Increasing the bandwidth by a factor of 3 increases the displayed noise by approx. 5 dB (4.77 dB precisely). If the bandwidth is increased by a factor of 10, the displayed noise increases by a factor of 10, i.e. 10 dB.

Impact of the video bandwidth

The displayed noise of a signal analyzer is also influenced by the selected video bandwidth. If the video bandwidth is considerably smaller than the resolution bandwidth, noise spikes are suppressed, i.e. the trace becomes much smoother. The level of a sine wave signal is not influenced by the video bandwidth. A sine wave signal can therefore be freed from noise by using a video bandwidth that is small compared with the resolution bandwidth, and thus be measured more accurately.

Impact of the detector

Noise is evaluated differently by the different detectors. The noise display is therefore influenced by the choice of detector. Sine wave signals are weighted in the same way by all detectors, i.e. the level display for a sine wave RF signal does not depend on the selected detector, provided that the signal-to-noise ratio is high enough. The measurement accuracy for signals in the vicinity of intrinsic signal analyzer noise is also influenced by the detector which has been selected. For details on the detectors of the R&S ESRP refer to chapter "Instrument Functions", section "Detector overview" or the Online Help.

4.4.4.1 Measurement Example – Measuring Level at Low S/N Ratios

The example shows the different factors influencing the S/N ratio.

Signal generator settings (e.g. R&S ESRP SMU):

Frequency:	128 MHz
Level:	- 90 dBm

Procedure:

1. Set the R&S ESRP to its default state by pressing the PRESET key.
The R&S ESRP is in its default state.

2. Set the center frequency to 128 MHz and the frequency span to 100 MHz:
 - a) Press the FREQ key and enter "128 MHz".
 - b) Press the SPAN key and enter "100 MHz".

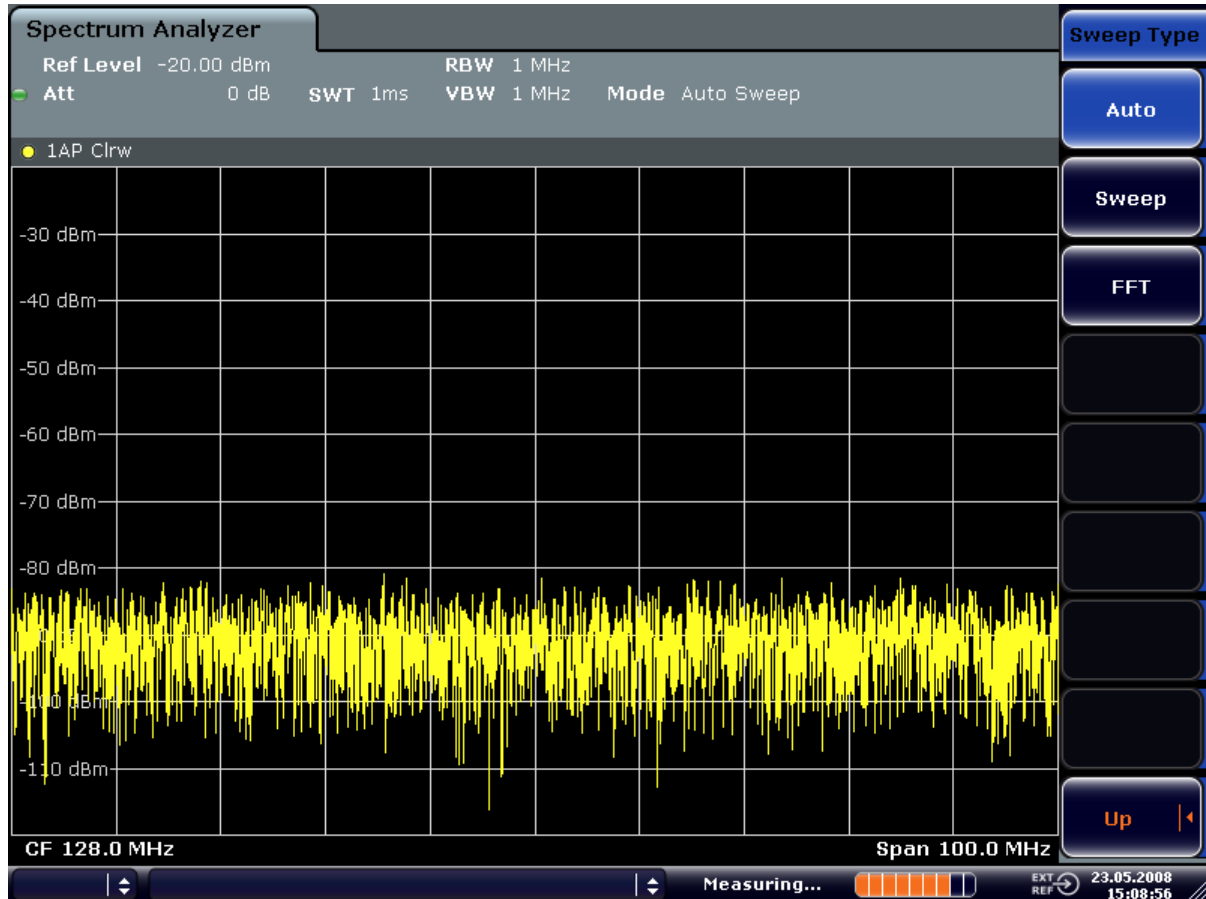


Fig. 4-25: Sine wave signal with low S/N ratio. The signal is measured with the auto peak detector and is completely hidden in the intrinsic noise of the R&S ESRP.

3. To suppress noise spikes the trace can be averaged.
 - a) Press the TRACE key.
 - b) Press the "Trace Wizard" softkey.
The Trace Wizard dialog box opens.

- c) Select "Average" in the "Trace Mode" drop-down menu of the selected trace. The traces of consecutive sweeps are averaged. To perform averaging, the R&S ESRP automatically switches on the sample detector. The RF signal, therefore, can be more clearly distinguished from noise.

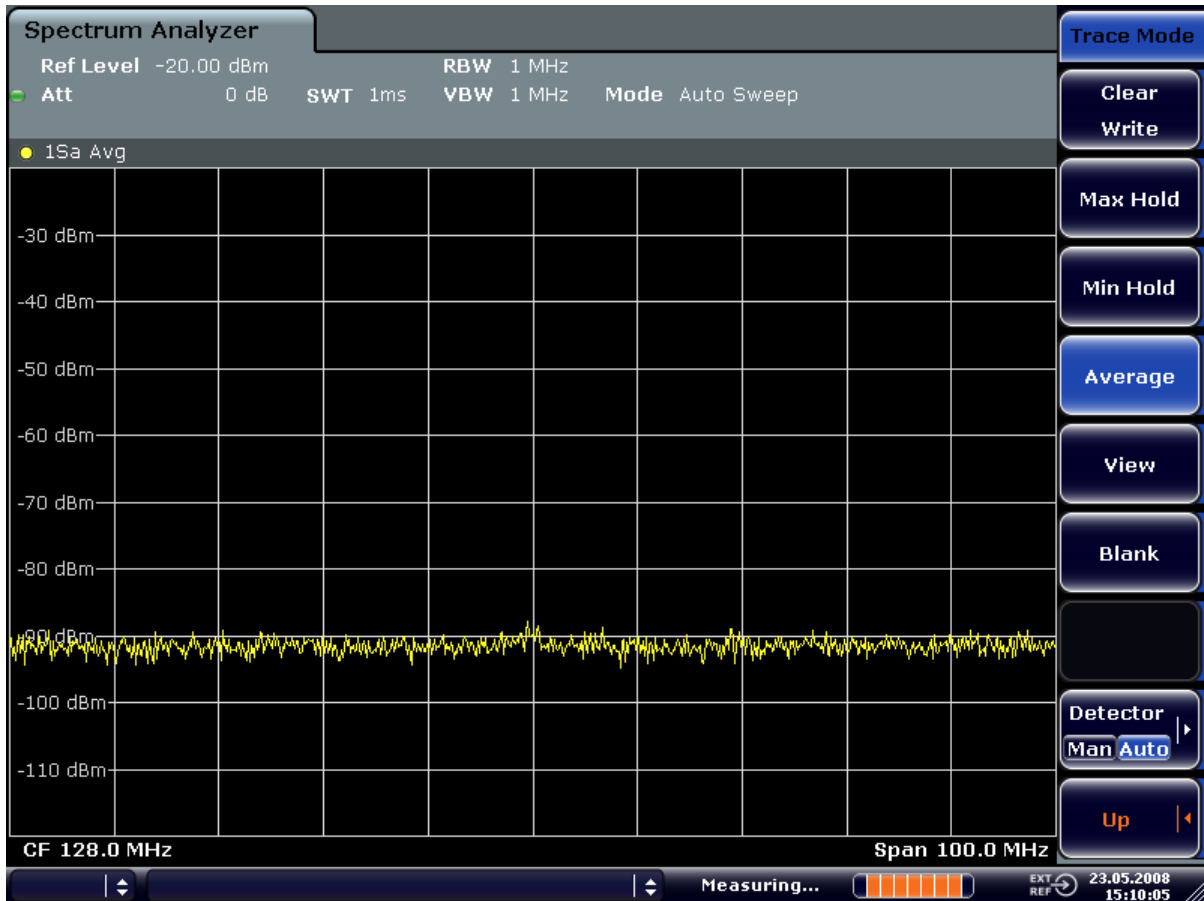


Fig. 4-26: RF sine wave signal with low S/N ratio if the trace is averaged.

4. Instead of trace averaging, a video filter that is narrower than the resolution bandwidth can be selected:
 - a) Press the TRACE key.
 - b) Press the "Trace Wizard" softkey.
The Trace Wizard dialog box opens.
 - c) Select "Clear Write" in the "Trace Mode" drop-down menu of the selected trace.
 - d) Press the BW key.

- e) Press the "Video BW Manual" softkey and enter "10 kHz".
The RF signal can be more clearly distinguished from noise.

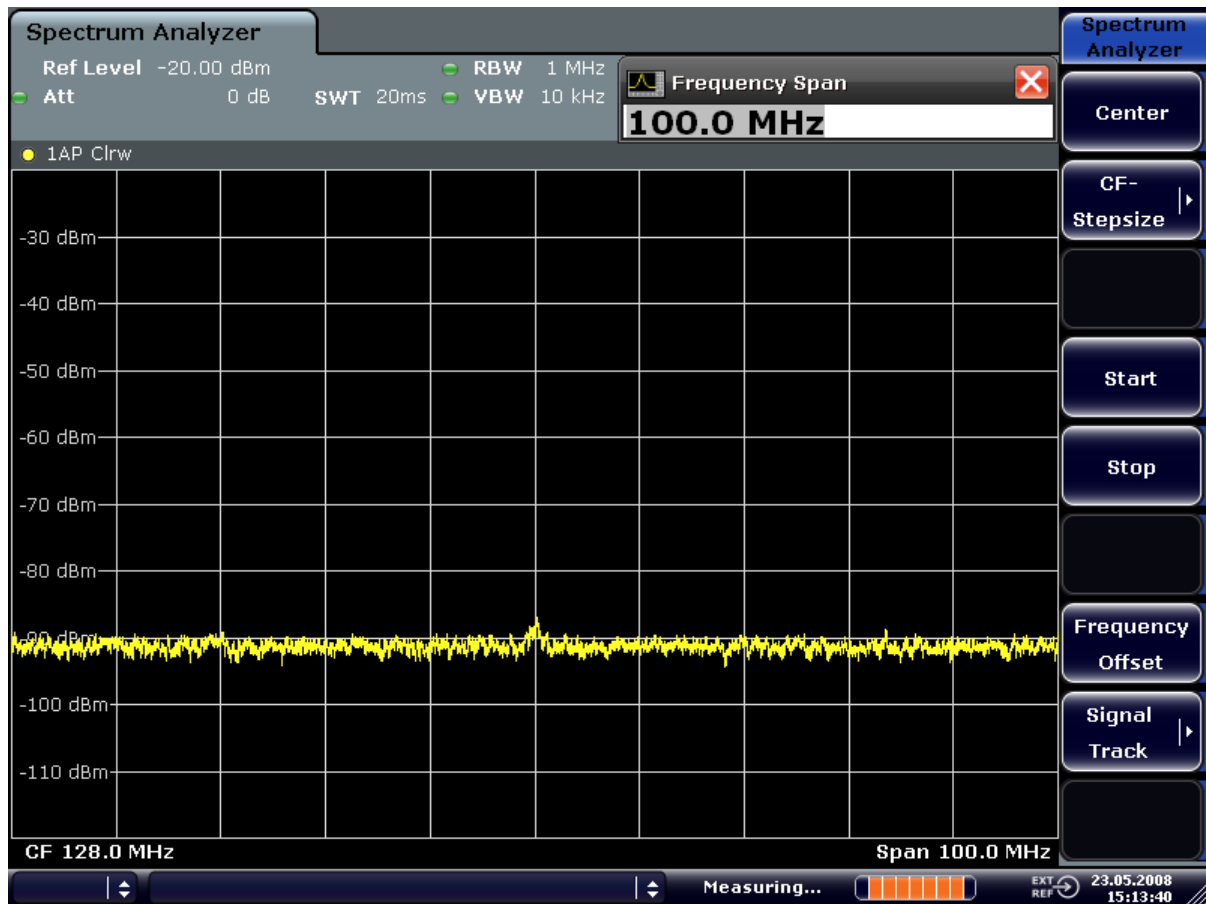


Fig. 4-27: RF sine wave signal with low S/N ratio if a smaller video bandwidth is selected.

5. By reducing the resolution bandwidth by a factor of 10, the noise is reduced by 10 dB:

- a) In the "Bandwidth" menu press the "Res BW Manual" softkey and enter "100 kHz".

The displayed noise is reduced by approx. 10 dB. The signal, therefore, emerges from noise by about 10 dB. Compared to the previous setting, the video bandwidth has remained the same, i.e. it has increased relative to the smaller resolution bandwidth. The averaging effect of the video bandwidth is therefore reduced. The trace will be noisier.

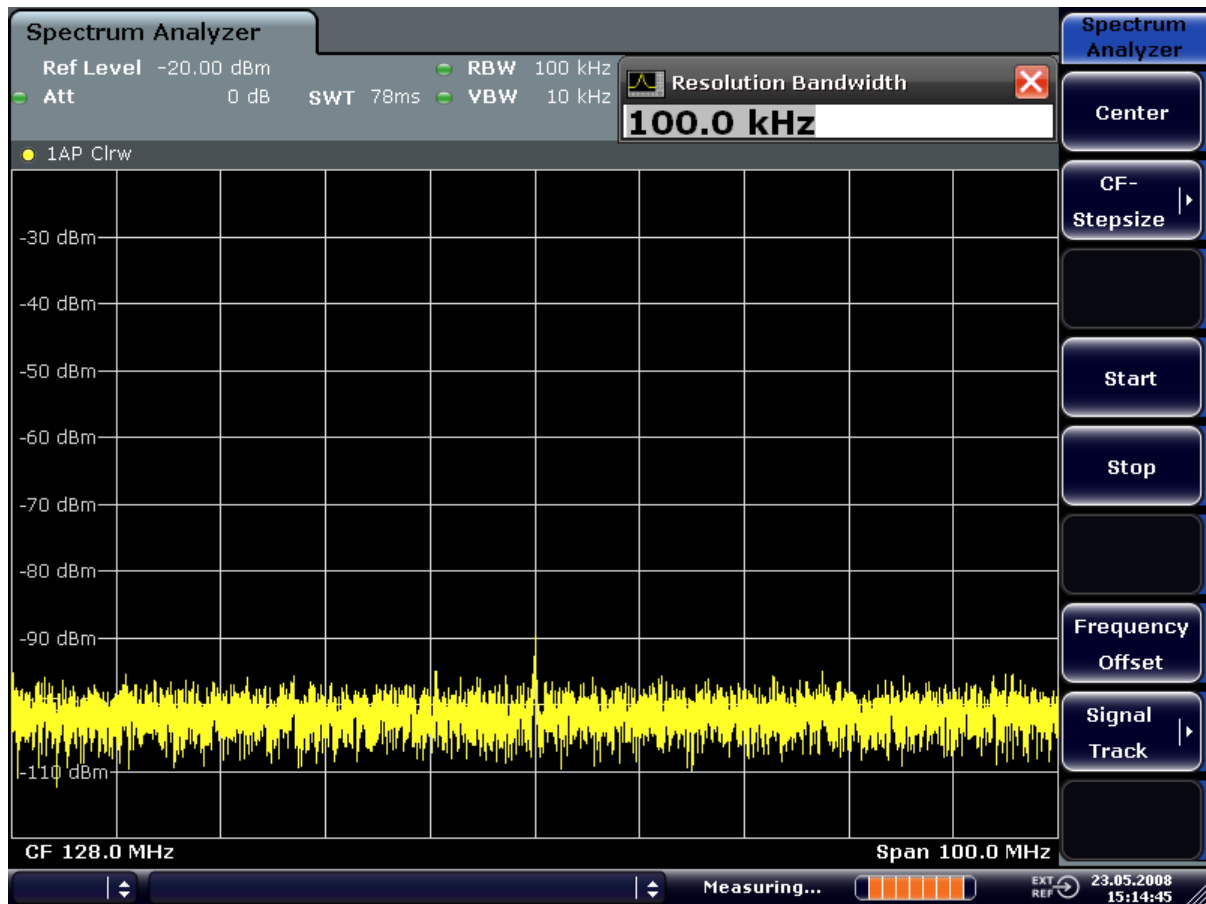


Fig. 4-28: Reference signal at a smaller resolution bandwidth

4.4.5 Noise Measurements

Noise measurements play an important role in signal analysis. Noise e.g. affects the sensitivity of radio communication systems and their components.

Noise power is specified either as the total power in the transmission channel or as the power referred to a bandwidth of 1 Hz. The sources of noise are, for example, amplifier noise or noise generated by oscillators used for the frequency conversion of useful signals in receivers or transmitters. The noise at the output of an amplifier is determined by its noise figure and gain.

The noise of an oscillator is determined by phase noise near the oscillator frequency and by thermal noise of the active elements far from the oscillator frequency. Phase noise can mask weak signals near the oscillator frequency and make them impossible to detect.

4.4.5.1 Measuring Noise Power Density

To measure noise power referred to a bandwidth of 1 Hz at a certain frequency, the R&S ESRP provides marker function. This marker function calculates the noise power density from the measured marker level.

Measurement Example – Measuring the Intrinsic Noise Power Density of the R&S ESRP at 1 GHz and Calculating the R&S ESRP's Noise Figure

Test setup:

- Connect no signal to the RF input; terminate RF input with 50 Ω .

Procedure:

1. Set the R&S ESRP to its default state by pressing the PRESET key.
The R&S ESRP is in its default state.
2. Set the center frequency to 1.234 GHz and the span to 1 MHz.
 - a) Press the FREQ key and enter "1.234 GHz".
 - b) Press the SPAN key and enter "1 MHz".
3. Switch on the marker and set the marker frequency to 1.234 GHz by pressing the MKR key and entering "1.234 GHz".
4. Switch on the noise marker function by switching on the "Noise Meas" softkey.
 - a) Press the MKR FUNC key.
 - b) Switch the "Noise Meas" softkey to "On"
The R&S ESRP displays the noise power at 1 GHz in dBm (1Hz).

Note: Since noise is random, a sufficiently long measurement time has to be selected to obtain stable measurement results. This can be achieved by averaging the trace or by selecting a very small video bandwidth relative to the resolution bandwidth.
5. The measurement result is stabilized by averaging the trace.
 - a) Press the TRACE key.
 - b) Press the "Trace Wizard" softkey.
The Trace Wizard dialog box opens.
 - c) Select "Average" in the "Trace Mode" drop-down menu of the selected trace.
The R&S ESRP performs sliding averaging over 10 traces from consecutive sweeps. The measurement result becomes more stable.

Conversion to other reference bandwidths

The result of the noise measurement can be referred to other bandwidths by simple conversion. This is done by adding $10 \times \log(\text{BW})$ to the measurement result, BW being the new reference bandwidth.

Example:

A noise power of -150 dBm (1 Hz) is to be referred to a bandwidth of 1 kHz.

$$P_{[1\text{kHz}]} = -150 + 10 \times \log(1000) = -150 + 30 = -120 \text{ dBm (1 kHz)}$$

Calculation method for noise power

If the noise marker is switched on, the R&S ESRP automatically activates the sample detector. The video bandwidth is set to 1/10 of the selected resolution bandwidth (RBW).

To calculate the noise, the R&S ESRP takes an average over 17 adjacent pixels (the pixel on which the marker is positioned and 8 pixels to the left, 8 pixels to the right of the marker). The measurement result is stabilized by video filtering and averaging over 17 pixels.

Since both video filtering and averaging over 17 trace points is performed in the log display mode, the result would be 2.51 dB too low (difference between logarithmic noise average and noise power). The R&S ESRP, therefore, corrects the noise figure by 2.51 dB.

To standardize the measurement result to a bandwidth of 1 Hz, the result is also corrected by $-10 \times \log(\text{RBW}_{\text{noise}})$, with $\text{RBW}_{\text{noise}}$ being the power bandwidth of the selected resolution filter (RBW).

Detector selection

The noise power density is measured in the default setting with the sample detector and using averaging. Other detectors that can be used to perform a measurement giving true results are the average detector or the RMS detector. If the average detector is used, the linear video voltage is averaged and displayed as a pixel. If the RMS detector is used, the squared video voltage is averaged and displayed as a pixel. The averaging time depends on the selected sweep time ($=\text{SWT}/501$). An increase in the sweep time gives a longer averaging time per pixel and thus stabilizes the measurement result. The R&S ESRP automatically corrects the measurement result of the noise marker display depending on the selected detector (+1.05 dB for the average detector, 0 dB for the RMS detector). It is assumed that the video bandwidth is set to at least three times the resolution bandwidth. While the average or RMS detector is being switched on, the R&S ESRP sets the video bandwidth to a suitable value.

The Pos Peak, Neg Peak, Auto Peak and Quasi Peak detectors are not suitable for measuring noise power density.

Determining the noise figure

The noise figure of amplifiers or of the R&S ESRP alone can be obtained from the noise power display. Based on the known thermal noise power of a 50 Ω resistor at

room temperature (-174 dBm (1Hz)) and the measured noise power P_{noise} the noise figure (NF) is obtained as follows:

$$\text{NF} = P_{\text{noise}} + 174 - g,$$

where g = gain of DUT in dB

Example:

The measured internal noise power of the R&S ESRP at an attenuation of 0 dB is found to be -143 dBm/1 Hz. The noise figure of the R&S ESRP is obtained as follows

$$\text{NF} = -143 + 174 = 31 \text{ dB}$$



If noise power is measured at the output of an amplifier, for example, the sum of the internal noise power and the noise power at the output of the DUT is measured. The noise power of the DUT can be obtained by subtracting the internal noise power from the total power (subtraction of linear noise powers). By means of the following diagram, the noise level of the DUT can be estimated from the level difference between the total and the internal noise level.

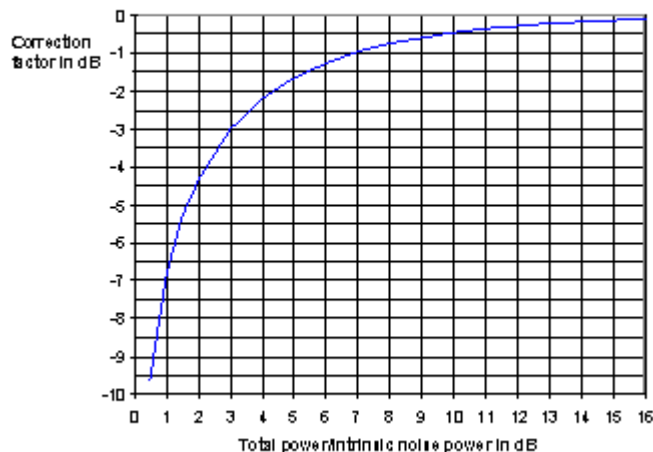


Fig. 4-29: Correction factor for measured noise power as a function of the ratio of total power to the intrinsic noise power of the signal analyzer

4.4.5.2 Measurement of Noise Power within a Transmission Channel

Noise in any bandwidth can be measured with the channel power measurement functions. Thus the noise power in a communication channel can be determined, for example. If the noise spectrum within the channel bandwidth is flat, the noise marker from the previous example can be used to determine the noise power in the channel by considering the channel bandwidth. If, however, phase noise and noise that normally increases towards the carrier is dominant in the channel to be measured, or if there are

discrete spurious signals in the channel, the channel power measurement method must be used to obtain correct measurement results.

Measurement Example – Measuring the Intrinsic Noise of the R&S ESRP at 1 GHz in a 1.23 MHz Channel Bandwidth with the Channel Power Function

Test setup:

- Leave the RF input of the R&S ESRP open-circuited or terminate it with 50 Ω .

Procedure:

1. Set the R&S ESRP to its default state by pressing the PRESET key.
The R&S ESRP is in its default state.
2. Set the center frequency to 1 GHz and the span to 1 MHz.
3. To obtain maximum sensitivity, set RF attenuation on the R&S ESRP to 0 dB.
4. Set the "Sweep Type" to "Sweep".
5. Switch on and configure the channel power measurement.
 - a) Press the MEAS key.
 - b) Press the "Ch Power/ACLR" softkey.
The R&S ESRP activates the channel or adjacent channel power measurement according to the currently set configuration.
 - c) Press the "CP/ACLR Settings" softkey.
 - d) Press the "Channel Settings" softkey.
 - e) Press the "Channel Bandwidth" softkey and enter 1.23 MHz.
The R&S ESRP displays the 1.23 MHz channel as two vertical lines which are symmetrical to the center frequency.

- f) Press the "Adjust Settings" softkey.

The settings for the frequency span, the bandwidth (RBW and VBW) and the detector are automatically set to the optimum values required for the measurement.

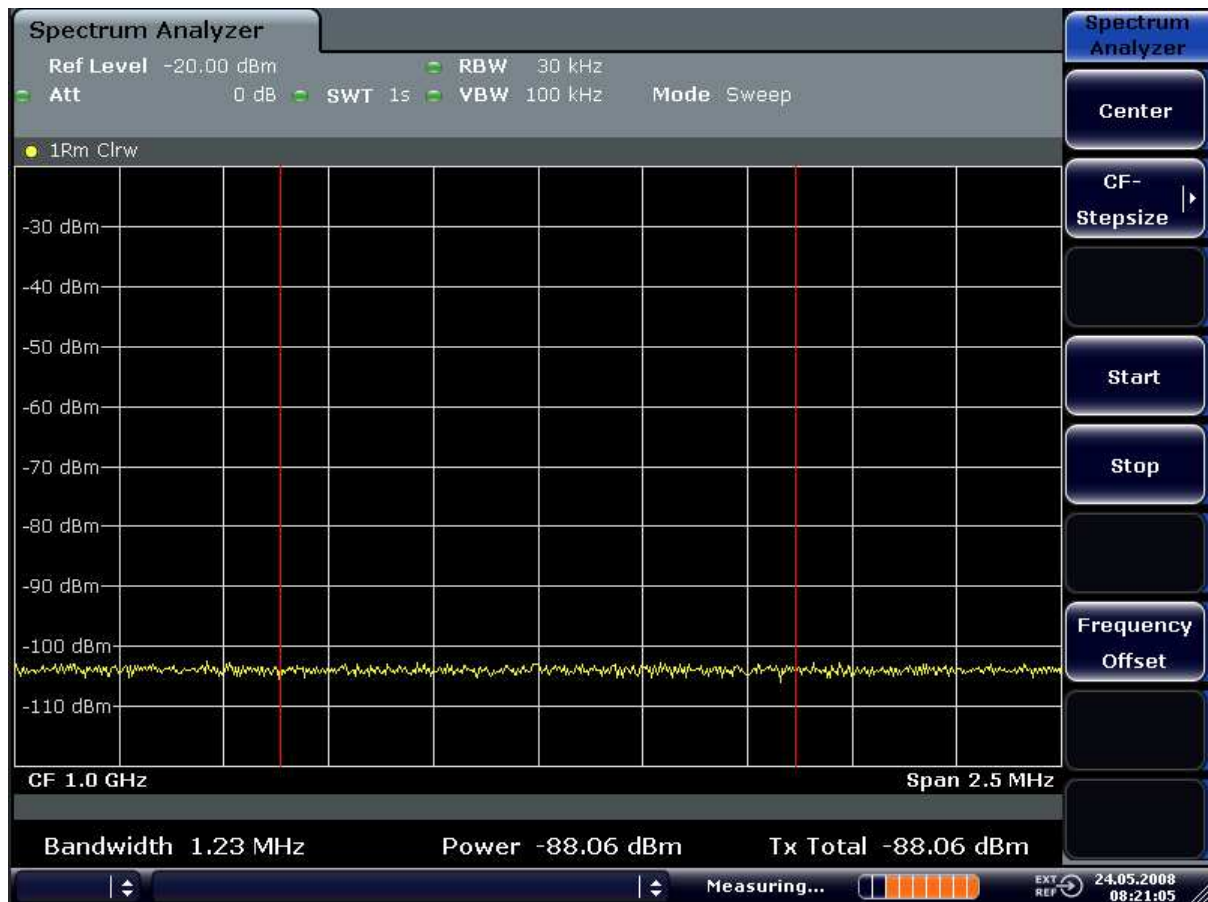


Fig. 4-30: Measurement of the R&S ESRP's intrinsic noise power in a 1.23 MHz channel bandwidth.

 
6. Stabilize the measurement result by increasing the sweep time.
In the "Ch Power ACLR" menu, press the "Sweep Time" softkey and enter 1 s.
The trace becomes much smoother because of the RMS detector and the channel power measurement display is much more stable.

4.4.5.3 Measuring Phase Noise

The R&S ESRP has an easy-to-use marker function for phase noise measurements. This marker function indicates the phase noise of an RF oscillator at any carrier in dBc in a bandwidth of 1 Hz.

Measurement Example – Measuring the Phase Noise of a Signal Generator at a Carrier Offset of 10 kHz

Test setup:



Signal generator settings (e.g. R&S ESRP SMU):

Frequency:	100 MHz
Level:	0 dBm

Procedure:

1. Set the R&S ESRP to its default state by pressing the PRESET key.
R&S ESRP is in its default state.
2. Set the center frequency to 100 MHz and the span to 50 kHz.
 - a) Press the FREQ key and enter "100 MHz".
 - b) Press the SPAN key and enter "50 kHz".
3. Set the R&S ESRP's reference level to 0 dBm (=signal generator level) by pressing the AMPT key and enter "0 dBm".
4. Enable phase noise measurement.
 - a) Press the MKR FUNC key.
 - b) Press the "Phase Noise" softkey.
The R&S ESRP activates phase noise measurement. Marker 1 (=main marker) and marker 2 (= delta marker) are positioned on the signal maximum. The position of the marker is the reference (level and frequency) for the phase noise measurement. A horizontal line represents the level of the reference point and a vertical line the frequency of the reference point. The dialog box for the delta marker is displayed so that the frequency offset at which the phase noise is to be measured can be entered directly.
5. Set the frequency offset to 10 kHz for determining phase noise by entering "10 kHz".
The R&S ESRP displays the phase noise at a frequency offset of 10 kHz. The magnitude of the phase noise in dBc/Hz is displayed in the delta marker output field at the top right of the screen (Phn2).
6. Stabilize the measurement result by activating trace averaging.

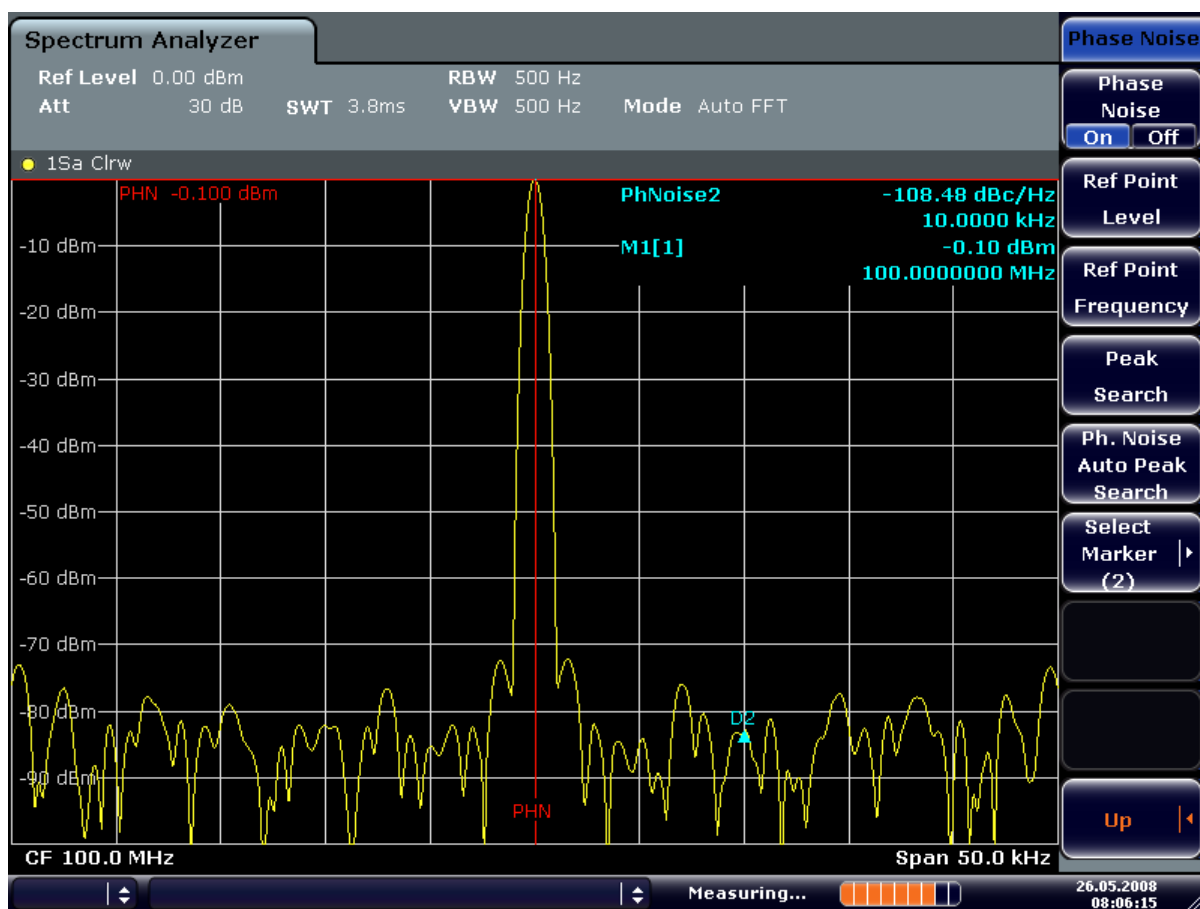


Fig. 4-31: Measuring phase noise with the phase-noise marker function

The frequency offset can be varied by moving the marker with the rotary knob or by entering a new frequency offset as a number.

4.4.6 Measurements on Modulated Signals

4.4.6.1 Measuring Channel Power and Adjacent Channel Power

Measuring channel power and adjacent channel power is one of the most important tasks in the field of digital transmission for a signal analyzer with the necessary test routines. While, theoretically, channel power could be measured at highest accuracy with a power meter, its low selectivity means that it is not suitable for measuring adjacent channel power as an absolute value or relative to the transmit channel power. The power in the adjacent channels can only be measured with a selective power meter.

A signal analyzer cannot be classified as a true power meter, because it displays the IF envelope voltage. However, it is calibrated such as to correctly display the power of a pure sine wave signal irrespective of the selected detector. This calibration cannot be applied for non-sinusoidal signals. Assuming that the digitally modulated signal has a Gaussian amplitude distribution, the signal power within the selected resolution band-

width can be obtained using correction factors. These correction factors are normally used by the signal analyzer's internal power measurement routines in order to determine the signal power from IF envelope measurements. These factors apply if and only if the assumption of a Gaussian amplitude distribution is correct.

Apart from this common method, the R&S ESRP also has a true power detector, i.e. an RMS detector. It correctly displays the power of the test signal within the selected resolution bandwidth irrespective of the amplitude distribution, without additional correction factors being required. The absolute measurement uncertainty of the FSV is < 1.5 dB and a relative measurement uncertainty of < 0.5 dB (each with a confidence level of 95 %).

There are two possible methods for measuring channel and adjacent channel power with a signal analyzer:

1. IBW method (Integration **B**andwidth **M**ethod)

The signal analyzer measures with a resolution bandwidth that is less than the channel bandwidth and integrates the level values of the trace versus the channel bandwidth. This method is described in ["Measurement Example – Measuring the Intrinsic Noise of the R&S ESRP at 1 GHz in a 1.23 MHz Channel Bandwidth with the Channel Power Function"](#) on page 317.

2. Using a channel filter

For a detailed description, refer to the following section.

 
Measurements using a channel filter

In this case, the signal analyzer makes zero span measurements using an IF filter that corresponds to the channel bandwidth. The power is measured at the output of the IF filter. Until now, this method has not been used for signal analyzers, because channel filters were not available and the resolution bandwidths, optimized for the sweep, did not have a sufficient selectivity. The method was reserved for special receivers optimized for a particular transmission method.

The R&S ESRP has test routines for simple channel and adjacent channel power measurements. These routines give quick results without any complex or tedious setting procedures.

Measurement Example 1 – ACPR Measurement on an CDMA2000 Signal

Test setup:



Signal generator settings (e.g. R&S ESRP SMU):

Frequency:	850 MHz
Level:	0 dBm
Modulation:	CDMA2000

Procedure:

1. Set the R&S ESRP to its default state by pressing the PRESET key.
The R&S ESRP is in its default state.
2. Press the FREQ key and enter "850 MHz" as the center frequency.
3. Press the SPAN key and enter "4 MHz".
4. Set the reference level to +10 dBm by pressing the AMPT key and enter "10 dBm".
5. Configure the adjacent channel power for the CDMA2000 standard (more precisely: CDMA2000 1X).
 - a) Press the MEAS key.
 - b) Press the "Ch Power ACLR" softkey.
 - c) Press the "CP/ACLR Standard" softkey.
 - d) In the standards list, mark *CDMA2000*.

The R&S ESRP sets the channel configuration according to the 2000 standard with 2 adjacent channels above and 2 below the transmit channel. The spectrum is displayed in the upper part of the screen, the numeric values of the results and the channel configuration in the lower part of the screen. The various channels are represented by vertical lines on the graph.

The frequency span, resolution bandwidth, video bandwidth and detector are selected automatically to give correct results. To obtain stable results – especially in the adjacent channels (30 kHz bandwidth) which are narrow in comparison with the transmission channel bandwidth (1.23 MHz) – the RMS detector is used.

6. Set the optimal reference level and RF attenuation for the applied signal level by pressing the "Adjust Ref Level" softkey.
7. Activate "Fast ACP" mode to increase the repeatability of results by pressing the "Fast ACP" softkey (for details see below).

The R&S ESRP sets the optimal RF attenuation and the reference level based on the transmission channel power to obtain the maximum dynamic range. The [figure 4-32](#) shows the result of the measurement.


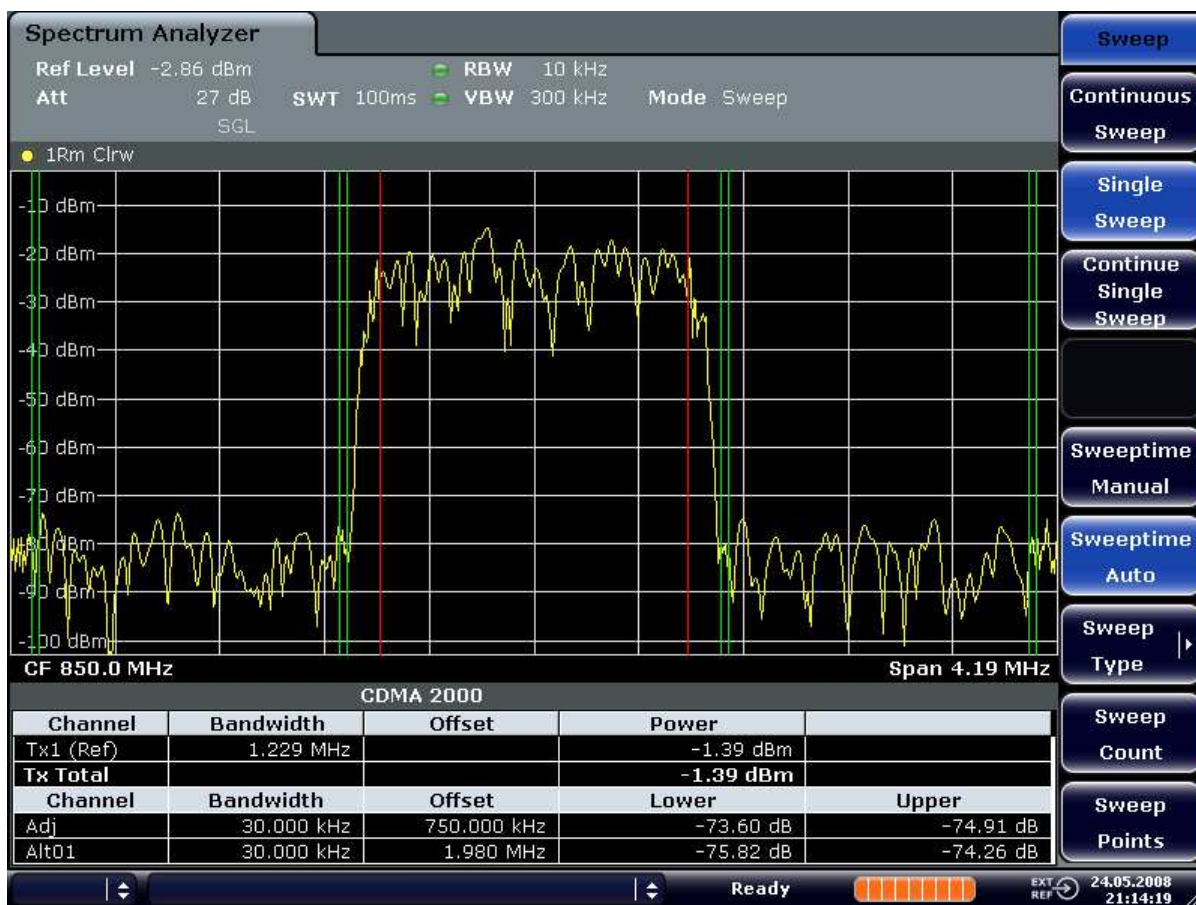


Fig. 4-32: Adjacent channel power measurement on a CDMA2000 1x signal

Measurement Example 2 – Measuring Adjacent Channel Power of a W-CDMA Uplink Signal

 Test setup:



Signal generator settings (e.g. R&S ESRP SMU):

Frequency:	1950 MHz
Level:	4 dBm
Modulation:	3 GPP W-CDMA Reverse Link

Procedure:

1. Set the R&S ESRP to its default state by pressing the PRESET key.

The R&S ESRP is in its default state.

2. Set the center frequency to 1950 MHz by pressing the FREQ key and entering "1950 MHz".
3. Switch on the ACLR measurement for W-CDMA.
 - a) Press the MEAS key.
 - b) Press the "Ch Power ACLR" softkey.
 - c) Press the "CP/ACLR Standard" softkey.
 - d) In the standards list, select *W-CDMA 3GPP REV*.

The R&S ESRP sets the channel configuration to the 3GPP W-CDMA standard for mobiles with two adjacent channels above and below the transmit channel. The frequency span, the resolution and video bandwidth and the detector are automatically set to the correct values. The spectrum is displayed in the upper part of the screen and the channel power, the level ratios of the adjacent channel powers and the channel configuration in the lower part of the screen. The individual channels are displayed as vertical lines on the graph.

4. Set the optimum reference level and the RF attenuation for the applied signal level.
 - a) Press the "Adjust Ref Level" softkey.

The R&S ESRP sets the optimum RF attenuation and the reference level for the power in the transmission channel to obtain the maximum dynamic range. The following figure shows the result of the measurement.

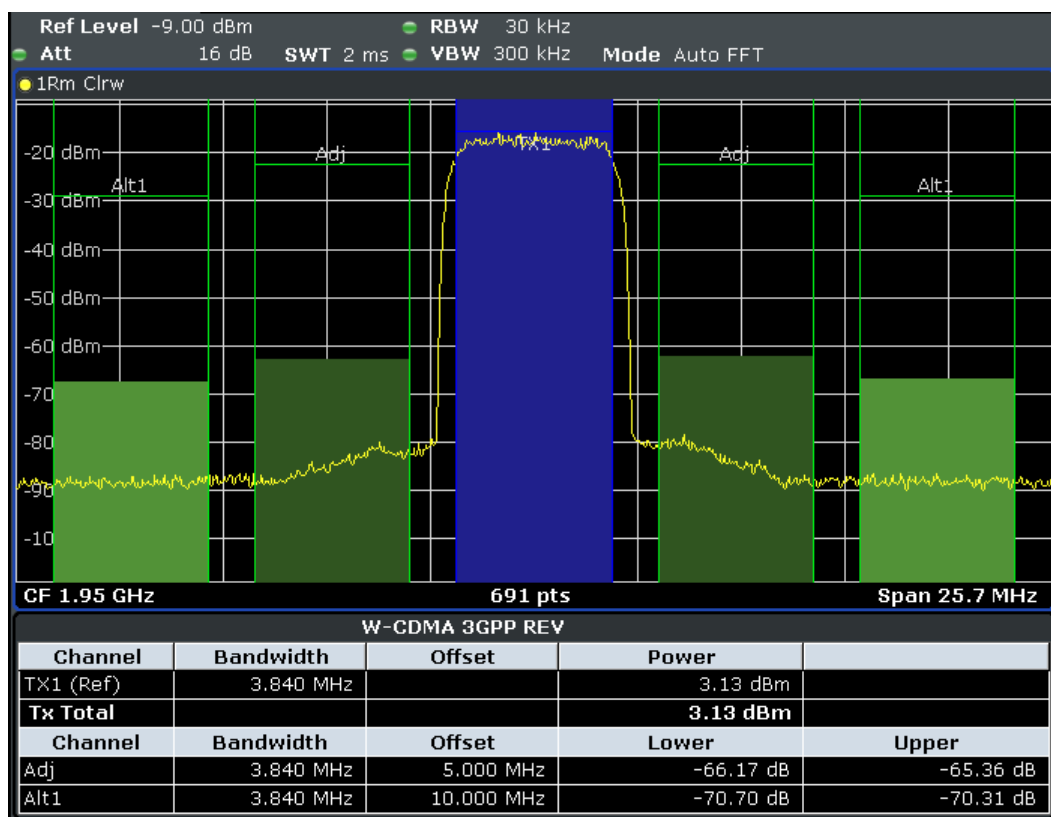


Fig. 4-33: Measuring the relative adjacent channel power on a W-CDMA uplink signal

5. Set up the adjacent channel power measurement with the fast ACLR mode.

- a) Set "Fast ACLR" softkey to "On".
- b) Press the "Adjust Ref Level" softkey.

The R&S ESRP measures the power of the individual channels with zero span. A root raised cosine filter with the parameters $\alpha = 0.22$ and chip rate 3.84 Mcps (= receive filter for 3GPP W-CDMA) is used as channel filter.

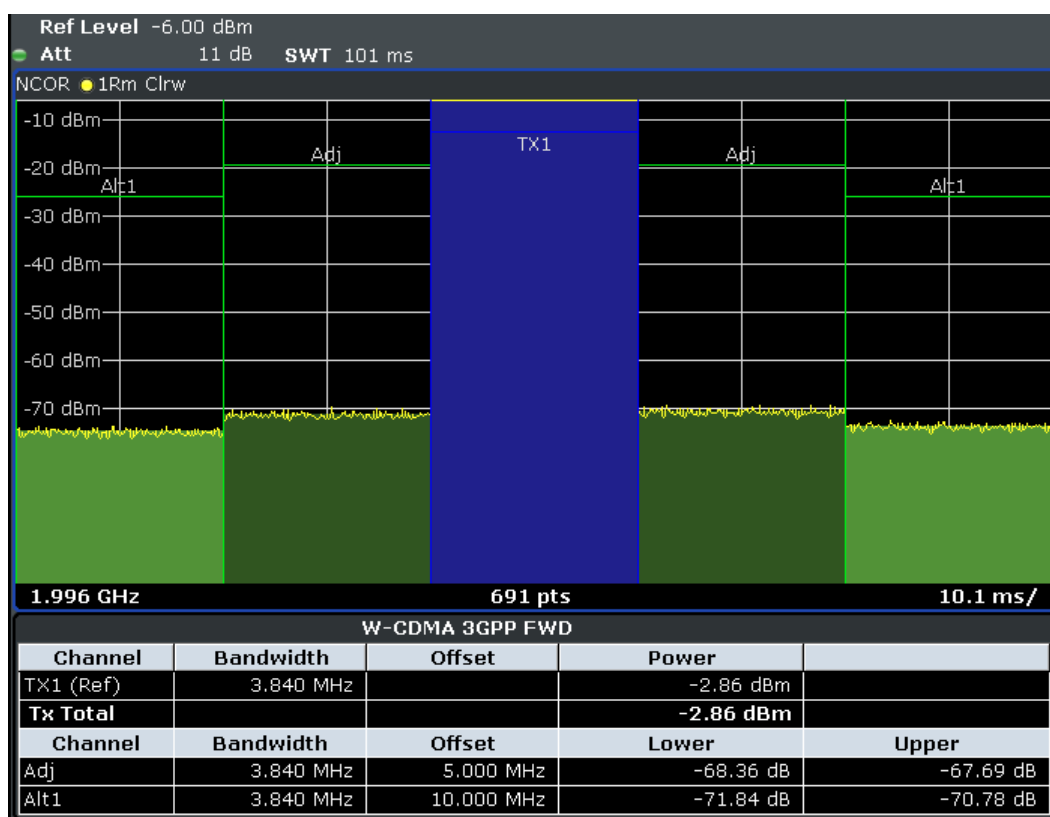


Fig. 4-34: Measuring the adjacent channel power of a W-CDMA signal with the fast ACLR mode

Optimum Level Setting for ACP Measurements on W-CDMA Signals

The dynamic range for ACPR measurements is limited by the thermal noise floor, the phase noise and the intermodulation (spectral regrowth) of the signal analyzer. The power values produced by the R&S ESRP due to these factors accumulate linearly. They depend on the applied level at the input mixer. The three factors are shown in the figure below for the adjacent channel (5 MHz carrier offset).

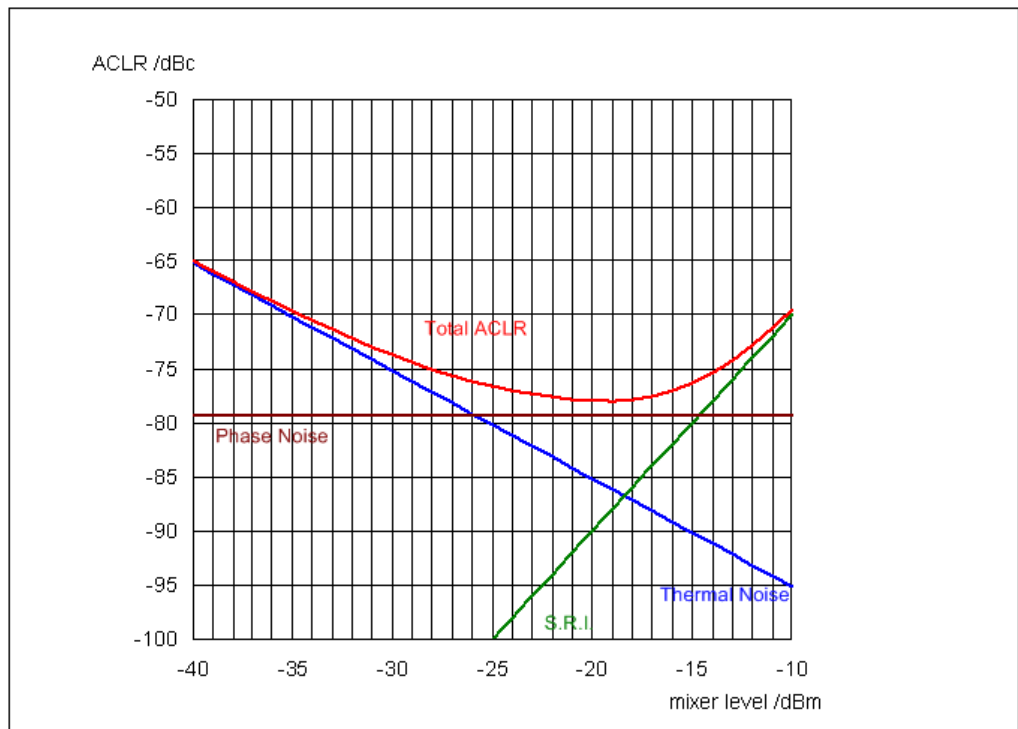


Fig. 4-35: The R&S ESRP's dynamic range for adjacent channel power measurements on W-CDMA uplink signals is a function of the mixer level.

The level of the W-CDMA signal at the input mixer is shown on the horizontal axis, i.e. the measured signal level minus the selected RF attenuation. The individual components which contribute to the power in the adjacent channel and the resulting relative level (total ACPR) in the adjacent channel are displayed on the vertical axis. The optimum mixer level is -18 dBm. The relative adjacent channel power (ACPR) at an optimum mixer level is -77 dBc. Since, at a given signal level, the mixer level is set in 5 dB steps with the 5 dB RF attenuator, the optimum 10 dB range spreads from -17 dBm to -22 dBm. In this range, the obtainable dynamic range with noise correction is 77 dB.

To set the attenuation parameter manually, the following method is recommended:

- Set the RF attenuation so that the mixer level (= measured channel power – RF attenuation) is between -16 dBm and -22 dBm.

This method is automated with the "Adjust Ref Level" function. Especially in remote control mode, e.g. in production environments, it is best to correctly set the attenuation parameters prior to the measurement, as the time required for automatic setting can be saved.



To measure the R&S ESRP's intrinsic dynamic range for W-CDMA adjacent channel power measurements, a filter which suppresses the adjacent channel power is required at the output of the transmitter. A SAW filter with a bandwidth of 4 MHz, for example, can be used.

4.4.6.2 Amplitude Distribution Measurements

If modulation types are used that do not have a constant zero span envelope, the transmitter has to handle peak amplitudes that are greater than the average power. This includes all modulation types that involve amplitude modulation –QPSK for example. CDMA transmission modes in particular may have power peaks that are large compared to the average power.

For signals of this kind, the transmitter must provide large reserves for the peak power to prevent signal compression and thus an increase of the bit error rate at the receiver.

The peak power or the crest factor of a signal is therefore an important transmitter design criterion. The crest factor is defined as the peak power/mean power ratio or, logarithmically, as the peak level minus the average level of the signal.

To reduce power consumption and cut costs, transmitters are not designed for the largest power that could ever occur, but for a power that has a specified probability of being exceeded (e.g. 0.01 %).

To measure the amplitude distribution, the R&S ESRP has simple measurement functions to determine both the APD = Amplitude Probability Distribution and CCDF = Complementary Cumulative Distribution Function.

In the APD display mode, the probability of occurrence of a certain level is plotted against the level.

In the CCDF display mode, the probability that the mean signal power will be exceeded is shown in percent.

Measurement Example – Measuring the APD and CCDF of White Noise Generated by the R&S ESRP

1. Set the R&S ESRP to its default state by pressing the PRESET key.
The R&S ESRP is in its default state.
2. Configure the R&S ESRP for APD measurement
 - a) Press the AMPT key and enter "-60 dBm".
The R&S ESRP's intrinsic noise is displayed at the top of the screen.
 - b) Press the MEAS key.
 - c) Press the "More" softkey.
 - d) Press the "APD" softkey.
The R&S ESRP sets the frequency span to 0 Hz and measures the amplitude probability distribution (APD). The number of uncorrelated level measurements used for the measurement is 100000. The mean power and the peak power are displayed in dBm. The crest factor (peak power – mean power) is output as well.

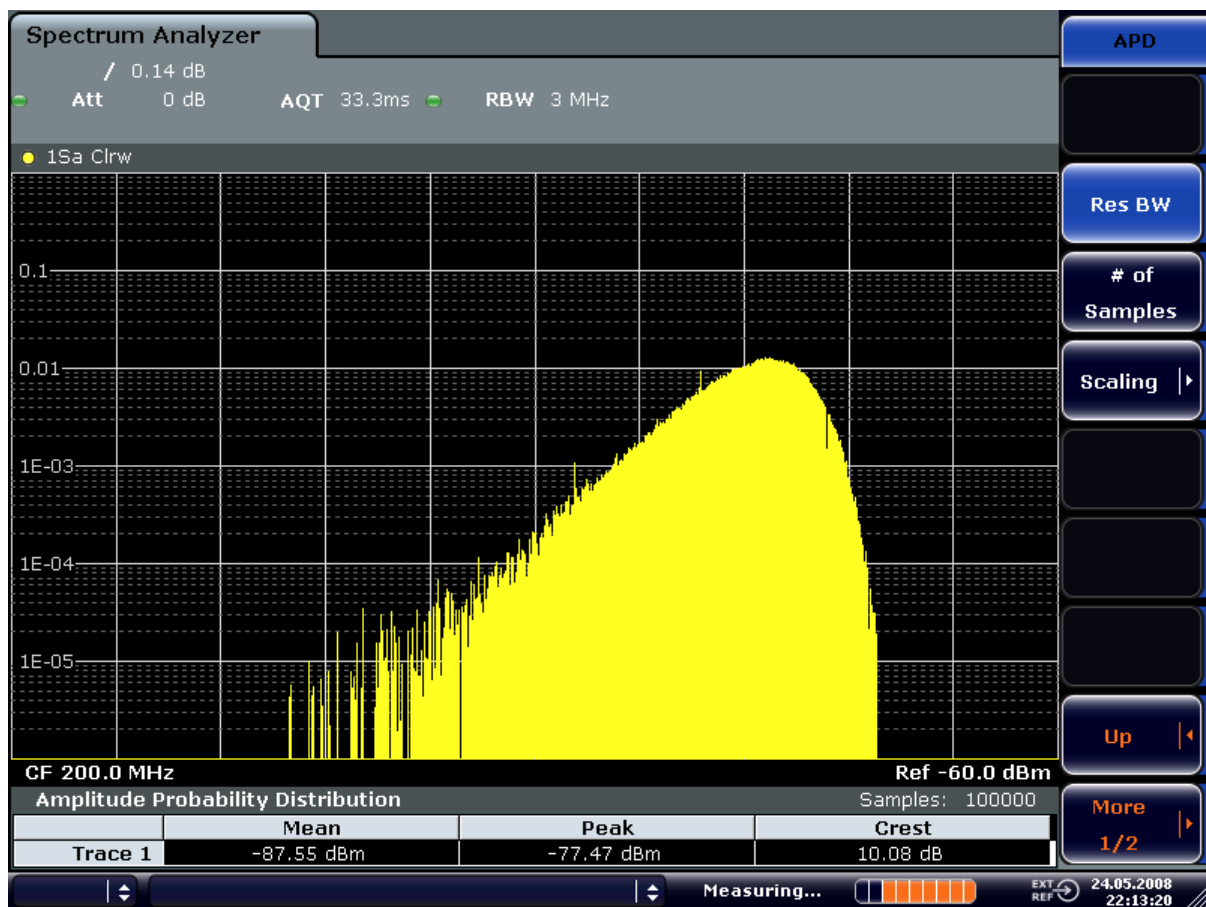


Fig. 4-36: Amplitude probability distribution of white noise

3. Switch to the CCDF display mode.
 - a) Press the "UP" key.
 - b) Press the "CCDF" softkey.
 The CCDF display mode is switched on.

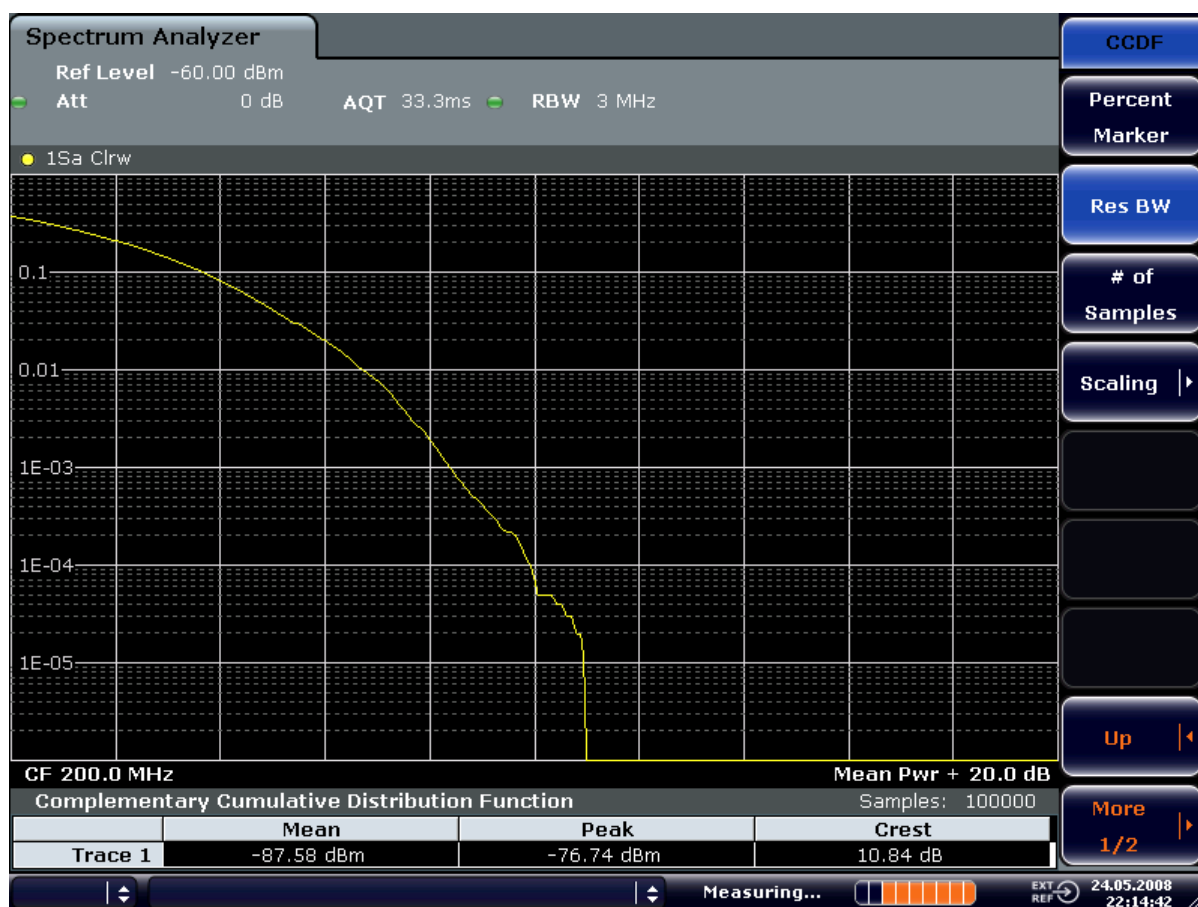


Fig. 4-37: CCDF of white noise

The CCDF trace indicates the probability that a level will exceed the mean power. The level above the mean power is plotted along the x-axis of the graph. The origin of the axis corresponds to the mean power level. The probability that a level will be exceeded is plotted along the y-axis.

5 I/Q Analyzer

The I/Q Analyzer provides functions to capture, visualize and evaluate I/Q data. These functions include:

- capturing data from the RF input
- displaying I/Q data in various result types, e.g. separate Real/Imag diagrams or as an I/Q-vector

Menu and softkey description

The "I/Q Analyzer" menu is displayed when you select the "I/Q Analyzer" softkey in the MODE menu. The same menu is displayed when you press the MEAS or MEAS CONFIG keys in "I/Q Analyzer" mode. For details see [chapter 5.1, "Softkeys and Parameters of the I/Q Analyzer Menu"](#), on page 331.

The "Amplitude" menu, which is displayed when you select the AMPT key, is described in see [chapter 5.2, "Softkeys of the Amplitude Menu in I/Q Analyzer Mode"](#), on page 336.

The "Input/Output" menu, which is displayed when you select the INPUT/OUTPUT key, as well as the "Save/Recall" menu (SAVE/RCL key) contain the same functions in I/Q Analyzer mode as in "Spectrum" mode (see [chapter 4.2.9, "Input/Output Configuration – INPUT/OUTPUT Key"](#), on page 256).

The "Marker" menu is identical to the one in Spectrum mode for display modes "Magnitude", "Real/Imag" and "Spectrum" (except for "Marker Zoom"), see ["Display Config"](#) on page 332. For the other display modes this menu is not available.

The "Marker To" menu is identical to the one in Spectrum mode. For the "I/Q" display mode, an additional function is available, see [chapter 5.3, "Softkeys of the Marker To Menu in I/Q Analyzer Mode"](#), on page 340.

The "Trace" menu is identical to the one in Spectrum mode, except in "I/Q Vector" display mode. In this case, only 1 trace is available and no detector can be selected (see [chapter 4.3.1.1, "Softkeys of the Trace Menu"](#), on page 261).

The "Trigger" menu, which is displayed when you select the TRIG key, is described in see [chapter 5.4, "Softkeys of the Trigger Menu in I/Q Analyzer Mode"](#), on page 340.

The "Span", "BW", and "Lines" menus are not available in this mode. All other menus are identical to those described for "Spectrum" mode (see [chapter 4.2, "Configuration"](#), on page 215 and [chapter 4.3, "Analysis"](#), on page 260).

Remote Control

Measurements with the I/Q Analyzer can also be performed via remote control.

For more information see [chapter 9.5, "Remote Commands in I/Q Analyzer Mode"](#), on page 691.

Further information

- Some general information on working with I/Q data can be found in [chapter 5.5, "Working with I/Q Data"](#), on page 344.

5.1 Softkeys and Parameters of the I/Q Analyzer Menu

This section describes the softkeys and parameters of the "I/Q Analyzer" submenu which is displayed when you select the "I/Q Analyzer" softkey in the MODE menu. The same menu is displayed when you press the MEAS or MEAS CONFIG keys in "I/Q Analyzer" mode.

I/Q Analyzer.....	331
L Signal Source.....	331
L Input Path.....	331
L Level.....	332
L Reference Level.....	332
L Preamp On/Off.....	332
L Data Acquisition.....	332
L Sample Rate.....	332
L Filter BW.....	332
L Meas Time.....	332
L Record Length.....	332
L Display Config.....	332
L C/N, C/No.....	334
L C/N.....	335
L C/No.....	335
L Channel Bandwidth	335
L Adjust Settings	335

I/Q Analyzer

Starts the I/Q Analyzer evaluation mode and opens the submenu for the I/Q analyzer, which allows you to configure and display measurements of I/Q data, e.g. digital base-band signals.

Remote command:

Starting I/Q Analyzer:

[TRACe<n>: IQ\[:STATe\]](#) on page 701

Selecting evaluation mode:

[TRACe<n>: IQ:EVAL](#) on page 701

Selecting the I/Q Analyzer display configuration

[CALCulate<n>: FORMat](#) on page 691

Signal Source ← I/Q Analyzer

Opens a dialog box to select the signal source.

Input Path ← Signal Source ← I/Q Analyzer

The input path is always "RF Radio Frequency".

Level ← I/Q Analyzer

Opens a dialog box to define the level settings.

Reference Level ← Level ← I/Q Analyzer

Specifies the reference level for the I/Q measurement.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RVALue` on page 692

Preamplifier On/Off ← Level ← I/Q Analyzer

Switches the preamplifier on and off.

Remote command:

`INPut:GAIN:STATe` on page 486

Data Acquisition ← I/Q Analyzer

Opens a dialog box to configure data acquisition in I/Q Analyzer mode.

Sample Rate ← Data Acquisition ← I/Q Analyzer

Defines the I/Q data sample rate of the R&S ESRP.

Remote command:

`TRACe<n>:IQ:SRATe` on page 695

Filter BW ← Data Acquisition ← I/Q Analyzer

Displays the flat, usable bandwidth of the final I/Q data.

Remote command:

`TRACe<n>:IQ:BWIDth` on page 693

Meas Time ← Data Acquisition ← I/Q Analyzer

Defines the I/Q acquisition time. By default, the measurement time is calculated as the number of I/Q samples ("Record Length") divided by the sample rate. If you change the measurement time, the [Record Length](#) is automatically changed, as well.

For details on the maximum number of samples see also [chapter 5.5, "Working with I/Q Data"](#), on page 344.

Remote command:

`[SENSe:]SWEep:TIME` on page 641

Record Length ← Data Acquisition ← I/Q Analyzer

Defines the number of I/Q samples to record. By default, the number of sweep points is used. The record length is calculated as the measurement time multiplied by the sample rate. If you change the record length, the [Meas Time](#) is automatically changed, as well.

Remote command:


`TRACe<n>:IQ:RLENgth` on page 693

`TRACe<n>:IQ:SET` on page 693


Display Config ← I/Q Analyzer

Opens a selection list to specify the result display configuration. The following displays are available:

"Magnitude" Shows the values in time domain

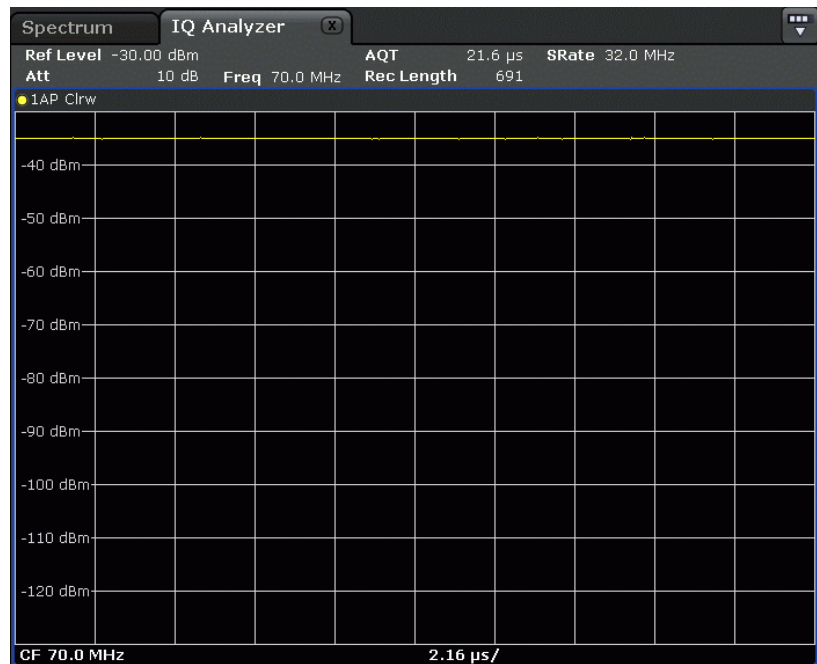


"Spectrum" Displays the frequency spectrum of the captured I/Q samples.

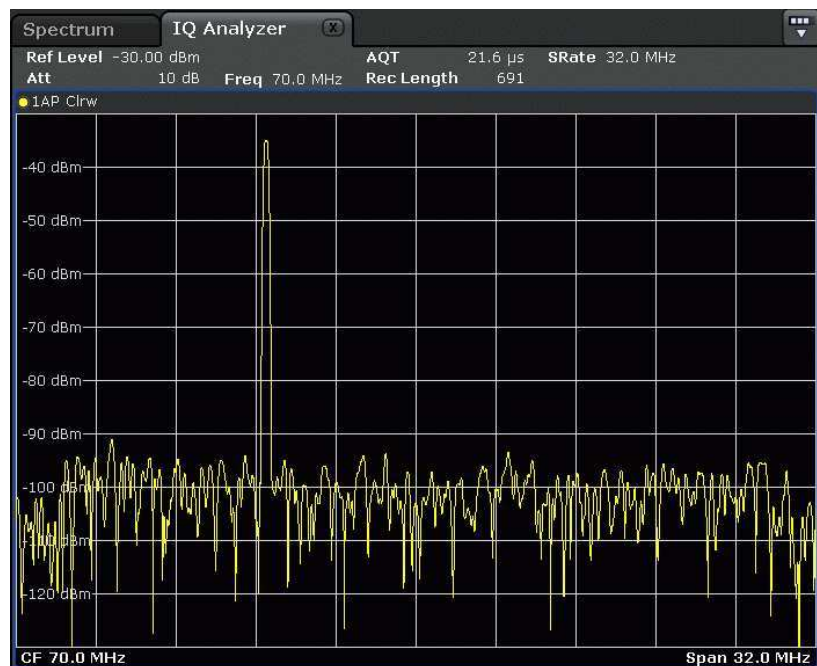


"I/Q-Vector"

Displays the captured samples in an I/Q-plot. The samples are connected by a line.

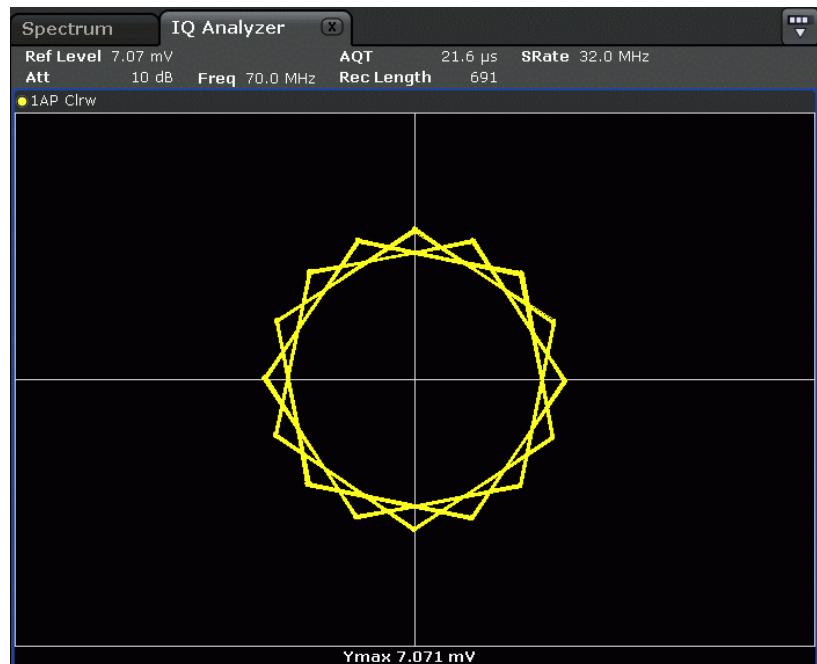

"Real/Imag (I/Q)"

Displays the I and Q values in separate diagrams.

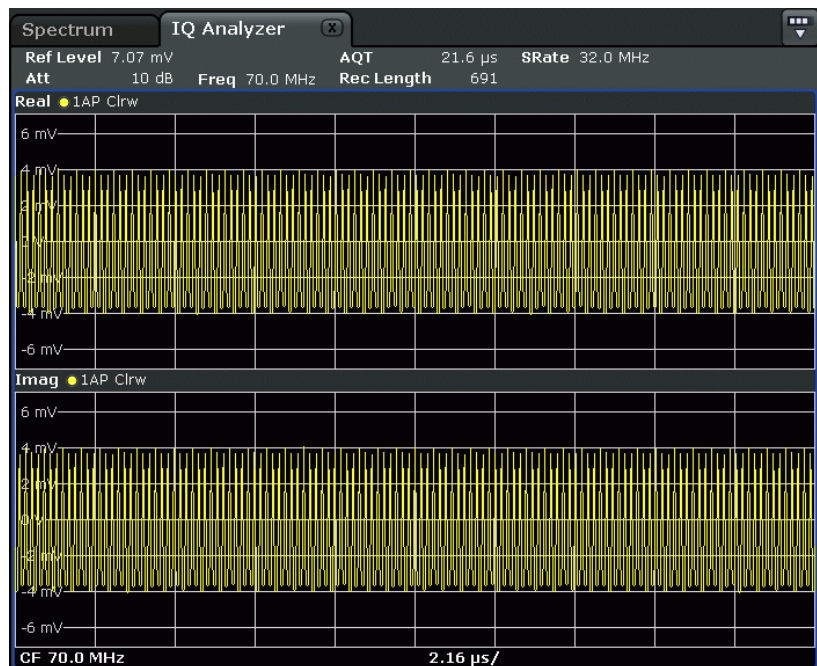

Remote command:

[CALCulate<n>:FORMat](#) on page 691

C/N, C/No ← I/Q Analyzer

Opens a submenu to configure the carrier/noise ratio measurement. Measurements without (C/N) and measurements with reference to the bandwidth (C/No) are possible.

Carrier-to-noise measurements are not available in zero span mode.

Note: Carrier-to-noise measurements are also available in the I/Q Analyzer, but only for **Spectrum** displays (see ["Display Config"](#) on page 332).

For general information on performing carrier-to-noise ratio measurements see [chapter 4.1.1.3, "Measuring the Carrier-to-Noise Ratio"](#), on page 127.

C/N ← C/N, C/No ← I/Q Analyzer

Switches the measurement of the carrier/noise ratio on or off. If no marker is active, marker 1 is activated.

The measurement is performed on the trace that marker 1 is assigned to. To shift marker 1 and measure another trace, use the [Marker to Trace](#) softkey in the "Marker To" menu.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:POWER:SElect](#) on page 533

[CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult?](#) on page 534

[CALCulate<n>:MARKer<m>:FUNCTION:POWER\[:STATe\]](#) on page 536

C/No ← C/N, C/No ← I/Q Analyzer

Switches the measurement of the carrier/noise ratio with reference to a 1 Hz bandwidth on or off. If no marker is active, marker 1 is activated.

The measurement is performed on the trace that marker 1 is assigned to. To shift marker 1 and measure another trace, use the [Marker to Trace](#) softkey in the "Marker To" menu.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:POWER:SElect](#) on page 533

[CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult?](#) on page 534

[CALCulate<n>:MARKer<m>:FUNCTION:POWER\[:STATe\]](#) on page 536

Channel Bandwidth ← C/N, C/No ← I/Q Analyzer

Opens an edit dialog box to enter the measurement channel bandwidth for each channel.

The default setting is 14 kHz.

Note that in the I/Q Analyzer the channel bandwidth does not change the measurement span or sampling rate; it merely defines the range for the carrier-to-noise analysis.

Remote command:

[\[SENSe:\] POWER:ACHannel:ACPairs](#) on page 542

Adjust Settings ← C/N, C/No ← I/Q Analyzer

Enables the RMS detector (see also [chapter 4.3.1.5, "Detector Overview"](#), on page 272) and adjusts the span to the selected channel bandwidth according to:

"4 x channel bandwidth + measurement margin"

The adjustment is performed once; if necessary, the setting can be changed later on.

Note: in the I/Q Analyzer, this function is not available. The channel bandwidth defines the range for the carrier-to-noise analysis.

Remote command:

[SENSe:] POWER:ACHannel:PRESet on page 538

5.2 Softkeys of the Amplitude Menu in I/Q Analyzer Mode

In I/Q Analyzer mode, the "Amplitude" menu, which is displayed when you select the AMPT key, contains the following functions.



If the display configuration for the I/Q Analyzer is set to "I/Q Vector" or "Real/Imag (I/Q)", the **Range** and **Unit** functions are not available.

Ref Level.....	336
Range.....	336
L Range Log 100 dB.....	337
L Range Log 50 dB.....	337
L Range Log 10 dB.....	337
L Range Log 5 dB.....	337
L Range Log 1 dB.....	338
L Range Log Manual.....	338
L Range Linear %.....	338
L Range Lin. Unit.....	338
Unit.....	338
Y-Axis Max.....	339
Ref Level Offset.....	339
Ref Level Position.....	339
Grid Abs/Rel	339

Ref Level

Opens an edit dialog box to enter the reference level in the current unit (dBm, dBμV, etc).

The reference level is the maximum value the AD converter can handle without distortion of the measured value. Signal levels above this value will not be measured correctly, which is indicated by the "IFOVL" status display.

Remote command:

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel on page 651

Range

Opens a submenu to define the display range of the level axis.

- Range Log 100 dB
- Range Log 50 dB
- Range Log 10 dB
- Range Log 5 dB
- Range Log 1 dB

- [Range Log Manual](#)
- [Range Linear %](#)
- [Range Lin. Unit](#)

Range Log 100 dB ← Range

Sets the level display range to 100 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Display range:

DISP:WIND:TRAC:Y 100DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 650

Range Log 50 dB ← Range

Sets the level display range to 50 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Display range:

DISP:WIND:TRAC:Y 50DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 650

Range Log 10 dB ← Range

Sets the level display range to 10 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Display range:

DISP:WIND:TRAC:Y 10DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 650

Range Log 5 dB ← Range

Sets the level display range to 5 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Display range:

DISP:WIND:TRAC:Y 5DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 650

Range Log 1 dB ← Range

Sets the level display range to 1 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Display range:

DISP:WIND:TRAC:Y 1DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 650

Range Log Manual ← Range

Opens an edit dialog box to define the display range of a logarithmic level axis manually.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Display range:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 650

Range Linear % ← Range

Selects linear scaling for the level axis in %.

The grid is divided into decadal sections.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in % referenced to the voltage value at the position of marker 1. This is the default setting for linear scaling.

Remote command:

DISP:TRAC:Y:SPAC LIN, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Range Lin. Unit ← Range

Selects linear scaling in dB for the level display range, i.e. the horizontal lines are labeled in dB.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in dB referenced to the power value at the position of marker 1.

Remote command:

DISP:TRAC:Y:SPAC LDB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484

Unit

Opens the "Unit" submenu to select the unit for the level axis.

The default setting in spectrum mode is dBm.

If a transducer is switched on, the softkey is not available.

In general, the signal analyzer measures the signal voltage at the RF input. The level display is calibrated in RMS values of an unmodulated sine wave signal. In the default state, the level is displayed at a power of 1 mW (= dBm). Via the known input impedance (50 Ω or 75 Ω), conversion to other units is possible. The following units are available and directly convertible:

- dBm
- dBmV
- dB μ V
- dB μ A
- dBpW
- Volt
- Ampere
- Watt

Remote command:

`CALCulate<n>:UNIT:POWer` on page 650

Y-Axis Max

Opens an edit dialog box to specify the maximum value of the y-axis in either direction (in Volts). Thus, the y-axis scale starts at -<Y-AxisMax> and ends at +<Y-AxisMax>.

This command is only available if the display configuration for the I/Q Analyzer is set to "I/Q Vector" or "Real/Imag (I/Q)", see "Display Config" on page 332.

Ref Level Offset

Opens an edit dialog box to enter the arithmetic level offset. This offset is added to the measured level irrespective of the selected unit. The scaling of the y-axis is changed accordingly. The setting range is ± 200 dB in 0.1 dB steps.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet` on page 651

Ref Level Position

Opens an edit dialog box to enter the reference level position, i.e. the position of the maximum AD converter value on the level axis. The setting range is from -200 to +200 %, 0 % corresponding to the lower and 100 % to the upper limit of the diagram.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition` on page 651

Grid Abs/Rel

Switches between absolute and relative scaling of the level axis (not available with "Linear" range).

"Abs"	Absolute scaling: The labeling of the level lines refers to the absolute value of the reference level. Absolute scaling is the default setting.
"Rel"	Relative scaling: The upper line of the grid is always at 0 dB. The scaling is in dB whereas the reference level is always in the set unit (for details on unit settings see the "Unit" softkey).

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE` on page 650

5.3 Softkeys of the Marker To Menu in I/Q Analyzer Mode

In I/Q Analyzer mode, The "Marker To" menu is identical to the one in Spectrum mode (see ["Softkeys of the Marker To Menu"](#) on page 283). For the "Real/Imag (I/Q)" display mode, however, an additional function is available.

Search Settings

Opens a dialog box to define which data is used for marker search functions.

Note: The search settings apply to all markers, not only the currently selected one.

"Search Real" Marker search functions are performed on the real trace of the I/Q measurement.

"Search Imag" Marker search functions are performed on the imaginary trace of the I/Q measurement.

"Search Magnitude" Marker search functions are performed on the magnitude of the I and Q data.

Remote command:

[CALCulate<n>:MARKer<m>:SEARch](#) on page 692

5.4 Softkeys of the Trigger Menu in I/Q Analyzer Mode

In I/Q Analyzer mode, the "Trigger" menu, which is displayed when you select the TRIG key, contains the following functions:

Trg/Gate Source.....	340
L Free Run.....	341
L External.....	341
L Video.....	341
L RF Power.....	341
L IF Power/BB Power.....	342
L Time.....	342
Trigger Level.....	342
Trigger Polarity.....	343
Trigger Offset.....	343
Repetition Interval.....	343
Trigger Hysteresis.....	344
Trigger Holdoff.....	344

Trg/Gate Source

Opens the "Trigger/Gate Source" dialog box to select the trigger/gate mode.

As gate modes, all modes except "Power Sensor" are available. For details see also [chapter 4.2.8.3, "Using Gated Sweep Operation"](#), on page 254.

The default setting is "Free Run". If a trigger mode other than "Free Run" has been set, the enhancement label "TRG" is displayed and the trigger source is indicated.

Note: When triggering or gating is activated, the squelch function is automatically disabled (see "Squelch" on page 293).

Remote command:

TRIGger<n>[:SEQuence]:SOURce on page 645

[SENSe:]SWEep:EGATe:SOURce on page 648

Free Run ← Trg/Gate Source

The start of a sweep is not triggered. Once a measurement is completed, another is started immediately.

Remote command:

TRIG:SOUR IMM, see TRIGger<n>[:SEQuence]:SOURce on page 645

External ← Trg/Gate Source

Defines triggering via a TTL signal at the "EXT TRIG/GATE IN" input connector on the rear panel.

Remote command:

TRIG:SOUR EXT, see TRIGger<n>[:SEQuence]:SOURce on page 645

SWE:EGAT:SOUR EXT for gated triggering, see [SENSe:]SWEep:EGATe:SOURce on page 648

Video ← Trg/Gate Source

Defines triggering by the displayed voltage.

A horizontal trigger line is shown in the diagram. It is used to set the trigger threshold from 0 % to 100 % of the diagram height.

Video mode is only available in the time domain.

Remote command:

TRIG:SOUR VID, see TRIGger<n>[:SEQuence]:SOURce on page 645

SWE:EGAT:SOUR VID for gated triggering, see [SENSe:]SWEep:EGATe:SOURce on page 648

RF Power ← Trg/Gate Source

Defines triggering of the measurement via signals which are outside the measurement channel.

In RF Power trigger mode the instrument uses a level detector at the first intermediate frequency. The detector threshold can be selected in a range between -50 dBm and -10 dBm at the input mixer. The resulting trigger level at the RF input lies within the following range:

$(-24\text{dBm} + \text{RF Att}) \leq \text{Triggerlevel} \leq (+5\text{dBm} + \text{RF Att})$, max. 30 dBm, for Preamp = OFF

$(-40\text{dBm} + \text{RF Att}) \leq \text{Triggerlevel} \leq (-11\text{dBm} + \text{RF Att})$, max. 30 dBm, for Preamp = ON

with

$500\text{ MHz} \leq \text{InputSignal} \leq 7\text{ GHz}$

Note: If input values outside of this range occur (e.g. for fullspan measurements), the sweep may be aborted and a message indicating the allowed input values is displayed in the status bar.

A [Trigger Offset](#), [Trg/Gate Polarity](#) and [Trigger Holdoff](#) can be defined for the RF trigger to improve the trigger stability, but no hysteresis.

Remote command:

TRIG:SOUR RFP, see [TRIGger<n>\[:SEquence\]:SOURce](#) on page 645

SWE:EGAT:SOUR RFP for gated triggering, see [\[SENSe:\]SWEep:EGATe:SOURce](#) on page 648

IF Power/BB Power ← Trg/Gate Source

For this purpose, the R&S ESRP uses a level detector at the second intermediate frequency.

The available trigger levels depend on the RF attenuation and preamplification. A reference level offset, if defined, is also considered.

For details on available trigger levels and trigger bandwidths see the data sheet.

The bandwidth at the intermediate frequency depends on the RBW and sweep type:

Sweep mode:

- RBW > 500 kHz: 40 MHz, nominal
- RBW ≤ 500 kHz: 6 MHz, nominal

FFT mode:

- RBW > 20 kHz: 40 MHz, nominal
- RBW ≤ 20 kHz: 6 MHz, nominal

Note: Be aware that in auto sweep type mode, due to a possible change in sweep types, the bandwidth may vary considerably for the same RBW setting.

The R&S ESRP is triggered as soon as the trigger level is exceeded around the selected frequency (= start frequency in the frequency sweep).

Thus, the measurement of spurious emissions, e.g. for pulsed carriers, is possible even if the carrier lies outside the selected frequency span.

Remote command:

TRIG:SOUR IFP, see [TRIGger<n>\[:SEquence\]:SOURce](#) on page 645

SWE:EGAT:SOUR IFP for gated triggering, see [\[SENSe:\]SWEep:EGATe:SOURce](#) on page 648

Time ← Trg/Gate Source

Opens an edit dialog box to define a repetition interval in which the measurement is triggered. The shortest interval is 2 ms.

Remote command:

TRIG:SOUR TIME [TRIGger<n>\[:SEquence\]:SOURce](#) on page 645

Trigger Level

Defines the trigger level as a numeric value.

In the trigger mode "Time", this softkey is not available.

Remote command:

[TRIGger<n>\[:SEquence\]:LEVel:IFPower](#) on page 644

[TRIGger<n>\[:SEquence\]:LEVel:VIDeo](#) on page 645

Trigger Polarity

Sets the polarity of the trigger source.

The sweep starts after a positive or negative edge of the trigger signal. The default setting is "Pos". The setting applies to all modes with the exception of the "Free Run" and "Time" mode.

"Pos" Level triggering: the sweep is stopped by the logic "0" signal and restarted by the logical "1" signal after the gate delay time has elapsed.

"Neg" Edge triggering: the sweep is continued on a "0" to "1" transition for the gate length duration after the gate delay time has elapsed.

Remote command:

[TRIGger<n>\[:SEquence\]:SLOPe](#) on page 645

[\[SENSe:\]SWEep:EGATe:POLarity](#) on page 648

Trigger Offset

Opens an edit dialog box to enter the time offset between the trigger signal and the start of the sweep.

offset > 0:	Start of the sweep is delayed
offset < 0:	Sweep starts earlier (pre-trigger) Only possible for span = 0 (e.g. I/Q Analyzer mode) and gated trigger switched off Maximum allowed range limited by the sweep time: $\text{pretrigger}_{\text{max}} = \text{sweep time}$

In the "External" or "IF Power" trigger mode, a common input signal is used for both trigger and gate. Therefore, changes to the gate delay will affect the trigger delay (trigger offset) as well.

Tip: To determine the trigger point in the sample (for "External" or "IF Power" trigger mode), use the [TRACe<n>:IQ:TPISample?](#) command.

In the "Time" trigger mode, this softkey is not available.

Remote command:

[TRIGger<n>\[:SEquence\]:HOLDoff\[:TIME\]](#) on page 643

Repetition Interval

Opens an edit dialog box to define a repetition interval in which the measurement is triggered. The shortest interval is 2 ms. This softkey is only available if the trigger source "Time" is selected (see "Time" on page 250).

Remote command:

[TRIGger<n>\[:SEquence\]:TIME:RINTerval](#) on page 646

Trigger Hysteresis

Defines the value for the trigger hysteresis for "IF power" or "RF Power" trigger sources. The hysteresis in dB is the value the input signal must stay below the power trigger level in order to allow a trigger to start the measurement. The range of the value is between 3 dB and 50 dB with a step width of 1 dB.

Remote command:

`TRIGger<n>[:SEquence]:IFPower:HYSTeresis` on page 644

Trigger Holdoff

Defines the value for the trigger holdoff. The holdoff value in s is the time which must pass before triggering, in case another trigger event happens.

This softkey is only available if "IFPower", "RF Power" or "BBPower" is the selected trigger source.

Remote command:

`TRIGger<n>[:SEquence]:IFPower:HOLDoff` on page 643

5.5 Working with I/Q Data

This section describes I/Q data processing of RF input, e.g. in the I/Q Analyzer.

The block diagram in [figure 5-1](#) shows the analyzer hardware for active RF input from the IF section to the processor.

The A/D converter samples the IF signal at a rate of 128 MHz. The digital signal is down-converted to the complex baseband, lowpass-filtered, and the sample rate is reduced. The continuously adjustable sample rates are realized using an optimal decimation filter and subsequent resampling on the set sample rate.

The I/Q data is written to a single memory, the data acquisition is hardware-triggered.

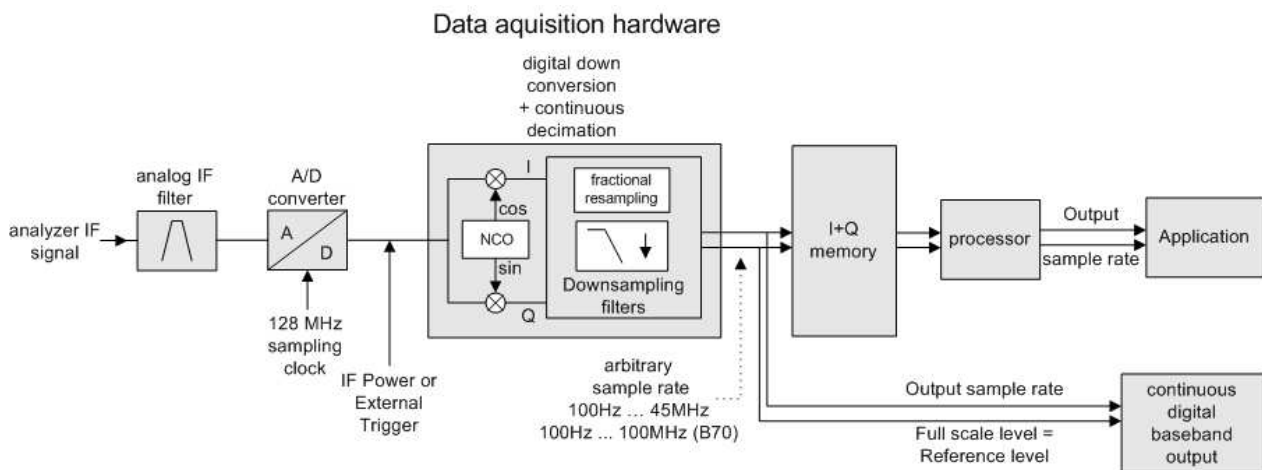


Fig. 5-1: Block diagram illustrating the R&S ESRP signal processing

Maximum number of samples

The maximum number of samples for RF input is 200 MS.

5.5.1 Sample Rate and Maximum Usable Bandwidth (RF Input)**Definitions**

- **Input sample rate (ISR):** the sample rate of the useful data provided by the connected instrument to the R&S ESRP input
- (User, Output) **Sample rate (SR):** the sample rate that is defined by the user (e.g. in the "Data Acquisition" dialog box in the "I/Q Analyzer" application) and which is used as the basis for analysis or output
- **Usable I/Q (Analysis) bandwidth:** the bandwidth range in which the signal remains undistorted in regard to amplitude characteristic and group delay; this range can be used for accurate analysis by the R&S ESRP

For the I/Q data acquisition, digital decimation filters are used internally. The passband of these digital filters determines the *maximum usable I/Q bandwidth*. In consequence, signals within the usable I/Q bandwidth (passband) remain unchanged, while signals outside the usable I/Q bandwidth (passband) are suppressed. Usually, the suppressed signals are noise, artifacts, and the second IF side band. If frequencies of interest to you are also suppressed, you should try to increase the output sample rate, since this increases the maximum usable I/Q bandwidth.

Relationship between sample rate and usable bandwidth

The diagram [figure 5-2](#) shows the maximum usable I/Q bandwidths depending on the user sample rates.

As a rule, the usable bandwidth is proportional to the output sample. Yet, when the I/Q bandwidth reaches the bandwidth of the analog IF filter (at very high sample rates), the curve breaks.

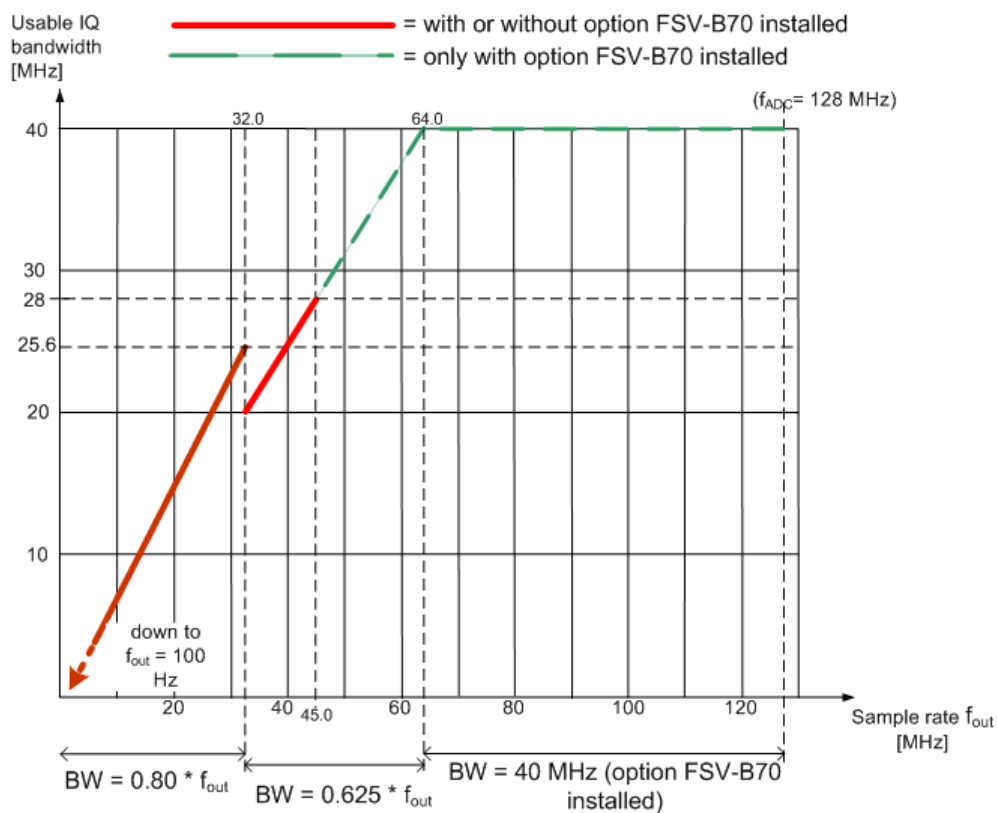


Fig. 5-2: Relation between maximum usable bandwidth and sample rate (RF input)

6 Tracking Generator

Equipped with option R&S FSV-B9, an internal tracking generator emits a signal at the exact input frequency of the analyzer during operation. The generated signal is sent to the DUT, thus allowing the analyzer to control the input frequency of the device directly.

Tracking generator control is available in "Spectrum" and "I/Q Analyzer" mode for frequency, time or I/Q measurements. Special measurement functions are not available with tracking generator control. The corresponding softkeys in the "Measurement" menu are deactivated in this case.

Menu and softkey description

- [chapter 6.1, "Softkeys of the Tracking Generator Menu"](#), on page 347

Further information

6.1 Softkeys of the Tracking Generator Menu

The "Tracking Generator" menu is displayed when you press the INPUT/OUTPUT key and then "Tracking Generator".

This softkey is only available if the Tracking Generator (R&S FSV-B9) is installed. The following table shows all softkeys available in the "Tracking Generator" menu.



As long as a tracking generator is active, the HOME key also displays the "Tracking Generator" menu.

Source RF Internal (On/ Off).....	348
Source Power.....	348
Source Cal.....	348
L Calibrate Transmission.....	348
L Calibrate Reflection Short.....	348
L Calibrate Reflection Open.....	348
L Normalize.....	349
L Reference Value Position.....	349
L Reference Value.....	349
L Recall.....	349
Modulation.....	349
L External AM.....	350
L External FM.....	350
L External I/Q.....	350
L Modulation OFF.....	350
Power Sweep.....	350
L Power Sweep (On /Off).....	351

L Power Sweep Start.....	351
L Power Sweep Stop.....	351
Source Config.....	351

Source RF Internal (On/ Off)

Switches the selected tracking generator on or off. Default setting is off. The currently selected generator is indicated on the softkey.

Remote command:

`OUTPut [:STATe]` on page 704

Activates the internal tracking generator (B9).

Source Power

Opens an edit dialog box to quickly change the output power of the currently selected tracking generator, alternatively to the "Tracking Generator configuration" dialog box (see "Source Config" on page 351 softkey).

The default output power is -20 dBm. The range is specified in the data sheet.

Remote command:

`SOURce<n>:POWer[:LEVel][:IMMediate][:AMPLitude]` on page 708

Source Cal

Opens a submenu to configure calibration for transmission and reflection measurement for tracking generators. For details on the test setups see [chapter 6.3.2, "Calibrating for transmission and reflection measurement"](#), on page 354.

Calibrate Transmission ← Source Cal

Starts a sweep that records a reference trace. This trace is used to calculate the difference for the normalized values.

Remote command:

`[SENSe:]CORRection:METHod` on page 705

Selects the transmission method and starts the sweep to record a reference trace.

Calibrate Reflection Short ← Source Cal

Starts a sweep as a reference trace for short-circuit calibration.

If both calibrations (open circuit, short circuit) are carried out, the calibration curve is calculated by averaging the two measurements and stored in the memory. The order of the two calibration measurements is irrelevant.

Remote command:

`[SENSe:]CORRection:METHod` on page 705

Selects the reflection method.

`[SENSe:]CORRection:COLLect[:ACQuire]` on page 704

Starts the sweep for short-circuit calibration.

Calibrate Reflection Open ← Source Cal

Starts a sweep as a reference trace for the open-circuit calibration.

If both calibrations (open circuit, short circuit) are carried out, the calibration curve is calculated by averaging the two measurements and stored in the memory. The order of the two calibration measurements is irrelevant.

Remote command:

`[SENSe:]CORRection:METHod` on page 705

Selects the reflection method.

`[SENSe:]CORRection:COLLect[:ACQuire]` on page 704

Starts the sweep for open-circuit calibration.

Normalize ← Source Cal

Switches the normalization on or off. The softkey is only available if the memory contains a reference trace. For details on normalization see [chapter 6.3.5, "Normalization"](#), on page 356.

Remote command:

`[SENSe:]CORRection[:STATe]` on page 705

Reference Value Position ← Source Cal

Switches the reference line on or off. The reference line marks the reference position at which the normalization result (calculated difference to a reference trace) is displayed. For details on the reference line see [chapter 6.3.5, "Normalization"](#), on page 356.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RPOSition` on page 651

Reference Value ← Source Cal

Opens an edit dialog box to enter a position value that shifts the reference line vertically. By default, the reference line corresponds to a difference of 0 dB between the currently measured trace and the reference trace.

If a 10 dB attenuation is inserted into the signal path between DUT and R&S ESRP input, for example after a source calibration, the measurement trace is moved down by 10 dB. Entering a reference value of -10 dB will also shift the reference line down by 10 dB and place the measurement trace on the reference line. The deviation from the nominal power level can be displayed with higher resolution (e.g. 1 dB/div). The power is still displayed in absolute values.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RVALue` on page 692

Recall ← Source Cal

Restores the settings that were used during source calibration. This can be useful if instrument settings were changed after calibration (e.g. center frequency, frequency deviation, reference level, etc).

Remote command:

`[SENSe:]CORRection:RECall` on page 705

Modulation

Opens a submenu to define modulation settings. This submenu contains the following commands:

- "External AM" on page 350
- "External FM" on page 350
- "External I/Q" on page 350
- "Modulation OFF" on page 350

External AM ← Modulation

Activates an AM modulation of the tracking generator output signal.

The modulation signal is applied to the TG IN I/AM connector. An input voltage of 1 V corresponds to 100 % amplitude modulation.

Switching on an external AM disables the active I/Q modulation.

Remote command:

`SOURce<n>:AM:STATe` on page 705

External FM ← Modulation

Activates the FM modulation of the tracking generator output signal. The modulation signal is applied to the TG IN Q/FM connector. Switching on an external FM disables the active I/Q modulation.

Remote command:

`SOURce<n>:FM:STATe` on page 707

`SOURce<n>:FM:DEVIation` on page 706

External I/Q ← Modulation

Activates the external I/Q modulation of the tracking generator output signal. The signals for modulation are applied to the two input connectors TG IN I and TG IN Q at the rear panel of the unit. The input voltage range is ± 1 V into 50 Ω . Switching on an external I/Q modulation disables the active AM or FM modulation.

Remote command:

`SOURce<n>:DM:STATe` on page 706

Modulation OFF ← Modulation

Deactivates external modulation of the tracking generator output signal.

Remote command:

`SOURce<n>:AM:STATe` on page 705

`SOURce<n>:DM:STATe` on page 706

`SOURce<n>:FM:STATe` on page 707

Power Sweep

Opens a submenu to define power sweep settings.

This submenu contains the following commands:

- "Power Sweep (On /Off)" on page 351
- "Power Sweep Start" on page 351
- "Power Sweep Stop" on page 351

Power Sweep (On /Off) ← Power Sweep

Activates or deactivates the power sweep. If the power sweep is on, the analyzer is set to zero span mode (span = 0Hz). During the sweep time of the zero span, the power at the internal tracking generator is changed linearly from start power to stop power. The start and stop power for the power sweep are displayed in the diagram header ("INT TG <start power>... <stop power>", see also [chapter 6.4, "Displayed Information and Errors"](#), on page 361).

The start power can be set between -30 dBm and +0 dBm.

The stop value can also be set between -30 dBm and +0 dBm and may be smaller than the start value.

The difference between the start and stop values may not exceed 10 dB.

Remote command:

[SOURce<n>:POWer:MODE](#) on page 708

Power Sweep Start ← Power Sweep

Defines the start power of the power sweep.

The start power can be set between -30 dBm and +0 dBm.

The difference between the start and stop values may not exceed 10 dB.

Remote command:

[SOURce<n>:POWer:STArT](#) on page 709

Power Sweep Stop ← Power Sweep

Defines the stop power of the power sweep.

The stop power can be set between -30 dBm and +0 dBm.

The difference between the start and stop values may not exceed 10 dB.

Remote command:

[SOURce<n>:POWer:STOp](#) on page 709

Source Config

Opens the "Tracking Generator Configuration" dialog, see [chapter 6.2, "Configuring Tracking Generators"](#), on page 351.

6.2 Configuring Tracking Generators

The "Tracking Generator Configuration" dialog box is opened via the "Source Config" softkey in the "Tracking Generator" menu.

This dialox box allows you to define measurement settings.

- [chapter 6.2.1, "Internal Tracking Generator"](#), on page 352

6.2.1 Internal Tracking Generator

The internal tracking generator is configured in the "Internal" tab of the "tracking Generator Configuration" dialog box.

In the top half of the dialog box, the measurement configurations can be defined. In the lower half of the dialog box, the capabilities of the internal tracking generator are displayed for reference only.

The configuration dialog box contains the following fields:

Select

Selects the internal tracking generator as the current tracking generator source. "Internal" is displayed as the source on the "Source RF" softkey. All tracking generator functions are performed with the currently selected source.

Note: Note that the generator is not automatically activated when it is selected. To activate the currently selected generator, click the "Source RF On" softkey.

Source Power

The tracking generator output power. The default output power is -20 dBm. The range is specified in the data sheet.

Remote command:

`SOURCE<n>:POWER[:LEVEL][:IMMEDIATE][:AMPLITUDE]` on page 708

Power Offset

Constant level offset for the tracking generator. Values from -200 dB to +200 dB in 1 dB steps are allowed. The default setting is 0 dB. Offsets are indicated by the enhancement label "LVL" in the diagram header (see also [chapter 6.4, "Displayed Information and Errors"](#), on page 361).

With this offset, attenuators or amplifiers at the output connector of the tracking generator can be taken into account for the displayed output power values on screen or during data entry, for example. Positive offsets apply to an amplifier and negative offsets to an attenuator subsequent to the tracking generator.

Remote command:

`SOURCE<n>:POWER[:LEVEL][:IMMEDIATE]:OFFSET` on page 708

Frequency Offset

Constant frequency offset between the output signal of the tracking generator and the input frequency of the R&S ESRP. Possible offsets are in a range of ± 1 GHz in 0.1 Hz steps.

The default setting is 0 Hz. Offsets $\neq 0$ Hz are marked with the enhancement label "FRQ" in the diagram header (see also [chapter 6.4, "Displayed Information and Errors"](#), on page 361).

If a positive frequency offset is entered, the tracking generator generates an output signal above the receive frequency of the R&S ESRP. In case of a negative frequency offset it generates a signal below the receive frequency of the R&S ESRP. The output frequency of the tracking generator is calculated as follows:

Tracking generator frequency = receive frequency + frequency offset.

Remote command:

[SOURCE<n>:FREQuency:OFFSet](#) on page 707

Result Frequency Start

For reference only: The start frequency for the generator, calculated from the configured generator frequency and the start value defined for the analyzer.

Result Frequency Stop

For reference only: The stop frequency for the generator, calculated from the configured generator frequency and the stop value defined for the analyzer.

Frequency Min.

For reference only: Lower frequency limit for the generator.

Frequency Max.

For reference only: Upper frequency limit for the generator.

Power Min.

For reference only: Lower power limit for the generator.

Power Max.

For reference only: Upper power limit for the generator.

6.3 Tracking Generator Functions

The following functions are available if the R&S ESRP Tracking Generator (R&S FSV-B9) is installed.

- [chapter 6.3.1, "Calibration mechanism"](#), on page 353
- [chapter 6.3.2, "Calibrating for transmission and reflection measurement"](#), on page 354
- [chapter 6.3.3, "Transmission measurement"](#), on page 355
- [chapter 6.3.4, "Reflection measurement"](#), on page 355
- [chapter 6.3.5, "Normalization"](#), on page 356
- [chapter 6.3.6, "Modulation \(internal Tracking Generator only\)"](#), on page 359

6.3.1 Calibration mechanism

Calibration means calculating the difference between the currently measured power and a reference curve, independent of the selected type of measurement (transmission/reflection). The hardware settings used for measuring the reference curve are included in the reference dataset.

Even with normalization switched on, the instrument settings can be changed in a wide area without stopping the normalization. This reduces the necessity to carry out a new normalization to a minimum.

Therefore, the reference dataset (trace with n measured values, where n is the number of [Sweep Points](#)) is stored internally as a table of n points (frequency/level).

Differences in level settings between the reference curve and the current instrument settings are taken into account automatically. If the span is reduced, a linear interpolation of the intermediate values is applied. If the span increases, the values at the left or right border of the reference dataset are extrapolated to the current start or stop frequency, i.e. the reference dataset is extended by constant values.

An enhancement label is used to mark the different levels of measurement accuracy. This enhancement label is displayed at the right diagram border if normalization is switched on and a deviation from the reference setting occurs. Three accuracy levels are defined:

Table 6-1: Measurement accuracy levels

Accuracy	Enhancement label	Reason/Limitation
high	NOR	No difference between reference setting and measurement
medium	APX (approximation)	Change of the following settings: • coupling (RBW, VBW, SWT) • reference level, RF attenuation • start or stop frequency • output level of tracking generator • detector (max. peak, min. peak, sample, etc.) • change of frequency: max. 691 points within the set sweep limits (corresponds to a doubling of the span)
–	Aborted normalization	More than 500 extrapolated points within the current sweep limits (in case of span doubling)



At a reference level of -10 dBm and at a tracking generator output level of the same value, the R&S ESRP operates without overrange reserve. That means the R&S ESRP is in danger of being overloaded if a signal is applied whose amplitude is higher than the reference line. In this case, either the message "OVLD" for overload or "IFOVL" for exceeded display range (clipping of the trace at the upper diagram border = overrange) is displayed in the status line.

Overloading can be avoided as follows:

- Reducing the output level of the tracking generator (["Source Config"](#) on page 351 softkey in the Tracking Generator menu)
- Increasing the reference level ([Ref Level](#) softkey in the "Amplitude" menu)

6.3.2 Calibrating for transmission and reflection measurement

Prerequisite: The instrument is in tracking generator measurement mode.

1. To enter the generator output level, press the "Source Power" on page 348 softkey.
2. To enter a constant level offset for the tracking generator, press the "Source Config" on page 351 softkey and enter a "Power Offset".
3. To open the submenu for calibration, press the "Source Cal" on page 348 softkey.
4. To record a reference trace for transmission measurement, press the "Calibrate Transmission" on page 348 softkey.
The recording of the reference trace and the completion of the calibration sweep are indicated by message box XE s.
5. To record a reference trace for reflection measurement, press the "Calibrate Reflection Short" on page 348 or "Calibrate Reflection Open" on page 348 softkey.
The recording of the reference trace and the completion of the calibration sweep are indicated by message box XE s.
6. To switch on the normalization, press the "Normalize" on page 349 softkey.
7. To display the reference line, press the "Reference Value Position" on page 349 softkey.
8. To enter a value to shift the reference line, press the "Reference Value" on page 349 softkey.
9. To restore the settings used for source calibration, press the "Recall" on page 349 softkey.

6.3.3 Transmission measurement

This measurement yields the transmission characteristics of a two-port network. The internal or external tracking generator serves as a signal source. It is connected to the input connector of the DUT. The input of the R&S ESRP is fed from the output of the DUT. A calibration can be carried out to compensate for the effects of the test setup (e.g. frequency response of connecting cables).

 


Fig. 6-1: Test setup for transmission measurement

6.3.4 Reflection measurement

Scalar reflection measurements can be carried out by means of a reflection-coefficient measurement bridge.

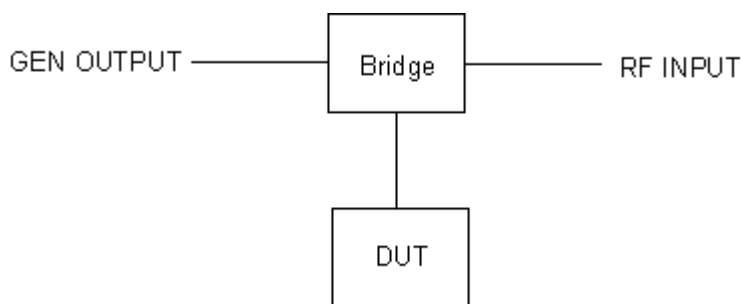


Fig. 6-2: Test setup for reflection measurement

6.3.5 Normalization

The "NORMALIZE" softkey switches normalization on or off. The softkey is only available if the memory contains a correction trace.

You can shift the relative reference point within the grid using the ["Reference Value Position"](#) on page 349 softkey. Thus, the trace can be shifted from the top grid margin to the middle of the grid:

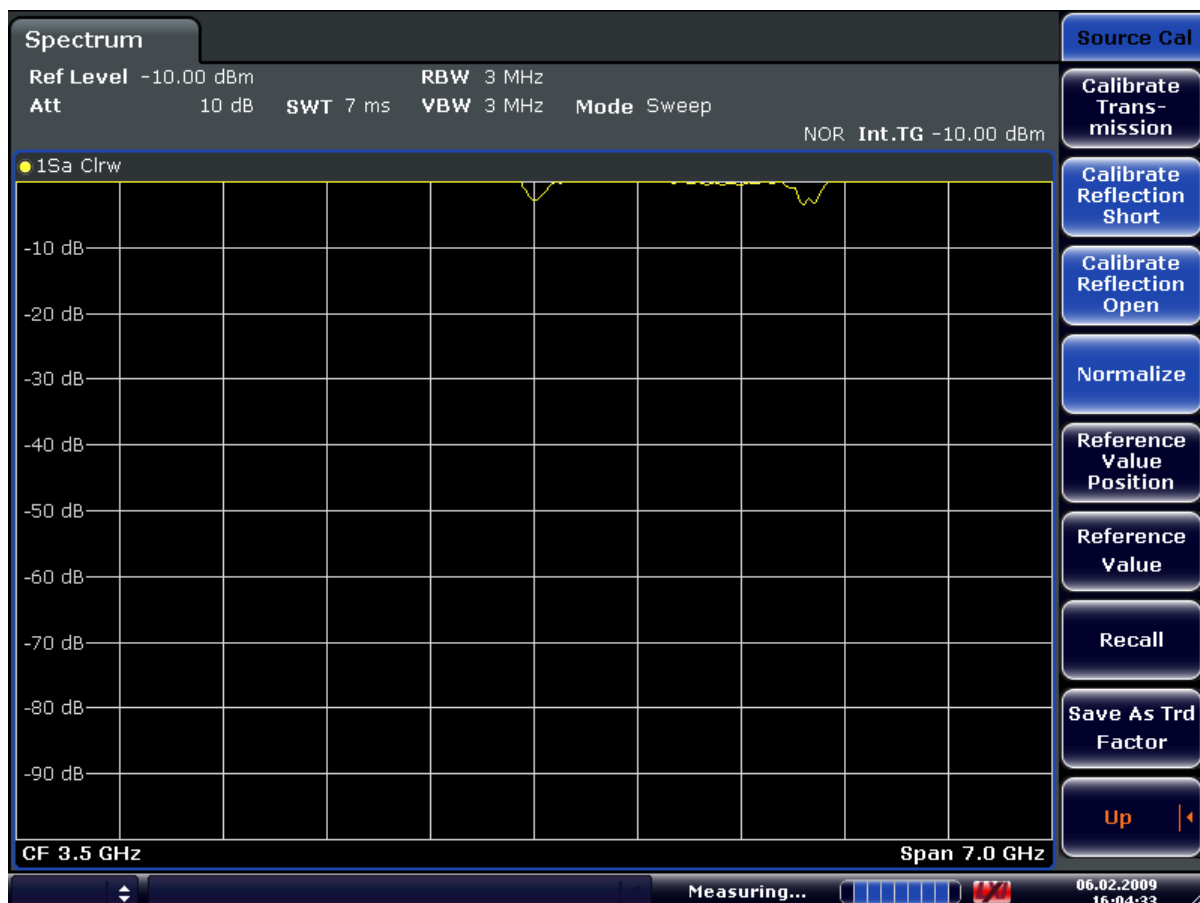


Fig. 6-3: Normalized display

CORR ON, see [SENSe:]CORRection[:STATe] on page 705

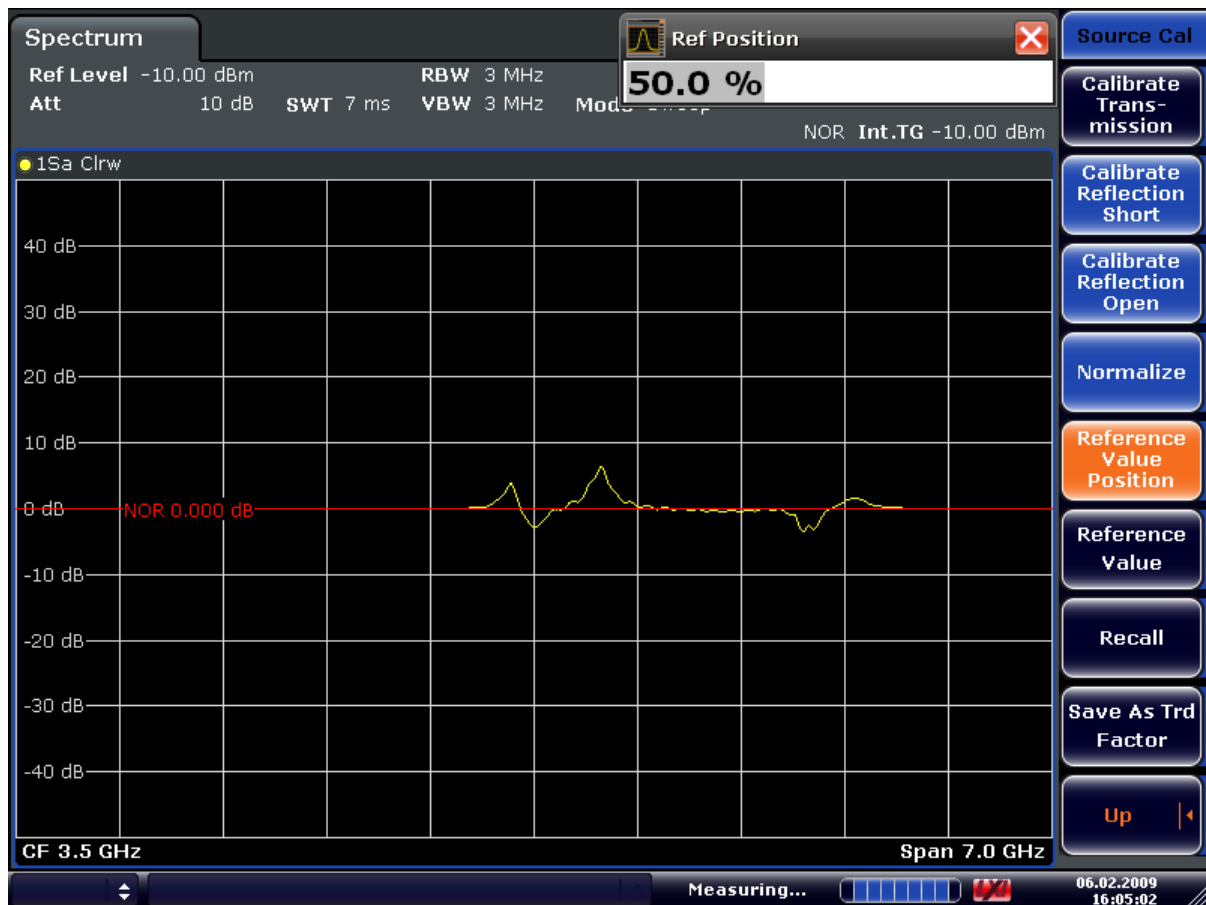


Fig. 6-4: Normalized measurement, shifted with Reference Value Position= 50%

DISP:WIND:TRAC:Y:RPOS 10PCT, see DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RPOSition on page 651

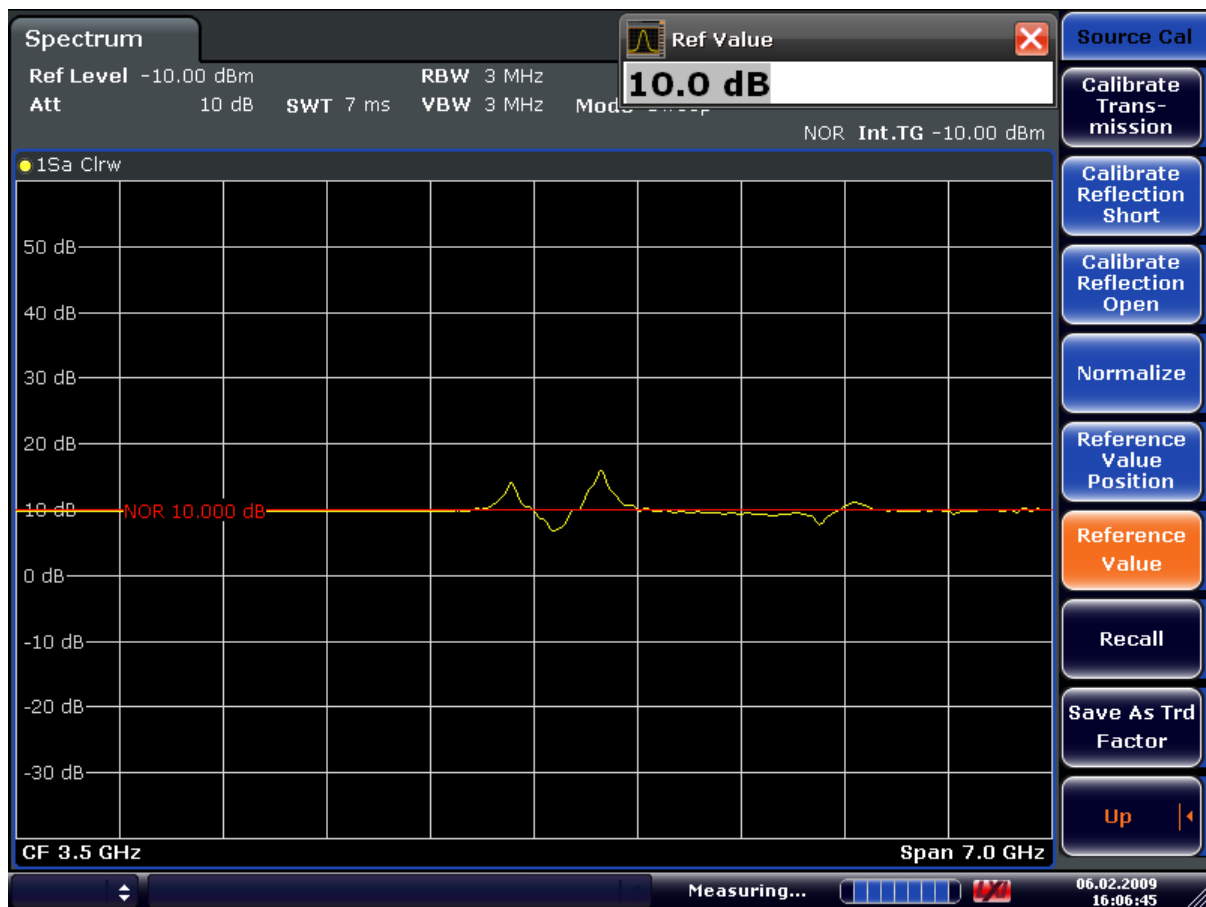


Fig. 6-5: Measurement with Reference Value: +10dB and Reference Value Position = 50%

After the reference line has been shifted by entering +10 dB as the "Reference Value" on page 349, deviations from the nominal value can be displayed with high resolution (e.g. 2 dB/Div.). The absolute measured values are still displayed; in the above example, 2 dB below nominal value (reference line) = 8 dB attenuation.

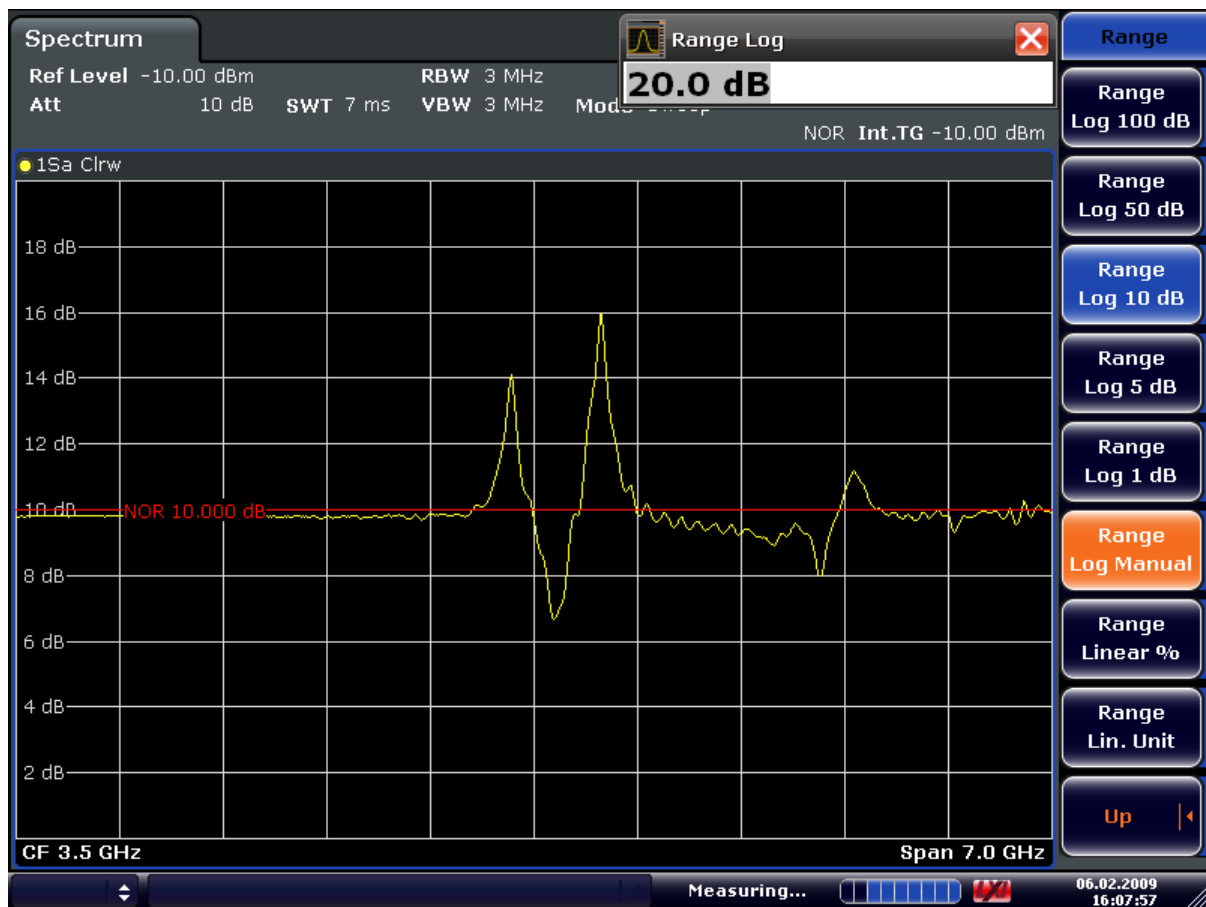


Fig. 6-6: Measurement of a 10-dB attenuator pad with 2dB/Div

DISP:WIND:TRAC:Y:RVAL +10dB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]:RVALue](#) on page 692

6.3.6 Modulation (internal Tracking Generator only)

The time characteristics of the tracking generator output signal can be influenced by means of external signals (input voltage range -1 V to +1 V).

Two BNC connectors at the rear panel are available as signal inputs. Their function changes depending on the selected modulation:

- TG IN I/AM and
- TG IN Q/FM

The modulation modes can be combined with each other and with the frequency offset function up to a certain degree. The following table shows which modulation modes are possible at the same time and which ones can be combined with the frequency offset function.

Table 6-2: Simultaneous modes of modulation (tracking generator)

Modulation	Frequency offset	EXT AM	EXT FM	EXT I/Q
Frequency offset		•	•	•
EXT AM	•		•	
EXT FM	•	•		
EXT I/Q	•			

• = can be combined

External AM

The "External AM" on page 350 softkey activates an AM modulation of the tracking generator output signal.

The modulation signal is applied to the TG IN I/AM connector. An input voltage of 1 V corresponds to 100% amplitude modulation.

Switching on an external AM disables the active I/Q modulation.

External FM

The "External FM" on page 350 softkey activates the FM modulation of the tracking generator output signal.

The modulation frequency range is 1 kHz to 100 kHz, the deviation can be set in 1-decade steps in the range of 100 Hz to 10 MHz at an input voltage of 1 V. The phase deviation h should not exceed the value 100.

Phase deviation h = deviation/modulation frequency

The modulation signal is applied to the TG IN Q/FM connector.

Switching on an external FM disables the active I/Q modulation.

External IQ

The "External I/Q" on page 350 softkey activates the external I/Q modulation of the tracking generator.

The signals for modulation are applied to the two input connectors TG IN I and TG IN Q at the rear panel of the unit. The input voltage range is ± 1 V into 50 Ω .

Switching on an external I/Q modulation disables the active external AM or FM.

Functional description of the quadrature modulator:

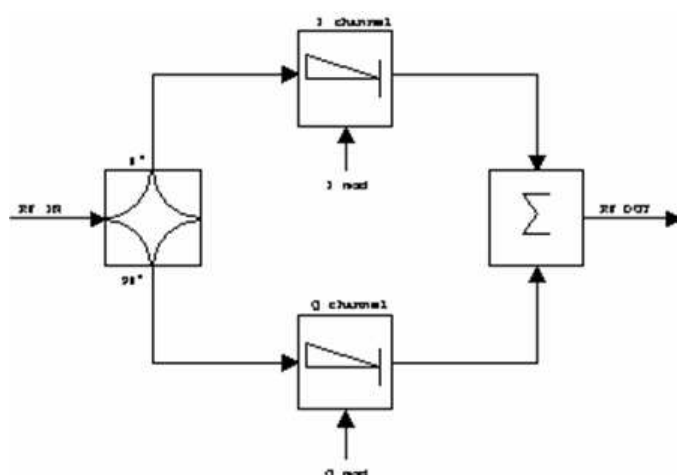


Fig. 6-7: I/Q modulation

I/Q modulation is performed by means of the built-in quadrature modulator. The RF signal is divided into two orthogonal I and Q components (in phase and quadrature phase). Amplitude and phase are controlled in each path by the I and Q modulation signal. By adding the two components an RF output signal is generated that can be controlled in amplitude and phase.

Remote command:

[SOURce<n>:DM:STATe](#) on page 706

6.4 Displayed Information and Errors

Diagram header

In Tracking Generator measurement mode, some additional information is displayed in the diagram header.

Label	Description
INT TG: <source power>	Internal tracking generator active
INT TG: <start power>... <stop power>	Internal tracking generator with power sweep active
EXT TG <1 2>: <source power>	External tracking generator (1 or 2) active
LVL	Power Offset (see chapter 6.2, "Configuring Tracking Generators" , on page 351)
FRQ	Frequency Offset (see chapter 6.2, "Configuring Tracking Generators" , on page 351)
Measurement accuracy levels	
NOR	Normalization on; No difference between reference setting and measurement

Label	Description
APX (approximation)	Normalization on; Deviation from the reference setting occurs
-	Aborted normalization

For details on measurement accuracy levels, see [chapter 6.3.5, "Normalization"](#), on page 356.

7 System Configuration

7.1 Manual Operation – Local Menu

When switched on, the instrument is always in the manual measurement mode and can be operated via the front panel. As soon as the instrument receives a remote command, it is switched to the remote control mode.

In remote control mode, all keys of the instrument except the PRESET key are disabled, see [chapter 7.3, "Instrument Setup and Interface Configuration – SETUP Key"](#), on page 365. The "LOCAL" softkey and the [Display Update \(On/Off\)](#) softkey are displayed. Depending on the setting of the [Display Update \(On/Off\)](#) softkey, the diagrams, traces and display fields are displayed or hidden. For further details on the [Display Update \(On/Off\)](#) softkey refer to [chapter 7.3, "Instrument Setup and Interface Configuration – SETUP Key"](#), on page 365.

For details on remote control refer to chapter 5 "Remote Control – Basics".

The change to manual operation consists of:

- Enabling the Front Panel Keys
Returning to manual mode enables all inactive keys. The main softkey menu of the current mode is displayed.
- Displaying the measurement diagrams again.
The diagrams, traces and display fields are displayed again.
- Generating the "OPERATION COMPLETE" message
If, at the time of pressing the "LOCAL" softkey, the synchronization mechanism via *OPC, *OPC? or *WAI is active, the currently running measurement procedure is aborted and synchronization is achieved by setting the corresponding bits in the registers of the status reporting system.
- Setting Bit 6 (User Request) of the Event Status Register
With a corresponding configuration of the status reporting system, this bit immediately causes the generation of a service request (SRQ) to inform the control software that the user wishes to return to front panel control. For example this can be used to interrupt the control program and to correct instrument settings manually. This bit is set each time the "LOCAL" softkey is pressed.

To return to manual operation

- Press the "LOCAL" softkey.

The instrument switches from remote to manual operation, but only if the local lock-out function has not been activated in the remote control mode.

7.2 User-Defined Menu – USER key

The USER key displays a user-defined menu. The softkeys displayed here can be labelled and assigned to user-defined settings files as required.

To open the user-defined menu


- Press the USER key.
The "User" menu is displayed.

Softkeys of the User menu

The "User" menu contains 8 user-definable softkeys as well as a "[User Preference Setup](#)" softkey that allows you to define them. Pressing one of the user-definable softkeys has the same effect as the [Save File / Recall File](#) function for a pre-defined settings file. The definitions for these softkeys remain unchanged even after a reset function and after updating the firmware.

"User Preference Setup" softkey

Opens an "ApplicationManager" dialog to set up the user-defined softkeys.

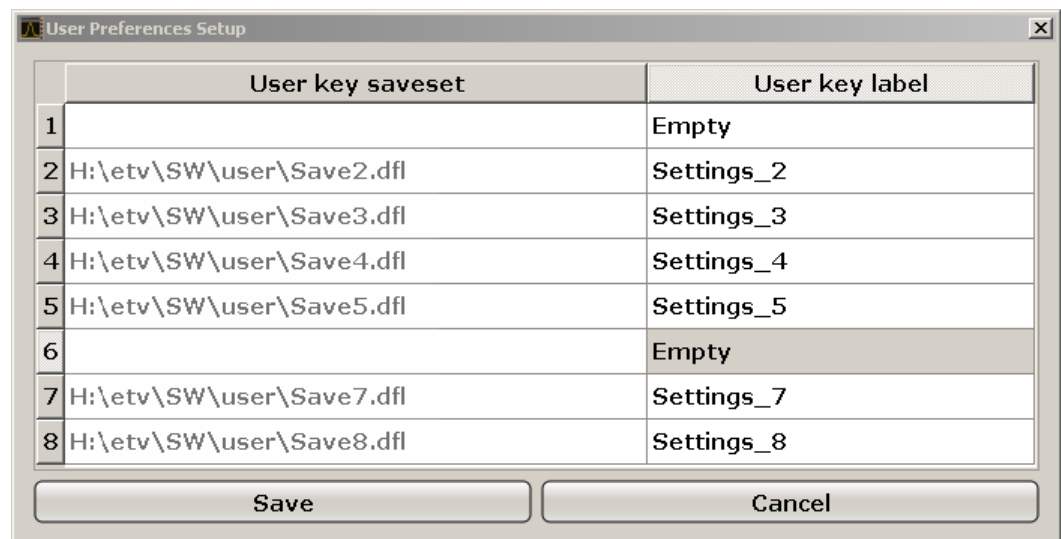

For each user-definable softkey (1–8), you can define a key label and assign a settings file that is to be loaded when the softkey is selected.

SCPI command:

[MMEMory:USER<Softkey>](#) on page 776

To define the key label

1. Click into the table entry for the corresponding softkey.
2. Enter a label for the softkey.

3. Press ENTER.

To assign a settings file

1. Click into the table entry for the corresponding softkey.
2. In the file selection dialog, select a stored settings file to be recalled when the softkey is selected.
3. Click "Select".
The selected file is displayed in the "ApplicationManager" dialog.

To store the softkey settings

- Click "Save" to store the user-defined softkey definitions.

7.3 Instrument Setup and Interface Configuration – SETUP Key

The SETUP key is used to set or display the default settings of the instrument: reference frequency, noise source, level correction values, date, time, LAN interface, firmware update and enabling of options, information about instrument configuration and service support functions. For further details refer also to the Quick Start Guide, chapter 2 "Preparing for Use".

To open the Setup menu

- Press the SETUP key.
The "Setup" menu is displayed.

Menu and softkey description

- [chapter 7.3.1, "Softkeys of the Setup Menu"](#), on page 365

Further information

- [chapter 7.3.3, "LXI Class C Functionality"](#), on page 389

Tasks

- [chapter 7.3.2, "Activating or Deactivating the LXI Class C Functionality"](#), on page 388

7.3.1 Softkeys of the Setup Menu

The following table shows all softkeys available in the "Setup" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available

with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

Reference Int/Ext.....	367
Handle missing Ext. Ref.....	368
L Show Error Flag.....	368
L Auto select Reference.....	368
Transducer.....	368
L Using transducer factors or transducer sets.....	369
L Defining characteristics of a transducer factor.....	369
L Managing transducer sets.....	371
Alignment.....	372
L Self Alignment.....	372
L Show Align Results.....	372
L Touch Screen Alignment.....	373
General Setup.....	373
L Configure Network.....	373
L Network Address.....	373
L Computer Name.....	373
L IP Address.....	373
L Subnet Mask.....	374
L DHCP (On/Off).....	374
L LXI.....	374
L Info.....	374
L Password.....	374
L Description.....	374
L LAN Reset.....	375
L GPIB.....	375
L GPIB Address.....	375
L ID String Factory.....	375
L ID String User.....	375
L Compatibility Mode.....	375
L Mode Default.....	376
L Mode R&S FSP.....	376
L Mode R&S FSU.....	376
L GPIB Language.....	376
L IF Gain (Norm/Puls).....	377
L Sweep Repeat (On/Off).....	377
L Coupling (FSx/HP).....	377
L REV String Factory.....	378
L REV String User.....	378
L Display Update (On/Off).....	378
L GPIB Terminator LFEOL/EOI.....	378
L *IDN Format Leg./New.....	378
L I/O Logging (On/Off).....	379
L Time+Date.....	379
L Configure Monitor.....	379
L Soft Frontpanel.....	379
Display Setup.....	380
L Tool Bar State (On/Off).....	380

L Screen Title (On/Off).....	381
L Time+Date (On/Off).....	381
L Time+Date Format (US/DE).....	381
L Print Logo (On/Off).....	381
L Annotation (On/Off).....	381
L Theme Selection.....	381
L Screen Colors.....	381
L Select Screen Color Set.....	382
L Color (On/Off).....	382
L Select Object.....	382
L Predefined Colors.....	382
L User Defined Colors.....	382
L Set to Default.....	383
L Print Colors.....	383
L Select Print Color Set.....	383
L Color (On/Off).....	383
L Display Pwr Save (On/Off).....	384
System Info.....	384
L Hardware Info.....	384
L Versions+Options.....	384
L System Messages.....	385
L Clear All Messages.....	385
Parameter Coupling.....	385
Firmware Update.....	386
Option Licenses.....	386
L Install Option.....	386
L Install Option by XML.....	386
Application Setup Recovery.....	386
Preset Receiver.....	387
Preset Spectrum.....	387
Service.....	387
L Input Source.....	387
L RF.....	388
L Calibration Frequency RF.....	388
L Reset Password.....	388
L Selftest.....	388
L Selftest Results.....	388
L Password.....	388
L Service Function.....	388

Reference Int/Ext

Switches between the internal and external reference signal source. The default setting is internal reference. It is important that the external reference signal is deactivated when switching from external to internal reference to avoid interactions. When an external reference is used, "EXT REF" is displayed in the status bar.

If the reference signal is missing after switching to an external reference, the message "NO REF" is displayed to indicate that no synchronization is performed.

The R&S ESRP can use the internal reference source or an external reference source as frequency standard from which all internal oscillators are derived. A 10 MHz crystal oscillator is used as internal reference source. In the external reference setting, all internal oscillators of the R&S ESRP are synchronized to the external reference frequency, which can be set from 1–20 MHz in 100 kHz steps. For details on connectors refer to the Quick Start Guide, chapter 1 "Front and Rear Panel".

Remote command:

[SENSe:]ROSCillator:SOURce on page 727

Handle missing Ext. Ref

If an external reference is selected but none is available, there are different ways the instrument can react. This command opens a submenu to select the preferred method of handling a missing external reference. By default, an error flag is displayed in the status bar of the display.

The submenu contains the following commands:

- "Show Error Flag" on page 368
- "Auto select Reference" on page 368

Show Error Flag ← Handle missing Ext. Ref

If this option is selected, an error flag is displayed in the status bar of the display when an external reference is selected but none is available.

Remote command:

[SENSe:]ROSCillator:SOURce on page 727

Auto select Reference ← Handle missing Ext. Ref

If this option is selected, the instrument automatically switches back to the internal reference if no external reference is available. Note that you must re-activate the external reference if it becomes available again at a later time.

Remote command:

[SENSe:]ROSCillator:SOURce on page 727

Transducer

Opens a dialog box that contains functionality to work with transducer factors or transducer sets.

Name	Unit	State	
Generic Probe	dB	-	▲
Transducer 1	dB	-	≡
Transducer 2	dB	-	▼

View Filter: ☒ Show compatible ☐ Show all

Comment:

Basically, the dialog box contains three elements.

- A list of available transducer factors or transducer sets.

The list shows the name of the transducer factor or set, its unit and its state.

- A button to filter the transducer factors that are displayed in the list.
The filter is available for transducer **factor** selection.
- A line that shows the comment of a transducer factor or set.
A comment is displayed only if one has been defined.

For more information on using transducer factors and sets see [chapter 3.2.7, "Transducers"](#), on page 54.

For more information on designing transducer factors and sets see

- ["Defining characteristics of a transducer factor"](#) on page 369
- ["Managing transducer sets"](#) on page 371

Using transducer factors or transducer sets ← Transducer

The "(Factor Set)" softkey selects if you want to use a transducer factor or set.

The label of the currently selected type of transducer is highlighted.

To actually include the transducer in the measurement, you first have to select one and turn it on with the "Active (On Off)" softkey. When the transducer factor is active, all amplitude settings and outputs take on the unit of the transducer factor. It will no longer be possible to select another unit. An exception is in case the transducer has the unit dB.

The name of the active transducer is displayed in the channel bar. To indicate the progress of the measurement, the diagram area also contains a green vertical line with the label "TF".

Note that you can turn on up to eight transducer factors at the same time. If you want to use more transducer factors in the same measurement, you have to combine them in a transducer set.

Remote command:

[\[SENSe:\]CORRection:TRANsdUcer:SElect](#) on page 745

[\[SENSe:\]CORRection:TRANsdUcer\[:STATe\]](#) on page 745

[\[SENSe:\]CORRection:TSET:SElect](#) on page 747

[\[SENSe:\]CORRection:TSET\[:STATe\]](#) on page 748

Defining characteristics of a transducer factor ← Transducer

Before you can define the characteristics of a transducer factor, make sure that you are actually using a transducer factor (→"(Factor Set)" softkey).

You can define the characteristics in several ways:

- Edit a transducer factor that already exists (→"Edit" softkey).
- Create a new transducer factor (→"New" softkey).
- Create a new transducer factor based on an existing one →("Copy To" softkey).

Each of the three options opens a dialog box that contains the functionality to characterize a transducer factor.

Position	Value
0.00 Hz	5.00 dB
1.00000000 MHz	5.00 dB

- 1 = Name and comment of the transducer factor (→"Edit Name" softkey)
 2 = Unit of the transducer factor (→"Edit Unit" softkey)
 3 = Linear or logarithmic scaling of the frequency axis (→"Edit Name" softkey)
 4 = Table of data points and graphical preview of the transducer factor (→"Edit Value" softkey)
 5 = Button to insert a data point in the table (→"Insert Value" softkey)
 6 = Button to delete a data point from the table (→"Delete Value" softkey)
 7 = Button to shift all data points of the transducer factor horizontally by a certain amount
 8 = Button to shift all data points of the transducer factor vertically by a certain amount
 9 = Button to save and store the transducer factor on the internal hard disk of the R&S ESRP (→"Save Factor" softkey)

Note that there are softkeys for several elements of the dialog box as mentioned in the legend above.

A transducer factor may consist of up to 625 data points. Each data point is a pair of values: the first value describes the frequency, the second value describes the level for that frequency.

Frequencies have to be entered in ascending order and may not overlap.

When you save the transducer factor, the R&S ESRP uses the name of the transducer factor as the file name. The file type is *.tdf. If a transducer factor of the same name already exists, the R&S ESRP will ask before it overwrites the existing file.

The transducer factors and sets are stored in separate but fix directories on the internal memory of the R&S ESRP. You can create subdirectories for a more concise file structure and display their contents with the "Show Directories" softkey (you have to select the directory first, though).

It is possible to delete a transducer factor at any time, if you do not need it anymore (→"Delete" softkey).

Dynamic range with active transducers

The shift of the trace caused by the transducer factor by a certain amount deteriorates the dynamic range of the measurement results.

To restore the original dynamic range, you have to compensate for the transducer factor. You can do this by adjusting the reference level accordingly. If you turn on the automatic adjustment of the reference level (→"Ref Level Adjust (Man Auto)" softkey), the R&S ESRP restores the original dynamic range as best as possible by changing the reference level by the maximum level shift defined in the active transducer factor.

Remote command:

[SENSe:]CORRection:TRANsducer:SElect on page 745

[SENSe:]CORRection:TRANsducer:COMMeNt on page 744

[SENSe:]CORRection:TRANsducer:UNIT on page 745

[SENSe:]CORRection:TRANsducer:SCALing on page 744

[SENSe:]CORRection:TRANsducer:DATA on page 744

[SENSe:]CORRection:TRANsducer:DELeTe on page 744

[SENSe:]CORRection:TRANsducer:ADJust:RLEVel[:STATe] on page 743

Managing transducer sets ← Transducer

Before you can define the contents of a transducer set, make sure that you are actually using a transducer set (→"(Factor Set)" softkey).

You can define the contents in several ways:

- Edit a transducer set that already exists (→"Edit" softkey).
- Create a new transducer set (→"New" softkey).
- Create a new transducer set based on an existing one (→"Copy To" softkey).

Each of the three options opens a dialog box that contains the functionality to define a transducer set.

Range	Frequency	Factors
1 ④	0.000 Hz 50.000 kHz	Transducer 3
2	50.000 kHz 500.000 kHz	
3	500.000 kHz 1.000 MHz	Transducer 1 Transducer 5
4	1.000 MHz 10.000 MHz	Transducer 2 Transducer 4

1 = Name and comment of the transducer set

2 = Unit of the transducer set

3 = Button to turn the transducer break on and off

4 = Table of transducer set ranges and corresponding frequencies and transducer factors

5 = Start and stop frequency of the currently selected range

6 = List of transducer ranges

For more information on using and designing transducer sets see ["Transducer sets"](#) on page 54.

Opening the dialog box also opens an additional softkey menu that contains functionality that you need to design a transducer set.

This softkey menu provides the function to

- insert ranges up to a maximum of 10 (→"Insert Range" softkey)
- delete ranges that already exist (→"Delete Range" softkey)
- add up to eight transducer factors to a range (→"Add Factor" softkey)
- replace a transducer factor that has been assigned with another one (→"Change Factor)" softkey)
- remove a transducer factor from the transducer set (→"Remove Factor" softkey)
- save the contents of the transducer set (→"Save Set" softkey)

Remote command:

[\[SENSe:\]CORRection:TSET:SElect](#) on page 747

[\[SENSe:\]CORRection:TSET:COMMeNT](#) on page 746

[\[SENSe:\]CORRection:TSET:UNIT](#) on page 748

[\[SENSe:\]CORRection:TSET:BRake](#) on page 746

[\[SENSe:\]CORRection:TSET:RANGe<range>](#) on page 747

[\[SENSe:\]CORRection:TSET:DElete](#) on page 747

Alignment

Opens a submenu with the available functions for recording, displaying and activating the data for self alignment.

The correction data and characteristics required for the alignment are determined by comparison of the results at different settings with the known characteristics of the high-precision calibration signal source at 65.83 MHz. The correction data are stored as a file on flash disk and can be displayed using the ["Show Align Results"](#) on page 372 softkey.

The submenu contains the following commands:

- ["Self Alignment"](#) on page 372
- ["Show Align Results"](#) on page 372
- ["Touch Screen Alignment"](#) on page 373

Self Alignment ← Alignment

Starts the recording of correction data of the instrument. If the correction data acquisition has failed or if the correction values are deactivated, a corresponding message is displayed in the status field.

As long as the self alignment data is collected the procedure can be cancelled using the "Abort" button.

Remote command:

[*CAL?](#) on page 710

Show Align Results ← Alignment

Opens a dialog box that displays the correction data of the alignment:

- date and time of last correction data record
- overall results of correction data record

- list of found correction values according to function/module

The results are classified as follows:

PASSED	calibration successful without any restrictions
CHECK	deviation of correction value larger than expected, correction could however be performed
FAILED	deviations of correction value too large, no correction was possible. The found correction data are not applicable.

Remote command:

[CALibration:REsult?](#) on page 729

Touch Screen Alignment ← Alignment

Displays a touch screen alignment dialog.

When the device is delivered, the touch screen is initially aligned. However, it may become necessary to adjust the alignment later, e.g. after an image update or after exchanging a hard disk. If you notice that touching a specific point on the screen does not achieve the correct response, you may try adjusting the alignment, as well. .

Using a finger or any other pointing device, press the 4 markers on the screen.

The touch screen is aligned according to the executed pointing operations.

General Setup

Opens a submenu for all general settings such as IP address and LAN settings, date and time, remote control (optional) and measurement display.

Configure Network ← General Setup

Opens the "Network Connections" dialog box to change the LAN settings. For details refer to the Quick Start Guide, chapter 2 "Preparing for Use" and appendix B "LAN Interface".

Network Address ← General Setup

Opens a submenu to configure the internet protocol properties and the computer name.

Computer Name ← Network Address ← General Setup

Opens an edit dialog box to enter the computer name via the keypad. The naming conventions of Windows apply. If too many characters and/or numbers are entered, in the status line, an according message is displayed. For step-by-step instructions refer to the Quick Start Guide, appendix B "LAN Interface".

IP Address ← Network Address ← General Setup

Opens an edit dialog box to enter the IP address via the keypad. The TCP/IP protocol is preinstalled with the IP address 10.0.0.10. If the DHCP server is available ("DHCP On"), the dialog box entry is read-only.

The IP address consists of four number blocks separated by dots. Each block contains 3 numbers in maximum (e.g. 100.100.100.100), but also one or two numbers are allowed in a block (as an example see the preinstalled address). For step-by-step instructions refer to the Quick Start Guide, chapter 2 "Preparing for Use".

Subnet Mask ← Network Address ← General Setup

Opens an edit dialog box to enter the subnet mask via the keypad. The TCP/IP protocol is preinstalled with the subnet mask 255.255.255.0. If the DHCP server is available ("DHCP On"), the dialog box entry is read-only.

The subnet mask consists of four number blocks separated by dots. Each block contains 3 numbers in maximum (e.g. 100.100.100.100), but also one or two numbers are allowed in a block (as an example see the preinstalled address). For step-by-step instructions refer to the Quick Start Guide, chapter 2 "Preparing for Use".

DHCP (On/Off) ← Network Address ← General Setup

Switches between DHCP server available (On) or not available (Off). If a DHCP server is available in the network, the IP address and subnet mask of the instrument are obtained automatically from the DHCP server. For further details refer to the Quick Start Guide, chapter 2 "Preparing for Use".

LXI ← General Setup

Opens the LXI submenu containing the following softkeys:

- "Info" on page 374
- "Password" on page 374
- "Description" on page 374
- "LAN Reset" on page 375

LXI functionality is available only for user accounts with administrator rights.

Info ← LXI ← General Setup

Shows the current parameters of LXI class C, including the current version, class and various computer parameters like the computer name or IP address.

While active, the dialog is not updated.

LXI functionality is available only for user accounts with administrator rights.

Remote command:

`SYSTem:LXI:INFo?` on page 779

Password ← LXI ← General Setup

Shows the currently set password. You can also change the current password using this softkey.

The password is required to change settings via the web browser (e.g. IP parameter). An empty password is not valid, i.e. you must enter a password.

By default, the password is *LxiWebIfc*.

LXI functionality is available only for user accounts with administrator rights.

Remote command:

`SYSTem:LXI:PASSword` on page 780

Description ← LXI ← General Setup

Opens a dialog box to view or change the LXI instrument description. This description is used on some of the LXI web sites.

By default, the description is "Signal Analyzer".

LXI functionality is available only for user accounts with administrator rights.

Remote command:

[SYSTem:LXI:MDEscription](#) on page 779

LAN Reset ← LXI ← General Setup

Resets the LAN configuration to a state required by the LXI standard. For example, the TCP/IP mode is set to DHCP and Dynamic DNS and ICMP Ping are enabled. In addition, the R&S ESRP sets the password and the instrument description to their initial states (see ["Password"](#) on page 374 and ["Description"](#) on page 374 softkeys).

Only user accounts with administrator rights can reset the LAN configuration.

Remote command:

[SYSTem:LXI:LANReset](#) on page 779

GPIB ← General Setup

Opens a submenu to set the parameters of the remote control interface.

GPIB Address ← GPIB ← General Setup

Opens an edit dialog box to enter the GPIB address. Values from 0 to 30 are allowed. The default address is 20.

Remote command:

[SYSTem:COMMunicate:GPIB\[:SELF\]:ADDRess](#) on page 778

ID String Factory ← GPIB ← General Setup

Selects the default response to the *IDN? query.

Remote command:

[SYSTem:IDENtify:FACTory](#) on page 719

ID String User ← GPIB ← General Setup

Opens an edit dialog box to enter a user-defined response to the *IDN? query. Max. 36 characters are allowed.

Remote command:

[SYSTem:IDENtify\[:STRing\]](#) on page 720

Compatibility Mode ← GPIB ← General Setup

Sets the R&S ESRP in a state compatible to previous R&S devices, enabling the usage of existing external control applications. In particular, the number of measurement points and available bandwidths are adjusted to those of other devices.

Furthermore, some special GPIB settings are available in order to emulate HP models (see [chapter 9.17, "GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E"](#), on page 828):

- ["GPIB Language"](#) on page 376
- ["IF Gain \(Norm/Puls\)"](#) on page 377
- ["Sweep Repeat \(On/Off\)"](#) on page 377
- ["Coupling \(FSx/HP\)"](#) on page 377

"Default" Standard R&S ESRP operation, see ["Mode Default"](#) on page 376

"R&S FSP" Compatible to R&S FSP, see ["Mode R&S FSP"](#) on page 376

"R&S FSU" Compatible to R&S FSU, see ["Mode R&S FSU"](#) on page 376

Remote command:

[SYSTem:COMPAtible](#) on page 715

Mode Default ← Compatibility Mode ← GPIB ← General Setup

Resets the number of measurement points and available bandwidths to default R&S ESRP values.

Remote command:

SYST:COMP DEF, see [SYSTem:COMPAtible](#) on page 715

Mode R&S FSP ← Compatibility Mode ← GPIB ← General Setup

Sets the number of measurement points and available bandwidths as in R&S FSP devices.

Remote command:

SYST:COMP FSP, see [SYSTem:COMPAtible](#) on page 715

Mode R&S FSU ← Compatibility Mode ← GPIB ← General Setup

Sets the number of measurement points and available bandwidths as in R&S FSU devices.

Remote command:

SYST:COMP FSU, see [SYSTem:COMPAtible](#) on page 715

GPIB Language ← Compatibility Mode ← GPIB ← General Setup

Opens a list of selectable remote-control languages:

Language	Comment
SCPI	
71100C	Compatible to 8566A/B
71200C	Compatible to 8566A/B
71209A	Compatible to 8566A/B
8560E	
8561E	
8562E	
8563E	
8564E	
8565E	
8566A	Command sets A and B are available. Command sets A and B differ in the rules regarding the command structure.
8566B	
8568A	Command sets A and B are available. Command sets A and B differ in the rules regarding the command structure.
8568A_DC	Uses DC input coupling by default if supported by the instrument

Language	Comment
8568B	Command sets A and B are available. Command sets A and B differ in the rules regarding the command structure.
8568B_DC	Uses DC input coupling by default if supported by the instrument
8591E	Compatible to 8594E
8594E	Command sets A and B are available. Command sets A and B differ in the rules regarding the command structure.

For details on the GPIB languages, see [chapter 9.17, "GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E"](#), on page 828.

Remote command:

[SYSTem:LANGuage](#) on page 781

IF Gain (Norm/Puls) ← Compatibility Mode ← GPIB ← General Setup

Configures the internal IF gain settings in HP emulation mode due to the application needs. This setting is only taken into account for resolution bandwidth < 300 kHz.

NORM	Optimized for high dynamic range, overload limit is close to reference level.
PULS	Optimized for pulsed signals, overload limit up to 10 dB above reference level.

This softkey is only available if a HP language is selected via the "GPIB Language" softkey (see ["GPIB Language"](#) on page 376).

Remote command:

[SYSTem:IFGain:MODE](#) on page 782

Sweep Repeat (On/Off) ← Compatibility Mode ← GPIB ← General Setup

Controls a repeated sweep of the E1 and MKPK HI/HL HP model commands (for details on the commands refer to ["GPIB Language"](#) on page 376). If the repeated sweep is OFF, the marker is set without sweeping before.

Note: In single sweep mode, switch off this softkey before you set the marker via the E1 and MKPK HI/HL commands in order to avoid sweeping again.

This softkey is only available if a HP language is selected via the "GPIB Language" softkey (see ["GPIB Language"](#) on page 376).

Remote command:

[SYSTem:RSW](#) on page 781

Coupling (FSx/HP) ← Compatibility Mode ← GPIB ← General Setup

Controls the default coupling ratios in the HP emulation mode for:

- span and resolution bandwidth (Span/RBW) and
- resolution bandwidth and video bandwidth (RBW/VBW)

For FSP(=FSV), the standard parameter coupling of the instrument is used. As a result, in most cases a shorter sweeptime is used than in case of HP.

This softkey is only available if a HP language is selected via the "GPIB Language" softkey (see ["GPIB Language"](#) on page 376).

Remote command:

[SYSTem:HPCoupling](#) on page 782

REV String Factory ← Compatibility Mode ← GPIB ← General Setup

Selects the default response to the `REV?` query for the revision number (HP emulation only, see [chapter 9.17, "GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E"](#), on page 828).

Remote command:

[SYSTem:REVision:FACTory](#) on page 780

REV String User ← Compatibility Mode ← GPIB ← General Setup

Opens an edit dialog box to enter a user-defined revision number in response to the `REV?` query (HP emulation only, see [chapter 9.17, "GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E"](#), on page 828). Max. 36 characters are allowed.

Remote command:

[SYSTem:REVision\[:STRing\]](#) on page 780

Display Update (On/Off) ← GPIB ← General Setup

Defines whether the instrument display is switched off when changing from manual operation to remote control. In remote control mode, this softkey is displayed in the local menu.

Remote command:

[SYSTem:DISPlay:UPDate](#) on page 715

GPIB Terminator LFEOL/EOI ← GPIB ← General Setup

Changes the GPIB receive terminator.

According to the standard, the terminator in ASCII is `<LF>` and/or `<EOI>`. For binary data transfers (e.g. trace data) from the control computer to the instrument, the binary code used for `<LF>` might be included in the binary data block, and therefore should not be interpreted as a terminator in this particular case. This can be avoided by changing the receive terminator to EOI.

Remote command:

[SYSTem:COMMunicate:GPIB\[:SELF\]:RTERminator](#) on page 778

***IDN Format Leg./New ← GPIB ← General Setup**

Defines the response format to the `*IDN?` remote command (see [*IDN?](#) on page 711). This function is intended for re-use of existing control programs together with the R&S ESRP.

"Leg"	Legacy format, compatible to the R&S FSP/FSU/FSQ family e.g. Rohde&Schwarz, FSV-7, 100005/007, 1.61
"New"	R&S ESRP format e.g. Rohde&Schwarz, FSV-7, 1307.9002K07/100005, 1.61

Remote command:

[SYSTem:FORMat:IDENt](#) on page 715

I/O Logging (On/Off) ← GPIB ← General Setup

Activates or deactivates the SCPI log function. All remote control commands received by the R&S ESRP are recorded in the following log file:

C:\R_S\Instr\scpi\logging\ScpiLog.txt

Logging the commands may be extremely useful for debug purposes, e.g. in order to find misspelled keywords in control programs.

Remote command:

[SYSTem:CLOGging](#) on page 714

Time+Date ← General Setup

Opens an edit dialog box to enter time and date for the internal real time clock. For details refer to the Quick Start Guide, chapter 2 "Preparing for Use".

Remote command:

[SYSTem:TIME](#) on page 717

[SYSTem:DATE](#) on page 718

Configure Monitor ← General Setup

Determines and displays the configuration of a connected external monitor, if available. In the configuration dialog box, you can switch from the internal monitor (laptop icon) to the external monitor (monitor icon), or both (double monitor icon). For external, the R&S ESRP display is disabled (turns dark). The screen content formerly displayed on the R&S ESRP is displayed on the external screen.

For further details refer to the Quick Start Guide, chapter 2 "Preparing for Use".

Soft Frontpanel ← General Setup

Activates or deactivates the display of the instrument emulation.

deactivated	Only the measurement screen is displayed. This is the setting for working at the R&S ESRP.
activated	In addition to the measurement screen, the whole front panel is displayed, i.e. the hardkeys and other hardware controls of the device are simulated on the screen. This is the setting for working at a computer with XP Remote Desktop or at an external monitor.

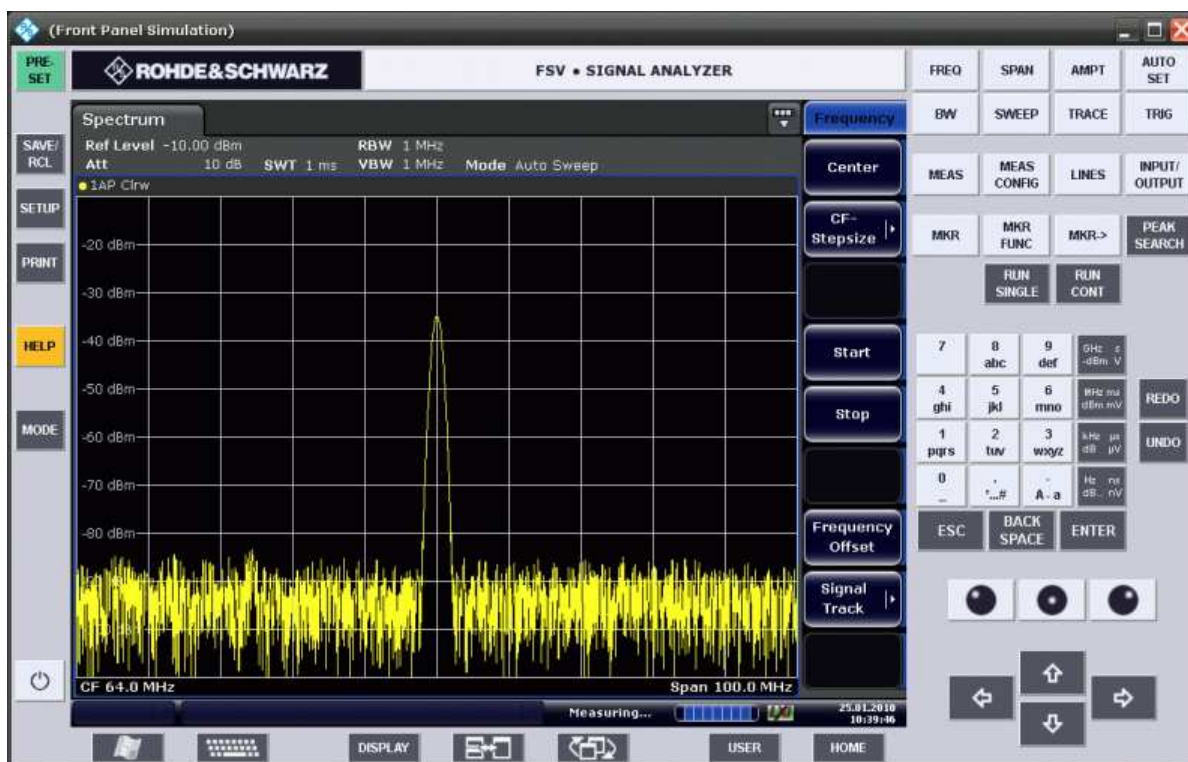


Fig. 7-1: Soft Frontpanel

Alternatively to this softkey, you can use the F6 key.

Remote command:

`SYSTem:DISPlay:FPANel` on page 717

Display Setup

Opens a submenu to define the display settings.

The following display settings are available:

- "Tool Bar State (On/Off)" on page 380
- "Screen Title (On/Off)" on page 381
- "Time+Date (On/Off)" on page 381
- "Time+Date Format (US/DE)" on page 381
- "Print Logo (On/Off)" on page 381
- "Annotation (On/Off)" on page 381
- "Theme Selection" on page 381
- "Screen Colors" on page 381
- "Print Colors" on page 383
- "Display Pwr Save (On/Off)" on page 384

Tool Bar State (On/Off) ← Display Setup

Displays or removes the tool bar above the diagram for standard file functions.

Remote command:

`DISPlay:TBAR[STATe]` on page 770

Screen Title (On/Off) ← Display Setup

Activates/deactivates the display of a diagram title (if available) and opens an edit dialog box to enter a new title for the active diagram. Max. 20 characters are allowed.

Remote command:

`DISPlay[:WINDow<n>]:TEXT[:DATA]` on page 773

`DISPlay[:WINDow<n>]:TIME` on page 773

Time+Date (On/Off) ← Display Setup

Activates/deactivates the display of date and time beneath the diagram.

Remote command:

`DISPlay[:WINDow<n>]:TIME` on page 773

Time+Date Format (US/DE) ← Display Setup

Switches the time and date display on the screen between US and German (DE).

Remote command:

`DISPlay[:WINDow<n>]:TIME:FORMat` on page 773

Print Logo (On/Off) ← Display Setup

Activates/deactivates the display of the Rohde & Schwarz company logo in the upper left corner.

Remote command:

`DISPlay:LOGO` on page 769

Annotation (On/Off) ← Display Setup

Activates/deactivates the display of the frequency information in the diagram footer. For example to protect confidential data it can be useful to hide the frequency information.

Remote command:

`DISPlay:ANNotation:FREQuency` on page 767

Theme Selection ← Display Setup

Opens a selection list of available themes for the screen display. The theme defines the colors used for keys and screen elements, for example. The default theme is "Blue-Ocean".

Remote command:

`DISPlay:THEMe:SElect` on page 770

Screen Colors ← Display Setup

Opens a submenu to configure the screen colors. For details on screen colors refer to the Quick Start Guide, chapter 2 "Preparing for Use".

The submenu contains the following commands:

- "Select Screen Color Set" on page 382
- "Color (On/Off)" on page 382
- "Select Object" on page 382
- "Predefined Colors" on page 382
- "User Defined Colors" on page 382

- "Set to Default" on page 383

Remote command:

`DISPlay:CMAP<item>:HSL` on page 768

Select Screen Color Set ← Screen Colors ← Display Setup

Opens the "Select Screen Color Set" dialog box to select default or user defined color settings.

If one of the default settings is selected ("Default Colors 1"/"2"), the default settings for brightness, color tint and color saturation for all display screen elements are restored. The default color schemes provide optimum visibility of all picture elements at an angle of vision from above or below. Default setting is "Default Colors 1".

If "User Defined Colors" is selected, a user-defined color set can be defined. For step-by-step instruction refer to the Quick Start Guide, chapter 2 "Preparing for Use".

Remote command:

`DISPlay:CMAP<item>:DEFault` on page 768

Color (On/Off) ← Screen Colors ← Display Setup

Switches from color display to black-and-white display and back. The default setting is color display.

Select Object ← Screen Colors ← Display Setup

Opens the "Color Setup" dialog box to select the color settings for a selected object.

The "Selected Object" list is displayed to select the object. For setting the color the pre-defined colors are displayed.

Remote command:

`DISPlay:CMAP<item>:HSL` on page 768

`HCOPy:CMAP<item>:HSL` on page 751

Predefined Colors ← Screen Colors ← Display Setup

In the "Color Setup" dialog box, displays the "Predefined Colors" (alternatively to the "Predefined Colors" button). This softkey is only available if, in the "Select Color Set" dialog box, the "User Defined Colors" option is selected or the "Color Setup" dialog box is displayed. For further details refer to the Quick Start Guide, chapter 2 "Preparing for Use".

Remote command:

`DISPlay:CMAP<item>:PDEFined` on page 768

`HCOPy:CMAP<item>:PDEFined` on page 751

User Defined Colors ← Screen Colors ← Display Setup

In the "Color Setup" dialog box, displays the "User Defined Colors" (alternatively to the "User Defined Colors" button). This softkey is only available if, in the "Select Color Set" dialog box, the "User Defined Colors" option is selected or the "Color Setup" dialog box is displayed. For further details refer to the Quick Start Guide, chapter 2 "Preparing for Use".

Remote command:

`DISPlay:CMAP<item>:HSL` on page 768

`HCOPy:CMAP<item>:HSL` on page 751

Set to Default ← Screen Colors ← Display Setup

Opens the "Set to Default" dialog box to select one of the factory default color settings.

Remote command:

`DISPlay:CMAP<item>:DEFault` on page 768

`HCOPy:CMAP<item>:DEFault` on page 750

Print Colors ← Display Setup

Opens a submenu to select the colors for the printout. To facilitate color selection, the selected color combination is displayed when the menu is entered. The previous colors are restored when the menu is exited. For details on screen colors refer to the Quick Start Guide, chapter 2 "Preparing for Use".

The submenu contains the following commands:

- "Select Print Color Set" on page 383
- "Color (On/Off)" on page 383
- "Select Object" on page 406
- "Predefined Colors" on page 406
- "User Defined Colors" on page 406
- "Set to Default" on page 406

Remote command:

`HCOPy:CMAP<item>:HSL` on page 751

Select Print Color Set ← Print Colors ← Display Setup

Opens the "Select Print Color Set" dialog box to select the color settings for printout.

Screen Colors (Print)	Selects the current screen colors for the printout. The background is always printed in white and the grid in black.
Screen Colors (Hardcopy)	Selects the current screen colors without any changes for a hard-copy. The output format is set via the "Device Setup" on page 405 softkey in the "Print" menu.
Optimized Colors	Selects an optimized color setting for the printout to improve the visibility of the colors (default setting). Trace 1 is blue, trace 2 black, trace 3 green, and the markers are turquoise. The background is always printed in white and the grid in black.
User Defined Colors	Enables the softkeys to define colors for the printout.

Remote command:

`HCOPy:CMAP<item>:DEFault` on page 750

Color (On/Off) ← Print Colors ← Display Setup

Switches from color printout to black-and-white printout and back. All colored areas are printed in white and all colored lines in black. This improves the contrast. The default setting is color printout, provided that the selected printer can produce color printouts.

Remote command:

`HCOPy:DEVice:COLor` on page 752

Display Pwr Save (On/Off) ← Display Setup

Switches the power-save mode for the display (On/Off) and opens an edit dialog box to enter the time for the power-save function to respond. After the elapse of this time the display is completely switched off, i.e. including backlighting. This mode is recommended when the instrument is exclusively operated in remote control.

For details on the power-save mode for the display refer to the Quick Start Guide, chapter 2 "Preparing for Use".

Remote command:

`DISPlay:PSAVe[:STATe]` on page 769

`DISPlay:PSAVe:HOLDoff` on page 769

System Info

Opens a submenu to display detailed information on module data, device statistics and system messages.

The submenu contains the following commands:

- "Hardware Info" on page 384
- "Versions+Options" on page 384
- "System Messages" on page 385
- "Clear All Messages" on page 385

Hardware Info ← System Info

Opens a dialog box that displays hardware information, e.g. on the frontend and motherboard. Every listed component is described by its serial number, order number, model information, hardware code, and hardware revision.

Remote command:

`DIAGnostic<n>:SERVice:HWInfo?` on page 719

Versions+Options ← System Info

Opens a dialog box that displays a list of hardware and firmware information, including:

Label	Description
Device ID	Unique ID of the device
Instrument Firmware	Installed firmware version
BIOS	Installed BIOS version
CPLD	CPLD version
MB-FPGA	Motherboard FPGA version
Data Sheet Version	Data sheet version of the basic device
<option>	Installed hardware and firmware options

For details on options refer to the Quick Start Guide, chapter 2 "Checking the Supplied Items".

Remote command:

*IDN? on page 711

*OPT? on page 711

SYSTem:DEVIce:ID?/SYSTem:DID? on page 718

System Messages ← System Info

Opens the "System Messages" dialog box that displays the generated system messages in the order of their occurrence. The most recent messages are placed at the top of the list. Messages that have occurred since the last display of system messages menu are marked with an asterisk '*'. The following information is available:

No	device-specific error code
Message	brief description of the message
Component	hardware messages: name of the affected module
	software messages: name of the affected software
Date/Time	date and time of the occurrence of the message

If the number of error messages exceeds the capacity of the error buffer, "Message buffer overflow" is displayed. To delete messages see "Clear All Messages" on page 385 softkey.

Remote command:

SYSTem:ERRor:LIST? on page 720

Clear All Messages ← System Info

Deletes all system messages. The softkey is only available if the "System Messages" dialog box is displayed.

Remote command:

SYSTem:ERRor:CLEAr:ALL on page 720

Parameter Coupling

Opens a dialog box to couple or decouple various parameters.

If the coupling of a parameter is on, its value is transferred when you switch from receiver into another operating mode and vice versa. Coupling of the following parameters is supported.

- Frequency
- Span (start and stop frequencies)
- Marker frequency
- RF attenuation and unit
- Preamplifier state
- Preselector state
Note that the preselector is always on in receiver mode.
- Audio demodulation settings
- Bandwidth settings (including filter type)
- Limit lines

Limit lines are only transferred if they are compatible to the current diagram configuration.

Remote command:

See [chapter 9.8.3, "Coupling Parameters"](#), on page 721

Firmware Update

Opens the "Firmware Update" dialog box.

Enter the name of or browse for the firmware installation file and press the "Execute" button. For details on installation refer to the Quick Start Guide, chapter 3 "Firmware Update and Installation of Firmware Options".

Only user accounts with administrator rights can perform a firmware update.

Remote command:

[SYSTem:FIRMware:UPDate](#) on page 715

Option Licenses

Opens a submenu to install options. For details on options refer to the Quick Start Guide, chapter 3 "Firmware Update and Installation of Firmware Options".

The submenu contains the following commands:

- ["Install Option"](#) on page 386
- ["Install Option by XML"](#) on page 386

Only user accounts with administrator rights are able to install options.

Install Option ← Option Licenses

Opens an edit dialog box to enter the license key for the option that you want to install.

If an option is about to expire, a message box is displayed to inform you. You can then use this softkey to enter a new license key.

If an option has already expired, a message box appears for you to confirm. In this case, all instrument functions are unavailable (including remote control) until the R&S ESRP is rebooted. You must then use the "Install Option" softkey to enter the new license key.

For more information about the option in question refer to the [System Info](#) softkey in the "Setup" menu.

Only user accounts with administrator rights are able to install options.

Install Option by XML ← Option Licenses

Opens an edit dialog to install an additional option to the R&S ESRP using an XML file. Enter or browse for the name of an XML file on the instrument that contains the option key and press "Select".

Only user accounts with administrator rights are able to install options.

Application Setup Recovery

Controls instrument behavior when switching between measurement applications, e.g. from "Spectrum" to "Analog Demod" and back.

If this softkey is activated, the current instrument settings are stored when you switch to a different application. When you switch back to the previous application, the corresponding instrument settings are restored. Thus, the settings of the individual applications are independent of each other.

If the softkey is deactivated (default), only a few parameters of the current instrument setting are passed between applications (e.g. center frequency, level settings).

Note that this setting is not deactivated during a preset operation, i.e. you must deactivate it manually, if necessary.

Remote command:

[SYSTem:APPLication:SRECovery\[:STATe\]](#) on page 714

Preset Receiver

Selects the default settings defined for the Receiver mode to be restored when you perform an instrument preset.

Remote command:

[SYSTem:PRESet:COMPatible](#) on page 716

Preset Spectrum

Selects the default settings defined for the Spectrum mode to be restored when you perform an instrument preset.

Remote command:

[SYSTem:PRESet:COMPatible](#) on page 716

Service

Opens a submenu that contains additional functions for maintenance and/or troubleshooting.

NOTICE! Risk of incorrect operation due to Service functions. The service functions are not necessary for normal measurement operation. However, incorrect use can affect correct operation and/or data integrity of the R&S ESRP.

Therefore, many of the functions can only be used after entering a password. They are described in the instrument service manual.

The submenu contains the following commands:

- ["Input Source"](#) on page 387
- ["Reset Password"](#) on page 388
- ["Selftest"](#) on page 388
- ["Selftest Results"](#) on page 388
- ["Password"](#) on page 388
- ["Service Function"](#) on page 388

Only user accounts with administrator rights are able to use service functions.

Input Source ← Service

Opens a submenu to select the input source for measurement.

The submenu contains the following options:

- ["RF"](#) on page 388
- ["Calibration Frequency RF"](#) on page 388

RF ← Input Source ← Service

Switches the input of the R&S ESRP to the RF input connector (normal position). This is the default setting.

Remote command:

[DIAGnostic<n>:SERvice:INPut\[:SElect\]](#) on page 729

Calibration Frequency RF ← Input Source ← Service

Opens an edit dialog box to set the generator frequency for the internal calibration.

Remote command:

[DIAGnostic<n>:SERvice:INPut:PULSed:CFRequency](#) on page 729

Reset Password ← Service

Deactivates all set passwords.

Remote command:

[SYSTem:PASSword:RESet](#) on page 732

Selftest ← Service

Initiates the self test of the instrument modules to identify a defective module in case of failure. All modules are checked consecutively and the test result is displayed.

Remote command:

[*TST?](#) on page 713

Selftest Results ← Service

Opens the "Selftest Result" dialog box that contains the test results. In case of failure a short description of the failed test, the defective module, the associated value range and the corresponding test results are indicated.

Remote command:

[DIAGnostic<n>:SERvice:STESSt:RESult?](#) on page 730

Password ← Service

Opens an edit dialog box to enter the password. This ensures that the service functions are only used by authorized personnel.

Remote command:

[SYSTem:PASSword\[:CENable\]](#) on page 732

Service Function ← Service


Opens the "Service Function" dialog box to start special service functions. For further information refer to the service manual.

Remote command:


[DIAGnostic<n>:SERvice:SFUNction](#) on page 731

7.3.2 Activating or Deactivating the LXI Class C Functionality

1. In the Windows XP "Start" menu, select the "LXI" entry and press the ENTER key. An LXI configuration dialog box is displayed.

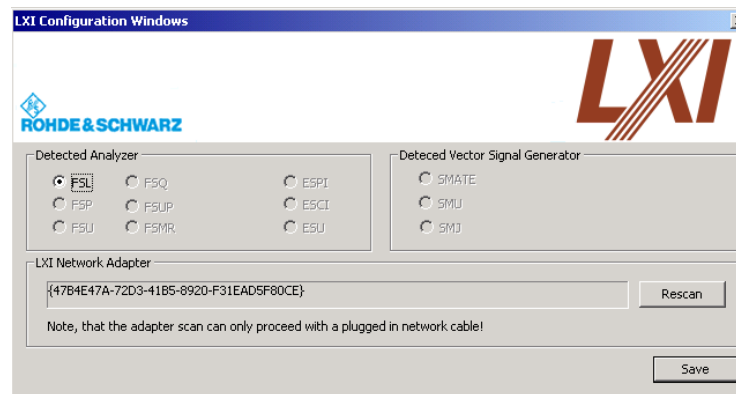

2. Press the "Rescan" button.
3. Press the "Save" button.
The instrument reboots and after the reboot LXI is active.
4. To deactivate the LXI Class C functionality perform step 1 and 2 again.
An LXI configuration dialog box is displayed.

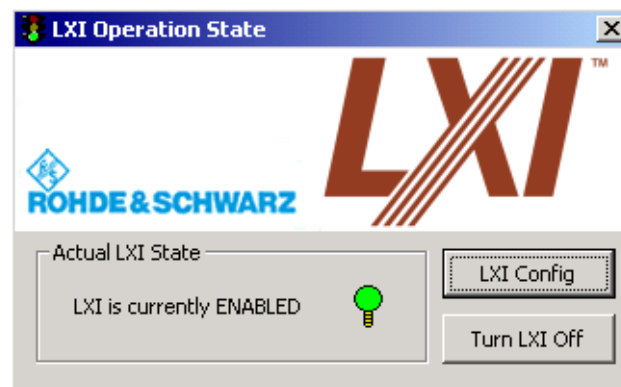

5. Press the "Turn LXI Off" button.

7.3.3 LXI Class C Functionality

If the LXI Class C functionality is installed and enabled (default state is off; see [chapter 7.3.1, "Softkeys of the Setup Menu"](#), on page 365), the instrument can be accessed via any web browser (e.g. the Microsoft Internet Explorer) to perform the following tasks:

- modifying network configurations
- modifying device configurations
- monitoring connections from the device to other devices

To change settings, in the web browser, open the "http://<instrument-hostname>" or "http://<instrument-ip-address>" page. The password to change LAN configurations is *LxiWeb*.

8 Data Management and Documentation

8.1 Saving and Recalling Settings Files – SAVE/RCL Key

The SAVE/RCL key is used to store and recall an instrument configuration.

The "Save/Recall" menu enables the user to save or recall the configuration file from the instrument's internal storage, a memory stick or a network drive. The file can also include various settings used by the options installed on the instrument. Measurement results can also be stored; however, it is strongly recommended that you use the "Print Screen" or "Trace Export" functions instead.



When recalling a saved configuration file, the following restrictions apply:

- Configuration files cannot be transferred from an R&S ESRP with a larger frequency range to one with a smaller frequency range
- Configuration files created on a R&S ESRP with certain options in use will not work on an R&S ESRP without these options
- Files created with newer firmware versions may not work with a previous version

To open the Save/Recall menu

- ▶ Press the SAVE/RCL key.
The "Save/Recall" menu is displayed.

Menu and softkey description

- [chapter 8.1.1, "Softkeys of the SAVE/RCL Menu"](#), on page 390

Further information

- [chapter 8.1.2, "File Selection Dialog Boxes"](#), on page 396
- [chapter 8.1.3, "Importing and Exporting I/Q Data"](#), on page 399

8.1.1 Softkeys of the SAVE/RCL Menu

The following table shows all softkeys available in the "Save/Recall" menu.

Save.....	391
L Save File / Recall File.....	391
L Select Path.....	392
L Select File.....	392
L Edit File Name.....	392
L Edit Comment.....	392
L Select Items.....	392
L Select Items.....	392

L Enable all Items.....	392
L Disable all Items.....	392
L Delete File.....	392
Recall.....	393
Startup Recall.....	393
L Startup Recall (On/Off).....	393
L Select Dataset.....	393
ScreenShot.....	393
Export.....	393
L ASCII Trace Export.....	393
L Decim Sep.....	394
L IQ Export.....	394
Import.....	394
L IQ Import.....	394
File Manager.....	394
L Edit Path.....	395
L New Folder.....	395
L Copy.....	395
L Rename.....	395
L Cut.....	395
L Paste.....	395
L Delete.....	395
L Sort Mode.....	395
L Name.....	396
L Date.....	396
L Extension.....	396
L Size.....	396
L File Lists (1/2).....	396
L Current File List (1/2).....	396
L Network Drive.....	396
L Map Network Drive.....	396
L Disconnect Network Drive.....	396

Save

Opens the "Save" dialog box to define which measurement settings and results to store. To navigate in the dialog box and define/enter data, use the corresponding soft-keys.

For details see also [chapter 8.1.2, "File Selection Dialog Boxes"](#), on page 396.

Save File / Recall File ← Save

Saves the settings file with the defined file name ("Save" dialog box), or recalls the selected settings file ("Recall" dialog box).

You can assign stored settings files to user-definable softkeys in the "User" menu for easy access, see [chapter 7.2, "User-Defined Menu – USER key"](#), on page 364 .

Remote command:

[MMEMory:STORe<n>:STATe](#) on page 740

[MMEMory:STORe<n>:STATe:NEXT](#) on page 741

[MMEMory:LOAD:STATe](#) on page 739

Select Path ← Save

Opens the directory list to select the drive and folder for the settings file to be stored or loaded. The default path is C:\r_s\instr\user.

Select File ← Save

Sets the focus on the "Files" list.

Remote command:

[MMEMory:CATalog?](#) on page 733

Edit File Name ← Save

Sets the focus on the "File Name" field.

Edit Comment ← Save

Sets the focus on the "Comment" field to enter a comment for the settings file. Max. 60 characters are allowed.

Select Items ← Save

Displays the submenu for selecting the items to be stored or loaded.

Select Items ← Select Items ← Save

Sets the focus on the items list. Which items are available depends on the installed options.

In the "Save" dialog box, all items that can be saved are displayed.

In the "Recall" dialog box, the items saved in the selected file are displayed.

Remote command:

[MMEMory:SElect\[:ITEM\]:HWSettings](#) on page 774

[MMEMory:SElect\[:ITEM\]:LINEs:ALL](#) on page 775

[MMEMory:SElect\[:ITEM\]:TRACe\[:ACTive\]](#) on page 776

[MMEMory:SElect\[:ITEM\]:TRANsducer:ALL](#) on page 776

Enable all Items ← Select Items ← Save

Selects all items for saving or loading.

Remote command:

[MMEMory:SElect\[:ITEM\]:ALL](#) on page 774

Disable all Items ← Select Items ← Save

Selects none of the items for saving or loading.

Remote command:

[MMEMory:SElect\[:ITEM\]:NONE](#) on page 775

Delete File ← Save

Deletes the selected settings file.

Remote command:

[MMEMory:CLEar:STATe 1,](#) on page 738

Recall

Opens the "Recall" dialog box to load a settings file. To navigate in the dialog box, use the corresponding softkeys.

For details see also [chapter 8.1.2, "File Selection Dialog Boxes"](#), on page 396.

Path	Directory from which the settings file is loaded. The default path for user settings files is C:\r_s\instr\user
Files	List of stored settings files
File Name	Name of settings file
Comment	Comment of the settings file
[Items]	Items saved in the settings file

Note: After you use the "Recall" function, the history of previous actions is deleted, i.e. any actions performed previously cannot be undone or redone using the UNDO/REDO keys.

Remote command:

[MMEMory:LOAD:STATe](#) on page 739

Startup Recall

Opens a submenu to activate or deactivate and set up the startup recall function.

Startup Recall (On/Off) ← Startup Recall

Activates or deactivates the startup recall function. If activated, the settings stored in the file selected via the [Select Dataset](#) softkey are loaded when booting or for preset. If deactivated, the default settings are loaded.

Remote command:

[MMEMory:LOAD:AUTO](#) on page 738

Select Dataset ← Startup Recall

Opens the "Startup Recall" dialog box to select the settings file for the startup recall function.

ScreenShot

Saves the current measurement screen as a file (screenshot). This function can also be performed via the "Screenshot" icon in the toolbar, if available.

Remote command:

[HCOPY\[:IMMediate<1|2>\]](#) on page 755

Export

Opens a submenu to configure data export.

ASCII Trace Export ← Export

Opens the "ASCII Trace Export Name" dialog box and saves the active trace in ASCII format to the specified file and directory.

The file consists of the header containing important scaling parameters and a data section containing the trace data. For details on an ASCII file see [chapter 4.3.1.6, "ASCII File Export Format"](#), on page 273.

This format can be processed by spreadsheet calculation programs, e.g. MS-Excel. It is necessary to define ';' as a separator for the data import. Different language versions of evaluation programs may require a different handling of the decimal point. It is therefore possible to select between separators '.' (decimal point) and ',' (comma) using the "Decim Sep" softkey (see ["Decim Sep"](#) on page 78).

If the spectrogram display is selected when you perform this function, the entire histogram buffer with all frames is exported to a file. The data corresponding to a particular frame begins with information about the frame number and the time that frame was recorded. For large history buffers the export operation may take some time.

Remote command:

[FORMat:DEXPort:DSEParator](#) on page 656

[MMEMory:STORe<n>:TRACe](#) on page 656

[MMEMory:STORe:SGRam](#) on page 469

Decim Sep ← Export

Selects the decimal separator with floating-point numerals for the ASCII Trace export to support evaluation programs (e.g. MS-Excel) in different languages. The values '.' (decimal point) and ',' (comma) can be set.

Remote command:

[FORMat:DEXPort:DSEParator](#) on page 656

IQ Export ← Export

Opens a file selection dialog box to select an export file to which the IQ data will be stored. This function is only available in single sweep mode.

For details see [chapter 8.1.3, "Importing and Exporting I/Q Data"](#), on page 399.

Remote command:

[MMEMory:STORe:IQ:STATe](#) on page 740

[MMEMory:STORe:IQ:COMM](#) on page 740

Import

Provides functions to import data.

IQ Import ← Import

Opens a file selection dialog box to select an import file that contains IQ data. This function is only available in single sweep mode.

For details see [chapter 8.1.3, "Importing and Exporting I/Q Data"](#), on page 399.

Remote command:

[MMEMory:LOAD:IQ:STATe](#) on page 692

File Manager

Opens the "File Manager" dialog box and a submenu to manage mass storage media and files. In the upper left corner, the current drive is displayed. Below the folders and subfolders of the current directory are displayed.

For details on navigation see also [chapter 8.1.2, "File Selection Dialog Boxes"](#), on page 396.

The following tasks can be performed:

- copying files from flash disk to other media
- copying files into another directory
- renaming and deleting files

Edit Path ← File Manager

Opens the directory list to select the drive and folder for the file to be stored or loaded. The default path is `C:\r_s\instr\user`.

Remote command:

[MMEMory:MSIS](#) on page 737

[MMEMory:CDIRectory](#) on page 734

New Folder ← File Manager

Creates a new folder and opens an edit dialog box to enter name and path (absolute or relative to the current directory) of the new folder.

Remote command:

[MMEMory:MDIRectory](#) on page 736

Copy ← File Manager

Copies the selected item to the clipboard. The item can be copied later using the [Paste](#) softkey.

Remote command:

[MMEMory:COPY](#) on page 735

Rename ← File Manager

Opens an edit dialog box to enter a new file or folder name.

Remote command:

[MMEMory:MOVE](#) on page 736

Cut ← File Manager

Copies the selected file to the clipboard. If the file is later copied to a different directory using the [Paste](#) softkey, it is deleted in the current directory.

Paste ← File Manager

Copies a file from the clipboard to the currently selected directory.

Delete ← File Manager

Deletes the selected item after confirmation.

Remote command:

[MMEMory:DELeTe](#) on page 736

[MMEMory:RDIRectory](#) on page 737

Sort Mode ← File Manager

Opens a submenu to select the sorting mode for the displayed files. The entry for the next higher directory level ("..") and the folders are always located at the top of the list.

Name ← Sort Mode ← File Manager

Sorts the displayed files in alphabetical order of the file names.

Date ← Sort Mode ← File Manager

Sorts the displayed files in respect to the date.

Extension ← Sort Mode ← File Manager

Sorts the displayed files in respect to the extension.

Size ← Sort Mode ← File Manager

Sorts the displayed files in respect to the size.

File Lists (1/2) ← File Manager

Splits the screen to copy files from one directory to the other. The focus between the two panes is switched using the FIELD RIGHT and FIELD LEFT keys.

Current File List (1/2) ← File Manager

Changes the focus to the selected file list.

Network Drive ← File Manager

Opens the "Map Network Drive" dialog box and submenu.

Map Network Drive ← Network Drive ← File Manager

Sets the focus on the "Drive" list.

Remote command:

[MMEMory:NETWork:MAP](#) on page 777

[MMEMory:NETWork:USEDdrives?](#) on page 778

[MMEMory:NETWork:UNUSeddrives?](#) on page 778

Disconnect Network Drive ← Network Drive ← File Manager


Opens the "Disconnect Network Drive" dialog box. In the "Drive" list, select the drive you want to disconnect and confirm with "OK".

Remote command:

[MMEMory:NETWork:DISConnect](#) on page 777

8.1.2 File Selection Dialog Boxes

The "Save" and "Recall" dialog boxes are used to save and recall settings and data files. The "File Manager" allows you to copy, delete or rename data files on the R&S ESRP. These and other file selection dialog boxes are very similar.

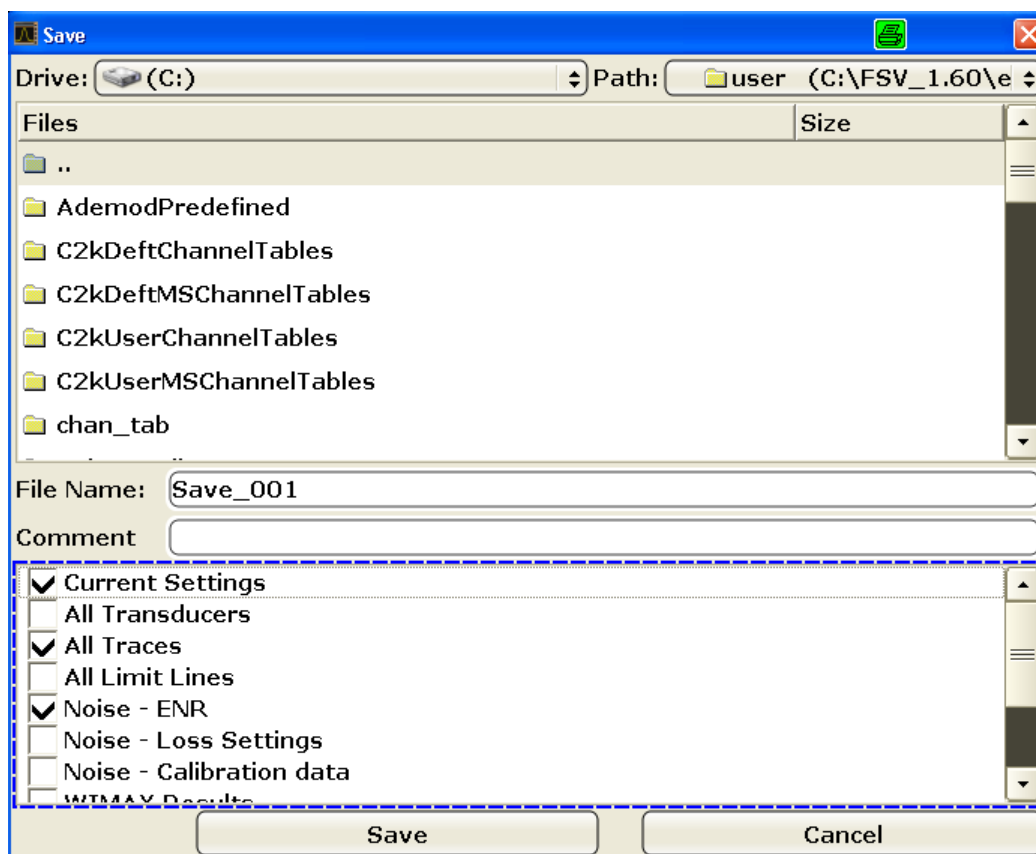

Drive

The data is stored on the internal flash disk or, if selected, on a memory stick or network drive. The mass media are assigned to the volume names as follows:

Drive	Designation	Comment
C	operating system, firmware and stored instrument settings	for customer data
A	USB floppy drive	if connected
D	USB memory stick or USB CD-ROM	if connected
E ...Z	additional USB mass storage devices or mounted LAN volumes	if connected

Path

The current path contains the drive and the complete file path to the currently selected folder.

To set the focus on the "Path" list, press the [Select Path/](#) [Edit Path](#) softkey.

Files

This list contains the files and folders contained in the currently selected path.

To set the focus on the "Files" list, press the [Select File](#) softkey.

File Name

The "File Name" field contains the name of the data file without the path or extension.

To set the focus on "File Name" field, press the [Edit File Name](#) softkey.

In the "Save" dialog box, the field already contains a suggestion for a new name: the file name used in the last saving process is used, extended by an index. For example, if the name last used was `test_004`, the new name `test_005` is suggested, but only if this name is not in use. You can change the suggested name as you like.

By default, the name of a settings file consists of a base name followed by an underscore and three numbers, e.g. `limit_lines_005`. In the example, the base name is `limit_lines`. The base name can contain characters, numbers and underscores. The file extension `df1` is added automatically.

Comment

The comment is optional and may contain a description for the data file.

To set the focus on the "Comment" field, press the [Edit Comment](#) softkey.

Items

When saving data files you can select which data and settings are stored; when recalling such files, this field indicates which items were included during storage. In the "File Manager", this field is not available.

Which items are available depends on the installed options. The following items may be included:

Item	Description
Current Settings	Current measurement settings
All Transducers	Transducer factors for all active transducers.
All Traces	All active traces; R&S FSV-K30 only: also calibration data
All Limit Lines	All limit lines (Note: information on which limit lines are active is stored with the "Current Settings")
Spectrograms	Spectrogram trace data (only available if spectrogram display is currently active, R&S FSV-K14 only)
Noise - ENR	Data in "ENR Settings" dialog box (R&S FSV-K30 only)
Noise - Loss Settings	Data in "Loss Settings" dialog box (R&S FSV-K30 only)
Noise - Calibration data	Results from calibration measurement (R&S FSV-K30 only)
K40 Results	All current phase noise trace results (R&S FSV-K40 only)
WLAN Results	Stores the trace and table results for WLAN measurements (R&S FSV-K91 only)
WLAN IQ Data	Stores the measured I/Q data (R&S FSV-K91 only)

Item	Description
WLAN User Limits	Stores any limit values modified in the table of results for WLAN measurements (R&S FSV-K91 only)
WiMAX Results	Stores the trace and table results for WiMAX measurements (R&S FSV-K93 only)

8.1.3 Importing and Exporting I/Q Data

In addition to instrument settings and displayed traces, also captured I/Q data can be exported to a file on the R&S ESRP. The stored data can then be imported again at a later time, also by different applications, for further processing.

As opposed to storing trace data, which may be averaged or restricted to peak values, I/Q data is stored as it was captured, without further processing. The data is stored as complex values in 32-bit floating-point format. The I/Q data is stored in a packed format with the file extension `.iq.tar`.

The [IQ Import](#) and [IQ Export](#) functions are available from the "Save/Recall" menu, which is displayed when you press the SAVE/RCL key on the front panel.

They can also be performed remotely using the following commands:

`MMEMory:STORe:IQ:STATe` on page 740

`MMEMory:LOAD:IQ:STATe` on page 692

8.1.3.1 iq-tar File Format Specification

I/Q data is stored in a compressed format with the file extension `.iq.tar`.

An `.iq.tar` file contains I/Q data in binary format together with meta information that describes the nature and the source of data, e.g. the sample rate. The objective of the `.iq.tar` file format is to separate I/Q data from the meta information while still having both inside one file. In addition, the file format allows you to preview the I/Q data in a web browser, and allows you to include user-specific data.

Contained files

An `iq-tar` file must contain the following files:

- **I/Q parameter XML file**, e.g. `xyz.xml`
Contains meta information about the I/Q data (e.g. sample rate). The filename can be defined freely, but there must be only one single I/Q parameter XML file inside an `iq-tar` file.
- **I/Q data binary file**, e.g. `xyz.complex.float32`
Contains the binary I/Q data of all channels. There must be only one single I/Q data binary file inside an `iq-tar` file.

Optionally, an `iq-tar` file can contain the following file:

- **I/Q preview XSLT file**, e.g. `open_IqTar_xml_file_in_web_browser.xslt`

Contains a stylesheet to display the I/Q parameter XML file and a preview of the I/Q data in a web browser.

I/Q Parameter XML File Specification



The content of the I/Q parameter XML file must comply with the XML schema `RsIqTar.xsd` available at: <http://www.rohde-schwarz.com/file/RsIqTar.xsd>.

In particular, the order of the XML elements must be respected, i.e. `iq-tar` uses an "ordered XML schema". For your own implementation of the `iq-tar` file format make sure to validate your XML file against the given schema.

The following example shows an I/Q parameter XML file. The XML elements and attributes are explained in the following sections.

Sample I/Q parameter XML file: xyz.xml

```
<?xml version="1.0" encoding="UTF-8"?>
<?xml-stylesheet type="text/xsl"
href="open_IqTar_xml_file_in_web_browser.xslt"?>
<RS_IQ_TAR_FileFormat fileFormatVersion="1"
xsi:noNamespaceSchemaLocation="RsIqTar.xsd"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
  <Name>FSV-K10</Name>
  <Comment>Here is a comment</Comment>
  <DateTime>2011-01-24T14:02:49</DateTime>
  <Samples>68751</Samples>
  <Clock unit="Hz">6.5e+006</Clock>
  <Format>complex</Format>
  <DataType>float32</DataType>
  <ScalingFactor unit="V">1</ScalingFactor>
  <NumberOfChannels>1</NumberOfChannels>
  <DataFilename>xyz.complex.float32</DataFilename>
  <UserData>
    <UserDefinedElement>Example</UserDefinedElement>
  </UserData>
  <PreviewData>...</PreviewData>
</RS_IQ_TAR_FileFormat>
```

Element	Description
RS_IQ_TAR_FileFormat	The root element of the XML file. It must contain the attribute <code>fileFormatVersion</code> that contains the number of the file format definition. Currently, <code>fileFormatVersion "2"</code> is used.
Name	Optional: describes the device or application that created the file.
Comment	Optional: contains text that further describes the contents of the file.
DateTime	Contains the date and time of the creation of the file. Its type is <code>xs:dateTime</code> (see <code>RsIqTar.xsd</code>).

Element	Description
Samples	Contains the number of samples of the I/Q data. For multi-channel signals all channels have the same number of samples. One sample can be: • A complex number represented as a pair of I and Q values • A complex number represented as a pair of magnitude and phase values • A real number represented as a single real value See also <code>Format</code> element.
Clock	Contains the clock frequency in Hz, i.e. the sample rate of the I/Q data. A signal generator typically outputs the I/Q data at a rate that equals the clock frequency. If the I/Q data was captured with a signal analyzer, the signal analyzer used the clock frequency as the sample rate. The attribute <code>unit</code> must be set to "Hz".
Format	Specifies how the binary data is saved in the I/Q data binary file (see <code>DataFilename</code> element). Every sample must be in the same format. The format can be one of the following: • Complex: Complex number in cartesian format, i.e. I and Q values interleaved. I and Q are unitless • Real: Real number (unitless) • Polar: Complex number in polar format, i.e. magnitude (unitless) and phase (rad) values interleaved. Requires <code>DataType</code> = <code>float32</code> or <code>float64</code>
DataType	Specifies the binary format used for samples in the I/Q data binary file (see <code>DataFilename</code> element and "I/Q Data Binary File" on page 403). The following data types are allowed: • <code>int8</code>: 8 bit signed integer data • <code>int16</code>: 16 bit signed integer data • <code>int32</code>: 32 bit signed integer data • <code>float32</code>: 32 bit floating point data (IEEE 754) • <code>float64</code>: 64 bit floating point data (IEEE 754)
ScalingFactor	Optional: describes how the binary data can be transformed into values in the unit Volt. The binary I/Q data itself has no unit. To get an I/Q sample in the unit Volt the saved samples have to be multiplied by the value of the <code>ScalingFactor</code>. For polar data only the magnitude value has to be multiplied. For multi-channel signals the <code>ScalingFactor</code> must be applied to all channels. The <code>ScalingFactor</code> must be > 0. If the <code>ScalingFactor</code> element is not defined, a value of 1 V is assumed.
NumberOfChannels	Optional: specifies the number of channels, e.g. of a MIMO signal, contained in the I/Q data binary file. For multi-channels, the I/Q samples of the channels are expected to be interleaved within the I/Q data file (see "I/Q Data Binary File" on page 403). If the <code>NumberOfChannels</code> element is not defined, one channel is assumed.
DataFilename	Contains the filename of the I/Q data binary file that is part of the <code>iq-tar</code> file. It is recommended that the filename uses the following convention: <xyz>.<Format>.<Channels>ch.<Type> • <xyz> = a valid Windows file name • <Format> = complex, polar or real (see <code>Format</code> element) • <Channels> = Number of channels (see <code>NumberOfChannels</code> element) • <Type> = <code>float32</code>, <code>float64</code>, <code>int8</code>, <code>int16</code>, <code>int32</code> or <code>int64</code> (see <code>DataType</code> element) Examples: • <code>xyz.complex.1ch.float32</code> • <code>xyz.polar.1ch.float64</code> • <code>xyz.real.1ch.int16</code> • <code>xyz.complex.16ch.int8</code>

Element	Description
UserData	Optional: contains user, application or device-specific XML data which is not part of the <code>iq-tar</code> specification. This element can be used to store additional information, e.g. the hardware configuration. It is recommended that you add user data as XML content.
PreviewData	Optional: contains further XML elements that provide a preview of the I/Q data. The preview data is determined by the routine that saves an <code>iq-tar</code> file (e.g. R&S ESRP). For the definition of this element refer to the <code>RsIqTar.xsd</code> schema. Note that the preview can be only displayed by current web browsers that have JavaScript enabled and if the XSLT stylesheet <code>open_IqTar_xml_file_in_web_browser.xslt</code> is available.

Example: ScalingFactor

Data stored as `int16` and a desired full scale voltage of 1 V

$\text{ScalingFactor} = 1 \text{ V} / \text{maximum int16 value} = 1 \text{ V} / 2^{15} = 3.0517578125\text{e-}5 \text{ V}$

	Numerical value	Numerical value x ScalingFactor
Minimum (negative) int16 value	$-2^{15} = -32768$	-1 V
Maximum (positive) int16 value	$2^{15}-1 = 32767$	0.999969482421875 V

Example: PreviewData in XML

```

<PreviewData>
  <ArrayOfChannel length="1">
    <Channel>
      <PowerVsTime>
        <Min>
          <ArrayOfFloat length="256">
            <float>-95</float>
            <float>-94</float>
            ...
            <float>-93</float>
          </ArrayOfFloat>
        </Min>
        <Max>
          <ArrayOfFloat length="256">
            <float>0</float>
            <float>-41</float>
            ...
            <float>0</float>
          </ArrayOfFloat>
        </Max>
      </PowerVsTime>
      <Spectrum>
        <Min>
          <ArrayOfFloat length="256">
            <float>-107</float>
            <float>-96</float>

```

```

...
    <float>-94</float>
  </ArrayOfFloat>
</Min>
<Max>
  <ArrayOfFloat length="256">
    <float>-25</float>
    <float>1</float>
    ...
    <float>1</float>
  </ArrayOfFloat>
</Max>
</Spectrum>
</Channel>
</ArrayOfChannel>
</PreviewData>

```

I/Q Data Binary File

The I/Q data is saved in binary format according to the format and data type specified in the XML file (see `Format` element and `DataType` element). To allow reading and writing of streamed I/Q data all data is interleaved, i.e. complex values are interleaved pairs of I and Q values and multi-channel signals contain interleaved (complex) samples for channel 1, channel 2, channel 3 etc.

Example: NumberOfChannels - Element ordering for complex cartesian data

Complex data: I[channel no][time index], Q[channel no][time index]

```

I[0][0], Q[0][0],           // Channel 0, Complex sample 0
I[1][0], Q[1][0],           // Channel 1, Complex sample 0
I[2][0], Q[2][0],           // Channel 2, Complex sample 0

I[0][1], Q[0][1],           // Channel 0, Complex sample 1
I[1][1], Q[1][1],           // Channel 1, Complex sample 1
I[2][1], Q[2][1],           // Channel 2, Complex sample 1

I[0][2], Q[0][2],           // Channel 0, Complex sample 2
I[1][2], Q[1][2],           // Channel 1, Complex sample 2
I[2][2], Q[2][2],           // Channel 2, Complex sample 2

I[0][3], Q[0][3],           // Channel 0, Complex sample 3
I[1][3], Q[1][3],           // Channel 1, Complex sample 3
I[2][3], Q[2][3],           // Channel 2, Complex sample 3

...

```

8.2 Measurement Documentation – PRINT Key

The PRINT key is used to select and configure the printer and to customize the screen printout. For detailed information on printer selection and installation refer to the First Steps.

To open the Print menu

- Press the PRINT key.
The "Print" menu is displayed.

Softkeys of the Print Menu

The following table shows all softkeys available in the "Print" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

Print Screen.....	404
Device Setup.....	405
Device (1/2).....	405
Colors.....	405
L Select Print Color Set.....	405
L Color (On/Off).....	405
L Select Object.....	406
L Predefined Colors.....	406
L User Defined Colors.....	406
L Set to Default.....	406
Comment.....	406
Install Printer.....	406
Report.....	406

Print Screen

Starts to printout all test results displayed on the screen: diagrams, traces, markers, marker lists, limit lines etc. Comments, title, date, and time are included at the bottom margin of the printout. All displayed items belonging to the instrument software (softkeys, tables, dialog boxes) are not printed out.

The output is defined via the "Device Setup" on page 405 softkey. If the output is saved in a file, the file name used in the last saving process is counted up to the next unused name. If you use a file name that already exists, upon saving, a message is displayed. Selecting "Yes" overwrites the existing file, selecting "No" aborts the saving process. For further details on the file name and an example, refer to the "Save/Recall" menu, "Edit File Name" on page 392 softkey.

Path	Directory in which the file is stored. The default path is C:\r_s\instruser
Files	List of the existing files in the same format
File Name	Name of the file

Remote command:

[HCOpy\[:IMMediate<1|2>\]](#) on page 755

[HCOpy\[:IMMediate<1|2>\]:NEXT](#) on page 755

[HCOpy:ITEM:ALL](#) on page 753

Device Setup

Opens the "Hardcopy Setup" dialog box to define the output: image file, clipboard, or the printer. The dialog box consists of two tabs which are selected via the ["Device \(1/2\)"](#) on page 405 softkey.

For further information refer to the First Steps.

Remote command:

[HCOpy:DEvIce:LANGUage<1|2>](#) on page 753

[HCOpy:DESTination<1|2>](#) on page 752

[HCOpy:PAGE:ORientation<1|2>](#) on page 754

[HCOpy:TDSTamp:STATe<1|2>](#) on page 754

[SYSTem:COMMUnicate:PRINter:ENUMerate:FIRSt?](#) on page 756

[SYSTem:COMMUnicate:PRINter:ENUMerate\[:NEXT\]?](#) on page 756

Device (1/2)

Selects the tab of the device in the "Device Setup" dialog box. The analyzer is able to manage two print settings independently of each other. For each device the print setting is displayed on the corresponding tab of the "Device Setup" dialog box (["Device Setup"](#) on page 405 softkey).

For further information refer to the First Steps.

Colors

Opens a submenu to define the colors to be used. For details see ["Print Colors"](#) on page 383 softkey of the "Setup" menu.

The submenu contains the following commands:

- ["Select Print Color Set"](#) on page 405
- ["Color \(On/Off\)"](#) on page 405
- ["Select Object"](#) on page 406
- ["Predefined Colors"](#) on page 406
- ["User Defined Colors"](#) on page 406
- ["Set to Default"](#) on page 406

Select Print Color Set ← Colors

For details see ["Select Print Color Set"](#) on page 383 softkey of the "Setup" menu.

Color (On/Off) ← Colors

For details see ["Color \(On/Off\)"](#) on page 382 softkey of the "Setup" menu.

Select Object ← Colors

For details see ["Select Object"](#) on page 382 softkey of the "Setup" menu.

Predefined Colors ← Colors

For details see ["Predefined Colors"](#) on page 382 softkey of the "Setup" menu.

User Defined Colors ← Colors

For details see ["User Defined Colors"](#) on page 382 softkey of the "Setup" menu.

Set to Default ← Colors

For details see ["Set to Default"](#) on page 383 softkey of the "Setup" menu.

Comment

Opens dialog box to enter a comment. Max. 120 characters are allowed. 60 characters fit in one line. In the first line, at any point a manual line-feed can be forced by entering "@".

Date and time are inserted automatically. The comment is printed below the diagram area, but not displayed on the screen. If a comment should not be printed, it must be deleted.

For details on the alphanumeric entries refer to the First Steps, "Basic Operations".

Remote command:

[HCOPY:ITEM:WINDow:TEXT](#) on page 754

Install Printer

Opens the "Printers and Faxes" window to install a new printer. All printers that are already installed are displayed.

For further information refer to the First Steps, appendix 1, "Printer Interface".

Only user accounts with administrator rights can install a printer.

Report

Provides access to the test report tool. For more information see [chapter 8.3, "Working with Test Reports"](#), on page 406.

8.3 Working with Test Reports

The R&S ESRP features a test report generator. A test report is a document that summarizes the results and configuration of measurements.

A test report is made up out of one or more datasets. Each dataset contains the results and configuration of one measurement.

- [Designing a Test Report Template](#)..... 407
- [Creating a Test Report](#).....410

8.3.1 Designing a Test Report Template

The R&S ESRP allows you to create test report templates, for example if you handle different measurement tasks that require different information or a different layout in the test report. The following topics show you ways to customize your test reports and save those settings in a template.

Selecting the Test Report Contents.....	407
Designing the Header of the Test Report.....	408
Defining the Contents of the Title Page.....	409
Managing Templates.....	409

Selecting the Test Report Contents

The "Configuration" tab selects the information that each dataset in the test report contains. You can add or remove the items as required.

Item	Use
Header	☒
Settings	☒
Scan Table	☒
Diagram	☒
Final Results	☒
Transducer Table	☐
Scan Result List	☐
IF Analysis	☐
Spectrogram	☐
IF Analysis Spectrogram	☐
Markers	☐
Date	☒
Page Count	☒

You can select to include the following types of information. (Note that the Spectrum application does not support all elements.)

- Header
Adds a page header to the dataset.
For more information see ["Designing the Header of the Test Report"](#) on page 408.
- Settings
Adds the general measurement configuration to the dataset (for example the frequency range, the resolution bandwidth or the measurement time).
- Scan Table
Adds the configuration for each scan subrange as defined in the scan table to the dataset. For more information see [chapter 3.3.7.2, "Scan Table"](#), on page 68.
- Diagram
Adds a screenshot of the scan trace to the dataset.
- Final Results
Adds the (numerical) results of the final measurement to the dataset.
- Transducer Table
Adds the transducers that you are using for the measurement, and their characteristics to the dataset.

For more information see ["Transducer"](#) on page 368.

- Scan Result List
Adds the numerical scan results to the dataset.
Note that the test report will show only the results of the first 50000 measurement points. The rest is cut off.
- IF Analysis
Adds a screenshot of the IF analysis trace to the dataset.
- Spectrogram
Adds a screenshot of the spectrogram trace to the dataset.
- IF Analysis Spectrogram
Adds a screenshot of the IF analysis spectrogram trace to the dataset.
- Markers
Adds the marker information to the dataset.
- Date
Adds a time stamp to the dataset (system date and time).
- Page Count
Adds a page count to the dataset.

Remote command:

[HCOPY:TREPort:ITEM:SElect](#) on page 757

Designing the Header of the Test Report

The "Header" tab selects the information displayed in the page header.

You can create page headers consisting of up to **seven lines**, plus **one picture** (for example a company logo). Each of the seven lines consists of a **title** (which is printed in bold characters) and a **value** (which is displayed next to the title, but in normal characters). In addition, you can select how each line in the header is treated (the **visibility**).

Configuration			Header	Title	Templates
Title	Value	Visibility			
Heading	Oooh, a headline!	Always ▾			
Meas Type	Testing features.	Always ▾			
Equipment under Test	Not sure...	Always ▾			
Manufacturer	Homemade!	Always ▾			
OP Condition	What's OP?	Always ▾			
Operator	Me, myself and I	Always ▾			
Test Spec	Not using one...	Always ▾			
Logo		... Never ▾			

- Title
Defines a name for a variable that has different values depending on the measurement (for example the name of the EUT). The firmware comes with some predefined titles, but you can change and customize each title.
- Value

- Defines the value of the variable defined by the title.
- **Visibility**
Selects if a line in the page header is displayed on every page in the report ("Always"), on the first page of a dataset ("Once") or not at all ("Never").
By default, all lines are displayed on all pages in the report.

Adding a logo

The page header may also contain a picture or logo. You can upload a picture with the "...". The "..." symbol opens a dialog box to select a file.

Reports in rtf format support pictures in bmp or jpg format. Reports in pdf format support pictures in bmp, jpg and png format.

Similar to the alphanumeric lines in the header, you can select the visibility for the logo as well. By default, the logo is not displayed in the report.

Remote command:

Title: `HCOPY:TREPort:ITEM:HEADer:LINE<line>:TITLE` on page 760

Value: `HCOPY:TREPort:ITEM:HEADer:LINE<line>:TEXT` on page 760

Visibility: `HCOPY:TREPort:ITEM:HEADer:LINE<line>:CONTrol` on page 759

Selection of logo: `HCOPY:TREPort:ITEM:LOGO` on page 761

Visibility of logo: `HCOPY:TREPort:ITEM:LOGO:CONTrol` on page 761

Defining the Contents of the Title Page

The "Title" tab defines the contents of the first page of the test report (title page).

You can define a title for the test report, which is printed in big and bold letters on the first page, and a short description of the contents of the test report (or the name of the author or something similar). This description is also part of the first test report page, but is printed in normal letters.

In addition you can select the format of the test report (either DIN A4 or US letter size).

The screenshot shows a software window with four tabs: Configuration, Header, Title, and Templates. The 'Title' tab is active. It contains three input fields: 'Title' with the text 'MY FIRST TEST REPORT!!!!', 'Description' with the text 'the input boxes looks like when you print out the report.....', and 'Page Size' with a dropdown menu set to 'A4'.

Remote command:

Title: `HCOPY:TREPort:TITLE` on page 762

Description: `HCOPY:TREPort:DEScriptio` on page 761

Managing Templates

The "Templates" tab allows you manage test report templates.


Template	Origin
A test report	Receiver
And another one	Receiver
Another test report	Receiver

- Load
Restores the selected test report configuration.
- Save
Saves the current test report configuration. Before you save the configuration as a template, enter a name for the template in the corresponding field.
- Delete
Deletes the selected test report template.

The table shows all available templates, including the application it has been created in (Receiver, Spectrum or I/Q Analyzer).

8.3.2 Creating a Test Report

- In the "Test Report" softkey menu, press the "Save" button.
The R&S ESRP opens the "Test Report Content Selection" dialog box that contains all necessary functions to create a test report.

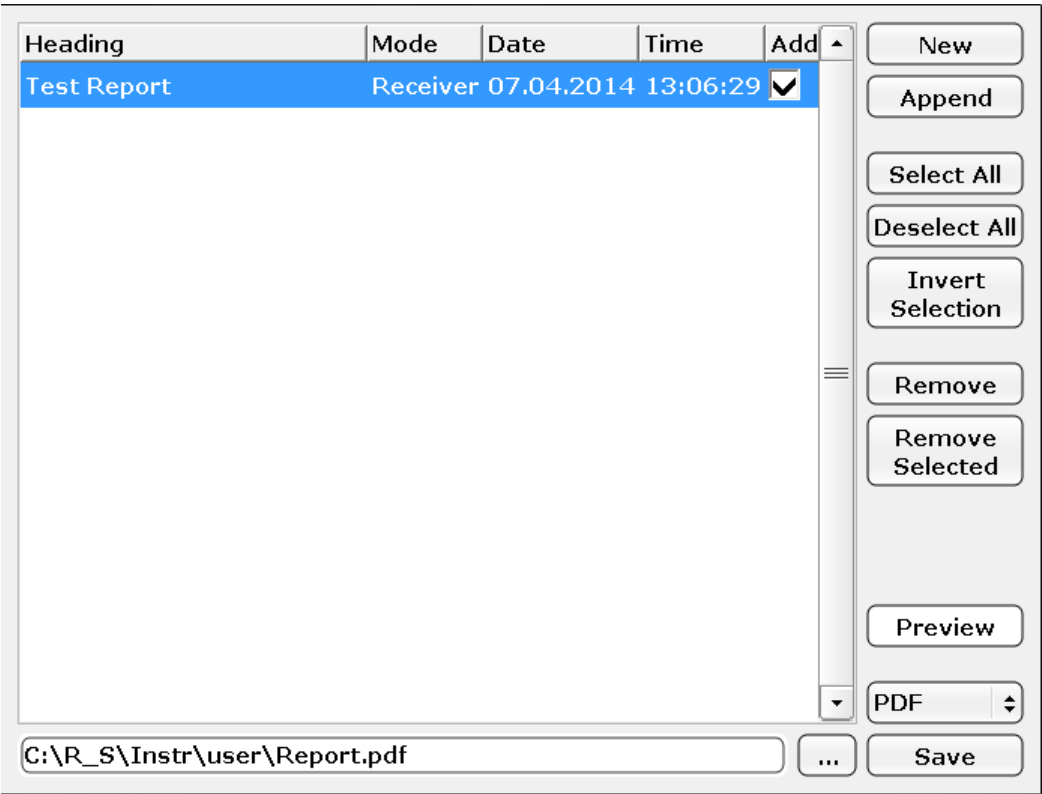

Configuring and Printing the Test Report.....	411
Adding and Removing Datasets.....	411
Selecting Datasets for the Report.....	412

Configuring and Printing the Test Report

You can save the test report either as a **pdf** document or an **rtf** document in the corresponding dropdown menu in the "Test Report Content Selection" dialog box.

The "Preview" button opens a preview version of the test report. Available for test reports in pdf format.

The "Save" button saves the test report in the directory you have specified in the input field next to the "Save" button. You can specify the directory with the "..." button or by entering a path and filename into the input field.

- Remote command:
- Print report: `HCOPy[:IMMediate<1|2>]` on page 755
 - Report name and directory: `MMEMoRY:NAME` on page 737
 - Format: `HCOPy:DEVIce:LANGuage<1|2>` on page 753

Adding and Removing Datasets

Before you can print a test report, you have to fill it with data.

Data in case of the test report comes in datasets. Each dataset contains the results of one measurement.

The "New" button or softkey creates a new test report. The last measurement result is added to the report. If you create a new report, the datasets of the previous report are lost.

The "Append" button or softkey adds a dataset to the current report.

The "Remove" button removes the selected dataset.

The "Remove Selection" removes all currently selected datasets.

Note that a test report has to contain at least one dataset.

When you add a dataset ("New" or "Append"), the R&S ESRP opens a dialog box to define the values of the header variables.

Heading	
Meas Type	
Equipment under Test	
Manufacturer	
OP Condition	
Operator	
Test Spec	
Ok Cancel	

Enter descriptions of the variables as required.

For more information on changing the labels of the header see ["Designing the Header of the Test Report"](#) on page 408

Remote command:

New report: `HCOPY:TREPort:NEW` on page 764

Add dataset: `HCOPY:TREPort:APPend` on page 764

Remove single dataset: `HCOPY:TREPort:TEST:REMOve` on page 765

Remove several datasets: `HCOPY:TREPort:TEST:REMOve:SELEcted` on page 765

Selecting Datasets for the Report

When you add a dataset to the report, it is automatically included in the test report. You can exclude a dataset from the test report without removing the data itself in the "Add" column of the "Test Report Content Selection" dialog box: if a dataset is not checked in that column, the data is still available, but not part of the test report.

To make selecting datasets easier, the R&S ESRP provides the "Select All" (selects all datasets), "Deselect All" (selects no dataset) and "Invert Selection" (selects all currently deselected datasets and vice versa) buttons.

Remote command:

Select a single dataset: `HCOPY:TREPort:TEST:SELEct` on page 765

Select all datasets: `HCOPY:TREPort:TEST:SELEct:ALL` on page 766

Invert selection: `HCOPY:TREPort:TEST:SELEct:INVErt` on page 766

Select no dataset: `HCOPY:TREPort:TEST:SELEct:NONE` on page 766

9 Remote Control

• Remote Control - Basics.....	413
• Selecting the Operating Mode.....	454
• Remote Commands in Receiver Mode.....	455
• Remote Commands in Spectrum Analyzer Mode.....	532
• Remote Commands in I/Q Analyzer Mode.....	691
• Remote Commands to Control the Tracking Generator.....	703
• Common Commands.....	709
• System Configuration.....	713
• Data Management.....	732
• Using Transducers.....	741
• Documentation.....	748
• Working with Test Reports.....	757
• Display Configuration.....	767
• Network Connection.....	777
• Status Register.....	782
• Remote Control – Programming Examples.....	786
• GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E.....	828

9.1 Remote Control - Basics

This chapter provides basic information on operating an instrument via remote control.



The computer that is used for remote operation is called "controller" here.

9.1.1 Remote Control Interfaces and Protocols

The instrument supports different interfaces for remote control. The following table gives an overview.

Table 9-1: Remote control interfaces and protocols

Interface	Protocols, VISA ^{*)} address string	Remarks
Local Area Network (LAN)	Protocols: • HiSLIP High-Speed LAN Instrument Protocol (IVI-6.1) TCPIP::host address::hislip0[::INSTR] • VXI-11 • socket communication (Raw Ethernet, simple Telnet) TCPIP::host address[::LAN device name]:<port>::SOCKET Library: VISA or socketcontroller • RSIB • simple telnet (Raw Ethernet) VISA ^{*)} address string: TCPIP::host address[::LAN device name][::INSTR]	A LAN connector is located on the rear panel of the instrument. The interface is based on TCP/IP and supports various protocols. For a description of the protocols refer to: • HiSLIP Protocol • "VXI-11 Protocol" on page 417 • Socket Communication • "RSIB Protocol" on page 418 • "Telnet Protocol" on page 419
GPIB (IEC/ IEEE Bus Interface)	VISA ^{*)} address string: GPIB::primary address[::INSTR] (no secondary address)	A GPIB bus interface according to the IEC 625.1/IEEE 488.1 standard is located on the rear panel of the instrument. For a description of the interface refer to chapter 9.1.1.4, "GPIB Interface (IEC 625/IEEE 418 Bus Interface)" , on page 419.
^{*)} VISA is a standardized software interface library providing input and output functions to communicate with instruments. A VISA installation on the controller is a prerequisite for remote control using the indicated interfaces (see also chapter 9.1.1.1, "VISA Libraries" , on page 415).		



Within this interface description, the term GPIB is used as a synonym for the IEC/IEEE bus interface.

SCPI (Standard Commands for Programmable Instruments)

SCPI commands - messages - are used for remote control. Commands that are not taken from the SCPI standard follow the SCPI syntax rules. The instrument supports the SCPI version 1999. The SCPI standard is based on standard IEEE 488.2 and aims at the standardization of device-specific commands, error handling and the status registers. The tutorial "Automatic Measurement Control - A tutorial on SCPI and IEEE 488.2" from John M. Pieper (R&S order number 0002.3536.00) offers detailed information on concepts and definitions of SCPI.

The requirements that the SCPI standard places on command syntax, error handling and configuration of the status registers are explained in detail in the following sec-

tions. Tables provide a fast overview of the bit assignment in the status registers. The tables are supplemented by a comprehensive description of the status registers.

9.1.1.1 VISA Libraries

VISA is a standardized software interface library providing input and output functions to communicate with instruments. The I/O channel (LAN or TCP/IP, USB, GPIB,...) is selected at initialization time by means of the channel-specific address string ("VISA resource string") indicated in [table 9-1](#), or by an appropriately defined VISA alias (short name). A VISA installation is a prerequisite for remote control using the VXI-11, raw socket, RSIB or the newer HiSLIP protocol. The necessary VISA library is available as a separate product. For details contact your local R&S sales representative.

For more information on VISA refer to the user documentation.

9.1.1.2 Messages

The messages transferred on the data lines are divided into the following categories:

- **Interface messages**
Interface messages are transmitted to the instrument on the data lines, with the attention line being active (LOW). They are used to communicate between the controller and the instrument. Interface messages can only be sent by instruments that have GPIB bus functionality. For details see the sections for the required interface.
- **Instrument messages**
Instrument messages are employed in the same way for all interfaces, if not indicated otherwise in the description. Structure and syntax of the instrument messages are described in [chapter 9.1.4, "SCPI Command Structure"](#), on page 424. A detailed description of all messages available for the instrument is provided in the chapter "Remote Control Commands".
There are different types of instrument messages, depending on the direction they are sent:
 - Commands
 - Instrument responses

Commands

Commands (program messages) are messages the controller sends to the instrument. They operate the instrument functions and request information. The commands are subdivided according to two criteria:

- According to the effect they have on the instrument:
 - **Setting commands** cause instrument settings such as a reset of the instrument or setting the frequency.
 - **Queries** cause data to be provided for remote control, e.g. for identification of the instrument or polling a parameter value. Queries are formed by directly appending a question mark to the command header.
- According to their definition in standards:
 - **Common commands**: their function and syntax are precisely defined in standard IEEE 488.2. They are employed identically on all instruments (if implemen-

ted). They refer to functions such as management of the standardized status registers, reset and self test.

- **Instrument control commands** refer to functions depending on the features of the instrument such as frequency settings. Many of these commands have also been standardized by the SCPI committee. These commands are marked as "SCPI confirmed" in the command reference chapters. Commands without this SCPI label are device-specific; however, their syntax follows SCPI rules as permitted by the standard.

Instrument responses

Instrument responses (response messages and service requests) are messages the instrument sends to the controller after a query. They can contain measurement results, instrument settings and information on the instrument status.

9.1.1.3 LAN Interface

To be integrated in a LAN, the instrument is equipped with a LAN interface, consisting of a connector, a network interface card and protocols. The network card can be operated with a 10 MHz Ethernet IEEE 802.3 or a 100 MHz Ethernet IEEE 802.3u interface. For remote control via a network, the PC and the instrument must be connected via the LAN interface to a common network with TCP/IP network protocol. They are connected using a commercial RJ45 cable (shielded or unshielded twisted pair category 5). The TCP/IP network protocol and the associated network services are preconfigured on the instrument. Software for instrument control and the VISA program library must be installed on the controller.

VISA library

Instrument access via VXI-11 or RSIB protocols is usually achieved from high level programming platforms using VISA as an intermediate abstraction layer. VISA encapsulates the low level VXI, RSIB or even GPIB function calls and thus makes the transport interface transparent for the user. See [chapter 9.1.1.1, "VISA Libraries"](#), on page 415 for details.

IP address

Only the IP address or a valid DNS host name is required to set up the connection. The host address is part of the "VISA resource string" used by the programs to identify and control the instrument.

The VISA resource string has the form:

```
TCPIP::host address[::LAN device name][::INSTR]
```

or

```
TCPIP::host address::port::SOCKET
```

where:

- **TCPIP** designates the network protocol used
- **host address** is the IP address or host name of the device

- **LAN device name** defines the protocol and the instance number of a sub-instrument;
 - `inst0` selects the VXI-11 protocol (default)
 - `hislip0` selects the newer HiSLIP protocol
- **INSTR** indicates the instrument resource class (optional)
- **port** determines the used port number
- **SOCKET** indicates the raw network socket resource class

Example:

- Instrument has the IP address *192.1.2.3*; the valid resource string using VXI-11 protocol is:
`TCPIP::192.1.2.3::INSTR`
- The instrument name is *RSFSV*; the valid resource string is:
`TCPIP::RSFSV::INSTR`
- A raw socket connection can be established using:
`TCPIP::192.1.2.3::5025::SOCKET`
- The DNS host name name is *FSV-123456*; the valid resource string using HiSLIP is:
`TCPIP::FSV-123456::hislip0`

**Identifying instruments in a network**

If several instruments are connected to the network, each instrument has its own IP address and associated resource string. The controller identifies these instruments by means of the resource string.

For details on configuring the LAN connection, see "Setting Up a Network (LAN) Connection" in the First Steps.

VXI-11 Protocol

The VXI-11 standard is based on the ONC RPC (Open Network Computing Remote Procedure Call) protocol which in turn relies on TCP/IP as the network/transport layer. The TCP/IP network protocol and the associated network services are preconfigured. TCP/IP ensures connection-oriented communication, where the order of the exchanged messages is adhered to and interrupted links are identified. With this protocol, messages cannot be lost.

HiSLIP Protocol

The HiSLIP (**H**igh **S**peed **L**AN **I**nstrument **P**rotocol) is the successor protocol for VXI-11 for TCP-based instruments specified by the IVI foundation. The protocol uses two TCP sockets for a single connection - one for fast data transfer, the other for non-sequential control commands (e.g. `Device Clear` or `SRQ`).

HiSLIP has the following characteristics:

- High performance as with raw socket network connections

- Compatible IEEE 488.2 support for Message Exchange Protocol, Device Clear, Serial Poll, Remote/Local, Trigger, and Service Request
- Uses a single IANA registered port (4880), which simplifies the configuration of firewalls
- Supports simultaneous access of multiple users by providing versatile locking mechanisms
- Usable for IPv6 or IPv4 networks



Note that HiSLIP data is sent to the device using the "fire and forget" method with immediate return, as opposed to VXI-11, where each operation is blocked until a VXI-11 device handshake returns. Thus, a successful return of a VISA operation such as `viWrite()` does not guarantee that the instrument has finished or started the requested command, but is delivered to the TCP/IP buffers.

For more information see also the application note at: <http://www.rohde-schwarz.com/appnote/1MA208>.

Socket Communication

An alternative way for remote control of the software is to establish a simple network communication using sockets. The socket communication, also referred to as "Raw Ethernet communication", does not necessarily require a VISA installation on the remote controller side. It is available by default on all operating systems.

The simplest way to establish socket communication is to use the built-in telnet program. The telnet program is part of every operating system and supports a communication with the software on a command-by-command basis. For more convenience and to enable automation by means of programs, user-defined sockets can be programmed.

Socket connections are established on a specially defined port. The socket address is a combination of the IP address or the host name of the instrument and the number of the port configured for remote-control. All R&S ESRP use port number 5025 for this purpose. The port is configured for communication on a command-to-command basis and for remote control from a program.

RSIB Protocol

The R&S defined RSIB protocol uses the TCP/IP protocol for communication with the instrument. Remote control over RSIB is done on a message level basis using the SCPI command set of the instrument. The RSIB protocol allows you to control the instrument for example via Visual C++- and Visual Basic programs, via the Windows applications Word and Excel, as well as via National Instruments LabView, LabWindows/CVI, Agilent VEE and others. The control applications run on an external computer in the network.

RSIB Interface Functions

The library functions are adapted to the interface functions of National Instruments for GPIB programming. The functions supported by the libraries are listed in the following table.

Function	Description
RSDLLibfind()	Provides a handle for access to a device.
RSDLLibwrt()	Sends a zero-terminated string to a device.
RSDLLiwrft()	Sends a certain number of bytes to a device.
RSDLLibwrtf()	Sends the contents of a file to a device.
RSDLLibrd()	Reads data from a device into a string.
RSDLLiird()	Reads a certain number of bytes from a device.
RSDLLibrdf()	Reads data from a device into a file.
RSDLLibtmo()	Sets timeout for RSIB functions.
RSDLLibsre()	Switches a device to the local or remote state.
RSDLLibloc()	Temporarily switches a device to the local state.
RSDLLibeot()	Enables/disables the END message for write operations.
RSDLLibrsp()	Performs a serial poll and provides the status byte.
RSDLLibonl()	Sets the device online/offline.
RSDLLTestSrq()	Checks whether a device has generated an SRQ.
RSDLLWaitSrq()	Waits until a device generates an SRQ.
RSDLLSwapBytes	Swaps the byte sequence for binary numericdisplay (only required for non-Intel platforms).

Telnet Protocol

As an alternative to remote control the instrument can use a simple telnet protocol (port 5025). Unlike using the VXI-11 protocol, no VISA installation is necessary on the remote controller side. This protocol is sometimes also referred to as "socket communication" or "Raw Ethernet mode". To control the instrument, only a Telnet program is required. The Telnet program is part of every operating system.

9.1.1.4 GPIB Interface (IEC 625/IEEE 418 Bus Interface)

To be able to control the instrument via the GPIB bus, the instrument and the controller must be linked by a GPIB bus cable. A GPIB bus card, the card drivers and the program libraries for the programming language used must be provided in the controller. The controller must address the instrument with the GPIB bus address (see ["GPIB Instrument Address"](#) on page 422).

Notes and Conditions

In connection with the GPIB interface, note the following:

- Up to 15 instruments can be connected
- The total cable length is restricted to a maximum of 15 m or 2 m times the number of devices, whichever is less; the cable length between two instruments should not exceed 2 m.

- A wired "OR"-connection is used if several instruments are connected in parallel.
- Any connected IEC-bus cables should be terminated by an instrument or controller.

GPIO Interface Messages

Interface messages are transmitted to the instrument on the data lines, with the attention line (ATN) being active (LOW). They are used for communication between the controller and the instrument and can only be sent by a computer which has the function of a GPIO bus controller. GPIO interface messages can be further subdivided into:

- **Universal commands:** act on all instruments connected to the GPIO bus without previous addressing
- **Addressed commands:** only act on instruments previously addressed as listeners

The following figure provides an overview of the available communication lines used by the GPIO interface.

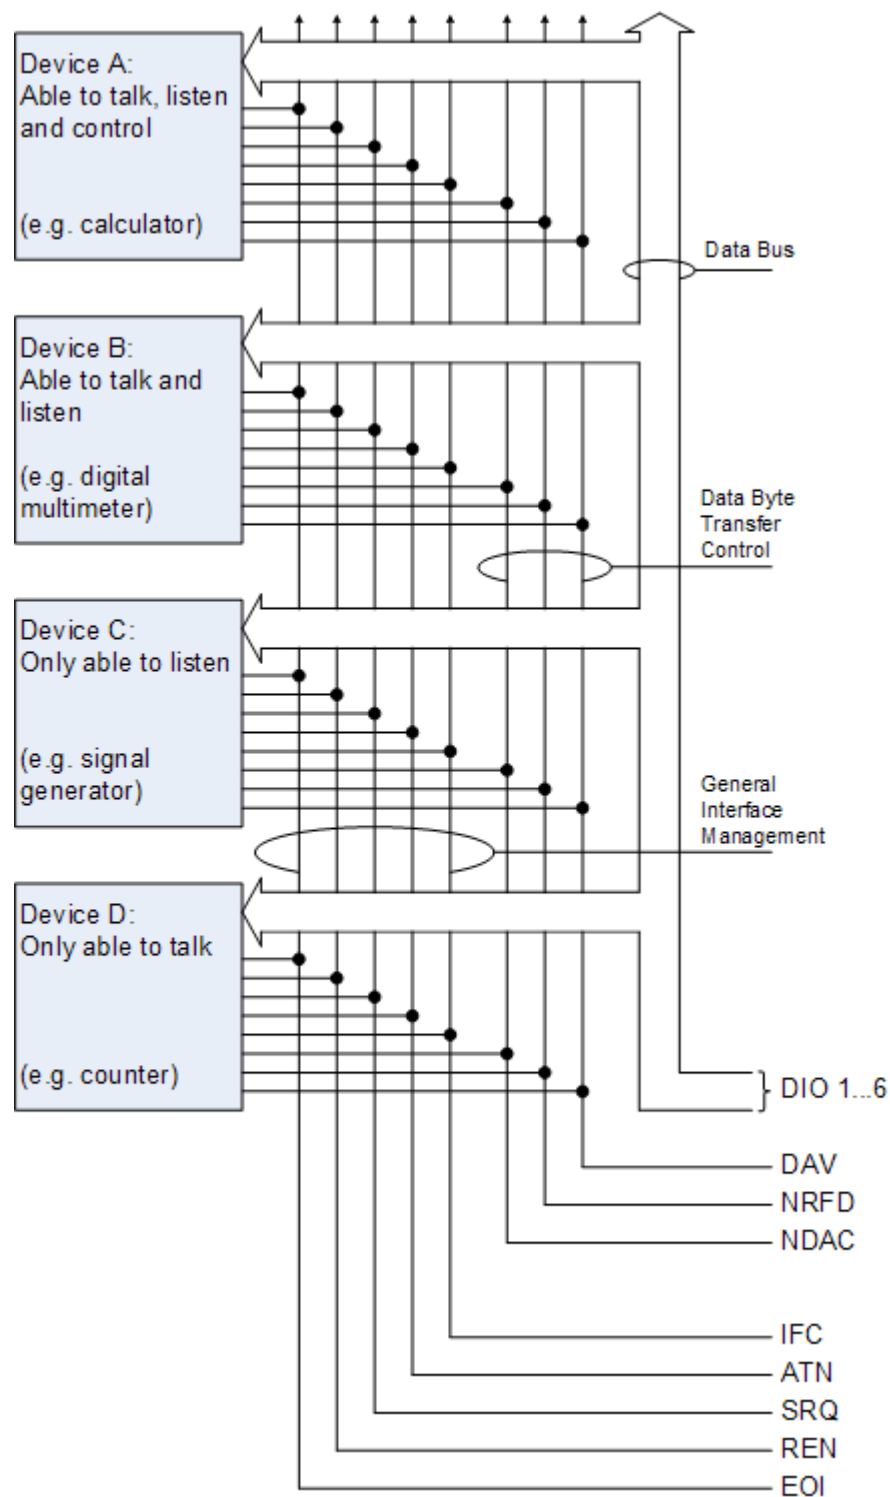


Fig. 9-1: Communication lines used by the GPIB interface

Universal Commands

Universal commands are encoded in the range 10 through 1F hex. They affect all instruments connected to the bus and do not require addressing.

Command	Effect on the instrument
DCL (Device Clear)	Aborts the processing of the commands just received and sets the command processing software to a defined initial state. Does not change the instrument settings.
IFC (Interface Clear) *)	Resets the interfaces to the default setting.
LLO (Local Lockout)	The LOC/IEC ADDR key is disabled.
SPE (Serial Poll Enable)	Ready for serial poll.
SPD (Serial Poll Disable)	End of serial poll.
PPU (Parallel Poll Unconfigure)	End of the parallel-poll state.
*) IFC is not a real universal command, it is sent via a separate line; however, it also affects all instruments connected to the bus and does not require addressing	

Addressed Commands

Addressed commands are encoded in the range 00 through 0F hex. They only affect instruments addressed as listeners.

Command	Effect on the instrument
GET (Group Execute Trigger)	Triggers a previously active instrument function (e.g. a sweep). The effect of the command is the same as with that of a pulse at the external trigger signal input.
GTL (Go to Local)	Transition to the "local" state (manual control).
	Transition to the "remote" state (remote control).
PPC (Parallel Poll Configure)	Configures the instrument for parallel poll.
SDC (Selected Device Clear)	Aborts the processing of the commands just received and sets the command processing software to a defined initial state. Does not change the instrument setting.

GPIO Instrument Address

In order to operate the instrument via remote control, it must be addressed using the GPIO address. The remote control address is factory-set to 20, but it can be changed if it does not fit in the network environment. For remote control, addresses 0 through 30 are allowed. The GPIO address is maintained after a reset of the instrument settings.

Setting the GPIO address

1. On the R&S ESRP, press the SETUP key.
2. Press the "General Setup" softkey.
3. Press the "GPIO" softkey.

The submenu for setting the parameters of the remote control interface is displayed.

4. Press the "GPIB Address" softkey.

The edit dialog box for the GPIB address is displayed.

5. Enter a value between 0 and 30.

Remote command: `SYST:COMM:GPIB:ADDR 18`

9.1.2 Starting a Remote Control Session

When you switch on the instrument, it is always in manual operation state ("local" state) and can be operated via the front panel.

Starting remote control

1. Send an addressed command (`GTR` - Go to Remote) from a controller to the instrument.

The instrument is switched to remote control ("remote" state). Operation via the front panel is disabled. Only the "Local" softkey is displayed to return to manual operation. The instrument remains in the remote state until it is reset to the manual state via the instrument or via remote control interfaces. Switching from manual operation to remote control and vice versa does not affect the other instrument settings.

2. During program execution, send the `SYSTem:DISPlay:UPDate ON` command to activate the display of results.

The changes in the device settings and the recorded measurement values are displayed on the instrument screen.

3. To obtain optimum performance during remote control, send the `SYSTem:DISPlay:UPDate OFF` command to hide the display of results and diagrams again (default setting in remote control).

4. To prevent unintentional return to manual operation, disable the keys of the instrument using the universal command `LLO`.

Switching to manual mode is only possible via remote control then. This function is only available for the GPIB interface.

5. To enable the keys of the R&S ESRP again, switch the instrument to local mode (`GTL` - Go to Local), i.e. deactivate the `REN` line of the remote control interface.



If the instrument is operated exclusively in remote control, it is recommended that you switch on the power-save mode for the display. For more details on this mode refer to the First Steps.

9.1.3 Returning to Manual Operation

Before you switch back to manual operation, all remote command processing must be completed. Otherwise, the instrument will switch back to remote control immediately.

- Press the "Local" softkey or the PRESET key, or use the following GPIB command:

```
status = viGpibControlREN(vi, VI_GPIB_REN_ADDRESS_GTL)
```

9.1.4 SCPI Command Structure

SCPI commands consist of a so-called header and, in most cases, one or more parameters. The header and the parameters are separated by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank). The headers may consist of several mnemonics (keywords). Queries are formed by appending a question mark directly to the header.

The commands can be either device-specific or device-independent (common commands). Common and device-specific commands differ in their syntax.

9.1.4.1 Syntax for Common Commands

Common (=device-independent) commands consist of a header preceded by an asterisk (*) and possibly one or more parameters.

Examples:

*RST	RESET	Resets the instrument.
*ESE	EVENT STATUS ENABLE	Sets the bits of the event status enable registers.
*ESR?	EVENT STATUS QUERY	Queries the contents of the event status register.
*IDN?	IDENTIFICATION QUERY	Queries the instrument identification string.

9.1.4.2 Syntax for Device-Specific Commands



Not all commands used in the following examples are necessarily implemented in the instrument.

For demonstration purposes only, assume the existence of the following commands for this section:

- `DISPlay[:WINDow<1...4>]:MAXimize <Boolean>`
- `FORMat:READings:DATA <type>[,<length>]`
- `HCOPy:DEVIce:COLor <Boolean>`
- `HCOPy:DEVIce:CMAP:COLor:RGB <red>,<green>,<blue>`
- `HCOPy[:IMMediate]`
- `HCOPy:ITEM:ALL`
- `HCOPy:ITEM:LABel <string>`
- `HCOPy:PAGE:DIMensions:QUADrant [<N>]`
- `HCOPy:PAGE:ORIENTATION LANDscape | PORTrait`
- `HCOPy:PAGE:SCALE <numeric value>`
- `MMEMemory:COPY <file_source>,<file_destination>`
- `SENSe:BANDwidth|BWIDth[:RESolution] <numeric_value>`
- `SENSe:FREQuency:STOP <numeric value>`
- `SENSe:LIST:FREQuency <numeric_value>{,<numeric_value>}`

Long and short form

The mnemonics feature a long form and a short form. The short form is marked by upper case letters, the long form corresponds to the complete word. Either the short form or the long form can be entered; other abbreviations are not permitted.

Example:

`HCOPy:DEVIce:COLor ON` is equivalent to `HCOP:DEV:COL ON`.



Case-insensitivity

Upper case and lower case notation only serves to distinguish the two forms in the manual, the instrument itself is case-insensitive.

Numeric suffixes

If a command can be applied to multiple instances of an object, e.g. specific channels or sources, the required instances can be specified by a suffix added to the command. Numeric suffixes are indicated by angular brackets (<1...4>, <n>, <i>) and are replaced by a single value in the command. Entries without a suffix are interpreted as having the suffix 1.

Example:

Definition: `HCOPY:PAGE:DIMensions:QUADrant [<N>]`

Command: `HCOP:PAGE:DIM:QUAD2`

This command refers to the quadrant 2.

**Different numbering in remote control**

For remote control, the suffix may differ from the number of the corresponding selection used in manual operation. SCPI prescribes that suffix counting starts with 1. Suffix 1 is the default state and used when no specific suffix is specified.

Some standards define a fixed numbering, starting with 0. If the numbering differs in manual operation and remote control, it is indicated for the corresponding command.

Optional mnemonics

Some command systems permit certain mnemonics to be inserted into the header or omitted. These mnemonics are marked by square brackets in the description. The instrument must recognize the long command to comply with the SCPI standard. Some commands are considerably shortened by these optional mnemonics.

Example:

Definition: `HCOPY[:IMMediate]`

Command: `HCOP:IMM` is equivalent to `HCOP`

**Optional mnemonics with numeric suffixes**

Do not omit an optional mnemonic if it includes a numeric suffix that is relevant for the effect of the command.

Example:

Definition: `DISPlay[:WINDow<1...4>]:MAXimize <Boolean>`

Command: `DISP:MAX ON` refers to window 1.

In order to refer to a window other than 1, you must include the optional `WINDow` parameter with the suffix for the required window.

`DISP:WIND2:MAX ON` refers to window 2.

Parameters

Parameters must be separated from the header by a "white space". If several parameters are specified in a command, they are separated by a comma (,). For a description of the parameter types, refer to [chapter 9.1.4.3, "SCPI Parameters"](#), on page 427.

Example:

Definition: `HCOPY:DEvice:CMAP:COLor:RGB <red>, <green>, <blue>`

Command: `HCOP:DEV:CMAP:COL:RGB 3,32,44`

Special characters

	Parameters A vertical stroke in parameter definitions indicates alternative possibilities in the sense of "or". The effect of the command differs, depending on which parameter is used. Example: Definition: <code>HCOPy:PAGE:ORIENTATION LANDscape PORtrait</code> Command <code>HCOP:PAGE:ORI LAND</code> specifies landscape orientation Command <code>HCOP:PAGE:ORI PORT</code> specifies portrait orientation Mnemonics A selection of mnemonics with an identical effect exists for several commands. These mnemonics are indicated in the same line; they are separated by a vertical stroke. Only one of these mnemonics needs to be included in the header of the command. The effect of the command is independent of which of the mnemonics is used. Example: Definition: <code>SENSe:BANDwidth BWIDTH[:RESolution] <numeric_value></code> The two following commands with identical meaning can be created: <code>SENS:BAND:RES 1</code> <code>SENS:BWID:RES 1</code>
[]	Mnemonics in square brackets are optional and may be inserted into the header or omitted. Example: <code>HCOPy[:IMMEDIATE]</code> <code>HCOP:IMM</code> is equivalent to <code>HCOP</code>
{ }	Parameters in curly brackets are optional and can be inserted once or several times, or omitted. Example: <code>SENSe:LIST:FREQuency <numeric_value>{,<numeric_value>}</code> The following are valid commands: <code>SENS:LIST:FREQ 10</code> <code>SENS:LIST:FREQ 10,20</code> <code>SENS:LIST:FREQ 10,20,30,40</code>

9.1.4.3 SCPI Parameters

Many commands are supplemented by a parameter or a list of parameters. The parameters must be separated from the header by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank). Allowed parameters are:

- Numeric values
- Special numeric values
- Boolean parameters
- Text
- Character strings
- Block data

The parameters required for each command and the allowed range of values are specified in the command description.

Numeric values

Numeric values can be entered in any form, i.e. with sign, decimal point and exponent. Values exceeding the resolution of the instrument are rounded up or down. The mantissa may comprise up to 255 characters, the exponent must lie inside the value range -32000 to 32000. The exponent is introduced by an "E" or "e". Entry of the exponent alone is not allowed. In the case of physical quantities, the unit can be entered.

Allowed unit prefixes are G (giga), MA (mega), MOHM and MHZ (also allowed), K (kilo), M (milli), U (micro) and N (nano). If the unit is missing, the basic unit is used.

Example: `SENS:FREQ:STOP 1.5GHz = SENS:FREQ:STOP 1.5E9`

Units

For physical quantities, the unit can be entered. Allowed unit prefixes are:

- G (giga)
- MA (mega), MOHM, MHZ
- K (kilo)
- M (milli)
- U (micro)
- N (nano)

If the unit is missing, the basic unit is used.

Example:

`SENSe:FREQ:STOP 1.5GHz = SENSe:FREQ:STOP 1.5E9`

Some settings allow relative values to be stated in percent. According to SCPI, this unit is represented by the `PCT` string.

Example:

`HCOP:PAGE:SCAL 90PCT`

Special numeric values

The texts listed below are interpreted as special numeric values. In the case of a query, the numeric value is provided.

- **MIN/MAX**
MINimum and MAXimum denote the minimum and maximum value.
- **DEF**
DEFault denotes a preset value which has been stored in the EPROM. This value conforms to the default setting, as it is called by the `*RST` command.
- **UP/DOWN**
UP, DOWN increases or reduces the numeric value by one step. The step width can be specified via an allocated step command for each parameter which can be set via UP, DOWN.
- **INF/NINF**

INFinity, Negative INFinity (NINF) represent the numeric values 9.9E37 or -9.9E37, respectively. INF and NINF are only sent as instrument responses.

- **NAN**

Not A Number (NAN) represents the value 9.91E37. NAN is only sent as a instrument response. This value is not defined. Possible causes are the division of zero by zero, the subtraction of infinite from infinite and the representation of missing values.

Example:

Setting command: `SENSe:LIST:FREQ MAXimum`

Query: `SENS:LIST:FREQ?`, Response: `3.5E9`



Queries for special numeric values

The numeric values associated to `MAXimum`/`MINimum`/`DEFault` can be queried by adding the corresponding mnemonics to the command. They must be entered following the quotation mark.

Example: `SENSe:LIST:FREQ? MAXimum`

Returns the maximum numeric value as a result.

Boolean Parameters

Boolean parameters represent two states. The "ON" state (logically true) is represented by "ON" or a numeric value 1. The "OFF" state (logically untrue) is represented by "OFF" or the numeric value 0. The numeric values are provided as the response for a query.

Example:

Setting command: `HCOPY:DEV:COL ON`

Query: `HCOPY:DEV:COL?`

Response: `1`

Text parameters

Text parameters observe the syntactic rules for mnemonics, i.e. they can be entered using a short or long form. Like any parameter, they have to be separated from the header by a white space. In the case of a query, the short form of the text is provided.

Example:

Setting command: `HCOPY:PAGE:ORIENTATION LANDscape`

Query: `HCOP:PAGE:ORI?`

Response: `LAND`

Character strings

Strings must always be entered in quotation marks (' or ").

Example:

HCOP:ITEM:LABel "Test1" or HCOP:ITEM:LABel 'Test1'

Block data

Block data is a format which is suitable for the transmission of large amounts of data. A command using a block data parameter has the following structure:

Example:

FORMat:READings:DATA #45168xxxxxxxx

The ASCII character # introduces the data block. The next number indicates how many of the following digits describe the length of the data block. In the example the 4 following digits indicate the length to be 5168 bytes. The data bytes follow. During the transmission of these data bytes all end or other control signs are ignored until all bytes are transmitted.

#0 specifies a data block of indefinite length. The use of the indefinite format requires a NL^END message to terminate the data block. This format is useful when the length of the transmission is not known or if speed or other considerations prevent segmentation of the data into blocks of definite length.

9.1.4.4 Overview of Syntax Elements

The following table provides an overview of the syntax elements:

:	The colon separates the mnemonics of a command. In a command line the separating semicolon marks the uppermost command level.
;	The semicolon separates two commands of a command line. It does not alter the path.
,	The comma separates several parameters of a command.
?	The question mark forms a query.
*	The asterisk marks a common command.
' '	Quotation marks introduce a string and terminate it (both single and double quotation marks are possible).
#	The hash symbol introduces binary, octal, hexadecimal and block data. • Binary: #B10110 • Octal: #O7612 • Hexa: #HF3A7 • Block: #21312
	A "white space" (ASCII-Code 0 to 9, 11 to 32 decimal, e.g. blank) separates the header from the parameters.

9.1.4.5 Structure of a command line

A command line may consist of one or several commands. It is terminated by one of the following:

- a <New Line>
- a <New Line> with EOI
- an EOI together with the last data byte

Several commands in a command line must be separated by a semicolon ";". If the next command belongs to a different command system, the semicolon is followed by a colon.

Example:

```
MMEM:COPY "Test1", "MeasurementXY";:HCOP:ITEM ALL
```

This command line contains two commands. The first command belongs to the MMEM system, the second command belongs to the HCOP system.

If the successive commands belong to the same system, having one or several levels in common, the command line can be abbreviated. To this end, the second command after the semicolon starts with the level that lies below the common levels. The colon following the semicolon must be omitted in this case.

Example:

```
HCOP:ITEM ALL;:HCOP:IMM
```

This command line contains two commands. Both commands are part of the HCOP command system, i.e. they have one level in common.

When abbreviating the command line, the second command begins with the level below HCOP. The colon after the semicolon is omitted. The abbreviated form of the command line reads as follows:

```
HCOP:ITEM ALL;IMM
```

A new command line always begins with the complete path.

Example:

```
HCOP:ITEM ALL
```

```
HCOP:IMM
```

9.1.4.6 Responses to Queries

A query is defined for each setting command unless explicitly specified otherwise. It is formed by adding a question mark to the associated setting command. According to SCPI, the responses to queries are partly subject to stricter rules than in standard IEEE 488.2.

- The requested parameter is transmitted without a header.
Example: `HCOP:PAGE:ORI?`, **Response:** `LAND`
- Maximum values, minimum values and all other quantities that are requested via a special text parameter are returned as numeric values.
Example: `SENSe:FREQuency:STOP? MAX`, **Response:** `3.5E9`

- Numeric values are output without a unit. Physical quantities are referred to the basic units or to the units set using the `Unit` command. The response `3.5E9` in the previous example stands for 3.5 GHz.

- Truth values (Boolean values) are returned as 0 (for OFF) and 1 (for ON).

Example:

Setting command: `HCOPY:DEV:COL ON`

Query: `HCOPY:DEV:COL?`

Response: 1

- Text (character data) is returned in a short form.

Example:

Setting command: `HCOPY:PAGE:ORIENTATION LANDscape`

Query: `HCOPY:PAGE:ORI?`

Response: LAND

9.1.5 Command Sequence and Synchronization

IEEE 488.2 defines a distinction between overlapped and sequential commands:

- A **sequential command** is one which finishes executing before the next command starts executing. Commands that are processed quickly are usually implemented as sequential commands.
- An **overlapping command** is one which does not automatically finish executing before the next command starts executing. Usually, overlapping commands take longer to process and allow the program to do other tasks while being executed. If overlapping commands do have to be executed in a defined order, e.g. in order to avoid wrong measurement results, they must be serviced sequentially. This is called synchronization between the controller and the instrument.

Setting commands within one command line, even though they may be implemented as sequential commands, are not necessarily serviced in the order in which they have been received. In order to make sure that commands are actually carried out in a certain order, each command must be sent in a separate command line.

Example: Commands and queries in one message

The response to a query combined in a program message with commands that affect the queried value is not predictable.

The following commands always return the specified result:

`:FREQ:STAR 1GHZ;SPAN 100 :FREQ:STAR?`

Result:

1000000000 (1 GHz)

Whereas the result for the following commands is not specified by SCPI:

`:FREQ:STAR 1GHz;STAR?;SPAN 1000000`

The result could be the value of `START` before the command was sent since the instrument might defer executing the individual commands until a program message terminator is received. The result could also be 1 GHz if the instrument executes commands as they are received.



As a general rule, send commands and queries in different program messages.

Example: Overlapping command with *OPC

The instrument implements `INITiate[:IMMediate]` as an overlapped command. Assuming that `INITiate[:IMMediate]` takes longer to execute than `*OPC`, sending the following command sequence results in initiating a sweep and, after some time, setting the `OPC` bit in the `ESR`:

```
INIT; *OPC.
```

Sending the following commands still initiates a sweep:

```
INIT; *OPC; *CLS
```

However, since the operation is still pending when the instrument executes `*CLS`, forcing it into the "Operation Complete Command Idle" State (OCIS), `*OPC` is effectively skipped. The `OPC` bit is not set until the instrument executes another `*OPC` command.

The following list includes the commands for which a synchronization via `*OPC`, `*OPC?` or `*WAI` is mandatory:

Command	Purpose
INIT	start measurement
INIT:CONM	continue measurement
CALC:MARK:FUNC:ZOOM	zoom frequency range around marker 1
CALC:STAT:SCAL:AUTO ONCE	optimize level settings for signal statistic measurement functions
[SENS:]POW:ACH:PRES:RLEV	optimize level settings for adjacent channel power measurements

9.1.5.1 Preventing Overlapping Execution

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used. All three commands cause a certain action only to be carried out after the hardware has been set. By suitable programming, the controller can be forced to wait for the corresponding action to occur.

Table 9-2: Synchronization using *OPC, *OPC? and *WAI

Com-mand	Action	Programming the controller
*OPC	Sets the Operation Complete bit in the ESR after all previous commands have been executed.	- Setting bit 0 in the ESE - Setting bit 5 in the SRE - Waiting for service request (SRQ)
*OPC?	Stops command processing until 1 is returned. This is only the case after the Operation Complete bit has been set in the ESR. This bit indicates that the previous setting has been completed.	Sending *OPC? directly after the command whose processing should be terminated before other commands can be executed.
*WAI	Stops further command processing until all commands sent before *WAI have been executed.	Sending *WAI directly after the command whose processing should be terminated before other commands are executed.

Command synchronization using *WAI or *OPC? appended to an overlapped command is a good choice if the overlapped command takes only little time to process. The two synchronization techniques simply block overlapped execution of the command.

For time consuming overlapped commands it is usually desirable to allow the controller or the instrument to do other useful work while waiting for command execution. Use one of the following methods:

***OPC with a service request**

1. Set the OPC mask bit (bit no. 0) in the ESE: *ESE 1
2. Set bit no. 5 in the SRE: *SRE 32 to enable ESB service request.
3. Send the overlapped command with *OPC
4. Wait for a service request

The service request indicates that the overlapped command has finished.

***OPC? with a service request**

1. Set bit no. 4 in the SRE: *SRE 16 to enable MAV service request.
2. Send the overlapped command with *OPC?
3. Wait for a service request

The service request indicates that the overlapped command has finished.

Event Status Register (ESE)

1. Set the OPC mask bit (bit no. 0) in the ESE: *ESE 1
2. Send the overlapped command without *OPC, *OPC? or *WAI
3. Poll the operation complete state periodically (by means of a timer) using the sequence: *OPC; *ESR?

A return value (LSB) of 1 indicates that the overlapped command has finished.

***OPC? with short timeout**

1. Send the overlapped command without *OPC, *OPC? or *WAI
2. Poll the operation complete state periodically (by means of a timer) using the sequence: <short timeout>; *OPC?
3. A return value (LSB) of 1 indicates that the overlapped command has finished. In case of a timeout, the operation is ongoing.
4. Reset timeout to former value
5. Clear the error queue with `SYSTem:ERRor?` to remove the "-410, Query interrupted" entries.

Using several threads in the controller application

As an alternative, provided the programming environment of the controller application supports threads, separate threads can be used for the application GUI and for controlling the instrument(s) via SCPI.

A thread waiting for a *OPC? thus will not block the GUI or the communication with other instruments.

9.1.6 Status Reporting System

The status reporting system stores all information on the current operating state of the instrument, and on errors which have occurred. This information is stored in the status registers and in the error queue. Both can be queried via GPIB bus or LAN interface (`STATus...` commands).

9.1.6.1 Hierarchy of Status Registers

- **STB, SRE**
The `STatus Byte (STB)` register and its associated mask register `Service Request Enable (SRE)` form the highest level of the status reporting system. The `STB` provides a rough overview of the instrument status, collecting the information of the lower-level registers.
- **ESR, SCPI registers**
The `STB` receives its information from the following registers:
 - The `Event Status Register (ESR)` with the associated mask register `standard Event Status Enable (ESE)`
 - The `STATus:OPERation` and `STATus:QUEStionable` registers which are defined by SCPI and contain detailed information on the instrument
- **IST, PPE**
The `IST` flag ("Individual `STatus`"), like the `SRQ`, combines the entire instrument status in a single bit. The `PPE` fulfills the same function for the `IST` flag as the `SRE` for the service request.
- **Output buffer**

The output buffer contains the messages the instrument returns to the controller. It is not part of the status reporting system but determines the value of the `MAV` bit in the `STB` and thus is represented in the overview.

All status registers have the same internal structure.



SRE, ESE

The service request enable register `SRE` can be used as `ENABLE` part of the `STB` if the `STB` is structured according to SCPI. By analogy, the `ESE` can be used as the `ENABLE` part of the `ESR`.

9.1.6.2 Structure of a SCPI Status Register

Each standard SCPI register consists of 5 parts. Each part has a width of 16 bits and has different functions. The individual bits are independent of each other, i.e. each hardware status is assigned a bit number which is valid for all five parts. Bit 15 (the most significant bit) is set to zero for all parts. Thus the contents of the register parts can be processed by the controller as positive integers.

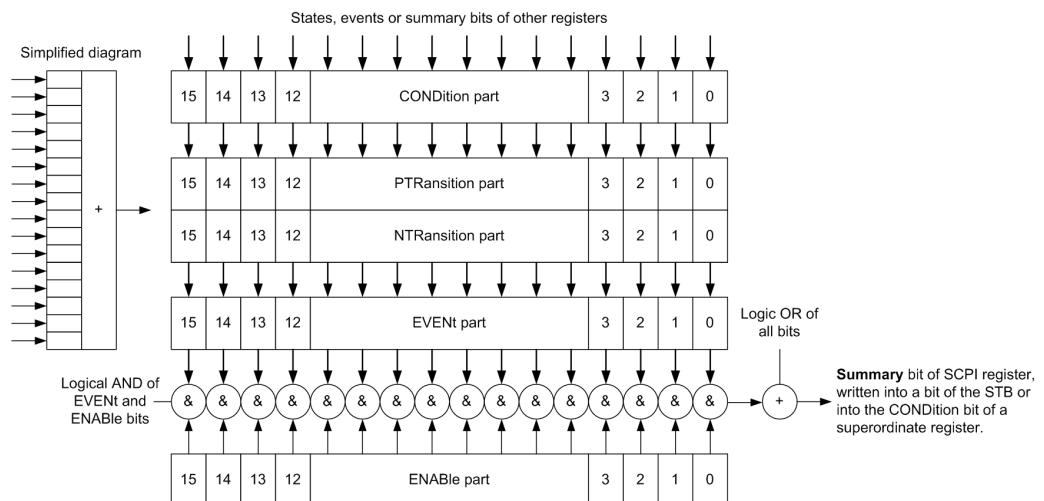


Fig. 9-2: The status-register model

Description of the five status register parts

The five parts of a SCPI register have different properties and functions:

- CONDition**
 The **CONDition** part is written into directly by the hardware or the sum bit of the next lower register. Its contents reflect the current instrument status. This register part can only be read, but not written into or cleared. Its contents are not affected by reading.
- PTRansition / NTRansition**
 The two transition register parts define which state transition of the **CONDition** part (none, 0 to 1, 1 to 0 or both) is stored in the **EVENT** part.

The **Positive-TRansition** part acts as a transition filter. When a bit of the **CONDition** part is changed from 0 to 1, the associated **PTR** bit decides whether the **EVENT** bit is set to 1.

- **PTR** bit =1: the **EVENT** bit is set.
- **PTR** bit =0: the **EVENT** bit is not set.

This part can be written into and read as required. Its contents are not affected by reading.

The **Negative-TRansition** part also acts as a transition filter. When a bit of the **CONDition** part is changed from 1 to 0, the associated **NTR** bit decides whether the **EVENT** bit is set to 1.

- **NTR** bit =1: the **EVENT** bit is set.
- **NTR** bit =0: the **EVENT** bit is not set.

This part can be written into and read as required. Its contents are not affected by reading.

- **EVENT**

The **EVENT** part indicates whether an event has occurred since the last reading, it is the "memory" of the condition part. It only indicates events passed on by the transition filters. It is permanently updated by the instrument. This part can only be read by the user. Reading the register clears it. This part is often equated with the entire register.

- **ENABLE**

The **ENABLE** part determines whether the associated **EVENT** bit contributes to the sum bit (see below). Each bit of the **EVENT** part is "ANDed" with the associated **ENABLE** bit (symbol '&'). The results of all logical operations of this part are passed on to the sum bit via an "OR" function (symbol '+').

ENABLE bit = 0: the associated **EVENT** bit does not contribute to the sum bit

ENABLE bit = 1: if the associated **EVENT** bit is "1", the sum bit is set to "1" as well.

This part can be written into and read by the user as required. Its contents are not affected by reading.

Sum bit

The sum bit is obtained from the **EVENT** and **ENABLE** part for each register. The result is then entered into a bit of the **CONDition** part of the higher-order register.

The instrument automatically generates the sum bit for each register. Thus an event can lead to a service request throughout all levels of the hierarchy.

9.1.6.3 Contents of the Status Register

This chapter provides information on the contents of each status register the meaning for all bits that are used available for each operating mode.

Status Registers in Receiver Mode

This chapter contains the description of the registers and bits specific to spectrum mode.

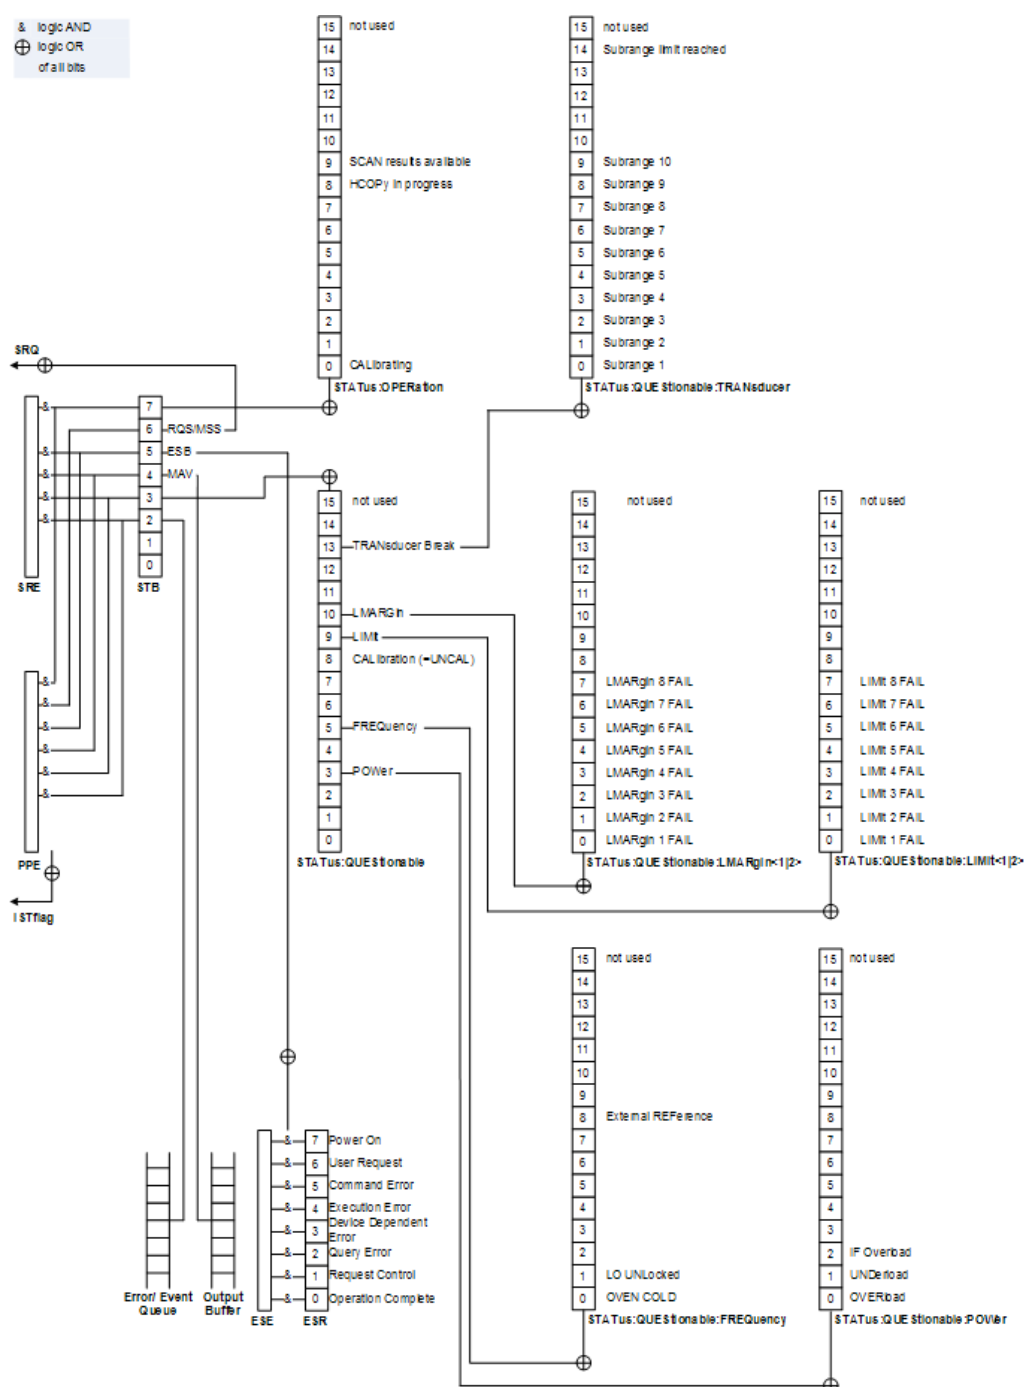


Fig. 9-3: Overview of status registers in receiver mode

Status Byte (STB) and Service Request Enable Register (SRE)

The `STatus Byte (STB)` is already defined in IEEE 488.2. It provides a rough overview of the instrument status by collecting the pieces of information of the lower registers. A special feature is that bit 6 acts as the sum bit of the remaining bits of the status byte.

The STB can thus be compared with the `CONDition` part of an SCPI register and assumes the highest level within the SCPI hierarchy.

The STB is read using the command `*STB?` or a serial poll.

The `STatus Byte` (STB) is linked to the `Service Request Enable` (SRE) register. Each bit of the STB is assigned a bit in the SRE. Bit 6 of the SRE is ignored. If a bit is set in the SRE and the associated bit in the STB changes from 0 to 1, a service request (SRQ) is generated. The SRE can be set using the command `*SRE` and read using the command `*SRE?`.

Table 9-3: Meaning of the bits used in the status byte

Bit No.	Meaning
0...1	Not used
2	Error Queue not empty The bit is set when an entry is made in the error queue. If this bit is enabled by the SRE, each entry of the error queue generates a service request. Thus an error can be recognized and specified in greater detail by polling the error queue. The poll provides an informative error message. This procedure is to be recommended since it considerably reduces the problems involved with remote control.
3	QUESTionable status register summary bit The bit is set if an <code>EVENT</code> bit is set in the <code>QUESTionable</code> status register and the associated <code>ENABLE</code> bit is set to 1. A set bit indicates a questionable instrument status, which can be specified in greater detail by querying the <code>STATUS:QUESTionable</code> status register.
4	MAV bit (message available) The bit is set if a message is available in the output queue which can be read. This bit can be used to enable data to be automatically read from the instrument to the controller.
5	ESB bit Sum bit of the event status register. It is set if one of the bits in the event status register is set and enabled in the event status enable register. Setting of this bit indicates a serious error which can be specified in greater detail by polling the event status register.
6	MSS bit (master status summary bit) The bit is set if the instrument triggers a service request. This is the case if one of the other bits of this registers is set together with its mask bit in the service request enable register SRE.
7	STATUS:OPERation status register summary bit The bit is set if an <code>EVENT</code> bit is set in the <code>OPERation</code> status register and the associated <code>ENABLE</code> bit is set to 1. A set bit indicates that the instrument is just performing an action. The type of action can be determined by querying the <code>STATUS:OPERation</code> status register.

IST Flag and Parallel Poll Enable Register (PPE)

As with the SRQ, the IST flag combines the entire status information in a single bit. It can be read by means of a parallel poll (see ["Parallel Poll"](#) on page 450) or using the command `*IST?`.

The parallel poll enable register (PPE) determines which bits of the STB contribute to the IST flag. The bits of the STB are "ANDed" with the corresponding bits of the PPE, with bit 6 being used as well in contrast to the SRE. The IST flag results from the

"ORing" of all results. The PPE can be set using commands `*PRE` and read using command `*PRE?`.

Event Status Register (ESR) and Event Status Enable Register (ESE)

The Event Status Register (ESR) is the source for the registers on the highest levels and is similar to the `EVENT` part of a SCPI register. It is defined by IEEE 488.2. You can read out the ESR with `*ESR?`.

The corresponding `ENABLE` part of the ESR is the Event Status Enable mask register (ESE). The ESE is directly linked to the ESR. You can control the ESE with `*ESE`.

Table 9-4: Meaning of the bits used in the event status register

Bit No.	Meaning
0	Operation Complete This bit is set on receipt of the command <code>*OPC</code> exactly when all previous commands have been executed.
1	Unused
2	Query Error This bit is set if either the controller wants to read data from the instrument without having sent a query, or if it does not fetch requested data and sends new instructions to the instrument instead. The cause is often a query which is faulty and hence cannot be executed.
3	Device-dependent Error This bit is set if a device-dependent error occurs. The R&S ESRP adds a number to the error queue. The number is either in the range between -300 and -399 or greater than 0. If the number is positive, it indicates the error type in greater detail.
4	Execution Error This bit is set if a received command is syntactically correct but cannot be performed for other reasons. An error message with a number between -200 and -300, which denotes the error in greater detail, is entered into the error queue.
5	Command Error This bit is set if a remote command is undefined or has a incorrect syntax. The R&S ESRP adds a number to the error queue. The number is in the range between -100 and -200 and indicates the error type in greater detail.
6	User Request This bit is set when you press the "Local" softkey.
7	Power On (supply voltage on) This bit is set when you turn on the instrument.

STATus:OPERation Register

The `STATus:OPERation` register contains information about actions the R&S ESRP is currently executing. It also contains information about the actions the R&S ESRP has executed since the last reading.

You can read out the state of the register with `STATus:OPERation:CONDition?` or `STATus:OPERation[:EVENT]?`.

Table 9-5: Meaning of the bits used in the STATus:OPERation register

Bit No.	Meaning
0	CALibrating This bit is set as long as the instrument is performing a calibration.
1 to 7	Not used
8	HardCOpy in progress This bit is set while the instrument is printing a hardcopy.
9	SCAN results available This bit is set when a block of scan results is available. Note that this function must be enabled by TRACe:FEED:CONTOl ALWays.
10	Sweep Break This bit is set when the end of a scan range is reached. To proceed, you have to use the INITiate:CONMeas command.
11	Not used
12	Threshold signal active
13 to 14	Not used
15	This bit is always 0.

STATus:QUEStionable Register

The STATus:QUEStionable register contains information about states that may occur if the R&S ESRP is operated without meeting the specifications.

You can read out the state of the register with `STATus:QUEStionable:CONDition?` and `STATus:QUEStionable[:EVENT]?`.

Table 9-6: Meaning of the bits used in the STATus:QUEStionable register

Bit No.	Meaning
0 - 2	These bits are not used
3	POWer This bit is set if a questionable power occurs (see "STATus:QUEStionable:POWer Register" on page 444).
4	TEMPerature This bit is set if a questionable temperature occurs.
5	FREQuency The bit is set if a frequency is questionable (see "STATus:QUEStionable:FREQuency Register" on page 442).
6 - 7	Not used
8	CALibration The bit is set if a measurement is performed unaligned ("UNCAL" display)

Bit No.	Meaning
9	LIMit (device-specific) This bit is set if a limit value is violated (see " STATus:QUEStionable:LIMit Register " on page 442)
10	LMARgin (device-specific) This bit is set if a margin is violated (see " STATus:QUEStionable:LMARgin Register " on page 443)
11	Not used
12	ACPLimit (device-specific) This bit is set if a limit for the adjacent channel power measurement is violated (see " STATus:QUEStionable:ACPLimit Register " on page 448)
13	TRANsducer break This bit is set if a transducer break occurs and indicates the next range.
14	Not used
15	This bit is always 0.

STATus:QUEStionable:FREQuency Register

The STATus:QUEStionable:FREQuency register contains information about the condition of the local oscillator and the reference frequency.

You can read out the register with [STATus:QUEStionable:FREQuency:CONDition?](#) or [STATus:QUEStionable:FREQuency\[:EVENT\]?](#).

Table 9-7: Meaning of the bits used in the STATus:QUEStionable:FREQuency register

Bit No.	Meaning
0	OVEN COLD This bit is set if the reference oscillator has not yet attained its operating temperature. "OCXO" is displayed.
1	LO UNLocked This bit is set if the local oscillator no longer locks. "LOUNL" is displayed.
2 to 7	Unused
8	EXTernalREFerence This bit is set if you have selected an external reference oscillator but did not connect a useable external reference source. In that case the synthesizer can not lock. The frequency in all probability is not accurate.
9 to 14	Unused
15	This bit is always 0.

STATus:QUEStionable:LIMit Register

The STATus:QUEStionable:LIMit register contains information about the results of a limit check when you are working with limit lines.

The number of LIMit registers depends on the number of measurement windows available in any operating mode.

You can read out the register with `STATus:QUEStionable:LIMit<n>:CONDition?` or `STATus:QUEStionable:LIMit<n>[:EVENT]?`.

Table 9-8: Meaning of the bits used in the STATus:QUEStionable:LIMit register

Bit No.	Meaning
0	LIMit 1 FAIL This bit is set if limit line 1 is violated.
1	LIMit 2 FAIL This bit is set if limit line 2 is violated.
2	LIMit 3 FAIL This bit is set if limit line 3 is violated.
3	LIMit 4 FAIL This bit is set if limit line 4 is violated.
4	LIMit 5 FAIL This bit is set if limit line 5 is violated.
5	LIMit 6 FAIL This bit is set if limit line 6 is violated.
6	LIMit 7 FAIL This bit is set if limit line 7 is violated.
7	LIMit 8 FAIL This bit is set if limit line 8 is violated.
8 to 14	Unused
15	This bit is always 0.

STATus:QUEStionable:LMARgin Register

This register contains information about the observance of limit margins.

You can read out the register with `STATus:QUEStionable:LMARgin<n>:CONDition?` or `STATus:QUEStionable:LMARgin<n>[:EVENT]?`.

Table 9-9: Meaning of the bits used in the STATus:QUEStionable:LMARgin register

Bit No.	Meaning
0	LMARgin 1 FAIL This bit is set if limit margin 1 is violated.
1	LMARgin 2 FAIL This bit is set if limit margin 2 is violated.
2	LMARgin 3 FAIL This bit is set if limit margin 3 is violated.
3	LMARgin 4 FAIL This bit is set if limit margin 4 is violated.
4	LMARgin 5 FAIL This bit is set if limit margin 5 is violated.

Bit No.	Meaning
5	LMARgin 6 FAIL This bit is set if limit margin 6 is violated.
6	LMARgin 7 FAIL This bit is set if limit margin 7 is violated.
7	LMARgin 8 FAIL This bit is set if limit margin 8 is violated.
8 to 14	Not used
15	This bit is always 0.

STATus:QUEStionable:POWer Register

The STATus:QUEStionable:POWer register contains information about possible overload situations that may occur during operation of the R&S ESRP.

You can read out the registers with `STATus:QUEStionable:POWer:CONDition?` or `STATus:QUEStionable:POWer[:EVENT]?`.

Table 9-10: Meaning of the bits used in the STATus:QUEStionable:POWer register

Bit No.	Meaning
0	OVERload This bit is set if an overload occurs at the RF input. The R&S ESRP displays the enhancement label "OVLD".
1	UNDerload This bit is set if an underload occurs at the RF input. The R&S ESRP displays the enhancement label "UNLD".
2	IF_OVerload This bit is set if an overload occurs in the IF path. The R&S ESRP displays the enhancement label "IFOVL".
3 to 14	Unused
15	This bit is always 0.

STATus:QUEStionable:TRANsducer Register

The STATus:QUEStionable:TRANsducer register contains information about transducer breaks.

It indicates that a transducer break has been reached. It also indicates the next range that is to be swept. You can continue the sweep with `INITiate<n>:CONMeas`.

You can read out the registers with `STATus:QUEStionable:TRANsducer:CONDition?` or `STATus:QUEStionable:TRANsducer[:EVENT]?` on page 784.

Table 9-11: Meaning of the bits used in the STATus:QUESTIONable:TRANsducer register

Bit No.	Meaning
0	Range 1 This bit is set if subrange 1 has been reached.
1	Range 2 This bit is set if subrange 2 has been reached.
2	Range 3 This bit is set if subrange 3 has been reached.
3	Range 4 This bit is set if subrange 4 has been reached.
4	Range 5 This bit is set if subrange 5 has been reached.
5	Range 6 This bit is set if subrange 6 has been reached.
6	Range 7 This bit is set if subrange 7 has been reached.
7	Range 8 This bit is set if subrange 8 has been reached.
8	Range 9 This bit is set if subrange 9 has been reached.
9	Range 10 This bit is set if subrange 10 has been reached.
10 to 13	Unused
14	Subrange limit This bit is set when the transducer is at the point of changeover from one subrange to another.
15	This bit is always 0.

Status Registers in Spectrum Mode

This chapter contains the description of the registers and bits specific to spectrum mode. For a comprehensive description of the other status registers see ["Status Registers in Receiver Mode"](#) on page 437.

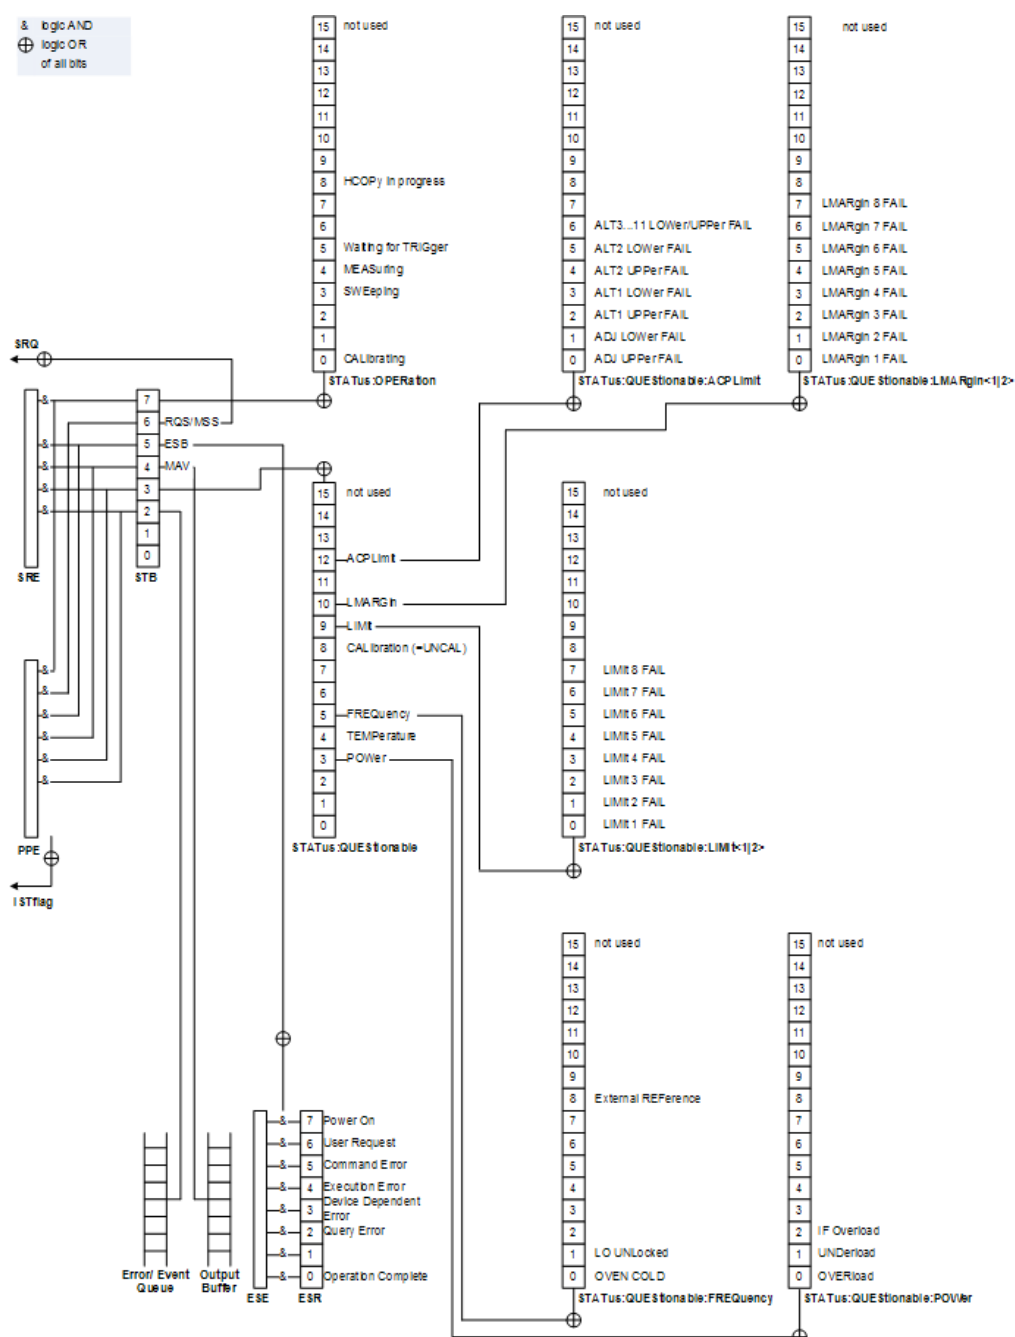


Fig. 9-4: Overview of status registers in spectrum mode

STATus:OPERation Register

The STATUS:OPERation register contains information on current activities of the R&S ESRP. It also contains information on activities that have been executed since the last read out.

You can read out the register with `STATUS:OPERation:CONDition?` or `STATUS:OPERation[:EVENT]?`.

Table 9-12: Meaning of the bits used in the *STATUS:OPERation* register

Bit No.	Meaning
0	CALibrating This bit is set as long as the instrument is performing a calibration.
1-2	Not used
3	SWEeping Sweep is being performed; identical to bit 4
4	MEASuring Measurement is being performed; identical to bit 3
5	Waiting for TRigger Instrument is ready to trigger and waiting for trigger signal
6-7	Not used
8	HardCOpy in progress This bit is set while the instrument is printing a hardcopy.
9	Not used
10	Stop after Range This bit is set when a range in the sweep list has been completed if "Stop after Range" has been activated.
11-14	Not used
15	This bit is always 0.

STATUS:QUEStionable Register

The STATUS:QUEStionable register contains information on instrument states that do not meet the specifications.

You can read out the register with `STATUS:QUEStionable:CONDition?` or `STATUS:QUEStionable[:EVENT]?`.

Table 9-13: Meaning of the bits used in the *STATUS:QUEStionable* register

Bit No.	Meaning
0 - 2	Unused
3	POWer This bit is set if the measured power level is questionable. The STATUS:QUEStionable:POWer Register provides more information on the error type.
4	TEMPerature This bit is set if the temperature is questionable.
5	FREQuency This bit is set if there is anything wrong with the frequency of the local oscillator or the reference frequency. The STATUS:QUEStionable:FREQuency Register provides more information on the error type.
6 - 7	Unused

Bit No.	Meaning
8	CALibration This bit is set if the R&S ESRP is unaligned ("UNCAL" display)
9	LIMit (device-specific) This bit is set if a limit value is violated. The STATus:QUEStionable:LIMit Register provides more information on the error type.
10	LMARgin (device-specific) This bit is set if a margin is violated. The STATus:QUEStionable:LMARgin Register provides more information on the error type.
11	Not used
12	ACPLimit (device-specific) This bit is set if a limit during ACLR measurements is violated. The STATus:QUEStionable:ACPLimit Register provides more information on the error type.
13 - 14	Not used
15	This bit is always 0.

STATus:QUEStionable:ACPLimit Register

The STATus:QUEStionable:ACPLimit register contains information about the results of a limit check during ACLR measurements.

You can read out the register with [STATus:QUEStionable:ACPLimit:CONDition?](#) or [STATus:QUEStionable:ACPLimit\[:EVENT\]?](#).

Table 9-14: Meaning of the bits used in the STATus:QUEStionable:ACPLimit register

Bit No.	Meaning
0	ADJ UPPer FAIL This bit is set if the limit is exceeded in the upper adjacent channel
1	ADJ LOWer FAIL This bit is set if the limit is exceeded in the lower adjacent channel.
2	ALT1 UPPer FAIL This bit is set if the limit is exceeded in the upper 1st alternate channel.
3	ALT1 LOWer FAIL This bit is set if the limit is exceeded in the lower 1st alternate channel.
4	ALT2 UPPer FAIL This bit is set if the limit is exceeded in the upper 2nd alternate channel.
5	ALT2 LOWer FAIL This bit is set if the limit is exceeded in the lower 2nd alternate channel.
6	ALT3 ... 11 LOWer/UPPer FAIL This bit is set if the limit is exceeded in one of the lower or upper alternate channels 3 ... 11.

Bit No.	Meaning
7 to 14	Unused
15	This bit is always 0.

9.1.6.4 Application of the Status Reporting System

The purpose of the status reporting system is to monitor the status of one or several devices in a measuring system. To do this and react appropriately, the controller must receive and evaluate the information of all devices. The following standard methods are used:

- **Service request** (SRQ) initiated by the instrument
- **Serial poll** of all devices in the bus system, initiated by the controller in order to find out who sent a SRQ and why
- **Parallel poll** of all devices
- Query of a **specific instrument status** by means of commands
- Query of the **error queue**

Service Request

Use of the command *OPC to generate an SRQ at the end of a sweep

1. `CALL InstrWrite(analyzer, "*ESE 1")` 'Set bit 0 in the ESE (Operation Complete)
2. `CALL InstrWrite(analyzer, "*SRE 32")` 'Set bit 5 in the SRE (ESB)
3. `CALL InstrWrite(analyzer, "**INIT;*OPC")` 'Generate an SRQ after operation complete

After its settings have been completed, the instrument generates an SRQ.

The SRQ is the only possibility for the instrument to become active on its own. Each controller program should cause the instrument to initiate a service request if errors occur. The program should react appropriately to the service request.

A detailed example for a service request routine can be found in [chapter 9.16.1, "Service Request"](#), on page 787.

Serial Poll

In a serial poll, just as with command *STB, the status byte of an instrument is queried. However, the query is realized via interface messages and is thus clearly faster.

The serial poll method is defined in IEEE 488.1 and used to be the only standard possibility for different instruments to poll the status byte. The method also works for instruments which do not adhere to SCPI or IEEE 488.2.

The serial poll is mainly used to obtain a fast overview of the state of several instruments connected to the controller.

Parallel Poll

In a parallel poll, up to eight instruments are simultaneously requested by the controller using a single command to transmit 1 bit of information each on the data lines, i.e., to set the data line allocated to each instrument to a logical "0" or "1".

In addition to the SRE register, which determines the conditions under which an SRQ is generated, there is a Parallel Poll Enable register (PPE) which is ANDed with the STB bit by bit, considering bit 6 as well. This register is ANDed with the STB bit by bit, considering bit 6 as well. The results are ORed, the result is possibly inverted and then sent as a response to the parallel poll of the controller. The result can also be queried without parallel poll using the command `*IST?`.

The instrument first has to be set for the parallel poll using the command `PPC`. This command allocates a data line to the instrument and determines whether the response is to be inverted. The parallel poll itself is executed using `PPE`.

The parallel poll method is mainly used to find out quickly which one of the instruments connected to the controller has sent a service request. To this effect, SRE and PPE must be set to the same value.

Query of an instrument status

Each part of any status register can be read using queries. There are two types of commands:

- The common commands `*ESR?`, `*IDN?`, `*IST?`, `*STB?` query the higher-level registers.
- The commands of the `STATus` system query the SCPI registers (`STATus:QUEStionable...`)

The returned value is always a decimal number that represents the bit pattern of the queried register. This number is evaluated by the controller program.

Queries are usually used after an SRQ in order to obtain more detailed information on the cause of the SRQ.

Decimal representation of a bit pattern

The STB and ESR registers contain 8 bits, the SCPI registers 16 bits. The contents of a status register are specified and transferred as a single decimal number. To make this possible, each bit is assigned a weighted value. The decimal number is calculated as the sum of the weighted values of all bits in the register that are set to 1.

Bits	0	1	2	3	4	5	6	7	...
Weight	1	2	4	8	16	32	64	128	...

Example:

The decimal value 40 = 32 + 8 indicates that bits no. 3 and 5 in the status register (e.g. the `QUEStionable` status summary bit and the `ESB` bit in the `Status Byte`) are set.

Error Queue

Each error state in the instrument leads to an entry in the error queue. The entries of the error queue are detailed plain text error messages that can be looked up in the Error Log or queried via remote control using `SYSTem:ERRor[:NEXT]?` or `SYSTem:ERRor:ALL?`. Each call of `SYSTem:ERRor[:NEXT]?` provides one entry from the error queue. If no error messages are stored there any more, the instrument responds with 0, "No error".

The error queue should be queried after every SRQ in the controller program as the entries describe the cause of an error more precisely than the status registers. Especially in the test phase of a controller program the error queue should be queried regularly since faulty commands from the controller to the instrument are recorded there as well.

9.1.6.5 Reset Values of the Status Reporting System

The following table contains the different commands and events causing the status reporting system to be reset. None of the commands, except `*RST` and `SYSTem:PRESet`, influence the functional instrument settings. In particular, `DCL` does not change the instrument settings.

Table 9-15: Resetting the status reporting system

Event	Switching on supply voltage Power-On-Status-Clear		DCL, SDC (Device Clear, Selected Device Clear)	*RST or SYS- Tem:PRE- Set	STA- Tus:PRE- Set	*CLS
Effect	0	1				
Clear STB, ESR	-	yes	-	-	-	yes
Clear SRE, ESE	-	yes	-	-	-	-
Clear PPE	-	yes	-	-	-	-
Clear EVENT parts of the registers	-	yes	-	-	-	yes
Clear ENABLE parts of all OPERATION and QUEStionable registers; Fill ENABLE parts of all other registers with "1".	-	yes	-	-	yes	-
Fill PTRansition parts with "1"; Clear NTRansition parts	-	yes	-	-	yes	-
Clear error queue	yes	yes	-	-	-	yes
Clear output buffer	yes	yes	yes	1)	1)	1)

Event	Switching on supply voltage Power-On-Status-Clear		DCL, SDC (Device Clear, Selected Device Clear)	*RST or SYS-Tem:PRE-Set	STA-Tus:PRE-Set	*CLS
Effect	0	1				
Clear command processing and input buffer	yes	yes	yes	-	-	-
1) The first command in a command line that immediately follows a <PROGRAM MESSAGE TERMINATOR> clears the output buffer.						

9.1.7 General Programming Recommendations

Initial instrument status before changing settings

Manual operation is designed for maximum possible operating convenience. In contrast, the priority of remote control is the "predictability" of the instrument status. Thus, when a command attempts to define incompatible settings, the command is ignored and the instrument status remains unchanged, i.e. other settings are not automatically adapted. Therefore, control programs should always define an initial instrument status (e.g. using the *RST command) and then implement the required settings.

Command sequence

As a general rule, send commands and queries in different program messages. Otherwise, the result of the query may vary depending on which operation is performed first (see also Preventing Overlapping Execution).

Reacting to malfunctions

The service request is the only possibility for the instrument to become active on its own. Each controller program should instruct the instrument to initiate a service request in case of malfunction. The program should react appropriately to the service request.

Error queues

The error queue should be queried after every service request in the controller program as the entries describe the cause of an error more precisely than the status registers. Especially in the test phase of a controller program the error queue should be queried regularly since faulty commands from the controller to the instrument are recorded there as well.

9.1.8 The IECWIN Tool

The R&S ESRP is delivered with *IECWIN* installed, an auxiliary tool provided free of charge by R&S. IECWIN is a program to send SCPI commands to a measuring instrument either interactively or from a command script.



The R&S IECWIN32 tool is provided free of charge. The functionality may change in a future version without notice.

IECWIN offers the following features:

- Connection to instrument via several interfaces/protocols (GPIB, VISA, named pipe (if IECWIN is run on the instrument itself), RSIB)
- Interactive command entry
- Browsing available commands on the instrument
- Error checking following every command
- Execution of command scripts
- Storing binary data to a file
- Reading binary data from a file
- Generation of a log file

For command scripts, IECWIN offers the following features:

- Synchronization with the instrument on every command
- Checking expected result for query commands (as string or numeric value)
- Checking for expected errors codes
- Optional pause on error
- Nested command scripts
- Single step mode
- Conditional execution, based on the *IDN and *OPT strings



You can use the IECWIN to try out the programming examples provided in the R&S ESRP User Manuals.

Starting IECWIN

IECWIN is available from the Windows task bar on the R&S ESRP, or by executing the following file:

You can also copy the program to any Windows PC or laptop. Simply copy the `iecwin32.exe`, `iecwin.chm` and `rsib32.dll` files from the location above to the same folder on the target computer.

When the tool is started, a "Connection settings" dialog box is displayed. Define the connection from the computer the IECWIN tool is installed on to the R&S ESRP you want to control. If you are using the tool directly on the R&S ESRP, you can use an NT Pipe (COM Parser) connection, which requires no further configuration. For help on setting up other connection types, check the tool's online help (by clicking the "Help" button in the dialog box).



The IECWIN offers an online help with extensive information on how to work with the tool.

9.2 Selecting the Operating Mode

INSTrument:CREate[:NEW]	454
INSTrument:DELeTe	454
INSTrument[:SELeCt]	455

INSTrument:CREate[:NEW] <ChannelType>, <ChannelName>

This command adds an additional spectrum display. You can add up to three additional spectrum displays.

Also see

- [INSTrument\[:SELeCt\]](#) on page 455
- [INSTrument:DELeTe](#) on page 454
- Remote program example: [chapter 9.16.16, "Usage of Four Spectrum Instances"](#), on page 826

Parameters:

<ChannelType>	SANalyzer The channel type is always <code>SANalyzer</code> to indicate that you add a new spectrum display.
<ChannelName>	Sets the name of the additional spectrum display. Spectrum 2 Spectrum 3 Spectrum 4 The names of the spectrum displays you add have to be <code>Spectrum 2</code> for the second spectrum display, <code>Spectrum 3</code> for the third and <code>Spectrum 4</code> for the fourth.

Example: `INST:CRE SAN, Spectrum 2`
 Adds a second spectrum display.

INSTrument:DELeTe <ChannelName>

This command deletes a spectrum display.

Also see

- [INSTrument:CREate\[:NEW\]](#) on page 454
- Remote program example: [chapter 9.16.16, "Usage of Four Spectrum Instances"](#), on page 826

Parameters:

<ChannelName>	Selects the spectrum display you want to delete. Spectrum 2 Spectrum 3 Spectrum 4 A spectrum display must exist in order to be able delete it.

Example: `INST:DEL Spectrum 4`
 Deletes the fourth spectrum display.

INSTrument[:SElect] <Mode> | <ChannelName>

This command activates a new measurement channel with the defined channel type, or selects an existing measurement channel with the specified name.

- [INSTrument:CREate\[:NEW\]](#) on page 454
- Remote program example: [chapter 9.16.16, "Usage of Four Spectrum Instances"](#), on page 826

Parameters:

<Mode>

RECeiver

Receiver mode

SANalyzer

Spectrum mode

Spectrum 2 | Spectrum 3 | Spectrum 4

Selects one of the additional spectrum displays. The first spectrum display is always active. You can select it with [SANalyzer](#). A spectrum display must exist in order to be able to select it.

*RST: RECeiver

9.3 Remote Commands in Receiver Mode

The following remote commands configure and perform EMI measurements. They are available in receiver mode only.

• Measurements and Result Displays	455
• Defining the Frequency	482
• Configuring the Vertical Axis	484
• Selecting the Bandwidth	486
• Controlling Inputs and Outputs	488
• Test Automation	489
• Working with Markers	502
• Limit Lines	517

9.3.1 Measurements and Result Displays

• Display Configuration	455
• Bargraph Control	456
• Scan Control	458
• Final Measurements and Automated Test Sequence Control	460
• Trace Data and Result Query	461
• Demodulating Analog Signals	465
• Spectrogram Control	466

9.3.1.1 Display Configuration

CALCulate<n>:FEED	456

CALCulate<n>:FEED <ResultDisplay>

This command selects the result display.

Suffix:

<n> 1...3
Selects the measurement window.

Parameters:

<ResultDisplay> **'NONE'**
Removes the window selected with the suffix <n>.

'XTIM:SPECTrum'
Selects the IF analysis result display.

'XTIM:BARGraph'
Selects the bargraph.
Note that the Bargraph always has to be in window 1.

'XFRequency[:SPECTrum]'
Selects the scan result display.

'XFRequency:SGRam'
Selects the spectrogram result display.
Note that you can add a spectrogram only if you have already turned on either Scan or IF Analysis. If you are displaying Scan and IF Analysis simultaneously, the Spectrogram is unavailable.

9.3.1.2 Bargraph Control

DISPlay:BARGraph:LEVel:LOWer?	456
DISPlay:BARGraph:LEVel:UPPer?	456
DISPlay:BARGraph:PHOLd	457
DISPlay:BARGraph:PHOLd:RESet	457
DISPlay:BARGraph:TCOupling	457
[SENSe:]DETEctor:RECEiver[:FUNction]	457
[SENSe:]SWEep:TIME	458

DISPlay:BARGraph:LEVel:LOWer?

This command queries the minimum level of the bargraph.

Example: :DISP:BARG:LEV:LOW?

Usage: Query only

DISPlay:BARGraph:LEVel:UPPer?

This command queries the maximum level of the bargraph.

Example: :DISP:BARG:LEV:UPP?

Usage: Query only

DISPlay:BARGraph:PHOLd <State>

This command switches the indication of the maxhold value of the bar graph measurement on or off.

Parameters:

<State> **ON**
 OFF
 *RST: OFF

Example: :DISP:BARG:PHOL ON

DISPlay:BARGraph:PHOLd:RESet

This command resets the maxhold value of the numeric indication of the bargraph measurement.

Example: :DISP:BARG:PHOL:RES

Usage: Event

DISPlay:BARGraph:TCOupling <State>

This command couples or decouples the bargraph detector and scan trace detector.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: DISP:BARG:TCO ON
 Couples the type and color of bargraph and scan trace.

[SENSe:]DETEctor:RECeiver[:FUNction] <Detector>, [<Detector>, <Detector>]

This command selects the detector for the bargraph measurement.

Parameters:

<Detector>,
[<Detector>,
<Detector>]

You can select up to three detectors, one for each active bargraph.

AVERage

Selects the Average detector.

CAVerage

Selects the CISPR Average detector.

CRMS

Selects the CISPR RMS detector.

NEGative

Selects the Min Peak detector.

POSitive

Selects the Max Peak detector.

QPEak

Selects the Quasipeak detector.

RMS

Selects the RMS detector.

*RST: AVERage

Example:

DET:REC POS,AVER,QPE

Selects the peak, average and quasipeak detectors.

[SENSe:]SWEep:TIME <Time>

This command defines the measurement or acquisition time for bargraph measurements, scans and CISPR APD measurements.

Parameters:

<Time> Range: 10 μ s to 100 s

Example:

SWE:TIME 10s

Defines a measurement time of 10 s.

9.3.1.3 Scan Control

ABORt	458
HOLD	459
INITiate<n>:CONMeas.....	459
INITiate<n>:CONTinuous.....	459
INITiate<n>[:IMMediate].....	459

ABORt

This command stops a measurement and resets the trigger system.

Example:

ABOR; INIT: IMM

Aborts the measurement and restarts it.

Usage:

SCPI confirmed

HOLD

This command interrupts a running scan measurement.

To resume the scan, use `INITiate<n>[:IMMediate]`.

Example: `HOLD`
 Interrupts the scan.

INITiate<n>:CONMeas

This command resumes a scan that was interrupted by a transducer stop at the current receiver frequency.

If the scan was interrupted by the `HOLD` command, you have to resume it with `INITiate<n>[:IMMediate]` on page 459.

Example: `INIT2:CONT OFF`
 Selects single scan mode.
 `SWE:COUN 20`
 Forms an average over 20 scans.
 `INIT2;*WAI`
 Starts the measurement and waits for the end of the 20 scans.
 `INIT2:CONM;*WAI`
 Continues the measurement (next 20 sequences) and waits for the end.

Usage: Event

INITiate<n>:CONTinuous <State>

This command turns single measurements on and off.

The measurement starts immediately.

Parameters:

<State> **ON**
 Continuous measurements.
 OFF
 Single measurements.

Example: `INIT2:CONT OFF`
 Turns on a single measurement.

INITiate<n>[:IMMediate]

The command initiates a new measurement.

In case of a single measurement, the R&S ESRP stops measuring when it has reached the end frequency. When you start a continuous measurement, it stops only if you abort it deliberately.

If you are using trace modes MAXHold, MINHold and AVERage, previous results are reset when you restart the measurement.

In single sweep mode, you can synchronize to the end of the measurement with *OPC, *OPC? or *WAI. In continuous sweep mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous sweep mode in remote control, as results like trace data or markers are only valid after a single sweep end synchronization.

Example: `INIT2:CONT OFF`
 Selects single measurement mode.
 `SWE:COUN 20`
 Forms an average over 20 measurements.
 `INIT2;*WAI`
 Starts the measurement and waits for the end of the complete measurement.

Usage: Event

9.3.1.4 Final Measurements and Automated Test Sequence Control

<code>INITiate<n>:EMITest</code>	460
<code>INITiate<n>:FMEasurement</code>	460
<code>[SENSe:]DETEctor<t>:FMEasurement</code>	460
<code>[SENSe:]FMEasurement:AUTO</code>	461
<code>[SENSe:]FMEasurement:TIME</code>	461

INITiate<n>:EMITest

This command initiates an automated test sequence.

The sequence consists of a scan, a peak search and a final measurement.

Example: `INIT2:EMIT`
 Starts the test sequence.

Usage: Event

INITiate<n>:FMEasurement

This command initiates a final measurement based on the peak list.

Example: `INIT2:FME`
 Starts the final measurement.

Usage: Event

[SENSe:]DETEctor<t>:FMEasurement <Detector>

This command selects the detector for the final measurement.

Parameters:

<Detector>

AVERage

Selects the Average detector.

CAVerage

Selects the CISPR Average detector.

CRMS

Selects the CISPR RMS detector.

NEGative

Selects the Min Peak detector.

POSitive

Selects the Max Peak detector.

QPEak

Selects the Quasipeak detector.

RMS

Selects the RMS detector.

***RST:** QPEak**Example:**

DET:FME POS

[SENSe:]FMEasurement:AUTO <State>

This command turns automatic final measurements on and off.

Parameters:

<State>

ON

Turns on automatic final measurement.

OFF

Turns on interactive final measurement.

***RST:** ON**Example:**

FME:AUTO ON

[SENSe:]FMEasurement:TIME <Time>

This command defines the time each frequency in the peak list is measured during the final measurement.

Parameters:

<Time>

***RST:** 1 s**Example:**

FME:TIME 1us

Defines a measurement time of 1 μ s.**9.3.1.5 Trace Data and Result Query**

This section contains information on the `TRACe:DATA` command and a detailed description of the characteristics of that command. Basically, the command queries the results of the current measurement. The command supports various SCPI parameters

in combination with the query. Each SCPI parameter returns a different aspect of the measurement.

The format of the return values is either in ASCII or binary characters and depends on the format you have set with `FORMat [:DATA]` on page 655.

Querying trace data

The SCPI parameters `TRACE1` | ... | `TRACE6` return the trace data for the corresponding trace.

Example:

```
TRAC? TRACE1
```

The number of results depends on the currently selected number of sweep points. For each sweep point, the command returns one level value. The unit depends on the measurement and on the unit you have currently set.

The trace has to be active for the command to work.

Querying bargraph results

The SCPI parameters `SINGLE` and `PHOLD` return the results of the bargraph measurement.

`SINGLE` returns the current bargraph results for each active bargraph detector.

The order of detectors is as shown in the user interface: maximum peak, minimum peak, quasipeak, average, RMS. Inactive detectors are ignored.

Example:

```
TRAC? SINGLE
```

`PHOLD` returns the bargraph maxhold results for each active bargraph detector.

Each result is made up out of two values:

- Absolute level
- Frequency

The order of detectors is as shown in the user interface: maximum peak, minimum peak, quasipeak, average, RMS. Inactive detectors are ignored.

Example:

```
TRAC? PHOLD
```

Querying scan characteristics

The SCPI parameter `SCAN` returns the scan characteristics while the scan is running.

The amount of returned results depends on the scan settings.

The type of returned data is as follows:

- 4 byte, trace status:
 - bit 0 to 9 represent the subscan
 - bit 10 represents the last block of a subscan
 - bit 11 represents the last block of the last subscan
 - bit 12 represents the last of all blocks (for multiple scans after the last scan)
- 4 byte, number n of measurement results contained in one trace
- 4 byte, bit 0 represents the state of trace 1 (0/1)
- 4 byte, bit 0 represents the state of trace 2 (0/1)
- 4 byte, bit 0 represents the state of trace 3 (0/1)
- 4 byte, bit 0 represents the state of trace 4 (0/1)

Note:

If more than 4 traces are active, the state of trace 5 and 6 is indicated by an additional bit (bit 8) in the UINT32 field of trace 1 and 2.

- $n \times 4$ byte, measurement results for trace 1; only if trace 1 is active
- $n \times 4$ byte, measurement results for trace 2; only if trace 2 is active
- $n \times 4$ byte, measurement results for trace 3; only if trace 3 is active
- $n \times 4$ byte, measurement results for trace 4; only if trace 4 is active
- $n \times 4$ byte, measurement results for trace 5; only if trace 5 is active
- $n \times 4$ byte, measurement results for trace 6; only if trace 6 is active
- $n \times 1$ byte, status information for each measurement result
 - bit 2 represents overrange for trace 1 to trace 6

The data is always returned in binary format ([FORM REAL,32](#)).

Note that the `SCAN` parameter only works while the scan is actually running.

Example:

```
TRAC? SCAN
```

Querying results for a peak search

The SCPI parameters `PLIST1 | ... | PLIST6` returns the results of a peak search for a particular trace or detector (1 to 6).

Each result is made up out of three values:

- 4 byte, frequency
- 4 byte, absolute level
- 4 byte, Delta between absolute level and limit line value at corresponding frequency
 - If no limit line is active, the delta value is set to 0.0

The trace has to be active for the command to work.

Example:

```
TRAC? PLIST3
```

Querying results for the final measurement

The SCPI parameters `FINAL1` | ... | `FINAL6` return the results of the final measurement for a particular trace or detector (1 to 6).

Each result is made up out of three values:

- 4 byte, frequency
- 4 byte, absolute level
- 4 byte, Delta between absolute level and limit line value at corresponding frequency
If no limit line is active, the delta value is set to 0.0

The trace has to be active for the command to work.

Querying the status of the measurement results

The SCPI parameter `STATUS` returns the status information for each measurement result. Thus, the number of returned values depends on the number of measurement results n . For each measurement result, the parameter queries 1 byte of status information.

→ bit 2 represents overrange for trace 1 to trace 6

Note that the `SCAN` parameter only works while the scan is actually running.

Example:

```
TRAC? STATUS
```

Querying spectrogram data

The SCPI parameter `SGRAM` returns the contents of the spectrogram.

For every frame (horizontal line) in the spectrogram, the command returns the power levels that have been measured, one for each sweep or measurement point. The number of frames depends on the size of the history depth. The power level depends on the unit you have currently set.

TRACe[:DATA] <ResultType>

This command queries current trace data and measurement results.

The data format depends on `FORMat [:DATA]`.

Query parameters:

<Trace>

TRACE1 | ... | TRACE6

See "Querying trace data" on page 462.

FINAL1 | ... | FINAL6

See "Querying results for the final measurement" on page 464.

PLIST1 | ... | PLIST6

See "Querying results for a peak search" on page 463.

PHOLD

See "Querying bargraph results" on page 462.

SCAN

See "Querying scan characteristics" on page 462.

SGRam

See "Querying spectrogram data" on page 464

SINGLE

See "Querying bargraph results" on page 462.

STATUS

See "Querying scan characteristics" on page 462.

Return values:

<TraceData>

For more information see tables below.

Example:

TRAC? TRACE1

Queries the level for each trace point of trace 1.

9.3.1.6 Demodulating Analog Signals

[SENSe:]DEMod.....	465
[SENSe:]DEMod:SQUelch:LEVel.....	466
[SENSe:]DEMod:SQUelch[:STATe].....	466

[SENSe:]DEMod <Demod>

This command turns analog demodulation at the receiver frequency on and off and selects the type of analog demodulation.

Parameters:

<Demod>

OFF

Turns demodulation off.

AM

Turns AM demodulation on.

FM

Turns FM demodulation on.

RST: OFF*Example:**

DEM FM

Turns FM demodulation on.

[SENSe:]DEMod:SQUelch:LEVel <Threshold>

This command defines the threshold for selective demodulation. Squelching must be active for this command to work (see [\[SENSe:\]DEMod:SQUelch\[:STATe\]](#)).

All signals below the threshold are not demodulated.

This command is only available if the R&S ESRP option B3 (Audio Demodulation) is installed.

Parameters:

<Threshold> The threshold level as a percentage of the display height.
 Range: 0 to 100
 *RST: 60

Example:

DEMod:SQU:LEV 80
 Sets the squelch level to 80% of the displayed signal.

Usage:

SCPI confirmed

[SENSe:]DEMod:SQUelch[:STATe] <State>

This command turns selective demodulation at the marker position on and off.

A video trigger is automatically activated with the same level as the squelch level, any other trigger or gate settings are deactivated.

This command is only available if the R&S ESRP option B3 (Audio Demodulation) is installed.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

DEMod:SQU ON
 Signals below the level threshold are not sent to the audio output.

Usage:

SCPI confirmed

9.3.1.7 Spectrogram Control

- [Configuring Spectrograms](#).....466
- [Using Markers](#).....470
- [Using Deltamarkers](#).....476

Configuring Spectrograms

CALCulate<n>:SGRam:CLEar[:IMMediate]	467
DISPlay:WINDow:SGRam:COLor:DEFault	467
DISPlay:WINDow:SGRam:COLor:LOWer	467
DISPlay:WINDow:SGRam:COLor:SHAPE	467
DISPlay:WINDow:SGRam:COLor:UPPer	467
DISPlay:WINDow:SGRam:COLor[:STYLE]	468

CALCulate<n>:SGRam:HDEPth.....	468
CALCulate:SGRam:TRACe.....	469
CALCulate<n>:SGRam:TSTamp:DATA?.....	469
MMEMemory:STORe:SGRam.....	469

CALCulate<n>:SGRam:CLEar[:IMMediate]

This command resets the Spectrogram result display and clears the history buffer.

Suffix:

<n> 1...4
Selects the measurement window.

Example: CALC:SGR:CLE
Resets the result display and clears the memory.

Usage: Event

DISPlay:WINDow:SGRam:COLor:DEFault

This command sets the color settings for the spectrogram result display to its default state.

Usage: Event

DISPlay:WINDow:SGRam:COLor:LOWer <Percentage>

This command sets the lower percentage boundary of the spectrogram.

Parameters:

<Percentage> Statistical frequency percentage.
Range: 0 to 66
*RST: 0
Default unit: %

Example: DISP:WIND:SGR:COL:LOW 10
Sets the start of the color map to 10%.

DISPlay:WINDow:SGRam:COLor:SHAPE <Shape>

This command defines the shape and focus of the color curve for the spectrogram result display.

Parameters:

<Shape> Shape of the color curve.
Range: -1 to 1
*RST: 0

DISPlay:WINDow:SGRam:COLor:UPPer <Percentage>

This command sets the upper percentage boundary of the spectrogram.

Parameters:

<Percentage>

Statistical frequency percentage.

Range: 0 to 66

*RST: 0

Default unit: %

Example:

DISP:WIND:SGR:COL:UPP 95

Sets the start of the color map to 95%.

DISPlay:WINDow:SGRam:COLor[:STYLE] <ColorScheme>

This command sets the color scheme for the spectrogram.

Parameters:

<ColorScheme>

HOT

Uses a color range from blue to red. Blue colors indicate low levels, red colors indicate high ones.

COLD

Uses a color range from red to blue. Red colors indicate low levels, blue colors indicate high ones.

RADar

Uses a color range from black over green to light turquoise with shades of green in between. Dark colors indicate low levels, light colors indicate high ones.

GRAYscale

Shows the results in shades of gray. Dark gray indicates low levels, light gray indicates high ones.

*RST: HOT

Example:

DISP:WIND:SGR:COL GRAY

Changes the color scheme of the spectrogram to black and white.

CALCulate<n>:SGRam:HDEPth <HistoryDepth>

This command sets the number of frames to be stored in the R&S ESRP's memory.

Suffix:

<n>

1...4

Selects the measurement window.

Parameters:

<HistoryDepth>

The maximum number of frames depends on the number of sweep points.

Range: 781 to 20000

Increment: 1

*RST: 3000

Example:

CALC:SGR:HDEP 1500

Sets the history depth to 1500.

CALCulate:SGRam:TRACe <Trace>

This command selects the trace the spectrogram is based on.

Parameters:

<Trace> Number of the trace. The range depends on the result display. Scans support six traces, IF Analysis supports three traces.

Example:

CALC:SGR:TRAC 2
Assigns trace two to the spectrogram.

CALCulate<n>:SGRam:TSTamp:DATA? <Mode>

This command queries the time stamp of the frames.

All available frame results are returned by TRACe<n>:DATA on page 538.

Suffix:

<n> 1...4
Selects the measurement window.

Query parameters:

<Mode> **CURRent**
Returns the time stamp of the current frame.
ALL
Returns the time stamps of all frames. The result are sorted in descending order, beginning with the current frame.

Return values:

<TimeStamp> The return values consist of four values for each frame. The first value is the date of the measurement in seconds that have passed since 01.01.1970 in seconds. For a better resolution the second value shows the additional milliseconds. This value is also displayed on screen. These numbers are appropriate for relative uses, but you can also calculate the absolute date and time as displayed on the screen. The third and fourth value are reserved for future uses. If the Spectrogram is empty, the command returns '0,0,0,0'

Example:

CALC:SGR:TST ON
Activates the time stamp.
CALC:SGR:TST:DATA? ALL
Returns the time stamp of all frames sorted in a descending order.

Usage: Query only

MMEMory:STORe:SGRam <File>

This command exports the spectrogram data to a ASCII file.

The file contains the data for every frame in the history buffer. The data corresponding to a particular frame begins with information about the frame number and the time that frame was recorded.

Note that, depending on the size of the history buffer, the process of exporting the data can take a while.

Parameters:

<File> string containing the file name of the destination file

Example:

MME:STOR:SGR

Copies the spectrogram data to a file.

Using Markers

Commands useful to work with markers in the spectrogram described elsewhere:

- [CALCulate<n>:MARKer<m>:MAXimum:LEFT](#) on page 506
- [CALCulate<n>:MARKer<m>:MAXimum:NEXT](#) on page 507
- [CALCulate<n>:MARKer<m>:MAXimum\[:PEAK\]](#) on page 507
- [CALCulate<n>:MARKer<m>:MAXimum:RIGHT](#) on page 507
- [CALCulate<n>:MARKer<m>:MINimum:LEFT](#) on page 508
- [CALCulate<n>:MARKer<m>:MINimum:NEXT](#) on page 508
- [CALCulate<n>:MARKer<m>:MINimum\[:PEAK\]](#) on page 509
- [CALCulate<n>:MARKer<m>:MINimum:RIGHT](#) on page 509

Command exclusive to position markers in the spectrogram:

CALCulate<n>:MARKer<m>:SGRam:FRAME	470
CALCulate<n>:MARKer<m>:SGRam:SARea	471
CALCulate<n>:MARKer<m>:SGRam:XY:MAXimum[:PEAK]	471
CALCulate<n>:MARKer<m>:SGRam:XY:MINimum[:PEAK]	472
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:ABOVE	472
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:BELOW	473
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:NEXT	473
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum[:PEAK]	474
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:ABOVE	474
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:BELOW	474
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:NEXT	475
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum[:PEAK]	475

CALCulate<n>:MARKer<m>:SGRam:FRAME <Frame> | <Time>

This command positions the marker on a particular frame.

The command is available for the spectrogram.

Suffix:

<n> 1...4

Selects the measurement window.

<m>	1...16 Selects the marker.
Parameters:	
<Frame> <Time>	<Frame> (if time stamp is off) Defines the frame to place the marker on. The range is {0...number of recorded frames-1} Note that in receiver mode, it is not possible to select a frame, only a time. <time> (if time stamp is on) Defines the distance of the marker in seconds to the last measured frame (frame 0).
Example:	<code>CALC:MARK:SGR:FRAM -20</code> Sets the marker on the 20th frame before the present. <code>CALC:MARK2:SGR:FRAM 2 s</code> Sets second marker on the frame 2 seconds ago.

CALCulate<n>:MARKer<m>:SGRam:SARea <SearchArea>

This command defines the marker search area.

The command is available for the spectrogram.

Suffix:

<n>	1...4 Selects the measurement window.
<m>	1...16 Selects the marker.

Parameters:

<SearchArea>	VISible Performs a search in the visible frames. Note that VISible is ignored if Spectrogram is not visible for any reason (e.g. if the Spectrum Analyzer is in full screen mode or display update is inactive). MEMory Performs a search over all frames in the memory. *RST: VISible

Example:	<code>CALC:DELT:SGR:SAR MEM</code> Performs a search over all frames in the memory.

CALCulate<n>:MARKer<m>:SGRam:XY:MAXimum[:PEAK]

This command positions the specified marker on the current peak level of the spectrogram. The possible position depends on the marker search area.

The command is available for the spectrogram.

For more information, see [CALCulate<n>:MARKer<m>:SGRam:SARea](#) on page 471.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example:

CALC:MARK2:SGR:SAR VIS

CALC:MARK2:SGR:XY:MAX

Activates and positions marker 2 on the peak level in the visible Spectrogram.

Usage: Event

CALCulate<n>:MARKer<m>:SGRam:XY:MINimum[:PEAK]

This command positions the specified marker on the current minimum level of the spectrogram. The possible position depends on the marker search area.

The command is available for the spectrogram.

For more information, see [CALCulate<n>:MARKer<m>:SGRam:SARea](#) on page 471 .

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example:

CALC:MARK3:SGR:SAR VIS

CALC:MARK3:SGR:XY:MIN

Activates and positions marker 3 on the minimum level in the visible Spectrogram.

Usage: Event

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:ABOVE

This command positions the specified marker on the next peak level of the vertical axis. The search includes only frames above the current marker position. It does not change the horizontal position of the marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example: `CALC:MARK2:SGR:Y:MAX`
 Activates and positions marker 2 on the peak level of the y-axis.
`CALC:MARK2:SGR:Y:MAX:ABV`
 Positions marker 2 on the next higher level found in the diagram area above the current marker position.

Usage: Event

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:BELOW

This command positions the specified marker on the next peak level of the vertical axis. The search includes only frames below the current marker position. It does not change the horizontal position of the marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
 Selects the measurement window.

<m> 1...16
 Selects the marker.

Example: `CALC:MARK2:SGR:Y:MAX`
 Activates and positions marker 2 on the peak level of the y-axis.
`CALC:MARK2:SGR:Y:MAX:BEL`
 Positions marker 2 on the next higher level found in the diagram area below the current marker position.

Usage: Event

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:NEXT

This command positions the specified marker on the next peak level of the vertical axis. The search includes frames above and below the current marker position. It does not change the horizontal position of the marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
 Selects the measurement window.

<m> 1...16
 Selects the marker.

Example: `CALC:MARK2:SGR:Y:MAX`
 Activates and positions marker 2 on the peak level of the y-axis.
`CALC:MARK2:SGR:Y:MAX:NEXT`
 Positions marker 2 on the next higher level.

Usage: Event

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum[:PEAK]

This command positions the specified marker on the current peak level of the vertical axis. The search is performed over all frames. It does not change the horizontal position of the marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example: CALC:MARK2:SGR:Y:MAX
Activates and positions marker 2 on the peak level of the y-axis.

Usage: Event

CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:ABOVE

This command positions the specified marker on the next minimum level of the vertical axis. The search includes only frames above the current marker position. It does not change the horizontal position of the marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example: CALC:MARK2:SGR:Y:MIN
Activates and positions marker 2 on the minimum level of the y-axis.
CALC:MARK2:SGR:Y:MIN:ABOV
Positions marker 2 on the next minimum level found in the diagram area above the current marker position.

Usage: Event

CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:BELOW

This command positions the specified marker on the next minimum level of the vertical axis. The search includes only frames below the current marker position. It does not change the horizontal position of the marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m>	1...16 Selects the marker.
Example:	<code>CALC:MARK2:SGR:Y:MIN</code> Activates and positions marker 2 on the minimum level of the y-axis. <code>CALC:MARK2:SGR:Y:MAX:BEL</code> Positions marker 2 on the next minimum level found in the diagram area below the current marker position.
Usage:	Event

CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:NEXT

This command positions the specified marker on the next minimum level of the vertical axis. The search includes frames above and below the current marker position. It does not change the horizontal position of the marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example:

`CALC:MARK2:SGR:Y:MIN`
Activates and positions marker 2 on the minimum level of the y-axis.

`CALC:MARK2:SGR:Y:MIN:NEXT`
Positions marker 2 on the next minimum level.

Usage: Event

CALCulate<n>:MARKer<m>:SGRam:Y:MINimum[:PEAK]

This command positions the specified marker on the current minimum level of the vertical axis. The search is performed over all captured frames. It does not change the horizontal position of the delta marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example:

`CALC:MARK2:SGR:Y:MIN`
Activates and positions marker 2 on the minimum level of the y-axis.

Usage: Event

Using Deltamarkers

Commands useful to work with markers in the spectrogram described elsewhere:

- `CALCulate<n>:DELTamarker<m>:MAXimum:LEFT` on page 512
- `CALCulate<n>:DELTamarker<m>:MAXimum:NEXT` on page 512
- `CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]` on page 513
- `CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT` on page 513
- `CALCulate<n>:DELTamarker<m>:MINimum:LEFT` on page 513
- `CALCulate<n>:DELTamarker<m>:MINimum:NEXT` on page 514
- `CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]` on page 514
- `CALCulate<n>:DELTamarker<m>:MINimum:RIGHT` on page 514

Command exclusive to position markers in the spectrogram:

<code>CALCulate<n>:DELTamarker<m>:SGRam:FRAME</code>	476
<code>CALCulate<n>:DELTamarker<m>:SGRam:SARea</code>	477
<code>CALCulate<n>:DELTamarker<m>:SGRam:XY:MAXimum[:PEAK]</code>	477
<code>CALCulate<n>:DELTamarker<m>:SGRam:XY:MINimum[:PEAK]</code>	478
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:ABOVE</code>	478
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:BELOW</code>	479
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:NEXT</code>	479
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum[:PEAK]</code>	480
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:ABOVE</code>	480
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:BELOW</code>	480
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:NEXT</code>	481
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum[:PEAK]</code>	481

`CALCulate<n>:DELTamarker<m>:SGRam:FRAME <Frame> | <Time>`

This command positions the delta marker on a particular frame. The frame is relative to the position of marker 1.

The command is available for the spectrogram.

Suffix:

<code><n></code>	1...4 Selects the measurement window.
<code><m></code>	1...16 Selects the marker.

Parameters:

<Frame> | <Time>

<Frame> (if time stamp is off)

Defines the distance of the deltamarker in frames and in relation to the position of marker 1.

Note that in receiver mode, it is not possible to select a frame, only a time.

<time> (if time stamp is on)

Defines the distance of the deltamarker in seconds and in relation to the position of marker 1. The reference is the time stamp of marker 1.

Example:

```
CALC:DELT4:SGR:FRAM -20
```

Sets fourth deltamarker 20 frames below marker 1.

```
CALC:DELT4:SGR:FRAM 2 s
```

Sets fourth deltamarker 2 seconds above the position of marker 1.

CALCulate<n>:DELTamarker<m>:SGRam:SARea <SearchArea>

This command defines the deltamarker search area.

The command is available for the spectrogram.

Suffix:

<n>

1...4

Selects the measurement window.

<m>

1...16

Selects the marker.

Parameters:

<SearchArea>

VISible

Performs a search in the visible frames.

Note that VISible is ignored if Spectrogram is not visible for any reason (e.g. if the Spectrum Analyzer is in full screen mode or display update is inactive).

MEMory

Performs a search over all frames in the memory.

*RST: VISible

Example:

```
CALC:DELT:SGR:SAR MEM
```

Performs a search over all frames in the memory.

CALCulate<n>:DELTamarker<m>:SGRam:XY:MAXimum[:PEAK]

This command positions the specified delta marker on the current peak level of the spectrogram. The possible position depends on the deltamarker search area.

The command is available for the spectrogram.

For more information, see [CALCulate<n>:DELTamarker<m>:SGRam:SARea](#) on page 477.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example:

CALC:DELT2:SGR:SAR VIS

CALC:DELT2:SGR:XY:MAX

Activates and positions delta marker 2 on the peak level in the visible Spectrogram.

Usage: Event

CALCulate<n>:DELTamarker<m>:SGRam:XY:MINimum[:PEAK]

This command positions the specified delta marker on the current minimum level of the spectrogram. The possible position depends on the deltamarker search area.

The command is available for the spectrogram.

For more information, see [CALCulate<n>:DELTamarker<m>:SGRam:SARea](#) on page 477.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example:

CALC:DELT3:SGR:SAR VIS

CALC:DELT3:SGR:XY:MIN

Activates and positions delta marker 3 on the minimum level in the visible Spectrogram.

Usage: Event

CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:ABOVE

This command positions the specified delta marker on the next peak level of the vertical axis. The search includes only frames above the current marker position. It does not change the horizontal position of the delta marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example: `CALC:DELT2:SGR:Y:MAX`
 Activates and positions delta marker 2 on the peak level of the y-axis.
`CALC:DELT2:SGR:Y:MAX:ABOV`
 Positions delta marker 2 on the next higher level found in the diagram area above the current marker position.

Usage: Event

CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:BELOW

This command positions the specified delta marker on the next peak level of the vertical axis. The search includes only frames below the current marker position. It does not change the horizontal position of the delta marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
 Selects the measurement window.

<m> 1...16
 Selects the marker.

Example: `CALC:DELT2:SGR:Y:MAX`
 Activates and positions delta marker 2 on the peak level of the y-axis.
`CALC:DELT2:SGR:Y:MAX:BEL`
 Positions delta marker 2 on the next higher level found in the diagram area below the current marker position.

Usage: Event

CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:NEXT

This command positions the specified delta marker on the next peak level of the vertical axis. The search includes frames above and below the current marker position. It does not change the horizontal position of the delta marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
 Selects the measurement window.

<m> 1...16
 Selects the marker.

Example: `CALC:DELT2:SGR:Y:MAX`
 Activates and positions delta marker 2 on the peak level of the y-axis.
`CALC:DELT2:SGR:Y:MAX:NEXT`
 Positions delta marker 2 on the next higher level.

Usage: Event

CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum[:PEAK]

This command positions the specified delta marker on the current peak level of the vertical axis. The search is performed over all frames. It does not change the horizontal position of the deltamarker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example:

`CALC:DELT2:SGR:Y:MAX`

Activates and positions delta marker 2 on the peak level of the y-axis.

Usage: Event

CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:ABOVE

This command positions the specified delta marker on the next minimum level of the vertical axis. The search includes only frames above the current marker position. It does not change the horizontal position of the delta marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example:

`CALC:DELT2:SGR:Y:MIN`

Activates and positions delta marker 2 on the minimum level of the y-axis.

`CALC:DELT2:SGR:Y:MIN:ABOV`

Positions delta marker 2 on the next minimum level found in the diagram area above the current marker position.

Usage: Event

CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:BELOW

This command positions the specified delta marker on the next minimum level of the vertical axis. The search includes only frames below the current marker position. It does not change the horizontal position of the delta marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example:

`CALC:DELT2:SGR:Y:MIN`

Activates and positions delta marker 2 on the minimum level of the y-axis.

`CALC:DELT2:SGR:Y:MAX:BEL`

Positions delta marker 2 on the next minimum level found in the diagram area below the current marker position.

Usage: Event

CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:NEXT

This command positions the specified delta marker on the next minimum level of the vertical axis. The search includes frames above and below the current marker position. It does not change the horizontal position of the delta marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example:

`CALC:DELT2:SGR:Y:MIN`

Activates and positions delta marker 2 on the minimum level of the y-axis.

`CALC:DELT2:SGR:Y:MIN:NEXT`

Positions delta marker 2 on the next minimum level.

Usage: Event

CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum[:PEAK]

This command positions the specified delta marker on the current minimum level of the vertical axis. The search is performed over all captured frames. It does not change the horizontal position of the delta marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example: `CALC:DELT2:SGR:Y:MIN`
 Activates and positions delta marker 2 on the minimum level of the y-axis.

Usage: Event

9.3.2 Defining the Frequency

<code>DISPlay[:WINDow<n>]:TRACe<t>:X:SPACing</code>	482
<code>[SENSe:]FREQuency:CENTer</code>	482
<code>[SENSe:]FREQuency:CENTer:STEP</code>	482
<code>[SENSe:]FREQuency:MODE</code>	483
<code>[SENSe:]FREQuency:START</code>	483
<code>[SENSe:]FREQuency:STOP</code>	483

`DISPlay[:WINDow<n>]:TRACe<t>:X:SPACing <Scale>`

This command selects the scale of the frequency axis.

Parameters:

`<Scale>` **LINEar**
 Linear scale of the frequency axis.

LOGarithmic
 Logarithmic scale of the frequency axis.

*RST: LOGarithmic

Example: `DISP:TRAC:X:SPAC LIN`
 Selects linear scale for the frequency axis.

`[SENSe:]FREQuency:CENTer <Frequency>`

This command defines the receiver frequency for measurements in the frequency or time domain.

Parameters:

`<Frequency>` 0 to fmax

Range: 0 Hz to fmax

*RST: fmax /2

Example: `FREQ:CENT 100MHz`
 Defines a receiver frequency of 100 MHz.

`[SENSe:]FREQuency:CENTer:STEP <StepSize>`

This command defines the center frequency step size.

Parameters:

`<StepSize>` Range: 1 to fmax

*RST: 0.1 x

Default unit: Hz

Example: `FREQ:CENT:STEP 120 MHz`

[SENSe:]FREQuency:MODE <Mode>

This command selects the scan mode.

Parameters:

<Mode>

SCAN

Selects the stepped scans in the frequency domain.

In the frequency domain, define the frequency with:

- [\[SENSe:\]FREQuency:START](#) on page 483
- [\[SENSe:\]FREQuency:STOP](#) on page 483
- [\[SENSe:\]SCAN<range>:START](#) on page 493
- [\[SENSe:\]SCAN<range>:STOP](#) on page 493
- [\[SENSe:\]FREQuency:SPAN](#) on page 633
- [\[SENSe:\]FREQuency:CENTer](#) on page 482

TDOMain

Selects time domain scans in the frequency domain. See SCAN on how to define the frequency.

Time domain scans are available with options R&S ESRP-B50 and R&S ESRP-K53.

*RST: `TDOMain`

Example: `FREQ:MODE TDOM`
Selects time domain scans.

[SENSe:]FREQuency:START <Start>

This command defines the start frequency for scans in the frequency domain.

Parameters:

<Start>

Range: `0 Hz to fmax`

*RST: `0 Hz`

Example: `FREQ:STAR 20MHz`

[SENSe:]FREQuency:STOP <Stop>

This command defines the stop frequency for scans in the time domain.

Parameters:

<Stop>

Range: `0 Hz to fmax`

*RST: `fmax`

Example: `FREQ:STOP 20MHz`

9.3.3 Configuring the Vertical Axis

CALCulate<n>:UNIT:POWer.....	484
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:BOTTom.....	484
DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing.....	484
INPut:ATTenuation.....	485
INPut:ATTenuation:AUTO.....	485
INPut:ATTenuation:PROTection[:STATe].....	485
INPut:GAIN:AUTO.....	486
INPut:GAIN:STATe.....	486
INPut:IMPedance.....	486

CALCulate<n>:UNIT:POWer <Power>

This command selects the unit for measurement results.

Parameters:

<Power> DBM | V | A | W | DBPW | DBUV | DBMV | DBUA | DBPT |
 DBUV_M | DBUA_M
 *RST: dBm

Example:

CALC:UNIT:POW DBM
 Selects dBm as the unit for signal levels.

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:BOTTom <Level>

This command defines the minimum level displayed on the vertical diagram axis.

Parameters:

<Level> Minimum displayed level. The unit depends on the one you have selected.

Example:

DISP:TRAC:Y:BOTT -20
 The minimum grid level is set to -20 dBuV (pre-condition: the default unit has not been changed)

DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing <ScalingType>

This command selects the scaling of the y-axis.

Suffix:

<n> Selects the measurement window.
 <t> irrelevant

Parameters:

<ScalingType>

LOGarithmic

Logarithmic scaling.

LINear

Linear scaling in %.

LDB

Linear scaling in dB.

*RST: LOGarithmic

Example:

DISP:TRAC:Y:SPAC LIN

Select a linear scale.

INPut:ATTenuation <Attenuation>

This command defines the attenuation level at the RF input.

To protect the input mixer, attenuation levels of 10 dB or less are possible only if you have turned the input protection off with `INPut:ATTenuation:PROTection[:STATe]`.

Parameters:

<Attenuation>

Range: 0 dB to 75 dB

Increment: 5 dB

*RST: 10 dB

Example:

INP:ATT 40dB

Defines an attenuation level of 40 dB.

INPut:ATTenuation:AUTO <State>

This command turns automatic configuration of the attenuation on and off.

If on, the R&S ESRP selects an attenuation that results in a good signal-to-noise ratio without overloading the receiver.

Parameters:

<State>

ON | OFF

*RST: ON

Example:

INP:ATT:AUTO ON

Turns the auto ranging function on.

INPut:ATTenuation:PROTection[:STATe] <State>

This command turns the availability of attenuation levels of 10 dB or less on and off.

Parameters:

<State>

ON | OFF

*RST: OFF

Example:

INP:ATT:PROT ON

INPut:GAIN:AUTO <State>

Turns automatic selection of the preamplifier state on and off.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: :INP:GAIN:AUTO ON
 Includes the preamplifier into the auto range function

INPut:GAIN:STATe <State>

This command turns the 20 dB preamplifier on and off.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: INP:GAIN:STAT ON
 Turns the preamplifier on.

INPut:IMPedance <Impedance>

This command selects the nominal input impedance.

75 Ω should be selected if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = 10 log (75 Ω /50 Ω).

Parameters:

<Impedance> 50 | 75
 *RST: 50 Ω

Example: INP:IMP 75

9.3.4 Selecting the Bandwidth

[SENSe:]BANDwidth:IF.....	486
[SENSe:]BANDwidth BWIDth[:RESolution].....	487
[SENSe:]BANDwidth BWIDth[:RESolution]:AUTO.....	487
[SENSe:]BANDwidth BWIDth[:RESolution]:TYPE.....	487

[SENSe:]BANDwidth:IF <Bandwidth>

This command defines the resolution bandwidth for IF analysis.

Parameters:

<Bandwidth>

Resolution filter bandwidth with a 6 dB bandwidth in the range from 10 Hz to 100 kHz in steps of 1-3-10-....
The available bandwidths depend on the current frequency span.

*RST: 3 kHz

Example:

BAND:IF 10KHZ

Defines a resolution bandwidth of 10 kHz.

[SENSe:]BANDwidth|BWIDth[:RESolution] <Bandwidth>

This command defines the resolution bandwidth.

The available bandwidths depend on the selected filter type. For more information see [chapter 3.2.1, "Measurement Bandwidth"](#), on page 44.

Parameters:

<Bandwidth>

refer to data sheet

*RST: (AUTO is set to ON)

Example:

BAND 1 MHz

Sets the resolution bandwidth to 1 MHz

[SENSe:]BANDwidth|BWIDth[:RESolution]:AUTO <State>

This command couples or decouples the resolution bandwidth to the selected frequency.

The resolution bandwidth is coupled to the frequency only if you have selected the Quasipeak, CISPR Average or CISPR RMS detector.

For more information see [chapter 3.2.1, "Measurement Bandwidth"](#), on page 44.

Parameters:

<State>

ON | OFF

*RST: ON

Example:

BAND:AUTO OFF

Decouples the measurement bandwidth from the frequency range.

[SENSe:]BANDwidth|BWIDth[:RESolution]:TYPE <FilterType>

This command selects the type of resolution filter.

For detailed information on filters see [chapter 4.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 239 and [chapter 4.2.6.4, "List of Available RRC and Channel Filters"](#), on page 240.

When changing the filter type, the next larger filter bandwidth is selected if the same filter bandwidth is not available for the new filter type.

5 Pole filters are not available when using the sweep type "FFT".

Parameters:

<FilterType> **NORMal**
 Gaussian filters

CFILter
 Channel filters

RRC
 RRC filters

P5
 5 Pole filters

CISPr (PULSe)
 6 dB CISPR filter (commercial EMI standards)
 Note: when the filter type is queried, the CISPR filter returns
 'PULS'.

*RST: NORMal

Example: BAND:TYPE NORM

9.3.5 Controlling Inputs and Outputs

INPut:COUPling.....	488
INPut:TYPE.....	488

INPut:COUPling <CouplingType>

Toggles the RF input of the R&S ESRP between AC and DC coupling.

Parameters:

<CouplingType> AC | DC

*RST: AC

Example: INP:COUP DC

INPut:TYPE <Input>

The command selects the signal source.

Parameters:

<Input> **INPUT1**
 Selects RF input 1.

INPUT2
 Selects RF input 2.

*RST: INPUT1

Example: INP:TYPE INPUT1
 Selects RF input 1.

9.3.6 Test Automation

• General Scan Configuration	489
• Scan Table	490
• Peak Search	494
• Peak Lists	497
• Trace Configuration	498
• LISN Settings	499

9.3.6.1 General Scan Configuration

[SENSe:]SWEep:COUNT	489
[SENSe:]SWEep:COUNT:CURRent	489
TRACe<n>:FEED:CONTRol<t>	489
TRACe<n>:POINts	490

[SENSe:]SWEep:COUNT <SweepCount>

This command defines the number of scans performed during a single sweep.

Parameters:

<SweepCount>	Range:	0 to 32767
	*RST:	0

Example:

```
SWE:COUNT 64
Sets the number of sweeps to 64.
INIT:CONT OFF
Switches to single-sweep mode.
INIT;*WAI
Starts a sweep and waits for its end.
```

[SENSe:]SWEep:COUNT:CURRent

This command queries the number of scans that have started in single scan mode with more than one scan (`SENSe:SWEep:COUNT > 1`).

Example:

```
SWE:COUNT 64
sets scan count to 64
INIT:CONT OFF
switches to single scan mode
INIT
starts a scan (without waiting for the scan end!)
SWE:COUNT:CURR?
queries the number of started scans
```

TRACe<n>:FEED:CONTRol<t> <Occasion>

This command turns block data transmission during a scan on and off.

The availability of data is reported in the `STATus:OPERation-Register`.

The block size depends on scan time and the upper limit defined by [TRACe<n>:POINTs](#) on page 490.

Suffix:

<n> irrelevant
 <t> Selects a trace.

Parameters:

<Occasion> **ALWays**
 Block data transmission is on.
NEVer
 Block data transmission is off.
 *RST: NEVer

Example:

TRAC:FEED:CONT ALW
 Switches to single sweep mode.

TRACe<n>:POINTs LIMit, <Points>

This command defines the maximum number of measurement points that are transferred in one block after using [TRAC? SCAN](#).

The total amount of bytes which is transferred depends on the number of active traces.

Suffix:

<n> irrelevant

Parameters:

<Points> Range: 1 to 10000
 *RST: 1000

Example:

TRAC:POIN LIM, 8000
 Transfers a maximum of 8000 measurement values per trace with a single query.

9.3.6.2 Scan Table

[SENSe:]SCAN<range>:BANDwidth:RESolution	491
[SENSe:]SCAN<range>:INPut:ATTenuation	491
[SENSe:]SCAN<range>:INPut:ATTenuation:AUTO	491
[SENSe:]SCAN<range>:INPut:GAIN:AUTO	491
[SENSe:]SCAN<range>:INPut:GAIN[:STATE]	492
[SENSe:]SCAN<range>:INPut:TYPE	492
[SENSe:]SCAN:RANGes[:COUNT]	492
[SENSe:]SCAN<range>:START	493
[SENSe:]SCAN<range>:STEP	493
[SENSe:]SCAN<range>:STOP	493
[SENSe:]SCAN<range>:TIME	494
[[SENSe:]SWEep:SPACing	494

[SENSe:]SCAN<range>:BANDwidth:RESolution <Bandwidth>

This command defines the measurement bandwidth for a particular scan range.

Suffix:

<range> 1...10
Selects the scan range.

Parameters:

<Bandwidth> Range: 10 Hz to 10 MHz
 *RST: 9 kHz

Example:

SCAN4:BAND:RES 1MHz
Defines a measurement bandwidth of 1 MHz for the 4th scan range.

[SENSe:]SCAN<range>:INPut:ATTenuation <Attenuation>

This command defines the attenuation level for a particular scan range.

Suffix:

<range> 1...10
Selects the scan range.

Parameters:

<Attenuation> dBmin to dBmax
 Range: Att(min) to Att(max)
 *RST: 10 dB

Example:

SCAN4:INP:ATT 30dB
Defines an attenuation level of 30 dB for the 4th scan range.

[SENSe:]SCAN<range>:INPut:ATTenuation:AUTO <State>

This command turns auto ranging in a particular scan range on and off.

Suffix:

<range> 1...10
Selects the scan range.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

SCAN4:INP:ATT:AUTO OFF
Turns off auto ranging in the 4th scan range.

[SENSe:]SCAN<range>:INPut:GAIN:AUTO <State>

This command includes the preamplifier in the autoranging function of the selected receiver scan range.

Parameters:

<State> **ON**
 OFF
 *RST: OFF

Example:

:SCAN1:INP:GAIN:AUTO ON
 Includes the preamplifier in the autoranging function for scan range 1

[SENSe:]SCAN<range>:INPut:GAIN[:STATE] <State>

This command turns the preamplifier in a particular scan range on and off.

Suffix:

<range> 1...10
 Selects the scan range.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

SCAN4:INP:GAIN:STAT ON
 Turns on the preamplifier for the 4th scan range.

[SENSe:]SCAN<range>:INPut:TYPE <Input>

This command selects the signal source for a particular scan range.

Suffix:

<range> 1...10
 Selects the scan range.

Parameters:

<Input> **INPUT1**
 Selects RF input 1.
 INPUT2
 Selects RF input 2.
 *RST: INPUT1

Example:

SCAN4:INP:TYPE INPUT2
 Selects RF input 2 as the signal source for the 4th scan range.

[SENSe:]SCAN:RANGes[:COUNT] <Ranges>

This command defines the number of scan ranges.

Parameters:

<Ranges>

Number of ranges in the scan table.

If you enter the value "0", the R&S ESRP ignores the configuration of the scan table. Instead, it performs the measurement based on the current receiver configuration.

Range: 0 to 10

*RST: 0

Example:

SCAN:RANG:COUN 4

Defines 4 scan ranges.

[SENSe:]SCAN<range>:START <Frequency>

This command defines the start frequency of a particular scan range.

Suffix:

<range>

1...10

Selects the scan range.

Parameters:

<Frequency>

Range: fmin to fmax

*RST: 150 kHz

Example:

SCAN4:STAR 30MHz

Defines a start frequency of 30 MHz for the 4th scan range.

[SENSe:]SCAN<range>:STEP <Frequency>

This command defines the frequency stepsize within a particular scan range.

Suffix:

<range>

1...10

Selects the scan range.

Parameters:

<Frequency>

Range: fmin to fmax

*RST: 4 kHz

Example:

SCAN4:STEP 1MHz

Defines a step size of 1 MHz for the 4th scan range.

[SENSe:]SCAN<range>:STOP <Frequency>

This command defines the stop frequency of a particular scan range.

Suffix:

<range>

1...10

Selects the scan range.

Parameters:

<Frequency>

Range: fmin to fmax

*RST: 30 MHz

Example: `SCAN4:STOP 500MHz`
Defines a stop frequency of 500 MHz for the 4th scan range.

[SENSe:]SCAN<range>:TIME <Time>

This command defines the measurement time for a particular scan range.

Note that for time domain scans (R&S ESRP-K53), the available measurement time range depends on the resolution bandwidth.

Suffix:

<range> 1...10
Selects the scan range.

Parameters:

<Time> Range: 10 μ s to 100 s
*RST: 1 ms

Example: `SCAN4:TIME 1 ms`
Defines a measurement time of 1 ms for the 4th scan range.

[SENSe:]SWEep:SPACing <Spacing>

This command selects the frequency step mode.

Note that the command has no effect on the scale and display of the frequency axis.

Parameters:

<Spacing> **LINear**
Linear frequency steps with a fix stepsize.

LOGarithmic
Logarithmic frequency steps with the stepsize being a percentage of the current frequency.

AUTO
The stepsize is coupled to the resolution bandwidth to get the best measurement results.

*RST: LINear

Example: `SWE:SPAC LOG`
Selects logarithmic frequency steps.

9.3.6.3 Peak Search

<code>CALCulate<n>:MARKer<m>:PEXCursion</code>	495
<code>CALCulate<n>:PEAKsearch PSEarch:ADD</code>	495
<code>CALCulate:PEAKsearch PSEarch:CLEAr[:IMMediate]</code>	495
<code>CALCulate<n>:PEAKsearch PSEarch[:IMMediate]</code>	495
<code>CALCulate<n>:PEAKsearch PSEarch:MARGin</code>	496
<code>CALCulate<n>:PEAKsearch PSEarch:METHod</code>	496
<code>CALCulate<n>:PEAKsearch PSEarch:SUBRanges</code>	496
<code>CALCulate<n>:PEAKsearch PSEarch:SUBRanges:PCOunt</code>	497

CALCulate<n>:MARKer<m>:PEXCursion <Excursion>

This command defines the peak excursion

The peak excursion sets the requirements for a peak to be detected during a peak search.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<Excursion> The peak excursion is the distance to a trace maximum that must be attained before a new maximum is recognized, or the distance to a trace minimum that must be attained before a new minimum is recognized

*RST: 6 dB

Example:

CALC:MARK:PEXC 10dB

Defines peak excursion 10 dB.

CALCulate<n>:PEAKsearch|PSEarch:ADD <Frequency>

This command manually adds a particular frequency to the peak list, regardless if the level threshold conditions have been fulfilled for that frequency.

Note that the frequency has to be in the displayed frequency range.

Suffix:

<n> irrelevant

Parameters:

<Frequency> Numeric value in Hz. The range depends on the measurement.

Example:

CALC:PEAK:ADD 93MHz

Adds the frequency 93 MHz to the peak list.

CALCulate:PEAKsearch|PSEarch:CLEar[:IMMediate]

This command deletes the contents of the peak list.

Example:

CALC:PEAK:CLE

Deletes the contents of the peak list.

Usage:

Event

CALCulate<n>:PEAKsearch|PSEarch[:IMMediate]

This command initiates a peak search and creates a peak list.

Example:

CALC:PEAK

Initiates a peak search.

Usage:

Event

CALCulate<n>:PEAKsearch|PSEarch:MARGin <Margin>

This command defines a margin for the peak search.

Suffix:

<n> irrelevant

Parameters:

<Margin> Range: -200 dB to 200 dB
*RST: 6 dB

Example: CALC:PEAK:MARG 5 dB

CALCulate<n>:PEAKsearch|PSEarch:METHod <Method>

This command selects the way the R&S ESRP creates a peak list.

Suffix:

<n> irrelevant

Parameters:

<Method>

SUBRange

Divides the scan range into smaller subranges and looks for a particular number of peaks in each subrange.

PEAK

Looks for a particular number of peaks over the complete scan range.

*RST: PEAK

Example: CALC:PEAK:METH SUBR

Divides the scan range into smaller subranges for the peak search.

CALCulate<n>:PEAKsearch|PSEarch:SUBRanges <Peaks> | <Subranges>

The effects of this command depend on the peak search mode that you have selected.

Suffix:

<n> irrelevant

Parameters:

<Peaks>

If you have selected the "Peaks" search mode, the command defines the number of peaks to look for during the peak search.

Range: 1 to 500

*RST: 50

<Subranges>

If you have selected the Subranges search mode, the command defines the number of subranges that the scan range is split into.

Range: 1 to 50

*RST: 10

Example: `CALC:PEAK:METH SUBR`
`CALC:PEAK:SUBR 25`
 Selects a subrange search and defines 25 subranges.

CALCulate<n>:PEAKsearch|PSEarch:SUBRanges:PCOunt <Peaks>

This command defines the number of peaks to be found in each subrange.

Before you can use this command, you have to select the subrange peak search mode with `CALCulate<n>:PEAKsearch|PSEarch:METHod`.

Parameters:

<Peaks> Number of peaks in one subrange.
 Note that the maximum number of peaks is 500. Thus, the maximum number of peaks per subrange depends on the number of subranges you have defined.
Range: 1 to depends on the number of subranges
***RST:** 1

Example: `CALC:PSE:METH SUBR`
`CALC:PSE:SUBR 20`
`CALC:PSE:SUBR:PCO 5`
 Looks for 5 peaks in each of 20 subranges.

9.3.6.4 Peak Lists

Commands useful to read peak lists described elsewhere:

- `FORMat:DEXPort:DSEParator` on page 656

<code>DISPlay[:WINDow<n>]:TRACe<t>:SYMBol</code>	497
<code>MMEMory:STORe:FINAl</code>	498
<code>MMEMory:STORe:PEAKlist</code>	498

DISPlay[:WINDow<n>]:TRACe<t>:SYMBol <Symbol>

This command turns the peak labels in the diagram on and off.

Parameters:

<Symbol> **CROSSs**
 Each peak is labelled by a symbol. The symbol and its color depend on the trace the peak is on.
OFF
 Peak labels are off.
***RST:** OFF

Example: `DISP:TRAC:SYMB CROSS`

MMEMory:STORe:FINal <FileName>

This command exports the contents of the final measurement peak list to a file in ASCII format.

Parameters:

<FileName> String containing the file name. The extension of the file is *.dat.

Example: :MMEM:STOR:FIN 'A:\TEST.DAT'

Usage: Event

MMEMory:STORe:PEAKlist <FileName>

This command exports the contents of a peak list to a file in ASCII format.

Parameters:

<FileName> String containing the file name. The extension of the file is *.dat.

Example: MMEM:STOR:PEAK 'D:\TEST.DAT'

9.3.6.5 Trace Configuration

Commands useful to configure traces and final measurements described elsewhere:

- [SENSe:]FMEasurement:AUTO on page 461
- [SENSe:]FMEasurement:TIME on page 461
- [SENSe:]DETECTOR<t>:FMEasurement on page 460

[SENSe:][WINDow:]DETECTOR<trace>[:FUNCTION].....498
DISPlay[:WINDow<n>]:TRACe<t>:MODE.....498

[SENSe:][WINDow:]DETECTOR<trace>[:FUNCTION] <Detector>

This command selects the detector for the scan.

Suffix:

<trace> 1...6
Selects the trace.

Parameters:

<Detector> NEGative | POSitive | RMS | AVERage | QPEak | CAVerage |
CRMS
*RST: APEak

Example: DET RMS
Selects the RMS detector.

DISPlay[:WINDow<n>]:TRACe<t>:MODE <Mode>

This command defines the type of display and the evaluation of the traces. WRITE corresponds to the Clr/Write mode of manual operation. The trace is switched off (= BLANK in manual operation) with DISPlay[:WINDow<n>]:TRACe<t>[:STATe].

The number of measurements for AVERage, MAXHold and MINHold is defined with the [SENSe:] AVERage<n>:COUNT or [SENSe:] SWEEp:COUNT commands. It should be noted that synchronization to the end of the indicated number of measurements is only possible in single sweep mode.

If calculation of average values is active, selection between logarithmic and linear averaging is possible. For more detail see [SENSe:] AVERage<n>:TYPE on page 657.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> trace

Parameters:

<Mode> For more information on trace modes see [chapter 3.2.4, "Trace Modes"](#), on page 50.

AVERage

Average trace mode.

BLANK

Blank trace.

MAXHold

Maximum value trace.

MINHold

Minimum value trace.

VIEW

Frozen trace.

WRITe

Clear write trace mode.

Example:

INIT:CONT OFF

Switching to single sweep mode.

SWE:COUN 16

Sets the number of measurements to 16.

DISP:TRAC3:MODE MAXH

Switches on the calculation of the maximum peak for trace 3.

INIT;*WAI

Starts the measurement and waits for the end of the 16 sweeps.

9.3.6.6 LISN Settings

[SENSe:]FMEasurement:LISN:FILTer:HPAS[:STATe].....	500
[SENSe:]FMEasurement:LISN:PHASe.....	500
[SENSe:]FMEasurement:LISN[:TYPE].....	500
INPut:LISN:FILTer:HPAS[:STATe].....	501
INPut:LISN:PHASe.....	501
INPut:LISN[:TYPE].....	502

[SENSe:]FMEasurement:LISN:FILTeR:HPAS[:STATe] <State>

This command turns the 150 kHz highpass filter of the ENV216 network for the final measurement on and off.

The command is available for the R&S ENV216 network.

Parameters:

<State> ON | OFF
 *RST: ON

Example:

FME:LISN:FILT:HPAS ON
 Turns on the highpass filter.

[SENSe:]FMEasurement:LISN:PHASe <Phase>, [<Phase>]

This command selects the phase of the network used for the final measurement.

Parameters:

<Phase> **L1**
 L2
 Available for networks with four phases (R&S ESH2Z5 and
 R&S ENV4200)
 L3
 Available for networks with four phases (R&S ESH2Z5 and
 R&S ENV4200)
 N
 *RST: L1

Example:

FME:LISN:PHAS L1,N

[SENSe:]FMEasurement:LISN[:TYPE] <Type>

This command turns automatic control of the network used for the final measurement on and off. It also selects the type of network in use.

Parameters:

<Type>

ENV216

R&S ENV 216: two phases and highpass are controllable.

ENV4200

R&S ENV 4200: four phases are controllable.

ESH2Z5

R&S ESH2-Z5: four phases and protective earth are controllable.

ESH3Z5

R&S ESH3-Z5: two phases and protective earth are controllable.

FOURphase

R&S ESH2-Z5: four phases and protective earth are controllable.

OFF

Turns off remote control of the LISN.

TWOPhase

R&S ESH3-Z5: two phases and protective earth are controllable.

*RST: OFF

Example:

FME:LISN TWOP

Turns automatic control of the network on and selects the R&S ESH3-Z5 network.

INPut:LISN:FILTER:HPAS[:STATe] <State>

This command turns the 150 kHz highpass filter of the ENV216 network for the pre-measurement on and off.

The command is available for the R&S ENV216 network.

Parameters:

<State>

ON | OFF

*RST: OFF

Example:

INP:LISN:FILT:HPAS ON

Turns on the highpass filter.

INPut:LISN:PHASe <Phase>, [<Phase>]

This command selects the phase of the network used for the premeasurement.

Parameters:

<Phase>

L1**L2**

Available for networks with four phases (R&S ESH2Z5 and R&S ENV4200)

L3

Available for networks with four phases (R&S ESH2Z5 and R&S ENV4200)

N***RST:** L1**Example:**

INP:LISN:PHAS L1, L2

Selects phases L1 and L2 for the scan.

INPut:LISN[:TYPE] <Type>

This command turns automatic control of the network used for the premeasurement on and off. It also selects the type of network in use.

Parameters:

<Type>

ENV216

R&S ENV 216: two phases and highpass are controllable.

ENV4200

R&S ENV 4200: four phases are controllable.

ESH2Z5

R&S ESH2-Z5: four phases and protective earth are controllable.

ESH3Z5

R&S ESH3-Z5: two phases and protective earth are controllable.

FOURphase

R&S ESH2-Z5: four phases and protective earth are controllable.

OFF

Turns off remote control of the LISN.

TWOPhase

R&S ESH3-Z5: two phases and protective earth are controllable.

***RST:** OFF**Example:**

INP:LISN TWOP

Turns automatic control of the network on and selects the R&S ESH3-Z5 network.

9.3.7 Working with Markers

- [Configuring Marker Functionality](#)..... 503
- [Using Markers](#)..... 506
- [Using Delta Markers](#)..... 511

9.3.7.1 Configuring Marker Functionality

CALCulate<n>:MARKer<m>:COUPled[:STATe].....	503
CALCulate<n>:MARKer<m>:FUNCTio:n:CENTer.....	503
CALCulate<n>:MARKer<m>:FUNCTio:n:CSTep.....	503
CALCulate<n>:MARKer<m>:FUNCTio:n:ZOOM.....	504
CALCulate<n>:MARKer<m>:SCOUpled[:STATe].....	504
CALCulate<n>:MARKer<m>:X:SLIMits:LEFT.....	504
CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT.....	505
CALCulate<n>:MARKer<m>:X:SLIMits[:STATe].....	505
DISPlay[:WINDow<n>]:MINFo:STATe.....	506

CALCulate<n>:MARKer<m>:COUPled[:STATe] <State>

This command couples or decouples the receiver frequency to the current marker frequency.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:MARK:COUP ON
 Couples the frequency to the marker frequency.

CALCulate<n>:MARKer<m>:FUNCTio:n:CENTer

This command matches the center or receiver frequency to the frequency of a marker.

If you use the command in combination with a delta marker, that delta marker is turned into a normal marker.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Example:

CALC:MARK2:FUNC:CENT
 Sets the center frequency to the frequency of marker 2.

CALCulate<n>:MARKer<m>:FUNCTio:n:CSTep

This command matches the frequency step size to the current marker frequency.

The command turns delta markers into normal markers.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Example:

CALC:MARK3:FUNC:CST
 Sets the center frequency to the same value as the frequency of marker 3.

Usage: Event

CALCulate<n>:MARKer<m>:FUNCtion:ZOOM <Range>

This command defines the range to be zoomed around marker 1. Marker 1 is activated first, if necessary.

The marker frequency becomes the new receiver or center frequency and the span is adjusted according to the zoom factor.

Note that you should perform a complete measurement with synchronization to the end of the measurement. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<Range> **<numeric_value>**

Example:

```
INIT:CONT OFF
Switches to single sweep mode
CALC:MARK:FUNC:ZOOM 1kHz;*WAI
Activates zooming and waits for its end.
```

CALCulate<n>:MARKer<m>:SCOUpled[:STATe] <State>

This command couples or decouples the marker frequency to the scan range settings.

Parameters:

<State> ON | OFF
*RST: ON

Example:

```
CALC:MARK:SCO ON
Couples the scan range settings to the marker frequency.
```

CALCulate<n>:MARKer<m>:X:SLIMits:LEFT <Limit>

This command sets the left limit of the marker search range.

If the power measurement in zero span is active, this command limits the evaluation range to the trace.

Note: The function is only available if the search limit for marker and delta marker is switched on (see [CALCulate<n>:MARKer<m>:X:SLIMits\[:STATe\]](#)).

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<Limit> The value range depends on the span or sweep time.
The unit is Hz for frequency domain measurements and s for time domain measurements.

Range: 0 to MAX
*RST: left diagram border

Example:

CALC:MARK:X:SLIM ON
Switches the search limit function on.
CALC:MARK:X:SLIM:LEFT 10MHz
Sets the left limit of the search range to 10 MHz.

CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT <Limit>

This command sets the right limit of the marker search range.

If the power measurement in zero span is active, this command limits the evaluation range to the trace.

Note: The function is only available if the search limit for marker and delta marker is switched on (`CALCulate<n>:MARKer<m>:X:SLIMits[:STATe]`).

Suffix:

<n> Selects the measurement window.
<m> irrelevant

Parameters:

<Limit> The value range depends on the span or sweep time.
The unit is Hz for frequency domain measurements and s for time domain measurements.

Range: 0 to MAX
*RST: left diagram border

Example:

CALC:MARK:X:SLIM ON
Switches the search limit function on.
CALC:MARK:X:SLIM:RIGH 20MHz
Sets the right limit of the search range to 20 MHz.

CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] <State>

This command turns marker search limits on and off.

If the power measurement in zero span is active, this command limits the evaluation range on the trace.

Suffix:

<n> Selects the measurement window.
<m> marker

Parameters:

<State> ON | OFF
*RST: OFF

Example: `CALC:MARK:X:SLIM ON`
Switches on search limitation.

DISPlay[:WINDow<n>]:MINFo:STATe <State>

This command turns the marker info field in the diagram on and off.

Parameters:

<State> ON | OFF
*RST: ON

Example: `DISP:MINF:STAT ON`
Turns the marker info field on.

9.3.7.2 Using Markers

<code>CALCulate<n>:MARKer<m>:AOFF</code>	506
<code>CALCulate<n>:MARKer<m>:MAXimum:LEFT</code>	506
<code>CALCulate<n>:MARKer<m>:MAXimum:NEXT</code>	507
<code>CALCulate<n>:MARKer<m>:MAXimum[:PEAK]</code>	507
<code>CALCulate<n>:MARKer<m>:MAXimum:RIGHT</code>	507
<code>CALCulate<n>:MARKer<m>:MINimum:LEFT</code>	508
<code>CALCulate<n>:MARKer<m>:MINimum:NEXT</code>	508
<code>CALCulate<n>:MARKer<m>:MINimum[:PEAK]</code>	509
<code>CALCulate<n>:MARKer<m>:MINimum:RIGHT</code>	509
<code>CALCulate<n>:MARKer<m>[:STATe]</code>	509
<code>CALCulate<n>:MARKer<m>:TRACe</code>	510
<code>CALCulate<n>:MARKer<m>:X</code>	510
<code>CALCulate<n>:MARKer<m>:Y</code>	510

CALCulate<n>:MARKer<m>:AOFF

This command all markers off, including delta markers and marker measurement functions.

Suffix:

<n> Selects the measurement window.
<m> depends on mode
 irrelevant

Example: `CALC:MARK:AOFF`
Switches off all markers.

Usage: Event

CALCulate<n>:MARKer<m>:MAXimum:LEFT

This command positions a marker to the next smaller trace maximum on the left of the current position (i.e. in descending X values).

If no next smaller maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

`CALC:MARK2:MAX:LEFT`

Positions marker 2 to the next lower maximum value to the left of the current value.

Usage:

Event

CALCulate<n>:MARKer<m>:MAXimum:NEXT

This command positions the marker to the next smaller trace maximum.

If no next smaller maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

`CALC:MARK2:MAX:NEXT`

Positions marker 2 to the next lower maximum value.

Usage:

Event

CALCulate<n>:MARKer<m>:MAXimum[:PEAK]

This command positions the marker on the current trace maximum.

The corresponding marker is activated first or switched to the marker mode.

If no maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> depends on mode
Selects the marker.

Example:

`CALC:MARK2:MAX`

Positions marker 2 to the maximum value of the trace.

Usage:

Event

CALCulate<n>:MARKer<m>:MAXimum:RIGHT

This command positions a marker to the next smaller trace maximum on the right of the current value (i.e. in ascending X values).

If no next smaller maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

`CALC:MARK2:MAX:RIGH`

Positions marker 2 to the next lower maximum value to the right of the current value.

Usage:

Event

CALCulate<n>:MARKer<m>:MINimum:LEFT

This command positions a marker to the next higher trace minimum on the left of the current value (i.e. in descending X direction).

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

`CALC:MARK2:MIN`

Positions marker 2 to the minimum value of the trace.

`CALC:MARK2:MIN:LEFT`

Positions marker 2 to the next higher minimum value to the left of the current value.

Usage:

Event

CALCulate<n>:MARKer<m>:MINimum:NEXT

This command positions a marker to the next higher trace minimum.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

`CALC:MARK2:MIN`

Positions marker 2 to the minimum value of the trace.

`CALC:MARK2:MIN:NEXT`

Positions marker 2 to the next higher maximum value.

Usage:

Event

CALCulate<n>:MARKer<m>:MINimum[:PEAK]

This command positions the marker on the current trace minimum.

The corresponding marker is activated first or switched to marker mode, if necessary.

If no minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> depends on mode
Selects the marker.

Example:

CALC:MARK2:MIN

Positions marker 2 to the minimum value of the trace.

Usage:

Event

CALCulate<n>:MARKer<m>:MINimum:RIGHT

This command positions a marker to the next higher trace minimum on the right of the current value (i.e. in ascending X direction).

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

CALC:MARK2:MIN

Positions marker 2 to the minimum value of the trace.

CALC:MARK2:MIN:RIGHT

Positions marker 2 to the next higher minimum value to the right of the current value.

Usage:

Event

CALCulate<n>:MARKer<m>[:STATe] <State>

This command turns markers on and off.

If the corresponding marker number is currently active as a deltamarker, it is turned into a normal marker.

Suffix:

<n> Selects the measurement window.

<m> depends on mode
Selects the marker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:MARK3 ON
 Switches on marker 3 or switches to marker mode.

CALCulate<n>:MARKer<m>:TRACe <Trace>

This command selects the trace a marker is positioned on.

The corresponding trace must have a trace mode other than "Blank".

If necessary, the corresponding marker is switched on prior to the assignment.

Suffix:

<n> Selects the measurement window.
 <m> depends on mode
 Selects the marker.

Parameters:

<Trace> 1 ... 6
 Trace number the marker is positioned on.

Example:

CALC:MARK3:TRAC 2
 Assigns marker 3 to trace 2.

CALCulate<n>:MARKer<m>:X <Position>

This command positions a marker on a particular coordinate on the x-axis.

If marker 2, 3 or 4 is selected and used as delta marker, it is switched to marker mode.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<Position> Numeric value that defines the marker position on the x-axis.
 The unit is either Hz (frequency domain) or s (time domain) or dB (statistics).
 Range: The range depends on the current x-axis range.

Example:

CALC:MARK2:X 1.7MHz
 Positions marker 2 to frequency 1.7 MHz.

CALCulate<n>:MARKer<m>:Y <MarkerPosition>

This command queries the measured value of a marker.

If necessary, the command activates the marker or turns a delta marker into a normal marker.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

The unit of results depends on the result display and the unit you have selected.

In the default setting, the output is made depending on the unit determined with `CALCulate<n>:UNIT:POWer`; only with linear level scaling the output is in %.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<MarkerPosition> Defines the vertical marker position in the persistence spectrum result display.

Return values:

<Result> The measured value of the selected marker is returned.
In I/Q Analyzer mode, if the result display configuration "Real/Imag (I/Q)" is selected, this query returns the Real (Q) value of the marker first, then the Imag (I) value.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK2 ON
Switches marker 2.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK2:Y?
Outputs the measured value of marker 2.
In I/Q Analyzer mode, for "Real/Imag (I/Q)", for example:
1.852719887E-011,0
```

9.3.7.3 Using Delta Markers

<code>CALCulate<n>:DELTamarker<m>:AOFF</code>	512
<code>CALCulate<n>:DELTamarker<m>:LINK</code>	512
<code>CALCulate<n>:DELTamarker<m>:MAXimum:LEFT</code>	512
<code>CALCulate<n>:DELTamarker<m>:MAXimum:NEXT</code>	512
<code>CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]</code>	513
<code>CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT</code>	513
<code>CALCulate<n>:DELTamarker<m>:MINimum:LEFT</code>	513
<code>CALCulate<n>:DELTamarker<m>:MINimum:NEXT</code>	514
<code>CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]</code>	514
<code>CALCulate<n>:DELTamarker<m>:MINimum:RIGHT</code>	514
<code>CALCulate<n>:DELTamarker<m>:MODE</code>	515
<code>CALCulate<n>:DELTamarker<m>[:STATE]</code>	515
<code>CALCulate<n>:DELTamarker<m>:TRACe</code>	515
<code>CALCulate<n>:DELTamarker<m>:X</code>	516
<code>CALCulate<n>:DELTamarker<m>:X:RELative?</code>	516
<code>CALCulate<n>:DELTamarker<m>:Y</code>	516

CALCulate<n>:DELTamarker<m>:AOFF

This command turns all active delta markers off.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Example:

CALC:DELT:AOFF
 Switches off all delta markers.

CALCulate<n>:DELTamarker<m>:LINK <State>

This command links delta marker 1 to marker 1.

If you change the horizontal position of the marker, so does the delta marker.

Suffix:

<n> Selects the measurement window.
 <m> 1
 irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:DELT:LINK ON

CALCulate<n>:DELTamarker<m>:MAXimum:LEFT

This command positions the delta marker to the next smaller trace maximum on the left of the current value (i.e. descending X values). The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Example:

CALC:DELT:MAX:LEFT
 Sets delta marker 1 to the next smaller maximum value to the left of the current value.

CALCulate<n>:DELTamarker<m>:MAXimum:NEXT

This command positions the delta marker to the next smaller trace maximum. The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:`CALC:DELT2:MAX:NEXT`

Sets delta marker 2 to the next smaller maximum value.

CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]

This command positions the delta marker to the current trace maximum. If necessary, the corresponding delta marker is activated first.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:`CALC:DELT3:MAX`

Sets delta marker 3 to the maximum value of the associated trace.

CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT

This command positions the delta marker to the next smaller trace maximum on the right of the current value (i.e. ascending X values). The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:`CALC:DELT:MAX:RIGHT`

Sets delta marker 1 to the next smaller maximum value to the right of the current value.

CALCulate<n>:DELTamarker<m>:MINimum:LEFT

This command positions the delta marker to the next higher trace minimum on the left of the current value (i.e. descending X values). The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example: `CALC:DELT:MIN:LEFT`
Sets delta marker 1 to the next higher minimum to the left of the current value.

CALCulate<n>:DELTamarker<m>:MINimum:NEXT

This command positions the delta marker to the next higher trace minimum. The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example: `CALC:DELT2:MIN:NEXT`
Sets delta marker 2 to the next higher minimum value.

CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]

This command positions the delta marker to the current trace minimum. The corresponding delta marker is activated first, if necessary.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example: `CALC:DELT3:MIN`
Sets delta marker 3 to the minimum value of the associated trace.

CALCulate<n>:DELTamarker<m>:MINimum:RIGHT

This command positions the delta marker to the next higher trace minimum on the right of the current value (i.e. ascending X values). The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example: `CALC:DELT:MIN:RIGHT`
Sets delta marker 1 to the next higher minimum value to the right of the current value.

CALCulate<n>:DELTamarker<m>:MODE <Mode>

This command selects the delta marker mode.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<Mode> **ABSolute**
 Delta marker position in absolute terms.
 RELative
 Delta marker position in relation to a reference marker.
 *RST: REL

Example:

CALC:DELT:MODE ABS
 Absolute delta marker position.

CALCulate<n>:DELTamarker<m>[:STATe] <State>

This command turns delta markers on and off.

If the corresponding marker was a normal marker, it is turned into a delta marker.

No suffix at DELTmarker turns on delta marker 1.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:DELT1 ON
 Switches marker 1 to delta marker mode.

CALCulate<n>:DELTamarker<m>:TRACe <TraceNumber>

This command selects the trace a delta marker is positioned on.

The corresponding trace must have a trace mode other than "Blank".

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<TraceNumber> **1 ... 6**
 Trace number the marker is positioned on.

Example:

CALC:DELT3:TRAC 2
 Assigns delta marker 3 to trace 2.

CALCulate<n>:DELTamarker<m>:X <Position>

This command positions a delta marker on a particular coordinate on the x-axis.

The position is an absolute value.

You can enter a relative value, if you activate relative entry first with `CALCulate<n>:DELTamarker<m>:MODE`.

If fixed reference is active, the position is relative to the fixed reference (`CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed[:STATe]` is ON). A query always returns the absolute position.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<Position> 0 to maximum frequency or sweep time

Example:

`CALC:DELT:X?`

Outputs the absolute frequency/time of delta marker 1.

CALCulate<n>:DELTamarker<m>:X:RELative?

This command queries the x-value of the selected delta marker relative to marker 1 or to the reference position (for `CALC:DELT:FUNC:FIX:STAT ON`). The command activates the corresponding delta marker, if necessary.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

`CALC:DELT3:X:REL?`

Outputs the frequency of delta marker 3 relative to marker 1 or relative to the reference position.

Usage:

Query only

CALCulate<n>:DELTamarker<m>:Y

This command queries the measured value of a delta marker. The corresponding delta marker is activated, if necessary. The output is always a relative value referred to marker 1 or to the reference position (reference fixed active).

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

The unit of results depends on the result display and the unit you have selected.

Table 9-16: Base unit

Parameter, measuring function or result display	Output unit
DBM DBPW DBUV DBMV DBUA	dB (lin/log)
WATT VOLT AMPere	dB (lin), % (log)
statistics function (APD or CCDF) on	dimensionless output

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

INIT:CONT OFF

Switches to single sweep mode.

INIT;*WAI

Starts a sweep and waits for its end.

CALC:DELT2 ON

Switches on delta marker 2.

CALC:DELT2:Y?

Outputs measurement value of delta marker 2.

9.3.8 Limit Lines

- [Using Display Lines](#).....517
- [Using Frequency Lines](#).....518
- [Using Limit Lines](#).....519

9.3.8.1 Using Display Lines

CALCulate<n>:DLINe<k>	517
CALCulate<n>:DLINe<k>:STATe	518

CALCulate<n>:DLINe<k> <Position>

This command defines the (vertical) position of a display line.

Suffix:

<n> Selects the measurement window.

<k> 1 | 2
Selects the display line.

Parameters:

<Position> The value range is variable.
The unit depends on [CALCulate<n>:UNIT:POWer](#).
*RST: (state is OFF)

Example: CALC:DLIN -20dBm

CALCulate<n>:DLINe<k>:STATe <State>

This command turns a display line on and off.

Suffix:

<n> Selects the measurement window.

<k> 1 | 2
 Selects the display line.

Parameters:

<State> ON | OFF

*RST: OFF

Example: CALC:DLIN2:STAT OFF

9.3.8.2 Using Frequency Lines

CALCulate<n>:FLINe<k>.....	518
CALCulate<n>:FLINe<k>:STATe.....	518
CALCulate:TFLINe:STATe.....	519

CALCulate<n>:FLINe<k> <Frequency>

This command defines the position of a frequency line.

Suffix:

<n> Selects the measurement window.

<k> 1 | 2
 Selects the frequency line.

Parameters:

<Frequency> Range: 0 Hz to fmax
 *RST: (STATe to OFF)

Example: CALC:FLIN2 120MHz

CALCulate<n>:FLINe<k>:STATe <State>

This command turns a frequency line on and off.

Suffix:

<n> Selects the measurement window.

<k> 1 | 2
 Selects the frequency line.

Parameters:

<State> ON | OFF

*RST: OFF

Example: CALC:FLIN2:STAT ON

CALCulate:TFLine:STATe <State>

This command turns a frequency line coupled to the receiver frequency on and off.

Parameters:

<State> ON | OFF

Example:

CALC:TFL:STAT ON

Turns on the frequency line.

9.3.8.3 Using Limit Lines

- [Managing Limit Lines](#)..... 519
- [Configuring Limit Lines](#)..... 522
- [Checking Limits](#)..... 531

Managing Limit Lines

CALCulate<n>:LIMit<k>:ACTive?	519
CALCulate<n>:LIMit<k>:COMMeNt	519
CALCulate<n>:LIMit<k>:COpy	520
CALCulate<n>:LIMit<k>:DELeTe	520
CALCulate<n>:LIMit<k>:NAME	520
CALCulate<n>:LIMit<k>:TRACe	521
CALCulate<n>:LIMit<k>:UNIT	521

CALCulate<n>:LIMit<k>:ACTive?

This command queries the names of all active limit lines.

Suffix:

<n> irrelevant

<k> irrelevant

Return values:

<LimitLines> String containing the names of all active limit lines in alphabetical order.

Example:

CALC:LIM:ACT?

Queries the names of all active limit lines.

Usage:

Query only

CALCulate<n>:LIMit<k>:COMMeNt <Comment>

This command defines a comment for the selected limit line in all windows.

Suffix:

<n> irrelevant

<k> Selects the limit line.

Parameters:

<Comment> String containing the comment. The maximum number of characters the string may contain is 40.

Example:

CALC:LIM5:COMM 'Upper limit for spectrum'
Defines the comment for limit line 5.

CALCulate<n>:LIMit<k>:COPY <Line>

This command copies a limit line.

Suffix:

<n> irrelevant

<k> Selects the limit line.

Parameters:

<Line> **1 to 8**
number of the new limit line

<name>

String containing the name of the limit line.

Example:

CALC:LIM1:COPY 2
Copies limit line 1 to line 2.
CALC:LIM1:COPY 'FM2'
Copies limit line 1 to a new line named FM2.

CALCulate<n>:LIMit<k>:DELete

This command deletes a limit line.

Suffix:

<n> irrelevant

<k> Selects the limit line.

Example:

CALC:LIM1:DEL
Deletes limit line 1.

Usage:

Event

CALCulate<n>:LIMit<k>:NAME <Name>

This command selects a limit line that already exists or defines a name for a new limit line.

Suffix:

<n> irrelevant

<k> **1...8 (NF: 1...6)**
Selects the limit line.

Parameters:

<Name> String containing the limit line name.
 *RST: REM1 to REM8 for lines 1 to 8

Example:

CALC:LIM1:NAME 'FM1'
 Assigns the name FM1 to limit line 1.

CALCulate<n>:LIMit<k>:TRACe <TraceNumber>

This command links a limit line to one or more traces.

Suffix:

<n> irrelevant
 <k> Selects the limit line.

Parameters:

<TraceNumber> Range: 1 to 6
 *RST: 1

Example:

CALC:LIM2:TRAC 3
 Assigns limit line 2 to trace 3.

CALCulate<n>:LIMit<k>:UNIT <Unit>

This command defines the unit of a limit line.

Upon selection of the unit DB the limit line is automatically switched to the relative mode. For units different from DB the limit line is automatically switched to absolute mode.

Suffix:

<n> irrelevant
 <k> Selects the limit line.

Parameters:

<Unit> DBM | DBPW | WATT | DBUV | DBMV | VOLT | DBUA |
 AMPere | DB | DBUV_M | DBUA_M | DEG | RAD | S | HZ |
 PCT | (unitless)

If you select dB as the limit line unit, the command automatically turns the limit line into a relative limit line.

In spectrum mode, units deg, rad, s, Hz and PCT are unavailable.

*RST: DBM

Example:

CALC:LIM4:UNIT DBUV
 Sets the unit of limit line 4 to dBµV.

Configuring Limit Lines

CALCulate<n>:LIMit<k>:CONTrol[:DATA].....	522
CALCulate<n>:LIMit<k>:CONTrol:DOMain.....	523
CALCulate<n>:LIMit<k>:CONTrol:MODE.....	523
CALCulate<n>:LIMit<k>:CONTrol:OFFSet.....	523
CALCulate<n>:LIMit<k>:CONTrol:SHIFt.....	524
CALCulate<n>:LIMit<k>:CONTrol:SPACing.....	524
CALCulate<n>:LIMit<k>:LOWer[:DATA].....	524
CALCulate<n>:LIMit<k>:LOWer:MARGin.....	525
CALCulate<n>:LIMit<k>:LOWer:MODE.....	525
CALCulate<n>:LIMit<k>:LOWer:OFFSet.....	526
CALCulate<n>:LIMit<k>:LOWer:SHIFt.....	526
CALCulate<n>:LIMit<k>:LOWer:SPACing.....	527
CALCulate<n>:LIMit<k>:LOWer:STATe.....	527
CALCulate<n>:LIMit<k>:LOWer:THReshold.....	527
CALCulate<n>:LIMit<k>:UPPer[:DATA].....	528
CALCulate<n>:LIMit<k>:UPPer:MARGin.....	528
CALCulate<n>:LIMit<k>:UPPer:MODE.....	529
CALCulate<n>:LIMit<k>:UPPer:OFFSet.....	529
CALCulate<n>:LIMit<k>:UPPer:SHIFt.....	529
CALCulate<n>:LIMit<k>:UPPer:SPACing.....	530
CALCulate<n>:LIMit<k>:UPPer:STATe.....	530
CALCulate<n>:LIMit<k>:UPPer:THReshold.....	530

CALCulate<n>:LIMit<k>:CONTrol[:DATA] <LimitLinePoints>

This command defines the horizontal definition points of a lower limit line.

Suffix:

<n>	Selects the measurement window.
<k>	1...8 Selects the limit line.

Parameters:

<LimitLinePoints>	Variable number of x-axis values. Note that the number of horizontal values has to be the same as the number of vertical values set with CALCulate<n>:LIMit<k>:LOWer[:DATA] or CALCulate<n>:LIMit<k>:UPPer[:DATA] . If not, the R&S ESRP either adds missing values or ignores surplus values. The unit is Hz or s, depending on CALCulate<n>:LIMit<k>:CONTrol:DOMain .

*RST: - (CALC:LIM is set to OFF)

Example:

CALC:LIM2:CONT 1 MHz,30 MHz,100 MHz,300 MHz,1 GHz

Defines 5 reference values for the x-axis of limit line 2.

CALC:LIM2:CONT?

Outputs the reference values for the x-axis of limit line 2 separated by a comma.

CALCulate<n>:LIMit<k>:CONTrol:DOMain <SpanSetting>

This command selects the domain of the limit line.

Suffix:

<n>	Selects the measurement window.
<k>	1...8 Selects the limit line.

Parameters:

<SpanSetting>	FREquency TIME
*RST:	FREquency

Example:

CALC:LIM2:CONT:DOM TIME
Defines zero span for the x-axis of limit line 2.

CALCulate<n>:LIMit<k>:CONTrol:MODE <Mode>

This command selects the horizontal limit line scaling.

Suffix:

<n>	Selects the measurement window.
<k>	1...8 Selects the limit line.

Parameters:

<Mode>	ABSolute Limit line is defined by absolute physical values (Hz or s).
	RELative Limit line is defined by relative values related to the center frequency (frequency domain) or the left diagram border (time domain).
*RST:	ABSolute

Example:

CALC:LIM2:CONT:MODE REL
Defines the x-axis of limit line 2 as relatively scaled.

CALCulate<n>:LIMit<k>:CONTrol:OFFSet <Offset>

This command defines an offset for a complete limit line.

Compared to shifting the limit line, an offset does not actually change the limit line definition points.

Suffix:

<n>	Selects the measurement window.
<k>	1...8 Selects the limit line.

Parameters:

<Offset> Numeric value that defines the offset.
The unit of the offset depends on the scale of the x-axis.

*RST: 0

Example:

`CALC:LIM2:CONT:OFFS 100us`

Sets the X offset for limit line 2 (defined in zero span) to 100µs.

CALCulate<n>:LIMit<k>:CONTrol:SHIFt <Distance>

This command moves a complete limit line horizontally.

Compared to defining an offset, this command actually changes the limit line definition points by the value you define.

Suffix:

<n> Selects the measurement window.

<k> Selects the limit line.

Parameters:

<Distance> Numeric value that defines the distance of the shift.
The unit depends on the scale of the x-axis.

Example:

`CALC:LIM2:CONT:SHIF 50KHZ`

Shifts all reference values of limit line 2 by 50 kHz.

CALCulate<n>:LIMit<k>:CONTrol:SPACing <InterpolMode>

This command selects linear or logarithmic interpolation for the calculation of limit lines from frequency points.

Suffix:

<n> Selects the measurement window.

<k> 1...8
Selects the limit line.

Parameters:

<InterpolMode> LINear | LOGarithmic

*RST: LIN

Example:

`CALC:LIM:CONT:SPAC LIN`

CALCulate<n>:LIMit<k>:LOWer[:DATA] <LimitLinePoints>

This command defines the vertical definition points of a lower limit line.

If the measured values are smaller than the LOWER limit line, the limit check is violated.

Suffix:

<n> irrelevant

<k>	1...8 Selects the limit line.
Parameters:	
<LimitLinePoints>	Variable number of x-axis values. Note that the number of horizontal values has to be the same as the number of vertical values set with <code>CALCulate<n>:LIMit<k>:CONTRol[:DATA]</code> . If not, the R&S ESRP either adds missing values or ignores surplus values. The unit depends on <code>CALCulate<n>:LIMit<k>:UNIT</code> . *RST: (LIMit:STATe is set to OFF)
Example:	<code>CALC:LIM2:LOW -30,-40,-10,-40,-30</code> Defines 5 lower limit values for limit line 2 in the preset unit. <code>CALC:LIM2:LOW?</code> Outputs the lower limit values of limit line 2 separated by a comma.

CALCulate<n>:LIMit<k>:LOWer:MARGin <Margin>

This command defines an area around a lower limit line where limit check violations are still tolerated.

Suffix:

<n>	irrelevant
<k>	1...8 Selects the limit line.

Parameters:

<Margin>	Numeric value that defines the margin. In spectrum mode, the unit is always dB. *RST: 0

Example:	<code>CALC:LIM:LOW:MARG 10dB</code>

CALCulate<n>:LIMit<k>:LOWer:MODE <Mode>

This command selects the vertical limit line scaling.

Suffix:

<n>	irrelevant
<k>	1...8 Selects the limit line.

Parameters:

<Mode>

ABSolute

Limit line is defined by absolute physical values. The unit is variable.

RELative

Limit line is defined by values relative to the reference level (dB).

*RST: ABSolute

Example:

CALC:LIM:LOW:MODE REL

Defines the y-axis of limit line 2 as relative scaled.

CALCulate<n>:LIMit<k>:LOWer:OFFSet <Offset>

This command defines an offset for a complete lower limit line.

Compared to shifting the limit line, an offset does not actually change the limit line definition points.

Suffix:

<n>

irrelevant

<k>

1...8

Selects the limit line.

Parameters:

<Offset>

Numeric value that defines the offset.

*RST: 0

Example:

CALC:LIM2:LOW:OFFS 3dB

Shifts limit line 2 by 3 dB upwards.

CALCulate<n>:LIMit<k>:LOWer:SHIFt <Distance>

This command moves a complete lower limit line vertically.

Compared to defining an offset, this command actually changes the limit line definition points by the value you define.

Suffix:

<n>

irrelevant

<k>

Selects the limit line.

Parameters:

<Distance>

Numeric value that defines the distance of the shift.

The unit depends on [CALCulate<n>:LIMit<k>:UNIT](#) on page 521.

Example:

CALC:LIM3:LOW:SHIF 20DB

Shifts all Y values of limit line 3 by 20 dB.

CALCulate<n>:LIMit<k>:LOWer:SPACing <InterpolType>

This command selects linear or logarithmic interpolation for the lower limit line.

Suffix:

<n> irrelevant
 <k> 1...8
 Selects the limit line.

Parameters:

<InterpolType> LINear | LOGarithmic
 *RST: LIN

Example: CALC:LIM:LOW:SPAC LIN

CALCulate<n>:LIMit<k>:LOWer:STATe <State>

This command turns a lower limit line on and off.

Before you can use this command, you have to select a limit line with
[CALCulate<n>:LIMit<k>:NAME](#).

The limit check is turned on separately. For more information see ["Using Frequency Lines"](#) on page 665.

Suffix:

<n> irrelevant
 <k> 1...8
 Selects the limit line.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: CALC:LIM4:LOW:STAT ON
 Switches on limit line 4 (lower limit).

CALCulate<n>:LIMit<k>:LOWer:THReshold <Threshold>

This command defines a threshold for relative limit lines.

The R&S ESRP uses the threshold for the limit check, if the limit line violates the threshold.

Suffix:

<n> irrelevant
 <k> 1...8
 Selects the limit line.

Parameters:

<Threshold>

Numeric value that defines the threshold.

The unit depends on `CALCulate<n>:LIMit<k>:UNIT`.***RST:** -200 dBm**Example:**`CALC:LIM2:LOW:THR -35DBM`

Defines an absolute threshold value for limit line 2.

CALCulate<n>:LIMit<k>:UPPer[:DATA] <LimitLinePoints>

This command defines the vertical definition points of an upper limit line.

If the measured values exceed the UPPer limit line, the limit is violated.

Suffix:

<n>

irrelevant

<k>

1...8

Selects the limit line.

Parameters:

<LimitLinePoints>

Variable number of x-axis values.

Note that the number of horizontal values has to be the same as the number of vertical values set with `CALCulate<n>:``LIMit<k>:CONTrol[:DATA]`. If not, the R&S ESRP either adds missing values or ignores surplus values.The unit depends on `CALCulate<n>:LIMit<k>:UNIT`.**\*RST:**        (LIMit:STATe is set to OFF)**Example:**`CALC:LIM2:UPP -10,0,0,-10,-5`

Defines 5 upper limit values for limit line 2 in the preset unit.

`CALC:LIM2:UPP?`

Outputs the upper limit values for limit line 2 separated by a comma.

CALCulate<n>:LIMit<k>:UPPer:MARGin <Margin>

This command defines an area around a upper limit line where limit check violations are still tolerated.

Suffix:

<n>

irrelevant

<k>

1...8

Selects the limit line.

Parameters:

<Margin>

Numeric value that defines the margin.

In spectrum mode, the unit is always dB.

***RST:** 0**Example:**`CALC:LIM2:UPP:MARG 10dB`

Defines the margin of limit line 2 to 10 dB below the limit value.

CALCulate<n>:LIMit<k>:UPPer:MODE <Mode>

This command selects the vertical limit line scaling.

Suffix:

<n> irrelevant

<k> 1...8
Selects the limit line.

Parameters:

<Mode>

ABSolute

Limit line is defined by absolute physical values. The unit is variable.

RELative

Limit line is defined by values relative to the reference level (dB).

*RST: ABSolute

Example:

CALC:LIM2:UPP:MODE REL

Defines the y-axis of limit line 2 as relative scaled.

CALCulate<n>:LIMit<k>:UPPer:OFFSet <Offset>

This command defines an offset for a complete upper limit line.

Compared to shifting the limit line, an offset does not actually change the limit line definition points.

Suffix:

<n> irrelevant

<k> 1...8
Selects the limit line.

Parameters:

<Offset>

Numeric value that defines the offset.

*RST: 0

Example:

CALC:LIM2:UPP:OFFS 3dB

Shifts limit line 2 by 3 dB upwards.

CALCulate<n>:LIMit<k>:UPPer:SHIFt <Value>

This command moves a complete upper limit line vertically.

Compared to defining an offset, this command actually changes the limit line definition points by the value you define.

Suffix:

<n> irrelevant

<k> 1...8
Selects the limit line.

Parameters:

<Distance> Numeric value that defines the distance of the shift.
 The unit depends on [CALCulate<n>:LIMit<k>:UNIT](#)
 on page 521.

Example:

CALC:LIM3:UPP:SHIF 20
 Shifts all Y values of limit line 3 by 20 limit line units, e.g. dB.

Usage:

Event

CALCulate<n>:LIMit<k>:UPPer:SPACing <InterpolType>

This command selects linear or logarithmic interpolation for the upper limit line.

Suffix:

<n> irrelevant

<k> 1...8
 Selects the limit line.

Parameters:

<InterpolType> LINear | LOGarithmic
 *RST: LIN

Example:

CALC:LIM:UPP:SPAC LIN

CALCulate<n>:LIMit<k>:UPPer:STATe <State>

This command turns a lower limit line on and off.

Before you can use this command, you have to select a limit line with
[CALCulate<n>:LIMit<k>:NAME](#).

The limit check is turned on separately. For more information see "[Using Frequency Lines](#)" on page 665.

Suffix:

<n> irrelevant

<k> 1...8
 Selects the limit line.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:LIM4:UPP:STAT ON
 Switches on limit line 4 (upper limit).

CALCulate<n>:LIMit<k>:UPPer:THReshold <Threshold>

This command defines a threshold for relative limit lines.

The R&S ESRP uses the threshold for the limit check, if the limit line violates the threshold.

Suffix:

<n>	irrelevant
<k>	1...8 Selects the limit line.

Parameters:

<Threshold>	Numeric value that defines the threshold. The unit depends on <code>CALCulate<n>:LIMit<k>:UNIT</code> . *RST: -200 dBm

Example:

`CALC:LIM2:UPP:THR -35DBM`
Defines an absolute threshold value for limit line 2.

Checking Limits

<code>CALCulate<n>:LIMit<k>:CLEar[:IMMediate]</code>	531
<code>CALCulate<n>:LIMit<k>:FAIL?</code>	531
<code>CALCulate<n>:LIMit<k>:STATe</code>	532

CALCulate<n>:LIMit<k>:CLEar[:IMMediate]

This command deletes the result of the current limit check for all limit lines in all windows.

Suffix:

<n>	irrelevant
<k>	irrelevant

Example:

`CALC:LIM:CLE`
Deletes the result of the limit check.

Usage: Event

CALCulate<n>:LIMit<k>:FAIL?

This command queries the result of a limit check.

Note that for SEM measurements, the limit line suffix <k> is irrelevant, as only one specific SEM limit line is checked for the currently relevant power class.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n>	irrelevant
<k>	limit line

Return values:

<Result> **0**
 PASS
 1
 FAIL

Example:

INIT; *WAI
 Starts a new sweep and waits for its end.
 CALC:LIM3:FAIL?
 Queries the result of the check for limit line 3.

Usage:

Query only

CALCulate<n>:LIMit<k>:STATe <State>

This command turns the limit check on and off.

To query the limit check result, use `CALCulate<n>:LIMit<k>:FAIL?`.

Suffix:

<n> irrelevant
 <k> Selects the limit line.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:LIM:STAT ON
 Switches on the limit check for limit line 1.

9.4 Remote Commands in Spectrum Analyzer Mode

The following remote commands configure and perform spectrum measurements. They are available in spectrum analyzer mode only.

- [Measurements and Result Displays](#).....532
- [Configuring Spectrum Measurements](#).....630
- [Analyzing Spectrum Measurements](#).....652

9.4.1 Measurements and Result Displays

- [Controlling Power Measurements](#).....533
- [Measuring Channel Power](#).....540
- [Measuring the Occupied Bandwidth](#).....560
- [Measuring Spurious Emissions](#).....561
- [Testing Against a Spectrum Emission Mask](#).....570
- [Performing EMI Measurements](#).....588
- [Measuring the Modulation Depth](#).....594
- [Measuring the Harmonic Distortion](#).....596

• Measuring the Carrier-to-Noise Ratio.....	599
• Measuring the Third Order Intercept Point.....	599
• Measuring Statistics.....	601
• Measuring in the Time Domain.....	608
• Measuring the Pulse Power.....	619
• Performing List Evaluations.....	623
• Probe Configuration.....	629

9.4.1.1 Controlling Power Measurements

The following commands control power measurements (channel power, occupied bandwidth etc.) in general.

CALCulate<n>:MARKer<m>:FUNCTION:POWER:SElect.....	533
CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult?.....	534
CALCulate<n>:MARKer<m>:FUNCTION:POWER[:STATe].....	536
CALCulate<n>:MARKer<m>:FUNCTION:POWER:MODE.....	537
[SENSe:]POWER:TRACe.....	537
[SENSe:]POWER:ACHannel:PRESet.....	538
[SENSe:]POWER:ACHannel:PRESet:RLEVel.....	538
TRACe<n>:DATA.....	538

CALCulate<n>:MARKer<m>:FUNCTION:POWER:SElect <MeasType>

This command selects – and switches on – the specified power measurement type in the window specified by the suffix <n>.

The channel spacings and channel bandwidths are configured in the `SENSe:POWER` subsystem.

Note: If CPOWER is selected, the number of adjacent channels (`[SENSe:]POWER:ACHannel:ACPairs`) is set to 0. If ACPower is selected, the number of adjacent channels is set to 1, unless adjacent-channel power measurement is switched on already.

The channel/adjacent-channel power measurement is performed for the trace selected with `[SENSe:]POWER:TRACe`.

The occupied bandwidth measurement is performed for the trace on which marker 1 is positioned. To select another trace for the measurement, marker 1 is to be positioned on the desired trace by means of `CALCulate<n>:MARKer<m>:TRACe`.

Suffix:

<n>	Selects the measurement window.
<m>	Selects the marker.

Parameters:

<MeasType>

ACPower | CPOWer | MCACpower | OBANdwidth | OBWidth | CN | CNO

ACPower

Adjacent-channel power measurement with a single carrier signal

CPOWer

Channel power measurement with a single carrier signal (equivalent to adjacent-channel power measurement with "NO. OF ADJ CHAN" = 0)

MCACpower

Channel/adjacent-channel power measurement with several carrier signals

OBANdwidth | OBWidth

Measurement of occupied bandwidth

CN

Measurement of carrier-to-noise ratio

CNO

Measurement of carrier-to-noise ratio referenced to 1 Hz bandwidth

Example:

CALC:MARK:FUNC:POW:SEL ACP

Switches on adjacent-channel power measurement.

CALCulate<n>:MARKer<m>:FUNCtion:POWer:RESult? <ResultType>

This command queries the result of the performed power measurement in the window specified by the suffix <n>. If necessary, the measurement is switched on prior to the query.

The channel spacings and channel bandwidths are configured in the `SENSe:POWer` subsystem.

To obtain a correct result, a complete sweep with synchronization to the end of the sweep must be performed before a query is output. Synchronization is possible only in the single sweep mode.

Suffix:

<n>

Selects the measurement window.

<m>

Selects the marker.

Parameters:

<ResultType>

ACPower | AOBW | CN | CN0 | CPOWer | PPOWer |
MCACpower | OBANdwidth | OBWidth | BANDwidth**ACPower**

Adjacent-channel power measurement

Results are output in the following sequence, separated by commas:

Power of transmission channel

Power of lower adjacent channel

Power of upper adjacent channel

Power of lower alternate channel 1

Power of upper alternate channel 1

Power of lower alternate channel 2

Power of upper alternate channel 2

The number of measured values returned depends on the number of adjacent/alternate channels selected with `[SENSe:]``POWer:ACHannel:ACPairs`.With logarithmic scaling (RANGE "LOG"), the power is output in the currently selected level unit; with linear scaling (RANGE "LIN dB" or "LIN %"), the power is output in W. If `[SENSe:]POWer:ACHannel:MODE` is set to "REL", the adjacent/alternate-channel power is output in dB.**AOBW (AllOccupiedBandWidth)**

Returns the occupied bandwidth, as well as the position and level of the temporary markers T1 and T2 used to calculate the occupied bandwidth.

The syntax of the result is:

<Occupied bandwidth>,<T1 x-value>,<T1 y-value>,<T2 x-value>,<T2 y-value>

CN

Measurement of carrier-to-noise ratio

The carrier-to-noise ratio in dB is returned.

CN0

Measurement of carrier-to-noise ratio referenced to 1 Hz bandwidth.

The carrier-to-noise ratio in dB/Hz is returned.

CPOWer

Channel power measurement

In a Spectrum Emission Mask measurement, the query returns the power result for the reference range, if this power reference type is selected.

With logarithmic scaling (RANGE LOG), the channel power is output in the currently selected level unit; with linear scaling (RANGE LIN dB or LIN %), the channel power is output in W.

PPOWer

Power of the highest peak

In a Spectrum Emission Mask measurement, the query returns the power result for the reference range, if this power reference type is selected.

MCACpower

Channel/adjacent-channel power measurement with several carrier signals

Results are output in the following sequence, separated by commas:

Power of carrier signal 1 to 18s in ascending order

Total power of all carrier signals

Power of lower adjacent channel

Power of upper adjacent channel

Power of lower alternate channel 1

Power of upper alternate channel 1

Power of lower alternate channel 2

Power of upper alternate channel 2

The number of measured values returned depends on the number of carrier signals and adjacent/alternate channels selected with `[SENSe:]POWer:ACHannel:TXChannel:COUNt` and

`[SENSe:]POWer:ACHannel:ACPairs`.

If only one carrier signal is measured, the total value of all carrier signals is not output.

With logarithmic scaling (RANGE LOG), the power is output in dBm; with linear scaling (RANGE LIN dB or LIN %), the power is output in W. If `[SENSe:]POWer:ACHannel:MODE` is set to "REL", the adjacent/alternate-channel power is output in dB.

OBANdwidth | OBWidth

Measurement of occupied bandwidth

The occupied bandwidth in Hz is returned.

Example:

For an example of channel/adjacent-channel power measurement see [chapter 9.16.4, "Measuring the Channel and Adjacent Channel Power"](#), on page 798.

Example of occupied bandwidth measurement

`POW:BAND 90PCT`

Defines 90 % as the percentage of the power to be contained in the bandwidth range to be measured.

`INIT:CONT OFF`

Switches over to single sweep mode.

`INIT;*WAI`

Starts a sweep and waits for the end of the sweep.

`CALC:MARK:FUNC:POW:RES? OBW`

Queries the occupied bandwidth measured.

CALCulate<n>:MARKer<m>:FUNCtion:POWer[:STATe] <State>

This command switches off the power measurement in the window specified by the suffix <n>.

Suffix:**<n>** Selects the measurement window.**<m>** Selects the marker.**Parameters:****<State>** OFF**Example:**

CALC:MARK:FUNC:POW OFF

Switches off the power measurement.

Usage:

Event

CALCulate<n>:MARKer<m>:FUNCTION:Power:MODE <Mode>

This command defines the method by which the channel power values are calculated from the current trace in the window specified by the suffix **<n>**.

Suffix:**<n>** Selects the measurement window.**<m>** Selects the marker.**Parameters:****<Mode>** WRITe | MAXHold**WRITe**

The channel power and the adjacent channel powers are calculated directly from the current trace

MAXHold

The power values are calculated from the current trace and compared with the previous power value using a maximum algorithm.

Example:

CALC:MARK:FUNC:POW:MODE MAXH

Sets the Maxhold channel power mode.

[SENSe:]POWer:TRACe <TraceNumber>

This command assigns the channel/adjacent channel power measurement to the indicated trace. The corresponding trace must be active, i.e. its state must be different from blank.

Note: The measurement of the occupied bandwidth (OBW) is performed on the trace on which marker 1 is positioned. To evaluate another trace, marker 1 must be positioned to another trace with **CALCulate<n>:MARKer<m>:TRACe**.

Parameters:**<TraceNumber>** 1 to 6**Example:**

POW:TRAC 2

Assigns the measurement to trace 2.

[SENSe:]POWer:ACHannel:PRESet <Setting>

This command adjusts the frequency span, the measurement bandwidths and the detector as required for the number of channels, the channel bandwidths and the channel spacings selected in the active power measurement. If necessary, adjacent-channel power measurement is switched on prior to the adjustment.

To obtain correct results, a complete sweep with synchronization to the end of the sweep must be performed after the adjustment. Synchronization is possible only in the single sweep mode.

The result is queried with the `CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult?` command.

Parameters:

<Setting> ACPower | CPOWer | MCACpower | OBANdwidth | OBWidth | CN | CNO

Example:

```
POW:ACH:PRES ACP
```

Sets the frequency span, the measurement bandwidths and the detector as required for the ACLR measurement.

```
INIT:CONT OFF
```

Switches over to single sweep mode.

```
INIT;*WAI
```

Starts a sweep and waits for the end of the sweep.

```
CALC:MARK:FUNC:POW:RES? ACP
```

Queries the result of the adjacent-channel power measurement.

[SENSe:]POWer:ACHannel:PRESet:RLEVel

This command adapts the reference level to the measured channel power and – if required – switches on previously the adjacent channel power measurement. This ensures that the signal path of the instrument is not overloaded. Since the measurement bandwidth is significantly smaller than the signal bandwidth in channel power measurements, the signal path can be overloaded although the trace is still significantly below the reference level. If the measured channel power equals the reference level, the signal path is not overloaded.

Subsequent commands have to be synchronized with *WAI, *OPC or *OPC? to the end of the auto range process which would otherwise be aborted.

Example:

```
POW:ACH:PRES:RLEV;*WAI
```

Adapts the reference level to the measured channel power.

TRACe<n>:DATA <Trace>, <Data> | <ResultType>

This command queries current trace data and measurement results.

If you use it as a setting command, it transfers trace data from an external source to the R&S ESRP.

The data format depends on `FORMat[:DATA]`.

Parameters:

<Trace> Selects the trace to write data to.

TRACE1 | ... | TRACE6

<Data> Contains the data to transfer.

Query parameters:

<ResultType> Selects the type of result to be returned.

TRACE1 | ... | TRACE6

Returns the trace data for the corresponding trace.

LIST

Returns the results of the peak list evaluation for Spurious Emission and Spectrum Emission Mask measurements.

SPURious

Returns the peak list of Spurious Emission measurements.

Return values:

<TraceData> For more information see tables below.

Example:

TRAC TRACE1,+A\$

Transfers trace data ('+A\$') to trace 1.

Example:

TRAC? TRACE3

Queries the data of trace 3.

Table 9-17: Return values for TRACE1 to TRACE6 parameter

The trace data consists of a list of power levels that have been measured. The number of power levels in the list depends on the currently selected number of sweep points. The unit depends on the measurement and on the unit you have currently set.

If you are measuring with the auto peak detector, the command returns positive peak values only.

If you are working with the "Real/Imag (I/Q)" result display in I/Q Analyzer mode, the command returns two values for each trace point, first the real parts of the signal, then the imaginary parts ($I_1, \dots, I_n, Q_1, \dots, Q_n$).

For SEM or Spurious Emission measurement results, the x-values should be queried as well, as they are not equi-distant (see TRACe<n> [:DATA] :X? on page 661).

Table 9-18: Return values for LIST parameter

For every measurement range you have defined (range 1...n), the command returns eight values in the following order.

<No>,<StartFreq>,<StopFreq>,<RBW>,<PeakFreq>,<PowerAbs>,<PowerRel>,<PowerDelta>,<LimitCheck>,<Unused1>,<Unused2>

- <No>: range number
- <StartFreq>,<StopFreq>: start and stop frequency of the range
- <RBW>: resolution bandwidth
- <PeakFreq>: frequency of the peak in a range
- <PowerAbs>: absolute power of the peak in dBm
- <PowerRel>: power of the peak in relation to the channel power in dBc
- <PowerDelta>: distance from the peak to the limit line in dB, positive values indicate a failed limit check
- <LimitCheck>: state of the limit check (0 = PASS, 1 = FAIL)
- <Unused1>,<Unused2>: reserved (0.0)

9.4.1.2 Measuring Channel Power

The following commands configure and perform channel power or ACLR measurements.

• Managing Measurement Configurations	540
• Configuring ACLR Channels	542
• Defining Weighting Filters	546
• Selecting the Reference Channel	548
• Checking Limits	549
• Analyzing Results	557
• Predefined CP/ACLR Standards	559

Managing Measurement Configurations

The following commands control measurement configurations for ACLR measurements.

CALCulate<n>:MARKer<m>:FUNCTION:POWER:PRESet	540
CALCulate<n>:MARKer<m>:FUNCTION:POWER:STANdard:CATalog?	541
CALCulate<n>:MARKer<m>:FUNCTION:POWER:STANdard:DELeTe	541
CALCulate<n>:MARKer<m>:FUNCTION:POWER:STANdard:SAVE	541

**CALCulate<n>:MARKer<m>:FUNCTION:POWER:PRESet <Standard> |
<UserStandard>**

This command selects the power measurement setting for a standard and switches on the corresponding measurement, if required.

The configuration for a standard comprises of the parameters weighting filter, channel bandwidth and spacing, resolution and video bandwidth, as well as detector and sweep time.

The settings for standards IS95A and C differ as far as the calculation method of channel spacings is concerned. For IS95A and J-STD008 the spacing is calculated from the center of the main channel to the center of the corresponding adjacent channel, for IS95C from the center of the main channel to the nearest border of the adjacent channel.

Suffix:

<n>	Selects the measurement window.
<m>	Selects the marker.

Setting parameters:

<Standard>	Note that predefined standards go without quotes, while user standards have to be in quotes ('user standard').
<Predefined standard>	
	Predefine standard according to table in " Predefined CP/ACLR Standards " on page 559.
'<string>'	
	User-defined standard with <string> being the name of the user standard.

Return values:

<Standard>

<Predefined standard> | USER | NONE

<Predefined standard>

Predefine standard according to table in "[Predefined CP/ACLR Standards](#)" on page 559.

USER

User-defined standard is set

NONE

not yet defined

with <string> being the name of a user standard. Note that pre-defined standards go without quotes, while user standards have to be in quotes ('user standard').

For further details refer to "[Predefined CP/ACLR Standards](#)" on page 559.

Example:

```
CALC:MARK:FUNC:POW:PRES TETRA
```

Selects the standard setting for TETRA

Example:

```
CALC:MARK:FUNC:POW:PRES 'my_aclr_standard'
```

Selects the user standard my_aclr_standard

CALCulate<n>:MARKer<m>:FUNCTION:POWer:STANdard:CATalog?

This command queries all available standards, including user standards.

The numeric suffix at MARKer is irrelevant.

Example:

```
CALC:MARK:FUNC:POW:STAN:CAT?
```

Queries the available standards.

Usage:

Query only

CALCulate<n>:MARKer<m>:FUNCTION:POWer:STANdard:DELeTe <Standard>

This command deletes an ACLR standard.

The numeric suffix at MARKer is irrelevant.

Parameters:

<Standard>

Name of the standard you want to delete.

Example:

```
CALC:MARK:FUNC:POW:STAN:DEL 'CDMA2000'
```

Deletes the CDMA2000 standard.

CALCulate<n>:MARKer<m>:FUNCTION:POWer:STANdard:SAVE <Standard>

This command saves a customized ACLR standard.

The numeric suffix at MARKer is irrelevant.

Parameters:

<Standard>

Specifies the name of the user standard.

Example: `CALC:MARK:FUNC:POW:STAN:SAVE 'CDMA2000'`
Saves the user standard with the name CDMA2000.

Configuring ACLR Channels

The following commands configure channels for channel power and ACLR measurements.

<code>[SENSe:]POWer:ACHannel:ACPairs</code>	542
<code>[SENSe:]POWer:ACHannel:BANDwidth BWIDth:ACHannel</code>	542
<code>[SENSe:]POWer:ACHannel:BANDwidth BWIDth:ALTerNate<channel></code>	543
<code>[SENSe:]POWer:ACHannel:BANDwidth BWIDth[:CHANnel<channel>]</code>	543
<code>[SENSe:]POWer:ACHannel:NAME:ACHannel</code>	543
<code>[SENSe:]POWer:ACHannel:NAME:ALTerNate<channel></code>	544
<code>[SENSe:]POWer:ACHannel:NAME:CHANnel<channel></code>	544
<code>[SENSe:]POWer:ACHannel:SPACing[:ACHannel]</code>	544
<code>[SENSe:]POWer:ACHannel:SPACing:ALTerNate<channel></code>	545
<code>[SENSe:]POWer:ACHannel:SPACing:CHANnel<channel></code>	545
<code>[SENSe:]POWer:ACHannel:TXCHannel:COUNt</code>	545

`[SENSe:]POWer:ACHannel:ACPairs <ChannelPairs>`

This command sets the number of adjacent channels (upper and lower channel in pairs). The figure 0 stands for pure channel power measurement.

Parameters:

<ChannelPairs> 0 to 12
*RST: 1

Example:

`POW:ACH:ACP 3`
Sets the number of adjacent channels to 3, i.e. the adjacent channel and alternate adjacent channels 1 and 2 are switched on.

`[SENSe:]POWer:ACHannel:BANDwidth|BWIDth:ACHannel <Bandwidth>`

This command defines the channel bandwidth of the adjacent channel of the radio transmission system. If the bandwidth of the adjacent channel is changed, the bandwidths of all alternate adjacent channels are automatically set to the same value.

With `[SENSe<source>:]POWer:HSPeet` set to ON, steep-edged channel filters are available. For further information on filters refer to [chapter 4.2.6.4, "List of Available RRC and Channel Filters"](#), on page 240 .

Parameters:

<Bandwidth> 100 Hz to 40 GHz
*RST: 14 kHz

Example:

`POW:ACH:BWID:ACH 30 kHz`
Sets the bandwidth of all adjacent channels to 30 kHz.

**[SENSe:]POWer:ACHannel:BANDwidth|BWIDth:ALTernate<channel>
<Bandwidth>**

This command defines the channel bandwidth of the specified alternate adjacent channels of the radio transmission system. If the channel bandwidth of one alternate adjacent channel is changed (e.g. channel 3), the bandwidth of all subsequent alternate adjacent channels (e.g. 4–11) is automatically set to the same value.

With [SENSe<source>:] POWer:HSPEED set to ON, steep-edged channel filters are available. For further information on filters refer to [chapter 4.2.6.4, "List of Available RRC and Channel Filters"](#), on page 240 .

Suffix:

<channel> 1...11
 the alternate adjacent channel

Parameters:

<Bandwidth> 100 Hz to 40 GHz
 *RST: 14 kHz

Example: POW:ACH:BWID:ALT2 30 kHz

**[SENSe:]POWer:ACHannel:BANDwidth|BWIDth[:CHANnel<channel>]
<Bandwidth>**

This command sets the channel bandwidth of the specified TX channel in the radio communication system. The bandwidths of adjacent channels are not influenced by this modification.

With [SENSe<source>:] POWer:HSPEED set to ON, steep-edged channel filters are available. For further information on filters refer to [chapter 4.2.6.4, "List of Available RRC and Channel Filters"](#), on page 240.

Parameters:

<Bandwidth> 100 Hz to 40 GHz
 *RST: 14 kHz

Example: POW:ACH:BWID:CHAN2 30 kHz
 Sets the bandwidth of the TX channel 2 to 30 kHz.

[SENSe:]POWer:ACHannel:NAME:ACHannel <Name>

This command defines a name for the adjacent channel. The name is displayed in the result diagram and the result table.

Parameters:

<Name> *RST: Adj

Example: POW:ACH:NAME:ACH 'XYZ'
 Defines the name of the adjacent channel as 'XYZ'.

[SENSe:]POWer:ACHannel:NAME:ALTErnate<channel> <Name>

This command defines a name for the specified alternate channel. The name is displayed in the result diagram and the result table.

Suffix:

<channel> 1...11
the alternate channel

Parameters:

<Name> *RST: ALT<1...11>

Example:

POW:ACH:NAME:ALT3 'XYZ'
Defines the name of the third alternate channel as 'XYZ'.

[SENSe:]POWer:ACHannel:NAME:CHANnel<channel> <Name>

This command defines a name for the specified TX channel. The name is displayed in the result diagram and the result table.

Suffix:

<channel> 1...12
the TX channel

Parameters:

<Name> *RST: TX<1...12>

Example:

POW:ACH:NAME:CHAN3 'XYZ'
Defines the name of the third transmission channel as 'XYZ'.

[SENSe:]POWer:ACHannel:SPACing[:ACHannel] <Spacing>

This command defines the spacing between the carrier signal and the adjacent channel (ADJ). The modification of the adjacent-channel spacing (ADJ) causes a change in all higher adjacent-channel spacings (ALT1, ALT2, ...): they are all multiplied by the same factor (new spacing value/old spacing value).

Parameters:

<Spacing> 100 Hz to 20 GHz
*RST: 14 kHz

Example:

POW:ACH:SPAC 33kHz
Sets the spacing between the carrier signal and the adjacent channel to 33 kHz, the alternate adjacent channel 1 to 66 kHz, the alternate adjacent channel 2 to 99 kHz, and so on.

[SENSe:]POWer:ACHannel:SPACing:ALTernate<channel> <Spacing>

This command defines the spacing between the alternate adjacent channels and the TX channel (ALT1, ALT2, ...). A modification of a higher adjacent-channel spacing causes a change by the same factor (new spacing value/old spacing value) in all higher adjacent-channel spacings, while the lower adjacent-channel spacings remain unchanged.

Suffix:

<channel> 1...11
the alternate adjacent channel

Parameters:

<Spacing> 100 Hz to 20 GHz
*RST: 40 kHz (ALT1), 60 kHz (ALT2), 80 kHz (ALT3), ...

Example:

POW:ACH:SPAC:ALT1 100 kHz

Sets the spacing between TX channel and alternate adjacent channel 1 (ALT1) from 40 kHz to 100 kHz. In consequence, the spacing between the TX channel and all higher alternate adjacent channels is increased by the factor $100/40 = 2.5$: ALT2 = 150 kHz, ALT3 = 200 kHz, ALT4 = 250 kHz.

[SENSe:]POWer:ACHannel:SPACing:CHANnel<channel> <Spacing>

This command defines the channel spacing for the carrier signals.

Suffix:

<channel> 1...11
the TX channel

Parameters:

<Spacing> 14 kHz to 20 GHz
*RST: 20 kHz

Example:

POW:ACH:SPAC:CHAN 25kHz

[SENSe:]POWer:ACHannel:TXCHannel:COUNt <Number>

This command selects the number of carrier signals.

The command is available only for multicarrier channel and adjacent-channel power measurements with span > 0 (see [CALCulate<n>:MARKer<m>:FUNction:POWer:SElect](#) on page 533).

Parameters:

<Number> 1 to 18
*RST: 1

Example:

POW:ACH:TXCH:COUN 3

Defining Weighting Filters

The following commands define weighting filters for ACLR measurements.

[SENSe:]POWer:ACHannel:FILTer:ALPHa:ACHannel.....	546
[SENSe:]POWer:ACHannel:FILTer:ALPHa[:ALL].....	546
[SENSe:]POWer:ACHannel:FILTer:ALPHa:ALTErnate<channel>.....	546
[SENSe:]POWer:ACHannel:FILTer:ALPHa:CHANnel<channel>.....	547
[SENSe:]POWer:ACHannel:FILTer[:STATe]:ACHannel.....	547
[SENSe:]POWer:ACHannel:FILTer[:STATe]:ALTErnate<channel>.....	547
[SENSe:]POWer:ACHannel:FILTer[:STATe]:CHANnel<channel>.....	547
[SENSe:]POWer:ACHannel:FILTer[:STATe]:ALL.....	548

[SENSe:]POWer:ACHannel:FILTer:ALPHa:ACHannel <Alpha>

This command defines the roll-off factor for the weighting filter of the adjacent channel.

Parameters:

<Alpha> <numeric value>
 *RST: 0,22

Example: POW:ACH:FILT:ALPH:ACH 0,35

[SENSe:]POWer:ACHannel:FILTer:ALPHa[:ALL] <Alpha>

This command defines the roll-off factor for the weighting filter of all channels.

Parameters:

<Alpha> <numeric value>
 *RST: 0,22

Example: POW:ACH:FILT:ALPH:ALL 0,35

[SENSe:]POWer:ACHannel:FILTer:ALPHa:ALTErnate<channel> <Alpha>

This command defines the roll-off factor for the weighting filter of the specified alternate channel.

Suffix:

<channel> 1...11
 the alternate channel

Parameters:

<Alpha> <numeric value>
 *RST: 0,22

Example: POW:ACH:FILT:ALPH:ALT3 0,35
 Sets the alpha value for the weighting filter for the alternate channel 3 to 0,35.

[SENSe:]POWer:ACHannel:FILTer:ALPHa:CHANnel<channel> <Alpha>

This command defines the roll-off factor for the weighting filter of the specified TX channel.

Suffix:

<channel> 1...11
the TX channel

Parameters:

<Alpha> <numeric value>
*RST: 0,22

Example:

POW:ACH:FILT:ALPH:CHAN3 0,35
Sets the alpha value for the weighting filter for the TX channel 3 to 0,35.

[SENSe:]POWer:ACHannel:FILTer[:STATe]:ACHannel <State>

This command activates the weighting filter for the adjacent channel.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

POW:ACH:FILT:ACH ON

[SENSe:]POWer:ACHannel:FILTer[:STATe]:ALTErnate<channel> <State>

This command activates the weighting filter for the specified alternate channel.

Suffix:

<channel> 1...11
the alternate adjacent channel

Parameters:

<State> ON | OFF
*RST: OFF

Example:

POW:ACH:FILT:ALT3 ON
Activates the weighting filter for alternate channel 3.

[SENSe:]POWer:ACHannel:FILTer[:STATe]:CHANnel<channel> <State>

This command activates the weighting filter for the specified TX channel.

Suffix:

<channel> 1...18
the TX channel

Parameters:

<State> ON | OFF
*RST: OFF

Example: `POW:ACH:FILT:CHA3 ON`
 Activates the weighting filter for TX channel 3.

[SENSe:]POWer:ACHannel:FILTer[:STATe]:ALL <State>

This command activates the weighting filter for all channels.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: `POW:ACH:FILT ON`

Selecting the Reference Channel

The following commands define the reference channel for relative ACLR measurements.

[SENSe:]POWer:ACHannel:REFerence:AUTO ONCE.....	548
[SENSe:]POWer:ACHannel:REFerence:TXCHannel:AUTO.....	548
[SENSe:]POWer:ACHannel:REFerence:TXCHannel:MANual.....	549

[SENSe:]POWer:ACHannel:REFerence:AUTO ONCE

This command sets the reference value to the currently measured channel power for the relative measurement.

Example: `POW:ACH:REF:AUTO ONCE`

[SENSe:]POWer:ACHannel:REFerence:TXCHannel:AUTO <Channel>

This command activates the automatic selection of a transmission channel to be used as a reference channel in relative adjacent-channel power measurements.

The transmission channel with the highest power, the transmission channel with the lowest power, or the transmission channel nearest to the adjacent channels can be defined as a reference channel.

The command is available only for multicarrier channel and adjacent-channel power measurements with span > 0 ([CALCulate<n>:MARKer<m>:FUNctioN:POWer:SElect](#) on page 533).

Parameters:

<Channel>

MINimum | MAXimum | LHIGhest

MINimum

Transmission channel with the lowest power

MAXimum

Transmission channel with the highest power

LHIGhest

Lowermost transmission channel for the lower adjacent channels, uppermost transmission channel for the upper adjacent channels

Example:

POW:ACH:REF:TXCH:AUTO MAX

The transmission channel with the highest power is used as a reference channel.

[SENSe:]POWer:ACHannel:REFerence:TXCHannel:MANual <ChannelNumber>

This command selects a transmission channel to be used as a reference channel in relative adjacent-channel power measurements.

The command is available only for multicarrier channel and adjacent-channel power measurements with span > 0 ([CALCulate<n>:MARKer<m>:FUNCTION:POWer:SElect](#) on page 533).**Parameters:**

<ChannelNumber>

1 to 18

*RST:

1

Example:

POW:ACH:REF:TXCH:MAN 3

Transmission channel 3 is used as a reference channel.

Checking Limits

The following commands configure limit checks for channel power and ACLR measurements.

CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute	550
CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute:STATe	550
CALCulate<n>:LIMit<k>:ACPower:ACHannel[:RELative]	551
CALCulate<n>:LIMit<k>:ACPower:ACHannel[:RELative]:STATe	552
CALCulate<n>:LIMit<k>:ACPower:ACHannel:RESult	552
CALCulate<n>:LIMit<k>:ACPower:ALternate<Channel>:ABSolute	553
CALCulate<n>:LIMit<k>:ACPower:ALternate<Channel>:ABSolute:STATe	554
CALCulate<n>:LIMit<k>:ACPower:ALternate<channel>[:RELative]	555
CALCulate<n>:LIMit<k>:ACPower:ALternate<Channel>[:RELative]:STATe	555
CALCulate<n>:LIMit<k>:ACPower:ALternate<Channel>:RESult?	556
CALCulate<n>:LIMit<k>:ACPower[:STATe]	557

CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute <LowerLimit>, <UpperLimit>

This command defines the absolute limit value for the lower/upper adjacent channel during adjacent-channel power measurement (Adjacent Channel Power).

Note that the absolute limit value has no effect on the limit check as soon as it is below the relative limit value defined with **CALCulate<n>:LIMit<k>:ACPower:ACHannel[:RELative]**. This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

Suffix:

<n> Selects the measurement window.
 <k> irrelevant

Parameters:

<LowerLimit>, first value: -200DBM to 200DBM; limit for the lower and the
 <UpperLimit> upper adjacent channel
 *RST: -200DBM

Example:

CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM
 Sets the absolute limit value for the power in the lower and upper adjacent channel to -35 dBm.

CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute:STATe <State>

This command activates the limit check for the adjacent channel when adjacent-channel power measurement (Adjacent Channel Power) is performed. Before the command, the limit check for the channel/adjacent-channel measurement must be globally switched on using **CALCulate<n>:LIMit<k>:ACPower[:STATe]**.

The result can be queried with **CALCulate<n>:LIMit<k>:ACPower:ACHannel:RESult**. It should be noted that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no correct results are available.

Suffix:

<n> Selects the measurement window.
 <k> irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

```
CALC:LIM:ACP:ACH 30DB, 30DB
```

Sets the relative limit value for the power in the lower and upper adjacent channel to 30 dB below the channel power.

```
CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM
```

Sets the absolute limit value for the power in the lower and upper adjacent channel to -35 dBm.

```
CALC:LIM:ACP ON
```

Switches on globally the limit check for the channel/adjacent-channel measurement.

```
CALC:LIM:ACP:ACH:REL:STAT ON
```

Switches on the check of the relative limit values for adjacent channels.

```
CALC:LIM:ACP:ACH:ABS:STAT ON
```

Switches on the check of absolute limit values for the adjacent channels.

```
INIT;*WAI
```

Starts a new measurement and waits for the sweep end.

```
CALC:LIM:ACP:ACH:RES?
```

Queries the limit check result in the adjacent channels.

CALCulate<n>:LIMit<k>:ACPower:ACHannel[:RELative] <LowerLimit>, <UpperLimit>

This command defines the relative limit of the upper/lower adjacent channel for adjacent-channel power measurements. The reference value for the relative limit value is the measured channel power.

It should be noted that the relative limit value has no effect on the limit check as soon as it is below the absolute limit value defined with the [CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute](#) command. This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

Suffix:

<n> Selects the measurement window.

<k> irrelevant

Parameters:

<LowerLimit>, <UpperLimit> 0 to 100dB; the value for the lower limit must be lower than the value for the upper limit

*RST: 0 dB

Example:

```
CALC:LIM:ACP:ACH 30DB, 30DB
```

Sets the relative limit value for the power in the lower and upper adjacent channel to 30 dB below the channel power.

CALCulate<n>:LIMit<k>:ACPower:ACHannel[:RELative]:STATe <State>

This command activates the limit check for the relative limit value of the adjacent channel when adjacent-channel power measurement is performed. Before this command, the limit check must be activated using `CALCulate<n>:LIMit<k>:ACPower[:STATe]`.

The result can be queried with `CALCulate<n>:LIMit<k>:ACPower:ACHannel:RESult`. Note that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no correct results are available.

Suffix:

<n> Selects the measurement window.

<k> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:

```
CALC:LIM:ACP:ACH 30DB, 30DB
```

Sets the relative limit value for the power in the lower and upper adjacent channel to 30 dB below the channel power.

```
CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM
```

Sets the absolute limit value for the power in the lower and upper adjacent channel to -35 dBm.

```
CALC:LIM:ACP ON
```

Switches on globally the limit check for the channel/adjacent channel measurement.

```
CALC:LIM:ACP:ACH:STAT ON
```

Switches on the check of the relative limit values for adjacent channels.

```
CALC:LIM:ACP:ACH:ABS:STAT ON
```

Switches on the check of absolute limit values for the adjacent channels.

```
INIT;*WAI
```

Starts a new measurement and waits for the sweep end.

```
CALC:LIM:ACP:ACH:RES?
```

Queries the limit check result in the adjacent channels.

CALCulate<n>:LIMit<k>:ACPower:ACHannel:RESult

This command queries the result of the limit check for the upper/lower adjacent channel when adjacent channel power measurement is performed.

If the power measurement of the adjacent channel is switched off, the command produces a query error.

Suffix:

<n> Selects the measurement window.

<k> irrelevant

Return values:

Result The result is returned in the form <result>, <result> where <result> = PASSED | FAILED, and where the first returned value denotes the lower, the second denotes the upper adjacent channel.

Example:

`CALC:LIM:ACP:ACH 30DB, 30DB`

Sets the relative limit value for the power in the lower and upper adjacent channel to 30 dB below the channel power.

`CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM`

Sets the absolute limit value for the power in the lower and upper adjacent channel to -35 dB.

`CALC:LIM:ACP ON`

Switches on globally the limit check for the channel/adjacent channel measurement.

`CALC:LIM:ACP:ACH:STAT ON`

Switches on the limit check for the adjacent channels.

`INIT;*WAI`

Starts a new measurement and waits for the sweep end.

`CALC:LIM:ACP:ACH:RES?`

Queries the limit check result in the adjacent channels.

CALCulate<n>:LIMit<k>:ACPpower:ALTernate<Channel>:ABSolute <LowerLimit>, <UpperLimit>

This command defines the absolute limit value for the lower/upper alternate adjacent-channel power measurement (Adjacent Channel Power).

Note that the absolute limit value for the limit check has no effect as soon as it is below the relative limit value defined with `CALCulate<n>:LIMit<k>:ACPpower:ACHannel[:RELative]`. This mechanism allows automatic checking of the absolute basic values defined in mobile radio standards for the power in adjacent channels.

Suffix:

<n> Selects the measurement window.

<k> irrelevant

<Channel> 1...11
the alternate channel

Parameters:

<LowerLimit>, <UpperLimit> first value: -200DBM to 200DBM; limit for the lower and the upper alternate adjacent channel

*RST: -200DBM

Example:

`CALC:LIM:ACP:ALT2:ABS -35DBM, -35DBM`

Sets the absolute limit value for the power in the lower and upper second alternate adjacent channel to -35 dBm.

CALCulate<n>:LIMit<k>:ACPpower:ALTernate<Channel>:ABSolute:STATe **<State>**

This command activates the limit check for the alternate adjacent channels for adjacent-channel power measurement (Adjacent Channel Power).

Before the command, the limit check must be globally switched on for the channel/adjacent-channel power with the `CALCulate<n>:LIMit<k>:ACPpower[:STATe]` command.

The result can be queried with `CALCulate<n>:LIMit<k>:ACPpower:ALTernate<channel>[:RELative]`. Note that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no correct results are available.

Suffix:

<n>	Selects the measurement window.
<k>	irrelevant
<Channel>	1...11 the alternate channel

Parameters:

<State>	ON OFF
*RST:	OFF

Example:

```
CALC:LIM:ACP:ALT2 30DB, 30DB
```

Sets the relative limit value for the power in the lower and upper second alternate adjacent channel to 30 dB below the channel power.

```
CALC:LIM:ACP:ALT2:ABS -35DBM, -35DBM
```

Sets the absolute limit value for the power in the lower and upper second alternate adjacent channel to -35 dBm.

```
CALC:LIM:ACP ON
```

Switches on globally the limit check for the channel/adjacent channel measurement.

```
CALC:LIM:ACP:ALT2:STAT ON
```

Switches on the check of the relative limit values for the lower and upper second alternative adjacent channels.

```
CALC:LIM:ACP:ALT2:ABS:STAT ON
```

Switches on the check of absolute limit values for the lower and upper second alternative adjacent channels.

```
INIT;*WAI
```

Starts a new measurement and waits for the sweep end.

```
CALC:LIM:ACP:ALT2:RES?
```

Queries the limit check result in the second alternate adjacent channels.

CALCulate<n>:LIMit<k>:ACPower:ALTernate<channel>[:RELative] <LowerLimit>, <UpperLimit>

This command defines the limit for the alternate adjacent channels for adjacent channel power measurements. The reference value for the relative limit value is the measured channel power.

Note that the relative limit value has no effect on the limit check as soon as it is below the absolute limit defined with `CALCulate<n>:LIMit<k>:ACPower:ALTernate<Channel>:ABSolute`. This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

Suffix:

<n> Selects the measurement window.
 <k> irrelevant
 <Channel> 1...11
 the alternate channel

Parameters:

<LowerLimit>, first value: 0 to 100dB; limit for the lower and the upper alternate
 <UpperLimit> adjacent channel
 *RST: 0 DB

Example:

`CALC:LIM:ACP:ALT2 30DB, 30DB`

Sets the relative limit value for the power in the lower and upper second alternate adjacent channel to 30 dB below the channel power.

CALCulate<n>:LIMit<k>:ACPower:ALTernate<Channel>[:RELative]:STATe <State>

This command activates the limit check for the alternate adjacent channels for adjacent channel power measurements. Before the command, the limit check must be activated using `CALCulate<n>:LIMit<k>:ACPower[:STATe]`.

The result can be queried with `CALCulate<n>:LIMit<k>:ACPower:ALTernate<channel>[:RELative]`. Note that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no correct results are obtained.

Suffix:

<n> Selects the measurement window.
 <k> irrelevant
 <Channel> 1...11
 the alternate channel

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

```
CALC:LIM:ACP:ALT2 30DB, 30DB
```

Sets the relative limit value for the power in the lower and upper second alternate adjacent channel to 30 dB below the channel power.

```
CALC:LIM:ACP:ALT2:ABS -35DBM, -35DBM
```

Sets the absolute limit value for the power in the lower and upper second alternate adjacent channel to -35 dBm.

```
CALC:LIM:ACP ON
```

Switches on globally the limit check for the channel/adjacent channel measurement.

```
CALC:LIM:ACP:ALT2:STAT ON
```

Switches on the check of the relative limit values for the lower and upper second alternate adjacent channel.

```
CALC:LIM:ACP:ALT2:ABS:STAT ON
```

Switches on the check of absolute limit values for the lower and upper second alternate adjacent channel.

```
INIT;*WAI
```

Starts a new measurement and waits for the sweep end.

```
CALC:LIM:ACP:ALT2:RES?
```

Queries the limit check result in the second alternate adjacent channels.

CALCulate<n>:LIMit<k>:ACPpower:ALTernate<Channel>:RESult?

This command queries the result of the limit check for the alternate adjacent channels for adjacent channel power measurements.

If the power measurement of the adjacent channel is switched off, the command produces a query error.

Suffix:

<n>	Selects the measurement window.
<k>	irrelevant
<Channel>	1...11 the alternate channel

Parameters:

The result is returned in the form <result>, <result> where <result> = PASSED | FAILED and where the first (second) returned value denotes the lower (upper) alternate adjacent channel.

Example:

```
CALC:LIM:ACP:ALT2 30DB, 30DB
```

Sets the relative limit value for the power in the lower and upper second alternate adjacent channel to 30 dB below the channel power.

```
CALC:LIM:ACP:ALT2:ABS -35DBM, -35DBM
```

Sets the absolute limit value for the power in the lower and upper second alternate adjacent channel to -35 dBm.

```
CALC:LIM:ACP ON
```

Switches on globally the limit check for the channel/adjacent channel measurement.

```
CALC:LIM:ACP:ALT2:STAT ON
```

Switches on the limit check for the lower and upper second adjacent channel.

```
INIT;*WAI
```

Starts a new measurement and waits for the sweep end.

```
CALC:LIM:ACP:ALT2:RES?
```

Queries the limit check result in the second alternate adjacent channels.

Usage: Query only

CALCulate<n>:LIMit<k>:ACPpower[:STATe] <State>

This command switches on and off the limit check for adjacent-channel power measurements. The commands `CALCulate<n>:LIMit<k>:ACPpower:ACHannel[:RELative]:STATe` or `CALCulate<n>:LIMit<k>:ACPpower:ALternate<Channel>[:RELative]:STATe` must be used in addition to specify whether the limit check is to be performed for the upper/lower adjacent channel or for the alternate adjacent channels.

Suffix:

<n> Selects the measurement window.

<k> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:

```
CALC:LIM:ACP ON
```

Switches on the ACLR limit check.

Analyzing Results

The following commands analyze and retrieve measurement results for ACLR measurements.

<code>CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult:PHZ</code>	558
<code>[SENSe:]POWER:ACHannel:MODE</code>	558
<code>[SENSe:]POWER:HSPeed</code>	559
<code>[SENSe:]POWER:NCORrection</code>	559

CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult:PHZ <State>

This command switches the query response of the power measurement results between output of absolute values and output referred to the measurement bandwidth.

The measurement results are output with the [CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult?](#) command.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

ON

Results output: channel power density in dBm/Hz

OFF

Results output: channel power is displayed in dBm

*RST: OFF

Example:

CALC:MARK:FUNC:POW:RES:PHZ ON

Output of results referred to the channel bandwidth.

For details on a complete measurement example refer to

[CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult?](#) on page 534.

[SENSe:]POWer:ACHannel:MODE <Mode>

This command switches between absolute and relative adjacent channel measurement. The command is only available with span > 0 and if the number of adjacent channels is greater than 0.

For the relative measurement the reference value is set to the currently measured channel power using the command [\[SENSe:\]POWer:ACHannel:REference:AUTO ONCE](#).

Parameters:

<Mode> ABSolute | RELative

ABSolute

absolute adjacent channel measurement

RELative

relative adjacent channel measurement

*RST: RELative

Example:

POW:ACH:MODE REL

Sets the adjacent channel measurement mode to relative.

[SENSe:]POWer:HSPeet <State>

This command switches on or off the high-speed channel/adjacent channel power measurement. The measurement itself is performed in zero span on the center frequencies of the individual channels. The command automatically switches to zero span and back.

Depending on the selected mobile radio standard, weighting filters with characteristic or very steep-sided channel filters are used for band limitation.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: POW:HSP ON

[SENSe:]POWer:NCORrection <Mode>

This command turns noise cancellation on and off.

If noise cancellation is on, the R&S ESRP performs a reference measurement to determine its inherent noise and subtracts the result from the channel power measurement result (first active trace only).

The inherent noise of the instrument depends on the selected center frequency, resolution bandwidth and level setting. Therefore, the correction function is disabled whenever one of these parameters is changed. A corresponding message is displayed on the screen. Noise correction must be turned on again manually after the change.

Parameters:

<Mode> **ON**
 Performs noise correction.
 OFF
 Performs no noise correction.
 AUTO
 Performs noise correction.
 After a parameter change, noise correction is restarted automatically and a new correction measurement is performed.
 *RST: OFF

Example: POW:NCOR ON

Predefined CP/ACLR Standards

Parameter	Standard
W-CDMA 3GPP FWD	W-CDMA 3.84 MHz forward
W-CDMA 3GPP REV	W-CDMA 3.84 MHz reverse
CDMA IS95A FWD	CDMA IS95A forward
CDMA IS95A REV	CDMA IS95A reverse

Parameter	Standard
CDMA IS95C Class 0 FWD	CDMA IS95C Class 0 forward
CDMA IS95C Class 0 REV	CDMA IS95C Class 0 reverse
CDMA J-STD008 FWD	CDMA J-STD008 forward
CDMA J-STD008 REV	CDMA J-STD008 reverse
CDMA IS95C Class 1 FWD	CDMA IS95C Class 1 forward
CDMA IS95C Class 1 REV	CDMA IS95C Class 1 reverse
CDMA 2000	CDMA 2000
TD SCDMA FWD	TD-SCDMA forward
TD SCDMA REV	TD-SCDMA reverse
WLAN 802.11A	WLAN 802.11A
WLAN 802.11B	WLAN 802.11B
WiMAX	WiMAX
WIBRO	WIBRO
RFID 14443	RFID 14443
EUTRa	EUTRA/LTE Square
REUTRa	EUTRA/LTE Square/RRC
TETRA	TETRA
PDC	PDC
PHS	PHS
CDPD	CDPD
GSM	GSM

9.4.1.3 Measuring the Occupied Bandwidth

The following commands configure measurements of the occupied bandwidth.

Commands useful to measure the occupied bandwidth described elsewhere:

- `CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult?` on page 534
- `CALCulate<n>:MARKer<m>:FUNCTION:POWER:SElect` on page 533
- `CALCulate<n>:MARKer<m>:FUNCTION:POWER[:STATe]` on page 536
- `[SENSe:]POWER:ACHannel:BANDwidth|BWIDth[:CHANnel<channel>]` on page 543
- `[SENSe:]POWER:ACHannel:PRESet` on page 538
- `[SENSe:]POWER:ACHannel:PRESet:RLEVel` on page 538
- `TRACe<n>:DATA` on page 538

`[SENSe:]POWER:BANDwidth|BWIDth.....` 561

[SENSe:]POWER:BANDwidth|BWIDth <Percentage>

This command defines the percentage of the power with respect to the total power.

This value is the basis for the occupied bandwidth measurement (see [SENSe:]POWER:ACHannel:PRESet on page 538).

Parameters:

<Percentage> 10 to 99.9PCT
 *RST: 99PCT

Example: POW:BWID 95PCT

9.4.1.4 Measuring Spurious Emissions

The following commands configure and perform spurious emission measurements.

- [Controlling the Measurement](#).....561
- [Managing a Sweep List](#).....562
- [Configuring List Evaluation](#).....569
- [Retrieving Results](#).....570

Controlling the Measurement

Note that the spurious measurement must be initialized before you can start configuring the sweep list or list evaluation.

Commands useful to retrieve results described elsewhere:

- [SENSe:]SWEep:MODE on page 572

[INITiate<n>:SPURious](#)..... 561
[MMEMory:STORe<n>:SPURious](#)..... 561

INITiate<n>:SPURious

This command initiates a Spurious Emissions measurement.

Suffix:

<n> irrelevant

Example:

INIT:SPUR
 Starts a Spurious Emissions measurement.

Usage:

Event

MMEMory:STORe<n>:SPURious <FileName>

This command exports the marker peak list available for spurious emission measurements to a file.

Suffix:

<n> irrelevant

Parameters:

<FileName> String containing the path and name of the target file.

Example:

MMEM:STOR:SPUR 'test'

Saves the current marker peak list in the file test.dat.

Usage:

Event

Managing a Sweep List

The following commands configure the sweep list for spurious emission measurements.

[SENSe:]LIST:RANGe<range>:BANDwidth[:RESolution]	562
[SENSe:]LIST:RANGe<range>:BANDwidth:VIDeo	562
[SENSe:]LIST:RANGe<range>:BREak	563
[SENSe:]LIST:RANGe<range>:COUNT	563
[SENSe:]LIST:RANGe<range>:DELeTe	563
[SENSe:]LIST:RANGe<range>:DETector	564
[SENSe:]LIST:RANGe<range>:FILTer:TYPE	564
[SENSe:]LIST:RANGe<range>[:FREQuency]:STARt	565
[SENSe:]LIST:RANGe<range>[:FREQuency]:STOP	565
[SENSe:]LIST:RANGe<range>:INPut:ATTenuation	565
[SENSe:]LIST:RANGe<range>:INPut:ATTenuation:AUTO	566
[SENSe:]LIST:RANGe<range>:INPut:GAIN:STATe	566
[SENSe:]LIST:RANGe<range>:LIMit:STARt	566
[SENSe:]LIST:RANGe<range>:LIMit:STATe	567
[SENSe:]LIST:RANGe<range>:LIMit:STOP	567
[SENSe:]LIST:RANGe<range>:POINts	567
[SENSe:]LIST:RANGe<range>:RLEVel	568
[SENSe:]LIST:RANGe<range>:SWEep:TIME	568
[SENSe:]LIST:RANGe<range>:SWEep:TIME:AUTO	568
[SENSe:]LIST:RANGe<range>:TRANsducer	568

[SENSe:]LIST:RANGe<range>:BANDwidth[:RESolution] <Value>

This command sets the RBW value for the specified range.

Suffix:

<range> 1...20
range

Parameters:

<Value> Refer to the data sheet.
*RST: 30.0 kHz

Example:

LIST:RANG2:BAND:RES 5000

Sets the RBW for range 2 to 5 kHz.

[SENSe:]LIST:RANGe<range>:BANDwidth:VIDeo

This command sets the VBW value for the specified range.

Suffix:

<range> 1...20
range

Parameters:

<Value> Refer to the data sheet.
*RST: 10.0 MHz

Example:

LIST:RANG1:BAND:VID 5000000
Sets the VBW for range 1 to 5 MHz.

[SENSe:]LIST:RANGe<range>:BREak <State>

This command configures the sweep behavior.

The suffixes are irrelevant.

Suffix:

<range> 1...20
range

Parameters:

<State> **ON**
The R&S ESRP stops after one range is swept and continues only if you confirm (a message box is displayed).
OFF
The R&S ESRP sweeps all ranges in one go.
*RST: OFF

Example:

LIST:RANG:BRE ON
Configures a stop after each range.

[SENSe:]LIST:RANGe<range>:COUNT

This command returns the number of defined ranges.

Suffix:

<range> 1...20
range

Example:

LIST:RANG:COUNT?
Returns the number of defined ranges.

[SENSe:]LIST:RANGe<range>:DELe

This command deletes the specified range. The range numbers are updated accordingly. The reference range cannot be deleted. A minimum of three ranges is mandatory.

Suffix:

<range> 1...20
range

Example: `LIST:RANG4:DEL`
Deletes range 4.

[SENSe:]LIST:RANGe<range>:DETEctor <Detector>

This command sets the detector for the specified range. For details refer to "Detector" on page 168.

Suffix:
<range> 1...20
range

Parameters:
<Detector> NEGative | POSitive | SAMPlE | RMS | AVERage

NEGative
minimum peak detector

POSitive
peak detector

SAMPlE
sample detector

RMS
RMS detector

AVERage
average detector

*RST: RMS

Example: `LIST:RANGe3:DET SAMP`
Sets the sample detector for range 3.

[SENSe:]LIST:RANGe<range>:FILTEr:TYPE <Type>

This command sets the filter type for the specified range.

Suffix:
<range> 1...20
range

Parameters:
<Type> **NORMal**
Gaussian filters

CFILter
channel filters

RRC
RRC filters

P5
5 Pole filters

*RST: NORM
The available bandwidths of the filters are specified in the data sheet.

Example: `LIST:RANG1:FILT:TYPE RRC`
Sets the RRC filter type for range 1.

[SENSe:]LIST:RANGe<range>[:FREQuency]:START <Frequency>

This command sets the start frequency for the specified range.

In order to change the start/stop frequency of the first/last range, select the appropriate span. If you set a span that is smaller than the overall span of the ranges, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz. The first and last range are adapted to the given span as long as the minimum span of 20 Hz is not violated.

Suffix:
<range> 1...20
range

Parameters:
<Frequency> see rules in chapter 4, "Ranges and settings"
*RST: -250.0 MHz (range 1), -2.52 MHz (range 2), 2.52 MHz (range 3)

Example: `LIST:RANG1:STAR 100000000`
Sets the start frequency for range 1 to 100 MHz.

[SENSe:]LIST:RANGe<range>[:FREQuency]:STOP <Frequency>

This command sets the stop frequency for the specified range. See also [\[SENSe:\]LIST:RANGe<range>\[:FREQuency\]:START](#) on page 565.

Suffix:
<range> 1...20
range

Parameters:
<Frequency> see rules in chapter 4, "Ranges and settings"
*RST: -2.52 MHz (range 1), 2.52 MHz (range 2), 250.0 MHz (range 3)

Example: `LIST:RANG3:STOP 100000000`
Sets the stop frequency for range 2 to 10 MHz.

[SENSe:]LIST:RANGe<range>:INPut:ATTenuation <Value>

This command sets the attenuation for the specified range.

Suffix:
<range> 1...20
range

Parameters:

<Value> Refer to the data sheet.
 *RST: 0 dB

Example:

LIST:RANG3:INP:ATT 10
 Sets the attenuation of range 3 to 10 dB.

[SENSe:]LIST:RANGe<range>:INPut:ATTenuation:AUTO <State>

This command activates or deactivates the automatic RF attenuation setting for the specified range.

Suffix:

<range> 1...20
 range

Parameters:

<State> ON | OFF
 *RST: ON

Example:

LIST:RANG2:INP:ATT:AUTO OFF
 Deactivates the RF attenuation auto mode for range 2.

[SENSe:]LIST:RANGe<range>:INPut:GAIN:STATe <State>

This command switches the preamplifier on or off for the specified range.

Suffix:

<range> 1...20
 range

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

LIST:RANG3:INP:GAIN:STATe ON
 Switches the preamplifier for range 3 on or off.

[SENSe:]LIST:RANGe<range>:LIMit:STARt <Limit>

This command sets an absolute limit value at the start frequency of the specified range. Different from manual operation, this setting is independent of the defined limit check type.

Suffix:

<range> 1...20
 range

Parameters:

<Limit> -400 to in 400 dBm
 *RST: 13 dBm

Example: `LIST:RANG1:LIM:ABS:STAR 10`
Sets an absolute limit of 10 dBm at the start frequency of the range.

[SENSe:]LIST:RANGe<range>:LIMit:STATe

This command activates or deactivates the limit check for all ranges.

Suffix:
<range> irrelevant

Parameters:
<State> ON | OFF
*RST: OFF

Example: `LIST:RANG3:LIM:STAT ON`
Activates a limit check for all ranges.

[SENSe:]LIST:RANGe<range>:LIMit:STOP <Limit>

This command sets an absolute limit value at the stop frequency of the specified range. Different from manual operation, this setting is independent of the defined limit check type.

Suffix:
<range> 1...20
range

Parameters:
<Limit> -400 to in 400 dBm
*RST: 13 dBm

Example: `LIST:RANG1:LIM:STOP 20`
Sets an absolute limit of 20 dBm at the stop frequency of the range.

[SENSe:]LIST:RANGe<range>:POINts <Value>

This command sets the number of sweep points for the specified range.

Suffix:
<range> 1...20
range

Parameters:
<Value> For details on possible values refer to chapter 4, **Sweep Points** softkey of the "Sweep" menu.
*RST: 691

Example: `LIST:RANG3:POIN 601`
Sets 601 sweep points for range 3.

[SENSe:]LIST:RANGe<range>:RLEVel <Value>

This command sets the reference level for the specified range.

Suffix:

<range> 1...20
range

Parameters:

<Value> Refer to the data sheet.
*RST: -20 dBm

Example: LIST:RANG2:RLEV 0
Sets the reference level of range 2 to 0 dBm.

[SENSe:]LIST:RANGe<range>:SWEep:TIME

This command sets the sweep time for the specified range.

Suffix:

<range> 1...20
range

Parameters:

<SweepTime> Allowed values depend on the ratio of span to RBW and RBW to VBW. For details refer to the data sheet.
*RST: 0.27 s

Example: LIST:RANG1:SWE:TIME 1
Sets the sweep time for range 1 to 1 s.

[SENSe:]LIST:RANGe<range>:SWEep:TIME:AUTO

This command activates or deactivates the automatic sweep time setting for the specified range.

Suffix:

<range> 1...20
range

Parameters:

<State> ON | OFF
*RST: ON

Example: LIST:RANG3:SWE:TIME:AUTO OFF
Deactivates the sweep time auto mode for range 3.

[SENSe:]LIST:RANGe<range>:TRANsducer <TransducerName>

This command sets a transducer for the specified range. You can only choose a transducer that fulfills the following conditions:

- The transducer overlaps or equals the span of the range.

- The x-axis is linear.
- The unit is dB.

Suffix:

<range> 1...20
range

Parameters:

<TransducerName> 'string' = name of the transducer

Example:

SENS:LIST:RANG1:TRAN 'test'
Sets the transducer called "test" for range 1.

Configuring List Evaluation

The following commands configure the list evaluation.

- [CALCulate<n>:PEAKsearch|PSEarch:MARGIN](#) on page 496
- [MMEMemory:STORe<n>:LIST](#) on page 587

CALCulate<n>:PEAKsearch PSEarch[:IMMediate]	569
CALCulate<n>:PEAKsearch PSEarch:AUTO	569
CALCulate<n>:PEAKsearch PSEarch:PSHOW	570
CALCulate<n>:PEAKsearch PSEarch:SUBRanges	570

CALCulate<n>:PEAKsearch|PSEarch[:IMMediate]

This command switches the spurious limit check off.

If you want to read out the values peak values including the delta to a limit, you have to switch on the limit again.

This command is only for FSP compatibility, and not necessary to use on the R&S ESRP.

Suffix:

<n> irrelevant

Example:

CALC:PSE
Starts to determine the list.

CALCulate<n>:PEAKsearch|PSEarch:AUTO <State>

This command activates or deactivates the list evaluation.

Suffix:

<n> Selects the measurement window.

Parameters:

<State> ON | OFF
*RST: ON

Example:

CALC:ESP:PSE:AUTO OFF
Deactivates the list evaluation.

CALCulate<n>:PEAKsearch|PSEarch:PSHow

This command marks all peaks with blue squares in the diagram.

Suffix:

<n> Selects the measurement window.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CALC:ESP:PSE:PSH ON

Marks all peaks with blue squares.

CALCulate<n>:PEAKsearch|PSEarch:SUBRanges <NumberPeaks>

This command sets the number of peaks per range that are stored in the list. Once the selected number of peaks has been reached, the peak search is stopped in the current range and continued in the next range.

Suffix:

<n> irrelevant

Parameters:

<NumberPeaks> 1 to 50

*RST: 25

Example:

CALC:PSE:SUBR 10

Sets 10 peaks per range to be stored in the list.

Retrieving Results

The following commands analyze and retrieve measurement results for spurious emission measurements.

- [CALCulate<n>:LIMit<k>:FAIL?](#) on page 531
- [TRACe<n>:DATA](#) on page 538

9.4.1.5 Testing Against a Spectrum Emission Mask

The following commands configure and perform spectrum emission mask (SEM) measurements.

- [Managing Measurement Configurations](#)..... 571
- [Controlling the Measurement](#)..... 572
- [Managing a Sweep List](#)..... 572
- [Configuring the Reference Range](#)..... 581
- [Configuring Power Classes](#)..... 582
- [Configuring List Evaluation](#)..... 586
- [Retrieving Results](#)..... 588

Managing Measurement Configurations

The following commands control measurement configurations for SEM measurements.

CALCulate<n>:LIMit<k>:ESpectrum:RESTore.....	571
[SENSe:]ESpectrum:PRESet[:STANdard].....	571
[SENSe:]ESpectrum:PRESet:RESTore.....	571
[SENSe:]ESpectrum:PRESet:STORe.....	571

CALCulate<n>:LIMit<k>:ESpectrum:RESTore

This command restores the predefined limit lines for the Spectrum Emission Mask measurement. All modifications made to the predefined limit lines are lost and the factory-set values are restored.

Suffix:

<n>	1...4 window
<k>	irrelevant

Example:

CALC:LIM:ESP:REST
Resets the limit lines for the Spectrum Emission Mask to the default setting.

[SENSe:]ESpectrum:PRESet[:STANdard]

This command selects the specified XML file under C:\r_s\instr\sem_std. If the file is stored in a subdirectory, include the relative path.

Example:

```
ESP:PRES 'WCDMA\3GPP\DL\PowerClass_31_39.xml'
```

Selects the PowerClass_31_39.xml XML file in the C:\R_S\instr\sem_std\WCDMA\3GPP\DL directory.

```
ESP:PRES?
```

W-CDMA 3GPP DL (31,39) dBm

The query returns information about the selected standard, the link direction and the power class. If no standard has been selected, the query returns None.

[SENSe:]ESpectrum:PRESet:RESTore

This command copies the XML files from the C:\R_S\instr\sem_backup folder to the C:\R_S\instr\sem_std folder. Files of the same name are overwritten.

Example:

```
ESP:PRES:REST
```

Restores the originally provided XML files.

[SENSe:]ESpectrum:PRESet:STORe <FileName>

This command stores the current settings as presettings in the specified XML file under C:\r_s\instr\sem_backup.

Parameters:

<FileName>

Example:

ESP:PRES:STOR

'WCDMA\3GPP\DL\PowerClass_31_39.xml'

Stores the settings in the PowerClass_31_39.xml file in the C:\R_S\instr\sem_std\WCDMA\3GPP\DL directory.

Controlling the Measurement

The following commands control the measurement itself.

INITiate<n>:ESpectrum.....	572
[SENSe:]SWEep:MODE.....	572

INITiate<n>:ESpectrum

This command starts a Spectrum Emission Mask measurement.

Suffix:

<n> irrelevant

Example:

INIT:ESP

Starts a Spectrum Emission Mask measurement.

[SENSe:]SWEep:MODE <Mode>

This command selects the spurious emission and spectrum emission mask measurements.

Parameters:

<Mode> AUTO | ESpectrum | LIST

AUTO

Switches to "Spectrum" measurement mode or stays in the current mode if it is not ESP/LIST

ESpectrum

"Spectrum Emission Mask" measurement mode

LIST

"Spurious Emissions" measurement mode

*RST: AUTO

Example:

SWE:MODE ESP

Sets the Spectrum Emission Mask measurement mode.

Managing a Sweep List

The following commands define a sweep list for SEM measurements.

[SENSe:]ESpectrum:HighSpeed.....	573
[SENSe:]ESpectrum:RANGe<range>:BANDwidth[:RESolution].....	574
[SENSe:]ESpectrum:RANGe<range>:BANDwidth:VIDeo.....	574
[SENSe:]ESpectrum:RANGe<range>:COUNT.....	574

[SENSe:]ESpectrum:RANGe<range>:DELeTe.....	575
[SENSe:]ESpectrum:RANGe<range>:FILTer:TYPE.....	575
[SENSe:]ESpectrum:RANGe<range>[:FREQuency]:STARt.....	575
[SENSe:]ESpectrum:RANGe<range>[:FREQuency]:STOP.....	576
[SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation.....	576
[SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation:AUTO.....	577
[SENSe:]ESpectrum:RANGe<range>:INPut:GAIN:STATe.....	577
[SENSe:]ESpectrum:RANGe<range>:INSet.....	577
[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:STARt.....	578
[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:STOP.....	578
[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:STARt.....	578
[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:STOP.....	579
[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:STATe.....	579
[SENSe:]ESpectrum:RANGe<range>:RLEVel.....	579
[SENSe:]ESpectrum:RANGe<range>:SWEep:TIME.....	580
[SENSe:]ESpectrum:RANGe<range>:SWEep:TIME:AUTO.....	580
[SENSe:]ESpectrum:RANGe<range>:TRANSDucer.....	580

[SENSe:]ESpectrum:HighSPeed <State>

This command activates Fast SEM mode to accelerate spurious emission mask measurements. For details see "[Fast Spectrum Emission Mask Measurements](#)" on page 159.

Note that in Fast SEM mode, the following parameters cannot be changed in all ranges:

- Filter type, see [SENSe:]ESpectrum:RANGe<range>:FILTer:TYPE on page 575
- RBW, see [SENSe:]ESpectrum:RANGe<range>:BANDwidth[:RESolution] on page 574
- VBW, see [SENSe:]ESpectrum:RANGe<range>:BANDwidth:VIDeo on page 574
- Sweep Time Mode, see [SENSe:]ESpectrum:RANGe<range>:SWEep:TIME:AUTO on page 580
- Sweep Time, see [SENSe:]ESpectrum:RANGe<range>:SWEep:TIME on page 580
- Reference level, see [SENSe:]ESpectrum:RANGe<range>:RLEVel on page 579
- RF Att Mode, see [SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation:AUTO on page 577
- Rf Attenuation, see [SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation on page 576
- Preamp, see [SENSe:]ESpectrum:RANGe<range>:INPut:GAIN:STATe on page 577

Parameters:

<State> ON | OFF
 *RST: OFF

Example: ESP:HSP ON

[SENSe:]ESpectrum:RANGe<range>:BANDwidth[:RESolution] <Value>

This command sets the RBW value for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSPeet](#) on page 573).

Suffix:

<range> 1...20
 range

Parameters:

<Value> Refer to the data sheet.
 *RST: 30.0 kHz

Example: ESP:RANG2:BAND:RES 5000
 Sets the RBW for range 2 to 5 kHz.

[SENSe:]ESpectrum:RANGe<range>:BANDwidth:VIDeo <Value>

This command sets the VBW value for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSPeet](#) on page 573).

Suffix:

<range> 1...20
 range

Parameters:

<Value> Refer to the data sheet.
 *RST: 10.0 MHz

Example: ESP:RANG1:BAND:VID 5000000
 Sets the VBW for range 1 to 5 MHz.

[SENSe:]ESpectrum:RANGe<range>:COUNT

This command returns the number of defined ranges.

Suffix:

<range> 1...20
 range

Example: ESP:RANG:COUNT?
 Returns the number of defined ranges.

[SENSe:]ESpectrum:RANGe<range>:DELeTe

This command deletes the specified range. The range numbers are updated accordingly. The reference range cannot be deleted. A minimum of three ranges is mandatory.

Suffix:

<range> 1...20
range

Example:

ESP:RANG4:DEL
Deletes range 4.

[SENSe:]ESpectrum:RANGe<range>:FILTer:TYPE <Type>

This command sets the filter type for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSPeEd](#) on page 573).

Suffix:

<range> 1...20
range

Parameters:

<Type> **NORMal**
Gaussian filters
CFILter
channel filters
RRC
RRC filters
P5
5 Pole filters
*RST: NORM
The available bandwidths of the filters are specified in the data sheet.

Example:

ESP:RANG1:FILT:TYPE RRC
Sets the RRC filter type for range 1.

[SENSe:]ESpectrum:RANGe<range>[:FREQuency]:STARt <Frequency>

This command sets the start frequency for the specified range.

In order to change the start/stop frequency of the first/last range, select the appropriate span. If you set a span that is smaller than the overall span of the ranges, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz. The first and last range are adapted to the given span as long as the minimum span of 20 Hz is not violated.

Note the rules for the <Frequency> parameter specified in ["Ranges and Range Settings"](#) on page 147.

Suffix:
 <range> 1...20
 range

Parameters:
 <Frequency> numeric value
 *RST: -250.0 MHz (range 1), -2.52 MHz (range 2), 2.52 MHz (range 3)

Example: ESP:RANG1:STAR 100000000
 Sets the start frequency for range 1 to 100 MHz.

[SENSe:]ESpectrum:RANGe<range>[:FREQuency]:STOP <Frequency>

This command sets the stop frequency for the specified range. For further details refer to the [SENSe:]ESpectrum:RANGe<range>[:FREQuency]:START command.

Note the rules for the <Frequency> parameter specified in "Ranges and Range Settings" on page 147.

Suffix:
 <range> 1...20
 range

Parameters:
 <Frequency> numeric value
 *RST: -2.52 MHz (range 1), 2.52 MHz (range 2), 250.0 MHz (range 3)

Example: ESP:RANG3:STOP 100000000
 Sets the stop frequency for range 2 to 10 MHz.

[SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation <Value>

This command sets the attenuation for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [SENSe:]ESpectrum:HighSPeed on page 573).

Suffix:
 <range> 1...20
 range

Parameters:
 <Value> Refer to the data sheet.
 *RST: 0 dB

Example: ESP:RANG3:INP:ATT 10
 Sets the attenuation of range 3 to 10 dB.

[SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation:AUTO <State>

This command activates or deactivates the automatic RF attenuation setting for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSPeed](#) on page 573).

Suffix:

<range> 1...20
range

Parameters:

<State> ON | OFF
*RST: ON

Example:

ESP:RANG2:INP:ATT:AUTO OFF
Deactivates the RF attenuation auto mode for range 2.

[SENSe:]ESpectrum:RANGe<range>:INPut:GAIN:STATe <State>

This command switches the preamplifier on or off for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSPeed](#) on page 573).

Suffix:

<range> 1...20
range

Parameters:

<State> ON | OFF
*RST: OFF

Example:

ESP:RANG3:INP:GAIN:STATe ON
Switches the preamplifier for range 3 on or off.

[SENSe:]ESpectrum:RANGe<range>:INSert <Mode>

This command inserts a new range before or after the specified range. The range numbers are updated accordingly.

Suffix:

<range> 1...20
range

Parameters:

<Mode> AFTer | BEFore

Example:

ESP:RANG3:INS BEF
Inserts a new range before range 3.
ESP:RANG1:INS AFT
Inserts a new range after range 1.

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:STARt <Level>

This command sets an absolute limit value at the start frequency of the specified range. Different from manual operation, this setting is independent of the defined limit check type.

Suffix:

<range> 1...20
range

Parameters:

<Level> -400 to in 400 dBm
*RST: 13 dBm

Example:

ESP:RANG1:LIM:ABS:STAR 10

Sets an absolute limit of 10 dBm at the start frequency of the range.

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:STOP <Level>

This command sets an absolute limit value at the stop frequency of the specified range. Different from manual operation, this setting is independent of the defined limit check type.

Suffix:

<range> 1...20
range

Parameters:

<Level> -400 to in 400 dBm
*RST: 13 dBm

Example:

ESP:RANG1:LIM:ABS:STOP 20

Sets an absolute limit of 20 dBm at the stop frequency of the range.

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:STARt <Limit>

This command sets a relative limit value at the start frequency of the specified range. Different from manual operation, this setting is independent of the defined limit check type.

Suffix:

<range> 1...20
range

Parameters:

<Limit> -400 to in 400 dBc
*RST: -50 dBc

Example:

ESP:RANG3:LIM:REL:STAR -20

Sets a relative limit of -20 dBc at the start frequency of the range.

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:STOP <Limit>

This command sets a relative limit value at the stop frequency of the specified range. Different from manual operation, this setting is independently of the defined limit check type.

Suffix:

<range> 1...20
range

Parameters:

<Limit> -400 to in 400 dBc
*RST: -50 dBc

Example:

ESP:RANG3:LIM:REL:STOP 20
Sets a relative limit of 20 dBc at the stop frequency of the range.

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:STATe <State>

This command sets the type of limit check for all ranges.

Suffix:

<range> irrelevant

Parameters:

<State> ABSolute | RELative | AND | OR

ABSolute

Checks only the absolute limits defined.

RELative

Checks only the relative limits. Relative limits are defined as relative to the measured power in the reference range.

AND

Combines the absolute and relative limit. The limit check fails when both limits are violated.

OR

Combines the absolute and relative limit. The limit check fails when one of the limits is violated.

*RST: REL

Example:

ESP:RANG3:LIM:STAT AND
Sets for all ranges the combined absolute/relative limit check.

[SENSe:]ESpectrum:RANGe<range>:RLEVel <Value>

This command sets the reference level for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSPeed](#) on page 573).

Suffix:

<range> 1...20
range

Parameters:

<Value> Refer to the data sheet.
*RST: -20 dBm

Example:

ESP:RANG2:RLEV 0
Sets the reference level of range 2 to 0 dBm.

[SENSe:]ESpectrum:RANGe<range>:SWEep:TIME <SweepTime>

This command sets the sweep time for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSpeed](#) on page 573).

Suffix:

<range> 1...20
range

Parameters:

<SweepTime> Allowed values depend on the ratio of span to RBW and RBW to VBW. For details refer to the data sheet.
*RST: 0.27 s

Example:

ESP:RANG1:SWE:TIME 1
Sets the sweep time for range 1 to 1 s.

[SENSe:]ESpectrum:RANGe<range>:SWEep:TIME:AUTO <State>

This command activates or deactivates the automatic sweep time setting for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSpeed](#) on page 573).

Suffix:

<range> 1...20
range

Parameters:

<State> ON | OFF
*RST: ON

Example:

ESP:RANG3:SWE:TIME:AUTO OFF
Deactivates the sweep time auto mode for range 3.

[SENSe:]ESpectrum:RANGe<range>:TRANsducer <TransducerName>

This command sets a transducer for the specified range. You can only choose a transducer that fulfills the following conditions:

- The transducer overlaps or equals the span of the range.
- The x-axis is linear.
- The unit is dB.

Suffix:

<range> 1...20
range

Parameters:

<TransducerName> 'string' = name of the transducer

Example:

ESP:RANG1:TRAN 'test'
Sets the transducer called test for range 1.

Configuring the Reference Range

The following commands define the reference range for the SEM sweep list.

[SENSe:]ESpectrum:BWID.....	581
[SENSe:]ESpectrum:FILTer[:RRC]:ALPHA.....	581
[SENSe:]ESpectrum:FILTer[:RRC][:STATe].....	582
[SENSe:]ESpectrum:RRANge.....	582
[SENSe:]ESpectrum:RTYPE.....	582

[SENSe:]ESpectrum:BWID <Bandwidth>

This command defines the bandwidth used for measuring the channel power (reference range). This setting takes only effect if channel power is selected as power reference type (see [SENSe:]ESpectrum:RTYPE on page 582).

Parameters:

<Bandwidth> minimum span ≤ value ≤ span of reference range
*RST: 3.84 MHz

Example:

ESP:RTYPE CPOW
Sets the power reference type to channel power.
ESP:BWID 1 MHZ
Sets the Tx bandwidth to 1 MHz.

[SENSe:]ESpectrum:FILTer[:RRC]:ALPHA <Value>

This command sets the alpha value of the RRC filter. This setting takes only effect if channel power is selected as power reference type ([SENSe:]ESpectrum:RTYPE command) and if the RRC filter is activated ([SENSe:]ESpectrum:FILTer[:RRC] [:STATe] command).

Parameters:

<Value> 0 to 1
*RST: 0.22

Example: `ESP:RTYP CPOW`
Sets the power reference type to channel power.
`ESP:FILT ON`
Activates the use of an RRC filter.
`ESP:FILT:ALPH 0.5`
Sets the alpha value of the RRC filter to 0.5.

[SENSe:]ESpectrum:FILTer[:RRC][:STATe] <State>

This command activates or deactivates the use of an RRC filter. This setting only takes effect if channel power is selected as power reference type (see [\[SENSe:\]ESpectrum:RTYPE](#) on page 582).

Parameters:

<State> ON | OFF
*RST: ON

Example: `ESP:RTYP CPOW`
Sets the power reference type to channel power.
`ESP:FILT OFF`
Deactivates the use of an RRC filter.

[SENSe:]ESpectrum:RRANge

This command returns the current position (number) of the reference range.

Example: `ESP:RRAN?`
Returns the current position (number) of the reference range.

[SENSe:]ESpectrum:RTYPE <Type>

This command sets the power reference type.

Parameters:

<Type> PEAK | CPOWer
PEAK
Measures the highest peak within the reference range.
CPOWer
Measures the channel power within the reference range (integral bandwidth method).
*RST: CPOWer

Example: `ESP:RTYP PEAK`
Sets the peak power reference type.

Configuring Power Classes

The following commands define the power classes for SEM measurements.

CALCulate<n>:LIMit<k>:ESpectrum:LIMits.....	583
CALCulate<n>:LIMit<k>:ESpectrum:MODE.....	583
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:COUNT.....	584
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>[:EXCLusive].....	584
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:LIMit[:STATe].....	584
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:MAXimum.....	585
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:MINimum.....	586
CALCulate<n>:LIMit<k>:ESpectrum:VALue.....	586

CALCulate<n>:LIMit<k>:ESpectrum:LIMits <Limits>

This command sets or queries up to 4 power classes in one step.

Suffix:

<n> irrelevant

<k> irrelevant

Parameters:

<Limits> 1–3 numeric values between -200 and 200, separated by commas
 -200, <0-3 numeric values between -200 and 200, in ascending order, separated by commas>, 200

Example:

CALC:LIM:ESP:LIM -50,50,70

Defines the following power classes:

<-200, -50>

<-50, 50>

<50, 70>

<70, 200>

Query:

CALC:LIM:ESP:LIM?

Response:

-200,-50,50,70,200

CALCulate<n>:LIMit<k>:ESpectrum:MODE <Mode>

This command activates or deactivates the automatic selection of the limit line in the Spectrum Emission Mask measurement.

Suffix:

<n> 1...4
 window

<k> irrelevant

Parameters:

<Mode> AUTO | MANUAL

AUTO

The limit line depends on the measured channel power.

MANUAL

One of the three specified limit lines is set.

*RST: AUTO

Example:

CALC:LIM:ESP:MODE AUTO

Activates automatic selection of the limit line.

CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:COUNT <NoPowerClasses>

This command sets the number of power classes to be defined.

Suffix:

<n> irrelevant

<k> irrelevant

<Class> irrelevant

Parameters:

<NoPowerClasses> 1 to 4

*RST: 1

Example:

CALC:LIM:ESP:PCL:COUN 2

Two power classes can be defined.

CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>[:EXCLUSIVE] <State>

This command sets the power classes used in the spectrum emission mask measurement. It is only possible to use power classes for which limits are defined. Also, either only one power class at a time or all power classes together can be selected.

Suffix:

<n> irrelevant

<k> irrelevant

<Class> 1...4
the power class to be evaluated**Parameters:**

<State> ON | OFF

*RST: OFF

Example:

CALC:LIM:ESP:PCL1 ON

Activates the first defined power class.

CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:LIMit[:STATe] <State>

This command defines which limits are evaluated in the measurement.

Suffix:

<n>	irrelevant
<k>	irrelevant
<Class>	1...4 the power class to be evaluated

Parameters:

<State>	ABSolute RELative AND OR

ABSolute

Evaluates only limit lines with absolute power values

RELative

Evaluates only limit lines with relative power values

AND

Evaluates limit lines with relative and absolute power values. A negative result is returned if both limits fail.

OR

Evaluates limit lines with relative and absolute power values. A negative result is returned if at least one limit failed.

*RST: REL

Example:

CALC:LIM:ESP:PCL:LIM ABS

CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:MAXimum <Level>

This command sets the upper limit level for one power class. The unit is dBm. The limit always ends at + 200 dBm, i.e. the upper limit of the last power class can not be set. If more than one power class is in use, the upper limit must equal the lower limit of the next power class.

Suffix:

<n>	irrelevant
<k>	irrelevant
<Class>	1...4 the power class to be evaluated

Parameters:

<Level>	<numeric value>
*RST:	+200

Example:

CALC:LIM:ESP:PCL1:MAX -40 dBm

Sets the maximum power value of the first power class to -40 dBm.

CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:MINimum <Level>

This command sets the minimum lower level limit for one power class. The unit is dBm. The limit always start at – 200 dBm, i.e. the first lower limit can not be set. If more than one power class is in use, the lower limit must equal the upper limit of the previous power class.

Suffix:

<n>	irrelevant
<k>	irrelevant
<Class>	1...4 the power class to be evaluated

Parameters:

<Level>	<numeric_value> *RST: -200 for class1, otherwise +200

Example:

CALC:LIM:ESP:PCL2:MIN -40 dBm
Sets the minimum power value of the second power class to -40 dBm.

CALCulate<n>:LIMit<k>:ESpectrum:VALue <Power>

This command activates the manual limit line selection and specifies the expected power as a value. Depending on the entered value, one of the predefined limit lines is selected.

Suffix:

<n>	1...4 window
<k>	irrelevant

Parameters:

<Power>	33 28 0 33 $P \geq 33$ 28 $28 < P < 33$ 0 $P < 28$ *RST: 0

Example:

CALC:LIM:ESP:VAL 33
Activates manual selection of the limit line and selects the limit line for $P = 33$.

Configuring List Evaluation

The following commands configure the list evaluation.

MMEMory:STORe<n>:LIST.....	587
CALCulate<n>:ESpectrum:PSEarch :PEAKsearch:[IMMediate].....	587
CALCulate<n>:ESpectrum:PSEarch :PEAKsearch:AUTO.....	587
CALCulate<n>:ESpectrum:PSEarch :PEAKsearch:MARGin.....	587
CALCulate<n>:ESpectrum:PSEarch :PEAKsearch:PSHow.....	588

MMEMory:STORe<n>:LIST <FileName>

This command stores the current list evaluation results in a <file name>.dat file. The file consists of a data section containing the list evaluation results.

Suffix:

<n> irrelevant

Parameters:

<FileName> <file name>

Example:

MMEM:STOR:LIST 'test'

Stores the current list evaluation results in the test.dat file.

CALCulate<n>:ESpectrum:PSEarch|:PEAKsearch:[IMMediate]

This command starts the list evaluation.

Suffix:

<n> Selects the measurement window.

Example:

CALC:ESP:PSE

Usage:

Event

CALCulate<n>:ESpectrum:PSEarch|:PEAKsearch:AUTO <State>

This command activates or deactivates the list evaluation.

Suffix:

<n> Selects the measurement window.

Parameters:

<State> ON | OFF

*RST: ON

Example:

CALC:ESP:PSE:AUTO OFF

Deactivates the list evaluation.

CALCulate<n>:ESpectrum:PSEarch|:PEAKsearch:MARGin <Margin>

This command sets the margin used for the limit check/peak search.

Suffix:

<n> Selects the measurement window.

Parameters:

<Margin> -200 to 200 dB
 *RST: 200 dB

Example:

CALC:ESP:PSE:MARG 100
 Sets the margin to 100 dB.

CALCulate<n>:ESpectrum:PSEarch|:PEAKsearch:PSHow <State>

This command marks all peaks with blue squares in the diagram.

Suffix:

<n> Selects the measurement window.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:ESP:PSE:PSH ON
 Marks all peaks with blue squares.

Retrieving Results

The following commands analyze and retrieve measurement results for SEM measurements.

- [CALCulate<n>:LIMit<k>:FAIL?](#) on page 531
- [CALCulate<n>:MARKer<m>:FUNctioN:POWer:RESult?](#) on page 534
- [TRACe<n>:DATA](#) on page 538

9.4.1.6 Performing EMI Measurements

The following commands configure and perform EMI measurements.

- [Configuring the Measurement](#).....588
- [Performing a Peak Search](#).....589
- [Evaluating the Results](#)..... 591

Configuring the Measurement

Commands useful to configure EMI measurements described elsewhere:

- [DISPlay\[:WINDow<n>\]:TRACe<t>:X:SPACing](#) on page 482
- [INPut:LISN:FILTer:HPAS\[:STATe\]](#) on page 501
- [INPut:LISN:PHASe](#) on page 501
- [INPut:LISN\[:TYPE\]](#) on page 502
- [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]](#) on page 487
- [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:TYPE](#) on page 487
- [\[SENSe:\] \[WINDow:\] DETector<trace>\[:FUNctioN\]](#) on page 498

- [\[SENSe:\] SWEEp: POINts](#) on page 641

Remote commands exclusive to EMI measurements:

[CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:STATe](#)..... 589

CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:STATe <State>

This command turns the EMI measurement marker functionality on and off.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<State> **ON | OFF**

Performing a Peak Search

Commands useful to perform EMI measurements described elsewhere:

- [CALCulate<n>:DELTamarker<m>:AOFF](#) on page 512
- [CALCulate<n>:DELTamarker<m>:TRACE](#) on page 515
- [CALCulate<n>:MARKer<m>:AOFF](#) on page 506
- [CALCulate<n>:MARKer<m>:TRACE](#) on page 510

Remote commands exclusive to EMI measurements:

[CALCulate<n>:DELTamarker<m>:FUNCTION:FMEasurement:DETECTOR](#).....589

[CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:DETECTOR](#).....590

[CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:DWELL](#)..... 590

[CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:PSEarch:AUTO](#).....591

CALCulate<n>:DELTamarker<m>:FUNCTION:FMEasurement:DETECTOR <Detector>

This command selects the detector for a specific deltamarker during the final evaluation.

If the deltamarker hasn't been active yet, the command also turns the deltamarker on.

Suffix:

<n> irrelevant

<m> deltamarker

Parameters:

<Detector>

OFF

turns the deltamarker off

AVER

average detector

CAV

CISPR Average detector

CRMS

RMS Average detector

POS

maximum peak detector

QPE

quasipeak detector

*RST: OFF

CALCulate<n>:MARKer<m>:FUNction:FMEasurement:DETEctor <Detector>

This command selects the detector for a specific marker during the final measurement.

If the marker hasn't been active yet, the command also turns the marker on.

Suffix:

<n>

irrelevant

<m>

marker

Parameters:

<Detector>

OFF

turns the marker off

AVER

average detector

CAV

CISPR Average detector

CRMS

RMS Average detector

POS

maximum peak detector

QPE

quasipeak detector

*RST: OFF

CALCulate<n>:MARKer<m>:FUNction:FMEasurement:DWELI <Time>

This command defines the dwell time during the final measurement.

Suffix:

<n>

irrelevant

<m>

irrelevant

Parameters:

<Time> Range: min value to max value
 *RST: 1 s
 Default unit: seconds

CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:PSEarch:AUTO

This command initiates a marker peak search.

Instead of the syntax element PSEarch you can also use PEAKsearch.

Suffix:

<n> irrelevant

<m> irrelevant

Usage: Event

Evaluating the Results

CALCulate<n>:DELTamarker<m>:FUNCTION:FMEasurement:LIMit<k>:CONDition ?	591
CALCulate<n>:DELTamarker<m>:FUNCTION:FMEasurement:LIMit<k>:DELTa?	592
CALCulate<n>:DELTamarker<m>:FUNCTION:FMEasurement:RESult?	592
CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:LIMit<k>:CONDition ?	592
CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:LIMit<k>:DELTa?	593
CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:RESult?	593

**CALCulate<n>:DELTamarker<m>:FUNCTION:FMEasurement:LIMit<k>:
 CONDition ? <Condition>**

This command queries the condition of a deltamarker position in relation to a certain limit line.

Suffix:

<n> irrelevant

<m> 1...16
 deltamarker

<k> 1...8
 limit line

Return values:

<Condition> **0**
 The deltamarker has passed the limit check.
 1
 The deltamarker is inside the margins of a limit line.
 2
 The deltamarker has failed the limit check.

Example:

CALC:DELT2:FUNC:FME:LIM2:COND?
 Queries the condition of deltamarker 2 in relation to limit line 2.

Usage: Query only

CALCulate<n>:DELTamarker<m>:FUNCtion:FMEasurement:LIMit<k>:DELTa?

This command queries the vertical distance from the deltamarker position to the limit line. The unit is dB.

If the deltamarker has been assigned to a different trace than the limit line, the command returns -200.

Suffix:

<n>	irrelevant
<m>	1...16 deltamarker
<k>	1...8 limit line

Return values:

<Amplitude> Vertical distance to the limit line in dB.

Example:

CALC:DELT3:FUNC:FME:LIM2:DELT?

Queries the distance of deltamarker 3 to the second limit line.

Usage:

Query only

CALCulate<n>:DELTamarker<m>:FUNCtion:FMEasurement:RESult? <Result>

This command queries the result of the EMI measurement at the deltamarker position.

Suffix:

<n>	irrelevant
<m>	1...16 marker

Return values:

<Result> Power level in dB related to the reference marker you have set for that delta marker.

Example:

CALC:DELT3:FUNC:FME:RES?

Queries the result of delta marker 3.

Usage:

Query only

CALCulate<n>:MARKer<m>:FUNCtion:FMEasurement:LIMit<k>:CONDition ? <Condition>

This command queries the condition of a marker position in relation to a certain limit line.

Suffix:

<n>	irrelevant
<m>	1...16 marker

<k> 1...8
limit line

Return values:

<Condition> **0**
The marker has passed the limit check.
1
The marker is inside the margins of a limit line.
2
The marker has failed the limit check.

Example:

CALC:MARK1:FUNC:FME:LIM2:COND?
Queries the condition of marker 1 in relation to limit line 2.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:LIMit<k>:DELTA?
<Amplitude>

This command queries the vertical distance from the marker position to the limit line. The unit is dB.

If the marker has been assigned to a different trace than the limit line, the command returns -200.

Suffix:

<n> irrelevant
<m> 1...16
marker
<k> 1...8
limit line

Return values:

<Amplitude> Vertical distance to the limit line in dB.

Example:

CALC:MARK3:FUNC:FME:LIM2:DELT?
Queries the distance of marker 3 to the second limit line.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:RESult? <Result>

This command queries the result of the EMI measurement at the marker position.

Suffix:

<n> irrelevant
<m> 1...16
marker

Return values:

<Result> Power level. The unit depends on the one you have currently set.

Example: `CALC:MARK1:FUNC:FME:RES?`
Queries the result of marker 1.

Usage: Query only

9.4.1.7 Measuring the Modulation Depth

The following commands configure and perform AM modulation depth measurements.

<code>CALCulate<n>:MARKer<m>:FUNCTION:MDEPth:SEARChsignal ONCE</code>	594
<code>CALCulate<n>:MARKer<m>:FUNCTION:MDEPth:RESult?</code>	594
<code>CALCulate<n>:MARKer<m>:FUNCTION:MDEPth[:STATe]</code>	595

CALCulate<n>:MARKer<m>:FUNCTION:MDEPth:SEARChsignal ONCE

This command initiates a search for the signals required for the AM depth measurement.

Note that the command does not perform a new measurement, but looks for the signals on the current trace.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Example: `CALC:MARK:FUNC:MDEP:SEAR ONCE`
Executes the search of an AM modulated signal at the currently available trace.

Usage: Event
SCPI confirmed

CALCulate<n>:MARKer<m>:FUNCTION:MDEPth:RESult?

This command queries the results of the AM modulation depth measurement..

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:X 10MHZ
Sets the reference marker (marker 1) to the carrier signal at 10 MHz.
CALC:MARK:FUNC:MDEP ON
Switches on the modulation depth measurement.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK:FUNC:MDEP:RES?
Outputs the measured value.
```

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCTION:MDEPth[:STATe] <State>

This command turns the AM Modulation Depth measurement on and off.

To work correctly, the measurement requires an AM modulated signal.

If necessary, the command positions marker 1 on the signal with the highest level.

The level value of marker 1 is regarded as the carrier level. On activating the function, marker 2 and marker 3 are automatically set as delta markers symmetrically to the carrier to the adjacent maxima of the trace.

If the position of delta marker 2 is changed, delta marker 3 is moved symmetrically with respect to the reference marker (marker 1). If the position of delta marker 3 is changed, fine adjustment can be performed independently of delta marker 2.

The power at the marker positions is calculated from the measured levels.

The AM modulation depth is calculated from the ratio of power values at the reference marker and the delta markers. If the two AM sidebands differ in power, the average value of the two power values is used for calculating the AM modulation depth.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<State> ON | OFF
*RST: OFF

Example:

```
CALC:MARK:X 10MHZ
Sets the reference marker (marker 1) to the carrier signal at 10 MHz.
CALC:MARK:FUNC:MDEP ON
Switches on the modulation depth measurement.
CALC:DELT2:X 10KHZ
Sets delta markers 2 and 3 to the signals at 10 kHz from the carrier signal.
CALC:DELT3:X 9.999KHZ
Corrects the position of delta marker 3 relative to delta marker 2.
```

9.4.1.8 Measuring the Harmonic Distortion

The following commands configure and perform measurements to determine the harmonic distortion of a signal.

Commands useful to retrieve results described elsewhere:

- [TRACe<n>:DATA](#) on page 538

CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:BANDwidth:AUTO	596
CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:DIS TORTion?	596
CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:LIST?	597
CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:NHARMonics	597
CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:PRESet	598
CALCulate<n>:MARKer<m>:FUNCTION:HARMonics[:STATe]	598
UNIT:THD	599

CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:BANDwidth:AUTO <State>

This command selects the resolution bandwidth of the harmonic in respect to the bandwidth of the first harmonic.

For details refer to "[Harmonic RBW Auto](#)" on page 214.

Suffix:

<n>	Selects the measurement window.
<m>	irrelevant

Parameters:

<State>	OFF ON
	OFF
	identical
	ON
	a multiple
	*RST: ON

Example:

```
CALC:MARK:FUNC:HARM:BAND:AUTO OFF
Deactivates the automatic bandwidth enlargement.
```

CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:DIS TORTion?

This command queries the total harmonic distortion of the signal.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n>	Selects the measurement window.
<m>	irrelevant

Parameters:

TOTal

Return values:

<Result> <Distortion_%>,<Distortion_dB>
 Pair of values, one showing the THD in %, one in dB.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:HARM:NHARM 3
Sets the number of harmonics to be measured to 3.
CALC:MARK:FUNC:HARM ON
Activates the harmonic distortion measurement.
INIT;*WAI
Starts a sweep and waits for the end of the sweep.
CALC:MARK:FUNC:HARM:DIST? TOT
Returns the total distortion in % and dB.
```

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:HARMonics:LIST?

This command queries the position of the harmonics.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<Harmonics> Returns one value for every harmonic.
 The first value is the absolute power of the first harmonic. The unit is variable. The other values are power levels relative to the first harmonic. The unit for these is dB.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:HARM:NHARM 3
Sets the number of harmonics to be measured to 3.
CALC:MARK:FUNC:HARM ON
Activates the harmonic distortion measurement.
INIT;*WAI
Starts a sweep and waits for the end of the sweep.
CALC:MARK:FUNC:HARM:LIST?
Returns the values for the 3 measured harmonics.
```

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:HARMonics:NHARmonics <NoHarmonics>

This command sets the number of harmonics to be measured.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<NoHarmonics> Range: 1 to 26
 *RST: 10

Example:

CALC:MARK:FUNC:HARM:NHARM 3

Sets the number of harmonics to be measured to 3.

CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:PRESet

This command initiates a measurement to determine the ideal configuration for the harmonic distortion measurement.

The method depends on the span.

- Frequency domain (span > 0)
Frequency and level of the first harmonic are determined and used for the measurement list.
- Time domain (span = 0)
The level of the first harmonic is determined. The frequency remains unchanged.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Example:

CALC:MARK:FUNC:HARM:PRESet

Optimizes the device settings for the harmonic measurement.

Usage:

Event

CALCulate<n>:MARKer<m>:FUNCTION:HARMonics[:STATe] <State>

This command turns the harmonic distortion measurement on and off.

Note the following:

- If you perform the measurement in the frequency domain, the search range for the frequency of the first harmonic, whose power is determined, is defined by the last span.
- If you perform the measurement in the time domain, the current center frequency is used as the frequency of the first harmonic. Thus, the frequency search is bypassed. The first harmonic frequency is set by a specific center frequency in zero span before the harmonic measurement is started.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:MARK:FUNC:HARM ON
 Activates the harmonic distortion measurement.

UNIT:THD <Mode>

This command selects the unit for THD measurements.

Parameters:

<Mode> DB | PCT
 *RST: DB

Example:

UNIT:THD PCT

9.4.1.9 Measuring the Carrier-to-Noise Ratio

Commands useful to measure the C/N ratio described elsewhere:

- [CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult?](#) on page 534
- [CALCulate<n>:MARKer<m>:FUNCTION:POWER:SElect](#) on page 533
- [CALCulate<n>:MARKer<m>:FUNCTION:POWER\[:STATe\]](#) on page 536
- [\[SENSe:\] POWER:ACHannel:BANDwidth|BWIDth\[:CHANnel<channel>\]](#) on page 543
- [\[SENSe:\] POWER:ACHannel:PRESet](#) on page 538

9.4.1.10 Measuring the Third Order Intercept Point

The following commands configure and control measurements to determine the third intercept point (TOI).

CALCulate<n>:MARKer<m>:FUNCTION:TOI:SEARChsignal ONCE	599
CALCulate<n>:MARKer<m>:FUNCTION:TOI[:STATe]	600
CALCulate<n>:MARKer<m>:FUNCTION:TOI:RESult?	600

CALCulate<n>:MARKer<m>:FUNCTION:TOI:SEARChsignal ONCE

This command initiates a search for signals in the current trace to determine the third intercept point.

No new measurement is performed. Only the currently available trace selected for the TOI measurement is used.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Example: `CALC:MARK:FUNC:TOI:SEAR ONCE`
 Executes the search for 2 signals and their intermodulation product at the currently available trace.

Usage: Event
 SCPI confirmed

CALCulate<n>:MARKer<m>:FUNCTION:TOI[:STATe] <State>

This command initiates a measurement to determine the third intercept point.

A two-tone signal with equal carrier levels is expected at the RF input of the instrument. Marker 1 and marker 2 (both normal markers) are set to the maximum of the two signals. Delta marker 3 and delta marker 4 are positioned to the intermodulation products. The delta markers can be modified separately afterwards with `CALCulate<n>:DELTamarker<m>:X`.

The third-order intercept is calculated from the level spacing between the normal markers and the delta markers.

Suffix:
 <n> Selects the measurement window.
 <m> irrelevant

Parameters:
 <State> ON | OFF
 *RST: OFF

Example: `CALC:MARK:FUNC:TOI ON`
 Switches on the measurement of the third-order intercept.

CALCulate<n>:MARKer<m>:FUNCTION:TOI:RESult?

This command queries the results for the third order intercept point measurement.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:
 <n> Selects the measurement window.
 <m> irrelevant

Return values:
 <TOI> Third order intercept point.

Example: `INIT:CONT OFF`
 Switches to single sweep mode.
 `CALC:MARK:FUNC:TOI ON`
 Switches the intercept measurement.
 `INIT;*WAI`
 Starts a sweep and waits for the end.
 `CALC:MARK:FUNC:TOI:RES?`
 Outputs the measured value.

Usage: Query only

9.4.1.11 Measuring Statistics

The following commands configure and perform statistics measurements.

- [Configuring Statistical Measurements](#).....601
- [Retrieving Results](#).....602
- [Using Gate Ranges for Statistical Measurements](#)..... 603
- [Scaling the Diagram](#).....605

Configuring Statistical Measurements

The following commands configure the measurement.

- [CALCulate<n>:STATistics:APD\[:STATe\]](#)..... 601
- [CALCulate<n>:STATistics:CCDF\[:STATe\]](#)..... 601
- [CALCulate<n>:STATistics:NSAMples](#)..... 602

CALCulate<n>:STATistics:APD[:STATe] <State>

This command switches on or off the measurement of amplitude distribution (APD). On activating this function, the CCDF measurement is switched off.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example: `CALC:STAT:APD ON`
 Switches on the APD measurement.

CALCulate<n>:STATistics:CCDF[:STATe] <State>

This command switches on or off the measurement of the complementary cumulative distribution function (CCDF). On activating this function, the APD measurement is switched off.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:STAT:CCDF ON
 Switches on the CCDF measurement.

CALCulate<n>:STATistics:NSAMples <NoMeasPoints>

This command sets the number of measurement points to be acquired for the statistical measurement functions.

Suffix:

<n> irrelevant

Parameters:

<NoMeasPoints> 100 to 1E9
 *RST: 100000

Example:

CALC:STAT:NSAM 500
 Sets the number of measurement points to be acquired to 500.

Retrieving Results

The following commands are required to retrieve the measurement results.

Commands useful to retrieve results described elsewhere:

- [CALCulate<n>:MARKer<m>:X](#) on page 510
- [TRACe<n>:DATA](#) on page 538

[CALCulate<n>:STATistics:CCDF:X<Trace>](#).....602
[CALCulate<n>:STATistics:RESult<Trace>](#).....603

CALCulate<n>:STATistics:CCDF:X<Trace> <Probability>

This command queries the results of the complementary cumulative distribution function (CCDF) for the specified probability (corresponding to the "Percent Marker" in the display, see ["Percent Marker"](#) on page 195). The suffix of X defines the trace number.

Suffix:

<n> irrelevant
 <Trace> 1...6
 trace

Parameters:

<Probability> P0_01: Level value for 0.01 % probability
 P0_1: Level value for 0.1 % probability
 P1: Level value for 1 % probability
 P10: Level value for 10 % probability

Example: `CALC:STAT:CCDF:X1? P10`
Returns the level values that are over 10 % above the mean value.

CALCulate<n>:STATistics:RESult<Trace> <ResultType>

This command reads out the results of statistical measurements of a recorded trace.

Suffix:

<n> irrelevant

<Trace> 1...6
trace

Parameters:

<ResultType> MEAN | PEAK | CFACTor | ALL

MEAN

Average (=RMS) power in dBm measured during the measurement time.

PEAK

Peak power in dBm measured during the measurement time.

CFACTor

Determined CREST factor (= ratio of peak power to average power) in dB.

ALL

Results of all three measurements mentioned before, separated by commas: <mean power>,<peak power>,<crest factor>

The required result is selected via the following parameters:

Example: `CALC:STAT:RES2? ALL`
Reads out the three measurement results of trace 2. Example of answer string: 5.56,19.25,13.69 i.e. mean power: 5.56 dBm, peak power 19.25 dBm, CREST factor 13.69 dB

Using Gate Ranges for Statistical Measurements

The following commands control gated statistical measurements.

<code>[SENSe:]SWEep:EGATe:TRACe<k>:COMMeNt.....</code>	603
<code>[SENSe:]SWEep:EGATe:TRACe<k>:PERiod.....</code>	604
<code>[SENSe:]SWEep:EGATe:TRACe<k>:STARt<range>.....</code>	604
<code>[SENSe:]SWEep:EGATe:TRACe<k>[:STATe<range>].....</code>	604
<code>[SENSe:]SWEep:EGATe:TRACe<k>:STOP<range>.....</code>	605

[SENSe:]SWEep:EGATe:TRACe<k>:COMMeNt <Comment>

Defines a comment for one of the traces for gated triggering.

Suffix:

<k> 1...6
trace

Parameters:

<Comment>

Example:

SWE:EGAT:TRAC1:COMM "SlotA"

[SENSe:]SWEep:EGATe:TRACe<k>: PERiod <Value>

This command defines the length of the period to be traced using gated triggering.

Suffix:

<k> 1...6
 trace

Parameters:

<Value> <numeric value>
*RST: 0 s

Example:

SWE:EGAT:TRAC1:PER 5ms
Defines the period for gated triggering to 5 ms.

[SENSe:]SWEep:EGATe:TRACe<k>:STARt<range> <Value>

This command defines the starting point for the range to be traced using gated triggering.

Suffix:

<k> 1...6
 trace

<range> 1...3
 range

Parameters:

<Value> <numeric value>
*RST: OFF

Example:

SWE:EGAT:TRAC1:STAR1 3ms
Sets the Starting point for range 1 on trace 1 at 3 ms.

[SENSe:]SWEep:EGATe:TRACe<k>[:STATe<range>] <State>

This command activates or deactivates tracing for a specific range using gated triggering.

Suffix:

<k> 1...6
 trace

<range> 1...3
 range

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

SWE:EGAT:TRAC1:STAT1 ON
 Activates tracing for range 1 of trace 1.

[SENSe:]SWEep:EGATe:TRACe<k>: STOP<range> <Value>

This command defines the stopping point for the range to be traced using gated triggering

Suffix:

<k> 1...6
 trace
 <range> 1...3
 range

Parameters:

<Value> <numeric value>
 *RST: 1 µs

Example:

SWE:EGAT:TRAC1:STOP1 5ms
 Sets the stopping point for range 1 on trace 1 at 5 ms.

Scaling the Diagram

The following commands configure the diagram for statistical measurements.

CALCulate<n>:STATistics:PRESet.....	605
CALCulate<n>:STATistics:SCALE:AUTO ONCE.....	606
CALCulate<n>:STATistics:SCALE:X:RANGe.....	606
CALCulate<n>:STATistics:SCALE:X:RLEVel.....	606
CALCulate<n>:STATistics:SCALE:Y:LOWer.....	607
CALCulate<n>:STATistics:SCALE:Y:UNIT.....	607
CALCulate<n>:STATistics:SCALE:Y:UPPer.....	607

CALCulate<n>:STATistics:PRESet

This command resets the scaling of the X and Y axes in a statistical measurement.
 The following values are set:

x-axis ref level:	-20 dBm
x-axis range APD:	100 dB
x-axis range CCDF:	20 dB
y-axis upper limit:	1.0
y-axis lower limit:	1E-6

Suffix:

<n> irrelevant

Example:

CALC:STAT:PRES

Resets the scaling for statistical functions

CALCulate<n>:STATistics:SCALE:AUTO ONCE

This command optimizes the level setting of the instrument depending on the measured peak power, in order to obtain maximum instrument sensitivity.

To obtain maximum resolution, the level range is set as a function of the measured spacing between peak power and the minimum power for the APD measurement and of the spacing between peak power and mean power for the CCDF measurement. In addition, the probability scale for the number of test points is adapted.

Subsequent commands have to be synchronized with *WAI, *OPC or *OPC? to the end of the auto range process which would otherwise be aborted.

Suffix:

<n> irrelevant

Example:

CALC:STAT:SCAL:AUTO ONCE; *WAI

Adapts the level setting for statistical measurements.

CALCulate<n>:STATistics:SCALE:X:RANGe <Value>

This command defines the level range for the x-axis of the measurement diagram. The setting is identical to the level range setting defined with the `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]` command.

Suffix:

<n> irrelevant

Parameters:

<Value> 10dB to 200dB

*RST: 100dB

Example:

CALC:STAT:SCAL:X:RANG 20dB

CALCulate<n>:STATistics:SCALE:X:RLEVel <Value>

This command defines the reference level for the x-axis of the measurement diagram. The setting is identical to the reference level setting using the `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RLEVel` command.

With the reference level offset <> 0 the indicated value range of the reference level is modified by the offset.

The unit depends on the setting performed with `CALCulate<n>:UNIT:POWer`.

Suffix:

<n> irrelevant

Parameters:

<Value> -120dBm to 20dBm
 *RST: -20dBm

Example:

CALC:STAT:SCAL:X:RLEV -60dBm

CALCulate<n>:STATistics:SCALE:Y:LOWer <Value>

This command defines the lower limit for the y-axis of the diagram in statistical measurements. Since probabilities are specified on the y-axis, the entered numeric values are dimensionless.

Suffix:

<n> selects the screen

Parameters:

<Value> 1E-9 to 0.1
 *RST: 1E-6

Example:

CALC:STAT:SCAL:Y:LOW 0.001

CALCulate<n>:STATistics:SCALE:Y:UNIT <Unit>

This command defines the scaling type of the y-axis.

Suffix:

<n> selects the screen

Parameters:

<Unit> PCT | ABS
 *RST: ABS

Example:

CALC:STAT:SCAL:Y:UNIT PCT
 Sets the percentage scale.

CALCulate<n>:STATistics:SCALE:Y:UPPer <Value>

This command defines the upper limit for the y-axis of the diagram in statistical measurements. Since probabilities are specified on the y-axis, the entered numeric values are dimensionless.

Suffix:

<n> irrelevant

Parameters:

<Value> 1E-8 to 1.0
 *RST: 1.0

Example:

CALC:STAT:SCAL:Y:UPP 0.01

9.4.1.12 Measuring in the Time Domain

The following commands configure and perform time domain power measurements.

Configuring the Measurement

The following commands control measurement configurations for measurements of the time domain power

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:AOff.....	608
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:AVERage.....	608
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:MODE.....	609
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PHOLd.....	609
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:REFerence:AUTO ONCE.....	610
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY[:STATe].....	610

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:AOff

This command turns all time domain power measurements off.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

CALC:MARK:FUNC:SUMM:AOff

Switches off the functions for power measurement in zero span.

Usage:

Event

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:AVERage <State>

This command turns averaging for the active power measurement in zero span on and off.

Averaging is reset by switching it off and on again.

The number of results required for the calculation of average is defined with [SENSe:]AVERage<n>:COUNT.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:SUMM:AVER ON
Switches on the calculation of average.
AVER:COUN 200
Sets the measurement counter to 200.
INIT;*WAI
Starts a sweep and waits for the end.
```

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:MODE <Mode>

This command selects absolute or relative power measurement in zero span.

The reference power for relative measurement is defined with `CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:REFERENCE:AUTO ONCE`. If the reference power is not defined, the value 0 dBm is used.

Suffix:

<n> Selects the measurement window.
 <m> irrelevant

Parameters:

<Mode> ABSolute | RELative
 *RST: ABSolute

Example:

```
CALC:MARK:FUNC:SUMM:MODE REL
Switches the power measurement in zero span to relative.
```

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PHOLD <State>

This command turns the peak hold function for the active power measurement in zero span on and off.

If on, the measurement results show only the maximum power that has been measured for each sweep point.

The peak hold function is reset by switching it off and on again.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

```
CALC:MARK:FUNC:SUMM:PHOL ON
Switches on the function.
```

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:REFERENCE:AUTO ONCE

This command sets the currently measured average value (`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:MEAN[:STATe]`) and RMS value (`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:RMS[:STATe]`) as reference values for relative measurements in zero span.

If the measurement of RMS value and average is not activated, the reference value 0 dBm is used.

If the function `CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:AVERage` or `CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PHOLd` is switched on, the current value is the accumulated measurement value at the time considered.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Example:

`CALC:MARK:FUNC:SUMM:REF:AUTO ONCE`

Takes the currently measured power as reference value for the relative power measurement in zero span.

Usage:

Event

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY[:STATe] <State>

This command turns time domain power measurements on and off. This measurement is only available in zero span.

Thus one or several measurements can be first selected and then switched on and off together using this command.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

`CALC:MARK:FUNC:SUMM:STAT ON`

Retrieving Measurement Results

The following commands analyze and retrieve measurement results for time domain power measurements.

Commands useful to retrieve results described elsewhere:

- `TRACe<n>:DATA` on page 538

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:MEAN:AVERage:RESult?`..... 611

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:MEAN:PHOLd:RESult?`..... 611

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:MEAN:RESult?`..... 612

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:MEAN[:STATe].....	613
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PPEak:AVERAge:RESult?.....	613
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PPEak:PHOLd:RESult?.....	614
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PPEak:RESult?.....	614
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PPEak[:STATe].....	615
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:RMS:AVERAge:RESult?.....	615
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:RMS:PHOLd:RESult?.....	616
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:RMS:RESult?.....	616
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:RMS[:STATe].....	617
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:SDEViation:AVERAge:RESult?.....	617
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:SDEViation:PHOLd:RESult?.....	618
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:SDEViation:RESult?.....	618
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:SDEViation[:STATe].....	619

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:MEAN:AVERAge:RESult?

This command queries the average mean time domain power. The query is only possible if averaging has been activated previously using `CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:AVERAge`.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n>	Selects the measurement window.
<m>	Selects the marker.

Return values:

<MeanPower>	Mean power of the signal during the measurement time.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:SUMM:MEAN ON
Switches on the function.
CALC:MARK:FUNC:SUMM:AVER ON
Switches on the average value calculation.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK:FUNC:SUMM:MEAN:AVER:RES?
Outputs the result.
```

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:MEAN:PHOLd:RESult?

This command queries the maximum mean time domain power. The query is only possible if the peak hold function has been activated previously using `CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PHOLd`.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Return values:

<MeanPower> Mean power of the signal during the measurement time.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:SUMM:MEAN ON
Switches on the function.
CALC:MARK:FUNC:SUMM:PHOL ON
Switches on the peak value measurement.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK:FUNC:SUMM:MEAN:PHOL:RES?
Outputs the result.
```

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:MEAN:RESult?

This command queries the mean time domain power.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Return values:

<MeanPower> Mean power of the signal during the measurement time.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:SUMM:MEAN ON
Switches on the function.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK:FUNC:SUMM:MEAN:RES?
Outputs the result.
```

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:MEAN[:STATe] <State>

This command turns the measurement of the mean time domain power on and off.

Note: The measurement is performed on the trace marker 1 is positioned. In order to evaluate another trace, marker 1 must be positioned on another trace with `CALCulate<n>:MARKer<m>:TRACe`.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: `CALC:MARK:FUNC:SUMM:MEAN ON`
 Switches on the function.

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PPEak:AVERage:RESult?

This command queries the average positive peak time domain power. The query is only possible if averaging has been activated previously using `CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:AVERage`.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Return values:

<PeakPower> Peak power of the signal during the measurement time.

Example:

`INIT:CONT OFF`
 Switches to single sweep mode.
`CALC:MARK:FUNC:SUMM:PPE ON`
 Switches on the function.
`CALC:MARK:FUNC:SUMM:AVER ON`
 Switches on the calculation of average.
`INIT;*WAI`
 Starts a sweep and waits for the end.
`CALC:MARK:FUNC:SUMM:PPE:AVER:RES?`
 Outputs the result.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PPEak:PHOLd:RESult?

This command queries the maximum positive peak time domain power. The query is only possible if the peak hold function has been activated previously using `CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PHOLd`.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Return values:

<PeakPower> Peak power of the signal during the measurement time.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:SUMM:PPE ON
Switches on the function.
CALC:MARK:FUNC:SUMM:PHOL ON
Switches on the measurement of the peak value.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK:FUNC:SUMM:PPE:PHOL:RES?
Outputs the result.
```

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PPEak:RESult?

This command queries the positive peak time domain power.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Return values:

<PeakPower> Peak power of the signal during the measurement time.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:SUMM:PPE ON
Switches on the function.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK:FUNC:SUMM:PPE:RES?
Outputs the result.
```

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PPEak[:STATe] <State>

This command turns the measurement of the positive peak time domain power on and off.

Note: The measurement is performed on the trace marker 1 is positioned. In order to evaluate another trace, marker 1 must be positioned on another trace with `CALCulate<n>:MARKer<m>:TRACe`.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

*RST: OFF

Example: `CALC:MARK:FUNC:SUMM:PPE ON`
Switches on the function.

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:RMS:AVERage:RESult?

This command queries the average RMS time domain power. The query is only possible if averaging has been activated previously using `CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:AVERage`.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Return values:

<RMSPower> RMS power of the signal during the measurement time.

Example: `INIT:CONT OFF`
Switches to single sweep mode.
`CALC:MARK:FUNC:SUMM:RMS ON`
Switches on the function.
`CALC:MARK:FUNC:SUMM:AVER ON`
Switches on the average value calculation.
`INIT;*WAI`
Starts a sweep and waits for the end.
`CALC:MARK:FUNC:SUMM:RMS:AVER:RES?`
Outputs the result.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNction:SUMMary:RMS:PHOLd:RESult?

This command queries the maximum RMS time domain power. The query is only possible if the peak hold function has been activated previously using `CALCulate<n>:MARKer<m>:FUNction:SUMMary:PHOLd`.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Return values:

<RMSPower> RMS power of the signal during the measurement time.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:SUMM:RMS ON
Switches on the function.
CALC:MARK:FUNC:SUMM:PHOL ON
Switches on the peak value measurement.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK:FUNC:SUMM:RMS:PHOL:RES?
Outputs the result.
```

Usage: Query only

CALCulate<n>:MARKer<m>:FUNction:SUMMary:RMS:RESult?

This command queries the RMS time domain power.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Return values:

<RMSPower> RMS power of the signal during the measurement time.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:SUMM:RMS ON
Switches on the function.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK:FUNC:SUMM:RMS:RES?
Outputs the result.
```

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:RMS[:STATe] <State>

This command turns the measurement of the RMS time domain power on and off.

Note: The measurement is performed on the trace marker 1 is positioned. In order to evaluate another trace, marker 1 must be positioned on another trace with `CALCulate<n>:MARKer<m>:TRACe`.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

*RST: OFF

Example: `CALC:MARK:FUNC:SUM:RMS ON`
Switches on the function.

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:SDEViation:AVERage:RESult?

This command queries the average standard deviation of the time domain power. The query is only possible if averaging has been activated previously using `CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:AVERage`.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Return values:

<StandardDeviation> Standard deviation of the signal during the measurement time.

Example: `INIT:CONT OFF`
Switches to single sweep mode.
`CALC:MARK:FUNC:SUMM:SDEV ON`
Switches on the function.
`CALC:MARK:FUNC:SUMM:AVER ON`
Switches on the calculation of average.
`INIT;*WAI`
Starts a sweep and waits for the end.
`CALC:MARK:FUNC:SUMM:MEAN:SDEV:RES?`
Outputs the result.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:SDEViation:PHOLd:RESult?

This command queries the maximum standard deviation of the time domain power. The query is only possible if the peak hold function has been activated previously using `CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PHOLd`.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Return values:

<StandardDeviation> Standard deviation of the signal during the measurement time.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:SUMM:SDEV ON
Switches on the function.
CALC:MARK:FUNC:SUMM:PHOL ON
Switches on the peak value measurement.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK:FUNC:SUMM:SDEV:PHOL:RES?
Outputs the result.
```

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:SDEViation:RESult?

This command queries the standard deviation of the time domain power.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Return values:

<StandardDeviation> Standard deviation of the signal during the measurement time.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:SUMM:SDEV ON
Switches on the function.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK:FUNC:SUMM:SDEV:RES?
Outputs the result.
```

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:SDEViation[:STATe] <State>

This command turns the measurement of the standard deviation of the time domain power on and off.

Note: The measurement is performed on the trace marker 1 is positioned. In order to evaluate another trace, marker 1 must be positioned on another trace with `CALCulate<n>:MARKer<m>:TRACe`.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

`CALC:MARK:FUNC:SUMM:SDEV ON`


Switches on the measurement of the standard deviation.

9.4.1.13 Measuring the Pulse Power

The commands of this subsystem are used to determine the mean burst power or peak burst power for a given number of signal bursts, and for outputting the results in a list. Since all the settings required for a measurement are combined in a single command, the measurement speed is considerably higher than when using individual commands.

For measuring the signal bursts, the gated sweep function is used in zero span. The gate is controlled either by an external trigger signal or by the video signal. An individual trigger event is required for each burst to be measured. If an external trigger signal is used, the threshold is fixed to TTL level, while with a video signal the threshold can be set as desired.

The following graphics shows the relation between trigger time, trigger offset (for delayed gate opening) and measurement time.

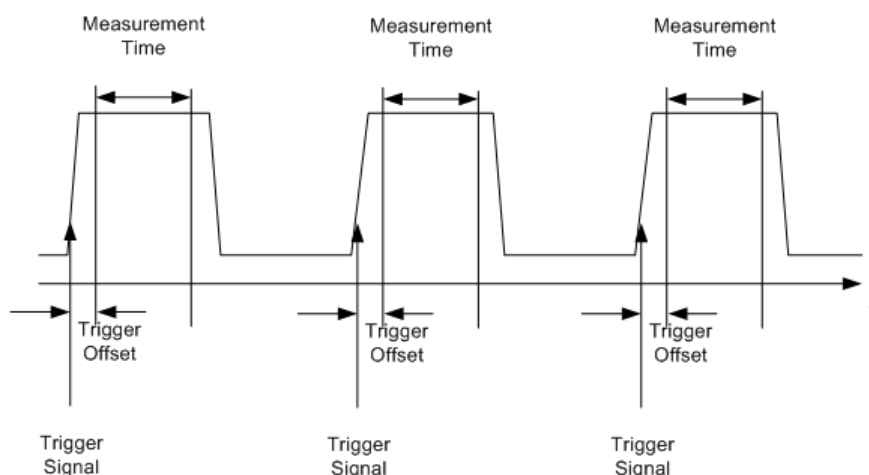

Depending on the settings made, the measurements are performed with the RMS detector for RMS power or the PEAK detector for peak power. For all these measurements, trace 1 of the selected system is used.

The commands of this subsystem can be used in two different ways:

- Setting up the instrument and at the same time querying the result list: This method ensures the smallest delay between measurement and the output of the measured values, but requires the control computer to wait actively for the response of the instrument.
- Setting up the instrument and querying the result list after synchronization to the end of measurement: With this method the control computer can be used for other activities while the instrument is performing the measurement at the cost of additional time needed for synchronization via service request.

[SENSe:]MPOWer:FTYPE.....	620
[SENSe:]MPOWer:RESult[:LIST]?.....	620
[SENSe:]MPOWer:RESult:MIN?.....	621
[SENSe:]MPOWer[:SEQuence].....	621

[SENSe:]MPOWer:FTYPE <FilterType>

This command selects the filter type for pulse power measurements.

Parameters:

<FilterType> NORMal | CFILter | RRC

Example:

SENSe:MPOWer:FTYPE CFILter

[SENSe:]MPOWer:RESult[:LIST]?

This command queries the results of the pulse power measurement.

This command may be used to obtain measurement results in an asynchronous way, using the service request mechanism for synchronization to the end of the measurement.

If there are no results, the command returns an error.

Parameters:

<PulsePower>

List of pulse powers.

The number of values depends on the number of pulses you have been measuring.

The unit is dBm.

Example:

*ESE 1

*SRE 32

Configuration of status reporting systems for the generation of an SRQ on operation complete

SENSe:MPOWer 935.2MHz,1MHz,434us,VIDEO,50PCT,5us,MEAN,20;*OPC

Configuring and starting the measurement

...

Further actions of the control computer during measurement

On SRQ:

Response to service request

SENSe:MPOWer:RESult?

Usage:

Query only

[SENSe:]MPOWer:RESult:MIN?

This command queries the lowest pulse power that has been measured during a pulse power measurement.

If there are no results, the command returns an error.

Return values:

<PulsePower>

Lowest power level of the pulse power measurement.

The unit is dBm.

Example:

*ESE 1

*SRE 32

Configuration of status reporting systems for the generation of an SRQ on operation complete

SENSe:MPOWer 935.2MHz,1MHz,434us,VIDEO,50PCT,5us,MEAN,20;*OPC

Configuring and starting the measurement

...

Further actions of the control computer during measurement

On SRQ:

Response to service request

SENSe:MPOWer:RESult:MIN?

Usage:

Query only

[SENSe:]MPOWer[:SEquence] <Frequency>, <RBW>, <MeasTime>, <TriggerSource>, <TriggerLevel>, <TriggerOffset>, <Detector>, <#OfPulses>

This command configures and initiates the pulse power measurement.

The R&S ESRP caches all measurement parameters that you can set with this command. If you use the command repeatedly, the R&S ESRP only changes those settings that you have actually changed before initiating the measurement. Thus, measurement times are kept as low as possible.

If you synchronize the measurement with *OPC, the R&S ESRP produces a service request when all frequencies have been measured and the number of individual measurements has been performed.

Note that using the command as a query initiates the measurement and returns the results if all frequencies have been measured. For more information on querying the results see .

To reduce the setting time, the setup is performed simultaneously for all selected parameters.

The query adapts the instrument settings, performs the defined number of measurements and outputs the measurement results list.

This measurement is not compatible with other measurements, especially as far as marker functions, adjacent-channel measurement or statistics are concerned. The corresponding functions are therefore automatically switched off. In return, incompatible commands automatically deactivate the multi burst power function.

The function is only available in the REMOTE operation. It is deactivated on switching back to LOCAL.

Parameters:

<Frequency> Defines the pulse frequency.

Range: 0 Hz to fmax

<RBW> Defines the resolution bandwidth.

Range: 10 Hz to 10 MHz in steps of 1, 3, 10

<MeasTime> Defines the measurement time.

Range: 1 μ s to 30 s

<TriggerSource> Selects a trigger source.

EXternal

The trigger signal is fed from the "Ext. Trigger/Gate" input on the rear of the unit.

VIDeo

The internal video signal is used as trigger signal.

<TriggerLevel> Defines a trigger level.

The trigger level is available for the video trigger. In that case, the level is a percentage of the diagram height.

In case of an external trigger, the R&S ESRP uses a fix TTL level.

Range: 0 PCT to 100 PCT

<TriggerOffset>	Defines the trigger delay. The trigger delay is the time between the detection of the trigger signal and the start of the measurement. Range: see data sheet
<Detector>	Selects the detector and therefore the way the measurement is evaluated. MEAN Calculates the RMS pulse power. PEAK Calculates the peak pulse power.
<#OfPulses>	Defines the number of pulses included in the measurement. Range: 1 to 32001
Return values:	
<PowerLevel>	Pulse power level. The result is a list of floating point values separated by commas. The unit is dBm.
Example:	Sample setting: <code>SENSe:MPOWer 935.2MHz,1MHz,434us,VIDEO,50PCT,5us,MEAN,20</code> Performs a measurement sequence with the following settings: Frequency = 935.2 MHz, Resolution bandwidth = 1 MHz Measurement time = 434 µs Trigger source = VIDEO Trigger threshold = 50 % Trigger offset = 5 µs Type of measurement = MEAN power No. of measurements = 20 Sample query: <code>SENSe:MPOWer? 935.2MHz, 1MHz, 434us, VIDEO, 50PCT, 5us, MEAN, 20</code> Performs the same measurement and in addition returns the results list immediately after completion of the last measurement. Sample result: 18.3,18.6,18.1,18.0,17.9,18.3,18.6,18.1,18.0,17.9,18.3,18.6,18.1,18.0,17.9,18.3,18.6,18.1,18.0,17.9

9.4.1.14 Performing List Evaluations

The commands of this subsystem are used for measuring the power at a list of frequency points with different device settings. The measurement is always performed in zero span. A new trigger event is required for each test point (exception: trigger "FREE RUN").

The results are output as a list in the order of the entered frequency points. The number of results per test point depends on the number of concurrently active measurements (peak/RMS/average). The number of frequencies is limited to 200 entries.

Selection of concurrently active measurements and setting of parameters that are constant for the whole measurement is performed via a configuration command ([SENSe:]LIST:POWer:SET). This also includes the setting for trigger and gate parameters.



Settings that are not directly included in commands of this subsystem can be configured by sending the corresponding commands prior to the [SENSe:]LIST:... commands.

Please note that changes to the trigger level have to be executed in zero span in order to take effect for the [SENSe:]LIST:... commands.

The commands of this subsystem can be used in two different ways:

- Instrument setup, measurement and querying of the results in a single command line. With this method, there is the least delay between the measurement and the result output. However, it requires the control computer to wait for the response from the instrument.
- Instrument setup and querying of the result list at the end of the measurement: With this method, the control computer may be used for other activities while the measurement is being performed. However, more time is needed for synchronization via service request.

[SENSe:]LIST:POWer:RESult?	624
[SENSe:]LIST:POWer[:SEQuence]	625
[SENSe:]LIST:POWer:SET	627
[SENSe:]LIST:POWer:STATe	628

[SENSe:]LIST:POWer:RESult?

This command queries the results of the list evaluation.

This command may be used to obtain measurement results in an asynchronous way, using the service request mechanism for synchronization to the end of the measurement.

If there are no results, the command returns an error.

Return values:

<PowerLevel> Power level for each frequency included in the measurement. The command returns up to 3 power levels for each frequency, depending on the number of evaluation modes you have turned on with [SENSe:]LIST:POWer:SET on page 627. The result is a list of floating point values separated by commas. The unit depends on [SENSe:]LIST:POWer[:SEQuence].

Example:

```
*ESE 1
*SRE 32
Configuration of the status reporting system for the generation of
an SRQ on operation complete
SENSe:LIST:POWer
935.2 MHz,-20dBm,10dB,OFF,NORM,1 MHz,3 MHz,
434us,0,
935.4 MHz,-20dBm,10dB,10dB,NORM,30 kHz,100 kHz,
434us,0,
935.6 MHz,-20dBm,10dB,20dB,NORM,30 kHz,100 kHz,
434us,0;
*OPC
Configuring and starting the measurement
...
Further actions of the control computer during measurement
On SRQ:
SENSe:LIST:POWer:RESult?
Response to service request
```

Usage:

Query only

[SENSe:]LIST:POWer[:SEquence]

<Frequency>,<RefLevel>,<RfAtt>,<EIAtt>,<FilterType>,<RBW>,<VBW>,<Meas
Time>,<TriggerLevel>

This command configures and initiates the List Evaluation measurement.

The list can contain up to 200 entries (frequencies). You can define a different instrument setup for each frequency that is in the list.

If you synchronize the measurement with *OPC, the R&S ESRP produces a service request when all frequencies have been measured and the number of individual measurements has been performed.

To reduce the setting time, all indicated parameters are set up simultaneously at each test point.

The measurement is performed in zero span and therefore the span is set to 0 Hz. If the span > 0 is set, the function is automatically switched off.

The measurement is not compatible with other measurements, especially as far as marker, adjacent channel power measurement or statistics are concerned. The corresponding commands thus automatically deactivate the function.

The function is only available in REMOTE operation. It is deactivated when switching the instrument back to LOCAL.

Note that using the command as a query initiates the measurement and returns the results if all frequencies have been measured. For more information on querying the results see [SENSe:]LIST:POWer:RESult? on page 624 .

The following parameters are the settings for an individual frequency point. They are repeated for each frequency point.

Setting parameters:

<Frequency>	Defines the receive frequency. Each frequency corresponds to one list entry. Range: 0 Hz to fmax
<RefLevel>	Defines the reference level for a list entry. Range: -130 dBm to 30 dBm Increment: 0.01 dBm
<RfAtt>	Defines the RF attenuation for a list entry. Range: 0 dB to 70 dB Increment: 10 dB
<FilterType>	Selects the filter type for a list entry. For more information see [SENSe:]BANDwidth BWIDth[:RESolution]:TYPE on page 487.
<RBW>	Defines the resolution bandwidth for a list entry. For the range of values refer to "Res BW Manual" on page 234. Refer to chapter 4.2.6.3, "Selecting the Appropriate Filter Type" , on page 239 for possible combinations of filter type and filter bandwidth for the <filter type> = CFILter and <filter type> = RRC.
<VBW>	Defines the video bandwidth for a list entry. The value is ignored for <filter type> = "CFILter" or "RRC" Range: 1 Hz to 10 MHz in 1, 3, 10 steps
<MeasTime>	Defines the measurement time for a list entry. For details refer to "SweepTime Manual" on page 235. Range: 1 µs to 16000 s
<TriggerLevel>	The trigger level must be 0.

Return values:

<PowerLevel>	Power level for each frequency included in the measurement. The command returns up to 3 power levels for each frequency, depending on the number of evaluation modes you have turned on with [SENSe:]LIST:POWer:SET on page 627. The result is a list of floating point values separated by commas. The unit depends on CALCulate<n>:UNIT:POWer .

Example:

```
SENSe:LIST:POWer?
935.2 MHz,0 dBm,10 dB,OFF,NORM,1 MHz,3 MHz,
440us,0,
935.4 MHz,0dBm,10dB,10dB,NORM,30 kHz,100 kHz,
440us,0,
935.6 MHz,0dBm,10dB,20dB,NORM,30 kHz,100 kHz,
440us,0
Result list:
-28.3,-30.6,-38.1
```

Example:

```
SENSe:LIST:POWer:SET ON,ON,ON,IMM,POS,0,0
```

Activates the power measurement of the peak, RMS and average values.

```
SENSe:LIST:POWer?
```

```
935.2 MHz,0dBm,10dB,OFF,NORM,1 MHz,3 MHz,440us,0,
```

```
935.4 MHz,0dBm,10dB,10dB,NORM,30 kHz,100 kHz,440us,0,
```

```
935.6 MHz,0dBm,10dB,20dB,NORM,30 kHz,100 kHz,440us,0
```

Result list (3 results per frequency point):

```
-28.3, -29.6, 1.5, -30.6, -31.9, 0.9, -38.1, -40.0, 2.3
```

Example:

```
SENSe:LIST:POWer
```

```
935.2 MHz,0dBm,10dB,OFF,NORM,1 MHz,3 MHz,440us,0,
```

```
935.4 MHz,0dBm,10dB,10dB,CFIL,30 kHz,100 kHz,440us,0,
```

```
935.6 MHz,0dBm,10dB,20dB,CFIL,30 kHz,100 kHz,440us,0
```

Performs a measurement sequence with the settings described in [table 9-19](#).

```
SENSe:LIST:POWer?
```

```
935.2 MHz,0dBm,10dB,OFF,NORM,1 MHz,3 MHz,440us,0,
```

```
935.4 MHz,0dBm,10dB,10dB,CFIL,30 kHz,100 kHz,440us,0,
```

```
935.6 MHz,0dBm,10dB,20dB,CFIL,30 kHz,100 kHz,440us,0
```

Performs the same measurement and returns the result list immediately after the last frequency point.

Table 9-19: Settings for power list example

Step	Freq. [MHz]	Ref Level [dBm]	RF Att [dB]	eI Att [dB]	Filter type	RBW	VBW	Meas Time [us]	TRG Level (reserved)
1	935.2	0	10	OFF	Normal	1 MHz	3 MHz	440	0
2	935.4	0	10	10	Channel	30 kHz	100 kHz	440	0
3	935.6	0	10	20	Channel	30 kHz	100 kHz	440	0

[SENSe:]LIST:POWer:SET

<PeakPower>,<RMSPower>,<AVGPower>,<TriggerSource>,<TriggerSlope>,<TriggerOffset>,<GateLength>

This command defines global List Evaluation parameters.

These parameters are valid for every frequency you want to measure.

The state of the first three parameters (<PeakPower>, <RMSPower> and <AVGPower>) define the number of results for each frequency in the list.

Note that you have to set the trigger level *after* sending this command.

Parameters:

<PeakPower>	ON OFF Turns peak power evaluation on and off. *RST: ON
<RMSPower>	ON OFF Turns RMS power evaluation on and off. *RST: OFF
<AVGPower>	ON OFF Turns average power evaluation on and off. *RST: OFF
<TriggerSource>	IMMediate EXTernal VIDEo IFPower RFPower Selects a trigger source. For more information see "Trg/Gate Source" on page 248. *RST: IMM
<TriggerSlope>	NEGative POSitive Selects the trigger slope. *RST: POS
<TriggerOffset>	Defines the trigger delay. The trigger delay is the time between the detection of the trigger signal and the start of the measurement at the next frequency point. Range: span = 0 Hz: (-sweep time) to 30 s; span > 10 Hz: 31.25 ns to 30 s *RST: 0 s
<GateLength>	Defines the gate length for gated measurements. Setting 0 seconds turns gated measurements off. Other values activate the gated trigger function. To perform gated measurements, the trigger source must be different from IMMediate. Range: 31.25 ns to 30 s *RST: 0 s

Example: `SENSe:LIST:POWer:SET ON,OFF,OFF,EXT,POS,10US,434US`

[SENSe:]LIST:POWer:STATe <State>

This command turns the List Evaluation off.

Parameters:

<State>	OFF

Example: `SENS:LIST:POW:STAT OFF`

9.4.1.15 Probe Configuration

<code>PROBe:ID:PARTnumber?</code>	629
<code>PROBe:ID:SRNumber?</code>	629
<code>PROBe:SETup:MODE</code>	629
<code>PROBe:SETup:NAME?</code>	629
<code>PROBe:SETup:STATe?</code>	630
<code>PROBe[:STATe]</code>	630

PROBe:ID:PARTnumber?

This command returns the material part number of the connected probe.

Example: `PROB:ID:PART?`

Usage: Query only

PROBe:ID:SRNumber?

This command returns the serial number of the connected probe.

Example: `PROB:ID:SRN?`

Usage: Query only

PROBe:SETup:MODE <Mode>

This command defines which action is taken when the probe's micro button is pressed.

Parameters:

<Mode>	RSINgle
	A single sweep is performed.
	NOAction
	No action is taken.
	*RST: OFF

Example: `PROB:SET:STAT ON`

PROBe:SETup:NAME?

This command returns the name of the connected probe.

Example: `PROB:SET:NAME?`

Usage: Query only

PROBe:SETup:STATe?

This command queries whether a probe is connected to the instrument's RF INPUT and USB connectors and was recognized by the R&S ESRP.

Example: `PROB:SET:STAT ON`

Usage: Query only

PROBe[:STATe] <State>

This command activates a connected probe. Use this command to switch off the probe and measure the digital input without considering the transducer factor of the probe.

Parameters:

<State> **ON | OFF**
 *RST: OFF

Example: `PROB:STAT ON`

9.4.2 Configuring Spectrum Measurements

• Frequency Settings	630
• Automatic Measurement Configuration	635
• Bandwidth Settings	637
• Sweep Configuration	640
• Trigger Configuration	643
• Vertical Axis Configuration	649

9.4.2.1 Frequency Settings

The following commands select the frequency characteristics the R&S ESRP uses for the measurement.

Defining Frequency Characteristics

Commands useful to define the frequency described elsewhere:

- [\[SENSe:\]FREQuency:CENTer:STEP](#) on page 482

[SENSe:]FREQuency:CENTer	631
[SENSe:]FREQuency:CENTer:STEP:AUTO	631
[SENSe:]FREQuency:CENTer:STEP:LINK	631
[SENSe:]FREQuency:CENTer:STEP:LINK:FACToR	631
[SENSe:]FREQuency:MODE	632
[SENSe:]FREQuency:OFFSet	632
[SENSe:]FREQuency:STARt	632
[SENSe:]FREQuency:STOP	633
[SENSe:]FREQuency:SPAN	633
[SENSe:]FREQuency:SPAN:FULL	633

[SENSe:]FREQuency:CENTer <Frequency>

This command defines the center frequency (frequency domain) or measuring frequency (time domain).

Parameters:

<Frequency> Range: 0 to f_{max}
 *RST: f_{max}/2
 Default unit: Hz
 f_{max} is specified in the data sheet. min span is 10 Hz
 (SEM and Spurious: min span = 20 Hz)

Example: `FREQ:CENT 100 MHz`

[SENSe:]FREQuency:CENTer:STEP:AUTO <State>

This command couples the step size of the center frequency to the span (ON) or sets the value of the center frequency entered via `[SENSe:]FREQuency:CENTer` (OFF).

Parameters:

<State> ON | OFF
 *RST: ON

Example: `FREQ:CENT:STEP:AUTO ON`
 Activates the coupling of the step size to the span.

[SENSe:]FREQuency:CENTer:STEP:LINK <CouplingType>

This command couples and decouples the center frequency step size to the span or the resolution bandwidth.

Parameters:

<CouplingType> **SPAN**
 Couples the step size to the span. Available for measurements in the frequency domain.
 RBW
 Couples the step size to the resolution bandwidth. Available for measurements in the time domain.
 OFF
 Decouples the step size (manual input).
 *RST: SPAN

Example: `FREQ:CENT:STEP:LINK SPAN`

[SENSe:]FREQuency:CENTer:STEP:LINK:FACTOR <Factor>

This command defines a step size factor if the center frequency step size is coupled to the span or the resolution bandwidth.

Parameters:

<Factor> Range: 1 to 100
 *RST: 10
 Default unit: PCT

Example: `FREQ:CENT:STEP:LINK:FACT 20PCT`

[SENSe:]FREQuency:MODE <Mode>

This command selects the frequency mode.

between span > 0 and zero span in the "Spectrum" mode.

Parameters:

<Mode> **CW**
 Selects the time domain (span = 0).
 In the time domain, define the measurement frequency with
 `[SENSe:]FREQuency:CENTer`.

FIXed
 Selects the time domain (span = 0).
 In the time domain, define the measurement frequency with
 `[SENSe:]FREQuency:CENTer`.

SWEep
 Selects the frequency domain (span > 0).
 In the frequency domain, define the frequency characteristics
 with the following commands:

- `[SENSe:]FREQuency:START`
- `[SENSe:]FREQuency:STOP`
- `[SENSe:]FREQuency:SPAN`
- `[SENSe:]FREQuency:CENTer`

 *RST: SWEep

Example: `FREQ:MODE SWE`
 Selects the frequency domain.

Usage: SCPI confirmed

[SENSe:]FREQuency:OFFSet <Offset>

This command defines the frequency offset.

Parameters:

<Offset> Range: -100 GHz to 100 GHz
 *RST: 0 Hz
 Default unit: Hz

Example: `FREQ:OFFS 1GHZ`

[SENSe:]FREQuency:START <Frequency>

This command defines the start frequency for measurements in the frequency domain.

Parameters:

<Frequency> 0 to (fmax - min span)

*RST: 0

Example:

FREQ:STAR 20MHz

[SENSe:]FREQuency:STOP <Frequency>

This command defines the stop frequency for measurements in the frequency domain.

Parameters:

<Frequency> min span to fmax

*RST: fmax

Example:

FREQ:STOP 2000 MHz

**[SENSe:]FREQuency:SPAN **

This command defines the frequency span.

Parameters:

 *RST: fmax

Example:

FREQ:SPAN 10MHz

[SENSe:]FREQuency:SPAN:FULL

This command sets the frequency span to its maximum.

Example:

FREQ:SPAN:FULL

Tracking Signals

CALCulate<n>:MARKer<m>:FUNCTION:STRack:BANDwidth BWIDth.....	633
CALCulate<n>:MARKer<m>:FUNCTION:STRack[:STATe].....	634
CALCulate<n>:MARKer<m>:FUNCTION:STRack:THReshold.....	634
CALCulate<n>:MARKer<m>:FUNCTION:STRack:TRACe.....	634

CALCulate<n>:MARKer<m>:FUNCTION:STRack:BANDwidth|BWIDth <Bandwidth>

This command defines the bandwidth around the center frequency that is included in the signal tracking process.

Note that you have to turn on signal tracking before you can use the command (CALCulate<n>:MARKer<m>:FUNCTION:STRack[:STATe]).

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<Bandwidth> 10 Hz to MAX (span)
 *RST: (= span/10 on activating the function)

Example:

CALC:MARK:FUNC:STR:BAND 1 MHZ
 Sets the search bandwidth to 1 MHz.
 CALC:MARK:FUNC:STR:BWID 1 MHZ
 Alternative command for the same function.

CALCulate<n>:MARKer<m>:FUNCTION:STRack[:STATe] <State>

This command turns signal tracking on and off.

When signal tracking is on, the R&S ESRP determines the maximum signal after each frequency sweep. The center frequency is then set to the frequency of this signal. Thus, the center frequency follows the frequency when you measure drifting signals.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:MARK:FUNC:STR ON
 Switches on the signal track function.

CALCulate<n>:MARKer<m>:FUNCTION:STRack:THReshold <Level>

This command defines a threshold above which the signal is tracked.

Note that you have to turn on signal tracking before you can use the command (CALCulate<n>:MARKer<m>:FUNCTION:STRack[:STATe]).

The unit depends on CALCulate<n>:UNIT:POWer.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<Level> Range: -130 dBm to 30 dBm
 *RST: -120 dBm
 Default unit: dBm

Example:

CALC:MARK:FUNC:STR:THR -50DBM
 Sets the threshold for signal tracking to -50 dBm.

CALCulate<n>:MARKer<m>:FUNCTION:STRack:TRACe <TraceNumber>

This command defines the trace on which the signal is tracked.

Suffix:**<n>** Selects the measurement window.**<m>** Selects the marker.**Parameters:**

<TraceNumber> Range: 1 to 6
 *RST: 1

Example:

CALC:MARK:FUNC:STR:TRAC 3
 Defines trace 3 as the trace for signal tracking.

9.4.2.2 Automatic Measurement Configuration

The following commands initiate and perform automatic test routines to configure the current measurement.

[SENSe:]ADJust:ALL.....	635
[SENSe:]ADJust:CONFiguration:HYSTeresis:LOWer.....	635
[SENSe:]ADJust:CONFiguration:HYSTeresis:UPPer.....	636
[SENSe:]ADJust:CONFigure:LEVel:DURation.....	636
[SENSe:]ADJust:CONFigure:LEVel:DURation:MODE.....	636
[SENSe:]ADJust:CONFigure:TRIG.....	636
[SENSe:]ADJust:FREQuency.....	637
[SENSe:]ADJust:LEVel.....	637

[SENSe:]ADJust:ALL

This command determines the ideal frequency and level configuration for the current measurement.

Example: ADJ:ALL

[SENSe:]ADJust:CONFiguration:HYSTeresis:LOWer <Threshold>

This command defines a lower threshold the signal must drop below before the reference level is automatically adjusted when the "Auto Level" function is performed.

For more information see [SENSe:]ADJust:LEVel).

Parameters:

<Threshold> Range: 0 to 200
 *RST: +1 dB
 Default unit: dB

Example: SENS:ADJ:CONF:HYST:LOW 2

Example: For an input signal level of currently 20 dBm, the reference level will only be adjusted when the signal level falls below 18 dBm.

[SENSe:]ADJJust:CONFIguration:HYSTeresis:UPPer <Threshold>

This command defines an upper threshold the signal must exceed before the reference level is automatically adjusted when the "Auto Level" function is performed.

For more information see [SENSe:]ADJJust:LEVel).

Parameters:

<Threshold> Range: 0 to 200
 *RST: +1 dB
 Default unit: dB

Example:

SENS:ADJ:CONF:HYST:UPP 2

For an input signal level of currently 20 dBm, the reference level will only be adjusted when the signal level rises above 22 dBm.

[SENSe:]ADJJust:CONFIgure:LEVel:DURation <Duration>

This command defines the duration of the level measurement used to determine the optimal reference level automatically (for SENS:ADJ:LEV ON).

Parameters:

<Duration> <numeric value> in seconds
 Range: 0.001 to 16000.0
 *RST: 0.001
 Default unit: s

Example:

ADJ:CONF:LEV:DUR:5

[SENSe:]ADJJust:CONFIgure:LEVel:DURation:MODE <Mode>

This command selects the way the R&S ESRP determines the length of the measurement that is performed while determining the ideal reference level.

Parameters:

<Mode> **AUTO**
 Automatically determines the measurement length.
 MANual
 Manual definition of the measurement length.
 *RST: AUTO

Example:

ADJ:CONF:LEV:DUR:MODE MAN

Specifies manual definition of the measurement duration.

ADJ:CONF:LEV:DUR:5

Specifies the duration manually.

[SENSe:]ADJJust:CONFIgure:TRIG <State>

This command defines the behaviour of the measurement when adjusting a setting automatically (using SENS:ADJ:LEV ON, for example).

For more information see ["Adjusting settings automatically during triggered measurements"](#) on page 230.

Parameters:

<State>

ON

The measurement for automatic adjustment waits for the trigger.

OFF

The measurement for automatic adjustment is performed immediately, without waiting for a trigger.

*RST: ON

Example:

ADJ:CONF:TRIG OFF

[SENSe:]ADJust:FREQuency

This command defines the center frequency automatically by determining the highest level in the frequency span.

Example:

ADJ:FREQ

[SENSe:]ADJust:LEVel

This command automatically sets the optimal reference level for the current measurement.

You can define a threshold that the signal must exceed before the reference level is adjusted, see [\[SENSe:\]ADJust:CONFIguration:HYSTeresis:UPPer](#) and [\[SENSe:\]ADJust:CONFIguration:HYSTeresis:LOWer](#).

Example:

ADJ:LEV

9.4.2.3 Bandwidth Settings

The following commands select the measurement filter bandwidths and characteristics.

Selecting the Resolution Bandwidth

Commands useful to configure the RBW described elsewhere:

- [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]](#) on page 487
- [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:TYPE](#) on page 487

[SENSe:]BANDwidth BWIDth[:RESolution]:AUTO	637
[SENSe:]BANDwidth BWIDth[:RESolution]:FFT	638
[SENSe:]BANDwidth BWIDth[:RESolution]:RATio	638

[SENSe:]BANDwidth|BWIDth[:RESolution]:AUTO <State>

This command couples and decouples the resolution bandwidth to the span.

The automatic coupling adapts the resolution bandwidth to the current frequency span according to the relationship between frequency span and resolution bandwidth.

Use `[SENSe:]BANDwidth|BWIDth[:RESolution]:RATio` to define the ratio RBW/span.

Parameters:

<State> ON | OFF
 *RST: ON

Example:

`BAND:AUTO OFF`
 Switches off the coupling of the resolution bandwidth to the span.

[SENSe:]BANDwidth|BWIDth[:RESolution]:FFT <FilterMode>

This command defines the filter mode of FFT filters by defining the partial span size. The partial span is the span which is covered by one FFT analysis.

This command is only available for sweep type "FFT".

Parameters:

<FilterMode> **AUTO**
 The firmware determines whether to use wide or narrow filters to obtain the best measurement results.

NARRow

The FFT filters with the smaller partial span are used. This allows you to perform measurements near a carrier with a reduced reference level due to a narrower analog prefilter.

*RST: AUTO

Example:

`BAND:TYPE FFT`
 Select FFT filter.

Example:

`BAND:FFT NARR`
 Select narrow partial span for FFT filter.

[SENSe:]BANDwidth|BWIDth[:RESolution]:RATio <Ratio>

This command defines the ratio between the resolution bandwidth (Hz) and the span (Hz).

Note that the ratio defined with the remote command (RBW/span) is reciprocal to that of the manual operation (span/RBW).

Parameters:

<Ratio> Range: 0.0001 to 1
 *RST: 0.01

Example:

`BAND:RAT 0.01`

Selecting the Video Bandwidth

[SENSe:]BANDwidth BWIDth:VIDeo.....	639
[SENSe:]BANDwidth BWIDth:VIDeo:AUTO.....	639
[SENSe:]BANDwidth BWIDth:VIDeo:RATio.....	639
[SENSe:]BANDwidth BWIDth:VIDeo:TYPE.....	639

[SENSe:]BANDwidth|BWIDth:VIDeo <Bandwidth>

This command defines the video bandwidth. The available video bandwidths are specified in the data sheet.

Parameters:

<Bandwidth> refer to data sheet
 *RST: (AUTO is set to ON)

Example: BAND:VID 10 kHz

[SENSe:]BANDwidth|BWIDth:VIDeo:AUTO <State>

This command couples and decouples the VBW to the RBW.

Use [SENSe:]BANDwidth|BWIDth:VIDeo:RATio to define the ratio VBW/RBW.

Parameters:

<State> ON | OFF
 *RST: ON

Example: BAND:VID:AUTO OFF

[SENSe:]BANDwidth|BWIDth:VIDeo:RATio <Ratio>

This command defines the ratio between video bandwidth (Hz) and resolution bandwidth (Hz).

Note that the ratio defined with the remote command (VBW/RBW) is reciprocal to that of the manual operation (RBW/VBW).

Parameters:

<Ratio> Range: 0.01 to 1000
 *RST: 3

Example: BAND:VID:RAT 3
 Sets the coupling of video bandwidth to video bandwidth =
 3*resolution bandwidth

[SENSe:]BANDwidth|BWIDth:VIDeo:TYPE <Mode>

This command selects the position of the video filter in the signal path.

Changing the video filter position is possible only if the resolution bandwidth is ≤ 100 kHz.

Parameters:

<Mode>

LINear

The video filter is applied in front of the logarithmic amplifier. In linear mode, measurements with a logarithmic level scale result in flatter falling edges compared to logarithmic mode. The reason is the conversion of linear power values into logarithmic level values: if you halve the linear power, the logarithmic level decreases by 3 dB.

LOGarithmic

The video filter is applied after the logarithmic amplifier.

*RST: LINear

Example:

BAND:VID:TYPE LIN

Video filter ahead of the logarithmic amplifier

9.4.2.4 Sweep Configuration

Commands useful to configure the sweep described elsewhere:

- [ABORT](#) on page 458
- [INITiate<n>\[:IMMediate\]](#) on page 459
- [INITiate<n>:CONTInuous](#) on page 459

INITiate<n>:CONMeas	640
[SENSe:]SWEep:COUNT	641
[SENSe:]SWEep:POINts	641
[SENSe:]SWEep:TIME	641
[SENSe:]SWEep:TIME:AUTO	642
[SENSe:]SWEep:TYPE	642
[SENSe:]SWEep:TYPE:USED?	642

INITiate<n>:CONMeas

This command restarts a measurement that has been stopped in single sweep mode.

The measurement is restarted at the first sweep point.

As opposed to [INITiate<n>\[:IMMediate\]](#), this command does not reset traces in maxhold, minhold or average mode. Therefore it can be used to continue measurements using max hold or averaging functions.

In single sweep mode, you can synchronize to the end of the measurement with *OPC, *OPC? or *WAI. In continuous sweep mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous sweep mode in remote control, as results like trace data or markers are only valid after a single sweep end synchronization.

Suffix:

<n>

irrelevant

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
DISP:WIND:TRAC:MODE AVER
Switches on trace averaging.
SWE:COUN 20
Setting the sweep counter to 20 sweeps.
INIT;*WAI
Starts the measurement and waits for the end of the 20 sweeps.
INIT:CONM;*WAI
Continues the measurement (next 20 sequences) and waits for the end.
```

[SENSe:]SWEep:COUNT <NumberSweeps>

This command defines the number of sweeps started with single sweep, which are used for calculating the average or maximum value. If the values 0 or 1 are set, one sweep is performed.

Parameters:

<NumberSweeps> 0 to 32767
 *RST: 0 (GSM: 200, PHN:1)

Example:

```
SWE:COUN 64
Sets the number of sweeps to 64.
INIT:CONT OFF
Switches to single sweep mode.
INIT;*WAI
Starts a sweep and waits for its end.
```

[SENSe:]SWEep:POINTS <NumberPoints>

This command defines the number of measurement points to be collected during one sweep.

Note: For Spurious Emissions measurements the maximum number of sweep points in all ranges is limited to 100001.

Parameters:

<NumberPoints> Range: 101 to 32001
 *RST: 691

Example:

```
SWE:POIN 251
```

[SENSe:]SWEep:TIME <Time>

This command defines the sweep time.

The range depends on the frequency span.

If this command is used in "Spectrum" mode, automatic coupling to resolution bandwidth and video bandwidth is switched off.

Parameters:

<Time> refer to data sheet
 *RST: (automatic)

Example: SWE:TIME 10s

[SENSe:]SWEep:TIME:AUTO <State>

In realtime mode, this command automatically sets the sweep time to 32 ms.

In analyzer mode, this command controls the automatic coupling of the sweep time to the frequency span and bandwidth settings. If [SENSe:]SWEep:TIME is used, automatic coupling is switched off.

Parameters:

<State> ON | OFF
 *RST: ON

Example: SWE:TIME:AUTO ON
 Activates automatic sweep time.

[SENSe:]SWEep:TYPE <Type>

This command selects the sweep type.

Parameters:

<Type> **AUTO**
 Automatically selects the sweep type (FFT or analog frequency sweep).
FFT
 Selects FFT sweeps.
 *RST: AUTO

Example: SWE:TYPE FFT
 Selects FFT sweeps.

[SENSe:]SWEep:TYPE:USED?

This command queries the sweep type if you have turned on automatic selection of the sweep type.

Return values:

<Type> SWE | FFT
SWE
 Normal sweep
FFT
 FFT mode
 *RST: SWE

Example: SWE:TYPE:USED?

Usage: Query only

9.4.2.5 Trigger Configuration

The following commands configure triggered or gated measurements.

Triggering Measurements

TRIGger<n>[:SEquence]:HOLDoff[:TIME].....	643
TRIGger<n>[:SEquence]:IFPower:HOLDoff.....	643
TRIGger<n>[:SEquence]:IFPower:HYSTeresis.....	644
TRIGger<n>[:SEquence]:LEVel[:EXternal].....	644
TRIGger<n>[:SEquence]:LEVel:IFPower.....	644
TRIGger<n>[:SEquence]:LEVel:RFPower.....	645
TRIGger<n>[:SEquence]:LEVel:VIDeo.....	645
TRIGger<n>[:SEquence]:SLOPe.....	645
TRIGger<n>[:SEquence]:SOURce.....	645
TRIGger<n>[:SEquence]:TIME:RINTerval.....	646

TRIGger<n>[:SEQuence]:HOLDoff[:TIME] <Delay>

This command defines the length of the trigger delay.

A negative delay time (pretrigger) can be set in zero span only.

Suffix:

<n> irrelevant

Parameters:

<Delay> Range: zero span: -sweep time (see data sheet) to 30 s;
 span: 0 to 30 s
 *RST: 0 s

Example: TRIG:HOLD 500us

TRIGger<n>[:SEQuence]:IFPower:HOLDoff <Value>

This command sets the holding time before the next IF power trigger event.

Note: Using gating with gate mode "level" (see [TRACe<n>:IQ:EGATe:TYPE](#) on page 700) and an IFP trigger (see [TRIGger<n>\[:SEquence\]:LEVel:IFPower](#) on page 644), the holdoff time for the IFP trigger is ignored for frequency sweep, FFT sweep, zero span and IQ mode measurements.

Suffix:

<n> irrelevant

Parameters:

<Value>	*RST:	150 ns

Example: TRIG:SOUR IFP
Sets the IF power trigger source.
TRIG:IFP:HOLD 200 ns
Sets the holding time to 200 ns.

TRIGger<n>[:SEQuence]:IFPower:HYSTeresis <Value>

This command sets the limit that the hysteresis value for the IF power trigger has to fall below in order to trigger the next measurement.

Suffix:
<n> irrelevant

Parameters:
<Value> *RST: 3 dB

Example: TRIG:SOUR IFP
Sets the IF power trigger source.
TRIG:IFP:HYST 10DB
Sets the hysteresis limit value.

TRIGger<n>[:SEQuence]:LEVel[:EXTernal] <TriggerLevel>

This command sets the level of the external trigger source in Volt.

Suffix:
<n> irrelevant

Parameters:
<TriggerLevel> Range: 0.5 V to 3.5 V
 *RST: 1.4 V

Example: TRIG:LEV 2V

TRIGger<n>[:SEQuence]:LEVel:IFPower <TriggerLevel>

This command defines the power level at the third intermediate frequency that must be exceeded to cause a trigger event. Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

Suffix:
<n> irrelevant

Parameters:
<TriggerLevel> *RST: -20 dBm

Example: TRIG:LEV:IFP -30DBM

TRIGger<n>[:SEquence]:LEVel:RFPower <TriggerLevel>

This command defines the power level at the third intermediate frequency that must be exceeded to cause a trigger event. Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

Suffix:

<n> irrelevant

Parameters:

<TriggerLevel> *RST: -20 dBm

Example: TRIG:LEV:RFP -30dBm

TRIGger<n>[:SEquence]:LEVel:VIDeo <Value>

This command sets the level of the video trigger source.

Suffix:

<n> irrelevant

Parameters:

<Value> 0 to 100 PCT

*RST: 50 PCT

Example: TRIG:LEV:VID 50PCT

TRIGger<n>[:SEquence]:SLOPe <Type>

This command selects the slope of the trigger signal. The selected trigger slope applies to all trigger signal sources.

Suffix:

<n> irrelevant

Parameters:

<Type> POSitive | NEGative

*RST: POSitive

Example: TRIG:SLOP NEG

TRIGger<n>[:SEquence]:SOURce <Source>

This command selects the trigger source.

Note: Using gating with gate mode "level" ([TRACe<n>:IQ:EGATe:TYPE](#) on page 700/ [\[SENSe:\]SWEep:EGATe:TYPE](#)) and an IFP trigger, the holdoff time for the IFP trigger (see [TRIGger<n>\[:SEquence\]:HOLDoff\[:TIME\]](#) on page 643) is ignored for frequency sweep, FFT sweep, zero span and IQ mode measurements.

When triggering or gating is activated, the squelch function is automatically disabled (see [\[SENSe:\]DEMod:SQUelch\[:STAtE\]](#)).

For details on trigger modes refer to "Trg/Gate Source" on page 248.

For details on trigger modes refer to the "Trg/Gate Source" softkey in the base unit description.

Suffix:

<n> irrelevant

Parameters:

<Source> Note that the availability of the trigger source depends on the measurement you are in.

EXternal

Selects an external trigger.

IFPower

Selects the trigger on the second intermediate frequency.

IMMediate

Selects the free run mode (= no trigger).

MASK

Selects the frequency mask trigger.

TDTRigger

Selects the time domain trigger.

TIME

Selects the time trigger.

VIDeo

Selects the video trigger. The video trigger is available for time domain measurements.

*RST: IMMediate

Example:

TRIG:SOUR EXT

Selects the external trigger input as source of the trigger signal

Table 9-20: Assignment of general purpose bits to LVDS connector pins

Bit	LVDS pin
GP0	SDATA4_P - Trigger1
GP1	SDATA4_P - Trigger2
GP2	SDATA0_P - Reserve1
GP3	SDATA4_P - Reserve2
GP4	SDATA0_P - Marker1
GP5	SDATA4_P - Marker2

TRIGger<n>[:SEQuence]:TIME:RINterval <Interval>

This command sets the repetition interval for the time trigger source.

Suffix:

<n> irrelevant

Parameters:

<Interval> 2.0 ms to 5000
 *RST: 1.0

Example:

TRIG:SOUR TIME
 Selects the time trigger input for triggering.
 TRIG:TIME:RINT 50
 The sweep starts every 50 s.

Mode: All

Gated Measurements

[SENSe:]SWEep:EGATe.....	647
[SENSe:]SWEep:EGATe:HOLDoff.....	648
[SENSe:]SWEep:EGATe:LENGth.....	648
[SENSe:]SWEep:EGATe:POLarity.....	648
[SENSe:]SWEep:EGATe:SOURce.....	648
[SENSe:]SWEep:EGATe:TYPE.....	649

[SENSe:]SWEep:EGATe <State>

This command switches on/off the sweep control by an external gate signal. If the external gate is selected the trigger source is automatically switched to EXTeRnal as well.

In case of measurement with external gate, the measured values are recorded as long as the gate is opened. During a sweep the gate can be opened and closed several times. The synchronization mechanisms with *OPC, *OPC? and *WAI remain completely unaffected.

The sweep end is detected when the required number of measurement points (691 in "Spectrum" mode) has been recorded.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

SWE:EGAT ON
 Switches on the external gate mode.
 SWE:EGAT:TYPE EDGE
 Switches on the edge-triggered mode.
 SWE:EGAT:HOLD 100US
 Sets the gate delay to 100 µs.
 SWE:EGAT:LEN 500US
 Sets the gate opening time to 500 µs.
 INIT;*WAI
 Starts a sweep and waits for its end.

[SENSe:]SWEep:EGATe:HOLDoff <DelayTime>

This command defines the delay time between the external gate signal and the continuation of the sweep.

Note: Using gate mode "level" (see [\[SENSe:\]SWEep:EGATe:TYPE](#) on page 649) and an IFP trigger (see [TRIGger<n>\[:SEQuence\]:SOURce](#) on page 645), the hold-off time for the IFP trigger is ignored for frequency sweep, FFT sweep, zero span and IQ mode measurements.

Parameters:

<DelayTime> 0 s to 30 s
 *RST: 0s

Example: SWE:EGAT:HOLD 100us

[SENSe:]SWEep:EGATe:LENGth <TimeInterval>

This command defines a gate length.

Parameters:

<TimeInterval> 125 ns to 30 s
 *RST: 400μs

Example: SWE:EGAT:LENG 10ms

[SENSe:]SWEep:EGATe:POLarity <Polarity>

This command determines the polarity of the external gate signal. The setting applies both to the edge of an edge-triggered signal and the level of a level-triggered signal.

Parameters:

<Polarity> POSitive | NEGative
 *RST: POSitive

Example: SWE:EGAT:POL POS

[SENSe:]SWEep:EGATe:SOURce <Source>

This command selects the signal source for gated measurements.

If an IF power signal is used, the gate is opened as soon as a signal at > -20 dBm is detected within the IF path bandwidth (10 MHz).

For details see the ["Trg/Gate Source"](#) on page 248 softkey.

Parameters:

<Source> EXTernal | IFPower | VIDEo | RFPower | PSEN
 *RST: IFPower

Example: SWE:EGAT:SOUR IFP
 Switches the gate source to IF power.

[SENSe:]SWEep:EGATe:TYPE <Type>

This command sets the type of triggering by the external gate signal.

A delay between applying the gate signal and the start of recording measured values can be defined, see [\[SENSe:\]SWEep:EGATe:HOLDOff](#) on page 648.

Parameters:

<Type>

LEVel | EDGE

LEVel

The gate is level-triggered:

After detection of the gate signal, the gate remains open until the gate signal disappears. The gate opening time cannot be defined with the command [\[SENSe:\]SWEep:EGATe:HOLDOff](#).

Note: Using gating with gate mode "level" and an IFP trigger (see [TRIGger<n>\[:SEQUence\]:SOURce](#) on page 645), the holdoff time for the IFP trigger is ignored for frequency sweep, FFT sweep, zero span and IQ mode measurements.

EDGE

The gate is edge-triggered:

After detection of the set gate signal edge, the gate remains open until the gate delay ([\[SENSe:\]SWEep:EGATe:HOLDOff](#)) has expired.

*RST: EDGE

Example:

SWE:EGAT:TYPE EDGE

9.4.2.6 Vertical Axis Configuration

The following commands configure the characteristics of the vertical diagram axis.

Commands useful to configure the vertical axis described elsewhere:

- [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484
- [INPut:ATTenuation](#) on page 485
- [INPut:COUPling](#) on page 488
- [INPut:GAIN:STATE](#) on page 486
- [INPut:IMPedance](#) on page 486

CALCulate<n>:UNIT:POWer	650
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]	650
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:MODE	650
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RLEVel	651
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RLEVel:OFFSet	651
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RPOSition	651
INPut:ATTenuation:AUTO	652
UNIT<n>:POWer	652

CALCulate<n>:UNIT:POWer <Unit>

This command selects the unit of the y-axis.

The unit applies to all measurement windows.

Suffix:

<n> irrelevant

Parameters:

<Unit> DBM | V | A | W | DBPW | WATT | DBUV | DBMV | VOLT |
DBUA | AMPere
*RST: dBm

Example:

CALC:UNIT:POW DBM
Sets the power unit to dBm.

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe] <Range>

This command defines the display range of the y-axis with logarithmic scaling.

The command works only for a logarithmic scaling. You can select the scaling with [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 484.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> irrelevant

Parameters:

<Range> Range: 10 to 200
*RST: 100
Default unit: dB

Example:

DISP:TRAC:Y 110dB

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE <Mode>

This command selects the type of scaling of the y-axis.

When `SYSTEM:DISPlay:UPDate` is turned off, this command has no immediate effect on the screen.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> irrelevant

Parameters:

<Mode>

ABSolute

absolute scaling of the y-axis

RELative

relative scaling of the y-axis

*RST: ABS

Example:

DISP:TRAC:Y:MODE REL

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel <ReferenceLevel>

This command defines the reference level.

With the reference level offset $\neq 0$, the value range of the reference level is modified by the offset.

The unit depends on the setting defined with [CALCulate<n>:UNIT:POWer](#).

Suffix:

<n>

irrelevant.

<t>

irrelevant

Parameters:

<ReferenceLevel>

The unit is variable.

Range: see datasheet

*RST: -10dBm

Example:

DISP:TRAC:Y:RLEV -60dBm

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet <Value>

This command defines a reference level offset.

Suffix:

<n>

irrelevant.

<t>

irrelevant

Parameters:

<Value>

Range: -200 to 200

*RST: 0

Default unit: dB

Example:

DISP:TRAC:Y:RLEV:OFFS -10dB

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition <Position>

This command defines the position of the reference level on the display grid..

Suffix:

<n>

Selects the measurement window.

<t>

irrelevant

Parameters:

<Position> 0 PCT corresponds to the lower display border, 100% corresponds to the upper display border.

Range: 0 to 100

*RST: 100 PCT = frequency domain, 50 PCT = time domain

Default unit: PCT

Example:

DISP:TRAC:Y:RPOS 50PCT

INPut:ATTenuation:AUTO <State>

This command automatically couples the input attenuation to the reference level (state ON) or switches the input attenuation to manual entry (state OFF).

Parameters:

<State> ON | OFF

*RST: ON

Example:

INP:ATT:AUTO ON

Couples the attenuation set on the attenuator to the reference level.

UNIT<n>:POWer <Unit>

This command selects the default unit.

The unit is the same for all measurement windows.

Parameters:

<Unit> DBM | V | A | W | DBPW | WATT | DBPT | DBUV | DBMV | VOLT | DBUA | AMPere

*RST: DBM

Example:

UNIT:POW DBUV

Sets the power unit to dBm.

Usage:

SCPI confirmed

9.4.3 Analyzing Spectrum Measurements

- [Trace Configuration](#).....652
- [Spectrogram](#).....661
- [Limit Lines](#).....665
- [Markers](#).....666

9.4.3.1 Trace Configuration

Commands to configure trace described elsewhere:

- [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 498

Commands exclusive in spectrum mode

CALCulate<n>:MATH[:EXpression][:DEFine].....	653
CALCulate<n>:MATH:MODE.....	653
CALCulate<n>:MATH:POSition.....	654
CALCulate<n>:MATH:STATe.....	654
DISPlay[:WINDow<n>]:TRACe<t>:MODE:HCONtinuous.....	654
DISPlay[:WINDow<n>]:TRACe<t>[:STATe].....	655
FORMat[:DATA].....	655
FORMat:DEXPort:DSEPARATOR.....	656
MMEMory:STORe<n>:TRACe.....	656
[SENSe:]AVERage<n>:COUNT.....	656
[SENSe:]AVERage<n>[:STATe<Trace>].....	657
[SENSe:]AVERage<n>:TYPE.....	657
[SENSe:][:WINDow:]DETECTOR<trace>[:FUNCTION].....	658
[SENSe:][:WINDow:]DETECTOR<trace>[:FUNCTION]:AUTO.....	658
TRACe<n>:COPY.....	659
TRACe<n>:DATA.....	659
TRACe<n>[:DATA]:MEMory?.....	660
TRACe<n>[:DATA]:X?.....	661

CALCulate<n>:MATH[:EXpression][:DEFine] <Expression>

This command defines the mathematical expression for relating traces to trace1.

Suffix:

<n> irrelevant

Parameters:

<Expression> (TRACe1-TRACe2) | (TRACe1-TRACe3) | (TRACe1-TRACe4) |
(TRACe1-TRACe5) | (TRACe1-TRACe6)
(TRACe1-TRACe2)
Subtracts trace 2 from trace 1.
(TRACe1-TRACe3)
Subtracts trace 3 from trace 1.
(TRACe1-TRACe4)
Subtracts trace 4 from trace 1.
(TRACe1-TRACe5)
Subtracts trace 5 from trace 1.
(TRACe1-TRACe6)
Subtracts trace 6 from trace 1.

Example:

CALC1:MATH (TRACe1 - TRACe2)
Selects the subtraction of trace 2 from trace 1.

CALCulate<n>:MATH:MODE <Method>

This command selects the method for the trace math calculations.

For details see "Trace Math Mode" on page 267.

Suffix:

<n> irrelevant

Parameters:

<Method> LINear | LOGarithmic | POWer

*RST: LOG

Example:

CALC:MATH:MODE LIN

Selects linear averaging for trace math calculations.

CALCulate<n>:MATH:POSITION <Position>

This command defines the position of the result of the trace mathematics. The indication is in % of the screen height, with 100 % corresponding to the upper diagram border.

Suffix:

<n> Selects the measurement window.

Parameters:

<Position> -100PCT to 200PCT

*RST: 50PCT

Example:

CALC:MATH:POS 50PCT

Sets the position to the horizontal diagram center.

CALCulate<n>:MATH:STATe <State>

This command switches the mathematical relation of traces on or off.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CALC:MATH:STAT ON

Switches on the trace mathematics.

DISPlay[:WINDow<n>]:TRACe<t>:MODE:HCONTinuous <State>

This command defines whether traces in Min Hold, Max Hold and Average mode (see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 498) are reset after a parameter is changed.

Normally, the measurement is started anew after parameter changes, before the measurement results are evaluated (e.g. using a marker). In all cases that require a new measurement after parameter changes, the trace is reset automatically to avoid false results (e.g. with span changes). For applications that require no reset after parameter changes, the automatic reset can be switched off.

Suffix:

<n>

window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t>

trace

Parameters:

<State>

ON

The automatic reset is switched off.

OFF

After certain parameter changes the traces are reset.

*RST: OFF

Example:

DISP:WIND:TRAC3:MODE:HCON ON

Switches off the reset function.

DISPlay[:WINDow<n>]:TRACe<t>[:STATe] <State>

This command switches on or off the display of the corresponding trace. The other measurements are not aborted but continue running in the background.

Suffix:

<n>

window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t>

trace

Parameters:

<State>

ON | OFF

*RST: ON for TRACe1, OFF for TRACe2 to 6

Example:

DISP:TRAC3 ON

FORMat[:DATA] <Format>

This command selects the data format for the data transmitted from the R&S ESRP to the controlling computer. It is used for the transmission of trace data. The data format of trace data received by the instrument is automatically recognized, regardless of the format which is programmed.

In the "Spectrum" mode, the format setting REAL, 32 is used for the binary transmission of trace data.

Parameters:

<Format>

ASCii

ASCII data are transmitted in plain text, separated by commas.

REAL

REAL data are transmitted as 32-bit IEEE 754 floating-point numbers in the "definite length block format".

*RST: ASCII

Example:

FORM REAL, 32

FORM ASC

FORMat:DEXPort:DSEParator <Separator>

This command defines which decimal separator (decimal point or comma) is to be used for outputting measurement data to the file in ASCII format. Different languages of evaluation programs (e.g. MS-Excel) can thus be supported.

Parameters:

<Separator> POINT | COMMA
 *RST: (factory setting is POINT; *RST does not affect setting)

Example:

FORM:DEXP:DSEP POIN
 Sets the decimal point as separator.

MMEMory:STORe<n>:TRACe <Trace>, <FileName>

This command stores the selected trace in the specified window in a file with ASCII format. The file format is described in [chapter 4.3.1.6, "ASCII File Export Format"](#), on page 273

The decimal separator (decimal point or comma) for floating-point numerals contained in the file is defined with the `FORMat:DEXPort:DSEParator` command (see [FORMat:DEXPort:DSEParator](#) on page 656).

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

Parameters:

<Trace> 1 to 6
 selected measurement trace
 <FileName> DOS file name
 The file name includes indication of the path and the drive name. Indication of the path complies with DOS conventions.

Example:

MMEM:STOR:TRAC 3, 'TEST.ASC'
 Stores trace 3 in the file TEST.ASC.

[SENSe:]AVERAge<n>:COUNT <NoMeasurements>

This command defines the number of measurements which contribute to the average value.

Note that continuous averaging is performed after the indicated number has been reached in continuous sweep mode.

In single sweep mode, the sweep is stopped as soon as the indicated number of measurements (sweeps) is reached. Synchronization to the end of the indicated number of measurements is only possible in single sweep mode.

This command has the same effect as the `[SENSe<source>:]SWEep:COUNT` command. In both cases, the number of measurements is defined whether the average calculation is active or not.

The number of measurements applies to all traces in the window.

Suffix:

<n> Selects the measurement window.

Parameters:

<NoMeasurements> 0 to 32767

*RST: 0

Example:

SWE:CONT OFF

Switching to single sweep mode.

AVER:COUN 16

Sets the number of measurements to 16.

AVER:STAT ON

Switches on the calculation of average.

INIT;*WAI

Starts the measurement and waits for the end of the 16 sweeps.

[SENSe:]AVERage<n>[:STATe<Trace>] <State>

This command turns averaging for a particular trace in a particular window on and off.

Suffix:

<n> Selects the measurement window.

<Trace> 1...6
Selects the trace.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

AVER OFF

Switches off the average calculation for trace 1.

AVER:STAT3 ON

Switches on the average calculation for trace 3.

[SENSe:]AVERage<n>:TYPE <FunctionType>

This command selects the type of average function.

Suffix:

<n> Selects the measurement window.

Parameters:

<FunctionType>

VIDeo | LINear | POWer

VIDeo

The logarithmic power values are averaged.

LINear

The power values are averaged before they are converted to logarithmic values.

POWer

The power level values are converted into unit Watt prior to averaging. After the averaging, the data is converted back into its original unit.

*RST: VIDeo

Example:

AVER:TYPE LIN

Switches to linear average calculation.

[SENSe:][WINDow:]DETEctor<trace>[:FUNctioN] <Function>

This command selects the detector for the data acquisition in the selected trace.

Suffix:

<trace>

1...4

Selects the trace.

<trace>

1...6

trace

Parameters:

<Function>

APEak | NEGative | POSitive | SAMPlE | RMS | AVERage |
QPEak | CAVERage | CRMS

*RST: APEak

Example:

DET POS

Sets the detector to "positive peak".

[SENSe:][WINDow:]DETEctor<trace>[:FUNctioN]:AUTO <State>

This command either couples the detector to the current trace setting or turns coupling off.

Suffix:

<trace>

1...6

trace

Parameters:

<State>

ON | OFF

*RST: ON

Example:

DET:AUTO OFF

TRACe<n>:COPY <TraceNumber>, <TraceNumber>

This command copies data from one trace to another.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

Parameters:

<TraceNumber>, <TraceNumber> TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6,
TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6
The first argument is the destination of the data to be copied, the second argument describes the source.

Example: TRAC:COPY TRACE1,TRACE2

TRACe<n>:DATA <Trace>, <Data> | <ResultType>

This command queries current trace data and measurement results.

If you use it as a setting command, it transfers trace data from an external source to the R&S ESRP.

The data format depends on FORMat [:DATA].

Parameters:

<Trace> Selects the trace to write data to.
TRACE1 | ... | TRACE6

<Data> Contains the data to transfer.

Query parameters:

<ResultType> Selects the type of result to be returned.
TRACE1 | ... | TRACE6
Returns the trace data for the corresponding trace.
LIST
Returns the results of the peak list evaluation for Spurious Emission and Spectrum Emission Mask measurements.
SPURious
Returns the peak list of Spurious Emission measurements.

Return values:

<TraceData> For more information see tables below.

Example: TRAC TRACE1,+A\$
Transfers trace data ('+A\$') to trace 1.

Example: TRAC? TRACE3
Queries the data of trace 3.

Table 9-21: Return values for TRACE1 to TRACE6 parameter

The trace data consists of a list of power levels that have been measured. The number of power levels in the list depends on the currently selected number of sweep points. The unit depends on the measurement and on the unit you have currently set.

If you are measuring with the auto peak detector, the command returns positive peak values only.

If you are working with the "Real/Imag (I/Q)" result display in I/Q Analyzer mode, the command returns two values for each trace point, first the real parts of the signal, then the imaginary parts ($I_1, \dots, I_n, Q_1, \dots, Q_n$).

For SEM or Spurious Emission measurement results, the x-values should be queried as well, as they are not equi-distant (see `TRACe<n>[:DATA]:X?` on page 661).

Table 9-22: Return values for LIST parameter

For every measurement range you have defined (range 1...n), the command returns eight values in the following order.

<No>,<StartFreq>,<StopFreq>,<RBW>,<PeakFreq>,<PowerAbs>,<PowerRel>,<PowerDelta>,<LimitCheck>,<Unused1>,<Unused2>

- <No>: range number
- <StartFreq>,<StopFreq>: start and stop frequency of the range
- <RBW>: resolution bandwidth
- <PeakFreq>: frequency of the peak in a range
- <PowerAbs>: absolute power of the peak in dBm
- <PowerRel>: power of the peak in relation to the channel power in dBc
- <PowerDelta>: distance from the peak to the limit line in dB, positive values indicate a failed limit check
- <LimitCheck>: state of the limit check (0 = PASS, 1 = FAIL)
- <Unused1>,<Unused2>: reserved (0.0)

TRACe<n>[:DATA]:MEMory? <Trace>,<OffsSwPoint>,<NoOfSwPoints>

This command queries the previously acquired trace data for the specified trace from the memory. As an offset and number of sweep points to be retrieved can be specified, the trace data can be retrieved in smaller portions, making the command faster than the `TRAC:DATA?` command. This is useful if only specific parts of the trace data are of interest.

If no parameters are specified with the command, the entire trace data is retrieved; in this case, the command is identical to `TRAC:DATA? TRACE1`

Suffix:

<n> 1...4
Selects the measurement window.

Query parameters:

<Trace> TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6

<OffsSwPoint> The offset in sweep points related to the start of the measurement at which data retrieval is to start.

<NoOfSwPoints> Number of sweep points to be retrieved from the trace.

Example:

`TRAC:DATA:MEM? TRACE1,25,100`

Retrieves 100 sweep points from trace 1, starting at sweep point 25.

Usage:

Query only

TRACe<n>[:DATA]:X? <TraceNumber>

This command reads the x-values of the selected trace.

Suffix:

<n> 1...4
window; For applications that have only one measurement screen, the suffix is irrelevant.

Query parameters:

<TraceNumber> TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6
Trace number

Example:

TRACe:DATA:X? TRACE1
Returns the x-values for trace 1.

Usage:

Query only

9.4.3.2 Spectrogram**Configuring Spectrograms**

Commands useful to work with markers in the spectrogram described elsewhere:

- [CALCulate<n>:SGRam:CLEAr\[:IMMediate\]](#) on page 467
- [CALCulate<n>:SGRam:HDEPth](#) on page 468
- [CALCulate<n>:SGRam:TSTamp:DATA?](#) on page 469

CALCulate<n>:SGRam:COLor	661
CALCulate<n>:SGRam:CONT	662
CALCulate<n>:SGRam:FRAME:COUNT	662
CALCulate<n>:SGRam:FRAME:SElect	662
CALCulate<n>:SGRam:TSTamp[:STATe]	663
CALCulate<n>:SGRam[:STATe]	663

CALCulate<n>:SGRam:COLor <Color>

This command selects the color scheme of the spectrogram result display.

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<Color> **COLor**
RGB colors
RADar
black - green - white
GRAYscale
black and white
*RST: COLor

Example: `CALC:SGR:COL GRAY`
Selects black and white color scheme.

CALCulate<n>:SGRam:CONT <State>

This command determines whether the results of the last measurement are deleted before starting a new measurement in single sweep mode.

Suffix:
<n> 1...4
Selects the measurement window.

Parameters:
<State> **ON | OFF**
*RST: OFF

Example: `INIT:CONT OFF`
Selects single sweep mode.
`INIT; *WAI`
Starts the sweep and waits for the end of the sweep.
`CALC:SGR:CONT ON`
Repeats the single sweep measurement without deleting the results of the last measurement.

CALCulate<n>:SGRam:FRAME:COUNT <Frames>

This command sets the number of frames to be recorded in a single sweep.

Suffix:
<n> 1...4
Selects the measurement window.

Parameters:
<Frames> The maximum number of frames depends on the `.CALCulate<n>:SGRam:HDEPth` on page 468
Range: 1 to depends on history depth
Increment: 1
*RST: 1

Example: `INIT:CONT OFF`
Selects single sweep mode.
`CALC:SGR:FRAM:COUN 200`
Sets the number of frames to 200.

CALCulate<n>:SGRam:FRAME:SELEct <Frame>

This command selects a specific frame for further analysis. The command is available only if no measurement is running or after a single sweep has ended.

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<Frame> **<frame_number> (if time stamp is off)**
Selects the frame. The range is {0...number of recorded frames-1}

<time> (if time stamp is on)
Time distance in seconds. It selects the frame that is x seconds away from frame 0.

Example:

```
INIT:CONT OFF
Stop the continuous sweep.
CALC:SGR:FRAM:SEL -25
Selects frame number -25.
```

CALCulate<n>:SGRam:TSTamp[:STATe] <State>

This command activates and deactivates the time stamp.

If the time stamp is active, some commands do not address frames as numbers, but as (relative) time values:

- [CALCulate<n>:DELTamarker<m>:SGRam:FRAMe](#) on page 476
- [CALCulate<n>:MARKer<m>:SGRam:FRAMe](#) on page 470
- [CALCulate<n>:SGRam:FRAMe:SElect](#) on page 662

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<State> **ON | OFF**
*RST: OFF

Example:

```
CALC:SGR:TST ON
Activates the time stamp.
```

CALCulate<n>:SGRam[:STATe] <State>

This command turns the spectrogram result display on and off.

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<State> **ON | OFF**
*RST: OFF

Example: `CALC:SGR ON`
 Activates the Spectrogram result display.

Configuring the Color Map

Commands useful to work with markers in the spectrogram described elsewhere:

- `DISPlay:WINDow:SGRam:COLor:DEFault` on page 467
- `DISPlay:WINDow:SGRam:COLor:LOWer` on page 467
- `DISPlay:WINDow:SGRam:COLor:SHAPE` on page 467
- `DISPlay:WINDow:SGRam:COLor:UPPer` on page 467
- `DISPlay:WINDow:SGRam:COLor[:STYLE]` on page 468

Using Markers and Deltamarkers

Positioning Marker

Commands useful to work with markers in the spectrogram described elsewhere:

- `CALCulate<n>:MARKer<m>:MAXimum:LEFT` on page 506
- `CALCulate<n>:MARKer<m>:MAXimum:NEXT` on page 507
- `CALCulate<n>:MARKer<m>:MAXimum[:PEAK]` on page 507
- `CALCulate<n>:MARKer<m>:MAXimum:RIGHT` on page 507
- `CALCulate<n>:MARKer<m>:MINimum:LEFT` on page 508
- `CALCulate<n>:MARKer<m>:MINimum:NEXT` on page 508
- `CALCulate<n>:MARKer<m>:MINimum[:PEAK]` on page 509
- `CALCulate<n>:MARKer<m>:MINimum:RIGHT` on page 509
- `CALCulate<n>:MARKer<m>:SGRam:FRAME` on page 470
- `CALCulate<n>:MARKer<m>:SGRam:SARea` on page 471
- `CALCulate<n>:MARKer<m>:SGRam:XY:MAXimum[:PEAK]` on page 471
- `CALCulate<n>:MARKer<m>:SGRam:XY:MINimum[:PEAK]` on page 472
- `CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:ABOVE` on page 472
- `CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:BELOW` on page 473
- `CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:NEXT` on page 473
- `CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum[:PEAK]` on page 474
- `CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:ABOVE` on page 474
- `CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:BELOW` on page 474
- `CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:NEXT` on page 475
- `CALCulate<n>:MARKer<m>:SGRam:Y:MINimum[:PEAK]` on page 475

Using Deltamarkers

Commands useful to work with markers in the spectrogram described elsewhere:

- [CALCulate<n>:DELTamarker<m>:MAXimum:LEFT](#) on page 512
- [CALCulate<n>:DELTamarker<m>:MAXimum:NEXT](#) on page 512
- [CALCulate<n>:DELTamarker<m>:MAXimum\[:PEAK\]](#) on page 513
- [CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT](#) on page 513
- [CALCulate<n>:DELTamarker<m>:MINimum:LEFT](#) on page 513
- [CALCulate<n>:DELTamarker<m>:MINimum:NEXT](#) on page 514
- [CALCulate<n>:DELTamarker<m>:MINimum\[:PEAK\]](#) on page 514
- [CALCulate<n>:DELTamarker<m>:MINimum:RIGHT](#) on page 514
- [CALCulate<n>:DELTamarker<m>:SGRam:FRAMe](#) on page 476
- [CALCulate<n>:DELTamarker<m>:SGRam:SARea](#) on page 477
- [CALCulate<n>:DELTamarker<m>:SGRam:XY:MAXimum\[:PEAK\]](#) on page 477
- [CALCulate<n>:DELTamarker<m>:SGRam:XY:MINimum\[:PEAK\]](#) on page 478
- [CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:ABOVe](#) on page 478
- [CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:BELow](#) on page 479
- [CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:NEXT](#) on page 479
- [CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum\[:PEAK\]](#) on page 480
- [CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:ABOVe](#) on page 480
- [CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:BELow](#) on page 480
- [CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:NEXT](#) on page 481
- [CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum\[:PEAK\]](#) on page 481

9.4.3.3 Limit Lines

Using Display Lines

For commands that control display lines see [chapter 9.3.8.1, "Using Display Lines"](#), on page 517.

Using Frequency Lines

For commands that control frequency lines see [chapter 9.3.8.2, "Using Frequency Lines"](#), on page 518.

Using Time Lines

CALCulate<n>:TLINe<Line>	666
CALCulate<n>:TLINe<Line>:STATe	666

CALCulate<n>:TLINe<Line> <Time>

This command defines the position of a time line.

Suffix:

<n> irrelevant

<Line> 1 | 2
Selects the time line.

Parameters:

<Time> Range: 0 to 1000
*RST: (STATe to OFF)
Default unit: s

Example: CALC:TLIN 10ms

CALCulate<n>:TLINe<Line>:STATe <State>

This command turns a time line on and off.

Suffix:

<n> irrelevant

<Line> 1 | 2
Selects the time line.

Parameters:

<State> ON | OFF
*RST: OFF

Example: CALC:TLIN2:STAT ON

Using Limit Lines

For commands that control limit lines see [chapter 9.3.8.3, "Using Limit Lines"](#), on page 519.

9.4.3.4 Markers

- [Using Markers](#).....666
- [Using Delta Markers](#).....671
- [Controlling Fixed Reference Markers](#).....672
- [Using Marker Functions](#).....674

Using Markers

Commands useful to control markers described elsewhere:

- [CALCulate<n>:MARKer<m>:AOFF](#) on page 506
- [CALCulate<n>:MARKer<m>:FUNCTION:CENTer](#) on page 503
- [CALCulate<n>:MARKer<m>:FUNCTION:CSTep](#) on page 503
- [CALCulate<n>:MARKer<m>:FUNCTION:ZOOM](#) on page 504

- `CALCulate<n>:MARKer<m>:MAXimum:LEFT` on page 506
- `CALCulate<n>:MARKer<m>:MAXimum:NEXT` on page 507
- `CALCulate<n>:MARKer<m>:MAXimum[:PEAK]` on page 507
- `CALCulate<n>:MARKer<m>:MAXimum:RIGHT` on page 507
- `CALCulate<n>:MARKer<m>:MINimum:LEFT` on page 508
- `CALCulate<n>:MARKer<m>:MINimum:NEXT` on page 508
- `CALCulate<n>:MARKer<m>:MINimum[:PEAK]` on page 509
- `CALCulate<n>:MARKer<m>:MINimum:RIGHT` on page 509
- `CALCulate<n>:MARKer<m>[:STATe]` on page 509
- `CALCulate<n>:MARKer<m>:TRACe` on page 510
- `CALCulate<n>:MARKer<m>:X` on page 510
- `CALCulate<n>:MARKer<m>:X:SLIMits:LEFT` on page 504
- `CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT` on page 505
- `CALCulate<n>:MARKer<m>:X:SLIMits[:STATe]` on page 505
- `CALCulate<n>:MARKer<m>:Y` on page 510

<code>CALCulate<n>:MARKer<m>:FUNCTION:REFERENCE</code>	667
<code>CALCulate<n>:MARKer<m>:LOEXclude</code>	667
<code>CALCulate<n>:MARKer<m>:MAXimum:AUTO</code>	668
<code>CALCulate<n>:MARKer<m>:MINimum:AUTO</code>	668
<code>CALCulate<n>:MARKer<m>:X:SLIMits:ZOOM</code>	669
<code>CALCulate<n>:MARKer<m>:X:SSIZe</code>	669
<code>CALCulate<n>:MARKer<m>:Y:PERCent</code>	669
<code>CALCulate<n>:THReshold</code>	670
<code>CALCulate<n>:THReshold:STATe</code>	670
<code>DISPlay:MTABle</code>	670

`CALCulate<n>:MARKer<m>:FUNCTION:REFERENCE`

This command sets the reference level to the power measured by a marker.

If you use the command in combination with a delta marker, that delta marker is turned into a normal marker.

Suffix:

`<n>` Selects the measurement window.

`<m>` Selects the marker.

Example:

`CALC:MARK2:FUNC:REF`

Sets the reference level to the level of marker 2.

`CALCulate<n>:MARKer<m>:LOEXclude <State>`

This command turns the local oscillator suppression during a peak search on or off.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<State> ON | OFF

*RST: ON

Example:

CALC:MARK:LOEX ON

CALCulate<n>:MARKer<m>:MAXimum:AUTO <State>

This command turns an automatic marker peak search for a trace maximum on and off. The command performs the peak search after each sweep.

An automatic peak search may be used during adjustments of a device under test to keep track of the actual peak marker position and level.

If no maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CALC:MARK:MAX:AUTO ON

Activates the automatic peak search function for marker 1 at the end of each particular sweep.

Usage:

Event

CALCulate<n>:MARKer<m>:MINimum:AUTO <State>

This command turns an automatic marker peak search for a trace maximum on and off. The command performs the peak search after each sweep.

An automatic peak search may be used during adjustments of a device under test to keep track of the actual peak marker position and level.

If no maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

*RST: OFF

Example: `CALC:MARK:MIN:AUTO ON`
 Activates the automatic minimum value search function for marker 1 at the end of each particular sweep.

CALCulate<n>:MARKer<m>:X:SLIMits:ZOOM <State>

This command sets the limits of the marker search range to the zoom area.

Note: The function is only available if the search limit for marker and delta marker is switched on (see `CALCulate<n>:MARKer<m>:X:SLIMits[:STATe]`).

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example: `CALC:MARK:X:SLIM:ZOOM ON`
 Switches the search limit function on.
`CALC:MARK:X:SLIM:RIGH 20MHz`
 Sets the right limit of the search range to 20 MHz.

CALCulate<n>:MARKer<m>:X:SSIZe <StepSize>

This command defines the step size of the rotary knob for marker or delta marker value changes. It only takes effect in manual operation.

The marker step size is unavailable for statistical measurements.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<StepSize>

STANdard

step size corresponds to space between two pixels

POINTs

step size corresponds to space between two measured values

*RST: POINTs

Example: `CALC:MARK:X:SSIZ STAN`
 Sets the measured value step size.

CALCulate<n>:MARKer<m>:Y:PERCent <Probability>

This command positions the selected marker to the given probability.

If you use the command in combination with a delta marker, that delta marker is turned into a normal marker.

Note: The command is only available for CCDF measurements. You can query the associated level value with `CALCulate<n>:MARKer<m>:X`.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<Probability> Range: 0 to 100
Default unit: PCT

Example: `CALC1:MARK:Y:PERC 95PCT`
Positions marker 1 to a probability of 95 %.

CALCulate<n>:THReshold <Threshold>

This command defines a threshold value for the marker peak search.

A threshold line is automatically turned on.

Suffix:

<n> irrelevant

Parameters:

<Threshold> The unit depends on `CALCulate<n>:UNIT:POWer`.
*RST: (STATe to OFF)

Example: `CALC:THR -82DBM`
Sets the threshold value to -82 dBm.

CALCulate<n>:THReshold:STATe <State>

This command turns the threshold line for the marker peak search on and off.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF
*RST: OFF

Example: `CALC:THR:STAT ON`
Switches on the threshold line.

DISPlay:MTABLE <DisplayMode>

This command turns the marker table on and off.

Parameters:

<DisplayMode>

ON

Marker table is displayed.

OFF

Marker table is not displayed.

AUTO

Marker table is only displayed if 2 or more markers are active.

*RST: AUTO

Example:

To activate the table display:

DISP:MTAB ON

To query the current state of the marker table display:

DISP:MTAB?

Using Delta Markers

Commands useful to control delta markers described elsewhere:

- [CALCulate<n>:DELTamarker<m>:AOFF](#) on page 512
 - [CALCulate<n>:DELTamarker<m>:LINK](#) on page 512
 - [CALCulate<n>:DELTamarker<m>:MAXimum:LEFT](#) on page 512
 - [CALCulate<n>:DELTamarker<m>:MAXimum:NEXT](#) on page 512
 - [CALCulate<n>:DELTamarker<m>:MAXimum\[:PEAK\]](#) on page 513
 - [CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT](#) on page 513
 - [CALCulate<n>:DELTamarker<m>:MINimum:LEFT](#) on page 513
 - [CALCulate<n>:DELTamarker<m>:MINimum:NEXT](#) on page 514
 - [CALCulate<n>:DELTamarker<m>:MINimum\[:PEAK\]](#) on page 514
 - [CALCulate<n>:DELTamarker<m>:MINimum:RIGHT](#) on page 514
 - [CALCulate<n>:DELTamarker<m>:MODE](#) on page 515
 - [CALCulate<n>:DELTamarker<m>\[:STATe\]](#) on page 515
 - [CALCulate<n>:DELTamarker<m>:TRACe](#) on page 515
 - [CALCulate<n>:DELTamarker<m>:X](#) on page 516
 - [CALCulate<n>:DELTamarker<m>:X:RELative?](#) on page 516
 - [CALCulate<n>:DELTamarker<m>:Y](#) on page 516
- [CALCulate<n>:DELTamarker<m>:MREF](#)..... 671

CALCulate<n>:DELTamarker<m>:MREF <RefMarkerNo>

This command defines the reference marker for a delta marker other than marker 1.

The reference may be another marker or the fixed reference.

Suffix:

<n>

Selects the measurement window.

<m>

Selects the marker.

Parameters:

<RefMarkerNo> **1 ... 16**
 Selects markers 1 to 16 as the reference.

FIXed

Selects the fixed reference as the reference.

Example:

`CALC:DELT3:MREF 2`
 Specifies that the values of delta marker 3 are relative to marker 2.

Controlling Fixed Reference Markers

<code>CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:MAXimum[:PEAK]</code>	672
<code>CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:X</code>	672
<code>CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:Y</code>	673
<code>CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:Y:OFFSet</code>	673
<code>CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed[:STATe]</code>	674

CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:MAXimum[:PEAK]

This command moves the fixed reference marker to the peak power.

When measuring the phase noise, the command defines a new reference point level for delta marker 2.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

`CALC:DELT:FUNC:FIX:RPO:MAX`
 Sets the reference point level for delta markers to the peak of the selected trace.

Usage:

Event

CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:X <Reference>

This command defines the horizontal position of the fixed delta marker reference point. The coordinates of the reference may be anywhere in the diagram.

When measuring the phase noise, the command defines the frequency reference for delta marker 2.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<Reference>

Numeric value that defines the horizontal position of the reference.

For frequency domain measurements, it is a frequency in Hz.
For time domain measurements, it is a point in time in s.

*RST: Fixed reference: OFF

Example:

CALC:DELT:FUNC:FIX:RPO:X 128 MHz

Sets the frequency reference to 128 MHz.

CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:Y <RefPointLevel>

This command defines the vertical position of the fixed delta marker reference point. The coordinates of the reference may be anywhere in the diagram.

When measuring the phase noise, the command defines the level reference for delta marker 2.

Suffix:

<n>

Selects the measurement window.

<m>

Selects the marker.

Parameters:

<RefPointLevel>

Numeric value that defines the vertical position of the reference. The unit and value range is variable.

*RST: Fixed reference: OFF

Example:

CALC:DELT:FUNC:FIX:RPO:Y -10dBm

Sets the reference point level for delta markers to -10 dBm.

CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:Y:OFFSet <Offset>

This command defines a level offset for the fixed delta marker reference point.

When measuring the phase noise, the command defines an additional level offset for delta marker 2.

Suffix:

<n>

Selects the measurement window.

<m>

Selects the marker.

Parameters:

<Offset>

Level offset that is added to the display of all delta markers.

*RST: 0 dB

Example:

CALC:DELT:FUNC:FIX:RPO:Y:OFFS 10dB

Sets the level offset for the measurement with fixed reference value or the phase-noise measurement to 10 dB.

CALCulate<n>:DELTaMarker<m>:FUNCTION:FIXed[:STATe] <State>

This command switches the relative measurement to a fixed reference value on or off. Marker 1 is activated previously and a peak search is performed, if necessary. If marker 1 is activated, its position becomes the reference point for the measurement. The reference point can then be modified with the **CALCulate<n>:DELTaMarker<m>:FUNCTION:FIXed:RPOint:X** commands and **CALCulate<n>:DELTaMarker<m>:FUNCTION:FIXed:RPOint:Y** independently of the position of marker 1 and of a trace. It applies to all delta markers as long as the function is active.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:DELT:FUNC:FIX ON
 Switches on the measurement with fixed reference value for all delta markers.
CALC:DELT:FUNC:FIX:RPO:X 128 MHZ
 Sets the frequency reference to 128 MHz.
CALC:DELT:FUNC:FIX:RPO:Y 30 DBM
 Sets the reference level to +30 dBm.

Using Marker Functions

The following commands control the measurements available as marker functions.

• Signal Count	674
• Noise Density	676
• Phase Noise	677
• Marker Demodulation	678
• n dB Down Marker	680
• Marker Peak List	683
• Band Power	687

Signal Count

CALCulate<n>:MARKer<m>:COUNT	674
CALCulate<n>:MARKer<m>:COUNT:FREQuency?	675
CALCulate<n>:MARKer<m>:COUNT:RESolution	676

CALCulate<n>:MARKer<m>:COUNT <State>

This command turns the frequency counter at the marker position for marker 1 on and off.

The count result is queried with **CALCulate<n>:MARKer<m>:COUNT:FREQuency?**.

The frequency counter works for one marker only. If you perform a frequency count with another marker, the R&S ESRP deactivates the frequency count of the first marker.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.
 <m> irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK ON
Switches on marker 1.
CALC:MARK:COUN ON
Switches on the frequency counter for marker 1.
INIT; *WAI
Starts a sweep and waits for the end.
CALC:MARK:COUN:FREQ?
Outputs the measured value.
```

CALCulate<n>:MARKer<m>:COUNT:FREQuency?

This command queries the result of the frequency counter for marker 1.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.
 <m> irrelevant

Return values:

<Frequency> Frequency at the marker position.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK ON
Switches on marker 2.
CALC:MARK:COUN ON
Activates the frequency counter for marker 1.
INIT; *WAI
Starts a sweep and waits for the end.
CALC:MARK:COUN:FREQ?
Outputs the measured value of marker 1.
```

Usage: Query only

CALCulate<n>:MARKer<m>:COUNT:RESolution <Resolution>

This command specifies the resolution of the frequency counter (marker 1).

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<Resolution> 0.001 | 0.01 | 0.1 | 1 | 10 | 100 | 1000 | 10000 Hz
 *RST: 0.1 Hz

Example: CALC:MARK:COUN:RES 1kHz
 Sets the resolution of the frequency counter to 1 kHz.

Noise Density

CALCulate<n>:MARKer<m>:FUNCTION:NOISe:RESult.....676
 CALCulate<n>:MARKer<m>:FUNCTION:NOISe[:STATe].....676

CALCulate<n>:MARKer<m>:FUNCTION:NOISe:RESult

This command queries the result of the noise measurement.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example: INIT:CONT OFF
 Switches to single sweep mode.
 CALC:MARK2 ON
 Switches on marker 2.
 CALC:MARK:FUNC:NOIS ON
 Switches on noise measurement.
 INIT; *WAI
 Starts a sweep and waits for the end.
 CALC:MARK2:NOIS:RES?
 Outputs the noise result of marker 2.

CALCulate<n>:MARKer<m>:FUNCTION:NOISe[:STATe] <State>

This command turns the noise measurement for all markers on or off.

If on, the R&S ESRP measures the noise power density at the marker position.

The result can be queried with `CALCulate<n>:MARKer<m>:FUNCTION:NOISe:RESult`.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF
*RST: OFF

Example: `CALC:MARK:FUNC:NOIS ON`
Switches on the noise measurement.

Phase Noise

`CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise:AUTO`..... 677
`CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise:RESult?`..... 677
`CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise[:STATe]`..... 678

CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise:AUTO <State>

This command turns an automatic peak search for the fixed reference marker at the end of a sweep on and off.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<State> ON | OFF
*RST: OFF

Example: `CALC:DELT:FUNC:PNO:AUTO ON`
Activates an automatic peak search for the reference marker in a phase-noise measurement.

CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise:RESult?

This command queries the result of the phase noise measurement.

If necessary, the command activates the measurement first..

Suffix:

<n> Selects the measurement window.

<m> 2
Marker 2 is always the deltamarker for phase noise measurements.

Example: `CALC:DELT2:FUNC:PNO:RES?`
Outputs the result of phase-noise measurement of the delta-marker 2.

Usage: Query only

CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise[:STATe] <State>

This command turns the phase noise measurement at the delta marker position on and off.

The correction values for the bandwidth and the log amplifier are taken into account in the measurement.

The reference marker for phase noise measurements is either a normal marker or a fixed reference. If necessary, the command turns on the reference marker

A fixed reference point can be modified with the `CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:X` and `CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:Y` commands independent of the position of marker 1 and of a trace.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Note: marker 2 is always the deltamarker for phase noise measurement results.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

`CALC:DELT:FUNC:PNO ON`

Switches on the phase-noise measurement with all delta markers.

`CALC:DELT:FUNC:FIX:RPO:X 128 MHZ`

Sets the frequency reference to 128 MHz.

`CALC:DELT:FUNC:FIX:RPO:Y 30 DBM`

Sets the reference level to +30 dBm

Marker Demodulation

Commands useful to configure the marker demodulation described elsewhere:

- `[SENSe:]DEMod:SQUelch:LEVel` on page 466
- `[SENSe:]DEMod:SQUelch[:STATe]` on page 466

`CALCulate<n>:MARKer<m>:FUNCTION:DEModulation:CONTInuous`..... 678

`CALCulate<n>:MARKer<m>:FUNCTION:DEModulation:HOLDoff`..... 679

`CALCulate<n>:MARKer<m>:FUNCTION:DEModulation:SElect`..... 679

`CALCulate<n>:MARKer<m>:FUNCTION:DEModulation[:STATe]`..... 679

CALCulate<n>:MARKer<m>:FUNCTION:DEModulation:CONTInuous <State>

This command turns continuous demodulation of the signal at the marker position in the frequency domain on and off.

Thus acoustic monitoring of the signals can be performed.

In the time domain continuous demodulation is always on.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: CALC2:MARK3:FUNC:DEM:CONT ON
 Switches on the continuous ' demodulation.

CALCulate<n>:MARKer<m>:FUNCTion:DEModulation:HOLDoff <Duration>

This command defines for how long the the signal at the marker position is demodulated.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<Duration> Range: 10 ms to 1000 s
 *RST: Marker demodulation = OFF

Example: CALC:MARK:FUNC:DEM:HOLD 3s

CALCulate<n>:MARKer<m>:FUNCTion:DEModulation:SElect <DemodMode>

This command selects the demodulation mode for the audio demodulator.

Suffix:

<n> Selects the measurement window.
 <m> irrelevant

Parameters:

<DemodMode> AM | FM
 *RST: AM

Example: CALC:MARK:FUNC:DEM:SEL FM

CALCulate<n>:MARKer<m>:FUNCTion:DEModulation[:STATE] <State>

This command turns the audio demodulator on and off when the measurement reaches a marker position.

In the frequency domain, the hold time can be defined at the corresponding marker position with [CALCulate<n>:MARKer<m>:FUNCTion:DEModulation:HOLDoff](#).

In the time domain continuous demodulation is always on.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CALC:MARK3:FUNC:DEM ON

Switches on the demodulation for marker 3.

n dB Down Marker

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown.....	680
CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:FREQuency?.....	680
CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:QFACTOR.....	681
CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:RESult?.....	681
CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:STATe.....	682
CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:TIME?.....	682

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown <Distance>

This command defines the distance of the n dB down markers to the reference marker.

The temporary markers T1 and T2 are positioned n dB below the active reference marker. The frequency and time position of these markers can be queried with

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:FREQuency? and
CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:TIME?. The bandwidth between the markers can be queried with CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:RESult?.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<Distance> Distance of the temporary markers to the reference marker in dB.

*RST: 6dB

Example:

CALC:MARK:FUNC:NDBD 3dB

Sets the level spacing to 3 dB.

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:FREQuency?

This command queries the position of the n dB down markers on the x-axis when measuring in the frequency domain.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Return values:

<Frequency>

<frequency 1>

absolute frequency of the n dB marker to the left of the reference marker in Hz

<frequency 2>

absolute frequency of the n dB marker to the right of the reference marker in Hz

Example:

```
INIT:CONT OFF
```

Switches to single sweep mode.

```
CALC:MARK:FUNC:NDBD ON
```

Switches on the n dB down function.

```
INIT;*WAI
```

Starts a sweep and waits for the end.

```
CALC:MARK:FUNC:NDBD:FREQ?
```

Outputs the frequencies of the temporary markers.

Usage:

Query only

CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:QFACtor

This command queries the Q factor (quality) of n dB down measurements.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

```
INIT:CONT OFF
```

Switches to single sweep mode.

```
CALC:MARK:FUNC:NDBD ON
```

Switches on the n dB down function.

```
INIT;*WAI
```

Starts a sweep and waits for the end.

```
CALC:MARK:FUNC:NDBD:QFAC?
```

Queries the Q factor of the measured bandwidth.

CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:RESult?

This command queries the distance of the n dB down markers from each other.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<Distance>

The result depends on the span.

In case of frequency domain measurements, the command returns the bandwidth between the two n dB down markers in Hz. In case of time domain measurements, the command returns the pulse width between the two n dB down markers in seconds.

Example:

INIT:CONT OFF

Switches to single sweep mode.

CALC:MARK:FUNC:NDBD ON

Switches on the n dB down function.

INIT;*WAI

Starts a sweep and waits for the end.

CALC:MARK:FUNC:NDBD:RES?

Outputs the measured value.

Usage:

Query only

CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:STATe <State>

This command turns the n dB Down marker function on and off.

Suffix:

<n>

Selects the measurement window.

<m>

irrelevant

Parameters:

<State>

ON | OFF

*RST: OFF

Example:

CALC:MARK:FUNC:NDBD:STAT ON

Switches on the "N dB Down" function.

CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:TIME?

This command queries the position of the n dB down markers on the x-axis when measuring in the time domain.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n>

Selects the measurement window.

<m>

irrelevant

Return values:

<Time>

<time 1>

absolute position in time of the n dB marker to the left of the reference marker in seconds

<time 2>

absolute position in time of the n dB marker to the right of the reference marker in seconds

Example:

INIT:CONT OFF

Switches to single sweep mode

CALC:MARK:FUNC:NDBD ON

Switches on the n dB down function.

INIT;*WAI

Starts a sweep and waits for the end.

CALC:MARK:FUNC:NDBD:TIME?

Outputs the time values of the temporary markers.

Usage:

Query only

Marker Peak List

Commands useful to perform a peak search described elsewhere:

- [CALCulate<n>:MARKer<m>:PEXCursion](#) on page 495
- [MMEMorY:STORe:PEAKlist](#) on page 498

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:ANN:LAB:STAT	683
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:COUNt?	684
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks[:IMMediate]	684
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:LIST:SIZE	685
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SEAR:AUTO	685
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SORT	686
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:STAT	686
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:X	686
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:Y?	687

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:ANN:LAB:STAT <State>

This command turns labels for peaks found during a peak search on and off.

The labels correspond to the marker number in the marker peak list.

Suffix:

<n>

Selects the measurement window.

<m>

Selects the marker.

Parameters:

<State>

ON | OFF

*RST: ON

Example:

CALC:MARK:FUNC:FPE:ANN:LAB:STAT OFF

Removes the peak labels from the diagram

CALCulate<n>:MARKer<m>:FUNction:FPEaks:COUNT?

This command queries the number of peaks that have been found during a peak search.

Suffix:

<n> irrelevant
 <m> Selects the marker.

Return values:

<NumberOfPeaks>

Example:

CALC:MARK:FUNC:FPE 3
 Searches the 3 highest maxima for trace 1
 CALC:MARK:FUNC:FPE:COUNT?
 Queries the number of maxima found

Usage:

Query only

CALCulate<n>:MARKer<m>:FUNction:FPEaks[:IMMediate] <NoMaxima>

This command initiates a peak search.

The results can be queried with:

- Position of a peak on the x-axis: CALCulate<n>:MARKer<m>:FUNction:FPEaks:X
- Position of a peak on the y-axis: CALCulate<n>:MARKer<m>:FUNction:FPEaks:Y?
- Number of peaks in the list: CALCulate<n>:MARKer<m>:FUNction:FPEaks:COUNT?

The order the results are returned in is selected with CALCulate<n>:MARKer<m>:FUNction:FPEaks:SORT.

The trace the peaks search is performed on is selected with CALCulate<n>:MARKer<m>:TRACe.

Number of found maxima

The number of maxima found depends on the waveform and value set for the Peak Excursion parameter (see CALCulate<n>:MARKer<m>:PEXCursion), however, a maximum number of 200 maxima are determined. Only the signals which exceed their surrounding values at least by the value indicated by the peak excursion parameter are recognized as maxima. Therefore, the number of maxima found is not automatically the same as the number of maxima desired.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<NoMaxima> Range: 1 to 200

Example:

```
INIT:CONT OFF
Switches to single sweep mode
INIT;*WAI
Starts measurement and synchronizes to end
CALC:MARK:TRAC 1
Sets marker 1 to trace 1
CALC:MARK:FUNC:FPE:SORT X
Sets the sort mode to increasing X values
CALC:MARK:FUNC:FPE 3;*WAI
Searches the 3 highest maxima for trace 1 and synchronizes to end
CALC:MARK:FUNC:FPE:COUN?
Queries the number of maxima found
CALC:MARK:FUNC:FPE:Y?
Queries the level of maxima found
CALC:MARK:FUNC:FPE:X?
Queries the frequencies (span <> 0) or time (span = 0) of maxima found.
```

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:LIST:SIZE <MaxNoPeaks>

This command defines the maximum number of peaks the marker peak list may contain.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<MaxNoPeaks> Maximum number of peaks to be determined.
 *RST: 50

Example:

```
CALC:MARK:FUNC:FPE:LIST:SIZE 10
```

The marker peak list will contain a maximum of 10 peaks.

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:SEAR:AUTO <State>

This command turns the marker peak search on and off.

This command is retained for compatibility with R&S FSP only. Use [CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:STAT](#) instead.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: `CALC:MARK:FUNC:FPE:SEAR:AUTO ON`
Activates marker peak search

CALCulate<n>:MARKer<m>:FUNction:FPEaks:SORT <SortMode>

This command selects the order in which the results of a peak search are returned.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<SortMode> **X**
Sorts the peaks according to increasing position on the x-axis.
Y
Sorts the peaks according to decreasing position on the y-axis.

Example: `CALC:MARK:FUNC:FPE:SORT Y`
Sets the sort mode to decreasing y values

CALCulate<n>:MARKer<m>:FUNction:FPEaks:STAT <State>

This command turns a peak search on and off.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF
*RST: OFF

Example: `CALC:MARK:FUNC:FPE:STAT ON`
Activates marker peak search

CALCulate<n>:MARKer<m>:FUNction:FPEaks:X

This command queries the position of the peaks on the x-axis.

The order depends on the sort order that has been set with `CALCulate<n>:MARKer<m>:FUNction:FPEaks:SORT` on page 686.

The number of peaks on the number that has been set with `CALCulate<n>:MARKer<m>:FUNction:FPEaks:COUNt?`.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Return values:

<PeakPosition>

Position of the peaks on the x-axis. The unit depends on the measurement.

Example:

```
CALC:MARK:FUNC:FPE:SORT Y
```

Sets the sort mode to decreasing y values

```
CALC:MARK:FUNC:FPE 3
```

Searches the 3 highest maxima for trace 1

```
CALC:MARK:FUNC:FPE:COUN?
```

Queries the number of maxima found

```
CALC:MARK:FUNC:FPE:X?
```

Queries the frequencies (span <> 0) or. time (span = 0) of the maxima found

```
107.5E6,153.8E6,187.9E6
```

frequencies in increasing order

```
2.05E-3,2.37E-3, 3.71e-3
```

times in increasing order

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:Y?

This command queries the position of the peaks on the y-axis.

The order depends on the sort order that has been set with [CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SORT](#) on page 686.

The number of peaks on the number that has been set with [CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:COUNT?](#).

Suffix:

<n>

Selects the measurement window.

<m>

Selects the marker.

Return values:

<PeakPosition>

Position of the peaks on the y-axis. The unit depends on the measurement.

Example:

```
CALC:MARK:FUNC:FPE:SORT Y
```

Sets the sort mode to decreasing y values

```
CALC:MARK:FUNC:FPE 3
```

Searches the 3 highest maxima for trace 1

```
CALC:MARK:FUNC:FPE:COUN?
```

Queries the number of maxima found

```
CALC:MARK:FUNC:FPE:Y?
```

Queries the levels of the maxima found

Usage:

Query only

Band Power

CALCulate<n>:MARKer<m>:FUNCTION:BPOwer:MODE	688
CALCulate<n>:MARKer<m>:FUNCTION:BPOwer:RESult?	688
CALCulate<n>:MARKer<m>:FUNCTION:BPOwer:SPAN	688

CALCulate<n>:MARKer<m>:FUNCTION:BPOWer[:STATe].....	689
CALCulate<n>:DELTaMarker<m>:FUNCTION:BPOWer:MODE.....	689
CALCulate<n>:DELTaMarker<m>:FUNCTION:BPOWer:RESult?.....	689
CALCulate<n>:DELTaMarker<m>:FUNCTION:BPOWer:SPAN.....	690
CALCulate<n>:DELTaMarker<m>:FUNCTION:BPOWer[:STATe].....	690

CALCulate<n>:MARKer<m>:FUNCTION:BPOWer:MODE <Mode>

This command selects the way the results for a band power marker are displayed.

Suffix:

<n>	irrelevant
<m>	irrelevant

Parameters:

<Mode>	POWer Result is displayed as a power in dBm.
	DENSity Result is displayed as a density in dBm/Hz.
*RST:	POW

Example: `CALC:MARK:FUNC:BPOW:MODE DENS`

CALCulate<n>:MARKer<m>:FUNCTION:BPOWer:RESult?

This command queries the results of the band power measurement.

Suffix:

<n>	irrelevant
<m>	irrelevant

Return values:

<Power>	Signal power over the marker bandwidth.

Example:

Activate the band power marker:
`CALC:MARK:FUNC:BPOW:STAT ON`
 Select the density mode for the result:
`CALC:MARK:FUNC:BPOW:MODE DENS`
 Query the result:
`CALC:MARK:FUNC:BPOW:RES?`
 Response:
 20dBm/Hz

Usage: Query only

**CALCulate<n>:MARKer<m>:FUNCTION:BPOWer:SPAN **

This command defines the bandwidth around the marker position.

Suffix:

<n>	irrelevant

<m> irrelevant

Parameters:

 Numeric value that defines the span in Hz.
The maximum span depends on the marker position and R&S ESRP model.
*RST: 5% of current span

Example: CALC:MARK:FUNC:BPOW:SPAN 20

CALCulate<n>:MARKer<m>:FUNCTION:BPOWer[:STATe] <State>

This command turns markers for band power measurements on and off.

If necessary, the command also turns on a marker. If a marker is already on, the currently active marker is used as the band power marker (all other marker functions for this marker are deactivated).

For details see ["Performing Band Power Measurements"](#) on page 300.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<State> **ON | OFF**
*RST: OFF

Example: CALC:MARK:FUNC:BPOW:STAT ON

CALCulate<n>:DELTaMarker<m>:FUNCTION:BPOWer:MODE <Mode>

This command selects the way the results for a band power delta marker are displayed.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<Mode> **POWER**
Result is displayed as a power in dBm.
DENSITY
Result is displayed as a density in dBm/Hz.
*RST: POW

Example: CALC:DELT:BPOW:MODE DENS

CALCulate<n>:DELTaMarker<m>:FUNCTION:BPOWer:RESult?

This command queries the results of the band power measurement.

Suffix:

<n> irrelevant

<m> irrelevant

Return values:

<Power> Signal power over the delta marker bandwidth.

Example:

Activate the delta band power marker:

`CALC:DELT:BPOW:STAT ON`

Select the density mode for the result:

`CALC:DELT:BPOW:MODE DENS`

Query the result:

`CALC:DELT:BPOW:RES?`

Response:

20dBm/Hz

Usage: Query only

**CALCulate<n>:DELTamarker<m>:FUNctioN:BPOWer:SPAN **

This command defines the bandwidth around the delta marker position. The span is indicated by lines in the diagram.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters: Numeric value that defines the span in Hz.
The maximum span depends on the marker position and R&S ESRP model.

*RST: 5% of current span

Example: `CALC:DELT:BPOW:SPAN 20`

CALCulate<n>:DELTamarker<m>:FUNctioN:BPOWer[:STATe] <State>

This command turns delta markers for band power measurements on and off.

If necessary, the command also turns on a reference marker.

For details see ["Performing Band Power Measurements"](#) on page 300.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<State>

ON | OFF

When switched to on, if no marker is active yet, marker 1 is activated. Otherwise, the currently active marker is used as a delta band power marker (all other marker functions for this marker are deactivated).

*RST: OFF

Example:

CALC:DELT:BPOW:STAT ON

9.5 Remote Commands in I/Q Analyzer Mode

9.5.1 Using the I/Q Analyzer

CALCulate<n>:FORMat.....	691
CALCulate<n>:MARKer<m>:SEARch.....	692
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALEj]:RVALue.....	692
MMEMory:LOAD:IQ:STATe.....	692
TRACe<n>:IQ:BWIDth.....	693
TRACe<n>:IQ:RLENgth.....	693
TRACe<n>:IQ:SET.....	693
TRACe<n>:IQ:SRATe.....	695
TRACe<n>:IQ:DATA.....	695
TRACe<n>:IQ:DATA:FORMat.....	696
TRACe<n>:IQ:AVERAge:COUNT.....	697
TRACe<n>:IQ:AVERAge[:STATe].....	697
TRACe<n>:IQ:DATA:MEMory?.....	698
TRACe<n>:IQ:EGATe.....	699
TRACe<n>:IQ:EGATe:GAP.....	699
TRACe<n>:IQ:EGATe:LENGth.....	700
TRACe<n>:IQ:EGATe:NOFgateperiods.....	700
TRACe<n>:IQ:EGATe:TYPE.....	700
TRACe<n>:IQ:EVAL.....	701
TRACe<n>:IQ[:STATe].....	701
TRACe<n>:IQ:TPISample?.....	702

CALCulate<n>:FORMat <Format>

This command defines the display type of the IQ data.

Suffix:

<n>

irrelevant

Parameters:

<Format>

RIMag

IQ data

MAGNitude

Magnitude

FREQuency

Spectrum

VECTor

IQ-Vector

CALCulate<n>:MARKer<m>:SEARch <MarkReallmag>

This command selects the trace type a marker search is performed on.

Suffix:

<n>

Selects the measurement window.

<m>

Selects the marker.

Parameters:

<MarkReallmag>

REAL

Marker search functions are performed on the real trace of the "I/Q" measurement.

IMAG

Marker search functions are performed on the imaginary trace of the "I/Q" measurement.

MAGN

Marker search functions are performed on the magnitude of the I and Q data.

*RST: REAL

Example:

CALC4:MARK:SEAR IMAG

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RVALue <Value>

The command defines the power value assigned to the reference position in the grid.

Suffix:

<n>

irrelevant

<t>

irrelevant

Parameters:

<Value>

*RST: 0 dB, coupled to reference level

Example:

DISP:TRAC:Y:RVAL -20dBm

Defines a reference position of -20 dBm.

MMEMory:LOAD:IQ:STATe 1, <FileName>

This command loads the I/Q data from the specified .iq.tar file.

Note: switch to single sweep mode (`INIT:CONT OFF`) before importing I/Q data as otherwise the instrument will continue to measure data and display the current results rather than the imported data.

Parameters:

<FileName> Complete file name including the path

Example:

```
MMEM:LOAD:IQ:STAT 1, 'C:
\R_S\Instr\user\data.iq.tar'
Loads I/Q data from the specified file.
```

Usage:

Setting only

TRACe<n>:IQ:BWIDth

This command queries the flat, usable filter bandwidth of the final I/Q data.

Suffix:

<n> irrelevant

Example:

```
TRAC:IQ:BWID?
```

TRACe<n>:IQ:RLENgth <NoOfSamples>

This command sets the record length for the acquired I/Q data. Increasing the record length automatically also increases the measurement time.

Note: Alternatively, you can define the measurement time using the `SENS:SWE:TIME` command.

Suffix:

<n> irrelevant

Parameters:

<NoOfSamples> Number of measurement values to record.
 Range: 1 ... 209715200(= 200*1024*1024);
 *RST: 691

Example:

```
TRAC:IQ:RLEN 256
```

**TRACe<n>:IQ:SET NORM,<Placeholder>, <SampleRate>, <TriggerMode>,
<TriggerSlope>, <PretriggerSamp>, <NumberSamples>**

This command defines the settings of the R&S ESRP hardware for the measurement of I/Q data. This allows setting the sample rate, trigger conditions and the record length.

If this command is omitted, the current instrument settings are used for the corresponding parameters.

This command switches to IQ mode automatically (see also [TRACe<n>:IQ\[:STATe\]](#) on page 701).

The trigger level can be set using the [TRIGger<n>\[:SEquence\]:SOURce](#) command.

Note: When using the default settings with the `TRACe<n>:IQ:DATA` command, the following minimum buffer sizes for the response data are recommended: ASCII format 10 kBytes, Binary format 2 kBytes.

Tip: To determine the trigger point in the sample (for "External" or "IF Power" trigger mode), use the `TRACe<n>:IQ:TPISample?` on page 702 command.

Parameters:

NORM	is not evaluated, but must be inserted
<Placeholder>	numeric value is not evaluated, but must be inserted
<TriggerMode>	IMMediate EXTernal IFPower BBPower PSE Selection of the trigger source used for the measurement. For IMM mode, gating is automatically deactivated. *RST: IMM
<TriggerSlope>	POSitive NEGative Used trigger slope. *RST: POS
<PretriggerSamp>	Defines the trigger offset in terms of pretrigger samples. Negative values correspond to a trigger delay. This value also defines the interval between the trigger signal and the gate edge in samples. Range: RF input without gating: 0 to (200 MS - 1) RF input with gating: 0 to [(200 MS * SR/128 MHz)-1] Range: 0 to (MaxPreTriggerSamples * 128 MHz/sample rate). *RST: 0
<NumberSamples>	Number of measurement values to record (including the pretrigger samples). Range: 1 ... 209715200(= 200*1024*1024); *RST: 128

Example:

`TRAC:IQ:SET NORM,10 MHz,32 MHz,EXT,POS,0,2048`

Reads 2048 I/Q-values starting at the trigger point.

sample rate = 32 MHz

trigger = External

slope = Positive

`TRAC:IQ:SET NORM,10 MHz,4 MHz,EXT,POS,1024,512`

Reads 512 I/Q-values from 1024 measurement points before the trigger point.

sample rate = 4 MHz

trigger = External

slope = Positive

TRACe<n>:IQ:SRATe <SampleRate>

This command sets the final user sample rate for the acquired I/Q data. Thus, the sample rate can be modified without affecting the other settings.

Note: The smaller the user sample rate, the smaller the usable I/Q bandwidth, see [TRACe<n>:IQ:BWIDth](#) on page 693.

Suffix:

<n> irrelevant

Example:

TRAC:IQ:SRAT 4 MHZ

TRACe<n>:IQ:DATA

This command starts a measurement with the settings defined via [TRACe<n>:IQ:SET](#) and returns the list of measurement results (I/Q samples) immediately after they are corrected in terms of frequency response. The number of measurement results depends on the settings defined with [TRACe<n>:IQ:SET](#), the output format depends on the settings of the FORMat subsystem. The format of the data list is defined by the command [TRACe<n>:IQ:DATA:FORMat](#).

The command requires all response data to be read out completely before the instrument accepts further commands.

The result values are scaled linearly in Volts and correspond to the voltage at the RF or digital input of the instrument. The number of the returned values is 2 * the number of samples.

Note: Using the command with the *RST values for the [TRACe<n>:IQ:SET](#) command, the following minimum buffer sizes for the response data are recommended:

ASCII format: 10 kBytes

Binary format: 2 kBytes

Suffix:

<n> irrelevant

Example:

```
TRAC:IQ:STAT ON
Enables acquisition of I/Q data
TRAC:IQ:SET NORM,10MHz,32MHz,EXT,POS,0,4096
Measurement configuration:
Sample Rate = 32 MHz
Trigger Source = External
Trigger Slope = Positive
Pretrigger Samples = 0
Number of Samples = 4096
FORMat REAL,32
Selects format of response data
TRAC:IQ:DATA?
Starts measurement and reads results
```

TRACe<n>:IQ:DATA:FORMat <Format>

This command defines the transfer format of the I/Q data.

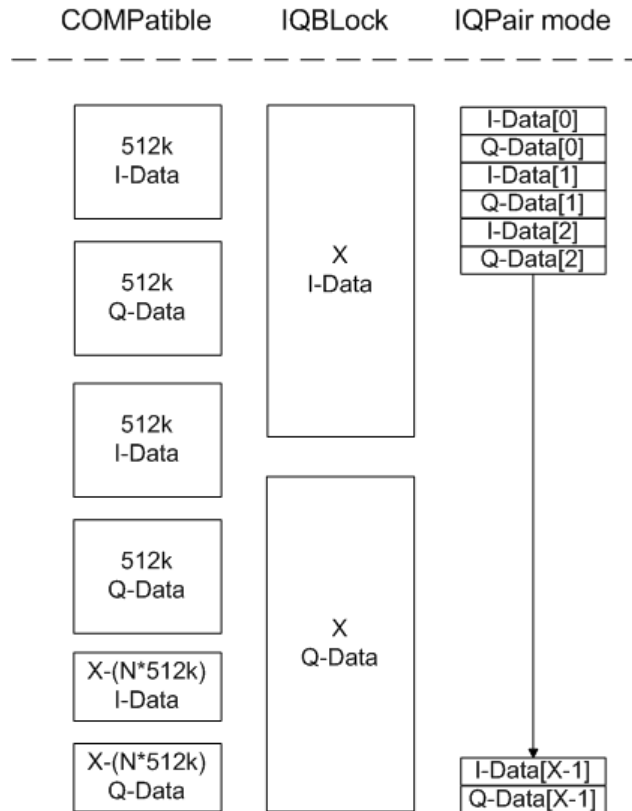


Fig. 9-5: IQ data formats

Note: 512k corresponds to 524288 samples

$$\# \text{ of } I\text{-Data} = \# \text{ of } Q\text{-Data} = \frac{\# \text{ of } DataBytes}{8}$$

$$Q\text{-Data-Offset} = \frac{(\# \text{ of } DataBytes)}{2} + LengthIndicatorDigits$$

Suffix:

<n> irrelevant

Parameters:

<Format> COMPatible | IQBLock | IQPair

*RST: IQBL

For maximum performance, the formats "Compatible" or "IQPair" should be used. Furthermore, for large amounts of data, the data should be in binary format to improve performance.

For further details on formats refer to [chapter 3.2.10, "Formats for Returned Values: ASCII Format and Binary Format"](#), on page 56 .

TRACe<n>:IQ:AVERAge:COUNT <NumberSets>

This command defines the number of I/Q data sets that are to serve as a basis for averaging.

Suffix:

<n> irrelevant

Parameters:

<NumberSets> 0 to 32767

*RST: 0

Example:

TRAC:IQ ON

Switches on acquisition of I/Q data.

TRAC:IQ:AVER ON

Enables averaging of the I/Q measurement data

TRAC:IQ:AVER:COUNT 10

Selects averaging over 10 data sets

TRAC:IQ:DATA?

Starts the measurement and reads out the averaged data.

Usage:

SCPI confirmed

TRACe<n>:IQ:AVERAge[:STATe] <State>

The command enables averaging of the recorded I/Q data, provided that I/Q data acquisition was previously enabled with [TRACe<n>:IQ\[:STATe\]](#) on page 701.

With I/Q data averaging enabled, the maximum amount of I/Q data is limited to 512kS (524288 complex samples).

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:

TRAC:IQ ON

Switches on acquisition of I/Q data.

TRAC:IQ:AVER ON

Enables averaging of the I/Q measurement data.

TRAC:IQ:AVER:COUNT 10

Selects averaging over 10 data sets.

TRAC:IQ:DATA?

Starts the measurement and reads out the averaged data.

TRACe<n>:IQ:DATA:MEMory? <OffsetSamples>,<NoOfSamples>

This command reads out previously acquired (and frequency response corrected) I/Q data from the memory. Furthermore, the offset related to the start of measurement and the number of I/Q samples are given. Thus, a previously acquired data set can be read out in smaller portions. If no parameters are given, all data is read from the memory.

The maximum amount of available data depends on the settings of the [TRACe<n>:IQ:SET](#) command, the output format on the settings in the FORMat subsystem.

The returned values are scaled linear in unit Volt and correspond to the voltage at the RF or digital input of the instrument.

The format of the output buffer corresponds to the [TRACe<n>:IQ:DATA](#) command.

The command requires all response data to be read out completely before the instrument accepts further commands.

If no I/Q data is available in memory because the corresponding measurement was not started, the command causes a query error.

Suffix:

<n> irrelevant

Parameters:

<OffsetSamples>	Offset of the values to be read, in relation to the start of the acquired data.
Range:	0 to <# of samples> – 1, with <# of samples> being the value set by the "TRACe:IQ:SET" command
*RST:	0
<NoOfSamples>	Number of measurement values to be read.
Range:	1 to <# of samples> - <offset samples> with <# of samples> being the value set by the "TRACe:IQ:SET" command
*RST:	<# of samples>

Example:

```
TRAC:IQ:STAT ON
```

Enables acquisition of I/Q data

```
TRAC:IQ:SET NORM,10MHz,32MHz,EXT,POS,100,4096
```

Measurement configuration:

Sample Rate = 32 MHz

Trigger Source = External

Trigger Slope = Positive

Pretrigger Samples = 100

Number of Samples = 4096

```
INIT;*WAI
```

Starts measurement and wait for sync

```
FORMat REAL,32
```

Determines output format

To read the results:

```
TRAC:IQ:DATA:MEM?
```

Reads all 4096 I/Q data

```
TRAC:IQ:DATA:MEM? 0,2048
```

Reads 2048 I/Q data starting at the beginning of data acquisition

```
TRAC:IQ:DATA:MEM? 2048,1024
```

Reads 1024 I/Q data from half of the recorded data

```
TRAC:IQ:DATA:MEM? 100,512
```

Reads 512 I/Q data starting at the trigger point (<Pretrigger Samples> was 100)

Usage:

Query only

TRACe<n>:IQ:EGATe <State>

Activates or deactivates the gate function for IQ data measurements. This command is only valid for TRAC:IQ ON and trigger modes "EXT" and "IFP". The gate trigger is specified using [TRACe<n>:IQ:SET](#) on page 693. For details see [chapter 9.5.2, "I/Q Gating"](#), on page 702.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:

```
TRAC:IQ:EGAT: ON
```

TRACe<n>:IQ:EGATe:GAP <Samples>

Defines the interval between several gate periods in samples. For details see [chapter 9.5.2, "I/Q Gating"](#), on page 702.

Suffix:

<n> irrelevant

Parameters:

<Samples> <numeric value>
 Max = MaxPreTriggerSamples * 128 MHz/sample rate
 pretrigger samples defined by [TRACe<n>:IQ:SET](#);
 sample rate defined by [TRACe<n>:IQ:SRATe](#))
 Range: 1...Max (samples)
 *RST: 100

Example: TRAC:IQ:EGAT:GAP 2

TRACe<n>:IQ:EGATe:LENGth <GateLength>

Defines the gate length in samples in edge mode. For details see [chapter 9.5.2, "I/Q Gating"](#), on page 702.

Suffix:

<n> irrelevant

Parameters:

<GateLength> <numeric value>
 Max = MaxPreTriggerSamples * 128 MHz/sample rate
 pretrigger samples defined by [TRACe<n>:IQ:SET](#);
 sample rate defined by [TRACe<n>:IQ:SRATe](#))
 Range: 1...Max (samples)
 *RST: 100

Example: TRAC:IQ:EGAT:LENG 2000

TRACe<n>:IQ:EGATe:NOFgateperiods <Number>

Defines the number of gate periods after a trigger signal. For details see [chapter 9.5.2, "I/Q Gating"](#), on page 702.

Suffix:

<n> irrelevant

Parameters:

<Number> 1...1023
 *RST: 1

Example: TRAC:IQ:EGAT:NOF 2

TRACe<n>:IQ:EGATe:TYPE <Type>

Specifies the gate trigger type used for data collection. For details see [chapter 9.5.2, "I/Q Gating"](#), on page 702.

Note: Using gating with gate mode "level" and an IFP trigger ([TRIGger<n>\[:SEQUence\]:SOURce](#)), the holdoff time for the IFP trigger (see [TRIGger<n>\[:SEQUence\]:IFPower:HOLDoff](#) on page 643) is ignored.

Suffix:

<n> irrelevant

Parameters:

<Type> LEVEL | EDGE

*RST: EDGE

Example:

TRAC:IQ:EGAT:TYPE LEV

TRACe<n>:IQ:EVAL <State>

This command enables or disables the IQ data evaluation mode and is a prerequisite for the IQ Analyzer functions.

Before this command can be executed, IQ data acquisition must be enabled (see [TRACe<n>:IQ\[:STATe\]](#) on page 701). This command automatically disables the IQ data evaluation mode to provide optimum performance for IQ-data acquisition.

If you start the IQ Analyzer manually by selecting the "IQ Analyzer" mode in the R&S ESRP, or use the [CALCulate<n>:FORMat](#) command, the IQ data evaluation mode is automatically activated.

The maximum number of samples for RF input is 200 MS. For details see [chapter 5.5, "Working with I/Q Data"](#), on page 344.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF

ON

all functions of the IQ Analyzer are available

OFF

no traces or marker operations are available; IQ data can only be captured, but with a better performance than in active IQ data evaluation mode

*RST: OFF

Example:

TRAC:IQ ON

Enables IQ data acquisition

TRAC:IQ:EVAL ON

Enables the IQ data evaluation mode.

TRACe<n>:IQ[:STATe] <State>

This command switches the I/Q data acquisition on or off.

I/Q data acquisition is not compatible with other measurement functions. Therefore, all other measurement functions are switched off as soon as the I/Q measurement function is switched on. The trace display is also switched off by this command. Therefore, all traces are set to "BLANK".

To switch trace display back on, use the [TRACe<n>:IQ:EVAL](#) command.

Note: to enable the evaluation functions of the IQ Analyzer, you must also execute the command `TRACe<n>:IQ:EVAL`.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:

`TRAC:IQ ON`

Switches on I/Q data acquisition

TRACe<n>:IQ:TPISample?

This command determines the time offset of the trigger in the sample (trigger position in sample = TPIS). This value can only be determined in triggered measurements using external or IFPower triggers, otherwise the value is 0. The value is not user-definable.

Suffix:

<n> irrelevant

Example:

`TRAC:IQ:TPIS?`

Usage:

Query only

9.5.2 I/Q Gating


Sometimes in spectrum analysis, measurements are based on a certain length of time called the gate area. With I/Q gating, you can define the gate area using the gate length, the distance between the periods and the number of periods. The gate length and the distance between the capture periods are specified in samples.



I/Q gating is only available using remote commands; manual configuration is not possible.


Using I/Q gating, the gate area can be defined using the following methods:

- Edge triggered recording
After a trigger signal, the gate period is defined by a gate length and a gate distance. All data in the gate period is recorded until the required number of samples has been recorded.

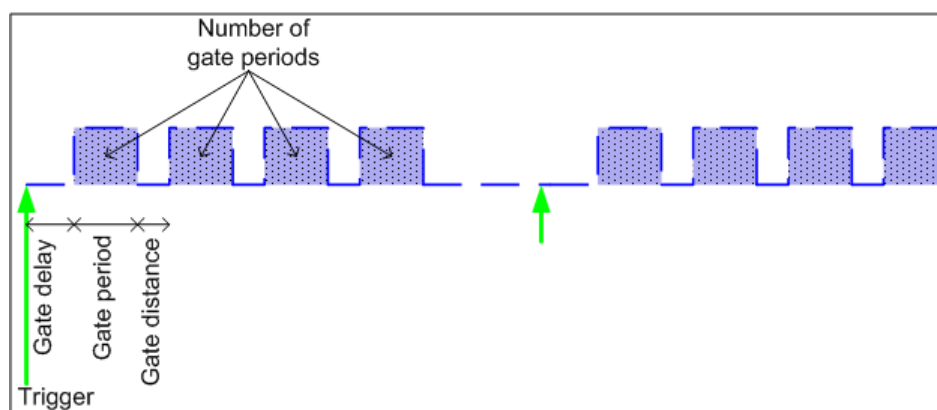

SCPI command: `TRACE:IQ:EGATE:TYPE EDGE`, see `TRACe<n>:IQ:EGATE:TYPE` on page 700

- Level triggered recording
After a trigger signal, all data is recorded in which the gate signal is set to 1, which means it has exceeded a level. In this case, the gate signal can be generated by the IFP trigger, for example: each time the IFP level is exceeded, the IFP trigger signal is set to 1 and the samples in this area are recorded as gate samples.

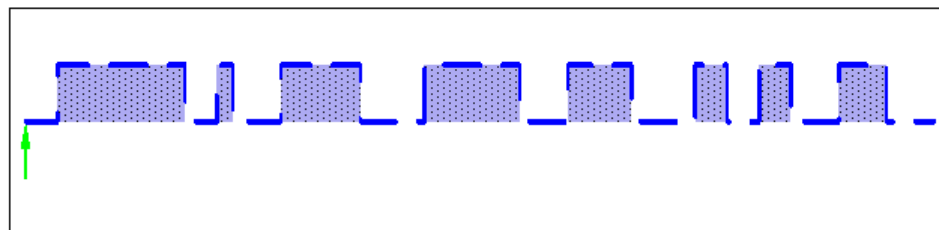

The number of complex samples to be recorded prior to the trigger event can be selected (see `TRACe<n>:IQ:SET` on page 693) for all available trigger sources, except for "Free Run".

SCPI command: `TRACE:IQ:EGATE:TYPE LEV`, see `TRACe<n>:IQ:EGATE:TYPE` on page 700

9.6 Remote Commands to Control the Tracking Generator

The following commands control the tracking generator available with option R&S FSV-B9.

<code>OUTPut[:STATe]</code>	704
<code>[SENSe:]CORRection:COLLect[:ACQuire]</code>	704
<code>[SENSe:]CORRection:METHod</code>	705
<code>[SENSe:]CORRection:RECall</code>	705
<code>[SENSe:]CORRection[:STATe]</code>	705
<code>SOURce<n>:AM:STATe</code>	705
<code>SOURce<n>:DM:STATe</code>	706
<code>SOURce<n>:FM:DEViation</code>	706

SOURce<n>:FM:STATe.....	707
SOURce<n>:FREQuency:OFFSet.....	707
SOURce<n>:POWer[:LEVel][:IMMediate][:AMPLitude].....	708
SOURce<n>:POWer[:LEVel][:IMMediate]:OFFSet.....	708
SOURce<n>:POWer:MODE.....	708
SOURce<n>:POWer:START.....	709
SOURce<n>:POWer:STOP.....	709

OUTPut[:STATe] <State>

This command switches the selected tracking generator on or off.

The command is available with a tracking generator (option R&S FSV-B9).

Parameters:

<State> ON | OFF
 *RST: OFF

Example: OUTP1 ON
 Switches on the external tracking generator 1.

Usage: SCPI confirmed

[SENSe:]CORRection:COLLect[:ACQuire] <MeasType>

This command initiates a reference measurement (calibration). The reference measurement is the basis for the measurement normalization.

To obtain a correct reference measurement, a complete sweep with synchronization to the end of the sweep must have been carried out. This is only possible in the single sweep mode.

The command is available if a tracking generator is installed and has been turned on.

Parameters:

<MeasType> **THROUGH**
 "TRANsmission" mode: calibration with direct connection
 between tracking generator and device input
 "REFLection" mode: calibration with short circuit at the input
 OPEN
 only allowed in "REFLection" mode: calibration with open input

Example: INIT:CONT OFF
 Selects single sweep operation
 CORR:COLL THR; *WAI
 Starts the measurement of reference data using direct connection between generator and device input and waits for the sweep end.

Usage: Setting only
 SCPI confirmed

[SENSe:]CORRection:METHod

This command selects the type of measurement to be performed with the tracking generator.

The command is available if a tracking generator is installed and has been turned on.

Parameters:**REFlection**

Selects reflection measurements.

TRANsmission

Selects transmission measurements.

*RST: TRANsmission

Example:

CORR:METH TRAN

Sets the type of measurement to "transmission".

[SENSe:]CORRection:RECall

This command restores the measurement configuration used for calibration.

The command is available if a tracking generator is installed and has been turned on.

Example:

CORR:REC

Usage:

Event
SCPI confirmed

[SENSe:]CORRection[:STATe] <State>

This command turns correction of measurement results (normalization) on and off.

The command is available after you have defined a reference trace for the selected measurement type with `[SENSe:]CORRection:COLlect[:ACQuire]` on page 704.

The command is available if a tracking generator is installed and has been turned on.

Parameters:

<State>

ON | OFF

*RST: OFF

Example:

CORR ON

Activates normalization.

Usage:

SCPI confirmed

SOURce<n>:AM:STATe <State>

This command turns external amplitude modulation of the tracking generator on and off.

External I/Q modulation is switched off, if active. This command is available with a tracking generator (option R&S FSV-B9).

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

SOUR2:AM:STAT ON
Switches on the external amplitude modulation of the tracking generator for screen B.

Usage: SCPI confirmed

SOURce<n>:DM:STATe <State>

This command turns external I/Q modulation of the tracking generator on and off.

External AM and external FM are switched off, if active. This command is available with a tracking generator (option R&S FSV-B9).

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

SOUR2:DM:STAT ON
Switches on the external I/Q modulation of the tracking generator for screen B.

Usage: SCPI confirmed

SOURce<n>:FM:DEVIation <Frequency>

This command defines the maximum frequency deviation at 1 V input voltage at the FM input of the tracking generator.

This command is available with a tracking generator (option R&S FSV-B9).

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<Frequency> The possible value range is 100 Hz to 10 MHz in steps of 10 Hz.
Range: 100 Hz to 10 MHz
Increment: 10 Hz
*RST: 100 Hz

Example: `SOUR1:FM:DEV 1 MHz`
Sets the maximum frequency deviation of the tracking generator for screen A to 1 MHz.

Usage: SCPI confirmed

SOURce<n>:FM:STATe <State>

This command turns external frequency modulation of the tracking generator on and off.

External I/Q modulation is switched off, if active. This command is available with a tracking generator (option R&S FSV-B9).

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<State> ON | OFF
*RST: OFF

Example: `SOUR2:FM:STAT ON`
Switches on the external frequency modulation of the tracking generator for screen B.

Usage: SCPI confirmed

SOURce<n>:FREQuency:OFFSet <Offset>

This command defines a frequency offset of the tracking generator. Frequency-converting DUTs can be measured with this setting.

External I/Q modulation is switched off, if active. This command is available with a tracking generator (option R&S FSV-B9).

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<Offset> Note that the values (start frequency – tracking frequency offset) and (stop frequency – tracking frequency offset) are both > 1 kHz or both < –1 kHz.
Range: -200 MHz to 200 MHz
*RST: 0 Hz

Example: `SOUR:FREQ:OFFS 10MHz`
Defines a frequency offset of the tracking generator of 10 MHz.

Usage: SCPI confirmed

SOURce<n>:POWer[:LEVel][:IMMediate][:AMPLitude] <Level>

This command defines the output level of the tracking generator.

Parameters:

<Level> Output level in dBm. The level range is specified in the data sheet.

*RST: -20 dBm

Example:

SOUR:POW -20dBm

Sets the tracking generator level to -20 dBm.

Usage:

SCPI confirmed

SOURce<n>:POWer[:LEVel][:IMMediate]:OFFSet <Offset>

This command defines a level offset for the tracking generator level. Thus, for example, attenuators or amplifiers at the output of the tracking generator can be taken into account for the setting.

Parameters:

<Offset> Range: -200 dB to +200 dB

*RST: 0dB

Example:

SOUR:POW:OFFS -10dB

Sets the level offset of the tracking generator to - 20 dBm.

Usage:

SCPI confirmed

SOURce<n>:POWer:MODE <Mode>

This command turns the power sweep on and off.

Suffix:

<n> 1...4

Selects the measurement window.

Parameters:

<Mode>

FIXed

Power sweep is off.

SWEep

Power sweep is on.

If the power sweep is on, the R&S ESRP enters the time domain (span = 0 Hz). During the sweep time, the power at the internal tracking generator is changed linearly from start power to stop power. The start and stop power for the power sweep are displayed in the diagram header ("INT TG <start power>... <stop power>").

*RST: FIXed

Example:

SOUR:POW:MODE SWE

Activates power sweep.

Usage: SCPI confirmed

SOURce<n>:POWer:STARt <Power>

This command defines the start power of the power sweep.

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<Power> Range: -30 dBm to +5 dBm
*RST: 0 dBm

Example: SOUR:POW:STAR -20dBm

Usage: SCPI confirmed

SOURce<n>:POWer:STOP <Power>

This command defines the stop power of the power sweep. The stop value can be smaller than the start value.

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<Power> Range: -30 dBm to +5 dBm
*RST: 0 dBm

Example: SOUR:POW:STOP -20dBm

Usage: SCPI confirmed

9.7 Common Commands

Common commands are described in the IEEE 488.2 (IEC 625-2) standard. These commands have the same effect and are employed in the same way on different devices. The headers of these commands consist of "*" followed by three letters. Many common commands are related to the Status Reporting System.

Available common commands:

*CAL?	710
*CLS	710
*ESE	710
*ESR?	710
*IDN?	711
*IST?	711
*OPC	711
*OPT?	711

*PCB.....	711
*PRE.....	711
*PSC.....	712
*RST.....	712
*SRE.....	712
*STB?.....	712
*TRG.....	713
*TST?.....	713
*WAI.....	713

*CAL?

Calibration query

Initiates a calibration of the instrument and subsequently queries the calibration status. Responses > 0 indicate errors.

Usage: Query only

*CLS

Clear status

Sets the status byte (STB), the standard event register (ESR) and the `EVENT` part of the `QUESTIONABLE` and the `OPERATION` registers to zero. The command does not alter the mask and transition parts of the registers. It clears the output buffer.

Usage: Setting only

*ESE <Value>

Event status enable

Sets the event status enable register to the specified value. The query returns the contents of the event status enable register in decimal form.

Parameters:

<Value> Range: 0 to 255

*ESR?

Event status read

Returns the contents of the event status register in decimal form and subsequently sets the register to zero.

Return values:

<Contents> Range: 0 to 255

Usage: Query only

***IDN?**

Identification

Returns the instrument identification.

Usage: Query only

***IST?**

Individual status query

Returns the contents of the IST flag in decimal form. The IST flag is the status bit which is sent during a parallel poll.

Return values:

<ISTflag> 0 | 1

Usage: Query only

***OPC**

Operation complete

Sets bit 0 in the event status register when all preceding commands have been executed. This bit can be used to initiate a service request. The query form writes a "1" into the output buffer as soon as all preceding commands have been executed. This is used for command synchronization.

***OPT?**

Option identification query

Queries the options included in the instrument. For a list of all available options and their description refer to the CD-ROM.

Usage: Query only

***PCB <Address>**

Pass control back

Indicates the controller address to which remote control is returned after termination of the triggered action.

Setting parameters:

<Address> Range: 0 to 30

Usage: Setting only

***PRE <Value>**

Parallel poll register enable

Sets parallel poll enable register to the indicated value. The query returns the contents of the parallel poll enable register in decimal form.

Parameters:

<Value> Range: 0 to 255

***PSC <Action>**

Power on status clear

Determines whether the contents of the `ENABLe` registers are preserved or reset when the instrument is switched on. Thus a service request can be triggered when the instrument is switched on, if the status registers ESE and SRE are suitably configured. The query reads out the contents of the "power-on-status-clear" flag.

Parameters:

<Action> 0 | 1

0

The contents of the status registers are preserved.

1

Resets the status registers.

***RST**

Reset

Sets the instrument to a defined default status. The default settings are indicated in the description of commands.

The command is equivalent to `SYSTem:PRESet`.

Usage: Setting only

***SRE <Contents>**

Service request enable

Sets the service request enable register to the indicated value. This command determines under which conditions a service request is triggered.

Parameters:

<Contents> Contents of the service request enable register in decimal form.
Bit 6 (MSS mask bit) is always 0.

Range: 0 to 255

***STB?**

Status byte query

Reads the contents of the status byte in decimal form.

Usage: Query only

***TRG**

Trigger

Triggers all actions waiting for a trigger event. In particular, *TRG generates a manual trigger signal. This common command complements the commands of the TRIGger subsystem.

Usage: Event

***TST?**

Self test query

Triggers selftests of the instrument and returns an error code in decimal form (see Service Manual supplied with the instrument). "0" indicates no errors occurred.

Usage: Query only

***WAI**

Wait to continue

Prevents servicing of the subsequent commands until all preceding commands have been executed and all signals have settled (see also command synchronization and *OPC).

Usage: Event

9.8 System Configuration

• General System Configuration	713
• Checking the System Configuration	718
• Coupling Parameters	721
• Controlling In- and Outputs	724
• Configuring the Reference Frequency	727
• Calibrating the R&S ESRP	728
• Using Service Functions	730

9.8.1 General System Configuration

SYSTem:APPLication:SRECovery[:STATe]	714
SYSTem:CLOGging	714
SYSTem:SHUTdown	714
SYSTem:COMPatible	715
SYSTem:DISPlay:UPDate	715
SYSTem:FIRMware:UPDate	715
SYSTem:FORMat:IDENt	715
SYSTem:KLOCK	716

SYSTem:PRESet.....	716
SYSTem:PRESet:COMPAtible.....	716
SYSTem:SPEaker:VOLume.....	717
SYSTem:TIME.....	717
SYSTem:TIME:TSTamp?.....	717
SYSTem:VERSion?.....	717
SYSTem:DISPlay:FPANel.....	717
SYSTem:DEVice:ID?/SYSTem:DID?.....	718
SYSTem:DATE.....	718

SYSTem:APPLication:SRECovery[:STATe] <State>

Controls instrument behavior when switching between measurement applications, e.g. from "Spectrum" to "Analog Demod" and back.

If activated, the current instrument settings are stored when you switch to a different application. When you switch back to the previous application, the corresponding instrument settings are restored. Thus, the settings of the individual applications are independant of each other.

If deactivated (default), only a few parameters of the current instrument setting are passed between applications (e.g. center frequency, level settings).

Note that although the default value is "OFF", this parameter is not reset using the PRESET key. Thus it must be deactivated manually, if necessary.

Parameters:

<State> ON | OFF
 *RST: OFF (not restored using the "PRESET" function)

Example: SYST:APPL:SREC ON

SYSTem:CLOGging <State>

This command turns logging of remote commands on and off.

Parameters:

<State> **ON**
 Writes all remote commands that have been sent to a file.
 The destination is C:
 \R_S\instr\ScpiLogging\ScpiLog.txt.
 OFF
 *RST: OFF

SYSTem:SHUTdown

This command shuts down the instrument.

Usage: Event

SYSTem:COMPAtible <Mode>

Sets the device in a state compatible to previous R&S signal analyzers, e.g. regarding the number of sweep points.

Parameters:

<Mode> DEFault | FSU | FSP

Example: SYST:COMP FSP

Usage: SCPI confirmed

SYSTem:DISPlay:UPDate <State>

In remote control mode, this command switches on or off the instrument display. If switched on, only the diagrams, traces and display fields are displayed and updated.

The best performance is obtained if the display output is switched off during remote control.

Parameters:

<State> ON | OFF

*RST: OFF

Example: SYST:DISP:UPD ON

SYSTem:FIRMware:UPDate

This command starts a firmware update using the *.msi files in the selected directory. The default path is D:\FW_UPDATE. The path is changed via the [MMEMory:COMMeNt](#) command. To store the update files the [MMEMory:DATA](#) command is used.

Only user accounts with administrator rights can perform a firmware update.

Example: SYST:FIRM:UPD 'D:\FW_UPDATE'
Starts the firmware update from directory "D:\FW_UPDATE".

Usage: Event

SYSTem:FORMat:IDENt

This command defines the response format to the [*IDN?](#) on page 711 command. This function is intended for re-use of existing control programs together with the R&S ESRP.

Parameters:

FSL | LEGacy | NEW

LEGacy

Format is compatible to the R&S FSP/FSU/FSQ family

NEW

R&S ESRP format

FSL

Format is compatible to the R&S FSL family

*RST: not reset!

Example:

SYST:FORM:IDEN LEG

Adapts the return value of *IDN? to the R&S FSP/FSU/FSQ family.

SYSTem:KLOCK <State>

This command activates the local lockout (remote control) or returns to the local mode.

Parameters:

<State>

ON

LLO (local lockout)

OFF

GTL (go to local)

*RST: OFF

Example:

SYST:KLOCK ON

Activates LLO (remote control)

SYSTem:PRESet

This command initiates an instrument reset.

The effect of this command corresponds to that of the **PRESET** key with manual operation or to the *RST command. For details on preset settings refer to [chapter 4.2.1, "Initializing the Configuration – PRESET Key"](#), on page 215.

Example:

SYST:PRES

Usage:

SCPI confirmed

SYSTem:PRESet:COMPatible <Mode>

This command selects the type of settings that are restored when you preset the instrument.

Parameters:

<Mode>

RECeiver

Restore the default settings defined for Receiver mode.

SANalyzer

Restore the default settings defined for Spectrum mode.

SYSTem:SPEaker:VOLume <Volume>

This command defines the volume of the built-in loudspeaker for demodulated signals.

Parameters:

<Volume> Range: 0 to 1
 *RST: 0.5

Example: SYST:SPE:VOL 0
 Switches the loudspeaker to mute.

SYSTem:TIME <Time>

This command sets the internal clock. The sequence of entry is hour, minute, second.

Only user accounts with administrator rights are able to set the time.

Parameters:

<Time> 0 to 23, 0 to 59, 0 to 59

Example: SYST:TIME 12,30,30

Usage: SCPI confirmed

SYSTem:TIME:TSTamp?

This command queries the time and date from the internal real time clock.

Return values:

<TimeStamp>

Example: SYST:TIME:TSTamp?

Usage: Query only

SYSTem:VERSion?

This command queries the number of the SCPI version, which is relevant for the instrument.

This command is a query and therefore has no *RST value.

Example: SYST:VERS?

Usage: Query only
 SCPI confirmed

SYSTem:DISPlay:FPANel <State>

This command activates or deactivates the display of the front panel keys on the screen.

With the display activated, the instrument can be operated on the screen using the mouse by pressing the corresponding buttons.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: SYST:DISP:FPAN ON

SYSTem:DEVIce:ID?/SYSTem:DID?

.Both commands are identical and return the unique ID of the R&S ESRP device.

Example: SYST:DEV:ID?
 1307.9002K07-100123-aZ

Usage: Query only
 SCPI confirmed

SYSTem:DATE <Date>

This command is used to enter the date for the internal calendar.

The sequence of entry is year, month, day.

Only user accounts with administrator rights can set the date.

Parameters:

<Date> 1980 to 2099, 1 to 12, 1 to 31

Example: SYST:DATE 2000,6,1

Usage: SCPI confirmed

9.8.2 Checking the System Configuration

DIAGnostic<n>:SERVIce:BIOSinfo?	718
DIAGnostic<n>:SERVIce:HWInfo?	719
DIAGnostic<n>:SERVIce:VERSinfo?	719
SYSTem:IDENtify:FACTory	719
SYSTem:IDENtify[:STRing]	720
SYSTem:ERRor:CLEar:ALL	720
SYSTem:ERRor:LIST?	720
SYSTem:ERRor[:NEXT]?	720

DIAGnostic<n>:SERVIce:BIOSinfo?

This command queries the CPU board BIOS version.

Suffix:

<n> irrelevant

Return values:

<Version> ASCII string containing the BIOS version, e.g. 47.11.

Example: `DIAG:SERV:BIOS?`
Returns the BIOS version.

Usage: Query only

DIAGnostic<n>:SERVice:HWInfo?

This command queries the hardware information.

Suffix:
<n> irrelevant

Return values:
<HardwareInfo> "<component 1>|<serial #>|<order #>|<model>| <hardware code>|<revision>|<subrevision>",
"<component 2>|<serial #>|<order #>|<model>| <hardware code>|<revision>|<subrevision>",
...
Table lines are output as string data and are separated by commas. The individual columns of the table are separated from each other by |.

Example: `DIAG:SERV:HWIN?`
Queries the hardware information.
"FRONTEND|100001/003|1300.3009|03|01|00|00",
"MOTHERBOARD|123456/002|1300.3080|02|00|00|00",
...

Usage: Query only

DIAGnostic<n>:SERVice:VERSInfo?

This command queries information about the hardware and software components.

Suffix:
<n> irrelevant

Return values:
<Information> String containing the version of hardware and software components including the types of licenses for installed firmware options.

Usage: Query only
SCPI confirmed

SYSTem:IDENtify:FACTory

Resets the response to the *IDN? query to the default value, e.g. after a user string was defined using the [ID String User](#) softkey.

Example: `SYST:IDEN:FACT`
`*IDN?`
Response:
`Rohde&Schwarz,R&S#x00a0;ESRP-7,`
`1307.9002K07/101768,1.05`

Usage: Event
 SCPI confirmed

SYSTem:IDENtify[:STRing] <String>

Sets the response to the *IDN? query to the defined string, e.g. after the default value was reset using the [ID String Factory](#) softkey.

Parameters:
 <String>

Example: Set the response to 'MyDevice':
`SYST:IDEN:STR 'MyDevice'`
 Query the response:
`SYST:IDEN:STR?`
Response:
`MyDevice`

Usage: SCPI confirmed

SYSTem:ERRor:CLEar:ALL

This command deletes all entries in the table SYSTEM MESSAGES.

Example: `SYST:ERR:CLE:ALL`

Usage: Event

SYSTem:ERRor:LIST?

This command reads all system messages and returns a list of comma separated strings. Each string corresponds to an entry in the table SYSTEM MESSAGES.

If the error list is empty, an empty string " is returned.

This command is a query and therefore has no *RST value.

Example: `SYST:ERR:LIST?`

Usage: Query only

SYSTem:ERRor[:NEXT]?

This command queries the earliest error queue entry and deletes it.

Positive error numbers indicate device-specific errors, negative error numbers are error messages defined by SCPI. If the error queue is empty, the error number 0, "No error", is returned.

This command is a query and therefore has no *RST value.

Example: STAT:ERR?

Usage: Query only
SCPI confirmed

9.8.3 Coupling Parameters

INSTrument:COUPle:ATTenuation.....	721
INSTrument:COUPle:BANDwidth BWIDth.....	721
INSTrument:COUPle:CENTer.....	722
INSTrument:COUPle:DEModulation.....	722
INSTrument:COUPle:GAIN.....	722
INSTrument:COUPle:LIMit.....	723
INSTrument:COUPle:MARKer.....	723
INSTrument:COUPle:PRESelector.....	723
INSTrument:COUPle:SPAN.....	724

INSTrument:COUPle:ATTenuation <State>

This command couples and decouples the attenuation and unit of the receiver mode to the other operating modes and vice versa.

Parameters:

<State> **ALL**
Span is transferred when you change the operating mode.
NONE
Span is not transferred when you change the operating mode.
*RST: ALL

Example: INST:COUP:ATT ALL
Turns coupling of the attenuation on.

INSTrument:COUPle:BANDwidth|BWIDth <State>

This command couples and decouples the resolution bandwidth (and filter type) of the receiver mode to the other operating modes and vice versa.

Parameters:

<State> **ALL**
Bandwidth is transferred when you change the operating mode.
NONE
Bandwidth is not transferred when you change the operating mode.
*RST: NONE

Example: INST:COUP:BWID ALL
Turns coupling of the bandwidth on.

INSTrument:COUPle:CENTer <State>

This command couples and decouples the frequency of the receiver mode to the other operating modes and vice versa.

Parameters:

<State>

ALL

Frequency is transferred when you change the operating mode.

NONE

Frequency is not transferred when you change the operating mode.

*RST: ALL

Example:

INST:COUP:CENT ALL

Turns coupling of the frequency on.

INSTrument:COUPle:DEModulation <State>

This command couples and decouples the audio demodulator settings of the receiver mode to the other operating modes and vice versa.

Parameters:

<State>

ALL

Audio demodulation settings are transferred when you change the operating mode.

NONE

Audio demodulation settings are not transferred when you change the operating mode.

*RST: NONE

Example:

INST:COUP:DEM ALL

Turns coupling of the audio demodulation settings on.

INSTrument:COUPle:GAIN <State>

This command couples and decouples the preamplifier state of the receiver mode to the other operating modes and vice versa.

Parameters:

<State>

ALL

Preamplifier state is transferred when you change the operating mode.

NONE

Preamplifier state is not transferred when you change the operating mode.

*RST: ALL

Example:

INST:COUP:GAIN ALL

Turns coupling of the preamplifier state on.

INSTrument:COUPle:LIMit <State>

This command couples and decouples limit lines in receiver mode to the other operating modes and vice versa.

Parameters:

<State>

ALL

Limit lines are transferred when you change the operating mode. Note that to be transferred, the limit lines have to be compatible to the x-axis and y-axis configuration.

NONE

Limit lines are not transferred when you change the operating mode.

*RST: ALL

Example:

INST:COUP:LIM ALL

Turns coupling of the limit lines on.

INSTrument:COUPle:MARKer <State>

This command couples and decouples the marker frequency of the receiver mode to the other operating modes and vice versa.

Parameters:

<State>

ALL

Marker frequency is transferred when you change the operating mode.

NONE

Marker frequency is not transferred when you change the operating mode.

*RST: NONE

Example:

INST:COUP:MARK ALL

Turns coupling of the marker frequency on.

INSTrument:COUPle:PRESelector <State>

This command couples and decouples the preselector state of the receiver mode to the other operating modes and vice versa.

Note that it is not possible to turn the preselector off in receiver mode. Thus, the preselector is always turned on when you enter receiver mode.

Parameters:

<State>

ALL

Preselector state is transferred when you change the operating mode.

NONE

Preselector state is not transferred when you change the operating mode.

*RST: ALL

Example:

INST:COUP:PRES ALL

Turns coupling of the preselector state on.

INSTrument:COUPle:SPAN <State>

This command couples and decouples the span of the receiver mode to the other operating modes and vice versa.

Parameters:

<State>

ALL

Span is transferred when you change the operating mode.

NONE

Span is not transferred when you change the operating mode.

*RST: NONE

Example:

INST:COUP:SPAN ALL

Turns coupling of the span on.

9.8.4 Controlling In- and Outputs

DIAGnostic<n>:SERVice:NSOource.....	724
INPut:UPORt?.....	725
INPut:UPORt:STATe.....	725
OUTPut:IF[:SOURce].....	725
OUTPut:TRIGger.....	725
OUTPut:UPORt.....	726
OUTPut:UPORt:STATe.....	726
INPut:PRESelection:STATe.....	726

DIAGnostic<n>:SERVice:NSOource <State>

This command switches the 28 V supply of the noise source on the front panel on or off.

Suffix:

<n>

irrelevant

Parameters:

<State>

ON | OFF

*RST: OFF

Example: `DIAG:SERV:NSO ON`

INPut:UPORt?

This command queries the control lines of the user ports.

Example: `INP:UPOR?`

Usage: Query only

INPut:UPORt:STATe <State>

This command selects if the user port control lines are used as a input or as a output.

Parameters:

<State>

ON
User port is used as a input.

OFF
User port is used as a output.

***RST:** ON

Example: `INP:UPOR:STAT ON`

OUTPut:IF[:SOURce] <Source>

This command selects the source of the IF output.

Parameters:

<Source>

IF
intermediate frequency output

VIDeo
video output, 200 mV

***RST:** IF

Example: `OUTP:IF VID`
Selects the video signal for the IF output connector.

OUTPut:TRIGger <PortLevel>

This command selects level of the Trigger Out port. Thus, you can trigger an additional device via the external trigger port, for example.

Parameters:

<PortLevel>

LOW | HIGH

***RST:** LOW

Example: `OUTP:TRIG HIGH`

OUTPut:UPORt <Value>

This command defines the control lines of the user ports.

The assignment of the pin numbers to the bits is as follows:

Bit	7	6	5	4	3	2	1	0
Pin	N/A	N/A	5	3	4	7	6	2

Bits 7 and 6 are not assigned to pins and must always be 0.

The user port is written to with the given binary pattern. If the user port is programmed to input instead of output (see [INPut:UPORt:STATe](#) on page 725), the output value is temporarily stored.

Parameters:

<Value> #B00000000 to #B00111111

Example:

OUTP:UPOR #B00100100
Sets pins 5 and 7 to 5 V.

OUTPut:UPORt:STATe <State>

This command selects if the user port control lines are used as a input or as a output.

This command switches the control line of the user ports between INPut and OUTPut. The user port is switched to OUTPut with parameter ON, to INPut with OFF.

Parameters:

<State> **ON**
User port is used as a input.
ON
User port is used as a output.
*RST: ON

Example:

OUTP:UPOR:STAT ON

INPut:PRESelection:STATe <State>

This command turns the preselector on and off.

The command is available with option R&S ESRP-B2.

Parameters:

<State> ON | OFF
*RST: ON

Example:

INP:PRE:STAT OFF
Turns off the preselector.

9.8.5 Configuring the Reference Frequency

[SENSe:]ROSCillator:EXTErnal:FREQuency.....	727
[SENSe:]ROSCillator:SOURce.....	727
[SENSe:]ROSCillator:SOURce:EAUTo?.....	727

[SENSe:]ROSCillator:EXTErnal:FREQuency <Frequency>

This command defines the frequency of the external reference oscillator.

If the external reference oscillator is selected, the reference signal must be connected to the rear panel of the instrument.

Parameters:

<Frequency> Range: 1 MHz to 20 MHz

Example:

```
ROSC:EXT:FREQ 13
Sets the frequency to 13 MHz.
SOUR:EXT:ROSC:EXT:FREQ 13
```

Usage: SCPI confirmed

[SENSe:]ROSCillator:SOURce <Source>

This command selects the reference oscillator.

If the external reference oscillator is selected, the reference signal must be connected to the rear panel of the instrument.

Parameters:

<Source>

INTernal

The internal reference is used (10 MHz)

EXTErnal

The external reference is used; if none is available, an error flag is displayed in the status bar

EAUTo

The external reference is used as long as it is available, then the instrument switches to the internal reference

Example: `ROSC:SOUR EXT`

Usage: SCPI confirmed

[SENSe:]ROSCillator:SOURce:EAUTo?

This command queries the current reference type in case you have activated an automatic switch to the internal reference if the external reference is missing.

Return values:

<Reference>

INT

internal reference

EXT

external reference

Example: `SENS:ROSC:SOUR:EAUT?`
Queries the currently available reference type.

Usage: Query only

9.8.6 Calibrating the R&S ESRP

<code>CALibration:ABORt</code>	728
<code>CALibration[:ALL]?</code>	728
<code>CALibration:RESult?</code>	729
<code>CALibration:STATe</code>	729
<code>DIAGnostic<n>:SERVice:INPut:PULSed:CFRequency</code>	729
<code>DIAGnostic<n>:SERVice:INPut[:SELeCt]</code>	729
<code>DIAGnostic<n>:SERVice:STESt:RESult?</code>	730
<code>DIAGnostic<n>:SERVice:TEMPerature:FRONt?</code>	730

CALibration:ABORt

This command aborts the current calibration routine.

Example: `CAL:ABORt`
Aborts calibration.

Usage: Event
SCPI confirmed

CALibration[:ALL]?

This command initiates a calibration routine and queries if calibration was successful.

During the acquisition of correction data the instrument does not accept any remote control commands.

In order to recognize when the acquisition of correction data is completed, the MAV bit in the status byte can be used. If the associated bit is set in the Service Request Enable Register, the instrument generates a service request after the acquisition of correction data has been completed.

Return values:

`<CalibrationState>` **0**
The command returns a '0' if calibration was successful.

Example: `*CLS`
Resets the status management.

`*SRE 16`
Enables MAV bit in the Service Request Enable Register.

`*CAL?`
Starts the correction data recording, and then a service request is generated.

Usage: Query only
SCPI confirmed

CALibration:RESult?

This command returns the results collected during calibration.

Return values:

<CalibrationData> String containing the calibration data.

Example:

```
CAL:RES?
would return, e.g.
Total Calibration Status:
PASSED, Date (dd/mm/yyyy): 12/07/2004,
Time: 16:24:54, Runtime: 00.06
```

Usage: Query only

CALibration:STATe <State>

This command includes or excludes calibration data in the actual measurement.

Parameters:

<State> ON | OFF

Example:

```
CAL:STAT OFF
Sets up the instrument to ignore the calibration data.
```

Usage: SCPI confirmed

DIAGnostic<n>:SERVice:INPut:PULSed:CFrequency <Frequency>

This command defines the frequency of the calibration signal.

Before you can use the command, you have to feed in a calibration signal with [DIAGnostic<n>:SERVice:INPut\[:SElect\]](#) on page 729.

Suffix:

<n> irrelevant

Parameters:

<Frequency> Possible frequencies of the calibration signal are fix.
If you define a frequency that is not available, the R&S ESRP uses the next available frequency. Example: a frequency of 20 MHz is rounded up to the next available frequency (21.33 MHz).
*RST: 64 MHz

Example:

```
DIAG:SERV:INP:PULS:CFR 128 MHz
Defines a calibration signal frequency of 128 MHz.
```

Usage: SCPI confirmed

DIAGnostic<n>:SERVice:INPut[:SElect] <Signal>

This command selects the source of the signal.

You can feed in a signal from the RF input or the calibration signal.

Suffix:

<n> irrelevant

Parameters:

<Signal> **CALibration**

Calibration

RF

RF input

*RST: RF

Example:

DIAG:SERV:INP CAL

Selects the calibration signal as the input signal

DIAGnostic<n>:SERVice:STESt:RESult?

This command queries the self test results.

Suffix:

<n> irrelevant

Parameters:

<Results> String of data containing the results.

The rows of the self test result table are separated by commas.

Example:

DIAG:SERV:STES:RES?

would return, e.g.:

"Total Selftest Status:

PASSED", "Date (dd/mm/yyyy): 09/07/2004 TIME:

16:24:54", "Runtime: 00:06", "..."

Usage:

Query only

DIAGnostic<n>:SERVice:TEMPerature:FRONt?

This command queries the temperature of the frontend.

Parameters:

<Temperature> Temperature of the frontend.

Example:

DIAG:SERV:TEMP:FRON?

Usage:

Query only

9.8.7 Using Service Functions

DIAGnostic<n>:SERVice:SFUNction.....	731
DIAGnostic<n>:SERVice:SFUNction:LASTresult?.....	731
DIAGnostic<n>:SERVice:SFUNction:RESults:DELeTe.....	731

DIAGnostic<n>:SERVice:SFUNction:RESults:SAVE.....	731
SYSTem:PASSword:RESet.....	732
SYSTem:PASSword[:CENable].....	732

DIAGnostic<n>:SERVice:SFUNction <ServiceFunction>

This command starts a service function.

The service functions are available after you have entered the level 1 or level 2 system password.

Suffix:

<n> irrelevant

Parameters:

<ServiceFunction> String containing the ID of the service function.
 The ID of the service function is made up out of five numbers, separated by a point.

- function group number
- board number
- function number
- parameter 1 (see the Service Manual)
- parameter 2 (see the Service Manual)

Example: `DIAG:SERV:SFUN '2.0.2.12.1'`

Usage: Event

DIAGnostic<n>:SERVice:SFUNction:LASTresult?

This command queries the results of the most recent service function you have used.

Suffix:

<n> irrelevant

Example: `DIAG:SERV:SFUN:LAST?`

Usage: Query only

DIAGnostic<n>:SERVice:SFUNction:RESults:DELeTe

This command deletes the results of the most recent service function you have used.

Suffix:

<n> irrelevant

Example: `DIAG:SERV:SFUN:RES:DEL`

Usage: Event

DIAGnostic<n>:SERVice:SFUNction:RESults:SAVE <FileName>

This command saves the results of the most recent service function you have used in a file.

Suffix:

<n> irrelevant

Parameters:

<FileName> String containing the file name.

Example:

DIAG:SERV:SFUN:RES:SAVE "C:\diag"

SYSTem:PASSword:RESet

This command resets the service password.

Example:

SYST:PASS:RES

Usage:Event
SCPI confirmed**SYSTem:PASSword[:CENable] <Password>**

This command enables access to the service functions by means of the password.

Parameters:

<Password> <password>

Example:

SYST:PASS XXXX

Usage:Event
SCPI confirmed

9.9 Data Management

- [Managing Data Files](#)..... 732
- [Saving and Restoring Customized Data](#)..... 738

9.9.1 Managing Data Files

MMEMory:CATalog?	733
MMEMory:CATalog:LONG?	733
MMEMory:CDIRectory	734
MMEMory:COMMent	734
MMEMory:COPY	735
MMEMory:DATA	735
MMEMory:DELeTe	736
MMEMory:MDIRectory	736
MMEMory:MOVE	736
MMEMory:MSIS	737
MMEMory:NAME	737
MMEMory:RDIRectory	737

MMEMory:CATalog?

This command reads the indicated directory.

Query parameters:

<Path> **<path>**
 DOS Path name
 The path name should be conform to DOS conventions and may also include the drive name. According to DOS convention, wild-card characters can be entered in order to query e.g. a list of all files of a certain type.

Return values:

Result List of file names in the form of strings separated by commas

Example:

MMEM:CAT? 'C:\R_S\Instr\user*.DFL'
 Returns all files in C:\R_S\Instr\user with extension ".DFL"
 MMEM:CAT? 'C:\R_S\Instr\user\SPOOL?.WMF'
 Returns all files in C:\R_S\Instr\user whose names start with SPOOL, have 6 letters and the extension ".WMF".
 SPOOL1.WMF, SPOOL2.WMF, SPOOL3.WMF

Usage:

Query only
 SCPI confirmed

MMEMory:CATalog:LONG?

Corresponds to [MMEMory:CATalog?](#) on page 733, but displays extended information on the files contained in the current or specified directory.

This command is an event and therefore has no *RST value and no query.

Query parameters:

<Path> **<path>**
 DOS Path name
 The path name should be in conformance with DOS conventions and may also include the drive name.
 Following this value, for each file, a string is listed according to the following syntax:
 "<File name>, <suffix>, <Length of file in bytes>"

Return values:

Result <total number of bytes the directory contains>,"<File name1>,<suffix1>,<Length of file 2 in bytes>","<File name 2>,<suffix2>,<Length of file2 in bytes>","...,"<File name n>,<suffix n>,<Length of file n in bytes>"

The response value consists of a list of strings, separated by commas. It begins with the total number of bytes the directory contains. Then the information for each file is returned.

The <suffix> may be:

- ASCii
- BINary
- STAT

Example:

MMEM:CAT:LONG? 'C:\R_S\Instr\user

Returns all files in C:\R_S\Instr\user:

1776,3331993600, "autolog.txt,ASC,1520",
"autologin.reg,BIN,144", "no_autologin.reg,BIN,112"

Query for the current directory:

MMEM:CDIR?

Response:

C:\R_S\Instr\user

MMEM:CAT:LONG?

Returns all files in C:\R_S\Instr\user.

Usage:

Query only
SCPI confirmed

MMEMory:CDIRectory <Directory>

This command changes the current directory.

Parameters:

<Directory> <directory_name>
<directory_name>
DOS path name

In addition to the path name, the indication of the directory may contain the drive name. The path name complies with the DOS conventions.

Example:

MMEM:CDIR 'C:\R_S\Instr\user'

Selects the directory C:\R_S\Instr\user.

Usage:

SCPI confirmed

MMEMory:COMMeNT <Comment>

This command defines a comment for the stored settings.

Parameters:

<Comment>

Example: `MMEemory:COMMeNT "ACP measurement with Standard Tetra from 23.05."`
`MMEemory::MMEemory:STORel:STATe 1, "ACP_T"`
 As a result, in the selection list for recall settings, the comment "ACP measurement with Standard Tetra from 23.05." is added to the ACP entry.

Usage: SCPI confirmed

MMEemory:COPY <FileSource>,<FileDestination>

This command copies the files indicated in <file_source> to the destination directory indicated with <file_destination> or to the destination file indicated by <file_destination> if <file_source> is just a file.

Parameters:

<FileSource>,<FileDestination> = <file_name>

<file_source>,<file_destination> = <file_name>

DOS file name

The indication of the file name may include the path and the drive name. The file names and path information must be in accordance with the DOS conventions.

Example: `MMEemory:COpy 'C:\R_S\Instr\user\SETUP.CFG','E:'`

Usage: Event
 SCPI confirmed

MMEemory:DATA <FileName>,[<Block>]

This command writes the block data contained in <block> into the file characterized by <file_name>. The delimiter must be set to EOI to obtain error-free data transfer.

The associated query command reads the indicated file from the mass memory and transfers it to the remote control computer. It should be noted that the buffer memory of the control computer should be large enough to store the file. The setting of the delimiter is irrelevant in this case.

The command is useful for reading stored settings files or trace data from the instrument or for transferring them to the instrument.

Parameters:

<FileName> '<file name>' (file name in single quotes)

selects the file to be transferred

<Block> binary data block with the following structure: #<digit for the length of the length information><length information (number of bytes) for the binary data><binary data>

Example: `MMEM:DATA 'TEST01.HCP',#216` This is the file where:
#2: the next 2 characters are the length indication
16: number of subsequent binary data bytes
This is the file: 16 bytes stored as binary data in the file
`TEST01.HCP`
`MMEM:DATA? 'TEST01.HCP'`
 Transfers the file TEST01.HCP from the instrument to the control computer.

Usage: SCPI confirmed

MMEMory:DELeTe <FileName>

This command deletes the indicated files.

Parameters:

<FileName> <file_name> = DOS file name
 The indication of the file name contains the path and, optionally, the drive name. Indication of the path complies with DOS conventions.

Example: `MMEM:DEL 'TEST01.HCP'`
 The file TEST01.HCP is deleted.

Usage: SCPI confirmed

MMEMory:MDIRectory <Directory>

This command creates a new directory. The file name includes indication of the path and may also include the drive name. The path name complies with DOS conventions.

Parameters:

<Directory> <directory_name> = DOS path name

Example: `MMEM:MDIR 'C:\R_S\Instr\user'`

Usage: Event

MMEMory:MOVE <FileSource>,<FileDestination>

This command renames existing files, if <file_destination> contains no path indication. Otherwise the file is moved to the indicated path and stored under the file name specified there, if any.

Parameters:

<FileSource>,<FileDestination>,<file_source>,<file_destination> = <file_name> = DOS file name
 The file name includes indication of the path and may also include the drive. The path name complies with DOS conventions.

Example: `MMEM:MOVE 'C:\TEST01.CFG', 'SETUP.CFG'`
 Renames TEST01.CFG in SETUP.CFG in directory C:\.
`MMEM:MOVE 'C:\TEST01.CFG', 'C:\R_S\Instr\user`
 Moves TEST01.CFG from C:\ to C:\R_S\Instr\user.
`MMEM:MOVE 'C:\TEST01.CFG', 'C:\R_S\Instr\user\SETUP.CFG'`
 Moves TEST01.CFG from C:\ to C:\R_S\Instr\user and renames the file in SETUP.CFG.

Usage: Event
 SCPI confirmed

MMEMory:MSIS <Device>

This command changes to the drive indicated. The drive may be the internal hard disk C:.

Parameters:

<Device> <device> = A: | C: ... Z:
 *RST: "C:
 The path name complies with DOS conventions.

Example: `MMEM:MSIS 'C:'`

Usage: SCPI confirmed

MMEMory:NAME <FileName>

This command defines a destination file for the printout started with the [HCOPY\[: IMMEDIATE<1|2>\]](#) on page 755 command. In this case the printer output must be routed to a file as destination.

In receiver mode, the command also defines the name and directory of a test report.

Parameters:

<FileName> <file_name> = DOS file name
 The file name includes indication of the path and may also include the drive name. The file name and path information comply with DOS conventions.

Example: `MMEM:NAME 'C:\R_S\instr\user\PRINT1.BMP'`
 Selects the file name.

Usage: Event
 SCPI confirmed

MMEMory:RDIrectory <Directory>

This command deletes the indicated directory. The directory name includes indication of the path and may also include the drive name. The path name complies with DOS conventions.

Parameters:

<Directory> <directory_name> = DOS path name

Example:

MMEM:RDIR 'C:\TEST'

Usage:

Event

9.9.2 Saving and Restoring Customized Data

MMEMory:CLEar:ALL.....	738
MMEMory:CLEar:STATe 1.....	738
MMEMory:LOAD:AUTO.....	738
MMEMory:LOAD:STATe.....	739
MMEMory:STORe:IQ:COMM.....	740
MMEMory:STORe:IQ:STATe.....	740
MMEMory:STORe<n>:STATe.....	740
MMEMory:STORe<n>:STATe:NEXT.....	741

MMEMory:CLEar:ALL

This command deletes all instrument configuration files in the current directory.

You can select the directory with [MMEMory:CDIRectory](#) on page 734. The default directory is C:\R_S\instr\user.

Example:

MMEM:CLE:ALL

Usage:

Event

MMEMory:CLEar:STATe 1, <FileName>

This command deletes the instrument settings file selected by <file_name>. All associated files on the mass memory storage are cleared.

Parameters:

<FileName> 1,<file_name>
 with <file_name> = DOS file name without extension
 The file name includes indication of the path and may also include the drive. The path name complies with DOS conventions.

Example:

MMEM:CLE:STAT 1, 'TEST'

Usage:

Event

MMEMory:LOAD:AUTO <Mode>

This command defines which settings file is automatically loaded after the device is switched on. The contents of the file are read after switching on the device and used to define the new device state.

The settings file defined as auto recall set can also be restored by the [*RST](#) on page 712 command.

Parameters:

<Mode> 1,'FACTORY' | 1,'<file_name>' | with <file_name>
1,'FACTORY'
 deactivates the startup recall function
1,'<file_name>'
 activates the startup recall function and defines the settings file to be loaded
with <file_name>
 DOS file name with or without extension
 The file name includes indication of the path and may also include the drive name. The path name complies with DOS conventions.

Example: MMEM:LOAD:AUTO 1, 'C:\R_S\Instr\user\TEST'

Usage: Event

MMEMory:LOAD:STATe 1, <FileName>

This command restores and activates an instrument configuration stored in a *.dfl file.

Note that files with other formats cannot be loaded with this command.

The contents that are reloaded from the file are defined by the last selection made either in the "Save/Recall" dialogs (manual operation) or through the MMEMory:SElect[:ITEM] commands (remote operation; the settings are identical in both cases).

By default, the selection is limited to the user settings ("User Settings" selection in the dialogs, HWSettings in SCPI). The selection is not reset by PRESET or *RST.

As a consequence, the results of a SCPI script using the MMEMory:LOAD:STATe command without a previous MMEMory:SElect[:ITEM] command may vary, depending on previous actions in the GUI or in previous scripts, even if the script starts with the *RST command.

It is therefore recommended that you use the appropriate MMEMory:SElect[:ITEM] command before using MMEMory:LOAD:STATe.

Parameters:

1

<FileName> DOS file name with or without extension
 The file name includes indication of the path and may also include the drive name. The path name complies with DOS conventions.

Example:

```
MMEM:SEL:ALL
//Save all items (User Settings, All Traces, All Limit Lines) from
the R&S ESRP.
MMEM:LOAD:STAT 1, 'C:\R_S\Instr\user\TEST01'
//Reloads all items
In the "Recall" dialog, select only "User Settings" and "All Limit
Lines".
MMEM:LOAD:STAT 1, 'C:\R_S\Instr\user\TEST01'
//Reloads user settings and all limit lines.
*RST
//Reset instrument.
MMEM:LOAD:STAT 1, 'C:\R_S\Instr\user\TEST01'
//Selected items are retained. Reloads user settings and all limit
lines.
Restart the instrument (using the ON/OFF key on the front
panel).
MMEM:LOAD:STAT 1, 'C:\R_S\Instr\user\TEST01'
// Selected items are set to default. Reloads only the user set-
tings.
```

Usage:

SCPI confirmed

MMEMory:STORe:IQ:COMM <Description>

Defines a description of the export file which is stored with the data and also displayed in the file selection dialog box for I/Q data import and export.

Parameters:

<Description>

Example:

```
MMEM:STOR:IQ:COMM 'Device test 1b'
Creates a description for the export file.
MMEM:STOR:IQ:STAT 1, 'C:
\R_S\Instr\user\data.iq.tar'
Stores I/Q data and the comment to the specified file.
```

MMEMory:STORe:IQ:STATe 1, <FileName>

This command stores the complex I/Q data to the specified `.iq.tar` file in 32-bit floating point format.

Parameters:

<FileName> Complete file name including the path

Example:

```
MMEM:STOR:IQ:STAT 1, 'C:
\R_S\Instr\user\data.iq.tar'
Stores I/Q data to the specified file.
```

MMEMory:STORe<n>:STATe <State>

This command stores the current device settings in a `*.dfl` file.

Suffix:

<n> irrelevant

Parameters:

<State> 1,<file_name>

with <file_name>

DOS file name with or without extension

The file name includes the indication of the path and may also include the drive name. The path name complies with DOS conventions.

Example:

MMEM:STOR:STAT 1, 'Save'

Saves the current device settings in the file Save.dfl.

Usage:Event
SCPI confirmed**MMEMory:STORe<n>:STATe:NEXT**

This command stores the current device settings in a *.dfl file. The file name used in the last saving process is automatically counted up to the next unused name.

Suffix:

<n> irrelevant

Example:

MMEM:STOR:STAT 1, 'Save'

Saves the current device settings in the file Save.dfl.

MMEM:STOR:STAT:NEXT

Saves the current device settings in the file Save_001.dfl

MMEM:STOR:STAT:NEXT

Saves the current device settings in the file Save_002.dfl

Usage:

Event

9.10 Using Transducers



Before making any changes to a transducer factor or set, you have to select one by name with `[SENSe:]CORRection:TRANsducer:SElect`.

Compared to manual configuration of transducers, any changes made to a transducer factor or set via remote control are saved after the corresponding command has been sent.

Designing a transducer factor

```
//Select a transducer factor
CORR:TRAN:SEL 'Transducer1'
//Define a comment for the transducer factor
CORR:TRAN:COMM 'Correction values for device x'
```

```
//Define the transducer factor unit
CORR:TRAN:UNIT 'DB'
//Select the scale of the frequency axis
CORR:TRAN:SCAL LOG
//Define the data points of the transducer factor
CORR:TRAN:DATA 1MHZ,-10,10MHZ,-10,100MHZ,-15,1GHZ,-15
//Turn on the transducer
CORR:TRAN ON
//Automatically adjust the reference level
CORR:TRAN:ADJ:RLEV ON
```

Managing a transducer set

```
//Select or create a transducer set
CORR:TSET:SEL 'Transducer Set'
//Define a comment for the transducer set
CORR:TSET:COMM 'Transducer set example'
//Define a unit for the transducer set
CORR:TSET:UNIT 'DB'
//Turn the transducer break on
CORR:TSET:BRE ON
//Define the first transducer range
CORR:TSET:RANG1 150KHZ,1MHZ,'Transducer 1','Transducer 3'
CORR:TSET:RANG2 1MHZ,10MHZ,'Transducer 3','Transducer 4'
CORR:TSET:RANG3 10MHZ,30MHZ,'Transducer 3'
//Turn on the transducer set
CORR:TSET ON
```

[SENSe:]CORRection:TRANsducer:ADJust:RLEVel[:STATe].....	743
[SENSe:]CORRection:TRANsducer:ACTive?.....	743
[SENSe:]CORRection:TRANsducer:CATalog?.....	743
[SENSe:]CORRection:TRANsducer:COMMeNt.....	744
[SENSe:]CORRection:TRANsducer:DATA.....	744
[SENSe:]CORRection:TRANsducer:DELeTe.....	744
[SENSe:]CORRection:TRANsducer:SCALing.....	744
[SENSe:]CORRection:TRANsducer:SELeCt.....	745
[SENSe:]CORRection:TRANsducer[:STATe].....	745
[SENSe:]CORRection:TRANsducer:UNIT.....	745
[SENSe:]CORRection:TRANsducer:VIEW.....	745
[SENSe:]CORRection:TSET:BR EAk.....	746
[SENSe:]CORRection:TSET:CATalog?.....	746
[SENSe:]CORRection:TSET:COMMeNt.....	746
[SENSe:]CORRection:TSET:DELeTe.....	747
[SENSe:]CORRection:TSET:RANGe<range>.....	747
[SENSe:]CORRection:TSET:SELeCt.....	747
[SENSe:]CORRection:TSET[:STATe].....	748
[SENSe:]CORRection:TSET:UNIT.....	748

[SENSe:]CORRection:TRANsducer:ADJust:RLEVel[:STATe] <State>

This command turns automatic adjustment of the reference level regarding the transducer factor characteristics on and off.

Before you can use the command, you have to select a transducer factor with [\[SENSe:\]CORRection:TRANsducer:SElect](#).

Parameters:

<State>

ON

Automatically adjusts the reference level with respect to the transducer factor characteristics.

OFF

Manual adjustment of the reference level with respect to the transducer factor characteristics is necessary.

*RST: OFF

Example:

See "[Designing a transducer factor](#)" on page 741.

[SENSe:]CORRection:TRANsducer:ACTive?

This command queries the currently active transducer factor.

Parameters:

<TransducerFactor> String containing the name of the transducer factor.
If no transducer factor is active, the string is empty.

Example:

CORR:TRAN:ACT?
Queries the active transducer factor.

Usage:

Query only

[SENSe:]CORRection:TRANsducer:CATalog?

This command queries all transducer factors stored on the R&S ESRP.

Parameters:

<FileInformation> String containing the file information.
'<NameFileN>,<SizeFileN>'

<NameFileN>

Name of the file.

<SizeFileN>

Size of the file in bytes.

Return values:

<UsedDiskSpace> Size of all available files containing transducer factors in byte.

<FreeDiskSpace> Remaining disk space in bytes.

Example:

CORR:TRAN:CAT?
would return, e.g.
1579,34482896896,'FACTOR1,823','FACTOR2,756'

Usage: Query only

[SENSe:]CORRection:TRANsducer:COMMeNt <Comment>

This command defines a comment for a transducer factor.

Before you can use the command, you have to select a transducer factor with [\[SENSe:\]CORRection:TRANsducer:SELeCt](#) on page 745.

Parameters:

<Comment> String containing the comment.
*RST: (empty comment)

Example: See ["Designing a transducer factor"](#) on page 741.

[SENSe:]CORRection:TRANsducer:DATA <Frequency>,<Level>

This command defines the shape of the transducer factor.

A transducer factor may contain up to 625 reference values. Each reference value is a combination of a frequency and a level value.

Before you can use this command, you have to select a transducer factor with [\[SENSe:\]CORRection:TRANsducer:SELeCt](#) on page 745.

Parameters:

<Frequency> Numeric value in Hz.
The frequency values have to be in ascending order.

<Level> The unit depends on [\[SENSe:\]CORRection:TRANsducer:UNIT](#) on page 745. By default, it is dB.

Example: See ["Designing a transducer factor"](#) on page 741.

[SENSe:]CORRection:TRANsducer:DELeTe

This command deletes a transducer factor.

Before you can use the command, you have to select a transducer factor with [\[SENSe:\]CORRection:TRANsducer:SELeCt](#).

Example: CORR:TRAN:SEL 'Transducer 1'
CORR:TRAN:DEL
Deletes the selected transducer.

Usage: Event

[SENSe:]CORRection:TRANsducer:SCALing <Scale>

This command selects the scale of the transducer factor.

Before you can use the command, you have to select a transducer factor with [\[SENSe:\]CORRection:TRANsducer:SELeCt](#) on page 745R&S ESRP.

Parameters:

<Scale> LINear | LOGarithmic
 *RST: LINear

Example: See ["Designing a transducer factor"](#) on page 741.

[SENSe:]CORRection:TRANsducer:SELEct <FileName>

This command creates or selects a transducer factor.

Parameters:

<FileName> String containing the name of the transducer factor.
 If the name does not exist yet, the R&S ESRP creates a transducer factor by that name.

Example: See ["Designing a transducer factor"](#) on page 741.

[SENSe:]CORRection:TRANsducer[:STATe] <State>

This command turns a transducer factor on and off.

Before you can use the command, you have to select a transducer factor with [\[SENSe:\]CORRection:TRANsducer:SELEct](#).

You can turn on up to 8 transducer factors at the same time.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: See ["Designing a transducer factor"](#) on page 741.

[SENSe:]CORRection:TRANsducer:UNIT <Unit>

This command selects the unit of a transducer factor.

Before you can use the command, you have to select a transducer factor with [\[SENSe:\]CORRection:TRANsducer:SELEct](#).

Parameters:

<Unit> String containing one of the following units:
 DB | DBM | DBMV | DBUV | DBUV/M | DBUA DBUA/M | DBPW |
 DBPT
 *RST: DB

Example: See ["Designing a transducer factor"](#) on page 741.

[SENSe:]CORRection:TRANsducer:VIEW <State>

This command includes or excludes a figure of a transducer factor in the diagram.

Before you can use the command, you have to select a transducer factor with [\[SENSe:\]CORRection:TRANsdUcer:SElect](#).

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

```
CORR:TRAN:SEL 'FACTOR'
CORR:TRAN:VIEW ON
Selects and displays a transducer factor.
```

[SENSe:]CORRection:TSET:BReak <State>

This command turns a transducer break on and off.

Before you can use the command, you have to select a transducer set with [\[SENSe:\]CORRection:TSET:SElect](#).

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

See "[Managing a transducer set](#)" on page 742.

[SENSe:]CORRection:TSET:CATalog?

This command queries all transducer sets stored on the R&S ESRP.

Parameters:

<UsedDiskSpace> Size of all available files containing transducer factors in byte.
 <FreeDiskSpace> Remaining disk space in bytes.

Return values:

<FileInfo> String containing the file information.
 '<NameFileN>,<SizeFileN>'
<NameFileN>
 Name of the file.
<SizeFileN>
 Size of the file in bytes.

Example:

```
CORR:TSET:CAT?
would return, e.g.
3298,34482896896,'SET1,1520','SET2,1756'
```

Usage:

Query only

[SENSe:]CORRection:TSET:COMMeNt <Comment>

This command defines a comment for a transducer set.

Before you can use the command, you have to select a transducer set with `[SENSe:]CORRection:TSET:SElect`.

Parameters:

<Comment> String containing the comment.

Example: See "Managing a transducer set" on page 742.

[SENSe:]CORRection:TSET:DElete

This command deletes a transducer set.

Before you can use the command, you have to select a transducer set with `[SENSe:]CORRection:TSET:SElect`.

Example: `CORR:TSET:SEL 'Transducer Set'`
`CORR:TSET:DEL`
 Deletes the transducer set.

Usage: Event

[SENSe:]CORRection:TSET:RANGe<range> <Frequency>, <Frequency>, <FileName>

This command selects a set of transducer factors used for a particular frequency range.

Ranges 1 to 10 must be sent in ascending order.

Before you can use the command, you have to select a transducer set with `[SENSe:]CORRection:TSET:SElect`.

Suffix:

<range> 1...10
 Selects the range.

Parameters:

<Frequency> Defines the start frequency of the frequency range.

<Frequency> Defines the stop frequency of the frequency range.

<FileName> String containing the name of the transducer factor.
 Note that you can assign up to eight transducer factors to a particular frequency range. In that case, add a number of strings containing the file name the after the first one separated by comma.

Example: See "Managing a transducer set" on page 742.

[SENSe:]CORRection:TSET:SElect <FileName>

This command creates or selects a transducer set.

Parameters:

<FileName> String containing the name of the transducer set.
If the name does not exist yet, the R&S ESRP creates a transducer set by that name.

Example: See ["Managing a transducer set"](#) on page 742.

[SENSe:]CORRection:TSET[:STATe] <State>

This command turns a transducer set on and off.

Before you can use the command, you have to select a transducer set with [\[SENSe:\]CORRection:TSET:SElect](#).

Parameters:

<State> ON | OFF
*RST: OFF

Example: See ["Managing a transducer set"](#) on page 742.

[SENSe:]CORRection:TSET:UNIT <Unit>

This command selects the unit of a transducer set.

Note that the unit of all transducer factors in a transducer set must be the same or in relative terms (dB).

Before you can use the command, you have to select a transducer set with [\[SENSe:\]CORRection:TSET:SElect](#).

Parameters:

<Unit> String containing one of the following unit:
DB | DBM | DBUV | DBUV/M | DBUA | DBUA/M | DBPW | DBPT
*RST: DB

Example: See ["Managing a transducer set"](#) on page 742.

9.11 Documentation

Table 9-23: CMAP assignment

Suffix	Description
CMAP1	Background
CMAP2	Grid
CMAP3*	Common text
CMAP4*	Check status OK
CMAP5*	Check status error
CMAP6*	Text special 1

Suffix	Description
CMAP7*	Text special 2
CMAP8	Trace 1
CMAP9	Trace 2
CMAP10	Trace 3
CMAP11	Marker info text
CMAP12	Limit lines
CMAP13	Limit and margin check 'PASS'
CMAP14	Limit and margin check 'FAIL'
CMAP15*	Softkey text
CMAP16*	Softkey background
CMAP17*	Selected field text
CMAP18*	Selected field background
CMAP19*	Softkey 3D bright part
CMAP20*	Softkey 3D dark part
CMAP21*	Softkey state 'On'
CMAP22*	Softkey state 'Dialog Open'
CMAP23*	Softkey text disabled
CMAP24	Logo
CMAP25	Trace 4
CMAP26	Grid (minor lines)
CMAP27	Marker
CMAP28	Display lines
CMAP29*	Sweep count text
CMAP30	Limit and margin check 'Text'
CMAP31	Limit and margin check '\"Margin\"'
CMAP32*	Table overall (Title Text)
CMAP33*	Table overall (Title background)
CMAP34*	Table overall (Text)
CMAP35*	Table overall (Background)
CMAP36*	Table value (Title text)
CMAP37*	Table value (Title background)
CMAP38*	Table value (Text)
CMAP39*	Table value (Background)

Suffix	Description
CMAP40	Trace 5
CMAP41	Trace 6
CMAP42	Bargraph Max Peak
CMAP43	Bargraph Min Peak
CMAP44	Bargraph Quasipeak
CMAP45	Bargraph Average
CMAP46	Bargraph RMS
CMAP47	Final measurement
CMAP48	Bargraph CISPR Average
CMAP49	Bargraph RMS Average
* these settings can only be defined via the theme, see chapter 9.13, "Display Configuration" , on page 767, and are thus ignored in the SCPI command	

HCOPy:ABORt.....	750
HCOPy:CMAP<item>:DEFault.....	750
HCOPy:CMAP<item>:HSL.....	751
HCOPy:CMAP<item>:PDEFined.....	751
HCOPy:DESTination<1 2>.....	752
HCOPy:DEVice:COLor.....	752
HCOPy:DEVice:LANGuage<1 2>.....	753
HCOPy:ITEM:ALL.....	753
HCOPy:ITEM:WINDow:TABLE:STATe.....	754
HCOPy:ITEM:WINDow:TEXT.....	754
HCOPy:PAGE:ORlentation<1 2>.....	754
HCOPy:TDSTamp:STATe<1 2>.....	754
HCOPy[:IMMediate<1 2>].....	755
HCOPy[:IMMediate<1 2>]:NEXT.....	755
SYSTem:COMMunicate:PRINter:ENUMerate:FIRST?.....	756
SYSTem:COMMunicate:PRINter:ENUMerate[:NEXT]?.....	756
SYSTem:COMMunicate:PRINter:SElect <1 2>.....	756

HCOPy:ABORt

This command aborts a running hardcopy output.

Example: HCOP:ABOR

Usage: Event
SCPI confirmed

HCOPy:CMAP<item>:DEFault <ColorSet>

This command defines the color scheme for print jobs.

Suffix:

<item>

Selects the display item. For more information see [table 9-23](#).**Parameters:**

<ColorSet>

1 | 2 | 3 | 4

1

current screen colors with the background in white and the grid in black.

2

optimized color set

3

user defined color set

4

current screen colors without any changes (setting for hardcopies)

Example:

HCOP:CMAP:DEF2

Selects the optimized color set for the color settings of a printout or a hardcopy.

Usage:

Event

SCPI confirmed

HCOPy:CMAP<item>:HSL

This command selects the color for various screen elements in print jobs.

The values set are not changed by *RST.

Suffix:

<item>

Selects the display item. For more information see [table 9-23](#).**Parameters:**

hue | sat | lum

hue

tint

sat

saturation

lum

brightness

The value range is 0 to 1 for all parameters.

Example:

HCOP:CMAP2:HSL 0.3,0.8,1.0

Changes the grid color

Usage:

SCPI confirmed

HCOPy:CMAP<item>:PDEfined <Color>

This command selects a predefined color for various screen elements in print jobs.

The values set are not changed by *RST.

Suffix:

<item> Selects the display item. For more information see [table 9-23](#).

Parameters:

<Color> BLACK | BLUE | BROWN | GREEN | CYAN | RED | MAGenta |
YELLow | WHITE | DGRAY | LGRAY | LBLUE | LGREEN |
LCYan | LRED | LMAGenta

Example:

HCOP:CMAP2:PDEF GRE

Usage:

SCPI confirmed

HCOPY:DESTination<1|2> <Medium>

This command selects the destination of a print job.

The type of instrument is selected with [SYSTEM:COMMunicate:PRINter:SElect <1|2>](#), which automatically selects a default output medium. Therefore [HCOPY:DESTination](#) should always be sent after setting the device type.

The suffix <1|2> selects the printing device.

Parameters:

<Medium>

'MMEM'

Sends the hardcopy to a file.

You can select the file name with [MMEMory:NAME](#)

You can select the file format with [HCOPY:DEvice:LANGuage<1|2>](#).

'SYST:COMM:PRIN'

Sends the hardcopy to the printer.

You can select the printer with [SYSTEM:COMMunicate:PRINter:SElect <1|2>](#).

'SYST:COMM:CLIP'

Sends the hardcopy to the clipboard.

The format should be WEMF.

*RST: SYST:COMM:CLIP

Example:

SYST:COMM:PRIN:SEL2 'LASER on LPT1'

Selects the printer and output medium for device 2.

HCOP:DEST2 'SYST:COMM:PRIN'

Selects the printer interface as device 2.

Usage:

SCPI confirmed

HCOPY:DEvice:COLor <State>

This command turns color printing on and off.

Parameters:

<State> ON | OFF
ON
 Color output
OFF
 Black and white output
 *RST: OFF

Example: HCOP:DEV:COL ON

Usage: SCPI confirmed

HCOPy:DEvice:LANGuage<1|2> <Format>

This command selects the file format for a print job.

The suffix <1|2> selects the printing device.

Parameters:

<Format>

GDI

Graphics Device Interface:

Default format for the output to a printer configured under Windows. Must be selected for the output to the printer interface.

Can be used for the output to a file. The printer driver configured under Windows is used in this case and a printer-specific file format is thus generated.

(see also [HCOPy:DESTination<1|2>](#) command)

Available for [HCOPy:MODE SCReen](#).

WMF | EWMF

WINDOWS Metafile and Enhanced Metafile Format:

Data formats for output files which can be integrated in corresponding programs for documentation purposes at a later time.

WMF can only be used for output to a file and EWMF also for the output to the clipboard.

(see also [HCOPy:DESTination<1|2>](#) command)

Available for [HCOPy:MODE SCReen](#).

BMP | JPG | PNG

Data format for output to files only.

Available for [HCOPy:MODE SCReen](#).

PDF | RTF

Selects the output format of the test report in Receiver mode.

Available for [HCOPy:MODE REPort](#).

Example: HCOP:DEV:LANG WMF

Usage: SCPI confirmed

HCOPy:ITEM:ALL

This command includes all screen elements in the printout.

The screen elements include comments, title, time and date.

Example: `HCOP:ITEM:ALL`

Usage: Event
SCPI confirmed

HCOPy:ITEM:WINDow:TABLE:STATe <State>

This command turns printing of the currently active table on and off.

Parameters:

<State> ON | OFF
*RST: OFF

Example: `HCOP:ITEM:WIND:TAB:STAT ON`

HCOPy:ITEM:WINDow:TEXT <Comment>

This command defines a comment added to the printout.

Parameters:

<Comment> String containing the comment with a maximum of 100 characters. The line feed is by means of the characters @.

Example: `HCOP:ITEM:WIND:TEXT 'comment '`

HCOPy:PAGE:ORIENTATION<1|2> <Orientation>

The command selects the format of the printout.

The command is only available if the output device is a printer (see [HCOPy:DESTINATION<1|2>](#) on page 752).

Parameters:

<Orientation> LANDscape | PORTRait
*RST: PORT

Example: `HCOP:PAGE:ORI LAND`

Usage: SCPI confirmed

HCOPy:TDSTamp:STATe<1|2> <State>

This command includes or excludes the time and date in the printout.

The suffix <1|2> selects the printing device.

Parameters:

<State> ON | OFF
*RST: OFF

Example: `HCOP:TDST:STAT OFF`

HCOPy[:IMMEDIATE<1|2>]

This command initiates a print job.

If you are printing to a file, the file name depends on [MMEMory:NAME](#).

The suffix <1|2> selects the printing device.

The command also generates a measurement report when you have selected [HCOPy:MODE REPort](#). Note that you have to add at least one dataset to the report with [HCOPy:TREPort:NEW](#) on page 764 or [HCOPy:TREPort:APPend](#). Otherwise creating the report results in an error.

Example:

```
HCOP:DEV:LANG BMP
Selects the data format.
HCOP:DEST 'MMEM'
Directs the hardcopy to a file.
MMEM:NAME 'C:\R_S\instr\user\Print.bmp'
Selects the file name. If the file Print.bmp already exists, it is
replaced.
HCOP
Saves the hardcopy output into the file Print.bmp.
```

Example:

```
HCOP:MODE REPort
HCOP:DEV:LANG PDF
HCOP:TREP:NEW
HCOP
Creates a measurement report (in pdf format).
```

Usage:

```
Event
SCPI confirmed
```

HCOPy[:IMMEDIATE<1|2>]:NEXT

This command initiates a print job.

If you are printing to a file, the file name depends on [MMEMory:NAME](#). This command adds a consecutive number to the file name.

The suffix <1|2> selects the printing device.

Example:

```
HCOP:DEV:LANG BMP
Selects the data format.
HCOP:DEST 'MMEM'
Directs the hardcopy to a file.
MMEM:NAME 'C:\R_S\instr\user\Print.bmp'
Selects the file name.
HCOP
Saves the hardcopy output into the file Print.bmp.
HCOP:NEXT
Saves the hardcopy output into the file Print_001.bmp.
HCOP:NEXT
Saves the hardcopy output into the file Print_002.bmp.
```

Usage: Event
SCPI confirmed

SYSTem:COMMunicate:PRINter:ENUMerate:FIRSt?

This command queries the name of the first printer (in the list of printers) available under Windows XP.

The names of other installed printers can be queried with the `SYSTem:COMMunicate:PRINter:ENUMerate[:NEXT]?` command.

If no printer is configured an empty string is output.

Parameters:

*RST: NONE

Example: SYST:COMM:PRIN:ENUM:FIRS?

Usage: Query only

SYSTem:COMMunicate:PRINter:ENUMerate[:NEXT]?

This command queries the name of the next printer installed under Windows XP. After all available printer names have been output, an empty string enclosed by quotation marks (") is output for the next query. Further queries are answered by a query error.

The `SYSTem:COMMunicate:PRINter:ENUMerate:FIRSt?` command should be sent previously to return to the beginning of the printer list and query the name of the first printer.

Example: SYST:COMM:PRIN:ENUM?

Usage: Query only

SYSTem:COMMunicate:PRINter:SELEct <1|2> <PrinterName>

This command selects one of the printers configured under Windows XP including the associated output destination.

The specified printer name must be a string (entered in quotes) as returned by the commands

`SYSTem:COMMunicate:PRINter:ENUMerate:FIRSt?` or

`SYSTem:COMMunicate:PRINter:ENUMerate[:NEXT]?`

The `HCOPy:DESTination<1|2>` on page 752 command is used to select an output medium other than the default one.

Parameters:

<PrinterName> "<printer_name>"

*RST: NONE

Example: SYST:COMM:PRIN:SEL "LASER on LPT1"

9.12 Working with Test Reports

- [Designing a Test Report Template](#)..... 757
- [Creating a Test Report](#)..... 763
- [Deprecated Commands \(Test Report\)](#)..... 766

9.12.1 Designing a Test Report Template

- [Selecting the Test Report Contents](#)..... 757
- [Designing the Header of the Test Report](#)..... 759
- [Defining the Contents of the Title Page](#)..... 761
- [Managing Templates](#)..... 762

9.12.1.1 Selecting the Test Report Contents

- [HCOPy:TREPort:ITEM:DEFault](#)..... 757
- [HCOPy:TREPort:ITEM:SElect](#)..... 757

HCOPy:TREPort:ITEM:DEFault

This command restores the default configuration of the test report regarding the information that is part of the report (in the "Configuration" tab of the "Test Report Settings" dialog box).

It also restores the default names of the header titles (in the "Header" tab of the "Test Report Settings" dialog box).

Example: `HCOP:TREP:ITEM:DEF`
Restores the default test report configuration.

Usage: Event

HCOPy:TREPort:ITEM:SElect <Item>,<Item>,<Item>,...

This command defines the type of information that a set of data is made up out of.

Parameters:

<Item> String containing the information you want to include or exclude from the test report.
Note that the items, separated by commas, have to be written into one string.
The available items depend on the application you are using.
See the tables below for a short description of each item.

Example: `HCOP:TREP:ITEM:SEL`
`'HEAD,SETT,MARK,SRES,DIAG,TDST,PAG'`
Each dataset consists of the header information, the measurement settings, marker information, the scan results, a screenshot of the scan trace, a time stamp and page numbers.

Table 9-24: Available <items> in Receiver application

<Item>	Description	Default
DIAGram	Screenshot of the scan results.	x
FRESults	Numerical results for the final measurement.	x
HEADer	Header made up of several lines of information that is (by default) displayed on each page of the test report.	x
IF	Screenshot of the results for IF analysis.	
IFSPectrogram	Screenshot of the IF spectrogram.	
MARKers	Contents of the marker table.	
PAGecount	Page numbers.	x
PREResults	Contents of the peak list.	
SCANtable	Measurement configuration as defined in the scan table.	x
SETTings	Settings that have been used during a measurement.	x
SPECtrogram	Screenshot of the spectrogram.	
SRESults	Numerical results for the scan.	
TDSTamp	Date and time of the measurement.	x
TRANsducer	Characteristics of the transducer.	

Table 9-25: Available <items> in Spectrum application

<Item>	Description	Default
DIAGram	Screenshot of the scan results.	x
HEADer	Header made up of several lines of information that is (by default) displayed on each page of the test report.	x
PAGecount	Page numbers.	x
RESultlist	Numerical measurement results.	
SETTings	Settings that have been used during a measurement.	x
SPECtrogram	Screenshot of the spectrogram.	
TDSTamp	Date and time of the measurement.	x
TRANsducer	Characteristics of the transducer.	

Table 9-26: Available <items> in I/Q Analyzer

<Item>	Description	Default
DIAGram	Screenshot of the result diagram.	x
HEADer	Header made up of several lines of information that is (by default) displayed on each page of the test report.	x
PAGecount	Page numbers.	x
RESultlist	Numerical measurement results.	

<Item>	Description	Default
SETTings	Settings that have been used during a measurement.	x
TDSTamp	Date and time of the measurement.	x
TRANsducer	Characteristics of the transducer.	

9.12.1.2 Designing the Header of the Test Report

Commands useful to design the test report header described elsewhere:

- [HCOPy:TREPort:ITEM:DEFAult](#) on page 757

HCOPy:TREPort:ITEM:HEADer:LINE<line>:CONTRol	759
HCOPy:TREPort:ITEM:HEADer:LINE<line>:TEXT	760
HCOPy:TREPort:ITEM:HEADer:LINE<line>:TITLe	760
HCOPy:TREPort:ITEM:LOGO	761
HCOPy:TREPort:ITEM:LOGO:CONTRol	761

HCOPy:TREPort:ITEM:HEADer:LINE<line>:CONTRol <Repetition>

This command selects how often the items in the report header are displayed in the document.

Suffix:

<line> 1...7
Selects the header line.

Parameters:

<Repetition>

ALWays

The selected header line is displayed at the top of every page of the report.

NEVer

The selected header line is displayed on no page of the report. Note that a line that does not contain anything is still displayed in the report as a blank line. If you select NEVer, the line is not displayed at all.

ONCE

The selected header line is displayed on the first page each dataset.

*RST: ALWays

Example:

```
HCOP:TREP:ITEM:HEAD:LINE4:TITL ' '
HCOP:TREP:ITEM:HEAD:LINE4:TEXT ' '
```

Defines an empty string for line 4 of the report header. In the default state (ALWays), the line would be still displayed as a blank line.

```
HCOP:TREP:ITEM:HEAD:LINE4:CONT NEV
```

Removes line 4 from the header of the test report.

HCOPy:TREPort:ITEM:HEADer:LINE<line>:TEXT <Description>

This command defines a descriptive text for one of the items part of the report header.

You can define up to 7 items in the header. Use [HCOPy:TREPort:ITEM:HEADer:LINE<line>:TITLE](#) on page 760 to define custom titles for each item.

Use [HCOPy:TREPort:ITEM:HEADer:LINE<line>:CONTrol](#) to select the circumstance under which each item is shown.

Suffix:

<line> 1...7
Selects the header line.

Parameters:

<Description> String containing the description of one of the value fields of the header.
By default, the value fields of the header items are empty.

Example:

```
HCOP:TREP:ITEM:HEAD:LINE3:TITL 'Device under
Test '
Renames the third header title into "Device under Test".
HCOP:TREP:ITEM:HEAD:LINE3:TEXT 'Some Device '
```

HCOPy:TREPort:ITEM:HEADer:LINE<line>:TITLE <Title>

This command defines a custom name for one of the items part of the report header.

You can define up to 7 items in the header.

Use [HCOPy:TREPort:ITEM:HEADer:LINE<line>:TEXT](#) to add a value to each item.

Use [HCOPy:TREPort:ITEM:HEADer:LINE<line>:CONTrol](#) to select the circumstance under which each item is shown.

Suffix:

<line> 1...7
Selects the header line.

Parameters:

<Title> String containing the title of the header item.
The default titles are as follows:

- Line 1: "Heading"
- Line 2: "Meas Type"
- Line 3: "Equipment under Test"
- Line 4: "Manufacturer"
- Line 5: "OP Condition"
- Line 6: "Operator"
- Line 7: "Test Spec"

Make sure that the title string is not too long, because strings that are too long could mess up the layout of the report.

Example: `HCOP:TREP:ITEM:HEAD:LINE3:TITL 'Device under Test'`
 Renames the third header title into "Device under Test".

HCOPy:TREPort:ITEM:LOGO <FileName>

This command selects a graphic (for example a company logo) that is shown at the top of each page in the test report.

Use `HCOPy:TREPort:ITEM:LOGO:CONTrol` on page 761 to select the circumstance under which the picture is shown.

Parameters:

<FileName> String containing the location and name of the picture.
 For reports in **pdf** format, you can use the following file types:
bmp, jpg, png.
 For reports in **rtf** format, you can use the following file types:
bmp, jpg.

Example: `HCOP:TREP:ITEM:LOGO 'C:\aPicture.jpg'`
 Includes a picture at the top of each page of the report.

HCOPy:TREPort:ITEM:LOGO:CONTrol <Repetition>

This command selects how often the logo is displayed in the document.

Parameters:

<Repetition>

- ALWays**
The logo is displayed at the top of every page of the report.
- NEVer**
The logo is displayed on no page of the report.
- ONCE**
The logo is displayed on the first page of each dataset.
- *RST: NEVer**

Example: `HCOP:TREP:ITEM:LOGO 'c:\logo.png'`
 Selects a picture to be displayed in the report document.
`HCOP:TREP:ITEM:LOGO:CONT ONCE`
 Displays the logo on the first page of each dataset.

9.12.1.3 Defining the Contents of the Title Page

<code>HCOPy:TREPort:DESCription</code>	761
<code>HCOPy:TREPort:PAGesize</code>	762
<code>HCOPy:TREPort:TITLe</code>	762

HCOPy:TREPort:DESCription <Description>

This command defines the description of the test report as shown on its title page.

Parameters:

<Description> String containing the description of the test report.

Example:

HCOP:TREP:DESC 'A short summary of the test report.'

Adds a description to the test report.

HCOPy:TREPort:PAGesize <Size>

This command selects the size of the test report document.

Parameters:

<Size>

A4

Document pages have an A4 size.

US

Document pages have a US letter size.

*RST: A4

Example:

HCOP:TREP:PAG A4

Selects the A4 size for the document.

HCOPy:TREPort:TITLe <Title>

This command defines the title for the test report as shown on its title page.

Parameters:

<Title>

String containing the title.

Example:

HCOP:TREP:TITL 'My first test report'

Defines a title for a test report.

9.12.1.4 Managing Templates

HCOPy:TREPort:ITEM:TEMPlate:CATalog?	762
HCOPy:TREPort:ITEM:TEMPlate:DELeTe	763
HCOPy:TREPort:ITEM:TEMPlate:LOAD	763
HCOPy:TREPort:ITEM:TEMPlate:SAVE	763

HCOPy:TREPort:ITEM:TEMPlate:CATalog?

This command queries the test report templates available on the system.

Return values:

<Templates>

String containing the name of the templates as a comma separated list.

Example:

HCOP:TREP:ITEM:TEMP:CAT?

would return, e.g.:

'TemplateX, TemplateY, TemplateZ'

Usage:

Query only

HCOPy:TREPort:ITEM:TEMPlate:DELeTe <Template>

This command deletes a test report template.

Parameters:

<Template> String containing the name of the template.

Example:

HCOP:TREP:ITEM:TEMP:DEL 'myTemplate'
Deletes a test report template.

Usage:

Event

HCOPy:TREPort:ITEM:TEMPlate:LOAD <Template>

This command loads a test report template.

Parameters:

<Template> String containing the name of the template.

Example:

HCOP:TREP:ITEM:TEMP:LOAD 'myTemplate'
Loads a test report template.

Usage:

Event

HCOPy:TREPort:ITEM:TEMPlate:SAVE <Template>

This command saves a test report template.

Parameters:

<Template> String containing the name of the template.

Example:

HCOP:TREP:ITEM:TEMP:SAVE 'myTemplate'
Saves a test report template.

Usage:

Event

9.12.2 Creating a Test Report

- [Configuring and Printing the Test Report](#).....763
- [Adding and Removing Datasets](#).....764
- [Selecting Datasets for the Report](#).....765

9.12.2.1 Configuring and Printing the Test Report

Commands useful to configure and print the test report described elsewhere:

- [HCOPy:DEvice:LANGuage<1|2>](#) on page 753
- [HCOPy\[:IMMediate<1|2>\]](#) on page 755
- [MMEMoRY:NAME](#) on page 737

[HCOPy:MODE](#).....764

HCOPy:MODE <Mode>

Selects the output of the [HCOPy\[:IMMediate<1|2>\]](#) on page 755 command.

Parameters:

<Mode>

SCReen

HCOPy:IMMediate prints the current screen contents.

REPort

HCOPy:IMMediate generates a measurement report.

*RST: SCReen

Example:

HCOP:MODE REPort

HCOP

Creates a file containing the measurement report.

9.12.2.2 Adding and Removing Datasets

HCOPy:TREPort:APPend	764
HCOPy:TREPort:NEW	764
HCOPy:TREPort:TEST:REMove	765
HCOPy:TREPort:TEST:REMove:SElected	765

HCOPy:TREPort:APPend

This command adds the current measurement results to the test report.

The saved data depends on the items you have selected with [HCOPy:TREPort:ITEM:SElect](#) on page 757.

Example:

Perform a measurement, then:

HCOP:TREP:NEW

Creates a new test report with the results of the first measurement.

Perform another measurement, then:

HCOP:TREP:APP

Adds the results of the second measurement to the test report.

Usage:

Event

HCOPy:TREPort:NEW

This command creates a new test report.

Creating a new test report deletes all previously saved datasets. The current measurement results are added as the first dataset to the new report.

The R&S ESRP saves the data selected with [HCOPy:TREPort:ITEM:SElect](#) on page 757.

Example:

HCOP:TREP:NEW

Creates a new test report.

Usage: Event

HCOPy:TREPort:TEST:REMove <Dataset>

This command deletes one of the datasets that are currently part of a test report.

Parameters:

<Dataset> Index number of the dataset as shown in the "Test Report Content Selection" dialog box.
If the index number is greater than the number of available datasets, the command does nothing.

Example: HCOP:TREP:TEST:REM 2
Deletes the second dataset from the current test report.

HCOPy:TREPort:TEST:REMove:SELEcted

This command deletes all selected datasets that are currently part of a test report.

Example: HCOP:TREP:TEST:SEL:NONE
Deselects all datasets.
HCOP:TREP:TEST:SEL 2,ON
HCOP:TREP:TEST:SEL 3,ON
Selects the second and third datasets.
HCOP:TREP:TEST:REM:SEL
Deletes the selected datasets (the second and third).

Usage: Event

9.12.2.3 Selecting Datasets for the Report

HCOPy:TREPort:TEST:SELEct.....	765
HCOPy:TREPort:TEST:SELEct:ALL.....	766
HCOPy:TREPort:TEST:SELEct:INVert.....	766
HCOPy:TREPort:TEST:SELEct:NONE.....	766

HCOPy:TREPort:TEST:SELEct <Dataset>, <State>

This command includes or excludes datasets from the test report.

Parameters:

<Dataset> Index number of the dataset as shown in the "Test Report Content Selection" dialog box.
If the index number is greater than the number of available datasets, the command does nothing.

<State> ON | OFF

Example: HCOP:TREP:TEST:SEL 2, OFF
Excludes the second dataset from the test report.

HCOPy:TREPort:TEST:SElect:ALL

This command includes all available datasets in a test report.

Example: HCOP:TREP:TEST:SEL:ALL
Includes all available datasets in the test report.

Usage: Event

HCOPy:TREPort:TEST:SElect:INVert

This command inverts the current selection of datasets to be included in the test report.

Datasets that have been included in the report before will no longer be part of the report. Instead, the previously deselected datasets will be included.

Example: HCOP:TREP:TEST:SEL:INV
Inverts the selection of dataset to be included in a test report.

Usage: Event

HCOPy:TREPort:TEST:SElect:NONE

This command excludes all datasets from the test report.

Example: HCOP:TREP:TEST:SEL:NONE
Removes all dataset from the test report.

Usage: Event

9.12.3 Deprecated Commands (Test Report)

Following is a list of deprecated remote commands. The remote commands are still supported to maintain compatibility to previous Rohde & Schwarz receivers (like the R&S ESU), but it is strongly recommended to use the command system in the way it is meant to be used in the R&S ESRP.

Legacy command	Replaced by	Comment
HCOPy:TREPort:ITEM:HEADer:STATe	HCOPy:TREPort:ITEM:SElect	Items now selected by the command parameter.
HCOPy:TREPort:ITEM:DIAGram:STATe	HCOPy:TREPort:ITEM:SElect	Items now selected by the command parameter.
HCOPy:TREPort:ITEM:FRESults:STATe	HCOPy:TREPort:ITEM:SElect	Items now selected by the command parameter.
HCOPy:TREPort:ITEM:PAGeCount:STATe	HCOPy:TREPort:ITEM:SElect	Items now selected by the command parameter.
HCOPy:TREPort:ITEM:SCANtable:STATe	HCOPy:TREPort:ITEM:SElect	Items now selected by the command parameter.
HCOPy:TREPort:ITEM:SRESults:STATe	HCOPy:TREPort:ITEM:SElect	Items now selected by the command parameter.

Legacy command	Replaced by	Comment
HCOpy:TREPort:ITEM:TDSTamp:STaTe	HCOpy:TREPort:ITEM:SElect	Items now selected by the command parameter.
HCOpy:TREPort:ITEM:TRANsdUcer:STaTe	HCOpy:TREPort:ITEM:SElect	Items now selected by the command parameter.

9.13 Display Configuration

- Controlling Display Elements.....767
- Selecting Items to Store and Restore.....774

9.13.1 Controlling Display Elements

DISPlay:ANNotation:FREQuency.....	767
DISPlay:CMAP<item>:DEFault.....	768
DISPlay:CMAP<item>:HSL.....	768
DISPlay:CMAP<item>:PDEFined.....	768
DISPlay:FORMat.....	769
DISPlay:LOGO.....	769
DISPlay:PSAVe:HOLDoff.....	769
DISPlay:PSAVe[:STaTe].....	769
DISPlay:SBAR[:STaTe].....	770
DISPlay:SKEYs[:STaTe].....	770
DISPlay:TBAR[STaTe].....	770
DISPlay:THEMe:CATalog?.....	770
DISPlay:THEMe:SElect.....	770
DISPlay:TOUCHscreen:STaTe.....	771
DISPlay[:WINDow<n>][:SUBWindow<m>]:SIZE.....	771
DISPlay[:WINDow<n>][:SUBWindow<m>]:SElect.....	772
DISPlay[:WINDow<n>]:TEXT:STaTe.....	772
DISPlay[:WINDow<n>]:TEXT[:DATA].....	773
DISPlay[:WINDow<n>]:TIME.....	773
DISPlay[:WINDow<n>]:TIME:FORMat.....	773
INITiate<n>:DISPlay.....	774

DISPlay:ANNotation:FREQuency <State>

This command switches the x-axis annotation on or off.

Parameters:

<State> ON | OFF
 *RST: ON

Example: DISP:ANN:FREQ OFF

Usage: SCPI confirmed

DISPlay:CMAP<item>:DEFault <Setting>

This command resets the screen colors of all display items to their default settings.

Suffix:

<item> irrelevant

Parameters:

<Setting> 1 | 2
Default settings DEFault1 and DEFault2

Example:

DISP:CMAP:DEF2
Selects default setting 2 for setting the colors.

Usage:

Event
SCPI confirmed

DISPlay:CMAP<item>:HSL <ColorTable>

This command defines the color table of the instrument.

The set values are not changed by *RST.

Suffix:

<item> Selects the display item. For more information see [table 9-23](#).

Parameters:

<ColorTable> hue | sat | lum
hue
TINT
sat
SATURATION
lum
BRIGHTNESS
The value range is 0 to 1 for all parameters.

Example:

DISP:CMAP2:HSL 0.3,0.8,1.0
Changes the grid color.

Usage:

SCPI confirmed

DISPlay:CMAP<item>:PDEFined <Color>

This command defines the color table of the instrument using predefined color values. Each suffix of CMAP is assigned to one or several graphical elements which can be modified by varying the corresponding color setting.

The values set are not changed by *RST.

Suffix:

<item> Selects the display item. For more information see [table 9-23](#).

Parameters:

<Color> BLACK | BLUE | BROWn | GREen | CYAN | RED | MAGenta |
 YELLOW | WHITE | DGRAY | LGRAY | LBLUE | LGREEN |
 LCYan | LRED | LMAGenta

Example:

DISP:CMAP2:PDEF GRE

Usage:

SCPI confirmed

DISPlay:FORMat <Format>

This command switches the measurement result display between FULL SCREEN and SPLIT SCREEN.

Parameters:

<Format> SINGle | SPLit
SPLit
 Show 2 or more screens on the display
SINGle
 Show only 1 screen on the display
 *RST: SPL

Example:

DISP:FORM SING

DISPlay:LOGO <State>

This command switches the company logo on the screen on or off.

Parameters:

<State> ON | OFF
 *RST: ON

Example:

DISP:LOGO OFF

DISPlay:PSAVe:HOLDoff <Minutes>

This command sets the holdoff time for the power-save mode of the display. The available value range is 1 to 60 minutes, the resolution 1 minute. The entry is dimensionless.

Parameters:

<Minutes> 1 to 60
 *RST: 15

Example:

DISP:PSAV:HOLD 30

DISPlay:PSAVe[:STATe] <State>

This command switches on or off the power-save mode of the display. With the power-save mode activated the display including backlight is completely switched off after the elapse of the response time (see [DISPlay:PSAVe:HOLDoff](#) command).

This mode is recommended to protect the display, especially if the instrument is operated exclusively via remote control.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

DISP:PSAVE ON
Switches on the power-save mode.

DISPlay:SBAR[:STATe] <State>

This command turns the status bar in the display on and off.

Parameters:

<State> ON | OFF
*RST: ON

Example:

DISP:SBAR OFF

DISPlay:SKEYs[:STATe] <State>

This command turns the softkey bar in the display on and off.

Parameters:

<State> ON | OFF
*RST: ON

Example:

DISP:SKEY OFF

DISPlay:TBAR[STATe] <State>

This command turns the toolbar in the display on or off.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

DISP:TOOL ON

DISPlay:THEMe:CATalog?

This command queries the available themes for the display.

Example:

DISP:THEMe:CAT?

Usage:

Query only

DISPlay:THEMe:SElect <Theme>

This command selects a theme for the screen display. The theme defines the colors used for keys and screen elements, for example.

Parameters:

<Theme> String containing the name of the theme.
 *RST: SPL

Example: DISP:THEM:SEL "OceanBlue"

DISPlay:TOUCHscreen:STATe <State>

This command turns the touch screen functionality on, off, or partially on.

Parameters:

<State> ON | OFF | FRAME
ON
 Touch screen function is active for entire screen
OFF
 Touch screen is deactivated for entire screen
FRAME
 Touch screen is deactivated for the diagram area of the screen, but active for the surrounding Softkeys, toolbars and menus.
 *RST: ON

Example: DISP:TOUC:STAT ON

DISPlay[:WINDow<n>][:SUBWindow<m>]:SIZE <Size>

This command configures the measurement display.

Suffix:

<n> 1 | 2
 window;
 Channel and adjacent-channel power measurements: Only "1" is allowed as a suffix for the window.
 Spectrum Emission Mask and Spurious Emissions measurements:
 selects the window that is displayed in full size (if no suffix is defined, "1" is used):
 1: diagram/result list
 2: marker table

<m> 1 | 2
 selects the item in the window to be displayed in full size:
 1: diagram
 2: result list

Parameters:

<Size>

LARGe | SMALI

LARGe

Channel and adjacent-channel power measurements: diagram in full screen.

Spectrum Emission Mask and Spurious Emissions measurements: diagram or list in full screen, depending on the value of the suffix.

SMALI

split screen (diagram and list and table)

*RST: SMALI

Example:

DISP:SIZE LARG

Displays the measurement diagram in full screen size.

DISP:WIND1:SUBW2:SIZE LARG

Displays the result list in full screen size.

DISP:WIND2:SIZE LARG

Displays the marker table in full screen size.

Mode:

all

DISPlay[:WINDow<n>][:SUBWindow<m>]:SElect

This command selects which window (screen) is active for applications with more than one measurement window. For measurements with additional subwindows (e.g. SEM, ACLR), the subwindow can also be selected.

Suffix:

<n>

1...4

window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m>

1...2

1: graphic

2: table

For applications that do not have subwindows, the suffix <m> is irrelevant.

Parameters:

*RST: 1

Example:

DISP:WIND1:SEL

Sets the window 1 active.

DISP:WIND1:SUBW2:SEL

Sets the focus on the table of window 1.

DISPlay[:WINDow<n>]:TEXT:STATe <State>

This command turns the display of the comment (screen title) on and off.

Suffix:

<n>

Selects the measurement window.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

DISP:TEXT:STAT ON
 Switches on the title.

DISPlay[:WINDow<n>]:TEXT[:DATA] <Comment>

This command defines a comment (max. 20 characters) which can be displayed in one of the measurement windows.

Suffix:

<n> Selects the measurement window.

Parameters:

<Comment> *RST: (empty)

Example:

DISP:WIND:TEXT 'Noise Measurement'
 Defines the screen title.

DISPlay[:WINDow<n>]:TIME <State>

This command turns the display of date and time on and off.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

DISP:TIME ON

DISPlay[:WINDow<n>]:TIME:FORMat <Format>

This command selects the time and date display format.

Suffix:

<n> irrelevant

Parameters:

<Format> US | DE
 *RST: DE

Example:

DISP:TIME ON
 Switches the screen display of date and time on.
 DISP:TIME:FORM US
 Switches the date and time format to US.

INITiate<n>:DISPlay <State>

This command turns the display during a single sweep measurement on or off.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF

*RST: ON

Example:

INIT:CONT OFF

Switches to single sweep mode

INIT:DISP OFF

Sets the display behavior to OFF

INIT; *WAI

Starts the measurement with display switched off.

9.13.2 Selecting Items to Store and Restore

MMEMory:SElect[:ITEM]:ALL.....	774
MMEMory:SElect[:ITEM]:DEFault.....	774
MMEMory:SElect[:ITEM]:HWSettings.....	774
MMEMory:SElect[:ITEM]:LINes:ALL.....	775
MMEMory:SElect[:ITEM]:NONE.....	775
MMEMory:SEL[:ITEM]:SGRam.....	775
MMEMory:SElect[:ITEM]:TRACe[:ACTive].....	776
MMEMory:SElect[:ITEM]:TRANsducer:ALL.....	776
MMEMory:USER<Softkey>.....	776

MMEMory:SElect[:ITEM]:ALL

This command includes all data subsets in the list of device settings to be stored/loaded.

Example: MMEM:SEL:ALL

Usage: Event

MMEMory:SElect[:ITEM]:DEFault

This command includes the default list in the settings file to be stored/loaded. For details on hardware settings refer to the [MMEMory:SElect\[:ITEM\]:HWSettings](#) on page 774 command.

Example: MMEM:SEL:DEFault

MMEMory:SElect[:ITEM]:HWSettings <State>

This command includes the hardware settings in the settings file to be stored/loaded. The hardware settings include:

- current configuration of general device parameters (general setup)
- current setting of the measurement hardware including markers
- activated limit lines:

A settings file may include 8 limit lines at maximum. This number includes the activated limit lines and, if available, the de-activated limit lines last used.

Therefore the combination of the non-activated restored limit lines depends on the sequence of use with the `MMEMory:LOAD:STATe` on page 739 command.

- user-defined color setting
- configuration for the hardcopy output

Parameters:

<State> ON | OFF
 *RST: ON

Example: `MMEM:SEL:HWS ON`

MMEMory:SElect[:ITEM]:LINEs:ALL <State>

This command includes all limit lines (activated and de-activated) in the settings file to be stored/loaded.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: `MMEM:SEL:LIN:ALL ON`

MMEMory:SElect[:ITEM]:NONE

This command excludes all items from the settings file to be stored/loaded.

Example: `MMEM:SEL:NONE`

Usage: Event

MMEMory:SEL[:ITEM]:SGRam <State>

This command includes or excludes spectrogram data when storing or restoring a configuration file.

Parameters:

<State> ON | OFF

Example: `MMEM:SEL:SGR ON`
 Adds spectrogram data to the configuration file.

MMEMory:SElect[:ITEM]:TRACe[:ACTive] <State>

This command includes the active traces in the settings file to be stored/loaded. Active traces are all traces whose state is not blank.

Parameters:

<State> ON | OFF
 *RST: OFF, i.e. no traces is stored

Example: MMEM:SEL:TRAC ON

MMEMory:SElect[:ITEM]:TRANsducer:ALL <State>

This command includes all transducer factors and sets in the settings file to be stored/loaded.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: MMEM:SEL:TRAN:ALL ON

MMEMory:USER<Softkey> <Filename>, <Label>

This command defines the settings file to be loaded when the specified user-definable softkey is selected. The settings file must exist, otherwise an error occurs.

Suffix:

<Softkey> 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8
 Number of the softkey in the "User" menu.

Parameters:

<Filename> string
 This parameter defines the path and file name of the settings to be loaded.

<Label> string
 This parameter defines the label of the user-definable softkey.

*RST: User<Softkey_number>

Example: MMEM:USER1 'C:\MySaveSets\Set1', 'Set1'
 Loads settings file Set1 when the "Set1" softkey in the "User" menu is selected.

Example: MMEM:USER3 'C:\MySaveSets\Set3', ''
 Loads settings file Set3 when the "User3" softkey in the "User" menu is selected.

9.14 Network Connection

- [Configuring Network Connections](#).....777
- [Emulating HP Instruments](#).....780

9.14.1 Configuring Network Connections

MMEMory:NETWork:DISConnect	777
MMEMory:NETWork:MAP	777
MMEMory:NETWork:UNUSeddrives?	778
MMEMory:NETWork:USEDdrives?	778
SYSTem:COMMunicate:GPIB[:SELF]:ADDRess	778
SYSTem:COMMunicate:GPIB[:SELF]:RTERminator	778
SYSTem:LXI:INFo?	779
SYSTem:LXI:LANReset	779
SYSTem:LXI:MDEscription	779
SYSTem:LXI:PASSword	780

MMEMory:NETWork:DISConnect <Drive>

This command disconnects the selected drive.

Parameters:

<Drive>

Example:

```
MMEM:NETW:DISC 'T: '
Disconnects network drive T:
```

Usage:

Event

MMEMory:NETWork:MAP <Drive>, <HostName> [, <UserName>, <Password>][, <Reconnect>]

This command maps a drive to a server or server directory of the network.

Note that you have to allow sharing for a server or folder in Microsoft networks first.

Parameters:

<Drive>	String containing the drive name or path of the directory you want to map.
<HostName>	String containing the host name of the computer or the IP address and the share name of the drive. '<host name or IP address\share name>'
<UserName>	String containing a user name in the network. The user name is optional.
<Password>	String containing the password corresponding to the <User-Name>. The password is optional.

<Reconnect> ON | OFF
ON
 Reconnects at logon with the same user name.
OFF
 Does not reconnect at logon.
Usage: Event

MMEMory:NETWork:UNUSeddrives?

This command lists all unused network drive names.

This command is only a query and therefore has no *RST value.

Example: MMEM:NETW:UNUS?
 Lists all unused network drive names.

Usage: Query only

MMEMory:NETWork:USEDdrives? <ResultType>

This command lists all mapped network drives.

Query parameters:

<ResultType> **ON**
 Lists all mapped network drives including the folder information.
OFF
 Lists all mapped network drive names.
 *RST: OFF

Example: MMEM:NETW:USED? ON
 Lists all mapped network drives including the folder information.

Usage: Query only

SYSTem:COMMunicate:GPIB[:SELF]:ADDRess <Address>

This command changes the GPIB address of the unit.

Parameters:

<Address> 0 to 30
 *RST: (no influence on this parameter, factory default 20)

Example: SYST:COMM:GPIB:ADDR 18

Usage: SCPI confirmed

SYSTem:COMMunicate:GPIB[:SELF]:RTERminator <Terminator>

This command changes the GPIB receive terminator.

According to the standard the terminator in ASCII is <LF> and/or <EOI>. For binary data transfers (e.g. trace data) from the control computer to the instrument, the binary code (0AH) used for <LF> might be included in the binary data block, and therefore should not be interpreted as a terminator in this particular case. This can be avoided by changing the receive terminator to EOI.

Output of binary data from the instrument to the control computer does not require such a terminator change.

Parameters:

<Terminator> LFEOI | EOI
 *RST: (no influence on this parameter, factory default LFEOI)

Example: SYST:COMM:GPIB:RTER EOI

SYSTem:LXI:INFo?

This query returns the current parameters of the LXI class C.

Only user accounts with administrator rights are able to use LXI functionality.

Return values:

Return values <current version> | <LXI class> | <Computername> |
 (example) <MAC adress> | <IP adress> | <Auto MDIX>

Usage: Query only

SYSTem:LXI:LANReset

This command resets the LAN configuration to the values required by the LXI standard. In addition, the password is reset to its initial state as well as the LXI instrument description.

Only user accounts with administrator rights are able to use LXI functionality.

Example: SYST:LXI:LANR

Usage: Event

SYSTem:LXI:MDEScript <String>

This command shows the LXI instrument description. Also, the instrument description can be changed using this command.

Only user accounts with administrator rights are able to use LXI functionality.

Parameters:

<String>

Example: SYST:LXI:MDES

SYSTem:LXI:PASSword <Password>

This command shows or changes the LXI password.

Only user accounts with administrator rights are able to use LXI functionality.

Parameters:

<Password> <password>

Example: SYST:LXI:PASS

9.14.2 Emulating HP Instruments

SYSTem:REVision:FACTory.....	780
SYSTem:REVision[:STRing].....	780
SYSTem:RSW.....	781
SYSTem:LANGuage.....	781
SYSTem:HPCoupling.....	782
SYSTem:IFGain:MODE.....	782

SYSTem:REVision:FACTory

Resets the response to the REV? query to the default value, e.g. after a user string was defined using the [SYSTem:REVision\[:STRing\]](#) command. (REV? query available for HP emulation only, see [chapter 9.17, "GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E"](#), on page 828.)

Example:

Define the system language:

SYST:LANG '8563E'

Set the response back to factory setting:

SYS:REV:FACT

Query the revision:

REV?

Response:

920528

Usage:

Event

SCPI confirmed

SYSTem:REVision[:STRing] <Name>

Sets the response to the REV? query to the defined string (HP emulation only, see [chapter 9.17, "GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E"](#), on page 828).

Parameters:

<Name>

Example: Define the system language:
`SYST:LANG '8563E'`
 Query the revision:
`REV?`
 Response:
`920528`
 Set the response to 'NewRevision':
`SYST:REV:STR 'NewRevision'`
 Query the response:
`SYST:REV:STR?`
 Response:
`NewRevision`

SYSTem:RSW <State>

Controls a repeated sweep of the E1 and MKPK HI/HL HP model commands (for details on the commands refer to [chapter 9.17, "GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E"](#), on page 828). If the repeated sweep is OFF, the marker is set without sweeping before.

This command is only available if a HP language is selected using [SYSTem:LANGuage](#).

Parameters:

<State> ON | OFF
 *RST: OFF

Example: `SYSTem:RSW ON`

Usage: SCPI confirmed

SYSTem:LANGuage <Language>

This command defines the system language. Default is SCPI which defines the standard remote control behavior of the instrument. The other parameters are to simulate the corresponding HP analyzer. The parameter "PSA89600" sets the device in a state in which it can be used for IQ capturing from the 89600 vector signal analyzer software.

Parameters:

<Language> "SCPI" | "8560E" | "8561E" | "8562E" | "8563E" | "8564E" |
 "8565E" | "8566A" | "8566B" | "8568A" | "8568A_DC" | "8568B" |
 "8568B_DC" | "8591E" | "8594E" | "71100C" | "71200C" |
 "71209A" | "PSA89600"
 *RST: SCPI

Example: `SYST:LANG '8560E'`
 Sets the system language to 8560E to simulate the HP analyzer.

SYSTem:HPCoupling <CouplingType>

Controls the default coupling ratios in the HP emulation mode for:

- span and resolution bandwidth (Span/RBW) and
- resolution bandwidth and video bandwidth (RBW/VBW)

For FSP (=FSV), the standard parameter coupling of the instrument is used. As a result, in most cases a shorter sweeptime is used than in case of HP.

This command is only available if a HP language is selected using [SYSTem:LANGuage](#).

Parameters:

<CouplingType> HP | FSP
 *RST: FSP

Example: SYSTem:HPC HP

Usage: SCPI confirmed

SYSTem:IFGain:MODE <Mode>

Configures the internal IF gain settings in HP emulation mode due to the application needs. This setting is only taken into account for resolution bandwidth < 300 kHz and is only available if a HP language is selected using [SYSTem:LANGuage](#).

Parameters:

<Mode> NORM | PULS
NORM
 Optimized for high dynamic range, overload limit is close to reference level.
PULS
 Optimized for pulsed signals, overload limit up to 10 dB above reference level.
 *RST: NORM

Example: SYST:IFG:MODE PULS

Usage: SCPI confirmed

9.15 Status Register

For more information on the contents of the status registers see the following sections.

Status registers in receiver mode:

- ["STATus:OPERation Register"](#) on page 440
- ["STATus:QUEStionable Register"](#) on page 441
- ["STATus:QUEStionable:FREQuency Register"](#) on page 442
- ["STATus:QUEStionable:LIMit Register"](#) on page 442

- "STATus:QUEStionable:LMARgin Register" on page 443
- "STATus:QUEStionable:POWer Register" on page 444
- "STATus:QUEStionable:TRANsducer Register" on page 444

Status registers in spectrum mode:

- "STATus:OPERation Register" on page 446
- "STATus:QUEStionable Register" on page 447
- "STATus:QUEStionable:ACPLimit Register" on page 448
- "STATus:QUEStionable:FREQuency Register" on page 442
- "STATus:QUEStionable:LIMit Register" on page 442
- "STATus:QUEStionable:LMARgin Register" on page 443
- "STATus:QUEStionable:POWer Register" on page 444

9.15.1 General Status Register Commands

STATus:PRESet.....	783
STATus:QUEue[:NEXT?]?.....	783

STATus:PRESet

This command resets the edge detectors and ENABLE parts of all registers to a defined value. All PTRansition parts are set to FFFFh, i.e. all transitions from 0 to 1 are detected. All NTRansition parts are set to 0, i.e. a transition from 1 to 0 in a CONDition bit is not detected. The ENABLE part of the STATus:OPERation and STATus:QUEStionable registers are set to 0, i.e. all events in these registers are not passed on.

Example: STAT:PRES

Usage: SCPI confirmed

STATus:QUEue[:NEXT?]?

This command queries the earliest error queue entry and deletes it.

Positive error numbers indicate device-specific errors, negative error numbers are error messages defined by SCPI. If the error queue is empty, the error number 0, "No error", is returned. This command is identical to the `SYSTem:ERRor[:NEXT]?` on page 720 command.

Example: STAT:QUES?

Usage: Query only
SCPI confirmed

9.15.2 Reading out the EVENT Part

For more information on the event part see [chapter 9.1.6.2, "Structure of a SCPI Status Register"](#), on page 436.

```

STATus:OPERation[:EVENT]?
STATus:QUESTionable[:EVENT]?
STATus:QUESTionable:ACPLimit[:EVENT]?
STATus:QUESTionable:FREQuency[:EVENT]?
STATus:QUESTionable:LIMit<n>[:EVENT]?
STATus:QUESTionable:LMARgin<n>[:EVENT]?
STATus:QUESTionable:POWEr[:EVENT]?
STATus:QUESTionable:TRANsducer[:EVENT]?

```

These commands read out the EVENT section of the status register.

At the same time, the commands delete the contents of the EVENT section.

Usage: Query only

9.15.3 Reading Out the CONDition Part

For more information on the condition part see [chapter 9.1.6.2, "Structure of a SCPI Status Register"](#), on page 436.

```

STATus:OPERation:CONDition?
STATus:QUESTionable:CONDition?
STATus:QUESTionable:ACPLimit:CONDition?
STATus:QUESTionable:FREQuency:CONDition?
STATus:QUESTionable:LIMit<n>:CONDition?
STATus:QUESTionable:LMARgin<n>:CONDition?
STATus:QUESTionable:POWEr:CONDition?
STATus:QUESTionable:TRANsducer:CONDition?

```

These commands read out the CONDition section of the status register.

The commands do not delete the contents of the EVENT section.

Usage: Query only

9.15.4 Controlling the ENABle Part

For more information on the enable part see [chapter 9.1.6.2, "Structure of a SCPI Status Register"](#), on page 436.

```

STATus:OPERation:ENABle <SumBit>
STATus:QUESTionable:ENABle <SumBit>
STATus:QUESTionable:ACPLimit:ENABle <SumBit>
STATus:QUESTionable:FREQuency:ENABle <SumBit>
STATus:QUESTionable:LIMit<n>:ENABle <SumBit>
STATus:QUESTionable:LMARgin<n>:ENABle <SumBit>
STATus:QUESTionable:POWEr:ENABle <SumBit>
STATus:QUESTionable:TRANsducer:ENABle <SumBit>

```

These commands control the ENABle part of a register.

The ENABLE part allows true conditions in the EVENT part of the status register to be reported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition will occur in the summary bit reported to the next higher level.

Parameters:

<SumBit> Range: 0 to 65535

9.15.5 Controlling the Negative Transition Part

For more information on the positive transition part see [chapter 9.1.6.2, "Structure of a SCPI Status Register"](#), on page 436.

STATus:OPERation:NTRansition <SumBit>
STATus:QUEStionable:NTRansition <SumBit>
STATus:QUEStionable:ACPLimit:NTRansition <SumBit>
STATus:QUEStionable:FREQuency:NTRansition <SumBit>
STATus:QUEStionable:LIMit<n>:NTRansition <SumBit>
STATus:QUEStionable:LMARgin<n>:NTRansition <SumBit>
STATus:QUEStionable:POWer:NTRansition <SumBit>
STATus:QUEStionable:TRANsduder:NTRansition <SumBit>

These commands control the Negative TRansition part of a register.

Setting a bit causes a 1 to 0 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameters:

<SumBit> Range: 0 to 65535

9.15.6 Controlling the Positive Transition Part

For more information on the negative transition part see [chapter 9.1.6.2, "Structure of a SCPI Status Register"](#), on page 436.

STATus:OPERation:PTRansition <SumBit>
STATus:QUEStionable:PTRansition <SumBit>
STATus:QUEStionable:ACPLimit:PTRansition <SumBit>
STATus:QUEStionable:FREQuency:PTRansition <SumBit>
STATus:QUEStionable:LIMit<n>:PTRansition <SumBit>
STATus:QUEStionable:LMARgin<n>:PTRansition <SumBit>
STATus:QUEStionable:POWer:PTRansition <SumBit>
STATus:QUEStionable:TRANsduder:PTRansition <SumBit>

These commands control the Positive TRansition part of a register.

Setting a bit causes a 0 to 1 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameters:

<SumBit>

Range: 0 to 65535

9.16 Remote Control – Programming Examples

In this chapter, more complex programming examples are given. In the First Steps, basic steps in remote control programming are provided.

The following programming examples have a hierarchical structure, i.e. subsequent examples are based on previous ones. It is thus possible to compile an operational program from the modules of the given examples very easily. VISUAL BASIC has been used as programming language. However, the programs can be translated into other languages.



In programming languages as C, C++ or programs as MATLAB, NI Interactive Control, a backslash starts an escape sequence (e.g. "\n" is used to start a new line). In these programming languages and programs, two backslashes instead of one must be used in remote commands (for an example refer to the First Steps.)

9.16.1	Service Request.....	787
9.16.1.1	Initiate Service Request.....	787
9.16.1.2	Waiting for the Arrival of a Service Request.....	788
9.16.1.3	Waiting Without Blocking the Keyboard and Mouse.....	789
9.16.1.4	Service Request Routine.....	790
9.16.1.5	Reading Out the Output Buffer.....	791
9.16.1.6	Reading Error Messages.....	791
9.16.1.7	Evaluation of SCPI Status Registers.....	792
9.16.1.8	Evaluation of Event Status Register.....	793
9.16.2	Using Marker and Delta Marker.....	794
9.16.2.1	Shape Factor Measurement (using n dB down).....	794
9.16.2.2	Measuring the Third Order Intercept Point.....	795
9.16.2.3	Measuring the AM Modulation Depth.....	796
9.16.3	Limit Lines and Limit Test.....	797
9.16.4	Measuring the Channel and Adjacent Channel Power.....	798
9.16.5	Occupied Bandwidth Measurement.....	802
9.16.6	Time Domain Power Measurement.....	802
9.16.7	Fast Power Measurement on Power Ramps.....	803
9.16.7.1	Power Measurement with Multi-Summary Marker.....	803

9.16.7.2	Multi-Burst Power Measurement.....	805
9.16.8	Fast Level Measurement Using Frequency Lists.....	807
9.16.9	Level Correction of Transducers.....	808
9.16.10	Measuring the Magnitude and Phase of a Signal.....	809
9.16.11	Reading and Writing Files.....	811
9.16.11.1	Reading a File from the Instrument.....	811
9.16.11.2	Creating a File on the Instrument.....	812
9.16.12	Spectrum Emission Mask Measurement.....	813
9.16.12.1	Using Predefined Standard Wibro.....	813
9.16.12.2	Defining 5 Ranges with all Parameters.....	814
9.16.13	Spurious Emissions Measurement.....	817
9.16.14	Averaging I/Q Data.....	819
9.16.15	Using IQ Gating.....	820
9.16.16	Usage of Four Spectrum Instances.....	826

9.16.1 Service Request

The service request routine requires an extended initialization of the instrument in which the relevant bits of the transition and enable registers are set. In addition the service request event must be enabled in the VISA session.

9.16.1.1 Initiate Service Request

```
REM ---- Example of initialization of the SRQ in the case
' of errors -----
PUBLIC SUB SetupSRQ()
CALL InstrWrite (analyzer, "*CLS") 'Reset status reporting system
CALL InstrWrite (analyzer, "*SRE 168") 'Enable service request for
'STAT:OPER, STAT:QUES and ESR
'register
CALL InstrWrite (analyzer, "*ESE 60") 'Set event enable bit for
'command, execution, device-
'dependent and query error
CALL InstrWrite (analyzer, "STAT:OPER:ENAB 32767")
'Set OPERATION enable bit for
'all events
CALL InstrWrite (analyzer, "STAT:OPER:PTR 32767")
'Set appropriate OPERATION
'Ptransition bits
CALL InstrWrite (analyzer, "STAT:QUES:ENAB 32767")
'Set questionable enable bits
'for all events
```

```

CALL InstrWrite (analyzer, "STAT:QUES:PTR 32767")
'Set appropriate questionable
'Ptransition bits
CALL viEnableEvent(analyzer, VI_EVENT_SERVICE_REQ, VI_QUEUE, 0)
'Enable the event for service
'request
Status = viWaitOnEvent(analyzer, VI_EVENT_SERVICE_REQ, SRQWaitTimeout, VI_NULL,
    VI_NULL)
IF (status = VI_SUCCESS) THEN CALL Srq
'If SRQ is recognized =>
'subroutine for evaluation
END SUB
REM *****

```

9.16.1.2 Waiting for the Arrival of a Service Request

There are basically two methods of waiting for the arrival of a service request:

Blocking (user inputs not possible):

This method is appropriate if the waiting time until the event to be signaled by an SRQ is short (shorter than the selected timeout), if no response to user inputs is required during the waiting time, and if – as the main criterion – the event is absolutely certain to occur.

Reason:

From the time the viWaitOnEvent() function is called until the occurrence of the expected event, it does not allow the program to respond to mouse clicks or key entries during the waiting time. Moreover, it returns an error if the SRQ event does not occur within the predefined timeout period.

The method is, therefore, in many cases not suitable for waiting for measurement results, especially when using triggered measurements.

The following function calls are required:

```

Status = viWaitOnEvent(analyzer, VI_EVENT_SERVICE_REQ, SRQWaitTimeout, VI_NULL,
    VI_NULL)
'Wait for service request user
'inputs are not possible during
'the waiting time!
IF (status = VI_SUCCESS) THEN CALL Srq
'If SRQ is recognized =>
'subroutine for evaluation

'----- Sweep in first Spectrum Tab and query marker -----
Dim Status = mbSession.WaitOnEvent( _
    MessageBasedSessionEventType.ServiceRequest, SRQWaitTimeout)
'Wait for service request user inputs are not possible
'during the waiting time!
If (Status.EventType() = MessageBasedSessionEventType.ServiceRequest) Then

```



```
'If SRQ is recognized => subroutine for evaluation
    Srq()
End If
```

Non-blocking (user inputs possible):

This method is recommended if the waiting time until the event to be signaled by an SRQ is long (longer than the selected timeout), and user inputs should be possible during the waiting time, or if the event is not certain to occur. This method is, therefore, the preferable choice for waiting for the end of measurements, i.e. the output of results, especially in the case of triggered measurements.

The method necessitates a waiting loop that checks the status of the SRQ line at regular intervals and returns control to the operating system during the time the expected event has not yet occurred. In this way, the system can respond to user inputs (mouse clicks, key entries) during the waiting time.

It is advisable to employ the Hold() auxiliary function, which returns control to the operating system for a selectable waiting time (see section [Waiting Without Blocking the Keyboard and Mouse](#)), so enabling user inputs during the waiting time.

```
result% = 0
For i = 1 To 10 'Abort after max. 10 loop
    'iterations
    Status = viWaitOnEvent(analyzer, VI_EVENT_SERVICE_REQ, VI_TMO_IMMEDIATE, VI_NULL,
        VI_NULL)
    'Check event queue
    If (status = VI_SUCCESS) Then
        result% = 1
        CALL Srq 'If SRQ is recognized =>
        'subroutine for evaluation
    Else
        CALL Hold(20) 'Call hold function with
        '20 ms 'waiting time. User inputs
        'are possible.
    Endif
Next i
If result% = 0 Then
    Debug.Print "Timeout Error; Program aborted" 'Output error message
    STOP 'Stop software
Endif
```

9.16.1.3 Waiting Without Blocking the Keyboard and Mouse

A frequent problem with remote control programs using Visual Basic is to insert waiting times without blocking the keyboard and the mouse.

If the program is to respond to user inputs also during a waiting time, control over the program events during this time must be returned to the operating system. In Visual Basic, this is done by calling the `DoEvents` function. This function causes keyboard-or mouse-triggered events to be executed by the associated elements. For example, it

allows the operation of buttons and input fields while the user waits for an instrument setting to be completed.

The following programming example describes the `Hold()` function, which returns control to the operating system for the period of the waiting time selectable in milliseconds.

```
Rem *****
Rem The waiting function below expects the transfer of the desired
Rem waiting time in milliseconds. The keyboard and the mouse remain
Rem operative during the waiting period, thus allowing desired elements
Rem to be controlled
Rem *****
Public Sub Hold(delayTime As Single)
Start = Timer 'Save timer count on calling the
'function
Do While Timer < Start + delayTime/1000 'Check timer count
DoEvents 'Return control to operating
'system to enable control of
'desired elements as long as
'timer has not elapsed
Loop
End Sub
Rem *****
```

The waiting procedure is activated simply by calling `Hold(<Waiting time in milliseconds>)`.

9.16.1.4 Service Request Routine

A service request is processed in the service request routine.



The variables `userN%` and `userM%` must be pre-assigned usefully!

```
REM ----- Service request routine -----
Public SUB Srq()
ON ERROR GOTO noDevice 'No user existing
CALL viReadSTB(analyzer, STB%) 'Serial poll, read status byte
IF STB% > 0 THEN 'This instrument has bits set in
'the STB
SRQFOUND% = 1
IF (STB% AND 16) > 0 THEN CALL Outputqueue
IF (STB% AND 4) > 0 THEN CALL ErrorQueueHandler
IF (STB% AND 8) > 0 THEN CALL Questionablestatus
IF (STB% AND 128) > 0 THEN CALL Operationstatus
IF (STB% AND 32) > 0 THEN CALL Esrread
END IF
noDevice:
```

```

END SUB 'End of SRQ routine
REM *****
REM ----- Subroutine for evaluation Service Request Routine -----

Public Sub Srq()
    Try
        Dim mySTB As Short = mbSession.ReadStatusByte()
        'Serial poll, read status byte
        Console.WriteLine("Reading Service Request Routine:" + mySTB.ToString())
        If mySTB > 0 Then 'This instrument has bits set in the STB
            If (mySTB And 16) > 0 Then Call Outputqueue()
            If (mySTB And 4) > 0 Then Call ErrorQueueHandler()
            If (mySTB And 8) > 0 Then Call Questionablestatus()
            If (mySTB And 128) > 0 Then Call Operationstatus()
            If (mySTB And 32) > 0 Then Call Esrread()
        End If
        Catch exp As Exception
            Console.WriteLine(exp.Message)
        End Try
    End Sub 'End of SRQ routine

```

Reading out the status event registers, the output buffer and the error/event queue is effected in subroutines.

9.16.1.5 Reading Out the Output Buffer

```

REM ----- Subroutine for the individual STB bits -----
Public SUB Outputqueue() 'Reading the output buffer
    result$ = SPACE$(100) 'Make space for response
    CALL InstrRead(analyzer, result$)
    Debug.Print "Contents of Output Queue: "; result$
END SUB
REM *****

REM ----- Subroutine for the output queue -----
Public Sub Outputqueue() 'Reading the output buffer
    Try
        Dim result As String = mbSession.ReadString()
        Console.WriteLine("Contents of Output Queue:" + result)
        Catch exp As Exception
            Console.WriteLine(exp.Message)
        End Try
    End Sub

```

9.16.1.6 Reading Error Messages

```

REM ----- Subroutine for reading the error queue -----
Public SUB ErrorQueueHandler()
    ERROR$ = SPACE$(100) 'Make space for error variable

```

```

CALL InstrWrite (analyzer, "SYSTEM:ERROR?")
CALL InstrRead(analyzer, ERROR$)
Debug.Print "Error Description: "; ERROR$
END SUB
REM *****

REM ----- Subroutine for reading the error queue -----
Sub ErrorQueueHandler()
    Dim result As String
    Dim hasErr As Boolean = True
    Do
        mbSession.Write("SYST:ERR?")
        result = mbSession.ReadString()
        Dim parts As String() = result.Split(",")
        If parts(0) = 0 Then
            hasErr = False
            Console.WriteLine(result)
        Else
            Console.WriteLine(result)
        End If
    Loop While hasErr
End Sub

```

9.16.1.7 Evaluation of SCPI Status Registers

```

REM ----- Subroutine for evaluating Questionable Status Register -----
Public SUB Questionablestatus()
    Ques$ = SPACE$(20)
    'Preallocate blanks to text
    'variable
    CALL InstrWrite (analyzer, "STATus:QUESTionable:EVENT?")
    CALL InstrRead(analyzer, Ques$)
    Debug.Print "Questionable Status: "; Ques$
END SUB
REM *****

REM ----- Subroutine for evaluating Operation Status Register -----
Public SUB Operationstatus()
    Oper$ = SPACE$(20) 'Preallocate blanks to text
    'variable
    CALL InstrWrite (analyzer, "STATus:OPERation:EVENT?")
    CALL InstrRead(analyzer, Oper$)
    Debug.Print "Operation Status: "; Oper$
END SUB
REM *****

REM ----- Subroutine for evaluating Questionable Status Register -----
Public Sub Questionablestatus()
    Dim myQSR As String = Nothing
    Try
        myQSR = mbSession.Query("STATus:QUESTionable:EVENT?") 'Read QSR
    Catch
    End Try
End Sub

```

```

        Console.WriteLine("Questionable Status:" + myQSR)
    Catch exp As Exception
        Console.WriteLine(exp.Message)
    End Try
End Sub

REM ----- Subroutine for evaluating Operation Status Register -----
Public Sub Operationstatus()
    Dim myOSR As String = Nothing
    Try
        myOSR = mbSession.Query("STATus:OPERation:EVENT?") 'Read OSR
        Console.WriteLine("Operation Status:" + myOSR)
    Catch exp As Exception
        Console.WriteLine(exp.Message)
    End Try
End Sub

```

9.16.1.8 Evaluation of Event Status Register

```

REM ----- Subroutine for evaluating the Event Status Register -----
Public SUB Esrread()
    Esr$ = SPACE$(20) 'Preallocate blanks to text
    'variable
    CALL InstrWrite (analyzer, "*ESR?") 'Read ESR
    CALL InstrRead(analyzer, Esr$)
    IF (VAL(Esr$) AND 1) > 0 THEN Debug.Print "Operation complete"
    IF (VAL(Esr$) AND 2) > 0 THEN Debug.Print "Request Control"
    IF (VAL(Esr$) AND 4) > 0
    THEN Debug.Print "Query Error"
    IF (VAL(Esr$) AND 8) > 0
    THEN Debug.Print "Device dependent error"
    IF (VAL(Esr$) AND 16) > 0
    THEN Debug.Print "Execution Error; Program aborted" 'Output error message
    STOP 'Stop software
    END IF
    IF (VAL(Esr$) AND 32) > 0
    THEN Debug.Print "Command Error; Program aborted" 'Output error message
    STOP 'Stop software
    END IF
    IF (VAL(Esr$) AND 64) > 0 THEN Debug.Print "User request"
    IF (VAL(Esr$) AND 128) > 0 THEN Debug.Print "Power on"END SUB
    REM *****

REM ----- Subroutine for evaluating the Event Status Register -----
Public Sub Esrread()
    Try
        Dim myESR As Short = mbSession.Query("*ESR?") 'Read ESR
        If (myESR And 1) > 0 Then Console.WriteLine("Operation complete")
        If (myESR And 2) > 0 Then Console.WriteLine("Request Control")
        If (myESR And 4) > 0 Then Console.WriteLine("Query Error")
    End Try
End Sub

```

```

    If (myESR And 8) > 0 Then Console.WriteLine("Device dependent error")
    If (myESR And 16) > 0 Then
        Console.WriteLine("Execution Error; Program aborted") 'Output error message
        Stop 'Stop software
    End If
    If (myESR And 32) > 0 Then
        Console.WriteLine("Command Error; Program aborted") 'Output error message
        Stop 'Stop software
    End If
    If (myESR And 64) > 0 Then Console.WriteLine("User request")
    If (myESR And 128) > 0 Then Console.WriteLine("Power on")
    Catch exp As Exception
        Console.WriteLine(exp.Message)
    End Try
End Sub

```

9.16.2 Using Marker and Delta Marker

9.16.2.1 Shape Factor Measurement (using n dB down)

The n-dB-down function of the R&S ESRP is used twice to determine the shape factor of a filter (ratio of bandwidths at 60 dB and 3 dB below the filter maximum).

The following example is again based on a signal with a level of -30 dBm at 100 MHz. The shape factor is determined for the 30 kHz resolution bandwidth. The default setting of the R&S ESRP is used for measurements (SetupInstrument).

```

REM *****
Public Sub ShapeFactor()
    result$ = Space$(100)
    '----- R&S FSV default setting -----
    CALL SetupInstrument 'Default setting
    CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Single sweep
    '----- Set frequency -----
    CALL InstrWrite (analyzer, "FREQ:SPAN 1 MHz")
    'Span
    CALL InstrWrite (analyzer, "BAND:RES 30 kHz")
    'Resolution bandwidth
    CALL InstrWrite (analyzer, "INIT:*WAI") 'Perform sweep with sync
    '----- Measure 60 dB value -----
    CALL InstrWrite (analyzer, "CALC:MARK:PEXC 6 DB")
    'Peak excursion
    CALL InstrWrite (analyzer, "CALC:MARK:STAT ON")
    'Marker1 on
    CALL InstrWrite (analyzer, "CALC:MARK:TRAC 1")
    'Assign marker1 to trace1
    CALL InstrWrite (analyzer, "CALC:MARK:MAX") 'Set marker1 to 100 MHz
    CALL InstrWrite (analyzer, "CALC:MARK:FUNC:NDBD 45 dB")

```

```

'Read out bandwidth measured at
'45 dB
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:NDBD:RES?")
CALL InstrRead(analyzer, result$)
result60 = Val(result$)
'----- Measure 3 dB down value-----
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:NDBD 3 dB")
'Read out bandwidth measured at
'3 dB
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:NDBD:RES?")
CALL InstrRead(analyzer, result$)
result3 = Val(result$)
'----- Read out shape factor-----
Print "Shapefaktor 60 dB/3 dB: ";result60/result3
END SUB
REM *****

```

9.16.2.2 Measuring the Third Order Intercept Point

The third order intercept point (TOI) is the (virtual) level of two adjacent useful signals at which the intermodulation products of third order have the same level as the useful signals.

The intermodulation product at f_{s2} is obtained by mixing the first harmonic of the useful signal P_{N2} with signal P_{N1} , the intermodulation product at f_{s1} by mixing the first harmonic of the useful signal P_{N1} with signal P_{N2} .

$$f_{s1} = 2 \times f_{n1} - f_{n2} \quad (1)$$

$$f_{s2} = 2 \times f_{n2} - f_{n1} \quad (2)$$

The following example is based on two adjacent signals with a level of -30 dBm at 100 MHz and 110 MHz. The intermodulation products lie at 90 MHz and 120 MHz according to the above formula. The frequency is set so that the examined mixture products are displayed in the diagram. Otherwise, the default setting of the R&S ESRP is used for measurements (SetupInstrument).

```

REM *****
Public Sub TOI()
result$ = Space$(100)
'----- R&S FSV default setting -----
CALL SetupStatusReg 'Set status registers
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Single sweep
CALL InstrWrite (analyzer, "SYST:DISP:UPD ON")
'ON: display on'OFF: off
'----- Set frequency -----
CALL InstrWrite (analyzer, "FREQ:START 85 MHz;STOP 125 MHz")
'Span
'----- Set level -----
CALL InstrWrite (analyzer, "DISP:WIND:TRAC:Y:RLEV -20 dBm")

```

```

'Reference level
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
'----- TOI measurement -----
CALL InstrWrite (analyzer, "CALC:MARK:PEXC 6 DB")
'Peak excursion
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:TOI ON")
'Switch on TOI measurement
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:TOI:RES?")
'and read out results
CALL InstrRead(analyzer, result$)
'----- Read out result -----
Print "TOI [dBm]:";result$
END SUB
REM *****

```

9.16.2.3 Measuring the AM Modulation Depth

The example below is based on an AM-modulated signal at 100 MHz with the following characteristics:

Carrier signal level	-30 dBm
AF frequency	100 kHz
Modulation depth	50 %

The default setting of the analyzer for measurements can be used for the measurements described below (SetupInstrument).

```

REM *****
Public Sub AMMod()
result$ = Space$(100)
CALL SetupInstrument 'Default setting
CALL InstrWrite (analyzer, "BAND:RES 30 kHz") 'Set appropriate RBW
'----- Peak search -----
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Single sweep
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
CALL InstrWrite (analyzer, "CALC:MARK:PEXC 6 DB")
'Peak excursion
CALL InstrWrite (analyzer, "CALC:MARK:STAT ON")
'Marker 1 on
CALL InstrWrite (analyzer, "CALC:MARK:TRAC 1")
'Assign marker1 to trace1
'----- Measure modulation depth -----
CALL InstrWrite (analyzer, "CALC:MARK:MAX;FUNC:MDEP ON")
'Marker to Peak;
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:MDEP:RES?")
'Measure mod. depth
CALL InstrRead(analyzer, result$) 'Read out result
'----- Read out result -----
Print "AM Mod Depth [%]:";result$

```



```
END SUB
REM *****
```

9.16.3 Limit Lines and Limit Test

The example below shows the definition and use of a new limit line 5 for trace 1 with the following characteristics:

- Upper limit line
- Absolute x-axis in the frequency range
- 7 reference values:
 - 120 MHz/-70 dB,
 - 126 MHz/-40 dB,
 - 127 MHz/-40 dB,
 - 128 MHz/-10 dB,
 - 129 MHz/-40 dB,
 - 130 MHz/-40 dB,
 - 136 MHz/-70 dB
- Relative y-axis with unit dB
- Absolute threshold at -75 dBm
- No margin

The signal of the integrated calibration source (128 MHz, -30 dBm) is used to check the limit test.

```
REM *****
Public Sub LimitLine()
result$ = Space$(100)
'----- R&S FSV default setting -----
CALL SetupInstrument 'Default setting
CALL InstrWrite (analyzer, "FREQUENCY:CENTER 128 MHz;Span 10 MHz")
'Span
CALL InstrWrite (analyzer, "Diag:Serv:Inp Cal")
'Cal signal on
'----- Definition of limit lines -----
CALL InstrWrite (analyzer, "CALC:LIM5:NAME 'TEST1'")
'Define name
CALL InstrWrite (analyzer, "CALC:LIM5:COMM 'Upper limit'")
'Define comment
CALL InstrWrite (analyzer, "CALC:LIM5:TRAC 1")
'Assign trace
CALL InstrWrite (analyzer, "CALC:LIM5:CONT:DOM FREQ")
'Define x-axis range
CALL InstrWrite (analyzer, "CALC:LIM5:CONT:MODE ABS")
'Define x-axis scaling
CALL InstrWrite (analyzer, "CALC:LIM5:UNIT DB")
'Define y-axis unit
CALL InstrWrite (analyzer, "CALC:LIM5:UPP:MODE REL")
```

```

'Define y-axis scaling
'----- Definition of data points and threshold -----
xlimit$ = "CALC:LIM5:CONT 120 MHz,126 MHz,127 MHz,128 MHz,129 MHz,130 MHz,136 MHz"
CALL InstrWrite (analyzer, xlimit$) 'Set values for x-axis
CALL InstrWrite (analyzer, "CALC:LIM5:UPP -70,-40,-40,-20,-40,-40,-70")
'Set values for y-axis
CALL InstrWrite (analyzer, "CALC:LIM5:UPP:THR -75 DBM")
'Set y threshold (only
'possible for relative
'y-axis)
'----- Definition of margin or x/y offset-----
'A margin or an x/y offset can be defined here.
'----- Activate and evaluate the limit line -----
CALL InstrWrite (analyzer, "CALC:LIM5:UPP:STAT ON")
'Activate line 5
CALL InstrWrite (analyzer, "CALC:LIM5:STAT ON")
'Activate limit check
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
CALL InstrWrite (analyzer, "CALC:LIM5:FAIL?")
'Query result of limit check
CALL InstrRead(analyzer, result$) 'Result: 1 (= FAIL)
'----- Read out result -----
Print "Limit Result Line 5: ";result$
'----- Evaluate limit line by means of status register -----
CALL InstrWrite (analyzer, "*CLS") 'Reset status register
'----- Measure -----
CALL InstrWrite (analyzer, "INIT;*OPC") 'Perform sweep with sync
CALL viEnableEvent(analyzer, VI_EVENT_SERVICE_REQ, VI_QUEUE, 0)
Status = viWaitOnEvent(analyzer, VI_EVENT_SERVICE_REQ, SRQWaitTimeout, VI_NULL, VI_NULL)
IF (status = VI_SUCCESS) THEN CALL Srq 'If SRQ is recognized =>
'subroutine for evaluation
'----- Read out result -----
IF (status% = 1) THEN
CALL InstrWrite (analyzer, "STAT:QUES:LIM1:COND?")
'Read out STAT:QUES:LIMit
'register
CALL InstrRead(analyzer, result$)
IF ((Val(result$) And 16) <> 0) THEN
Print "Limit5 failed"ELSE
Print "Limit5 passed"END IF
END IF
END SUB
REM *****

```

9.16.4 Measuring the Channel and Adjacent Channel Power

In the following example, the channel and adjacent channel power is first measured on a signal with a level of 0 dBm at 800 MHz to IS95. Then the channel and adjacent

channel power is measured on a GSM signal at 935.2 MHz with fast ACP measurement (FAST ACP).

In addition, the limit test is activated.

```
REM *****
Public Sub ACP()
result$ = Space$(100)
'----- R&S FSV default setting -----
CALL SetupStatusReg 'Set status register
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Single sweep
CALL InstrWrite (analyzer, "SYST:DISP:UPD ON")
'ON: display on
'OFF: off
'----- Set frequency -----
CALL InstrWrite (analyzer, "FREQ:CENT 800 MHz")
'Set frequency
'----- Set level -----
CALL InstrWrite (analyzer, "DISP:WIND:TRAC:Y:RLEV 10 dBm")
'Reference level
'----- Example 1: Configure CP/ACP for CDMA-----
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:POW:SEL ACP")
'ACP measurement on
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:POW:PRES F8CDMA")
'Select CDMA800 FWD
CALL InstrWrite (analyzer, "SENS:POW:ACH:ACP 2")
'Select 2 adjacent channels
CALL InstrWrite (analyzer, "SENS:POW:ACH:PRES ACP")
'Optimize settings
CALL InstrWrite (analyzer, "SENS:POW:ACH:PRES:RLEV")
'Optimize reference level
CALL InstrWrite (analyzer, "SENS:POW:ACH:MODE ABS")
'Absolute measurement
CALL InstrWrite (analyzer, "SENS:POW:HSP ON")
'Fast ACP measurement
'----- Perform measurement and query results -----
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:POW:RES? ACP")
'Query result CALL InstrRead(analyzer, result$)
'----- Read out result -----
Print "Result (CP, ACP low, ACP up, Alt low, Alt up):"Print result$
'----- Example 2: Configure CP/ACP manually for GSM-----
result$ = Space$(100)
CALL InstrWrite (analyzer, "FREQ:CENT 935.2 MHz")
'Set frequency
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:POW:SEL ACP")
'ACP measurement on
CALL InstrWrite (analyzer, "SENS:POW:ACH:ACP 1")
'1 adjacent channel
CALL InstrWrite (analyzer, "SENS:POW:ACH:BAND 200 KHZ")
```

```

'Channel bandw. 200 kHz
CALL InstrWrite (analyzer, "SENS:POW:ACH:BAND:ACH 200 KHZ")
'Adjacent channel band-
'width 200 kHz
CALL InstrWrite (analyzer, "SENS:POW:ACH:SPAC 200 KHZ")
'Channel spacing 200 kHz
CALL InstrWrite (analyzer, "SENS:POW:ACH:PRES ACP")
'Optimize settings
CALL InstrWrite (analyzer, "SENS:POW:ACH:PRES:RLEV")
'Optimize reference level
CALL InstrWrite (analyzer, "SENS:POW:ACH:MODE ABS")
'Absolute measurement
'----- Start measurement and query result -----
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:POW:RES? ACP")
'Query result
CALL InstrRead(analyzer, result$)
'----- Read out result -----
Print "Result (CP, ACP low, ACP up):"Print result$
'----- Active limit check -----
result$ = Space$(100)
CALL InstrWrite (analyzer, "CALC:LIM:ACP:ACH 30 DB, 30 DB")
'Set relative limit
CALL InstrWrite (analyzer, "CALC:LIM:ACP:ACH:ABS -35 DBM,-35 DBM")
'Set absolute limit
CALL InstrWrite (analyzer, "CALC:LIM:ACP:ACH:STAT ON")
'Rel. limit check on
CALL InstrWrite (analyzer, "CALC:LIM:ACP:ACH:ABS:STAT ON")
'Abs. limit check on
CALL InstrWrite (analyzer, "CALC:LIM:ACP ON")
'Limit check on
'----- Start measurement and query result -----
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
CALL InstrWrite (analyzer, "CALC:LIM:ACP:ACH:RES?")
'Query result of limit check
CALL InstrRead(analyzer, result$)
'----- Read out result -----
Print "Result Limit Check:";result$
END SUB
REM *****

```

Example of channel/adjacent-channel power measurement

POW:ACH:ACP 3

Sets the number of adjacent/alternate channels to 3.

POW:ACH:BAND 30 KHZ

Sets the bandwidth of the transmission channel to 30 kHz.

POW:ACH:BAND:ACH 40 KHZ

Sets the bandwidth of each adjacent channel to 40 kHz.

```
POW:ACH:BAND:ALT1 50 KHZ
```

Sets the bandwidth of each alternate channel to 50 kHz.

```
POW:ACH:BAND:ALT2 60 KHZ
```

Sets the bandwidth of alternate channel 2 to 60 kHz.

```
POW:ACH:SPAC 30 KHZ
```

Sets the spacing between the transmission channel and the adjacent channel to 30 kHz, the spacing between the transmission channel and alternate channel 1 to 60 kHz, and the spacing between the transmission channel and alternate channel 2 to 90 kHz.

```
POW:ACH:SPAC:ALT1 100 KHZ
```

Sets the spacing between the alternate adjacent channels and the TX channel. For details refer to [\[SENSe:\]POWer:ACHannel:SPACing:ALTernate<channel>](#) on page 545.

```
POW:ACH:SPAC:ALT2 140 KHZ
```

Sets the spacing between the transmission channel and alternate channel 2 to 140 kHz.

```
POW:ACH:MODE ABS
```

Switches on absolute power measurement.

```
CALC:MARK:FUNC:POW:SEL ACP
```

Switches on the adjacent-channel power measurement.

```
INIT:CONT OFF
```

Switches over to single sweep mode.

```
INIT;*WAI
```

Starts a sweep and waits for the end of the sweep.

```
CALC:MARK:FUNC:POW:RES? ACP
```

Queries the result of adjacent-channel power measurement.

```
POW:ACH:REF:AUTO ONCE
```

Defines the measured channel power as the reference value for relative power measurements.

If the channel power only is to be measured, all commands relating to adjacent/alternate channel bandwidth and channel spacings are omitted. The number of adjacent/alternate channels is set to 0 with [\[SENSe:\]POWer:ACHannel:ACPairs](#) on page 542.

9.16.5 Occupied Bandwidth Measurement

In the following example, the bandwidth is to be found in which 95 % of the power of a GSM signal is contained. Signal frequency is 935.2 MHz; channel bandwidth is 200 kHz.

```
REM *****
Public Sub OBW()
result$ = Space$(100)
'----- R&S FSV default setting -----
CALL SetupStatusReg 'Set status register
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Single sweep
CALL InstrWrite (analyzer, "SYST:DISP:UPD ON")
'ON: display on
'OFF: off
'----- Configure R&S FSV for OBW for GSM-----
CALL InstrWrite (analyzer, "FREQ:CENT 935.2 MHz")
'Set frequency
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:POW:SEL OBW")
'OBW measurement on
CALL InstrWrite (analyzer, "SENS:POW:ACH:BAND 200 KHZ")
'Channel bandw. 200 kHz
CALL InstrWrite (analyzer, "SENS:POW:BWID 95PCT")
'Percentage of power
CALL InstrWrite (analyzer, "SENS:POW:ACH:PRES OBW")
'Set frequency and optimize reference level
CALL InstrWrite (analyzer, "SENS:POW:ACH:PRES:RLEV")
CALL InstrWrite (analyzer, "SENS:POW:NCOR OFF")
'Noise correction
'OFF: switch off
'ON: switch on
'----- Perform measurement and query results -----
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:POW:RES? OBW")
'Query result
CALL InstrRead(analyzer, result$)
Print result$
END SUB
REM *****
```

9.16.6 Time Domain Power Measurement

In the following example, the mean carrier power of a signal with 300 kHz bandwidth at 100 MHz is to be determined. In addition, the peak power, the rms value and the standard deviation are measured. To do this, the time-domain-power measurement functions are used.

```
REM *****
Public Sub TimeDomainPower()
```

```

result$ = Space$(100)
'----- R&S FSV default setting -----
CALL SetupStatusReg 'Set status register
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Single sweep
CALL InstrWrite (analyzer, "SYST:DISP:UPD ON")
'ON: display on
'OFF: off
'----- Configure R&S FSV for time domain power measurement -----
CALL InstrWrite (analyzer, "FREQ:CEN 100 MHz;SPAN 0Hz")
'Set frequency
CALL InstrWrite (analyzer, "BAND:RES 300 kHz")
'Resolution bandwidth
CALL InstrWrite (analyzer, "SWE:TIME 200US") 'Sweep time
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:SUMP:PPE ON")
'Peak measurement on
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:SUMP:MEAN ON")
'Mean measurement on
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:SUMP:RMS ON")
'RMS measurement on
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:SUMP:SDEV ON")
'Standard deviation on
'----- Perform measurement and query results -----
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
'Query results:
query$ = "CALC:MARK:FUNC:SUMP:PPE:RES?;" 'Peak measurement
query$ = query$ + ":CALC:MARK:FUNC:SUMP:MEAN:RES?;" 'Mean measurement
query$ = query$ + ":CALC:MARK:FUNC:SUMP:RMS:RES?;" 'RMS measurement
query$ = query$ + ":CALC:MARK:FUNC:SUMP:SDEV:RES?;" 'Standard deviation
CALL InstrWrite (analyzer, query$)
CALL InstrRead(analyzer, result$)
Print result$
END SUB
REM *****

```

9.16.7 Fast Power Measurement on Power Ramps

A frequent task in mobile radio tests is measurement of a DUT at various power control levels at the highest possible speed. The R&S ESRP offers two test functions for this task, which can be used depending on the signal characteristics.

In the following, the two methods are presented by means of two examples.

9.16.7.1 Power Measurement with Multi-Summary Marker

The multi-summary marker function is suitable for measuring the power of a sequence of pulses with the following characteristics:

- The pulses occur at identical time intervals, which is typical of GSM transmission in slots, for example.
- The level of the first signal is reliably above threshold.
- The subsequent pulses may have any levels.
- The function uses the first pulse as a trigger signal. The power of the subsequent pulses is determined exclusively via the timing pattern selected for the pulse sequence. The function is, therefore, suitable for adjustments where the DUT output power varies considerably and is not reliably above the trigger threshold.
- The measurement accuracy is determined by the ratio of pulse duration to total measurement time; this should not be below 1:50.
- The function always uses TRACE 1.

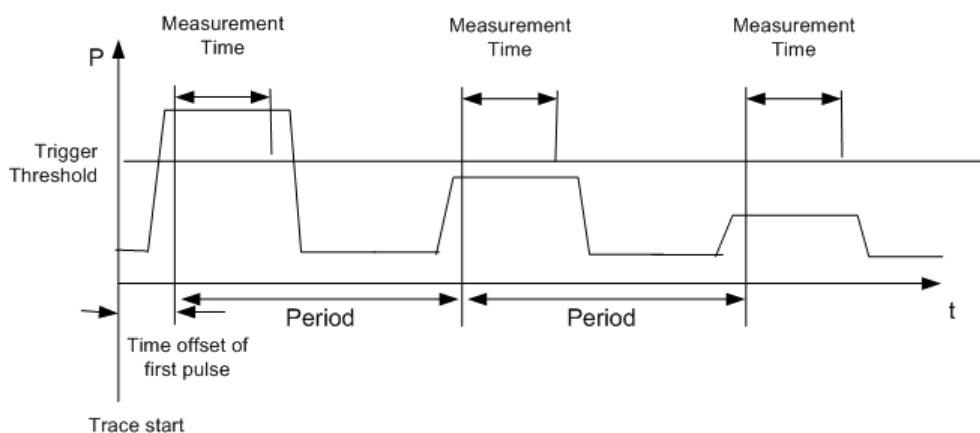


Fig. 9-6: Block diagram illustrating signal processing in analyzer

In the example below, a GSM pulse sequence of 8 pulses is measured with an offset of 50 μs of the first pulse, 450 μs measurement time/pulse and 576.9 μs pulse period.

```
REM *****
Public Sub MultiSumMarker()
result$ = Space$(200)
'----- R&S FSV default setting-----
CALL SetupStatusReg 'Configure status register
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Single sweep mode
CALL InstrWrite (analyzer, "SYST:DISP:UPD ON")
'ON: switch display on
'OFF: switch display off
'----- Configure R&S FSV for power measurement in time domain -----
CALL InstrWrite (analyzer, "FREQ:CENT 935.2 MHz;SPAN 0Hz")
'Frequency setting
CALL InstrWrite (analyzer, "DISP:WIND:TRAC:Y:RLEV 10 dBm")
'Set reference level to 10 dB
CALL InstrWrite (analyzer, "INP:ATT 30 dB") 'Set input attenuation to 30 dB
CALL InstrWrite (analyzer, "BAND:RES 1 MHz;VID 3 MHz")
'Bandwidth setting
CALL InstrWrite (analyzer, "DET RMS") 'Select RMS detector
```



```

CALL InstrWrite (analyzer, "TRIG:SOUR VID") 'Trigger source: video
CALL InstrWrite (analyzer, "TRIG:LEV:VID 50 PCT")
'Trigger threshold: 50 %
CALL InstrWrite (analyzer, "SWE:TIME 50ms") 'Sweep time ≥ 1 frame
'----- Perform measurement and query results -----
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
'Query results:
cmd$ = "CALC:MARK:FUNC:MSUM?"cmd$ = cmd$ + "50US," 'Offset of first pulse
cmd$ = cmd$ + "450US," 'Measurement time
cmd$ = cmd$ + "576.9US," 'Pulse period
cmd$ = cmd$ + "8" 'Number of bursts
CALL InstrWrite (analyzer, cmd$)
CALL InstrRead(analyzer, result$) 'Read results
Print result$
END SUB
REM *****

```

9.16.7.2 Multi-Burst Power Measurement

The multi-burst power measurement function is suitable for measuring the power of a sequence of pulses with the following characteristics:

- The pulses occur at variable time intervals.
- The levels of all pulses of the sequence are reliably above the trigger threshold, or an external trigger signal is used.
- The function requires one trigger event per pulse. This means that if the video trigger or the IF power trigger is used, the levels of all pulses must be above the trigger threshold.
- The function is, therefore, particularly suitable for re-measuring DUTs already adjusted and whose output power is within the specified range. The measurement is optimized for minimum overhead relative to the actual measurement time.

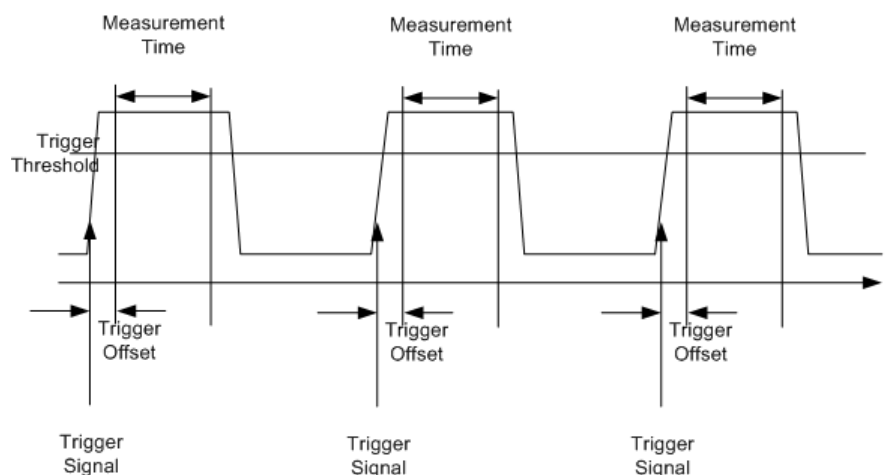


Fig. 9-7: Block diagram illustrating signal processing in analyzer

Either the root-mean-square power or the peak power is measured, depending on whether the RMS detector or the PEAK detector is selected. The function always uses TRACE 1.

The following parameters are to be set for this measurement:

- Analyzer frequency
- Resolution bandwidth
- Measurement time per single pulse
- Trigger source
- Trigger threshold
- Trigger offset
- Type of power measurement (PEAK, MEAN)
- Number of pulses to be measured

During the measurement, each pulse is mapped into a pixel of the screen, i.e. any change of the trace can be detected only at the left-hand edge of the screen. Maximum measurement speed is as usual achieved with the display switched off.

In the example below, a GSM pulse sequence of 8 pulses is measured with 5 µs trigger offset, 434 µs measurement time/pulse, video trigger with 50 % trigger threshold, and peak detection:

```
REM *****
Public Sub MultiBurstPower()
result$ = Space$(200)
'----- R&S FSV default setting -----
CALL SetupStatusReg 'Configure status register
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Single sweep mode
CALL InstrWrite (analyzer, "SYST:DISP:UPD OFF")
'OFF: display off
'----- Perform measurement and query results -----
cmd$ = "MPOW?" cmd$ = cmd$ + "935.2 MHZ," 'Center frequency
cmd$ = cmd$ + "1 MHZ," 'Resolution bandwidth
cmd$ = cmd$ + "434US," 'Measurement time
cmd$ = cmd$ + "VID," 'Trigger source
cmd$ = cmd$ + "50PCT," 'Trigger threshold
cmd$ = cmd$ + "1US," 'Trigger offset
cmd$ = cmd$ + "PEAK," 'Peak detector
cmd$ = cmd$ + "8" 'Number of bursts
CALL InstrWrite (analyzer, cmd$)
CALL InstrRead(analyzer, result$) 'Read results
Print result$
END SUB
REM *****
```

9.16.8 Fast Level Measurement Using Frequency Lists

A typical task for the R&S ESRP is power measurement at a number of frequency points, e.g. at multiples of the fundamental (harmonics measurement), or at frequencies defined by a mobile radio standard (e.g. spectrum due to transients at ± 200 kHz, ± 400 kHz, etc about the carrier frequency of a GSM signal). In many cases, different level and/or bandwidth settings are required for the different frequency points to match the channel spacing and meet the requirements of dynamic range.

Especially for this application, the R&S ESRP offers a number of remote-control functions (commands available in SENSE:LIST subsystem) that allow level measurement based on a frequency list with different instrument settings assigned to different frequencies. Not only the frequency list can be programmed, but also the measurement types (PEAK, RMS, AVG) to be performed simultaneously can be selected.

The example below describes a harmonics measurement on a dual-band amplifier. The harmonics level in general decreases as the frequency increases. To boost measurement sensitivity, therefore, the reference level is lowered by 10 dB from the third harmonic.

The following settings are used:

Reference level:	10.00 dBm up to first harmonic, 0 dBm from 2nd harmonic
RF attenuation:	20 dB
Electronic attenuation:	0 dB (OFF)
Filter type:	NORMal
RBW:	1 MHz
VBW:	3 MHz
Measurement time:	300 μ s
Trigger delay:	100 μ s
Trigger:	video, 45 %

Frequency	Type
935.2 MHz	GSM 900 fundamental
1805.2 MHz	GSM 1800 fundamental
1870.4 MHz	GSM 900 2 nd harmonic
2805.6 MHz	GSM 900 3 rd harmonic
3610.4 MHz	GSM 1800 2 nd harmonic
3740.8 MHz	GSM 900 4 th harmonic
5815.6 MHz	GSM 1800 3 rd Harmonic

The frequencies are selected in ascending order to minimize system-inherent waiting times resulting from frequency changes.

At each frequency point the peak power and the rms power are measured. The peak power and the rms power values are stored alternately in the results memory.

```
REM *****
Public Sub FrequencyList()
result$ = Space$(500)
'----- R&S FSV default setting -----
CALL SetupStatusReg 'Configure status register
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Single sweep mode
CALL InstrWrite (analyzer, "SYST:DISP:UPD OFF") 'Display off
'-----Configure R&S FSV for power measurement based on frequency list -
CALL InstrWrite (analyzer, "TRIG:LEV:IFP -20 dBm")
'Set IF power trigger level
CALL InstrWrite (analyzer, "LIST:POWER:SET ON,ON,OFF,IFP,POS,100us,0")
'----- Perform measurement and query results -----
cmd$ = "LIST:POWER?"cmd$ = cmd$ + "935.2 MHz, 10 dBm, 20 dB,OFF,NORM,1 MHz,3 MHz,
300 us, 0, "
cmd$ = cmd$ + "1805.2 MHz, 10 dBm, 20 dB,OFF,NORM,1 MHz,3 MHz,300 us, 0, "
cmd$ = cmd$ + "1870.4 MHz, 10 dBm, 20 dB,OFF,NORM,1 MHz,3 MHz,300 us, 0, "
cmd$ = cmd$ + "2805.6 MHz, 0 dBm, 20 dB,OFF,NORM,1 MHz,3 MHz,300 us, 0, "
cmd$ = cmd$ + "3610.4 MHz, 10 dBm,20 dB,OFF,NORM,1 MHz,3 MHz,300 us, 0, "
cmd$ = cmd$ + "3740.8 MHz, 0 dBm, 20 dB, OFF, NORM, 1 MHz,3 MHz,300 us, 0, "
cmd$ = cmd$ + "5815.6 MHz, 0 dBm, 20 dB, OFF, NORM, 1 MHz, 3 MHz, 300 us, 0"
CALL InstrWrite (analyzer, cmd$)
CALL InstrRead(analyzer, result$)
Print result$
END SUB
REM *****
```

9.16.9 Level Correction of Transducers

In more complex test systems, the frequency response of the test setup must be taken into account in all power measurements to avoid any measurement errors being introduced from sources other than the DUT.

The R&S ESRP offers the possibility of defining a frequency-dependent attenuation correction factor (transducer factor).

In the example below, a factor with the following characteristics is defined:

Name:	Transtest
Unit:	dB
Scaling:	lin
Comment:	simulated cable correction
Frequency	Level
10 MHz	0 dB

100 MHz	3 dB
1 GHz	7 dB
3 GHz	10 dB

The factor is defined and can be activated as required.

```

REM *****
Public Sub TransducerFactor()
'----- Define transducer factor -----
CALL InstrWrite (analyzer, "CORR:TRAN:SEL 'TRANSTEST'")
'Define "Transtest"'transducer factor
CALL InstrWrite (analyzer, "CORR:TRAN:UNIT 'DB'")
'Unit 'dB'
CALL InstrWrite (analyzer, "CORR:TRAN:SCAL LIN")
'Linear frequency-axis
CALL InstrWrite (analyzer, "CORR:TRAN:COMM 'Simulated cable correction'")
cmd$ = "CORR:TRAN:DATA" 'Enter frequency and level
cmd$ = cmd$ + "10 MHz, 0," 'values. Level values without
cmd$ = cmd$ + "100 MHz, 3," 'unit!
cmd$ = cmd$ + "1GHz, 7,"cmd$ = cmd$ + "3GHz, 10"
CALL InstrWrite (analyzer,cmd$) 'Enter frequency and level values
'----- Activate transducer -----
CALL InstrWrite (analyzer, "CORR:TRAN:STAT ON")
'Activate transducer factor
END SUB
REM *****

```

9.16.10 Measuring the Magnitude and Phase of a Signal

Due to the R&S ESRP's internal architecture, it is capable of measuring and outputting the magnitude and phase of a signal in addition to its power values. This opens up a variety of possibilities for more in-depth analysis (FFT, demodulation, etc).

I/Q data is stored in memory areas each containing 512 k words. Hardware triggering controls the memory.

The following example shows the steps necessary to collect data at a predefined sampling rate and read it from the I/Q memory.

1. Data is output in the form of voltage values referred to the analyzer input. Data can be read in binary or ASCII format.
 - In binary format, the length information carried in the message header is evaluated and used for calculating the x-axis values.
 - In ASCII format, only a list of voltage values is output.
2. Binary data is read in three steps:
3. The number of digits carrying the length information is read.

4. The length information itself is read.
5. The trace data is read.

This procedure is necessary with programming languages like Visual Basic which support only structures of identical data types (arrays), whereas the binary data format uses different data types in the header and the data section.



The arrays for measured data are dimensioned in such a way that they can accommodate the I/Q data of the R&S ESRP (2 × 512 k).

```
REM *****
Public Sub ReadIQData()
'----- Create variables -----
Dim IData(131072) As Single 'Buffer for floating-point
'I data (= 512*1024 bytes)
Dim QData(131072) As Single 'Buffer for floating-point
'Q data (= 512*1024 bytes)
'Note:
'Visual Basic cannot read in
'data volumes larger than
'512 k words!
Dim digits As Byte 'No. of digits as length
Dim IQBytes As Long 'Length of trace data in bytes
Dim IQValues As Long 'No. of meas. values in buffer
Dim retCount As Integer 'Return count from read
asciiResult$ = Space$(6553600) 'Buffer for ASCII I/Q data
' (= 25*2*1024 bytes)
result$ = Space$(100) 'Buffer for simple results
'----- Default setting -----
CALL SetupInstrument 'Default setting
CALL InstrWrite (analyzer, "TRAC:IQ:STAT ON")
'Activate I/Q data
'acquisition mode; must be
'done before TRAC:IQ:SET !
'Select number of test points
' (= 512 * 1024 - 512) at
'RBW 10 MHz, 'sample rate 32 MHz,
'trigger free run, pos. trigger
'edge and 0 s trigger delay.
CALL InstrWrite (analyzer, "TRAC:IQ:SET NORM,10 MHz,32 MHz,IMM,POS,0,130560")
'----- Read-out in binary format-----
CALL InstrWrite (analyzer, "FORMAT REAL,32")
'Set binary format
CALL InstrWrite (analyzer, "TRAC:IQ:DATA?")
'Measure + read out I/Q data
CALL viRead(analyzer, result$, 2, retCount)
'Read and store length for
digits = Val(Mid$(result$, 2, 1)) 'number of digits
```

```

result$ = Space$(100) 'Re-initialize buffer
CALL viRead(analyzer, result$, digits, retCount)
'Read and store length
IQBytes = Val(Left$(result$, digits))
IQBytes = IQBytes/2 'Divide no. per buffer in half
CALL viRead(analyzer, IData(0), IQBytes, retCount)
'Read I data in buffer
CALL viRead(analyzer, QData(0), IQBytes, retCount)
'Read Q data in buffer
CALL viRead(analyzer, result$, 1, retCount)
'Read in end character <NL>
'----- Output of binary data as frequency/level pair -----
IQValues = IQBytes/4 'Single Precision = 4 Bytes
For i = 0 To IQValues - 1
Print "I-Value["; i; "] = "; IData(i)
Print "Q-Value["; i; "] = "; QData(i)
Next i
'----- Read-out in ASCII format -----
CALL InstrWrite (analyzer, "FORMAT ASCII") 'Set ASCII format
CALL InstrWrite (analyzer, "TRAC:IQ:DATA?")
'Re-measure and read out
'I/Q data
CALL InstrRead(analyzer, asciiResult$)
CALL InstrWrite (analyzer, "TRAC:IQ:STAT OFF")
'Stop I/Q data aquisition
'mode if no further
'measurements are to be
'done
END SUB
REM *****

```

9.16.11 Reading and Writing Files

9.16.11.1 Reading a File from the Instrument

In the following example, the TEST1.R&S#x00a0;ESRP.DFL file stored under C:\R_S\Instr\user is read from the instrument and stored in the controller.

```

REM *****
Public Sub ReadFile()
'----- Generate variables -----
Dim digits As Byte 'Number of digits of
'length information
Dim fileBytes As Long 'Length of file with trace data
'in bytes
result$ = Space$(100) 'Buffer for simple results
'----- Default setting of status register -----
CALL SetupStatusReg 'Configure status register

```

```

'----- Read out file -----
CALL InstrWrite (analyzer, "MMEM:DATA? 'C:\R_S\Instr\user\TEST1.R&S FSV.DFL'")
'Select file
CALL ilrd(analyzer, result$, 2) 'Read and store number of
digits = Val(Mid$(result$, 2, 1)) 'digits of length information
CALL ilrd(analyzer, result$, digits) 'Read and store length
fileBytes = Val(Left$(result$, digits)) 'information
FileBuffer$ = Space$(fileBytes) 'Buffer for file
CALL ilrd(analyzer, FileBuffer, fileBytes)
'Read file into buffer
CALL ilrd(analyzer, result$, 1) 'Read terminator <NL>
'----- Store file to controller -----
Open "TEST1.R&S FSV.DFL" For Output As #1
Print #1, FileBuffer; '; to avoid linefeed at
'end of file
Close #1
END SUB
REM *****

```

9.16.11.2 Creating a File on the Instrument

In the following example, the TEST1.R&S#x00a0;ESRP.DFL file available on the controller is stored in the instrument under C:

\R_S\Instr\user\DUPLICAT.R&S#x00a0;ESRP.DFL.

```

REM *****
Public Sub WriteFile()
'----- Generate variables -----
FileBuffer$ = Space$(100000) 'Buffer for file
Dim digits As Long 'Number of digits of
'length information
Dim fileBytes As Long 'Length of file in bytes
fileSize$ = Space$(100) 'Length of file as a string
result$ = Space$(100) 'Buffer for simple results
'----- Default setting of status register -----
CALL SetupStatusReg 'Configure status register
'----- Prepare the definite length block data -----
fileBytes = FileLen("H:\work\vb\TEST1.R&S FSV.DFL")
'Determine length of file
fileSize$ = Str$(fileBytes)
digits = Len(fileSize$) - 1 'Determine number of digits of
fileSize$ = Right$(fileSize$, digits) 'length information
FileBuffer$ = "#" + Right$(Str$(digits), 1) + fileSize$
'Store length information in
'file buffer
'----- Read file from controller -----
Open "H:\work\vb\TEST1.R&S FSV.DFL" For Binary As #1
FileBuffer$ = FileBuffer$ + Left$(Input(fileBytes, #1), fileBytes)
Close #1
'----- Write file -----

```



```

CALL InstrWrite (analyzer, "SYST:COMM:GPIB:RTER EOI") 'Set receive
'terminator on the
'instrument
CALL InstrWrite (analyzer, "MMEM:DATA
'DUPLICAT.R&S FSV.DFL', " + FileBuffer$)
'Select file
END SUB
REM *****

```

9.16.12 Spectrum Emission Mask Measurement

You can configure Spectrum Emission Mask measurements via XML files provided for different standards or by defining ranges and parameters. For both ways an example is given.

9.16.12.1 Using Predefined Standard Wibro

In the following example, the Spectrum Emission Mask measurement is configured using a predefined standard XML file.

```

REM *****
'----- General settings of the instrument -----
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Switch to single sweep
CALL InstrWrite (analyzer, "INIT:IMM;*WAI") 'Make sure no sweep is running
CALL InstrWrite (analyzer, ":SENSE1:SWEep:MODE ESpectrum")
'Set measurement mode
Rem After preset 3 ranges are available where the middle one is
Rem the reference range for calculating the TX power
CALL InstrWrite (analyzer, ":SENSE1:FREQuency:CENTer 2.2 GHz")
'Center frequency 2.2 GHz
CALL InstrWrite (analyzer, ":SENSE1:DETEctor1 RMS")
'Set RMS detector
'----- Setting up the gated trigger -----
CALL InstrWrite (analyzer, ":SENSE1:SWEep:EGATe ON")
'Switch on the external gate mode
CALL InstrWrite (analyzer, ":SENSE1:SWEep:EGATe:SOURce EXTernal")
'Set external gate source
CALL InstrWrite (analyzer, ":SENSE1:SWEep:EGATe:HOLDoff 0s")
'Set delay time to 0 s
CALL InstrWrite (analyzer, ":SENSE1:SWEep:EGATe:LENGth 200 US")
'Set time interval
'----- Setting the standard -----
CALL InstrWrite (analyzer, "SENSE1:ESpectrum:PRESet:STANDARD
'WIBRO\DL\PowerClass_29_40.xml'")
'Set WiBro standard
'----- Measuring -----
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep, wait for sweep
'end

```

```
'----- Reading out results -----
CALL InstrWrite (analyzer, ":TRACe1:DATA? LIST")
'Query list results
CALL InstrWrite (analyzer, ":CALCulate:LIMit:FAIL?")
'Query result of limit check
CALL InstrRead(analyzer, result$)
REM *****
```

9.16.12.2 Defining 5 Ranges with all Parameters

In the following example, the Spectrum Emission Mask measurement is configured by defining ranges and parameters.

```
REM *****
'----- General settings of the instrument -----
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Switch to single sweep
CALL InstrWrite (analyzer, "INIT:IMM;*WAI") 'Make sure no sweep is running
CALL InstrWrite (analyzer, ":SENSe1:SWEep:MODE ESpectrum")
'Set measurement mode
Rem After preset 3 ranges are available where the middle one is
Rem the reference range for calculating the TX power
CALL InstrWrite (analyzer, ":SENSe1:FREQuency:CENTer 2.2GHz")
'Center frequency 2.2 GHz
CALL InstrWrite (analyzer, ":SENSe1:DETEctor1 RMS")
'Set RMS detector
CALL InstrWrite (analyzer, ":TRIGger1:SEquence:SOURce IMMEDIATE")
'Trigger setup
'----- Setting up the gated trigger -----
Rem If a free run trigger is not appropriate a gated trigger can
Rem be set up (just comment in the following lines).
Rem CALL InstrWrite (analyzer, ":SENSe1:SWEep:EGATe ON")
Rem Switch on the external gate mode
Rem CALL InstrWrite (analyzer, ":SENSe1:SWEep:EGATe:SOURce EXTERNAL")
Rem Set external gate source
Rem CALL InstrWrite (analyzer, ":SENSe1:SWEep:EGATe:HOLDoff 0s")
Rem Set delay time to 0 s
Rem CALL InstrWrite (analyzer, ":SENSe1:SWEep:EGATe:LENGth 200 US")
Rem Set time interval
'----- Setting the span -----
CALL InstrWrite (analyzer, ":SENSe1:FREQuency:SPAN 8 MHz")
'Set the span to 8 MHz
'----- Inserting new ranges -----
Rem Enlarge number of ranges to 5 by adding one at the end
Rem and one at the beginning. This ensures that the reference range
Rem remains in the middle
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe2:INSert AFTER")
'Insert a range after range 2
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe1:INSert BEFORE")
'Insert a range before range 1
```

Remote Control – Programming Examples

```

'----- Defining the limit check for all ranges -----
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe:LIMit:STATe AND")
'Set check for absolute and 'relative limit
'----- Defining the reference range settings -----
Rem The bandwidth of the reference range limits the minimum span
Rem of the reference range definition later in the script.
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RTYPE CPOWer")
'Set power reference type
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:BWID 2 MHZ")
'Set bandwidth
'----- Defining the settings of range 1 -----
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe1:FREQuency:START -4 MHZ")
'Set the start frequency
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe1:FREQuency:STOP -2 MHZ")
'Set the stop frequency
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe1:BANDwidth:RESolution 1 MHZ")
'Set the resolution bandwidth
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe1:FILTer:TYPE CFILter")
'Set the channel filters
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe1:BANDwidth:VIDeo 3 MHZ")
'Set the video bandwidth to 3 MHz
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe1:SWEep:TIME 20 ms")
'Set the sweep time to 20 ms
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe1:RLEVel 5 DBM")
'Set the reference level to 5 dBm
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe1:INPut:ATTenuation 20 DB")
'Set the attenuation to 20 dB
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe1:LIMit:ABSolute:START -50")
'Set an absolute limit of -50 dBm
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe1:LIMit:ABSolute:STOP -50")
'Set an absolute limit of -50 dBm
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe1:LIMit:RELative:START -70")
'Set a relative limit of -70 dBc
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe1:LIMit:RELative:STOP -60")
'Set a relative limit of -60 dBc
'----- Defining the settings of range 2 -----
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe2:FREQuency:START -2 MHZ")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe2:FREQuency:STOP -1 MHZ")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe2:BANDwidth:RESolution
100 kHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe2:FILTer:TYPE NORM")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe2:BANDwidth:VIDeo 300 kHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe2:SWEep:TIME 50 ms")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe2:RLEVel 10 DBM")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe2:INPut:ATTenuation 30 DB")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe2:LIMit:ABSolute:START
-40")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe2:LIMit:RELative:START
-60")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe2:LIMit:ABSolute:STOP -40")

```

Remote Control – Programming Examples

```

CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe2:LIMit:RELative:STOP -40")
'----- Defining the settings of range 3 -----
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe3:FREQuency:STARt -1 MHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe3:FREQuency:STOP 1 MHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe3:BANDwidth:RESolution
30 kHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe3:FILTer:TYPE NORM")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe3:BANDwidth:VIDeo 100 kHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe3:SWEep:TIME 5 ms")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe3:RLEVel 20 DBM")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe3:INPut:ATTenuation 30 DB")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe3:LIMit:ABSolute:STARt 200")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe3:LIMit:ABSolute:STOP 200")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe3:LIMit:RELative:STARt 200")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe3:LIMit:RELative:STOP 200")
'----- Defining the settings of range 4 -----
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:FREQuency:STARt 1 MHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:FREQuency:STOP 2 MHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:BANDwidth:RESolution
100 kHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:FILTer:TYPE NORM")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:BANDwidth:VIDeo 300 kHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:SWEep:TIME 50 ms")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:RLEVel 10 DBM")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:INPut:ATTenuation 30 DB")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:LIMit:ABSolute:STARt
-40")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:LIMit:ABSolute:STOP -40")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:LIMit:RELative:STARt
-40")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:LIMit:RELative:STOP -60")
'----- Defining the settings of range 5 -----
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:FREQuency:STARt 2 MHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:FREQuency:STOP 4 MHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:BANDwidth:RESolution 1 MHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:FILTer:TYPE CFILter")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:BANDwidth:VIDeo 3 MHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:SWEep:TIME 20 ms")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:RLEVel 5 DBM")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:INPut:ATTenuation 20 DB")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:LIMit:ABSolute:STARt
-50")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:LIMit:ABSolute:STOP -50")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:LIMit:RELative:STARt -60")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:LIMit:RELative:STOP -70")
'----- Measuring -----
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep, wait for sweep
'end
'----- Reading out results -----
CALL InstrWrite (analyzer, ":TRACe1:DATA? LIST")

```

```
'Query list results
CALL InstrWrite (analyzer, ":CALCulate:LIMit:FAIL?")
'Query result of limit check
CALL InstrRead(analyzer, result$)
REM *****
```

9.16.13 Spurious Emissions Measurement

In the following example, the Spurious Emissions measurement is configured by defining ranges and parameters.

```
REM *****
'----- General settings of the instrument -----
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
Rem After preset 4 ranges are available. Range settings can be questioned
Rem independent from the set measurement mode.
'----- Deleting all ranges -----
Rem Delete all ranges to prepare for setting up a new measurement
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe4:DELeTe")
'Delete range 4
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe3:DELeTe")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe2:DELeTe")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:DELeTe")
'----- Defining the start frequency for all ranges -----
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:FREQuency:START 1000000")
Rem Setting the start frequency of range 1 will create the ranges and
Rem every other range value will be set to the default value.
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe2:FREQuency:START 2000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe3:FREQuency:START 3000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe4:FREQuency:START 4000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe5:FREQuency:START 5000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe:COUNT?")
'Queries the number of defined
'ranges
'----- Querying the parameters of range 1 -----
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:FREQuency:START?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:FREQuency:STOP?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:FILTeR:TYPE?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:BANDwidth:RESolution?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:BANDwidth:VIDeo?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:SWEep:TIME:AUTO?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:DETEctor?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:RLEVel?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:INPut:ATTenuation:AUTO?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:INPut:GAIN:STATe?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:BREak?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:TRANsducer?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:SWEep:TIME?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:INPut:ATTenuation?")
```

Remote Control – Programming Examples

```

CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:POINts?")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:LIMit:STARt?")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:LIMit:STOP?")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:LIMit:STATe?")
'----- Changing into the Spurious Emissions measurement mode -----
CALL InstrWrite (analyzer, ":SENSE1:SWEEP:MODE LIST")
Rem In continuous sweep mode, editing the ranges is not allowed.
Rem You have to stop the measurement first.
Rem In single sweep mode, you can edit the ranges at the end of the sweep.
'----- Single sweep version -----
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Switch to single sweep
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:FREQuency:STARt 500000")
'Change the start frequency
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep, wait for sweep
'end
'----- Continuous sweep version -----
CALL InstrWrite (analyzer, "INIT:CONT ON") 'Switch to continuous sweep
CALL InstrWrite (analyzer, "ABORt") 'Stop the measurement
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:FREQuency:STARt 500000")
'Change the start frequency
CALL InstrWrite (analyzer, ":INITiatel:SPURious") 'Restart the measurement
'----- Defining the range settings in single sweep mode -----
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Switch to single sweep
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep, wait for sweep
'end
Rem Edit one range at a time. Make sure to edit the ranges in a correct
Rem order to prevent limit violations. Ranges cannot overlap.
Rem The best way is to start with range 1.
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:FREQuency:STARt 500000")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:FREQuency:STOP 550000")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:FILTer:TYPE NORM")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:BANDwidth:RESolution 3000000")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:BANDwidth:VIDeo 10000000")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:SWEEp:TIME:AUTO ON")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:DETEctor RMS")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:RLEVel -10")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:INPut:ATTenuation:AUTO ON")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:POINts 8001")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:INPut:GAIN:STATe OFF")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:BREak OFF")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:LIMit:STARt -20")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:LIMit:STOP -20")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe1:LIMit:STATe ON")
Rem Proceed with range 2.
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe2:FREQuency:STARt 1000000")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe2:FREQuency:STOP 200000000")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe2:FILTer:TYPE CFILter")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe2:BANDwidth:RESolution 5000000")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe2:DETEctor POS")
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGe2:RLEVel -20")

```

```

CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe2:INPut:ATTenuation 0")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe2:POINts 32001")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe2:INPut:GAIN:STATe ON")
Rem Proceed with range 3.
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe3:FREQuency:START 250000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe3:FREQuency:STOP 1000000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe3:FILTer:TYPE RRC")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe3:POINts 32001")
Rem Proceed with range 4.
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe4:FREQuency:START 1200000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe4:FREQuency:STOP 4000000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe4:FILTer:TYPE PULSe")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe4:POINts 251")
Rem Proceed with range 5.
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe5:FREQuency:START 5000000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe5:FREQuency:STOP 6000000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe5:POINts 7001")
'----- Defining the limit check for all ranges -----
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:LIMit:STATe ON")
'Activate the limit check
'----- Setting the span to include all ranges -----
CALL InstrWrite (analyzer, ":SENSe1:FREQuency:START 500000")
CALL InstrWrite (analyzer, ":SENSe1:FREQuency:STOP 6000000000")
'----- Measuring -----
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep, wait for sweep
'end
'----- Reading out results -----
CALL InstrWrite (analyzer, ":TRACe1:DATA? LIST")
'Query list results
CALL InstrWrite (analyzer, ":CALCulate1:PSEarch[:IMMediate]")
'Deactivate limit line and
'just look for peaks
Rem Or set margin to 200 in order to find all peaks
CALL InstrWrite (analyzer, ":TRACe1:DATA? SPUR")
'Query just the peaks
CALL InstrWrite (analyzer, ":CALCulate:LIMit:FAIL?")
'Query result of limit check
CALL InstrRead(analyzer, result$)
REM *****

```

9.16.14 Averaging I/Q Data

The R&S ESRP has averaging capability also for I/Q measurements, i.e. I/Q data can be averaged over several test runs. This is subject to the following conditions:

- An external trigger signal must be available for data measurement, and the trigger signal must be phase-locked to the signal measured.
- The same reference-frequency signal must be used for the DUT and the R&S ESRP.

- Internal I/Q data averaging is supported up to 512 k I/Q samples.

If all of the above conditions are fulfilled, no phase shift will occur between consecutive test runs. Phase shift may falsify the measured average so that in extreme cases a value of 0 is obtained.

The default setting of the instrument for data measurement without averaging has to be changed as follows:

```
REM *****
'----- R&S FSV default setting -----
CALL SetupInstrument 'Default setting
CALL InstrWrite (analyzer, "TRAC:IQ:STAT ON")
'Activate I/Q data acquisition
'mode; this must be
'done before TRAC:IQ:SET!
'Select max. number of test points (= 512 * 1024) at 10 MHz RBW,
'32 MHz sampling rate, external
'trigger, pos. trigger edge and
'0 s trigger delay.
CALL InstrWrite (analyzer, "TRAC:IQ:SET NORM,10 MHz,32 MHz,EXT,POS,0,524288")
CALL InstrWrite (analyzer, "TRAC:IQ:AVER ON") 'Switch on I/Q averaging
CALL InstrWrite (analyzer, "TRAC:IQ:AVER:COUN 10") 'Set 10 test runs
'----- Read data in binary format -----
...
REM *****
```

9.16.15 Using IQ Gating

IQ gating refers to recording IQ samples in certain time intervals – the gate areas. There are different modes to define the gate areas:

- Edge triggered recording
- Level triggered recording

For more information, see "IQ Gating" in the "Remote Commands" chapter under "Trace:IQ" subsystem.

Measurement example: Level mode

With IQ gating in level mode, the area in which the gate signal is active is recorded. In this example, the gate signal is generated by the IFP trigger. The [figure 9-8](#) shows the signal (triggered externally) in IQ mode. The following sample program records the signal in level mode with an external trigger.

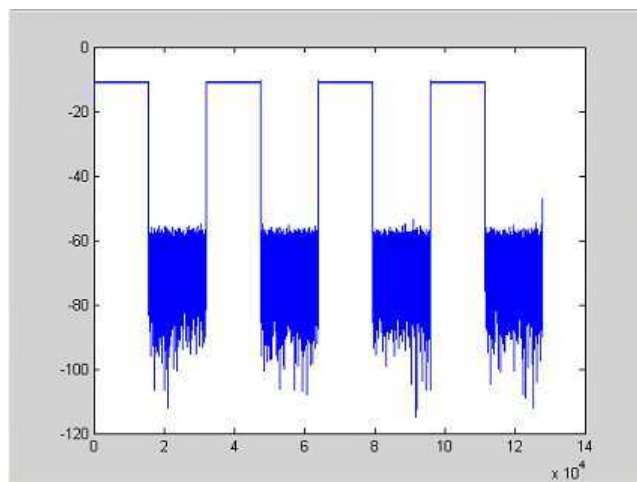


Fig. 9-8: Signal to be recorded in IQ mode

Used values

sample rate: 32 MHz

number of IQ samples: 128000

trigger mode: IFP

Program

```
:TRACel:IQ ON
Trace:iq:set NORM,0,32000000,IFP,POS,0,128000
:TRIGger1:SEquence:LEVel:IFPower -20
:TRACel:IQ:EGATe ON
:TRACel:IQ:EGATe:TYPE LEVel
```

Result

In [figure 9-9](#), the recorded signal using IQ gating in level mode is displayed. Edges are only visible around the IFP trigger point, otherwise only the signal level is recorded.

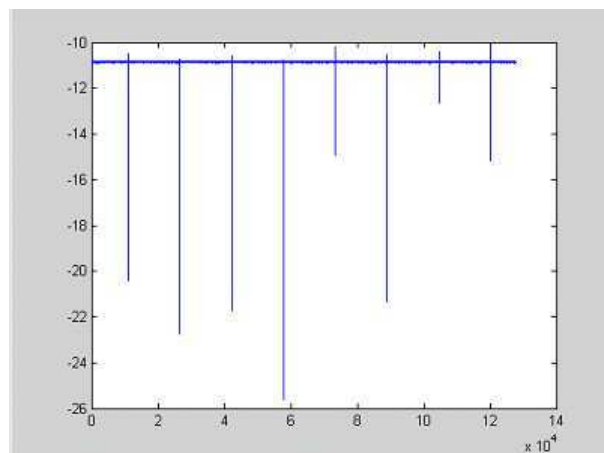


Fig. 9-9: Recorded signal using IQ gating in level mode

Measurement example: Edge mode

In edge mode, the gate area is defined by:

- delay (pretrigger samples)
- length
- number of periods
- gap between the periods

The gate starting point can be defined using an IFP or external trigger.

The [figure 9-10](#) shows the signal to be recorded in IQ mode.

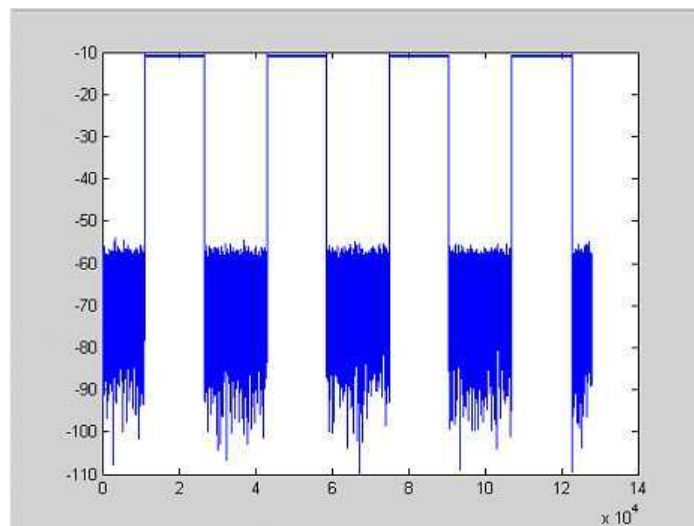


Fig. 9-10: Signal to be recorded in IQ mode

Example 1: Signal only

The following sample program records the signal in edge mode and displays only the signal, without gaps and noise.

Used values

sample rate: 32 MHz

number of IQ samples: 128000

delay = 11020 samples

length = 15500 samples

trigger mode: EXT

Program

```
:TRACel:IQ ON  
  
Trace:iq:set NORM,0,32000000,EXT,POS, 11020,128000  
  
:TRACel:IQ:EGATE ON  
  
:TRACel:IQ:EGATE:TYPE EDGE  
  
:TRACel:IQ:EGATE:LENGTH 15500
```

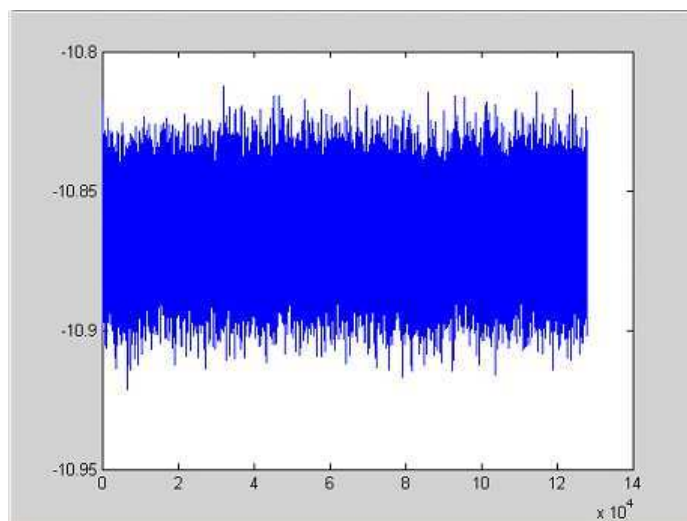
Result

Fig. 9-11: Result: signal only (no gaps, no noise)

Example 2: Noise only

The following sample program records the signal in edge mode and displays only the noise.

Used values

sample rate: 32 MHz

number of IQ samples: 128000

delay = 0 samples

length =9000 samples

trigger mode: EXT

Program

```
:TRACel:IQ ON  
  
Trace:iq:set NORM,0,32000000,EXT,POS, 0,128000  
  
:TRACel:IQ:EGATE ON  
  
:TRACel:IQ:EGATE:TYPE EDGE  
  
:TRACel:IQ:EGATE:LENGTH 9000
```

Result

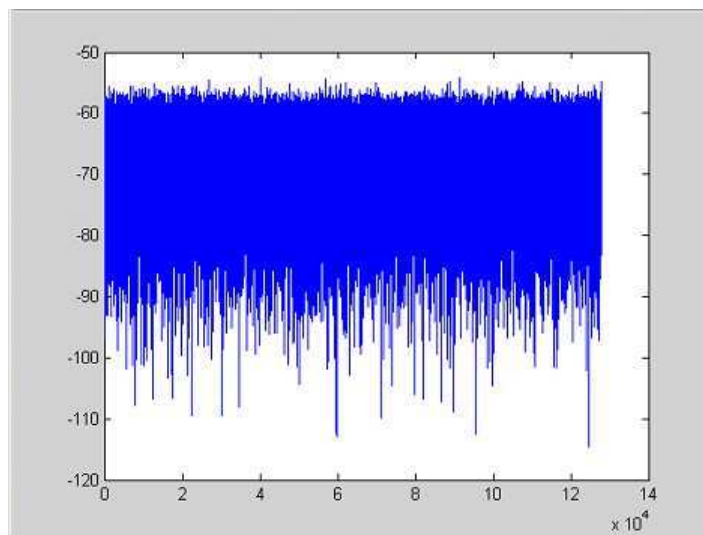


Fig. 9-12: Result: noise only

Measurement example: Periodic signal intervals in edge mode

The gate area can also be defined by a number of gate periods and the distance between two periods (gap). In this example, a power ramp is recorded, triggered by the IFP on the highest edge (see [figure 9-13](#)). As a result, only the levels of the individual ramp areas of the first 3 periods are displayed (see [figure 9-14](#)).

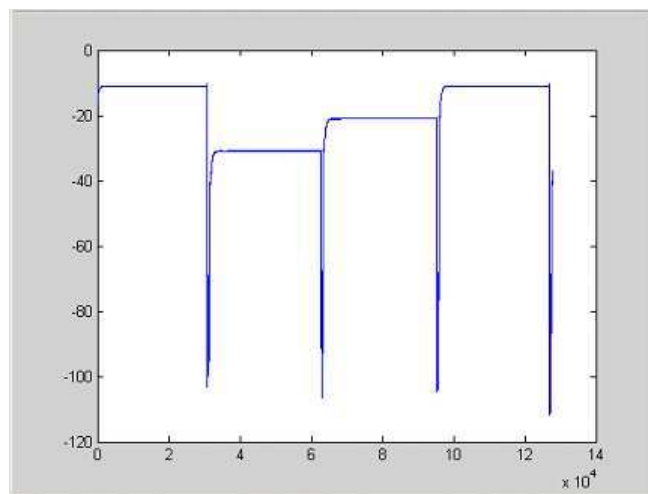


Fig. 9-13: Periodic signal recording in edge mode

Used values:

sample rate: 3,2 MHz

number of IQ samples: 228000

trigger mode: IFP


length: 28800

number of periods: 3

gap: 3800 samples

Program

```
:TRACel:IQ ON
trace:iq:set NORM,0,3200000,IFP,POS,0,228000
:TRIGger1:SEQuence:LEVel:IFPower -20
:TRACel:IQ:EGATe ON
:TRACel:IQ:EGATe:TYPE EDGE
:TRACel:IQ:EGATe:LENGth 28800
:TRACel:IQ:EGATe:NOF 3
:TRACel:IQ:EGATe:GAP 3800
```

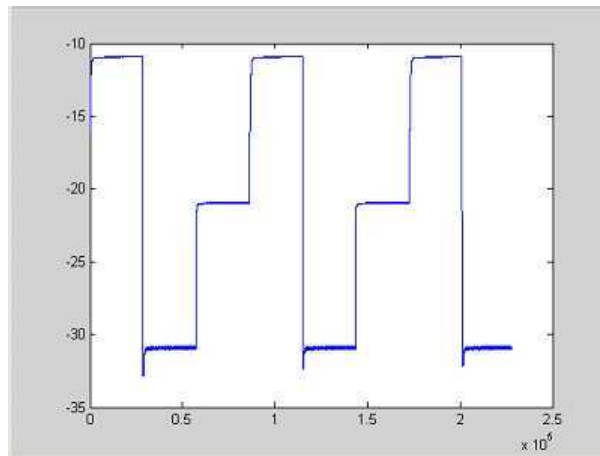Result**Fig. 9-14: Result: periodic power ramp levels****9.16.16 Usage of Four Spectrum Instances**

As of R&S ESRP firmware version 1.50, you can open up to four tabs for spectrum mode with the softkey "New Spectrum" in the "MODE" menu. The following remote example shows how to set up four tabs with four different measurements on a WCDMA signal.

```
REM *****
Public Sub 4SpectrumTabs()
result$ = Space$(100)

'----- R&S FSV default setting -----
CALL SetupStatusReg           'Set status registers
CALL InstrWrite(analyzer,"*RST") 'Reset instrument
CALL InstrWrite(analyzer,"INIT:CONT OFF") 'Single sweep

'----- Setup the first Spectrum tab (Spectrum Overview Measurement) ----
CALL InstrWrite(analyzer,"INIT:CONT OFF") 'Single sweep
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:SCAL:RLEV 10 dBm") 'Reference level
CALL InstrWrite(analyzer,"FREQ:START 100MHz;STOP 6 GHz") 'Span

'----- Setup the Spectrum 2 Tab (ACLR measurement) -----
CALL InstrWrite(analyzer,"INST:CRE SAN,'Spectrum 2'") 'Create Tab 2

'--- After creation the tab is in standard preset setup ---
CALL InstrWrite(analyzer,"INIT:CONT OFF") 'Single sweep
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:SCAL:RLEV 10 dBm") 'Reference level
CALL InstrWrite(analyzer,"FREQ:CENT 2.1175GHz") 'different CF
CALL InstrWrite(analyzer,"CALC:MARK:FUNC:POW:SEL ACP") 'select ACLR meas
CALL InstrWrite(analyzer,"CALC:MARK:FUNC:POW:PRES FW3Gppcdma")
'select WCDMA BTS standard

'----- Setup the Spectrum 3 Tab (OBW measurement) -----
CALL InstrWrite(analyzer,"INST:CRE SAN,'Spectrum 3'") 'Create Tab 3
```

Remote Control – Programming Examples

```

CALL InstrWrite(analyzer,"INIT:CONT OFF")      'Single sweep
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:SCAL:RLEV 10 dBm") 'Reference level
CALL InstrWrite(analyzer,"FREQ:CENT 2.1175GHz")      'different CF
CALL InstrWrite(analyzer,"CALC:MARK:FUNC:POW:SEL OBW")      'select OBW meas
CALL InstrWrite(analyzer,"CALC:MARK:FUNC:POW:PRES FW3Gppcdma")
      ' select WCDMA BTS standard
'----- Setup the Spectrum 4 Tab (CCDF measurement) -----
CALL InstrWrite(analyzer,"INST:CRE SAN,'Spectrum 4'")      'Create Tab 4
CALL InstrWrite(analyzer,"INIT:CONT OFF")      'Single sweep
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:SCAL:RLEV 10 dBm") 'Reference level
CALL InstrWrite(analyzer,"FREQ:CENT 2.1175GHz")      'different CF
CALL InstrWrite(analyzer," CALC:STAT:CCDF ON")      'select CCDF meas

'----- Sweep in first Spectrum Tab and query marker -----
CALL InstrWrite(analyzer,"INST:SEL SAN")      'Select Tab 1
CALL InstrWrite(analyzer,"INIT;*WAI")      'Perform sweep with sync
CALL InstrWrite(analyzer,"CALC:MARK1:MAX")      'Marker to peak
CALL InstrWrite(analyzer,"CALC:MARK1:X?")      'Query Marker x value
CALL InstrRead(analyzer,result$)
Print "Spectrum 1 Marker x [Hz]: ";result$
CALL InstrWrite(analyzer,"CALC:MARK1:Y?")      'Query Marker y value
CALL InstrRead(analyzer,result$)
Print "Spectrum 1 Marker y [dBm]: ";result$
'----- Sweep in Spectrum 2 Tab and query ACLR results -----
CALL InstrWrite(analyzer," INST:SEL 'Spectrum 2'")      'Select Tab 2
CALL InstrWrite(analyzer,"INIT;*WAI")      'Perform sweep with sync
CALL InstrWrite(analyzer,"CALC:MARK:FUNC:POW:RES? ACP") 'Query ACLR results
CALL InstrRead(analyzer,result$)
Print "Spectrum 2 ACRL results : ";result$

'----- Sweep in Spectrum 3 Tab and query OBW results -----
CALL InstrWrite(analyzer," INST:SEL 'Spectrum 3'")      'Select Tab 3
CALL InstrWrite(analyzer,"INIT;*WAI")      'Perform sweep with sync
CALL InstrWrite(analyzer,"CALC:MARK:FUNC:POW:RES? OBW") 'Query OBW results
CALL InstrRead(analyzer,result$)
Print "Spectrum 3 OBW results : ";result$

'----- Sweep in Spectrum 4 Tab and query CCDF results -----
CALL InstrWrite(analyzer," INST:SEL 'Spectrum 4'")      'Select Tab 4
CALL InstrWrite(analyzer,"INIT;*WAI")      'Perform sweep with sync
CALL InstrWrite(analyzer,"CALC:STAT:RES1? ALL") 'Query CCDF results
CALL InstrRead(analyzer,result$)
Print "Spectrum 4 CCDF results : ";result$
'----- Now the sweep part can be redone without the need of -----
'----- doing the setup of all 4 measurements again. -----
END SUB
REM *****

```

9.17 GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

The R&S ESRP analyzer family supports a subset of the GPIB commands of HP models 8560E, 8561E, 8562E, 8563E, 8564E, 8565E, 8566A, 8566B, 8568A, 8568B and 8594E.

Despite the differences in system architecture and device features, the supported commands have been implemented in a way to ensure a sufficiently high degree of correspondence with the original.

This includes the support of syntax rules for not only newer device families (B and E models) but for the previous A family as well.

In many cases the selection of commands supported by the R&S ESRP is sufficient to run an existing GPIB program without adaptation.

After the introduction, this section includes the following topics:

9.17.1	GPIB Languages.....	828
9.17.2	Command Set of Models 8560E, 8561E, 8562E, 8563E, 8564E, 8565E, 8566A/B, 8568A/B, 8591E, 8594E, 71100C, 71200C, and 71209A.....	830
9.17.3	Special Features of the Syntax Parsing Algorithms for 8566A and 8568A Models....	853
9.17.4	Special Behavior of Commands.....	854
9.17.5	Model-Dependent Default Settings.....	855
9.17.6	Data Output Formats.....	856
9.17.7	Trace Data Output Formats.....	856
9.17.8	Trace Data Input Formats.....	857
9.17.9	GPIB Status Reporting.....	857

9.17.1 GPIB Languages

The R&S ESRP analyzer family supports a subset of the GPIB commands used by other devices. Thus it can emulate other devices in order to use existing remote control programs.

In order to emulate device models that are not part of the selection list of the GPIB "Language" setting, you can modify the identification string received in response to the ID command ("Identification String" setting). Thus, any device model whose command set is compatible with one of the supported device models can be emulated.

Supported languages

Language	Comment
SCPI	
71100C	Compatible to 8566A/B

Language	Comment
71200C	Compatible to 8566A/B
71209A	Compatible to 8566A/B
8560E	
8561E	
8562E	
8563E	
8564E	
8565E	
8566A	Command sets A and B are available. Command sets A and B differ in the rules regarding the command structure.
8566B	
8568A	Command sets A and B are available. Command sets A and B differ in the rules regarding the command structure.
8568A_DC	Uses DC input coupling by default if supported by the instrument
8568B	Command sets A and B are available. Command sets A and B differ in the rules regarding the command structure.
8568B_DC	Uses DC input coupling by default if supported by the instrument
8591E	Compatible to 8594E
8594E	Command sets A and B are available. Command sets A and B differ in the rules regarding the command structure.
PSA89600	

Notes:

- If you select a language other than "SCPI", the GPIB address is set to 18 if it was 20 before.
- The Start/stop frequency, reference level and number of sweep points are adapted to the selected instrument model.
- When you switch between remote control languages, the following settings or changes are made:
SCPI:
The instrument performs a PRESET.
8566A/B, 8568A/B, 8594E; FSEA, FSEB, FSEM; FSEK:
 - The instrument performs a PRESET.
 - The following instrument settings are changed:

Table 9-27: Instrument settings for emulation of 8566A/B, 8568A/B, 8594E; FSEA, FSEB, FSEM; FSEK instruments

Model	# of Trace Points	Start Freq.	Stop Freq.	Ref Level	Input Coupling
8566A/B	1001	2 GHz	22 GHz	0 dBm	AC
8568A/B	1001	0 Hz	1.5 GHz	0 dBm	AC
8560E	601	0 Hz	2.9 GHz	0 dBm	AC
8561E	601	0 Hz	6.5 GHz	0 dBm	AC
8562E	601	0 Hz	13.2 GHz	0 dBm	AC
8563E	601	0 Hz	26.5 GHz	0 dBm	AC
8564E	601	0 Hz	40 GHz	0 dBm	AC
8565E	601	0 Hz	50 GHz	0 dBm	AC
8594E	401	0 Hz	3 GHz	0 dBm	AC

Note: The stop frequency indicated in the table may be limited to the corresponding frequency of the R&S ESRP, if required.

9.17.2 Command Set of Models 8560E, 8561E, 8562E, 8563E, 8564E, 8565E, 8566A/B, 8568A/B, 8591E, 8594E, 71100C, 71200C, and 71209A

As with the original units, the R&S ESRP includes the command set of the A models in the command set of the B models.



The HP model 8591E is compatible to HP model 8594E, the HP models 71100C, 71200C, and 71209A are compatible to HP models 8566A/B.

Command	Supported subset	Function	Corresp. HP-Models	Status
A1	A1	Clear/Write A	HP 8566A/ HP 8568A	available
A2	A2	Max Hold A	HP 8566A/ HP 8568A	available
A3	A3	View A	HP 8566A/ HP 8568A	available
A4	A4	Blank A	HP 8566A/ HP 8568A	available
ABORT ¹⁾	ABORT	Stop previous function	HP 856xE/ HP 8566B/HP 8568B/HP 8594E	available

Command	Supported subset	Function	Corresp. HP-Models	Status
ADD		Add	HP 8566B/ HP 8568B/ HP 8594E	available
ADJALL	ADJALL	Adjust all	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
ADJCRT ²⁾	ADJCRT	Adjust CRT	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
ADJIF ²⁾	ADJIF	Auto adjust IF	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
AMB	AMB ON OFF AMB 1 0 AMB?	Trace A – B -> Trace A	HP 856xE/ HP 8594E	available
AMBPL	AMBPL ON OFF AMBPL 1 0 AMBPL?		HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
ANNOT	ANNOT ON OFF ANNOT 1 0 ANNOT?	Annotation	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
APB	APB	Trace A + B -> Trace A	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
AT	AT <numeric_value> DB DM AT DN AT UP AT AUTO AT?	Attenuation	HP 8566A/ HP 8568A/ HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
AUNITS	AUNITS DBM DBMV DBUV AUNITS?	Amplitude Units	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

Command	Supported subset	Function	Corresp. HP-Models	Status
AUTOPL	AUTOPL	Coupling default	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
AXB	AXB	Exchange trace A and B	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
B1	B1	Clear/Write B	HP 8566A/ HP 8568A	available
B2	B2	Max Hold B	HP 8566A/ HP 8568A	available
B3	B3	View B	HP 8566A/ HP 8568A	available
B4	B4	Blank B	HP 8566A/ HP 8568A	available
BL	BL	Trace B – Display Line - > Trace B	HP 8566A/ HP 8568A	available
BML	BML	Trace B – Display Line - > Trace B	HP 856xE/ HP8594E	available
BTC	BTC	Transfer Trace B -> C	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
BXC	BXC	Exchange Trace B and C	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
BLANK	BLANK TRA TRB TRC	Blank Trace	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
C1	C1	A-B off	HP 8566A/ HP 8568A	available
C2	C2	A-B -> A	HP 8566A/ HP 8568A	available
CA	CA	Couple Attenuation	HP 8566A/ HP 8568A	available

Command	Supported subset	Function	Corresp. HP-Models	Status
CAL ¹⁾	CAL ALL CAL ON CAL OFF	Start analyzer self alignment	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
CF	CF <numeric_value> HZ KHZ MHZ GHZ CF UP CF DN CF?	Center Frequency	HP 8566A/ HP 8568A/ HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
CHANPWR	CHANPWR TRA TRB, <numeric_value>.,?	Channel Power Measurement	HP 856xE/ HP 8594E	available
CHPWRBW	CHPWRBW <numeric_value> HZ KHZ MHZ GHZ	Channel Power Bandwidth	HP 856xE/ HP 8594E	available
CLRW	CLRW TRA TRB TRC	Clear/Write Trace	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
CLS ¹⁾	CLS	Clear all status bits	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
CONTS	CONTS		HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
COUPLE	COUPLE AC DC	Input coupling	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
CR	CR	Couple RBW	HP 8566A/ HP 8568A	available
CS	CS	Couple Step Size	HP 8566A/ HP 8568A	available
CT	CT	Couple SWT	HP 8566A/ HP 8568A	available
CTA		Convert to absolute units	HP 8566B/ HP 8568B/ HP 8594E	available

Command	Supported subset	Function	Corresp. HP-Models	Status
CV	CV	Couple VBW	HP 8566A/ HP 8568A	available
D1 ²⁾	D1	Display Size normal	HP 8566A/ HP 8568A	available
DA ²⁾	DA	Display address		available
DEMOT ¹⁾	DEMOT ON OFF AM FM	AF Demodulator	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
DEMOTAGC ²⁾	DEMOTAGC ON OFF 1 0 DEMOTAGC?	Demodulation AGC	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
DEMOT	DEMOT <numeric_value> S MS US SC DEMOT UP DN DEMOT?	Demodulation time	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
DET	DET POS SMP NEG DET?	Detector	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
DISPOSE ²⁾	ONEOS TRMATH ONSWP ALL <numeric_value>			available
DIV		Divide	HP 8566B/ HP 8568B/ HP 8594E	available
DL	DL <numeric_value> DB DM DL DN DL UP DL ON DL OFF DL?	Display Line	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
DLE	DLE ON OFF	Display Line enable	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

Command	Supported subset	Function	Corresp. HP-Models	Status
DONE	DONE DONE?	Done query	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
DW ²⁾	DW	Write to display and increment address		available
E1	E1	Peak Search	HP 8566A/ HP 8568A	available
E2	E2	Marker to Center Freq.	HP 8566A/ HP 8568A	available
E3	E3	Deltamarker Step Size	HP 8566A/ HP 8568A	available
E4	E4	Marker to Ref. Level	available	available
EDITDONE		limit line edit done	HP 856xE	available
EDITLIML		edit limit line	HP 856xE	available
ERR	ERR 250 cal level error ERR 300 LO unlock ERR 472 cal error digital filter ERR 473 cal error analog filter ERR 552 cal error log amp ERR 902 unscale tracking generator ERR 906 oven cold ERR 117 numeric unit error ERR 112 Unrecognized Command	Now some FSx errors are mapped to HP errors.	HP8568A HP856xE	not yet available
ERR?	ERR?	Error queue query	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	not yet available
EX	EX	Exchange trace A and B	HP 8566A/ HP 8568A	available
FA	FA <numeric_value> HZ KHZ MHZ GHZ FA UP FA DN FA?	Start Frequency	HP 8566A/ HP 8568A/ HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

Command	Supported subset	Function	Corresp. HP-Models	Status
FB	FB <numeric_value> HZ KHZ MHZ GHZ FB UP FB DN FB?	Stop Frequency	HP 8566A/ HP 8568A/ HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
FDSP		Frequency display off	8560E 8561E 8562E 8563E 8564E 8565E	available
FOFFSET ¹⁾	FOFFSET <numeric_value> HZ KHZ MHZ GHZ FOFFSET?	Frequency Offset	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
FREF	FREF INT EXT	Reference Frequency	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
FS	FS	Full Span	HP 8566A/ HP 8568A	available
FUNCDEF		Define Function Function must be in one line between delimiters @	HP 8594E/ HP 856xE/ HP 8566B	available
GATE ¹⁾	GATE ON OFF GATE 1 0		HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
GATECTL ¹⁾	GATECTL EDGE LEVEL GATECTL?		HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
GD ¹⁾	GD <numeric_value> US MS SC GD DN GD UP GD?		HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

Command	Supported subset	Function	Corresp. HP-Models	Status
GL ¹⁾	GL <numeric_value> US MS SC GL DN GL UP GL?		HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
GP ¹⁾	GP POS NEG GP?		HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
GRAT ²⁾	GRAT ON OFF	Graticule	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
I1	I1		HP 8566A/ HP 8568A	available
I2	I2		HP 8566A/ HP 8568A	available
ID	ID ID?	Identify	HP 8566A/ HP 8568A/ HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
INZ ¹⁾	INZ 75 INZ 50 INZ?	Input Impedance	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
IP	IP	Instrument preset	HP 8566A/ HP 8568A	available
KEYDEF	KEYDEF	Key definition	HP 8566B/ HP 856xE/ HP 859xE	available
KEYEXEC	KEYEXEC	Key execute	HP 8566B	available
KS=	KS= <numeric_value> HZ KHZ MHZ GHZ KS= DN KS= UP KS=?	Marker Frequency Counter Resolution	HP 8566A/ HP 8568A	available
KS/	KS/	Manual Peaking	HP 8566A/ HP 8568A	available

GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

Command	Supported subset	Function	Corresp. HP-Models	Status
KS(	KS(	Lock register	HP 8566A/ HP 8568A	available
KS)	KS)	Unlock register	HP 8566A/ HP 8568A	available
KS91	KS91	Read Amplitude Error	HP 8566A/ HP 8568A	available
KSA	KSA	Amplitude Units in dBm	HP 8566A/ HP 8568A	available
KSB	KSB	Amplitude Units in dBmV	HP 8566A/ HP 8568A	available
KSC	KSC	Amplitude Units in dBuV	HP 8566A/ HP 8568A	available
KSD	KSD	Amplitude Units in V	HP 8566A/ HP 8568A	available
KSE	KSE <numeric_value> <char data>@	Title mode	HP 8566A/ HP 8568A	available
KSG	KSG KSG ON KSG <numeric_value>	Video Averaging on	HP 8566A/ HP 8568A	available
KSH	KSH	Video Averaging Off	HP 8566A/ HP 8568A	available
KSK		Marker to Next Peak	HP 8566A/ HP 8568A	available
KSL		Marker Noise off	HP 8566A/ HP 8568A	available
KSM		Marker Noise on	HP 8566A/ HP 8568A	available
KSO	KSO	Deltamarker to span	HP 8566A/ HP 8568A	available
KSP	KSP <numeric_value>	HPIB address	HP 8566A/ HP 8568A	available
KSQ ²⁾	KSQ	Band lock off	HP 8566A/ HP 8568A	available
KST	KST	Fast Preset	HP 8566A/ HP 8568A	available
KSV	KSV <numeric_value> HZ KHZ MHZ GHZ KSV?	Frequency Offset	HP 8566A/ HP 8568A	available

Command	Supported subset	Function	Corresp. HP-Models	Status
KSW	KSW	Error Correction Routine	HP 8566A/ HP 8568A	available
KSX	KSX	Correction Values On	HP 8566A/ HP 8568A	available
KSY	KSY	Correction Values Off	HP 8566A/ HP 8568A	available
KSZ	KSZ <numeric_value> DB KSZ?	Reference Value Offset	HP 8566A/ HP 8568A	available
KSa	KSa	Normal Detection	HP 8566A/ HP 8568A	available
KSb	KSb	Pos Peak Detection	HP 8566A/ HP 8568A	available
KSd	KSd	Neg Peak Detection	HP 8566A/ HP 8568A	available
KSe	KSe	Sample Detection	HP 8566A/ HP 8568A	available
KSg		CRT beam off		available
KSh		CRT beam on		available
KSj	KSj	View Trace C	HP 8566A/ HP 8568A	available
KSk	KSk	Blank Trace C	HP 8566A/ HP 8568A	available
KSl	KSl	Transfer B to C	HP 8566A/ HP 8568A	available
KSm	KSm	Graticule off	HP 8566A/ HP 8568A	available
KSn ²⁾	KSn	Grid on	HP 8566A/ HP 8568A	available
KSo	KSn	Character display off	HP 8566A/ HP 8568A	available
KSp	KSp	Character display on	HP 8566A/ HP 8568A	available
KSr	KSr	Create service request	HP 8566A/ HP 8568A	available
KSt ²⁾	KSt	Band lock on	HP 8566A/ HP 8568A	available

Command	Supported subset	Function	Corresp. HP-Models	Status
KSv ²⁾	KSv	Signal ident on	HP 8566A/ HP 8568A	available
L0	L0	Display line off	HP 8566A/ HP 8568A	available
LB	LB <numeric_value> <char data>@	Label	HP 8566A/ HP 8568A	available
LF	LF	Low frequency band pre-set	HP 8566A/ HP 8568A	available
LIMD		limit line delta	HP 856xE	available
LIMF		limit line frequency	HP 856xE	available
LIMIFAIL		limit fail query	HP 856xE	available
LIMIPURGE		purge limit line	HP 856xE	available
LIMIRCL		recall limit line	HP 856xE	available
LIMIREL		relative limit line	HP 856xE	available
LIMISAV		save limit line	HP 856xE	available
LIMITEST		limit line test	HP 856xE	available
LIML		lower limit line value	HP 856xE	available
LIMM		middle limit line value	HP 856xE	available
LIMTFL		flat limit line segment	HP 856xE	available
LIMTSL		slope limit line segment	HP 856xE	available
LIMU		upper limit line value	HP 856xE	available
LG	LG <numeric_value> DB DM LG?	Amplitude Scale Log	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
LL ²⁾	LL	Plot command	HP 8566A/ HP 8568A	available
LN	LN	Amplitude Scale Lin	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
M1	M1	Marker Off	HP 8566A/ HP 8568A	available

Command	Supported subset	Function	Corresp. HP-Models	Status
M2	M2 M2 <numeric_value> HZ KHZ MHZ GHZ M2 DN M2 UP M2?	Marker Normal	HP 8566A/ HP 8568A	available
M3	M3 M3 <numeric_value> HZ KHZ MHZ GHZ M3 DN M3 UP M3?	Delta Marker	HP 8566A/ HP 8568A	available
M4	M4 <numeric_value> HZ KHZ MHZ GHZ	Marker Zoom	HP 8566A/ HP 8568A	available
MA	MA	Marker Amplitude	HP 8566A/ HP 8568A	available
MC0	MC0	Marker Count off	HP 8566A/ HP 8568A	available
MC1	MC1	Marker Count on	HP 8566A/ HP 8568A	available
MDS	MDS	Measurement data size	HP 8566B	available
MEAS		Measurement status	HP 856xE	available
MF	MF MF?	Marker Frequency	HP 8566A/ HP 8568A/ HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MINH ¹⁾	MINH TRC	Minimum Hold	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKA	MKA <numeric_value> MKA?	Marker Amplitude	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKACT	MKACT 1 MKACT?	Select the active marker	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	not available

Command	Supported subset	Function	Corresp. HP-Models	Status
MKBW ¹⁾	MKBW <numeric_value> MKBW ON MKBW OFF	N dB Down	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKD	MKD MKD <numeric_value> HZ KHZ MHZ GHZ MKD DN MKD UP MKD ON MKD OFF MKD?	Delta Marker	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKDR	MKDR <numeric_value> HZ KHZ MHZ GHZ S SC MS MSEC USMKDR?	Delta Marker reverse	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKDR?		Delta Marker reverse query		available
MKF	MKF <numeric_value> HZ KHZ MHZ GHZ MKF?	Set Marker Frequency	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKFC	MKFC ON OFF	Frequency Counter on/off	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKFCR ¹⁾	MKFCR <numeric_value> HZ KHZ MHZ GHZ MKFCR DN MKFCR UP MKFCR?	Frequency Counter Resolution	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKMIN	MKMIN	Marker -> Min	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

Command	Supported subset	Function	Corresp. HP-Models	Status
MKN	MKN MKN <numeric_value> HZ KHZ MHZ GHZ MKN DN MKN UP MKN ON MKN OFF MKN?	Normal Marker	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKNOISE	MKNOISE ON OFF MKNOISE 1 0 MKNOISE?	Noise Measurement	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKOFF	MKOFF MKOFF ALL	Marker off	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKP	MKP <numeric_value> MKP?	Marker position	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKPK	MKPK MKPK HI MKPK NH MKPK NR MKPK NL	Marker Search	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKPT	MKPT MKPT HI MKPT NH MKPT NR MKPT NL	Marker Peak Threshold	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKPX	MKPX <numeric_value> DB MKPX DN MKPX UP MKPX?	Peak Excursion	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKRL	MKRL	Ref Level = Marker Level	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

Command	Supported subset	Function	Corresp. HP-Models	Status
MKSP	MKSP	Deltamarker to span	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKSS	MKSS	CF Stepsize = Marker Freq	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKT	MKT <numeric_value> S MS US SC MKT?	MKF = fstart + MKT/ SWT*Span	HP 856xE/ HP 8594E	available
MKTRACE	MKTRACE TRA TRB TRC	Marker to Trace	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKTRACK	MKTRACK ON OFF MKTRACK 1 0 MKTRACK?	Signal Track	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKTYPE	MKTYPE AMP MK TYPE?	Marker type	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
ML		Mixer level	HP 856xE	available
MOV	MOV TRA TRB TRC, TRA TRB T RC	Move Trace Contents	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MPY		Multiply	HP 8566B/ HP 8568B/ HP 8594E	available
MT0	MT0	Marker Track Off	HP 8566A/ HP 8568A	available
MT1	MT1	Marker Track On	HP 8566A/ HP 8568A	available
MXMH	MXMH TRA TRB	Maximum Hold	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

Command	Supported subset	Function	Corresp. HP-Models	Status
NORMALIZE	NORMALIZE	Normalize trace	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	not available available
NRL ¹⁾	NRL <numeric_value> DB DM NRL?	Normalized Reference Level	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
NRPOS	NRPOS <numeric_value> NRL?	Normalize position	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
O1	O1	Format ASCII, Values 0 to 4095	HP 8566A/ HP 8568A	available
O2	O2	Format Binary, Values 0 to 4095	HP 8566A/ HP 8568A	available
O3	O3	Format ASCII	HP 8566A/ HP 8568A	available
OA	OA	Output All	HP 8566A/ HP 8568A	available
OL	OL <80 characters> OL?	Output Learn String	HP 8566A/ HP 8568A	available
OT	OT	Output Trace Annotations	HP 8566A/ HP 8568A	available
PA	PA <numeric_value>, <numeric_value>	Plot command	HP 8566A/ HP 8568A	available
PD	PD <numeric_value>, <numeric_value>	Plot command	HP 8566A/ HP 8568A	available
PH_MKF		Spot frequency in Hz	HP 856xE	available
PH_FMIN		Min offset frequency to be measured	HP 856xE	available
PH_FMAX		Max offset frequency to be measured	HP 856xE	available
PH_MKA		Queries amplitude at the spot frequency	HP 856xE	available
PH_DRIFT		0: for stable signals, 1: for drift	HP 856xE	available
PH_RLVL		Reference level for the log plot	HP 856xE	available

Command	Supported subset	Function	Corresp. HP-Models	Status
PH_SMTHV		Trace smoothing	HP 856xE	available
PH_VBR		Filtering	HP 856xE	available
PH_RMSPT		Amount of data points to skip when doing the integration	HP 856xE	available
PH_RMSFL		Lower integration frequency in Hz	HP 856xE	available
PH_RMSFU		Upper integration frequency in Hz	HP 856xE	available
PH_EXIT		Quits phase noise	HP 856xE	available
PH_F_UDT		Updates internal frequency variables	HP 856xE	available
PH_LMT_L		Apply limits to PH_FMIN and PH_FMAX	HP 856xE	available
PH_MEAS		Generates log frequency plot	HP 856xE	available
PH_MKF_D		Updates the spot frequency	HP 856xE	available
PH_RMS		Requests the rms phase noise	HP 856xE	available
PH_RMSFT		Updates internal frequency variables	HP 856xE	available
PH_RMSX		Calculates the rms phase noise	HP 856xE	available
PH_SPOTF		Executes the spot frequency measurement	HP 856xE	available
PLOTORG ²⁾	PLOTORG DSP GRT	Plot command	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
PLOTSRC ²⁾	PLOTSRC ANNT GRT TRB TRA ALLDSP GRT	Plot command	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
PP	PP	Preselector Peaking	HP 8566A/ HP 8568A	available
PRINT ¹⁾	PRINT PRINT 1 0	Hardcopy	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

Command	Supported subset	Function	Corresp. HP-Models	Status
PSDAC ²⁾	PSDAC <numeric_value> PSDAC UP DN	Preselector DAC value	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
PSTATE ²⁾	PSTATE ON OFF 1 0	Protect State	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
PU	PU	Pen Up	HP 8566A/ HP 8568A	available
PWRBW	PWRBW	Power Bandwidth	HP 8566B/ HP 859x/ HP 856xE	available
R1	R1	Set Status Bit Enable	HP 8566A/ HP 8568A	available
R2	R2	Set Status Bit Enable	HP 8566A/ HP 8568A	available
R3	R3	Set Status Bit Enable	HP 8566A/ HP 8568A	available
R4	R4	Set Status Bit Enable	HP 8566A/ HP 8568A	available
RB	RB <numeric_value> HZ KHZ MHZ GHZ RB DN RB UP RB AUTO RB?	Resolution Bandwidth	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
RBR	RBR <numeric_value> RBR DN RBR UP RBR?	Resolution Bandwidth Ratio	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
RC1...6	RC1...6	Recall Last State	HP 8566A/ HP 8568A	available
RCLS	RCLS <numeric_value>	Recall State Register	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
RCLT	RCLT TRA TRB, <number>	Recall Trace	HP856xE/ HP8594E	available

Command	Supported subset	Function	Corresp. HP-Models	Status
RESET	RESET	Instrument preset	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
REV	REV REV?	Firmware revision	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
RL	RL <numeric_value> DB DM RL DN RL UP RL?	Reference Level	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
RLCAL	RLCAL <numeric_value> RL?	Reference Level Calibration	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
RCLOSCAL	RCLOSCAL	Recall Open/Short Average	HP 856xE/ HP 8594E	not available
RCLTHRU	RCLTHRU	Recall Thru	HP 856xE/ HP 8594E	not available
RLPOS ¹⁾	RLPOS <numeric_value> RLPOS DN RLPOS UP RLPOS?	Reference Level Position	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
ROFFSET	ROFFSET <numeric_value> DB DM ROFFSET?	Reference Level Offset	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
RQS	RQS	Service Request Bit mask	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
S1	S1	Continuous Sweep	HP 8566A/ HP 8568A	available
S2	S2	Single Sweep	HP 8566A/ HP 8568A	available
SADD		add a limit line segment	HP 856xE	available

GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

Command	Supported subset	Function	Corresp. HP-Models	Status
SAVES	SAVES <numeric_value>	Save State Register	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
SAVET	SAVET TRA TRB,<num- ber>	Save Trace	HP856xE/ HP8594E	available
SDEL		delete limit line segment	HP 856xE	available
SDON		limit line segment done	HP 856xE	available
SEDI		edit limit line segment	HP 856xE	available
SMOOTH	SMOOTH TRA TRB TRC, <number of points>	Smooth Trace	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
SNGLS	SNGLS	Single Sweep	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
SQUELCH ²⁾	SQUELCH <numeric_value> DM DB SQUELCH UP DN SQUELCH ON OFF	Squelch	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
SP	SP <numeric_value> HZ KHZ MHZ GHZ SP DN SP UP SP?	Span	HP 8566A/ HP 8568A/ HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
SRCNORM ¹⁾	SRCNORM ON OFF SRCNORM 1 0	Source Normalization	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	not available
SRCPOFS ¹⁾	SRCPOFS <numeric_value> DB DM SRCPOFS DN SRCPOFS UP SRCPOFS?	Source Power Offset	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	not available

Command	Supported subset	Function	Corresp. HP-Models	Status
SRCPWR ¹⁾	SRCPWR <numeric_value> DB DM SRCPWR DN SRCPWR UP SRCPWR ON SRCPWR OFF SRCPWR?	Source Power	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	not available
SS	SS <numeric_value> HZ KHZ MHZ GHZ SS DN SS UP SS AUTO SS?	CF Step Size	HP 8566A/ HP 8568A/ HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
ST	ST <numeric_value> US MS SC ST DN ST UP ST AUTO ST?	Sweep Time	HP 8566A/ HP 8568A/ HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
STB	STB	Status byte query	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
STOREOPEN	STOREOPEN	Store Open	HP 856xE/ HP 8594E	not available
STORESHORT	STORESHORT	Store Short	HP 856xE/ HP 8594E	not available
STORETHRU	STORETHRU	Store Thru	HP 856xE/ HP 8594E	not available
SUB		Subtract	HP 8566B/ HP 8568B/ HP 8594E	available
SUM		sum of trace amplitudes	HP 8566B/ HP 8568B/ HP 8594E	available
SV1...6	SV1...6	Save State	HP 8566A/ HP 8568A	available

GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

Command	Supported subset	Function	Corresp. HP-Models	Status
SWPCPL ²⁾	SWPCPL SA SR SWPCPL?	Sweep Couple	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
SWPOUT ²⁾	SWPOUT FAV FAVA RAMP SWPOUT?	Sweep Output	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
T0	T0	Threshold off	HP 8566A/ HP 8568A	available
T1	T1	Free Run Trigger	HP 8566A/ HP 8568A	available
T2 ²⁾	T2	Line Trigger	HP 8566A/ HP 8568A	available
T3	T3	External Trigger	HP 8566A/ HP 8568A	available
T4	T4	Video Trigger	HP 8566A/ HP 8568A	available
TA	TA	Transfer A	HP 8566A/ HP 8568A	available
TACL	TACL?	Returns instantaneous measurement results. See TRACE<trace #>:IMMediate:LEVel? for full description.		not available
TBCL	TBCL?			
TCCL	TCCL?			
TACR	TACR?	Returns instantaneous measurement results. See TRACE<trace #>:IMMediate:LEVel? for full description.		not available
TBCR	TBCR?			
TCCR	TCCR?			
TB	TB	Transfer B	HP 8566A/ HP 8568A	available
TDF	TDF P TDF M TDF B TDF A TDF I	Trace Data Format	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

Command	Supported subset	Function	Corresp. HP-Models	Status
TH	TH <numeric_value> DB DM TH DN TH UP TH ON TH OFF TH AUTO TH?	Threshold	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
THE	THE ON OFF	Threshold Line enable	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
TIMEDSP ¹⁾	TIMEDSP ON OFF TIMEDSP 1 0 TIMEDSP?	Time Display	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
TM	TM FREE VID EXT LINE ²⁾ TM?	Trigger Mode	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
TM LINE ²⁾	TM LINE	Trigger Line	HP 8566B	available
TRA	TRA B TRA A TRA I	Transfer A	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
TRB	TRB B TRB A TRB I	Transfer B	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
TRSTAT	TRSTAT?	Trace State Query	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
TS	TS	Take Sweep	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
UR ²⁾	UR	Plot Command	HP 8566A/ HP 8568A	available

Command	Supported subset	Function	Corresp. HP-Models	Status
VARDEF	VARDEF	Variable definition, arrays are not supported	HP 8566B/ HP 8568B/ HP 8594E	available
VAVG	VAVG VAVG TRA TRB TRC	Video Averaging	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
VB	VB <numeric_value> HZ KHZ MHZ GHZ VB DN VB UP VB AUTO VB?	Video Bandwidth	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
VBR ¹⁾	VBR <numeric_value> VBR DN VBR UP VBR?	Video Bandwidth Ratio	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
VIEW	VIEW TRA TRB TRC		HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
VTL	VTL <numeric_value> DB DM VTL DN VTL UP VTL?	Video Trigger Level	HP 856xE/ HP 8594E	not available
1) HP 8594E only				
2) Command is accepted without error message, but is ignored				

9.17.3 Special Features of the Syntax Parsing Algorithms for 8566A and 8568A Models

The command syntax is very different for models A and B. Different names are assigned to identical instrument functions, and the command structure likewise differs considerably between models A and models B.

The command structure for models A is as follows:

```
<command> ::= <command  
code> [<SPC>] [<data> | <step>] [<SPC>] [<delimiter>] [<command  
code>] ... <delimiter>
```

<data> ::= <Value> [<SPC>] [<units code>] [<SPC>] [<delimiter>] [<SPC>] [<data>]...

<step> ::= UP | DN

where

<command code> = see Table "Supported Commands"

<Value> = integer or floating-point numerical value

<units code> = DM | -DM | DB | HZ | KZ | MZ | GZ | MV | UV | SC | MS | US

<delimiter> = <CR> | <LF> | <,> | <;> | <ETX>

<SPC> = 32₁₀

<ETX> = 3₁₀

Command sections given in [] are optional.

The R&S ESRP GPIB hardware differs from that used in the HP analyzers. Therefore, the following constraint exists:

<LF> | <EOI> are still used as delimiters since the GPIB hardware is able to identify them. The other delimiters are identified and evaluated during syntax analysis.

9.17.4 Special Behavior of Commands

Command	Known Differences
ABORT	Does not automatically set the command complete bit (bit 4) in the status byte. An additional DONE is required for that purpose.
ANNOT	Only frequency axis annotation is affected.
AT	AT DN/UP: Step size
CAL	The CAL commands do not automatically set the command complete bit (bit 4) in the status byte. An additional DONE command is required for that purpose.
CF	Default value, range, step size
CR	Default ratio Span/RBW
CT	Formula for coupled sweep time
CV	Default ratio RBW/VBW
DET	DET? returns SAMP instead of SMP on the R&S ESRP. DET not automatically set the command complete bit (bit 4) in the status byte. An additional DONE is required for that purpose.
ERR?	Deletes the error bit in the status register but always returns a '0' in response.
FA	Default value, range, step size
FB	Default value, range, step size
ID	

Command	Known Differences
M2	Default value, range, step size
M3	Default value, range, step size
MKACT	Only marker 1 is supported as the active marker.
MKBW	Default value
MKPT	Step size
MKPX	Step size
OL?	Storage of instrument settings: 80 characters are returned as information on the instrument settings. The contents of the 80 characters returned does not correspond to the original data contents of the 8566A/8568A family.
OL	Readout of instrument settings: The 80 characters read by means of OL? are accepted as information on the corresponding instrument settings. The contents of the 80 characters read does not correspond to the original data contents of the 8566A/8568A family.
RB	Default value, range, step size
RL	Default value, step size
RLPOS	Adapts the position of the reference level even if the tracking generator normalization is not active.
RQS	Supported bits: 1 (Units key pressed) 2 (End of Sweep) 3 (Device error) 4 (Command complete) 5 (Illegal command)

9.17.5 Model-Dependent Default Settings

If the GPIB language is switched over to an 85xx model, the GPIB address is automatically switched over to 18 provided that the default address of the R&S ESRP (20) is still set. If a different value is set, this value is maintained. Upon return to SCPI, this address remains unchanged.

The following table shows the default settings obtained after a change of the GPIB language and for the commands IP, KST and RESET:

Model	# of Trace Points	Start Freq.	Stop Freq.	Ref Level	Input Coupling
8566A/B	1001	2 GHz	22 GHz	0 dBm	AC
8568A/B	1001	0 Hz	1.5 GHz	0 dBm	AC
8560E	601	0 Hz	2.9 GHz	0 dBm	AC

Model	# of Trace Points	Start Freq.	Stop Freq.	Ref Level	Input Coupling
8561E	601	0 Hz	6.5 GHz	0 dBm	AC
8562E	601	0 Hz	13.2 GHz	0 dBm	AC
8563E	601	0 Hz	26.5 GHz	0 dBm	AC
8564E	601	0 Hz	40 GHz	0 dBm	AC
8565E	601	0 Hz	50 GHz	0 dBm	AC
8594E	401	0 Hz	3 GHz	0 dBm	AC



Stop frequency

The stop frequency given in the table may be limited to the corresponding frequency range of the R&S ESRP.

Command LF sets the stop frequency for 8566A/B to a maximum value of 2 GHz.

Test points (trace points)

The number of trace points is switched over only upon transition to the REMOTE state.

9.17.6 Data Output Formats

In the case of the SCPI and IEEE488.2 standards, the output formats for numerical data are flexible to a large extent. The output format for the HP units, by contrast, is accurately defined with respect to the number of digits. The memory areas for reading instrument data have therefore been adapted accordingly in the remote-control programs for instruments of this series.

Therefore, in response to a query, the R&S ESRP returns data of the same structure as that used by the original instruments; this applies in particular to the number of characters returned.

Two formats are currently supported when trace data is output: Display Units (command O1) and physical values (command O2, O3 or TDF P). As to the "Display Units" format, the level data of the R&S ESRP is converted to match the value range and the resolution of the 8566/8568 series. Upon transition to the **REMOTE** state, the R&S ESRP is reconfigured such that the number of test points (trace points) corresponds to that of the 85xx families (1001 for 8566A/B and 8568A/B, 601 for 8560E to 8565E, 401 for 8594E).

9.17.7 Trace Data Output Formats

All formats are supported for trace data output: display units (command O1), display units in two byte binary data (command O2 or TDF B and MDS W), display units in one byte binary data (command O4 or TDF B and MDS B) and physical values (commands O3 or TDF P). With format "display units" the level data is converted into value range and resolution of the 8566/8568 models. On transition to REMOTE state the number of

trace points are reconfigured in order to be conform to the selected instrument model (1001 for 8566A/B and 8568 A/B, 601 for 8560E to 8565E, 401 for 8594E).

9.17.8 Trace Data Input Formats

Trace data input is only supported for binary date (TDF B, TDF A, TDF I, MDS W, MDS B).

9.17.9 GPIB Status Reporting

The assignment of status bits by commands R1, R2, R3, R4, RQS is supported.

The STB command and the serial poll respond with an 8-bit value with the following assignment:

Bit enabled by RQS	Description
0	not used (value 0)
1	Units key pressed
2	End of Sweep
3	Device Error
4	Command Complete
5	Illegal Command
6	Service Request
7	not used (value 0)

Bits 0 and 7 are not used and always have the value 0.

Please note that the R&S ESRP reports any key pressed on the front panel rather than only the unit keys if bit 1 was enabled.

Another difference is the behavior of bit 6 when using the STB? query. On the HP analyzers this bit monitors the state of the SRQ line on the bus. On the R&S ESRP this is not possible. Therefore this bit is set, as soon as one of the bits 1 to 5 is set. It won't be reset by performing a serial poll.

List of Commands

[SENSe:]SWEep:SPACing.....	494
[SENSe:][WINDow:]DETEctor<trace>[:FUNCTION].....	498
[SENSe:][WINDow:]DETEctor<trace>[:FUNCTION].....	658
[SENSe:][WINDow:]DETEctor<trace>[:FUNCTION]:AUTO.....	658
[SENSe:]ADJust:ALL.....	635
[SENSe:]ADJust:CONFIguration:HYSTeresis:LOWer.....	635
[SENSe:]ADJust:CONFIguration:HYSTeresis:UPPer.....	636
[SENSe:]ADJust:CONFIgure:LEVel:DURation.....	636
[SENSe:]ADJust:CONFIgure:LEVel:DURation:MODE.....	636
[SENSe:]ADJust:CONFIgure:TRIG.....	636
[SENSe:]ADJust:FREQuency.....	637
[SENSe:]ADJust:LEVel.....	637
[SENSe:]AVERage<n>:COUNT.....	656
[SENSe:]AVERage<n>:TYPE.....	657
[SENSe:]AVERage<n>[:STATe<Trace>].....	657
[SENSe:]BANDwidth:IF.....	486
[SENSe:]BANDwidth BWIDth:VIDeo.....	639
[SENSe:]BANDwidth BWIDth:VIDeo:AUTO.....	639
[SENSe:]BANDwidth BWIDth:VIDeo:RATio.....	639
[SENSe:]BANDwidth BWIDth:VIDeo:TYPE.....	639
[SENSe:]BANDwidth BWIDth[:RESolution].....	487
[SENSe:]BANDwidth BWIDth[:RESolution]:AUTO.....	487
[SENSe:]BANDwidth BWIDth[:RESolution]:AUTO.....	637
[SENSe:]BANDwidth BWIDth[:RESolution]:FFT.....	638
[SENSe:]BANDwidth BWIDth[:RESolution]:RATio.....	638
[SENSe:]BANDwidth BWIDth[:RESolution]:TYPE.....	487
[SENSe:]CORRection:COLLect[:ACQuire].....	704
[SENSe:]CORRection:METHod.....	705
[SENSe:]CORRection:RECall.....	705
[SENSe:]CORRection:TRANsducer:ACTive?.....	743
[SENSe:]CORRection:TRANsducer:ADJust:RLEVel[:STATe].....	743
[SENSe:]CORRection:TRANsducer:CATalog?.....	743
[SENSe:]CORRection:TRANsducer:COMMeNt.....	744
[SENSe:]CORRection:TRANsducer:DATA.....	744
[SENSe:]CORRection:TRANsducer:DELeTe.....	744
[SENSe:]CORRection:TRANsducer:SCALing.....	744
[SENSe:]CORRection:TRANsducer:SELeCt.....	745
[SENSe:]CORRection:TRANsducer:UNIT.....	745
[SENSe:]CORRection:TRANsducer:VIEW.....	745
[SENSe:]CORRection:TRANsducer[:STATe].....	745
[SENSe:]CORRection:TSET:BREak.....	746
[SENSe:]CORRection:TSET:CATalog?.....	746
[SENSe:]CORRection:TSET:COMMeNt.....	746
[SENSe:]CORRection:TSET:DELeTe.....	747
[SENSe:]CORRection:TSET:RANGe<range>.....	747
[SENSe:]CORRection:TSET:SELeCt.....	747
[SENSe:]CORRection:TSET:UNIT.....	748

[SENSe:]CORRection:TSET[:STATe].....	748
[SENSe:]CORRection[:STATe].....	705
[SENSe:]DEMod.....	465
[SENSe:]DEMod:SQUelch:LEVel.....	466
[SENSe:]DEMod:SQUelch[:STATe].....	466
[SENSe:]DETEctor:RECEiver[:FUNctIon].....	457
[SENSe:]DETEctor<t>:FMEasurement.....	460
[SENSe:]ESpectrum:BWID.....	581
[SENSe:]ESpectrum:FILTer[:RRC]:ALPHA.....	581
[SENSe:]ESpectrum:FILTer[:RRC][:STATe].....	582
[SENSe:]ESpectrum:HighSpeed.....	573
[SENSe:]ESpectrum:PRESet:REStore.....	571
[SENSe:]ESpectrum:PRESet:StORe.....	571
[SENSe:]ESpectrum:PRESet[:STANdard].....	571
[SENSe:]ESpectrum:RANGe<range>:BANDwidth:VIDeo.....	574
[SENSe:]ESpectrum:RANGe<range>:BANDwidth[:RESolution].....	574
[SENSe:]ESpectrum:RANGe<range>:COUnT.....	574
[SENSe:]ESpectrum:RANGe<range>:DELeTe.....	575
[SENSe:]ESpectrum:RANGe<range>:FILTer:TYPE.....	575
[SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation.....	576
[SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation:AUTO.....	577
[SENSe:]ESpectrum:RANGe<range>:INPut:GAIN:STATe.....	577
[SENSe:]ESpectrum:RANGe<range>:INSert.....	577
[SENSe:]ESpectrum:RANGe<range>:LiMit<source>:ABSolute:StARt.....	578
[SENSe:]ESpectrum:RANGe<range>:LiMit<source>:ABSolute:StOP.....	578
[SENSe:]ESpectrum:RANGe<range>:LiMit<source>:RELative:StARt.....	578
[SENSe:]ESpectrum:RANGe<range>:LiMit<source>:RELative:StOP.....	579
[SENSe:]ESpectrum:RANGe<range>:LiMit<source>:STATe.....	579
[SENSe:]ESpectrum:RANGe<range>:RLEVel.....	579
[SENSe:]ESpectrum:RANGe<range>:SWEep:TIME.....	580
[SENSe:]ESpectrum:RANGe<range>:SWEep:TIME:AUTO.....	580
[SENSe:]ESpectrum:RANGe<range>:TRANsducer.....	580
[SENSe:]ESpectrum:RANGe<range>[:FREQuency]:StARt.....	575
[SENSe:]ESpectrum:RANGe<range>[:FREQuency]:StOP.....	576
[SENSe:]ESpectrum:RRANGe.....	582
[SENSe:]ESpectrum:RTYPE.....	582
[SENSe:]FMEasurement:AUTO.....	461
[SENSe:]FMEasurement:LISN:FILTer:HPAS[:STATe].....	500
[SENSe:]FMEasurement:LISN:PHASe.....	500
[SENSe:]FMEasurement:LISN[:TYPE].....	500
[SENSe:]FMEasurement:TIME.....	461
[SENSe:]FREQuency:CENTer.....	482
[SENSe:]FREQuency:CENTer.....	631
[SENSe:]FREQuency:CENTer:STEP.....	482
[SENSe:]FREQuency:CENTer:STEP:AUTO.....	631
[SENSe:]FREQuency:CENTer:STEP:LINK.....	631
[SENSe:]FREQuency:CENTer:STEP:LINK:FACTOR.....	631
[SENSe:]FREQuency:MODE.....	483
[SENSe:]FREQuency:MODE.....	632
[SENSe:]FREQuency:OFFSet.....	632

[SENSe:]FREQuency:SPAN.....	633
[SENSe:]FREQuency:SPAN:FULL.....	633
[SENSe:]FREQuency:STARt.....	483
[SENSe:]FREQuency:STARt.....	632
[SENSe:]FREQuency:STOP.....	483
[SENSe:]FREQuency:STOP.....	633
[SENSe:]LIST:POWer:RESult?.....	624
[SENSe:]LIST:POWer:SET.....	627
[SENSe:]LIST:POWer:STATe.....	628
[SENSe:]LIST:POWer[:SEQuence].....	625
[SENSe:]LIST:RANGe<range>:BANDwidth:VIDeo.....	562
[SENSe:]LIST:RANGe<range>:BANDwidth[:RESolution].....	562
[SENSe:]LIST:RANGe<range>:BREak.....	563
[SENSe:]LIST:RANGe<range>:COUNt.....	563
[SENSe:]LIST:RANGe<range>:DELeTe.....	563
[SENSe:]LIST:RANGe<range>:DETector.....	564
[SENSe:]LIST:RANGe<range>:FILTer:TYPE.....	564
[SENSe:]LIST:RANGe<range>:INPut:ATTenuation.....	565
[SENSe:]LIST:RANGe<range>:INPut:ATTenuation:AUTO.....	566
[SENSe:]LIST:RANGe<range>:INPut:GAIN:STATe.....	566
[SENSe:]LIST:RANGe<range>:LIMit:STARt.....	566
[SENSe:]LIST:RANGe<range>:LIMit:STATe.....	567
[SENSe:]LIST:RANGe<range>:LIMit:STOP.....	567
[SENSe:]LIST:RANGe<range>:POINts.....	567
[SENSe:]LIST:RANGe<range>:RLEVel.....	568
[SENSe:]LIST:RANGe<range>:SWEep:TIME.....	568
[SENSe:]LIST:RANGe<range>:SWEep:TIME:AUTO.....	568
[SENSe:]LIST:RANGe<range>:TRANsducer.....	568
[SENSe:]LIST:RANGe<range>[:FREQuency]:STARt.....	565
[SENSe:]LIST:RANGe<range>[:FREQuency]:STOP.....	565
[SENSe:]MPOWer:FTYPE.....	620
[SENSe:]MPOWer:RESult:MIN?.....	621
[SENSe:]MPOWer:RESult[:LIST]?.....	620
[SENSe:]MPOWer[:SEQuence].....	621
[SENSe:]POWer:ACHannel:ACPairs.....	542
[SENSe:]POWer:ACHannel:BANDwidth BWIDth:ACHannel.....	542
[SENSe:]POWer:ACHannel:BANDwidth BWIDth:ALTErnatE<channel>.....	543
[SENSe:]POWer:ACHannel:BANDwidth BWIDth[:CHANnel<channel>].....	543
[SENSe:]POWer:ACHannel:FILTer:ALPHA:ACHannel.....	546
[SENSe:]POWer:ACHannel:FILTer:ALPHA:ALTErnatE<channel>.....	546
[SENSe:]POWer:ACHannel:FILTer:ALPHA:CHANnel<channel>.....	547
[SENSe:]POWer:ACHannel:FILTer:ALPHA[:ALL].....	546
[SENSe:]POWer:ACHannel:FILTer[:STATe]:ACHannel.....	547
[SENSe:]POWer:ACHannel:FILTer[:STATe]:ALL.....	548
[SENSe:]POWer:ACHannel:FILTer[:STATe]:ALTErnatE<channel>.....	547
[SENSe:]POWer:ACHannel:FILTer[:STATe]:CHANnel<channel>.....	547
[SENSe:]POWer:ACHannel:MODE.....	558
[SENSe:]POWer:ACHannel:NAME:ACHannel.....	543
[SENSe:]POWer:ACHannel:NAME:ALTErnatE<channel>.....	544
[SENSe:]POWer:ACHannel:NAME:CHANnel<channel>.....	544

[SENSe:]POWer:ACHannel:PRESet.....	538
[SENSe:]POWer:ACHannel:PRESet:RLEVel.....	538
[SENSe:]POWer:ACHannel:REFerence:AUTO ONCE.....	548
[SENSe:]POWer:ACHannel:REFerence:TXCHannel:AUTO.....	548
[SENSe:]POWer:ACHannel:REFerence:TXCHannel:MANual.....	549
[SENSe:]POWer:ACHannel:SPACing:ALTErnate<channel>.....	545
[SENSe:]POWer:ACHannel:SPACing:CHANnel<channel>.....	545
[SENSe:]POWer:ACHannel:SPACing[:ACHannel].....	544
[SENSe:]POWer:ACHannel:TXCHannel:COUNT.....	545
[SENSe:]POWer:BANDwidth BWIDth.....	561
[SENSe:]POWer:HSPeed.....	559
[SENSe:]POWer:NCORrection.....	559
[SENSe:]POWer:TRACe.....	537
[SENSe:]ROSCillator:EXTernal:FREQuency.....	727
[SENSe:]ROSCillator:SOURce.....	727
[SENSe:]ROSCillator:SOURce:EAUTO?.....	727
[SENSe:]SCAN:RANGes[:COUNT].....	492
[SENSe:]SCAN<range>:BANDwidth:RESolution.....	491
[SENSe:]SCAN<range>:INPut:ATTenuation.....	491
[SENSe:]SCAN<range>:INPut:ATTenuation:AUTO.....	491
[SENSe:]SCAN<range>:INPut:GAIN:AUTO.....	491
[SENSe:]SCAN<range>:INPut:GAIN[:STATE].....	492
[SENSe:]SCAN<range>:INPut:TYPE.....	492
[SENSe:]SCAN<range>:START.....	493
[SENSe:]SCAN<range>:STEP.....	493
[SENSe:]SCAN<range>:STOP.....	493
[SENSe:]SCAN<range>:TIME.....	494
[SENSe:]SWEep:COUNT.....	489
[SENSe:]SWEep:COUNT.....	641
[SENSe:]SWEep:COUNT:CURRent.....	489
[SENSe:]SWEep:EGATe.....	647
[SENSe:]SWEep:EGATe:HOLDoff.....	648
[SENSe:]SWEep:EGATe:LENGth.....	648
[SENSe:]SWEep:EGATe:POLarity.....	648
[SENSe:]SWEep:EGATe:SOURce.....	648
[SENSe:]SWEep:EGATe:TRACe<k>: PERiod.....	604
[SENSe:]SWEep:EGATe:TRACe<k>: STOP<range>.....	605
[SENSe:]SWEep:EGATe:TRACe<k>: COMMEnt.....	603
[SENSe:]SWEep:EGATe:TRACe<k>: START<range>.....	604
[SENSe:]SWEep:EGATe:TRACe<k>[:STATE<range>].....	604
[SENSe:]SWEep:EGATe:TYPE.....	649
[SENSe:]SWEep:MODE.....	572
[SENSe:]SWEep:POINTS.....	641
[SENSe:]SWEep:TIME.....	458
[SENSe:]SWEep:TIME.....	641
[SENSe:]SWEep:TIME:AUTO.....	642
[SENSe:]SWEep:TYPE.....	642
[SENSe:]SWEep:TYPE:USED?.....	642
*CAL?.....	710
*CLS.....	710

*ESE.....	710
*ESR?.....	710
*IDN?.....	711
*IST?.....	711
*OPC.....	711
*OPT?.....	711
*PCB.....	711
*PRE.....	711
*PSC.....	712
*RST.....	712
*SRE.....	712
*STB?.....	712
*TRG.....	713
*TST?.....	713
*WAI.....	713
ABORT	458
CALCulate:PEAKsearch PSEarch:CLEar[:IMMediate].....	495
CALCulate:SGRam:TRACe.....	469
CALCulate:TFLine:STATe.....	519
CALCulate<n>:DELTamarker<m>:AOFF	512
CALCulate<n>:DELTamarker<m>:FUNctio:n:BPOWer:MODE.....	689
CALCulate<n>:DELTamarker<m>:FUNctio:n:BPOWer:RESult?.....	689
CALCulate<n>:DELTamarker<m>:FUNctio:n:BPOWer:SPAN.....	690
CALCulate<n>:DELTamarker<m>:FUNctio:n:BPOWer[:STATe].....	690
CALCulate<n>:DELTamarker<m>:FUNctio:n:FIXed:RPOint:MAXimum[:PEAK].....	672
CALCulate<n>:DELTamarker<m>:FUNctio:n:FIXed:RPOint:X.....	672
CALCulate<n>:DELTamarker<m>:FUNctio:n:FIXed:RPOint:Y.....	673
CALCulate<n>:DELTamarker<m>:FUNctio:n:FIXed:RPOint:Y:OFFSet.....	673
CALCulate<n>:DELTamarker<m>:FUNctio:n:FIXed[:STATe].....	674
CALCulate<n>:DELTamarker<m>:FUNctio:n:FMEasurement:DETector.....	589
CALCulate<n>:DELTamarker<m>:FUNctio:n:FMEasurement:LIMit<k>:CONDition ?.....	591
CALCulate<n>:DELTamarker<m>:FUNctio:n:FMEasurement:LIMit<k>:DELTa?.....	592
CALCulate<n>:DELTamarker<m>:FUNctio:n:FMEasurement:RESult?.....	592
CALCulate<n>:DELTamarker<m>:FUNctio:n:PNOise:AUTO.....	677
CALCulate<n>:DELTamarker<m>:FUNctio:n:PNOise:RESult?.....	677
CALCulate<n>:DELTamarker<m>:FUNctio:n:PNOise[:STATe].....	678
CALCulate<n>:DELTamarker<m>:LINK.....	512
CALCulate<n>:DELTamarker<m>:MAXimum:LEFT.....	512
CALCulate<n>:DELTamarker<m>:MAXimum:NEXT.....	512
CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT.....	513
CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK].....	513
CALCulate<n>:DELTamarker<m>:MINimum:LEFT.....	513
CALCulate<n>:DELTamarker<m>:MINimum:NEXT.....	514
CALCulate<n>:DELTamarker<m>:MINimum:RIGHT.....	514
CALCulate<n>:DELTamarker<m>:MINimum[:PEAK].....	514
CALCulate<n>:DELTamarker<m>:MODE.....	515
CALCulate<n>:DELTamarker<m>:MREF.....	671
CALCulate<n>:DELTamarker<m>:SGRam:FRAME.....	476
CALCulate<n>:DELTamarker<m>:SGRam:SARea.....	477
CALCulate<n>:DELTamarker<m>:SGRam:XY:MAXimum[:PEAK].....	477

CALCulate<n>:DELTamarker<m>:SGRam:XY:MINimum[:PEAK].....	478
CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:ABOVE.....	478
CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:BELOW.....	479
CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:NEXT.....	479
CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum[:PEAK].....	480
CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:ABOVE.....	480
CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:BELOW.....	480
CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:NEXT.....	481
CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum[:PEAK].....	481
CALCulate<n>:DELTamarker<m>:TRACe.....	515
CALCulate<n>:DELTamarker<m>:X.....	516
CALCulate<n>:DELTamarker<m>:X:RELative?.....	516
CALCulate<n>:DELTamarker<m>:Y.....	516
CALCulate<n>:DELTamarker<m>[:STATe].....	515
CALCulate<n>:DLINe<k>.....	517
CALCulate<n>:DLINe<k>:STATe.....	518
CALCulate<n>:ESpectrum:PSEarch[:PEAKsearch:[IMMediate].....	587
CALCulate<n>:ESpectrum:PSEarch[:PEAKsearch:AUTO.....	587
CALCulate<n>:ESpectrum:PSEarch[:PEAKsearch:MARGIn.....	587
CALCulate<n>:ESpectrum:PSEarch[:PEAKsearch:PSHow.....	588
CALCulate<n>:FEED.....	456
CALCulate<n>:FLINe<k>.....	518
CALCulate<n>:FLINe<k>:STATe.....	518
CALCulate<n>:FORMat.....	691
CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute.....	550
CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute:STATe.....	550
CALCulate<n>:LIMit<k>:ACPower:ACHannel:RESult.....	552
CALCulate<n>:LIMit<k>:ACPower:ACHannel[:RELative].....	551
CALCulate<n>:LIMit<k>:ACPower:ACHannel[:RELative]:STATe.....	552
CALCulate<n>:LIMit<k>:ACPower:ALTErnate<Channel>:ABSolute.....	553
CALCulate<n>:LIMit<k>:ACPower:ALTErnate<Channel>:ABSolute:STATe.....	554
CALCulate<n>:LIMit<k>:ACPower:ALTErnate<Channel>:RESult?.....	556
CALCulate<n>:LIMit<k>:ACPower:ALTErnate<channel>[:RELative].....	555
CALCulate<n>:LIMit<k>:ACPower:ALTErnate<Channel>[:RELative]:STATe.....	555
CALCulate<n>:LIMit<k>:ACPower[:STATe].....	557
CALCulate<n>:LIMit<k>:ACTive?.....	519
CALCulate<n>:LIMit<k>:CLEar[:IMMediate].....	531
CALCulate<n>:LIMit<k>:COMMeNt.....	519
CALCulate<n>:LIMit<k>:CONTRol:DOMain.....	523
CALCulate<n>:LIMit<k>:CONTRol:MODE.....	523
CALCulate<n>:LIMit<k>:CONTRol:OFFSet.....	523
CALCulate<n>:LIMit<k>:CONTRol:SHIFt.....	524
CALCulate<n>:LIMit<k>:CONTRol:SPACing.....	524
CALCulate<n>:LIMit<k>:CONTRol[:DATA].....	522
CALCulate<n>:LIMit<k>:COPY.....	520
CALCulate<n>:LIMit<k>:DELeTe.....	520
CALCulate<n>:LIMit<k>:ESpectrum:LIMits.....	583
CALCulate<n>:LIMit<k>:ESpectrum:MODE.....	583
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:COUNT.....	584
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:LIMit[:STATe].....	584

CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:MAXimum.....	585
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:MINimum.....	586
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>[:EXCLusive].....	584
CALCulate<n>:LIMit<k>:ESpectrum:RESTore.....	571
CALCulate<n>:LIMit<k>:ESpectrum:VALue.....	586
CALCulate<n>:LIMit<k>:FAIL?.....	531
CALCulate<n>:LIMit<k>:LOWer:MARGin.....	525
CALCulate<n>:LIMit<k>:LOWer:MODE.....	525
CALCulate<n>:LIMit<k>:LOWer:OFFSet.....	526
CALCulate<n>:LIMit<k>:LOWer:SHIFt.....	526
CALCulate<n>:LIMit<k>:LOWer:SPACing.....	527
CALCulate<n>:LIMit<k>:LOWer:STATe.....	527
CALCulate<n>:LIMit<k>:LOWer:THReshold.....	527
CALCulate<n>:LIMit<k>:LOWer[:DATA].....	524
CALCulate<n>:LIMit<k>:NAME.....	520
CALCulate<n>:LIMit<k>:STATe.....	532
CALCulate<n>:LIMit<k>:TRACe.....	521
CALCulate<n>:LIMit<k>:UNIT.....	521
CALCulate<n>:LIMit<k>:UPPer:MARGin.....	528
CALCulate<n>:LIMit<k>:UPPer:MODE.....	529
CALCulate<n>:LIMit<k>:UPPer:OFFSet.....	529
CALCulate<n>:LIMit<k>:UPPer:SHIFt.....	529
CALCulate<n>:LIMit<k>:UPPer:SPACing.....	530
CALCulate<n>:LIMit<k>:UPPer:STATe.....	530
CALCulate<n>:LIMit<k>:UPPer:THReshold.....	530
CALCulate<n>:LIMit<k>:UPPer[:DATA].....	528
CALCulate<n>:MARKer<m>:AOFF.....	506
CALCulate<n>:MARKer<m>:COUNT.....	674
CALCulate<n>:MARKer<m>:COUNT:FREQuency?.....	675
CALCulate<n>:MARKer<m>:COUNT:RESolution.....	676
CALCulate<n>:MARKer<m>:COUPled[:STATe].....	503
CALCulate<n>:MARKer<m>:FUNctIon:BPOWer:MODE.....	688
CALCulate<n>:MARKer<m>:FUNctIon:BPOWer:RESult?.....	688
CALCulate<n>:MARKer<m>:FUNctIon:BPOWer:SPAN.....	688
CALCulate<n>:MARKer<m>:FUNctIon:BPOWer[:STATe].....	689
CALCulate<n>:MARKer<m>:FUNctIon:CENter.....	503
CALCulate<n>:MARKer<m>:FUNctIon:CSTep.....	503
CALCulate<n>:MARKer<m>:FUNctIon:DEModulation:CONTinuous.....	678
CALCulate<n>:MARKer<m>:FUNctIon:DEModulation:HOLDoff.....	679
CALCulate<n>:MARKer<m>:FUNctIon:DEModulation:SElect.....	679
CALCulate<n>:MARKer<m>:FUNctIon:DEModulation[:STATe].....	679
CALCulate<n>:MARKer<m>:FUNctIon:FMEasurement:DETEctor.....	590
CALCulate<n>:MARKer<m>:FUNctIon:FMEasurement:DWELL.....	590
CALCulate<n>:MARKer<m>:FUNctIon:FMEasurement:LIMit<k>:CONDition ?.....	592
CALCulate<n>:MARKer<m>:FUNctIon:FMEasurement:LIMit<k>:DELTA?.....	593
CALCulate<n>:MARKer<m>:FUNctIon:FMEasurement:PSEarch:AUTO.....	591
CALCulate<n>:MARKer<m>:FUNctIon:FMEasurement:RESult?.....	593
CALCulate<n>:MARKer<m>:FUNctIon:FMEasurement:STATe.....	589
CALCulate<n>:MARKer<m>:FUNctIon:FPEaks:ANN:LAB:STAT.....	683
CALCulate<n>:MARKer<m>:FUNctIon:FPEaks:COUNT?.....	684

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:LIST:SIZE.....	685
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SEAR:AUTO.....	685
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SORT.....	686
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:STAT.....	686
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:X.....	686
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:Y?.....	687
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks[:IMMediate].....	684
CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:BANDwidth:AUTO.....	596
CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:DISTortion?.....	596
CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:LIST?.....	597
CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:NHARmonics.....	597
CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:PRESet.....	598
CALCulate<n>:MARKer<m>:FUNCTION:HARMonics[:STATe].....	598
CALCulate<n>:MARKer<m>:FUNCTION:MDEPth:RESult?.....	594
CALCulate<n>:MARKer<m>:FUNCTION:MDEPth:SEARChsignal ONCE.....	594
CALCulate<n>:MARKer<m>:FUNCTION:MDEPth[:STATe].....	595
CALCulate<n>:MARKer<m>:FUNCTION:NDBDown.....	680
CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:FREQuency?.....	680
CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:QFACtor.....	681
CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:RESult?.....	681
CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:STATe.....	682
CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:TIME?.....	682
CALCulate<n>:MARKer<m>:FUNCTION:NOISe:RESult.....	676
CALCulate<n>:MARKer<m>:FUNCTION:NOISe[:STATe].....	676
CALCulate<n>:MARKer<m>:FUNCTION:POWer:MODE.....	537
CALCulate<n>:MARKer<m>:FUNCTION:POWer:PRESet.....	540
CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult:PHZ.....	558
CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult?.....	534
CALCulate<n>:MARKer<m>:FUNCTION:POWer:SElect.....	533
CALCulate<n>:MARKer<m>:FUNCTION:POWer:STANdard:CATalog?.....	541
CALCulate<n>:MARKer<m>:FUNCTION:POWer:STANdard:DELeTe.....	541
CALCulate<n>:MARKer<m>:FUNCTION:POWer:STANdard:SAVE.....	541
CALCulate<n>:MARKer<m>:FUNCTION:POWer[:STATe].....	536
CALCulate<n>:MARKer<m>:FUNCTION:REFeRence.....	667
CALCulate<n>:MARKer<m>:FUNCTION:STRack:BANDwidth BWIDth.....	633
CALCulate<n>:MARKer<m>:FUNCTION:STRack:THReShold.....	634
CALCulate<n>:MARKer<m>:FUNCTION:STRack:TRACe.....	634
CALCulate<n>:MARKer<m>:FUNCTION:STRack[:STATe].....	634
CALCulate<n>:MARKer<m>:FUNCTION:SUMMary:AOff.....	608
CALCulate<n>:MARKer<m>:FUNCTION:SUMMary:AVERage.....	608
CALCulate<n>:MARKer<m>:FUNCTION:SUMMary:MEAN:AVERage:RESult?.....	611
CALCulate<n>:MARKer<m>:FUNCTION:SUMMary:MEAN:PHOLd:RESult?.....	611
CALCulate<n>:MARKer<m>:FUNCTION:SUMMary:MEAN:RESult?.....	612
CALCulate<n>:MARKer<m>:FUNCTION:SUMMary:MEAN[:STATe].....	613
CALCulate<n>:MARKer<m>:FUNCTION:SUMMary:MODE.....	609
CALCulate<n>:MARKer<m>:FUNCTION:SUMMary:PHOLd.....	609
CALCulate<n>:MARKer<m>:FUNCTION:SUMMary:PPEak:AVERage:RESult?.....	613
CALCulate<n>:MARKer<m>:FUNCTION:SUMMary:PPEak:PHOLd:RESult?.....	614
CALCulate<n>:MARKer<m>:FUNCTION:SUMMary:PPEak:RESult?.....	614
CALCulate<n>:MARKer<m>:FUNCTION:SUMMary:PPEak[:STATe].....	615

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:REFERENCE:AUTO ONCE.....	610
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:RMS:AVERAGE:RESULT?.....	615
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:RMS:PHOLD:RESULT?.....	616
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:RMS:RESULT?.....	616
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:RMS[:STATE].....	617
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:SDEViation:AVERAGE:RESULT?.....	617
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:SDEViation:PHOLD:RESULT?.....	618
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:SDEViation:RESULT?.....	618
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:SDEViation[:STATE].....	619
CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY[:STATE].....	610
CALCulate<n>:MARKer<m>:FUNCTION:TOL:RESULT?.....	600
CALCulate<n>:MARKer<m>:FUNCTION:TOL:SEARCHsignal ONCE.....	599
CALCulate<n>:MARKer<m>:FUNCTION:TOL[:STATE].....	600
CALCulate<n>:MARKer<m>:FUNCTION:ZOOM.....	504
CALCulate<n>:MARKer<m>:LOEXclude.....	667
CALCulate<n>:MARKer<m>:MAXimum:AUTO.....	668
CALCulate<n>:MARKer<m>:MAXimum:LEFT.....	506
CALCulate<n>:MARKer<m>:MAXimum:NEXT.....	507
CALCulate<n>:MARKer<m>:MAXimum:RIGHT.....	507
CALCulate<n>:MARKer<m>:MAXimum[:PEAK].....	507
CALCulate<n>:MARKer<m>:MINimum:AUTO.....	668
CALCulate<n>:MARKer<m>:MINimum:LEFT.....	508
CALCulate<n>:MARKer<m>:MINimum:NEXT.....	508
CALCulate<n>:MARKer<m>:MINimum:RIGHT.....	509
CALCulate<n>:MARKer<m>:MINimum[:PEAK].....	509
CALCulate<n>:MARKer<m>:PEXCursion.....	495
CALCulate<n>:MARKer<m>:SCOupled[:STATE].....	504
CALCulate<n>:MARKer<m>:SEARCh.....	692
CALCulate<n>:MARKer<m>:SGRam:FRAME.....	470
CALCulate<n>:MARKer<m>:SGRam:SARea.....	471
CALCulate<n>:MARKer<m>:SGRam:XY:MAXimum[:PEAK].....	471
CALCulate<n>:MARKer<m>:SGRam:XY:MINimum[:PEAK].....	472
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:ABOVE.....	472
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:BELOW.....	473
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:NEXT.....	473
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum[:PEAK].....	474
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:ABOVE.....	474
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:BELOW.....	474
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:NEXT.....	475
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum[:PEAK].....	475
CALCulate<n>:MARKer<m>:TRACe.....	510
CALCulate<n>:MARKer<m>:X.....	510
CALCulate<n>:MARKer<m>:X:SLIMits:LEFT.....	504
CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT.....	505
CALCulate<n>:MARKer<m>:X:SLIMits:ZOOM.....	669
CALCulate<n>:MARKer<m>:X:SLIMits[:STATE].....	505
CALCulate<n>:MARKer<m>:X:SSIZe.....	669
CALCulate<n>:MARKer<m>:Y.....	510
CALCulate<n>:MARKer<m>:Y:PERCent.....	669
CALCulate<n>:MARKer<m>[:STATE].....	509

CALCulate<n>:MATH:MODE.....	653
CALCulate<n>:MATH:POSition.....	654
CALCulate<n>:MATH:STATe.....	654
CALCulate<n>:MATH[:EXPrESSion][:DEFine].....	653
CALCulate<n>:PEAKsearch PSEarch:ADD.....	495
CALCulate<n>:PEAKsearch PSEarch:AUTO.....	569
CALCulate<n>:PEAKsearch PSEarch:MARGin.....	496
CALCulate<n>:PEAKsearch PSEarch:METHod.....	496
CALCulate<n>:PEAKsearch PSEarch:PSHow.....	570
CALCulate<n>:PEAKsearch PSEarch:SUBRanges.....	496
CALCulate<n>:PEAKsearch PSEarch:SUBRanges.....	570
CALCulate<n>:PEAKsearch PSEarch:SUBRanges:PCount.....	497
CALCulate<n>:PEAKsearch PSEarch[:IMMediate].....	495
CALCulate<n>:PEAKsearch PSEarch[:IMMediate].....	569
CALCulate<n>:SGRam:CLEar[:IMMediate].....	467
CALCulate<n>:SGRam:COLor.....	661
CALCulate<n>:SGRam:CONT.....	662
CALCulate<n>:SGRam:FRAME:COUNT.....	662
CALCulate<n>:SGRam:FRAME:SElect.....	662
CALCulate<n>:SGRam:HDEPth.....	468
CALCulate<n>:SGRam:TSTamp:DATA?.....	469
CALCulate<n>:SGRam:TSTamp[:STATe].....	663
CALCulate<n>:SGRam[:STATe].....	663
CALCulate<n>:STATistics:APD[:STATe].....	601
CALCulate<n>:STATistics:CCDF:X<Trace>.....	602
CALCulate<n>:STATistics:CCDF[:STATe].....	601
CALCulate<n>:STATistics:NSAMples.....	602
CALCulate<n>:STATistics:PRESet.....	605
CALCulate<n>:STATistics:RESult<Trace>.....	603
CALCulate<n>:STATistics:SCALE:AUTO ONCE.....	606
CALCulate<n>:STATistics:SCALE:X:RANGe.....	606
CALCulate<n>:STATistics:SCALE:X:RLEVel.....	606
CALCulate<n>:STATistics:SCALE:Y:LOWer.....	607
CALCulate<n>:STATistics:SCALE:Y:UNIT.....	607
CALCulate<n>:STATistics:SCALE:Y:UPPer.....	607
CALCulate<n>:THReshold.....	670
CALCulate<n>:THReshold:STATe.....	670
CALCulate<n>:TLINe<Line>.....	666
CALCulate<n>:TLINe<Line>:STATe.....	666
CALCulate<n>:UNIT:POWER.....	484
CALCulate<n>:UNIT:POWER.....	650
CALibration:ABORT.....	728
CALibration:RESult?.....	729
CALibration:STATe.....	729
CALibration[:ALL]?.....	728
DIAGnostic<n>:SERvice:BIOSinfo?.....	718
DIAGnostic<n>:SERvice:HWInfo?.....	719
DIAGnostic<n>:SERvice:INPut:PULSed:CFRequency.....	729
DIAGnostic<n>:SERvice:INPut[:SElect].....	729
DIAGnostic<n>:SERvice:NSource.....	724

DIAGnostic<n>:SERvice:SFUNction.....	731
DIAGnostic<n>:SERvice:SFUNction:LASTresult?.....	731
DIAGnostic<n>:SERvice:SFUNction:RESults:DElete.....	731
DIAGnostic<n>:SERvice:SFUNction:RESults:SAVE.....	731
DIAGnostic<n>:SERvice:STESt:RESult?.....	730
DIAGnostic<n>:SERvice:TEMPerature:FRONT?.....	730
DIAGnostic<n>:SERvice:VERSinfo?.....	719
DISPlay:ANNOtation:FREQuency.....	767
DISPlay:BARGraph:LEVel:LOWer?.....	456
DISPlay:BARGraph:LEVel:UPPer?.....	456
DISPlay:BARGraph:PHOLd.....	457
DISPlay:BARGraph:PHOLd:RESet.....	457
DISPlay:BARGraph:TCOUpling.....	457
DISPlay:CMAP<item>:DEFault.....	768
DISPlay:CMAP<item>:HSL.....	768
DISPlay:CMAP<item>:PDEFined.....	768
DISPlay:FORMat.....	769
DISPlay:LOGO.....	769
DISPlay:MTABle.....	670
DISPlay:PSAVe:HOLDoff.....	769
DISPlay:PSAVe[:STATe].....	769
DISPlay:SBAR[:STATe].....	770
DISPlay:SKEYs[:STATe].....	770
DISPlay:TBAR[STATe].....	770
DISPlay:THEMe:CATalog?.....	770
DISPlay:THEMe:SElect.....	770
DISPlay:TOUChscreen:STATe.....	771
DISPlay:WINDow:SGRam:COLor:DEFault.....	467
DISPlay:WINDow:SGRam:COLor:LOWer.....	467
DISPlay:WINDow:SGRam:COLor:SHAPE.....	467
DISPlay:WINDow:SGRam:COLor:UPPer.....	467
DISPlay:WINDow:SGRam:COLor[:STYLe].....	468
DISPlay[:WINDow<n>]:MINFo:STATe.....	506
DISPlay[:WINDow<n>]:TEXT:STATe.....	772
DISPlay[:WINDow<n>]:TEXT[:DATA].....	773
DISPlay[:WINDow<n>]:TIME.....	773
DISPlay[:WINDow<n>]:TIME:FORMat.....	773
DISPlay[:WINDow<n>]:TRACe<t>:MODE.....	498
DISPlay[:WINDow<n>]:TRACe<t>:MODE:HCONTinuous.....	654
DISPlay[:WINDow<n>]:TRACe<t>:SYMBol.....	497
DISPlay[:WINDow<n>]:TRACe<t>:X:SPACing.....	482
DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing.....	484
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe].....	650
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:BOTTom.....	484
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE.....	650
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel.....	651
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet.....	651
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition.....	651
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RVALue.....	692
DISPlay[:WINDow<n>]:TRACe<t>[:STATe].....	655

DISPlay[:WINDow<n>][:SUBWindow<m>]:SElect.....	772
DISPlay[:WINDow<n>][:SUBWindow<m>]:SIZE.....	771
FORMat:DEXPort:DSEParator.....	656
FORMat[:DATA].....	655
HCOPy:ABORt.....	750
HCOPy:CMAP<item>:DEFault.....	750
HCOPy:CMAP<item>:HSL.....	751
HCOPy:CMAP<item>:PDEFined.....	751
HCOPy:DESTination<1 2>.....	752
HCOPy:DEVice:COLor.....	752
HCOPy:DEVice:LANGuage<1 2>.....	753
HCOPy:ITEM:ALL.....	753
HCOPy:ITEM:WINDow:TABLE:STATe.....	754
HCOPy:ITEM:WINDow:TEXT.....	754
HCOPy:MODE.....	764
HCOPy:PAGE:ORlentation<1 2>.....	754
HCOPy:TDSamp:STATe<1 2>.....	754
HCOPy:TREPort:APPend.....	764
HCOPy:TREPort:DESCRiption.....	761
HCOPy:TREPort:ITEM:DEFault.....	757
HCOPy:TREPort:ITEM:HEADer:LINE<line>:CONTRol.....	759
HCOPy:TREPort:ITEM:HEADer:LINE<line>:TEXT.....	760
HCOPy:TREPort:ITEM:HEADer:LINE<line>:TITLE.....	760
HCOPy:TREPort:ITEM:LOGO.....	761
HCOPy:TREPort:ITEM:LOGO:CONTRol.....	761
HCOPy:TREPort:ITEM:SElect.....	757
HCOPy:TREPort:ITEM:TEMPlate:CATalog?.....	762
HCOPy:TREPort:ITEM:TEMPlate:DELete.....	763
HCOPy:TREPort:ITEM:TEMPlate:LOAD.....	763
HCOPy:TREPort:ITEM:TEMPlate:SAVE.....	763
HCOPy:TREPort:NEW.....	764
HCOPy:TREPort:PAGESize.....	762
HCOPy:TREPort:TEST:REMove.....	765
HCOPy:TREPort:TEST:REMove:SElected.....	765
HCOPy:TREPort:TEST:SElect.....	765
HCOPy:TREPort:TEST:SElect:ALL.....	766
HCOPy:TREPort:TEST:SElect:INVert.....	766
HCOPy:TREPort:TEST:SElect:NONE.....	766
HCOPy:TREPort:TITLE.....	762
HCOPy[:IMMEDIATE<1 2>].....	755
HCOPy[:IMMEDIATE<1 2>]:NEXT.....	755
HOLD.....	459
INITiate<n>:CONMeas.....	459
INITiate<n>:CONMeas.....	640
INITiate<n>:CONTInuous.....	459
INITiate<n>:DISPlay.....	774
INITiate<n>:EMITest.....	460
INITiate<n>:ESpectrum.....	572
INITiate<n>:FMEasurement.....	460
INITiate<n>:SPURious.....	561

INITiate<n>[:IMMediate].....	459
INPut:ATTenuation.....	485
INPut:ATTenuation:AUTO.....	485
INPut:ATTenuation:AUTO.....	652
INPut:ATTenuation:PROTection[:STATe].....	485
INPut:COUPling.....	488
INPut:GAIN:AUTO.....	486
INPut:GAIN:STATe.....	486
INPut:IMPedance.....	486
INPut:LISN:FILTer:HPAS[:STATe].....	501
INPut:LISN:PHASe.....	501
INPut:LISN[:TYPE].....	502
INPut:PRESelection:STATe.....	726
INPut:TYPE.....	488
INPut:UPORt:STATe.....	725
INPut:UPORt?.....	725
INSTrument:COUPle:ATTenuation.....	721
INSTrument:COUPle:BANDwidth BWIDth.....	721
INSTrument:COUPle:CENTer.....	722
INSTrument:COUPle:DEModulation.....	722
INSTrument:COUPle:GAIN.....	722
INSTrument:COUPle:LIMit.....	723
INSTrument:COUPle:MARKer.....	723
INSTrument:COUPle:PRESelector.....	723
INSTrument:COUPle:SPAN.....	724
INSTrument:CREate[:NEW].....	454
INSTrument:DELeTe.....	454
INSTrument[:SElect].....	455
MMEMory:CATalog:LONG?.....	733
MMEMory:CATalog?.....	733
MMEMory:CDIRectory.....	734
MMEMory:CLEar:ALL.....	738
MMEMory:CLEar:STATe 1.....	738
MMEMory:COMMeNt.....	734
MMEMory:COpy.....	735
MMEMory:DATA.....	735
MMEMory:DELeTe.....	736
MMEMory:LOAD:AUTO.....	738
MMEMory:LOAD:IQ:STATe.....	692
MMEMory:LOAD:STATe.....	739
MMEMory:MDIRectory.....	736
MMEMory:MOVE.....	736
MMEMory:MSIS.....	737
MMEMory:NAME.....	737
MMEMory:NETWork:DISConnect.....	777
MMEMory:NETWork:MAP.....	777
MMEMory:NETWork:UNUSeddrives?.....	778
MMEMory:NETWork:USEDdrives?.....	778
MMEMory:RDIRectory.....	737
MMEMory:SEL[:ITEM]:SGRam.....	775

MMEMory:SElect[:ITEM]:ALL.....	774
MMEMory:SElect[:ITEM]:DEFAult.....	774
MMEMory:SElect[:ITEM]:HWSettings.....	774
MMEMory:SElect[:ITEM]:LINEs:ALL.....	775
MMEMory:SElect[:ITEM]:NONE.....	775
MMEMory:SElect[:ITEM]:TRACe[:ACTive].....	776
MMEMory:SElect[:ITEM]:TRANsducer:ALL.....	776
MMEMory:STORE:FINAl.....	498
MMEMory:STORE:IQ:COMM.....	740
MMEMory:STORE:IQ:STATe.....	740
MMEMory:STORE:PEAKlist.....	498
MMEMory:STORE:SGRam.....	469
MMEMory:STORE<n>:LIST.....	587
MMEMory:STORE<n>:SPURious.....	561
MMEMory:STORE<n>:STATe.....	740
MMEMory:STORE<n>:STATe:NEXT.....	741
MMEMory:STORE<n>:TRACe.....	656
MMEMory:USER<Softkey>.....	776
OUTPut:IF[:SOURce].....	725
OUTPut:TRIGger.....	725
OUTPut:UPORt.....	726
OUTPut:UPORt:STATe.....	726
OUTPut[:STATe].....	704
PROBe:ID:PARTnumber?.....	629
PROBe:ID:SRNumber?.....	629
PROBe:SETup:MODE.....	629
PROBe:SETup:NAME?.....	629
PROBe:SETup:STATe?.....	630
PROBe[:STATe].....	630
SOURce<n>:AM:STATe.....	705
SOURce<n>:DM:STATe.....	706
SOURce<n>:FM:DEViation.....	706
SOURce<n>:FM:STATe.....	707
SOURce<n>:FREQuency:OFFSet.....	707
SOURce<n>:POWer:MODE.....	708
SOURce<n>:POWer:STARt.....	709
SOURce<n>:POWer:STOP.....	709
SOURce<n>:POWer[:LEVel][:IMMediate]:OFFSet.....	708
SOURce<n>:POWer[:LEVel][:IMMediate][:AMPLitude].....	708
STATus:OPERation:CONDition?.....	784
STATus:OPERation:ENABle.....	784
STATus:OPERation:NTRansition.....	785
STATus:OPERation:PTRansition.....	785
STATus:OPERation[:EVENT]?.....	784
STATus:PRESet.....	783
STATus:QUEStionable:ACPLimit:CONDition?.....	784
STATus:QUEStionable:ACPLimit:ENABle.....	784
STATus:QUEStionable:ACPLimit:NTRansition.....	785
STATus:QUEStionable:ACPLimit:PTRansition.....	785
STATus:QUEStionable:ACPLimit[:EVENT]?.....	784

STATus:QUESTionable:CONDition?	784
STATus:QUESTionable:ENABle	784
STATus:QUESTionable:FREQuency:CONDition?	784
STATus:QUESTionable:FREQuency:ENABle	784
STATus:QUESTionable:FREQuency:NTRansition	785
STATus:QUESTionable:FREQuency:PTRansition	785
STATus:QUESTionable:FREQuency[:EVENT]?	784
STATus:QUESTionable:LIMit<n>:CONDition?	784
STATus:QUESTionable:LIMit<n>:ENABle	784
STATus:QUESTionable:LIMit<n>:NTRansition	785
STATus:QUESTionable:LIMit<n>:PTRansition	785
STATus:QUESTionable:LIMit<n>[:EVENT]?	784
STATus:QUESTionable:LMARgin<n>:CONDition?	784
STATus:QUESTionable:LMARgin<n>:ENABle	784
STATus:QUESTionable:LMARgin<n>:NTRansition	785
STATus:QUESTionable:LMARgin<n>:PTRansition	785
STATus:QUESTionable:LMARgin<n>[:EVENT]?	784
STATus:QUESTionable:NTRansition	785
STATus:QUESTionable:POWer:CONDition?	784
STATus:QUESTionable:POWer:ENABle	784
STATus:QUESTionable:POWer:NTRansition	785
STATus:QUESTionable:POWer:PTRansition	785
STATus:QUESTionable:POWer[:EVENT]?	784
STATus:QUESTionable:PTRansition	785
STATus:QUESTionable:TRANsducer:CONDition?	784
STATus:QUESTionable:TRANsducer:ENABle	784
STATus:QUESTionable:TRANsducer:NTRansition	785
STATus:QUESTionable:TRANsducer:PTRansition	785
STATus:QUESTionable:TRANsducer[:EVENT]?	784
STATus:QUESTionable[:EVENT]?	784
STATus:QUEue[:NEXT]?	783
SYSTem:APPLication:SRECovery[:STATe]	714
SYSTem:CLOGging	714
SYSTem:COMMunicate:GPIB[:SELF]:ADDress	778
SYSTem:COMMunicate:GPIB[:SELF]:RTERminator	778
SYSTem:COMMunicate:PRINter:ENUMerate:FIRST?	756
SYSTem:COMMunicate:PRINter:ENUMerate[:NEXT]?	756
SYSTem:COMMunicate:PRINter:SElect <1 2>	756
SYSTem:COMPatible	715
SYSTem:DATE	718
SYSTem:DEvice:ID?/SYSTem:DID?	718
SYSTem:DISPlay:FPANel	717
SYSTem:DISPlay:UPDate	715
SYSTem:ERRor:CLEar:ALL	720
SYSTem:ERRor:LIST?	720
SYSTem:ERRor[:NEXT]?	720
SYSTem:FIRMware:UPDate	715
SYSTem:FORMat:IDENT	715
SYSTem:HPCoupling	782
SYSTem:IDENTify:FACTory	719

SYSTem:IDENtify[:STRing].....	720
SYSTem:IFGain:MODE.....	782
SYSTem:KLOCK.....	716
SYSTem:LANGuage.....	781
SYSTem:LXI:INFo?.....	779
SYSTem:LXI:LANReset.....	779
SYSTem:LXI:MDEscription.....	779
SYSTem:LXI:PASSword.....	780
SYSTem:PASSword:RESet.....	732
SYSTem:PASSword[:CENable].....	732
SYSTem:PRESet.....	716
SYSTem:PRESet:COMPatible.....	716
SYSTem:REVisiOn:FACTory.....	780
SYSTem:REVisiOn[:STRing].....	780
SYSTem:RSW.....	781
SYSTem:SHUTdown.....	714
SYSTem:SPEaker:VOLume.....	717
SYSTem:TIME.....	717
SYSTem:TIME:TSTamp?.....	717
SYSTem:VERSIon?.....	717
TRACe[:DATA].....	464
TRACe<n>:COPY.....	659
TRACe<n>:DATA.....	538
TRACe<n>:DATA.....	659
TRACe<n>:FEED:CONTRol<t>.....	489
TRACe<n>:IQ:AVERage:COUNT.....	697
TRACe<n>:IQ:AVERage[:STATe].....	697
TRACe<n>:IQ:BWIDth.....	693
TRACe<n>:IQ:DATA.....	695
TRACe<n>:IQ:DATA:FORMat.....	696
TRACe<n>:IQ:DATA:MEMory?.....	698
TRACe<n>:IQ:EGATe.....	699
TRACe<n>:IQ:EGATe:GAP.....	699
TRACe<n>:IQ:EGATe:LENGth.....	700
TRACe<n>:IQ:EGATe:NOFgateperiods.....	700
TRACe<n>:IQ:EGATe:TYPE.....	700
TRACe<n>:IQ:EVAL.....	701
TRACe<n>:IQ:RELENGth.....	693
TRACe<n>:IQ:SET.....	693
TRACe<n>:IQ:SRATe.....	695
TRACe<n>:IQ:TPISample?.....	702
TRACe<n>:IQ[:STATe].....	701
TRACe<n>:POINts.....	490
TRACe<n>[:DATA]:MEMory?.....	660
TRACe<n>[:DATA]:X?.....	661
TRIGger<n>[:SEQUence]:HOLDoff[:TIME].....	643
TRIGger<n>[:SEQUence]:IFPower:HOLDoff.....	643
TRIGger<n>[:SEQUence]:IFPower:HYSTeresis.....	644
TRIGger<n>[:SEQUence]:LEVel:IFPower.....	644
TRIGger<n>[:SEQUence]:LEVel:RFPower.....	645

TRIGger<n>[:SEQuence]:LEVel:VIDeo.....	645
TRIGger<n>[:SEQuence]:LEVel[:EXTernal].....	644
TRIGger<n>[:SEQuence]:SLOPe.....	645
TRIGger<n>[:SEQuence]:SOURce.....	645
TRIGger<n>[:SEQuence]:TIME:RINTerval.....	646
UNIT:THD.....	599
UNIT<n>:POWer.....	652

Index

Symbols

*OPC	434
*OPC?	434
*RST	452
*WAI	434
6 dB bandwidth	44

A

ACLR	
absolute limit	120
adjacent channel name (remote control)	543
alternate channel name (remote control)	544
Channel Bandwidth	116
channel name (remote control)	544
channel names	118
Channel Spacing	117
limit check	119
Limit Checking	119
number of channels	115
reference	117
relative limit	120
Weighting Filter	118
ACLR User Standard	123
Delete	123
Load	123
Save	123
Acquisition time	
Statistics	186
ACT	
Statistics	186
Active probes	
Activating	257
Configuring	259
Connecting	258
State	260
Using	257
Alignment	
Results	372
Touch screen	373
AM demodulation	292
AM modulation	350, 360
depth	209
Depth	102
AM Modulation depth	
Measurement	209
Results	209
Amplitude	
Menu	224
Amplitude distribution	184
AMPT key	224
Analysis	
Bandwidth, definition	345
Annotation	381
APX	
tracking generator	353, 361
ASCII Trace export	273
Attenuation	
Automatic	227
Manual	60
Audio demodulation	
volume (remote control)	717

Auto adjustment	
triggered measurement	636
Auto level	
Hysteresis	232
Auto Peak detector	272
Auto peak search	177, 181
AUTO SET key	230
Average detector	272
Average trace mode	263
averaging	
continuous sweep	271
single sweep	271
sweep count	271

B

Band Power	
remote control	689, 690
softkey	296
Bandwidth	44
Maximum usable	345
Menu	233
Occupied	130
Resolution	234, 253
Video	234
Baseband power	
Trigger mode	249, 342
Blank trace mode	51, 264
Boolean parameters	429
BW key	233

C

calibration	
reflection measurement	354
tracking generator	353
transmission measurement	348, 354
Calibration	
Remote	710
Case-sensitivity	
SCPI	425
Center frequency	218
Step size	218
channel	
bandwidth	116, 133
number	115
spacing	117
Channel	
Bandwidth	129, 335
Channel Power	
Configuring	109
Fast ACLR	105
Measurement Repeatability	105
Measurements	103
Methods	104
Performing	109
Results	107
CISPR bandwidth	44, 179
Clear status	
Remote	710
Clear Write trace mode	50, 262
CNT (marker functions)	282
Colon	430

Color printout	383
Color settings	
Default	382
Color Setup dialog box	382
Comma	430
Command sequence	
recommendation	452
Remote	713
Commands	415
Colon	430
Comma	430
Command line structure	430
Common	415
Double dagger	430
GBIP, addressed	422
GBIP, universal	422
Instrument control	415
Overlapping	432
Question mark	430
Quotation mark	430
SCPI confirmed	415
Sequential	432
Syntax elements	430
Tracking	379
White space	430
CommandS	
Programming examples	786
Common commands	
Syntax	424
CONDition	436
Continuous sweep	242
Controller	413
Correction	
inherent noise	123, 228
coupling	
default settings	238
Coupling	
Resolution bandwidth	234
Sweep time	236, 243
Video bandwidth	235
create folder	395
D	
Data Acquisition	
Softkey	332
Date	381
DCL	422
DEF	428
Default color settings	382
default scalings of x- and y-axis	193, 199
Default values	
Remote	712
definition of transducer factors	808
delay	
gate signal	252
Delta markers	78
Density	
remote control	688, 689, 690
softkey	297
detector	
overview	272
Detector	46
Auto Peak	265
Autoselect	264
Average	265
CISPR Average	266

Negative Peak	265
Positive Peak	265
Quasi Peak	266
RMS	265
RMS Average	266
Sample	265
Device ID	384
Device-specific commands	415
diagram header	
tracking generator	361
Diagram title	381
Display	
Date	381
maximized	771
Power-save mode	384
split	771
Time	381
Display Config	
Softkey	332
Display lines	90, 91
display range	
level	190, 191, 192, 197, 198, 225, 226, 337, 338
Display range	
Frequency	218
display settings	
Softkey Bar State (remote control)	770
Status Bar State (remote control)	770
Double dagger	430
DOWN	428
Dwell time	178, 183
Dynamic range	
Intermodulation-free	206
Measuring	211

E

Edit Limit Line dialog box	94, 97
EMI detector	46
EMI marker	181
EMI marker evaluation	178, 183
ENABLE	436
Enable registers	
Remote	712
Error queues	
recommendations	452
ESE (Event Status Enable register)	440
ESR (Event Status Register)	435, 440
EVENT	436
Event status enable register	
Remote	710
Event Status Enable register (ESE)	440
Event status register	
Remote	710
Event Status Register (ESR)	440
Export	
I/Q data (remote)	740
export format	273
Exporting	
I/Q data (remote)	740
external noise source	257
external trigger	248, 341

F

Fast ACLR	105

FFT Filter Mode	
Auto	232, 237, 244
Narrow	233, 237, 245
softkey	232, 236, 244
file	
copying	395
deleting	395
renaming	395
File Manager dialog box	394
Filter bandwidth	
Baseband Digital	332
Digital I/Q (remote control)	693
Filter type (EMI)	179
Filter types	
5-Pole	239
Normal (3dB)	239
RRC	239
Filters	
Overview	240
Selecting	239
Types	239
Final evaluation	178, 183
Firmware	
Version	384
fixed reference	291
FM demodulation	292
FM modulation	350, 360
folder	
renaming	395
FREQ key	217
frequency	
line	92
offset	220
start	220
stop	220
Frequency	
Axis	217
Center	218
Display	381
Lines	91
Frequency axis scaling	180
Frequency Max.	
tracking generator	353
Frequency menu	217
Frequency Min.	
tracking generator	353
Frequency Offset	
tracking generator	352
FRQ	
tracking generator	361
FXD (marker functions)	282
G	
gate	
delay	252
length	253
ranges	200
Gate	
External/internal	251
MODE <mode>	252
gated statistics	
configuration	200
configuration example	202
example	202
gated trigger	200
GET	422

GPIO	
Address	422
Characteristics	419
interface messages	420
Remote control interface	413
GPIO bus control	
Remote	711
GPIO Language	828
GTL	422

H

Hardware Information dialog box	384
Harmonic Distortion	
Measurement	210
Results	213
Harmonics	
Measurement	103, 213
HiSLIP	
Protocol	417
Resource string	416
HOME key	20
HP emulation	828
Hysteresis	
Lower (Auto level)	232
Upper (Auto level)	232

I

I/Q Analyzer	
Softkey	331
I/Q data	
Export (remote control)	740
Import (remote control)	692
Maximum bandwidth	345
Sample rate	345
trigger point in sample (TPIS)	702
I/Q data acquisition	809
I/Q Gating	
edge triggered	702
level triggered	702
I/Q modulation	350, 360
I/Q-Vector	
I/Q Analyzer	332
ID String User	828
Identification	
Remote	711
IECWIN	452
IF power	
Trigger mode	249, 342
IFC	422
IFOVL	
tracking generator	353, 361
Impedance	
Input	62, 229
Importing	
I/Q data (remote)	692
INF	428
Inherent noise	
correction	123, 228
initial configuration	216
Input sample rate (ISR)	
Definition	345
Input/Output menu	256
Instrument messages	415
Interface functions	
RSIB	418

Interface messages	415
Interfaces	
GPIB	419
intermodulation product	203
Interrupt	449
IP address	416
IQ Export	
Softkey	394
IQ Import	
Softkey	394
IST	435
IST flag	439
Remote	711

K

key

AMPT	224
AUTO SET	230
BW	233
DISPLAY	771
ESC	531
LINES	87, 302
MEAS	100
MEAS CONFIG	214
MKR FUNC	288
MKR->	82
MKR→	283
PEAK SEARCH	288
PRESET	215, 716
PRINT	404
RUN CONT	214
RUN SINGLE	214
SAVE/RCL	390
SETUP	365
SPAN	223
SWEEP	242
TRACE	76, 260
TRIG	247
USER	364

Key

FREQ	217
HOME	20
MKR	78
MODE	19

Keywords

see Mnemonics	424

L

labels

tracking generator	361

LAN

Interface	416
IP address	416
Remote control interface	413
RSIB protocol	418
VISA	416
VXI protocol	417

level

axis	227, 338
display range ... 190, 191, 192, 197, 198, 225, 226, 337, 338	
range	190, 191, 192, 197, 198, 225, 226, 337, 338
trigger	250

Level

Reference	225, 336
Softkey	332

limit

ACLR measurement	120

Limit

Evaluation range	174

limit check

ACLR measurement	119

limit line

scaling	92
shift	95
span setting	97
span setting	95

Limit lines

Copying	90
Deleting	90
Editing	89, 97
New	88
Offset	90
Spurious Emissions	164
Time Domain Power measurement	173

line

frequency	92
limit	92
threshold	85, 295
time	92

Linear scaling

.....	180

Lines

display	91
Frequency (Frequency Line 1, 2)	91
Menu	87
Time (Time Line 1, 2)	91

LINES key

.....	87, 302

LISN

.....	52, 180

LLO

.....	422

LO exclude

.....	284

local menu

.....	363

Logarithmic scaling

.....	180

Logo

.....	381

Lower Level Hysteresis

Softkey	232

LVL

tracking generator	361

M

Marker

center frequency to	284
peak	83
reference level to	284
search limit	84

Marker

Zoom	280

Marker Function menu

.....	288

Marker Number

softkey	296

Marker Peak List

Activating/Deactivating	294
Configuring	294

Number display	296
Number of entries	294
Marker table	183
Marker wizard	181
Marker Wizard	
softkey	80
Markers	78
Field	78
Set to trace	80
Signal track	221
MAX	428
Max Hold trace mode	51, 263
Max Peak Count	
softkey	294
maximum search	83
maximum value	174
MC-ACLR	114
Mean power (GSM burst)	174
MEAS CONFIG key	214
MEAS key	100
Meas Time	
Baseband Digital	332
measurement	
reflection	355
transmission	355
measurement accuracy	
tracking generator	353
measurement example	
amplitude distribution	327
harmonics	303
high-sensitivity harmonics	213
intermodulation	203
modulated signals	320
noise	313
signals in the vicinity of noise	308
spectra of complex signals	305
test setup	302
Measurement menu	100
Measurement modes	
Changing	19
Displaying main menus	20
Measurement time	183
menu	
Auto Set	230
Input/Output	256
Marker Function	288
Phase Noise	290
Print	404
SAVE/RCL	390
Span	223
Sweep	242
Trigger	247, 340
User	364
Menu	
Amplitude	224
Bandwidth	233
Frequency	217
Lines	87
Meas	100
Setup	365
Messages	
Commands	415
Instrument	415
Instrument responses	416
Interface	415
MIL Std bandwidth	179
MIN	428

Min Hold trace mode	51, 263
minimum search	83
MKR FUNC key	288
MKR key	78
MKR-> key	82
MKR→ key	283
Mnemonics	424
Optional	426
MOD (marker functions)	282
mode	
trigger	248, 340
Mode	
see also Measurement modes	19
MODE key	19
Modulation	
Depth	102, 209
Modulation depth	209
Modulation index	209
More Traces	
softkey	77
Multi-carrier	
ACLR	114
multi-carrier ACLR measurement	104

N

n dB down	
marker function	293
NAN	428
Negative Peak detector	272
NINF	428
NOI (marker functions)	282
noise	
correction	123, 228
source, external	257
NOR	
tracking generator	353, 361
normalization	349, 356
tracking generator	361
NTRansition	436
Numeric values	
Special	428

O

OBW	
Multi-carrier signal	131
Search limits	131
Occupied bandwidth	130
offset	
frequency	220
gate signal	252
reference level	228, 339
Offset	
Limit line	90
Trigger	250, 343
Online help	
Working with	17
Operation complete	
Remote	711
Option identification	
Remote	711
Options	
Installed	384
RF Preamplifier (B22)	61, 227, 332
Output	
Sample rate, definition	345

Output buffer	435
Overlapping	
preventing	434
Overlapping commands	432
overload	
tracking generator	353
Overwrite mode	50, 262
OVLD	
tracking generator	353, 361

P

Parallel poll register enable	
Remote	711
Parameters	
Block data	430
Boolean	429
SCPI	427
Special numeric values	428
String	430
Text	429
Units	428
path	392
Peak List On/Off	
softkey	294
Peak search	177, 181
PEAK SEARCH key	288
PEAKSEARCH	83
Ph. Noise Auto Peak Search	
remote control	677
Phase	52, 180
PHN (marker functions)	282
polarity	
external trigger	343
external trigger/gate	250
trigger edge	250, 343
Ports	
User	726
Positive Peak detector	272
power	
bandwidth percentage	133
Power	
Mean	174
remote control	688, 689, 690
Remote control	689
softkey	297
Power Classes	
SEM	144
Power Max.	
tracking generator	353
power measurement	100
trace	121
zero span	172
Power measurement	
Occupied bandwidth	130
Power Min.	
tracking generator	353
Power Offset	
tracking generator	352
power sweep	
tracking generator	351
PPC	422
PPE	435
PPE register	439
PPU	422
pre-trigger	251, 343
Preamplifier (B22)	61, 227, 332

preset instrument	215
PRESET key	215
print	
screen	404
PRINT key	404
Print menu	404
Printers and Faxes window	406
Probes	
Activating	257
Active	257
Configuration (Softkey)	257
programming examples	
averaging I/Q data	819
channel power measurement	798
I/Q data	809
level measurement	807
limit lines and limit test	797
occupied bandwidth measurement	802
power ramp measurement	803
reading files	811
Spectrum Emission Mask measurement	813
Spurious Emissions measurement	817
time domain power measurement	802
transducers	808
writing files	812
Programming examples	
Service request	787
Protocol	
RSIB	418
VXI	417
PTRansition	436

Q

Queries	415, 431
Status	450
Question mark	430, 431
Quotation mark	430

R

R&S Digital I/Q Interface (B17)	
settings (remote control)	693
Ready for trigger	
Status register	446
Real/Imag (I/Q)	
I/Q Analyzer	332
Recall dialog box	393, 396
Recalling	
Settings	396
Recommendations	
remote control programming	452
Record Length	
Baseband Digital	332
reference	
fixed	291
level to marker level	284
value (channel power)	122
Reference	
External	367
Internal	367
reference level	
channel power	124
offset	228, 339
to marker level	284
Reference level	225, 336

Reference Level	
Baseband Digital	332
reference point	
frequency	290, 292
level	290, 291
peak search	291, 292
time	290, 292
reflection measurement	355
calibration	354
Registers	435
remote	701
remote control	
changing to	363
Remote control	
Basics	413
GPIO address	422
Interfaces	413
Programming examples	786
Protocols	413
Starting	423
Stopping	424
Repetition interval	
Time trigger	251, 343
Report	406
reset	
switch on or off	264
Reset values	
Remote	712
Resolution bandwidth	234, 253
Resolution bandwidth (EMI)	179
Result Frequency Start	
tracking generator	353
Result Frequency Stop	
tracking generator	353
REV String Factory	
Softkey	378
REV String User	
Softkey	378
RF Input	
Active probes	257
RF Power trigger	249, 341
RF Preamplifier (B22)	61, 227, 332
RMS	
VBW	235, 273
RMS detector	272
RMS value	174
RSIB	
interface functions	418
protocol	418
RUN CONT key	214
RUN SINGLE key	214

S

Sample detector	272
sample number	190, 196
Sample rate	
Definition	345
Maximum	345
Sample Rate	
I/Q Analyzer	332
Samples	
Statistics	186
Save dialog box	391, 396
SAVE/RCL key	390
SAVE/RCL menu	390

Saving	
Results	396
scalar reflection measurement	355
scaling	
level axis	228, 339
x- and y-axis (signal statistic)	190, 196
SCPI	
Parameters	427
Syntax	424
Version	414
SCPI confirmed commands	415
SDC	422
search	
minimum	83
peak	83
range	84
Search	
Bandwidth	221
Search limits	
OBW	131
Search Settings	
softkey (B17)	340
Select Limit Line dialog box	97
Select Screen Color Set dialog box	382
Self test	388
Selftest	
Remote	713
SEM	
Results	146
sensitivity	
APD measurement	193, 194, 199, 200
CCDF measurement	193, 194, 199, 200
Sequential commands	432
Service request (SRQ)	438, 449
Service request enable	
Remote	712
Service request enable register (SRE)	438
Setting commands	415
Settings	
Recalling	396
Saving	396
setup	
general	373
SETUP key	365
Setup menu	365
shutdown	
remote control	714
signal count	289
Signal Source	
I/Q Analyzer	331
Softkey	331
Signal tracking	221
Search bandwidth	221
softkey	121, 133
-	193, 194, 199, 200
# of Adj Chan	115
# of Adj Chan (remote control)	542
# of Samples	190, 196
# of Samples (remote control)	602
# of TX Chan	115
# of TX Chan (remote control)	545
% Power Bandwidth	133
% Power Bandwidth (remote control)	561
= Center	219
= Marker	220
0.1 * RBW	218
0.1 * RBW (remote control)	631

0.1 * Span	218	Coupling (FSx/HP)(remote control)	782
0.1 * Span (remote control)	631	Coupling Ratio	237
0.1*Demod BW (K7)	218	CP, ACP, MC-ACLR (remote control)	533, 534
0.5 * RBW	219	CP/ACLR Config	115
0.5 * RBW (remote control)	631	CP/ACLR Standard	114
0.5 * Span	219	Current File List (1/2)	396
0.5 * Span (remote control)	631	Cut	395
0.5*Demod BW (K7)	219	Date	396
ACLR Abs/Rel	121	dBm	227, 338
ACLR Abs/Rel (remote control)	558	dBmV	227, 338
ACLR Ref Setting (remote control)	548	dBpW	227, 338
ACLR Ref Spacing (remote control)	549	dBuA	227, 338
Active On/Off (remote control)	745	dBuV	227, 338
Adjust Ref Level	124	Decim Sep	78, 143, 172, 296, 394
Adjust Ref Level (remote control)	538	Default Coupling	238
Adjust Ref Lvl	133	Default Settings	193, 199
Adjust Settings (remote control)	538, 606	Default Settings (remote control)	605, 607
All Functions off	102, 103	Delete	395
All Functions off (remote control)	608	Delete (remote control)	520, 736, 737, 744
All Marker Off	81	Delete File	392
AM (remote control)	679	Delete File (remote control)	738
Ampere	227, 338	Delete Range	140, 170
APD (remote control)	601, 603	Delete Range (remote control)	575
Application Setup Recovery(remote control)	714	Density	297
ASCII File Export	142, 295	Description	779
ASCII File Export (remote control)	587	Detector Auto Select (remote control)	658
ASCII Trace Export	77, 393	Detector Manual Select (remote control)	658
ASCII Trace Export (remote control)	561	Deviation Lin/Log (remote control)	484
Auto (remote control)	642	Device (1/2)	405
Auto All	231	Device 1/2 (remote control)	737
Auto Max Peak	284	Device Setup	405
Auto Max Peak (remote control)	668	Device Setup (remote control)	752, 753, 754, 756
Auto Min Peak	284	Disable all Items	392
Auto Min Peak (remote control)	668	Disable all Items (remote control)	775
Average Mode (remote control)	657	Disconnect Network Drive	396
Band Power	296	Disconnect Network Drive (remote control)	777
Band Power On/Off	296	Display Line 1 (remote control)	517, 518
C/N (remote control)	533, 534	Display Line 2 (remote control)	517, 518
C/No (remote control)	533, 534	Edit (remote control)	519, 521, 523, 524, 528, 529, 530, 744
Calibrate Reflection Open	348	Edit ACLR Limit (remote control)	550, 551, 552, 553, 554, 555
Calibrate Reflection Short	348	Edit Comment	392
Calibrate Transmission	348	Edit File Name	392
Calibration Frequency RF	729	Edit Name (remote control)	745
CCDF (remote control)	601, 603	Edit Path	395
Center =Mkr Freq	284	Edit Path (remote control)	734, 737
Center =Mkr Freq (remote control)	503	Edit Power Classes	144
CF Stepsize (remote control)	482	Edit Reference Range	141, 143
Chan Pwr/Hz	120	Edit Reference Range (remote control)	581, 582
Chan Pwr/Hz (remote control)	558	Edit Unit (remote control)	745
Channel Bandwidth	133	Edit Values (remote control)	744
Channel Bandwidth (remote control)	542, 543	Enable all Items	392
Channel Settings	115	Enable all Items (remote control)	774
Channel Spacing (remote control)	544, 545	Exclude LO (remote control)	667
Clear All Messages (remote control)	720	Export	393
Clear/Write	121	Extension	396
Color (On/Off)	405	External	248, 341
Color On/Off (remote control)	752	External AM	350, 360
Colors	405	External AM (remote control)	705
Comment	406	External FM	350, 360
Cont Demod (remote control)	678	External FM (remote control)	706, 707
Continue Single Sweep (remote control)	640	External I/Q	350
Copy	395	External IQ (remote control)	706
Copy (remote control)	735	Fast ACLR On/Off	122
Copy to (remote control)	520	Fast ACLR On/Off (remote control)	559
Copy Trace	77	File Lists (1/2)	396
Copy Trace (remote control)	659		
Corr Data On/Off (remote control)	728, 729		

File Manager 394
 Filter Type 179, 238
 Filter Type (remote control) 487, 638
 Firmware Update (remote control) 715
 FM (remote control) 679
 Free Run 248, 341
 Frequency Line 1 (remote control) 518
 Frequency Line 2 (remote control) 518
 Frequency Offset 220
 Full Span (remote control) 633
 Gate Delay (remote control) 648
 Gate Length (remote control) 648
 Gate Mode Lvl/Edge (remote control) 642, 649
 Gate Ranges 193, 199
 Gate Ranges (remote control) 603, 604, 605
 Gated Trigger (On/Off) 193, 199
 Gated Trigger (remote control) 647, 648
 GPIB Address (remote control) 778
 GPIB Language (remote control) 781
 GPIB Terminator LFEOI/EOI (remote control) 778
 Grid Abs/Rel 228, 339
 Grid Abs/Rel (remote control) 650
 Hardware Info (remote control) 719
 Hold/Cont 264
 ID String Factory (remote control) 719, 780
 ID String User (remote control) 720
 IF Gain (Norm/Puls)(remote control) 782
 IF Output IF/Video (remote control) 725
 Import 394
 Info 779
 Input 50 Ω /75 Ω (remote control) 486
 Input RF/Cal/TG (remote control) 729
 Insert after Range 140, 170
 Insert after Range (remote control) 577
 Insert before Range 140, 170
 Insert before Range (remote control) 577
 Install Printer 406
 Installed Options (remote control) 718
 Interpolation Lin/Log (remote control) 744
 LAN Reset 779
 Last Span 60
 Left Limit 84, 295
 Left Limit (remote control) 504
 Limit Chk On/Off (remote control) 552, 556, 557
 Limit Line Select dialog box (remote control) 527, 530
 Limits On/Off (remote control) 505
 Lin 266, 268
 Link Mkr1 and Delta1 280
 Link Mkr1 and Delta1 (remote control) 512
 List Evaluation 142
 List Evaluation On/Off 142
 List Evaluation On/Off (remote control) 587
 Load Standard 145
 Local 363
 Log 268
 Manual 220
 Manual (remote control) 482
 Map Network Drive 396
 Map Network Drive (remote control) 778
 Margin 142
 Margin (remote control) 587
 Marker 1 (remote control) 515
 Marker 1 to 4 (remote control) 509, 510, 516
 Marker 1-16 79, 208, 210
 Marker 1, Marker 2 ... 16 79, 208, 210
 Marker 2 (remote control) 515
 Marker 3 (remote control) 515

Marker 4 (remote control) 515
 Marker List (remote control) 684
 Marker Norm/Delta 79, 208, 210
 Marker Norm/Delta (remote control) 515
 Marker Stepsize 279
 Marker Stepsize (remote control) 669
 Marker Table (Off/On/Aut) (remote control) 670
 Marker Table (On/Off) 81
 Marker to Trace (remote control) 515, 671
 Marker Wizard 80
 Marker Zoom (remote control) 504
 Max Hold 121
 Mean (remote control) 612, 613
 Meas Start/Stop 145
 Meas Start/Stop (remote control) 561, 572
 Meas Time Auto 231, 636
 Meas Time Manual 231, 636
 Min 83
 Min (remote control) 509, 514
 Mkr Demod On/Off (remote control) 679
 Mkr List On/Off (remote control) 684
 Mkr Stop Time (remote control) 679
 Modulation 349
 Modulation OFF 350
 More Markers 79
 n dB down 293
 n dB down (remote control) 680, 681, 682
 Name 396
 Name (remote control) 520
 Network Drive 396
 New (remote control) 519, 521, 523, 524, 528, 529, 530
 New Folder 395
 New Folder (remote control) 736
 Next Min 83
 Next Min (remote control) 508, 509, 514
 Next Mode </abs/> 83
 Next Peak 83
 Next Peak (remote control) 506, 507, 508, 509, 512, 513, 514
 Noise Correction 123, 228
 Noise Meas On/Off 290
 Noise Meas On/Off (remote control) 676
 Noise Source 257
 Noise Src On/Off (remote control) 724
 Normalize 349
 NORMALIZE 356
 OBW (remote control) 533
 Password 780
 Password (remote control) 732
 Paste 395
 Peak 83
 Peak (remote control) 507, 513, 614, 615
 Peak Excursion 85, 295
 Peak Excursion (remote control) 495
 Peak Search 291, 292
 Peak Search (remote control) 672, 684, 686, 687
 Percent Marker 195, 602
 Percent Marker (remote control) 669
 Ph Noise On/Off (remote control) 674, 677, 678
 Ph Noise/Ref Fixed (remote control) 674, 678
 Phase Noise 290
 Phase Noise Auto Peak Search 291
 Phase Noise On/Off 290
 Power 267, 268, 297
 Power Mode 120
 Power Mode (remote control) 537
 Power Sensor 256

Power Sweep	350	Save File	391
Power Sweep (On/Off)	351	Save File (remote control)	740, 741
Power Sweep (On/Off) (remote control)	708	Scaling	190, 196
Power Sweep Start	351, 708	Screen Colors (remote control)	750, 751
Power Sweep Start (remote control)	709	ScreenShot	393
Power Sweep Stop	351	Search Lim Off	85
Power Sweep Stop (remote control)	709	Search Lim Off (remote control)	505, 670
Predefined Colors	406	Search Limits	84
Predefined Colors (remote control)	751	Search Limits (remote control)	505
Print Screen	404	Select 1 2 3 4 (remote control)	509
Print Screen (remote control)	737, 753, 755	Select Dataset	393
Range	225, 336	Select Directory (remote control)	745
Range Lin. Unit	192, 198, 227, 338	Select File	392
Range Lin. Unit (remote control)	484	Select Items	392
Range Linear %	192, 198, 226, 338	Select Items (remote control)	774, 775, 776
Range Linear % (remote control)	484	Select Marker (No)	289, 291, 296
Range Log (remote control)	484, 650	Select Object	406
Range Log 1 dB	191, 198, 226, 338	Select Path	392
Range Log 5 dB	191, 197, 226, 337	Select Print Color Set	405
Range Log 10 dB	191, 197, 226, 337	Select Print Color Set (remote control)	750
Range Log 50 dB	191, 197, 225, 337	Select Trace	121
Range Log 100 dB	190, 197, 225, 337	Select Trace (remote control)	537, 634
Range Log Manual	192, 198, 226, 338	Select Traces to check (remote control)	521, 532
RBW/VBW Manual	238	Self Align (remote control)	728
RBW/VBW Noise [10]	237	Selftest Results (remote control)	730
RBW/VBW Pulse [1]	237	Service Function (remote control)	731
RBW/VBW Sine [1/3]	237	Set CP Reference	122
Recall	349, 393	Set Standard (remote control)	571
Recall (remote control)	571	Set to Default	406
Recall File	391	Set to Default (remote control)	750
Recall File (remote control)	739	Settings	231
Ref Fixed	291	Shift X Limit Line (remote control)	524
Ref Level (remote control)	606	Shift Y Limit Line (remote control)	529
Ref Level Adjust Man/Auto (remote control)	743	Show Align Results (remote control)	729
Ref Level Offset	228, 339	Show Peaks	142
Ref Level Offset (remote control)	651	Show Peaks (remote control)	588
Ref Level Position	228, 339	Sig Count	289
Ref Level Position (remote control)	651	Sig Count On/Off (remote control)	674, 675
Ref Lvl =Mkr Lvl	284	Signal Track (remote control)	634
Ref Lvl =Mkr Lvl (remote control)	667	Size	396
Ref Point Frequency	290, 292	Soft Frontpanel (remote control)	717
Ref Point Frequency (remote control)	672	Sort Mode	395
Ref Point Level	290, 291	Sort Mode Freq/Lvl (remote control)	686
Ref Point Level (remote control)	673	Source Cal	348
Ref Point Time (remote control)	672	Source Config	351
Ref Value (remote control)	692	Source Power	348
Ref Value Position (remote control)	651	Source Power (remote control)	708
Reference Fixed On/Off	291	Source RF (On/ Off)	348
Reference Int/Ext (remote control)	727	Source RF (On/Off) (remote control)	704
Reference Position (remote control)	651	Span	296
Reference Value	349	Span Manual	223
Reference Value Position	349	Span Manual (remote control)	633
Rename	395	Span/RBW Auto [50]	238
Rename (remote control)	736	Span/RBW Manual	238
Res BW	189, 196	Start	220
Res BW (remote control)	487	Start (remote control)	632
Res BW Auto (remote control)	637, 638	Start Frequency (remote control)	632
Res BW Manual (remote control)	487, 637	Startup Recall	393
Restore Standard Files	145	Startup Recall (On/Off)	393
Right Limit	84, 295	Startup Recall On/Off(remote control)	738
Right Limit (remote control)	505	Std Dev (remote control)	618, 619
RMS (remote control)	616, 617	Stepsize Standard	279
Save	391	Stepsize Standard (remote control)	669
Save As Standard	145	Stepsize Sweep Points	279
Save As Standard (remote control)	571	Stepsize Sweep Points (remote control)	669
Save Evaluation List	142	Stop	220
Save Evaluation List (remote control)	587	Stop (remote control)	633

Stop Frequency (remote control) 633
 Sweep Count 245
 Sweep List (remote control) 562, 563, 564, 565, 566,
 567, 568, 574, 575, 576, 577, 578, 579, 580
 Sweep Points 245
 Sweep Points (remote control) 641
 Sweep Rep (On/Off)(remote control) 781
 Sweep Time 121, 253
 Sweeptime Auto (remote control) 642
 System Messages (remote control) 720
 T1-T2 ->T1 267
 T1-T3 ->T1 267
 T1-T4 ->T1 267
 T1-T5 ->T1 267
 T1-T6 ->T1 267
 THD Unit %/DB (remote control) 599
 Threshold 85, 295
 Threshold (remote control) 670
 Time Domain Power (remote control) 610
 Time Line 1 (remote control) 666
 Time Line 2 (remote control) 666
 Time+Date (remote control) 715, 717, 718
 Trace 1 2 3 4 5 6 (remote control) 655
 Trace Math 267
 Trace Math (remote control) 653, 654
 Trace Math Mode 267
 Trace Math Mode (remote control) 653
 Trace Math Off 268
 Trace Math Position 268
 Trace Mode (remote control) ... 608, 609, 611, 613, 614,
 615, 616, 617, 618, 650
 Track BW (remote control) 633
 Track On/Off (remote control) 634
 Track Threshold (remote control) 634
 Tracking Generator 256
 Trg/Gate Level 250
 Trg/Gate Level (remote control) 645
 Trg/Gate Polarity Pos/Neg 250
 Trg/Gate Polarity Pos/Neg (remote control) 645, 648
 Trg/Gate Source (remote control) 644, 645, 648
 Trigger Holdoff (remote control) 643
 Trigger Out (Low/High)(remote control) 725
 Trigger Polarity 343
 Unit 227, 338
 Unit (remote control) 650, 652
 Update Path (remote control) 715
 Use Zoom Limits 85
 Use Zoom Limits (remote control) 669
 User Defined Colors 406
 User Defined Colors (remote control) 750, 751
 User Pref Setup 364
 Value (remote control) 522, 524, 528
 Versions + Options (remote control) 719
 Versions+Options (remote control) 718
 Video 248, 341
 Video BW Auto (remote control) 639
 Video BW Manual (remote control) 639
 Video Output 257
 Volt 227, 338
 Watt 227, 338
 Weight ADJ (On/Off) (remote control) 547
 Weight TX (On/Off) (remote control) 547
 Weighting Filter (remote control) 546, 547, 548
 X * RBW 219
 X * RBW (remote control) 631
 X * Span 219
 X * Span (remote control) 631

x Offset (remote control) 523
 x-Axis Range 190, 196
 x-Axis Range (remote control) 606
 x-Axis Ref Level 190, 196
 x-Axis Ref Level (remote control) 606
 x*Demod BW (K7) 219
 y Offset (remote control) 529
 y-Axis Max Value 192, 198
 y-Axis Max Value (remote control) 607
 y-Axis Min Value 192, 199
 y-Unit %/Abs 193, 199
 y-Unit %/Abs (remote control) 607
 Zero Span 223
 Zero Span (remote control) 633
Softkey
 *IDN Format Legacy 378
 = Marker (remote control) 503
 Adjust Settings 130, 214, 335
 Adjust X-Axis 171, 172
 Alignment 372
 AM 292
 AM Mod Depth 102, 209
 AM Mod Depth (remote control) 594, 595
 Annotation (On/Off) 381
 Annotation On/Off (remote control) 767, 769, 770
 APD 102, 189
 Application Setup Recovery 386
 ASCII File Export 172
 AUTO 232, 236, 244
 Auto Freq 231
 Auto Level 231
 Auto select Reference 368
 Average 263
 Average Mode 266
 Band Power (remote control) 689, 690
 BB Power 249, 342
 Blank 51, 264
 C/N 129, 335
 C/N (remote control) 536
 C/N, C/No 101, 129, 334
 C/No 129, 335
 C/No (remote control) 536
 Calibrate Reflection Open (remote control) 704, 705
 Calibrate Reflection Short (remote control) 705
 Calibrate Transmission (remote control) 705
 Calibration Frequency RF 388
 CCDF 102, 195
 Center 218
 Center (remote control) 631
 CF Stepsize 218
 Ch Power ACLR 101, 114
 Channel Bandwidth 129, 335
 Clear All Messages 385
 Clear Write 50, 262
 Close Sweep List 140, 170
 Color (On/Off) 382, 383
 Colors 381
 Compatibility Mode 375
 Computer Name 373
 Configure Monitor 379
 Cont Demod 293
 Continue Single Sweep 243
 Continuous Sweep 242
 Copy to 90
 Coupling (FSx/HP) 377
 CP, ACP, MC-ACLR (remote control) 536
 CP/ACLR Standard (remote control) 540

Decim Sep (remote control)	656	IQ Import	394
Default Colors 1 (remote control)	768	LAN Reset	375
Default Colors 2 (remote control)	768	Left Limit	175
Delete	90	Limits On/Off	174
Delete (ACLR User Standard)	123	List Evaluation	171
Delete Value	89	List Evaluation On/Off	171
Density (remote control)	688, 689, 690	Load (ACLR User Standard)	123
Description	374	Log	267
Deselect all	88	Logo (On/Off)	381
Details On/Off	171	Logo On/Off (remote control)	769
DHCP (On/Off)	374	LXI	374
Display Line 1	91	Margin	171
Display Line 2	91	Marker 1 to 4 (remote control)	510
Display lines	90	Marker Demod	292
Display Pwr Save	384	Marker Number	296
Display Pwr Save (remote control)	769	Marker Number (remote control)	683
Display Setup	380	Marker Peak List	294
Display Update (On/Off)	378	Marker to Trace	80
Edit	89	Marker to Trace (remote control)	510
Edit (remote control)	525, 527	Marker Zoom	280
Edit Comment	89	Max Hold	51, 263
Edit Margin	89	Max Peak Count	294
Edit Name	88	Max Peak Size (remote control)	685
Edit Value	89	Mean	174
Exclude LO	284	Meas Start/Stop	172
Export (remote control)	740	Mech Atten Auto (remote control)	652
FFT	232, 236, 244	Min Hold	51, 263
FFT Filter Mode	232, 236, 244	Mkr Demod On/Off	292
Firmware Update	386	Mkr Stop Time	292
FM	292	Mode Default	376
Frequency Line 1	91	Mode R&S FSP	376
Frequency Line 2	91	Mode R&S FSU	376
Frequency Offset (remote control)	632	Network Address	373
Full Span	59	New	88
Gate Delay	252	New (remote control)	525, 527
Gate Length	253	New Spectrum (remote control)	454
Gate Mode Lvl/Edge	252	No. of Harmonics	214
Gate Settings	252	Normalize (remote control)	705
Gated Trigger	251	OBW	101, 132
General Setup	373	OBW (remote control)	536
GPIO	375	Option Licenses	386
GPIO Address	375	Other LAN Settings	373
GPIO Language	376	Password	374, 388
GPIO Terminator LFEOI/EOI	378	Peak	174
Handle missing Ext. Ref	368	Peak List (remote control)	685
Hardware Info	384	Peak List On/Off	294
Harmonic Distortion	103, 213	Peaks per Range	171
Harmonic RBW Auto	214	Power (remote control)	688, 689, 690
Harmonic Sweep Time	214	Preamp On/Off	61, 227, 332
I/O Logging (On/Off)	379	Preamp On/Off (remote control)	486
ID String Factory	375	Predefined Colors	382
ID String User	375	Predefined Colors (remote control)	768
IF Gain (Norm/Puls)	377	Print Colors	383
IF Power	249, 342	Recall (remote control)	705
IF Power Retrigger Holdoff (remote control)	643	Ref Level	225, 336
IF Power Retrigger Hysteresis (remote control)	644	Ref Level (remote control)	651
Import (remote control)	692	Reference Int/Ext	367
Info (LXI)	374	Res BW Auto	234
Input (AC/DC)	66, 229, 257	Res BW Manual	234, 253
Input (AC/DC)(remote control)	488	Reset Password	388
Input 50 Ω /75 Ω	62, 229	RF	388
Input Source	387	RF Atten Auto	227
Insert Value	89	RF Atten Auto (remote control)	652
Install Option	386	RF Atten Manual	60
Install Option by XML	386	RF Power	249, 341
IP Address	373	Right Limit	175
IQ Export	394	RMS	174

Save (ACLR User Standard)	123
Save (remote control)	656
Save Evaluation List	171
Save Limit Line	89
Screen Colors (remote control)	768
Screen Title	381
Screen Title (remote control)	772, 773
Search Signals	208, 210
Select 1 2 3 4 (remote control)	510
Select Color Set	382, 383
Select Object	382
Select Trace	221
Select Traces to check	88
Self Alignment	372
Selftest	388
Selftest Results	388
Service	387
Service Function	388
Set to Default	383
Set to Default (remote control)	768
Shift Y Limit Line (remote control)	526
Show Align Results	372
Show Error Flag	368
Show Peaks	171
Signal Track	220
Single Sweep	243
Soft Frontpanel	379
Sort Mode Freq/Lvl	294
Spectrum Emission Mask	101, 136
Spurious Emissions	101, 167
Squelch	293
Squelch (remote control)	466
Squelch Level	293
Std Dev	174
Subnet Mask	374
Sweep Count (remote control)	641
Sweep List	136, 167
Sweep Repeat (On/Off)	377
Sweep Time (remote control)	641
Sweep Type	232, 236, 244
SweepTime Auto	236, 243
SweepTime Manual	235, 243
SweepTime Manual (remote control)	641
System Info	384
System Messages	385
Theme Selection	381
Time Domain Power	102, 174
Time Line 1	91
Time Line 2	91
Time+Date	379
Time+Date (On/Off)	381
Time+Date Format	381
Time+Date Format (remote control)	773
Time+Date On/Off (remote control)	773
TOI	102, 208
TOI (remote control)	600
Tool Bar State (On/Off)	380
Tool Bar State On/Off (remote control)	770
Touch Screen Alignment	373
Trace 1	262
Trace 2	262
Trace 3	262
Trace 4	262
Trace 5	262
Trace 6	262
Trace Mode (remote control)	498
Track BW	221
Track On/Off	221
Track Threshold	221
Trg/Gate Source	248, 340
Trg/Gate Source (remote control)	644, 645
Trigger Holdoff	251, 344
Trigger Hysteresis	251, 344
Trigger Offset	250, 343
Trigger Out	257
User Defined Colors	382
User Standard	123
Versions+Options	384
Video BW Auto	235
Video BW Manual	234
View	51, 263
X Offset	90
Y Offset	90
y Offset (remote control)	526
Softkeys	
Autoselect	264
Detector Auto Peak	265
Detector Average	265
Detector CISPR Average	266
Detector Manual Select	264
Detector Negative Peak	265
Detector Positive Peak	265
Detector Quasi Peak	266
Detector RMS	265
Detector RMS Average	266
Detector Sample	265
Lower Level Hysteresis	232
Probe Config	257
Upper Level Hysteresis	232
Source Power	
tracking generator	352
Span	
softkey	296
SPAN key	223
Span menu	223
SPD	422
SPE	422
Speaker	
remote control	717
Special characters	
SCPI	427
Spectrogram	
Menu	277
Spectrum Emission Mask	
Measurements	134
Power Classes	144
Softkey	101, 136
SPLIT/MAXIMIZE	
Key	771
Spurious Emissions	
Limit lines	164
Measurements	161
Results	163
Softkey	101
Squelch	
Remote control	466
Softkey	293
Squelch Level	
Softkey	293
SRE	435
SRE (service request enable register)	438
SRQ (service request)	438, 449
start frequency	220

statistic measurements
 gated trigger 200
 Status
 Queries 450
 Status byte
 Remote 710, 712
 Status registers 435
 CONDition 436
 ENABLE 436
 EVENT 436
 model 436
 NTRansition 436
 parts 436
 PTRansition 436
 STATus:OPERation 440, 446
 STATus:QUESTionable 441, 447
 STATus:QUESTionable:ACPLimit 448
 STATus:QUESTionable:FREQuency 442
 STATus:QUESTionable:LIMit 442
 STATus:QUESTionable:LMARgin 443
 STATus:QUESTionable:POWER 444
 Status reporting system 435
 Application 449
 Common commands 709
 STB 435
 Step size
 Center frequency 218
 stop frequency 220
 Suffixes 426
 supply voltage, external noise source 257
 sweep
 count 245
 Free Run 248, 341
 gated 254
 Sweep
 Continue single sweep 243
 Continuous 242
 Gated 251
 Single 243
 Time 235, 243
 SWEEP key 242
 sweep list
 Fast SEM (remote control) 573
 Sweep List
 Symmetrical 140
 Sweep menu 242
 Sweep points 176
 Sweep status
 Status register 446
 Sweep time
 Coupling 236, 243
 Statistics 186
 Syntax elements
 SCPI 430
 System Messages dialog box 385

T

Template 407
 Test
 Self test 388
 Test report 406
 threshold
 line 85, 295
 Threshold
 Signal tracking 221

Time 381
 softkey 250, 342
 Time Domain Power
 Restricting range 173
 Results 172
 time line 92
 Time line 91
 Time trigger
 Repetition interval 251, 343
 timestamp
 instrument (remote control) 717
 Title
 Diagram 381
 TOI
 Measurement 203
 Results 207
 TOI (marker functions) 282
 Touch screen
 Alignment 373
 TPIS
 I/Q data 702
 trace
 power measurement 121
 Trace
 Clear Write 50, 262
 Signal tracking 221
 TRACE key 76, 260
 Trace mode 262
 Average 263
 Blank 51, 264
 Clear Write 50, 262
 Max Hold 51, 263
 Min Hold 51, 263
 View 51, 263
 tracking generator
 display 361
 error messages 361
 Power Offset (remote control) 708
 power sweep 351
 reverse sweep 351
 selecting 352
 Tracking Generator
 Frequency Offset (remote control) 707
 Transducer 54
 Transducer break 54
 Transducer factors 54, 369
 Transducer set 54, 371
 transmission measurement
 calibration 354
 tracking generator 355
 TRIG key 247
 trigger
 external 248, 341
 level 250
 slope 250, 343
 Trigger
 External gate 251
 Gated sweep 252
 Holdoff 251, 344
 Hysteresis 251, 344
 Level 342
 Offset 250, 343
 Status register 446
 Trigger event
 Remote 713
 Trigger menu 247, 340

trigger mode	248, 340
External	248, 341
Free Run	248, 341
Video	248, 341
Trigger mode	
BB power	249, 342
IF power	249, 342
RF power	249, 341
TRK (marker functions)	282

U

Units	428
UP	428
Upper Level Hysteresis	
Softkey	232
Usable I/Q bandwidth	
Definition	345
USER key	364
Remote	776
User ports	
Remote control	726
User sample rate	
Definition	345
user-defined menu	364

V

V network	52, 180
VBW	
RMS detector	235, 273
Versions/Options dialog box	384
Video bandwidth	234
video triggering	248, 341
View Filter	94
View trace mode	51, 263
VISA	414, 416
Libraries	415
Resource string	415, 416
Volume	
remote control	717
VXI protocol	417

W

Wait	
Remote	713
Waiting for trigger	
Status register	446
weighting filter	118
White space	430

Y

Y-Axis Max	
I/Q Analyzer	339

Z

zero span	223
Zoom	280
Amplitude	51, 263