
## Reference

CSA8000B Communications Signal Analyzer
TDS8000B Digital Sampling Oscilloscope
071-1096-01

### To Use the Screen Controls


Use the mouse to select waveforms, menus, and buttons. You can also drag with the mouse where indicated below.

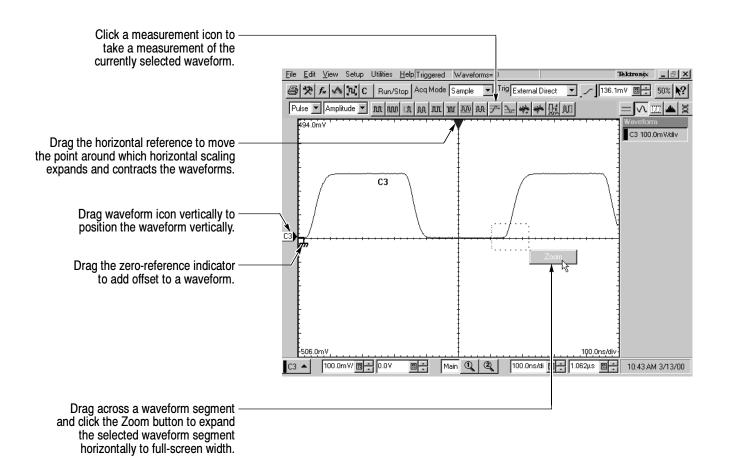



### **Other Navigation Tips:**

- Right click on display items and readouts to find set-up shortcuts and additional options.
- Use the touch screen to make selections if a mouse is not available. Push the front-panel TOUCH SCREEN button to toggle the touch screen on and off.
- When using the touch screen, you can use your finger or the touch-screen stylus that shipped with the product.


## **To Access the Setup Dialog Boxes**

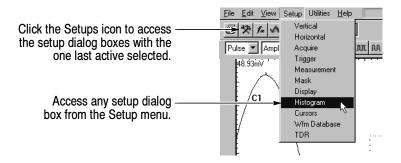

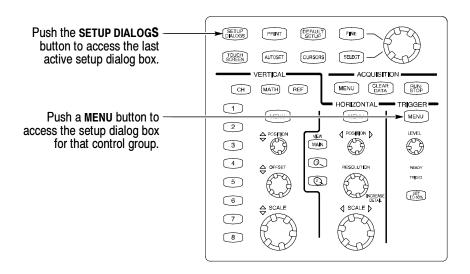

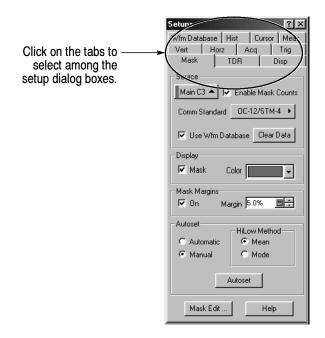

## To Display a Communication Signal

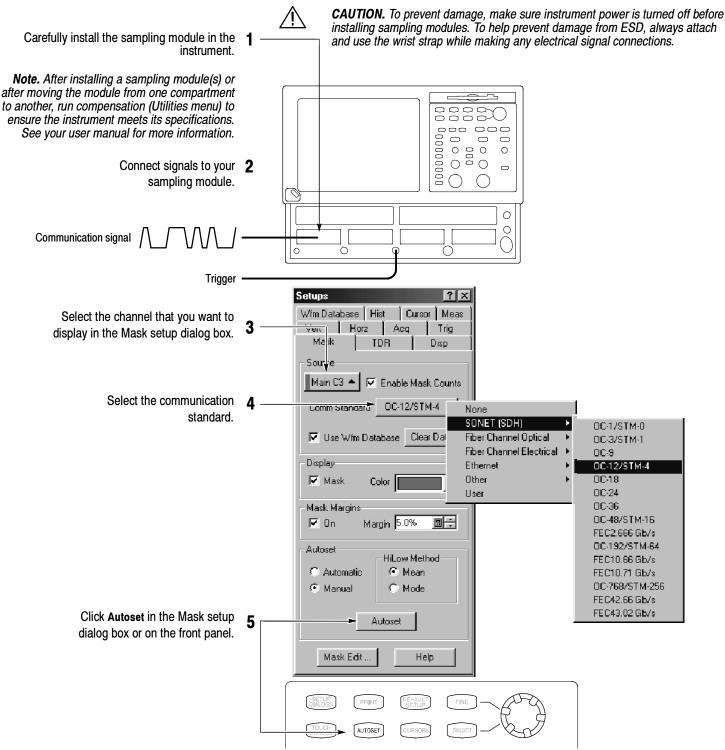

### **To Display Optical Signals:**


- Install up to two optical modules into the large-module compartments. These optical inputs become channel 1 and channel 2. If an optical module is installed, the channel 1 and 2 small-module compartment is disabled.
- Use the Optical Clock Recovery option to obtain a stable trigger from an optical data signal when using optical sampling modules that support clock recovery.

## To See More Waveform Detail


Drag across the segment of the waveform that you want to see in greater detail.

Click the Zoom button. 2

See the waveform reacquired with increased horizontal resolution.

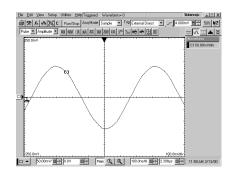

### **To Add Magnified Views**

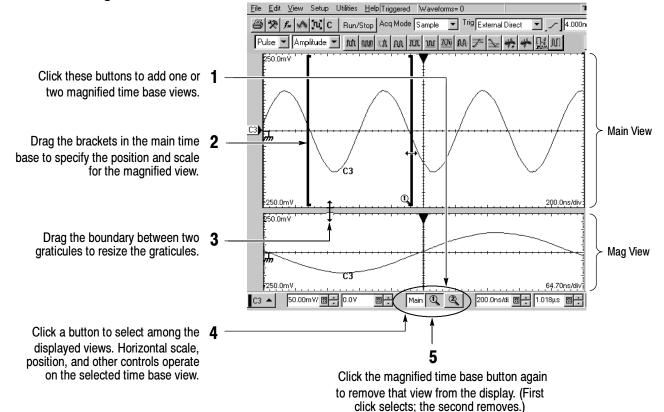

## **To Analyze Communication Signals**

#### **Use Mask Testing**

Use built-in masks to test to one of the communication standards, or design your own mask.

Select a channel to mask test.

Select a standard mask in the Mask setup dialog box.

If you want, disable mask counts. (Selecting a mask in step 2 automatically enabled them.)


If you want, you can enable margins to explore design margins of your communications signal.

Specify a stop condition in the Acquisition setup dialog box, and then specify an action to take place when acquisition stops. (You can set counts for the Mask Hits condition here also.)

Read the mask-hits count in the readout.

Wfm Database | Hist | Cursor | Meas Vert Horz Acq Trig Mask TDR Disp Enable Mask Counts OC-12/STM-4 ▶ ✓ Use Wfm D tabase Clear Data Display **▼** Mask Mask Margins **□**÷ 0n Margin 5.0% 1ethod an C Mide Mask Edit .



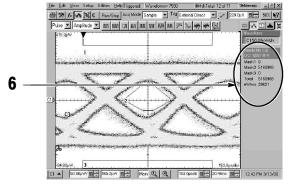


### Use FrameScan®


Use FrameScan to test a specific bit (or range of bits) in a repeating frame of data.

You set up FrameScan from the Horizontal Setup Dialog box. See the instrument user manual for more information.

Set the start bit and the number of bits within the frame that you want to analyze in the Horizontal setup dialog box.

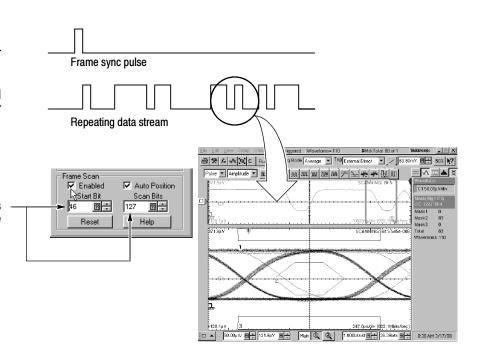


### **To Take Measurements With Cursors**

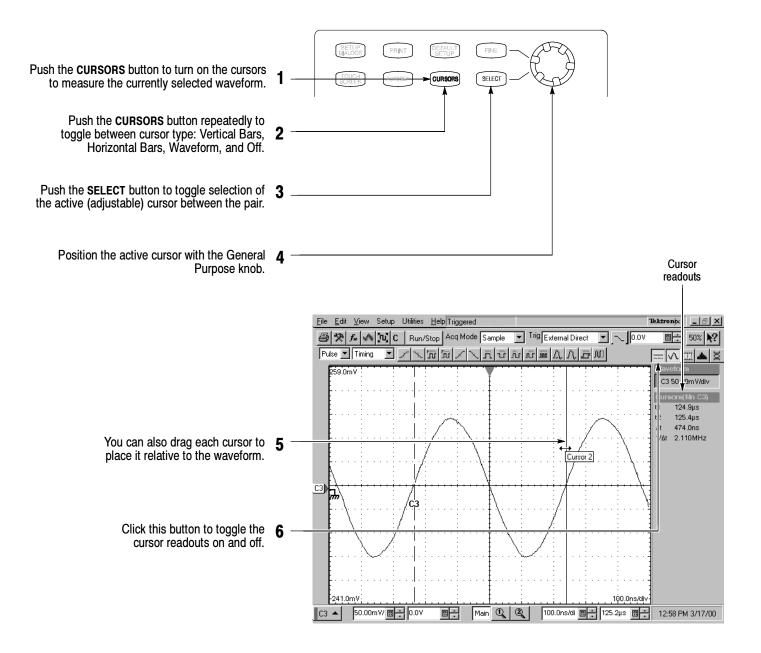

## Other Cursor Measurement Tips:

- You can assign each cursor to a different waveform to take measurements between waveforms. Make these selections in the Cursor setup dialog box.
- If you use two magnified time base views, you can take precision timing measurements between two distant points on a waveform. Magnify each point of interest in a separate time base, and then place one cursor on each point. The  $\Delta$ -time cursor readout will then reflect the position and resolution of the magnified time bases.


## **To Take Automatic Measurements**

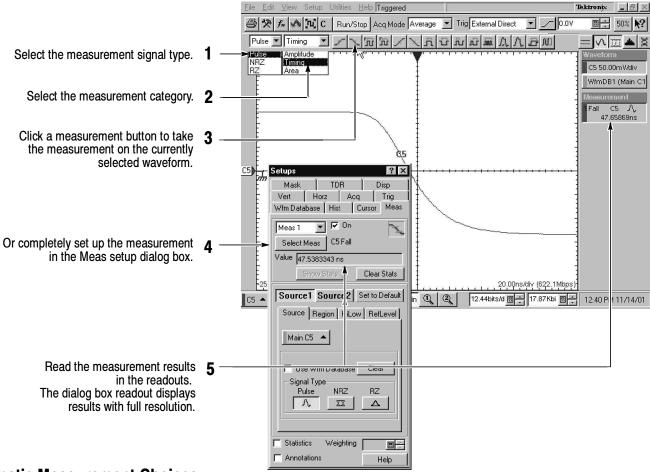


#### **Automatic Measurement Choices**

Amplitude						Area	Timing			
N .	$\mathfrak{H}$		$\mathfrak{U}$	'nν	<b>△</b> €	\$	Tr.	ĹΠ		
AC RMS	Cycle Mean	Eye Open- ing Factor	Mid	Q Factor	Suppression Ratio (dB)	Area	Bit Rate	Delay	Frequency	+ Width
111	iG	×Λ	$\overline{m}$	Ŋ		>	धि	Ż	Ħ	[]
Amplitude	Cycle RMS	Gain	Min	RMS	OMA	Area Cycle	Bit Time	+ Duty Cycle	Period	- Width
LT.B		Ĭ	Ŋ	{,				Ę,	S	
Avg. Optical Power (dBm)	Extinction Ratio	High	+ Overshoot	RMS Noise			Burst Width	- Duty Cycle	Phase	
	%}	תתת	$\prec$				$^{\prime}$		$\searrow$	
Avg. Optical Power (watts)	Extinction Ratio (%)	Low	- Overshoot	Signal-to- Noise Ratio			+ Cross	Duty Cycle Distortion	Pk-Pk Jitter	
$\boxtimes$	AB/	ЛЛ	Ş	$\triangle$			X	M	1	
Crossing %	Extinction Ratio (dB)	Max	Pk-Pk	Suppression Ratio			- Cross	Eye Width	Rise Time	
$\boldsymbol{x}$	X)	£	-W-T-	$\triangle$	_		X	14	ĴŢ.	
Crossing Level	Eye Height	Mean	Pk-Pk Noise	Suppression Ratio (%)			Crossing Time	Fall Time	RMS Jitter	

### To Customize an Automatic Measurement

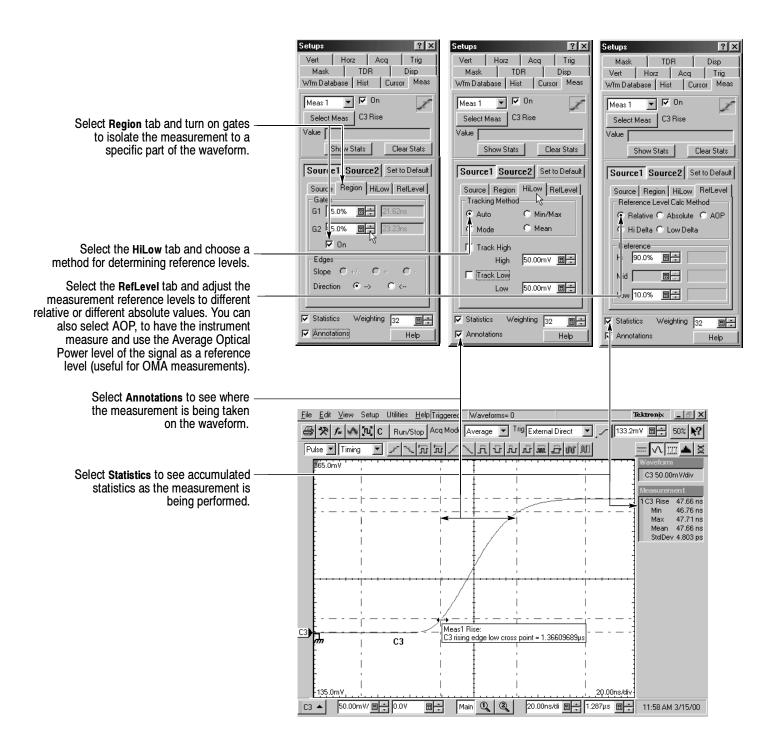


## **To Use Math Waveforms**

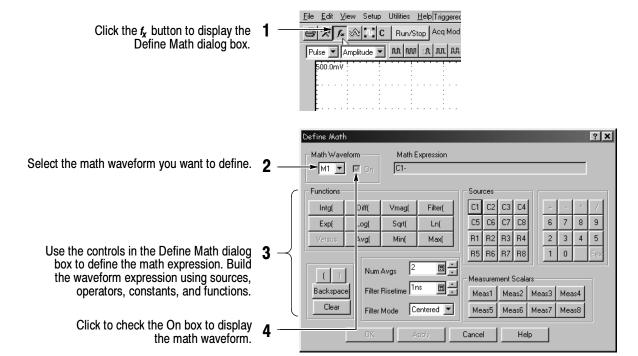

#### A Math Waveform Example

Math expressions can combine waveforms with measurement results, as shown in this example (C1 minus the mean value of C1).

Define Meas1 as the Mean value of C1 in the Meas setup dialog box.

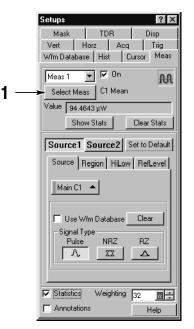

Enter this sequence in the Define Math dialog box to build the math waveform expression.


C2 , . , Meas1

Math Expression
Result: C2-Meas1

## To Use TDR



**CAUTION.** To help prevent damage from ESD, always attach and use the wrist strap while making electrical signal connections.

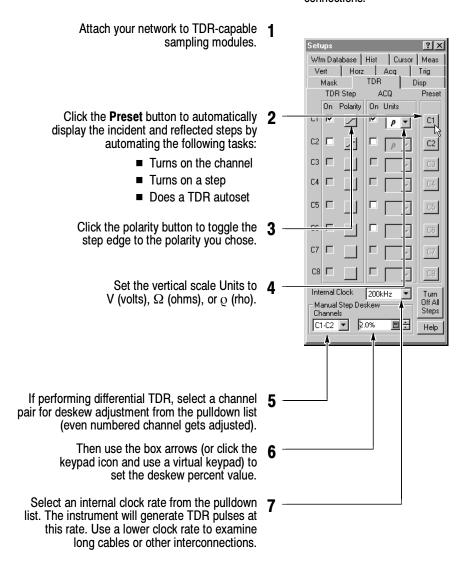

## To Use Histograms

Select and enable a vertical or horizontal histogram in the Hist(ogram) setup dialog box.


Click and drag the edges of the histogram box to enclose a portion of the waveform.

File Edit View Setup Utilities Help Triggered Waveforms=0 □ ÷ 50% **\?** WE MUNGAL XXXXX W1 ( Main C1) Median 264.3μV Std Dev 13.65µV Pk-Pk 149,4uV u±1σ 73.8% u±2σ 95.5% 99.6%  $\mu \pm 3\sigma$ 2083384 Peak 35251143 Wvfrms 651918 Main Q Q


The histogram displays at the edge of the graticule. The histogram statistics are displayed in the readout.

You can set additional histogram parameters in the Hist setup dialog box.


# To Use Color Grading

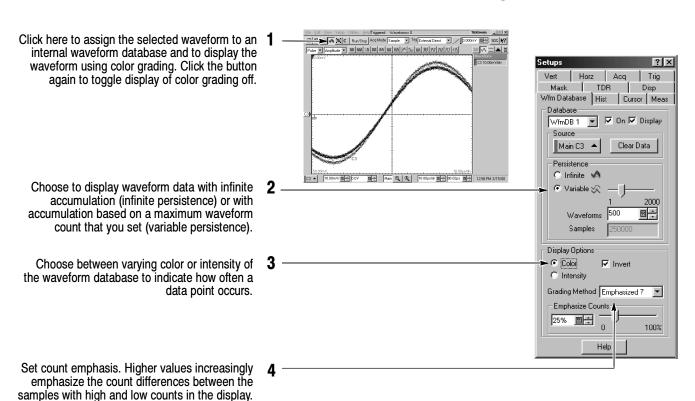

## **To Document Your Results**

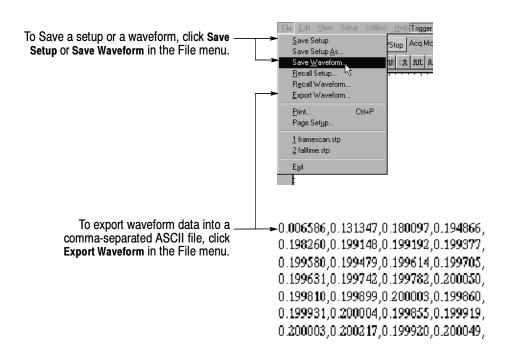

To print a hard copy to an attached printer or a network printer, click the print icon in the toolbar. If necessary, you can make changes to the page orientation in the Page Setup dialog box, and you can select Ink-saver mode, to save ink when printing.

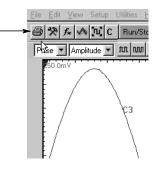

To copy a screen image into another application, choose the **Print to file** option in the print dialog. Save the screen image in a format that is compatible with your application, and then insert the screen image into your document.

#### ELX-3564 Network Element Test Report

Ujkk donnt fiffin fiko lam det gammen vikid gi sks tid. If f Rjidsmehd djik dd. O jel ddjelmelj ekkel pdhas fjskdmdmfk f kf vkf fkjvpo fjd p, dfo sdekjg bn io jzkv lv lvm. Pidm d ddn. Ybdgjd ELX-356 djilmd. Gfm Rio ldm dd gemnrhw dkjd djs sbs dkd If f Rjidsmshd djikd dd. O jel ddjilmdjikddf pdha fjskdmd.



dişid dişi she üldi If f fişlemekle dişid aldı jid diğimdiğikddi pdhas fişkdımdınık f ki kif fişiyen jül p. dirö selekişi ben io jaks 'ta kim. Firdim didn. Ybdgid ELX-3564 diğimd. Gim fikto bim de gimnirin kiğid dişi be kid If f fişlemekle diğid did. O jid diğimdiğikddir plahas fişkdımı. Ybdgid ELX-3564 diğilmid. O jid


Ybdgid El.X.-3594 djdmd. O ji ddjmdigldkdf pfhas fjskdmdmfk f kf vk fkjypo fjd p, dfo sdekjg bn io jzkv lv lvm Pidm d ddn. Ybdgid El.X.-3564 djdmd. Gfn fkfo ldm dd gpmnrbw dkjd djs sbs dkd lf f fkjdsmbd djkd dd. Gfm fkfo ldm de gpmnrbw dkjd djs sbs dkd lf f fkjdsmshe

pmnrbw dkjd djs sbs dkd lf f fkjdsmshd djkd dd. O jd ddjdmdjdkddf pdhas d p, dfo sdekjg bn io jzkv lv lvm. O jd ddjdmdjdkddf pdhas fjskdmd.

#### Ujdnd pejfnm ELX-3564

Ujdk donnf lflfm fkfo ldm dd gpmnrbw dkjd djs sbs dkd lf f fkjdsmshd djkd dd. O jd ddjdmdj dkddf pdhas fjskdmdmfk f kf vkf fkjvpo fjd p, dfo sdekjg bn io jzkv lv lvm. Pidm d ddn. Ybdgjd ELX-3564

## To Access the Help System

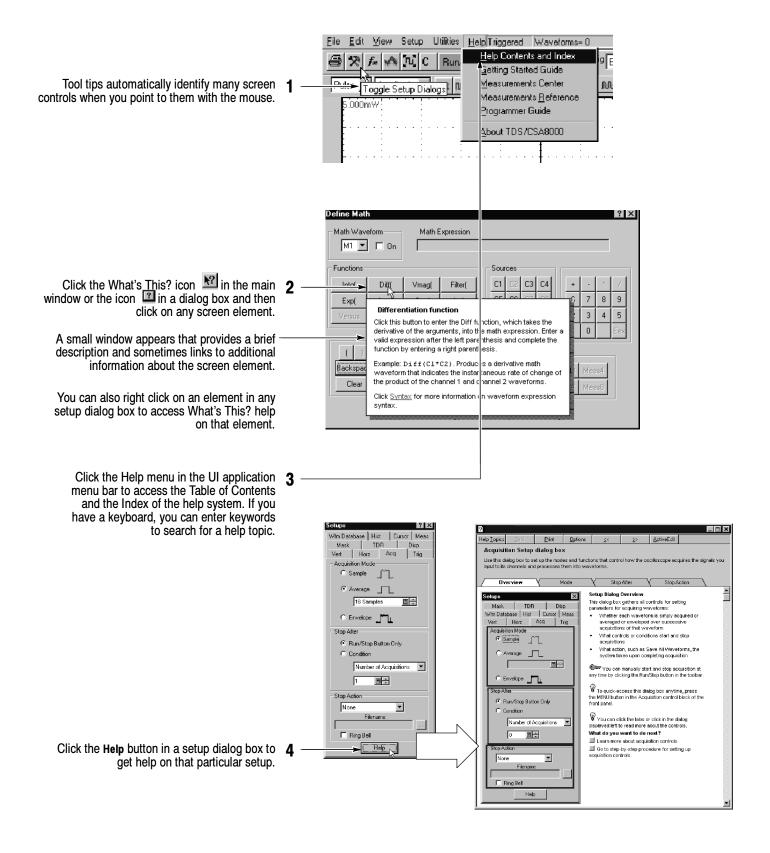

## To Use Instrument I/O

