

INSTRUCTION MANUAL

# MODEL 136 VCG/VCA GENERATOR



# WAVETEK



# CONTENTS

Section One	SPECIFICATIONS	
	Specifications . . . . .	1
Section Two	OPERATION	
	Inspection . . . . .	3
	Operating Controls . . . . .	3
	Operation . . . . .	5
Section Three	CIRCUIT DESCRIPTION	
	General Description . . . . .	8
Section Four	MAINTENANCE	
	Introduction . . . . .	10
	Recommended Test Equipment . . . . .	10
	Checkout and Calibration . . . . .	10
	Removal of Dust Covers . . . . .	10
	Main Board . . . . .	10
	X-Y Multiplier . . . . .	12
	Troubleshooting . . . . .	14
	Removal of Front and Back Panels . . . . .	16
	Replacement of Switch Wafers and Potentiometers . . . . .	16
	Replacement of Sine Converter . . . . .	16
	Frequency Dial Alignment Procedure . . . . .	17
Section Five	DATA PACKAGE	
	Introduction . . . . .	18
	List of Manufacturers . . . . .	18

## SCOPE OF MANUAL

This manual contains instructions for operating, testing, and maintaining the Wavetek Model 136 VCA/VCG Generator. The Wavetek product-improvement program ensures that the latest electronic developments are incorporated into the Wavetek instruments by the addition of circuit and component changes as rapidly as development and testing permit. Due to the time required to document and print these Instruction Manuals, it is not always possible to get these changes incorporated into the manual. In this case,

data will be found on engineering change sheets at the back of the manual.

## SCOPE OF EQUIPMENT

The Model 136 is a precision source of sine, square, and triangle waveforms, with selectable and variable outputs over a dynamic frequency range of 0.2 Hz to 2 MHz. It can be manually operated with easy-to-use, front-panel controls and also offers frequency and amplitude control by external voltage for either dc programming or wideband modulation applications.



# SECTION 1

## SPECIFICATIONS

### SPECIFICATIONS

#### VERSATILITY

##### Waveforms

Sine , square , and triangle .

##### Dynamic Frequency Range

0.2 Hz to 2 MHz




#### NOTE

*The fixed (unmodulated) sine waveform can be used to self-modulate the generator and extend the frequency range to 4 MHz.*

##### Ranges

X 10	0.2 Hz to 20 Hz
X 100	2 Hz to 200 Hz
X 1K	20 Hz to 2 kHz
X 10K	200 Hz to 20 kHz
X 100K	2 kHz to 200 kHz
X 1M	20 kHz to 2 MHz

##### Outputs

Sine , square , and triangle  selectable; amplitude variable over 40 dB of smooth amplitude control plus 60 dB step attenuator in 10 dB steps, and overlapping vernier control, 50 $\Omega$  output impedance; 20 V p-p into open circuit and 10 V p-p into 50 $\Omega$  load.

##### Fixed Sine Output

2.5 V p-p (fixed) into an open circuit. This output is unaffected by any amplitude modulation signal.

##### Sync Output

Greater than 1 V p-p square wave into open circuit at 600 $\Omega$  output impedance.

##### DC Offset

$\pm 5$  V offset ( $\pm 2.5$  V offset into 50 $\Omega$  load) controlled from rear panel; peak amplitude limited by the dynamic range of the amplifier output.

##### VCA—Voltage Control of Amplitude

Amplitude of the generator may be dc-programmed or ac-modulated by a 0 to 5 volt signal. The voltage control circuitry is bipolar and operates linearly over a 40 dB range. The VCA bandwidth is 4 MHz. The output amplitude at any time is determined by the output attenuator, the step attenuator, and any externally applied voltage.

##### VCG—Voltage Controlled Generator

Frequency of generator may be dc-programmed or ac-modulated by external 0 to 5 V signal. Voltage control circuitry is capable of 1000:1 deviation. The VCG amplifier has a 100 kHz bandwidth and a slew rate of 0.1 V/ $\mu$ s. The instantaneous frequency is the result of the sum of the dial setting and the externally applied voltage.

##### Stability

Short term	$\pm 0.05\%$ for 10 minutes
Long term	$\pm 0.25\%$ for 24 hours

Percentages apply to amplitude, frequency, and dc offset.

#### HORIZONTAL PRECISION

##### Dial Accuracy

$\pm 2\%$  of full scale, 1 Hz to 2 MHz.

##### Frequency Vernier

One turn equals 1% of full scale.

##### Time Symmetry

$\pm 1\%$  through X 100K range.

#### VERTICAL PRECISION

##### Sine Wave Frequency Response

Amplitude change with frequency:

Less than 0.1 dB from 0.2 Hz to 200 kHz

Less than 0.5 dB from 0.2 Hz to 2 MHz

#### PURITY

##### Sine Wave Distortion

Less than 0.5% on X 10, X 100, X 1K, X 10K ranges.

Less than 1.0% on X 100K range  
Less than 2.0% on X 1M range

**Square Wave Rise and Fall Time**  
Less than 100 ns.

#### **ENVIRONMENTAL**

**Temperature**  
All specifications listed, except stability, are for 25°C  
±5°C. The generator will operate from 0°C to 55°C.

#### **MECHANICAL**

**Dimensions**  
8-½" wide, 5-¼" high, 11-½" deep.

**Weight**  
8 lb net, 12 lb shipping.

**Power**  
105 V to 125 V or 200 V to 250 V, 50 Hz to 400 Hz.  
Less than 20 watts.

#### **NOTE**

*All specifications apply for frequencies obtained when dial is between 0.1 and 2 and at 10 V p-p into a 50 ohm load. Prices and specifications subject to change.*

*It is possible to stop the generator from oscillating by applying a negative voltage when the dial is already set at minimum frequency. Input up to 30 V will not permanently damage the instrument, however.*

# SECTION 2

## OPERATION

### INSPECTION

The following procedures should be performed to assure the user that the instrument has arrived at its destination in proper operating condition. Complete calibration and checkout instructions are provided in Section 4 for determining if the instrument is within electrical specifications.

#### Checking Visually

After carefully unpacking the instrument, visually inspect the external parts for damage to knobs, dials, indicators, surface areas, etc. If damage is discovered, file a claim with the carrier who transported the instrument. Retain the shipping container and packing material for use in case reshipment is required.

#### Checking Electrically

#### NOTE

*Instruments are normally shipped connected for 115 V power unless 230 V power is ordered. Refer to the end of this section for conversion instructions.*

The procedural steps in this paragraph provide a quick checkout of instrument operation. If electrical deficiencies exist, refer to the *Warranty* in the front of this manual. The following test equipment, or equivalent, is recommended for performing this electrical inspection. (Refer to Operating Controls and Figure 2-1 for operating control descriptions.)

Name	Manufacturer	Model
Oscilloscope	Tektronix	544
Counter-Timer	Monsanto	101A

1. Turn **FREQ HZ** selector to the **X1K** position. (This connects ac power to the unit and establishes the frequency multiplier).
2. Connect oscilloscope to the **50Ω OUT** connector with 50-ohm terminator.

3. Set frequency dial to the 1.0 mark.
4. Set function to  $\sim$ .
5. Rotate **AMPLITUDE CONTROL** through its entire mechanical range.
6. Output signal should be at a null in the center of travel and maximum at each end (10 V p-p).
7. Select  $\vee$  and  $\sqcap$  with function selector and check for 10 V p-p amplitude on oscilloscope.
8. Turn frequency dial from maximum counter-clockwise to maximum clockwise positions and check for frequency change.
9. Step **OUTPUT ATTEN** through its range and verify attenuation at each step.
10. Rotate **VERNIER** control and check for frequency change.
11. Set **VERNIER** control at maximum clockwise. Set frequency to 20 Hz with counter. Connect a 0 to +5 Vdc input to the **VCG IN** connector. Slowly increase voltage input from 0 to maximum and check that frequency of output waveform increases from approximately 20 Hz to 2 kHz.
12. Set **AMPLITUDE CONTROL** to null.
13. Connect +2.5 Vdc to **VCA IN** connector with **VCA GAIN** set to off.
14. Rotate **VCA GAIN** to maximum.
15. Check for full amplitude signal out.
16. Repeat Steps 13, 14, and 15 with -2.5 V at **VCA IN** connector.

### OPERATING CONTROLS

The operating controls and electrical connections for the Model 136 are shown in Figure 2-1. The listing below discusses each control and its function.

1. **FREQUENCY RANGE SELECTOR/POWER SWITCH** — This 7-position switch selects the generator frequency range. The extreme counter-clockwise position is the power off position.
2. **FREQUENCY VERNIER** — This control allows precision control over the output frequency. A full turn of this control is approximately equal to one minor division of the frequency

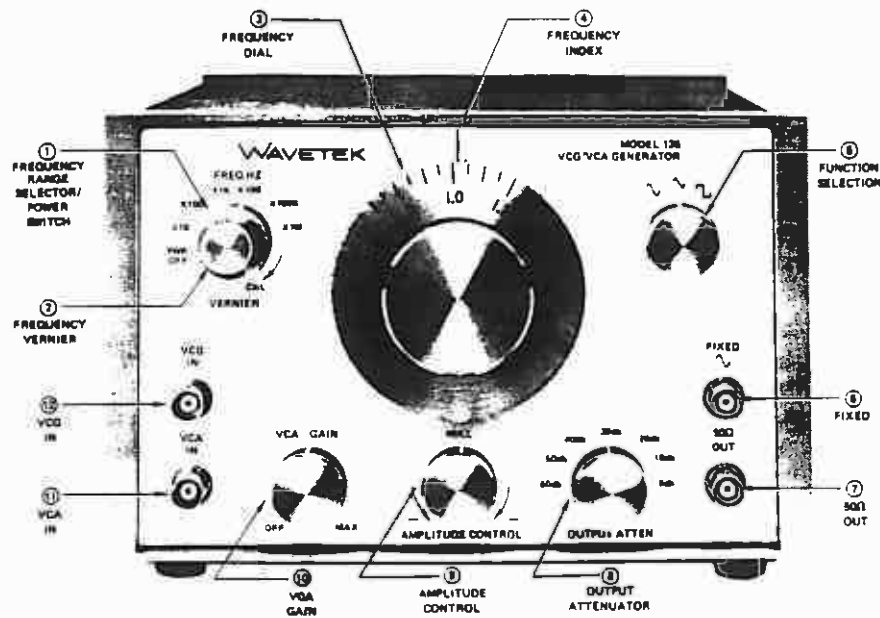


Figure 2-1. Operating Controls.

dial. When in the full clockwise position (CAL), the settings on the main dial will be calibrated.

3. **FREQUENCY DIAL** — The main frequency control. The setting on this dial multiplied by the frequency range setting equals the output frequency of the generator. The frequency VERNIER also affects the generator frequency.
4. **FREQUENCY INDEX** — The scribe line indicates the frequency dial setting. The index is illuminated when the unit is on.
5. **FUNCTION SELECTOR** — This selects the waveform that appears at the 50Ω OUT connector. The waveforms are sine  $\sim$ , triangle  $\nabla$ , square  $\square$ .
6. **FIXED  $\sim$**  — This connector provides a 2.5 V p-p (fixed) output into an open circuit. This output is unaffected by any amplitude modulation signal.
7. **50Ω OUT** — This connector provides the selected generator output function. The generator may operate into an open circuit providing 20 V peak-to-peak maximum, or into a 50Ω load providing a 10 V peak-to-peak output.
8. **OUTPUT ATTENUATOR** — This controls the
9. **AMPLITUDE CONTROL** — Provides approximately a 40 dB control over the output amplitude of the generator. This control is bipolar, where amplitude is maximum at the full clockwise (+) setting, approaches zero at the mid (null) setting and then increases to maximum at the full counter clockwise (−) setting. When the control is in the + area the phase of the output signal is 180° from the phase in the − area of the control.
10. **VCA GAIN** — Provides a control of the signal applied to the VCA INput and allows for precise setting of amplitude modulation limits.
11. **VCA IN** — This connector allows external control of amplitude. With 0 volts in, the generator output amplitude is determined by the OUTPUT ATTENUATOR and the AMPLITUDE CONTROL. The voltage applied is attenuated by the VCA GAIN control.
12. **VCG IN** — This connector allows external control of frequency. With 0 volts in, the generator output frequency is determined by the frequency range selected and the frequency



dial setting. A positive VCG voltage will increase this frequency, and a negative voltage will decrease the frequency. Input impedance is  $5\text{ k}\Omega$ .

**DC OFFSET** — This rear panel control adjusts the amount of dc or baseline offset above or below signal ground. The detent position gives normal vertical symmetry.

**SYNC OUT** — This rear panel output provides a synchronizing wave output at the same frequency of the main generator. The output amplitude is greater than 1 V p-p into open circuit at  $600\Omega$  output impedance.

### GENERAL NOTES



 
*One-half hour warmup is required for generator to stabilize at specified accuracies.*

*A 50 ohm termination results in 10 V p-p maximum output level. Open-circuit termination gives 20 V p-p. Loads between these limits provide intermediate maximum output levels.*

*The frequency VERNIER control must be in full cw position for calibrated-frequency operation over the .1 to 2 dial range. If this control is in full ccw position, dial range is uncalibrated, but extended to approximately 1/1000 of full scale.*

## OPERATION

### Operating as a Function Generator

1. Properly terminate the  $50\Omega$  OUT connector. A  $50\Omega$  termination results in 10 V peak-to-peak maximum output level, and optimum waveform performance. Open circuit termination gives a maximum output of 20 V peak-to-peak. Loads between these limits provide intermediate output levels. When operating into other than a  $50\Omega$  load, slight degradation of the output waveform may be noted particularly at higher frequencies.
2. Select the desired waveform (  ,  ,  ) with the function selector switch.
3. Select the operating frequency by setting the frequency range selector to the proper multiplier and adjusting the frequency dial to the desired setting.

4. Set the OUTPUT ATTENUATOR for the desired setting. The maximum output of the generator for each attenuator setting is shown in the table.

Attenuator Position	Maximum Peak to Peak Output into $50\Omega$ load
0	10 V
-10	3 V
-20	1 V
-30	300 mV
-40	100 mV
-50	30 mV
-60	10 mV

5. Adjust the output level voltage to the desired level with the AMPLITUDE CONTROL.

### Operating as a Voltage Controlled Generator (VCG)

1. Properly terminate the output signal.
2. Set function selector for desired waveform.
3. Set FREQ HZ range selector to desired multiplier.
4. Connect external voltage source (dc programming or wideband ac signal) to VCG IN connector.

### NOTE

*VCG input requires 0 to  $\pm 5$  volts for operation over full-scale range, but can withstand many times maximum input.*

*A negative voltage applied to the VCG input with the dial at the bottom may cause the generator to stop oscillating. Operation in such a manner is not recommended.*

5. Set frequency dial as follows:
  - a. For frequency modulation with ac input, set dial for center frequency.
  - b. For increasing frequency sweep with positive dc input, set dial to lower frequency limit.
  - c. For decreasing frequency sweep with negative dc input, set dial to upper frequency limit.
6. Set 20 V P-P MAX control for desired output level.
7. If dc offset is required, switch the rear panel control from the detent position and rotate the control until the required amount of positive or negative offset is obtained.

### NOTE

*The output of the generator is peak limited. When terminated into  $50\Omega$  the max. output is 10V P-P.*

8. To sweep the audio range from 20 Hz to 20 kHz, set the controls to 20 Hz as follows:
  - a. Set the main dial at .02.
  - b. Set the frequency vernier at the full counter-clockwise position.
  - c. Introduce a 0 to +5 V ramp into the VCG input connector.
9. The nomograph in Figure 2-2 shows the characteristics of the VCG circuit. Column A gives the frequency dial setting; column B, the VCG input voltage; and column C, the approximate resultant dial frequency. Column C must be multiplied by the frequency range multiplier for the actual output frequency.

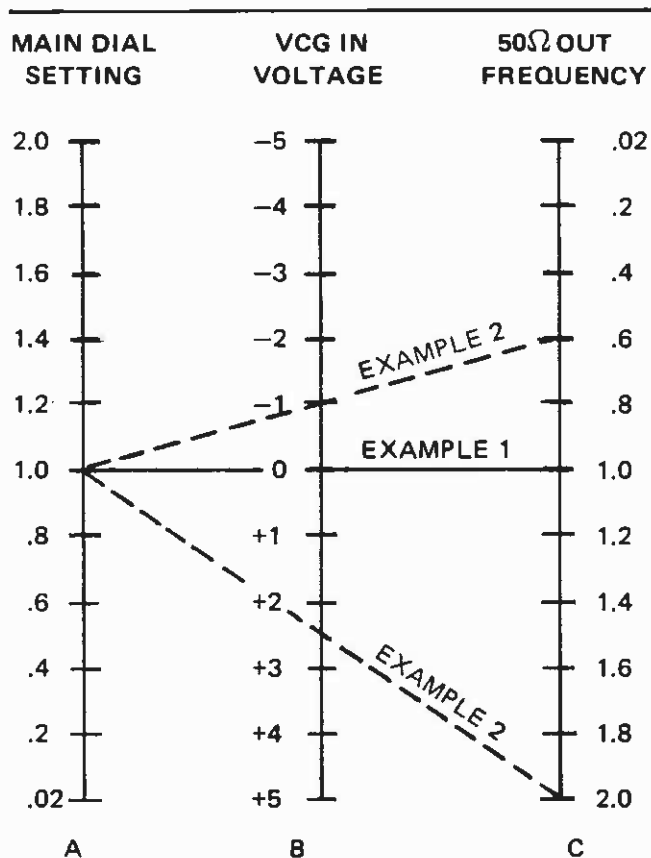


Figure 2-2 - VCG Voltage-to-Frequency Nomograph

In example 1, the dial is set at 1, and 0 volts is applied to the VCG input. Extend a straight line from 1 (dial setting) through 0 volts (VCG voltage) and obtain a dial frequency of 1. For the total output frequency multiply the range by 1. With the same dial setting, example 2 shows the results of using a ramp from -1 volts to +2.5 volts for the VCG voltage. This results in a swept output from .6 to 2.0 on the dial. Remember to multiply the dial times the range.

### Operating as an Amplitude Modulated Generator

In using the VCA capability of the generator, consider the amplitude as a multiplier as shown in Figure 2-3.


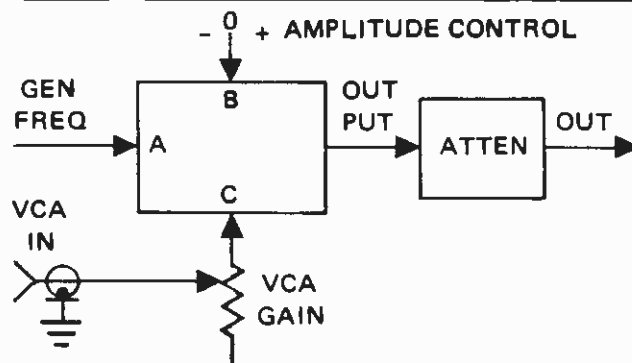


Figure 2-3. Multiplier Block Diagram

The output of the generator is the product of the input amplitude multiplied by the sum of the two control voltages, or output = A (B + C). If the sum of the control voltage is positive, and greater than unity the amplitude will increase. If the sum goes negative the amplitude changes accordingly and the signal phase is reversed. If the sum voltage is zero, the output level will be approximately zero. The chart below shows the effect of various types of modulation.

### UNMODULATED OUTPUT

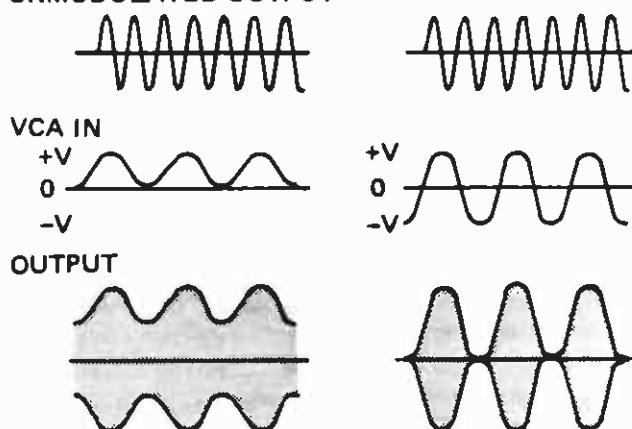

To set up the generator for amplitude modulation:

1. Adjust the function generator as shown under Operating as a Function Generator.
2. Turn the VCA GAIN to OFF and connect the modulating signal to the VCA IN connector.
3. Set the generator amplitude to the desired unmodulated level.

4. Increase the VCA GAIN control to achieve the desired modulation level. Note that if the VCA input is a positive voltage the unmodulated level will increase. It is possible to exceed the maximum specified output level of the generator, causing clipping and waveform distortion. If this is observed, decrease the amplitude control or the gain control until clipping is no longer observed.

#### Operating as a Suppressed Carrier Modulator

1. Adjust the function generator as shown under Operating as a Function Generator.
2. Turn the VCA GAIN to OFF and connect the modulating signal to the VCA IN connector.
3. Set the generator amplitude to null with the AMPLITUDE CONTROL, adjusting for minimum output.
4. Increase the VCA GAIN control to achieve the desired suppressed carrier.

#### Operation as a Double Frequency Sine Only Generator

1. Properly terminate the output connector.
2. Set the function to  $\sim$ .
3. Set the output level to null with the amplitude control.
4. Connect the FIXED  $\sim$  output to the VCA IN with the VCA GAIN turned to off.
5. Set frequency range and dial to one-half the desired output frequency.
6. Increase VCG GAIN control to desired output level.
7. The dc component of the output signal may now be removed with the output offset control on the rear panel.

#### Converting to 230-Volt Line Power

Instruments are shipped from the factory with the power transformer connected for 115-volt line power, unless ordered for 230-volt use. Converting a 115-volt unit for 230-volt operation is a simple matter.

1. Remove power cord.
2. Loosen two captive thumb screws on rear panel and remove panel.
3. The conversion switch is located on the chassis. Use a thin-bladed screwdriver to move the 115-230

switch to the 230 position.

4. Replace 1/4-ampere fuse with a 1/8-ampere fuse of the same type.

#### Connect Signal and Chassis Grounds

The instrument is shipped from the factory with the signal ground floating above chassis ground, unless otherwise specified. A common signal/chassis ground can be obtained as follows:

1. Remove power cord.
2. Loosen two captive thumb screws on rear panel and remove panel.
3. Solder a jumper wire between the ground lugs (green wires) of the SYNC OUT connector and the power connector (Figure 2-4).

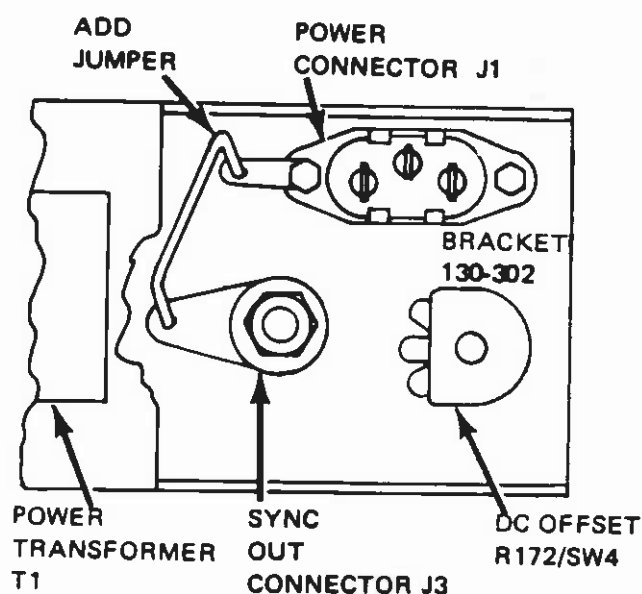


Figure 2-4. Common Ground Connection Diagram

#### Converting Output Impedance to 600 ohms

Unless otherwise specified, this instrument was shipped with 50 ohm output impedance, but can be converted to 600 ohm output if needed. Place a  $550\Omega$  resistor in series with the wire leading from the center tap of the  $50\Omega$  OUT BNC and the attenuator switch.

# SECTION 3

## CIRCUIT DESCRIPTION

### GENERAL DESCRIPTION

Refer to the block diagram of the Model 136 Function Generator, Figure 3-1.

Basically, a square wave is applied to the input of an integrator composed of a wideband differential dc amplifier, integrating resistor and capacitor. The output of the integrator is fed into the hysteresis switch. The hysteresis and output switches function like a Schmitt trigger with the limit points set at the waveform extremes, firing when the triangle wave reaches +1.25 volts and -1.25 volts. The firing sets the hys-

teresis and the output switches which reverse the square wave fed into the integrator, causing the triangle wave to reverse direction. The result is simultaneous generation of a square wave and triangle wave of the same frequency with the positive half cycle of the square wave coincident with the negative slope of the triangle wave.

The frequency of oscillation is determined by the magnitude of the capacitor across the integrator and the amplitude of the current into the integrator. The capacitance across the integrator is changed by rotating the frequency Hz selector. The amplitude of the

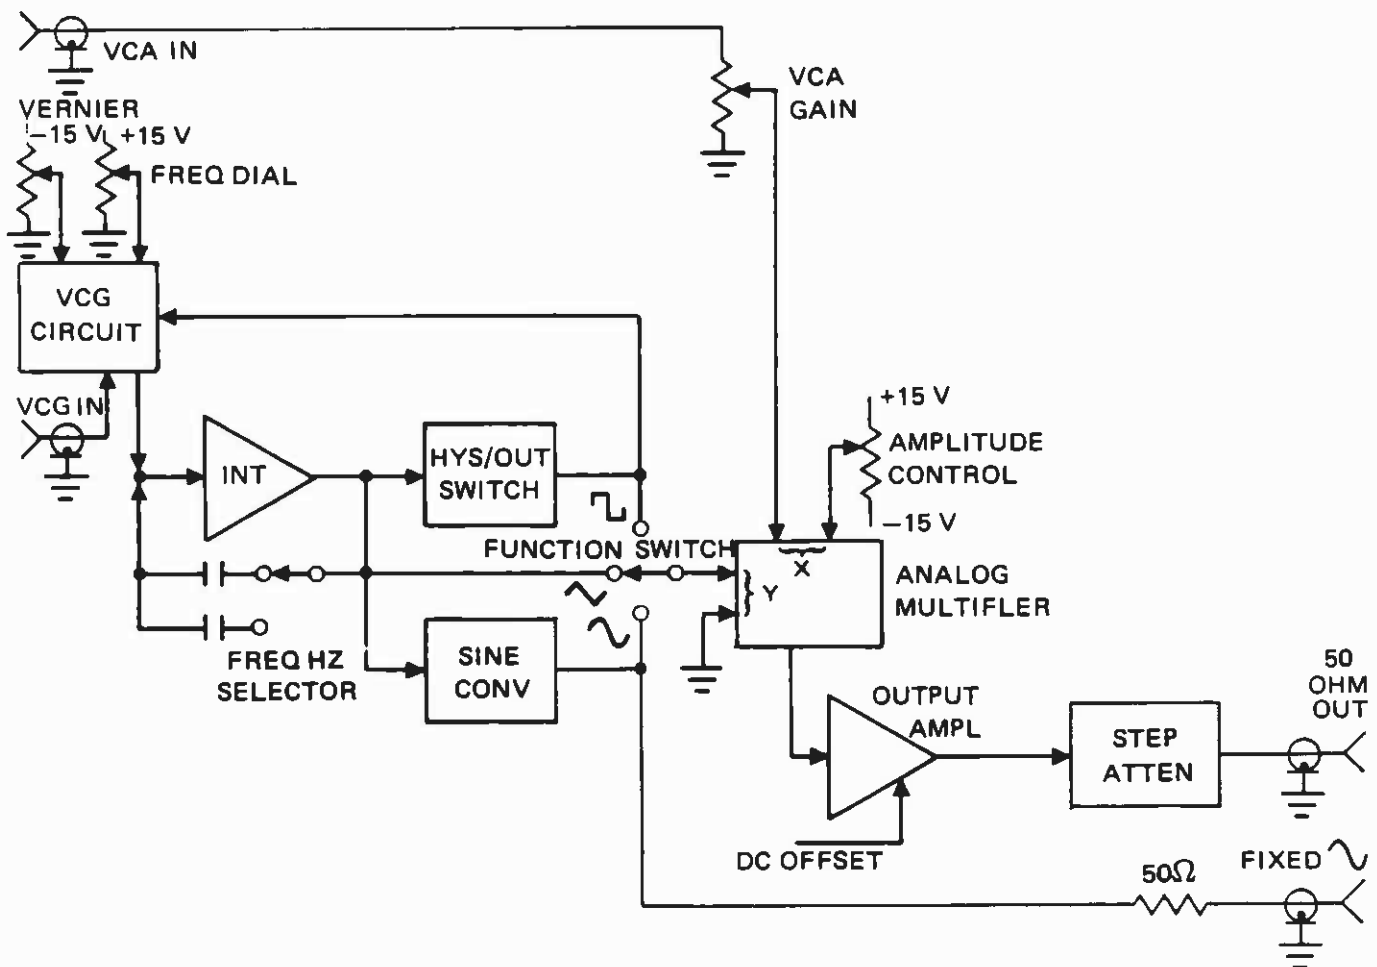


Figure 3-1. Functional Block Diagram.

current into the integrator is determined by four parameters which are summed in the VCG circuit: 1) the  $\pm 5$  volt square wave fed from the hysteresis switch, 2) the frequency dial voltage, 3) the frequency vernier voltage, and 4) the VCG analog voltage input.

The sine wave is produced by shaping the triangle wave. The triangle wave is fed into a shaping network composed of resistors and diodes. As the triangle wave voltage passes through zero, loading of the triangle wave is minimal and thus the slope is maximum. As the triangle wave voltage increases, diodes with current limiting resistors conduct, successively, causing the slope of the output to be less.

Since the diode break points are mathematically computed and fitted to the true sine shape, the resultant waveform is an almost pure sine wave. The circuitry is

completely symmetrical about ground, using a complementary pair of diodes on each break point. The sine wave produced by shaping is considerably less in amplitude than the triangle wave input and is thus amplified to be equal to the triangle wave.

The triangle wave output of the integrator, the sine wave output, and the square wave coupled through a divider are fed to the function selector switch, with a  $50\Omega$  fixed sine output brought out.

The function selector switch supplies the internal signal to one side of the analog multiplier. The other multiplier input is the joint signal of the VCA input through the VCA gain control and the amplitude control. This proportional signal is fed through the output amplifier into a precision attenuator to the  $50\Omega$  output.

# SECTION 4

## MAINTENANCE

### INTRODUCTION

This section provides instructions for testing, calibrating, troubleshooting, and repairing the Model 136. The instructions are concise and for the experienced electronics technician or field engineer. Wavetek maintains a factory-repair department for those customers not possessing the necessary personnel or test equipment to maintain the instrument. If an instrument is returned to the factory for calibration or repair, a detailed description of the specific problem should be attached to decrease the turnaround time. Test point and adjustment locations are illustrated in Section 5.

### RECOMMENDED TEST EQUIPMENT

Table 4-1 contains a list of recommended test equipment. Any test equipment having equivalent accuracies may be substituted for those listed.

Table 4-1. TEST EQUIPMENT

Name	Required Characteristics	Recommended Manufacturer	Model
Oscilloscope	To 30 MHz	Tektronix	544
Plug-In	Dual channel	Tektronix	1A1
Plug-In	Peak mV measuring capability	Tektronix	1A5
Distortion Analyzer	To 600 kHz	Hewlett Packard	334A
Spectrum Analyzer Display	To 50 MHz	Hewlett Packard	141S
IF Section		Hewlett Packard	8552A
RF Section		Hewlett Packard	8553L
Voltmeter	Millivolt dc measurement	1 mV Resolution	
Counter	To 10 MHz	0.1% of reading accuracy	

### CHECKOUT AND CALIBRATION

The following paragraphs provide complete sequential calibration procedures for the Model 136. Instrument checkout procedures are indicated by a checkmark (✓) following the procedure title. A quick checkout of the instrument can be performed by comparing the indicated parameters with the tolerances given in the Specifications of Section 1.

#### NOTE

*The entire calibration procedure must be read first to determine initial control settings and test equipment connections before attempting checkout.*

#### Preliminary Procedures

1. Set FREQ HZ selector to the X1K position, dial at 2.0, and VERNIER control maximum cw.
2. Allow one-half hour for warmup.

### REMOVAL OF DUST COVERS

To gain access for calibration or maintenance, proceed as follows:

- a. Remove power cord.
- b. Loosen the two knurled captive screws on the rear panel.
- c. Pull off the rear panel.
- d. Remove the cover.

### MAIN BOARD

#### Power Supply Regulation


1. Connect voltmeter between TP1 (common) and TP2 (+) on Main Board. Adjust R104 for +15 Vdc  $\pm 100$  mV.
2. Connect voltmeter between TP1 (common) and TP3 (-). Since the negative supply is referenced to the +15-volt supply, the voltmeter should indicate -15 Vdc  $\pm 100$  mV.

### Square Wave Amplitude Symmetry


1. Set function selector to  $\square$ .
2. Connect oscilloscope with 1A5 plug-in to coaxial-wire lug on function switch.
3. Adjust R121 until square-wave negative peak is equal in amplitude to positive peak  $\pm 5$  mV.

### Triangle Amplitude

1. Set frequency dial for 2.0 (X1K range) and function selector to  $\triangle$ .
2. Connect oscilloscope, with 1A5 plug-in, to red-wire lug on function switch.
3. Adjust R56 on main board for positive peak at +1.25 volts  $\pm 5$  mV (see sketch).

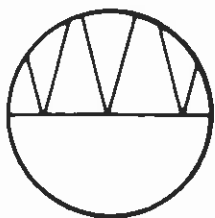

Negative Peak

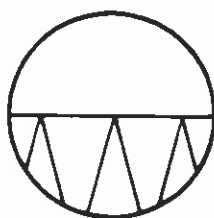

Positive Peak

4. Adjust R59 for negative peak at -1.25 volts  $\pm 5$  mV.

### First VCG Null ✓

1. Connect oscilloscope to 50 $\Omega$  OUT connector.
2. Set FREQ HZ selector to X1K. Set dial at 1/100 of full scale (.02).
3. Short and open VCG IN to signal ground (outside of BNC connector) while monitoring output frequency variation. Adjust R11 for minimum frequency change.

### Time Symmetry ✓

1. Connect unit and oscilloscope, with 1A1 plug-in set for alternate display, as shown in Figure 4-1.
2. Set FREQ HZ selector for X100K with VERNIER in full cw position ( $\square$  function).
3. Set frequency dial for 2 kHz on oscilloscope (1/100 of full scale).
4. Adjust R28 for time symmetry at 100:1 frequency ratio.
5. Turn VERNIER fully ccw and adjust R22 for bottom-of-dial time symmetry.
6. Repeat Steps 4 and 5, as necessary, for optimum symmetry.

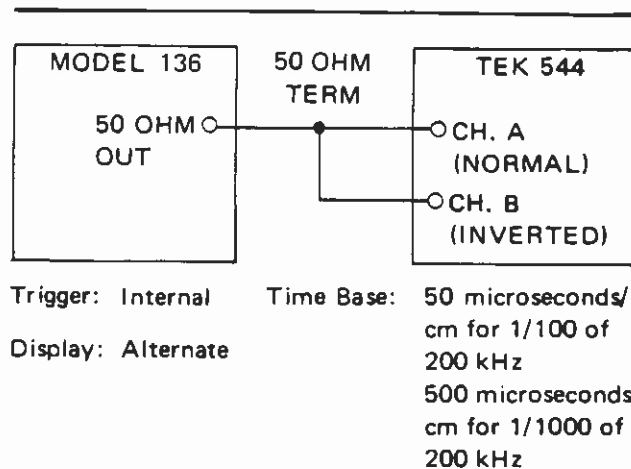


Figure 4-1.

### Time Symmetry Measurement for Test Setup

7. Check for waveform time symmetry at the .2 and 2 frequency-dial settings.
8. Check for 1000:1 frequency ratio @ X100K, dial full cw, vernier full ccw.
9. If necessary, adjust R8 for slightly >1000:1 ratio.

### Frequency Calibration

1. Connect counter to 50 $\Omega$  OUT connector with 50 $\Omega$  terminator.
2. Set FREQ HZ selector to X10K and VERNIER fully cw.
3. Align 2.0 dial mark with the dial indicator index and alternately switch from X10K to X1K range while adjusting R4 for a balanced error between the two positions.
4. Set FREQ HZ selector to X100K and dial at 2.0.
5. Adjust C16 to obtain 200.0 kHz on counter display.
6. Set FREQ HZ selector to X1M. Adjust C12 to obtain 2.00 MHz on counter display.
7. Dial alignment — No alignment is necessary if the dial is the push-on type. If it has a set screw, consult the dial alignment procedure at the end of this section.

### Sine, Distortion, Amplitude, and Balance ✓

1. Set FREQ HZ selector for X1K (VERNIER full cw), function selector to  $\sim$  and frequency dial at 2.0.
2. Connect oscilloscope to FIXED  $\sim$  output unterminated.
3. Adjust R133 to obtain 2.5 V p-p  $\pm 25$  mV output.
4. Adjust R128 to balance output.



5. Connect the unit, distortion analyzer, and oscilloscope as shown in Figure 4-2.


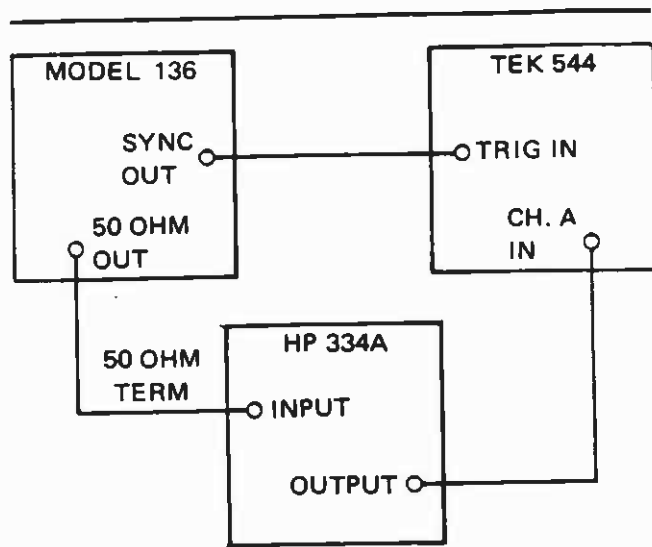


Figure 4-2. Distortion Analysis Test Setup

6. Adjust R126 and R127 for minimum sine distortion (see photo).

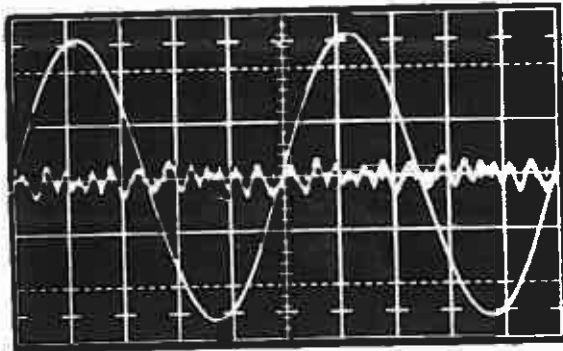

7. Set FREQ HZ selector by X10K.
8. Repeat Step 6 to obtain least distortion at both X1K and X10K ranges.
9. Repeat Steps 2, 3, and 4.
10. Connect spectrum analyzer and check sine distortion at 2 MHz.

## X-Y MULTIPLIER

### VCA Open Circuit Voltage

1. Set frequency to 200 Hz  $\pm 10\%$ .
2. Set function to  $\square$ .
3. Set OUTPUT ATTENUATOR to 0 dB.
4. Set VCA GAIN to maximum.
5. DC OFFSET control (rear panel) switched off.
6. Connect a single-ended scope input to the 50 $\Omega$  OUT

7. Short the VCA input.

### NOTE

*A 50 $\Omega$  line termination is an adequate short for this purpose.*

8. Set the AMPLITUDE CONTROL for an output signal level less than 50 mV peak-to-peak.

### NOTE

*It may be helpful to this step to reduce the dc offset in the output with potentiometer R8. This need only be done roughly as it will be set accurately later.*

9. Remove the short from the VCA input and adjust potentiometer R1 for the same signal level that was set before the short was removed.
10. Adjust potentiometer R1 to a value which allows the amplitude, shape, and phase of the signal to remain constant when the short is removed.

### NOTE

*To test the quality of this adjustment tune the AMPLITUDE CONTROL to null and turn the VCA GAIN potentiometer from maximum to off with the VCA IN open. The peak-to-peak amplitude of the null signal should change by less than 10 mV when this is done.*

### Input Compensation

1. Switch the function to  $\wedge$ .
2. Set an amplitude of 1 V p-p  $\pm 10\%$ .
3. Decrease amplitude until the straight sides of the triangle wave become parabolic.

### NOTE

*Avoid decreasing the amplitude in the first step so far that the waveform folds over into a null.*

4. Adjust potentiometer R7 for an unwarped triangle.

### NOTE

*It is not necessary to do this with great care at the initial higher amplitudes.*



5. Repeat the above two steps until the triangle is down to about 50 mV peak-to-peak.

#### NOTE

*It is normal for the 50 mV triangle to be fuzzy and somewhat distorted, but the potentiometer should be set for optimum linearity. Increase scope sensitivity as necessary to observe the signal.*

#### VCA Null

1. Set the function to  $\sim$ .
2. Set the VCA GAIN at maximum.
3. Tune the AMPLITUDE CONTROL carefully to null.

#### NOTE

*Less than 20 mV peak-to-peak is an adequate null.*

4. Connect a BNC cable between the FIXED  $\sim$  output and the VCA IN.
5. Adjust potentiometer R4 so the positive peaks of the output waveform are equal in amplitude.

#### NOTE

*The peaks will be about +3 V if the output is terminated in  $50\Omega$  or +6 V unterminated.*

The DC OFFSET control at the rear may be used to advantage in this step by centering the positive peaks on the scope with dc offset and increasing the vertical sensitivity. Adjacent peaks should differ from each other by less than 1/2% of the peak value.

#### Linearity

1. Check to see that the DC OFFSET potentiometer at the rear is switched out.
2. Connect the FIXED  $\sim$  output and the  $50\Omega$  OUT to the two inputs on a differential scope.

#### NOTE

*The  $50\Omega$  OUT should be terminated in a  $50\Omega$  load and the FIXED  $\sim$  output should not be terminated.*

3. Set the OUTPUT ATTENUATOR to -10 dB.

4. Set the function to  $\sim$ .

5. Tune the AMPLITUDE CONTROL for a null indication on the scope.

#### NOTE

*This should occur at about 1/2 amplitude on the negative side of the amplitude control. If it does not, check to see that the scope is set up for a differential measurement.*

6. Adjust potentiometer R6 and the AMPLITUDE CONTROL jointly for an improved null.

#### NOTE

*The null signal should be a low level sine wave of three times the frequency of the fundamental output of the generator.*

#### Output Damping

1. Connect the  $50\Omega$  OUT to a single-ended scope input.

#### NOTE

*The bandwidth of the scope should be at least 50 MHz. Connect the generator to the scope with a coaxial line about 1-1/2 feet long without a termination.*

2. Set the function to  $\square$ .
3. Set the OUTPUT ATTENUATOR to 0 dB.
4. Set the VCA GAIN to off.
5. Set the frequency to 1 MHz.
6. Set the amplitude to 20 V p-p unterminated.
7. Adjust C16 for proper damping.

#### NOTE

*Set for fastest rise time with no overshoot. Check for waveform quality at full scale output on each end of the amplitude control potentiometer.*

#### High Frequency Null Compensation

1. Set frequency to 1 MHz.
2. Set function to  $\square$ .
3. Tune AMPLITUDE CONTROL for null on the scope display.

4. Adjust potentiometer R5 for minimum amplitude of the disturbances at the square wave switching times.

**NOTE**

*Increase the scope sensitivity as necessary to observe the null.*

**Output Offset**

1. Check to see that the DC OFFSET potentiometer at the rear is switched OFF.
2. Set frequency to 200 Hz  $\pm 10\%$ .
3. Set AMPLITUDE CONTROL for a null signal.

**NOTE**

*A signal of less than 50 mV peak-to-peak is an adequate null for this step.*

4. Adjust potentiometer R8 for zero volts dc.

**NOTE**

*Ignore the signal voltage and set the dc component to less than 10 mV. This setting may be made with a dc voltmeter, but it is not essential.*

**TROUBLESHOOTING**

**Basic Techniques**

Troubleshooting the Model 136 requires no special techniques. Listed below are a few reminders of basic electronics fault isolation.

1. Check control settings carefully. Many times an incorrect control setting, or a knob that has loosened on its shaft, will cause a false indication of a malfunction.
2. Check associated equipment connections. Make sure that all connections are properly connected to the correct connector.
3. Visually check the interior of the instrument. Look for such indications as broken wires, charred components, loose leads, etc.
4. Perform the checkout procedure. Many out-of-specification indications can be corrected by performing specific calibration procedures.

**Troubleshooting Chart**

Table 4-2 provides a list of possible malfunction

symptoms, probable causes, prescribed remedies, test points at which measurements are made, and parameter tolerances at these points. To use the troubleshooting chart, locate the symptom listed in Column 1 and follow the corresponding procedures. Localize the fault to a specific stage by checking the parameters given for the major test points. Then check the dc operating voltages at the pins of solid-state devices. Check associated passive elements with a high input impedance ohmmeter (power off) before replacing a suspected semiconductor element.

**Main Generator Troubleshooting Hints**

The interactive nature of a closed loop presents a somewhat special problem when approached from a troubleshooting standpoint. The simplest way to reduce problem complexity is to open the loop, thereby removing the interaction. The basic units of the loop can then be tested individually. The following step-by-step procedure describes how this is done. (The generator loop is all contained on the main board.)

1. Set instrument controls for 10 V p-p, 2 kHz sine-wave output.
2. Check at coaxial-wire lug of function selector switch for a 2.5 V p-p square wave. If normal, check multiplier section or output attenuator.
3. Unsolder and lift the end of R51 (TP7). This is the output of the integrator and input to the hysteresis switch. The generator loop has now been opened.
4. Inject a 2.5 V p-p triangle waveform into the hysteresis switch, input lead (TP7).
5. Check at the coaxial-wire lug of the function selector switch for a 2.5 V p-p square wave at the injected frequency.
  - a. If present, hysteresis and output switches are okay. Proceed to Step 6.
  - b. If abnormal, check Q6-Q16 stages.
6. Vary frequency dial from ccw to cw while observing TP11 with a scope. Voltage at this point should remain at 0 volts throughout dial rotation. If a voltage variation is observed, check IC1 stage.
7. Vary frequency dial from ccw to cw while observing TP4. Voltage reading should vary from 0 to approximately -6 volts. If voltage does not vary, check IC2 stage and IC1 stage.
8. Vary frequency dial from ccw to cw while observing TP9. Voltage reading should remain at 0 volts. If voltage varies check IC3 stage.
9. Vary frequency dial from ccw to cw while observing TP10. Voltage should vary from 0

Table 4-2. TROUBLESHOOTING CHART

Symptom	Probable Cause	Corrective Procedures
No outputs at 50Ω OUT connector	Blown fuse	Replace F1 a. 1/4A–115 Vac b. 1/8A–230 Vac
	Power supply	Check TP1/TP2 for +15 V; TP1/TP3 for –15 V; TP1/TP5 for +6 V; TP1/TP6 for –6 V. Troubleshoot associated regulator.
	Output amplifier	Check at wiper (grn/wht wire) of function selector switch for waveform as selected by position of switch. a. If waveform is present, troubleshoot output amplifier. b. If no waveforms are present, refer to Main Generator Troubleshooting Hints.
No sine wave output	Sine amplifier	Check for 260 mV p-p sine wave at pin 4 of IC8. a. If present, check IC8 circuit. b. If not present, check A1 circuit. <b>NOTE:</b> Triangle wave must be present at pin 2 of A1 to obtain sinewave output.
No triangle, sine, or square wave.	Generator loop	Refer to Main Generator Troubleshooting Hints.
All waveforms low in amplitude.	Power amplifier	a. Check front-panel amplitude control. b. Perform balance adjustment for power amplifier.
	Power supply	Check for proper voltages.
Frequency out of tolerance	Power supply	Check for proper power supply voltages as stated above.
	Maladjustment	Perform calibration procedure.
Sine wave not in spec	Maladjustment	Perform Sine Distortion, Amplitude, and Balance adjustment.
	Sine converter	Check for 260 mV p-p sine wave at pin 4 of IC8. a. If normal, check sine amplifier IC8. b. If abnormal, check A1 circuit.
Time symmetry of waveforms not correct.	Maladjustment	Perform Time Symmetry and frequency adjustments.
Amplitude Control inoperative	Multiplier failure	Trouble shoot multiplier and output amplifier.
Output Attenuator inoperative	Atten. Switch failure	Check for proper output at amplifier.
DC Offset inoperative	Offset pot failure or broken wire	Check potentiometer action and inspect wiring.

- volts to approximately +6 volts. If voltage does not vary, check IC2 stage and IC3 stage.
10. Vary frequency dial from ccw to cw while observing TP8. Voltage reading should remain at 0 volts. If voltage varies, check IC4 and IC5 stages.
  11. Re-install R51.

### X-Y Multiplier Troubleshooting Hints

The multiplier section is so integrated with the output amplifier section that locating the problem part can be difficult. However, the output attenuator is quite independent so that a trouble in the attenuator does not appear to be somewhere else.

1. Pin 2 of IC1 is a summing node to the operational amplifier Q1 and Q2. It should be at 10 V DC at all times. If it is not, the fault may be either the operational amplifier or the IC.
2. Pin 14 of IC1 is a summing node to the operational amplifier Q3 and Q4. It should be at 10 V DC at all times. If it is not, the fault may be either the operational amplifier or the IC.
3. The emitters of Q1 and Q3 are the outputs of the two operational amplifiers just mentioned. A low amplitude copy of the proper signal should appear at both of these points with about 12 V of DC offset and in opposing phase. The output offset is accomplished by feeding unequal currents to the two summing nodes.
4. The transistors Q5 through Q12 comprise the output amplifier proper which is a bridge differential type. The two bases of Q5 should have identical AC and +10 V DC signals.

### Removal of Front and Back Panels

1. To gain access to any part mounted on bracket assembly behind rear panel, proceed as follows:
  - a. Remove rear panel and dust cover as described in Removal of Dust Cover.
  - b. Remove one heat-sink mounting screw.
  - c. Remove one transformer mounting-block screw from bottom of board.
  - d. Remove the two screws, lock washers, and hex-nuts holding two wafers of FREQ HZ switch to bracket assembly.
  - e. Remove four bracket-assembly retaining screws.
  - f. Carefully pull bracket assembly to rear to ob-

- tain work room. Enough slack is available in the wiring for all normal operations.
2. To remove the front panel, proceed as follows:
  - a. Remove rear panel and dust cover as described in Removal of Dust Cover.
  - b. Remove all knobs.
  - c. Disconnect BNC connections.
  - d. Remove ½ inch nut from frequency dial potentiometer shaft.
  - e. Pull light bulb from indicator lens.
  - f. Remove four front-panel retaining screws.
  - g. Carefully pull off front panel.

### REPLACEMENT OF SWITCH WAFERS AND POTENTIOMETERS

1. To replace FREQ HZ switch wafer C or D or the VERNIER potentiometer, proceed as follows:
  - a. Remove rear panel and dust cover as previously described.
  - b. Separate bracket assembly from chassis as previously described.
  - c. Tag and unsolder leads to part being replaced.
  - d. Pull defective part off shaft and repair or replace with recommended replacement part.
2. To replace FREQ HZ switch wafer A or B, proceed as follows:
  - a. Remove rear panel and dust cover as previously described.
  - b. Remove front panel as previously described.
  - c. Tag and unsolder wires to switch wafers A and B.
  - d. Unsolder wafer B PC-tabs from printed circuit board.
  - e. Lift switch shaft slightly to free PC-tabs, rotate switch shaft so wafers clear board parts, and pull shaft end free of rear-mounted wafers C and D.
  - f. Repair or replace defective part.
3. To repair or replace function selector wafers, proceed as follows:
  - a. Remove rear panel and dust cover as previously described.
  - b. Tag and unsolder wires to defective part.
  - c. Unsolder potentiometer PC-tabs, lift shaft slightly to free tabs, rotate switch shaft so wafers clear board parts, and pull switch/potentiometer assembly out of front panel hole.
  - d. Repair or replace defective part.

### REPLACEMENT OF SINE CONVERTER

1. Remove rear panel and dust cover as previously described.

2. Unsolder the five pins of sine converter A1 from top of the printed circuit board, using a solder syringe.
3. Lift assembly from bottom of the board; a thin pencil-type soldering iron can be used, if necessary, to apply temporary heat during removal.

#### FREQUENCY DIAL ALIGNMENT PROCEDURE

If the generator has a frequency dial secured to the main shaft by a set screw, the following procedure should be followed to align the dial:

1. Connect counter to  $50\Omega$  OUT connector with a  $50\Omega$  terminator.
2. Set FREQ HZ selector to X10K and VERNIER fully cw.
3. Set frequency dial potentiometer for 2 kHz on the counter display.
4. Align 0.2 dial mark with the dial indicator index and tighten set screw.
5. Align 2.0 dial mark with the dial indicator index and adjust R4 to obtain maximum dial accuracy on bottom four ranges.
6. Set FREQ HZ selector to X100K and dial fully cw.
7. Turn frequency VERNIER fully ccw.
8. Adjust R8 for  $150 \pm 20$  Hz on counter.
9. Check that generator continues to oscillate over the full range of the frequency VERNIER dial. If not, readjust R8.
10. Turn VERNIER fully cw (CAL) and set frequency dial to align 2.0 with index mark.
11. Adjust C16 to obtain 200.0 kHz on counter display.
12. Set FREQ HZ selector to X1M. Adjust C12 to obtain 2.00 MHz on counter display.

# SECTION 5

## DATA PACKAGE

### INTRODUCTION

This section contains data packages for the Model 136. Each data package is a quick-access document, containing maintenance data arranged for convenient viewing of the schematic diagram and all supporting data. Each data package includes a parts-location illustration; a replaceable parts list; voltage/waveform data; and a schematic diagram. Voltage and waveform data are provided on the diagrams at indicated test points as an aid to troubleshooting. Also, a list of manufacturers is included in this section.

### LIST OF MANUFACTURERS

American Radionics . . . American Radionics, Inc.  
Danbury, Connecticut

Amp . . . . . Amp, Inc.  
Harrisburg, Pennsylvania

ARCO . . . . . Arco Electronics  
Great Neck, L.I., New York

Boots . . . . . Boots-Townsend Aircraft  
Santa Ana, California

Corn . . . . . Corning Glass Works  
Bradford, Pennsylvania

CRL . . . . . Centralab  
Division of Globe-Union  
Milwaukee, Wisconsin

CTS . . . . . Chicago Telephone Systems  
Los Angeles, California

Electro . . . . . Electro Cube, Inc.  
San Gabriel, California

Elco . . . . . Elco Corp.  
Willow Grove, Pennsylvania

Elpac . . . . . Elpac Incorporated  
Fullerton, California

Erie . . . . . Erie Technological Products, Inc.  
Erie, Pennsylvania

Fair . . . . . Fairchild Semiconductor Corporation  
Palo Alto, California

IBM . . . . . IBM Industrial Products  
White Plains, New York

IMB . . . . . IMB Electronics Products  
Santa Fe Springs, California

IRC . . . . . IRC Inc.  
Philadelphia, Pennsylvania

Kings . . . . . Kings Electronic Co., Inc.  
Tickahoe, New York

Littelfuse . . . . . Littelfuse, Inc.  
Des Plaines, Illinois

Motorola . . . . . Motorola Semiconductor Products  
Phoenix, Arizona

Mura . . . . . Mura Corp.  
Great Neck, L.I., New York

RCA . . . . . RCA Semiconductor Division  
Somerville, New Jersey

Richey . . . . . Richey Electronics  
Nashville, Tennessee

Semtech . . . . . Semtech Corporation  
Newbury Park, California

HHSmith . . . . . Herman H. Smith, Inc.  
Brooklyn, New York

Sprague . . . . . Sprague Electric Company  
North Adams, Massachusetts

Stack . . . . . Stackpole Carbon Company  
St. Marys, Pennsylvania

Switchcraft . . . . . Switchcraft, Inc.  
Chicago, Illinois


TI . . . . . Texas Instruments, Inc.  
Dallas, Texas

USECO . . . . . USECO Inc.  
Mt. Vernon, New York


Wakefield . . . . . Wakefield Engineering, Inc.  
Wakefield, Massachusetts

Wavetek . . . . . Wavetek  
San Diego, California



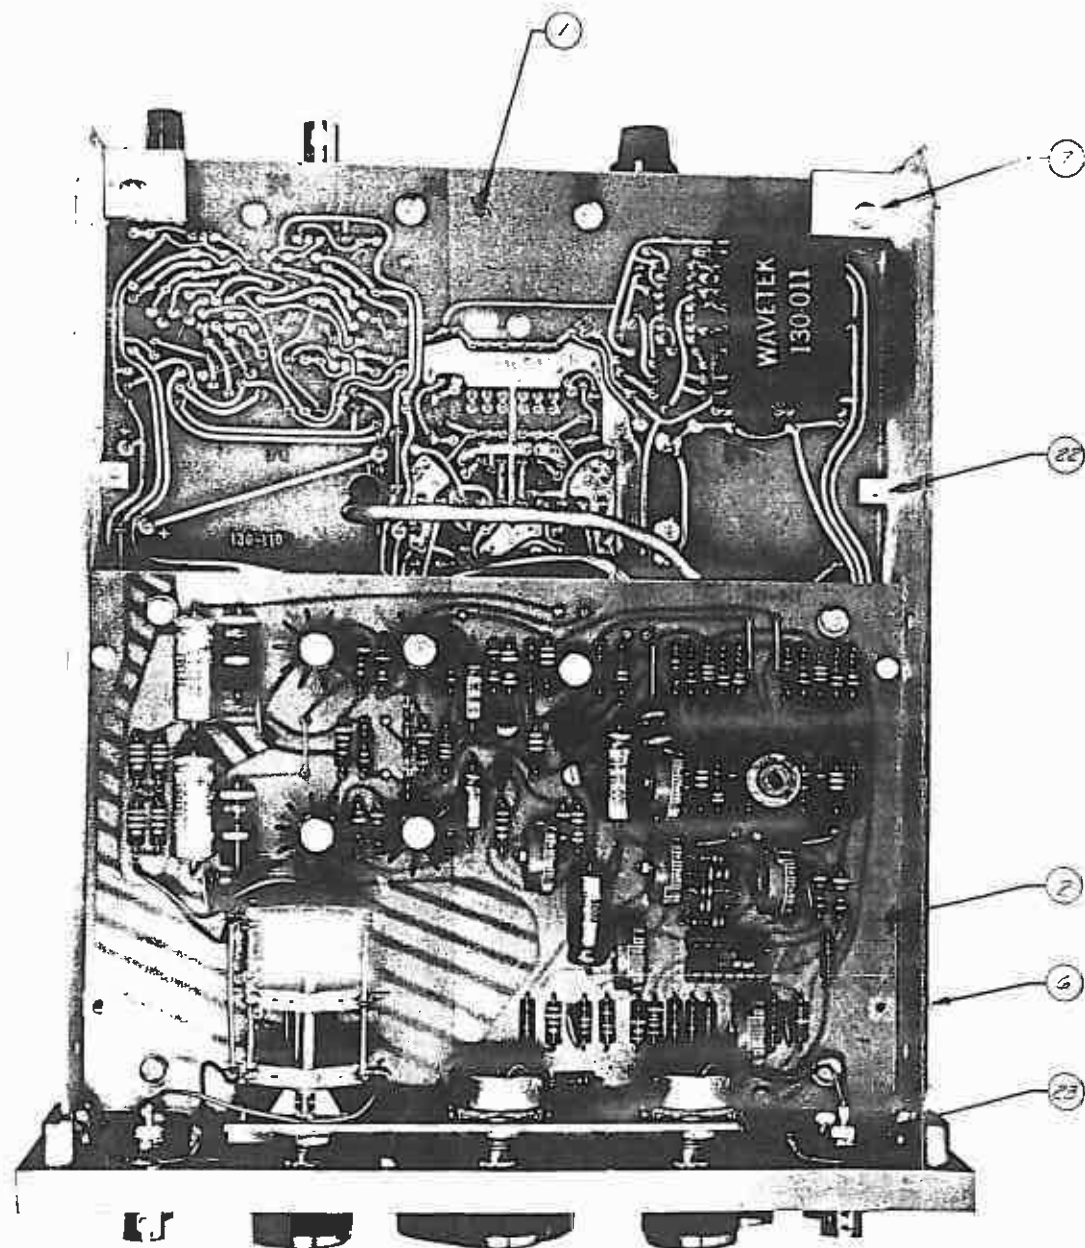


NOTE: ASTERISK (\*) INDICATES ITEM NOT SHOWN

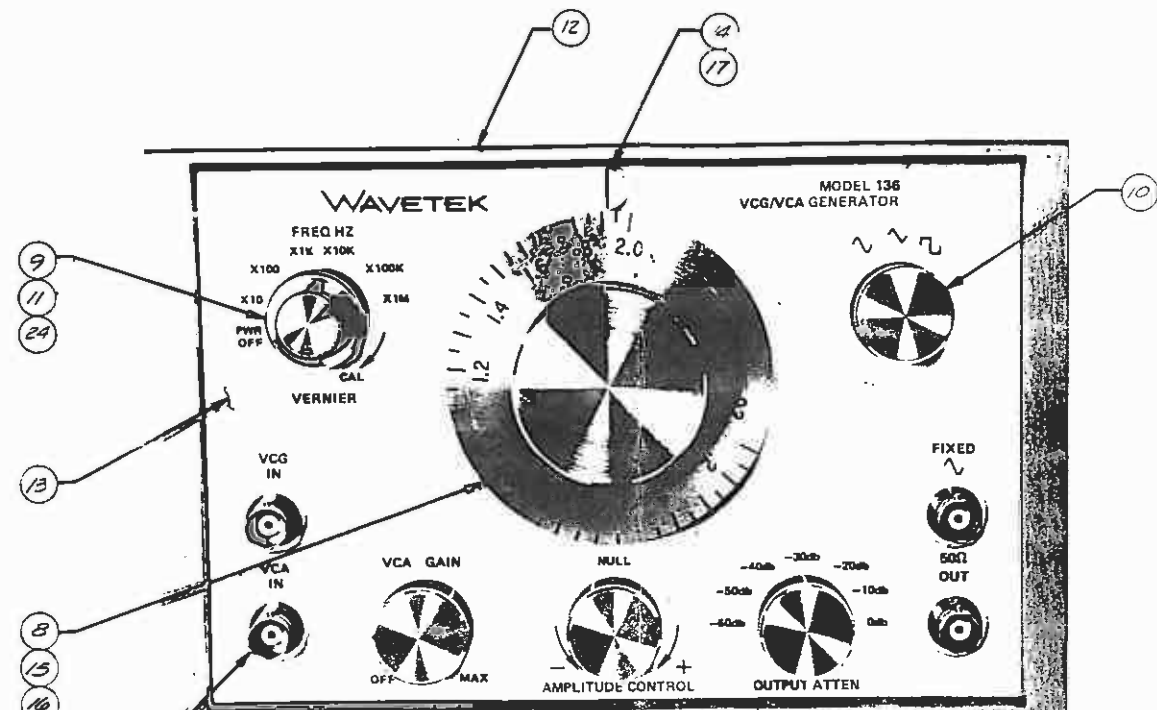


PARTS LIST				
ITEM	REF DES	DESCRIPTION	MPLE	QTY
1		MAIN BOARD	WAVETEK D136-010	1
2		X-Y MULTIPLE BD	D1-D13	1
3		CASTING, REAR	B134-300	1
4		COVER	C130-353	1
5		REAR PANEL	B1-D13	1
6		SIDE PLATE	C1-304G	2
7		MOUNTING BLOCK	A1-305	2
8		DIAL KNOB	B1-308B	1
9		CO-AXIAL KNOB	B1-302A	1
10		STANDARD KNOB	B1-314A	4
11		SMALL KNOB	B1-310A	1
12		CASTING MODIFICATION	B1-313-1	1
13		FRONT PANEL	B134-302-3	1
14		INDICATOR LENS	A1-D1-317	1
15		NULL	C130-353A	1
16		REPRODUCED SK	A136-31A	1
17		RETAINER	TEBAC 5905-31	1
18	J2436	BNC CONNECTOR	ELNE KC794	2
19		POWER CORD	BRUCE 1758-S	1
20		FASTENER	THOMSON CT494-632-4	6
21		CAPTIVE SCREW	DELTSCH 7900-10-B-2	2
22		CHASSIS FASTENER	WISCO 1591B	8
23		CLIP NUT	SHURECO SL210-00-2	4
24		BUSHING	THOMSON 418EE	5
25		SOLDER FASTENER	SMITH 2068	4
26		SOLDER LUG	SMITH 2068	6
27		BAIL KIT	WAVETEK B130-507	1
28		FASTENER	CARR PC47291	2

C	ECN 947	Rev	1/4/72
	B	ECN 424	Rev
	A	ECN 300	Rev
WAVETEK			
SAN DIEGO, CALIF.			
DATE 1/8/72			
BY 1/8/72			
CHASSIS ASSY			
MODEL NO. 136			
REV. NO. D136-000			
REV. C			
THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE USED OR REPRODUCED FOR ANY REASON WITHOUT WRITTEN AUTHORIZATION.			

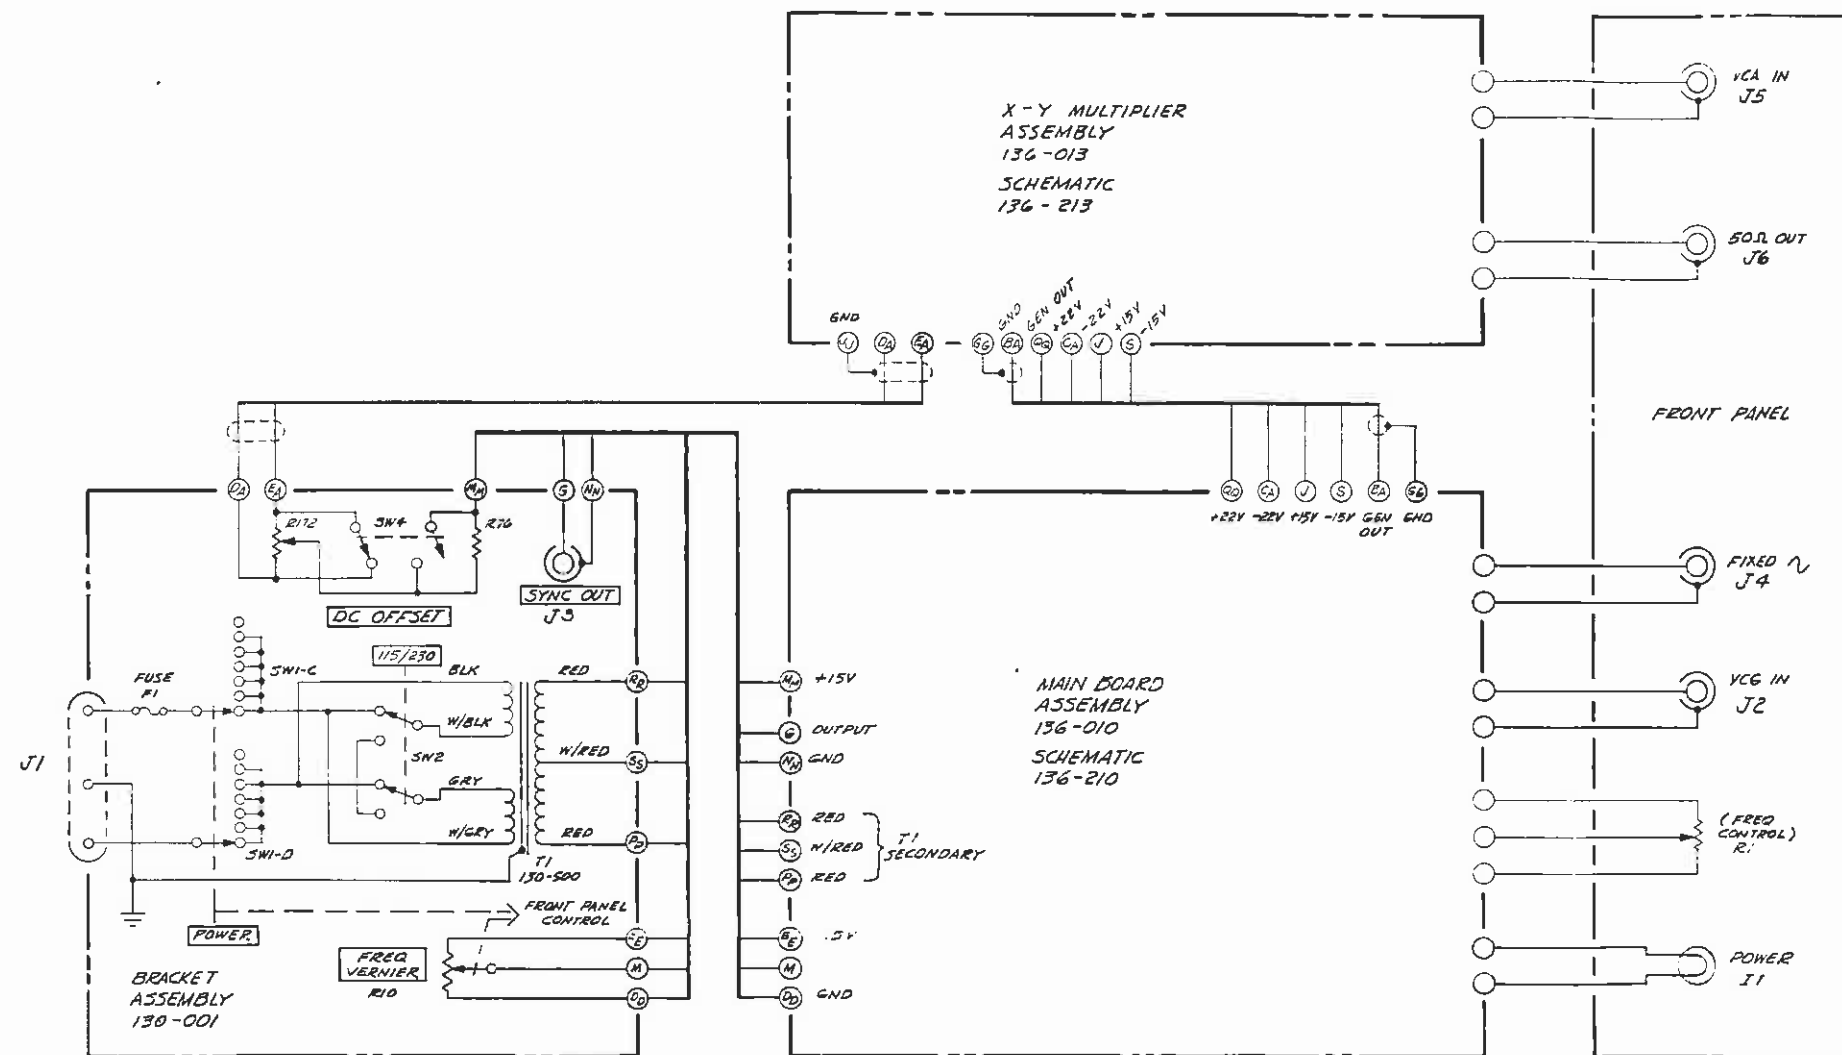

DATE	REV	BY	DATE	ADD
136-010	1	MAST	12/15/63	
136-010	2	MAST	12/15/63	
136-010	3	MAST	12/15/63	
136-010	4	MAST	12/15/63	
136-010	5	MAST	12/15/63	
136-010	6	MAST	12/15/63	
136-010	7	MAST	12/15/63	
136-010	8	MAST	12/15/63	
136-010	9	MAST	12/15/63	
136-010	10	MAST	12/15/63	
136-010	11	MAST	12/15/63	
136-010	12	MAST	12/15/63	
136-010	13	MAST	12/15/63	
136-010	14	MAST	12/15/63	
136-010	15	MAST	12/15/63	
136-010	16	MAST	12/15/63	
136-010	17	MAST	12/15/63	
136-010	18	MAST	12/15/63	
136-010	19	MAST	12/15/63	
136-010	20	MAST	12/15/63	
136-010	21	MAST	12/15/63	
136-010	22	MAST	12/15/63	
136-010	23	MAST	12/15/63	
136-010	24	MAST	12/15/63	
136-010	25	MAST	12/15/63	
136-010	26	MAST	12/15/63	
136-010	27	MAST	12/15/63	
136-010	28	MAST	12/15/63	
136-010	29	MAST	12/15/63	
136-010	30	MAST	12/15/63	
136-010	31	MAST	12/15/63	
136-010	32	MAST	12/15/63	
136-010	33	MAST	12/15/63	
136-010	34	MAST	12/15/63	
136-010	35	MAST	12/15/63	
136-010	36	MAST	12/15/63	
136-010	37	MAST	12/15/63	
136-010	38	MAST	12/15/63	
136-010	39	MAST	12/15/63	
136-010	40	MAST	12/15/63	
136-010	41	MAST	12/15/63	
136-010	42	MAST	12/15/63	
136-010	43	MAST	12/15/63	
136-010	44	MAST	12/15/63	
136-010	45	MAST	12/15/63	
136-010	46	MAST	12/15/63	
136-010	47	MAST	12/15/63	
136-010	48	MAST	12/15/63	
136-010	49	MAST	12/15/63	
136-010	50	MAST	12/15/63	
136-010	51	MAST	12/15/63	
136-010	52	MAST	12/15/63	
136-010	53	MAST	12/15/63	
136-010	54	MAST	12/15/63	
136-010	55	MAST	12/15/63	
136-010	56	MAST	12/15/63	
136-010	57	MAST	12/15/63	
136-010	58	MAST	12/15/63	
136-010	59	MAST	12/15/63	
136-010	60	MAST	12/15/63	
136-010	61	MAST	12/15/63	
136-010	62	MAST	12/15/63	
136-010	63	MAST	12/15/63	
136-010	64	MAST	12/15/63	
136-010	65	MAST	12/15/63	
136-010	66	MAST	12/15/63	
136-010	67	MAST	12/15/63	
136-010	68	MAST	12/15/63	
136-010	69	MAST	12/15/63	
136-010	70	MAST	12/15/63	
136-010	71	MAST	12/15/63	
136-010	72	MAST	12/15/63	
136-010	73	MAST	12/15/63	
136-010	74	MAST	12/15/63	
136-010	75	MAST	12/15/63	
136-010	76	MAST	12/15/63	
136-010	77	MAST	12/15/63	
136-010	78	MAST	12/15/63	
136-010	79	MAST	12/15/63	
136-010	80	MAST	12/15/63	
136-010	81	MAST	12/15/63	
136-010	82	MAST	12/15/63	
136-010	83	MAST	12/15/63	
136-010	84	MAST	12/15/63	
136-010	85	MAST	12/15/63	
136-010	86	MAST	12/15/63	
136-010	87	MAST	12/15/63	
136-010	88	MAST	12/15/63	
136-010	89	MAST	12/15/63	
136-010	90	MAST	12/15/63	
136-010	91	MAST	12/15/63	
136-010	92	MAST	12/15/63	
136-010	93	MAST	12/15/63	
136-010	94	MAST	12/15/63	
136-010	95	MAST	12/15/63	
136-010	96	MAST	12/15/63	
136-010	97	MAST	12/15/63	
136-010	98	MAST	12/15/63	
136-010	99	MAST	12/15/63	
136-010	100	MAST	12/15/63	



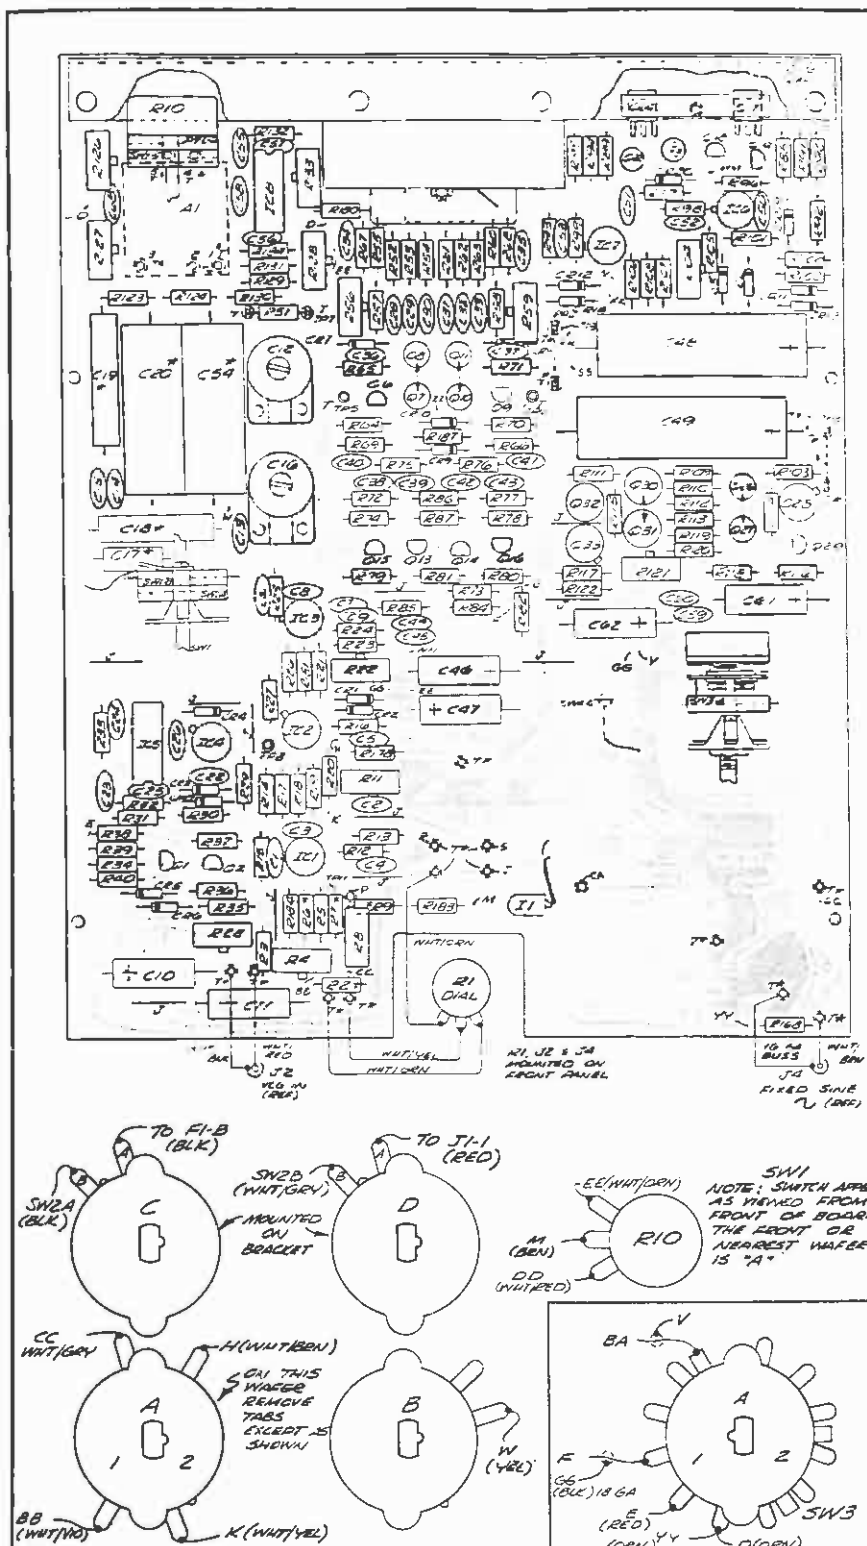

REF DES	DESCRIPTION	MFG	MFG NO.	QTY
<b>PARTS LIST</b>				
1	CAPACITORS			
2	C14 SILVER MICA 500V, 500P	ARGO	CHS 500P	1
3	C13 150P		680J	1
4	C28, C33 100P		101J	2
5	C29, C32 300P		301J	2
6	C30, C31 500P		501J	2
7	C15 1M, 100P		911J	1
8	C5, C22 CERM. CAP. 100V, 100P	CRL	CO-100	2
9	C23, C24 20P		-220	4
10	C38, C45 30P		-330	2
11	C39, C42 47P		-470	2
12	C68 150P		-151	1
13	C3, C8 220P		-221	4
14	C40, C41 600P		-681	2
15	C1, C6 50V, 100P	CK	502	4
16	C24, C25 20V, 10P	UK20-10A		16
17	C17 POLY 100V, 1M, 0.1M	WAVETEK	130-501-6	1
18	C18 1M			1
19	C19 MYLAR 200V, 1M, 1M			1
20	C20, C34 M. MYLAR, 10V, 5M			2
21	C10, C11, C46, C47, C48, C49 ELECTROLYTIC, 10V, 100P	SORCER	5000-075-100	1
22	C29, C32 35V, 100P		3500-075-100	2
23	C12, C16 VARIABLE 4.5-25P	EEIE	503-001-37A	2
24	C21 100V, 1M, 0.1M			1
25	C26 100V, 1M, 0.1M			1
26	C27 100V, 1M, 0.1M			1
27	C28, C33 100V, 1M, 0.1M			1
28	C34, C35 100V, 1M, 0.1M			1
29	C36, C37 100V, 1M, 0.1M			1
30	C38, C45 100V, 1M, 0.1M			1
31	C39, C42 100V, 1M, 0.1M			1
32	C40, C41 100V, 1M, 0.1M			1
33	C42, C43 100V, 1M, 0.1M			1
34	C44, C45 100V, 1M, 0.1M			1
35	C46, C47 100V, 1M, 0.1M			1
36	C48, C49 100V, 1M, 0.1M			1
37	C50, C51 100V, 1M, 0.1M			1
38	C52, C53 100V, 1M, 0.1M			1
39	C54, C55 100V, 1M, 0.1M			1
40	C56, C57 100V, 1M, 0.1M			1
41	C58, C59 100V, 1M, 0.1M			1
42	C60, C61 100V, 1M, 0.1M			1
43	C62, C63 100V, 1M, 0.1M			1
44	C64, C65 100V, 1M, 0.1M			1
45	C66, C67 100V, 1M, 0.1M			1
46	C68, C69 100V, 1M, 0.1M			1
47	C70, C71 100V, 1M, 0.1M			1
48	C72, C73 100V, 1M, 0.1M			1
49	C74, C75 100V, 1M, 0.1M			1
50	C76, C77 100V, 1M, 0.1M			1

REF DES	DESCRIPTION	MFG	MFG NO.	QTY
<b>PARTS LIST</b>				
51	RESISTORS			
52	R28, R29 100K	WAVETEK	130-501-6	2
53	R20, R21 100K			2
54	R22, R23 100K			2
55	R24, R25 100K			2
56	R26, R27 100K			2
57	R28, R29 100K			2
58	R30, R31 100K			2
59	R32, R33 100K			2
60	R34, R35 100K			2
61	R36, R37 100K			2
62	R38, R39 100K			2
63	R40, R41 100K			2
64	R42, R43 100K			2
65	R44, R45 100K			2
66	R46, R47 100K			2
67	R48, R49 100K			2
68	R50, R51 100K			2
69	R52, R53 100K			2
70	R54, R55 100K			2
71	R56, R57 100K			2
72	R58, R59 100K			2
73	R60, R61 100K			2
74	R62, R63 100K			2
75	R64, R65 100K			2
76	R66, R67 100K			2
77	R68, R69 100K			2
78	R70, R71 100K			2
79	R72, R73 100K			2
80	R74, R75 100K			2
81	R76, R77 100K			2
82	R78, R79 100K			2
83	R80, R81 100K			2
84	R82, R83 100K			2
85	R84, R85 100K			2
86	R86, R87 100K			2
87	R88, R89 100K			2
88	R90, R91 100K			2
89	R92, R93 100K			2
90	R94, R95 100K			2
91	R96, R97 100K			2
92	R98, R99 100K			2
93	R100, R101 100K			2
94	R102, R103 100K			2
95	R104, R105 100K			2
96	R106, R107 100K			2
97	R108, R109 100K			2
98	R110, R111 100K			2
99	R112, R113 100K			2
100	R114, R115 100K			2
101	R116, R117 100K			2
102	R118, R119 100K			2
103	R120, R121 100K			2
104	R122, R123 100K			2
105	R124, R125 100K			2
106	R126, R127 100K			2
107	R128, R129 100K			2
108	R130, R131 100K			2
109	R132, R133 100K			2
110	R134, R135 100K			2
111	R136, R137 100K			2
112	R138, R139 100K			2
113	R140, R141 100K			2


REF DES	DESCRIPTION	MFG	MFG NO.	QTY
<b>PARTS LIST</b>				
114	TRANSISTORS			
115	Q17 MODIFIED PEE 130-36	T.I.	71P29	1
116	Q18		71P30	1
117	Q19	2N12905	2N12905	1
118	Q20	2N3299	2N3299	1
119	Q21	2N3646	2N3646	4
120	Q22	2N3638	2N3638	5
121	Q23	MPS 3640	MOTOROLA MPS3640	3
122	Q24	2N3903	2N3903	1
123	Q25	2N3905	2N3905	1
124	Q26	2N3905	2N3905	1
125	Q27, Q28	MATCHED PAIRS (11)	2N3646	4
126	Q29, Q30	(19)	2N3638	2
127	Q31, Q32	(10)	MOTOROLA MPS3640	2
128	Q33			
129	Q34			
130	Q35			
131	Q36			
132	Q37			
133	Q38			
134	Q39			
135	Q40			
136	Q41			
137	Q42			
138	Q43			
139	Q44			
140	Q45			
141	Q46			
142	Q47			
143	Q48			
144	Q49			
145	Q50			
146	Q51			
147	Q52			
148	Q53			
149	Q54			
150	Q55			
151	Q56			
152	Q57			
153	Q58			
154	Q59			
155	Q60			
156	Q61			
157	Q62			
158	Q63			
159	Q64			
160	Q65			
161	Q66			
162	Q67			
163	Q68			
164	Q69			
165	Q70			
166	Q71			
167	Q72			
168	Q73			
169	Q74			
170	Q75			
171	Q76			
172	Q77			
173	Q78			
174	Q79			
175	Q80			
176	Q81			
177	Q82			
178	Q83			
179	Q84			
180	Q85			
181	Q86			
182	Q87			
183	Q88			
184	Q89			
185	Q90			
186	Q91			
187	Q92			
188	Q93			
189	Q94			
190	Q95			
191	Q96			
192	Q97			
193	Q98			
194	Q99			
195	Q100			

NOTES: UNLESS OTHERWISE SPECIFIED  
 1. T\* INDICATES TERMINAL ON CIRCUIT SIDE  
 2. T INDICATES TERMINAL ON COMPONENT SIDE

F	ECN 446	NG	4/10/70
E	ECN 341	NG	4/10/70
D	ECN 334	NG	4/10/70
C	ECN 300	NG	4/10/70
B	ECN 300	NG	4/10/70
A	ECN 223	B	4/10/70
WAVETEK			
rev	ecn	by	date
1	1	1	1
ASSY			
MAIN BOARD			
model no.	136	eng no.	010-010
136	010-010	1	1
this document contains proprietary information and design rights belonging to WAVETEK and may not be used or reproduced for any reason except calibration, operation and maintenance without written authorization			






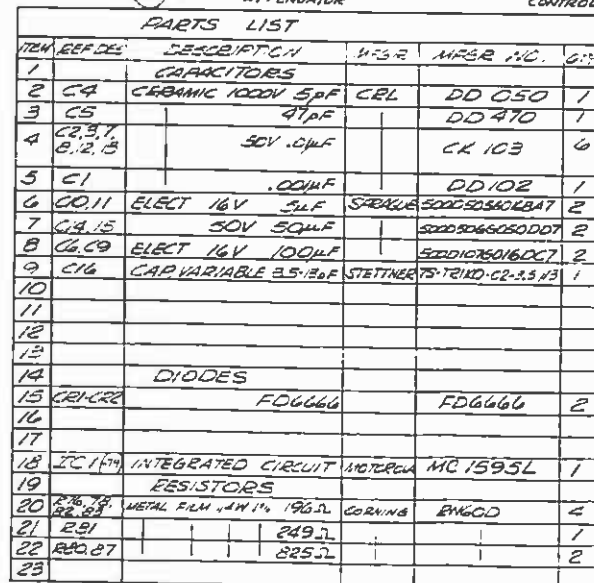

PARTS LIST					
ITEM	REF DES	DESCRIPTION	MFGR	MFGR NO.	QTY
24		RESISTORS			
25	R5B,65 71	CARBON 1/2W, 5% 39Ω	SPACOR	RC205F390J	
26	R64,70	2N 475		RC426F470J	2
27	R54,45	1/2W 100Ω		RC206F100J	2
28	R32,43	10% 220Ω		221K	2
29	R86,23 62	680Ω		681K	3
30	R52	820Ω		821K	1
31	R11,6, 14,15, 62	1K		102K	5
32	R53	15K		152K	1
33	R31,33,44	2.2K		222K	3
34	R57	3K		302K	1
35	R56	3.3K		332K	1
36	R19	82K		883K	1
37	R63,69	4.7K		472K	2
38	R60	7.5K		752K	1
39	R20	8.2K		822K	1
40	R16	10K		103K	1
41	R35,47, 59	12K		123K	3
42	R61	33K		333K	1

PARTS LIST					
QTY	REF DES	DESCRIPTION	MFR	MFG NO.	QTY
RESISTORS					
43	R13	CARBON 1/4W 10% 36K	STAGNA	RECGR363K	1
45	R22		47K		473K 1
46	R24		100K		104K 1
47	R10		1M		105K 1
48	R66,68		5K47J		487J 2
49	R29,30		47J		470J 2
50	R85	METAL FILM 1/4W 1% 4.9J	COONING	ENGOD	1
51	R79		7.5J		1
52	R52,54		1.5K		2
53	R25		1.62K		1
54	R24,46		2K		2
55	R37,48		2.37K		2
56	R17,18		2.49K		2
57	R28,69		2.64K		2
58	R41,42, 51, 53		4.99K		4
59	R27,28		6.19K		2
60	R39,40		8.25K		2
61	R72, 73, 74, 75		49.9J		4
62	R21		1.78K		1
63	R77		27.4J		1
64	R36		59.9J		1
65	R24,88		59J		2
66		POTENTIOMETERS			
67	R5		1K	CRL	BA1603-803 1
68	R2,3		10K	CTS	136-81 2
69					
70	R14,7,6		100K	CRL	BA1603-819 4
71	R8		2.5K	A/B	FR252M 1
72					
73		TRANSISTORS			
74	Q9,12	-71 (Q12 ONLY)	2N2905	FAIRCHILD	2N2905 2
75	Q10,11	-72 (Q10 ONLY)	3299		3299 2
76	Q7,8		3640		3640 2
77	Q3,6,1		3646		3646 3
78	Q2,4,5		TD101	SPANGLE	TD101 3
79					
80		SOLDER LUG			
81	SW6	SWITCH ASSY	CTS	136-3W1B	1
82		CIRCUIT BOARD	HAITEK	136-113 D	1
83		HEAT RADIATOR	HAITEK	11520	4
84		TRANSIPAD	ROSS	10160	4
85	Q, A	AMP PINS	AMP	21168-2	5
86		CONTROL BRACKET	HAITEK	133-305	3
87		SHIELD	HAITEK	136-302	1
88		SHIELD STANDOFF	USECO	15308-14	4

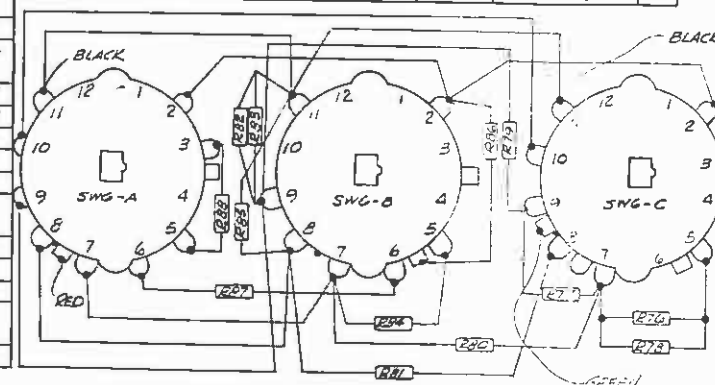

NOTES: UNLESS OTHERWISE SPECIFIED

1. SWITCH WAFERS A THRU C ARE SHOWN AS VIEWED FROM THE FRONT OF THE INSTRUMENT.
2. LETTER DESIGNATIONS ARE INTERCONNECTION POINTS.
3. REFER TO SCHEMATIC DWG 136-213 FOR TERMINATION POINTS.
4. AMP PINS, INDICATED BY "A" ARE INSTALLED FROM CIRCUIT SIDE.

5. FAIRCHILD M4795C MAY BE USED AS AN INTERCHANGEABLE ALTERNATE FOR MOTOROLA MC 1595L

[illegible]

