

DLM4000 Series Mixed Signal Oscilloscope

U S E R ' S M A N U A L

Thank you for purchasing the DLM4000 Series Mixed Signal Oscilloscope. This User's Manual explains how to use the DLM4000. To ensure correct use, please read this manual thoroughly before beginning operation.

Keep this manual in a safe place for quick reference in the event that a question arises.

List of Manuals

The following manuals, including this one, are provided as manuals for the DLM4000 series. Please read all manuals.

Manual Title	Manual No.	Description
DLM4000 Series Mixed Signal Oscilloscope Features Guide	IM DLM4038-01EN	The manual explains all the DLM4000 features other than the communication interface features.
DLM4000 Series Mixed Signal Oscilloscope User's Manual	IM DLM4038-02EN	This manual. The manual explains how to operate the DLM4000.
DLM4000 Series Mixed Signal Oscilloscope Getting Started Guide	IM DLM4038-03EN	Provided as a printed manual. This guide explains the handling precautions, basic operations, and specifications of the DLM4000.
DLM4000 Series Mixed Signal Oscilloscope Communication Interface User's Manual	IM DLM4038-17EN	The manual explains the DLM4000 communication interface features and instructions on how to use them.

PDF files of all the manuals above are included in the accompanying manual CD.

Notes

- The contents of this manual are subject to change without prior notice as a result of continuing improvements to the instrument's performance and functionality. The figures given in this manual may differ from those that actually appear on your screen.
- Every effort has been made in the preparation of this manual to ensure the accuracy of its contents. However, should you have any questions or find any errors, please contact your nearest YOKOGAWA dealer.
- Copying or reproducing all or any part of the contents of this manual without the permission of YOKOGAWA is strictly prohibited.
- The TCP/IP software of this product and the documents concerning it have been developed/created by YOKOGAWA based on the BSD Networking Software, Release 1 that has been licensed from the Regents of the University of California.

Trademarks

- Microsoft, Internet Explorer, MS-DOS, Windows, Windows NT, Windows XP, and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Adobe, Acrobat, and PostScript are either registered trademarks or trademarks of Adobe Systems Incorporated.
- DLM is a registered trademark of Yokogawa Electric Corporation.
- In this manual, the TM and ® symbols do not accompany their respective registered trademark or trademark names.
- Other company and product names are registered trademarks or trademarks of their respective holders.

Revisions

- 1st Edition: November 2012
- 2nd Edition: June 2013

Conventions Used in This Manual

Notes

The notes and cautions in this manual are categorized using the following symbols.



Improper handling or use can lead to injury to the user or damage to the instrument. This symbol appears on the instrument to indicate that the user must refer to the user's manual for special instructions. The same symbol appears in the corresponding place in the user's manual to identify those instructions. In the user's manual, the symbol is used in conjunction with the word "WARNING" or "CAUTION."

WARNING

Calls attention to actions or conditions that could cause serious or fatal injury to the user, and precautions that can be taken to prevent such occurrences.

CAUTION

Calls attention to actions or conditions that could cause light injury to the user or cause damage to the instrument or user's data, and precautions that can be taken to prevent such occurrences.

Note

Calls attention to information that is important for the proper operation of the software.

Unit


k	Denotes 1000. Example: 100 kS/s (sample rate)
K	Denotes 1024. Example: 720 KB (file size)

Key and Jog Shuttle Operations

Key Operations

How to Use Setup Menus That Appear When Keys Are Pressed

The operation after you press a key varies depending on the key that you press.

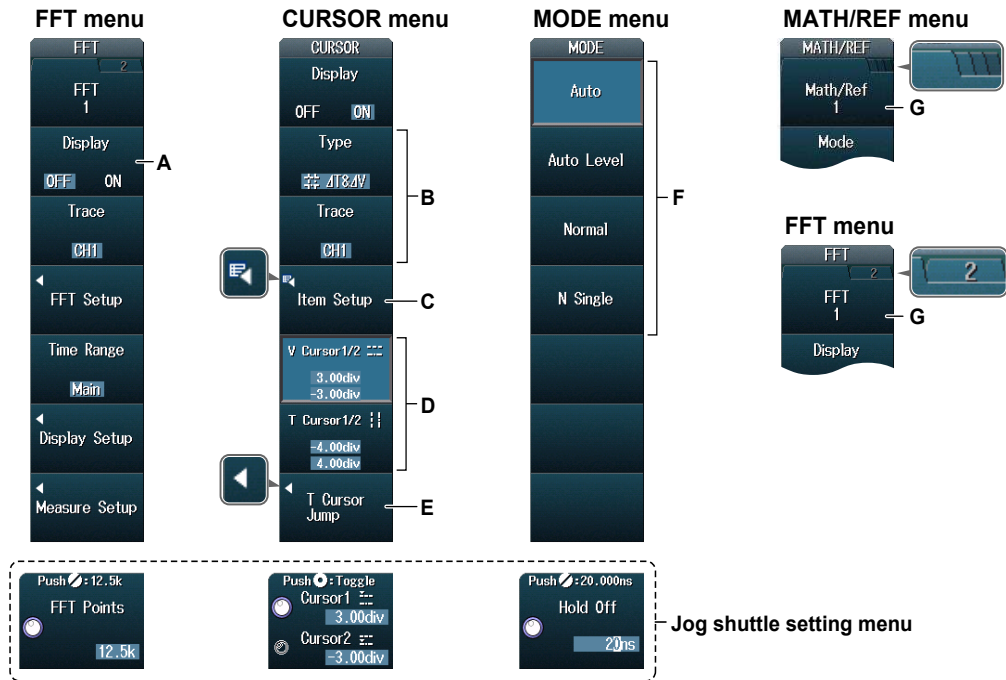

A: The selection switches each time you press the soft key.

B: A selection menu appears when you press the soft key.

Press the soft key that corresponds to the appropriate setting.

C: A dialog box or the keyboard appears when you press the soft key.

Use the jog shuttle and the SET key (●) to configure the settings.

D: Pressing the soft key selects the item that you can control using the jog shuttle. The jog shuttle setup menu, which appears at the bottom end of the setup menu, shows the selected item.

E: A related setup menu appears when you press the soft key.

F: Pressing a soft key selects the corresponding option in the soft key menu.

G: Selects which item to configure when configuring a feature that consists of multiple items that operate with different settings, such as the Math1 to Math4 and FFT1 and FFT2 computation features.

How to Display the Setup Menus That Are Written in Purple below the Keys

In the explanations in this manual, “**SHIFT+key name** (written in purple)” is used to indicate the following operation.

1. Press the **SHIFT** key. The SHIFT key illuminates to indicate that the keys are shifted.

Now you can select the setup menus written in purple below the keys.

2. Press the key that you want to display the setup menu of.



ESC Key Operation

If you press ESC when a setup menu or available options are displayed, the screen returns to the menu level above the current one. If you press ESC when the highest level menu is displayed, the setup menu disappears. However, the jog shuttle setup menu remains displayed. If you press the ESC key again, the jog shuttle setup menu disappears.

RESET Key (⌫) Operation

If you press RESET when you are using the jog shuttle to set a value or select an item, the setting is reset to its default value (depending on the operating state of the DLM4000, the setting may not be reset).

**SET Key (⏵) Operations**

The operation varies as indicated below depending on what you are setting.

- **When There Are Two Values to Set in the Jog Shuttle Setup Menu**

The setting that the jog shuttle sets switches each time you press the SET key.

- **When the Jog Shuttle and SET Key Marks (⏵+⏵) Are Displayed in the Setup Menu**


Press SET to confirm the selected item.

- **When You Are Setting a Value**


Moving the SET key up or down increases or decreases the value.
Moving the SET key to the left and right changes which digit to set.

- **When Selecting the Item to Set**

Moving the SET key up, down, left, and right moves the cursor.

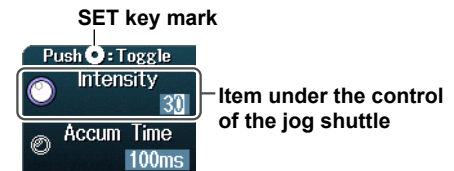**How to Enter Values in Setup Dialog Boxes**

1. Use the keys to display the appropriate setup dialog box.
2. Turn the **jog shuttle**, or move the **SET key (⏵)** up, down, left, or right to move the cursor to the appropriate item.
3. Press the **SET key (⏵)**. The operation varies depending on the selected item.

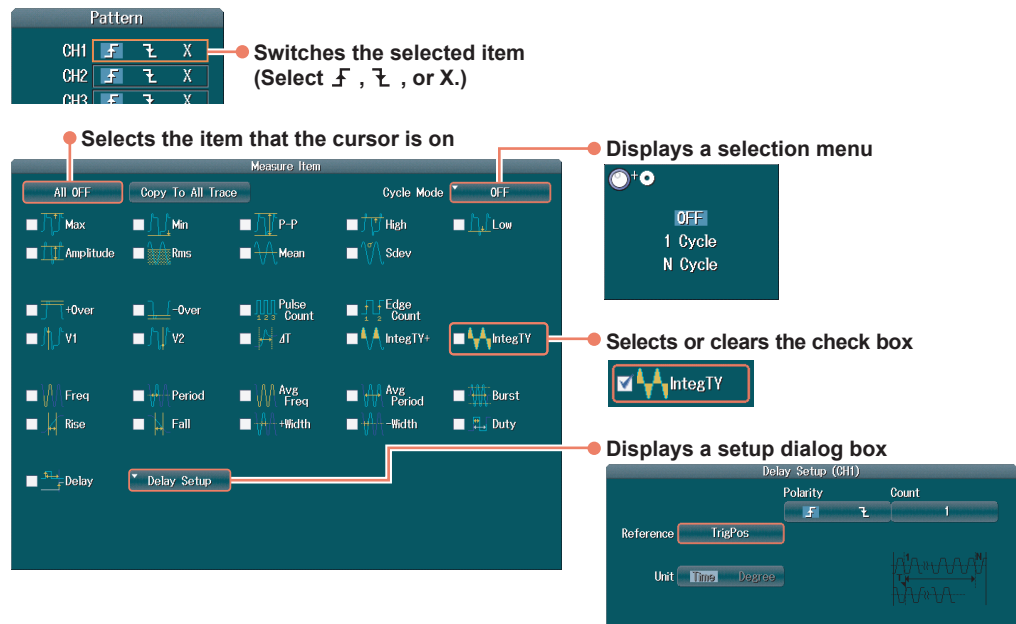**How to Clear Setup Dialog Boxes**

Press **ESC** to clear the setup dialog box from the screen.

Entering Values and Strings

Entering Values

Using Dedicated Knobs

You can use the following dedicated knobs to enter values directly.

- **◆** POSITION knob (VERTICAL)
- **◀** POSITION **▶** knob (HORIZONTAL)
- SCALE knob (VERTICAL)
- TIME/DIV knob
- LEVEL knob (TRIGGER)
- ZOOM magnification knob

Using the Jog Shuttle


Select the appropriate item using the soft keys, and change the value using the jog shuttle and the SET key. This manual sometimes describes this operation simply as “using the jog shuttle.”

Note

Some items that you can set using the jog shuttle are reset to their default values when you press the RESET key.


Entering Character Strings

Use the keyboard that appears on the screen to enter character strings such as file names and comments. Use the jog shuttle and the SET key to operate the keyboard and enter a character string.

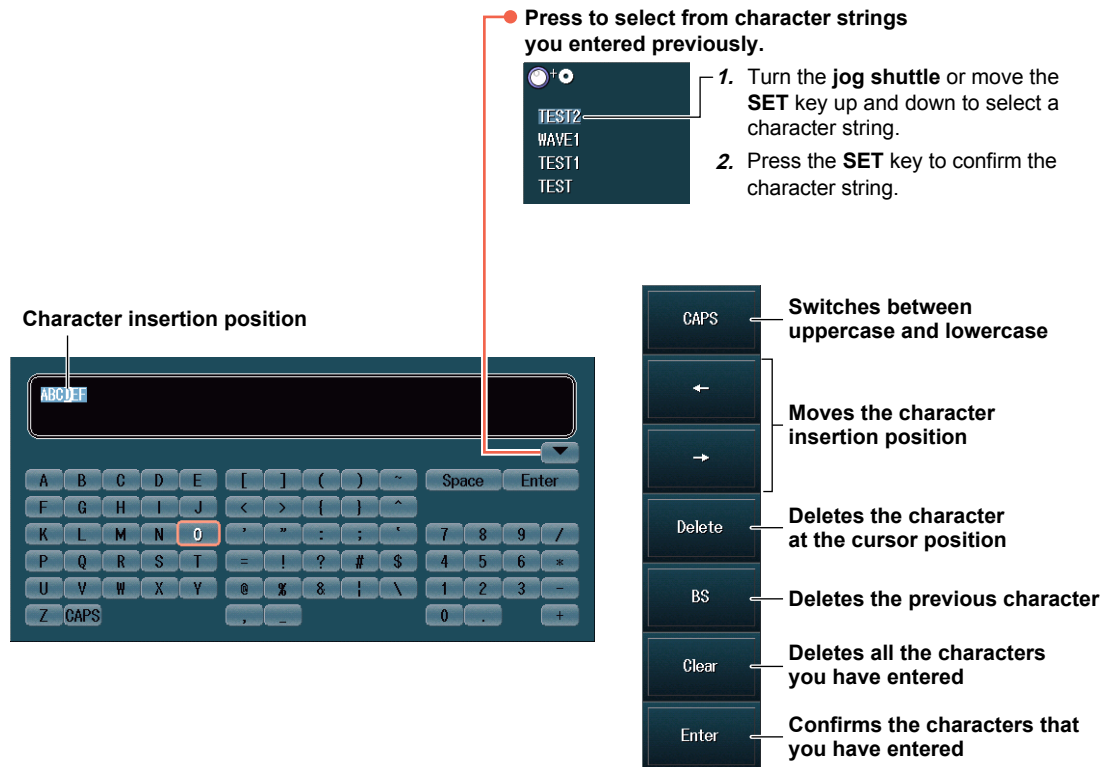

How to Operate the Keyboard

1. After bringing up the keyboard, use the **jog shuttle** to move the cursor to the character that you want to enter. You can also move the **SET** key up, down, left, and right to move the cursor.
2. Press the **SET** key to enter the selected character.
 - If a character string has already been entered, use the **arrow** soft keys to move the cursor to the position you want to insert characters into.
 - Use the **CAPS** soft key to switch between uppercase and lowercase.
 - Use the **Delete** soft key to delete the character at the cursor.
 - Use the **BS** soft key to delete the previous character.
 - Use the **Clear** soft key to clear all the entered characters.
3. Repeat steps 1 and 2 to enter all of the characters in the string.

Select  on the keyboard to display a list of character strings that you have entered previously. Use the **jog shuttle** to select a character string, and press **SET** to enter the selected character string.
4. Press the **Enter** soft key, or move the cursor to Enter on the keyboard, and press **SET** to confirm the character string and clear the keyboard.

Note

- @ cannot be entered consecutively.
- File names are not case-sensitive. Comments are case-sensitive. The following file names cannot be used due to MS-DOS limitations:
AUX, CON, PRN, NUL, CLOCK, COM1 to COM9, and LPT1 to LPT9

Contents

List of Manuals.....	i
Conventions Used in This Manual	iii
Key and Jog Shuttle Operations	iv
Entering Values and Strings.....	vi

Chapter 1 Vertical and Horizontal Control

⚠ 1.1	Setting the Vertical Axis for Analog Signals	1-1
1.2	Setting the Vertical Axis for 8-bit LOGIC(L)	1-6
1.3	Setting the Vertical Axis for 16-bit LOGIC(A B) (Option)	1-11
1.4	All ON/All OFF	1-17
1.5	Copying Channel Information (Analog Signals)	1-18
1.6	Configuring the Horizontal Axis (Time axis).....	1-19

Chapter 2 Triggering

2.1	Setting the Trigger Mode and Trigger Hold-off Time.....	2-1
2.2	Setting the Trigger Position and Trigger Delay	2-2

Edge Trigger

2.3	Triggering on an Edge Trigger.....	2-3
-----	------------------------------------	-----

Enhanced Trigger

2.4	Triggering on the OR of Multiple Edge Triggers	2-5
2.5	Triggering on Edge Conditions	2-7
2.6	Triggering on State Conditions	2-9
2.7	Triggering on Pulse Width	2-11
2.8	Triggering on State Width.....	2-14
2.9	Triggering on FlexRay Bus Signals (Option)	2-17
2.10	Triggering on CAN Bus Signals (Option).....	2-20
2.11	Triggering on LIN Bus Signals (Option).....	2-24
2.12	Triggering on UART Signals (Option).....	2-28
2.13	Triggering on I ² C Bus Signals (Option)	2-31
2.14	Triggering on SPI Bus Signals (Option).....	2-36
2.15	Triggering on User-Defined Serial Bus Signals	2-40
2.16	Triggering on a TV Trigger.....	2-43

B Trigger

2.17	Triggering on Combination Triggers (B TRIG).....	2-47
------	--	------

Forced Trigger

2.18	Forcing the DLM4000 to Trigger (FORCE TRIG)	2-50
------	---	------

Action and GO/NO-GO

2.19	Setting the Action-On-Trigger Function	2-51
2.20	Performing GO/NO-GO Determination.....	2-52

Chapter 3 Waveform Acquisition

3.1	Setting Conditions for Waveform Acquisition.....	3-1
3.2	Starting and Stopping Waveform Acquisition	3-2

Chapter 4	Display	
4.1	Setting Display Conditions	4-1
4.2	Using the Accumulate Feature	4-3
4.3	Using the Snapshot and Clear Trace Features	4-4
4.4	Adjusting the Backlight	4-5
Chapter 5	XY Display	
5.1	Displaying XY Waveforms	5-1
5.2	Performing Cursor Measurements and Area Calculations	5-2
Chapter 6	Computed and Reference Waveforms	
6.1	Setting the Computation Mode	6-1
6.2	Performing Addition, Subtraction, and Multiplication	6-2
6.3	Performing Filter Functions	6-3
6.4	Performing Integration	6-5
6.5	Performing Count Computations	6-6
6.6	Setting Labels, Units, and Scaling	6-8
6.7	Loading Reference Waveforms	6-9
6.8	Performing User-Defined Computations (Option)	6-10
Chapter 7	FFT	
7.1	Displaying FFT Waveforms	7-1
7.2	Measuring FFT Waveforms	7-3
Chapter 8	Cursor Measurements	
8.1	ΔT Cursor Measurements	8-1
8.2	ΔV Cursor Measurements	8-2
8.3	$\Delta T \& \Delta V$ Cursor Measurements	8-3
8.4	Marker Cursor Measurements (Marker)	8-4
8.5	Angle Cursor Measurements (Degree)	8-5
Chapter 9	Automated Measurement of Waveform Parameters	
9.1	Automatically Measuring Waveform Parameters	9-1
9.2	Processing Statistics on Automatically Measured Values	9-6
9.3	Measuring Enhanced Parameters	9-10
Chapter 10	Zooming in on Waveforms	
10.1	Zooming in on or out from Waveforms	10-1
10.2	Zooming in on or out from Waveforms in the Vertical Direction	10-3
Chapter 11	Searching Waveforms	
11.1	Searching for Edges	11-1
11.2	Using Conditions to Limit Edge Searches	11-4
11.3	Searching for State Conditions	11-7
11.4	Searching for Pulse Width	11-10
11.5	Searching for State Width	11-13

Chapter 12 Analyzing and Searching Serial Bus Signals

12.1	Analyzing and Searching FlexRay Bus Signals	12-1
12.2	Analyzing and Searching CAN Bus Signals	12-5
12.3	Analyzing and Searching LIN Bus Signals	12-9
12.4	Analyzing and Searching UART Signals	12-13
12.5	Analyzing and Searching I ² C Bus Signals.....	12-19
12.6	Analyzing and Searching SPI Bus Signals.....	12-25
12.7	Analyzing and Searching User-Defined Serial Bus Signals	12-31
12.8	Displaying Multiple Lists	12-35

Chapter 13 Waveform Histogram Display

13.1	Displaying Waveform Histograms	13-1
13.2	Measuring Histogram Parameters.....	13-2


Chapter 14 Power Supply Analysis (Power Analysis & Power Measurement; Option)

14.1	Setting the Power Supply Analysis Type or Power Measurement.....	14-1
14.2	Analyzing Switching Loss.....	14-2
14.3	Analyzing the Safe Operating Area	14-5
14.4	Analyzing Harmonics.....	14-6
14.5	Measuring the Joule Integral	14-8
14.6	Measuring Power	14-10

Chapter 15 Displaying and Searching History Waveforms

15.1	Displaying History Waveforms.....	15-1
15.2	Searching History Waveforms	15-5

Chapter 16 Printing and Saving Screen Captures

 16.1	Loading Roll Paper Into the Built-In Printer (Option)	16-1
16.2	Printing on the Built-in Printer (Option).....	16-3
16.3	Printing on a Network Printer (Option)	16-4
16.4	Saving Screen Captures to Files.....	16-5
16.5	Printing and Saving Screen Capture Data to Multiple Output Destinations at the Same Time	16-6

Chapter 17 Saving and Loading Data

17.1	Connecting USB Storage Media to the USB Port	17-1
17.2	Saving Waveform Data.....	17-2
17.3	Saving Setup Data	17-5
17.4	Saving Other Types of Data	17-6
17.5	Loading Waveform Data.....	17-9
17.6	Loading Setup Data.....	17-10
17.7	Loading Other Types of Data.....	17-11
17.8	Performing File Operations	17-13

Chapter 18 Ethernet Communication

18.1	Connecting the DLM4000 to a Network	18-1
18.2	Configuring TCP/IP Settings.....	18-3
18.3	Accessing the DLM4000 from a PC (FTP Server).....	18-4
18.4	Monitoring the DLM4000 Display from a PC (Web Server).....	18-5
18.5	Configuring Mail Transmission (SMTP Client Function).....	18-7
18.6	Connecting to a Network Drive.....	18-8
18.7	Configuring a Network Printer	18-9
18.8	Using SNTP to Set the Date and Time	18-10

Chapter 19 Other Operations

19.1	Turning the Click Sound On and Off and Changing the Menu Language, Message Language, and USB Keyboard Language	19-1
19.2	Using the DLM4000 as a USB Storage Device	19-2
19.3	Viewing Setup Information (Overview)	19-3
19.4	Setting the Measured Value Font Size and Whether to Use the Default Settings of Legacy Models	19-4

Chapter 20 Troubleshooting, Maintenance, and Inspection

20.1	Messages and Corrective Actions	20-1
20.2	Carrying Out Self-Tests (Selftest)	20-6
20.3	Viewing System Information (Overview).....	20-8
20.4	Formatting Internal Memory	20-9

Index

1.1 Setting the Vertical Axis for Analog Signals

This section explains the following settings (which are related to the vertical axis for analog signals).

CH menu

- Turning the waveform display on and off
- Input coupling
- Probe
- Turning the inverted waveform display on and off
- Linear scaling
- Label display
- Bandwidth limit
- Offset

UTILITY Preference menu

- Turning offset cancelling on and off

SCALE knob

- Vertical scale


◆ POSITION knob

- Vertical position

► [“Vertical Axis \(Analog Signal\)” in the Features Guide](#)

CH Menu

Press a key from **CH1** to **CH8** to display the following menu.

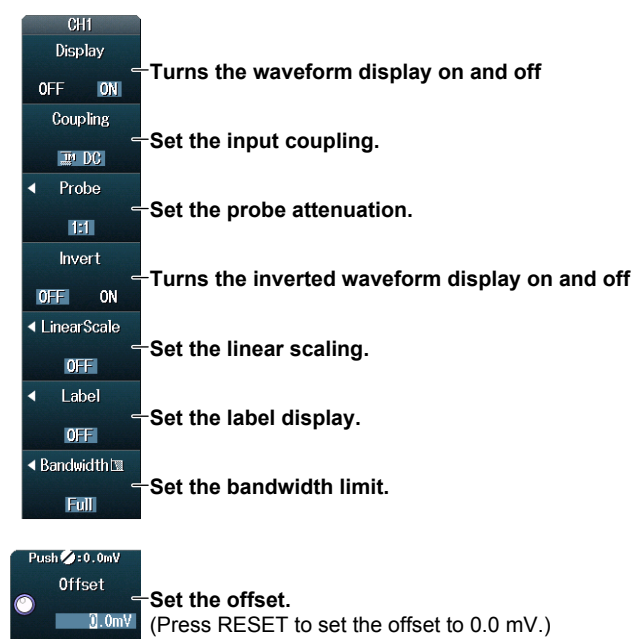

Note


- Channel keys (from CH1 to CH8) whose waveforms are displayed are illuminated. You can press channel keys that are not illuminated to turn their waveform displays on. You can press channel keys that are illuminated turn their waveform displays off.
- When interleave mode (see section 3.1 for details) is on, you cannot display the waveforms for CH2, CH4, CH6, or CH8.

Setting the Input Coupling (Coupling)

- AC: Only displays the waveform produced from the input signal's AC component.
- DC: Displays the waveform produced from both the DC and AC components of the input signal through 1 M Ω .
- DC50: Displays the waveform produced from both the DC and AC components of the input signal through 50 M Ω .
- GND: Displays the ground level.

Input Coupling Settings and Frequency Response

The frequency responses when the DLM4000 is set to AC, DC, or DC50 are shown below. Please note that when set to AC, the DLM4000 does not acquire low frequency signals or low frequency components, as seen in the following figure.

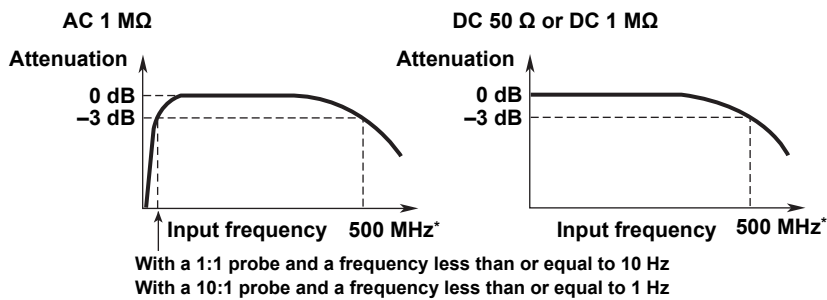

* The high-frequency -3 dB point differs according to the model and the voltage scale settings.




CAUTION

- The maximum input voltage for 1 M Ω input is 150 Vrms when the frequency is less than or equal to 1 kHz. Applying a greater voltage may damage the input section. For frequencies above 1 kHz, damage may occur even if the voltage is less than 150 Vrms.
- The maximum input voltage for 50 Ω input is 5 Vrms or 10 Vpeak. Applying a voltage greater than either of these limits may damage the input section.

Setting the Probe (Probe)

Press the **Probe** soft key to display the following menu.

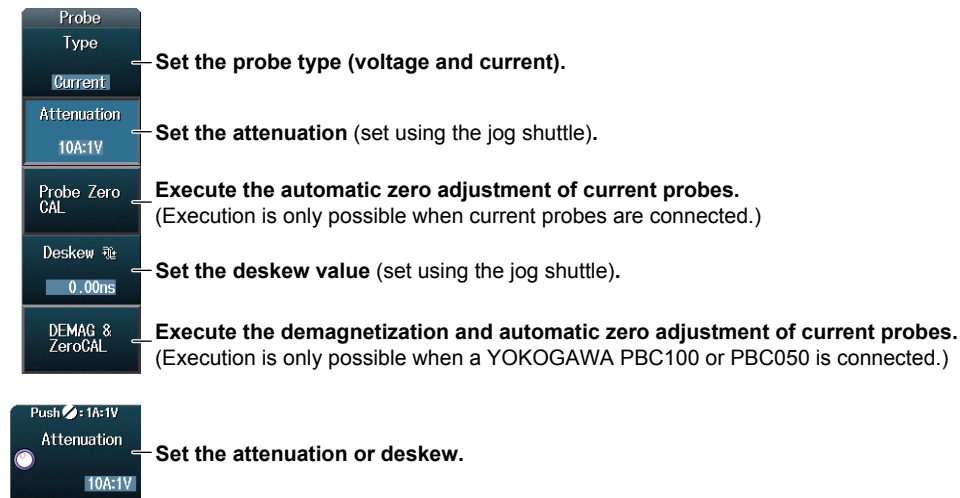


Note

When a current probe with a YOKOGAWA probe interface (such as a the PBC100 or PBC050 probe) is connected to the DLM4000, you can execute demagnetization and automatic zero adjustment from the DLM4000.

When you demagnetize and perform automatic zero adjustment on a current probe, do not clamp the conductor. If you demagnetize a current probe while the conductor is clamped, the current that flows through the conductor as a result of demagnetization may damage components of the EUT circuitry.

Setting the Linear Scaling (LinearScale)

Press the **LinearScale** soft key to display the following menu.

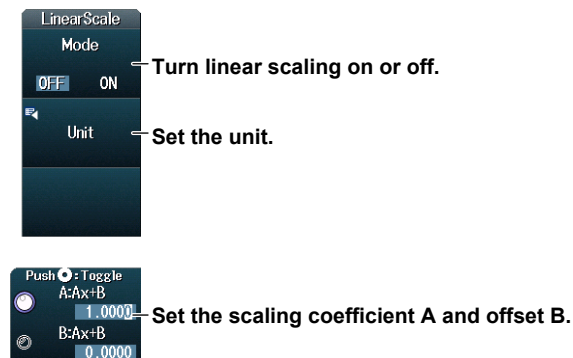

Setting the Label Display (Label)

Press the **Label** soft key to display the following menu.




Setting the Bandwidth (Bandwidth)

Press the **Bandwidth** soft key. The jog shuttle now controls the Bandwidth setting.



UTILITY Preference Menu

Press **UTILITY** and then press the **Preference** soft key to display the following menu.

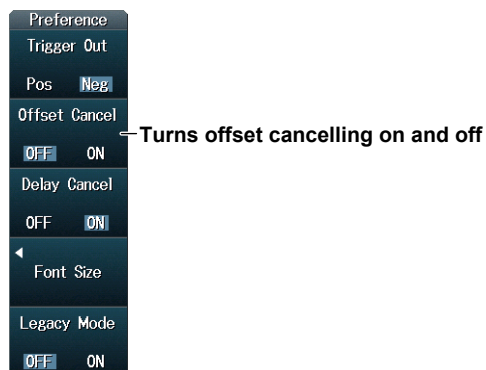

Turning Offset Cancelling On or Off (Offset Cancel)

ON: The offset is subtracted from the input signal when cursor measurements, computations, and other operations are performed.

OFF: The offset is not subtracted from the input signal when cursor measurements, computations, and other operations are performed.

Setting the Vertical Scale (SCALE knob)

1. Press a key from **CH1** to **CH8** to select the channel that you want to set the vertical scale for.
 - The CH key that you press illuminates brightly.
 - The LED between the **SCALE** and **POSITION** knobs illuminates in the color assigned to the selected channel (the color around the CH key).
2. Turn the **SCALE** knob to set the vertical scale.

If you push the **SCALE** knob, the **FINE** indicator illuminates, and you can set the vertical scale with higher resolution.


Displays the vertical scale and input impedance for each channel



Setting the Waveform Vertical Position (◆ POSITION knob)

1. Press a key from **CH1** to **CH8** to select the channel that you want to set the vertical position for.
 - The CH key that you press illuminates brightly.
 - The LED between the **SCALE** and ◆ **POSITION** knobs illuminates in the color assigned to the selected channel (the color around the CH key).
2. Turn the ◆ **POSITION** knob to set the vertical position.

Push the ◆ **POSITION** knob to set the vertical position to 0.00 div.

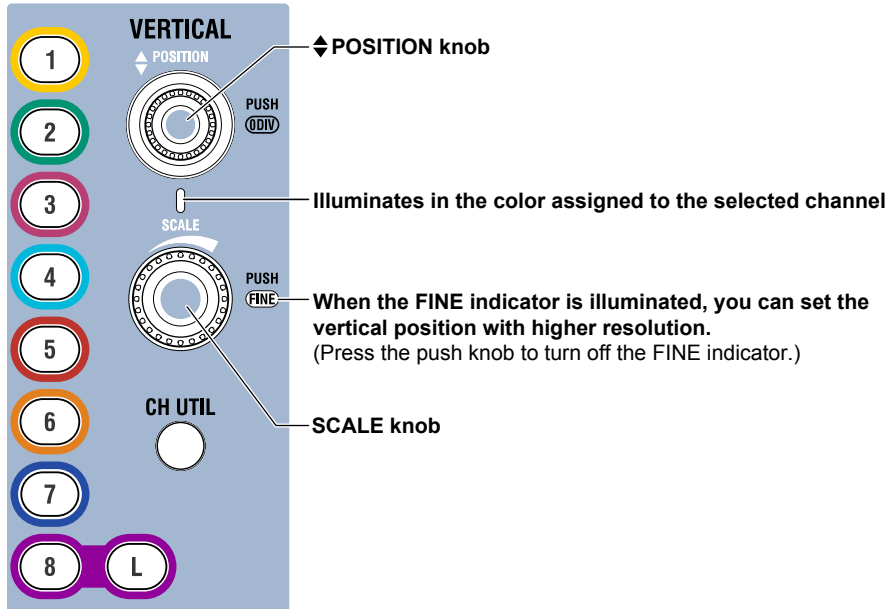

Note

Preview

- If you change the vertical scale when waveform acquisition is stopped, the waveform is displayed expanded or reduced vertically.
- If you change the vertical position when waveform acquisition is stopped, only the waveform display position changes.

1.2 Setting the Vertical Axis for 8-bit LOGIC(L)

This section explains the following settings (which are related to the vertical axis for LOGIC(L) signals).

LOGIC(L) menu

- Turning the LOGIC(L) display on and off
- Turning the display on and off and setting the label, threshold level, and noise rejection for each bit
- Turning the bus display on and off and setting the bus bit assignments, labels, and format
- Turning the state display on and off and setting the clock source; clock source polarity, detection level, and hysteresis; and the state assignment
- Bit and bus display order
- Deskewing

SCALE knob

- Display size


◆ POSITION knob

- Vertical position

► [“Vertical Axis \(Logic Signal\)” in the Features Guide](#)

LOGIC(L) Menu

Press L to display the following menu.

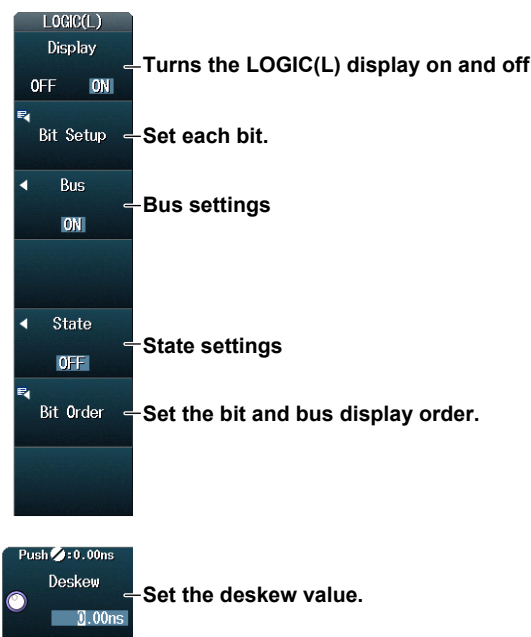

Note


- If you press the L key when it is not illuminated, the key illuminates, and the LOGIC(L) display turns on. Logic signal waveforms are displayed in the CH8 waveform display area.
- If you press the L key when it is illuminated, the key turns off, and the LOGIC(L) display turns off.

Bit Settings (Bit Setup)

Press the **Bit Setup** soft key to display the following screen.

For Logic Probes Other Than the 701989

Turns the display on or off for all bits

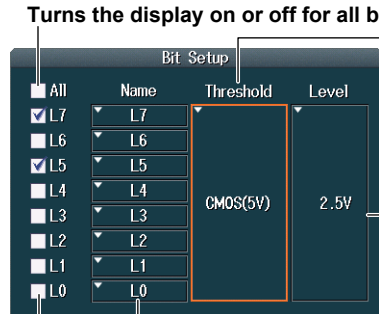

Set the threshold level preset (CMOS(5 V), CMOS(3.3 V), CMOS(2.5 V), CMOS(1.8 V), ECL, Userdef).
Selecting a preset automatically sets the threshold level.


Set the threshold level.
If you change the automatically specified value, the preset setting changes to "Userdef."

Turn the display on or off and set the label for each bit.

For the 701989 Logic Probe

- When the Threshold Type is All

Turns the display on or off for all bits

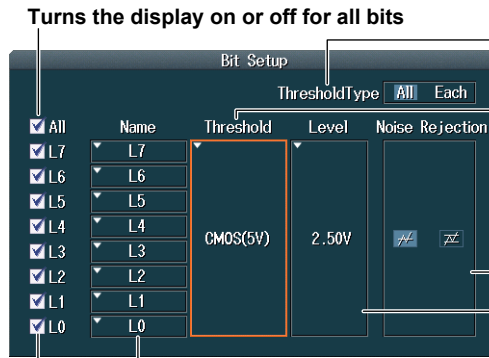

The threshold type is set to All.

Set the threshold level preset (CMOS(5 V), CMOS(3.3 V), CMOS(2.5 V), CMOS(1.8 V), ECL, Userdef).
Selecting a preset automatically sets the threshold level.


Set the noise rejection (\overline{A} , \overline{Z}).

Set the threshold level.
If you change the automatically specified value, the preset setting changes to "Userdef."

Turn the display on or off and set the label for each bit.

- When the Threshold Type is Each

Turns the display on or off for all bits

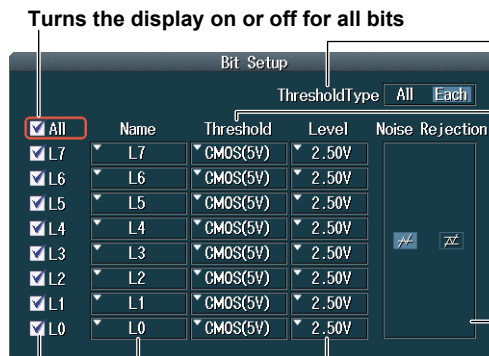

The threshold type is set to Each.

Set the threshold level preset (CMOS(5 V), CMOS(3.3 V), CMOS(2.5 V), CMOS(1.8 V), ECL, Userdef).
Selecting a preset automatically sets the threshold level.

- When the threshold type is Each, set the threshold level for each bit.

Set the noise rejection (\overline{A} , \overline{Z}).

Set the threshold level.

- When the threshold type is Each, set the threshold level for each bit.
- If you change the automatically specified value, the preset setting changes to "Userdef."

Turn the display on or off and set the label for each bit.


Note

For logic probes other than the 701989, the threshold type is All and the ThresholdType setting does not appear.

1.2 Setting the Vertical Axis for 8-bit LOGIC(L)


Bus Settings (Bus)

Press the **Bus** soft key to display the following menu.

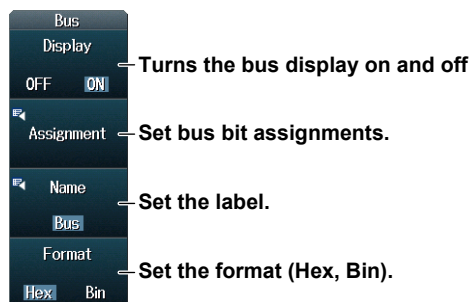


Bus Bit Assignments

Press the **Assignment** soft key to display the following screen.

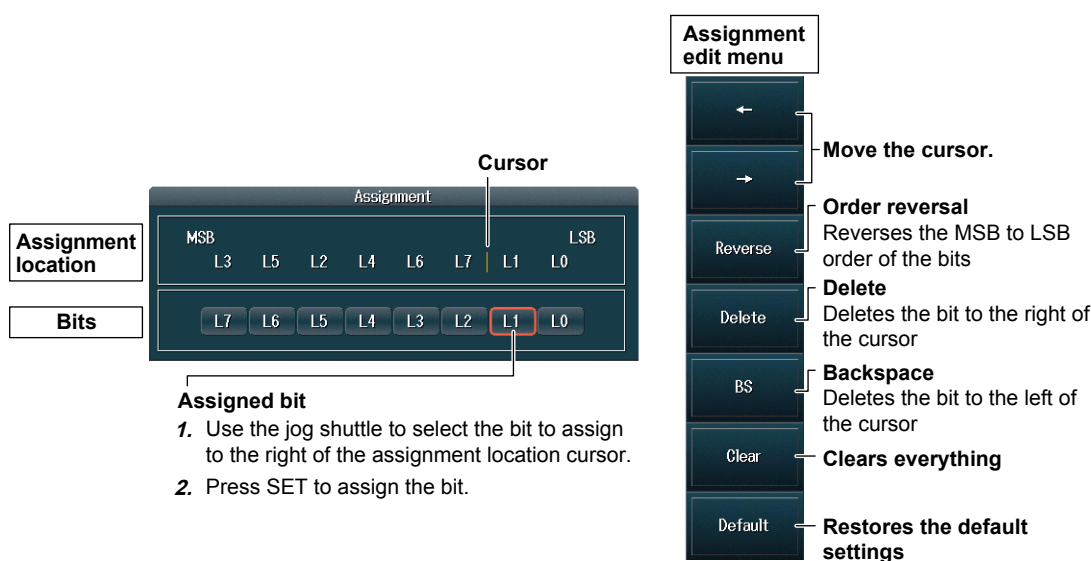

State Settings (State)


Press the **State** soft key to display the following menu.

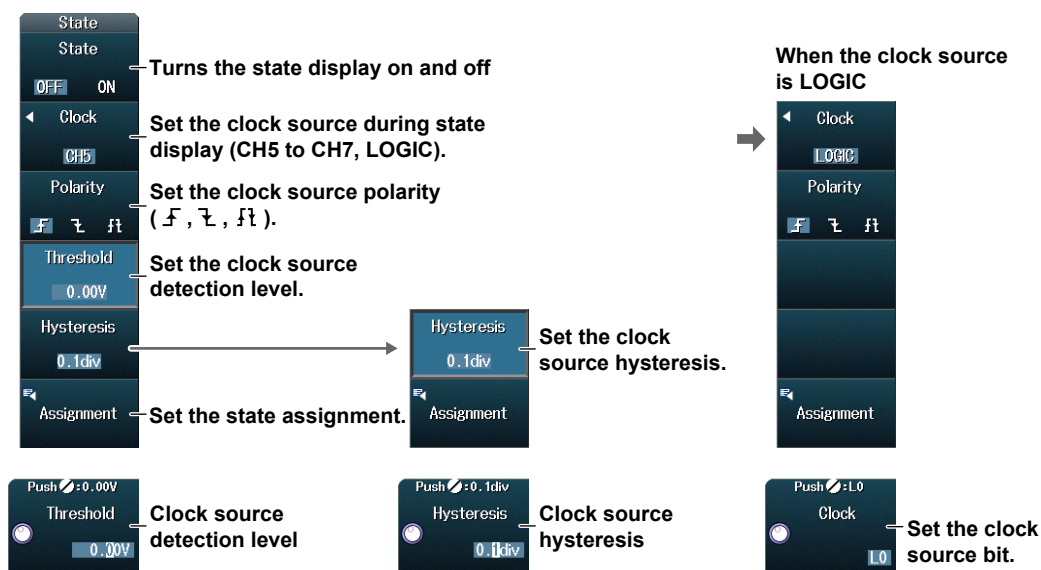

State Assignment

Press the **Assignment** soft key to display the following screen.


Turns the display on or off for all bits and the bus

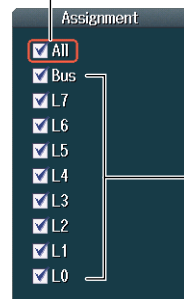

Turn the display of each bit and the bus on and off

Setting the Display Order of Bits and the Bus (Bit Order)

Press the **Bit Order** soft key to display the following screen.

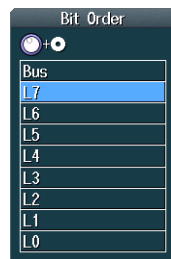

Select a bit or the bus, and edit the display order.

Reverse

Display order reversal

Reverses the display order of the bus and bits L7 to L0


Default

Restores the default settings

1. Turn the **jog shuttle** or move the **SET** key up and down to select the bit or bus to move.
The selected bit or bus cell is highlighted.

2. Press **SET**.


The selected bit or bus is confirmed as the bit or bus that will be moved, and a cursor is displayed below the cell of the selected bit or bus.

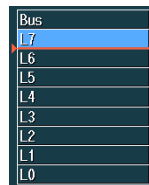

Selected bit or bus

Cursor

3. Turn the **jog shuttle** or move the **SET** key up and down to move the cursor to the place where you want to move the bit or bus.

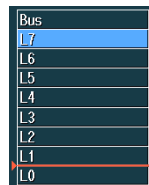


Selected bit or bus

Cursor

4. Press **SET**.

The selected bit or bus is moved to the cursor position.

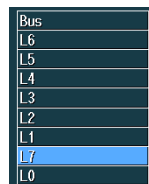

Selected bit or bus



The change affects the bit and bus display order along the vertical axis of the screen.

Deskew (Deskew)


Set the adjustment values for the time offsets (skew) between the logic signal and other signals, which are caused by the use of different types of probes. Deskewing is performed on all eight bits collectively.

Setting the Display Size (SCALE)

1. Press L. The SCALE knob now controls the LOGIC(L) channel scale.
 - The L key illuminates brightly.
 - The LED between the SCALE and \blacklozenge POSITION knobs illuminates in the color assigned to the LOGIC(L) channel (the color around the L key).
2. Turn the **SCALE** knob to set the display size.

Setting the Vertical Position (\blacklozenge POSITION knob)

1. Press L. The \blacklozenge POSITION knob now controls the LOGIC(L) setting.
 - The L key illuminates brightly.
 - The LED between the SCALE and \blacklozenge POSITION knobs illuminates in the color assigned to the LOGIC(L) channel (the color around the L key).
2. Turn the \blacklozenge **POSITION** knob to set the vertical position.

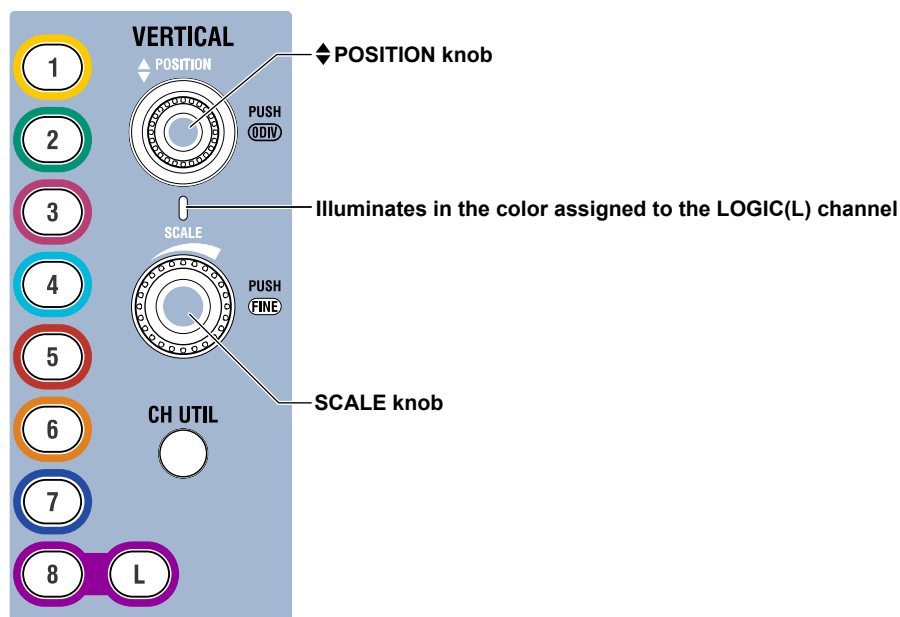

1.3 Setting the Vertical Axis for 16-bit LOGIC(A|B) (Option)

This section explains the following settings (which are related to the vertical axis for LOGIC(A|B) signals).

LOGIC(A|B) menu

- Turning the LOGIC(A|B) display on and off
- Turning the display on and off and setting the label, threshold level, and noise rejection for each bit
- Turning the Bus2 and Bus3 displays on and off and setting the bus bit assignments, labels, and format
- Turning the state display on and off and setting the clock source; clock source polarity, detection level, and hysteresis; and the state assignment
- Bit and bus display order
- Deskewing

SCALE knob

- Display size


◆ POSITION knob

- Vertical position

► [“Vertical Axis \(Logic Signal\)” in the Features Guide](#)

LOGIC(A|B) Menu

Press A|B to display the following menu.

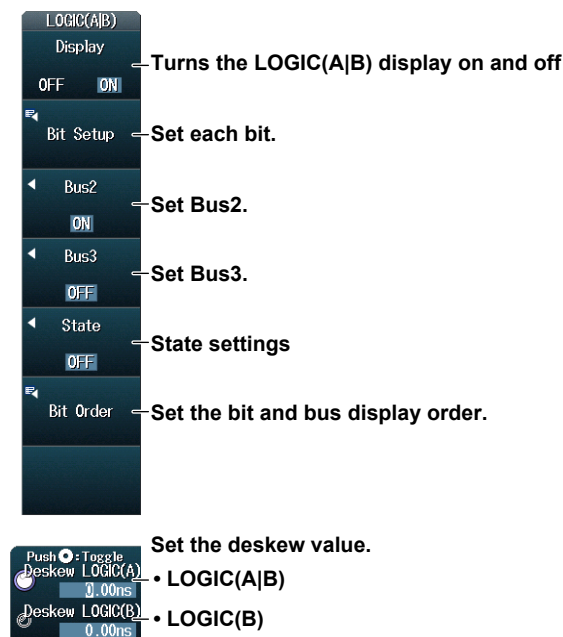

Note

- If you press the A|B key when it is not illuminated, the key illuminates, and the LOGIC(A|B) display turns on.
- If you press the A|B key when it is illuminated, the key turns off, and the LOGIC(A|B) display turns off.

Bit Settings (Bit Setup)

Press the **Bus** soft key to display the following menu.

The following procedural examples use the configuration screen for when the logic probes connected to the LOGIC(A) and LOGIC(B) ports are not 701989 and that for when the logic probes are 701989. If different logic probes are connected to the LOGIC(A) and LOGIC(B) ports, the configuration screen will display a combination of each probe's settings.

When the Logic Probes Connected to A and B Are Not 701989

Turn the display on or off for B0 to B7 collectively.

Turn the display on or off for each bit.

Turn the display on or off for A0 to A7 collectively.

Turn the display on or off for each bit.

Bit Setup

	Name	Threshold	Level
<input type="checkbox"/> All	B7	CMOS(5V)	2.5V
<input checked="" type="checkbox"/> B7	B7		
<input type="checkbox"/> B6	B6		
<input checked="" type="checkbox"/> B5	B5		
<input type="checkbox"/> B4	B4		
<input type="checkbox"/> B3	B3		
<input type="checkbox"/> B2	B2		
<input type="checkbox"/> B1	B1		
<input type="checkbox"/> B0	B0		
<input checked="" type="checkbox"/> All	A7	CMOS(5V)	2.5V
<input checked="" type="checkbox"/> A7	A7		
<input checked="" type="checkbox"/> A6	A6		
<input checked="" type="checkbox"/> A5	A5		
<input checked="" type="checkbox"/> A4	A4		
<input checked="" type="checkbox"/> A3	A3		
<input checked="" type="checkbox"/> A2	A2		
<input checked="" type="checkbox"/> A1	A1		
<input checked="" type="checkbox"/> A0	A0		

Set the label for each bit.

Set the threshold level.
If you change the automatically specified value, the preset setting changes to "Userdef."

Set the threshold level preset (CMOS(5 V), CMOS(3.3 V), CMOS(2.5 V), CMOS(1.8 V), ECL, Userdef).
Selecting a preset automatically sets the threshold level.

Note For logic probes other than the 701989, the threshold type is All and the ThresholdType setting does not appear.

When the Logic Probes Connected to A and B Are 701989

• When the Threshold Type is All

Turn the display on or off for B0 to B7 collectively.

Turn the display on or off for each bit.

Turn the display on or off for A0 to A7 collectively.

Turn the display on or off for each bit.

Set the label for each bit.

Set the threshold type of B0 to B7 to All.

Set the threshold type of A0 to A7 to All.

Set the noise rejection (\overline{A} , \overline{B}).

Set the threshold level.
If you change the automatically specified value, the preset setting changes to "Userdef."

Set the threshold level preset (CMOS(5 V), CMOS(3.3 V), CMOS(2.5 V), CMOS(1.8 V), ECL, Userdef).
Selecting a preset automatically sets the threshold level.

• When the Threshold Type is Each

Turn the display on or off for B0 to B7 collectively.

Turn the display on or off for each bit.

Turn the display on or off for A0 to A7 collectively.

Turn the display on or off for each bit.

Set the label for each bit.

Set the threshold type of B0 to B7 to All.

Set the threshold type of A0 to A7 to All.

Set the noise rejection (\overline{A} , \overline{B}).


Set the threshold level.
• Set the threshold level for each bit.
• If you change the automatically specified value, the preset setting changes to "Userdef."

Set the threshold level preset (CMOS(5 V), CMOS(3.3 V), CMOS(2.5 V), CMOS(1.8 V), ECL, Userdef).
• Set the threshold level for each bit.
• Selecting a preset automatically sets the threshold level.

1.3 Setting the Vertical Axis for 16-bit LOGIC(A|B) (Option)

Bus2 and Bus3 Settings (Bus2, Bus3)


Press the **Bus2** or **Bus3** soft key to display the following menu.

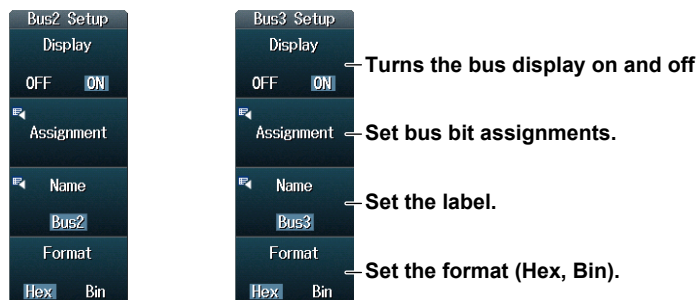

Bus Bit Assignments


Press the **Assignment** soft key to display the following screen.

• Bus2 Example

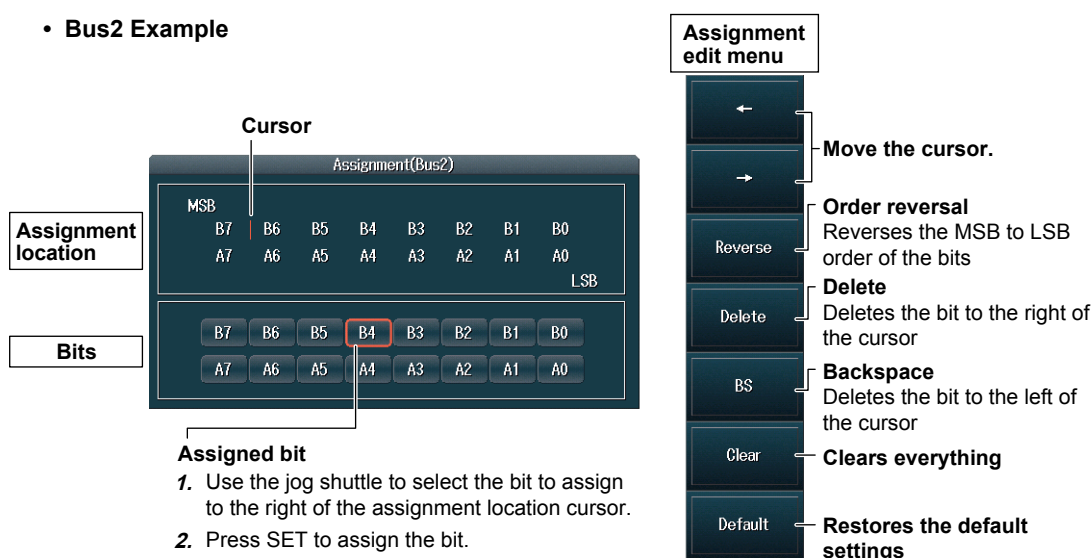


State Settings (State)

Press the **State** soft key to display the following menu.

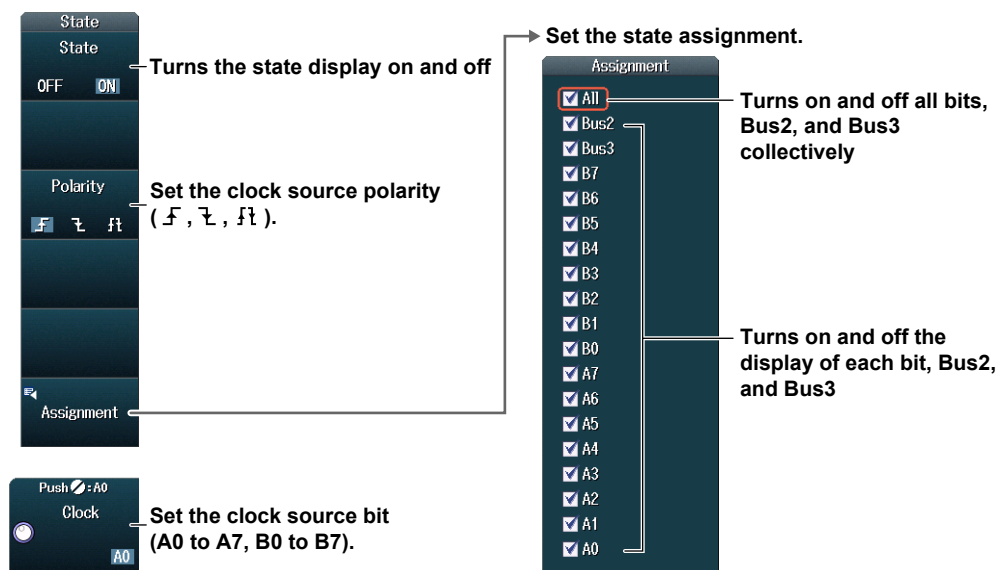

Setting the Display Order of Bits and the Bus (Bit Order)


Press the **Bit Order** soft key to display the following screen.

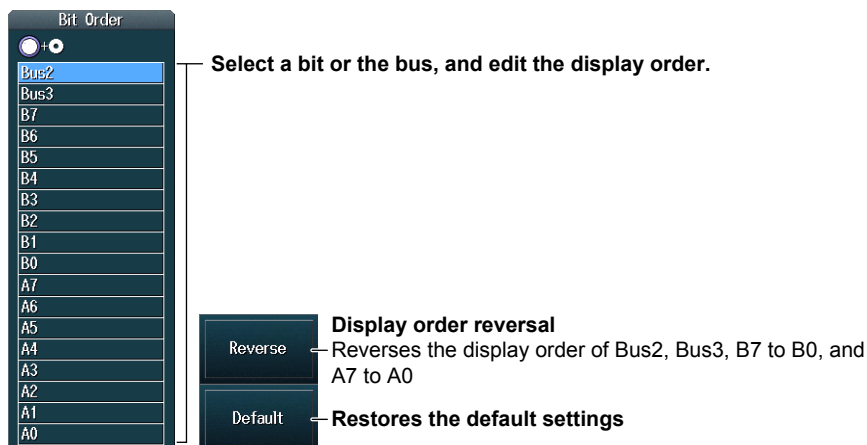


1. Turn the **jog shuttle** or move the **SET** key up and down to select the bit or bus to move. The selected bit or bus cell is highlighted.

2. Press **SET**.

The selected bit or bus is confirmed as the bit or bus that will be moved, and a cursor is displayed below the cell of the selected bit or bus.

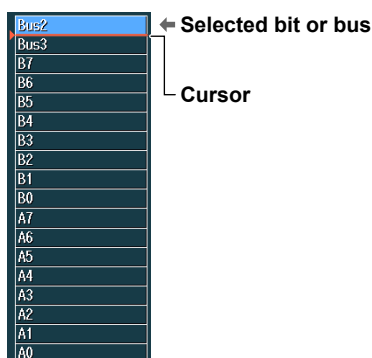


3. Turn the **jog shuttle** or move the **SET** key up and down to move the cursor to the place where you want to move the bit or bus.

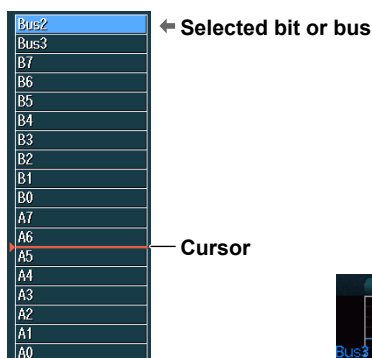

4. Press **SET**.

The selected bit or bus is moved to the cursor position.

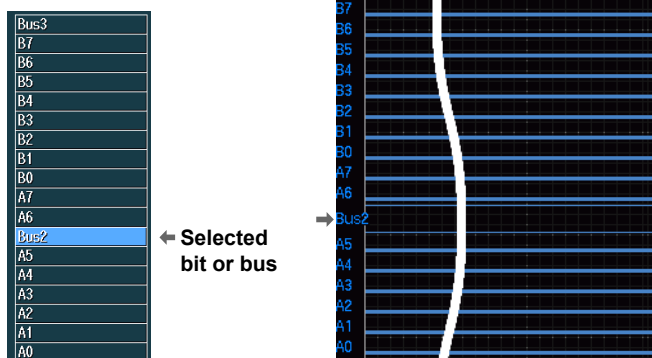

The change affects the bit and bus display order along the vertical axis of the screen.

1.3 Setting the Vertical Axis for 16-bit LOGIC(A|B) (Option)

Deskew (Deskew)


Set the adjustment values for the time offsets (skew) between the logic signal and other signals, which are caused by the use of different types of probes. Deskewing is performed on all eight bits collectively for LOGIC(A) and LOGIC(B).

Setting the Display Size (SCALE)

1. Press **A|B**. The **SCALE** knob now controls the LOGIC(A|B) channel scale.
 - The A|B key illuminates brightly.
 - The LED between the **SCALE** and **POSITION** knobs illuminates in the color assigned to the LOGIC(A|B) channel (the color around the A|B key).
2. Turn the **SCALE** knob to set the display size.

Setting the Vertical Position (POSITION knob)

1. Press A|B. The **POSITION** knob now controls the LOGIC(A|B) setting.
 - The A|B key illuminates brightly.
 - The LED between the **SCALE** and **POSITION** knobs illuminates in the color assigned to the LOGIC(A|B) channel (the color around the A|B key).
2. Turn the **POSITION** knob to set the vertical position.

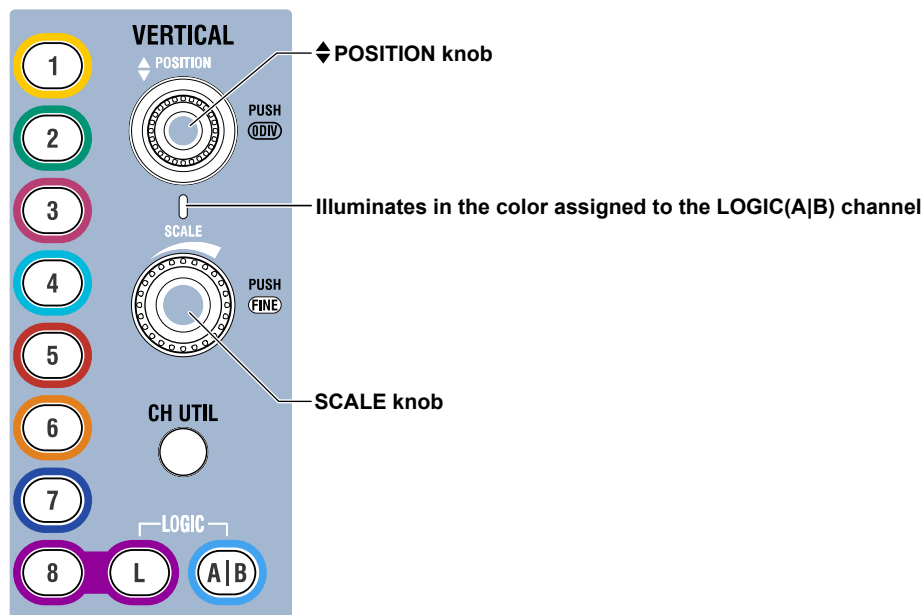


1.4 All ON/All OFF

You can simultaneously show or hide all the input channel waveforms.

► [“Channel Utility \(CH UTIL\)” in the Features Guide](#)

Channel Utility (CH UTIL)

Press **CH UTIL** to display the following menu.

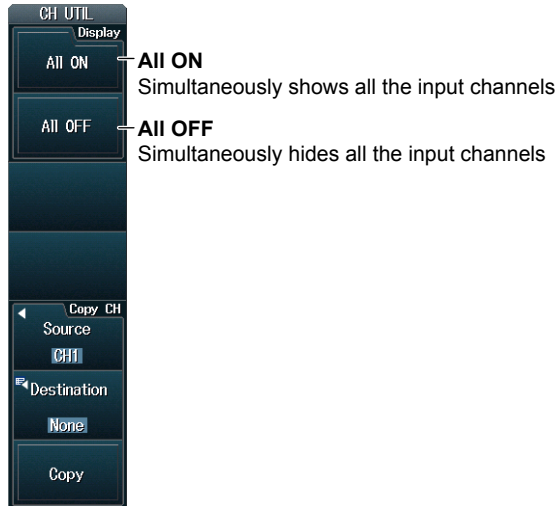

Note

Analog signal input channel CH8 and logic signal input port LOGIC(L) cannot measure signals simultaneously. The signal that corresponds to the last key that you pressed, either CH8 or L, can be measured. Therefore, “All ON” will be applied to the channel or port that corresponds to the last key that you pressed. If a logic probe is not connected, the “All ON” feature will not be applied to the LOGIC(L) or LOGIC(A|B) ports.


1.5 Copying Channel Information (Analog Signals)

You can copy the setup information of an analog signal input channel to other analog signal input channels.

► “Copying Channel Information (Copy CH)” in the Features Guide

Copying Channel Information (Copy CH)

Press **CH UTIL** to display the following menu.

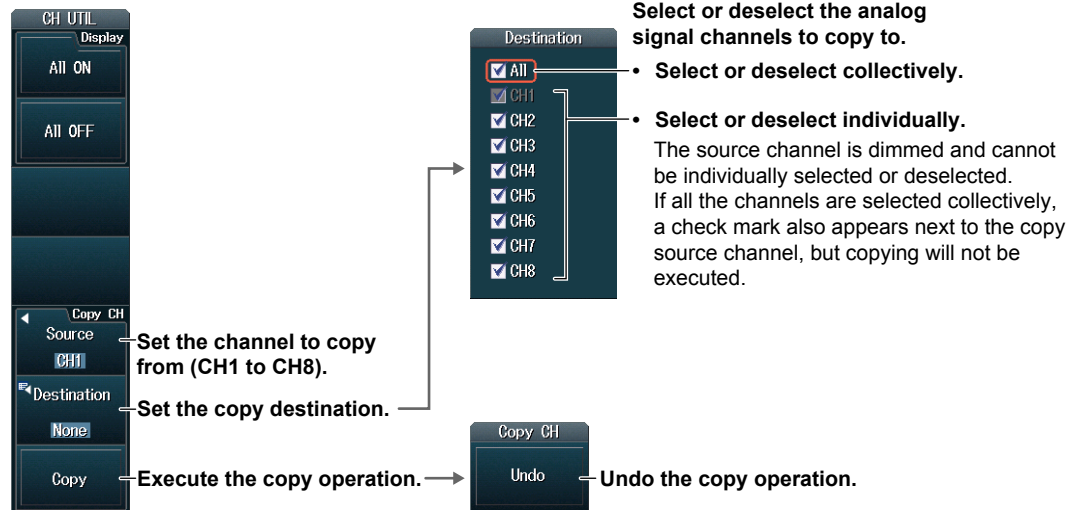


1.6 Configuring the Horizontal Axis (Time axis)

Set the time per grid (1 div) displayed on the screen.

Turn the **TIME/DIV** knob to set the value.

If you change the TIME/DIV setting while waveform acquisition is stopped, the waveform is displayed expanded or reduced along the time axis.

► [“Horizontal Axis \(Time Axis\)” in the Features Guide](#)

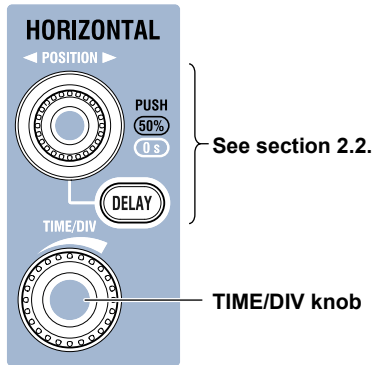

2.1 Setting the Trigger Mode and Trigger Hold-off Time


This section explains the following settings (which are used when updating the displayed waveform).

- Trigger mode
- Hold-off time

► “Trigger Mode (Trigger Mode)” and
“Trigger Hold-off (Holdoff)”
in the Features Guide

MODE Menu

Press **MODE** to display the following menu.

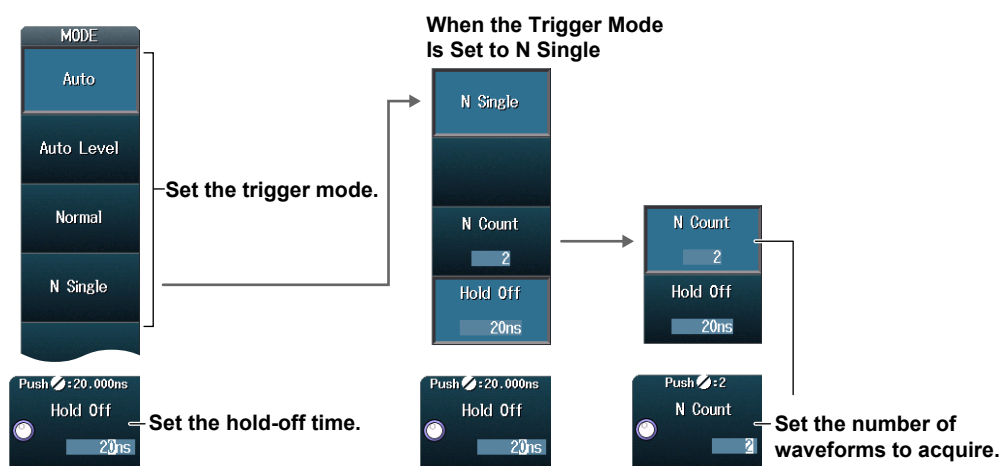

Setting the Trigger Mode (Mode)

- Auto:** If the trigger conditions are met within approximately 100 ms, the DLM4000 updates the displayed waveforms on each trigger occurrence. If not, the DLM4000 automatically updates the displayed waveforms. If the time axis is set to a value that would cause the display to switch to roll mode, the roll mode display will be enabled.*
- * For information about the time axis setting and the roll mode display, see chapter 3 of the Features Guide, IM DLM4038-01EN.
- Auto Level:** If a trigger occurs before a timeout, the DLM4000 updates the waveform in the same way that it does in Auto mode. If a trigger does not occur before a timeout, the DLM4000 automatically changes the trigger level to the center value of the trigger source amplitude, triggers on that value, and updates the displayed waveform.
- Normal:** The DLM4000 only updates the waveform display when the trigger conditions are met.
- N Single:** The DLM4000 acquires signals each time the trigger conditions are met until a specified number of signals have been acquired, and then displays all of the acquired signals.

Note

Press any of the trigger mode soft keys to execute waveform acquisition in the selected trigger mode.

Single mode

There is also a Single trigger mode in which the DLM4000 updates the displayed waveform once and stops signal acquisition when the trigger conditions are met. Press SINGLE on the front panel to execute Single Mode waveform acquisition.

Setting the Hold-off Time (Hold Off)

The trigger hold-off feature temporarily stops the detection of the next trigger once a trigger has occurred.

2.2 Setting the Trigger Position and Trigger Delay

This section explains the following settings (which are used when updating the displayed waveform).

 
- Trigger position
- Delay cancelling

► “Trigger Position (◀POSITION▶ knob),”
“Trigger Delay (DELAY),” and
“Delay Cancel (Delay Cancel)”
in the Features Guide

Setting the Trigger Position (◀POSITION▶ knob)

1. Turn the ◀POSITION▶ knob to set the trigger position.

The specified trigger position is shown at the top of the display during operation. The display disappears approximately 3 seconds after the last operation.



- * You can set the trigger position even when waveforms are not being acquired.

 
Setting the Trigger Delay (DELAY)

1. Press **DELAY**.

The DELAY key illuminates.

2. Turn the ◀POSITION▶ knob to set the trigger delay.

The specified trigger delay is shown at the top of the display during operation. The display disappears approximately 3 seconds after the last operation.




- * You can set the trigger delay even when waveforms are not being acquired.

3. Press the **DELAY** key again.

The DELAY key turns off, and you can set the trigger position.

Turning Delay Cancelling On or Off (Delay Cancel)

Press **UTILITY** and then press the **Preference** soft key to display the following menu.

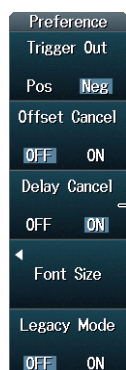

—Turns delay cancelling on and off

You can select whether or not to apply the specified trigger delay to the time measurement values.

ON: Measures time with the trigger position set to 0 s (does not apply the delay to time measurement)

OFF: Measures time with the trigger point set to 0 s (applies the delay to time measurement)

2.3 Triggering on an Edge Trigger

This section explains the following settings (which are used when triggering on trigger source edges).

- Trigger source
Source bit, trigger level, trigger slope, trigger coupling, HF rejection, noise rejection
- Window comparator
- Probe attenuation
- Input range


► “Edge Trigger (EDGE),”
“Trigger Source (Source),”
“Trigger Slope (Slope/Polarity),”
“Trigger Coupling (Coupling),”
“HF Rejection (HF Rejection),”
“Noise Rejection (Noise Rejection),”
“Window Comparator (Window),” and
“Trigger Level (Level)”
in the Features Guide

EDGE Menu


Press **EDGE** to open one of the menus shown below. The menu that opens varies depending on the specified trigger source.

When the Trigger Source Is a Channel from CH1 to CH8


When the Window Comparator Is Off

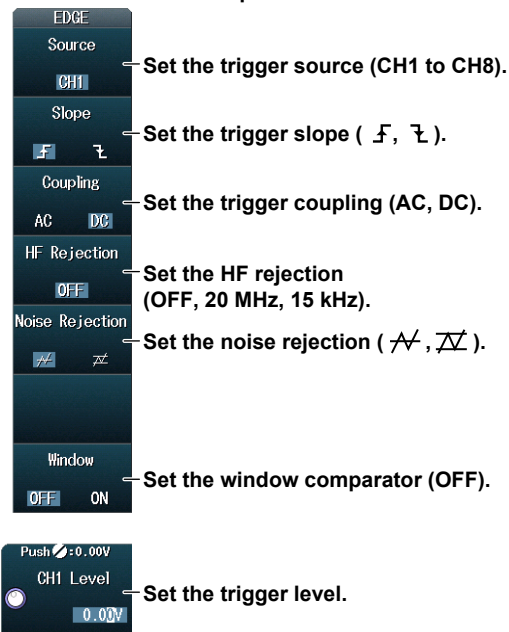


When the Window Comparator Is On

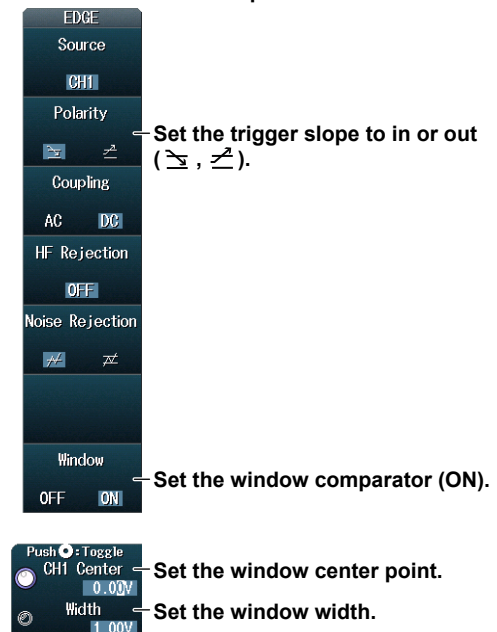


When the Trigger Source Is LOGIC

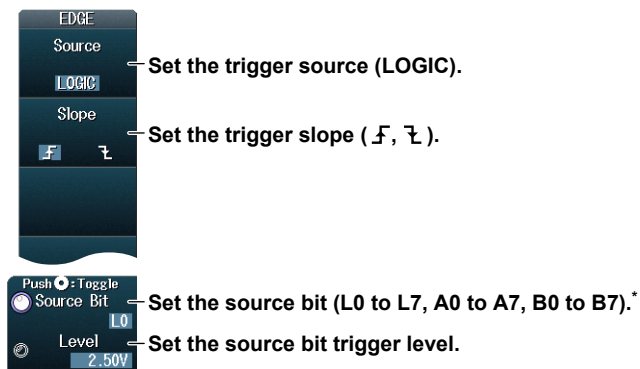

When the Trigger Source Is EXT (External Trigger Signal)

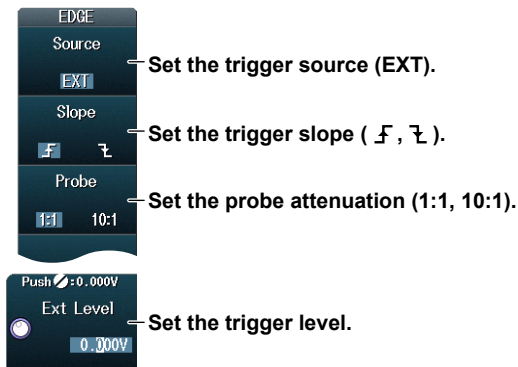

When the Trigger Source Is LINE (the DLM4000 Power Source)

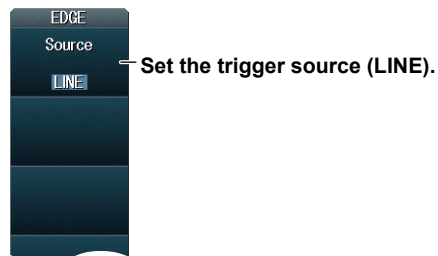

2.4 Triggering on the OR of Multiple Edge Triggers

This section explains the following settings (which are used when triggering on the logical OR of multiple edge triggers).

- Trigger source
Trigger level, trigger scope, trigger coupling, HF rejection, noise rejection
- Window comparator

► “Edge OR Trigger [ENHANCED]” in the Features Guide

ENHANCED Edge OR Menu

Press **ENHANCED**, the **Type** soft key, and then the **Edge OR** soft key to display the following menu.

The screenshot shows the ENHANCED menu with the following annotations:

- Set the trigger type to Edge OR.** (Points to the **Edge OR** option in the **Type** menu)
- Set the trigger source pattern.** (Points to the **Pattern** menu)
- Set the trigger level, trigger coupling, HF rejection, noise rejection, and the window comparator.** (Points to the **Level/Coupling** menu)

The **Pattern** menu shows a table of trigger patterns for channels CH1 through CH8:

Channel	Pattern
CH1	\overline{f} \overline{z} X
CH2	\overline{f} \overline{z} X
CH3	\overline{f} \overline{z} X
CH4	\overline{f} \overline{z} X
CH5	\overline{f} \overline{z} X
CH6	\overline{f} \overline{z} X
CH7	\overline{f} \overline{z} X
CH8	\overline{f} \overline{z} X

- Select \overline{f} , \overline{z} , or X when the window comparator is off.
- Select \overline{f} , \overline{z} , or X when the window comparator is on.

Setting the Level and Coupling for Trigger Coupling, HF Rejection, Noise Rejection, and the Window Comparator (Level/Coupling)

Press the **Level/Coupling** soft key to display the following menu.

Example: When a logic probe other than the 701989 is connected to the LOGIC(L) port on a model without the /L16 option

The screenshot shows the Level/Coupling menu with the following annotations:

- Set the trigger level.** (Points to the **Level** dropdown menu)
- Set the trigger coupling (AC, DC).** (Points to the **Coupling** dropdown menu)
- Set the HF rejection (OFF, 20 MHz, 15 kHz).** (Points to the **HF Rejection** dropdown menu)
- Set the noise rejection (\overline{f} , \overline{z}).** (Points to the **Noise Rejection** dropdown menu)
- Set the window comparator.** (Points to the **Window** dropdown menu)

The **Level/Coupling** menu shows a table of settings for channels CH1 through CH8:

Channel	Level	Coupling	HF Rejection	Noise Rejection	Window
CH1	0.00V	AC DC	OFF	\overline{f} \overline{z}	OFF
CH2	0.00V	AC DC	OFF	\overline{f} \overline{z}	OFF
CH3	0.00V	AC DC	OFF	\overline{f} \overline{z}	OFF
CH4	0.00V	AC DC	OFF	\overline{f} \overline{z}	OFF
CH5	0.00V	AC DC	OFF	\overline{f} \overline{z}	OFF
CH6	0.00V	AC DC	OFF	\overline{f} \overline{z}	OFF
CH7	0.00V	AC DC	OFF	\overline{f} \overline{z}	OFF
CH8	0.00V	AC DC	OFF	\overline{f} \overline{z}	OFF

Below the table, there are two dropdown menus:

- Threshold** (Set to CMOS(5V))
- Level** (Set to 2.5V)

Set the threshold level. (Points to the **Threshold** dropdown menu)

If you change the automatically specified value, the preset setting changes to “Userdef.”

Set the threshold level preset (CMOS(5 V), CMOS(3.3 V), CMOS(2.5 V), CMOS(1.8 V), ECL, Userdef). (Points to the **Threshold** dropdown menu)

Selecting a preset automatically sets the threshold level.

2.4 Triggering on the OR of Multiple Edge Triggers

Example: When the 701989 logic probes are connected to the logic signal input ports on a model with the /L16 option

Set the trigger level.

Set the trigger coupling (AC, DC).

Set the HF rejection (OFF, 20 MHz, 15 kHz).

Set the noise rejection ($\overline{\wedge}$, $\overline{\vee}$).

Set the window comparator.

/L16 option

Set threshold type* (All, Each).

If the threshold type is set to Each, for each bit, select a threshold level preset, or set the value directly.

Set the noise rejection ($\overline{\wedge}$, $\overline{\vee}$).*

Set the threshold level.

If you change the automatically specified value, the preset setting changes to "Userdef."

Set the threshold level preset (CMOS(5 V), CMOS(3.3 V), CMOS(2.5 V), CMOS(1.8 V), ECL, Userdef).

Selecting a preset automatically sets the threshold level.

* The threshold type setup menu for a logic signal and the noise rejection setup menu appear only when a 701989 logic probe is connected to the corresponding logic signal input port.

Configuring the Window Comparator (Window)

Window

Window ☐ OFF ☒ ON — Turn the window comparator on or off.

Center(Level) 0.00V — Set the window center point.

Width 1.00V — Set the window width.

2.5 Triggering on Edge Conditions


This section explains the following settings (which are used when triggering on edge conditions).

- Trigger source
 - Level used to detect whether qualifications are met
- Qualification
 - Logic combination
 - Trigger condition

► “Edge Qualified Trigger [ENHANCED]” in the Features Guide

ENHANCED Edge Qualified Menu


Press **ENHANCED**, the **Type** soft key, and then the **Edge Qualified** soft key to display the following menu.

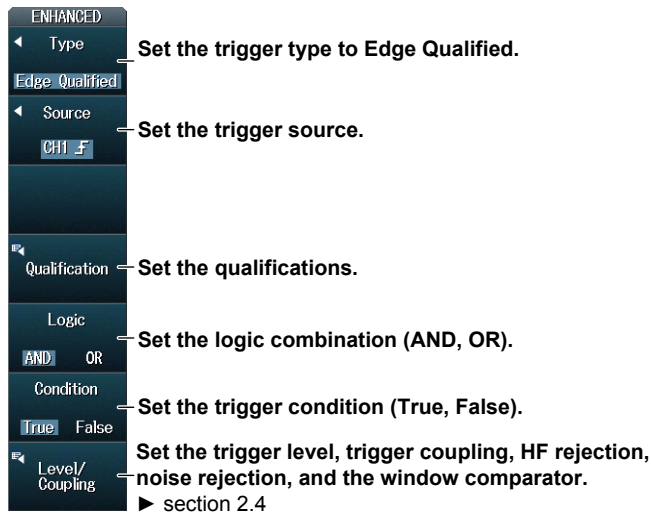

Setting the Trigger Source (Source)

Press the **Source** soft key to display one of the menus shown below. The menu that is displayed varies depending on the specified trigger source.


When the Trigger Source Is a Channel from CH1 to CH8

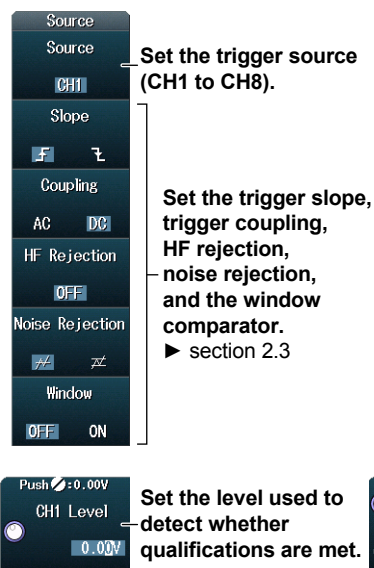

When the Trigger Source Is LOGIC



When the Trigger Source Is EXT (External trigger signal)

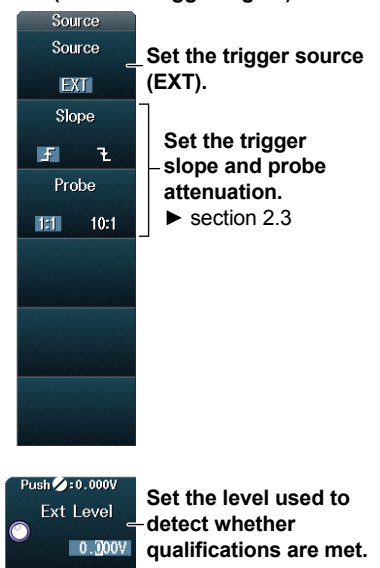

* A0 to A7 and B0 to B7 are available on models with the /L16 options.

Setting the Qualifications (Qualification)

Press the **Qualification** soft key to open a menu. The menu that appears varies depending on the specified trigger source.

When the Trigger Source Is a Channel from CH1 to CH8 or LOGIC

Example: When the Trigger Source Is CH1

Qualification

CH1	\overline{F}	\overline{L}	X
CH2	H	L	X
CH3	H	L	X
CH4	H	L	X
CH5	H	L	X
CH6	H	L	X
CH7	H	L	X
CH8	IN	OUT	X

A7	H	L	X
A6	H	L	X
A5	H	L	X
A4	H	L	X
A3	H	L	X
A2	H	L	X
A1	H	L	X
A0	H	L	X

B7	H	L	X
B6	H	L	X
B5	H	L	X
B4	H	L	X
B3	H	L	X
B2	H	L	X
B1	H	L	X
B0	H	L	X

L7	H	L	X
L6	H	L	X
L5	H	L	X
L4	H	L	X
L3	H	L	X
L2	H	L	X
L1	H	L	X
L0	H	L	X

Set the trigger slope for the trigger source signal.

- Select \overline{F} , \overline{L} , or X when the window comparator is off.
- Select $\overline{\geq}$, $\overline{\leq}$, or X when the window comparator is on.

Set qualifications for signals other than the trigger source.

- Select H, L, or X when the window comparator is off.
- Select IN, OUT, or X when the window comparator is on.

/L16 option

When the Trigger Source Is EXT (External trigger signal)

The same menu appears as that shown above for when the trigger source is a channel from CH1 to CH8 or LOGIC. Because the trigger source is an external signal (EXT), you can specify all of the signal states for CH1 to CH8 and LOGIC as qualifications.

2.6 Triggering on State Conditions


This section explains the following settings (which are used when triggering on state conditions).

- State condition
 - Clock source and the Level used to detect the pattern
- Logic combination
- Trigger condition

► “State Trigger [ENHANCED]” in the Features Guide

ENHANCED State Menu


Press **ENHANCED**, the **Type** soft key, and then the **State** soft key to display the following menu.

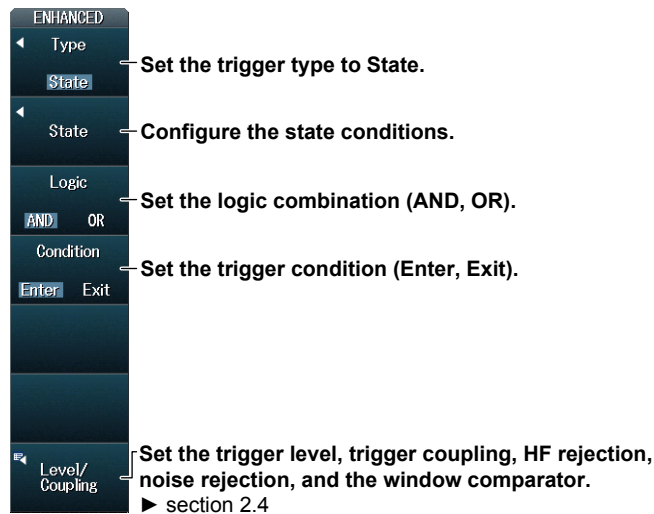



Setting the State Conditions (State)

Press the **State** soft key to display one of the menus shown below. The menu that is displayed varies depending on the specified clock source.


When the Clock Source Is a Channel from CH1 to CH8

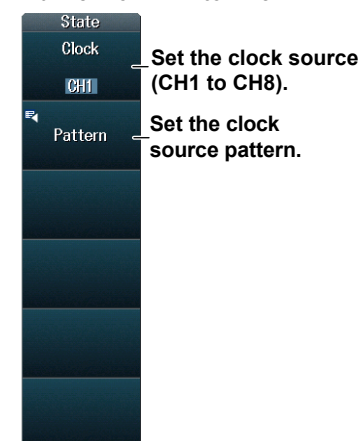

When the Clock Source Is LOGIC

 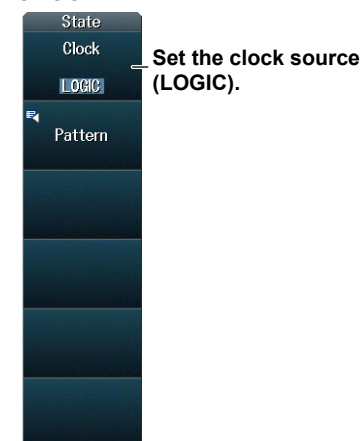

When the Clock Source Is Not Specified

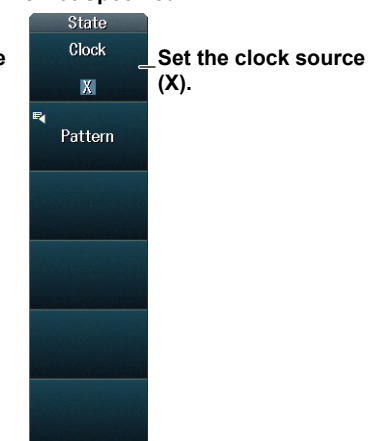

* A0 to A7 and B0 to B7 are available on models with the /L16 options.

2.6 Triggering on State Conditions

Setting the Clock Source Pattern

Press the **Pattern** soft key to display a menu. The menu that is displayed varies depending on the specified clock source.

- **When the Clock Source Is a Channel from CH1 to CH8 or LOGIC**

Example: When the Clock Source Is CH1

Pattern

CH1	F	L	X
CH2	H	L	X
CH3	H	L	X
CH4	H	L	X
CH5	H	L	X
CH6	H	L	X
CH7	H	L	X
CH8	IN	OUT	X

A7	H	L	X
A6	H	L	X
A5	H	L	X
A4	H	L	X
A3	H	L	X
A2	H	L	X
A1	H	L	X
A0	H	L	X

L7	H	L	X
L6	H	L	X
L5	H	L	X
L4	H	L	X
L3	H	L	X
L2	H	L	X
L1	H	L	X
L0	H	L	X

Annotations:

- Set the slope for the clock source signal.
 - Select **F** or **L** when the window comparator is off.
 - Select **↗** or **↘** when the window comparator is on.
- Set the patterns for signals other than the clock source.
 - Select **H**, **L**, or **X** when the window comparator is off.
 - Select **IN**, **OUT**, or **X** when the window comparator is on.

/L16 option

- **When the Clock Source Is Not Specified**

The same menu appears as that shown above for when the clock source is a channel from CH1 to CH8 or LOGIC. Because no clock source is specified, you can specify all of the signal states for CH1 to CH8 and LOGIC as state conditions.

2.7 Triggering on Pulse Width


This section explains the following settings (which are used when triggering on pulse width).

- Trigger source
 - Polarity
- Time width mode
 - Reference time

► “Pulse Width Trigger [ENHANCED]” in the Features Guide

ENHANCED Pulse Width Menu


Press **ENHANCED**, the **Type** soft key, and then the **Pulse Width** soft key to display the following menu.

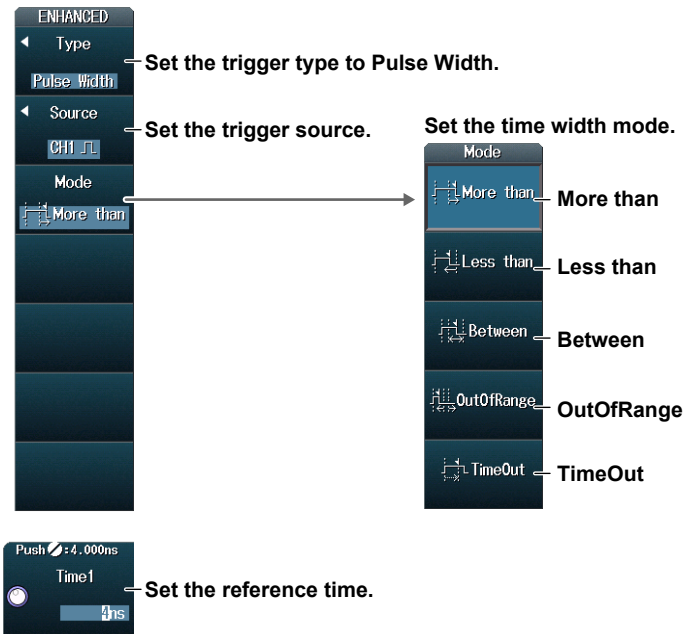

Setting the Trigger Source (Source)

Press the **Source** soft key to display one of the menus shown below. The menu that is displayed varies depending on the specified trigger source.

When the Trigger Source Is a Channel from CH1 to CH8



Source
CH1

Polarity
[] []

Coupling
AC [] DC []

HF Rejection
[] []

Noise Rejection
[] []

Window
[] []

Set the trigger source (CH1 to CH8).

Set the polarity.
• Select [] or [] when the window comparator is off.
• Select IN or OUT when the window comparator is on.

Set the trigger coupling, HF rejection, noise rejection, and the window comparator.
► section 2.3

CH1 Level
0.00V

Set the trigger level.

When the Trigger Source Is LOGIC



Source
LOGIC

Polarity
[] []

Set the trigger source (LOGIC).


Set the polarity ([], []).

Set the source bit (L0 to L7, A0 to A7, B0 to B7).*

Set the source bit trigger level.

Level
2.50V

When the Trigger Source Is EXT (External trigger signal)

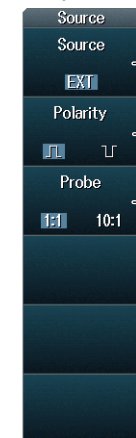

Source
EXT

Polarity
[] []

Probe
[] 10:1

Set the trigger source (EXT).

Set the polarity ([], []).

Set the probe attenuation (1:1, 10:1).

Ext Level
0.000V

Set the trigger level.

* A0 to A7 and B0 to B7 are available on models with the /L16 options.

 

Setting the Time Width Mode (Mode)

Set what kind of relationship must be established between the trigger source's pulse width and the specified reference times (Time1 and Time2) for the DLM4000 to trigger.

- More than: The pulse width must be longer than reference time Time1.
 Less than: The pulse width must be shorter than reference time Time1.
 Between: The pulse width must be longer than Time1 but shorter than Time2.
 OutOfRange: The pulse width must be shorter than Time1 or longer than Time2.
 TimeOut: The pulse width must be longer than reference time Time1.


Setting the Reference Times (Time1 and Time2)

When the Time Width Mode Is More than, Less than, or TimeOut

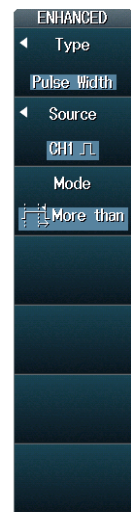

Set reference time Time1.

When the Time Width Mode is Between or OutOfRange

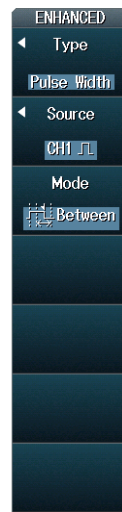

Set reference time Time1.

Set reference time Time2.

2.8 Triggering on State Width


This section explains the following settings (which are used when triggering on state conditions).

- State condition
 - Clock source and the level used to detect the the pattern
- Logic combination
- Trigger condition
- Time width mode
 - Reference time

► “State Width Trigger [ENHANCED]” in the Features Guide

ENHANCED State Width Menu


Press **ENHANCED**, the **Type** soft key, and then the **State Width** soft key to display the following menu.

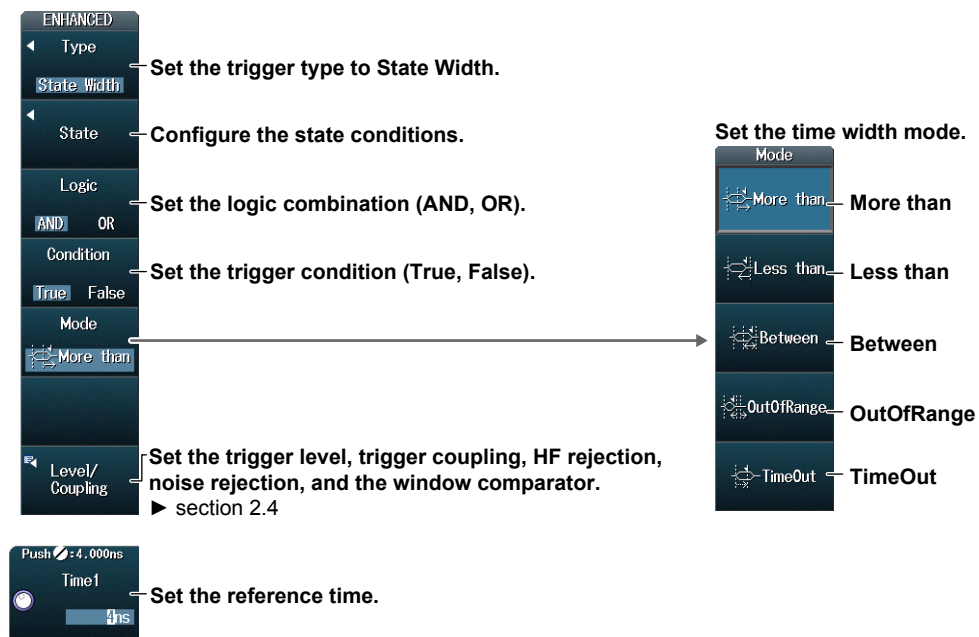


Setting the State Conditions (State)

Press the **State** soft key to display one of the menus shown below. The menu that is displayed varies depending on the specified clock source.



When the Clock Source Is a Channel from CH1 to CH8

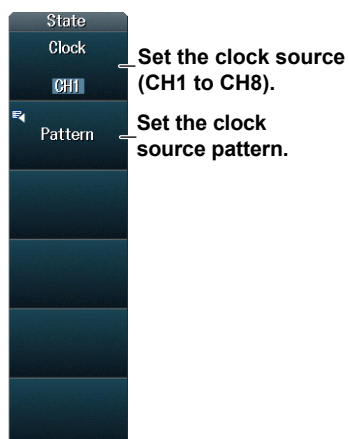

When the Clock Source Is LOGIC

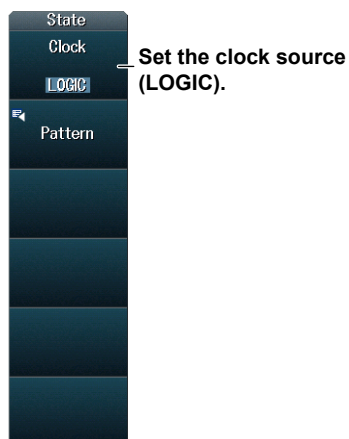

When the Clock Source Is Not Specified

 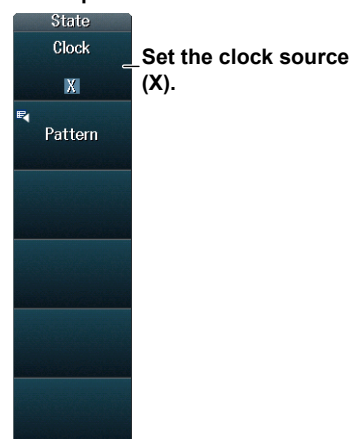


* A0 to A7 and B0 to B7 are available on models with the /L16 options.

Setting the Clock Source Pattern

Press the **Pattern** soft key to display a menu. The menu that is displayed varies depending on the specified clock source.

- **When the Clock Source Is a Channel from CH1 to CH8 or LOGIC**

Example: When the Clock Source Is CH1

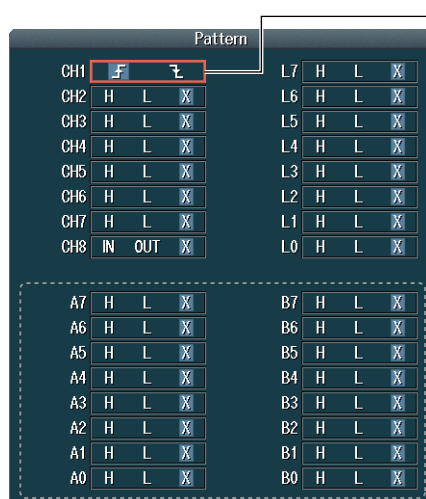

Set the slope for the clock source signal.

- Select **F** or **L** when the window comparator is off.
- Select **IN** or **OUT** when the window comparator is on.

Set the patterns for signals other than the clock source.

- Select **H**, **L**, or **X** when the window comparator is off.
- Select **IN**, **OUT**, or **X** when the window comparator is on.

/L16 option

- **When the Clock Source Is Not Specified**

The same menu appears as that shown above for when the clock source is a channel from CH1 to CH8 or LOGIC. Because no clock source is specified, you can specify all of the signal states for CH1 to CH8 and LOGIC as state conditions.


Setting the Time Width Mode (Mode)

Set what kind of relationship between the length of time the state condition is met or not met and the specified reference times (Time1 and Time2) will cause the DLM4000 to trigger.

- More than: Triggers when the period during which the state condition is met or not met is longer than reference time Time1 and the condition changes
- Less than: Triggers when the period during which the state condition is met or not met is shorter than reference time Time1 and the condition changes
- Between: Triggers when the period during which the state condition is met or not met is longer than Time1 but shorter than Time2 and the condition changes
- OutOfRange: Triggers when the period during which the state condition is met or not met is shorter than Time1 or longer than Time2 and the condition changes
- TimeOut: Triggers when the period during which the state condition is met or not met is longer than reference time Time1


Setting the Reference Times (Time1 and Time2)

When the Time Width Mode Is More than, Less than, or TimeOut

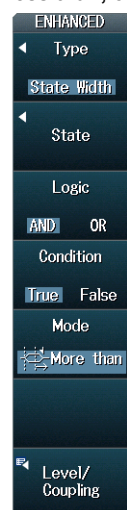

Set reference time Time1.

When the Time Width Mode is Between or OutOfRange

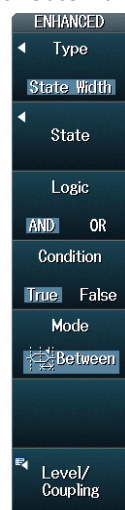

Set reference time Time1.

Set reference time Time2.

2.9 Triggering on FlexRay Bus Signals (Option)

This section explains the following settings (which are used when triggering on FlexRay bus signals).

- Trigger source
 - Bit rate, source channel (A or B), and the level used to detect the source state
- Trigger types and conditions


► “FlexRay Bus Trigger [ENHANCED, option]” in the Features Guide

Auto Setup

The DLM4000 can automatically set the trigger source level and bit rate from the received FlexRay bus signal and trigger on them. For details, see section 12.1.


ENHANCED FlexRay Menu

Press **ENHANCED**, the **Type** soft key, the **Serial** soft key, and then the **FlexRay** soft key to display the following menu.

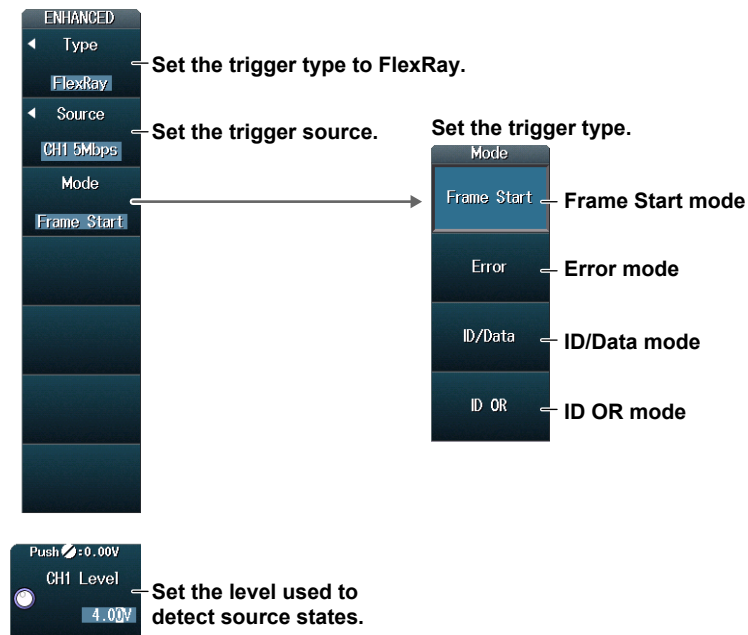

Setting the Trigger Source (Source)

Press the **Source** soft key to display the following menu.

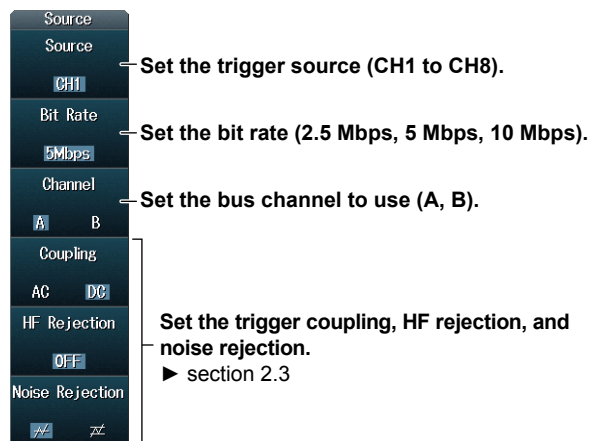

Trigger Type (Mode)

Frame Start Mode (Frame Start)

Press the **Mode** soft key and then the **Frame Start** soft key.

The DLM4000 triggers on the start of FlexRay bus signal frames.

Error Mode (Error)

Press the **Mode** soft key, the **Error** soft key, and then the **Error Type OR** soft key to display the following menu.



Turn error detection on or off for CRC, BSS, and FES errors.

ID/Data Mode (ID/Data)


Setting Trigger Conditions (Condition Setup)

Press the **Mode** soft key, the **ID/Data** soft key, and then the **Condition Setup** soft key to display the following screen.

The DLM4000 triggers on the AND of Frame Start, Indicator, ID, Cycle Count, Data1, and Data2. Items whose check boxes are selected are used as trigger conditions.




When the Comparison Condition of Data1 Is True or False

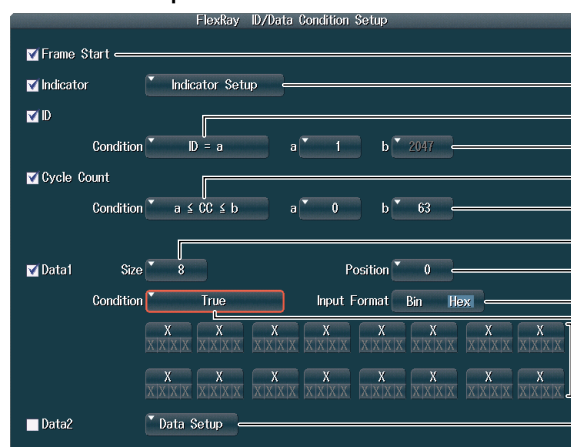

Frame Start (always selected)
Set the indicator.
Set the ID comparison condition.
Set data reference values a and b.
Set the Cycle Count comparison condition.
Set data reference values a and b.
Set the data length.
Set the comparison start position.
Set the data pattern input format.
Set the comparison condition.
Set the data pattern.
Set Data2.

When the Comparison Condition of Data1 Is Data = a; Data ≠ a; a ≤ Data; Data ≤ b; a ≤ Data ≤ b; or Data < a, b < Data

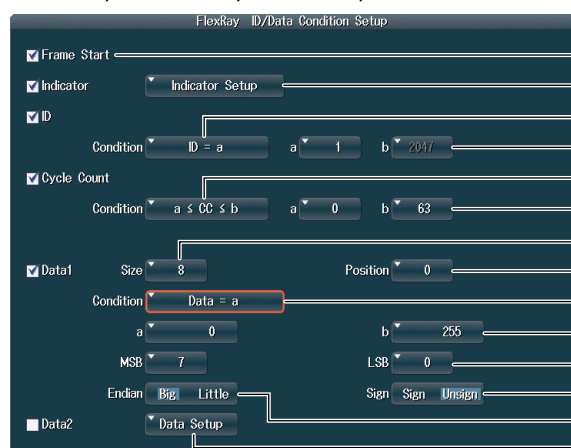

Frame Start (always selected)
Set the indicator.
Set the ID comparison condition.
Set data reference values a and b.
Set the Cycle Count comparison condition.
Set data reference values a and b.
Set the data length.
Set the comparison start position.
Set the comparison condition.
Set data reference values a and b.
Set the comparison range.
Set whether to use a signed or unsigned data format.
Set the byte order.
Set Data2.

ID OR Mode (ID OR)

Setting Trigger Conditions (Condition Setup)

Press the **Mode** soft key, the **ID OR** soft key, and then the **Condition Setup** soft key to display the following screen.

The DLM4000 triggers when the condition of one of the four IDs is met. Items whose check boxes are selected are used as trigger conditions.

Select an ID's check box to use it as a trigger condition.

ID	Check Box	ID Condition	a	b	Cycle Count Condition	a	b
ID1	<input checked="" type="checkbox"/>	ID = a	1	2047	$a < CC < b$	0	63
ID2	<input checked="" type="checkbox"/>	ID = a	1	2047	Don't Care	0	63
ID3	<input checked="" type="checkbox"/>	ID = a	1	2047	Don't Care	0	63
ID4	<input checked="" type="checkbox"/>	ID = a	1	2047	Don't Care	0	63

Set the ID comparison condition.

Set data reference values a and b.

Set the Cycle Count comparison condition.

Select Don't Care if you do not want to make the cycle count a trigger condition for ID2.

Push = 0.00V
CH1 Level
4.00V

2.10 Triggering on CAN Bus Signals (Option)

This section explains the following settings (which are used when triggering on CAN bus signals).

- Trigger source
 - Bit rate, recessive level, sample point, and the level used to detect the source state
- Trigger type
 - Trigger condition


► “CAN Bus Trigger [ENHANCED, option]” in the Features Guide

Auto Setup

The DLM4000 can automatically set the trigger source level and bit rate from the received CAN bus signal and trigger on them. For details, see section 12.2.

ENHANCED CAN Menu

Press **ENHANCED**, the **Type** soft key, the **Serial** soft key, and then the **CAN** soft key to display the following menu.

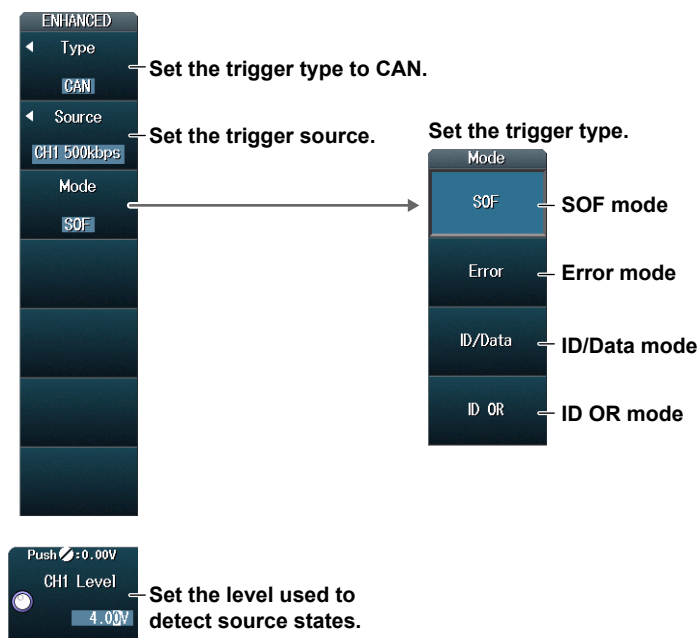

Setting the Trigger Source (Source)

Press the **Source** soft key to display the following menu.

Source

Source

Set the trigger source (CH1 to CH8).

Bit Rate

Set the bit rate (33.3 kbps, 83.3 kbps, 125 kbps, 250 kbps, 500 kbps, 1 Mbps, User Define).

Recessive

Set the recessive level (H, L).

Coupling

Set the trigger coupling, HF rejection, and noise rejection. ▶ section 2.3

HF Rejection

Noise Rejection

Set the sample point.

When the Bit Rate Is Set to User Define

Bit Rate

Recessive

Coupling

HF Rejection

Noise Rejection

Set the bit rate.

Set the sample point.

Trigger Type (Mode)

SOF (Start of Frame) Mode

Press the **Mode** soft key and then the **SOF** soft key.

The DLM4000 triggers on the start of CAN bus signal frames.

Error Mode (Error)

Press the **Mode** soft key, the **Error** soft key, and then the **Error Type OR** soft key to display the following menu.

Error Type OR

Error Frame

Turn error detection on or off for Error Frame, Stuff, and CRC errors.

Stuff

CRC

The DLM4000 triggers on error frames (when the error flag is active) or when it detects various errors.

ID/Data Mode (ID/Data)


Setting Trigger Conditions (Condition Setup)

Press the **Mode** soft key, the **ID/Data** soft key, and then the **Condition Setup** soft key to display the following screen.

The DLM4000 triggers on the AND of the SOF, ID, frame type (Remote Frame or Data Frame), Data, and ACK conditions. Items whose check boxes are selected are used as trigger conditions.




• When the Comparison Condition Is True or False

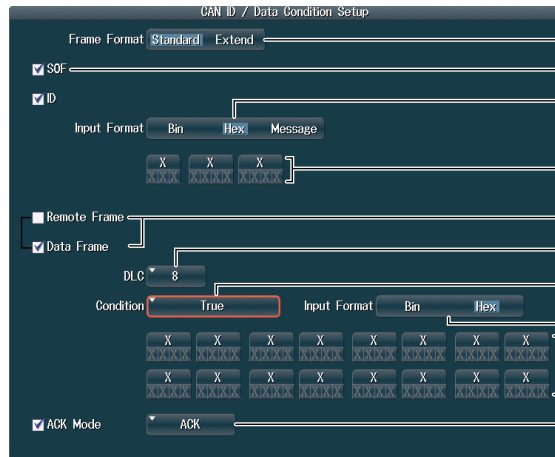

- Set the frame format.
- SOF (always selected)
- Set the ID input format (Bin, Hex).
- Set the ID bit pattern.
If you select Extend for the frame format, 29 bits are displayed here.
- Set the trigger source frame.
- Set the data length for the data field.
- Set the comparison condition.
- Set the data pattern input format.
- Set the data pattern.
- Set the ACK slot state.




• When the Comparison Condition Is Data = a; Data ≠ a; a ≤ Data; Data ≤ b; a ≤ Data ≤ b; or Data < a, b < Data

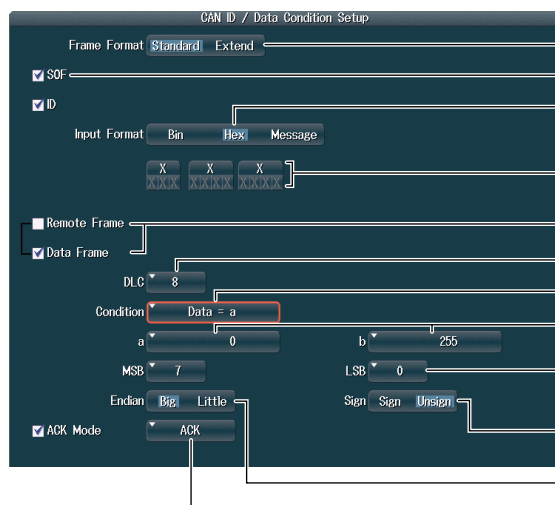

- Set the frame format.
- SOF (always selected)
- Set the ID input format (Bin, Hex).
- Set the ID bit pattern.
If you select Extend for the frame format, 29 bits are displayed here.
- Set the trigger source frame.
- Set the data length for the data field.
- Set the comparison condition.
- Set data reference values a and b.
- Set the bit positions of the most significant bit (MSB) and the least significant bit (LSB) in the data that you will compare.
- Set whether to use a signed (Sign) or unsigned (Unsign) data format.
- Set the byte order.
- Set the ACK slot state.

• When ID Input Format Is Message

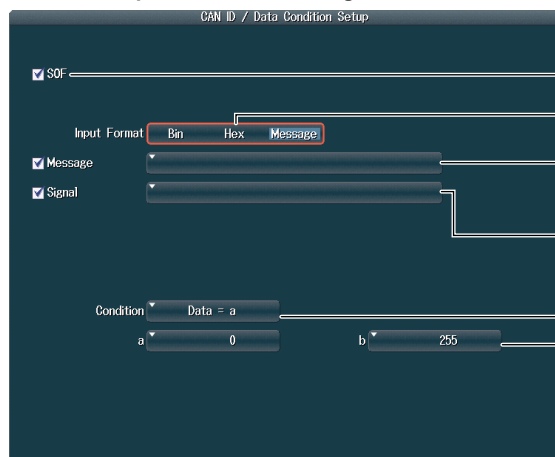

- SOF (always selected)
- Set the ID input format (Message).
- Select an ID from the message list in the loaded physical value/symbol definition file (.sbl).
- Select a data item from the signal list in the loaded physical value/symbol definition file (.sbl).
- Set the comparison condition.
- Set data reference values a and b.

ID OR Mode (ID OR)

Setting Trigger Conditions (Condition Setup)

Press the **Mode** soft key, the **ID OR** soft key, and then the **Condition Setup** soft key to display the following screen.

The DLM4000 triggers on the AND of the SOF, frame type (Remote Frame or Data Frame), and ACK conditions and of the condition of one of the four IDs. Items whose check boxes are selected are used as trigger conditions.

When ID Input Format Is Bin or Hex

Annotations for the Bin/Hex format screen:

- Set the frame format. (Frame Format: Standard, Extend)
- SOF (always selected) (SOF checkbox)
- Set the ID input format (Bin, Hex). (Input Format: Bin, Hex, Message)
- Set the ID bit pattern. If you select Extend for the frame format, 29 bits are displayed here. (ID1, ID2, ID3, ID4 bit patterns)
- Set the trigger source frame. (Remote Frame, Data Frame checkboxes)
- Set the ACK slot state. (ACK Mode: ACK)

When ID Input Format Is Message

Annotations for the Message format screen:

- SOF (always selected) (SOF checkbox)
- Set the ID input format (Message). (Input Format: Bin, Hex, Message)
- Select IDs from the list of messages loaded from the physical value/symbol definition file (.sbl). (ID1, ID2, ID3, ID4 dropdown menus)

On the left, a sidebar shows the navigation menu: Type (CAN), Source (CH1 500kbps), Mode (ID OR), and Condition Setup. Below it, a status bar shows: Push = 0.00V, CH1 Level 4.00V.

2.11 Triggering on LIN Bus Signals (Option)

This section explains the following settings (which are used when triggering on LIN bus signals).

- Trigger source
 - Bit rate, sample point, and the level used to detect the source state
- Trigger type
 - Trigger condition


► [“LIN Bus Trigger \[ENHANCED, option\]” in the Features Guide](#)

Auto Setup

The DLM4000 can automatically set the trigger source level and bit rate from the received LIN bus signal and trigger on them. For details, see section 12.3.

ENHANCED LIN Menu

Press **ENHANCED**, the **Type** soft key, the **Serial** soft key, and then the **LIN** soft key to display the following menu.

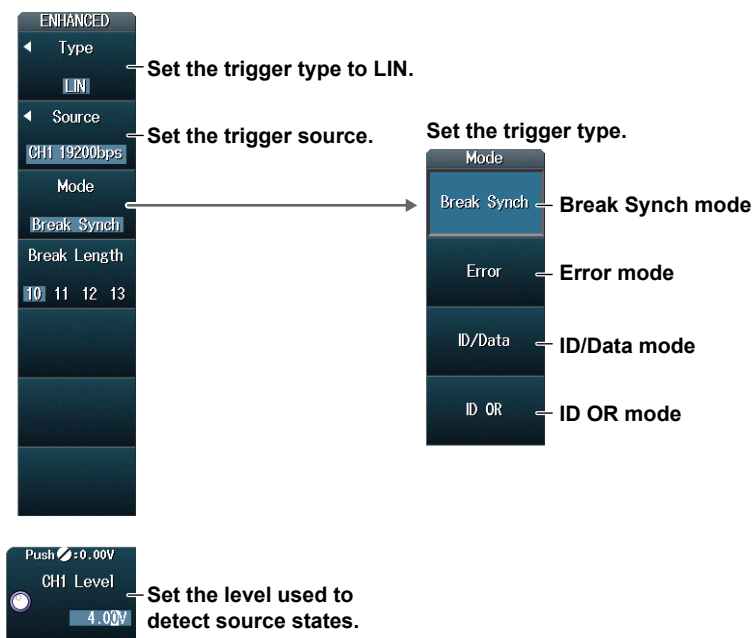

Setting the Trigger Source (Source)

Press the **Source** soft key to display the following menu.

Set the trigger source (CH1 to CH8).

Set the bit rate (1200 bps, 2400 bps, 4800 bps, 9600 bps, 19200 bps, User Define).

Set the trigger coupling, HF rejection, and noise rejection.
► section 2.3

Set the sample point.

When the Bit Rate Is Set to User Define

Set the bit rate.

Set the sample point.

Trigger Type (Mode)

Break Synch Mode

Press the **Mode** soft key and then the **Break Synch** soft key to display the following menu.

Set the low-pulse bit length that is used to detect breaks (10, 11, 12, 13).

The DLM4000 triggers when it detects a break field and then a synch field (Break Field + Synch Field).

Error Mode

Press the **Mode** soft key, the **Error** soft key, and then the **Error Type OR** soft key to display the following menu.

Turn error detection on or off for Parity and Sync errors.

The DLM4000 triggers when it detects an error.

ID/Data Mode

Setting Trigger Conditions (Condition Setup)

Press the **Mode** soft key, the **ID/Data** soft key, and then the **Condition Setup** soft key to display the following screen.

The DLM4000 triggers on the AND of the Break Synch, ID, and Data conditions. Items whose check boxes are selected are used as trigger conditions.

When the Comparison Condition Is True or False

- Break Synch (always selected)
- Set the ID input format.
- Set the ID bit pattern.
- Set the data length.
- Set the comparison condition.
- Set the data pattern input format.
- Set the data pattern.

When the Comparison Condition Is Data = a; Data ≠ a; a ≤ Data; Data ≤ b; a ≤ Data ≤ b; or Data < a, b < Data


- Break Synch (always selected)
- Set the ID input format.
- Set the ID bit pattern.
- Set the data length.
- Set the comparison condition.
- Set data reference values a and b.
- Set the bit positions of the most significant bit (MSB) and the least significant bit (LSB) in the data that you will compare.
- Set whether to use a signed (Sign) or unsigned (Unsign) data format.
- Set the byte order.

ID OR Mode

Setting Trigger Conditions (Condition Setup)

Press the **Mode** soft key, the **ID OR** soft key, and then the **Condition Setup** soft key to display the following screen.

The DLM4000 triggers on the AND of the Break Synch condition and the condition of one of the four IDs. Items whose check boxes are selected are used as trigger conditions.

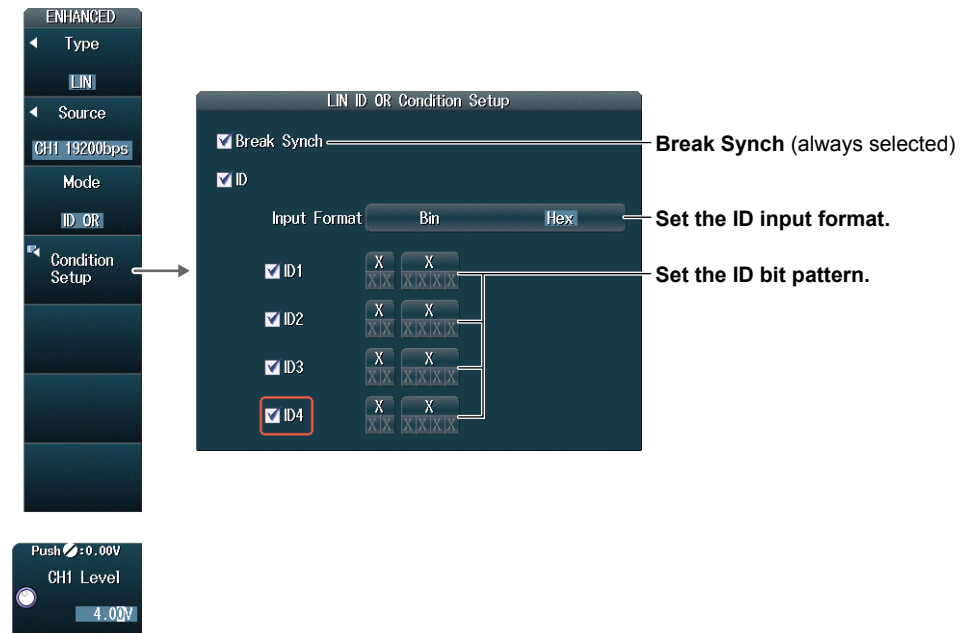

2.12 Triggering on UART Signals (Option)

This section explains the following settings (which are used when triggering on UART signals).

- Trigger source
 - Bit rate, sample point, bit order, polarity, and the level used to detect the source state
- Format
- Trigger type
 - Trigger condition


► “UART Trigger [ENHANCED, option]” in the Features Guide

Auto Setup

The DLM4000 can automatically set the trigger source level and bit rate from the received UART signal and trigger on them. For details, see section 12.4.

ENHANCED UART Menu


Press **ENHANCED**, the **Type** soft key, the **Serial** soft key, and then the **UART** soft key to display the following menu.

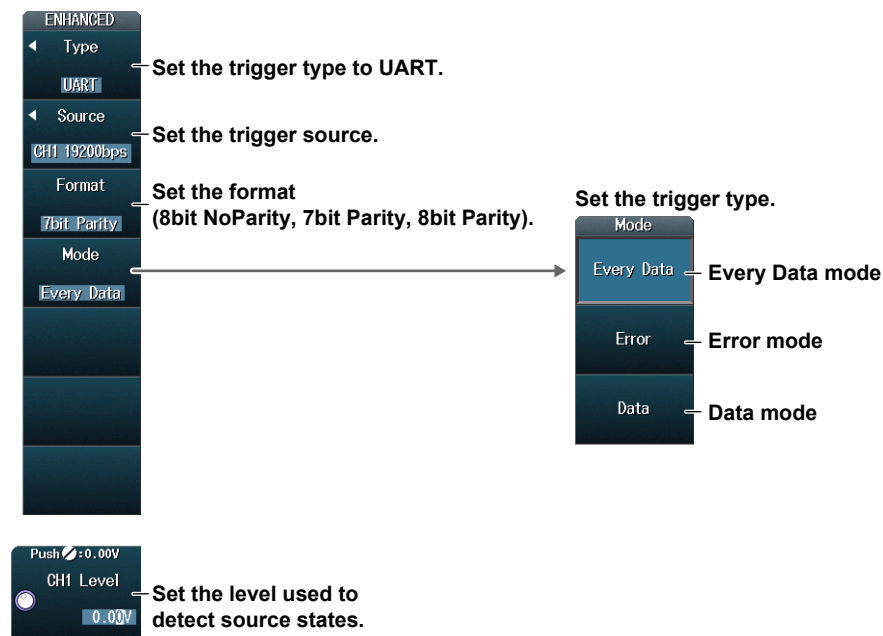


Setting the Trigger Source (Source)

Press the **Source** soft key to display one of the menus shown below. The menu that is displayed varies depending on the specified trigger source.

When the Trigger Source Is a Channel from CH1 to CH8

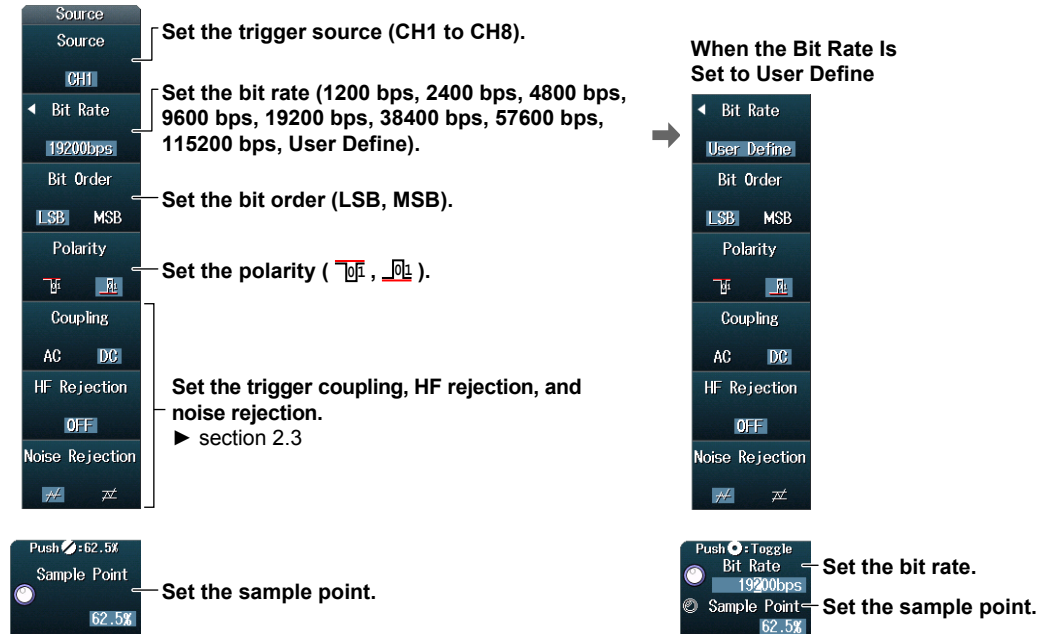

When the Trigger Source Is LOGIC(L) or LOGIC(A|B)

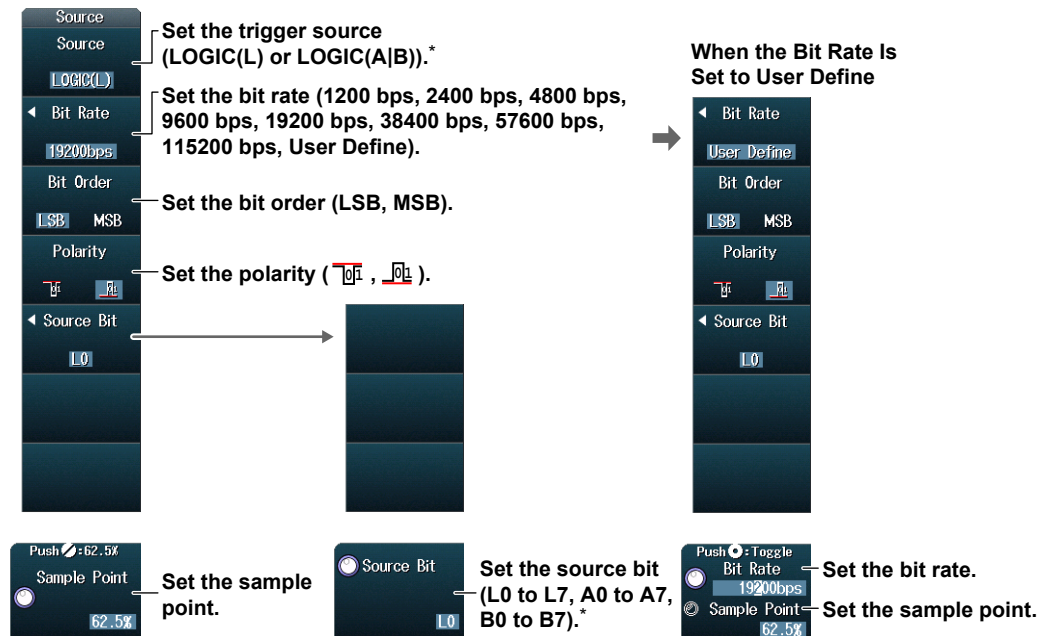

* You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated.

LOGIC(A|B), A0 to A7, and B0 to B7 are available on models with the /L16 option.

Trigger Type (Mode)


Every Data Mode

Press the **Mode** soft key and then the **Every Data** soft key.
The DLM4000 triggers on all data.


Error Mode

Press the **Mode** soft key, the **Error** soft key, and then the **Error Type** or **Error Type OR** soft key to display the following menu.

When the format is set to
8bit NoParity

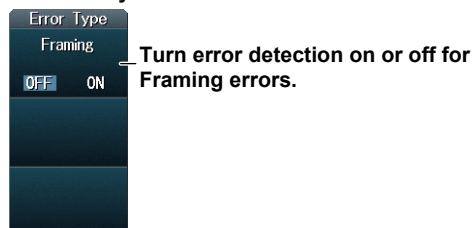

When the format is set to
7bit Parity or 8bit Parity

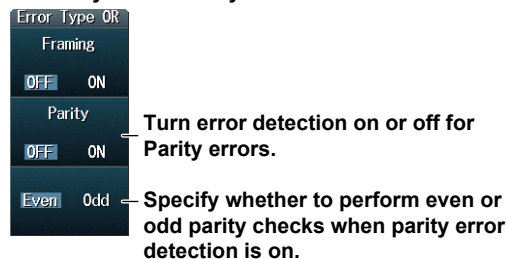

* Format setting ► page 2-28


The DLM4000 triggers when it detects an error.

Data Mode

Setting Trigger Conditions (Condition Setup)

Press the **Mode** soft key, the **Data** soft key, and then the **Condition Setup** soft key to display the following screen.

The DLM4000 triggers when the data pattern is matched.

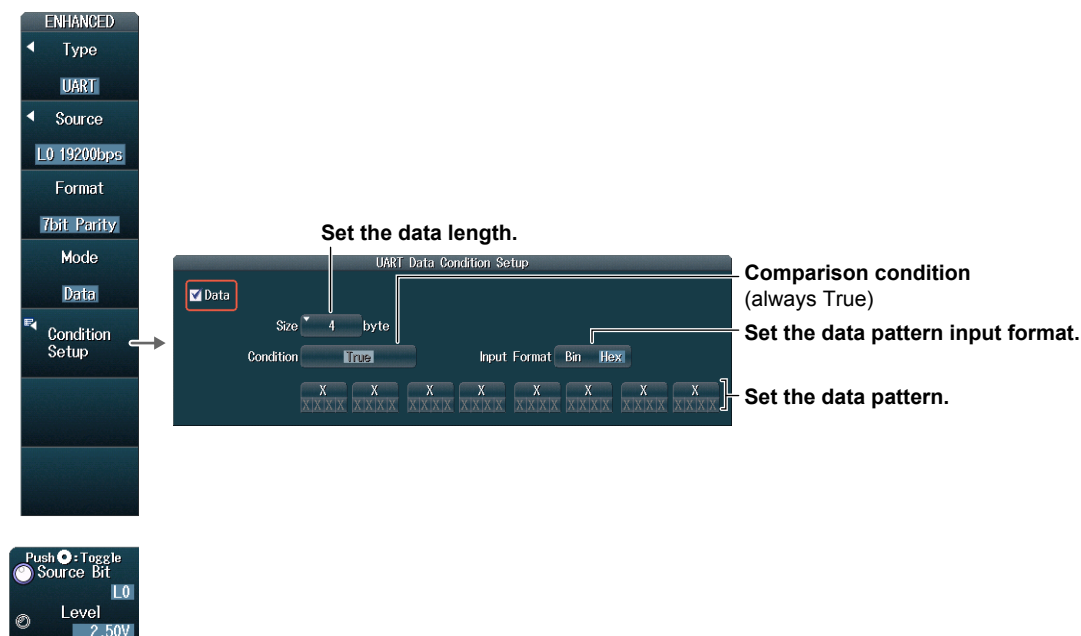

2.13 Triggering on I²C Bus Signals (Option)

This section explains the following settings (which are used when triggering on I²C bus signals).

- SCL source and SDA source
- Trigger type
- Level used to detect source states
- Trigger condition


► “I²C Bus Trigger [ENHANCED, option]” in the Features Guide

Auto Setup

The DLM4000 can automatically set the source level from the received I²C bus signal and trigger on it. For details, see section 12.5.

ENHANCED I2C Menu


Press **ENHANCED**, the **Type** soft key, the **Serial** soft key, and then the **I2C** soft key to display the following menu.

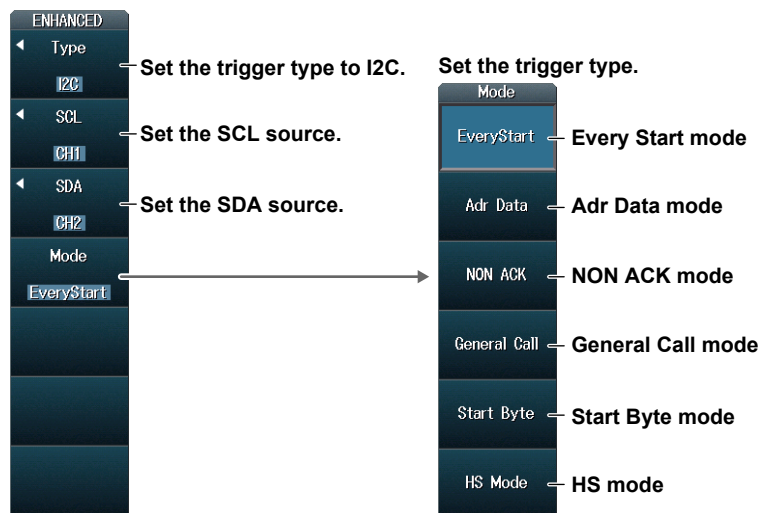

Setting the SCL Source (SCL)

Press the **SCL** soft key to display one of the menus shown below. The menu that is displayed varies depending on the specified source.

When the SCL Source Is a Channel from CH1 to CH8

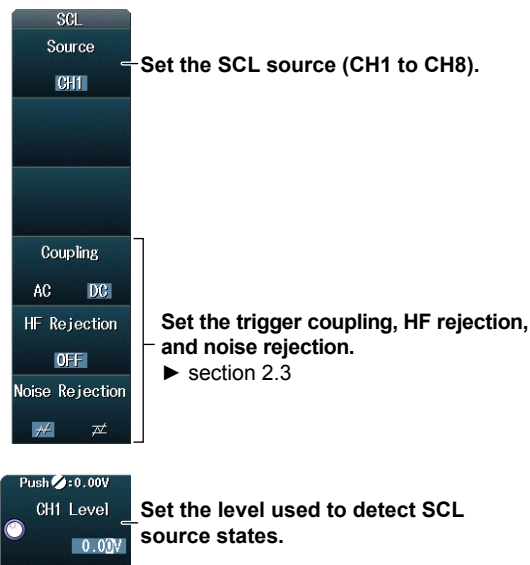

When the SCL Source Is LOGIC(L) or LOGIC(A|B)*




* You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated. LOGIC(A|B), A0 to A7, and B0 to B7 are available on models with the /L16 option.

Setting the SDA source (SDA)

Press the **SDA** soft key to display one of the menus shown below. The menu that is displayed varies depending on the specified source.

When the SDA Source Is a Channel from CH1 to CH8

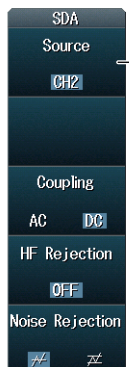

Set the SDA source.


- When the SCL source is a channel from CH1 to CH4, set the SDA source to a channel from CH1 to CH4.
- When the SCL source is a channel from CH5 to CH8 or LOGIC(L), set the SDA source to a channel from CH5 to CH8.

Set the trigger coupling, HF rejection, and noise rejection.
► section 2.3



Set the level used to detect SDA source states.

When the SDA Source Is LOGIC(L)

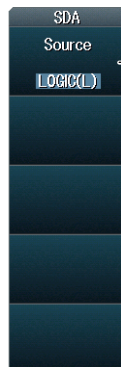

Set the SDA source (LOGIC(L)).

This setting can only be selected when the SCL source is set to CH5 to CH7 or LOGIC(L).




Set the source bit (L0 to L7).

Set the level used to detect SDA source states.

* You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated.

When the SCL Source Is LOGIC(A|B)

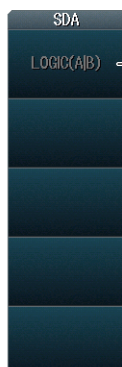

The SDA source is fixed to LOGIC(A|B).



Set the source bit (A0 to A7, B0 to B7).

Set the level used to detect SDA source states.

* LOGIC(A|B) is available on models with the /L16 option.

Trigger Type (Mode)


Every Start Mode

Press the **Mode** soft key and then the **Every Start** soft key.

The DLM4000 triggers when it detects a start condition.

Adr Data Mode

Press the **Mode** soft key and then the **Adr Data** soft key to display the following menu.

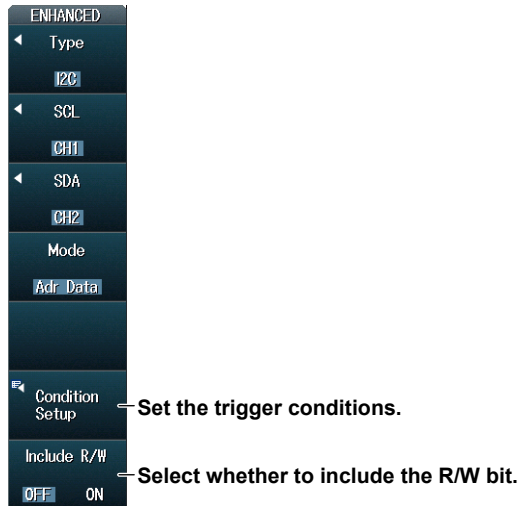

R/W Bit Inclusion (Include R/W)

When setting the address in hexadecimal, specify whether to include the R/W bit (ON) or omit it (OFF) in the address pattern.

Note

You can set R/W bit inclusion (Include R/W) under the conditions listed below. The setting is universal.

- When the I²C bus trigger type is Adr Data.
- When the I²C bus trigger type is set to General Call and Second Byte is set to Master Adr.
- When the I²C bus signal is being analyzed or searched.

2.13 Triggering on I²C Bus Signals (Option)

Setting Trigger Conditions (Condition Setup)

Press the **Condition Setup** soft key to display the following screen.

The DLM4000 triggers on the AND of the start, address pattern, data pattern, and comparison start position conditions. Items whose check boxes are selected are used as trigger conditions.

• When Address Type Is 7bit Address

Start (always selected)

Set the address input format.

Set the address type (7bit Address).

Set the address pattern.

- When the R/W bit is not included
- When the R/W bit is included


Set the data length.

Set the comparison start position.

Set the data pattern input format.

Set the comparison condition.

Set the data pattern.

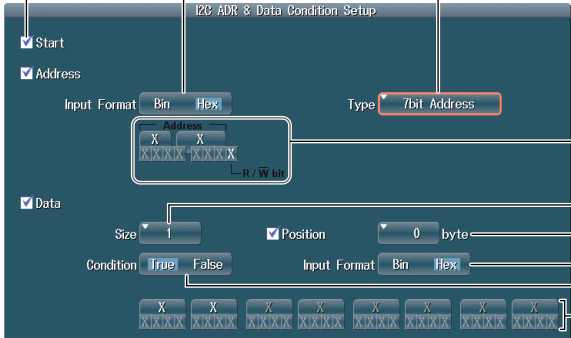

• When Address Type Is 7bit + Sub Adr

Start (always selected)

Set the address input format.

Set the address type (7bit + Sub Adr).

Set the address pattern.

- When the R/W bit is not included
- When the R/W bit is included


Set the data length.

Set the comparison start position.

Set the data pattern input format.

Set the comparison condition.

Set the data pattern.

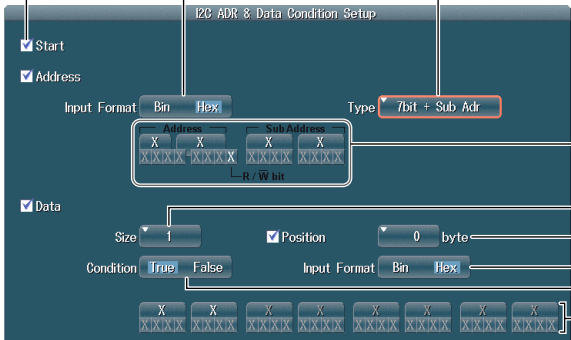

• When Address Type Is 10bit Address

Start (always selected)

Set the address input format.

Set the address type (10bit Address).

Set the address pattern.

- When the R/W bit is not included
- When the R/W bit is included


Set the data length.

Set the comparison start position.

Set the data pattern input format.


Set the comparison condition.

Set the data pattern.

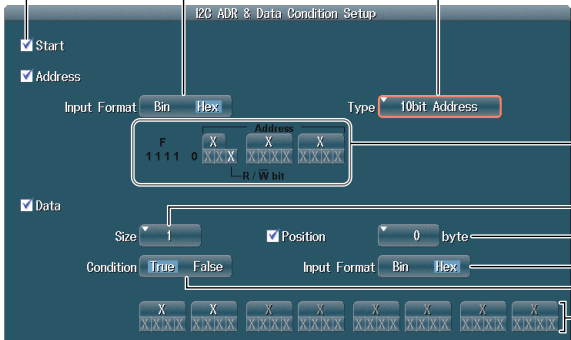

NON ACK Mode

Press the **Mode** soft key and then the **NON ACK** soft key to display the following menu.

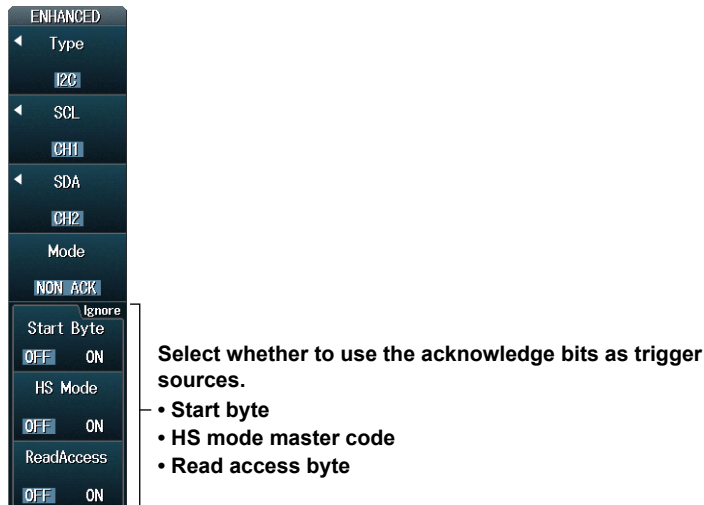


The DLM4000 triggers when the acknowledgement bit is Nack.

Selecting Whether to Use the Acknowledge Bits as Trigger Sources (Start Byte, HS Mode, ReadAccess)

You can select whether to use (OFF) or ignore (ON) the acknowledge bits that belong to the start byte (Start Byte), HS mode master code (HS Mode), and read access byte (Read Access).

General Call Mode

Press the **Mode** soft key and then the **General Call** soft key to display the following menu.

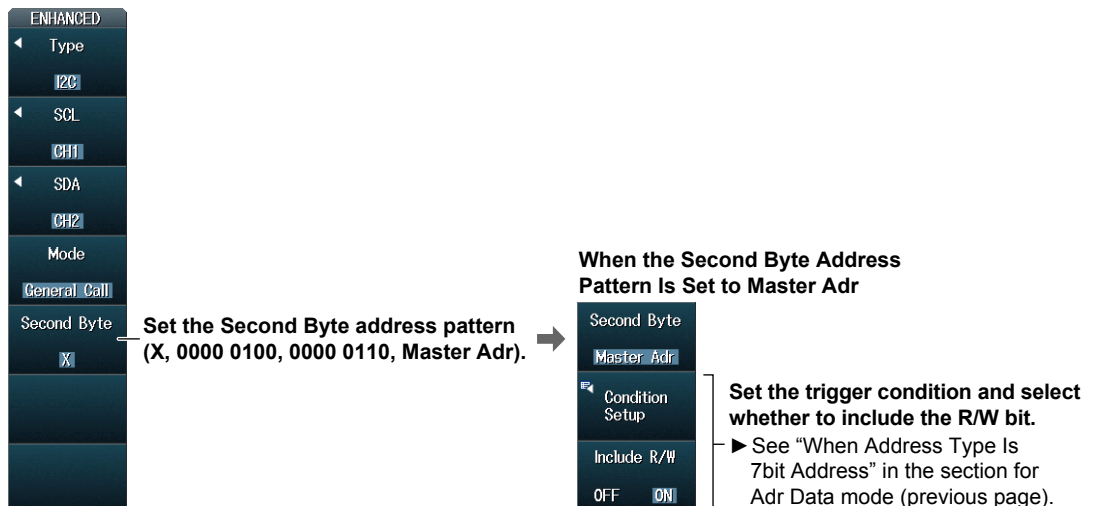

When Second Byte is set to Master Adr, the DLM4000 triggers on the AND of the general call address (0000 0000), second byte address pattern, data pattern, and comparison start position conditions. Items whose check boxes are selected in the Condition Setup screen are used as trigger conditions.

Start Byte Mode

Press the **Mode** soft key and then the **Start Byte** soft key.

The DLM4000 triggers when it detects the start byte master code.

HS Mode

Press the **Mode** soft key and then the **HS Mode** soft key.

The DLM4000 triggers when it detects the high speed mode master code.

2.14 Triggering on SPI Bus Signals (Option)

This section explains the following settings (which are used when triggering on SPI bus signals).

- Wiring system (Mode)
- Clock source, data source, chip select source
Polarity, active state, and the level used to detect source states
- Trigger condition

► “SPI Bus Trigger [ENHANCED, option]” in the Features Guide


Auto Setup

The DLM4000 can automatically set the source level from the received SPI bus signal and trigger on it. For details, see section 12.6.


ENHANCED SPI Menu

Press **ENHANCED**, the **Type** soft key, the **Serial** soft key, and then the **SPI** soft key to display the following menu.

When Wiring System Is 3 Wire

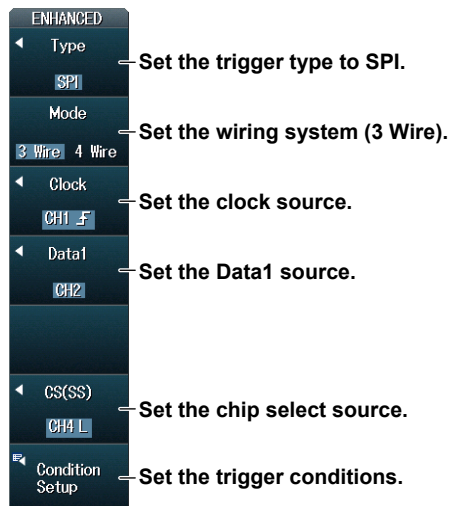


When Wiring System Is 4 Wire

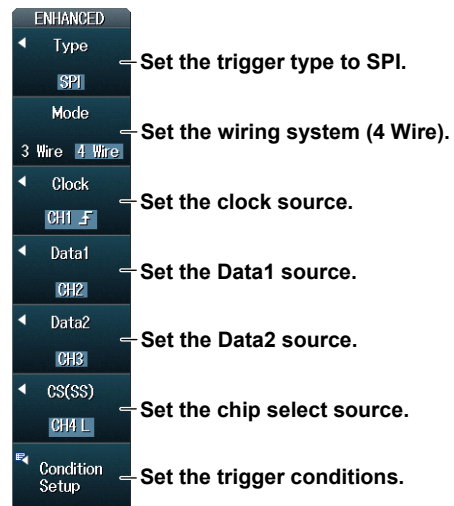


Setting the Clock Source (Clock)

Press the **Clock** soft key to display one of the menus shown below. The menu that is displayed varies depending on the specified clock source.

When the Clock Source Is a Channel from CH1 to CH8 *

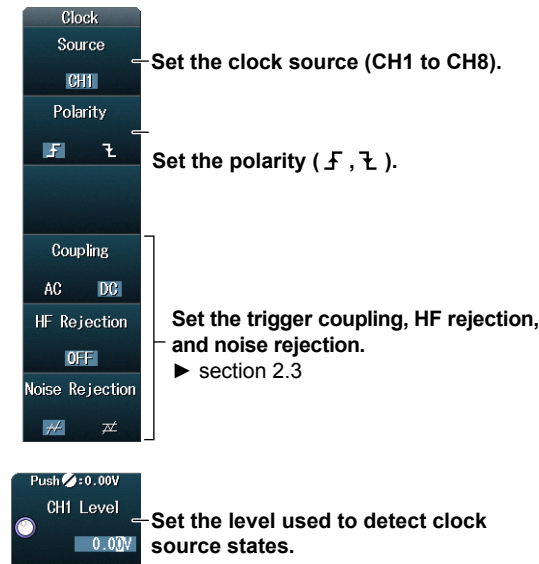

When the Clock Source Is LOGIC(L) or LOGIC(A|B) *

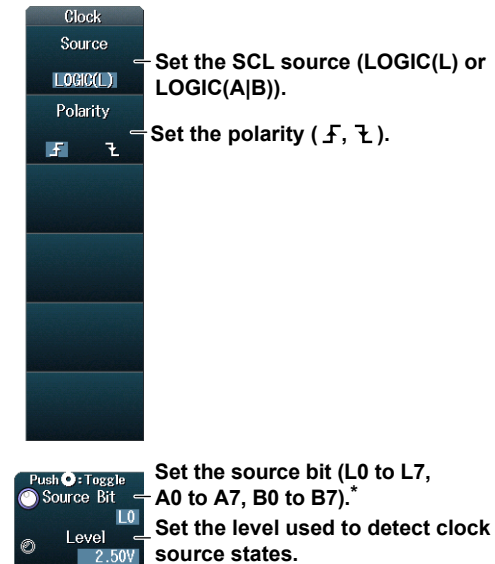


* You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated. LOGIC(A|B), A0 to A7, and B0 to B7 are available on models with the /L16 option.

Setting the Data1 Source (Data1)

Press the **Data1** soft key to display one of the menus shown below. The menu that is displayed varies depending on the specified data source.

When the Data1 Source Is a Channel from CH1 to CH8

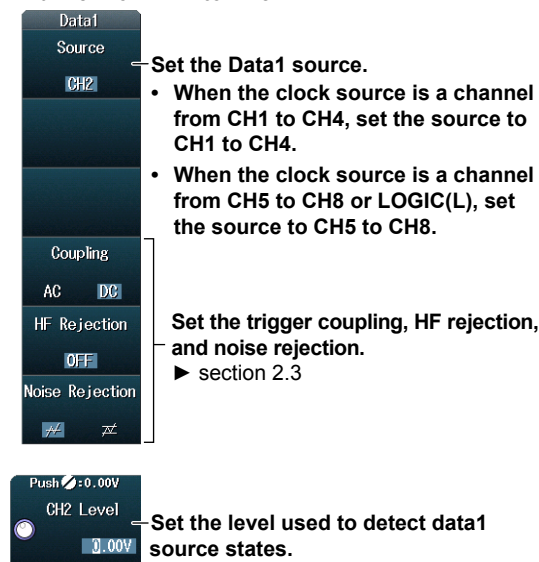



When the Data1 Source Is LOGIC(L)



* You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated.

2.14 Triggering on SPI Bus Signals (Option)

When the Clock Source Is LOGIC(A|B)

 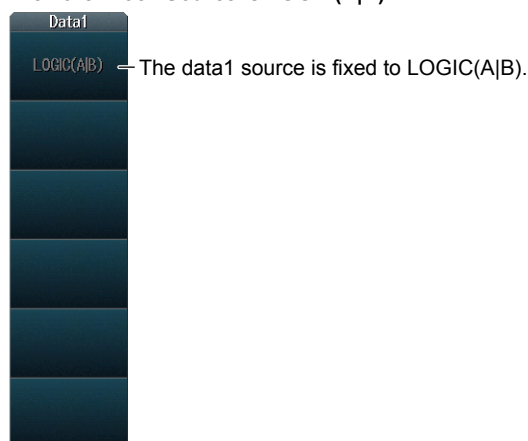

* LOGIC(A|B) is available on models with the /L16 option.

Setting the Data2 Source (Data2)

Press the **Data2** soft key to display the one of the same menus that appears when you set the Data1 source. The menu that is displayed varies depending on the specified data source.



When the wiring system is 4 Wire, you can set the Data2 source as indicated below.

- When the clock source is a channel from CH1 to CH4: Set the source to CH1 to CH4.
 - When the clock source is a channel from CH5 to CH8 or LOGIC(L): Set the source to CH5 to CH8 or LOGIC(L).
 - When the clock source is LOGIC(A|B): Fixed to LOGIC(A|B).
- * You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated. LOGIC(A|B) is available on models with the /L16 option.



Setting the Chip Select Source (CS(SS))

Press the **CS(SS)** soft key to display one of the menus shown below. The menu that is displayed varies depending on the specified data source.

 

When the Chip Select Source Is a Channel from CH1 to CH8

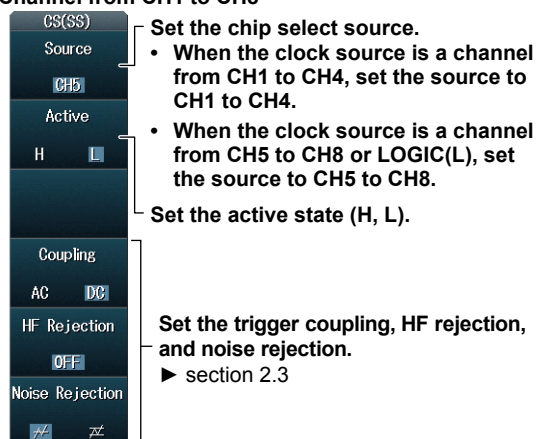

When the Chip Select Source Is LOGIC(L)

 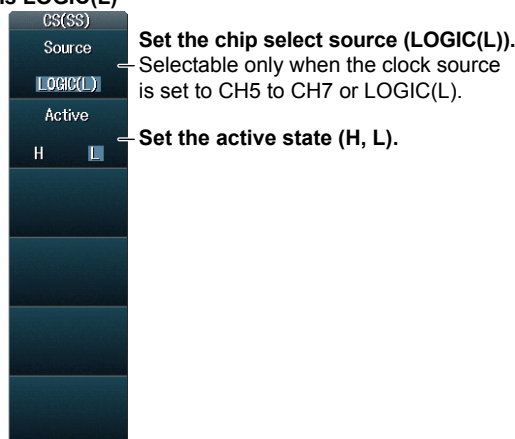

 * You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated.

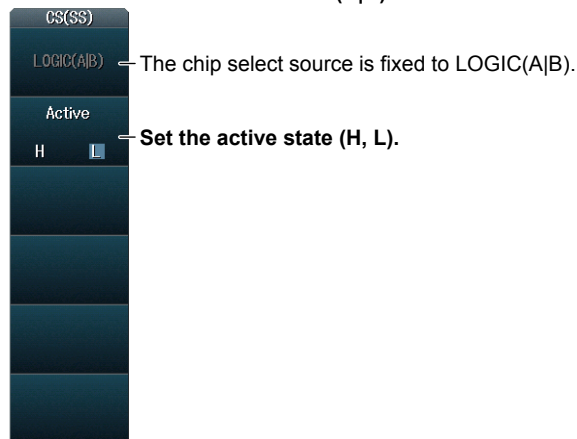When the Clock Source Is LOGIC(A|B)


* LOGIC(A|B) is available on models with the /L16 option.

Setting Trigger Conditions (Condition Setup)

Press the **Condition Setup** soft key to display the following screen.

When Wiring System Is 4 Wire

Set the trigger conditions for Data1 and Data2.

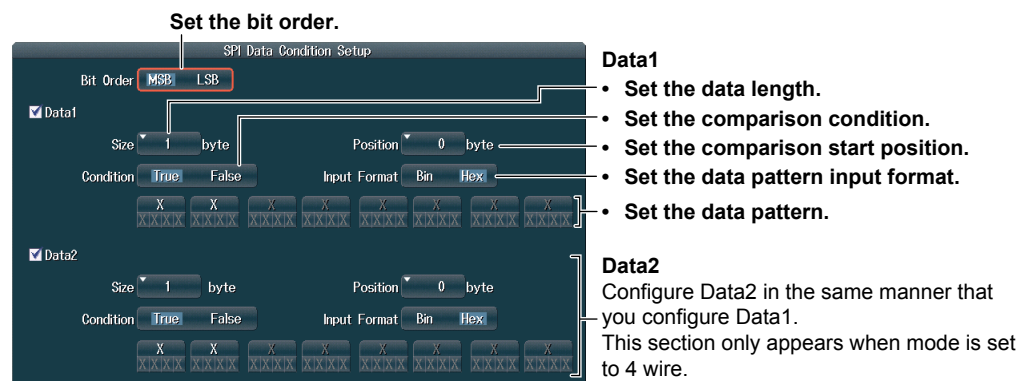**When Wiring System Is 3 Wire**

Only set the trigger condition for Data1.

2.15 Triggering on User-Defined Serial Bus Signals

This section explains the following settings (which are used when triggering on user-defined serial bus signals).


- Bit rate
- Data source, clock source, chip select source, and latch source
Level used to detect source states
- Trigger condition

► “User-Defined Serial Bus Trigger [User Define, ENHANCED]” in the Features Guide

ENHANCED User Define Menu

Press **ENHANCED**, the **Type** soft key, the **Serial** soft key, and then the **User Define** soft key to display one of the menus shown below. The menu that opens varies depending on whether the clock is on or off.

When the Clock Is Off

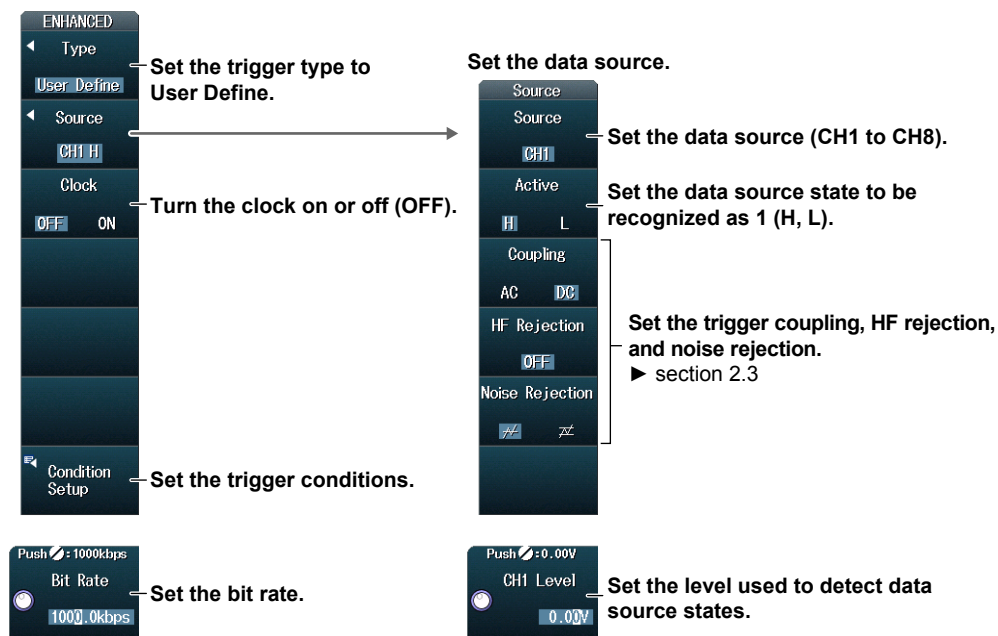


Setting the Data Source (Source)

Set the data source to compare with the pattern specified as a trigger condition.


Setting Trigger Conditions (Condition Setup)

Press the **Condition Setup** soft key to display the following screen.

You can use data patterns as trigger conditions. The data pattern trigger condition is met when the sampled data source pattern matches the specified pattern.

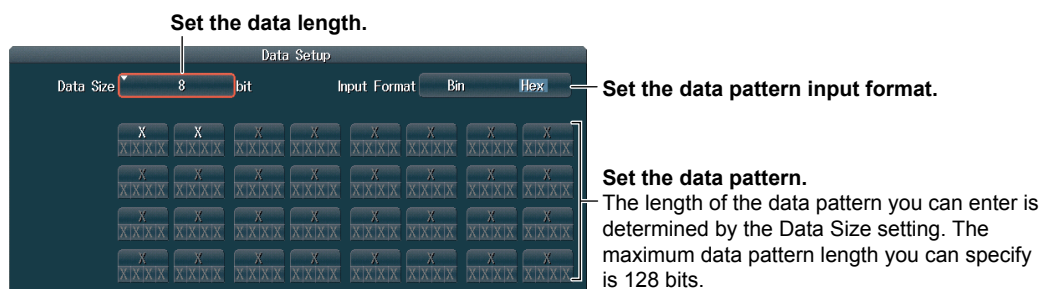

When the Clock Is On



ENHANCED

- Type: User Define — Set the trigger type to User Define.
- Source: CH1 H — Set the data source (CH1 to CH8).
- Clock: OFF ON — Turn the clock on or off (ON).
- Clock: CH2 F — Set the clock source.
- CS: X — Set the chip select source.
- Latch: X — Set the latch source.
- Condition Setup — Set the trigger conditions.


Press the **source** soft key and specify one of the channels from CH1 to CH8 to set that channel's source conditions.

Setting the Data Source (Source)

The menu is the same as the one shown on the previous page for when the clock is off.

Setting the Clock Source (Clock)

Press the **Clock** soft key to display the following menu.



Clock

- Source: CH2 — Set the clock source.
 - When the data source is a channel from CH1 to CH4, set the source to CH1 to CH4.
 - When the data source is a channel from CH5 to CH8, set the source to CH5 to CH8.
- Polarity: F L — Set the timing for data source sampling (F, L).
- Coupling: AC DC — Set the trigger coupling, HF rejection, and noise rejection.
 - HF Rejection: OFF
 - Noise Rejection: F L

► section 2.3

 

Push: 0.00V

CH2 Level: 0.00V — Set the level used to detect clock source states.

Specify which clock source edge causes the data source to be sampled.

Setting the Chip Select Source (CS)


Press the **CS** soft key to display the following menu.

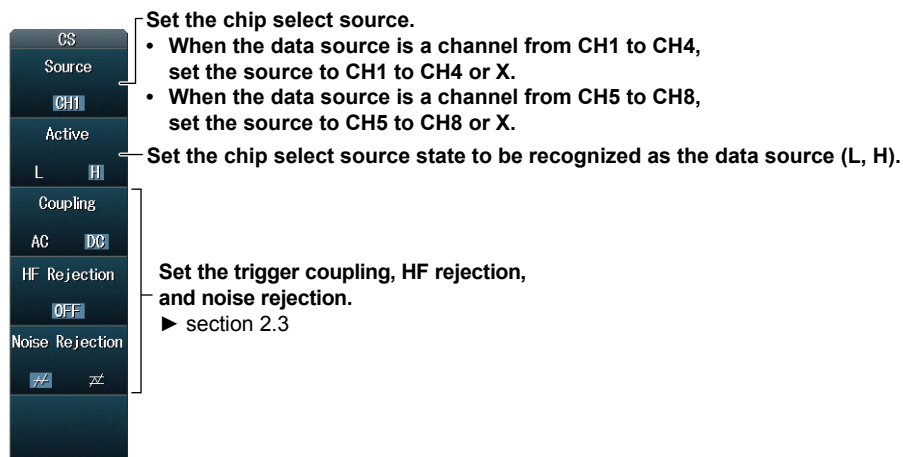

When the data source is sampled in sync with the clock source, the period for which the DLM4000 tests the data source can be controlled using the chip select source.

Setting the Latch Source (Latch)

Press the **Latch** soft key to display the following menu.

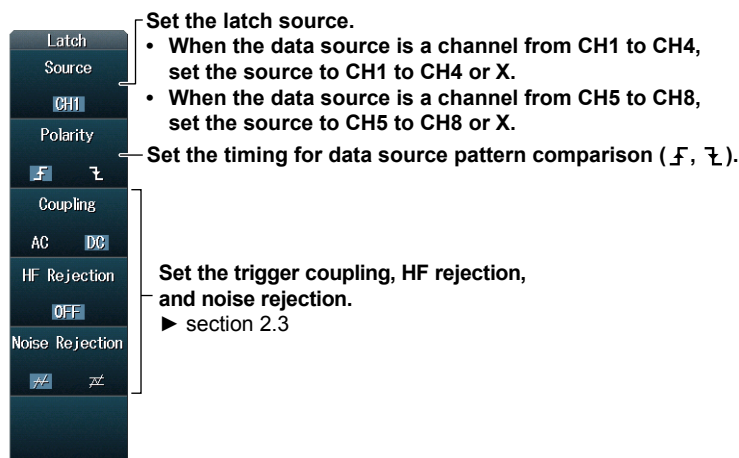

You can specify the timing at which the data source pattern sampled in sync with the clock source is compared with the specified pattern.

Setting Trigger Conditions (Condition Setup)

The menu is the same as the one shown two pages earlier for when the clock is off.

2.16 Triggering on a TV Trigger

This section explains the following settings (which are used when triggering on a TV trigger).

- Source
Polarity, line number, field number, frame skip, and the level used to detect source states
- Definition
- Horizontal sync frequency
- Sync guard frequency

► [“TV Trigger \[ENHANCED\]” in the Features Guide](#)

The DLM4000 displays different menus to match the selected broadcasting system.

ENHANCED NTSC Menu


Press **ENHANCED**, the **Type** soft key, the **TV** soft key, and then the **NTSC** soft key to display the following menu.

The image displays the ENHANCED NTSC Menu and its sub-menus with the following annotations:

- ENHANCED** (Top Bar)
- Type** (Soft Key) → Set the trigger type to NTSC.
- NTSC** (Soft Key)
- Source** (Soft Key) → Set the source (CH1 to CH8).
- Polarity** (Soft Key)
- Pos** (Soft Key) → Set the polarity (Pos, Neg).
- Line** (Soft Key) → Set the line number (One, All).
- One** (Soft Key)
- All** (Soft Key)
- Level** (Soft Key) → Set the level used to detect source states.
- 0.5div** (Soft Key)
- 0.3div** (Soft Key)
- When the Line Number Is Set to One** (Sub-menu)
 - Line** (Soft Key)
 - One** (Soft Key) → Set the field number (1, 2, X).
 - All** (Soft Key)
 - Field** (Soft Key)
 - 1** (Soft Key)
 - 2** (Soft Key)
 - X** (Soft Key)
 - Frame Skip** (Soft Key)
 - 1** (Soft Key) → Set the frame skip (1, 2, 4, 8).
 - 2** (Soft Key)
 - 4** (Soft Key)
 - 8** (Soft Key)
- Push** (Soft Key) → Set the level used to detect source states.
- Toggle** (Soft Key)
- Level** (Soft Key)
- 0.5div** (Soft Key)
- Line No.** (Soft Key) → Set the line number.
- 5** (Soft Key)


ENHANCED PAL Menu

Press **ENHANCED**, the **Type** soft key, the **TV** soft key, and then the **PAL** soft key to display the following menu.

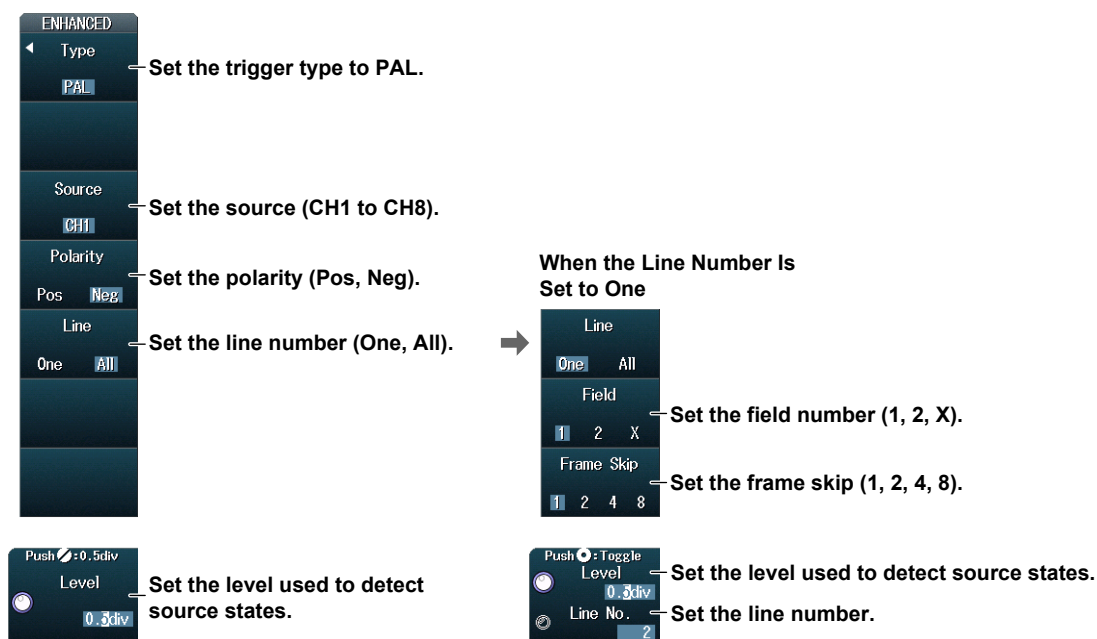


ENHANCED SDTV (480/60p) Menu

Press **ENHANCED**, the **Type** soft key, the **TV** soft key, and then the **SDTV(480/60p)** soft key to display the following menu.

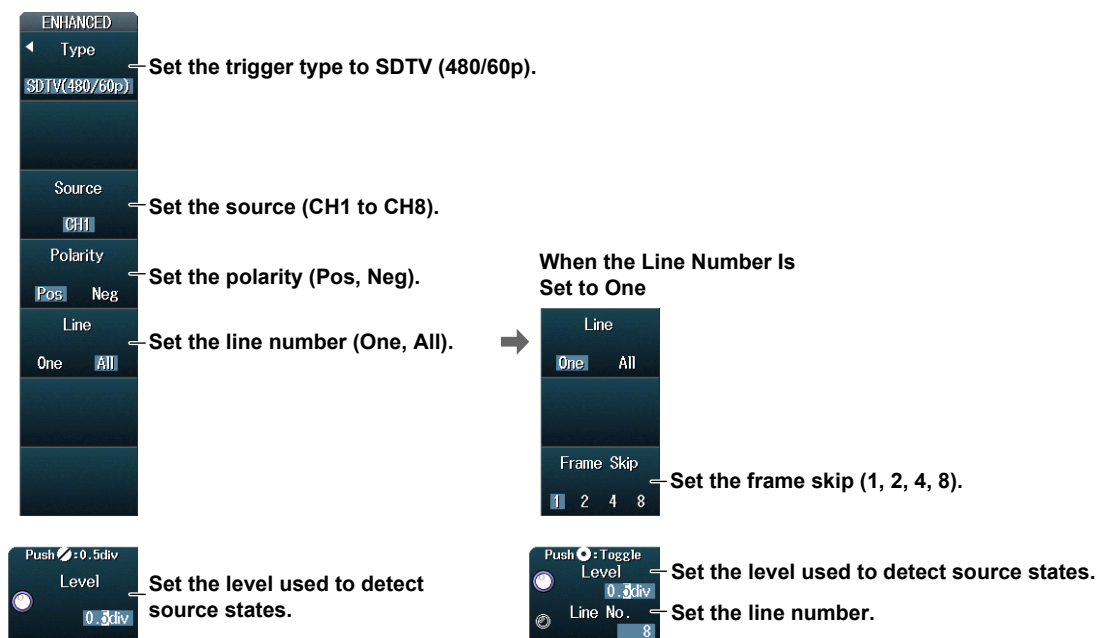

ENHANCED HDTV Menu

Press **ENHANCED**, the **Type** soft key, the **TV** soft key, and then the **HDTV** soft key to display the following menu.

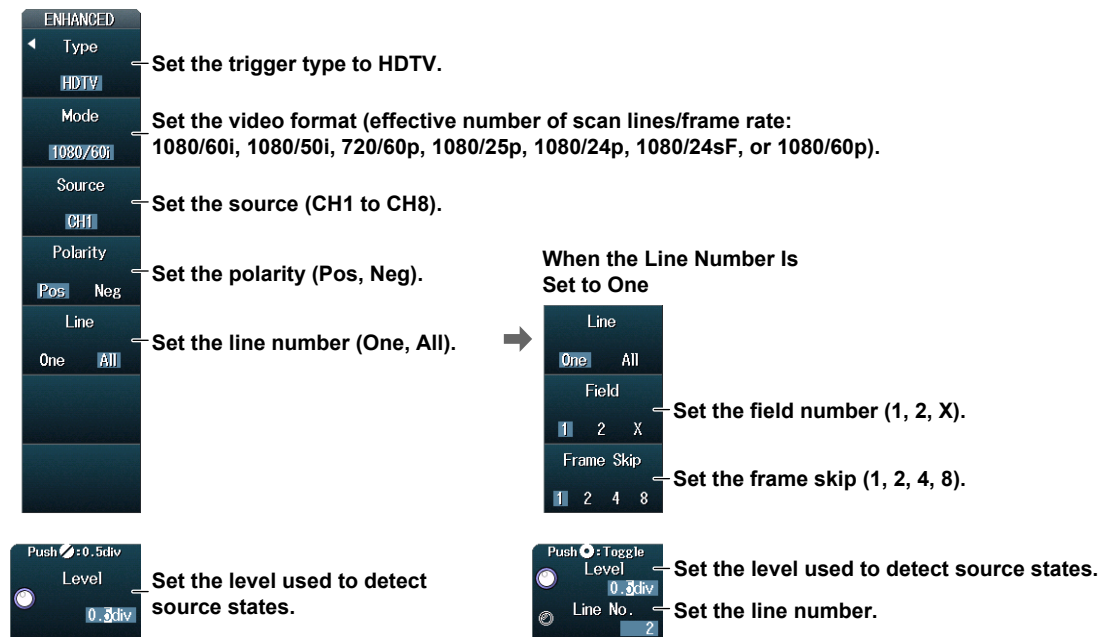

The diagram illustrates the navigation through the ENHANCED HDTV Menu. It starts with the main menu and branches into two paths based on the 'Line' setting.

Main Menu Options:


- Type:** Set the trigger type to HDTV.
- Mode:** Set the video format (effective number of scan lines/frame rate: 1080/60i, 1080/50i, 720/60p, 1080/25p, 1080/24p, 1080/24sF, or 1080/60p).
- Source:** Set the source (CH1 to CH8).
- Polarity:** Set the polarity (Pos, Neg).
- Line:** Set the line number (One, All).
- Level:** Set the level used to detect source states.

When the Line Number Is Set to One:

- Field:** Set the field number (1, 2, X).
- Frame Skip:** Set the frame skip (1, 2, 4, 8).
- Level:** Set the level used to detect source states.
- Line No.:** Set the line number.

ENHANCED UserdefTV Menu

Press **ENHANCED**, the **Type** soft key, the **TV** soft key, and then the **UserdefTV** soft key to display the following menu.

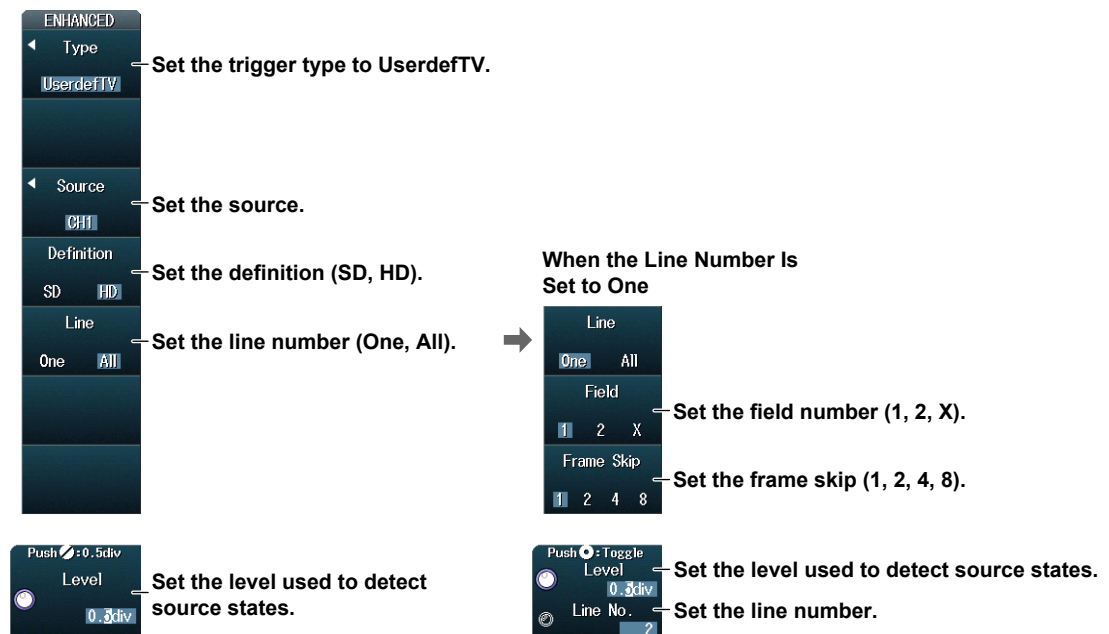

The diagram illustrates the navigation through the ENHANCED UserdefTV Menu. It starts with the main menu and branches into two paths based on the 'Line' setting.

Main Menu Options:

- Type:** Set the trigger type to UserdefTV.
- Source:** Set the source.
- Definition:** Set the definition (SD, HD).
- Line:** Set the line number (One, All).
- Level:** Set the level used to detect source states.


When the Line Number Is Set to One:

- Field:** Set the field number (1, 2, X).
- Frame Skip:** Set the frame skip (1, 2, 4, 8).
- Level:** Set the level used to detect source states.
- Line No.:** Set the line number.

2.16 Triggering on a TV Trigger

Setting the Source (Source)

Press the **Source** soft key to display the following menu.

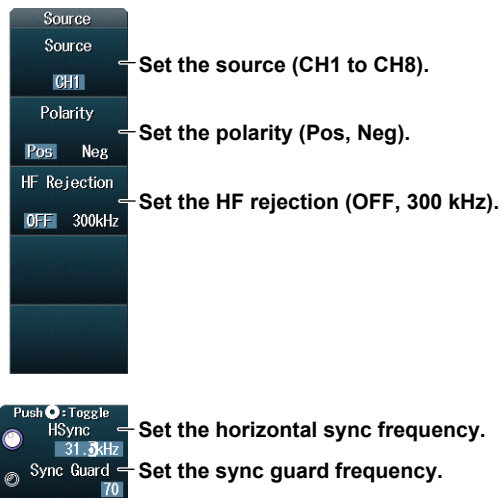

2.17 Triggering on Combination Triggers (B TRIG)


This section explains the following settings (which are used when triggering on a combination trigger).

- Combination
- A trigger: condition A
- B trigger: condition B
- Delay time for condition B
- Number of times condition B must be met

► “Trigger B [B TRIG]” in the Features Guide

B TRIG Menu

Press **B TRIG** to display the following menu.

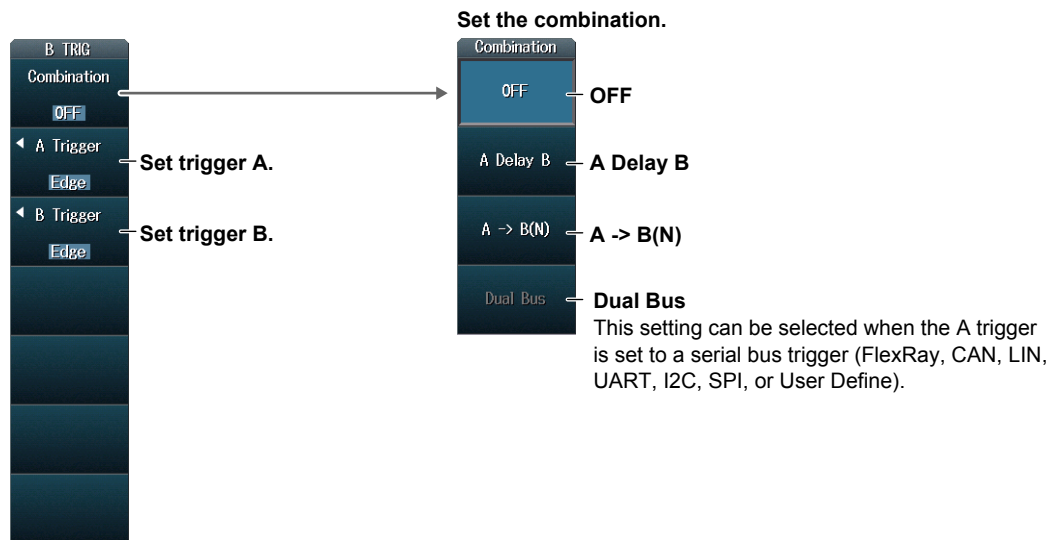


Setting the Combination (Combination)

OFF

Press the **Combination** soft key and then the **OFF** soft key.
The DLM4000 triggers when the trigger A conditions are met.

A Delay B

Press the **Combination** soft key and then the **A Delay B** soft key to display the following menu.

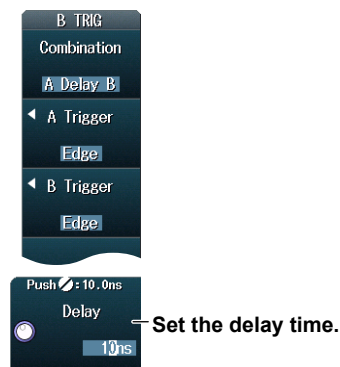


After the trigger A conditions are met and the specified amount of time (the delay time) elapses, the DLM4000 triggers when the trigger B conditions are met.

2.17 Triggering on Combination Triggers (B TRIG)

A -> B(N)

 Press the **Combination** soft key and then the **A -> B(N)** soft key to display the following menu.



← **Set the number of times condition B must be met.**

After the trigger A conditions are met, the DLM4000 triggers when the trigger B conditions are met N times.

Dual Bus

Press the **Combination** soft key and then the **Dual Bus** soft key to display the following menu.



← **Set trigger B.**

When condition A is set to a serial bus trigger, condition B is set to a different trigger, and the trigger combination is set to Dual Bus, condition B will change automatically to a serial bus trigger.

Of the serial bus triggers that can be used and are displayed on the menu, condition B will change to the top most serial bus trigger.

The DLM4000 triggers when the serial bus trigger A or B conditions are met.

Note

You can select Dual Bus when condition A is a serial bus trigger.

Setting Trigger Condition A (A Trigger)

Press the **A Trigger** soft key to display the following menu.

Trigger condition A is set to the trigger condition that has been set with the EDGE key or the ENHANCED key, whichever one is illuminated.

You can also set trigger condition A from the following menu.



Set the trigger type.

The specified trigger type menu appears.

For information on setting each trigger type, see its corresponding reference in the following table.

Trigger Type	Reference
Edge	Section 2.3
Edge OR	Section 2.4
Edge qualified	Section 2.5
State	Section 2.6
Pulse width	Section 2.7
State width	Section 2.8
FlexRay	Section 2.9
CAN	Section 2.10
LIN	Section 2.11
UART	Section 2.12
I2C	Section 2.13
SPI	Section 2.14
User-defined serial bus	Section 2.15
TV	Section 2.16

Setting Trigger Condition B (B Trigger)

Press the **B Trigger** soft key to display the following menu.

Set trigger B to one of the trigger types shown in the following table.



Set the trigger type.

The specified trigger type menu appears.

For information on setting each trigger type, see its corresponding reference in the following table.

Trigger Type	Reference
Edge	Section 2.3
Edge qualified	Section 2.5
State	Section 2.6
FlexRay	Section 2.9
CAN	Section 2.10
LIN	Section 2.11
UART	Section 2.12
I2C	Section 2.13
SPI	Section 2.14
User-defined serial bus	Section 2.15

2.18 Forcing the DLM4000 to Trigger (FORCE TRIG)

► [“Trigger Type \(Type\)” in the Features Guide](#)

Press **SHIFT+B TRIG** (FORCE TRIG).

2.19 Setting the Action-On-Trigger Function


This section explains the following settings (which are used when executing the action-on-trigger function).

- Action mode
- Action to execute
- The number of actions
- Action execution

► “Executing Actions” in the Features Guide

Action on Trig Menu

Press **SHIFT+MODE** (ACTION GO/NO-GO), the **Mode** soft key, and the **Action on Trig** soft key to display the following menu.

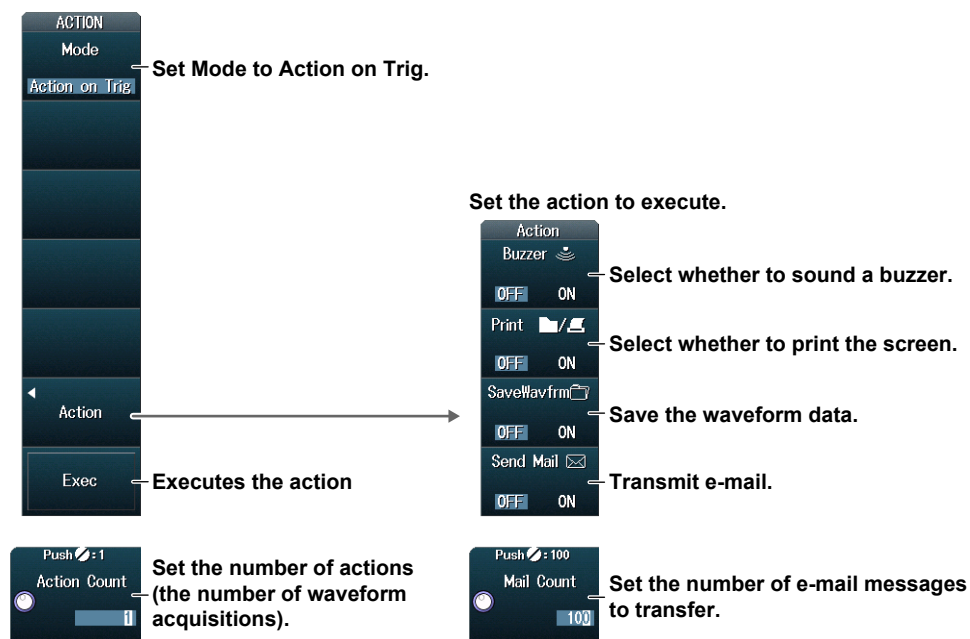

Executing Actions (Exec)

After specifying the action mode, the action to execute, and the number of actions, press the **Exec** soft key. The DLM4000 executes the action each time it triggers until the specified number of actions has been reached.

While actions are being executed, Exec changes to Abort. If you want to stop execution, press the **Abort** soft key.

Note

- If Print to is set to Multi on the PRINT menu, you cannot print or save screen captures even if you set Print to ON on the Action menu.
► section 16.5
- When the action to execute is e-mail transmission, the DLM4000 sends the number of messages specified by either Action Count or Mail Count, whichever is lower.

2.20 Performing GO/NO-GO Determination


This section explains the following settings (which are used when performing GO/NO-GO determination).

- Action mode
- The number of actions
- The number of NO-GO determinations
- Reference condition
- Reference standard
- Source Waveform
- Reference range type
- Rectangular zone, waveform zone, polygonal zone, or waveform parameters
- GO/NO-GO determination source window
- Action execution

► “Executing Actions” in the Features Guide

Action Go/Nogo Menu

Press **SHIFT+MODE** (ACTION GO/NO-GO), the **Mode** soft key, and the **Go/Nogo AND** or **Go/Nogo OR** soft key to display the following menu.

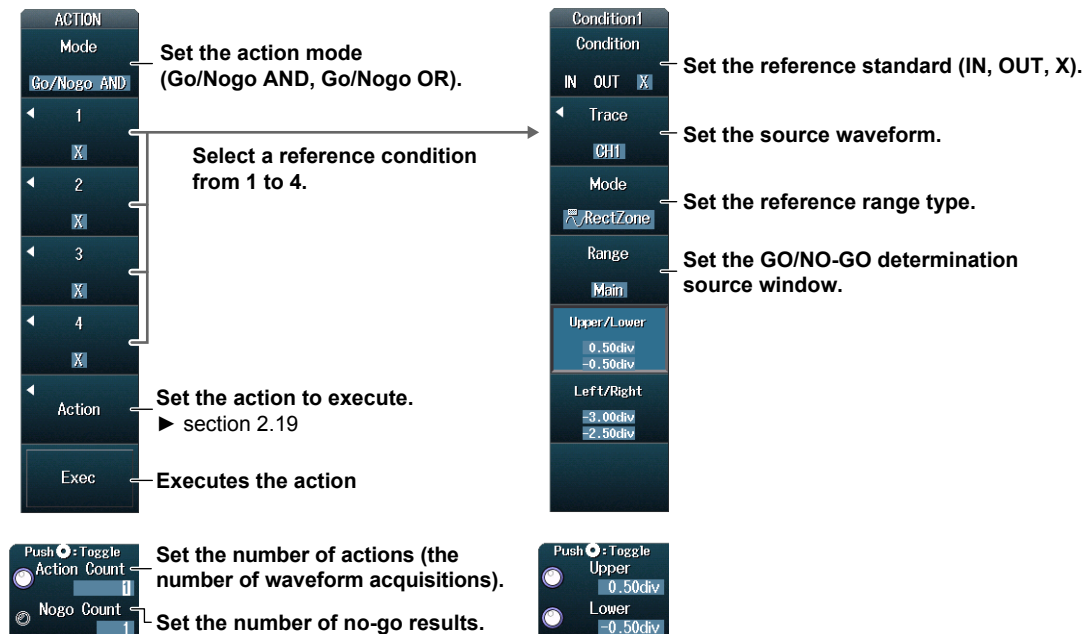

Executing Actions (Exec)

After specifying the action mode, the action to execute, the number of actions, the number of NO-GO determinations, the reference conditions, and the GO/NO-GO determination source window, press the **Exec** soft key. The DLM4000 executes actions until either the specified number of actions or the number of NO-GO determinations is reached.

While actions are being executed, Exec changes to Abort. If you want to stop execution, press the **Abort** soft key.

Note

- If Print to is set to Multi on the PRINT menu, you cannot print or save screen captures even if you set Print to ON on the Action menu.
► section 16.5
- When the action to execute is e-mail transmission, the DLM4000 sends the number of messages specified by either Action Count or Mail Count, whichever is lower.

Setting the Reference Range Type (Mode)

Press the **Mode** soft key to display the following menu.



Under the following circumstances, there are reference range types that you cannot specify.

- When the source waveform is LOGIC(L), LOGIC(A|B),* XY1 to XY4, FFT1, or FFT2
- When the reference condition is 2 or 4 and the source waveform is Math1 to Math4

Source Waveform	Reference Range Type			
	RectZone	WaveZone	PolygonZone	Parameter
CH1 to CH8	Yes	Yes	Yes	Yes
LOGIC(L) and LOGIC(A B)*	No	No	No	Yes
Math1 to Math4				
Reference condition 1 and 3	Yes	Yes	Yes	Yes
Reference condition 2 and 4	No	No	No	Yes
XY1 to XY4	Yes	No	Yes	Yes
FFT1 and FFT2	No	No	No	Yes

* LOGIC(A|B) is available on models with the /L16 option.


Note

Using the CH8 Terminal and LOGIC(L) Port

When you perform GO/NO-GO determination, you cannot use the CH8 terminal and LOGIC(L) port as the source at the same time. Specify the source that you want to use in advance by pressing either the CH8 key or the L key.

Rectangular Zone (RectZone)

Press the **RectZone** soft key to display the following menu.

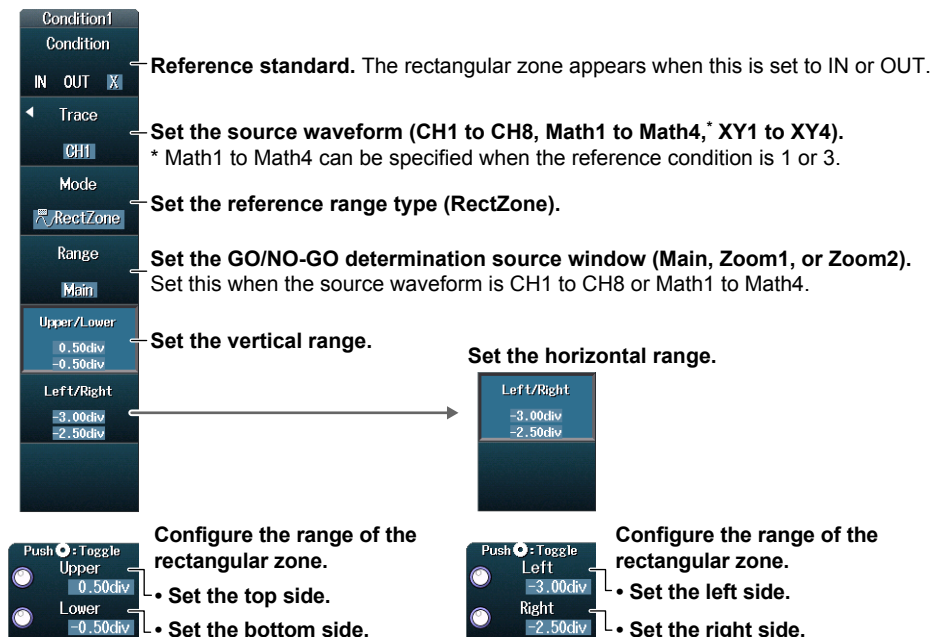

Waveform Zone (WaveZone)

Press the **WaveZone** soft key to display the following menu.

Condition1
Condition
IN OUT % — **Reference standard.** The waveform zone appears when this is set to IN or OUT.

Trace — **Set the source waveform (CH1 to CH8, Math1 to Math4*).**
* Math1 to Math4 can be specified when the reference condition is 1 or 3.

Mode — **Set the reference range type (WaveZone).**

Time Range — **Set the GO/NO-GO determination source window (Main, Zoom1, or Zoom2).**

Zone No. — **Set the waveform zone to edit (1 to 4).**
GO/NO-GO determination is performed using the waveform zone that you specify here.

Edit 1 — **Edit the waveform zone.**

Set the GO/NO-GO determination area.

Push = Toggle
T Range1 — **Set the left side.**
T Range2 — **Set the right side.**

Editing a Waveform Zone (Edit1 to 4)

1. Press the **Zone No.** soft key, and select the number, from 1 to 4, of the waveform zone that you want to edit.
The soft key for editing the waveform zone will change (to Edit 1, 2, 3, or 4) according to the selected number.
2. Press the soft key for editing the waveform zone (**Edit 1, 2, 3, or 4**).
The waveform zone editing menu for the number that you selected will be displayed.

Editing the Whole Waveform

3. Press the **Edit** soft key and select Whole to display the following menu.

Edit 1
Edit
Whole Part — **Set the editing range (Whole).**

Upper/Lower — **Set the vertical range.**

Left/Right — **Set the horizontal range.**

Trace — **Change the base waveform (CH1 to CH8, Math1 to Math4).**

Exec — **Restart editing.**

Store — **Confirm the changes to the waveform zone.**

Quit — **Stop editing.**

Configure the range of the waveform zone.


Push = Toggle
Upper — **Set the top side.**
Lower — **Set the bottom side.**

Configure the range of the waveform zone.

Push = Toggle
Left — **Set the left side.**
Right — **Set the right side.**

Editing a Part of the Waveform

3. Press the **Edit** soft key and select Part to display the following menu.

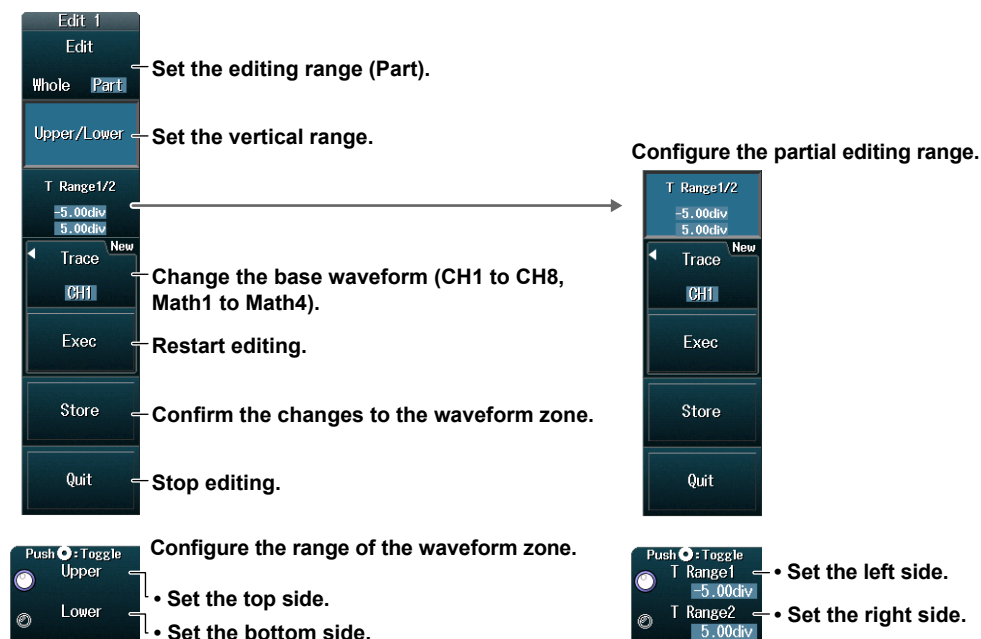

- **Change the base waveform.**

Change the base waveform when you want to use a waveform other than the GO/NO-GO determination source waveform or when you want to recreate the zone.

- **Restart editing.**

To restart the editing of the waveform zones, press this soft key.

- **Confirm the changes to the waveform zone.**

Confirm the edited waveform zone and store it in internal memory.

- **Stop editing.**

Return to the previous menu from the editing screen. If you do not confirm the edited waveform zone by pressing the **Store** soft key, the changes that you made are lost.

Note

- If you change the base waveform, all the zones that you have edited up to that point are lost.
- If you want to move from the editing menu to a different menu, you have to press the Quit soft key to finish editing.

Polygonal Zone (PolygonZone)

Press the **PolygonZone** soft key to display the following menu.

Condition1	
Condition	
IN OUT %	Reference standard. The polygonal zone appears when this is set to IN or OUT.
Trace	
CH1	Set the source waveform (CH1 to CH8, Math1 to Math4,* XY1 to XY4). * Math1 to Math4 can be specified when the reference condition is 1 or 3.
Mode	
PolygonZone	Set the reference range type (PolygonZone).
Time Range	Set the GO/NO-GO determination source window (Main, Zoom1, or Zoom2).
Main	Set this when the source waveform is CH1 to CH8 or Math1 to Math4.
Zone No.	Set the polygonal zone to edit (1 to 4).
1 2 3 4	GO/NO-GO determination is performed using the polygonal zone that you specify here.

Push = Toggle	Configure the position of the polygonal zone.
V-Position	Set the vertical position.
0.00div	
H-Position	Set the horizontal position.
0.00div	

Use the Mask Editor software on a PC in advance to create the polygonal images that you will use as polygonal zones. After loading the file (see section 17.7) and loading the polygonal image into the specified zone number (Zone No. 1 to 4), configure the polygonal zone GO/NO-GO determination.

Setting a Reference Range Using Waveform Parameters (Parameter)

Press the **Parameter** soft key to display one of the menus shown below. The menu that is displayed varies depending on the specified source waveform.

When CH1 to CH8 or Math1 to Math4 Is the Source Waveform

You can select the measurement items to use in the GO/NO-GO determination from all of the items used for automated measurement of waveform parameters (excluding measurement of the delay between waveforms). For information on setting automated measurement of waveform parameters, see section 9.1.

The screenshots show the setup process for the GO/NO-GO determination range when the source waveform is CH1 to CH8 or Math1 to Math4.

- Condition1** menu: Shows **IN**, **OUT**, and **XI** options. The **Trace** menu is highlighted, showing **CH1** as the source waveform. The **Mode** menu is highlighted, showing **Parameter** as the reference range type.
- Item** menu: Shows various measurement items. The **Max** item is highlighted. The **Item Setup** menu is shown, displaying a grid of measurement items: **Max**, **Min**, **P-P**, **High**, **Low**, **Amplitude**, **Rms**, **Mean**, **Sdev**, **+Over**, **-Over**, **Pulse Count**, **Edge Count**, **V1**, **V2**, **ΔT**, **IntegTY+**, **IntegTY**, **Freq**, **Period**, **Avg Freq**, **Avg Period**, **Burst**, **Rise**, **Fall**, **+Width**, **-Width**, **Duty**, and **Delay**.
- Upper/Lower** menu: Shows **Upper** and **Lower** limits, both set to **0.00000**.

Set the source waveform (CH1 to CH8, Math1 to Math4).

Set the reference range type (Parameter).

Set the measurement items to use in the GO/NO-GO determination.

Configure the GO/NO-GO determination range.

• Upper limit

• Lower limit

When LOGIC(L) or LOGIC(A|B) Is the Source Waveform

You can select the measurement item to use in the GO/NO-GO determination from the items used for time axis measurement of waveform parameters shown below.

Freq, Period, Avg Freq, Duty, Pulse Count, and Delay

For information on setting automated measurement of waveform parameters, see section 9.1.

The screenshots show the setup process for the GO/NO-GO determination range when the source waveform is LOGIC(L) or LOGIC(A|B).

- Condition1** menu: Shows **IN**, **OUT**, and **XI** options. The **Trace** menu is highlighted, showing **LOGIC(L)** as the source waveform. The **Mode** menu is highlighted, showing **Parameter** as the reference range type.
- Source Bit** menu: Shows **L0** as the source bit.
- Upper/Lower** menu: Shows **Upper/Lower** limits, both set to **0.00000**.
- Item** menu: Shows various measurement items. The **Freq** item is highlighted. The **Item Setup** menu is shown, displaying a grid of measurement items: **Freq**, **Period**, **Avg Freq**, **Duty**, **Pulse Count**, and **Delay**.
- Source Bit** menu: Shows **L0** as the source bit.
- Upper/Lower** menu: Shows **Upper** and **Lower** limits, both set to **0.00000**.

Set the source waveform (LOGIC(L) or LOGIC(A|B)).*

The reference range type is fixed to Parameter.

Set the source bit.

Set the measurement items to use in the GO/NO-GO determination.

Configure the GO/NO-GO determination range.

• Upper limit



• Lower limit

Set the source bit (L0 to L7, A0 to A7, B0 to B7).*

* You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated. LOGIC(A|B), A0 to A7, and B0 to B7 are available on models with the /L16 option.



When XY1 to XY4 Is the Source Waveform

 The measurement item to use in the GO/NO-GO determination is the area of XY1 to XY4. For information on setting how the XY waveform is displayed and how its area is determined, see chapter 5 of this manual and appendix 1 of the Features Guide, IM DLM4038-01EN.

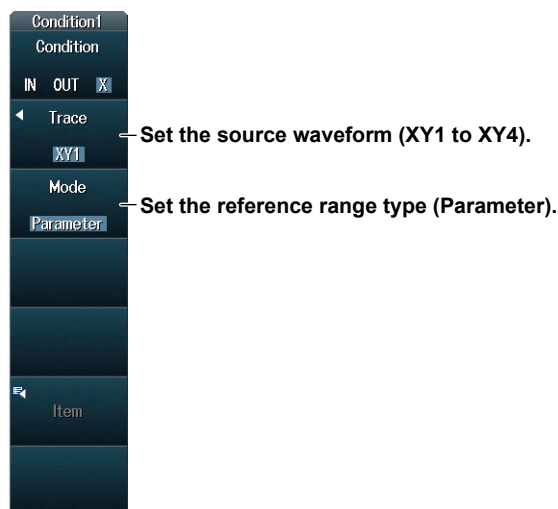

When FFT1 or FFT2 Is the Source Waveform

 You can select the measurement item to use in the GO/NO-GO determination from the cursor measurement items for FFT. For information on setting the cursor measurement items for FFT, see section 7.2.

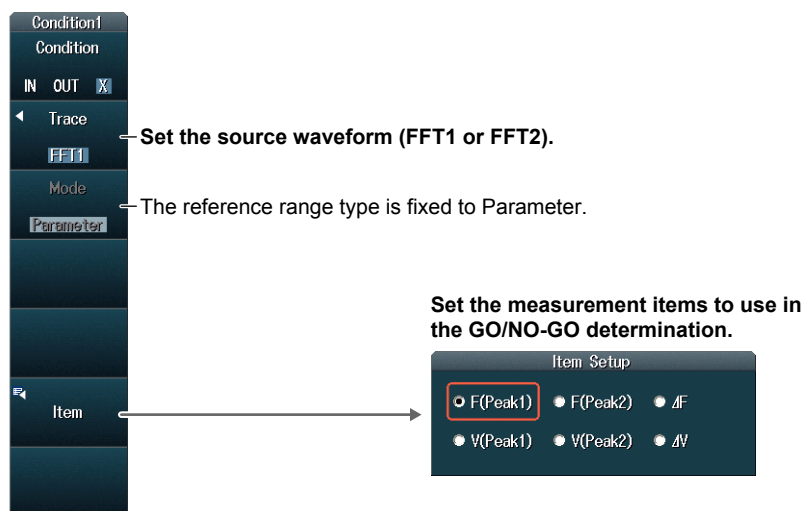

3.1 Setting Conditions for Waveform Acquisition


This section explains the following settings (which are used when acquiring waveforms).

- Record length
- Acquisition mode
- Trigger mode
- High resolution mode
- Interleave mode
- Sampling mode
- The number of waveforms to acquire, the attenuation constant, and the number of times to average

► “Waveform Acquisition” in the Features Guide

ACQUIRE Menu

Press **ACQUIRE** to display the following menu.

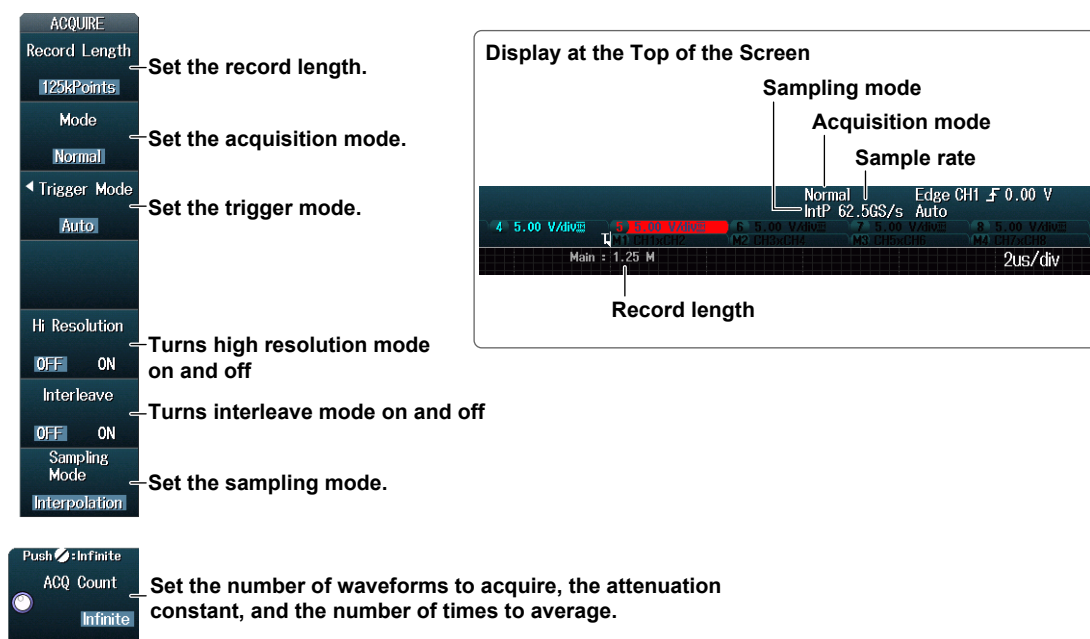

Setting the Acquisition Mode (Mode)

- Normal:** Displays waveforms without processing the sampled data. You can set the number of waveforms to acquire with the jog shuttle.
- Envelope:** Displays waveforms in envelope mode. You can set the number of waveforms to acquire with the jog shuttle.
- Average:** Displays averaged waveforms. You can set the attenuation constant and the number of times to average with the jog shuttle.

Setting the Trigger Mode (Trigger Mode)

The trigger mode determines the conditions for updating the displayed waveforms. You can also set the trigger mode by pressing the MODE key. ► section 2.1

You can set the trigger mode to one of the settings below.

Auto, Auto Level, Normal, and N Single

Setting the Sampling Mode (Sampling Mode)

Realtime: Samples data in real-time sampling mode.

Interpolation: Samples data in interpolation mode.

Repetitive: Samples data in repetitive sampling mode.

3.2 Starting and Stopping Waveform Acquisition

► “Waveform Acquisition (RUN/STOP),”
“Acquiring the Waveform Once (SINGLE),” and
in the Features Guide

Starting and Stopping Waveform Acquisition (RUN/STOP)

1. Press **RUN/STOP**.
 - The **RUN/STOP** key illuminates, and waveform acquisition starts. The acquired waveforms are displayed.
 - If you set the record length to a value that allows only one waveform to be acquired, pressing **RUN/STOP** will produce the same result as pressing **SINGLE**.
2. Press **RUN/STOP** again.

The **RUN/STOP** key light turns off, and waveform acquisition stops.

Acquiring a Waveform Once (SINGLE)

1. Press **SINGLE**.
 - The **SINGLE** key illuminates, and waveform acquisition starts. The acquired waveform is displayed.
 - The DLM4000 switches to Single mode and acquires a waveform.
 - When the DLM4000 triggers, it acquires and displays only one waveform and then stops waveform acquisition. The **SINGLE** key light turns off.
 - To stop waveform acquisition, press **RUN/STOP**.

4.1 Setting Display Conditions


This section explains the following settings (which are used when viewing the display).

- Display format
- Display interpolation
- Graticule
- Scale value display
- Waveform arrangement
- Waveform display color
- Waveform intensity

► “Display” in the Features Guide


DISPLAY Menu

Press **DISPLAY** to display the following menu.

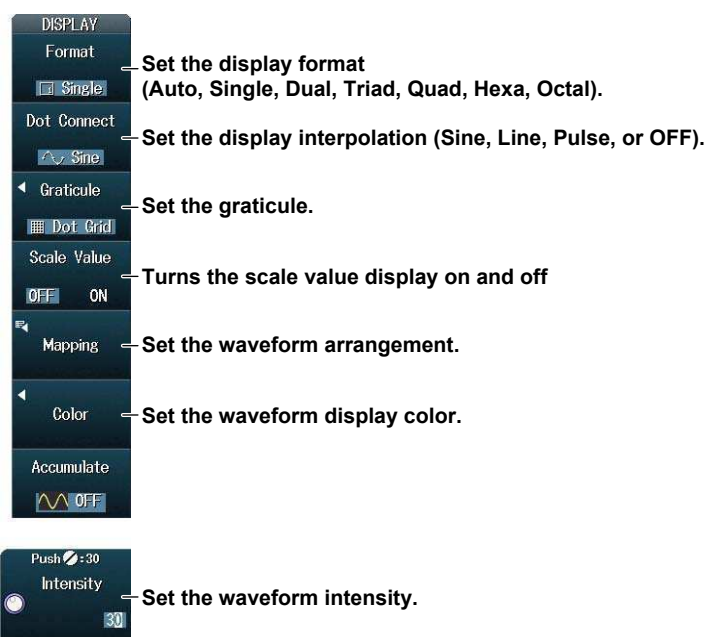

Setting the Graticule (Graticule)


Press the **Graticule** soft key to display the following menu.

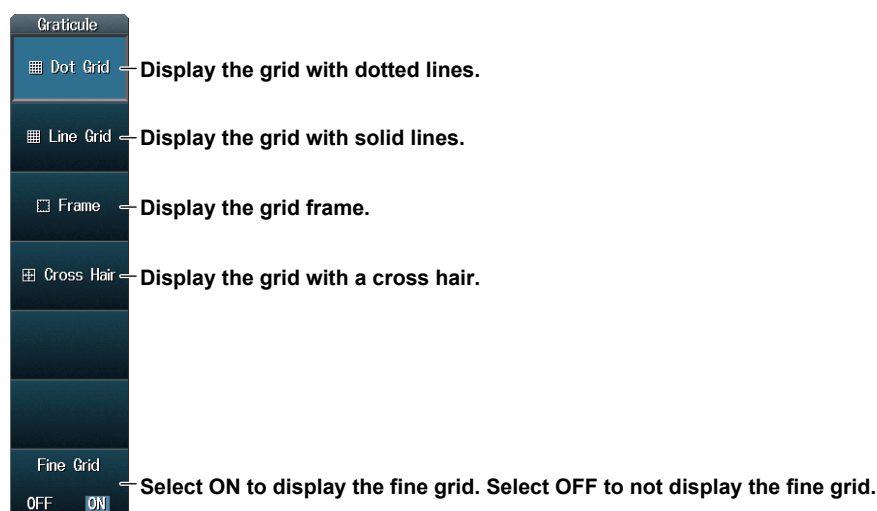


Setting the Waveform Arrangement (Mapping)

Press the **Mapping** soft key to display the following menu.

When the CH8 Key is Lit

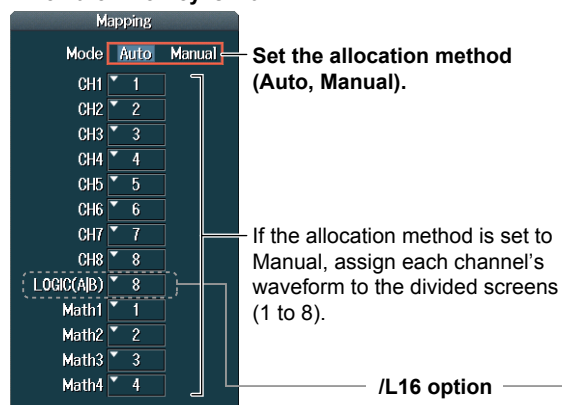


When the L Key is Lit

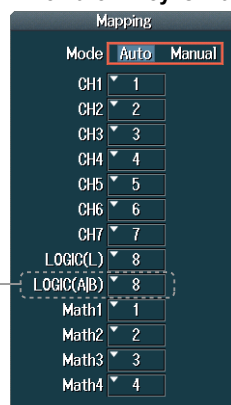


Setting the Waveform Display Color (Color)

Press the **Color** soft key to display the following menu.

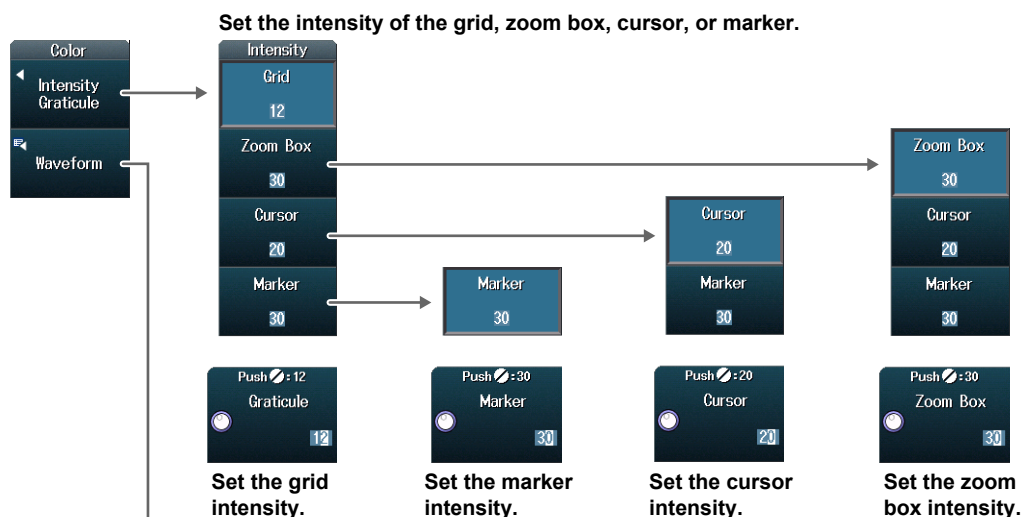


Set the waveform display color.

• When the CH8 Key is Lit

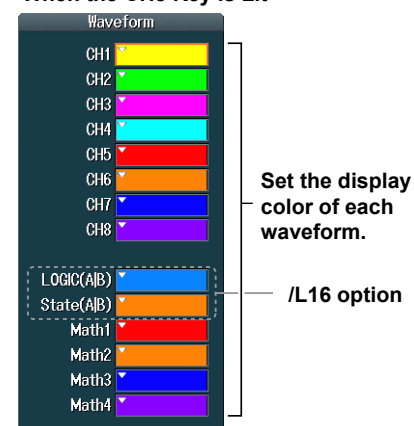

• When the L Key is Lit

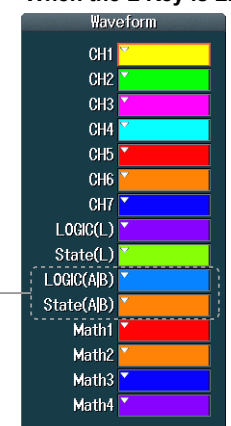

4.2 Using the Accumulate Feature


This section explains the following settings (which are used when using the accumulate feature).

- Gradation mode (accumulate display)
- Intensity level
- Accumulation time

► “Accumulate (Accumulate)” in the Features Guide

DISPLAY Menu

Press **DISPLAY** to display the following menu.

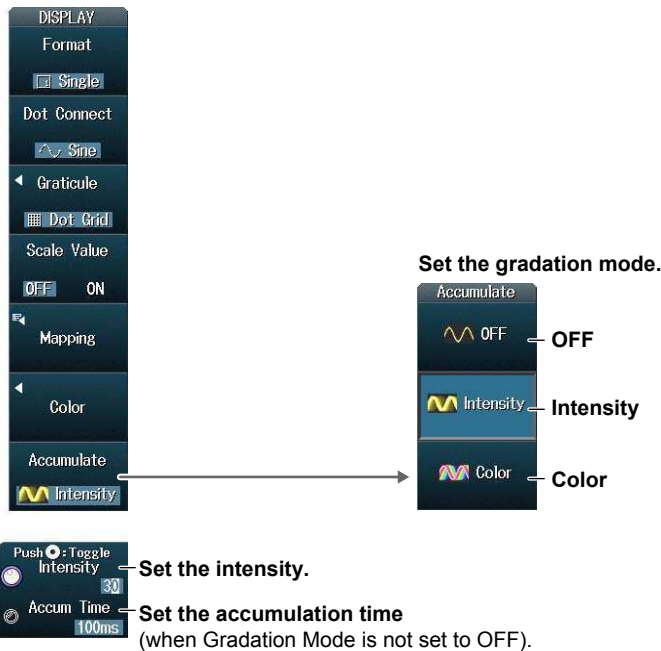

Setting the Gradation Mode (Accumulate)

OFF: Does not accumulate waveforms.

Intensity: Indicates waveform frequency using different intensity levels. You can set the different intensity levels with the jog shuttle.

Color: Indicates waveform frequency using different colors.

4.3 Using the Snapshot and Clear Trace Features

► “Snapshot (SNAP SHOT)” and
“Clear Trace (CLEAR TRACE)”
in the Features Guide

Snapshot (SNAP SHOT)

1. Press **SNAP SHOT** to retain the currently displayed waveform on the screen as a snapshot displayed in white. Snapshot waveforms remain on the screen until you execute a clear trace operation.

Note

When the color data setting is ON(Rev.) on the PRINT File menu, if you print the snapshot waveforms or save them to a file, the waveforms may not be discernible.

Clear Trace (CLEAR TRACE)

2. Press **CLEAR TRACE** to clear all the waveforms that are displayed on the screen.

4.4 Adjusting the Backlight


This section explains the following settings (which are used when adjusting the backlight).

- Turning off the backlight
- Automatically turning off the backlight
- Adjusting the brightness

► “System Configuration (System Configuration)” in the Features Guide


UTILITY System Configuration Menu

Press **UTILITY** and then press the **System Configuration** soft key to display the following menu.

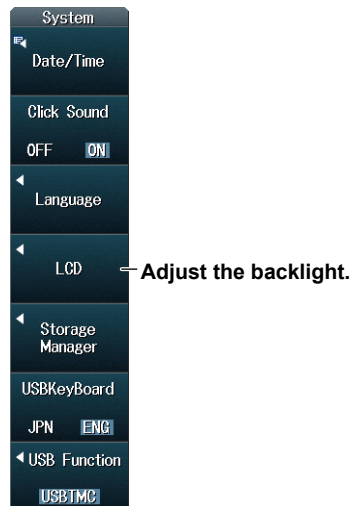

Adjusting the Backlight (LCD)

Press the **LCD** soft key to display the following menu.

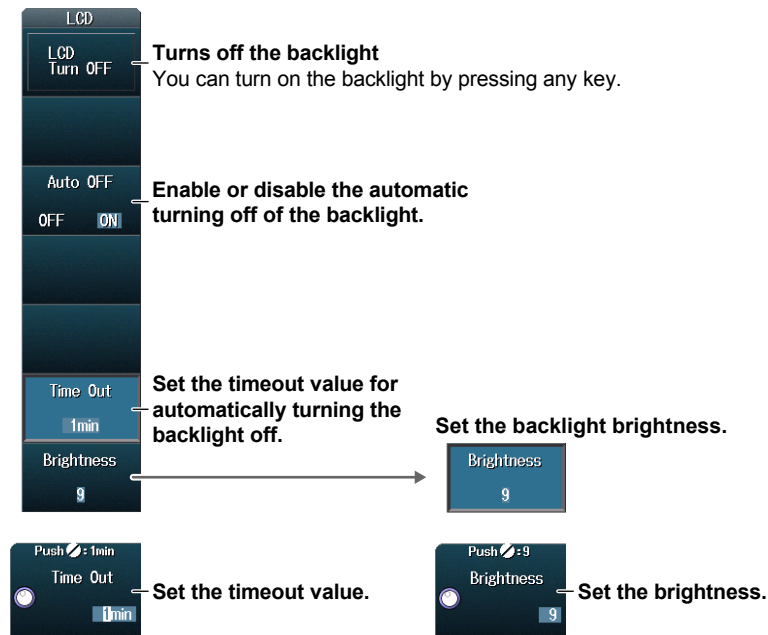

5.1 Displaying XY Waveforms


This section explains the following settings (which are used when displaying XY waveforms).

- XY waveform display
- X-axis and Y-axis source waveforms
- VT waveform display and split display
- Display range

► “Displaying XY Waveforms” in the Features Guide

X-Y Menu

Press **SHIFT+DISPLAY** (X-Y) to display the following menu.

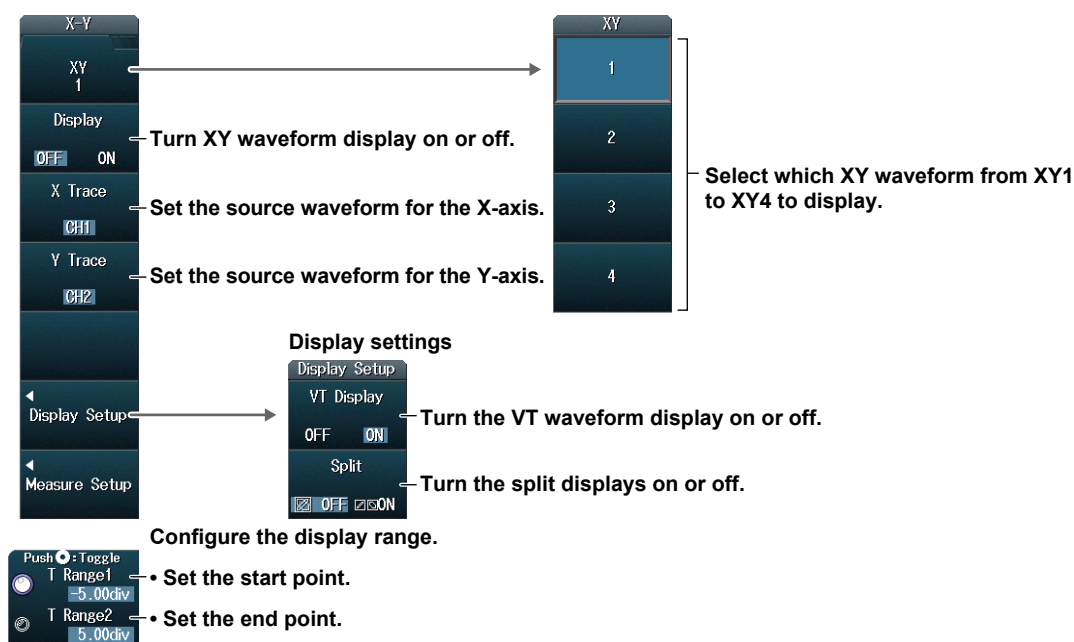

Setting the X-Axis and Y-Axis Source Waveforms (X Trace/Y Trace)

The source waveforms that you can assign to the X-axis and Y-axis of XY waveforms are as follows:

XY Waveforms	X-Axis and Y-Axis Source Waveforms
XY1 and XY2	CH1 to CH4, Math1, Math2
XY3 and XY4	CH5 to CH8, Math3, Math4

5.2 Performing Cursor Measurements and Area Calculations


This section explains the following settings (which are used when performing cursor measurements on and determining the area of the displayed XY waveform).

- Measurement mode
- Cursor measurement
- Area determination method

► “Measurement (Measure Setup)” in the Features Guide


X-Y Measure Setup Menu

Press **SHIFT+DISPLAY** (X-Y), the **Measure Setup** soft key, and then the **Mode** soft key to display the following menu.

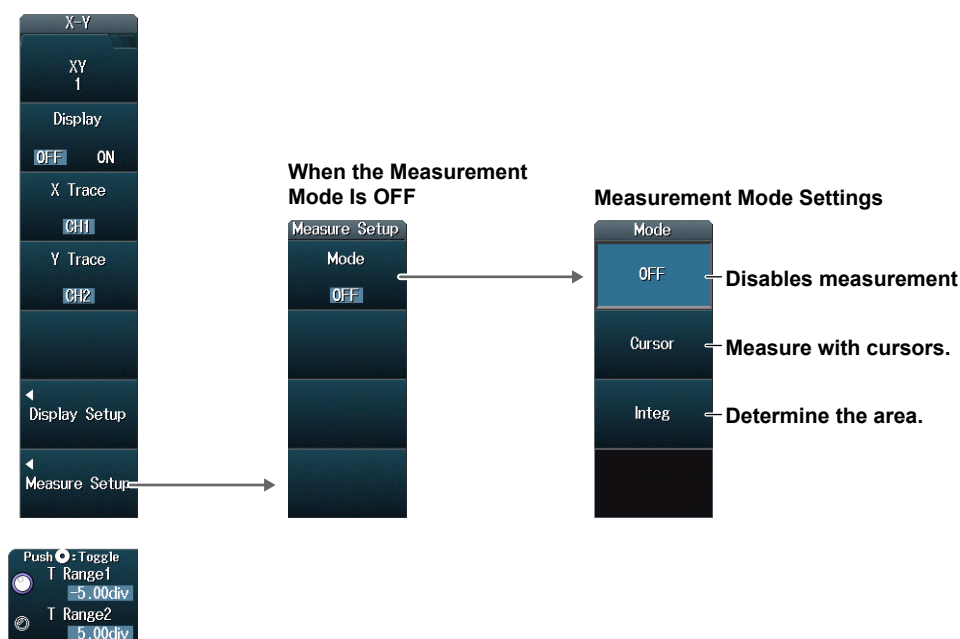


Performing Cursor Measurements (Cursor)

Press the **Cursor** soft key to display the following menu.

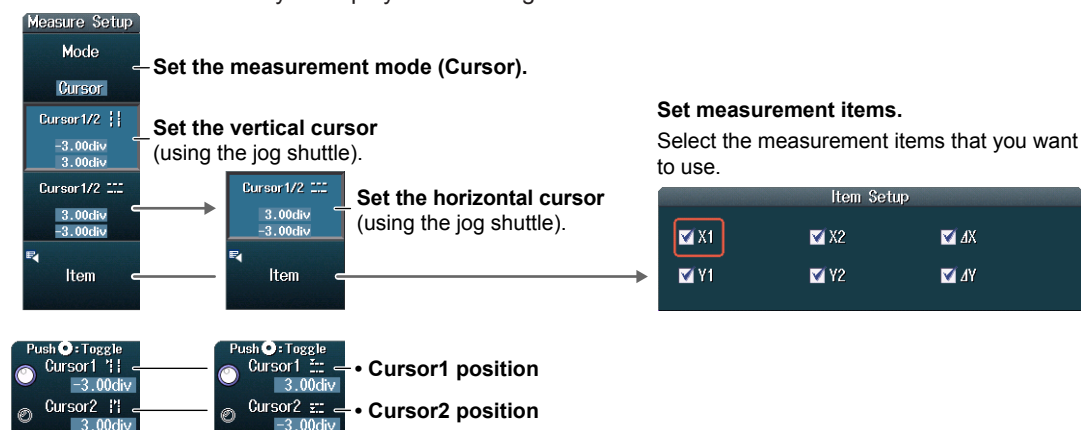

Performing Area Calculations (Integ)

Press the **Integ** soft key to display the following menu.

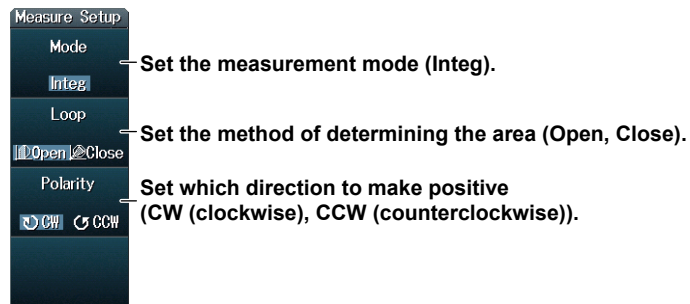


6.1 Setting the Computation Mode

This section explains how to set the computation mode.

► [“Computation Mode \(Mode\)” in the Features Guide](#)


MATH/REF Menu

Press **MATH/REF** to display the following menu.

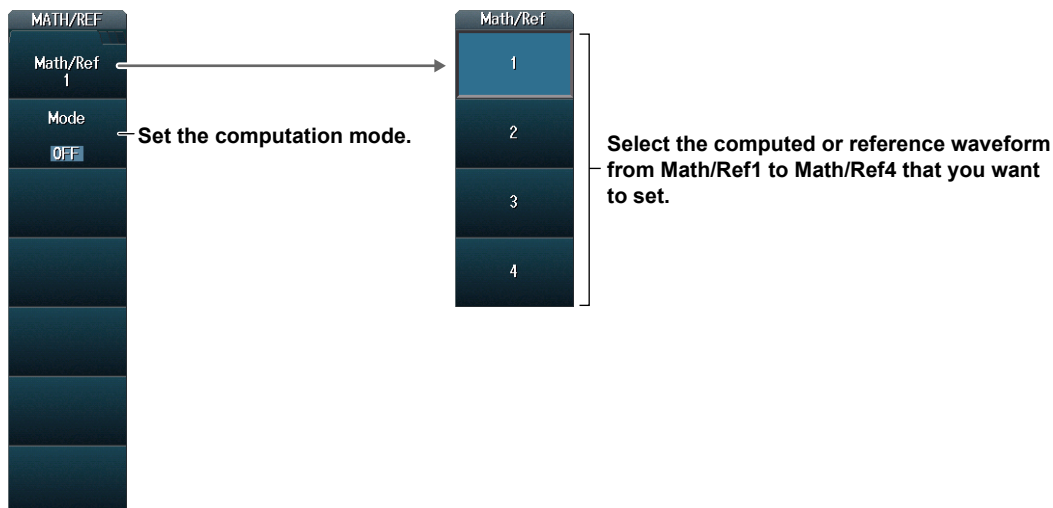

Setting the Computation Mode (Mode)

Press the **Mode** soft key to display the following menu.

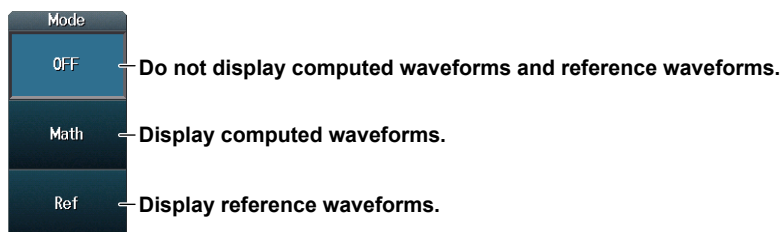

Note

- When the state display of logic signal LOGIC(L) is on, Math/Ref4 cannot be used. ► section 1.2
- When the trigger mode is set to Single, the DLM4000 will not display computed waveforms (MATH waveforms) while it is acquiring waveforms. The DLM4000 will display computed waveforms after it triggers and the roll mode display stops.
- The DLM4000 will not display computed waveforms that have been generated through user-defined computation while it is acquiring waveforms. The DLM4000 will display the computed waveforms after it stops acquiring waveforms.

6.2 Performing Addition, Subtraction, and Multiplication


This section explains the following settings (which are used when performing addition, subtraction, and multiplication).

- Operators
- Computation source waveforms

► “Operators (Operation)” in the Features Guide

MATH/REF Menu

Press **MATH/REF** to display the following menu.

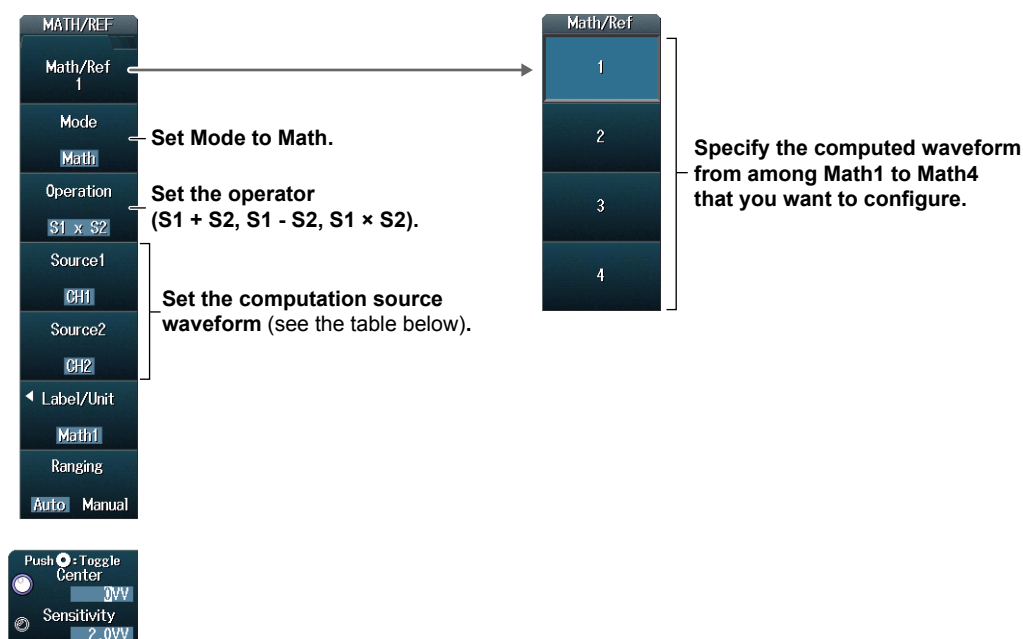

Setting the Computation Source Waveform

The computation source waveforms that you can set for Source1 and Source2 are listed below.

Computed Waveforms That Display Computation Results	Source1 or Source2
Math1 (Math/Ref1)	CH1 to CH4
Math2 (Math/Ref2)	CH1 to CH4 or Math1
Math3 (Math/Ref3)	CH5 to CH8
Math4 (Math/Ref4)	CH5 to CH8 or Math3

6.3 Performing Filter Functions


This section explains the following settings (which are used when performing the phase shift and moving average filter functions and when applying an IIR filter to the waveform).

- Operators
- Computation source waveforms
- Filter type

► “Operators (Operation)” in the Features Guide


MATH/REF Menu

Press **MATH/REF** to display the following menu.

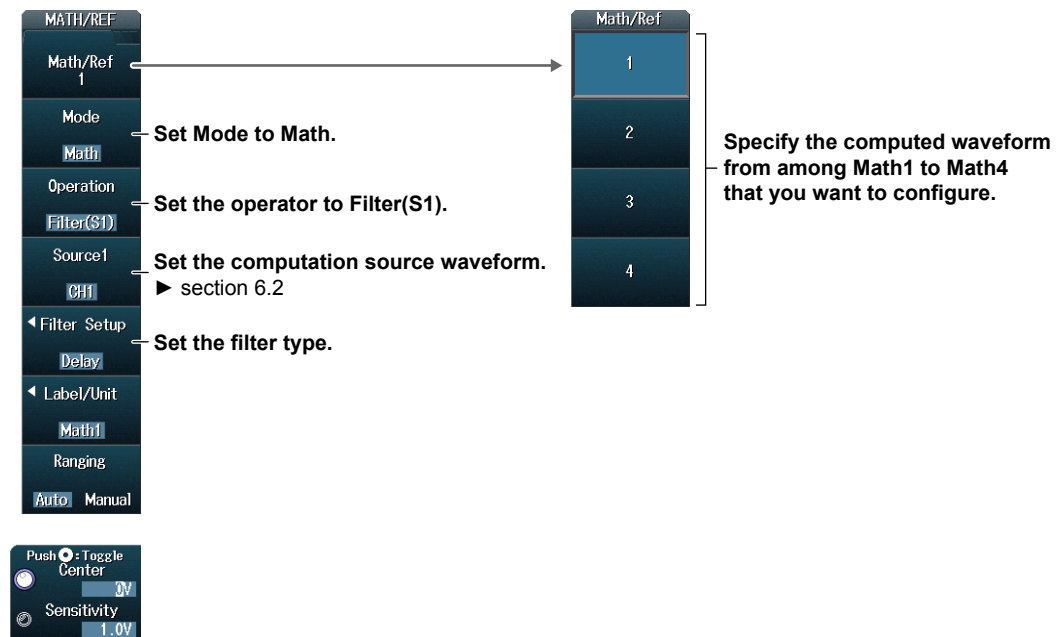

Setting the Filter Type (Type)



Press the **Filter Setup** soft key, then the **Type** soft key to display the following menu.

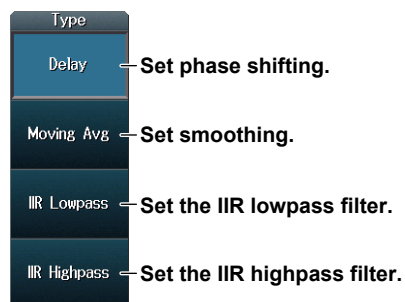

6.3 Performing Filter Functions

Setting Phase Shifting (Delay)

 
Press the **Delay** soft key to display the following menu.

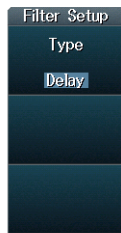

Set the delay value.

Setting Smoothing (Moving Avg)

Press the **Moving Avg** soft key to display the following menu.

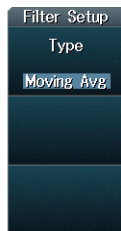


Set the number of weighted points.

Setting the IIR Filter (IIR Lowpass or IIR Highpass)

Press the **IIR Lowpass** or **IIR Highpass** soft key to display the following menu.



 Set the filter order.



Set the cutoff frequency.

6.4 Performing Integration


This section explains the following settings (which are used when performing integration).

- Operators
- Computation source waveforms
- Initial point

► “Operators (Operation)” in the Features Guide


MATH/REF Menu

Press **MATH/REF** to display the following menu.

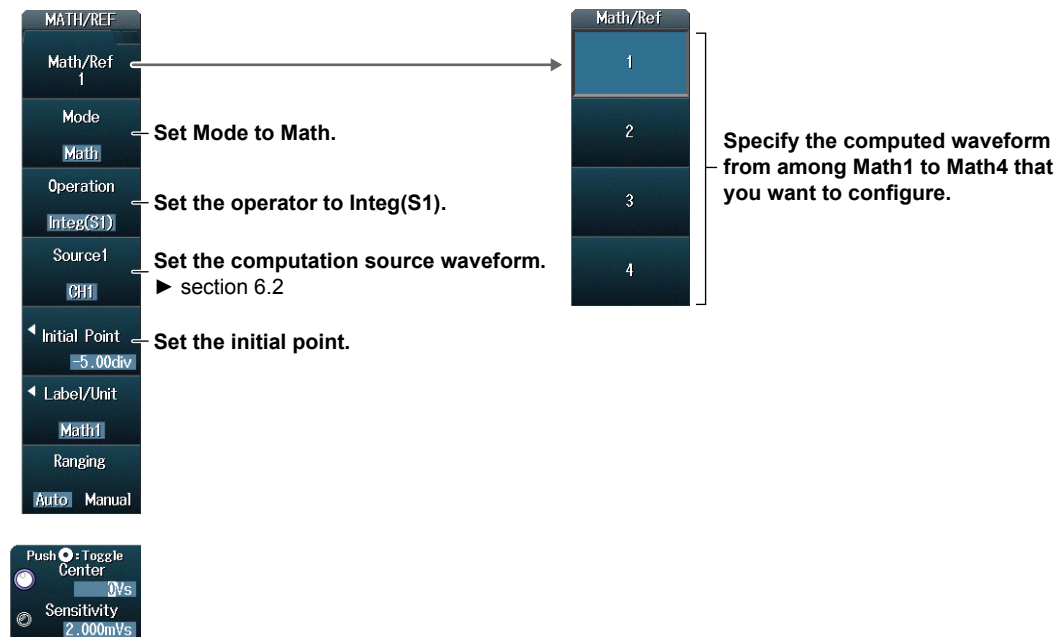

Setting the Initial Point (Initial Point)

Press the **Initial Point** soft key to display the following menu.

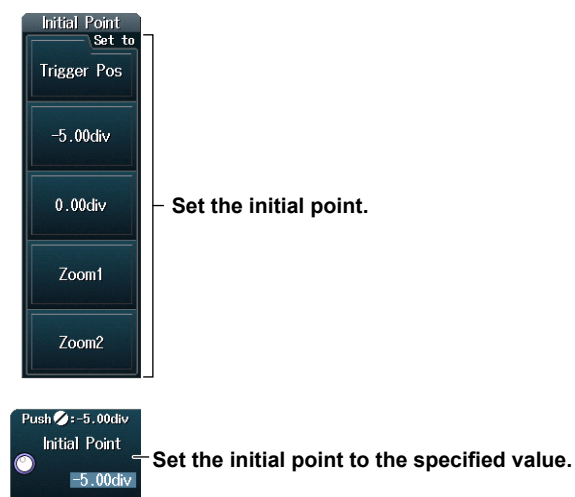

6.5 Performing Count Computations


This section explains the following settings (which are used when performing edge count or rotary count).

- Operators
- Count type
- Computation source waveforms
- Initial point
- Edge count detection level, slope, and hysteresis
- Rotary count threshold level

► “Edge Count or Rotary Count (Count(S1))” in the Features Guide


MATH/REF Menu

Press **MATH/REF** to display the following menu.

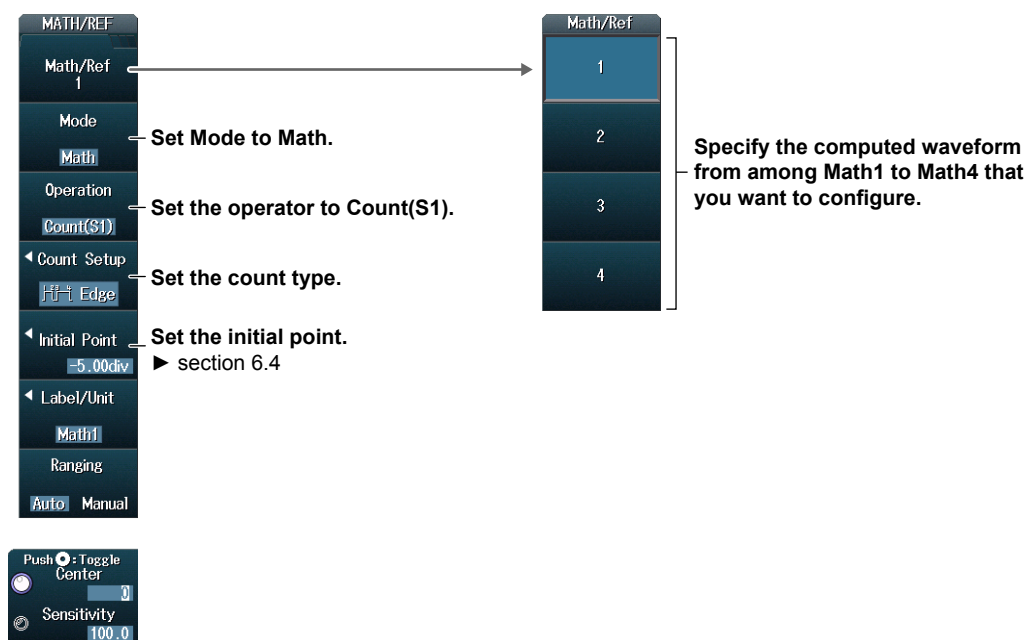


Setting the Count Type (Type)

Press the **Count Setup** soft key, then the **Type** soft key to display the following menu.

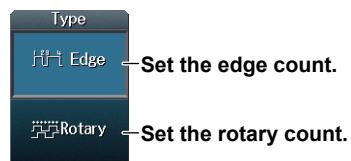


Setting the Edge Count (Edge)

Press the **Edge** soft key to display the following menu.

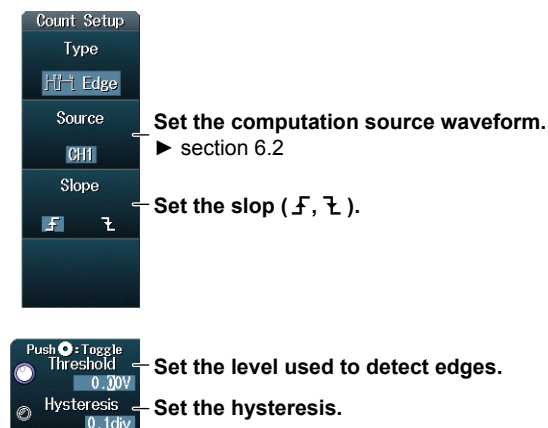

Setting the Rotary Count (Rotary)

Press the **Rotary** soft key to display the following menu.

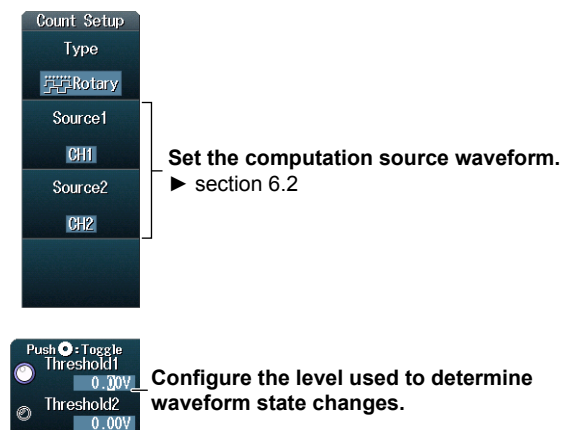

6.6 Setting Labels, Units, and Scaling

 
This section explains the following settings (which are used with labels, units, and scaling).

- Label
- Unit
- Scaling

► “Setting Labels and Units (Label/Unit)” and
“Scaling (Ranging)”
in the Features Guide


MATH/REF Menu

Press **MATH/REF** to display the following menu.



Setting Labels and Units (Label/Unit)

Press the **Label/Unit** soft key to display the following menu.

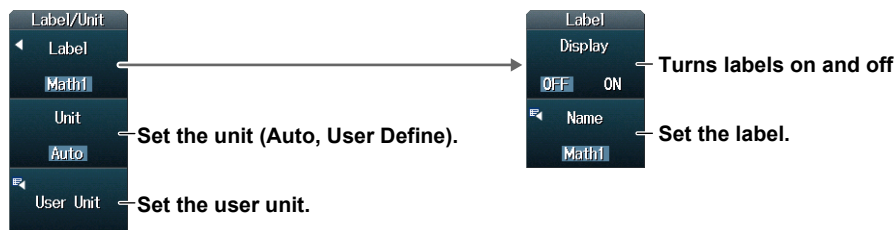

Setting Scaling (Ranging)

Auto: Automatically set the vertical display range of the computed waveform.

Manual: Manually set the sensitivity (Sensitivity) and the signal level at the vertical center (Center).

6.7 Loading Reference Waveforms


This section explains the following settings (which are used when loading reference waveforms).

- Loading reference waveforms
- Label
- Vertical position

► “Reference Waveforms” in the Features Guide

MATH/REF Menu

Press **MATH/REF** to display the following menu.

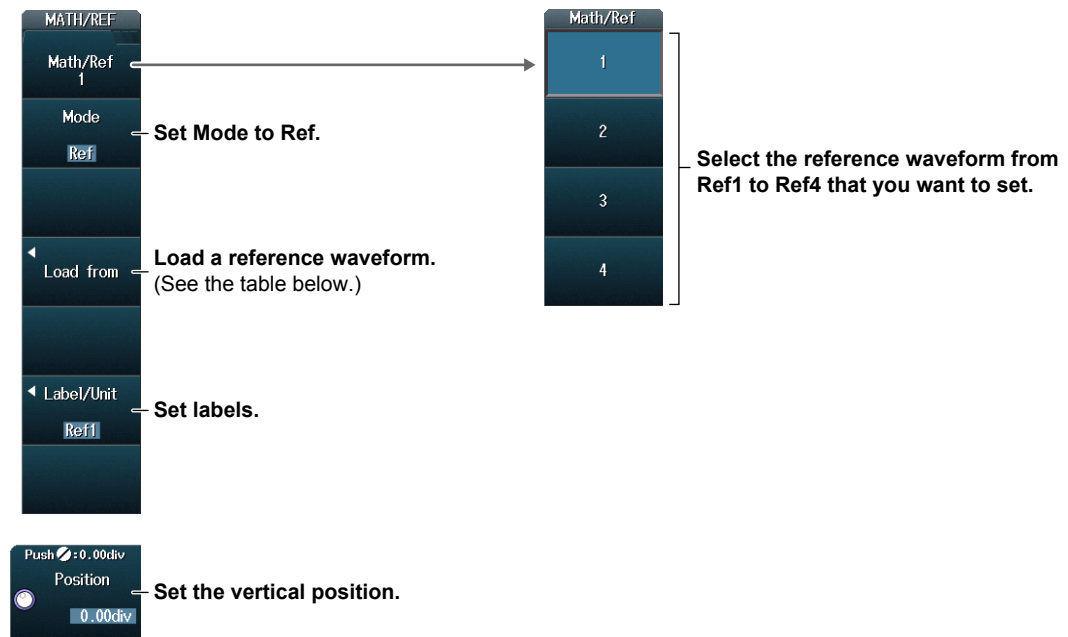


Loading the Reference Waveform (Load from)

Specify one of the following waveform channels to acquire the reference waveform from.

Reference Waveform	Waveform Channel
Ref1 (Math/Ref1)	CH1 to CH4
Ref2 (Math/Ref2)	CH1 to CH4 or Math1
Ref3 (Math/Ref3)	CH5 to CH8
Ref4 (Math/Ref4)	CH5 to CH8 or Math3

Setting Labels (Label/Unit)

Press the **Label/Unit** soft key to display the following menu.

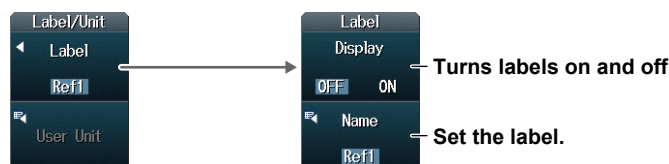

6.8 Performing User-Defined Computations (Option)


This section explains the following settings (which are used when performing user-defined computations).

- Operators
- Expressions
- Computation conditions
- Labels and units
- Auto ranging
- Scaling

► “User-Defined Computation (User Define, Option)” in the Features Guide

MATH/REF Menu

Press **MATH/REF** to display the following menu.

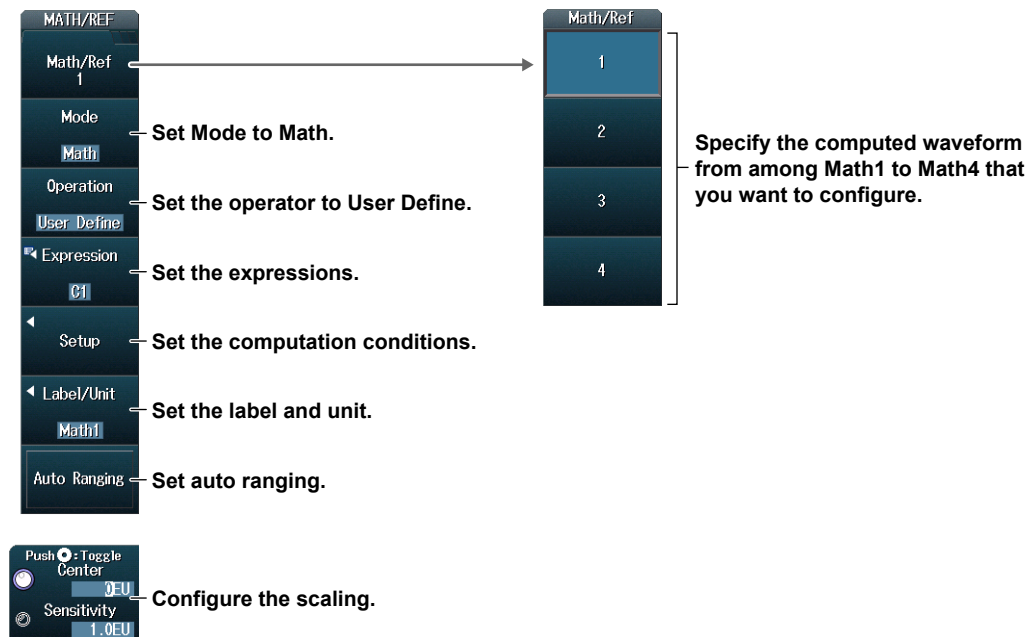


Setting Expressions (Expression)

Press the **Expression** soft key to display the following screen.


Example: Computed waveform Math4

You can include the automated measurement values of waveform parameters to expressions.

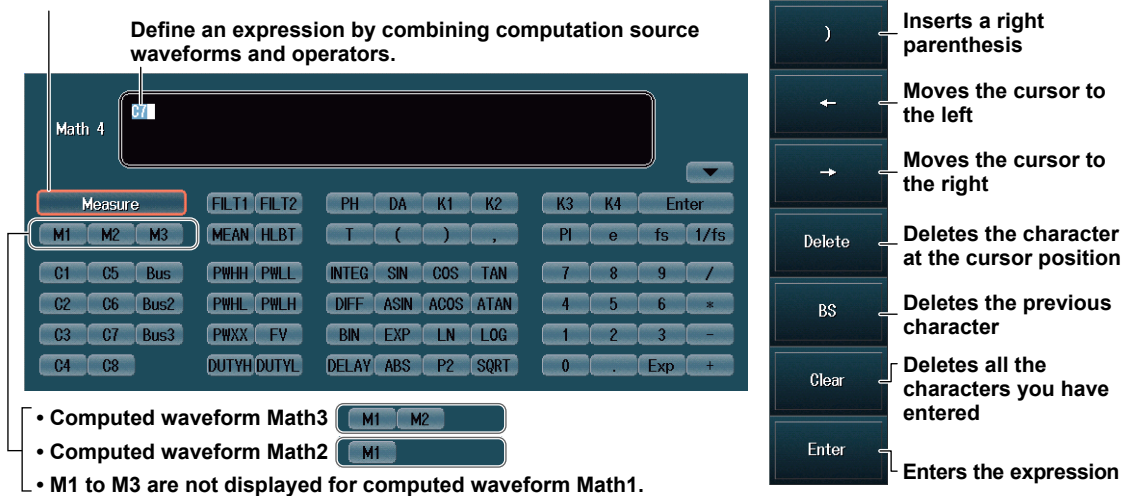


Setting Computation Conditions (Setup)

Press the **Setup** soft key to display the following menu.

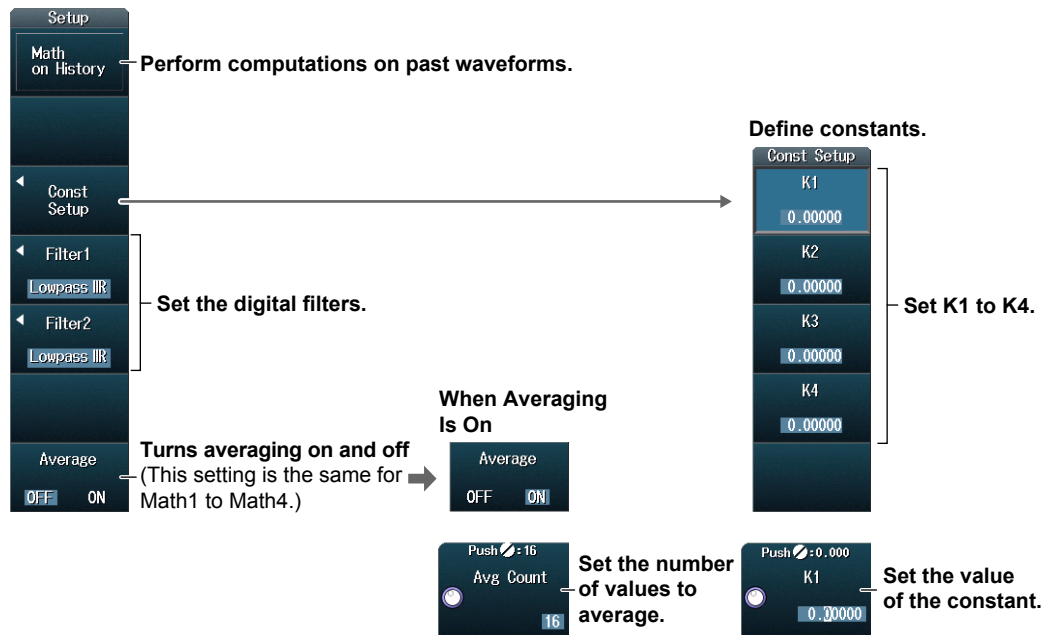

Setting Digital Filters (Filter1 and Filter2)

Press the **Filter1** or **Filter2** soft key to display the following menu.

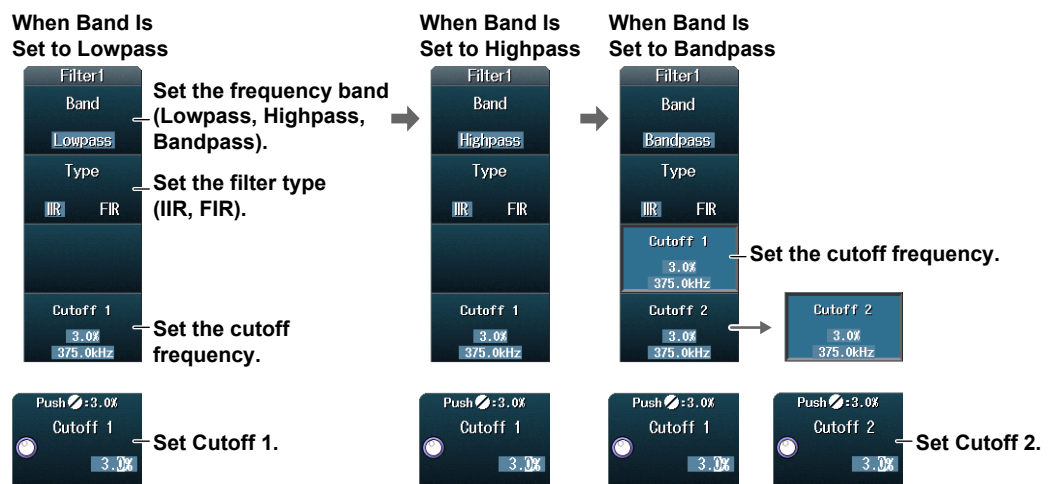

* Cutoff 2 is only set when Band is set to Bandpass.

7.1 Displaying FFT Waveforms


This section explains the following settings (which are used when performing FFT analysis).

- FFT waveform display
- Analysis source waveform
- FFT conditions
- Analysis range
- Vertical and horizontal scale values
- FFT points

► “FFT” in the Features Guide


FFT Menu

Press **SHIFT+MATH/REF** (FFT) to display the following menu.

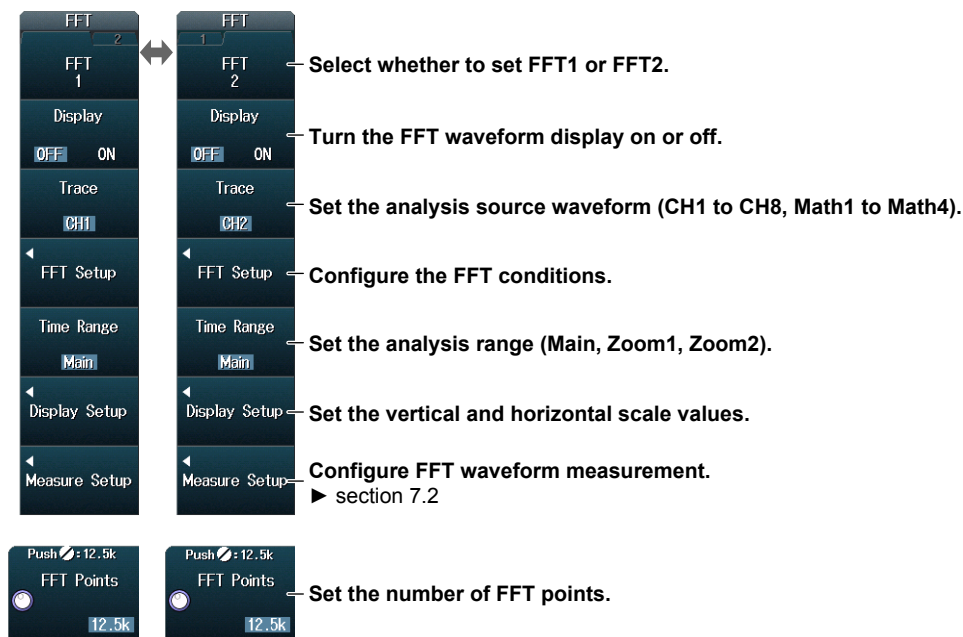

Setting FFT Conditions (FFT Setup)

Press the **FFT Setup** soft key to display the following menu.

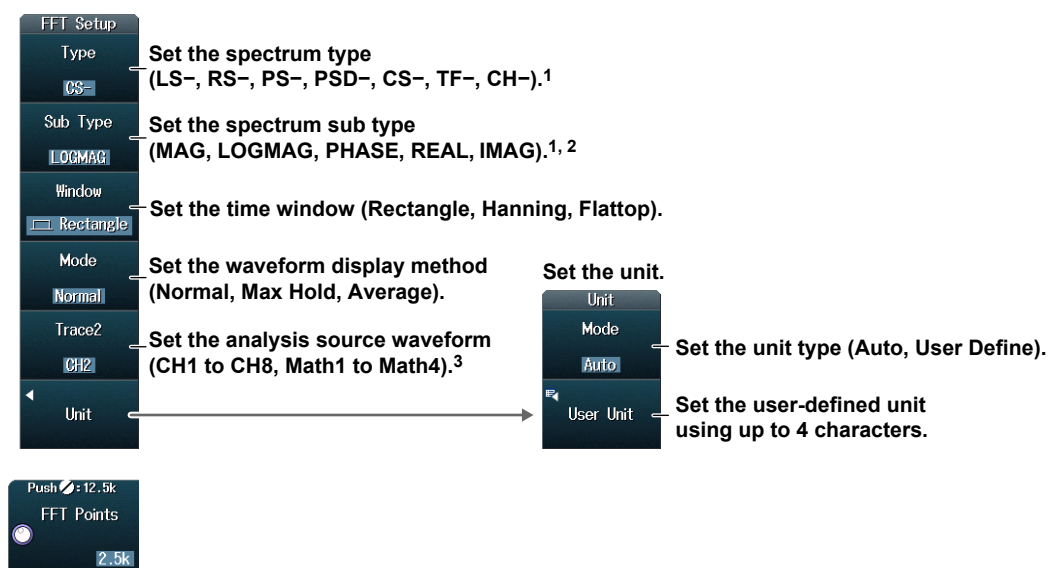


¹ This is available on models with the user-defined computation option.

² PHASE, REAL, and IMAG can be specified when Type is set to LS-, CS-, or TF-.

³ Can be specified on models with the user-defined computation option when Type is set to CS-, TF-, or CH-.

Setting the Vertical and Horizontal Scale Values (Display Setup)

Press the **Display Setup** soft key to display the following menu.

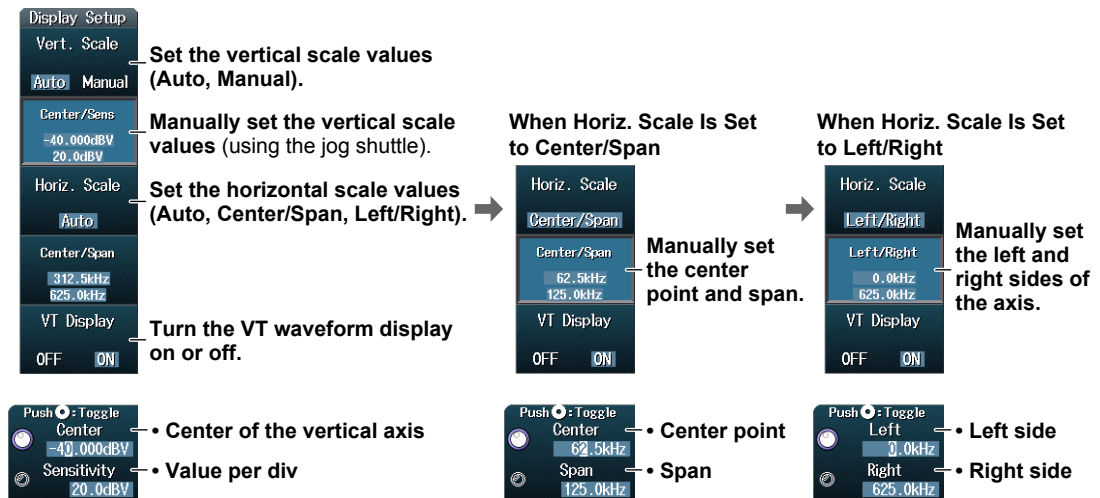

7.2 Measuring FFT Waveforms


This section explains the following settings (which are used when measuring FFT waveforms).

- Cursor type
- Marker cursor measurements
- Peak cursor measurements

► “Cursor Measurement (Measure Setup)” in the Features Guide


Setting the Cursor Type (Mode)

Press **SHIFT+MATH/REF** (FFT), the **Measure Setup** soft key, and then the **Mode** soft key to display the following menu.

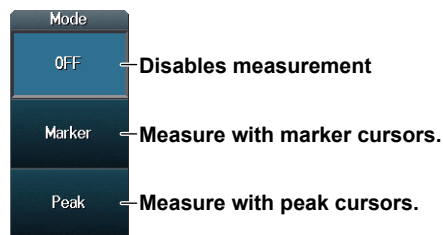


Measuring with Marker Cursors (Marker)

Press the **Marker** soft key to display the following menu.

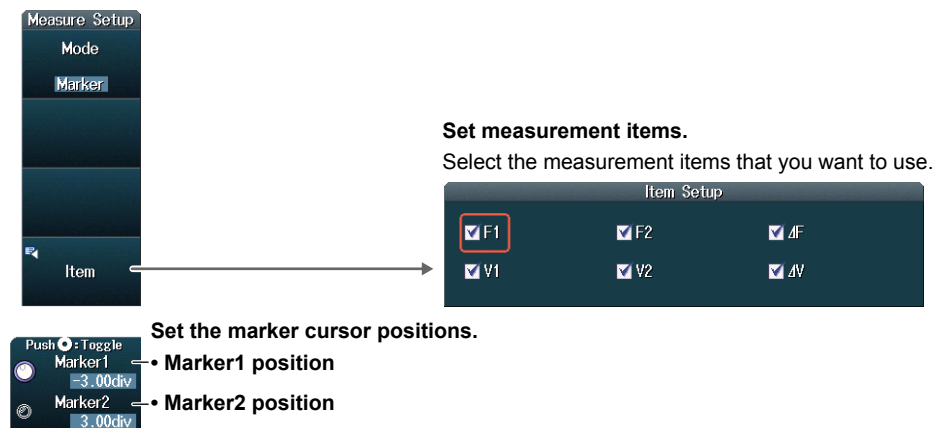

Measuring with Peak Cursors (Peak)

Press the **Peak** soft key to display the following menu.

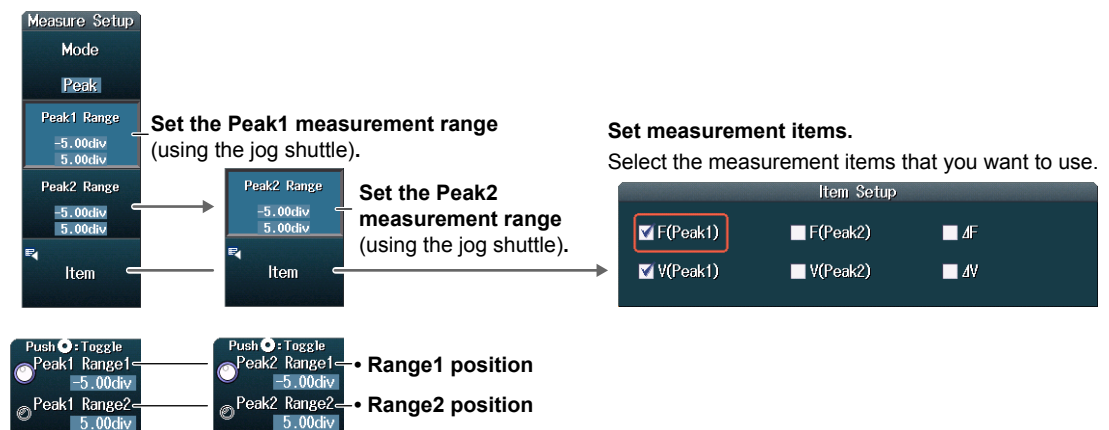

8.1 ΔT Cursor Measurements


This section explains the following settings (which are used when performing ΔT cursor measurements).

- Cursor measurement
- Cursor type
- Source waveform
- Measurement items
- Cursor jumping
- Cursor position

► “ ΔT Cursors (ΔT)” in the Features Guide

CURSOR Menu


Press **CURSOR** to display the following menu.

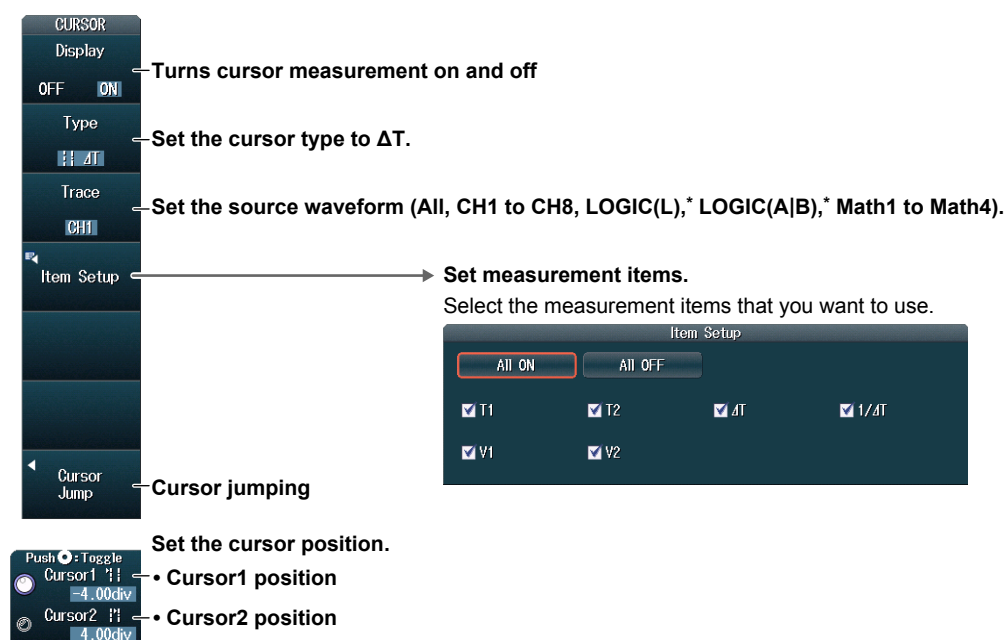

* You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated. Specify the channel that you want to measure in advance by pressing either the CH8 key or the L key. LOGIC(A|B) is available on models with the /L16 option.

Cursor Jumping (Cursor Jump)

Press the **Cursor Jump** soft key to display the following menu.

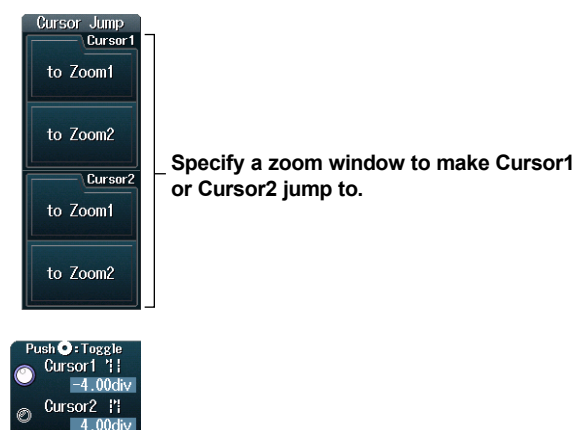

Note

Setting the Cursor Position

You can move Cursor1 and Cursor2 together by pressing SET repeatedly until the jog shuttle adjusts both of them.

8.2 ΔV Cursor Measurements


This section explains the following settings (which are used when performing ΔV cursor measurements).

- Cursor measurement
- Cursor type
- Source waveform
- Measurement items
- Cursor position

► “ ΔV Cursors (ΔV)” in the Features Guide

CURSOR Menu

Press **CURSOR** to display the following menu.

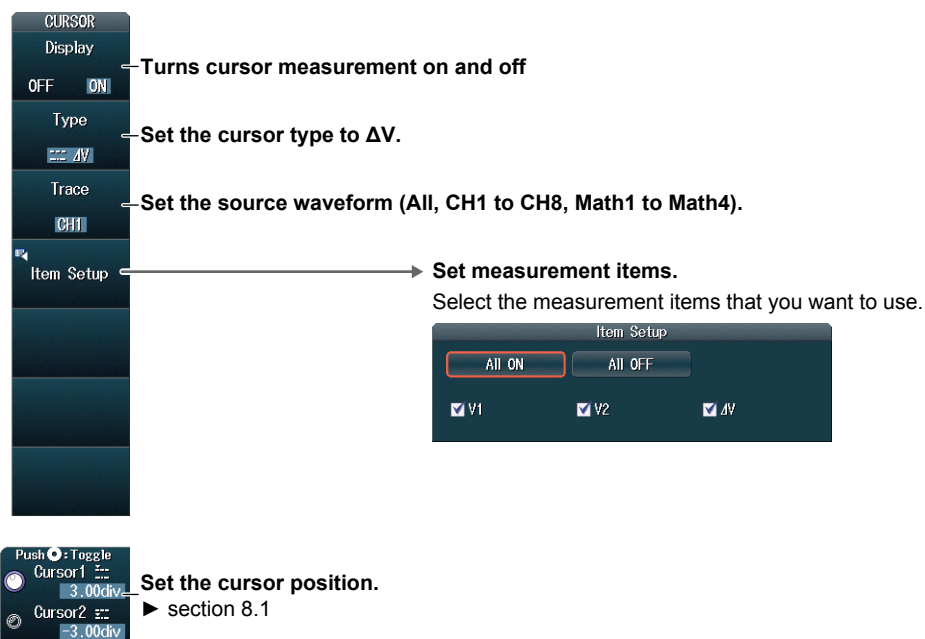

8.3 ΔT & ΔV Cursor Measurements

This section explains the following settings (which are used when performing ΔT & ΔV cursor measurements).

- Cursor measurement
- Cursor type
- Source waveform
- Measurement items
- ΔT cursor jumping
- Cursor position

► “ ΔT & ΔV Cursors (ΔT & ΔV)” in the Features Guide

CURSOR Menu

Press **CURSOR** to display the following menu.

The diagram illustrates the CURSOR menu structure and its sub-menus with the following annotations:

- CURSOR**
 - Display**
 - OFF ON** — Turns cursor measurement on and off
 - Type**
 - ΔT & ΔV** — Set the cursor type to ΔT & ΔV .
 - Trace**
 - CH1** — Set the source waveform (All, CH1 to CH8, Math1 to Math4).
 - Item Setup** — Set measurement items. Select the measurement items that you want to use.
 - All ON** (highlighted) **All OFF**
 - ☒ T1 ☒ T2 ☒ ΔT ☒ 1/ ΔT
 - ☒ V1 ☒ V2 ☒ ΔV
 - V Cursor 1/2**
 - 3.00div**
-3.00div — Set the ΔV cursor positions (using the jog shuttle).
 - T Cursor 1/2**
 - 4.00div**
4.00div — Set the ΔT cursor positions (using the jog shuttle).
 - T Cursor Jump** — Make cursor ΔT jump. ► section 8.1

Set the cursor position.

- Push \odot Toggle**
 - Cursor1** **3.00div** — Cursor1 position
 - Cursor2** **-3.00div** — Cursor2 position
- Push \odot Toggle**
 - Cursor1** **-4.00div** — Cursor1 position
 - Cursor2** **4.00div** — Cursor2 position

8.4 Marker Cursor Measurements (Marker)


This section explains the following settings (which are used when measuring with marker cursors).

- Cursor measurement
- Cursor type
- Marker display format
- The waveform to measure using the cursors
- Measurement items
- Cursor jumping
- Cursor position

► [“Marker Cursors \(Marker\)” in the Features Guide](#)

CURSOR Menu


Press **CURSOR** to display the following menu.

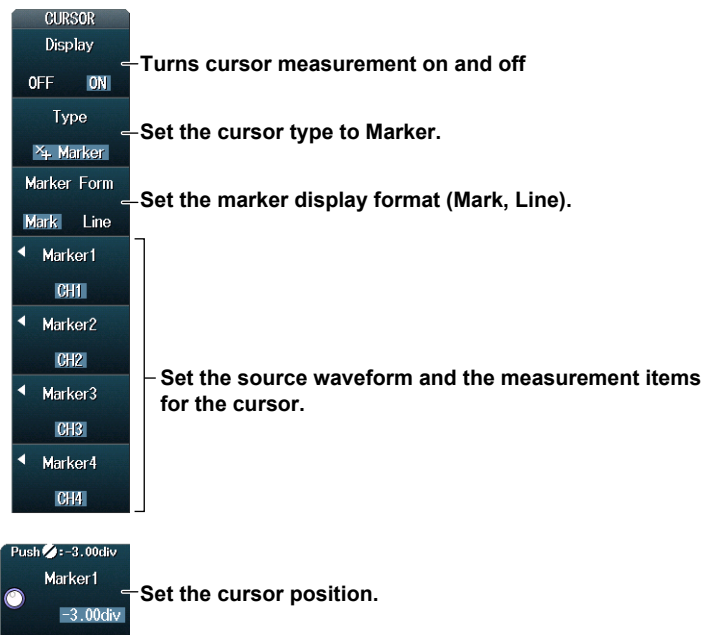

Selecting the Waveform to Measure and Setting the Measurement Items (Marker1, Marker2, Marker3, and Marker4)

Press a soft key from **Marker1** to **Marker4** to display the following menu.

Example: When you press the Marker1 soft key

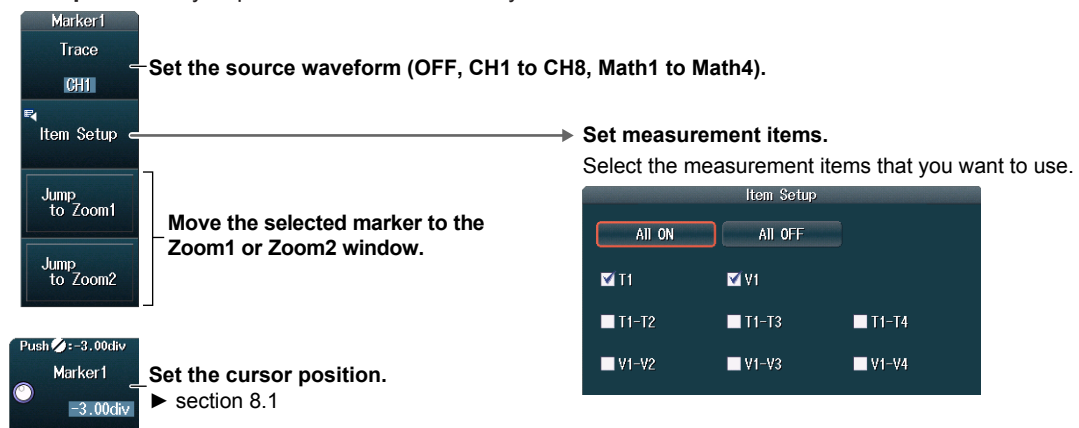

8.5 Angle Cursor Measurements (Degree)

 

This section explains the following settings (which are used when measuring with angle cursors).

- Cursor measurement
- Cursor type
- Source waveform
- Measurement items
- References
- Cursor jumping
- Cursor position

► “Angle Cursors (Degree)” in the Features Guide

CURSOR Menu


Press **CURSOR** to display the following menu.

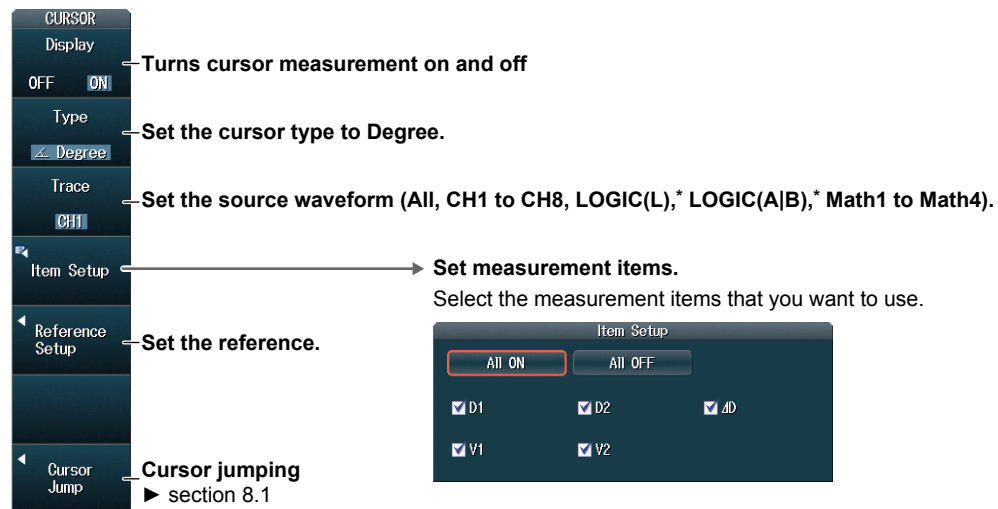

* You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated. Specify the channel that you want to measure in advance by pressing either the CH8 key or the L key. LOGIC(A|B) is available on models with the /L16 option.

Setting the Reference (Reference Setup)

Press the **Reference Setup** soft key to display the following menu.

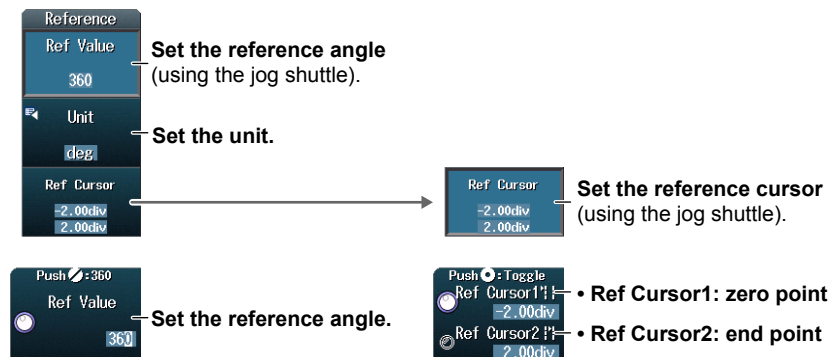

9.1 Automatically Measuring Waveform Parameters


This section explains the following settings (which are used when automatically measuring waveform parameters).

- Automated measurement
- The source waveform and measurement items
- The measurement location indicator
- The reference level for time measurements
- The measurement source window and the measurement range

► [“Automated Measurement of Waveform Parameters” in the Features Guide](#)

MEASURE Menu

Press **MEASURE** to display the following menu.

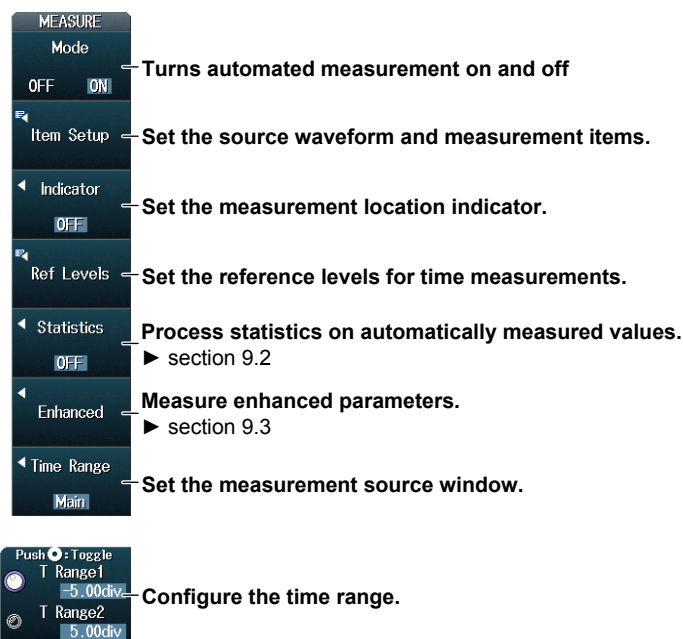

Setting the Source Waveform and the Measurement Items (Item Setup)

Press the **Item Setup** soft key and then a soft key from **CH1** to **CH8**, **LOGIC(L)**, **LOGIC(A)**, **LOGIC(B)**, or **Math1** to **Math4**, to display the following menu.


- * You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated. Specify the channel that you want to measure in advance by pressing either the CH8 key or the L key.
LOGIC(A) and LOGIC(B) are available on models with the /L16 option.

When the Measurement Source Waveform Is CH1 to CH8 or Math1 to Math4


Clears the check boxes of all the measurement items

Copies the settings on this screen to all channels

Set the cycle mode (OFF, 1 Cycle, or N Cycle).

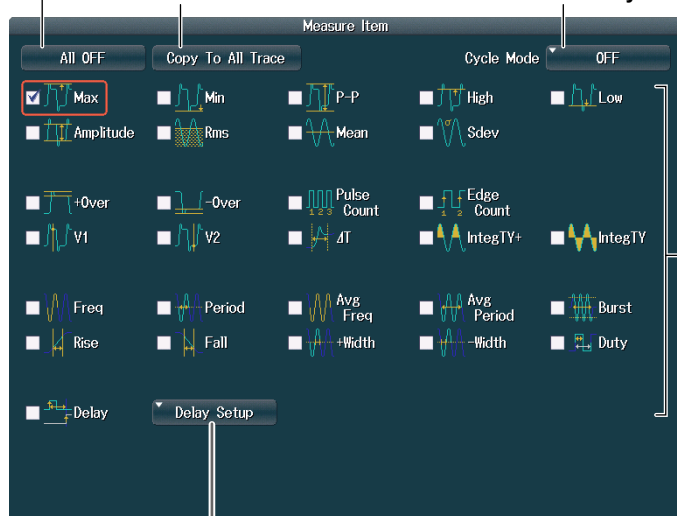

 Select the measurement items that you want to use.



Press the soft key for the channel you want to configure.

Configure the measurement of delay between waveforms.

Set the reference (CH1 to CH8, Math1 to Math4, TrigPos).

Set the polarity of the edge to be detected (F , L).

Set which counted edge to use as a detected point.



Set the unit (Time, Degree).

• When Reference is set to TrigPos.



When the Measurement Source Waveform Is LOGIC(L)

Clears the check boxes of all the measurement items

Select the measurement items that you want to use.


Press the LOGIC(L) soft key.

Configure the measurement of delay between waveforms.


Set the reference (CH1 to CH7, LOGIC(L), LOGIC(A|B),* Math1 to Math4, TrigPos).

Set the polarity of the edge to be detected (F, Z).



Set which counted edge to use as a detected point.

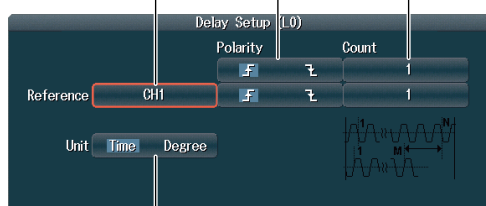

Set the unit (Time, Degree).

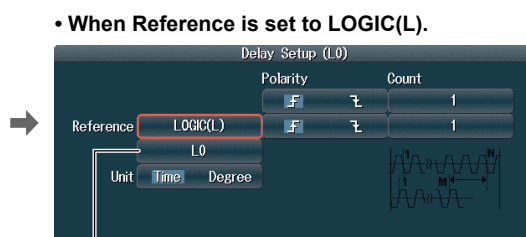

Set the reference bit (L0 to L7).

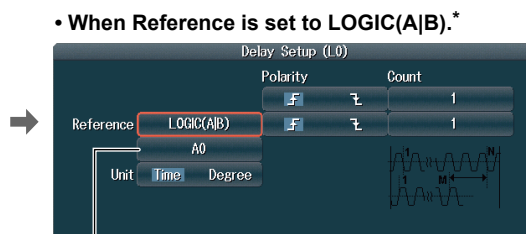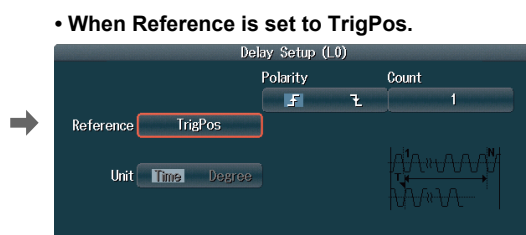


Set the reference bit (A0 to A7, B0 to B7).

* LOGIC(A|B) is available on models with the /L16 option.

9.1 Automatically Measuring Waveform Parameters

When the Measurement Source Waveform Is LOGIC(A) or LOGIC(B) (Option)

Example: When the measurement source waveform is LOGIC(A)

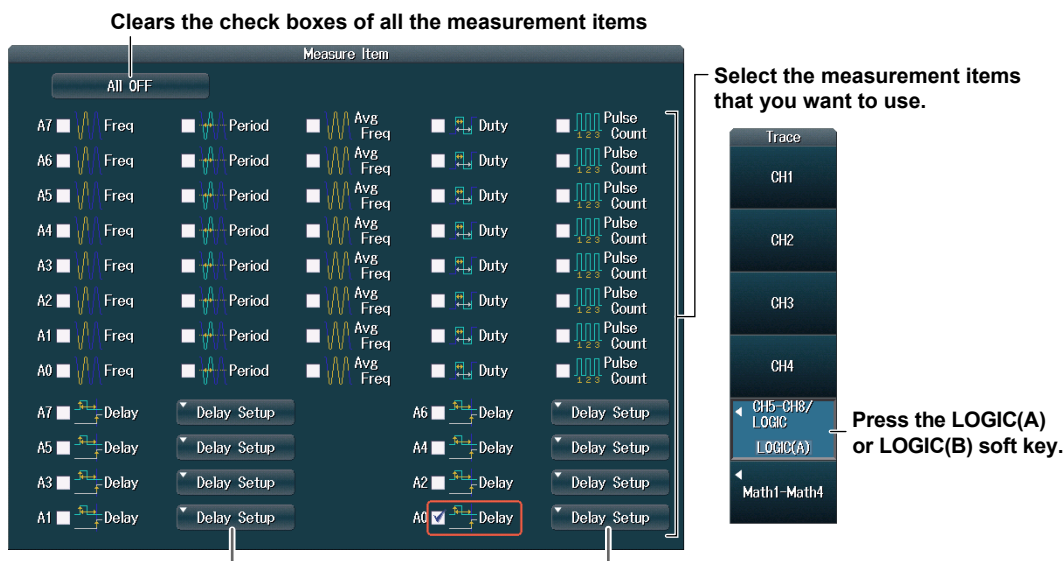


Configure the measurement of delay between waveforms.

Set the reference (CH1 to CH8 or LOGIC(L),* LOGIC(A|B), Math1 to Math4, TrigPos).

Set the polarity of the edge to be detected (F , 1).

Set which counted edge to use as a detected point.

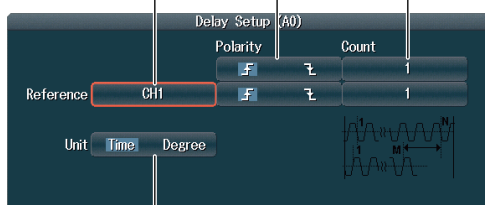


Set the unit (Time, Degree).

• When Reference is set to LOGIC(L).*



Set the reference bit (L0 to L7).

• When Reference is set to LOGIC(A|B).

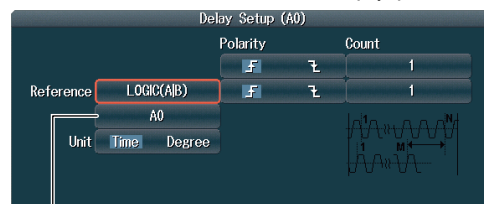

Set the reference bit (A0 to A7, B0 to B7).

• When Reference is set to TrigPos.



* You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated. Specify the channel that you want to measure in advance by pressing either the CH8 key or the L key.

Setting the Measurement Location Indicator (Indicator)

1. Press the **Indicator** soft key.

You can set Indicator to OFF (the measurement location indicator is not displayed) or display a setup menu with the items whose check boxes you have selected in "Setting the Source Waveform and the Measurement Items (Item Setup)."

* The measurement locations of the following items can be indicated.

Max, Min, P-P, High, Low, Amplitude, Rms, Mean, +Over, -Over, V1, V2, Avg Freq, Avg, Period, Burst, Freq, Period, +Width, -Width, Duty, Rise, Fall, and Delay

2. Use the **jog shuttle** or the **SET** key to select the item whose measurement location you want to indicate.

The measurement location of the item you specify is indicated by a cursor.

Setting the Reference Levels for Time Measurements (Ref Levels)

Press the **Ref Levels** soft key to display the following screen.

Set the unit for the distal, mesial, and proximal reference levels (% or Unit).

Set the distal value (using the jog shuttle).

Set the mesial value (using the jog shuttle).

Set the proximal value (using the jog shuttle).

Set the mode for determining high and low levels (Auto, Max-Min, Histogram).

	Mode	Distal	Mesial	Proximal	High	Low
CH1	% Unit	90%	50%	10%	Auto	
CH2	% Unit	90%	50%	10%	Auto	
CH3	% Unit	90%	50%	10%	Auto	
CH4	% Unit	90%	50%	10%	Auto	
CH5	% Unit	90%	50%	10%	Auto	
CH6	% Unit	90%	50%	10%	Auto	
CH7	% Unit	90%	50%	10%	Auto	
CH8	% Unit	90%	50%	10%	Auto	
Math1	% Unit	90%	50%	10%	Auto	
Math2	% Unit	90%	50%	10%	Auto	
Math3	% Unit	90%	50%	10%	Auto	
Math4	% Unit	90%	50%	10%	Auto	

Setting the Measurement Source Window (Time Range)

Main: Set the measurement source window to the Main window.

Zoom1: Set the measurement source window to the Zoom1 window.

Zoom2: Set the measurement source window to the Zoom2 window.

Setting the Measurement Time Period (T Range1/T Range2)

Set the measurement time period within the window specified by Time Range.

Note

About the roll-mode display

- If the record length is 1.25 Mpoints or longer, measured time values such as ΔT and Freq appear after you stop waveform acquisition using the RUN/STOP key.
- If the record length is set such that waveform acquisition operates in Single mode (6.25 Mpoints or longer for models without a memory option), automatically measured values of waveform parameters appear when the roll mode display stops.

9.2 Processing Statistics on Automatically Measured Values


This section explains the following settings (which are used when processing statistics on automatically measured waveform parameters).

- Statistical processing mode
- Normal statistical processing
- Cyclic statistical processing
- Statistical processing of history data

► [“Statistics \(Statistics\)” in the Features Guide](#)


MEASURE Statistics Menu

Press **MEASURE**, the **Statistics** soft key, and then the **Mode** soft key to display the following menu.

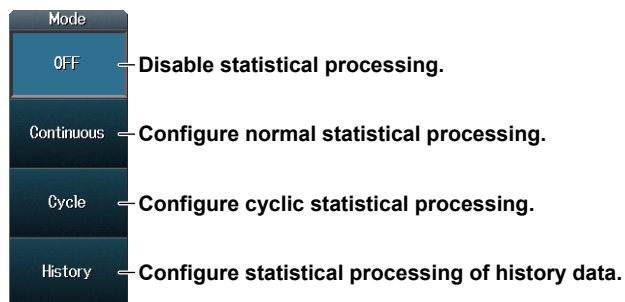

Setting Normal Statistical Processing (Continuous)

Press the **Continuous** soft key to display the following menu.

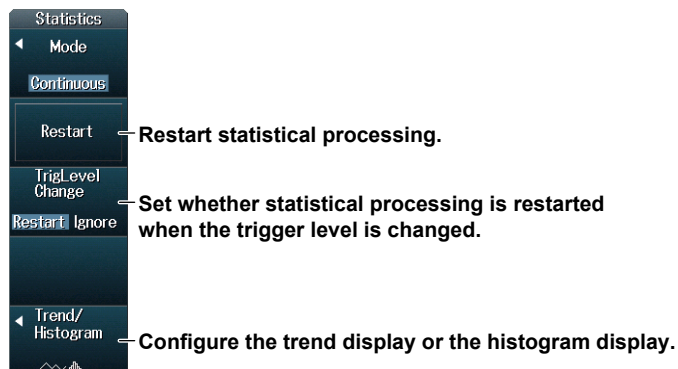

Setting for Restarting Statistical Processing When the Trigger Level Is Changed


Restart: If the trigger level is changed during waveform acquisition, the statistical processing performed up to that point is discarded, the waveform Count is set to 1, and statistical processing restarts.

Ignore: If the trigger level is changed during waveform acquisition, waveform acquisition and statistical processing continue without statistical processing being reset.


Setting the Trend Display and the Histogram Display (Trend/Histogram)

Press the **Trend/Histogram** soft key to display the following menu.

• Trend Display

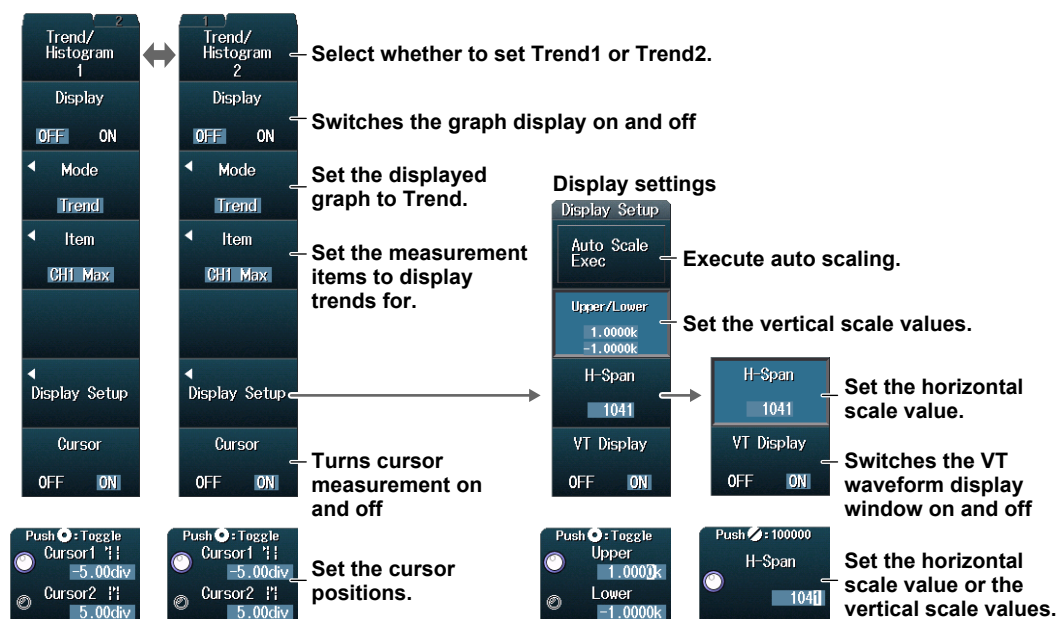

• Histogram Display

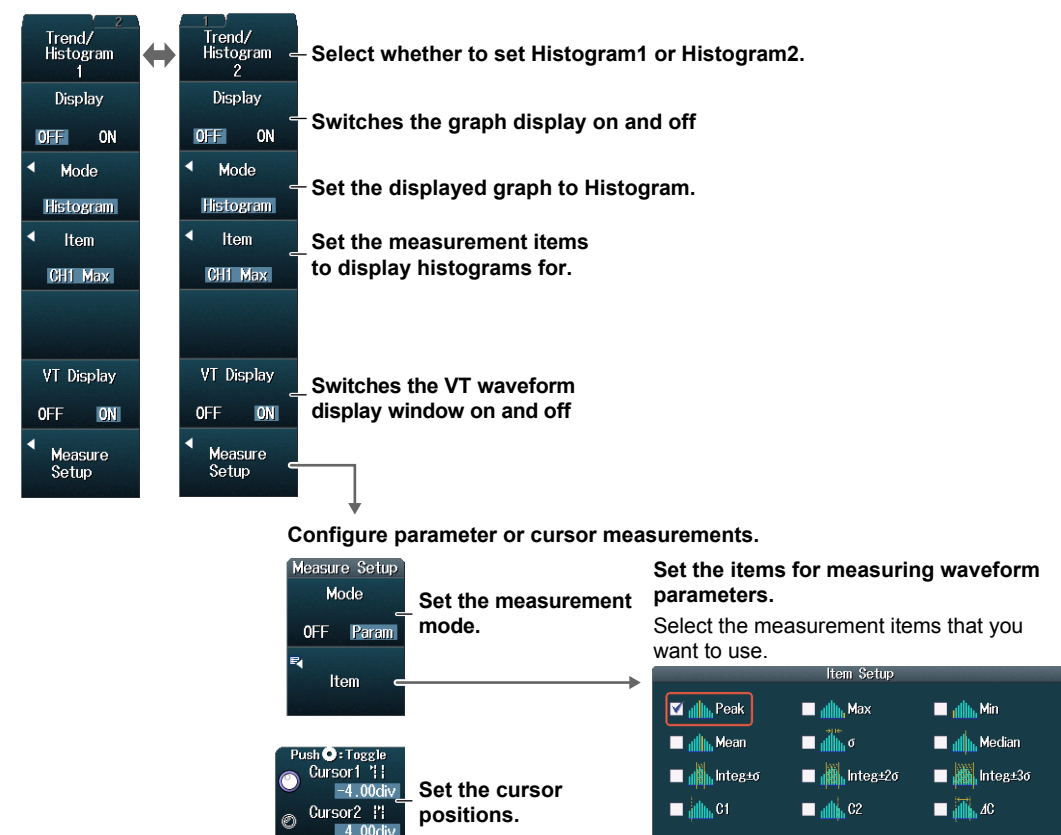

Setting Cyclic Statistical Processing (Cycle)

Press the **Cycle** soft key to display the following menu.

Statistics
 ◀ Mode
 Cycle
 Exec
 ◀ Cycle Trace
 CH1
 List
 ◀ Trend/
 Histogram

Execute statistical processing.

Set the source waveform used to determine the period (Own, CH1 to CH8, LOGIC(L),* LOGIC(A|B),* Math1 to Math4).

Configure the list display.

Configure the trend display or the histogram display.
 ▶ the trend and histogram menus for normal statistical processing on the previous page

* You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated. Specify the channel that you want to measure in advance by pressing either the CH8 key or the L key. LOGIC(A|B) is available on models with the /L16 option.

Setting the List Display (List)

Press the **List** soft key to display the following menu.

↓: Displayed by the minimum value of each measurement item

↑: Displayed by the maximum value of each measurement item

	Min(C2)	P-P(C2)	High(C2)	Low(C2)
1	-0.71mV	10.87mV	10.09mV	-0.12mV
2	-0.84mV	11.00mV	10.09mV	-0.14mV
3	-1.17mV	11.35mV	10.09mV	-0.10mV
4	-1.03mV	11.19mV	10.09mV	-0.12mV
5	-0.75mV	10.91mV	10.09mV	-0.05mV
6	-0.92mV	11.08mV	10.09mV	-0.09mV
7	-1.01mV	11.17mV	10.09mV	-0.05mV
8	-0.75mV	10.91mV	10.09mV	-0.04mV
9	-0.91mV	11.07mV	10.09mV	-0.02mV
10	-0.60mV	10.76mV	10.09mV	0.01mV
11	-0.56mV	10.73mV	10.09mV	-0.04mV
12	-0.74mV	10.89mV	10.09mV	-0.05mV
13	-1.63mV	11.79mV	10.09mV	-0.02mV
14	-0.88mV	11.04mV	10.09mV	-0.01mV
15	-0.73mV	10.89mV	10.09mV	-0.05mV
16	-0.97mV	11.13mV	10.09mV	-0.01mV
17	-0.82mV	10.97mV	10.09mV	-0.01mV
18	-1.02mV	11.18mV	10.09mV	-0.07mV
19	-0.89mV	11.05mV	10.09mV	-0.04mV
20	-0.78mV	10.93mV	10.09mV	-0.05mV
21	-0.70mV	10.85mV	10.09mV	-0.05mV
22	-0.81mV	10.97mV	10.09mV	-0.07mV
23	-0.72mV	10.88mV	10.09mV	-0.02mV
24	-0.61mV	10.77mV	10.09mV	-0.07mV
25	-0.85mV	11.01mV	10.09mV	-0.05mV
26	-0.68mV	10.84mV	10.09mV	-0.05mV
27	-0.72mV	10.88mV	10.09mV	-0.05mV
28	-0.79mV	10.95mV	10.09mV	-0.09mV
29	-1.48mV	11.64mV	10.09mV	-0.04mV

When a scroll bar appears, you can move the SET key left and right or up and down to move the highlighted position and scroll through the displayed items.

Set the search mode (OFF, Statistics Max, Statistics Min, Data≤b, a≤Data, or a≤Data≤b).

Jumps to and highlights the specified destination

List
 ◀ Search Mode
 a < Data < b
 a/b
 0.0000
 0.0000
 Jump to
 Previous
 Next
 Oldest
 Latest
 Sort
 Forward

Search Mode
 OFF
 Statistics Max
 Statistics Min
 Data ≤ b
 a ≤ Data
 a ≤ Data ≤ b

Push = Toggle
 a
 0.0000
 b
 0.0000

Select the sort method (Forward or Reverse).


Set the value of a and b (only when Search Mode is set to Data≤b, a≤Data, or a≤Data≤b).

Note

You can highlight a measured value and then press SET to zoom in on the corresponding waveform position.

Setting Statistical Processing of History Data (History)

Press the **History** soft key to display the following menu.

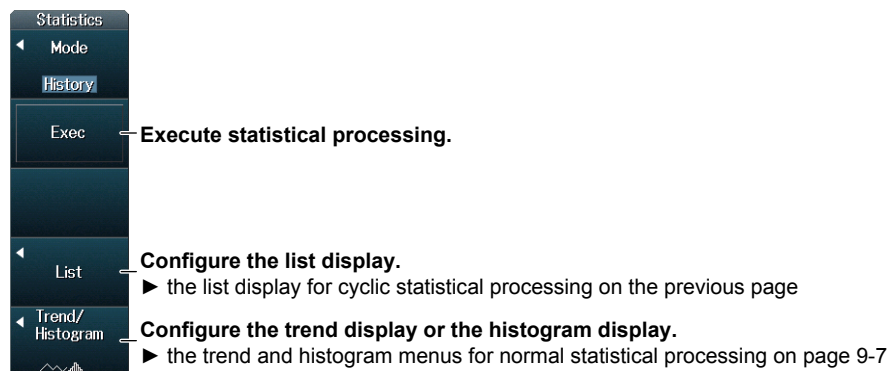

9.3 Measuring Enhanced Parameters

This section explains the settings used when performing automated measurement of the waveform parameters of two areas.

► “Enhanced Parameter Measurement (Enhanced)” in the Features Guide

MEASURE Enhanced Menu

Press **MEASURE** and then the **Enhanced** soft key to display the following menu.

Enhanced menu options: Item Setup (Area2), Calc Setup, Time Range (Area2), Main.

Set Area2. (points to Item Setup (Area2))

Set up a calculation that uses automated measurement values.

Select the expressions to use.

Enter the name using up to 8 characters.

Enter the unit using up to 4 characters.

	Name	Expression	Unit
<input type="checkbox"/> Calc 1	Calc1	Max(C1)	
<input type="checkbox"/> Calc 2	Calc2	Min(C2)	
<input type="checkbox"/> Calc 3	Calc3	High(M1)	
<input type="checkbox"/> Calc 4	Calc4	Low(M2)	

Set the measurement source window. ► section 9.1 (points to Calc Setup)

Configure the time range. ► section 9.1 (points to Time Range (Area2))

Set the expressions.

Define an expression by combining computation source waveforms and operators.

Calc 4: Low(M2)

Measure button

You can include the automated measurement values of waveform parameters to expressions.

Setting Area2 (Item Setup (Area2))

Press the **Item Setup (Area2)** soft key to display a screen for setting the Area2 source waveform and measurement items. The screen is the same as the Item Setup screen shown in section 9.1.

Note

You cannot use the enhanced parameter measurement feature when the statistical processing mode is set to Cycle.

10.1 Zooming in on or out from Waveforms


This section explains the following settings (which are used when zooming in on or out from waveforms).

- Zoom
- Display format
- Main window display
- Auto scrolling
- Zoom source waveform
- Zoom position
- Zoom factor

► “Zooming in on Waveforms” in the Features Guide


ZOOM Menu

Press **ZOOM1** or **ZOOM2** to display the following menu.

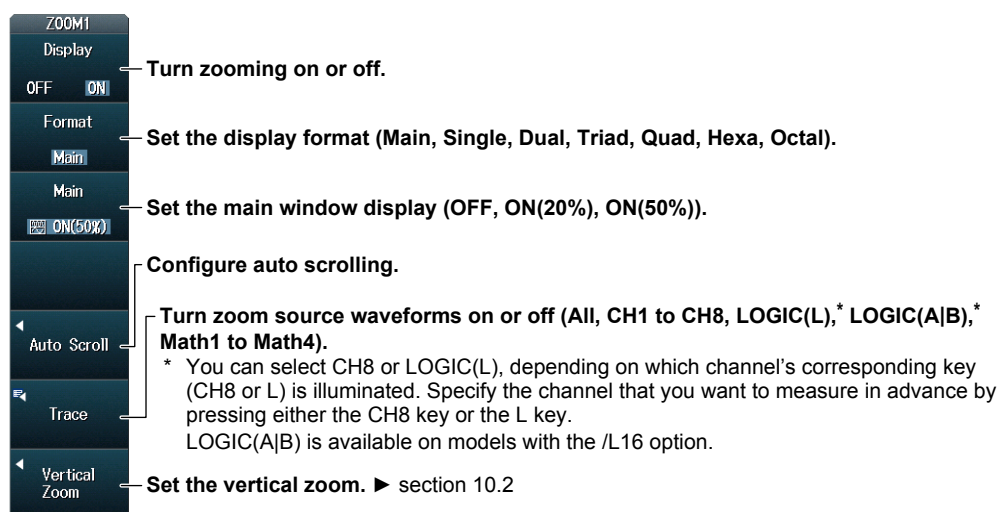

Setting Auto Scrolling (Auto Scroll)

Press the **Auto Scroll** soft key to display the following menu.

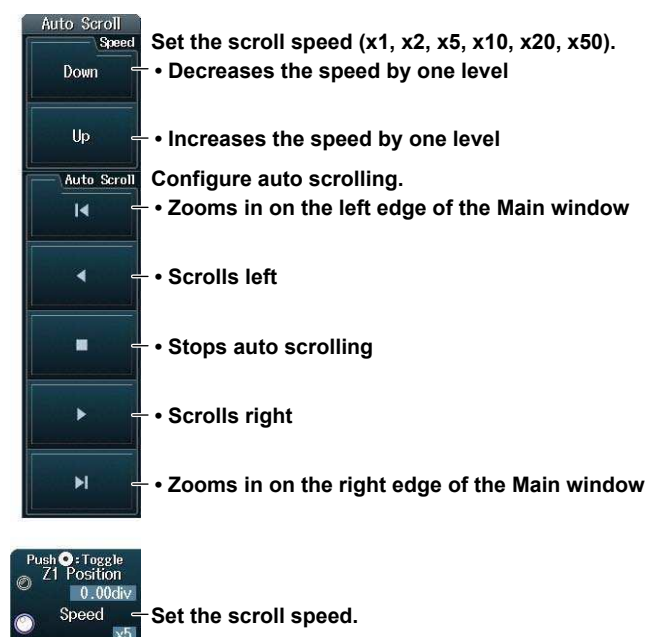


Setting the Zoom Factor (ZOOM knob)

Use the **ZOOM** knob to set the zoom factor.

The ZOOM knob controls the waveforms in the window whose corresponding key (ZOOM1 or ZOOM2) is illuminated more brightly.

If you push the ZOOM knob, the FINE indicator illuminates, and you can set the zoom factor with higher resolution.

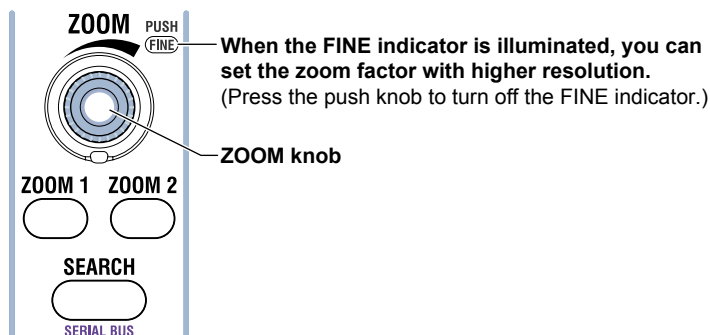


10.2 Zooming in on or out from Waveforms in the Vertical Direction

This section explains the following settings (which are used when zooming in on or out from waveforms in the vertical direction).

► “Vertical Zoom (Vertical Zoom)” in the Features Guide

ZOOM Vertical Zoom Menu

Press **ZOOM1** or **ZOOM2** and then the **Vertical Zoom** soft key to display the following menu.

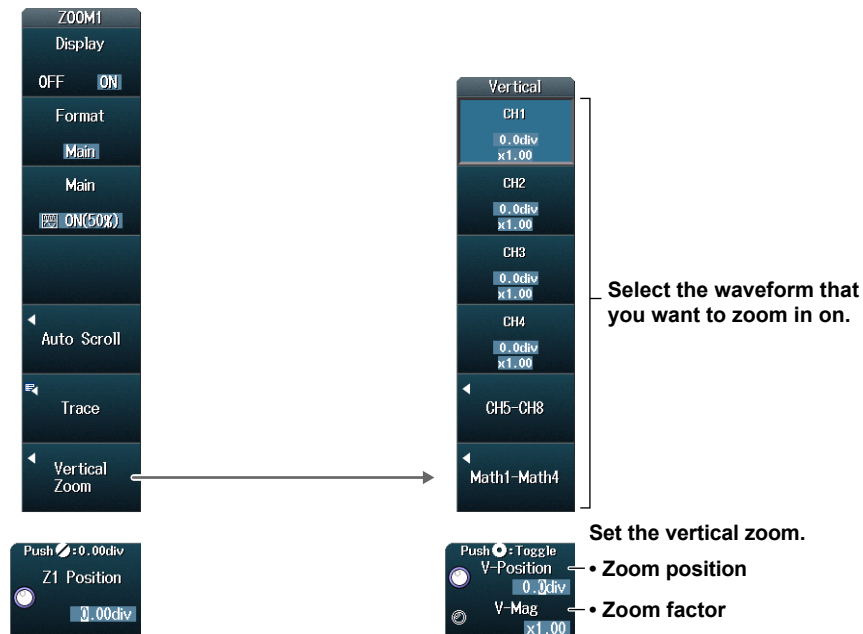

Note

You can reset the zoom position and factor by pressing RESET.

11.1 Searching for Edges


This section explains the following settings (which are used when searching for edges).

- Search type
- Search range
 - Search start and end points
- Search conditions
 - Source, slope, the level used to detect source states, and hysteresis
- Detected waveform display
 - Detected point marks, zoom window, and zoom position
- Search skipping
- Executing searches


► “Search Type (Type),”
 “Search Range (Start/End Point),”
 “Search Conditions (Condition Setup),”
 “Displaying Detected Waveforms (Display Setup),” and
 “Search Skip (Skip Mode)”
 in the Features Guide

SEARCH Edge Menu

Press **SEARCH**, the **Type** soft key, and then the **Edge** soft key to display the following menu.

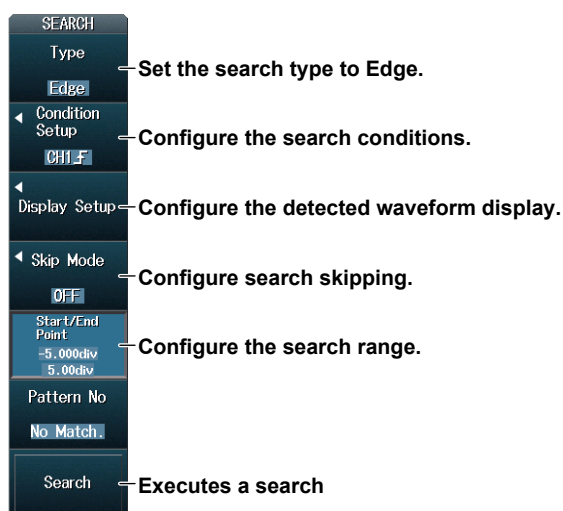

 When You Press the Start/End Point Soft Key



Setting Search Conditions (Condition Setup)

 

Note

Using the CH8 Terminal and LOGIC(L) Port



When you execute a search, you cannot use the CH8 terminal and LOGIC(L) port as the source at the same time. Specify the source that you want to use in advance by pressing either the CH8 key or the L key.

Press the **Condition Setup** soft key to display one of the menus shown below. The menu that is displayed varies depending on the specified source.

When the Source is CH1 to CH8 or Math1 to Math4

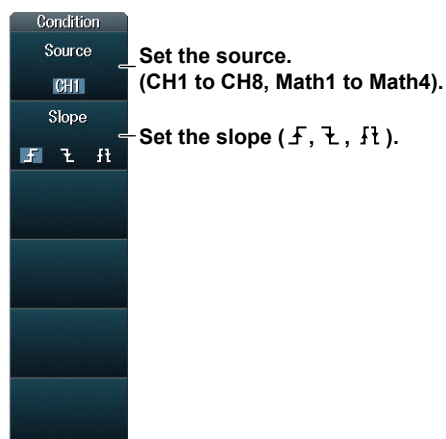



When the Source Is LOGIC(L) or LOGIC(A|B)*

 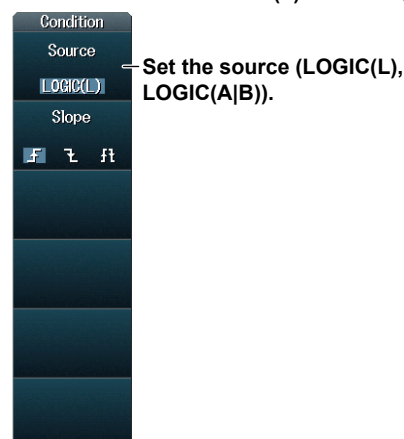

* LOGIC(A|B), A0 to A7, and B0 to B7 are available on models with the /L16 option.

Setting the Detected Waveform Display (Display Setup)

 Press the **Display Setup** soft key to display the following menu.

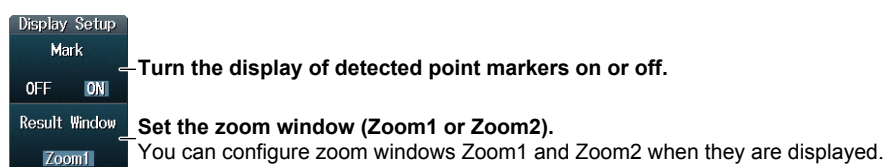

Turning the Display of Detected Point Markers On or Off


You can display marks at the top of the main and zoom windows to clearly show the detected position on the waveform (the detected point mark). Marks that match detected point numbers are highlighted.

Configuring Search Skipping (Skip Mode)

Press the **Skip Mode** soft key to display the following menu.


After a search condition is met, you can skip the detection of search conditions for the specified amount of time or the specified number of counts.

(You can specify this setting when the search type is set to Edge or Pulse Width.)

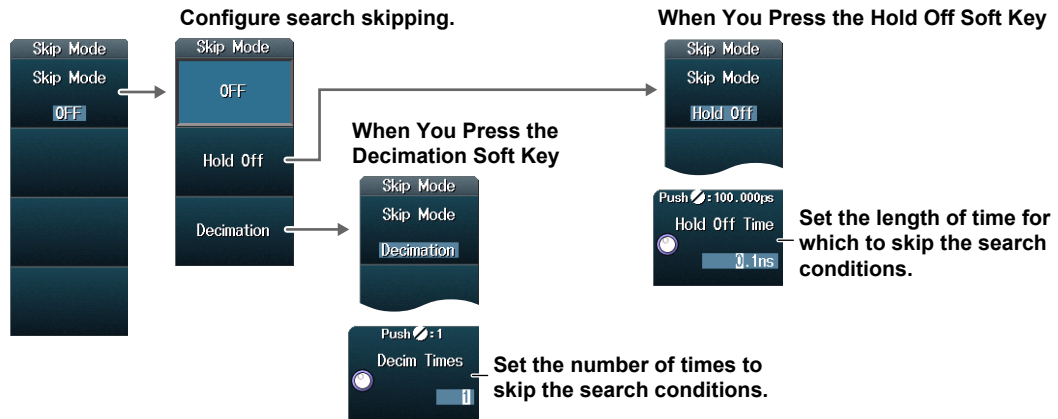

Executing a Search (Search)

Press the **Search** soft key to execute the search.

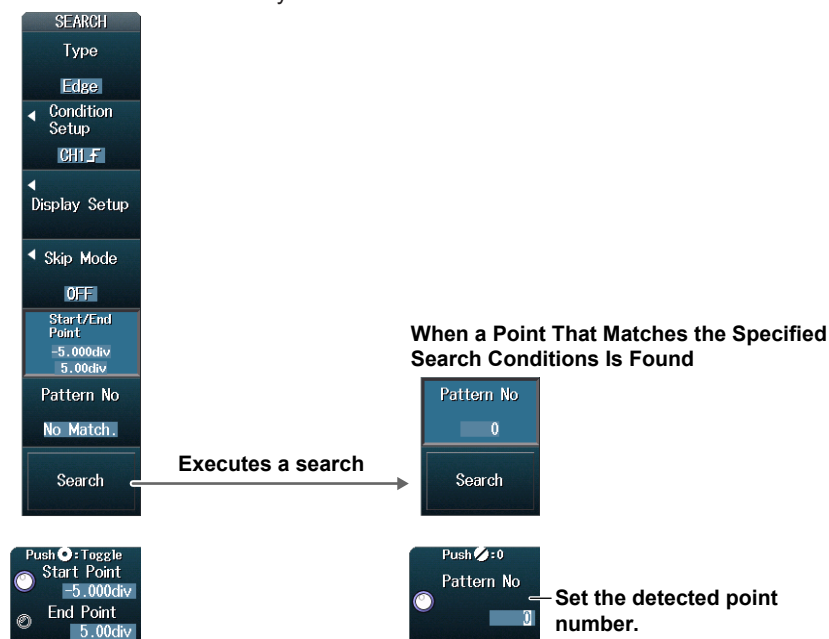

Executing Searches

1. Set the search conditions.
2. Press the **Search** soft key.

The DLM4000 searches for the search conditions. If the DLM4000 finds points that match the search conditions (detected points), it shows numbers (0, 1, 2, etc.) from the left of the waveform display in the order that the points were detected.

Setting the Detected Point Number

You can set the detected point number and display the waveform for the detected point on the zoom window.

11.2 Using Conditions to Limit Edge Searches


This section explains the following settings (which are used when using conditions to limit edge searches).

- Search type
- Search range
 - Search start and end points
- Search conditions
 - Source, slope, qualifications, logic combination, search requirements, the level used to detect signal states, and hysteresis


► “Search Type (Type),”
“Search Range (Start/End Point),” and
“Search Conditions (Condition Setup)”
in the Features Guide

SEARCH Edge Qualified Menu

Press **SEARCH**, the **Type** soft key, and then the **Edge Qualified** soft key to display the following menu.

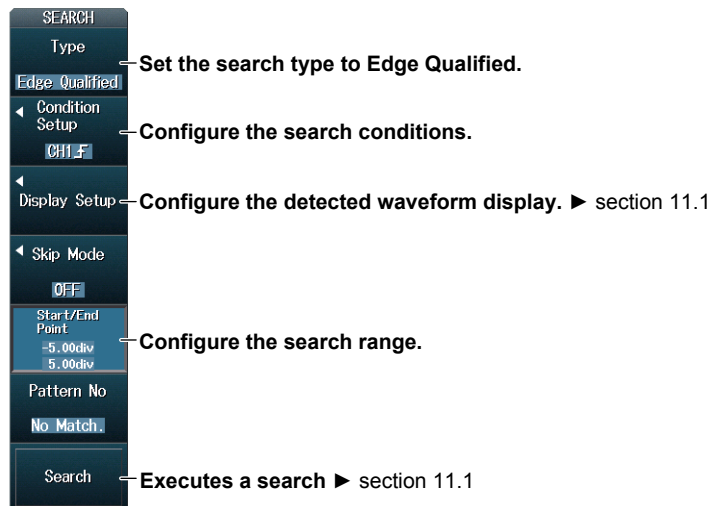

 When You Press the Start/End Point Soft Key



Setting Search Conditions (Condition Setup)

Note

Using the CH8 Terminal and LOGIC(L) Port

When you execute a search, you cannot use the CH8 terminal and LOGIC(L) port as the source at the same time. Specify the source that you want to use in advance by pressing either the CH8 key or the L key.

Press the **Condition Setup** soft key to display one of the menus shown below. The menu that is displayed varies depending on the specified source.

When the Source is CH1 to CH8 or Math1 to Math4

Condition

Source **CH1** — Set the source (CH1 to CH8, Math1 to Math4).

Slope **F** **L** — Set the slope (F, L).

Qualification — Set the qualifications.

Logic **AND** **OR** — Set the logic combination (AND, OR).

Condition **True** **False** — Set the search requirement (True, False).

Level/Hys — Set the hysteresis and the level used to detect the state for each signal.

When the Source Is LOGIC(L) or LOGIC(A|B)*

Condition

Source **LOGIC(L)** — Set the source (LOGIC(L), LOGIC(A|B)).

Slope **F** **L**

Qualification

Logic **AND** **OR**

Condition **True** **False**

Level/Hys

Source Bit — Set the source bit (L0 to L7, A0 to A7, B0 to B7).*

* LOGIC(A|B), A0 to A7, and B0 to B7 are available on models with the /L16 option.

Setting the Qualifications (Qualification)

Press the **Qualification** soft key to display the following screen.

Example: When the source is CH1

Signal set to be the source

Set the qualifications (H, L, X) for signals other than the source.

Qualification

CH1 **F** **L**

CH2 H L X

CH3 H L X

CH4 H L X

CH5 H L X

CH6 H L X

CH7 H L X

CH8 H L X

L7 H L X

L6 H L X

L5 H L X

L4 H L X

L3 H L X

L2 H L X

L1 H L X

L0 H L X

A7 H L X

A6 H L X

A5 H L X

A4 H L X

A3 H L X

A2 H L X

A1 H L X

A0 H L X

B7 H L X

B6 H L X

B5 H L X

B4 H L X

B3 H L X

B2 H L X

B1 H L X

B0 H L X

Math1 H L X

Math2 H L X

Math3 H L X

Math4 H L X


CH8 and L0 to L7 cannot be enabled simultaneously. Specify the source that you want to use in advance by pressing either the CH8 key or the L key.

/L16 option

11.2 Using Conditions to Limit Edge Searches

Setting the Hysteresis and the Level Used to Detect the Signal State for Each Signal (Level/Hys)

Press the **Level/Hys** soft key to display the following screen.

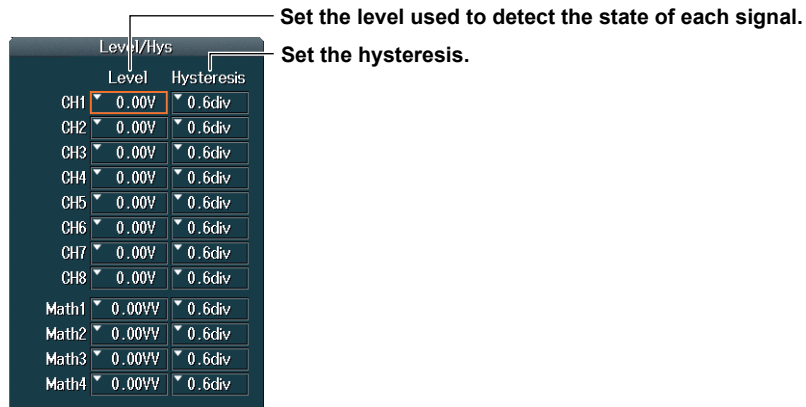

11.3 Searching for State Conditions


This section explains the following settings (which are used when searching for state conditions).

- Search type
- Search range
Search start and end points
- State condition
Clock source, pattern, logic combination, search requirements, the level used to detect signal states, and hysteresis


► “Search Type (Type),”
“Search Range (Start/End Point),” and
“Search Conditions (Condition Setup)”
in the Features Guide

SEARCH State Menu

Press **SEARCH**, the **Type** soft key, and then the **State** soft key to display the following menu.

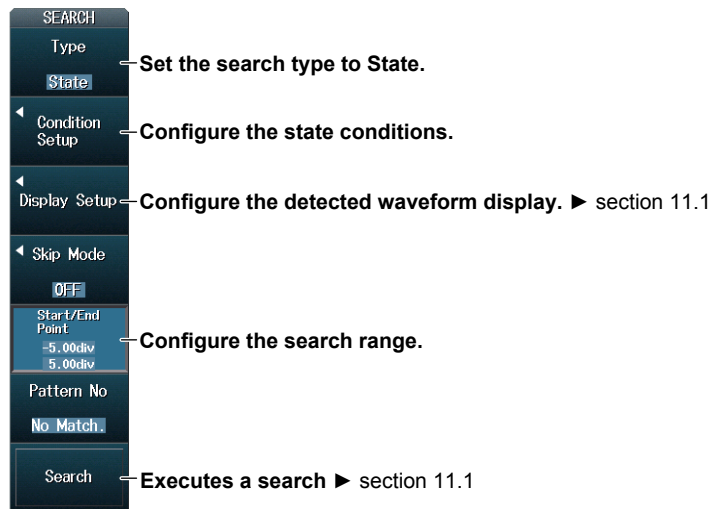

 When You Press the Start/End Point Soft Key



Setting State Conditions (Condition Setup)


Note

Using the CH8 Terminal and LOGIC(L) Port

When you execute a search, you cannot use the CH8 terminal and LOGIC(L) port as the source at the same time. Specify the source that you want to use in advance by pressing either the CH8 key or the L key.

Press the **Condition Setup** soft key to display the following menu.

When the Clock Source is X, CH1 to CH8, or Math1 to Math4

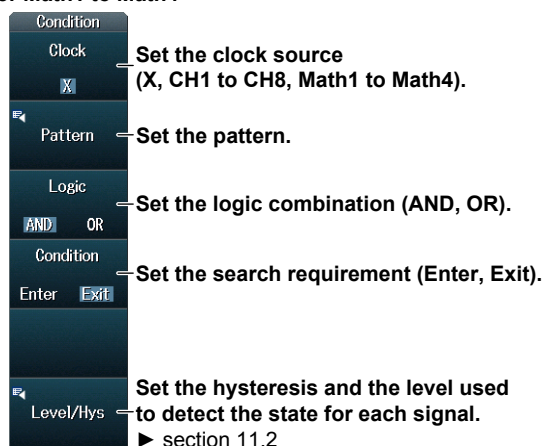

When the Clock Source is LOGIC(L) or LOGIC(A|B)*



* LOGIC(A|B), A0 to A7, and B0 to B7 are available on models with the /L16 option.


Setting the Pattern (Pattern)

Press the **Pattern** soft key to display one of the screens shown below. The screen that is displayed varies depending on the specified clock source.

Example: When the clock source is CH1

Set the slope for the clock source signal (F, L).

Set the pattern (H, L, X) for signals other than the clock source.

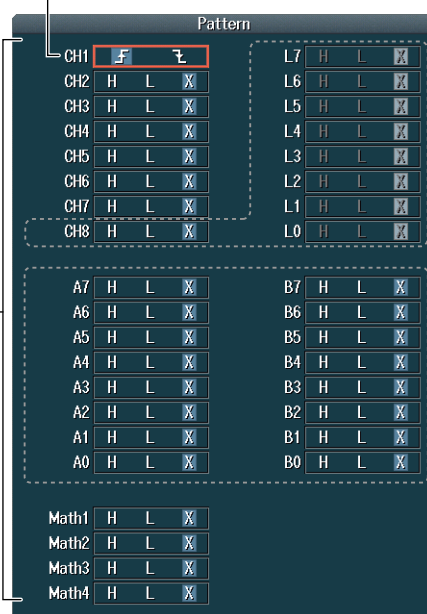

CH8 and L0 to L7 cannot be enabled simultaneously. Specify the source that you want to use in advance by pressing either the CH8 key or the L key.

/L16 option

- **When There is No Clock Source (When the Clock Source is X)**

You can set the pattern for all the signal states for CH1 to CH7, CH8 or L0 to L7, A0 to A7, B0 to B7, and Math1 to Math4.

* A0 to A7 and B0 to B7 are available on models with the /L16 options.

11.4 Searching for Pulse Width


This section explains the following settings (which are used when searching for pulse width).

- Search type
- Search range
Search start and end points
- Search conditions
Source, polarity, time width mode, reference times, the level used to detect signal states, and hysteresis


► “Search Type (Type),”
“Search Range (Start/End Point),” and
“Search Conditions (Condition Setup)”
in the Features Guide

SEARCH Pulse Width Menu

Press **SEARCH**, the **Type** soft key, and then the **Pulse Width** soft key to display the following menu.

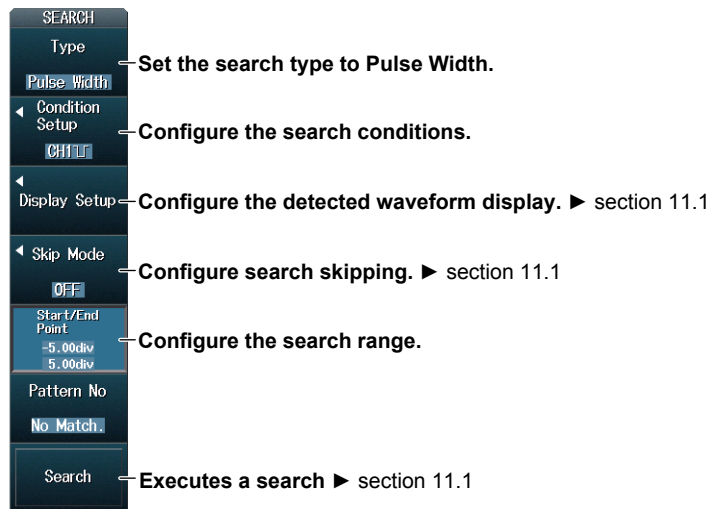

 When You Press the Start/End Point Soft Key



Setting Search Conditions (Condition Setup)


Note

Using the CH8 Terminal and LOGIC(L) Port


When you execute a search, you cannot use the CH8 terminal and LOGIC(L) port as the source at the same time. Specify the source that you want to use in advance by pressing either the CH8 key or the L key.

Press the **Condition Setup** soft key to display the following menu.

When the Source is CH1 to CH8 or Math1 to Math4

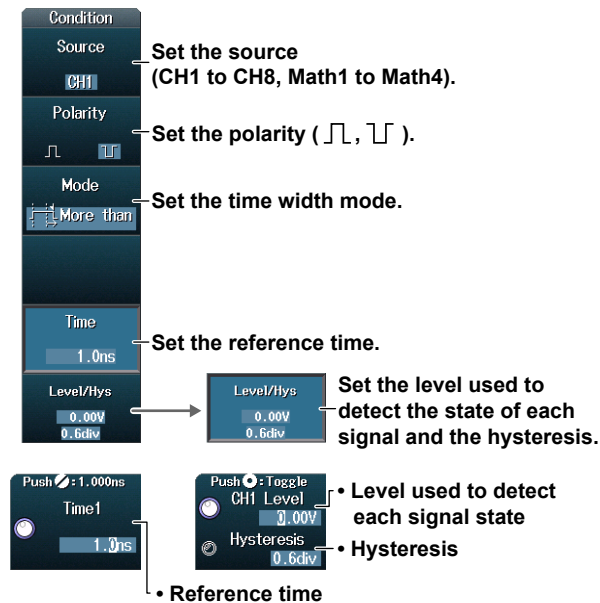


When the Clock Source is LOGIC(L) or LOGIC(A|B)*

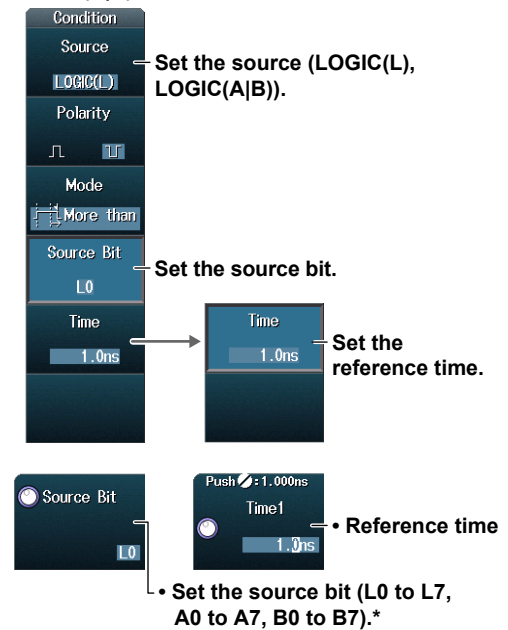

* LOGIC(A|B), A0 to A7, and B0 to B7 are available on models with the /L16 option.

Setting the Time Width Mode (Mode)

Press the **Mode** soft key to display the following menu.

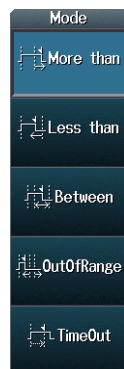

Set what kind of relationship must be established between the source's pulse width and the specified reference times (Time1 and Time2) for a point to be detected.

More than: The pulse width must be longer than reference time Time1.

Less than: The pulse width must be shorter than reference time Time1.

Between: The pulse width must be longer than Time1 but shorter than Time2.

 

OutOfRange: The pulse width must be shorter than Time1 or longer than Time2.

TimeOut: The pulse width must be longer than reference time Time1.

Setting the Reference Times (Time1 and Time2)


Press the **Time** soft key to display one of the menus shown below. The menu that is displayed varies depending on the set time width mode.

When the Time Width Mode Is More than, Less than, or TimeOut

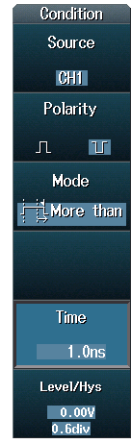

Set reference time Time1.

 When the Time Width Mode is Between or OutOfRange



Set reference time Time1.

Set reference time Time2.

11.5 Searching for State Width


This section explains the following settings (which are used when searching for state width).

- Search type
- Search range
Search start and end points
- State condition
Clock source, pattern, logic combination, search requirements, time width mode, reference times, the level used to detect signal states, and hysteresis


► “Search Type (Type),”
“Search Range (Start/End Point),” and
“Search Conditions (Condition Setup)”
in the Features Guide

SEARCH State Width Menu

Press **SEARCH**, the **Type** soft key, and then the **State Width** soft key to display the following menu.

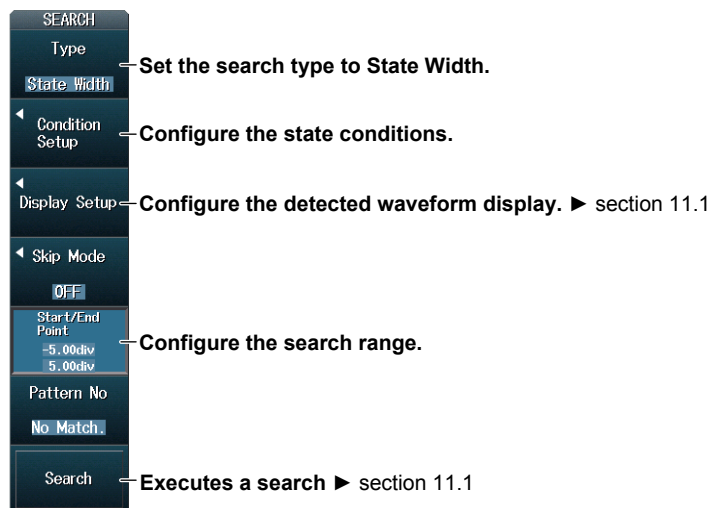

 When You Press the Start/End Point Soft Key



Setting State Conditions (Condition Setup)

Note

Using the CH8 Terminal and LOGIC(L) Port

When you execute a search, you cannot use the CH8 terminal and LOGIC(L) port as the source at the same time. Specify the source that you want to use in advance by pressing either the CH8 key or the L key.

Press the **Condition Setup** soft key to display the following menu.

When the Clock Source Is LOGIC(L) or LOGIC(A|B)*

The diagram illustrates the 'Condition Setup' menu and three possible channel source configurations. The menu on the left includes options for Clock, Pattern, Logic, Condition, Mode, and Level/Hys, each with a brief description. The three channel source configurations on the right show different combinations of channels and logic ports.

Condition Setup Menu:

- Clock:** Set the clock source (X, CH1 to CH8/LOGIC(L), LOGIC(A|B), Math1 to Math4).
- Pattern:** Set the pattern.
- Logic:** Set the logic combination (AND, OR).
- Condition:** Set the search requirement (True, False).
- Mode:** Set the time width mode.
- Level/Hys:** Set the hysteresis and the level used to detect the state for each signal. ▶ section 11.2

Channel Source Configurations:

- Configuration 1:** Clock: CH1, CH2, CH3, CH4, CH5-CH8/LOGIC, Math1-Math4, X.
- Configuration 2:** CH5-CH8/LOGIC, CH5, CH6, CH7, LOGIC(L), LOGIC(A|B).
- Configuration 3:** Clock: CH1, CH2, CH3, CH4, CH5-CH8/LOGIC, Math1-Math4, X.

Reference Time: Push 1.000ns, Time1, 1.0ns. Set the reference time.

Source Bit: Source Bit, L0. Set the source bit (L0 to L7, A0 to A7, B0 to B7).*

* LOGIC(A|B), A0 to A7, and B0 to B7 are available on models with the /L16 option.

Setting the Pattern (Pattern)

Press the **Pattern** soft key to display one of the screens shown below. The screen that is displayed varies depending on the specified clock source.

Example: When the clock source is CH1

Set the slope for the clock source signal (F, L).

Set the pattern (H, L, X) for signals other than the clock source.

Pattern

CH1	F	L	X
CH2	H	L	X
CH3	H	L	X
CH4	H	L	X
CH5	H	L	X
CH6	H	L	X
CH7	H	L	X
CH8	H	L	X

A7	H	L	X
A6	H	L	X
A5	H	L	X
A4	H	L	X
A3	H	L	X
A2	H	L	X
A1	H	L	X
A0	H	L	X

Math1	H	L	X
Math2	H	L	X
Math3	H	L	X
Math4	H	L	X

CH8 and L0 to L7 cannot be enabled simultaneously. Specify the source that you want to use in advance by pressing either the CH8 key or the L key.

/L16 option


- **When There is No Clock Source (When the Clock Source is X)**

You can set the pattern for all the signal states for CH1 to CH7, CH8 or L0 to L7, A0 to A7, B0 to B7, and Math1 to Math4.

* A0 to A7 and B0 to B7 are available on models with the /L16 options.

Setting the Time Width Mode (Mode)

Press the **Mode** soft key to display the following menu.

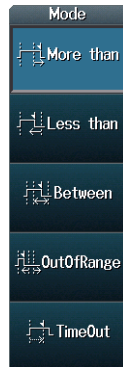


Set what kind of relationship between the length of time the state condition is met or not met and the specified reference times (Time1 and Time2) will result in a detected point.

- | | |
|-------------|---|
| More than: | A point is detected when the period during which the state condition is met or not met is longer than reference time Time1 and the condition changes. |
| Less than: | A point is detected when the period during which the state condition is met or not met is shorter than reference time Time1 and the condition changes. |
| Between: | A point is detected when the period during which the state condition is met or not met is longer than Time1 but shorter than Time2 and the condition changes. |
| OutOfRange: | A point is detected when the period during which the state condition is met or not met is shorter than Time1 or longer than Time2 and the condition changes. |
| TimeOut: | A point is detected when the period during which the state condition is met or not met is longer than reference time Time1. |

Setting the Reference Times (Time1 and Time2)

The menu that appears varies depending on the set time width mode.

When the Time Width Mode Is More than, Less than, or TimeOut

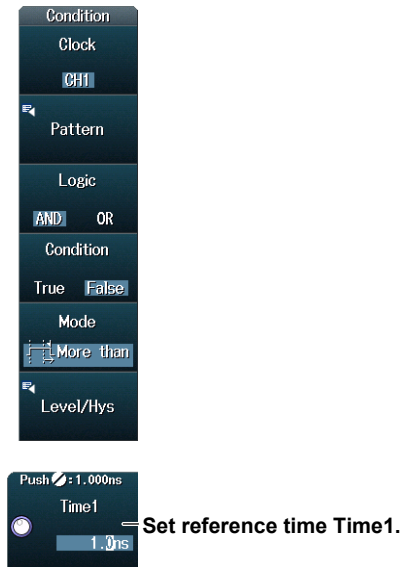

When the Time Width Mode is Between or OutOfRange



12.1 Analyzing and Searching FlexRay Bus Signals


This section explains the following settings (which are used when analyzing or searching FlexRay bus signals).

- Serial bus signal analysis and search displays
- Serial bus signal types
- Analysis
 - Auto setup, source, bit rate, bus channel, sample point, the level used to detect the source state, and hysteresis
- Decode display
- List display
 - List size, display position, and zoom linking
- Zoom position
- Analysis number
- Search
 - Jumping to the specified field, zoom window, search type, and search execution

► “Analyzing and Searching Serial Bus Signals” and
“Analyzing and Searching FlexRay Bus Signals”
in the Features Guide

SEARCH FlexRay Menu

Press **SHIFT+SEARCH** (SERIAL BUS), the **Type** soft key, and then the **FlexRay** soft key to display the following menu.

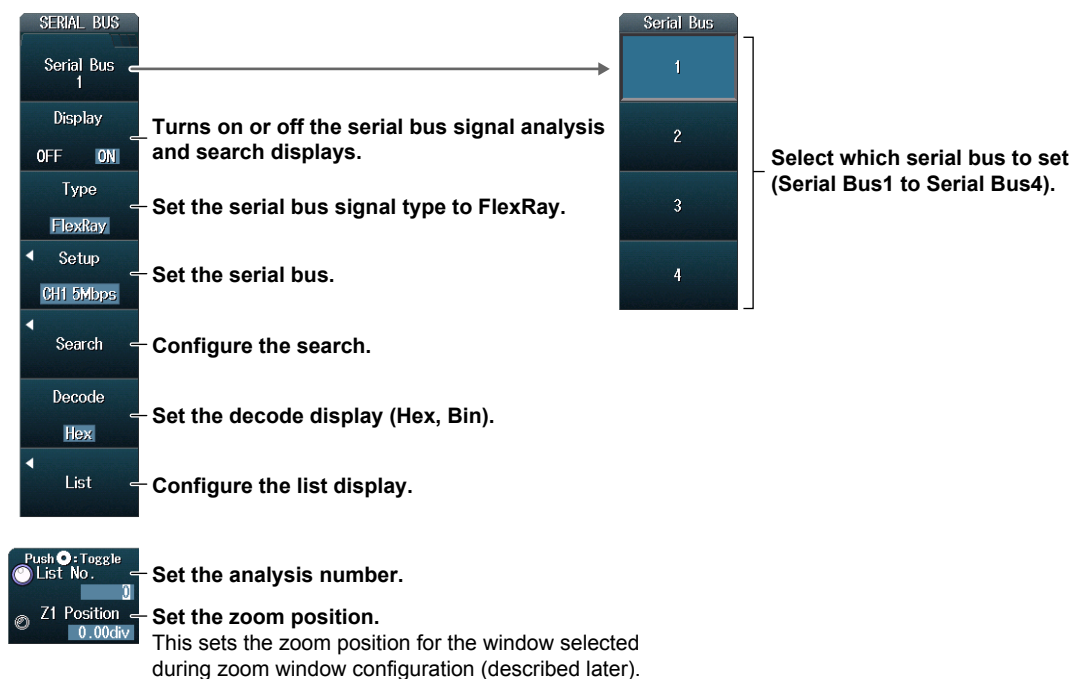


Setting the Serial Bus (Setup)

Note

Using the CH8 Terminal and LOGIC(L) Port

If you perform an analysis or execute a search when using the LOGIC(L) port for input, you cannot specify CH8 as the source. Press the CH8 key in advance to enable input from the CH8 terminal.

Press the **Setup** soft key to display the following menu.

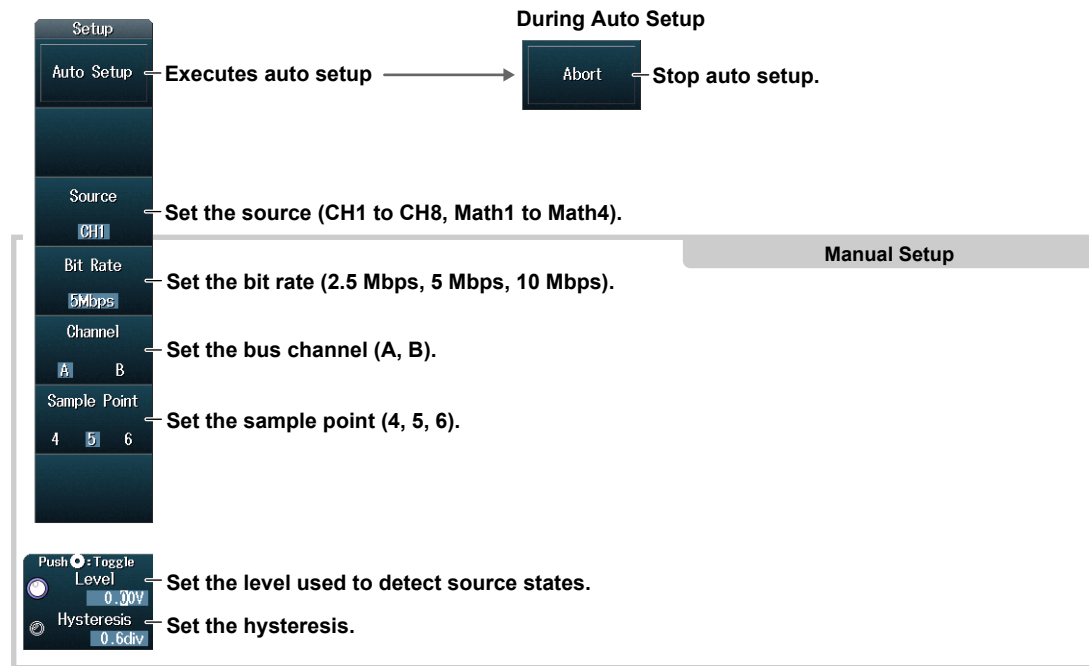

Auto Setup (Auto Setup)

1. Set the source.

* Auto setup cannot be performed when the source is set to Math1 to Math4.

2. Press the **Auto Setup** soft key.

The DLM4000 will automatically configure the serial bus settings.

The DLM4000 automatically configures the bit rate, bus channel, sample point, level, and hysteresis and triggers on the start of frame (SOF) of the FlexRay bus signal.

While the serial bus is being configured, Auto Setup changes to Abort. If you want to stop serial bus configuration, press the **Abort** soft key.

The auto setup feature will not work properly on some input signals.

Manual Setup

After running auto setup, you can change the following settings and display decoded results.

- Source
- Bit rate
- Bus channel
- Sample point
- Level used to detect source states
- Hysteresis

Setting the List Display (List)

Press the **List** soft key to display the following menu.

List

Zoom Link

OFF ON

List Size

Half(Upper)

Show List

Turns zoom linking on or off

Set the list size and the display position
(Full Screen, Half(Upper), Half(Lower)).

Lists the analysis results

Push 0

List No.

0

Set the analysis number.


Analysis number

No.	Time(ms)	S/D	IND	ID	Len	CC	Data	Information
-4	-0.205008	S	0011	1	4	3	01 01 01 01 01 01 01 01	FES Error
-3	-0.153808	S	0011	2	4	3	02 02 02 02 02 02 02 02	
-2	-0.102608	S	0010	3	4	3	03 03 03 03 03 03 03 03	
-1	-0.051408	S	1111	4	4	3	01 02 03 04 05 06 07 08	
0	-0.000216	S	0000	5	4	3	00 00 00 00 00 00 00 00	
1	0.050984	D	1111	6	5	3	C8 C9 CA CB CC CD CE CF D0 D1	
2	0.102192	D	1111	7	2	3	FF FF FF FF	
3	0.153384	D	1111	8	6	3	01 01 01 01 02 02 02 02 03 03 03 03	
4	0.204592	S	0011	1	4	4	01 01 01 01 01 01 01 01	CRC Error
5	0.255792	S	0011	2	4	4	02 02 02 02 02 02 02 02	
6	0.306992	S	0010	3	4	4	03 03 03 03 03 03 03 03	
7	0.358192	S	1111	4	4	4	01 02 03 04 05 06 07 08	

Data before the trigger position (on the left side of the waveform display) is assigned analysis numbers in descending order (-1, -2, and so on). Data after the trigger position (on the right side of the waveform display) is assigned analysis numbers in ascending order (0, 1, 2, and so on).

Search Setup (Search)

Press the **Search** soft key to display the following menu.

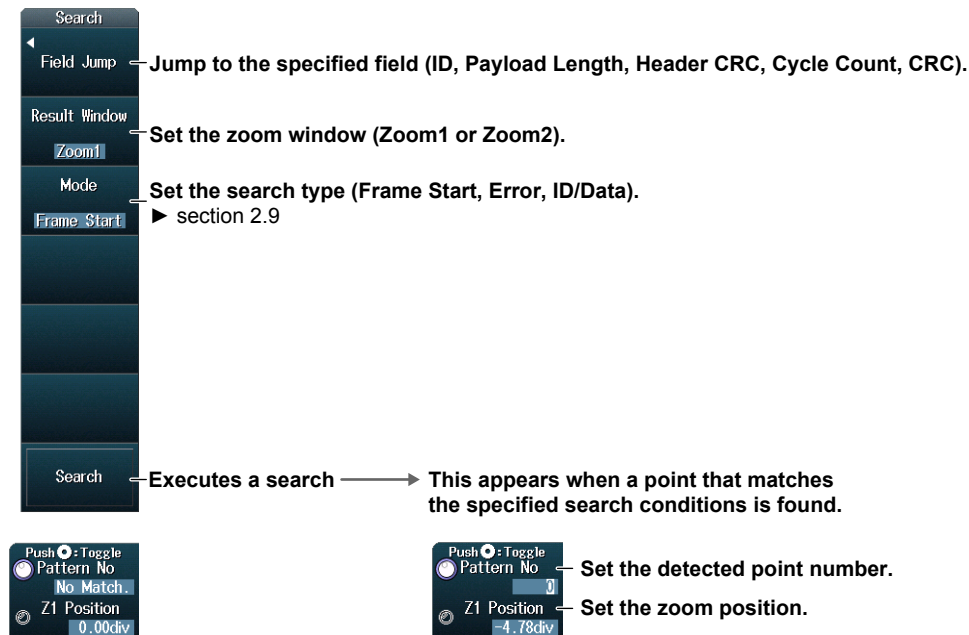

Jumping to the Specified Field

Jumps to the field in the data frame that corresponds to the specified detected point number (Pattern No).

Setting the Zoom Window

You can configure zoom windows Zoom1 and Zoom2 when they are displayed. Zoom1 is automatically displayed during the auto setup of the analysis settings.

Setting the Search Type

You can set this setting in the same way that you set the trigger type to Frame Start, Error, or ID/Data. For details, see section 2.9.

Executing Searches

1. Set the search type.
2. Press the **Search** soft key.
The DLM4000 searches for the search conditions. If the DLM4000 finds points that match the search conditions (detected points), it shows numbers (0, 1, 2, etc.) from the left of the waveform display in the order that the points were detected.

Setting the Detected Point Number

You can set the detected point number and display the waveform for the detected point on the zoom window.

Setting the Zoom Position

You can change the zoom position, which is the point on the waveform that is zoomed in on.

12.2 Analyzing and Searching CAN Bus Signals


This section explains the following settings (which are used when analyzing or searching CAN bus signals).

- Serial bus signal analysis and search displays
- Serial bus signal types
- Analysis
 - Auto setup, source, bit rate, recessive level, sample point, the level used to detect the source state, and hysteresis
- Decode display
- List display
 - List size, display position, and zoom linking
- Zoom position
- Analysis number
- Search
 - Jumping to the specified field, zoom window, search type, and search execution

► “Analyzing and Searching Serial Bus Signals” and
“Analyzing and Searching CAN Bus Signals”
in the Features Guide

SEARCH CAN Menu

Press **SHIFT+SEARCH** (SERIAL BUS), the **Type** soft key, and then the **CAN** soft key to display the following menu.

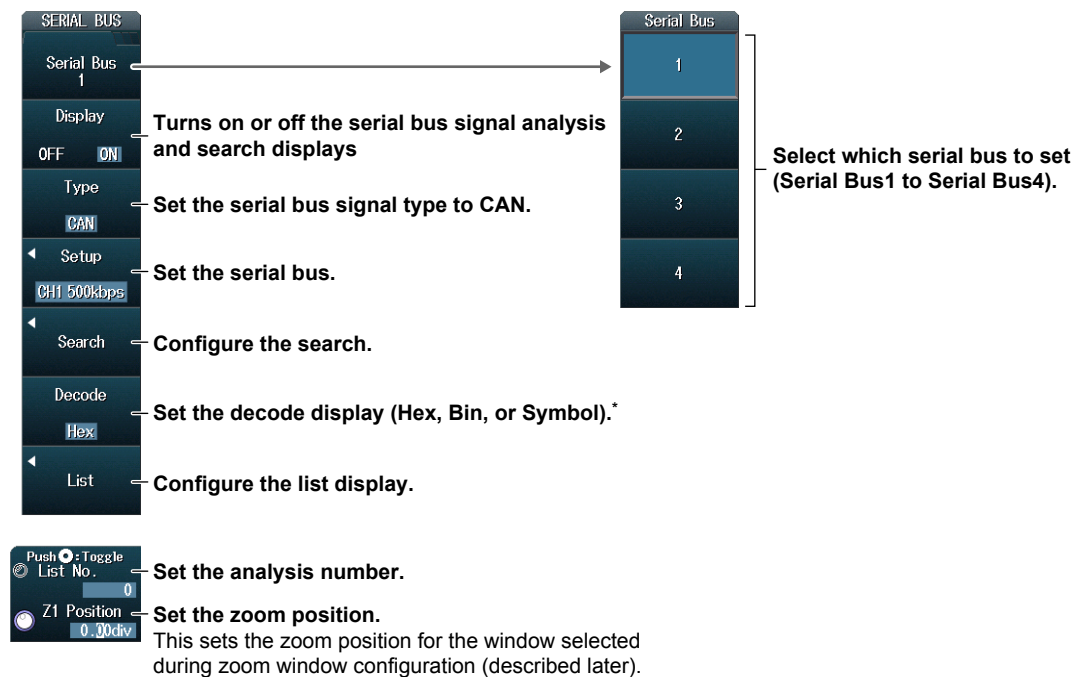

* You can select display CANdB symbols if you load the physical value/symbol definition file (.sbl).


Setting the Serial Bus (Setup)

Note

Using the CH8 Terminal and LOGIC(L) Port

If you perform an analysis or execute a search when using the LOGIC(L) port for input, you cannot specify CH8 as the source. Press the CH8 key in advance to enable input from the CH8 terminal.

Press the **Setup** soft key to display the following menu.

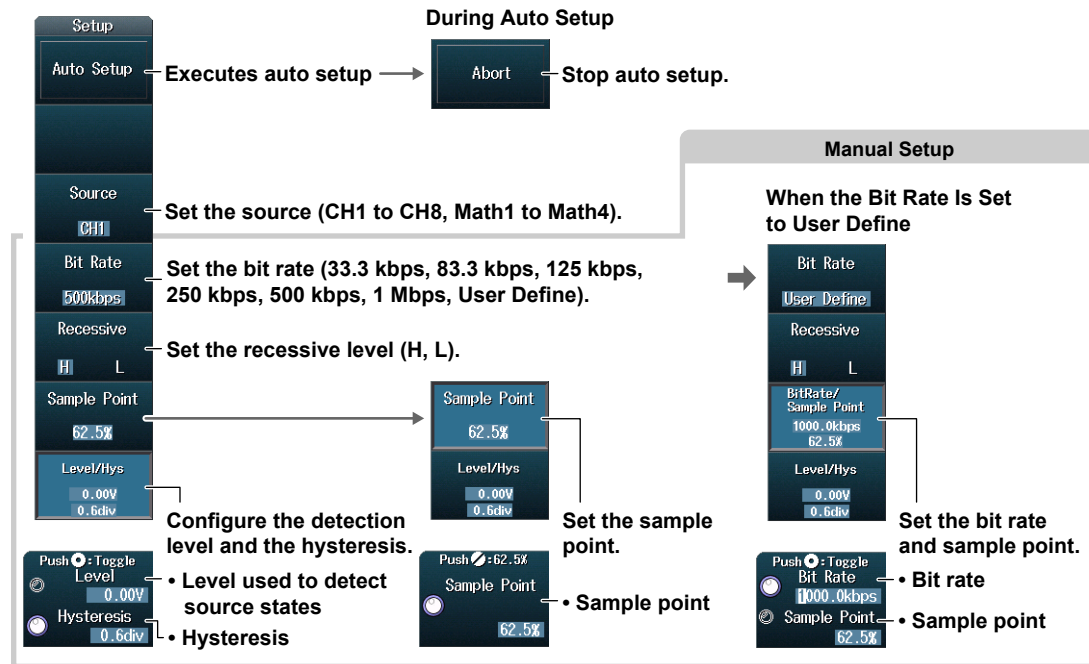

Auto Setup (Auto Setup)

1. Set the source.

* Auto setup cannot be performed when the source is set to Math1 to Math4.

2. Press the **Auto Setup** soft key.

The DLM4000 will automatically configure the serial bus settings.

The DLM4000 automatically configures the bit rate, recessive level, sample point, level, and hysteresis and triggers on the start of frame (SOF) of the CAN bus signal.

While the serial bus is being configured, Auto Setup changes to Abort. If you want to stop serial bus configuration, press the **Abort** soft key.

The auto setup feature will not work properly on some input signals.

Manual Setup

After running auto setup, you can change the following settings and display decoded results.

- Source
- Bit rate
- Recessive level
- Sample point
- Level used to detect source states
- Hysteresis

Setting the List Display (List)

Press the **List** soft key to display the following menu.

The **List** menu is shown with the following options:

- Zoom Link**: OFF **ON** (Turns zoom linking on or off)
- List Size**: Half(Upper) (Set the list size and the display position (Full Screen, Half(Upper), Half(Lower)).)
- Show List** (Lists the analysis results)

Below the menu, the **Analysis number** is set to 0 using the **Push** and **List No.** controls.


The resulting **Serial Bus** analysis results table is displayed below:

No.	Time(us)	Frame	ID	DLC	Data	CRB	Ack	Information
-6	-13.788	Error						
-5	-11.564	Data	00A	2	01 02	4A24	Y	
-4	-9.052	Data	012	1	FE	2263	Y	
-3	-6.612	Data	100	3	FF 01 A4	6C6E	Y	
-2	-4.028	Data	00A	2	01 02	4A24	Y	
-1	-1.516	Data	012	1	FE	2263	Y	
0	0.924	Data	100	3	FF 01 A4	6C6E	Y	
1	3.508	Data	00A	2	01 02	4A24	Y	
2	6.020	Data	012	1	FE	2263	Y	
3	8.460	Data	100	3	FF 01 A4	6C6E	Y	
4	11.044	Data	00A	2	01 02	4A24	Y	
5	13.556	Data	012	1	FE	2263	Y	

Data before the trigger position (on the left side of the waveform display) is assigned analysis numbers in descending order (-1, -2, and so on). Data after the trigger position (on the right side of the waveform display) is assigned analysis numbers in ascending order (0, 1, 2, and so on).

Search Setup (Search)

Press the **Search** soft key to display the following menu.

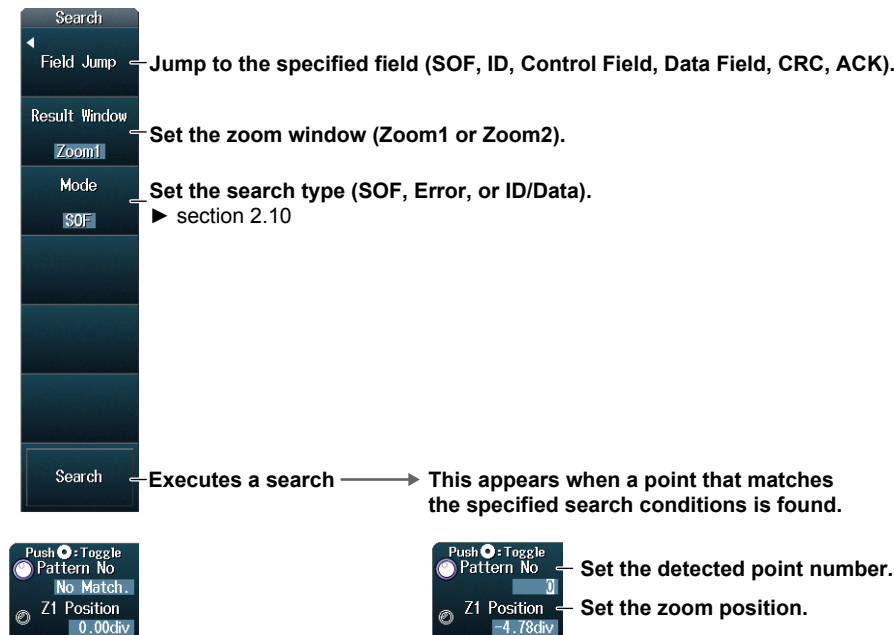

Jumping to the Specified Field

Jumps to the field in the data frame that corresponds to the specified detected point number (Pattern No).

Setting the Zoom Window

You can configure zoom windows Zoom1 and Zoom2 when they are displayed. Zoom1 is automatically displayed during the auto setup of the analysis settings.

Setting the Search Type

You can set this setting in the same way that you set the trigger type to SOF, Error, or ID/Data. For details, see section 2.10.

Executing Searches

1. Set the search type.
2. Press the **Search** soft key.

The DLM4000 searches for the search conditions. If the DLM4000 finds points that match the search conditions (detected points), it shows numbers (0, 1, 2, etc.) from the left of the waveform display in the order that the points were detected.

Setting the Detected Point Number

You can set the detected point number and display the waveform for the detected point on the zoom window.

Setting the Zoom Position

You can change the zoom position, which is the point on the waveform that is zoomed in on.

12.3 Analyzing and Searching LIN Bus Signals


This section explains the following settings (which are used when analyzing or searching LIN bus signals).

- Serial bus signal analysis and search displays
- Serial bus signal types
- Analysis
 - Auto setup, source, bit rate, revision, sample point, the level used to detect the source state, and hysteresis
- Decode display
- List display
 - List size, display position, and zoom linking
- Zoom position
- Analysis number
- Search
 - Jumping to the specified field, zoom window, search type, and search execution

► “Analyzing and Searching Serial Bus Signals” and
“Analyzing and Searching LIN Bus Signals”
in the Features Guide

SEARCH LIN Menu

Press **SHIFT+SEARCH** (SERIAL BUS), the **Type** soft key, and then the **LIN** soft key to display the following menu.

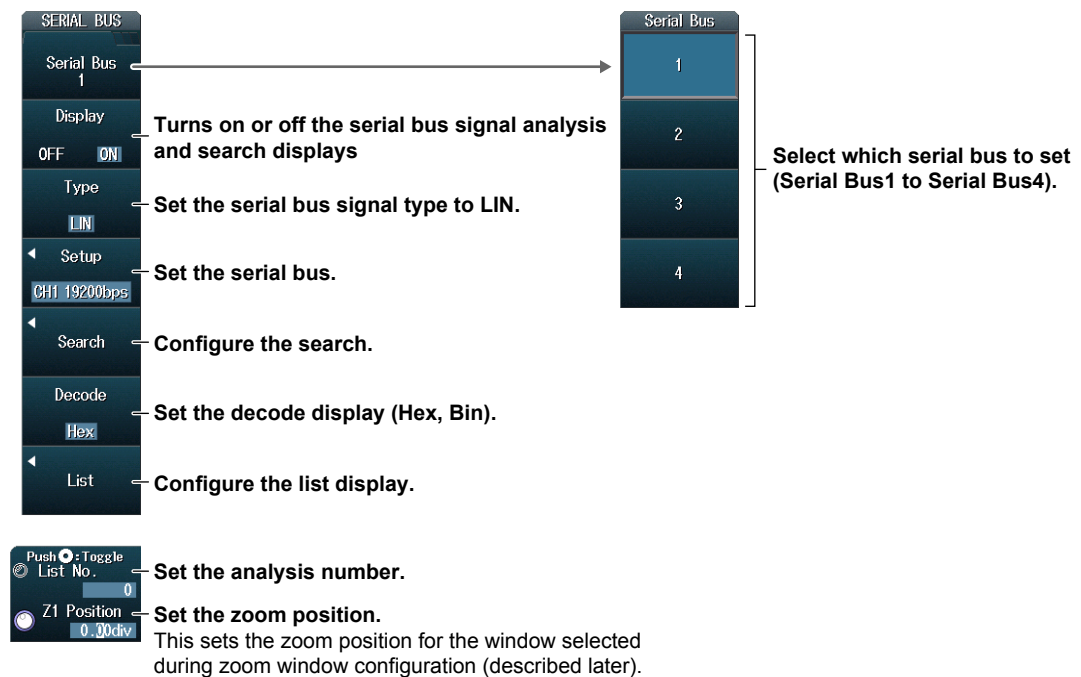


Setting the Serial Bus (Setup)

Note

Using the CH8 Terminal and LOGIC(L) Port

If you perform an analysis or execute a search when using the LOGIC(L) port for input, you cannot specify CH8 as the source. Press the CH8 key in advance to enable input from the CH8 terminal.

Press the **Setup** soft key to display the following menu.

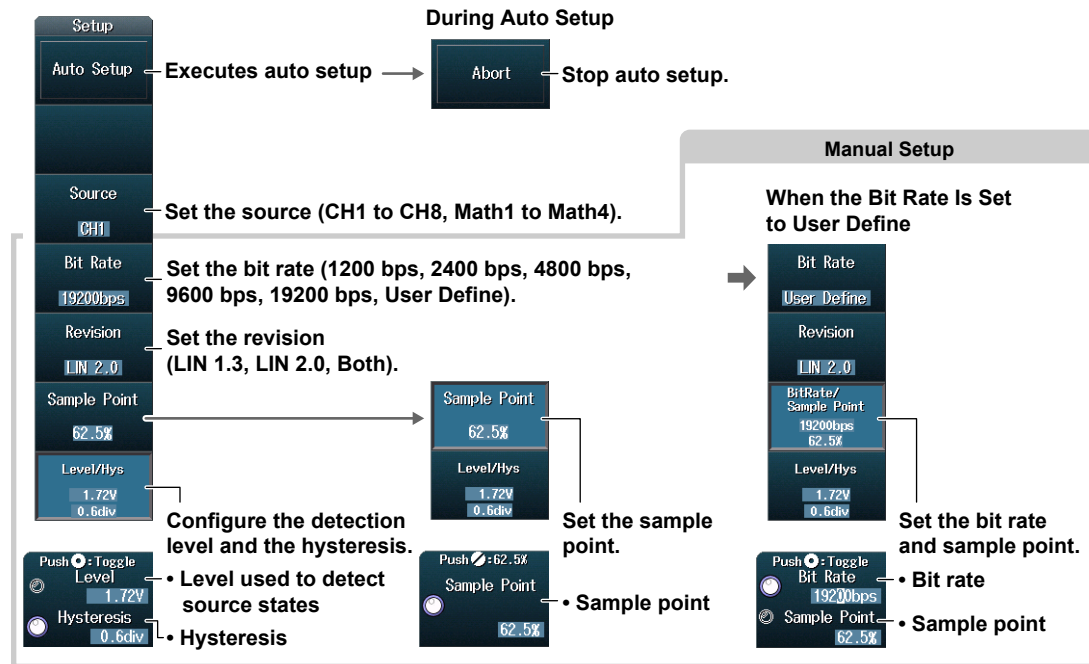

Auto Setup

1. Set the source.

* Auto setup cannot be performed when the source is set to Math1 to Math4.

2. Press the **Auto Setup** soft key.

The DLM4000 will automatically configure the serial bus settings.

The DLM4000 automatically configures the bit rate, revision, sample point, level, and hysteresis and triggers on the LIN bus signal's Break Synch.

While the serial bus is being configured, Auto Setup changes to Abort. If you want to stop serial bus configuration, press the **Abort** soft key.

The auto setup feature will not work properly on some input signals.

Manual Setup

After running auto setup, you can change the following settings and display decoded results.

- Source
- Bit rate
- Revision
- Sample point
- Level used to detect source states
- Hysteresis

Setting the List Display (List)

Press the **List** soft key to display the following menu.

The **List** menu is shown with the following options:

- Zoom Link**: OFF **ON** (Turns zoom linking on or off)
- List Size**: Half(Upper) (Set the list size and the display position (Full Screen, Half(Upper), Half(Lower)).)
- Show List**: (Lists the analysis results)

Below the menu, the **Set the analysis number.** screen is shown with a **Push** button and a **List No.** field set to 0.


The resulting **Analysis number** table is displayed below:

No.	Time(ms)	ID	ID-Field	Data	Checksum	Information
-5	-158.412	26	A6	00 00	FF	
-4	-127.164	30	F0	C8 0A	2D	
-3	-95.916	26	A6	00 00	FF	
-2	-64.668	30	F0	CC 0A	29	
-1	-33.420	26	A6	00 00	FF	
0	-2.172	30	F0	CF 0A	26	
1	29.076	26	A6	00 00	FF	
2	60.324	30	F0	D3 0A	22	
3	91.572	26	A6	00 00	FF	
4	122.820	30	F0	D7 0A	1E	
5	154.068	26	A6	00 00	FF	
6	185.316	30	F0	DA 0A	1B	

Data before the trigger position (on the left side of the waveform display) is assigned analysis numbers in descending order (-1, -2, and so on). Data after the trigger position (on the right side of the waveform display) is assigned analysis numbers in ascending order (0, 1, 2, and so on).

Search Setup (Search)

Press the **Search** soft key to display the following menu.

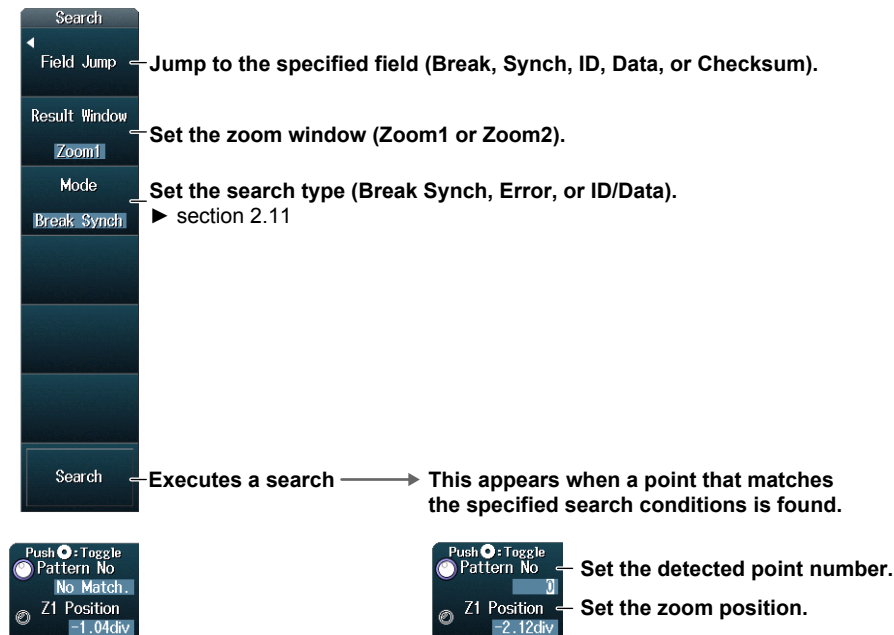

Jumping to the Specified Field

Jumps to the field in the frame that corresponds to the specified detected point number (Pattern No).

Setting the Zoom Window

You can configure zoom windows Zoom1 and Zoom2 when they are displayed. Zoom1 is automatically displayed during the auto setup of the analysis settings.

Setting the Search Type

You can set this setting in the same way that you set the trigger type to Break Synch, Error, or ID/Data. For details, see section 2.11.

Executing Searches

1. Set the search type.
2. Press the **Search** soft key.
The DLM4000 searches for the search conditions. If the DLM4000 finds points that match the search conditions (detected points), it shows numbers (0, 1, 2, etc.) from the left of the waveform display in the order that the points were detected.

Setting the Detected Point Number

You can set the detected point number and display the waveform for the detected point on the zoom window.

Setting the Zoom Position

You can change the zoom position, which is the point on the waveform that is zoomed in on.

12.4 Analyzing and Searching UART Signals


This section explains the following settings (which are used when analyzing or searching UART signals).

- Serial bus signal analysis and search displays
- Serial bus signal types
- Analysis
 - Auto setup, source, format, parity, grouping, the level used to detect the source state, and hysteresis
- Decode display
- List display
 - List size, display position, grouping, detailed display, and zoom linking
- Zoom position
- Analysis and data numbers
- Search
 - Zoom window, search type, and search execution

► “Analyzing and Searching Serial Bus Signals” and
“Analyzing and Searching UART Signals”
in the Features Guide

SEARCH UART Menu

Press **SHIFT+SEARCH** (SERIAL BUS), the **Type** soft key, and then the **UART** soft key to display the following menu.

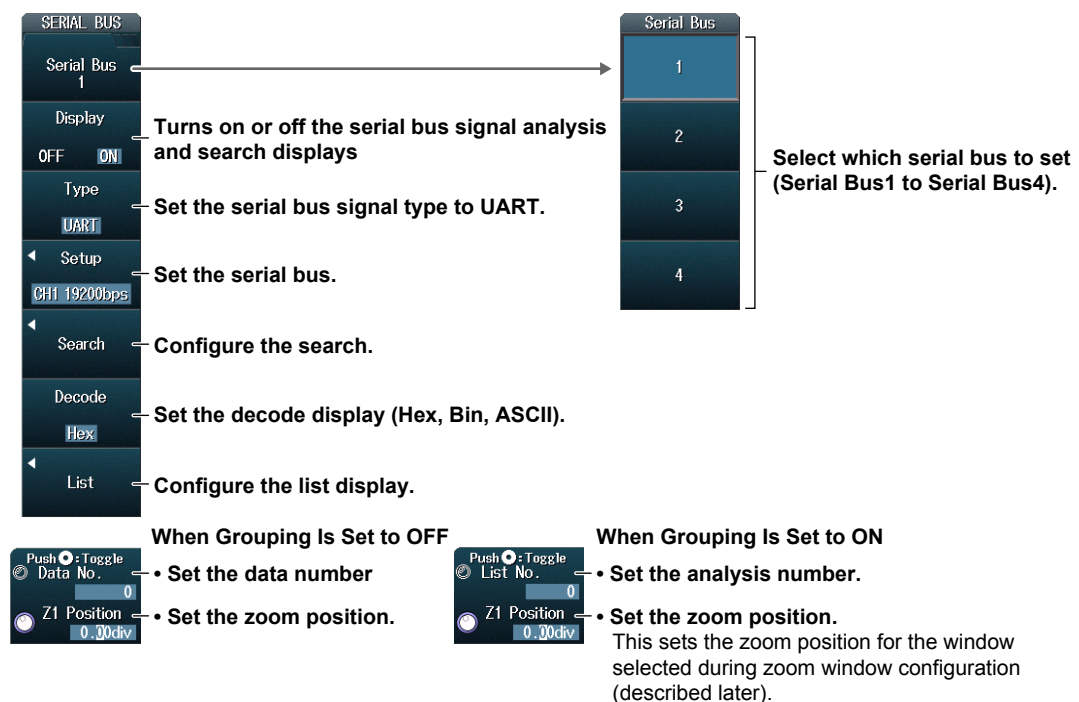

* For details on turning grouping on and off, see “Setting the List Display (List)” (described later).

Setting the Serial Bus (Setup)


Note

Using the CH8 Terminal and LOGIC(L) Port

When you perform an analysis or execute a search, you cannot use the CH8 terminal and LOGIC(L) port as the source at the same time. Specify the source that you want to use in advance by pressing either the CH8 key or the L key.

Press the **Setup** soft key to display the following menu.

Auto Setup (Auto Setup)

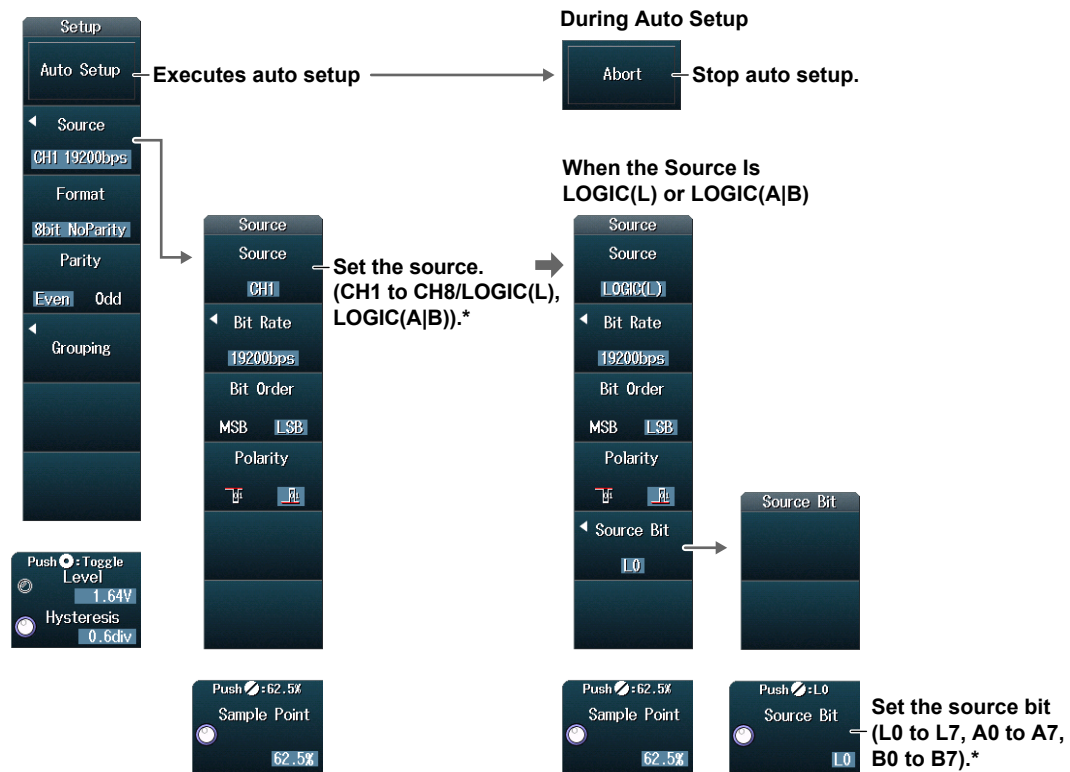

* You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated. LOGIC(A|B), A0 to A7, and B0 to B7 are available on models with the /L16 option.


1. Press the **Source** soft key.
The source setup menu is displayed.
2. Set the source. If you select LOGIC(L) or LOGIC(A|B), set the source bit (L0 to L7, A0 to A7, B0 to B7).
You cannot use auto setup under the following circumstances.
 - When the source is set to Math1 to Math4
 - When state display is applied to a LOGIC bit that is set as the source
3. Press **ESC** to return to the bus setup menu.
4. Press the **Auto Setup** soft key.
The DLM4000 will automatically configure the serial bus settings.
The DLM4000 automatically configures the bit rate, sample point, level, and hysteresis and then triggers on the UART signal's Stop Bit.
While the serial bus is being configured, Auto Setup changes to Abort. If you want to stop serial bus configuration, press the **Abort** soft key.

The auto setup feature will not work properly on some input signals.

Manual Setup

After running auto setup, you can change the following settings and display decoded results.


- Source
- Format
- Parity
- Grouping
- Level used to detect source states
- Hysteresis

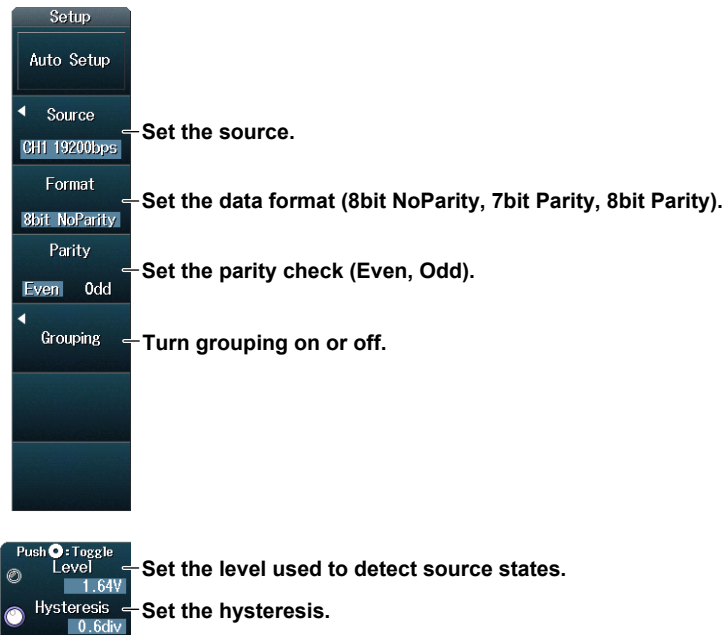

Setting the Source (Source)


Press the **Source** soft key to display one of the menus shown below. The menu that is displayed varies depending on the specified source.

- When the Source is CH1 to CH8 or Math1 to Math4

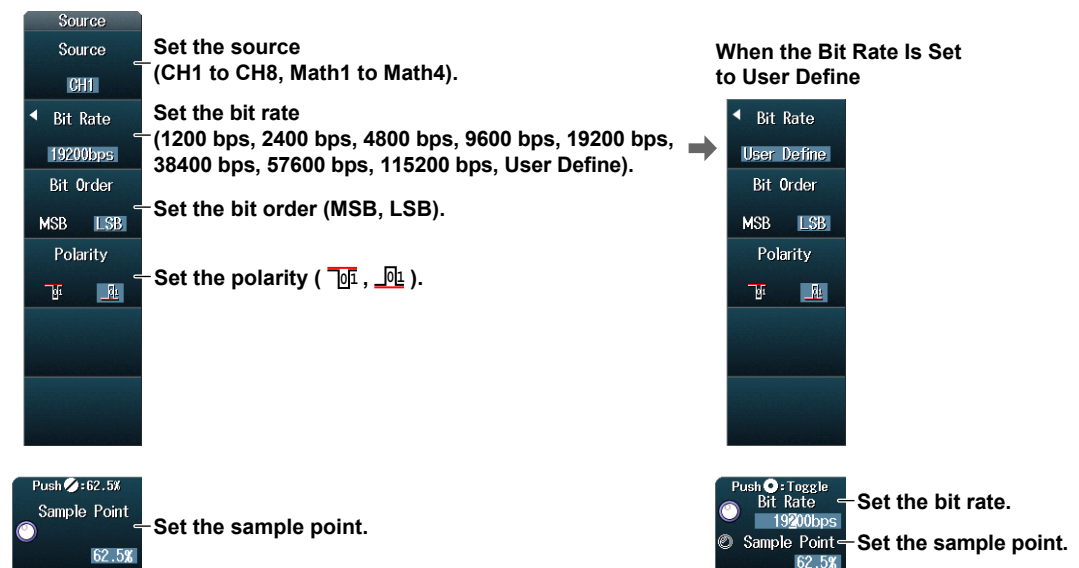

12.4 Analyzing and Searching UART Signals


- When the Source Is LOGIC(L) or LOGIC(A|B)

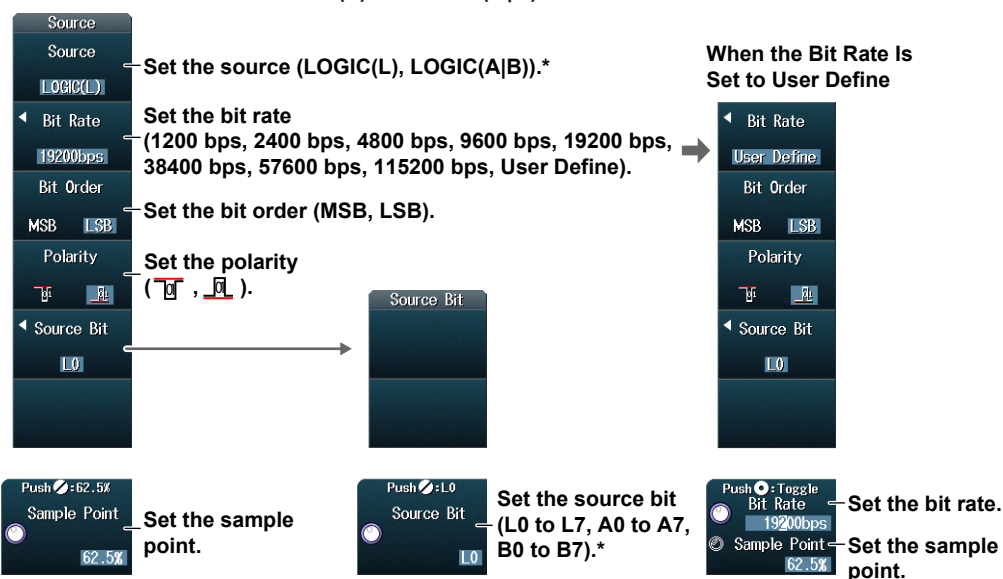

* You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated. LOGIC(A|B), A0 to A7, and B0 to B7 are available on models with the /L16 option.

Setting the Grouping (Grouping)

Press the **Grouping** soft key to display the following menu.

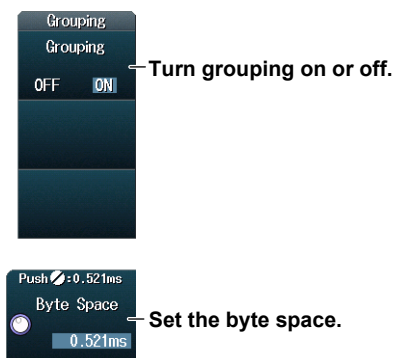

Setting the List Display (List)

Press the **List** soft key on the SEARCH UART menu to display the following menu.

When Grouping Is Set to OFF

List
Zoom Link
OFF **ON**
Grouping
OFF **ON**
List Size
Half(Upper)
Show List

Turns zoom linking on or off
Set the grouping (set this to OFF).
Set the list size and the display position (Full Screen, Half(Upper), Half(Lower)).
Lists the analysis results

Data from the leftmost side of the waveform display
The data that corresponds to the selected data number is highlighted.

Serial Bus

Addr	Hex	ASCII
00000000	A5 CA 14 23 D1 22 44 09 12 A5 4B 96 2D	...
00000010	D1 A3 46 0C 99 33 E7 4E 9C 39 F3 E7 CF	...
00000020	71 63 C6 8D 1B 36 EC D8 30 E1 42 84 88	...
00000030	8B 17 2E D0 3A F5 EB D7 AF DE 3D 7B F6	...
00000040	6F 5F BE FC 78 F0 E1 C3 06 8D 9A B4 69	...
00000050	9A 35 EB 56 2D DB 36 ED 5A 35 6A D4 28	...
00000060	82 84 89 93 27 4E 1D BB F6 6C 59 B2 E4	...
00000070	C9 93 A6 0C 18 30 E0 C0 81 03 87 8E 1D	...
00000080	D2 24 48 11 A3 47 8E 9C B8 71 62 44 88	...
00000090	00 81 82 05 8B 96 AC D8 B1 63 47 0F 1E	...
000000a0	E8 50 21 C3 87 0F 9F 3F FF 7E FC F9	...
000000b0	90 21 C2 05 0A 14 A9 53 27 CF 9F BE 7D	...
000000c0	55 AA 55 2B D7 2E DC B8 F0 60 41 03 06	...

Push 0
Data No.
0

Set the data number.

When A Framing Error Is Detected
2D* An * is appended to the data number.

When a Parity Error Is Detected
05x An x is appended to the data number.

When Both a Framing Error and a Parity Error Are Detected
The * used for marking framing errors is appended to the data number.

When Grouping Is Set to ON

List
Zoom Link
OFF **ON**
Grouping
OFF **ON**
List Size
Half(Upper)
Show List

Turns zoom linking on or off
Set the grouping (set this to ON).
Set the list size and the display position (Full Screen, Half(Upper), Half(Lower)).
Lists the analysis results

Analysis number
If multiple errors are detected in one piece of data, the DLM4000 only displays the framing error indication.
Framing Error or Parity Error

Serial Bus

No.	Time(ms)	Data(HEX)	Data(ASCII)	Information
-5	-15.243	7E	..	
-4	-13.670	FC F9 F2 E4	...	
-3	-10.379	48 90 21 42	...	H.B
-2	-7.088	05 0A 14 A9	...	
-1	-3.795	53 27 CF 9F	...	
0	-0.504	BE 7D FA F5	...	
1	2.787	6A 56 2A 55	...	
2	6.080	2B D7 2E 5C	...	
3	9.371	B8 F0 60 41	...	
4	12.662	03 06 0C 18	...	
5	15.955	B1 E2 C5 0A	...	
6	19.246	95 2B D6 AC	...	

Push 0
List No.
0

Set the analysis number.

This is the detailed list of analysis results that is displayed when you press SET.

All data for the specified analysis number is displayed.

When You Press SET

Push 0
Data No.
0

Set the data number.

Serial Bus1


Addr	Hex	ASCII
00000000	BE 7D FA F5	...

- The data that corresponds to the selected data number is highlighted.
- In the list that appears when you press SET, the same marks are appended to the data numbers when an error is detected as when grouping is off.

Data before the trigger position (on the left side of the waveform display) is assigned analysis numbers in descending order (-1, -2, and so on). Data after the trigger position (on the right side of the waveform display) is assigned analysis numbers in ascending order (0, 1, 2, and so on).

Search Setup (Search)

Press the **Search** soft key on the SEARCH UART menu to display the following menu.

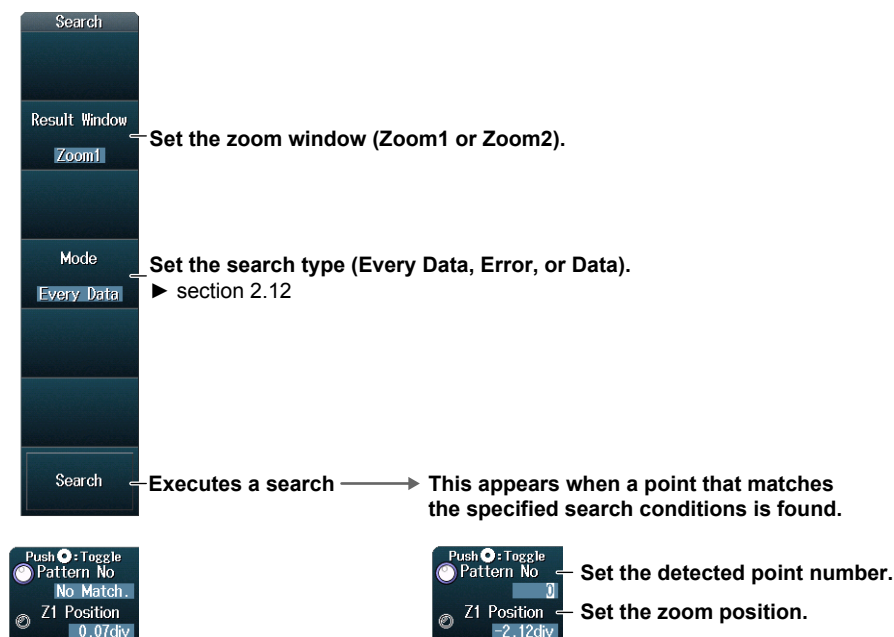

Setting the Zoom Window

You can configure zoom windows Zoom1 and Zoom2 when they are displayed. Zoom1 is automatically displayed during the auto setup of the analysis settings.

Setting the Search Type

You can set this setting in the same way that you set the trigger type to Every Data, Error, or Data. For details, see section 2.12.

Executing Searches

1. Set the search type.
2. Press the **Search** soft key.

The DLM4000 searches for the search conditions. If the DLM4000 finds points that match the search conditions (detected points), it shows numbers (0, 1, 2, etc.) from the left of the waveform display in the order that the points were detected.

Setting the Detected Point Number

You can set the detected point number and display the waveform for the detected point on the zoom window.

Setting the Zoom Position

You can change the zoom position, which is the point on the waveform that is zoomed in on.

12.5 Analyzing and Searching I²C Bus Signals


This section explains the following settings (which are used when analyzing or searching I²C bus signals).

- Serial bus signal analysis and search displays
- Serial bus signal types
- Analysis
 - Auto setup, SCL source, SDA source, the level used to detect the source state, and hysteresis
- Decode display
- List display
 - List size, display position, detailed display, and zoom linking
- Zoom position
- Analysis number
- Search
 - Zoom window, search type, and search execution

► “Analyzing and Searching Serial Bus Signals” and
“Analyzing and Searching I²C Bus Signals”
in the Features Guide

SEARCH I2C Menu

Press **SHIFT+SEARCH** (SERIAL BUS), the **Type** soft key, and then the **I2C** soft key to display the following menu.

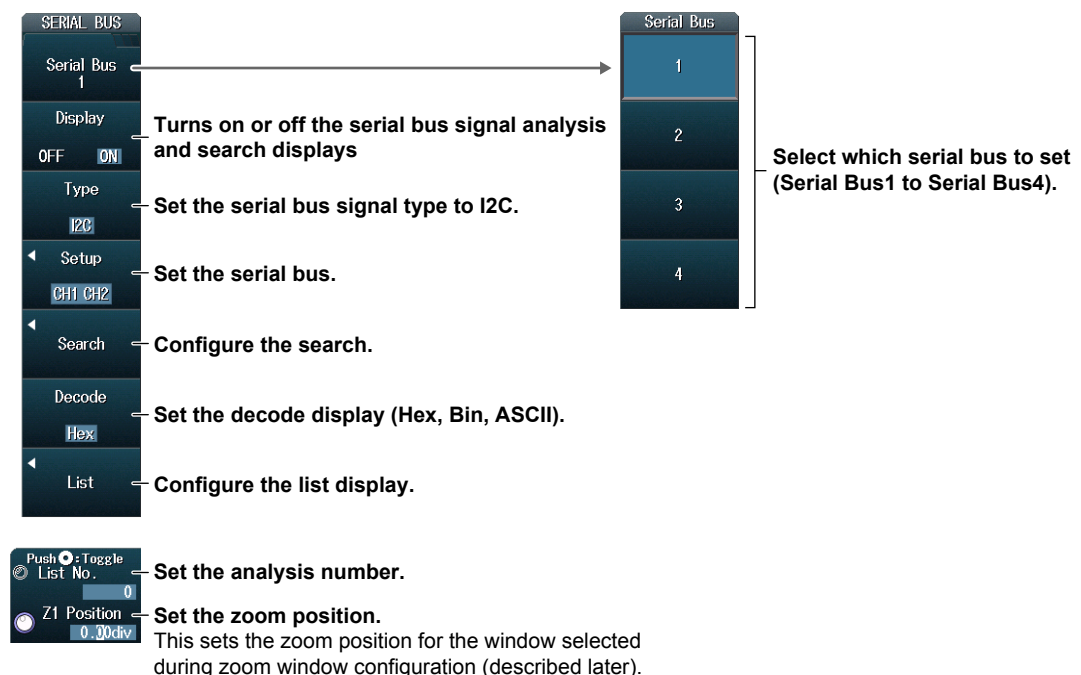

Setting the Serial Bus (Setup)


Note

Using the CH8 Terminal and LOGIC(L) Port

When you perform an analysis or execute a search, you cannot use the CH8 terminal and LOGIC(L) port as the source at the same time. Specify the source that you want to use in advance by pressing either the CH8 key or the L key.

Press the **Setup** soft key to display the following menu.

Auto Setup (Auto Setup)

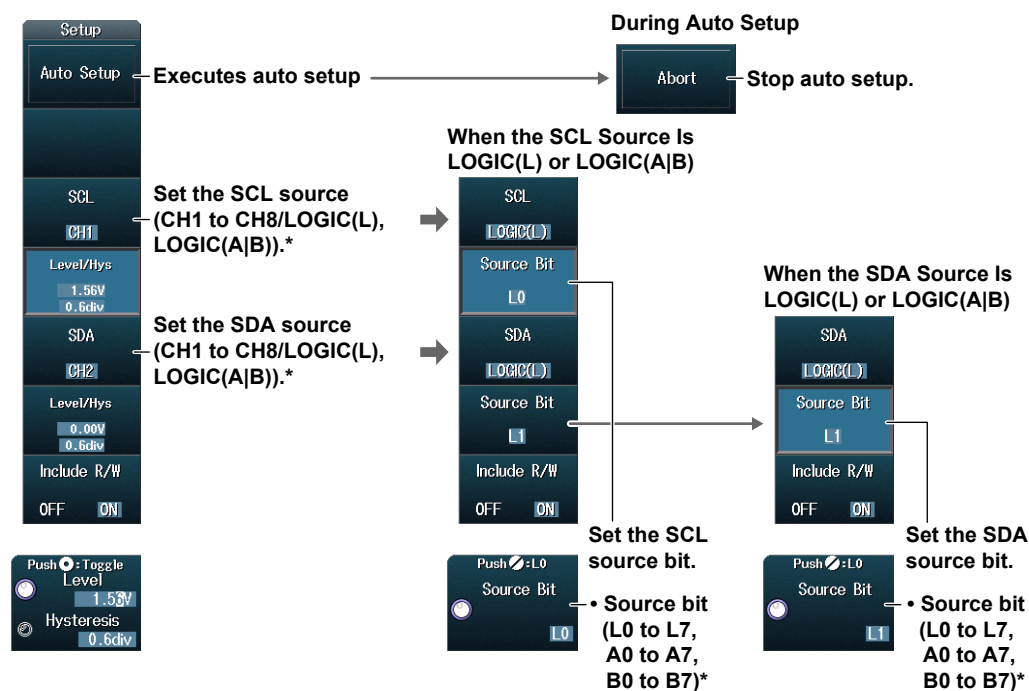

1. Set the SCL and SDA sources.

The range within which the SDA source can be set changes depending on the SCL source as indicated below.

SCL Source	SDA Source
CH1 to CH4	CH1 to CH4
CH5 to CH8/LOGIC(L)*	CH5 to CH8/LOGIC(L)*
LOGIC(A B)*	LOGIC(A B)*

If you select LOGIC(L) or LOGIC(A|B), set the source bit (L0 to L7, A0 to A7, B0 to B7).*

* You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated. LOGIC(A|B), A0 to A7, and B0 to B7 are available on models with the /L16 option.

You cannot use auto setup under the following circumstances.

- When the SCL or SDA source is set to Math1 to Math4
- When state display is applied to a LOGIC bit that is set as the SCL or SDA source

2. Press the **Auto Setup** soft key.

The DLM4000 will automatically configure the serial bus settings.

The DLM4000 automatically configures the level and hysteresis and triggers on the start condition of the I²C bus signal.

While the serial bus is being configured, Auto Setup changes to Abort. If you want to stop serial bus configuration, press the **Abort** soft key.

The auto setup feature will not work properly on some input signals.

Manual Setup

After running auto setup, you can change the following settings and display decoded results.

- SCL source
- SDA source
- Level used to detect source states
- Hysteresis


Setting the SCL Source and the SDA Source (SCL, SDA)

The range within which the SDA source can be set changes depending on the SCL source as indicated below.


SCL source	SDA source
CH1 to CH4, Math1, or Math2	CH1 to CH4, Math1, or Math2
CH5 to CH8/LOGIC(L),* Math3, or Math4	CH5 to CH8/LOGIC(L),* Math3, or Math4
LOGIC(A B)*	LOGIC(A B)*

* You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated. LOGIC(A|B) is available on models with the /L16 option.

- When the Source is CH1 to CH8 or Math1 to Math4

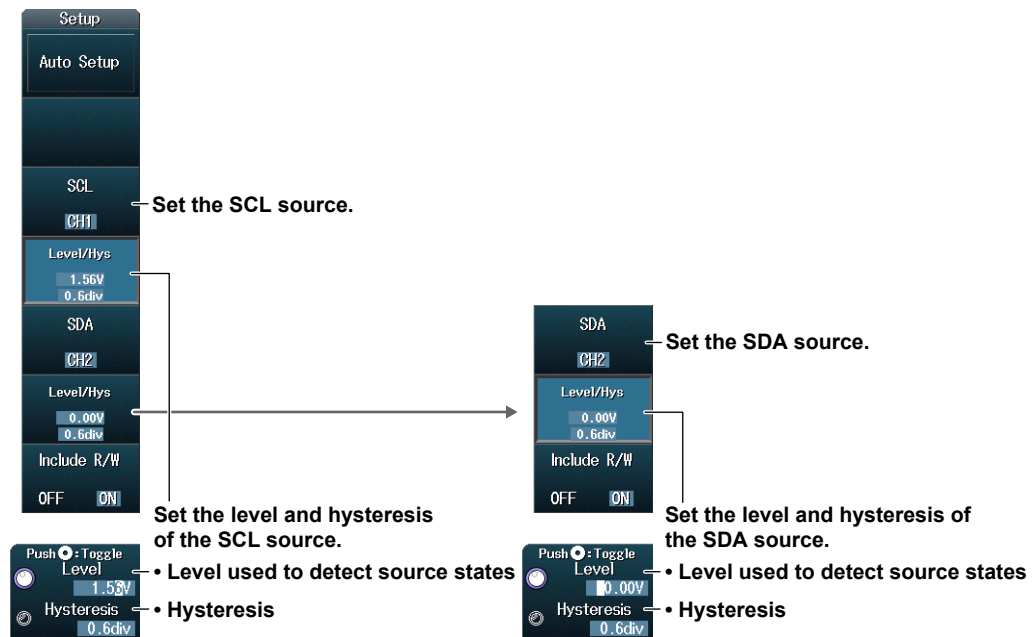

- When the Source Is LOGIC(L) or LOGIC(A|B)

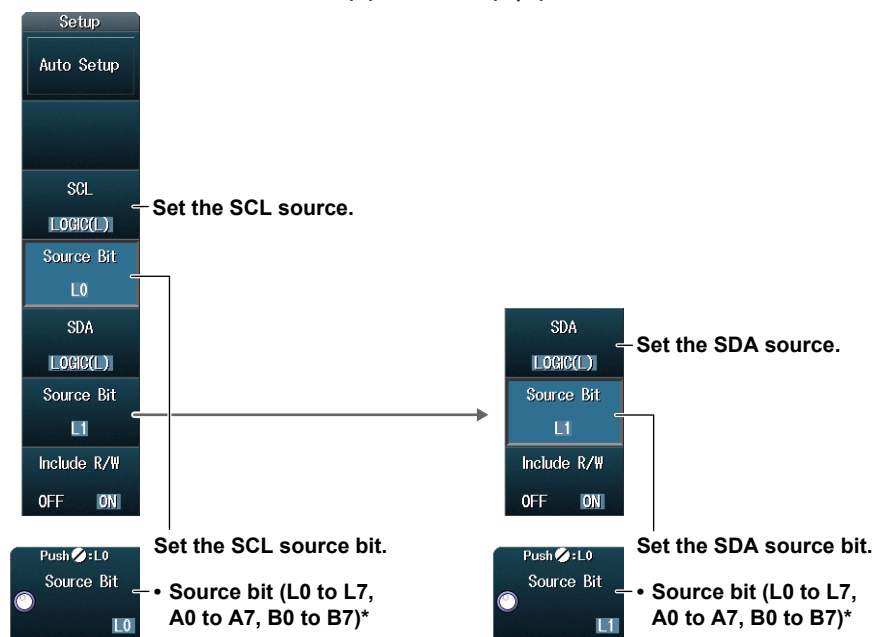


* A0 to A7 and B0 to B7 are available on models with the /L16 options.

R/W Bit Inclusion (Include R/W)

Specify whether to include the R/W bit (ON) or omit it (OFF) when setting or displaying the address. This setting affects the display and configuration of the address pattern in the following situations.

- When the search type is Adr Data or General Call (when Second Byte is Master Adr) and the search conditions are being set (Address in the Condition Setup screen)
- When the decode display is visible
- When the 1st and 2nd address boxes on the list display are visible

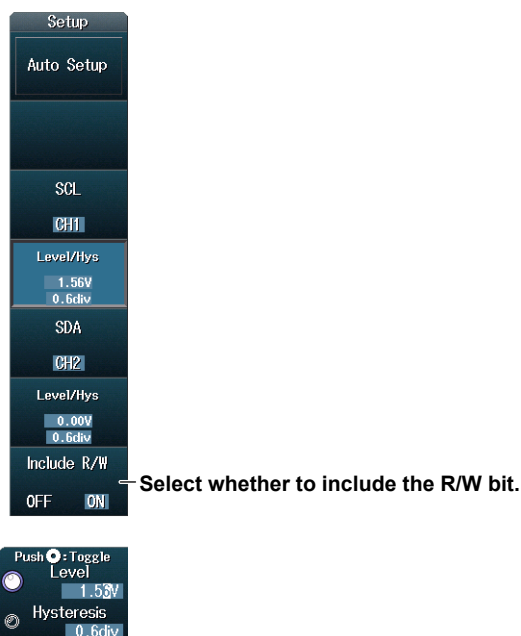

ON: Include the R/W bit when setting or displaying the address pattern.

OFF: Omit the R/W bit when setting or displaying the address pattern.

Setting the List Display (List)

Press the **List** soft key on the SEARCH I2C menu to display the following menu.

Zoom Link (OFF/ON) — Turns zoom linking on or off

List Size (Half(Upper)) — Set the list size and the display position (Full Screen, Half(Upper), Half(Lower)).

Show List — Lists the analysis results

Analysis number

Set the analysis number.

When You Press SET

Set the data number.

This is the detailed list of analysis results that is displayed when you press SET.

All data for the specified analysis number is displayed.

The data that corresponds to the selected data number is highlighted.


No.	Time(us)	1st	2nd	R/W	Data	Information
-4	-0.0495304	0x		R	06x 07x 08x 09x 0Ax	10-bit
-3	-0.0293856	0x	01x	W		10-bit
-2	-0.0245360	0x		R	06x 07x 08x 09x 0Ax	10-bit
-1	-0.0043928	0x	01x	W		10-bit
0	0.0004568	0x		R	06x 07x 08x 09x 0Ax	10-bit
1	0.0206016	0x	01x	W		10-bit
2	0.0254744	0x		R	06x 07x 08x 09x 0Ax	10-bit
3	0.0456176	0x	01x	W		10-bit

Addr.	Hex	ASCII
00000000	06x 07x 08x 09x 0Ax	...

Data before the trigger position (on the left side of the waveform display) is assigned analysis numbers in descending order (-1, -2, and so on). Data after the trigger position (on the right side of the waveform display) is assigned analysis numbers in ascending order (0, 1, 2, and so on).

Search Setup (Search)

Press the **Search** soft key on the SEARCH I2C menu to display the following menu.

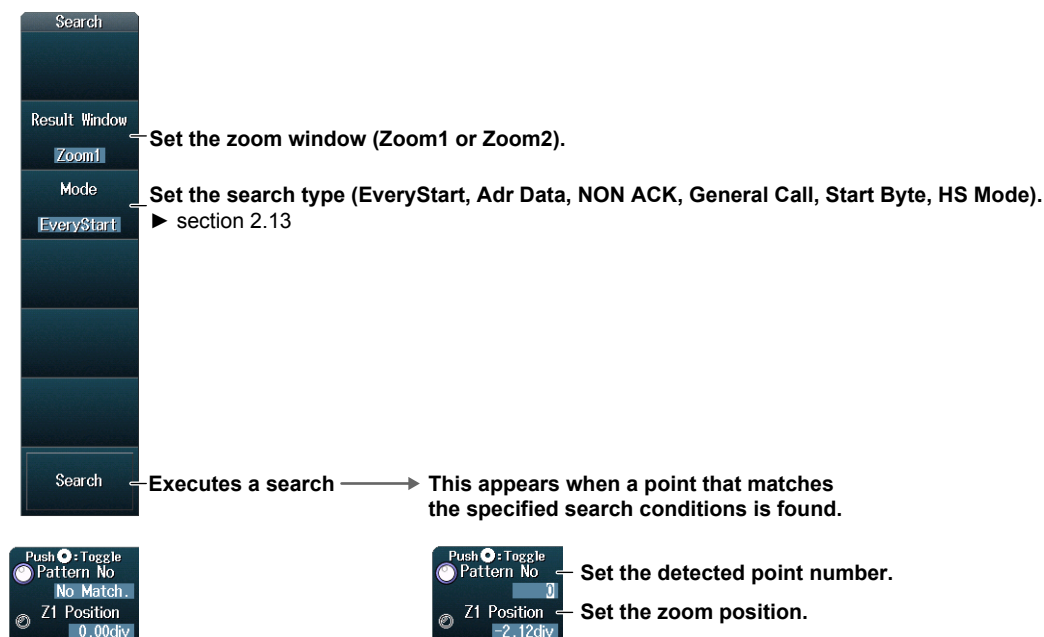

Setting the Zoom Window

You can configure zoom windows Zoom1 and Zoom2 when they are displayed. Zoom1 is automatically displayed during the auto setup of the analysis settings.

Setting the Search Type

You can set this setting in the same way that you set the trigger type to EveryStart, Adr Data, NON ACK, General Call, Start Byte, and HS Mode. For details, see section 2.13.

Executing Searches

1. Set the search type.
2. Press the **Search** soft key.

The DLM4000 searches for the search conditions. If the DLM4000 finds points that match the search conditions (detected points), it shows numbers (0, 1, 2, etc.) from the left of the waveform display in the order that the points were detected.

Setting the Detected Point Number

You can set the detected point number and display the waveform for the detected point on the zoom window.

Setting the Zoom Position

You can change the zoom position, which is the point on the waveform that is zoomed in on.

12.6 Analyzing and Searching SPI Bus Signals


This section explains the following settings (which are used when analyzing or searching SPI bus signals).

- Serial bus signal analysis and search displays
- Serial bus signal types
- Analysis
 - Auto setup, wiring system, bit order, clock source, data source, chip select source, the level used to detect the source state, hysteresis, and polarity
- Decode display
- List display
 - List size, display position, detailed display, and zoom linking
- Zoom position
- Analysis number
- Search
 - Zoom window, search conditions, and search execution

► “Analyzing and Searching Serial Bus Signals” and
“Analyzing and Searching SPI Bus Signals”
in the Features Guide

SEARCH SPI Menu

Press **SHIFT+SEARCH** (SERIAL BUS), the **Type** soft key, and then the **SPI** soft key to display the following menu.

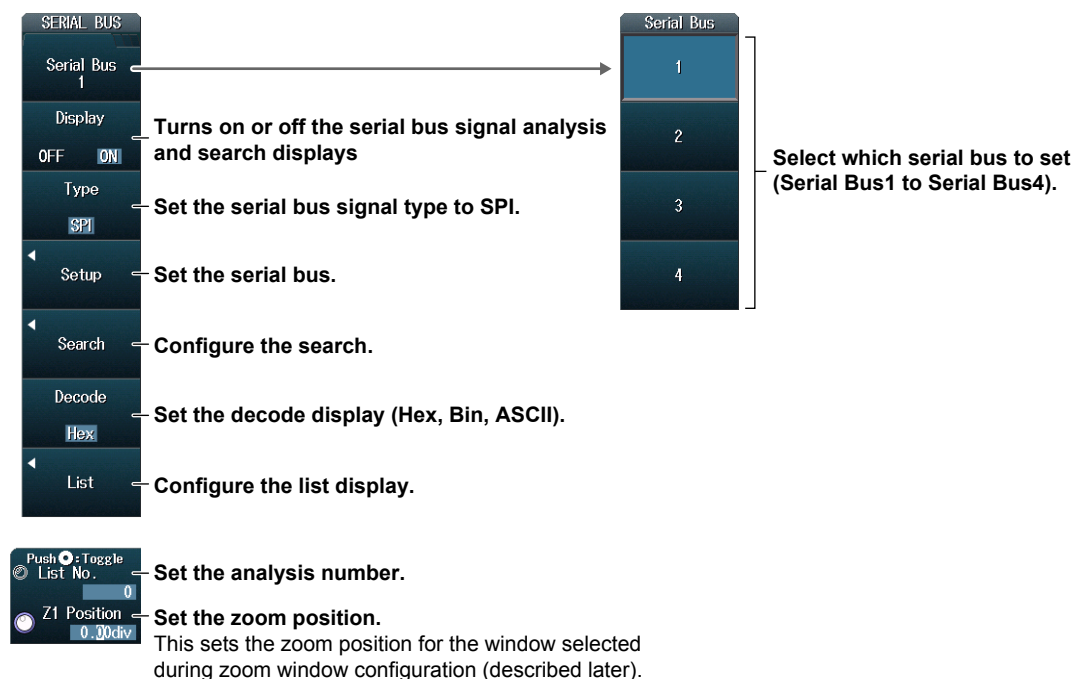

Setting the Serial Bus (Setup)


Note

Using the CH8 Terminal and LOGIC(L) Port

When you perform an analysis or execute a search, you cannot use the CH8 terminal and LOGIC(L) port as the source at the same time. Specify the source that you want to use in advance by pressing either the CH8 key or the L key.

Press the **Setup** soft key to display the following menu.

Auto Setup (Auto Setup)

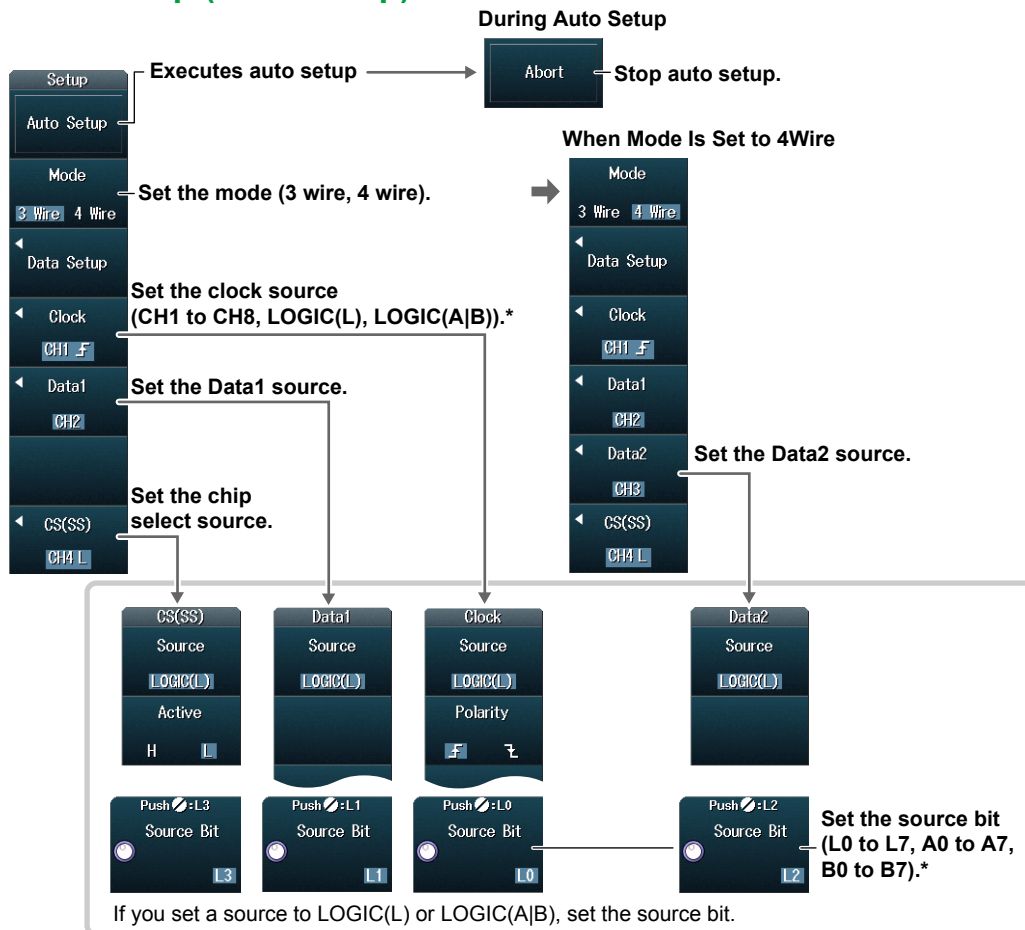

1. Set the wiring system and the clock, data, and chip select sources.

Ranges within Which the Data1, Data2, and Chip Select Sources Can Be Set

- When the clock source is a channel from CH1 to CH4: Set the sources to CH1 to CH4.
- When the clock source is a channel from CH5 to CH8 or LOGIC(L): Set the sources to CH5 to CH8 or LOGIC(L).
- When the clock source is LOGIC(A|B): LOGIC(A|B).

* LOGIC(A|B), A0 to A7, and B0 to B7 are available on models with the /L16 option.

You cannot use auto setup under the following circumstances.

- When the clock, Data1, Data2, or chip select source is set to Math1 to Math4
- When state display is applied to any of the LOGIC bits set as the clock, Data1, Data2, or chip select source
- When the chip select source is set to X (don't care)

2. Press the **Auto Setup** soft key.

The DLM4000 will automatically configure the serial bus settings. The DLM4000 automatically configures the level and hysteresis and then triggers on the SPI signal's first data byte.

While the serial bus is being configured, Auto Setup changes to Abort. If you want to stop serial bus configuration, press the **Abort** soft key.

The auto setup feature will not work properly on some input signals.

Manual Setup

After running auto setup, you can change the following settings and display decoded results.

- Wiring system
- Clock source
- Data1 and 2 sources
- Chip select source
- Level used to detect source states
- Hysteresis
- Polarity

Press the **Clock**, **Data1**, **Data2**, or **CS(SS)** soft key to open one of the menus shown below.

The menu that appears varies depending on the source that is specified in the pressed soft key's menu.



The range within which the Data1, Data2, and chip select sources can be set changes depending on the clock source as indicated below.

	When the Clock Source Setting Is		
	CH1 to CH4, Math1, or Math2	CH5 to CH8/LOGIC(L),* Math3, or Math4	LOGIC(A B)*
Data1 and Data2	CH1 to CH4, Math1, or Math2	CH5 to CH8/LOGIC(L),* Math3, or Math4	LOGIC(A B)*
Chip select	CH1 to CH4, Math1, Math2, or X (no source)	CH5 to CH8/LOGIC(L),* Math3, Math4, or X (no source)	LOGIC(A B)*



* You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated. LOGIC(A|B) is available on models with the /L16 option.

Setting the Clock Source (Clock)

 When the Source is CH1 to CH8 or Math1 to Math4

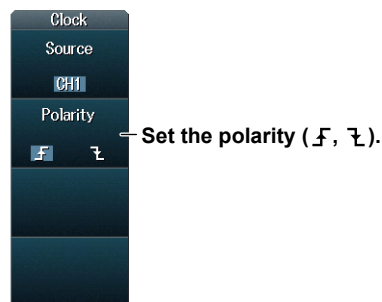



When the Source Is LOGIC(L) or LOGIC(A|B)

 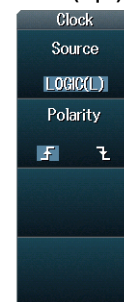



Setting the Data1 and Data2 Sources (Data1 and Data2)

This section explains how to set the Data1 source. The Data2 source can be set in the same way. Set the Data2 source when the wiring system is 4 Wire.

 When the Source is CH1 to CH8 or Math1 to Math4

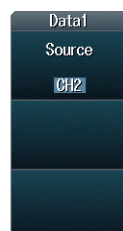


When the Source Is LOGIC(L) or LOGIC(A|B)

 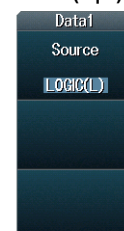


* A0 to A7 and B0 to B7 are available on models with the /L16 options.

Setting the Chip Select Source (CS(SS))

When the Source is CH1 to CH8 or Math1 to Math4

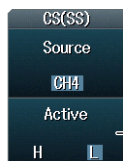


Set the active state (H, L).

 

Set the level used to detect source states.

Set the hysteresis.

When the Source Is LOGIC(L) or LOGIC(A|B)

 

Set the source bit (L0 to L7, A0 to A7, B0 to B7).*

When the Chip Selector Source Is X (No source)



Turn grouping on or off.




Set the idle time.

* A0 to A7 and B0 to B7 are available on models with the /L16 options.

Setting the Data Format (Data Setup)

Press the **Data Setup** soft key to display the following menu.

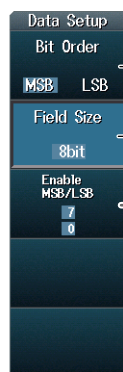


Set the bit order (MSB, LSB).


Set the field size.



Field size

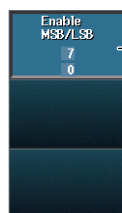

Set the enabled bit range.

 

MSB

LSB

Setting the List Display (List)

Press the **List** soft key on the SEARCH SPI menu to display the following menu.

When the wiring system is set to 3 Wire in the wiring system settings shown on page 12-26, the contents of Data1 are displayed in a list. When the wiring system is set to 4 Wire, the contents of Data1 and Data2 are displayed in a list.

List
Zoom Link
OFF ON
List Size
Half(Upper)
Show List

Turns zoom linking on or off

Set the list size and the display position (Full Screen, Half(Upper), Half(Lower)).

Lists the analysis results

Analysis number

Push = 0
List No. 0

Set the analysis number.

No.	Time(ms)	Data1/2	Data
-2	-2.0072	Data1	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
		Data2	FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF
-1	-1.0072	Data1	00 00 00 00 00 00 00 00 00 00 00 00 00 00 3D 27
		Data2	FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF
0	-0.0072	Data1	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
		Data2	FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF
1	0.9928	Data1	00 00 00 00 00 00 00 00 00 00 00 00 00 00 3D 27
		Data2	FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF
2	1.9928	Data1	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
		Data2	FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF
3	2.9928	Data1	00 00 00 00 00 00 00 00 00 00 00 00 00 00 3D 27
		Data2	FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF

When You Press SET

Detailed List for Data1

All data for the specified analysis number is displayed.

Serial Bus1(Data1)

Addr	Hex	ASCII
00000000	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000010	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000020	00 00 00 00 00 00 00 DC 35 AE 71 68 DC 35 AE 715.qh.5.q
00000030	63 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00	h.....

The data that corresponds to the selected data number is highlighted.

Push = 0
Data No. 0

Set the data number.

When Wiring System Is 4 Wire

When You Press SET Twice

Detailed List for Data2

All data for the specified analysis number is displayed.

Serial Bus1(Data2)

Addr	Hex	ASCII
00000000	FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF
00000010	FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF
00000020	FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF
00000030	FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF

The data that corresponds to the selected data number is highlighted.


Push = 0
Data No. 0

Set the data number.

Data before the trigger position (on the left side of the waveform display) is assigned analysis numbers in descending order (-1, -2, and so on). Data after the trigger position (on the right side of the waveform display) is assigned analysis numbers in ascending order (0, 1, 2, and so on).

Search Setup (Search)

Press the **Search** soft key on the SEARCH SPI menu to display the following menu.

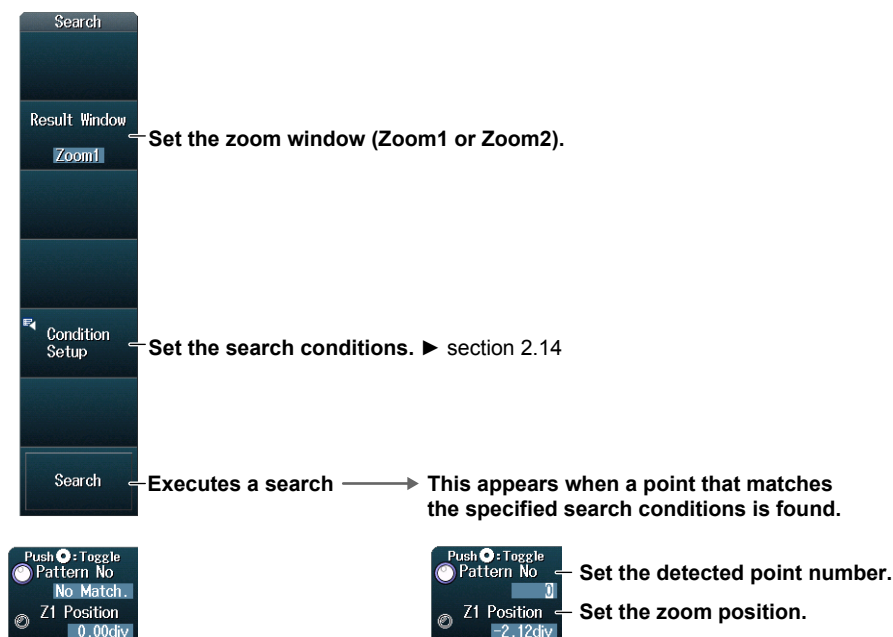

Setting the Zoom Window

You can configure zoom windows Zoom1 and Zoom2 when they are displayed. Zoom1 is automatically displayed during the auto setup of the analysis settings.

Setting Search Conditions

You can set search conditions in the same way that you set trigger conditions. For details, see section 2.14.

Executing Searches

1. Set the search conditions.
2. Press the **Search** soft key.

The DLM4000 searches for the search conditions. If the DLM4000 finds points that match the search conditions (detected points), it shows numbers (0, 1, 2, etc.) from the left of the waveform display in the order that the points were detected.

Setting the Detected Point Number

You can set the detected point number and display the waveform for the detected point on the zoom window.

Setting the Zoom Position

You can change the zoom position, which is the point on the waveform that is zoomed in on.

12.7 Analyzing and Searching User-Defined Serial Bus Signals


This section explains the following settings (which are used when analyzing or searching user-defined serial bus signals).

- Serial bus signal analysis and search displays
- Serial bus signal types
- Analysis
 - Bit rate, data source, clock source, chip select source, latch source, the level used to detect the source state, hysteresis, and polarity
- Decode display and decoding start point
- Zoom position
- Search
 - Zoom window, search conditions, and search execution

► [“Analyzing and Searching Serial Bus Signals”](#) and
[“Analyzing and Searching User-Defined Serial Bus Signals \(User Define\)”](#)
in the Features Guide

SEARCH User Define Menu

Press **SHIFT+SEARCH** (SERIAL BUS), the **Type** soft key, and then the **User Define** soft key to display the following menu.

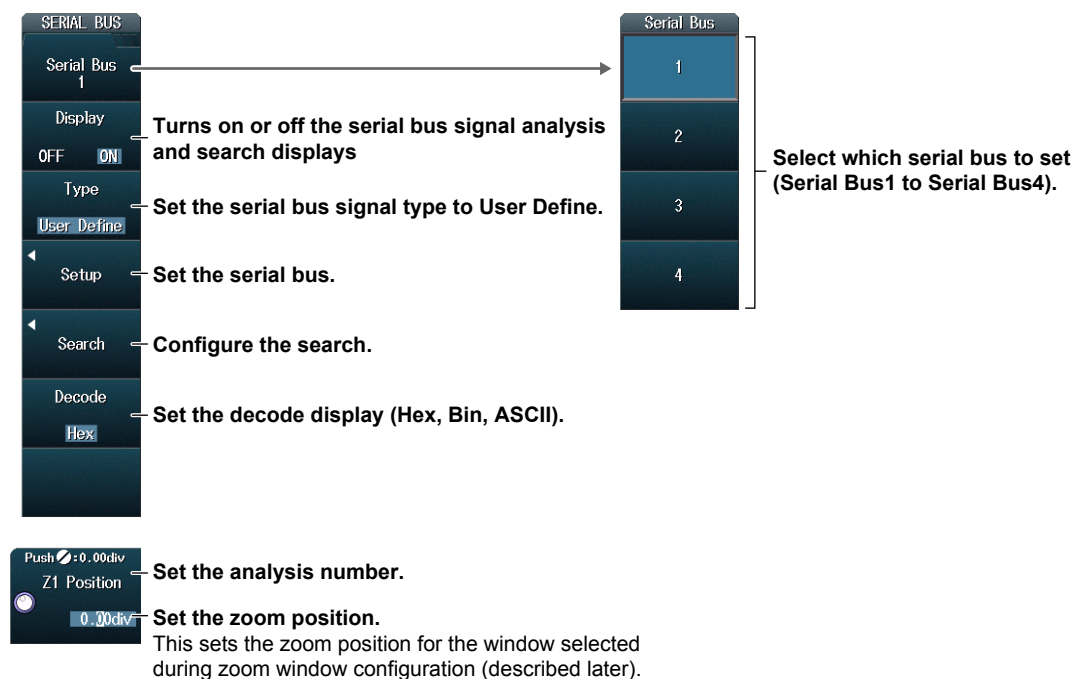

Setting the Serial Bus (Setup)


Note

Using the CH8 Terminal and LOGIC(L) Port


If you perform an analysis or execute a search when using the LOGIC(L) port for input, you cannot specify CH8 as the source. Press the CH8 key in advance to enable input from the CH8 terminal.

Press the **Setup** soft key to display one of the menus shown below. The menu that is displayed varies depending on whether the clock is on or off.

When the Clock Is Off

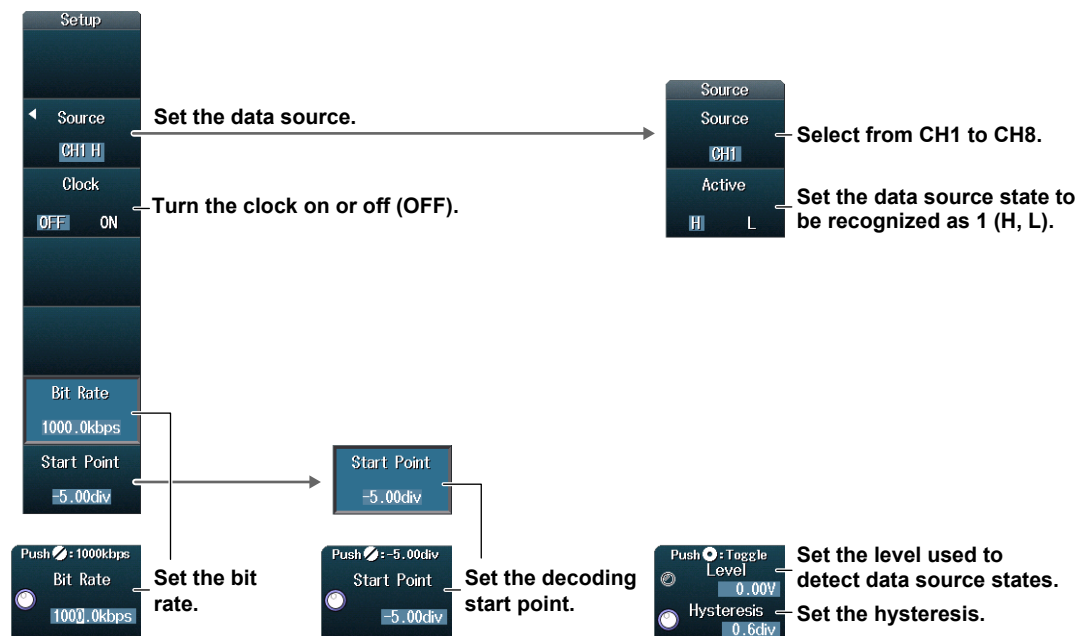


When the Clock Is On

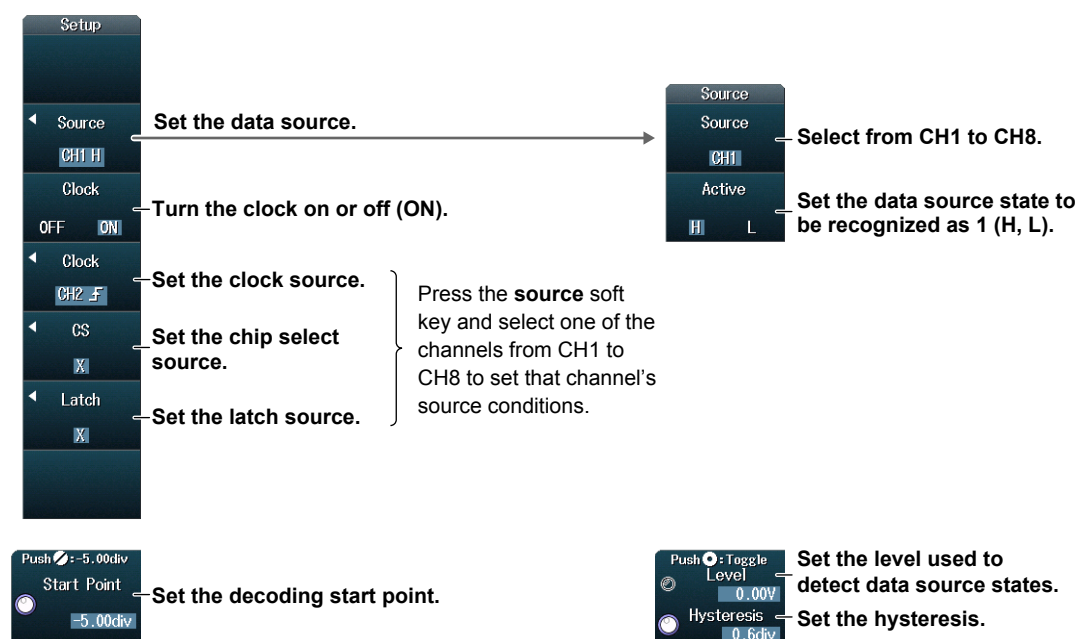


Setting the Clock Source (Clock)

Press the **Clock** soft key to display the following menu.

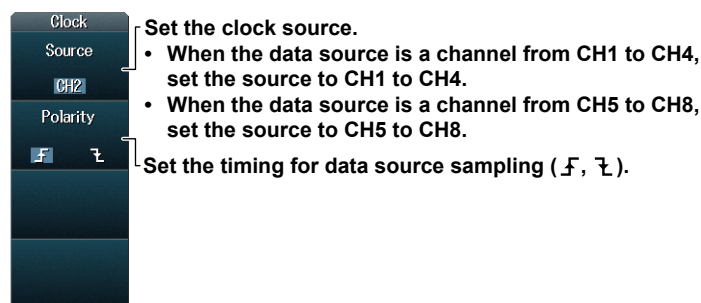

 - Set the clock source.
 - When the data source is a channel from CH1 to CH4, set the source to CH1 to CH4.
 - When the data source is a channel from CH5 to CH8, set the source to CH5 to CH8.
- Set the timing for data source sampling (F, L).




- Set the level used to detect clock source states.
- Set the hysteresis.


Specify which clock source edge causes the data source to be sampled.

Setting the Chip Select Source (CS)

Press the **CS** soft key to display the following menu.

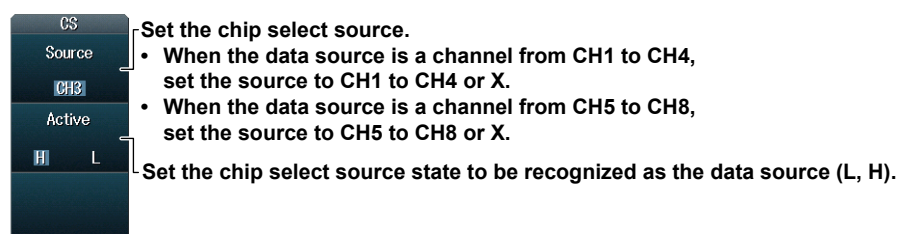

 - Set the chip select source.
 - When the data source is a channel from CH1 to CH4, set the source to CH1 to CH4 or X.
 - When the data source is a channel from CH5 to CH8, set the source to CH5 to CH8 or X.
- Set the chip select source state to be recognized as the data source (L, H).




- Set the level used to detect chip select source states.
- Set the hysteresis.


When the data source is sampled in sync with the clock source, use the chip select source to control the period for which the DLM4000 tests the data source.

Setting the Latch Source (Latch)

Press the **Latch** soft key to display the following menu.

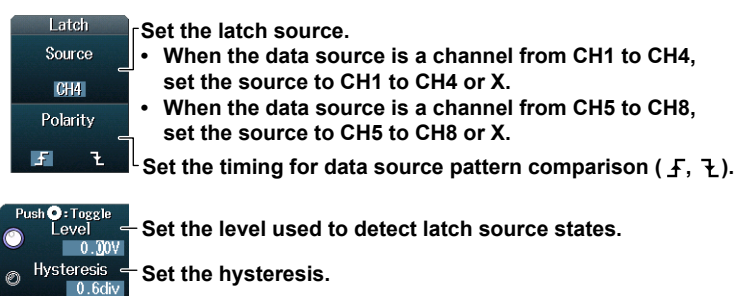

 - Set the latch source.
 - When the data source is a channel from CH1 to CH4, set the source to CH1 to CH4 or X.
 - When the data source is a channel from CH5 to CH8, set the source to CH5 to CH8 or X.
- Set the timing for data source pattern comparison (F, L).




- Set the level used to detect latch source states.
- Set the hysteresis.

Specify the timing at which the data source pattern sampled in sync with the clock source is compared with the specified pattern.

Search Setup (Search)

Press the **Search** soft key on the SEARCH User Define menu to display the following menu.

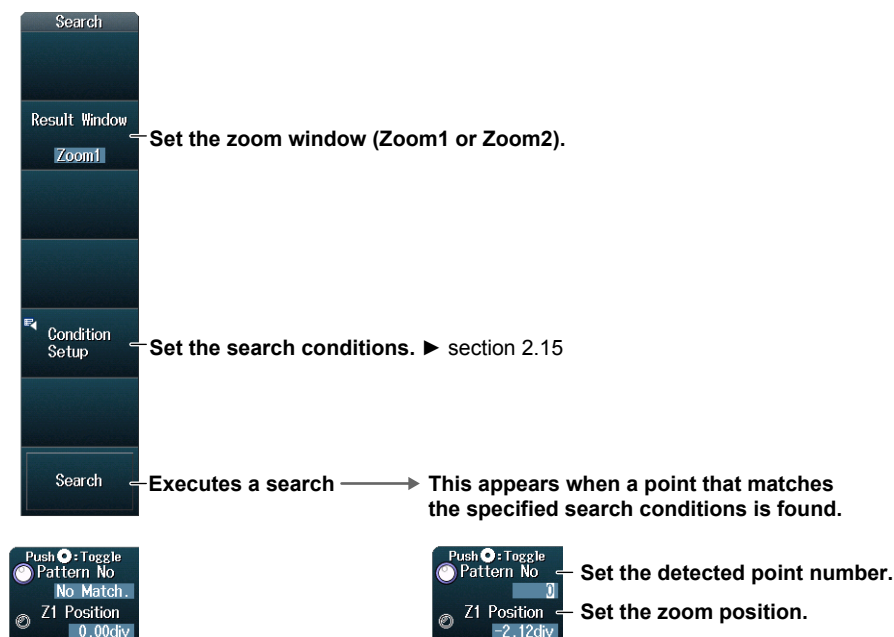

Setting the Zoom Window

You can configure zoom windows Zoom1 and Zoom2 when they are displayed.

Setting Search Conditions

You can set search conditions in the same way that you set trigger conditions. For details, see section 2.15.

Executing Searches

1. Set the search conditions.
2. Press the **Search** soft key.

The DLM4000 searches for the search conditions. If the DLM4000 finds points that match the search conditions (detected points), it shows numbers (0, 1, 2, etc.) from the left of the waveform display in the order that the points were detected.

Setting the Detected Point Number

You can set the detected point number and display the waveform for the detected point on the zoom window.

Setting the Zoom Position

You can change the zoom position, which is the point on the waveform that is zoomed in on.

12.8 Displaying Multiple Lists

This section explains how to list the decoded results of multiple serial bus signals simultaneously.


► “Analyzing and Searching Serial Bus Signals” and
“List Setup”
in the Features Guide

Serial Bus Signal Setup

1. Assign serial bus signals that you want to list simultaneously to **Serial Bus1 to Serial Bus4**.
► sections 12.1 to 12.6

Setting the List Display (List)

2. On the Serial Bus menu whose analysis and search displays (Display) are on, press the **List** soft key.
The following menu appears.

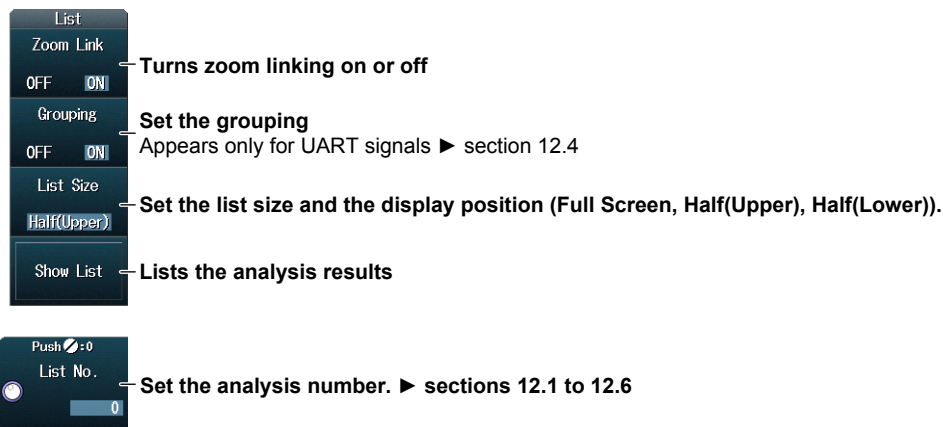

Listing the Analysis Results (Show List)

3. Press the **Show List** soft key.
Serial buses whose analysis and search displays (Display) are on are displayed simultaneously.

Example: When List Size is set to Half(Upper), and the serial bus signal types are set as follows
Serial Bus1(S1): UART, Serial Bus2(S2): I2C, Serial Bus3(S3): SPI, Serial Bus4(S4): SPI

Cursor
The cursor of the list that is being used is highlighted.
Only the frame appears for cursors of lists that are not being used.

- When zoom linking is on
The zoom position in the zoom window (Result Window) moves in sync with the cursor on the list. If the signals of other lists are displayed in the same zoom window, the cursors of those lists also move in sync.

Change the list you want to use.

- Moves to the left list
- Moves to the right list

Expands the list you want to use or returns to the original screen

13.1 Displaying Waveform Histograms


This section explains the following settings (which are used when displaying a histogram of the frequency of data occurrence in a specified area).

- Histogram display
- Source waveform
- Source axis
- The range over which the frequency is counted

► “Displaying the Frequency Distribution of a Waveform”
in the Features Guide

ANALYSIS Histogram Menu

Press **ANALYSIS** and then the **Histogram** soft key to display the following menu.

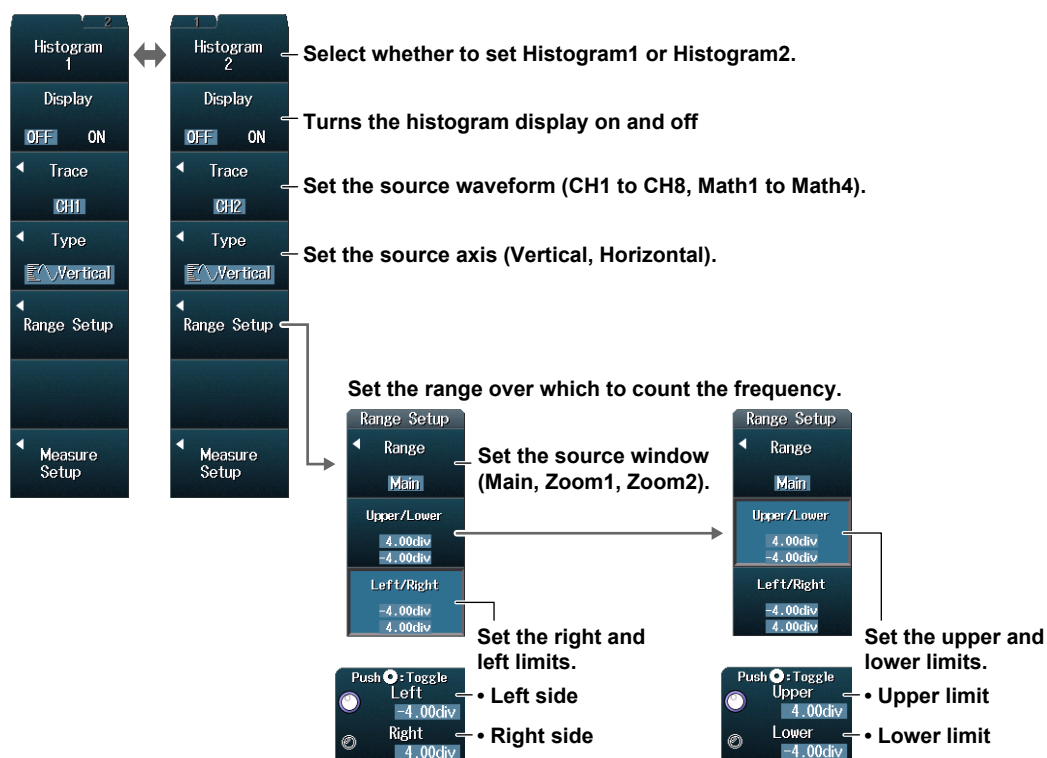

13.2 Measuring Histogram Parameters


This section explains the following settings (which are used when measuring histogram parameters).

- Measurement mode
- Measurement items
- Cursor measurement

► “Measurement (Measure Setup)” in the Features Guide


ANALYSIS Histogram Menu

Press **ANALYSIS** and then the **Histogram** soft key to display the following menu.

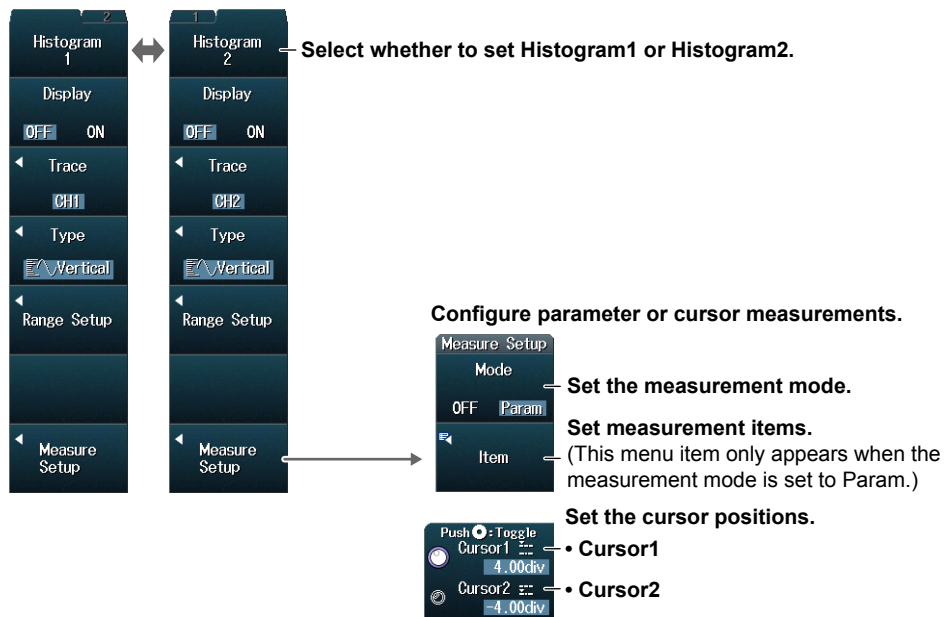

Setting Measurement Items (Item)

Press the **Item** soft key to display the following screen.

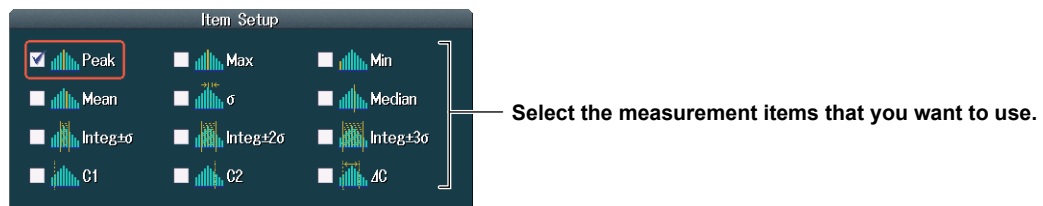


14.1 Setting the Power Supply Analysis Type or Power Measurement

This section explains how to set the power supply analysis type and power measurement.

► [“Overview of the Power Supply Analysis Feature” in the Features Guide](#)

ANALYSIS Menu

Press **ANALYSIS** to display the following menu.

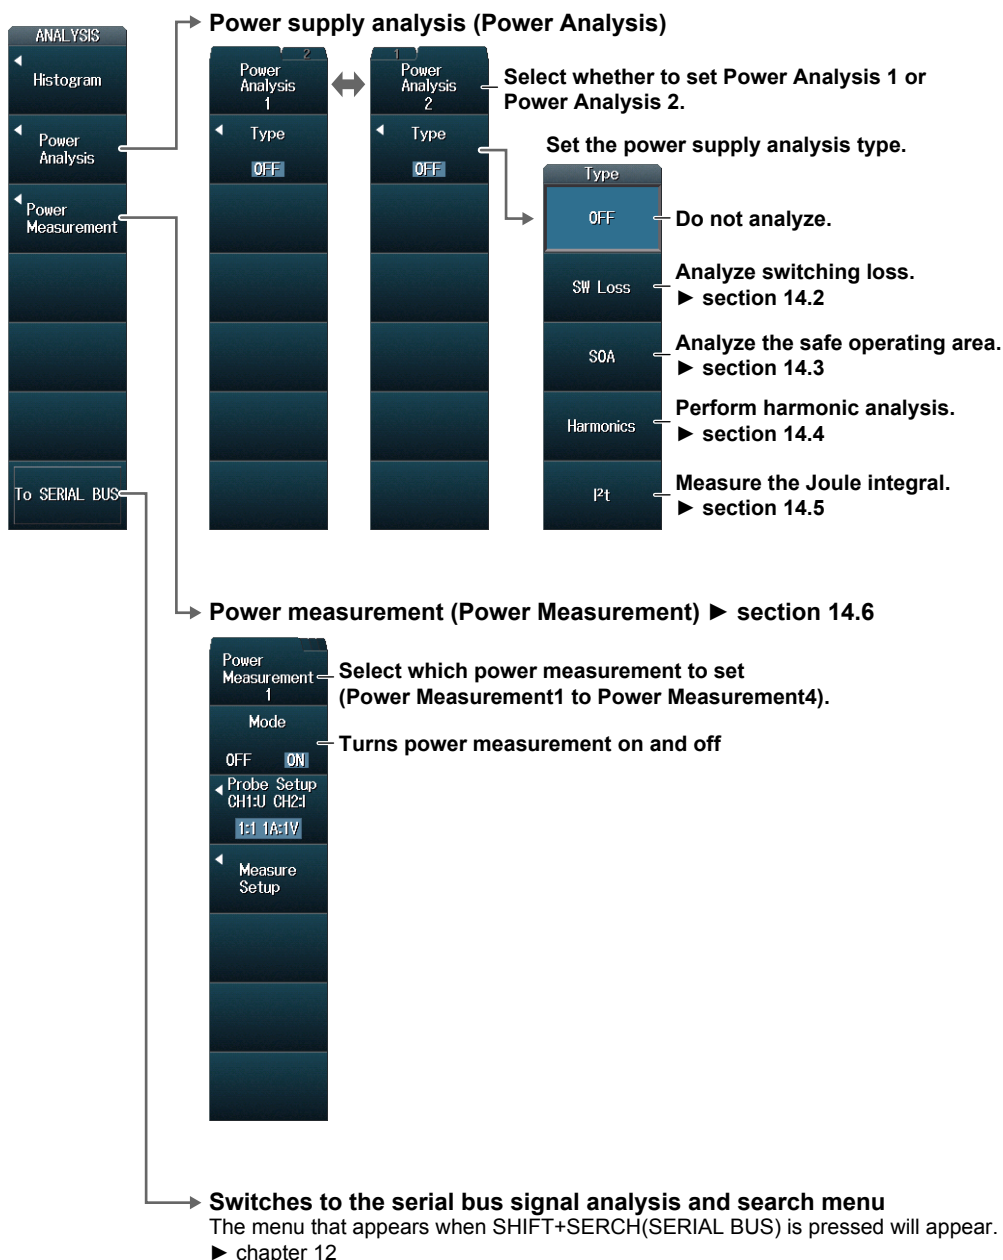

Note

Power supply analysis and power measurement cannot be executed simultaneously. If any of the power measurement items, Power Measurement1 to Power Measurement4, is set to ON, the power supply analysis is set to OFF. If power supply analysis is set to something other than OFF, all power measurements are set to OFF.

14.2 Analyzing Switching Loss

This section explains the following settings (which are used when analyzing switching loss).

- Probe
- Measurement conditions
 - Cycle mode, device, RDS or Vce value, measurement items, measurement source window, and measurement time period
- Power trace display
- Scaling

► “Switching Loss Analysis (SW Loss)” in the Features Guide

ANALYSIS Power Analysis Menu

Press **ANALYSIS** and then the **Power Analysis** soft key to display the following menu.

Power Analysis 1 ↔ Power Analysis 2

- Select whether to set Power Analysis1 or Power Analysis2.
- Type: SW Loss. Set Type to SW Loss.
- Probe Setup: CH1:U CH2:I, 1:1 1A:1V. Configure the probe.
- Measure Setup. Set the measurement conditions.
- Math1: Power OFF ON. Shows and hides the power trace.
- Ranging: Auto Manual. Set the scaling (Auto, Manual).
► section 6.6
- Push \odot Toggle Center: 0.00W. Set the center point and the sensitivity (when Ranging is set to Manual).
- Sensitivity: 2.000W. Set the center point.
- Sensitivity: 2.000W. Set the sensitivity.

Configuring the Probe (Probe Setup)


Press the **Probe Setup** soft key to display the following menu.

Probe Setup

- Input Channels: CH1:CH2. Set the input channel (CH1:CH2, CH3:CH4).
- Probe CH1/CH2: 1:1 1A:1V. Set the probe attenuation and voltage-to-current conversion ratio (using the jog shuttle).
- Deskew CH1/CH2: 0.00ns 0.00ns. Set each channel's deskew value (using the jog shuttle).
- Ref Trace: CH1 CH2. Set the reference trace.
- Auto Deskew. Executes auto deskewing.
- Push \odot Toggle Deskew CH1: 0.00ns. Set each channel's deskew value.
- Deskew CH2: 0.00ns. Set each channel's deskew value.
- Push \odot Toggle Probe CH1:U: 1:1. Set the probe attenuation and voltage-to-current conversion ratio.
- Probe CH2:I: 1A:1V. Set the probe attenuation and voltage-to-current conversion ratio.

Note


- If you set the power supply analysis type to SW Loss, automated measurement of waveform parameters is enabled. The measured values from the measurement items set on the MEASURE menu, and the switching loss measurement items are displayed on the screen.
A maximum of 30 measurement items can be displayed. If measured switching loss values are not displayed, reduce the number of MEASURE menu measurement items.
► section 9.1
- If you turn Power(Math1) or Power(Math2) on, the power trace is displayed on the screen. If you then press MATH/REF key, the following menu is displayed.

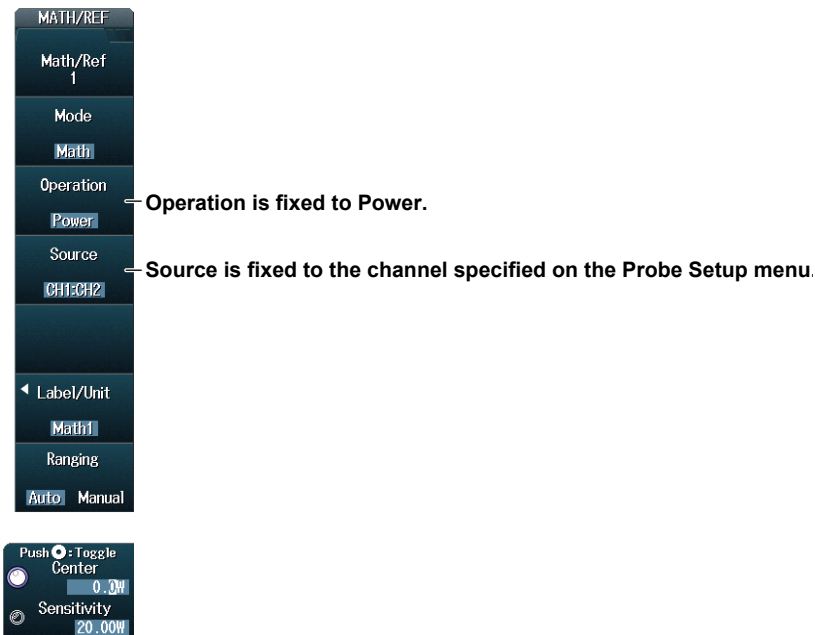


If you turn Power(Math1) or Power(Math2) off, the normal computation setup menu is displayed when you press MATH/REF.

Setting Measurement Conditions (Measure Setup)

Press the **Measure Setup** soft key to display the following menu.

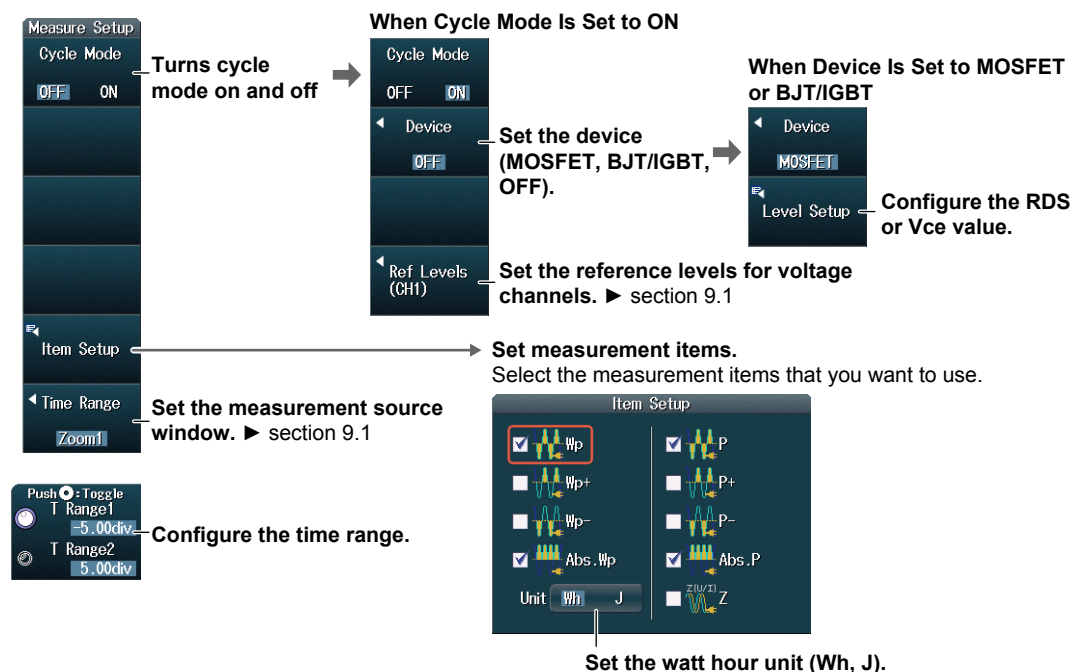

Configuring the RDS or Vce Value (Level Setup)

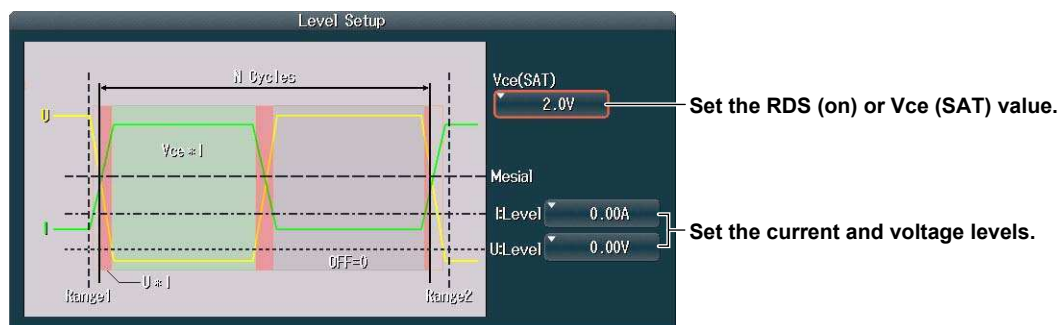

Note

If you turn cycle mode on, the Cycle Mode setting changes to N Cycle on the MEASURE menu's Item Setup screen (see page 9-1).

14.3 Analyzing the Safe Operating Area


This section explains the following settings (which are used when performing safe operating area analysis).

- Probe
- Showing and hiding VT waveforms
- Cursor display

► “Safe Operating Area Analysis (SOA)” in the Features Guide

ANALYSIS Power Analysis Menu

Press **ANALYSIS** and then the **Power Analysis** soft key to display the following menu.

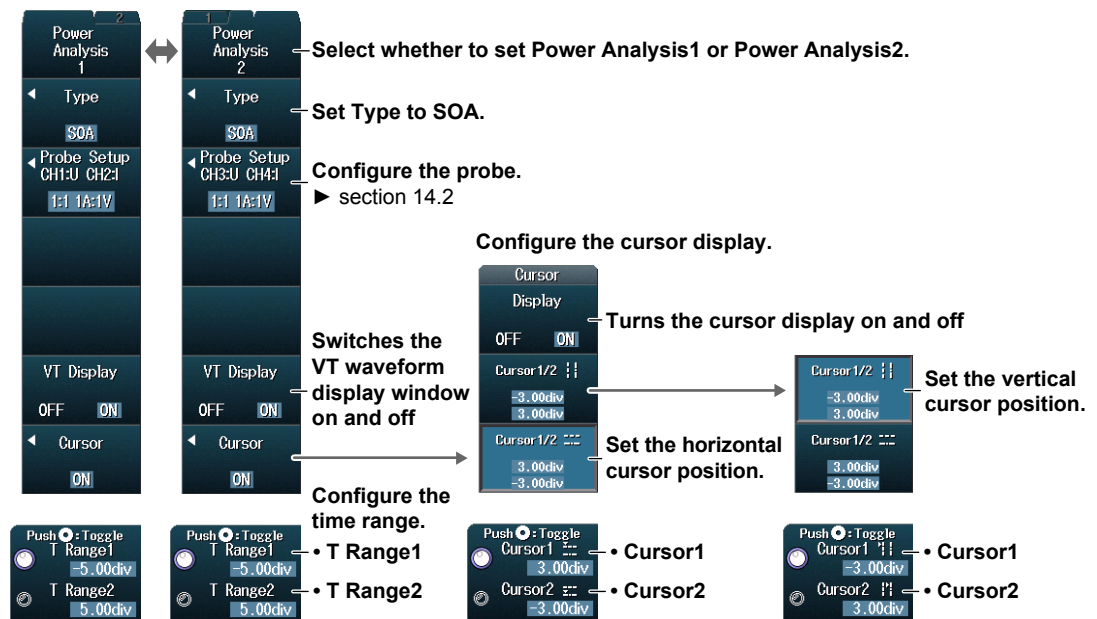

Note

If you set the power supply analysis type to SOA, XY waveforms are automatically displayed on the screen. If you press **SHIFT+DISPLAY** (X-Y) and then press the **Display** soft key, both the XY window and the SOA disappear.

14.4 Analyzing Harmonics

This section explains the following settings (which are used when performing harmonic analysis).

- Probe
 - List storage and display
 - List size and display position
- Applicable class
- Harmonic grouping
- Scale
 - Analysis start point
 - EUT's power supply voltage

► “Harmonic Analysis (Harmonics)” in the Features Guide

ANALYSIS Power Analysis Menu

Press **ANALYSIS** and then the **Power Analysis** soft key to display the following menu.

The Power Analysis menu is shown with two columns for Power Analysis 1 and Power Analysis 2. Annotations indicate the following settings:

- Select whether to set Power Analysis1 or Power Analysis2.** (Indicated by a double-headed arrow between the two columns)
- Set Type to Harmonics.** (Type menu)
- Configure the probe.** (Probe Setup menu, pointing to section 14.2)
- Set the applicable class.** (Class Setup menu)
- Set the harmonic grouping (OFF, Type1, Type2).** (Grouping menu)
- Configure list storage and display settings.** (List menu)
- Display Settings** (Sub-menu):
 - Set the scale (Linear, Log).** (Scale menu)
 - Switches the VT waveform display window on and off** (VT Display menu)
- Set the analysis start point and power supply voltage.** (Push Start Point and System Volt menus)
- Analysis start point** (Push Start Point menu)
- Power supply voltage** (System Volt menu)

Configuring the Applicable Class (Class Setup)

Press the **Class Setup** soft key to display the following menu.

The Class Setup menu is shown with two columns for Class A and Class D. Annotations indicate the following settings:

- Set the applicable class.** (Class menu)
- When the Applicable Class Is C** (Class C sub-menu):
 - Obtains the EUT's power factor.*** (Get λ menu)
 - Set whether the active power exceeds 25 W (True) or not (False).** (Over 25 watt menu)
 - Set the EUT's fundamental current.** (Fund Current menu)
 - Set the power factor.*** (λ menu)
- When the Applicable Class Is D** (Class D sub-menu):
 - Set the EUT's active power.** (Power menu)

* You can select this when the active power exceeds 25 W (Over 25 Watt is set to True).

Note

While λ (the power factor) is being obtained, Get λ changes to Abort. It may take time to obtain λ if the record length is long. To stop obtaining λ , press the Abort soft key.

List Storage and Display (List)

Press the **List** soft key to display the following menu.

List

File List

USB

File Name

000001.CSV

Save List

List Size

Half(Upper)

Show List

Set the save destination and file name. ▶ section 17.2

Saves the list

Set the list size and the display position (Full Screen, Half(Upper), Half(Lower)).

Lists the analysis results

• When the Applicable Class Is A, B, or D

Analysis number

Push 0

List No.

1

Order	Measure(A)	Limit(A)	Info
1			
2		0.340	
3			
4		0.190	
5			
6		0.100	
7			
8		0.050	
9			
10		0.035	
11			
12		0.030	

• When the Applicable Class Is C

Push 0

List No.

1

Order	Measure(A)	Limit(A)	Measure(B)	Limit(B)	Info
1		(Max)			
2	0.020			2.000	
3	0.240			30.000	
4					
5	0.100			10.000	
6					
7	0.070			7.000	
8					
9	0.050			5.000	
10					
11	0.030			3.000	
12					

14.5 Measuring the Joule Integral


This section explains the following settings (which are used when measuring the Joule integral).

- Probe
- Measurement conditions
- Measurement window and measurement time period
- Joule integral waveform display
- Scaling

► “Joule Integral (I^2t)” in the Features Guide


ANALYSIS Power Analysis Menu

Press **ANALYSIS** and then the **Power Analysis** soft key to display the following menu.

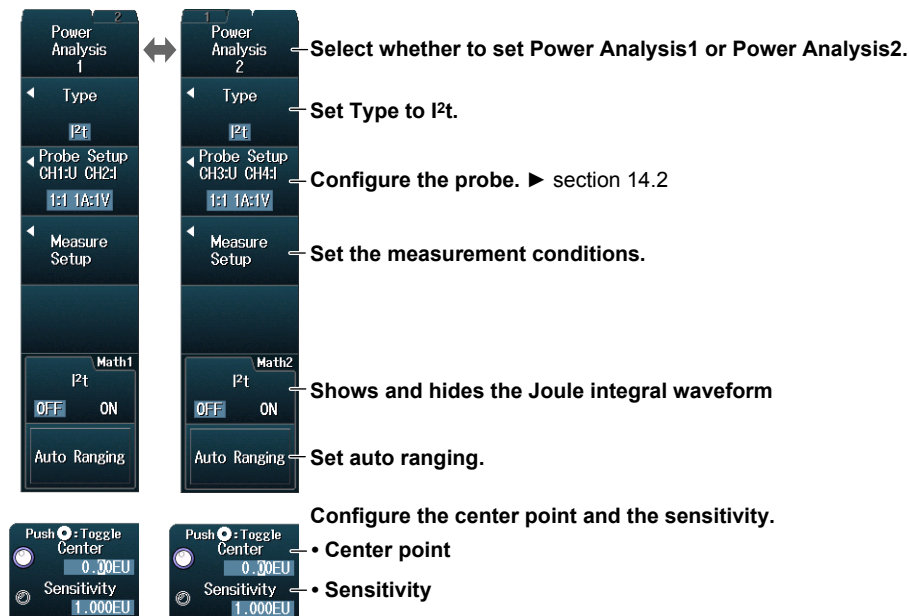

Setting Measurement Conditions (Measure Setup)

Press the **Measure Setup** soft key to display the following menu.

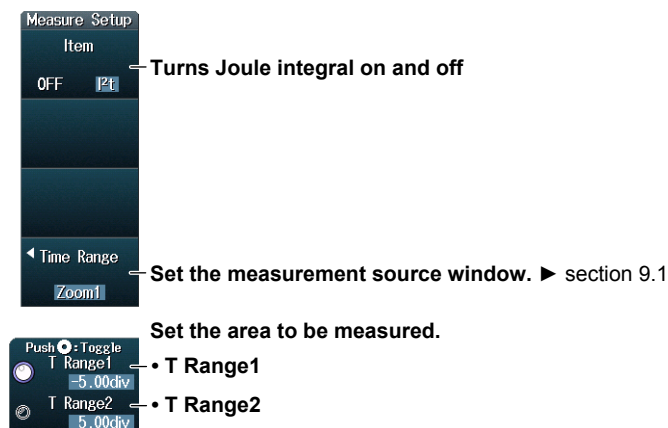


Note

- If you set the power supply analysis type to I^2t , automated measurement of waveform parameters is enabled. The measured values from the measurement items set on the MEASURE menu and the Joule integral measurement items are displayed on the screen.
A maximum of 30 measurement items can be displayed. If measured Joule integral values are not displayed, reduce the number of MEASURE menu measurement items.
► section 9.1
- If you turn $I^2t(\text{Math1})$ or $I^2t(\text{Math2})$ on, the Joule integral waveform is displayed on the screen. If you then press MATH/REF key, the following menu is displayed.



Operation is fixed to Joule integral (I^2t).

 Source is fixed to the channel specified on the Probe Setup menu.



If you turn $I^2t(\text{Math1})$ or $I^2t(\text{Math2})$ off, the normal computation setup menu is displayed when you press MATH/REF.

14.6 Measuring Power

This section explains the following settings (which are used when measuring power).

- Turning power measurement on and off
- Probe
- Measurement conditions

Measurement items, reference levels for time measurements, measurement location indicator, measurement source window, and measurement time range

► “Power Measurement (Power Measurement)” in the Features Guide

ANALYSIS Power Measurement Menu

Press **ANALYSIS** and then the **Power Measurement** soft key to display the following menu.

Power Measurement	Voltage Input Channel	Current Input Channel
Power Measurement1	CH1	CH2
Power Measurement2	CH3	CH4
Power Measurement3	CH5	CH6
Power Measurement4	CH7	CH8

Note

- For input channels that are assigned to power measurement and whose mode is set to ON, the following standard waveform parameters cannot be set. Because the measurement items of power measurement are the same as the following standard waveform parameters, the power measurement values are used in place of waveform parameters.
Max, Min, P-P, Rms, Mean, Sdev, Avg Freq
- If any of the power measurements is set to ON, cycle mode of the standard waveform parameters is set to OFF.

Configuring the Probe (Probe Setup)

Press the **Probe Setup** soft key to display the following menu.

Setting Measurement Conditions (Measure Setup)

Press the **Measure Setup** soft key to display the following menu.

Measure Setup

- Item Setup**: Set the measurement items.
- Ref Levels**: Set the reference levels for time measurements.
- Indicator**: Set the measurement location indicator.
- Calc Setup**: Set up a calculation that uses automated measurement values.
 - Calc 1**: Select the expressions to use.
 - Calc 2**: Enter the name using up to 8 characters.
 - Calc 3**: Enter the unit using up to 4 characters.
- Time Range**: Set the measurement source window.
 - T Range1**: Configure the time range.
 - T Range2**: section 9.1

Calc

Calc	Name	Expression	Unit
Calc 1	Calc1	Max(C1)	
Calc 2	Calc2	Min(C2)	
Calc 3	Calc3	High(M1)	
Calc 4	Calc4	Low(M2)	

Set the expressions.

Define an expression by combining computation source waveforms and operators.

Calc 4

Low(M2)

Measure

() , PI e fs 1/fs

C1 C5 M1 A1 SIN COS TAN 7 8 9 /

C2 C6 M2 A2 ASIN ACOS ATAN 4 5 6 *

C3 C7 M3 EXP LN LOG 1 2 3 -

C4 C8 M4 ABS P2 SQRT 0 . Exp +

You can include the automated measurement values of waveform parameters to expressions.

Setting the Measurement items (Item Setup)

Press the **Item Setup** soft key to display the following menu.

Clears the check boxes of all the measurement items

Measure Item

All OFF

☒ U+pk ☐ U-pk ☐ Up-p ☐ Urms ☐ Udc

☐ Uac ☐ Umn ☐ Urmn

☐ Avg Freq ☐ S ☐ P ☐ Q ☐ Z(W1) ☐ λ

☐ Wp ☐ Wp+ ☐ Wp- ☐ Abs.Wp ☐ Unit Wh J

Select the measurement items that you want to use.

- Measurement items of voltage input channels CH1, CH3, CH5, and CH7

Set the unit (Wh, J).

☐ I+pk ☐ I-pk ☐ Ip-p ☐ Irms ☐ Idc

☐ Iac ☐ Imn ☐ Irmn

☐ Avg Freq ☐ q ☐ q+ ☐ q- ☐ Abs.q

- Measurement items of current input channels CH2, CH4, CH6, and CH8

Setting the Reference Levels for Time Measurements (Ref Levels)

Press the **Ref Levels** soft key. Depending on the power measurement that is selected (Power Measurement1 to Power Measurement4), the following screen appears.

Set the unit for the distal, mesial, and proximal reference levels (% or Unit).

Set the distal value (using the jog shuttle).

Set the mesial value (using the jog shuttle).

Set the proximal value (using the jog shuttle).

Set the mode for determining high and low levels (Auto, Max-Min, Histogram).

Power Measurement1

	Mode	Distal	Mesial	Proximal	High Low
CH1	% Unit	90%	50%	10%	Auto
CH2	% Unit	90%	50%	10%	Auto

Power Measurement2

Ref Levels					
	Mode	Distal	Mesial	Proximal	High Low
CH3	% Unit	90%	50%	10%	Auto
CH4	% Unit	90%	50%	10%	Auto

Power Measurement3

Ref Levels					
	Mode	Distal	Mesial	Proximal	High Low
CH5	% Unit	90%	50%	10%	Auto
CH6	% Unit	90%	50%	10%	Auto

Power Measurement4

Ref Levels					
	Mode	Distal	Mesial	Proximal	High Low
CH7	% Unit	90%	50%	10%	Auto
CH8	% Unit	90%	50%	10%	Auto

Setting the Measurement Location Indicator (Indicator)

1. Press the **Indicator** soft key.
You can set Indicator to OFF (the measurement location indicator is not displayed) or display a setup menu with the items whose check boxes you have selected in "Setting the Measurement Items (Item Setup)."
2. Use the **jog shuttle** or the **SET** key to select the item whose measurement location you want to indicate.
The measurement location of the item you specify is indicated by a cursor.

 
15.1 Displaying History Waveforms


This section explains the following settings (which are used when displaying history waveforms held in the acquisition memory).

- Display mode
- Averaging
- Highlighting of the selected record number
- Display range (start and end record numbers)
- List of timestamps
- Replay
- Gradation mode

► [“Displaying and Searching History Waveforms” in the Features Guide](#)

HISTORY Menu

Press **HISTORY** () to display the following menu.

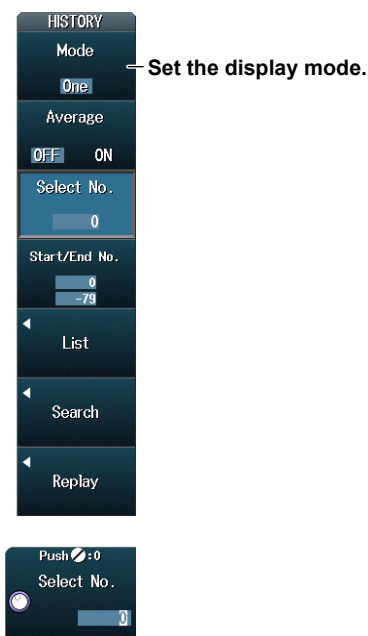


Setting the Display Mode (Mode)

- One: Only displays the waveform corresponding to the selected record number.¹
- All: Overlays all selected waveforms.² All waveforms except the waveform corresponding to the selected record number are displayed in an intermediate color.¹
- Accumulate: Overlays all selected waveforms.² The frequency of data occurrence is represented by intensity (Intensity) or by color (Color).

1 Specify the highlighted waveform with Select No.


2 Specify with Start and End No.

When the Display Mode Is One or All

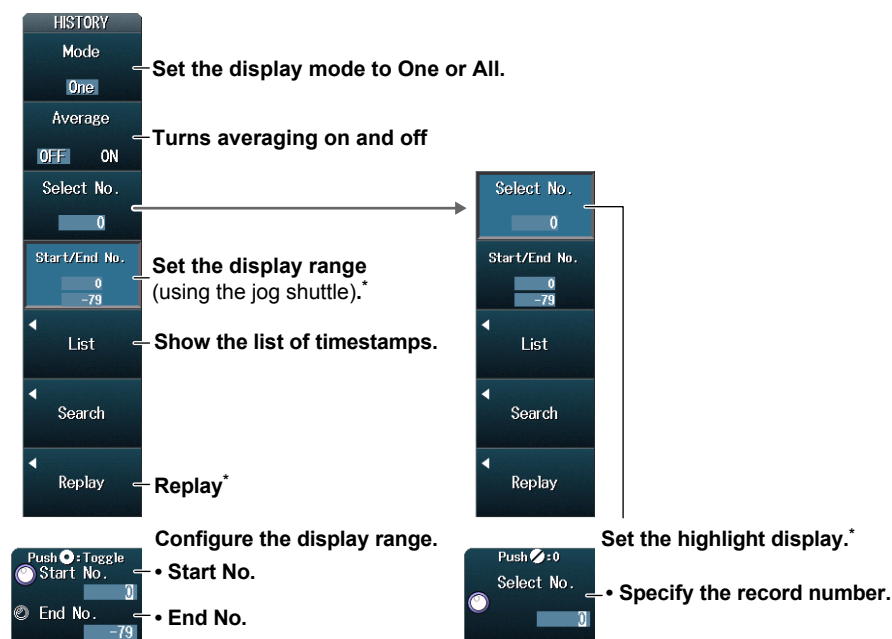

* The Select No. and Start/End No. soft keys and the Replay soft key menu appear when averaging is off.

When the Display Mode Is Accumulate

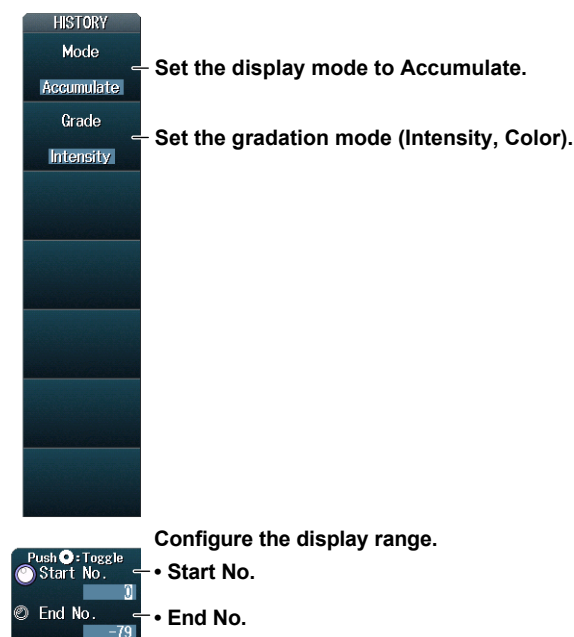

Displaying a List of Timestamps (List)

Press the **List** soft key to display the following menu.

No.	Trig'd Time	Delta
	s ms us ns ps	s ms us ns ps
0	12:58:02.625 283 600	0.010 014 640
-1	12:58:02.615 268 960	0.017 286 400
-2	12:58:02.597 982 560	0.010 014 800
-3	12:58:02.587 967 760	0.017 288 880
-4	12:58:02.570 678 880	0.010 014 800
-5	12:58:02.560 664 080	0.017 286 400
-6	12:58:02.543 377 680	0.010 014 640
-7	12:58:02.533 363 040	0.017 276 160
-8	12:58:02.516 086 880	0.010 014 800
-9	12:58:02.506 072 080	0.054 321 920
-10	12:58:02.451 750 160	0.010 014 640
-11	12:58:02.441 735 520	0.017 276 160
-12	12:58:02.424 459 360	0.010 014 800
-13	12:58:02.414 444 560	0.017 282 560
-14	12:58:02.397 162 000	0.010 014 640
-15	12:58:02.387 147 360	0.017 276 240
-16	12:58:02.369 871 120	0.010 014 640
-17	12:58:02.359 856 480	0.017 281 280
-18	12:58:02.342 575 200	0.010 014 800
-19	12:58:02.332 560 400	0.017 276 080
-20	12:58:02.315 284 320	0.010 014 800
-21	12:58:02.305 269 520	0.017 277 440
-22	12:58:02.287 992 080	0.010 014 640
-23	12:58:02.277 977 440	0.017 276 240
-24	12:58:02.260 701 200	0.010 014 640
-25	12:58:02.250 686 560	0.017 276 160
-26	12:58:02.233 410 400	0.010 014 800
-27	12:58:02.223 395 600	0.017 282 560
-28	12:58:02.206 113 040	0.010 014 720

Delta Min	Jump to the record number whose data contains the triggers with the least time between them.
Delta Max	Jump to the record number whose data contains the triggers with the most time between them.
Oldest	Jump to the oldest record number.
Latest	Jump to the latest record number.

Note

Notes about Configuring the History Feature


- When the acquisition mode is set to Average and the sampling mode is set to Repetitive, you cannot use the history feature.
- When the display is in roll-mode, you cannot use the history feature.
- If you stop waveform acquisition, the DLM4000 only displays waveforms that have been acquired completely.

Notes about Recalling Data Using the History Feature

- Waveform acquisition stops when you display the History menu. You cannot display history waveforms while waveform acquisition is in progress.
- You can start waveform acquisition when the History menu is displayed. However, you cannot change the history feature settings while waveform acquisition is in progress.
- The settings are restricted so that the following relationship is retained: Last record (End) \leq Select No. \leq First record (Start).
- When you load waveform data from the specified storage medium, history waveforms up to that point are cleared. The loaded waveform data is placed in record number zero. If you load a file containing multiple waveforms, the latest waveform is placed in zero, and earlier waveforms are placed in order to record numbers -1, -2, and so on.
- Computation and automated measurement of waveform parameters are performed on the waveform of the record number specified by Select No. You can analyze old data as long as you do not overwrite the acquisition memory contents by restarting waveform acquisition. If Average is set to ON, analysis is performed on the averaged waveform.
- History waveforms are cleared when you turn the power off.

Replay (Replay)

Press the **Replay** soft key to display the following menu.

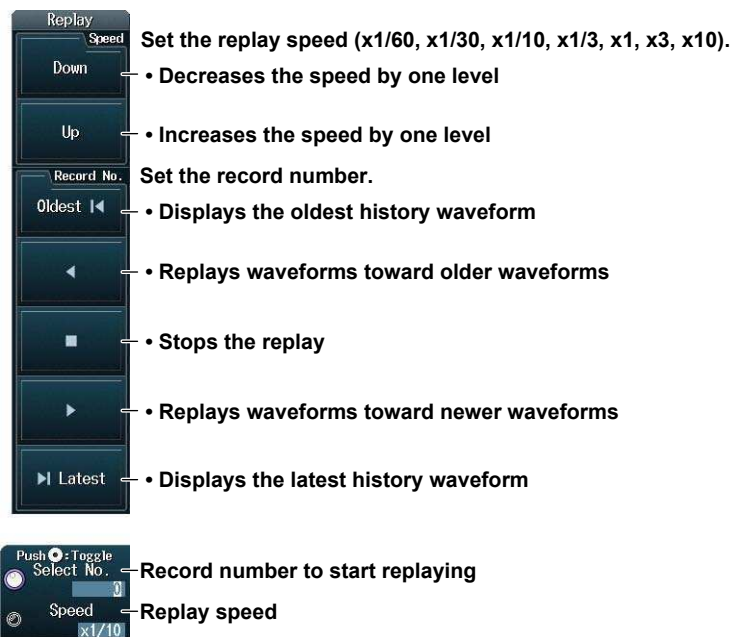

15.2 Searching History Waveforms


This section explains the following settings (which are used when searching history waveforms).

- Search condition
- Reference condition numbers 1 to 4
Search criterion, search waveform, search range mode, and search window
- Executing searches
- Finishing searches

► [“Search” in the Features Guide](#)


HISTORY Menu

Press **HISTORY** (↶↷) to display the following menu.

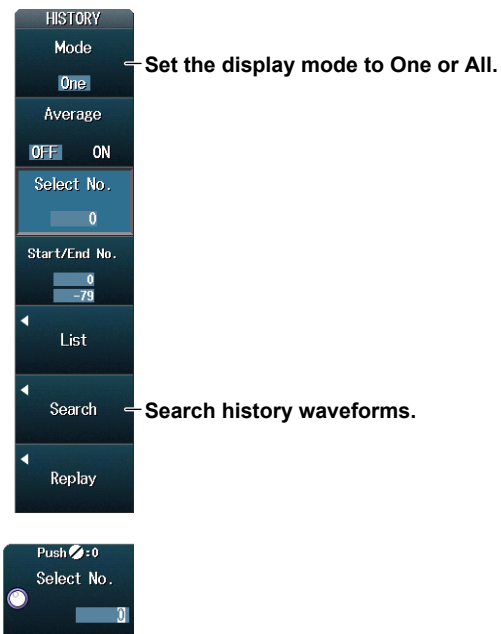

Searching History Waveforms (Search)

Press the **Search** soft key to display the following menu.

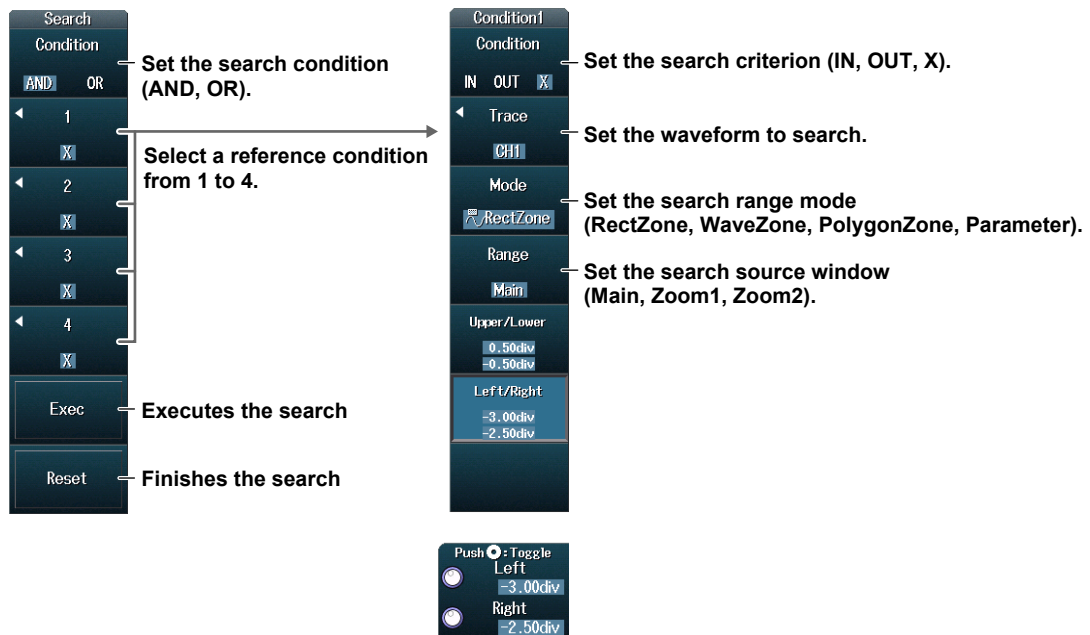

Setting the Waveform to Search (Trace)

You can select the waveform to search from the settings below.

CH1 to CH8/LOGIC(L), LOGIC(A|B), Math1 to Math4, XY1 to XY4, FFT1, or FFT2

- * You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated. Specify the channel that you want to search through in advance by pressing either the CH8 key or the L key.

LOGIC(A|B) is available on models with the /L16 option.

When the reference condition number and the waveform to search are set as follows, there are some search ranges that cannot be set.

- When you set the waveform to search to XY1 to XY4, you cannot set the search range mode to WaveZone.
- When you set the waveform to search to LOGIC(L), LOGIC(A|B), FFT1, or FFT2, you can only set the search range mode to Parameter.
- When the reference condition is 2 or 4 and the waveform to search is Math1 to Math4, you can only set the search range mode to Parameter.

Setting the Search Range Mode (Mode)

You can set the search range mode in the same manner that you set the reference range type for GO/NO-GO determination. See section 2.20, and read all instances of "determination" as "search."

16.1 Loading Roll Paper Into the Built-In Printer (Option)

This section explains how to load roll paper into the optional built-in printer.

Roll Paper for Printers

Only use roll paper specifically made for use with the DLM4000 series. The DLM4000 comes with one set of roll paper included. Use this when you first load roll paper into the built-in printer. When you require a new supply of roll paper, please contact your nearest YOKOGAWA dealer.

Part Number: B9988AE
Specifications: Heat-sensitive paper, 10 m
Minimum Quantity: 10 rolls

Handling Roll Paper

The roll paper is made of heat sensitive paper that changes color thermochemically. Please read the following points carefully.

Storage Precautions

The heat-sensitive paper changes color gradually at temperatures of approximately 70°C or higher. The paper can be affected by heat, humidity, or chemicals, whether something has been recorded on it or not. As such, please follow the guidelines listed below.

- Store the paper in a cool, dry, and dark place.
- Use the paper as quickly as possible after you break its protective seal.
- If you attach a plastic film that contains plasticizing material such as vinyl chloride film or cellophane tape to the paper for a long time, the recorded sections will fade due to the effect of the plasticizing material. Use a holder made of polypropylene to store the roll paper.
- Do not use glue containing organic solvents, such as alcohol or ether, to paste recorded paper. Doing so will change the paper's color.
- We recommend that you make copies of the recordings if you intend to store them for a long period of time. Because of the nature of heat-sensitive paper, the recorded sections may fade.

Handling Precautions

- Only use genuine, YOKOGAWA-supplied roll paper.
- If you touch the roll paper with sweaty hands, there is a chance that you will leave fingerprints on the paper or smudge the recorded sections.
- If you rub the surface of the roll paper against something hard, there is a chance that the paper will change color due to frictional heat.
- If the roll paper comes into contact with products such as chemicals or oil, there is a chance that the paper will change color or that the recorded sections will disappear.

Loading the Roll Paper



CAUTION

- Do not touch the print head. If you do, you may burn yourself.
- Do not touch the roll paper cutter section at the end of the printer cover. Doing so may cause injury.

1. **Raise the handle.**
2. **Press the OPEN COVER button to open the printer cover.**
3. **Set the roll paper with the same orientation as shown in the figure.**
4. **Align the ends of the roll paper with the guides and set the roll in place.**
5. **Close the cover, and press LOCK on the center of the cover until you hear a click.**

16.2 Printing on the Built-in Printer (Option)


This section explains the following settings (which are used when printing on the optional built-in printer).

- Print destination
- Print mode
- Additional information
- Comments
- Magnification
- Time range

► “Printing on the Built-in Printer (Built-in)” in the Features Guide

PRINT Built-in Menu

Press **SHIFT+PRINT** (MENU), the **Print to** soft key, and then the **Built-in** soft key to display the following menu.

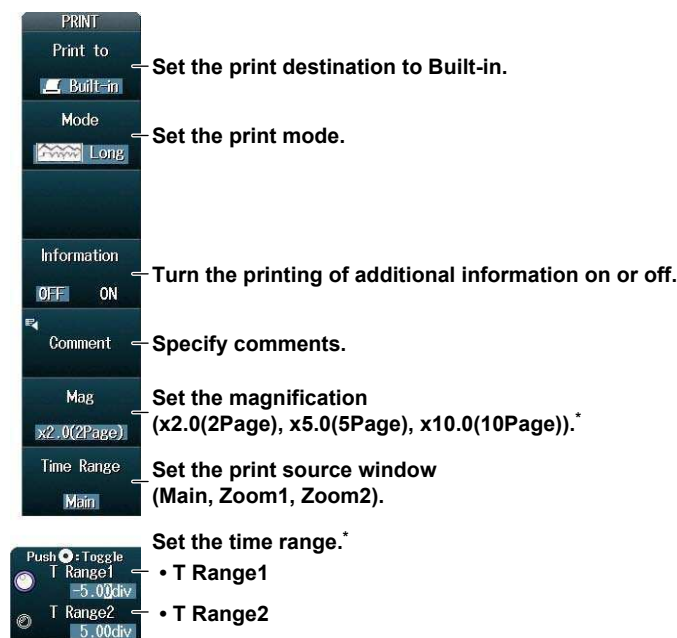

* This is displayed when the print mode is set to Long.

Setting the Print Mode (Mode)

Hardcopy: The entire DLM4000 screen is printed.

Normal: The waveform area of the DLM4000 screen is printed. The menu is not printed.

Long: As in Normal mode, the entire DLM4000 screen is printed, but the time axis is magnified from 2 to 10 times. The selectable magnification settings vary depending on the TIME/div and record length values.

16.3 Printing on a Network Printer (Option)


This section explains the following settings (which are used when printing on a network printer).

- Print destination
- Print mode
- Printer type
- Color
- Comments

► [“Printing on a Network Printer \(Network\)” in the Features Guide](#)

PRINT Network Menu

Press **SHIFT+PRINT** (MENU), the **Print to** soft key, and then the **Network** soft key to display the following menu.

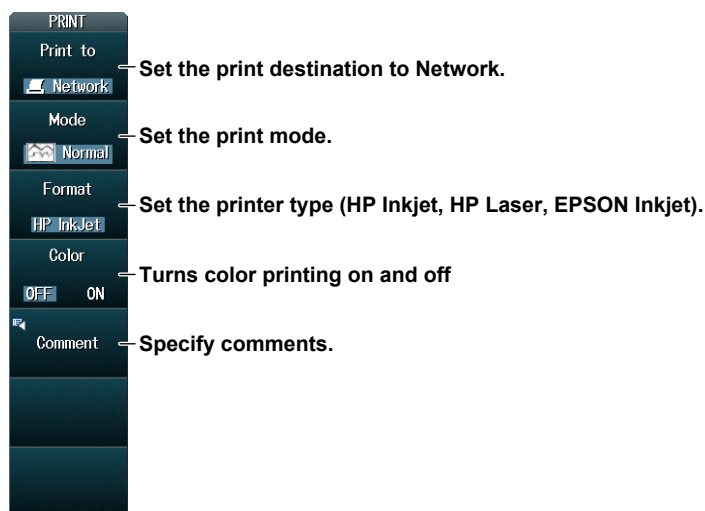

Setting the Print Mode (Mode)

Hardcopy: The entire DLM4000 screen is printed.

Normal: The waveform area of the DLM4000 screen is printed. The menu is not printed.

Note

You must configure the network printer in advance by following the instructions in section 18.7.

16.4 Saving Screen Captures to Files


This section explains the following settings (which are used when saving screen captures to files).

- Output destination
- Save mode
- Data format
- Color data
- Background transparency (transparent or opaque)
- Save destination
- File name

► “Saving Screen Captures to Files (File)” in the Features Guide

PRINT File Menu

Press **SHIFT+PRINT** (MENU), the **Print to** soft key, and then the **File** soft key to display the following menu.

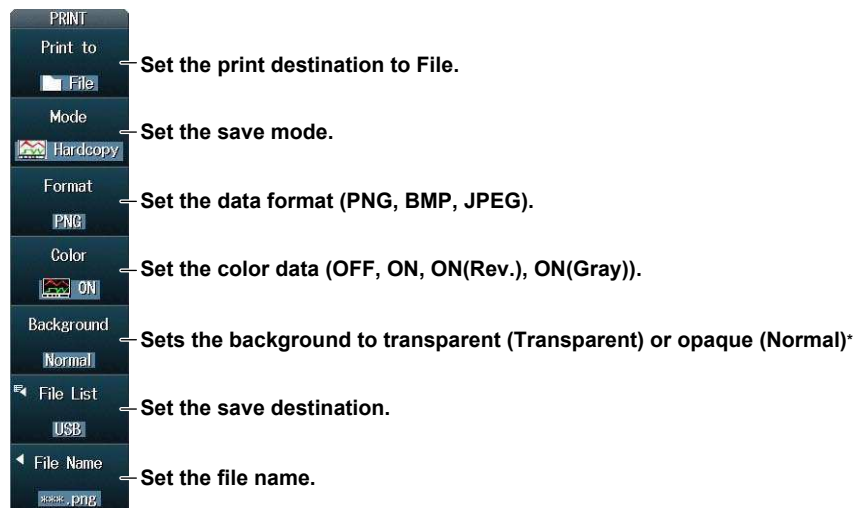

* This appears when the data format is set to PNG.

Setting the Save Mode (Mode)

Hardcopy: The entire DLM4000 screen is saved.

Normal: The waveform area of the DLM4000 screen is saved. The menu is not saved.

Wide: As in Normal mode, the entire DLM4000 screen is saved, but the time axis is magnified from 2 to 10 times.

Setting the Save Destination (File List)

Specify the drive or folder to save files to in the same way as for the file feature.

For details, see section 17.2.

Assigning File Names (File Name)

As with the file feature, you can save files with automatically generated names using sequence numbers or dates, or save the files with specific file names.

For details, see section 17.2.

16.5 Printing and Saving Screen Capture Data to Multiple Output Destinations at the Same Time


This section explains the following settings (which are used when printing and saving screen capture data and waveform data to multiple output destinations at the same time).

- Output destination
- Saving screen captures to files
- Printing screen captures on the built-in printer (option)
- Printing screen captures on a network printer (option)
- Saving waveform data

► [“Printing and Saving Screen Captures to Multiple Destinations \(Multi\)” in the Features Guide](#)

PRINT Multi Menu

Press **SHIFT+PRINT** (MENU), the **Print to** soft key, and then the **Multi** soft key to display the following menu.

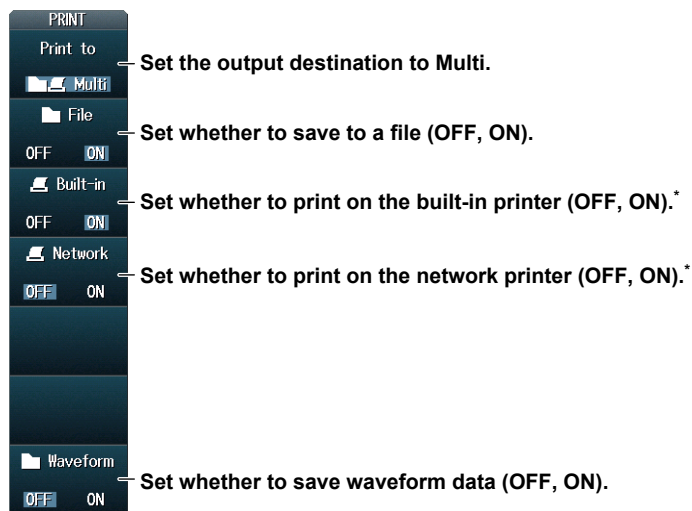

* Option

The DLM4000 outputs screen capture data and waveform data according to the PRINT menu or FILE menu settings. For details on those settings, see the following sections.

- Saving screen captures to files
► section 16.4
- Printing screen captures on the built-in printer (option)
► section 16.2
- Printing screen captures on a network printer (option)
► section 16.3
- Saving waveform data
► section 17.2

Note

When you are executing action-on-trigger or GO/NO-GO determination, if Print to is set to Multi, you cannot print or save screen captures.

17.1 Connecting USB Storage Media to the USB Port


CAUTION

Do not remove the USB storage medium or turn off the power when the media (internal memory or USB storage media) access icon is blinking in the center of the screen or when the USB storage media access indicator is blinking. Doing so may damage the storage medium or corrupt its data.

Access icon



When connecting a USB storage medium to the DLM4000 USB port, connect the USB cable directly as shown in the figure below. You can connect or disconnect a USB cable at any time regardless of whether the DLM4000 is on or off (hot-plugging is supported). Connect the type A connector of the USB cable to the DLM4000, and connect the type B connector to the USB storage medium. If you connect a USB storage device when the power switch is on, the device becomes available for use after the DLM4000 identifies it.

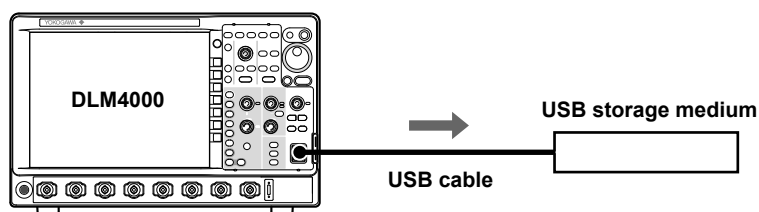

Note

- Connect the USB storage medium directly, not through a USB hub.
- Only connect compatible USB keyboards, mouse devices, and storage devices to the USB ports for peripherals.
- If you turn on the DLM4000 when there are USB devices connected to the USB ports for peripherals, the USB devices or the DLM4000 may not operate properly. In such cases, turn off the DLM4000, disconnect the USB devices, turn the DLM4000 back on, and then reconnect the USB devices. After turning off the power, wait at least 10 seconds before you turn it back on.
- Do not connect and disconnect multiple USB devices repetitively. Provide a 10-second interval between removal and connection.
- Do not connect or remove USB cables from the time when the DLM4000 is turned on until key operation becomes available (approximately 20 to 30 seconds).
- You can use USB storage media that are compatible with USB Mass Storage Class version 1.1.
- The DLM4000 can handle up to four storage media. If the connected medium is partitioned, the DLM4000 treats each partition as a separate storage medium. As such, the DLM4000 can handle up to four partitions.

Confirming What Connected USB Storage Media Can Be Used

Press **FILE**, and then press the **Utility** soft key to display the media that can be used.

17.2 Saving Waveform Data


This section explains the following settings (which are used when saving waveform data).

- Save destination
- File name
- Data format
- Waveform to save
- Save range
- Data compression
- Saving waveform data

► **“Saving Waveform Data (Waveform)” in the Features Guide**

FILE Waveform (Save) Menu


Press **FILE** and then the **Waveform(Save)** soft key to display the following menu.

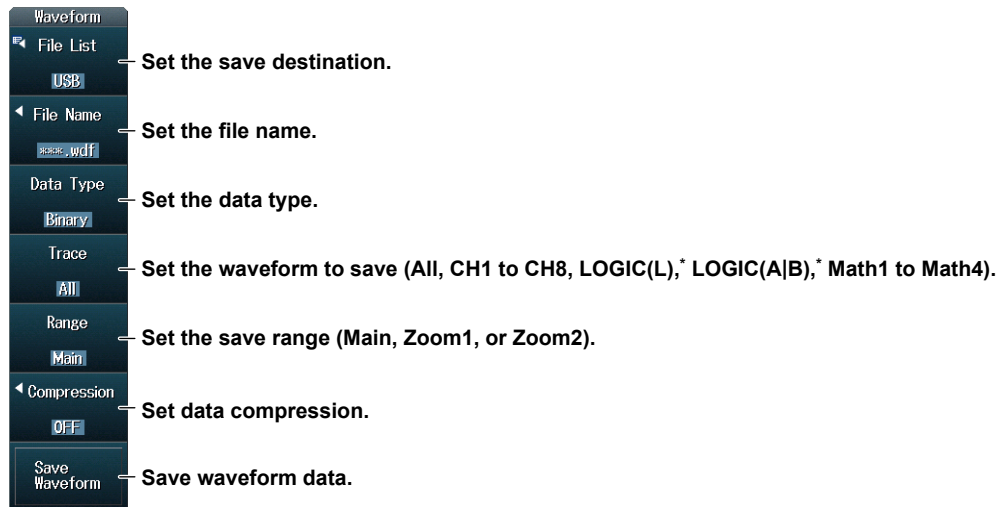

* You can select CH8 or LOGIC(L), depending on which channel's corresponding key (CH8 or L) is illuminated. Specify the channel that you want to measure in advance by pressing either the CH8 key or the L key. LOGIC(A/B) is available on models with the /L16 option.

Setting the Save Destination (File List)

Press the **File List** soft key to display the following screen.

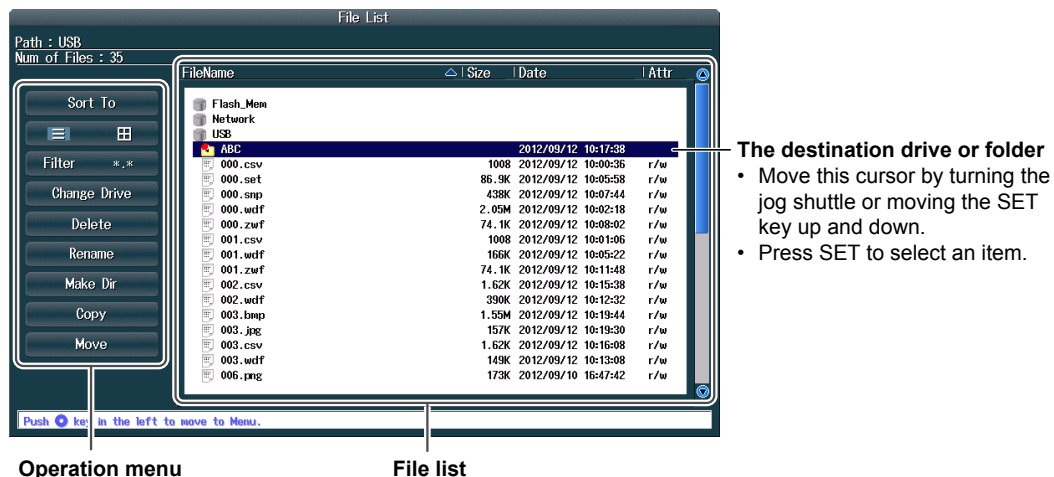

For more information on file operations, see section 17.8.

Note

You can also set the save destination drive by using the Change Drive item on the operations menu.

Assigning File Names (File Name)

Press the **File Name** soft key to display the following menu.




Setting Auto Naming (Auto Naming)


OFF: Disables the auto naming feature. The name that you specify using the File Name setting is used. If a file with the same name exists in the save destination folder, an overwrite confirmation dialog box is displayed.

Numbering: The DLM4000 automatically adds a three-digit number from 000 to 999 after the common name specified using the File Name setting and saves files.

Date: The DLM4000 uses an 8-character file name that is produced based on the date and time using base-36 numbers (0 to 9 and A to Z). The file name specified for the File Name setting is ignored.

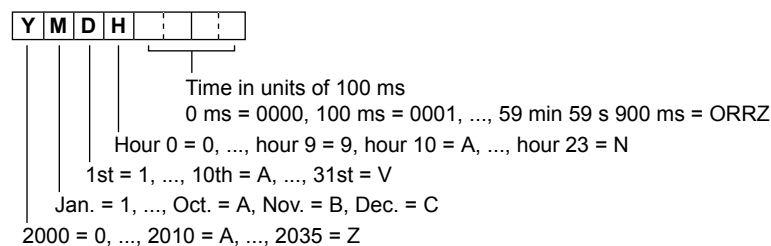

Date2: The file name is the date and time (down to ms) when the file is saved. The file name specified for the File Name setting is ignored.

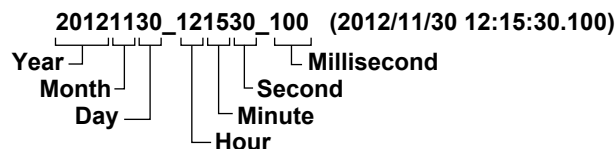

Assigning File Names (File Name)

You can set the file name that is used when the auto naming feature is turned off or the common file name that is used when the auto naming feature is set to Numbering.

Data Type Setting (Data Type)


Binary: Data is saved in binary format (the extension is .wdf).

ASCII: Data is saved in ASCII format (the extension is .csv).

ASCII with TimeInfo.: All data is saved in ASCII format with time information (the extension is .csv).

Setting Data Compression (Compression)

Press the **Compression** soft key, and then the **Mode** soft key to display the following menu.

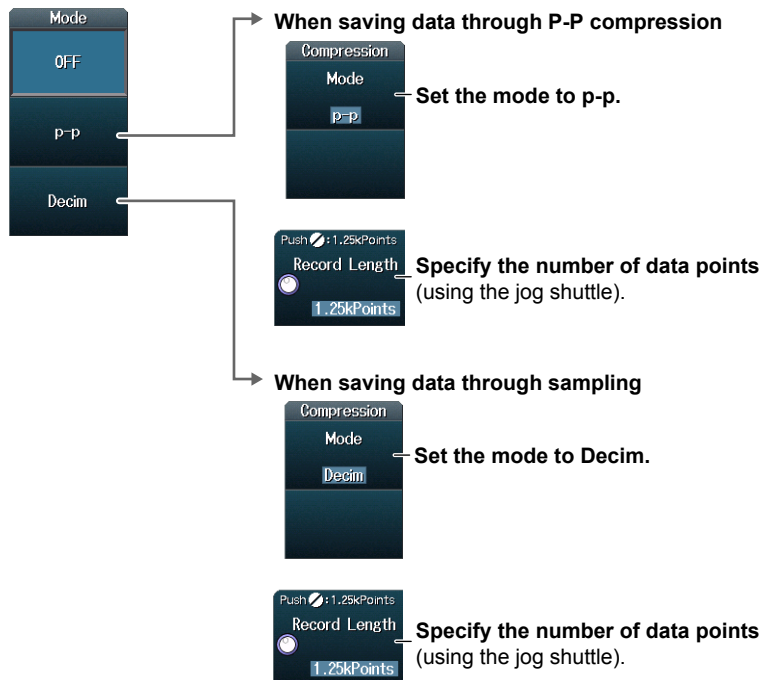

You can save waveform data by compressing or sampling it. If you want to save waveform data whose record length exceeds 1.25 Mpoints to a file in ASCII format, the data must be compressed.

OFF: All the data is saved without compression or sampling. Binary files can be loaded into the DLM4000. Data in ASCII format or Data with time information in ASCII format cannot be loaded.

p-p: The waveform data is P-P compressed so that the number of data points is equal to the specified number and then saved. Data that has been compressed and saved cannot be loaded into the DLM4000 regardless of the format (data in ASCII format, data with time information in ASCII format, or data in binary format).

Decim: The data is sampled (decimated) so that the number of data points is equal to the specified number and then saved. Data that has been sampled and saved cannot be loaded into the DLM4000 regardless of the format (data in ASCII format, data with time information in ASCII format, or data in binary format).

17.3 Saving Setup Data


This section explains the following settings (which are used when saving setup data).
You can save setup data to a file or to three different internal memory locations.

- Save destination
- File name
- Internal memory details
- Saving setup data

► “Saving Setup Data (Setup)” in the Features Guide

FILE Setup (Save) Menu

Press **FILE** and then the **Setup(Save)** soft key to display the following menu.

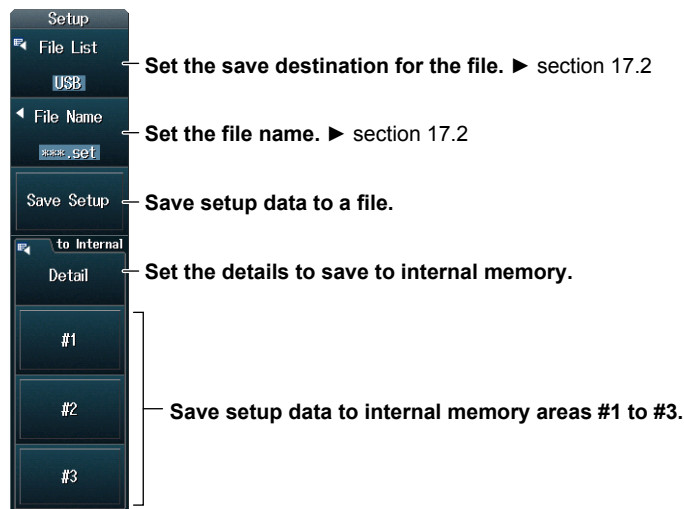

Saving Setup Data (Save Setup)


Save setup data to a file with a .set extension.

Saving Setup Data (to Internal; from #1 to #3)

Save setup data to internal memory areas #1 to #3.

Setting Internal Memory Details (to Internal; Detail)

Press the **Detail (to Internal)** soft key to display the following screen.

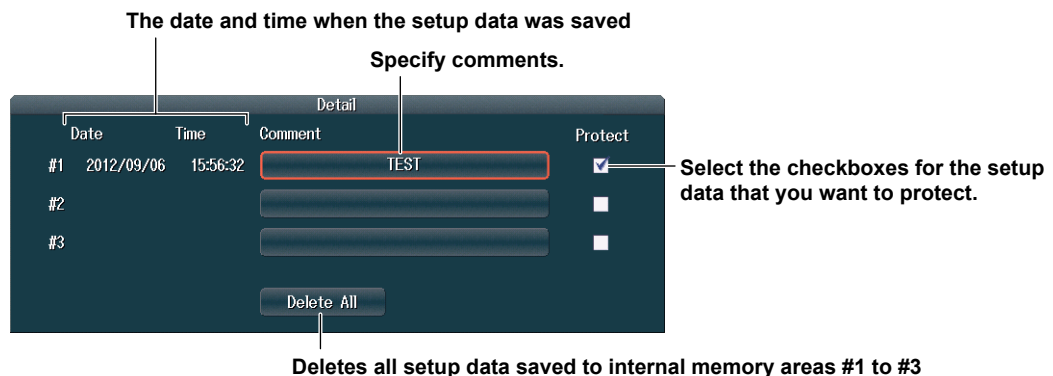

17.4 Saving Other Types of Data


This section explains the following settings (which are used when saving screen captures, waveform zone data, snapshot waveform data, automated measurement values of waveform parameters, serial bus analysis results, FFT results, histogram data, and the list of timestamps).

- Save destination
- File name
- Data type to save
- Data format
- Color data
- Waveform zone number
- Serial bus
- FFT
- Histogram
- List of timestamps
- Saving data

► “Saving Other Types of Data (Others)” in the Features Guide

FILE Others (Save) Menu

Press **FILE** and then the **Others (Save)** soft key to display the following menu.

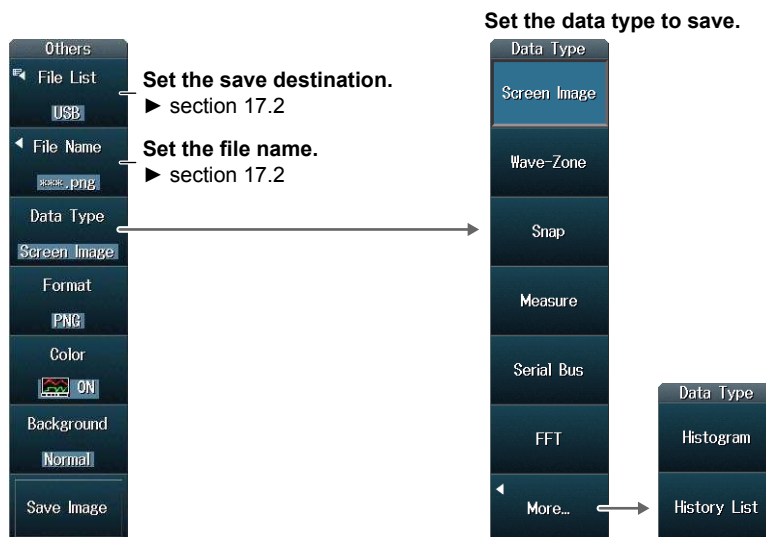

Setting the Data Type to Save (Data Type)

Screen Image: Save the display to a PNG, BMP, or JPEG file.

Wave-Zone: Save the waveform zone to a file with a .zwf extension.

Snap: Save the waveform data captured in a snapshot to a file with .snp extension.

Measure: Save the results of automatic waveform parameter measurement to a file in CSV format.

Serial Bus: Save the results of the serial bus analysis specified by Serial Bus1, Serial Bus2, Serial Bus3, or Serial Bus4 to a file in CSV format.

FFT: Save the computed result specified by FFT1 or FFT2 to a file in CSV format. Up to 250 Kpoints of data can be saved.

- When Freq Info. is set to ON, all data is saved with frequency information.

- When Freq Info. is set to OFF, all data is saved without frequency information.


Histogram: Save the waveform or waveform parameter histogram specified by Histogram 1 or Histogram 2 to a file in CSV format.

History List: Save the list of timestamps to a file in CSV format.


Note

The serial bus analysis results are saved according to the settings made on the HISTORY menu. If the history mode is set to One, the analysis results of the specified record number's waveform are saved. If the history mode is set to All or Accumulate, the analysis results of all the displayed waveforms are saved.


When Data Type Is Screen Image

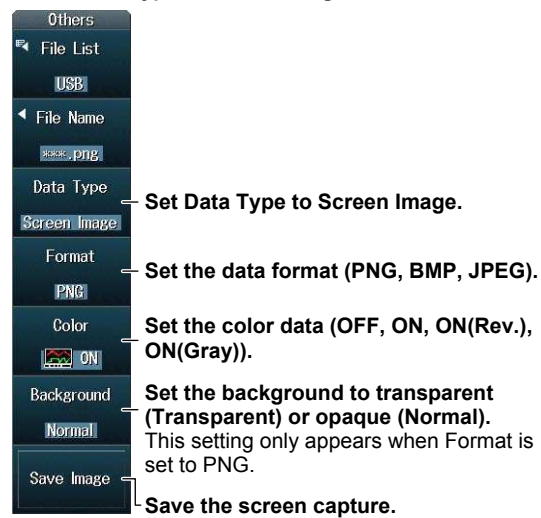


When Data Type Is Wave-Zone

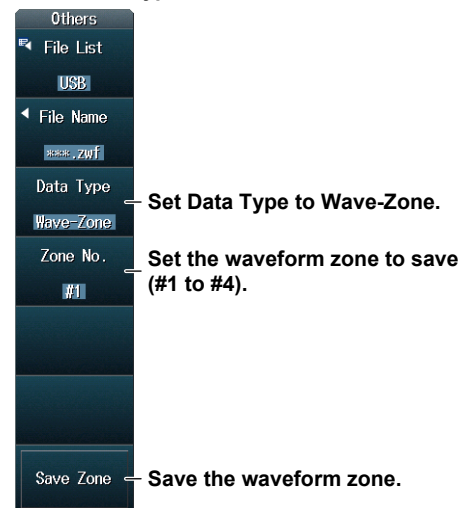


When Data Type Is Snap

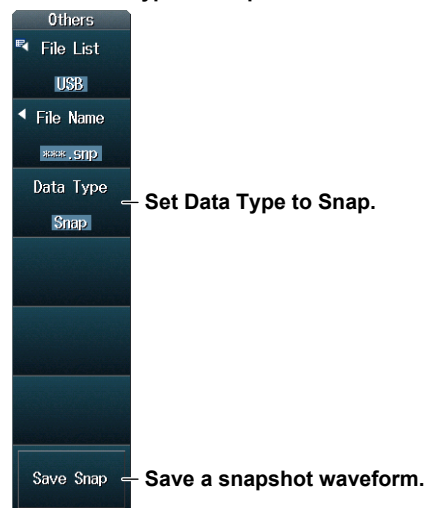


When Data Type Is Measure

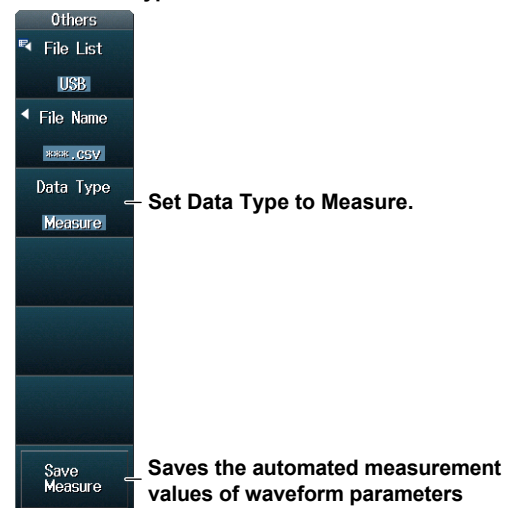

When Data Type Is Serial Bus

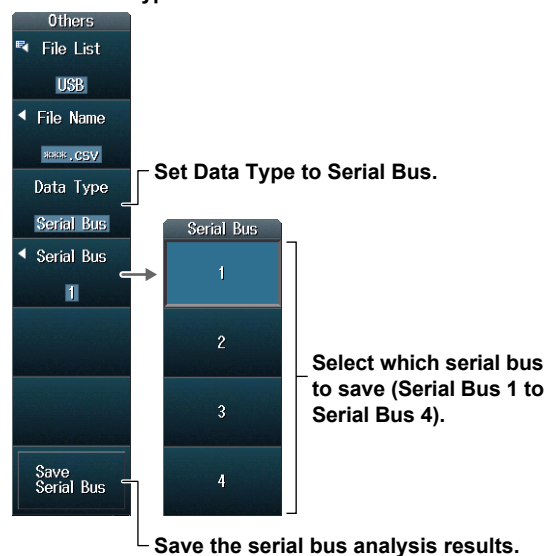


When Data Type Is FFT

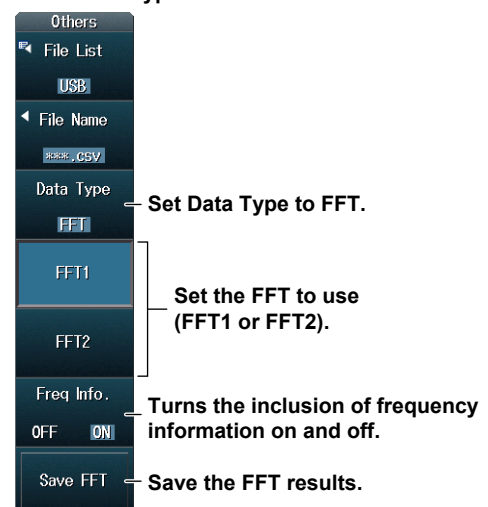


17.4 Saving Other Types of Data

When Data Type Is Histogram

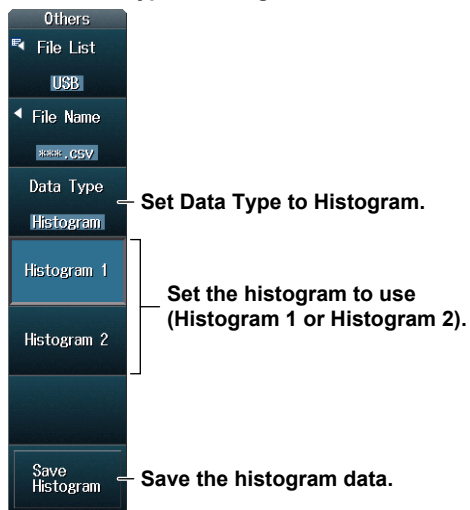

When Data Type is History List

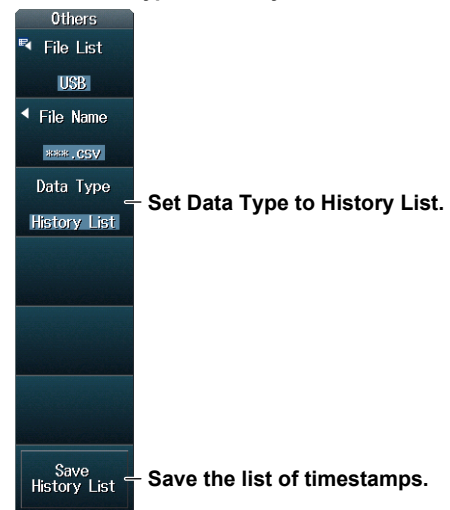

17.5 Loading Waveform Data


This section explains the following settings (which are used when loading waveform data).

- Displaying file information
- Loading waveform data into reference waveforms
- Loading waveform data into channels

► “Loading Data (Load)” in the Features Guide

FILE Waveform (Load) Menu

Press **FILE** and then the **Waveform(Load)** soft key to display the following menu.

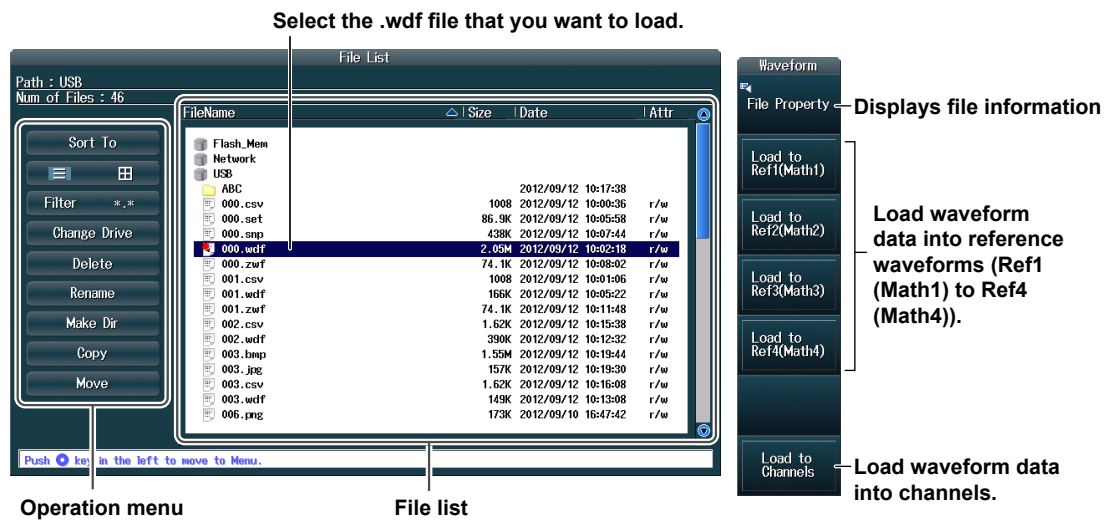

Selecting Files

Select the file to load from the file list. ► section 17.8

Loading Waveform Data into Reference Waveforms (Load to Ref1(Math1) to Load to Ref4(Math4))

You can specify waveform data files that have .wdf extensions and load them as reference waveforms. Reference waveforms are treated as part of the computation feature. You can display reference waveforms by specifying Ref in a mode from Math/Ref1 to Math/Ref4.

Loading Waveform Data into Channels (Load to Channels)

You can specify waveform data files that have .wdf extensions and load them with setup data. Loaded data is cleared when you start measurement.

Note

To load a file saved from the waveform data of multiple channels as a reference waveform, use Load to Channels to load the waveform into channels, and then load the waveform as a computation reference waveform (see section 6.7).

17.6 Loading Setup Data

This section explains the following settings (which are used when loading setup data).

Both the method for loading setup data that has been saved to a file and the method for loading setup data that has been saved in the internal memory are explained.

- Displaying file information
- Internal memory details
- Loading setup data

► “Loading Data (Load)” in the Features Guide

FILE Setup (Load) Menu

Press **FILE** and then the **Setup(Load)** soft key to display the following menu.

Select the .set file that you want to load.

The screenshot shows the FILE Setup (Load) menu. On the left is the 'Operation menu' with options: Sort To, Filter, Change Drive, Delete, Rename, Make Dir, Copy, and Move. The main area is the 'File list' showing a table of files. The file '000.set' is selected. On the right is the 'Setup' menu with options: File Property, Load Setup File, from Internal, Detail, #1, #2, and #3. Arrows point from the text labels to the corresponding menu items.

FileName	Size	Date	Attr
Flash_Mem			
Network			
USB			
000.csv	1008	2012/09/12 10:00:36	r/w
000.set	86.9K	2012/09/12 10:05:58	r/w
000.snp	438K	2012/09/12 10:07:44	r/w
000.wdf	2.05M	2012/09/12 10:02:18	r/w
000.zwf	74.1K	2012/09/12 10:08:02	r/w
001.csv	1008	2012/09/12 10:01:06	r/w
001.wdf	166K	2012/09/12 10:05:22	r/w
001.zwf	74.1K	2012/09/12 10:11:48	r/w
002.csv	1.62K	2012/09/12 10:15:38	r/w
002.wdf	390K	2012/09/12 10:12:32	r/w
003.jpg	1.55M	2012/09/12 10:19:44	r/w
003.csv	1.62K	2012/09/12 10:16:08	r/w
003.wdf	157K	2012/09/12 10:19:30	r/w
004.png	149K	2012/09/12 10:13:08	r/w
005.png	178K	2012/09/12 13:03:02	r/w
005.png	152K	2012/09/12 13:03:14	r/w

Operation menu

File list

Setup

File Property

Load Setup File

from Internal

Detail

#1

#2

#3

Displays file information

Load the setup data file.

Configure the details to load from internal memory. ► section 17.3

Load setup data from internal memory areas #1 to #3.

Selecting Files

Select the file to load from the file list. ► section 17.8

Loading Setup Data (Load Setup File)

Select a setup data file that has a .set extension and load it.

Loading Setup Data (from Internal; from #1 to #3)

Load setup data from internal memory areas #1 to #3.

17.7 Loading Other Types of Data


This section explains the following settings (which are used when loading waveform zones, polygonal zones, snapshot waveforms, or serial bus waveform symbol data).

- Displaying file information
- Data type to load
- Loading data

► “Loading Data (Load)” in the Features Guide

FILE Others (Load) Menu

Press **FILE** and then the **Others (Load)** soft key to display the following menu.

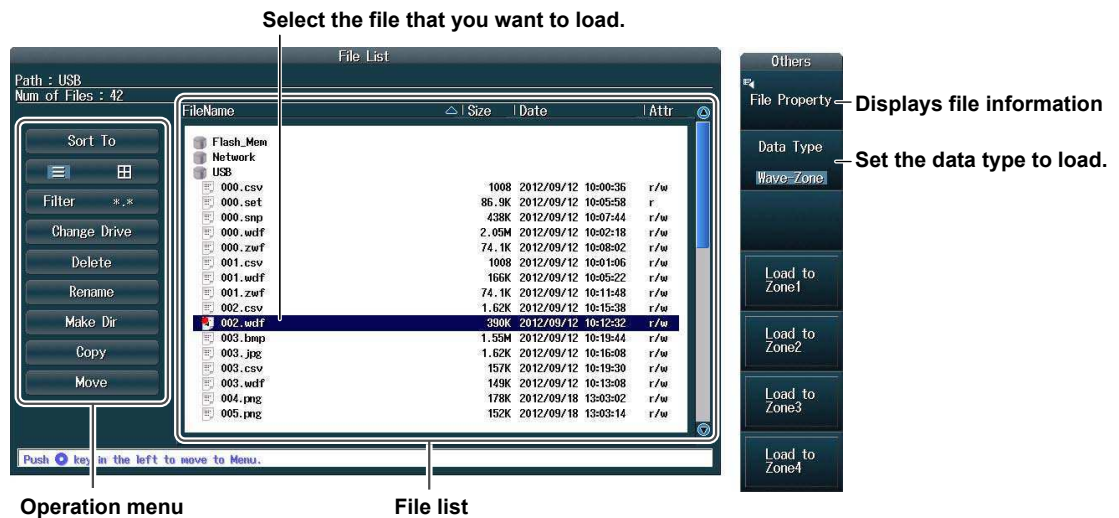

Selecting Files

Select the file to load from the file list. ► section 17.8

Setting the Data Type to Load (Data Type)


Wave-Zone: Load waveform zone files that have .zwf extensions that you created on the DLM4000 into internal memory areas Zone1 to Zone4.

Polygon-Zone: Load polygonal zone files that have .msk extensions that you created with the Mask Editor software into internal memory areas Zone1 to Zone4.


Snap: Load snapshot waveform files that have .snp extensions that you have saved.

Symbol: Load physical value/symbol definition files that have .sbl extensions that you have edited using the Symbol Editor tool.


When Data Type Is Wave-Zone

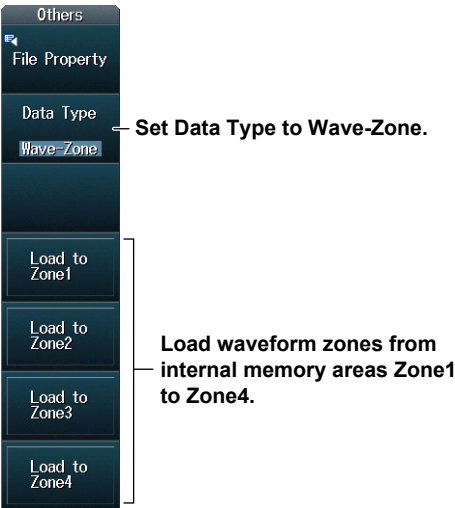


When Data Type Is Polygon-Zone

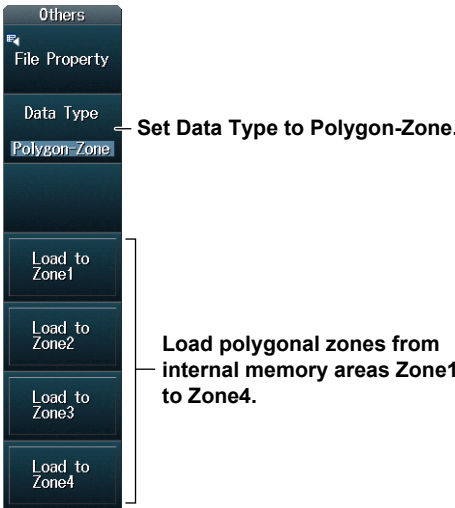

When Data Type Is Snap

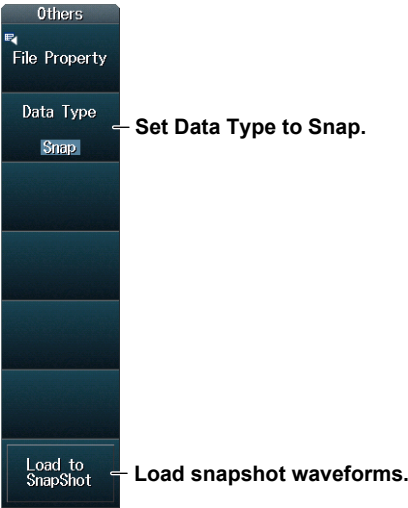

When Data Type Is Symbol

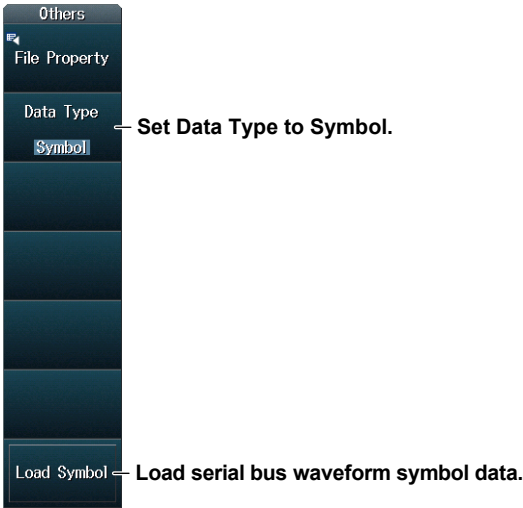

17.8 Performing File Operations

This section explains the following settings (which are used when performing various file operations from the file list or the file utility menu).

File list

- Sorting the file list
- Display format
- Selecting the type of file to list
- Changing storage media
- Deleting files and folders
- Renaming files and folders
- Creating folders (directories)


- Copying files and folders
- Moving files and folders
- Displaying file information

FILE Utility menu

- File protection
- Selecting files (All Set/All Reset and Set/Reset)

► “File Operations (Utility)” in the Features Guide

File List (File List)

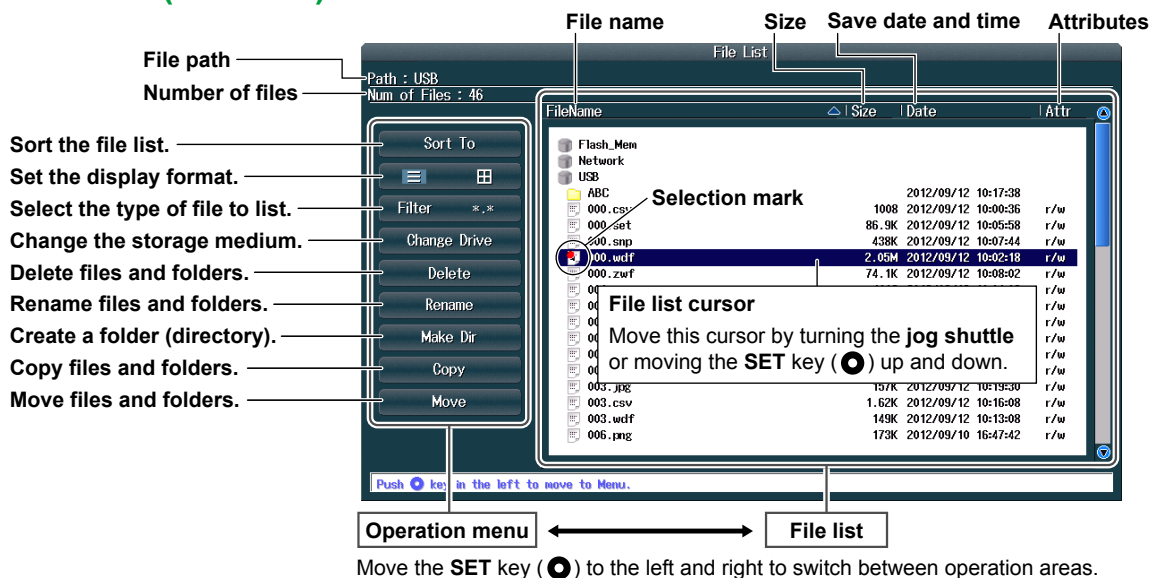

Selecting What to Operate

When Operating a File or Folder

1. Move the cursor to the file or folder that you want to select.
A red selection mark (●) is displayed next to the file or folder.

When Operating Multiple Files and Folders

1. Move the cursor to a file or folder that you want to select.
2. Press SET (●) or the Set/Reset soft key.
A blue selection mark (●) is displayed next to the file or folder.
 - To select multiple files, use SET or the Set/Reset soft key.
 - To select multiple folders, use the Set/Reset soft key.

When the cursor is highlighting a folder, pressing SET will open or close the folder.

3. Repeat steps 1 and 2 to select all the files and folders you want.

* To select all files and folders in the list, press the All Set soft key.

Selecting a Setup Menu Item

1. Turn the jog shuttle or move the SET (●) key up and down to move the cursor to the menu item you want to use.
2. Press SET (●).
The screen for the selected item appears.

Sorting the List (Sort To)

Select **Sort To** on the operation menu to display the following screen.

Sort by file name in ascending order.

Sort by file name in descending order.

Sort by file size in ascending order.

Sort by file size in descending order.

Sort by date in ascending order.

Sort by date in descending order.

File List

Path : USB
Num of Files : 54

FileName	Size	Date	Attr
Flash_Mem			
Network			
USB			
ABC		2012/09/12 10:17:38	
000.csv	1008	2012/09/12 10:00:36	r/w
000.set	86.9K	2012/09/12 10:05:58	r/w
000.snp	438K	2012/09/12 10:07:44	r/w
000.wdf	2.05M	2012/09/12 10:02:18	r/w
000.zwf	74.1K	2012/09/12 10:08:02	r/w
001.csv	1008	2012/09/12 10:01:06	r/w
001.wdf	166K	2012/09/12 10:05:22	r/w
001.zwf	74.1K	2012/09/12 10:11:48	r/w
002.csv	1.62K	2012/09/12 10:15:38	r/w
002.wdf	390K	2012/09/12 10:12:32	r/w
003.bmp	1.55M	2012/09/12 10:19:44	r/w
003.jpg	157K	2012/09/12 10:19:30	r/w
003.csv	1.62K	2012/09/12 10:16:08	r/w
003.wdf	149K	2012/09/12 10:13:08	r/w
006.png	173K	2012/09/10 16:47:42	r/w

Push key in the right to move to List.

Display Format

Select a display format on the operation menu to display one of the following screens.

Press **SET** to switch between display formats.

List Display (≡)

Display format

File List

Path : USB
Num of Files : 55

FileName	Size	Date	Attr
Flash_Mem			
Network			
USB			
ABC		2012/09/12 10:17:38	
000.csv	1008	2012/09/12 10:00:36	r/w
000.set	86.9K	2012/09/12 10:05:58	r/w
000.snp	438K	2012/09/12 10:07:44	r/w
000.wdf	2.05M	2012/09/12 10:02:18	r/w
000.zwf	74.1K	2012/09/12 10:08:02	r/w
001.csv	1008	2012/09/12 10:01:06	r/w
001.wdf	166K	2012/09/12 10:05:22	r/w
001.zwf	74.1K	2012/09/12 10:11:48	r/w
002.csv	1.62K	2012/09/12 10:15:38	r/w
002.wdf	390K	2012/09/12 10:12:32	r/w
003.bmp	1.55M	2012/09/12 10:19:44	r/w
003.jpg	157K	2012/09/12 10:19:30	r/w
003.csv	1.62K	2012/09/12 10:16:08	r/w
003.wdf	149K	2012/09/12 10:13:08	r/w
006.png	173K	2012/09/10 16:47:42	r/w

Push key in the right to move to List.

Thumbnail Display (田)

Display format

File List

Path : USB
Num of Files : 56

000.csv

000.set

000.snp


000.wdf

000.zwf

Push key in the right to move to List.

Selecting the Type of File to List (File Filter)

Select **Filter** on the operation menu to display the following screen.

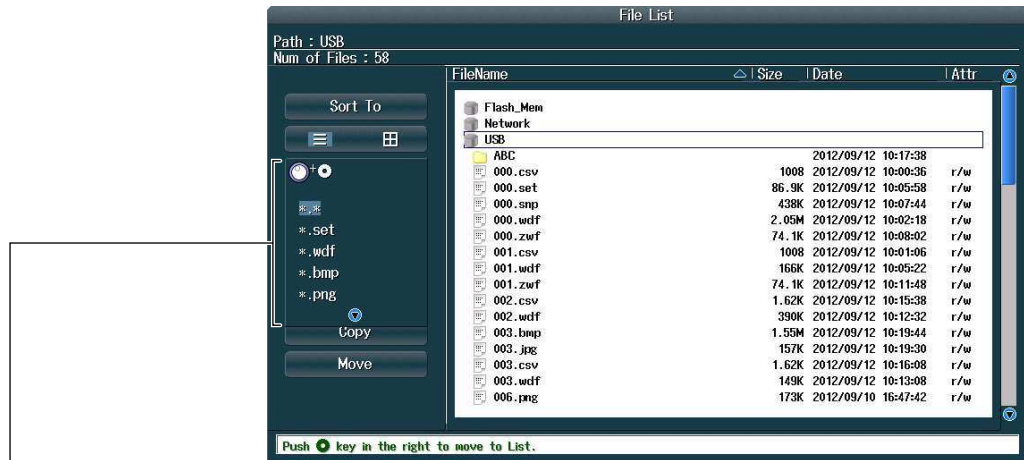


Select the type of file to list.

- *.*: All files
- *.set: Setup files
- *.wdf: Waveform files
- *.bmp: Image files (BMP)
- *.png: Image files (PNG)
- *.jpg: Image files (JPEG)
- *.zwf: Waveform zone files
- *.msk: Polygonal zone files
- *.snp: Snapshot waveform files
- *.sbl: Symbol definition files
- *.csv: CSV files

Changing the Storage Medium (Change Drive)

Select **Change Drive** on the operation menu to display the following screen.

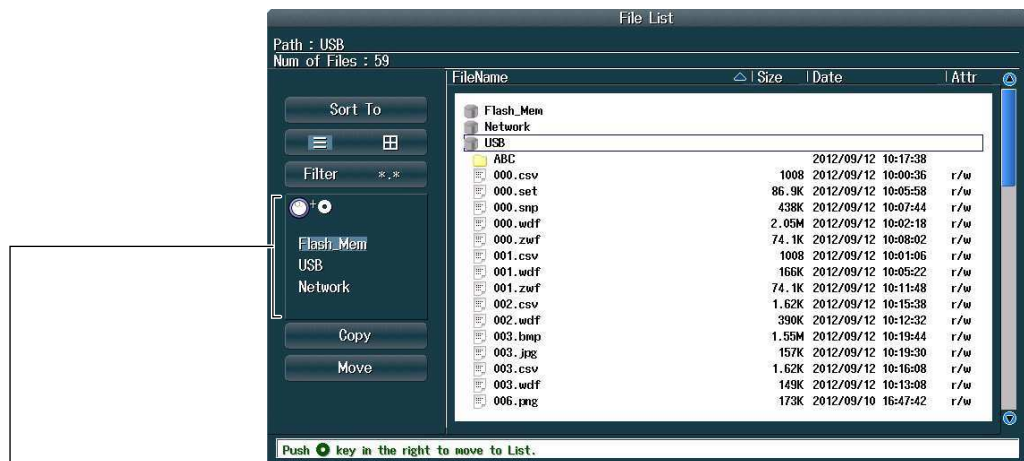

Select a storage medium.


- Flash_Mem: Internal memory
- USB: The first USB storage medium that the DLM4000 detected
- USB1: The second USB storage medium that the DLM4000 detected
- Network: Network drive

Note

You can also change the storage medium by highlighting the storage medium (drive) you want to change to in the file list and pressing SET.

Deleting Files and Folders (Delete)

1. Select the file or folder that you want to delete from the file list.
2. Select **Delete** on the operation menu to display the following screen.

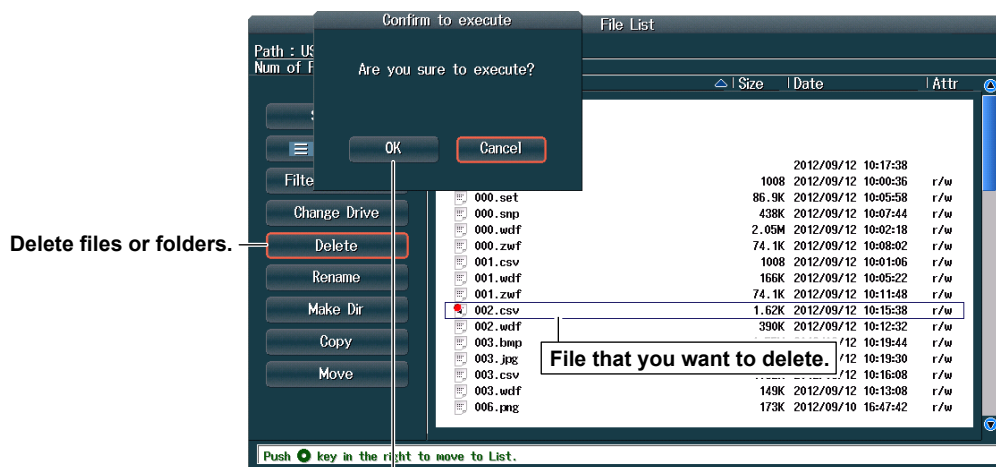


Confirms the deletion of the selected files and folders

Note

You can delete multiple files at the same time by selecting them with the jog shuttle and the SET key.

Renaming Files and Folders (Rename)


1. Select the file or folder that you want to rename from the file list.
2. Select **Rename** on the operation menu to display the following screen.

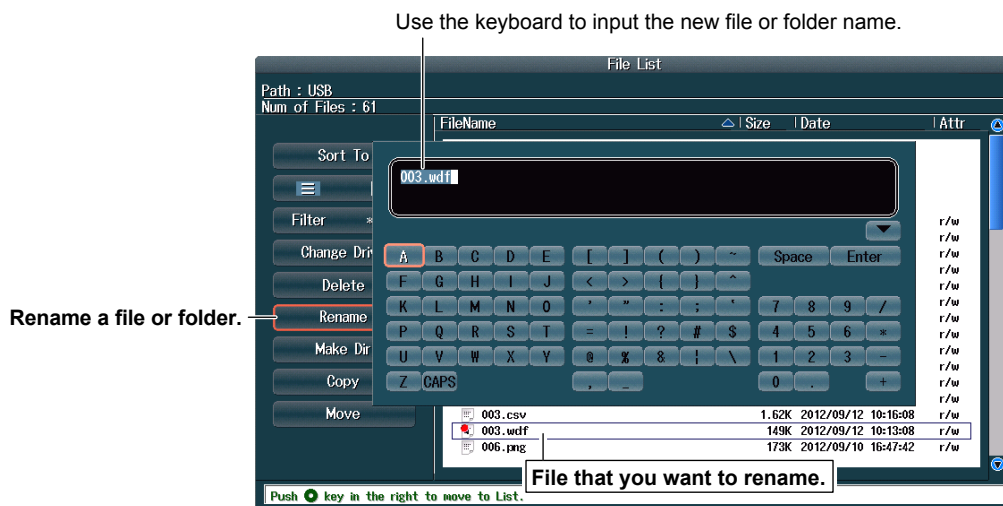

Press **Enter** on the keyboard or the **Enter** soft key to confirm the entered name.


Making Folders (Make Dir)

1. Select the drive or folder that you want to make the new folder in from the file list.
2. Select **Make Dir** on the operation menu to display the following screen.

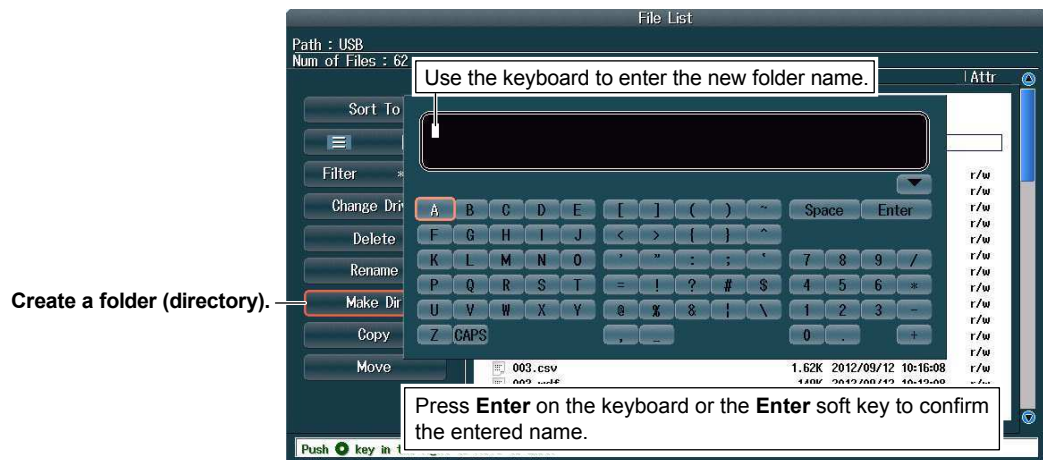


Copying Files and Folders (Copy)

1. Select the file that you want to copy from the file list.
2. Select **Copy** on the operation menu to display the following screen.

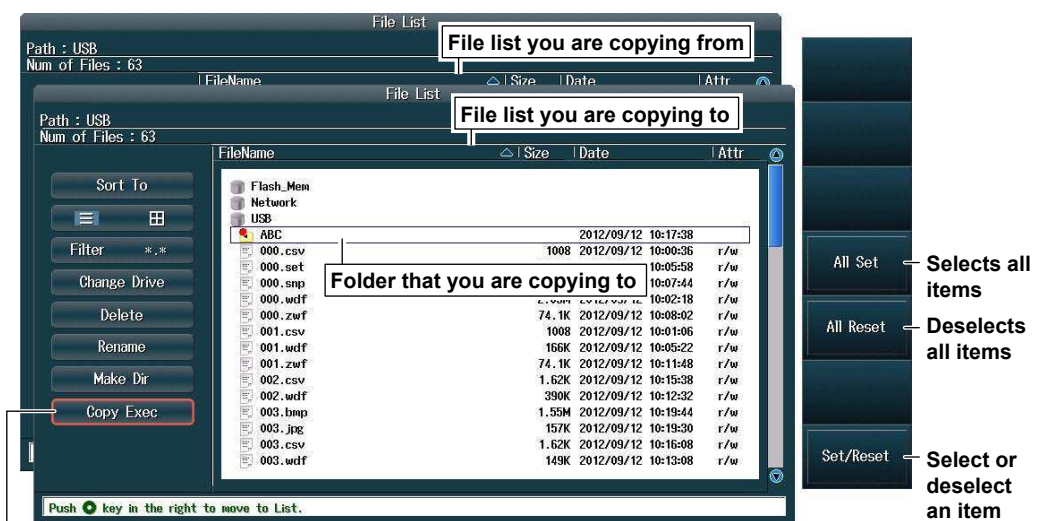

Copies the selected files and folders

3. Select the drive or folder on the file list that you are copying to.
4. Select **Copy Exec** on the operation menu to display the following screen.

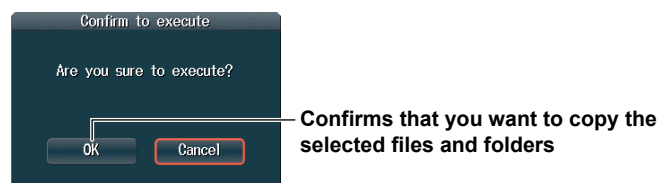


Note

- You can copy multiple files at the same time by selecting them with the Set/Reset soft key or the jog shuttle and the SET key.
- You can perform file operations on the file list that you are copying to as well.


Moving Files and Folders (Move)

1. Select the file that you want to move from the file list.
2. Select **Move** on the operation menu to display the following screen.

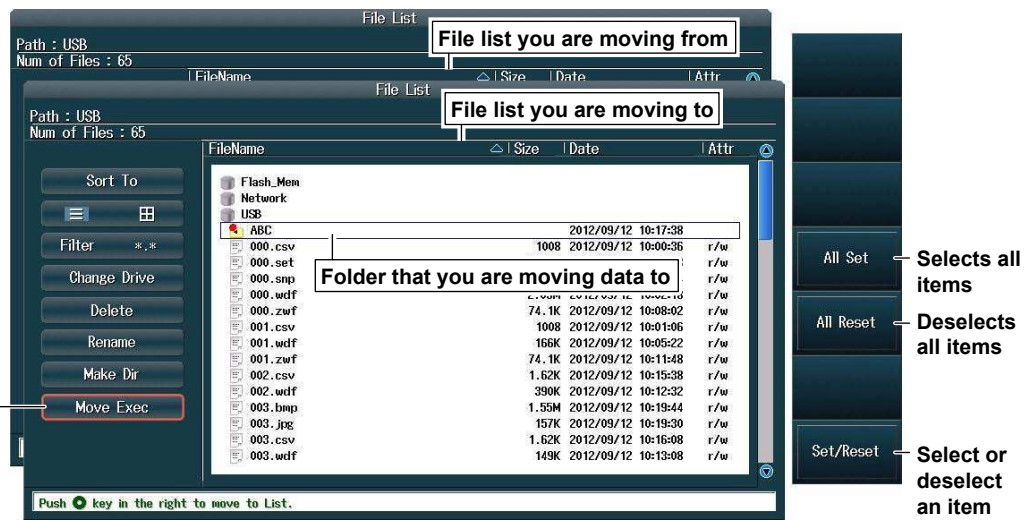

Moves the selected files and folders

3. Select the drive and folder on the file list that you are moving to.
4. Select **Move Exec** on the operation menu to display the following screen.


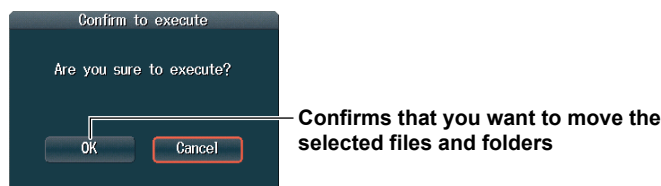


Note

- You can move multiple files at the same time by selecting them with the Set/Reset soft key or the jog shuttle and the SET key.
- You can perform file operations on the file list that you are moving data to as well.

FILE Utility Menu

Press **FILE** and then the **Utility** soft key to display the following menu.

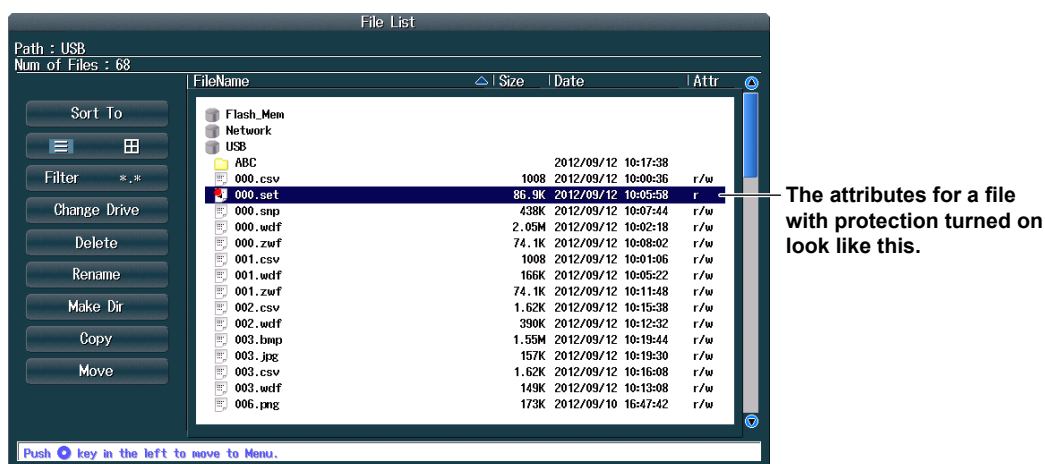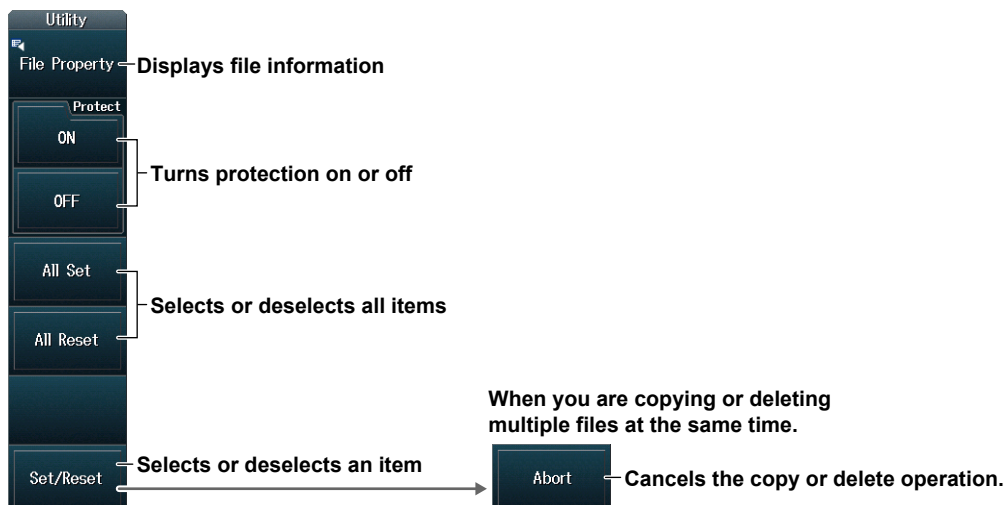

Turning Protection On or Off (Protect ON/OFF)

Turn protection on or off for the selected file. The change is reflected in the file attributes, displayed under the Attr column in the file list.

Protection	File Attribute	Description
ON	r	File protection is on for the selected file. The file has read-only access, it is write-protected and cannot be deleted.
OFF	r/w	File protection is off for the selected file. The file has read and write access.

All Set/All Reset

All Set: Select all displayed files and folders. Blue selection marks (🔵/🟡) are displayed next to the selected files and folders.

All Reset: Unselect all displayed files and folders.

Set/Reset

Select or deselect displayed files and folders that are highlighted. This is the same function as when you press the SET key. Blue selection marks (🔵/🟡) are displayed next to the selected files and folders.


18.1 Connecting the DLM4000 to a Network

This section explains how to connect the DLM4000 to a network.

Ethernet Interface Specifications

There is a 1000BASE-T port located on the rear panel of the DLM4000.

Item	Specifications
Ports	1
Electrical and mechanical specifications	IEEE802.3
Transmission system	Ethernet (1000BASE-T, 100BASE-TX, 10BASE-T)
Communication protocol	TCP/IP
Supported services	Server: FTP, HTTP (Web), and VXI-11 Client: FTP (Net Drive), SMTP (Mail), SNMP, LPR (Net Print), DHCP, and DNS
Connector type	RJ-45

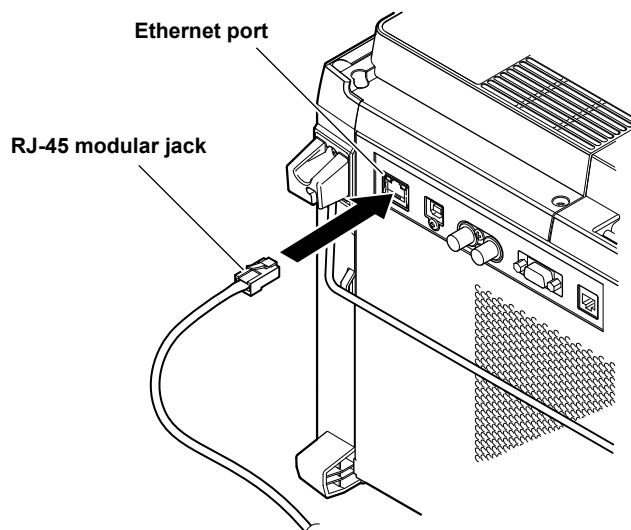

Items Required to Connect the DLM4000 to a Network Cable


Use one of the following types of network cable that conforms to the transfer speed of your network.

- A UTP (Unshielded Twisted-Pair) cable
- An STP (Shielded Twisted-Pair) cable

Connection Procedure


To Connect to a PC over a Network

1. Turn off the DLM4000.
2. Connect one end of a UTP (or STP) cable to the ETHERNET 1000BASE-T port on the rear panel.
3. Connect the other end of the UTP (or STP) cable to a hub or router.
4. Turn on the DLM4000.

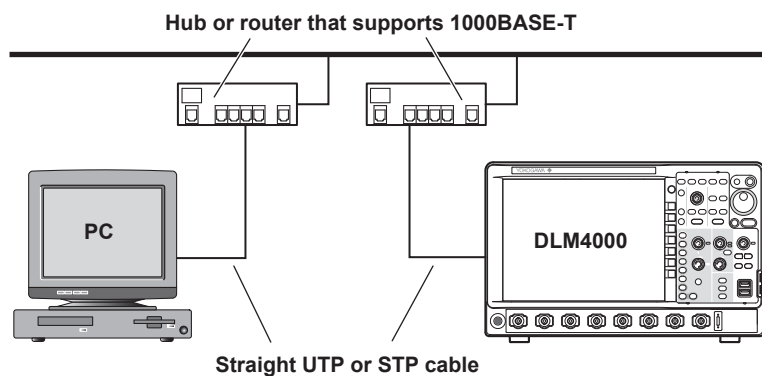

To Connect to a PC through a Hub or Router

1. Turn off the DLM4000 and the PC.
2. Connect one end of a UTP (or STP) cable to the ETHERNET 1000BASE-T port on the rear panel.
3. Connect the other end of the UTP (or STP) cable to a hub or router.
4. Connect the PC to the hub or router in the same way.
5. Turn on the DLM4000.

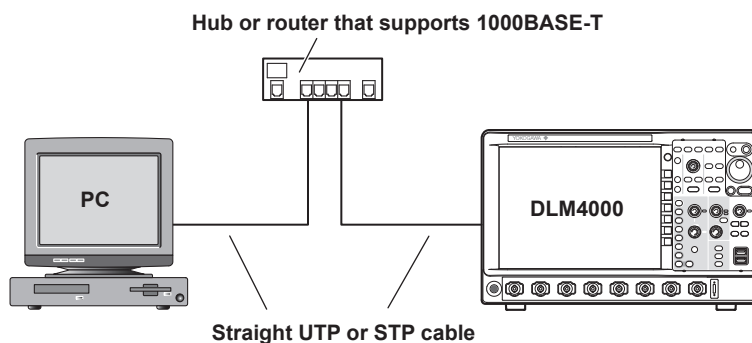

Note

- Use a hub or router that conforms to the transfer speed of your network.
- When you connect a PC to the DLM4000 through a hub or router, the PC must be equipped with an auto switching 1000BASE-T/100BASE-TX/10BASE-T network card.
- Do not connect the DLM4000 to a PC directly. Direct communication without a hub or router is not guaranteed to work.

18.2 Configuring TCP/IP Settings


This section explains the following TCP/IP settings (which are used when connecting to a network).

- DHCP (IP address, subnet mask, and default gateway)
- DNS (domain name, DNS server IP address, and domain suffix)

► [“TCP/IP \(TCP/IP\)” in the Features Guide](#)


UTILITY Network Menu

Press **UTILITY** and then press the **Network** soft key to display the following menu.

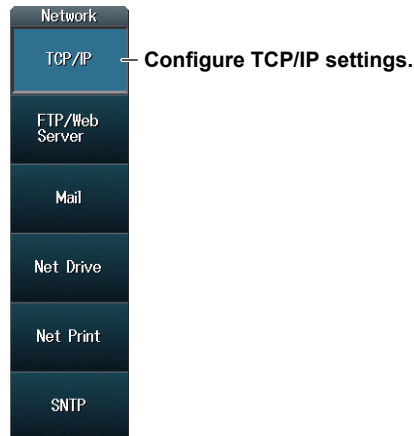

TCP/IP Settings (TCP/IP)

Press the **TCP/IP** soft key to display the following screen.

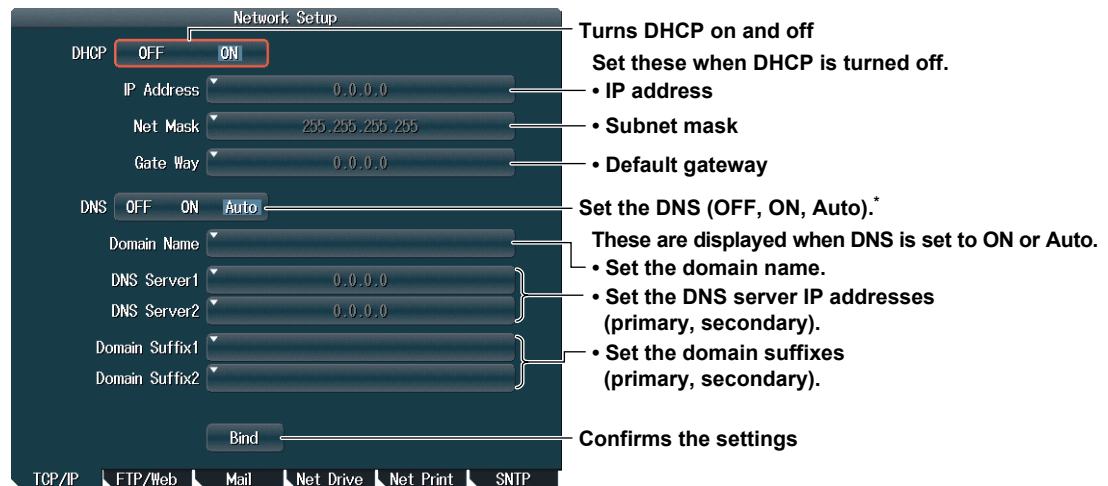

* Auto is displayed when DHCP is turned on.

DNS Settings (DNS)

OFF: Disable the DNS.

ON: Enable the DNS. Set the domain name, the DNS server IP address, and the domain suffix.

Auto: Enable the DNS. After you set the domain suffix, the domain name and the DNS server IP address are set automatically. This option can only be selected when DHCP is on.

18.3 Accessing the DLM4000 from a PC (FTP Server)


This section explains the following settings (which are used when accessing the DLM4000 from a PC on a network):

- User name
- Password
- Timeout
- Starting an FTP client

► “FTP Server (FTP/Web Server)” in the Features Guide


UTILITY Network Menu

Press **UTILITY** and then press the **Network** soft key to display the following menu.

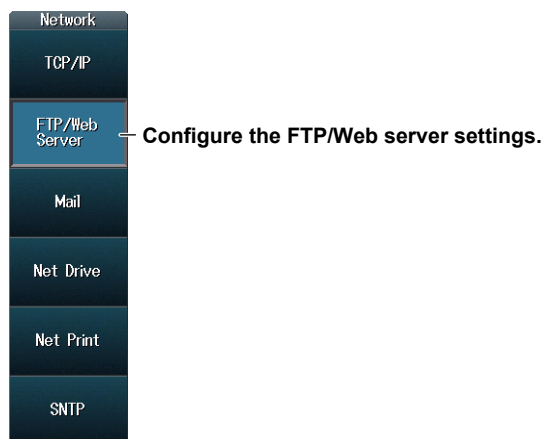

Configuring the FTP Server (FTP/Web Server)

Press the **FTP/Web Server** soft key to display the following screen.

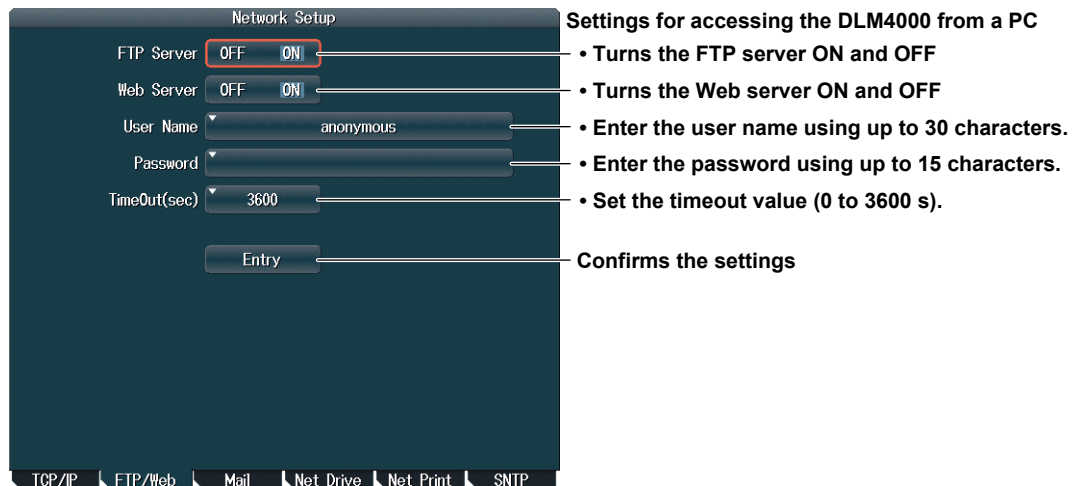

Starting an FTP Client

Start an FTP client on a PC.

Enter the user name and password that you set on the DLM4000's network setup screen, which is shown above, and connect to the DLM4000.

Note

If you set the user name to “anonymous,” you can connect to the DLM4000 without entering a password.

18.4 Monitoring the DLM4000 Display from a PC (Web Server)


This section explains the following settings (which are used when connecting to the DLM4000 from a PC over a network to show the DLM4000's display on the PC and to start and stop waveform acquisition from the PC).

- User name
- Password
- Timeout
- Connecting to the DLM4000 from a PC

► “Web Server (FTP/Web Server)” in the Features Guide


UTILITY Network Menu

Press **UTILITY** and then press the **Network** soft key to display the following menu.

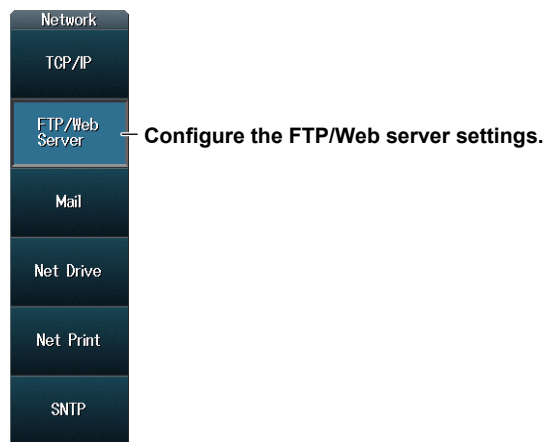


Configuring the Web Server (FTP/Web Server)

Press the **FTP/Web Server** soft key to display the following screen.

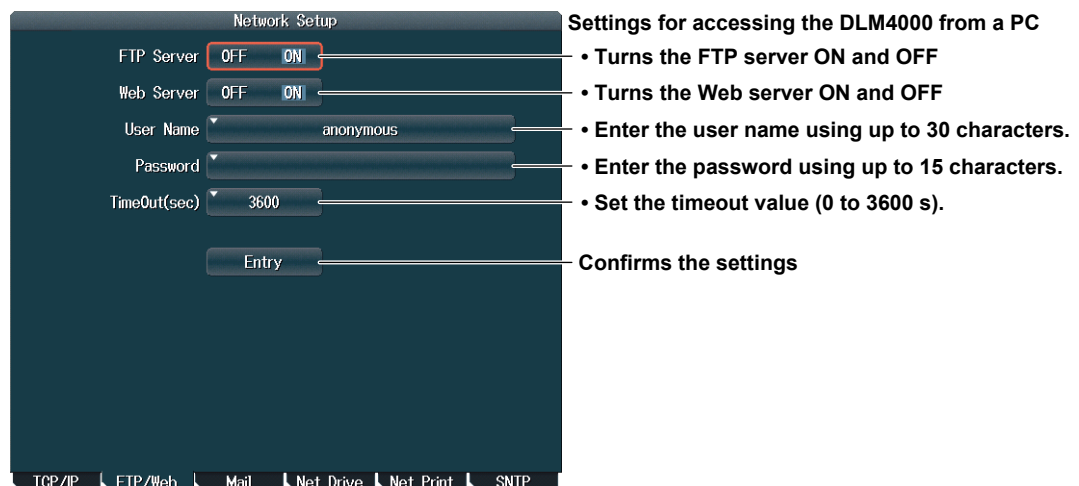

Connecting to the DLM4000 from a PC

1. Open a Web browser on a PC that is connected to the network.
2. Enter the following address.
`http://xxx.xxx.xxx.xxx/`
(Type the DLM4000's IP address for xxx.xxx.xxx.xxx.)
3. Enter the user name and password that you set on the DLM4000's network setup screen, which is shown on the previous page, and connect to the DLM4000.
The following screen appears.

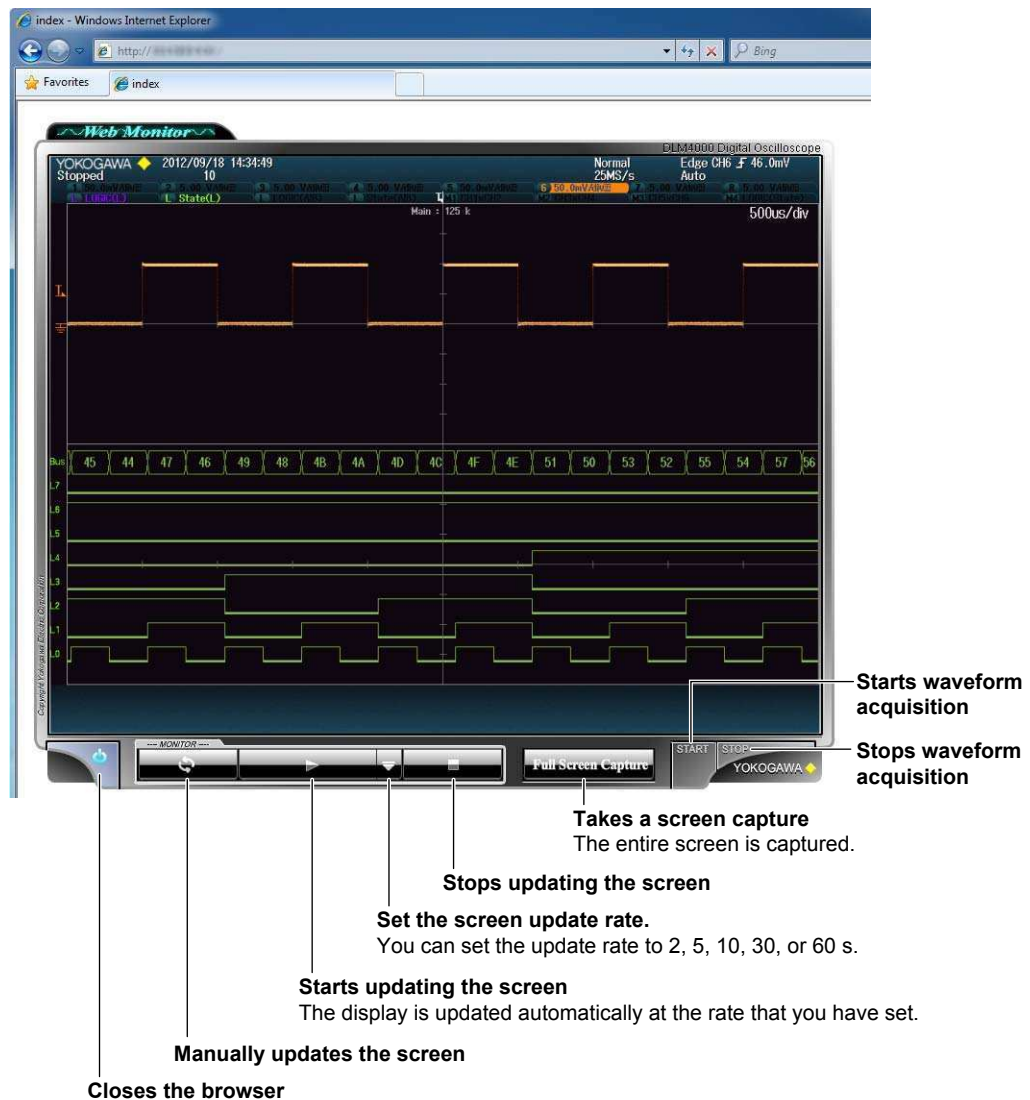

Note

- Disable the popup blocker feature on your Web browser when you want to capture the screen.
- If you set the user name to "anonymous," you can connect to the DLM4000 without entering a password.

18.5 Configuring Mail Transmission (SMTP Client Function)


This section explains the following settings (which are used when transmitting mail to a specified mail address on a network).

- Mail server
- Mail address
- Comments
- Attaching image files
- Timeout
- User authentication
- Sending a test mail

► “Mail (Mail)” in the Features Guide


UTILITY Network Menu

Press **UTILITY** and then press the **Network** soft key to display the following menu.

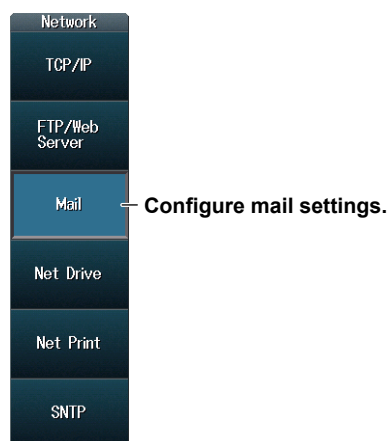

Configuring Mail (Mail)

Press the **Mail** soft key to display the following screen.

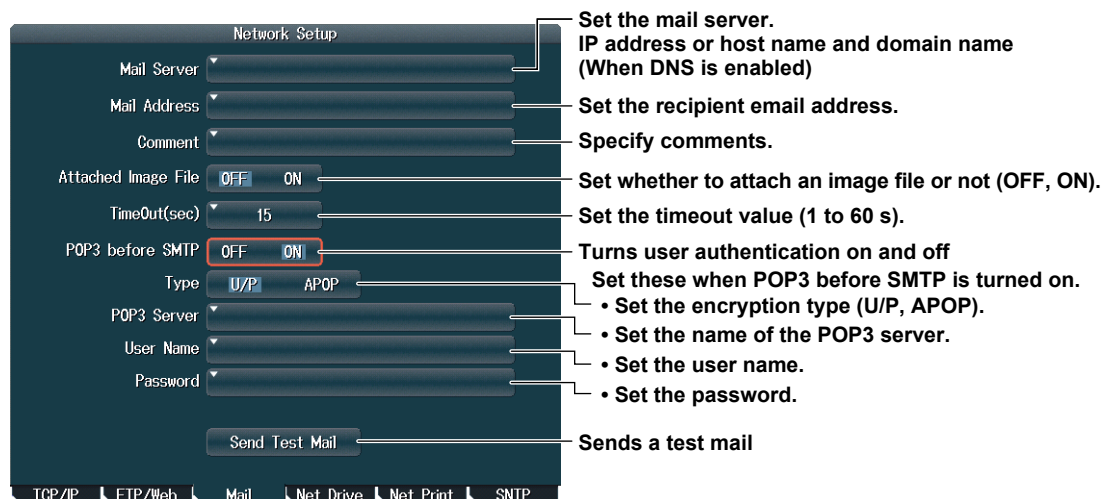

18.6 Connecting to a Network Drive


This section explains the following settings (which are used when accessing a network drive through an Ethernet connection to load or save various DLM4000 data).

- FTP server (file server)
- User name
- Password
- FTP passive mode
- Timeout
- Connecting to and disconnecting from network drives

► [“Network Drive \(Net Drive\)” in the Features Guide](#)


UTILITY Network Menu

Press **UTILITY** and then press the **Network** soft key to display the following menu.

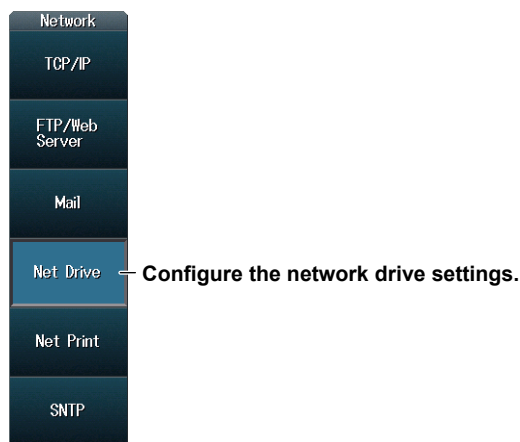

Configuring a Network Drive and Connecting to It (Net Drive)

Press the **Net Drive** soft key to display the following screen.

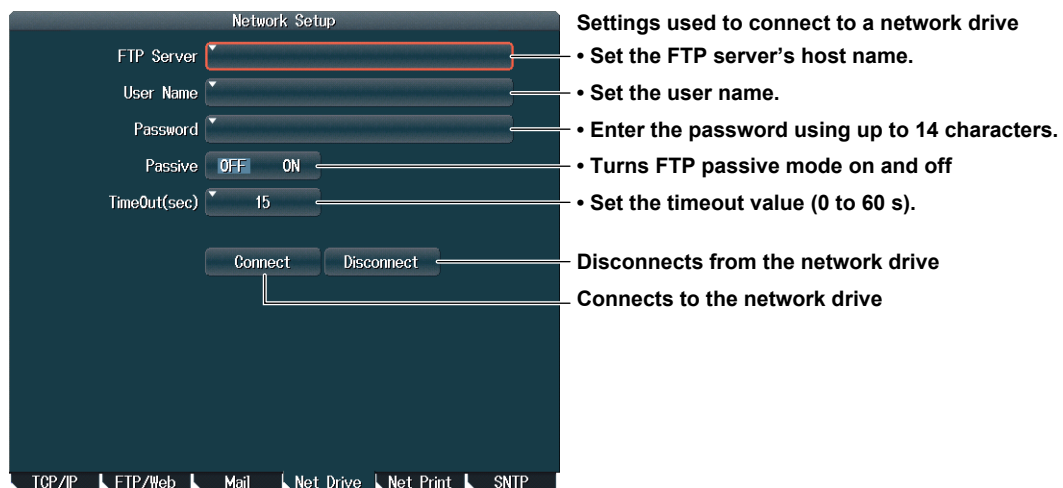

18.7 Configuring a Network Printer

This section explains the following settings (which are used when printing screen captures to a network printer).

- LPR server
- LPR name
- Timeout

► “Network Printer (Net Print)” in the Features Guide


UTILITY Network Menu

Press **UTILITY** and then press the **Network** soft key to display the following menu.



Network Printer Settings (Net Print)

Press the **Net Print** soft key to display the following screen.

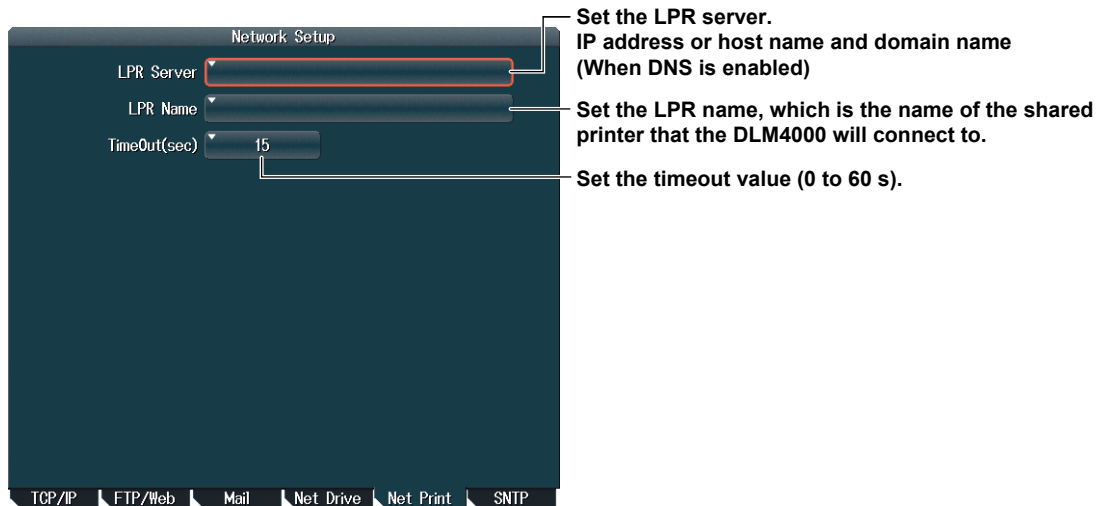

18.8 Using SNTP to Set the Date and Time


This section explains how to use SNTP to set the date and time of the DLM4000.

- SNTP server
- Timeout
- Executing time adjustment
- Automatic adjustment

► “SNTP (SNTP)” in the Features Guide


UTILITY Network Menu

Press **UTILITY** and then press the **Network** soft key to display the following menu.

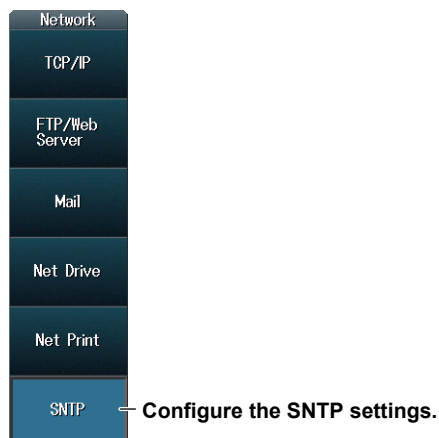

SNTP Settings (SNTP)

Press the **SNTP** soft key to display the following screen.

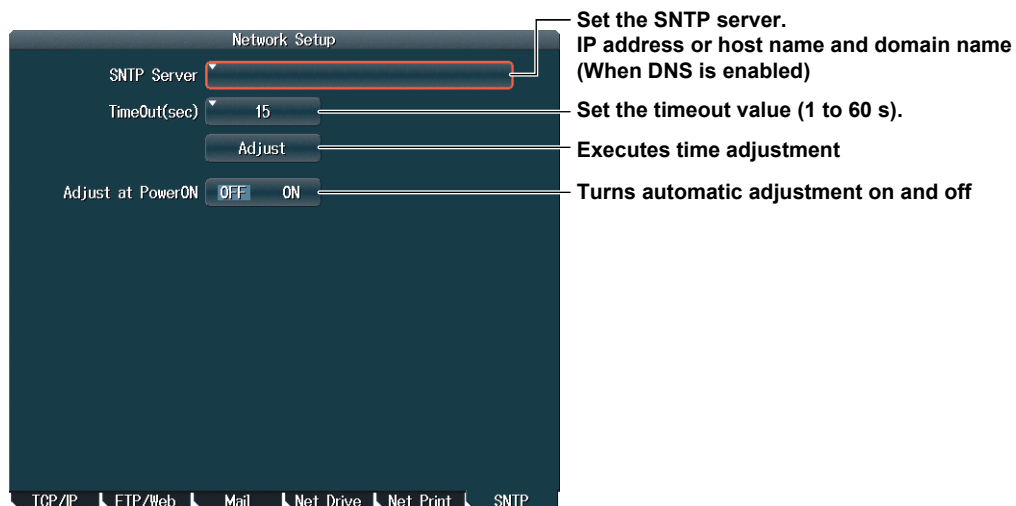


19.1 Turning the Click Sound On and Off and Changing the Menu Language, Message Language, and USB Keyboard Language

This section explains the settings that you can use to turn the click sound on and off and change the menu language, message language, and USB keyboard language.

► “**System Configuration (System Configuration)**” in the Features Guide


UTILITY System Configuration Menu

Press **UTILITY** and then press the **System Configuration** soft key to display the following menu.

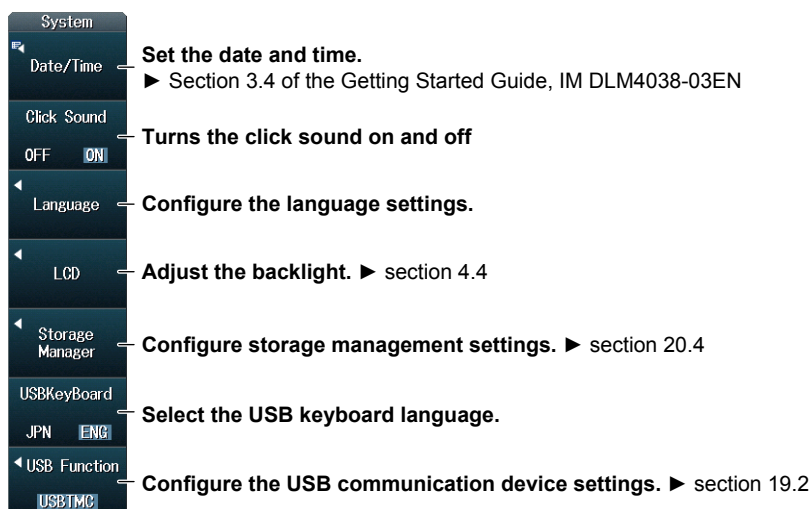

Setting the Language (Language)

Press the **Language** soft key to display the following menu.

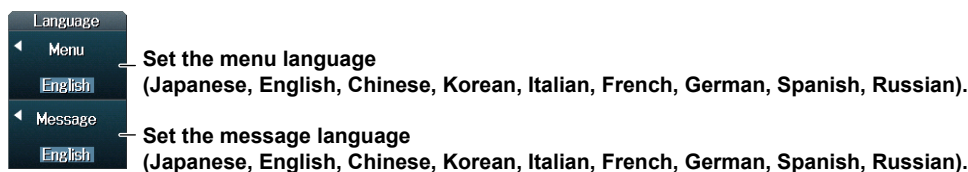

Note

Some terminology is always displayed in English.

Setting the USB Keyboard Language (USBKeyboard)

You can use the following keyboards that conform to USB Human Interface Devices (HID) Class Ver. 1.1.

ENG: 104-key keyboards

JPN: 109-key keyboards

For details on how DLM4000 keys are mapped to the keys on a USB keyboard, see appendix 2 in the Getting Started Guide, IM DLM4038-03EN.


19.2 Using the DLM4000 as a USB Storage Device

This section explains the setting that enables you to use the DLM4000 as a USB storage device through a USB connection made between the USB port on the DLM4000 rear panel and a PC.

► [“USB Communication \(USB Function\)” in the Features Guide](#)

UTILITY System Configuration Menu

Press **UTILITY** and then press the **System Configuration** soft key to display the following menu.

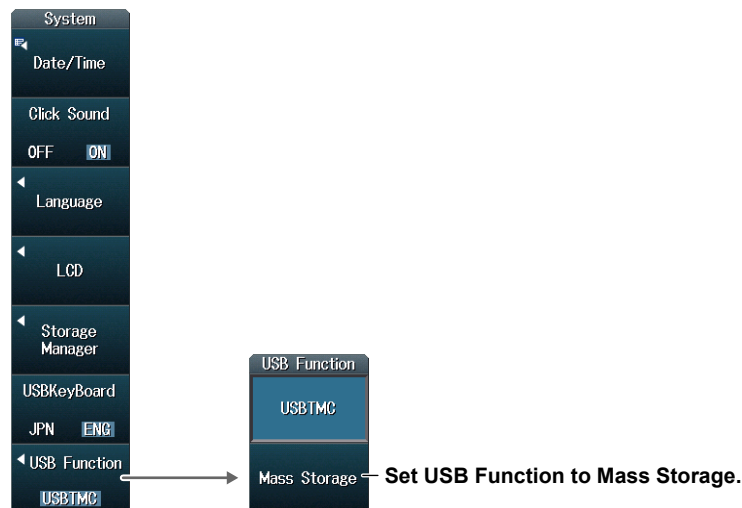

Note

- From a PC, you can access the DLM4000 internal memory as a storage device. You cannot access the DLM4000 network drives or the storage media connected to the DLM4000 USB ports.
- When USB communication is set to Mass Storage, a connected PC can use the DLM4000 as a read-only storage device.
- If you operate the files from the DLM4000, the DLM4000 will temporarily disconnect the connection from the PC so that the screen displayed on the PC can be refreshed.

When using a DLM4000 with firmware version earlier than 2.00 as a USB storage device

On models with firmware version earlier than 2.00, the mass storage feature for Windows XP and Windows Vista PCs is different from that for Windows 7. On models with firmware version earlier than 2.00, if the DLM4000 is accessed from a Windows XP or Windows Vista PC, the files on the DLM4000 internal memory can be read, deleted, and saved.


19.3 Viewing Setup Information (Overview)

This section explains how to view the current DLM4000 setup information.

► [“Overview \(Overview\)” in the Features Guide](#)

UTILITY Overview Menu

Press **UTILITY** and then press the **Overview** soft key to display the following menu.

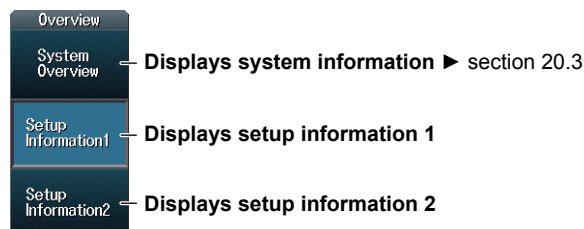


Displaying Setup Information 1 (Setup Information1)

Press the **Setup Information1** soft key to display the following screen.



Displaying Setup Information 2 (Setup Information2)

Press the **Setup Information2** soft key to display the following screen.

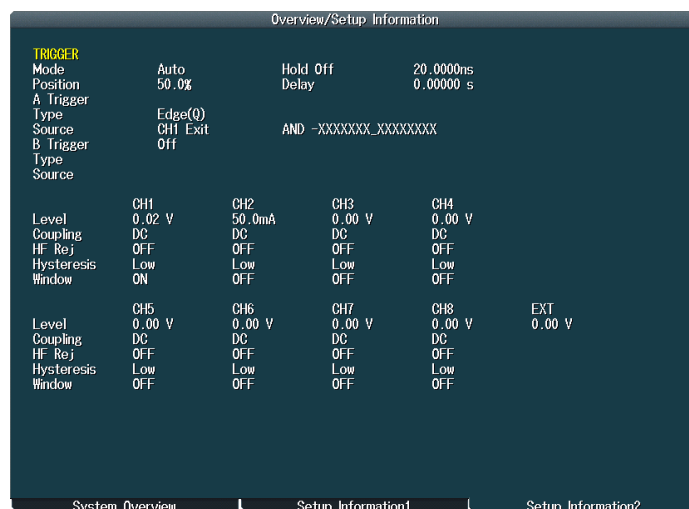

19.4 Setting the Measured Value Font Size and Whether to Use the Default Settings of Legacy Models


This section explains the following settings (which are used when setting the font sizes of cursor-measurement values and automatically measured values and the DLM4000 default values).

- Measured value font size
- Whether to use the default values of legacy models

► [“Returning to the Default Settings \(DEFAULT SETUP\)” in the Features Guide](#)

UTILITY Preference Menu

Press **UTILITY** and then press the **Preference** soft key to display the following menu.

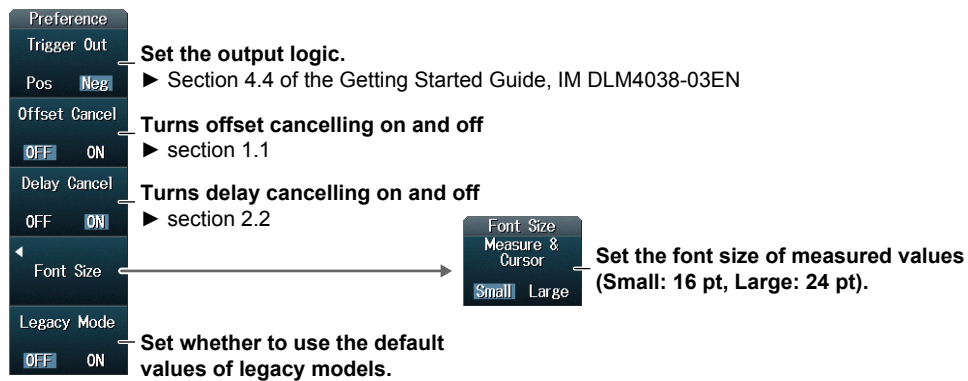

Default Values of Legacy Models (Legacy Mode)

OFF: The default values are the DLM4000 factory default values.

ON: The default values are compatible with the DL7400 series default values.

20.1 Messages and Corrective Actions

Messages

Messages may appear on the screen during operation. This section describes the error messages and how to respond to them. You can display the messages in the language that you specify through the operations explained in section 19.1. If servicing is necessary to solve the problem indicated by a message, contact your nearest YOKOGAWA dealer.

In addition to the following error messages, there are also communications error messages. These messages are explained in the Communication Interface User's Manual, IM DLM4038-17EN.

Information

Code	Message	Chapter or Section
2	Turned on pressing the RESET key. All the settings will be initialized.	3.6*
3	Firmware is updated. All the settings are initialized.	—
4	Hardcopy is aborted.	—
5	File access is aborted.	—
6	Action-on-trigger is aborted.	2.19
7	Search aborted.	—
8	Search execution is completed, but no record was found that matched the conditions.	—
9	Search execution is completed, but no record was found that matched the pattern.	—
10	Statistical measurement is aborted.	Chapter 9
11	Analysis is aborted.	—
12	Data not detected. Execute again after changing settings or reacquiring waveforms.	—
13	The corresponding field was not found.	—
14	Action-on-trigger is completed.	2.19
15	The instrument is set to remote mode by the communication control. Press the SHIFT + CLEAR TRACE key to change to local mode.	—
16	Local lockout is set by the communication control. To operate using the keys, release the lockout using the communication control.	—
17	Firmware will be updated. Do you want to proceed? Note: It will take approx. 5 minutes. Please DO NOT power off the unit until the completion. Once the procedure is completed, the unit will reboot itself. We recommend you to save the setups before updating the firmware.	—
18	Updating Firmware. Note: Please DO NOT power off the unit. Once the procedure is completed, the unit will reboot itself.	—
19	Firmware is updated. Will be rebooted.	—
20	Any serial bus signal can not be detected.	Chapter 12
21	Serial bus automatic setting was aborted.	Chapter 12
22	The symbol/physical value file(.sbl) has not been loaded.	17.7
23	A contradiction in bit numbers of logic setting and symbol definition was detected. Check the symbol/physical value file(.sbl).	—
24	Check the input voltage level and attenuation ratio.	Chapter 12
27	The format was completed.	—
28	It was not turned off by the power switch of the front.	2.3*
30	Calculating the value of Lambda. Try to execute later.	Chapter 14
31	USB Function is set to Mass Storage mode. In this mode you can only read and write files.	Chapter 19
32	USB Function is set to Mass Storage For Windows 7 mode. In this mode you can only read files.	Chapter 19
33	Auto deskew was executed even though input signals were outside the specifications. Check whether current and differential probe offset adjustments have been executed properly.	—

* Getting Started Guide, IM DLM4038-03EN

File Errors

Code	Message	Chapter or Section
500	Data size larger than remaining capacity in media. Delete unnecessary files or use other media.	Chapter 17
501	File does not exist. Check the file name.	Chapter 17
502	Assigned path does not exist or no media. Check the path name and media.	Chapter 17
503	Writing prohibited in the media. Unlock write protection of the media.	Chapter 17
504	Insufficient remaining capacity in media. Delete unnecessary files or use other media.	Chapter 17
505	File not compatible. Check the file, firmware version of the unit or model name of the unit.	—
506	Save data do not exist. Check the content to be saved.	—
507	Save data do not exist. Check the content to be saved.	—
508	Unable to open file. The may be opened by other process. Try to open file later. If the problem still exist, service may be necessary.	Chapter 18
509	Access denied.	Chapter 17
510	File system error. Service is required.	—
511	Media error. Service is required.	—
512	Directory can not be deleted.	Chapter 17
513	File or Directory can not be moved to other media. If the problem occurs on other media, service may be required.	Chapter 17
514	Directory entry does not exist.	—
515	Media error. Service is required.	—
516	Media error. Service is required.	—
517	End of the file.	—
518	The same file or directory name exist. Remove the file/directory or change the current path.	Chapter 17
519	Target file of Move or Copy has a read only property.	Chapter 17
520	Assigned path does not exist or no media. Check the path name and media.	Chapter 17
521	Destination folder assigned to Copy / Move is the same as the origin or sub folder. Change the destination folder.	Chapter 17
522	No file name. Type in file name.	Chapter 17
523	Auto file name failure. Change the type of auto file name or change the header of the auto name.	Chapter 17
524	Improper file or path name. Check file / path name.	Chapter 17
525	Improper file or path name. Check file / path name.	Chapter 17
526	File is disintegrated. Check the file.	—
527	File system error. Service is required.	—
528	Illegal file or directory name. The name contains prohibited characters. Change it to a different name.	Chapter 17
529	Illegal file or directory name. The name is reserved by the system. Change it to a different name.	Chapter 17
530	Load failure. Number of vortex exceeded the maximum. Redefine the mask data.	—
531	Unable to open file. The may be opened by other process. Try to open file later. If the problem still exist, service may be necessary.	—
532	Unable to save. Compressed record size exceeded current record size. Change the compressed record size and execute again.	—
533	Assigned path does not exist. Check the network setting and configuration.	Chapter 18
534	Assigned path does not exist. Check the network setting and configuration.	Chapter 18
535	Network access is denied. Check the network setting and configuration.	Chapter 18
536	File operation not supported in root directory. Please verify the path name.	Chapter 17
537	A file which contains multiple saved traces can not be loaded into Ref. Please load it into ACQ.	Chapter 17

Code	Message	Chapter or Section
538	A file which contains compressed waveform can not be loaded into the ACQ. Please load it into Ref.	Chapter 17
539	Unable to load a logic waveform to the reference waveform.	Chapter 17
540	Unable to load a file containing logic waveforms.	Chapter 17
541	Unable to load that file. Its extension is invalid.	Chapter 17
542	Unable to save the file that is over 2Gbyte.	—
543	There is already a file. Do you overwrite?	Chapter 17
544	A file which contains multiple saved traces can not be loaded into Ref. Please load it into Channels.	Chapter 17
545	The data of the record length more than 1.25M point cannot save all data in ASCII(CSV form). Please do a compression save or a partial save by Zoom.	Chapter 17
546	The number of files of a root directory is maximum. Delete unnecessary files or save at a subdirectory.	Chapter 17
547	The file save is unsupported in this setting.	Chapter 17
548	Computed waveforms cannot be saved with these settings.	Chapter 20*

* Features Guide, IM DLM4038-01EN

Printer Errors

Code	Message	Chapter or Section
550	Printer error. Confirm the printer status.	—
551	Cannot detect printer. Turn ON the printer. Check connectors.	—
552	Communication error. Check all connections and make sure all devices are on.	—
553	Paper not loaded correctly. Set the paper correctly.	16.1
554	Temperature error. Power off immediately.	—
555	Close the printer cover.	16.1
556	No built-in printer on this model. Check the specifications to see whether or not the optional printer is provided.	20.3
557	Image creation failure. Working memory space may be insufficient. Maintenance service is required.	—
558	Unable to print or save image with file property dialog.	Chapter 17

Network Errors

Code	Message	Chapter or Section
600	Invalid network parameter settings. Check the network parameters.	Chapter 18
601	Unable to connect to the server. Check the network settings and configuration.	Chapter 18
602	Invalid file server settings. Check the file server settings.	Chapter 18
603	Invalid fire wall settings. Check the fire wall settings.	Chapter 18
604	Cannot execute, while using a FTP server.	Chapter 18

Execution Errors

Code	Message	Chapter or Section
650	Running. Stop and execute again.	3.8*
651	Accessing file. Abort or wait until it is completed, and execute again.	—

* Getting Started Guide, IM DLM4038-03EN

20.1 Messages and Corrective Actions

Code	Message	Chapter or Section
652	Printing. Abort or wait until it is completed, and execute again.	—
653	Processing action-on-trigger. Abort or wait until it is completed, and execute again.	2.19
654	Processing zoom search. Abort or wait until it is completed, and execute again.	Chapter 11
655	Processing auto scroll. Abort or wait until it is completed, and execute again.	10.1
656	Processing history search. Abort or wait until it is completed, and execute again.	Chapter 15
657	Processing history replay. Abort or wait until it is completed, and execute again.	Chapter 15
658	Processing statistical measurement. Abort or wait until it is completed, and execute again.	Chapter 9
659	Analyzing serial bus data. Abort or wait until it is completed, and execute again.	Chapter 12
660	Zone edit in process. Terminate editing.	Chapter 2
661	Processing self test. Wait until it is completed.	—
662	Acquisition in process in N Single trigger mode. Press Start/Stop key or wait until the process is completed.	Chapter 2
663	Retrievable settings does not exist.	—
664	Failed to execute statistical measurement. Waveform data may not exist. In Cycle statistic mode, improper setting may result in failure to recognize the cycle.	Chapter 9
665	Search target data does not exist. Execute search after analysis is completed.	—
666	Improper action setting. The saved data type is either Waveform group or Analysis group. This can be assigned from File menu.	Chapter 17
667	Retrievable data not found.	—
668	Failed to update firmware. Either the data file could be inappropriate or damaged.	—
669	Sending E-Mail. Wait until it is completed.	—
670	The corresponding field was not found.	—
671	Cannot be executed when the current probe setting is 100A:1V. Change the probe setting on the channel menu or the Power Analysis Setup menu.	Chapter 1
672	Auto Deskew was canceled because input signals were not detected. Check whether current or differential probe offset adjustments have been executed properly.	—
673	Processing math on history. Abort or wait until it is completed, and execute again.	Chapter 15
674	Cannot store because the data is locked. Release the lock through Store Detail.	Chapter 17
675	Serial bus automatic setting is in progress. Please wait.	Chapter 12
677	Cannot execute the user defined math function during roll mode. After acquisition stop, it will be executed.	3.8*
678	Cannot execute the search function during roll mode.	—
679	The data length that is necessary for FFT is short. Please make Time/div late.	Chapter 1
680	The data length that is necessary for the user defined math function is short. Please lower the order of the MEAN operator or change setting of Filter1(Filter2).	Chapter 6
681	The data length that is necessary for the harmonics analysis function is short.	—
682	The decode cannot be displayed, because the threshold level is not appropriate.	—
683	Cannot execute the math function, because the display of source is OFF.	Chapter 6
684	LOGIC input cannot be loaded into Ref.	Chapter 17
685	Cannot load into Ref with maximum record length.	—
686	Cannot execute during roll mode. Stop and execute again.	3.8*
687	It connects with PC Application.	—
688	Cannot execute on current record length.	—
689	Cannot execute during Preview mode.	—
690	The Format failure.	—

* Getting Started Guide, IM DLM4038-03EN

Code	Message	Chapter or Section
691	Cannot execute after history search. Reset history search and execute again.	15.2
692	Cannot execute, because history is not exist.	—
693	Cannot execute when the "Print To" setting of the PRINT key is "Multi".	16.5

Setting Errors

Code	Message	Chapter or Section
800	Improper Date / Time setting.	3.4*
801	Not allowed unless waveforms are shown. Display waveforms.	Chapter 1
802	Source waveforms do not exist. Display source waveforms.	Chapter 3
803	Zone waveforms do not exist.	Chapter 2
804	Illegal expression.	Chapter 6
806	Invalid bit assignment in the logic group.	1.2
807	Unable to enable the trigger conditions. Set the clock source to another group or assign bits to the group.	2.6, 2.8
808	Cannot set this parameter with maximum record length.	—
809	Cannot change the setting of the Math operation, because power analysis is set.	—
810	Cannot set this parameter when A-trigger is not serial bus.	Chapter 2
811	This setting is necessary only in the case of ON display of Zoom1 and Zoom2.	Chapter 10
812	Cannot set this parameter during interleave mode.	—
813	This option is not available.	—
814	The Userdefined Math option is not available.	—
815	The LOGIC input option is not available.	—
816	This function is not supported.	—

* Getting Started Guide, IM DLM4038-03EN

System Errors

Code	Message	Chapter or Section
900	Setup data saving error. Setting information has not saved because the main power switch on the side panel is turned to OFF before the power switch on the front panel.	2.3*
901	Fan stopped. Power off immediately. Maintenance service is required.	2.3*
903	Calibration failure. Disconnect the input and execute again. If it fails again, servicing is necessary.	—
904	Invalid Command.	—
905	This error No. is not defined.	—
906	Failed to update firmware. The internal media may be damaged. Maintenance service is required.	—
907	Calibration failure. Set V/div to the highest sensitivity and turn the coarse adjustment trimmer of the current probe so that the signal is within ± 2 division from the center of the screen. If the calibration still fails, servicing is required.	Chapter 1
911	There is a problem to a probe power supply. Maintenance service is required.	—
913	Failed to update firmware. Maintenance service is required.	—
914	Fail to update Flash ROM. Maintenance service is required.	—
915	Internal temperature is too high. Maintenance service is required. It will shutdown automatically.	—

* Getting Started Guide, IM DLM4038-03EN

20.2 Carrying Out Self-Tests (Selftest)


This section explains the following settings (which are used when testing whether or not the DLM4000's memory, keyboard, and printer are functioning properly).

- Test type
- Test execution

► [“Self-Test \(Selftest\)” in the Features Guide](#)

UTILITY Self Test Menu

Press **UTILITY** and then press the **Self Test** soft key to display the following menu.

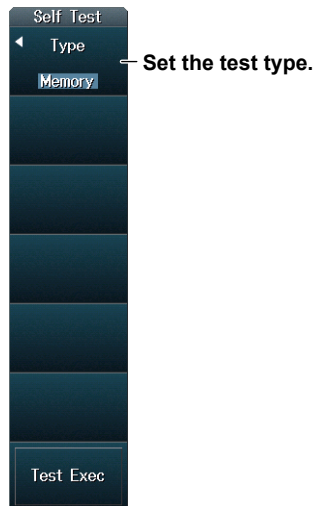

Setting the Test Type (Type)

Memory: Tests whether or not the internal CPU board RAM and ROM are operating properly. If they are operating properly, “Success” appears. If an error occurs, “Fail” appears.




KeyBoard: Tests whether the front panel keys and knobs are operating correctly and whether the soft keyboard accepts input properly.

- The front panel keys are operating properly if the background color of the names of the keys that you press turns white or green.
- Knobs are operating properly if you turn them slowly, press them, or tilt them depending on the type of knob and the background color of the names or arrows changes to white or green.
- The soft keyboard is operating properly if you can enter the specified characters.

Printer: Tests whether or not the optional built-in printer is operating properly. The built-in printer is operating properly if the print density is correct. The built-in printer does not print properly if an error occurs.

Note

Accuracy is a service test item. Under normal circumstances, you do not need to perform these tests.

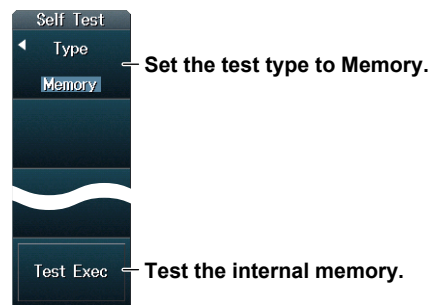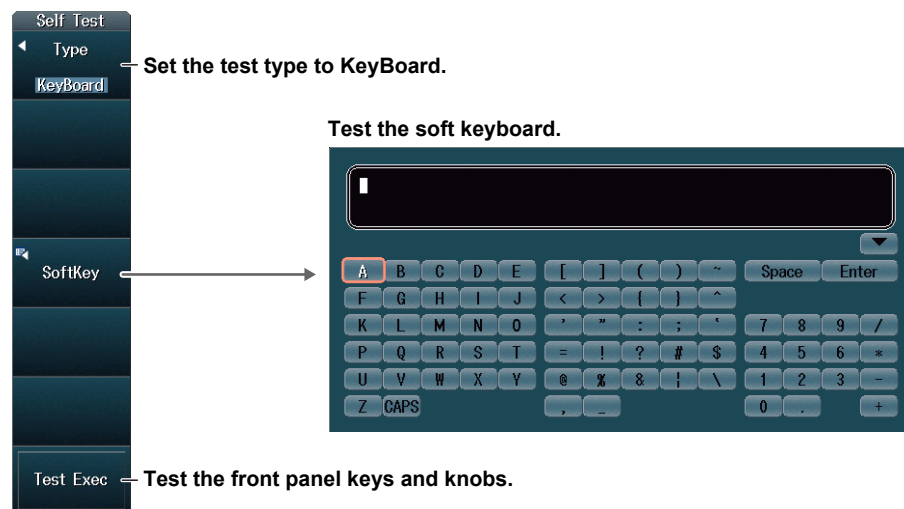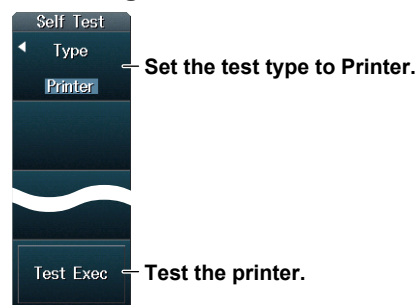Executing the Memory Test**Executing the Soft Keyboard Test****Executing the Printer Test****If an Error Occurs during a Self-Test**

If an error occurs even after you carry out the following procedure, contact your nearest YOKOGAWA dealer.

- Execute the self-test again several times.
- Confirm whether or not the media being tested is properly inserted.
- Check that the paper is set properly in the built-in printer and that the paper is not jammed.


20.3 Viewing System Information (Overview)

This section explains how to view the DLM4000 system information.

► [“Overview \(Overview\)” in the Features Guide](#)


UTILITY Overview Menu

Press **UTILITY** and then press the **Overview** soft key to display the following menu.

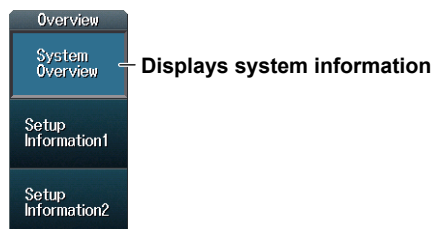

Viewing System Information (System Overview)

Press the **System Overview** soft key to display the following screen.

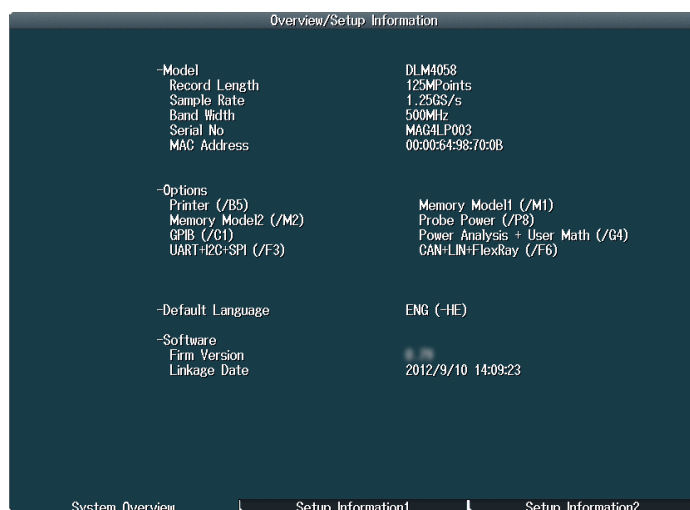

Display Details

Model	Model
Record Length	Record length
Sample Rate	Maximum sample rate
Serial No	Serial number
Options	Optional features installed on the DLM4000
Default Language	Default language
Firm Version	Firmware version number
Linkage Date	Firmware version date

20.4 Formatting Internal Memory


This section explains the following settings (which are used when formatting the DLM4000's internal memory).

- Storage management
- Formatting internal memory

► “System Configuration (System Configuration)” in the Features Guide


UTILITY System Configuration Menu

Press **UTILITY** and then press the **System Configuration** soft key to display the following menu.

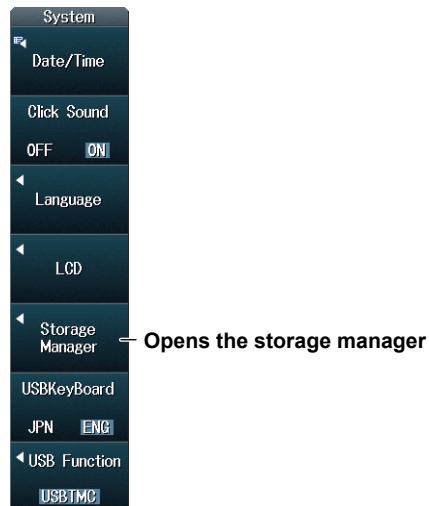

Storage Management (Storage Manager)

Press the **Storage Manager** soft key to display the following menu.

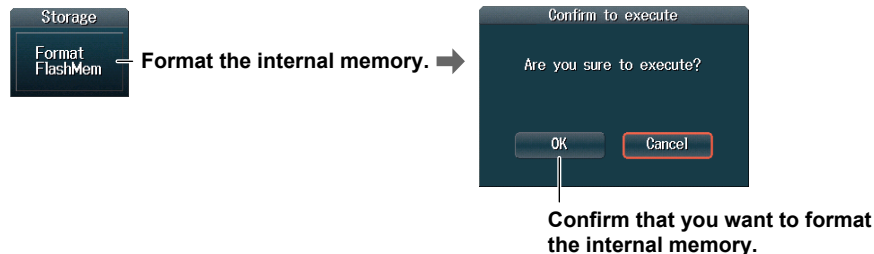

CAUTION

If you format the internal memory, all saved data is erased.

Index

Symbols

ΔT & ΔV cursor	8-3
ΔT cursor	8-1
ΔV cursor	8-2

Numerics

1000BASE-T port	18-1
-----------------------	------

A

A -> B(N)	2-48
accumulation display	4-3
ACQUIRE menu	3-1
acquisition mode	3-1
action	2-51
action-on-trigger	2-51
Action Go/Nogo menu	2-52
Action on Trig menu	2-51
addition, subtraction, and multiplication	6-2
A Delay B	2-47
Adr Data mode	2-33
ANALYSIS histogram menu	13-1, 13-2
ANALYSIS menu	14-1
ANALYSIS Power Analysis menu, harmonics	14-6
ANALYSIS Power Analysis menu, I2t	14-8
ANALYSIS Power Analysis menu, SOA	14-5
ANALYSIS Power Analysis menu, SW Loss	14-2
ANALYSIS Power Measurement menu	14-10
angle cursor	8-5
applicable class	14-6
area (XY)	5-3
A trigger	2-49
automated measurement of waveform parameters, saving	17-7
automatically measured values, processing statistics on	9-6
auto naming	17-3
auto scrolling	10-1
auto setup, CAN bus	12-6
auto setup, FlexRay bus	12-2
auto setup, I2C bus	12-20
auto setup, LIN bus	12-10
auto setup, SPI bus	12-26
auto setup, UART	12-14

B

backlight, adjusting	4-5
bandwidth limit	1-4
bit setup, LOGIC(A B)	1-12
bit setup, LOGIC(L)	1-7
Break Synch mode	2-25
B trigger	2-49
B TRIG menu	2-47
built-in printer	16-1
built-in printer, printing on	16-3

C

cable	18-1
calc setup	9-10
CAN bus trigger	2-20
CAN serial bus signals, analyzing and searching	12-5
channels, loading waveform data into	17-9
character strings, entering	vii
chip select source, SPI bus, analyzing and searching	12-28

chip select source, SPI bus trigger	2-38
chip select source, user-defined bus, analyzing and searching	12-33
chip select source, user-defined bus trigger	2-42
CH menu	1-1
class setup, harmonic analysis	14-6
clear trace	4-4
click sound, turning on and off	19-1
combination, B TRIG	2-47
combination trigger	2-47
computation conditions	6-11
computation mode	6-1
conditions, edge trigger with	2-7
condition setup, CAN bus trigger	2-22, 2-23
condition setup, edge search	11-2
condition setup, FlexRay bus trigger	2-18, 2-19
condition setup, I2C bus trigger	2-34
condition setup, LIN bus trigger	2-26, 2-27
condition setup, pulse width search	11-11
condition setup, SPI bus trigger	2-39
condition setup, state search	11-8
condition setup, state width search	11-14
condition setup, UART trigger	2-30
condition setup, user-defined bus trigger	2-40
continuous	9-6
count computation	6-6
count type	6-7
CS (SS), SPI bus, analyzing and searching	12-27
CS (SS), SPI bus trigger	2-38
CS, user-defined bus, analyzing and searching	12-33
CS, user-defined bus trigger	2-42
cursor jumping	8-1
cursor measurement	5-2, 8-1
CURSOR menu	8-1
cursor movement	17-13
cursor positions, setting	8-1
cursor type, FFT	7-3
cycle	9-8
cycle mode	9-2, 14-4
cyclic statistical processing	9-8

D

datamode, UART trigger	2-30
data type to load	17-11
data type to save	17-6
date or time, setting via SNTP	18-10
default values of legacy models, using	19-4
delay	6-4
delay cancelling	2-2
DELAY key	2-2
deskew, LOGIC(A B)	1-16
deskew, LOGIC(L)	1-9
detected point markers	11-2
DHCP	18-3
dialog box operations	v
digital filter	6-11
display conditions	4-1
display format	17-14
DISPLAY menu	4-1, 4-3
display modes	15-2
display setup, edge search	11-2
display setup, FFT	7-2
display size, LOGIC(A B)	1-16

Index

display size, LOGIC(L)	1-10
DLM4000, accessing from a PC	18-4
DNS	18-3
dual bus	2-48

E

Page

edge count	6-7
EDGE menu	2-3
edge qualified search	11-4
edge search	11-1
edge trigger	2-3
edit	2-54
ENHANCED Edge OR menu	2-5
ENHANCED Edge Qualified menu	2-7
enhanced parameter measurement	9-10
ENHANCED Pulse Width menu	2-11
ENHANCED State menu	2-9
ENHANCED State Width menu	2-14
error mode, CAN bus trigger	2-21
error mode, FlexRay bus trigger	2-18
error mode, LIN bus trigger	2-25
error mode, UART trigger	2-30
ESC key	iv
Ethernet	18-1
Ethernet interface specifications	18-1
Every Data mode	2-30
Every Start mode	2-33
execution errors	20-3
expression	6-10

F

Page

FFT	7-1
FFT menu	7-1
FFT results, saving	17-7
FFT setup	7-1
file, saving	16-5
file errors	20-2
file list	17-2, 17-13
file list, sorting	17-14
file name	17-3
file operations	17-13
FILE Others (Load) menu	17-11
FILE Others (Save) menu	17-6
files and folders, copying	17-17
files and folders, deleting	17-16
files and folders, moving	17-18
files and folders, renaming	17-16
FILE Setup (Load) menu	17-10
FILE Setup (Save) menu	17-5
FILE Utility menu	17-19
FILE Waveform (Load) menu	17-9
FILE Waveform (Save) menu	17-2
filter functions	6-3
filter type	6-3
FlexRay bus analysis and searching	12-1
FlexRay bus trigger	2-17
folders (directories), creating	17-17
forced trigger (FORCE TRIG)	2-50
Frame Start mode	2-18
FTP server	18-4

G

Page

general call	2-35
General Call mode	2-35
GO/NO-GO determination	2-52
gradation mode	4-3
graticle	4-1

grouping	12-16
----------------	-------

H

Page

harmonic analysis	14-6
HDTV menu	2-45
high speed mode	2-35
histogram data, saving	17-8
histogram display	9-7
histogram parameter measurement	13-2
history	9-9
HISTORY key	15-5
HISTORY menu	15-1, 15-5
history waveform display	15-1
history waveforms, searching	15-6
hold-off time	2-1
Hold Off	2-1
horizontal axis	1-19
horizontal expansion and reduction	1-19
HS mode	2-35

I

Page

I2C bus trigger	2-31
I2C serial bus signals, analyzing and searching	12-19
ID/Data mode, CAN bus trigger	2-22
ID/Data mode, FlexRay bus trigger	2-18
ID/Data mode, LIN bus trigger	2-26
ID OR mode, CAN bus trigger	2-23
ID OR mode, FlexRay bus trigger	2-19
ID OR mode, LIN bus trigger	2-27
if an error occurs during a self-test	20-7
IIR filter	6-4
include R/W	2-33, 12-22
information	20-1
initial point	6-5
input coupling	1-2
integration	6-5
internal memory, formatting	20-9
item, histogram	13-2
item setup	9-2
item setup (Area2)	9-10

J

Page

jog shuttle	vi
Joule integral	14-8
jumping to the specified field, CAN serial bus signal	12-8
jumping to the specified field, LIN serial bus signal	12-12

K

Page

keyboard, operating	vii
key operations	iv

L

Page

label	6-8
label/unit	6-8
label display	1-3
language	19-1
latch	12-33
latch, user-defined bus trigger	2-42
latch source	12-33
latch source, user-defined bus trigger	2-42
LIN bus trigger	2-24
linear scaling	1-3
LIN serial bus signals, analyzing and searching	12-9
list	15-3
list, CAN serial bus signal analysis	12-7
list, harmonic analysis	14-7

list, I2C serial bus signal analysis.....	12-23
list, LIN serial bus signal analysis.....	12-11
list, SPI serial bus signal analysis.....	12-29
list, UART signal analysis.....	12-17
list display.....	17-14
list display, CAN serial bus signal analysis.....	12-7
list display, FlexRay serial bus signal analysis.....	12-3
list display, I2C serial bus signal analysis.....	12-23
list display, LIN serial bus signal analysis.....	12-11
list display, SPI serial bus signal analysis.....	12-29
list display, statistical processing.....	9-8
list display, UART signal analysis.....	12-17
loading reference waveforms.....	6-9
LOGIC(A B) menu.....	1-11
LOGIC(L) Menu.....	1-6
LPR name.....	18-9
LPR server.....	18-9

M	Page
mail.....	18-7
mail server.....	18-7
mail transmission, configuring.....	18-7
mapping.....	4-2
marker, FFT.....	7-3
marker cursor.....	8-4
marker cursor measurement, FFT.....	7-3
MATH/REF menu.....	6-1
measured value font size.....	19-4
MEASURE Enhanced menu.....	9-10
measurement items, marker cursors.....	8-4
measurement items, measure.....	9-2
measurement items, power measurement.....	14-11
measurement range.....	9-5
measurement source window.....	9-5
MEASURE menu.....	9-1
measure setup, Joule integral.....	14-8
measure setup, power measurement.....	14-11
measure setup, switching loss.....	14-4
MEASURE Statistics menu.....	9-6
memory test.....	20-7
menu language.....	19-1
message.....	20-1
message language.....	19-1
mode, CAN bus trigger.....	2-21
mode, FlexRay bus trigger.....	2-18
mode, Go/Nogo.....	2-53
mode, I2C bus trigger.....	2-33
mode, LIN bus trigger.....	2-25
mode, pulse width search.....	11-11
mode, pulse width trigger.....	2-12
mode, state width search.....	11-15
mode, state width trigger.....	2-16
mode, UART trigger.....	2-30
MODE menu.....	2-1
moving avg.....	6-4
multiple edge triggers.....	2-5

N	Page
net drive.....	18-8
net printer.....	18-9
network connection.....	18-1
network drive.....	18-8
network errors.....	20-3
network printer, printing on.....	16-4
network printer settings.....	18-9
NON ACK mode.....	2-35
normal statistical processing.....	9-6
NTSC menu.....	2-43

Index

O	Page
offset cancelling.....	1-4
operation menu and file list, switching between.....	17-13
overview.....	19-3, 20-8

P	Page
PAL menu.....	2-44
parameter, Go/Nogo.....	2-57
password.....	18-4
pattern, state condition search.....	11-8
pattern, state condition trigger.....	2-10
pattern, state width search.....	11-14
pattern, state width trigger.....	2-15
peak.....	7-3
peak cursor measurements.....	7-3
phase shifting.....	6-4
polygonal zones, loading.....	17-12
PolygonZone.....	2-56
POSITION knob.....	2-2
power supply analysis type and power measurement.....	14-1
PRINT Built-in menu.....	16-3
printer errors.....	20-3
printers, roll paper for.....	16-1
printer test.....	20-7
PRINT File menu.....	16-5
print mode, built-in printer.....	16-3
print mode, network printer.....	16-4
PRINT Multi menu.....	16-6
PRINT Network menu.....	16-4
probe, setting.....	1-3
probe setup, power measurement.....	14-10
probe setup, power supply analysis.....	14-2
protection, turning on and off.....	17-19
pulse width search.....	11-10
pulse width trigger.....	2-11

Q	Page
qualification, edge search with conditions.....	11-5
qualification, edge trigger with conditions.....	2-8

R	Page
R/W bit inclusion, I2C.....	12-22
R/W bit inclusion, trigger.....	2-33
range type.....	2-53
RectZone.....	2-53
reference setting, angle cursor.....	8-5
reference setup.....	8-5
reference time, pulse width search.....	11-12
reference time, pulse width trigger.....	2-13
reference time, state condition trigger.....	2-16
reference time, state width search.....	11-16
reference waveforms, loading waveform data into.....	17-9
ref levels.....	9-5
replay.....	15-4
RESET key.....	V
roll paper, handling.....	16-1
roll paper, loading.....	16-2
rotary count.....	6-7
RUN/STOP key.....	3-2

S	Page
safe operating area analysis.....	14-5
sampling mode.....	3-1
save destination.....	17-2
save mode.....	16-5
scaling.....	6-8

Index

SCL source.....	2-31, 12-21
screen capture, saving	17-7
SDA source.....	2-32, 12-21
SDTV (480/60p) menu.....	2-44
search, CAN serial bus signal	12-8
search, FlexRay bus.....	12-4
search, history waveforms.....	15-6
search, I2C serial bus signal	12-24
search, LIN serial bus signal	12-12
search, SPI serial bus signal	12-30
search, UART signal.....	12-18
search, user-defined bus signal.....	12-34
SEARCH CAN menu	12-5
search condition, edge	11-2
search condition, edge with conditions.....	11-5
search condition, pulse width	11-11
SEARCH Edge menu	11-1
SEARCH Edge Qualified menu	11-4
SEARCH FlexRay menu	12-1
SEARCH I2C menu	12-19
SEARCH LIN menu	12-9
SEARCH Pulse Width menu	11-10
search skipping.....	11-3
SEARCH SPI menu.....	12-25
SEARCH State menu	11-7
SEARCH State Width menu	11-13
SEARCH UART menu	12-13
SEARCH User Define menu.....	12-31
self-tests	20-6
serial bus, analyzing and searching	12-1
serial bus, CAN bus, analyzing and searching	12-6
serial bus, FlexRay bus, analyzing and searching	12-2
serial bus, I2C bus, analyzing and searching	12-20
serial bus, LIN bus, analyzing and searching	12-10
serial bus, SPI bus, analyzing and searching	12-26
serial bus, UART, analyzing and searching	12-14
serial bus, user-defined bus, analyzing and searching.....	12-32
serial bus analysis results, saving	17-7
set/reset.....	17-19
SET key.....	v
setting errors.....	20-5
setup data, loading	17-10
setup data, saving	17-5
setup information, viewing	19-3
SHIFT key.....	iv
SINGLE key.....	3-2
single mode	2-1, 3-2
skip mode	11-3
smoothing	6-4
snapshot.....	4-4
snapshot waveforms, loading	17-12
snapshot waveforms, saving	17-7
SNTP	18-10
SNTP server	18-10
SOA.....	14-5
SOF mode	2-21
soft keyboard test	20-7
SPI bus trigger.....	2-36
SPI serial bus signals, analyzing and searching	12-25
start byte.....	2-35
Start Byte mode.....	2-35
state, state condition trigger	2-9
state, state width trigger	2-15
state condition	11-8
state condition, state condition trigger	2-9
state condition, state width	11-14
state condition, state width trigger.....	2-15
state condition trigger	2-9
state search	11-7

state width search.....	11-13
state width trigger	2-14
statistical computation	9-6
storage management.....	20-9
storage manager	20-9
storage media, changing	17-15
switching loss analysis	14-2
system errors.....	20-5
system information, displaying	20-8
system information, viewing	20-8
system overview	20-8

T

Page

TCP/IP settings.....	18-3
test type	20-6
thumbnail display.....	17-14
time, pulse width search.....	11-12
time measurement reference level	9-5
timeout value	2-1
timestamps, showing a list of.....	15-3
time width mode, pulse width search.....	11-11
time width mode, pulse width trigger	2-11
time width mode, state width search	11-15
time width mode, state width trigger	2-14
trend/histogram.....	9-7
trend display	9-7
trigger condition, CAN bus.....	2-22, 2-23
trigger condition, FlexRay bus	2-18, 2-19
trigger condition, I2C bus.....	2-34
trigger condition, LIN bus.....	2-26, 2-27
trigger condition, SPI bus	2-39
trigger condition, UART	2-30
trigger condition, user-defined bus	2-40
trigger delay.....	2-2
trigger level change setting.....	9-6
trigger mode	2-1
trigger position	2-2
trigger type setting, CAN bus.....	2-20
trigger type setting, FlexRay bus	2-17
trigger type setting, I2C bus.....	2-31
trigger type setting, LIN bus.....	2-24
trigger type setting, UART	2-28
TV trigger.....	2-43
type of file to list, selecting.....	17-15

U

Page

UART signals, analyzing and searching.....	12-13
UART trigger.....	2-28
unit.....	6-8, 7-1
USB keyboard language.....	19-1
USB storage device	19-2
USB storage medium, connecting to	17-1
user-defined bus signals, analyzing and searching	12-31
user-defined computation	6-10
user-defined serial bus trigger	2-40
User Define menu.....	2-40
UserdefTV menu	2-45
user name.....	18-4
UTILITY network menu, FTP server	18-4
UTILITY network menu, mail	18-7
UTILITY network menu, network drive	18-8
UTILITY network menu, network printer.....	18-9
UTILITY network menu, SNTP	18-10
UTILITY network menu, TCP/IP	18-3
UTILITY network menu, Web server	18-5
UTILITY Overview menu, overview	20-8
UTILITY Overview menu, setup information.....	19-3
UTILITY Preference menu.....	1-4, 19-4

UTILITY Self Test menu	20-6
UTILITY System Configuration menu	19-1
UTILITY System Configuration menu, LCD	4-5
UTILITY System Configuration menu, storage manager	20-9
UTILITY System Configuration menu, USB function	19-2

V **Page**

values, entering	vi
vertical axis, analog signal	1-1
vertical axis, LOGIC(A B)	1-11
vertical axis, LOGIC(L)	1-6
vertical position, analog signal	1-5
vertical position, LOGIC(A B)	1-16
vertical position, LOGIC(L)	1-10
vertical scale	1-4
vertical zooming	10-3

W **Page**

waveform acquisition	3-2
waveform acquisition conditions	3-1
waveform data, loading	17-9
waveform data, saving	17-2
waveform display color	4-2
waveform histogram display	13-1
waveform mapping	4-2
waveform parameters, automated measurement of	9-1
waveform search	11-3
waveform zone	2-54
waveform zones, loading	17-12
WaveZone	2-54
Web server	18-5
window comparator	2-3

X **Page**

X-Y Measure Setup menu	5-2
X-Y menu	5-1
XY waveform display	5-1

Z **Page**

zoom factor	10-2
zooming in on waveforms	10-1
ZOOM menu	10-1
ZOOM Vertical Zoom menu	10-3