

VL/ Honeywell

^

Valuetronics International, Inc.
1-800-552-8258
MASTER COPY

INSTRUCTION MANUAL
MODEL 802
50 MHz PULSE GENERATOR

© 1982 Wavetek

THIS DOCUMENT CONTAINS INFORMATION PROPRIETARY TO WAVETEK AND IS SOLELY FOR INSTRUMENT OPERATION AND MAINTAINANCE. THE INFORMATION IN THIS DOCUMENT IS NOT TO BE DUPLICATED IN ANY MANNER WITHOUT THE PRIOR APPROVAL IN WRITING OF WAVETEK.

WAVETEK®

WAVETEK SAN DIEGO, INC.

9045 Balboa Ave., San Diego, CA 92123
P. O. Box 85265, San Diego, CA 92138
Tel 619/279-2200 TWX 910/335-2007

Manual Revision: 11/87
Manual Part Number 1300-00-0119

WARRANTY

Wavetek warrants that all products manufactured by Wavetek conform to published Wavetek specifications and are free from defects in materials and workmanship for a period of one (1) year from the date of delivery when used under normal operating conditions and within the service conditions for which they were furnished.

The obligation of Wavetek arising from a Warranty claim shall be limited to repairing, or at its option, replacing without charge, any product which in Wavetek's sole opinion proves to be defective within the scope of the Warranty. In the event Wavetek is not able to modify, repair or replace non-conforming defective parts or components to a condition as warranted within a reasonable time after receipt thereof, Buyers shall be credited for their value at the original purchase price.

Wavetek must be notified in writing of the defect or nonconformity within the Warranty period and the affected product returned to Wavetek's factory or to an authorized service center within (30) days after discovery of such defect or nonconformity.

For product warranties requiring return to Wavetek, products must be returned to a service facility designated by Wavetek. Buyer shall prepay shipping charges, taxes, duties and insurance for products returned to Wavetek for warranty service. Except for products returned to Buyer from another country, Wavetek shall pay for return of products to Buyer.

Wavetek shall have no responsibility hereunder for any defect or damage caused by improper storage, improper installation, unauthorized modification, misuse, neglect, inadequate maintenance, accident or for any product which has been repaired or altered by anyone other than Wavetek or its authorized representative and not in accordance with instructions furnished by Wavetek.

Exclusion of Other Warranties

The Warranty described above is Buyer's sole and exclusive remedy and no other warranty, whether written or oral, is expressed or implied. Wavetek specifically disclaims the implied warranties of merchantability and fitness for a particular purpose. No statement, representation, agreement, or understanding, oral or written, made by an agent, distributor, representative, or employee of Wavetek, which is not contained in the foregoing Warranty will be binding upon Wavetek, unless made in writing and executed by an authorized Wavetek employee. Under no circumstances shall Wavetek be liable for any direct, indirect, special, incidental, or consequential damages, expenses, losses or delays (including loss of profits) based on contract, tort, or any other legal theory.

CONTENTS

SECTION 1 GENERAL DESCRIPTION

1.1	THE MODEL 802	1-1
1.2	SPECIFICATIONS	1-1
1.2.1	Versatility	1-1
1.2.2	Pulse Outputs	1-1
1.2.3	Time Domain	1-2
1.2.4	Input Characteristics	1-2
1.2.5	General	1-2

SECTION 2 INSTALLATION

2.1	MECHANICAL INSTALLATION	2-1
2.2	ELECTRICAL INSTALLATION	2-1
2.2.1	Power Connection	2-1
2.2.2	Signal Connections	2-1
2.3	ELECTRICAL ACCEPTANCE CHECK	2-1

SECTION 3 OPERATION

3.1	CONTROLS AND CONNECTORS	3-1
3.2	NOTES ON OPERATION	3-2
3.2.1	Modes	3-2
3.2.2	White Marks	3-2
3.2.3	Pulse Width and Delay	3-2
3.2.4	Output Terminations	3-4
3.2.5	Duty Cycle	3-5
3.2.6	Output Mixing	3-5
3.2.7	Precise Output Levels	3-5
3.2.8	Fixed Delay	3-5
3.2.9	Two Phase Clocking	3-5
3.2.10	Rise Time Measurements	3-6
3.3	OPERATION	3-6
3.3.1	Continuous Pulses	3-6
3.3.2	Wide Duty Cycle Pulses	3-6
3.3.3	Externally Triggered Pulses	3-6
3.3.4	Manually Triggered Pulses	3-6
3.3.5	Gated Pulses	3-7
3.3.6	Pulses With Width Controlled Externally	3-7
3.3.7	Double Pulses	3-7

Contents (Continued)

SECTION 4	CIRCUIT DESCRIPTION	
4.1	OVERALL BLOCK DIAGRAM	4-1
4.2	PERIOD OSCILLATOR	4-1
4.3	TRIGGER/GATE CIRCUIT	4-1
4.4	SYNC CIRCUIT	4-1
4.5	DELAY CIRCUIT	4-1
4.6	WIDTH CIRCUIT	4-2
4.7	TTL BUFFER AMPLIFIER	4-2
4.8	OUTPUT AMPLIFIER	4-2
4.9	POWER SUPPLY	4-2
4.10	MODES OF OPERATION	4-2
SECTION 5	CALIBRATION	
5.1	FACTORY REPAIR	5-1
5.2	REQUIRED TEST EQUIPMENT	5-1
5.3	REMOVING GENERATOR COVERS	5-1
5.4	CALIBRATION	5-1
SECTION 6	TROUBLESHOOTING	6-1
6.1	INTRODUCTION	6-1
6.2	SAFETY	6-1
6.2.1	Precautions	6-1
6.2.2	Safety Check	6-1
6.3	CIRCUIT BOARD ACCESS	6-1
6.4	BASIC TECHNIQUES	6-1
6.5	TROUBLESHOOTING INDIVIDUAL COMPONENTS	6-2
6.5.1	Transistor	6-2
6.5.2	Diode	6-2
6.5.3	Operational Amplifier	6-2
6.5.4	FET Transistor	6-2
6.5.5	MOSFET Transistor	6-2
6.5.6	Capacitor	6-2
6.5.7	ECL Gate	6-2
6.6	FLOW CHARTS	6-2
SECTION 7	PARTS AND SCHEMATICS	
7.1	DRAWINGS	7-1
7.2	ORDERING PARTS	7-1
7.3	ADDENDA	7-1

SAFETY

This instrument is wired for earth grounding via the facility power wiring. Do not bypass earth grounding with two wire extension cords, plug adapters, etc.


BEFORE PLUGGING IN the instrument, comply with installation instructions.

MAINTENANCE may require power on with the instrument covers removed. This should be done only by qualified personnel aware of the electrical hazards.

The instrument power receptacle is connected to the instrument safety earth terminal with a green/yellow wire. Do not alter this connection. (Reference:  or  stamped inside the rear panel near the safety earth terminal.)

WARNING notes call attention to possible injury or death hazards in subsequent operations.

CAUTION notes call attention to possible equipment damage in subsequent operations.

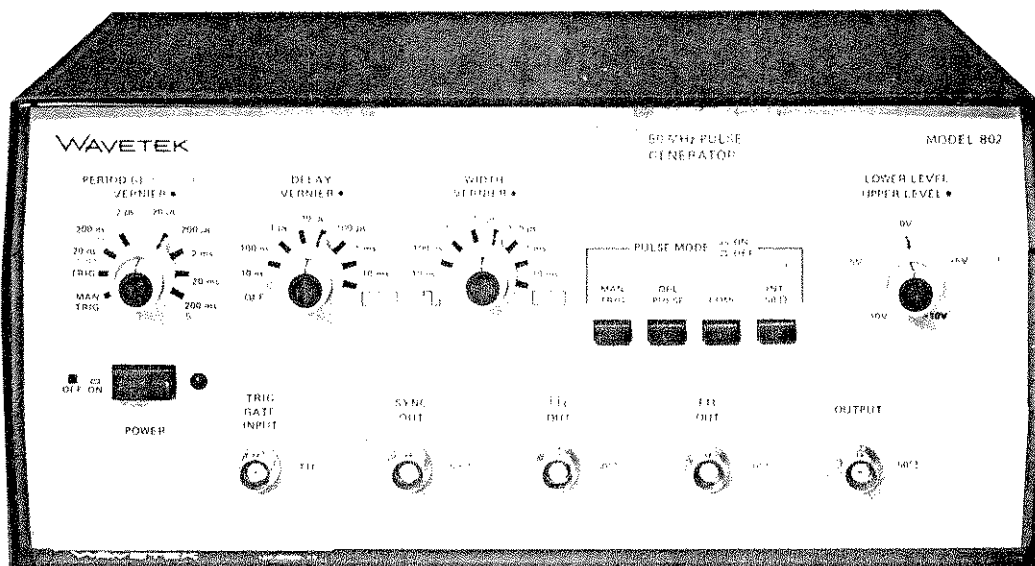

Model 802 50 MHz Pulse Generator

SECTION 1 GENERAL DESCRIPTION

1.1 THE MODEL 802

The Model 802 is a 50 MHz general purpose laboratory pulse generator. The instrument gives you full control in primary pulse triggering and shaping plus simultaneous TTL, $\overline{\text{TTL}}$ and sync pulses. The primary pulse output has controllability in rate, width, delay, upper level, lower level and a choice of positive, negative or complementary outputs. The TTL and $\overline{\text{TTL}}$ are of fixed levels and rise times that are standard for use with compatible devices. The primary pulse has rise and fall times of 5 ns or less.

The output is ± 10 volts with a 50Ω termination. Upper and lower pulse levels are fully adjustable through ± 10 volts, a 20 volt window. Termination may be internal, at the load or both.

Single pulses or pulse pairs may be triggered; pulse width may be trigger controlled; continuous pulses may be gated for a 'burst' output.

1.2 SPECIFICATIONS

1.2.1 Versatility

Four Simultaneous Pulse Outputs

Fixed TTL level sync, TTL and $\overline{\text{TTL}}$ outputs, and variable amplitude output pulses are available over a 5 Hz (200 ms) to 50 MHz (20 ns) frequency range.

For optimum pulse characteristics from the variable amplitude pulse output, an internal 50Ω load can be selected via a front panel control.

Operational Modes


Continuous: Generator oscillates continuously at selected frequency.

Triggered: Generator quiescent until triggered by external TTL pulse or front panel control, then generates one pulse.

Gated: Generator oscillates at the period rate selected by the front panel control when gate input is high. Generator quiescent when input is low. First cycle is synchronous with rising edge of gating signal.

Double Pulse: Same as continuous, triggered and gated, except two pulses for each period. Time to second pulse is controlled by delay control. Double pulse at all outputs except sync.

External Width: External signal at trigger input determines output pulse width and period as shown.

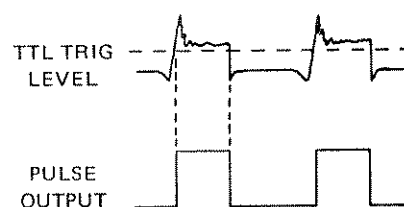

1.2.2 Pulse Outputs


Variable Amplitude Pulse

SOURCE	LOAD	DYNAMIC RANGE	AMPLITUDE	
			MAXIMUM	MINIMUM
50 Ω	50 Ω	+5V	5V	
		-5V	.5V	
1 k Ω	50 Ω	+10V	10V	
50 Ω	≥ 1 k Ω	-10V	1V	

Upper and lower pulse levels are independently adjustable. Pulse dynamic range is ± 10 V when load is 50Ω terminated and source is not (internal 50Ω off) or vice versa. Maximum pulse amplitude is 10V; minimum is 1V. Dynamic range and pulse amplitude are decreased by a factor of 2 when source and load are 50Ω terminated. Overshoot and ringing are less than $\pm 5\%$ of amplitude setting $+100$ mV when terminated into 50Ω at both load and source. Transition times are less than 5 ns.

Sync, TTL and $\overline{\text{TTL}}$ Pulses

Sync pulse levels from 50Ω ; TTL and $\overline{\text{TTL}}$ pulse levels into 50Ω termination.

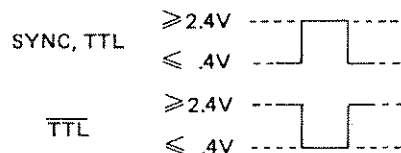

Transition times less than 7 ns into 50 Ω termination.

Normal/Complement Control

Normal pulse or its complement is selected. The normally quiescent and active levels are reversed in complement format. This control affects all outputs except sync pulse.

1.2.3 Time Domain

Period

Period range is from less than 20 ns to greater than 200 ms in 7 overlapping ranges. Period jitter is less than $\pm 0.1\%$ plus 50 picoseconds.


Width

Width range is from less than 10 ns to 10 ms in 6 overlapping ranges. Maximum duty cycle is 70% for periods to 200 ns, decreasing to 50% for 20 ns periods. Width selector switch also has a square wave detent and a customer-specified detent.* Duty cycle is $50 \pm 4\%$ to 2 μs period, changing to $50 \pm 15\%$ at 20 ns period. Width jitter is less than $\pm 0.1\%$ plus 50 picoseconds. Sync pulse duty cycle is $50 \pm 4\%$ of pulse period to 2 μs period, changing to $50 \pm 15\%$ at 20 ns period except in trigger and external width modes, in which case it is determined by the trigger signal.

Delay

Pulse occurrence can be delayed from less than 10 ns to 10 ms with respect to the sync pulse (not including fixed delay). Delay selector switch also has a customer-specified detent.* Maximum delay duty cycle is 70% for periods to 200 ns, decreasing to 30% for 20 ns periods.

Delay jitter is less than $\pm 0.1\%$ plus 50 picoseconds. Fixed delay is as shown.

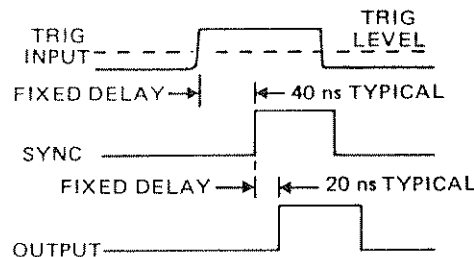

1.2.4 Input Characteristics

External Trigger

The circuit receiving the external trigger is TTL compatible. Triggering level is fixed at approximately 1.4V. Input impedance is greater than 500 Ω shunted by approximately 33 pF. Triggering and gating occurs on the rising edge of the input signal.

1.2.5 General

Environmental

Specifications apply at $25^\circ C \pm 5^\circ C$ after 30 minutes warm-up. Instrument will operate from $0^\circ C$ to $50^\circ C$.

Dimensions

28.1 cm (11 $\frac{1}{4}$ in.) wide; 14.4 cm (5 $\frac{3}{4}$ in.) high; 28.1 cm (11 $\frac{1}{4}$ in.) deep.

Weight

4.0 kg (8.9 lb) net; 5.4 kg (12 lb) shipping.

Power

108 to 132V or 216 to 250V; 50 to 400 Hz; 40 watts nominal.

*Customer-installed capacitor determines detent range.

SECTION 2

INSTALLATION

2.1 MECHANICAL INSTALLATION

After unpacking the instrument, visually inspect all external parts for possible damage to connectors, surface areas, etc. If damage is discovered, file a claim with the carrier who transported the unit. The shipping container and packing material should be saved in case reshipment is required.

2.2 ELECTRICAL INSTALLATION

2.2.1 Power Connection

WARNING

To preclude injury or death due to shock, the third wire earth ground must be continuous to the facility power outlet. Before connecting to the facility power outlet, examine extension cords, autotransformers, etc., between the instrument and the facility power outlet for a continuous earth ground path. The earth ground path can be identified at the plug on the instrument power cord; of the three terminals, the earth ground terminal is the nonmatching shape, usually cylindrical.

CAUTION

To prevent damage to the instrument, check for proper match of line and instrument voltage and proper fuse type and rating.

NOTE

Unless otherwise specified at the time of purchase, this instrument was shipped from the factory with the power transformer connected for operation on a 108 to 126 Vac line supply and with a 0.5 amp fuse.

Conversion to other input voltages requires a change in rear panel fuse-holder voltage card position and fuse according to the following table and procedure.

Card Position	Input Vac	Fuse (Slow Blow, 3 AG)
100	90 to 105	0.5 amp
120	108 to 126	0.5 amp
220	198 to 231	0.25 amp
240	216 to 250	0.25 amp

1. Open fuse holder cover door and rotate FUSE PULL to left to remove the fuse.
2. Select operating voltage by orienting the printed circuit board to position the desired voltage on the top left side. Push the board firmly into its module slot.
3. Rotate the FUSE PULL back into the normal position and insert the correct fuse into the fuse holder. Close the cover door.
4. Connect the ac line cord to the mating connector at the rear of the unit and the power source.

2.2.2 Signal Connections

Use 3 foot RG58U 50Ω shielded cables equipped with female BNC connectors to distribute input and output signals when connecting this instrument to associated equipment.

2.3 ELECTRICAL ACCEPTANCE CHECK

This checkout procedure verifies the generator operation. If a malfunction is found, refer to the Warranty in the front of this manual. A 2 channel oscilloscope and 50Ω coax cable are needed for this procedure (see figure 2-1).

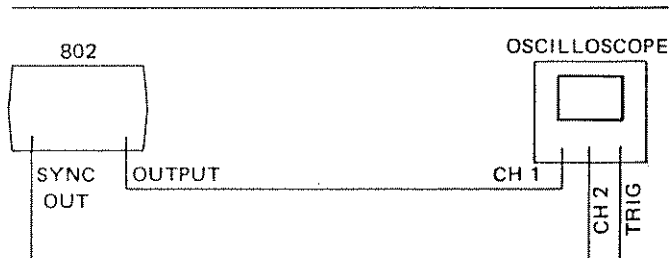


Figure 2-1. Initial Setup

Preset the pulse generator controls by setting the following switches to their white mark:

PERIOD/RATE
DELAY
WIDTH

Set the PULSE MODE switches OFF except set INT 50Ω ON.

Set the following controls to 12 o'clock:

PERIOD/RATE VERNIER
 DELAY VERNIER
 WIDTH VERNIER
 LOWER LEVEL
 UPPER LEVEL

Perform the steps in table 2-1. Only approximate values are required to verify operation.

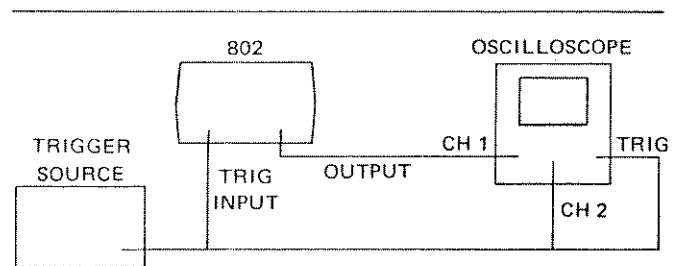


Figure 2-2. Second Setup

Table 2-1. Performance Checkout

Step	Control	Position/Operation	Observation
1	POWER	ON	CH 1: A near 0 volt dc level. (LEVEL control is not calibrated.) CH 2: Approximately 2.5 volt pulses.
2	LOWER LEVEL	Rotate ccw	Pulse base drops 10V.
3	UPPER LEVEL	Rotate ccw	Pulse upper level drops 10V.
4	UPPER LEVEL	Rotate cw. Make observation; then reposition for good display	Pulse rises 10V, then rises 10V more while pulling the base up 10V. Base rises to 0V.
5	COMP	ON then OFF	Set scope for one or two cycles. Observe the switching of duty time from first half cycle to second half cycle.
6	WIDTH	Rotate ccw, then to 10 μ s 100 μ s	Pulse width changes. (Use scope X 10 magnification to see narrow widths.)
7	WIDTH VERNIER	Rotate ccw, then to 12 o'clock	Pulse width decreases, then increases.
8	DELAY	Rotate cw to 10 μ s 100 μ s	Pulse delay changes within cycle time.
9	DELAY VERNIER	Rotate ccw, then cw	Pulse delay moves to left, then right.
10	PERIOD/RATE VERNIER	Rotate cw, then to 12 o'clock	Period increases, then decreases.
11	DBL PULSE	ON.	Two pulses instead of one.
12	DELAY VERNIER	Rotate ccw, then cw, but maintain double pulse	Pulse pairs move closer, then further apart.
13	WIDTH VERNIER	Rotate ccw, then to 12 o'clock, but maintain double pulse	Pulse width of each pulse of pulse pair decreases, then increases.
14	OUTPUT	Remove cable; place on TTL connector	TTL double pulse output.
15	TTL OUT	Remove cable; place on $\overline{\text{TTL}}$ connector	$\overline{\text{TTL}}$ double pulse output complement of previous output.

Table 2-1. Performance Checkout (Continued)

Step	Control	Position/Operation	Observation
16		Change to setup in figure 2-2; trigger with a 10 kHz signal; adjust scope for best display	One pulse on CH 2; set of pulses on CH 1.
17	WIDTH	Rotate to 	One pulse on CH 1; one pulse on CH 2.
18	MAN TRIG	ON	Repeated operation makes pulse pair observable.

3

SECTION 3 OPERATION

3.1 CONTROLS AND CONNECTORS

The generator controls and connections are shown in figure 3-1 and keyed to the following descriptions.

- ① **PERIOD/RATE Switch** — Selects one of seven ranges of pulse period calibrated in seconds and hertz. The TRIG detent holds the output at the inactive level until a TTL level trigger signal is applied at the TRIG GATE INPUT BNC. On the input rising edge, one pulse, or one double pulse, is output. The MAN TRIG detent is as the TRIG detent, except pressing the MAN TRIG switch generates the output.

NOTE

For continuous mode operation, low input or 50Ω termination to the TRIG GATE INPUT BNC must be removed.

- ② **DELAY Switch** — Selects one of seven ranges of pulse delay or time-to-second-pulse of double pulses, depending on DBL PULSE switch setting. OFF position of DELAY switch ensures minimum delay. The detent marked "C" is for customer selected range.

VERNIER Control — Varies the delay time within the range selected by the outer knob. Clockwise increases the delay.

- ③ **WIDTH Switch** — Selects one of seven ranges of pulse width or an approximate 50% duty cycle. The detent marked "C" is for customer selected range.

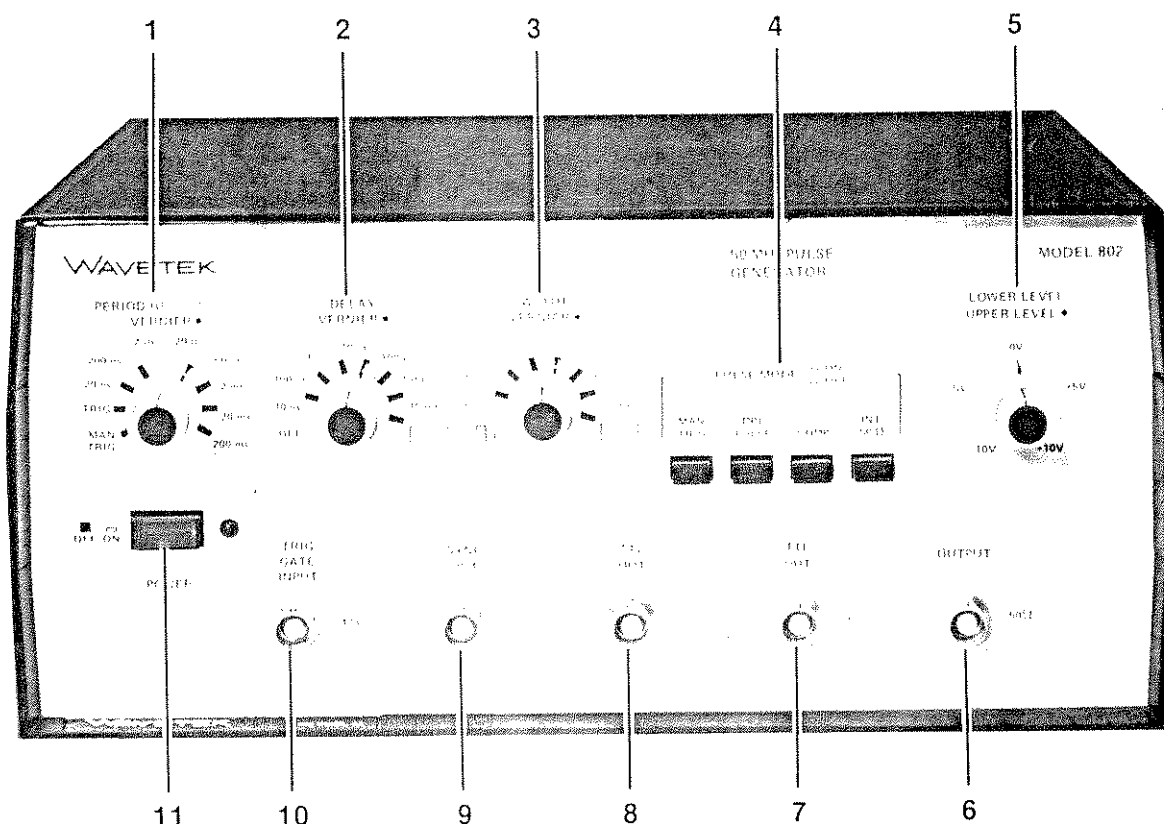


Figure 3-1. Controls and Connections

VERNIER Control — Varies the pulse width within the range selected by the outer knob except in .

- ④ **MAN TRIG Switch** — Triggers the generator one time when pressed. Output depends on the mode selected.

DBL PULSE Switch — When ON, a double pulse occurs in each period. Time to leading edge of second pulse is controlled by the DELAY setting. When OFF, one pulse occurs in each period.

COMP Switch — Selects a normal pulse when OFF or its complement when ON, which swaps the active and quiescent levels. Affects all outputs, except SYNC.

INT 50Ω Switch — When ON, the output current source is 50Ω terminated internally. When OFF, the current source has greater than 1 kΩ impedance.

- ⑤ **LOWER LEVEL Control** — Outer knob sets the lower level of the OUTPUT pulse, which may be varied from -10 to +10 volts into a single 50Ω termination or -5 to +5 volts into a double 50Ω termination. Maximum pulse heights are 10 and 5 volts, respectively.

UPPER LEVEL Control — Inner knob sets the upper level of the OUTPUT pulse. Upper level range is identical to that stated for the lower level.

- ⑥ **OUTPUT Connector** — The main output of the generator. Pulses from this output may be controlled in level as well as frequency and width.

- ⑦ **TTL OUT Connector** — An output with a transistor-transistor-logic level pulse whose occurrence and duration are controllable. Normal pulse level is <0.4V quiescent, > 2.4V active into a 50Ω termination. Levels are reversed for the complement pulse.

- ⑧ **TTL OUT Connector** — An output like the TTL output ⑦ except active and quiescent levels are reversed.

- ⑨ **SYNC OUT Connector** — A TTL level output from a 50Ω source. Square wave in all modes except external width and external trigger modes, in which pulse width is determined by trigger pulse width.

- ⑩ **TRIG GATE INPUT Connector** — Accepts an external TTL level signal to trigger or gate the generator. Triggers on rising edge of input. Gates off when level is at a TTL low level.

- ⑪ **POWER Switch** — Pulse generator on/off switch features red power-on indicator light and black/white changing switch surface for off/on indication.

3.2 NOTES ON OPERATION

3.2.1 Modes

The following modes of operation are available and selectable as described herein.

Continuous — For a continuous stream of pulses, the PERIOD switch must be in any position except TRIG or MAN TRIG and the TRIG GATE INPUT BNC must be free of input signals and 50Ω terminations.

Triggered — For a pulse, or pulse pair, triggered by an external signal, the PERIOD switch must be set to TRIG and a TTL level square pulse must be present at the TRIG GATE INPUT. Triggering occurs on the trigger pulse rising edge.

Manually Triggered — For a pulse, or pulse pair, triggered by the MAN TRIG switch, the PERIOD switch must be set to MAN TRIG.

Gated — For continuous pulses for the duration of a gate signal, the PERIOD switch must be in any position except TRIG or MAN TRIG and a TTL level square pulse must be input to the TRIG GATE INPUT BNC. For manual gating, place a 50Ω termination on the TRIG GATE INPUT BNC to disable the generator output. Push the MAN TRIG switch to gate an output.


External Width — For pulses whose widths are determined by an external signal, the PERIOD switch must be set to TRIG and the WIDTH switch must be set to .

3.2.2 White Marks

When first becoming familiar with the 802, the white mark settings are handy. The white mark settings for the front panel switches will always give a 50 to 500 kHz sync signal when power is on. The same settings will give 50% duty cycle TTL, TTL and output pulses; the LOWER LEVEL/UPPER LEVEL control may need adjusting to observe the output on an oscilloscope. Once the output is observed, each control can be adjusted and observed until the desired result is obtained.

3.2.3 Pulse Width and Delay

Narrow duty cycle pulses require a normal output (COMP OFF) while greater than 70% duty cycle pulses require the COMP ON setting to allow the width circuitry sufficient recovery time. When using DELAY time, ensure that delay ≤ 70% of PERIOD and width ≤ 70% of PERIOD.

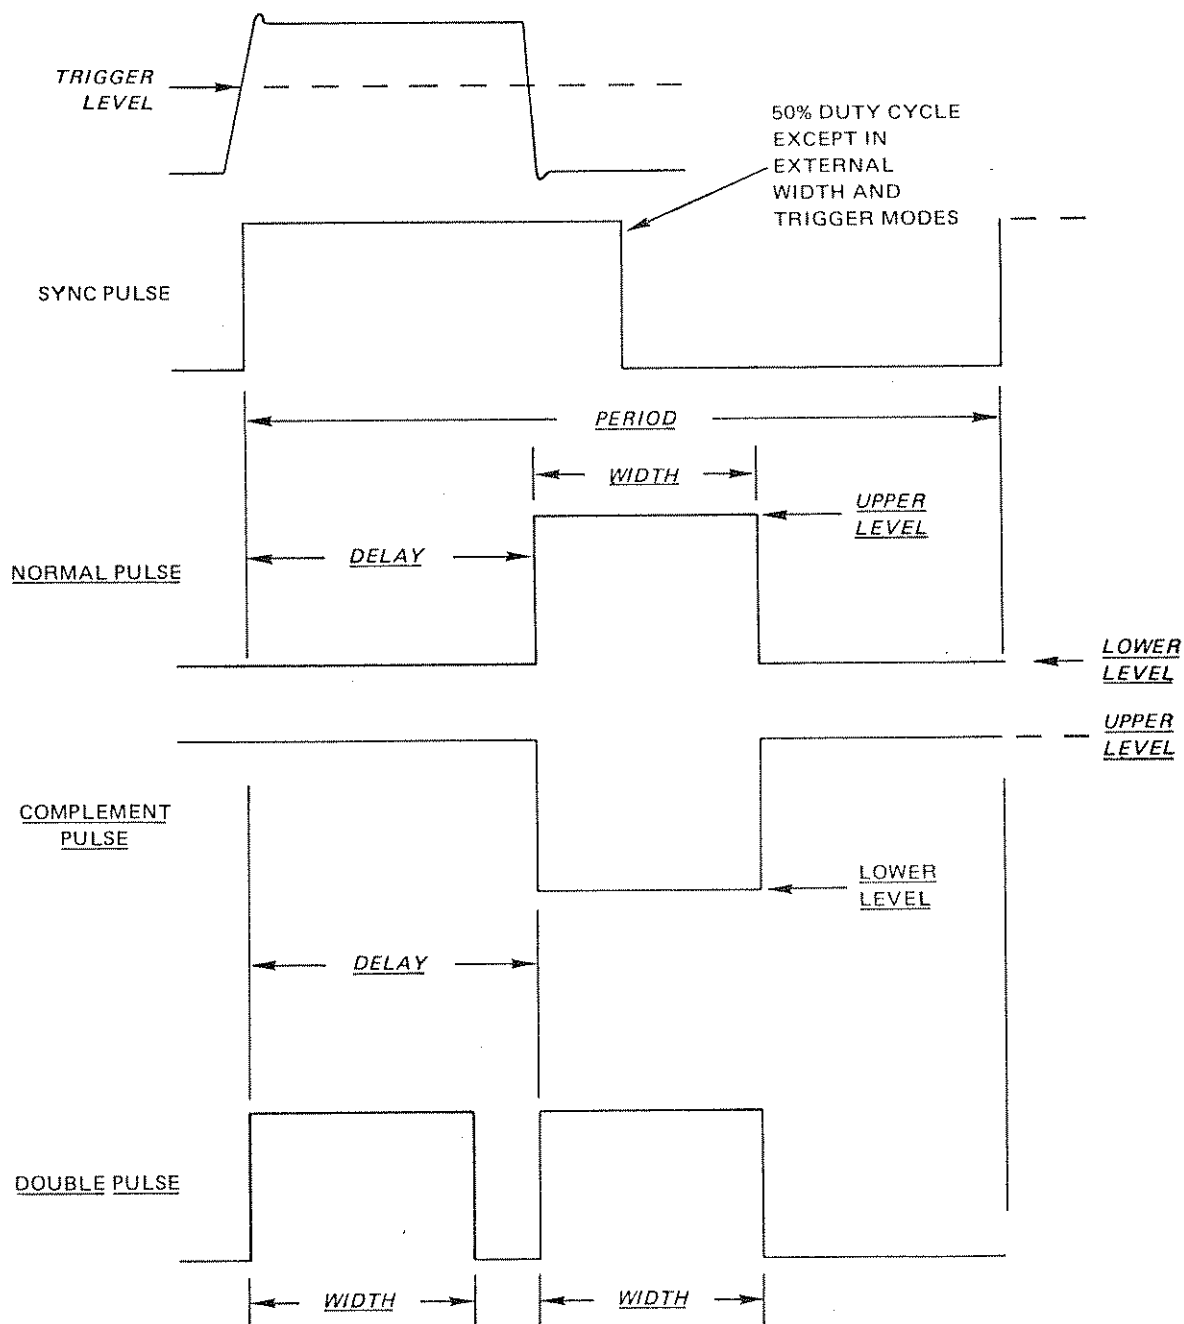

NOTE: Underline indicates a front panel controlled parameter.

Figure 3-2. Pulse Parameters

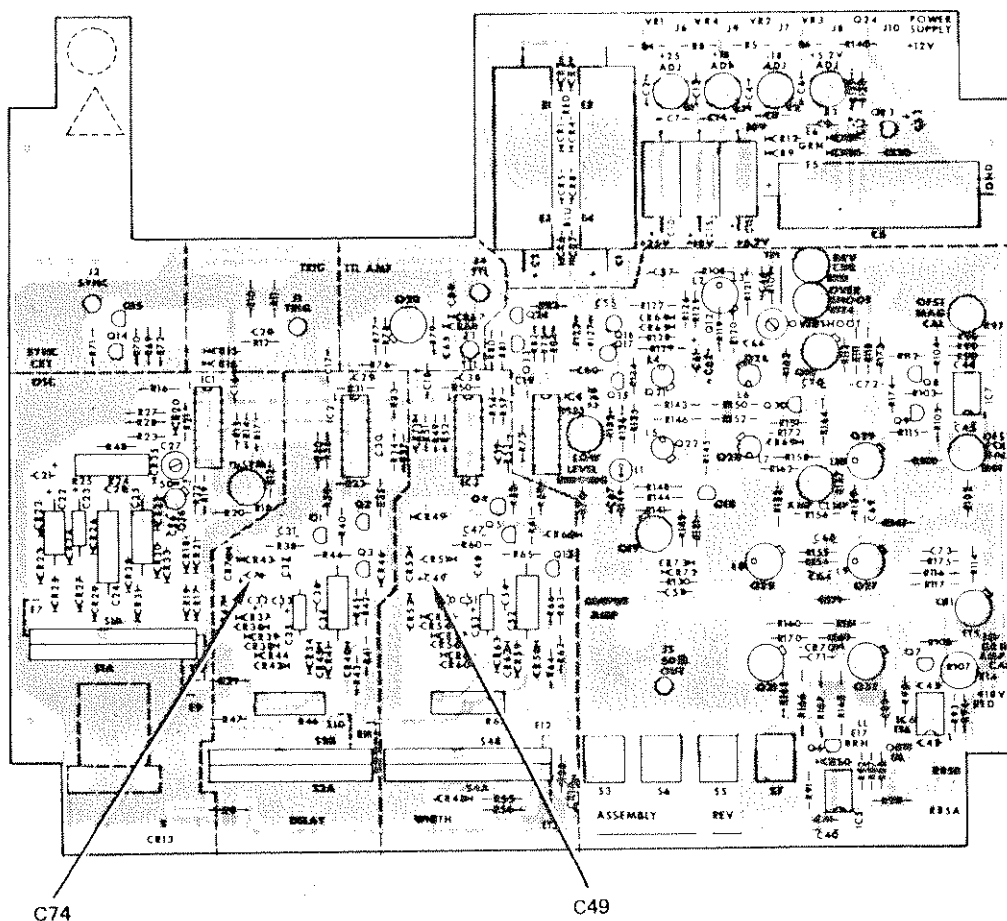


Figure 3-3. Placement of Customer Option Capacitors

The $\square$ width setting gives a 50% duty cycle in continuous mode, when TRIG or MAN TRIG is selected on the PERIOD switch, the pulse width is determined by the trigger signal width. This is external width mode of operation.

Table 3-1. Capacitance and Range

Delay or Width Range	Capacitance
10 ns - 100 ns	None
100 ns - 1 μ s	2000 pF
1 μ s - 10 μ s	0.02 μ F
10 μ s - 100 μ s	0.2 μ F
0.1 ms - 1 ms	2.0 μ F
1 ms - 10 ms	20 μ F
10 ms - 100 ms	200 μ F
0.1s - 1s	2000 μ F

The unmarked detent on the DELAY switch and WIDTH switch can be any desired range by placing appropriate capacitors on the circuit board, as shown in figure 3-3. Refer to table 3-1 for typical capacitance and range.

3.2.4 Output Terminations

Only 50 Ω RG58U cables should be used to connect the 802 to the circuit under test. Either the INT 50 Ω should be ON or a 50 Ω 2W load should be used at the circuit end of the cable. For best pulse fidelity, a 50 Ω load at both the source and the load is required.

As shown in figure 3-4, the combinations of load and source impedances determine the output pulse amplitude range

SOURCE	LOAD	DYNAMIC RANGE	AMPLITUDE	
			MAXIMUM	MINIMUM
50Ω	50Ω	+5V -5V	5V	.5V
* 1 kΩ	50Ω	+10V	10V	1V
OR	50Ω	-10V		
50Ω	≥ 1 kΩ			

* 1 kΩ is the unterminated source impedance of the OUTPUT.

Figure 3-4. Load and Source Terminations

and the dynamic range. As shown, when a greater than 5V pulse is desired, only one 50Ω termination can be used, and the placement of the termination can optimize the pulse purity. In this case, the capacitance of the circuit being driven must be considered. For capacitive loads greater than 20 pF, reflections on the line are most effectively absorbed by the 50Ω termination at the 802 (INT 50Ω switch ON). For capacitive loads less than 20 pF, the 50Ω termination should be placed at the load side of the line. When a less than 5V pulse is required, a 50Ω termination at each end of the line is recommended for optimum pulse purity.

The 50Ω terminations should always be used on the SYNC, TTL and TTE outputs.

3.2.5 Duty Cycle

Always use the lowest range possible for both delay and width functions. This will reduce the recovery time of the circuit one-shots and extend the maximum duty cycle of the 802 to its fullest capability.

3.2.6 Output Mixing

By triggering a second 802 from the sync output of the first 802 and then mixing their outputs in a common load, three level signals can be created, as shown in figure 3-5.

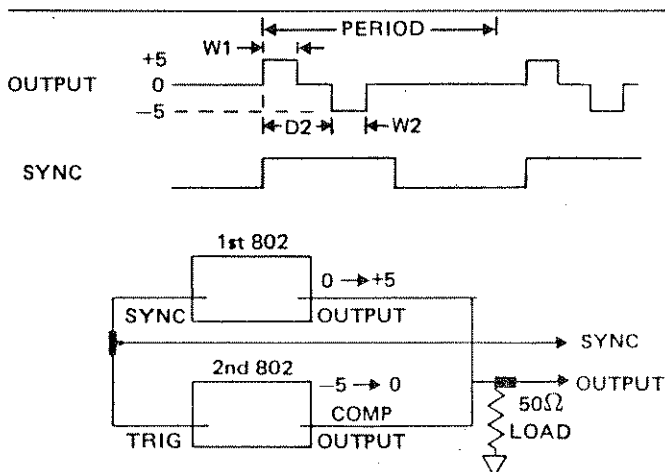


Figure 3-5. Output Mixing

3.2.7 Precise Output Levels

Many times when testing a circuit, it is desirable to lock the output of the generator at either the high or low level. A precise measurement of this level may then be obtained using a DVM.

To lock the output at high or low level, select EXT TRIG and  with no TRIG GATE INPUT. Use the COMP ON/OFF switch to select high and low level outputs.

3.2.8 Fixed Delay

A fixed delay of 20 ns has been incorporated within the 802 to ensure that the leading edge is visible on the scope. If this delay is not desired, simply increase the length of the sync cable coax at the rate of 1.5 ns/ft to obtain the desired result.

3.2.9 Two Phase Clocking

If a secondary 802 is triggered by the sync out from the primary 802, a two phase nonoverlapped clock source can be obtained as shown in figure 3-6.

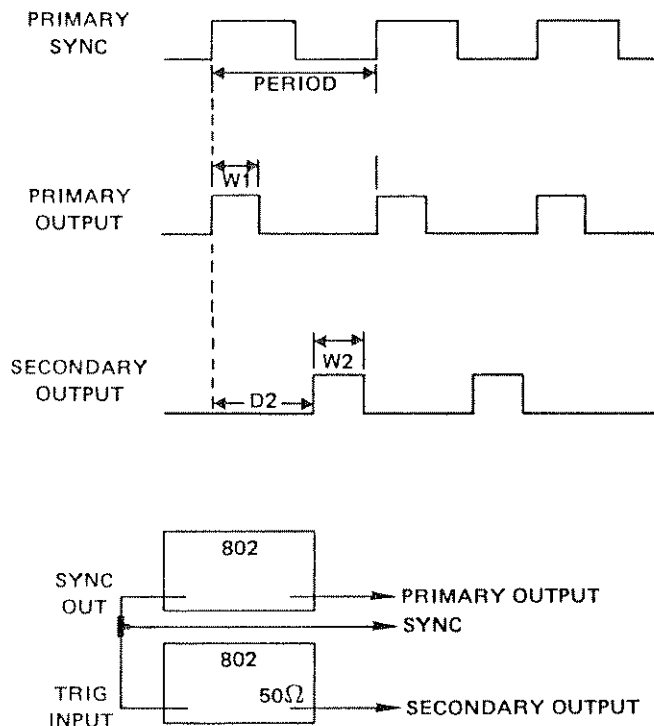


Figure 3-6. Two Phase Clock Generation

3.2.10 Rise Time Measurements

When measuring rise time in a linear device under test, the error induced by the rise time of the testing system must be considered. For example, when observing the 802 rise time on an oscilloscope, 802 rise time is

$$t_{\text{observed}}^2 = t_{\text{scope}}^2 + t_{802}^2$$

or

$$t_{802} = \sqrt{t_{\text{observed}}^2 - t_{\text{scope}}^2}$$

That is, the observed rise time must be corrected for by the inherent oscilloscope rise time to determine the actual 802 rise time. Extending the method to include a circuit under test will determine circuit under test rise time:

$$t_{\text{observed}}^2 = t_{802}^2 + t_{\text{scope}}^2 + t_{\text{c.u.t.}}^2$$

or

$$t_{\text{c.u.t.}} = \sqrt{t_{\text{observed}}^2 - t_{802}^2 - t_{\text{scope}}^2}$$

3.3 OPERATION

In the following descriptions of operation, observe the pulse on an oscilloscope. In continuous mode, trigger oscilloscope on SYNC OUT. In all other modes, trigger on the trigger signal. (See figure 3-2 for pulse parameters.)

Observe the following constraints:

Delay $\leq$ 70% of period.

Width $\leq$ 70% of period.

3.3.1 Continuous Pulses

Set the controls (and connectors) as follows:

Control	Operation
TRIG GATE INPUT Connector	No signal present
INT 50 Ω Switch	ON
PERIOD Switch	Desired range setting
Other Controls	Set as desired

3.3.2 Wide Duty Cycle Pulses

For wider pulses than those that can be normally obtained, set up for a pulse with the complemented width, then press the COMP pulse switch ON. For example, if a 95 ns pulse with a 125 ns repetition rate is desired:

$$125 \text{ ns} - 95 \text{ ns} = 30 \text{ ns}$$

Set up for a 30 ns pulse, then press the COMP switch ON. (See figure 3-7.)

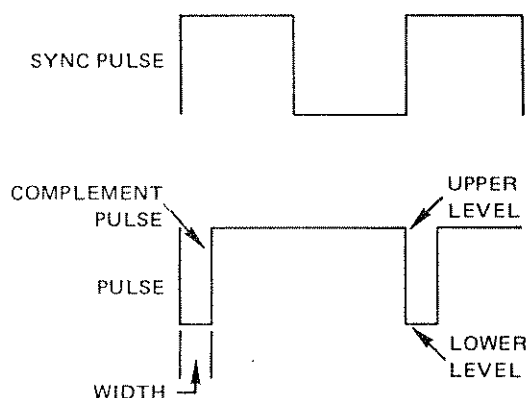


Figure 3-7. Greater Than 70% Duty Cycle Pulse

3.3.3 Externally Triggered Pulses

Set controls (and connectors) as follows:

Control	Operation
PERIOD Switch	TRIG
TRIG/GATE INPUT Connector	Apply TTL rectangular pulse
INT 50 Ω Switch	ON
WIDTH Switch	Set to range desired (but not $\square$)
Other Controls	Set as desired.

3.3.4 Manually Triggered Pulses

Set controls (and connectors) as follows:

Control	Operation
PERIOD Switch	MAN TRIG
INT 50 Ω Switch	ON

Control	Operation
WIDTH Switch	Set to range desired (but not $\square$)
MAN TRIG	Push to trigger
Other Controls	Set as desired

3.3.5 Gated Pulses

Set up as in paragraph 3.3.1, except set the width of the TRIG GATE INPUT pulse to allow the desired number of output pulses.

3.3.6 Pulses With Width Controlled Externally

Set up as in paragraph 3.3.3, except set WIDTH switch to $\square$.

3.3.7 Double Pulses

For double pulses in any mode, additionally set controls as follows:

Control	Operation
DBL PULSE	ON
DELAY	Set for desired time between start of first pulse and second pulse of pulse pairs. (Since the same one-shot forms both pulses, a minimum recovery time is necessary.)

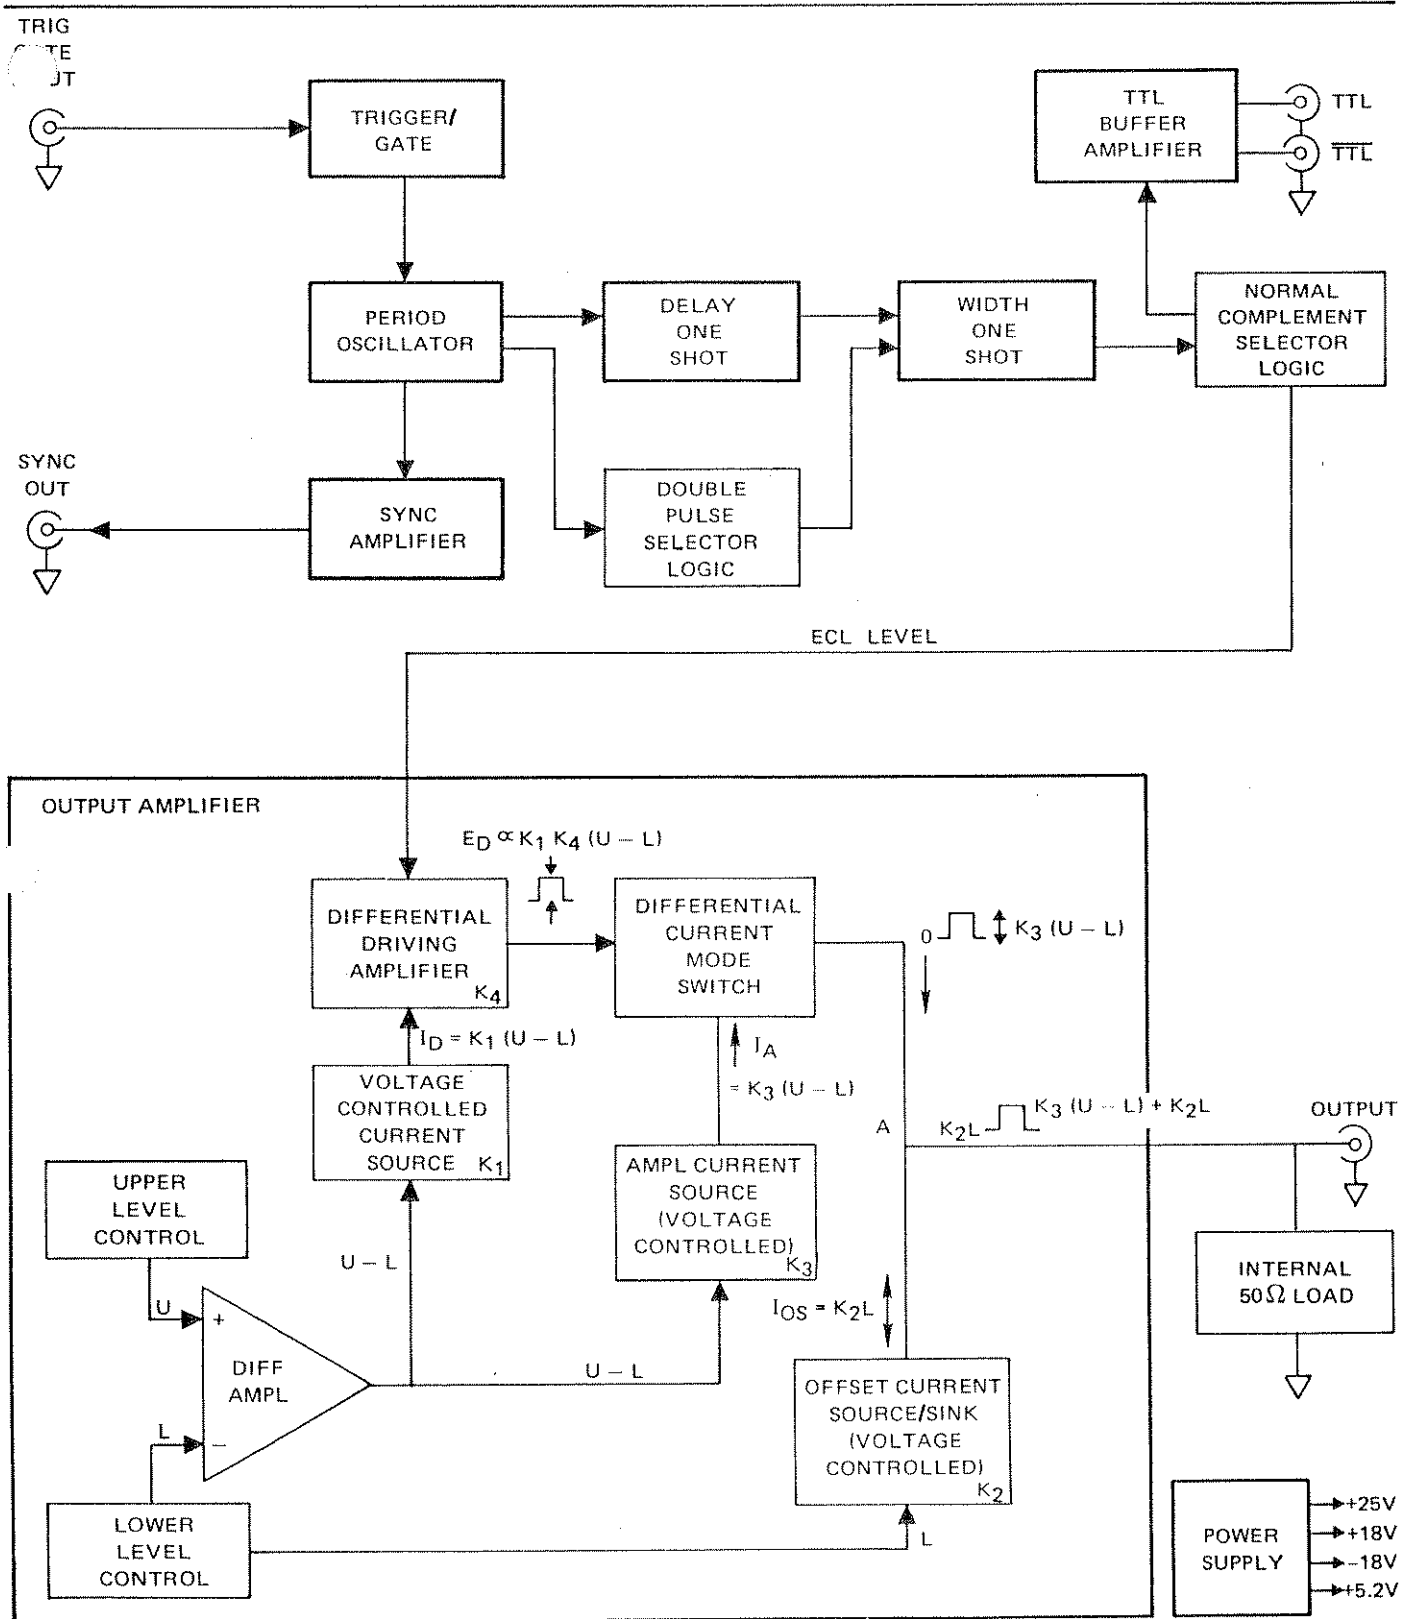


Figure 4-1. Overall Block Diagram

4

SECTION 4

CIRCUIT DESCRIPTION

4.1 OVERALL BLOCK DIAGRAM

The Model 802 is made up of eight major circuit blocks: trigger/gate circuit, period oscillator, sync amplifier, delay one shot, width one shot, TTL buffer amplifier, output amplifier, and a power supply. (See figure 4-1.)

All the circuitry is on one PC board with a combination of ECL logic gates and discrete semiconductor devices. The ECL logic, in addition to making up individual circuit blocks, serves as a signal coupling medium between the blocks. The signal path changes depending on the mode selected.

4.2 PERIOD OSCILLATOR

A simplified diagram of the period oscillator, an ECL multivibrator, appears in figure 4-2.

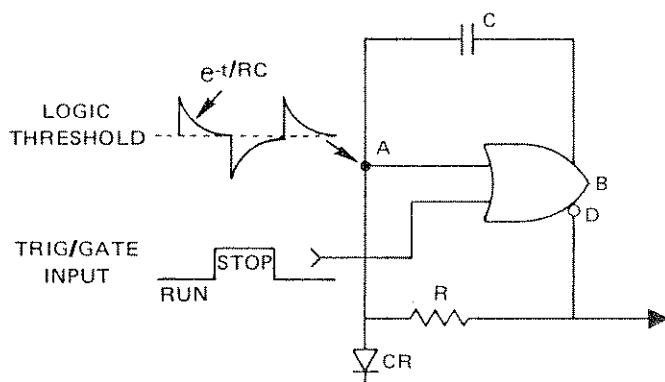


Figure 4-2. Simplified Diagram of the Period Oscillator

The RC time constant determines the charge and discharge rates for capacitor C and, therefore, the frequency of operation.

Positive feedback via the path through C results in a stable oscillator. Varying resistor R changes the frequency over a 10:1 range. Note that since the charging and discharging current are equal but opposite, the resulting waveform has a 50% duty cycle.

The oscillator may be gated via the trig/gate input. Whenever this input is high, it forces output D low and stops the oscillator. The oscillator starts synchronously when the input goes low.

4.3 TRIGGER/GATE CIRCUIT

The trigger circuit consists of an ECL gate connected to provide positive feedback which forms a Schmitt trigger. An input divider adjusts the trigger level to approximately +1.4V. This makes the input compatible with TTL logic. Triggering always occurs on the positive edge and the source can be either external or internal via the manual trigger switch.

The output of the trigger circuit is always connected to the oscillator. Gating occurs automatically. Whenever the input to the trigger circuit is 1.4V, it forces the trig/gate input of the oscillator high (figure 4-2) and stops the oscillator.

When the trigger mode is selected, node A of the oscillator is pulled low via diode CR. The IC now acts as an inverter to the trig/gate input and passes the signal on to the delay one shot.

4.4 SYNC CIRCUIT

The sync circuit acts as a buffer amplifier between the oscillator and the external equipment. It provides a TTL output level from a 50Ω source. The output from the sync circuit is an approximate square wave at the oscillator frequency.

When gating the generator, the sync signal should be taken from the gating source rather than the 802.

4.5 DELAY CIRCUIT

The delay one shot allows an adjustable time between the sync output and the leading edge of the final output pulse. The delay circuit consists of an ECL gate and discrete circuit one shot multivibrator. When the delay circuit is triggered by the oscillator, a timing capacitor is discharged by a constant current source until a threshold point is reached. The circuit then resets by rapidly recharging the timing capacitor. The output pulse from the ECL gate has a width proportional to the timing capacitor value and the magnitude of the current source. The pulse width is independent of the triggering rate as long as it is less than 70% of the trigger period.

4.6 WIDTH CIRCUIT

The width one shot determines the width of the output pulse. The width circuit, triggered by the trailing edge of the delay one shot, is identical in operation to the delay circuit. In the double pulse mode it is triggered on the leading and trailing edges of the delay one shot pulse. When the mode is selected, the delay and width one shots are disabled and the oscillator square wave passes through them to the output amplifier. An exclusive OR gate allows either phase of the width one shot output to be selected as the signal to drive the output amplifier.

4.7 TTL BUFFER AMPLIFIER

The output of the width one shot drives a current mode switch, the TTL buffer amplifier, in addition to the output amplifier. This switch is designed to drive TTL level signals into 50Ω loads. Both signal phases, TTL and $\overline{\text{TTL}}$, are available simultaneously.

4.8 OUTPUT AMPLIFIER

The output amplifier (figure 4-1) establishes the pulse lower level by passing a constant current through the 50Ω load. The current is provided by a voltage controlled current source programmed by the lower level control potentiometer. A current pulse of the proper amplitude is now added at node A to this base line for the duration of the width one shot time. The amplitude of the current pulse is equal to the difference between the upper and lower level controls ($U - L$). The upper level will be $(U - L) + L = U$ at the output.

In order to generate a current pulse, the width one shot drives a current mode switch via a driving amplifier. The current mode switch connects a current source to the load whenever the output of the width one shot is high. The current source is voltage controlled and its output is equal to the difference between the upper and lower level controls ($U - L$).

The output of the driving amplifier varies in amplitude directly with the output level programmed by the level controls. This prevents overdriving the current mode switch and distorting the output at low levels.

Note that changing the lower level control will change both the base line and the current pulse amplitude which will cause the upper level to remain fixed. That is $(U - L) + L = U$, regardless of the value of L .

The internal 50Ω load may be switched in or out depending on the application.

4.9 POWER SUPPLY

The power supply converts the line voltage to four regulated dc voltages which power all the other circuit blocks.

4.10 MODES OF OPERATION

The major circuit block connections depend on the mode of operation selected. Block diagrams of the major modes and key waveforms are shown in figures 4-3 through 4-8.

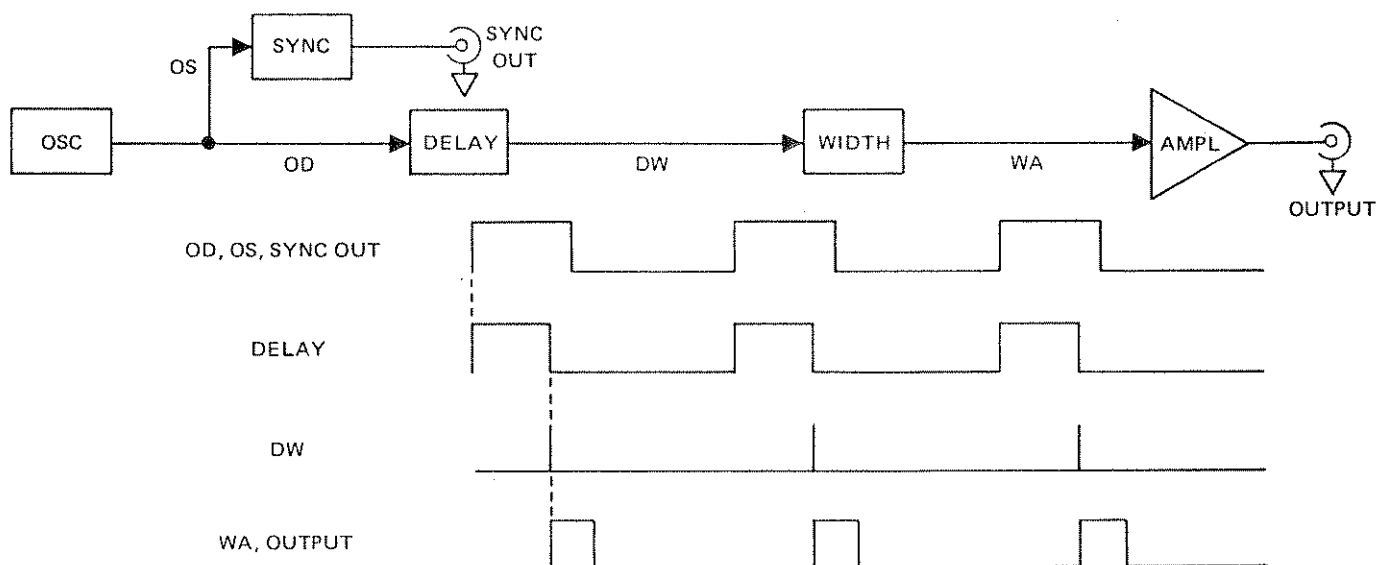


Figure 4-3. Continuous Mode

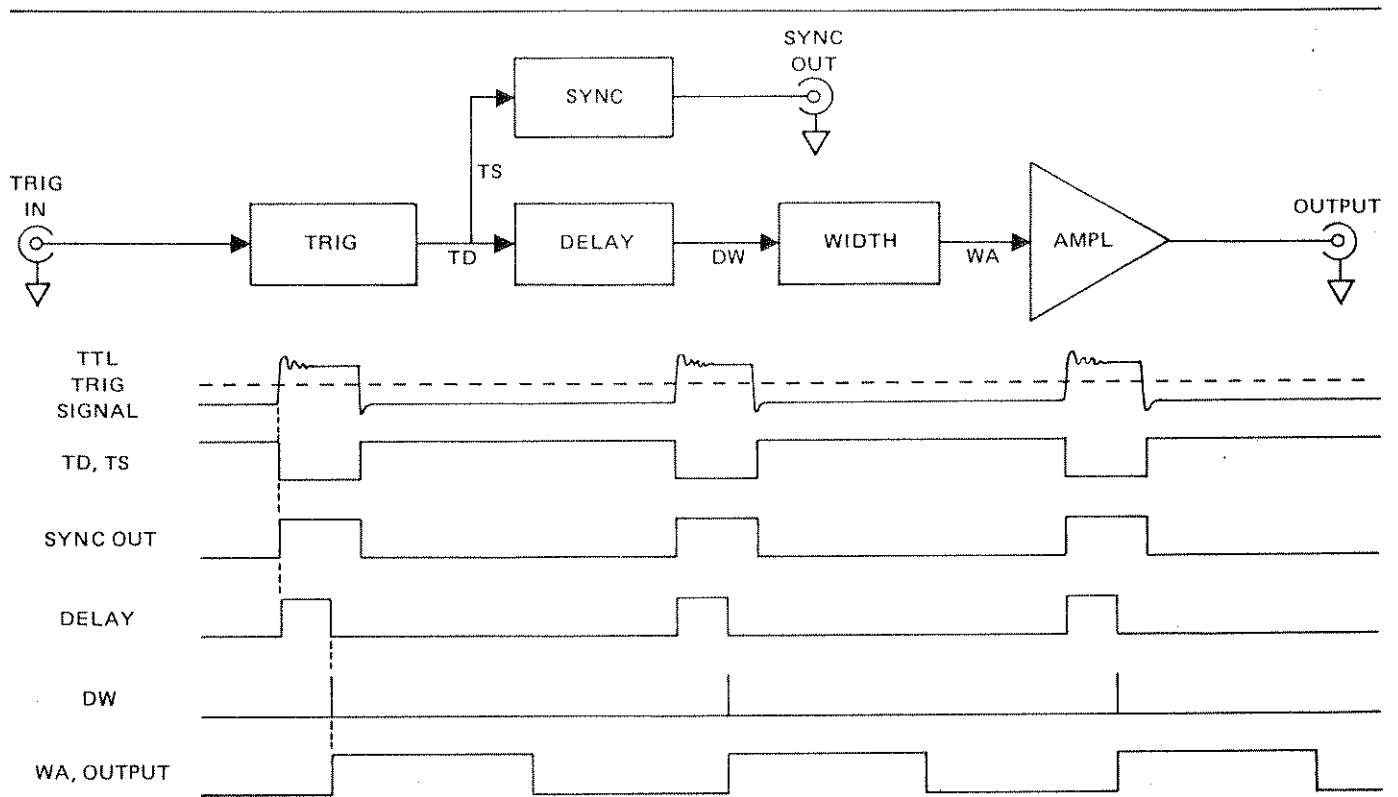


Figure 4-4. Trigger Mode

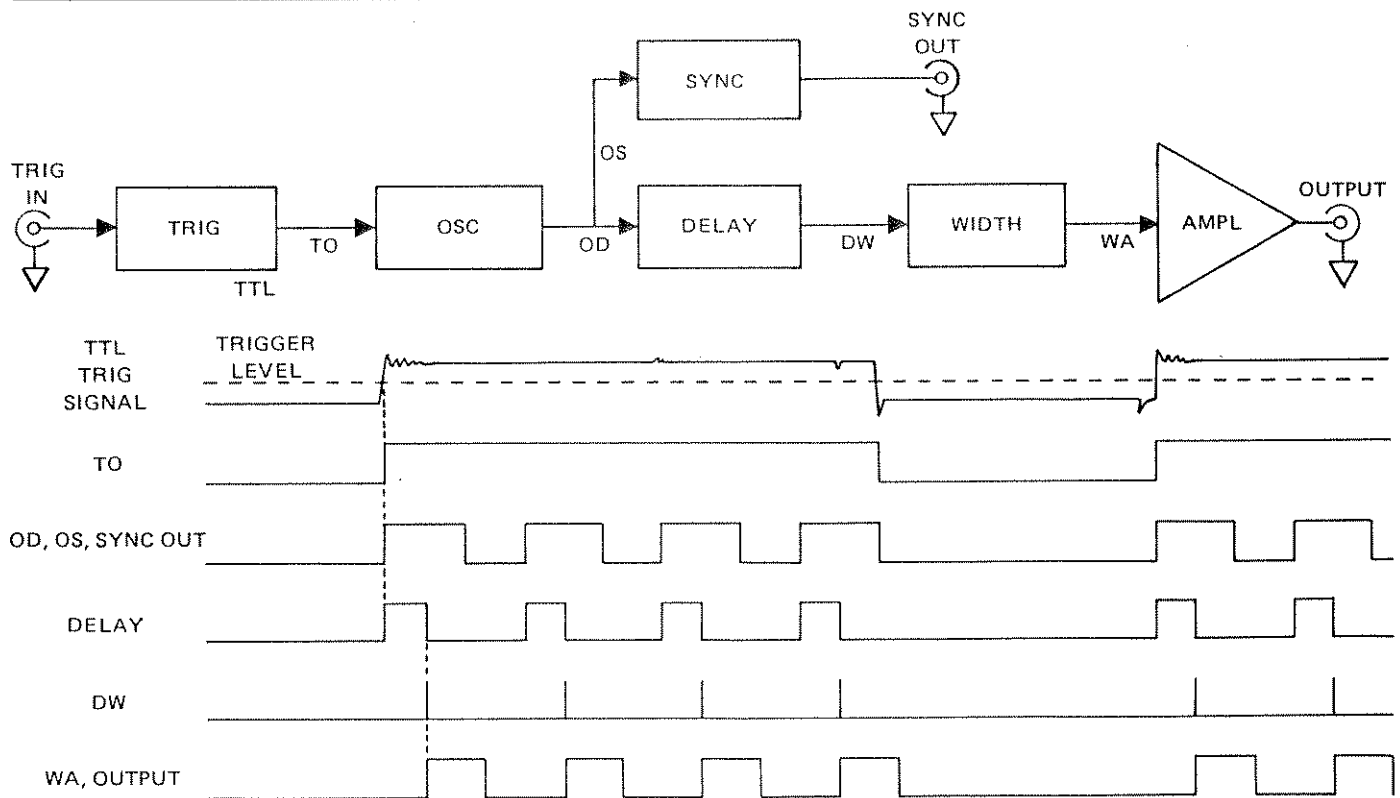


Figure 4-5. Gate Mode

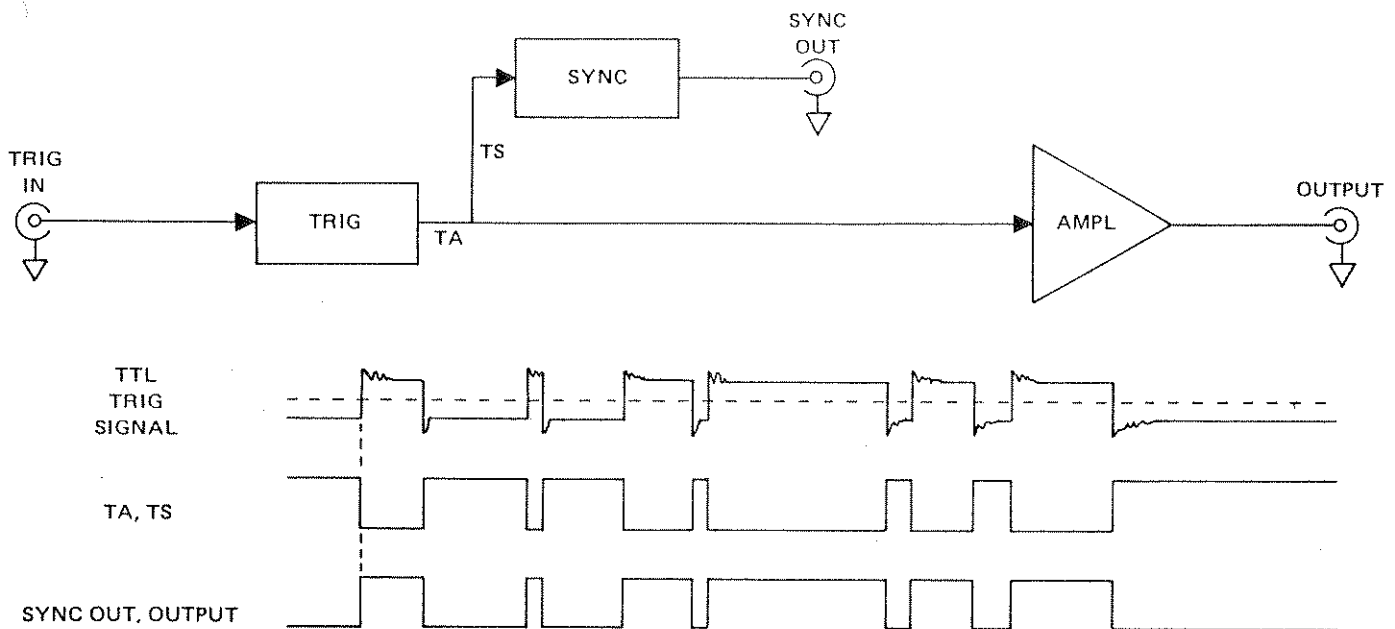


Figure 4-6. External Width Mode

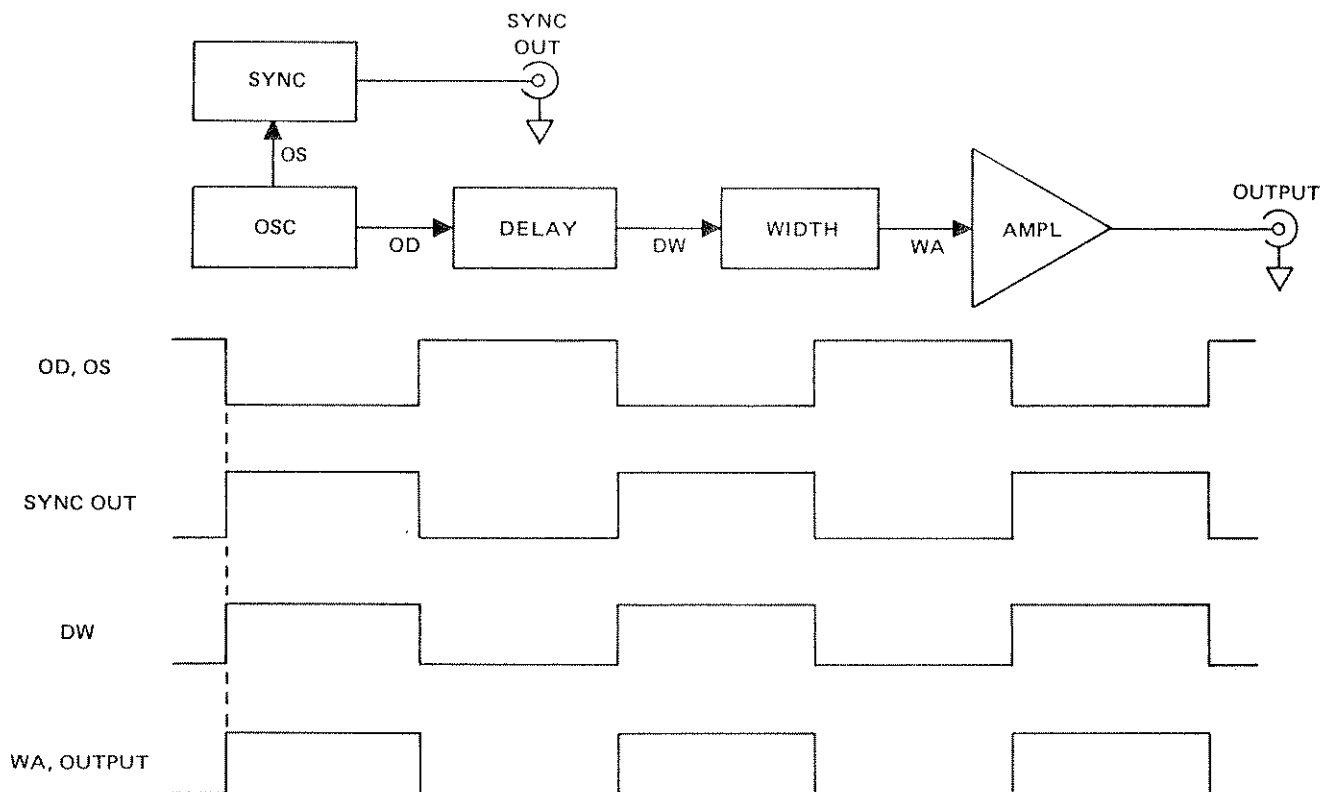


Figure 4-7. Continuous Square Wave Mode

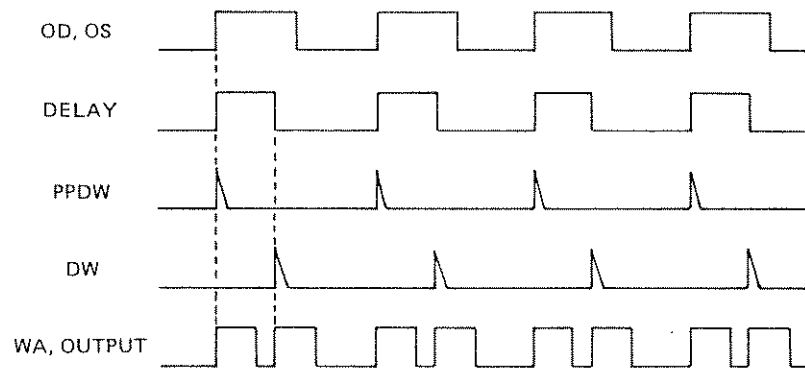
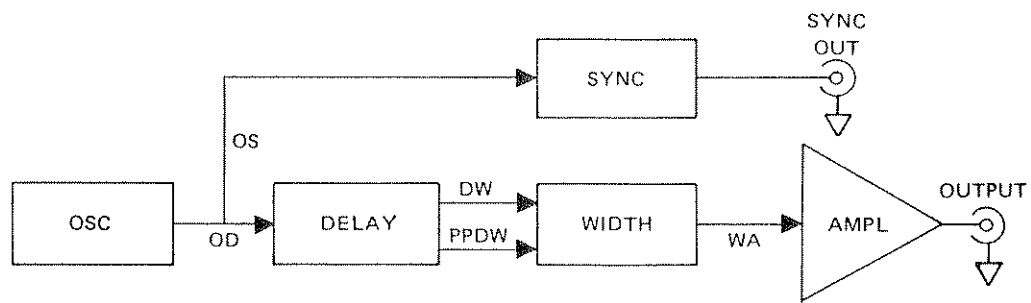


Figure 4-8. Continuous Double Pulse Mode

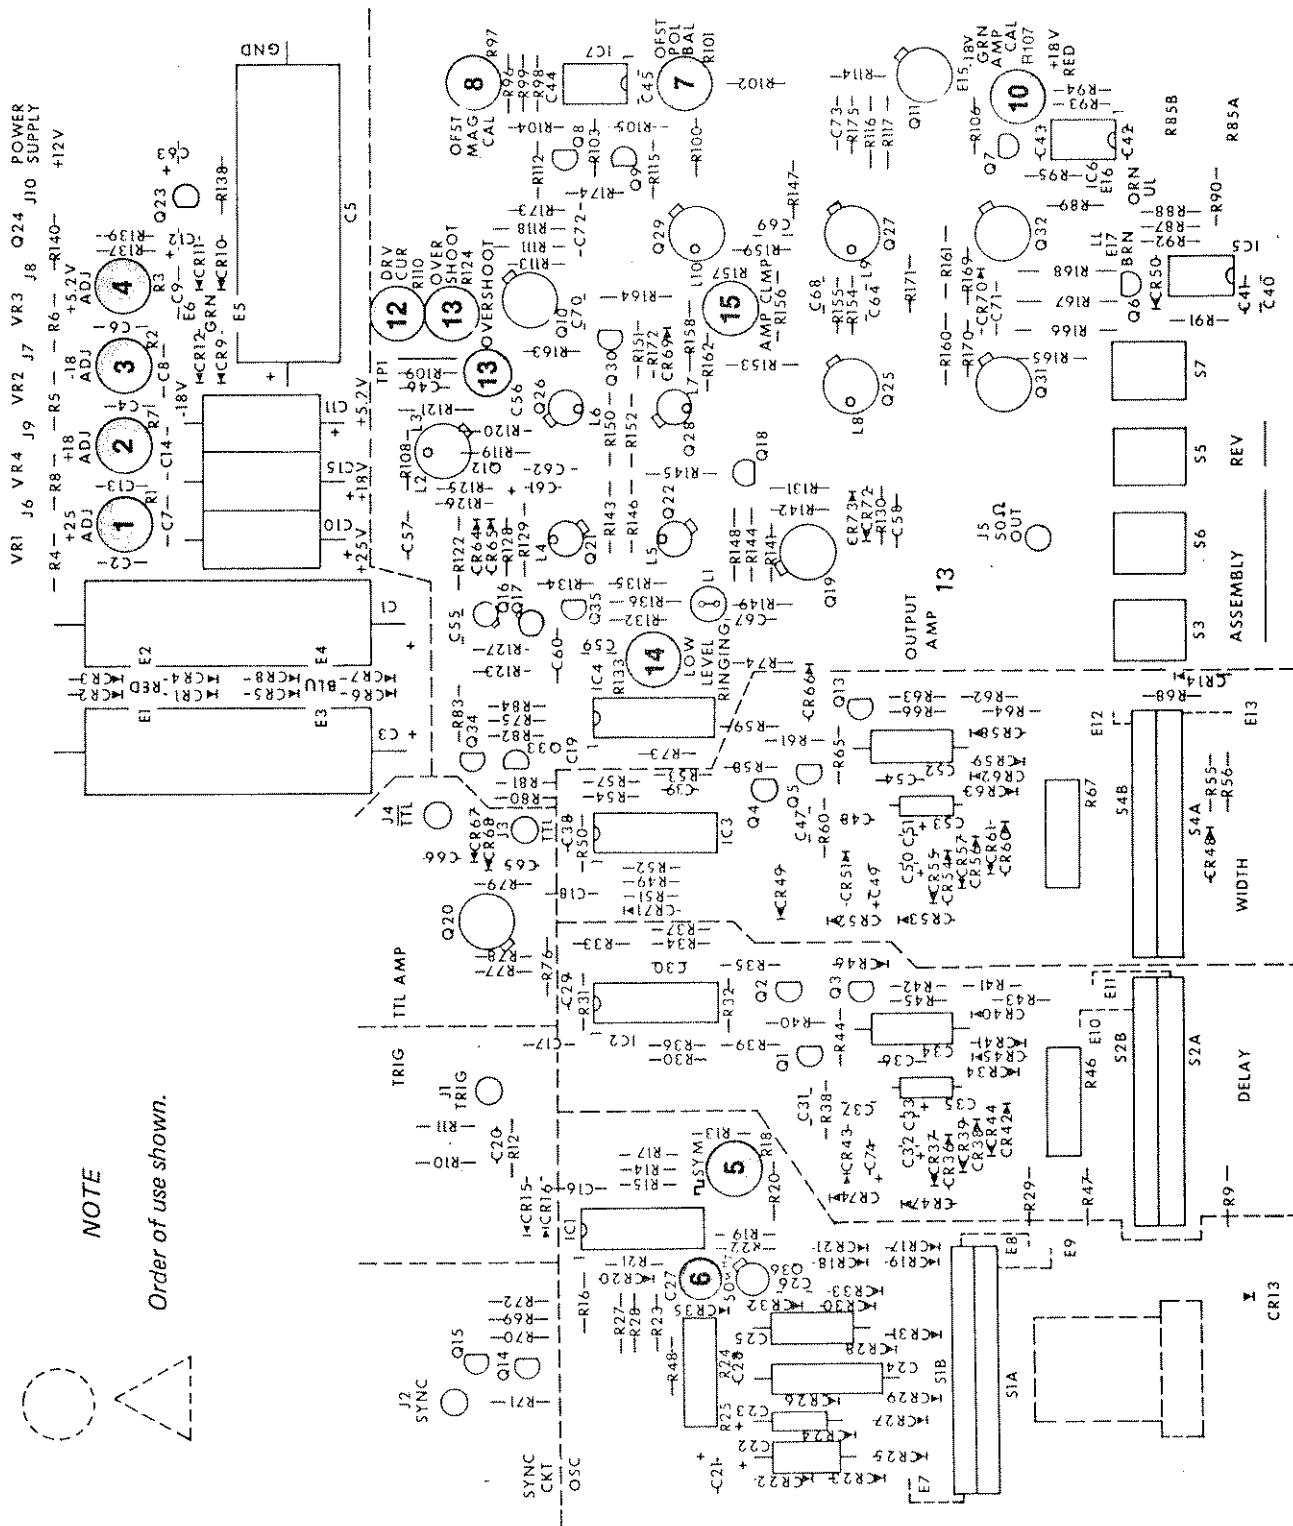


Figure 5-1. Calibration Points

5

SECTION 5

CALIBRATION

5.1 FACTORY REPAIR

Wavetek maintains a factory repair department for those customers not possessing the necessary personnel or test equipment to maintain the instrument. If an instrument is returned to the factory for calibration or repair, a detailed description of the specific problem should be attached to minimize turnaround time.

5.2 REQUIRED TEST EQUIPMENT

Voltmeter Millivolt dc measurement (0.1% accuracy)
 Oscilloscope, Dual Channel 500 MHz bandwidth
 Oscilloscope, Sampling 1 GHz bandwidth
 Counter 55.0 MHz (0.01% accuracy)
 50Ω Feedthru $\pm 0.1\%$ accuracy, 2W (3 ea)
 10 × 50Ω Feedthru Attenuator $\pm 0.1\%$ accuracy, 2W
 Function Generator 5 kHz , 4Vp-p
 RG58U Coax Cable 3 ft length BNC male contacts
 BNC Tee 1 male, 2 female connectors

5.3 REMOVING GENERATOR COVERS

1. Invert the instrument and remove the four screws in the cover.
2. Turn the instrument upright, remove the top cover, and remove the four screws securing the bottom cover.
3. Replace the cover and turn the instrument upside down.

NOTE

Remove the cover only when it is necessary to make adjustments or measurements.

5.4 ALIGNMENT

After referring to the following preliminary data, perform calibration, as necessary, per table 5-1. If performing partial calibration, check previous settings and adjustments for applicability. See figures 5-1 for calibration point location.

NOTE

The completion of the calibration procedure returns the instrument to correct alignment.

CALIBRATION LIMITS AND TOLERANCES ARE NOT INSTRUMENT SPECIFICATIONS

Instrument specifications are given in Section 1 of this manual.

1. Unless otherwise noted, all measurements made at the TTL, TTL or OUTPUT connectors must be terminated into a 50Ω ($\pm 0.1\%$) load.
2. Start the calibration by connecting the unit to an ac source and setting the front panel switches as follows:
 PERIOD 200 ns | 2 μs
 PERIOD VERNIER Full cw
 PULSE MODE OFF
 DELAY OFF
 WIDTH
 LOWER LEVEL - 10V
 UPPER LEVEL + 10V
3. Allow the unit to warm up at least 30 minutes for final calibration. Keep the instrument covers on to maintain heat. Remove covers only to make adjustments or measurements.

Table 5-1. Calibration Chart

Step	Check	Tester	Cal Points	Control Settings	Adjust	Desired Results	Remarks
1	Power Supply	DVM	—	—	R1	+25V $\pm 0.10V$	
2			—	—	R7	+18V $\pm 0.05V$	
3			—	—	R2	-18V $\pm 0.05V$	
4			—	—	R3	+5.2V $\pm 0.05V$	

Table 5-1. Calibration Chart (Continued)

Step	Check	Tester	Cal Points	Control Settings	Adjust	Desired Results	Remarks
5	Duty Cycle	Scope	TTL	R157: Full cw	R18	50% duty cycle $\pm 0.5\%$	
6				PERIOD: 20 ns $\uparrow$ 200 ms PERIOD VERNIER: Full ccw	C27	51 MHz (19.6 ns)	
7	Output Amplifier	DVM	OUTPUT	PERIOD: TRIG COMP: ON LOWER LEVEL: Full cw, then full ccw	R101	Equal cw & ccw voltage	Repeat steps 7 and once. Loosen and realign LOWER LEVEL knob at 0V, if necessary. Loosen and realign UPPER LEVEL knob at 0V, if necessary. Make sure mechanical interlock on knob is engaged.
8				LOWER LEVEL: Full cw	R97	+10.5V $\pm 0.05V$	
9				LOWER LEVEL: 0V on DVM			
10				UPPER LEVEL: Full cw COMP: OFF	R107	+10.5V $\pm 0.05V$	
11				UPPER LEVEL: 0V on DVM			
12	Overshoot & Ringing	Scope	TP1	UPPER LEVEL: Full cw	R110	-0.6V $\pm 0.05V$	Repeat steps 13 and 14 once. Maintain $\geq 5.1V$ pulse and ≤ 5 ns rise time. A slight readjustment of R110 may be necessary.
13			OUTPUT	INT 50 Ω : ON LOWER LEVEL: 0V	R124 C56	Minimum overshoot & ringing	
14				UPPER LEVEL: +0.5V	R133	Minimum ringing	
15	Overshoot & Rise Time			UPPER LEVEL: Full cw LOWER LEVEL: Make a +5V pulse	R157	Minimum overshoot	

6

SECTION

TROUBLESHOOTING

6.1 INTRODUCTION

This section is organized as follows:

- Safety
- Circuit Board Access
- Basic Techniques
- Troubleshooting Individual Components
- Flow Charts

Refer to paragraph 5.2 for required test equipment.

NOTE

Wavetek maintains a factory repair department for those customers not possessing the necessary personnel or test equipment to maintain the instrument. If an instrument is returned to the factory for calibration or repair, a detailed description of the specific problem should be attached to minimize turnaround time.

6.2 SAFETY

6.2.1 Precautions

Refer all servicing and calibration to a qualified electronic technician.

Always disconnect the power cord when working on this instrument, unless electrical measurements are being taken. Never attempt to isolate the safety ground lug of the power cord.

Be sure that the fuse rating is correct and that the line voltage selector card is set to the proper range (refer to section 2).

Line voltage is present on the circuit board of the ac power connector, *even when the power switch is off*. This voltage is only accessible if the shield is removed from the ac power connector.

6.2.2 Safety Check

Disconnect the power cord from facility power and check that the resistance from the cord earth ground terminal to

the instrument front panel metal is less than one ohm. Press the power switch on and measure the resistance between the instrument front panel metal and each of the power cord's two matching terminals. Resistance to each terminal should be greater than two megohms. Check the fuse for proper type and value. Remove the instrument covers and inspect the power supply and circuit boards for evidence of overheating or arcing. Check lines and cables for good physical connections. Correct any discrepancies detected.

6.3 CIRCUIT BOARD ACCESS

Remove the top cover (paragraph 5.3) for access to the circuit board. Remove the four screws securing the board to the bottom cover for access to the bottom of the board.

6.4 BASIC TECHNIQUES

Troubleshooting requires no special technique. Listed below are a few reminders of basic electronic fault isolation.

1. Check control settings carefully. Many times a seemingly malfunction is an incorrect control setting, or a knob that has loosened on its shaft.
2. Check associated equipment connections. Make sure that all connections are securely connected to the correct connector.
3. Perform the calibration procedure. Many out-of-specification indications can be corrected by performing specific calibration procedures.
4. Visually check the interior of the instrument. Look for such indications as broken wires, charred components and loose leads.
5. Try to isolate the problem to a specific circuit by checking generator operation in all modes and referring to the block diagrams for each mode (see figures 4-3 thru 4-8). After the problem has been isolated to a specific stage, check the dc operating voltages at the pins of all solid state devices within that stage.
6. Check the associated passive elements with a high impedance ohmmeter (instrument unplugged) before replacing a suspected semiconductor device.

6.5 TROUBLESHOOTING INDIVIDUAL COMPONENTS

6.5.1 Transistor

A transistor is defective if more than one volt is measured across its base emitter junction in the forward direction.

A transistor when used as a switch may have a few volts reverse bias voltage base to emitter.

If the collector and emitter voltages are the same, but the base emitter voltage is less than 500 mV forward voltage (or reversed bias), the transistor is defective.

A transistor is defective if its base current is larger than 10% of its emitter current (calculate currents from voltage across the base and emitter series resistors).

6.5.2 Diode

A diode is defective if there is greater than 1 volt (typically 0.7 volts) forward voltage across it (except Zener and LED).

6.5.3 Operational Amplifier

The "+" and "-" inputs of an operational amplifier will have less than 15 mV voltage difference when operating under normal conditions.

If the output voltage stays at maximum positive, "+" input voltage should be more positive than "-" input voltage, or vice versa; otherwise, the operational amplifier is defective.

6.5.4 FET Transistor

No gate current should be drawn by the gate of an FET transistor. If so, the transistor is defective.

The gate-to-source voltage is always reverse biased under a normal operating condition; e.g., the source voltage is more positive than the gate voltage for 2N5485, and the source voltage is more negative than gate voltage for a 2N5462. Otherwise, the FET is defective.

6.5.5 MOSFET Transistor

For MOSFET's such as the SD214 or SD215, a positive gate source voltage causes the device to conduct drain current. Zero volts or a negative voltage cause the device to pinch off. A MOSFET transistor can be damaged by a static charge

buildup when out of the circuit. Keep MOSFET leads shorted together until soldered in the circuit board.

6.5.6 Capacitor

Shorted capacitors have zero volts across their terminals.

An unopened capacitor can be located (but not always) by using a good capacitor connected in parallel with the capacitor under test and observing the resulting effect.

6.5.7 ECL Gate

The emitter coupled logic using NOR logic is:

Inputs		NOR Output	Exclusive OR Output
A	B	$C = A + B$	$C = A \oplus B$
0	0	1	1
0	1	0	0
1	0	0	0
1	1	0	1

The levels are:

"0" = +3.4V $\pm$ 0.1V

"1" = +4.3V $\pm$ 0.1V

Never short the output of an ECL gate to ground; this will damage the output transistor in the gate. Any input may be pulled high, even when driven by an output of another gate, by connecting a diode between the input and the +5.2V supply (anode to supply).

6.6 FLOW CHARTS

The flow charts (see figures 6-1 thru 6-6) help isolate any malfunction to a specific stage. If you already know the specific circuit block at fault, go directly to that block in the flow chart. If a problem cannot be isolated to a portion of a flow chart, then follow the flow chart from the beginning.

If the problem cannot be located, return the instrument to the factory for servicing, with a description of the failure.

Before performing flow chart troubleshooting, set the front panel controls as follows:

PERIOD 2 μ s | 20 μ s
 PERIOD VERNIER 12 o'clock
 DELAY 10 ns | 100 ns
 DELAY VERNIER 12 o'clock
 WIDTH 100 ns | 1 μ s
 WIDTH VERNIER 12:00
 LOWER LEVEL -10V
 UPPER LEVEL +10V
 DBL PULSE OFF
 COMP OFF
 INT 50 Ω ON

Connect both the sync and the output BNC's to an oscilloscope with 3 foot 50 Ω cables terminated with 50 Ω feed-throughs.

When troubleshooting the output amplifier, the flow chart in figure 6-6 should be followed. In addition, tables 6-1 and 6-2 provide additional guidance as to what voltages exist at the semiconductor devices and how they should vary with the output level controls.

Table 6-1. Level Control Dependent Voltages

Level Control Knob Setting	Output Waveform Into 50 Ω	E17 Voltage Upper Level	E16 Voltage Lower Level	TP1	IC7-6	Emitter of Q6	Emitter of Q19
	+10 —————	-18	-18	-18	-3.6	+8.1	+22
	+10 ——— 0 ———	-18	0	-0.6	0	+8.1	+22
	+ 5 ——— - 5 ———	-9	+9	-0.6	+1.8	+8.1	+22
	0 —————	0	0	-18	0	0	+25
	0 ——— -10 ———	0	+18	-0.6	+3.6	+8.1	+22
	-10 —————	+18	+18	0	+3.6	0	+25

Table 6-2. Transistor Voltages

NOTE

These voltages apply with the controls set as follows.

PERIOD TRIG
 DELAY OFF
 WIDTH $\square$
 COMP OFF
 DBL PULSE OFF
 INT 50 Ω ON
 UPPER LEVEL Max cw
 LOWER LEVEL OV

Transistor	B	C	E	Transistor	B	C	E
Q6	+8.7	+20.8	+8.1	Q22	+18.6	+12	+20.5
Q7	-0.6	-0.6	0	Q23	+10.8	0	+11.4
Q8	0	+18	≈ 0	Q24	+11.4	0	+12.0
Q9	0	-18	≈ 0	Q25	+12.0	+10.0	+12.6
Q10	+18	+13	+18	Q26	+15.2	+13.0	+15.8
Q11	-18	-13	-18	Q27	+12.0	+10.0	+12.6
Q12	-0.6	+0.3	-1.2	Q28	+15.2	+13.0	+15.8
Q16	+4.3	+6.4	+3.7	Q29	+12.0	+10.0	+12.6
Q17	+3.4	+9.8	+3.7	Q30	+14.6	+12.0	+15.2
Q18	+20.8	21.4	+21.4	Q31	-12.0	+10.0	-12.6
Q19	+21.4	21.4	+22.0	Q32	-12.0	+10.0	-12.6
Q21	+18.6	+12	+20.5	Q35	+18.0	+12.0	+18.6

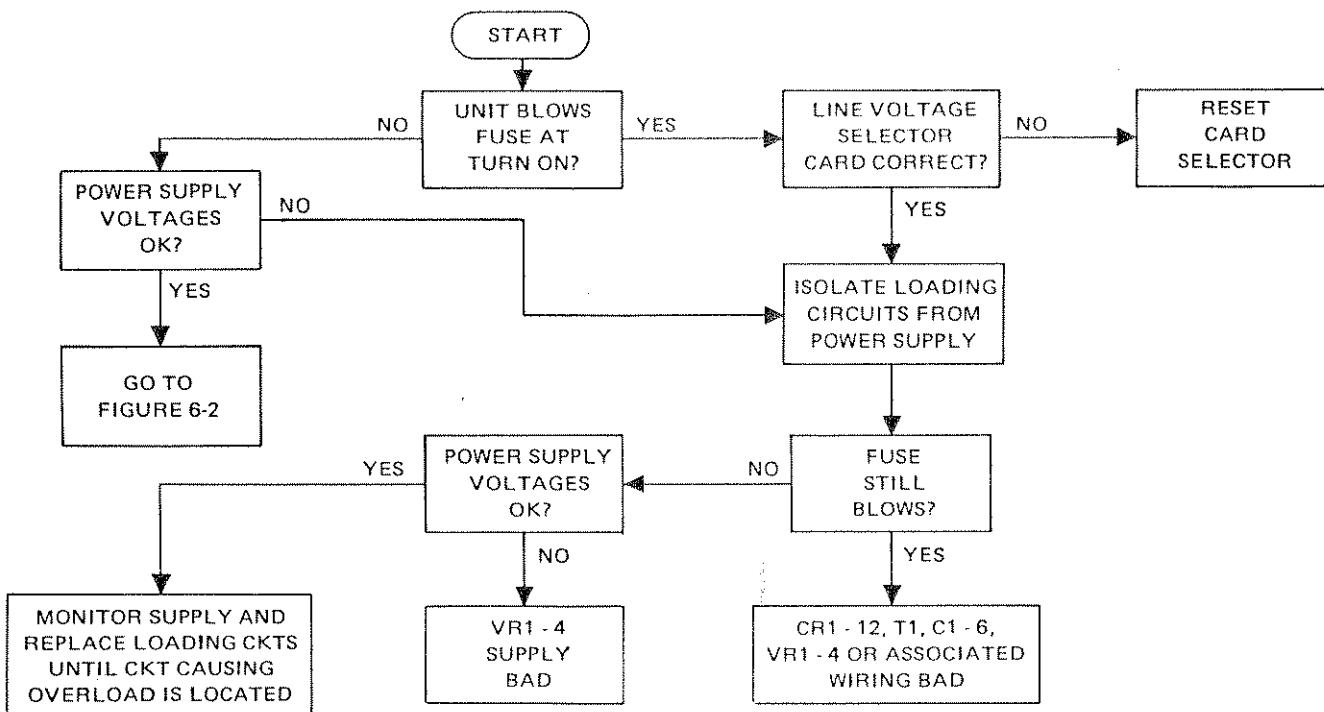


Figure 6-1. Power Supply Troubleshooting

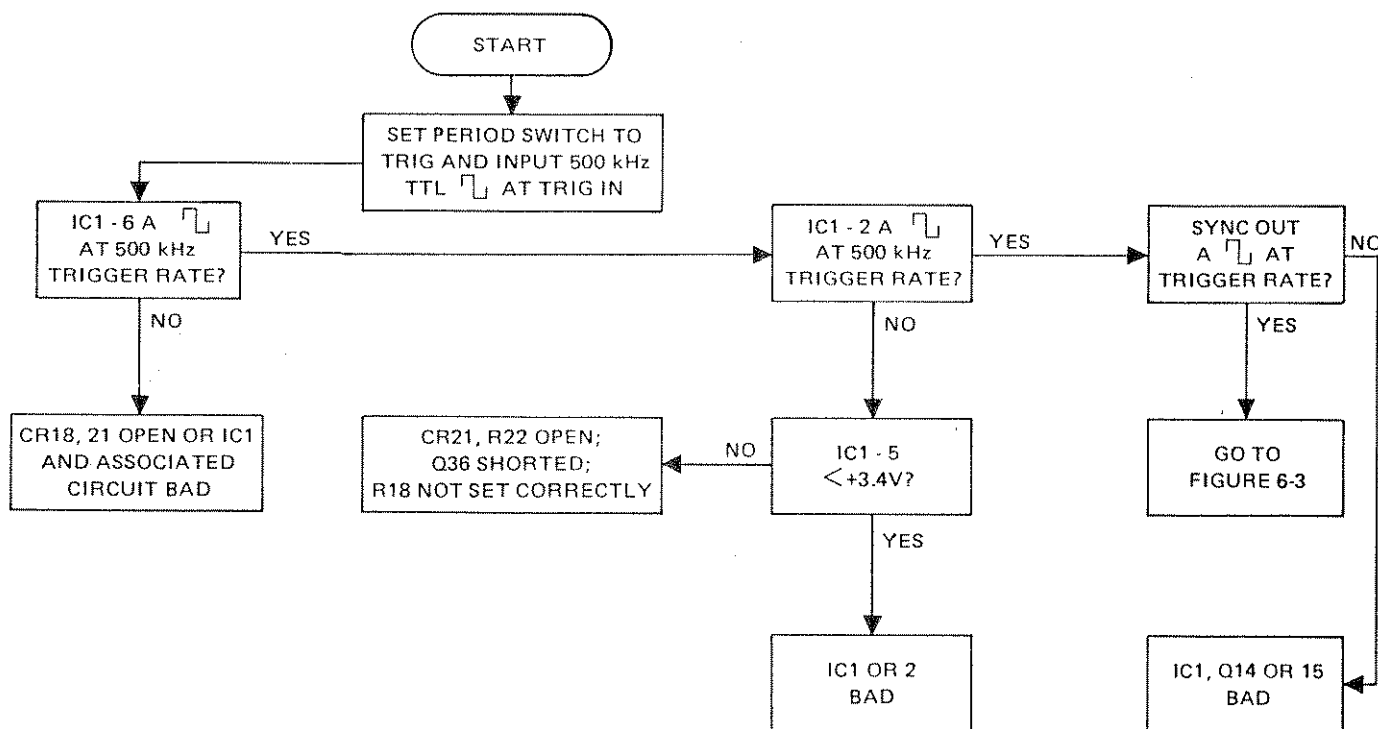


Figure 6-2. Trigger Circuit Troubleshooting

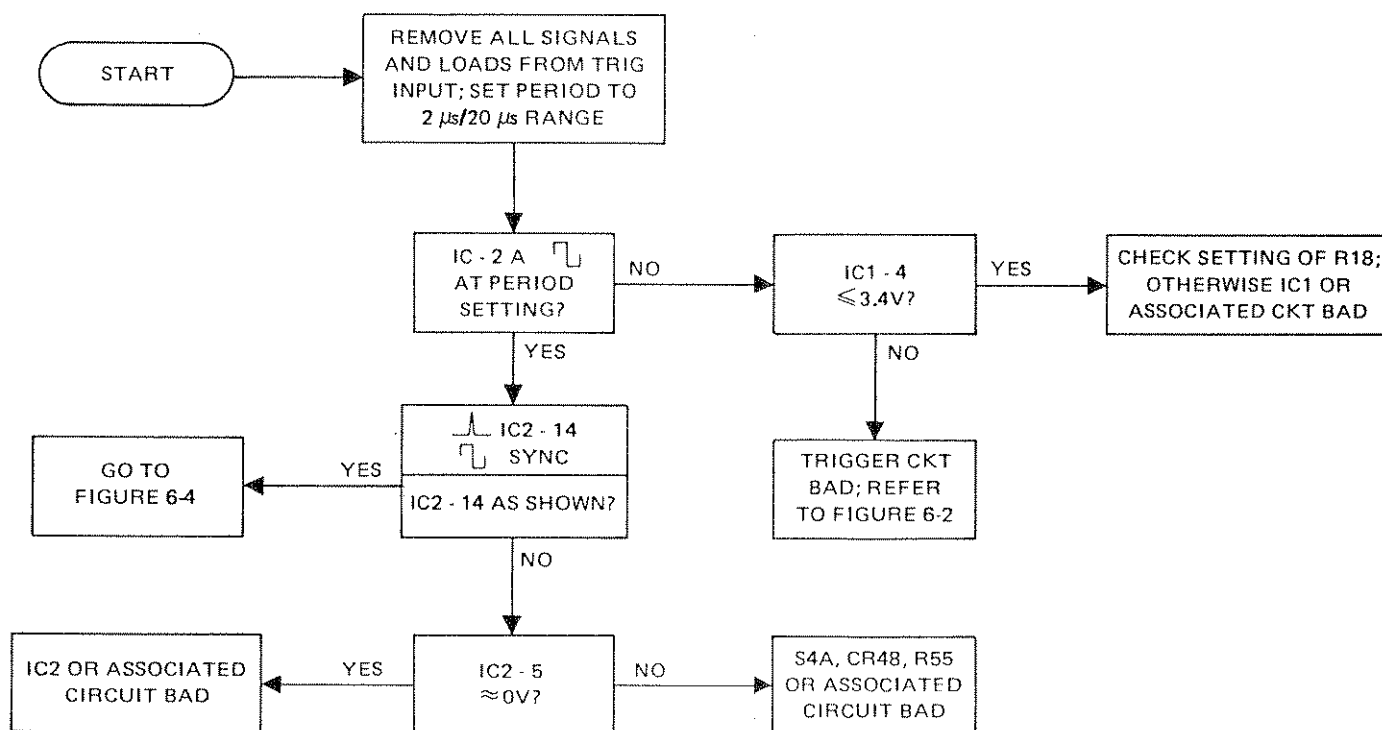


Figure 6-3. Oscillator Troubleshooting

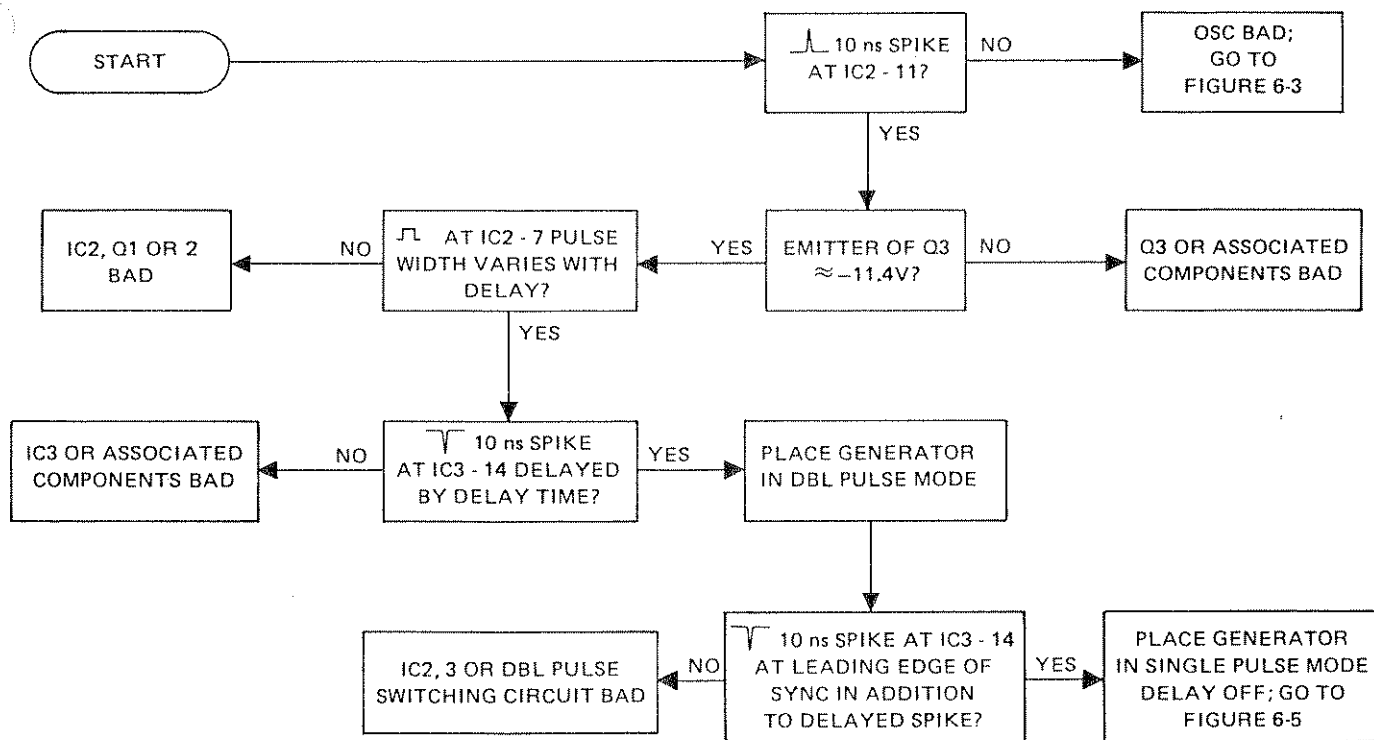


Figure 6-4. Delay Circuit Troubleshooting

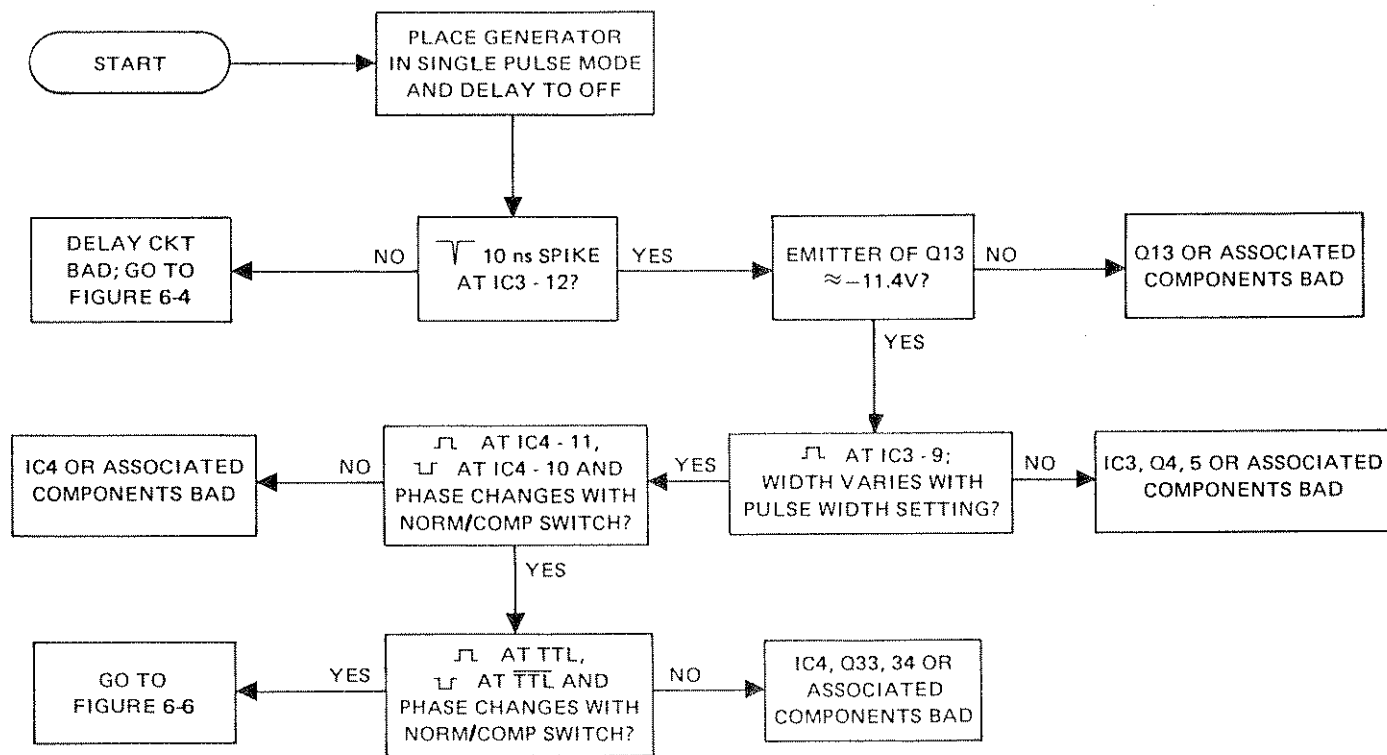


Figure 6-5. Width Circuit Troubleshooting

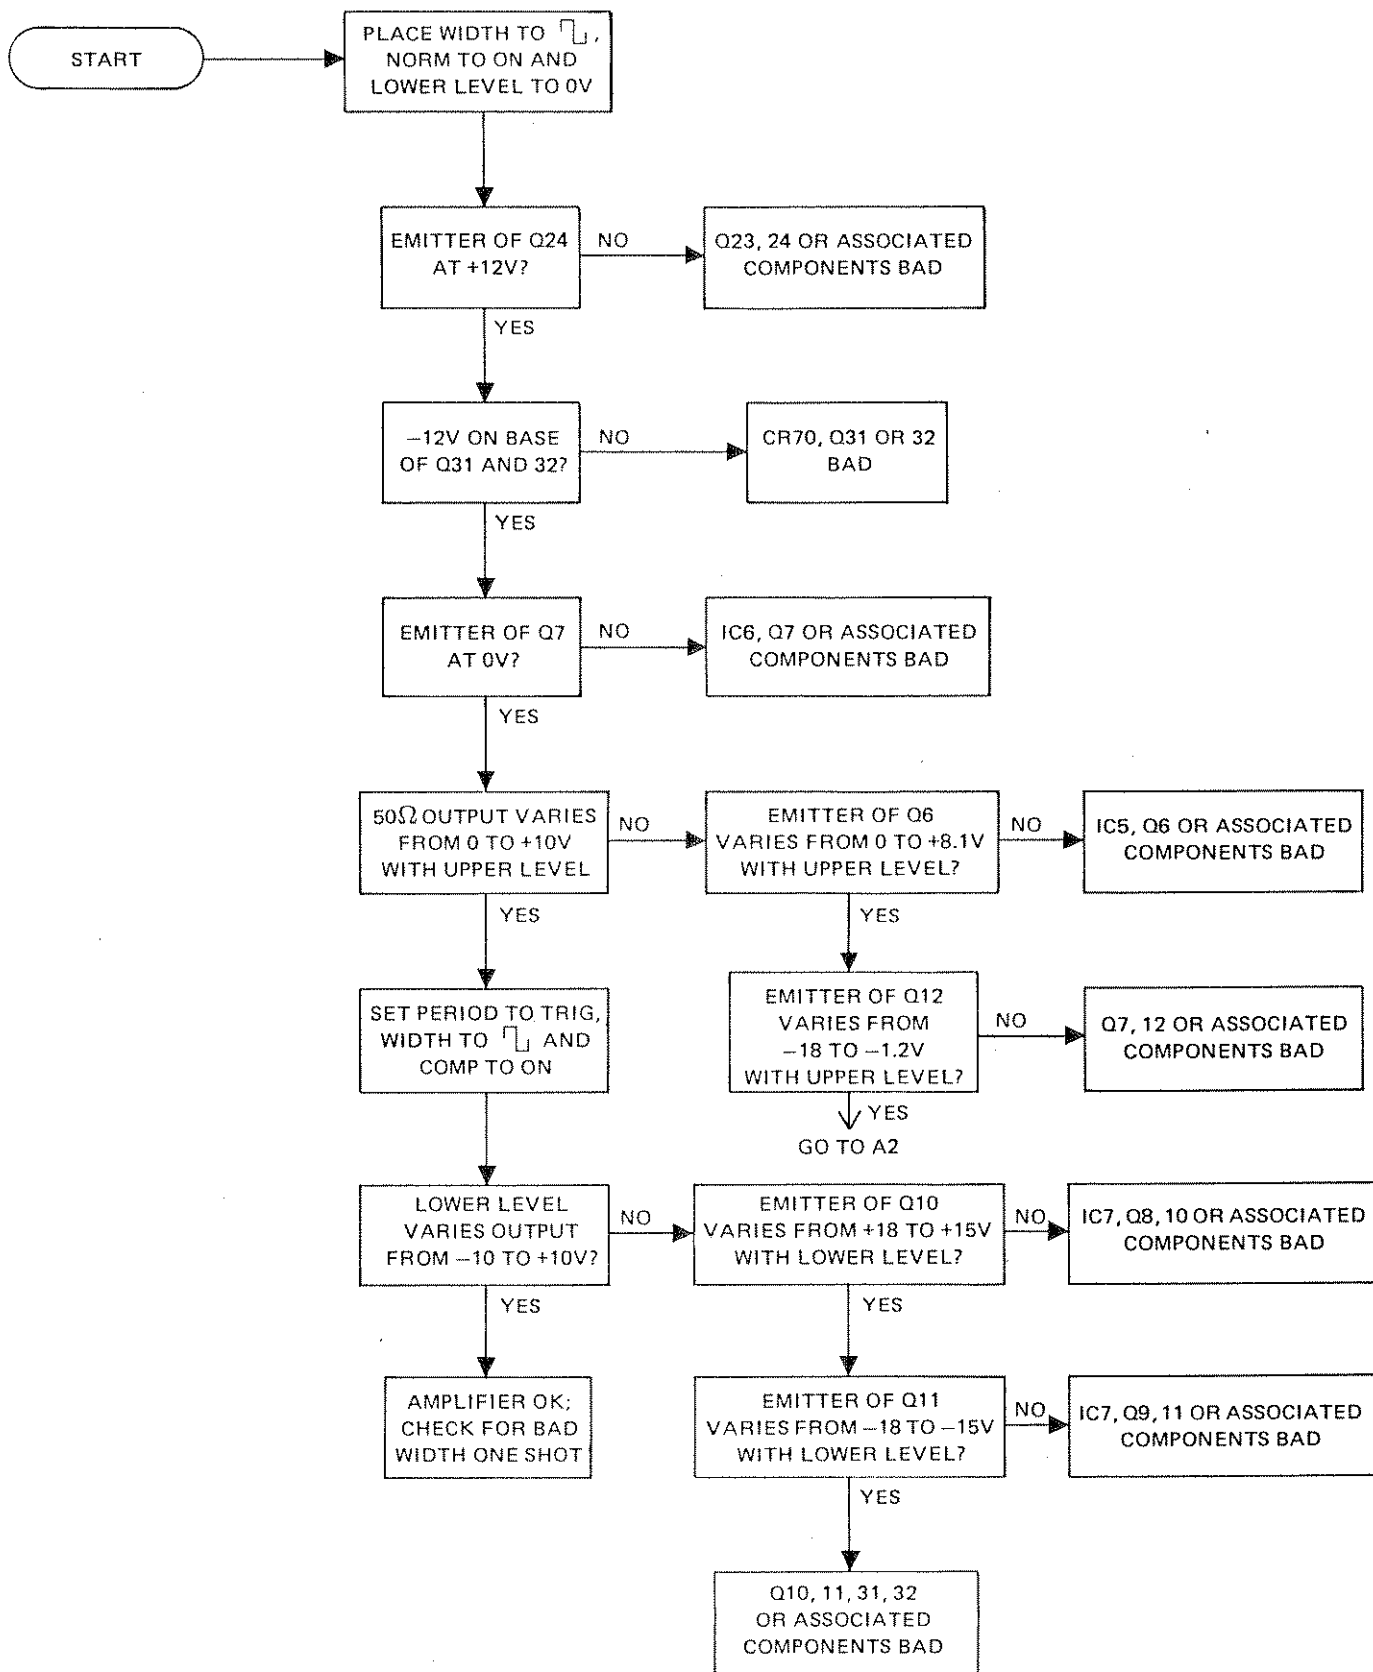


Figure 6-6. Output Amplifier Troubleshooting


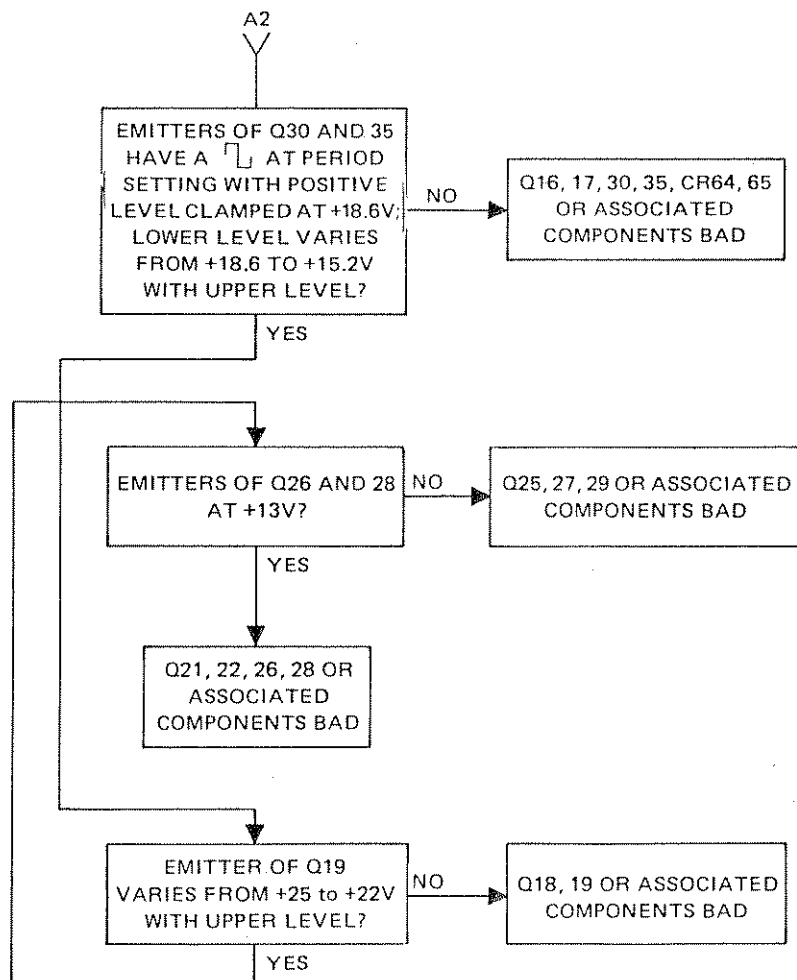


Figure 6-6. Output Amplifier Troubleshooting (Continued)

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.


REV	ECN	BY	DATE	APP
A	ECN 1713	RD	4-20-78	
B	# 1955 19501	J	1-13-79	
C	# 2060 3000 (III)	JA	1-13-79	
D	# 2060 3000 (III)	JA	1-13-79	
E	# 2060 3000 (III)	JA	1-13-79	
F	# 2060 3000 (III)	JA	1-13-79	
G	# 2060 3000 (III)	JA	1-13-79	
H	# 2060 3000 (III)	JA	1-13-79	
I	# 2060 3000 (III)	JA	1-13-79	
J	# 2060 3000 (III)	JA	1-13-79	
K	# 2060 3000 (III)	JA	1-13-79	
L	# 2060 3000 (III)	JA	1-13-79	
M	# 2060 3000 (III)	JA	1-13-79	
N	# 2060 3000 (III)	JA	1-13-79	
O	# 2060 3000 (III)	JA	1-13-79	
P	# 2060 3000 (III)	JA	1-13-79	
Q	# 2060 3000 (III)	JA	1-13-79	
R	# 2060 3000 (III)	JA	1-13-79	
S	# 2060 3000 (III)	JA	1-13-79	
T	# 2060 3000 (III)	JA	1-13-79	
U	# 2060 3000 (III)	JA	1-13-79	
V	# 2060 3000 (III)	JA	1-13-79	
W	# 2060 3000 (III)	JA	1-13-79	
X	# 2060 3000 (III)	JA	1-13-79	
Y	# 2060 3000 (III)	JA	1-13-79	
Z	# 2060 3000 (III)	JA	1-13-79	

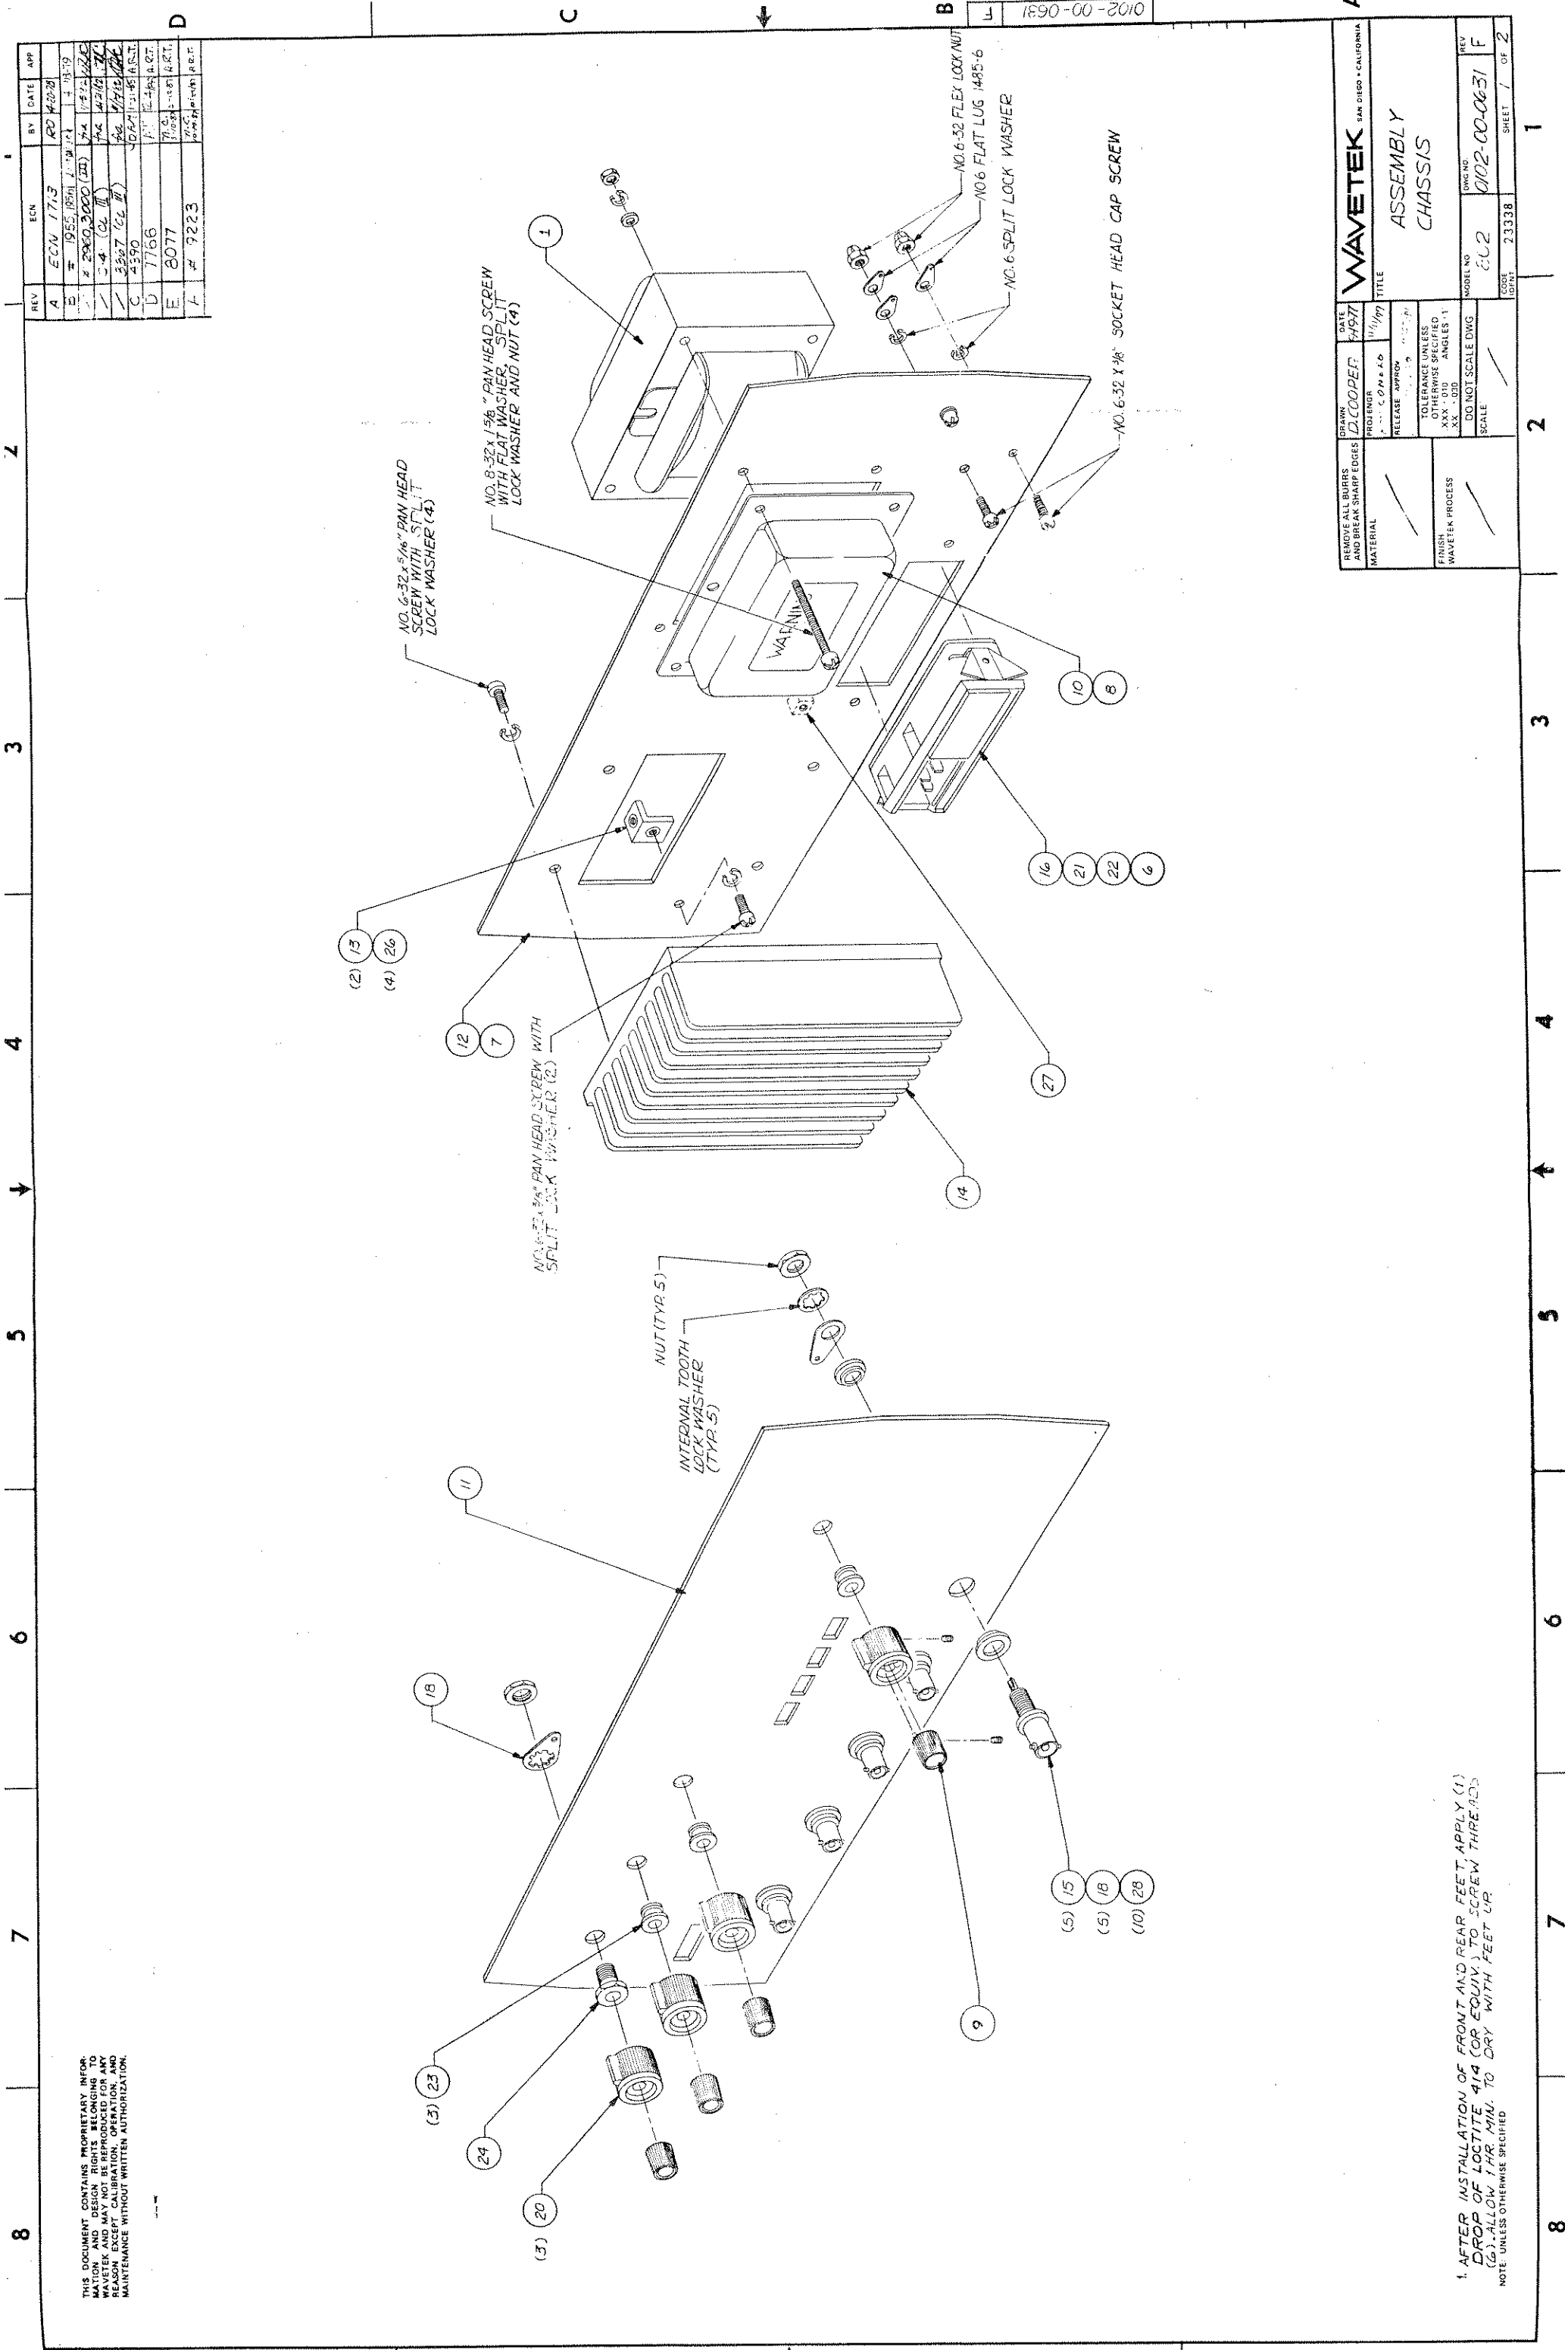

1. AFTER INSTALLATION OF FRONT AND REAR FEET, APPLY (1) DROP OF LOCITE 414 (OR EQUIV.) TO SCREW THREADS (6). ALLOW 1 HR. MIN. TO DRY WITH FEET UP. NOTE: UNLESS OTHERWISE SPECIFIED

WAVETEK SAN DIEGO • CALIFORNIA		DATE 4/9/77	BY RD
TITLE ASSEMBLY CHASSIS		PROJ. NO. 0102-00-0631	REV F
DRAWN D. COOPER		RELEASE APPROV. [Signature]	SCALE 1 OF 2
TOLERANCE UNLESS OTHERWISE SPECIFIED XX .000 ANGLES .1		DO NOT SCALE DWG	CODE 23338
FINISH WAVETEK PROCESS		SHEET 1 OF 2	

www.valuetronics.com

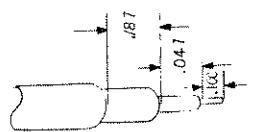

REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN <i>D. COOPER</i>	DATE <i>9/19/77</i>	WAVETEK SAN DIEGO • CALIFORNIA	
MATERIAL	ENGINEER <i>W. J. FLO</i>	TITLE <i>W. J. FLO</i>	ASSEMBLY CHASSIS	
FINISH WAVETEK PROCESS	RELEASE APPROV <i>K. W. COOPER</i>	TOLERANCE UNLESS OTHERWISE SPECIFIED XX X : 010 ANGLES 1:1 XX : 030	DWG NO <i>802</i>	REV <i>F</i>
	DO NOT SCALE	SCALE	MODEL NO	SHEET <i>2</i> OF <i>2</i>
			CORE IDENT	23338

THIS DOCUMENT CONTAINS PROPRIETARY INFOR-
MATION AND DESIGN RIGHTS BELONGING TO
WAVETEK, INC. AND MAY NOT BE REPRODUCED FOR ANY
REASON, EXCEPT CALIBRATION, WITHOUT WRITTEN
MAINTENANCE AUTHORIZATION.

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PFT
NONE	ASSY DRUG CHASSIS	0102-00-0631	WVTK	0102-00-0631	1
1	TRANSFORMER	802-0632	WVTK	1204-00-0632	1
NONE	PLATE NAME	139-305	WVTK	1400-00-2180	1
NONE	COVER TOP	180-300-1	WVTK	1400-00-5000	1
4	EXPANDER	180-301	WVTK	1400-00-5010	2
NONE	COVER BOTTOM	180-300-2	WVTK	1400-00-5030	1
6	SHIELD PWR	801-6210	WVTK	1400-00-6210	1
8	LABEL MARKING	801-6940	WVTK	1400-00-6940	1
10	END BELL	801-6984	WVTK	1400-00-6984	1
11	PANEL FRONT	802-7840	WVTK	1400-00-7840	1
12	PANEL REAR	802-7853	WVTK	1400-00-7853	1
13	BRKT, SUFT	802-7883	WVTK	1400-00-7883	2
14	HEAT SINK REF: 3200-06-0002	802-7899	WVTK	1400-00-7899	1
NONE	INSULATOR, PWR SWITCH REF: 1400-09-0001	801-8370	WVTK	1400-00-8370	2
7	I. D. LABEL	801-9090	WVTK	1400-00-9090	1
15	CONN BNC	KC-7946	KING	2100-01-0002	5
TITLE		ASSEMBLY NO.		1101-00-0631	REV K
WAVETEK PARTS LIST				PAGE 1	

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/P
16	RECEPTACLE	6VJ1	CORCH	2100-03-0026	1
17	CABLE CONTACT	2262B6-2	AMP	2100-03-0040	5
18	SOLDER LUG	1497	SMITH	2100-04-0012	6
19	SOLDER LUG	11A144	ZIER	2100-04-0025	3
22	FUSE, 1/2A, 250V	313, 900	LITFU	2400-05-0010	1
23	BUSHING NYLINER	4L2FF	THOMN	2800-01-0002	3
24	BEARING, PANEL	119	SMITH	2800-01-0004	1
31	STANDOFF, MALE/FEMALE 1.750 H, .250 HEX8-32	1475-M03-F03-B32	UNICP	2800-02-0010	4
30	STANDOFF, MALE/FEMALE 1.875H, .250 HEX, 4-40	1479-M03-F03-440	UNICP	2800-02-0023	4
NONE	BAIL ASSY W/FT	180-500	WVTK	2800-06-0010	1
NONE	SPEEDNUT, SELF RETAIN	C7494-432-4	TINN	2800-09-0003	6
26	INSERT # 6	74-11-106-13	SOTCD	2800-09-0017	4
27	FAST, CHASSIS	1591-C11	USECO	2800-09-0022	1
33	WASHER	B51547F015	MDT	2800-11-0015	5
28	WASHER, SHOULDER	266B	SMITH	2800-27-0004	10
TITLE CHASSIS		ASSEMBLY NO.		1101-00-0631	REV K

WAVETEK
PARTS LIST

PAGE 2

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/P
32	INSULATOR (TO-220)	60-11-B302-1674	CHOMR	3100-00-0010	5
RV1	DIODE, VARISTOR	V56ZAB	GE	4599-00-0045	1
29	SWITCH ASSY PB	1XTA0003TA100B-W/NE152	ECG	5102-00-0008	1
NONE	WIRE, COAX	BTX019-10050	BRKTC	6001-40-0005	6
NONE	CABLE, 4 COND, 20GA	B722	BELDN	6001-70-0007	2
TITLE CHASSIS		ASSEMBLY NO. 1101-00-0631		REV K	
WAVETEK PARTS LIST		PAGE 3			

REMOVE ALL BURRS
AND BREAK SHARP EDGES

DRAWN

DATE

MATERIAL

PROFINGER

RELEASE APPROV

TOLERANCE UNLESS
OTHERWISE SPECIFIED
XXX : 010 ANGLES : 11
XX : .030

DO NOT SCALE DWG

SCALE

WAVETEK
SAN DIEGO • CALIFORNIA

PARTS LIST
CHASSIS

MODEL NO
802

DWG NO
1101-00-0631

REV
K


CODE
0631

SHEET
1

OF
1


NOTE: UNLESS OTHERWISE SPECIFIED

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVEJET INC. NO REPRODUCTION, COPIING, OR ANY MANNER OF INFORMATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

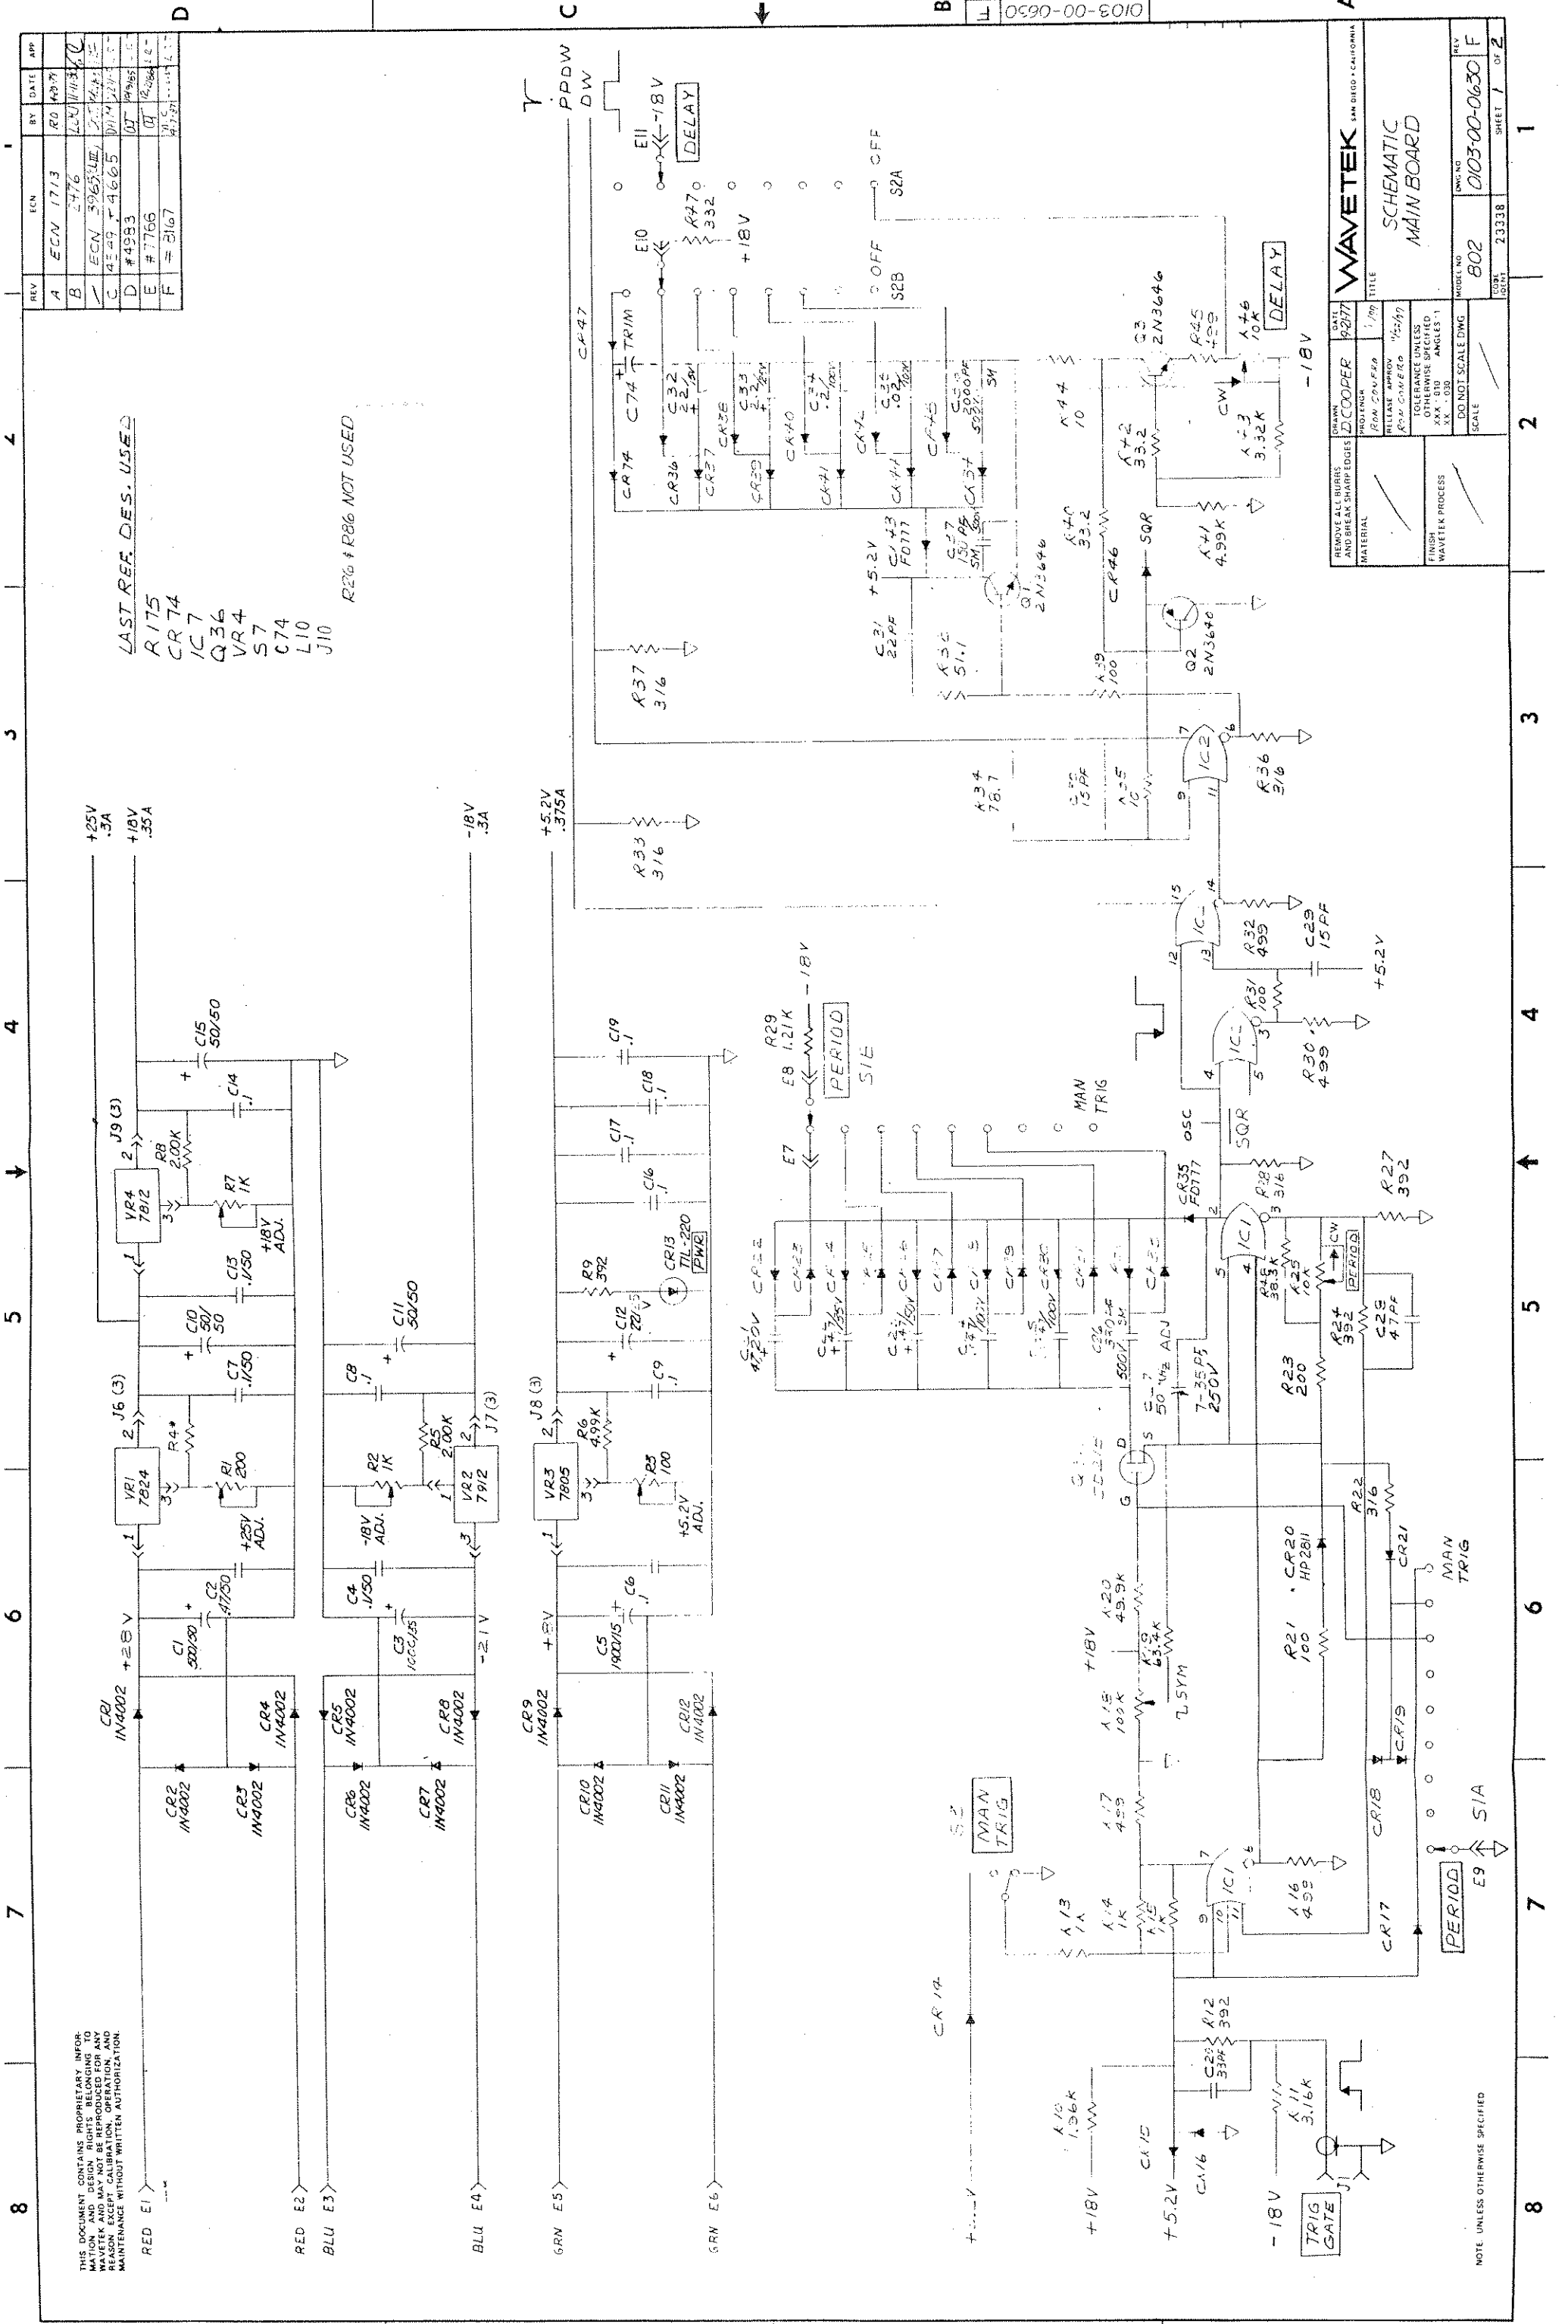

NOTE: UNLESS OTHERWISE SPECIFIED


THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON, EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

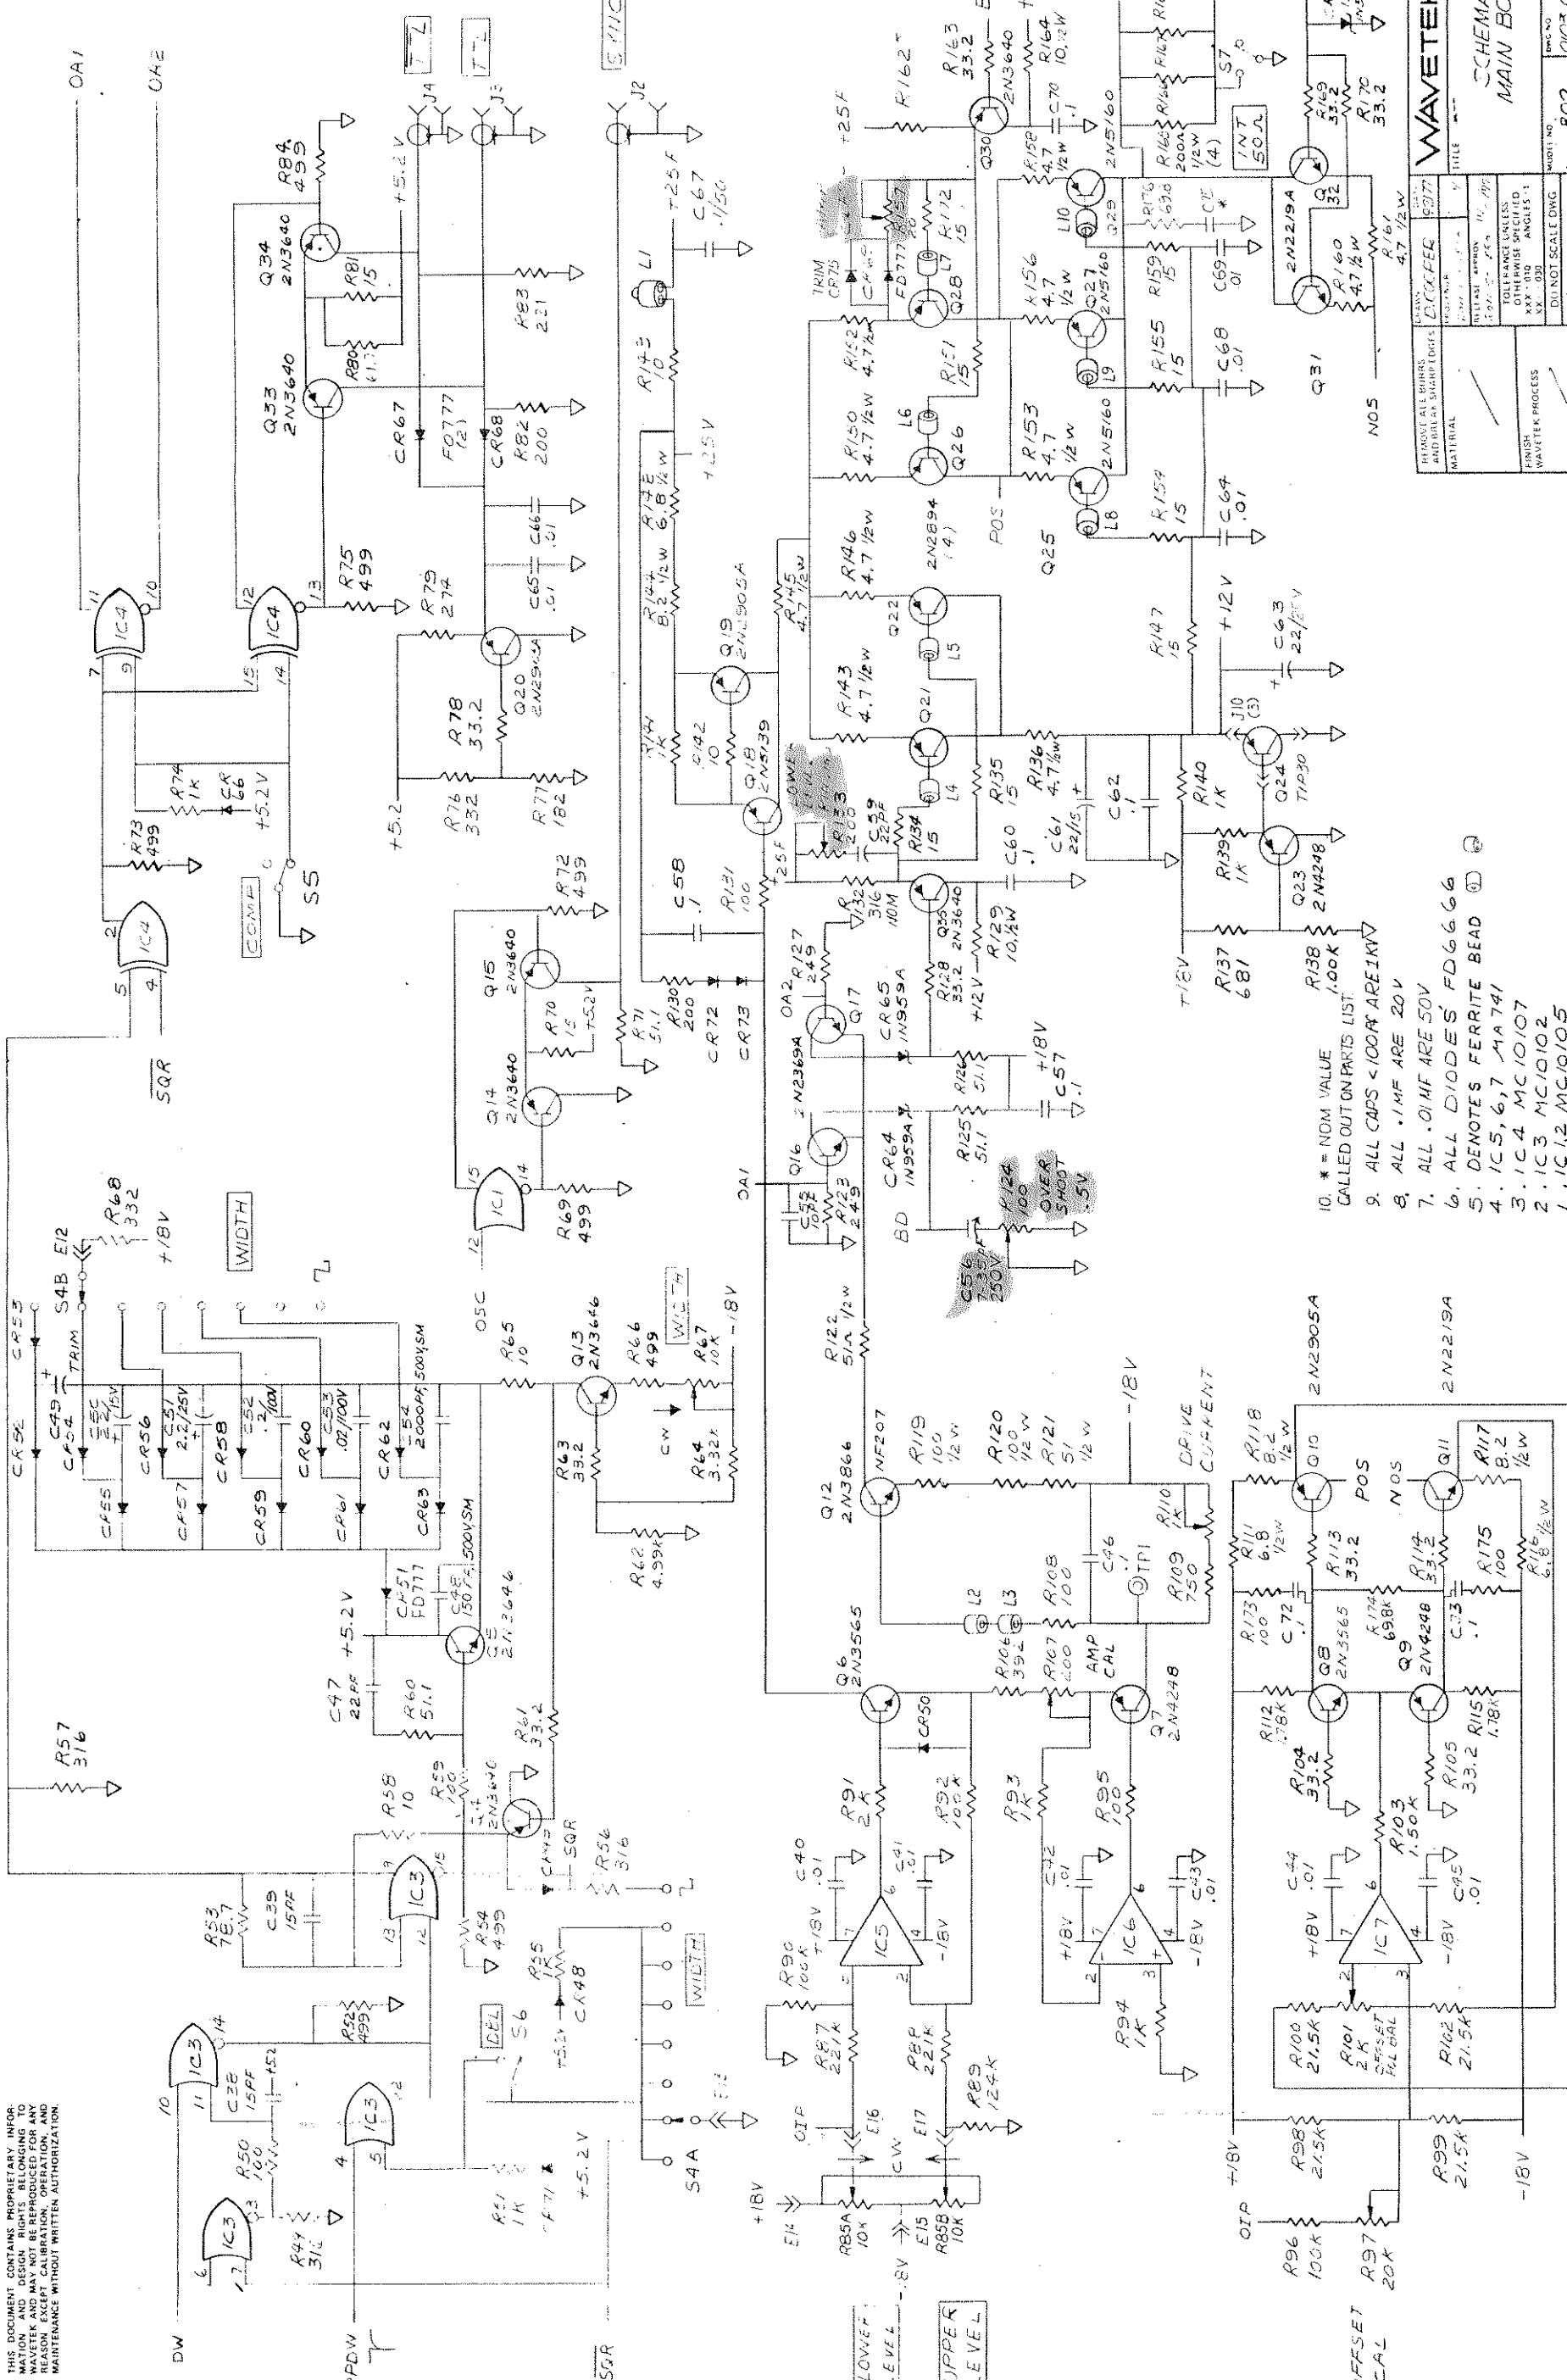

NOTE: UNLESS OTHERWISE SPECIFIED

- 10. * = NOM VALUE CALLED OUT ON PARTS LIST
- 9. ALL CAPS < 100PF ARE 1KV
- 8. ALL .01MF ARE 20V
- 7. ALL .01MF ARE 50V
- 6. ALL DIODES ARE FDG666
- 5. DENOTES FERRITE BEAD
- 4. IC5, 6, 7 MA 741
- 3. IC4 MC10107
- 2. IC3 MC10102
- 1. IC1, 2 MC10105

WAVETEK		SCHEMATIC		MAIN BOARD	
REV	DATE	BY	DATE	BY	DATE
1					
2					
3					
4					
5					
6					
7					
8					

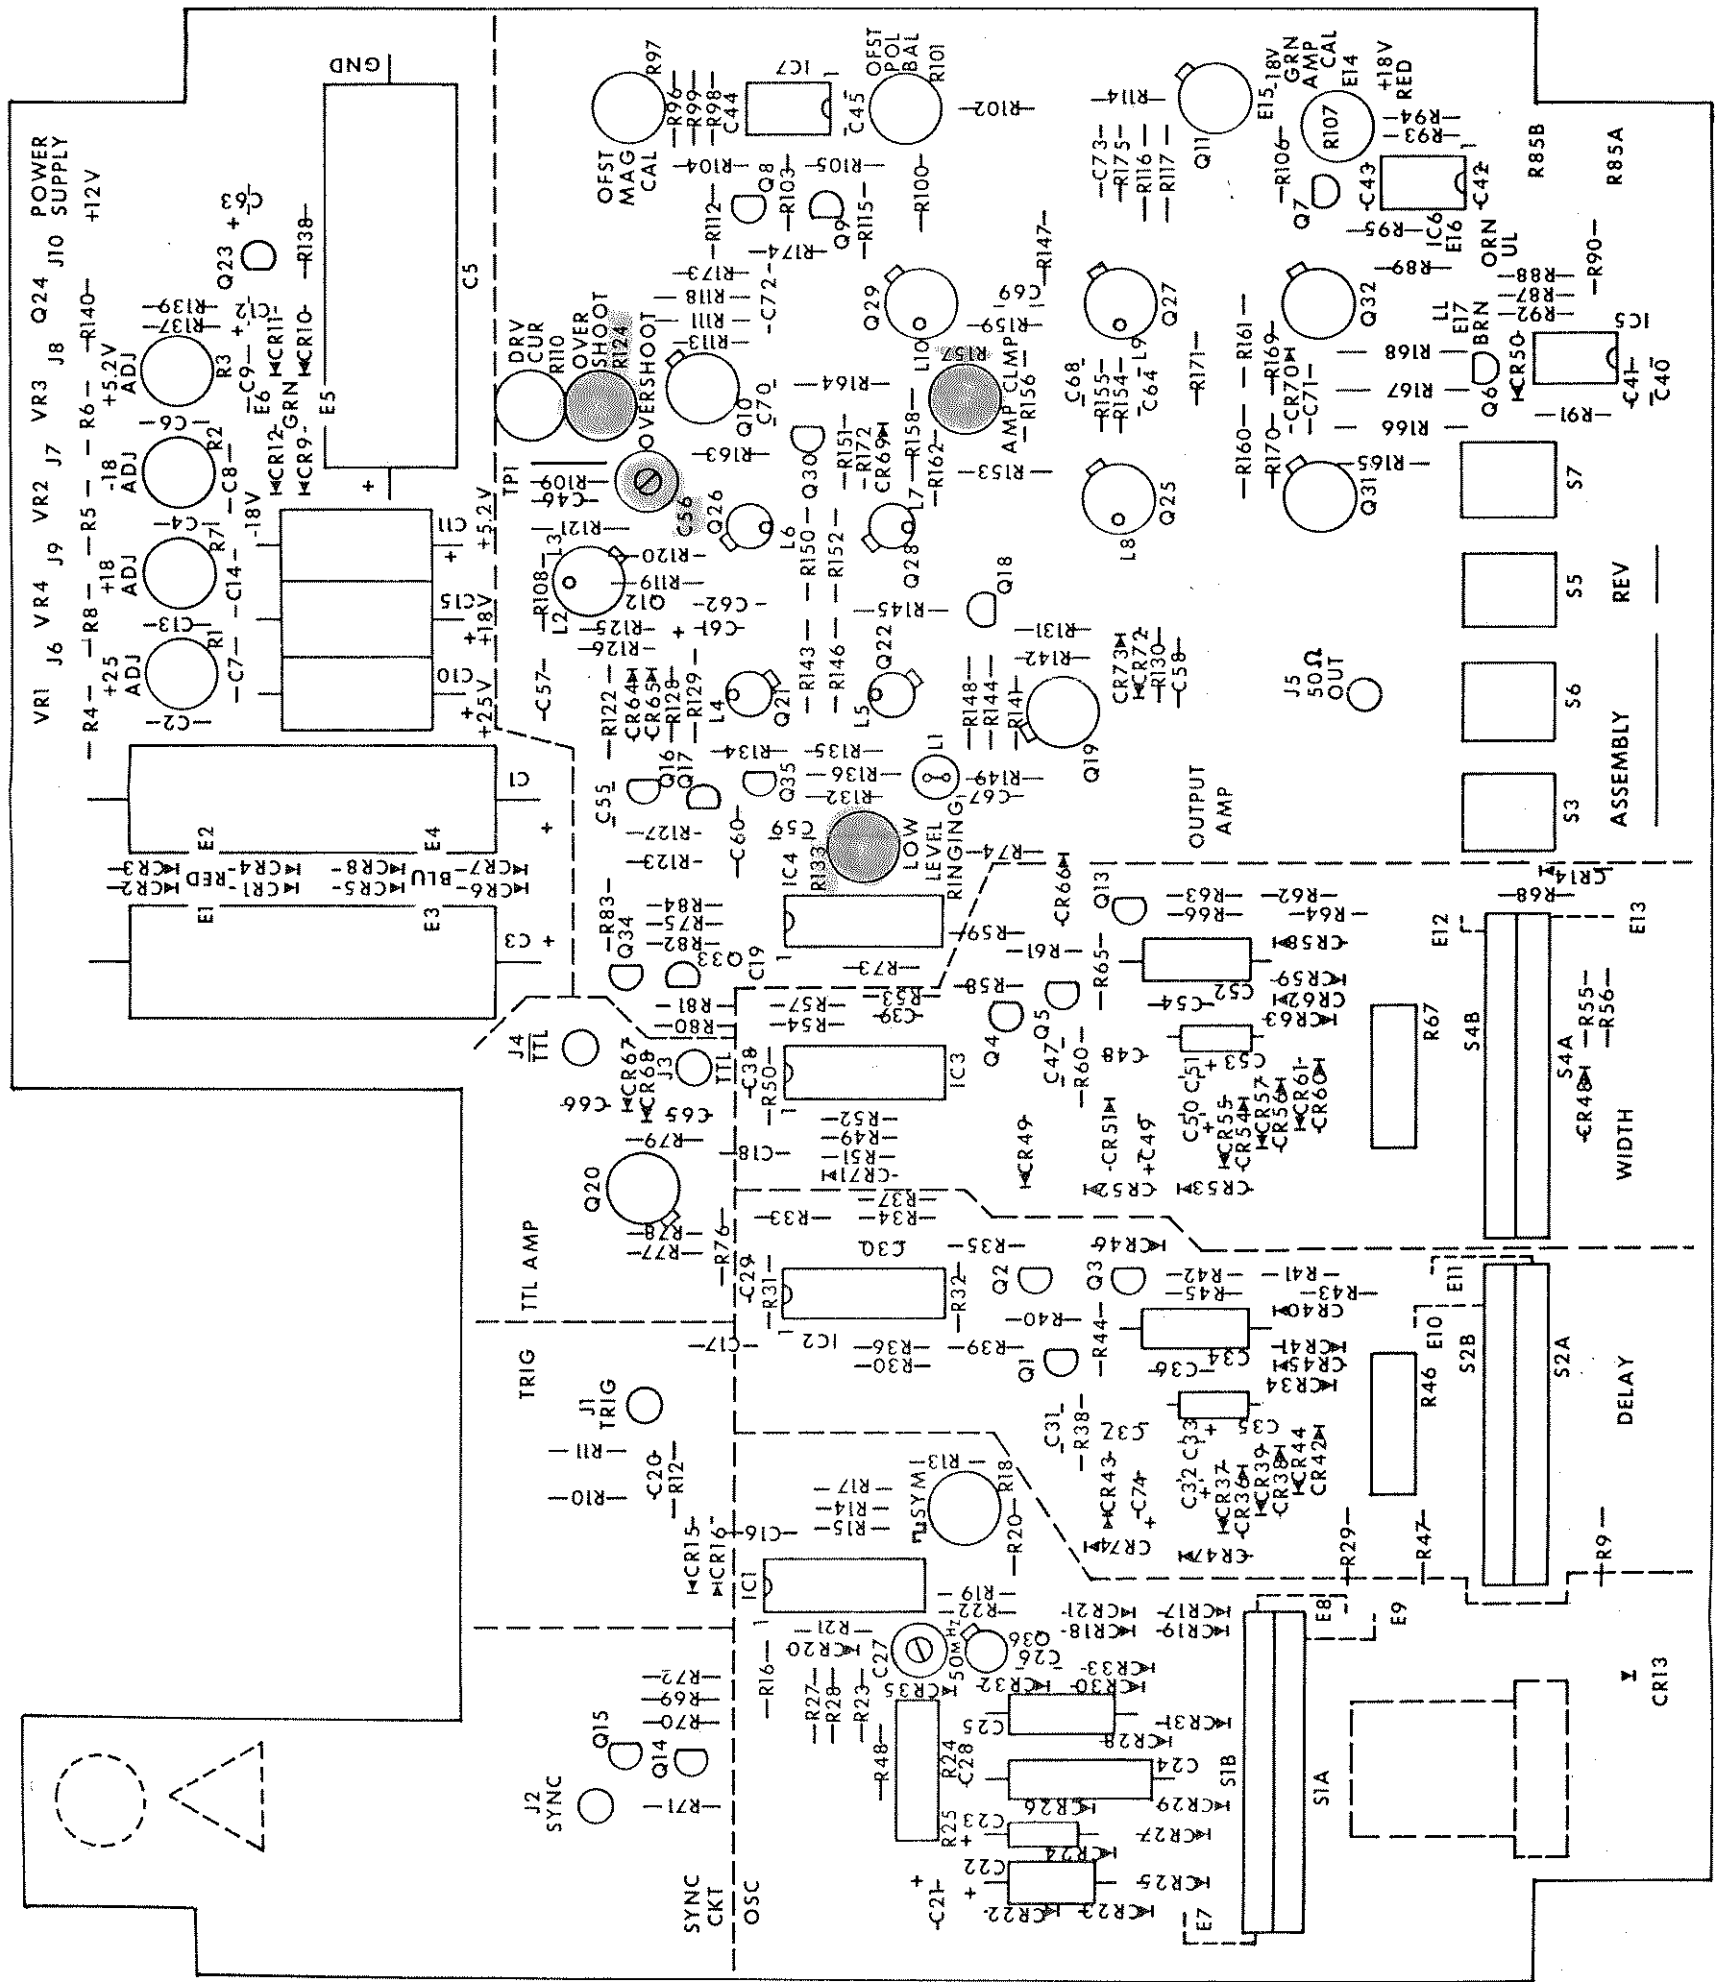


MADE FROM 0100-00-0630-3C

WAVETEK

ASSEMBLY,
MAIN BOARD

802 1100-00-0630

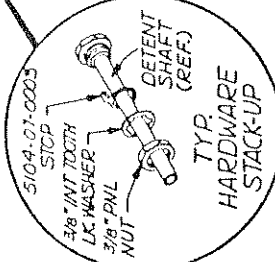

REMOVE ALL BURRS AND BREAK SHARP EDGES		DATE 9-3-77	WAVETEK SAN DIEGO - CALIFORNIA	
MATERIAL		DESIGNER D. COOPER	TITLE	
		PROJ. NO. 111177	ASSEMBLY MAIN BOARD	
		Q.M. CON. E-60 GULLIES W/REIN ROW. CO-140 1 1/2" W/7 100% STAINLESS OTHER NAME(S) SPECIFIED XXX: 1-10 ANGLES: 1" XX - 0-10		
FINISH WAVETEK PROCESS		MODEL NO. 802	REV K	
		DO NOT SCALE DWG SCALE	0101-00-01630	
		COPIES 1000	23338	

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY PURPOSES WITHOUT WRITTEN AUTHORIZATION.

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY
NONE	ASSY DRWG MAINBOARD	0101-00-0630	WVTK	0101-00-0630	1
NONE	SCHEMATIC MAINBOARD	0103-00-0630	WVTK	0103-00-0630	1
NONE	ASSY, COAX 802-0630	802-2071	WVTK	1207-00-2071	1
NONE	ASSY, COAX 802-0630	802-2072	WVTK	1207-00-2072	1
NONE	ASSY, COAX 802-0630	802-2073	WVTK	1207-00-2073	1
NONE	ASSY, COAX 802-0630	802-2074	WVTK	1207-00-2074	1
NONE	PLATE, SH	008-004	WVTK	1400-00-2130	3
NONE	BRACKET	801-6923	WVTK	1400-00-4923	1
NONE	COAX KNOB SET QTY: 1; 2400-01-0009	801-1429	WVTK	1400-01-1429	1
C75T	CAP, CER, 10PF, 1KV	DD-100LL	CRL	1500-01-0001	1
C95	CAP, CER, 10PF, 1KV	DD-100	CRL	1500-01-0011	1
C40 C41 C42 C43 C44 C45 C46 C65 C66 C69	CAP CER MON 01MF 50V, AXIAL	CAC0270U1032100A	CORNG	1500-01-0310	11
C13 C14 C16 C17 C18 C19 C4 C46 C57 C58 C6 C60 C62 C57 C7 C70 C71 C72 C73 C8 C9	CAP, CER, MON., 1MF, 50V	CAC0325U104Z050A	CORNG	1500-01-0405	21
C29 C30 C39 C39	CAP, CER, 15PF, 1KV	DD-150	CRL	1500-01-5011	4
C31 C47 C39	CAP, CER, 22PF, 1KV	DD-220	CRL	1500-02-2011	3
WAVETEK PARTS LIST		PCA MAINBOARD		ASSEMBLY NO. 1100-00-0630	REV T
TITLE PCA MAINBOARD		PAGE 1		PAGE 1	

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY
C32 C50 C41	CAP, TANT, 22MF, 20V	20242002226M3	MAT60	1500-72-2621	3
C2 C23	CAP, TANT, .47MF, 50V	15004747905082	SPRAG	1500-74-7403	2
C22	CAP, TANT, 4.7MF, 35V	19004751903082	SPRAG	1500-74-7502	1
C21	CAP, TANT, 47MF, 20V	195047649020PE4	SPRAG	1500-74-7601	1
NONE	MAINBOARD	802-0630	WVTK	1700-00-0630	1
NONE	SPRING SOCKET	6-330B08-5	AMP	2100-03-0037	5
NONE	COAX SOCKET	224287-2	AMP	2100-03-0038	5
NONE	SOCKET	10-18-2031	MCLEX	2100-03-0047	5
NONE	TERM	201081	USECO	2100-05-0011	1
9	COAX KNOB SET	RD-67-1-SB+O-M-9	ROBAN	2400-01-0009	3
NONE	HEAT SINK	207	WAKE	2800-11-0001	4
NONE	TRANSIPAD	10123M	METRS	2800-11-0003	1
NONE	TRANSIPAD	10160	METRS	2800-11-0004	8
NONE	HEATSINK	209	WAKE	2800-11-0008	5
NONE	HEATSINK	203 CB	WAKE	2800-11-0009	4
NONE	FERRITE BEAD	56-570-65/3D	FERRX	3100-00-0001	9
NONE	BALUN CORE	2873000902	FARIT	3100-00-0002	1
WAVETEK PARTS LIST		PCA MAINBOARD		ASSEMBLY NO. 1100-00-0630	REV T
TITLE PCA MAINBOARD		PAGE 2		PAGE 2	

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY
R119 R120	RES, C, 1/2W, 5%, 100	RC-1/2-101J	STKPL	4700-25-1000	2
R143 R146 R150 R152	RES, CC, 1/2W, 5%, 4.7	RC206F4R7J	AB	4700-99-008B	4
R108 R131 R173 R175 R21 R21 R39 R50 R59 R95	RES, MF, 1/8W, 1%, 100	RN55D-1000F	TRW	4701-03-1000	10
R13 R13B R139 R14 R140 R141 R15 R31 R35 R74 R93 R94	RES, MF, 1/8W, 1%, 1K	RN55D-1001F	TRW	4701-03-1001	12
R90 R92 R96	RES, MF, 1/8W, 1%, 100K	RN55D-1003F	TRW	4701-03-1003	3
R142 R149 R35 R44 R58 R65	RES, MF, 1/8W, 1%, 10	RN55D-1000F	TRW	4701-03-1009	6
R29	RES, MF, 1/8W, 1%, 1.21K	RN55D-1211F	TRW	4701-03-1211	1
R89	RES, MF, 1/8W, 1%, 1.24K	RN55D-1243F	TRW	4701-03-1243	1
R103	RES, MF, 1/8W, 1%, 1.5K	RN55D-1501F	TRW	4701-03-1501	1
R134 R135 R147 R151 R154 R155 R159 R172 R70 R81	RES, MF, 1/8W, 1%, 1.5	RN55D-1500F	TRW	4701-03-1509	10
R112 R115	RES, MF, 1/8W, 1%, 1.78K	RN55D-1781F	TRW	4701-03-1781	2
R77	RES, MF, 1/8W, 1%, 1.82	RN55D-1820F	TRW	4701-03-1820	1
R10	RES, MF, 1/8W, 1%, 1.96K	RN55D-1961F	TRW	4701-03-1961	1
R130 R23 R82	RES, MF, 1/8W, 1%, 200	RN55D-2000F	TRW	4701-03-2000	3
R5 R8 R91	RES, MF, 1/8W, 1%, 2K	RN55D-2001F	TRW	4701-03-2001	3
WAVETEK PARTS LIST		PCA MAINBOARD		ASSEMBLY NO. 1100-00-0630	REV T
TITLE PCA MAINBOARD		PAGE 5		PAGE 5	

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY
C20	CAP, CER, 33PF, 1KV	DD-330	CRL	1500-03-3011	1
C28	CAP, CER, 47PF, 1KV	DD-470	CRL	1500-04-7011	1
C37 C48	CAP, MICA, 150PF, 500V	DM15-151J	ARCO	1500-11-5100	2
C36 C54	CAP, MICA, 2000PF, 500V	ARCO	ARCO	1500-12-0200	2
C26	CAP, MICA, 330PF, 500V	DM15-031J	ARCO	1500-13-3100	1
C3	CAP, ELECT, 1000MF, 35V	39D1086035QL6	SPRAG	1500-31-0212	1
C5	CAP, ELECT, 1900MF, 15V	39D1986015QL4	SPRAG	1500-31-9201	1
C12 C63	CAP, ELECT, 22MF/25V	SRA25V822RC	UNCON	1500-32-2002	2
C10 C11 C15	CAP, ELECT, 50MF, 50V	500D5060503DD7	SPRAG	1500-35-0003	3
C1	CAP, ELECT, 50MF, 50V	39D5076050QL4	SPRAG	1500-39-0103	1
C35 C53	CAP, MYLR, 02MF, 100V	BALB203F	IMB	1500-42-0304	2
C34 C52	CAP, MYLR, 2MF, 100V	BALB204F	IMB	1500-42-0404	2
C25	CAP, MYLR, 0047MF, 100V	WMP-1D47	CDE	1500-44-7304	1
C24	CAP, MYLR, 047MF, 100V	WMP-1S47	CDE	1500-44-7504	1
C27 C56	VARI, 7-35PF, 250V	7S-TRIKO-02 7/35 PF	TRIKO	1500-53-5000	2
C33 C51	CAP, TANT, 2.2MF, 25V	196D223X9025HA1	SPRAG	1500-72-2502	2
WAVETEK PARTS LIST		PCA MAINBOARD		ASSEMBLY NO. 1100-00-0630	REV T
TITLE PCA MAINBOARD		PAGE 2		PAGE 2	

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY
R124 R3	POT, TRIM, 100	91AR100	BECK	4600-01-0103	2
R110 R2 R7	POT, TRIM, 1K	91AR1K	BECK	4600-01-0209	3
R18	POT, TRIM, 100K	91AR100K	BECK	4600-01-0402	1
R157	POT, TRIM, 20	91AR20	BECK	4600-02-0000	1
R1 R107 R133	POT, TRIM, 200	91AR200	BECK	4600-02-0101	3
R101	POT, TRIM, 2K	91AR2K	BECK	4600-02-0201	1
R97	POT, TRIM, 20K	91AR20K	BECK	4600-02-0301	1
R85	POT, DIAL, 10K, LINER	4600-21-0302	WVTK	4600-21-0302	1
R25	POT, CONT, 10K	4609-71-0309	WVTK	4609-71-0309	1
R46 R67	FROM 4600-01-0312	4609-71-0310	WVTK	4609-71-0310	2
R164	POT, CONT, 10K	RC-1/2-100J	STKPL	4700-25-0100	1
R136 R145 R153 R156 R158 R160 R161	RES, C, 1/2W, 5%, 10	RC-1/2-4R7J	STKPL	4700-25-0479	7
R121 R122	RES, C, 1/2W, 5%, 4.7	RC-1/2-510J	STKPL	4700-25-0510	2
R111 R116 R148	RES, C, 1/2W, 5%, 6.8	RC-1/2-6R8J	STKPL	4700-25-0689	3
R117 R118 R144	RES, C, 1/2W, 5%, 8.2	RC-1/2-8R2J	STKPL	4700-25-0829	3
WAVETEK PARTS LIST		PCA MAINBOARD		ASSEMBLY NO. 1100-00-0630	REV T
TITLE PCA MAINBOARD		PAGE 4		PAGE 4	

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY
R100 R102 R98 R99	RES, MF, 1/8W, 1%, 21.5K	RN55D-2152F	TRW	4701-03-2152	4
R83	RES, MF, 1/8W, 1%, 221	RN55D-2210F	TRW	4701-03-2210	1
R87 R88	RES, MF, 1/8W, 1%, 221K	RN55D-2213F	TRW	4701-03-2213	2
R123 R127	RES, MF, 1/8W, 1%, 249	RN55D-2490F	TRW	4701-03-2490	2
R79	RES, MF, 1/8W, 1%, 274	RN55D-2740F	TRW	4701-03-2740	1
R132T R22 R28 R33 R36 R37 R47 R56 R57	RES, MF, 1/8W, 1%, 316	RN55D-3160F	TRW	4701-03-3160	9
R11	RES, MF, 1/8W, 1%, 3.16K	RN55D-3161F	TRW	4701-03-3161	1
R47 R68 R76	RES, MF, 1/8W, 1%, 3.32	RN55D-3320F	TRW	4701-03-3320	3
R43 R64	RES, MF, 1/8W, 1%, 3.32K	RN55D-3321F	TRW	4701-03-3321	2
R104 R105 R113 R114 R128 R63 R78	RES, MF, 1/8W, 1%, 3.3 2	RN55D-3322F	TRW	4701-03-3329	13
R48	RES, MF, 1/8W, 1%, 38.3K	RN55D-3832F	TRW	4701-03-3832	1
R106 R12 R24 R27 R9	RES, MF, 1/8W, 1%, 392	RN55D-3920F	TRW	4701-03-3920	5
R16 R162T R17 R30 R32 R45 R52 R94 R66 R69 R72 R73 R78 R84	RES, MF, 1/8, 1%, 499	RN55D-4990F	TRW	4701-03-4990	14
R41 R4T R6 R62	RES, MF, 1/8W, 1%, 4.99K	RN55D-4991F	TRW	4701-03-4991	4
WAVETEK PARTS LIST		PCA MAINBOARD		ASSEMBLY NO. 1100-00-0630	REV T
TITLE PCA MAINBOARD		PAGE 6		PAGE 6	

REMOVE ALL BURRS AND BREAK SHARP EDGES MATERIAL

DATE

PROJ ENGR

RELEASE APPROV

TOLERANCE UNLESS OTHERWISE SPECIFIED
XXX : 010 ANGLES 11
XX : 000
DO NOT SCALE DWG
SCALE

FINISH
WAVETEK PROCESS

WAVETEK
SAN DIEGO, CALIFORNIA

TITLE
PARTS LIST
PCA MAINBOARD

MODE NO
802

DWG NO
1100-00-0630

CORR IDENT
23338

SHEET 1 OF 2

1 2 3 4 5 6 7 8

NOTE UNLESS OTHERWISE SPECIFIED

REVISIONS
REVISION NO. X1894

THIS DOCUMENT CONTAINS PROPRIETARY INFOR-
MATION AND DESIGN RIGHTS BELONGING TO
WAVETEK AND MAY NOT BE REPRODUCED FOR ANY
PURPOSE WITHOUT WRITTEN AUTHORIZATION.

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFG-PART-NO	MFG	WAVETEK NO.	QTY/PT
R20	RES.MF.1/8W.1%.49.9K	RN55D-4992F	TRW	4701-03-4992	1
R125 R126 R38 R40 R71	RES.MF.1/8W.1%.51.1	RN55D-51R1F	TRW	4701-03-5119	3
R171	RES.MF.1/8W.1%.619	RN55D-6190F	TRW	4701-03-6190	1
R80	RES.MF.1/8W.1%.61.9	RN55D-61R9F	TRW	4701-03-6199	1
R19	RES.MF.1/8W.1%.63.4K	RN55D-6342F	TRW	4701-03-6342	1
R137	RES.MF.1/8W.1%.681	RN55D-6810F	TRW	4701-03-6810	1
R174	RES.MF.1/8W.1%.69.8K	RN55D-6982F	TRW	4701-03-6982	1
R176	RES.MF.1/8W.1%.69.8	RN55D-69R8F	TRW	4701-03-6989	1
R109	RES.MF.1/8W.1%.750	RN55D-7500F	TRW	4701-03-7500	1
R34 R53	RES.MF.1/8W.1%.78.7	RN55D-78R7F	TRW	4701-03-7879	2
R129	RES.MF.1/4W.1%.10	RN60D-10R0F	TRW	4701-13-1009	1
R165 R166 R167 R168	RES.MF.1/2W.1%.200	RN65D2000F	TRW	4701-23-2000	4
CR64 CR69	DIODE	1N959	SIEM	4801-01-0959	2
CR70	DIODE	1N5349A	MOT	4801-01-5349	1
CR1 CR10 CR11 CR12 CR3 CR3	DIODE.1N4002 GEN.	1N4002	FAIR	4801-02-0001	12
CR4 CR5 CR6 CR7 CR8 CR9	PURPOSE:RECT.100V.1A				
CR39 CR43 CR51 CR67 CR68	DIODE. ULTRA FAST	FD777	FAIR	4807-02-0777	6
WAVETEK PARTS LIST		TITLE PCA MAINBOARD		ASSEMBLY NO. 1100-00-0630	REV T
				PAGE 7	

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFG-PART-NO	MFG	WAVETEK NO.	QTY/PT
Q12	TRANS	2N3666	MOT	4901-03-6660	1
Q23 Q7 Q9	TRANS	2N4248	FAIR	4901-04-2480	3
Q18	TRANS	2N5139	FAIR	4901-05-1390	1
Q25 Q27 Q29	TRANS	2N5160-18	MOT	4901-05-1600	3
Q24	TRANS	TTP-30	TI	4902-00-0300	1
Q26	TRANS	SD215DE	STG	4902-00-2140	1
NONE	SWITCH ASSY	5103-00-0025	WVTK	5103-00-0025	1
NONE	BUTTON	J-52305-BLACK	CRL	5103-04-0003	4
NONE	WAFER	147-400	WVTK	5104-02-0013	6
NONE	SWITCH STOP	215-33-001-01-22	CTS	5104-07-0003	3
SW1	DETENT MOD	5104-99-0029	WVTK	5104-99-0029	1
SW2 SW4	DETENT MOD	5104-99-0042	WVTK	5104-99-0042	2
IC5 IC6 IC7	IC	LM741CN	NSC	7000-07-4100	3
VR4	IC	MC7812CT	MOT	7000-78-1200	1
VR1	IC	7824	FAIR	7000-78-2400	1
VR2	IC	7912	MOT	7000-79-1200	1
WAVETEK PARTS LIST		TITLE PCA MAINBOARD		ASSEMBLY NO. 1100-00-0630	REV T
				PAGE 9	

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFG-PART-NO	MFG	WAVETEK NO.	QTY/PT
CR59	CR14 CR15 CR16 CR17 CR18				
	CR19 CR21 CR22 CR23 CR24				
	CR25 CR26 CR27 CR28 CR29				
	CR30 CR31 CR32 CR33 CR34				
	CR36 CR37 CR38 CR39 CR40				
	CR41 CR42 CR44 CR45 CR46				
	CR47 CR48 CR49 CR50 CR52				
	CR53 CR54 CR55 CR56 CR57				
	CR58 CR59 CR60 CR61 CR62				
	CR63 CR66 CR71 CR72 CR73				
CR20	DIODE	5082-2811	HP	4809-02-2811	1
CR13	LED	TIL-220	TI	4899-00-0006	1
Q11 Q31 Q32	TRANS	2N2219A	NSC	4901-02-2191	3
Q16 Q17	TRANS	2N2369A	MOT	4901-02-3691	2
Q21 Q22 Q26, Q28	TRANS	2N2894A	FAIR	4901-02-8941	4
Q10 Q19 Q20	TRANS	2N2905A	NSC	4901-02-9051	3
Q6 Q8	TRANS	2N3585	FAIR	4901-03-5850	2
Q14 Q15 Q2 Q30 Q33 Q34 Q35	TRANS.PNP. TD-92	2N3640	FAIR	4901-03-6400	8
Q4	TRANS	2N3646	NSC	4901-03-6460	4
Q1 Q13 Q3 Q5	TRANS				
WAVETEK PARTS LIST		TITLE PCA MAINBOARD		ASSEMBLY NO. 1100-00-0630	REV T
				PAGE 8	

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFG-PART-NO	MFG	WAVETEK NO.	QTY/PT
VR3	VOLT REG	MA7805UC	FAIR	8000-78-0500	1
IC3	ECL.NGR.GUAD 2INP	MC10102	MOT	8001-01-0200	1
IC1 IC2	ECL.OR.NGR. 2-3-2INP	MC10105	MOT	8001-01-0500	2
IC4	ECL.XOR/XNOR. TRIZINP	MC10107	MOT	8001-01-0700	1
WAVETEK PARTS LIST		TITLE PCA MAINBOARD		ASSEMBLY NO. 1100-00-0630	REV T
				PAGE 10	

REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN	DATE	WAVETEK SAN DIEGO - CALIFORNIA
MATERIAL	PROTECTOR	TITLE	PARTS LIST PCA MAINBOARD
FINISH WAVETEK PROCESS	RELEASE APPROV	TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ± .010 XX ± .030 DO NOT SCALE DWG	SCALE
MODEL NO	DWG NO.	REV	REV
802	1100-00-0630	T	T
CODE 23338	SHEET 2	OF 2	1

NOTE UNLESS OTHERWISE SPECIFIED