

Fast & Accurate µP-controlled error correction

# Millivoltmeter URV 5

DC, 9 kHz to 18 GHz

200 μV to 1000 V 1 nW to 2 kW (50  $\Omega$ ) -60 to +63 dBm (50  $\Omega$ ) 0 to 400 V DC

(IEC 625 Bus)



## USES, CHARACTERISTICS


## Millivoltmeter URV 5



#### DC, 9 kHz to 18 GHz/200 µV to 1000 V

- Two test inputs
- Unexcelled accuracy through μP-controlled error correction: ±1%
- Voltage, level and power measurement; tendency indication
- Probes, insertion units and power sensors may be exchanged as required
- Readout in all conventional units with freely selectable reference impedance; relative measurements
- Frequency-dependent calibration factors are taken into account
- DC output (option)

Scale 1:2.5

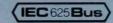

The Millivoltmeter URV 5 is a broadband, sensitive voltage, level and power meter featuring high accuracy and suitable both for manual operation and for use in systems. A great variety of measuring heads and accessories allows the URV 5 to be used for all kinds of measurement:

- With RF probe and DC probe for no-load AC and DC voltage measurements in electronic circuits.
- Voltage (and power) measurements in coaxial 50-Ω and 75-Ω systems using the low-reflection and low-loss insertion units (up to 2 GHz).
- Power measurement up to 18 GHz using the power sensors of Power Meter NRV.

**Readout** One or two measuring heads can be connected to the URV 5. The values measured in the two channels can be displayed separately, set off against one another or referred to any reference (A, B, A/B, B/A, A/REF<sub>A</sub>, B/REF<sub>B</sub>). For absolute measurement, four different units can be selected:

volt V watt W dBm dBV

In the case of **relative measurements**, the difference, the difference in percent, the logarithmic difference or the ratio is indicated ( $\Delta V$ ,  $\Delta W$ 

**Tendency indication** The Millivoltmeter has a fast tendency indication which follows the variations of the measured values, thus facilitating adjustments and maxima-minima settings.

Measurement rate With a test rate of up to 30 measurements/s, the URV 5 is ideally suited for use in systems. For applications requiring a noise-free indication rather than a high measurement rate, the results can be filtered, the measurement rate being then reduced accordingly. The measurement rate can be set in six steps via the filter functions (F0 to F5).

Waveform weighting The rectifiers used in the AC voltage measuring heads handle an extremely wide dynamic range of the input voltage of more than 90 dB. The partly non-linear transfer characteristic is individually linearized, so that for sinewave voltages the rms value is always read out. Non-sinewave voltages up to about 30 mV are also measured with rms weighting, whereas for voltages above 1 V the result is read out as  $V_{pp}/2\sqrt{2}$  (peak weighting). If dividers are connected ahead of the measuring heads, the specified limits are shifted upwards (300 mV and 10 V for 100-V insertion units).

PEP measurement The PEAK (PEP) key is used for reading the peak envelope power of a modulated signal. Signals with a minimum pulse width of 200 μs and pulse repetition frequencies down to 0.05 Hz can be measured in this mode.

Frequency-response correction Each measuring head is individually calibrated. The test frequency need only be entered via the keyboard or IEC/IEEE bus and the URV 5 will take account of the calibration factor in the measurement result.

**Attenuation correction** The URV 5 automatically takes account of the division factors of the measuring heads. If a plug-on divider or attenuator pad is connected ahead of the measuring head, the corresponding attenuation can be entered and will be taken into account in the result.

**Data input** Upon pressing the SHIFT key, a decimal keypad is available to the user for data entry or for calling up **special functions**, such as:

- display test,
- entry and checking of IEC/IEEE-bus address.
- nonvolatile storage of reference values,
- selection of filters F0 to F5,
- indication of calibration date/recalling of calibration routines.
- transfer of reference value channel A to B and vice versa.

**DC output (option)** This option delivers a DC voltage proportional to the numerical readout. Thanks to the versatile conversion capability of the URV 5, the scale can be linear or logarithmic.

#### MEASURING HEADS

The **measuring heads** are individually calibrated and therefore interchangeable without affecting the error limits.

URV 5-Z1 DC Probe 0 to 400 V,  $R_{in} = 9 M\Omega \parallel 6 pF$ 



DC probe

**URV 5-Z7** 

RF Probe with ground cable and clip, ground sleeve, ground strip, hook tip and solder tip

without plug-on divider 200  $\mu V$  to 10 V, 20 kHz to 1 GHz


with 20-dB plug-on divider (URV-Z6) 2 mV to 100 V, 1 to 500 MHz

with **40-dB plug-on divider** (URV-Z6) 20 mV to 1000 V, 500 kHz to 500 MHz

with BNC adapter (URV-Z6) with or without plug-on divider, for voltage measurement on 50- $\Omega$  coaxial lines

with 50- $\Omega$  adapter (URV-Z50) 200  $\mu$ V to 10 V, 20 kHz to 1 GHz RF voltage measurement with integrated termination in 50- $\Omega$  coaxial systems

with **75-** $\Omega$  adapter (URV-Z3) 200  $\mu$ V to 10 V, 20 kHz to 500 MHz RF voltage measurement with integrated termination in 75- $\Omega$  coaxial systems (adaptable connectors)

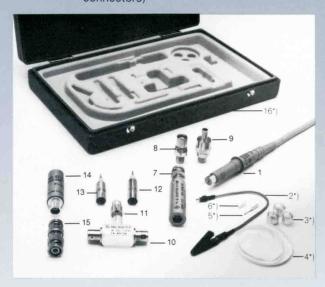

RF probe (1) with accessories: ground cable and clip (2); ground sleeve (3); ground strip (4); hook tip (5); solder tip (6);  $75-\Omega$  adapter (7) with BNC adapter, adapter to 1.6/5.6 connectors (8) and to 2.5/6 connectors (9); BNC adapter (10) with reducer sleeve (11) for plug-on dividers (12, 13):  $50-\Omega$  adapter (14) with BNC adapter (15) to BNC connectors; case (16); \*) supplied with RF Probe URV 5-Z7

**URV 5-Z9** 

Dual Directional Coupler, 50  $\Omega$ 

100 kHz to 80 MHz, 10  $\mu$ W to 2 kW Coupling of forward and reflected power; in conjunction with two RF Probes URV 5-Z7 for measurement of directional power and reflection



Dual directional coupler

**URV 5-Z2** 

10-V Insertion Unit, 50  $\Omega$ 

200 μV to 10 V 9 kHz to 2 GHz (model 55) 9 kHz to 1 GHz (model 04)

RF voltage measurement with low reflection coefficient in  $50-\Omega$  coaxial systems



**URV 5-Z4** 

100-V Insertion Units, 50 and 75  $\Omega$ 

2 mV to 100 V

100 kHz to 2 GHz, 50  $\Omega$  (model 55) 100 kHz to 1 GHz, 50  $\Omega$  (model 04) 100 kHz to 2 GHz, 75  $\Omega$  (model 75)

RF voltage measurement in  $50-\Omega$  and  $75-\Omega$  coaxial systems for higher voltages and with extremely low reflection coefficient; power measurements up to 200 W (130 W) possible with suitable termination

NRV-Z1

1-nW Power Sensor, 50  $\Omega$ 

1 nW to 20 mW, 10 MHz to 18 GHz

NRV-Z2

Precision Power Sensor, 50  $\Omega$ 

100 nW to 500 mW, 10 MHz to 18 GHz VSWR < 1.05 up to 4 GHz, < 1.2 up to 18 GHz


NRV-Z3


400-pW Power Sensor, 75  $\Omega$ 

400 pW to 13 mW, 1 MHz to 2.5 GHz



### **OPERATION**

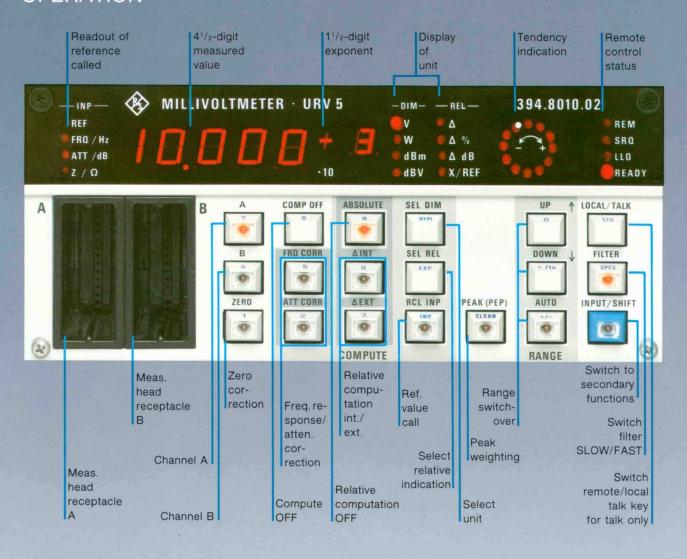

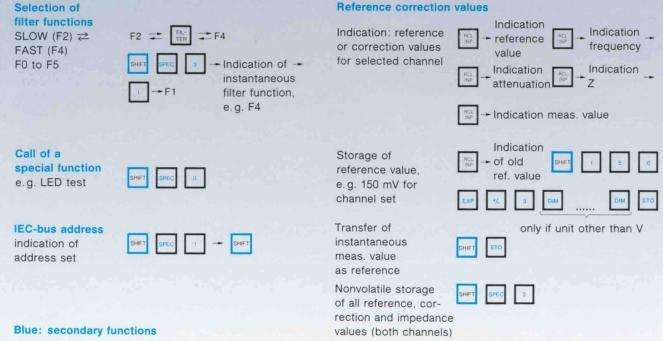

#### Input pointer

Command code	Function		
IA IB	Input for channel A valid Input for channel B valid		
	Note: With commands marked by 'it is possible to define the input channel — independent of the selected measurement channel — for all subsequent commands by sending IA or IB once in the command string (resetting by delimiter or PA, PB).		

#### Setting commands

Command code	IA. IB	Function				
CØ		Reading in of test data into basic unit (				
C1	-	Basic setting: PA (PB), E0, F2, KA0, KF0, RG0, U0, H0, N0, Q0, W3, Y1 Note: Resetting of input pointers IA, IB				
E0 E1		Off On PEAK (PEP) measurement				
F0 F1 F2 F3 F4 F5		SLOW FAST SUPERFAST 31/2-digit dis	measure- ment speed			
KF0 KF1 KA0 KA1		FRQ CORR off FRQ CORR on ATT CORR off ATT CORR on (It is also possible to send K KF1)	corrective evaluation			
NØ N1	-	Output with Output without	alpha header			
01	*	Triggering	ZERO meas.			
PA PB	-	Probe A Probe B Note: Resetting of input poin	Setting of measurement channel nters IA, IB			
RG, RGØ RG1 RG2 RG3 RG4	:	Autorange 10 mV 100 mV 100 mV 1 V 1 V 10 V 10 V 100 V	1 V 10 V 100 V 1000 V			
		AC probe, 100-V 10-V insertion insertion units unit (It is also possible to send R RG3)	DC probe			
U0 U1 U2 U7	:	V dBm dBV W	Output unit (ABSOLUTE)			
U3 [[W] [X]] U4 [[W] [X]] U5 [[W] [X]] U6 [[W] [X]]	* * * *	$ \begin{array}{c c} \Delta \text{lin} & \text{in V referred} \\ \Delta \% & \text{to internal} \\ \Delta \text{dB} & \text{reference} \\ \text{X/Ref} & \text{value} \\ \text{Note: The letters X and/or W} \\ \text{commands U3 to U6}. \end{array} $	unit (relative) / can be added to the			
YØ		X = ΔEXT (reference = secon W = relative readout in W, e.				
Y1 YX		off Cyclical on temperature Triggering measuremen				
Y?	77 -	Read-out of set status, i.e. if cyclical temperature measurement is switched on or off (output via SRQ).				

#### Data input commands

DU (DATUM) DV (DATUM) DB (DATUM) DM (DATUM) DW (DATUM)	*	Reference value in V Reference value in V Reference value in dBV Reference value in dBm Reference value in W	Data input	
DR (DATUM)		Reference impedance in $\Omega$		

#### Data input commands (continued)

Command code		Function
DZ (DATUM)	H	Reference impedance in $\Omega$
DA DATUM DF DATUM		Correction attenuation in dB Correction frequency in Hz
D AA D BB		Data copying to channel IA, IB Data copying values B same as in channel A Data copying values A same as in channel B

#### Interface commands

W1 W2 W3 W4 W5 W6 W7 W8	A 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	CR ETX CR + NL EOI NL + EOI CR + EOI ETX + EOI CR + NL + EOI	Delimiters for string output
Q0 Q1 Q2 Q3	1 1 1 1	off on (all SRQ) on (except for SRQ (80) ≙ meas. value ready. all SR( on) (only error SRQ, >= 96)	Call of Q SRQ
HØ H1	5	off Auxiliary mode on (PET time-out correction	on)

#### Trigger commands

X0 X1 X2 X3	11	Reset command for commands X3/X4 Trigger command ( \(\text{\text{\text{\$\text{CFT}}}}\) Trigger command + storage of measured value as reference value Setting command for triggering measurement upon a service request
X4 X8	-	Setting command for continuous triggering Trigger command for both measurement channels (measured values are separated by delimiters [corresponding to W0 to W8])
Z0 Z1 Z2 Z3		Output of reference value Output of reference impedance Output of correction frequency Output of correction attenuation

#### Special commands

SØ		LED test of display
S4		Indication of date under which the calibration values have been stored
S5	- 1	Output of error code according to hardware func- tion errors occurred
S6	-	Checksum output of program memory
ST		Status output of all device settings for the selected channel

#### Keywords

CALIBRATION	Switchover between measurement and calibration mode: only commands for calibration are valid (CA)
-------------	---

#### Separators and delimiters

Symbol	Designation	ASCII decimal equivalent	Recommended use		
	Comma	44	Separator between commands		
CR	Carriage Return	13			
NL ETX	New Line	10 3	Delimiters		
EOI		s set during the trans epted as delimiter.	sfer of the last character,		

#### Basic Unit

(Unless otherwise stated, all specifications refer to voltage readout in V)

2 (A and B), independent of each other, separately adjustable all intelligent measuring heads for URV 5 and NRV can be used > 94 dB (4 ranges in 20-dB steps) Measuring heads

Measurement range
Measurement mode
absolute
relative
Readout mode
absolute
relative
Plesier range

A, B A/REF<sub>A</sub>, B/REF<sub>B</sub>, A/B, B/A

V, W, dBm, dBV ΔV, ΔW, Δ %, ΔdB, X/REF ±19,999 × 10±19 0.01% (0.1%) <sup>1)</sup> of nominal measure-ment range with readout in V; 0.01 dB with readout in dBm, dBV or ΔdB. Display range Resolution

0.01% with readout in  $\Delta$ %

±0.15% of rdg per channel

Error limits
18 to 28 °C
Additional error due to temperature
10 to 40 °C
0 to 50 °C Filter

±0.25% of rdg per channel ±0.5% of rdg per channel ±0.5% of rdg per channel for reduction of display noise, adjustable<sup>3</sup> in 6 steps (F0 to F5) via keyboard or remote-controlled, duration approx. 4 s<sup>2)</sup> approx. 1 measurement/s with filter F0 up to 30 measurement/s with filter F5<sup>2)</sup> approx. 0.05 s with filter F5 up to 20 s with filter F0<sup>2</sup>; with dual-channel measurement sum of the individual times as maxi-mum, no switchover delay; all meas-urements triggered via IEC/IEEE bus are in steady state, even in case of range switchover Zero adjustment ...... Measurement rate (manual)

Measurement time (IEC/IEEE bus)

of range switchover

PEP measurement Pulse width approx. 200 us to CW Minimum pulse repetition frequency

FO F4 IES. f<sub>min</sub>/Hz 0.05 25

Frequency-response correction

can be selected for all AC voltage and power measuring heads; frequency response of measuring head is accounted for after entry of test frequency; one frequency per channel can be entered can be switched on for all measuring heads; one aftenuation value per channel can be entered (-199.99 to +199.99 dB) one reference value per channel for relative measurements (REF<sub>A</sub>, REF<sub>B</sub>); entry via keyboard, IEC/IEEE bus or

Attenuation correction

entry via keyboard, IEC/IEEE bus or transfer of measured value for computation and indication of power and power level; one value per channel can be entered  $(10^4 \text{ to } 10^5 \Omega)$ .

(10 - 10 10 12), automatic initialization with impedance value (50/75 Ω) of power sensors for NRV and insertion units URV 5-Z2/-Z4

Remote control

Reference impedance

IEC 625-1 (IEEE 488) for control of Interface ..... all device functions SH1, AH1, T5, L4, SR1, RL1, DC1, DT1, PP1 Interface functions

Operating temperature range

Storage temperature range ... Power supply ......

0 to +50 °C, class I to IEC 359 (no dewing) -40 to +70 °C 100/120/220/240 V ±10 % 47 to 63 Hz, 400 Hz (30 VA) 241 mm × 110 mm × 340 mm, 4.4 kg Dimensions, weight .....

Option DC Output URV 5-B2 Output impedance Output voltage range (EMF) 1 kΩ -1.999 to +1.999 V 1 mV (10 digits) ±2 mV Resolution .....

#### Measuring heads and measurement functions

(All specifications without errors of basic unit)

Measurement rate (manual) 4 . Measurement time (IEC/IEEE bus), trigger to output of 1st byte4)

#### DC voltage measurement

#### using DC Probe URV 5-Z1

Voltage measure			0 to 400 V
nput impedance			
Maximum load .			400 V

General data 15 mm dia. x 125 mm, 80 g Temperature range see basic unit URV 5

Resolution<sup>3</sup> Max. reading Error limits 18 to 28 °C range 1 V 10 V 100 V  $\begin{array}{l} \pm (0.15\% \text{ of rdg} + 5 \text{ digits}) \\ \pm (0.15\% \text{ of rdg} + 1 \text{ digit}) \\ \pm (0.15\% \text{ of rdg} + 1 \text{ digit}) \\ \pm (0.35\% \text{ of rdg} + 1 \text{ digit}) \end{array}$ 100 μV 1 mV 10 mV 1.2200 V 12.200 V 122.00 V 400 V 100 mV

Additional error due to temperature 10 to 40 °C . . . . . . . . . ±0.25 % of rdg 0 to 50 °C . . . . . . . . . . . . ±0.5 % of rdg

FO F1 F2 F3 F4 F5 64 (15) 64 (15) 64 (15) 64 (15) 64 (15) 0.07 s 13 s 0.8 s 0.22 s 0.034 s

#### AC voltage measurement

Filter-dependent data

#### — using Insertion Unit URV 5-Z2

Voltage measurement range 200 µV to 10 V Level/power measurement range.

-60 to +33 dBm/1 nW to 2 W 9 kHz to 2 GHz (model 55) 9 kHz to 1 GHz (model 04)

50 Ω 15 V 22 V 50 V

Maximum reflection coefficient and VSWR (model 04 up to 1 GHz)

	С	200 50	1 1.6 GHz		
r/%	1	2	7	10	15
VSWR	1.02	1.04	1.15	1.22	1.35

General data

Connectors
Dimensions, weight
Length of connecting cable N male, N female 85 mm × 115 mm × 30 mm, 0.35 kg 1.2 m Temperature range see basic unit

Footnotes see page 7.

Nominal range	Resolution <sup>3)</sup>	Max. reading	Error limits 18 to 28 °C
10 mV 100 mV 1 V 10 V	1 μV 10 μV 100 μV 1 mV	12.200 mV 122.00 mV 1.2200 V 10.500 V	±(0.3% of rdg + 3 digits + frequency response error + zero error)

Frequency response error in % of rdg

9	2	50	kHz	30 10	0 20	0 50	MHz	1 20	aHz
	0.5)		0.5	1.5	2	3	5	76)	7)
Model 55	del 55 6 <sup>5)</sup> 2	0.5	1.5	2	5	11	18	(8)	
Model 04	65)	2	0.5	1.5	2	3	5	7).	
Model 04	03)	2	0.5	1.5	2	6	13	8)	

Zero error, display noise, measurement rate and additional error due to temperature see additional data for AC voltage measurement on back cover

#### Measuring heads and measurement functions (continued)

#### AC voltage measurement

#### - using Insertion Unit URV 5-Z4

Voltage measurement range	2 mV to 100 V
Level measurement range	
	(models 55 and 04) -42 to +51 dBm (model 75)
Power measurement range	100 nW to 200 W
	(models 55 and 04)
Frequency range	50 nW to 130 W (model 75) 100 kHz to 2 GHz (models 55 and 75)
	100 kHz to 1 GHz (model 04)
Characteristic impedance	50 Ω (models 55 and 04)
	75 Ω (model 75)
Max. input voltage rms (sinewave)	150 V
peak	220 V

Maximum reflection coefficient and VSWR

D	c		200 5	MHz 00 1	GHz 1.6
	r/%	1		2	3
Model 55	VSWR	1.02		1.04	1.06
Model 04	r/%	1		2	
Model 04	VSWR	1.02		1.04	
Model 75	r/%	1.5	2	3	5
Model 75	VSWR	1.03	1.04	1.06	1.11

Nominal range	Resolution	Max. reading	Error limits 18 to 28 °C
100 mV 1 V 10 V 100 V	10 μV 100 μV 1 mV 10 mV	122.00 mV 1.2200 V 12.200 V 105.00 V	± (0.3% of rdg + 3 digits + frequency response error + zero error)

Frequency response error in % of rdg

10	0 20	00 50	kHz 00	3	0 2	00 50	MHz 00		.6	2 GH						
	455	0.5)			1.5	2	4	6	8 91	7)						
Model 55	155)	5) 65)	2	1	2	5	7	10	18	8)						
Model 04		2		1.5	2	4	71		T							
Model 04	155)	65)	2	- 2	- 2		2	2	2	1	2	6	9	8)		
Model 75	205)	85)	2	,	2	2.5	5	7	109)	2)						
Model 75	200	00)	2	'	2	5	7	12	20	8)						

Zero error, display noise, measurement rate and additional error due to temperature see additional data for AC voltage measurement on back cover

Connectors	N male, N female
Dimensions, weight	85 mm × 115 mm × 30 mm, 0.35 kg
Length of connecting cable	1.2 m
Temperature range	see basic unit

#### AC voltage measurement

#### using RF Probe URV 5-Z7

RF probe	without plug-on divider	with 20-dB plug-on divider	with 40-dB plug-on divider	with 50-Ω adapter	with 75-Ω adapter
Voltage measurement range Level measurement range 50 (75) Ω Power measurement range 50 (75) Ω Frequency range Input impedance C <sub>in</sub>    R <sub>p</sub> (f - 10 MHz) Max. input voltage rms (sinewave) peak DC	2.5 pF    > 80 kΩ 15 V 22 V	2 mV to 100 V -40 to +53 dBm 100 nW to 200 W 1 to 500 MHz 1 pF   > 1 MsΩ 150 V 220 V 1000 V	20 mV to 1000 V -20 to + 73 dBm 10 μW to 20 kW 0.5 to 500 MHz 0.5 pF   > 10 MΩ 1050 V 1500 V 1000 V	200 $\mu$ V to 10 V $-60$ to +33 dBm 1 nW to 2 W 20 kHz to 1 GHz 50 $\Omega$ 10 V 22 V 10 V	200 μV to 10 V (-62 to +31 dBm) (500 pW to 1.3 W) 20 kHz to 500 MHz 75 Ω 12 V 22 V 12 V

Maximum reflection coefficient and VSWR (adapter with probe)

D	С		50 10	00 20	00 5	MHz 00 70	00 GH
50-Ω adapter	r/% VSWR	1.5 1.03	3 1.06	1.	5 11	10 1.22	18 1,44
75-Ω adapter (with BNC connector)	r/% VSWR	1.5 1.03		3 1.06	10 1.22		

1) Filter F5.

2) Further details see measuring heads and measuring functions.

3) With filters F0 to F4.

4) Without range switchover, 1 channel.
5) The additional error due to temperature stated in the additional data may be exceeded at temperatures above 28 °C.
6) +3% for 1 to 10 V.

7) With frequency response correction (linear interpolation between calibration frequencies).

Calibration frequencies: 32/40/50/64/80/100/120/160/200/250/320/ 400/500/600/700/800/900/1000/1100/1200/ 1300/1400/1500/1600/1700/1800/1900/

1100 to 2000 MHz models 55 and 75 only.

8) Without frequency response correction.

9) +5% for 10 to 100 V 10) +7% for 1 to 10 V.

11) With frequency response correction (linear interpolation between calibration frequencies).

Calibration frequencies: 32/40/50/64/80/100/120/160/200/250/300/ 350/400/450/500/550/600/650/700/750/800/ 850/900/950/1000 MHz.

Nominal range	Resolution <sup>3)</sup>	Max. reading	Error limits 18 to 28 °C
10 mV 100 mV 1 V 10 V	1 μV 10 μV 100 μV 1 mV	12.200 mV 122.00 mV 1.2200 V 10.500 V	± (0.3% of reading + 3 digits + frequency response error + zero error)

Frequency response error in % of rdg MHz 00 1 GHz KHZ 20 50 100 200 500 30 100 200 500 RF probe 2 7 1110) 11) with 50-Ω adapter 105) 2 1.5 2 4 10 20 75-Ω adapter (with BNC 105) 2 1.5 2 4 12 connector) RF probe with BNC adapter 105) 2 1.5 3 12 0.5 and with 20-dB plug-205 12 15 20 on divider 40-dB plug-205 7 10 15

Zero error, display noise, measurement rate and additional error due to temperature see additional data for AC voltage measurement on back cover

G	er	ner	aı	a	a	ta
Di	m	en	Si	on	9	v

Dimensions, weights	
Probe	18 mm dia. x 100 mm, 140 g
Plug-on divider	10 mm dia. x 45 mm, 7 g
BNČ adapter	30 mm × 50 mm, 45 g
50-Ω adapter	
75-Ω adapter	
Length of connecting cable	
Temperature range	

### SPECIFICATIONS, ORDERING INFORMATION

Measuring heads and measurement functions (continued)

#### AC voltage measurement

Measurement rate

Filter	F0	F1	F2	F3	F4	F5
Measurement rate (manual operation)	1/s	1.5/s	3/s	5/s	10/s	16/s
Measuring time (IEC/ IEEE bus), trigger to output of 1st byte	22 s	5.5 s	1.4 s	0.36 s	0.10 s	0.065 s

display noise12) (double standard deviation

observation time 1 min, temperature of measuring head 18 to 28 °C, approx. double values at 0 °C)


Black curve:

zero error<sup>12)</sup> (1 h after zero adjustment, ±1 °C; after warmup of 2 hours with measuring head connected)

dditional error due to temperature

10 to 40 °C 0 to 50 °C

#### - additional data

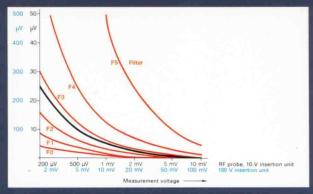

#### using Dual Directional Coupler URV 5-Z9 Directional power and reflection measurement and 2 RF Probes URV 5-Z7

Level/power measurement range Minimum forward power required

-20 to +63 dBm/10  $\mu$ W to 2 kW

for reflection measurements
Frequency range
Characteristic impedance
Coupling (nominal value)

50 mW (17 dBm) 100 kHz to 80 MHz

Error limits in dB for forward power measured with reflection-free load (18 to 28 °C)

0.	.1 0	.2	0.4	30	50	80 MHz
	±0.20	±0.15	±0.1	0 ±0	.15 ±0.	20 13)
	-1/+0.2	-0,4/+0,2	±0.2	±0	).35 ±0.	.8 14)

Display noise and zero error see page 7 (RF probe), taking into account the coupling Additional error due to temperature incl. RF Probe URV5-Z7 10 to  $40\,^{\circ}\text{C}$  ...  $\pm 0.2 \text{ dB}$  0 to  $50\,^{\circ}\text{C}$  ...  $\pm 0.5 \text{ dB}$ 


Minimum directivity in dB (typ. values in parentheses)

.1	0.2	0.4	30	50 M	Hz 80
23(30	0) 2	8(35)	35(40)	30(35)	20(30)

## .....≤0.015 dB

Insertion loss . Reflection coefficient 0.1 to 30 MHz 30 to 80 MHz 

Max. permissible forward power P<sub>F</sub> . see diagram

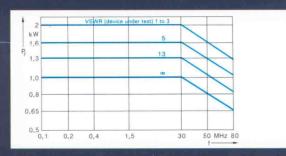

General data

N male, N female 118 mm  $\times$  102 mm  $\times$  45 mm, 0.5 kg see basic unit URV 5 

#### Power measurement

#### using Power Sensors NRV-Z1/-Z2/-Z3

See page 3, detailed information in data sheet 828251 of Dual-channel Power Meter NRV

#### Ordering information

Order designation Doption DC Output 19" Rack Adapter	394.8010.02 URV 5-B2	395.0112.02 079.0631.00
Measuring heads DC Probe with ground cable, clamp-on tip and		
BNC adapter	URV 5-Z1	395.0512.02
50 Ω, 2 GHz (model 55)		
$\begin{array}{c} 50~\Omega,~2~\text{GHz}~(\text{model}~55)\\ 50~\Omega,~1~\text{GHz}~(\text{model}~04)\\ 75~\Omega,~2~\text{GHz}~(\text{model}~75)\\ \end{array}$	URV 5-Z4	395.1619.04

<sup>12)</sup> Higher values with plug-on dividers and attenuation correction.
13) Taking into account calibration values for coupling, including probe

RF Probe with ground cable and clip, ground sleeve and strip, hook tip and solder tip, in case . Power Sensor $50~\Omega$ , 18 GHz, 20 mW . 50 $\Omega$ . 18 GHz, 500 mW	NRV-Z2	828.3218.02
75 Ω, 2.5 GHz, 13 mW	NRV-Z3	828.3418.02
Recommended extras for RF probe		
Accessory Set		
comprising plug-on dividers 20 dB/40 dB, BNC adapter.		
reducing sleeve for dividers	URV-Z6	292.5364.02
50-Ω Adapter		
(BNC female connector) with adapter to BNC connector	URV-Z50	394.9816.50
75-Ω Adapter	3111 233	
with adapters to		
BNC connector, 2.5/6 connectors and		
1.6/5.6 connectors	URV-Z3	243.9118.70
Dual Directional Coupler 2 kW, 0.1 to 80 MHz	URV 5-Z9	265.5315.02
2 KW, 0.1 to 60 MH2	UNV 3-29	203.3313.02
Servicing aids		
Service Kit for calibration of basic units URV 5 and NRV	UZ-8	394.9968.02
or basic units on v 3 and 140 v	020	004.0000.02

Calibration frequencies: 0.1/0.15/0.2/0.3/0.4/0.45/0.5/0.7/1/1.5/3/5/10/20/30/40/50/60/70/80 MHz

<sup>14)</sup> When using nominal coupling of 40 dB, including probe error