


GPIB Command Reference

Agilent 4155B Semiconductor Parameter Analyzer
Agilent 4156B Precision Semiconductor Parameter Analyzer

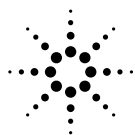

Agilent Technologies

Agilent Part No. 04156-90500

Printed in Japan May 2000

Edition 4

Legal Notice

The information contained in this document is subject to change without notice.

Copyright © 1997, 1998 Agilent Technologies

This document contains information which is protected by copyright. All rights are reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

- **Product Warranty**

Agilent Technologies warrant Agilent Technologies hardware, accessories and supplies against defects in materials and workmanship for the period of one year from the warranty start date specified below. If Agilent Technologies receive notice of such defects during the warranty period, Agilent Technologies will, at its option, either repair or replace products which prove to be defective. Replacement products may be either new or like-new.

Warranty service of this product will be performed at Agilent Technologies. Buyer shall prepay shipping charges to Agilent Technologies and Agilent Technologies shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to Agilent Technologies from another country.

Agilent Technologies do not warrant that the operation of Agilent Technologies products will be uninterrupted or error free. If Agilent is unable, within a reasonable time, to repair or replace any product to a condition as warranted, customer will be entitled to a refund of the purchase price upon prompt return of the product.

The Agilent Technologies products may contain remanufactured parts equivalent to new in performance or may have been subject to incidental use.

The warranty period begins on the date of delivery or on the date of installation if installed by Agilent Technologies. If customer schedules or delays Agilent Technologies installation more than 30 days after delivery, warranty begins on the 31st day from delivery.

Warranty does not apply to defects resulting from (a) improper or inadequate maintenance or calibration, (b) software, interfacing, parts or supplies not supplied by Agilent Technologies, (c) unauthorized modification or misuse, (d) operation outside of the published environmental specifications for the product, or (e) improper site preparation or maintenance.

To the extent allowed by local law, the above warranties are exclusive and no other warranty or condition, whether written or oral, is expressed or implied and Agilent Technologies specifically disclaim any implied warranties or conditions of merchantability, satisfactory quality, and fitness for a particular purpose.

Agilent Technologies will be liable for damage to tangible property per incident up to the greater of \$300,000 or the actual amount paid for the product that is the subject of the claim, and for damages for bodily injury or death, to the extent that all such damages are determined by a court of competent jurisdiction to have been directly caused by a defective Agilent Technologies product.

To the extent allowed by local law, the remedies in this warranty statement are customer's sole and exclusive remedies. Except as indicated above, in no event will Agilent Technologies or its suppliers be liable for loss of date or for direct, special, incidental, consequential (including lost profit or date), or other damage, whether based in contract, tort, or otherwise.

For consumer transactions in Australia and New Zealand: the warranty terms contained in this statement, except to the extent lawfully permitted, do not exclude, restrict or modify and are in addition to the mandatory statutory rights applicable to the sale of this product to you.

- **Assistance**

Product maintenance agreements and other customer assistance agreements are available for Agilent Technologies products.

For any assistance, contact your nearest Agilent Technologies Sales Office.

- **Certification**

Agilent Technologies Inc. certifies that this product met its published specifications at the time of shipment from the factory. Agilent further certifies that its calibration measurements are traceable to the National Institute of Standards and Technology (NIST), to the extent allowed by the Institute's calibration facility, and to the calibration facilities of other International Standards Organization members.

Printing History

Edition 1:	August 1997
Edition 2:	September 1998
Edition 3:	January 2000
Edition 4:	May 2000

Microsoft, Windows, MS-DOS and Excel are registered trademarks of Microsoft Corporation.

NFS is a trademark of Sun Microsystems, Inc.

In This Manual

Agilent 4155B/4156B provides three command modes to control the 4155B/4156B via GPIB interface. You can control the 4155B/4156B using one of the following command modes.

- *4155/4156 SCPI command mode*

SCPI means Standard Commands for Programmable Instruments. This mode is the default mode of the 4155B/4156B, and allows you to control *all* functions of the 4155B/4156B.

- *4155/4156 FLEX command mode*

FLEX means Fast Language for EXecution. This mode allows you to control *measurement* functions of the 4155B/4156B. Command execution is faster than the SCPI command mode.

- *4145 syntax command mode*

This mode allows you to execute the 4145A/B programs on the 4155B/4156B directly with little or no modification. In this command mode, you *cannot* control all functions of the 4155B/4156B.

This manual describes about the 4155B/4156B FLEX command set and the 4145 syntax command set, and consists of the following chapters:

- 4155B/4156B FLEX Commands

Lists the 4155B/4156B FLEX commands, and provides description, command syntax, example statements, and so on. Also provides the command input format, data output format, status byte information and error messages.

- 4145B Syntax Command Set

Lists the 4145 Syntax commands, and provides description, command syntax, example statements, and so on. Also provides the general conventions, differences from the 4145A/B commands and status byte information.

For information about the 4155B/4156B SCPI command set, refer to *SCPI Command Reference*.

See *User's Guide Measurement and Analysis* and *User's Guide General Information* for information about the 4155B/4156B itself.

Refer to *Programmer's Guide* to make a program and use built-in Instrument BASIC controller.

NOTE**4155B/4156B FLEX command set**

The 4155B/4156B FLEX command set includes some commands which have the same name as the GPIB command of Agilent 4142B DC Source/Monitor. This is useful for you who create the 4155B/4156B measurement program by modifying the program created to control the 4142B.

However the 4155B/4156B commands are not fully compatible with the 4142B commands. So you need to do some modifications on the measurement program for the 4142B.

Contents

1. 4155B/4156B FLEX Commands

Control Mode	1-3
US/US42 Command	1-4
To Quit FLEX Command Mode	1-5
To Use 4142B Measurement Program	1-6
Command Input Format	1-8
Data Output Format	1-11
ASCII Format in US Control Mode	1-12
Binary Format in US Control Mode	1-17
ASCII Format in US42 Control Mode	1-23
Binary Format in US42 Control Mode	1-28
Status Byte	1-34
Command Reference	1-36
AB	1-42
ACH	1-44
AV	1-46
AZ	1-47
BC	1-48
CA	1-49
*CAL?	1-50
CL	1-51
CLOSE	1-53
*CLS	1-54
CM	1-55
CMM	1-56
CN	1-57
DI	1-59
DO	1-62
DV	1-63
DZ	1-66

Contents

END	1-68
ERR?	1-69
*ESE(?)	1-70
*ESR?	1-72
FL	1-73
FMT	1-74
GOC	1-76
*IDN?	1-78
IN	1-79
LOP?	1-81
*LRN?	1-84
LST?	1-90
MCC	1-92
MI	1-93
MM	1-96
MP	1-98
MSC	1-101
MT	1-102
MV	1-103
NUB?	1-106
*OPC(?)	1-107
OPEN	1-108
*OPT?	1-109
OS	1-110
PA	1-111
PI	1-112
POR	1-115
PRN	1-116
PT	1-117
PV	1-119
PWI	1-122
PWV	1-126

Contents

RBC	1-130
RCV	1-131
RD?	1-132
RI	1-133
RMD?	1-139
*RST	1-140
RU	1-141
RV	1-142
RZ	1-147
SCR	1-148
SDSK	1-149
SIT	1-150
SLI	1-151
SOC	1-152
SPG	1-153
SPL	1-156
SPP	1-157
SPR	1-158
*SRE	1-159
*SRE?	1-160
SRP	1-161
SSP	1-162
ST	1-163
*STB?	1-165
STC	1-166
STG	1-167
STI	1-168
STM	1-172
STP	1-173
STT	1-176
STV	1-178
:SYST:ERR?	1-181

Contents

TI/TI?	1-182
TM	1-184
*TST?	1-185
TV/TV?	1-187
UNT?	1-189
VM	1-190
*WAI	1-191
WI	1-192
WM	1-196
WNU?	1-197
WR	1-198
WS	1-199
WSI	1-200
WSV	1-204
WT	1-207
WV	1-208
XE	1-212
Error Messages	1-213

2. 4145B Syntax Command Set

General Conventions	2-3
Differences from 4145A/B Commands	2-5
Non-supported Commands	2-5
Differences on Commands	2-6
Running 4145A/B Program Directly on 4155B/4156B	2-10
Spot Measurement	2-10
Sweep Steps in Logarithmic Step Mode	2-10
Terminator	2-11

Contents

System Mode Commands	2-13
AS	2-15
CH	2-16
DE	2-17
DM	2-18
DO	2-19
DT	2-21
FS	2-22
GL	2-23
GT	2-24
HT	2-25
IC	2-26
IN	2-27
IP	2-28
IR	2-29
LI	2-30
MD	2-31
ME	2-32
MX	2-33
NR	2-34
PR	2-35
RT	2-36
SC	2-37
SH	2-38
SM	2-39
SS	2-40
SV	2-41
VC	2-42
VM	2-43
VP	2-44
VR	2-45
VS	2-46

Contents

WT	2-47
XN, YA, YB	2-48
XT	2-49
User Mode Commands	2-50
DI	2-51
DS	2-52
DV	2-53
GL	2-54
TI	2-55
TV	2-57
HP-GL Commands	2-59
Common Mode Commands	2-60
BC	2-61
CA	2-62
DC	2-63
DL	2-64
DP	2-65
DR	2-66
EI	2-67
ID	2-68
IT	2-69
PF	2-70
PL	2-71
SF	2-72
4145B Syntax Mode Status Byte	2-73

1 4155B/4156B FLEX Commands

4155B/4156B FLEX Commands

This chapter provides the following information:

- “Control Mode”
- “Command Input Format”
- “Data Output Format”
- “Status Byte”
- “Command Reference”
- “Error Messages”

Control Mode

To use the 4155B/4156B FLEX commands, enter the *US* or *US42* command when the 4155B/4156B is in one of the following state. This command causes the 4155B/4156B control mode transition.

- Power on state
- Interactive operation mode (normal operation mode, which is not GPIB control mode)
- 4155B/4156B SCPI command control mode

The control mode transition resets the 4155B/4156B settings. For the initial settings in the FLEX command control mode, see the **RST* command in the “Command Reference” section in this chapter.

In the FLEX command control mode, you can use the all commands described in this chapter, and the SCPI commands and the 4145A/B syntax commands are not available.

If you use the built-in IBASIC controller, use the full IBASIC screen. All front panel keys except for the following keys are available.

- MEASUREMENT key group
- Plot/Print key
- Save and Get keys
- IBASIC Display key

If you use an external controller, the screen and front panel keys on the 4155B/4156B front panel are not available. Only the LOCAL secondary softkey is available. This softkey is used to release the remote control state of the 4155B/4156B.

US/US42 Command

Syntax, command parameters, and example statements for the US and US42 command are shown below.

Difference between US command and US42 command is that the US42 command provides the 4142B DC Source/Monitor-like response for the following items:

- Output data format
- Query response
- Status code (status byte)

Syntax

Syntax of US command:

US

Syntax of US42 command:

US42 [*level*]

Parameters

level Support level for the 4142B-like response. Must be an integer. Refer to the following table. If you do not specify this parameter, *level* is set to 255 (1+2+4+8+16+32+64+128). This means all *levels* are selected.

If you select multiple levels, enter a value that is the sum of the desired *level* values. For example, if you select levels 1, 2 and 4, enter 7 (1+2+4) as the *level* value.

Example Statements

OUTPUT @Hp4156;"US"

OUTPUT @Hp4156;"US42"

OUTPUT @Hp4156;"US42 15"

<i>level</i>	Description
1	Supports the 4142B-like data output format. (FMT command allows you to select data output format.)
2	Supports the 4142B-like status code (status byte).
4	Supports the 4142B-like query response.
8	Supports the 4142B-like GNDU, VMU output switch setting. (GNDU and VMU output switches are set to ON after executing the CL command without specifying channel number.)
16	Reads output data without RMD? command. ^a
32	Not defined.
64	Not defined.
128	Not defined.

- a. Without *level*=16, you need to enter the RMD? command before entering the command (ex; ENTER (HP BASIC) command) to read the output data. If you select *level*=16, you do not need the RMD? command. But you cannot read the output data correctly if both output data and query response are in the 4155B/4156B output buffer.

To Quit FLEX Command Mode

To quit the FLEX command control mode, do one of the following:

- Enter the :PAGE command (ex: OUTPUT @Hp415x;":PAGE")
- Enter the LOCAL (HP BASIC) command
- If you use an external controller: Select the LOCAL secondary softkey displayed on the 4155B/4156B screen.
- If you use the built-in IBASIC controller: Press any key in the PAGE CONTROL key group.

The control mode transition resets the 4155B/4156B settings except for the auto calibration mode setting. Auto calibration is set to OFF forcibly.

To Use 4142B Measurement Program

If you want to use the measurement program created to control Agilent 4142B Modular DC Source/Monitor, remember the following precautions. You need to modify the measurement program.

- Command syntax:

The 4155B/4156B FLEX commands need a space between the command and its command parameter. The 4142B commands do *not* need a space.

Add a space between the command and the first command parameter as shown in the following example:

- For 4142B:

```
OUTPUT @Hp4142;"DV1,0,20"      !Applies 20V
```

- For 4155B/4156B:

```
OUTPUT @Hp4156;"DV 1,0,20"     !Applies 20V
```

- Reading output data:

To read the 4155B/4156B output data after a measurement, use the RMD? command as shown in the following example:

- For 4142B:

```
OUTPUT @Hp4142;"XE"           !Executes measurements  
ENTER @Hp4142;A$              !Reads measurement data
```

- For 4155B/4156B:

```
OUTPUT @Hp4156;"XE"           !Executes measurements  
OUTPUT @Hp4156;"RMD?"         !Puts data on the output buffer  
ENTER @Hp4156;A$              !Reads measurement data
```

If you select *level*=16 for the US42 command parameter, you do not need the RMD? command before the ENTER command on this example. But you cannot read the output data correctly if both output data and query response are in the 4155B/4156B output buffer.

- Command parameters:

For the 4155B/4156B FLEX commands which have the same name as the 4142B commands, such as DV and DI, the meaning and order of most parameters are the same as the 4142B commands. However, the values available for the command parameter will be different from the 4142B control command because of the difference in measurement performance. Also, some optional command parameters may be added.

Confirm the command parameters and the available values.

- Measurement unit channel numbers:

The channel numbers of the measurement units must be changed. To change the channel numbers, use the ACH command. The ACH command translates the channel numbers for the 4142B to the channel numbers for the 4155B/4156B.

For details, see the ACH command in the “Command Reference” section in this chapter.

- Unsupported commands:

The following 4142B commands are not supported by the 4155B/4156B.

AIV, ASM, ASV, AVI, BDM, BDT, BDV, ERC,
PDI, PDM, PDV, POL

- Multiple command strings


The 4155B/4156B FLEX command mode does not support the multiple command strings such as the following example. Do not enter the multiple command strings.

```
OUTPUT @Hp415x;"CN 1;DV 1,0,5;MM 1,1"
```

Command Input Format

The 4155B/4156B FLEX commands are composed of a header, numeric data, and terminator, as shown in the syntax diagram in the following figure.

4155B/4156B Control Command Syntax Diagram

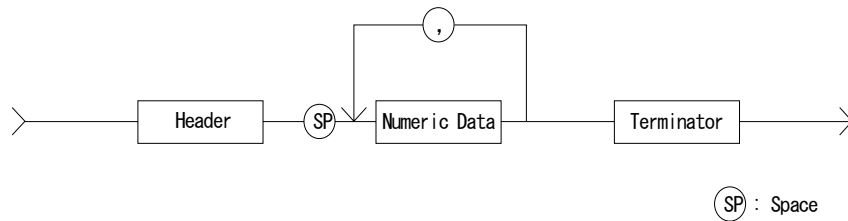


Command Input Format

- **Header:**

The header is the command name, always contains alpha characters, and is not upper or lowercase sensitive. Some command names also contain an asterisk (*) or question mark (?). The following figure shows the syntax diagram for a header.


Header Syntax Diagram

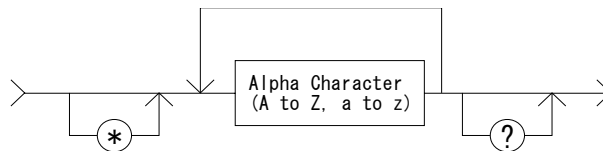

- **Numeric data:**


Numeric data is the command parameters. You need to insert a space between the header and the command parameters (numeric data). Some parameters require integer data. The following figure shows the syntax diagram for numeric data.

Numeric Data Syntax Diagram

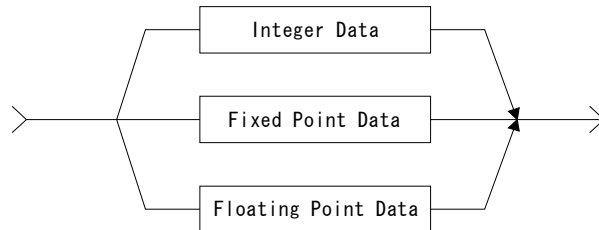


The following 3 figures show the syntax diagrams for integer, fixed point, and floating point data, respectively.


Integer Data Syntax Diagram

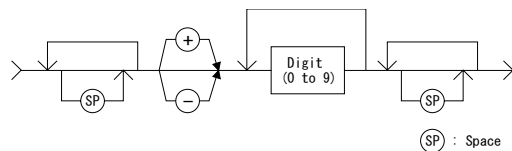

Fixed Point Data Syntax Diagram

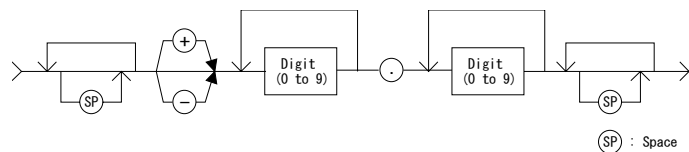

Floating Point Data Syntax Diagram

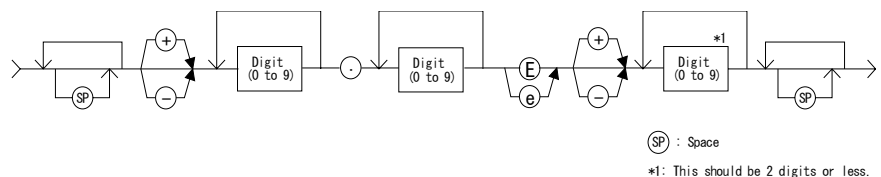


4155B/4156B FLEX Commands

Command Input Format

- **Terminator:**

The terminator completes the GPIB command entry and starts command execution. The following figure shows the terminator syntax diagram.


Terminator Syntax Diagram



- **Special Terminator:**

If a semicolon (;) is inserted before the terminator, as shown in the following figure, the preceding commands are not executed until the next command line is input and another terminator is input, without a preceding semicolon. The command lines are then executed together.

Special Terminator



Data Output Format

This section explains the data output format of the 4155B/4156B. The 4155B/4156B provides four types of data output format as listed below:

- “ASCII Format in US Control Mode”
- “Binary Format in US Control Mode”
- “ASCII Format in US42 Control Mode”
- “Binary Format in US42 Control Mode”

You can select the data output format by using the FMT command. See the FMT command in the “Command Reference” section in this chapter for more information.

Data Output Format

The following conventions are used in the data output format tables (Table 1-1 through Table 1-4).

<i>Data</i>	Output data, which the 4155B/4156B sends after a measurement.
[<i>Data</i>]	Optional output data, which is sent when there is multiple output data, such as after sampling measurements, when the sweep source data or sampling point index output is specified by the FMT command, and so on.

ASCII Format in US Control Mode

Table 1-1 shows the ASCII data output format in control mode set by the US command. The format used depends on the measurement mode selected.

Table 1-1

ASCII Data Output Format in US Control Mode

Measurement Mode	Output Format
Stress Force	<p><i>Status</i> <terminator>^a</p> <p><i>Status</i> is the status information sent after a stress force.</p>
High Speed Spot	<p><i>Data</i> <terminator>^a</p> <p><i>Data</i> is the data measured by the measurement unit specified for the high speed spot measurement using the MM command.</p>
Spot	<p><i>Data1</i> [,<i>Data2</i>] . . . <terminator>^a</p> <p><i>DataN</i> (<i>N</i>: integer) is the data measured by one unit. The order of <i>Data</i> is specified by the MM command.</p>
1ch Pulsed Spot	<p><i>Data</i> <terminator>^a</p> <p><i>Data</i> is the data measured by the measurement unit specified for the pulsed spot measurement using the MM command.</p>
Staircase Sweep, Pulsed Sweep, Staircase Sweep with Pulsed Bias	<p><i>Block1</i> [,<i>Block2</i>] . . . <terminator>^a</p> <p><i>Block1</i> is the block of data measured at the first sweep step. <i>Block2</i> is the block of data measured at the second sweep step.</p> <p>where <i>Block</i> consists of the following data:</p> <p><i>Data1</i> [,<i>Data2</i>] . . . [,<i>Source_data</i>]</p> <p><i>DataN</i> (<i>N</i>: integer) is the data measured by one unit. The order of <i>Data</i> is specified by the MM command. <i>Source_data</i> is the source data at the sweep step.</p>

a. Terminator. <LF^EOI> or <^EOI>, depending on the FMT command parameter. See FMT command in “Command Reference”.

Measurement Mode	Output Format
Sampling	<p><i>Block1</i> [,<i>Block2</i>] . . . <terminator>^a</p> <p><i>Block1</i> is the block of the data measured at the first sampling point.</p> <p><i>Block2</i> is the block of the data measured at the second sampling point.</p> <p>where <i>Block</i> consists of the following data:</p> <p>[<i>Sampling_no</i>,] <i>Data1</i> [,<i>Data2</i>] . . .</p> <p><i>Sampling_no</i> is the sampling point index. This value depends on the sampling interval setting and the measurement time.</p> <p>If the measurement time is shorter than the sampling interval, <i>Sampling_no</i> will be <i>N</i> for <i>BlockN</i> (<i>N</i>: 1, 2, 3 . . .).</p> <p>If the measurement time is longer than the sampling interval, <i>Sampling_no</i> is not <i>N</i> for <i>BlockN</i>.</p> <p>For example, if the measurement time is longer than the sampling interval and shorter than twice the sampling interval, <i>Sampling_no</i> is 2 for <i>Block1</i>, and 4 for <i>Block2</i>.</p> <p>The measurement time depends on the settings of the AV, AZ, SIT and SLI commands.</p> <p><i>DataN</i> (<i>N</i>: integer) is the data measured by one unit. The order of <i>Data</i> is specified by the MM command.</p> <p><i>Sampling_no</i> and <i>Data</i> may be discarded by the range changing in the auto or limited auto ranging mode.</p>

- a. Terminator. <LF^EOI> or <^EOI>, depending on the FMT command parameter. See FMT command in “Command Reference”.

4155B/4156B FLEX Commands
ASCII Format in US Control Mode

Output Data

The 4155B/4156B sends the measurement data (*Data*), sweep source data (*Source_data*), sampling point index (*Sampling_no*) or status information (*Status*), in the format specified by the FMT 1, FMT 2, or FMT 5 command.

- ASCII format with header (output by FMT 1 or FMT 5):

AAABCDDDDDDDDDDDDDD

- ASCII format without header (output by FMT 2):

DDDDDDDDDDDDDD

The *A*, *B*, *C*, and *D* values are explained below.

NOTE

If the output data is *Sampling_no*, ignore *B*. *B* is not valid for the output data.

If the output data is *Status*, ignore *B* and *D*. They are not valid for the output data.

A : Status; 3 digits.

If multiple status is found, the sum of the *AAA* values is returned. For example, if an A/D converter overflow occurred, and an SMU was oscillating during the measurements, the returned *AAA* value is 131 (1 + 2 + 128).

- Status for *Data*, *Sampling_no*, or *Status*:

<i>AAA</i>	Explanation
1	A/D converter overflowed.
2	One or more units are oscillating.
4	Another unit reached its compliance setting.
8	This unit reached its compliance setting.
16	PGU reached its compliance setting.
32	Not defined.
64	Invalid data is returned. <i>D</i> is not used.
128	EOD (End of Data).

- Status for *Source_data*:

<i>AAA</i>	Explanation
W	Data is for the first or intermediate sweep step.
E	Data is for the last sweep step.

B : Channel number of the measurement/source unit; 1 digit.

<i>B</i>	Explanation
A	Channel number 1, SMU1.
B	Channel number 2, SMU2.
C	Channel number 3, SMU3.
D	Channel number 4, SMU4.
E	Channel number 5, SMU5 (in 41501A/B).
F	Channel number 6, SMU6 (in 41501A/B).
Q	Channel number 21, VSU1.
R	Channel number 22, VSU2.
S	Channel number 23, VMU1.
T	Channel number 24, VMU2.
V	Channel number 26, GNDU (in 41501A/B).
W	Channel number 27, PGU1 (in 41501A/B).
X	Channel number 28, PGU2 (in 41501A/B).
Z	Returned D value is not measurement data.

C : Data type; 1 digit.

<i>C</i>	Explanation
V	Voltage measurement data.
v	Voltage source setup data.
I	Current measurement data.
i	Current source setup data.
P	Sampling point index.
S	Stress status information.
Z	Invalid data is returned.
z	

4155B/4156B FLEX Commands
ASCII Format in US Control Mode

D : Value of the measurement data, sweep source data, or sampling point index; 13 digits, which may be one of the following:

- *sn.nnnnnnnEsnn*
- *snn.nnnnnEsnn*
- *snnn.nnnnEsnn*

where,

s: Sign, + or –.

n: Digit, 0 to 9.

E: Exponent symbol.

Binary Format in US Control Mode

Table 1-2 shows the binary data output format in control mode set by the US command. The format used depends on the measurement mode selected.

Table 1-2

Binary Data Output Format in US Control Mode

Measurement Mode	Output Format
Stress Force	<i>Status</i> <terminator> ^a <i>Status</i> is the status information sent after a stress force.
High Speed Spot	<i>Data</i> <terminator> ^a <i>Data</i> is the data measured by the measurement unit specified for the high speed spot measurement using the MM command.
Spot	<i>Data1</i> [<i>Data2</i>] . . . <terminator> ^a <i>DataN</i> (<i>N</i> : integer) is the data measured by one unit. The order of <i>Data</i> is specified by the MM command.
1ch Pulsed Spot	<i>Data</i> <terminator> ^a <i>Data</i> is the data measured by the measurement unit specified for the pulsed spot measurement using the MM command.
Staircase Sweep, Pulsed Sweep, Staircase Sweep with Pulsed Bias	<i>Block1</i> [<i>Block2</i>] . . . <terminator> ^a <i>Block1</i> is the block of data measured at the first sweep step. <i>Block2</i> is the block of data measured at the second sweep step. where <i>Block</i> consists of the following data: <i>Data1</i> [<i>Data2</i>] . . . [<i>Source_data</i>] <i>DataN</i> (<i>N</i> : integer) is the data measured by one unit. The order of <i>Data</i> is specified by the MM command. <i>Source_data</i> is the source data at the sweep step.

a. Terminator. <LF^EOI> or <^EOI>, depending on the FMT command parameter. See FMT command in “Command Reference”.

4155B/4156B FLEX Commands
Binary Format in US Control Mode

Measurement Mode	Output Format
Sampling	<p><i>Block1</i> [<i>Block2</i>] . . . <terminator>^a</p> <p><i>Block1</i> is the block of the data measured at the first sampling point.</p> <p><i>Block2</i> is the block of the data measured at the second sampling point.</p> <p>where <i>Block</i> consists of the following data:</p> <p>[<i>Sampling_no</i>] <i>Data1</i> [<i>Data2</i>] . . .</p> <p><i>Sampling_no</i> is the sampling point index. This value depends on the sampling interval setting and the measurement time.</p> <p>If the measurement time is shorter than the sampling interval, <i>Sampling_no</i> will be <i>N</i> for <i>BlockN</i> (<i>N</i>: 1, 2, 3 . . .).</p> <p>If the measurement time is longer than the sampling interval, <i>Sampling_no</i> is not <i>N</i> for <i>BlockN</i>.</p> <p>For example, if the measurement time is longer than the sampling interval and shorter than twice the sampling interval, <i>Sampling_no</i> is 2 for <i>Block1</i>, and 4 for <i>Block2</i>.</p> <p>The measurement time depends on the settings of the AV, AZ, SIT and SLI commands.</p> <p><i>DataN</i> (<i>N</i>: integer) is the data measured by one unit. The order of <i>Data</i> is specified by the MM command.</p> <p><i>Sampling_no</i> and <i>Data</i> may be discarded by the range changing in the auto or limited auto ranging mode.</p>

- a. Terminator. <LF^EOI> or <^EOI>, depending on the FMT command parameter. See FMT command in “Command Reference”.

Output Data

The 4155B/4156B sends the measurement data (*Data*), sweep source data (*Source_data*), sampling point index (*Sampling_no*), or status information (*Status*) in the format specified by the FMT 3 or FMT 4 command.

The binary data is six (6) bytes long, and consists of six (6) blocks (A, B, C, D, E, and F) as shown below:

Byte 1				Byte 2				Byte 3				Byte 4				Byte 5				Byte 6			
7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
A	B																						

The *A*, *B*, *C*, *D*, *E*, and *F* values are explained below.

NOTE

If the output data is *Sampling_no*, ignore *A*, *C*, and *F*. They are not valid for the output data.

If the output data is *Status*, ignore *A*, *C*, *D*, and *F*. They are not valid for the output data.

A : Measurement or sweep source data type; one bit.

<i>A</i>	Explanation
0	Sweep source data.
1	Measurement data.

B : Data type; three bits.

<i>B</i>	Explanation
000	Voltage data.
001	Current data.
110	Sampling point index.
111	Status information.

4155B/4156B FLEX Commands

Binary Format in US Control Mode

C : Measurement or output range; five bits.

C	Explanation
01001	10 pA range.
01010	0.2 V or 100 pA range.
01011	2 V or 1 nA range.
01100	20 V or 10 nA range.
01101	40 V or 100 nA range.
01110	100 V or 1 μ A range.
01111	200 V or 10 μ A range.
10000	100 μ A range.
10001	1 mA range.
10010	10 mA range.
10011	100 mA range.
10100	1 A range.
11111	Invalid data is returned.

D : Value of the measurement data, sweep source data, or sampling point index; 26 bits.

This value is expressed in 26-bit binary data, which is used to calculate the measurement data or sweep source data, using the equations shown below. For *Sampling_no*, this value is the binary expression of the sampling measurement point index value. You do not need the following equations.

Equations:

$$\text{Measurement data} = \text{Count} \times \text{Range} / 1000000$$

$$\text{Sweep source data} = \text{Count} \times \text{Range} / 20000$$

where, *Count* is the decimal value of D, and *Range* is the measurement or output range indicated by C.

If the top bit of the 26-bit binary data is 0, the *Count* is positive and equal to the decimal value of the 25-bit binary data that follows the top bit.

If the top bit is 1, the measurement data is negative. Calculate the *Count* by subtracting 33554432 (100000000000000000000000 in binary) from the decimal value of the 25-bit binary data.

Example:

If the output binary data is:

100101010000000000000000110000001001000000000001

then,

Data type: Current measurement data (A=1, B=001)
Range: 100 pA (C=01010)
Count: 1540 (D=00000000000000011000000100)
Status: EOD (E=10000000)
Channel: SMU1 (channel number 1) (F=00001)

Measurement data = $1540 \times 100\text{E-12}/1\text{E+6} = 154 \text{ fA}$

E : Status; eight bits.

If multiple status is found, the sum of the status values is returned. For example, if an A/D converter overflow occurred and an SMU was oscillating during the measurements, the value is 00000011 (00000001+00000010).

- Status for *Data*, *Sampling_no*, or *Status*:

<i>E</i>	Explanation
00000001	A/D converter overflowed.
00000010	One or more units are oscillating.
00000100	Another unit reached its compliance setting.
00001000	This unit reached its compliance setting.
00010000	PGU reached its compliance setting.
00100000	Not defined.
01000000	Invalid data is returned. D is not valid.
10000000	EOD (End of Data).

- Status for *Source_data*:

<i>E</i>	Explanation
00000001	Data is for the first or intermediate sweep step.
00000010	Data is for the last sweep step.

4155B/4156B FLEX Commands
Binary Format in US Control Mode

F : Channel number of the measurement/source unit; five bits.

<i>F</i>	Explanation
00001	Channel number 1, SMU1.
00010	Channel number 2, SMU2.
00011	Channel number 3, SMU3.
00100	Channel number 4, SMU4.
00101	Channel number 5, SMU5 (in 41501A/B).
00110	Channel number 6, SMU6 (in 41501A/B).
10101	Channel number 21, VSU1.
10110	Channel number 22, VSU2.
10111	Channel number 23, VMU1.
11000	Channel number 24, VMU2.
11010	Channel number 26, GNDU (in 41501A/B).
11011	Channel number 27, PGU1 (in 41501A/B).
11100	Channel number 28, PGU2 (in 41501A/B).
11111	Invalid data is returned.

ASCII Format in US42 Control Mode

Table 1-3 shows the ASCII data output format in control mode set by the US42 command. The format used depends on the measurement mode selected.

Table 1-3

ASCII Data Output Format in US42 Control Mode

Measurement Mode	Output Format
Stress Force	<i>Status</i> <terminator> ^a <i>Status</i> is the status information sent after a stress force.
High Speed Spot	<i>Data</i> <terminator> ^a <i>Data</i> is the data measured by the measurement unit specified for the high speed spot measurement using the MM command.
Spot	<i>Data1</i> [, <i>Data2</i>] . . . <terminator> ^a <i>DataN</i> (<i>N</i> : integer) is the data measured by one unit. The order of <i>Data</i> is specified by the MM command.
1ch Pulsed Spot	<i>Data</i> <terminator> ^a <i>Data</i> is the data measured by the measurement unit specified for the pulsed spot measurement using the MM command.
Staircase Sweep	<i>Block1</i> [, <i>Block2</i>] . . . <terminator> ^a <i>Block1</i> is the block of data measured at the first sweep step. <i>Block2</i> is the block of data measured at the second sweep step. where <i>Block</i> consists of the following data: <i>Data1</i> [, <i>Data2</i>] . . . [, <i>Source_data</i>] <i>DataN</i> (<i>N</i> : integer) is the data measured by one unit. The order of <i>Data</i> is specified by the MM command. <i>Source_data</i> is the source data at the sweep step.

- a. Terminator. <CR/LF^EOI>, <^EOI> or , (comma), depending on the FMT command parameter. See FMT command in “Command Reference”.

4155B/4156B FLEX Commands
ASCII Format in US42 Control Mode

Measurement Mode	Output Format
Pulsed Sweep, Staircase Sweep with Pulsed Bias	<p><i>Block1</i> [,<i>Block2</i>] . . . <terminator>^a</p> <p><i>Block1</i> is the block of data measured at the first sweep step. <i>Block2</i> is the block of data measured at the second sweep step.</p> <p>where <i>Block</i> consists of the following data: <i>Data</i> [,<i>Source_data</i>]</p> <p><i>Data</i> is the measurement data. <i>Source_data</i> is the source data at the sweep step.</p>
Sampling	<p><i>Block1</i> [,<i>Block2</i>] . . . <terminator>^a</p> <p><i>Block1</i> is the block of the data measured at the first sampling point. <i>Block2</i> is the block of the data measured at the second sampling point.</p> <p>where <i>Block</i> consists of the following data: [<i>Sampling_no</i>,] <i>Data1</i> [,<i>Data2</i>] . . .</p> <p><i>Sampling_no</i> is the sampling point index. This value depends on the sampling interval setting and the measurement time.</p> <p>If the measurement time is shorter than the sampling interval, <i>Sampling_no</i> will be <i>N</i> for <i>BlockN</i> (<i>N</i>: 1, 2, 3 . . .). If the measurement time is longer than the sampling interval, <i>Sampling_no</i> is not <i>N</i> for <i>BlockN</i>. For example, if the measurement time is longer than the sampling interval and shorter than twice the sampling interval, <i>Sampling_no</i> is 2 for <i>Block1</i>, and 4 for <i>Block2</i>.</p> <p>The measurement time depends on the settings of the AV, AZ, SIT and SLI commands.</p> <p><i>DataN</i> (<i>N</i>: integer) is the data measured by one unit. The order of <i>Data</i> is specified by the MM command.</p> <p><i>Sampling_no</i> and <i>Data</i> may be discarded by the range changing in the auto or limited auto ranging mode.</p>

- a. Terminator. <CR/LF^EOI>, <^EOI> or , (comma), depending on the FMT command parameter. See FMT command in “Command Reference”.

Output Data

The 4155B/4156B sends the measurement data (*Data*), sweep source data (*Source_data*), sampling point index (*Sampling_no*), or stress status information (*Status*) in the format specified by the FMT 1, FMT 2, or FMT 5 command.

- ASCII format with header (output by FMT 1 or FMT 5):

ABCDDDDDDDDDDDD

where no space is included between the parameters.

- ASCII format without header (output by FMT 2):

DDDDDDDDDDDDDD

The *A*, *B*, *C*, and *D* values are explained below.

NOTE

If the output data is *Sampling_no*, ignore *B*. *B* is not valid for the output data.

If the output data is *Status*, ignore *B* and *D*. They are not valid for the output data.

A : Status; 1 digit.

- Status for *Data*, *Sampling_no*, or *Status*:

<i>A</i>	Explanation
N	No status error occurred.
T	Another unit reached its compliance setting.
C	This unit reached its compliance setting.
V	Measurement data is over the measurement range.
X	One or more units are oscillating.

- Status for *Source_data*:

<i>A</i>	Explanation
W	Data is for the first or intermediate sweep step.
E	Data is for the last sweep step.

4155B/4156B FLEX Commands
ASCII Format in US42 Control Mode

B : Channel number of the measurement/source unit; 1 digit.

<i>B</i>	Explanation
A	Channel number 1, SMU1.
B	Channel number 2, SMU2.
C	Channel number 3, SMU3.
D	Channel number 4, SMU4.
E	Channel number 5, SMU5 (in 41501A/B).
F	Channel number 6, SMU6 (in 41501A/B).
Q	Channel number 21, VSU1.
R	Channel number 22, VSU2.
S	Channel number 23, VMU1.
T	Channel number 24, VMU2.
V	Channel number 26, GNDU (in 41501A/B).
W	Channel number 27, PGU1 (in 41501A/B).
X	Channel number 28, PGU2 (in 41501A/B).
Z	Returned D value is not measurement data.

C : Data type; 1 digit.

<i>C</i>	Explanation
V	Voltage measurement data.
v	Voltage source setup data.
I	Current measurement data.
i	Current source setup data.
P	Sampling point index.
S	Status information.
Z	Invalid data is returned.
z	

D Value of the measurement data, sweep source data, or sampling measurement point index; 12 digits, which may be one of the following:

- *sn.nnnnnnEsnn*
- *snn.nnnnnEsnn*
- *snnn.nnnEsnn*

where,

s: Sign, + or –.

n: Digit, 0 to 9.

E: Exponent symbol.

Binary Format in US42 Control Mode

Table 1-4 shows the binary data output format in control mode set by the US42 command. The format used depends on the measurement mode selected.

Table 1-4

Binary Data Output Format in US42 Control Mode

Measurement Mode	Output Format
Stress Force	<p><i>Status</i> <terminator>^a</p> <p><i>Status</i> is the status information sent after a stress force.</p>
High Speed Spot	<p><i>Data</i> <terminator>^a</p> <p><i>Data</i> is the data measured by the measurement unit specified for the high speed spot measurement using the MM command.</p>
Spot	<p><i>Data1</i> [<i>Data2</i>] . . . <terminator>^a</p> <p><i>DataN</i> (<i>N</i>: integer) is the data measured by one unit. The order of <i>Data</i> is specified by the MM command.</p>
1ch Pulsed Spot	<p><i>Data</i> <terminator>^a</p> <p><i>Data</i> is the data measured by the measurement unit specified for the pulsed spot measurement using the MM command.</p>
Staircase Sweep	<p><i>Block1</i> [<i>Block2</i>] . . . <terminator>^a</p> <p><i>Block1</i> is the block of data measured at the first sweep step. <i>Block2</i> is the block of data measured at the second sweep step.</p> <p>where <i>Block</i> consists of the following data:</p> <p><i>Data1</i> [<i>Data2</i>] . . . [<i>Source_data</i>]</p> <p><i>DataN</i> (<i>N</i>: integer) is the data measured by one unit. The order of <i>Data</i> is specified by the MM command.</p> <p><i>Source_data</i> is the source data at the sweep step.</p>

- a. Terminator. <CR/LF^EOI>, <^EOI> or , (comma), depending on the FMT command parameter. See FMT command in “Command Reference”.

Measurement Mode	Output Format
Pulse Sweep, Staircase Sweep with Pulsed Bias	<p><i>Block1</i> [<i>Block2</i>] . . . <terminator>^a</p> <p><i>Block1</i> is the block of data measured at the first sweep step. <i>Block2</i> is the block of data measured at the second sweep step.</p> <p>where <i>Block</i> consists of the following data: <i>Data</i> [<i>Source_data</i>]</p> <p><i>Data</i> is the measurement data. <i>Source_data</i> is the source data at the sweep step.</p>
Sampling	<p><i>Block1</i> [<i>Block2</i>] . . . <terminator>^a</p> <p><i>Block1</i> is the block of the data measured at the first sampling point. <i>Block2</i> is the block of the data measured at the second sampling point.</p> <p>where <i>Block</i> consists of the following data: [<i>Sampling_no</i>] <i>Data1</i> [<i>Data2</i>] . . .</p> <p><i>Sampling_no</i> is the sampling point index. This value depends on the sampling interval setting and the measurement time.</p> <p>If the measurement time is shorter than the sampling interval, <i>Sampling_no</i> will be <i>N</i> for <i>BlockN</i> (<i>N</i>: 1, 2, 3 . . .). If the measurement time is longer than the sampling interval, <i>Sampling_no</i> is not <i>N</i> for <i>BlockN</i>. For example, if the measurement time is longer than the sampling interval and shorter than twice the sampling interval, <i>Sampling_no</i> is 2 for <i>Block1</i>, and 4 for <i>Block2</i>.</p> <p>The measurement time depends on the settings of the AV, AZ, SIT and SLI commands.</p> <p><i>DataN</i> (<i>N</i>: integer) is the data measured by one unit. The order of <i>Data</i> is specified by the MM command.</p> <p><i>Sampling_no</i> and <i>Data</i> may be discarded by the range changing in the auto or limited auto ranging mode.</p>

- a. Terminator. <CR/LF^EOI>, <^EOI> or , (comma), depending on the FMT command parameter. See FMT command in “Command Reference”.

4155B/4156B FLEX Commands
Binary Format in US42 Control Mode

Output Data

The 4155B/4156B sends the measurement data (*Data*), sweep source data (*Source_data*), sampling point index (*Sampling_no*), or status information (*Status*) in the format specified by the FMT 3 or FMT 4 command.

Binary data is four bytes long, and consists of 6 blocks (A, B, C, D, E and F) as shown below:

Byte 1								Byte 2								Byte 3								Byte 4							
7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
A		B		C				D								E				F											

The *A*, *B*, *C*, and *D* values are explained below.

NOTE

If the output data is *Sampling_no*, ignore *A*, *B*, *C*, and *F*. They are not valid for the output data.

If the output data is *Status*, ignore *A*, *B*, *C*, *D*, and *F*. They are not valid for the output data.

A : Measurement/sweep source data type; one bit.

<i>A</i>	Explanation
0	Sweep source data.
1	Measurement data.

B : Data type; one bit.

<i>B</i>	Explanation
0	Voltage data.
1	Current data.

C : Measurement or output range; five bits.

C	Explanation
01010	0.2 V range.
01011	2 V or 1 nA range.
01100	20 V or 10 nA range.
01101	40 V or 100 nA range.
01110	100 V or 1 μ A range.
01111	200 V or 10 μ A range.
10000	100 μ A range.
10001	1 mA range.
10010	10 mA range.
10011	100 mA range.
10100	1 A range.
11111	Invalid data is returned.

D : Value of the measurement data, sweep source data, or sampling measurement point index. This value is expressed in 17-bit binary data, which is used to calculate the measurement data or sweep source data using the following equations.

For *Sampling no*, this value is the binary expression of the sampling measurement point index value. You do not need the following equations.

Equations:

Measurement data = $Count \times Range / 50000$

Sweep source data = $Count \times Range / 20000$

where, *Count* is the decimal value of D, and *Range* is the measurement range or output range indicated by C.

If the top bit of the 17-bit binary data is 0, the *Count* is positive and equal to the decimal value of the 16-bit binary data that follows the top bit.

If the top bit is 1, the measurement data is negative. Calculate the *Count* by subtracting 65536 (1000000000000000 in binary) from the decimal value of the 16-bit binary data.

4155B/4156B FLEX Commands
Binary Format in US42 Control Mode

Example:

If the output binary data is:

11010110000100111000100000000001

then,

Data type : Current measurement data (A=1, B=1)

Range : 1 nA (C=01011)

Count : 5000 (D=00001001110001000)

Status : Normal condition (E=000)

Channel : SMU1 (channel number 1) (F=00001)

Measurement data = $5000 \times 1\text{E-}9/5\text{E+}4 = 100 \text{ pA}$

E : Status; three bits.

- Status for *Data*, *Sampling_no*, or *Status*:

<i>E</i>	Explanation
000	No status error occurred.
001	Another unit reached its compliance setting.
010	This unit reached its compliance setting.
011	Measurement data is over the measurement range.
100	One or more units are oscillating.

- Status for *Source_data*:

<i>E</i>	Explanation
001	Data is for the first or intermediate sweep step.
010	Data is for the last sweep step.

F : Channel number of the measurement/source unit; five bits.

<i>F</i>	Explanation
00001	Channel number 1, SMU1.
00010	Channel number 2, SMU2.
00011	Channel number 3, SMU3.
00100	Channel number 4, SMU4.
00101	Channel number 5, SMU5 (in 41501A/B).
00110	Channel number 6, SMU6 (in 41501A/B).
10101	Channel number 21, VSU1.
10110	Channel number 22, VSU2.
10111	Channel number 23, VMU1.
11000	Channel number 24, VMU2.
11010	Channel number 26, GNDU (in 41501A/B).
11011	Channel number 27, PGU1 (in 41501A/B).
11100	Channel number 28, PGU2 (in 41501A/B).
11111	Invalid data is returned.

Status Byte

This section provides the status byte information for the 4155B/4156B in the FLEX command control mode. The information depends on whether the control mode is set by US command or US42 command.

- In the US command mode:

Bit	Description
0	Emergency Status Indicates whether any emergency has occurred. If the instrument is in the emergency status, this bit is set to 1.
1	Measurement/Stress Status Indicates whether the measurement/stress force has been executed. If the instrument is in the measurement/stress status, this bit is set to 1.
2	not used
3	Questionable Status Indicates whether output buffer is empty. If an unread query response exists, this bit is set to 1.
4	MAV (Message Available summary-message) Indicates whether output buffer is empty. If an unread message exists, this bit is set to 1.
5	ESB (Event Status Bit) Shows the logical ORed value of the error summary register bits.
6	Request Service (RQS) Message Indicates whether an SRQ (Service Request) has occurred. You cannot mask this bit.
7	not used

- In the US42 command mode:

This status byte bit assignment is identical to the 4142B definition.

Bit	Description
0	Data Ready Indicates whether the output buffer is empty. If unread data exists, this bit is set to 1.
1	Wait Indicates whether the instrument is in the wait status. If instrument is in the wait state, this bit is set to 1.
2	not used
3	Interlock Open If the interlock circuit is open, and an output voltage over ± 40 V is applied, this bit is set to 1.
4	Set Ready Indicates whether an GPIB command or external trigger has been sent. If GPIB command execution or the operation by external trigger is completed, this bit is set to 1.
5	Error Indicates whether any error has occurred. If any error occurred, this bit is set to 1.
6	RQS (You cannot mask this bit.) Indicates whether an SRQ (Service Request) has occurred.
7	Shutdown If the instrument turned off by itself, to avoid damage, or instantaneous power down occurred on the site power line, this bit is set to 1.

The status byte register can be read with either a serial poll or the *STB? query command.

Serial poll is a low-level GPIB command that can be executed by the `SPOLL` command in HP BASIC, as follows:

```
Status=SPOLL (@Hp4156)
```

In general, use serial polling (not *STB?) inside interrupt service routines.

Use *STB? in other cases (not in interrupt service routine) when you want to know the value of the Status Byte.

Command Reference

This section contains detailed descriptions of each command. The commands are listed in alphabetical order. Each entry:

1. defines one GPIB command
2. shows execution conditions (if any exist)
3. shows its syntax
4. shows its parameters
5. shows the query response after command execution (if it is a query command)
6. explains special information
7. provides examples

The following conventions are used in this section.

parameter Required command parameters, for which you must substitute a value or variable.

[*parameter*] Optional command parameters, for which you may substitute a value or omit.

Category	Command	Summary
Reset	*RST	Resets the 4155B/4156B to the initial settings, and clears the zero offset data.
Self-test	*TST?	Starts the self-test.
Control Mode	US	Enters the 4155B/4156B FLEX command control mode.
	US42	Enters the 4155B/4156B FLEX command control mode. This mode provides the 4142B-like response (data output, terminator, and so on).
	ACH	Used with the US42 command to assign the channel numbers used in the measurement programs for the 4142B to the channel numbers available for the 4155B/4156B.
	:PAGE	Returns to the 4155B/4156B SCPI command control mode.
Unit Control	CN	Enables the specified units by setting the output switches to ON.
	CL	Disables the specified units by setting the output switches to OFF.
	FL	Sets the filter of specified units to ON or OFF.
	IN	Sets the specified units to zero output.
	DZ	Stores the measurement setup of the units, and sets the units to Zero (0 V) Output.
	RZ	Returns the unit to the settings that are stored by the DZ command and clears the stored unit settings.
	RCV	Enables the units that fail self-test.
PGU Control	POR	Sets the output impedance of the PGU.
	SPG	Sets the PGU output mode, and its parameters.
	SRP	Starts the PGU output force.
	SPP	Stops the PGU output force.
SMU/PGU Selector	SSP	Controls Agilent 16440A SMU/Pulse Generator Selector.
R-BOX	RBC	Controls Agilent 16441A R-BOX.
dc Source Setup	DI	Forces dc current from the specified unit.
	DV	Forces dc voltage from the specified unit.
Pulse Source Setup	PT	Sets the timing parameters for a pulse source.
	PI	Specifies the pulse current source and its parameters, and clears the PV command setting.
	PV	Specifies the pulse voltage source and its parameters, and clears the PI command setting.

4155B/4156B FLEX Commands

Category	Command	Summary
Staircase Sweep Source Setup	WT	Sets the hold time and delay time for staircase sweep measurements.
	WI	Specifies the current source for the staircase sweep and its parameters, and clears the WV, WSV, and WSI command settings.
	WV	Specifies the voltage source for the staircase sweep source and its parameters, and clears the WI, WSI, and WSV command settings.
	WM	Sets the automatic sweep abort function for the staircase sweep sources and the pulsed sweep source, and sets the post sweep condition of the staircase sweep sources.
Pulsed Sweep Source Setup	PT	Sets the timing parameters for a pulse source.
	PWI	Specifies the pulsed sweep current source and its parameters, and clears the settings of the PWV, WSV, and WSI commands.
	PWV	Specifies the pulsed sweep voltage source and its parameters, and clears the settings of the PWI, WSV, and WSI commands.
	WM	Sets the automatic sweep abort function for the staircase sweep sources and the pulsed sweep source, and sets the post sweep condition of the staircase sweep sources.
Synchronous Sweep Source Setup	WSI	Specifies the staircase sweep current source which is synchronized with the staircase sweep current source set by the WI command or the pulsed sweep current source set by the PWI command.
	WSV	Specifies the staircase sweep voltage source which is synchronized with the staircase sweep voltage source set by the WV command or the pulsed sweep voltage source set by the PWV command.
Source Setup for Sampling Measurements	MI	Specifies the current source (SMU) synchronized with the sampling measurements, and its parameters.
	MV	Specifies the voltage source (SMU or VSU) synchronized with the sampling measurement, and its parameters.
	MP	Specifies the PGU synchronized with the sampling measurements, and its parameters.
	MCC	Clears the settings of the specified sampling sources defined by MI, MV, or MP command.
	MSC	Sets the automatic abort condition (stop condition) for the sampling measurement.

Category	Command	Summary
Stress Source Setup	POR	Sets the output impedance of the PGU.
	STT	Sets the stress time and stress mode.
	STI	Specifies the dc stress current source (SMU) and its parameters.
	STV	Specifies the dc stress voltage source (SMU or VSU) and its parameters.
	STP	Sets the PGU for the dc voltage stress output or pulse stress output.
	STC	Clears the settings of the specified stress sources defined by STI, STV or STP command.
	STM	Sets the automatic abort condition (stop condition) for the stress force.
Abort/Pause/Wait	AB	Aborts the present operation and subsequent command execution.
	PA	Pauses command execution or internal memory program execution, until receiving a trigger specified by the TM command or until the specified wait time has elapsed.
	*WAI	Stops execution of any commands until the OPC bit is set to 1.
	WS	Goes into a wait state until the 4155B/4156B receives an external trigger signal via the Ext Trig In terminal.
Measurement Mode	MM	Sets the measurement mode and measurement units.
	CMM	Sets the SMU measurement mode.
	VM	Sets the operation mode of the VMU.
Measurement Setup	RI	Specifies the current measurement ranging mode for all types of measurements, except for the high speed spot measurements.
	RV	Specifies the voltage measurement ranging mode for all types of voltage measurements, except for the high speed spot measurements.
	MT	Only for Sampling measurements. Sets the timing parameters.
Averaging	AV	Sets the number of samples that are taken and averaged for the measurement.
Integration Time	SIT	Changes the integration time setting.
	SLI	Selects the integration time (SHORT or LONG).
	AZ	Enables or disables the automatic zero offset function of the internal A/D converter.
Zero Offset Cancel	GOC	Measures the zero offset data and sets the zero offset cancel function to ON.
	SOC	Enables or disables the zero offset cancel function for the SMU low current measurements and the VMU differential voltage measurements.

4155B/4156B FLEX Commands

Category	Command	Summary
Measurement Execution	TM	Specifies the trigger mode which defines how events are effective for the measurement trigger, and for the trigger to release the wait status set by the PA command.
	XE	Triggers the 4155B/4156B to perform measurements, and returns the measurement data. Needs the RMD? command to read the measurement data.
	TI	Triggers the high speed spot current measurement, and returns the measurement data. Needs the RMD? command to read the measurement data.
	TI?	Triggers the high speed spot current measurement, and returns the measurement data.
	TV	Triggers the high speed spot voltage measurement, and returns the measurement data. Needs the RMD? command to read the measurement data.
	TV?	Triggers the high speed spot voltage measurement, and returns the measurement data.
Output Data	FMT	Specifies the measurement data output format and the data terminator.
	RMD?	Reads the output data and puts the data into the output buffer.
	BC	Clears the 4155B/4156B output data buffer that stores measurement data and/or query command response data.
Program Memory	ST	Used with END command to store a program in the internal program memory. ST command indicates the beginning of the program.
	END	Used with ST command to store a program in the internal program memory. END command indicates the end of the program.
	SCR	Scratches the specified program from the internal program memory.
	LST?	Requests a catalog of internal memory programs or a specific program listing.
	DO	Executes internal memory programs in the order specified.
	RU	Executes internal memory programs sequentially.
	PA	Pauses command execution or internal memory program execution, until receiving a trigger specified by the TM command or until the specified wait time has elapsed.
Self Calibration	*CAL?	Performs a full calibration, and returns the calibration result.
	CA	Performs calibration of the measurement unit.
	CM	Sets Auto-Calibration ON or OFF.
External Trigger	STG	Sets the trigger function using the Ext Trig In/Out terminals.
	OS	Causes the 4155B/4156B to send a trigger signal from the external trigger output terminal (Ext Trig Out).

Category	Command	Summary
Network Operation	SDSK	Selects the mass storage device.
	OPEN	Opens the specified file on the mass storage device specified by the SDSK command.
	RD?	Reads the ASCII data in the file opened by the OPEN command.
	WR	Writes the specified characters or numeric data (ASCII) at the end of the file opened by the OPEN command.
	CLOSE	Closes the file opened by the OPEN command.
	SPR	Selects the remote printer.
	SPL	Specifies the ASCII data to print, and spools the data to the printer specified by the SPR command.
	PRN	Prints the data specified by the SPL command.
Status Byte	*CLS	Clears the status byte register, the standard event status register, and the error register.
	*ESE(?)	Sets or asks the bits of the standard event status enable register.
	*ESR?	Returns the present contents of the standard event status register.
	*SRE	Enables the specified bits of the status byte register.
	*SRE?	Requests which bits of the status byte register are enabled.
	*STB?	Requests the status byte.
Query	ERR?	Returns error codes.
	*IDN?	Requests the instrument model number and the ROM version number.
	LOP?	Requests the operation status of all source units (SMUs and VSUs).
	*LRN?	Requests unit settings or the 4155B/4156B command parameter settings.
	NUB?	Requests the number of measurement data in the output data buffer.
	*OPC(?)	Starts to monitor pending operations, or asks the OPC bit setting.
	*OPT?	Returns the reportable device options, which are the units in the 41501A/B Expander.
	:SYST:ERR?	Returns the error code and the error message.
	UNT?	Requests the model and revision numbers of all units.
	WNU?	Requests the number of sweep steps specified by the sweep command.

4155B/4156B FLEX Commands
AB

AB

The AB command aborts the present operation and subsequent command execution.

Syntax

AB

Remarks

The AB command stops the operation now in progress, such as the measurement execution, source setup changing, and so on. But this command does not change the present condition. For example, if the 4155B/4156B just keeps to force the dc bias, the AB command does not stop the dc bias output.

The AB command sets the 4155B/4156B as listed in the following table.

Present Operation	4155B/4156B Setting
Staircase Sweep Measurements	Sets specified start voltage or current.
1ch Pulsed Spot Measurements	Sets specified base voltage or current.
Pulsed Sweep Measurements	Sets specified base voltage or current.
Staircase Sweep with Pulsed Bias Measurements	Sets specified start voltage or current and base voltage or current.
Pulsed Sweep with Pulsed Bias Measurements	Sets specified base voltage or current.
Sampling Measurements	Sets specified base voltage or current.
Stress Force	Sets specified base voltage or current.
Self-Test ^a	Same as set by CL command.
Self-Calibration ^a	Same as set by CL command.
WAIT State (PA or WS command)	Settings do not change.
Program Execution (RU or DO command)	Settings do not change.

a. The AB command cannot abort this operation if the AB command is executed from the internal memory program. But the AB command from the memory program can abort the automatic calibration.

If the 4155B/4156B receives an AB command during a sweep measurement, only the measurement data obtained before the sweep was aborted is stored in the output data buffer (dummy data is not stored).

If you start an operation that you may want to abort, do not send a command after the command or command string that starts the operation. If you do, the AB command cannot enter the command input buffer until the intervening command execution starts, so the operation cannot be aborted. In this case, use the Device Clear (CLEAR command in HP BASIC) to end the operation.

**Example
Statements**

```
OUTPUT @Hp4156; "AB"
```

ACH

The ACH command is effective when the instrument is in the US42 command mode. Otherwise, the ACH command is not required to control the 4155B/4156B.

The ACH command assigns the channel numbers used in the measurement programs for the 4142B to the channel numbers available for the 4155B/4156B.

Insert the US42 command and the ACH command to assign the channel numbers for the 4142B to the 4155B/4156B channel numbers at the beginning of the measurement program which was created to control the 4142B.

The ACH command translates the 4142B channel numbers to the 4155B/4156B channel numbers at the program execution. You do not need to change the 4142B channel numbers defined in the commands that follow the US42 and ACH commands in the program. Do not change the 4142B channel numbers in the program. Otherwise, the channel number will not be translated correctly.

Syntax

ACH [*chnum* [, *4142ch*]]

If you do not specify both *chnum* and *4142ch*, channel number assignment is canceled and all channel number assignments are cleared.

Parameter

chnum : Channel numbers available for the 4155B/4156B. Integer expression. See below.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
21	VSU1
22	VSU2
23	VMU1
24	VMU2
26	GNDU

a. For SMUs in the 41501A/B Expander. If HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

4142ch : Channel number used in the measurement program for the 4142B. 1 to 28 channels are available. Integer expression.

If the measurement program includes the control routine for the 41425A AFU, you should not assign the channel numbers for AFU. The channel numbers should be for the 41420A HPSMU, 41421B MPSMU, 41422A HCU, 41423A HVU or 41424A VSU/VMU. If you specify the channel numbers for HCU or HVU, some commands and measurement ranges cannot be used for the 4155B/4156B. In this case, you must modify the command parameter settings.

If you do not specify *4142ch*, this channel number is not assigned. This is same as ACH *N,N* command.

Example Statements

```
OUTPUT @Hp4156;"US42"
OUTPUT @Hp4156;"ACH 1,2"
OUTPUT @Hp4156;"ACH 2,3"
OUTPUT @Hp4156;"ACH 3,4"
OUTPUT @Hp4156;"ACH 4,5"
```

AV

The AV command sets the number of samples that are taken and averaged for the measurement. This command setting is ignored by the following measurement mode.

1. 1ch pulsed spot measurements with "keep pulse width"
2. Pulsed sweep measurements with "keep pulse width"
3. Staircase sweep with pulsed bias measurements with "keep pulse width"
4. Sampling measurements with the sampling interval less than 2 msec (see the MT command)

where, "keep pulse width" means the measurement setup which the PT command *priority* parameter is set to 0 or default setting (see the PT command).

Syntax

AV *averaging number*[, *averaging mode*]

Parameters

***averaging number* :** 1 to 1023 are available in US command mode. Numeric expression.

1 to 1023, and -1 to -1023 are available in US42 command mode. Initial setting is 1.

For *positive* number input, the number of samples is set to *averaging number*.

For *negative* number (-1 to -100) input, the AV command sets the 4155B/4156B integration time to LONG, and sets the PLC (Power Line Cycle) value to *averaging number*. If *averaging number* is -101 to -1023, the PLC value is automatically set to -100. To return the integration time to SHORT, use the SLI command.

***averaging mode* :** 0 or 1. Integer expression. Initial setting is 0. Used as a placeholder only, the value is ignored. This parameter is just to keep the 4142B control command syntax.

Example Statements

```
OUTPUT @Hp4156; "AV 10"
OUTPUT @Hp4156; "AV -50"
OUTPUT @Hp4156; "AV 100, 1"
```

AZ

The AZ command enables or disables the automatic zero offset function of the internal A/D converter (ADC). This command is effective for the measurement range more than 1 nA range.

The internal ADC automatic zero offset function must be set to ON to satisfy the measurement accuracy specifications. Set the function to OFF in cases that the measurement speed is more important than the measurement accuracy. This reduces the integration time to approximately half if the integration time is set to approx. 10 msec or more.

US, US42, *RST commands and the device clear enable the function.

Syntax

AZ mode

Parameters

mode Mode ON or OFF. 0 or 1 are available. Initial setting is 1.
0: OFF. Disables the function.
1: ON. Enables the function.

Example Statements

OUTPUT @Hp4156;"AZ 0"

4155B/4156B FLEX Commands

BC

BC

The BC command clears the output data buffer that stores measurement data and query command response data. This command does not change the measurement settings.

Syntax

BC

Example Statements

OUTPUT @Hp4156;"BC"

CA

The CA command performs calibration of the measurement unit. When you execute the CA command, the output switches of the specified units are set to OFF.

Syntax

CA [*slotnum*]

Parameters

slotnum: Slot number. Integer expression. See below.

<i>slotnum</i>	Unit calibrated
0	GNDU
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
7	VSU1, VSU2, VMU1 and VMU2
8	PGU1 and PGU2

- a. For SMUs in the 41501A/B Expander. If HPSMU is installed in the 41501A/B, *slotnum* for HPSMU is 6, and slot number 5 is not used to specify the HPSMU.

If you do not specify *slotnum*, all units are calibrated.

Example Statements

OUTPUT @Hp4156; "CA"

OUTPUT @Hp4156; "CA 1"

4155B/4156B FLEX Commands

*CAL?

*CAL?

The CAL? query command performs a full calibration of the 4155B/4156B, then returns a <numeric_value> to indicate the calibration result.

Syntax

*CAL?

Query Response

In US command mode:

result<LF^EOI>

In US42 command mode:

result<CR/LF^EOI>

where, *result* returns one of the following values:

0: Pass.

1: Fail.

Example Statements

OUTPUT @Hp4156;"*CAL?"
ENTER @Hp4156;A

CL

The CL command disables the specified units by setting the output switches to OFF.

Execution Conditions

No unit may be in the HIGH VOLTAGE state (forcing more than ± 40 V, or voltage compliance set to more than ± 40 V). However, if you do not specify *chnum* for CL command, there are no restrictions on the execution conditions.

Syntax

CL [*chnum*[, *chnum*...[, *chnum*]...]

Parameters

***chnum*:** Channel number. Integer expression. See below.

<i>chnum</i>	Unit disabled
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
21	VSU1
22	VSU2
23	VMU1 ^b
24	VMU2 ^b
26	GNDU
27	PGU1
28	PGU2

- a. For SMUs in the 41501A/B Expander. If HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.
- b. VMU1 and VMU2 have the output switch in common.

If you do not specify *chnum* in the US command mode, the 4155B/4156B sets all units to 0 V in order, from higher voltage range (output range or measurement range) to lower voltage range, and all output switches are set to OFF.

If you do not specify *chnum* in the US42 command mode, the CL command does not open the output switch of GNDU and VMU. For SMU, VSU and PGU, the 4155B/4156B does the same operation as in the US command mode.

4155B/4156B FLEX Commands
CL

If you specify multiple *chnums*, the 4155B/4156B sets the units to 0 V in the specified order, and the output switches are set to OFF.

For example, OUTPUT @Hp4156;"CL 1,2,3" disables SMU1, SMU2, and SMU3, in that order.

Remarks

The CL command sets the specified units to the following conditions:

Item	SMU	VSU	VMU	GNDU	PGU
Source Mode	V	V			V
Output Voltage	0 V	0 V		0 V	0 V
V Range	20 V	20 V	20 V ^a		20 V
I Compliance	100 μ A	100 mA			
I limit		100 mA			100 mA
I Range	100 μ A	100 mA			
Filter	ON				

- a. In the differential voltage measurement mode, the voltage range is set to 2 V.

Example Statements

OUTPUT @Hp4156;"CL"
OUTPUT @Hp4156;"CL 1,2,3,5"

CLOSE

The CLOSE command closes the file opened by the OPEN command.

Syntax

CLOSE

Example Statements

OUTPUT @Hp4156; "CLOSE"

4155B/4156B FLEX Commands

*CLS

***CLS**

The *CLS command clears the status byte register, standard event status register, and error register. This command does *not* clear the enable registers.

This command also stops the monitoring of pending operations by the *OPC command.

Syntax

*CLS

Example Statements

OUTPUT @Hp4156; "*CLS"

CM

The CM command sets the Auto-Calibration mode to ON or OFF. If Auto-Calibration is ON, and the following two conditions are satisfied, the 4155B/4156B automatically calibrates all units every 30 minutes.

- Output switches of all units have been OFF for 30 minutes
- The ST command is not entered at least 30 minutes after entering the last END command.

Syntax

CM *mode*

Parameters

mode: Auto-calibration mode ON/OFF. Integer expression. See below.
0: Auto-Calibration OFF
1: Auto-Calibration ON (initial setting)

Example Statements

```
OUTPUT @Hp4156; "CM 0"
OUTPUT @Hp4156; "CM 1"
```

CMM

The CMM command sets the SMU measurement mode.

The measurement mode set by this command is kept until the measurement mode is specified again by this command. If you want to return the setting to the normal mode (initial measurement mode), enter the CMM command with *mode*=0.

Syntax

CMM *chnum, mode*

Parameters

chnum : Channel number of SMU. Integer expression. See below.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6

a. For SMUs in the 41501A/B Expander. If HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

mode : Measurement mode. 0 to 3 are available. Integer expression. See below.

<i>mode</i>	Description
0	Compliance side measurement (initial setting). If SMU is in the voltage source mode, SMU does current measurement. If SMU is in the current source mode, SMU does voltage measurement.
1	Current measurement. SMU does current measurement, regardless of the SMU output source mode.
2	Voltage measurement. SMU does voltage measurement, regardless of the SMU output source mode.
3	Force side measurement. If SMU is in the voltage source mode, SMU does voltage measurement. If SMU is in the current source mode, SMU does current measurement.

Example Statements

OUTPUT @Hp4156; "CMM 1, 1"

CN

The CN command enables the specified units by setting the output switches to ON.

WARNING

SETTING THE OUTPUT SWITCH TO "ON" ENABLES THE UNIT TO FORCE DANGEROUS VOLTAGES.

WHEN THE UNIT IS NOT IN USE, SET THE OUTPUT SWITCH TO "OFF" WHENEVER POSSIBLE.

Execution Conditions

No unit may be in the HIGH VOLTAGE state (forcing more than ± 40 V, or voltage compliance set to more than ± 40 V).

Syntax

CN [*chnum*[, *chnum*...[, *chnum*]...]

Parameters

chnum: Channel number. Integer expression. See below.

<i>chnum</i>	Slot No.	Unit enabled
1	1	SMU1
2	2	SMU2
3	3	SMU3
4	4	SMU4
5 ^a	5	SMU5
6 ^a	6	SMU6
21	7	VSU1
22		VSU2
23		VMU1 ^b
24		VMU2 ^b
26	0	GNDU
27	8	PGU1
28		PGU2

a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

b. VMU1 and VMU2 have the output switch in common.

If you do not specify *chnum*, the 4155B/4156B sets all output switches to ON, in the order from lower to higher slot number.

4155B/4156B FLEX Commands
CN

If you specify multiple *chnums*, the 4155B/4156B sets the output switches to ON, in the specified order.

For example, OUTPUT @Hp4156;"CN 1,2,3" enables the SMU1, SMU2, and SMU3, in that order.

Remarks

The CN command sets the specified units to the following conditions:

Item	SMU	VSU	VMU	GNDU	PGU
Output Switch	ON	ON	ON	ON	ON
Source Mode	V	V			V
Output Voltage	0 V	0 V		0 V	0 V
V Range	20 V	20 V	20 V ^a		20 V
I Compliance	100 μ A	100 mA			
I limit		100 mA			100 mA
I Range	100 μ A	100 mA			
Filter	no change				

- a. In the differential voltage measurement mode, the voltage range is set to 2 V range.

If the output switch of the specified unit is already set to ON, the CN command is disabled.

Example Statements

```
OUTPUT @Hp4156;"CN"  
OUTPUT @Hp4156;"CN 1, 2, 3, 5"
```

DI

The DI command forces current from the specified unit.

Execution Conditions

The CN command has been executed for the specified unit. If the voltage compliance is greater than ± 40 V, the interlock circuit must be shorted.

Syntax

DI *chnum*, *range*, *current*[, *Vcomp*[, *comp polarity*]]

If you enter the DI command into the program memory (see the ST command), do not omit the *Vcomp* parameter. *Vcomp* is necessary when using the internal program memory.

Parameters

***chnum*:** Channel number of the unit used to force current. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6

- a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

***range*:** Range type for current output. Integer expression.

<i>range</i>	Ranging Type ^a
0	Auto ranging
9 (only for 4156B)	10 pA limited auto ranging
10 (only for 4156B)	100 pA limited auto ranging
11	1 nA limited auto ranging
12	10 nA limited auto ranging
13	100 nA limited auto ranging
14	1 μ A limited auto ranging
15	10 μ A limited auto ranging
16	100 μ A limited auto ranging
17	1 mA limited auto ranging

<i>range</i>	Ranging Type ^a
18	10 mA limited auto ranging
19	100 mA limited auto ranging
20 (only for HPSMU)	1 A limited auto ranging

- a. Auto ranging uses the lowest output range (available for the unit) that covers *current* value. Limited auto ranging is same, but the minimum output range is the specified range. For example, 10 μ A limited auto ranging uses the 10 μ A range to force 1 nA, and uses the 100 mA range to force 50 mA.

current: Output current value (in A). Numeric expression.

0 to $\pm 100\text{E}-3$ (for 4155B/4156B and MPSMU in 41501A/B)

0 to ± 1 (for HPSMU in 41501A/B)

For the relation between *current* value and the output range (not *range*), and for setting the resolution of *current* value, see Table 1-5 on page 1-61.

Vcomp: Voltage compliance value (in V). Numeric expression. If you do not specify this parameter, *Vcomp* is set to the previous setting.

For parameter values available for *Vcomp*, see Table 1-5 on page 1-61.

comp

polarity: Polarity of voltage compliance. Numeric expression.

0: Auto mode. Default.

The polarity of voltage compliance is automatically set to the same value as the polarity of the output current (*current*), regardless of the polarity of *Vcomp* value. If output current is 0 A, the polarity is positive.

1: Manual mode.

This parameter must be specified if you want to set the polarity of the voltage compliance to the same as the specified polarity of *Vcomp*.

Table 1-5

Available Parameter Values for DI Command

Output Range	Resolution in A	current in A	Maximum V_{comp} in V	Remarks
10 pA	10E-15	0 to $\pm 10\text{E-}12$	± 100	For 4156B.
100 pA	10E-15	0 to $\pm 100\text{E-}12$	± 100	
1 nA	100E-15	0 to $\pm 1\text{E-}9$	± 100	For SMU.
			± 200	For HPSMU.
10 nA	1E-12	0 to $\pm 10\text{E-}9$	± 100	For SMU.
			± 200	For HPSMU.
100 nA	10E-12	0 to $\pm 100\text{E-}9$	± 100	For SMU.
			± 200	For HPSMU.
1 μA	100E-12	0 to $\pm 1\text{E-}6$	± 100	For SMU.
			± 200	For HPSMU.
10 μA	1E-9	0 to $\pm 10\text{E-}6$	± 100	For SMU.
			± 200	For HPSMU.
100 μA	10E-9	0 to $\pm 100\text{E-}6$	± 100	For SMU.
			± 200	For HPSMU.
1 mA	100E-9	0 to $\pm 1\text{E-}3$	± 100	For SMU.
			± 200	For HPSMU.
10 mA	1E-6	0 to $\pm 10\text{E-}3$	± 100	For SMU.
			± 200	For HPSMU.
100 mA	10E-6	0 to $\pm 20\text{E-}3$	± 100	For SMU.
		to $\pm 50\text{E-}3$	± 40	
		to $\pm 100\text{E-}3$	± 20	
	100E-6	0 to $\pm 50\text{E-}3$	± 200	For HPSMU.
		to $\pm 100\text{E-}3$	± 100	
1 A	100E-6	0 to $\pm 50\text{E-}3$	± 200	
		to $\pm 125\text{E-}3$	± 100	
		to $\pm 500\text{E-}3$	± 40	
		to ± 1	± 20	

Example Statements

```
OUTPUT @Hp4156;"DI 1,0,1E-6,100,1"
```

```
OUTPUT @Hp4156;"DI 3,14,5E-7,20,0"
```

4155B/4156B FLEX Commands

DO

DO

The DO command executes the 4155B/4156B internal memory programs (up to 8 programs) in the order specified.

Before executing the internal memory program, close the Interlock circuit. If you do not close the interlock circuit, an error occurred and the measurement is aborted.

Execution Conditions

The specified programs have been stored by using the ST and END commands.

Syntax

DO prog No. [,prog No. [,prog No.... [,prog No.]...]]

Parameters

prog No.: Internal memory program number. 1 to 255. Integer expression.

Remarks

The 4155B/4156B cannot detect errors during the internal memory program execution.

Example Statements

OUTPUT @Hp4156;"DO 1,2,3,4,5,6,7,8"

OUTPUT @Hp4156;"DO 98,99"

DV

The DV command forces output voltage from the specified unit.

Execution Conditions

The CN command has been executed for the specified unit. If the output voltage is greater than ± 40 V, the interlock circuit must be shorted.

Syntax

DV *chnum*, *range*, *voltage* [, *Icomp* [, *comp polarity*]]

If you enter the DV command into the program memory (see the ST command), do not omit the *Icomp* parameter. *Icomp* is necessary when using the internal program memory.

Parameters

***chnum*:** Channel number of the unit used to force voltage. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
21	VSU1
22	VSU2
27	PGU1 ^b
28	PGU2 ^b

a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

b. If you use the PGU, execute the SPG command before the DV command.

***range*:** Ranging type for voltage output. Integer expression.

<i>range</i>	Ranging Type ^a
0	Auto ranging
11 (for SMU)	2 V limited auto ranging
12	20 V limited auto ranging

<i>range</i>	Ranging Type ^a
13 (for SMU and PGU)	40 V limited auto ranging
14 (for SMU)	100 V limited auto ranging
15 (only for HPSMU)	200 V limited auto ranging

- a. Auto ranging uses the lowest output range (available for the unit) that covers the *voltage* value. Limited auto ranging is the same, but minimum output range is the specified range. For example, 20 V limited auto ranging uses the 20 V range to force 1 V, and uses the 100 V range to force 50 V.

voltage: Output voltage value (in V). Numeric expression.

0 to ± 100 (for 4155B/4156B and MPSMU in 41501A/B)

0 to ± 200 (for HPSMU in 41501A/B)

0 to ± 20 (for VSU)

0 to ± 40 (for PGU)

For the relation between the *voltage* and the output range (not *range*), and for setting the resolution of *voltage*, see Table 1-6 on page 1-65.

Icomp: Current compliance value (in A). Numeric expression. This parameter is not available for VSU and PGU. If you do not specify this parameter, *Icomp* is set to the previous setting. 0 A is not allowed for *Icomp*.

For parameter values available for *Icomp*, see Table 1-6 on page 1-65.

***comp
polarity:***

Polarity of current compliance. Integer expression. This parameter is not available for VSU and PGU.

0: Auto mode. Default.

The polarity of the current compliance is automatically set to the same value as the polarity of the output voltage (*voltage*), regardless of the polarity of the *Icomp* value. If the output voltage is 0 V, the polarity is positive.

1: Manual mode.

This parameter must be specified if you want to set the polarity of the current compliance to the same value as the polarity of *Icomp* you specified.

Table 1-6 Available Parameter Values for DV Command

Output Range	Resolution in V	<i>voltage</i> in V	Maximum <i>Icomp</i> in A	Remarks
2 V	100E-6	0 to ± 2	$\pm 100\text{E-}3$	For SMU.
			± 1	For HPSMU.
20 V	1E-3	0 to ± 20	$\pm 100\text{E-}3$	For SMU.
			± 1	For HPSMU.
			–	For VSU.
	4E-3		–	For PGU.
40 V	2E-3	0 to ± 40	$\pm 50\text{E-}3$	For SMU.
			$\pm 500\text{E-}3$	For HPSMU.
	8E-3		–	For PGU.
100 V	5E-3	0 to ± 100	$\pm 20\text{E-}3$	For SMU.
			$\pm 125\text{E-}3$	For HPSMU.
200 V	10E-3	0 to ± 200	$\pm 50\text{E-}3$	

Example Statements

```
OUTPUT @Hp4156; "DV 1, 0, 20, 1E-6, 0"
OUTPUT @Hp4156; "DV 21, 12, 10"
```

DZ

The DZ command stores the settings (V/I output values, V/I output ranges, and V/I compliance values) of the specified units, and sets the units to Zero (0 V) Output. The stored settings can be recovered by using the RZ command. The settings are cleared by using a Device Clear (HP BASIC CLEAR) command, *RST, RZ, CL, CA, or *TST?.

**Execution
Conditions**

The CN command has been executed for the specified units.

Syntax

DZ [*chnum*[, *chnum*...[, *chnum*]...]

Parameters

***chnum*:** Channel number set to zero (0 V) output. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
21	VSU1
22	VSU2
23	VMU1
24	VMU2
26	GNDU
27	PGU1
28	PGU2

- a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

If you do not specify *chnum*, the DZ command applies the Zero Output to all units, where the output switch is set to ON, in order from higher (output or measurement range) to lower voltage range.

If you specify multiple *chnums*, the 4155B/4156B sets the units to Zero Output in the specified order.

Remarks

The DZ command sets the specified units to the following conditions:

Item	SMU	VSU	VMU	GNDU	PGU
Output Switch	ON	ON	ON	ON	ON
Source Mode	V		Not changed	V	V
Output Voltage	0 V	0 V	Not changed	0 V	0 V
V Range	Not changed	20 V	Not changed		Not changed
I Compliance	See below	100 mA	Not changed		
I Range		100 mA	Not changed		100 mA
Filter	Not changed		Not changed		

Previous range ^a	I Compliance
10 pA to 10 nA	10 nA at 10 nA range
100 nA to 1 μ A	1 μ A at 1 μ A range
over 10 μ A	100 μ A at 100 μ A range

a. Previous range is the current output range, which was set before the DZ command.

Example Statements

```
OUTPUT @Hp4156; "DZ"
```

```
OUTPUT @Hp4156; "DZ 1, 2, 3"
```

4155B/4156B FLEX Commands

END

END

The END command is used with the ST command to store a program in the internal program memory of the 4155B/4156B. See ST command.

Syntax

END

Example Statements

```
OUTPUT @Hp4156;"ST 1;CN 1;DV 1,0,5,1E-4;TI? 1,0;CL 1"  
OUTPUT @Hp4156;"END"
```


ERR?

The ERR? query command returns error codes from the 4155B/4156B error register to the output data buffer (query buffer).

Output data is always stored in the query buffer in ASCII format, regardless of the FMT command.

This command clears the error register.

Syntax

ERR?

Query Response

In US command mode:

Error Code #1, ..., Error Code #7 <LF^EOI>

In US42 command mode:

Error Code #1, ..., Error Code #4 <CR/LF^EOI>

where, *Error Code #N* (*N*: integer) indicates 3 digits, 5 digits, or 10 digits error code. For the error codes, refer to “Error Messages” and *User's Guide*.

Example Statements

```
OUTPUT @Hp4156;"ERR?"
ENTER @Hp4156;A$
```

4155B/4156B FLEX Commands

*ESE(?)

*ESE(?)

The *ESE command sets the bits of the Standard Event Status "Enable" Register.

Syntax

*ESE *enable_number*

Parameters

***enable_number*:** Decimal integer (the sum of the binary-weighted values for the desired bits), hexadecimal, octal, or binary value.

1: Enables.

0: Masks.

Query Response

In US command mode:

enable_number<LF^EOI>

In US42 command mode:

enable_number<CR/LF^EOI>

where, *enable_number* is a decimal integer value that is the sum of the binary-weighted values of the "Enable" register bits.

Semantics

The Standard Event Status "Enable" Register determines which bits of the Standard Event Status Register are enabled. Enabled bits are ORed together, and the result is reported to bit 5 of the Status Byte Register.

The Standard Event Status "Enable" Register consists of 16 bits, but only the lower 8 bits are used. These correspond to the bits of the Standard Event Status Register.

The following table shows the bits of the Standard Event Status Register and the binary-weighted decimal value.

bit	binary-weight	description
0	1	OPC (Operation Complete)
1	2	Not used. (always zero)
2	4	Not used. (always zero)
3	8	Set to 1 if error occurred.
4	16	Set to 1 if parameter error occurred.
5	32	Set to 1 if syntax error occurred.
6	64	Not used. (always zero)
7	128	Not used. (always zero)

**Example
Statements**

The following four lines enable the same bit (bit 6):

```
OUTPUT @Hp4156;"*ESE 32"           using decimal numeric  
OUTPUT @Hp4156;"*ESE #B100000"    using binary numeric  
OUTPUT @Hp4156;"*ESE #Q40"        using octal numeric  
OUTPUT @Hp4156;"*ESE #H20"        using hexadecimal numeric
```

The following is an example for a query:

```
OUTPUT @Hp4156;"*ESE?"  
ENTER @Hp4156;A
```

4155B/4156B FLEX Commands
*ESR?

***ESR?**

The *ESR? query command returns the present contents of the Standard Event Status Register.

Syntax

*ESR?

Query Response

In US command mode:

register<LF^EOI>

In US42 command mode:

register<CR/LF^EOI>

Parameter	Type	Explanation
<i>register</i>	NR1	0 to 255 (decimal integer value that is the sum of the binary-weighted values for the set bits)

Semantics

The following table shows the bits of the Standard Event Status Register.

bit	binary-weight	description
0	1	OPC (Operation Complete)
1	2	Not used. (always zero)
2	4	Not used. (always zero)
3	8	Set to 1 if error occurred.
4	16	Set to 1 if parameter error occurred.
5	32	Set to 1 if syntax error occurred.
6	64	Not used. (always zero)
7	128	Not used. (always zero)

**Example
Statements**

OUTPUT @Hp4156;"*ESR?"
ENTER @Hp4156;A

FL

The FL command sets the filter of specified units to ON or OFF. For pulsed source, set the filter to OFF (to enable pulsed output) before measurement trigger.

Syntax

FL *mode*[, *chnum*[, *chnum*...[, *chnum*]...]]

Parameters

- mode:**

Status of the filter. Integer expression.

0: Filter OFF.

1: Filter ON.
- chnum:**

Channel number. Integer expression. If you do not specify *chnum*, the FL command sets the filter of all channels to ON or OFF under the *mode* setting.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6

a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

Example Statements

OUTPUT @Hp4156;"FL"
OUTPUT @Hp4156;"FL 1,1,3,5"

FMT

The FMT command specifies the measurement data output format and the data terminator. For details about output data format, see “Data Output Format” on page 1-11.

Query command output data is always stored in the query buffer in ASCII format, regardless of this command.

Syntax

`FMT format [, mode]`

Parameters

format : Output data format. Integer expression. If you do not specify this parameter, *format* is set to 1.

<i>format</i>	Description	Terminator	
		US mode ^a	US42 mode ^b
1	ASCII data format with header. Initial setting.	<LF^EOI>	<CR/LF^EOI>
2	ASCII data format without header		
3	Binary data format		
4	Binary data format		<^EOI>
5	ASCII data format with header	<,^EOI>	,

a. This column is effective for US command mode.

b. This column is effective for US42 command mode.

mode: Output data mode. Integer expression. If you do not specify this parameter, *mode* is set to 0.

<i>mode</i>	Description
0	For the sweep measurements, sweep source data is not output. For the sampling measurements, sampling point index is not output.
1	For the sweep measurements, primary sweep source data is output with measurement data. For the sampling measurements, sampling point index is output with measurement data.
2	For the sweep measurements, secondary sweep source data is output with measurement data. If WSI/WSV command was not entered properly, the invalid source data will be returned. Ignore the returned value. For the sampling data, sampling point index is output with measurement data.

Remarks

In the US command control mode, if you change the data output format, the FMT command clears the 4155B/4156B output data buffer and sets the new data output format. If the format specified by the FMT command is the same as the previous setting, the FMT command does not clear the output data buffer.

In the US42 command control mode, the FMT command clears the 4155B/4156B output data buffer and sets the data output format.

Example Statements

```
OUTPUT @Hp4156;"FMT 1"
OUTPUT @Hp4156;"FMT 2,1"
```

GOC

The GOC command measures the zero offset data and sets the zero offset cancel function to ON. The zero offset cancel function is available for the SMU in the low current measurement mode and the VMU in the differential voltage measurement mode. For details of the zero offset cancel function, refer to *User's Guide: Measurement and Analysis*.

The zero offset data is cleared by the US, US42, *RST command, or any emergency condition.

Execution Conditions

SMU must be set to the voltage force mode by the DV command.

Syntax

GOC *chnum*, *range*

Parameters

chnum : Channel number of the unit used to measure the zero offset data and to set the zero offset cancel function to ON. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
23 ^b	VMU1
24 ^b	VMU2

- a. For SMUs in the 41501A/B Expander. If HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used to specify the HPSMU.
- b. Differential voltage measurements use both VMU1 and VMU2. Specify which VMU1 or VMU2.

range : Measurement range to measure the zero offset data. Integer expression.

<i>range</i>	Description
9 (for 4156B)	10 pA range
10 (for 4156B)	100 pA range
10 (for VMU)	0.2 V range
11 (for SMU)	1 nA range

Remarks

If the 4155B/4156B fails to measure the zero offset data in the GOC command execution, the GOC command keeps the previous zero offset data and sets the function to OFF.

Example Statements

OUTPUT @Hp4156; "GOC 1, 9"
OUTPUT @Hp4156; "GOC 23, 10"

4155B/4156B FLEX Commands
*IDN?

***IDN?**

The *IDN? query command requests the instrument model number and the ROM version number, then stores the results in the 4155B/4156B output data buffer (query buffer).

Output data is always stored in the query buffer in ASCII format, regardless of the FMT command.

Syntax

*IDN?

Query Response

HEWLETT-PACKARD,*model*,0,*HOST rev*,*SMUC rev*,*AD rev* <LF^EOI>

Response	Explanation
<i>model</i>	4155B or 4156B
<i>HOST rev</i>	Revision number of HOST CPU.
<i>SMUC rev</i>	Revision number of SMU controller.
<i>AD rev</i>	Revision number of A/D converter.

Example Statements

OUTPUT @Hp4156;"*IDN?"
ENTER @Hp4156;A\$

Example Response

HEWLETT-PACKARD,4156B,0,01.00,01.00,01.00

IN

The IN command sets the specified unit to Zero Output with an output range change.

Execution Conditions

The CN command has been executed for the specified unit.

Syntax

IN [*chnum*[, *chnum*...[, *chnum*]...]

Parameters

***chnum*:** Channel number. Integer expression. See below.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
21	VSU1
22	VSU2
27	PGU1
28	PGU2

- a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

If you do not specify *chnum*, this command sets all units to Zero Output in order from higher voltage range (output or measurement range) to lower voltage range.

If you specify multiple *chnums*, the 4155B/4156B sets the units to Zero Output in the specified order.

4155B/4156B FLEX Commands
IN

Remarks

The IN command sets the specified units to the following conditions, which are the same as the conditions after executing the CN command.

Item	SMU	VSU	VMU	GNDU	PGU
Output Switch	ON	ON	ON	ON	ON
Source Mode	V	V			V
Output Voltage	0 V	0 V		0 V	0 V
V Range	20 V	20 V	20 V ^a		20 V
I Compliance	100 μ A	100 mA			
I Limit		100 mA			100 mA
I Range	100 μ A	100 mA			
Filter	Not changed				

- a. For differential voltage measurement mode, the voltage range is set to 2 V range.

Example
Statements

OUTPUT @Hp4156;"IN"
OUTPUT @Hp4156;"IN 1,2,3,5,6"

LOP?

The LOP? query command requests the operation status of all source units (SMUs and VSUs) and stores the results in the 4155B/4156B output data buffer (query buffer).

Output data is always stored in the query buffer in ASCII format, regardless of the FMT command.

Syntax

LOP?

Query Response

In US command mode:

LOP *slot0 status, slot1 status..., slot8 status* <LF^EOI>

In US42 command mode:

LOP *slot1 status, slot2 status..., slot8 status* <CR/LF^EOI>

where, *slotN status* (N: 0 to 8) means the following:

Parameter	Description
<i>slot0 status</i>	Status number indicates the operation status of GNDU.
<i>slot1 status</i>	Status number indicates the operation status of SMU1.
<i>slot2 status</i>	Status number indicates the operation status of SMU2.
<i>slot3 status</i>	Status number indicates the operation status of SMU3.
<i>slot4 status</i>	Status number indicates the operation status of SMU4.
<i>slot5 status</i> ^a	Status number indicates the operation status of SMU5.
<i>slot6 status</i> ^a	Status number indicates the operation status of SMU6.
<i>slot7 status</i>	Status number indicates the operation status of VSU1 and VSU2.
<i>slot8 status</i>	Status number indicates the operation status of PGU1 and PGU2.

- a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *slot6 status* returns the HPSMU status, and *slot5 status* does not have meaning.

4155B/4156B FLEX Commands

LOP?

Status numbers indicate whether the units are operating normally or not, as follows:

in US mode:

Available status numbers are 0 to 255 (decimal number) which represents an 8-bit binary number. See the table below for a description of each bit of the binary number.

Bit	Unit	Value	Description
7 (MSB) ^a	for All	0	No unit is installed, or the output switch is OFF.
		1	Unit is installed, and the output switch is ON.
6	for VSU	0	No VSU2 is installed, or the output switch is OFF.
		1	VSU2 is installed, and the output switch is ON.
	for PGU	0	No PGU2 is installed, or the output switch is OFF.
		1	PGU2 is installed, and the output switch is ON.
5	for VMU	0	VMU1 is not installed, or the output switch is OFF.
		1	VMU1 is installed, and the output switch is ON.
4	for VMU	0	VMU2 is not installed, or the output switch is OFF.
		1	VMU2 is installed, and the output switch is ON.
3	for SMU	0	SMU is in the voltage source mode.
		1	SMU is in the current source mode.
1 and 2	for SMU	00	SMU reaches voltage compliance.
		01	SMU reaches negative current compliance.
		10	SMU reaches positive current compliance.
	for VSU	01	VSU2 reaches the current limit.
		10	VSU1 reaches the current limit.
		11	Both VSU1 and VSU2 reach the current limit.
	for PGU	01	PGU2 reaches the current limit.
		10	PGU1 reaches the current limit.
		11	Both PGU1 and PGU2 reach the current limit.
0	for SMU	0	SMU is not oscillating.
		1	SMU is oscillating.

- a. Most Significant Bit. Top digit of the 8-digit binary number which indicates the operation status.

For example, if *Slot1 status* is 128 (10000000), SMU1 status is as follows:

1. SMU1 is installed in the slot and output switch is ON.
2. SMU1 is in the voltage force mode.
3. SMU1 reaches the voltage compliance.
4. SMU1 is not oscillating.

in US42 mode:

Status numbers are two-digit decimal numbers. Available numbers and meanings are as follows:

Status Number	Description
00	No unit is installed, or the output switch is OFF.
01	SMU does not reach current compliance.
02	SMU does not reach voltage compliance.
03	SMU does not reach voltage compliance. Both VSUs operate normally.
10	Both VSUs reach the current limit.
11	SMU reaches voltage compliance.
12	SMU reaches positive current compliance.
13	SMU reaches negative current compliance.
20	SMU is oscillating.
30	Not applicable.

The HPSMU, in the 41501A/B, occupies two slots (5 and 6). The status number is returned for slot number 6, and 00 is returned for slot number 5.

**Example
Statements**

```
OUTPUT @Hp4156;"LOP?"
ENTER @Hp4156;A$
```

4155B/4156B FLEX Commands

*LRN?

*LRN?

The *LRN? (learn) query command requests information about unit settings or the 4155B/4156B command parameter settings, and stores the results in the 4155B/4156B output data buffer (query buffer).

Output data is always stored in the query buffer in ASCII format, regardless of the FMT command.

Syntax

*LRN? *type*

Parameters and Query Response

***type* :** Available values are 0 to 48. Integer expression. See below.

The parameter selects the type of query response.

For all query responses, the terminator depends on the control mode (US or US42 command) as follows:

US command mode: <LF^EOI>

US42 command mode: <CR/LF^EOI>

Description and the query response of each *type* is described below.

0 : Returns the output switch ON/OFF status:

CN [*chnum* [, *chnum* . . . [, *chnum*] . . .]]<terminator>

where, *chnum* is the channel number for the unit whose output switch is set to ON.

If no output switches are ON, the query response is:

CL<terminator>

1 to 28 : Returns SMU/VSU/PGU source status, or VMU operation mode.

type corresponds to the channel number of the unit as shown in the following table. For example, enter 27 for the PGU1 source status.

For SMU (*type*: 1 to 6):

If the output switch is ON, the query response is:

DV *chnum*,*range*,*voltage* [, *Icomp* [, *comp polarity*]]<terminator>
or DI *chnum*,*range*,*current* [, *Vcomp* [, *comp polarity*]]<terminator>

where, *range* is the present setting of the output range.

If the output switch is OFF, the query response is:

CL *chnum* <terminator>

The returned value of the *comp polarity* parameter may be different from the value you set. But the force command works properly.

For VSU or VMU (type: 21 to 24):

(DV *VSU1 chnum,range,voltage*;) or (CL *VSU1 chnum*;)
 (DV *VSU2 chnum,range,voltage*;) or (CL *VSU2 chnum*;)
 VM *VMU1 chnum,operation mode*;
 VM *VMU2 chnum,operation mode*<terminator>

where, *range* is the present setting of the output range.

For GNDU (type: 26):

CN<terminator> or CL<terminator>

For PGU (type: 27 or 28):

If the output switch is ON, the query response is:

DV *chnum,range,voltage*;
 SPG *chnum,pulse mode[,base[,pulse,Td,Tw,Tl,Tt,Tp,count]]*;
 POR *chnum,Zout*<terminator>

If the output switch is OFF, the query response is:

CL *chnum*<terminator>

<i>type or Channel No.</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
21	VSU1
22	VSU2
23	VMU1
24	VMU2
26	GNDU
27	PGU1
28	PGU2

- a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, HPSMU channel number is 6, and channel number 5 is not used.

4155B/4156B FLEX Commands

*LRN?

29 : Not used.

30 : Returns filter ON/OFF status:

FL 0 [*off ch* [, *off ch* . . . [, *off ch*] . . .]; FL 1 [*on ch* [, *on ch* . . . [, *on ch*] . . .]
<terminator>

If all units are Filter OFF, the query response is:

FL 0<terminator>

If all units are Filter ON, the query response is:

FL 1<terminator>

31 : Returns the parameter values of the TM, AV, CM, FMT, and MM commands:

TM *trigger mode*; AV *number* [, *mode*]; CM *auto calibration mode*;
FMT *output data format*, *output data mode*
[; MM *measurement mode* [, *chnum* [, *chnum* . . . [, *chnum*] . . .]]]<terminator>

where, if present *averaging number* parameter setting of the AV command is negative value, the *LRN? 31 command response of *averaging number* will be -1.

32 : Returns the measurement ranging status (parameter values of the RI and RV commands):

RI *chnum*, *I measurement range* [, *ranging mode*]
or RV *chnum*, *V measurement range* [, *ranging mode*]
[; RI *chnum*, *I measurement range* [, *ranging mode*]]
or [; RV *chnum*, *V measurement range* [, *ranging mode*]]

⋮
⋮

[; RI *chnum*, *I measurement range* [, *ranging mode*]]
or [; RV *chnum*, *V measurement range* [, *ranging mode*]]<terminator>

In US42 command mode, if the 4142B-like query response is specified, *ranging mode* is not returned. Then if the fixed ranging is specified, the returned value of the measurement range will be negative value (-1×*range*).

33 : Returns the staircase sweep measurement settings (parameter values of the WM, WT, WV, WI, WSV and WSI commands):

WM automatic sweep abort function,output after sweep;
WT hold time,delay time[,step delay time]
 [[:WV *ch,mode,range,start,stop,nop[,lcomp [,pcomp[,rmode]]]]]*
 or [[:WI *ch,mode,range,start,stop,nop[,Vcomp[,pcomp[,rmode]]]]]*
 [[:WSV *ch,range,start,stop[,lcomp[,pcomp[,rmode]]]]]*
 or [[:WSI *ch,range,start,stop[,Vcomp[,pcomp[,rmode]]]]]<terminator>*

The returned value of the *ranging mode* parameter may be different from the value you set. But the sweep command works properly.

In US42 command mode, if the 4142B-like query response is specified, *step delay time* and *ranging mode* are not returned.

34 : Returns the pulsed source settings (parameter values of the PT, PV, PI, PWV and PWI commands):

PT hold,width[,period[,trigger delay[,priority]]]
 [[:PV *chnum,output range,base voltage,pulse voltage [,lcomp]]]*
 or [[:PI *chnum,output range,base current,pulse current [,Vcomp]]]*
 [[:PWV *ch,mode,range,base,start,stop,nop[,lcomp[,rmode]]]]]*
 or [[:PWI *ch,mode,range,baset,start,stop,nop[,Vcomp[,rmode]]]]]*
 <terminator>

The returned value of the *ranging mode* parameter may be different from the value you set. But the sweep command works properly.

In US42 command mode, if the 4142B-like query response is specified, *trigger delay*, *priority* and *ranging mode* are not returned.

35 to 38 : Not used.

39 : Returns the trigger mode status:

STG 0 state,polarity;STG 1 state,polarity<terminator>

40 : Returns the channel assignment information:

ACH 4142ch,chnum;ACH 4142ch,chnum . . .
;ACH 4142ch,chnum<terminator>

If no channel number is defined by ACH command, the query response is:

ACH<terminator>

4155B/4156B FLEX Commands

*LRN?

41 : Returns the settings of US42 command:

US42 *mode*<terminator>

If the 4155B/4156B is not in the US42 command mode, the following response is returned.

US42 0<terminator>

42 : Returns the zero offset cancel ON/OFF status:

SOC 0,*chnum*[:SOC 0,*chnum* . . . [:SOC 0,*chnum*] . . .];

SOC 1,*chnum*[:SOC 1,*chnum* . . . [:SOC 1,*chnum*] . . .]<terminator>

If all units are Zero offset cancel OFF, the query response is:

SOC 0<terminator>

If all units are Zero offset cancel ON, the query response is:

SOC 1<terminator>

43 : Returns the integration time settings:

SLI *type*;SIT 1,*time*;SIT 3,*time*;

AZ 0 or AZ 1

<terminator>

where, if present *number* parameter setting of the AV command is negative value, the *LRN? 43 command response will be:

SLI 3;SIT 1,*time*;SIT 3, $plc \times |number|$

plc is 20 msec for line frequency 50 Hz, and 16.7 msec for line frequency 60 Hz.

44 : Returns the Resistor Box settings:

RBC 1,*resistance*;RBC 2,*resistance*<terminator>

45 : Returns the SMU/PGU selector settings:

SSP 0,*mode*;SSP 1,*mode*;SSP 2,*mode*;SSP 3,*mode*<terminator>

46 : Returns the SMU measurement mode:

CMM *chnum,mode* . . . ;CMM *chnum,mode*<terminator>

47 : Returns the sampling measurement settings (parameter values of the MT, MSC, MV, MI and MP commands):

MSC stop mode

;MT hold time,init interval,sampling points

[;MV chnum,output range,base,bias[,lcomp]]

[;MV :]

:

[;MV chnum,output range,base,bias[,lcomp]]...]

[;MI chnum,output range,base,bias[,Vcomp]]

[;MI :]

:

[;MI chnum,output range,base,bias[,Vcomp]]...]

[;MP chnum,mode,base,bias,delay,width,lead, trail,period,count]

[;MP :]

[;MP chnum,mode,base,bias,delay,width,lead, trail,period,count]...]

<terminator>

48 : Returns the stress settings (parameter values of the STP, STT, STM, STI and STV commands):

STM stop mode;STT hold_time,stress_mode,stress_time[,period]

[;(STI source,chnum,range,base,stress,Vcomp)]

or [;(STV source,chnum,range,base,stress,lcomp)]

;STP source,ch,mode,base,stress[,delay[,width[,leading[,trailing]]]]

:

<terminator>

If you set the wrong values for the STT command *period* parameter and the STP command *delay* and *width* parameters, the settings are automatically changed. So you will see the values you did not set for the parameters.

Example Statements

```
OUTPUT @Hp4156;"*LRN? 1"
ENTER @Hp4156;A$
```

4155B/4156B FLEX Commands

LST?

LST?

The LST? query command stores a catalog of internal memory programs or a specific program listing in the output data buffer (query buffer) of the 4155B/4156B.

The output data is always stored in the query buffer in ASCII format, regardless of the FMT command.

Syntax

To get the catalog of internal memory programs:

LST?

To get the list of a specific internal memory program:

LST? *prog No.*

Parameters

prog No.: Internal memory program number. 1 to 255. Integer expression.

Query Response

Response by LST?:

Number of programs, [prog No. [,prog No.... [,prog No.]...]]
<terminator>

Response by LST? *program No.:*

ST *prog No.*<terminator>
[saved command #1]<terminator>
[saved command #2]<terminator>
:
:
[saved command #n]<terminator>
END<terminator>

To read this listing, set up a loop containing the ENTER command, and continue the loop until encountering the END command. The commands are read, one at a time, until the END command is encountered.

In the query response, <terminator> is as follows.

US command mode: <LF^EOI>

US42 command mode: <CR/LF^EOI>

**Example
Statements**

Example of LST? :

```
OUTPUT @Hp4156;"LST?"  
ENTER @Hp4156;A$
```

Example of LST? *prog No.* :

```
OUTPUT @Hp4156;"ST 3;CN;DV 1,0,20,1E-6;TI 1,0;CL"  
OUTPUT @Hp4156;"END"  
OUTPUT @Hp4156;"LST? 3"  
LOOP  
    ENTER @Hp4156;A$  
    PRINT A$  
EXIT IF A$="END"  
END LOOP
```

MCC

The MCC command clears the settings of the specified sampling channels defined by the MV, MI or MP command.

Syntax

MCC [*chnum* [, *chnum* . . . [, *chnum* [, *chnum*]] . . .]]

Parameters

chnum : Channel number of the unit to clear the settings. Integer expression.

You can specify a maximum of 16 *chnums* at once as the MCC command parameters.

If you do not specify *chnum*, the MCC command clears the settings of the all sampling channels.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
21	VSU1
22	VSU2
27	PGU1
28	PGU2

a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

Example Statements

OUTPUT @Hp4156; "MCC"

OUTPUT @Hp4156; "MCC 1, 2, 3"

MI

The MI command specifies the dc current source (SMU) synchronized with the sampling measurements, and its parameters.

The output starts at the beginning of the sampling measurements (starts by the XE command). To stop the output, use the DI command. The output goes to the output value specified by the DI command.

Execution Conditions

If the voltage compliance is greater than ± 40 V, the interlock circuit must be shorted.

Syntax

MI *chnum*, *range*, *base*, *bias*[, *Vcomp*]

If you enter the MI command into the program memory (see the ST command), do not omit the *Vcomp* parameter. *Vcomp* is necessary when using the internal program memory.

Parameters

***chnum*:** Channel number of the unit used to force the current. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6

- a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

***range*:** Ranging type for current output. Integer expression.

<i>range</i>	Ranging Type ^a
0	Auto ranging
9 (only for 4156B)	10 pA limited auto ranging
10 (only for 4156B)	100 pA limited auto ranging
11	1 nA limited auto ranging
12	10 nA limited auto ranging

<i>range</i>	Ranging Type ^a
13	100 nA limited auto ranging
14	1 μ A limited auto ranging
15	10 μ A limited auto ranging
16	100 μ A limited auto ranging
17	1 mA limited auto ranging
18	10 mA limited auto ranging
19	100 mA limited auto ranging
20 (only for HPSMU)	1 A limited auto ranging

- a. Auto ranging uses the lowest output range (available for the unit) that covers both the *bias* value and the *base* value. Limited auto ranging is the same, but the minimum output range is the specified range. For example, 10 μ A limited auto ranging uses the 10 μ A range to force 1 nA with 0 A base current, and uses the 100 mA range to force 50 mA with 0 A base current.

base: Base current (in A). Numeric expression. Set the source unit output value which has been forced before the XE command. This minimizes the spike.

0 to $\pm 100\text{E-}3$ (for 4155B/4156B and MPSMU in 41501A/B)

0 to ± 1 (for HPSMU in 41501A/B)

For the relation between the *base* value and the output range (not *range*), and for setting the resolution of the *base* value, see Table 1-7.

bias: Output bias current (in A). Numeric expression.

0 to $\pm 100\text{E-}3$ (for 4155B/4156B and MPSMU in 41501A/B)

0 to ± 1 (for HPSMU in 41501A/B)

For the relation between the *bias* value and the output range (not *range*), and for setting the resolution of the *bias* value, see Table 1-7.

Vcomp: Voltage compliance value (in V). Numeric expression. If this parameter is not specified, then *Vcomp* is set to the previous setting.

For parameter values available for *Vcomp*, see Table 1-7.

Table 1-7

Available Parameter Values for MI Command

Output Range	Resolution in A	<i>bias</i> or <i>base</i> in A	Maximum <i>V_{comp}</i> in V	Remarks
10 pA	10E-15	0 to $\pm 10\text{E-}12$	± 100	For 4156B.
100 pA	10E-15	0 to $\pm 100\text{E-}12$	± 100	
1 nA	100E-15	0 to $\pm 1\text{E-}9$	± 100	For SMU.
			± 200	For HPSMU.
10 nA	1E-12	0 to $\pm 10\text{E-}9$	± 100	For SMU.
			± 200	For HPSMU.
100 nA	10E-12	0 to $\pm 100\text{E-}9$	± 100	For SMU.
			± 200	For HPSMU.
1 μA	100E-12	0 to $\pm 1\text{E-}6$	± 100	For SMU.
			± 200	For HPSMU.
10 μA	1E-9	0 to $\pm 10\text{E-}6$	± 100	For SMU.
			± 200	For HPSMU.
100 μA	10E-9	0 to $\pm 100\text{E-}6$	± 100	For SMU.
			± 200	For HPSMU.
1 mA	100E-9	0 to $\pm 1\text{E-}3$	± 100	For SMU.
			± 200	For HPSMU.
10 mA	1E-6	0 to $\pm 10\text{E-}3$	± 100	For SMU.
			± 200	For HPSMU.
100 mA	10E-6	0 to $\pm 20\text{E-}3$	± 100	For SMU.
		to $\pm 50\text{E-}3$	± 40	
		to $\pm 100\text{E-}3$	± 20	
	100E-6	0 to $\pm 50\text{E-}3$	± 200	For HPSMU.
		to $\pm 100\text{E-}3$	± 100	
1 A	100E-6	0 to $\pm 50\text{E-}3$	± 200	
		to $\pm 125\text{E-}3$	± 100	
		to $\pm 500\text{E-}3$	± 40	
		to ± 1	± 20	

Example Statements

```
OUTPUT @Hp4156; "MI 1,18,0,5E-5,10"
```

MM

The MM command sets the measurement mode and measurement units.

This command is not required for the high speed spot measurements using the TI, TI?, TV or TV? command.

Syntax

For spot, staircase sweep, sampling, 1ch pulsed spot, pulsed sweep and staircase sweep with pulsed bias measurements:

```
MM mode, chnum[, chnum...[, chnum]...]
```

For stress force:

```
MM 11
```

Parameters

mode : Measurement mode. Integer expression.

<i>mode</i>	Description	Related Source Setup Command
1	Spot measurement	DI, DV
2	Staircase sweep measurement	WI, WV, WT, WM, WSI, WSV
3	1ch pulsed spot measurement	PI, PV, PT
4	Pulsed sweep measurement	PWI, PWV, PT, WM, WSI, WSV
5	Staircase sweep with pulsed bias measurement	WI, WV, WT, WM, PI, PV, PT
6 to 9	Not defined.	
10	Sampling measurement	MI, MV, MP, MT, MSC, MCC
11	Stress force	POR, STI, STV, STP, STT, STM, STC

chnum : Channel number of the unit which executes the measurement.
Maximum 8 units can be used for the measurements (maximum 8 *chnums* can be defined in the MM command).

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
23	VMU1
24	VMU2

- a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

For the following measurement mode, you can use only one measurement unit (you can define only one *chnum* in the MM command).

1. 1ch pulsed spot measurements with "keep pulse width"
2. Pulsed sweep measurements with "keep pulse width"
3. Staircase sweep with pulsed bias measurements with "keep pulse width"
4. Sampling measurement with the sampling interval less than 2 msec (see the MT command)

where, "keep pulse width" means the measurement setup which the PT command *priority* parameter is set to 0 or default setting (see the PT command).

Remarks

For the SMU or HPSMU, the SMU measurement mode is defined by the CMM command. Refer to the CMM command.

The measurement range is defined by the RI or RV command. Refer to the RI and RV command.

To execute the measurement, use the XE command. Refer to the XE command. The measurement unit performs a measurement even if the source output value is 0.

If you specify the multiple measurement units in the MM command, the measurement is performed by the units in the order defined in the MM command.

For the 1ch pulsed spot, pulsed sweep or staircase sweep with pulsed bias measurements, the WT command is ignored.

For the 1ch pulsed spot, pulsed sweep or staircase sweep with pulsed bias measurements with "keep pulse width" (PT command *priority* parameter setting), the AV and SLI commands are ignored. And the integration time is automatically set to 80 μ sec.

For the sampling measurement with the sampling interval less than 2 msec, the AV and SLI commands are ignored.

Example Statements

```
OUTPUT @Hp4156;"MM 1,1"
```

```
OUTPUT @Hp4156;"MM 2,1,3"
```

MP

The MP command specifies the PGU synchronized with the sampling measurements, and its parameters.

The output starts at the beginning of the sampling measurements (starts by the XE command). To stop the output, use the DV command. Or to stop the pulse output, use the SPP command. The output goes to the output value specified by the DV command or the base value specified by the MP command.

If you specify the pulse output mode and pulse count (not free run), the pulse output starts at the beginning of the sampling measurements, and the PGU forces the pulses specified by *count*.

Execution Conditions

If the output voltage is greater than ± 40 V, the interlock circuit must be shorted.

Syntax

MP *chnum, mode, base, bias[, Td, Tw, Tl, Tt, Tp, count]*

Parameters

- chnum* :** Channel number of PGU 27 or 28. Integer expression.
 27: PGU1
 28: PGU2
- mode* :** Output mode. 0 or 1. Integer expression.
 0: dc voltage output. Set *base* and *bias*.
 1: Pulse voltage output. Set all parameters.
- base* :** Base voltage (in V). Numeric expression.
 0 to ± 40 V.
 in 4 mV resolution (0 to ± 20 V), in 8 mV resolution (± 20 to ± 40 V).
- bias* :** Bias voltage (in V). Numeric expression.
 0 to ± 40 V.
 in 4 mV resolution (0 to ± 20 V), in 8 mV resolution (± 20 to ± 40 V).
- Td* :** Delay time (in seconds). Only for pulse output.
 0 to 10 sec. Numeric expression. See Table 1-8.
- Tw* :** Pulse width (in seconds). Only for pulse output.
 1 μ sec to 9.99 sec. Numeric expression. See Table 1-8.
- Tl* :** Leading edge transition time (in seconds). Only for pulse output.

100 nsec to 10 msec. Numeric expression. See Table 1-9.

Restrictions: $Tl \leq Tw \times 0.8$

Tt : Trailing edge transition time (in seconds). Only for pulse output.

100 nsec to 10 msec. Numeric expression. See Table 1-9.

Restrictions: $Tt \leq (Tp - Tw) \times 0.8$

Tp : Pulse period (in seconds). Only for pulse output.

2 μ sec to 10 sec. Numeric expression. See Table 1-8.

Tp parameter setting is effective for both PGU1 and PGU2. If you use both PGUs, the pulse period setting must be the same. Check the pulse period setting value of the MP command and the SPG command in your program.

count : Pulse count. Only for pulse output.

0 to 65535. Numeric expression.

count=0 specifies free run pulse force.

count parameter setting is effective for both PGU1 and PGU2. If you use both PGUs, the pulse count setting must be the same. Check the pulse count setting value of the MP command and the SPG command in your program.

If you enter the MP command into the internal program memory, do not set *count*=0. Free run pulse output is not available.

Table 1-8

Ranges of Pulse Period, Pulse Width and Delay Time

Range ^a	<i>Tp</i> in sec	<i>Td</i> in sec	<i>Tw</i> in sec	Resolution in sec
1	2E-6 to 100E-6	0 to 100E-6	1E-6 to 99.9E-6	0.1E-6
2	100E-6 to 1E-3	0 to 1E-3	1E-6 to 999E-6	1E-6
3	1E-3 to 10E-3	0 to 10E-3	10E-6 to 9.99E-3	10E-6
4	10E-3 to 100E-3	0 to 100E-3	100E-6 to 99.9E-3	100E-6
5	100E-3 to 1	0 to 1	1E-3 to 999E-3	1E-3
6	1 to 10	0 to 10	10E-3 to 9.99	10E-3

- a. Settings of *Tp*, *Td* and *Tw* for a PGU must be in the same range. If you use two PGUs, these three parameters must be set in the same range for both PGUs.

Table 1-9

Leading and Trailing Edge Transition Time

Range ^a	<i>Tl</i> or <i>Tt</i> in sec	Resolution in sec
1	100E-9 to 1E-6	1E-9
2	500E-9 to 10E-6	10E-9
3	5E-6 to 100E-6	100E-9
4	50E-6 to 1E-3	1E-6
5	500E-6 to 10E-3	10E-6

a. Leading time and trailing time for a PGU must be in the same range.

**Example
Statements**

OUTPUT @Hp4156;"MP 28,0,0,5"

OUTPUT @Hp4156;"MP 28,1,0,5,5E-6,1E-5,1E-6,1E-6,5E-5,0"

MSC

The MSC command sets the automatic abort condition (stop condition) for the sampling measurement.

Syntax

MSC *abort*

Parameters

abort : Automatic abort condition (stop condition). Integer expression. The following values are available:

<i>abort</i>	Abort condition
1	Disables the automatic abort function.
2	One of following occurs. - Compliance on the measurement unit. - Compliance on the non-measurement unit. - Overflow on the AD converter. - Oscillation on any unit.
4	Compliance on the non-measurement unit.
8	Compliance on the measurement unit.
16	Overflow on the AD converter.
32	Oscillation on any unit.

If you want to set multiple abort conditions, specify the sum of the *abort* values for the abort conditions shown above. This is allowed for *abort*=4 to 32.

For example, if you want to enable the abort function when compliance on the measurement unit (*abort*=8) or oscillation (*abort*=32) are detected, set *abort* to 40 (8 + 32).

Example Statements

OUTPUT @Hp4156;"MSC 32"

MT

The MT command sets the sampling measurement conditions.

Syntax

MT *hold, interval, points*

Parameters

***hold* :** Hold time (in seconds).
 -0.03 to 655.35 sec. Numeric expression.

***interval* :** Initial interval time (in seconds). This value is the initial value of the sampling interval.
 0.00006 to 65.535 sec. Numeric expression.

***points* :** Sampling points.
 1 to 10001. Numeric expression.

Remarks

Sampling points depend on the sampling interval setting (*interval*). And the measurement points depend on the measurement time (settings of the AV, AZ, SIT and SLI commands).

If the sampling interval is longer than the measurement time, the number of measurement points will be same as the number of sampling points. But if the sampling interval is shorter than the measurement time, the number of measurement points is less than the number of sampling points.

For example, if the measurement time is longer than the sampling interval and shorter than twice the sampling interval, the number of measurement points will be half the number of sampling points.

Example Statements

OUTPUT @Hp4156; "MT 5, 0.1, 1001"

MV

The MV command specifies the voltage source (SMU or VSU) synchronized with the sampling measurement, and its parameters.

The output starts at the beginning of the sampling measurements (starts by the XE command). To stop the output, use the DV command. The output goes to the output value specified by the DV command.

Execution Conditions

If the output voltage is greater than ± 40 V, the interlock circuit must be shorted.

Syntax

`MV chnum, range, base, bias[, Icomp]`

If you enter the MV command into the program memory (see the ST command), do not omit the *Icomp* parameter. *Icomp* is necessary when using the internal program memory.

Parameters

***chnum*:** Channel number of the unit used to force voltage. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
21	VSU1
22	VSU2

- a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

range: Range type for voltage output. Integer expression.

<i>range</i>	Ranging Type ^a
0	Auto ranging
11 (for SMU)	2 V limited auto ranging
12	20 V limited auto ranging
13 (for SMU)	40 V limited auto ranging
14 (for SMU)	100 V limited auto ranging
15 (only for HPSMU)	200 V limited auto ranging

- a. Auto ranging uses the lowest output range (available for the unit) that covers both the *bias* value and the *base* value. Limited auto ranging is the same, but the minimum output range is the specified range. For example, 20 V limited auto ranging uses the 20 V range to force 1 V with 0 V base voltage, and uses the 100 V range to force 50 V with 0 V base voltage.

base: Base voltage (in V). Numeric expression. Set the source unit output value which has been forced before the XE command. This minimizes the spike.

0 to ± 100 (for 4155B/4156B and MPSMU in 41501A/B)

0 to ± 200 (for HPSMU in 41501A/B)

0 to ± 20 (for VSU)

For the relation between the *base* value and the output range (not *range*), and for the setting resolution of the *base* value, see Table 1-10.

bias: Output bias voltage (in V). Numeric expression.

0 to ± 100 (for 4155B/4156B and MPSMU in 41501A/B)

0 to ± 200 (for HPSMU in 41501A/B)

0 to ± 20 (for VSU)

For the relation between the *bias* value and the output range (not *range*), and for the setting resolution of the *bias* value, see Table 1-10.

***Icomp*:** Current compliance value (in A). Numeric expression.
This parameter is not available for VSU.
If you do not specify this parameter, *Icomp* is set to the previous setting.
0 A is not allowed for *Icomp*.
For parameter values available for *Icomp*, see Table 1-10.

Table 1-10 Available Parameter Values for MV Command

Output Range	Resolution in V	<i>bias</i> or <i>base</i> in V	Maximum <i>Icomp</i> in A	Remarks
2 V	100E-6	0 to ± 2	$\pm 100\text{E-}3$	For SMU.
			± 1	For HPSMU.
20 V	1E-3	0 to ± 20	$\pm 100\text{E-}3$	For SMU.
			± 1	For HPSMU.
			–	For VSU.
40 V	2E-3	0 to ± 40	$\pm 50\text{E-}3$	For SMU.
			$\pm 500\text{E-}3$	For HPSMU.
100 V	5E-3	0 to ± 100	$\pm 20\text{E-}3$	For SMU.
			$\pm 125\text{E-}3$	For HPSMU.
200 V	10E-3	0 to ± 200	$\pm 50\text{E-}3$	

Example Statements

OUTPUT @Hp4156; "MV 1,12,0,5,1E-3"

4155B/4156B FLEX Commands

NUB?

NUB?

The NUB? query command checks the number of measurement data in the output data buffer, and stores the results in the output data buffer (query buffer).

The output data is always stored in the query buffer in ASCII format, regardless of the FMT command.

The NUB? command cannot check and return the number of the measurement data measured by the TI? command and TV? command.

Syntax

NUB?

Query Response

In US command mode:

Number of measurement data<LF^EOI>

In US42 command mode:

Number of measurement data<CR/LF^EOI>

Example Statements

```
OUTPUT @Hp4156;"NUB?"  
ENTER @Hp4156;A
```

***OPC(?)**

The *OPC command monitors the pending operations, and sets/clears the Operation Complete (OPC) bit in the Standard Event Status Register as follows:

- If there are no pending operations, sets the OPC bit to 1.
- If there are any pending operations, sets the OPC bit to 0. The bit will be set to 1 when all pending operations are completed.

The *OPC command is required to enable the OPC bit. To stop monitoring pending operations (disable the OPC bit), execute the *CLS command.

Syntax

*OPC

Query Response

In US command mode:

1<LF^EOI>

In US42 command mode:

1<CR/LF^EOI>

*OPC? places ASCII character 1 into the Output Queue when all pending operations are completed.

Example Statements

OUTPUT @Hp4156;"*OPC"

The following example is for query:

OUTPUT @Hp4156;"*OPC?"
ENTER @Hp4156;A

OPEN

The OPEN command opens the specified file on the mass storage device specified by the SDSK command. If the file does not exist on the device, this command creates a new file with the specified file name.

To read data in the file, use the RD? command. To write data into the file, use the WR command. After the file operation, enter the CLOSE command to close the file.

Execution Conditions

Mass storage device is specified by the SDSK command.

Syntax

```
OPEN file [, mode]
```

Parameters

***file* :** File name to be opened.

***mode* :** Open mode. 0, 1 or 2. Integer expression. See below.

If you do not specify this parameter, *mode* is set to 0.

0: Reads data from the file.

1: Writes data to the file. The data is written over the file. The previous data will be deleted.

2: Writes data to the file. The data is appended to the file. Not available for the flexible disk drive (SDSK 0 command).

Remarks

If you open a new file on a LIF formatted diskette into the built-in flexible disk drive, the OPEN command creates a 8 KB file.

Example Statements

```
OUTPUT @Hp4156;"OPEN 'MDATA' "
```

```
OUTPUT @Hp4156;"OPEN 'MDATA', 2 "
```


***OPT?**

The *OPT? query command returns the reportable device options, which are the units in the 41501A/B Expander.

The output data is always stored in the query buffer in ASCII format, regardless of the FMT format.

Syntax

*OPT?

Query Response

In US command mode:

0 | GNDU, 0 | SMU5, 0 | SMU6, 0 | PGU<LF^EOI>

In US42 command mode:

0 | GNDU, 0 | SMU5, 0 | SMU6, 0 | PGU<CR/LF^EOI>

Example Statements

OUTPUT @Hp4156;"*OPT?"
ENTER @Hp4156;A\$

4155B/4156B FLEX Commands

OS

OS

The OS command causes the 4155B/4156B to send a trigger signal from the external trigger output terminal (Ext Trig Out) on the rear panel.

Execution Conditions

Trigger mode must be set to the trigger output mode, and it must be enabled. See STG command.

Syntax

OS

Example Statements

```
OUTPUT @Hp4156;"OS"
```

PA

The PA command pauses the command execution or internal memory program execution, until receiving a trigger specified by the TM command or until the specified wait time has elapsed. The trigger only releases the wait status. It does not start the measurement.

Syntax

PA [*wait time*]

Parameters

wait time : 0 to 99.9999 seconds, with 100 μ sec resolution. Numeric expression.

If this parameter is not specified, the wait state is kept until receiving the trigger specified by the TM command.

Remarks

If you send the PA command after the DV or DI command, actual wait time includes the wait time of the DV or DI command for the output setting.

Example Statements

OUTPUT @Hp4156; "PA"

OUTPUT @Hp4156; "PA 10"

PI

The PI command specifies the pulse current source and its parameters. This command also clears, and is cleared by, the PV command setting.

In the staircase sweep with pulsed bias measurement mode (set by the MM 5 command), the output forced by the PI command synchronized with the staircase sweep outputs forced by the WI or WV command.

Execution Conditions

The filter must be set to OFF using the FL command before the measurement trigger.

Syntax

PI *chnum*, *range*, *base*, *pulse*[, *Vcomp*]

If you enter the PI command into the program memory (see the ST command), do not omit the *Vcomp* parameter. The all parameters are necessary when using the internal program memory.

Parameters

chnum : Channel number of the unit used to force pulse current. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6

a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

range: Ranging type for pulse current output. Integer expression.

<i>range</i>	Ranging Type ^a
0	Auto ranging
9 (only for 4156B)	10 pA limited auto ranging
10 (only for 4156B)	100 pA limited auto ranging
11	1 nA limited auto ranging
12	10 nA limited auto ranging

<i>range</i>	Ranging Type ^a
13	100 nA limited auto ranging
14	1 μ A limited auto ranging
15	10 μ A limited auto ranging
16	100 μ A limited auto ranging
17	1 mA limited auto ranging
18	10 mA limited auto ranging
19	100 mA limited auto ranging
20 (only for HPSMU)	1 A limited auto ranging

a. Auto ranging uses the lowest output range (available for the unit) that covers both the *base* and *pulse* values. Limited auto ranging is the same, but the minimum output range is the specified range. For example, 10 μ A limited auto ranging uses the 10 μ A range to force *pulse*=1 nA with *base*=0, and uses the 100 mA range to force *pulse*=50 mA with *base*=0.

***base* :** Pulse base current (in A). Numeric expression.

0 to $\pm 100\text{E}-3$ (for 4155B/4156B and MPSMU in 41501A/B) 0 to ± 1 (for HPSMU in 41501A/B)

base and *pulse* must have the same polarity.

For the relation between the *base* value and the output range (not *range*), and for setting the resolution of the *base* value, see Table 1-11.

***pulse* :** Pulse current (in A). Numeric expression.

0 to $\pm 100\text{E}-3$ (for 4155B/4156B and MPSMU in 41501A/B) 0 to ± 1 (for HPSMU in 41501A/B)

base and *pulse* must have the same polarity.

For the relation between the *pulse* value and the output range (not *range*), and for setting the resolution of the *pulse* value, see Table 1-11.

***Vcomp*:** Voltage compliance value (in V). Numeric expression. If this parameter is not specified, *Vcomp* is set to the previous setting.

For parameter values available for *Vcomp*, see Table 1-11.

4155B/4156B FLEX Commands

PI

The voltage compliance polarity is automatically set to the same polarity as the *pulse* and *base* values, regardless of the specified *Vcomp*. If *pulse*=0 and *base*=0, the polarity of the voltage compliance is positive.

Table 1-11

Available Parameter Values for PI Command

Output Range	Resolution in A	<i>base</i> or <i>pulse</i> in A	Maximum <i>Vcomp</i> in V ^a	Remarks
10 pA	10E-15	0 to $\pm 10\text{E-}12$	± 2	For 4156B.
100 pA	10E-15	0 to $\pm 100\text{E-}12$	± 2	
1 nA	100E-15	0 to $\pm 1\text{E-}9$	± 2	
10 nA	1E-12	0 to $\pm 10\text{E-}9$	± 2	
100 nA	10E-12	0 to $\pm 100\text{E-}9$	± 2	
1 μA	100E-12	0 to $\pm 1\text{E-}6$	± 2	
10 μA	1E-9	0 to $\pm 10\text{E-}6$	± 2	
100 μA	10E-9	0 to $\pm 100\text{E-}6$	± 100	For SMU.
			± 200	For HPSMU.
1 mA	100E-9	0 to $\pm 1\text{E-}3$	± 100	For SMU.
			± 200	For HPSMU.
10 mA	1E-6	0 to $\pm 10\text{E-}3$	± 100	For SMU.
			± 200	For HPSMU.
100 mA	10E-6	0 to $\pm 20\text{E-}3$	± 100	For SMU.
		to $\pm 50\text{E-}3$	± 40	
		to $\pm 100\text{E-}3$	± 20	
	100E-6	0 to $\pm 50\text{E-}3$	± 200	For HPSMU.
		to $\pm 100\text{E-}3$	± 100	
		to $\pm 500\text{E-}3$	± 40	
1 A	100E-6	0 to $\pm 50\text{E-}3$	± 200	
		to $\pm 125\text{E-}3$	± 100	
		to $\pm 500\text{E-}3$	± 40	
		to ± 1	± 20	

a. If *base* or *pulse* value is within 10 μA and not 0, the maximum *Vcomp* value must be 2 V even though the output range is 100 μA or large.

Example Statements

```
OUTPUT @Hp4156;"PI 1,16,0,5E-5,20"
```

```
OUTPUT @Hp4156;"PI 3,15,0,5E-6,2"
```

POR

The POR command sets the output impedance of the PGU.

Syntax

`POR chnum, impedance`

Parameters

chnum : Channel number of PGU 27 or 28. Integer expression.

27: PGU1

28: PGU2

impedance : Output impedance. 0 or 1. Integer expression.

0: Low impedance. Almost 0 Ω

1: 50 Ω

Example Statements

`OUTPUT @Hp4156; "POR 28, 0"`

4155B/4156B FLEX Commands

PRN

PRN

The PRN command prints the data that the SPL command spools in the temporary file on the network file system. This command deletes the temporary file.

Execution Conditions

The SDSK command specifies the network file system. The SPR command specifies the remote printer. The SPL command specifies the data to be printed.

Syntax

PRN

Example Statements

```
OUTPUT @Hp4156;"TI? 1,0"  
ENTER @Hp4156 USING "#,5X,13D,X";Mdata  
Mdata$="" Id(A)=""&VAL$(Mdata)&CHR$(13)&CHR$(10)&""  
Title$="" Test Results"&CHR$(13)&CHR$(10)&""  
OUTPUT @Hp4156;"SDSK 1"  
OUTPUT @Hp4156;"SPR 1"  
OUTPUT @Hp4156;"SPL ";Title$  
OUTPUT @Hp4156;"SPL ";Mdata$  
OUTPUT @Hp4156;"PRN"
```

This example makes the following example output.

```
TestResults  
Id(A)=4.156E-12
```


PT

The PT command sets timing parameters (hold time, pulse width, and pulse period) for a pulse source set by the PI, PV, PWI or PWV command.

Syntax

For 1ch pulsed spot measurements:

```
PT hold time,width[,period[,trigger delay[,priority]]]
```

For pulsed sweep or staircase sweep with pulsed bias measurements:

```
PT hold time,width,period[,trigger delay[,priority]]
```

Parameters

hold time : Hold time (in seconds). Numeric expression.

0 to 655.35 sec. 0.01 sec resolution. Initial setting = 0.

width : Pulse width (in seconds). Numeric expression.

0.5E-3 to 0.1 sec. 0.1E-3 sec resolution. Initial setting = 1E-3 sec.

period : Pulse period (in seconds). Numeric expression.

5E-3 to 1 sec. 0.1E-3 sec resolution. Initial setting = 10E-3 sec.

Restrictions: $period \geq width + 4 \text{ ms}$

If you do not specify *period* for the pulse spot measurements, *period* is automatically set to 10 msec.

trigger

delay : Trigger output delay time (in seconds). Numeric expression.

0 to 32.7E-3 sec. 0.1E-3 sec resolution. Initial setting = 0.

Restrictions: $trigger \text{ delay} < width$

This parameter is the time from pulse leading edge to timing of trigger output from the Ext Trig Out connector.

If you do not use the external trigger, set *trigger delay* to 0.

If you do not specify this parameter, the value is set to the previous setting.

4155B/4156B FLEX Commands

PT

priority : Priority to force the pulse output. 0 or 1.

0: Keep pulse width (default)

In this mode,

- If the measurement time overs the specified pulse width, the pulse does not wait the measurement completion, and goes to the base level. Then measurement result data will be meaningless.
- Only 1 measurement unit (either a pulse measurement unit or a dc measurement unit) is available.
- Measurement range set by the RI or RV command must be the fixed range or compliance range.
- The AV, SLI and WT command settings are ignored.
- Integration time is always set to 80 μ sec.

1: Wait for measurement completion

In this mode,

- If the measurement time overs the specified pulse width, the pulse keeps the peak level until the measurement completion.
- Multi channel measurement is available. This allows to use a pulse measurement unit and dc measurement units.
- The WT command settings are ignored.

Example Statements

```
OUTPUT @Hp4156;"PT 1,0.01"
```

```
OUTPUT @Hp4156;"PT 1,0.005,0.01,0.001,1"
```

PV

The PV command specifies the pulse voltage source and its parameters. This command also clears, and is cleared by, the PI command setting.

In the staircase sweep with pulsed bias measurement mode (MM 5 command), the output forced by the PV command synchronized with the staircase sweep outputs forced by the WI or WV command.

Execution Conditions

Filter must be set to OFF using the FL command before the measurement trigger.

Syntax

For SMU:

PV chnum, range, base, pulse[, Icomp]

If you enter the PV command into the program memory (see the ST command), do not omit the *Icomp* parameter. The all parameters are necessary when using the internal program memory.

For VSU:

PV chnum, range, base, pulse

Parameters

chnum : Channel number of the unit used to force pulse voltage. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
21	VSU1
22	VSU2

- a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

range: Ranging type for pulse voltage output. Integer expression.

<i>range</i>	Ranging Type ^a
0	Auto ranging
11 (for SMU)	2 V limited auto ranging
12	20 V limited auto ranging
13 (for SMU)	40 V limited auto ranging
14 (for SMU)	100 V limited auto ranging
15 (only for HPSMU)	200 V limited auto ranging

a. Auto ranging uses the lowest output range (available for the unit) that covers both the *base* and *pulse* values. Limited auto ranging is the same, but the minimum output range is the specified range. For example, 20 V limited auto ranging uses the 20 V range to force *pulse*=1 V with *base*=0, and uses the 100 V range to force *pulse*=50 V with *base*=0.

base : Pulse base voltage (in V). Numeric expression.

0 to ± 100 (for 4155B/4156B and MPSMU in 41501A/B)

0 to ± 200 (for HPSMU in 41501A/B)

0 to ± 20 (for VSU)

For the relation between the *base* value and the output range (not *range*), and for setting the resolution of the *base* value, see Table 1-12.

pulse : Pulse voltage (in V). Numeric expression.

0 to ± 100 (for 4155B/4156B and MPSMU in 41501A/B)

0 to ± 200 (for HPSMU in 41501A/B)

0 to ± 20 (for VSU)

For the relation between the *pulse* value and the output range (not *range*), and for setting the resolution of the *pulse* value, see Table 1-12.

Icomp: Current compliance value (in A). Numeric expression. For parameter values available for *Icomp*, see Table 1-12. If you do not specify this parameter, *Icomp* is set to the previous setting.

The minimum value (lower limit) of $|Icomp|$ must be as shown in the following table.

V pulse ^a	<i>Icomp</i>
$0 < V_{p-p} < 2 \text{ V}$	$ Icomp > 2 \text{ nA}$
$2 \text{ V} < V_{p-p} < 20 \text{ V}$	$ Icomp > V_{p-p} \times 1.111 \times 10^{-6} - 2.22 \times 10^{-6}$
$20 \text{ V} < V_{p-p} $	$ Icomp > 20 \text{ } \mu\text{A}$

a. $|V_{p-p}|$ is the voltage from the *base* value to the *pulse* value.

The current compliance polarity is automatically set to the same polarity of as *pulse* and *base*, regardless of the specified *Icomp*. If *pulse*=0, the polarity of the current compliance is positive.

Table 1-12

Available Parameter Values for PV Command

Output Range	Resolution in V	<i>base</i> or <i>pulse</i> in V	Maximum <i>Icomp</i> in A	Remarks
2 V	100E-6	0 to ± 2	$\pm 100\text{E-}3$	For SMU.
			± 1	For HPSMU.
20 V	1E-3	0 to ± 20	$\pm 100\text{E-}3$	For SMU.
			± 1	For HPSMU.
			—	For VSU.
40 V	2E-3	0 to ± 40	$\pm 50\text{E-}3$	For SMU.
			$\pm 500\text{E-}3$	For HPSMU.
100 V	5E-3	0 to ± 100	$\pm 20\text{E-}3$	For SMU.
			$\pm 125\text{E-}3$	For HPSMU.
200 V	10E-3	0 to ± 200	$\pm 50\text{E-}3$	

Example Statements

```
OUTPUT @Hp4156; "PV 1, 12, 0, 5, 1E-3"
```

```
OUTPUT @Hp4156; "PV 21, 12, -3, 5"
```

PWI

The PWI command specifies the pulsed sweep current source and its parameters. This command clears the settings of the PWV, WSV and WSI commands.

The settings specified by this command are cleared by the PWV command.

Execution Conditions

Filter must be set to OFF using the FL command before the measurement trigger.

Syntax

`PWI chnum, mode, range, base, start, stop, step [, Vcomp [, Rmode]]`

If you enter the PWI command into the program memory (see the ST command), do not omit the *Vcomp* parameter. *Vcomp* is necessary when using the internal program memory.

Parameters

chnum : Channel number of the unit for the pulsed sweep current source. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6

a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

mode : Sweep mode. 1 to 4 are available. Integer expression.

1: Linear sweep (single stair)

2: Log sweep (single stair)

3: Linear sweep (double stair)

4: Log sweep (double stair)

range : Ranging type for pulsed current sweep. Integer expression.
Operation of ranging depends on the *Rmode* (ranging mode) setting.

<i>range</i>	Ranging Type ^a
0	Auto ranging
9 (only for 4156B)	10 pA limited auto ranging
10 (only for 4156B)	100 pA limited auto ranging
11	1 nA limited auto ranging
12	10 nA limited auto ranging
13	100 nA limited auto ranging
14	1 μ A limited auto ranging
15	10 μ A limited auto ranging
16	100 μ A limited auto ranging
17	1 mA limited auto ranging
18	10 mA limited auto ranging
19	100 mA limited auto ranging
20 (only for HPSMU)	1 A limited auto ranging

- a. Auto ranging uses the lowest output range (available for the unit) that covers all *base*, *start* and *stop* values. Limited auto ranging is the same, but the minimum output range is the specified range.

base : Base current (in A). Numeric expression.
0 to $\pm 100\text{E-}3$ (for 4155B/4156B and MPSMU in 41501A/B)
0 to ± 1 (for HPSMU in 41501A/B)
base, *start* and *stop* must have the same polarity.
For the relation between the *base* value and the output range (not *range*), and for setting the resolution of the *base* value, see Table 1-13.

start : Start pulse current (in A). Numeric expression.
0 to $\pm 100\text{E-}3$ (for 4155B/4156B and MPSMU in 41501A/B)
0 to ± 1 (for HPSMU in 41501A/B)
base, *start* and *stop* must have the same polarity.
For the relation between the *start* value and the output range (not *range*), and for setting the resolution of the *start* value, see Table 1-13.

4155B/4156B FLEX Commands

PWI

- stop*** : Stop pulse current (in A). Numeric expression.
0 to $\pm 100\text{E}-3$ (for 4155B/4156B and MPSMU in 41501A/B)
0 to ± 1 (for HPSMU in 41501A/B)
base, *start* and *stop* must have the same polarity.
For the relation between the *stop* value and the output range (not *range*), and for setting the resolution of the *stop* value, see Table 1-13.
- step*** : Number of steps for staircase sweep. 1 to 1001 are available. Numeric expression.
- Vcomp*** : Voltage compliance (in V). Numeric expression. For parameter values available for *Vcomp*, see Table 1-13. If you do not specify this parameter, *Vcomp* is set to the previous setting.
The voltage compliance polarity is automatically set to the same polarity as *base*, *start* and *stop*, regardless of the specified *Vcomp*. If *base*=0, *start*=0 and *stop*=0, the polarity of the voltage compliance is positive.
- Rmode*** : Ranging mode. 0 or 1. Integer expression. If you do not specify *Rmode*, ranging mode is set to 0 (fixed mode).

0: Fixed

Uses the output range, which covers all *base*, *start* and *stop* values, during the pulsed sweep.

For example, if you enter the following command, the 4155B/4156B uses the 100 mA range to force both 1 mA pulse and 100 mA pulse.

```
PWI 1,1,17,0,0.001,0.1,2,10,0
```

1: Auto

Uses the optimum output range for the output pulse.

For example, if you enter the following command, the 4155B/4156B uses 1 mA range to force 1 mA, and uses 100 mA range to force 100 mA.

```
PWI 1,1,17,0,0.001,0.1,2,10,1
```

Range changing may cause 0 A output in a moment.

Table 1-13

Available Parameter Values for PWI Command

Output Range	Resolution in A	<i>base, start or stop</i> in A	Maximum <i>Vcomp</i> in V ^a	Remarks
10 pA	10E-15	0 to $\pm 10\text{E-}12$	± 2	For 4156B.
100 pA	10E-15	0 to $\pm 100\text{E-}12$	± 2	
1 nA	100E-15	0 to $\pm 1\text{E-}9$	± 2	
10 nA	1E-12	0 to $\pm 10\text{E-}9$	± 2	
100 nA	10E-12	0 to $\pm 100\text{E-}9$	± 2	
1 μA	100E-12	0 to $\pm 1\text{E-}6$	± 2	
10 μA	1E-9	0 to $\pm 10\text{E-}6$	± 2	
100 μA	10E-9	0 to $\pm 100\text{E-}6$	± 100	For SMU.
			± 200	For HPSMU.
1 mA	100E-9	0 to $\pm 1\text{E-}3$	± 100	For SMU.
			± 200	For HPSMU.
10 mA	1E-6	0 to $\pm 10\text{E-}3$	± 100	For SMU.
			± 200	For HPSMU.
100 mA	10E-6	0 to $\pm 20\text{E-}3$	± 100	For SMU.
		to $\pm 50\text{E-}3$	± 40	
		to $\pm 100\text{E-}3$	± 20	
	100E-6	0 to $\pm 50\text{E-}3$	± 200	For HPSMU.
		to $\pm 100\text{E-}3$	± 100	
1 A	100E-6	0 to $\pm 50\text{E-}3$	± 200	
		to $\pm 125\text{E-}3$	± 100	
		to $\pm 500\text{E-}3$	± 40	
		to ± 1	± 20	

a. If *base* or *pulse* value is within 10 μA and not 0, the maximum *Vcomp* value must be 2 V even though the output range is 100 μA or large.

Example Statements

```
OUTPUT @Hp4156;"PWI 1,1,17,0,0,0.1"
```

```
OUTPUT @Hp4156;"PWI 3,2,13,0,1E-7,1E-2,100,10,1"
```

PWV

The PWV command specifies the pulsed sweep voltage source and its parameters. This command also clears the settings of the PWI, WSV and WSI commands.

The settings specified by this command are cleared by the PWI command.

Execution Conditions

Filter must be set to OFF using the FL command before the measurement trigger.

Syntax

`PWV chnum, mode, range, base, start, stop, step [, Icomp [, Rmode]]`

If you enter the PWV command into the program memory (see the ST command), do not omit the *Icomp* parameter. *Icomp* is necessary when using the internal program memory.

Parameters

chnum : Channel number of the unit for the pulsed sweep voltage source. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
21	VSU1
22	VSU2

a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

mode : Sweep mode. 1 to 4 are available. Integer expression.

- 1: Linear sweep (single stair)
- 2: Log sweep (single stair)
- 3: Linear sweep (double stair)
- 4: Log sweep (double stair)

range: Ranging type for pulsed voltage sweep. Integer expression.
Operation of ranging depends on the *Rmode* (ranging mode) setting.

<i>range</i>	Ranging Type ^a
0	Auto ranging
11 (for SMU)	2 V limited auto ranging
12	20 V limited auto ranging
13 (for SMU)	40 V limited auto ranging
14 (for SMU)	100 V limited auto ranging
15 (only for HPSMU)	200 V limited auto ranging

a. Auto ranging uses the lowest output range (available for the unit) that covers all *base*, *start* and *stop* values. Limited auto ranging is the same, but the minimum output range is the specified range.

base : Base voltage (in V). Numeric expression.
0 to ± 100 (for 4155B/4156B and MPSMU in 41501A/B)
0 to ± 200 (for HPSMU in 41501A/B)
0 to ± 20 (for VSU)
base, *start* and *stop* must have the same polarity for *log* sweep.
For the relation between the *base* value and the output range (not *range*), and for setting the resolution of the *base* value, see Table 1-14.

start : Start pulse voltage (in V). Numeric expression.
0 to ± 100 (for 4155B/4156B and MPSMU in 41501A/B)
0 to ± 200 (for HPSMU in 41501A/B)
0 to ± 20 (for VSU)
base, *start* and *stop* must have the same polarity for *log* sweep.
For the relation between the *start* value and the output range (not *range*), and for setting the resolution of the *start* value, see Table 1-14.

4155B/4156B FLEX Commands

PWW

stop : Stop pulse voltage (in V). Numeric expression.
0 to ± 100 (for 4155B/4156B and MPSMU in 41501A/B)
0 to ± 200 (for HPSMU in 41501A/B)
0 to ± 20 (for VSU)

base, *start* and *stop* must have the same polarity for *log* sweep.

For the relation between the *stop* value and the output range (not *range*), and for setting the resolution of the *stop* value, see Table 1-14.

step : Number of steps for staircase sweep. Numeric expression. 1 to 1001 are available.

Icomp : Current compliance (in A). Numeric expression. If you do not specify this parameter, *Icomp* is set to the previous setting. For parameter values available for *Icomp*, see Table 1-14.

The minimum value (lower limit) of $|Icomp|$ must be as shown in the following table.

V pulse ^a	Icomp
$0 < Vp-p < 2 \text{ V}$	$ Icomp > 2 \text{ nA}$
$2 \text{ V} < Vp-p < 20 \text{ V}$	$ Icomp > Vp-p \times 1.111 \times 10E-6 \text{ } -2.22 \times 10E-6$
$20 \text{ V} < Vp-p $	$ Icomp > 20 \text{ } \mu\text{A}$

a. $|Vp-p|$ is the voltage from the base value to the pulse value.

The current compliance polarity is automatically set to the same as the polarity of *base*, *start* and *stop*, regardless of the specified *Icomp*. If *start*=0, the polarity of current compliance is positive.

Rmode : Ranging mode. 0 or 1. Integer expression. If you do not specify *Rmode*, ranging mode is set to 0 (fixed mode).

0: Fixed

Uses the output range, which covers all *base*, *start* and *stop* values, during the pulsed sweep.

For example, if you enter the following command, the 4155B/4156B uses the 20 V range to force both 1 V pulse and 10 V pulse.

```
PWW 1,1,12,0,1,10,2,1E-3,0
```

1: Auto

Uses the optimum output range for the output pulse.

For example, if you enter the following command, the 4155B/4156B uses the 2 V range to force 1 V, and uses the 20 V range to force 10 V.

PWV 1,1,12,0,1,10,2,1E-3,1

Range changing may cause 0 V output in a moment.

Table 1-14

Available Parameter Values for PWV Command

Output Range	Resolution in V	<i>base, start or stop</i> in V	Maximum <i>Icomp</i> in A	Remarks
2 V	100E-6	0 to ± 2	$\pm 100\text{E-}3$	For SMU.
			± 1	For HPSMU.
20 V	1E-3	0 to ± 20	$\pm 100\text{E-}3$	For SMU.
			± 1	For HPSMU.
			—	For VSU.
40 V	2E-3	0 to ± 40	$\pm 50\text{E-}3$	For SMU.
			$\pm 500\text{E-}3$	For HPSMU.
100 V	5E-3	0 to ± 100	$\pm 20\text{E-}3$	For SMU.
			$\pm 125\text{E-}3$	For HPSMU.
200 V	10E-3	0 to ± 200	$\pm 50\text{E-}3$	

Example Statements

OUTPUT @Hp4156;"PWV 1,1,12,0,1,10,2"

OUTPUT @Hp4156;"PWV 3,3,14,0,1,10,100,0.1,1"

RBC

The RBC command controls the 16441A R-BOX.

Syntax

RBC *chnum, resistance*

Parameters

***chnum* :** Channel number of the R-BOX. 1 or 2. Integer expression. See below.

1: Channel 1.
2: Channel 2.

***resistance* :** Resistance for the specified channel. Integer expression. 0, 1, 2 or 3. See below.

0: 0 Ω
1: 10 k Ω
2: 100 k Ω
3: 1 M Ω

Example Statements

OUTPUT @Hp4156; "RBC 1, 3"

RCV

The RCV command enables the units that fail self-test.

If a unit fails self-test, the unit is disabled and does not respond to any command except the RCV and TST? commands. The RCV command enables the unit so that it can receive commands again. This command should only be used for servicing the 4155B/4156B. DO NOT use this command during normal operation.

If the 4155B/4156B fails self-test, contact the nearest Agilent Technologies Sales and Service Office.

Syntax

RCV *slotnum*

Parameters

slotnum : Slot number where the unit is installed. 0 to 8 are available. Integer expression.

<i>slotnum</i>	Unit
0	GNDU
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
7 ^b	VSU1, VSU2, VMU1 and VMU2
8 ^c	PGU1 and PGU2

- For SMUs in the 41501A/B Expander. If HPSMU is installed in the 41501A/B, *slotnum* for HPSMU is 6, and slot number 5 is not used to specify the HPSMU.
- All VSU1, VSU2, VMU1, and VMU2 are enabled by specifying this value.
- Both PGU1 and PGU2 are enabled by specifying this value.

Example Statements

OUTPUT @Hp4156;"RCV 1"

OUTPUT @Hp4156;"RCV 3"

4155B/4156B FLEX Commands

RD?

RD?

The RD? command reads an ASCII data in the file opened by the OPEN command. The ASCII data is read sequentially, and is put in the output buffer of the 4155B/4156B. The data may be read by using the ENTER (HP BASIC) command.

Execution Conditions

The OPEN command mode parameter is set to 0 (reading the data).

Output Response

In the control mode by US command:

[Data] <LF^EOI>

In the control mode by US42 command:

[Data] <CR/LF^EOI>

where, *Data* is the contents of the file now opened by the OPEN command. The RD? command reads the maximum 8 KB data at once. If the data is less than 8 KB, the RD? command reads the data from the head until receiving EOF. If the data is more than 8 KB, the RD? command reads the data from the head to the 8 KB.

For the HP LIF file, the RD? command reads the data written in a file by one write operation. So if the data was written by two write operations, you need to enter the RD? command twice to read whole data in the file, even if the file is less than 8 KB.

Example Statements

This example reads data from the "MDATA" file, and print the data.

```
OUTPUT @Hp4156;"SDSK 1"  
OUTPUT @Hp4156;"OPEN 'MDATA',0"  
OUTPUT @Hp4156;"RD?"  
OUTPUT @Hp4156;"CLOSE"  
ENTER @Hp4156;A$  
PRINT A$
```


RI

The RI command specifies the current measurement ranging mode for all types of measurements, except for the high-speed spot measurements. The RI command only specifies the measurement range or ranging type, and the ranging mode. Range changing occurs immediately after the trigger (that is, during the measurements).

For high-speed spot measurements, the current measurement range is set by the TI/TI? command.

Syntax

RI *chnum*, *range* [, *Rmode*]

Parameters

chnum : Channel number of the unit used to measure current. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6

- a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

range and

Rmode: Ranging type or the measurement range for the current measurements.

The *range* value is used to specify the ranging type or the measurement range by itself. If you specify the *Rmode* parameter, the ranging type or the measurement range is specified by a combination of the *range* and *Rmode* values.

For example, both an "RI 1,14" command and an "RI 1,14,1" command can be used for the same operation (to measure current by the 1 μ A limited auto ranging, using SMU1). However, an "RI 1,14,0" command is for a different operation.

If you omit *Rmode* value.

Available range value is shown below. Integer expression.

<i>range</i>	Ranging type ^a
0	Auto ranging
9 (only for 4156B)	10 pA limited auto ranging
10 (only for 4156B)	100 pA limited auto ranging
11	1 nA limited auto ranging
12	10 nA limited auto ranging
13	100 nA limited auto ranging
14	1 μ A limited auto ranging
15	10 μ A limited auto ranging
16	100 μ A limited auto ranging
17	1 mA limited auto ranging
18	10 mA limited auto ranging
19	100 mA limited auto ranging
20 (only for HPSMU)	1 A limited auto ranging
–9 (only for 4156B)	10 pA range fixed
–10 (only for 4156B)	100 pA range fixed
–11	1 nA range fixed
–12	10 nA range fixed
–13	100 nA range fixed
–14	1 μ A range fixed
–15	10 μ A range fixed
–16	100 μ A range fixed
–17	1 mA range fixed
–18	10 mA range fixed
–19	100 mA range fixed
–20 (only for HPSMU)	1 A range fixed

- a. Auto ranging uses the lowest measurement range (available for the unit) that covers the measurement value. Limited auto ranging is the same, but the minimum measurement range is the specified range. For example, 10 μ A limited auto ranging uses the 10 μ A range to measure 1 nA, and uses the 100 mA range to measure 50 mA.

NOTE

For the following measurement mode, use the following table instead of the table above.

- 1ch pulsed spot measurements with "keep pulse width"
- Pulsed sweep measurements with "keep pulse width"
- Staircase sweep with pulsed bias measurements with "keep pulse width"
- Sampling measurement with the sampling interval less than 2 msec (see the MT command)

where, "keep pulse width" means the measurement setup which the PT command *priority* parameter is set to 0 or default setting (see the PT command).

<i>range</i>	Ranging type
0 (for SMU)	100mA range fixed
0 (for HPSMU)	1 A range fixed
9, -9 (only for 4156B)	10 pA range fixed
10, -10 (only for 4156B)	100 pA range fixed
11, -11	1 nA range fixed
12, -12	10 nA range fixed
13, -13	100 nA range fixed
14, -14	1 μ A range fixed
15, -15	10 μ A range fixed
16, -16	100 μ A range fixed
17, -17	1 mA range fixed
18, -18	10 mA range fixed
19, -19	100 mA range fixed
20, -20 (only for HPSMU)	1 A range fixed

If you specify *Rmode* value.

The following ranging mode is available:

- Auto ranging mode (*Rmode*=0)
- Limited auto ranging mode (*Rmode*=1)
- Fixed range mode (*Rmode*=2)
- Compliance range mode (*Rmode*=3)

NOTE

For the following measurement mode, only the fixed range mode (*Rmode*=2) and the compliance range mode (*Rmode*=3) are available. If you set *Rmode*=0 or 1, the RI command works as same as when *Rmode*=3.

- 1ch pulsed spot measurements with "keep pulse width"
- Pulsed sweep measurements with "keep pulse width"
- Staircase sweep with pulsed bias measurements with "keep pulse width"
- Sampling measurement with the sampling interval less than 2 msec (see the MT command)

where, "keep pulse width" means the measurement setup which the PT command *priority* parameter is set to 0 or default setting (see the PT command).

- **To use auto ranging (*Rmode*=0):**

Measurement unit uses the lowest measurement range that covers the measurement value. The minimum range depends on the unit you use.

Set the parameters as follows:

range : One of 9 to 20. Used as a placeholder only, the value is ignored.

***Rmode* :** 0

- **To use compliance range (*Rmode*=3):**

Measurement unit uses the lowest measurement range that covers the current compliance value or the current output value set by the source output command you use, such as DV, DI, WV, WI and so on.

Set the parameters as follows:

range : One of 9 to 20. Used as a placeholder only, the value is ignored.

***Rmode* :** 3

- **To use limited auto ranging (*Rmode*=1):**

Measurement unit uses the lowest measurement range that covers the measurement value. The minimum allowed range is the range specified by the *range* value.

Set the parameters as follows:

range : One of 9 to 20. See below.

Rmode : 1

<i>range</i>	Ranging type
9 (only for 4156B)	10 pA limited auto ranging
10 (only for 4156B)	100 pA limited auto ranging
11	1 nA limited auto ranging
12	10 nA limited auto ranging
13	100 nA limited auto ranging
14	1 μ A limited auto ranging
15	10 μ A limited auto ranging
16	100 μ A limited auto ranging
17	1 mA limited auto ranging
18	10 mA limited auto ranging
19	100 mA limited auto ranging
20 (only for HPSMU)	1 A limited auto ranging

4155B/4156B FLEX Commands
RI

- To use fixed range (*Rmode=2*):

Measurement unit uses the range specified by the *range* value.

Set the parameters as follows:

range : One of 9 to 20. See below.

Rmode : 2

<i>range</i>	Measurement range
9 (only for 4156B)	10 pA range fixed
10 (only for 4156B)	100 pA range fixed
11	1 nA range fixed
12	10 nA range fixed
13	100 nA range fixed
14	1 μ A range fixed
15	10 μ A range fixed
16	100 μ A range fixed
17	1 mA range fixed
18	10 mA range fixed
19	100 mA range fixed
20 (only for HPSMU)	1 A range fixed

**Example
Statements**

OUTPUT @Hp4156;"RI 1,0"
OUTPUT @Hp4156;"RI 3,14,1"

RMD?

The RMD? command puts the measurement data into the 4155B/4156B output data buffer.

Read the data before the 4155B/4156B output buffer becomes full up. The output buffer can store approximately 1500 measurement data.

For the high-speed spot measurements by the TI? or TV? command, and for the US42 command mode with *level*=16, the RMD? command is not required after the measurement execution command.

For the data output format, refer to “Data Output Format” on page 1-11.

Syntax

RMD? [*count*]

Parameters

count : Number of data to read. Integer expression. Available number is 0 to 20002. *count* must be the number of measurement data or less.

If *count* is more than the number of measurement data, the 4155B/4156B goes to the wait state after putting all data into the output buffer. To release this wait state, send the device clear (ex: CLEAR command of HP BASIC) to the 4155B/4156B. Then the data will be cleared. If you do not specify *count* or if you specify *count*=0, the RMD? command reads the data until EOD (end of data). If you set *count*=1500 or more, read the measurement data immediately. The output data buffer will become full up.

Example Statements

```
OUTPUT @Hp4156;"XE"
OUTPUT @Hp4156;"RMD? 1"
ENTER @Hp4156;A$
```

If the output data is:

```
1.1111,2.2222,3.3333<terminator>
```

A\$ is:

```
1.1111,
```

4155B/4156B FLEX Commands

*RST

*RST

The *RST command resets the 4155B/4156B to the initial settings, and clears the zero offset data. This command does not clear the self calibration data.

Initial settings by the *RST command is shown below:

Item	with US command	with US42 command
Output Switch	ON for all units	GNDU, VMU : ON SMU, VSU, PGU : OFF
Filter (SMUs)	ON	
SMU Measurement Mode	Compliance side measurement mode (see CMM)	
SMU Measurement Range	Auto for spot and staircase sweep. Compliance range for others.	
VMU Operation Mode	Grounded measurement mode	
VMU Measurement Range	Auto for spot and staircase sweep. 20 V range for others.	
Source Parameters	Cleared for both sweep source and pulse source	
Hold Time , Delay Time	0 sec, 0 sec	
Pulse Width, Period	0.001 sec, 0.01 sec	
Averaging Mode, Number	Auto, 1	
Auto Calibration	ON	
Auto Abort Function	OFF	
Program Memory	Not cleared. Cleared by power on.	
Trigger	XE, TV, TI, and GET (Group Execute Trigger)	
Output Data Format	ASCII with Header data	
Terminator for Output Data	<LF^EOI>	<CR/LF^EOI>
Output Data Buffer	Cleared	
Error Register	Cleared	
Status Byte	Only bit 6 is enabled.	

Syntax

*RST

Remarks

If you want to reset units while a sweep measurement is being performed, you must first send the AB command, then the *RST command.

Device Clear (CLEAR statement for HP BASIC) resets the 4155B/4156B more directly than this command, bypassing the input buffer.

Example Statement

```
OUTPUT @Hp4156; "*RST"
```


RU

The RU command sequentially executes the 4155B/4156B internal memory programs.

Before executing the internal memory program, close the Interlock circuit. If you do not close the interlock circuit, an error occurred and the measurement is aborted.

Execution Conditions

The specified programs have been stored by using the ST and END commands, from the start program number through the stop program number.

Syntax

`RU start, stop`

Parameters

start : Start program number. 1 to 255 are available. Integer expression.

stop : Stop program number. 1 to 255 are available. Integer expression.

where, *stop* value must be greater than or equal to the *start* value.

Remarks

The 4155B/4156B does not detect errors during the internal memory program execution.

Example Statements

OUTPUT @Hp4156; "RU 1, 10"

OUTPUT @Hp4156; "RU 3, 6"

RV

The RV command specifies the voltage measurement ranging mode for all types of voltage measurements, except for high-speed spot measurements. The RV command only specifies the measurement range or ranging type, and the ranging mode. Range changing occurs immediately after the trigger (that is, during the measurements).

For high-speed spot measurements, the voltage measurement range is set by the TV/TV? command.

Syntax

RV *chnum*, *range* [, *Rmode*]

Parameters

chnum : Channel number of the unit used to measure voltage. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
23	VMU1
24	VMU2

- a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

range and

Rmode: Ranging type or the measurement range for the voltage measurements.

The *range* value is used to specify the ranging type or the measurement range by itself. If you specify the *Rmode* parameter, the ranging type or the measurement range is specified by the combination of the *range* and *Rmode* values. In this case, the meaning of *range* is changed as described in the next table.

For example, both an "RV 1,14" command and an "RV 1,14,1" command can be used for the same operation (to measure voltage by the 100 V limited auto ranging using SMU1). The "RI 1,14,0" command is for different operations.

If you omit *Rmode* value.

Available range value is shown below: Integer expression.

<i>range</i>	Ranging type ^a
0	Auto ranging
10, -10 (only for VMU in differential mode)	0.2 V limited auto ranging
11, -11	2 V limited auto ranging
12, -12 (for SMU and VMU in grounded mode)	20 V limited auto ranging
13, -13 (for SMU)	40 V limited auto ranging
14, -14 (for SMU)	100 V limited auto ranging
15, -15 (only for HPSMU)	200 V limited auto ranging

- a. Auto ranging uses the lowest measurement range (available for the unit) that covers the measurement value. Limited auto ranging is the same, but the minimum measurement range is the specified range. For example, 20 V limited auto ranging uses the 20 V range to measure 1 V, and uses the 40 V range to measure 30 V.

NOTE

For the following measurement mode, see the following table instead of the table above.

1. 1ch pulsed spot measurements with "keep pulse width"
2. Pulsed sweep measurements with "keep pulse width"
3. Staircase sweep with pulsed bias measurements with "keep pulse width"
4. Sampling measurement with the sampling interval less than 2 msec (see the MT command)

where, "keep pulse width" means the measurement setup which the PT command *priority* parameter is set to 0 or default setting (see the PT command).

<i>range</i>	Ranging type
0 (for SMU)	100 V range fixed
0 (for HPSMU)	200 V range fixed
10, -10 (only for VMU in differential mode)	0.2 V range fixed
11, -11	2 V range fixed
12, -12 (for SMU and VMU in grounded mode)	20 V range fixed
13, -13 (for SMU)	40 V range fixed
14, -14 (for SMU)	100 V range fixed
15, -15 (only for HPSMU)	200 V range fixed

If you specify *Rmode* value.

The following ranging mode is available:

- Auto ranging mode (*Rmode*=0)
- Limited auto ranging mode (*Rmode*=1)
- Fixed range mode (*Rmode*=2)
- Compliance range mode (*Rmode*=3)

NOTE

For the following measurement mode, only the fixed range mode and the compliance range mode (*Rmode*=2 or 3) are available. If you enter *Rmode*=0 or 1, the RI command works as same as when *Rmode*=3.

1. 1ch pulsed spot measurements with "keep pulse width"
2. Pulsed sweep measurements with "keep pulse width"
3. Staircase sweep with pulsed bias measurements with "keep pulse width"
4. Sampling measurement with the sampling interval less than 2 msec (see the MT command)

where, "keep pulse width" means the measurement setup which the PT command *priority* parameter is set to 0 or default setting (see the PT command).

- **To use auto ranging (*Rmode*=0):**

The measurement unit uses the lowest measurement range that covers the measurement value. The minimum range depends on the unit you use.

Set the parameters as follows:

range : One of 10 to 15. Used as a placeholder only, the value is ignored.

Rmode : 0

- **To use limited auto ranging (*Rmode*=1):**

The measurement unit uses the lowest measurement range that covers the measurement value. The minimum allowed range is the range specified by the *range* value.

Set the parameters as follows:

range : One of 10 to 15. See below.

Rmode : 1

<i>range</i>	Ranging type
10 (only for VMU in differential mode)	0.2 V limited auto ranging
11	2 V limited auto ranging
12 (for SMU and VMU in grounded mode)	20 V limited auto ranging
13 (for SMU)	40 V limited auto ranging
14 (for SMU)	100 V limited auto ranging
15 (only for HPSMU)	200 V limited auto ranging

4155B/4156B FLEX Commands

RV

- **To use fixed range (*Rmode*=2):**

The measurement unit uses the range specified by the *range* value.

Set the parameters as follows:

range : One of 10 to 15. See below.

Rmode : 2

<i>range</i>	Measurement range
10 (only for VMU in differential mode)	0.2 V range fixed
11	2 V range fixed
12 (for SMU and VMU in grounded mode)	20 V range fixed
13 (for SMU)	40 V range fixed
14 (for SMU)	100 V range fixed
15 (only for HPSMU)	200 V range fixed

- **To use compliance range (*Rmode*=3):**

The measurement unit uses the lowest measurement range that covers the voltage compliance value or the voltage output value set by the source output command you use, such as DI, DV, WI, WV and so on.

Set the parameters as follows:

range : One of 10 to 15. Used as a placeholder only, the value is ignored.

Rmode : 3

For VMU, the measurement range is fixed to 20 V in the grounded mode, and fixed to 2 V in the differential mode.

Example Statements

```
OUTPUT @Hp4156;"RV 23,10"
```

```
OUTPUT @Hp4156;"RV 1,12,1"
```

RZ

The RZ command returns the unit to the settings that are stored by the DZ command and clears the stored unit settings.

The DZ command stores the unit settings (V/I output values, V/I output ranges, and V/I compliance values), then sets the unit to Zero Output.

Execution Conditions

The DZ command has been executed for the specified unit. The US, US42, RZ, CL, CA, *TST?, *RST or Device Clear command is not executed for the specified unit.

Syntax

RZ [*chnum*[, *chnum*...[, *chnum*]...]

Parameters

chnum : Channel number. Integer expression.

1: SMU1

2: SMU2

3: SMU3

4: SMU4

5: SMU5. For HPSMU, *chnum* 5 is not used.

6: SMU6. For HPSMU, *chnum* is 6.

21: VSU1

22: VSU2

27: PGU1

28: PGU2

If you do not specify this parameter, this command returns the settings for all units that satisfy the conditions described in "Execution Conditions" above, in the order that the DZ command stored them.

You can specify up to 10 channels at once using the RZ command. The 4155B/4156B returns the stored unit settings in the order specified.

Example Statements

OUTPUT @Hp4156;"RZ"

OUTPUT @Hp4156;"RZ 1,2,3,21,22"

SCR

The SCR command scratches the specified program from the internal program memory of the 4155B/4156B.

Syntax

SCR [*prog No.*]

Parameters

prog No. : Program number. 1 to 255 are available. Integer expression. If you do not specify this parameter, this command scratches all programs stored in the program memory.

Example Statements

OUTPUT @Hp4156;"SCR"

OUTPUT @Hp4156;"SCR 5,10"

SDSK

The SDSK command selects the mass storage device used to get or save data, such as the measurement data or setup data.

Execution Conditions

Network file system is registered on the NETWORK DISK SETUP table of the SYSTEM: MISCELLANEOUS screen.

Syntax

SDSK *disk*

Parameters

disk : Identification to specify the mass storage device. 0, 1, 2, 3 or 4. Integer expression.

disk value is relative to the position of softkeys available for the DISK field of the SYSTEM: FILER screen.

Softkeys for DISK		Description	<i>disk</i>
Position	Label		
top	FLOPPY	Internal flexible disk drive.	0
second from top	–	Network file system.	1
third from top	–	Network file system.	2
4th from top	–	Network file system.	3
5th from top	–	Network file system.	4

Softkey label of the network file system can be defined by using the NETWORK DISK SETUP table of the SYSTEM: MISCELLANEOUS screen.

Example Statements

OUTPUT @Hp4156; "SDSK 2"

SIT

The SIT command changes the integration time settings, SHORT or LONG.

Syntax

`SIT type, time`

Parameters

type : 1, 2 or 3. Integer expression. See table below.
time : Integration time. Numeric expression. See table below.

<i>type</i>		<i>time</i> in sec
Value	Description	
1	SHORT	80E-6 to 10.16E-3
2	–	–
3	LONG	16.7E-3 to 2

For the integration time `Long`, SIT command translates the input *time* value to the PLC (Power Line Cycles) value. If you enter "SIT 3,2" command to the 4155B/4156B at 50 Hz line frequency site (1 PLC is 0.02 sec), the 4155B/4156B sets the PLC value to 100 (= 2 sec / 0.02 sec) automatically.

Example Statements

`OUTPUT @Hp4156; "SIT 1, 80E-6"`
`OUTPUT @Hp4156; "SIT 3, 1"`

SLI

The SLI command selects the integration time (SHORT, MED or LONG).

This command setting is ignored by the following measurement mode.

1. 1ch pulsed spot measurements with "keep pulse width"
2. Pulsed sweep measurements with "keep pulse width"
3. Staircase sweep with pulsed bias measurements with "keep pulse width"
4. Sampling measurements with the sampling interval less than 2 msec (see the MT command)

where, "keep pulse width" means the measurement setup which the PT command *priority* parameter is set to 0 or default setting (see the PT command).

Syntax

SLI *type*

Parameters

type : 1, 2 or 3. Integer expression. See below.

1: Short (SHORT)

2: Medium (MED)

3: Long (LONG)

Example Statements

OUTPUT @Hp4156; "SLI 1"

SOC

The SOC command enables or disables the zero offset cancel function for the SMU low current measurements and the VMU differential voltage measurements.

Execution Conditions

Zero offset data is already measured by the GOC command. If you do not measure the zero offset data before executing the SOC command, the previous zero offset data or 0 (zero) is used.

For SMU, the measurement mode must be set to the current measurement mode.

For VMU, the measurement mode must be set to the differential voltage measurement mode.

Syntax

`SOC chnum, status`

Parameters

chnum : Channel number of the unit to set the zero offset cancel function. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
23 ^b	VMU1
24 ^b	VMU2

a. For SMUs in the 41501A/B Expander. If HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used to specify the HPSMU.

b. Differential voltage measurements use both VMU1 and VMU2. Specify 23 or 24.

status : ON/OFF status of the zero offset cancel function. 0 or 1. Integer expression. Zero offset cancel function is initially set to OFF.

0: Zero offset function OFF.

1: Zero offset function ON.

Example Statements

OUTPUT @Hp4156; "SOC 1, 1"

SPG

The SPG command specifies the PGU and its parameters.

To force the output, use the SRP command. To stop the output, use the SPP command or the DV command. If you use two PGUs, the SRP, SPP and DV commands are effective for both PGUs.

Syntax

`SPG chnum, mode [, base [, pulse, Td, Tw, Tl, Tt, Tp, Pc]]`

Parameters

- chnum* :** Channel number of PGU 27 or 28. Integer expression.
27: PGU1
28: PGU2
- mode* :** Output mode. 0, 1 or 2. Integer expression.
0: Clears the settings of the PGU specified by *chnum*.
1: dc voltage output. Set *base*.
2: Pulse voltage output. Set all parameters.
- base* :** Base voltage (in V). For *mode* = 1 or 2.
When *mode*=1, this value is set to the output value.
0 to ± 40 V. Numeric expression.
Resolution: 4 mV (for 0 to ± 20 V), 8 mV (for ± 20 to ± 40 V).
- pulse* :** Pulse voltage (in V). Only for pulse output.
0 to ± 40 V. Numeric expression.
Resolution: 4 mV (for 0 to ± 20 V), 8 mV (for ± 20 to ± 40 V).

4155B/4156B FLEX Commands

SPG

- Td*** : Delay time (in seconds). Only for pulse output.
0 to 10 sec. Numeric expression. See Table 1-15.
Restrictions: $Td < Tp$
- Tw*** : Pulse width (in seconds). Only for pulse output.
1 μ sec to 9.99 sec. Numeric expression. See Table 1-15.
Restrictions: $Tw < Tp$
- Tl*** : Leading edge transition time (in seconds). Only for pulse output.
100 nsec to 10 msec. Numeric expression. See Table 1-16.
Restrictions: $Tl < Tw \times 0.8$
- Tt*** : Trailing edge transition time (in seconds). Only for pulse output.
100 nsec to 10 msec. Numeric expression. See Table 1-16.
Restrictions: $Tt < (Tp - Tw) \times 0.8$
- Tp*** : Pulse period (in seconds). Only for pulse output.
2 μ sec to 10 sec. Numeric expression. See Table 1-15.
Tp parameter setting is effective for both PGU1 and PGU2. If you use both PGUs, the pulse period setting must be the same. Check the pulse period setting value of the SPG, MP and STT commands in your program.
- Pc*** : Number of pulses. Only for pulse output.
1 to 65535, or 0. Numeric expression.
If you set *Pc* to 0, the 4155B/4156B forces pulse voltage in free run mode (continues pulse output).
count parameter setting is effective for both PGU1 and PGU2. If you use both PGUs, the pulse count setting must be the same. Check the pulse count setting value of the SPG, MP and STT commands in your program.
If you enter the SPG command into the internal program memory, do not set *Pc*=0. Free run pulse output is not available.

Table 1-15 Ranges of Pulse Period, Pulse Width and Delay Time

Range ^a	<i>Tp</i> in sec	<i>Tw</i> in sec	<i>Td</i> in sec	Resolution in sec
1	2E-6 to 100E-6	1E-6 to 99.9E-6	0 to 100E-6	0.1E-6
2	100E-6 to 1E-3	1E-6 to 999E-6	0 to 1E-3	1E-6
3	1E-3 to 10E-3	10E-6 to 9.99E-3	0 to 10E-3	10E-6
4	10E-3 to 100E-3	100E-6 to 99.9E-3	0 to 100E-3	100E-6
5	100E-3 to 1	1E-3 to 999E-3	0 to 1	1E-3
6	1 to 10	10E-3 to 9.99	0 to 10	10E-3

a. Settings of *Tp*, *Tw* and *Td* for a PGU must be in the same range. If you use two PGUs, these three parameters must be set in the same range for both PGUs.

Table 1-16 Leading and Trailing Edge Transition Time

Range ^a	<i>Tl</i> or <i>Tt</i> in sec	Resolution in sec
1	100E-9 to 1E-6	1E-9
2	500E-9 to 10E-6	10E-9
3	5E-6 to 100E-6	100E-9
4	50E-6 to 1E-3	1E-6
5	500E-6 to 10E-3	10E-6

a. Leading time and trailing time for a PGU must be in the same range.

Example Statements

```
OUTPUT @Hp4156;"SPG 28,0"
OUTPUT @Hp4156;"SPG 28,1,5"
OUTPUT @Hp4156;"SPG 28,2,0,5,0,5E-6,1E-6,1E-6,1E-5,1000"
```

SPL

The SPL command specifies the data to print, and spools the data.

This command requires a temporary file on the network file system specified by the SDSK command to spool the data. If a temporary file is not opened, this command creates a temporary file and names it with the IP address of the 4155B/4156B. The temporary file is deleted by the PRN command which executes print-out.

**Execution
Conditions**

The SDSK command specifies the network file system.

The SPR command specifies the remote printer.

Syntax

`SPL data`

Parameters

data : Data to print. Characters or numeric data (ASCII).

**Example
Statements**

```
OUTPUT @Hp4156;"SPL 'TestResults' "
```

```
OUTPUT @Hp4156;"SPL";A$
```


SPP

The SPP command stops the PGU pulse output started by the SRP command. The PGU output goes to the *base* value set by the SPG command. If you use two PGUs, this command stops both PGU outputs.

Syntax

```
SPP
```

Example Statements

```
OUTPUT @Hp4156;"SPP"
```

SPR

The SPR command selects the remote printer used to print the data.

**Execution
Conditions**

Remote printer is registered on the NETWORK PRINTER SETUP table of the SYSTEM: MISCELLANEOUS screen.

Syntax

SPR printer

Parameters

printer : Identification for the printer. 1, 2, 3 or 4. Integer expression.
printer value is relative to the position of softkeys available for the DESTINATION field of the SYSTEM: PRINT/PLOT SETUP screen.

Softkeys for DESTINATION		Description	<i>printer</i>
Position	Label		
top	GPIB	Printer connected to GP-IB	–
second from top	PARAL- LEL	Printer connected to parallel interface	–
third from top	–	Remote printer	1
4th from top	–	Remote printer	2
5th from top	–	Remote printer	3
6th from top	–	Remote printer	4

Softkey label of the remote printer can be defined by using the NETWORK PRINTER SETUP table of the SYSTEM: MISCELLANEOUS screen.

**Example
Statements**

OUTPUT @Hp4156;"SPR 1"

***SRE**

The *SRE command enables the specified bits of the Status Byte Register for SRQ (service requests), and masks (disables) the bits that are not specified.

Syntax

*SRE *bit*

Parameters

bit : 0 to 255 are available. Integer expression. To specify *bit*, use the decimal value of the bits as shown in the following tables.

For example, to enable Bit 0, 4, and 7 for the SRQ, the *bit* value must be 145 (1 + 16 + 128). If *bit*=0, or if you do not specify a *bit* value, all bits, except for Bit 6, will be masked (disabled for the SRQ).

In US command mode: You cannot mask bit 6.

Decimal Value	Bit Number	Description
1	Bit 0	Emergency Status
2	Bit 1	Measurement/Stress Status
4	Bit 2	not used
8	Bit 3	Questionable Status
16	Bit 4	MAV (Message Available summary-message)
32	Bit 5	ESB (Event Status Bit)
64	Bit 6	Request Service (RQS) Message
128	Bit 7	not used

In US42 command mode: You cannot mask bit 6.

Decimal Value	Bit Number	Description
1	Bit 0	Data Ready
2	Bit 1	Wait
4	Bit 2	not used
8	Bit 3	Interlock Open
16	Bit 4	Set Ready
32	Bit 5	Error
64	Bit 6	RQS
128	Bit 7	Shut Down

Example Statements

```
OUTPUT @Hp4156; "*SRE 6"
```

```
OUTPUT @Hp4156; "*SRE 128"
```

4155B/4156B FLEX Commands

*SRE?

*SRE?

The *SRE? query command requests information about which bits of the Status Byte Register are enabled for the SRQ (service requests), and stores the results in the output data buffer (query buffer).

The output data is always stored in the query buffer in ASCII format, regardless of the FMT command.

Syntax

*SRE?

Query Response

In US command mode: *enabled bits*<LF^EOI>

enabled bits are represented by the corresponding decimal values shown below.

Decimal Value	Bit Number	Description
1	Bit 0	Emergency Status
2	Bit 1	Measurement/Stress Status
4	Bit 2	not used
8	Bit 3	Questionable Status
16	Bit 4	MAV (Message Available summary-message)
32	Bit 5	ESB (Event Status Bit)
64	Bit 6	Request Service (RQS) Message
128	Bit 7	not used

In US42 command mode: *enabled bits*<CR/LF^EOI>

enabled bits are represented by the corresponding decimal values shown below.

Decimal Value	Bit Number	Description
1	Bit 0	Data Ready
2	Bit 1	Wait
4	Bit 2	not used
8	Bit 3	Interlock Open
16	Bit 4	Set Ready
32	Bit 5	Error
64	Bit 6	RQS
128	Bit 7	Shut Down

For example, if Bit 0, 3, and 4 are enabled for the SRQ, 25 (1 + 8 + 16) will be returned. If all bits, except for Bit 6, are masked, *enabled bits* will be 0.

Example Statements

```
OUTPUT @Hp4156;"*SRE?"
ENTER @Hp4156;A
```

SRP

SRP command forces the PGU output (dc voltage or pulse voltage) set by the SPG command, immediately. If you use two PGUs, this command starts to force both PGU outputs.

To stop the PGU pulse output, use the SPP command or the DV command. The SPP command sets the PGU output to the *base* value set by the SPG command. And the DV command sets the PGU output to the output value specified by the DV command. For example, the following HP BASIC command sets the PGU output to 0 V.

```
OUTPUT @Hp4156;"DV 27,0,0"
```

To stop the PGU dc voltage output, use the DV command.

Execution Conditions

The SPG command specifies the settings of the PGU.

Syntax

SRP

Example Statements

```
OUTPUT @Hp4156;"SRP"
```

SSP

The SSP command controls the 16440A SMU/Pulse Generator Selector.

Syntax

SSP port, status

Parameters

port : Output port number. 0, 1, 2 or 3. Integer expression.

<i>port</i>	Description
0	Output channel 1 of the primary 16440A.
1	Output channel 2 of the primary 16440A.
2	Output channel 1 of the secondary 16440A.
3	Output channel 2 of the secondary 16440A.

status : Connection status of the specified port. 0, 1, 2 or 3. Integer expression.

<i>status</i>	Description
0	No input is connected to output.
1	Connects SMU input to output.
2	Connects PGU input to output.
3	Disconnects PGU input using the semiconductor relay. No input is connected to output.

Example Statements

```
OUTPUT @Hp4156;"SSP 0,0"
```

```
OUTPUT @Hp4156;"SSP 1,3"
```

ST

The ST command is used with the END command to store a program in the internal program memory of the 4155B/4156B. Maximum 255 programs can be stored (total 100 KB). The ST command indicates the start of the program, and assigns the program number. If the assigned program number already exists, the 4155B/4156B deletes the old program, and stores the new one.

The END command indicates the end of the program. If the END command is not included, the 4155B/4156B stores the commands until the program memory is full.

Use the DO or RU command to execute stored programs. Before executing the internal memory program, close the Interlock circuit. If you do not close the interlock circuit, an error occurred and the measurement is aborted.

Internal program memory is available when the 4155B/4156B is in the FLEX command control mode. The internal memory programs are deleted by the US or US42 command execution.

Syntax

```
ST prog No.; command[; command... [; command] ...]
END
```

or

```
ST prog No.
[command]
[command]
:
:
[command]
END
```

Parameters

***prog No.* :** Program number. 1 to 255. Integer expression.

***command* :** Command stored in the internal program memory. Specify commands according to normal syntax – no special syntax is necessary.

Note that the following commands cannot be stored in program memory:

AB	ACH	CM	*CAL?	*CLS?
CA	CLOSE	ERR?	*ESE?	
DO	END	LST?	*LRN?	
*IDN?	LOP?	*OPC (?)	*OPT?	PRN
NUB?	OPEN	RMD?	RU	*RST
RCV	RD?	SPL	SPR	ST
SCR	SDSK	:SYST:ERR?		
*SRE?	*STB?	US	US42	
*TST?	UNT?	*WAI		
WNU?	WR			

Remarks

The internal memory program should be the complete program which makes the measurement setup completely, or executes the measurements with no error.

4155B/4156B FLEX Commands

ST

If you use the internal program memory to make a few changes in the present measurement setup, grasp the present setup, decide the next setup carefully, and enter the FLEX commands into the program memory. If there is mismatch in the changes with the present setup, you cannot execute the measurement in the desirable setup because of no error check for the commands in the program memory.

Create a complete program at first. And confirm that the program does not cause any error during the program execution. Then enter the FLEX commands into the program memory. The commands must make the complete measurement setup, or execute the measurements with no error, or make changes consistently with the present setup.

Example Statements

Example 1:

```
OUTPUT @Hp4156;"ST 1;CN 1;DV 1,0,5,1E-4;TI? 1,0;CL 1"  
OUTPUT @Hp4156;"END"
```

Example 2:

```
OUTPUT @Hp4156;"ST 1"  
OUTPUT @Hp4156;"CN 1"  
OUTPUT @Hp4156;"DV 1,0,5,1E-4"  
OUTPUT @Hp4156;"TI? 1,0"  
OUTPUT @Hp4156;"CL 1"  
OUTPUT @Hp4156;"END"
```


*STB?

The *STB? query command stores the decimal representation of the status byte in the output data buffer (query buffer).

The output data is always stored in the query buffer in ASCII format, regardless of the FMT command.

The *STB? command is functionally identical to the SPOLL command of BASIC, however this command does not clear the status byte (the SPOLL command clears the status byte).

Syntax

*STB?

Query Response

In US command mode: *status byte*<LF^EOI>

Decimal Value	Bit Number	Description
1	Bit 0	Emergency Status
2	Bit 1	Measurement/Stress Status
4	Bit 2	not used
8	Bit 3	Questionable Status
16	Bit 4	MAV (Message Available summary-message)
32	Bit 5	ESB (Event Status Bit)
64	Bit 6	Request Service (RQS) Message
128	Bit 7	not used

In US42 command mode: *status byte*<CR/LF^EOI>

Decimal Value	Bit Number	Description
1	Bit 0	Data Ready
2	Bit 1	Wait
4	Bit 2	not used
8	Bit 3	Interlock Open
16	Bit 4	Set Ready
32	Bit 5	Error
64	Bit 6	RQS
128	Bit 7	Shut Down

where, the *status byte* value is a decimal number that indicates which bits of the status byte are ON ("1"). Bits of the status byte indicate conditions that may require attention. For example, if *status byte* is 40 (8 + 32), then Bit 3 and 5 are set to 1.

Example Statements

```
OUTPUT @Hp4156;"*STB?"
ENTER @Hp4156;A
```

STC

The STC command clears the settings of the specified stress source.

Syntax

```
STC [source[, source[, source[, source]]]
```

Parameters

***source* :** Reference number of the stress source.

0 to 3 are available. Integer expression.

source value is the value (0, 1, 2 or 3) you assigned for the stress source using the STI, STV or STP command. Enter the *source* value for the stress source you want to clear the settings.

If you do not specify *source* parameter, STC command clears the settings for the all stress sources (4 sources).

Example Statements

```
OUTPUT @Hp4156;"STC"
```

```
OUTPUT @Hp4156;"STC 0"
```

STG

The STG command sets the trigger function using the Ext Trig In/Out terminals on the rear panel of the 4155B/4156B.

Syntax

STG mode, state, polarity

Parameter

mode : Trigger mode. 0 or 1. Integer expression.

0: Trigger input.

1: Trigger output.

In the trigger input mode, the 4155B/4156B waits for the edge trigger from the external instrument, and cannot output the trigger.

When the trigger mode is set to the output mode, the 4155B/4156B outputs gate triggers in the stress force state, and outputs edge triggers in other measurement states. In this case, the 4155B/4156B cannot receive the external trigger signal.

state : Trigger function status. 0 or 1. Integer expression.

0: Disables trigger function. (initial setting)

1: Enables trigger function.

polarity : Polarity of the trigger. 0 or 1. Integer expression.

0: Positive trigger. (initial setting)

1: Negative trigger.

Example Statements

OUTPUT @Hp4156; "STG 0, 1, 0"

OUTPUT @Hp4156; "STG 1, 1, 0"

STI

The STI command specifies the dc stress current source (SMU) and its parameters. The XE command triggers the stress force. To stop the stress force, use the AB command.

The 4155B/4156B allows to use maximum four stress sources (specified by the STI, STV and/or STP command) for a measurement.

Syntax

STI source, chnum, range, base, stress[, Vcomp]

If you enter the STI command into the program memory (see the ST command), do not omit the *Vcomp* parameter. *Vcomp* is necessary when using the internal program memory.

Parameters

source : Reference number for the stress source. 0 to 3 are available. Integer expression.

Enter 0, 1, 2, or 3 to assign the reference number to the stress source.

If you specify multiple stress sources for a measurement, independent *source* value should be defined for the stress setup command (STI, STV or STP). If a *source* value is defined for multiple stress setup commands, the last command is effective when executing the measurement.

chnum : Channel number of the unit that will force the stress current. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6

a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

range : Stress output range. Integer expression.

<i>range</i>	Ranging Type ^a
0	Auto ranging
9 (only for 4156B)	10 pA limited auto ranging
10 (only for 4156B)	100 pA limited auto ranging
11	1 nA limited auto ranging
12	10 nA limited auto ranging
13	100 nA limited auto ranging
14	1 μ A limited auto ranging
15	10 μ A limited auto ranging
16	100 μ A limited auto ranging
17	1 mA limited auto ranging
18	10 mA limited auto ranging
19	100 mA limited auto ranging
20 (only for HPSMU)	1 A limited auto ranging

- a. Auto ranging uses the lowest output range (available for the unit) that covers both *base* and *stress* value. Limited auto ranging is same, but the minimum output range is the specified range. For example, 10 μ A limited auto ranging uses the 10 μ A range to force 1 nA, and uses the 100 mA range to force 50 mA.

4155B/4156B FLEX Commands

STI

- base* :** Base current (in A). Numeric expression.
0 to $\pm 100\text{E-}3$ (for 4155B/4156B and MPSMU in 41501A/B)
0 to ± 1 (for HPSMU in 41501A/B)
Set the source unit output values which has been forced before the XE command. This minimizes the spike.
For the relation between the *base* value and the output range, and for setting the resolution of the *base* value, see Table 1-17.
- stress* :** Stress current (in A). Numeric expression.
0 to $\pm 100\text{E-}3$ (for 4155B/4156B and MPSMU in 41501A/B)
0 to ± 1 (for HPSMU in 41501A/B)
For the relation between the *stress* value and the output range, and for setting the resolution of the *stress* value, see Table 1-17.
- Vcomp* :** Voltage compliance (in V). Numeric expression. If you do not specify this parameter, *Vcomp* is set to the previous setting. For parameter values available for *Vcomp*, see Table 1-17.
The voltage compliance polarity is automatically set to the same value as the polarity of *stress* and *base*, regardless of the specified *Vcomp*. If *stress*=0 and *base*=0, the polarity of the voltage compliance is positive.

Example Statements

```
OUTPUT @Hp4156;"STI 0,1,-14,0,5E-7,10"
```

Table 1-17

Available Parameter Values for STI Command

Output Range	Resolution in A	<i>base</i> or <i>stress</i> in A	Maximum <i>V_{comp}</i> in V	Remarks
10 pA	10E-15	0 to $\pm 10\text{E-}12$	± 100	For 4156B.
100 pA	10E-15	0 to $\pm 100\text{E-}12$	± 100	
1 nA	100E-15	0 to $\pm 1\text{E-}9$	± 100	For SMU.
			± 200	For HPSMU.
10 nA	1E-12	0 to $\pm 10\text{E-}9$	± 100	For SMU.
			± 200	For HPSMU.
100 nA	10E-12	0 to $\pm 100\text{E-}9$	± 100	For SMU.
			± 200	For HPSMU.
1 μA	100E-12	0 to $\pm 1\text{E-}6$	± 100	For SMU.
			± 200	For HPSMU.
10 μA	1E-9	0 to $\pm 10\text{E-}6$	± 100	For SMU.
			± 200	For HPSMU.
100 μA	10E-9	0 to $\pm 100\text{E-}6$	± 100	For SMU.
			± 200	For HPSMU.
1 mA	100E-9	0 to $\pm 1\text{E-}3$	± 100	For SMU.
			± 200	For HPSMU.
10 mA	1E-6	0 to $\pm 10\text{E-}3$	± 100	For SMU.
			± 200	For HPSMU.
100 mA	10E-6	0 to $\pm 20\text{E-}3$	± 100	For SMU.
		to $\pm 50\text{E-}3$	± 40	
		to $\pm 100\text{E-}3$	± 20	
	100E-6	0 to $\pm 50\text{E-}3$	± 200	For HPSMU
		to $\pm 100\text{E-}3$	± 100	
1 A	100E-6	0 to $\pm 50\text{E-}3$	± 200	
		to $\pm 125\text{E-}3$	± 100	
		to $\pm 500\text{E-}3$	± 40	
		to ± 1	± 20	

STM

The STM command sets the automatic abort condition (stop condition) for the stress force.

The automatic abort function of the stress force is available for the free run stress mode and for the pulse count stress mode (more than 10 sec). Refer to the STT command.

Syntax

STM *abort*

Parameters

abort : Automatic abort condition (stop condition). Integer expression. The following values are available:

<i>abort</i>	Abort condition
1	Disables the automatic abort function.
2	One of following occurs. - Compliance on the non-measurement unit. - Oscillation on any unit.
4	Compliance on the non-measurement unit.
32	Oscillation on any unit.

Example Statements

OUTPUT @Hp4156;"STM 32"

STP

The STP command sets the PGU for the dc voltage stress output or pulse stress output. The XE command triggers the stress force. To stop the stress force, use the AB command.

The 4155B/4156B allows to use maximum four stress sources (specified by the STI, STV and/or STP command) for a measurement.

Syntax

STP source, chnum, mode, base, stress[, Td[, Tw[, Tl[, Tt]]]]

Parameters

source : Reference number for the stress source. 0 to 3 are available. Integer expression.

Enter 0, 1, 2, or 3 to assign the reference number to the stress source.

If you specify multiple stress sources for a measurement, independent *source* value should be defined for the stress setup command (STI, STV or STP). If a *source* value is defined for multiple stress setup commands, the last command is effective when executing the measurement.

chnum : Channel number of PGU 27 or 28. Integer expression.

27: PGU1

28: PGU2

mode : Output mode. 0 or 1. Integer expression.

0: dc voltage output

1: pulse voltage output

base : Base voltage (in V).

0 to ± 40 V. Numeric expression.

Resolution: 4 mV (for 0 to ± 20 V), 8 mV (for ± 20 to ± 40 V).

stress : Stress voltage (in V).

0 to ± 40 V. Numeric expression.

Resolution: 4 mV (for 0 to ± 20 V), 8 mV (for ± 20 to ± 40 V).

4155B/4156B FLEX Commands

STP

- Td*** : Delay time (in seconds). Only for pulse stress.
0 to 10 sec. Numeric expression. See Table 1-18.
Restrictions: $Td < period$ of STT command
- Tw*** : Pulse width (in seconds). Only for pulse stress.
1 μ sec to 9.99 sec. Numeric expression. See Table 1-18.
Restrictions: $Tw < period$ of STT command
- Tl*** : Leading edge transition time (in seconds). Only for pulse stress.
100 nsec to 10 msec. Numeric expression. See Table 1-19.
Restrictions: $Tl < Tw \times 0.8$
- Tt*** : Trailing edge transition time (in seconds). Only for pulse stress.
100 nsec to 10 msec. Numeric expression. See Table 1-19.
Restrictions: $Tt < (period - Tw) \times 0.8$
where *period* is a parameter of STT command.

Table 1-18

Ranges of Delay Time and Pulse Width

Range ^a	<i>period</i> ^b in sec	<i>Tw</i> in sec	<i>Td</i> in sec	Resolution in sec
1	2E-6 to 100E-6	1E-6 to 99.9E-6	0 to 100E-6	0.1E-6
2	100E-6 to 1E-3	1E-6 to 999E-6	0 to 1E-3	1E-6
3	1E-3 to 10E-3	10E-6 to 9.99E-3	0 to 10E-3	10E-6
4	10E-3 to 100E-3	100E-6 to 99.9E-3	0 to 100E-3	100E-6
5	100E-3 to 1	1E-3 to 999E-3	0 to 1	1E-3
6	1 to 10	10E-3 to 9.99	0 to 10	10E-3

- Settings of *period*, *Tw* and *Td* for a PGU must be in the same range. If you use two PGUs, these three parameters must be set in the same range for both PGUs.
- This parameter is a STT command parameter.

Table 1-19 **Leading and Trailing Edge Transition Time**

Range ^a	<i>Tl</i> or <i>Tt</i> in sec	Resolution in sec
1	100E-9 to 1E-6	1E-9
2	500E-9 to 10E-6	10E-9
3	5E-6 to 100E-6	100E-9
4	50E-6 to 1E-3	1E-6
5	500E-6 to 10E-3	10E-6

a. Leading time and trailing time for a PGU must be in the same range.

**Example
Statements**

OUTPUT @Hp4156;"STP 0,28,0,0,5"

OUTPUT @Hp4156;"STP 0,28,1,0,5,1E-3,1E-3,1E-4,1E-4"

STT

The STT command sets the stress time and stress mode.

Syntax

STT *hold*, *mode* [, *count* [, *period*]]

Parameters

hold : Hold time (in seconds).

0 to 655.35 sec. Numeric expression.

mode : Stress mode.

0, 1 or 2. Integer expression. See Table 1-20.

If you use *only* the dc stress source, set *mode* to 0 or 2. *mode*=1 is not available for the dc stress. Do not set *count* and *period*.

If you enter the STT command into the internal program memory, do not set *mode*=0. Free run pulse output is not available.

count : Stress time or pulse count. Numeric expression. See Table 1-20.

period : Pulse period (in seconds). Only for pulse stress.

2E-6 to 10 sec. Numeric expression.

This value must match the STP command *Td* and *Tw* parameters. See Table 1-18 of the STP command. Initial setting: 10 msec

If this parameter is not specified, *period* is set to the previous value or the initial setting value.

If you use the automatic abort function in the pulse count mode, pulse output must be more than 10 seconds. (*count* × *period* > 10 sec)

Table 1-20

Available *mode* and *count* value

<i>mode</i>	Description	<i>count</i>
0	Free run mode. Continues stress output. Not available for the program memory.	The value is ignored, but a number must be entered for pulse stress setup.
1	Pulse count mode. Forces pulse stress until the number of pulses reaches the total pulse count specified by <i>count</i> . Available for the stress by the STP command.	Specifies the total pulse count. 1 to 65535.
2	Duration mode. Forces stress until the stress force time reaches the total stress time specified by <i>count</i> . Automatic abort function is not available in this mode.	Specifies the total stress time. 500E-6 to 655 sec.

NOTE**Pulse Count and Pulse Period**

Pulse count and pulse period settings are effective for both PGU1 and PGU2. If you use a PGU as a stress source, and another PGU as a pulse source (controlled by the SPG/SRP/SPP commands), check the settings of the SPG command in your program. The settings of each commands must be the same value.

Example Statements

```
OUTPUT @Hp4156;"STT 1,0,100"  
OUTPUT @Hp4156;"STT 1,1,100"  
OUTPUT @Hp4156;"STT 1,2,100,0.1"
```

STV

The STV command specifies the dc stress voltage source (SMU or VSU) and its parameters. The XE command triggers the stress force. To stop the stress force, use the AB command.

The 4155B/4156B allows to use maximum four stress sources (specified by the STI, STV and/or STP command) for a measurement.

Syntax

STV source, chnum, range, base, stress[, Icomp]

If you enter the STV command into the program memory (see the ST command), do not omit the *Icomp* parameter. *Icomp* is necessary when using the internal program memory.

Parameters

source : Reference number for the stress source. 0 to 3 are available. Integer expression.

Enter 0, 1, 2, or 3 to assign the reference number to the stress source.

If you specify multiple stress sources for a measurement, independent *source* value should be defined for the stress setup command (STI, STV or STP). If a *source* value is defined for multiple stress setup commands, the last command is effective when executing the measurement.

chnum : Channel number of the unit that will force the stress voltage. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
21	VMU1
22	VMU2

- a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

range : Stress output range. Integer expression.

<i>range</i>	Ranging Type ^a
0	Auto ranging
11 (for SMU)	2 V limited auto ranging
12	20 V limited auto ranging
13 (for SMU)	40 V limited auto ranging
14 (for SMU)	100 V limited auto ranging
15 (only for HPSMU)	200 V limited auto ranging

- a. Auto ranging uses the lowest output range (available for the unit) that covers both *base* and *stress* value. Limited auto ranging is the same, but minimum output range is the specified range. For example, 20 V limited auto ranging uses the 20 V range to force 1 V, and uses the 100 V range to force 50 V.

base : Base voltage (in V). Numeric expression.

0 to ± 100 (for 4155B/4156B and MPSMU in 41501A/B)

0 to ± 200 (for HPSMU in 41501A/B)

0 to ± 20 (for VSU)

For the relation between the *base* value and the output range, and for setting the resolution of the *base* value, see Table 1-21.

stress : Stress current (in V). Numeric expression.

0 to ± 100 (for 4155B/4156B and MPSMU in 41501A/B)

0 to ± 200 (for HPSMU in 41501A/B)

0 to ± 20 (for VSU)

For the relation between the *stress* value and the output range, and for setting the resolution of the *stress* value, see Table 1-21.

4155B/4156B FLEX Commands

STV

Icomp : Current compliance (in A). Numeric expression.

If this parameter is not specified, *Icomp* is set to the previous setting. For parameter values available for *Icomp*, see Table 1-21. 0 A is not allowed for *Icomp*.

The current compliance polarity is automatically set to the same polarity as the *stress* and *base* values, regardless of the specified *Icomp*. If *stress*=0 and *base*=0, the polarity of the current compliance is positive.

Table 1-21 Available Parameter Values for STV Command

Output Range	Resolution in V	<i>base</i> or <i>stress</i> in V	Maximum <i>Icomp</i> in A	Remarks
2 V	100E-6	0 to ± 2	$\pm 100\text{E-}3$	For SMU.
			± 1	For HPSMU.
20 V	1E-3	0 to ± 20	$\pm 100\text{E-}3$	For SMU.
			± 1	For HPSMU.
			–	For VSU.
40 V	2E-3	0 to ± 40	$\pm 50\text{E-}3$	For SMU.
			$\pm 500\text{E-}3$	For HPSMU.
100 V	5E-3	0 to ± 100	$\pm 20\text{E-}3$	For SMU.
			$\pm 125\text{E-}3$	For HPSMU.
200 V	10E-3	0 to ± 200	$\pm 50\text{E-}3$	

Example Statements

```
OUTPUT @Hp4156;"STV 0,1,12,0,5,1E-2"
```


:SYST:ERR?

This query command returns an error code from the 4155B/4156B error register, and the error message. An error code and error message pair is returned, and the error code is deleted from the error register.

The output data is always stored in the query buffer in ASCII format, regardless of the FMT command.

Syntax

:SYST:ERR?

Query Response

In US command mode:

error_code,message<LF^EOI>

In US42 command mode:

error_code,message<CR/LF^EOI>

**Example
Statements**

OUTPUT @Hp4156;":SYST:ERR?"
ENTER @Hp4156;A,A\$

TI/TI?

The TI and TI? commands are the trigger command for high-speed spot current measurement. The commands perform a high-speed spot current measurement, independent of the SMU source mode, trigger mode (TM command), and measurement mode (MM command).

Difference between the TI command and the TI? command is the way to read the measurement data as shown in the Example Statements. If you use the TI? command, you do not need to enter the RMD? command.

For the output data format, refer to “Data Output Format” on page 1-11.

The TI command cannot be used with the TI? or TV? command in a same measurement program. Also the TI? command cannot be used with the TI or TV command in a same measurement program.

Execution Conditions

CN command has been executed for the specified unit.

Syntax

TI *chnum*[, *range*]

TI? *chnum*[, *range*]

If you enter the TI/TI? command into the program memory (see the ST command), do not omit the *range* parameter. *range* is necessary when using the internal program memory.

Parameters

chnum : Channel number of the unit used to measure current. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6

- a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

range : Ranging type for current measurement. 0, 9 to 20, and –9 to –20 are available. Integer expression. See table below.

For SMU set to the current source, the input *range* value is ignored, and the SMU measures the current using the current output range.

If you do not specify *range*, measurement range is automatically set to the compliance range for voltage force SMU, and set to the current output range for current force SMU.

<i>range</i>	Ranging type ^a	<i>range</i>	Ranging type ^a
0	Auto ranging		
9 ^b	10 pA limited auto ranging	-9 ^b	10 pA range fixed
10 ^b	100 pA limited auto ranging	-10 ^b	100 pA range fixed
11	1 nA limited auto ranging	-11	1 nA range fixed
12	10 nA limited auto ranging	-12	10 nA range fixed
13	100 nA limited auto ranging	-13	100 nA range fixed
14	1 μ A limited auto ranging	-14	1 μ A range fixed
15	10 μ A limited auto ranging	-15	10 μ A range fixed
16	100 μ A limited auto ranging	-16	100 μ A range fixed
17	1 mA limited auto ranging	-17	1 mA range fixed
18	10 mA limited auto ranging	-18	10 mA range fixed
19	100 mA limited auto ranging	-19	100 mA range fixed
20 ^b	1 A limited auto ranging	-20 ^b	1 A range fixed

a. Auto ranging uses the lowest measurement range (available for the unit) that covers the measurement value. Limited auto ranging is same, but minimum measurement range is specified range. For example, 10 μ A limited auto ranging uses the 10 μ A range to measure 1 nA, and uses the 100 mA range to measure 50 mA.

b. 9, 10, –9, and –10 are only for 4156B. 20 and –20 are only for HPSMU.

Example Statements

For TI command:

```
OUTPUT @Hp4156;"TI 1,0"
OUTPUT @Hp4156;"RMD?"
ENTER @Hp4156;A$
```

For TI? command:

```
OUTPUT @Hp4156;"TI? 1,0"
ENTER @Hp4156;A$
```

TM

The TM command specifies the trigger mode which defines how events are effected for the measurement trigger, and releases the wait status set by the PA command. The TM command is effective for all types of measurements, except for high-speed spot measurements.

Syntax

TM *mode*

Parameters

mode : Trigger mode. 1 to 4 are available. Integer expression. See below. The *mode* value is initially set to 1.

<i>mode</i>	Events effective for trigger
1	XE command and GPIB GET (Group Execute Trigger, trigger command in HP BASIC)
2	XE command
3	XE command and external trigger (signal via the Ext Trig In terminal)
4	XE command and MM command (automatic trigger after the MM command execution)

If the *mode* value is set to 3, and the measurement is performed by an external trigger signal via the Ext Trig In terminal, the 4155B/4156B outputs a pulse signal via the Ext Trig Out terminal on the rear panel.

Example Statements

OUTPUT @Hp4156;"TM 1"
OUTPUT @Hp4156;"TM 3"

***TST?**

The *TST? query command starts the 4155B/4156B self-test, and stores the results in the output data buffer (query buffer).

The output data is always stored in the query buffer in ASCII format, regardless of the FMT command.

When you execute the TST? command, the output switches of the specified units are set to OFF (the same conditions as after the CL command execution). The *TST? command also performs self-calibration.

If the 4155B/4156B fails self-test, contact the nearest Agilent Technologies Sales and Service Office. Units that fail self-test are disabled, except for the *TST? command, and can only be enabled by the RCV command.

Syntax

*TST? [*test slot*]

Parameters

test slot : Slot number. 0 to 9 are available. Integer expression. If you do not specify this parameter, the *test slot* value is set to 0.

<i>test slot</i>	Unit tested
0	All units and mainframe
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
7 ^b	VSU1, VSU2, VMU1 and VMU2
8 ^c	PGU1 and PGU2
9	GNDU

- For SMUs in the 41501A/B Expander. If HPSMU is installed in the 41501A/B, set *test slot* of HPSMU to 6, do not set to 5.
- All VSU1, VSU2, VMU1, and VMU2 are tested.
- Both PGU1 and PGU2 are tested.

4155B/4156B FLEX Commands
*TST?

Query Response In US command mode:

results<LF^EOI>

In US42 command mode:

results<CR/LF^EOI>

results *results* has the meanings shown in the table below. If multiple failures are detected, the returned *results* value is equal to the sum of the *results* values corresponding to the failures.

<i>results</i>	Description / Failures
0	Passed. No failure detected.
1	SMU1 failed.
2	SMU2 failed.
4	SMU3 failed.
8	SMU4 failed.
16	SMU5 failed.
32	SMU6 failed.
64	VSU/VMU failed.
128	PGU failed.
256	Mainframe failed.
512	GNDU failed.
1024	Not applicable.

Remarks If the self-test execution is aborted, fatal error occurred, or 41501A/B expander is not turned on, the *TST? command returns 256 (Mainframe failed).

If *test slot* specifies the slot number that does not have a measurement unit, the *TST? command returns 0 (Passed. No error.).

Example Statements

OUTPUT @Hp4156;"*TST?"
ENTER @Hp4156;A

TV/TV?

The TV and TV? commands are the trigger command for high-speed spot voltage measurements. The commands perform a voltage measurement, independent of the SMU source mode, trigger mode (TM command), and measurement mode (MM command).

Difference between the TV command and the TV? command is the way to read the measurement data as shown in the Example Statements. If you use the TV? command, you do not need to enter the RMD? command.

For the data output format, refer to “Data Output Format” on page 1-11.

The TV command cannot be used with the TI? or TV? command in a same measurement program. Also the TV? command cannot be used with the TI or TV command in a same measurement program.

Execution Conditions

CN command has been executed for the specified unit.

In the US42 command control mode, if you specify the VMU for *chnum*, there are no execution conditions.

Syntax

TV *chnum*[, *range*]

TV? *chnum*[, *range*]

If you enter the TV/TV? command into the program memory (see the ST command), do not omit the *range* parameter. *range* is necessary when using the internal program memory.

Parameters

chnum : Channel number of the unit used to measure voltage. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
23	VMU1
24	VMU2

- a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

4155B/4156B FLEX Commands

TV/TV?

range : Ranging type for voltage measurement. 0, 10 to 15, and –10 to –15 are available. Integer expression.

If you do not specify this parameter, *range* is set to 0.

<i>range</i>	Ranging type ^a	<i>range</i>	Ranging type ^a
0	Auto ranging		
10 ^b	0.2 V limited auto ranging	-10 ^b	0.2 V range fixed
11	2 V limited auto ranging	-11	2 V range fixed
12 ^c	20 V limited auto ranging	-12 ^c	20 V range fixed
13 ^d	40 V limited auto ranging	-13 ^d	40 V range fixed
14 ^d	100 V limited auto ranging	-14 ^d	100 V range fixed
15 ^e	200 V limited auto ranging	-15 ^e	200 V range fixed

- Auto ranging uses the lowest measurement range (available for the unit) that covers the measurement value. Limited auto ranging is same, but minimum measurement range is specified range. For example, 2 V limited auto ranging uses the 2 V range to measure 0.1 V, and uses the 20 V range to measure 10 V.
- 10 and –10 are available only for VMU in the differential mode.
- 12 and –12 are available for VMU in the grounded mode, and SMU
- 13, 14, –13, and –14 are available for SMU.
- 15 and –15 are available only for HPSMU.

Example Statements

For TV command:

```
OUTPUT @Hp4156;"TV 1,0"
OUTPUT @Hp4156;"RMD? 1"
ENTER @Hp4156;A$
```

For TV? command:

```
OUTPUT @Hp4156;"TV? 1,0"
ENTER @Hp4156;A$
```


UNT?

The UNT? query command requests the model and revision numbers of all units in the 4155B/4156B, and stores the results in the 4155B/4156B output data buffer (query buffer).

The output data is always stored in the query buffer in ASCII format, regardless of the FMT command.

Syntax

UNT? [*mode*]

Parameters

***mode* :** Integer expression. 0 or 1.

There is no difference between a "UNT? 0" command and a "UNT? 1" command. If you do not specify this parameter, *mode* is set to 0.

Query Response

model number at slot 0, revision number at slot 0;
model number at slot 1, revision number at slot 1;
model number at slot 8, revision number at slot 8<terminator>

where, the terminator depends on the control mode (US or US42) as follows:

US command mode: <LF^EOI>

US42 command mode: <CR/LF^EOI>

Example Statements

```
OUTPUT @Hp4156; "UNT?"
ENTER @Hp4156; A$
```

VM

The VM command sets the operation mode of the VMU.

Syntax

VM *chnum, mode*

Parameters

chnum : Channel number of VMU 23 or 24. Integer expression.

23: VMU1

24: VMU2

mode : Operation mode. 1 or 2. Integer expression.

1: Grounded measurement mode

2: Differential measurement mode

Remarks

To use the grounded measurement mode, enter the VM 23,1 and/or VM 24,1 commands. And you should define the measurement units in the MM command. You can set the measurement range of VMU1 and VMU2 independently by the RV commands.

To use the differential measurement mode, enter the VM 23,2 or VM 24,2 command. And you should define either VMU1 or VMU2 in the MM command. The 4155B/4156B uses the unit defined in the MM command for a measurement, and uses the measurement range specified for the unit by using the RV command.

Example Statements

OUTPUT @Hp4156; "VM 23,1"

***WAI**

The *WAI command stops execution of all commands until the Operation Complete (OPC) bit is set to 1, which means there are no pending operations. See the *OPC command.

Syntax

*WAI

**Example
Statements**

OUTPUT @Hp4156; "*WAI"

WI

The WI command specifies the current source for the staircase sweep and its parameters. This command also clears the WV, WSV, and WSI command settings.

This command setting is cleared by the WV command.

Syntax

For Staircase Sweep Measurement:

WI *ch, mode, range, start, stop, step* [, *Vcomp* [, *Pcomp* [, *Rmode*]]]

For Staircase Sweep with Pulsed Bias Measurement:

WI *ch, mode, range, start, stop, step* [, *Vcomp*]

If you enter the WI command into the program memory (see the ST command), do not omit the *Vcomp* parameter. *Vcomp* is necessary when using the internal program memory.

Parameters

***ch* :** Channel number of the unit for the staircase sweep current source. 1 to 6 are available. Integer expression.

<i>ch</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6

a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

***mode* :** Sweep mode. 1 to 4 are available. Integer expression.

- 1: Linear sweep (single stair)
- 2: Log sweep (single stair)
- 3: Linear sweep (double stair)
- 4: Log sweep (double stair)

range : Ranging type for staircase sweep current output. Integer expression.

<i>range</i>	Ranging Type
0	Auto ranging
9 (only for 4156B)	10 pA limited auto ranging
10 (only for 4156B)	100 pA limited auto ranging
11	1 nA limited auto ranging
12	10 nA limited auto ranging
13	100 nA limited auto ranging
14	1 μ A limited auto ranging
15	10 μ A limited auto ranging
16	100 μ A limited auto ranging
17	1 mA limited auto ranging
18	10 mA limited auto ranging
19	100 mA limited auto ranging
20 (only for HPSMU)	1 A limited auto ranging

where, auto ranging uses the optimum range available for the SMU, and limited auto ranging uses the specified range or above. Actual ranging operation depends on the *Rmode* (ranging mode) setting. See *Rmode*.

start : Start current (in A). Numeric expression.

0 to $\pm 100\text{E-}3$ (for 4155B/4156B and MPSMU in 41501A/B)

0 to ± 1 (for HPSMU in 41501A/B)

start and *stop* must have the same polarity for *log* sweep.

For the relation between the *start* value and the output range (not *range*), and for setting the resolution of the *start* value, see Table 1-22.

stop : Stop current (in A). Numeric expression.

0 to $\pm 100\text{E-}3$ (for 4155B/4156B and MPSMU in 41501A/B)

0 to ± 1 (for HPSMU in 41501A/B)

start and *stop* must have the same polarity for *log* sweep.

For the relation between the *stop* value and the output range (not *range*), and for setting the resolution of the *stop* value, see Table 1-22.

step : Number of steps for staircase sweep. Numeric expression. 1 to 1001 are available.

4155B/4156B FLEX Commands

WI

Vcomp : Voltage compliance (in V). Numeric expression.

If this parameter is not specified, *Vcomp* is set to the previous setting.
For parameter values available for *Vcomp*, see Table 1-22.

The voltage compliance polarity is automatically set to the same value as the polarity of *start* and *stop*, regardless of the specified *Vcomp*.

Pcomp : Power compliance (in W). Numeric expression.

1E-3 to 2 (for 4155B/4156B and MPSMU in 41501A/B)

1E-3 to 14 (for HPSMU in 41501A/B)

Setting resolution: 1E-3 W.

If you do not specify the *Pcomp* value, the power compliance is not set.

Rmode : Ranging mode.

Used to specify the operation of range change during the current sweep.

0 or 1. Integer expression.

If you do not specify the *Rmode* value, ranging mode is set to 0 (fixed mode).

0: Fixed

Uses the output range, which covers both *start* and *stop* values, during the current sweep.

For example, if you enter the following command, the 4155B/4156B uses 100 mA range to force both 100 μ A and 100 mA.

```
WI 1,1,17,1E-4,100E-3,2,10,5E-2,0
```

1: Auto

Uses the optimum output range for the output current.

For example, if you enter the following command, the 4155B/4156B uses 1 mA range to force 100 μ A, and uses 100 mA range to force 100 mA.

```
WI 1,1,17,1E-4,100E-3,2,10,5E-2,1
```

Range changing may cause 0 A output in a moment.

Table 1-22

Available Parameter Values for WI Command

Output Range	Resolution in A	start or stop in A	Maximum V_{comp} in V	Remarks
10 pA	10E-15	0 to $\pm 10\text{E-}12$	± 100	For 4156B.
100 pA	10E-15	0 to $\pm 100\text{E-}12$	± 100	
1 nA	100E-15	0 to $\pm 1\text{E-}9$	± 100	For SMU.
			± 200	For HPSMU.
10 nA	1E-12	0 to $\pm 10\text{E-}9$	± 100	For SMU.
			± 200	For HPSMU.
100 nA	10E-12	0 to $\pm 100\text{E-}9$	± 100	For SMU.
			± 200	For HPSMU.
1 μA	100E-12	0 to $\pm 1\text{E-}6$	± 100	For SMU.
			± 200	For HPSMU.
10 μA	1E-9	0 to $\pm 10\text{E-}6$	± 100	For SMU.
			± 200	For HPSMU.
100 μA	10E-9	0 to $\pm 100\text{E-}6$	± 100	For SMU.
			± 200	For HPSMU.
1 mA	100E-9	0 to $\pm 1\text{E-}3$	± 100	For SMU.
			± 200	For HPSMU.
10 mA	1E-6	0 to $\pm 10\text{E-}3$	± 100	For SMU.
			± 200	For HPSMU.
100 mA	10E-6	0 to $\pm 20\text{E-}3$	± 100	For SMU.
		to $\pm 50\text{E-}3$	± 40	
		to $\pm 100\text{E-}3$	± 20	
	100E-6	0 to $\pm 50\text{E-}3$	± 200	For HPSMU.
		to $\pm 100\text{E-}3$	± 100	
1 A	100E-6	0 to $\pm 50\text{E-}3$	± 200	
		to $\pm 125\text{E-}3$	± 100	
		to $\pm 500\text{E-}3$	± 40	
		to ± 1	± 20	

Example Statements

```
OUTPUT @Hp4156;"WI 1,1,11,0,0.1,100,10,1,1"
```

```
OUTPUT @Hp4156;"WI 1,2,15,1E-6,0.1,100"
```

WM

The WM command sets the automatic sweep abort function for the staircase sweep sources and the pulsed sweep source, and also sets the post sweep condition of the staircase sweep sources.

The automatic sweep abort function stops the sweep when the abort condition, specified by *abort*, is detected. The staircase sweep source output is set to the condition specified by *post*.

Syntax

WM *abort*[,*post*]

Parameters

abort : Abort condition. Integer expression.

<i>abort</i>	Abort condition
1	Disables the automatic sweep abort function.
2	One of following occurs. <ul style="list-style-type: none">- Compliance on the measurement unit.- Compliance on the non-measurement unit.- Overflow on the AD converter.- Oscillation on any unit.
4	Compliance on the non-measurement unit.
8	Compliance on the measurement unit.
16	Overflow on the AD converter.
32	Oscillation on any unit.

To set multiple abort conditions, specify the sum of the *abort* values for the abort conditions shown above. This is allowed for *abort*=4 to 32. For example, if you want to enable the abort function for when compliance on the measurement unit (*abort*=8) or oscillation (*abort*=32) are detected, set *abort* to 40 (8 + 32).

post : Post sweep condition of the staircase sweep sources. 1 or 2. Integer expression.

1: Set the source output to the sweep start value.

2: Set the source output to the sweep stop value.

If this parameter is not specified, *post* is set to 1.

Example Statements

OUTPUT @Hp4156; "WM 1"

OUTPUT @Hp4156; "WM 2, 2"

WNU?

The WNU? query command requests the number of sweep steps specified by the sweep command (WI, WV, PWI or PWV), and stores the results in the 4155B/4156B output data buffer (query buffer).

The output data is always stored in the query buffer in ASCII format, regardless of the FMT command.

Syntax

WNU?

Query Response

In US command mode:

number of sweep steps<LF^EOI>

In US42 command mode:

number of sweep steps<CR/LF^EOI>

After executing this command, the 4155B/4156B reports the number of steps specified by the sweep command (PWI, PWV, WI, or WV).

If you want to know the number of steps for a pulsed sweep, you must execute an "MM 4" command before using this command, otherwise the number of steps for the staircase sweep is reported.

Example Statement

```
OUTPUT @Hp4156;"WNU?"  
ENTER @Hp4156;A
```

4155B/4156B FLEX Commands

WR

WR

The WR command writes the specified characters or numeric data (ASCII) at the end of the file opened by the OPEN command.

Syntax

WR *data*

Parameters

data : ASCII characters or numeric data to be written into the file. Maximum 254 bytes.

Example Statements

This example writes the TI? measurement data to the "MDATA" file.

```
OUTPUT @Hp4156;"TI? 1,0"
ENTER @Hp4156 USING "#,5X,13D,X";Mdata
A$="" Id(A)=""&VAL$(Mdata) &"',' "
OUTPUT @Hp4156;"SDSK 1"
OUTPUT @Hp4156;"OPEN 'MDATA',2"
OUTPUT @Hp4156;"WR 'Test Results',' "
OUTPUT @Hp4156;"WR ";A$
OUTPUT @Hp4156;"CLOSE"
```

WS

The WS command causes the 4155B/4156B to go into a wait state until the 4155B/4156B receives an external trigger signal via the `Ext Trig In` terminal on the rear panel.

Syntax

WS [*mode*]

Parameters

mode : Waiting mode. 1 or 2. Integer expression.

If this parameter is not specified, *mode* is set to 1.

<i>mode</i>	Description
1	Continues the operation if an external trigger was already received. Otherwise, the 4155B/4156B immediately goes into a wait state for an external trigger.
2	In any condition, the 4155B/4156B immediately goes into a wait state for an external trigger.

Remarks

To end a wait state, execute the AB or *RST command.

Example Statements

```
OUTPUT @Hp4156;"STG 0,1,0"
OUTPUT @Hp4156;"WS 2"
```

WSI

The WSI command specifies the staircase sweep current source that will be synchronized with the staircase sweep current source set by the WI command, or the pulsed sweep current source set by the PWI command.

Then the current source set by the WI command or PWI command will be called as the primary sweep source, and the current source set by the WSI command will be called as the synchronous sweep source.

This command setting is cleared by the WI, WV, PWI or PWV command.

Execution Conditions

Available for the staircase sweep measurement mode (set by the MM 2 command) or the pulsed sweep measurement mode (set by the MM 4 command).

The parameters of the WI command or the PWI command are set.

Syntax

`WSI chnum, range, start, stop [, Vcomp [, Pcomp [, Rmode]]]`

If you enter the WSI command into the program memory (see the ST command), do not omit the *Vcomp* parameter. *Vcomp* is necessary when using the internal program memory.

Parameters

chnum : Channel number of the unit for the synchronous sweep current source. 1 to 6 are available. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6

a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

range : Ranging type for synchronous sweep current output. Integer expression.

<i>range</i>	Description
0	Auto ranging
9 (only for 4156B)	10 pA limited auto ranging
10 (only for 4156B)	100 pA limited auto ranging
11	1 nA limited auto ranging
12	10 nA limited auto ranging
13	100 nA limited auto ranging
14	1 μ A limited auto ranging
15	10 μ A limited auto ranging
16	100 μ A limited auto ranging
17	1 mA limited auto ranging
18	10 mA limited auto ranging
19	100 mA limited auto ranging
20 (only for HPSMU)	1 A limited auto ranging

where, auto ranging uses one of the ranges available for the SMU, and the limited auto ranging uses the specified range or above. Actual ranging operation depends on the *Rmode* (ranging mode) setting. See *Rmode*.

start : Start current (in A). Numeric expression.

0 to $\pm 100\text{E-}3$ (for 4155B/4156B and MPSMU in 41501A/B)

0 to ± 1 (for HPSMU in 41501A/B)

start and *stop* must have the same polarity for *log* sweep.

For the relation between the *start* value and the output range (not *range*), and for setting the resolution of the *start* value, see Table 1-22 of the WI command.

4155B/4156B FLEX Commands

WSI

stop : Stop current (in A). Numeric expression.

0 to $\pm 100\text{E-}3$ (for 4155B/4156B and MPSMU in 41501A/B)

0 to ± 1 (for HPSMU in 41501A/B)

start and *stop* must have the same polarity for *log* sweep.

For the relation between the *stop* value and the output range (not *range*), and for setting the resolution of the *stop* value, see Table 1-22 of the WI command.

The number of sweep steps is the same as the setting for the WI command.

Vcomp : Voltage compliance (in V). Numeric expression.

If this parameter is not specified, *Vcomp* is set to the previous setting. For parameter values available for *Vcomp*, see Table 1-22 of the WI command.

The voltage compliance polarity is automatically set to the same polarity value of *start* and *stop*, regardless of the specified *Vcomp*.

Pcomp : Power compliance (in W). Numeric expression.

1E-3 to 2 (for 4155B/4156B and MPSMU in 41501A/B)

1E-3 to 14 (for HPSMU in 41501A/B)

Setting resolution: 1E-3 W.

If the *Pcomp* value is not specified, the power compliance is not set.

Rmode : Ranging mode.

Used to specify the operation of range change during the current sweep.
0 or 1. Integer expression.

If the *Rmode* value is not specified, ranging mode is set to 0 (fixed mode).

0: Fixed

Uses the output range which covers both *start* and *stop* values, during the current sweep.

For example, if you enter the following command, SMU1 and SMU2 force both 100 μA and 100 mA, by using the 100 mA range.

```
WI 1,1,17,1E-4,100E-3,2,10,5E-2,0
WSI 2,17,1E-4,100E-3,10,5E-2,0
```

1: Auto

Uses the optimum output range for the output current.

For example, if you enter the following command, SMU1 and SMU2 force 100 μ A by using the 1 mA range, and force 100 mA by using the 100 mA range.

```
WI 1,1,17,1E-4,100E-3,2,10,5E-2,1  
WSI 2,17,1E-4,100E-3,10,5E-2,1
```

Range changing may cause 0 A output in a moment.

**Example
Statements**

```
OUTPUT @Hp4156;"WSI 1,16,0,4E-5"
```

```
OUTPUT @Hp4156;"WSI 2,0,1E-3,1E-2,5,5E-2,1"
```

WSV

The WSV command specifies the staircase sweep voltage source that will be synchronized with the staircase sweep voltage source set by the WV command, or the pulsed sweep voltage source set by the PWV command.

The voltage source set by the WV command or PWV command will be called as the primary sweep source, and the voltage source set by the WSV command will be called as the synchronous sweep source.

This command setting is cleared by the WI, WV, PWI or PWV command.

Execution Conditions

Available for the staircase sweep measurement mode (set by the MM 2 command) or the pulsed sweep measurement mode (set by the MM 4 command).

The parameters of the WV command or the PWV command are set.

Syntax

For SMU:

```
WSV chnum, range, start, stop[, Icomp[, Pcomp[, Rmode]]]
```

For VSU:

```
WSV chnum, range, start, stop
```

If you enter the WSV command into the program memory (see the ST command), do not omit the *Icomp* parameter. *Icomp* is necessary when using the internal program memory.

Parameters

chnum : Channel number of the unit for the synchronous sweep voltage source. 1 to 6, 21 and 22 are available. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
21	VSU1
22	VSU2

- a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

range : Ranging type for synchronous sweep voltage output. Integer expression.

<i>range</i>	Ranging type
0	Auto ranging
11 (for SMU)	2 V limited auto ranging
12	20 V limited auto ranging
13 (for SMU)	40 V limited auto ranging
14 (for SMU)	100 V limited auto ranging
15 (only for HPSMU)	200 V limited auto ranging

where, auto ranging uses one of the ranges available for the unit used, and limited auto ranging uses the specified range or above. Actual ranging operation depends on the *Rmode* (ranging mode) setting. See *Rmode*.

start : Start voltage (in V). Numeric expression.
0 to ± 100 (for 4155B/4156B and MPSMU in 41501A/B)
0 to ± 200 (for HPSMU in 41501A/B)
0 to ± 20 (for VSU)

start and *stop* must have the same polarity for *log* sweep.

For the relation between the *start* value and the output range (not *range*), and for setting the resolution of the *start* value, see Table 1-23 of the WV command.

stop : Stop voltage (in V). Numeric expression.
0 to ± 100 (for 4155B/4156B and MPSMU in 41501A/B)
0 to ± 200 (for HPSMU in 41501A/B)
0 to ± 20 (for VSU)

start and *stop* must have the same polarity for *log* sweep.

For the relation between the *stop* value and the output range (not *range*), and for setting the resolution of the *stop* value, see Table 1-23 of the WV command.

The number of sweep steps is the same as the setting for the WV command.

4155B/4156B FLEX Commands

WSV

Icomp : Current compliance (in A). Numeric expression. If this parameter is not specified, *Icomp* is set to the previous setting. For parameter values available for *Icomp*, see Table 1-23 of the WV command.

The current compliance polarity is automatically set to the same polarity value of *start* and *stop*, regardless of the specified *Icomp*.

Pcomp : Power compliance (in W). Numeric expression.

1E-3 to 2 (for 4155B/4156B and MPSMU in 41501A/B)

1E-3 to 14 (for HPSMU in 41501A/B)

Setting resolution: 1E-3 W.

If the *Pcomp* value is not specified, the power compliance is not set.

Rmode : Ranging mode. Used to specify the operation of range change during the voltage sweep. 0 or 1. Integer expression. If the *Rmode* value is not specified, ranging mode is set to 0 (fixed mode).

0: Fixed

Uses the output range which covers both *start* and *stop* values, during the voltage sweep.

For example, if you enter the following command, SMU1 and SMU2 force both 1 V and 50 V by using the 100 V range.

```
WV 1,1,11,1,50,2,0.01,0.5,0
WSV 2,11,1,50,0.01,0.5,0
```

1: Auto

Uses the optimum output range for the output voltage.

For example, if you enter the following command, SMU1 and SMU2 force 1 V by using the 2 V range, and force 50 V by using the 100 V range.

```
WV 1,1,11,1,50,2,0.01,0.5,1
WSV 2,11,1,50,0.01,0.5,1
```

Range changing may cause 0 V output in a moment.

Example Statements

```
OUTPUT @Hp4156;"WSV 1,0,1,100,0.01,1,1"
```

```
OUTPUT @Hp4156;"WSV 21,12,0,10"
```

WT

The WT command sets the hold time and delay time for staircase sweep measurements.

This command setting is ignored by the following measurement mode.

- 1ch pulsed spot measurements
- Pulsed sweep measurements
- Staircase sweep with pulsed bias measurements

Syntax

WT *hold, delay[, step delay]*

Parameters

hold : Hold time. The wait time from the trigger of sweep measurement to the beginning of the delay time for the first step value (in seconds).
0 to 655.35, with 0.01 sec resolution. Numeric expression.

delay : Delay time. The wait time from the end of the hold time or the beginning of the step value to the beginning of the measurement (in seconds).
0 to 65.535, with 0.0001 sec resolution. Numeric expression.

step delay : Step delay time. The wait time from the beginning of the measurement to the next step value (in seconds).
0 to 1, with 0.0001 sec resolution. Numeric expression.
If this parameter is not specified, *step delay* is set to 0.
If the specified *step delay* is shorter than the measurement time, the 4155B/4156B waits until the measurement completes, then outputs the next step.

Example Statements

```
OUTPUT @Hp4156; "WT 10, 0.01, 0.001"
OUTPUT @Hp4156; "WT 5, 0.2"
```

WV

The WV command specifies the voltage source for the staircase sweep source and its parameters. This command also clears the WI, WSI and WSV command settings.

This command setting is cleared by the WI command.

Syntax

For SMU, Staircase Sweep Measurement:

```
WV chnum, mode, range, start, stop, step [, Icomp [, Pcomp [, Rmode ] ] ]
```

For SMU, Staircase Sweep with Pulsed Bias Measurement:

```
WV chnum, mode, range, start, stop, step [, Icomp]
```

For VSU:

```
WV chnum, mode, range, start, stop, step
```

If you enter the WV command into the program memory (see the ST command), do not omit the *Icomp* parameter. *Icomp* is necessary when using the internal program memory.

Parameters

chnum : Channel number of the unit for the staircase sweep voltage source. 1 to 6, 21 and 22 are available. Integer expression.

<i>chnum</i>	Unit
1	SMU1
2	SMU2
3	SMU3
4	SMU4
5 ^a	SMU5
6 ^a	SMU6
21	VSU1
22	VSU2

a. For SMUs in the 41501A/B Expander. If the HPSMU is installed in the 41501A/B, *chnum* for HPSMU is 6, and channel number 5 is not used.

mode : Sweep mode. 1 to 4 are available. Integer expression.

- 1: Linear sweep (single stair)
- 2: Log sweep (single stair)
- 3: Linear sweep (double stair)
- 4: Log sweep (double stair)

range : Ranging type for staircase sweep voltage output. Integer expression.

<i>range</i>	Ranging type
0	Auto ranging
11 (for SMU)	2 V limited auto ranging
12	20 V limited auto ranging
13 (for SMU)	40 V limited auto ranging
14 (for SMU)	100 V limited auto ranging
15 (only for HPSMU)	200 V limited auto ranging

where, auto ranging uses one of the ranges available for the unit used, and limited auto ranging uses the specified range or above. Actual ranging operation depends on the *Rmode* (ranging mode) setting. See *Rmode*.

start : Start voltage (in V). Numeric expression.

0 to ± 100 (for 4155B/4156B and MPSMU in 41501A/B)

0 to ± 200 (for HPSMU in 41501A/B)

0 to ± 20 (for VSU)

start and *stop* must have the same polarity for *log* sweep.

For the relation between the *start* value and the output range (not *range*), and for setting the resolution of the *start* value, see Table 1-23.

stop : Stop voltage (in V). Numeric expression.

0 to ± 100 (for 4155B/4156B and MPSMU in 41501A/B)

0 to ± 200 (for HPSMU in 41501A/B)

0 to ± 20 (for VSU)

start and *stop* must have the same polarity for *log* sweep.

For the relation between the *stop* value and the output range (not *range*), and for setting the resolution of the *stop* value, see Table 1-23.

4155B/4156B FLEX Commands

WV

step : Number of steps for staircase sweep. 1 to 1001 are available. Numeric expression.

Icomp : Current compliance (in A). Numeric expression.

If this parameter is not specified, *Icomp* is set to the previous setting. For parameter values available for *Icomp*, see Table 1-23.

The current compliance polarity is automatically set to the same polarity value of *start* and *stop*, regardless of the specified *Icomp*.

Pcomp : Power compliance (in W). Numeric expression.

1E-3 to 2 (for 4155B/4156B and MPSMU in 41501A/B)

1E-3 to 14 (for HPSMU in 41501A/B)

Setting resolution: 1E-3 W.

If the *Pcomp* value is not specified, the power compliance is not set.

Rmode : Ranging mode. Used to specify the operation of range change during the voltage sweep. 0 or 1. Integer expression.

If the *Rmode* value is not specified, ranging mode is set to 0 (fixed mode).

0: Fixed

Uses the output range which covers both *start* and *stop* values, during the voltage sweep.

For example, if you enter the following command, the 4155B/4156B uses 100 V range to force both 1 V and 50 V.

```
WV 1,1,11,1,50,2,0.01,0.5,0
```

1: Auto

Uses the optimum output range for the output voltage.

For example, if you enter the following command, the 4155B/4156B uses 2 V range to force 1 V, and uses 100 V range to force 50 V.

```
WV 1,1,11,1,50,2,0.01,0.5,1
```

Range changing may cause 0 V output in a moment.

Table 1-23 Available Parameter Values for WV Command

Output Range	Resolution in V	<i>start or stop</i> in V	Maximum <i>Icomp</i> in A	Remarks
2 V	100E-6	0 to ± 2	$\pm 100\text{E-}3$	For SMU.
			± 1	For HPSMU.
20 V	1E-3	0 to ± 20	$\pm 100\text{E-}3$	For SMU.
			± 1	For HPSMU.
			–	For VSU.
40 V	2E-3	0 to ± 40	$\pm 50\text{E-}3$	For SMU.
			$\pm 500\text{E-}3$	For HPSMU.
100 V	5E-3	0 to ± 100	$\pm 20\text{E-}3$	For SMU.
			$\pm 125\text{E-}3$	For HPSMU.
200 V	10E-3	0 to ± 200	$\pm 50\text{E-}3$	

Example Statements

```
OUTPUT @Hp4156;"WV 1,2,12,1E-6,10,100,0.1,1,1"
OUTPUT @Hp4156;"WV 21,1,0,0,20,101"
```

4155B/4156B FLEX Commands
XE

XE

XE command triggers the 4155B/4156B to perform measurements. To put the measurement data into the 4155B/4156B output data buffer, enter the RMD? command.

The XE command cannot be used to trigger the high-speed spot measurement which is triggered by the TI/TI? or TV/TV? command.

For the data output format, refer to “Data Output Format” on page 1-11.

In the US42 command mode with *level*=16, the XE command triggers the measurement and puts the data into the output buffer without using the RMD? command. Read the measurement data before the 4155B/4156B output buffer becomes full up. The output buffer can store approximately 1500 measurement data.

**Execution
Conditions**

If any unit is set to the HIGH VOLTAGE state (forcing more than ± 40 V, or voltage compliance set to more than ± 40 V) after the trigger (XE), the interlock terminal must be shorted.

The following commands must be executed before executing the XE command. The necessary commands depend on the measurement mode.

Measurement Mode	Commands ^a
Spot	CN, MM, DV or DI
Staircase sweep	CN, MM, WV or WI
1ch pulsed spot	CN, MM, PV or PI, FL
Pulsed sweep	CN, MM, PWV or PWI, FL
Staircase sweep with pulsed bias	CN, MM, WV or WI, PV or PI, FL
Sampling	CN, MM, MT, MI or MV or MP
Stress force by SMU	CN, MM, STT, STI or STV
Stress force by PGU ^b	CN, MM, STT, STP

a. FL command is required only when the SMU output is a pulse voltage or current.

b. PGU outputs can be controlled by the SPG, SRP and SPP commands. Then MM and XE commands are not required.

Syntax

XE

**Example
Statement**

```
OUTPUT @Hp4156;"XE"  
OUTPUT @Hp4156;"RMD? 1"  
ENTER @Hp4156;A$
```

Error Messages

This section lists the error codes and the messages that can occur when you operate the 4155B/4156B using the 4155B/4156B FLEX commands.

- | | |
|------------|--|
| 500 | Improper parameter value. Check setup range.
The parameter value specified is out of range. Check the parameter setup range. |
| 501 | Improper channel number or slot number.
The channel number or slot number in the command is incorrect. The channel number must be 1 to 8, 11 to 18, or 21 to 28. The slot number must be 0 to 8. |
| 502 | A unit is not installed on specified channel.
This error is displayed when a command is sent for a device that isn't installed. For example, when PGU channels are specified in the command line but the 41501A/B is not installed. |
| 503 | Specified unit cannot execute this command.
The specified unit cannot execute this command. |
| 504 | Specified unit failed self-test/self-calib.
Unable to use the unit specified in the command line. The unit failed self-test or self-calibration. Contact the nearest Agilent Technologies sales and service office. |
| 505 | Filter can be set to SMUs only.
Filter can be set to SMUs only by using the FL command. |
| 506 | Unsupported unit detected in some slot.
The measurement unit in some slot must be changed. Contact the nearest Agilent Technologies sales and service office. |

4155B/4156B FLEX Commands

- 507**`xxxyyy` Program memory is full. Reduce commands.
Program memory is full. When using the ST command, too many program commands were sent to the program memory. Reduce the number of program commands being sent. `xxx` is for the program number. `yyy` is for where the overflow occurred from the first command execution.
- 508** Program creation aborted.
While making a program, an abort occurred.
- 509** ST must be executed before END command.
The END command cannot be executed prior to the execution of the ST command.
- 510** Unable to use this command between ST and END.
This command cannot be executed between the execution of the ST and END commands.
- 511** Comp/range cannot be omit to use prog memory.
Compliance and range parameters' setups cannot be omit when using the internal program memory. Range setup cannot be omit in the TV and TI command.
- 512** Output data buffer full. Too many points.
The output data buffer overflowed because too many data points were received.
- 513** Improper output range or output value.
The output range or output value in the command line is incorrect for the specified measurement unit. Check the setup range for the measurement unit.
- 514** Improper measurement range setup.
Measurement range setup is wrong in RI,RV,TI, or TV command. For example, the specified range is out of range for the measurement unit. Or, another example is that in the RI or RV command, the measurement range is set to fixed or limited auto range, though the range mode is set to 0 (auto range).
- 515** Specified output values are out of range.
The specified output values are out of range. Check the correct output range for the unit.

- 516** Cannot omit compliance setup.
The compliance value cannot be omitted when the force mode is changed from the previous force mode using the DV, DI, PWI, PWV, PI, PV, WI, or WV command.
- 517** The compliance setup is out of range.
The compliance setup is incorrect for the measurement unit. Check the correct compliance range.
- 518** Power compliance setting is out of range.
The power compliance setting is incorrect for the unit. Verify the correct power compliance setting range for the specified unit.
- 519** Current output range must be ≥ 100 nA in PI.
Output range for pulse current must be set 100 nA or more in PT command.
- 520** Measurement range must be less than compliance.
The measurement range set by RI or TI command must be less than the compliance set by the DI, WI, WSI, PWI, PI, and STI commands.
- 521** Range setup is wrong for the specified VMU.
For VMUs, when grounded measurement mode is set, the measurement range must be 2 V or 20 V. When differential measurement mode is set, the measurement range must be 0.2 V or 2 V.
- 522** Unable to set compliance for VSU or PGU.
The VSU and PGU commands do not have a compliance function. Delete the compliance setup from the VSU or PGU setup commands.
- 523** Cannot open the relay driving more than 40 V.
When the unit output more than 40 V, the output relay of the unit cannot be open.
- 524** Unable to output over 40 V. Interlock open.
An output voltage greater than 40 V cannot be forced when an interlock terminal is open. The output is aborted if the fixture lid is opened when applying greater than 40 V.
- 525** Unit sw must be ON before command execution.
The output relay of the specified unit must be turned on before executing a command.

4155B/4156B FLEX Commands

- 526** Filter must be set to OFF for pulse SMU.
The SMU filter must be set to *off* when you perform pulsed SMU measurements.
- 527** SMU/VSU hold time must be ≤ 655.35 s in the PT.
Hold time must be 0 to 655.35 s with 0.01 s resolution for pulsed SMUs or VSUs.
- 528** SMU/VSU pulse width must be 0.5 ms to 100 ms.
The pulse width for pulsed SMUs or VSUs must be 0.5 ms to 100 ms with 1 ms resolution in the PT command.
- 529** SMU/VSU pulse period must be 5 ms to 1 s.
The pulse period for pulsed SMUs and VSUs must be 5 ms to 1 s with 100 μ s resolution in the PT command.
- 530** SMU/VSU pulse trigger must be 0 ms to 32.7 ms.
The trigger out delay for pulsed SMUs and VSUs must be 0 to 32.7 ms in the PT command,
- 531** Improper measurement mode in MM command.
The MM command mode parameter value must be 1 to 5, or 10 to 11.
- 532** Only one meas unit when priority is 0 in PT.
When you set the priority parameter to 0 ("keep pulse width") in the PT command, only one measurement channel can be set for pulsed measurement in MM command.
- 533** Only one meas channel when init int < 2 μ s.
Only one measurement channel can be set when the initial interval is less than 2 μ s.
- 534** Measurement mode must be set by MM command.
The MM command must be used to set up a measurement mode *before* you can perform the measurement.
- 535** At least one meas. unit must be set in MM.
At least one measurement unit must be specified in the MM command.
- 536** Command order must be MT, MM, then XE.
The command order must be MT, MM, and then XE for sampling measurements.

- 537** Chan no cannot be set for stress force in MM.
The channel number cannot be set for stress force in the MM command.
- 538** Set PV/PI for meas. using pulse source.
Use the PV or PI command to set the pulse source for pulse spot measurement or sweep measurement with pulse bias.
- 539** At least one SYNC channel must be specified.
For stress force, SYNC channel (stress channel) must be assigned to at least one measurement unit *before* executing the XE command.
- 540** WV or WI must be set for sweep measurement.
Specify the sweep source using the WV or WI command *before* executing the XE command for a basic sweep or for a sweep measurement with pulse bias.
- 541** PWV/PWI must be set for pulse sweep meas.
The PWV or PWI command must be used to specify the pulsed SMU sweep source *before* executing the XE command for pulsed sweep measurement,.
- 542** Cal/Diag may not be performed on some units.
A calibration or a diagnostics may not be performed on some measurement units.
- 543** Cal/Diag failed. Cannot use the units.
Calibration or diagnostics failed. The units may be in need of service. Contact the nearest Agilent Technologies sales and service office.
- 544** 41501A/B is not turned on.
Unable to execute calibration or diagnostics. Turn the 41501A/B on and then cycle the mainframe power.
- 545** Unable to execute RZ before DZ.
The RZ command cannot be executed before the DZ command.
- 546** Start and stop value must be same when step=1.
The start and stop values must be the same when the number of steps is set to 1.

4155B/4156B FLEX Commands

- 547** Set WV/WI/PWV/PWI before WSV/WSI.
The sweep channel must be set using a WV, WI, PWV, or PWI command *before* the synchronous channel can be set using the WSV or WSI command.
- 548** CH num for pulse must differ from other sources.
For pulsed sweep measurement, the channel number for the pulsed SMU cannot be set to the same channel number for any other sources.
- 549** Ranging mode must be 0 to 3 (0 to 2 for VMU) in RV/RI.
For SMUs, the ranging mode parameter must be set to 0, 1, 2, or 3 in RV and RI command. For VMUs, the ranging mode parameter must be set to 0, 1, or 2 in the RV commands.
- 550** Ranging mode must be 0 or 1 in WI/WV/WSV/WSI/PWI/PWV.
The ranging mode parameter must be set to 0 or 1 in the WI, WV, WSV, WSI, PWI, and PWV commands.
- 551** Improper comp. polarity for manual polarity.
If you set the compliance polarity mode of the DI or DV command to manual, set the compliance as follows:
- If the specified source value is positive or zero, set the compliance value more positive than the source value.
 - If the specified source value is negative, set the compliance value less positive than the source value.
- 552** Sweep mode must be 1 to 4 in WI/WV/PWI/PWV.
The sweep mode parameter must be set to 1, 2, 3, or 4 in the WI, WV, PWI, and PW commands.
- 553** Num of steps in WI/WV/PWI/PWV must be 1 to 1001.
The number of sweep steps specified in the WI, WV, PWI, and PWV commands must be 1 to 1001.
- 554** Start/stop must be same pol and not 0 for log.
The start and stop value must be the same polarity and cannot be 0 (zero) for logarithmic measurements.

- 555** Base and pulse current must be same polarity.
When forcing pulsed current, SMU base current and pulse current must be set to the same polarity.
- 556** Unable to assign primary/sync. sweep to same CH.
The primary sweep source and the synchronous sweep source must be set to different units.
- 557** Improper WSI/WSV entry. Ignore returned value.
WSI or WSV command is missing. Or, WSI or WSV must be entered after WI, WV, PWI, or PWV command. The invalid source data will be returned.
- 558** Pulse mode must be 0 or 1 in PT command.
The pulse mode parameter must be set to 0 or 1 in the PT command.
- 559** Trigger output delay must be \leq pulse width.
The trigger output delay time must be \leq the pulse width.
- 560** Mode must be set to 0 or 1 in FL command.
The mode parameter must be set to 0 or 1 in the FL command.
- 561** Mode must be set to 1 or 2 in VM.
The mode parameter must be set to 1 or 2 in the VM command.
- 562** Incorrect trigger mode. Check TM syntax.
Incorrect trigger mode specified in the TM command. Check the syntax for the TM command, set the correct trigger mode number.
- 563** PGU pulse delay time must be 0 s to 10 s.
The PGU pulse delay time must be 0 to 10 s.
- 564** PGU pulse width must be 1 μ s to 10 s.
The PGU pulse width must be 1 μ s to 10 s.
- 565** PGU pulse period must be 1 μ s to 10 s.
The PGU pulse period must be 1 μ s to 10 s.

- 566** PGU leading time must be 100 ns to 10.0 ms.
The PGU leading-edge transition time must be 100 ns to 10.0 ms. The leading-edge transition time and trailing-edge transition time values must be in the same range. For details about setting the range, refer to Chapter 1 of *User's Guide: Measurement and Analysis*.
- 567** PGU trailing time must be 100 ns to 10.0 ms.
The PGU trailing-edge transition time must be 100 ns to 10.0 ms. The leading-edge transition time and trailing-edge transition time values must be in the same range. For details about setting range, refer to Chapter 1 of *User's Guide: Measurement and Analysis*.
- 568** PG pulse width/period/delay must be same range.
The PGU pulse width, pulse period, and pulse delay time must be in the same range. For details about the ranges, see Chapter 1 of *User's Guide: Measurement and Analysis*.
- 569** SMU pulse period must be \geq pulse width + 4 ms.
The SMU pulse period must be \geq pulse width + 4ms.
- 570** Offset mode must be set 0 or 1 in SOC command.
The offset mode parameter must be 0 or 1 in the SOC command.
- 571** Zero offset meas failed for the unit.
The offset value is too large, so the zero offset measurement aborted.
- 572** Too big offset for 10 pA range of the unit.
The offset value is too large, so the output offset cannot be canceled.
- 573** Range setup is wrong in GOC command.
The measurement range setup is incorrect in the GOC command. Check the command syntax.
- 574** Category must be 1 or 3 in SIT.
The category parameter must be 1 (short) or 3 (long) in the SIT command.
- 575** Integration time must be more than 0 s.
The integration time setup must be greater than 0 s.
- 576** System error. Unable to communicate with SMUC.

- The 4155B/4156B may be in need of service. Contact the nearest Agilent Technologies sales and service office.
- 577** Mode must be set 0, 1, or 2 in SPG command.
The mode parameter must be set to 0, 1, or 2 in the SPG command.
- 578** PGU pulse and base value must be $\leq \pm 40$ V.
The PGU pulse and base value must be $\leq \pm 40$ V in the SPG command.
- 579** Pulse count must be 0 to 65535 s in SPG.
The number of pulse count must be set to 0 to 65535 in the SPG command.
- 580** Pulse unit must be set by SPG before SRP.
Set the pulse parameters using the SPG command *before* using the SPR command to trigger the pulse output.
- 581** Set 0 or 1 to output impedance parameter in POR.
The output impedance parameter must be set to 0 or 1 in the POR command.
- 582** PGUs are not installed.
The SSP command failed because the PGUs are not installed.
- 583** Port number must be set to 0, 1, 2, or 3 in SSP.
The port number must be set to 0, 1, 2, or 3 in the SSP command.
- 584** Status must be set to 0, 1, 2, or 3 in SSP.
The 16440A selector status must be set to 0, 1, 2, or 3 in the SSP command.
- 585** Channel number must be set to 1 or 2 in RBC.
The 16441A R-Box channel number must be set to 1 or 2 in the RBC command.
- 586** Resistance must be set to 0, 1, 2, or 3 in RBC.
The 16441A R-Box resistance parameter must be set to 0, 1, 2, or 3 in the RBC command.

4155B/4156B FLEX Commands

- 587** Reference number must be 0 to 3 in STI/STV/STP.
The reference number must be set to 0, 1, 2, or 3 in the STI, STV, and STP commands.
- 588** Output mode must be set to 0 or 1 in STP.
The output mode parameter for the PGU pulse stress channel must be set to 0 or 1 in the STP command.
- 589** Stress mode must be set to 0, 1, or 2 in STT.
The stress mode parameter must be set to 0, 1, or 2 in the STT command.
- 590** Set 500 us to 655 s for time, or 1 to 65535 for count.

In the STT command, the stress duration time must be set from 500 μ s to 655 s for time mode. The duration pulse count must be 1 to 65535 for pulse count mode.
- 591** Pulse period must be 1 us to 10 s in STT.
Pulse period must be 1 μ s to 10 s in STT command.
- 592** Output mode must be set to 0 or 1 in MP.
The output mode parameter must be set to 0 or 1 in the MP command.
- 593** The specified programs are not stored.
Measurements were not performed. The specified programs by the program number are not stored in the internal program memory.
- 594** Start prog num must be \leq stop prog num in RU.
In the RU command, the start program number must be \leq the stop program number.
- 595** Program # must be 1 to 255 in DO/RU/SCR/LST?.
The program number must be 1 to 255 in the DO, RU, SCR, and LST? commands.
- 596** DO or RU command execution was aborted.
Execution of the DO or RU command was aborted by the AB command.

- 597** Measurement aborted. Interlock open while > 40 V.
The measurement execution was aborted because the interlock circuit is opened while forcing more than ± 40 V.
- 598** Network disabled. Improper network setup.
Unable to access the network. The network setup for the 4155B/4156B is not set or the setup is incorrect.
- 599** Disk must be set to 0, 1, 2, 3, or 4 in SDSK.
The identification to specify the disk drive must be set to 0, 1, 2, 3, or 4 in the SDSK command.
- 600** Open mode must be set to 0, 1, or 2 in OPEN.
The open mode must be set to 0, 1, or 2 in the OPEN command.
- 601** Printer must be 1, 2, 3, or 4 in SPR.
Identification for the printer must be set to 1, 2, 3, or 4 in SPR.
- 602** Data cannot be appended to a file on a diskette.
Unable to set 2 (appending data to a file) to the open mode in the OPEN command for a file on a diskette.
- 603** Incomplete network setup. Unable to mount disk.
The network setup for the disk connection must be complete before executing the SDSK command.
- 604** Cannot open two files. Close the opened file.
Cannot open two files at the same time. Use the CLOSE command to close the currently open file *before* opening another file.
- 605** Unable to open file.
Unable to open file specified by the OPEN command. Permission was denied or the file was not found.
- 606** Seek operation to the network disk failed.
Seek operation failed for opening the file. when appending the data. Verify the network is working properly.

4155B/4156B FLEX Commands

- 607** Unable to create the file specified in OPEN.
Unable to create the file specified in the OPEN command, because the file name is wrong or upper directory permission has been denied. When using a diskette, an HP LIF file name can be a maximum of 6 characters. A DOS file name can be a maximum of 8 characters. When using a network disk, a maximum of 36 characters are allowed in a file name.
- 608** Unable to close the file specified in CLOSE.
Unable to close the specified file using the CLOSE command. The file may not be open.
- 609** Unable to write or read. File is not opened.
Unable to write or read a specified file using the WR or RD? command because the file is not opened.
- 610** Read error occurred. Data or media corrupt.
The RD? command cannot be executed because the data or media is corrupted. This can be caused by a bad disk, the wrong format, a new reading started but not completed, or a network error occurred.
- 611** Write error occurred. Media corrupt or full.
The WR command cannot be executed because the media is corrupted or full. This can be caused by a bad disk, the wrong format, a full disk, or a network error.
- 612** PA command gets no return from SMUC.
Unable to communicate with the SMUC, or the SMUC lost data. The 4155B/4156B may be in need of service. Contact the nearest Agilent Technologies sales and service office.
- 613** Select printer registered in the MISC page.
Unable to select the printer using the SPR command, because the printer is not set in the NETWORK PRINTER SETUP table of the SYSTEM: MISCELLANEOUS screen.
- 614** Must select disk before executing SPL or PRN.
The SDSK command must be correctly executed *before* using the SPL command to spool or the PRN command to print.

- 615** Must select network printer before PRN.
Select a network printer using the SPR command *before* sending a PRN command to print.
- 616** Unable to connect server. Network problem.
Unable to connect to the print server. A cable may be disconnected, the network printer setup in the 4155B/4156B may be incorrect, or the network may not be functioning properly.
- 617** Unable to print out. LPD went down.
Unable to print out because no response was received when executing the PRN command. The LPD print server did not respond.
- 618** Unable to print out. Data transfer failed.
Data transfer failed while printing. A cable may be disconnected or the network may not be functioning properly. Abort the printing job, and try again.
- 619** Unable to delete spool file.
After printing the temporary spool file cannot be deleted. The network is not functioning properly.
- 620** Measurement aborted by AB command.
The measurement was aborted by the AB command.
- 621** Measurement aborted. Timeout occurred.
The measurement was aborted because a timeout occurred.
- 622** Meas./stress completed. Stop condition satisfied.
The measurement or forcing stress has been completed because measurement or stress completion condition was satisfied.
- 623** Measurement aborted. Data buffer full.
The measurement was aborted because the SMUC data buffer overflowed. Too many data points.
- 624** Measurement aborted. Reason unknown.
The measurement was aborted but the reason is unknown.

4155B/4156B FLEX Commands

- 625** Measurement mode must be 0, 1, 2 or 3 in CMM.
The measurement mode parameter must be set to 0, 1, 2 or 3 in the CMM command.
- 626** Unsupported file, or file name is wrong.
Requested file is of an unsupported file type, or the file name is wrong. When using a diskette, an HP LIF file name can be a maximum of 6 characters. A DOS file name can be a maximum of 8 characters. When using a network disk, a maximum of 36 characters are allowed in a file name.
- 627** PGU pulse period must be > pulse width.
The PGU pulse period must be > the pulse width.
- 628** PGU pulse period must be >= pulse delay.
The PGU pulse period must be \geq the pulse delay.
- 629** PGU leading time must be $\leq 0.8 \times$ pulse width.
The leading-edge transition time must satisfy the following equation.
$$\text{rise time} \leq \text{pulse width} \times 0.8$$
- 630** PGU trailing time must be $\leq 0.8 \times (\text{Period} - \text{Width})$.
The trailing-edge transition time must satisfy the following equation.
$$\text{fall time} \leq (\text{pulse period} - \text{pulse width}) \times 0.8$$
- 631** Emergency. Reason unknown.
An emergency occurred on an empty slot. Or an emergency occurred on an existing slot, but the reason is unspecified.
- 632** At least one PG must be set for pulse count mode.
When setting up the pulse count mode, at least one PGU must be set to stress source channel.
- 633** Auto calib must be 0 or 1 in CM.
The auto calibration parameter must be set to 0 or 1 in the CM command.
- 634** Level must be 1, 2, 4, 8, or 16 in US42.
The level parameter must be set to 1, 2, 4, 8, or 16 in the US42 command.

- 635** Type parameter setup is wrong in *LRN? command.
The type parameter must be set to 0 to 28, 30 to 34, or 39 to 48 in the *LRN? command.
- 636** Format must be 1 to 5 in FMT.
The format parameter must be set to 1 to 5 in the FMT command.
- 637** Mode must be 0, 1, or 2 in FMT.
The mode parameter must be set to 0, 1, or 2 in the FMT command.
- 638** Wait time must be 0 to 99.9999 s in PA.
The wait time must be set to 0 to 99.9999 sec in the PA command.
- 639** Mode must be 1 or 2 in WS.
The mode parameter must be set to 1 or 2 in the WS command.
- 640** Mode must be 0 or 1 in STG.
The mode parameter must be set to 0 or 1 in the STG command.
- 641** State must be 0 or 1 in STG.
The state parameter must be set to 0 or 1 in the STG command.
- 642** Polarity must be 0 or 1 in STG.
The polarity parameter must be set to 0 or 1 in the STG command.
- 643** Mode must be 0 or 1 in UNT?.
The mode parameter must be set to 0 or 1 in the UNT? command.
- 644** 4142ch must be 1 to 28 in ACH.
The 4142ch parameter must be set to 1 to 28 in the ACH command.
- 645** chnum must be 1 to 6, or 21 to 28 in ACH.
The channel number parameter must be set to 1 to 6, or 21 to 28 in the ACH command.
- 646** Averaging num must be -1023 to 1023 (not 0) in AV.
When using the US syntax for the AV command, the averaging number must be 1 to 1023. When using the US42 syntax of the AV command, the averaging number must be -1 to -1023. So 0 (zero) cannot be set for the averaging number.

4155B/4156B FLEX Commands

- 647** Averaging mode must be 0 or 1 in AV.
The averaging mode parameter must be set to 0 or 1 in the AV command.
- 648** Post sweep condition must be 1 or 2 in WM.
The post sweep condition for the staircase sweep source must be set to 1 or 2 in the WM command.
- 649** Abort condition setup is wrong in WM/MS/STM.
The abort parameter must be set to 1, 2, 4, 8, 16, or 32 in the WM, MS, and STM commands. When setting multiple abort conditions (allowed only for 4 to 32), specify sum of the abort values.
- 650** Hold time must be 0 to 655.35 s in WT.
The hold time must be set to 0 to 655.35 sec with 0.01 sec resolution in the WT command.
- 651** Delay time must be 0 to 65.535 s in WT.
The delay time must be set to 0 to 65.535 sec with 0.001 sec resolution in the WT command.
- 652** Step delay time must be 0 to 1 s in WT.
The step delay time must be set to 0 to 1 sec with 0.001 sec resolution in the WT command.
- 653** Number of data must be 0 to 20002 in RMD?.
The number of data parameters must be set to 0 to 20002 in the RMD? command.
- 654** Category must be 1, 2, or 3 in SLI command.
The category parameter must be set to 1, 2, or 3 in the SLI command.
- 655** Mode must be 0 (off) or 1 (on) in AZ.
Mode parameter must be set to 0 (Off) or 1 (on) in AZ command.
- 656** For pulse mode, pulse para must be set in STP.
When pulse mode is set, the delay time, pulse width, leading-edge transition time, and trailing-edge transition time must be set in the STP command.
- 657** Time or num of pulse must be set in STT.
The duration time or pulse count must be set in the STT command.

- 658** Base must be set when mode = 1 or 2 in SPG.
If the mode has been set to 1 or 2 (constant or pulse voltage output) in the SPG command., the PGU base value must be set.
- 659** Pulse para must be set when mode = 2 in SPG.
If the mode is set to pulse voltage output in the SPG command, the pulse parameter must be set.
- 660** Unable to use Free run to use program memory.
When using internal program memory, free run mode (continuous stress) cannot be used for stress force.
- 661** Improper stress time to use program memory.
Unable to perform free run mode (continuous stress) for stress when using the internal program memory. Or, setups for PGUs may be wrong in the STP or STP command.
- 662** Hold time must be -0.03 to 655.35 s in MT.
The hold time must be set to -0.03 to +655.35 sec in the MT command.
- 663** Interval must be 0.00006 to 65.534 s in MT.
The initial time interval must be set to 0.00006 to 65.534 sec in the MT command.
- 664** Sampling points must be 1 to 10001 in MT.
The number of sampling points must be 1 to 10001 in the MT command.
- 665** Hold time must be ≥ 0 when init int ≥ 2 ms.
The hold time must be ≥ 0 s, when the initial interval is set to ≥ 2 ms.
- 666** Pulse para must be set for pulse mode in MP.
The pulse parameters must be set when pulse output mode is set in the MP command.
- 667** Pulse count must be 0 to 65535 in MP.
The pulse count must be set to 0 to 65535 in the MP command.
- 668** Unable to use TV/TI&TV?/TI? in same program.
Unable to use the TV or TI and TV? or TI? commands in the same program. If a program contains a TV or TI commands, the TV? or TI? commands cannot be used.

4155B/4156B FLEX Commands

- 669** V force must be set for the chan set in GOC.
To execute a zero offset cancel, the voltage force mode must first have been set for the specified channels using the GOC command.
- 670** 10 (0.2 V range) must be set for VMU in GOC.
The measurement range must be 10 (0.2 V range) for the VMU in the GOC command.
- 671** Offset data was out of range or GOC failed.
The offset data measured was out of range, the GOC command execution failed.
- 672** VMU must be diff. mode when SOC is executed.
VMU must be set to differential mode when offset cancel is set to ON in the SOC command.
- 673** Primary and secondary sweep must be same force mode.
Primary and secondary sweep sources must be set to the same force mode.
- 674** Slot number must be 0 to 9 in *TST? command.
The slot number parameter must be set from 0 to 9 in the *TST? command.
- 675** Slot number must be 0 to 8 in CA command.
The slot number parameter must be set from 0 to 8 in the CA command.
- 676** This mode is only for the system with PGU.
The pulse count mode in the STT command cannot be used in an 4155B/4156B that does not have a PGU in the 41501A/B.

2 4145B Syntax Command Set

4145B Syntax Command Set

The 4145B Syntax command set has same syntax as the 4145A/B Semiconductor Parameter Analyzer command set.

So, you can execute the 4145A/B programs on the 4155B/4156B with minimum modification.

The differences between the 4145B Syntax commands and the 4145A/B commands are summarized in “Differences from 4145A/B Commands”.

This chapter describes the following:

- General Conventions
- Differences from the 4145A/B Commands
- Running the 4145A/B Program directly on the 4155B/4156B
- Reference: System Mode Commands
- Reference: User Mode Commands
- Reference: Common Mode Commands
- Service Request Status Byte

To Enter into 4145B Syntax Commands Mode

When the 4155B/4156B is turned on, the 4155B/4156B is always in the 4155B/4156B commands mode.

To enter into the 4145B syntax commands mode:

Front panel: on the SYSTEM: MISCELLANEOUS screen,
set `COMMAND SET` field to 4145.

Remote command: send `":SYSTem:LANGuage COMPatibility"` command to
the 4155B/4156B.

To Exit from 4145B Syntax Commands Mode

The command `*RST` exits the 4145B Syntax Commands Mode and returns to the 4155B/4156B command set.

General Conventions

Command Modes

There are three types of the 4145B Syntax commands:

System Mode commands: Only work in System Mode.

User Mode commands: Only work in User Mode.

Common commands: Work in both System and User Mode.

The default setting is System Mode. Therefore, the first command of a program must be a System or Common Mode command. A command issued in the wrong mode generates an error.

Changing the Command Mode

To change the command mode, use the appropriate command shown below:

- To change to User Mode, use the US command. Example:

```
OUTPUT @Hp415x; "US"
```

- To change to System Mode, use DE, SS, SM, or MD command. Example:

```
OUTPUT @Hp415x; "DE"
```

Command and Screens for System Mode

System Mode commands are related to a certain screen(s). A System Mode command must be executed on its related screen.

To change to the related screen, use a display changing command:

DE	Channel Definition screen
SS	Sweep Setup screen or Sampling Setup screen
SM	Display Setup screen. This corresponds to Display Setup, Measurement Setup, or Sampling Setup screen of the 4155B/4156B.
MD	Graph or List Display screen (depends on DM command)

Parameter Separator

Parameters must be separated by single commas (,).

String Parameter

All string parameters, for example, channel names and file names, must be enclosed in single quotes ('NAME').

The first character of a string parameter must be an uppercase alphabetical character or <whitespace>. The remaining characters must be uppercase alphabetical, numeric, or <whitespace>.

Real Parameter

Real numeric values can be entered in fixed or floating point format.

Example:

Fixed: 12.34 or -12.34

Floating: 1.23E+4 or 1.23E-4 or -1.23E+4 or -1.23E-4

Voltage (V), current (A), or time (S) units are not required after numeric values.

Semicolons and <whitespace>

A command can begin and end with multiple semicolons (;).

For example, ; ; ; CH1 ; ; ; CH2 is a legal command.

<whitespace> is allowed at the beginning or end of commands, and before and after parameters.

For example, CH1 , 'VNAME' , 'INAME' , 1, 1 is allowed.

<whitespace> is allowed between the command and the first parameter. For example, CH1 above can be CH 1.

Invalid Input

When invalid input generates a parsing error, the rest of the command is discarded until the next terminator (; or <CR> or <LF>). Then, the commands following this terminator are processed.

Differences from 4145A/B Commands

This section summarizes the differences between the 4145B syntax commands and the 4145A/B commands:

Non-supported Commands

The following 4145A/B commands are not supported in the 4145B syntax command mode:

GL0	Disables HP-GL
GL1	Enables HP-GL overlay graphics
GL2	Enables HP-GL stand-alone graphics
MX	Matrix
SH	Schmoo
SV S	Save ASP file
GT S	Get ASP file
DM3	Display mode Matrix
DM4	Display mode Schmoo
AS1	Auto Sequence Program Start
AS2	Auto Sequence Program Continue
AS3	Auto Sequence Program Stop

If you have the 4145A/B programs that include any of the above commands, they will not work with the 4155B/4156B.

Differences on Commands

CH

SMU channel number

4145A/B	4145 syntax
1 to 4	1 to 6

VR, IR

- START setting range is expanded to the 4155B/4156B's range.
- STOP setting range is expanded to the 4155B/4156B's range.
- STEP setting range is expanded to the 4155B/4156B's range.
- COMPLIANCE setting range is expanded to the 4155B/4156B's range.
- Setting resolution is same as the 4155B/4156B.

VP, IP

- START setting range is expanded to the 4155B/4156B's range.
- STEP setting range is expanded to the 4155B/4156B's range.
- Number of steps setting range is expanded to the 4155B/4156B's range.
- COMPLIANCE setting range is expanded to the 4155B/4156B's range.
- Setting resolution is same as the 4155B/4156B.

VC, IC

- SMU channel number

4145A/B	4145 syntax
1 to 4	1 to 6

- Output setting range is expanded to the 4155B/4156B's range
- Setting resolution is same as the 4155B/4156B

RT, FS

- VAR1' value

4145A/B	4145 syntax
$\text{VAR1}' = \text{VAR1} + \text{offset}$ or $\text{VAR1}' = \text{VAR1} * \text{ratio}$	$\text{VAR1}' = \text{VAR1} * \text{ratio} + \text{offset}$

- VAR1' ratio specification

4145A/B	4145 syntax
Applicable in LOG sweep only	Both ratio and offset work for LOG

WT, IN

- Wait/Interval time setting range is expanded to the 4155B/4156B's range.
- Availability

4145A/B	4145 syntax
Must be on DISPLAY SETUP screen	Can be on Display Setup, Measurement Setup, or Sampling Setup screen.

- Setting resolution is same as the 4155B/4156B.

NR

- No. of Readings (that is, number of samples) setting range is expanded to the 4155B/4156B's range
- Availability

4145A/B	4145 syntax
Must be in DISPLAY SETUP	Must be in Display Setup, Measurement Setup or Sampling Setup screen.

- Setting resolution is same as the 4155B/4156B.

4145B Syntax Command Set Differences on Commands

DM3, DM4

- Equivalent to DM1.
- Availability

4145A/B	4145 syntax
Must be in DISPLAY SETUP	Must be on Display Setup, Measurement Setup or Sampling Setup screen.

LI

Num. of Monitor Channels

4145A/B	4145 syntax
1 to 6	1 to 8

AS1,AS2,AS3

Controls IBASIC program instead of ASP.

SV

- File type S (ASP file) is *not* supported; generates an error.
- File name follows the 4155B/4156B file naming convention, but without the file extension.
- Comment is ignored.
- Supports both LIF and DOS media format.
- Creates the 4155B/4156B compatible file. Not 4145 compatible.

GT

- File type S (ASP file) is *not* supported; generates an error.
- File name follows the 4155B/4156B file naming convention, but without the file extension.
- Supports both LIF and DOS media format.
- Recognizes the 4155B/4156B and the 4145 compatible files.

DO

Channel name

4145A/B	4145 syntax
Measurement channel name only	Source, measure, user function, user variable names.

PR

- Changes screen to LIST Display prior to start printing.
- Printing format is the 4155B/4156B's data list format.

DV

- Channel number: 1 to 4, 7 to 8 for SMUs, 5 to 6 for VSUs, 9 to 10 for PGUs.
- 2 V and 200 V ranges are available.
- Output setting range is expanded to the 4155B/4156B's range.
- Compliance setting range is expanded to the 4155B/4156B's range.
- Setting resolution is same as the 4155B/4156B.

DI

- Channel number

4145A/B	4145 syntax
1 to 4	1 to 6

- 10 pA, 100 pA and 1 A output ranges are available.
- Output setting range is expanded to the 4155B/4156B's range.
- Compliance setting range is expanded to the 4155B/4156B's range.
- Setting resolution is same as the 4155B/4156B.

TV

Channel number

4145A/B	4145 syntax
1 to 4	1 to 6

IT

Integration time is same as the 4155B/4156B.

CA

Calibration time is different.

4145A/B	4145 syntax
about 4 sec	about 15 s to 50 s (depends on its configuration)

PL

Printing format is the 4155B/4156B's hard copy format.

ID

Response text is same as defined for IEEE488.2 *IDN response.

**All HP-GL
Commands**

All HP-GL Commands are not supported.

Running 4145A/B Program Directly on 4155B/4156B

This section describes how to directly run an 4145A/B control program (non-ASP program) on the 4155B/4156B with little or no modification. To run these programs directly, you need to use the *4145 syntax command mode* of the 4155B/4156B.

Usually, you can run these programs with no modification. But sometimes small modifications are required due to the differences from the 4145A/B on the following points:

- Spot Measurement
- Sweep Steps in Logarithmic Step Mode
- Terminator

For differences on commands, see “Differences from 4145A/B Commands” on page 2-5.

Spot Measurement

The 4145A/B can execute a spot measurement by setting both start and stop of the sweep to the same value, but the 4155B/4156B executes the measurement twice even if you set both start and stop of the sweep to the same value.

Sweep Steps in Logarithmic Step Mode

Calculation algorithm for primary sweep steps in logarithmic step mode is slightly different between the 4155B/4156B and the 4145A/B, so step values and number of steps may be different between the 4155B/4156B and the 4145A/B.

Terminator

If you run your program on an external controller, use <CR> + <LF> as the command terminator if you execute serial polling to read a status of the 4155B/4156B in your program.

If you use only <CR> or <LF> as command terminator, the 4155B/4156B may respond with incorrect status.

This is due to the differences of reading and parsing commands between the 4145A/B and the 4155B/4156B.

The following example and explanation gives a better understanding of this.

```
10 OUTPUT @Hp415x; "ME1"
20 REPEAT
30 Status=SPOLL (@Hp415x)
40 UNTIL BIT(Status, 0)
```

10 triggers measurement and clears the data ready bit (bit1) of status register.

20 to 40 waits until the data ready bit of status register is set to 1.

- When the Terminator is only <CR>

If the program controls the 4145A/B, at line 10:

1. The 4145A/B starts reading data with RFD line set to false (data bus is halted) after each byte.

In this example:

M → bus halted → E → bus halted → 1 → bus halted

2. After receiving 1, the 4145A/B recognizes valid command ME1, then executes ME1.

At this time, the program is paused because the controller is trying to send <CR>, which is a terminator, but the 4145A/B has halted data bus and does not receive <CR>.

3. After the 4145A/B triggers measurement and clears status bit1, the 4145A/B reads <CR>, then the program proceeds to next step (line 20).

The program reads the correct status at line 30.

4145B Syntax Command Set Terminator

If the program controls the 4155B/4156B, at line 10:

1. The 4155B/4156B starts and continues reading data until reading a terminator.

In this example, the 4155B/4156B reads ME1<CR>, then halts data bus.

2. The 4155B/4156B starts executing "ME1". At the same time, the external controller can proceed to the next line, because all data of this line has transferred, then program continues.

At line 30, controller can read status of the 4155B/4156B even if RFD line is false. RFD holdoff is not effective for serial polling.

However, the clearing of the status register bit by line 10 may not have been completed yet, so line 30 may get the incorrect status.

- When the Terminator is <CR> + <LF>

The example program for the 4155B/4156B performs as follows:

1. The 4155B/4156B starts and continues reading data until reading a terminator.

In this example, the 4155B/4156B reads ME1<CR>, then halts data bus.

2. The 4155B/4156B executes "ME1".

At this time, the program is paused because the controller is trying to send <LF>, which is part of the terminator, but the 4155B/4156B has halted data bus and does not receive <LF>.

3. After the 4155B/4156B triggers measurement and clears the status bit1, the 4155B/4156B reads <LF>, then the program proceeds to next step (line 20).

The program reads the correct status at line 30.

System Mode Commands

Table 2-1 **System Mode Commands (1 of 2)**

Category	Command	Description
Channel Definition	DE	Displays Channel Definition screen
	CH	Defines SMU operation mode and settings
	VM	Defines VMU settings
	VS	Defines VSU settings
Source Setup	SS	Displays Sweep Setup screen or Sampling Setup screen
	IC	Defines SMU constant current source setup
	IR	Defines SMU VAR1 current output source setup
	IP	Defines SMU VAR2 current output source setup
	VC	Defines SMU constant voltage source setup
	VR	Defines SMU VAR1 voltage output source setup
	VP	Defines SMU VAR2 voltage output source setup
	SC	Defines VSU constant voltage source setup
	RT	Defines VAR1' ratio
	FS	Defines VAR1' offset
	DT	Sets delay time
	HT	Sets hold time

Table 2-2

System Mode Commands (2 of 2)

Category	Command	Description
Sampling Setup	WT	Sets wait time
	IN	Sets sampling interval
	NR	Sets number of sampling points
	XT	Sets X-axis for sampling measurement
Display Setup	SM	Displays Display Setup screen
	DM	Selects display mode; GRAPH or LIST
	XN	Sets X-axis
	YA	Sets Y1-axis
	YB	Sets Y2-axis
	LI	Selects channels displayed on LIST screen
Measurement Display	MD	Displays GRAPH screen or LIST screen
	MX	No action
	SH	No action
Measurement Control	ME	Selects measurement mode, and executes measurement
Data Output	DO	Outputs measurement data
Program Execution Control	AS	Controls IBASIC program execution
File Operation	SV	Saves file
	GT	Gets file
Print Function	PR	Prints data list
	GL	No action

AS

The command controls the IBASIC program execution, instead of ASP execution.

Syntax

AS auto_seq_code

Parameter

Parameter	Explanation
<i>auto_seq_code</i>	1: Start 2: Continue 3: Stop

Description

AS3 pauses the IBASIC program; does not stop it.
Valid on any System Mode screen.

Example

OUTPUT @Hp4155; "AS1"

Corresponding Command

:PROG:STAT RUN | CONT | PAUS

CH

Defines the SMU name, mode, and function.

Syntax

CH *SMU_number*, 'VNAME', 'INAME', *mode*, *function*

Parameters

Parameter	Explanation
<i>SMU_number</i>	1 to 6
<i>VNAME</i>	up to 6 alphanumeric characters
<i>INAME</i>	up to 6 alphanumeric characters
<i>(source) mode</i>	1: V (voltage source) 2: I (current source) 3: common
<i>(source) function</i>	1: VAR1, 2: VAR2, 3: CONSTANT, 4: VAR1'

Description

Most recently executed display changing command must have been DE. The 4155B/4156B has up to 6 SMUs (depending on the configuration). If no parameters are specified after *SMU_number*, the channel is disabled. If *mode* is set to 3 (common), *function* must be set to 3 (CONSTANT).

Example

OUTPUT @Hp4155;"CH1, 'VNAME', 'INAME', 1, 2"
OUTPUT @Hp4155;"CH2" for disable

Corresponding Commands

:PAGE:CHAN:SMU<*smu num*>:VNAME 'VNAME'
:PAGE:CHAN:SMU<*smu num*>:INAME 'INAME'
:PAGE:CHAN:SMU<*smu num*>:MODE V | I | COMM
:PAGE:CHAN:SMU<*smu num*>:FUNC VAR1 | VAR2 | CONS | VARD
:PAGE:CHAN:SMU<*smu num*>:DIS for disable

DE

Changes mode to System Mode, then changes display to Channel Definition screen.

Syntax

DE

Example

OUTPUT @Hp4155;"DE"

Corresponding Command

:PAGE:CHAN

DM

Selects the display mode.

Syntax

DM *display_mode*

Parameter

Parameter	Explanation
<i>display_mode</i>	1: Graphics 2: List 3: Graphics 4: Graphics

Description

Most recently executed display changing command must have been SM.

DM determines whether the GRAPHICS or LIST screen is displayed when MD command is executed.

The 4145A/B Matrix (MX command) and Schmoo (SH command) are not supported.

- If DM is sent with parameter 3 or 4 (to select Matrix or Schmoo), it is equivalent to selecting parameter 1 (Graphics). And the display is changed to the Display Setup screen.
- If the MX or SH commands themselves are sent, no error is generated. The commands are simply ignored.

Example

OUTPUT @Hp4155;"DM1"

Corresponding Command

:PAGE:DISP:MODE GRAP | LIST

DO

Outputs measurement data of the specified channel (name) to the controller.

Syntax

DO 'name'

Parameter

Parameter	Explanation
(data) name	must be a name previously defined on the Channel Definition screen, User Function screen, or User Variable screen.

Response

status value <delimiter> [status value <delimiter>] <terminator>

Response	Explanation
(data) status	N T C P X V D A S N: Normal T: Other channel compliance error C: This channel compliance error P: PG exceeding current limit error X: Oscillation V: ADC overflow D: Insufficient data A: Arithmetic error S: Calculation stack overflow
value	4145 compatible format or IEEE488.2 <NR3 NUMERIC RESPONSE DATA> format. Selected by DP command.
<delimiter>	, or <CR> + <LF>. Selected by DL command.
<terminator>	<CR> + <LF> with or without EOI. Selected by EI command.

4145B Syntax Command Set

DO

Description

Measurement value name, source value name, user function name, or user variable name can be specified.

Valid on any System Mode screen.

Status D, A, and S reported only for user function value.

Example

Example 1: Response data is the 4145 compatible format

```
DIM A(1:3)
OUTPUT @Hp4155;"DO 'NAME' "
ENTER @Hp4155;A(*)
```

Response is in the 4145 compatible format:

```
N 0.0000E+00,N 100.00E-03,N 200.00E-03<CR><LF>^<END>
```

Example 2: Response data is NR3 format

```
DIM A(1:3)
OUTPUT @Hp4155;"DP1"
OUTPUT @Hp4155;"DO 'NAME' "
ENTER @Hp4155;A(*)
```

Response is in NR3 format:

```
N+0.000000E+000,N+1.000000E-001,N+2.000000E-001<CR><LF>^<END>
```

Corresponding Command

:TRAC? '*channel_name*' for query

DT

Sets the delay time for sweep.

Syntax

DT *delay_time*

Parameter

Parameter	Explanation
<i>delay_time</i>	0.000 s to 65.535 s

Description

Most recently executed display changing command must have been SS.

Example

OUTPUT @Hp4155;"DT 1.5"

Corresponding Command

:PAGE:MEAS:DEL *delay_time*

4145B Syntax Command Set
FS

FS

Sets the offset value of VAR1'.

Syntax

FS offset

Parameter

Parameter	Explanation
<i>offset</i>	real numeric value

Description

Most recently executed display changing command must have been SS.

The VAR1' output value is determined by the following equation:

$$\text{VAR1' value} = \text{VAR1 value} \times \text{ratio} + \text{offset}$$

Before executing this command, a unit must be defined to be VAR1' (the CH or VS command).

Example

OUTPUT @Hp4155;"FS 0.5"

Corresponding Command

:PAGE:MEAS:VARD:OFFS *offset*

GL

This command is ignored on the 4155B/4156B.

Syntax

GL

Description

The Graphics Language Mode (GL1) is not supported. If the GL command is sent, no error is generated; the next command is parsed.

4145B Syntax Command Set
GT

GT

Gets measurement setup and/or measurement results from file.

Syntax

GT ' *filetype*<space>*filename* '

Parameters

Parameter	Explanation
<i>filetype</i>	P or D P: Program File (measurement setup) D: Program/Data File (measurement setup and results)
<i>filename</i>	File name

The string parameter of GT must be enclosed in single quotes:
Example: GT ' P MYFILE '

Description

The 4145A/B *filetype* S (ASP File) is not supported and generates an error.

The file name should comply with the 4155B/4156B file naming conventions. Do not specify an extension (suffix) in the *filename*.

Handles both LIF and DOS format disk. Recognizes the 4155B/4156B and the 4145B compatible files.

Valid on any System Mode screen.

Example

OUTPUT @Hp4155;"GT ' P MYFILE ' "

**Corresponding
Commands**

:MMEM:LOAD:STAT 0, *filename* for P type files
:MMEM:LOAD:TRAC DEF *filename* for D type files

HT

Sets the hold time for sweep.

Syntax

HT *hold_time*

Parameter

Parameter	Explanation
<i>hold_time</i>	0.00 s to 655.35 s

Description

Most recently executed display changing command must have been SS.

Example

OUTPUT @Hp4155;"HT 1.5"

Corresponding Command

:PAGE:MEAS:HTIM *hold_time*

4145B Syntax Command Set
IC

IC

Sets the source parameters for an SMU that was defined to be a constant current source.

Syntax

IC *SMU_number, output_value, compliance*

Parameters

Parameter	Explanation
<i>SMU_number</i>	1 to 6
<i>output_value</i>	-0.1 to 0.1 A for SMU. -1 to 1 A for HPSMU.
<i>compliance</i>	-100 to 100 V for SMU. -200 to 200 V for HPSMU.

Description

Most recently executed display changing command must have been SS.
The specified SMU must be in the current (I) source mode.
The 4155B/4156B has up to 6 SMUs (depending on the configuration).
The source function of the specified SMU channel must be CONSTANT.
The *output_value* and *compliance* parameters must comply with the maximum voltage/current limitation of the corresponding module. And the range and resolution for these parameters is same as for the 4155B/4156B.

Example

OUTPUT @Hp4155;"IC1,1,200"

Corresponding
Commands

:PAGE:MEAS:CONS:SMU<smu num> *output_value*
:PAGE:MEAS:CONS:SMU<smu num>:COMP *compliance*

IN

Sets the initial sampling interval (Interval time of time domain measurement).

Syntax

IN *interval_time*

Parameter

Parameter	Explanation
<i>interval_time</i>	60 μ s to 65.532 s

Description

Most recently executed display changing command must have been SM.

For sampling measurement (time domain measurements), VAR1 cannot be selected on the Channel Definition screen.

The mode must be Sampling mode (that is, all functions must be CONSTANT). IN is not allowed in Sweep mode.

The *interval_time* range and resolution are the same as range and resolution of the 4155B/4156B initial sampling interval.

Example

OUTPUT @Hp4155;"IN 0.5"

Corresponding Command

:PAGE:MEAS:SAMP:IINT *interval_time*

4145B Syntax Command Set

IP

IP

Sets the sweep parameters for unit that was defined to be the VAR2 current sweep source.

Syntax

`IP start, step, num_of_steps, compliance`

Parameters

Parameter	Explanation
<i>start</i>	-0.1 to 0.1 A for SMU. -1 to 1 A for HPSMU.
<i>step</i>	-0.2 to 0.2 A for SMU. -2 to 2 A for HPSMU.
<i>num_of_steps</i>	1 to 128
<i>compliance</i>	-100 to 100 V for SMU. -200 to 200 V for HPSMU.

Description

Most recently executed display changing command must have been SS.

Before executing this command, a unit must be defined to be VAR2 (the CH command).

The VAR2 unit must be in the current (I) source mode. (So, VAR2 unit cannot be VSU).

The *start*, *step* and *compliance* parameters must comply with the maximum voltage/current limitation of the corresponding module. And the range and resolution for these parameters is same as for the 4155B/4156B.

Example

`OUTPUT @Hp4155;"IP0,0.2,5,200"`

Corresponding Commands

`:PAGE:MEAS:VAR2:STAR start`

`:PAGE:MEAS:VAR2:STEP step`

`:PAGE:MEAS:VAR2:POIN num_of_steps`

`:PAGE:MEAS:VAR2:COMP compliance`

IR

Sets the sweep parameters for unit that was defined to be the VAR1 current sweep source.

Syntax

IR *sweep_mode, start, stop, step, compliance*

Parameters

Parameter	Explanation
<i>sweep_mode</i>	1: Linear 2: Log 10 3: Log 25 4: Log 50
<i>start</i>	-0.1 to 0.1 A for SMU. -1 to 1 A for HPSMU.
<i>stop</i>	-0.1 to 0.1 A for SMU. -1 to 1 A for HPSMU.
<i>step</i>	0 to 0.2 A for SMU. 0 to 2 A for HPSMU.
<i>compliance</i>	-100 to 100 V for SMU. -200 to 200 V for HPSMU.

Description

Most recently executed display changing command must have been SS.

VAR1 unit must be in current (I) source mode. (VAR1 unit cannot be VSU).

If *sweep_mode* is not 1 (Linear), the *step* value should be omitted. If *step* value is included, it will be ignored; no error is generated.

The *start*, *stop*, *step* and *compliance* parameters must comply with the maximum voltage/current limitation of the corresponding module. And the range and resolution for these parameters is same as for the 4155B/4156B.

Example

OUTPUT @Hp4155;"IR1,0,1,0.01,200" *for Linear*

OUTPUT @Hp4155;"IR2,0,1,200" *for Log*

Corresponding Commands

:PAGE:MEAS:VAR1:SPAC LIN | L10 | L25 | L50

:PAGE:MEAS:VAR1:STAR *start*

:PAGE:MEAS:VAR1:STOP *stop*

:PAGE:MEAS:VAR1:STEP *step*

:PAGE:MEAS:VAR1:COMP *compliance*

4145B Syntax Command Set
LI

LI

Assigns channel names for List display.

Syntax

LI *'name' {, 'name' }*

Parameters

Parameter	Explanation
<i>(data) name</i>	from 1 to 8 names can be selected. The channel names must be names previously defined on the Channel Definition screen, User function screen, or User Variable screen.

Description

Most recently executed display changing command must have been SM. And DM2 must be executed.

The allowed number of channel names (eight) differs from the number allowed for the 4145A/B (six).

Example

OUTPUT @Hp4155;"LI 'NAME' "

OUTPUT @Hp4155;"LI 'NAME1', 'NAME2', 'NAME3', 'NAME4' "

Corresponding Command

:PAGE:DISP:LIST *'name', { 'name' }*

MD

Changes mode to System Mode, then changes screen to the LIST or GRAPH screen, depending on DM command.

Syntax	MD	
Example	OUTPUT @Hp4155;"MD"	
Corresponding Commands	:PAGE:GLIS	to graph display screen
	:PAGE:GLIS:LIST	to list display screen

4145B Syntax Command Set
ME

ME

Triggers measurement with the specified measurement execution mode.

Syntax

ME *meas_code*

Parameter

Parameter	Explanation
<i>meas_code</i>	1: Single 2: Repeat 3: Append 4: Stop

Description

Valid on any System Mode screen.

Example

OUTPUT @Hp4155; "ME1"

**Corresponding
Command**

:PAGE:SCON:SING | REP | APP | STOP

MX

This command is ignored on the 4155B/4156B.

Syntax

MX

Description

The Matrix Display Mode is not supported. If the MX command is sent, it is ignored; no error is generated.

Sending DM3 (set Display Mode to Matrix), however, changes the screen to the Display Setup screen, and uses the default values there.

4145B Syntax Command Set
NR

NR

Sets number of readings (that is, number of samples) for sampling measurement (time domain measurement).

Syntax

NR *num_readings*

Parameter

Parameter	Explanation
<i>num_readings</i>	1 to 10001

Description

Most recently executed display changing command must have been SM.

For sampling measurement (time domain measurements), VAR1 cannot be selected on the Channel Definition screen.

The mode must be Sampling mode (that is, all functions must be CONSTANT).

NR is not allowed in Sweep mode.

Example

OUTPUT @Hp4155;"NR 5"

Corresponding Command

:PAGE:MEAS:SAMP:POIN *num_readings*

PR

Changes screen to LIST Display screen, switches the hard copy language to PCL, then starts printing the data list.

Syntax

PR

Description

This command does not affect any print/plot parameters except the hard copy language.

Print out format is compatible with the 4155B/4156B.

Valid on any System Mode screen.

Corresponding Commands

:PAGE:GLIS:LIST

:HCOP:DEV:LANG PCL

:HCOP:ITEM:ALL

4145B Syntax Command Set

RT

RT

Sets the ratio value for the unit that was defined to be VAR1'.

Syntax

RT *ratio*

Parameter

Parameter	Explanation
<i>ratio</i>	real numeric value

Description

Most recently executed display changing command must have been SS.

The VAR1' output value is determined by the following equation:

$\text{VAR1' value} = \text{VAR1 value} \times \text{ratio} + \text{offset}$

Before executing this command, a unit must be defined to be VAR1' (the CH or VS command).

Example

OUTPUT @Hp4155;"RT 0.1"

Corresponding Command

:PAGE:MEAS:VARD:RAT *ratio*

SC

Sets the source parameters for a VSU that was defined to be a constant source.

Syntax

SC Vs_u_number, output_value

Parameters

Parameter	Explanation
<i>Vsu_number</i>	1 to 2
<i>output_value</i>	-20 V to 20 V

Description

Most recently executed display changing command must have been SS.

The specified VSU must have been defined to be a CONSTANT source (VS command).

The range and resolution for the *output_value* parameter are same as for the 4155B/4156B.

Example

OUTPUT @Hp4155;"SC1,10"

Corresponding Command

:PAGE:MEAS:CONS:VSU<vs_u num> output_value

4145B Syntax Command Set
SH

SH

This command is ignored on the 4155B/4156B.

Syntax

SH

Description

The Schmoo Display Mode is not supported. If the SH command is sent, it is ignored; no error is generated.

Sending DM4 (set Display Mode to Schmoo), however, changes the screen to the Display Setup screen, and uses the default values there.

SM

Changes mode to System Mode, then changes screen to Display Setup screen ("Meas Disp Mode Setup" on the 4145A/B).

Syntax	SM	
Description	On the 4145A/B, the SM command changes to the "Measurement and Display Mode Setup" screen. On the 4155B/4156B, there are 3 corresponding screens: Display Setup, Sampling Setup, and Measurement Setup. SM changes the screen to Display Setup screen.	
Example	OUTPUT @Hp4155; "SM"	
Corresponding Commands	: PAGE : DISP	for Display Setup screen
	: PAGE : MEAS : SAMP	for Sampling Setup screen
	: PAGE : MEAS : MSET	for Measurement Setup screen

4145B Syntax Command Set

SS

SS

Changes mode to System Mode, then changes screen to Sweep Setup screen ("Source Setup" on the 4145A/B) if the previous measurement mode is the sweep measurements, or Sampling Setup screen if the previous measurement mode is the sampling measurements.

Syntax

SS

Example

OUTPUT @Hp4155;"SS"

Corresponding Command

:PAGE:MEAS

SV

Saves measurement setup and/or measurement results into file.

Syntax

SV '*filetype*<space>*filename*<space>*comment*'

Parameters

Parameter	Explanation
<i>filetype</i>	P or D P: Program File (measurement setup) D: Program/Data File (measurement setup and results)
<i>filename</i>	File name
<i>comment</i>	(ignored) User's comment

The string parameter of SV must be enclosed in single quotes:
Example: SV 'P MYFILE'

Description

The 4145A/B *filetype* S (ASP File) is not supported and generates an error.

The file name should comply with the 4155B/4156B file naming conventions. The extension is added automatically, so do not specify an extension (suffix) in the *filename*.

The second <space> and the *comment* are optional. Ignored if specified.

Handles both LIF and MS-DOS format disk. Creates the 4155B/4156B compatible file; not 4145B compatible file. Valid on any System Mode screen.

Example

OUTPUT @Hp4155;"SV'P MYFILE COMMENT'"

Corresponding Commands

:MMEM:STOR:STAT 0, *filename* for P type files

:MMEM:STOR:TRAC DEF *filename* for D type files

4145B Syntax Command Set
VC

VC

Sets the source parameters for an SMU that was defined to be a constant voltage source.

Syntax

VC SMU_number, output_value, compliance

Parameters

Parameter	Explanation
<i>SMU_number</i>	1 to 6
<i>output_value</i>	-100 to 100 V for SMU. -200 to 200 V for HPSMU.
<i>compliance</i>	-0.1 to 0.1 A for SMU. -1 to 1 A for HPSMU.

Description

Most recently executed display changing command must have been *SS*.
The 4155B/4156B has up to 6 SMUs (depending on the configuration).
The CONSTANT SMU must be in the voltage (V) source mode.
The source function of the specified SMU channel must be CONSTANT.
The *output_value* and *compliance* parameters must comply with the maximum voltage/current limitation of the corresponding module. And the range and resolution for these parameters is same as for the 4155B/4156B.

Example

OUTPUT @Hp4155;"VC1,10,0.1"

Corresponding
Commands

:PAGE:MEAS:CONS:SMU<smu_num> output_value
:PAGE:MEAS:CONS:SMU<smu_num>:COMP compliance

VM

Defines the VM name.

Syntax

VM *Vm_number*, 'VNAME'

Parameters

Parameter	Explanation
<i>Vm_number</i>	1 to 2
<i>VNAME</i>	up to 6 alphanumeric characters

Description

Most recently executed display changing command must have been DE.
If no parameters are specified after *Vm_number*, the channel is disabled.

Example

OUTPUT @Hp4155;"VM1, 'VNAME' "

Corresponding Commands

Define Channel:
:PAGE:CHAN:VMU<*vm num*>:VNAME 'VNAME'
Disable:
:PAGE:CHAN:VMU<*vm num*>:DIS

4145B Syntax Command Set
VP

VP

Sets the sweep parameters for the unit that was defined to be the VAR2 voltage sweep source.

Syntax

VP start, step, num_of_steps, compliance

Parameters

Parameter	Explanation
<i>start</i>	-100 to 100 V for SMU. -200 to 200 V for HPSMU. -20 to 20 V for VSU.
<i>step</i>	-200 to 200 V for SMU. -400 to 400 V for HPSMU. -40 to 40 V for VSU.
<i>num_of_steps</i>	1 to 128
<i>compliance</i>	-0.1 to 0.1 A for SMU. -1 to 1 A for HPSMU.

Description

Most recently executed display changing command must have been SS.

Before executing this command, a unit must be defined to be VAR2 (the CH or VS command).

The VAR2 unit must be in the voltage (V) source mode.

If the VAR2 unit is a VSU, the *compliance* parameter is ignored.

The *start*, *step* and *compliance* parameters must comply with the maximum voltage/current limitation of the corresponding module. And the range and resolution for these parameters is same as for the 4155B/4156B.

Example

OUTPUT @Hp4155; "VP0, 20E-6, 5, 1"

Corresponding
Commands

:PAGE:MEAS:VAR2:STAR *start*
:PAGE:MEAS:VAR2:STEP *step*
:PAGE:MEAS:VAR2:POIN *num_of_steps*
:PAGE:MEAS:VAR2:COMP *compliance*

VR

Sets the sweep parameters for unit that was defined to be the VAR1 voltage sweep source.

Syntax

VR *sweep_mode, start, stop, step, compliance*

Parameters

Parameter	Explanation
<i>sweep_mode</i>	1: Linear 2: Log 10 3: Log 25 4: Log 50
<i>start</i>	-100 to 100 V for SMU. -200 to 200 V for HPSMU. -20 to 20 V for VSU.
<i>stop</i>	-100 to 100 V for SMU. -200 to 200 V for HPSMU. -20 to 20 V for VSU.
<i>step</i>	0 to 200 V for SMU. 0 to 400 V for HPSMU. 0 to 40 V for VSU.
<i>compliance</i>	-0.1 to 0.1 A for SMU. -1 to 1 A for HPSMU.

Description

Most recently executed display changing command must have been SS.

The VAR1 module must be in the voltage (V) source mode.

If *sweep_mode* is not 1 (Linear), the *step* value should be omitted. If *step* value is included, it will be ignored; no error is generated.

If the VAR1 module is VSU, the *compliance* parameter is ignored.

The *start*, *stop*, *step* and *compliance* parameters must comply with the maximum voltage/current limitation of the corresponding module. And the range and resolution for these parameters is same as for the 4155B/4156B.

Example

OUTPUT @Hp4155; "VR1,0,1,0.01,100E-3" *for Linear*

OUTPUT @Hp4155; "VR2,0,1,100E-3" *for Log*

Corresponding Commands

```
:PAGE:MEAS:VAR1:SPAC LIN | L10 | L25 | L50
:PAGE:MEAS:VAR1:STAR start
:PAGE:MEAS:VAR1:STOP stop
:PAGE:MEAS:VAR1:STEP step
:PAGE:MEAS:VAR1:COMP compliance
```

4145B Syntax Command Set
VS

VS

Defines the VSU name and function.

Syntax

VS *Vsu_number*, 'VNAME', *function*

Parameters

Parameter	Explanation
<i>Vsu_number</i>	1 to 2
<i>VNAME</i>	up to 6 alphanumeric characters
<i>(source) function</i>	1: VAR1 2: VAR2 3: CONSTANT 4: VAR1'

Description

Most recently executed display changing command must have been DE.

If no parameters are specified after *Vsu_number*, the channel is disabled.

Example

OUTPUT @Hp4155;"VS1,'VNAME',1"

OUTPUT @Hp4155;"VS2"

for Disable

Corresponding
Commands

Define Channel:

:PAGE:CHAN:VSU<*vsu num*>:VNAM 'VNAME'

:PAGE:CHAN:VSU<*vsu num*>:FUNC VAR1 | VAR2 | CONS | VARD

Disable:

:PAGE:CHAN:VSU<*vsu num*>:DIS

WT

Sets the hold time for sampling.

Syntax

WT *wait_time*

Parameter

Parameter	Explanation
<i>wait_time</i>	-30.0 ms to 838.8607 s

Description

Most recently executed display changing command must have been SM.

For time domain measurements (sampling measurement), VAR1 cannot be selected on the Channel Definition screen.

The mode must be Sampling mode (that is, all functions must be CONSTANT).
`WT" is not allowed in Sweep mode.

The *wait_time* range and resolution are the same as the range and resolution of the 4155B/4156B sampling hold time.

Example

OUTPUT @Hp4155;"WT 1.5"

Corresponding Command

:PAGE:MEAS:SAMP:HTIM *hold_time*

XN, YA, YB

These commands set the graphics axis parameters.

Syntax

XN | YA | YB 'data_name', scale, min, max

- XN = X axis (for sweep only; for sampling, use XT)
- YA = Y1 axis
- YB = Y2 axis

Parameters

Parameter	Explanation
<i>data_name</i>	must be a name previously defined on the Channel Definition screen, User Function screen, or User Variable screen.
<i>scale</i>	1: Linear 2: Logarithmic
<i>min (value)</i>	real numeric value
<i>max (value)</i>	real numeric value

Description

Most recently executed display changing command must have been SM. And DM1 must be executed.

For Sweep, VAR1 must be set up. And you can use XN, YA, and YB.

For Sampling, do not use VAR1 (that is, all functions must be CONSTANT). And you can use YA and YB. For X axis, do not use XN. Use XT.

The Y2 axis (YB) is optional; the YB command can be omitted.

Example

OUTPUT @Hp4155;"XN 'NAME', 1, 0, 10"

Corresponding Commands

```
:PAGE:DISP:GRAP:X|Y1|Y2:NAME var_name
:PAGE:DISP:GRAP:X|Y1|Y2:SCAL LIN|LOG
:PAGE:DISP:GRAP:X|Y1|Y2:MIN min_value
:PAGE:DISP:GRAP:X|Y1|Y2:MAX max_value
```

XT

Sets the graphics parameters (X axis only) for sampling measurement (time domain measurement).

Syntax

`XT min,max`

Parameters

Parameter	Explanation
<i>min (value)</i>	real numeric value
<i>max (value)</i>	real numeric value

Description

Most recently executed display changing command must have been SM. And DM1 must be executed.

For sampling measurement (time domain measurements), VAR1 cannot be selected. Mode must be Sampling (that is, all functions must be CONSTANT). XT is not allowed in Sweep mode.

Scale is Linear for sampling measurement (time domain measurement.)

For setting Y1 and Y2 axis, use the YA and YB commands.

Example

`OUTPUT @Hp4155;"XT 0,10"`

Corresponding Commands

`:PAGE:DISP:GRAP:X:MIN min_value`
`:PAGE:DISP:GRAP:X:MAX max_value`

User Mode Commands

Table 2-3 **User Mode Commands**

Command	Description
DI	SMU Output (Current Source)
DS	VSU Output
DV	SMU Output (Voltage Source)
GL	Graphics Language (GL2) Mode
TI	Triggering Measurement (Current Monitor)
TV	Triggering Measurement (Voltage Monitor)

HP-GL commands are not supported. For details, refer to “HP-GL Commands” on page 2-59.

DI

Triggers current output from specified SMU.

Syntax

DI *SMU_number, output_range, output_value, compliance*

Parameters

Parameter	Explanation
<i>SMU_number</i>	1 to 6
<i>output_range</i>	-2: 10 pA (only for 4156B) -1: 100 pA (only for 4156B) 0: AUTO 1: 1 nA 2: 10 nA 3: 100 nA 4: 1 µA 5: 10 µA 6: 100 µA 7: 1 mA 8: 10 mA 9: 100 mA 10: 1 A (only for HPSMU)
<i>output_value</i>	-0.1 to 0.1 A for SMU. -1 to 1 A for HPSMU.
<i>compliance</i>	-100 to 100 V for SMU. -200 to 200 V for HPSMU.

Description

The 4155/4156B can have up to 6 SMUs. *output_range*, *output_value*, and *compliance* must comply with maximum voltage/current of corresponding module. If not, error is generated same as for the 4155B/4156B. Range and resolution for these parameters is same as for the 4155B/4156B. If no parameters after *SMU_number*, SMU is disabled.

Example

```
OUTPUT @Hp4155;"DI1,0,9.876E-3,10"  
OUTPUT @Hp4155;"DI4"                for disable
```

DS

Triggers voltage output from specified VSU.

Syntax

DS Vsus_number, output_value

Parameters

Parameter	Explanation
<i>Vsu_number</i>	1 to 2
<i>output_value</i>	-20 V to 20 V

Description

If no parameters are specified after *Vsu_number*, the channel is disabled.

Example

OUTPUT @Hp4155;"DS2,10.0"

OUTPUT @Hp4155;"DS1 " for disable

DV

Triggers voltage output from specified SMU, VSU, or PGU.

Syntax

DV *channel_number, output_range, output_value, compliance*

Parameters

Parameter	Explanation
<i>channel_number</i>	1: SMU1, 2: SMU2, 3: SMU3, 4: SMU4, 5: VSU1, 6: VSU2, 7: SMU5, 8: SMU6, 9: PGU1, 10: PGU2.
<i>output_range</i>	-1: 2 V (for SMU and HPSMU) 0: AUTO 1: 20 V 2: 40 V (for SMU, HPSMU and PGU) 3: 100 V (for SMU and HPSMU) 4: 200 V (only for HPSMU)
<i>output_value</i>	-100 to 100 V for SMU. -200 to 200 V for HPSMU. -20 to 20 V for VSU. -40 to 40 V for PGU.
<i>compliance</i>	-0.1 to 0.1 A for SMU. -1 to 1 A for HPSMU.

Description

The 4155B/4156B can have up to 6 SMUs. DV can trigger a VSU, PGU, or SMU. For non-SMUs, *compliance* is ignored.

If no parameters are specified after *channel_number*, channel is disabled. The *output_range*, *output_value* and *compliance* parameters must comply with the maximum voltage/current limitation of the corresponding module. Otherwise, an error is generated the same as for the 4155B/4156B. And the range and resolution for these parameters is same as for the 4155B/4156B.

Example

OUTPUT @Hp4155;"DV1,0,12.34,0.001"
OUTPUT @Hp4155;"DV2" for disable

GL

This command is ignored on the 4155B/4156B.

Syntax

GL

Description

The Graphics Language Mode (GL2) is not supported. If the GL command is sent, no error is generated; the next command is parsed.

TI

Triggers current measurement by specified unit, then outputs measurement result data to controller.

Syntax TI *channel_number*

Parameter

Parameter	Explanation
<i>channel_number</i>	1: SMU1, 2: SMU2, 3: SMU3, 4: SMU4, 7: SMU5, 8: SMU6

Response *status channel I value <terminator>*

Response	Explanation
<i>(data) status</i>	N T C P X V N: Normal T: Other channel compliance error C: This channel compliance error P: PG exceeding current limit error X: Oscillation V: ADC overflow
<i>channel</i>	A B C D G H A: SMU1 B: SMU2 C: SMU3 D: SMU4 G: SMU5 H: SMU6
<i>value</i>	4145 compatible format or IEEE488.2 <NR3 NUMERIC RESPONSE DATA> format. Selected by DP command.
<terminator>	<CR> + <LF> with or without EOI. Selected by EI command.

4145B Syntax Command Set

TI

Description

The 4155/56B has up to 6 SMUs (depending on the configuration).

The command applies the range and resolution specifications of the 4155B/4156B for the measurement.

Example

OUTPUT @Hp4155;"TI7"

ENTER @Hp4155 USING "A,A,A,K";S\$,C\$,M\$,V

Response in the 4145 compatible format:

NGI 7.6543E-03<CR><LF>^<END>

Response in NR3 format:

NGI+7.654321E-003<CR><LF>^<END>

TV

Triggers voltage measurement by specified unit, then outputs measurement result data to controller.

Syntax

TV *channel_number*

Parameter

Parameter	Explanation
<i>channel_number</i>	1: SMU1, 2: SMU2, 3: SMU3, 4: SMU4, 5: VMU1, 6: VMU2, 7: SMU5, 8: SMU6

Response

status channel V value <terminator>

Response	Explanation
<i>(data) status</i>	N T C P X V N: Normal T: Other channel compliance error C: This channel compliance error P: PG exceeding current limit error X: Oscillation V: ADC overflow
<i>channel</i>	A B C D G H A: SMU1 B: SMU2 C: SMU3 D: SMU4 E: VMU1 F: VMU2 G: SMU5 H: SMU6
<i>value</i>	4145 compatible format or IEEE488.2 <NR3 NUMERIC RESPONSE DATA> format. Selected by DP command.
<i><terminator></i>	<CR> + <LF> with or without EOI. Selected by EI command.

4145B Syntax Command Set

TV

Description

The 4155B/4156B has up to 6 SMUs (depending on the configuration).

The command applies the range and resolution specifications of the 4155B/4156B for the measurement.

Example

```
OUTPUT @Hp4155;"TV2"  
ENTER @Hp4155 USING "A,A,A,K";S$,C$,M$,V
```

Response in the 4145 compatible format:

```
NBV1.2345E+00<CR><LF>^<END>
```

Response in NR3 format:

```
NBV+1.234567E+000<CR><LF>^<END>
```

HP-GL Commands

The following User Mode HP-GL Commands (VECTOR, CHARACTER, LINE TYPE, AXES, SETUP, and CONFIGURATION & STATUS Groups) are not supported. However, inputting these commands does not generate an error. Input until the next terminator (; or CR or LF) is ignored. For example, if the line "PU;DE" were sent, only DE would be executed.

VECTOR Group

- PU (Pen Up)
- PD (Pen Down)
- PA (Plot Absolute)
- PR (Plot Relative)

CHARACTER Group

- CS (Designates Standard Character Set)
- LB (Label)
- DR (Relative Direction)
- SR (Relative Character Size)
- CP (Character Plot)

LINE TYPE Group

- LT (Line Type)
- SP (Pen Select)
- VS (Velocity Select)

AXES Group

- XT (X Tick)
- YT (Y Tick)

SETUP Group

- IP (Input P1 and P2)
- OP (Output P1 and P2)
- IW (Input Window)

CONFIGURATION and STATUS Group

- DF (Default)
- IN (Initialize)
- IM (Input Mask)
- OE (Output Error)
- OS (Output Status)

Common Mode Commands

Table 2-4

Common Mode Commands

Command	Description
BC	GPIB Data Output Buffer Clear
CA	Auto-Calibration
DC	Calibration on Device Clear
DL	Delimiter
DP	Double Precision
DR	Data Ready Service Request
EI	Terminator
ID	Identification Output
IT	Integration Time
PF	Print/Plot Function Abort
PL	Plotting Function
SF	Self-Test

BC

This command clears the GPIB data output buffer and bit 1 (Data Ready) of the 4145B syntax mode status byte.

Syntax

BC

Description

A Buffer Clear must be performed before data output.

Corresponding Command

No 4155B/4156B command exactly corresponds to the BC command.
On the 4155B/4156B, Device Clear performs this operation.

4145B Syntax Command Set
CA

CA

Auto-Calibration

Syntax

CA *auto-calibration*

Parameters

Parameter	Explanation
<i>auto-calibration</i>	0: off 1: on

Description

For System Mode, CA1 enables auto-calibration.

For User Mode, CA1 performs calibration immediately, but does not enable auto-calibration.

If the mode changes (SYSTEM to USER or USER to SYSTEM), auto-calibration is turned off.

Example

OUTPUT @Hp4155; "CA1"

Corresponding
Commands

:CAL:AUTO ON | OFF

This command enables/disables auto-calibration only; does not actually perform calibration.

No 4155B/4156B command exactly corresponds to CA command.

The *CAL? query performs calibration, and returns result response. The CA command does not return the result response.

DC

This command selects whether the calibration is performed or not on sending Device Clear.

Syntax

`DC calibration`

Parameters

Parameter	Explanation
<i>calibration</i>	1: does not perform calibration 2: performs calibration

Description

Default setting is 1.

Example

`OUTPUT @Hp4155;"DC2"`

4145B Syntax Command Set
DL

DL

This command selects delimiter of output data.

Syntax

DL *delimiter*

Parameter

Parameter	Explanation
<i>delimiter</i>	1: comma 2: <CR><LF>

Description

This command selects data delimiter of output data specified by DO command in System mode.

Default setting is comma (DL1).

Example

```
OUTPUT @Hp4155;"DL2"  
OUTPUT @Hp4155;"DO 'NAME' "  
ENTER @Hp4155;A(*)
```

Response:

```
N 0.0000E+00<CR><LF>N 100.00E-03<CR><LF>N 200.00E-03<CR>  
<LF>^<END>
```

DP

This command selects precision of output data.

Device Clear does not affect the setting of this command.

SyntaxDP double_precision

Parameter

Parameter	Explanation
double_precision	0: 4145 compatible format 1: double precision (NR3 format)

Description

In the 4145 syntax command mode, default data length of response data corresponding to DO, TI, and TV commands is same as the 4145. DP command can change the data length of response data to double precision, which is standard data precision of the 4155B/4156B.

Double precision format of response data for each command is as follows:

- DO (System mode)

X±N.NNNNNNE±NNN<delimiter> . . . X±N.NNNNNNE±NNN<CR><LF>^<END>

where,

X: Data Status

N: Measurement Data
- TV or TI (User mode)

XXX±N.NNNNNNE±NNN<CR><LF>^<END>

where,

X: Data Status

N: Measurement Data

DR

Enables the Data Ready Service Request.

Syntax

DR *service_request*

Parameters

Parameter	Explanation
<i>service_request</i>	0: off 1: on

Description

If Data Ready Service Request is on, bit 1 (Data Ready) and bit 7 (RQS) of the 4145B syntax mode status byte are set to 1 when measurement data is valid.

If Data Ready Service Request is off, only bit 1 (Data Ready) of the 4145B syntax mode status byte is set to 1 when measurement data is valid.

Corresponding Command

No 4155B/4156B command exactly corresponds to the DR command.

:STAT:OPER:ENAB causes the 4155B/4156B to perform a similar operation, but on a different status register.

EI

This command selects data terminator of output data.

Syntax

EI *terminator*

Parameters

Parameter	Explanation
<i>terminator</i>	0: <CR><LF>
	1: <CR><LF> with EOI, where EOI means ^<END>

Description

Default setting is 1.

Example

OUTPUT @Hp4155;"EI0"

4145B Syntax Command Set
ID

ID

Returns the identification string, which contains the 4155B/4156B model and revision numbers.

Syntax

ID

Response

HEWLETT-PACKARD, *model#*, 0, *HOSTC_rev*: *SMUC_rev*: *ADC_rev*<term>

Response	Explanation
<i>Model#</i>	4155B 4156B
<i>HOSTC_rev</i>	nn.nn
<i>SMUC_rev</i>	nn.nn
<i>ADC_rev</i>	nn.nn
<term>	<CR> + <LF> with or without EOI. Selected by EI command.

Example

```
DIM A$[101]
OUTPUT @Hp4155;"ID"
ENTER @Hp4155;A$
```

Response:

HEWLETT-PACKARD, 4155B, 0, 01.00:01.00:01.00<CR><LF>^<END>

NOTE

For the 4145A/B, ID returns 16 characters. For the 4155B/4156B, ID returns 41 characters. So, you need to make sure the data string variable is large enough to contain the returned characters.

Corresponding Command

*IDN? for query

IT

This command sets the integration time to SHORT, MEDIUM or LONG, according to the 4155B/4156B integration time definition; does not comply with the 4145A/B integration time definition.

Syntax

IT *integ_time*

Parameter

Parameter	Explanation
<i>integ_time</i>	1: SHORT 2: MEDIUM 3: LONG

Description

The 4155B/4156B setting for SHORT and LONG integration time is effective for the 4145B syntax mode. There is no way to change these values from the 4145B syntax command set. However, these values are reset to default when the 4155B/56B switches to the 4145B syntax mode. So, these values are default values until operator changes the values at front panel after 4155B/4156B has switched into the 4145B syntax mode.

Example

OUTPUT @Hp4155;"IT1"

Corresponding Command

:PAGE:MEAS:MSET:ITIM SHOR | MED | LONG

PF

This command aborts the printing or plotting that is currently being performed.

Syntax

PF

Corresponding Command

:HCOP:ABOR

PL

This command calculates and sets up the 4155B/56B Output Region according to the specified parameters and the paper size.

Syntax

PL *x_min, y_min, x_max, y_max*

Parameters

Parameter	Explanation
<i>x_min (value)</i>	0 to 65535
<i>y_min (value)</i>	0 to 65535
<i>x_max (value)</i>	0 to 65535
<i>y_max (value)</i>	0 to 65535

Description

If the calculation result exceeds 100%, it will be rounded down to 100%.

After setting the Output Region, the command switches the hard copy language to HP-GL, then starts plotting the present screen.

This command does not affect any print/plot parameters except the hard copy language.

Plot format is compatible with the 4155B/4156B.

**Corresponding
Commands**

:HCOP:PAGE:DIM:LLEF *x, y*
:HCOP:PAGE:DIM:URIG *x, y*
:HCOP:DEV:LANG HPGL
:HCOP:ITEM:ALL

4145B Syntax Command Set

SF

SF

Executes the built-in self-test of the 4155B/4156B.

Syntax

SF

Description

Bit 3 of the 4145B syntax mode status byte is set when self-test is completed.

Example

OUTPUT @Hp4155;"SF"

**Corresponding
Command**

:DIAG:TEST 111

4145B Syntax Mode Status Byte

In general, the bit assignment of the status byte in the 4145B syntax command mode is identical to the 4145 definition.

Bit No.	Description
Bit 1	Data Ready
Bit 2	Syntax Error
Bit 3	END Status
Bit 4	Illegal Program
Bit 5	Busy
Bit 6	Self-test Fail
Bit 7	RQS
Bit 8	Emergency