
Quick Start Guide

HP 70340A/41A

© Copyright 1992

Hewlett-Packard Company

All rights are reserved. No part of the document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company.

Publication number

5960-7095

First Edition, September 1992

Printed in U.S.A.

Warranty

The information contained in this document is subject to change without notice and should not be construed as a commitment by the Hewlett-Packard Company.

Hewlett-Packard assumes no responsibility for any errors that may appear in this document nor does it make expressed or implied warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

The Hewlett-Packard Company shall not be liable for incidental or consequential damages in connection with, or arising out of furnishing, performance, or use of this document and the material which it describes.

Safety Information



Instruction manual symbol: The product will be marked with this symbol when it is necessary for the user to refer to the instruction manual in order to protect against damage to the product.



Indicates hazardous voltages.

WARNING

The **WARNING** sign denotes a hazard. It calls attention to a procedure, practice, or the like which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a **WARNING** sign until the indicated conditions are fully understood and met.


CAUTION

The **CAUTION** sign denotes a hazard. It calls attention to a procedure, practice, or the like which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product. Do not proceed beyond a **CAUTION** sign until the indicated conditions are fully understood and met.

Complete safety, legal, and regulatory information can be found in chapter 10 of the *HP 70340A/41A User's Guide*.

Hewlett-Packard Company
Stanford Park Division
1501 Page Mill Rd.
Palo Alto, CA 94304 U.S.A.

The Signal Generator at a Glance

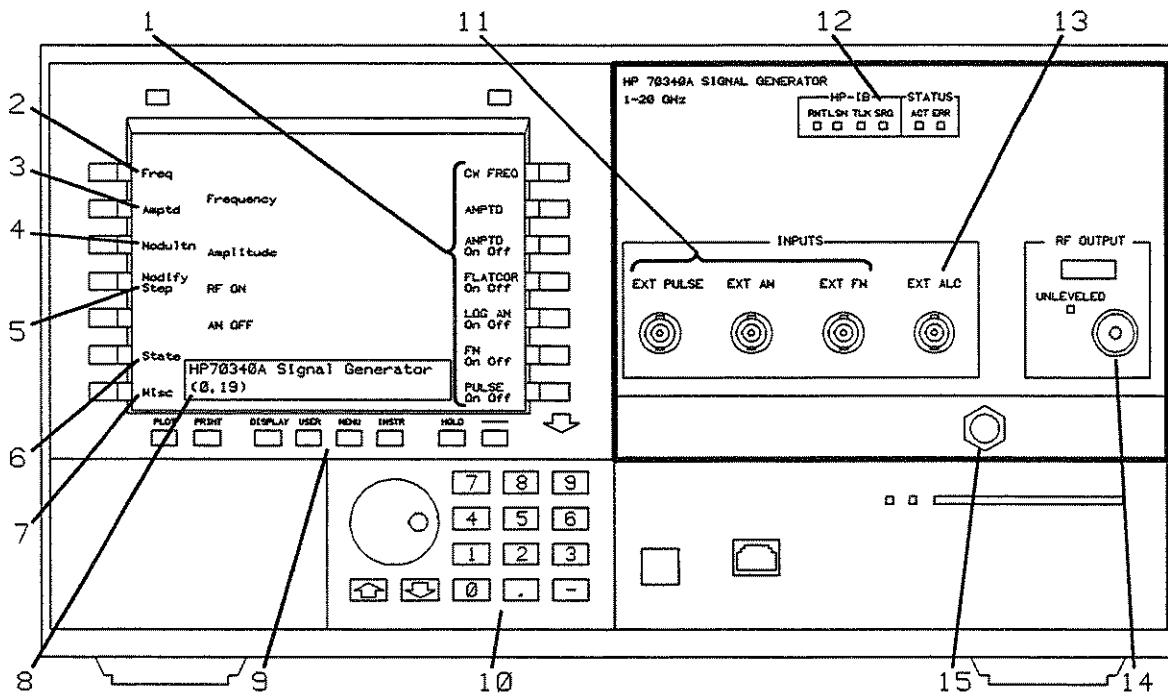



The HP 70340A Modular Signal Generator

1. Softkeys turn signal generator **functions** and menus on and off and/or allow data entry.

2. The **Frequency menu** accesses the CW frequency and the frequency multiplier value of the RF output signal.

3. The **Amplitude menu** accesses the output power level functions and methods of RF output signal leveling.

4. The **Modulation menu** accesses modulation type (FM, Log AM, and pulse modulation).

5. The **Modify Step menu** lets you change the knob increment value or the   keys step size.

6. The **State menu** saves/recalls most of the signal generator's operating parameters to/from any of nine nonvolatile register locations.

7. The **Miscellaneous menu** accesses signal generator features (such as service functions) which are less frequently used.

8. The **data entry box** indicates the current active parameter, if any, and its value.

9. The **display keys** allow you to choose the instrument front panel and access error messages.

10. The **data entry keys** are used to enter and modify function parameters.

11. The **modulation inputs** provide BNC connections for external modulating signals.

12. The **HP-IB and Status LEDs** indicate the state of the instrument: when it is in front panel mode or in HP-IB mode, and when an error message exists.

13. The **External Automatic Level Control** connector is used as the feedback path to the signal generator when RF output power is leveled externally.

14. The **RF OUTPUT** connector is the signal generator's main RF output. The UNLEVELED LED indicates whether or not output power is leveled.

15. The **Hex Nut Latch** allows easy installation/removal of the signal generator module.

The front panel procedures and examples in this book are valid whether or not the HP 70341A is installed in the Modular Measurement System, MMS. For an illustration of the HP 70340A with the HP 70341A, refer to the *HP 70340A/41A User's Guide*.

In This Book

This book provides a way for you to start using the HP 70340A signal generator (and HP 70341A frequency extension module) quickly and productively. It gives you an overview of some basic signal generator features while making you aware of other more complex features.

- “The Signal Generator at a Glance” shows you the various controls and features of the signal generator and mainframe/display front panel.
- “To Get Started” describes how to power-up the MMS and set up the signal generator front panel display.
- “To Use the Front Panel Display” explains the signal generator’s menu structure and how to enter function parameters.
- “To Generate a CW Signal” shows you how to generate a simple signal.
- “If You Encounter a Problem” is included in case you run into any difficulties operating the signal generator.

Conventions

The following conventions are used in this quick start guide:

signal generator indicates either the HP 70340A, alone, or the HP 70340A and HP 70341A, together.

key represents a physical key located on the display front panel. The label of the key on your display may differ from the HP 70004A display key labels used in this book.

softkey indicates a key on the display screen that changes according to the display or signal generator firmware.

screen text indicates text that appears on the display screen.

NOTE

For simplicity, the HP 70004A display front panel layout and labeling are used throughout the text and figures in this book. If you are not using an HP 70004A display in full screen mode, your front panel layout and labeling may differ.


Contents

1. The HP 70340A/41A Quick Start Guide

To Get Started	1-2
To Use the Front Panel Display	1-4
To Generate a CW Signal	1-6
If You Encounter a Problem	1-9
Power-up Problems	1-9
Data Entry Problems	1-11
Display Problems	1-11
RF Output Problems	1-12

Index

Contents

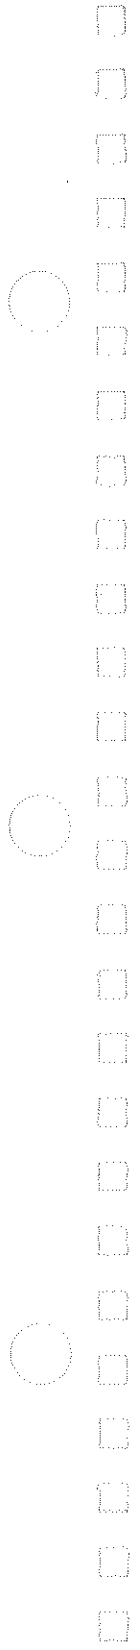

**The HP 70340A/41A Quick
Start Guide**

The HP 70340A/41A Quick Start Guide

To Get Started

These steps provide you with the information necessary to safely power-on the signal generator and set up the front panel for local operation. The front panel of the signal generator is your display's front panel. When you use the HP 70340A/41A in local operation, its front panel menus and functions appear on the display screen.

1. Install the HP 70340A according to chapter 1 of the *HP 70340A/41A User's Guide* and, if applicable, the HP 70341A according to the *HP 70341A Installation Guide*.
2. Check that the LINE VOLTAGE SELECTION switches of your mainframes/displays are set to the voltage of your power source.

The LINE VOLTAGE SELECTOR switches are located as follows:

- a. On the bottom of the HP 70001A mainframe
 - b. On the left side of the HP 70004A stand-alone display
 - c. On the rear panel of the HP 70205A or HP 70206A display
3. Set the system LINE (Mains) switches to OFF.
 4. Check that the power cable is undamaged, and then connect it to the system and power source.


WARNING

This is a safety Class 1 product (that is, it is provided with a protective earth terminal). An uninterruptible safety earth ground must be provided through the power cable. Whenever it is likely that the ground is impaired, the product must be made inoperative.

5. Set the mainframe/display LINE (Mains) switches to ON.

When you turn the MMS on, the power lights come on and the ventilation fans start. It is normal for the HP 70340A/41A LEDs (including the ERR LEDs) to turn on during a power-up test. The ERR LEDs should be off, however, when the power-up test is complete.


6. If the display does not show the HP 70340A front panel, press **DISPLAY**, **NEXT INSTR** (or **SELECT INSTR**) until the front panel of the HP 70340A is displayed, and then press **MENU** to display the main menu and function softkeys.

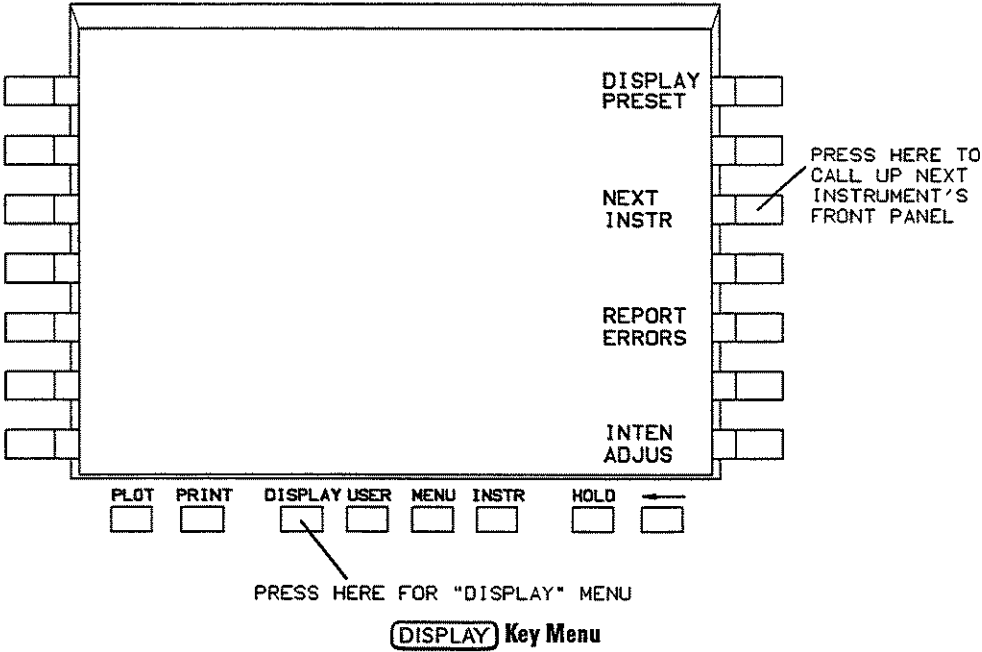

7. If you have problems with power-up of the signal generator, refer to "Power-Up Problems" in the section titled "If You Encounter a Problem" at the end of this book.

To Use the Front Panel Display

This section is useful to you if you are unfamiliar with the MMS. It shows you how to maneuver about the signal generator's menus using the display front panel. In this section, the term "display" is used to indicate a front panel similar to that shown below.

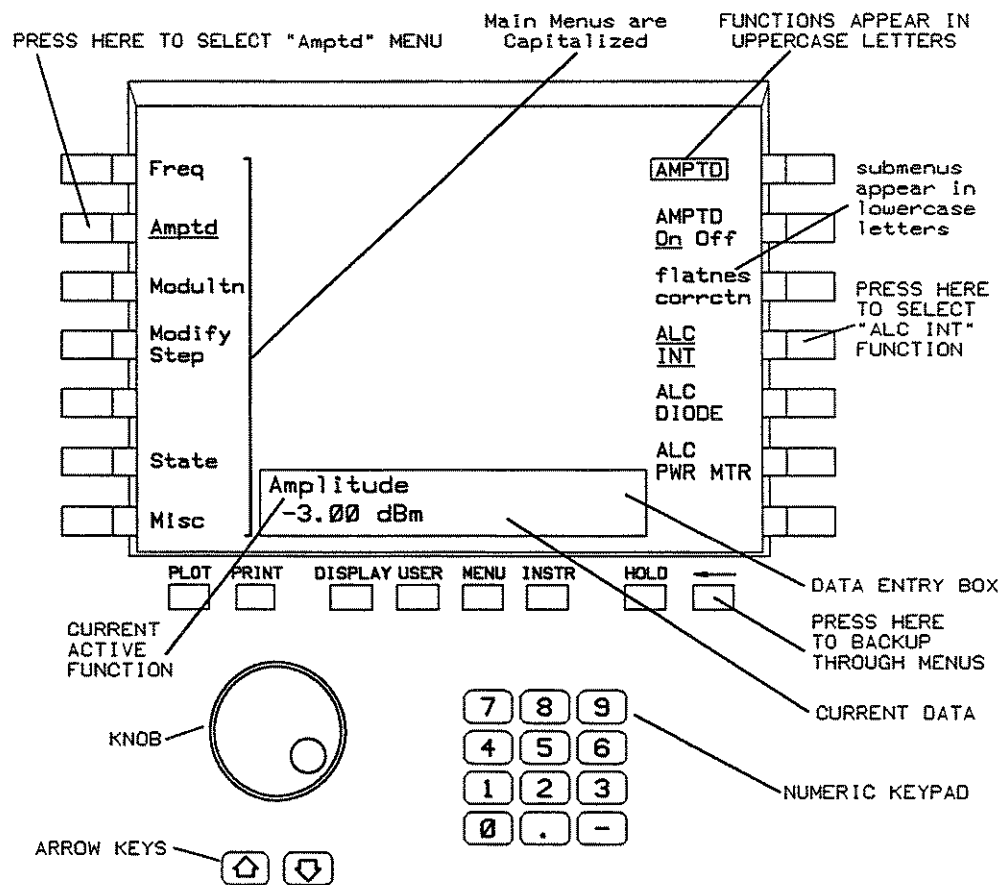

Signal Generator Menus and Functions

- You can select main menus from the left-hand side of the display.
When a main menu is active, functions and submenus pertaining to the menu appear on the right-hand side of the display.
- You can select functions from the right-hand side of the display.
Function softkeys allow you to turn functions on and off, enter/modify data, and perform operations/routines.
- You can also select submenus from the right-hand side of the display.
Submenus access other functions, and possibly, other submenus.
- Selecting **MORE x of y** (for example, **MORE 1 of 2** or **MORE 1 of 3**) displays more functions under a menu.
- Selecting the **←** (backspace arrow) key retraces your steps backwards through the menus that you have chosen.
- The Knob, **↑** **↓** keys, **←** key, and the numeric keypad provide ways to enter/modify data.

For example, to enter an RF Output signal amplitude of 0 dBm using the numeric keypad, perform the following steps:


1. Press **Amptd** so that it is underscored.
2. If the **AMPLITUDE** softkey is not highlighted, press **AMPTD** so that it is highlighted.
3. Type **0** on the numeric keypad.
4. Press **dBm** to terminate the entry.

Similarly, to enter a frequency multiplier value of 5:

1. Press **Freq** so that it is underscored.
2. Press **FREQ MULTI** so that it is highlighted.
3. Type **5** on the numeric keypad.
4. Press **ENTER** to terminate the entry.

To Generate a CW Signal


This section shows you how to generate the simplest signal that the signal generator can output: a CW (continuous wave) signal.

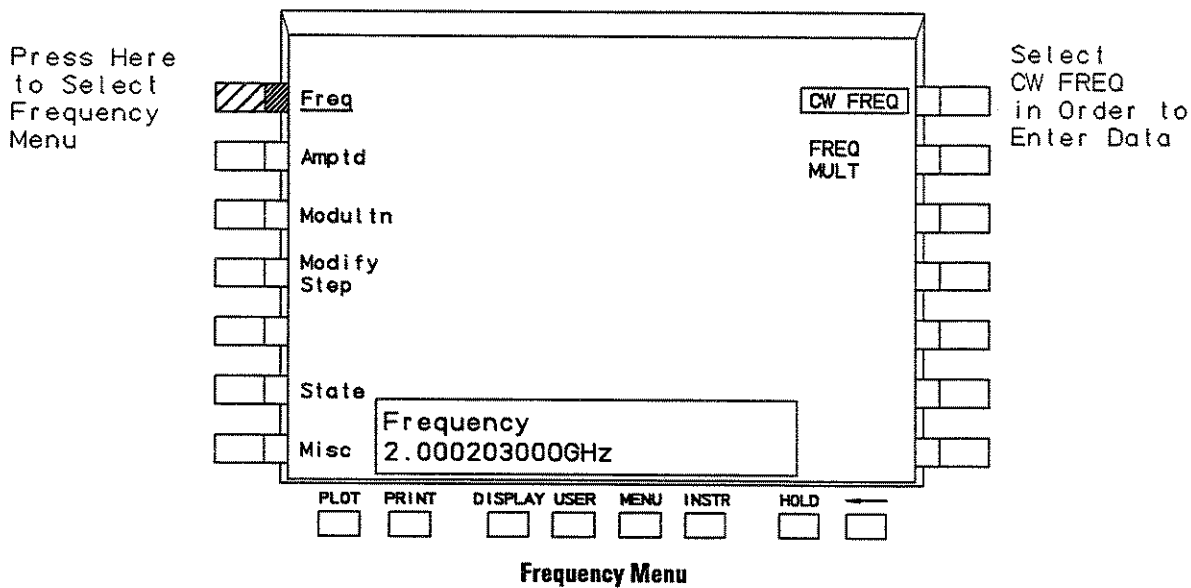

1. Set the desired CW frequency.

For example, perform the following procedure to set the output frequency to 2.000203 GHz.

- a. Press **Freq**.
- b. Press **CW FREQ** so that it is highlighted.
- c. Type **2, ., 0, 0, 0, 2, 0, 3** on the display's numeric keypad.
- d. Terminate the frequency entry by pressing **GHz**.

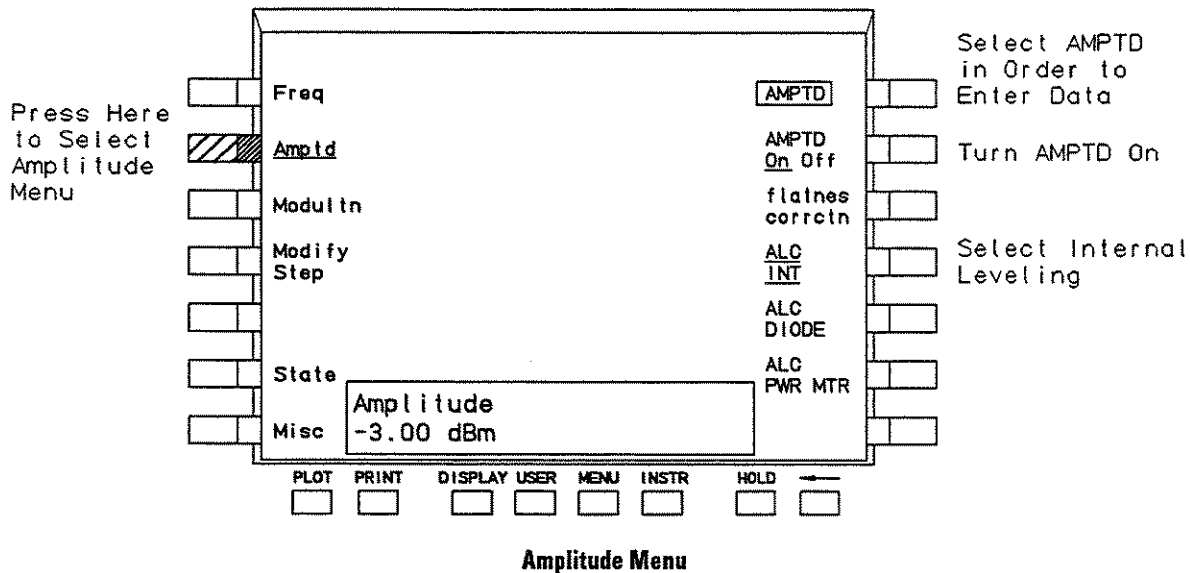


2. Turn on internal automatic leveling control, ALC INT, if it is not already on.
 - a. Press **Amptd**.
 - b. Press **ALC INT** so that it is underscored.
3. Set the desired RF output amplitude.

For example, perform the following procedure to set the RF output amplitude to -3 dBm.

- a. Press (highlight) **AMPTD** if it is not already highlighted.

Note that, if the AMPTD function is already highlighted (active), selecting it again produces no effect.
- b. Type **[−], [3]** on the numeric keypad.
- c. Terminate the amplitude entry by pressing **dBm**.
4. If **AMPTD On Off** is off, press the function so that On is underscored.

The HP 70340A/41A Quick Start Guide

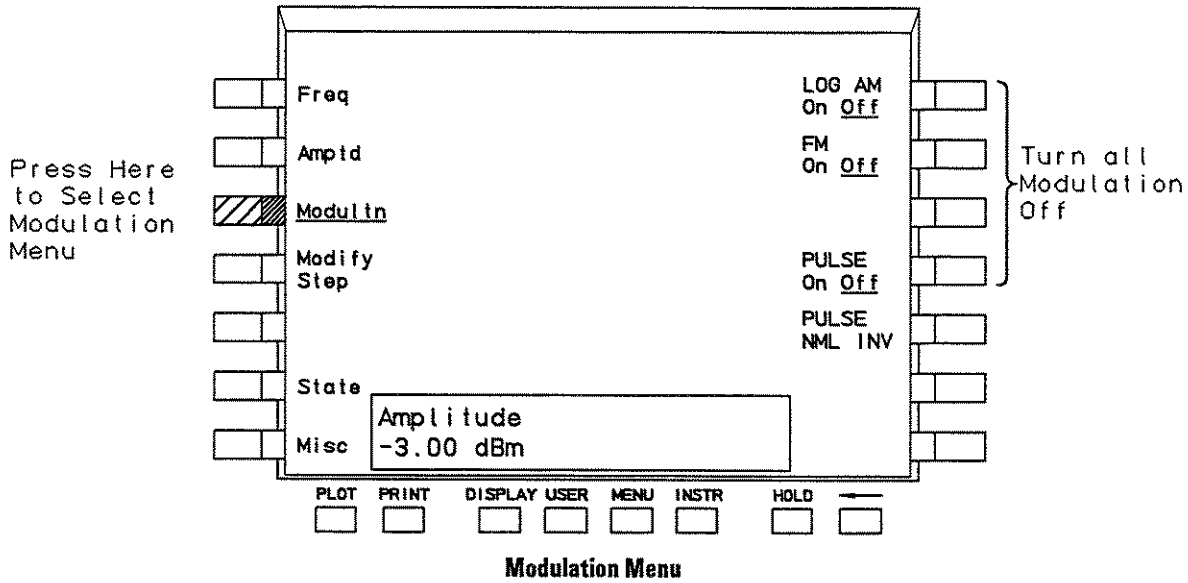

5. If necessary, turn off any modulation: Log AM On Off, FM On Off, or PULSE On Off, by selecting the Modul tn menu and then pressing each function softkey so that Off is underscored.


Once you know how to generate a CW signal, generating a more complex signal consists of entering some additional function parameters and providing a modulating signal input to the signal generator.

Additionally, you can use different kinds of signal leveling, or save and recall instrument states. These procedures and others are explained in the *HP 70340A/41A User's Guide*.

If You Encounter a Problem

If you have difficulty using the HP 70340A/41A, check the following list of problems and associated troubleshooting procedures. Most problems are easily solvable. If, however, the problem that you encounter is not listed here, refer to the *HP 70340A/41A User's Guide* or the installation and verification manual for your mainframe/display. If necessary, contact your nearest Hewlett-Packard office for service.

Power-up Problems

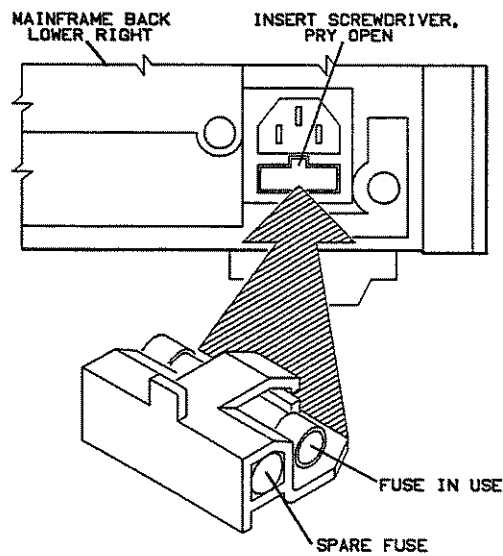

Line Fuse Removal and Replacement

If You Encounter a Problem

If the power light on the mainframe does not light and the instrument appears dead:

- Check that the power cord is connected.
- Check that the mainframe fuse is good.

The metric 6.3A fuse is HP part number 2110-0703. Refer to the figure on the previous page.

If the mainframe power light is on, but the ventilation fan does not start:

1. Set the mainframe LINE (Mains) switch to OFF.
2. Check for blockage of the fan intakes at the bottom rear of the mainframe.

If the signal generator ERR LED or the display E remains on after the power-up test is complete:

- Check that the ERR LED or the display "E" is not flashing.

If the error indicators are flashing, the mainframe HP-MSIB, a module, or the HP-MSIB cables may be faulty.

- Check for secure HP-MSIB cable connections.

To Check the Error Queue:

1. Press the **DISPLAY** key.
2. Press the **REPORT ERRORS** function.

When REPORT ERRORS is active, the display shows the model number, description, and HP-MSIB address of the module that is reporting.

3. If necessary, press the **MORE ERRORS** function until the display shows "HP 70340A," the signal generator's column address, and the errors associated with it.
4. Press the display's **MENU** key in order to exit the Error Report screen and return to the signal generator screen.

If the error is a transient one, it is cleared from memory once you exit the Error Report Screen.

5. If necessary, refer to the "Error Messages" chapter of the *HP 70340A User's Guide* or your display manual for steps to correct or clear the error.

Data Entry Problems

If the data entry controls (Keypad, Knob, , ) do not respond:

- Check that the neither the **ENTRY HOLD** nor the **HOLD** function is enabled.

The ENTRY HOLD function is under the **Misc** menu. It is active when it appears in inverse video. The **HOLD** is on the display's front panel. To turn these functions off, press (highlight) a function which has a numeric parameter associated with it.

- Check that the function which is active accepts data.

For instance, CW FREQ accepts data, but, AMPTD On/Off does not. The data entry controls do not respond if the function selected does not have data associated with it.

- Check that the signal generator is in local (not remote) operating mode.

Press the **LCL** key on the front panel of the display to return the instrument to local operating mode.

If data is not accepted (displayed or output) by the signal generator:

- Check that you are not setting the data outside of the signal generator's specified limits.

Refer to the Specification table in the *HP 70340A/41A User's Guide*.

- Check that the HP-MSIB addresses are set correctly if the HP 70341A is installed, and the data entered is a cw frequency between 0.01 and 1 GHz.

Refer to the *HP 70341A Installation Guide*.

- Check that the ERR LED is off.

Refer to the procedure, "To Check the Error Queue," in this section.

Display Problems

If the signal generator module does not appear on the display screen:

If You Encounter a Problem

1. Check that the HP-MSIB cables are connected if you are using multiple mainframes.
2. Press the **DISPLAY** key.
3. Press the **NEXT INSTR** softkey until the signal generator is displayed.

Refer to the display's Operating Manual or Service Manual for operating and troubleshooting procedures.

RF Output Problems

- Check that the **AMPTD On Off** function is On.
The display indicates whether the function is on or off through the message "RF ON" or "RF OFF".
- Check that the modulation functions are properly set (ie. Log AM, FM, and Pulse Modulation).
These function softkeys are under the Modulation menu.
- Check the external modulating signal for problems.

Index

- A ALC IN connector, v
 - ALC INT, 1-7
 - Amplitude menu, v
 - AMPID, 1-7
 - AMPID Gn Off, 1-7
 - automatic level control. *See* ALC INT

- B bigleftarrow;, 1-5
 - Bigleftarrow;, v

- C CW FREQ, 1-6
 - CW Signal
 - generating a, 1-6

- D data. *See* function parameter
 - data entry
 - problems with, 1-11
 - data entry box, v
 - data entry controls
 - problems with, 1-11
 - data entry keys, v
 - Data Entry Problems, 1-10
 - display, 1-4
 - front panel, 1-2
 - right-hand side of, 1-5
 - DISPLAY, 1-3
 - display keys, v

- E ENTRY HOLD, 1-11
 - ERR LED, 1-2, 1-10
 - error queue, 1-10

- F Frequency menu, v
 - front panel
 - displaying the, 1-3
 - using menus via, 1-4
 - function, v
 - functions, 1-5
 - location of, 1-5
 - use of, 1-4
 - fuse
 - replacement of, 1-10

- H** Hex Nut Latch, v
HOLD, 1-11

- I** If You Encounter a Problem, 1-8-12
installation
 module, 1-9
internal leveling, 1-6
In This Book, v

- L** LCL, 1-11
LEDs, v
LINE (Mains) switch, 1-2
line voltage
 selection of, 1-2
local mode
 using menus in, 1-4
local operation, 1-2

- M** main menus, 1-5
MENU, 1-10
menus
 use of, 1-4
modulation, 1-8
modulation inputs
 connectors, v
Modulation menu, v
MORE ERRORS, 1-10
MORE x of y, 1-5

- N** **NEXT INSTR**, 1-3, 1-12

- P** parameter. *See* function parameter
power-on, 1-2
Power-up Problems, 1-9
power-up test, 1-2

- R recall state, 1-8
 - REPORT ERRORS, 1-10
 - RF OUTPUT connector, v
 - RF Output Problems, 1-12

- S save state, 1-8
 - SELECT INSTR, 1-3
 - Signal Generator at a Glance, iv-5
 - signal leveling, 1-8
 - Specification table, 1-11
 - State menu, v
 - submenu, v, 1-5
 - location of, 1-5

- T To Generate a CW Signal, 1-6*ff*
 - To Get Started, 1-2-3
 - To Send a CW Signal, 1-8
 - troubleshooting. *See* If You Encounter a Problem

- U Using the Display, 1-4-5

Learning Products Map

General Reference

- HP 70340A/41A User's Guide (5960-7096)
- HP 70340A/41A Quick Start Guide (5960-7095)

Programming Reference

- HP 70340A/41A User's Guide (5960-7096)
- Beginner's Guide to SCPI (5010-7166)

Service

- HP 70340A/41A Calibration Guide (5960-7082)
- HP 70340A Service Guide (70340-90007)
- HP 70340A Component Level Information Manual (70340-90010)
- HP 70341A Service Guide (70341-90002)
- HP 70341A Component Level Information Manual (70341-90004)

Installation

- HP 70340A/41A User's Guide (5960-7096)
- HP 70341A Installation Guide (70341-90003)

Modular Measurement
System Reference

- 70000 Protocol and Functional Specifications
 - HP 70004A Display Operating Manual (70004-90001)
-