




---

# User's manual FLIR T5xx series

---

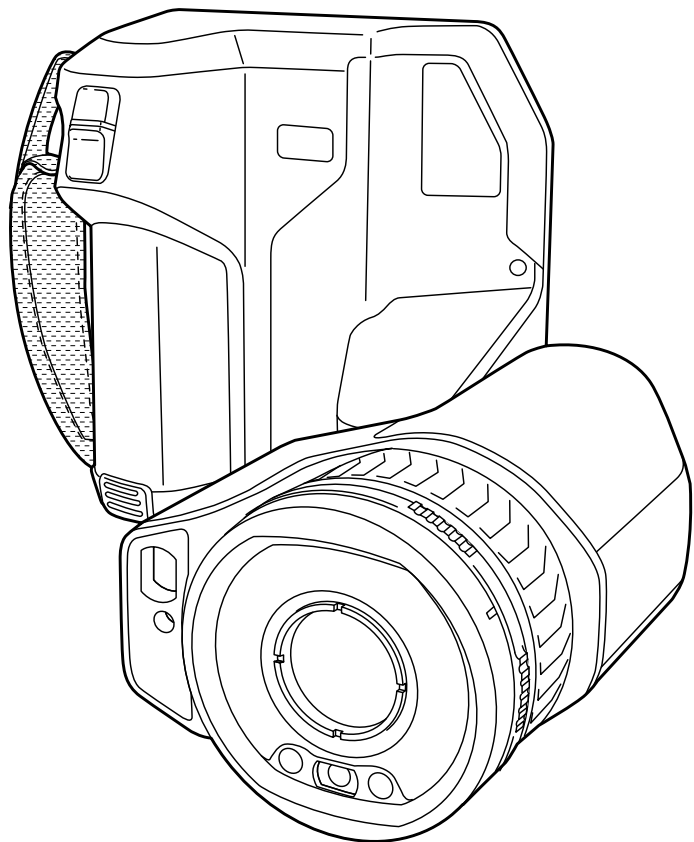





---

# User's manual FLIR T5xx series





# Table of contents

---

|          |                                              |           |
|----------|----------------------------------------------|-----------|
| <b>1</b> | <b>Disclaimers .....</b>                     | <b>1</b>  |
| 1.1      | Legal disclaimer .....                       | 1         |
| 1.2      | Usage statistics .....                       | 1         |
| 1.3      | Changes to registry .....                    | 1         |
| 1.4      | U.S. Government Regulations.....             | 1         |
| 1.5      | Copyright .....                              | 1         |
| 1.6      | Quality assurance .....                      | 1         |
| 1.7      | Patents .....                                | 1         |
| 1.8      | EULA Terms .....                             | 1         |
| 1.9      | EULA Terms .....                             | 2         |
| <b>2</b> | <b>Safety information .....</b>              | <b>3</b>  |
| <b>3</b> | <b>Notice to user .....</b>                  | <b>7</b>  |
| 3.1      | User-to-user forums .....                    | 7         |
| 3.2      | Calibration.....                             | 7         |
| 3.3      | Accuracy .....                               | 7         |
| 3.4      | Disposal of electronic waste .....           | 7         |
| 3.5      | Training .....                               | 7         |
| 3.6      | Documentation updates .....                  | 8         |
| 3.7      | Important note about this manual.....        | 8         |
| 3.8      | Note about authoritative versions.....       | 8         |
| <b>4</b> | <b>Customer help .....</b>                   | <b>9</b>  |
| 4.1      | General .....                                | 9         |
| 4.2      | Submitting a question .....                  | 9         |
| 4.3      | Downloads .....                              | 9         |
| <b>5</b> | <b>Quick start guide .....</b>               | <b>10</b> |
| 5.1      | Procedure .....                              | 10        |
| 5.2      | To keep in mind .....                        | 10        |
| <b>6</b> | <b>Register the camera.....</b>              | <b>11</b> |
| 6.1      | General .....                                | 11        |
| 6.2      | Procedure .....                              | 11        |
| <b>7</b> | <b>A note about ergonomics .....</b>         | <b>16</b> |
| 7.1      | General .....                                | 16        |
| 7.2      | Figure .....                                 | 16        |
| <b>8</b> | <b>Camera parts .....</b>                    | <b>17</b> |
| 8.1      | View from the rear .....                     | 17        |
| 8.1.1    | Figure .....                                 | 17        |
| 8.1.2    | Explanation.....                             | 17        |
| 8.2      | View from the front .....                    | 18        |
| 8.2.1    | Figure .....                                 | 18        |
| 8.2.2    | Explanation.....                             | 18        |
| 8.3      | View from the bottom .....                   | 19        |
| 8.3.1    | Figure .....                                 | 19        |
| 8.3.2    | Explanation.....                             | 19        |
| 8.4      | Laser distance meter and laser pointer ..... | 19        |
| 8.4.1    | General.....                                 | 19        |
| 8.4.2    | Laser transmitter and receiver .....         | 20        |
| 8.4.3    | Difference in position .....                 | 20        |
| 8.4.4    | Laser warning label.....                     | 21        |
| 8.4.5    | Laser rules and regulations .....            | 21        |

---

|           |                                                                                        |           |
|-----------|----------------------------------------------------------------------------------------|-----------|
| <b>9</b>  | <b>Screen elements .....</b>                                                           | <b>22</b> |
| 9.1       | General .....                                                                          | 22        |
| 9.2       | Menu system .....                                                                      | 22        |
| 9.3       | Soft buttons .....                                                                     | 23        |
| 9.4       | Status icons and indicators .....                                                      | 24        |
| 9.5       | Swipe-down menu .....                                                                  | 24        |
| 9.6       | Image overlay information .....                                                        | 24        |
| <b>10</b> | <b>Navigating the menu system .....</b>                                                | <b>26</b> |
| 10.1      | General .....                                                                          | 26        |
| 10.2      | Navigating using the navigation pad .....                                              | 26        |
| <b>11</b> | <b>Handling the camera .....</b>                                                       | <b>27</b> |
| 11.1      | Charging the battery .....                                                             | 27        |
| 11.1.1    | General .....                                                                          | 27        |
| 11.1.2    | Using the stand-alone battery charger to charge the battery .....                      | 27        |
| 11.1.3    | Using the USB battery charger to charge the battery when it is inside the camera ..... | 27        |
| 11.1.4    | Charging the battery using a USB cable connected to a computer .....                   | 28        |
| 11.2      | Installing and removing the camera battery .....                                       | 28        |
| 11.2.1    | Installing the battery .....                                                           | 28        |
| 11.2.2    | Removing the battery .....                                                             | 29        |
| 11.3      | Turning on and turning off the camera .....                                            | 29        |
| 11.4      | Adjusting the angle of lens .....                                                      | 30        |
| 11.4.1    | Figure .....                                                                           | 30        |
| 11.4.2    | Procedure .....                                                                        | 30        |
| 11.5      | Adjusting the infrared camera focus manually .....                                     | 31        |
| 11.5.1    | Figure .....                                                                           | 31        |
| 11.5.2    | Procedure .....                                                                        | 31        |
| 11.6      | Autofocusing the infrared camera .....                                                 | 31        |
| 11.6.1    | General .....                                                                          | 31        |
| 11.6.2    | Figure .....                                                                           | 32        |
| 11.6.3    | Procedure .....                                                                        | 32        |
| 11.7      | Continuous autofocus .....                                                             | 32        |
| 11.7.1    | General .....                                                                          | 32        |
| 11.7.2    | Procedure .....                                                                        | 33        |
| 11.8      | Operating the laser distance meter .....                                               | 33        |
| 11.8.1    | General .....                                                                          | 33        |
| 11.8.2    | Procedure .....                                                                        | 34        |
| 11.9      | Measuring areas .....                                                                  | 34        |
| 11.9.1    | General .....                                                                          | 34        |
| 11.9.2    | Procedure .....                                                                        | 35        |
| 11.10     | Connecting external devices and storage media .....                                    | 35        |
| 11.10.1   | General .....                                                                          | 35        |
| 11.10.2   | Figure .....                                                                           | 35        |
| 11.10.3   | Explanation .....                                                                      | 35        |
| 11.11     | Moving files to a computer .....                                                       | 36        |
| 11.11.1   | General .....                                                                          | 36        |
| 11.11.2   | Procedure .....                                                                        | 36        |
| 11.12     | Assigning functions to the programmable buttons .....                                  | 37        |
| 11.12.1   | General .....                                                                          | 37        |

## Table of contents

---

|           |                                               |           |
|-----------|-----------------------------------------------|-----------|
|           | 11.12.2 Procedure .....                       | 38        |
| 11.13     | Using the camera lamp as a flash .....        | 38        |
|           | 11.13.1 General.....                          | 38        |
|           | 11.13.2 Procedure .....                       | 38        |
| 11.14     | Changing camera lenses .....                  | 39        |
| 11.15     | Calibrating the lens–camera combination ..... | 42        |
|           | 11.15.1 Introduction.....                     | 42        |
|           | 11.15.2 AutoCal procedure .....               | 43        |
| 11.16     | Neck strap.....                               | 45        |
| 11.17     | Hand strap .....                              | 45        |
| <b>12</b> | <b>Saving and working with images .....</b>   | <b>47</b> |
| 12.1      | About image files .....                       | 47        |
|           | 12.1.1 General.....                           | 47        |
|           | 12.1.2 File-naming convention .....           | 47        |
|           | 12.1.3 Storage capacity .....                 | 47        |
|           | 12.1.4 About UltraMax.....                    | 47        |
| 12.2      | Saving an image .....                         | 48        |
|           | 12.2.1 General.....                           | 48        |
|           | 12.2.2 Procedure .....                        | 48        |
| 12.3      | Previewing an image .....                     | 49        |
|           | 12.3.1 General.....                           | 49        |
|           | 12.3.2 Procedure .....                        | 49        |
| 12.4      | Opening a saved image.....                    | 49        |
|           | 12.4.1 General.....                           | 49        |
|           | 12.4.2 Procedure .....                        | 49        |
| 12.5      | Editing a saved image.....                    | 50        |
|           | 12.5.1 General.....                           | 50        |
|           | 12.5.2 Procedure .....                        | 50        |
|           | 12.5.3 Related topics .....                   | 50        |
| 12.6      | Displaying the image information.....         | 50        |
|           | 12.6.1 General.....                           | 50        |
|           | 12.6.2 Procedure .....                        | 50        |
| 12.7      | Zooming an image .....                        | 51        |
|           | 12.7.1 General.....                           | 51        |
|           | 12.7.2 Procedure .....                        | 51        |
| 12.8      | Deleting images .....                         | 51        |
| 12.9      | Resetting the image counter.....              | 51        |
|           | 12.9.1 General.....                           | 51        |
|           | 12.9.2 Procedure .....                        | 52        |
| <b>13</b> | <b>Working with the image archive.....</b>    | <b>53</b> |
| 13.1      | General .....                                 | 53        |
|           | 13.1.1 Managing folders via soft button ..... | 53        |
| 13.2      | Opening image and video files .....           | 54        |
| 13.3      | Creating a new folder .....                   | 54        |
| 13.4      | Renaming a folder.....                        | 54        |
| 13.5      | Changing the active folder .....              | 54        |
|           | 13.5.1 General.....                           | 54        |
|           | 13.5.2 Procedure .....                        | 55        |
| 13.6      | Moving files between folders .....            | 55        |
| 13.7      | Deleting a folder .....                       | 55        |

## Table of contents

---

|           |                                                        |           |
|-----------|--------------------------------------------------------|-----------|
| 13.8      | Deleting an image or video file .....                  | 56        |
| 13.8.1    | General.....                                           | 56        |
| 13.8.2    | Procedure .....                                        | 56        |
| 13.9      | Deleting multiple files.....                           | 56        |
| 13.9.1    | General.....                                           | 56        |
| 13.9.2    | Procedure .....                                        | 56        |
| 13.10     | Deleting all files .....                               | 57        |
| 13.10.1   | General.....                                           | 57        |
| 13.10.2   | Procedure .....                                        | 57        |
| <b>14</b> | <b>Achieving a good image .....</b>                    | <b>58</b> |
| 14.1      | General .....                                          | 58        |
| 14.2      | Adjusting the infrared camera focus .....              | 58        |
| 14.2.1    | Manual focus .....                                     | 58        |
| 14.2.2    | Autofocus .....                                        | 58        |
| 14.2.3    | Continuous autofocus .....                             | 58        |
| 14.3      | Adjusting the infrared image.....                      | 59        |
| 14.3.1    | General.....                                           | 59        |
| 14.3.2    | Manual adjustment by touching the screen .....         | 60        |
| 14.3.3    | Manual adjustment by using the navigation pad .....    | 61        |
| 14.3.4    | Manual adjustment in <i>Level, Span</i> mode .....     | 62        |
| 14.3.5    | Manual adjustment in <i>Level, Max, Min</i> mode ..... | 62        |
| 14.4      | Changing the camera temperature range .....            | 62        |
| 14.4.1    | General.....                                           | 62        |
| 14.4.2    | Procedure .....                                        | 62        |
| 14.5      | Changing the color palettes.....                       | 63        |
| 14.5.1    | General.....                                           | 63        |
| 14.5.2    | Procedure .....                                        | 64        |
| 14.6      | Changing the measurement parameters .....              | 64        |
| 14.7      | Performing a non-uniformity correction (NUC) .....     | 65        |
| 14.7.1    | General.....                                           | 65        |
| 14.7.2    | Performing an NUC manually.....                        | 65        |
| 14.8      | Hiding all overlay .....                               | 65        |
| 14.8.1    | General.....                                           | 65        |
| <b>15</b> | <b>Working with image modes.....</b>                   | <b>67</b> |
| 15.1      | General .....                                          | 67        |
| 15.2      | Image examples .....                                   | 67        |
| 15.3      | Selecting an image mode .....                          | 69        |
| <b>16</b> | <b>Working with measurement tools .....</b>            | <b>71</b> |
| 16.1      | General .....                                          | 71        |
| 16.2      | Adding/removing measurement tools .....                | 71        |
| 16.3      | Editing user presets.....                              | 71        |
| 16.3.1    | General.....                                           | 71        |
| 16.3.2    | Procedure .....                                        | 72        |
| 16.4      | Moving and resizing a measurement tool .....           | 72        |
| 16.4.1    | General.....                                           | 72        |
| 16.4.2    | Moving a spot.....                                     | 72        |
| 16.4.3    | Moving and resizing a box or circle tool .....         | 73        |
| 16.5      | Changing the measurement parameters .....              | 73        |
| 16.5.1    | General.....                                           | 73        |
| 16.5.2    | Types of parameters .....                              | 73        |



## Table of contents

---

|           |                                                           |           |
|-----------|-----------------------------------------------------------|-----------|
|           | 16.5.3 Recommended values .....                           | 74        |
|           | 16.5.4 Procedure .....                                    | 74        |
|           | 16.5.5 Related topics .....                               | 76        |
| 16.6      | Displaying values in the result table .....               | 76        |
|           | 16.6.1 General .....                                      | 76        |
|           | 16.6.2 Procedure .....                                    | 76        |
| 16.7      | Creating and setting up a difference calculation .....    | 77        |
|           | 16.7.1 General .....                                      | 77        |
|           | 16.7.2 Procedure .....                                    | 77        |
| 16.8      | Setting a measurement alarm .....                         | 78        |
|           | 16.8.1 General .....                                      | 78        |
|           | 16.8.2 Types of alarm .....                               | 78        |
|           | 16.8.3 Alarm signals .....                                | 78        |
|           | 16.8.4 Procedure .....                                    | 78        |
| <b>17</b> | <b>Working with color alarms and isotherms .....</b>      | <b>81</b> |
| 17.1      | Color alarms .....                                        | 81        |
|           | 17.1.1 General .....                                      | 81        |
|           | 17.1.2 Image examples .....                               | 81        |
|           | 17.1.3 Setting up above, below, and interval alarms ..... | 82        |
|           | 17.1.4 Building isotherms .....                           | 83        |
| <b>18</b> | <b>Annotating images .....</b>                            | <b>85</b> |
| 18.1      | General .....                                             | 85        |
| 18.2      | Adding a note .....                                       | 85        |
|           | 18.2.1 General .....                                      | 85        |
|           | 18.2.2 Procedure .....                                    | 85        |
| 18.3      | Adding a text comment table .....                         | 86        |
|           | 18.3.1 General .....                                      | 86        |
|           | 18.3.2 Procedure .....                                    | 86        |
|           | 18.3.3 Creating a text comment table template .....       | 87        |
| 18.4      | Adding a voice annotation .....                           | 89        |
|           | 18.4.1 General .....                                      | 89        |
|           | 18.4.2 Procedure .....                                    | 89        |
| 18.5      | Adding a sketch .....                                     | 90        |
|           | 18.5.1 General .....                                      | 90        |
|           | 18.5.2 Procedure .....                                    | 90        |
| <b>19</b> | <b>Programming the camera (time-lapse) .....</b>          | <b>92</b> |
| 19.1      | General .....                                             | 92        |
| 19.2      | Procedure .....                                           | 92        |
| <b>20</b> | <b>Recording video clips .....</b>                        | <b>93</b> |
| 20.1      | General .....                                             | 93        |
| 20.2      | Procedure .....                                           | 93        |
| 20.3      | Playing a saved video clip .....                          | 93        |
| <b>21</b> | <b>Screening alarm .....</b>                              | <b>95</b> |
| 21.1      | General .....                                             | 95        |
| 21.2      | Procedure .....                                           | 95        |
| <b>22</b> | <b>Pairing Bluetooth devices .....</b>                    | <b>97</b> |
| 22.1      | General .....                                             | 97        |
| 22.2      | Procedure .....                                           | 97        |
| <b>23</b> | <b>Configuring Wi-Fi .....</b>                            | <b>98</b> |
| 23.1      | General .....                                             | 98        |

## Table of contents

---

|           |                                                          |            |
|-----------|----------------------------------------------------------|------------|
| 23.2      | Setting up a wireless access point (most common use)     | 98         |
| 23.3      | Connecting the camera to a WLAN (less common use)        | 98         |
| <b>24</b> | <b>Fetching data from external FLIR meters</b>           | <b>99</b>  |
| 24.1      | General                                                  | 99         |
| 24.2      | Technical support for external meters                    | 99         |
| 24.3      | Procedure                                                | 100        |
| 24.4      | Typical moisture measurement and documentation procedure | 100        |
|           | 24.4.1 General                                           | 100        |
|           | 24.4.2 Procedure                                         | 100        |
| 24.5      | More information                                         | 101        |
| <b>25</b> | <b>Changing settings</b>                                 | <b>102</b> |
| 25.1      | General                                                  | 102        |
|           | 25.1.1 Connections                                       | 102        |
|           | 25.1.2 Camera temperature range                          | 102        |
|           | 25.1.3 Save options & storage                            | 102        |
|           | 25.1.4 Device settings                                   | 103        |
| <b>26</b> | <b>Cleaning the camera</b>                               | <b>106</b> |
| 26.1      | Camera housing, cables, and other items                  | 106        |
|           | 26.1.1 Liquids                                           | 106        |
|           | 26.1.2 Equipment                                         | 106        |
|           | 26.1.3 Procedure                                         | 106        |
| 26.2      | Infrared lens                                            | 106        |
|           | 26.2.1 Liquids                                           | 106        |
|           | 26.2.2 Equipment                                         | 106        |
|           | 26.2.3 Procedure                                         | 106        |
| 26.3      | Infrared detector                                        | 107        |
|           | 26.3.1 General                                           | 107        |
|           | 26.3.2 Procedure                                         | 107        |
| <b>27</b> | <b>Technical data</b>                                    | <b>108</b> |
| 27.1      | Online field-of-view calculator                          | 108        |
| 27.2      | Note about technical data                                | 108        |
| 27.3      | Note about authoritative versions                        | 108        |
| 27.4      | FLIR T530 14°                                            | 109        |
| 27.5      | FLIR T530 24°                                            | 116        |
| 27.6      | FLIR T530 42°                                            | 123        |
| 27.7      | FLIR T530 24° + 14°                                      | 130        |
| 27.8      | FLIR T530 24° + 42°                                      | 137        |
| 27.9      | FLIR T530 24° + 14° & 42°                                | 144        |
| 27.10     | FLIR T530 42° + 14°                                      | 151        |
| 27.11     | FLIR T540 14°                                            | 158        |
| 27.12     | FLIR T540 24°                                            | 165        |
| 27.13     | FLIR T540 42°                                            | 172        |
| 27.14     | FLIR T540 24° + 14°                                      | 179        |
| 27.15     | FLIR T540 24° + 42°                                      | 186        |
| 27.16     | FLIR T540 24° + 14° & 42°                                | 193        |
| 27.17     | FLIR T540 42° + 14°                                      | 200        |

---

|           |                                                                     |            |
|-----------|---------------------------------------------------------------------|------------|
| <b>28</b> | <b>Mechanical drawings .....</b>                                    | <b>207</b> |
| <b>29</b> | <b>CE Declaration of conformity .....</b>                           | <b>211</b> |
| <b>30</b> | <b>Application examples.....</b>                                    | <b>213</b> |
| 30.1      | Moisture & water damage .....                                       | 213        |
| 30.1.1    | General.....                                                        | 213        |
| 30.1.2    | Figure.....                                                         | 213        |
| 30.2      | Faulty contact in socket .....                                      | 213        |
| 30.2.1    | General.....                                                        | 213        |
| 30.2.2    | Figure.....                                                         | 214        |
| 30.3      | Oxidized socket.....                                                | 214        |
| 30.3.1    | General.....                                                        | 214        |
| 30.3.2    | Figure.....                                                         | 214        |
| 30.4      | Insulation deficiencies.....                                        | 215        |
| 30.4.1    | General.....                                                        | 215        |
| 30.4.2    | Figure.....                                                         | 215        |
| 30.5      | Draft .....                                                         | 216        |
| 30.5.1    | General.....                                                        | 216        |
| 30.5.2    | Figure.....                                                         | 216        |
| <b>31</b> | <b>About FLIR Systems .....</b>                                     | <b>218</b> |
| 31.1      | More than just an infrared camera .....                             | 219        |
| 31.2      | Sharing our knowledge .....                                         | 220        |
| 31.3      | Supporting our customers.....                                       | 220        |
| <b>32</b> | <b>Terms, laws, and definitions.....</b>                            | <b>221</b> |
| <b>33</b> | <b>Thermographic measurement techniques .....</b>                   | <b>223</b> |
| 33.1      | Introduction .....                                                  | 223        |
| 33.2      | Emissivity.....                                                     | 223        |
| 33.2.1    | Finding the emissivity of a sample .....                            | 223        |
| 33.3      | Reflected apparent temperature .....                                | 227        |
| 33.4      | Distance .....                                                      | 227        |
| 33.5      | Relative humidity .....                                             | 227        |
| 33.6      | Other parameters.....                                               | 227        |
| <b>34</b> | <b>The secret to a good thermal image .....</b>                     | <b>228</b> |
| 34.1      | Introduction .....                                                  | 228        |
| 34.2      | Background .....                                                    | 228        |
| 34.3      | A good image .....                                                  | 228        |
| 34.4      | The three unchangeables—the basis for a good image .....            | 229        |
| 34.4.1    | Focus .....                                                         | 229        |
| 34.4.2    | Temperature range .....                                             | 230        |
| 34.4.3    | Image detail and distance from the object .....                     | 231        |
| 34.5      | The changeables—image optimization and temperature measurement..... | 232        |
| 34.5.1    | Level and span .....                                                | 232        |
| 34.5.2    | Palettes and isotherms .....                                        | 232        |
| 34.5.3    | Object parameters.....                                              | 233        |
| 34.6      | Taking images—practical tips .....                                  | 233        |
| 34.7      | Conclusion .....                                                    | 234        |
| <b>35</b> | <b>About calibration.....</b>                                       | <b>235</b> |
| 35.1      | Introduction .....                                                  | 235        |
| 35.2      | Definition—what is calibration? .....                               | 235        |
| 35.3      | Camera calibration at FLIR Systems .....                            | 235        |

## Table of contents

---

|           |                                                                                                            |            |
|-----------|------------------------------------------------------------------------------------------------------------|------------|
| 35.4      | The differences between a calibration performed by a user and that performed directly at FLIR Systems..... | 236        |
| 35.5      | Calibration, verification and adjustment.....                                                              | 236        |
| 35.6      | Non-uniformity correction.....                                                                             | 237        |
| 35.7      | Thermal image adjustment (thermal tuning) .....                                                            | 237        |
| <b>36</b> | <b>History of infrared technology.....</b>                                                                 | <b>238</b> |
| <b>37</b> | <b>Theory of thermography.....</b>                                                                         | <b>241</b> |
| 37.1      | Introduction .....                                                                                         | 241        |
| 37.2      | The electromagnetic spectrum.....                                                                          | 241        |
| 37.3      | Blackbody radiation.....                                                                                   | 242        |
| 37.3.1    | Planck's law .....                                                                                         | 243        |
| 37.3.2    | Wien's displacement law.....                                                                               | 244        |
| 37.3.3    | Stefan-Boltzmann's law .....                                                                               | 245        |
| 37.3.4    | Non-blackbody emitters.....                                                                                | 246        |
| 37.4      | Infrared semi-transparent materials.....                                                                   | 248        |
| <b>38</b> | <b>The measurement formula.....</b>                                                                        | <b>249</b> |
| <b>39</b> | <b>Emissivity tables .....</b>                                                                             | <b>253</b> |
| 39.1      | References.....                                                                                            | 253        |
| 39.2      | Tables .....                                                                                               | 253        |

## 1.1 Legal disclaimer

All products manufactured by FLIR Systems are warranted against defective materials and workmanship for a period of one (1) year from the delivery date of the original purchase, provided such products have been under normal storage, use and service, and in accordance with FLIR Systems instruction.

Uncooled handheld infrared cameras manufactured by FLIR Systems are warranted against defective materials and workmanship for a period of two (2) years from the delivery date of the original purchase, provided such products have been under normal storage, use and service, and in accordance with FLIR Systems instruction, and provided that the camera has been registered within 60 days of original purchase.

Detectors for uncooled handheld infrared cameras manufactured by FLIR Systems are warranted against defective materials and workmanship for a period of ten (10) years from the delivery date of the original purchase, provided such products have been under normal storage, use and service, and in accordance with FLIR Systems instruction, and provided that the camera has been registered within 60 days of original purchase.

Products which are not manufactured by FLIR Systems but included in systems delivered by FLIR Systems to the original purchaser, carry the warranty, if any, of the particular supplier only. FLIR Systems has no responsibility whatsoever for such products.

The warranty extends only to the original purchaser and is not transferable. It is not applicable to any product which has been subjected to misuse, neglect, accident or abnormal conditions of operation. Expendable parts are excluded from the warranty.

In the case of a defect in a product covered by this warranty the product must not be further used in order to prevent additional damage. The purchaser shall promptly report any defect to FLIR Systems or this warranty will not apply.

FLIR Systems will, at its option, repair or replace any such defective product free of charge if, upon inspection, it proves to be defective in material or workmanship and provided that it is returned to FLIR Systems within the said one-year period.

FLIR Systems has no other obligation or liability for defects than those set forth above.

No other warranty is expressed or implied. FLIR Systems specifically disclaims the implied warranties of merchantability and fitness for a particular purpose.

FLIR Systems shall not be liable for any direct, indirect, special, incidental or consequential loss or damage, whether based on contract, tort or any other legal theory.

This warranty shall be governed by Swedish law.

Any dispute, controversy or claim arising out of or in connection with this warranty, shall be finally settled by arbitration in accordance with the Rules of the Arbitration Institute of the Stockholm Chamber of Commerce. The place of arbitration shall be Stockholm. The language to be used in the arbitral proceedings shall be English.

## 1.2 Usage statistics

FLIR Systems reserves the right to gather anonymous usage statistics to help maintain and improve the quality of our software and services.

## 1.3 Changes to registry

The registry entry "HKEY\_LOCAL\_MACHINE\SYSTEM\CurrentControlSet\Control\Lsa\CompatibilityLevel will be automatically changed to level 2 if the FLIR Camera Monitor service detects a FLIR camera connected to the computer with a USB cable. The modification will only be executed if the camera device implements a remote network service that supports network logons.

## 1.4 U.S. Government Regulations

This product may be subject to U.S. Export Regulations. Please send any inquiries to [exportquestions@flir.com](mailto:exportquestions@flir.com).

## 1.5 Copyright

© 2018, FLIR Systems, Inc. All rights reserved worldwide. No parts of the software including source code may be reproduced, transmitted, transcribed or translated into any language or computer language in any form or by any means, electronic, magnetic, optical, manual or otherwise, without the prior written permission of FLIR Systems.

The documentation must not, in whole or part, be copied, photocopied, reproduced, translated or transmitted to any electronic medium or machine readable form without prior consent, in writing, from FLIR Systems.

Names and marks appearing on the products herein are either registered trademarks or trademarks of FLIR Systems and/or its subsidiaries. All other trademarks, trade names or company names referenced herein are used for identification only and are the property of their respective owners.

## 1.6 Quality assurance

The Quality Management System under which these products are developed and manufactured has been certified in accordance with the ISO 9001 standard.

FLIR Systems is committed to a policy of continuous development; therefore we reserve the right to make changes and improvements on any of the products without prior notice.

## 1.7 Patents

000439161; 000653423; 000726344; 000859020; 001707738; 001707746; 001707787; 001776519; 001954074; 002021543; 002021543-0002; 002056180; 002249953; 002531178; 002816785; 002816793; 011200326; 014347553; 057692; 061609; 07002405; 100414275; 101796816; 101796817; 101796818; 102334141; 1062100; 11063060001; 11517895; 1226865; 12300216; 12300224; 1285345; 1299699; 1325808; 1336775; 1391114; 1402918; 1404291; 1411581; 1415075; 1421497; 1456284; 1678485; 1732314; 17399650; 1880950; 1886650; 2007301511414; 2007303395047; 2008301285812; 2009301900619; 20100606357; 2010301761271; 2010301761303; 2010301761572; 2010305959313; 2011304423549; 2012304717443; 2012306207318; 2013302676195; 2015202354035; 2015304259171; 204465713; 204967995; 2106017; 2107799; 2115696; 2172004; 2315433; 2381417; 2794760001; 3006596; 3006597; 303330211; 4358936; 483782; 484155; 4889913; 4937897; 4995790001; 5177595; 540838; 579475; 584755; 599392; 60122153; 6020040116815; 60200606500.0; 6020060347796; 6020110003453; 615113; 615116; 664580; 664581; 665004; 665440; 67023029; 6707044; 677298; 68657; 69036179; 70022216; 70028915; 70028923; 70057990; 7034300; 710424; 71110035; 7154093; 7157705; 718801; 723605; 7237946; 7312822; 7332716; 7336823; 734803; 7544944; 7606484; 7634157; 7667198; 7809258; 7826738; 8018649; 8153971; 8212210; 8289372; 8340414; 8354639; 8364783; 8520970; 8565547; 8595689; 8599262; 8654239; 8680468; 8803093; 8823803; 8853631; 8933403; 9171361; 9191583; 9279728; 9280812; 9338352; 9423940; 9471970; 9595087; D549758.

## 1.8 EULA Terms

- You have acquired a device ("INFRARED CAMERA") that includes software licensed by FLIR Systems AB from Microsoft Licensing, GP or its affiliates ("MS"). Those installed software products of MS origin, as well as associated media, printed materials, and "online" or electronic documentation ("SOFTWARE") are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved.
- IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT ("EULA"), DO NOT USE THE DEVICE OR COPY THE SOFTWARE. INSTEAD, PROMPTLY CONTACT FLIR Systems AB FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. **ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).**
- GRANT OF SOFTWARE LICENSE.** This EULA grants you the following license:
  - You may use the SOFTWARE only on the DEVICE.
  - NOT FAULT TOLERANT.** THE SOFTWARE IS NOT FAULT TOLERANT. FLIR Systems AB HAS INDEPENDENTLY DETERMINED HOW TO USE THE SOFTWARE IN THE DEVICE, AND MS HAS RELIED UPON FLIR Systems AB TO CONDUCT SUFFICIENT TESTING TO DETERMINE THAT THE SOFTWARE IS SUITABLE FOR SUCH USE.
  - NO WARRANTIES FOR THE SOFTWARE.** THE SOFTWARE IS PROVIDED "AS IS" and with all faults. THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY, AND EFFORT (INCLUDING LACK OF NEGLIGENCE) IS WITH YOU. ALSO, THERE IS NO WARRANTY AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE OR AGAINST INFRINGEMENT. **IF YOU HAVE RECEIVED ANY WARRANTIES REGARDING THE DEVICE OR THE SOFTWARE, THOSE WARRANTIES DO NOT ORIGINATE FROM, AND ARE NOT BINDING ON, MS.**
  - No Liability for Certain Damages. **EXCEPT AS PROHIBITED BY LAW, MS SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE. IN NO EVENT SHALL MS BE LIABLE FOR ANY AMOUNT IN EXCESS OF U.S. TWO HUNDRED FIFTY DOLLARS (U.S.\$250.00).**
  - Limitations on Reverse Engineering, Decompilation, and Disassembly.** You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.
  - SOFTWARE TRANSFER ALLOWED BUT WITH RESTRICTIONS.** You may permanently transfer rights under this EULA only as part of a permanent sale or transfer of the Device, and only if the recipient agrees to this EULA. If the SOFTWARE is an upgrade, any transfer must also include all prior versions of the SOFTWARE.
  - EXPORT RESTRICTIONS.** You acknowledge that SOFTWARE is subject to U.S. export jurisdiction. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and destination restrictions issued by U.S. and other governments. For additional information see <http://www.micro-soft.com/exporting/>.

---

### 1.9 EULA Terms

Qt4 Core and Qt4 GUI, Copyright ©2013 Nokia Corporation and FLIR Systems AB. This Qt library is a free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version. This library is distributed in the hope that it will be useful,

but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License, <http://www.gnu.org/licenses/lgpl-2.1.html>. The source code for the libraries Qt4 Core and Qt4 GUI may be requested from FLIR Systems AB.



## WARNING

**Applicability:** Class B digital devices.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



## WARNING

**Applicability:** Digital devices subject to 15.19/RSS-210.

**NOTICE:** This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.



## WARNING

**Applicability:** Digital devices subject to 15.21.

**NOTICE:** Changes or modifications made to this equipment not expressly approved by FLIR Systems may void the FCC authorization to operate this equipment.



## WARNING

**Applicability:** Digital devices subject to 2.1091/2.1093/OET Bulletin 65.

**Radiofrequency radiation exposure Information:** The radiated output power of the device is below the FCC/IC radio frequency exposure limits. Nevertheless, the device shall be used in such a manner that the potential for human contact during normal operation is minimized.



## WARNING

Do not look directly into the laser beam. The laser beam can cause eye irritation.



## WARNING

Do not point the camera at the face of a person when the continuous autofocus function is on. The camera uses laser distance measurements (that are continuous) for the focus adjustments. The laser beam can cause eye irritation.



## WARNING

Do not point the camera at the face of a person when you use the autofocus function. You can set the camera to use a laser distance measurement for the focus adjustment. The laser beam can cause eye irritation.

**WARNING**

**Applicability:** Cameras with one or more batteries.

Do not disassemble or do a modification to the battery. The battery contains safety and protection devices which, if damage occurs, can cause the battery to become hot, or cause an explosion or an ignition.

**WARNING**

**Applicability:** Cameras with one or more batteries.

If there is a leak from the battery and you get the fluid in your eyes, do not rub your eyes. Flush well with water and immediately get medical care. The battery fluid can cause injury to your eyes if you do not do this.

**WARNING**

**Applicability:** Cameras with one or more batteries.

Do not continue to charge the battery if it does not become charged in the specified charging time. If you continue to charge the battery, it can become hot and cause an explosion or ignition. Injury to persons can occur.

**WARNING**

**Applicability:** Cameras with one or more batteries.

Only use the correct equipment to remove the electrical power from the battery. If you do not use the correct equipment, you can decrease the performance or the life cycle of the battery. If you do not use the correct equipment, an incorrect flow of current to the battery can occur. This can cause the battery to become hot, or cause an explosion. Injury to persons can occur.

**WARNING**

Make sure that you read all applicable MSDS (Material Safety Data Sheets) and warning labels on containers before you use a liquid. The liquids can be dangerous. Injury to persons can occur.

**CAUTION**

Do not point the infrared camera (with or without the lens cover) at strong energy sources, for example, devices that cause laser radiation, or the sun. This can have an unwanted effect on the accuracy of the camera. It can also cause damage to the detector in the camera.

**CAUTION**

Do not use the camera in temperatures more than +50°C (+122°F), unless other information is specified in the user documentation or technical data. High temperatures can cause damage to the camera.

**CAUTION**

**Applicability:** Cameras with one or more batteries.

Do not attach the batteries directly to a car's cigarette lighter socket, unless FLIR Systems supplies a specific adapter to connect the batteries to a cigarette lighter socket. Damage to the batteries can occur.

**CAUTION**

**Applicability:** Cameras with one or more batteries.

Do not connect the positive terminal and the negative terminal of the battery to each other with a metal object (such as wire). Damage to the batteries can occur.



**CAUTION****Applicability:** Cameras with one or more batteries.

Do not get water or salt water on the battery, or permit the battery to become wet. Damage to the batteries can occur.

**CAUTION****Applicability:** Cameras with one or more batteries.

Do not make holes in the battery with objects. Damage to the battery can occur.

**CAUTION****Applicability:** Cameras with one or more batteries.

Do not hit the battery with a hammer. Damage to the battery can occur.

**CAUTION****Applicability:** Cameras with one or more batteries.

Do not put your foot on the battery, hit it or cause shocks to it. Damage to the battery can occur.

**CAUTION****Applicability:** Cameras with one or more batteries.

Do not put the batteries in or near a fire, or into direct sunlight. When the battery becomes hot, the built-in safety equipment becomes energized and can stop the battery charging procedure. If the battery becomes hot, damage can occur to the safety equipment and this can cause more heat, damage or ignition of the battery.

**CAUTION****Applicability:** Cameras with one or more batteries.

Do not put the battery on a fire or increase the temperature of the battery with heat. Damage to the battery and injury to persons can occur.

**CAUTION****Applicability:** Cameras with one or more batteries.

Do not put the battery on or near fires, stoves, or other high-temperature locations. Damage to the battery and injury to persons can occur.

**CAUTION****Applicability:** Cameras with one or more batteries.

Do not solder directly onto the battery. Damage to the battery can occur.

**CAUTION****Applicability:** Cameras with one or more batteries.

Do not use the battery if, when you use, charge, or put the battery in storage, there is an unusual smell from the battery, the battery feels hot, changes color, changes shape, or is in an unusual condition. Speak with your sales office if one or more of these problems occurs. Damage to the battery and injury to persons can occur.

**CAUTION**

**Applicability:** Cameras with one or more batteries.

Only use a specified battery charger when you charge the battery. Damage to the battery can occur if you do not do this.

**CAUTION**

**Applicability:** Cameras with one or more batteries.

Only use a specified battery for the camera. Damage to the camera and the battery can occur if you do not do this.

**CAUTION**

**Applicability:** Cameras with one or more batteries.

The temperature range through which you can charge the battery is  $\pm 0^{\circ}\text{C}$  to  $+45^{\circ}\text{C}$  ( $+32^{\circ}\text{F}$  to  $+113^{\circ}\text{F}$ ), except for the Korean market where the approved range is  $+10^{\circ}\text{C}$  to  $+45^{\circ}\text{C}$  ( $+50^{\circ}\text{F}$  to  $+113^{\circ}\text{F}$ ). If you charge the battery at temperatures out of this range, it can cause the battery to become hot or to break. It can also decrease the performance or the life cycle of the battery.

**CAUTION**

**Applicability:** Cameras with one or more batteries.

The temperature range through which you can remove the electrical power from the battery is  $-15^{\circ}\text{C}$  to  $+50^{\circ}\text{C}$  ( $+5^{\circ}\text{F}$  to  $+122^{\circ}\text{F}$ ), unless other information is specified in the user documentation or technical data. If you operate the battery out of this temperature range, it can decrease the performance or the life cycle of the battery.

**CAUTION**

**Applicability:** Cameras with one or more batteries.

When the battery is worn, apply insulation to the terminals with adhesive tape or equivalent materials before you discard it. Damage to the battery and injury to persons can occur if you do not do this.

**CAUTION**

**Applicability:** Cameras with one or more batteries.

Remove any water or moisture on the battery before you install it. Damage to the battery can occur if you do not do this.

**CAUTION**

Do not apply solvents or equivalent liquids to the camera, the cables, or other items. Damage to the battery and injury to persons can occur.

**CAUTION**

Be careful when you clean the infrared lens. The lens has an anti-reflective coating which is easily damaged. Damage to the infrared lens can occur.

**CAUTION**

Do not use too much force to clean the infrared lens. This can cause damage to the anti-reflective coating.

**Note** The encapsulation rating is only applicable when all the openings on the camera are sealed with their correct covers, hatches, or caps. This includes the compartments for data storage, batteries, and connectors.

## 3.1 User-to-user forums

Exchange ideas, problems, and infrared solutions with fellow thermographers around the world in our user-to-user forums. To go to the forums, visit:

<http://forum.infraredtraining.com/>

## 3.2 Calibration

We recommend that you send in the camera for calibration once a year. Contact your local sales office for instructions on where to send the camera.

## 3.3 Accuracy

For very accurate results, we recommend that you wait 5 minutes after you have started the camera before measuring a temperature.

## 3.4 Disposal of electronic waste

Electrical and electronic equipment (EEE) contains materials, components and substances that may be hazardous and present a risk to human health and the environment when waste electrical and electronic equipment (WEEE) is not handled correctly.

Equipment marked with the below crossed-out wheeled bin is electrical and electronic equipment. The crossed-out wheeled bin symbol indicates that waste electrical and electronic equipment should not be discarded together with unseparated household waste, but must be collected separately.

For this purpose all local authorities have established collection schemes under which residents can dispose waste electrical and electronic equipment at a recycling centre or other collection points, or WEEE will be collected directly from households. More detailed information is available from the technical administration of the relevant local authority.



## 3.5 Training

To read about infrared training, visit:

- <http://www.infraredtraining.com>
- <http://www.irtraining.com>
- <http://www.irtraining.eu>

---

## 3.6 Documentation updates

Our manuals are updated several times per year, and we also issue product-critical notifications of changes on a regular basis.

To access the latest manuals, translations of manuals, and notifications, go to the Download tab at:

<http://support.flir.com>

It only takes a few minutes to register online. In the download area you will also find the latest releases of manuals for our other products, as well as manuals for our historical and obsolete products.

## 3.7 Important note about this manual

FLIR Systems issues generic manuals that cover several cameras within a model line.

This means that this manual may contain descriptions and explanations that do not apply to your particular camera model.

## 3.8 Note about authoritative versions

The authoritative version of this publication is English. In the event of divergences due to translation errors, the English text has precedence.

Any late changes are first implemented in English.

## 4.1 General

For customer help, visit:

<http://support.flir.com>

## 4.2 Submitting a question

To submit a question to the customer help team, you must be a registered user. It only takes a few minutes to register online. If you only want to search the knowledgebase for existing questions and answers, you do not need to be a registered user.

When you want to submit a question, make sure that you have the following information to hand:

- The camera model
- The camera serial number
- The communication protocol, or method, between the camera and your device (for example, SD card reader, HDMI, Ethernet, USB, or FireWire)
- Device type (PC/Mac/iPhone/iPad/Android device, etc.)
- Version of any programs from FLIR Systems
- Full name, publication number, and revision number of the manual

## 4.3 Downloads

On the customer help site you can also download the following, when applicable for the product:

- Firmware updates for your infrared camera.
- Program updates for your PC/Mac software.
- Freeware and evaluation versions of PC/Mac software.
- User documentation for current, obsolete, and historical products.
- Mechanical drawings (in \*.dxf and \*.pdf format).
- Cad data models (in \*.stp format).
- Application stories.
- Technical datasheets.

## 5.1 Procedure

Follow this procedure:

1. Before starting the camera for the first time, charge the battery for 3 hours using the stand-alone battery charger.
2. Put the battery into the camera battery compartment.
3. Insert a memory card into the card slot.

**Note** Empty or use a memory card that has not previously been used in another type of camera. The cameras may organize files differently on the memory card. There is therefore a risk of losing data if the same memory card is used in different types of cameras.

4. Push the on/off button  to turn on the camera.
5. Aim the camera toward the object of interest.
6. Adjust the infrared camera focus.

**Note** It is very important to adjust the focus correctly. Incorrect focus adjustment affects how the image modes work. It also affects the temperature measurement.

7. Push the Save button to save an image.
8. Download and install FLIR Tools/Tools+ or FLIR Report Studio on your computer.<sup>1</sup>
9. Start FLIR Tools/Tools+ or FLIR Report Studio.
10. Connect the camera to the computer using the USB cable.
11. Import the images into FLIR Tools/Tools+ or FLIR Report Studio and create an inspection report.
12. Send the inspection report to your client.

## 5.2 To keep in mind

- Adjust the focus first. When the camera is out of focus, the measurement will be wrong.
- By default, most cameras adapt the scale automatically. Use this mode first, but do not hesitate to set the scale manually.
- A thermal camera has a resolution limit. This depends on the size of the detector, the lens, and the distance to the target. Use the center of the spot tool as a guide to the minimum possible object size, and get closer if necessary. Make sure to stay away from dangerous areas and live electrical components.
- Be careful when holding the camera perpendicular to the target. Be observant of reflections, especially at low emissivities—you, the camera, or the surroundings may become the main source of reflection.
- Select a zone of high emissivity, e.g., an area with a matte surface, to perform a measurement.
- Blank objects, i.e., those with low emissivities, may appear warm or cold in the camera, because they mainly reflect the environment.
- Avoid direct sunlight on the details that you are inspecting.
- Various types of faults, e.g., those in a building's construction, may result in the same type of thermal pattern.
- Correctly analyzing an infrared image requires professional knowledge about the application.

---

1. FLIR Tools+ and FLIR Report Studio are licensed software.

## 6.1 General

Register your camera to receive an extended warranty and other related benefits.

To register the camera, you must log in using a FLIR Customer Support account. If you already have an existing FLIR Customer Support account, you can use the same login credentials. To complete the registration, you must enter a four-digit verification code into the camera.


## 6.2 Procedure

Follow this procedure:

1. Use a computer or other device with internet access and go to the following website:

<http://support.flir.com/camreg>

This displays the following dialog:

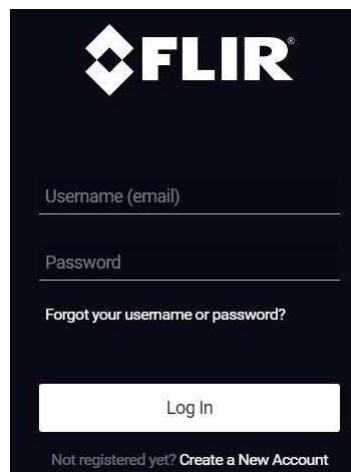A dark-themed login dialog box for FLIR. At the top is the FLIR logo. Below it are two input fields: 'Username (email)' and 'Password'. Under the password field is a link that says 'Forgot your username or password?'. At the bottom is a large white button labeled 'Log In'. Below the button is a link that says 'Not registered yet? Create a New Account'.

2. To log in with your existing FLIR Customer Support account, do the following:
  - 2.1. Enter your *Username* and *Password*.
  - 2.2. Click *Log In*.


3. To create a new FLIR Customer Support account, do the following:

- 3.1. Click *Create a New Account*.
- 3.2. Enter the required information and click *Create Account*.

### FLIR Customer Support Center

The screenshot shows the 'Create Account' page of the FLIR Customer Support Center. At the top, there is a navigation bar with links: Home, Answers, Ask a Question, Product Registration, Downloads, My Stuff, and Service. Below this is a blue header with the text 'Create Account'. A note states: '\* Denotes a required field.' The form is divided into two main sections: 'New Account' and 'Contact Information'. The 'New Account' section includes fields for 'Username (email)\*', 'Password\*' (with a note 'Must be at least 6 characters'), and 'Verify Password\*'. The 'Contact Information' section includes fields for 'First Name\*', 'Last Name\*', 'Email Address\*', 'Telephone', 'Company\*', 'Address', 'City', 'State', 'Postal Code', and 'Country\*'. At the bottom of the form is a 'Create Account' button.


4. On the camera, select  (*Settings*) > *Device settings* > *Camera information* > *Register camera*. This displays the following dialog box:

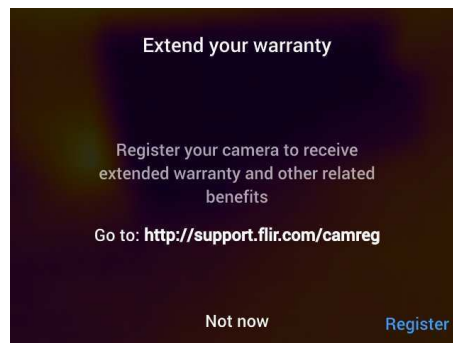

**Note** The first time you start the camera, the registration dialog box is displayed as a part of the setup of regional settings.



5. Select *Register* and push the navigation pad. This displays a dialog box with the serial number of the camera.

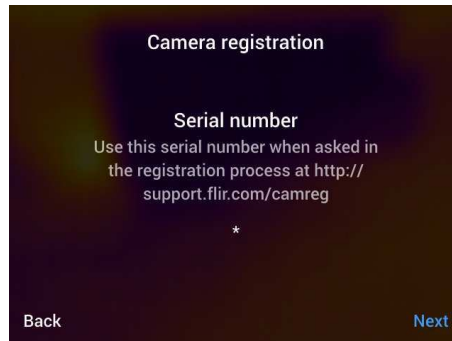

6. On the computer, enter the serial number of the camera and click *Validate*.

### FLIR Customer Support Center

Home Answers Ask a Question Product Registration Downloads My Stuff Service

## FLIR Product Registration

Please see this [FAQ](#) answer for information on registration of FLIR Security products

Serial number

Enter your serial number in the textbox and click Validate

Validate

7. When the serial number is validated, click *Continue*.

### FLIR Customer Support Center

Home Answers Ask a Question Product Registration Downloads My Stuff Service

## FLIR Product Registration

Please see this [FAQ](#) answer for information on registration of FLIR Security products

Serial number

Enter your serial number in the textbox and click Validate

Validate

| Part number | Description |
|-------------|-------------|
| 72202-0303  | FLIR        |

Your serial number is validated and was found, please click Continue.

Continue

8. Enter the required information and click *Register Product*.

## FLIR Customer Support Center

Home Answers Ask a Question Product Registration Downloads My Stuff Service

### FLIR Product Registration

3.4

**\* Required Information**

|              |                      |                |                      |
|--------------|----------------------|----------------|----------------------|
| First name * | <input type="text"/> | Company *      | <input type="text"/> |
| Last name *  | <input type="text"/> | Address *      | <input type="text"/> |
| Title        | <input type="text"/> |                | <input type="text"/> |
| Email *      | <input type="text"/> | City *         | <input type="text"/> |
| Telephone *  | <input type="text"/> | State/Province | <input type="text"/> |
| Country *    | <input type="text"/> | Postal Code *  | <input type="text"/> |

Choose Industry The core business of your company \*

Choose

Choose Application The main application for your FLIR product \*

Choose

Click the button to register  
FLIR  
Serial number 72204950

**Register Product**

9. When the registration is completed, the four-digit code is displayed.

## FLIR Customer Support Center

Home Answers Ask a Question Product Registration Downloads My Stuff Service

### FLIR Product Registration

3.4

Thank you for registering your product.

Use the code below to unlock your camera:  
**Code: 2198**

Your warranty has been extended to two (2) years.


Your product will be visible under My Stuff - Products

### Note

- The code is also sent by e-mail to the address registered with your FLIR Customer Support account.
- The code is also displayed in your FLIR Customer Support portal under *My Stuff > Products*.

10. On the camera, do the following to enter the code:

- Push the navigation pad up/down to select a digit.
- Push the navigation pad left/right to navigate to the previous/next digit.
- When all digits have been entered, push the navigation pad right to select *Submit*. Push the navigation pad to confirm.

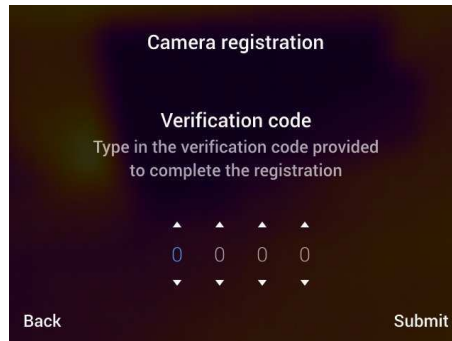

11. The camera is now registered and your extended warranty is activated.


## 7.1 General

To prevent strain-related injuries, it is important that you hold the camera ergonomically correctly. This section gives advice and examples on how to hold the camera.

### Note


- Always tilt the LCD screen to suit your work position.
- When you hold the camera, make sure that you support the optics housing with your left hand too. This decreases the strain on your right hand.

## 7.2 Figure

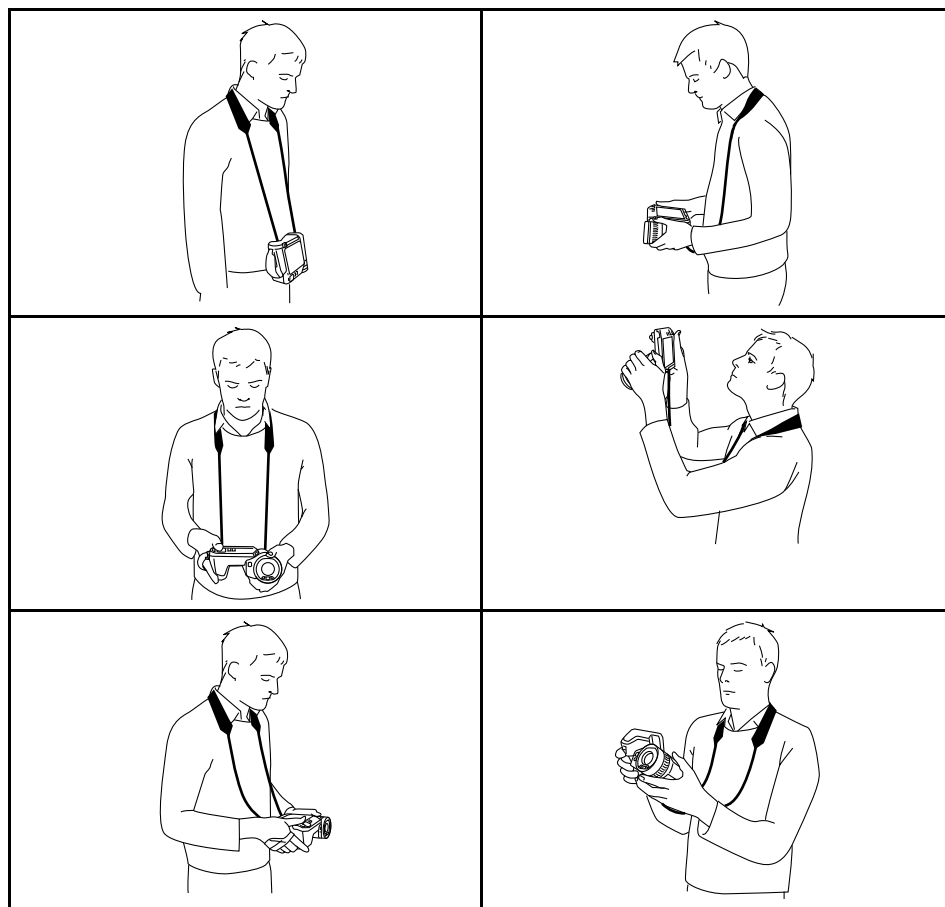

## 8.1 View from the rear

### 8.1.1 Figure

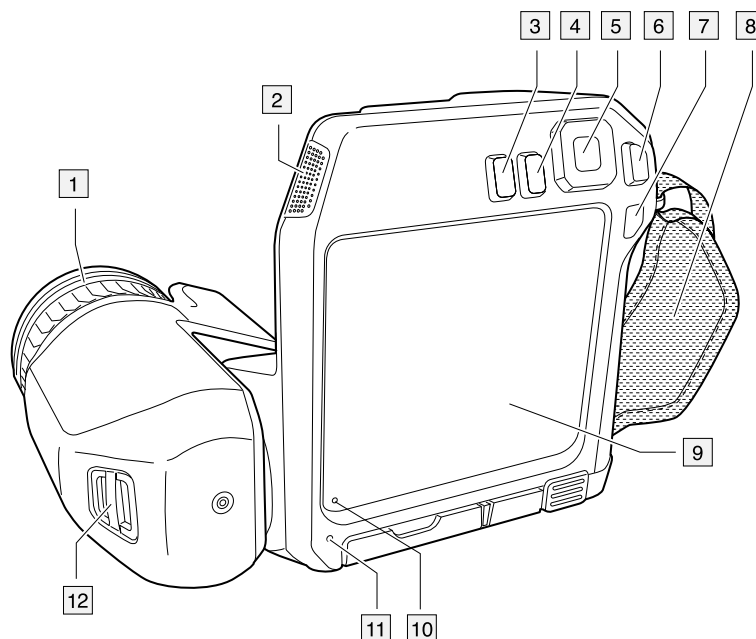


### 8.1.2 Explanation

1. Focus ring.
2. Speaker.
3. Programmable button.
4. Image archive button.
5. Navigation pad with center push.
6. Back button.
7. On/off button.
8. Hand strap.
9. Multi-touch LCD screen.
10. Light sensor.
11. Microphone.
12. Attachment point for the neck strap.

## 8.2 View from the front

### 8.2.1 Figure

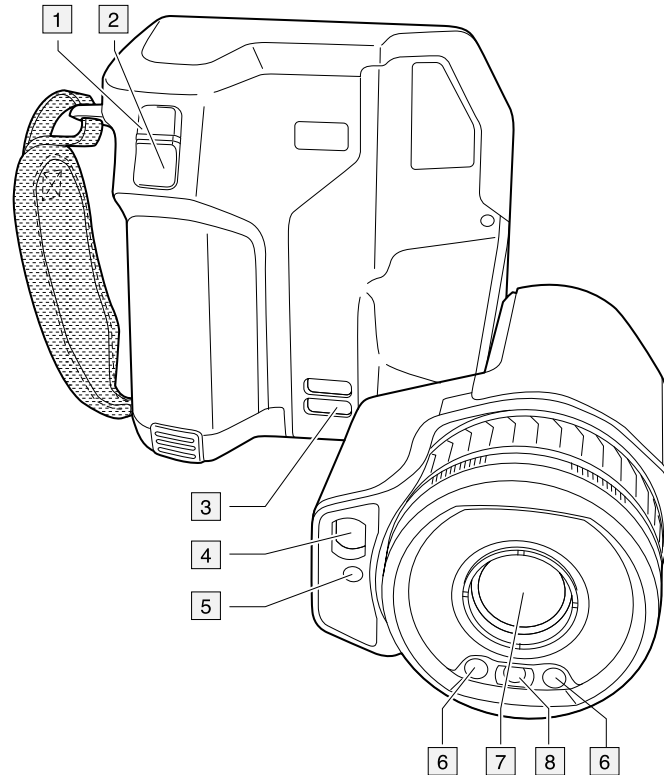


### 8.2.2 Explanation

1. Autofocus button.
2. Save button.
3. Attachment point for the neck strap.
4. Laser receiver.
5. Laser transmitter.
6. Camera lamp (left and right sides).
7. Infrared lens.
8. Digital camera.

## 8.3 View from the bottom

### 8.3.1 Figure

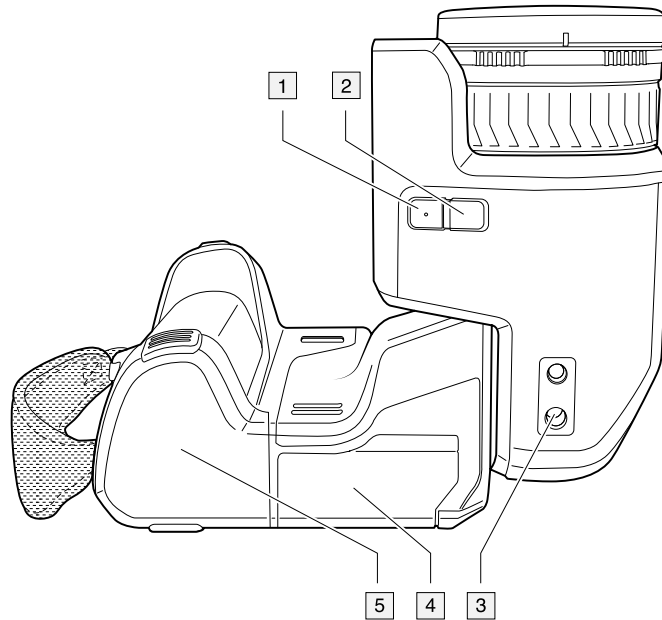

### 8.3.2 Explanation

1. Laser button.
2. Programmable button.
3. Tripod mount.
4. Cover for the connector compartment.
5. Battery.

## 8.4 Laser distance meter and laser pointer

### 8.4.1 General

The laser distance meter consists of a laser transmitter and a laser receiver. The laser distance meter determines the distance to a target by measuring the time it takes for a laser pulse to reach the target and return to the laser receiver. This time is converted to a distance, which is displayed on the screen.

The laser transmitter also works as a laser pointer. When the laser is on, you will see a laser dot approximately at the target.




#### WARNING

Do not look directly into the laser beam. The laser beam can cause eye irritation.

**Note**


- The laser is enabled by a setting. Select  (*Settings*) > *Device settings* > *Lamp & laser* > *Enable lamp & laser*.
- The symbol  is displayed on the screen when the laser is on.
- The camera can be configured to automatically measure the distance when an image is saved. Select  (*Settings*) > *Save options & storage* > *Measure distance*. With this setting, the *Object distance* parameter (see section 16.5 *Changing the measurement parameters*, page 73) in the image data is automatically updated with the measured distance when an image is saved. (There is no effect on the *Object distance* setting in live mode.)
- If the target reflection is low or if the target is angled from the laser beam, there may be no return signal, and the distance cannot be measured.
- For large lenses that cover the laser transmitter and receiver, the laser functionality is disabled.
- The laser distance meter may not be enabled in all markets.

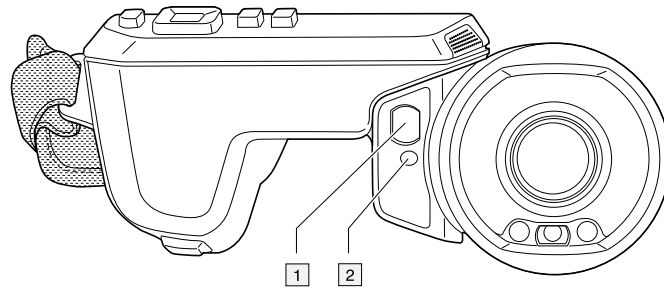**8.4.2 Laser transmitter and receiver**

1. Laser receiver.
2. Laser transmitter.

**8.4.3 Difference in position**

This figure shows the difference in position between the laser transmitter and the optical center of the infrared lens. The laser transmitter and the optical axis are parallel.

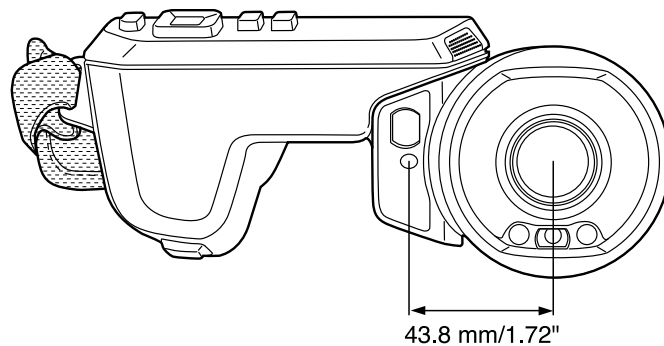



#### 8.4.4 Laser warning label

A laser warning label with the following information is attached to the camera:




#### 8.4.5 Laser rules and regulations

Wavelength: 650 nm. Maximum output power: 1 mW.

This product complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.

## 9.1 General

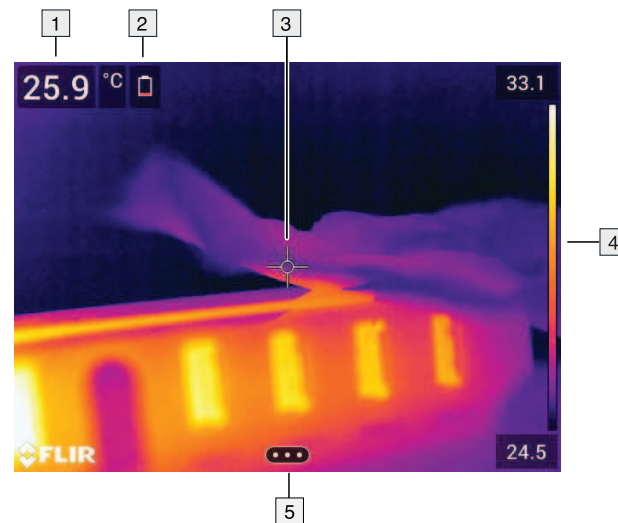

1. Result table.
2. Status icons.
3. Measurement tool (e.g., spotmeter).
4. Temperature scale.
5. Menu system button.

## 9.2 Menu system


To display the menu system, push the navigation pad or tap the menu system button



1. Recording mode button.
2. Measurement parameters button.
3. Image mode button.
4. Measurement button.

5. Color button.
6. Settings button.
7. Main menu.
8. Submenu.

### 9.3 Soft buttons

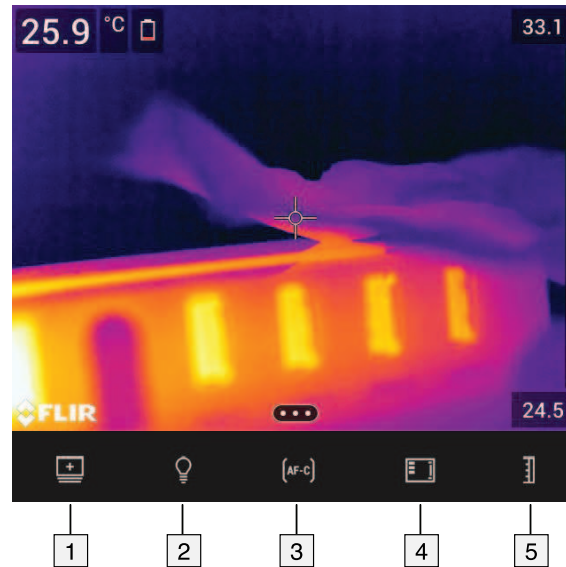

1. Work folder button: Touch to open a menu where you can create new folders and change the active folder.
2. Lamp button: Touch to turn on/off the camera lamp.
3. Continuous autofocus button: Touch to enable/disable continuous autofocus.
4. Overlay button: Touch to show/hide all overlay graphics and image overlay information.
5. Temperature scale button: Touch to switch between the automatic and manual image adjustment modes.

#### Note


- Before you can turn on the camera lamp, you need to enable the lamp. Select  (Settings) > Device settings > Lamp & laser > Enable lamp & laser or Enable lamp & laser + Use lamp as flash.
- Before you can enable continuous autofocus, you need to enable the laser. Select  (Settings) > Device settings > Lamp & laser > Enable lamp & laser or Enable lamp & laser + Use lamp as flash.

9.4 Status icons and indicators

|                                                                                   |                                                                                                                                                                                                                                                                               |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Battery status indicator. <ul style="list-style-type: none"><li>• When the battery status is 20–100%, the indicator is white.</li><li>• When the battery is charging, the indicator is green.</li><li>• When the battery status is below 20%, the indicator is red.</li></ul> |
|  | The remaining storage capacity is below 100 MB.                                                                                                                                                                                                                               |
|  | A Bluetooth headset is connected.                                                                                                                                                                                                                                             |
|  | External infrared window compensation is enabled.                                                                                                                                                                                                                             |
|  | The laser is on.                                                                                                                                                                                                                                                              |

9.5 Swipe-down menu

To open the swipe-down menu, place your finger at the top of the screen and swipe down.

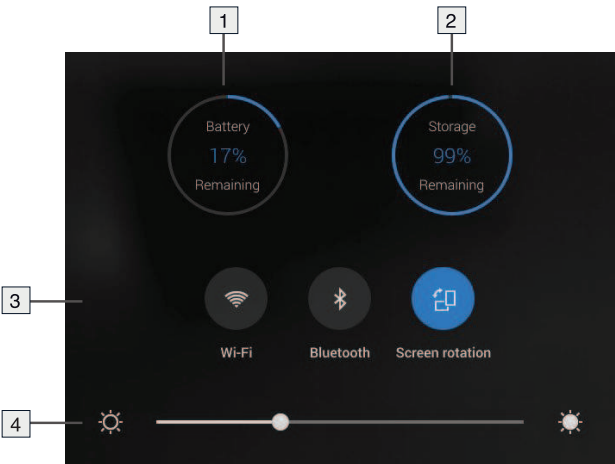

- 1. Battery status indicator.
- 2. Memory card storage status indicator.
- 3.
  - *Wi-Fi* button: Touch to enable/disable Wi-Fi. See also section 23 *Configuring Wi-Fi*, page 98.
  - *Bluetooth* button: Touch to enable/disable Bluetooth. See also section 22 *Pairing Bluetooth devices*, page 97.
  - *Screen rotation* button: Touch to enable/disable screen rotation.
- 4. Screen brightness slider: Used to control the brightness of the screen.


9.6 Image overlay information

The image information consists of items such as the date, emissivity, and atmospheric temperature. All image information is saved in the image file and can be viewed in the image archive. You can also choose to display selected items as image overlay information.

All image overlay information displayed on the live image will also be displayed on saved images. For more information, see sections section 25.1.4 *Device settings*, page 103 and 14.8 *Hiding all overlay*, page 65.



## 10.1 General

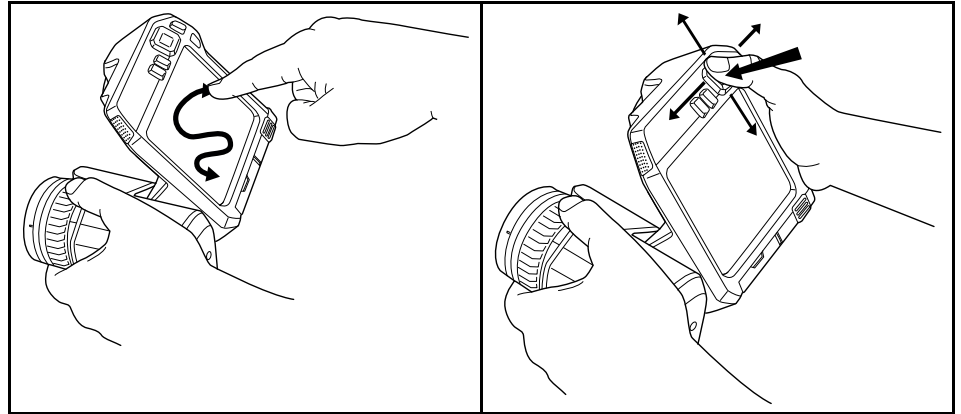

The figure above shows the two ways to navigate the menu system in the camera:

- Using your finger or a stylus pen specially designed for capacitive touch usage to navigate the menu system (left).
- Using the navigation pad to navigate the menu system (right) and the back button ↶.

You can also use a combination of the two.

In this manual, it is assumed that the navigation pad is used, but most tasks can also be carried out using your finger or a stylus pen.

## 10.2 Navigating using the navigation pad

You navigate the menu system by using the navigation pad and the back button:

- To display the menu system, push the center of the navigation pad.
- To navigate in menus, submenus, and dialog boxes, and to change values in dialog boxes, push the navigation pad up/down or left/right.
- To confirm changes and settings in menus and dialog boxes, push the center of the navigation pad.
- To leave dialog boxes and to go back in the menu system, push the back button ↶.

## 11.1 Charging the battery

### 11.1.1 General

- Before starting the camera for the first time, charge the battery for 3 hours using the stand-alone battery charger.
- Select a mains socket that is near the equipment and easily accessible.

### 11.1.2 Using the stand-alone battery charger to charge the battery

#### 11.1.2.1 Stand-alone battery charger LED indicator

| Type of signal                    | Explanation                   |
|-----------------------------------|-------------------------------|
| The white LED flashes.            | The battery is being charged. |
| The white LED glows continuously. | The battery is fully charged. |

#### 11.1.2.2 Procedure


Follow this procedure:

1. Put one or two batteries in the battery charger.
2. Connect the power supply cable plug to the connector on the battery charger.
3. Connect the power supply mains-electricity plug to a mains socket.
4. When the white LED on the battery charger glows continuously, the batteries are fully charged.
5. It is good practice to disconnect the stand-alone battery charger from the mains socket when the batteries are fully charged.

### 11.1.3 Using the USB battery charger to charge the battery when it is inside the camera

Follow this procedure:

1. Put the battery into the battery compartment of the camera.
2. Connect the USB battery charger to a mains socket.
3. Open the cover for the connector compartment at the bottom of the camera.
4. Connect the USB connector of the USB battery charger to the USB-C connector in the connector bay of the camera.

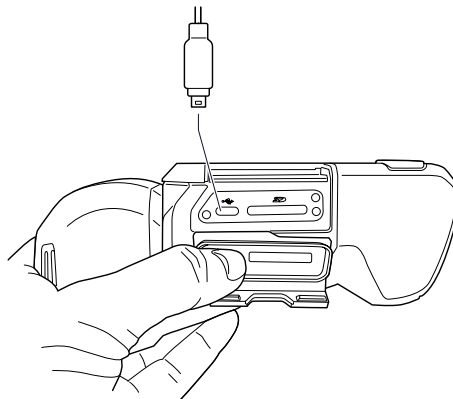


5. To check the status of the battery charging, do one of the following:
  - If the camera is turned on: Place your finger at the top of the screen and swipe down. The battery status is displayed on the swipe-down menu.
  - If the camera is turned off: The battery charging indicator is temporarily displayed on the screen.
6. It is good practice to disconnect the USB battery charger from the mains socket when the battery is fully charged.

**Note** When closing the cover for the connector compartment, firmly press along the edges of the cover to make sure that it closes tightly.

#### 11.1.4 Charging the battery using a USB cable connected to a computer

Follow this procedure:

1. Open the cover for the connector compartment at the bottom of the camera.
2. Connect a USB cable to the USB-C connector in the connector bay. Connect the other end of the USB cable to the computer.

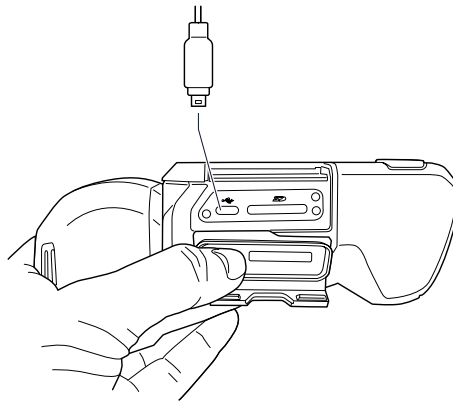

#### **Note**

- To charge the camera, the computer must be turned on.
- Charging the camera using a USB cable connected to a computer takes *considerably* longer than using the USB battery charger or the stand-alone battery charger. If the camera is on, it may use more power than the computer provides.
- When closing the cover for the connector compartment, firmly press along the edges of the cover to make sure that it closes tightly.

## 11.2 Installing and removing the camera battery

### 11.2.1 Installing the battery

**Note** Use a clean, dry cloth to remove any water or moisture on the battery before you install it.

#### 11.2.1.1 Procedure

Follow this procedure:

1. Push the battery into the battery compartment. The battery makes a click when it locks in place.




### 11.2.2 Removing the battery

**Note** Use a clean, dry cloth to remove any water or moisture on the camera before you remove the battery.

Follow this procedure:

1. Turn off the camera.
2. Push the two release buttons and remove the battery from the camera.

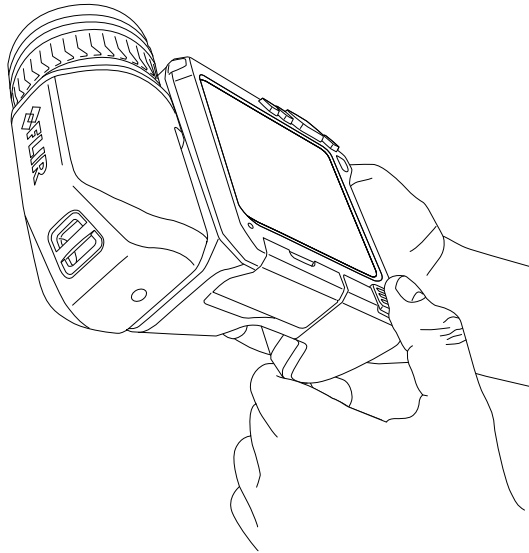


### 11.3 Turning on and turning off the camera

- To turn on the camera, push the on/off button .
- To turn off the camera, push and hold the on/off button  for more than 0.5 second.

**Note** Do not remove the battery to turn off the camera.

## 11.4 Adjusting the angle of lens

### 11.4.1 Figure

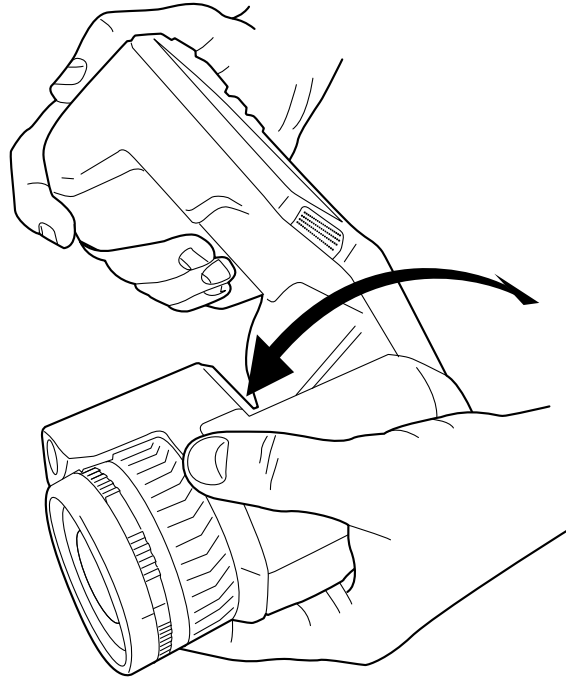


### 11.4.2 Procedure

To adjust the angle, tilt the lens up or down.

---

## 11.5 Adjusting the infrared camera focus manually

### 11.5.1 Figure

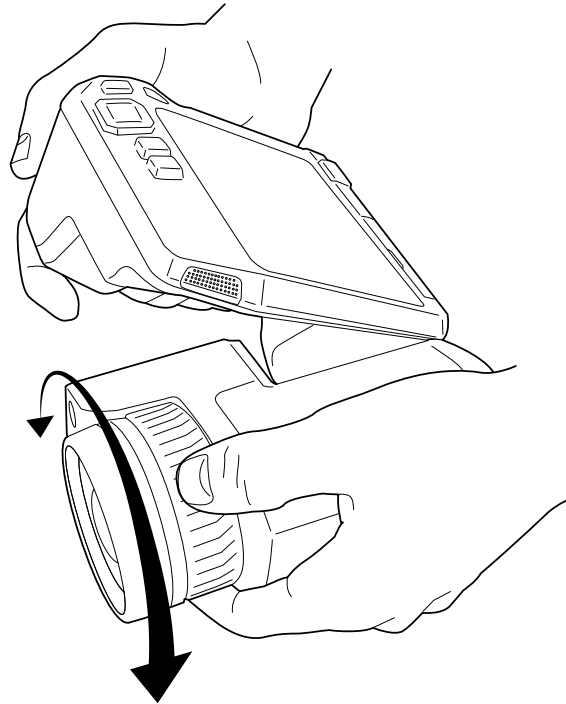

### 11.5.2 Procedure

Follow this procedure:

1. Do one of the following:
  - For far focus, rotate the focus ring clockwise (with the LCD screen facing toward you).
  - For near focus, rotate the focus ring counter-clockwise (with the LCD screen facing toward you).

**Note** Do not touch the lens surface when you adjust the infrared camera focus manually. If this happens, clean the lens according to the instructions in 26.2 *Infrared lens*, page 106.

**Note** It is very important to adjust the focus correctly. Incorrect focus adjustment affects how the image modes *Thermal MSX*, *Thermal*, and *Picture-in-picture* work. It also affects the temperature measurement.

## 11.6 Autofocusing the infrared camera

### 11.6.1 General


When autofocusing, the infrared camera can use one of the following focus methods:

- *Contrast*: The focus is based on maximizing the image contrast.
- *Laser*: The focus is based on a laser distance measurement. The laser is used when the camera is autofocusing.

The focus method is configured by a setting. Select  (*Settings*) > *Device settings* > *Focus* > *Auto focus* and then select *Contrast* or *Laser*.

**Note** For large lenses that cover the laser transmitter and receiver, the laser functionality is disabled. This means that the focus method *Laser* is not available.

### 11.6.2 Figure

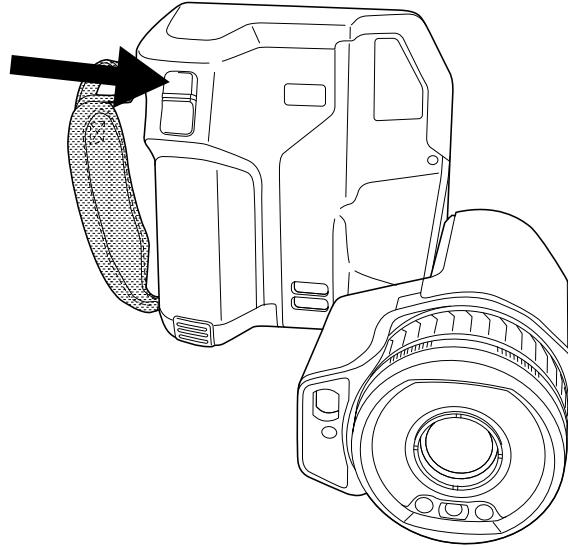

### 11.6.3 Procedure



#### WARNING

When the camera is set to autofocus with the laser method (*Settings* > *Device settings* > *Focus* > *Auto focus* > *Laser*), do not point the camera at the face of a person when you use the autofocus function. The laser beam can cause eye irritation.

Follow this procedure:

1. To autofocus the infrared camera, push the Autofocus button.

**Note** You can also assign the autofocus function to one of the programmable buttons **P**. For more information, see section 11.12 *Assigning functions to the programmable buttons*, page 37.

## 11.7 Continuous autofocus

### 11.7.1 General

The infrared camera can be set up to perform continuous autofocus.

When the continuous autofocus function is enabled, the camera bases the focus adjustments on continuous laser distance measurements. The laser is continuously on.



#### WARNING

Do not point the camera at the face of a person when the continuous autofocus function is on. The camera uses laser distance measurements (that are continuous) for the focus adjustments. The laser beam can cause eye irritation.

**Note**

- Before you can enable continuous autofocus, you need to enable the laser and select laser as focus method. See section 11.7.2 *Procedure*, page 33.
- When continuous autofocus is enabled, it is not possible to manually adjust the focus by rotating the focus ring.
- For large lenses that cover the laser transmitter and receiver, the laser functionality is disabled. This means that continuous autofocus is not available.

**11.7.2 Procedure**

Follow this procedure:

1. Push the navigation pad to display the menu system.
2. Select  (*Settings*) and push the navigation pad. This displays the *Settings* menu.
3. Use the navigation pad to select *Device settings* > *Lamp & laser* > *Enable lamp & laser*.
4. Use the navigation pad to select *Device settings* > *Focus* > *Autofocus* > *Laser*.
5. Do one of the following:
  - Use the navigation pad to select *Device settings* > *Focus* > *Continuous autofocus* > *On*.
  - Touch the soft button .

**Note** You can also assign the continuous autofocus function to one of the programmable buttons . For more information, see section 11.12 *Assigning functions to the programmable buttons*, page 37.

**11.8 Operating the laser distance meter****11.8.1 General**

The laser distance meter consists of a laser transmitter and a laser receiver. The laser distance meter determines the distance to a target by measuring the time it takes for a laser pulse to reach the target and return to the laser receiver. This time is converted to a distance, which is displayed on the screen.

The laser transmitter also works as a laser pointer. When the laser is on, you will see a laser dot approximately at the target.

**WARNING**

Do not look directly into the laser beam. The laser beam can cause eye irritation.

**Note**

- The laser is enabled by a setting. Select  (Settings) > Device settings > Lamp & laser > Enable lamp & laser.
- The symbol  is displayed on the screen when the laser is on.
- The camera can be configured to automatically measure the distance when an image is saved. Select  (Settings) > Save options & storage > Measure distance. With this setting, the *Object distance* parameter (see section 16.5 *Changing the measurement parameters*, page 73) in the image data is automatically updated with the measured distance when an image is saved. (There is no effect on the *Object distance* setting in live mode.)
- If the target reflection is low or if the target is angled from the laser beam, there may be no return signal, and the distance cannot be measured.
- For large lenses that cover the laser transmitter and receiver, the laser functionality is disabled.
- The laser distance meter may not be enabled in all markets.

**11.8.2 Procedure**

Follow this procedure:

1. To turn on the laser, push and hold the laser button . The distance to the target is displayed on the screen.
2. To turn off the laser, release the laser button .

**11.9 Measuring areas****11.9.1 General**

**Note** For large lenses that cover the laser transmitter and receiver, the laser functionality is disabled. This means that the area measurement function is not available.

The distance measured by the laser distance meter can be used as the basis for area calculations. A typical application is to estimate the size of a damp stain on a wall.

To measure the area of a surface, you need to lay out a box or circle measurement tool on the screen. The camera calculates the area of the surface enclosed by the box or circle tool. The calculation is an estimate of the surface area, based on the measured distance to the target.

When the laser distance meter is on, you will see a laser dot approximately at the target. The laser distance meter measures the distance to that target. The camera assumes that this distance is valid for the entire box or circle tool.

For successful area measurements, keep the following in mind:

- Make sure that the box or circle tool is in the center of the image.
- Adjust the size of the box or circle tool to the size of the target.
- Hold the camera perpendicular to the target.
- Avoid targets with many details at different distances from the camera.

### 11.9.2 Procedure

**Note** This procedure assumes that you have enabled the laser. Select  (Settings) > Device settings > Lamp & laser > Enable lamp & laser.

Follow this procedure:

1. Add a box or circle measurement tool, see section 16.2 *Adding/removing measurement tools*, page 71.
2. Set the camera to measure and display the area of the box or circle, see section 16.6 *Displaying values in the result table*, page 76.
3. Make sure that the box or circle tool is in the center of the image, see section 16.4 *Moving and resizing a measurement tool*, page 72.
4. Adjust the size of the box or circle tool to the size of the target, see section 16.4 *Moving and resizing a measurement tool*, page 72.
5. Hold the camera perpendicular to the target. Push and hold the laser button .
6. The calculated area is displayed in the result table.

## 11.10 Connecting external devices and storage media


### 11.10.1 General

You can connect the following external devices and media to the camera:

- An SD memory card.
- A computer to move image and video files to and from the camera, using a USB-C to USB-A or a USB-C to USB-C cable.
- A video monitor or projector, using a USB-C to HDMI adapter.
- A USB battery charger.

**Note** Empty or use a memory card that has not previously been used in another type of camera. The cameras may organize files differently on the memory card. There is therefore a risk of losing data if the same memory card is used in different types of cameras.

### 11.10.2 Figure

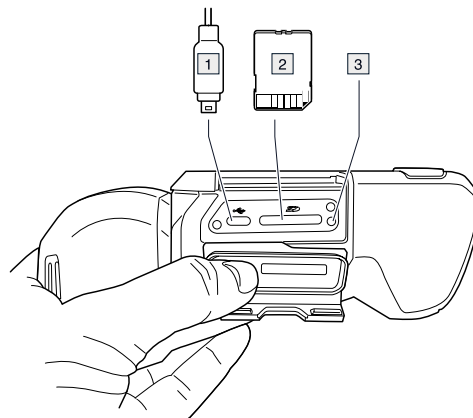

### 11.10.3 Explanation

1. USB-C cable.
2. SD memory card.

3. LED indicator showing that the memory card is busy.

**Note**

- Do not eject the memory card when this LED is flashing.
- Do not connect the camera to a computer when this LED is flashing.

**Note** When closing the cover for the connector compartment, firmly press along the edges of the cover to make sure that it closes tightly.

## 11.11 Moving files to a computer

### 11.11.1 General


When you save an image or video clip in the image archive of the camera, the file is stored on the memory card.

You can connect the camera to a computer, using a USB-C to USB-A or a USB-C to USB-C cable. Once connected, you can move the image and video files from the memory card to the computer.

### 11.11.2 Procedure

Follow this procedure:

1. Open the cover for the connector compartment at the bottom of the camera.
2. Connect a USB cable to the USB-C connector in the connector bay. Connect the other end of the USB cable to the computer.

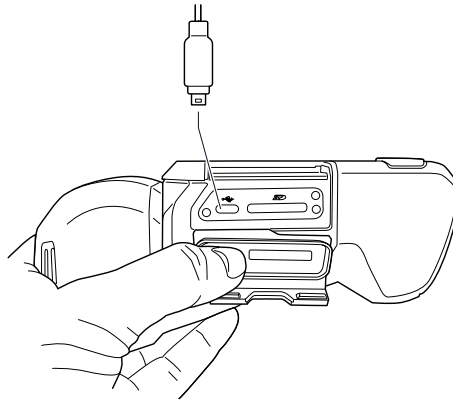

3. Turn on the camera.
  4. Do one of the following:
    - Move the files to the computer using a drag-and-drop operation in Microsoft Windows Explorer.
- Note** Moving a file using a drag-and-drop operation does not delete the file in the camera.
- Import the images into FLIR Tools/Tools+ or FLIR Report Studio.


**Note** When closing the cover for the connector compartment, firmly press along the edges of the cover to make sure that it closes tightly.



## 11.12 Assigning functions to the programmable buttons

### 11.12.1 General

There are two individually programmable buttons: one above the screen and one at the bottom of the optics housing.

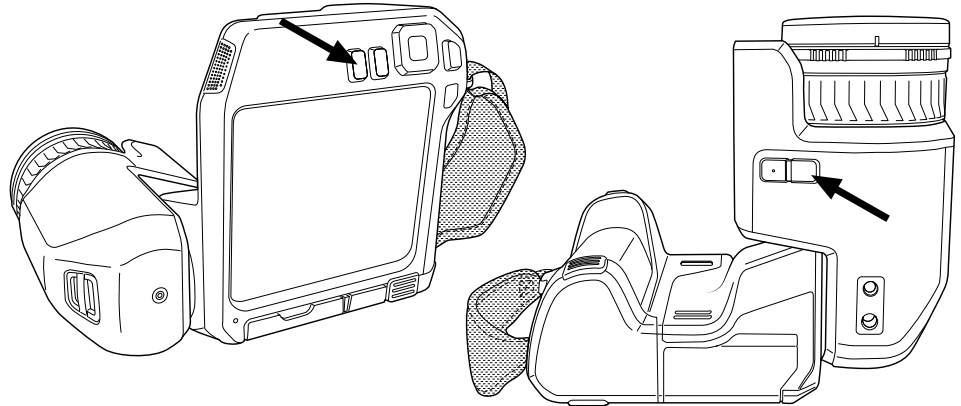

You can assign different functions to the programmable buttons. You can, for example, use a programmable button to easily switch between two settings you use often. You can also choose to define two different setups for saving and previewing: the usual setup for the Save button (which is defined by the *Save options and storage* settings, see section 25.1.3 *Save options & storage*, page 102) and another setup for a programmable button.

Available options for the programmable buttons:

- *No action*: This is the default setting. Nothing will happen when you push the button.
- *Switch Auto <> Manual temperature scale*: Switch between automatic or manual image adjustment mode. For more information, see section 14.3 *Adjusting the infrared image*, page 59.
- *Autofocus*: One-shot autofocus of the infrared camera.
- *Continuous autofocus<sup>2</sup>*: Switch between the enabled/disabled continuous autofocus functions.
- *Calibrate*: Perform a manual NUC. For more information, see section 14.7 *Performing a non-uniformity correction (NUC)*, page 65.
- *Auto-adjust the manual temperature scale*: Perform an automatic adjustment of the image while remaining in manual image adjustment mode.
- *Switch Thermal <> Digital camera<sup>2</sup>*: Switch between the image modes *Thermal* and *Digital camera*. For more information, see section 15 *Working with image modes*, page 67.
- *Switch Thermal <> Thermal MSX*: Switch between the image modes *Thermal* and *Thermal MSX*. For more information, see section 15 *Working with image modes*, page 67.
- *Switch 1x zoom <> Max zoom*: Switch between the digital zoom factor of 1x and maximum zoom.
- *Switch camera flash On <> Off*: Switch between the enabled/disabled camera flash functions. For more information, see section 11.13 *Using the camera lamp as a flash*, page 38.

**Note** The flash function will not be activated if the setting *Lamp & laser* is set to the option *Disable all*. For more information, see section 25.1.4 *Device settings*, page 103.

2. This item is dependent on the lens model.

- 
- *Switch single shot <> Video*: Switch between the recording modes *Single shot* and *Video*.
  - *Switch between two latest palettes*: Switch between the two last-used color palettes. For more information, see section 14.5 *Changing the color palettes*, page 63.
  - *Switch temperature range*: Cycle through the camera temperature ranges. For more information, see section 25.1.2 *Camera temperature range*, page 102.
  - *Switch screen rotation On <> Off*: Switch between enabled/disabled screen rotation.
  - *Save*: Save an image.
  - *Save + Prompt for note*: Save an image and display the note annotation tool.
  - *Save + Prompt for table*: Save an image and display the table annotation tool.
  - *Save + Prompt for voice annotation*: Save an image and display the voice annotation tool.
  - *Save + Prompt for sketch*: Save an image and display the sketch annotation tool.
  - *Save + Select annotation from menu*: Save an image and display the annotation tool menu.
  - *Preview*: Display a preview image.
  - *Preview + Prompt for note*: Display a preview image and the note annotation tool.
  - *Preview + Prompt for table*: Display a preview image and the table annotation tool.
  - *Preview + Prompt for voice annotation*: Display a preview image and the voice annotation tool.
  - *Preview + Prompt for sketch*: Display a preview image and the sketch annotation tool.
  - *Preview + Select annotation from menu*: Display a preview image and the annotation tool menu.

### 11.12.2 Procedure

Follow this procedure:

1. Push and hold the programmable button **P**. This displays the *Programmable button* menu.
2. Push the navigation pad up/down to select one of the functions. Push the center of the navigation pad to confirm.

## 11.13 Using the camera lamp as a flash

### 11.13.1 General

**Note** The availability of this feature is dependent on the lens model.

The camera lamp can be used as a flash for the digital camera. When the flash function is enabled, the camera lamp will flash when an image is saved by pushing the *Save* button.

You can also turn on the camera lamp to use it as a flashlight.

### 11.13.2 Procedure

Follow this procedure:

1. Push the navigation pad to display the menu system.
2. Select  (*Settings*) and push the navigation pad. This displays the *Settings* menu.
3. Use the navigation pad to select *Device settings > Lamp & laser*.

4. Do one of the following:

- To enable the camera lamp function, select *Enable lamp & laser* and push the navigation pad. To turn on/off the camera lamp, touch the soft button .
- To enable the flash function, select *Enable lamp & laser + Use lamp as flash* and push the navigation pad.
- To disable the camera lamp and flash functions, select *Disable all* and push the navigation pad.

**Note** You can also assign the function *Switch camera flash On <> Off* to one of the programmable buttons **P**. For more information, see section 11.12 *Assigning functions to the programmable buttons*, page 37.


## 11.14 Changing camera lenses

**Note** If the new lens has not been used with the camera before, the lens–camera combination must be calibrated after the lens has been mounted. See section 11.15 *Calibrating the lens–camera combination*, page 42 for information on how to do this.


**Note** Do not touch the lens surface when you change lenses. If this happens, clean the lens according to the instructions in 26.2 *Infrared lens*, page 106.

Follow this procedure:


1. Take a firm grip around the inner ring of the lens. Rotate the inner ring 30° counter-clockwise until it stops.

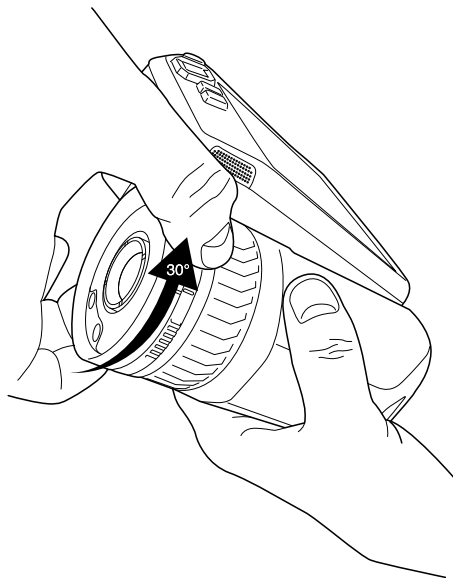

2. Carefully pull out the lens.

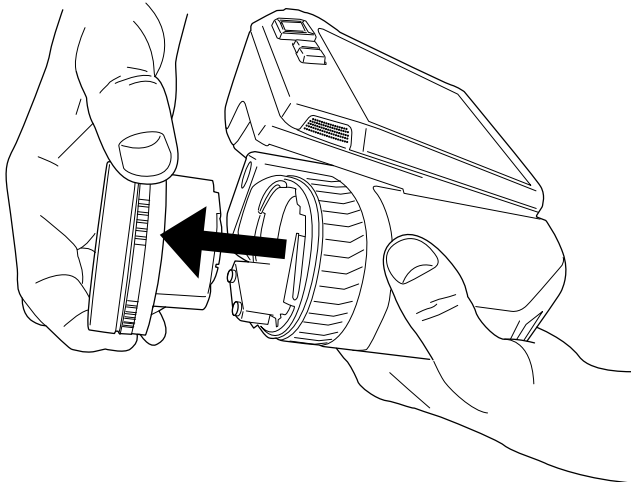


3. The infrared detector is now fully exposed. Do not touch this surface. If you see dust on the detector, follow the instructions in 26.3 *Infrared detector*, page 107.

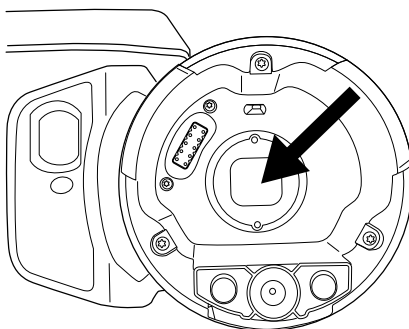


4. Make sure that the inner ring of the camera lens is fully in its open position.


- Correct: The tooth (1) is in its end position at the black stop pin (2).

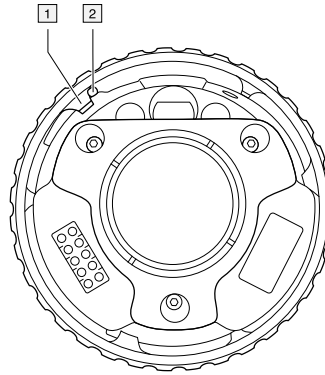


- Wrong: You must rotate the inner ring until the tooth (1) reaches the black stop pin (2).

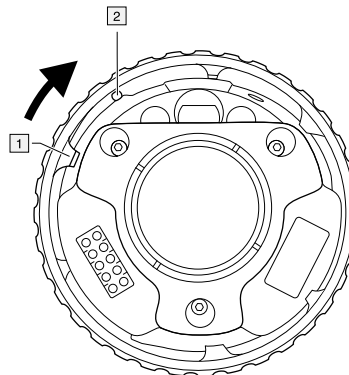


5. Carefully push the lens into position.

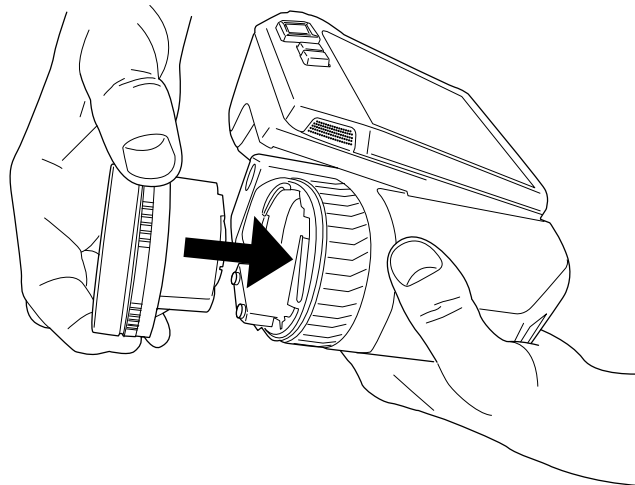

- 
6. Rotate the inner ring of the lens 30° clockwise. The lens makes a click when it locks in place.

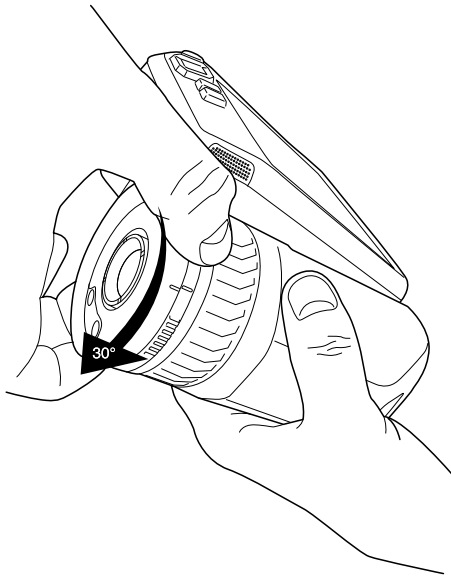

7. Make sure that the two index marks are aligned, indicating that the lens is locked in place.

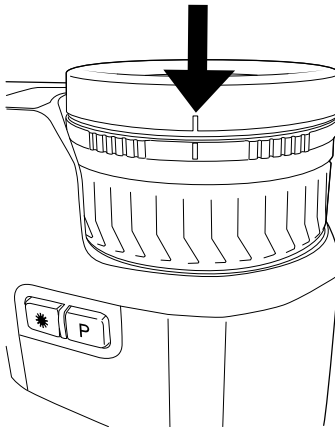

## 11.15 Calibrating the lens–camera combination

### 11.15.1 Introduction


Before a new lens can be used with the camera, the lens–camera combination must be *calibrated*.

This is a process that previously had to be performed by a FLIR service department, but for the FLIR T5xx series the calibration can be performed by the user. This feature is called AutoCal. The AutoCal procedure requires a calibration target, which is included in the lens package.


### 11.15.2 AutoCal procedure

Follow this procedure:

1. Dip the calibration target in water for 1 second and let the excess drip off.

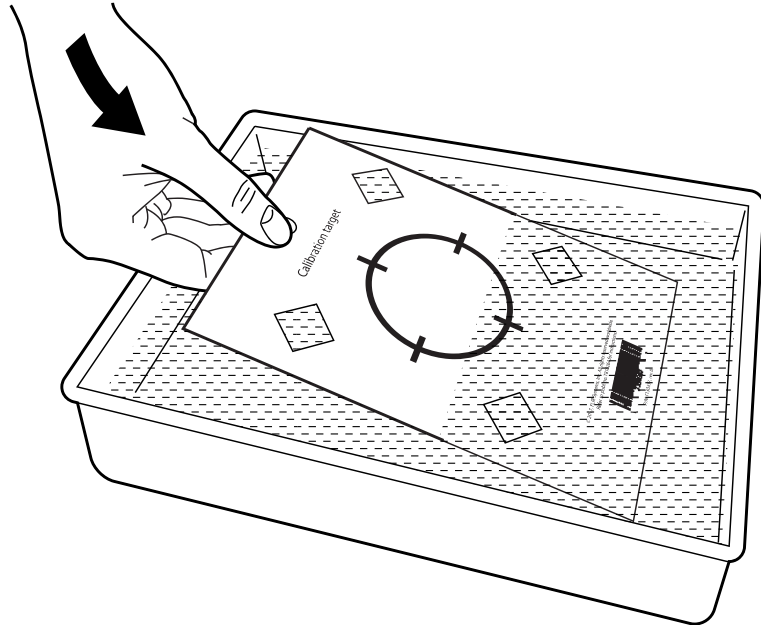

2. Tape or hang the calibration target on a wall.

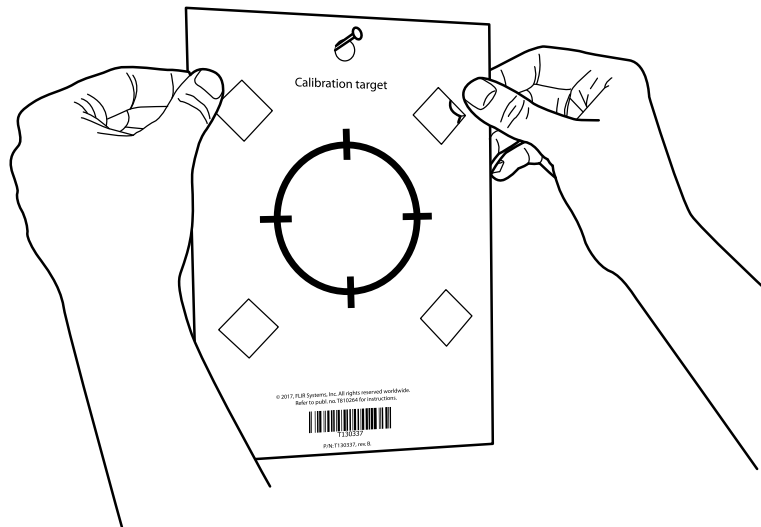


3. Mount the new lens on the camera according to the procedure in section 11.14 *Changing camera lenses*, page 39. When the lens is mounted, the calibration wizard starts automatically.


4. From a distance of 2 m (6.6 ft.), aim the camera toward the crosshair, using the laser pointer. The camera will take a picture automatically.

**NOTE**

Make sure the camera's optical path is perpendicular to the calibration target. See the image below.

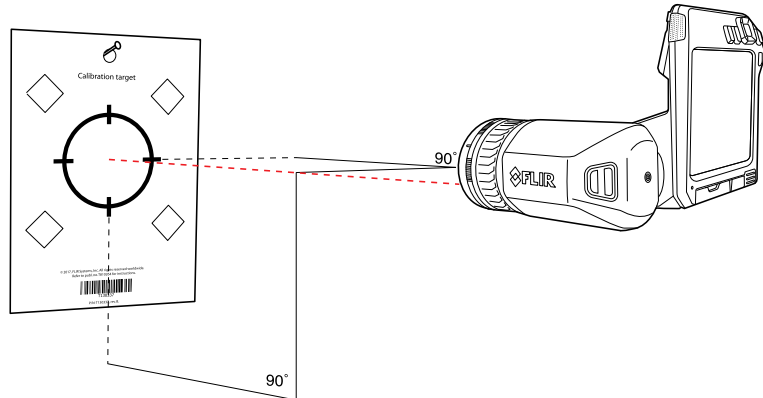

5. In the camera, align the thermal and visual images (indicated by the two squares in the image below), using the touchscreen arrows. The lens-camera combination is now calibrated.

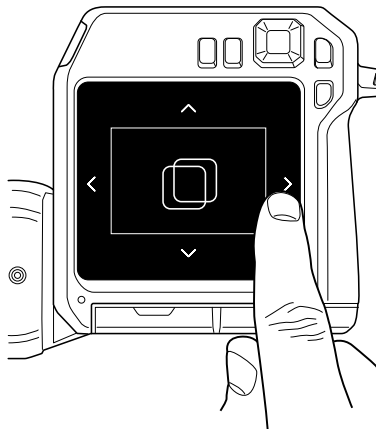


To repeat the procedure at a later time, go to *Settings > Camera information > Calibrate lens....*



---

## 11.16 Neck strap

To attach the neck strap to the camera, use the two attachment points indicated in the figure.

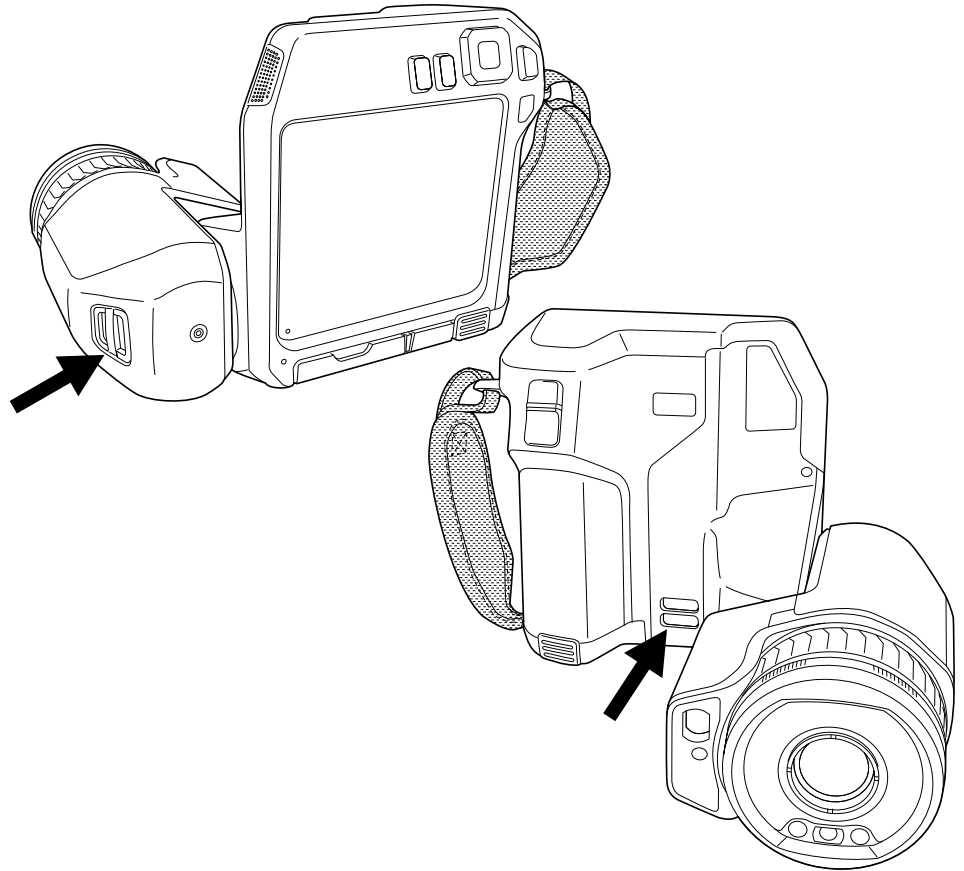


## 11.17 Hand strap


To replace the hand strap, follow this procedure:

1. Remove the battery.
2. Open the hook-and-loop fastener and remove the hand strap from the upper attachment point.

- 
3. Remove the two T6 screws.

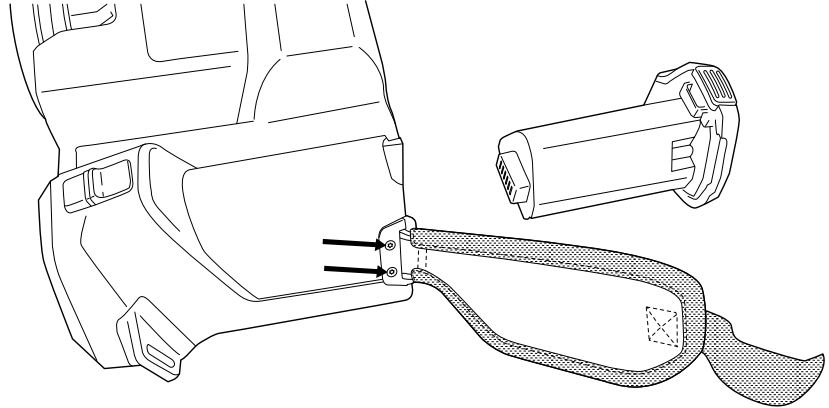

4. Remove the hand strap from the bracket at the base of the camera.  
5. Put the new hand strap into the bracket at the base of the camera.

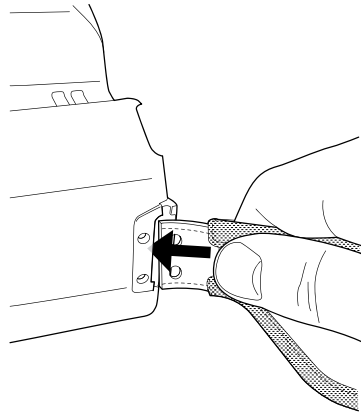

6. Push the bracket into the camera. Make sure that the two holes in the hand strap are aligned with the holes in the bracket.  
7. Tighten the two T6 screws.  
8. Thread the loose strap through the upper attachment point. Secure the strap with the hook-and-loop fastener.

## 12.1 About image files

### 12.1.1 General

When you save an image, the camera saves an image file that includes all thermal and visual information. This means that you can open an image file at a later time and, for example, select another image mode, apply color alarms, and add measurement tools.

The image \*.jpg file is fully radiometric and saved lossless, which enables full post-processing in image analysis and reporting software from FLIR Systems. There is also a regular \*.jpg component (lossy) for convenient viewing in non-FLIR Systems software (e.g., Microsoft Explorer).

#### Note

- The camera can also be configured to save an extra low-resolution visual image as a separate file. This can be convenient if you are not using a post-processing software.  
Select  (Settings) > Save options & storage > Photo as separate JPEG = On.
- When the *Digital camera* image mode is selected, a high-resolution digital image is stored when an image is saved. However, no thermal information is stored. For more information, see section 15 *Working with image modes*, page 67.
- You can choose to turn off the digital camera. This can, for example, be required in restricted areas and in confidential (e.g., doctor/patient) situations. Select  (Settings) > Save options & storage > Digital camera = Off. When the digital camera is off, features that require visual information, such as the images modes *Thermal MSX* and *Picture in picture*, are disabled.

### 12.1.2 File-naming convention

The default naming convention for image files is FLIRxxxx.jpg, where xxxx is a unique counter.

It is also possible to save images with a date prefix added to the filename. However, these files may not automatically be detected by third-party applications. For more information, see the setting *File naming format* in section 25.1.3 *Save options & storage*, page 102.

### 12.1.3 Storage capacity

When you save an image, the camera stores the image file on the memory card.

The size of an image file (with no annotations) is typically less than 1000 kB. Thus, the capacity of a 8 GB memory card is approximately 8000 images.

**Note** Empty or use a memory card that has not previously been used in another type of camera. The cameras may organize files differently on the memory card. There is therefore a risk of losing data if the same memory card is used in different types of cameras.

### 12.1.4 About UltraMax

UltraMax<sup>3</sup> is an image enhancement feature that increases the image resolution and lowers the noise, making small objects easier to see and measure. An UltraMax image is twice as wide and high as an ordinary image.

3. Not supported when using macro.

---

When an UltraMax image is captured by the camera, several ordinary images are saved within the same file. Capturing all the images can take up to 1 second. To fully utilize UltraMax, the images need to be slightly different, which can be accomplished by a minute movement of the camera. You should hold the camera firmly in your hands (do not put it on a tripod), which will make these images vary just a little during the capture. Correct focus, a high-contrast scene, and a non-moving target are other conditions that help to achieve a good-quality UltraMax image.

FLIR Tools/Tools+ and FLIR ResearchIR Max have the ability to process UltraMax images. Other FLIR software will treat the image as a regular image.

To configure the camera for UltraMax, select  (Settings) > Save options & storage > Image resolution = UltraMax.

## 12.2 Saving an image


### 12.2.1 General

You can save images to the memory card.

### 12.2.2 Procedure

Follow this procedure:

1. To save an image, push the Save button.

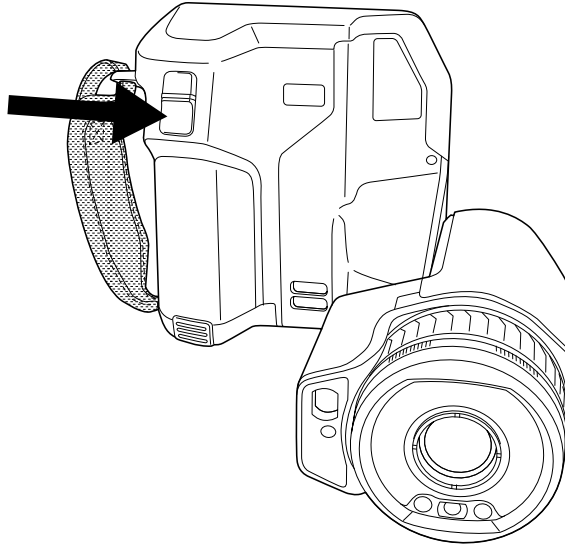

**Note** Depending on the settings in  (Settings) > Save options & storage, the following may happen:

- A preview image is displayed before the image is saved.
- An annotation tool or the annotation menu is displayed when the image has been saved.

## 12.3 Previewing an image

### 12.3.1 General

You can preview an image before you save it. This enables you to see if the image contains the information you want before you save it. You can also adjust and edit the image.

**Note** The camera must be configured to display a preview image before saving. Select



(Settings) > Save options & storage > Preview image before saving = On.

### 12.3.2 Procedure

Follow this procedure:

1. To preview an image, push the Save button. This displays the preview.
2. Manual image adjustment mode is now active. For image adjustment instructions, see section 14.3 *Adjusting the infrared image*, page 59.
3. To edit the image, push the navigation pad. This displays a context menu. For editing instructions, see section 12.5 *Editing a saved image*, page 50.
4. Do one of the following:
  - To save the image, push the Save button.
  - To exit preview mode without saving, push the back button .

## 12.4 Opening a saved image

### 12.4.1 General

When you save an image, the image file is stored on the memory card. To display the image again, open it from the image archive (*Gallery*).

### 12.4.2 Procedure

Follow this procedure:

1. Push the image archive button . This displays the *Gallery* with one or more folders.
2. Select a folder and push the navigation pad.
3. Select the image you want to view and push the navigation pad.
4. Do one or more of the following:
  - To view the previous/next image, push the navigation pad left/right.
  - To display a toolbar at the top of the screen, push the navigation pad. Do one or more of the following:
    - To switch between an infrared image and a visual image, select the  icon and push the navigation pad.
    - To edit the image, delete the image, display information, or add annotations, select the  icon and push the navigation pad. This displays a menu to the right.
  - To return to the folder overview, push the back button .
  - To return to the live image, push the image archive button .

## 12.5 Editing a saved image

### 12.5.1 General

You can edit a saved image. You can also edit an image in preview mode.

### 12.5.2 Procedure

Follow this procedure:

1. Push the image archive button . This displays the *Gallery*.
2. Select a folder and push the navigation pad.
3. Select the image you want to edit and push the navigation pad.
4. Push the navigation pad to display the top toolbar.
5. On the top toolbar, select the  icon and push the navigation pad.
6. On the right toolbar, select the  icon and push the navigation pad. This opens the image in edit mode.
7. Manual image adjustment mode is now active. For image adjustment instructions, see section 14.3 *Adjusting the infrared image*, page 59.
8. Push the navigation pad. This displays a context menu.
  - Select  (*Cancel*) to exit edit mode.
  - Select  (*Measurement parameters*) to change the global parameters.
  - Select  (*Image mode*) to change the image mode.
  - Select  (*Measurement*) to add a measurement tool.
  - Select  (*Color*) to change the color palette or set a color alarm.
  - Select  (*Save*) to save and exit edit mode.

### 12.5.3 Related topics

- 14.6 *Changing the measurement parameters*, page 64.
- 15 *Working with image modes*, page 67.
- 16 *Working with measurement tools*, page 71.
- 14.5 *Changing the color palettes*, page 63.
- 17 *Working with color alarms and isotherms*, page 81.

## 12.6 Displaying the image information

### 12.6.1 General

The image information consists of items such as the date, emissivity, and atmospheric temperature. When you save an image, the image information is saved in the image file and can be viewed in the image archive (*Gallery*).

### 12.6.2 Procedure

Follow this procedure:

1. Push the image archive button . This displays the *Gallery*.


2. Select a folder and push the navigation pad.
3. Select an image and push the navigation pad.
4. Push the navigation pad to display the top toolbar.
5. On the top toolbar, select the  icon and push the navigation pad.
6. On the right toolbar, select the  icon and push the navigation pad. This displays the image information.

## 12.7 Zooming an image

### 12.7.1 General

You can zoom an image by using the camera's digital zoom function. You can do this on live images and on saved images in edit mode.

The digital zoom factor is displayed at the top of the screen.

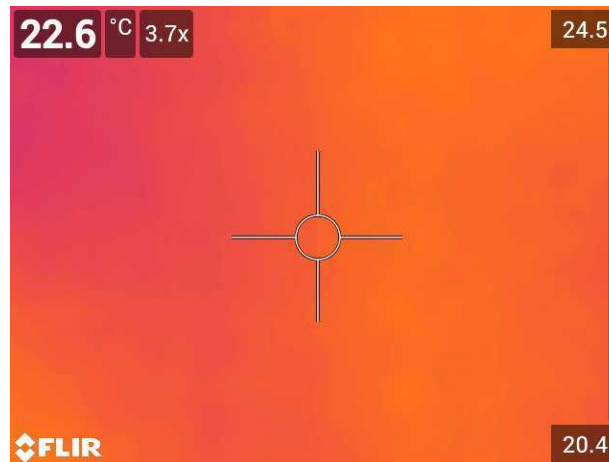

### 12.7.2 Procedure

Follow this procedure:

1. To digitally zoom an image, do the following:
  - Zoom in: Touch the screen with two fingers and spread the fingers apart.
  - Zoom out: Touch the screen with two fingers and pinch the fingers together.

## 12.8 Deleting images

You can delete image files from the memory card. For more information, see sections 13.8 *Deleting an image or video file*, page 56, 13.9 *Deleting multiple files*, page 56, and 13.10 *Deleting all files*, page 57.

## 12.9 Resetting the image counter

### 12.9.1 General

You can reset the numbering of the image filenames.

**Note** To prevent image files being overwritten, the new counter value will be based on the highest existing filename number in the image archive.

### 12.9.2 Procedure

Follow this procedure:


1. Push the navigation pad to display the menu system.
2. Select  (*Settings*) and push the navigation pad. This displays the *Settings* menu.
3. Use the navigation pad to select *Device settings* > *Reset options* > *Reset image counter....*
4. Push the navigation pad. This displays a dialog box.
5. To reset the counter, select *Reset* and push the navigation pad.



## 13.1 General


When you save an image or video clip, the camera stores the image/video file in the image archive on the memory card. You can open an image in the image archive and, for example, select another image mode, apply color alarms, and add measurement tools. You can also open and play saved video clips.

In the camera, the image archive is called *Gallery*. The *Gallery* can include one or several folders. New images and video clips will be saved to the active folder, at the top of the *Gallery*. You can create new folders, rename a folder, change the active folder, move files between the folders, and delete folders.

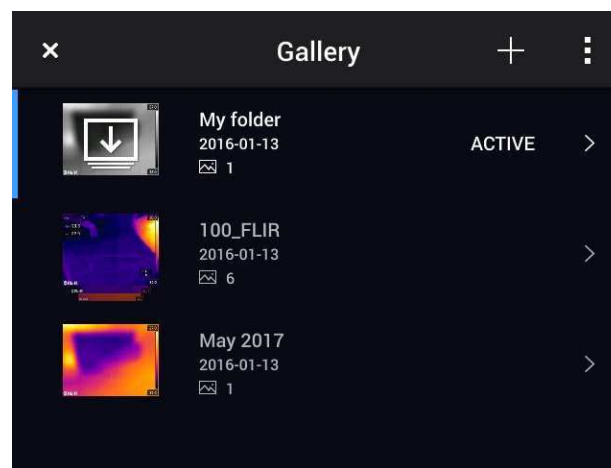

### 13.1.1 Managing folders via soft button

The soft button  can be used to open a menu, where you can create new folders and change the active folder.

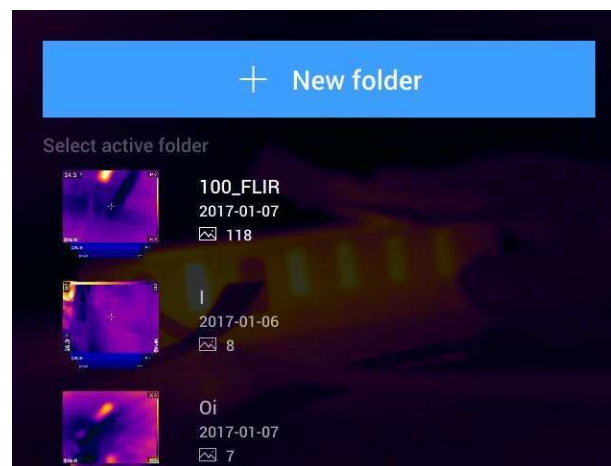

## 13.2 Opening image and video files

Follow this procedure:

1. Push the image archive button . This displays the *Gallery* with one or more folders.
2. Select a folder and push the navigation pad.
3. Select the image or video clip you want to view and push the navigation pad.
4. To view the previous/next image or video clip, push the navigation pad left/right.
5. To return to the folder overview, push the back button .
6. To return to the *Gallery*, push the back button  again.

## 13.3 Creating a new folder

Follow this procedure:

1. Push the image archive button . This displays the *Gallery*.
2. On the top toolbar, select the  icon and push the navigation pad.
3. A soft keyboard is displayed, where you can enter the name of the folder by touching the screen.
4. When completed, touch *Done* on the soft keyboard.
5. The new folder automatically becomes the active folder and appears at the top of the *Gallery*.

**Note** You can also create a new folder via the soft button .

## 13.4 Renaming a folder

You can change the name of the folders in the archive. The active folder cannot be renamed.

Follow this procedure:

1. Push the image archive button . This displays the *Gallery*.
2. On the top toolbar, select the  icon and push the navigation pad.
3. Select the folder to rename and push the navigation pad.
4. On the right toolbar, select the  icon and push the navigation pad.
5. A soft keyboard is displayed, where you can enter the new name of the folder by touching the screen.
6. When completed, touch *Done* on the soft keyboard.

## 13.5 Changing the active folder

### 13.5.1 General

New images and video clips are saved to the active folder.

### 13.5.2 Procedure

Follow this procedure:


1. Push the image archive button . This displays the *Gallery*.
2. On the top toolbar, select the  icon and push the navigation pad.
3. Select the folder that new images and video clips should be saved to and push the navigation pad. This marks the selected folder with a tick.
4. On the right toolbar, select the  icon and push the navigation pad.
5. The selected folder is moved to the top of the *Gallery*.

**Note** You can also change the active folder via the soft button .

## 13.6 Moving files between folders

Follow this procedure:

1. Push the image archive button . This displays the *Gallery*.
2. Select a folder and push the navigation pad.
3. On the top toolbar, select the  icon and push the navigation pad.
4. Use the navigation pad to select the image and video items you want to move. You can also select the items by touching the screen. Selected items are marked with a tick.

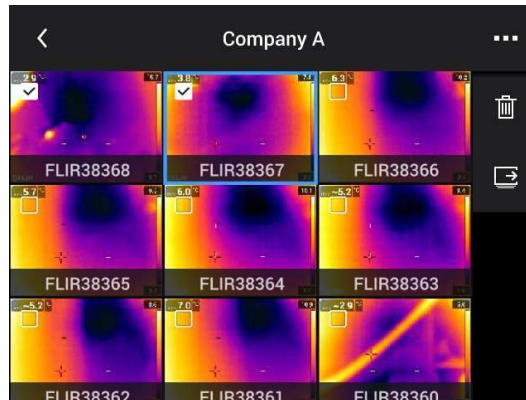

5. On the right toolbar, select the  icon and push the navigation pad.
6. Select the destination folder for the selected items and push the navigation pad.

## 13.7 Deleting a folder

You can delete a folder in the archive. The active folder cannot be deleted.

Follow this procedure:

1. Push the image archive button . This displays the *Gallery*.
2. On the top toolbar, select the  icon and push the navigation pad.
3. Select the folder to delete and push the navigation pad.
4. On the right toolbar, select the  icon and push the navigation pad. This displays a dialog box.

5. To delete the folder, select *Delete* and push the navigation pad.

## 13.8 Deleting an image or video file

### 13.8.1 General

You can delete an image or video file from the image archive.

**Note** When deleting an image file, both images in the image file (thermal and visual) will be deleted.

### 13.8.2 Procedure

Follow this procedure:

1. Push the image archive button . This displays the *Gallery*.
2. Select a folder and push the navigation pad.
3. Select the image or video clip you want to delete and push the navigation pad.
4. Push the navigation pad to display the top toolbar.
5. On the top toolbar, select the  icon and push the navigation pad.
6. On the right toolbar, select the  icon and push the navigation pad. This displays a dialog box.
7. To delete the image, select *Delete* and push the navigation pad.

## 13.9 Deleting multiple files

### 13.9.1 General


You can delete multiple image and video files from the image archive.

### 13.9.2 Procedure

Follow this procedure:

1. Push the image archive button . This displays the *Gallery*.
2. Select a folder and push the navigation pad.
3. On the top toolbar, select the  icon and push the navigation pad.

4. Use the navigation pad to select the image and video items you want to delete. You can also select the items by touching the screen. Selected items are marked with a tick.

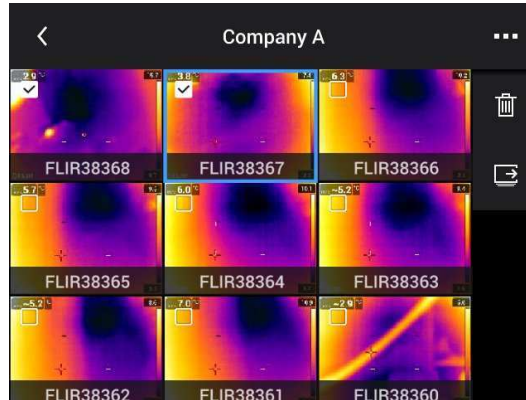

5. On the right toolbar, select the  icon and push the navigation pad. This displays a dialog box.
6. To delete the selected items, select *Delete* and push the navigation pad.

## 13.10 Deleting all files

### 13.10.1 General

You can delete all image and video files from the memory card.

### 13.10.2 Procedure

Follow this procedure:

1. Push the navigation pad to display the menu system.
2. Select  (*Settings*) and push the navigation pad. This displays the *Settings* menu.
3. Use the navigation pad to select *Save options & storage > Delete all saved files...*
4. Push the navigation pad. This displays a dialog box.
5. To permanently delete all saved files, select *Delete* and push the navigation pad.

## 14.1 General

A good image depends on several different functions and settings, although some functions and settings affect the image more than others.

These are the functions and settings that you need to experiment with:

- Adjusting the infrared camera focus.
- Adjusting the infrared image (automatically or manually).
- Selecting a suitable temperature range.
- Selecting a suitable color palette.
- Changing the measurement parameters.
- Performing a non-uniformity correction (NUC).

The following sections explain how to work with these functions and settings.

In some situations, you may also want to hide the overlay graphics for a better view.

## 14.2 Adjusting the infrared camera focus

It is very important to adjust the focus correctly. Incorrect focus adjustment affects how the image modes work. It also affects the temperature measurement.

### 14.2.1 Manual focus

You can adjust the focus manually by rotating the focus ring. For more information, see section 11.5 *Adjusting the infrared camera focus manually*, page 31.

### 14.2.2 Autofocus

You can autofocus the infrared camera by pushing the Autofocus button. For more information, see section 11.6 *Autofocusing the infrared camera*, page 31.



#### WARNING

When the camera is set to autofocus with the laser method (*Settings > Device settings > Focus > Auto focus > Laser*), do not point the camera at the face of a person when you use the autofocus function. The laser beam can cause eye irritation.

**Note** You can also assign the autofocus function to one of the programmable buttons **P**. For more information, see section 11.12 *Assigning functions to the programmable buttons*, page 37.

### 14.2.3 Continuous autofocus

The infrared camera can be set up to perform continuous autofocus. For more information, see section 11.7 *Continuous autofocus*, page 32.



#### WARNING

Do not point the camera at the face of a person when the continuous autofocus function is on. The camera uses laser distance measurements (that are continuous) for the focus adjustments. The laser beam can cause eye irritation.

**Note** For large lenses that cover the laser transmitter and receiver, the laser functionality is disabled. This means that continuous autofocus is not available.

## 14.3 Adjusting the infrared image

### 14.3.1 General

An infrared image can be adjusted automatically or manually.

In automatic mode, the camera continuously adjusts the level and span for the best image presentation. The colors are distributed based on the thermal content of the image (histogram color distribution). The temperature scale to the right of the screen shows the upper and lower temperatures of the current span.

In manual mode, you can adjust the temperature scale to values close to the temperature of a specific object in the image. This will make it possible to detect anomalies and smaller temperature differences in the part of the image of interest. In manual mode, the colors are distributed evenly from the lowest to the highest temperature (linear color distribution).

In manual mode, you can adjust the image by touching the screen or by using the navigation pad. For more information, see sections 14.3.2 *Manual adjustment by touching the screen*, page 60 and 14.3.3 *Manual adjustment by using the navigation pad*, page 61.

- In live mode, touch the soft button  to switch between automatic and manual image adjustment modes.
- In preview/edit mode, manual image adjustment mode is active.

**Note** You can also assign image adjustment functions to the programmable buttons. For more information, see section 11.12 *Assigning functions to the programmable buttons*, page 37.

- *Switch between auto and manual*: Allows you to switch between automatic and manual image adjustment modes.
- *Auto adjust the manual temperature scale*: Allows you to perform an automatic adjustment of the image while remaining in manual image adjustment mode.


#### 14.3.1.1 Example 1

Here are two infrared images of a building. In the left image, which is auto-adjusted, the large temperature span between the clear sky and the heated building makes a correct analysis difficult. You can analyze the building in more detail if you change the temperature scale to values close to the temperature of the building.



### 14.3.1.2 Example 2

Here are two infrared images of an isolator in a power line. To make it easier to analyze the temperature variations in the isolator, the temperature scale in the right image has been changed to values close to the temperature of the isolator.

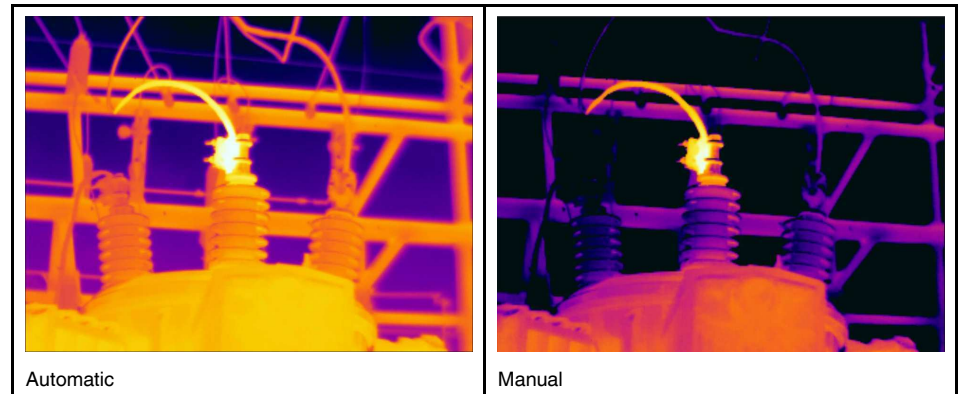

## 14.3.2 Manual adjustment by touching the screen

### 14.3.2.1 General

The touch functionality for manual image adjustments is enabled/disabled by a setting. Select  (Settings) > Device settings > User interface options > Manual adjustment using touch > On/Off.

When manual image adjustment mode is active, an adjustment wheel is displayed to the right of the temperature scale. (Applicable when the manual adjustment by touch functionality is enabled.)



Figure 14.1 Manual adjustment mode active

### 14.3.2.2 Procedure

Follow this procedure:

1. In live mode, touch the soft button  to enter manual image adjustment mode.



2. To simultaneously change the temperature scale minimum and maximum limits, place your finger on the screen and move it up/down.
3. To change the minimum limit or the maximum limit, do the following:
  - Touch the maximum or minimum temperature that you want to change.
  - Place your finger on the screen and move it up/down to change the value of the highlighted temperature.

#### 14.3.2.3 Auto-adjusting the image in manual mode

In manual image adjustment mode, you can auto-adjust the image by touching the screen. The image will be auto-adjusted based on the thermal content of the area around the touched point. The top and bottom levels in the temperature scale will be set to the maximum and minimum temperatures in that area. By using the color information only for the relevant temperatures, you will get more details in your area of interest.



#### 14.3.2.4 Locking the touch screen

When you have adjusted the image to levels that allow you to study your area of interest, you can lock the touch screen to prevent further unintentional adjustments.

To lock the screen, touch the  icon to the left of the temperature scale.

To unlock the screen, touch the  icon to the left of the temperature scale.

**Note** If you switch to automatic image adjustment mode, the screen automatically unlocks and your manual adjustments are lost.

### 14.3.3 Manual adjustment by using the navigation pad

#### 14.3.3.1 Manual adjustment modes

There are two different settings for the manual adjustment mode (applicable for the navigation pad only):

- *Level, Span*: With this setting, you can manually adjust the level and span by using the navigation pad.
- *Level, Max, Min*: With this setting, you can manually adjust the level by using the navigation pad. You can also change the upper and lower temperatures individually.

---

Select the type of manual image adjustment mode under  (*Settings*) > *Device settings* > *User interface options* > *Manual adjustment mode*.

#### 14.3.4 Manual adjustment in *Level, Span* mode

**Note** This procedure assumes that you have configured the camera for manual image adjustments in *Level, Span* mode. Select *Settings* > *Device settings* > *User interface options* > *Manual adjustment mode* = *Level, Span*.

Follow this procedure:

1. In live mode, touch the soft button  to enter manual image adjustment mode.
2. Push the navigation pad up/down to increase/decrease the level.
3. Push the navigation pad left/right to increase/decrease the span.

#### 14.3.5 Manual adjustment in *Level, Max, Min* mode

**Note** This procedure assumes that you have configured the camera for manual image adjustments in *Level, Max, Min* mode. Select *Settings* > *Device settings* > *User interface options* > *Manual adjustment mode* = *Level, Max, Min*.

Follow this procedure:

1. In live mode, touch the soft button  to enter manual image adjustment mode.
2. To simultaneously change the temperature scale minimum and maximum limits, push the navigation pad up/down.
3. To change the minimum limit or the maximum limit, do the following:
  - Push the navigation pad left/right to select (highlight) the maximum or minimum temperature.
  - Push the navigation pad up/down to change the value of the highlighted temperature.

## 14.4 Changing the camera temperature range

### 14.4.1 General

The camera is calibrated for different temperature ranges. Available temperature range options are dependent on the camera model.

For accurate temperature measurements, you must change the *Camera temperature range* setting to suit the expected temperature of the object you are inspecting.

**Note** For more information, see section 35 *About calibration*, page 235.

### 14.4.2 Procedure

Follow this procedure:

1. Push the navigation pad to display the menu system.
2. Select  (*Settings*) and push the navigation pad. This displays the *Settings* menu.
3. Select *Camera temperature range* and push the navigation pad. This displays a dialog box.
4. Select the appropriate temperature range and push the navigation pad.





**Note** You can also assign the function *Switch temperature range* to one of the programmable buttons . For more information, see section 11.12 *Assigning functions to the programmable buttons*, page 37.


# 14.5 Changing the color palettes

## 14.5.1 General

You can change the color palette that the camera uses to display different temperatures. A different palette can make it easier to analyze an image.

This table explains the different types of color palettes.
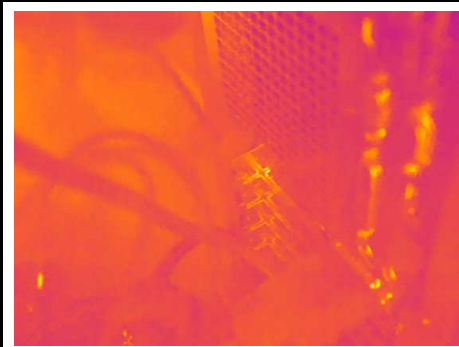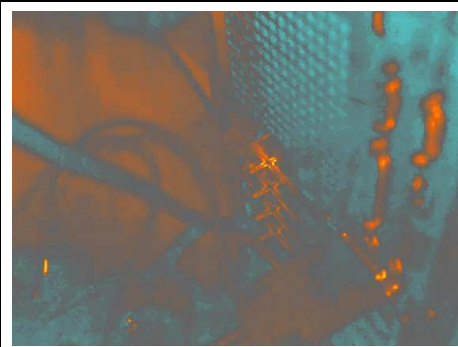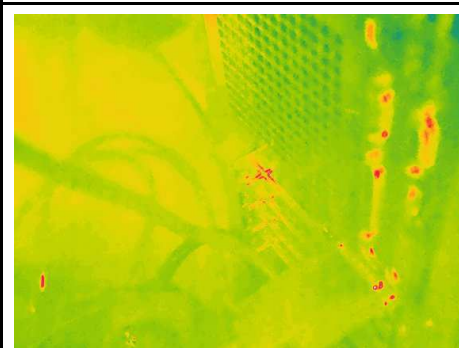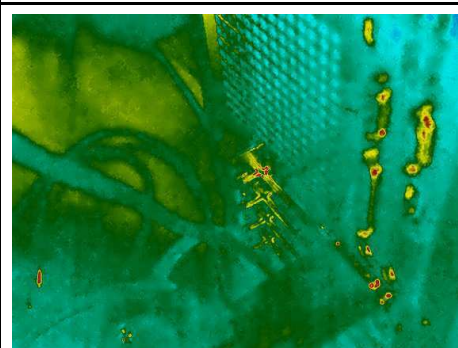
|                                                                                     |                                                                                      |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
|   |   |
| Iron                                                                                | Arctic                                                                               |
|  |  |
| Rainbow                                                                             | Rainbow high contrast                                                                |

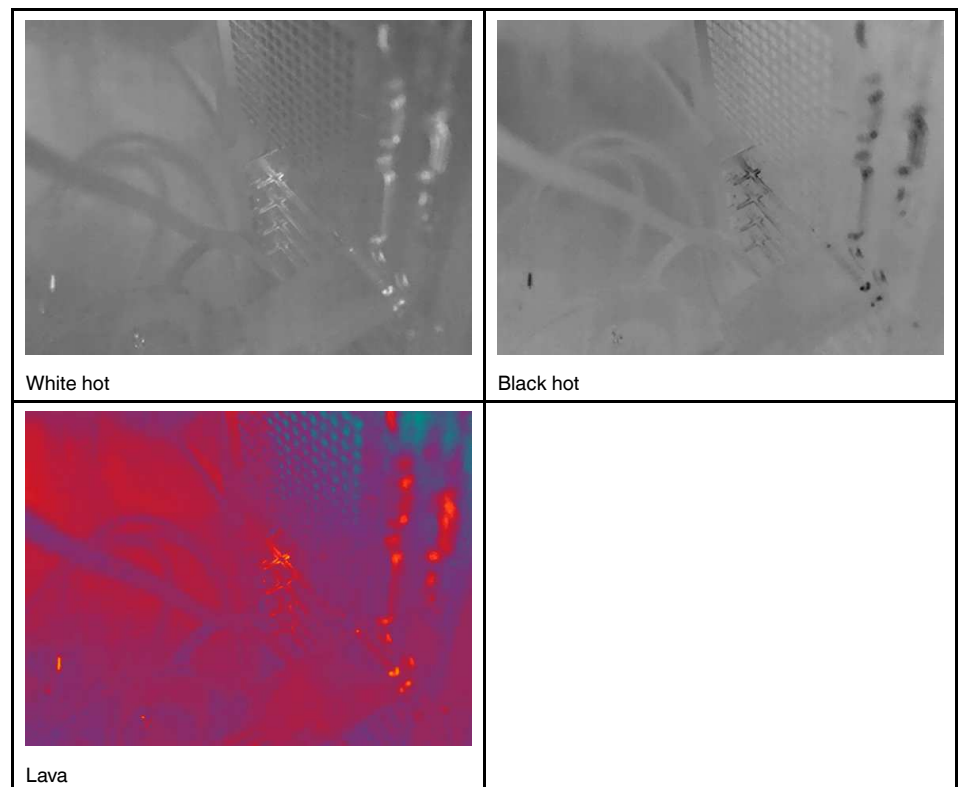

#### 14.5.2 Procedure

Follow this procedure:

1. Push the navigation pad to display the menu system.
2. Select  (*Color*) and push the navigation pad. This displays a submenu.
3. Use the navigation pad to select a different palette.
4. Push the navigation pad to confirm and exit the menu mode.

## 14.6 Changing the measurement parameters

For accurate measurements, it is important to set the measurement parameters:

- *External IR window compensation.*
- *Object distance.*
- *Atmospheric temperature.*
- *Relative humidity.*
- *Reflected temperature.*
- *Emissivity.*

You can set the measurement parameters globally. You can also change the *Emissivity*, *Reflected temperature*, and *Object distance* parameters locally for a measurement tool.

For more information, see section 16.5 *Changing the measurement parameters*, page 73.

## 14.7 Performing a non-uniformity correction (NUC)

### 14.7.1 General

When the thermal camera displays *Calibrating...* it is performing what in thermography is called a "non-uniformity correction" (NUC). An NUC is *an image correction carried out by the camera software to compensate for different sensitivities of detector elements and other optical and geometrical disturbances*<sup>4</sup>. For more information, see section 35 *About calibration*, page 235.

An NUC is performed automatically, for example at start-up, when changing a measurement range, or when the environment temperature changes.

You can also perform an NUC manually. This is useful when you have to perform a critical measurement with as little image disturbance as possible. You may, for example, want to perform a manual calibration just before you start recording a video sequence.

### 14.7.2 Performing an NUC manually

#### 14.7.2.1 Procedure

Follow this procedure:

1. To perform a manual NUC, push and hold down the image archive button  for more than 2 seconds.

**Note** You can also assign the function *Calibrate* to the one of the programmable buttons **P**. For more information, see section 11.12 *Assigning functions to the programmable buttons*, page 37.

## 14.8 Hiding all overlay


### 14.8.1 General

The camera overlay consists of overlay graphics and image overlay information. The overlay graphics include items such as measurement tool symbols, result tables, and status icons. The image overlay information, which you activate on the *Settings* menu, provides additional information such as the date, emissivity, and atmospheric temperature. For more information, see section 9.6 *Image overlay information*, page 24.

You can hide all camera overlay by touching the soft button .

**Note** You can also assign the function *Hide image overlay graphics* to one of the programmable buttons **P**. For more information, see section 11.12 *Assigning functions to the programmable buttons*, page 37.

4. Definition from the European standard EN 16714-3:2016, Non-destructive Testing—Thermographic Testing—Part 3: Terms and Definitions.

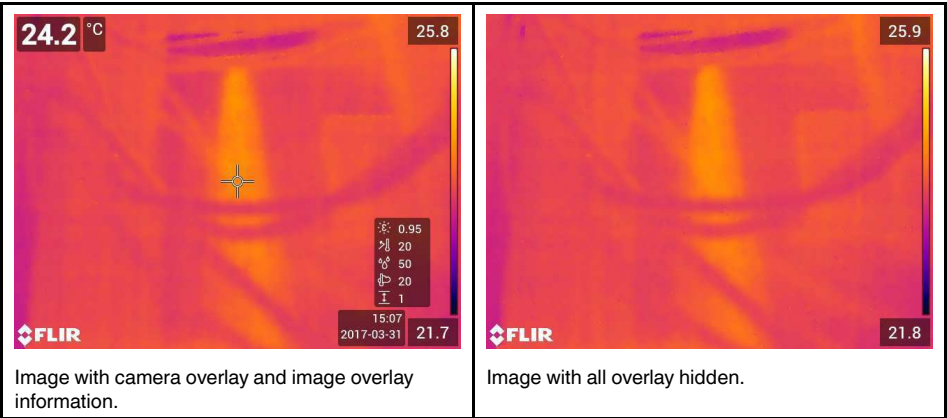

## 15.1 General

The camera can capture both thermal and visual images at the same time. By choosing the image mode, you select which type of image to display on the screen.

The camera supports the following image modes:


- *Thermal*: An infrared image is displayed.
- *Thermal MSX* (Multi Spectral Dynamic Imaging): The camera displays an infrared image where the edges of the objects are enhanced with visual image details.
- *Picture in picture*: An infrared image frame is displayed on top of the visual image.
- *Digital camera*: The visual image captured by the digital camera is displayed.
- *Macro*: This mode enables the camera to focus on objects very close to the camera lens. An infrared image is displayed.

### Note



- For the *Thermal MSX*, *Thermal*, and *Picture in picture* image modes, all thermal and visual information is stored when an image is saved. This means that you can edit the image later, in the image archive, or in FLIR Tools/Tools+ or FLIR Report Studio, and select any of the image modes.
- For the *Digital camera* image mode, a digital image with full resolution (5 MP) is stored when an image is saved. However, no thermal information is stored.
- You can choose to turn off the digital camera. This can, for example, be required in restricted areas and in confidential (e.g., doctor/patient) situations. Select  (*Settings*) > *Save options & storage* > *Digital camera* = *Off*. When the digital camera is off, only the image mode *Thermal* is enabled.
- The *Thermal MSX*, *Thermal*, and *Picture in picture* image modes only work correctly for calibrated lenses. The lens that ships with the camera is factory calibrated. To calibrate a new lens, see section 11.15 *Calibrating the lens–camera combination*, page 42.
- When the *Macro* mode is selected, the laser is automatically disabled.
- The support for the *Macro* mode depends on the camera lens.
- In *Macro* mode, no visual information is saved.

## 15.2 Image examples

This table explains the different types of image modes.
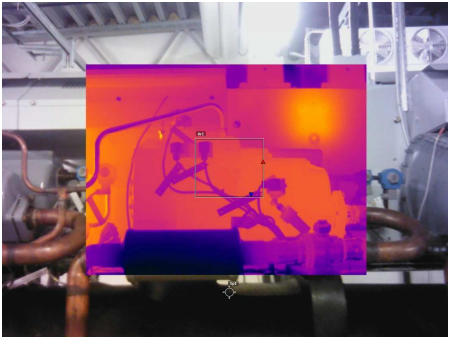
| Image mode         | Image                                                                                 |
|--------------------|---------------------------------------------------------------------------------------|
| Thermal            |    |
| Thermal MSX        |   |
| Picture in picture |  |

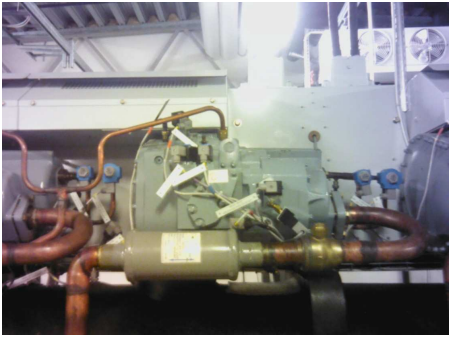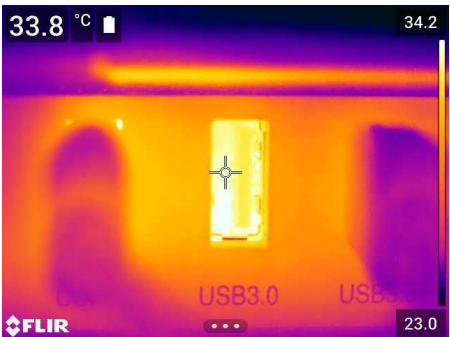

| Image mode     | Image                                                                                |
|----------------|--------------------------------------------------------------------------------------|
| Digital camera |   |
| Macro          |  |

15.3 Selecting an image mode


Follow this procedure:

1. Push the navigation pad to display the menu system.
  2. Select  (*Image mode*) and push the navigation pad. This displays a submenu.
  3. Use the navigation pad to select one of the following:
    -  (*Thermal MSX*).
    -  (*Thermal*).
    -  (*Picture in picture*).
    -  (*Digital camera*).
    -  (*Macro*).
- Note**
- If the \*.csq video format is selected (*Settings > Save options & storage > Video compression*) and the recording mode *Video* is selected, it will only be possible to select the image modes *Thermal* and *Macro*.
  - If the digital camera is disabled (*Settings > Save options & storage > Digital camera = Off*), it will only be possible to select the image modes *Thermal* and *Macro*.
4. Push the navigation pad to confirm and exit the menu mode.

5. If *Picture in picture* mode is selected, you can at this point move and resize the infrared image frame using the touch screen.

## 16.1 General

To measure a temperature, you can use one or more measurement tools, e.g., a spotmeter or a box.

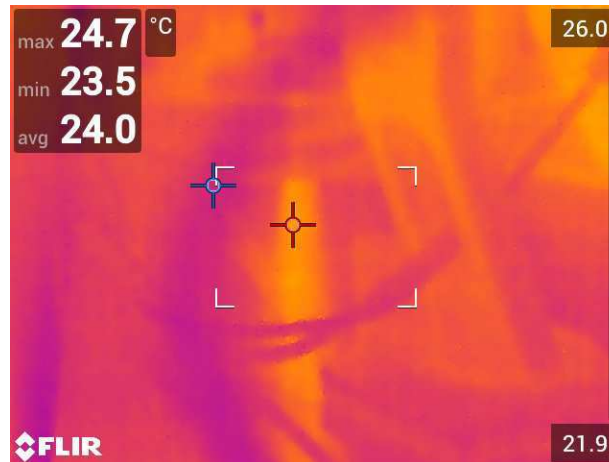

## 16.2 Adding/removing measurement tools

Follow this procedure:

1. Push the navigation pad to display the menu system.
2. Select  (*Measurement*) and push the navigation pad. This displays a submenu.
3. Use the navigation pad to select one of the following:
  - Select  (*No measurements*) to remove all tools.
  - Select  (*Center spot*) to add a center spot.
  - Select  (*Hot spot*) to add a hot spot detection within a box area.
  - Select  (*Cold spot*) to add a cold spot detection within a box area.
  - Select  (*User preset 1*) to add user preset 1. (Not available in all camera models.)
  - Select  (*User preset 2*) to add user preset 2. (Not available in all camera models.)
4. Push the navigation pad to confirm and exit the menu mode.

## 16.3 Editing user presets

### 16.3.1 General

A user preset is a measurement tool, or a group of measurement tools, with predefined characteristics.

### 16.3.2 Procedure

Follow this procedure:

1. Push the navigation pad to display the menu system.
2. Select  (*Measurement*) and push the navigation pad. This displays a submenu.
3. Use the navigation pad to select  (*User preset 1*) or  (*User preset 2*).
4. Push and hold the center of the navigation pad. This displays the *Edit user preset* menu.
5. Select  (*Add measurement*) and push the navigation pad. This displays a submenu.
6. Use the navigation pad to select one of the following:
  - Select  (*Add spot*) to add a spot.
  - Select  (*Add box*) to add a box.
  - Select  (*Add circle*) to add a circle.
  - Select  (*Add delta*) to set up a differential calculation.
7. Push the navigation pad. This displays the measurement tool on the screen.
8. Push the navigation pad. This displays a context menu, where you can select one or more of the following actions (depending on the type of tool):
  - Remove the tool.
  - Resize, move, center, and rotate the tool.
  - Set alarms.
  - Display maximum, minimum, average, and area values.
  - Set local parameters.
- When completed, select  (*Done*) and push the navigation pad.
9. When all measurement tools have been added, select  (*Save as user preset*).
10. Push the navigation pad to confirm and exit the menu mode.

## 16.4 Moving and resizing a measurement tool

### 16.4.1 General

You can move and resize a measurement tool.

**Note** When you select another measurement tool, any changes of position and size of the current tool will be lost. If you wish to keep the position and size settings, use the user preset feature, see section 16.3 *Editing user presets*, page 71.

### 16.4.2 Moving a spot

**Note** You can also move the spot by touching the screen.

Follow this procedure:

1. To select the measurement tool, touch the tool on the screen. The tool is now displayed with one or more handles.



2. Push the navigation pad—or touch and hold the tool. This displays a context menu.
3. To move the spot, do the following:

- 3.1. Select  (*Move spot*) and push the navigation pad.
- 3.2. Push the navigation pad up/down and left/right to move the spot.


4. To center the spot, select  *Center spot* and push the navigation pad.
5. When completed, push the navigation pad and select  (*Done*).
6. Push the navigation pad to confirm and exit the menu mode.

### 16.4.3 Moving and resizing a box or circle tool

**Note** You can also move and resize the measurement tool by touching the screen.

Follow this procedure:

1. To select the measurement tool, touch the tool on the screen. The tool is now displayed with one or more handles.

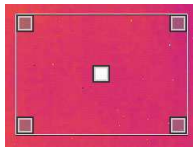

2. Push the navigation pad—or touch and hold the tool. This displays a context menu.
3. Select  (*Move/resize*) and push the navigation pad. This displays a submenu.
4. Use the navigation pad to select one of the following:
  - Select  (*Resize*) to change the size of the tool.
  - Select  (*Move*) to move the tool.
  - Select  (*Center box/circle*) to center the box or circle tool.
5. Push the navigation pad up/down and left/right to resize or move the tool.
6. When completed, push the navigation pad and select  (*Done*).
7. Push the navigation pad to confirm and exit the menu mode.

## 16.5 Changing the measurement parameters

### 16.5.1 General

For accurate measurements, it is important to set the measurement parameters.

**Note** During normal operation there is typically no need to change the default measurement parameters, see section 16.5.3 *Recommended values*, page 74.

### 16.5.2 Types of parameters

The camera can use these measurement parameters:

- *External IR window compensation*, i.e., the temperature of any protective windows, external lenses (e.g., the close-up lens), etc., that are set up between the camera and the object of interest. If no protective window, protective shield, or external lens is used, this value is irrelevant and should be left inactive.

- *Object distance*, i.e., the distance between the camera and the object of interest.

**Note** The camera can be configured to automatically measure the distance when an image is saved. With this setting, the *Object distance* parameter in the image data is automatically updated with the measured distance when an image is saved. (There is no effect on the *Object distance* setting in live mode.) For more information, see section 8.4 *Laser distance meter and laser pointer*, page 19.

- *Atmospheric temperature*, i.e., the temperature of the air between the camera and the object of interest.
- *Relative humidity*, i.e., the relative humidity of the air between the camera and the object of interest.
- *Reflected temperature*, which is used when compensating for the radiation from the surroundings reflected by the object into the camera. This property of the object is called “reflectivity.”
- *Emissivity*, i.e., how much radiation an object emits, compared with the radiation of a theoretical reference object at the same temperature (called a “blackbody”). The opposite of emissivity is reflectivity. The emissivity determines how much of the radiation originates from the object as opposed to being reflected by it.

**Note** There is an *Emissivity mode* setting, which you can use to enter the emissivity by material instead of by value. Select  (Settings) > Device settings > User interface options > Emissivity mode > Select from materials table.

*Emissivity* is the most important measurement parameter to set correctly. If the *Emissivity* is set to a low value, the *Reflected temperature* also becomes important. The parameters *Object distance*, *Atmospheric temperature*, and *Relative humidity* are relevant for longer distances. The *External IR window compensation* must be activated if a protective window or external lens is used.

### 16.5.3 Recommended values

If you are unsure about the values, the following are recommended:

|                         |                 |
|-------------------------|-----------------|
| Object distance         | 1.0 m (3.3 ft.) |
| Atmospheric temperature | 20°C (69°F)     |
| Relative humidity       | 50%             |
| Reflected temperature   | 20°C (69°F)     |
| Emissivity              | 0.95            |

### 16.5.4 Procedure

You can set the measurement parameters globally. You can also change the *Emissivity*, *Reflected temperature*, and *Object distance* parameters locally for a measurement tool.

Local parameters are normally only effective for a fixed setup, where each measurement tool is set for a specific object of interest. For a general handheld application, the global parameters are usually sufficient.

**Note** *Emissivity* and *Reflected temperature* are the two most important measurement parameters to set correctly in the camera.

#### 16.5.4.1 Setting global parameters

Follow this procedure:

1. Push the navigation pad to display the menu system.

2. Select  (*Measurement parameters*) and push the navigation pad. This displays a submenu.
3. Use the navigation pad to select one or more of the global measurement parameters:
  -  (*External IR window compensation*).
  -  (*Object distance*).
  -  (*Atmospheric temperature*).
  -  (*Relative humidity*).
  -  (*Reflected temperature*).
  -  (*Emissivity*).
4. Push the navigation pad to display a dialog box.
5. Use the navigation pad to change the parameter.
6. Push the navigation pad to confirm and exit the menu mode.

#### 16.5.4.2 Changing local parameters

You can change the local parameters for a measurement tool.

A *P* next to the measurement tool on the screen indicates that local parameters have been activated for the tool.



Follow this procedure:

1. To select the measurement tool, touch the tool on the screen. The tool is now displayed with one or more handles.
2. Push the navigation pad—or touch and hold the tool. This displays a context menu.
3. Select  (*Use local parameters*).
4. Push the navigation pad.  (icon with unfilled indicator) is displayed.
5. Push the navigation pad to activate the use of local parameters.  (icon with filled indicator) is displayed together with a submenu.
6. Use the navigation pad to select one or more of the local measurement parameters.
7. Push the navigation pad to display a dialog box.

8. Use the navigation pad to change the parameter.
9. Push the navigation pad. This closes the dialog box.
10. When completed, push the navigation pad and select ✓ (Done).
11. Push the navigation pad to confirm and exit the menu mode.

**Note** When you select another measurement tool, the local parameters are reset. If you wish to keep the local parameter settings, use the user preset feature, see section 16.3 *Editing user presets*, page 71.

### 16.5.5 Related topics

For in-depth information about parameters, and how to correctly set the emissivity and reflected apparent temperature, see section 33 *Thermographic measurement techniques*, page 223.

## 16.6 Displaying values in the result table

### 16.6.1 General

For the box and circle tools, you can set the camera to display the maximum, minimum, average, and area values in the result table.



### 16.6.2 Procedure

Follow this procedure:

1. To select the measurement tool, touch the tool on the screen. The tool is now displayed with one or more handles.
2. Push the navigation pad—or touch and hold the tool. This displays a context menu.
3. Use the navigation pad to select  (Max/Min/Avg).
4. Push the navigation pad. This displays a submenu.



5. Use the navigation pad to select one or more of the following:

- Select  (Max) to display the maximum value.
- Select  (Min) to display the minimum value.
- Select  (Avg) to display the average value.
- Select (depending on the tool)  or  (Area) to display the area of an object within the measurement tool. Area measurements require that the laser is enabled (*Settings > Device settings > Lamp & laser > Enable lamp & laser*). For more information, see section 11.9 *Measuring areas*, page 34.
- Select  (Max & min markers) to display the maximum and minimum markers (the hot/cold spots).

6. Push the navigation pad to toggle the function between inactive and active:

- When the icon with the unfilled indicator  is displayed, the function is inactive.
- When the icon with the filled indicator  is displayed, the function is active.

7. When completed, push the navigation pad down to close the submenu.

8. Select  (Done) and push the navigation pad.

## 16.7 Creating and setting up a difference calculation

### 16.7.1 General

A difference calculation gives the difference between the values of two known measurement results.

### 16.7.2 Procedure

#### Note

- You can set up a difference calculation when previewing an image, when defining user presets, or when editing an image in the archive.
- This procedure assumes that you have previously laid out at least one measurement tool on the screen.

#### 16.7.2.1 Procedure

Follow this procedure:

1. To set up a difference calculation, do the following:

- If you are defining user presets, select  (Add measurement) and then select  (Add delta).
- If you are editing an image in the archive, select  (Measurement) and then select  (Add delta).

- 
2. Push the navigation pad. This displays a dialog box where you can select the measurement tools that you want to use in the difference calculation. You can also select a fixed-temperature reference.
  3. Push the navigation pad. The result of the difference calculation is now displayed on the screen.

## 16.8 Setting a measurement alarm

### 16.8.1 General

You can make the camera trigger an alarm when certain measurement conditions are met.

### 16.8.2 Types of alarm

You can choose between the following alarm types:

- *Above*: Triggers an alarm when the temperature is above the preset alarm temperature.
- *Below*: Triggers an alarm when the temperature is below the preset alarm temperature.

### 16.8.3 Alarm signals

When an alarm is set, the symbol  is displayed in the result table.

When an alarm is triggered, the value in the result table is displayed in red (above alarm) or blue (below alarm) and the symbol  (above alarm) or  (below alarm) is blinking. You can also set an audible alarm (there will be a “beep” when the alarm is triggered).

### 16.8.4 Procedure

There are different procedures for setting up an alarm for a spot, for a box or circle, and for a difference calculation.


#### 16.8.4.1 Setting up an alarm for a spot

Follow this procedure:

1. To select the spot, touch the tool on the screen. The tool is now displayed with a frame.
2. Push the navigation pad—or touch and hold the tool. This displays a context menu.
3. Select  (*Set alarm on spot*) and push the navigation pad. This displays a dialog box.

4. In the dialog box, you can define the settings for the alarm.

- *Alarm condition:* The condition that triggers the alarm. Applicable values are *Above*, *Below*, or *Off*.
- *Alarm limit:* The temperature value that will be the critical condition when an alarm is triggered or not.
- *Alarm sound:* Applicable values are *Beep* or *No sound*.

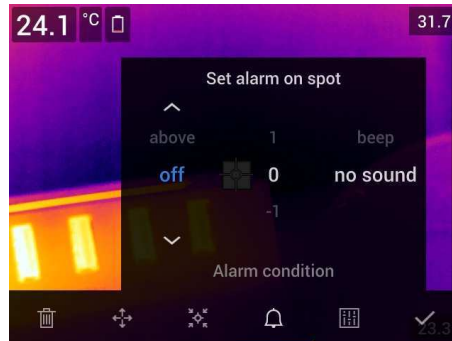


5. Push the navigation pad. This closes the dialog box.

#### 16.8.4.2 Setting up an alarm for a box or circle

**Note** This procedure assumes that you have previously set the camera to display at least one value (maximum, minimum, or average) in the result table. For more information, see section 16.6 *Displaying values in the result table*, page 76.

Follow this procedure:

1. To select the measurement tool, touch the tool on the screen. The tool is now displayed with one or more handles.
2. Push the navigation pad—or touch and hold the tool. This displays a context menu.
3. Select  (*Set alarm*) and push the navigation pad. This displays a dialog box.
4. In the dialog box, you can define the settings for the alarm.
  - *Alarm condition:* The condition that triggers the alarm. Applicable values are *Above*, *Below*, or *Off*.
  - *Select measurement:* Applicable settings are the values you have previously defined (*Max*, *Min*, and/or *Avg*).
  - *Alarm limit:* The temperature value that will be the critical condition when an alarm is triggered or not.
  - *Alarm sound:* Applicable values are *Beep* or *No sound*.

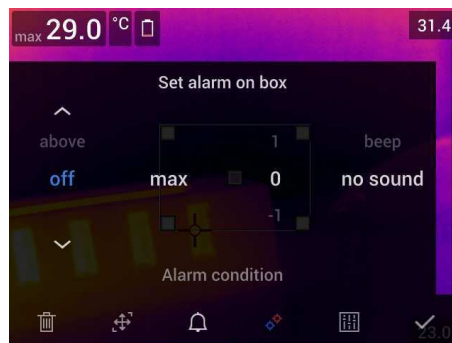

5. Push the navigation pad. This closes the dialog box.

### 16.8.4.3 Setting up an alarm for a difference calculation

#### Note

- You can set up an alarm for a difference calculation when defining user presets, or when editing an image in the archive.
- This procedure assumes that you have previously set up a difference calculation.

Follow this procedure:

1. To set up an alarm for a difference calculation, do the following:
  - If you are defining user presets, select  (*Add measurement*).
  - If you are editing an image in the archive, select  (*Measurement*).
2. Select  (*Select*) and push the navigation pad. This displays a dialog box.
3. Select *Delta* and push the navigation pad. This displays a context menu.
4. Select  (*Set alarm on delta*) and push the navigation pad. This displays a dialog box.
5. In the dialog box, you can define the settings for the alarm.
  - *Alarm condition*: The condition that triggers the alarm. Applicable values are *Above*, *Below*, or *Off*.
  - *Alarm limit*: The temperature value that will be the critical condition when an alarm is triggered or not.
  - *Alarm sound*: Applicable values are *Beep* or *No sound*.
6. Push the navigation pad. This closes the dialog box.

## 17.1 Color alarms

### 17.1.1 General



By using color alarms (isotherms), anomalies can easily be discovered in an infrared image. The isotherm command applies a contrasting color to all pixels with a temperature above, below, or between the set temperature levels. The camera also features isotherm types that are specific to the building trade: condensation and insulation alarms.



You can make the camera trigger the following types of color alarms:

- *Above alarm*: This will apply a contrasting color to all pixels with a temperature above the specified temperature level.
- *Below alarm*: This will apply a contrasting color to all pixels with a temperature below the specified temperature level.
- *Interval alarm*: This will apply a contrasting color to all pixels with a temperature between two specified temperature levels.
- *Condensation alarm*: Triggers when the camera detects a surface where the relative humidity exceeds a preset value.
- *Insulation alarm*: Triggers when there is an insulation deficiency in a wall.

### 17.1.2 Image examples

This table explains the different color alarms (isotherms).
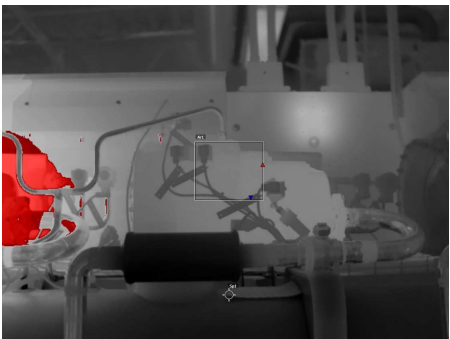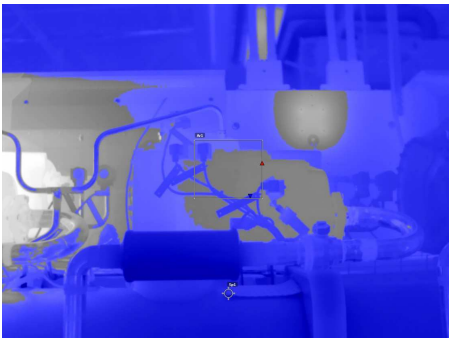
| Color alarm        | Image                                                                                 |
|--------------------|---------------------------------------------------------------------------------------|
| <i>Above alarm</i> |  |
| <i>Below alarm</i> |  |
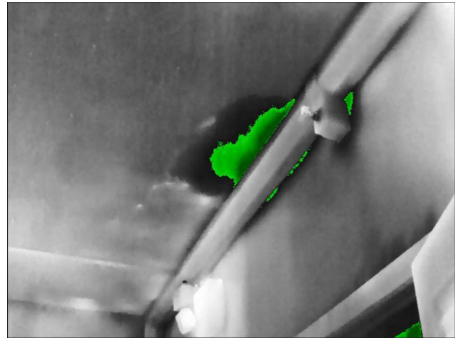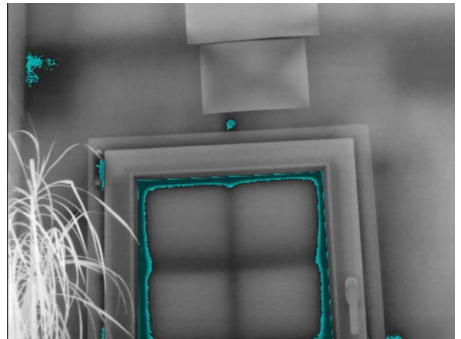
| Color alarm               | Image                                                                                 |
|---------------------------|---------------------------------------------------------------------------------------|
| <i>Interval alarm</i>     |    |
| <i>Condensation alarm</i> |   |
| <i>Insulation alarm</i>   |  |

### 17.1.3 Setting up above, below, and interval alarms

Follow this procedure:

1. Push the navigation pad to display the menu system.
2. Select  (*Color*) and push the navigation pad. This displays a submenu.
3. Use the navigation pad to select one of the following:
  -  (*Above alarm*).
  -  (*Below alarm*).
  -  (*Interval alarm*).
4. Push the navigation pad. The threshold temperature is displayed at the top of the screen.

---

5. To change the threshold temperature, do the following:

- For the *Interval alarm*, push the navigation pad left/right to select the low/high-temperature value.
- Push the navigation pad up/down to change the threshold temperature.

#### 17.1.4 Building isotherms

**Note** The Condensation and Insulation alarms are not supported by all camera models.

##### 17.1.4.1 About the Condensation alarm

To detect areas with potential moisture problems, you can use the *Condensation alarm*. You can set the relative humidity above which the isotherm will colorize the image.

##### 17.1.4.2 About the Insulation alarm

The *Insulation alarm* can detect areas where there may be an insulation deficiency in the building. It will trigger when the insulation level (which is called the thermal index in the camera) falls below a preset value of the energy leakage through a wall.

Different building codes recommend different values for the insulation level, but typical values are 60–80% for new buildings. Refer to your national building code for recommendations.

##### 17.1.4.3 Setting up condensation and insulation alarms


Follow this procedure:

1. Push the navigation pad to display the menu system.
2. Select  (*Color*) and push the navigation pad. This displays a submenu.
3. Use the navigation pad to select one of the following:
  -  (*Condensation alarm*).
  -  (*Insulation alarm*).

4. Push the navigation pad. This displays a dialog box where you can define the settings for the alarm.

For the *Condensation alarm*, the following parameters can be set:

- *Atmospheric temperature*: The current atmospheric temperature.
- *Relative humidity*: The current relative humidity.
- *Relative humidity limit*: The relative humidity level at which you want the alarm to be triggered. A relative humidity of 100% means that water vapor condenses from the air as liquid water (= dewpoint). A relative humidity of about 70% or above can cause mold.

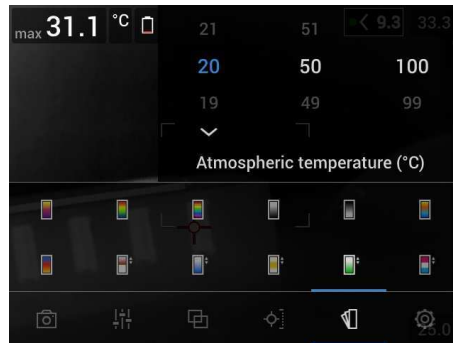

For the *Insulation alarm*, the following parameters can be set:

- *Indoor temperature*: The current indoor temperature.
- *Outdoor temperature*: The current outdoor temperature.
- *Thermal index*: The insulation level (an integer between 0 and 100).



5. Push the navigation pad. This closes the dialog box.



## 18.1 General

You can save additional information with an infrared image by using annotations. Annotations make reporting and post-processing more efficient by providing essential information about the image, e.g., conditions and information about where an image is taken.

Annotations are added to the image file, and can be viewed and edited in the image archive, and also when moving files from the camera to reporting software on the computer.


- You can set the camera to display annotation tools when an image is saved. Select  (Settings) > Save options & storage > Add annotation after saving.
- You can also add annotations to a saved image in the image archive.

**Note** This section describes the procedures for adding annotations to a saved image in the image archive. Adding annotations when saving an image works in a similar way.

## 18.2 Adding a note

### 18.2.1 General

You can add a text note to the image file. Using this feature, you can annotate images by entering free-form text.

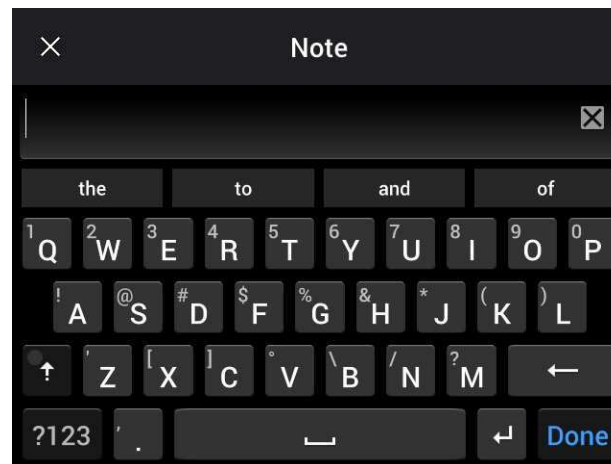

### 18.2.2 Procedure

Follow this procedure:


1. Open the image in the image archive.
2. Push the navigation pad to display the top toolbar.
3. On the top toolbar, select the  icon and push the navigation pad.
4. On the right toolbar, select the  icon and push the navigation pad.
5. A soft keyboard is displayed, where you can enter text by touching the screen.
6. When completed, touch *Done* on the soft keyboard.

## 18.3 Adding a text comment table

### 18.3.1 General

You can save a table with textual information to the image file. This feature is a very efficient way of recording information when you are inspecting a large number of similar objects. The idea behind using a table with textual information is to avoid filling out forms or inspection protocols manually.

The camera ships with an example text comment table template. You can also create your own templates. For more information, see section 18.3.3 *Creating a text comment table template*, page 87.

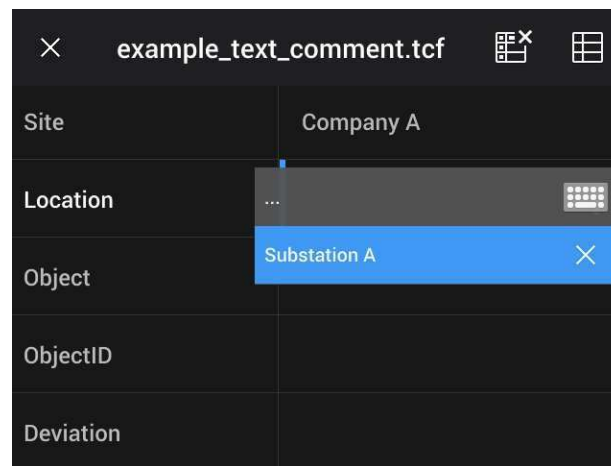

### 18.3.2 Procedure

Follow this procedure:

1. Open the image in the image archive.
2. Push the navigation pad to display the top toolbar.
3. On the top toolbar, select the  icon and push the navigation pad.
4. On the right toolbar, select the  icon and push the navigation pad. This displays a table.
5. (Optional step.) On the top toolbar, do one of the following:
  - To clear the content of the current table, select the  icon and push the navigation pad.
  - To select another table template, select the  icon and push the navigation pad.

6. For each row in the table, do the following:

- Push the navigation pad. This displays the predefined values.
- Push the navigation pad up/down to select a predefined value. Push the navigation pad to confirm.
- Instead of selecting a predefined value, you can select the keyboard  icon and enter other text by touching the screen.

**Note** Text entered by the keyboard will be saved to the text comment table template. Next time you add a text comment table annotation, the entered text will be displayed as a predefined value.

7. When completed, select *Save & Exit* at the bottom of the table. Push the navigation pad to confirm.

### 18.3.3 Creating a text comment table template

#### 18.3.3.1 General

You can create a text comment table template in different ways:

- Using FLIR Tools/Tools+, see section 18.3.3.2 *Creating a table template using FLIR Tools/Tools+*, page 87.
- Manually creating a text comment file (\*.tcf), see section 18.3.3.3 *Manually creating a table template*, page 88.

#### 18.3.3.2 Creating a table template using FLIR Tools/Tools+

**Note** If your camera uses an SD card that has been used in another camera, FLIR Tools/Tools+ cannot create proper templates for this camera. Please clear the SD card entirely before using tables templates from FLIR Tools/Tools+.

##### 18.3.3.2.1 General

In FLIR Tools/Tools+, you can create text annotation templates on the *Templates* tab. These templates can either be transferred to the camera or used as a template during post-analysis in the program.

##### 18.3.3.2.2 Procedure

Follow this procedure:

1. Click the *Templates* tab.
2. Click the *Add new text annotations template* toolbar button.
3. Create a name for the template.
4. Enter the desired fields and values. See the image below for examples.

Example file

| Fields   | Values       |
|----------|--------------|
| Company  | FLIR Systems |
| Building | Warehouse    |
|          |              |

5. Save the template.

6. Do one of the following:

- To use the template in the camera, connect a camera to FLIR Tools/Tools+ and transfer the template to the camera.
- To use the template during post-analysis in FLIR Tools/Tools+, double-click an image, and then click *Import from template* under *Text annotations* in the right pane.

### 18.3.3.3 Manually creating a table template

#### 18.3.3.3.1 General

A text comment file (\*.tcf) is an annotation format that is proprietary to FLIR Systems. It defines a table structure that can be used to add text table annotations to FLIR images. You can create text comment files (\*.tcf files) and use these files as table templates in the camera.

The camera ships with an example text comment table file: `example_text_comment.tcf`. The file is stored on the memory card in the subfolder `\TextTableTemplates`. You can make a copy of the example file and modify it using a text editor such as Microsoft Notepad.

When creating or modifying a text comment file, keep the following rules in mind:

1. Lines starting with “#” are regarded as comments and will be ignored.
2. Lines that start with “<” and end with “>” are labels and will appear on the left-hand side of the table.
3. Non-empty lines under a label line are regarded as values and will be displayed as options to the label above.
4. When you save the file, select UTF-8 encoding. With UTF-8 encoding, the file will support all languages currently supported by the camera.
5. The template will be updated by the camera if you add or remove values in the text table annotations dialog in the camera. This enables you to modify its content while you are working with the camera.
6. The camera will find all text table template files if:
  - They are placed on the memory card in the subfolder `\TextTableTemplates`.
  - They have an ASCII filename and the file extension `.tcf`. (ASCII characters include a–z, A–Z, 0–9, and basic punctuation, and spaces can be used. The file can contain non-ASCII text, but the filename must be ASCII.)

#### 18.3.3.3.2 Example mark-up structure

The file format for the text comment table template is \*.tcf. This code sample is an example mark-up structure of such a file, and shows how the mark-up appears in a text editor such as Notepad.

```
<Site>
Company A
Company B
<Location>
Substation A
<Object>
Engine
Vent
Vault
Door
<ObjectID>
A1a1
A1b2
A1c3
```

---

```

<Deviation>
Overload
Moisture
Draft
<Remedy>
Replace
Fix
No action
<Severity>
Critical
Non-critical
<Severity>

```

## 18.4 Adding a voice annotation

### 18.4.1 General

A voice annotation is an audio recording that is saved to the infrared image file. The recording can be played back in the camera, and in image analysis and reporting software from FLIR Systems.

The voice annotation is recorded using the built-in microphone. You can also use a Bluetooth-enabled headset. For information on how to pair a headset with the camera, see section 22 *Pairing Bluetooth devices*, page 97.



### 18.4.2 Procedure

Follow this procedure:

1. Open the image in the image archive.
2. Push the navigation pad to display the top toolbar.
3. On the top toolbar, select the  icon and push the navigation pad.
4. On the right toolbar, select the  icon and push the navigation pad.
5. A context menu is displayed.
6. To start a recording, select  (*Record*) and push the navigation pad.
7. To stop the recording, select  (*Stop*) and push the navigation pad.

- 
8. To listen to the recording, select  (*Play*) and push the navigation pad.
  9. To delete the recording, select  (*Delete*) and push the navigation pad.
  10. When completed, select  (*Done*) and push the navigation pad.

## 18.5 Adding a sketch

### 18.5.1 General

You can add a freehand drawing to an infrared image.



### 18.5.2 Procedure

Follow this procedure:

1. Open the image in the image archive.
2. Push the navigation pad to display the top toolbar.
3. On the top toolbar, select the  icon and push the navigation pad.
4. On the right toolbar, select the  icon and push the navigation pad.
5. You are now in sketch mode. Draw the sketch by touching the screen.

6. (Optional step.) Push the navigation pad. This displays a context menu. Do one or more of the following:
- To change the color of the sketch tools, select  (*Draw*) and push the navigation pad. Select the color and push the navigation pad.
  - To erase, select  (*Eraser*) and push the navigation pad. Erase parts of the sketch by touching the screen.
  - To add an arrow, circle, or cross, select  (*Stamp sketch*) and push the navigation pad. Select the type of stamp and push the navigation pad. The stamp is displayed in the center of the screen. You can move the stamp by using the navigation pad or by touching the screen. When completed, push the navigation pad.
  - To clear, select  (*Clear all*) and push the navigation pad.
  - When the sketch is completed, select  (*Save*) and push the navigation pad.

## 19.1 General

You can program the camera to save images periodically (time-lapse).



## 19.2 Procedure

Follow this procedure:


1. Push the navigation pad to display the menu system.
2. Select  (*Recording mode*) and push the navigation pad. This displays a submenu.
3. Select  (*Time-lapse*).
4. Push the navigation pad. This displays a dialog box where you can set the save conditions:
  - *Save interval*: Use the navigation pad to set the time interval between each saved image.
  - *Total number of images*: Periodic saving will stop when the set number of images have been saved.

**Note** If you select “∞,” the camera will keep on saving images until the memory card is full or until you manually stop the time-lapse.
5. Push the navigation pad. This closes the dialog box.
6. The time interval is displayed at the top of the screen.
7. To start the time-lapse (periodic saving), push the Save button.
8. To manually stop the time-lapse, push the Save button.
9. When the time-lapse is completed, an information screen is displayed. Push any button or touch the screen to return to the live image.



## 20.1 General

You can record and save video clips to the memory card.

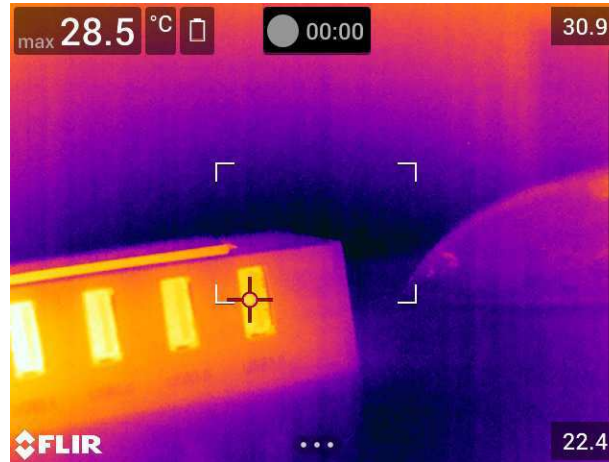

**Note** The camera can be configured to save video in \*.mpg or \*.csq format. Select  (Settings) > Save options & storage > Video compression.

- *Mpeg (\*.mpg)*: Mpeg recordings cannot be edited after the file has been saved.
- *Radiometric storage (\*.csq)*: A \*.csq file supports full radiometry but is only supported by FLIR Systems software. The file does not include any visual image information. With this setting, only the image modes *Thermal* and *Macro* are supported when recording video. If any non-supported image mode is active when *Video* recording mode is selected, the camera will auto-switch to *Thermal* image mode.

## 20.2 Procedure

Follow this procedure:

1. Push the navigation pad to display the menu system.
2. Select  (*Recording mode*) and push the navigation pad. This displays a submenu.
3. Select  (*Video*) and push the navigation pad.
4. To start a recording, push the Save button. A counter at the top of the screen displays the duration of the recording.
5. To stop a recording, push the Save button. The recording is automatically saved to the image archive.

## 20.3 Playing a saved video clip

Follow this procedure:

1. Push the image archive button . This displays the *Gallery* with one or more folders.
2. Select a folder and push the navigation pad.
3. Select the video clip you want to play and push the navigation pad.
4. Push the navigation pad to display the top toolbar.

- 
5. On the top toolbar, select the  icon and push the navigation pad.
  6. To play or pause the video clip, push the navigation pad.

## 21.1 General

The screening alarm can be used, for example, at airports to detect passengers with elevated body temperatures, which may indicate the presence of a fever.

The screening alarm can also be used to detect temperature anomalies in a series of inspected objects in a similar/fixed setup.

Activating the screening mode will turn on a measurement box and screening data in the result table.



The sampled average temperature.



The alarm temperature.



The measured temperature.

The alarm will trigger when the measurement box measures a temperature higher than the alarm temperature. The alarm temperature is, in turn, the sum of a specified allowed deviation and a sampled average value.



### WARNING

Make sure that the laser is disabled when you point the camera at the face of a person. The laser beam can cause eye irritation. Disable the laser by selecting  (Settings) > Device settings > Lamp & laser > Disable all.

## 21.2 Procedure

Follow this procedure:

1. Enable the screening mode by selecting  (Settings) > Device settings > User interface options > Screening mode = On.
2. Push the navigation pad to display the menu system.
3. Select  (Recording mode) and push the navigation pad. This displays a submenu.
4. Select  (Screening).
5. Push the navigation pad. This displays a dialog box where you can define the settings for the alarm:
  - **Allowed deviation:** The allowed deviation from the sampled average.
  - **Alarm sound:** Applicable values are *Beep* or *No sound*.
6. Push the navigation pad. This closes the dialog box.
7. Aim the camera toward a point of interest. The object should be within the frame of the measurement box.
8. To reset the sampled average, push and hold the programmable button **P** above the screen.
9. To sample, push the programmable button **P** above the screen.

---

10. Aim the camera toward more points of interest. Sample 10 times to build up a sample base by pushing the programmable button **P** above the screen.

The alarm is now set up and ready to use. Occasionally record a few samples if the alarm is used for a long time or if the conditions change.

**Note**

- Every time you push the programmable button **P** above the screen, a sample is saved. Make sure you aim the camera toward an object within the interesting temperature range when you push (and hold) the button.
- The algorithm has a memory of the last 10 samples. It discriminates between the highest and lowest values, and calculates an average of the remaining values.
- Do not modify the measurement setup or activate another alarm because this will deactivate the screening alarm.

## 22.1 General

You can use the camera with the following Bluetooth devices:

- METERLiNK devices (FLIR meters).
- Bluetooth-enabled headsets.

Before you can use a Bluetooth device with the camera, you need to pair the devices. The Bluetooth functionality is managed from the *Settings* menu. You can also enable/disable Bluetooth on the swipe-down menu. For more information, see section 9.5 *Swipe-down menu*, page 24.

## 22.2 Procedure

Follow this procedure:

1. Push the navigation pad to display the menu system.
2. Select  (*Settings*) and push the navigation pad. This displays the *Settings* menu.
3. Use the navigation pad to select *Connections > Bluetooth*.
4. If the *Bluetooth* check box is unchecked, push the navigation pad to enable Bluetooth.

**Note** You also need to ensure that the external Bluetooth device is in visible mode.

5. Select *Available devices* and push the navigation pad.
6. Wait until a list of available devices is displayed. This will take about 15 seconds.
7. When a Bluetooth device is found, select the device to add it, and begin the pairing procedure. The device is then ready to be used.

### Note

- Only METERLiNK devices (FLIR meters) and Bluetooth-enabled headsets will appear in the list of available devices.
- You can add several devices.
- You can remove a device by selecting the device and then selecting *Unpair device*.
- After adding a METERLiNK device, such as the FLIR MR77 or FLIR DM93, the result from the meter will be visible in the result table and stored with the images. For more information, see section 24 *Fetching data from external FLIR meters*, page 99.
- After adding a Bluetooth-enabled headset, it is ready to be used for adding voice annotations. Adding a Bluetooth-enabled headset automatically disables the built-in microphone and speaker.

## 23.1 General

Depending on your camera configuration, you can connect the camera to a wireless local area network (WLAN) using Wi-Fi, or let the camera provide Wi-Fi access to other devices.

You can connect the camera in two different ways:

- *Most common use*: Setting up the camera as a wireless access point. This method is primarily used with other devices, e.g., an iPhone or iPad.
- *Less common use*: Connecting the camera to a wireless local area network (WLAN).

The Wi-Fi functionality is managed from the *Settings* menu. You can also enable/disable Wi-Fi on the swipe-down menu. For more information, see section 9.5 *Swipe-down menu*, page 24.

## 23.2 Setting up a wireless access point (most common use)

Follow this procedure:

1. Push the navigation pad to display the menu system.
2. Select  (*Settings*) and push the navigation pad. This displays the *Settings* menu.
3. Use the navigation pad to select *Connections > Wi-Fi*.
4. Select *Share* and push the navigation pad.
5. (Optional step.) To display and change the parameters, select *Share settings* and push the navigation pad.
  - To change the SSID, select *Network name (SSID)* and push the navigation pad.
  - To change the WPA2 password, select *Password* and push the navigation pad.

**Note** These parameters are set for your camera's network. They will be used by the external device to connect that device to the network.

## 23.3 Connecting the camera to a WLAN (less common use)

Follow this procedure:

1. Push the navigation pad to display the menu system.
2. Select  (*Settings*) and push the navigation pad. This displays the *Settings* menu.
3. Use the navigation pad to select *Connections > Wi-Fi*.
4. Select *Connect to network* and push the navigation pad.
5. To display a list of the available networks, select *Available networks* and push the navigation pad.
6. Select one of the available networks and push the navigation pad.

**Note** Password-protected networks are indicated with a padlock icon, and for these you will need to enter a password the first time you connect to the network. After that the camera will connect automatically to the network. To disable the automatic connection, select *Forget network*.

**Note** Some networks do not broadcast their existence. They appear in the list as *Untitled*. To connect to such a network, you will be prompted to enter additional parameters.

# Fetching data from external FLIR meters

## 24.1 General

You can fetch data from some external FLIR meters that support Bluetooth and merge this data into the infrared image. When the camera is connected to a FLIR meter via Bluetooth, the measurement value from the meter is displayed in the result table of the camera. The FLIR meter value is also added to the information saved in the image file.



In preview mode and when editing an image in the archive, you can add more than one value from the same FLIR meter. The last added value is displayed below the previous values. The live value is displayed with a dotted outline.

If the screen display for values is full, it is still possible to add more values from the FLIR meter. Added values are then indicated by a box with a number that counts up each time a new value is added.

To find out whether a FLIR meter is supported by the camera, consult the meter documentation.

## 24.2 Technical support for external meters

| Technical support |                                                               |
|-------------------|---------------------------------------------------------------|
| Website           | <a href="http://support.flir.com">http://support.flir.com</a> |
| E-mail            | TMSupport@flir.com                                            |
| Phone             | 855-499-3662                                                  |
| Repairs           | repair@flir.com                                               |

## 24.3 Procedure

### Note

- Before you can use a FLIR meter with the camera, you need to pair the devices. For more information, see section 22 *Pairing Bluetooth devices*, page 97.
- To add more than one FLIR meter value when saving an image, preview mode must be enabled. Select  (Settings) > Save options and storage > Preview image before saving = On.

Follow this procedure:

1. Turn on the camera.
2. Turn on the FLIR meter.
3. On the FLIR meter, enable Bluetooth mode. Refer to the user documentation for the meter for information on how to do this.
4. On the FLIR meter, choose the quantity that you want to use (voltage, current, resistance, etc.). Refer to the user documentation for the meter for information on how to do this.

Results from the meter will now automatically be displayed in the result table in the top left corner of the infrared camera screen.

5. On the camera, in preview mode and when editing an image in the archive, you can do the following:

- Push the programmable button **P** to add the value currently displayed by the FLIR meter.
- Push and hold the programmable button **P** to remove all FLIR meter values from the image.

**Note** Any function assigned to the programmable button is temporarily disabled when in preview mode or when editing an image in the archive.

## 24.4 Typical moisture measurement and documentation procedure

### 24.4.1 General

The following procedure can form the basis for other procedures using FLIR meters and infrared cameras.

### 24.4.2 Procedure

Follow this procedure:

1. Use the infrared camera to identify any potential damp areas behind walls and ceilings.
2. Use the moisture meter to measure the moisture levels at various suspect locations that may have been found.
3. When an area of particular interest is located, store the moisture reading in the moisture meter's memory and identify the measurement area with a handprint or other thermal identifying marker.
4. Recall the reading from the meter memory. The moisture meter will now continuously transmit this reading to the infrared camera.
5. Use the camera to take a thermal image of the area with the identifying marker. The stored data from the moisture meter will also be saved on the image.



---

## 24.5 More information


For more information, see the user manuals that are shipped with FLIR meters.

## 25.1 General

You can change a variety of settings in the camera. You do this on the *Settings* menu.

The *Settings* menu includes the following:

- *Connections*.
- *Camera temperature range*.
- *Save options & storage*.
- *Device settings*.

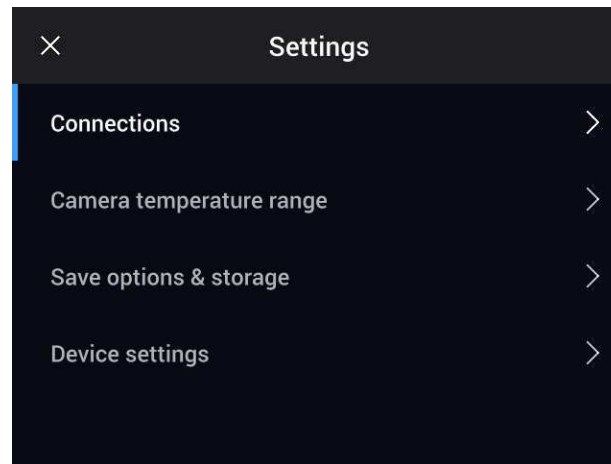

### 25.1.1 Connections

- *Wi-Fi*: This setting defines Wi-Fi networks. For more information, see section 23 *Configuring Wi-Fi*, page 98.
- *Bluetooth*: This setting defines Bluetooth connectivity. For more information, see section 22 *Pairing Bluetooth devices*, page 97.

### 25.1.2 Camera temperature range

For accurate temperature measurements, you must change the *Camera temperature range* setting to suit the expected temperature of the object you are inspecting.

Available temperature range options are dependent on the camera model. The unit (°C or °F) depends on the temperature unit setting, see section 25.1.4 *Device settings*, page 103.

### 25.1.3 Save options & storage

- *Preview image before saving*: This setting defines if a preview image will be displayed before the image is saved.
- *Add annotation after saving*: This setting defines if an annotation tool will be displayed when the image has been saved. Available options are:
  - *Save*: No annotation tool will be displayed.
  - *Save & add note*: The note annotation tool will be displayed.
  - *Save & add table*: The table annotation tool will be displayed.
  - *Save & add voice annotation*: The voice annotation tool will be displayed.
  - *Save & add sketch*: The sketch annotation tool will be displayed.
  - *Save & add any annotation*: The annotation tool menu will be displayed.

- 
- *Image resolution*: This setting defines the resolution of the images captured by the camera. Available options are *Normal* and *UltraMax*<sup>5</sup>. For more information, see section 12.1.4 *About UltraMax*, page 47.
  - *Video compression*: This setting defines the storage format for video clips. Available options are:
    - *Mpeg (\*.mpeg)*: MPEG recordings cannot be edited after the file has been saved.
    - *Radiometric storage (\*.csq)*: A CSQ file supports full radiometry but is only supported by FLIR Systems software. The file does not include any visual image information. With this setting, only the image modes *Thermal* and *Macro* are supported when recording video.
  - *Photo as separate JPEG*: For the *Thermal MSX*, *Thermal*, and *Picture in picture* image modes, a visual image is always saved in the same JPEG file as the thermal image. Enabling this setting saves an extra low-resolution visual image as a separate JPEG file.
  - *Digital camera*: This setting is used to turn on/off the digital camera. Turning off the digital camera can for example be required in restricted areas and in confidential (e.g. doctor/patient) situations. When the digital camera is off, the image modes *Thermal MSX* and *Picture in picture* are disabled.
  - *Measure distance*: This setting defines if the laser distance meter will be used to measure the distance when an image is saved. With this setting, the *Object distance* parameter (see section 16.5 *Changing the measurement parameters*, page 73) in the image data is automatically updated with the measured distance when an image is saved. (There is no effect on the *Object distance* setting in live mode.)
  - *File naming format*: This setting defines the naming format for new image/video files. The setting has no impact on already saved files in the archive. Available options are:
    - *DCF*: DCF (Design rule for Camera File system) is a standard that specifies the naming method of image files (and much more). With this setting, the name of a saved image/video file will be FLIRxxxx, where xxxx is an incremental counter. Example: FLIR0001.
    - *Date prefix*: A prefix will be added to the filename, including the date and the text "IR\_" for images and "MOV\_" for videos. Examples: IR\_2015-04-22\_0002 and MOV\_2015-04-22\_0003. The date format will follow the *Date & time format* setting, see section 25.1.4 *Device settings*, page 103.

**Note** With the *Date prefix* setting, the files may not automatically be detected by third-party applications.
  - *Delete all saved files...*: This displays a dialog box where you can choose to permanently delete all the saved files (images and videos) from the memory card or to cancel the delete action.

#### 25.1.4 Device settings

- *Language, time & units*: This submenu includes settings for a number of regional parameters:
  - *Language*.
  - *Temperature unit*.
  - *Distance unit*.
  - *Time zone*.
  - *Date & time*.
  - *Date & time format*.
- *Focus*: This submenu includes the following settings:

---

5. Not supported when using macro.

- 
- *Autofocus*: When autofocusing, the infrared camera can use one of the following focus methods:
    - *Contrast*: The focus is based on maximizing the image contrast.
    - *Laser*: The focus is based on a laser distance measurement. The laser is on when the camera is autofocusing.
  - *Continuous autofocus*: This setting is used to enable/disable continuous autofocus.
  - *Display settings*: This submenu includes the following settings:
    - *Screen rotation*: This setting defines if the orientation of the overlay graphics will change according to how you hold the camera.
 

**Note** You can also enable/disable screen rotation on the swipe-down menu. For more information, see section 9.5 *Swipe-down menu*, page 24.
    - *Image overlay information*: This setting specifies what image information the camera will display as an overlay on the image. For more information, see section 9.6 *Image overlay information*, page 24. You can select the following information to display:
      - *Date & time*.
      - *Emissivity*.
      - *Reflected temperature*.
      - *Distance*.
      - *Relative humidity*.
      - *Atmospheric temperature*.

**Note** This setting only specifies what information to overlay on the image. All image information is always saved to the image file and is available in the image archive.
    - *Screen brightness*: The screen brightness slider is used to control the brightness of the screen.
 

**Note** You can also control the screen brightness on the swipe-down menu. For more information, see section 9.5 *Swipe-down menu*, page 24.
  - *Geolocation*: This submenu includes the following settings:
    - *GPS*: This setting is used to enable/disable the GPS.
  - *Lamp & laser*: This submenu includes the following settings:
    - *Enable lamp & laser*: This setting is used to enable the camera lamp and the laser.
    - *Enable lamp & laser + Use lamp as flash*: This setting is used to enable the flash function. When the flash function is enabled, the camera lamp will flash when an image is saved.
    - *Disable all*: This setting is used to disable the camera lamp, laser, and flash function.
  - *Auto power off*: This setting defines how soon the camera is automatically turned off. Available choices are *Off*, *5 min*, and *20 min*.
  - *User interface options*: This submenu includes the following settings:
    - *Manual adjustment using touch*: This setting is used to enable/disable the touch functionality for manual image adjustments. For more information, see section 14.3 *Adjusting the infrared image*, page 59.
    - *Manual adjustment mode*: This setting specifies the type of manual image adjustment mode. Available options are *Level*, *Max*, *Min* and *Level, Span*. For more information, see section 14.3 *Adjusting the infrared image*, page 59.
    - *Emissivity mode*: This setting specifies how the measurement parameter emissivity will be entered. Available options are *Select values* and *Select from materials table*.

---

For more information, see section 14.6 *Changing the measurement parameters*, page 64.

- *Screening mode*: This setting is used to enable/disable screening mode. For more information, see section 21 *Screening alarm*, page 95.
- *Volume*: The volume slider is used to control the volume of the built-in speaker.
- *Reset options*: This submenu includes the following settings:
  - *Reset default camera mode...*: This setting will affect the image mode, color palette, measurement tools, and measurement parameters. Saved images will not be affected.
  - *Reset device settings to factory default...*: This setting will affect all camera settings, including regional settings. Saved images will not be affected. The camera will be re-started and you will be prompted to set the regional settings.
  - *Reset image counter...*: This setting will reset the numbering of the image filenames. To prevent image files being overwritten, the new counter value will be based on the highest existing filename number in the image archive.

**Note** When a reset option is selected, a dialog box is displayed with more information. You can choose to execute the reset action or to cancel.

- *Camera information*: This submenu displays information about the camera. No changes can be made.
  - *Model*.
  - *Serial number*.
  - *Part number*.
  - *Software*: The version of the software.
  - *Storage*: The used and free space on the memory card.
  - *Lens*: The field of view of the lens.
  - *Calibrate lens...*: This will start the lens–camera calibration wizard. For more information, see section 11.15 *Calibrating the lens–camera combination*, page 42.
  - *Battery*: The remaining battery capacity (in percent).
  - *Register camera...*: This will start the registration wizard. For more information, see section 6 *Register the camera*, page 11.
  - *Licenses*: Open-source license information.
- *Regulatory*: Displays regulatory information about the camera. No changes can be made.

## 26.1 Camera housing, cables, and other items

### 26.1.1 Liquids

Use one of these liquids:

- Warm water
- A weak detergent solution

### 26.1.2 Equipment

A soft cloth

### 26.1.3 Procedure

Follow this procedure:

1. Soak the cloth in the liquid.
2. Twist the cloth to remove excess liquid.
3. Clean the part with the cloth.



#### CAUTION

Do not apply solvents or similar liquids to the camera, the cables, or other items. This can cause damage.

## 26.2 Infrared lens

### 26.2.1 Liquids

Use one of these liquids:

- A commercial lens cleaning liquid with more than 30% isopropyl alcohol.
- 96% ethyl alcohol ( $C_2H_5OH$ ).

### 26.2.2 Equipment

Cotton wool



#### CAUTION

If you use a lens cleaning cloth it must be dry. Do not use a lens cleaning cloth with the liquids that are given in section 26.2.1 above. These liquids can cause material on the lens cleaning cloth to become loose. This material can have an unwanted effect on the surface of the lens.

### 26.2.3 Procedure

Follow this procedure:

1. Soak the cotton wool in the liquid.
2. Twist the cotton wool to remove excess liquid.
3. Clean the lens one time only and discard the cotton wool.



#### WARNING

Make sure that you read all applicable MSDS (Material Safety Data Sheets) and warning labels on containers before you use a liquid: the liquids can be dangerous.

**CAUTION**

- Be careful when you clean the infrared lens. The lens has a delicate anti-reflective coating.
- Do not clean the infrared lens too vigorously. This can damage the anti-reflective coating.

## 26.3 Infrared detector

### 26.3.1 General

Even small amounts of dust on the infrared detector can result in major blemishes in the image. To remove any dust from the detector, follow the procedure below.

**Note**

- This section only applies to cameras where removing the lens exposes the infrared detector.
- In some cases the dust cannot be removed by following this procedure: the infrared detector must be cleaned mechanically. This mechanical cleaning must be carried out by an authorized service partner.

**CAUTION**

In Step 2 below, do not use pressurized air from pneumatic air circuits in a workshop, etc., as this air usually contains oil mist to lubricate pneumatic tools.

### 26.3.2 Procedure

Follow this procedure:

1. Remove the lens from the camera.
2. Use pressurized air from a compressed air canister to blow off the dust.

Table of contents

27.1 Online field-of-view calculator..... 108

27.2 Note about technical data..... 108

27.3 Note about authoritative versions..... 108

27.4 FLIR T530 14° ..... 109

27.5 FLIR T530 24° ..... 116

27.6 FLIR T530 42° ..... 123

27.7 FLIR T530 24° + 14° ..... 130

27.8 FLIR T530 24° + 42° ..... 137

27.9 FLIR T530 24° + 14° & 42° ..... 144

27.10 FLIR T530 42° + 14° ..... 151

27.11 FLIR T540 14° ..... 158

27.12 FLIR T540 24° ..... 165

27.13 FLIR T540 42° ..... 172

27.14 FLIR T540 24° + 14° ..... 179

27.15 FLIR T540 24° + 42° ..... 186

27.16 FLIR T540 24° + 14° & 42° ..... 193

27.17 FLIR T540 42° + 14° ..... 200

27.1 Online field-of-view calculator

Please visit <http://support.flir.com> and click the photo of the camera series for field-of-view tables for all lens–camera combinations.

27.2 Note about technical data

FLIR Systems reserves the right to change specifications at any time without prior notice. Please check <http://support.flir.com> for latest changes.

27.3 Note about authoritative versions

The authoritative version of this publication is English. In the event of divergences due to translation errors, the English text has precedence.

Any late changes are first implemented in English.



## 27.4 FLIR T530 14°

P/N: 79301-0101

Rev.: 53841

| Imaging and optical data                 |                                                                                                                                           |
|------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Infrared resolution                      | 320 × 240 pixels                                                                                                                          |
| UltraMax (super-resolution) <sup>6</sup> | In FLIR Tools                                                                                                                             |
| NETD                                     | <50 mK @ +30°C (+86°F)                                                                                                                    |
| Field of view                            | 14° × 10°                                                                                                                                 |
| Minimum focus distance                   | 1.0 m (3.28 ft.)                                                                                                                          |
| Minimum focus distance with MSX          | 1.0 m (3.28 ft.)                                                                                                                          |
| Focal length                             | 29 mm (1.41 in.)                                                                                                                          |
| Spatial resolution (IFOV)                | 0.75 mrad/pixel                                                                                                                           |
| Available extra lenses                   | <ul style="list-style-type: none"> <li>• 42°</li> <li>• 24°</li> </ul>                                                                    |
| Lens identification                      | Automatic                                                                                                                                 |
| f number                                 | 1.5                                                                                                                                       |
| Image frequency                          | 30 Hz                                                                                                                                     |
| Focus                                    | <ul style="list-style-type: none"> <li>• Continuous LDM</li> <li>• One-shot LDM</li> <li>• One-shot contrast</li> <li>• Manual</li> </ul> |
| Field of view match                      | Yes                                                                                                                                       |
| Digital zoom                             | 1–4× continuous                                                                                                                           |
| Detector data                            |                                                                                                                                           |
| Focal plane array/spectral range         | Uncooled microbolometer/7.5–14 µm                                                                                                         |
| Detector pitch                           | 17 µm                                                                                                                                     |
| Image presentation                       |                                                                                                                                           |
| Resolution                               | 640 × 480 pixels (VGA)                                                                                                                    |
| Surface brightness (cd/m²)               | 400                                                                                                                                       |
| Screen size                              | 4 in.                                                                                                                                     |
| Viewing angle                            | 80°                                                                                                                                       |
| Color depth (bits)                       | 24                                                                                                                                        |
| Aspect ratio                             | 4:3                                                                                                                                       |
| Auto-rotation                            | Yes                                                                                                                                       |
| Touchscreen                              | Optically bonded PCAP                                                                                                                     |
| Display technology                       | IPS                                                                                                                                       |
| Cover glass material                     | Dragontrail®                                                                                                                              |
| Programmable buttons                     | 2                                                                                                                                         |

6. Not supported when using macro.

|                                            |                                                                                                                                                                                |                                                                |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|
| Image presentation                         |                                                                                                                                                                                |                                                                |
| Viewfinder                                 | No                                                                                                                                                                             |                                                                |
| Image adjustment                           | <ul style="list-style-type: none"><li>• Automatic</li><li>• Automatic maximum</li><li>• Automatic minimum</li><li>• Manual</li></ul>                                           |                                                                |
| Image presentation modes                   |                                                                                                                                                                                |                                                                |
| Infrared image                             | Yes                                                                                                                                                                            |                                                                |
| Visual image                               | Yes                                                                                                                                                                            |                                                                |
| MSX                                        | Yes                                                                                                                                                                            |                                                                |
| Picture in picture                         | Resizable and movable                                                                                                                                                          |                                                                |
| Gallery                                    | Yes                                                                                                                                                                            |                                                                |
| Measurement                                |                                                                                                                                                                                |                                                                |
| Camera temperature range                   | Object temperature range                                                                                                                                                       | Accuracy — for ambient temperature +15 to +35°C (+59 to +95°F) |
| -20 to +120°C (-4 to +248°F)               | -20 to +100°C (-4 to +212°F)                                                                                                                                                   | ±2°C (±3.6°F)                                                  |
|                                            | +100 to +120°C (+212 to +248°F)                                                                                                                                                | ±2%                                                            |
| 0 to +650°C (+32 to +1202°F)               | 0 to +100°C (+32 to +212°F)                                                                                                                                                    | ±2°C (±3.6°F)                                                  |
|                                            | +100 to + 650°C (+212 to +1202°F)                                                                                                                                              | ±2%                                                            |
| Optional +300 to +1200°C (+572 to +2192°F) | +300 to +1200°C (+572 to +2192°F)                                                                                                                                              | ±2%                                                            |
| Measurement analysis                       |                                                                                                                                                                                |                                                                |
| Spotmeter                                  | 3 in live mode                                                                                                                                                                 |                                                                |
| Area                                       | 3 in live mode                                                                                                                                                                 |                                                                |
| Automatic hot/cold detection               | Automatic maximum/minimum markers within area                                                                                                                                  |                                                                |
| Measurement presets                        | <ul style="list-style-type: none"><li>• No measurements</li><li>• Center spot</li><li>• Hot spot</li><li>• Cold spot</li><li>• User preset 1</li><li>• User preset 2</li></ul> |                                                                |
| Difference temperature                     | Yes                                                                                                                                                                            |                                                                |
| Reference temperature                      | Yes                                                                                                                                                                            |                                                                |
| Emissivity correction                      | Yes, variable from 0.01 to 1.0 or selected from materials list                                                                                                                 |                                                                |
| Measurement corrections                    | Yes                                                                                                                                                                            |                                                                |
| External optics/windows correction         | Yes                                                                                                                                                                            |                                                                |
| Screening                                  | 0.5°C (0.9°F) accuracy at 37°C (98.6°F) with reference                                                                                                                         |                                                                |

|                                          |                                                                                                                                                                           |
|------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Alarm</b>                             |                                                                                                                                                                           |
| Color alarm (isotherm)                   | <ul style="list-style-type: none"> <li>• Above</li> <li>• Below</li> <li>• Interval</li> <li>• Condensation (moisture/humidity/dewpoint)</li> <li>• Insulation</li> </ul> |
| Measurement function alarm               | Audible/visual alarms (above/below) on any selected measurement function                                                                                                  |
| <b>Set-up</b>                            |                                                                                                                                                                           |
| Color palettes                           | <ul style="list-style-type: none"> <li>• Iron</li> <li>• Gray</li> <li>• Rainbow</li> <li>• Arctic</li> <li>• Lava</li> <li>• Rainbow HC</li> </ul>                       |
| Setup commands                           | Local adaptation of units, language, date, and time formats                                                                                                               |
| Languages                                | 21                                                                                                                                                                        |
| <b>Service functions</b>                 |                                                                                                                                                                           |
| Camera software update                   | Use PC software FLIR Tools                                                                                                                                                |
| <b>Storage of images</b>                 |                                                                                                                                                                           |
| Storage media                            | Removable memory: SD card                                                                                                                                                 |
| Time lapse (Periodic image storage)      | 10 seconds to 24 hours (infrared)                                                                                                                                         |
| Remote control operation                 | <ul style="list-style-type: none"> <li>• Using FLIR Tools (using USB cable)</li> <li>• FLIR Tools Mobile (over Wi-Fi)</li> </ul>                                          |
| Image file format                        | Standard JPEG, measurement data included. Infrared-only mode                                                                                                              |
| <b>Image annotations</b>                 |                                                                                                                                                                           |
| Voice                                    | 60 seconds with built-in microphone and speaker (and via Bluetooth) on still images and video                                                                             |
| Text                                     | Text from predefined list or soft keyboard on touchscreen                                                                                                                 |
| Visual image annotation                  | Yes                                                                                                                                                                       |
| Image sketch                             | Yes: on infrared only                                                                                                                                                     |
| Sketch                                   | From touchscreen                                                                                                                                                          |
| METERLiNK                                | Wireless connection (Bluetooth) to:<br>FLIR meters with METERLiNK                                                                                                         |
| Area measurement information             | Yes                                                                                                                                                                       |
| GPS                                      | Location data automatically added to every still image and first frame in video from built-in GPS                                                                         |
| <b>Video recording in camera</b>         |                                                                                                                                                                           |
| Radiometric infrared-video recording     | RTRR (.csq)                                                                                                                                                               |
| Non-radiometric infrared-video recording | H.264 to memory card                                                                                                                                                      |
| Visual video recording                   | H.264 to memory card                                                                                                                                                      |

|                                                                                   |                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Video streaming</b>                                                            |                                                                                                                                                                                                                  |
| Radiometric infrared-video streaming (compressed)                                 | Over UVC                                                                                                                                                                                                         |
| Non-radiometric video streaming (compressed: IR, MSX, visual, Picture in Picture) | <ul style="list-style-type: none"> <li>• H.264 (AVC) over RTSP (Wi-Fi)</li> <li>• MPEG4 over RTSP (Wi-Fi)</li> <li>• MJPEG over UVC and RTSP (Wi-Fi)</li> </ul>                                                  |
| Visual video streaming                                                            | Yes                                                                                                                                                                                                              |
| <b>Digital camera</b>                                                             |                                                                                                                                                                                                                  |
| Resolution                                                                        | 5 MP with LED light                                                                                                                                                                                              |
| Focus                                                                             | Fixed                                                                                                                                                                                                            |
| Field of view                                                                     | 53° × 41°                                                                                                                                                                                                        |
| Video lamp                                                                        | Built-in LED light                                                                                                                                                                                               |
| <b>Laser pointer</b>                                                              |                                                                                                                                                                                                                  |
| Laser alignment                                                                   | Position is automatically displayed on the infrared image                                                                                                                                                        |
| Laser distance meter                                                              | Activated by dedicated button                                                                                                                                                                                    |
| Laser                                                                             | Class 2, 0.05–40 m (0.16–131 ft.) ±1% of measured distance                                                                                                                                                       |
| <b>Data communication interfaces</b>                                              |                                                                                                                                                                                                                  |
| Interfaces                                                                        | USB 2.0, Bluetooth, Wi-Fi, DisplayPort                                                                                                                                                                           |
| METERLiNK/Bluetooth                                                               | Communication with headset and external sensors                                                                                                                                                                  |
| Wi-Fi                                                                             | Peer to peer (ad hoc) or infrastructure (network)                                                                                                                                                                |
| Audio                                                                             | Microphone and speaker for voice annotation of images                                                                                                                                                            |
| USB                                                                               | USB Type-C: data transfer/video/power                                                                                                                                                                            |
| USB standard                                                                      | USB 2.0 High Speed                                                                                                                                                                                               |
| Video out                                                                         | DisplayPort                                                                                                                                                                                                      |
| Video connector type                                                              | DisplayPort over USB Type-C                                                                                                                                                                                      |
| <b>Radio</b>                                                                      |                                                                                                                                                                                                                  |
| Operating frequency                                                               | Bluetooth + EDR/LE: 2402–2480 MHz<br>WLAN 2.4 GHz: 2412–2462 MHz<br>WLAN 5 GHz: 5150–5350 MHz (DFS: only slave mode)<br>Note that frequency band 5150–5350 MHz is for indoor use only, see national regulations. |
| RF output (EIRP)                                                                  | Bluetooth + EDR/LE: < 10 dBm<br>WLAN: < 17 dBm                                                                                                                                                                   |
| Antenna                                                                           | Integrated PIFA antenna (gain: maximum 1.4 dBi)                                                                                                                                                                  |
| <b>Power system</b>                                                               |                                                                                                                                                                                                                  |
| Battery type                                                                      | Rechargeable Li-ion battery                                                                                                                                                                                      |
| Battery voltage                                                                   | 3.6 V                                                                                                                                                                                                            |
| Battery operating time                                                            | > 4 hours at 25°C (68°F) with typical use                                                                                                                                                                        |

|                                       |                                                                                                                                                                                                                                    |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power system</b>                   |                                                                                                                                                                                                                                    |
| Charging system                       | In camera (AC adapter or 12 V from a vehicle) or two-bay charger                                                                                                                                                                   |
| Charging time (using two-bay charger) | 3.5 h to 90% capacity, on-screen indicator                                                                                                                                                                                         |
| Charging temperature                  | 0°C to +45°C (+32°F to +113°F), except for the Korean market: +10°C to +45°C (+50°F to +113°F)                                                                                                                                     |
| External power operation              | AC adapter 90–260 V AC (50/60 Hz) or 12 V from a vehicle (cable with standard plug, optional)                                                                                                                                      |
| Power management                      | Automatic shut-down and sleep mode                                                                                                                                                                                                 |
| <b>Environmental data</b>             |                                                                                                                                                                                                                                    |
| Operating temperature range           | –15 to +50°C (5–122°F)                                                                                                                                                                                                             |
| Storage temperature range             | –40 to +70°C (–40 to 158°F)                                                                                                                                                                                                        |
| Humidity (operating and storage)      | IEC 60068-2-30/24 hours, 95% relative humidity, 25–40°C (77–104°F)/2 cycles                                                                                                                                                        |
| EMC                                   | <ul style="list-style-type: none"> <li>• ETSI EN 301 489-1 (radio)</li> <li>• ETSI EN 301 489-17</li> <li>• EN 61000-6-2 (immunity)</li> <li>• EN 61000-6-3 (emission)</li> <li>• FCC 47 CFR Part 15 Class B (emission)</li> </ul> |
| Radio spectrum                        | <ul style="list-style-type: none"> <li>• ETSI EN 300 228</li> <li>• FCC Part 15.249</li> <li>• RSS-247 Issue 2</li> </ul>                                                                                                          |
| Encapsulation                         | IP 54 (IEC 60529)                                                                                                                                                                                                                  |
| Shock                                 | 25g (IEC 60068-2-27)                                                                                                                                                                                                               |
| Vibration                             | 2g (IEC 60068-2-6)                                                                                                                                                                                                                 |
| Safety                                | EN/UL/CSA/PSE 60950-1                                                                                                                                                                                                              |
| <b>Physical data</b>                  |                                                                                                                                                                                                                                    |
| Weight (including battery)            | 1.3 kg (2.9 lb.)                                                                                                                                                                                                                   |
| Size (L × W × H)                      | <ul style="list-style-type: none"> <li>• Lens vertical: 140 × 201.3 × 84.1 mm (5.5 × 7.9 × 3.3 in.)</li> <li>• Lens horizontal: 140 × 201.3 × 167.3 mm (5.5 × 7.9 × 6.6 in.)</li> </ul>                                            |
| Battery weight                        | 195 g (6.89 oz.)                                                                                                                                                                                                                   |
| Battery size (L × W × H)              | 59 × 66 × 94 mm (2.3 × 2.6 × 3.7 in.)                                                                                                                                                                                              |
| Tripod mounting                       | UNC ¼"-20                                                                                                                                                                                                                          |
| Housing material                      | PCABS with TPE, magnesium                                                                                                                                                                                                          |
| Color                                 | Black                                                                                                                                                                                                                              |
| <b>Warranty and service</b>           |                                                                                                                                                                                                                                    |
| Warranty                              | <a href="http://www.flir.com/warranty/">http://www.flir.com/warranty/</a>                                                                                                                                                          |

| Shipping information |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Packaging, type      | Cardboard box                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Packaging, contents  | <ul style="list-style-type: none"> <li>Accessory box I: <ul style="list-style-type: none"> <li>Power supply for battery charger</li> <li>Power supply, 15 W/3 A</li> <li>Printed documentation</li> <li>SD card (8 GB)</li> <li>USB 2.0 A to USB Type-C cable</li> <li>USB Type-C to HDMI and PD adapter</li> <li>USB Type-C to USB Type-C cable (USB 2.0 standard)</li> </ul> </li> <li>Accessory box II: <ul style="list-style-type: none"> <li>Lens cap strap</li> <li>Lens cleaning cloth</li> <li>Neck strap</li> </ul> </li> <li>Battery (2 ea)</li> <li>Battery charger</li> <li>Hard transport case</li> <li>Infrared camera with lens</li> <li>Lens cap, front</li> <li>Lens cap, front and rear (only for extra lenses)</li> </ul> |
| Packaging, weight    | 5.8 kg (12.8 lb.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Packaging, size      | 500 × 190 × 370 mm (19.7 × 7.5 × 14.6 in.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| EAN-13               | <ul style="list-style-type: none"> <li>Sweden: 7332558014691</li> <li>Estonia: 4743254003842</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| UPC-12               | 845188016791                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Country of origin    | Sweden and/or Estonia                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

#### Supplies and accessories:

- T198495; Pouch
- T197771ACC; Bluetooth Headset
- T130337ACC; Calibration target
- T199588; Lens 14° + case
- T199589; Lens 24° + case
- T199590; Lens 42° + case
- T911630ACC; Power supply for camera, 15 W/3 A
- T911631ACC; USB 2.0 A to USB Type-C cable, 0.9 m
- T911633ACC; Power supply for battery charger
- T911705ACC; USB Type-C to USB Type-C cable (USB 2.0 standard), 1.0 m
- T911706ACC; Car adapter 12 V
- T911845ACC; USB Type-C to HDMI and PD adapter
- T911846ACC; USB 2.0 A to USB Type-C with Power supply
- T199300ACC; Battery
- T199610; Battery charger
- T199601; Hand strap and neck strap
- T199347ACC; Hard transport case
- T199616; Option, High temperature, +300 to +1200°C
- T199609; Option, Macro mode 71/103 µm for 24°
- T300030; Option, No radio
- T198583; FLIR Tools+ (download card incl. license key)
- T198696; FLIR ResearchIR Max 4 (hardware sec. dev.)
- T199013; FLIR ResearchIR Max 4 (printed license key)
- T199043; FLIR ResearchIR Max 4 Upgrade (printed license key)

- 
- INST-EW-0145; Extended Warranty 1 Year for T530
  - INST-EWGM-0155; Premium Service Package for A3xx, T4xx mkII, T530
  - INST-GM-0140; General Maintenance Package for T530

## 27.5 FLIR T530 24°

P/N: 79302-0101

Rev.: 53828

| Imaging and optical data                 |                                                                                                                                   |
|------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Infrared resolution                      | 320 × 240 pixels                                                                                                                  |
| UltraMax (super-resolution) <sup>7</sup> | In FLIR Tools                                                                                                                     |
| NETD                                     | <40 mK @ +30°C (+86°F)                                                                                                            |
| Field of view                            | 24° × 18°                                                                                                                         |
| Minimum focus distance                   | <ul style="list-style-type: none"> <li>0.15 m (0.49 ft.)</li> <li>Macro mode 103 µm as option</li> </ul>                          |
| Minimum focus distance with MSX          | 0.5 m (1.64 ft.)                                                                                                                  |
| Focal length                             | 17 mm (0.67 in.)                                                                                                                  |
| Spatial resolution (IFOV)                | 1.31 mrad/pixel                                                                                                                   |
| Available extra lenses                   | <ul style="list-style-type: none"> <li>42°</li> <li>14°</li> </ul>                                                                |
| Lens identification                      | Automatic                                                                                                                         |
| f number                                 | 1.3                                                                                                                               |
| Image frequency                          | 30 Hz                                                                                                                             |
| Focus                                    | <ul style="list-style-type: none"> <li>Continuous LDM</li> <li>One-shot LDM</li> <li>One-shot contrast</li> <li>Manual</li> </ul> |
| Field of view match                      | Yes                                                                                                                               |
| Digital zoom                             | 1–4× continuous                                                                                                                   |
| Detector data                            |                                                                                                                                   |
| Focal plane array/spectral range         | Uncooled microbolometer/7.5–14 µm                                                                                                 |
| Detector pitch                           | 17 µm                                                                                                                             |
| Image presentation                       |                                                                                                                                   |
| Resolution                               | 640 × 480 pixels (VGA)                                                                                                            |
| Surface brightness (cd/m²)               | 400                                                                                                                               |
| Screen size                              | 4 in.                                                                                                                             |
| Viewing angle                            | 80°                                                                                                                               |
| Color depth (bits)                       | 24                                                                                                                                |
| Aspect ratio                             | 4:3                                                                                                                               |
| Auto-rotation                            | Yes                                                                                                                               |
| Touchscreen                              | Optically bonded PCAP                                                                                                             |
| Display technology                       | IPS                                                                                                                               |
| Cover glass material                     | Dragontrail®                                                                                                                      |

7. Not supported when using macro.



|                                            |                                                                                                                                                                                |                                                                |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|
| Image presentation                         |                                                                                                                                                                                |                                                                |
| Programmable buttons                       | 2                                                                                                                                                                              |                                                                |
| Viewfinder                                 | No                                                                                                                                                                             |                                                                |
| Image adjustment                           | <ul style="list-style-type: none"><li>• Automatic</li><li>• Automatic maximum</li><li>• Automatic minimum</li><li>• Manual</li></ul>                                           |                                                                |
| Image presentation modes                   |                                                                                                                                                                                |                                                                |
| Infrared image                             | Yes                                                                                                                                                                            |                                                                |
| Visual image                               | Yes                                                                                                                                                                            |                                                                |
| MSX                                        | Yes                                                                                                                                                                            |                                                                |
| Picture in picture                         | Resizable and movable                                                                                                                                                          |                                                                |
| Gallery                                    | Yes                                                                                                                                                                            |                                                                |
| Measurement                                |                                                                                                                                                                                |                                                                |
| Camera temperature range                   | Object temperature range                                                                                                                                                       | Accuracy — for ambient temperature +15 to +35°C (+59 to +95°F) |
| −20 to +120°C (−4 to +248°F)               | −20 to +100°C (−4 to +212°F)                                                                                                                                                   | ±2°C (±3.6°F)                                                  |
|                                            | +100 to +120°C (+212 to +248°F)                                                                                                                                                | ±2%                                                            |
| 0 to +650°C (+32 to +1202°F)               | 0 to +100°C (+32 to +212°F)                                                                                                                                                    | ±2°C (±3.6°F)                                                  |
|                                            | +100 to + 650°C (+212 to +1202°F)                                                                                                                                              | ±2%                                                            |
| Optional +300 to +1200°C (+572 to +2192°F) | +300 to +1200°C (+572 to +2192°F)                                                                                                                                              | ±2%                                                            |
| Measurement analysis                       |                                                                                                                                                                                |                                                                |
| Spotmeter                                  | 3 in live mode                                                                                                                                                                 |                                                                |
| Area                                       | 3 in live mode                                                                                                                                                                 |                                                                |
| Automatic hot/cold detection               | Automatic maximum/minimum markers within area                                                                                                                                  |                                                                |
| Measurement presets                        | <ul style="list-style-type: none"><li>• No measurements</li><li>• Center spot</li><li>• Hot spot</li><li>• Cold spot</li><li>• User preset 1</li><li>• User preset 2</li></ul> |                                                                |
| Difference temperature                     | Yes                                                                                                                                                                            |                                                                |
| Reference temperature                      | Yes                                                                                                                                                                            |                                                                |
| Emissivity correction                      | Yes, variable from 0.01 to 1.0 or selected from materials list                                                                                                                 |                                                                |
| Measurement corrections                    | Yes                                                                                                                                                                            |                                                                |
| External optics/windows correction         | Yes                                                                                                                                                                            |                                                                |
| Screening                                  | 0.5°C (0.9°F) accuracy at 37°C (98.6°F) with reference                                                                                                                         |                                                                |

|                                          |                                                                                                                                                                           |
|------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Alarm</b>                             |                                                                                                                                                                           |
| Color alarm (isotherm)                   | <ul style="list-style-type: none"> <li>• Above</li> <li>• Below</li> <li>• Interval</li> <li>• Condensation (moisture/humidity/dewpoint)</li> <li>• Insulation</li> </ul> |
| Measurement function alarm               | Audible/visual alarms (above/below) on any selected measurement function                                                                                                  |
| <b>Set-up</b>                            |                                                                                                                                                                           |
| Color palettes                           | <ul style="list-style-type: none"> <li>• Iron</li> <li>• Gray</li> <li>• Rainbow</li> <li>• Arctic</li> <li>• Lava</li> <li>• Rainbow HC</li> </ul>                       |
| Setup commands                           | Local adaptation of units, language, date, and time formats                                                                                                               |
| Languages                                | 21                                                                                                                                                                        |
| <b>Service functions</b>                 |                                                                                                                                                                           |
| Camera software update                   | Use PC software FLIR Tools                                                                                                                                                |
| <b>Storage of images</b>                 |                                                                                                                                                                           |
| Storage media                            | Removable memory: SD card                                                                                                                                                 |
| Time lapse (Periodic image storage)      | 10 seconds to 24 hours (infrared)                                                                                                                                         |
| Remote control operation                 | <ul style="list-style-type: none"> <li>• Using FLIR Tools (using USB cable)</li> <li>• FLIR Tools Mobile (over Wi-Fi)</li> </ul>                                          |
| Image file format                        | Standard JPEG, measurement data included. Infrared-only mode                                                                                                              |
| <b>Image annotations</b>                 |                                                                                                                                                                           |
| Voice                                    | 60 seconds with built-in microphone and speaker (and via Bluetooth) on still images and video                                                                             |
| Text                                     | Text from predefined list or soft keyboard on touchscreen                                                                                                                 |
| Visual image annotation                  | Yes                                                                                                                                                                       |
| Image sketch                             | Yes: on infrared only                                                                                                                                                     |
| Sketch                                   | From touchscreen                                                                                                                                                          |
| METERLiNK                                | Wireless connection (Bluetooth) to:<br>FLIR meters with METERLiNK                                                                                                         |
| Area measurement information             | Yes                                                                                                                                                                       |
| GPS                                      | Location data automatically added to every still image and first frame in video from built-in GPS                                                                         |
| <b>Video recording in camera</b>         |                                                                                                                                                                           |
| Radiometric infrared-video recording     | RTRR (.csq)                                                                                                                                                               |
| Non-radiometric infrared-video recording | H.264 to memory card                                                                                                                                                      |
| Visual video recording                   | H.264 to memory card                                                                                                                                                      |

|                                                                                   |                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Video streaming</b>                                                            |                                                                                                                                                                                                                  |
| Radiometric infrared-video streaming (compressed)                                 | Over UVC                                                                                                                                                                                                         |
| Non-radiometric video streaming (compressed: IR, MSX, visual, Picture in Picture) | <ul style="list-style-type: none"> <li>• H.264 (AVC) over RTSP (Wi-Fi)</li> <li>• MPEG4 over RTSP (Wi-Fi)</li> <li>• MJPEG over UVC and RTSP (Wi-Fi)</li> </ul>                                                  |
| Visual video streaming                                                            | Yes                                                                                                                                                                                                              |
| <b>Digital camera</b>                                                             |                                                                                                                                                                                                                  |
| Resolution                                                                        | 5 MP with LED light                                                                                                                                                                                              |
| Focus                                                                             | Fixed                                                                                                                                                                                                            |
| Field of view                                                                     | 53° × 41°                                                                                                                                                                                                        |
| Video lamp                                                                        | Built-in LED light                                                                                                                                                                                               |
| <b>Laser pointer</b>                                                              |                                                                                                                                                                                                                  |
| Laser alignment                                                                   | Position is automatically displayed on the infrared image                                                                                                                                                        |
| Laser distance meter                                                              | Activated by dedicated button                                                                                                                                                                                    |
| Laser                                                                             | Class 2, 0.05–40 m (0.16–131 ft.) ±1% of measured distance                                                                                                                                                       |
| <b>Data communication interfaces</b>                                              |                                                                                                                                                                                                                  |
| Interfaces                                                                        | USB 2.0, Bluetooth, Wi-Fi, DisplayPort                                                                                                                                                                           |
| METERLiNK/Bluetooth                                                               | Communication with headset and external sensors                                                                                                                                                                  |
| Wi-Fi                                                                             | Peer to peer (ad hoc) or infrastructure (network)                                                                                                                                                                |
| Audio                                                                             | Microphone and speaker for voice annotation of images                                                                                                                                                            |
| USB                                                                               | USB Type-C: data transfer/video/power                                                                                                                                                                            |
| USB standard                                                                      | USB 2.0 High Speed                                                                                                                                                                                               |
| Video out                                                                         | DisplayPort                                                                                                                                                                                                      |
| Video connector type                                                              | DisplayPort over USB Type-C                                                                                                                                                                                      |
| <b>Radio</b>                                                                      |                                                                                                                                                                                                                  |
| Operating frequency                                                               | Bluetooth + EDR/LE: 2402–2480 MHz<br>WLAN 2.4 GHz: 2412–2462 MHz<br>WLAN 5 GHz: 5150–5350 MHz (DFS: only slave mode)<br>Note that frequency band 5150–5350 MHz is for indoor use only, see national regulations. |
| RF output (EIRP)                                                                  | Bluetooth + EDR/LE: < 10 dBm<br>WLAN: < 17 dBm                                                                                                                                                                   |
| Antenna                                                                           | Integrated PIFA antenna (gain: maximum 1.4 dBi)                                                                                                                                                                  |
| <b>Power system</b>                                                               |                                                                                                                                                                                                                  |
| Battery type                                                                      | Rechargeable Li-ion battery                                                                                                                                                                                      |
| Battery voltage                                                                   | 3.6 V                                                                                                                                                                                                            |
| Battery operating time                                                            | > 4 hours at 25°C (68°F) with typical use                                                                                                                                                                        |

|                                       |                                                                                                                                                                                                                                    |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power system</b>                   |                                                                                                                                                                                                                                    |
| Charging system                       | In camera (AC adapter or 12 V from a vehicle) or two-bay charger                                                                                                                                                                   |
| Charging time (using two-bay charger) | 3.5 h to 90% capacity, on-screen indicator                                                                                                                                                                                         |
| Charging temperature                  | 0°C to +45°C (+32°F to +113°F), except for the Korean market: +10°C to +45°C (+50°F to +113°F)                                                                                                                                     |
| External power operation              | AC adapter 90–260 V AC (50/60 Hz) or 12 V from a vehicle (cable with standard plug, optional)                                                                                                                                      |
| Power management                      | Automatic shut-down and sleep mode                                                                                                                                                                                                 |
| <b>Environmental data</b>             |                                                                                                                                                                                                                                    |
| Operating temperature range           | –15 to +50°C (5–122°F)                                                                                                                                                                                                             |
| Storage temperature range             | –40 to +70°C (–40 to 158°F)                                                                                                                                                                                                        |
| Humidity (operating and storage)      | IEC 60068-2-30/24 hours, 95% relative humidity, 25–40°C (77–104°F)/2 cycles                                                                                                                                                        |
| EMC                                   | <ul style="list-style-type: none"> <li>• ETSI EN 301 489-1 (radio)</li> <li>• ETSI EN 301 489-17</li> <li>• EN 61000-6-2 (immunity)</li> <li>• EN 61000-6-3 (emission)</li> <li>• FCC 47 CFR Part 15 Class B (emission)</li> </ul> |
| Radio spectrum                        | <ul style="list-style-type: none"> <li>• ETSI EN 300 228</li> <li>• FCC Part 15.249</li> <li>• RSS-247 Issue 2</li> </ul>                                                                                                          |
| Encapsulation                         | IP 54 (IEC 60529)                                                                                                                                                                                                                  |
| Shock                                 | 25g (IEC 60068-2-27)                                                                                                                                                                                                               |
| Vibration                             | 2g (IEC 60068-2-6)                                                                                                                                                                                                                 |
| Safety                                | EN/UL/CSA/PSE 60950-1                                                                                                                                                                                                              |
| <b>Physical data</b>                  |                                                                                                                                                                                                                                    |
| Weight (including battery)            | 1.3 kg (2.9 lb.)                                                                                                                                                                                                                   |
| Size (L × W × H)                      | <ul style="list-style-type: none"> <li>• Lens vertical: 140 × 201.3 × 84.1 mm (5.5 × 7.9 × 3.3 in.)</li> <li>• Lens horizontal: 140 × 201.3 × 167.3 mm (5.5 × 7.9 × 6.6 in.)</li> </ul>                                            |
| Battery weight                        | 195 g (6.89 oz.)                                                                                                                                                                                                                   |
| Battery size (L × W × H)              | 59 × 66 × 94 mm (2.3 × 2.6 × 3.7 in.)                                                                                                                                                                                              |
| Tripod mounting                       | UNC ¼"-20                                                                                                                                                                                                                          |
| Housing material                      | PCABS with TPE, magnesium                                                                                                                                                                                                          |
| Color                                 | Black                                                                                                                                                                                                                              |
| <b>Warranty and service</b>           |                                                                                                                                                                                                                                    |
| Warranty                              | <a href="http://www.flir.com/warranty/">http://www.flir.com/warranty/</a>                                                                                                                                                          |

| Shipping information |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Packaging, type      | Cardboard box                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Packaging, contents  | <ul style="list-style-type: none"> <li>Accessory box I: <ul style="list-style-type: none"> <li>Power supply for battery charger</li> <li>Power supply, 15 W/3 A</li> <li>Printed documentation</li> <li>SD card (8 GB)</li> <li>USB 2.0 A to USB Type-C cable</li> <li>USB Type-C to HDMI and PD adapter</li> <li>USB Type-C to USB Type-C cable (USB 2.0 standard)</li> </ul> </li> <li>Accessory box II: <ul style="list-style-type: none"> <li>Lens cap strap</li> <li>Lens cleaning cloth</li> <li>Neck strap</li> </ul> </li> <li>Battery (2 ea)</li> <li>Battery charger</li> <li>Hard transport case</li> <li>Infrared camera with lens</li> <li>Lens cap, front</li> <li>Lens cap, front and rear (only for extra lenses)</li> </ul> |
| Packaging, weight    | 5.8 kg (12.8 lb.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Packaging, size      | 500 × 190 × 370 mm (19.7 × 7.5 × 14.6 in.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| EAN-13               | <ul style="list-style-type: none"> <li>Sweden: 7332558012925</li> <li>Estonia: 4743254003200</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| UPC-12               | 845188014612                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Country of origin    | Sweden and/or Estonia                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

#### Supplies and accessories:

- T198495; Pouch
- T197771ACC; Bluetooth Headset
- T130337ACC; Calibration target
- T199588; Lens 14° + case
- T199589; Lens 24° + case
- T199590; Lens 42° + case
- T911630ACC; Power supply for camera, 15 W/3 A
- T911631ACC; USB 2.0 A to USB Type-C cable, 0.9 m
- T911633ACC; Power supply for battery charger
- T911705ACC; USB Type-C to USB Type-C cable (USB 2.0 standard), 1.0 m
- T911706ACC; Car adapter 12 V
- T911845ACC; USB Type-C to HDMI and PD adapter
- T911846ACC; USB 2.0 A to USB Type-C with Power supply
- T199300ACC; Battery
- T199610; Battery charger
- T199601; Hand strap and neck strap
- T199347ACC; Hard transport case
- T199616; Option, High temperature, +300 to +1200°C
- T199609; Option, Macro mode 71/103 µm for 24°
- T300030; Option, No radio
- T198583; FLIR Tools+ (download card incl. license key)
- T198696; FLIR ResearchIR Max 4 (hardware sec. dev.)
- T199013; FLIR ResearchIR Max 4 (printed license key)
- T199043; FLIR ResearchIR Max 4 Upgrade (printed license key)

- 
- INST-EW-0145; Extended Warranty 1 Year for T530
  - INST-EWGM-0155; Premium Service Package for A3xx, T4xx mkII, T530
  - INST-GM-0140; General Maintenance Package for T530

## 27.6 FLIR T530 42°

P/N: 79303-0101

Rev.: 53832

| Imaging and optical data                 |                                                                                                                                           |
|------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Infrared resolution                      | 320 × 240 pixels                                                                                                                          |
| UltraMax (super-resolution) <sup>8</sup> | In FLIR Tools                                                                                                                             |
| NETD                                     | <30 mK @ +30°C (+86°F)                                                                                                                    |
| Field of view                            | 42° × 32°                                                                                                                                 |
| Minimum focus distance                   | 0.15 m (0.49 ft.)                                                                                                                         |
| Minimum focus distance with MSX          | 0.65 m (2.13 ft.)                                                                                                                         |
| Focal length                             | 10 mm (0.39 in.)                                                                                                                          |
| Spatial resolution (IFOV)                | 2.41 mrad/pixel                                                                                                                           |
| Available extra lenses                   | <ul style="list-style-type: none"> <li>• 24°</li> <li>• 14°</li> </ul>                                                                    |
| Lens identification                      | Automatic                                                                                                                                 |
| f number                                 | 1.1                                                                                                                                       |
| Image frequency                          | 30 Hz                                                                                                                                     |
| Focus                                    | <ul style="list-style-type: none"> <li>• Continuous LDM</li> <li>• One-shot LDM</li> <li>• One-shot contrast</li> <li>• Manual</li> </ul> |
| Field of view match                      | Yes                                                                                                                                       |
| Digital zoom                             | 1–4× continuous                                                                                                                           |
| Detector data                            |                                                                                                                                           |
| Focal plane array/spectral range         | Uncooled microbolometer/7.5–14 μm                                                                                                         |
| Detector pitch                           | 17 μm                                                                                                                                     |
| Image presentation                       |                                                                                                                                           |
| Resolution                               | 640 × 480 pixels (VGA)                                                                                                                    |
| Surface brightness (cd/m²)               | 400                                                                                                                                       |
| Screen size                              | 4 in.                                                                                                                                     |
| Viewing angle                            | 80°                                                                                                                                       |
| Color depth (bits)                       | 24                                                                                                                                        |
| Aspect ratio                             | 4:3                                                                                                                                       |
| Auto-rotation                            | Yes                                                                                                                                       |
| Touchscreen                              | Optically bonded PCAP                                                                                                                     |
| Display technology                       | IPS                                                                                                                                       |
| Cover glass material                     | Dragontrail®                                                                                                                              |
| Programmable buttons                     | 2                                                                                                                                         |

8. Not supported when using macro.

|                                            |                                                                                                                                                                                |                                                                 |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------|
| Image presentation                         |                                                                                                                                                                                |                                                                 |
| Viewfinder                                 | No                                                                                                                                                                             |                                                                 |
| Image adjustment                           | <ul style="list-style-type: none"><li>• Automatic</li><li>• Automatic maximum</li><li>• Automatic minimum</li><li>• Manual</li></ul>                                           |                                                                 |
|                                            |                                                                                                                                                                                |                                                                 |
| Image presentation modes                   |                                                                                                                                                                                |                                                                 |
| Infrared image                             | Yes                                                                                                                                                                            |                                                                 |
| Visual image                               | Yes                                                                                                                                                                            |                                                                 |
| MSX                                        | Yes                                                                                                                                                                            |                                                                 |
| Picture in picture                         | Resizable and movable                                                                                                                                                          |                                                                 |
| Gallery                                    | Yes                                                                                                                                                                            |                                                                 |
|                                            |                                                                                                                                                                                |                                                                 |
| Measurement                                |                                                                                                                                                                                |                                                                 |
| Camera temperature range                   | Object temperature range                                                                                                                                                       | Accuracy — for ambient temperature +15 to +35°C (+59 to +95° F) |
| -20 to +120°C (-4 to +248°F)               | -20 to +100°C (-4 to +212°F)                                                                                                                                                   | ±2°C (±3.6°F)                                                   |
|                                            | +100 to +120°C (+212 to +248° F)                                                                                                                                               | ±2%                                                             |
| 0 to +650°C (+32 to +1202°F)               | 0 to +100°C (+32 to +212°F)                                                                                                                                                    | ±2°C (±3.6°F)                                                   |
|                                            | +100 to + 650°C (+212 to +1202°F)                                                                                                                                              | ±2%                                                             |
| Optional +300 to +1200°C (+572 to +2192°F) | +300 to +1200°C (+572 to +2192°F)                                                                                                                                              | ±2%                                                             |
|                                            |                                                                                                                                                                                |                                                                 |
| Measurement analysis                       |                                                                                                                                                                                |                                                                 |
| Spotmeter                                  | 3 in live mode                                                                                                                                                                 |                                                                 |
| Area                                       | 3 in live mode                                                                                                                                                                 |                                                                 |
| Automatic hot/cold detection               | Automatic maximum/minimum markers within area                                                                                                                                  |                                                                 |
| Measurement presets                        | <ul style="list-style-type: none"><li>• No measurements</li><li>• Center spot</li><li>• Hot spot</li><li>• Cold spot</li><li>• User preset 1</li><li>• User preset 2</li></ul> |                                                                 |
| Difference temperature                     | Yes                                                                                                                                                                            |                                                                 |
| Reference temperature                      | Yes                                                                                                                                                                            |                                                                 |
| Emissivity correction                      | Yes, variable from 0.01 to 1.0 or selected from materials list                                                                                                                 |                                                                 |
| Measurement corrections                    | Yes                                                                                                                                                                            |                                                                 |
| External optics/windows correction         | Yes                                                                                                                                                                            |                                                                 |
| Screening                                  | 0.5°C (0.9°F) accuracy at 37°C (98.6°F) with reference                                                                                                                         |                                                                 |



|                                          |                                                                                                                                                                           |
|------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Alarm</b>                             |                                                                                                                                                                           |
| Color alarm (isotherm)                   | <ul style="list-style-type: none"> <li>• Above</li> <li>• Below</li> <li>• Interval</li> <li>• Condensation (moisture/humidity/dewpoint)</li> <li>• Insulation</li> </ul> |
| Measurement function alarm               | Audible/visual alarms (above/below) on any selected measurement function                                                                                                  |
| <b>Set-up</b>                            |                                                                                                                                                                           |
| Color palettes                           | <ul style="list-style-type: none"> <li>• Iron</li> <li>• Gray</li> <li>• Rainbow</li> <li>• Arctic</li> <li>• Lava</li> <li>• Rainbow HC</li> </ul>                       |
| Setup commands                           | Local adaptation of units, language, date, and time formats                                                                                                               |
| Languages                                | 21                                                                                                                                                                        |
| <b>Service functions</b>                 |                                                                                                                                                                           |
| Camera software update                   | Use PC software FLIR Tools                                                                                                                                                |
| <b>Storage of images</b>                 |                                                                                                                                                                           |
| Storage media                            | Removable memory: SD card                                                                                                                                                 |
| Time lapse (Periodic image storage)      | 10 seconds to 24 hours (infrared)                                                                                                                                         |
| Remote control operation                 | <ul style="list-style-type: none"> <li>• Using FLIR Tools (using USB cable)</li> <li>• FLIR Tools Mobile (over Wi-Fi)</li> </ul>                                          |
| Image file format                        | Standard JPEG, measurement data included. Infrared-only mode                                                                                                              |
| <b>Image annotations</b>                 |                                                                                                                                                                           |
| Voice                                    | 60 seconds with built-in microphone and speaker (and via Bluetooth) on still images and video                                                                             |
| Text                                     | Text from predefined list or soft keyboard on touchscreen                                                                                                                 |
| Visual image annotation                  | Yes                                                                                                                                                                       |
| Image sketch                             | Yes: on infrared only                                                                                                                                                     |
| Sketch                                   | From touchscreen                                                                                                                                                          |
| METERLiNK                                | Wireless connection (Bluetooth) to:<br>FLIR meters with METERLiNK                                                                                                         |
| Area measurement information             | Yes                                                                                                                                                                       |
| GPS                                      | Location data automatically added to every still image and first frame in video from built-in GPS                                                                         |
| <b>Video recording in camera</b>         |                                                                                                                                                                           |
| Radiometric infrared-video recording     | RTRR (.csq)                                                                                                                                                               |
| Non-radiometric infrared-video recording | H.264 to memory card                                                                                                                                                      |
| Visual video recording                   | H.264 to memory card                                                                                                                                                      |

|                                                                                   |                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Video streaming</b>                                                            |                                                                                                                                                                                                                  |
| Radiometric infrared-video streaming (compressed)                                 | Over UVC                                                                                                                                                                                                         |
| Non-radiometric video streaming (compressed: IR, MSX, visual, Picture in Picture) | <ul style="list-style-type: none"> <li>• H.264 (AVC) over RTSP (Wi-Fi)</li> <li>• MPEG4 over RTSP (Wi-Fi)</li> <li>• MJPEG over UVC and RTSP (Wi-Fi)</li> </ul>                                                  |
| Visual video streaming                                                            | Yes                                                                                                                                                                                                              |
| <b>Digital camera</b>                                                             |                                                                                                                                                                                                                  |
| Resolution                                                                        | 5 MP with LED light                                                                                                                                                                                              |
| Focus                                                                             | Fixed                                                                                                                                                                                                            |
| Field of view                                                                     | 53° × 41°                                                                                                                                                                                                        |
| Video lamp                                                                        | Built-in LED light                                                                                                                                                                                               |
| <b>Laser pointer</b>                                                              |                                                                                                                                                                                                                  |
| Laser alignment                                                                   | Position is automatically displayed on the infrared image                                                                                                                                                        |
| Laser distance meter                                                              | Activated by dedicated button                                                                                                                                                                                    |
| Laser                                                                             | Class 2, 0.05–40 m (0.16–131 ft.) ±1% of measured distance                                                                                                                                                       |
| <b>Data communication interfaces</b>                                              |                                                                                                                                                                                                                  |
| Interfaces                                                                        | USB 2.0, Bluetooth, Wi-Fi, DisplayPort                                                                                                                                                                           |
| METERLiNK/Bluetooth                                                               | Communication with headset and external sensors                                                                                                                                                                  |
| Wi-Fi                                                                             | Peer to peer (ad hoc) or infrastructure (network)                                                                                                                                                                |
| Audio                                                                             | Microphone and speaker for voice annotation of images                                                                                                                                                            |
| USB                                                                               | USB Type-C: data transfer/video/power                                                                                                                                                                            |
| USB standard                                                                      | USB 2.0 High Speed                                                                                                                                                                                               |
| Video out                                                                         | DisplayPort                                                                                                                                                                                                      |
| Video connector type                                                              | DisplayPort over USB Type-C                                                                                                                                                                                      |
| <b>Radio</b>                                                                      |                                                                                                                                                                                                                  |
| Operating frequency                                                               | Bluetooth + EDR/LE: 2402–2480 MHz<br>WLAN 2.4 GHz: 2412–2462 MHz<br>WLAN 5 GHz: 5150–5350 MHz (DFS: only slave mode)<br>Note that frequency band 5150–5350 MHz is for indoor use only, see national regulations. |
| RF output (EIRP)                                                                  | Bluetooth + EDR/LE: < 10 dBm<br>WLAN: < 17 dBm                                                                                                                                                                   |
| Antenna                                                                           | Integrated PIFA antenna (gain: maximum 1.4 dBi)                                                                                                                                                                  |
| <b>Power system</b>                                                               |                                                                                                                                                                                                                  |
| Battery type                                                                      | Rechargeable Li-ion battery                                                                                                                                                                                      |
| Battery voltage                                                                   | 3.6 V                                                                                                                                                                                                            |
| Battery operating time                                                            | > 4 hours at 25°C (68°F) with typical use                                                                                                                                                                        |

|                                       |                                                                                                                                                                                                                                    |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power system</b>                   |                                                                                                                                                                                                                                    |
| Charging system                       | In camera (AC adapter or 12 V from a vehicle) or two-bay charger                                                                                                                                                                   |
| Charging time (using two-bay charger) | 3.5 h to 90% capacity, on-screen indicator                                                                                                                                                                                         |
| Charging temperature                  | 0°C to +45°C (+32°F to +113°F), except for the Korean market: +10°C to +45°C (+50°F to +113°F)                                                                                                                                     |
| External power operation              | AC adapter 90–260 V AC (50/60 Hz) or 12 V from a vehicle (cable with standard plug, optional)                                                                                                                                      |
| Power management                      | Automatic shut-down and sleep mode                                                                                                                                                                                                 |
| <b>Environmental data</b>             |                                                                                                                                                                                                                                    |
| Operating temperature range           | –15 to +50°C (5–122°F)                                                                                                                                                                                                             |
| Storage temperature range             | –40 to +70°C (–40 to 158°F)                                                                                                                                                                                                        |
| Humidity (operating and storage)      | IEC 60068-2-30/24 hours, 95% relative humidity, 25–40°C (77–104°F)/2 cycles                                                                                                                                                        |
| EMC                                   | <ul style="list-style-type: none"> <li>• ETSI EN 301 489-1 (radio)</li> <li>• ETSI EN 301 489-17</li> <li>• EN 61000-6-2 (immunity)</li> <li>• EN 61000-6-3 (emission)</li> <li>• FCC 47 CFR Part 15 Class B (emission)</li> </ul> |
| Radio spectrum                        | <ul style="list-style-type: none"> <li>• ETSI EN 300 228</li> <li>• FCC Part 15.249</li> <li>• RSS-247 Issue 2</li> </ul>                                                                                                          |
| Encapsulation                         | IP 54 (IEC 60529)                                                                                                                                                                                                                  |
| Shock                                 | 25g (IEC 60068-2-27)                                                                                                                                                                                                               |
| Vibration                             | 2g (IEC 60068-2-6)                                                                                                                                                                                                                 |
| Safety                                | EN/UL/CSA/PSE 60950-1                                                                                                                                                                                                              |
| <b>Physical data</b>                  |                                                                                                                                                                                                                                    |
| Weight (including battery)            | 1.3 kg (2.9 lb.)                                                                                                                                                                                                                   |
| Size (L × W × H)                      | <ul style="list-style-type: none"> <li>• Lens vertical: 140 × 201.3 × 84.1 mm (5.5 × 7.9 × 3.3 in.)</li> <li>• Lens horizontal: 140 × 201.3 × 167.3 mm (5.5 × 7.9 × 6.6 in.)</li> </ul>                                            |
| Battery weight                        | 195 g (6.89 oz.)                                                                                                                                                                                                                   |
| Battery size (L × W × H)              | 59 × 66 × 94 mm (2.3 × 2.6 × 3.7 in.)                                                                                                                                                                                              |
| Tripod mounting                       | UNC ¼"-20                                                                                                                                                                                                                          |
| Housing material                      | PCABS with TPE, magnesium                                                                                                                                                                                                          |
| Color                                 | Black                                                                                                                                                                                                                              |
| <b>Warranty and service</b>           |                                                                                                                                                                                                                                    |
| Warranty                              | <a href="http://www.flir.com/warranty/">http://www.flir.com/warranty/</a>                                                                                                                                                          |

| Shipping information |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Packaging, type      | Cardboard box                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Packaging, contents  | <ul style="list-style-type: none"> <li>Accessory box I: <ul style="list-style-type: none"> <li>Power supply for battery charger</li> <li>Power supply, 15 W/3 A</li> <li>Printed documentation</li> <li>SD card (8 GB)</li> <li>USB 2.0 A to USB Type-C cable</li> <li>USB Type-C to HDMI and PD adapter</li> <li>USB Type-C to USB Type-C cable (USB 2.0 standard)</li> </ul> </li> <li>Accessory box II: <ul style="list-style-type: none"> <li>Lens cap strap</li> <li>Lens cleaning cloth</li> <li>Neck strap</li> </ul> </li> <li>Battery (2 ea)</li> <li>Battery charger</li> <li>Hard transport case</li> <li>Infrared camera with lens</li> <li>Lens cap, front</li> <li>Lens cap, front and rear (only for extra lenses)</li> </ul> |
| Packaging, weight    | 5.8 kg (12.8 lb.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Packaging, size      | 500 × 190 × 370 mm (19.7 × 7.5 × 14.6 in.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| EAN-13               | <ul style="list-style-type: none"> <li>Sweden: 7332558012932</li> <li>Estonia: 4743254003217</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| UPC-12               | 845188014629                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Country of origin    | Sweden and/or Estonia                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

#### Supplies and accessories:

- T198495; Pouch
- T197771ACC; Bluetooth Headset
- T130337ACC; Calibration target
- T199588; Lens 14° + case
- T199589; Lens 24° + case
- T199590; Lens 42° + case
- T911630ACC; Power supply for camera, 15 W/3 A
- T911631ACC; USB 2.0 A to USB Type-C cable, 0.9 m
- T911633ACC; Power supply for battery charger
- T911705ACC; USB Type-C to USB Type-C cable (USB 2.0 standard), 1.0 m
- T911706ACC; Car adapter 12 V
- T911845ACC; USB Type-C to HDMI and PD adapter
- T911846ACC; USB 2.0 A to USB Type-C with Power supply
- T199300ACC; Battery
- T199610; Battery charger
- T199601; Hand strap and neck strap
- T199347ACC; Hard transport case
- T199616; Option, High temperature, +300 to +1200°C
- T199609; Option, Macro mode 71/103 µm for 24°
- T300030; Option, No radio
- T198583; FLIR Tools+ (download card incl. license key)
- T198696; FLIR ResearchIR Max 4 (hardware sec. dev.)
- T199013; FLIR ResearchIR Max 4 (printed license key)
- T199043; FLIR ResearchIR Max 4 Upgrade (printed license key)

- 
- INST-EW-0145; Extended Warranty 1 Year for T530
  - INST-EWGM-0155; Premium Service Package for A3xx, T4xx mkII, T530
  - INST-GM-0140; General Maintenance Package for T530

## 27.7 FLIR T530 24° + 14°

P/N: 79304-0101

Rev.: 53829

|                                          |                                                                                                                                                     |
|------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Imaging and optical data</b>          |                                                                                                                                                     |
| Infrared resolution                      | 320 × 240 pixels                                                                                                                                    |
| UltraMax (super-resolution) <sup>9</sup> | In FLIR Tools                                                                                                                                       |
| NETD                                     | <ul style="list-style-type: none"> <li>&lt;40 mK, 24° @ +30°C (+86°F)</li> <li>&lt;50 mK, 14° @ +30°C (+86°F)</li> </ul>                            |
| Field of view                            | <ul style="list-style-type: none"> <li>24° × 18°</li> <li>14° × 10°</li> </ul>                                                                      |
| Minimum focus distance                   | <ul style="list-style-type: none"> <li>0.15 m (0.49 ft.), 24°</li> <li>1.0 m (3.28 ft.), 14°</li> <li>Macro mode 103 µm as option to 24°</li> </ul> |
| Minimum focus distance with MSX          | <ul style="list-style-type: none"> <li>0.5 m (1.64 ft.), 24°</li> <li>1.0 m (3.28 ft.), 14°</li> </ul>                                              |
| Focal length                             | <ul style="list-style-type: none"> <li>17 mm (0.67 in.), 24°</li> <li>29 mm (1.41 in.), 14°</li> </ul>                                              |
| Spatial resolution (IFOV)                | <ul style="list-style-type: none"> <li>1.31 mrad/pixel, 24°</li> <li>0.75 mrad/pixel, 14°</li> </ul>                                                |
| Available extra lenses                   | <ul style="list-style-type: none"> <li>42°</li> </ul>                                                                                               |
| Lens identification                      | Automatic                                                                                                                                           |
| f number                                 | <ul style="list-style-type: none"> <li>1.3, 24°</li> <li>1.5, 14°</li> </ul>                                                                        |
| Image frequency                          | 30 Hz                                                                                                                                               |
| Focus                                    | <ul style="list-style-type: none"> <li>Continuous LDM</li> <li>One-shot LDM</li> <li>One-shot contrast</li> <li>Manual</li> </ul>                   |
| Field of view match                      | Yes                                                                                                                                                 |
| Digital zoom                             | 1–4× continuous                                                                                                                                     |
| <b>Detector data</b>                     |                                                                                                                                                     |
| Focal plane array/spectral range         | Uncooled microbolometer/7.5–14 µm                                                                                                                   |
| Detector pitch                           | 17 µm                                                                                                                                               |
| <b>Image presentation</b>                |                                                                                                                                                     |
| Resolution                               | 640 × 480 pixels (VGA)                                                                                                                              |
| Surface brightness (cd/m²)               | 400                                                                                                                                                 |
| Screen size                              | 4 in.                                                                                                                                               |
| Viewing angle                            | 80°                                                                                                                                                 |
| Color depth (bits)                       | 24                                                                                                                                                  |

9. Not supported when using macro.

|                           |                                                                                                                                           |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Image presentation</b> |                                                                                                                                           |
| Aspect ratio              | 4:3                                                                                                                                       |
| Auto-rotation             | Yes                                                                                                                                       |
| Touchscreen               | Optically bonded PCAP                                                                                                                     |
| Display technology        | IPS                                                                                                                                       |
| Cover glass material      | Dragontrail®                                                                                                                              |
| Programmable buttons      | 2                                                                                                                                         |
| Viewfinder                | No                                                                                                                                        |
| Image adjustment          | <ul style="list-style-type: none"> <li>• Automatic</li> <li>• Automatic maximum</li> <li>• Automatic minimum</li> <li>• Manual</li> </ul> |

|                                 |                       |
|---------------------------------|-----------------------|
| <b>Image presentation modes</b> |                       |
| Infrared image                  | Yes                   |
| Visual image                    | Yes                   |
| MSX                             | Yes                   |
| Picture in picture              | Resizable and movable |
| Gallery                         | Yes                   |

|                                            |                                   |                                                                |
|--------------------------------------------|-----------------------------------|----------------------------------------------------------------|
| <b>Measurement</b>                         |                                   |                                                                |
| Camera temperature range                   | Object temperature range          | Accuracy — for ambient temperature +15 to +35°C (+59 to +95°F) |
| -20 to +120°C (-4 to +248°F)               | -20 to +100°C (-4 to +212°F)      | ±2°C (±3.6°F)                                                  |
|                                            | +100 to +120°C (+212 to +248°F)   | ±2%                                                            |
| 0 to +650°C (+32 to +1202°F)               | 0 to +100°C (+32 to +212°F)       | ±2°C (±3.6°F)                                                  |
|                                            | +100 to +650°C (+212 to +1202°F)  | ±2%                                                            |
| Optional +300 to +1200°C (+572 to +2192°F) | +300 to +1200°C (+572 to +2192°F) | ±2%                                                            |

|                              |                                                                                                                                                                                       |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Measurement analysis</b>  |                                                                                                                                                                                       |
| Spotmeter                    | 3 in live mode                                                                                                                                                                        |
| Area                         | 3 in live mode                                                                                                                                                                        |
| Automatic hot/cold detection | Automatic maximum/minimum markers within area                                                                                                                                         |
| Measurement presets          | <ul style="list-style-type: none"> <li>• No measurements</li> <li>• Center spot</li> <li>• Hot spot</li> <li>• Cold spot</li> <li>• User preset 1</li> <li>• User preset 2</li> </ul> |
| Difference temperature       | Yes                                                                                                                                                                                   |
| Reference temperature        | Yes                                                                                                                                                                                   |
| Emissivity correction        | Yes, variable from 0.01 to 1.0 or selected from materials list                                                                                                                        |
| Measurement corrections      | Yes                                                                                                                                                                                   |

|                                     |                                                                                                                                                                           |
|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Measurement analysis</b>         |                                                                                                                                                                           |
| External optics/windows correction  | Yes                                                                                                                                                                       |
| Screening                           | 0.5°C (0.9°F) accuracy at 37°C (98.6°F) with reference                                                                                                                    |
| <b>Alarm</b>                        |                                                                                                                                                                           |
| Color alarm (isotherm)              | <ul style="list-style-type: none"> <li>• Above</li> <li>• Below</li> <li>• Interval</li> <li>• Condensation (moisture/humidity/dewpoint)</li> <li>• Insulation</li> </ul> |
| Measurement function alarm          | Audible/visual alarms (above/below) on any selected measurement function                                                                                                  |
| <b>Set-up</b>                       |                                                                                                                                                                           |
| Color palettes                      | <ul style="list-style-type: none"> <li>• Iron</li> <li>• Gray</li> <li>• Rainbow</li> <li>• Arctic</li> <li>• Lava</li> <li>• Rainbow HC</li> </ul>                       |
| Setup commands                      | Local adaptation of units, language, date, and time formats                                                                                                               |
| Languages                           | 21                                                                                                                                                                        |
| <b>Service functions</b>            |                                                                                                                                                                           |
| Camera software update              | Use PC software FLIR Tools                                                                                                                                                |
| <b>Storage of images</b>            |                                                                                                                                                                           |
| Storage media                       | Removable memory: SD card                                                                                                                                                 |
| Time lapse (Periodic image storage) | 10 seconds to 24 hours (infrared)                                                                                                                                         |
| Remote control operation            | <ul style="list-style-type: none"> <li>• Using FLIR Tools (using USB cable)</li> <li>• FLIR Tools Mobile (over Wi-Fi)</li> </ul>                                          |
| Image file format                   | Standard JPEG, measurement data included. Infrared-only mode                                                                                                              |
| <b>Image annotations</b>            |                                                                                                                                                                           |
| Voice                               | 60 seconds with built-in microphone and speaker (and via Bluetooth) on still images and video                                                                             |
| Text                                | Text from predefined list or soft keyboard on touchscreen                                                                                                                 |
| Visual image annotation             | Yes                                                                                                                                                                       |
| Image sketch                        | Yes: on infrared only                                                                                                                                                     |
| Sketch                              | From touchscreen                                                                                                                                                          |
| METERLiNK                           | Wireless connection (Bluetooth) to:<br>FLIR meters with METERLiNK                                                                                                         |
| Area measurement information        | Yes                                                                                                                                                                       |
| GPS                                 | Location data automatically added to every still image and first frame in video from built-in GPS                                                                         |



|                                                                                   |                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Video recording in camera</b>                                                  |                                                                                                                                                                                                                  |
| Radiometric infrared-video recording                                              | RTRR (.csq)                                                                                                                                                                                                      |
| Non-radiometric infrared-video recording                                          | H.264 to memory card                                                                                                                                                                                             |
| Visual video recording                                                            | H.264 to memory card                                                                                                                                                                                             |
| <b>Video streaming</b>                                                            |                                                                                                                                                                                                                  |
| Radiometric infrared-video streaming (compressed)                                 | Over UVC                                                                                                                                                                                                         |
| Non-radiometric video streaming (compressed: IR, MSX, visual, Picture in Picture) | <ul style="list-style-type: none"> <li>• H.264 (AVC) over RTSP (Wi-Fi)</li> <li>• MPEG4 over RTSP (Wi-Fi)</li> <li>• MJPEG over UVC and RTSP (Wi-Fi)</li> </ul>                                                  |
| Visual video streaming                                                            | Yes                                                                                                                                                                                                              |
| <b>Digital camera</b>                                                             |                                                                                                                                                                                                                  |
| Resolution                                                                        | 5 MP with LED light                                                                                                                                                                                              |
| Focus                                                                             | Fixed                                                                                                                                                                                                            |
| Field of view                                                                     | 53° × 41°                                                                                                                                                                                                        |
| Video lamp                                                                        | Built-in LED light                                                                                                                                                                                               |
| <b>Laser pointer</b>                                                              |                                                                                                                                                                                                                  |
| Laser alignment                                                                   | Position is automatically displayed on the infrared image                                                                                                                                                        |
| Laser distance meter                                                              | Activated by dedicated button                                                                                                                                                                                    |
| Laser                                                                             | Class 2, 0.05–40 m (0.16–131 ft.) ±1% of measured distance                                                                                                                                                       |
| <b>Data communication interfaces</b>                                              |                                                                                                                                                                                                                  |
| Interfaces                                                                        | USB 2.0, Bluetooth, Wi-Fi, DisplayPort                                                                                                                                                                           |
| METERLiNK/Bluetooth                                                               | Communication with headset and external sensors                                                                                                                                                                  |
| Wi-Fi                                                                             | Peer to peer (ad hoc) or infrastructure (network)                                                                                                                                                                |
| Audio                                                                             | Microphone and speaker for voice annotation of images                                                                                                                                                            |
| USB                                                                               | USB Type-C: data transfer/video/power                                                                                                                                                                            |
| USB standard                                                                      | USB 2.0 High Speed                                                                                                                                                                                               |
| Video out                                                                         | DisplayPort                                                                                                                                                                                                      |
| Video connector type                                                              | DisplayPort over USB Type-C                                                                                                                                                                                      |
| <b>Radio</b>                                                                      |                                                                                                                                                                                                                  |
| Operating frequency                                                               | Bluetooth + EDR/LE: 2402–2480 MHz<br>WLAN 2.4 GHz: 2412–2462 MHz<br>WLAN 5 GHz: 5150–5350 MHz (DFS: only slave mode)<br>Note that frequency band 5150–5350 MHz is for indoor use only, see national regulations. |
| RF output (EIRP)                                                                  | Bluetooth + EDR/LE: < 10 dBm<br>WLAN: < 17 dBm                                                                                                                                                                   |
| Antenna                                                                           | Integrated PIFA antenna (gain: maximum 1.4 dBi)                                                                                                                                                                  |

|                                       |                                                                                                                                                                                                                                    |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power system</b>                   |                                                                                                                                                                                                                                    |
| Battery type                          | Rechargeable Li-ion battery                                                                                                                                                                                                        |
| Battery voltage                       | 3.6 V                                                                                                                                                                                                                              |
| Battery operating time                | > 4 hours at 25°C (68°F) with typical use                                                                                                                                                                                          |
| Charging system                       | In camera (AC adapter or 12 V from a vehicle) or two-bay charger                                                                                                                                                                   |
| Charging time (using two-bay charger) | 3.5 h to 90% capacity, on-screen indicator                                                                                                                                                                                         |
| Charging temperature                  | 0°C to +45°C (+32°F to +113°F), except for the Korean market: +10°C to +45°C (+50°F to +113°F)                                                                                                                                     |
| External power operation              | AC adapter 90–260 V AC (50/60 Hz) or 12 V from a vehicle (cable with standard plug, optional)                                                                                                                                      |
| Power management                      | Automatic shut-down and sleep mode                                                                                                                                                                                                 |
| <b>Environmental data</b>             |                                                                                                                                                                                                                                    |
| Operating temperature range           | –15 to +50°C (5–122°F)                                                                                                                                                                                                             |
| Storage temperature range             | –40 to +70°C (–40 to 158°F)                                                                                                                                                                                                        |
| Humidity (operating and storage)      | IEC 60068-2-30/24 hours, 95% relative humidity, 25–40°C (77–104°F)/2 cycles                                                                                                                                                        |
| EMC                                   | <ul style="list-style-type: none"> <li>• ETSI EN 301 489-1 (radio)</li> <li>• ETSI EN 301 489-17</li> <li>• EN 61000-6-2 (immunity)</li> <li>• EN 61000-6-3 (emission)</li> <li>• FCC 47 CFR Part 15 Class B (emission)</li> </ul> |
| Radio spectrum                        | <ul style="list-style-type: none"> <li>• ETSI EN 300 228</li> <li>• FCC Part 15.249</li> <li>• RSS-247 Issue 2</li> </ul>                                                                                                          |
| Encapsulation                         | IP 54 (IEC 60529)                                                                                                                                                                                                                  |
| Shock                                 | 25g (IEC 60068-2-27)                                                                                                                                                                                                               |
| Vibration                             | 2g (IEC 60068-2-6)                                                                                                                                                                                                                 |
| Safety                                | EN/UL/CSA/PSE 60950-1                                                                                                                                                                                                              |
| <b>Physical data</b>                  |                                                                                                                                                                                                                                    |
| Weight (including battery)            | 1.3 kg (2.9 lb.)                                                                                                                                                                                                                   |
| Size (L × W × H)                      | <ul style="list-style-type: none"> <li>• Lens vertical: 140 × 201.3 × 84.1 mm (5.5 × 7.9 × 3.3 in.)</li> <li>• Lens horizontal: 140 × 201.3 × 167.3 mm (5.5 × 7.9 × 6.6 in.)</li> </ul>                                            |
| Battery weight                        | 195 g (6.89 oz.)                                                                                                                                                                                                                   |
| Battery size (L × W × H)              | 59 × 66 × 94 mm (2.3 × 2.6 × 3.7 in.)                                                                                                                                                                                              |
| Tripod mounting                       | UNC ¼"-20                                                                                                                                                                                                                          |
| Housing material                      | PCABS with TPE, magnesium                                                                                                                                                                                                          |
| Color                                 | Black                                                                                                                                                                                                                              |
| <b>Warranty and service</b>           |                                                                                                                                                                                                                                    |
| Warranty                              | <a href="http://www.flir.com/warranty/">http://www.flir.com/warranty/</a>                                                                                                                                                          |

| Shipping information |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Packaging, type      | Cardboard box                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Packaging, contents  | <ul style="list-style-type: none"> <li>Accessory box I: <ul style="list-style-type: none"> <li>Power supply for battery charger</li> <li>Power supply, 15 W/3 A</li> <li>Printed documentation</li> <li>SD card (8 GB)</li> <li>USB 2.0 A to USB Type-C cable</li> <li>USB Type-C to HDMI and PD adapter</li> <li>USB Type-C to USB Type-C cable (USB 2.0 standard)</li> </ul> </li> <li>Accessory box II: <ul style="list-style-type: none"> <li>Lens cap strap</li> <li>Lens cleaning cloth</li> <li>Neck strap</li> </ul> </li> <li>Battery (2 ea)</li> <li>Battery charger</li> <li>Extra lens, 14°</li> <li>Hard transport case</li> <li>Infrared camera with lens</li> <li>Lens cap, front</li> <li>Lens cap, front and rear (only for extra lenses)</li> </ul> |
| Packaging, weight    | 6.2 kg (13.7 lb.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Packaging, size      | 500 × 190 × 370 mm (19.7 × 7.5 × 14.6 in.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| EAN-13               | <ul style="list-style-type: none"> <li>Sweden: 7332558012949</li> <li>Estonia: 4743254003224</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| UPC-12               | 845188014636                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Country of origin    | Sweden and/or Estonia                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

#### Supplies and accessories:

- T198495; Pouch
- T197771ACC; Bluetooth Headset
- T130337ACC; Calibration target
- T199588; Lens 14° + case
- T199589; Lens 24° + case
- T199590; Lens 42° + case
- T911630ACC; Power supply for camera, 15 W/3 A
- T911631ACC; USB 2.0 A to USB Type-C cable, 0.9 m
- T911633ACC; Power supply for battery charger
- T911705ACC; USB Type-C to USB Type-C cable (USB 2.0 standard), 1.0 m
- T911706ACC; Car adapter 12 V
- T911845ACC; USB Type-C to HDMI and PD adapter
- T911846ACC; USB 2.0 A to USB Type-C with Power supply
- T199300ACC; Battery
- T199610; Battery charger
- T199601; Hand strap and neck strap
- T199347ACC; Hard transport case
- T199616; Option, High temperature, +300 to +1200°C
- T199609; Option, Macro mode 71/103 µm for 24°
- T300030; Option, No radio
- T198583; FLIR Tools+ (download card incl. license key)
- T198696; FLIR ResearchIR Max 4 (hardware sec. dev.)
- T199013; FLIR ResearchIR Max 4 (printed license key)

- 
- T199043; FLIR ResearchIR Max 4 Upgrade (printed license key)
  - INST-EW-0145; Extended Warranty 1 Year for T530
  - INST-EWGM-0155; Premium Service Package for A3xx, T4xx mkII, T530
  - INST-GM-0140; General Maintenance Package for T530

## 27.8 FLIR T530 24° + 42°

P/N: 79305-0101

Rev.: 53831

|                                           |                                                                                                                                                      |
|-------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Imaging and optical data</b>           |                                                                                                                                                      |
| Infrared resolution                       | 320 × 240 pixels                                                                                                                                     |
| UltraMax (super-resolution) <sup>10</sup> | In FLIR Tools                                                                                                                                        |
| NETD                                      | <ul style="list-style-type: none"> <li>&lt;30 mK, 42° @ +30°C (+86°F)</li> <li>&lt;40 mK, 24° @ +30°C (+86°F)</li> </ul>                             |
| Field of view                             | <ul style="list-style-type: none"> <li>42° × 32°</li> <li>24° × 18°</li> </ul>                                                                       |
| Minimum focus distance                    | <ul style="list-style-type: none"> <li>0.15 m (0.49 ft.), 42°</li> <li>0.15 m (0.49 ft.), 24°</li> <li>Macro mode 103 µm as option to 24°</li> </ul> |
| Minimum focus distance with MSX           | <ul style="list-style-type: none"> <li>0.65 m (2.13 ft.), 42°</li> <li>0.5 m (1.64 ft.), 24°</li> </ul>                                              |
| Focal length                              | <ul style="list-style-type: none"> <li>10 mm (0.39 in.), 42°</li> <li>17 mm (0.67 in.), 24°</li> </ul>                                               |
| Spatial resolution (IFOV)                 | <ul style="list-style-type: none"> <li>2.41 mrad/pixel, 42°</li> <li>1.31 mrad/pixel, 24°</li> </ul>                                                 |
| Available extra lenses                    | <ul style="list-style-type: none"> <li>14°</li> </ul>                                                                                                |
| Lens identification                       | Automatic                                                                                                                                            |
| f number                                  | <ul style="list-style-type: none"> <li>1.1, 42°</li> <li>1.3, 24°</li> </ul>                                                                         |
| Image frequency                           | 30 Hz                                                                                                                                                |
| Focus                                     | <ul style="list-style-type: none"> <li>Continuous LDM</li> <li>One-shot LDM</li> <li>One-shot contrast</li> <li>Manual</li> </ul>                    |
| Field of view match                       | Yes                                                                                                                                                  |
| Digital zoom                              | 1–4× continuous                                                                                                                                      |
| <b>Detector data</b>                      |                                                                                                                                                      |
| Focal plane array/spectral range          | Uncooled microbolometer/7.5–14 µm                                                                                                                    |
| Detector pitch                            | 17 µm                                                                                                                                                |
| <b>Image presentation</b>                 |                                                                                                                                                      |
| Resolution                                | 640 × 480 pixels (VGA)                                                                                                                               |
| Surface brightness (cd/m <sup>2</sup> )   | 400                                                                                                                                                  |
| Screen size                               | 4 in.                                                                                                                                                |
| Viewing angle                             | 80°                                                                                                                                                  |
| Color depth (bits)                        | 24                                                                                                                                                   |

<sup>10</sup>. Not supported when using macro.

|                           |                                                                                                                                           |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Image presentation</b> |                                                                                                                                           |
| Aspect ratio              | 4:3                                                                                                                                       |
| Auto-rotation             | Yes                                                                                                                                       |
| Touchscreen               | Optically bonded PCAP                                                                                                                     |
| Display technology        | IPS                                                                                                                                       |
| Cover glass material      | Dragontrail®                                                                                                                              |
| Programmable buttons      | 2                                                                                                                                         |
| Viewfinder                | No                                                                                                                                        |
| Image adjustment          | <ul style="list-style-type: none"> <li>• Automatic</li> <li>• Automatic maximum</li> <li>• Automatic minimum</li> <li>• Manual</li> </ul> |

|                                 |                       |
|---------------------------------|-----------------------|
| <b>Image presentation modes</b> |                       |
| Infrared image                  | Yes                   |
| Visual image                    | Yes                   |
| MSX                             | Yes                   |
| Picture in picture              | Resizable and movable |
| Gallery                         | Yes                   |

|                                            |                                   |                                                                |
|--------------------------------------------|-----------------------------------|----------------------------------------------------------------|
| <b>Measurement</b>                         |                                   |                                                                |
| Camera temperature range                   | Object temperature range          | Accuracy — for ambient temperature +15 to +35°C (+59 to +95°F) |
| -20 to +120°C (-4 to +248°F)               | -20 to +100°C (-4 to +212°F)      | ±2°C (±3.6°F)                                                  |
|                                            | +100 to +120°C (+212 to +248°F)   | ±2%                                                            |
| 0 to +650°C (+32 to +1202°F)               | 0 to +100°C (+32 to +212°F)       | ±2°C (±3.6°F)                                                  |
|                                            | +100 to +650°C (+212 to +1202°F)  | ±2%                                                            |
| Optional +300 to +1200°C (+572 to +2192°F) | +300 to +1200°C (+572 to +2192°F) | ±2%                                                            |

|                              |                                                                                                                                                                                       |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Measurement analysis</b>  |                                                                                                                                                                                       |
| Spotmeter                    | 3 in live mode                                                                                                                                                                        |
| Area                         | 3 in live mode                                                                                                                                                                        |
| Automatic hot/cold detection | Automatic maximum/minimum markers within area                                                                                                                                         |
| Measurement presets          | <ul style="list-style-type: none"> <li>• No measurements</li> <li>• Center spot</li> <li>• Hot spot</li> <li>• Cold spot</li> <li>• User preset 1</li> <li>• User preset 2</li> </ul> |
| Difference temperature       | Yes                                                                                                                                                                                   |
| Reference temperature        | Yes                                                                                                                                                                                   |
| Emissivity correction        | Yes, variable from 0.01 to 1.0 or selected from materials list                                                                                                                        |
| Measurement corrections      | Yes                                                                                                                                                                                   |

|                                     |                                                                                                                                                                           |
|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Measurement analysis</b>         |                                                                                                                                                                           |
| External optics/windows correction  | Yes                                                                                                                                                                       |
| Screening                           | 0.5°C (0.9°F) accuracy at 37°C (98.6°F) with reference                                                                                                                    |
| <b>Alarm</b>                        |                                                                                                                                                                           |
| Color alarm (isotherm)              | <ul style="list-style-type: none"> <li>• Above</li> <li>• Below</li> <li>• Interval</li> <li>• Condensation (moisture/humidity/dewpoint)</li> <li>• Insulation</li> </ul> |
| Measurement function alarm          | Audible/visual alarms (above/below) on any selected measurement function                                                                                                  |
| <b>Set-up</b>                       |                                                                                                                                                                           |
| Color palettes                      | <ul style="list-style-type: none"> <li>• Iron</li> <li>• Gray</li> <li>• Rainbow</li> <li>• Arctic</li> <li>• Lava</li> <li>• Rainbow HC</li> </ul>                       |
| Setup commands                      | Local adaptation of units, language, date, and time formats                                                                                                               |
| Languages                           | 21                                                                                                                                                                        |
| <b>Service functions</b>            |                                                                                                                                                                           |
| Camera software update              | Use PC software FLIR Tools                                                                                                                                                |
| <b>Storage of images</b>            |                                                                                                                                                                           |
| Storage media                       | Removable memory: SD card                                                                                                                                                 |
| Time lapse (Periodic image storage) | 10 seconds to 24 hours (infrared)                                                                                                                                         |
| Remote control operation            | <ul style="list-style-type: none"> <li>• Using FLIR Tools (using USB cable)</li> <li>• FLIR Tools Mobile (over Wi-Fi)</li> </ul>                                          |
| Image file format                   | Standard JPEG, measurement data included. Infrared-only mode                                                                                                              |
| <b>Image annotations</b>            |                                                                                                                                                                           |
| Voice                               | 60 seconds with built-in microphone and speaker (and via Bluetooth) on still images and video                                                                             |
| Text                                | Text from predefined list or soft keyboard on touchscreen                                                                                                                 |
| Visual image annotation             | Yes                                                                                                                                                                       |
| Image sketch                        | Yes: on infrared only                                                                                                                                                     |
| Sketch                              | From touchscreen                                                                                                                                                          |
| METERLiNK                           | Wireless connection (Bluetooth) to:<br>FLIR meters with METERLiNK                                                                                                         |
| Area measurement information        | Yes                                                                                                                                                                       |
| GPS                                 | Location data automatically added to every still image and first frame in video from built-in GPS                                                                         |

|                                                                                   |                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Video recording in camera</b>                                                  |                                                                                                                                                                                                                  |
| Radiometric infrared-video recording                                              | RTRR (.csq)                                                                                                                                                                                                      |
| Non-radiometric infrared-video recording                                          | H.264 to memory card                                                                                                                                                                                             |
| Visual video recording                                                            | H.264 to memory card                                                                                                                                                                                             |
| <b>Video streaming</b>                                                            |                                                                                                                                                                                                                  |
| Radiometric infrared-video streaming (compressed)                                 | Over UVC                                                                                                                                                                                                         |
| Non-radiometric video streaming (compressed: IR, MSX, visual, Picture in Picture) | <ul style="list-style-type: none"> <li>• H.264 (AVC) over RTSP (Wi-Fi)</li> <li>• MPEG4 over RTSP (Wi-Fi)</li> <li>• MJPEG over UVC and RTSP (Wi-Fi)</li> </ul>                                                  |
| Visual video streaming                                                            | Yes                                                                                                                                                                                                              |
| <b>Digital camera</b>                                                             |                                                                                                                                                                                                                  |
| Resolution                                                                        | 5 MP with LED light                                                                                                                                                                                              |
| Focus                                                                             | Fixed                                                                                                                                                                                                            |
| Field of view                                                                     | 53° × 41°                                                                                                                                                                                                        |
| Video lamp                                                                        | Built-in LED light                                                                                                                                                                                               |
| <b>Laser pointer</b>                                                              |                                                                                                                                                                                                                  |
| Laser alignment                                                                   | Position is automatically displayed on the infrared image                                                                                                                                                        |
| Laser distance meter                                                              | Activated by dedicated button                                                                                                                                                                                    |
| Laser                                                                             | Class 2, 0.05–40 m (0.16–131 ft.) ±1% of measured distance                                                                                                                                                       |
| <b>Data communication interfaces</b>                                              |                                                                                                                                                                                                                  |
| Interfaces                                                                        | USB 2.0, Bluetooth, Wi-Fi, DisplayPort                                                                                                                                                                           |
| METERLiNK/Bluetooth                                                               | Communication with headset and external sensors                                                                                                                                                                  |
| Wi-Fi                                                                             | Peer to peer (ad hoc) or infrastructure (network)                                                                                                                                                                |
| Audio                                                                             | Microphone and speaker for voice annotation of images                                                                                                                                                            |
| USB                                                                               | USB Type-C: data transfer/video/power                                                                                                                                                                            |
| USB standard                                                                      | USB 2.0 High Speed                                                                                                                                                                                               |
| Video out                                                                         | DisplayPort                                                                                                                                                                                                      |
| Video connector type                                                              | DisplayPort over USB Type-C                                                                                                                                                                                      |
| <b>Radio</b>                                                                      |                                                                                                                                                                                                                  |
| Operating frequency                                                               | Bluetooth + EDR/LE: 2402–2480 MHz<br>WLAN 2.4 GHz: 2412–2462 MHz<br>WLAN 5 GHz: 5150–5350 MHz (DFS: only slave mode)<br>Note that frequency band 5150–5350 MHz is for indoor use only, see national regulations. |
| RF output (EIRP)                                                                  | Bluetooth + EDR/LE: < 10 dBm<br>WLAN: < 17 dBm                                                                                                                                                                   |
| Antenna                                                                           | Integrated PIFA antenna (gain: maximum 1.4 dBi)                                                                                                                                                                  |



|                                       |                                                                                                                                                                                                                                    |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power system</b>                   |                                                                                                                                                                                                                                    |
| Battery type                          | Rechargeable Li-ion battery                                                                                                                                                                                                        |
| Battery voltage                       | 3.6 V                                                                                                                                                                                                                              |
| Battery operating time                | > 4 hours at 25°C (68°F) with typical use                                                                                                                                                                                          |
| Charging system                       | In camera (AC adapter or 12 V from a vehicle) or two-bay charger                                                                                                                                                                   |
| Charging time (using two-bay charger) | 3.5 h to 90% capacity, on-screen indicator                                                                                                                                                                                         |
| Charging temperature                  | 0°C to +45°C (+32°F to +113°F), except for the Korean market: +10°C to +45°C (+50°F to +113°F)                                                                                                                                     |
| External power operation              | AC adapter 90–260 V AC (50/60 Hz) or 12 V from a vehicle (cable with standard plug, optional)                                                                                                                                      |
| Power management                      | Automatic shut-down and sleep mode                                                                                                                                                                                                 |
| <b>Environmental data</b>             |                                                                                                                                                                                                                                    |
| Operating temperature range           | –15 to +50°C (5–122°F)                                                                                                                                                                                                             |
| Storage temperature range             | –40 to +70°C (–40 to 158°F)                                                                                                                                                                                                        |
| Humidity (operating and storage)      | IEC 60068-2-30/24 hours, 95% relative humidity, 25–40°C (77–104°F)/2 cycles                                                                                                                                                        |
| EMC                                   | <ul style="list-style-type: none"> <li>• ETSI EN 301 489-1 (radio)</li> <li>• ETSI EN 301 489-17</li> <li>• EN 61000-6-2 (immunity)</li> <li>• EN 61000-6-3 (emission)</li> <li>• FCC 47 CFR Part 15 Class B (emission)</li> </ul> |
| Radio spectrum                        | <ul style="list-style-type: none"> <li>• ETSI EN 300 228</li> <li>• FCC Part 15.249</li> <li>• RSS-247 Issue 2</li> </ul>                                                                                                          |
| Encapsulation                         | IP 54 (IEC 60529)                                                                                                                                                                                                                  |
| Shock                                 | 25g (IEC 60068-2-27)                                                                                                                                                                                                               |
| Vibration                             | 2g (IEC 60068-2-6)                                                                                                                                                                                                                 |
| Safety                                | EN/UL/CSA/PSE 60950-1                                                                                                                                                                                                              |
| <b>Physical data</b>                  |                                                                                                                                                                                                                                    |
| Weight (including battery)            | 1.3 kg (2.9 lb.)                                                                                                                                                                                                                   |
| Size (L × W × H)                      | <ul style="list-style-type: none"> <li>• Lens vertical: 140 × 201.3 × 84.1 mm (5.5 × 7.9 × 3.3 in.)</li> <li>• Lens horizontal: 140 × 201.3 × 167.3 mm (5.5 × 7.9 × 6.6 in.)</li> </ul>                                            |
| Battery weight                        | 195 g (6.89 oz.)                                                                                                                                                                                                                   |
| Battery size (L × W × H)              | 59 × 66 × 94 mm (2.3 × 2.6 × 3.7 in.)                                                                                                                                                                                              |
| Tripod mounting                       | UNC ¼"-20                                                                                                                                                                                                                          |
| Housing material                      | PCABS with TPE, magnesium                                                                                                                                                                                                          |
| Color                                 | Black                                                                                                                                                                                                                              |
| <b>Warranty and service</b>           |                                                                                                                                                                                                                                    |
| Warranty                              | <a href="http://www.flir.com/warranty/">http://www.flir.com/warranty/</a>                                                                                                                                                          |

| Shipping information |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Packaging, type      | Cardboard box                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Packaging, contents  | <ul style="list-style-type: none"> <li>Accessory box I: <ul style="list-style-type: none"> <li>Power supply for battery charger</li> <li>Power supply, 15 W/3 A</li> <li>Printed documentation</li> <li>SD card (8 GB)</li> <li>USB 2.0 A to USB Type-C cable</li> <li>USB Type-C to HDMI and PD adapter</li> <li>USB Type-C to USB Type-C cable (USB 2.0 standard)</li> </ul> </li> <li>Accessory box II: <ul style="list-style-type: none"> <li>Lens cap strap</li> <li>Lens cleaning cloth</li> <li>Neck strap</li> </ul> </li> <li>Battery (2 ea)</li> <li>Battery charger</li> <li>Extra lens, 42°</li> <li>Hard transport case</li> <li>Infrared camera with lens</li> <li>Lens cap, front</li> <li>Lens cap, front and rear (only for extra lenses)</li> </ul> |
| Packaging, weight    | 6.2 kg (13.7 lb.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Packaging, size      | 500 × 190 × 370 mm (19.7 × 7.5 × 14.6 in.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| EAN-13               | <ul style="list-style-type: none"> <li>Sweden: 7332558012956</li> <li>Estonia: 4743254003231</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| UPC-12               | 845188014643                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Country of origin    | Sweden and/or Estonia                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

#### Supplies and accessories:

- T198495; Pouch
- T197771ACC; Bluetooth Headset
- T130337ACC; Calibration target
- T199588; Lens 14° + case
- T199589; Lens 24° + case
- T199590; Lens 42° + case
- T911630ACC; Power supply for camera, 15 W/3 A
- T911631ACC; USB 2.0 A to USB Type-C cable, 0.9 m
- T911633ACC; Power supply for battery charger
- T911705ACC; USB Type-C to USB Type-C cable (USB 2.0 standard), 1.0 m
- T911706ACC; Car adapter 12 V
- T911845ACC; USB Type-C to HDMI and PD adapter
- T911846ACC; USB 2.0 A to USB Type-C with Power supply
- T199300ACC; Battery
- T199610; Battery charger
- T199601; Hand strap and neck strap
- T199347ACC; Hard transport case
- T199616; Option, High temperature, +300 to +1200°C
- T199609; Option, Macro mode 71/103 µm for 24°
- T300030; Option, No radio
- T198583; FLIR Tools+ (download card incl. license key)
- T198696; FLIR ResearchIR Max 4 (hardware sec. dev.)
- T199013; FLIR ResearchIR Max 4 (printed license key)

- 
- T199043; FLIR ResearchIR Max 4 Upgrade (printed license key)
  - INST-EW-0145; Extended Warranty 1 Year for T530
  - INST-EWGM-0155; Premium Service Package for A3xx, T4xx mkII, T530
  - INST-GM-0140; General Maintenance Package for T530

## 27.9 FLIR T530 24° + 14° & 42°

P/N: 79306-0101

Rev.: 53830

|                                           |                                                                                                                                                                                             |
|-------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Imaging and optical data</b>           |                                                                                                                                                                                             |
| Infrared resolution                       | 320 × 240 pixels                                                                                                                                                                            |
| UltraMax (super-resolution) <sup>11</sup> | In FLIR Tools                                                                                                                                                                               |
| NETD                                      | <ul style="list-style-type: none"> <li>• &lt;30 mK, 42° @ +30°C (+86°F)</li> <li>• &lt;40 mK, 24° @ +30°C (+86°F)</li> <li>• &lt;50 mK, 14° @ +30°C (+86°F)</li> </ul>                      |
| Field of view                             | <ul style="list-style-type: none"> <li>• 42° × 32°</li> <li>• 24° × 18°</li> <li>• 14° × 10°</li> </ul>                                                                                     |
| Minimum focus distance                    | <ul style="list-style-type: none"> <li>• 0.15 m (0.49 ft.), 42°</li> <li>• 0.15 m (0.49 ft.), 24°</li> <li>• 1.0 m (3.28 ft.), 14°</li> <li>• Macro mode 103 µm as option to 24°</li> </ul> |
| Minimum focus distance with MSX           | <ul style="list-style-type: none"> <li>• 0.65 m (2.13 ft.), 42°</li> <li>• 0.5 m (1.64 ft.), 24°</li> <li>• 1.0 m (3.28 ft.), 14°</li> </ul>                                                |
| Focal length                              | <ul style="list-style-type: none"> <li>• 10 mm (0.39 in.), 42°</li> <li>• 17 mm (0.67 in.), 24°</li> <li>• 29 mm (1.41 in.), 14°</li> </ul>                                                 |
| Spatial resolution (IFOV)                 | <ul style="list-style-type: none"> <li>• 2.41 mrad/pixel, 42°</li> <li>• 1.31 mrad/pixel, 24°</li> <li>• 0.75 mrad/pixel, 14°</li> </ul>                                                    |
| Lens identification                       | Automatic                                                                                                                                                                                   |
| f number                                  | <ul style="list-style-type: none"> <li>• 1.1, 42°</li> <li>• 1.3, 24°</li> <li>• 1.5, 14°</li> </ul>                                                                                        |
| Image frequency                           | 30 Hz                                                                                                                                                                                       |
| Focus                                     | <ul style="list-style-type: none"> <li>• Continuous LDM</li> <li>• One-shot LDM</li> <li>• One-shot contrast</li> <li>• Manual</li> </ul>                                                   |
| Field of view match                       | Yes                                                                                                                                                                                         |
| Digital zoom                              | 1–4× continuous                                                                                                                                                                             |
| <b>Detector data</b>                      |                                                                                                                                                                                             |
| Focal plane array/spectral range          | Uncooled microbolometer/7.5–14 µm                                                                                                                                                           |
| Detector pitch                            | 17 µm                                                                                                                                                                                       |
| <b>Image presentation</b>                 |                                                                                                                                                                                             |
| Resolution                                | 640 × 480 pixels (VGA)                                                                                                                                                                      |
| Surface brightness (cd/m²)                | 400                                                                                                                                                                                         |

11. Not supported when using macro.

|                                            |                                                                                                                                                                                |                                                                 |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------|
| Image presentation                         |                                                                                                                                                                                |                                                                 |
| Screen size                                | 4 in.                                                                                                                                                                          |                                                                 |
| Viewing angle                              | 80°                                                                                                                                                                            |                                                                 |
| Color depth (bits)                         | 24                                                                                                                                                                             |                                                                 |
| Aspect ratio                               | 4:3                                                                                                                                                                            |                                                                 |
| Auto-rotation                              | Yes                                                                                                                                                                            |                                                                 |
| Touchscreen                                | Optically bonded PCAP                                                                                                                                                          |                                                                 |
| Display technology                         | IPS                                                                                                                                                                            |                                                                 |
| Cover glass material                       | Dragontrail®                                                                                                                                                                   |                                                                 |
| Programmable buttons                       | 2                                                                                                                                                                              |                                                                 |
| Viewfinder                                 | No                                                                                                                                                                             |                                                                 |
| Image adjustment                           | <ul style="list-style-type: none"><li>• Automatic</li><li>• Automatic maximum</li><li>• Automatic minimum</li><li>• Manual</li></ul>                                           |                                                                 |
|                                            |                                                                                                                                                                                |                                                                 |
| Image presentation modes                   |                                                                                                                                                                                |                                                                 |
| Infrared image                             | Yes                                                                                                                                                                            |                                                                 |
| Visual image                               | Yes                                                                                                                                                                            |                                                                 |
| MSX                                        | Yes                                                                                                                                                                            |                                                                 |
| Picture in picture                         | Resizable and movable                                                                                                                                                          |                                                                 |
| Gallery                                    | Yes                                                                                                                                                                            |                                                                 |
|                                            |                                                                                                                                                                                |                                                                 |
| Measurement                                |                                                                                                                                                                                |                                                                 |
| Camera temperature range                   | Object temperature range                                                                                                                                                       | Accuracy — for ambient temperature +15 to +35°C (+59 to +95° F) |
| –20 to +120°C (–4 to +248°F)               | –20 to +100°C (–4 to +212°F)                                                                                                                                                   | ±2°C (±3.6°F)                                                   |
|                                            | +100 to +120°C (+212 to +248° F)                                                                                                                                               | ±2%                                                             |
| 0 to +650°C (+32 to +1202°F)               | 0 to +100°C (+32 to +212°F)                                                                                                                                                    | ±2°C (±3.6°F)                                                   |
|                                            | +100 to + 650°C (+212 to +1202°F)                                                                                                                                              | ±2%                                                             |
| Optional +300 to +1200°C (+572 to +2192°F) | +300 to +1200°C (+572 to +2192°F)                                                                                                                                              | ±2%                                                             |
|                                            |                                                                                                                                                                                |                                                                 |
| Measurement analysis                       |                                                                                                                                                                                |                                                                 |
| Spotmeter                                  | 3 in live mode                                                                                                                                                                 |                                                                 |
| Area                                       | 3 in live mode                                                                                                                                                                 |                                                                 |
| Automatic hot/cold detection               | Automatic maximum/minimum markers within area                                                                                                                                  |                                                                 |
| Measurement presets                        | <ul style="list-style-type: none"><li>• No measurements</li><li>• Center spot</li><li>• Hot spot</li><li>• Cold spot</li><li>• User preset 1</li><li>• User preset 2</li></ul> |                                                                 |
| Difference temperature                     | Yes                                                                                                                                                                            |                                                                 |
| Reference temperature                      | Yes                                                                                                                                                                            |                                                                 |

|                                     |                                                                                                                                                                           |
|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Measurement analysis</b>         |                                                                                                                                                                           |
| Emissivity correction               | Yes, variable from 0.01 to 1.0 or selected from materials list                                                                                                            |
| Measurement corrections             | Yes                                                                                                                                                                       |
| External optics/windows correction  | Yes                                                                                                                                                                       |
| Screening                           | 0.5°C (0.9°F) accuracy at 37°C (98.6°F) with reference                                                                                                                    |
| <b>Alarm</b>                        |                                                                                                                                                                           |
| Color alarm (isotherm)              | <ul style="list-style-type: none"> <li>• Above</li> <li>• Below</li> <li>• Interval</li> <li>• Condensation (moisture/humidity/dewpoint)</li> <li>• Insulation</li> </ul> |
| Measurement function alarm          | Audible/visual alarms (above/below) on any selected measurement function                                                                                                  |
| <b>Set-up</b>                       |                                                                                                                                                                           |
| Color palettes                      | <ul style="list-style-type: none"> <li>• Iron</li> <li>• Gray</li> <li>• Rainbow</li> <li>• Arctic</li> <li>• Lava</li> <li>• Rainbow HC</li> </ul>                       |
| Setup commands                      | Local adaptation of units, language, date, and time formats                                                                                                               |
| Languages                           | 21                                                                                                                                                                        |
| <b>Service functions</b>            |                                                                                                                                                                           |
| Camera software update              | Use PC software FLIR Tools                                                                                                                                                |
| <b>Storage of images</b>            |                                                                                                                                                                           |
| Storage media                       | Removable memory: SD card                                                                                                                                                 |
| Time lapse (Periodic image storage) | 10 seconds to 24 hours (infrared)                                                                                                                                         |
| Remote control operation            | <ul style="list-style-type: none"> <li>• Using FLIR Tools (using USB cable)</li> <li>• FLIR Tools Mobile (over Wi-Fi)</li> </ul>                                          |
| Image file format                   | Standard JPEG, measurement data included. Infrared-only mode                                                                                                              |
| <b>Image annotations</b>            |                                                                                                                                                                           |
| Voice                               | 60 seconds with built-in microphone and speaker (and via Bluetooth) on still images and video                                                                             |
| Text                                | Text from predefined list or soft keyboard on touchscreen                                                                                                                 |
| Visual image annotation             | Yes                                                                                                                                                                       |
| Image sketch                        | Yes: on infrared only                                                                                                                                                     |
| Sketch                              | From touchscreen                                                                                                                                                          |
| METERLiNK                           | Wireless connection (Bluetooth) to:<br>FLIR meters with METERLiNK                                                                                                         |
| Area measurement information        | Yes                                                                                                                                                                       |
| GPS                                 | Location data automatically added to every still image and first frame in video from built-in GPS                                                                         |

|                                                                                   |                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Video recording in camera</b>                                                  |                                                                                                                                                                                                                  |
| Radiometric infrared-video recording                                              | RTRR (.csq)                                                                                                                                                                                                      |
| Non-radiometric infrared-video recording                                          | H.264 to memory card                                                                                                                                                                                             |
| Visual video recording                                                            | H.264 to memory card                                                                                                                                                                                             |
| <b>Video streaming</b>                                                            |                                                                                                                                                                                                                  |
| Radiometric infrared-video streaming (compressed)                                 | Over UVC                                                                                                                                                                                                         |
| Non-radiometric video streaming (compressed: IR, MSX, visual, Picture in Picture) | <ul style="list-style-type: none"> <li>• H.264 (AVC) over RTSP (Wi-Fi)</li> <li>• MPEG4 over RTSP (Wi-Fi)</li> <li>• MJPEG over UVC and RTSP (Wi-Fi)</li> </ul>                                                  |
| Visual video streaming                                                            | Yes                                                                                                                                                                                                              |
| <b>Digital camera</b>                                                             |                                                                                                                                                                                                                  |
| Resolution                                                                        | 5 MP with LED light                                                                                                                                                                                              |
| Focus                                                                             | Fixed                                                                                                                                                                                                            |
| Field of view                                                                     | 53° × 41°                                                                                                                                                                                                        |
| Video lamp                                                                        | Built-in LED light                                                                                                                                                                                               |
| <b>Laser pointer</b>                                                              |                                                                                                                                                                                                                  |
| Laser alignment                                                                   | Position is automatically displayed on the infrared image                                                                                                                                                        |
| Laser distance meter                                                              | Activated by dedicated button                                                                                                                                                                                    |
| Laser                                                                             | Class 2, 0.05–40 m (0.16–131 ft.) ±1% of measured distance                                                                                                                                                       |
| <b>Data communication interfaces</b>                                              |                                                                                                                                                                                                                  |
| Interfaces                                                                        | USB 2.0, Bluetooth, Wi-Fi, DisplayPort                                                                                                                                                                           |
| METERLiNK/Bluetooth                                                               | Communication with headset and external sensors                                                                                                                                                                  |
| Wi-Fi                                                                             | Peer to peer (ad hoc) or infrastructure (network)                                                                                                                                                                |
| Audio                                                                             | Microphone and speaker for voice annotation of images                                                                                                                                                            |
| USB                                                                               | USB Type-C: data transfer/video/power                                                                                                                                                                            |
| USB standard                                                                      | USB 2.0 High Speed                                                                                                                                                                                               |
| Video out                                                                         | DisplayPort                                                                                                                                                                                                      |
| Video connector type                                                              | DisplayPort over USB Type-C                                                                                                                                                                                      |
| <b>Radio</b>                                                                      |                                                                                                                                                                                                                  |
| Operating frequency                                                               | Bluetooth + EDR/LE: 2402–2480 MHz<br>WLAN 2.4 GHz: 2412–2462 MHz<br>WLAN 5 GHz: 5150–5350 MHz (DFS: only slave mode)<br>Note that frequency band 5150–5350 MHz is for indoor use only, see national regulations. |
| RF output (EIRP)                                                                  | Bluetooth + EDR/LE: < 10 dBm<br>WLAN: < 17 dBm                                                                                                                                                                   |
| Antenna                                                                           | Integrated PIFA antenna (gain: maximum 1.4 dBi)                                                                                                                                                                  |

|                                       |                                                                                                                                                                                                                                    |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power system</b>                   |                                                                                                                                                                                                                                    |
| Battery type                          | Rechargeable Li-ion battery                                                                                                                                                                                                        |
| Battery voltage                       | 3.6 V                                                                                                                                                                                                                              |
| Battery operating time                | > 4 hours at 25°C (68°F) with typical use                                                                                                                                                                                          |
| Charging system                       | In camera (AC adapter or 12 V from a vehicle) or two-bay charger                                                                                                                                                                   |
| Charging time (using two-bay charger) | 3.5 h to 90% capacity, on-screen indicator                                                                                                                                                                                         |
| Charging temperature                  | 0°C to +45°C (+32°F to +113°F), except for the Korean market: +10°C to +45°C (+50°F to +113°F)                                                                                                                                     |
| External power operation              | AC adapter 90–260 V AC (50/60 Hz) or 12 V from a vehicle (cable with standard plug, optional)                                                                                                                                      |
| Power management                      | Automatic shut-down and sleep mode                                                                                                                                                                                                 |
| <b>Environmental data</b>             |                                                                                                                                                                                                                                    |
| Operating temperature range           | –15 to +50°C (5–122°F)                                                                                                                                                                                                             |
| Storage temperature range             | –40 to +70°C (–40 to 158°F)                                                                                                                                                                                                        |
| Humidity (operating and storage)      | IEC 60068-2-30/24 hours, 95% relative humidity, 25–40°C (77–104°F)/2 cycles                                                                                                                                                        |
| EMC                                   | <ul style="list-style-type: none"> <li>• ETSI EN 301 489-1 (radio)</li> <li>• ETSI EN 301 489-17</li> <li>• EN 61000-6-2 (immunity)</li> <li>• EN 61000-6-3 (emission)</li> <li>• FCC 47 CFR Part 15 Class B (emission)</li> </ul> |
| Radio spectrum                        | <ul style="list-style-type: none"> <li>• ETSI EN 300 228</li> <li>• FCC Part 15.249</li> <li>• RSS-247 Issue 2</li> </ul>                                                                                                          |
| Encapsulation                         | IP 54 (IEC 60529)                                                                                                                                                                                                                  |
| Shock                                 | 25g (IEC 60068-2-27)                                                                                                                                                                                                               |
| Vibration                             | 2g (IEC 60068-2-6)                                                                                                                                                                                                                 |
| Safety                                | EN/UL/CSA/PSE 60950-1                                                                                                                                                                                                              |
| <b>Physical data</b>                  |                                                                                                                                                                                                                                    |
| Weight (including battery)            | 1.3 kg (2.9 lb.)                                                                                                                                                                                                                   |
| Size (L × W × H)                      | <ul style="list-style-type: none"> <li>• Lens vertical: 140 × 201.3 × 84.1 mm (5.5 × 7.9 × 3.3 in.)</li> <li>• Lens horizontal: 140 × 201.3 × 167.3 mm (5.5 × 7.9 × 6.6 in.)</li> </ul>                                            |
| Battery weight                        | 195 g (6.89 oz.)                                                                                                                                                                                                                   |
| Battery size (L × W × H)              | 59 × 66 × 94 mm (2.3 × 2.6 × 3.7 in.)                                                                                                                                                                                              |
| Tripod mounting                       | UNC ¼"-20                                                                                                                                                                                                                          |
| Housing material                      | PCABS with TPE, magnesium                                                                                                                                                                                                          |
| Color                                 | Black                                                                                                                                                                                                                              |
| <b>Warranty and service</b>           |                                                                                                                                                                                                                                    |
| Warranty                              | <a href="http://www.flir.com/warranty/">http://www.flir.com/warranty/</a>                                                                                                                                                          |



| Shipping information |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Packaging, type      | Cardboard box                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Packaging, contents  | <ul style="list-style-type: none"> <li>Accessory box I: <ul style="list-style-type: none"> <li>Power supply for battery charger</li> <li>Power supply, 15 W/3 A</li> <li>Printed documentation</li> <li>SD card (8 GB)</li> <li>USB 2.0 A to USB Type-C cable</li> <li>USB Type-C to HDMI and PD adapter</li> <li>USB Type-C to USB Type-C cable (USB 2.0 standard)</li> </ul> </li> <li>Accessory box II: <ul style="list-style-type: none"> <li>Lens cap strap</li> <li>Lens cleaning cloth</li> <li>Neck strap</li> </ul> </li> <li>Battery (2 ea)</li> <li>Battery charger</li> <li>Extra lens, 14°</li> <li>Extra lens, 42°</li> <li>Hard transport case</li> <li>Infrared camera with lens</li> <li>Lens cap, front</li> <li>Lens cap, front and rear (only for extra lenses)</li> </ul> |
| Packaging, weight    | 6.4 kg (14.1 lb.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Packaging, size      | 500 × 190 × 370 mm (19.7 × 7.5 × 14.6 in.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| EAN-13               | <ul style="list-style-type: none"> <li>Sweden: 7332558012963</li> <li>Estonia: 4743254003248</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| UPC-12               | 845188014650                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Country of origin    | Sweden and/or Estonia                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

#### Supplies and accessories:

- T198495; Pouch
- T197771ACC; Bluetooth Headset
- T130337ACC; Calibration target
- T199588; Lens 14° + case
- T199589; Lens 24° + case
- T199590; Lens 42° + case
- T911630ACC; Power supply for camera, 15 W/3 A
- T911631ACC; USB 2.0 A to USB Type-C cable, 0.9 m
- T911633ACC; Power supply for battery charger
- T911705ACC; USB Type-C to USB Type-C cable (USB 2.0 standard), 1.0 m
- T911706ACC; Car adapter 12 V
- T911845ACC; USB Type-C to HDMI and PD adapter
- T911846ACC; USB 2.0 A to USB Type-C with Power supply
- T199300ACC; Battery
- T199610; Battery charger
- T199601; Hand strap and neck strap
- T199347ACC; Hard transport case
- T199616; Option, High temperature, +300 to +1200°C
- T199609; Option, Macro mode 71/103 µm for 24°
- T300030; Option, No radio
- T198583; FLIR Tools+ (download card incl. license key)
- T198696; FLIR ResearchIR Max 4 (hardware sec. dev.)
- T199013; FLIR ResearchIR Max 4 (printed license key)

- 
- T199043; FLIR ResearchIR Max 4 Upgrade (printed license key)
  - INST-EW-0145; Extended Warranty 1 Year for T530
  - INST-EWGM-0155; Premium Service Package for A3xx, T4xx mkII, T530
  - INST-GM-0140; General Maintenance Package for T530

## 27.10 FLIR T530 42° + 14°

P/N: 79307-0101

Rev.: 53833

| Imaging and optical data                  |                                                                                                                                   |
|-------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Infrared resolution                       | 320 × 240 pixels                                                                                                                  |
| UltraMax (super-resolution) <sup>12</sup> | In FLIR Tools                                                                                                                     |
| NETD                                      | <ul style="list-style-type: none"> <li>&lt;30 mK, 42° @ +30°C (+86°F)</li> <li>&lt;50 mK, 14° @ +30°C (+86°F)</li> </ul>          |
| Field of view                             | <ul style="list-style-type: none"> <li>42° × 32°</li> <li>14° × 10°</li> </ul>                                                    |
| Minimum focus distance                    | <ul style="list-style-type: none"> <li>0.15 m (0.49 ft.), 42°</li> <li>1.0 m (3.28 ft.), 14°</li> </ul>                           |
| Minimum focus distance with MSX           | <ul style="list-style-type: none"> <li>0.65 m (2.13 ft.), 42°</li> <li>1.0 m (3.28 ft.), 14°</li> </ul>                           |
| Focal length                              | <ul style="list-style-type: none"> <li>10 mm (0.39 in.), 42°</li> <li>29 mm (1.41 in.), 14°</li> </ul>                            |
| Spatial resolution (IFOV)                 | <ul style="list-style-type: none"> <li>2.41 mrad/pixel, 42°</li> <li>0.75 mrad/pixel, 14°</li> </ul>                              |
| Available extra lenses                    | <ul style="list-style-type: none"> <li>24°</li> </ul>                                                                             |
| Lens identification                       | Automatic                                                                                                                         |
| f number                                  | <ul style="list-style-type: none"> <li>1.1, 42°</li> <li>1.5, 14°</li> </ul>                                                      |
| Image frequency                           | 30 Hz                                                                                                                             |
| Focus                                     | <ul style="list-style-type: none"> <li>Continuous LDM</li> <li>One-shot LDM</li> <li>One-shot contrast</li> <li>Manual</li> </ul> |
| Field of view match                       | Yes                                                                                                                               |
| Digital zoom                              | 1–4× continuous                                                                                                                   |
| Detector data                             |                                                                                                                                   |
| Focal plane array/spectral range          | Uncooled microbolometer/7.5–14 μm                                                                                                 |
| Detector pitch                            | 17 μm                                                                                                                             |
| Image presentation                        |                                                                                                                                   |
| Resolution                                | 640 × 480 pixels (VGA)                                                                                                            |
| Surface brightness (cd/m <sup>2</sup> )   | 400                                                                                                                               |
| Screen size                               | 4 in.                                                                                                                             |
| Viewing angle                             | 80°                                                                                                                               |
| Color depth (bits)                        | 24                                                                                                                                |
| Aspect ratio                              | 4:3                                                                                                                               |

<sup>12</sup>. Not supported when using macro.

|                           |                                                                                                                                           |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Image presentation</b> |                                                                                                                                           |
| Auto-rotation             | Yes                                                                                                                                       |
| Touchscreen               | Optically bonded PCAP                                                                                                                     |
| Display technology        | IPS                                                                                                                                       |
| Cover glass material      | Dragontrail®                                                                                                                              |
| Programmable buttons      | 2                                                                                                                                         |
| Viewfinder                | No                                                                                                                                        |
| Image adjustment          | <ul style="list-style-type: none"> <li>• Automatic</li> <li>• Automatic maximum</li> <li>• Automatic minimum</li> <li>• Manual</li> </ul> |

|                                 |                       |
|---------------------------------|-----------------------|
| <b>Image presentation modes</b> |                       |
| Infrared image                  | Yes                   |
| Visual image                    | Yes                   |
| MSX                             | Yes                   |
| Picture in picture              | Resizable and movable |
| Gallery                         | Yes                   |

|                                            |                                   |                                                                |
|--------------------------------------------|-----------------------------------|----------------------------------------------------------------|
| <b>Measurement</b>                         |                                   |                                                                |
| Camera temperature range                   | Object temperature range          | Accuracy — for ambient temperature +15 to +35°C (+59 to +95°F) |
| -20 to +120°C (-4 to +248°F)               | -20 to +100°C (-4 to +212°F)      | ±2°C (±3.6°F)                                                  |
|                                            | +100 to +120°C (+212 to +248°F)   | ±2%                                                            |
| 0 to +650°C (+32 to +1202°F)               | 0 to +100°C (+32 to +212°F)       | ±2°C (±3.6°F)                                                  |
|                                            | +100 to +650°C (+212 to +1202°F)  | ±2%                                                            |
| Optional +300 to +1200°C (+572 to +2192°F) | +300 to +1200°C (+572 to +2192°F) | ±2%                                                            |

|                              |                                                                                                                                                                                       |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Measurement analysis</b>  |                                                                                                                                                                                       |
| Spotmeter                    | 3 in live mode                                                                                                                                                                        |
| Area                         | 3 in live mode                                                                                                                                                                        |
| Automatic hot/cold detection | Automatic maximum/minimum markers within area                                                                                                                                         |
| Measurement presets          | <ul style="list-style-type: none"> <li>• No measurements</li> <li>• Center spot</li> <li>• Hot spot</li> <li>• Cold spot</li> <li>• User preset 1</li> <li>• User preset 2</li> </ul> |
| Difference temperature       | Yes                                                                                                                                                                                   |
| Reference temperature        | Yes                                                                                                                                                                                   |
| Emissivity correction        | Yes, variable from 0.01 to 1.0 or selected from materials list                                                                                                                        |
| Measurement corrections      | Yes                                                                                                                                                                                   |

|                                     |                                                                                                                                                                           |
|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Measurement analysis</b>         |                                                                                                                                                                           |
| External optics/windows correction  | Yes                                                                                                                                                                       |
| Screening                           | 0.5°C (0.9°F) accuracy at 37°C (98.6°F) with reference                                                                                                                    |
| <b>Alarm</b>                        |                                                                                                                                                                           |
| Color alarm (isotherm)              | <ul style="list-style-type: none"> <li>• Above</li> <li>• Below</li> <li>• Interval</li> <li>• Condensation (moisture/humidity/dewpoint)</li> <li>• Insulation</li> </ul> |
| Measurement function alarm          | Audible/visual alarms (above/below) on any selected measurement function                                                                                                  |
| <b>Set-up</b>                       |                                                                                                                                                                           |
| Color palettes                      | <ul style="list-style-type: none"> <li>• Iron</li> <li>• Gray</li> <li>• Rainbow</li> <li>• Arctic</li> <li>• Lava</li> <li>• Rainbow HC</li> </ul>                       |
| Setup commands                      | Local adaptation of units, language, date, and time formats                                                                                                               |
| Languages                           | 21                                                                                                                                                                        |
| <b>Service functions</b>            |                                                                                                                                                                           |
| Camera software update              | Use PC software FLIR Tools                                                                                                                                                |
| <b>Storage of images</b>            |                                                                                                                                                                           |
| Storage media                       | Removable memory: SD card                                                                                                                                                 |
| Time lapse (Periodic image storage) | 10 seconds to 24 hours (infrared)                                                                                                                                         |
| Remote control operation            | <ul style="list-style-type: none"> <li>• Using FLIR Tools (using USB cable)</li> <li>• FLIR Tools Mobile (over Wi-Fi)</li> </ul>                                          |
| Image file format                   | Standard JPEG, measurement data included. Infrared-only mode                                                                                                              |
| <b>Image annotations</b>            |                                                                                                                                                                           |
| Voice                               | 60 seconds with built-in microphone and speaker (and via Bluetooth) on still images and video                                                                             |
| Text                                | Text from predefined list or soft keyboard on touchscreen                                                                                                                 |
| Visual image annotation             | Yes                                                                                                                                                                       |
| Image sketch                        | Yes: on infrared only                                                                                                                                                     |
| Sketch                              | From touchscreen                                                                                                                                                          |
| METERLiNK                           | Wireless connection (Bluetooth) to:<br>FLIR meters with METERLiNK                                                                                                         |
| Area measurement information        | Yes                                                                                                                                                                       |
| GPS                                 | Location data automatically added to every still image and first frame in video from built-in GPS                                                                         |

|                                                                                   |                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Video recording in camera</b>                                                  |                                                                                                                                                                                                                  |
| Radiometric infrared-video recording                                              | RTRR (.csq)                                                                                                                                                                                                      |
| Non-radiometric infrared-video recording                                          | H.264 to memory card                                                                                                                                                                                             |
| Visual video recording                                                            | H.264 to memory card                                                                                                                                                                                             |
| <b>Video streaming</b>                                                            |                                                                                                                                                                                                                  |
| Radiometric infrared-video streaming (compressed)                                 | Over UVC                                                                                                                                                                                                         |
| Non-radiometric video streaming (compressed: IR, MSX, visual, Picture in Picture) | <ul style="list-style-type: none"> <li>• H.264 (AVC) over RTSP (Wi-Fi)</li> <li>• MPEG4 over RTSP (Wi-Fi)</li> <li>• MJPEG over UVC and RTSP (Wi-Fi)</li> </ul>                                                  |
| Visual video streaming                                                            | Yes                                                                                                                                                                                                              |
| <b>Digital camera</b>                                                             |                                                                                                                                                                                                                  |
| Resolution                                                                        | 5 MP with LED light                                                                                                                                                                                              |
| Focus                                                                             | Fixed                                                                                                                                                                                                            |
| Field of view                                                                     | 53° × 41°                                                                                                                                                                                                        |
| Video lamp                                                                        | Built-in LED light                                                                                                                                                                                               |
| <b>Laser pointer</b>                                                              |                                                                                                                                                                                                                  |
| Laser alignment                                                                   | Position is automatically displayed on the infrared image                                                                                                                                                        |
| Laser distance meter                                                              | Activated by dedicated button                                                                                                                                                                                    |
| Laser                                                                             | Class 2, 0.05–40 m (0.16–131 ft.) ±1% of measured distance                                                                                                                                                       |
| <b>Data communication interfaces</b>                                              |                                                                                                                                                                                                                  |
| Interfaces                                                                        | USB 2.0, Bluetooth, Wi-Fi, DisplayPort                                                                                                                                                                           |
| METERLiNK/Bluetooth                                                               | Communication with headset and external sensors                                                                                                                                                                  |
| Wi-Fi                                                                             | Peer to peer (ad hoc) or infrastructure (network)                                                                                                                                                                |
| Audio                                                                             | Microphone and speaker for voice annotation of images                                                                                                                                                            |
| USB                                                                               | USB Type-C: data transfer/video/power                                                                                                                                                                            |
| USB standard                                                                      | USB 2.0 High Speed                                                                                                                                                                                               |
| Video out                                                                         | DisplayPort                                                                                                                                                                                                      |
| Video connector type                                                              | DisplayPort over USB Type-C                                                                                                                                                                                      |
| <b>Radio</b>                                                                      |                                                                                                                                                                                                                  |
| Operating frequency                                                               | Bluetooth + EDR/LE: 2402–2480 MHz<br>WLAN 2.4 GHz: 2412–2462 MHz<br>WLAN 5 GHz: 5150–5350 MHz (DFS: only slave mode)<br>Note that frequency band 5150–5350 MHz is for indoor use only, see national regulations. |
| RF output (EIRP)                                                                  | Bluetooth + EDR/LE: < 10 dBm<br>WLAN: < 17 dBm                                                                                                                                                                   |
| Antenna                                                                           | Integrated PIFA antenna (gain: maximum 1.4 dBi)                                                                                                                                                                  |

|                                       |                                                                                                                                                                                                                                    |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power system</b>                   |                                                                                                                                                                                                                                    |
| Battery type                          | Rechargeable Li-ion battery                                                                                                                                                                                                        |
| Battery voltage                       | 3.6 V                                                                                                                                                                                                                              |
| Battery operating time                | > 4 hours at 25°C (68°F) with typical use                                                                                                                                                                                          |
| Charging system                       | In camera (AC adapter or 12 V from a vehicle) or two-bay charger                                                                                                                                                                   |
| Charging time (using two-bay charger) | 3.5 h to 90% capacity, on-screen indicator                                                                                                                                                                                         |
| Charging temperature                  | 0°C to +45°C (+32°F to +113°F), except for the Korean market: +10°C to +45°C (+50°F to +113°F)                                                                                                                                     |
| External power operation              | AC adapter 90–260 V AC (50/60 Hz) or 12 V from a vehicle (cable with standard plug, optional)                                                                                                                                      |
| Power management                      | Automatic shut-down and sleep mode                                                                                                                                                                                                 |
| <b>Environmental data</b>             |                                                                                                                                                                                                                                    |
| Operating temperature range           | –15 to +50°C (5–122°F)                                                                                                                                                                                                             |
| Storage temperature range             | –40 to +70°C (–40 to 158°F)                                                                                                                                                                                                        |
| Humidity (operating and storage)      | IEC 60068-2-30/24 hours, 95% relative humidity, 25–40°C (77–104°F)/2 cycles                                                                                                                                                        |
| EMC                                   | <ul style="list-style-type: none"> <li>• ETSI EN 301 489-1 (radio)</li> <li>• ETSI EN 301 489-17</li> <li>• EN 61000-6-2 (immunity)</li> <li>• EN 61000-6-3 (emission)</li> <li>• FCC 47 CFR Part 15 Class B (emission)</li> </ul> |
| Radio spectrum                        | <ul style="list-style-type: none"> <li>• ETSI EN 300 228</li> <li>• FCC Part 15.249</li> <li>• RSS-247 Issue 2</li> </ul>                                                                                                          |
| Encapsulation                         | IP 54 (IEC 60529)                                                                                                                                                                                                                  |
| Shock                                 | 25g (IEC 60068-2-27)                                                                                                                                                                                                               |
| Vibration                             | 2g (IEC 60068-2-6)                                                                                                                                                                                                                 |
| Safety                                | EN/UL/CSA/PSE 60950-1                                                                                                                                                                                                              |
| <b>Physical data</b>                  |                                                                                                                                                                                                                                    |
| Weight (including battery)            | 1.3 kg (2.9 lb.)                                                                                                                                                                                                                   |
| Size (L × W × H)                      | <ul style="list-style-type: none"> <li>• Lens vertical: 140 × 201.3 × 84.1 mm (5.5 × 7.9 × 3.3 in.)</li> <li>• Lens horizontal: 140 × 201.3 × 167.3 mm (5.5 × 7.9 × 6.6 in.)</li> </ul>                                            |
| Battery weight                        | 195 g (6.89 oz.)                                                                                                                                                                                                                   |
| Battery size (L × W × H)              | 59 × 66 × 94 mm (2.3 × 2.6 × 3.7 in.)                                                                                                                                                                                              |
| Tripod mounting                       | UNC ¼"-20                                                                                                                                                                                                                          |
| Housing material                      | PCABS with TPE, magnesium                                                                                                                                                                                                          |
| Color                                 | Black                                                                                                                                                                                                                              |
| <b>Warranty and service</b>           |                                                                                                                                                                                                                                    |
| Warranty                              | <a href="http://www.flir.com/warranty/">http://www.flir.com/warranty/</a>                                                                                                                                                          |

| Shipping information |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Packaging, type      | Cardboard box                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Packaging, contents  | <ul style="list-style-type: none"> <li>Accessory box I: <ul style="list-style-type: none"> <li>Power supply for battery charger</li> <li>Power supply, 15 W/3 A</li> <li>Printed documentation</li> <li>SD card (8 GB)</li> <li>USB 2.0 A to USB Type-C cable</li> <li>USB Type-C to HDMI and PD adapter</li> <li>USB Type-C to USB Type-C cable (USB 2.0 standard)</li> </ul> </li> <li>Accessory box II: <ul style="list-style-type: none"> <li>Lens cap strap</li> <li>Lens cleaning cloth</li> <li>Neck strap</li> </ul> </li> <li>Battery (2 ea)</li> <li>Battery charger</li> <li>Extra lens, 14°</li> <li>Hard transport case</li> <li>Infrared camera with lens</li> <li>Lens cap, front</li> <li>Lens cap, front and rear (only for extra lenses)</li> </ul> |
| Packaging, weight    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Packaging, size      | 500 × 190 × 370 mm (19.7 × 7.5 × 14.6 in.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| EAN-13               | 4743254003255                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| UPC-12               | 845188014711                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Country of origin    | Sweden and/or Estonia                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

#### Supplies and accessories:

- T198495; Pouch
- T197771ACC; Bluetooth Headset
- T130337ACC; Calibration target
- T199588; Lens 14° + case
- T199589; Lens 24° + case
- T199590; Lens 42° + case
- T911630ACC; Power supply for camera, 15 W/3 A
- T911631ACC; USB 2.0 A to USB Type-C cable, 0.9 m
- T911633ACC; Power supply for battery charger
- T911705ACC; USB Type-C to USB Type-C cable (USB 2.0 standard), 1.0 m
- T911706ACC; Car adapter 12 V
- T911845ACC; USB Type-C to HDMI and PD adapter
- T911846ACC; USB 2.0 A to USB Type-C with Power supply
- T199300ACC; Battery
- T199610; Battery charger
- T199601; Hand strap and neck strap
- T199347ACC; Hard transport case
- T199616; Option, High temperature, +300 to +1200°C
- T199609; Option, Macro mode 71/103 µm for 24°
- T300030; Option, No radio
- T198583; FLIR Tools+ (download card incl. license key)
- T198696; FLIR ResearchIR Max 4 (hardware sec. dev.)
- T199013; FLIR ResearchIR Max 4 (printed license key)
- T199043; FLIR ResearchIR Max 4 Upgrade (printed license key)
- INST-EW-0145; Extended Warranty 1 Year for T530



- 
- INST-EWGM-0155; Premium Service Package for A3xx, T4xx mkII, T530
  - INST-GM-0140; General Maintenance Package for T530

## 27.11 FLIR T540 14°

P/N: 79301-0201

Rev.: 53840

|                                           |                                                                                                                                           |
|-------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Imaging and optical data</b>           |                                                                                                                                           |
| Infrared resolution                       | 464 × 348 pixels                                                                                                                          |
| UltraMax (super-resolution) <sup>13</sup> | In FLIR Tools                                                                                                                             |
| NETD                                      | <50 mK @ +30°C (+86°F)                                                                                                                    |
| Field of view                             | 14° × 10°                                                                                                                                 |
| Minimum focus distance                    | 1.0 m (3.28 ft.)                                                                                                                          |
| Minimum focus distance with MSX           | 1.0 m (3.28 ft.)                                                                                                                          |
| Focal length                              | 29 mm (1.41 in.)                                                                                                                          |
| Spatial resolution (IFOV)                 | 0.52 mrad/pixel                                                                                                                           |
| Available extra lenses                    | <ul style="list-style-type: none"> <li>• 42°</li> <li>• 24°</li> </ul>                                                                    |
| Lens identification                       | Automatic                                                                                                                                 |
| f number                                  | 1.5                                                                                                                                       |
| Image frequency                           | 30 Hz                                                                                                                                     |
| Focus                                     | <ul style="list-style-type: none"> <li>• Continuous LDM</li> <li>• One-shot LDM</li> <li>• One-shot contrast</li> <li>• Manual</li> </ul> |
| Field of view match                       | Yes                                                                                                                                       |
| Digital zoom                              | 1–6× continuous                                                                                                                           |
| <b>Detector data</b>                      |                                                                                                                                           |
| Focal plane array/spectral range          | Uncooled microbolometer/7.5–14 µm                                                                                                         |
| Detector pitch                            | 17 µm                                                                                                                                     |
| <b>Image presentation</b>                 |                                                                                                                                           |
| Resolution                                | 640 × 480 pixels (VGA)                                                                                                                    |
| Surface brightness (cd/m²)                | 400                                                                                                                                       |
| Screen size                               | 4 in.                                                                                                                                     |
| Viewing angle                             | 80°                                                                                                                                       |
| Color depth (bits)                        | 24                                                                                                                                        |
| Aspect ratio                              | 4:3                                                                                                                                       |
| Auto-rotation                             | Yes                                                                                                                                       |
| Touchscreen                               | Optically bonded PCAP                                                                                                                     |
| Display technology                        | IPS                                                                                                                                       |
| Cover glass material                      | Dragontrail®                                                                                                                              |
| Programmable buttons                      | 2                                                                                                                                         |

13. Not supported when using macro.

|                                    |                                                                                                                                                                                |                                                                |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|
| Image presentation                 |                                                                                                                                                                                |                                                                |
| Viewfinder                         | No                                                                                                                                                                             |                                                                |
| Image adjustment                   | <ul style="list-style-type: none"><li>• Automatic</li><li>• Automatic maximum</li><li>• Automatic minimum</li><li>• Manual</li></ul>                                           |                                                                |
| Image presentation modes           |                                                                                                                                                                                |                                                                |
| Infrared image                     | Yes                                                                                                                                                                            |                                                                |
| Visual image                       | Yes                                                                                                                                                                            |                                                                |
| MSX                                | Yes                                                                                                                                                                            |                                                                |
| Picture in picture                 | Resizable and movable                                                                                                                                                          |                                                                |
| Gallery                            | Yes                                                                                                                                                                            |                                                                |
| Measurement                        |                                                                                                                                                                                |                                                                |
| Camera temperature range           | Object temperature range                                                                                                                                                       | Accuracy — for ambient temperature +15 to +35°C (+59 to +95°F) |
| -20 to +120°C (-4 to +248°F)       | -20 to +100°C (-4 to +212°F)                                                                                                                                                   | ±2°C (±3.6°F)                                                  |
|                                    | +100 to +120°C (+212 to +248°F)                                                                                                                                                | ±2%                                                            |
| 0 to +650°C (+32 to +1202°F)       | 0 to +100°C (+32 to +212°F)                                                                                                                                                    | ±2°C (±3.6°F)                                                  |
|                                    | +100 to + 650°C (+212 to +1202°F)                                                                                                                                              | ±2%                                                            |
| +300 to +1500°C (+572 to +2732°F)  | +300 to +1500°C (+572 to +2732°F)                                                                                                                                              | ±2%                                                            |
| Measurement analysis               |                                                                                                                                                                                |                                                                |
| Spotmeter                          | 3 in live mode                                                                                                                                                                 |                                                                |
| Area                               | 3 in live mode                                                                                                                                                                 |                                                                |
| Automatic hot/cold detection       | Automatic maximum/minimum markers within area                                                                                                                                  |                                                                |
| Measurement presets                | <ul style="list-style-type: none"><li>• No measurements</li><li>• Center spot</li><li>• Hot spot</li><li>• Cold spot</li><li>• User preset 1</li><li>• User preset 2</li></ul> |                                                                |
| Difference temperature             | Yes                                                                                                                                                                            |                                                                |
| Reference temperature              | Yes                                                                                                                                                                            |                                                                |
| Emissivity correction              | Yes, variable from 0.01 to 1.0 or selected from materials list                                                                                                                 |                                                                |
| Measurement corrections            | Yes                                                                                                                                                                            |                                                                |
| External optics/windows correction | Yes                                                                                                                                                                            |                                                                |
| Screening                          | 0.5°C (0.9°F) accuracy at 37°C (98.6°F) with reference                                                                                                                         |                                                                |

|                                          |                                                                                                                                                                           |
|------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Alarm</b>                             |                                                                                                                                                                           |
| Color alarm (isotherm)                   | <ul style="list-style-type: none"> <li>• Above</li> <li>• Below</li> <li>• Interval</li> <li>• Condensation (moisture/humidity/dewpoint)</li> <li>• Insulation</li> </ul> |
| Measurement function alarm               | Audible/visual alarms (above/below) on any selected measurement function                                                                                                  |
| <b>Set-up</b>                            |                                                                                                                                                                           |
| Color palettes                           | <ul style="list-style-type: none"> <li>• Iron</li> <li>• Gray</li> <li>• Rainbow</li> <li>• Arctic</li> <li>• Lava</li> <li>• Rainbow HC</li> </ul>                       |
| Setup commands                           | Local adaptation of units, language, date, and time formats                                                                                                               |
| Languages                                | 21                                                                                                                                                                        |
| <b>Service functions</b>                 |                                                                                                                                                                           |
| Camera software update                   | Use PC software FLIR Tools                                                                                                                                                |
| <b>Storage of images</b>                 |                                                                                                                                                                           |
| Storage media                            | Removable memory: SD card                                                                                                                                                 |
| Time lapse (Periodic image storage)      | 10 seconds to 24 hours (infrared)                                                                                                                                         |
| Remote control operation                 | <ul style="list-style-type: none"> <li>• Using FLIR Tools (using USB cable)</li> <li>• FLIR Tools Mobile (over Wi-Fi)</li> </ul>                                          |
| Image file format                        | Standard JPEG, measurement data included. Infrared-only mode                                                                                                              |
| <b>Image annotations</b>                 |                                                                                                                                                                           |
| Voice                                    | 60 seconds with built-in microphone and speaker (and via Bluetooth) on still images and video                                                                             |
| Text                                     | Text from predefined list or soft keyboard on touchscreen                                                                                                                 |
| Visual image annotation                  | Yes                                                                                                                                                                       |
| Image sketch                             | Yes: on infrared only                                                                                                                                                     |
| Sketch                                   | From touchscreen                                                                                                                                                          |
| METERLiNK                                | Wireless connection (Bluetooth) to:<br>FLIR meters with METERLiNK                                                                                                         |
| Area measurement information             | Yes                                                                                                                                                                       |
| GPS                                      | Location data automatically added to every still image and first frame in video from built-in GPS                                                                         |
| <b>Video recording in camera</b>         |                                                                                                                                                                           |
| Radiometric infrared-video recording     | RTRR (.csq)                                                                                                                                                               |
| Non-radiometric infrared-video recording | H.264 to memory card                                                                                                                                                      |
| Visual video recording                   | H.264 to memory card                                                                                                                                                      |

|                                                                                   |                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Video streaming</b>                                                            |                                                                                                                                                                                                                  |
| Radiometric infrared-video streaming (compressed)                                 | Over UVC                                                                                                                                                                                                         |
| Non-radiometric video streaming (compressed: IR, MSX, visual, Picture in Picture) | <ul style="list-style-type: none"> <li>• H.264 (AVC) over RTSP (Wi-Fi)</li> <li>• MPEG4 over RTSP (Wi-Fi)</li> <li>• MJPEG over UVC and RTSP (Wi-Fi)</li> </ul>                                                  |
| Visual video streaming                                                            | Yes                                                                                                                                                                                                              |
| <b>Digital camera</b>                                                             |                                                                                                                                                                                                                  |
| Resolution                                                                        | 5 MP with LED light                                                                                                                                                                                              |
| Focus                                                                             | Fixed                                                                                                                                                                                                            |
| Field of view                                                                     | 53° × 41°                                                                                                                                                                                                        |
| Video lamp                                                                        | Built-in LED light                                                                                                                                                                                               |
| <b>Laser pointer</b>                                                              |                                                                                                                                                                                                                  |
| Laser alignment                                                                   | Position is automatically displayed on the infrared image                                                                                                                                                        |
| Laser distance meter                                                              | Activated by dedicated button                                                                                                                                                                                    |
| Laser                                                                             | Class 2, 0.05–40 m (0.16–131 ft.) ±1% of measured distance                                                                                                                                                       |
| <b>Data communication interfaces</b>                                              |                                                                                                                                                                                                                  |
| Interfaces                                                                        | USB 2.0, Bluetooth, Wi-Fi, DisplayPort                                                                                                                                                                           |
| METERLiNK/Bluetooth                                                               | Communication with headset and external sensors                                                                                                                                                                  |
| Wi-Fi                                                                             | Peer to peer (ad hoc) or infrastructure (network)                                                                                                                                                                |
| Audio                                                                             | Microphone and speaker for voice annotation of images                                                                                                                                                            |
| USB                                                                               | USB Type-C: data transfer/video/power                                                                                                                                                                            |
| USB standard                                                                      | USB 2.0 High Speed                                                                                                                                                                                               |
| Video out                                                                         | DisplayPort                                                                                                                                                                                                      |
| Video connector type                                                              | DisplayPort over USB Type-C                                                                                                                                                                                      |
| <b>Radio</b>                                                                      |                                                                                                                                                                                                                  |
| Operating frequency                                                               | Bluetooth + EDR/LE: 2402–2480 MHz<br>WLAN 2.4 GHz: 2412–2462 MHz<br>WLAN 5 GHz: 5150–5350 MHz (DFS: only slave mode)<br>Note that frequency band 5150–5350 MHz is for indoor use only, see national regulations. |
| RF output (EIRP)                                                                  | Bluetooth + EDR/LE: < 10 dBm<br>WLAN: < 17 dBm                                                                                                                                                                   |
| Antenna                                                                           | Integrated PIFA antenna (gain: maximum 1.4 dBi)                                                                                                                                                                  |
| <b>Power system</b>                                                               |                                                                                                                                                                                                                  |
| Battery type                                                                      | Rechargeable Li-ion battery                                                                                                                                                                                      |
| Battery voltage                                                                   | 3.6 V                                                                                                                                                                                                            |
| Battery operating time                                                            | > 4 hours at 25°C (68°F) with typical use                                                                                                                                                                        |

|                                       |                                                                                                                                                                                                                                    |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power system</b>                   |                                                                                                                                                                                                                                    |
| Charging system                       | In camera (AC adapter or 12 V from a vehicle) or two-bay charger                                                                                                                                                                   |
| Charging time (using two-bay charger) | 3.5 h to 90% capacity, on-screen indicator                                                                                                                                                                                         |
| Charging temperature                  | 0°C to +45°C (+32°F to +113°F), except for the Korean market: +10°C to +45°C (+50°F to +113°F)                                                                                                                                     |
| External power operation              | AC adapter 90–260 V AC (50/60 Hz) or 12 V from a vehicle (cable with standard plug, optional)                                                                                                                                      |
| Power management                      | Automatic shut-down and sleep mode                                                                                                                                                                                                 |
| <b>Environmental data</b>             |                                                                                                                                                                                                                                    |
| Operating temperature range           | –15 to +50°C (5–122°F)                                                                                                                                                                                                             |
| Storage temperature range             | –40 to +70°C (–40 to 158°F)                                                                                                                                                                                                        |
| Humidity (operating and storage)      | IEC 60068-2-30/24 hours, 95% relative humidity, 25–40°C (77–104°F)/2 cycles                                                                                                                                                        |
| EMC                                   | <ul style="list-style-type: none"> <li>• ETSI EN 301 489-1 (radio)</li> <li>• ETSI EN 301 489-17</li> <li>• EN 61000-6-2 (immunity)</li> <li>• EN 61000-6-3 (emission)</li> <li>• FCC 47 CFR Part 15 Class B (emission)</li> </ul> |
| Radio spectrum                        | <ul style="list-style-type: none"> <li>• ETSI EN 300 228</li> <li>• FCC Part 15.249</li> <li>• RSS-247 Issue 2</li> </ul>                                                                                                          |
| Encapsulation                         | IP 54 (IEC 60529)                                                                                                                                                                                                                  |
| Shock                                 | 25g (IEC 60068-2-27)                                                                                                                                                                                                               |
| Vibration                             | 2g (IEC 60068-2-6)                                                                                                                                                                                                                 |
| Safety                                | EN/UL/CSA/PSE 60950-1                                                                                                                                                                                                              |
| <b>Physical data</b>                  |                                                                                                                                                                                                                                    |
| Weight (including battery)            | 1.3 kg (2.9 lb.)                                                                                                                                                                                                                   |
| Size (L × W × H)                      | <ul style="list-style-type: none"> <li>• Lens vertical: 140 × 201.3 × 84.1 mm (5.5 × 7.9 × 3.3 in.)</li> <li>• Lens horizontal: 140 × 201.3 × 167.3 mm (5.5 × 7.9 × 6.6 in.)</li> </ul>                                            |
| Battery weight                        | 195 g (6.89 oz.)                                                                                                                                                                                                                   |
| Battery size (L × W × H)              | 59 × 66 × 94 mm (2.3 × 2.6 × 3.7 in.)                                                                                                                                                                                              |
| Tripod mounting                       | UNC ¼"-20                                                                                                                                                                                                                          |
| Housing material                      | PCABS with TPE, magnesium                                                                                                                                                                                                          |
| Color                                 | Black                                                                                                                                                                                                                              |
| <b>Warranty and service</b>           |                                                                                                                                                                                                                                    |
| Warranty                              | <a href="http://www.flir.com/warranty/">http://www.flir.com/warranty/</a>                                                                                                                                                          |

| Shipping information |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Packaging, type      | Cardboard box                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Packaging, contents  | <ul style="list-style-type: none"> <li>Accessory box I: <ul style="list-style-type: none"> <li>Power supply for battery charger</li> <li>Power supply, 15 W/3 A</li> <li>Printed documentation</li> <li>SD card (8 GB)</li> <li>USB 2.0 A to USB Type-C cable</li> <li>USB Type-C to HDMI and PD adapter</li> <li>USB Type-C to USB Type-C cable (USB 2.0 standard)</li> </ul> </li> <li>Accessory box II: <ul style="list-style-type: none"> <li>Lens cap strap</li> <li>Lens cleaning cloth</li> <li>Neck strap</li> </ul> </li> <li>Battery (2 ea)</li> <li>Battery charger</li> <li>Hard transport case</li> <li>Infrared camera with lens</li> <li>Lens cap, front</li> <li>Lens cap, front and rear (only for extra lenses)</li> </ul> |
| Packaging, weight    | 5.8 kg (12.8 lb.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Packaging, size      | 500 × 190 × 370 mm (19.7 × 7.5 × 14.6 in.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| EAN-13               | <ul style="list-style-type: none"> <li>Sweden: 7332558014707</li> <li>Estonia: 4743254003859</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| UPC-12               | 845188016807                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Country of origin    | Sweden and/or Estonia                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

#### Supplies and accessories:

- T198495; Pouch
- T197771ACC; Bluetooth Headset
- T130337ACC; Calibration target
- T199588; Lens 14° + case
- T199589; Lens 24° + case
- T199590; Lens 42° + case
- T911630ACC; Power supply for camera, 15 W/3 A
- T911631ACC; USB 2.0 A to USB Type-C cable, 0.9 m
- T911633ACC; Power supply for battery charger
- T911705ACC; USB Type-C to USB Type-C cable (USB 2.0 standard), 1.0 m
- T911706ACC; Car adapter 12 V
- T911845ACC; USB Type-C to HDMI and PD adapter
- T911846ACC; USB 2.0 A to USB Type-C with Power supply
- T199300ACC; Battery
- T199610; Battery charger
- T199601; Hand strap and neck strap
- T199347ACC; Hard transport case
- T199609; Option, Macro mode 71/103 µm for 24°
- T300030; Option, No radio
- T198583; FLIR Tools+ (download card incl. license key)
- T198696; FLIR ResearchIR Max 4 (hardware sec. dev.)
- T199013; FLIR ResearchIR Max 4 (printed license key)
- T199043; FLIR ResearchIR Max 4 Upgrade (printed license key)
- INST-EW-0155; Extended Warranty 1 Year for A3xxf, T540, T600/bx, T610

- 
- INST-EWGM-0165; Premium Service Package for T540, T600/bx, T610
  - INST-GM-0150; General Maintenance Package for T540, T6xx



## 27.12 FLIR T540 24°

P/N: 79302-0201

Rev.: 53839

| Imaging and optical data                  |                                                                                                                                   |
|-------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Infrared resolution                       | 464 × 348 pixels                                                                                                                  |
| UltraMax (super-resolution) <sup>14</sup> | In FLIR Tools                                                                                                                     |
| NETD                                      | <40 mK @ +30°C (+86°F)                                                                                                            |
| Field of view                             | 24° × 18°                                                                                                                         |
| Minimum focus distance                    | <ul style="list-style-type: none"> <li>0.15 m (0.49 ft.)</li> <li>Macro mode 103 µm as option</li> </ul>                          |
| Minimum focus distance with MSX           | 0.5 m (1.64 ft.)                                                                                                                  |
| Focal length                              | 17 mm (0.67 in.)                                                                                                                  |
| Spatial resolution (IFOV)                 | 0.90 mrad/pixel                                                                                                                   |
| Available extra lenses                    | <ul style="list-style-type: none"> <li>42°</li> <li>14°</li> </ul>                                                                |
| Lens identification                       | Automatic                                                                                                                         |
| f number                                  | 1.3                                                                                                                               |
| Image frequency                           | 30 Hz                                                                                                                             |
| Focus                                     | <ul style="list-style-type: none"> <li>Continuous LDM</li> <li>One-shot LDM</li> <li>One-shot contrast</li> <li>Manual</li> </ul> |
| Field of view match                       | Yes                                                                                                                               |
| Digital zoom                              | 1–6× continuous                                                                                                                   |
| Detector data                             |                                                                                                                                   |
| Focal plane array/spectral range          | Uncooled microbolometer/7.5–14 µm                                                                                                 |
| Detector pitch                            | 17 µm                                                                                                                             |
| Image presentation                        |                                                                                                                                   |
| Resolution                                | 640 × 480 pixels (VGA)                                                                                                            |
| Surface brightness (cd/m²)                | 400                                                                                                                               |
| Screen size                               | 4 in.                                                                                                                             |
| Viewing angle                             | 80°                                                                                                                               |
| Color depth (bits)                        | 24                                                                                                                                |
| Aspect ratio                              | 4:3                                                                                                                               |
| Auto-rotation                             | Yes                                                                                                                               |
| Touchscreen                               | Optically bonded PCAP                                                                                                             |
| Display technology                        | IPS                                                                                                                               |
| Cover glass material                      | Dragontrail®                                                                                                                      |

14. Not supported when using macro.

|                                    |                                                                                                                                                                                |                                                                |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|
| Image presentation                 |                                                                                                                                                                                |                                                                |
| Programmable buttons               | 2                                                                                                                                                                              |                                                                |
| Viewfinder                         | No                                                                                                                                                                             |                                                                |
| Image adjustment                   | <ul style="list-style-type: none"><li>• Automatic</li><li>• Automatic maximum</li><li>• Automatic minimum</li><li>• Manual</li></ul>                                           |                                                                |
|                                    |                                                                                                                                                                                |                                                                |
| Image presentation modes           |                                                                                                                                                                                |                                                                |
| Infrared image                     | Yes                                                                                                                                                                            |                                                                |
| Visual image                       | Yes                                                                                                                                                                            |                                                                |
| MSX                                | Yes                                                                                                                                                                            |                                                                |
| Picture in picture                 | Resizable and movable                                                                                                                                                          |                                                                |
| Gallery                            | Yes                                                                                                                                                                            |                                                                |
|                                    |                                                                                                                                                                                |                                                                |
| Measurement                        |                                                                                                                                                                                |                                                                |
| Camera temperature range           | Object temperature range                                                                                                                                                       | Accuracy — for ambient temperature +15 to +35°C (+59 to +95°F) |
| -20 to +120°C (-4 to +248°F)       | -20 to +100°C (-4 to +212°F)                                                                                                                                                   | ±2°C (±3.6°F)                                                  |
|                                    | +100 to +120°C (+212 to +248°F)                                                                                                                                                | ±2%                                                            |
| 0 to +650°C (+32 to +1202°F)       | 0 to +100°C (+32 to +212°F)                                                                                                                                                    | ±2°C (±3.6°F)                                                  |
|                                    | +100 to +650°C (+212 to +1202°F)                                                                                                                                               | ±2%                                                            |
| +300 to +1500°C (+572 to +2732°F)  | +300 to +1500°C (+572 to +2732°F)                                                                                                                                              | ±2%                                                            |
|                                    |                                                                                                                                                                                |                                                                |
| Measurement analysis               |                                                                                                                                                                                |                                                                |
| Spotmeter                          | 3 in live mode                                                                                                                                                                 |                                                                |
| Area                               | 3 in live mode                                                                                                                                                                 |                                                                |
| Automatic hot/cold detection       | Automatic maximum/minimum markers within area                                                                                                                                  |                                                                |
| Measurement presets                | <ul style="list-style-type: none"><li>• No measurements</li><li>• Center spot</li><li>• Hot spot</li><li>• Cold spot</li><li>• User preset 1</li><li>• User preset 2</li></ul> |                                                                |
| Difference temperature             | Yes                                                                                                                                                                            |                                                                |
| Reference temperature              | Yes                                                                                                                                                                            |                                                                |
| Emissivity correction              | Yes, variable from 0.01 to 1.0 or selected from materials list                                                                                                                 |                                                                |
| Measurement corrections            | Yes                                                                                                                                                                            |                                                                |
| External optics/windows correction | Yes                                                                                                                                                                            |                                                                |
| Screening                          | 0.5°C (0.9°F) accuracy at 37°C (98.6°F) with reference                                                                                                                         |                                                                |

|                                          |                                                                                                                                                                           |
|------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Alarm</b>                             |                                                                                                                                                                           |
| Color alarm (isotherm)                   | <ul style="list-style-type: none"> <li>• Above</li> <li>• Below</li> <li>• Interval</li> <li>• Condensation (moisture/humidity/dewpoint)</li> <li>• Insulation</li> </ul> |
| Measurement function alarm               | Audible/visual alarms (above/below) on any selected measurement function                                                                                                  |
| <b>Set-up</b>                            |                                                                                                                                                                           |
| Color palettes                           | <ul style="list-style-type: none"> <li>• Iron</li> <li>• Gray</li> <li>• Rainbow</li> <li>• Arctic</li> <li>• Lava</li> <li>• Rainbow HC</li> </ul>                       |
| Setup commands                           | Local adaptation of units, language, date, and time formats                                                                                                               |
| Languages                                | 21                                                                                                                                                                        |
| <b>Service functions</b>                 |                                                                                                                                                                           |
| Camera software update                   | Use PC software FLIR Tools                                                                                                                                                |
| <b>Storage of images</b>                 |                                                                                                                                                                           |
| Storage media                            | Removable memory: SD card                                                                                                                                                 |
| Time lapse (Periodic image storage)      | 10 seconds to 24 hours (infrared)                                                                                                                                         |
| Remote control operation                 | <ul style="list-style-type: none"> <li>• Using FLIR Tools (using USB cable)</li> <li>• FLIR Tools Mobile (over Wi-Fi)</li> </ul>                                          |
| Image file format                        | Standard JPEG, measurement data included. Infrared-only mode                                                                                                              |
| <b>Image annotations</b>                 |                                                                                                                                                                           |
| Voice                                    | 60 seconds with built-in microphone and speaker (and via Bluetooth) on still images and video                                                                             |
| Text                                     | Text from predefined list or soft keyboard on touchscreen                                                                                                                 |
| Visual image annotation                  | Yes                                                                                                                                                                       |
| Image sketch                             | Yes: on infrared only                                                                                                                                                     |
| Sketch                                   | From touchscreen                                                                                                                                                          |
| METERLiNK                                | Wireless connection (Bluetooth) to:<br>FLIR meters with METERLiNK                                                                                                         |
| Area measurement information             | Yes                                                                                                                                                                       |
| GPS                                      | Location data automatically added to every still image and first frame in video from built-in GPS                                                                         |
| <b>Video recording in camera</b>         |                                                                                                                                                                           |
| Radiometric infrared-video recording     | RTRR (.csq)                                                                                                                                                               |
| Non-radiometric infrared-video recording | H.264 to memory card                                                                                                                                                      |
| Visual video recording                   | H.264 to memory card                                                                                                                                                      |

|                                                                                   |                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Video streaming</b>                                                            |                                                                                                                                                                                                                  |
| Radiometric infrared-video streaming (compressed)                                 | Over UVC                                                                                                                                                                                                         |
| Non-radiometric video streaming (compressed: IR, MSX, visual, Picture in Picture) | <ul style="list-style-type: none"> <li>• H.264 (AVC) over RTSP (Wi-Fi)</li> <li>• MPEG4 over RTSP (Wi-Fi)</li> <li>• MJPEG over UVC and RTSP (Wi-Fi)</li> </ul>                                                  |
| Visual video streaming                                                            | Yes                                                                                                                                                                                                              |
| <b>Digital camera</b>                                                             |                                                                                                                                                                                                                  |
| Resolution                                                                        | 5 MP with LED light                                                                                                                                                                                              |
| Focus                                                                             | Fixed                                                                                                                                                                                                            |
| Field of view                                                                     | 53° × 41°                                                                                                                                                                                                        |
| Video lamp                                                                        | Built-in LED light                                                                                                                                                                                               |
| <b>Laser pointer</b>                                                              |                                                                                                                                                                                                                  |
| Laser alignment                                                                   | Position is automatically displayed on the infrared image                                                                                                                                                        |
| Laser distance meter                                                              | Activated by dedicated button                                                                                                                                                                                    |
| Laser                                                                             | Class 2, 0.05–40 m (0.16–131 ft.) ±1% of measured distance                                                                                                                                                       |
| <b>Data communication interfaces</b>                                              |                                                                                                                                                                                                                  |
| Interfaces                                                                        | USB 2.0, Bluetooth, Wi-Fi, DisplayPort                                                                                                                                                                           |
| METERLiNK/Bluetooth                                                               | Communication with headset and external sensors                                                                                                                                                                  |
| Wi-Fi                                                                             | Peer to peer (ad hoc) or infrastructure (network)                                                                                                                                                                |
| Audio                                                                             | Microphone and speaker for voice annotation of images                                                                                                                                                            |
| USB                                                                               | USB Type-C: data transfer/video/power                                                                                                                                                                            |
| USB standard                                                                      | USB 2.0 High Speed                                                                                                                                                                                               |
| Video out                                                                         | DisplayPort                                                                                                                                                                                                      |
| Video connector type                                                              | DisplayPort over USB Type-C                                                                                                                                                                                      |
| <b>Radio</b>                                                                      |                                                                                                                                                                                                                  |
| Operating frequency                                                               | Bluetooth + EDR/LE: 2402–2480 MHz<br>WLAN 2.4 GHz: 2412–2462 MHz<br>WLAN 5 GHz: 5150–5350 MHz (DFS: only slave mode)<br>Note that frequency band 5150–5350 MHz is for indoor use only, see national regulations. |
| RF output (EIRP)                                                                  | Bluetooth + EDR/LE: < 10 dBm<br>WLAN: < 17 dBm                                                                                                                                                                   |
| Antenna                                                                           | Integrated PIFA antenna (gain: maximum 1.4 dBi)                                                                                                                                                                  |
| <b>Power system</b>                                                               |                                                                                                                                                                                                                  |
| Battery type                                                                      | Rechargeable Li-ion battery                                                                                                                                                                                      |
| Battery voltage                                                                   | 3.6 V                                                                                                                                                                                                            |
| Battery operating time                                                            | > 4 hours at 25°C (68°F) with typical use                                                                                                                                                                        |

|                                       |                                                                                                                                                                                                                                    |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power system</b>                   |                                                                                                                                                                                                                                    |
| Charging system                       | In camera (AC adapter or 12 V from a vehicle) or two-bay charger                                                                                                                                                                   |
| Charging time (using two-bay charger) | 3.5 h to 90% capacity, on-screen indicator                                                                                                                                                                                         |
| Charging temperature                  | 0°C to +45°C (+32°F to +113°F), except for the Korean market: +10°C to +45°C (+50°F to +113°F)                                                                                                                                     |
| External power operation              | AC adapter 90–260 V AC (50/60 Hz) or 12 V from a vehicle (cable with standard plug, optional)                                                                                                                                      |
| Power management                      | Automatic shut-down and sleep mode                                                                                                                                                                                                 |
| <b>Environmental data</b>             |                                                                                                                                                                                                                                    |
| Operating temperature range           | –15 to +50°C (5–122°F)                                                                                                                                                                                                             |
| Storage temperature range             | –40 to +70°C (–40 to 158°F)                                                                                                                                                                                                        |
| Humidity (operating and storage)      | IEC 60068-2-30/24 hours, 95% relative humidity, 25–40°C (77–104°F)/2 cycles                                                                                                                                                        |
| EMC                                   | <ul style="list-style-type: none"> <li>• ETSI EN 301 489-1 (radio)</li> <li>• ETSI EN 301 489-17</li> <li>• EN 61000-6-2 (immunity)</li> <li>• EN 61000-6-3 (emission)</li> <li>• FCC 47 CFR Part 15 Class B (emission)</li> </ul> |
| Radio spectrum                        | <ul style="list-style-type: none"> <li>• ETSI EN 300 228</li> <li>• FCC Part 15.249</li> <li>• RSS-247 Issue 2</li> </ul>                                                                                                          |
| Encapsulation                         | IP 54 (IEC 60529)                                                                                                                                                                                                                  |
| Shock                                 | 25g (IEC 60068-2-27)                                                                                                                                                                                                               |
| Vibration                             | 2g (IEC 60068-2-6)                                                                                                                                                                                                                 |
| Safety                                | EN/UL/CSA/PSE 60950-1                                                                                                                                                                                                              |
| <b>Physical data</b>                  |                                                                                                                                                                                                                                    |
| Weight (including battery)            | 1.3 kg (2.9 lb.)                                                                                                                                                                                                                   |
| Size (L × W × H)                      | <ul style="list-style-type: none"> <li>• Lens vertical: 140 × 201.3 × 84.1 mm (5.5 × 7.9 × 3.3 in.)</li> <li>• Lens horizontal: 140 × 201.3 × 167.3 mm (5.5 × 7.9 × 6.6 in.)</li> </ul>                                            |
| Battery weight                        | 195 g (6.89 oz.)                                                                                                                                                                                                                   |
| Battery size (L × W × H)              | 59 × 66 × 94 mm (2.3 × 2.6 × 3.7 in.)                                                                                                                                                                                              |
| Tripod mounting                       | UNC ¼"–20                                                                                                                                                                                                                          |
| Housing material                      | PCABS with TPE, magnesium                                                                                                                                                                                                          |
| Color                                 | Black                                                                                                                                                                                                                              |
| <b>Warranty and service</b>           |                                                                                                                                                                                                                                    |
| Warranty                              | <a href="http://www.flir.com/warranty/">http://www.flir.com/warranty/</a>                                                                                                                                                          |

| Shipping information |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Packaging, type      | Cardboard box                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Packaging, contents  | <ul style="list-style-type: none"> <li>Accessory box I: <ul style="list-style-type: none"> <li>Power supply for battery charger</li> <li>Power supply, 15 W/3 A</li> <li>Printed documentation</li> <li>SD card (8 GB)</li> <li>USB 2.0 A to USB Type-C cable</li> <li>USB Type-C to HDMI and PD adapter</li> <li>USB Type-C to USB Type-C cable (USB 2.0 standard)</li> </ul> </li> <li>Accessory box II: <ul style="list-style-type: none"> <li>Lens cap strap</li> <li>Lens cleaning cloth</li> <li>Neck strap</li> </ul> </li> <li>Battery (2 ea)</li> <li>Battery charger</li> <li>Hard transport case</li> <li>Infrared camera with lens</li> <li>Lens cap, front</li> <li>Lens cap, front and rear (only for extra lenses)</li> </ul> |
| Packaging, weight    | 5.8 kg (12.8 lb.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Packaging, size      | 500 × 190 × 370 mm (19.7 × 7.5 × 14.6 in.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| EAN-13               | <ul style="list-style-type: none"> <li>Sweden: 7332558012970</li> <li>Estonia: 4743254003262</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| UPC-12               | 845188014667                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Country of origin    | Sweden and/or Estonia                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

#### Supplies and accessories:

- T198495; Pouch
- T197771ACC; Bluetooth Headset
- T130337ACC; Calibration target
- T199588; Lens 14° + case
- T199589; Lens 24° + case
- T199590; Lens 42° + case
- T911630ACC; Power supply for camera, 15 W/3 A
- T911631ACC; USB 2.0 A to USB Type-C cable, 0.9 m
- T911633ACC; Power supply for battery charger
- T911705ACC; USB Type-C to USB Type-C cable (USB 2.0 standard), 1.0 m
- T911706ACC; Car adapter 12 V
- T911845ACC; USB Type-C to HDMI and PD adapter
- T911846ACC; USB 2.0 A to USB Type-C with Power supply
- T199300ACC; Battery
- T199610; Battery charger
- T199601; Hand strap and neck strap
- T199347ACC; Hard transport case
- T199609; Option, Macro mode 71/103 µm for 24°
- T300030; Option, No radio
- T198583; FLIR Tools+ (download card incl. license key)
- T198696; FLIR ResearchIR Max 4 (hardware sec. dev.)
- T199013; FLIR ResearchIR Max 4 (printed license key)
- T199043; FLIR ResearchIR Max 4 Upgrade (printed license key)
- INST-EW-0155; Extended Warranty 1 Year for A3xxf, T540, T600/bx, T610

- 
- INST-EWGM-0165; Premium Service Package for T540, T600/bx, T610
  - INST-GM-0150; General Maintenance Package for T540, T6xx

## 27.13 FLIR T540 42°

P/N: 79303-0201

Rev.: 53835

| Imaging and optical data                  |                                                                                                                                           |
|-------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Infrared resolution                       | 464 × 348 pixels                                                                                                                          |
| UltraMax (super-resolution) <sup>15</sup> | In FLIR Tools                                                                                                                             |
| NETD                                      | <30 mK @ +30°C (+86°F)                                                                                                                    |
| Field of view                             | 42° × 32°                                                                                                                                 |
| Minimum focus distance                    | 0.15 m (0.49 ft.)                                                                                                                         |
| Minimum focus distance with MSX           | 0.65 m (2.13 ft.)                                                                                                                         |
| Focal length                              | 10 mm (0.39 in.)                                                                                                                          |
| Spatial resolution (IFOV)                 | 1.66 mrad/pixel                                                                                                                           |
| Available extra lenses                    | <ul style="list-style-type: none"> <li>• 24°</li> <li>• 14°</li> </ul>                                                                    |
| Lens identification                       | Automatic                                                                                                                                 |
| f number                                  | 1.1                                                                                                                                       |
| Image frequency                           | 30 Hz                                                                                                                                     |
| Focus                                     | <ul style="list-style-type: none"> <li>• Continuous LDM</li> <li>• One-shot LDM</li> <li>• One-shot contrast</li> <li>• Manual</li> </ul> |
| Field of view match                       | Yes                                                                                                                                       |
| Digital zoom                              | 1–6× continuous                                                                                                                           |
| Detector data                             |                                                                                                                                           |
| Focal plane array/spectral range          | Uncooled microbolometer/7.5–14 μm                                                                                                         |
| Detector pitch                            | 17 μm                                                                                                                                     |
| Image presentation                        |                                                                                                                                           |
| Resolution                                | 640 × 480 pixels (VGA)                                                                                                                    |
| Surface brightness (cd/m²)                | 400                                                                                                                                       |
| Screen size                               | 4 in.                                                                                                                                     |
| Viewing angle                             | 80°                                                                                                                                       |
| Color depth (bits)                        | 24                                                                                                                                        |
| Aspect ratio                              | 4:3                                                                                                                                       |
| Auto-rotation                             | Yes                                                                                                                                       |
| Touchscreen                               | Optically bonded PCAP                                                                                                                     |
| Display technology                        | IPS                                                                                                                                       |
| Cover glass material                      | Dragontrail®                                                                                                                              |
| Programmable buttons                      | 2                                                                                                                                         |

<sup>15</sup>. Not supported when using macro.



|                                    |                                                                                                                                                                                |                                                                 |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------|
| Image presentation                 |                                                                                                                                                                                |                                                                 |
| Viewfinder                         | No                                                                                                                                                                             |                                                                 |
| Image adjustment                   | <ul style="list-style-type: none"><li>• Automatic</li><li>• Automatic maximum</li><li>• Automatic minimum</li><li>• Manual</li></ul>                                           |                                                                 |
|                                    |                                                                                                                                                                                |                                                                 |
| Image presentation modes           |                                                                                                                                                                                |                                                                 |
| Infrared image                     | Yes                                                                                                                                                                            |                                                                 |
| Visual image                       | Yes                                                                                                                                                                            |                                                                 |
| MSX                                | Yes                                                                                                                                                                            |                                                                 |
| Picture in picture                 | Resizable and movable                                                                                                                                                          |                                                                 |
| Gallery                            | Yes                                                                                                                                                                            |                                                                 |
|                                    |                                                                                                                                                                                |                                                                 |
| Measurement                        |                                                                                                                                                                                |                                                                 |
| Camera temperature range           | Object temperature range                                                                                                                                                       | Accuracy — for ambient temperature +15 to +35°C (+59 to +95° F) |
| -20 to +120°C (-4 to +248°F)       | -20 to +100°C (-4 to +212°F)                                                                                                                                                   | ±2°C (±3.6°F)                                                   |
|                                    | +100 to +120°C (+212 to +248° F)                                                                                                                                               | ±2%                                                             |
| 0 to +650°C (+32 to +1202°F)       | 0 to +100°C (+32 to +212°F)                                                                                                                                                    | ±2°C (±3.6°F)                                                   |
|                                    | +100 to + 650°C (+212 to +1202°F)                                                                                                                                              | ±2%                                                             |
| +300 to +1500°C (+572 to +2732°F)  | +300 to +1500°C (+572 to +2732°F)                                                                                                                                              | ±2%                                                             |
|                                    |                                                                                                                                                                                |                                                                 |
| Measurement analysis               |                                                                                                                                                                                |                                                                 |
| Spotmeter                          | 3 in live mode                                                                                                                                                                 |                                                                 |
| Area                               | 3 in live mode                                                                                                                                                                 |                                                                 |
| Automatic hot/cold detection       | Automatic maximum/minimum markers within area                                                                                                                                  |                                                                 |
| Measurement presets                | <ul style="list-style-type: none"><li>• No measurements</li><li>• Center spot</li><li>• Hot spot</li><li>• Cold spot</li><li>• User preset 1</li><li>• User preset 2</li></ul> |                                                                 |
| Difference temperature             | Yes                                                                                                                                                                            |                                                                 |
| Reference temperature              | Yes                                                                                                                                                                            |                                                                 |
| Emissivity correction              | Yes, variable from 0.01 to 1.0 or selected from materials list                                                                                                                 |                                                                 |
| Measurement corrections            | Yes                                                                                                                                                                            |                                                                 |
| External optics/windows correction | Yes                                                                                                                                                                            |                                                                 |
| Screening                          | 0.5°C (0.9°F) accuracy at 37°C (98.6°F) with reference                                                                                                                         |                                                                 |

|                                          |                                                                                                                                                                           |
|------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Alarm</b>                             |                                                                                                                                                                           |
| Color alarm (isotherm)                   | <ul style="list-style-type: none"> <li>• Above</li> <li>• Below</li> <li>• Interval</li> <li>• Condensation (moisture/humidity/dewpoint)</li> <li>• Insulation</li> </ul> |
| Measurement function alarm               | Audible/visual alarms (above/below) on any selected measurement function                                                                                                  |
| <b>Set-up</b>                            |                                                                                                                                                                           |
| Color palettes                           | <ul style="list-style-type: none"> <li>• Iron</li> <li>• Gray</li> <li>• Rainbow</li> <li>• Arctic</li> <li>• Lava</li> <li>• Rainbow HC</li> </ul>                       |
| Setup commands                           | Local adaptation of units, language, date, and time formats                                                                                                               |
| Languages                                | 21                                                                                                                                                                        |
| <b>Service functions</b>                 |                                                                                                                                                                           |
| Camera software update                   | Use PC software FLIR Tools                                                                                                                                                |
| <b>Storage of images</b>                 |                                                                                                                                                                           |
| Storage media                            | Removable memory: SD card                                                                                                                                                 |
| Time lapse (Periodic image storage)      | 10 seconds to 24 hours (infrared)                                                                                                                                         |
| Remote control operation                 | <ul style="list-style-type: none"> <li>• Using FLIR Tools (using USB cable)</li> <li>• FLIR Tools Mobile (over Wi-Fi)</li> </ul>                                          |
| Image file format                        | Standard JPEG, measurement data included. Infrared-only mode                                                                                                              |
| <b>Image annotations</b>                 |                                                                                                                                                                           |
| Voice                                    | 60 seconds with built-in microphone and speaker (and via Bluetooth) on still images and video                                                                             |
| Text                                     | Text from predefined list or soft keyboard on touchscreen                                                                                                                 |
| Visual image annotation                  | Yes                                                                                                                                                                       |
| Image sketch                             | Yes: on infrared only                                                                                                                                                     |
| Sketch                                   | From touchscreen                                                                                                                                                          |
| METERLiNK                                | Wireless connection (Bluetooth) to:<br>FLIR meters with METERLiNK                                                                                                         |
| Area measurement information             | Yes                                                                                                                                                                       |
| GPS                                      | Location data automatically added to every still image and first frame in video from built-in GPS                                                                         |
| <b>Video recording in camera</b>         |                                                                                                                                                                           |
| Radiometric infrared-video recording     | RTRR (.csq)                                                                                                                                                               |
| Non-radiometric infrared-video recording | H.264 to memory card                                                                                                                                                      |
| Visual video recording                   | H.264 to memory card                                                                                                                                                      |

|                                                                                   |                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Video streaming</b>                                                            |                                                                                                                                                                                                                  |
| Radiometric infrared-video streaming (compressed)                                 | Over UVC                                                                                                                                                                                                         |
| Non-radiometric video streaming (compressed: IR, MSX, visual, Picture in Picture) | <ul style="list-style-type: none"> <li>• H.264 (AVC) over RTSP (Wi-Fi)</li> <li>• MPEG4 over RTSP (Wi-Fi)</li> <li>• MJPEG over UVC and RTSP (Wi-Fi)</li> </ul>                                                  |
| Visual video streaming                                                            | Yes                                                                                                                                                                                                              |
| <b>Digital camera</b>                                                             |                                                                                                                                                                                                                  |
| Resolution                                                                        | 5 MP with LED light                                                                                                                                                                                              |
| Focus                                                                             | Fixed                                                                                                                                                                                                            |
| Field of view                                                                     | 53° × 41°                                                                                                                                                                                                        |
| Video lamp                                                                        | Built-in LED light                                                                                                                                                                                               |
| <b>Laser pointer</b>                                                              |                                                                                                                                                                                                                  |
| Laser alignment                                                                   | Position is automatically displayed on the infrared image                                                                                                                                                        |
| Laser distance meter                                                              | Activated by dedicated button                                                                                                                                                                                    |
| Laser                                                                             | Class 2, 0.05–40 m (0.16–131 ft.) ±1% of measured distance                                                                                                                                                       |
| <b>Data communication interfaces</b>                                              |                                                                                                                                                                                                                  |
| Interfaces                                                                        | USB 2.0, Bluetooth, Wi-Fi, DisplayPort                                                                                                                                                                           |
| METERLiNK/Bluetooth                                                               | Communication with headset and external sensors                                                                                                                                                                  |
| Wi-Fi                                                                             | Peer to peer (ad hoc) or infrastructure (network)                                                                                                                                                                |
| Audio                                                                             | Microphone and speaker for voice annotation of images                                                                                                                                                            |
| USB                                                                               | USB Type-C: data transfer/video/power                                                                                                                                                                            |
| USB standard                                                                      | USB 2.0 High Speed                                                                                                                                                                                               |
| Video out                                                                         | DisplayPort                                                                                                                                                                                                      |
| Video connector type                                                              | DisplayPort over USB Type-C                                                                                                                                                                                      |
| <b>Radio</b>                                                                      |                                                                                                                                                                                                                  |
| Operating frequency                                                               | Bluetooth + EDR/LE: 2402–2480 MHz<br>WLAN 2.4 GHz: 2412–2462 MHz<br>WLAN 5 GHz: 5150–5350 MHz (DFS: only slave mode)<br>Note that frequency band 5150–5350 MHz is for indoor use only, see national regulations. |
| RF output (EIRP)                                                                  | Bluetooth + EDR/LE: < 10 dBm<br>WLAN: < 17 dBm                                                                                                                                                                   |
| Antenna                                                                           | Integrated PIFA antenna (gain: maximum 1.4 dBi)                                                                                                                                                                  |
| <b>Power system</b>                                                               |                                                                                                                                                                                                                  |
| Battery type                                                                      | Rechargeable Li-ion battery                                                                                                                                                                                      |
| Battery voltage                                                                   | 3.6 V                                                                                                                                                                                                            |
| Battery operating time                                                            | > 4 hours at 25°C (68°F) with typical use                                                                                                                                                                        |

|                                       |                                                                                                                                                                                                                                    |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power system</b>                   |                                                                                                                                                                                                                                    |
| Charging system                       | In camera (AC adapter or 12 V from a vehicle) or two-bay charger                                                                                                                                                                   |
| Charging time (using two-bay charger) | 3.5 h to 90% capacity, on-screen indicator                                                                                                                                                                                         |
| Charging temperature                  | 0°C to +45°C (+32°F to +113°F), except for the Korean market: +10°C to +45°C (+50°F to +113°F)                                                                                                                                     |
| External power operation              | AC adapter 90–260 V AC (50/60 Hz) or 12 V from a vehicle (cable with standard plug, optional)                                                                                                                                      |
| Power management                      | Automatic shut-down and sleep mode                                                                                                                                                                                                 |
| <b>Environmental data</b>             |                                                                                                                                                                                                                                    |
| Operating temperature range           | –15 to +50°C (5–122°F)                                                                                                                                                                                                             |
| Storage temperature range             | –40 to +70°C (–40 to 158°F)                                                                                                                                                                                                        |
| Humidity (operating and storage)      | IEC 60068-2-30/24 hours, 95% relative humidity, 25–40°C (77–104°F)/2 cycles                                                                                                                                                        |
| EMC                                   | <ul style="list-style-type: none"> <li>• ETSI EN 301 489-1 (radio)</li> <li>• ETSI EN 301 489-17</li> <li>• EN 61000-6-2 (immunity)</li> <li>• EN 61000-6-3 (emission)</li> <li>• FCC 47 CFR Part 15 Class B (emission)</li> </ul> |
| Radio spectrum                        | <ul style="list-style-type: none"> <li>• ETSI EN 300 228</li> <li>• FCC Part 15.249</li> <li>• RSS-247 Issue 2</li> </ul>                                                                                                          |
| Encapsulation                         | IP 54 (IEC 60529)                                                                                                                                                                                                                  |
| Shock                                 | 25g (IEC 60068-2-27)                                                                                                                                                                                                               |
| Vibration                             | 2g (IEC 60068-2-6)                                                                                                                                                                                                                 |
| Safety                                | EN/UL/CSA/PSE 60950-1                                                                                                                                                                                                              |
| <b>Physical data</b>                  |                                                                                                                                                                                                                                    |
| Weight (including battery)            | 1.3 kg (2.9 lb.)                                                                                                                                                                                                                   |
| Size (L × W × H)                      | <ul style="list-style-type: none"> <li>• Lens vertical: 140 × 201.3 × 84.1 mm (5.5 × 7.9 × 3.3 in.)</li> <li>• Lens horizontal: 140 × 201.3 × 167.3 mm (5.5 × 7.9 × 6.6 in.)</li> </ul>                                            |
| Battery weight                        | 195 g (6.89 oz.)                                                                                                                                                                                                                   |
| Battery size (L × W × H)              | 59 × 66 × 94 mm (2.3 × 2.6 × 3.7 in.)                                                                                                                                                                                              |
| Tripod mounting                       | UNC ¼"–20                                                                                                                                                                                                                          |
| Housing material                      | PCABS with TPE, magnesium                                                                                                                                                                                                          |
| Color                                 | Black                                                                                                                                                                                                                              |
| <b>Warranty and service</b>           |                                                                                                                                                                                                                                    |
| Warranty                              | <a href="http://www.flir.com/warranty/">http://www.flir.com/warranty/</a>                                                                                                                                                          |

| Shipping information |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Packaging, type      | Cardboard box                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Packaging, contents  | <ul style="list-style-type: none"> <li>Accessory box I: <ul style="list-style-type: none"> <li>Power supply for battery charger</li> <li>Power supply, 15 W/3 A</li> <li>Printed documentation</li> <li>SD card (8 GB)</li> <li>USB 2.0 A to USB Type-C cable</li> <li>USB Type-C to HDMI and PD adapter</li> <li>USB Type-C to USB Type-C cable (USB 2.0 standard)</li> </ul> </li> <li>Accessory box II: <ul style="list-style-type: none"> <li>Lens cap strap</li> <li>Lens cleaning cloth</li> <li>Neck strap</li> </ul> </li> <li>Battery (2 ea)</li> <li>Battery charger</li> <li>Hard transport case</li> <li>Infrared camera with lens</li> <li>Lens cap, front</li> <li>Lens cap, front and rear (only for extra lenses)</li> </ul> |
| Packaging, weight    | 5.8 kg (12.8 lb.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Packaging, size      | 500 × 190 × 370 mm (19.7 × 7.5 × 14.6 in.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| EAN-13               | <ul style="list-style-type: none"> <li>Sweden: 7332558012987</li> <li>Estonia: 4743254003279</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| UPC-12               | 845188014674                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Country of origin    | Sweden and/or Estonia                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

#### Supplies and accessories:

- T198495; Pouch
- T197771ACC; Bluetooth Headset
- T130337ACC; Calibration target
- T199588; Lens 14° + case
- T199589; Lens 24° + case
- T199590; Lens 42° + case
- T911630ACC; Power supply for camera, 15 W/3 A
- T911631ACC; USB 2.0 A to USB Type-C cable, 0.9 m
- T911633ACC; Power supply for battery charger
- T911705ACC; USB Type-C to USB Type-C cable (USB 2.0 standard), 1.0 m
- T911706ACC; Car adapter 12 V
- T911845ACC; USB Type-C to HDMI and PD adapter
- T911846ACC; USB 2.0 A to USB Type-C with Power supply
- T199300ACC; Battery
- T199610; Battery charger
- T199601; Hand strap and neck strap
- T199347ACC; Hard transport case
- T199609; Option, Macro mode 71/103 µm for 24°
- T300030; Option, No radio
- T198583; FLIR Tools+ (download card incl. license key)
- T198696; FLIR ResearchIR Max 4 (hardware sec. dev.)
- T199013; FLIR ResearchIR Max 4 (printed license key)
- T199043; FLIR ResearchIR Max 4 Upgrade (printed license key)
- INST-EW-0155; Extended Warranty 1 Year for A3xxf, T540, T600/bx, T610

- 
- INST-EWGM-0165; Premium Service Package for T540, T600/bx, T610
  - INST-GM-0150; General Maintenance Package for T540, T6xx

## 27.14 FLIR T540 24° + 14°

P/N: 79304-0201

Rev.: 53838

|                                           |                                                                                                                                                    |
|-------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Imaging and optical data</b>           |                                                                                                                                                    |
| Infrared resolution                       | 464 × 348 pixels                                                                                                                                   |
| UltraMax (super-resolution) <sup>16</sup> | In FLIR Tools                                                                                                                                      |
| NETD                                      | <ul style="list-style-type: none"> <li>&lt;40 mK, 24° @ +30°C (+86°F)</li> <li>&lt;50 mK, 14° @ +30°C (+86°F)</li> </ul>                           |
| Field of view                             | <ul style="list-style-type: none"> <li>24° × 18°</li> <li>14° × 10°</li> </ul>                                                                     |
| Minimum focus distance                    | <ul style="list-style-type: none"> <li>0.15 m (0.49 ft.), 24°</li> <li>1.0 m (3.28 ft.), 14°</li> <li>Macro mode 71 µm as option to 24°</li> </ul> |
| Minimum focus distance with MSX           | <ul style="list-style-type: none"> <li>0.5 m (1.64 ft.), 24°</li> <li>1.0 m (3.28 ft.), 14°</li> </ul>                                             |
| Focal length                              | <ul style="list-style-type: none"> <li>17 mm (0.67 in.), 24°</li> <li>29 mm (1.41 in.), 14°</li> </ul>                                             |
| Spatial resolution (IFOV)                 | <ul style="list-style-type: none"> <li>0.90 mrad/pixel, 24°</li> <li>0.52 mrad/pixel, 14°</li> </ul>                                               |
| Available extra lenses                    | <ul style="list-style-type: none"> <li>42°</li> </ul>                                                                                              |
| Lens identification                       | Automatic                                                                                                                                          |
| f number                                  | <ul style="list-style-type: none"> <li>1.3, 24°</li> <li>1.5, 14°</li> </ul>                                                                       |
| Image frequency                           | 30 Hz                                                                                                                                              |
| Focus                                     | <ul style="list-style-type: none"> <li>Continuous LDM</li> <li>One-shot LDM</li> <li>One-shot contrast</li> <li>Manual</li> </ul>                  |
| Field of view match                       | Yes                                                                                                                                                |
| Digital zoom                              | 1–6× continuous                                                                                                                                    |
| <b>Detector data</b>                      |                                                                                                                                                    |
| Focal plane array/spectral range          | Uncooled microbolometer/7.5–14 µm                                                                                                                  |
| Detector pitch                            | 17 µm                                                                                                                                              |
| <b>Image presentation</b>                 |                                                                                                                                                    |
| Resolution                                | 640 × 480 pixels (VGA)                                                                                                                             |
| Surface brightness (cd/m <sup>2</sup> )   | 400                                                                                                                                                |
| Screen size                               | 4 in.                                                                                                                                              |
| Viewing angle                             | 80°                                                                                                                                                |
| Color depth (bits)                        | 24                                                                                                                                                 |

<sup>16</sup>. Not supported when using macro.

|                           |                                                                                                                                           |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Image presentation</b> |                                                                                                                                           |
| Aspect ratio              | 4:3                                                                                                                                       |
| Auto-rotation             | Yes                                                                                                                                       |
| Touchscreen               | Optically bonded PCAP                                                                                                                     |
| Display technology        | IPS                                                                                                                                       |
| Cover glass material      | Dragontrail®                                                                                                                              |
| Programmable buttons      | 2                                                                                                                                         |
| Viewfinder                | No                                                                                                                                        |
| Image adjustment          | <ul style="list-style-type: none"> <li>• Automatic</li> <li>• Automatic maximum</li> <li>• Automatic minimum</li> <li>• Manual</li> </ul> |

|                                 |                       |
|---------------------------------|-----------------------|
| <b>Image presentation modes</b> |                       |
| Infrared image                  | Yes                   |
| Visual image                    | Yes                   |
| MSX                             | Yes                   |
| Picture in picture              | Resizable and movable |
| Gallery                         | Yes                   |

|                                   |                                   |                                                                |
|-----------------------------------|-----------------------------------|----------------------------------------------------------------|
| <b>Measurement</b>                |                                   |                                                                |
| Camera temperature range          | Object temperature range          | Accuracy — for ambient temperature +15 to +35°C (+59 to +95°F) |
| -20 to +120°C (-4 to +248°F)      | -20 to +100°C (-4 to +212°F)      | ±2°C (±3.6°F)                                                  |
|                                   | +100 to +120°C (+212 to +248°F)   | ±2%                                                            |
| 0 to +650°C (+32 to +1202°F)      | 0 to +100°C (+32 to +212°F)       | ±2°C (±3.6°F)                                                  |
|                                   | +100 to +650°C (+212 to +1202°F)  | ±2%                                                            |
| +300 to +1500°C (+572 to +2732°F) | +300 to +1500°C (+572 to +2732°F) | ±2%                                                            |

|                              |                                                                                                                                                                                       |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Measurement analysis</b>  |                                                                                                                                                                                       |
| Spotmeter                    | 3 in live mode                                                                                                                                                                        |
| Area                         | 3 in live mode                                                                                                                                                                        |
| Automatic hot/cold detection | Automatic maximum/minimum markers within area                                                                                                                                         |
| Measurement presets          | <ul style="list-style-type: none"> <li>• No measurements</li> <li>• Center spot</li> <li>• Hot spot</li> <li>• Cold spot</li> <li>• User preset 1</li> <li>• User preset 2</li> </ul> |
| Difference temperature       | Yes                                                                                                                                                                                   |
| Reference temperature        | Yes                                                                                                                                                                                   |
| Emissivity correction        | Yes, variable from 0.01 to 1.0 or selected from materials list                                                                                                                        |
| Measurement corrections      | Yes                                                                                                                                                                                   |



|                                     |                                                                                                                                                                           |
|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Measurement analysis</b>         |                                                                                                                                                                           |
| External optics/windows correction  | Yes                                                                                                                                                                       |
| Screening                           | 0.5°C (0.9°F) accuracy at 37°C (98.6°F) with reference                                                                                                                    |
| <b>Alarm</b>                        |                                                                                                                                                                           |
| Color alarm (isotherm)              | <ul style="list-style-type: none"> <li>• Above</li> <li>• Below</li> <li>• Interval</li> <li>• Condensation (moisture/humidity/dewpoint)</li> <li>• Insulation</li> </ul> |
| Measurement function alarm          | Audible/visual alarms (above/below) on any selected measurement function                                                                                                  |
| <b>Set-up</b>                       |                                                                                                                                                                           |
| Color palettes                      | <ul style="list-style-type: none"> <li>• Iron</li> <li>• Gray</li> <li>• Rainbow</li> <li>• Arctic</li> <li>• Lava</li> <li>• Rainbow HC</li> </ul>                       |
| Setup commands                      | Local adaptation of units, language, date, and time formats                                                                                                               |
| Languages                           | 21                                                                                                                                                                        |
| <b>Service functions</b>            |                                                                                                                                                                           |
| Camera software update              | Use PC software FLIR Tools                                                                                                                                                |
| <b>Storage of images</b>            |                                                                                                                                                                           |
| Storage media                       | Removable memory: SD card                                                                                                                                                 |
| Time lapse (Periodic image storage) | 10 seconds to 24 hours (infrared)                                                                                                                                         |
| Remote control operation            | <ul style="list-style-type: none"> <li>• Using FLIR Tools (using USB cable)</li> <li>• FLIR Tools Mobile (over Wi-Fi)</li> </ul>                                          |
| Image file format                   | Standard JPEG, measurement data included. Infrared-only mode                                                                                                              |
| <b>Image annotations</b>            |                                                                                                                                                                           |
| Voice                               | 60 seconds with built-in microphone and speaker (and via Bluetooth) on still images and video                                                                             |
| Text                                | Text from predefined list or soft keyboard on touchscreen                                                                                                                 |
| Visual image annotation             | Yes                                                                                                                                                                       |
| Image sketch                        | Yes: on infrared only                                                                                                                                                     |
| Sketch                              | From touchscreen                                                                                                                                                          |
| METERLiNK                           | Wireless connection (Bluetooth) to:<br>FLIR meters with METERLiNK                                                                                                         |
| Area measurement information        | Yes                                                                                                                                                                       |
| GPS                                 | Location data automatically added to every still image and first frame in video from built-in GPS                                                                         |

|                                                                                   |                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Video recording in camera</b>                                                  |                                                                                                                                                                                                                  |
| Radiometric infrared-video recording                                              | RTRR (.csq)                                                                                                                                                                                                      |
| Non-radiometric infrared-video recording                                          | H.264 to memory card                                                                                                                                                                                             |
| Visual video recording                                                            | H.264 to memory card                                                                                                                                                                                             |
| <b>Video streaming</b>                                                            |                                                                                                                                                                                                                  |
| Radiometric infrared-video streaming (compressed)                                 | Over UVC                                                                                                                                                                                                         |
| Non-radiometric video streaming (compressed: IR, MSX, visual, Picture in Picture) | <ul style="list-style-type: none"> <li>• H.264 (AVC) over RTSP (Wi-Fi)</li> <li>• MPEG4 over RTSP (Wi-Fi)</li> <li>• MJPEG over UVC and RTSP (Wi-Fi)</li> </ul>                                                  |
| Visual video streaming                                                            | Yes                                                                                                                                                                                                              |
| <b>Digital camera</b>                                                             |                                                                                                                                                                                                                  |
| Resolution                                                                        | 5 MP with LED light                                                                                                                                                                                              |
| Focus                                                                             | Fixed                                                                                                                                                                                                            |
| Field of view                                                                     | 53° × 41°                                                                                                                                                                                                        |
| Video lamp                                                                        | Built-in LED light                                                                                                                                                                                               |
| <b>Laser pointer</b>                                                              |                                                                                                                                                                                                                  |
| Laser alignment                                                                   | Position is automatically displayed on the infrared image                                                                                                                                                        |
| Laser distance meter                                                              | Activated by dedicated button                                                                                                                                                                                    |
| Laser                                                                             | Class 2, 0.05–40 m (0.16–131 ft.) ±1% of measured distance                                                                                                                                                       |
| <b>Data communication interfaces</b>                                              |                                                                                                                                                                                                                  |
| Interfaces                                                                        | USB 2.0, Bluetooth, Wi-Fi, DisplayPort                                                                                                                                                                           |
| METERLiNK/Bluetooth                                                               | Communication with headset and external sensors                                                                                                                                                                  |
| Wi-Fi                                                                             | Peer to peer (ad hoc) or infrastructure (network)                                                                                                                                                                |
| Audio                                                                             | Microphone and speaker for voice annotation of images                                                                                                                                                            |
| USB                                                                               | USB Type-C: data transfer/video/power                                                                                                                                                                            |
| USB standard                                                                      | USB 2.0 High Speed                                                                                                                                                                                               |
| Video out                                                                         | DisplayPort                                                                                                                                                                                                      |
| Video connector type                                                              | DisplayPort over USB Type-C                                                                                                                                                                                      |
| <b>Radio</b>                                                                      |                                                                                                                                                                                                                  |
| Operating frequency                                                               | Bluetooth + EDR/LE: 2402–2480 MHz<br>WLAN 2.4 GHz: 2412–2462 MHz<br>WLAN 5 GHz: 5150–5350 MHz (DFS: only slave mode)<br>Note that frequency band 5150–5350 MHz is for indoor use only, see national regulations. |
| RF output (EIRP)                                                                  | Bluetooth + EDR/LE: < 10 dBm<br>WLAN: < 17 dBm                                                                                                                                                                   |
| Antenna                                                                           | Integrated PIFA antenna (gain: maximum 1.4 dBi)                                                                                                                                                                  |

|                                       |                                                                                                                                                                                                                                    |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power system</b>                   |                                                                                                                                                                                                                                    |
| Battery type                          | Rechargeable Li-ion battery                                                                                                                                                                                                        |
| Battery voltage                       | 3.6 V                                                                                                                                                                                                                              |
| Battery operating time                | > 4 hours at 25°C (68°F) with typical use                                                                                                                                                                                          |
| Charging system                       | In camera (AC adapter or 12 V from a vehicle) or two-bay charger                                                                                                                                                                   |
| Charging time (using two-bay charger) | 3.5 h to 90% capacity, on-screen indicator                                                                                                                                                                                         |
| Charging temperature                  | 0°C to +45°C (+32°F to +113°F), except for the Korean market: +10°C to +45°C (+50°F to +113°F)                                                                                                                                     |
| External power operation              | AC adapter 90–260 V AC (50/60 Hz) or 12 V from a vehicle (cable with standard plug, optional)                                                                                                                                      |
| Power management                      | Automatic shut-down and sleep mode                                                                                                                                                                                                 |
| <b>Environmental data</b>             |                                                                                                                                                                                                                                    |
| Operating temperature range           | –15 to +50°C (5–122°F)                                                                                                                                                                                                             |
| Storage temperature range             | –40 to +70°C (–40 to 158°F)                                                                                                                                                                                                        |
| Humidity (operating and storage)      | IEC 60068-2-30/24 hours, 95% relative humidity, 25–40°C (77–104°F)/2 cycles                                                                                                                                                        |
| EMC                                   | <ul style="list-style-type: none"> <li>• ETSI EN 301 489-1 (radio)</li> <li>• ETSI EN 301 489-17</li> <li>• EN 61000-6-2 (immunity)</li> <li>• EN 61000-6-3 (emission)</li> <li>• FCC 47 CFR Part 15 Class B (emission)</li> </ul> |
| Radio spectrum                        | <ul style="list-style-type: none"> <li>• ETSI EN 300 228</li> <li>• FCC Part 15.249</li> <li>• RSS-247 Issue 2</li> </ul>                                                                                                          |
| Encapsulation                         | IP 54 (IEC 60529)                                                                                                                                                                                                                  |
| Shock                                 | 25g (IEC 60068-2-27)                                                                                                                                                                                                               |
| Vibration                             | 2g (IEC 60068-2-6)                                                                                                                                                                                                                 |
| Safety                                | EN/UL/CSA/PSE 60950-1                                                                                                                                                                                                              |
| <b>Physical data</b>                  |                                                                                                                                                                                                                                    |
| Weight (including battery)            | 1.3 kg (2.9 lb.)                                                                                                                                                                                                                   |
| Size (L × W × H)                      | <ul style="list-style-type: none"> <li>• Lens vertical: 140 × 201.3 × 84.1 mm (5.5 × 7.9 × 3.3 in.)</li> <li>• Lens horizontal: 140 × 201.3 × 167.3 mm (5.5 × 7.9 × 6.6 in.)</li> </ul>                                            |
| Battery weight                        | 195 g (6.89 oz.)                                                                                                                                                                                                                   |
| Battery size (L × W × H)              | 59 × 66 × 94 mm (2.3 × 2.6 × 3.7 in.)                                                                                                                                                                                              |
| Tripod mounting                       | UNC ¼"-20                                                                                                                                                                                                                          |
| Housing material                      | PCABS with TPE, magnesium                                                                                                                                                                                                          |
| Color                                 | Black                                                                                                                                                                                                                              |
| <b>Warranty and service</b>           |                                                                                                                                                                                                                                    |
| Warranty                              | <a href="http://www.flir.com/warranty/">http://www.flir.com/warranty/</a>                                                                                                                                                          |

| Shipping information |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Packaging, type      | Cardboard box                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Packaging, contents  | <ul style="list-style-type: none"> <li>Accessory box I: <ul style="list-style-type: none"> <li>Power supply for battery charger</li> <li>Power supply, 15 W/3 A</li> <li>Printed documentation</li> <li>SD card (8 GB)</li> <li>USB 2.0 A to USB Type-C cable</li> <li>USB Type-C to HDMI and PD adapter</li> <li>USB Type-C to USB Type-C cable (USB 2.0 standard)</li> </ul> </li> <li>Accessory box II: <ul style="list-style-type: none"> <li>Lens cap strap</li> <li>Lens cleaning cloth</li> <li>Neck strap</li> </ul> </li> <li>Battery (2 ea)</li> <li>Battery charger</li> <li>Extra lens, 14°</li> <li>Hard transport case</li> <li>Infrared camera with lens</li> <li>Lens cap, front</li> <li>Lens cap, front and rear (only for extra lenses)</li> </ul> |
| Packaging, weight    | 6.2 kg (13.7 lb.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Packaging, size      | 500 × 190 × 370 mm (19.7 × 7.5 × 14.6 in.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| EAN-13               | <ul style="list-style-type: none"> <li>Sweden: 7332558012994</li> <li>Estonia: 4743254003286</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| UPC-12               | 845188014681                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Country of origin    | Sweden and/or Estonia                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

#### Supplies and accessories:

- T198495; Pouch
- T197771ACC; Bluetooth Headset
- T130337ACC; Calibration target
- T199588; Lens 14° + case
- T199589; Lens 24° + case
- T199590; Lens 42° + case
- T911630ACC; Power supply for camera, 15 W/3 A
- T911631ACC; USB 2.0 A to USB Type-C cable, 0.9 m
- T911633ACC; Power supply for battery charger
- T911705ACC; USB Type-C to USB Type-C cable (USB 2.0 standard), 1.0 m
- T911706ACC; Car adapter 12 V
- T911845ACC; USB Type-C to HDMI and PD adapter
- T911846ACC; USB 2.0 A to USB Type-C with Power supply
- T199300ACC; Battery
- T199610; Battery charger
- T199601; Hand strap and neck strap
- T199347ACC; Hard transport case
- T199609; Option, Macro mode 71/103 µm for 24°
- T300030; Option, No radio
- T198583; FLIR Tools+ (download card incl. license key)
- T198696; FLIR ResearchIR Max 4 (hardware sec. dev.)
- T199013; FLIR ResearchIR Max 4 (printed license key)
- T199043; FLIR ResearchIR Max 4 Upgrade (printed license key)

- 
- INST-EW-0155; Extended Warranty 1 Year for A3xxf, T540, T600/bx, T610
  - INST-EWGM-0165; Premium Service Package for T540, T600/bx, T610
  - INST-GM-0150; General Maintenance Package for T540, T6xx

## 27.15 FLIR T540 24° + 42°

P/N: 79305-0201

Rev.: 53836

|                                           |                                                                                                                                                     |
|-------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Imaging and optical data</b>           |                                                                                                                                                     |
| Infrared resolution                       | 464 × 348 pixels                                                                                                                                    |
| UltraMax (super-resolution) <sup>17</sup> | In FLIR Tools                                                                                                                                       |
| NETD                                      | <ul style="list-style-type: none"> <li>&lt;30 mK, 42° @ +30°C (+86°F)</li> <li>&lt;40 mK, 24° @ +30°C (+86°F)</li> </ul>                            |
| Field of view                             | <ul style="list-style-type: none"> <li>42° × 32°</li> <li>24° × 18°</li> </ul>                                                                      |
| Minimum focus distance                    | <ul style="list-style-type: none"> <li>0.15 m (0.49 ft.), 42°</li> <li>0.15 m (0.49 ft.), 24°</li> <li>Macro mode 71 µm as option to 24°</li> </ul> |
| Minimum focus distance with MSX           | <ul style="list-style-type: none"> <li>0.65 m (2.13 ft.), 42°</li> <li>0.5 m (1.64 ft.), 24°</li> </ul>                                             |
| Focal length                              | <ul style="list-style-type: none"> <li>10 mm (0.39 in.), 42°</li> <li>17 mm (0.67 in.), 24°</li> </ul>                                              |
| Spatial resolution (IFOV)                 | <ul style="list-style-type: none"> <li>1.66 mrad/pixel, 42°</li> <li>0.90 mrad/pixel, 24°</li> </ul>                                                |
| Available extra lenses                    | <ul style="list-style-type: none"> <li>14°</li> </ul>                                                                                               |
| Lens identification                       | Automatic                                                                                                                                           |
| f number                                  | <ul style="list-style-type: none"> <li>1.1, 42°</li> <li>1.3, 24°</li> </ul>                                                                        |
| Image frequency                           | 30 Hz                                                                                                                                               |
| Focus                                     | <ul style="list-style-type: none"> <li>Continuous LDM</li> <li>One-shot LDM</li> <li>One-shot contrast</li> <li>Manual</li> </ul>                   |
| Field of view match                       | Yes                                                                                                                                                 |
| Digital zoom                              | 1–6× continuous                                                                                                                                     |
| <b>Detector data</b>                      |                                                                                                                                                     |
| Focal plane array/spectral range          | Uncooled microbolometer/7.5–14 µm                                                                                                                   |
| Detector pitch                            | 17 µm                                                                                                                                               |
| <b>Image presentation</b>                 |                                                                                                                                                     |
| Resolution                                | 640 × 480 pixels (VGA)                                                                                                                              |
| Surface brightness (cd/m²)                | 400                                                                                                                                                 |
| Screen size                               | 4 in.                                                                                                                                               |
| Viewing angle                             | 80°                                                                                                                                                 |
| Color depth (bits)                        | 24                                                                                                                                                  |

17. Not supported when using macro.

| Image presentation   |                                                                                                                                           |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Aspect ratio         | 4:3                                                                                                                                       |
| Auto-rotation        | Yes                                                                                                                                       |
| Touchscreen          | Optically bonded PCAP                                                                                                                     |
| Display technology   | IPS                                                                                                                                       |
| Cover glass material | Dragontrail®                                                                                                                              |
| Programmable buttons | 2                                                                                                                                         |
| Viewfinder           | No                                                                                                                                        |
| Image adjustment     | <ul style="list-style-type: none"> <li>• Automatic</li> <li>• Automatic maximum</li> <li>• Automatic minimum</li> <li>• Manual</li> </ul> |

| Image presentation modes |                       |
|--------------------------|-----------------------|
| Infrared image           | Yes                   |
| Visual image             | Yes                   |
| MSX                      | Yes                   |
| Picture in picture       | Resizable and movable |
| Gallery                  | Yes                   |

| Measurement                       |                                   |                                                                |
|-----------------------------------|-----------------------------------|----------------------------------------------------------------|
| Camera temperature range          | Object temperature range          | Accuracy — for ambient temperature +15 to +35°C (+59 to +95°F) |
| -20 to +120°C (-4 to +248°F)      | -20 to +100°C (-4 to +212°F)      | ±2°C (±3.6°F)                                                  |
|                                   | +100 to +120°C (+212 to +248°F)   | ±2%                                                            |
| 0 to +650°C (+32 to +1202°F)      | 0 to +100°C (+32 to +212°F)       | ±2°C (±3.6°F)                                                  |
|                                   | +100 to +650°C (+212 to +1202°F)  | ±2%                                                            |
| +300 to +1500°C (+572 to +2732°F) | +300 to +1500°C (+572 to +2732°F) | ±2%                                                            |

| Measurement analysis         |                                                                                                                                                                                       |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Spotmeter                    | 3 in live mode                                                                                                                                                                        |
| Area                         | 3 in live mode                                                                                                                                                                        |
| Automatic hot/cold detection | Automatic maximum/minimum markers within area                                                                                                                                         |
| Measurement presets          | <ul style="list-style-type: none"> <li>• No measurements</li> <li>• Center spot</li> <li>• Hot spot</li> <li>• Cold spot</li> <li>• User preset 1</li> <li>• User preset 2</li> </ul> |
| Difference temperature       | Yes                                                                                                                                                                                   |
| Reference temperature        | Yes                                                                                                                                                                                   |
| Emissivity correction        | Yes, variable from 0.01 to 1.0 or selected from materials list                                                                                                                        |
| Measurement corrections      | Yes                                                                                                                                                                                   |

|                                     |                                                                                                                                                                           |
|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Measurement analysis</b>         |                                                                                                                                                                           |
| External optics/windows correction  | Yes                                                                                                                                                                       |
| Screening                           | 0.5°C (0.9°F) accuracy at 37°C (98.6°F) with reference                                                                                                                    |
| <b>Alarm</b>                        |                                                                                                                                                                           |
| Color alarm (isotherm)              | <ul style="list-style-type: none"> <li>• Above</li> <li>• Below</li> <li>• Interval</li> <li>• Condensation (moisture/humidity/dewpoint)</li> <li>• Insulation</li> </ul> |
| Measurement function alarm          | Audible/visual alarms (above/below) on any selected measurement function                                                                                                  |
| <b>Set-up</b>                       |                                                                                                                                                                           |
| Color palettes                      | <ul style="list-style-type: none"> <li>• Iron</li> <li>• Gray</li> <li>• Rainbow</li> <li>• Arctic</li> <li>• Lava</li> <li>• Rainbow HC</li> </ul>                       |
| Setup commands                      | Local adaptation of units, language, date, and time formats                                                                                                               |
| Languages                           | 21                                                                                                                                                                        |
| <b>Service functions</b>            |                                                                                                                                                                           |
| Camera software update              | Use PC software FLIR Tools                                                                                                                                                |
| <b>Storage of images</b>            |                                                                                                                                                                           |
| Storage media                       | Removable memory: SD card                                                                                                                                                 |
| Time lapse (Periodic image storage) | 10 seconds to 24 hours (infrared)                                                                                                                                         |
| Remote control operation            | <ul style="list-style-type: none"> <li>• Using FLIR Tools (using USB cable)</li> <li>• FLIR Tools Mobile (over Wi-Fi)</li> </ul>                                          |
| Image file format                   | Standard JPEG, measurement data included. Infrared-only mode                                                                                                              |
| <b>Image annotations</b>            |                                                                                                                                                                           |
| Voice                               | 60 seconds with built-in microphone and speaker (and via Bluetooth) on still images and video                                                                             |
| Text                                | Text from predefined list or soft keyboard on touchscreen                                                                                                                 |
| Visual image annotation             | Yes                                                                                                                                                                       |
| Image sketch                        | Yes: on infrared only                                                                                                                                                     |
| Sketch                              | From touchscreen                                                                                                                                                          |
| METERLiNK                           | Wireless connection (Bluetooth) to:<br>FLIR meters with METERLiNK                                                                                                         |
| Area measurement information        | Yes                                                                                                                                                                       |
| GPS                                 | Location data automatically added to every still image and first frame in video from built-in GPS                                                                         |



|                                                                                   |                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Video recording in camera</b>                                                  |                                                                                                                                                                                                                  |
| Radiometric infrared-video recording                                              | RTRR (.csq)                                                                                                                                                                                                      |
| Non-radiometric infrared-video recording                                          | H.264 to memory card                                                                                                                                                                                             |
| Visual video recording                                                            | H.264 to memory card                                                                                                                                                                                             |
| <b>Video streaming</b>                                                            |                                                                                                                                                                                                                  |
| Radiometric infrared-video streaming (compressed)                                 | Over UVC                                                                                                                                                                                                         |
| Non-radiometric video streaming (compressed: IR, MSX, visual, Picture in Picture) | <ul style="list-style-type: none"> <li>• H.264 (AVC) over RTSP (Wi-Fi)</li> <li>• MPEG4 over RTSP (Wi-Fi)</li> <li>• MJPEG over UVC and RTSP (Wi-Fi)</li> </ul>                                                  |
| Visual video streaming                                                            | Yes                                                                                                                                                                                                              |
| <b>Digital camera</b>                                                             |                                                                                                                                                                                                                  |
| Resolution                                                                        | 5 MP with LED light                                                                                                                                                                                              |
| Focus                                                                             | Fixed                                                                                                                                                                                                            |
| Field of view                                                                     | 53° × 41°                                                                                                                                                                                                        |
| Video lamp                                                                        | Built-in LED light                                                                                                                                                                                               |
| <b>Laser pointer</b>                                                              |                                                                                                                                                                                                                  |
| Laser alignment                                                                   | Position is automatically displayed on the infrared image                                                                                                                                                        |
| Laser distance meter                                                              | Activated by dedicated button                                                                                                                                                                                    |
| Laser                                                                             | Class 2, 0.05–40 m (0.16–131 ft.) ±1% of measured distance                                                                                                                                                       |
| <b>Data communication interfaces</b>                                              |                                                                                                                                                                                                                  |
| Interfaces                                                                        | USB 2.0, Bluetooth, Wi-Fi, DisplayPort                                                                                                                                                                           |
| METERLiNK/Bluetooth                                                               | Communication with headset and external sensors                                                                                                                                                                  |
| Wi-Fi                                                                             | Peer to peer (ad hoc) or infrastructure (network)                                                                                                                                                                |
| Audio                                                                             | Microphone and speaker for voice annotation of images                                                                                                                                                            |
| USB                                                                               | USB Type-C: data transfer/video/power                                                                                                                                                                            |
| USB standard                                                                      | USB 2.0 High Speed                                                                                                                                                                                               |
| Video out                                                                         | DisplayPort                                                                                                                                                                                                      |
| Video connector type                                                              | DisplayPort over USB Type-C                                                                                                                                                                                      |
| <b>Radio</b>                                                                      |                                                                                                                                                                                                                  |
| Operating frequency                                                               | Bluetooth + EDR/LE: 2402–2480 MHz<br>WLAN 2.4 GHz: 2412–2462 MHz<br>WLAN 5 GHz: 5150–5350 MHz (DFS: only slave mode)<br>Note that frequency band 5150–5350 MHz is for indoor use only, see national regulations. |
| RF output (EIRP)                                                                  | Bluetooth + EDR/LE: < 10 dBm<br>WLAN: < 17 dBm                                                                                                                                                                   |
| Antenna                                                                           | Integrated PIFA antenna (gain: maximum 1.4 dBi)                                                                                                                                                                  |

|                                       |                                                                                                                                                                                                                                    |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power system</b>                   |                                                                                                                                                                                                                                    |
| Battery type                          | Rechargeable Li-ion battery                                                                                                                                                                                                        |
| Battery voltage                       | 3.6 V                                                                                                                                                                                                                              |
| Battery operating time                | > 4 hours at 25°C (68°F) with typical use                                                                                                                                                                                          |
| Charging system                       | In camera (AC adapter or 12 V from a vehicle) or two-bay charger                                                                                                                                                                   |
| Charging time (using two-bay charger) | 3.5 h to 90% capacity, on-screen indicator                                                                                                                                                                                         |
| Charging temperature                  | 0°C to +45°C (+32°F to +113°F), except for the Korean market: +10°C to +45°C (+50°F to +113°F)                                                                                                                                     |
| External power operation              | AC adapter 90–260 V AC (50/60 Hz) or 12 V from a vehicle (cable with standard plug, optional)                                                                                                                                      |
| Power management                      | Automatic shut-down and sleep mode                                                                                                                                                                                                 |
| <b>Environmental data</b>             |                                                                                                                                                                                                                                    |
| Operating temperature range           | –15 to +50°C (5–122°F)                                                                                                                                                                                                             |
| Storage temperature range             | –40 to +70°C (–40 to 158°F)                                                                                                                                                                                                        |
| Humidity (operating and storage)      | IEC 60068-2-30/24 hours, 95% relative humidity, 25–40°C (77–104°F)/2 cycles                                                                                                                                                        |
| EMC                                   | <ul style="list-style-type: none"> <li>• ETSI EN 301 489-1 (radio)</li> <li>• ETSI EN 301 489-17</li> <li>• EN 61000-6-2 (immunity)</li> <li>• EN 61000-6-3 (emission)</li> <li>• FCC 47 CFR Part 15 Class B (emission)</li> </ul> |
| Radio spectrum                        | <ul style="list-style-type: none"> <li>• ETSI EN 300 228</li> <li>• FCC Part 15.249</li> <li>• RSS-247 Issue 2</li> </ul>                                                                                                          |
| Encapsulation                         | IP 54 (IEC 60529)                                                                                                                                                                                                                  |
| Shock                                 | 25g (IEC 60068-2-27)                                                                                                                                                                                                               |
| Vibration                             | 2g (IEC 60068-2-6)                                                                                                                                                                                                                 |
| Safety                                | EN/UL/CSA/PSE 60950-1                                                                                                                                                                                                              |
| <b>Physical data</b>                  |                                                                                                                                                                                                                                    |
| Weight (including battery)            | 1.3 kg (2.9 lb.)                                                                                                                                                                                                                   |
| Size (L × W × H)                      | <ul style="list-style-type: none"> <li>• Lens vertical: 140 × 201.3 × 84.1 mm (5.5 × 7.9 × 3.3 in.)</li> <li>• Lens horizontal: 140 × 201.3 × 167.3 mm (5.5 × 7.9 × 6.6 in.)</li> </ul>                                            |
| Battery weight                        | 195 g (6.89 oz.)                                                                                                                                                                                                                   |
| Battery size (L × W × H)              | 59 × 66 × 94 mm (2.3 × 2.6 × 3.7 in.)                                                                                                                                                                                              |
| Tripod mounting                       | UNC ¼"-20                                                                                                                                                                                                                          |
| Housing material                      | PCABS with TPE, magnesium                                                                                                                                                                                                          |
| Color                                 | Black                                                                                                                                                                                                                              |
| <b>Warranty and service</b>           |                                                                                                                                                                                                                                    |
| Warranty                              | <a href="http://www.flir.com/warranty/">http://www.flir.com/warranty/</a>                                                                                                                                                          |

| Shipping information |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Packaging, type      | Cardboard box                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Packaging, contents  | <ul style="list-style-type: none"> <li>Accessory box I: <ul style="list-style-type: none"> <li>Power supply for battery charger</li> <li>Power supply, 15 W/3 A</li> <li>Printed documentation</li> <li>SD card (8 GB)</li> <li>USB 2.0 A to USB Type-C cable</li> <li>USB Type-C to HDMI and PD adapter</li> <li>USB Type-C to USB Type-C cable (USB 2.0 standard)</li> </ul> </li> <li>Accessory box II: <ul style="list-style-type: none"> <li>Lens cap strap</li> <li>Lens cleaning cloth</li> <li>Neck strap</li> </ul> </li> <li>Battery (2 ea)</li> <li>Battery charger</li> <li>Extra lens, 42°</li> <li>Hard transport case</li> <li>Infrared camera with lens</li> <li>Lens cap, front</li> <li>Lens cap, front and rear (only for extra lenses)</li> </ul> |
| Packaging, weight    | 6.2 kg (13.7 lb.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Packaging, size      | 500 × 190 × 370 mm (19.7 × 7.5 × 14.6 in.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| EAN-13               | <ul style="list-style-type: none"> <li>Sweden: 7332558013007</li> <li>Estonia: 4743254003293</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| UPC-12               | 845188014698                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Country of origin    | Sweden and/or Estonia                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

#### Supplies and accessories:

- T198495; Pouch
- T197771ACC; Bluetooth Headset
- T130337ACC; Calibration target
- T199588; Lens 14° + case
- T199589; Lens 24° + case
- T199590; Lens 42° + case
- T911630ACC; Power supply for camera, 15 W/3 A
- T911631ACC; USB 2.0 A to USB Type-C cable, 0.9 m
- T911633ACC; Power supply for battery charger
- T911705ACC; USB Type-C to USB Type-C cable (USB 2.0 standard), 1.0 m
- T911706ACC; Car adapter 12 V
- T911845ACC; USB Type-C to HDMI and PD adapter
- T911846ACC; USB 2.0 A to USB Type-C with Power supply
- T199300ACC; Battery
- T199610; Battery charger
- T199601; Hand strap and neck strap
- T199347ACC; Hard transport case
- T199609; Option, Macro mode 71/103 µm for 24°
- T300030; Option, No radio
- T198583; FLIR Tools+ (download card incl. license key)
- T198696; FLIR ResearchIR Max 4 (hardware sec. dev.)
- T199013; FLIR ResearchIR Max 4 (printed license key)
- T199043; FLIR ResearchIR Max 4 Upgrade (printed license key)

- 
- INST-EW-0155; Extended Warranty 1 Year for A3xxf, T540, T600/bx, T610
  - INST-EWGM-0165; Premium Service Package for T540, T600/bx, T610
  - INST-GM-0150; General Maintenance Package for T540, T6xx

## 27.16 FLIR T540 24° + 14° & 42°

P/N: 79306-0201

Rev.: 53837

|                                           |                                                                                                                                                                                            |
|-------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Imaging and optical data</b>           |                                                                                                                                                                                            |
| Infrared resolution                       | 464 × 348 pixels                                                                                                                                                                           |
| UltraMax (super-resolution) <sup>18</sup> | In FLIR Tools                                                                                                                                                                              |
| NETD                                      | <ul style="list-style-type: none"> <li>• &lt;30 mK, 42° @ +30°C (+86°F)</li> <li>• &lt;40 mK, 24° @ +30°C (+86°F)</li> <li>• &lt;50 mK, 14° @ +30°C (+86°F)</li> </ul>                     |
| Field of view                             | <ul style="list-style-type: none"> <li>• 42° × 32°</li> <li>• 24° × 18°</li> <li>• 14° × 10°</li> </ul>                                                                                    |
| Minimum focus distance                    | <ul style="list-style-type: none"> <li>• 0.15 m (0.49 ft.), 42°</li> <li>• 0.15 m (0.49 ft.), 24°</li> <li>• 1.0 m (3.28 ft.), 14°</li> <li>• Macro mode 71 µm as option to 24°</li> </ul> |
| Minimum focus distance with MSX           | <ul style="list-style-type: none"> <li>• 0.65 m (2.13 ft.), 42°</li> <li>• 0.5 m (1.64 ft.), 24°</li> <li>• 1.0 m (3.28 ft.), 14°</li> </ul>                                               |
| Focal length                              | <ul style="list-style-type: none"> <li>• 10 mm (0.39 in.), 42°</li> <li>• 17 mm (0.67 in.), 24°</li> <li>• 29 mm (1.41 in.), 14°</li> </ul>                                                |
| Spatial resolution (IFOV)                 | <ul style="list-style-type: none"> <li>• 1.66 mrad/pixel, 42°</li> <li>• 0.90 mrad/pixel, 24°</li> <li>• 0.52 mrad/pixel, 14°</li> </ul>                                                   |
| Lens identification                       | Automatic                                                                                                                                                                                  |
| f number                                  | <ul style="list-style-type: none"> <li>• 1.1, 42°</li> <li>• 1.3, 24°</li> <li>• 1.5, 14°</li> </ul>                                                                                       |
| Image frequency                           | 30 Hz                                                                                                                                                                                      |
| Focus                                     | <ul style="list-style-type: none"> <li>• Continuous LDM</li> <li>• One-shot LDM</li> <li>• One-shot contrast</li> <li>• Manual</li> </ul>                                                  |
| Field of view match                       | Yes                                                                                                                                                                                        |
| Digital zoom                              | 1–6× continuous                                                                                                                                                                            |
| <b>Detector data</b>                      |                                                                                                                                                                                            |
| Focal plane array/spectral range          | Uncooled microbolometer/7.5–14 µm                                                                                                                                                          |
| Detector pitch                            | 17 µm                                                                                                                                                                                      |
| <b>Image presentation</b>                 |                                                                                                                                                                                            |
| Resolution                                | 640 × 480 pixels (VGA)                                                                                                                                                                     |
| Surface brightness (cd/m²)                | 400                                                                                                                                                                                        |

<sup>18</sup>. Not supported when using macro.

|                      |                                                                                                                                      |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| Image presentation   |                                                                                                                                      |
| Screen size          | 4 in.                                                                                                                                |
| Viewing angle        | 80°                                                                                                                                  |
| Color depth (bits)   | 24                                                                                                                                   |
| Aspect ratio         | 4:3                                                                                                                                  |
| Auto-rotation        | Yes                                                                                                                                  |
| Touchscreen          | Optically bonded PCAP                                                                                                                |
| Display technology   | IPS                                                                                                                                  |
| Cover glass material | Dragontrail®                                                                                                                         |
| Programmable buttons | 2                                                                                                                                    |
| Viewfinder           | No                                                                                                                                   |
| Image adjustment     | <ul style="list-style-type: none"><li>• Automatic</li><li>• Automatic maximum</li><li>• Automatic minimum</li><li>• Manual</li></ul> |

|                          |                       |
|--------------------------|-----------------------|
| Image presentation modes |                       |
| Infrared image           | Yes                   |
| Visual image             | Yes                   |
| MSX                      | Yes                   |
| Picture in picture       | Resizable and movable |
| Gallery                  | Yes                   |

|                                   |                                   |                                                                 |
|-----------------------------------|-----------------------------------|-----------------------------------------------------------------|
| Measurement                       |                                   |                                                                 |
| Camera temperature range          | Object temperature range          | Accuracy — for ambient temperature +15 to +35°C (+59 to +95° F) |
| –20 to +120°C (–4 to +248°F)      | –20 to +100°C (–4 to +212°F)      | ±2°C (±3.6°F)                                                   |
|                                   | +100 to +120°C (+212 to +248° F)  | ±2%                                                             |
| 0 to +650°C (+32 to +1202°F)      | 0 to +100°C (+32 to +212°F)       | ±2°C (±3.6°F)                                                   |
|                                   | +100 to + 650°C (+212 to +1202°F) | ±2%                                                             |
| +300 to +1500°C (+572 to +2732°F) | +300 to +1500°C (+572 to +2732°F) | ±2%                                                             |

|                              |                                                                                                                                                                                |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measurement analysis         |                                                                                                                                                                                |
| Spotmeter                    | 3 in live mode                                                                                                                                                                 |
| Area                         | 3 in live mode                                                                                                                                                                 |
| Automatic hot/cold detection | Automatic maximum/minimum markers within area                                                                                                                                  |
| Measurement presets          | <ul style="list-style-type: none"><li>• No measurements</li><li>• Center spot</li><li>• Hot spot</li><li>• Cold spot</li><li>• User preset 1</li><li>• User preset 2</li></ul> |
| Difference temperature       | Yes                                                                                                                                                                            |
| Reference temperature        | Yes                                                                                                                                                                            |

|                                     |                                                                                                                                                                           |
|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Measurement analysis</b>         |                                                                                                                                                                           |
| Emissivity correction               | Yes, variable from 0.01 to 1.0 or selected from materials list                                                                                                            |
| Measurement corrections             | Yes                                                                                                                                                                       |
| External optics/windows correction  | Yes                                                                                                                                                                       |
| Screening                           | 0.5°C (0.9°F) accuracy at 37°C (98.6°F) with reference                                                                                                                    |
| <b>Alarm</b>                        |                                                                                                                                                                           |
| Color alarm (isotherm)              | <ul style="list-style-type: none"> <li>• Above</li> <li>• Below</li> <li>• Interval</li> <li>• Condensation (moisture/humidity/dewpoint)</li> <li>• Insulation</li> </ul> |
| Measurement function alarm          | Audible/visual alarms (above/below) on any selected measurement function                                                                                                  |
| <b>Set-up</b>                       |                                                                                                                                                                           |
| Color palettes                      | <ul style="list-style-type: none"> <li>• Iron</li> <li>• Gray</li> <li>• Rainbow</li> <li>• Arctic</li> <li>• Lava</li> <li>• Rainbow HC</li> </ul>                       |
| Setup commands                      | Local adaptation of units, language, date, and time formats                                                                                                               |
| Languages                           | 21                                                                                                                                                                        |
| <b>Service functions</b>            |                                                                                                                                                                           |
| Camera software update              | Use PC software FLIR Tools                                                                                                                                                |
| <b>Storage of images</b>            |                                                                                                                                                                           |
| Storage media                       | Removable memory: SD card                                                                                                                                                 |
| Time lapse (Periodic image storage) | 10 seconds to 24 hours (infrared)                                                                                                                                         |
| Remote control operation            | <ul style="list-style-type: none"> <li>• Using FLIR Tools (using USB cable)</li> <li>• FLIR Tools Mobile (over Wi-Fi)</li> </ul>                                          |
| Image file format                   | Standard JPEG, measurement data included. Infrared-only mode                                                                                                              |
| <b>Image annotations</b>            |                                                                                                                                                                           |
| Voice                               | 60 seconds with built-in microphone and speaker (and via Bluetooth) on still images and video                                                                             |
| Text                                | Text from predefined list or soft keyboard on touchscreen                                                                                                                 |
| Visual image annotation             | Yes                                                                                                                                                                       |
| Image sketch                        | Yes: on infrared only                                                                                                                                                     |
| Sketch                              | From touchscreen                                                                                                                                                          |
| METERLiNK                           | Wireless connection (Bluetooth) to:<br>FLIR meters with METERLiNK                                                                                                         |
| Area measurement information        | Yes                                                                                                                                                                       |
| GPS                                 | Location data automatically added to every still image and first frame in video from built-in GPS                                                                         |

|                                                                                   |                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Video recording in camera</b>                                                  |                                                                                                                                                                                                                  |
| Radiometric infrared-video recording                                              | RTRR (.csq)                                                                                                                                                                                                      |
| Non-radiometric infrared-video recording                                          | H.264 to memory card                                                                                                                                                                                             |
| Visual video recording                                                            | H.264 to memory card                                                                                                                                                                                             |
| <b>Video streaming</b>                                                            |                                                                                                                                                                                                                  |
| Radiometric infrared-video streaming (compressed)                                 | Over UVC                                                                                                                                                                                                         |
| Non-radiometric video streaming (compressed: IR, MSX, visual, Picture in Picture) | <ul style="list-style-type: none"> <li>• H.264 (AVC) over RTSP (Wi-Fi)</li> <li>• MPEG4 over RTSP (Wi-Fi)</li> <li>• MJPEG over UVC and RTSP (Wi-Fi)</li> </ul>                                                  |
| Visual video streaming                                                            | Yes                                                                                                                                                                                                              |
| <b>Digital camera</b>                                                             |                                                                                                                                                                                                                  |
| Resolution                                                                        | 5 MP with LED light                                                                                                                                                                                              |
| Focus                                                                             | Fixed                                                                                                                                                                                                            |
| Field of view                                                                     | 53° × 41°                                                                                                                                                                                                        |
| Video lamp                                                                        | Built-in LED light                                                                                                                                                                                               |
| <b>Laser pointer</b>                                                              |                                                                                                                                                                                                                  |
| Laser alignment                                                                   | Position is automatically displayed on the infrared image                                                                                                                                                        |
| Laser distance meter                                                              | Activated by dedicated button                                                                                                                                                                                    |
| Laser                                                                             | Class 2, 0.05–40 m (0.16–131 ft.) ±1% of measured distance                                                                                                                                                       |
| <b>Data communication interfaces</b>                                              |                                                                                                                                                                                                                  |
| Interfaces                                                                        | USB 2.0, Bluetooth, Wi-Fi, DisplayPort                                                                                                                                                                           |
| METERLiNK/Bluetooth                                                               | Communication with headset and external sensors                                                                                                                                                                  |
| Wi-Fi                                                                             | Peer to peer (ad hoc) or infrastructure (network)                                                                                                                                                                |
| Audio                                                                             | Microphone and speaker for voice annotation of images                                                                                                                                                            |
| USB                                                                               | USB Type-C: data transfer/video/power                                                                                                                                                                            |
| USB standard                                                                      | USB 2.0 High Speed                                                                                                                                                                                               |
| Video out                                                                         | DisplayPort                                                                                                                                                                                                      |
| Video connector type                                                              | DisplayPort over USB Type-C                                                                                                                                                                                      |
| <b>Radio</b>                                                                      |                                                                                                                                                                                                                  |
| Operating frequency                                                               | Bluetooth + EDR/LE: 2402–2480 MHz<br>WLAN 2.4 GHz: 2412–2462 MHz<br>WLAN 5 GHz: 5150–5350 MHz (DFS: only slave mode)<br>Note that frequency band 5150–5350 MHz is for indoor use only, see national regulations. |
| RF output (EIRP)                                                                  | Bluetooth + EDR/LE: < 10 dBm<br>WLAN: < 17 dBm                                                                                                                                                                   |
| Antenna                                                                           | Integrated PIFA antenna (gain: maximum 1.4 dBi)                                                                                                                                                                  |



|                                       |                                                                                                                                                                                                                                    |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power system</b>                   |                                                                                                                                                                                                                                    |
| Battery type                          | Rechargeable Li-ion battery                                                                                                                                                                                                        |
| Battery voltage                       | 3.6 V                                                                                                                                                                                                                              |
| Battery operating time                | > 4 hours at 25°C (68°F) with typical use                                                                                                                                                                                          |
| Charging system                       | In camera (AC adapter or 12 V from a vehicle) or two-bay charger                                                                                                                                                                   |
| Charging time (using two-bay charger) | 3.5 h to 90% capacity, on-screen indicator                                                                                                                                                                                         |
| Charging temperature                  | 0°C to +45°C (+32°F to +113°F), except for the Korean market: +10°C to +45°C (+50°F to +113°F)                                                                                                                                     |
| External power operation              | AC adapter 90–260 V AC (50/60 Hz) or 12 V from a vehicle (cable with standard plug, optional)                                                                                                                                      |
| Power management                      | Automatic shut-down and sleep mode                                                                                                                                                                                                 |
| <b>Environmental data</b>             |                                                                                                                                                                                                                                    |
| Operating temperature range           | –15 to +50°C (5–122°F)                                                                                                                                                                                                             |
| Storage temperature range             | –40 to +70°C (–40 to 158°F)                                                                                                                                                                                                        |
| Humidity (operating and storage)      | IEC 60068-2-30/24 hours, 95% relative humidity, 25–40°C (77–104°F)/2 cycles                                                                                                                                                        |
| EMC                                   | <ul style="list-style-type: none"> <li>• ETSI EN 301 489-1 (radio)</li> <li>• ETSI EN 301 489-17</li> <li>• EN 61000-6-2 (immunity)</li> <li>• EN 61000-6-3 (emission)</li> <li>• FCC 47 CFR Part 15 Class B (emission)</li> </ul> |
| Radio spectrum                        | <ul style="list-style-type: none"> <li>• ETSI EN 300 228</li> <li>• FCC Part 15.249</li> <li>• RSS-247 Issue 2</li> </ul>                                                                                                          |
| Encapsulation                         | IP 54 (IEC 60529)                                                                                                                                                                                                                  |
| Shock                                 | 25g (IEC 60068-2-27)                                                                                                                                                                                                               |
| Vibration                             | 2g (IEC 60068-2-6)                                                                                                                                                                                                                 |
| Safety                                | EN/UL/CSA/PSE 60950-1                                                                                                                                                                                                              |
| <b>Physical data</b>                  |                                                                                                                                                                                                                                    |
| Weight (including battery)            | 1.3 kg (2.9 lb.)                                                                                                                                                                                                                   |
| Size (L × W × H)                      | <ul style="list-style-type: none"> <li>• Lens vertical: 140 × 201.3 × 84.1 mm (5.5 × 7.9 × 3.3 in.)</li> <li>• Lens horizontal: 140 × 201.3 × 167.3 mm (5.5 × 7.9 × 6.6 in.)</li> </ul>                                            |
| Battery weight                        | 195 g (6.89 oz.)                                                                                                                                                                                                                   |
| Battery size (L × W × H)              | 59 × 66 × 94 mm (2.3 × 2.6 × 3.7 in.)                                                                                                                                                                                              |
| Tripod mounting                       | UNC ¼"-20                                                                                                                                                                                                                          |
| Housing material                      | PCABS with TPE, magnesium                                                                                                                                                                                                          |
| Color                                 | Black                                                                                                                                                                                                                              |
| <b>Warranty and service</b>           |                                                                                                                                                                                                                                    |
| Warranty                              | <a href="http://www.flir.com/warranty/">http://www.flir.com/warranty/</a>                                                                                                                                                          |

| Shipping information |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Packaging, type      | Cardboard box                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Packaging, contents  | <ul style="list-style-type: none"> <li>Accessory box I: <ul style="list-style-type: none"> <li>Power supply for battery charger</li> <li>Power supply, 15 W/3 A</li> <li>Printed documentation</li> <li>SD card (8 GB)</li> <li>USB 2.0 A to USB Type-C cable</li> <li>USB Type-C to HDMI and PD adapter</li> <li>USB Type-C to USB Type-C cable (USB 2.0 standard)</li> </ul> </li> <li>Accessory box II: <ul style="list-style-type: none"> <li>Lens cap strap</li> <li>Lens cleaning cloth</li> <li>Neck strap</li> </ul> </li> <li>Battery (2 ea)</li> <li>Battery charger</li> <li>Extra lens, 14°</li> <li>Extra lens, 42°</li> <li>Hard transport case</li> <li>Infrared camera with lens</li> <li>Lens cap, front</li> <li>Lens cap, front and rear (only for extra lenses)</li> </ul> |
| Packaging, weight    | 6.4 kg (14.1 lb.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Packaging, size      | 500 × 190 × 370 mm (19.7 × 7.5 × 14.6 in.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| EAN-13               | <ul style="list-style-type: none"> <li>Sweden: 7332558013014</li> <li>Estonia: 4743254003309</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| UPC-12               | 845188014704                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Country of origin    | Sweden and/or Estonia                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

#### Supplies and accessories:

- T198495; Pouch
- T197771ACC; Bluetooth Headset
- T130337ACC; Calibration target
- T199588; Lens 14° + case
- T199589; Lens 24° + case
- T199590; Lens 42° + case
- T911630ACC; Power supply for camera, 15 W/3 A
- T911631ACC; USB 2.0 A to USB Type-C cable, 0.9 m
- T911633ACC; Power supply for battery charger
- T911705ACC; USB Type-C to USB Type-C cable (USB 2.0 standard), 1.0 m
- T911706ACC; Car adapter 12 V
- T911845ACC; USB Type-C to HDMI and PD adapter
- T911846ACC; USB 2.0 A to USB Type-C with Power supply
- T199300ACC; Battery
- T199610; Battery charger
- T199601; Hand strap and neck strap
- T199347ACC; Hard transport case
- T199609; Option, Macro mode 71/103 µm for 24°
- T300030; Option, No radio
- T198583; FLIR Tools+ (download card incl. license key)
- T198696; FLIR ResearchIR Max 4 (hardware sec. dev.)
- T199013; FLIR ResearchIR Max 4 (printed license key)
- T199043; FLIR ResearchIR Max 4 Upgrade (printed license key)

- 
- INST-EW-0155; Extended Warranty 1 Year for A3xxf, T540, T600/bx, T610
  - INST-EWGM-0165; Premium Service Package for T540, T600/bx, T610
  - INST-GM-0150; General Maintenance Package for T540, T6xx

## 27.17 FLIR T540 42° + 14°

P/N: 79307-0201

Rev.: 53834

| Imaging and optical data                  |                                                                                                                                   |
|-------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Infrared resolution                       | 464 × 348 pixels                                                                                                                  |
| UltraMax (super-resolution) <sup>19</sup> | In FLIR Tools                                                                                                                     |
| NETD                                      | <ul style="list-style-type: none"> <li>&lt;30 mK, 42° @ +30°C (+86°F)</li> <li>&lt;50 mK, 14° @ +30°C (+86°F)</li> </ul>          |
| Field of view                             | <ul style="list-style-type: none"> <li>42° × 32°</li> <li>14° × 10°</li> </ul>                                                    |
| Minimum focus distance                    | <ul style="list-style-type: none"> <li>0.15 m (0.49 ft.), 42°</li> <li>1.0 m (3.28 ft.), 14°</li> </ul>                           |
| Minimum focus distance with MSX           | <ul style="list-style-type: none"> <li>0.65 m (2.13 ft.), 42°</li> <li>1.0 m (3.28 ft.), 14°</li> </ul>                           |
| Focal length                              | <ul style="list-style-type: none"> <li>10 mm (0.39 in.), 42°</li> <li>29 mm (1.41 in.), 14°</li> </ul>                            |
| Spatial resolution (IFOV)                 | <ul style="list-style-type: none"> <li>1.66 mrad/pixel, 42°</li> <li>0.52 mrad/pixel, 14°</li> </ul>                              |
| Available extra lenses                    | 24°                                                                                                                               |
| Lens identification                       | Automatic                                                                                                                         |
| f number                                  | <ul style="list-style-type: none"> <li>1.1, 42°</li> <li>1.5, 14°</li> </ul>                                                      |
| Image frequency                           | 30 Hz                                                                                                                             |
| Focus                                     | <ul style="list-style-type: none"> <li>Continuous LDM</li> <li>One-shot LDM</li> <li>One-shot contrast</li> <li>Manual</li> </ul> |
| Field of view match                       | Yes                                                                                                                               |
| Digital zoom                              | 1–6× continuous                                                                                                                   |
| Detector data                             |                                                                                                                                   |
| Focal plane array/spectral range          | Uncooled microbolometer/7.5–14 µm                                                                                                 |
| Detector pitch                            | 17 µm                                                                                                                             |
| Image presentation                        |                                                                                                                                   |
| Resolution                                | 640 × 480 pixels (VGA)                                                                                                            |
| Surface brightness (cd/m <sup>2</sup> )   | 400                                                                                                                               |
| Screen size                               | 4 in.                                                                                                                             |
| Viewing angle                             | 80°                                                                                                                               |
| Color depth (bits)                        | 24                                                                                                                                |
| Aspect ratio                              | 4:3                                                                                                                               |

<sup>19</sup>. Not supported when using macro.

|                           |                                                                                                                                           |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Image presentation</b> |                                                                                                                                           |
| Auto-rotation             | Yes                                                                                                                                       |
| Touchscreen               | Optically bonded PCAP                                                                                                                     |
| Display technology        | IPS                                                                                                                                       |
| Cover glass material      | Dragontrail®                                                                                                                              |
| Programmable buttons      | 2                                                                                                                                         |
| Viewfinder                | No                                                                                                                                        |
| Image adjustment          | <ul style="list-style-type: none"> <li>• Automatic</li> <li>• Automatic maximum</li> <li>• Automatic minimum</li> <li>• Manual</li> </ul> |

|                                 |                       |
|---------------------------------|-----------------------|
| <b>Image presentation modes</b> |                       |
| Infrared image                  | Yes                   |
| Visual image                    | Yes                   |
| MSX                             | Yes                   |
| Picture in picture              | Resizable and movable |
| Gallery                         | Yes                   |

|                                   |                                   |                                                                |
|-----------------------------------|-----------------------------------|----------------------------------------------------------------|
| <b>Measurement</b>                |                                   |                                                                |
| Camera temperature range          | Object temperature range          | Accuracy — for ambient temperature +15 to +35°C (+59 to +95°F) |
| -20 to +120°C (-4 to +248°F)      | -20 to +100°C (-4 to +212°F)      | ±2°C (±3.6°F)                                                  |
|                                   | +100 to +120°C (+212 to +248°F)   | ±2%                                                            |
| 0 to +650°C (+32 to +1202°F)      | 0 to +100°C (+32 to +212°F)       | ±2°C (±3.6°F)                                                  |
|                                   | +100 to +650°C (+212 to +1202°F)  | ±2%                                                            |
| +300 to +1500°C (+572 to +2732°F) | +300 to +1500°C (+572 to +2732°F) | ±2%                                                            |

|                              |                                                                                                                                                                                       |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Measurement analysis</b>  |                                                                                                                                                                                       |
| Spotmeter                    | 3 in live mode                                                                                                                                                                        |
| Area                         | 3 in live mode                                                                                                                                                                        |
| Automatic hot/cold detection | Automatic maximum/minimum markers within area                                                                                                                                         |
| Measurement presets          | <ul style="list-style-type: none"> <li>• No measurements</li> <li>• Center spot</li> <li>• Hot spot</li> <li>• Cold spot</li> <li>• User preset 1</li> <li>• User preset 2</li> </ul> |
| Difference temperature       | Yes                                                                                                                                                                                   |
| Reference temperature        | Yes                                                                                                                                                                                   |
| Emissivity correction        | Yes, variable from 0.01 to 1.0 or selected from materials list                                                                                                                        |
| Measurement corrections      | Yes                                                                                                                                                                                   |

|                                     |                                                                                                                                                                           |
|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Measurement analysis</b>         |                                                                                                                                                                           |
| External optics/windows correction  | Yes                                                                                                                                                                       |
| Screening                           | 0.5°C (0.9°F) accuracy at 37°C (98.6°F) with reference                                                                                                                    |
| <b>Alarm</b>                        |                                                                                                                                                                           |
| Color alarm (isotherm)              | <ul style="list-style-type: none"> <li>• Above</li> <li>• Below</li> <li>• Interval</li> <li>• Condensation (moisture/humidity/dewpoint)</li> <li>• Insulation</li> </ul> |
| Measurement function alarm          | Audible/visual alarms (above/below) on any selected measurement function                                                                                                  |
| <b>Set-up</b>                       |                                                                                                                                                                           |
| Color palettes                      | <ul style="list-style-type: none"> <li>• Iron</li> <li>• Gray</li> <li>• Rainbow</li> <li>• Arctic</li> <li>• Lava</li> <li>• Rainbow HC</li> </ul>                       |
| Setup commands                      | Local adaptation of units, language, date, and time formats                                                                                                               |
| Languages                           | 21                                                                                                                                                                        |
| <b>Service functions</b>            |                                                                                                                                                                           |
| Camera software update              | Use PC software FLIR Tools                                                                                                                                                |
| <b>Storage of images</b>            |                                                                                                                                                                           |
| Storage media                       | Removable memory: SD card                                                                                                                                                 |
| Time lapse (Periodic image storage) | 10 seconds to 24 hours (infrared)                                                                                                                                         |
| Remote control operation            | <ul style="list-style-type: none"> <li>• Using FLIR Tools (using USB cable)</li> <li>• FLIR Tools Mobile (over Wi-Fi)</li> </ul>                                          |
| Image file format                   | Standard JPEG, measurement data included. Infrared-only mode                                                                                                              |
| <b>Image annotations</b>            |                                                                                                                                                                           |
| Voice                               | 60 seconds with built-in microphone and speaker (and via Bluetooth) on still images and video                                                                             |
| Text                                | Text from predefined list or soft keyboard on touchscreen                                                                                                                 |
| Visual image annotation             | Yes                                                                                                                                                                       |
| Image sketch                        | Yes: on infrared only                                                                                                                                                     |
| Sketch                              | From touchscreen                                                                                                                                                          |
| METERLiNK                           | Wireless connection (Bluetooth) to:<br>FLIR meters with METERLiNK                                                                                                         |
| Area measurement information        | Yes                                                                                                                                                                       |
| GPS                                 | Location data automatically added to every still image and first frame in video from built-in GPS                                                                         |

|                                                                                   |                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Video recording in camera</b>                                                  |                                                                                                                                                                                                                  |
| Radiometric infrared-video recording                                              | RTRR (.csq)                                                                                                                                                                                                      |
| Non-radiometric infrared-video recording                                          | H.264 to memory card                                                                                                                                                                                             |
| Visual video recording                                                            | H.264 to memory card                                                                                                                                                                                             |
| <b>Video streaming</b>                                                            |                                                                                                                                                                                                                  |
| Radiometric infrared-video streaming (compressed)                                 | Over UVC                                                                                                                                                                                                         |
| Non-radiometric video streaming (compressed: IR, MSX, visual, Picture in Picture) | <ul style="list-style-type: none"> <li>• H.264 (AVC) over RTSP (Wi-Fi)</li> <li>• MPEG4 over RTSP (Wi-Fi)</li> <li>• MJPEG over UVC and RTSP (Wi-Fi)</li> </ul>                                                  |
| Visual video streaming                                                            | Yes                                                                                                                                                                                                              |
| <b>Digital camera</b>                                                             |                                                                                                                                                                                                                  |
| Resolution                                                                        | 5 MP with LED light                                                                                                                                                                                              |
| Focus                                                                             | Fixed                                                                                                                                                                                                            |
| Field of view                                                                     | 53° × 41°                                                                                                                                                                                                        |
| Video lamp                                                                        | Built-in LED light                                                                                                                                                                                               |
| <b>Laser pointer</b>                                                              |                                                                                                                                                                                                                  |
| Laser alignment                                                                   | Position is automatically displayed on the infrared image                                                                                                                                                        |
| Laser distance meter                                                              | Activated by dedicated button                                                                                                                                                                                    |
| Laser                                                                             | Class 2, 0.05–40 m (0.16–131 ft.) ±1% of measured distance                                                                                                                                                       |
| <b>Data communication interfaces</b>                                              |                                                                                                                                                                                                                  |
| Interfaces                                                                        | USB 2.0, Bluetooth, Wi-Fi, DisplayPort                                                                                                                                                                           |
| METERLiNK/Bluetooth                                                               | Communication with headset and external sensors                                                                                                                                                                  |
| Wi-Fi                                                                             | Peer to peer (ad hoc) or infrastructure (network)                                                                                                                                                                |
| Audio                                                                             | Microphone and speaker for voice annotation of images                                                                                                                                                            |
| USB                                                                               | USB Type-C: data transfer/video/power                                                                                                                                                                            |
| USB standard                                                                      | USB 2.0 High Speed                                                                                                                                                                                               |
| Video out                                                                         | DisplayPort                                                                                                                                                                                                      |
| Video connector type                                                              | DisplayPort over USB Type-C                                                                                                                                                                                      |
| <b>Radio</b>                                                                      |                                                                                                                                                                                                                  |
| Operating frequency                                                               | Bluetooth + EDR/LE: 2402–2480 MHz<br>WLAN 2.4 GHz: 2412–2462 MHz<br>WLAN 5 GHz: 5150–5350 MHz (DFS: only slave mode)<br>Note that frequency band 5150–5350 MHz is for indoor use only, see national regulations. |
| RF output (EIRP)                                                                  | Bluetooth + EDR/LE: < 10 dBm<br>WLAN: < 17 dBm                                                                                                                                                                   |
| Antenna                                                                           | Integrated PIFA antenna (gain: maximum 1.4 dBi)                                                                                                                                                                  |

|                                       |                                                                                                                                                                                                                                    |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power system</b>                   |                                                                                                                                                                                                                                    |
| Battery type                          | Rechargeable Li-ion battery                                                                                                                                                                                                        |
| Battery voltage                       | 3.6 V                                                                                                                                                                                                                              |
| Battery operating time                | > 4 hours at 25°C (68°F) with typical use                                                                                                                                                                                          |
| Charging system                       | In camera (AC adapter or 12 V from a vehicle) or two-bay charger                                                                                                                                                                   |
| Charging time (using two-bay charger) | 3.5 h to 90% capacity, on-screen indicator                                                                                                                                                                                         |
| Charging temperature                  | 0°C to +45°C (+32°F to +113°F), except for the Korean market: +10°C to +45°C (+50°F to +113°F)                                                                                                                                     |
| External power operation              | AC adapter 90–260 V AC (50/60 Hz) or 12 V from a vehicle (cable with standard plug, optional)                                                                                                                                      |
| Power management                      | Automatic shut-down and sleep mode                                                                                                                                                                                                 |
| <b>Environmental data</b>             |                                                                                                                                                                                                                                    |
| Operating temperature range           | –15 to +50°C (5–122°F)                                                                                                                                                                                                             |
| Storage temperature range             | –40 to +70°C (–40 to 158°F)                                                                                                                                                                                                        |
| Humidity (operating and storage)      | IEC 60068-2-30/24 hours, 95% relative humidity, 25–40°C (77–104°F)/2 cycles                                                                                                                                                        |
| EMC                                   | <ul style="list-style-type: none"> <li>• ETSI EN 301 489-1 (radio)</li> <li>• ETSI EN 301 489-17</li> <li>• EN 61000-6-2 (immunity)</li> <li>• EN 61000-6-3 (emission)</li> <li>• FCC 47 CFR Part 15 Class B (emission)</li> </ul> |
| Radio spectrum                        | <ul style="list-style-type: none"> <li>• ETSI EN 300 228</li> <li>• FCC Part 15.249</li> <li>• RSS-247 Issue 2</li> </ul>                                                                                                          |
| Encapsulation                         | IP 54 (IEC 60529)                                                                                                                                                                                                                  |
| Shock                                 | 25g (IEC 60068-2-27)                                                                                                                                                                                                               |
| Vibration                             | 2g (IEC 60068-2-6)                                                                                                                                                                                                                 |
| Safety                                | EN/UL/CSA/PSE 60950-1                                                                                                                                                                                                              |
| <b>Physical data</b>                  |                                                                                                                                                                                                                                    |
| Weight (including battery)            | 1.3 kg (2.9 lb.)                                                                                                                                                                                                                   |
| Size (L × W × H)                      | <ul style="list-style-type: none"> <li>• Lens vertical: 140 × 201.3 × 84.1 mm (5.5 × 7.9 × 3.3 in.)</li> <li>• Lens horizontal: 140 × 201.3 × 167.3 mm (5.5 × 7.9 × 6.6 in.)</li> </ul>                                            |
| Battery weight                        | 195 g (6.89 oz.)                                                                                                                                                                                                                   |
| Battery size (L × W × H)              | 59 × 66 × 94 mm (2.3 × 2.6 × 3.7 in.)                                                                                                                                                                                              |
| Tripod mounting                       | UNC ¼"-20                                                                                                                                                                                                                          |
| Housing material                      | PCABS with TPE, magnesium                                                                                                                                                                                                          |
| Color                                 | Black                                                                                                                                                                                                                              |
| <b>Warranty and service</b>           |                                                                                                                                                                                                                                    |
| Warranty                              | <a href="http://www.flir.com/warranty/">http://www.flir.com/warranty/</a>                                                                                                                                                          |



| Shipping information |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Packaging, type      | Cardboard box                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Packaging, contents  | <ul style="list-style-type: none"> <li>Accessory box I: <ul style="list-style-type: none"> <li>Power supply for battery charger</li> <li>Power supply, 15 W/3 A</li> <li>Printed documentation</li> <li>SD card (8 GB)</li> <li>USB 2.0 A to USB Type-C cable</li> <li>USB Type-C to HDMI and PD adapter</li> <li>USB Type-C to USB Type-C cable (USB 2.0 standard)</li> </ul> </li> <li>Accessory box II: <ul style="list-style-type: none"> <li>Lens cap strap</li> <li>Lens cleaning cloth</li> <li>Neck strap</li> </ul> </li> <li>Battery (2 ea)</li> <li>Battery charger</li> <li>Extra lens, 14°</li> <li>Hard transport case</li> <li>Infrared camera with lens</li> <li>Lens cap, front</li> <li>Lens cap, front and rear (only for extra lenses)</li> </ul> |
| Packaging, weight    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Packaging, size      | 500 × 190 × 370 mm (19.7 × 7.5 × 14.6 in.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| EAN-13               | 4743254003316                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| UPC-12               | 845188014728                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Country of origin    | Sweden and/or Estonia                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

#### Supplies and accessories:

- T198495; Pouch
- T197771ACC; Bluetooth Headset
- T130337ACC; Calibration target
- T199588; Lens 14° + case
- T199589; Lens 24° + case
- T199590; Lens 42° + case
- T911630ACC; Power supply for camera, 15 W/3 A
- T911631ACC; USB 2.0 A to USB Type-C cable, 0.9 m
- T911633ACC; Power supply for battery charger
- T911705ACC; USB Type-C to USB Type-C cable (USB 2.0 standard), 1.0 m
- T911706ACC; Car adapter 12 V
- T911845ACC; USB Type-C to HDMI and PD adapter
- T911846ACC; USB 2.0 A to USB Type-C with Power supply
- T199300ACC; Battery
- T199610; Battery charger
- T199601; Hand strap and neck strap
- T199347ACC; Hard transport case
- T199609; Option, Macro mode 71/103 µm for 24°
- T300030; Option, No radio
- T198583; FLIR Tools+ (download card incl. license key)
- T198696; FLIR ResearchIR Max 4 (hardware sec. dev.)
- T199013; FLIR ResearchIR Max 4 (printed license key)
- T199043; FLIR ResearchIR Max 4 Upgrade (printed license key)
- INST-EW-0155; Extended Warranty 1 Year for A3xxf, T540, T600/bx, T610
- INST-EWGM-0165; Premium Service Package for T540, T600/bx, T610

- 
- INST-GM-0150; General Maintenance Package for T540, T6xx

[See next page]

Technical drawing of the camera housing showing front and side views with dimensions.


**Front View Dimensions:**

- Top width: 119.4mm [4.7in]
- Bottom width: 115mm [4.53in]
- Optical axis diameter: 36mm [1.42in]
- Optical axis diameter (alternative): 47.9mm [1.89in]

**Side View Dimensions:**

- Height: 15mm [0.59in]







**Camera housing**

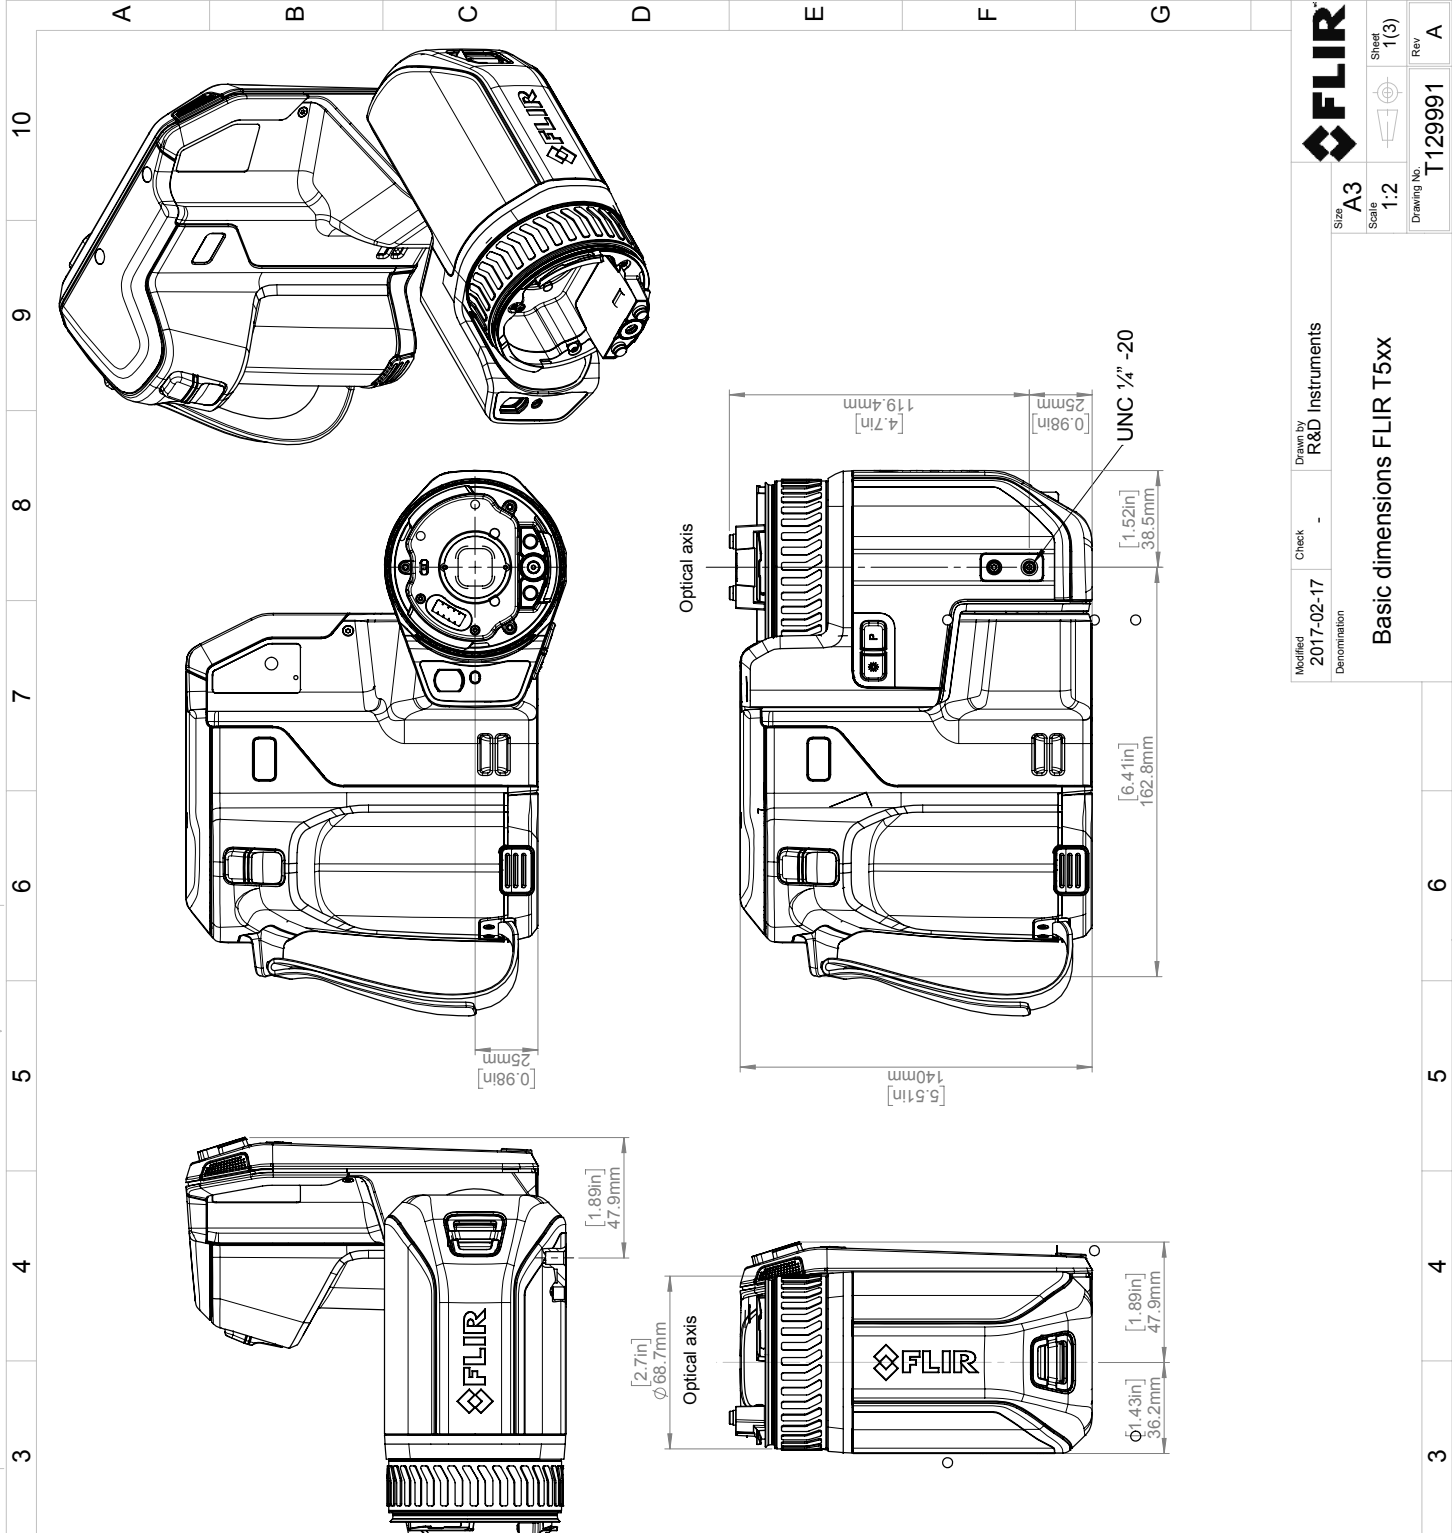

|                               |            |                             |                                                                                    |
|-------------------------------|------------|-----------------------------|------------------------------------------------------------------------------------|
| Modified<br>2017-02-17        | Check<br>- | Drawn by<br>R&D Instruments |  |
| Size<br><b>A3</b>             |            |                             |                                                                                    |
| Scale<br><b>1:2</b>           |            |                             |                                                                                    |
| Drawing No.<br><b>T129991</b> |            |                             | Sheet<br><b>1(3)</b>                                                               |
| Rev<br><b>A</b>               |            |                             |  |

© 2016, FLIR Systems, Inc. All rights reserved worldwide. No part of this drawing may be reproduced, stored in a retrieval system, or transmitted in any form, or by any means, electronic, mechanical, photocopying, recording, or otherwise, without written permission from FLIR Systems, Inc. Specifications subject to change without further notice. Dimensional data is based on nominal values. Products may be subject to regional market considerations. License procedures may apply. Product may be subject to US Export Regulations. Please refer to exportquestions@flir.com with any questions. Diversion contrary to US law is prohibited.



Camera with Lens IR f=10mm (42°)  
Camera with Lens IR f=17mm (24°)  
Camera with Lens IR f=29mm (14°)

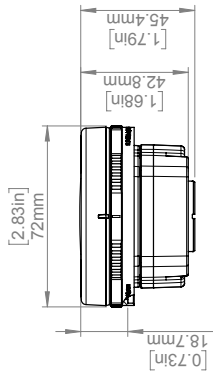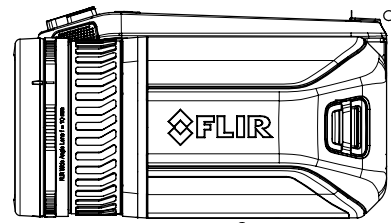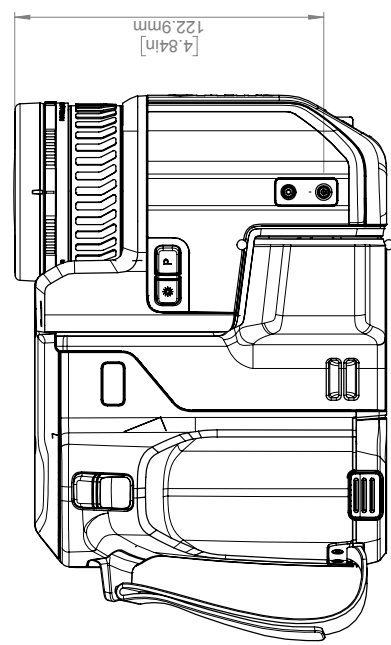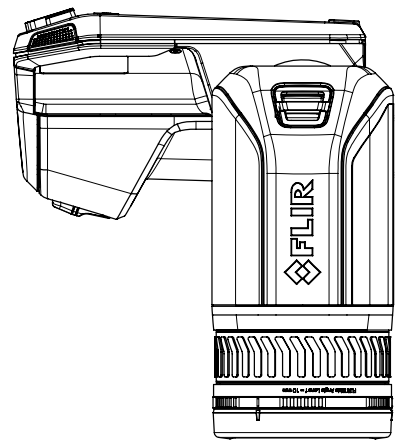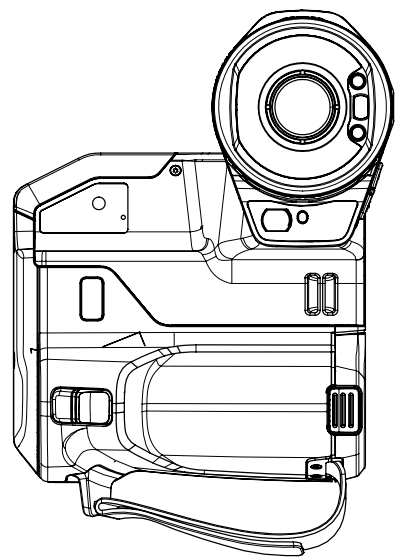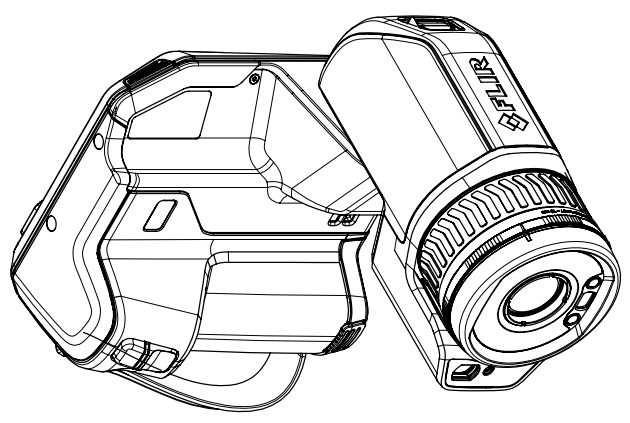

For additional dimensions see page 1

|                            |            |                             |               |
|----------------------------|------------|-----------------------------|---------------|
| Modified<br>2017-02-17     | Check<br>- | Drawn by<br>R&D Instruments | FLIR          |
| Denomination               |            | Size<br>A3                  | Sheet<br>2(3) |
|                            |            | Scale<br>1:5                | Rev<br>A      |
|                            |            | Drawing No.<br>T129991      |               |
| Basic dimensions FLIR T5xx |            |                             |               |

**www.valuetronics.com**

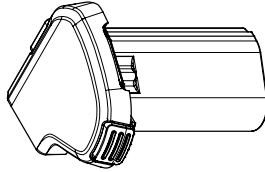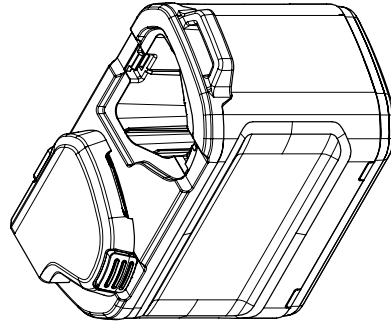

|                               |            |                             |                                                                                   |
|-------------------------------|------------|-----------------------------|-----------------------------------------------------------------------------------|
| Modified<br>2017-02-17        | Check<br>- | Drawn by<br>R&D Instruments |  |
| Size<br><b>A3</b>             |            |                             |                                                                                   |
| Sheet<br>Scale<br><b>1:5</b>  |            |                             |                                                                                   |
| Drawing No.<br><b>T129991</b> |            |                             | Rev<br><b>A</b>                                                                   |

[See next page]



The World's Sixth Sense™

November 13, 2017 Täby, Sweden

AQ320246

## CE Declaration of Conformity – EU Declaration of Conformity

Product: FLIR T5XX -series

Name and address of the manufacturer:

FLIR Systems AB

PO Box 7376

SE-187 15 Täby, Sweden

This declaration of conformity is issued under the sole responsibility of the manufacturer.

The object of the declaration: FLIR T5XX -series (Product Model Name FLIR-T8210).

The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

### Directives:

|           |             |                                                        |
|-----------|-------------|--------------------------------------------------------|
| Directive | 2014/30/EU  | Electromagnetic Compatibility                          |
| Directive | 2014/35/EU  | Low Voltage Directive                                  |
| Directive | 2012/19/EU  | Waste electrical and electric equipment                |
| Directive | 2014/53/EU  | Radio Equipment Directive (RED)                        |
| Directive | 1999/519/EC | Limitation of exposure to electromagnetic fields (SAR) |
| Directive | 2011/65/EU  | RoHS and 2015/830/EU                                   |

### Standards:

|            |                           |                                                                      |
|------------|---------------------------|----------------------------------------------------------------------|
| EMC Radio: | ETSI EN 301 489-1 + -17   | EMC for radio, broadband data transmission                           |
| Emission:  | EN 61000-6-3/A1:2011      | EMC – Generic standards                                              |
| Immunity:  | EN 61000-6-2:2005         | Electromagnetic Compatibility Generic                                |
|            | EN 301489-1:2016 v2.1.0   | ERM – EMC for radio equipment                                        |
|            | EN 301489-17:2012 v2.2.1  | ERM – EMC Wideband data                                              |
| Laser:     | EN 60825-1                | Safety of laser products                                             |
| Radio:     | ETSI EN 300 328 v2.1.1    | Harmonized EN covering essential requirements of the R&TTE Directive |
|            | ETSI EN 301 893 v.2.1.1   | 5GHz WLAN                                                            |
|            | EN 303 413 v1.1.0         | Radio Spectrum Efficiency (gps)                                      |
| SAR:       | EN 50566:2013/AC:2014     | Handheld and body mounted wireless                                   |
|            | EN 62209-02:2010          | Handheld and body mounted wireless                                   |
| Safety:    | IEC 60950-1:2005+A1:2009+ | Information technology equipment                                     |
|            | A2:2013 EN 60950-1:2006+  |                                                                      |
|            | A11:2009+AC:2011+A12:2011 |                                                                      |
| RoHS:      | EN 50581:2012             | Technical documentation                                              |

FLIR Systems AB

Quality Assurance

Lea Dabiri

Quality Manager



## 30.1 Moisture & water damage

### 30.1.1 General


It is often possible to detect moisture and water damage in a house by using an infrared camera. This is partly because the damaged area has a different heat conduction property and partly because it has a different thermal capacity to store heat than the surrounding material.

Many factors can come into play as to how moisture or water damage will appear in an infrared image.

For example, heating and cooling of these parts takes place at different rates depending on the material and the time of day. For this reason, it is important that other methods are used as well to check for moisture or water damage.

### 30.1.2 Figure

The image below shows extensive water damage on an external wall where the water has penetrated the outer facing because of an incorrectly installed window ledge.

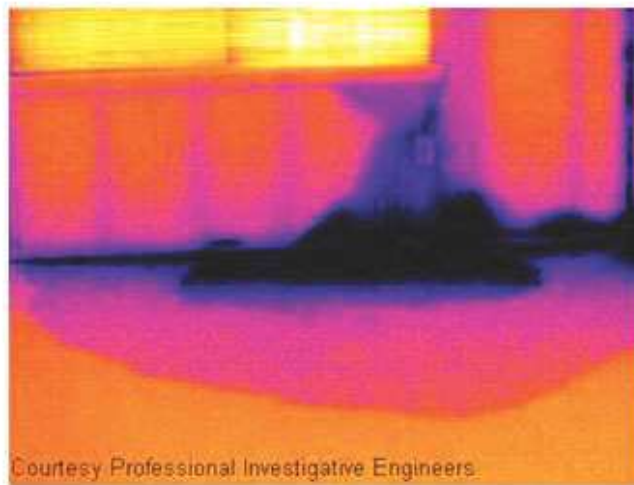

## 30.2 Faulty contact in socket

### 30.2.1 General

Depending on the type of connection a socket has, an improperly connected wire can result in local temperature increase. This temperature increase is caused by the reduced contact area between the connection point of the incoming wire and the socket, and can result in an electrical fire.


A socket's construction may differ dramatically from one manufacturer to another. For this reason, different faults in a socket can lead to the same typical appearance in an infrared image.

Local temperature increase can also result from improper contact between wire and socket, or from difference in load.

---

### 30.2.2 Figure

The image below shows a connection of a cable to a socket where improper contact in the connection has resulted in local temperature increase.

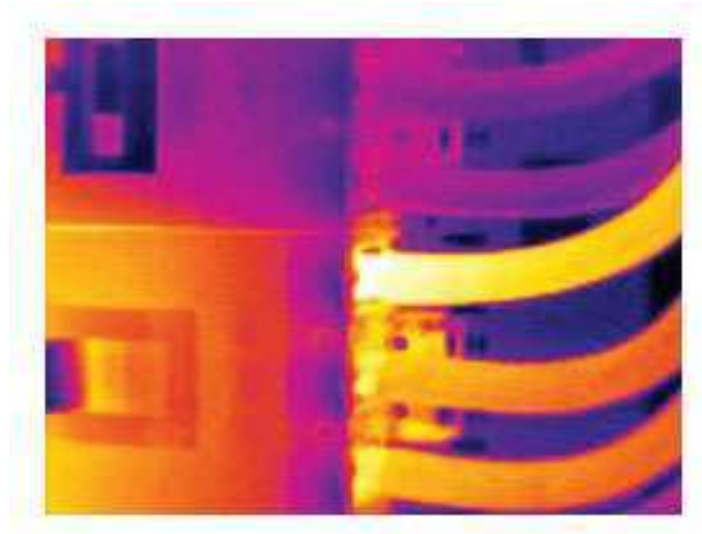

## 30.3 Oxidized socket

### 30.3.1 General


Depending on the type of socket and the environment in which the socket is installed, oxides may occur on the socket's contact surfaces. These oxides can lead to locally increased resistance when the socket is loaded, which can be seen in an infrared image as local temperature increase.

A socket's construction may differ dramatically from one manufacturer to another. For this reason, different faults in a socket can lead to the same typical appearance in an infrared image.

Local temperature increase can also result from improper contact between a wire and socket, or from difference in load.

### 30.3.2 Figure

The image below shows a series of fuses where one fuse has a raised temperature on the contact surfaces against the fuse holder. Because of the fuse holder's blank metal, the temperature increase is not visible there, while it is visible on the fuse's ceramic material.

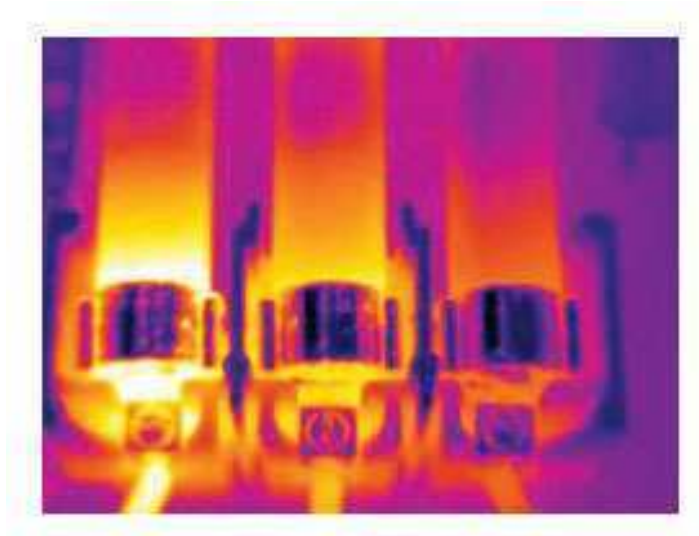

## 30.4 Insulation deficiencies

### 30.4.1 General


Insulation deficiencies may result from insulation losing volume over the course of time and thereby not entirely filling the cavity in a frame wall.

An infrared camera allows you to see these insulation deficiencies because they either have a different heat conduction property than sections with correctly installed insulation, and/or show the area where air is penetrating the frame of the building.

When you are inspecting a building, the temperature difference between the inside and outside should be at least 10°C (18°F). Studs, water pipes, concrete columns, and similar components may resemble an insulation deficiency in an infrared image. Minor differences may also occur naturally.

### 30.4.2 Figure

In the image below, insulation in the roof framing is lacking. Due to the absence of insulation, air has forced its way into the roof structure, which thus takes on a different characteristic appearance in the infrared image.

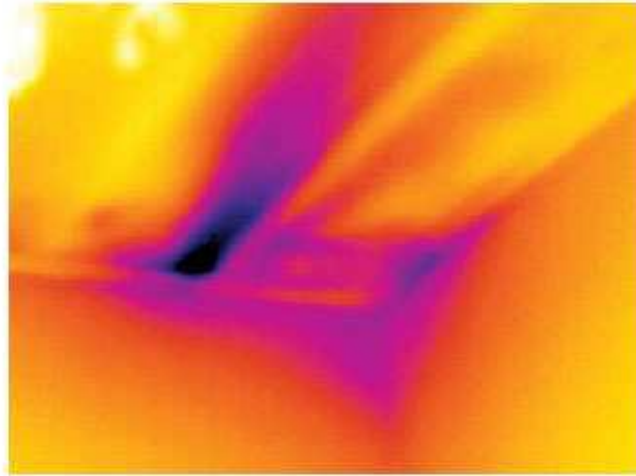

## 30.5 Draft

### 30.5.1 General

Draft can be found under baseboards, around door and window casings, and above ceiling trim. This type of draft is often possible to see with an infrared camera, as a cooler air-stream cools down the surrounding surface.


When you are investigating draft in a house, there should be sub-atmospheric pressure in the house. Close all doors, windows, and ventilation ducts, and allow the kitchen fan to run for a while before you take the infrared images.

An infrared image of draft often shows a typical stream pattern. You can see this stream pattern clearly in the picture below.

Also keep in mind that drafts can be concealed by heat from floor heating circuits.

### 30.5.2 Figure

The image below shows a ceiling hatch where faulty installation has resulted in a strong draft.

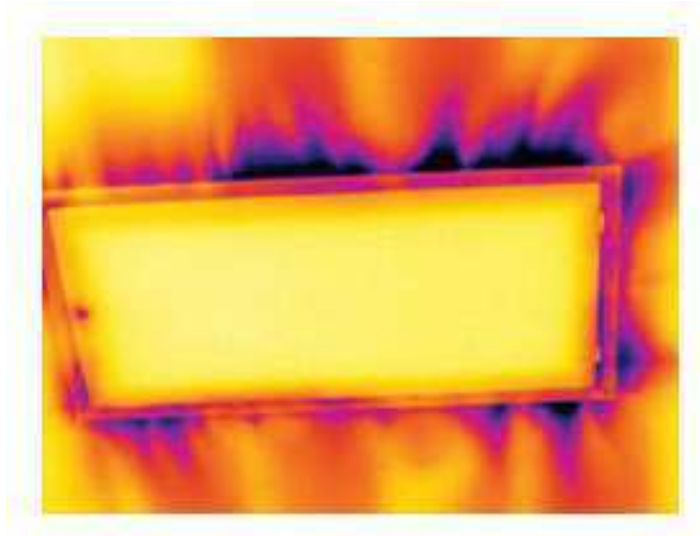

FLIR Systems was established in 1978 to pioneer the development of high-performance infrared imaging systems, and is the world leader in the design, manufacture, and marketing of thermal imaging systems for a wide variety of commercial, industrial, and government applications. Today, FLIR Systems embraces five major companies with outstanding achievements in infrared technology since 1958—the Swedish AGEMA Infrared Systems (formerly AGA Infrared Systems), the three United States companies Indigo Systems, FSI, and Inframetrics, and the French company Cedip.

Since 2007, FLIR Systems has acquired several companies with world-leading expertise in sensor technologies:

- Exttech Instruments (2007)
- Ifara Tecnologías (2008)
- Salvador Imaging (2009)
- OmniTech Partners (2009)
- Directed Perception (2009)
- Raymarine (2010)
- ICx Technologies (2010)
- TackTick Marine Digital Instruments (2011)
- Aerius Photonics (2011)
- Lorex Technology (2012)
- Traficon (2012)
- MARSS (2013)
- DigitalOptics micro-optics business (2013)
- DVTEL (2015)
- Point Grey Research (2016)
- Prox Dynamics (2016)

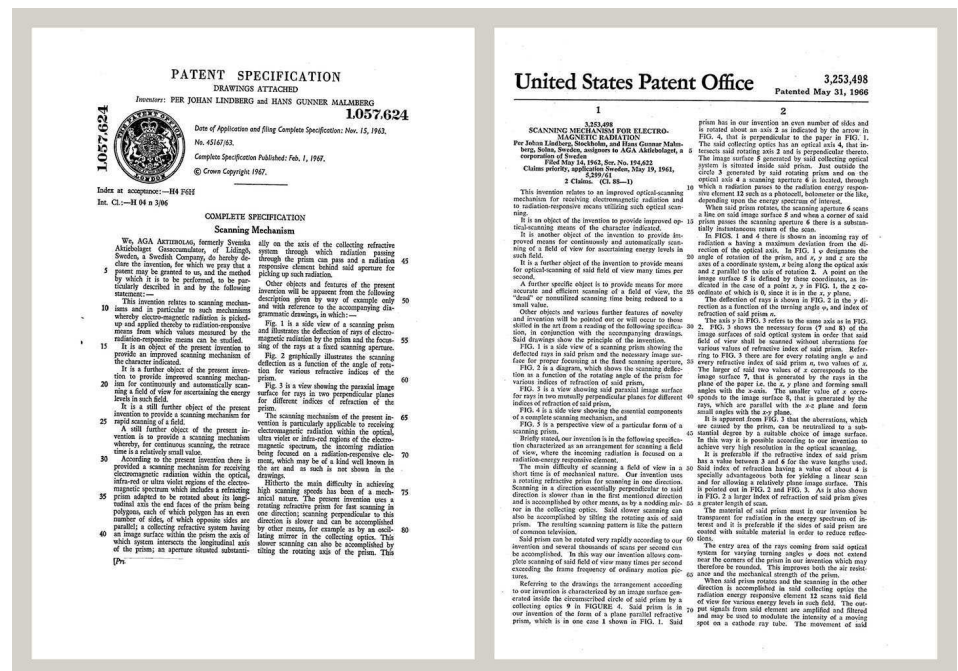


Figure 31.1 Patent documents from the early 1960s

FLIR Systems has three manufacturing plants in the United States (Portland, OR, Boston, MA, Santa Barbara, CA) and one in Sweden (Stockholm). Since 2007 there is also a

manufacturing plant in Tallinn, Estonia. Direct sales offices in Belgium, Brazil, China, France, Germany, Great Britain, Hong Kong, Italy, Japan, Korea, Sweden, and the USA—together with a worldwide network of agents and distributors—support our international customer base.

FLIR Systems is at the forefront of innovation in the infrared camera industry. We anticipate market demand by constantly improving our existing cameras and developing new ones. The company has set milestones in product design and development such as the introduction of the first battery-operated portable camera for industrial inspections, and the first uncooled infrared camera, to mention just two innovations.



**Figure 31.2** 1969: Thermovision Model 661. The camera weighed approximately 25 kg (55 lb.), the oscilloscope 20 kg (44 lb.), and the tripod 15 kg (33 lb.). The operator also needed a 220 VAC generator set, and a 10 L (2.6 US gallon) jar with liquid nitrogen. To the left of the oscilloscope the Polaroid attachment (6 kg (13 lb.)) can be seen.



**Figure 31.3** 2015: FLIR One, an accessory to iPhone and Android mobile phones. Weight: 90 g (3.2 oz.).

FLIR Systems manufactures all vital mechanical and electronic components of the camera systems itself. From detector design and manufacturing, to lenses and system electronics, to final testing and calibration, all production steps are carried out and supervised by our own engineers. The in-depth expertise of these infrared specialists ensures the accuracy and reliability of all vital components that are assembled into your infrared camera.

## 31.1 More than just an infrared camera

At FLIR Systems we recognize that our job is to go beyond just producing the best infrared camera systems. We are committed to enabling all users of our infrared camera systems to work more productively by providing them with the most powerful camera–software combination. Especially tailored software for predictive maintenance, R & D, and process monitoring is developed in-house. Most software is available in a wide variety of languages.

We support all our infrared cameras with a wide variety of accessories to adapt your equipment to the most demanding infrared applications.

## 31.2 Sharing our knowledge

Although our cameras are designed to be very user-friendly, there is a lot more to thermography than just knowing how to handle a camera. Therefore, FLIR Systems has founded the Infrared Training Center (ITC), a separate business unit, that provides certified training courses. Attending one of the ITC courses will give you a truly hands-on learning experience.

The staff of the ITC are also there to provide you with any application support you may need in putting infrared theory into practice.

## 31.3 Supporting our customers

FLIR Systems operates a worldwide service network to keep your camera running at all times. If you discover a problem with your camera, local service centers have all the equipment and expertise to solve it within the shortest possible time. Therefore, there is no need to send your camera to the other side of the world or to talk to someone who does not speak your language.



| Term                                     | Definition                                                                                                                                                                                                                                                                                                                                             |
|------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Absorption and emission <sup>20</sup>    | The capacity or ability of an object to absorb incident radiated energy is always the same as the capacity to emit its own energy as radiation                                                                                                                                                                                                         |
| Apparent temperature                     | uncompensated reading from an infrared instrument, containing all radiation incident on the instrument, regardless of its sources <sup>21</sup>                                                                                                                                                                                                        |
| Color palette                            | assigns different colors to indicate specific levels of apparent temperature. Palettes can provide high or low contrast, depending on the colors used in them                                                                                                                                                                                          |
| Conduction                               | direct transfer of thermal energy from molecule to molecule, caused by collisions between the molecules                                                                                                                                                                                                                                                |
| Convection                               | heat transfer mode where a fluid is brought into motion, either by gravity or another force, thereby transferring heat from one place to another                                                                                                                                                                                                       |
| Diagnostics                              | examination of symptoms and syndromes to determine the nature of faults or failures <sup>22</sup>                                                                                                                                                                                                                                                      |
| Direction of heat transfer <sup>23</sup> | Heat will spontaneously flow from hotter to colder, thereby transferring thermal energy from one place to another <sup>24</sup>                                                                                                                                                                                                                        |
| Emissivity                               | ratio of the power radiated by real bodies to the power that is radiated by a blackbody at the same temperature and at the same wavelength <sup>25</sup>                                                                                                                                                                                               |
| Energy conservation <sup>26</sup>        | The sum of the total energy contents in a closed system is constant                                                                                                                                                                                                                                                                                    |
| Exitant radiation                        | radiation that leaves the surface of an object, regardless of its original sources                                                                                                                                                                                                                                                                     |
| Heat                                     | thermal energy that is transferred between two objects (systems) due to their difference in temperature                                                                                                                                                                                                                                                |
| Heat transfer rate <sup>27</sup>         | The heat transfer rate under steady state conditions is directly proportional to the thermal conductivity of the object, the cross-sectional area of the object through which the heat flows, and the temperature difference between the two ends of the object. It is inversely proportional to the length, or thickness, of the object <sup>28</sup> |
| Incident radiation                       | radiation that strikes an object from its surroundings                                                                                                                                                                                                                                                                                                 |
| IR thermography                          | process of acquisition and analysis of thermal information from non-contact thermal imaging devices                                                                                                                                                                                                                                                    |
| Isotherm                                 | replaces certain colors in the scale with a contrasting color. It marks an interval of equal apparent temperature <sup>29</sup>                                                                                                                                                                                                                        |

20. Kirchhoff's law of thermal radiation.

21. Based on ISO 18434-1:2008 (en).

22. Based on ISO 13372:2004 (en).

23. 2nd law of thermodynamics.

24. This is a consequence of the 2nd law of thermodynamics, the law itself is more complicated.

25. Based on ISO 16714-3:2016 (en).

26. 1st law of thermodynamics.

27. Fourier's law.

28. This is the one-dimensional form of Fourier's law, valid for steady-state conditions.

29. Based on ISO 18434-1:2008 (en)

| Term                           | Definition                                                                                                                                       |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| Qualitative thermography       | thermography that relies on the analysis of thermal patterns to reveal the existence of and to locate the position of anomalies <sup>30</sup>    |
| Quantitative thermography      | thermography that uses temperature measurement to determine the seriousness of an anomaly, in order to establish repair priorities <sup>30</sup> |
| Radiative heat transfer        | Heat transfer by the emission and absorption of thermal radiation                                                                                |
| Reflected apparent temperature | apparent temperature of the environment that is reflected by the target into the IR camera <sup>31</sup>                                         |
| Spatial resolution             | ability of an IR camera to resolve small objects or details                                                                                      |
| Temperature                    | measure of the average kinetic energy of the molecules and atoms that make up the substance                                                      |
| Thermal energy                 | total kinetic energy of the molecules that make up the object <sup>32</sup>                                                                      |
| Thermal gradient               | gradual change in temperature over distance <sup>31</sup>                                                                                        |
| Thermal tuning                 | process of putting the colors of the image on the object of analysis, in order to maximize contrast                                              |

30. Based on ISO 10878-2013 (en).

31. Based on ISO 16714-3:2016 (en).

32. Thermal energy is part of the internal energy of an object.

## 33.1 Introduction

An infrared camera measures and images the emitted infrared radiation from an object. The fact that radiation is a function of object surface temperature makes it possible for the camera to calculate and display this temperature.

However, the radiation measured by the camera does not only depend on the temperature of the object but is also a function of the emissivity. Radiation also originates from the surroundings and is reflected in the object. The radiation from the object and the reflected radiation will also be influenced by the absorption of the atmosphere.

To measure temperature accurately, it is therefore necessary to compensate for the effects of a number of different radiation sources. This is done on-line automatically by the camera. The following object parameters must, however, be supplied for the camera:

- The emissivity of the object
- The reflected apparent temperature
- The distance between the object and the camera
- The relative humidity
- Temperature of the atmosphere

## 33.2 Emissivity

The most important object parameter to set correctly is the emissivity which, in short, is a measure of how much radiation is emitted from the object, compared to that from a perfect blackbody of the same temperature.

Normally, object materials and surface treatments exhibit emissivity ranging from approximately 0.1 to 0.95. A highly polished (mirror) surface falls below 0.1, while an oxidized or painted surface has a higher emissivity. Oil-based paint, regardless of color in the visible spectrum, has an emissivity over 0.9 in the infrared. Human skin exhibits an emissivity 0.97 to 0.98.

Non-oxidized metals represent an extreme case of perfect opacity and high reflexivity, which does not vary greatly with wavelength. Consequently, the emissivity of metals is low – only increasing with temperature. For non-metals, emissivity tends to be high, and decreases with temperature.

### 33.2.1 Finding the emissivity of a sample

#### 33.2.1.1 *Step 1: Determining reflected apparent temperature*

Use one of the following two methods to determine reflected apparent temperature:

## 33.2.1.1.1 Method 1: Direct method

Follow this procedure:

1. Look for possible reflection sources, considering that the incident angle = reflection angle ( $a = b$ ).

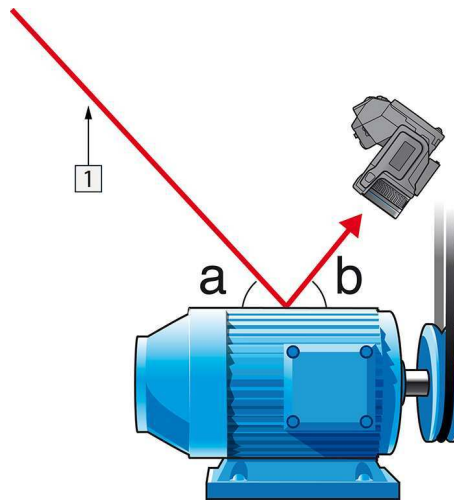


Figure 33.1 1 = Reflection source

2. If the reflection source is a spot source, modify the source by obstructing it using a piece of cardboard.

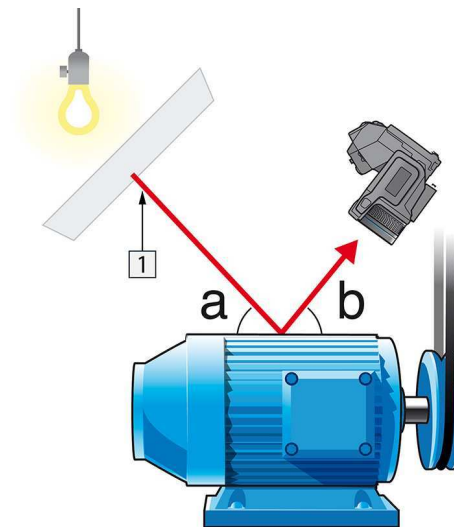


Figure 33.2 1 = Reflection source

3. Measure the radiation intensity (= apparent temperature) from the reflection source using the following settings:

- Emissivity: 1.0
- $D_{obj}$ : 0

You can measure the radiation intensity using one of the following two methods:

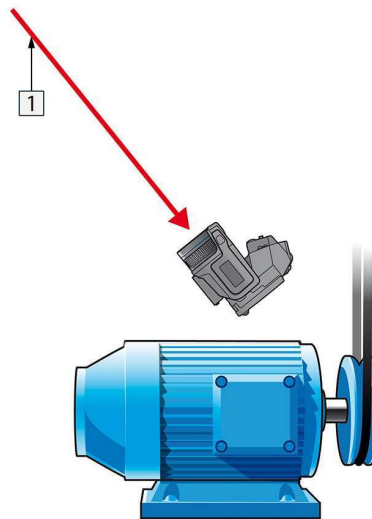


Figure 33.3 1 = Reflection source

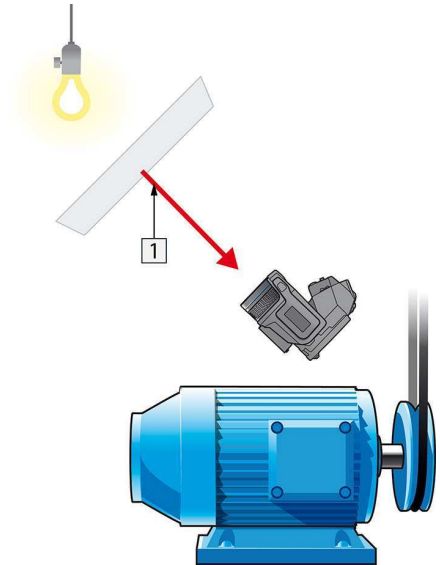


Figure 33.4 1 = Reflection source

You can not use a thermocouple to measure reflected apparent temperature, because a thermocouple measures *temperature*, but apparent temperature is *radiation intensity*.

#### 33.2.1.1.2 Method 2: Reflector method

Follow this procedure:

1. Crumble up a large piece of aluminum foil.
2. Uncrumble the aluminum foil and attach it to a piece of cardboard of the same size.
3. Put the piece of cardboard in front of the object you want to measure. Make sure that the side with aluminum foil points to the camera.
4. Set the emissivity to 1.0.

5. Measure the apparent temperature of the aluminum foil and write it down. The foil is considered a perfect reflector, so its apparent temperature equals the reflected apparent temperature from the surroundings.

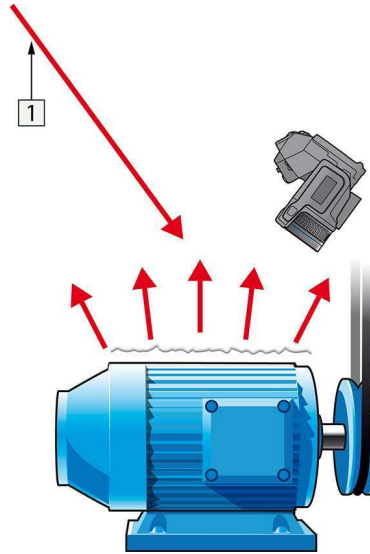


Figure 33.5 Measuring the apparent temperature of the aluminum foil.

#### 33.2.1.2 Step 2: Determining the emissivity

Follow this procedure:

1. Select a place to put the sample.
2. Determine and set reflected apparent temperature according to the previous procedure.
3. Put a piece of electrical tape with known high emissivity on the sample.
4. Heat the sample at least 20 K above room temperature. Heating must be reasonably even.
5. Focus and auto-adjust the camera, and freeze the image.
6. Adjust *Level* and *Span* for best image brightness and contrast.
7. Set emissivity to that of the tape (usually 0.97).
8. Measure the temperature of the tape using one of the following measurement functions:
  - *Isotherm* (helps you to determine both the temperature and how evenly you have heated the sample)
  - *Spot* (simpler)
  - *Box Avg* (good for surfaces with varying emissivity).
9. Write down the temperature.
10. Move your measurement function to the sample surface.
11. Change the emissivity setting until you read the same temperature as your previous measurement.
12. Write down the emissivity.

**Note**

- Avoid forced convection
- Look for a thermally stable surrounding that will not generate spot reflections
- Use high quality tape that you know is not transparent, and has a high emissivity you are certain of
- This method assumes that the temperature of your tape and the sample surface are the same. If they are not, your emissivity measurement will be wrong.

### 33.3 Reflected apparent temperature

This parameter is used to compensate for the radiation reflected in the object. If the emissivity is low and the object temperature relatively far from that of the reflected it will be important to set and compensate for the reflected apparent temperature correctly.

### 33.4 Distance

The distance is the distance between the object and the front lens of the camera. This parameter is used to compensate for the following two facts:

- That radiation from the target is absorbed by the atmosphere between the object and the camera.
- That radiation from the atmosphere itself is detected by the camera.

### 33.5 Relative humidity

The camera can also compensate for the fact that the transmittance is also dependent on the relative humidity of the atmosphere. To do this set the relative humidity to the correct value. For short distances and normal humidity the relative humidity can normally be left at a default value of 50%.

### 33.6 Other parameters

In addition, some cameras and analysis programs from FLIR Systems allow you to compensate for the following parameters:

- Atmospheric temperature – *i.e.* the temperature of the atmosphere between the camera and the target
- External optics temperature – *i.e.* the temperature of any external lenses or windows used in front of the camera
- External optics transmittance – *i.e.* the transmission of any external lenses or windows used in front of the camera

## 34.1 Introduction

The use of thermal cameras has spread to many professional environments in recent years. They are easy to handle, and thermal images are quick to take. Images can also be attached to reports easily, e.g., for an inspection of an electrical installation or building as evidence of work carried out or of any faults or deviations identified. However, people often forget that an image to be used as evidence or even proof before the courts must meet certain requirements: this is not achieved with a quick snapshot. So, what characterizes a really good thermal image?

## 34.2 Background

During the practical exercises in our thermography training classes we notice, time and time again, how difficult some participants find choosing the optimal camera settings for different tasks. Not everyone has a background in, for example, amateur photography (more on the difference between thermography and photography in the next section), and to take a good and meaningful thermal image you need some knowledge of photography, including its practical application. For this reason, it is hardly surprising that thermographers, particularly those without training, repeatedly produce reports with thermal images that are devoid of meaning or even support the wrong conclusions and are fit only for the waste bin. Unfortunately, such reports are found not only in companies in which thermography is more of an added bonus but also in businesses where these reports may be part of a critical process monitoring or maintenance program. There are two main reasons for this: either the users don't know what a good thermal image is or how to take one, or—for whatever reason—the job is not being done properly.

## 34.3 A good image

As thermography and photography are related, it makes sense to take a look at what is important to professional photographers. How do they characterize a good image? Three aspects can be pointed out as the most important:

1. An image has to touch the observer in some way. That means it needs to be unusual, striking, or unique, and has to arouse interest and, depending on the genre, emotion.
2. The composition and balance must be in harmony; the image detail and content must go together aesthetically.
3. The lighting must be interesting, such as back lighting or side lighting that casts dramatic shadows, or evening light or other pleasing illumination—whatever fits the overall effect that the photographer wants.

To what extent can these concepts be applied to thermography?

With thermography, the motif should also be interesting. In other words, our aim is to depict an object or its condition. Emotions are not required—facts have priority in thermal images (assuming they are not an art project!). In everyday working life, it is important to illustrate thermal patterns clearly and to facilitate temperature measurements.

The thermal image must also have suitable image detail and display the object at an appropriate size and position.

Without external illumination, neither visual sight nor photography is possible because what we see with our eyes or capture with a camera is reflected light. In thermography, the camera records both emitted and reflected radiation. Therefore, the relationship and intensity of the infrared radiation, both emitted by the object and by the surrounding environment, are important. Brightness and contrast in the image are then adjusted by changing the displayed temperature interval.



The comparison between photography and thermography can be summarized in a table using a few keywords:


| Photography            | Thermography              |
|------------------------|---------------------------|
| Interesting motif      | The object to be examined |
| “Tells a story”        | “Presents facts”          |
| Aesthetically pleasing | Clear heat patterns       |
| Emotive                | Objective                 |
| Image detail           | Image detail              |
| Focus                  | Focus                     |
| Lighting               | Emission and reflection   |
| Brightness             | Brightness                |
| Contrast               | Contrast                  |

As with photography, in thermography there are countless possibilities for editing images —provided they are saved as radiometric images. However, not all settings can be changed, and not all image errors can be corrected.

34.4 The three unchangeables—the basis for a good image

34.4.1 Focus

A professional thermal image is always focused and sharp, and the object and heat pattern must be clear and easy to recognize.

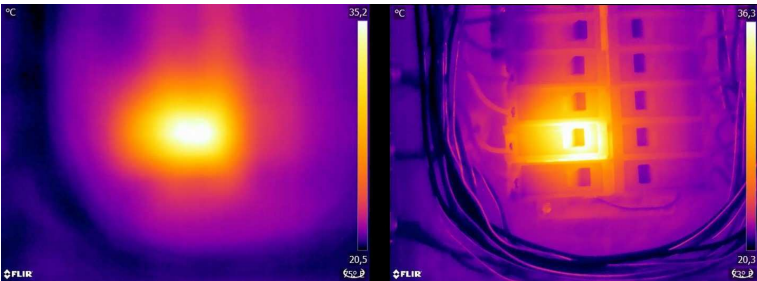


**Figure 34.1** Only hazy “patches of heat” can be seen in the unfocused image (left). The focused image (right) clearly shows which object is being observed and where the object is warm.

A blurred image not only comes across as unprofessional and makes it harder to identify the object and any faults (see Figure 34.1) but can also lead to measurement errors (see Figure 34.2), which are more serious the smaller the measurement object. Even if all other parameters are set correctly, the measurement values from an unfocused thermal image are highly likely to be incorrect.



**Figure 34.2** Focused thermal image (left) with a maximum temperature of  $T_{\max} = 89.7^{\circ}\text{C}$  ( $193.5^{\circ}\text{F}$ ) and an unfocused thermal image (right) with a maximum temperature of  $T_{\max} = 73.7^{\circ}\text{C}$  ( $164.7^{\circ}\text{F}$ ).


Of course, the size of the detector matrix also plays a role in image quality. Images taken by cameras with small detectors (i.e., with fewer pixels) are more blurred or “grainier” and give the impression that they are not focused (see Figure 34.3). It should also be noted that not every camera can be focused, and in this case the only means of focusing the camera is by changing the distance from the object.

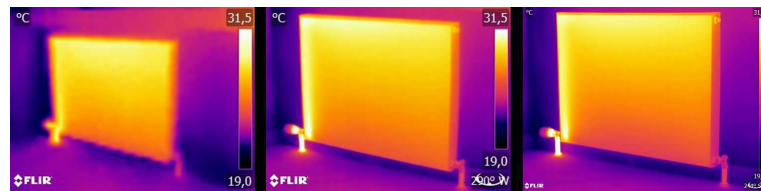

**Figure 34.3** The same radiator from the same distance with the same settings, taken by three different thermal cameras: FLIR C2 (left), FLIR T440 (middle), and FLIR T640 (right).


#### 34.4.2 Temperature range

For hand-held uncooled microbolometer cameras, the “exposure” is essentially preset by the image frame rate. This means that it is not possible to choose for how long—and therefore how much—radiation hits the camera detector. For this reason, an appropriate temperature range must be selected that matches the amount of incident radiation. If a temperature range is selected that is too low, the image will be oversaturated, as objects with higher temperatures emit more infrared radiation than colder objects. If you select a temperature range that is too high, the thermal image will be “underexposed,” as can be seen in Figure 34.4.

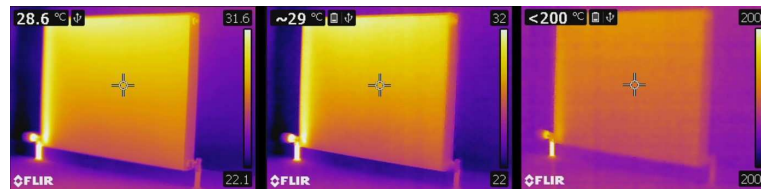

**Figure 34.4** Images from a FLIR T440 with temperature ranges of  $-20$  to  $+120^{\circ}\text{C}$ , (left,  $-4$  to  $+248^{\circ}\text{F}$ ),  $0$  to  $+650^{\circ}\text{C}$  (middle,  $+32$  to  $+1202^{\circ}\text{F}$ ) and  $+250$  to  $+1200^{\circ}\text{C}$  (right,  $+482$  to  $+2192^{\circ}\text{F}$ ). All other settings are unchanged.

To take an image or temperature measurement, the lowest possible temperature range available on the camera should be selected. However, it must also include the highest temperature in the image (see Figure 34.5).

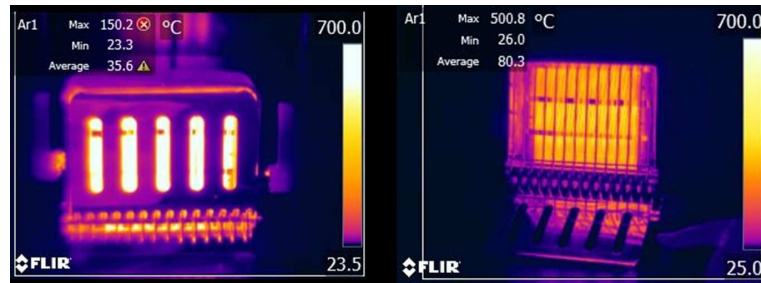


**Figure 34.5** An image of the same object taken with different temperature ranges:  $-20$  to  $120^{\circ}\text{C}$  (left,  $-4$  to  $+248^{\circ}\text{F}$ ) and  $0$  to  $650^{\circ}\text{C}$  (right,  $+32$  to  $+1202^{\circ}\text{F}$ ). The temperature in the left image is displayed with a warning sign (a red circle with a white cross) because the measured values are outside the calibrated range.

Depending on the camera model and configuration options, overdriven and underdriven areas can be displayed in a contrasting color.


### 34.4.3 Image detail and distance from the object

Illumination in photography corresponds in thermography to the interplay of radiation from the object and reflected radiation from the surrounding environment. The latter is unwanted because interfering—or, at the very least, spot—reflections need to be avoided. This is achieved by choosing a suitable position from where to take images. It is also advisable to select a position from which the object of interest can be seen clearly and is not hidden. This may seem obvious but in the building sector, for example, it is common to find reports in which pipes or windows to be investigated are hidden behind sofas, indoor plants or curtains. Figure 34.6 illustrates this situation—which occurs all too regularly.

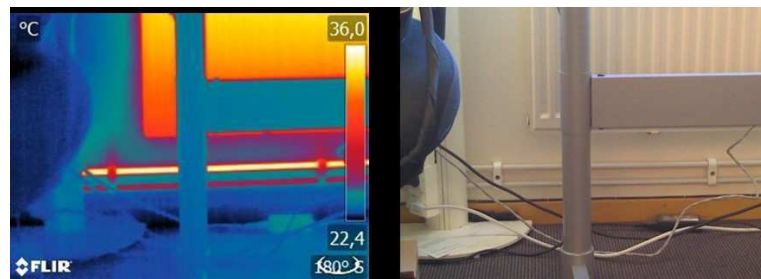

**Figure 34.6** “Thermographic inspection” of an inaccessible object.

It is also important that the object under investigation, or its areas of interest, take up the whole thermal image. This is particularly true when measuring the temperature of small objects. The spot tool must be completely filled by the object to enable correct temperature measurements. Since the field of view and therefore the spot size are determined by both the distance to the object and the camera’s optics, in such situations the distance to the object must either be reduced (get closer!) or a telephoto lens must be used (see Figure 34.7).

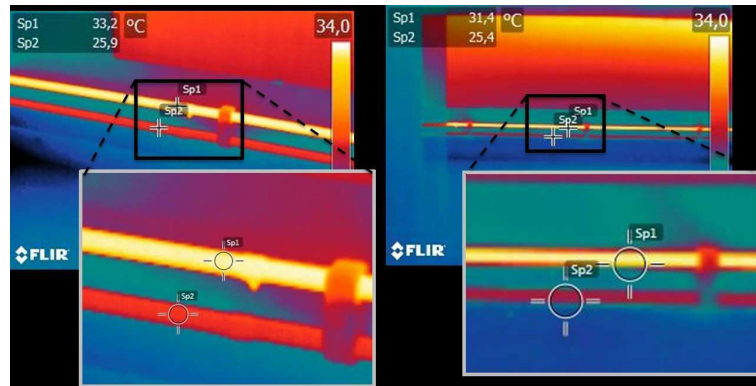

**Figure 34.7** Supply and return lines from radiators in an open-plan office. The left image was taken from a distance of 1 m: the measurement spot is filled and the temperature measurement is correct. The right image was taken from a distance of 3 m: the measurement spot is not completely filled and the measured temperature values are incorrect (31.4 and 24.4°C (88.5 and 75.9°F) instead of 33.2 and 25.9°C (91.8 and 78.6°F)).

### 34.5 The changeables—image optimization and temperature measurement

#### 34.5.1 Level and span

After choosing the appropriate temperature range, you can adjust the contrast and brightness of the thermal image by changing the temperature intervals displayed. In manual mode, the false colors available in the palette can be assigned to the temperatures of the object of interest. This process is often referred to as “thermal tuning.” In automatic mode, the camera selects the coldest and warmest apparent temperatures in the image as the upper and lower limits of the temperature interval currently displayed.

A good or problem-specific scaling of the thermal image is an important step in the interpretation of the image, and is, unfortunately, often underestimated (see Figure 34.8).




**Figure 34.8** A thermal image in automatic mode (left) and in manual model (right). The adjusted temperature interval increases the contrast in the image and makes the faults clear.

#### 34.5.2 Palettes and isotherms


Palettes represent intervals with the same apparent temperatures using different sets of colors. In other words, they translate specific radiation intensities into colors that are specific to a particular palette. Frequently used palettes include the gray, iron, and rainbow palettes (see Figure 34.9). Gray tones are particularly suited to resolving small geometric details but are less suited to displaying small differences in temperature. The iron palette is very intuitive and also easy to understand for those without much experience in thermography. It offers a good balance between geometric and thermal resolution. The rainbow palette is more colorful and alternates between light and dark colors. This results in

greater contrast, but this can lead to a noisy image for objects with different surfaces or many temperatures.

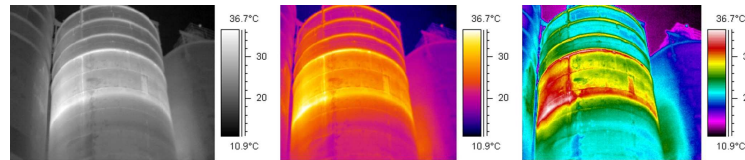

**Figure 34.9** Gray, iron, and rainbow palettes (left to right).


The isotherm is a measuring function that displays a given interval of the same apparent temperature or radiation intensity in a color that is different from the palette. It allows you to emphasize temperature patterns in the image (see Figure 34.10).

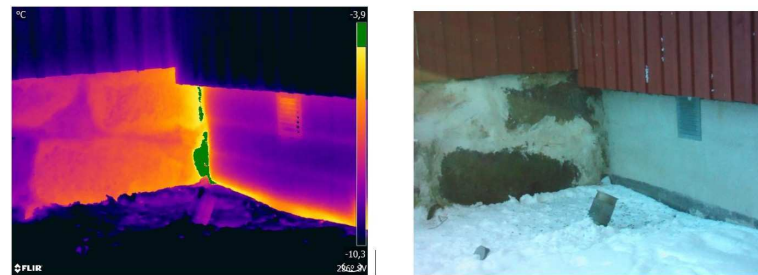

**Figure 34.10** Foundation wall: connection between the old (left in image) and the new (right in image) parts of the building. The isotherm highlights an area of air leakage.

### 34.5.3 Object parameters

As we have seen, the appearance of thermal images is dependent on the thermographer's technique and choice of settings, and the look of saved radiometric images can be altered by editing. However, it is also possible to change the settings that are relevant for the calculation of temperatures. In practice, this means that the emissivity and reflected apparent temperature can be altered retrospectively. If you notice that these parameters have been set incorrectly or want to add more measurement spots, the temperature measurement values will be calculated or recalculated according to the changes (see Figure 34.11).

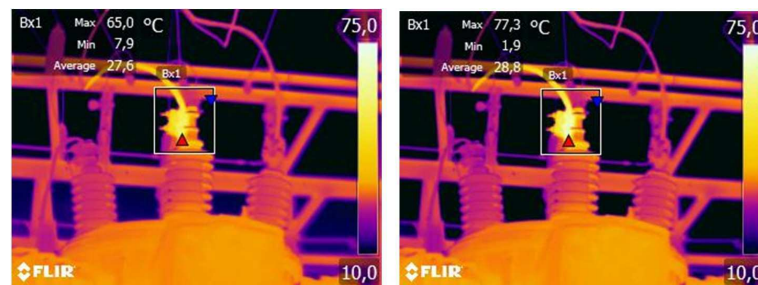

**Figure 34.11** Change in emissivity for a saved image. The maximum temperature is 65.0°C (149°F) for  $\epsilon = 0.95$  in the left image and 77.3°C (171.1°F) for  $\epsilon = 0.7$  in the right image.

## 34.6 Taking images—practical tips

The following list includes some practical tips. However, note that this is not a comprehensive description of the thermal imaging procedure.

- Ensure that the camera is saving radiometric images.
- Choose an appropriate position from which to take images:

- 
- Observe the radiative situation.
  - Check that the object is clearly visible and displayed at an appropriate size and position.
  - If you change the emissivity, monitor the temperature range and make sure that it remains appropriate.
  - Focus.
  - Use a tripod to minimize camera shake.
  - Carry out thermal tuning.
  - Take note of the object description, object size, actual distance, environmental conditions, and operating conditions.

It is easier to edit the thermal image when it is saved or “frozen” (in “Preview”). Also, since you don't have to do everything on site, you can leave dangerous zones immediately after taking the image. If possible, take a few more images than you need—including from different angles. This is preferable to taking too few! You can then choose the best image afterwards, at leisure.

### 34.7 Conclusion

Taking a good thermal image does not require any magic tricks—solid craft and sound work is all that is required. Many of the points mentioned may seem trivial and “old news,” particularly to amateur photographers. Of course, the equipment plays a role easier to ensure sharp images. Better, i.e. high-definition, cameras allow the fast localization of even small anomalies, and without focusing capabilities it is always difficult to capture a sharp image. However, high-end cameras are no guarantee of good images if used incorrectly. The basis for good, professional work is education and training in thermography, exchange of knowledge with other thermographers, and, of course, practical experience.



## 35.1 Introduction

Calibration of a thermal camera is a prerequisite for temperature measurement. The calibration provides the relationship between the input signal and the physical quantity that the user wants to measure. However, despite its widespread and frequent use, the term “calibration” is often misunderstood and misused. Local and national differences as well as translation-related issues create additional confusion.

Unclear terminology can lead to difficulties in communication and erroneous translations, and subsequently to incorrect measurements due to misunderstandings and, in the worst case, even to lawsuits.

## 35.2 Definition—what is calibration?

The International Bureau of Weights and Measures<sup>33</sup> defines *calibration*<sup>34</sup> in the following way:

an operation that, under specified conditions, in a first step, establishes a relation between the quantity values with measurement uncertainties provided by measurement standards and corresponding indications with associated measurement uncertainties and, in a second step, uses this information to establish a relation for obtaining a measurement result from an indication.

The calibration itself may be expressed in different formats: this can be a statement, calibration function, calibration diagram<sup>35</sup>, calibration curve<sup>36</sup>, or calibration table.

Often, the first step alone in the above definition is perceived and referred to as being “calibration.” However, this is not (always) sufficient.

Considering the calibration procedure of a thermal camera, the first step establishes the relation between emitted radiation (the quantity value) and the electrical output signal (the indication). This first step of the calibration procedure consists of obtaining a homogeneous (or uniform) response when the camera is placed in front of an extended source of radiation.

As we know the temperature of the reference source emitting the radiation, in the second step the obtained output signal (the indication) can be related to the reference source's temperature (measurement result). The second step includes drift measurement and compensation.

To be correct, calibration of a thermal camera is, strictly, not expressed through temperature. Thermal cameras are sensitive to infrared radiation: therefore, at first you obtain a radiance correspondence, then a relationship between radiance and temperature. For bolometer cameras used by non-R&D customers, radiance is not expressed: only the temperature is provided.

## 35.3 Camera calibration at FLIR Systems

Without calibration, an infrared camera would not be able to measure either radiance or temperature. At FLIR Systems, the calibration of uncooled microbolometer cameras with a

---

33. <http://www.bipm.org/en/about-us/> [Retrieved 2017-01-31.]

34. <http://jcgim.bipm.org/vim/en/2.39.html> [Retrieved 2017-01-31.]

35. <http://jcgim.bipm.org/vim/en/4.30.html> [Retrieved 2017-01-31.]

36. <http://jcgim.bipm.org/vim/en/4.31.html> [Retrieved 2017-01-31.]

---

measurement capability is carried out during both production and service. Cooled cameras with photon detectors are often calibrated by the user with special software. With this type of software, in theory, common handheld uncooled thermal cameras could be calibrated by the user too. However, as this software is not suitable for reporting purposes, most users do not have it. Non-measuring devices that are used for imaging only do not need temperature calibration. Sometimes this is also reflected in camera terminology when talking about infrared or thermal imaging cameras compared with thermography cameras, where the latter are the measuring devices.

The calibration information, no matter if the calibration is done by FLIR Systems or the user, is stored in calibration curves, which are expressed by mathematical functions. As radiation intensity changes with both temperature and the distance between the object and the camera, different curves are generated for different temperature ranges and exchangeable lenses.

## 35.4 The differences between a calibration performed by a user and that performed directly at FLIR Systems

First, the reference sources that FLIR Systems uses are themselves calibrated and traceable. This means, at each FLIR Systems site performing calibration, that the sources are controlled by an independent national authority. The camera calibration certificate is confirmation of this. It is proof that not only has the calibration been performed by FLIR Systems but that it has also been carried out using calibrated references. Some users own or have access to accredited reference sources, but they are very few in number.

Second, there is a technical difference. When performing a user calibration, the result is often (but not always) not drift compensated. This means that the values do not take into account a possible change in the camera's output when the camera's internal temperature varies. This yields a larger uncertainty. Drift compensation uses data obtained in climate-controlled chambers. All FLIR Systems cameras are drift compensated when they are first delivered to the customer and when they are recalibrated by FLIR Systems service departments.

## 35.5 Calibration, verification and adjustment

A common misconception is to confuse *calibration* with *verification* or *adjustment*. Indeed, calibration is a prerequisite for *verification*, which provides confirmation that specified requirements are met. Verification provides objective evidence that a given item fulfills specified requirements. To obtain the verification, defined temperatures (emitted radiation) of calibrated and traceable reference sources are measured. The measurement results, including the deviation, are noted in a table. The verification certificate states that these measurement results meet specified requirements. Sometimes, companies or organizations offer and market this verification certificate as a "calibration certificate."

Proper verification—and by extension calibration and/or recalibration—can only be achieved when a validated protocol is respected. The process is more than placing the camera in front of blackbodies and checking if the camera output (as temperature, for instance) corresponds to the original calibration table. It is often forgotten that a camera is not sensitive to temperature but to radiation. Furthermore, a camera is an *imaging* system, not just a single sensor. Consequently, if the optical configuration allowing the camera to "collect" radiance is poor or misaligned, then the "verification" (or calibration or recalibration) is worthless.



---

For instance, one has to ensure that the distance between the blackbody and the camera as well as the diameter of the blackbody cavity are chosen so as to reduce stray radiation and the size-of-source effect.

To summarize: a validated protocol must comply with the physical laws for *radiance*, and not only those for temperature.

Calibration is also a prerequisite for *adjustment*, which is the set of operations carried out on a measuring system such that the system provides prescribed indications corresponding to given values of quantities to be measured, typically obtained from measurement standards. Simplified, adjustment is a manipulation that results in instruments that measure correctly within their specifications. In everyday language, the term “calibration” is widely used instead of “adjustment” for measuring devices.

## 35.6 Non-uniformity correction

When the thermal camera displays “Calibrating...” it is adjusting for the deviation in response of each individual detector element (pixel). In thermography, this is called a “non-uniformity correction” (NUC). It is an offset update, and the gain remains unchanged.

The European standard EN 16714-3, Non-destructive Testing—Thermographic Testing—Part 3: Terms and Definitions, defines an NUC as “Image correction carried out by the camera software to compensate for different sensitivities of detector elements and other optical and geometrical disturbances.”


During the NUC (the offset update), a shutter (internal flag) is placed in the optical path, and all the detector elements are exposed to the same amount of radiation originating from the shutter. Therefore, in an ideal situation, they should all give the same output signal. However, each individual element has its own response, so the output is not uniform. This deviation from the ideal result is calculated and used to mathematically perform an image correction, which is essentially a correction of the displayed radiation signal. Some cameras do not have an internal flag. In this case, the offset update must be performed manually using special software and an external uniform source of radiation.

An NUC is performed, for example, at start-up, when changing a measurement range, or when the environment temperature changes. Some cameras also allow the user to trigger it manually. This is useful when you have to perform a critical measurement with as little image disturbance as possible.

## 35.7 Thermal image adjustment (thermal tuning)

Some people use the term “image calibration” when adjusting the thermal contrast and brightness in the image to enhance specific details. During this operation, the temperature interval is set in such a way that all available colors are used to show only (or mainly) the temperatures in the region of interest. The correct term for this manipulation is “thermal image adjustment” or “thermal tuning”, or, in some languages, “thermal image optimization.” You must be in manual mode to undertake this, otherwise the camera will set the lower and upper limits of the displayed temperature interval automatically to the coldest and hottest temperatures in the scene.

Before the year 1800, the existence of the infrared portion of the electromagnetic spectrum wasn't even suspected. The original significance of the infrared spectrum, or simply 'the infrared' as it is often called, as a form of heat radiation is perhaps less obvious today than it was at the time of its discovery by Herschel in 1800.

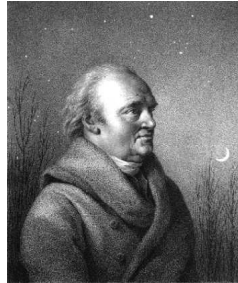

**Figure 36.1** Sir William Herschel (1738–1822)

The discovery was made accidentally during the search for a new optical material. Sir William Herschel – Royal Astronomer to King George III of England, and already famous for his discovery of the planet Uranus – was searching for an optical filter material to reduce the brightness of the sun's image in telescopes during solar observations. While testing different samples of colored glass which gave similar reductions in brightness he was intrigued to find that some of the samples passed very little of the sun's heat, while others passed so much heat that he risked eye damage after only a few seconds' observation.

Herschel was soon convinced of the necessity of setting up a systematic experiment, with the objective of finding a single material that would give the desired reduction in brightness as well as the maximum reduction in heat. He began the experiment by actually repeating Newton's prism experiment, but looking for the heating effect rather than the visual distribution of intensity in the spectrum. He first blackened the bulb of a sensitive mercury-in-glass thermometer with ink, and with this as his radiation detector he proceeded to test the heating effect of the various colors of the spectrum formed on the top of a table by passing sunlight through a glass prism. Other thermometers, placed outside the sun's rays, served as controls.

As the blackened thermometer was moved slowly along the colors of the spectrum, the temperature readings showed a steady increase from the violet end to the red end. This was not entirely unexpected, since the Italian researcher, Landriani, in a similar experiment in 1777 had observed much the same effect. It was Herschel, however, who was the first to recognize that there must be a point where the heating effect reaches a maximum, and that measurements confined to the visible portion of the spectrum failed to locate this point.



**Figure 36.2** Marsilio Landriani (1746–1815)

Moving the thermometer into the dark region beyond the red end of the spectrum, Herschel confirmed that the heating continued to increase. The maximum point, when he found it, lay well beyond the red end – in what is known today as the ‘infrared wavelengths’.

When Herschel revealed his discovery, he referred to this new portion of the electromagnetic spectrum as the ‘thermometrical spectrum’. The radiation itself he sometimes referred to as ‘dark heat’, or simply ‘the invisible rays’. Ironically, and contrary to popular opinion, it wasn't Herschel who originated the term ‘infrared’. The word only began to appear in print around 75 years later, and it is still unclear who should receive credit as the originator.

Herschel's use of glass in the prism of his original experiment led to some early controversies with his contemporaries about the actual existence of the infrared wavelengths. Different investigators, in attempting to confirm his work, used various types of glass indiscriminately, having different transparencies in the infrared. Through his later experiments, Herschel was aware of the limited transparency of glass to the newly-discovered thermal radiation, and he was forced to conclude that optics for the infrared would probably be doomed to the use of reflective elements exclusively (i.e. plane and curved mirrors). Fortunately, this proved to be true only until 1830, when the Italian investigator, Melloni, made his great discovery that naturally occurring rock salt (NaCl) – which was available in large enough natural crystals to be made into lenses and prisms – is remarkably transparent to the infrared. The result was that rock salt became the principal infrared optical material, and remained so for the next hundred years, until the art of synthetic crystal growing was mastered in the 1930's.



**Figure 36.3** Macedonio Melloni (1798–1854)

Thermometers, as radiation detectors, remained unchallenged until 1829, the year Nobili invented the thermocouple. (Herschel's own thermometer could be read to  $0.2^{\circ}\text{C}$  ( $0.036^{\circ}\text{F}$ ), and later models were able to be read to  $0.05^{\circ}\text{C}$  ( $0.09^{\circ}\text{F}$ )). Then a breakthrough occurred; Melloni connected a number of thermocouples in series to form the first thermopile. The new device was at least 40 times as sensitive as the best thermometer of the day for detecting heat radiation – capable of detecting the heat from a person standing three meters away.

The first so-called ‘heat-picture’ became possible in 1840, the result of work by Sir John Herschel, son of the discoverer of the infrared and a famous astronomer in his own right. Based upon the differential evaporation of a thin film of oil when exposed to a heat pattern focused upon it, the thermal image could be seen by reflected light where the interference effects of the oil film made the image visible to the eye. Sir John also managed to obtain a primitive record of the thermal image on paper, which he called a ‘thermograph’.



**Figure 36.4** Samuel P. Langley (1834–1906)

The improvement of infrared-detector sensitivity progressed slowly. Another major breakthrough, made by Langley in 1880, was the invention of the bolometer. This consisted of a thin blackened strip of platinum connected in one arm of a Wheatstone bridge circuit upon which the infrared radiation was focused and to which a sensitive galvanometer responded. This instrument is said to have been able to detect the heat from a cow at a distance of 400 meters.

An English scientist, Sir James Dewar, first introduced the use of liquefied gases as cooling agents (such as liquid nitrogen with a temperature of  $-196^{\circ}\text{C}$  ( $-320.8^{\circ}\text{F}$ )) in low temperature research. In 1892 he invented a unique vacuum insulating container in which it is possible to store liquefied gases for entire days. The common 'thermos bottle', used for storing hot and cold drinks, is based upon his invention.

Between the years 1900 and 1920, the inventors of the world 'discovered' the infrared. Many patents were issued for devices to detect personnel, artillery, aircraft, ships – and even icebergs. The first operating systems, in the modern sense, began to be developed during the 1914–18 war, when both sides had research programs devoted to the military exploitation of the infrared. These programs included experimental systems for enemy intrusion/detection, remote temperature sensing, secure communications, and 'flying torpedo' guidance. An infrared search system tested during this period was able to detect an approaching airplane at a distance of 1.5 km (0.94 miles), or a person more than 300 meters (984 ft.) away.

The most sensitive systems up to this time were all based upon variations of the bolometer idea, but the period between the two wars saw the development of two revolutionary new infrared detectors: the image converter and the photon detector. At first, the image converter received the greatest attention by the military, because it enabled an observer for the first time in history to literally 'see in the dark'. However, the sensitivity of the image converter was limited to the near infrared wavelengths, and the most interesting military targets (i.e. enemy soldiers) had to be illuminated by infrared search beams. Since this involved the risk of giving away the observer's position to a similarly-equipped enemy observer, it is understandable that military interest in the image converter eventually faded.


The tactical military disadvantages of so-called 'active' (i.e. search beam-equipped) thermal imaging systems provided impetus following the 1939–45 war for extensive secret military infrared-research programs into the possibilities of developing 'passive' (no search beam) systems around the extremely sensitive photon detector. During this period, military secrecy regulations completely prevented disclosure of the status of infrared-imaging technology. This secrecy only began to be lifted in the middle of the 1950's, and from that time adequate thermal-imaging devices finally began to be available to civilian science and industry.

### 37.1 Introduction

The subjects of infrared radiation and the related technique of thermography are still new to many who will use an infrared camera. In this section the theory behind thermography will be given.

### 37.2 The electromagnetic spectrum

The electromagnetic spectrum is divided arbitrarily into a number of wavelength regions, called *bands*, distinguished by the methods used to produce and detect the radiation. There is no fundamental difference between radiation in the different bands of the electromagnetic spectrum. They are all governed by the same laws and the only differences are those due to differences in wavelength.

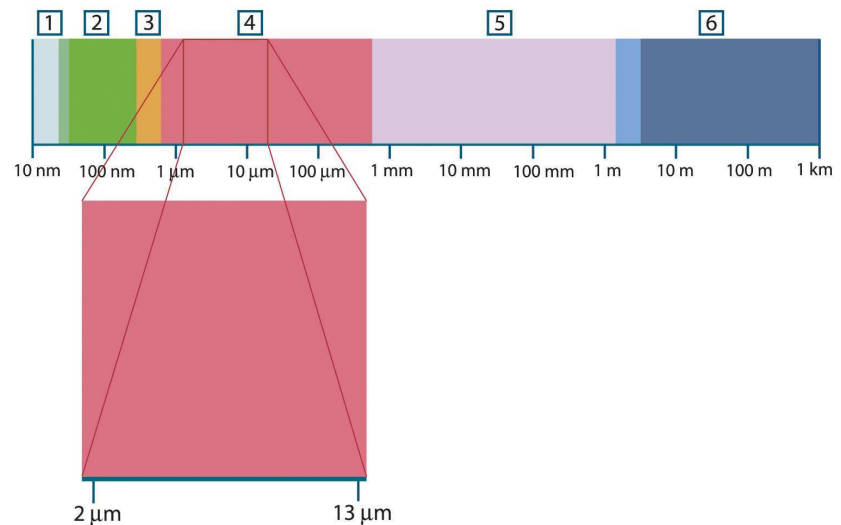

**Figure 37.1** The electromagnetic spectrum. 1: X-ray; 2: UV; 3: Visible; 4: IR; 5: Microwaves; 6: Radiowaves.

Thermography makes use of the infrared spectral band. At the short-wavelength end the boundary lies at the limit of visual perception, in the deep red. At the long-wavelength end it merges with the microwave radio wavelengths, in the millimeter range.


The infrared band is often further subdivided into four smaller bands, the boundaries of which are also arbitrarily chosen. They include: the *near infrared* (0.75–3 μm), the *middle infrared* (3–6 μm), the *far infrared* (6–15 μm) and the *extreme infrared* (15–100 μm). Although the wavelengths are given in μm (micrometers), other units are often still used to measure wavelength in this spectral region, e.g. nanometer (nm) and Ångström (Å).

The relationships between the different wavelength measurements is:

$$10\,000\text{ Å} = 1\,000\text{ nm} = 1\text{ μ} = 1\text{ μm}$$

### 37.3 Blackbody radiation

A blackbody is defined as an object which absorbs all radiation that impinges on it at any wavelength. The apparent misnomer *black* relating to an object emitting radiation is explained by Kirchhoff's Law (after *Gustav Robert Kirchhoff*, 1824–1887), which states that a body capable of absorbing all radiation at any wavelength is equally capable in the emission of radiation.

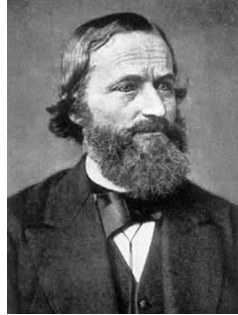

**Figure 37.2** Gustav Robert Kirchhoff (1824–1887)

The construction of a blackbody source is, in principle, very simple. The radiation characteristics of an aperture in an isotherm cavity made of an opaque absorbing material represents almost exactly the properties of a blackbody. A practical application of the principle to the construction of a perfect absorber of radiation consists of a box that is light tight except for an aperture in one of the sides. Any radiation which then enters the hole is scattered and absorbed by repeated reflections so only an infinitesimal fraction can possibly escape. The blackness which is obtained at the aperture is nearly equal to a blackbody and almost perfect for all wavelengths.

By providing such an isothermal cavity with a suitable heater it becomes what is termed a *cavity radiator*. An isothermal cavity heated to a uniform temperature generates blackbody radiation, the characteristics of which are determined solely by the temperature of the cavity. Such cavity radiators are commonly used as sources of radiation in temperature reference standards in the laboratory for calibrating thermographic instruments, such as a FLIR Systems camera for example.

If the temperature of blackbody radiation increases to more than 525°C (977°F), the source begins to be visible so that it appears to the eye no longer black. This is the incipient red heat temperature of the radiator, which then becomes orange or yellow as the temperature increases further. In fact, the definition of the so-called *color temperature* of an object is the temperature to which a blackbody would have to be heated to have the same appearance.

Now consider three expressions that describe the radiation emitted from a blackbody.

37.3.1 Planck’s law



Figure 37.3 Max Planck (1858–1947)

Max Planck (1858–1947) was able to describe the spectral distribution of the radiation from a blackbody by means of the following formula:


$$W_{\lambda b} = \frac{2\pi hc^2}{\lambda^5 \left( e^{\frac{hc}{\lambda kT}} - 1 \right)} \times 10^{-6} [Watt / m^2, \mu m]$$

where:

|                 |                                                                |
|-----------------|----------------------------------------------------------------|
| $W_{\lambda b}$ | Blackbody spectral radiant emittance at wavelength $\lambda$ . |
| $c$             | Velocity of light = $3 \times 10^8$ m/s                        |
| $h$             | Planck’s constant = $6.6 \times 10^{-34}$ Joule sec.           |
| $k$             | Boltzmann’s constant = $1.4 \times 10^{-23}$ Joule/K.          |
| $T$             | Absolute temperature (K) of a blackbody.                       |
| $\lambda$       | Wavelength ( $\mu m$ ).                                        |

**Note** The factor  $10^{-6}$  is used since spectral emittance in the curves is expressed in Watt/  $m^2, \mu m$ .

Planck’s formula, when plotted graphically for various temperatures, produces a family of curves. Following any particular Planck curve, the spectral emittance is zero at  $\lambda = 0$ , then increases rapidly to a maximum at a wavelength  $\lambda_{max}$  and after passing it approaches zero again at very long wavelengths. The higher the temperature, the shorter the wavelength at which maximum occurs.

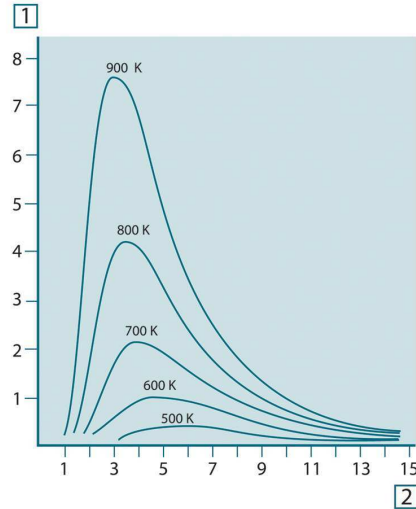


**Figure 37.4** Blackbody spectral radiant emittance according to Planck's law, plotted for various absolute temperatures. 1: Spectral radiant emittance ( $\text{W}/\text{cm}^2 \times 10^3(\mu\text{m})$ ); 2: Wavelength ( $\mu\text{m}$ )

### 37.3.2 Wien's displacement law

By differentiating Planck's formula with respect to  $\lambda$ , and finding the maximum, we have:

$$\lambda_{\text{max}} = \frac{2898}{T} [\mu\text{m}]$$

This is Wien's formula (after *Wilhelm Wien*, 1864–1928), which expresses mathematically the common observation that colors vary from red to orange or yellow as the temperature of a thermal radiator increases. The wavelength of the color is the same as the wavelength calculated for  $\lambda_{\text{max}}$ . A good approximation of the value of  $\lambda_{\text{max}}$  for a given blackbody temperature is obtained by applying the rule-of-thumb  $3\,000/T \mu\text{m}$ . Thus, a very hot star such as Sirius (11 000 K), emitting bluish-white light, radiates with the peak of spectral radiant emittance occurring within the invisible ultraviolet spectrum, at wavelength  $0.27 \mu\text{m}$ .

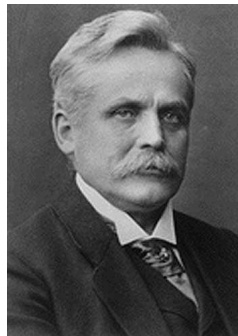


**Figure 37.5** Wilhelm Wien (1864–1928)

The sun (approx. 6 000 K) emits yellow light, peaking at about  $0.5 \mu\text{m}$  in the middle of the visible light spectrum.



At room temperature (300 K) the peak of radiant emittance lies at 9.7  $\mu\text{m}$ , in the far infra-red, while at the temperature of liquid nitrogen (77 K) the maximum of the almost insignificant amount of radiant emittance occurs at 38  $\mu\text{m}$ , in the extreme infrared wavelengths.

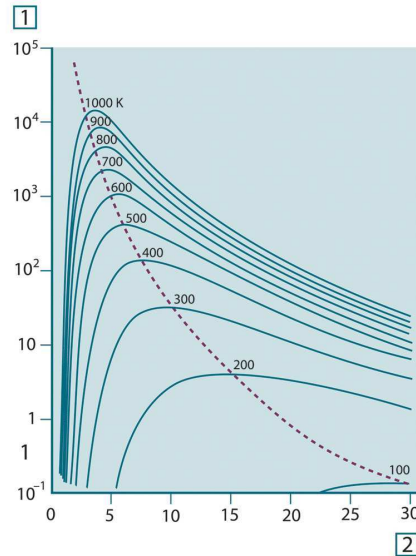

**Figure 37.6** Planckian curves plotted on semi-log scales from 100 K to 1000 K. The dotted line represents the locus of maximum radiant emittance at each temperature as described by Wien's displacement law. 1: Spectral radiant emittance ( $\text{W}/\text{cm}^2 (\mu\text{m})$ ); 2: Wavelength ( $\mu\text{m}$ ).

### 37.3.3 Stefan-Boltzmann's law

By integrating Planck's formula from  $\lambda = 0$  to  $\lambda = \infty$ , we obtain the total radiant emittance ( $W_b$ ) of a blackbody:

$$W_b = \sigma T^4 \text{ [Watt}/\text{m}^2]$$

This is the Stefan-Boltzmann formula (after *Josef Stefan*, 1835–1893, and *Ludwig Boltzmann*, 1844–1906), which states that the total emissive power of a blackbody is proportional to the fourth power of its absolute temperature. Graphically,  $W_b$  represents the area below the Planck curve for a particular temperature. It can be shown that the radiant emittance in the interval  $\lambda = 0$  to  $\lambda_{\text{max}}$  is only 25% of the total, which represents about the amount of the sun's radiation which lies inside the visible light spectrum.



**Figure 37.7** Josef Stefan (1835–1893), and Ludwig Boltzmann (1844–1906)

Using the Stefan-Boltzmann formula to calculate the power radiated by the human body, at a temperature of 300 K and an external surface area of approx. 2 m<sup>2</sup>, we obtain 1 kW. This power loss could not be sustained if it were not for the compensating absorption of radiation from surrounding surfaces, at room temperatures which do not vary too drastically from the temperature of the body – or, of course, the addition of clothing.

### 37.3.4 Non-blackbody emitters

So far, only blackbody radiators and blackbody radiation have been discussed. However, real objects almost never comply with these laws over an extended wavelength region – although they may approach the blackbody behavior in certain spectral intervals. For example, a certain type of white paint may appear perfectly *white* in the visible light spectrum, but becomes distinctly *gray* at about 2 μm, and beyond 3 μm it is almost *black*.

There are three processes which can occur that prevent a real object from acting like a blackbody: a fraction of the incident radiation  $\alpha$  may be absorbed, a fraction  $\rho$  may be reflected, and a fraction  $\tau$  may be transmitted. Since all of these factors are more or less wavelength dependent, the subscript  $\lambda$  is used to imply the spectral dependence of their definitions. Thus:

- The spectral absorptance  $\alpha_\lambda$  = the ratio of the spectral radiant power absorbed by an object to that incident upon it.
- The spectral reflectance  $\rho_\lambda$  = the ratio of the spectral radiant power reflected by an object to that incident upon it.
- The spectral transmittance  $\tau_\lambda$  = the ratio of the spectral radiant power transmitted through an object to that incident upon it.

The sum of these three factors must always add up to the whole at any wavelength, so we have the relation:

$$\alpha_\lambda + \rho_\lambda + \tau_\lambda = 1$$

For opaque materials  $\tau_\lambda = 0$  and the relation simplifies to:

$$\varepsilon_\lambda + \rho_\lambda = 1$$

Another factor, called the emissivity, is required to describe the fraction  $\varepsilon$  of the radiant emittance of a blackbody produced by an object at a specific temperature. Thus, we have the definition:

The spectral emissivity  $\varepsilon_\lambda$  = the ratio of the spectral radiant power from an object to that from a blackbody at the same temperature and wavelength.

Expressed mathematically, this can be written as the ratio of the spectral emittance of the object to that of a blackbody as follows:

$$\varepsilon_\lambda = \frac{W_{\lambda o}}{W_{\lambda b}}$$

Generally speaking, there are three types of radiation source, distinguished by the ways in which the spectral emittance of each varies with wavelength.

- A blackbody, for which  $\varepsilon_\lambda = \varepsilon = 1$
- A graybody, for which  $\varepsilon_\lambda = \varepsilon = \text{constant less than 1}$
- A selective radiator, for which  $\varepsilon$  varies with wavelength

According to Kirchhoff's law, for any material the spectral emissivity and spectral absorptance of a body are equal at any specified temperature and wavelength. That is:

$$\varepsilon_\lambda = \alpha_\lambda$$

From this we obtain, for an opaque material (since  $\alpha_\lambda + \rho_\lambda = 1$ ):

$$\varepsilon_\lambda + \rho_\lambda = 1$$


For highly polished materials  $\varepsilon_\lambda$  approaches zero, so that for a perfectly reflecting material (i.e. a perfect mirror) we have:

$$\rho_\lambda = 1$$


For a graybody radiator, the Stefan-Boltzmann formula becomes:

$$W = \varepsilon \sigma T^4 \text{ [Watt/m}^2\text{]}$$

This states that the total emissive power of a graybody is the same as a blackbody at the same temperature reduced in proportion to the value of  $\varepsilon$  from the graybody.

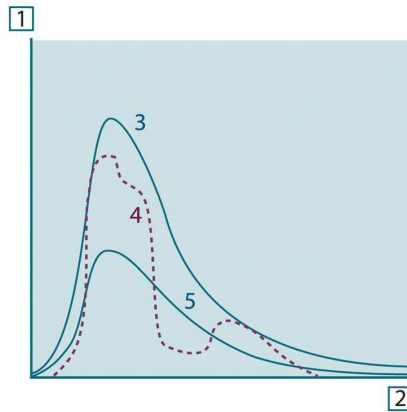

**Figure 37.8** Spectral radiant emittance of three types of radiators. 1: Spectral radiant emittance; 2: Wavelength; 3: Blackbody; 4: Selective radiator; 5: Graybody.

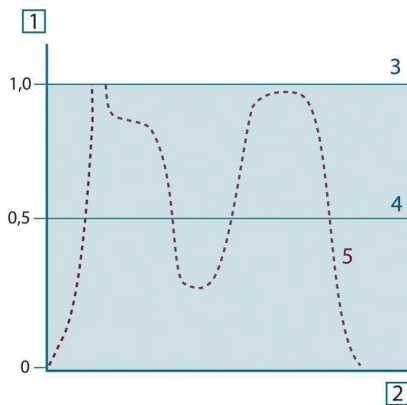

**Figure 37.9** Spectral emissivity of three types of radiators. 1: Spectral emissivity; 2: Wavelength; 3: Blackbody; 4: Graybody; 5: Selective radiator.

## 37.4 Infrared semi-transparent materials

Consider now a non-metallic, semi-transparent body – let us say, in the form of a thick flat plate of plastic material. When the plate is heated, radiation generated within its volume must work its way toward the surfaces through the material in which it is partially absorbed. Moreover, when it arrives at the surface, some of it is reflected back into the interior. The back-reflected radiation is again partially absorbed, but some of it arrives at the other surface, through which most of it escapes; part of it is reflected back again. Although the progressive reflections become weaker and weaker they must all be added up when the total emittance of the plate is sought. When the resulting geometrical series is summed, the effective emissivity of a semi-transparent plate is obtained as:

$$\varepsilon_{\lambda} = \frac{(1 - \rho_{\lambda})(1 - \tau_{\lambda})}{1 - \rho_{\lambda}\tau_{\lambda}}$$

When the plate becomes opaque this formula is reduced to the single formula:


$$\varepsilon_{\lambda} = 1 - \rho_{\lambda}$$

This last relation is a particularly convenient one, because it is often easier to measure reflectance than to measure emissivity directly.

As already mentioned, when viewing an object, the camera receives radiation not only from the object itself. It also collects radiation from the surroundings reflected via the object surface. Both these radiation contributions become attenuated to some extent by the atmosphere in the measurement path. To this comes a third radiation contribution from the atmosphere itself.

This description of the measurement situation, as illustrated in the figure below, is so far a fairly true description of the real conditions. What has been neglected could for instance be sun light scattering in the atmosphere or stray radiation from intense radiation sources outside the field of view. Such disturbances are difficult to quantify, however, in most cases they are fortunately small enough to be neglected. In case they are not negligible, the measurement configuration is likely to be such that the risk for disturbance is obvious, at least to a trained operator. It is then his responsibility to modify the measurement situation to avoid the disturbance e.g. by changing the viewing direction, shielding off intense radiation sources etc.

Accepting the description above, we can use the figure below to derive a formula for the calculation of the object temperature from the calibrated camera output.

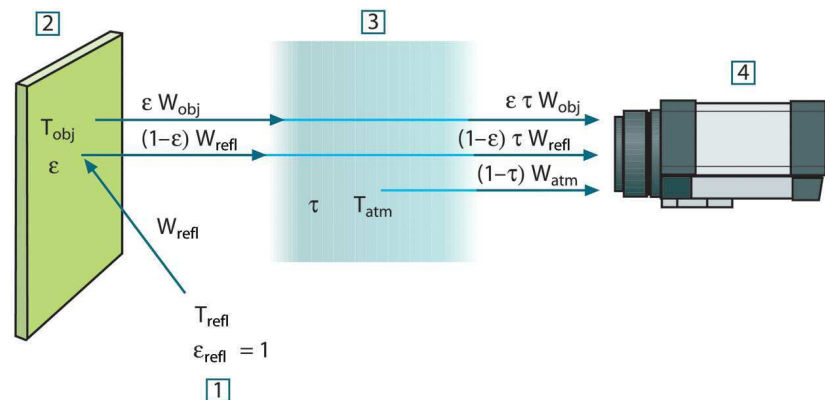

**Figure 38.1** A schematic representation of the general thermographic measurement situation. 1: Surroundings; 2: Object; 3: Atmosphere; 4: Camera

Assume that the received radiation power  $W$  from a blackbody source of temperature  $T_{\text{source}}$  on short distance generates a camera output signal  $U_{\text{source}}$  that is proportional to the power input (power linear camera). We can then write (Equation 1):

$$U_{\text{source}} = CW(T_{\text{source}})$$

or, with simplified notation:

$$U_{\text{source}} = CW_{\text{source}}$$

where  $C$  is a constant.

Should the source be a graybody with emittance  $\epsilon$ , the received radiation would consequently be  $\epsilon W_{\text{source}}$ .

We are now ready to write the three collected radiation power terms:

1. *Emission from the object* =  $\epsilon \tau W_{\text{obj}}$ , where  $\epsilon$  is the emittance of the object and  $\tau$  is the transmittance of the atmosphere. The object temperature is  $T_{\text{obj}}$ .

2. *Reflected emission from ambient sources* =  $(1 - \varepsilon)\tau W_{\text{refl}}$ , where  $(1 - \varepsilon)$  is the reflectance of the object. The ambient sources have the temperature  $T_{\text{refl}}$ .  
It has here been assumed that the temperature  $T_{\text{refl}}$  is the same for all emitting surfaces within the halfsphere seen from a point on the object surface. This is of course sometimes a simplification of the true situation. It is, however, a necessary simplification in order to derive a workable formula, and  $T_{\text{refl}}$  can – at least theoretically – be given a value that represents an efficient temperature of a complex surrounding.

Note also that we have assumed that the emittance for the surroundings = 1. This is correct in accordance with Kirchhoff's law: All radiation impinging on the surrounding surfaces will eventually be absorbed by the same surfaces. Thus the emittance = 1. (Note though that the latest discussion requires the complete sphere around the object to be considered.)

3. *Emission from the atmosphere* =  $(1 - \tau)\tau W_{\text{atm}}$ , where  $(1 - \tau)$  is the emittance of the atmosphere. The temperature of the atmosphere is  $T_{\text{atm}}$ .

The total received radiation power can now be written (Equation 2):

$$W_{\text{tot}} = \varepsilon\tau W_{\text{obj}} + (1 - \varepsilon)\tau W_{\text{refl}} + (1 - \tau)W_{\text{atm}}$$

We multiply each term by the constant C of Equation 1 and replace the CW products by the corresponding U according to the same equation, and get (Equation 3):

$$U_{\text{tot}} = \varepsilon\tau U_{\text{obj}} + (1 - \varepsilon)\tau U_{\text{refl}} + (1 - \tau)U_{\text{atm}}$$

Solve Equation 3 for  $U_{\text{obj}}$  (Equation 4):

$$U_{\text{obj}} = \frac{1}{\varepsilon\tau} U_{\text{tot}} - \frac{1 - \varepsilon}{\varepsilon} U_{\text{refl}} - \frac{1 - \tau}{\varepsilon\tau} U_{\text{atm}}$$

This is the general measurement formula used in all the FLIR Systems thermographic equipment. The voltages of the formula are:

**Table 38.1** Voltages

|                   |                                                                                                                                                                        |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| $U_{\text{obj}}$  | Calculated camera output voltage for a blackbody of temperature $T_{\text{obj}}$ i.e. a voltage that can be directly converted into true requested object temperature. |
| $U_{\text{tot}}$  | Measured camera output voltage for the actual case.                                                                                                                    |
| $U_{\text{refl}}$ | Theoretical camera output voltage for a blackbody of temperature $T_{\text{refl}}$ according to the calibration.                                                       |
| $U_{\text{atm}}$  | Theoretical camera output voltage for a blackbody of temperature $T_{\text{atm}}$ according to the calibration.                                                        |

The operator has to supply a number of parameter values for the calculation:

- the object emittance  $\varepsilon$ ,
- the relative humidity,
- $T_{\text{atm}}$
- object distance ( $D_{\text{obj}}$ )
- the (effective) temperature of the object surroundings, or the reflected ambient temperature  $T_{\text{refl}}$ , and
- the temperature of the atmosphere  $T_{\text{atm}}$

This task could sometimes be a heavy burden for the operator since there are normally no easy ways to find accurate values of emittance and atmospheric transmittance for the

actual case. The two temperatures are normally less of a problem provided the surroundings do not contain large and intense radiation sources.

A natural question in this connection is: How important is it to know the right values of these parameters? It could though be of interest to get a feeling for this problem already here by looking into some different measurement cases and compare the relative magnitudes of the three radiation terms. This will give indications about when it is important to use correct values of which parameters.


The figures below illustrates the relative magnitudes of the three radiation contributions for three different object temperatures, two emittances, and two spectral ranges: SW and LW. Remaining parameters have the following fixed values:

- $\tau = 0.88$
- $T_{\text{refl}} = +20^{\circ}\text{C} (+68^{\circ}\text{F})$
- $T_{\text{atm}} = +20^{\circ}\text{C} (+68^{\circ}\text{F})$


It is obvious that measurement of low object temperatures are more critical than measuring high temperatures since the 'disturbing' radiation sources are relatively much stronger in the first case. Should also the object emittance be low, the situation would be still more difficult.

We have finally to answer a question about the importance of being allowed to use the calibration curve above the highest calibration point, what we call extrapolation. Imagine that we in a certain case measure  $U_{\text{tot}} = 4.5$  volts. The highest calibration point for the camera was in the order of 4.1 volts, a value unknown to the operator. Thus, even if the object happened to be a blackbody, i.e.  $U_{\text{obj}} = U_{\text{tot}}$ , we are actually performing extrapolation of the calibration curve when converting 4.5 volts into temperature.

Let us now assume that the object is not black, it has an emittance of 0.75, and the transmittance is 0.92. We also assume that the two second terms of Equation 4 amount to 0.5 volts together. Computation of  $U_{\text{obj}}$  by means of Equation 4 then results in  $U_{\text{obj}} = 4.5 / 0.75 / 0.92 - 0.5 = 6.0$ . This is a rather extreme extrapolation, particularly when considering that the video amplifier might limit the output to 5 volts! Note, though, that the application of the calibration curve is a theoretical procedure where no electronic or other limitations exist. We trust that if there had been no signal limitations in the camera, and if it had been calibrated far beyond 5 volts, the resulting curve would have been very much the same as our real curve extrapolated beyond 4.1 volts, provided the calibration algorithm is based on radiation physics, like the FLIR Systems algorithm. Of course there must be a limit to such extrapolations.

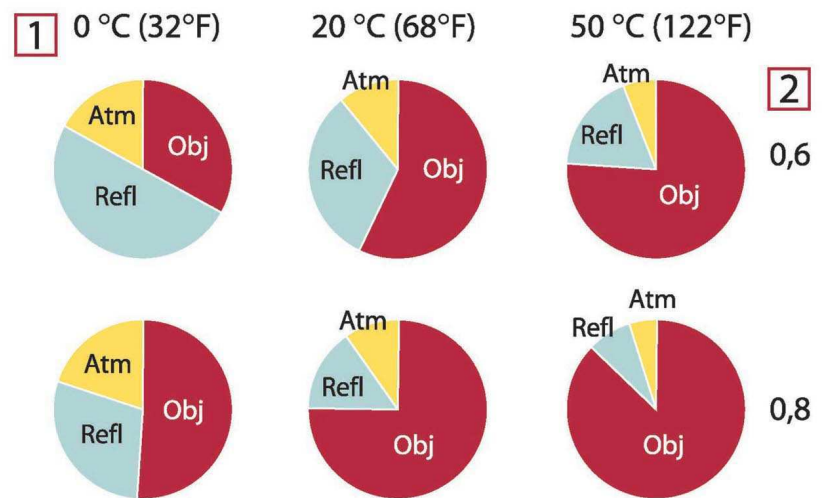

**Figure 38.2** Relative magnitudes of radiation sources under varying measurement conditions (SW camera). 1: Object temperature; 2: Emittance; Obj: Object radiation; Refl: Reflected radiation; Atm: atmosphere radiation. Fixed parameters:  $\tau = 0.88$ ;  $T_{\text{refl}} = 20^\circ\text{C}$  (+68°F);  $T_{\text{atm}} = 20^\circ\text{C}$  (+68°F).

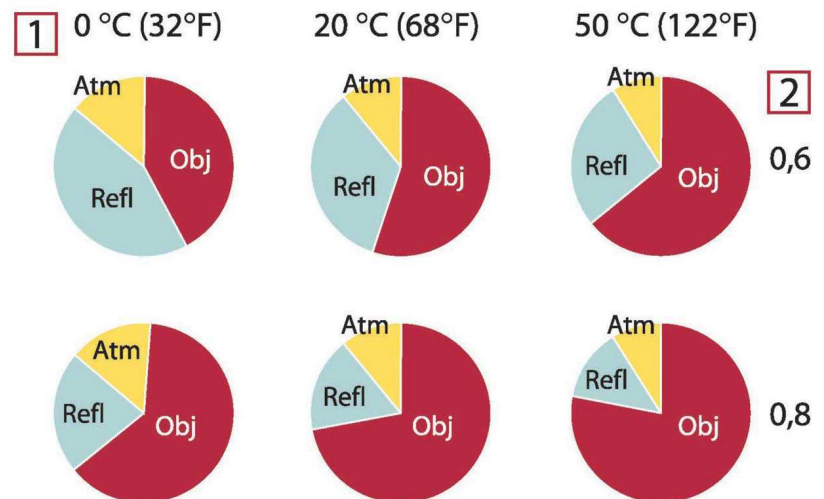

**Figure 38.3** Relative magnitudes of radiation sources under varying measurement conditions (LW camera). 1: Object temperature; 2: Emittance; Obj: Object radiation; Refl: Reflected radiation; Atm: atmosphere radiation. Fixed parameters:  $\tau = 0.88$ ;  $T_{\text{refl}} = 20^\circ\text{C}$  (+68°F);  $T_{\text{atm}} = 20^\circ\text{C}$  (+68°F).



This section presents a compilation of emissivity data from the infrared literature and measurements made by FLIR Systems.

### 39.1 References

1. Mikaél A. Bramson: *Infrared Radiation, A Handbook for Applications*, Plenum press, N. Y.
2. William L. Wolfe, George J. Zissis: *The Infrared Handbook*, Office of Naval Research, Department of Navy, Washington, D.C.
3. Madding, R. P.: *Thermographic Instruments and systems*. Madison, Wisconsin: University of Wisconsin – Extension, Department of Engineering and Applied Science.
4. William L. Wolfe: *Handbook of Military Infrared Technology*, Office of Naval Research, Department of Navy, Washington, D.C.
5. Jones, Smith, Probert: *External thermography of buildings...*, Proc. of the Society of Photo-Optical Instrumentation Engineers, vol.110, Industrial and Civil Applications of Infrared Technology, June 1977 London.
6. Paljak, Pettersson: *Thermography of Buildings*, Swedish Building Research Institute, Stockholm 1972.
7. Vlcek, J.: *Determination of emissivity with imaging radiometers and some emissivities at  $\lambda = 5 \mu\text{m}$* . Photogrammetric Engineering and Remote Sensing.
8. Kern: *Evaluation of infrared emission of clouds and ground as measured by weather satellites*, Defence Documentation Center, AD 617 417.
9. Öhman, Claes: *Emittansmätningar med AGEMA E-Box*. Teknisk rapport, AGEMA 1999. (Emittance measurements using AGEMA E-Box. Technical report, AGEMA 1999.)
10. Mattei, S., Tang-Kwor, E: *Emissivity measurements for Nextel Velvet coating 811-21 between  $-36^{\circ}\text{C}$  AND  $82^{\circ}\text{C}$* .
11. Lohrengel & Todtenhaupt (1996)
12. ITC Technical publication 32.
13. ITC Technical publication 29.
14. Schuster, Norbert and Kolobrodov, Valentin G. *Infrarotthermographie*. Berlin: Wiley-VCH, 2000.

**Note** The emissivity values in the table below are recorded using a shortwave (SW) camera. The values should be regarded as recommendations only and used with caution.

### 39.2 Tables

**Table 39.1** T: Total spectrum; SW: 2–5  $\mu\text{m}$ ; LW: 8–14  $\mu\text{m}$ , LLW: 6.5–20  $\mu\text{m}$ ; 1: Material; 2: Specification; 3: Temperature in  $^{\circ}\text{C}$ ; 4: Spectrum; 5: Emissivity; 6: Reference

| 1                 | 2                                      | 3     | 4  | 5              | 6  |
|-------------------|----------------------------------------|-------|----|----------------|----|
| 3M type 35        | Vinyl electrical tape (several colors) | < 80  | LW | $\approx 0.96$ | 13 |
| 3M type 88        | Black vinyl electrical tape            | < 105 | LW | $\approx 0.96$ | 13 |
| 3M type 88        | Black vinyl electrical tape            | < 105 | MW | < 0.96         | 13 |
| 3M type Super 33+ | Black vinyl electrical tape            | < 80  | LW | $\approx 0.96$ | 13 |
| Aluminum          | anodized sheet                         | 100   | T  | 0.55           | 2  |

**Table 39.1** T: Total spectrum; SW: 2–5  $\mu\text{m}$ ; LW: 8–14  $\mu\text{m}$ , LLW: 6.5–20  $\mu\text{m}$ ; 1: Material; 2: Specification; 3: Temperature in  $^{\circ}\text{C}$ ; 4: Spectrum; 5: Emissivity; 6: Reference (continued)

| 1                  | 2                                      | 3      | 4                | 5         | 6 |
|--------------------|----------------------------------------|--------|------------------|-----------|---|
| Aluminum           | anodized, black, dull                  | 70     | SW               | 0.67      | 9 |
| Aluminum           | anodized, black, dull                  | 70     | LW               | 0.95      | 9 |
| Aluminum           | anodized, light gray, dull             | 70     | SW               | 0.61      | 9 |
| Aluminum           | anodized, light gray, dull             | 70     | LW               | 0.97      | 9 |
| Aluminum           | as received, plate                     | 100    | T                | 0.09      | 4 |
| Aluminum           | as received, sheet                     | 100    | T                | 0.09      | 2 |
| Aluminum           | cast, blast cleaned                    | 70     | SW               | 0.47      | 9 |
| Aluminum           | cast, blast cleaned                    | 70     | LW               | 0.46      | 9 |
| Aluminum           | dipped in $\text{HNO}_3$ , plate       | 100    | T                | 0.05      | 4 |
| Aluminum           | foil                                   | 27     | 10 $\mu\text{m}$ | 0.04      | 3 |
| Aluminum           | foil                                   | 27     | 3 $\mu\text{m}$  | 0.09      | 3 |
| Aluminum           | oxidized, strongly                     | 50–500 | T                | 0.2–0.3   | 1 |
| Aluminum           | polished                               | 50–100 | T                | 0.04–0.06 | 1 |
| Aluminum           | polished plate                         | 100    | T                | 0.05      | 4 |
| Aluminum           | polished, sheet                        | 100    | T                | 0.05      | 2 |
| Aluminum           | rough surface                          | 20–50  | T                | 0.06–0.07 | 1 |
| Aluminum           | roughened                              | 27     | 10 $\mu\text{m}$ | 0.18      | 3 |
| Aluminum           | roughened                              | 27     | 3 $\mu\text{m}$  | 0.28      | 3 |
| Aluminum           | sheet, 4 samples differently scratched | 70     | SW               | 0.05–0.08 | 9 |
| Aluminum           | sheet, 4 samples differently scratched | 70     | LW               | 0.03–0.06 | 9 |
| Aluminum           | vacuum deposited                       | 20     | T                | 0.04      | 2 |
| Aluminum           | weathered, heavily                     | 17     | SW               | 0.83–0.94 | 5 |
| Aluminum bronze    |                                        | 20     | T                | 0.60      | 1 |
| Aluminum hydroxide | powder                                 |        | T                | 0.28      | 1 |
| Aluminum oxide     | activated, powder                      |        | T                | 0.46      | 1 |
| Aluminum oxide     | pure, powder (alumina)                 |        | T                | 0.16      | 1 |
| Asbestos           | board                                  | 20     | T                | 0.96      | 1 |
| Asbestos           | fabric                                 |        | T                | 0.78      | 1 |
| Asbestos           | floor tile                             | 35     | SW               | 0.94      | 7 |
| Asbestos           | paper                                  | 40–400 | T                | 0.93–0.95 | 1 |

**Table 39.1** T: Total spectrum; SW: 2–5 µm; LW: 8–14 µm, LLW: 6.5–20 µm; 1: Material; 2: Specification; 3: Temperature in °C; 4: Spectrum; 5: Emissivity; 6: Reference (continued)

| 1              | 2                                                                      | 3         | 4   | 5         | 6 |
|----------------|------------------------------------------------------------------------|-----------|-----|-----------|---|
| Asbestos       | powder                                                                 |           | T   | 0.40–0.60 | 1 |
| Asbestos       | slate                                                                  | 20        | T   | 0.96      | 1 |
| Asphalt paving |                                                                        | 4         | LLW | 0.967     | 8 |
| Brass          | dull, tarnished                                                        | 20–350    | T   | 0.22      | 1 |
| Brass          | oxidized                                                               | 100       | T   | 0.61      | 2 |
| Brass          | oxidized                                                               | 70        | SW  | 0.04–0.09 | 9 |
| Brass          | oxidized                                                               | 70        | LW  | 0.03–0.07 | 9 |
| Brass          | oxidized at 600°C                                                      | 200–600   | T   | 0.59–0.61 | 1 |
| Brass          | polished                                                               | 200       | T   | 0.03      | 1 |
| Brass          | polished, highly                                                       | 100       | T   | 0.03      | 2 |
| Brass          | rubbed with 80-grit emery                                              | 20        | T   | 0.20      | 2 |
| Brass          | sheet, rolled                                                          | 20        | T   | 0.06      | 1 |
| Brass          | sheet, worked with emery                                               | 20        | T   | 0.2       | 1 |
| Brick          | alumina                                                                | 17        | SW  | 0.68      | 5 |
| Brick          | common                                                                 | 17        | SW  | 0.86–0.81 | 5 |
| Brick          | Dinas silica, glazed, rough                                            | 1100      | T   | 0.85      | 1 |
| Brick          | Dinas silica, refractory                                               | 1000      | T   | 0.66      | 1 |
| Brick          | Dinas silica, unglazed, rough                                          | 1000      | T   | 0.80      | 1 |
| Brick          | firebrick                                                              | 17        | SW  | 0.68      | 5 |
| Brick          | fireclay                                                               | 1000      | T   | 0.75      | 1 |
| Brick          | fireclay                                                               | 1200      | T   | 0.59      | 1 |
| Brick          | fireclay                                                               | 20        | T   | 0.85      | 1 |
| Brick          | masonry                                                                | 35        | SW  | 0.94      | 7 |
| Brick          | masonry, plastered                                                     | 20        | T   | 0.94      | 1 |
| Brick          | red, common                                                            | 20        | T   | 0.93      | 2 |
| Brick          | red, rough                                                             | 20        | T   | 0.88–0.93 | 1 |
| Brick          | refractory, corundum                                                   | 1000      | T   | 0.46      | 1 |
| Brick          | refractory, magnesite                                                  | 1000–1300 | T   | 0.38      | 1 |
| Brick          | refractory, strongly radiating                                         | 500–1000  | T   | 0.8–0.9   | 1 |
| Brick          | refractory, weakly radiating                                           | 500–1000  | T   | 0.65–0.75 | 1 |
| Brick          | silica, 95% SiO <sub>2</sub>                                           | 1230      | T   | 0.66      | 1 |
| Brick          | sillimanite, 33% SiO <sub>2</sub> , 64% Al <sub>2</sub> O <sub>3</sub> | 1500      | T   | 0.29      | 1 |

**Table 39.1** T: Total spectrum; SW: 2–5 µm; LW: 8–14 µm, LLW: 6.5–20 µm; 1: Material; 2: Specification; 3: Temperature in °C; 4: Spectrum; 5: Emissivity; 6: Reference (continued)

| 1         | 2                                | 3         | 4   | 5         | 6 |
|-----------|----------------------------------|-----------|-----|-----------|---|
| Brick     | waterproof                       | 17        | SW  | 0.87      | 5 |
| Bronze    | phosphor bronze                  | 70        | SW  | 0.08      | 9 |
| Bronze    | phosphor bronze                  | 70        | LW  | 0.06      | 9 |
| Bronze    | polished                         | 50        | T   | 0.1       | 1 |
| Bronze    | porous, rough                    | 50–150    | T   | 0.55      | 1 |
| Bronze    | powder                           |           | T   | 0.76–0.80 | 1 |
| Carbon    | candle soot                      | 20        | T   | 0.95      | 2 |
| Carbon    | charcoal powder                  |           | T   | 0.96      | 1 |
| Carbon    | graphite powder                  |           | T   | 0.97      | 1 |
| Carbon    | graphite, filed surface          | 20        | T   | 0.98      | 2 |
| Carbon    | lampblack                        | 20–400    | T   | 0.95–0.97 | 1 |
| Chipboard | untreated                        | 20        | SW  | 0.90      | 6 |
| Chromium  | polished                         | 50        | T   | 0.10      | 1 |
| Chromium  | polished                         | 500–1000  | T   | 0.28–0.38 | 1 |
| Clay      | fired                            | 70        | T   | 0.91      | 1 |
| Cloth     | black                            | 20        | T   | 0.98      | 1 |
| Concrete  |                                  | 20        | T   | 0.92      | 2 |
| Concrete  | dry                              | 36        | SW  | 0.95      | 7 |
| Concrete  | rough                            | 17        | SW  | 0.97      | 5 |
| Concrete  | walkway                          | 5         | LLW | 0.974     | 8 |
| Copper    | commercial, burnished            | 20        | T   | 0.07      | 1 |
| Copper    | electrolytic, carefully polished | 80        | T   | 0.018     | 1 |
| Copper    | electrolytic, polished           | –34       | T   | 0.006     | 4 |
| Copper    | molten                           | 1100–1300 | T   | 0.13–0.15 | 1 |
| Copper    | oxidized                         | 50        | T   | 0.6–0.7   | 1 |
| Copper    | oxidized to blackness            |           | T   | 0.88      | 1 |
| Copper    | oxidized, black                  | 27        | T   | 0.78      | 4 |
| Copper    | oxidized, heavily                | 20        | T   | 0.78      | 2 |
| Copper    | polished                         | 50–100    | T   | 0.02      | 1 |
| Copper    | polished                         | 100       | T   | 0.03      | 2 |
| Copper    | polished, commercial             | 27        | T   | 0.03      | 4 |
| Copper    | polished, mechanical             | 22        | T   | 0.015     | 4 |
| Copper    | pure, carefully prepared surface | 22        | T   | 0.008     | 4 |
| Copper    | scraped                          | 27        | T   | 0.07      | 4 |

**Table 39.1** T: Total spectrum; SW: 2–5 µm; LW: 8–14 µm, LLW: 6.5–20 µm; 1: Material; 2: Specification; 3: Temperature in °C; 4: Spectrum; 5: Emissivity; 6: Reference (continued)

| 1                        | 2                                | 3        | 4   | 5         | 6  |
|--------------------------|----------------------------------|----------|-----|-----------|----|
| Copper dioxide           | powder                           |          | T   | 0.84      | 1  |
| Copper oxide             | red, powder                      |          | T   | 0.70      | 1  |
| Ebonite                  |                                  |          | T   | 0.89      | 1  |
| Emery                    | coarse                           | 80       | T   | 0.85      | 1  |
| Enamel                   |                                  | 20       | T   | 0.9       | 1  |
| Enamel                   | lacquer                          | 20       | T   | 0.85–0.95 | 1  |
| Fiber board              | hard, untreated                  | 20       | SW  | 0.85      | 6  |
| Fiber board              | masonite                         | 70       | SW  | 0.75      | 9  |
| Fiber board              | masonite                         | 70       | LW  | 0.88      | 9  |
| Fiber board              | particle board                   | 70       | SW  | 0.77      | 9  |
| Fiber board              | particle board                   | 70       | LW  | 0.89      | 9  |
| Fiber board              | porous, untreated                | 20       | SW  | 0.85      | 6  |
| Glass pane (float glass) | non-coated                       | 20       | LW  | 0.97      | 14 |
| Gold                     | polished                         | 130      | T   | 0.018     | 1  |
| Gold                     | polished, carefully              | 200–600  | T   | 0.02–0.03 | 1  |
| Gold                     | polished, highly                 | 100      | T   | 0.02      | 2  |
| Granite                  | polished                         | 20       | LLW | 0.849     | 8  |
| Granite                  | rough                            | 21       | LLW | 0.879     | 8  |
| Granite                  | rough, 4 different samples       | 70       | SW  | 0.95–0.97 | 9  |
| Granite                  | rough, 4 different samples       | 70       | LW  | 0.77–0.87 | 9  |
| Gypsum                   |                                  | 20       | T   | 0.8–0.9   | 1  |
| Ice: See Water           |                                  |          |     |           |    |
| Iron and steel           | cold rolled                      | 70       | SW  | 0.20      | 9  |
| Iron and steel           | cold rolled                      | 70       | LW  | 0.09      | 9  |
| Iron and steel           | covered with red rust            | 20       | T   | 0.61–0.85 | 1  |
| Iron and steel           | electrolytic                     | 100      | T   | 0.05      | 4  |
| Iron and steel           | electrolytic                     | 22       | T   | 0.05      | 4  |
| Iron and steel           | electrolytic                     | 260      | T   | 0.07      | 4  |
| Iron and steel           | electrolytic, carefully polished | 175–225  | T   | 0.05–0.06 | 1  |
| Iron and steel           | freshly worked with emery        | 20       | T   | 0.24      | 1  |
| Iron and steel           | ground sheet                     | 950–1100 | T   | 0.55–0.61 | 1  |
| Iron and steel           | heavily rusted sheet             | 20       | T   | 0.69      | 2  |
| Iron and steel           | hot rolled                       | 130      | T   | 0.60      | 1  |
| Iron and steel           | hot rolled                       | 20       | T   | 0.77      | 1  |
| Iron and steel           | oxidized                         | 100      | T   | 0.74      | 4  |

**Table 39.1** T: Total spectrum; SW: 2–5 µm; LW: 8–14 µm, LLW: 6.5–20 µm; 1: Material; 2: Specification; 3: Temperature in °C; 4: Spectrum; 5: Emissivity; 6: Reference (continued)

| 1               | 2                           | 3        | 4  | 5         | 6 |
|-----------------|-----------------------------|----------|----|-----------|---|
| Iron and steel  | oxidized                    | 100      | T  | 0.74      | 1 |
| Iron and steel  | oxidized                    | 1227     | T  | 0.89      | 4 |
| Iron and steel  | oxidized                    | 125–525  | T  | 0.78–0.82 | 1 |
| Iron and steel  | oxidized                    | 200      | T  | 0.79      | 2 |
| Iron and steel  | oxidized                    | 200–600  | T  | 0.80      | 1 |
| Iron and steel  | oxidized strongly           | 50       | T  | 0.88      | 1 |
| Iron and steel  | oxidized strongly           | 500      | T  | 0.98      | 1 |
| Iron and steel  | polished                    | 100      | T  | 0.07      | 2 |
| Iron and steel  | polished                    | 400–1000 | T  | 0.14–0.38 | 1 |
| Iron and steel  | polished sheet              | 750–1050 | T  | 0.52–0.56 | 1 |
| Iron and steel  | rolled sheet                | 50       | T  | 0.56      | 1 |
| Iron and steel  | rolled, freshly             | 20       | T  | 0.24      | 1 |
| Iron and steel  | rough, plane surface        | 50       | T  | 0.95–0.98 | 1 |
| Iron and steel  | rusted red, sheet           | 22       | T  | 0.69      | 4 |
| Iron and steel  | rusted, heavily             | 17       | SW | 0.96      | 5 |
| Iron and steel  | rusty, red                  | 20       | T  | 0.69      | 1 |
| Iron and steel  | shiny oxide layer, sheet,   | 20       | T  | 0.82      | 1 |
| Iron and steel  | shiny, etched               | 150      | T  | 0.16      | 1 |
| Iron and steel  | wrought, carefully polished | 40–250   | T  | 0.28      | 1 |
| Iron galvanized | heavily oxidized            | 70       | SW | 0.64      | 9 |
| Iron galvanized | heavily oxidized            | 70       | LW | 0.85      | 9 |
| Iron galvanized | sheet                       | 92       | T  | 0.07      | 4 |
| Iron galvanized | sheet, burnished            | 30       | T  | 0.23      | 1 |
| Iron galvanized | sheet, oxidized             | 20       | T  | 0.28      | 1 |
| Iron tinned     | sheet                       | 24       | T  | 0.064     | 4 |
| Iron, cast      | casting                     | 50       | T  | 0.81      | 1 |
| Iron, cast      | ingots                      | 1000     | T  | 0.95      | 1 |
| Iron, cast      | liquid                      | 1300     | T  | 0.28      | 1 |
| Iron, cast      | machined                    | 800–1000 | T  | 0.60–0.70 | 1 |
| Iron, cast      | oxidized                    | 100      | T  | 0.64      | 2 |
| Iron, cast      | oxidized                    | 260      | T  | 0.66      | 4 |
| Iron, cast      | oxidized                    | 38       | T  | 0.63      | 4 |
| Iron, cast      | oxidized                    | 538      | T  | 0.76      | 4 |
| Iron, cast      | oxidized at 600°C           | 200–600  | T  | 0.64–0.78 | 1 |
| Iron, cast      | polished                    | 200      | T  | 0.21      | 1 |
| Iron, cast      | polished                    | 38       | T  | 0.21      | 4 |
| Iron, cast      | polished                    | 40       | T  | 0.21      | 2 |

**Table 39.1** T: Total spectrum; SW: 2–5  $\mu\text{m}$ ; LW: 8–14  $\mu\text{m}$ , LLW: 6.5–20  $\mu\text{m}$ ; 1: Material; 2: Specification; 3: Temperature in  $^{\circ}\text{C}$ ; 4: Spectrum; 5: Emissivity; 6: Reference (continued)

| 1                            | 2                                  | 3                          | 4  | 5              | 6         |
|------------------------------|------------------------------------|----------------------------|----|----------------|-----------|
| Iron, cast                   | unworked                           | 900–1100                   | T  | 0.87–0.95      | 1         |
| Krylon Ultra-flat black 1602 | Flat black                         | Room temperature up to 175 | LW | $\approx 0.96$ | 12        |
| Krylon Ultra-flat black 1602 | Flat black                         | Room temperature up to 175 | MW | $\approx 0.97$ | 12        |
| Lacquer                      | 3 colors sprayed on Aluminum       | 70                         | SW | 0.50–0.53      | 9         |
| Lacquer                      | 3 colors sprayed on Aluminum       | 70                         | LW | 0.92–0.94      | 9         |
| Lacquer                      | Aluminum on rough surface          | 20                         | T  | 0.4            | 1         |
| Lacquer                      | bakelite                           | 80                         | T  | 0.83           | 1         |
| Lacquer                      | black, dull                        | 40–100                     | T  | 0.96–0.98      | 1         |
| Lacquer                      | black, matte                       | 100                        | T  | 0.97           | 2         |
| Lacquer                      | black, shiny, sprayed on iron      | 20                         | T  | 0.87           | 1         |
| Lacquer                      | heat-resistant                     | 100                        | T  | 0.92           | 1         |
| Lacquer                      | white                              | 100                        | T  | 0.92           | 2         |
| Lacquer                      | white                              | 40–100                     | T  | 0.8–0.95       | 1         |
| Lead                         | oxidized at 200 $^{\circ}\text{C}$ | 200                        | T  | 0.63           | 1         |
| Lead                         | oxidized, gray                     | 20                         | T  | 0.28           | 1         |
| Lead                         | oxidized, gray                     | 22                         | T  | 0.28           | 4         |
| Lead                         | shiny                              | 250                        | T  | 0.08           | 1         |
| Lead                         | unoxidized, polished               | 100                        | T  | 0.05           | 4         |
| Lead red                     |                                    | 100                        | T  | 0.93           | 4         |
| Lead red, powder             |                                    | 100                        | T  | 0.93           | 1         |
| Leather                      | tanned                             |                            | T  | 0.75–0.80      | 1         |
| Lime                         |                                    |                            | T  | 0.3–0.4        | 1         |
| Magnesium                    |                                    | 22                         | T  | 0.07           | 4         |
| Magnesium                    |                                    | 260                        | T  | 0.13           | 4         |
| Magnesium                    |                                    | 538                        | T  | 0.18           | 4         |
| Magnesium                    | polished                           | 20                         | T  | 0.07           | 2         |
| Magnesium powder             |                                    |                            | T  | 0.86           | 1         |
| Molybdenum                   |                                    | 1500–2200                  | T  | 0.19–0.26      | 1         |
| Molybdenum                   |                                    | 600–1000                   | T  | 0.08–0.13      | 1         |
| Molybdenum                   | filament                           | 700–2500                   | T  | 0.1–0.3        | 1         |
| Mortar                       |                                    | 17                         | SW | 0.87           | 5         |
| Mortar                       | dry                                | 36                         | SW | 0.94           | 7         |
| Nextel Velvet 811-21 Black   | Flat black                         | –60–150                    | LW | $> 0.97$       | 10 and 11 |

**Table 39.1** T: Total spectrum; SW: 2–5 µm; LW: 8–14 µm, LLW: 6.5–20 µm; 1: Material; 2: Specification; 3: Temperature in °C; 4: Spectrum; 5: Emissivity; 6: Reference (continued)

| 1                | 2                                 | 3         | 4  | 5         | 6 |
|------------------|-----------------------------------|-----------|----|-----------|---|
| Nichrome         | rolled                            | 700       | T  | 0.25      | 1 |
| Nichrome         | sandblasted                       | 700       | T  | 0.70      | 1 |
| Nichrome         | wire, clean                       | 50        | T  | 0.65      | 1 |
| Nichrome         | wire, clean                       | 500–1000  | T  | 0.71–0.79 | 1 |
| Nichrome         | wire, oxidized                    | 50–500    | T  | 0.95–0.98 | 1 |
| Nickel           | bright matte                      | 122       | T  | 0.041     | 4 |
| Nickel           | commercially pure, polished       | 100       | T  | 0.045     | 1 |
| Nickel           | commercially pure, polished       | 200–400   | T  | 0.07–0.09 | 1 |
| Nickel           | electrolytic                      | 22        | T  | 0.04      | 4 |
| Nickel           | electrolytic                      | 260       | T  | 0.07      | 4 |
| Nickel           | electrolytic                      | 38        | T  | 0.06      | 4 |
| Nickel           | electrolytic                      | 538       | T  | 0.10      | 4 |
| Nickel           | electroplated on iron, polished   | 22        | T  | 0.045     | 4 |
| Nickel           | electroplated on iron, unpolished | 20        | T  | 0.11–0.40 | 1 |
| Nickel           | electroplated on iron, unpolished | 22        | T  | 0.11      | 4 |
| Nickel           | electroplated, polished           | 20        | T  | 0.05      | 2 |
| Nickel           | oxidized                          | 1227      | T  | 0.85      | 4 |
| Nickel           | oxidized                          | 200       | T  | 0.37      | 2 |
| Nickel           | oxidized                          | 227       | T  | 0.37      | 4 |
| Nickel           | oxidized at 600°C                 | 200–600   | T  | 0.37–0.48 | 1 |
| Nickel           | polished                          | 122       | T  | 0.045     | 4 |
| Nickel           | wire                              | 200–1000  | T  | 0.1–0.2   | 1 |
| Nickel oxide     |                                   | 1000–1250 | T  | 0.75–0.86 | 1 |
| Nickel oxide     |                                   | 500–650   | T  | 0.52–0.59 | 1 |
| Oil, lubricating | 0.025 mm film                     | 20        | T  | 0.27      | 2 |
| Oil, lubricating | 0.050 mm film                     | 20        | T  | 0.46      | 2 |
| Oil, lubricating | 0.125 mm film                     | 20        | T  | 0.72      | 2 |
| Oil, lubricating | film on Ni base: Ni base only     | 20        | T  | 0.05      | 2 |
| Oil, lubricating | thick coating                     | 20        | T  | 0.82      | 2 |
| Paint            | 8 different colors and qualities  | 70        | SW | 0.88–0.96 | 9 |
| Paint            | 8 different colors and qualities  | 70        | LW | 0.92–0.94 | 9 |
| Paint            | Aluminum, various ages            | 50–100    | T  | 0.27–0.67 | 1 |
| Paint            | cadmium yellow                    |           | T  | 0.28–0.33 | 1 |



**Table 39.1** T: Total spectrum; SW: 2–5 µm; LW: 8–14 µm, LLW: 6.5–20 µm; 1: Material; 2: Specification; 3: Temperature in °C; 4: Spectrum; 5: Emissivity; 6: Reference (continued)

| 1       | 2                                          | 3   | 4  | 5         | 6 |
|---------|--------------------------------------------|-----|----|-----------|---|
| Paint   | chrome green                               |     | T  | 0.65–0.70 | 1 |
| Paint   | cobalt blue                                |     | T  | 0.7–0.8   | 1 |
| Paint   | oil                                        | 17  | SW | 0.87      | 5 |
| Paint   | oil based, average of 16 colors            | 100 | T  | 0.94      | 2 |
| Paint   | oil, black flat                            | 20  | SW | 0.94      | 6 |
| Paint   | oil, black gloss                           | 20  | SW | 0.92      | 6 |
| Paint   | oil, gray flat                             | 20  | SW | 0.97      | 6 |
| Paint   | oil, gray gloss                            | 20  | SW | 0.96      | 6 |
| Paint   | oil, various colors                        | 100 | T  | 0.92–0.96 | 1 |
| Paint   | plastic, black                             | 20  | SW | 0.95      | 6 |
| Paint   | plastic, white                             | 20  | SW | 0.84      | 6 |
| Paper   | 4 different colors                         | 70  | SW | 0.68–0.74 | 9 |
| Paper   | 4 different colors                         | 70  | LW | 0.92–0.94 | 9 |
| Paper   | black                                      |     | T  | 0.90      | 1 |
| Paper   | black, dull                                |     | T  | 0.94      | 1 |
| Paper   | black, dull                                | 70  | SW | 0.86      | 9 |
| Paper   | black, dull                                | 70  | LW | 0.89      | 9 |
| Paper   | blue, dark                                 |     | T  | 0.84      | 1 |
| Paper   | coated with black lacquer                  |     | T  | 0.93      | 1 |
| Paper   | green                                      |     | T  | 0.85      | 1 |
| Paper   | red                                        |     | T  | 0.76      | 1 |
| Paper   | white                                      | 20  | T  | 0.7–0.9   | 1 |
| Paper   | white bond                                 | 20  | T  | 0.93      | 2 |
| Paper   | white, 3 different glosses                 | 70  | SW | 0.76–0.78 | 9 |
| Paper   | white, 3 different glosses                 | 70  | LW | 0.88–0.90 | 9 |
| Paper   | yellow                                     |     | T  | 0.72      | 1 |
| Plaster |                                            | 17  | SW | 0.86      | 5 |
| Plaster | plasterboard, untreated                    | 20  | SW | 0.90      | 6 |
| Plaster | rough coat                                 | 20  | T  | 0.91      | 2 |
| Plastic | glass fibre laminate (printed circ. board) | 70  | SW | 0.94      | 9 |
| Plastic | glass fibre laminate (printed circ. board) | 70  | LW | 0.91      | 9 |
| Plastic | polyurethane isolation board               | 70  | LW | 0.55      | 9 |

**Table 39.1** T: Total spectrum; SW: 2–5  $\mu\text{m}$ ; LW: 8–14  $\mu\text{m}$ , LLW: 6.5–20  $\mu\text{m}$ ; 1: Material; 2: Specification; 3: Temperature in  $^{\circ}\text{C}$ ; 4: Spectrum; 5: Emissivity; 6: Reference (continued)

| 1               | 2                                    | 3         | 4   | 5         | 6 |
|-----------------|--------------------------------------|-----------|-----|-----------|---|
| Plastic         | polyurethane isolation board         | 70        | SW  | 0.29      | 9 |
| Plastic         | PVC, plastic floor, dull, structured | 70        | SW  | 0.94      | 9 |
| Plastic         | PVC, plastic floor, dull, structured | 70        | LW  | 0.93      | 9 |
| Platinum        |                                      | 100       | T   | 0.05      | 4 |
| Platinum        |                                      | 1000–1500 | T   | 0.14–0.18 | 1 |
| Platinum        |                                      | 1094      | T   | 0.18      | 4 |
| Platinum        |                                      | 17        | T   | 0.016     | 4 |
| Platinum        |                                      | 22        | T   | 0.03      | 4 |
| Platinum        |                                      | 260       | T   | 0.06      | 4 |
| Platinum        |                                      | 538       | T   | 0.10      | 4 |
| Platinum        | pure, polished                       | 200–600   | T   | 0.05–0.10 | 1 |
| Platinum        | ribbon                               | 900–1100  | T   | 0.12–0.17 | 1 |
| Platinum        | wire                                 | 1400      | T   | 0.18      | 1 |
| Platinum        | wire                                 | 500–1000  | T   | 0.10–0.16 | 1 |
| Platinum        | wire                                 | 50–200    | T   | 0.06–0.07 | 1 |
| Porcelain       | glazed                               | 20        | T   | 0.92      | 1 |
| Porcelain       | white, shiny                         |           | T   | 0.70–0.75 | 1 |
| Rubber          | hard                                 | 20        | T   | 0.95      | 1 |
| Rubber          | soft, gray, rough                    | 20        | T   | 0.95      | 1 |
| Sand            |                                      |           | T   | 0.60      | 1 |
| Sand            |                                      | 20        | T   | 0.90      | 2 |
| Sandstone       | polished                             | 19        | LLW | 0.909     | 8 |
| Sandstone       | rough                                | 19        | LLW | 0.935     | 8 |
| Silver          | polished                             | 100       | T   | 0.03      | 2 |
| Silver          | pure, polished                       | 200–600   | T   | 0.02–0.03 | 1 |
| Skin            | human                                | 32        | T   | 0.98      | 2 |
| Slag            | boiler                               | 0–100     | T   | 0.97–0.93 | 1 |
| Slag            | boiler                               | 1400–1800 | T   | 0.69–0.67 | 1 |
| Slag            | boiler                               | 200–500   | T   | 0.89–0.78 | 1 |
| Slag            | boiler                               | 600–1200  | T   | 0.76–0.70 | 1 |
| Snow: See Water |                                      |           |     |           |   |
| Soil            | dry                                  | 20        | T   | 0.92      | 2 |
| Soil            | saturated with water                 | 20        | T   | 0.95      | 2 |
| Stainless steel | alloy, 8% Ni, 18% Cr                 | 500       | T   | 0.35      | 1 |
| Stainless steel | rolled                               | 700       | T   | 0.45      | 1 |
| Stainless steel | sandblasted                          | 700       | T   | 0.70      | 1 |
| Stainless steel | sheet, polished                      | 70        | SW  | 0.18      | 9 |

**Table 39.1** T: Total spectrum; SW: 2–5 µm; LW: 8–14 µm, LLW: 6.5–20 µm; 1: Material; 2: Specification; 3: Temperature in °C; 4: Spectrum; 5: Emissivity; 6: Reference (continued)

| 1               | 2                                    | 3         | 4  | 5         | 6 |
|-----------------|--------------------------------------|-----------|----|-----------|---|
| Stainless steel | sheet, polished                      | 70        | LW | 0.14      | 9 |
| Stainless steel | sheet, untreated, somewhat scratched | 70        | SW | 0.30      | 9 |
| Stainless steel | sheet, untreated, somewhat scratched | 70        | LW | 0.28      | 9 |
| Stainless steel | type 18-8, buffed                    | 20        | T  | 0.16      | 2 |
| Stainless steel | type 18-8, oxidized at 800°C         | 60        | T  | 0.85      | 2 |
| Stucco          | rough, lime                          | 10–90     | T  | 0.91      | 1 |
| Styrofoam       | insulation                           | 37        | SW | 0.60      | 7 |
| Tar             |                                      |           | T  | 0.79–0.84 | 1 |
| Tar             | paper                                | 20        | T  | 0.91–0.93 | 1 |
| Tile            | glazed                               | 17        | SW | 0.94      | 5 |
| Tin             | burnished                            | 20–50     | T  | 0.04–0.06 | 1 |
| Tin             | tin-plated sheet iron                | 100       | T  | 0.07      | 2 |
| Titanium        | oxidized at 540°C                    | 1000      | T  | 0.60      | 1 |
| Titanium        | oxidized at 540°C                    | 200       | T  | 0.40      | 1 |
| Titanium        | oxidized at 540°C                    | 500       | T  | 0.50      | 1 |
| Titanium        | polished                             | 1000      | T  | 0.36      | 1 |
| Titanium        | polished                             | 200       | T  | 0.15      | 1 |
| Titanium        | polished                             | 500       | T  | 0.20      | 1 |
| Tungsten        |                                      | 1500–2200 | T  | 0.24–0.31 | 1 |
| Tungsten        |                                      | 200       | T  | 0.05      | 1 |
| Tungsten        |                                      | 600–1000  | T  | 0.1–0.16  | 1 |
| Tungsten        | filament                             | 3300      | T  | 0.39      | 1 |
| Varnish         | flat                                 | 20        | SW | 0.93      | 6 |
| Varnish         | on oak parquet floor                 | 70        | SW | 0.90      | 9 |
| Varnish         | on oak parquet floor                 | 70        | LW | 0.90–0.93 | 9 |
| Wallpaper       | slight pattern, light gray           | 20        | SW | 0.85      | 6 |
| Wallpaper       | slight pattern, red                  | 20        | SW | 0.90      | 6 |
| Water           | distilled                            | 20        | T  | 0.96      | 2 |
| Water           | frost crystals                       | –10       | T  | 0.98      | 2 |
| Water           | ice, covered with heavy frost        | 0         | T  | 0.98      | 1 |
| Water           | ice, smooth                          | 0         | T  | 0.97      | 1 |
| Water           | ice, smooth                          | –10       | T  | 0.96      | 2 |
| Water           | layer >0.1 mm thick                  | 0–100     | T  | 0.95–0.98 | 1 |

**Table 39.1** T: Total spectrum; SW: 2–5 µm; LW: 8–14 µm, LLW: 6.5–20 µm; 1: Material; 2: Specification; 3: Temperature in °C; 4: Spectrum; 5: Emissivity; 6: Reference (continued)

| 1     | 2                         | 3         | 4   | 5         | 6 |
|-------|---------------------------|-----------|-----|-----------|---|
| Water | snow                      |           | T   | 0.8       | 1 |
| Water | snow                      | –10       | T   | 0.85      | 2 |
| Wood  |                           | 17        | SW  | 0.98      | 5 |
| Wood  |                           | 19        | LLW | 0.962     | 8 |
| Wood  | ground                    |           | T   | 0.5–0.7   | 1 |
| Wood  | pine, 4 different samples | 70        | SW  | 0.67–0.75 | 9 |
| Wood  | pine, 4 different samples | 70        | LW  | 0.81–0.89 | 9 |
| Wood  | planed                    | 20        | T   | 0.8–0.9   | 1 |
| Wood  | planed oak                | 20        | T   | 0.90      | 2 |
| Wood  | planed oak                | 70        | SW  | 0.77      | 9 |
| Wood  | planed oak                | 70        | LW  | 0.88      | 9 |
| Wood  | plywood, smooth, dry      | 36        | SW  | 0.82      | 7 |
| Wood  | plywood, untreated        | 20        | SW  | 0.83      | 6 |
| Wood  | white, damp               | 20        | T   | 0.7–0.8   | 1 |
| Zinc  | oxidized at 400°C         | 400       | T   | 0.11      | 1 |
| Zinc  | oxidized surface          | 1000–1200 | T   | 0.50–0.60 | 1 |
| Zinc  | polished                  | 200–300   | T   | 0.04–0.05 | 1 |
| Zinc  | sheet                     | 50        | T   | 0.20      | 1 |



---

**A note on the technical production of this publication**

This publication was produced using XML — the eXtensible Markup Language. For more information about XML, please visit <http://www.w3.org/XML/>

**A note on the typeface used in this publication**

This publication was typeset using Linotype Helvetica™ World. Helvetica™ was designed by Max Miedinger (1910–1980)

**LOEF (List Of Effective Files)**

T501248.xml; en-US; AG; 53746; 2018-11-29  
T505552.xml; en-US; 47668  
T505469.xml; en-US; 53142  
T505013.xml; en-US; 53350  
T506130.xml; en-US; 45125  
T506212.xml; ; 52552  
T506156.xml; en-US; 53656  
T506141.xml; en-US; 47348  
T506142.xml; en-US; 42495  
T506143.xml; en-US; 53741  
T506144.xml; en-US; 47433  
T506145.xml; en-US; 47809  
T506146.xml; en-US; 45097  
T506147.xml; en-US; 45101  
T506148.xml; en-US; 47433  
T506149.xml; en-US; 47433  
T506150.xml; en-US; 45139  
T506151.xml; en-US; 45104  
T506152.xml; en-US; 45104  
T506153.xml; en-US; 45104  
T506154.xml; en-US; 53658  
T505476.xml; en-US; 52849  
T505012.xml; en-US; 41563  
T505007.xml; en-US; 42810  
T506125.xml; en-US; 40753  
T505000.xml; en-US; 40333  
T506155.xml; en-US; 42220  
T506051.xml; en-US; 40460  
T505005.xml; en-US; 43349  
T505001.xml; en-US; 41563  
T505006.xml; en-US; 41563  
T505002.xml; en-US; 39512





---

**Website**

<http://www.flir.com>

**Customer support**

<http://support.flir.com>

**Copyright**

© 2018, FLIR Systems, Inc. All rights reserved worldwide.

**Disclaimer**

Specifications subject to change without further notice. Models and accessories subject to regional market considerations. License procedures may apply. Products described herein may be subject to US Export Regulations. Please refer to [exportquestions@flir.com](mailto:exportquestions@flir.com) with any questions.

Publ. No.: T810253  
Release: AG  
Commit: 53848  
Head: 53848  
Language: en-US  
Modified: 2018-11-29  
Formatted: 2018-11-29