

R&S®ZVA / R&S®ZVB / R&S®ZVT

Vector Network Analyzers

Operating Manual



1145.1084.12 – 26

This Operating Manual describes all R&S®ZVA, R&S®ZVB, and R&S®ZVT vector network analyzer types. Refer to the product brochures for detailed ordering information.

The firmware of the instrument makes use of several valuable open source software packages. For information, see the "Open Source Acknowledgement" on the user documentation CD-ROM (included in delivery).

Rohde & Schwarz would like to thank the open source community for their valuable contribution to embedded computing.

© 2015 Rohde & Schwarz GmbH & Co. KG
Mühldorfstr. 15, 81671 München, Germany
Phone: +49 89 41 29 - 0
Fax: +49 89 41 29 12 164
E-mail: info@rohde-schwarz.com
Internet: www.rohde-schwarz.com

Subject to change – Data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

Throughout this manual R&S® is abbreviated as R&S

Basic Safety Instructions

Always read through and comply with the following safety instructions!

All plants and locations of the Rohde & Schwarz group of companies make every effort to keep the safety standards of our products up to date and to offer our customers the highest possible degree of safety. Our products and the auxiliary equipment they require are designed, built and tested in accordance with the safety standards that apply in each case. Compliance with these standards is continuously monitored by our quality assurance system. The product described here has been designed, built and tested in accordance with the EC Certificate of Conformity and has left the manufacturer's plant in a condition fully complying with safety standards. To maintain this condition and to ensure safe operation, you must observe all instructions and warnings provided in this manual. If you have any questions regarding these safety instructions, the Rohde & Schwarz group of companies will be happy to answer them.

Furthermore, it is your responsibility to use the product in an appropriate manner. This product is designed for use solely in industrial and laboratory environments or, if expressly permitted, also in the field and must not be used in any way that may cause personal injury or property damage. You are responsible if the product is used for any purpose other than its designated purpose or in disregard of the manufacturer's instructions. The manufacturer shall assume no responsibility for such use of the product.

The product is used for its designated purpose if it is used in accordance with its product documentation and within its performance limits (see data sheet, documentation, the following safety instructions). Using the product requires technical skills and, in some cases, a basic knowledge of English. It is therefore essential that only skilled and specialized staff or thoroughly trained personnel with the required skills be allowed to use the product. If personal safety gear is required for using Rohde & Schwarz products, this will be indicated at the appropriate place in the product documentation. Keep the basic safety instructions and the product documentation in a safe place and pass them on to the subsequent users.



Observing the safety instructions will help prevent personal injury or damage of any kind caused by dangerous situations. Therefore, carefully read through and adhere to the following safety instructions before and when using the product. It is also absolutely essential to observe the additional safety instructions on personal safety, for example, that appear in relevant parts of the product documentation. In these safety instructions, the word "product" refers to all merchandise sold and distributed by the Rohde & Schwarz group of companies, including instruments, systems and all accessories. For product-specific information, see the data sheet and the product documentation.

Safety labels on products

The following safety labels are used on products to warn against risks and dangers.

Symbol	Meaning	Symbol	Meaning
	Notice, general danger location Observe product documentation	○	ON/OFF supply voltage
	Caution when handling heavy equipment	⏻	Standby indication
	Danger of electric shock	— — —	Direct current (DC)

Basic Safety Instructions

Symbol	Meaning	Symbol	Meaning
	Warning! Hot surface		Alternating current (AC)
	Protective conductor terminal		Direct/alternating current (DC/AC)
	Ground		Device fully protected by double (reinforced) insulation
	Ground terminal		EU labeling for batteries and accumulators For additional information, see section "Waste disposal/Environmental protection", item 1.
	Be careful when handling electrostatic sensitive devices		EU labeling for separate collection of electrical and electronic devices For additional information, see section "Waste disposal/Environmental protection", item 2.
	Warning! Laser radiation For additional information, see section "Operation", item 7.		

Signal words and their meaning

The following signal words are used in the product documentation in order to warn the reader about risks and dangers.



Indicates a hazardous situation which, if not avoided, will result in death or serious injury.



Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



Indicates information considered important, but not hazard-related, e.g. messages relating to property damage.
In the product documentation, the word ATTENTION is used synonymously.

These signal words are in accordance with the standard definition for civil applications in the European Economic Area. Definitions that deviate from the standard definition may also exist in other economic areas or military applications. It is therefore essential to make sure that the signal words described here are always used only in connection with the related product documentation and the related product. The use of signal words in connection with unrelated products or documentation can result in misinterpretation and in personal injury or material damage.

Basic Safety Instructions

Operating states and operating positions

The product may be operated only under the operating conditions and in the positions specified by the manufacturer, without the product's ventilation being obstructed. If the manufacturer's specifications are not observed, this can result in electric shock, fire and/or serious personal injury or death. Applicable local or national safety regulations and rules for the prevention of accidents must be observed in all work performed.

1. Unless otherwise specified, the following requirements apply to Rohde & Schwarz products: predefined operating position is always with the housing floor facing down, IP protection 2X, use only indoors, max. operating altitude 2000 m above sea level, max. transport altitude 4500 m above sea level. A tolerance of $\pm 10\%$ shall apply to the nominal voltage and $\pm 5\%$ to the nominal frequency, overvoltage category 2, pollution severity 2.
2. Do not place the product on surfaces, vehicles, cabinets or tables that for reasons of weight or stability are unsuitable for this purpose. Always follow the manufacturer's installation instructions when installing the product and fastening it to objects or structures (e.g. walls and shelves). An installation that is not carried out as described in the product documentation could result in personal injury or even death.
3. Do not place the product on heat-generating devices such as radiators or fan heaters. The ambient temperature must not exceed the maximum temperature specified in the product documentation or in the data sheet. Product overheating can cause electric shock, fire and/or serious personal injury or even death.

Electrical safety

If the information on electrical safety is not observed either at all or to the extent necessary, electric shock, fire and/or serious personal injury or death may occur.

1. Prior to switching on the product, always ensure that the nominal voltage setting on the product matches the nominal voltage of the AC supply network. If a different voltage is to be set, the power fuse of the product may have to be changed accordingly.
2. In the case of products of safety class I with movable power cord and connector, operation is permitted only on sockets with a protective conductor contact and protective conductor.
3. Intentionally breaking the protective conductor either in the feed line or in the product itself is not permitted. Doing so can result in the danger of an electric shock from the product. If extension cords or connector strips are implemented, they must be checked on a regular basis to ensure that they are safe to use.
4. If there is no power switch for disconnecting the product from the AC supply network, or if the power switch is not suitable for this purpose, use the plug of the connecting cable to disconnect the product from the AC supply network. In such cases, always ensure that the power plug is easily reachable and accessible at all times. For example, if the power plug is the disconnecting device, the length of the connecting cable must not exceed 3 m. Functional or electronic switches are not suitable for providing disconnection from the AC supply network. If products without power switches are integrated into racks or systems, the disconnecting device must be provided at the system level.
5. Never use the product if the power cable is damaged. Check the power cables on a regular basis to ensure that they are in proper operating condition. By taking appropriate safety measures and carefully laying the power cable, ensure that the cable cannot be damaged and that no one can be hurt by, for example, tripping over the cable or suffering an electric shock.

Basic Safety Instructions

6. The product may be operated only from TN/TT supply networks fuse-protected with max. 16 A (higher fuse only after consulting with the Rohde & Schwarz group of companies).
7. Do not insert the plug into sockets that are dusty or dirty. Insert the plug firmly and all the way into the socket provided for this purpose. Otherwise, sparks that result in fire and/or injuries may occur.
8. Do not overload any sockets, extension cords or connector strips; doing so can cause fire or electric shocks.
9. For measurements in circuits with voltages $V_{rms} > 30$ V, suitable measures (e.g. appropriate measuring equipment, fuse protection, current limiting, electrical separation, insulation) should be taken to avoid any hazards.
10. Ensure that the connections with information technology equipment, e.g. PCs or other industrial computers, comply with the IEC60950-1/EN60950-1 or IEC61010-1/EN 61010-1 standards that apply in each case.
11. Unless expressly permitted, never remove the cover or any part of the housing while the product is in operation. Doing so will expose circuits and components and can lead to injuries, fire or damage to the product.
12. If a product is to be permanently installed, the connection between the protective conductor terminal on site and the product's protective conductor must be made first before any other connection is made. The product may be installed and connected only by a licensed electrician.
13. For permanently installed equipment without built-in fuses, circuit breakers or similar protective devices, the supply circuit must be fuse-protected in such a way that anyone who has access to the product, as well as the product itself, is adequately protected from injury or damage.
14. Use suitable overvoltage protection to ensure that no overvoltage (such as that caused by a bolt of lightning) can reach the product. Otherwise, the person operating the product will be exposed to the danger of an electric shock.
15. Any object that is not designed to be placed in the openings of the housing must not be used for this purpose. Doing so can cause short circuits inside the product and/or electric shocks, fire or injuries.
16. Unless specified otherwise, products are not liquid-proof (see also section "Operating states and operating positions", item 1). Therefore, the equipment must be protected against penetration by liquids. If the necessary precautions are not taken, the user may suffer electric shock or the product itself may be damaged, which can also lead to personal injury.
17. Never use the product under conditions in which condensation has formed or can form in or on the product, e.g. if the product has been moved from a cold to a warm environment. Penetration by water increases the risk of electric shock.
18. Prior to cleaning the product, disconnect it completely from the power supply (e.g. AC supply network or battery). Use a soft, non-linting cloth to clean the product. Never use chemical cleaning agents such as alcohol, acetone or diluents for cellulose lacquers.

Operation

1. Operating the products requires special training and intense concentration. Make sure that persons who use the products are physically, mentally and emotionally fit enough to do so; otherwise, injuries or material damage may occur. It is the responsibility of the employer/operator to select suitable personnel for operating the products.

Basic Safety Instructions

2. Before you move or transport the product, read and observe the section titled "Transport".
3. As with all industrially manufactured goods, the use of substances that induce an allergic reaction (allergens) such as nickel cannot be generally excluded. If you develop an allergic reaction (such as a skin rash, frequent sneezing, red eyes or respiratory difficulties) when using a Rohde & Schwarz product, consult a physician immediately to determine the cause and to prevent health problems or stress.
4. Before you start processing the product mechanically and/or thermally, or before you take it apart, be sure to read and pay special attention to the section titled "Waste disposal/Environmental protection", item 1.
5. Depending on the function, certain products such as RF radio equipment can produce an elevated level of electromagnetic radiation. Considering that unborn babies require increased protection, pregnant women must be protected by appropriate measures. Persons with pacemakers may also be exposed to risks from electromagnetic radiation. The employer/operator must evaluate workplaces where there is a special risk of exposure to radiation and, if necessary, take measures to avert the potential danger.
6. Should a fire occur, the product may release hazardous substances (gases, fluids, etc.) that can cause health problems. Therefore, suitable measures must be taken, e.g. protective masks and protective clothing must be worn.
7. Laser products are given warning labels that are standardized according to their laser class. Lasers can cause biological harm due to the properties of their radiation and due to their extremely concentrated electromagnetic power. If a laser product (e.g. a CD/DVD drive) is integrated into a Rohde & Schwarz product, absolutely no other settings or functions may be used as described in the product documentation. The objective is to prevent personal injury (e.g. due to laser beams).
8. EMC classes (in line with EN 55011/CISPR 11, and analogously with EN 55022/CISPR 22, EN 55032/CISPR 32)
 - Class A equipment:
Equipment suitable for use in all environments except residential environments and environments that are directly connected to a low-voltage supply network that supplies residential buildings
Note: Class A equipment is intended for use in an industrial environment. This equipment may cause radio disturbances in residential environments, due to possible conducted as well as radiated disturbances. In this case, the operator may be required to take appropriate measures to eliminate these disturbances.
 - Class B equipment:
Equipment suitable for use in residential environments and environments that are directly connected to a low-voltage supply network that supplies residential buildings

Repair and service

1. The product may be opened only by authorized, specially trained personnel. Before any work is performed on the product or before the product is opened, it must be disconnected from the AC supply network. Otherwise, personnel will be exposed to the risk of an electric shock.

Basic Safety Instructions

2. Adjustments, replacement of parts, maintenance and repair may be performed only by electrical experts authorized by Rohde & Schwarz. Only original parts may be used for replacing parts relevant to safety (e.g. power switches, power transformers, fuses). A safety test must always be performed after parts relevant to safety have been replaced (visual inspection, protective conductor test, insulation resistance measurement, leakage current measurement, functional test). This helps ensure the continued safety of the product.

Batteries and rechargeable batteries/cells

If the information regarding batteries and rechargeable batteries/cells is not observed either at all or to the extent necessary, product users may be exposed to the risk of explosions, fire and/or serious personal injury, and, in some cases, death. Batteries and rechargeable batteries with alkaline electrolytes (e.g. lithium cells) must be handled in accordance with the EN 62133 standard.

1. Cells must not be taken apart or crushed.
2. Cells or batteries must not be exposed to heat or fire. Storage in direct sunlight must be avoided. Keep cells and batteries clean and dry. Clean soiled connectors using a dry, clean cloth.
3. Cells or batteries must not be short-circuited. Cells or batteries must not be stored in a box or in a drawer where they can short-circuit each other, or where they can be short-circuited by other conductive materials. Cells and batteries must not be removed from their original packaging until they are ready to be used.
4. Cells and batteries must not be exposed to any mechanical shocks that are stronger than permitted.
5. If a cell develops a leak, the fluid must not be allowed to come into contact with the skin or eyes. If contact occurs, wash the affected area with plenty of water and seek medical aid.
6. Improperly replacing or charging cells or batteries that contain alkaline electrolytes (e.g. lithium cells) can cause explosions. Replace cells or batteries only with the matching Rohde & Schwarz type (see parts list) in order to ensure the safety of the product.
7. Cells and batteries must be recycled and kept separate from residual waste. Rechargeable batteries and normal batteries that contain lead, mercury or cadmium are hazardous waste. Observe the national regulations regarding waste disposal and recycling.

Transport

1. The product may be very heavy. Therefore, the product must be handled with care. In some cases, the user may require a suitable means of lifting or moving the product (e.g. with a lift-truck) to avoid back or other physical injuries.
2. Handles on the products are designed exclusively to enable personnel to transport the product. It is therefore not permissible to use handles to fasten the product to or on transport equipment such as cranes, fork lifts, wagons, etc. The user is responsible for securely fastening the products to or on the means of transport or lifting. Observe the safety regulations of the manufacturer of the means of transport or lifting. Noncompliance can result in personal injury or material damage.
3. If you use the product in a vehicle, it is the sole responsibility of the driver to drive the vehicle safely and properly. The manufacturer assumes no responsibility for accidents or collisions. Never use the product in a moving vehicle if doing so could distract the driver of the vehicle. Adequately secure the product in the vehicle to prevent injuries or other damage in the event of an accident.

Waste disposal/Environmental protection

1. Specially marked equipment has a battery or accumulator that must not be disposed of with unsorted municipal waste, but must be collected separately. It may only be disposed of at a suitable collection point or via a Rohde & Schwarz customer service center.
2. Waste electrical and electronic equipment must not be disposed of with unsorted municipal waste, but must be collected separately.
Rohde & Schwarz GmbH & Co. KG has developed a disposal concept and takes full responsibility for take-back obligations and disposal obligations for manufacturers within the EU. Contact your Rohde & Schwarz customer service center for environmentally responsible disposal of the product.
3. If products or their components are mechanically and/or thermally processed in a manner that goes beyond their intended use, hazardous substances (heavy-metal dust such as lead, beryllium, nickel) may be released. For this reason, the product may only be disassembled by specially trained personnel. Improper disassembly may be hazardous to your health. National waste disposal regulations must be observed.
4. If handling the product releases hazardous substances or fuels that must be disposed of in a special way, e.g. coolants or engine oils that must be replenished regularly, the safety instructions of the manufacturer of the hazardous substances or fuels and the applicable regional waste disposal regulations must be observed. Also observe the relevant safety instructions in the product documentation. The improper disposal of hazardous substances or fuels can cause health problems and lead to environmental damage.

For additional information about environmental protection, visit the Rohde & Schwarz website.

Instrucciones de seguridad elementales

¡Es imprescindible leer y cumplir las siguientes instrucciones e informaciones de seguridad!

El principio del grupo de empresas Rohde & Schwarz consiste en tener nuestros productos siempre al día con los estándares de seguridad y de ofrecer a nuestros clientes el máximo grado de seguridad. Nuestros productos y todos los equipos adicionales son siempre fabricados y examinados según las normas de seguridad vigentes. Nuestro sistema de garantía de calidad controla constantemente que sean cumplidas estas normas. El presente producto ha sido fabricado y examinado según el certificado de conformidad de la UE y ha salido de nuestra planta en estado impecable según los estándares técnicos de seguridad. Para poder preservar este estado y garantizar un funcionamiento libre de peligros, el usuario deberá atenerse a todas las indicaciones, informaciones de seguridad y notas de alerta. El grupo de empresas Rohde & Schwarz está siempre a su disposición en caso de que tengan preguntas referentes a estas informaciones de seguridad.

Además queda en la responsabilidad del usuario utilizar el producto en la forma debida. Este producto está destinado exclusivamente al uso en la industria y el laboratorio o, si ha sido expresamente autorizado, para aplicaciones de campo y de ninguna manera deberá ser utilizado de modo que alguna persona/cosa pueda sufrir daño. El uso del producto fuera de sus fines definidos o sin tener en cuenta las instrucciones del fabricante queda en la responsabilidad del usuario. El fabricante no se hace en ninguna forma responsable de consecuencias a causa del mal uso del producto.

Instrucciones de seguridad elementales

Se parte del uso correcto del producto para los fines definidos si el producto es utilizado conforme a las indicaciones de la correspondiente documentación del producto y dentro del margen de rendimiento definido (ver hoja de datos, documentación, informaciones de seguridad que siguen). El uso del producto hace necesarios conocimientos técnicos y ciertos conocimientos del idioma inglés. Por eso se debe tener en cuenta que el producto solo pueda ser operado por personal especializado o personas instruidas en profundidad con las capacidades correspondientes. Si fuera necesaria indumentaria de seguridad para el uso de productos de Rohde & Schwarz, encontraría la información debida en la documentación del producto en el capítulo correspondiente. Guarde bien las informaciones de seguridad elementales, así como la documentación del producto, y entréguelas a usuarios posteriores.


Tener en cuenta las informaciones de seguridad sirve para evitar en lo posible lesiones o daños por peligros de toda clase. Por eso es imprescindible leer detalladamente y comprender por completo las siguientes informaciones de seguridad antes de usar el producto, y respetarlas durante el uso del producto. Deberán tenerse en cuenta todas las demás informaciones de seguridad, como p. ej. las referentes a la protección de personas, que encontrarán en el capítulo correspondiente de la documentación del producto y que también son de obligado cumplimiento. En las presentes informaciones de seguridad se recogen todos los objetos que distribuye el grupo de empresas Rohde & Schwarz bajo la denominación de "producto", entre ellos también aparatos, instalaciones así como toda clase de accesorios. Los datos específicos del producto figuran en la hoja de datos y en la documentación del producto.

Señalización de seguridad de los productos

Las siguientes señales de seguridad se utilizan en los productos para advertir sobre riesgos y peligros.

Símbolo	Significado	Símbolo	Significado
	Aviso: punto de peligro general Observar la documentación del producto		Tensión de alimentación de PUESTA EN MARCHA / PARADA
	Atención en el manejo de dispositivos de peso elevado		Indicación de estado de espera (standby)
	Peligro de choque eléctrico		Corriente continua (DC)
	Advertencia: superficie caliente		Corriente alterna (AC)
	Conexión a conductor de protección		Corriente continua / Corriente alterna (DC/AC)
	Conexión a tierra		El aparato está protegido en su totalidad por un aislamiento doble (reforzado)
	Conexión a masa		Distintivo de la UE para baterías y acumuladores Más información en la sección "Eliminación/protección del medio ambiente", punto 1.

Instrucciones de seguridad elementales

Símbolo	Significado	Símbolo	Significado
	Aviso: Cuidado en el manejo de dispositivos sensibles a la electrostática (ESD)		Distintivo de la UE para la eliminación por separado de dispositivos eléctricos y electrónicos Más información en la sección "Eliminación/protección del medio ambiente", punto 2.
	Advertencia: rayo láser Más información en la sección "Funcionamiento", punto 7.		

Palabras de señal y su significado

En la documentación del producto se utilizan las siguientes palabras de señal con el fin de advertir contra riesgos y peligros.



Indica una situación de peligro que, si no se evita, causa lesiones graves o incluso la muerte.



Indica una situación de peligro que, si no se evita, puede causar lesiones graves o incluso la muerte.



Indica una situación de peligro que, si no se evita, puede causar lesiones leves o moderadas.



Indica información que se considera importante, pero no en relación con situaciones de peligro; p. ej., avisos sobre posibles daños materiales.

En la documentación del producto se emplea de forma sinónima el término CUIDADO.

Las palabras de señal corresponden a la definición habitual para aplicaciones civiles en el área económica europea. Pueden existir definiciones diferentes a esta definición en otras áreas económicas o en aplicaciones militares. Por eso se deberá tener en cuenta que las palabras de señal aquí descritas sean utilizadas siempre solamente en combinación con la correspondiente documentación del producto y solamente en combinación con el producto correspondiente. La utilización de las palabras de señal en combinación con productos o documentaciones que no les correspondan puede llevar a interpretaciones equivocadas y tener por consecuencia daños en personas u objetos.

Estados operativos y posiciones de funcionamiento

El producto solamente debe ser utilizado según lo indicado por el fabricante respecto a los estados operativos y posiciones de funcionamiento sin que se obstruya la ventilación. Si no se siguen las indicaciones del fabricante, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte. En todos los trabajos deberán ser tenidas en cuenta las normas nacionales y locales de seguridad del trabajo y de prevención de accidentes.

Instrucciones de seguridad elementales

1. Si no se convino de otra manera, es para los productos Rohde & Schwarz válido lo que sigue: como posición de funcionamiento se define por principio la posición con el suelo de la caja para abajo, modo de protección IP 2X, uso solamente en estancias interiores, utilización hasta 2000 m sobre el nivel del mar, transporte hasta 4500 m sobre el nivel del mar. Se aplicará una tolerancia de $\pm 10\%$ sobre el voltaje nominal y de $\pm 5\%$ sobre la frecuencia nominal. Categoría de sobrecarga eléctrica 2, índice de suciedad 2.
2. No sitúe el producto encima de superficies, vehículos, estantes o mesas, que por sus características de peso o de estabilidad no sean aptos para él. Siga siempre las instrucciones de instalación del fabricante cuando instale y asegure el producto en objetos o estructuras (p. ej. paredes y estantes). Si se realiza la instalación de modo distinto al indicado en la documentación del producto, se pueden causar lesiones o, en determinadas circunstancias, incluso la muerte.
3. No ponga el producto sobre aparatos que generen calor (p. ej. radiadores o calefactores). La temperatura ambiente no debe superar la temperatura máxima especificada en la documentación del producto o en la hoja de datos. En caso de sobrecalentamiento del producto, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte.

Seguridad eléctrica

Si no se siguen (o se siguen de modo insuficiente) las indicaciones del fabricante en cuanto a seguridad eléctrica, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte.

1. Antes de la puesta en marcha del producto se deberá comprobar siempre que la tensión preseleccionada en el producto coincida con la de la red de alimentación eléctrica. Si es necesario modificar el ajuste de tensión, también se deberán cambiar en caso dado los fusibles correspondientes del producto.
2. Los productos de la clase de protección I con alimentación móvil y enchufe individual solamente podrán enchufarse a tomas de corriente con contacto de seguridad y con conductor de protección conectado.
3. Queda prohibida la interrupción intencionada del conductor de protección, tanto en la toma de corriente como en el mismo producto. La interrupción puede tener como consecuencia el riesgo de que el producto sea fuente de choques eléctricos. Si se utilizan cables alargadores o regletas de enchufe, deberá garantizarse la realización de un examen regular de los mismos en cuanto a su estado técnico de seguridad.
4. Si el producto no está equipado con un interruptor para desconectarlo de la red, o bien si el interruptor existente no resulta apropiado para la desconexión de la red, el enchufe del cable de conexión se deberá considerar como un dispositivo de desconexión. El dispositivo de desconexión se debe poder alcanzar fácilmente y debe estar siempre bien accesible. Si, p. ej., el enchufe de conexión a la red es el dispositivo de desconexión, la longitud del cable de conexión no debe superar 3 m). Los interruptores selectores o electrónicos no son aptos para el corte de la red eléctrica. Si se integran productos sin interruptor en bastidores o instalaciones, se deberá colocar el interruptor en el nivel de la instalación.
5. No utilice nunca el producto si está dañado el cable de conexión a red. Compruebe regularmente el correcto estado de los cables de conexión a red. Asegúrese, mediante las medidas de protección y de instalación adecuadas, de que el cable de conexión a red no pueda ser dañado o de que nadie pueda ser dañado por él, p. ej. al tropezar o por un choque eléctrico.

Instrucciones de seguridad elementales

6. Solamente está permitido el funcionamiento en redes de alimentación TN/TT aseguradas con fusibles de 16 A como máximo (utilización de fusibles de mayor amperaje solo previa consulta con el grupo de empresas Rohde & Schwarz).
7. Nunca conecte el enchufe en tomas de corriente sucias o llenas de polvo. Introduzca el enchufe por completo y fuertemente en la toma de corriente. La no observación de estas medidas puede provocar chispas, fuego y/o lesiones.
8. No sobrecargue las tomas de corriente, los cables alargadores o las regletas de enchufe ya que esto podría causar fuego o choques eléctricos.
9. En las mediciones en circuitos de corriente con una tensión $U_{\text{eff}} > 30 \text{ V}$ se deberán tomar las medidas apropiadas para impedir cualquier peligro (p. ej. medios de medición adecuados, seguros, limitación de tensión, corte protector, aislamiento etc.).
10. Para la conexión con dispositivos informáticos como un PC o un ordenador industrial, debe comprobarse que éstos cumplan los estándares IEC60950-1/EN60950-1 o IEC61010-1/EN 61010-1 válidos en cada caso.
11. A menos que esté permitido expresamente, no retire nunca la tapa ni componentes de la carcasa mientras el producto esté en servicio. Esto pone a descubierto los cables y componentes eléctricos y puede causar lesiones, fuego o daños en el producto.
12. Si un producto se instala en un lugar fijo, se deberá primero conectar el conductor de protección fijo con el conductor de protección del producto antes de hacer cualquier otra conexión. La instalación y la conexión deberán ser efectuadas por un electricista especializado.
13. En el caso de dispositivos fijos que no estén provistos de fusibles, interruptor automático ni otros mecanismos de seguridad similares, el circuito de alimentación debe estar protegido de modo que todas las personas que puedan acceder al producto, así como el producto mismo, estén a salvo de posibles daños.
14. Todo producto debe estar protegido contra sobretensión (debida p. ej. a una caída del rayo) mediante los correspondientes sistemas de protección. Si no, el personal que lo utilice quedará expuesto al peligro de choque eléctrico.
15. No debe introducirse en los orificios de la caja del aparato ningún objeto que no esté destinado a ello. Esto puede producir cortocircuitos en el producto y/o puede causar choques eléctricos, fuego o lesiones.
16. Salvo indicación contraria, los productos no están impermeabilizados (ver también el capítulo "Estados operativos y posiciones de funcionamiento", punto 1). Por eso es necesario tomar las medidas necesarias para evitar la entrada de líquidos. En caso contrario, existe peligro de choque eléctrico para el usuario o de daños en el producto, que también pueden redundar en peligro para las personas.
17. No utilice el producto en condiciones en las que pueda producirse o ya se hayan producido condensaciones sobre el producto o en el interior de éste, como p. ej. al desplazarlo de un lugar frío a otro caliente. La entrada de agua aumenta el riesgo de choque eléctrico.
18. Antes de la limpieza, desconecte por completo el producto de la alimentación de tensión (p. ej. red de alimentación o batería). Realice la limpieza de los aparatos con un paño suave, que no se deshilache. No utilice bajo ningún concepto productos de limpieza químicos como alcohol, acetona o diluyentes para lacas nitrocelulósicas.

Funcionamiento

1. El uso del producto requiere instrucciones especiales y una alta concentración durante el manejo. Debe asegurarse que las personas que manejen el producto estén a la altura de los requerimientos necesarios en cuanto a aptitudes físicas, psíquicas y emocionales, ya que de otra manera no se pueden excluir lesiones o daños de objetos. El empresario u operador es responsable de seleccionar el personal usuario apto para el manejo del producto.
2. Antes de desplazar o transportar el producto, lea y tenga en cuenta el capítulo "Transporte".
3. Como con todo producto de fabricación industrial no puede quedar excluida en general la posibilidad de que se produzcan alergias provocadas por algunos materiales empleados —los llamados alérgenos (p. ej. el níquel)—. Si durante el manejo de productos Rohde & Schwarz se producen reacciones alérgicas, como p. ej. irritaciones cutáneas, estornudos continuos, enrojecimiento de la conjuntiva o dificultades respiratorias, debe avisarse inmediatamente a un médico para investigar las causas y evitar cualquier molestia o daño a la salud.
4. Antes de la manipulación mecánica y/o térmica o el desmontaje del producto, debe tenerse en cuenta imprescindiblemente el capítulo "Eliminación/protección del medio ambiente", punto 1.
5. Ciertos productos, como p. ej. las instalaciones de radiocomunicación RF, pueden a causa de su función natural, emitir una radiación electromagnética aumentada. Deben tomarse todas las medidas necesarias para la protección de las mujeres embarazadas. También las personas con marcapasos pueden correr peligro a causa de la radiación electromagnética. El empresario/operador tiene la obligación de evaluar y señalizar las áreas de trabajo en las que exista un riesgo elevado de exposición a radiaciones.
6. Tenga en cuenta que en caso de incendio pueden desprenderse del producto sustancias tóxicas (gases, líquidos etc.) que pueden generar daños a la salud. Por eso, en caso de incendio deben usarse medidas adecuadas, como p. ej. máscaras antigás e indumentaria de protección.
7. Los productos con láser están provistos de indicaciones de advertencia normalizadas en función de la clase de láser del que se trate. Los rayos láser pueden provocar daños de tipo biológico a causa de las propiedades de su radiación y debido a su concentración extrema de potencia electromagnética. En caso de que un producto Rohde & Schwarz contenga un producto láser (p. ej. un lector de CD/DVD), no debe usarse ninguna otra configuración o función aparte de las descritas en la documentación del producto, a fin de evitar lesiones (p. ej. debidas a irradiación láser).
8. Clases de compatibilidad electromagnética (conforme a EN 55011 / CISPR 11; y en analogía con EN 55022 / CISPR 22, EN 55032 / CISPR 32)
 - Aparato de clase A:
Aparato adecuado para su uso en todos los entornos excepto en los residenciales y en aquellos conectados directamente a una red de distribución de baja tensión que suministra corriente a edificios residenciales.
Nota: Los aparatos de clase A están destinados al uso en entornos industriales. Estos aparatos pueden causar perturbaciones radioeléctricas en entornos residenciales debido a posibles perturbaciones guiadas o radiadas. En este caso, se le podrá solicitar al operador que tome las medidas adecuadas para eliminar estas perturbaciones.
 - Aparato de clase B:
Aparato adecuado para su uso en entornos residenciales, así como en aquellos conectados directamente a una red de distribución de baja tensión que suministra corriente a edificios residenciales.

Reparación y mantenimiento

1. El producto solamente debe ser abierto por personal especializado con autorización para ello. Antes de manipular el producto o abrirlo, es obligatorio desconectarlo de la tensión de alimentación, para evitar toda posibilidad de choque eléctrico.
2. El ajuste, el cambio de partes, el mantenimiento y la reparación deberán ser efectuadas solamente por electricistas autorizados por Rohde & Schwarz. Si se reponen partes con importancia para los aspectos de seguridad (p. ej. el enchufe, los transformadores o los fusibles), solamente podrán ser sustituidos por partes originales. Después de cada cambio de partes relevantes para la seguridad deberá realizarse un control de seguridad (control a primera vista, control del conductor de protección, medición de resistencia de aislamiento, medición de la corriente de fuga, control de funcionamiento). Con esto queda garantizada la seguridad del producto.

Baterías y acumuladores o celdas

Si no se siguen (o se siguen de modo insuficiente) las indicaciones en cuanto a las baterías y acumuladores o celdas, pueden producirse explosiones, incendios y/o lesiones graves con posible consecuencia de muerte. El manejo de baterías y acumuladores con electrolitos alcalinos (p. ej. celdas de litio) debe seguir el estándar EN 62133.

1. No deben desmontarse, abrirse ni triturarse las celdas.
2. Las celdas o baterías no deben someterse a calor ni fuego. Debe evitarse el almacenamiento a la luz directa del sol. Las celdas y baterías deben mantenerse limpias y secas. Limpiar las conexiones sucias con un paño seco y limpio.
3. Las celdas o baterías no deben cortocircuitarse. Es peligroso almacenar las celdas o baterías en estuches o cajones en cuyo interior puedan cortocircuitarse por contacto recíproco o por contacto con otros materiales conductores. No deben extraerse las celdas o baterías de sus embalajes originales hasta el momento en que vayan a utilizarse.
4. Las celdas o baterías no deben someterse a impactos mecánicos fuertes indebidos.
5. En caso de falta de estanqueidad de una celda, el líquido vertido no debe entrar en contacto con la piel ni los ojos. Si se produce contacto, lavar con agua abundante la zona afectada y avisar a un médico.
6. En caso de cambio o recarga inadecuados, las celdas o baterías que contienen electrolitos alcalinos (p. ej. las celdas de litio) pueden explotar. Para garantizar la seguridad del producto, las celdas o baterías solo deben ser sustituidas por el tipo Rohde & Schwarz correspondiente (ver lista de recambios).
7. Las baterías y celdas deben reciclarse y no deben tirarse a la basura doméstica. Las baterías o acumuladores que contienen plomo, mercurio o cadmio deben tratarse como residuos especiales. Respete en esta relación las normas nacionales de eliminación y reciclaje.

Transporte

1. El producto puede tener un peso elevado. Por eso es necesario desplazarlo o transportarlo con precaución y, si es necesario, usando un sistema de elevación adecuado (p. ej. una carretilla elevadora), a fin de evitar lesiones en la espalda u otros daños personales.

Instrucciones de seguridad elementales

2. Las asas instaladas en los productos sirven solamente de ayuda para el transporte del producto por personas. Por eso no está permitido utilizar las asas para la sujeción en o sobre medios de transporte como p. ej. grúas, carretillas elevadoras de horquilla, carros etc. Es responsabilidad suya fijar los productos de manera segura a los medios de transporte o elevación. Para evitar daños personales o daños en el producto, siga las instrucciones de seguridad del fabricante del medio de transporte o elevación utilizado.
3. Si se utiliza el producto dentro de un vehículo, recae de manera exclusiva en el conductor la responsabilidad de conducir el vehículo de manera segura y adecuada. El fabricante no asumirá ninguna responsabilidad por accidentes o colisiones. No utilice nunca el producto dentro de un vehículo en movimiento si esto pudiera distraer al conductor. Asegure el producto dentro del vehículo debidamente para evitar, en caso de un accidente, lesiones u otra clase de daños.

Eliminación/protección del medio ambiente

1. Los dispositivos marcados contienen una batería o un acumulador que no se debe desechar con los residuos domésticos sin clasificar, sino que debe ser recogido por separado. La eliminación se debe efectuar exclusivamente a través de un punto de recogida apropiado o del servicio de atención al cliente de Rohde & Schwarz.
2. Los dispositivos eléctricos usados no se deben desechar con los residuos domésticos sin clasificar, sino que deben ser recogidos por separado.
Rohde & Schwarz GmbH & Co.KG ha elaborado un concepto de eliminación de residuos y asume plenamente los deberes de recogida y eliminación para los fabricantes dentro de la UE. Para desechar el producto de manera respetuosa con el medio ambiente, dirijase a su servicio de atención al cliente de Rohde & Schwarz.
3. Si se trabaja de manera mecánica y/o térmica cualquier producto o componente más allá del funcionamiento previsto, pueden liberarse sustancias peligrosas (polveros con contenido de metales pesados como p. ej. plomo, berilio o níquel). Por eso el producto solo debe ser desmontado por personal especializado con formación adecuada. Un desmontaje inadecuado puede ocasionar daños para la salud. Se deben tener en cuenta las directivas nacionales referentes a la eliminación de residuos.
4. En caso de que durante el trato del producto se formen sustancias peligrosas o combustibles que deban tratarse como residuos especiales (p. ej. refrigerantes o aceites de motor con intervalos de cambio definidos), deben tenerse en cuenta las indicaciones de seguridad del fabricante de dichas sustancias y las normas regionales de eliminación de residuos. Tenga en cuenta también en caso necesario las indicaciones de seguridad especiales contenidas en la documentación del producto. La eliminación incorrecta de sustancias peligrosas o combustibles puede causar daños a la salud o daños al medio ambiente.

Se puede encontrar más información sobre la protección del medio ambiente en la página web de Rohde & Schwarz.

Quality management and environmental management

Certified Quality System
ISO 9001

Certified Environmental System
ISO 14001

Sehr geehrter Kunde,

Sie haben sich für den Kauf eines Rohde&Schwarz Produktes entschieden. Sie erhalten damit ein nach modernsten Fertigungsmethoden hergestelltes Produkt. Es wurde nach den Regeln unserer Qualitäts- und Umweltmanagementsysteme entwickelt, gefertigt und geprüft. Rohde&Schwarz ist unter anderem nach den Managementsystemen ISO9001 und ISO 14001 zertifiziert.

Der Umwelt verpflichtet

- Energie-effiziente, RoHS-konforme Produkte
- Kontinuierliche Weiterentwicklung nachhaltiger Umweltkonzepte
- ISO 14001-zertifiziertes Umweltmanagementsystem

Dear customer,

You have decided to buy a Rohde&Schwarz product. This product has been manufactured using the most advanced methods. It was developed, manufactured and tested in compliance with our quality management and environmental management systems. Rohde&Schwarz has been certified, for example, according to the ISO9001 and ISO 14001 management systems.

Environmental commitment

- Energy-efficient products
- Continuous improvement in environmental sustainability
- ISO 14001-certified environmental management system

Cher client,

Vous avez choisi d'acheter un produit Rohde&Schwarz. Vous disposez donc d'un produit fabriqué d'après les méthodes les plus avancées. Le développement, la fabrication et les tests de ce produit ont été effectués selon nos systèmes de management de qualité et de management environnemental. La société Rohde&Schwarz a été homologuée, entre autres, conformément aux systèmes de management ISO 9001 et ISO 14001.

Engagement écologique

- Produits à efficience énergétique
- Amélioration continue de la durabilité environnementale
- Système de management environnemental certifié selon ISO 14001

Customer Support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz equipment, contact one of our Customer Support Centers. A team of highly qualified engineers provides telephone support and will work with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz equipment.

Up-to-date information and upgrades

To keep your instrument up-to-date and to be informed about new application notes related to your instrument, please send an e-mail to the Customer Support Center stating your instrument and your wish. We will take care that you will get the right information.

Europe, Africa, Middle East

Phone +49 89 4129 12345
customersupport@rohde-schwarz.com

North America

Phone 1-888-TEST-RSA (1-888-837-8772)
customer.support@rsa.rohde-schwarz.com

Latin America

Phone +1-410-910-7988
customersupport.la@rohde-schwarz.com

Asia/Pacific

Phone +65 65 13 04 88
customersupport.asia@rohde-schwarz.com

China

Phone +86-800-810-8228 /
+86-400-650-5896
customersupport.china@rohde-schwarz.com



1 Preface

This Operating Manual describes the functionality of the R&S ZVA/ZVB/ZVT vector network analyzers and provides examples and reference information for manual and remote control. The Operating Manual complements the Getting Started guide; the complete information is contained in the analyzer's help system.

For the following chapters please refer to the Getting Started guides for models R&S ZVA, R&S ZVB, and R&S ZVT:

- Chapter 1: Preparing the Analyzer for Use
- Chapter 2: Getting Started

This Operating Manual contains the following chapters:

- Chapter 1: Preface
- Chapter 2: Glossary: Frequently Used Terms
- Chapter 3: System Overview
- Chapter 4: Measurement Examples
- Chapter 5: GUI Reference
- Chapter 6: Remote Control
- Chapter 7: Command Reference
- Chapter 8: Programming Examples
- Chapter 9: Annexes (Maintenance, Hardware Interfaces)

1.1 New Features in this Revision

This manual describes version V3.50 and higher of the R&S ZVA/ZVB/ZVT firmware. Compared to previous versions, the new firmware provides numerous extensions and improvements. The history of the firmware depends on your analyzer type, it is documented at the beginning of the help system, section *Welcome – What's New?*.



To check your vector network analyzer firmware version, click *Help – About NWA...*

1.2 R&S ZVA/ZVB/ZVT Documentation Map

The R&S ZVA/ZVB/ZVT documentation is delivered as a help system, a printed Getting Started guide and on CD-ROM.

1.2.1 Help System

The help system is embedded in the instrument, offering quick, context-sensitive reference to the information needed for operation and programming.

You can use the help also if you control the instrument from an external monitor. Furthermore you can transfer the help to your PC and use it as a standalone help.

1.2.2 Getting Started Guide

The Getting Started guide describes everything that is needed to put the instrument into operation and helps you to get familiar with the R&S ZVA/ZVB/ZVT. It gives an introduction to the instrument's functionality and provides procedures for typical measurement tasks. The Getting Started guide is delivered with each R&S ZVA/ZVB/ZVT.

1.2.3 Documentation CD-ROM

The CD-ROM provides the complete user documentation for the R&S ZVA/ZVB/ZVT:

- the help system
- the Getting Started guides in printable form
- this Operating Manual in printable form
- additional manuals for accessories, e.g. calibration kits, frequency converters, extension units
- brochures and data sheets in printable form
- the service manual in printable form
- links to different useful sites in the R&S internet

Glossary: Frequently Used Terms

A

Active channel: Channel belonging to the active trace. The active channel is highlighted in the channel list below the diagram. The active channel is not relevant in remote control where each channel can contain an active trace.

Active marker: Marker that can be changed using the settings of the Marker menu (Delta Mode, Ref. Mkr -> Mkr, Mkr Format). The active marker is also used for the Marker Functions. It appears in the diagram with an enlarged marker symbol and font size and with a dot placed in front of the marker line in the info field.

Active menu: The menu containing the last executed command. If the softkey bar is displayed (Display - Config./View - Softkey Labels on), then the active menu is indicated on top of the softkey bar.

Active trace (manual control): Trace that is selected to apply the settings in the Trace menu. The active trace is highlighted in the trace list of the active diagram area. It can be different from the active trace in remote control.

Active trace (remote control): One trace of each channel that has been selected as the active trace (`CALCulate<Ch>:PARAmeter:SElect <trace name>`). Many commands (e.g. `TRACE . . .`) act on the active trace. It can be different from the active trace in manual control.

C

Cal pool: The cal pool is a collection of correction data sets (cal groups) that the analyzer stores in a common directory. Cal groups in the pool can be applied to different channels and setups.

Calibration: The process of removing systematic errors from the measurement (system error correction). See also TOSM, TOM, TRM, TRL, TNA...

Calibration kit: Set of physical calibration standards for a particular connector family.

Calibration standard: Physical device that has a known or predictable magnitude and phase response within a given frequency range. Calibration standards are grouped into several types (open, through, match,...) corresponding to the different input quantities for the analyzer's error models.

Calibration unit: Integrated solution for automatic calibration of 1 to 4 ports (accessory R&S ZV-Zxx). The unit contains calibration standards that are electronically switched when a calibration is performed.

Channel: A channel contains hardware-related settings to specify how the network analyzer collects data. Each channel is stored in an independent data set. The channel

settings complement the definitions of the Trace menu; they apply to all traces assigned to the channel.

Compression point: The x-dB compression point of an S-parameter or ratio is the stimulus signal level where the magnitude of the measured quantity has dropped by x dB compared to its value at small stimulus signal levels (small-signal value).

Confirmation dialog box: Standard dialog box that pops up to display an error message or a warning. The current action can be either continued (OK) or cancelled (Cancel) on closing the dialog box.

Crosstalk: The occurrence of a signal at the receive port of the analyzer which did not travel through the test setup and the DUT but leaks through other internal paths. Crosstalk causes an isolation error in the measurement which can be corrected by means of a calibration.

CW frequency: Continuous Wave frequency; fixed stimulus frequency used in Power, CW Time and CW Mode sweeps.

D

Data trace: Trace filled with measurement data and updated after each sweep (dynamic trace).

Diagram area: Rectangular portion of the screen used to display traces. Diagram areas are arranged in windows; they are independent of trace and channel settings.

Directivity error: Measurement error caused by a coupler or bridge in the analyzer's source port causing part of the generated signal to leak through the forward path into the receive path instead of being transmitted towards the DUT. The directivity error can be corrected by means of a full one port calibration or one of the two-port calibration methods (except normalization).

Discrete marker: The stimulus value of a discrete marker always coincides with a sweep point so that the marker does not show interpolated measurement values.

E

Excursion: Difference between the response values at a local maximum (minimum) of the trace and at the two closest local minima (maxima) to the left and to the right.

F

Forward: A measurement on a two-port DUT is said to be in forward direction if the source signal (stimulus) is applied to port 1 of the DUT.

H

Harmonic: Integer multiple of the fundamental frequency. The fundamental is the first harmonic, the nth harmonic is n times the frequency of the fundamental.

Harmonic distortion: The production of harmonic frequencies (harmonics) by an electronic system when a signal is applied at the input.

Harmonic grid: A set of equidistant frequency points f_i ($i = 1 \dots n$) with spacing $\Delta(f)$ and the additional condition that $f_1 = \Delta(f)$. A harmonic grid is required for low pass time domain transforms.

I

Intercept point: Fictitious lower-tone DUT input/output level where the intermodulation suppression ($\rightarrow$) for a given intermodulation product reaches 0 dB

Intermodulation measurement: Measurement where the DUT is supplied with two RF signals of equal power but different frequencies termed the upper and lower tone. The analyzer measures the frequency-converting behavior of the DUT ($\rightarrow$ intermodulation product).

Intermodulation product: Special type of emissions of a nonlinear DUT that is supplied with a two-tone RF signal ($\rightarrow$ intermodulation measurement). The intermodulation products occur at frequencies which correspond to sums and differences of the upper and lower tone frequencies and their integer multiples.

Intermodulation suppression: The ratio of the power of an $\rightarrow$ intermodulation product to the power of the lower tone fundamental wave.

Isolation error: Measurement error caused by a crosstalk between the source and receive port of the analyzer.

L

Limit check: Comparison of the measurement results with the limit lines and display of a pass/fail indication. An acoustic warning can be generated in addition if a limit is exceeded.

Limit line: A limit line is a set of data to specify the allowed range for some or all points of a trace. Typically, limit lines are used to check whether a DUT conforms to the rated specifications (conformance testing).

Load match error: Measurement error caused by a mismatch of the analyzer's receive (load) port causing part of the signal transmitted through the DUT to be reflected off the receive port so that it is not measured there. The load match error can be corrected by means of a two-port calibration (except normalization).

M

Marker: Tool for selecting points on the trace and for numerical readout of measured data. A marker is displayed with a symbol (a triangle, a crossbar or a line) on the trace; its coordinates are shown in the marker info field.

Mathematical trace: Trace that is calculated according to a mathematical expression, e.g. the one defined in the Define Math dialog. The expression is a mathematical relation between constants and the data or memory traces of the active setup.

Measurement point: Result of the measurement at a specified stimulus value (frequency/power/time).

Measurement result: Set of all measurement points acquired in a measurement (e.g. a sweep). The measurement result is displayed in a diagram area and forms a trace.

Memory trace: Trace that is associated to a data trace and stored in the memory. Data traces and the associated memory traces share the same channel and scale settings. Alternatively, memory traces can be imported from a file.

Mixer: Device that converts an RF signal at one frequency into a signal at another frequency. The frequency that is to be shifted is applied at the RF input and the frequency shifting signal (from a local oscillator, LO) is applied to the RF mixer's LO port, resulting in an output signal at the mixer's Intermediate Frequency (IF) port.

N

NWA: (Vector) Network Analyzer, in particular the R&S ZVA/ZVB/ZVT.

P

Partial measurement: Measurement at a specified stimulus value maintaining definite hardware settings. Depending on the measurement type, several partial measurements may be needed to obtain a measurement point. A full n-port S-parameter measurement requires n partial measurements with n different drive ports.

Peak: Local maximum or local minimum (dip) on the trace. In the Trace - Search menu, it is possible to define a minimum excursion that both types of peaks must have to be considered valid.

Power calibration: Correction method that eliminates frequency response errors in the signal path and in the receiver and ensures accurate power levels and readings; see source power calibration and receiver power calibration.

R

Receiver power calibration: Correction method that the power readings at a specified input port of the analyzer agree with the source power level calibrated at an arbitrary reference plane. Typically, the reference plane is at the input of the receiver so that the calibration eliminates frequency response errors in the calibrated receiver.

Reflection tracking error: Frequency-dependent variation of the ratio of the reflected wave to the reference wave at a test port when an ideal reflection coefficient ($= 1$) is measured. The reflection tracking error can be corrected by means of a reflection normalization or one of the more sophisticated calibration methods.

Reverse: A measurement on a two-port DUT is said to be in reverse direction if the source signal (stimulus) is applied to port 2 of the DUT.

S

Setup: A setup comprises a set of diagram areas with all displayed information that can be stored to a NWA setup file (* .zvx). Each setup is displayed in an independent window.

Source match error: Measurement error caused by a mismatch of the analyzer's source port causing part of the signal reflected off the DUT to be reflected again off the source port so that it is not measured there. The source match error can be corrected by means of a full one-port calibration or a two-port calibration (except normalization).

Source power calibration: Correction method that ensures accurate power levels of the generated wave at an arbitrary reference plane in the measurement path. The source power calibration eliminates frequency response errors in the signal path between the source and the reference plane.

Stimulus value: Value of the sweep variable (frequency/power/time/point number) where a measurement is taken. Also termed sweep point.

Sweep: Series of consecutive measurements taken at a specified sequence of stimulus values = series of consecutive measurement points.

Sweep point: Value of the sweep variable (stimulus value: frequency/power/time) where a measurement is taken.

Sweep range: Continuous range of the sweep variable (frequency/power/time) containing the sweep points where the analyzer takes measurements. In a Segmented Frequency sweep the sweep range can be composed of several parameter ranges or single points.

Sweep segment: Continuous frequency range or single frequency point where the analyzer measures at specified instrument settings (generator power, IF bandwidth etc.). In the Segmented Frequency sweep type the entire sweep range can be composed of several sweep segments.

T

TNA: A calibration type using a Through, a symmetric Network and an Attenuation standard. The properties of the Network and the Attenuation don't have to be known exactly. Like TRL and TRM, TNA is especially useful for DUTs in planar line technology.

TOM: A calibration type using three fully known standards (Through, Open, Match), recommended for 2-port measurements on coaxial systems.

Topology: Assignment of the physical ports of the NWA to the logical ports used for the measurement of mixed mode S-parameters (balance-unbalance conversion).

TOSM: A calibration type using a Through plus the one-port standards Open, Short, Match, to be connected to each calibrated port. Classical 12-term error model, also referred to as SOLT. See also UOSM.

TRL: A calibration type using the two-port standards Through and Line, which are both assumed to be ideally matched. Beyond that, the through must be lossless, and its length must be exactly known. Especially useful for DUTs in planar line technology.

TRM: A calibration type which requires a low-reflection, low-loss Through standard with an electrical length that may be different from zero, a Reflect, and a Match. Especially useful for DUTs in test fixtures.

TSM: A calibration type using three fully known standards (Through, Short, Match), recommended for 2-port measurements on coaxial systems.

U

UOSM: A variant of TOSM calibration using an unknown but reciprocal Through standard. Especially for port combinations with different connector types.

Contents

1 Preface	3
New Features in this Revision	3
R&S ZVA/ZVB/ZVT Documentation Map	3
2 Glossary: Frequently Used Terms.....	5
3 System Overview	19
Basic Concepts.....	19
Global Resources	19
Setups	20
Traces, Channels, and Diagram Areas	20
Data Flow	21
Screen Elements.....	23
Navigation Tools of the Screen	23
Display Elements in the Diagram Area	27
Dialogs	34
Display Formats and Diagram Types.....	36
Measured Quantities	43
S-Parameters	43
Impedance Parameters.....	45
Admittance Parameters.....	46
Wave Quantities and Ratios.....	48
Mixed Mode Parameters	49
Unbalance-Balance Conversion.....	51
Calibration Overview.....	52
Calibration Standards and Calibration Kits	53
Calibration Types	54
Automatic Calibration	59
Power Calibration	61
Offset Parameters	61
Optional R&S ZVA Extensions	62
Time Domain (R&S ZVAB-K2)	63
Arbitrary Generator and Receiver Frequencies (R&S ZVA-K4).....	63
Scalar Mixer and Harmonics (R&S ZVA-K4)	63

Vector Mixer Measurement (R&S ZVA-K5)	64
True Differential Mode (R&S ZVA-K6)	64
Measurements on Pulsed Signals (R&S ZVA-K7)	64
Converter Control (R&S ZVA-K8)	65
Mixer Delay Measurements (R&S ZVA-K9 / -K10)	65
Pulse Generator (R&S ZVA-K27).....	65
Noise Figure Measurement (R&S ZVAB-K30).....	65
Frequency Converting Noise Figure Measurement (R&S ZVA-K31).....	66
4 Measurement Examples	67
Simple Measurement Tasks	67
Screen Control	67
Display Configuration	67
Data Transfer	68
Setting up a Sweep	69
Optimization	71
Optimizing the Measurement Speed.....	71
Calibration	72
Calibrating a Measurement Channel	72
Waveguide Calibration using Kit R&S ZV-WR10.....	77
Waveguide Calibration using Kit R&S ZV-WR03.....	79
Trace Evaluation	81
Operations on Traces.....	81
Trace Statistics.....	83
Time Domain Measurements	83
Port Conversion	84
Defining a Balanced Ports Configuration	84
Using Virtual Networks (Embedding/Deembedding).....	85
Using True Differential Mode	88
Harmonics Measurements	91
To measure a harmonic of arbitrary order n... ..	91
To obtain a harmonic distortion factor.....	92
Noise Figure Measurement.....	92
5 GUI Reference	95
Control Menus	95

Restore	95
Move	96
Size	96
Minimize	96
Maximize	96
Close	96
Next	96
File Menu	96
New	97
Close	98
Print	98
Print Preview	99
Page Setup.....	99
Print to Clipboard	101
Print to File	101
Save	103
Open / Recall.....	103
Recent File	104
Exit	104
Trace Menu.....	105
Measure	106
Format	139
Scale	148
Trace Select	151
Trace Funct	157
Marker	199
Search	207
Marker Funct	221
Lines	223
Channel Menu	238
Stimulus.....	239
Power Bandwidth Average.....	241
Sweep	252
Mode	285
Channel Select	422
Channel - Calibration	425

Calibration State Labels	492
Channel - Offset	494
Display Menu	503
Display - Area Select.....	503
Display Config	512
System Menu	516
System Configuration	517
System Config	536
S-Parameter Wizard.....	564
Int. Reference.....	566
Ext. Reference.....	566
GPIB Address.....	567
Service Function... ..	567
Preset.....	567
Undo.....	568
Redo.....	568
External Tools	568
Info Menu.....	568
Window Menu	569
New	569
Close	570
Cascade	570
Tile.....	570
Maximize	570
1 Set<n>.zvx	570
Help Menu	571
Help Topics	571
About Nwa.....	571
6 Remote Control	572
Remote Control: Introduction	572
Starting a Remote Control Session.....	572
GPIB Explorer	573
Switchover to Remote Control	574
Setting the Device Address.....	576
Return to Manual Operation.....	576

Combining Manual and Remote Control	577
Messages	578
Device Messages (Commands and Device Responses)	578
SCPI Command Structure and Syntax	579
SCPI Parameters	582
Basic Remote Control Concepts	584
Traces, Channels, and Diagram Areas	585
Active Traces in Remote Control	585
Initiating Measurements, Speed Considerations	587
Addressing Traces and Channels	587
Command Processing.....	588
Input Unit	589
Command Recognition.....	589
Data Base and Instrument Hardware	590
Status Reporting System	590
Output Unit	590
Command Sequence and Command Synchronization	590
Status Reporting System.....	592
Overview of Status Registers	592
Structure of a SCPI Status Register	593
Contents of the Status Registers	595
Application of the Status Reporting System.....	600
Reset Values of the Status Reporting System.....	603
7 Command Reference	604
Special Terms and Notation	604
Common Commands	605
SCPI Command Reference	607
ABORt...	607
CALCulate	607
CONFigure	718
CONFigure...	718
CONTRol	722
CONTRol...	722
DIAGnostic	727
DISPlay...	732

FORMat.....	749
HCOPy.....	751
INITiate<Ch>.....	757
INPut.....	758
INSTrument.....	759
MEMory.....	760
MMEMory.....	761
OUTPut.....	796
PROGram.....	801
ROUTe<Ch>.....	805
[SENSe...].	807
SOURce	967
STATus.....	1037
SYSTem.....	1044
TRACe.....	1065
TRIGger<Ch>.....	1070
8 Programming Examples.....	1075
Basic Tasks.....	1075
Typical Stages of a Remote Control Program	1075
Handling of Channels, Traces and Diagram Areas.....	1078
Condensed Programming Examples.....	1090
Assigning Channels, Traces, and Diagram Areas	1090
Exporting S-Parameters.....	1092
Path Independent RC Programs.....	1092
Noise Figure Measurement.....	1093
Memory Traces	1094
Using Markers	1096
Trace Mathematics.....	1099
Trace Statistics.....	1101
Bandfilter Search.....	1102
Single Sweep Mode	1103
Modeling a Max Hold Function.....	1104
Retrieving the Results of Previous Sweeps	1105
One and Two-Port Calibration.....	1106
Create Calibration Kit	1108
Perform Power Calibration	1110

Saving and Recalling Error Terms	1112
9 Annexes	1116
Increasing the Monitor Resolution	1116
Connecting and Activating the Monitor (Windows XP)	1116
Connecting and Activating the Monitor (Windows 7)	1117
Changing the Resolution (Windows XP)	1118
Changing the Resolution (Windows 7)	1119
Switching back to the Analyzer's Display	1121
Interfaces and Connectors	1122
Front Panel Connectors	1122
Rear Panel Connectors	1125
LAN Interface	1130
RSIB Interface Functions	1132
IEC/IEEE Bus Interface	1140
Universal Interface	1143
Universal Interface	1143
Control Signals	1144
Data Ports	1144
Universal Interface Connector	1146
Timing of Control Signals	1148
Configuration Files for External Devices	1149
General Rules for Configuration Files	1149
Naming Conventions for Automatic Detection	1150
Power Meter Parameters	1151
Generator Parameters	1153
Generator List Mode (Fast Sweep)	1158
Maintenance	1160
Storing and Packing	1160
Error Messages, Troubleshooting	1160
Configuration Errors	1161
Asynchronous Errors	1161
Errors during the Measurement	1162
Performance Problems	1163
Obtaining Technical Support	1163

3 System Overview


The following chapter provides an overview of the analyzer's capabilities and their use. This includes a description of the basic concepts that the analyzer uses to organize, process and display measurement data, of the screen contents, possible measured quantities, calibration methods and typical test setups.

For a systematic explanation of all menus, functions and parameters and background information refer to the reference description on the graphical user interface ([GUI Reference](#)) in your analyzer's help system.

Basic Concepts

The analyzer provides a variety of functions to perform a particular measurement and to customize and optimize the evaluation of results. To ensure that the instrument resources are easily accessible and that user-defined configurations can be conveniently implemented, stored and reused the instrument uses a hierarchy of structures:

- [Global resources](#) can be used for all measurements, irrespective of the current measurement session or setup.
- A [setup](#) comprises a set of *diagram areas* with all displayed information that can be stored to a setup file.
- The *diagram areas* show *traces* which are assigned to *channels*. See section [Traces, Channels and Diagram Areas](#).

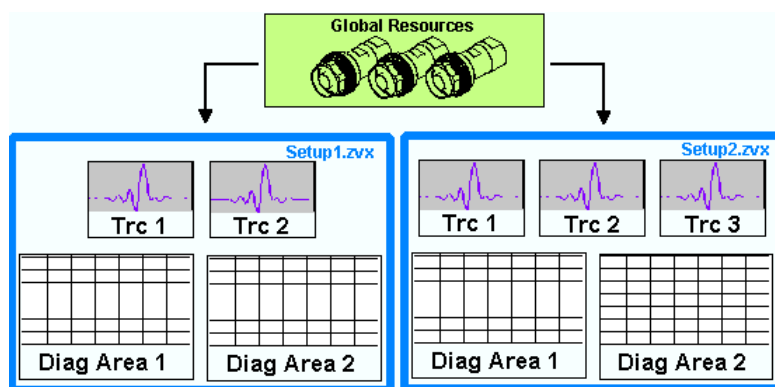

Global Resources

The analyzer provides global settings that are mostly hardware-related and can be used for all measurements, irrespective of the current measurement session or setup. The settings are stored in independent files and do not enter into any of the setup files. Among others, the following settings correspond to global resources:

- [Calibration kits](#)
- [Connector types](#)
- [Cal pool data including system error correction and power correction data](#)
- [Color schemes](#)

The data related to global resources are not affected by a *Preset* of the analyzer. However, it is possible to

delete or reset global resource data using the *Resets* tab in the *System Config* dialog.

Setups

A setup comprises a set of *diagram areas* with all displayed information that can be stored to a NWA setup file (*.zvx) and reused. Each setup is displayed in an independent window. The setup file contains the following information:

- General settings related to the setup
- The *trace settings* for all traces in the diagram areas
- The *channel settings* for all channels associated to the traces
- The *display settings* for each diagram area

The *File* menu is used to organize setups.




In the *System* – *External Tools* submenu, you can find demo setups *.vbs for various measurement scenarios. You can modify the demo setups and store them to a *.zvx file for later use. Moreover the *S-Parameter Wizard* provides predefined, optimized setups for many measurements.

Traces, Channels, and Diagram Areas

The analyzer arranges, displays or stores the measured data in *traces* which are assigned to *channels* and displayed in *diagram areas*. To understand the menu structure of the instrument and quickly find the appropriate settings, it is important to understand the exact meaning of the three terms.

- A trace is a set of data points that can be displayed together in a diagram area. The *trace settings* specify the mathematical operations used in order to obtain traces from the measured or stored data and to display them.
- A channel contains *hardware-related settings* to specify how the network analyzer collects data.
- A *diagram area* is a rectangular portion of the screen used to display traces. Diagram areas belonging to the same setup are arranged in a common window. The settings for diagram areas are described in section *Display Elements* in this chapter.

A diagram area can contain a practically unlimited number of traces, assigned to different channels. Diagram areas and channels are completely independent from each other.

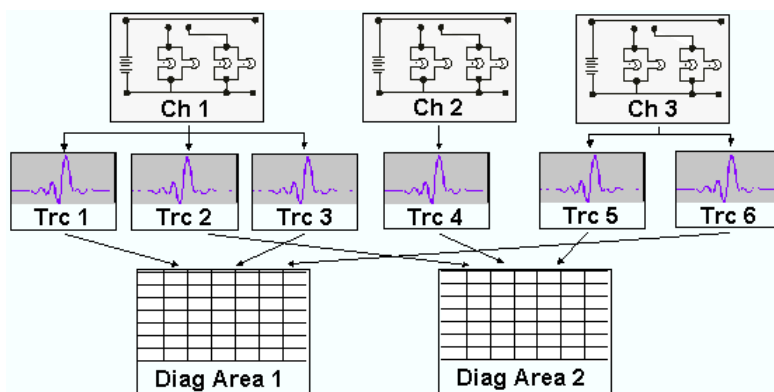

Trace Settings

The trace settings specify the mathematical operations used in order to obtain traces from the measured or stored data. They can be divided into several main groups:

- Selection of the measured quantity (S-parameters, wave quantities, ratios, impedances,...)
- Conversion into the appropriate display format and selection of the diagram type
- Scaling of the diagram and selection of the traces associated to the same channel
- Readout and search of particular values on the trace by means of markers
- Limit check

The **Trace** menu provides all trace settings. They complement the definitions of the **Channel** menu. Each trace is assigned to a channel. The channel settings apply to all traces assigned to the channel.



If a trace is selected in order to apply the trace settings, it becomes the active trace. In manual control there is always exactly one active trace, irrespective of the number of channels and traces defined. The active channel contains the active trace. In remote control, each channel contains an active trace; see section [Active Traces in Remote Control](#) in the help system.

Channel Settings


A channel contains hardware-related settings to specify how the network analyzer collects data. The channel settings can be divided into three main groups:

- Control of the measurement process (*Sweep, Trigger, Average*)
- Description of the test setup (*Power of the internal source, IF filter Bandwidth and Step Attenuators, Port Configuration*)
- Correction data (*Calibration, Offset*)


The **Channel** menu provides all channel settings.



After changing the channel settings or selecting another measured quantity, the analyzer needs some time to initialize the new sweep. This preparation period increases with the number of points and the number of partial measurements involved. It is visualized by a Preparing Sweep symbol in the [status bar](#):



All analyzer settings can still be changed during sweep initialization. If necessary, the analyzer terminates the current initialization and starts a new preparation period.


During the first sweep after a change of the channel settings, an additional red asterisk symbol appears in the status bar: 

Data Flow

The analyzer processes the raw measurement data in a sequence of stages in order to obtain the displayed trace. The following diagram gives an overview.

The diagram consists of an upper and a lower part, corresponding to the data processing stages for the entire **channel** and for the individual **traces**. All stages in the diagram are configurable. Note that the channel data flow for S-parameters (and quantities derived from S-parameters such as impedances, admittances, stability factors etc.) differs from the channel data flow for wave quantities (and derived quantities such as ratios, PAE etc.).

All stages are described in detail in the *GUI Reference* chapter.

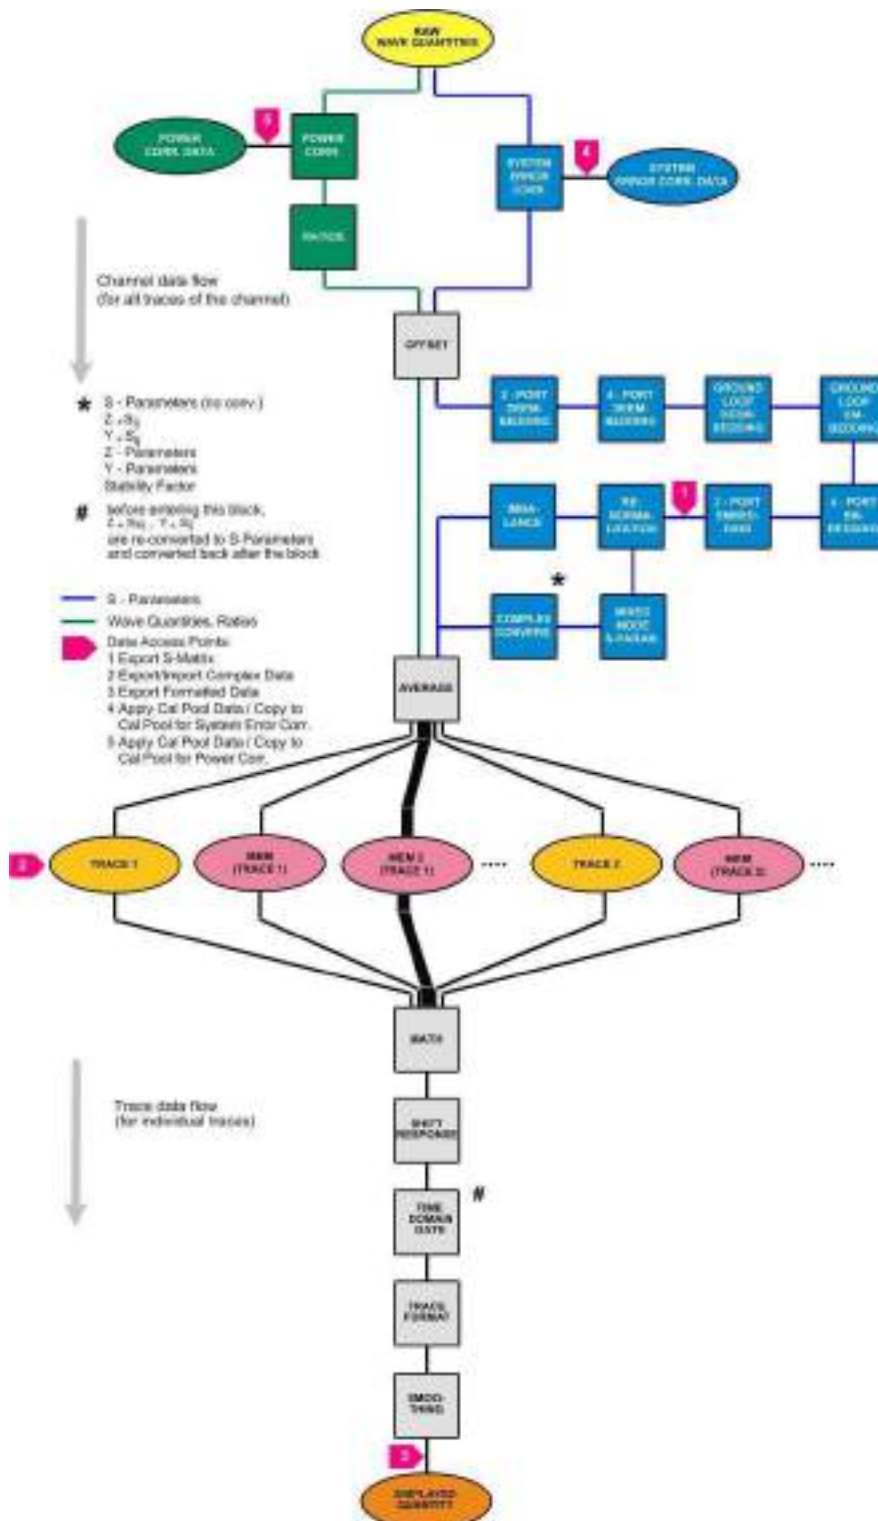


Screen Elements

This section describes the operating concept of the network analyzer, including the alternative navigation tools for mouse and hardkey operation, the trace settings, markers and diagram areas. For a description of the different quantities measured by the analyzer refer to the [Measured Quantities](#) section.

Navigation Tools of the Screen

The main window of the analyzer provides all control elements for the measurements and contains the diagram areas for the results. There are several alternative ways to access an instrument function:


- Using the menus and submenus of the [menu bar](#) (provides all settings)
- Using the softkeys of the [softkey bar](#) (alternative to the previous method)
- Using the [hardkey bar](#) (preselection of the most important menus)

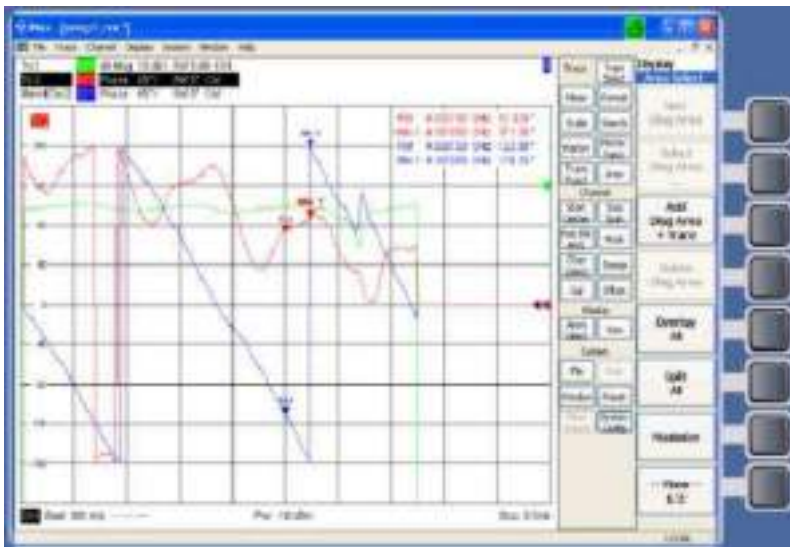

- Refer to section [Display Elements](#) to obtain information about the results in the diagram area.
- Refer to section [Display Menu](#) in the reference chapter and learn how to customize the screen.

Menu Bar

All analyzer functions are arranged in drop-down menus. The menu bar is located across the top of the diagram area:



Menus can be controlled in different ways:

- With a mouse, like the menus in any Windows application. A left mouse click expands a menu or submenu. If a menu command has no submenu assigned, a left mouse click opens a dialog or directly activates the menu command.
- Using the front panel keys.

- With a combination of the previous methods, using the **hardkey bar** (front panel key bar, activated via *Display – Config./View*).

The active menu is the menu containing the last executed command. If the **softkey bar** or **hardkey bar** is displayed (*Display – Config./View – Softkey Labels on*), then the active menu is indicated on top of the softkey/hardkey bar.



When you select a command in a new menu the softkey bar is updated to reflect the new active menu with all commands. You can continue operation using the softkeys.




Overview of menu functions

- The **Control**  menu provide standard Windows functions to control windows.
- The **File** menu provides standard Windows functions to create, save, recall or print setups, to copy the current screen and to shut down the application.
- The **Trace** menu provides all trace settings and the functions to create, select, modify and store different traces. In addition the menu provides the marker, search and limit check functions.
- The **Channel** menu provides all channel settings and the functions to create, select, modify and store different channels.
- The **Display** menu provides all display settings and the functions to create, select, modify and arrange different diagram areas.
- The **System** menu provides functions to reverse operations, return to a defined instrument state, retrieve information on the instrument and access service functions. Besides, it configures the remote control operation, starts the *Measurement Wizard* and provides print options.
- The **Window** menu provides standard Windows™ functions to arrange different windows on the screen.
- The **Info** menu provides information and selftest options for service purposes and troubleshooting.
- The **Help** menu provides assistance with the network analyzer and its operation.

Menu Structure

All menus show an analogous structure.

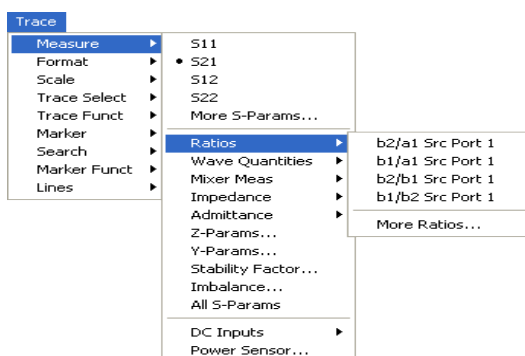

- A menu command with a right arrow ► expands a submenu with further related settings. **Example:** *Measure* ► expands a submenu to select the quantity to be measured and displayed.
- A menu command with three dots appended calls up a dialog providing several related settings.

Example: *More S-Parameters...* opens a dialog to select S-parameters for multiport measurements or mixed mode S-parameters.

- A menu command with no arrow or dots directly initiates an action. **Example:** *S21* selects the forward transmission coefficient S_{21} as measured quantity.
- A dot preceding the menu command indicates the current selection in a list of alternative settings. **Example:** In the figure above, S_{21} is selected as measured quantity.

Softkey Bar

The softkey bar displays the commands of the active menu so that they can be activated by hitting the associated keys on the front panel. It consists of three elements:



Heading


Trace
Measure

The heading shows the two lowest level menu commands in the current branch of the menu tree. The lowest-level command appears on a shaded background.



Function softkeys

...

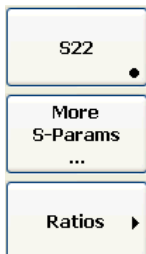


...

Up to 8 softkeys, each corresponding to a command of the active menu. The function of the softkeys and their labels are strictly equivalent to the corresponding [menu commands](#).

- A large dot in the lower right corner indicates the current selection in a list of alternative settings.
- Three dots indicate that the softkey calls up a [dialog](#) providing several related settings.
- A right arrow ► indicates a submenu with further related settings.
- A softkey with no arrow or dots directly initiates an action.



Navigation softkey (optional)

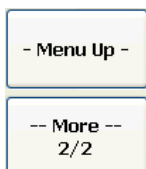

Softkey no. 8 or softkeys no. 7 and no. 8 are reserved for navigation:

- *More 1/2* and *More 2/2* toggle between two groups of softkeys which belong to the same menu. The softkeys are provided whenever the active menu contains more than 7 commands.
- *Menu Up* activates the higher-level menu and is provided in all menus except the top-level one listing the main menus in the [menu bar](#).

The softkey bar is automatically updated when the active menu is changed.




You can hide the softkey bar and gain screen space for the diagram areas if you use a mouse to control the analyzer (see *Display – Config./View*). All settings are accessible from the menus listed in the menu bar across the top of the screen. Moreover, you don't have to display the softkey bar permanently in order to make use of its functionality. Hitting any of the keys associated to the softkey bar will make it

visible for a period of time sufficient to select the next instrument function.

Hardkey Bar

The hardkey bar (front panel key bar, *Display – Config./View*) represents the most commonly used front panel keys of the analyzer. Clicking a key symbol executes the action of the corresponding key.

The hardkey bar corresponds to the TRACE, CHANNEL, DISPLAY and SYSTEM keypads:

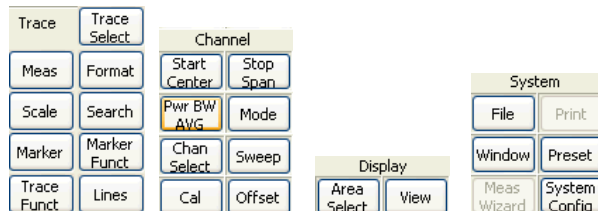

The hardkey bar provides access to the basic groups of settings with a single mouse click. It is particularly useful if the analyzer is controlled from an external monitor or *Remote Desktop*. Alternatively the settings are accessible from the menus of the [menu bar](#) or from the [softkey bar](#).

The hardkey bar is hidden by default to gain screen space for the diagram areas.

Status Bar

The status bar (*Display – Config./View*) shows

- the complete information in the [trace line](#) of the active trace,
- the statistics for the [sweep average](#) (if sweep average is on),
- an *Ext Ref* section if the analyzer is configured to use an [External Reference](#) clock
- the progress of the sweep,
- the [LXI](#) status (if LXI is enabled),
- the error log opener icon (if the error log is non-empty)
- and the control mode of the analyzer (*LOCAL* or *REMOTE*).

If LXI is enabled, a green LXI status symbol indicates that a LAN connection has been established; a red symbol indicates that no LAN cable is connected.



During [sweep initialization](#), the progress bar for the sweep is replaced by a [Preparing Sweep](#) symbol. During the first sweep after a change of the channel settings, an additional red asterisk symbol appears:



You can hide the status bar and gain screen space for the diagram areas.

Display Elements in the Diagram Area

The central part of the screen is occupied by one or several diagram areas.



Diagram Areas

A diagram area is a rectangular portion of the screen used to display traces. Diagram areas are arranged in windows; they are independent of [trace](#) and [channel](#) settings. A diagram area can contain a practically unlimited number of traces, assigned to different channels (overlay mode).

Diagram areas are controlled and configured by means of the functions in the [Display](#) menu and the following additional settings:


- The settings in the [Window](#) menu arrange several windows containing one or more diagram areas within the entire screen. Each window corresponds to a setup. Only one setup can be active at a time, and only the traces of the active setup are updated by the current measurements.
- Various settings to assign traces to diagram areas are provided in the [Trace – Traces](#) submenu.

Diagram areas may contain:

- Measurement results, in particular the [traces](#) and [marker values](#)
- An indication of the basic [channel](#) and [trace](#) settings
- [Context menus](#) providing settings related to the current screen



The examples in this section have been taken from Cartesian diagrams. All other [diagram types](#) provide the same display elements.

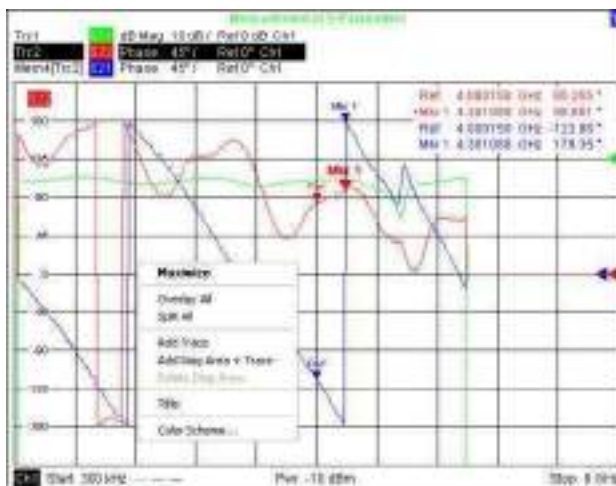

Title

Across the top of the diagram area, an optional title describes the contents of the area. Different areas within a setup are distinguished by area numbers in the upper right corner.

Measurement of S-Parameters


1



Use the [context menu](#) or the functions in the [Display](#) menu to display, hide or change the [title](#) and to add and customize diagram areas.

Traces

A trace is a set of data points displayed together in the diagram area. The individual data points are connected so that each trace forms a continuous line.

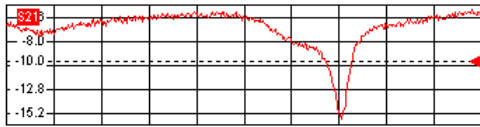

The trace can be complemented by the following display elements, plotted with the same color:

- *Reference value* (for all traces): The *Reference Value* is indicated with a triangle  at the right edge of the diagram and a dashed, horizontal line. The value and position of the triangle can be changed in order to modify the diagram scale and shift the trace vertically.
- *Measured quantity* (for the active trace): The *measured quantity* is indicated in the left upper corner of the diagram.

A trace can be either a data trace, a memory trace, or a mathematical trace; see *Trace Types* below.



Context menu of the diagram area

A right mouse click on any point of the diagram area (except the marker info field and the measured quantity info) opens a *context menu*:

Maximize
Overlay All
Split All
Add Trace
Add Diag Area + Trace
Delete Diag Area
Title
Color Scheme...

The settings correspond to the most common commands in the *Display – Area Select* and *Display – Config View* menus.

Trace Types

The analyzer uses traces to display the current measurement result in a diagram area but is also capable of storing traces to the memory, recalling stored traces, and defining mathematical relations between different traces. There are three basic trace types:

- *Data traces* show the current measurement data and are continuously updated as the measurement goes on. Data traces are dynamic traces.
- *Memory traces* are generated by storing the data trace to the memory. They represent the state of the data trace at the moment when it was stored. Memory traces are static traces which can be stored to a file and recalled.
- *Mathematical traces* are calculated according to a mathematical relation between constants and the data or memory traces of the active setup. A mathematical trace that is based on the active data trace is dynamic.

It is possible to generate an unlimited number of memory traces from a data trace and display them together. Markers and marker functions are available for all trace types.



The trace type of each trace in a diagram area is indicated in the [trace list](#). You can also make each trace *Invisible* without deleting it.

Trace List and Trace Settings

The main properties of all traces assigned to the diagram area are displayed in the trace list in the upper left corner.

Trc1	a1(P1s)	dB Mag	10 dB / Ref 0 dBm	Ch1
Trc2	S21	dB Mag	10 dB / Ref 0 dB	Ch2 Math
Mem3[Trc2]	S21	dB Mag	10 dB / Ref 0 dB	Ch2
Trc4	S11	dB Mag	10 dB / Ref 0 dB	Ch2 Invisible

Each line in the trace list describes a single trace. The active trace is highlighted. The lines are divided into several sections with the following information (from left to right):

- *Trace name* indicates the current trace name. The default names for new traces are Trc<n> where <n> is a current number. A Mem... preceding the trace name indicates a [memory trace](#).
-  Right-click the section and call the [Trace Manager](#) from the context menu to change the trace name.
- *Measured quantity* indicates the [measurement result](#), e.g. an S-parameter or a ratio. The measured quantity of the active trace is also displayed in the diagram area below the trace list. For wave quantities and ratios, the drive port appears in brackets behind the measurement result. Examples: b2/a1(P1s) denotes the ratio b2/a1 with the analyzer port no. 1 as a drive port; b2(G1s) denotes the wave quantity b2 with the external generator no. 1 as a drive port. In true differential mode, bd2(Pd1s) denotes the differential mode wave quantity b2 with the analyzer port no. 1 as a drive port, providing a differential mode stimulus signal.
- *Detector* : If an AVG, RMS, or Peak (Pk) detector is active, the detector setting appears behind the measured quantity. The AVG detector is available for S-parameters, ratios, and wave quantities. The other detectors are available for ratios and wave quantities. See section [Detector](#).
- *Format* shows how the measured data is presented in the graphical display ([trace format](#)).
- *Scale* shows the value of the vertical or radial diagram divisions (Scale Div.) and the Reference Value.
- *Channel* shows the channel that each trace is assigned to. The channel section is omitted if the all traces in the diagram area are assigned to the same channel.
- *Type* is Invisible if the trace is hidden. Otherwise it indicates
 - Math, if the trace is a [mathematical trace](#),
 - GAT, if a [time gate](#) is active for the trace and
 - ALC, if the drive port is under [automatic level control](#).



Right-click the trace name and click [Show Data](#) or [Show Mem](#) from the context menu to display and hide data and memory traces. Use the [Trace Funct\(ions\)](#) to define mathematical traces.




The trace list is compressed if the diagram space is limited. The complete trace line of the active trace is also displayed in the status bar below the diagram area. Right-click any of the sections in the trace list (except *Type*) to open a context menu and access the most common tasks related to the section.



Context menus of the trace list

A right mouse click on the trace name, the measured quantity, and the format and scale section of the trace list opens the following **context menus**, respectively:

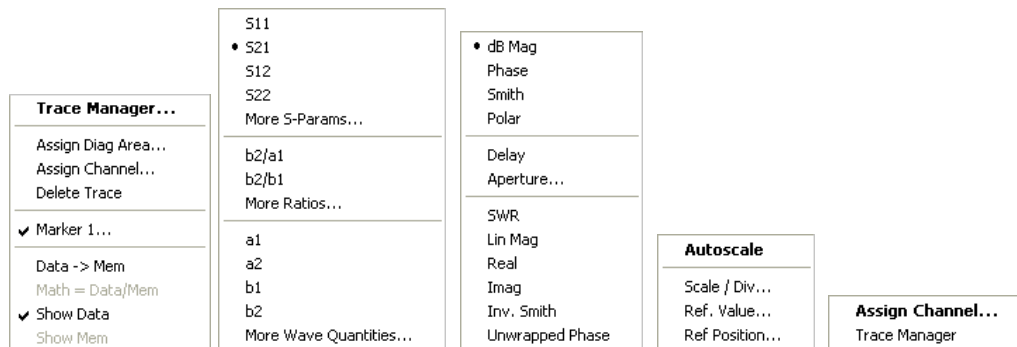


The settings correspond to the most common commands in the *Trace – Trace Select*, *Trace – Trace Funct*, *Trace – Meas*, *Trace – Format* and *Trace – Scale* menus.



A red label *Cal Off !* appears behind the trace list if the system error correction no longer applies to one or more traces; see [Calibration Overview](#).


Markers

Markers are tools for selecting points on the trace and for numerical readout of measured data. The analyzer provides three different basic marker types.

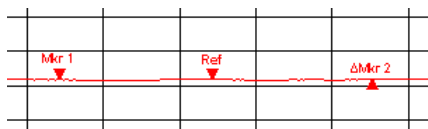

- A **(normal) marker** (*Mkr 1*, *Mkr 2*, ...) determines the coordinates of a measurement point on the trace. Up to 10 different normal markers can be assigned to a trace.
- A **reference marker** (*Ref*) defines the reference value for all delta markers.
- A **delta marker** (Δ) indicates the coordinates relative to the reference marker.
- The stimulus value of a **discrete marker** always coincides with a sweep point so that the marker does not show interpolated measurement values.

The markers 1 to 4 are also used for bandfilter search mode. The examples below show a **bandpass search** and a **bandstop search**, respectively.

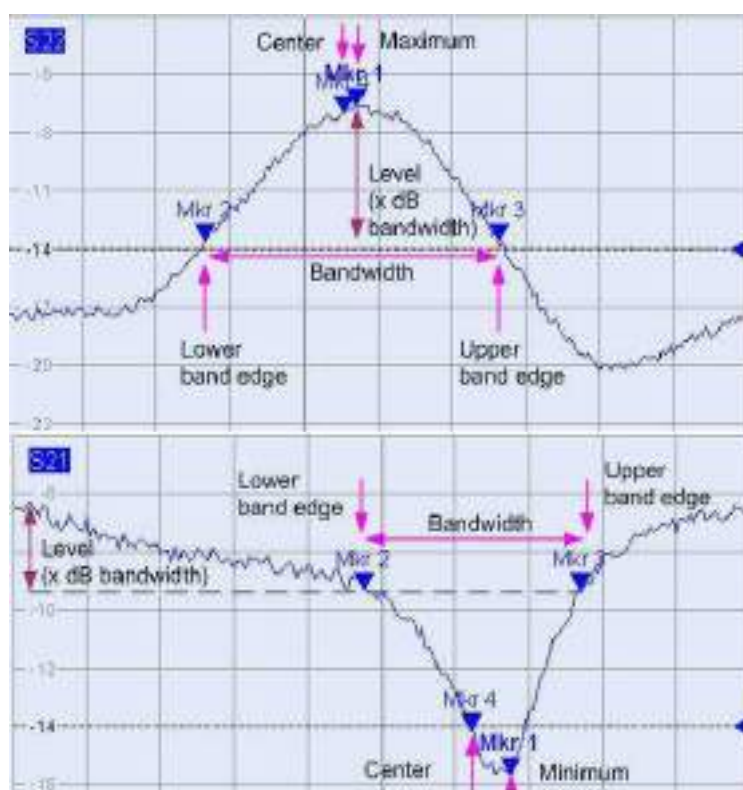

- Mkr 1 indicates the maximum (minimum) of the peak.
- Mkr 2 and Mkr 3 indicate the lower and upper band edge where the trace value has decreased (increased) by a definite *Level* value.
- Mkr 4 indicates the center of the peak, calculated as the arithmetic mean value of the *LBE* and *UBE* positions.



The [Paste Marker List](#) allows you to select marker values as numeric entries.

Marker Info Field

The coordinates of all markers defined in a diagram area are displayed in the info field, which by default is located in the upper right corner.

Ref	6.838279 GHz	-1.954 dB
Mkr 1	6.088307 GHz	-0.160 dB
ΔMkr 2	779.38254 MHz	0.521 dB
Mkr 1	Ref	ΔMkr 2

The list contains the following information:

- Mkr 1, Mkr 2, ... denote the marker numbers. Markers are displayed with the same color as the associated trace.
- The marker coordinates are expressed in one of the marker formats selected via [Marker Format](#). The formats of the markers assigned to a trace are independent of each other and of the [trace format](#) settings.

- The active marker has a dot placed in front of the marker line.
- A Δ sign placed in front of the marker line indicates that the marker is in *Delta Mode*.



Customizing the marker info field

To change the position, appearance or contents of the marker info field use one of the following methods:

- Double-click the info field to open the *Mkr Properties* dialog with extended settings for all markers of the active trace. Select the options in the *Show Info* panel to customize the information in the info field (*Active Trace Only*, *Stimulus Info Off*).
- Right-click the info field to open a context menu providing frequently used marker settings.
- To change the position of the marker info field, select *Movable Marker Info* from the context menu. Drag-and-drop the info field to any position in the active diagram area.
- To change the format of the active marker, select *Mkr Format*.
- To express the coordinates of the active marker relative to the reference marker, activate the *Delta Mode*.



For more information: Show Info Table

In addition to the marker info field, the analyzer provides an info table with extended marker information.

Marker	Trace	Stimulus	Response	Delta	Discr	Fixed	Tracking	Search Range
Ref	Trc1	3.440171000 GHz	-6.426 dB	☐	☒	☒	Off	Full Range
Mkr 1	Trc1	4.000150000 GHz	-5.364 dB	☐	☐	☐	Off	Full Range

The table is hidden by default. To display the table double-click the marker info field to open the *Marker Properties* dialog.



Context menu of the marker info field

A right mouse click on the marker info field opens a *context menu*:



Movable Marker Info allows the marker info field to be placed to any position in the diagram area. The remaining settings correspond to the most common commands in the *Trace – Marker* and *Trace – Search* menus.

Channel Settings

The main properties of all channels assigned to the traces in the diagram area are displayed in the channel list below the diagram.

Ch1 fb	Start 300 kHz	— Pb -10 dBm	Stop 8 GHz
Ch2 Pb	Start -25 dBm	— fb 1 GHz	Stop 0 dBm
Ch3 Arb P 2	Start 1.0003 GHz	— Pb -10 dBm	Stop 9 GHz

Each line in the channel list describes a single channel. The channel of the active trace is highlighted. The lines are divided into several sections with the following contents (from left to right):

- *Channel name* indicates the current channel name. The default names for new channels are Ch<n> where <n> is a current number.
 Right-click the section and call the *Channel Manager* from the context menu to change the channel name.
- *Measurement mode identifier (optional)* indicates a special test mode of the channel, e.g. the measurement of a *2nd harmonic* (H2), a *3rd harmonic* (H3), the *mixer mode* (Mix), or an arbitrary frequency conversion mode (Arb).
- *Stimulus axis* shows the frequency or power stimulus axis currently selected in the Channel – Mode – Port Configuration – Stimulus dialog. fb denotes the channel base frequency; Pb the channel base power; P 1 the port 1 source frequency or power, Gen 1 an external generator source frequency or power, Rec the receiver frequency (all ports). This information is particularly valuable if different port frequencies and powers are specified (with option R&S ZVA-K4).
- *Start value of the sweep* indicates the lowest value of the sweep variable (e.g. the lowest frequency measured), corresponding to the left edge of the Cartesian diagram.
- *Color legend* shows the display color of all traces assigned to the channel. The colors are different, so the number of colors is equal to the numbers of traces assigned to the channel.
- *Additional stimulus parameter* shows either the *power* of the internal signal source (for frequency sweeps and time sweeps), including the power stimulus axis defined in the Channel – Mode – Port Configuration – Stimulus dialog, or the *CW frequency* (for power sweeps), including the selected frequency stimulus axis. fb denotes the channel base frequency; Pb the channel base power.
- *Stop value of the sweep* indicates the highest value of the sweep variable (e.g. the highest frequency measured), corresponding to the right edge of the Cartesian diagram.



Right-click any of the sections in the trace list (except *Color legend*) to open a context menu and access the most common tasks related to the section.



Context menus of the channel list

A right mouse click on the channel name, the sweep range, and the additional parameter section of the channel list opens the following *context menus*, respectively:

Channel Manager... New Channel Del. act. Channel	Start... Stop... Center... Span... Number of Points...	Power... CW-Frequency... Meas Bandwidth... Average On Average Factor...

The settings correspond to the most common commands in the *Channel – Channel Select*, *Channel – Stimulus* and *Channel – Power Bandwidth Average* menus.

Context Menus

To provide access to the most common tasks and speed up the operation, the analyzer offers context menus (right-click menus) for the following display elements:

- [Diagram area](#)
- [Marker info](#) field
- [Trace list](#) (separate context menus for trace name section, measured quantity section, format section, scale section, and channel section)
- [Channel list](#) (separate context menus for channel name section, sweep range section, additional parameter section)



Working with context menus requires a mouse. Click inside the display element that you want to work with using the **right** mouse button.

Except from some particular screen configurations, anything you can do from a context menu you can also do from the menu bar or using front panel keys and softkeys. Use whatever method is most convenient for you.

Dialogs

Dialogs provide groups of related settings and allow to make selections and enter data in an organized way. All softkeys with three dots behind their labeling (as in *Marker Properties...*) call up a dialog. The dialogs of the analyzer have an analogous structure and a number of common control elements.



The *Dialog Transparency* function in the [System Config](#) menu varies the transparency of all dialogs. With an appropriate setting, you can control the dialogs and at the same time view the underlying traces and display elements.



We assume that you are familiar with standard Windows dialogs and mouse operation. Refer to *Using Front Panel Keys* to learn how to control dialogs without a mouse and keyboard.



Immediate vs. Confirmed Settings

In some dialogs, the settings take effect immediately so that the effect on the measurement is observable while the dialog is still open. This is especially convenient when a numeric value is incremented or decremented, e.g. via the rotary knob.

In most dialogs, however, it is possible to cancel an erroneous input before it takes effect. The settings in such dialogs must be confirmed explicitly.

The two types of dialogs are easy to distinguish:

- Dialogs with immediate settings provide a *Close* button but no *OK* button. Example: [Step Size](#) dialog.
- Dialogs with confirmed settings provide both an *OK* button and a *Cancel* button. Example: [On-screen keyboard](#).



You can also cancel an immediate setting using *System* – [Undo!](#).

On-Screen Keyboard

A keyboard  symbol next to a character input field opens the analyzer's on-screen keyboard.



The on-screen keyboard contains two sets of characters plus the following additional controls:


- *Shift* changes between the two character sets containing lower case letters/numbers and upper case letters/special characters, respectively.
- *<= BS* deletes the current string in the alphanumeric input field.
- *OK* applies the current selection and closes the keyboard. The current string is written into the input field of the calling dialog. See also [Immediate vs. Confirmed Settings](#).
- *Cancel* discards the current selection and closes the keyboard. The input field of the calling dialog is left unchanged.



The on-screen keyboard allows you to enter characters, in particular letters, without an external keyboard; see *Data Entry*. To enter numbers and units, you can also use the DATA ENTRY keys on the front panel of the instrument.

Step Size

A step  symbol next to a numeric input field opens the *Step Size* dialog to define an increment for data variation using the Cursor Up/Down  buttons in the dialogs or the rotary knob.

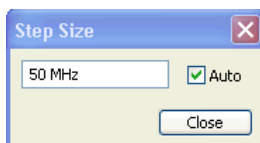


- The input value for the step size takes effect immediately; see [Immediate vs. Confirmed Settings](#).

- *Auto* activates the default step size for the current input parameter.
- *Close* closes the *Step Size* dialog.

Paste Marker List

A pull-down list symbol next to a numeric input field opens a list of all current stimulus and response marker values of the active trace. Any of the marker values can be selected as a numeric entry. If the physical unit of the selected marker value is inconsistent (mismatch of stimulus and response values) then the numeric value is used without the unit.



The response values in the paste marker list are not updated as the analyzer continues measuring, so they may differ from the values in the marker info field.



To open the paste marker list you can also click on the input field and use the space bar of your keyboard or the checkmark key in the NAVIGATION keypad at the front panel of the analyzer.

Numeric Entry Bar

Single numeric values can be entered using the input field of the numeric entry bar. The numeric entry bar appears just below the menu bar as soon as a function implying a single numeric entry is activated. In contrast to dialogs, it does not hide any of the display elements in the diagram area.



The numeric entry bar contains the name of the calling function, a numeric input field including the Cursor Up/Down buttons for data variation and a [step symbol](#), and a *Close* button. Besides it is closed automatically as soon as an active display element in the diagram area is clicked or a new menu command is activated.

Display Formats and Diagram Types

A display format defines how the set of (complex) measurement points is converted and displayed in a diagram. The display formats in the [Trace – Format](#) menu use the following basic diagram types:

- **Cartesian** (rectangular) diagrams are used for all display formats involving a **conversion** of the measurement data into a real (scalar) quantity, i.e. for *dB Mag*, *Phase*, *Delay*, *SWR*, *Lin Mag*, *Real*, *Imag* and *Unwrapped Phase*.
- **Polar** diagrams are used for the display format *Polar* and show a complex quantity as a vector in a single trace.
- **Smith** charts are used for the display format *Smith*. They show a complex quantity like polar diagrams but with grid lines of constant real and imaginary part of the impedance.
- **Inverted Smith** charts are used for the display format *Inverted Smith*. They show a complex quantity like polar diagrams but with grid lines of constant real and imaginary part of the admittance.




The analyzer allows arbitrary combinations of display formats and measured quantities ([Trace – Measure](#)). Nevertheless, in order to extract useful information from the data, it is important to select a display format which is appropriate to the analysis of a particular measured quantity; see [Measured Quantities and Display Formats](#).

Cartesian Diagrams

Cartesian diagrams are rectangular diagrams used to display a scalar quantity as a function of the stimulus variable (frequency / power / time).

- The stimulus variable appears on the horizontal axis (x-axis), scaled linearly ([sweep types Lin Frequency, Power, Time, CW Mode](#)) or logarithmically ([sweep type Log Frequency](#)).
- The measured data (response values) appears on the vertical axis (y-axis). The scale of the y-axis is linear with equidistant grid lines although the y-axis values may be obtained from the measured data by non-linear [conversions](#).

The following examples show the same trace in Cartesian diagrams with linear and logarithmic x-axis scaling.

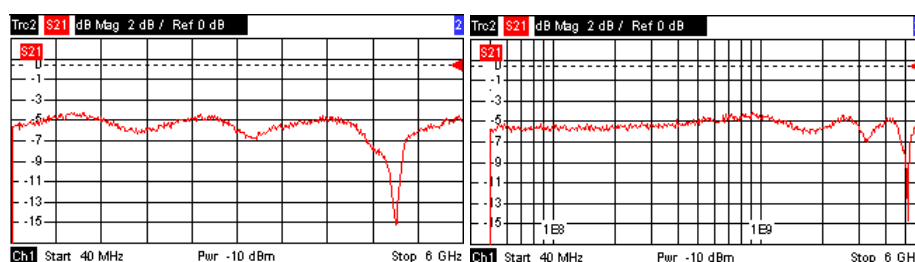

Conversion of Complex into Real Quantities

The results in the [Trace – Measure](#) menu can be divided into two groups:

- S-Parameters, Ratios, Wave Quantities, Impedances, Admittances, Z-Parameters, and Y-Parameters* are complex.
- Stability Factors and DC Input values* (voltages, PAE) are real.

The following table shows how the response values in the different Cartesian diagrams are calculated from the complex measurement values $z = x + jy$ (where x, y, z are functions of the sweep variable). The formulas also hold for real results, which are treated as complex values with zero imaginary part ($y = 0$).

Trace Format	Description	Formula
dB Mag	Magnitude of z in dB	$ z = \sqrt{x^2 + y^2}$ $\text{dB Mag}(z) = 20 * \log z \text{ dB}$
Lin Mag	Magnitude of z , unconverted	$ z = \sqrt{x^2 + y^2}$
Phase	Phase of z	$\varphi(z) = \arctan(y/x)$
Real	Real part of z	$\text{Re}(z) = x$
Imag	Imaginary part of z	$\text{Im}(z) = y$
SWR	(Voltage) Standing Wave Ratio	$\text{SWR} = (1 + z) / (1 - z)$
Delay	Group delay, neg. derivative of the phase response	$-d\varphi(z) / d\omega \quad (\omega = 2\pi * f)$




An extended range of formats and conversion formulas is available for markers. To convert any point on a trace, create a marker and select the appropriate **marker format**. Marker and trace formats can be selected independently.

Polar Diagrams

Polar diagrams show the measured data (response values) in the complex plane with a horizontal real axis and a vertical imaginary axis. The grid lines correspond to points of equal magnitude and phase.


- The magnitude of the response values corresponds to their distance from the center. Values with the same magnitude are located on circles.
- The phase of the response values is given by the angle from the positive horizontal axis. Values with the same phase are on straight lines originating at the center.

The following example shows a polar diagram with a marker used to display a pair of stimulus and response values.

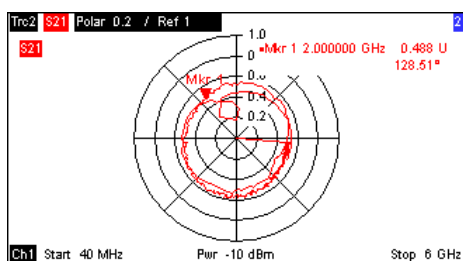

Example: Reflection coefficients in polar diagrams

If the measured quantity is a complex reflection coefficient (S_{11} , S_{22} etc.), then the center of the polar diagram corresponds to a perfect load Z_0 at the input test port of the DUT (no reflection, matched input), whereas the outer circumference ($|S_{ii}| = 1$) represents a totally reflected signal.

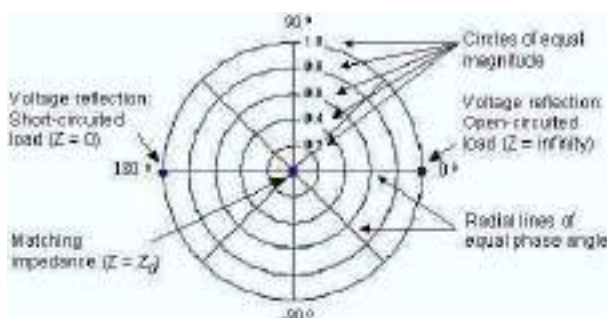

Examples for definite magnitudes and phase angles:


- The magnitude of the reflection coefficient of an open circuit ($Z = \text{infinity}$, $I = 0$) is one, its phase is zero.
- The magnitude of the reflection coefficient of a short circuit ($Z = 0$, $U = 0$) is one, its phase is -180 deg.

Smith Chart

The Smith chart is a circular diagram that maps the complex reflection coefficients S_{ij} to normalized impedance values. In contrast to the [polar diagram](#), the scaling of the diagram is not linear. The grid lines correspond to points of constant resistance and reactance.

- Points with the same resistance are located on circles.
- Points with the same reactance produce arcs.

The following example shows a Smith chart with a marker used to display the stimulus value, the complex impedance $Z = R + jX$ and the equivalent inductance L (see [marker format](#) description in the help system).

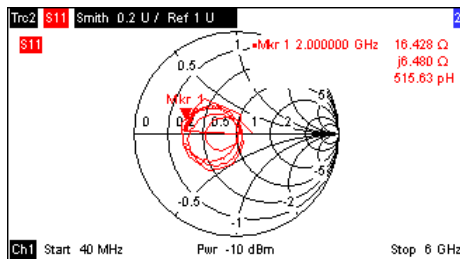


A comparison of the Smith chart, the [inverted Smith](#) chart and the [polar diagram](#) reveals many similarities between the two representations. In fact the shape of a trace does not change at all if the display format is switched from *Polar* to *Smith* or *Inverted Smith* – the analyzer simply replaces the underlying grid and the default marker format.



Smith chart construction

In a Smith chart, the impedance plane is reshaped so that the area with positive resistance is mapped into a unit circle.

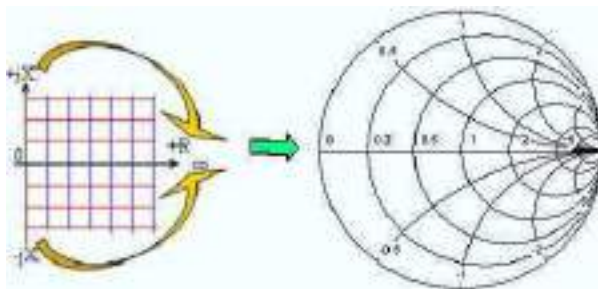

The basic properties of the Smith chart follow from this construction:

- The central horizontal axis corresponds to zero reactance (real impedance). The center of the diagram represents $Z/Z_0 = 1$ which is the reference impedance of the system (zero reflection). At the left and right intersection points between the horizontal axis and the outer circle, the impedance is zero (short) and infinity (open).
- The outer circle corresponds to zero resistance (purely imaginary impedance). Points outside the outer circle indicate an active component.
- The upper and lower half of the diagram correspond to positive (inductive) and negative (capacitive) reactive components of the impedance, respectively.



Example: Reflection coefficients in the Smith chart

If the measured quantity is a complex reflection coefficient Γ (e.g. S_{11} , S_{22}), then the unit Smith chart can be used to read the normalized impedance of the DUT. The coordinates in the normalized impedance plane and in the reflection coefficient plane are related as follows (see also: definition of matched-circuit (converted) [impedances](#)):


$$Z / Z_0 = (1 + \Gamma) / (1 - \Gamma)$$

From this equation it is easy to relate the real and imaginary components of the complex resistance to the real and imaginary parts of Γ :

$$R = \operatorname{Re}(Z / Z_0) = \frac{1 - \operatorname{Re}(\Gamma)^2 - \operatorname{Im}(\Gamma)^2}{[1 - \operatorname{Re}(\Gamma)]^2 + \operatorname{Im}(\Gamma)^2}, \quad X = \operatorname{Im}(Z / Z_0) = \frac{2 \cdot \operatorname{Im}(\Gamma)}{[1 - \operatorname{Re}(\Gamma)]^2 + \operatorname{Im}(\Gamma)^2},$$

in order to deduce the following properties of the graphical representation in a Smith chart:

- Real reflection coefficients are mapped to real impedances (resistances).
- The center of the Γ plane ($\Gamma = 0$) is mapped to the reference impedance Z_0 , whereas the circle with $|\Gamma| = 1$ is mapped to the imaginary axis of the Z plane.
- The circles for the points of equal resistance are centered on the real axis and intersect at $Z = \text{infinity}$. The arcs for the points of equal reactance also belong to circles intersecting at $Z = \text{infinity}$ (open circuit point (1,0)), centered on a straight vertical line.

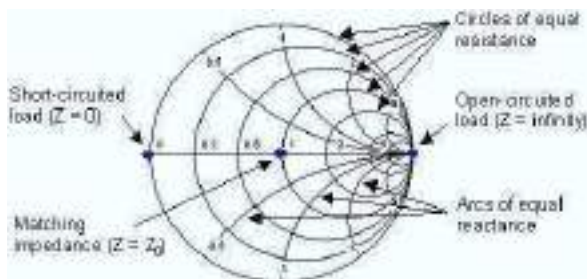

Examples for special points in the Smith chart:

- The magnitude of the reflection coefficient of an open circuit ($Z = \text{infinity}$, $\Gamma = 1$) is one, its phase is zero.
- The magnitude of the reflection coefficient of a short circuit ($Z = 0$, $\Gamma = -1$) is one, its phase is -180° .


Inverted Smith Chart

The inverted Smith chart is a circular diagram that maps the complex reflection coefficients S_{ii} to normalized admittance values. In contrast to the [polar diagram](#), the scaling of the diagram is not linear. The grid lines correspond to points of constant conductance and susceptance.

- Points with the same conductance are located on circles.
- Points with the same susceptance produce arcs.

The following example shows an inverted Smith chart with a marker used to display the stimulus value, the complex admittance $Y = G + jB$ and the equivalent inductance L (see [marker format](#) description in the

help system).

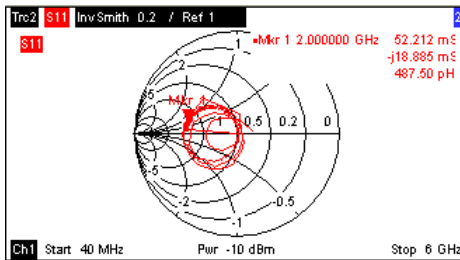


A comparison of the inverted Smith chart with the [Smith chart](#) and the [polar diagram](#) reveals many similarities between the different representations. In fact the shape of a trace does not change at all if the display format is switched from *Polar* to *Inverted Smith* or *Smith* – the analyzer simply replaces the underlying grid and the default marker format.



Inverted Smith chart construction

The inverted Smith chart is point-symmetric to the Smith chart:

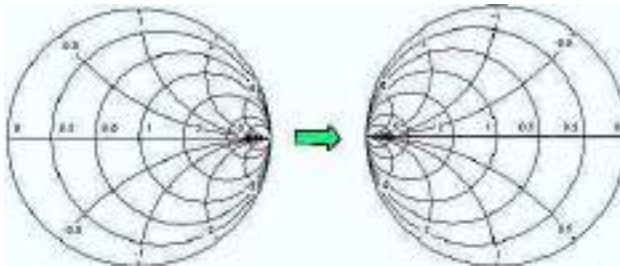

The basic properties of the inverted Smith chart follow from this construction:

- The central horizontal axis corresponds to zero susceptance (real admittance). The center of the diagram represents $Y/Y_0 = 1$, where Y_0 is the reference admittance of the system (zero reflection). At the left and right intersection points between the horizontal axis and the outer circle, the admittance is infinity (short) and zero (open).
- The outer circle corresponds to zero conductance (purely imaginary admittance). Points outside the outer circle indicate an active component.
- The upper and lower half of the diagram correspond to negative (inductive) and positive (capacitive) susceptive components of the admittance, respectively.



Example: Reflection coefficients in the inverted Smith chart

If the measured quantity is a complex reflection coefficient Γ (e.g. S_{11} , S_{22}), then the unit inverted Smith chart can be used to read the normalized admittance of the DUT. The coordinates in the normalized admittance plane and in the reflection coefficient plane are related as follows (see also: definition of matched-circuit (converted) [admittances](#)):


$$Y / Y_0 = (1 - \Gamma) / (1 + \Gamma)$$

From this equation it is easy to relate the real and imaginary components of the complex admittance to the real and imaginary parts of Γ

$$G = \operatorname{Re}(Y/Y_0) = \frac{1 - \operatorname{Re}(\Gamma)^2 - \operatorname{Im}(\Gamma)^2}{[1 + \operatorname{Re}(\Gamma)]^2 + \operatorname{Im}(\Gamma)^2}, \quad B = \operatorname{Im}(Y/Y_0) = \frac{-2 \cdot \operatorname{Im}(\Gamma)}{[1 + \operatorname{Re}(\Gamma)]^2 + \operatorname{Im}(\Gamma)^2},$$

in order to deduce the following properties of the graphical representation in an inverted Smith chart:

- Real reflection coefficients are mapped to real admittances (conductances).
- The center of the Γ plane ($\Gamma = 0$) is mapped to the reference admittance Y_0 , whereas the circle with $|\Gamma| = 1$ is mapped to the imaginary axis of the Y plane.
- The circles for the points of equal conductance are centered on the real axis and intersect at $Y = \text{infinity}$. The arcs for the points of equal susceptance also belong to circles intersecting at $Y = \text{infinity}$ (short circuit point $(-1, 0)$), centered on a straight vertical line.

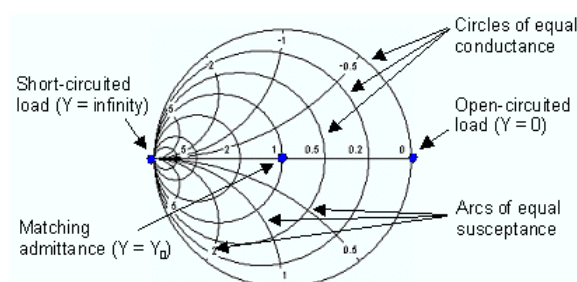

Examples for special points in the inverted Smith chart:

- The magnitude of the reflection coefficient of a short circuit ($Y = \text{infinity}$, $U = 0$) is one, its phase is -180° .
- The magnitude of the reflection coefficient of an open circuit ($Y = 0$, $I = 0$) is one, its phase is zero.

Measured Quantities and Display Formats

The analyzer allows any combination of a display format and a measured quantity. The following rules can help to avoid inappropriate formats and find the format that is ideally suited to the measurement task.

- All formats are suitable for the analysis of reflection coefficients S_{ij} . The formats *SWR*, *Smith* and *Inverted Smith* lose their original meaning (standing wave ratio, normalized impedance or admittance) if they are used for transmission *S-parameters*, *Ratios* and other quantities.
- The complex *Impedances*, *Admittances*, *Z-parameters*, and *Y-parameters* are generally displayed in one of the Cartesian diagrams with linear vertical axis scale or in a polar diagram.
- The real *Stability Factors*, *DC Inputs*, and the *PAE* is generally displayed in a linear Cartesian diagram (*Lin Mag* or *Real*). In complex formats, real numbers represent complex numbers with zero imaginary part.

The following table gives an overview of recommended display formats.

	Complex dimensionless quantities: S-parameters and ratios	Complex quantities with dimensions: Wave quantities, Z-parameters, Y-parameters, impedances, admittances	Real quantities: Stability Factors, DC Input 1/2, PAE
Lin Mag	☒	☒ (default for Z-parameters, Y-parameters, impedances, admittances)	☒ (default)
dB Mag	☒ (default)	☒ (default for wave quantities)	–
Phase	☒	☒	–

	Complex dimensionless quantities: S-parameters and ratios	Complex quantities with dimensions: Wave quantities, Z-parameters, Y-parameters, impedances, admittances	Real quantities: Stability Factors, DC Input 1/2, PAE
Real	☒	☒	☒
Imag	☒	☒	–
Unwrapped Phase	☒	☒	–
Smith	☒ (reflection coefficients S_{ij})	–	–
Polar	☒	–	–
Inverted Smith	☒ (reflection coefficients S_{ij})	–	–
SWR	☒ (reflection coefficients S_{ij})	–	–
Delay	☒ (transmission coefficients S_{ij})	–	–

The default formats are activated automatically when the measured quantity is changed.

Measured Quantities


This section gives an overview of the measurement results of the network analyzer and the meaning of the different measured quantities. All quantities can be selected in the *Trace – Meas.* submenu.



The definitions in this and the following sections apply to general n-port DUTs. An analyzer with a smaller number of test ports provides a subset of the n-port quantities.

S-Parameters

S-parameters are the basic measured quantities of a network analyzer. They describe how the DUT modifies a signal that is transmitted or reflected in forward or reverse direction. For a 2-port measurement the signal flow is as follows.

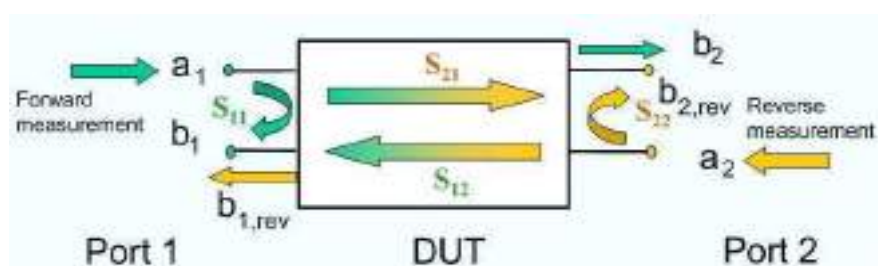

Extensions to the signal flow

The figure above is sufficient for the definition of S-parameters but does not necessarily show the complete signal flow. In fact, if the source and load ports are not ideally matched, part of the transmitted waves are reflected off the receiver ports so that an additional a_2 contribution occurs in forward measurements, and an a_1 contribution occurs in reverse measurements.

The 7-term [calibration types](#) Txx take these additional contributions into account.

The scattering matrix links the incident waves a_1 , a_2 to the outgoing waves b_1 , b_2 according to the following

linear equation:

$$\begin{bmatrix} b_1 \\ b_2 \end{bmatrix} = \begin{bmatrix} S_{11} & S_{12} \\ S_{21} & S_{22} \end{bmatrix} * \begin{bmatrix} a_1 \\ a_2 \end{bmatrix}$$

The four 2-port S-parameters can be interpreted as follows:

- S_{11} is the reflection coefficient of port 1, i.e. the ratio between outgoing wave b_1 and incident wave a_1 in a forward measurement with matched port 2:
 $S_{11} = b_1 / a_1$, if $|a_1| > 0$ and $a_2 = 0$
- S_{21} is the forward transmission coefficient, defined as the ratio between outgoing wave b_2 and incident wave a_1 in a forward measurement with matched port 2:
 $S_{21} = b_2 / a_1$, if $|a_1| > 0$ and $a_2 = 0$
- S_{12} is the reverse transmission coefficient, defined as the ratio between outgoing wave b_1 and incident wave a_2 in a reverse measurement with matched port 1:
 $S_{12} = b_1 / a_2$, if $|a_2| > 0$ and $a_1 = 0$
- S_{22} is the reflection coefficient of port 2, i.e. the ratio between outgoing wave b_2 and incident wave a_2 in a reverse measurement with matched port 1:
 $S_{22} = b_2 / a_2$, if $|a_2| > 0$ and $a_1 = 0$



Meaning of squared amplitudes

The squared amplitudes of the incident and outgoing waves and of the matrix elements have a simple meaning:

$ a_i ^2$	Available incident power (= the power provided by a generator with a source impedance equal to the reference impedance Z_0) at DUT port $i=1,2$
$ b_i ^2$	Reflected power at DUT port $i=1,2$
$10 \log S_{ii} ^2 = 20 \log S_{ii} $	Reflection loss at DUT port $i=1,2$
$10 \log S_{21} ^2 = 20 \log S_{21} $	Insertion loss of forward transmission
$10 \log S_{12} ^2 = 20 \log S_{12} $	Insertion loss of reverse transmission

Multiport Parameters

The [multiport S-parameters](#) extend the standard [2-port S-parameters](#) to a larger number of incident and outgoing waves. For a 4-port DUT,

$$\begin{bmatrix} b_1 \\ b_2 \\ b_3 \\ b_4 \end{bmatrix} = \begin{bmatrix} S_{11} & S_{12} & S_{13} & S_{14} \\ S_{21} & S_{22} & S_{23} & S_{24} \\ S_{31} & S_{32} & S_{33} & S_{34} \\ S_{41} & S_{42} & S_{43} & S_{44} \end{bmatrix} * \begin{bmatrix} a_1 \\ a_2 \\ a_3 \\ a_4 \end{bmatrix},$$

where a_i denotes the incident and b_i the outgoing wave at DUT port $i = 1$ to 4, and the S-parameters are expressed as S_{ij} ($i, j = 1$ to 4).

The S-parameters considered so far are referred to as *single-ended*. However, the S-parameter description can also be used to describe different propagation modes for balanced DUT ports. This results in the so-called [mixed mode S-parameters](#). The analyzer measures either single-ended or mixed mode S-parameters.


Impedance Parameters

An impedance is the complex ratio between a voltage and a current. The analyzer provides two independent sets of impedance parameters:

- Converted [impedances](#) (each impedance parameter is obtained from a single S-parameter)
- [Z-parameters](#) (complete description of the n-port DUT)

Converted Impedances

The converted impedance parameters describe the input impedances of a DUT with fully matched outputs. In the figures below the indices i and j number the analyzer/DUT ports, Z_{0i} is the reference impedance at the DUT port i .

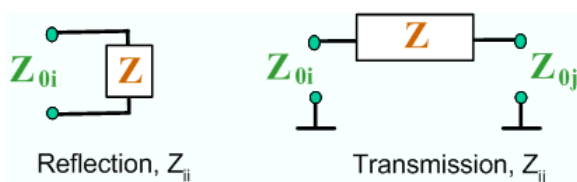

The analyzer converts a **single** measured S-parameter to determine the corresponding converted impedance. As a result, converted Z-parameters cannot completely describe general n-port DUTs:

- A reflection parameter Z_{ii} completely describes a one-port DUT. For n-port DUTs ($n > 1$) the reflection parameters Z_{ii} describe the input impedances at ports i ($i = 1$ to n) under the condition that each of the other ports is terminated with its reference impedance (matched-circuit parameters).
- A two-port transmission parameter Z_{ij} ($i \neq j$) can describe a pure serial impedance between the two ports.



Relation with S-parameters

The converted impedances Z_{ii} are calculated from the reflection [S-parameters](#) S_{ii} according to:

$$Z_{ii} = Z_{0i} \frac{1 + S_{ii}}{1 - S_{ii}},$$

The transmission parameters are calculated according to:

$$Z_{ij} = 2 \cdot \frac{\sqrt{Z_{0i} \cdot Z_{0j}}}{S_{ij}} - (Z_{0i} + Z_{0j}), \quad i \neq j,$$

The converted [admittances](#) are defined as the inverse of the impedances.

Examples:

- Z_{11} is the input impedance of a 2-port DUT that is terminated at its output with the reference impedance Z_0 (matched-circuit impedance measured in a forward reflection measurement).
- The extension of the impedances to more ports and mixed mode measurements is analogous to S-parameters. Z_{dd44} is the differential mode input impedance at port 4 of a DUT that is terminated at its other ports with the reference impedance Z_0 . See [More Impedances](#) for detailed information.



You can also read the converted impedances in a reflection coefficient measurement from the [Smith chart](#).

Z-Parameters


The Z-parameters describe the impedances of a DUT with open output ports ($I = 0$). The analyzer provides the full set of Z-parameters including the transfer impedances (i.e. the complete nxn Z-matrix for an n port DUT).

This means that Z-parameters can be used as an alternative to S-parameters (or [Y-parameters](#)) in order to completely characterize a linear n-port network.

2-Port Z-Parameters

In analogy to [S-parameters](#), Z-parameters are expressed as Z_{ij} , where where i denotes the measured and j the stimulated port.

The Z-parameters for a two-port are based on a circuit model that can be expressed with two linear equations:

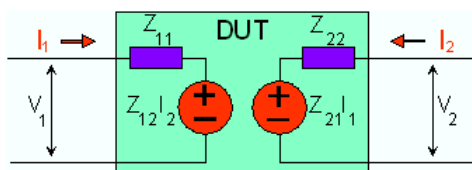

$$V_1 = Z_{11}I_1 + Z_{12}I_2$$

$$V_2 = Z_{21}I_1 + Z_{22}I_2$$



Meaning of Z-parameters

The four 2-port open-circuit Z-parameters can be interpreted as follows:

- Z_{11} is the input impedance, defined as the ratio of the voltage V_1 to the current I_1 , measured at port 1 (forward measurement with open output, $I_2 = 0$).
- Z_{21} is the forward transfer impedance, defined as the ratio of the voltage V_2 to the current I_1 (forward measurement with open output, $I_2 = 0$).
- Z_{12} is the reverse transfer impedance, defined as the ratio of the voltage V_1 to the current I_2 (reverse measurement with open input, $I_1 = 0$).
- Z_{22} is the output impedance, defined as the ratio of the voltage V_2 to the current I_2 , measured at port 2 (reverse measurement with open input, $I_1 = 0$).

Z-parameters can be easily extended to describe circuits with more than two ports or several modes of propagation.

Admittance Parameters

An admittance is the complex ratio between a current and a voltage. The analyzer provides two independent sets of admittance parameters:

- Converted [admittances](#) (each admittance parameter is obtained from a single S-parameter)
- [Y-parameters](#) (complete description of the n-port DUT)

Converted Admittances

The converted admittance parameters describe the input admittances of a DUT with fully matched outputs. The converted admittances are the inverse of the converted [impedances](#).

The analyzer converts a **single** measured S-parameter to determine the corresponding converted admittance. As a result, converted Y-parameters cannot completely describe general n-port DUTs:

- A reflection parameter Y_{ii} completely describes a one-port DUT. For n-port DUTs ($n > 1$) the reflection parameters Y_{ii} describe the input admittances at ports i ($i = 1$ to n) under the condition that each of the other ports is terminated with its reference impedance (matched-circuit parameters).
- A two-port transmission parameter Y_{ij} ($i \neq j$) can describe a pure serial impedance between the two ports.



Relation with S-parameters

The converted admittances Y_{ii} are calculated from the reflection S-parameters S_{ii} according to:

$$Y_{ii} = \frac{1}{Z_{0i}} \frac{1 - S_{ii}}{1 + S_{ii}} = 1 / Z_{ii} ,$$

The transmission parameters are calculated according to:

$$Y_{ij} = \frac{S_{ij}}{2 \cdot \sqrt{Z_{0i} \cdot Z_{0j}} - S_{ij} \cdot (Z_{0i} + Z_{0j})} = 1 / Z_{ij}, \quad i \neq j ,$$

Examples:

- Y_{11} is the input admittance of a 2-port DUT that is terminated at its output with the reference impedance Z_0 (matched-circuit admittance measured in a forward reflection measurement).
- The extension of the admittances to more ports and mixed mode measurements is analogous to S-parameters. Y_{dd44} is the differential mode input admittance at port 4 of a DUT that is terminated at its other ports with the reference impedance Z_0 . See [More Admittances](#) for detailed information.



You can also read the converted admittances in a reflection coefficient measurement from the [inverted Smith chart](#).

Y-Parameters

The Y-parameters describe the admittances of a DUT with output ports terminated in a short circuit ($V = 0$). The analyzer provides the full set of Y-parameters including the transfer admittances (i.e. the complete $n \times n$ Y-matrix for an n port DUT).

This means that Y-parameters can be used as an alternative to S-parameters (or [Z-parameters](#)) in order to completely characterize a linear n-port network.

2-Port Y-Parameters

In analogy to [S-parameters](#), Y-parameters are expressed as $Y_{<out><in>}$, where $<out>$ and $<in>$ denote the output and input port numbers of the DUT.

In analogy to [Z-parameters](#), the Y-parameters for a two-port are based on a circuit model that can be

expressed with two linear equations:

$$I_1 = Y_{11}V_1 + Y_{12}V_2$$

$$I_2 = Y_{21}V_1 + Y_{22}V_2$$



Meaning of Y-parameters

The four 2-port Y-parameters can be interpreted as follows:

- Y_{11} is the input admittance, defined as the ratio of the current I_1 to the voltage V_1 , measured at port 1 (forward measurement with output terminated in a short circuit, $V_2 = 0$).
- Y_{21} is the forward transfer admittance, defined as the ratio of the current I_2 to the voltage V_1 (forward measurement with output terminated in a short circuit, $V_2 = 0$).
- Y_{12} is the reverse transfer admittance, defined as the ratio of the current I_1 to the voltage V_2 (reverse measurement with input terminated in a short circuit, $V_1 = 0$).
- Y_{22} is the output admittance, defined as the ratio of the current I_2 to the voltage V_2 , measured at port 2 (reverse measurement with input terminated in a short circuit, $V_1 = 0$).

Y-parameters can be easily extended to describe circuits with more than two ports or several modes of propagation.

Wave Quantities and Ratios

The elements of the S-, Z- and Y-matrices represent fixed ratios of complex wave amplitudes. As long as the assumption of linearity holds, the S-, Z- and Y-parameters are independent of the source power.

The network analyzer provides two additional sets of measurement parameters which have a unambiguous meaning even if the DUT is measured outside its linear range:

- **Wave Quantities** provide the power of any of the transmitted or received waves.
- **Ratios** provide the complex ratio of any combination of transmitted or received wave quantities.



In contrast to S-, Z- and Y-parameters, wave quantities and ratios are not system-error corrected. A power calibration can be applied to wave quantities and ratios.



With option R&S ZVA-K6, True Differential Mode, the analyzer can also determine **balanced wave quantities and ratios**.

Wave Quantities

A wave quantity measurement provides the power of any of the transmitted or received waves. The power can be displayed in voltage units (e.g. V or dBmV) or equivalent power units (e.g. W or dBm).




Examples for using wave quantities

The wave quantities provide the power at the different receive ports of the analyzer. This is different from an S-parameter measurement, where the absolute power of a linear device is cancelled. Wave quantities are therefore suitable for the following measurement tasks:

- Analysis of non-linearities of the DUT.
- Use of the analyzer as a selective power meter.

To increase the accuracy or correct a possible attenuation in the input signal path, it is recommended to perform a power calibration.

The notation for wave quantities includes the direction and the test port number. Additionally, the source port must be specified. The letter a indicates a transmitted wave, b a received wave.

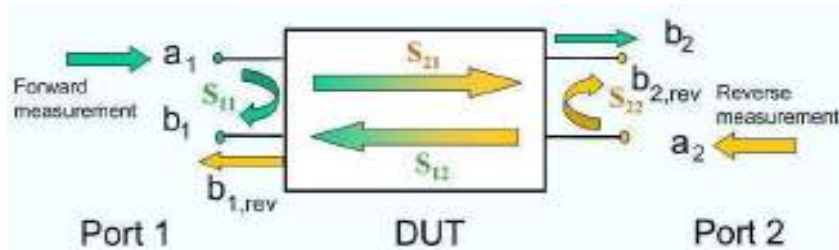

Examples:

- **a1 Src Port 1** is the outgoing wave at test port 1. In a standard **S-parameter** measurement, this wave is fed to the input port (port 1) of the DUT (forward measurement).
- **b1 Src Port 1** is the incoming wave at test port 1. In a standard S-parameter measurement, this is the reflected wave at port 1 of the DUT (forward measurement).

Ratios

A ratio measurement provides the complex ratio of any combination of transmitted or received wave amplitudes. Ratios complement the S-parameter measurements, where only ratios of the form b_i/a_j (ratio of the incoming wave to the outgoing wave at the test ports i and j of the DUT) are considered.



Examples for using ratios

A measurement of ratios is particularly suitable for the following test scenarios:

- The test setup or some of its components (e.g. active components or non-reciprocal devices) do not allow a system error correction so that a complete S-parameter measurement is not possible.
- The test setup contains frequency-converting components so that the transmitted and the received waves are at different frequencies.
- A ratio of two arbitrary waves that is not an element of the S-matrix (e.g. a ratio of the form a_i/a_j) is needed.

The notation for ratios includes the two waves with their directions and test port numbers. Additionally, the source port must be specified. In analogy to **wave quantities**, the letter a indicates an outgoing wave, b an incoming wave.

Examples:

- **b2/a1 Src Port 1** is the ratio of the outgoing wave b_2 at port 2 and the incident wave a_1 at port 1; this corresponds to the S-parameter S_{21} (forward transmission coefficient).
- **b1/a1 Src Port 1** is the ratio of the wave quantities b_1 and a_1 , measured at PORT 1; this corresponds to the S-parameter S_{11} (input reflection coefficient).

Mixed Mode Parameters

Mixed mode parameters are an extension of normal mode parameters (e.g. S-parameters, impedances

and admittances) for balanced measurements. The analyzer can measure mixed mode parameters as soon as a balanced port configuration is selected.

Mixed mode parameters are used to distinguish the following three port modes:


- s: Single-ended (for unbalanced ports)
- d: Differential mode (for balanced ports)
- c: Common mode (for balanced ports)

The notation of a general S-parameter is $S_{\langle \text{mout} \rangle \langle \text{min} \rangle \langle \text{out} \rangle \langle \text{in} \rangle}$, where $\langle \text{mout} \rangle$ and $\langle \text{min} \rangle$ denote the output and input port modes, $\langle \text{out} \rangle$ and $\langle \text{in} \rangle$ denote the output and input port numbers.



Meaning of 2-port mixed mode S-parameters

The mixed mode 2-port S-parameters can be interpreted as follows:

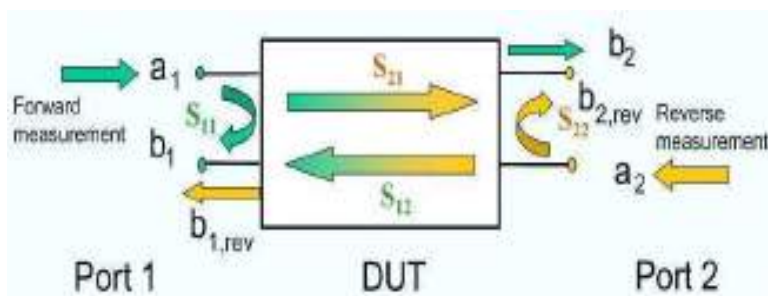


- $S_{\langle \text{mout} \rangle \langle \text{min} \rangle 11}$ is the mixed mode input reflection coefficient, defined as the ratio of the wave quantities b_1 (mode mout) to a_1 (mode min), measured at PORT 1 (forward measurement with matched output and $a_2 = 0$).
- $S_{\langle \text{mout} \rangle \langle \text{min} \rangle 21}$ is the mixed mode forward transmission coefficient, defined as the ratio of the wave quantities b_2 (mode mout) to a_1 (mode min) (forward measurement with matched output and $a_2 = 0$).
- $S_{\langle \text{mout} \rangle \langle \text{min} \rangle 12}$ is the mixed mode reverse transmission coefficient, defined as the ratio of the wave quantities b_1 (mode mout) (reverse measurement with matched input, b_1' in the figure above and $a_1 = 0$) to a_2 (mode min).
- $S_{\langle \text{mout} \rangle \langle \text{min} \rangle 22}$ is the mixed mode output reflection coefficient, defined as the ratio of the wave quantities b_2 (mode mout) (reverse measurement with matched input, b_2' in the figure above and $a_1 = 0$) to a_2 (mode min), measured at PORT 2.

If $\langle \text{mout} \rangle$ is different from $\langle \text{min} \rangle$, the S-parameters are called mode conversion factors.


Mixed Mode Parameters for Different Test Setups

Which types of mixed mode parameter are available depends on the measured device and the [port configuration](#) of the analyzer. The following examples of mixed more parameters can all be obtained with a 4-port analyzer.

1. DUT with only single-ended ports: No balanced port definition necessary, the analyzer provides single-ended multipoint parameters.
2. DUT with one balanced port: Only reflection and mode conversion measurements with differential and common mode parameters.

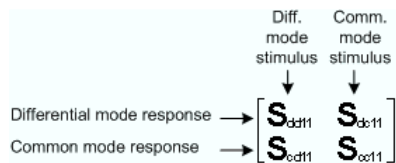

3. DUT with one balanced and one single-ended port.

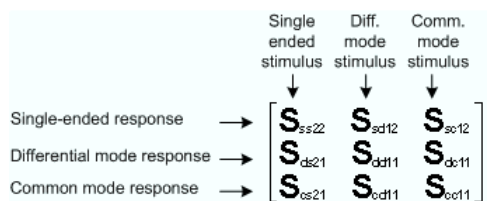

4. DUT with two balanced ports or one balanced and two single-ended ports. Both device types are fully characterized by 4x4 mixed mode S-matrices.


Unbalance-Balance Conversion

Unbalance-balance conversion is the simulation of one or more unbalance-balance transformers (baluns) integrated in the measurement circuit in order to convert the DUT ports from an unbalanced state into a balanced state and virtually separate the differential and common mode signals. The analyzer measures the unbalanced state but converts the results and calculates mixed mode parameters, e.g. [mixed mode S-parameters](#). No physical transformer is needed.



With option R&S ZVA-K6, [True Differential Mode](#), the analyzer can generate balanced waves at arbitrary reference planes in the test setup and determine balanced results such as S-parameters, wave quantities and ratios. The true differential mode also provides two additional sweep types, the amplitude imbalance and phase imbalance sweeps. What is said below is valid for both the simulated balanced mode and the true differential mode.

To perform balanced measurements, a pair of physical analyzer ports is combined to form a *logical port*. The balanced port of the DUT is directly connected to the analyzer ports

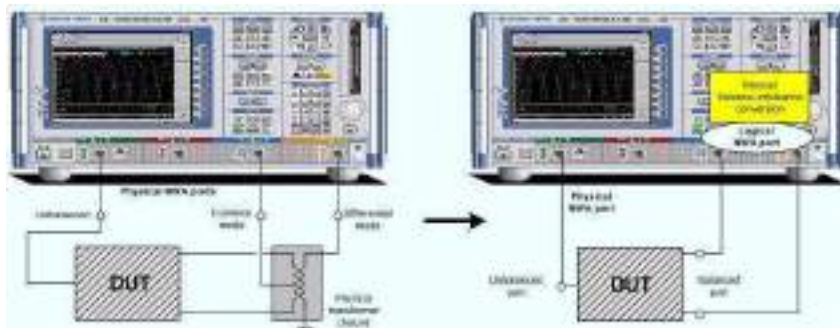

Unbalance-balance conversion avoids the disadvantages of real transformers:

- There is no need to fabricate test fixtures with integrated baluns for each type of DUT.
- The measurement is not impaired by the non-ideal characteristics of the balun (e.g. error tolerances, limited frequency range).
- Calibration can be performed at the DUT's ports. If necessary (e.g. to compensate for the effect of


a test fixture), it is possible to shift the calibration plane using length [offset parameters](#).

- Differential and common mode parameters can be evaluated with a single test setup.


Balanced Port Configurations

Defining a logical ports requires two physical analyzer ports. The ports of an analyzer are equivalent and can be freely combined. Moreover, it is possible to assign arbitrary, independent reference impedance values to each unbalanced port and to the differential and common mode of each logical port. The following types of balanced devices can be measured with 2-port, 3-port and 4-port analyzers:


- 2-port analyzers: Reflection measurements on 1 balanced port

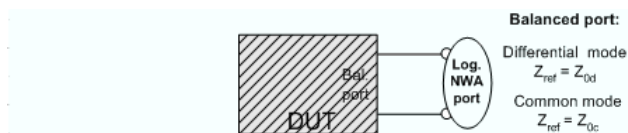

- 3-port analyzers: Reflection and transmission measurements on 1 balanced port

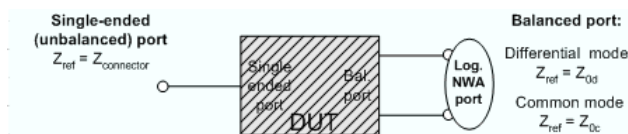

- 4-port analyzers: Reflection and transmission measurements on 1 or 2 balanced ports

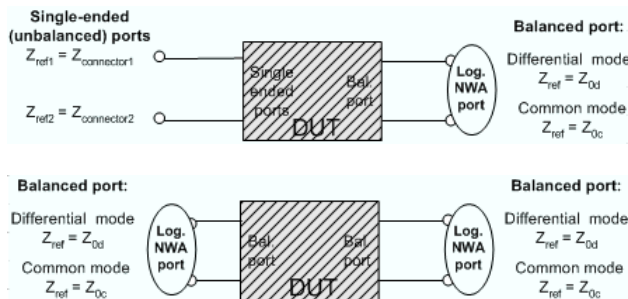

A balanced port configuration is defined by simply selecting the pairs of physical ports that are combined to form balanced ports and defining the two reference impedances for the differential and common mode at each balanced port. All this is done in a single dialog; refer to the help system for details and measurement examples. The most commonly used balanced port configurations and impedances are predefined and can be selected in the [Measurement Wizard](#).

Depending on the test setup, the analyzer provides different types of [mixed mode parameters](#); refer to the following sections for details.

Calibration Overview

Calibration or "system error correction" is the process of eliminating systematic, reproducible errors from the measurement results (S-parameters and derived quantities; see [Data Flow](#)). The process involves the following stages:

- A set of [calibration standards](#) is selected and measured over the required sweep range. For many

calibration types the magnitude and phase response of each calibration standard (i.e. its S-parameters if no system errors occur) must be known within the entire sweep range. In some calibration procedures (TRL, TNA, TRM), part of the characteristics of the standards can be auto-determined due to implicit redundancy (self-calibration).

2. The analyzer compares the measurement data of the standards with their known, ideal response. The difference is used to calculate the system errors using a particular error model ([calibration type](#)) and derive a set of system error correction data.
3. The system error correction data is used to correct the measurement results of a DUT that is measured instead of the standards.

Calibration is always channel-specific because it depends on the hardware settings, in particular on the sweep range. The means that a system error correction data set is stored with the calibrated channel.

The analyzer provides a wide range of sophisticated calibration methods for all types of measurements. Which calibration method is selected depends on the expected system errors, the accuracy requirements of the measurement, on the test setup and on the types of calibration standards available.

Due to the analyzer's [calibration wizard](#), calibration is a straightforward, menu-guided process. Moreover, it is possible to perform the entire calibration process automatically using a [Calibration Unit](#) (accessories R&S ZV-Z5x).



The system error correction data determined in a calibration procedure are stored on the analyzer. You can read these correction data using the remote control command `[SENSe<Ch>:]CORRection:CDATa`. You can also replace the correction data of the analyzer by your own correction data sets.



A red label **Cal Off !** appears behind the trace list if the system error correction no longer applies to one or more traces:

Trc1	S21	dB Mag	10 dB / Ref 0 dB	Cal Off !
Trc2	S21	dB Mag	10 dB / Ref 0 dB	Cal Off !

This may happen for one of the following reasons:

- The sweep range is outside the calibrated frequency range.
- The measurement result is a wave quantity or ratio which is never system error corrected (see [Data Flow](#)).
- The channel calibration is not sufficient for the measured quantity (e.g. a one-port calibration has been performed, but the measured quantity is a transmission parameter).
- The system error correction has been switched off deliberately ([Correction Off](#)).

The analyzer provides other labels to indicate the status of the current calibration; see [Calibration State Labels](#).

Calibration Standards and Calibration Kits

A calibration kit is a set of physical calibration standards for a particular connector type. The magnitude and phase response of the calibration standards (i.e. their S-parameters) must be known or predictable within a given frequency range.

The standards are grouped into several types (Open, Through, Match,...) corresponding to the different input quantities for the analyzer's error models. The standard type also determines the equivalent circuit model used to describe its properties. The circuit model depends on several parameters that are stored in the cal kit file associated with the calibration kit.

As an alternative to using circuit models, it is possible to describe the standards by means of S-parameter

tables stored in a file.

The analyzer provides a large number of predefined cal kits but can also import cal kit files and create new kits:

- A selection of predefined kits is available for all connector types. The parameters of these kits are displayed in the [Add/Modify Standards](#) dialog, however, it is not possible to change or delete the kits.
- Imported and user-defined kits can be changed in the *Calibration Kits* dialog and its various sub-dialogs.

Calibration kits and connector types are [global resources](#); the parameters are stored independently and are available irrespective of the current setup.

Calibration Types

The analyzer provides a wide range of calibration types for one, two or more ports. The calibration types differ in the number and types of standards used, the error terms, i.e. the type of systematic errors corrected and the general accuracy. The following table gives an overview.

Calibration Type	Standards	Parameters	Error Terms	General Accuracy	Application
Reflection Normalization	Open or Short	S_{11} (or $S_{22}, \dots$)	Reflection tracking	Low to medium	Reflection measurements on any port.
Transmission Normalization	Through	S_{12}, S_{21} (or $S_{13}, \dots$)	Transmission tracking	Medium	Transmission measurements in any direction and between any combination of ports.
Full One-Port	Open, Short and Match ¹⁾	S_{11} (or $S_{22}, \dots$)	Reflection tracking, Source match Directivity,	High	Reflection measurements on any port.
One-Path Two-Port	Open, Short and Match ¹⁾ (at source port), Through ²⁾	S_{11}, S_{21} (or $S_{22}, \dots$)	Reflection tracking, Source match, Directivity, Transmission tracking	Medium to high	Unidirectional transmission measurements in any direction and between any combination of ports.
TOSM or UOSM (2 or more ports)	Open, Short and Match ¹⁾ at all ports, Through ²⁾ between all directed port pairs	All	Reflection tracking, Source match, Directivity, Load match, Transmission tracking,	High	Reflection and transmission measurements on DUTs with 2 or more ports; classical 12-term error correction model.
TOM (2 or more ports)	Open, Match at all ports, Through between all directed port pairs	All	Reflection tracking, Source match, Directivity, Load match, Transmission tracking	High	Reflection and transmission measurements on DUTs with 2 or more ports.
TRM (2 or more ports)	Reflect (equal at all ports) and Match at all ports, Through between all directed port pairs	All	Reflection tracking, Source match, Directivity, Load match, Transmission tracking	High	Reflection and transmission measurements on DUTs with 2 or more ports, especially in test fixtures.

Calibration Type	Standards	Parameters	Error Terms	General Accuracy	Application
TRL (2 or more ports)	Reflect at all ports, Through and Line 1 [+ Line 2, Line 3 (optional)] between all directed port pairs, in combination with TRM (optional)	All	Reflection tracking, Source match, Directivity, Load match, Transmission tracking	High, high directivity	Reflection and transmission measurements on DUTs with 2 or more ports, especially for planar circuits. Limited bandwidth.
NIST Multiline TRL (2 or more ports)	Reflect at all ports, Through and one or more Line standards (number not limited) between all directed port pairs	All	Reflection tracking, Source match, Directivity, Load match, Transmission tracking	High, high directivity In general higher accuracy than TRL	Reflection and transmission measurements on DUTs with 2 or more ports, especially for planar circuits. Bandwidth limited at low frequencies.
TNA (2 or more ports)	Through, Attenuation, Symmetric network	All	Reflection tracking, Source match, Directivity, Load match, Transmission tracking	High, lowest requirements on standards	Reflection and transmission measurements on DUTs with 2 or more ports, especially for planar circuits.

1) Or any other 3 known one-port standards. To be used in a [guided calibration](#), the known standards must be declared to be open, short, and match irrespective of their properties .

2) Or any other known two-port standard. See remark above.



The calibration type must be selected in accordance with the test setup. Select the calibration type for which you can obtain or design the most accurate standards and for which you can measure the required parameters with best accuracy.

Normalization

A normalization is the simplest calibration type since it requires the measurement of only one standard for each calibrated S-parameter:

- One-port (reflection) S-parameters (S_{11} , S_{22} , ...) are calibrated with an open or a short standard providing the **reflection tracking** error term.
- Two-port (transmission) S-parameters (S_{12} , S_{21} , ...) are calibrated with a through standard providing the **transmission tracking** error term.

Normalization means that the measured S-parameter at each sweep point is divided by the corresponding S-parameter of the standard. A normalization eliminates the frequency-dependent attenuation and phase shift in the measurement path (reflection or transmission tracking error). It does not compensate for directivity or mismatch errors. This limits the accuracy of a normalization.

Full One-Port Calibration

A full one-port calibration requires a short, an open and a match standard to be connected to a single test port. The three standard measurements are used to derive all three reflection error terms:

- The short and open standards are used to derive the **source match** and the **reflection tracking** error terms.
- The match standard is used to derive the **directivity** error.

A full one-port calibration is more accurate than a normalization but is only applicable for reflection measurements.

One-Path Two-Port Calibration

A one-path two-port calibration combines a [full one-port calibration](#) with a transmission [normalization](#). The fully calibrated port is termed the *node port*. This calibration type requires a short, an open and a match standard to be connected to a single test port plus a through standard between this calibrated source port and a second load port. The four standard measurements are used to derive the following error terms:

- The short and open standards are used to derive the **source match** and the **reflection tracking error** terms at the source port.
- The match standard is used to derive the **directivity error** at the source port.
- The through standard provides the **transmission tracking error** term.

A one-path two-port calibration requires only four standards to be connected (instead of 7 for a full two-port TOSM calibration). It is suitable when only the forward (e.g. S_{11} and S_{21}) or reverse S-parameters (e.g. S_{22} and S_{12}) are needed, and if the DUT is well matched, especially at the load port. It is also the best calibration method for test setups with unidirectional signal flow, e.g. a pulsed measurement using an external generator.

TOSM Calibration

A TOSM (Through – Open – Short – Match) calibration requires the same standards as the [one-path two-port calibration](#), however, all measurements are performed in the forward and reverse direction. TOSM is also referred to as SOLT (Short – Open – Load (= Match) – Through) calibration. The four standards are used to derive 6 error terms for each signal direction:

- In addition to the **source match** and **reflection tracking** error terms provided by the one-path two-port calibration, TOSM also provides the **load match**.
- The **directivity** error is determined at both source ports.
- The **transmission tracking** is determined for each direction.

TOSM is a multi-port calibration type (number of ports: $n = 2, 3, \dots$). The number of required standard measurements and of error terms increases as shown in the following table.

Number of ports	Number of connected standards (complete TOSM model)	Number of standard measurements	Number of error terms
2	$2 * 3$ $+1 = 7$	$2 * 3$ $+2 * 1 = 8$	$2 * 3$ $+ 2 * 2 = 10$
3	$3 * 3$ $+ 2 + 1 = 12$	$3 * 3$ $+2 * (2 + 1) = 15$	$3 * 3$ $+ 2 * 2 * 3 = 21$
4	$4 * 3$ $+3 + 2 + 1 = 18$	$4 * 3$ $+2 * (3 + 2 + 1) = 24$	$4 * 3$ $+ 2 * 2 * 6 = 36$

An open, through and match measurement is required at each port; in addition, a through must be measured between any combination of ports and in both directions. Therefore the number N of standard connections for an n -port TOSM calibration is equal to

$$N = 3 \cdot n + \binom{n}{2} = 3 \cdot n + \frac{n!}{2! \cdot (n-2)!} = \frac{n}{2} \cdot (n+5)$$

The analyzer automatically performs each through measurement in both directions, so the number of connected standards is smaller than the number of measurements.



See also [Full n-port Calibration with Reduced Number of Through Connections](#) below.



TOSM with unknown Through, UOSM

The network analyzer supports different connector types at its test ports in order to measure DUTs with different port connectors. To perform a TOSM calibration, the DUT must be replaced by a through connection, which generally involves an adapter between the two connector types.

An adapter represents a through standard with unknown characteristics (in particular, with unknown delay time/transmission phase). The analyzer can perform a TOSM calibration with an unknown through, provided that it is reciprocal ($S_{21} = S_{12}$). The modified TOSM calibration is referred to as UOSM (Unknown through – Open – Short – Match) calibration. It can be selected as follows:

- If different connector types are assigned to the test ports, the analyzer automatically replaces TOSM → UOSM.
- If the same connector types are used but the appropriate through standard is not defined, the analyzer also replaces TOSM → UOSM.
- UOSM can be selected explicitly using *Channel – Calibration – Start Cal – Other...*

After acquiring the calibration sweep data for the unknown through, the analyzer automatically determines its delay time/transmission phase; see [Unknown Through Standard](#).

TOM Calibration

A TOM (Through – Open – Match) calibration requires a low-reflection, low-loss through standard with an electrical length that may be different from zero, an open, and a match. The characteristics of all standards must be fully known; the match may have non-ideal characteristics.

TRM Calibration

A TRM (Through – Reflect – Match) calibration requires a low-reflection, low-loss through standard with an electrical length that may be different from zero, a reflect, and a match. The magnitude of the reflection coefficient of the reflect standard can be unknown but must be nonzero; its phase must be roughly known (± 90 deg). The magnitude and phase of the reflection coefficient must be the same at both test ports.

TRM calibration is especially useful for DUTs in test fixtures.

TRL Calibration

A TRL (Through – Reflect – Line) calibration requires the two-port standards through and line, which are both assumed to be ideally matched. Beyond that, the through must be lossless, and its length must be exactly known. The length of the line standard must be known approximately.

Furthermore, a reflecting one-port standard (reflect) is needed. The magnitude of the reflection coefficient of the reflect standard can be unknown but must be nonzero; its phase must be roughly known (± 90 deg). The magnitude and phase of the reflection coefficient must be the same at both test ports.

TRL calibration is especially useful for DUTs in planar line technology (e.g. test fixtures, on-wafer measurements) where it is difficult to design and connect accurately modeled open, short or match standards. If TRL is not practicable, [TNA](#) may be an alternative.



The system of equations solved to derive the error terms is such that singularities occur whenever the length difference ΔL between the through and the line is an integer multiple of half of the wave length:

$$\Delta L \neq n \frac{\lambda}{2}$$

Refer to [TRL Extensions](#) to learn how to avoid singularities (extension with two lines, combination with TRM).

NIST Multiline TRL Calibration

A NIST (National Institute of Standards and Technology) Multiline TRL (Through – Reflect – Line) calibration requires one or more two-port line standards in addition to a through standard. The lengths of line and through standards must be known exactly and should be different from each other. Lossy line and through standards are permitted and can increase the overall accuracy. The propagation constants need not be known, however, they must be identical across all transmission (Through and Line) standards. A (preferably accurate) estimate for the effective relative permittivity of the transmission standards must be provided.

Furthermore, a reflecting one-port standard (reflect) is needed. The magnitude and phase of the reflection coefficient is required only to be approximately known, however it is assumed to be identical for both ports.

The calculation of the error correction terms is based on a publication by Roger B. Marks (R. B. Marks, "A Multiline Method of Network Analyzer Calibration", IEEE Transactions on Microwave Theory and Techniques, Vol. 39, No. 7, July 1991). The conventional TRL calibration is typically limited to a bandwidth no larger than 8:1. To accommodate for a wider bandwidth, a second line is normally employed and the band is split, where only one line measurement is evaluated for each portion of the band. In contrast, the NIST Multiline TRL method uses all line measurements simultaneously at each frequency point and appropriately weighs their contribution based on the expected error. In doing so this method uses a large amount of data that the conventional split-band TRL neglects. In addition it also eliminates calibration discontinuities at the frequency break points where in conventional TRL a transition from one line standard to another is required.


TNA Calibration

A TNA (Through – Network – Attenuation) calibration requires two-port standards only. Again, the through standard must be ideally matched and lossless. The symmetric network must have the same properties as the reflect standard used for a TRL calibration, i.e. the magnitude of its reflection coefficient can be unknown but must be nonzero; its phase must be roughly known (± 90 deg). The magnitude and phase of the reflection coefficient must be the same at both test ports. The attenuation standard must be well matched on both sides and cause an attenuation different from 0 dB; the exact value of the transmission coefficient is not important.

As with TRL, TNA calibration is especially useful for planar DUTs. If TNA is not practicable, [TRL](#) may be an alternative.

Full n-Port Calibration with Reduced Number of Through Connections

The analyzer can calculate the error terms for an full n-port calibration (TOSM, UOSM, TOM, TRM, TRL, TNA) after $(n - 1)$ Through measurements, provided that the Throughs connect all analyzer ports. To establish a sufficient set of Through connections, you can select an arbitrary analyzer port as a node port and measure all Through connections to this port. You can also connect all ports in increasing order, e.g. 1 --> 2, 2--> 3, 3--> 4 ...

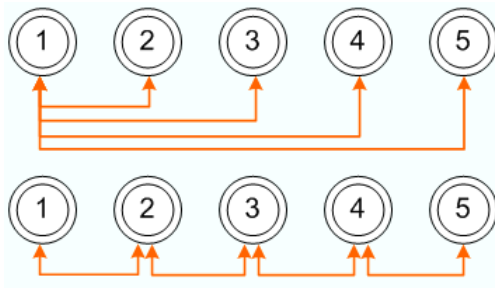

The general condition for the Through connections is that every port is connected at least once, and that the connections form no cycles (the connections correspond to a "tree" in graph theory).

The number of connected standards for this simplified TOSM / UOSM calibration is reduced to:

$$N = 3 \cdot n + (n - 1) = 4 \cdot n - 1.$$

Full n-port calibration with $(n - 1)$ Through connections is automatically active for all full n-port calibration types. As soon as a sufficient set of Through connections have been measured in the [Measure Standards](#) dialog, you can *Apply* the calibration.

You can also measure additional Through connections in order to improve the accuracy. Any number of through connections between the minimum number $(n - 1)$ and the complete full n-port model $(n!/(2 \cdot (n - 2)!))$ is allowed.



Full n-Port calibration with a reduced number of Through connections also allows you to calibrate an n-port analyzer with an m-port calibration unit, where $m < n$. See [Using Multiple Port Assignments](#).

Automatic Calibration

A *Calibration Unit* is an integrated solution for automatic system error correction of vector network analyzers. For analyzers of the R&S ZVAB family, Rohde & Schwarz provides different types of calibration units:

- The 2- and 4-port calibration units R&S ZV-Z51, R&S ZV-Z52, R&S ZV-Z53, R&S ZV-Z54, and R&S ZVA-Z55 are especially suited for R&S ZVB and R&S ZVA vector network analyzers.
- Within their respective frequency ranges, you may also use one of the calibration units R&S ZN-Z51 (2 or 4 ports) or R&S ZN-Z151 (2 ports)



Calibration unit	Recommended for	Frequency range	Connector type	No. of ports	Order no.
R&S ZV-Z51	R&S ZVB4, R&S ZVB8, R&S ZVA8	300 kHz to 8 GHz	3.5 mm (f)	4	1164.0515.30
R&S ZV-Z51	R&S ZVB4, R&S ZVB8, R&S ZVA8	300 kHz to 8 GHz	type N (f)	4	1164.0515.70
R&S ZV-Z52	R&S ZVB14, R&S ZVB20, R&S ZVA24	10 MHz to 24 GHz	3.5 mm (f)	4	1164.0521.30
R&S ZV-Z52	R&S ZVB14	100 kHz to 18 GHz	type N (f)	4	1164.0521.70
R&S ZV-Z53	R&S ZVB14, R&S ZVB20, R&S ZVA24	300 kHz to 24 GHz	3.5 mm (f)	2	1164.0473.32
R&S ZV-Z53	R&S ZVB14	300 kHz to 18 GHz	type N (f)	2	1164.0473.72
R&S ZV-Z54	R&S ZVA40	10 MHz to 40 GHz	2.92 mm (f)	2	1164.0467.92
R&S ZV-Z55	R&S ZVA50	10 MHz to 50 GHz	2.4 mm (f)	2	1164.0480.42
R&S ZN-Z51	R&S ZVB4, R&S ZVB8	100 kHz to 8.5 GHz	3.5 mm (f)	4	1319.5507.34
R&S ZN-Z51	R&S ZVB4, R&S ZVB8	100 kHz to 8.5 GHz	3.5 mm (f)	2	1319.5507.32
R&S ZN-Z51	R&S ZVB4, R&S ZVB8	100 kHz to 8.5 GHz	type N (f)	4	1319.5507.74
R&S ZN-Z51	R&S ZVB4, R&S ZVB8	100 kHz to 8.5 GHz	type N (f)	2	1319.5507.72
R&S ZN-Z51 custom configuration	R&S ZVB4, R&S ZVB8	The R&S ZN-Z51 allows a free/mixed port configuration with possible connector types N(m/f), 3.5mm (m/f) and 7/16 (m/f). With an N(f)-type CalU serving as base unit, for each available port an alternative connector type N(m), 3.5mm (m/f) or 7/16 (m/f) can be selected. For N(f)-type models alternative connectors can be also be retrofitted, but the calibration unit has to be sent to service for that and has to be characterized again. See the data sheet for ordering information. The frequency range for 7/16 connector ports is limited to 100 kHz to 7.5 GHz.			
R&S ZN-Z151	R&S ZVB4, R&S ZVB8, R&S ZVA8	100 kHz to 8.5 GHz	type N (f)	2	1317.9134.72
R&S ZN-Z151	R&S ZVB4, R&S ZVB8, R&S ZVA8	100 kHz to 8.5 GHz	type SMA (f)	2	1317.9134.32
R&S ZN-Z153	R&S ZVB4, R&S ZVB8, R&S ZVA8	100 kHz to 8.5 GHz	type SMA (f)	4	1319.6178.34

- The multiport calibration units R&S ZV-Z58, R&S ZV-Z59 and R&S ZN-Z152 are especially suited for R&S ZVT vector network analyzers.



Calibration unit	Recommended for	Frequency range	Connector type	No. of ports	Order no.
R&S ZV-Z58	R&S ZVT8	300 kHz to 8 GHz	type N	8	1164.0638.78
R&S ZV-Z58	R&S ZVT8	300 kHz to 8 GHz	3.5 mm	8	1164.0638.78
R&S ZV-Z59	R&S ZVT20	10 MHz to 20 GHz	3.5 mm	6	1164.0450.36
R&S ZN-Z152	R&S ZVT8	100 kHz to 8.5 GHz	type SMA (f)	6	1319.6003.36

The units contain calibration standards that are electronically switched when a calibration is performed. The calibration kit data for the internal standards are also stored in the calibration unit, so that the analyzer can calculate the error terms and apply the calibration without any further input.

- **Advantages of automatic calibration**

Automatic calibration is generally faster and more secure than manual calibration, because:

- There is no need to connect several standards manually. The number of connections to be performed quickly increases with the number of ports; see [TOSM Calibration](#).
- Invalid calibrations due to operator errors (e.g. wrong standards or improper connections) are almost excluded.
- No need to handle calibration kit data.
- The internal standards don't wear out because they are switched electronically.
- **Limitations:** Some calibration types (TOM, TRM, TRL, TNA) are not available.



Attention!

Please observe the safety instructions in the "Technical Information" provided with the calibration unit to avoid any damage to the unit and the network analyzer. Safety-related aspects of the connection and operation of the units are also reported in the sections below.

Power Calibration

The purpose of a power calibration is to ensure accurate source power levels and power readings at a particular position (reference plane) in the test setup. Power calibration is essentially different from the system error correction described in section [Calibration Overview](#). For best accuracy, a power calibration should be performed in addition to a system error correction.

In general, a power calibration involves two stages:

1. Source power calibration: An external power meter is connected to the reference plane. The analyzer modifies its source power until the power meter reading corresponds to the desired source power value.
2. Receiver power calibration: The analyzer uses the calibrated source signal to adjust the power reading at the receiver port.

The analyzer provides power calibration wizards for various measurement modes.

Offset Parameters

Offset parameters complement the system error correction and power calibration, compensating for the

known length and loss of a (non-dispersive and perfectly matched) transmission line between the calibrated reference plane and the DUT. The analyzer can also auto-determine length and loss parameters, assuming that the actual values should minimize the group delay and loss across the sweep range.

Optional R&S ZVA Extensions

The network analyzer can be upgraded with a number of hardware and software options, providing enhanced flexibility and an extended measurement functionality. The available options are listed in the *Info – Option Info* dialog. The R&S ZVA options listed below are described in detail in the reference chapters. For a complete list of options, accessories, and extras refer to the R&S ZVA product brochure.

Option	Option Name	Functionality
RS& ZVAB-K2	Time Domain	Transformation of the trace to time domain in order to analyze responses, transformation back to the frequency domain
R&S ZVA-K4	Arbitrary gen. and rec. frequencies, includes scalar Mixer and Harmonics measurements	Measurements at arbitrary (not necessarily equal) generator and receiver frequencies; scalar measurements on external RF mixers, harmonic distortion measurements, intermodulation distortion measurements
R&S ZVA-K5	Vector Mixer Measurement	Measurement of the parameters of an external mixer including phase, e.g. the complex conversion loss or reflection coefficients.
R&S ZVA-K6	True Differential Mode	Generation of true differential and common mode stimuli at arbitrary reference planes in the test setup and measurement of the mixed-mode S-parameters, wave quantities and ratios. Alternatively: Defined coherence mode, provides several source signals with defined phase and amplitude relation
R&S ZVA-K7	Measurements on Pulsed Signals	Pulsed measurements in analogy to a time sweep (i.e. at constant receiver frequency), but with a much higher sampling rate of 12.5/ns; includes R&S ZVA-K17.
R&S ZVA-K8	Converter Control	Measurements at frequencies beyond the analyzer's operating range
R&S ZVA-K9	Mixer Delay Measurements	Measurement of the absolute or relative group delay of a mixer
R&S ZVA-K10	Long Distance Mixer Delay Measurements	Mixer delay measurements with an external receiver
R&S ZVA-K17	5 MHz Receiver Bandwidth	Provides up to 5 MHz IF bandwidth, thus providing shorter measurement times for frequency, time, or CW sweeps; enhanced performance for point-in-pulse measurements.
R&S ZVA-K27	Pulse Generator	Provides two pulsed control signals to control pulsed measurements.
R&S ZVAB-K30	Noise Figure Measurement	Provides the noise figure of a DUT which operates in its linear range.
R&S ZVA-K31	Freq. Conv. Noise Figure	Provides the noise figure of a frequency-converting DUT which operates in its linear range.
R&S ZVAB-B4	Oven Quartz (OCXO)	The R&S ZVA can optionally be equipped with a 10 MHz oven-controlled crystal oscillator (OCXO) to enhance the frequency accuracy of the internal generators.
R&S ZVAB-B14	Universal Interface	Provides digital control signals for an external part handler; see .
R&S ZVA<frequency>-B16	Direct Generator/Receiver Access	Give direct access to various RF input and output signals, e.g. to insert external components into the signal path or develop custom measurements.
R&S ZVA<frequency>-B2x	Internal Generator Step Attenuator for port x = 1,2,3,4	Control the source power, e.g. to protect sensitive DUTs from excess input levels
R&S	Internal Receiver Step	Control the received power, e.g. to avoid damage to the analyzer

Option	Option Name	Functionality
ZVA<frequency>-B3x	Attenuator for port x = 1,2,3,4	

The following sections provide a short introduction to the software options.

Time Domain (R&S ZVAB-K2)

The network analyzer measures and displays complex S-parameters and other quantities as a function of the frequency. The measurement results can be filtered and mathematically transformed in order to obtain the time domain representation, which often gives a clearer insight into the characteristics of the DUT.

Time domain transforms can be calculated in bandpass or lowpass mode. For the latter the analyzer offers the impulse and step response as two alternative transformation types. A wide selection of windows can be used to optimize the time domain response and suppress sidelobes due to the finite sweep range. Moreover, it is possible to eliminate unwanted responses by means of a time gate and transform the gated result back into the frequency domain.

Arbitrary Generator and Receiver Frequencies (R&S ZVA-K4)

Measurements at arbitrary (not necessarily equal) generator and receiver frequencies provide a wealth of applications, e.g. intermodulation measurements vs. frequency and power, not S-parameter measurements.

For [intermodulation distortion](#) measurements, the analyzer provides a measurement and calibration wizard. Intermodulation products and intercept points of order 3, 5, 7, 9 can be measured at the input and at the output of the DUT.

The frequency conversion option also includes [Mixer and Harmonics](#) measurements.

Scalar Mixer and Harmonics (R&S ZVA-K4)

RF mixers convert an RF signal at one frequency into a signal at another frequency. The frequency that is to be shifted is applied at the RF input and the frequency shifting signal (from a local oscillator, LO) is applied to the RF mixer's LO port, resulting in an output signal at the mixer's Intermediate Frequency (IF) port.

For a given RF signal, an ideal mixer would produce only two IF outputs: one at the frequency sum of the RF and LO ($IF = RF + LO$), and another at the frequency difference between the RF and LO ($IF = |RF - LO|$). Filtering can be used to select one of these IF outputs and reject the unwanted one.

In the scalar mixer mode the analyzer provides the following functionality:

- Configuration of the RF and LO signals and measurement of the generated IF signal.
- Power calibration of the signal sources and of the IF receiver.
- The mixer mode can be used also to test important performance parameters of RF mixers such as frequency ranges, conversion loss, compression, and isolation.

Harmonics are signals at an integer multiple of the fundamental frequency. The fundamental is the first harmonic, the nth harmonic is n times the frequency of the fundamental. The production of harmonic frequencies by an electronic system when a signal is applied at the input is known as harmonic distortion.

The purpose of the harmonics measurement is to measure the harmonic distortion of a DUT. To this end the source remains at the fundamental frequency whereas the receiver is set to n times the fundamental frequency. Two different types of results are provided:

- In the direct measurement, the n th harmonic of the stimulus signal is measured.
- In the relative measurement, the n th harmonic of the stimulus signal is divided by 1st harmonic (fundamental) received from the DUT. The result corresponds to the n th harmonic distortion factor.

Vector Mixer Measurement (R&S ZVA-K5)

Measurement of the parameters of an external mixer including phase, e.g. the complex conversion loss or reflection coefficients. In contrast to scalar mixer measurements (with option R&S ZVA-K4), vector mixer measurements provide magnitude and phase information, including group delay, about the mixer under test (MUT). To assess the phase information, the IF signal at the mixer output is converted back to the original RF frequency using a second MEAS mixer. A third REF mixer ensures that the reference wave is converted back to the RF frequency.

True Differential Mode (R&S ZVA-K6)

Differential transmission lines and circuits are widely used, because their characteristics give them a lower susceptibility to electromagnetic interference. Linear balanced devices can be tested with sufficient accuracy using the virtual differential mode, where the vector network analyzer generates unbalanced stimulus signals and uses a mathematical transformation to convert unbalanced wave quantities into balanced S-parameters. A different behavior is expected for nonlinear balanced devices, where the transmission characteristics of the DUT may depend on how closely the stimulus signal matches real operating conditions.

In *True Differential Mode*, the vector network analyzer generates true differential and common mode stimuli at arbitrary reference planes in the test setup and determines mixed-mode S-parameters, wave quantities and ratios. The true differential mode also provides two additional sweep types, the amplitude imbalance and phase imbalance sweeps.

As an alternative to true differential mode, the *Defined Coherence Mode* provides several source signals with defined phase and amplitude relation.

Measurements on Pulsed Signals (R&S ZVA-K7)

Measurements on pulsed RF signals are required in many areas of RF and microwave technology. Pulsed signals are used in mobile phone applications and radar systems, and amplifiers are typically designed for pulsed rather than continuous wave (CW) conditions.

The analyzer performs pulsed measurements in analogy to a time sweep (i.e. at constant receiver frequency), but with a much higher sampling rate of 12.5/ns. The raw I/Q amplitudes are written into a ring buffer and processed at the end of each sweep. The buffer size allows for a maximum recording time (sweep time) of 3 ms. Due to the high sampling rate and the large IF bandwidths available, it is possible to obtain profiles for pulse widths from approx. 200 ns to the maximum recording time. Of course it is also possible to measure a sequence of pulses up to the maximum recording time.

Converter Control (R&S ZVA-K8)

Measurements at frequencies beyond the analyzer's operating range (mm-wave measurements) are achieved by combining a frequency-converting measurement with an external test set (frequency converter). The frequency converters use frequency multipliers to transform the RF source signal from one of the network analyzer ports into a high-frequency stimulus signal. A dual directional coupler separates the reference and measurement channels from the waveguide test port. A second signal (Local Oscillator, LO) is used for down-conversion of the reference and measurement channels. The LO signal can be provided either by a second analyzer port or by an external generator. The down-converted signals are fed to the REF IN and MEAS IN input connectors of the analyzer port providing the RF source signal.

Option R&S ZVA-K8 also comprises option ZVA-K4, *Frequency Conversion*.

Mixer Delay Measurements (R&S ZVA-K9 / -K10)

Measurement of a mixer's absolute or relative group delay. The mixer delay measurement is an extension of the scalar mixer measurement: The network analyzer generates a two-tone RF signal as a mixer input signal and measures the converted IF signal at the mixer output. The mixer delay is derived from the relative phases of the two-tone signals at the mixer input and the mixer output.

Compared to conventional measurement methods, the mixer delay measurement offers several additional advantages.

- No external mixers are needed.
- A network analyzer with standard functionality is sufficient.
- Easy calibration using a calibration mixer.

An additional option R&S ZVA-K10, Long Distance Mixer Delay, enables mixer delay measurements with an external receiver.

Pulse Generator (R&S ZVA-K27)

Provides two independent control signals at the CASCADE output connector on the rear panel of the network analyzer. The signals can be used to control a R&S ZVAX24 or R&S ZVAX-TRM Extension Unit equipped with a pulse modulator option.

Noise Figure Measurement (R&S ZVAB-K30)

Provides the noise figure of a DUT which operates in its linear range. The noise figure of a device is the ratio of the output signal-to-noise ratio (SNR) to the input SNR, provided that a thermal noise signal is fed to the input. It is a measure of the degradation of the SNR caused by the device.

The method of measurement offers several advantages:

- No additional noise source is required.
- The result can be obtained in a single sweep.
- The test setup is as simple as for a basic transmission measurement: The DUT must be connected only once. Moreover, it is possible to perform S-parameter measurements in parallel to the noise figure measurement.

Frequency Converting Noise Figure Measurement (R&S ZVA-K31)

Provides the noise figure of a frequency-converting DUT, e.g. a mixer or a system of two mixer stages. The measurement is performed in analogy to noise figure measurements on non-frequency-converting DUTs.

Mixer noise figure measurements also require options [R&S ZVAB-K30](#) and [R&S ZVA-K4](#).

4 Measurement Examples

This chapter provides examples for typical measurement tasks to be performed on the network analyzer.

To make yourself familiar with the instrument, use the simple measurement examples outlined in the Getting Started chapter. For a systematic explanation of all menus, functions and parameters and background information refer to the [Manual Control](#) reference.

Simple Measurement Tasks

Screen Control

Control of the analyzer's display elements is based on the standard Windows™ functionality. The following examples show you how to make efficient use of the functions.

To move an active setup window within the available space ...

1. Make sure that the window is not maximized (If necessary, click *Window – Cascade* to display all windows with their title bar).
2. Click the  icon in the title bar to open the setup control menu.
3. Click *Move*.

After the pointer changes to the four-headed arrow:

4. Press one of the direction keys (left, right, up, or down arrow key) to move the entire window without changing its size.
5. Press *ENTER* or left-click the window when it is at the position you want.

To size the active setup window ...

1. Make sure that the window is not maximized (If necessary, click *Window – Cascade* to display all windows with their title bar).
2. Click the  icon in the title bar to open the setup control menu.
3. Click *Size*.

After the pointer changes to the four-headed arrow:

4. Press one of the direction keys (left, right, up, or down arrow key) to move the pointer to the border you want to move.
5. Press a direction key to move the border.

Press *ENTER* or left-click the window when it is the size you want.

Display Configuration

The analyzer provides various tools that you can use to customize the diagram areas and control

elements. The following examples show how to change the display colors.

To select or define a color scheme for the diagrams and their display elements ...

1. Click *Display — Display Config — Color Scheme...* to open the [Color Scheme](#) dialog.
2. Select the *Predefined Scheme* that is most appropriate for your needs.
3. Click *Define User Scheme...* to open the [Define User Color Scheme](#) dialog.
4. Select a display element from the *Element* drop-down list.
5. Click the *Color* field to open a standard *Color* dialog and assign the color.

You can repeat the last 2 steps for as many elements as you like. For traces, you can also select a *Trace Style* and *Trace Width*. Your settings apply to all setups, they are permanent even after you close the network analyzer application.

6. If you wish to use several color schemes in parallel, click *Save* to save your current color scheme to a file.
7. If you wish to restore the original *Predefined Scheme*, click *System — System Config... — Resets — Reset Colors*.

To change the marker colors...

When you create [markers](#), their color is the same as the color of the associated trace. You can change the marker colors using the [Color Scheme](#) dialog.

1. Click *Display — Display Config — Color Scheme...*
2. Click *Define User Scheme...* to open the [Define User Color Scheme](#) dialog.
3. Select *Same Color for all Markers* from the *Element* drop-down list.
4. Click the *Color* field to open a standard *Color* dialog and assign the color.
5. Click *Use same Color for all Markers*.

All markers are displayed with the same color, irrespective of the trace colors.

Data Transfer

The following examples show you how to perform basic tasks related to data transfer from and to the analyzer.

To copy the active setup ...

1. Plug a USB stick into any of the [USB type A](#) connectors on the front or rear panel of the analyzer.
2. Click *File — Save* to open the *Save As* dialog.
3. Open the *Save in:* drop-down list and select the network drive labeled *Removable Disk* (most likely, drive E:) as file location.
4. Select a *File name* and click *Save* to store the data to the disk and close the *Save As* dialog.

The default extension for setup files (*.zvx) is appended automatically.

To load a setup stored on a USB memory stick...

1. Plug a USB stick into any of the **USB type A** connectors on the front or rear panel of the analyzer.
2. Click *File — Open* to open the *Open* dialog.
3. Open the *Look in:* drop-down list and select the network drive labeled *Removable Disk* (most likely, drive E:) as file location.

The setup files are displayed in the center of the dialog.

4. Select a file and click *Open* to load the setup as the active setup.

Setting up a Sweep

Configurations of the different **sweep types** require different procedures. The following examples list the essential settings for various sweep types.

To Set up a Lin. Frequency Sweep...

1. Press the *Sweep* key in the *Channel* keypad or click *Channel - Sweep* to access the **Sweep** submenu.
2. Click *Sweep Type – Lin. Frequency*.
3. Click *Channel – Stimulus* to access the submenu defining the sweep range.
4. To define a sweep range confined by a start and a stop frequency, use *Start* and *Stop*. Alternatively, to define a sweep range of definite width around a known center frequency (e.g. an expected peak), use *Center* and *Span*.
5. To vary the number of measurement points (e.g. to improve the resolution of the sweep or reduce the sweep time), click *Channel – Sweep – Number of Points*.

If the active diagram is a Cartesian diagram, the x-axis is linearly scaled and labeled with the *Start* and *Stop* frequencies.

To Set up a Log. Frequency Sweep...

1. Press the *Sweep* key in the *Channel* keypad or click *Channel - Sweep* to access the **Sweep** submenu.
2. Click *Sweep Type - Log. Frequency*.
3. Click *Channel - Stimulus* to access the submenu defining the sweep range.
4. To define a sweep range confined by a start and a stop frequency, use *Start* and *Stop*. Alternatively, to define a sweep range of definite width around a known center frequency (e.g. an expected peak), use *Center* and *Span*.
5. To vary the number of measurement points (e.g. to improve the resolution of the sweep or reduce the sweep time), click *Channel - Sweep - Number of Points*.

If the active diagram is a Cartesian diagram, the x-axis is logarithmically scaled and labeled with the *Start* and *Stop* frequencies.

To Set up a Segmented Frequency Sweep...

1. Press the *Sweep* key in the *Channel* keypad or click *Channel - Sweep* to access the [Sweep](#) submenu.
2. Click *Sweep Type - Define Segments* to call up the dialog defining the individual sweep segments. Proceed as described in [Define Segments](#) to customize your sweep range. Make sure to define at least 2 distinct sweep frequencies.
3. Use the controls in the *Individual Settings* panel to define the internal generator power, measurement (IF) bandwidth and other measurement settings for each sweep segment.
4. Close the *Define Segments* dialog.
5. Click *Sweep Type - Segmented Frequency*.

If the active diagram is a Cartesian diagram, the x-axis is linearly scaled and ranges from the lowest to the highest frequency in all segments.

To Set up a Power Sweep...

1. Press the *Sweep* key in the *Channel* keypad or click *Channel - Sweep* to access the [Sweep](#) submenu.
2. Click *Sweep Type - Power*.
3. In the *CW Frequency* entry bar opened, enter the fixed stimulus frequency for the power sweep.
4. Click *Channel - Stimulus* to access the submenu defining the sweep range.
5. To define the start and stop power, use *Start* and *Stop*.
6. To vary the number of measurement points (e.g. to improve the resolution of the sweep or reduce the sweep time), click *Channel - Sweep - Number of Points*.

If the active diagram is a Cartesian diagram, the x-axis is linearly scaled (in dB) and labeled with the *Start* and *Stop* powers.

To Set up a Time Sweep...

1. Press the *Sweep* key in the *Channel* keypad or click *Channel - Sweep* to access the [Sweep](#) submenu.
2. Click *Sweep Type - Time*.
3. In the *Time Sweep entry bar* opened, enter the fixed stimulus frequency (*CW Frequency*) and the internal generator power (*Source Power*) for the *Time* sweep.
4. Click *Channel - Stimulus* to access the submenu defining the sweep range.
5. To vary (extend) the sweep time, use *Stop*.
6. To vary the number of measurement points (e.g. to improve the resolution of the sweep or reduce the sweep time), click *Channel - Sweep - Number of Points*.

If the active diagram is a Cartesian diagram, the x-axis is linearly scaled and labeled with the start time 0 s and the *Stop* time.

To Set up a CW Mode Sweep...

1. Press the *Sweep* key in the *Channel* keypad or click *Channel - Sweep* to access the [Sweep](#) submenu.
2. Click *Sweep Type - CW Mode*.
3. In the *CW Mode* entry bar opened, enter the fixed stimulus frequency (*CW Frequency*) and the internal generator power (*Source Power*) for the sweep.
4. Click *Channel - Stimulus* to access the submenu defining the sweep range.
5. To vary the number of measurement points (implying a longer sweep time), use *Stop*.

If the active diagram is a Cartesian diagram, the x-axis is linearly scaled and labeled with the current numbers of the trigger events (measurement points).

Optimization

Optimizing the Measurement Speed

Minimizing the measurement time per sweep contributes to a high measurement throughput. The following parameters have an influence on the sweep time:

To find the best set of sweep points...

Limit the measurement to the stimulus range that you need for your device:

1. Click *Channel - Stimulus* to access the submenu defining the sweep range.
2. To define a sweep range confined by a start and a stop frequency, use *Start* and *Stop*. Alternatively, to define a sweep range of definite width around a known center frequency (e.g. an expected peak), use *Center* and *Span*. For power and time sweeps, proceed as described in [Setting up a Sweep](#).
3. Alternatively, use the [marker functions](#) to define the sweep range.

Use the minimum number of points that will produce an acceptable resolution:

1. Click *Channel – Sweep – Number of Points* and reduce the number of sweep points.

Use the segmented sweep to focus on different subranges of the sweep, using optimized channel settings for each subrange:

1. Set up a segmented frequency sweep as described in [Segmented Frequency](#).
2. Optimize the number of points and the [noise reduction](#) settings for each individual sweep segment.



The sweep time increases with the [Frequency Step Size](#).

To obtain the fastest measurement sequence...

Avoid delay times between the different partial measurements:

1. Click *Channel – Sweep – Sweep Time* and check *Auto*.

The analyzer determines the minimum sweep time according to the current channel settings. The sweep is performed at maximum speed without delay.

Avoid delay times between the end of the measurement sequence and the next trigger event:

2. If you don't need a special trigger mode, click *Channel – Sweep – Trigger* and make sure that *Free Run* is selected.

Avoid delay times between adjacent frequency points.

3. Click *Channel – Mode* and select *Alternating Sweeps* if the settling time between adjacent frequency points is larger than the settling time between the partial measurements.

To find the appropriate noise reduction settings...

Use the fastest IF filter that will produce acceptable dynamic range:

1. Press the *POWER BW AVG* key in the *Channel* keypad or click *Channel – Power Bandwidth Average* to access the corresponding submenu.
2. Select the widest *bandwidth* compatible with your measurement task.
3. If possible, click *Fine Adjust* to further increase the bandwidth. Avoid selecting *High Selectivity* unless it is required for your measurement.

Reduce the number of repeated measurements made to obtain an averaged result. Averaging does not slow down the measurement, however, several consecutive sweeps must be performed until an average result is available.

1. If averaging is not necessary, open the *Channel – Power Bandwidth Average* menu and make sure that *Average On* is not active.
2. Alternatively, click *Average Factor* and reduce the factor to a minimum.

Additional Hints (R&S ZVA67)

On R&S ZVA67 instruments, the alternating sweep mode speeds up all measurements which require several partial measurements. Select *Channel – Mode – Alternating Sweeps* to obtain the fastest measurement. See also section *Alternating Sweeps*.

Calibration

Calibrating a Measurement Channel

Calibration is the process of eliminating systematic, reproducible errors from the measurement results (system error correction). A measurement channel can be calibrated either manually or automatically using a suitable calibration unit (accessories R&S ZV-Z51 ... -Z59 or R&S ZN-Z51/-Z151):

Select and perform a manual calibration

In the following example a 2-port TOSM calibration is performed manually using the *Calibration Wizard*. Other calibrations can be performed in an analogous way.

1. Perform all channel settings for your measurement.
2. Click *Channel – Calibration – Start Cal – Two Port P1 P2 – Manual...* to open the calibration wizard for the desired calibration type.
3. In the *Select Physical Port Connector(s)* dialog, select the connector type that you use at port 1 and 2 (both connector types must be equal) and the [calibration kit](#). Click *Next >* to access the *Measure Standards* dialog.
4. Connect an open standard to port 1 and click the corresponding box in the *Measured Standards* list to initiate the calibration sweep and acquire the calibration data for this standard.
5. Repeat the last step for a short and a match connected to port 1, an open, short and match connected to port 2, and for a through between both ports.
6. Click *Apply* to start the calculation of the system error correction data, apply them to the current channel and close the calibration wizard.
7. Replace the last measured standard with your DUT and perform calibrated measurements without changing the channel settings used for calibration.

You can also access manual calibration from the [S-Parameter Wizard](#).

Perform an automatic calibration

In the following example a 4-port TOSM calibration is performed using a calibration unit (accessories R&S ZV-Z51 ... -Z59 or R&S ZN-Z51/-Z151). The calibration of other numbers of ports is analogous; see [Performing an Automatic Calibration](#).

Connect the calibration unit:

1. Switch on and start-up your network analyzer and establish a USB connection to the calibration unit; see [Connecting the calibration unit](#).
2. Connect ports 1 the unit to port 1 of the analyzer; repeat this for ports 2 to 4.

Perform the calibration:

3. Click *Channel – Calibration – Start Cal – Four Port P1 P2 P3 P4 – Calibration Unit* and wait until the calibration is completed. If a message box *All test port connectors will be changed to <Connector type>* pops up, confirm with OK.
4. Remove the connecting cables from the unit, connect your DUT instead and perform calibrated measurements.

You can also access automatic calibration from the [S-Parameter Wizard](#).

Creating a user-defined calibration kit

Predefined calibration kits do not always contain all necessary calibration standards for a particular calibration type. For advanced calibration types such as TRL with two or more Lines, you will have to create your own calibration kit. This is most conveniently done by copying an existing kit and adding new standards. To add a second Line standard to a kit containing a single Line,

- Click *Channel – Calibration – Cal Kits...* and use the *Calibration Kits* dialog to select an existing kit.
- Click *Copy Kit to...* and create a copy of the old kit using a new cal kit name.
- Select the kit from the *Calibration Kits in Use* table, click *View/Modify Kit*, and add the second Line standard with appropriate delay time. See [TRL calibration with 2 Lines](#) below.

Note that the gender combinations (mm, ff or mf) of both Lines must be equal.

TRL calibration with 2 Lines


Suppose you want to perform a [TRL](#) calibration using coaxial air Lines for the sweep range between 1 GHz and 40 GHz. The through standard has length l_{thr} . The ratio of the stop frequency to the start frequency is 40, therefore an accurate calibration with a single Line standard is not possible. However, it is possible to calibrate the entire sweep range with two Lines of different (electrical) lengths l_{long} and l_{short} ; see [TRL Extensions](#).

To determine the electrical lengths of the two Lines...

1. Select the length of the longer Line such that the transmission phase of $(l_{long} - l_{thr})$ at the start frequency of 1 GHz is equal to 20 deg: $l_{long} = \lambda(1\text{ GHz}) / 18 + l_{thr} = c_0 / (18 * 1\text{ GHz}) + l_{thr} = 1.666\text{ cm} + l_{thr}$, where c_0 is the velocity of light. This length corresponds to a delay time of $\Delta t_{long} = 55.55\text{ ps} + l_{thr}/c_0$.
2. Select the length of the shorter Line such that the transmission phase of $(l_{short} - l_{thr})$ at the stop frequency of 40 GHz is equal to 160 deg: $l_{short} = 4 * \lambda(40\text{ GHz}) / 9 + l_{thr} = 4 * c_0 / (9 * 40\text{ GHz}) + l_{thr} = 0.333\text{ cm} + l_{thr}$. This length corresponds to a delay time of $\Delta t_{short} = 11.11\text{ ps} + l_{thr}/c_0$.

To perform the calibration...

3. Make sure that the two Lines are included in a calibration kit, together with the Through and the Reflect standard required for the TRL calibration. See [Creating a user-defined calibration kit](#).
4. Still in the *Calibration Kits* dialog, click *Export Kit...* to save your settings to a cal kit file.
5. Close the *Calibration Kits* dialog.
6. Click *Channel – Calibration – Start Cal – Two Port P1 P2 – TRL...* to open the calibration wizard (see also [Manual calibration](#)).
7. In the *Physical VNA Test Port Connector(s)* dialog, select your *Connector* type and *Calibration Kit*. Click *Next >*.
8. In the *Measured Standards* dialog opened, perform the calibration sweeps for all standards including the two displayed Lines *Line 1* and *Line 2*.

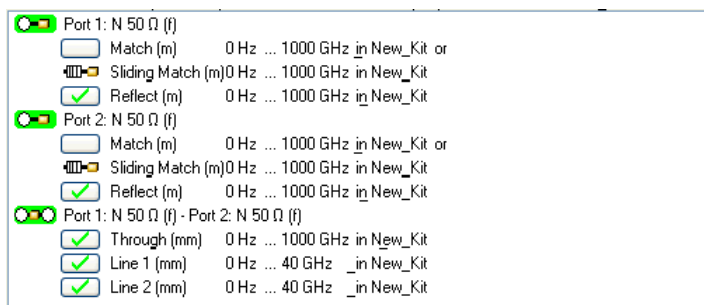

9. Click *Apply* to start the calculation of the system error correction data, apply them to the current channel and close the calibration wizard.
10. Replace the last measured standard with your DUT and perform calibrated measurements without changing the channel settings used for calibration.

TRL calibration with 3 Lines

Suppose you want to perform a [TRL](#) calibration using coaxial air Lines for the sweep range between 200 MHz and 40 GHz. The through standard has length l_{thr} . The ratio of the stop frequency to the start frequency is 200, therefore an accurate calibration with a single Line standard or even two Lines is not possible. However, it is possible to calibrate the entire sweep range with three Lines of appropriate (electrical) lengths $l_1 > l_2 > l_3$; see [TRL Extensions](#).

To determine the electrical lengths of the three Lines...

1. Select the length of the longest Line such that the transmission phase of $(l_1 - l_{thr})$ at the start frequency of 200 MHz is equal to 20 deg: $l_1 = \lambda (200 \text{ MHz} / 18) + l_{thr} = c_0 / (18 * 200 \text{ MHz}) + l_{thr} = 8.328 \text{ cm} + l_{thr}$, where c_0 is the velocity of light. This length corresponds to a delay time of $\Delta t_{long} = 277.78 \text{ ps} + l_{thr}/c_0$. The maximum frequency of the longest Line is 8 times its minimum frequency, i.e. 1.6 GHz.
2. Select the length of the shortest Line such that the transmission phase of $(l_3 - l_{thr})$ at the stop frequency of 40 GHz is equal to 160 deg: $l_3 = 4 * \lambda (40 \text{ GHz} / 9) + l_{thr} = 4 * c_0 / (9 * 40 \text{ GHz}) + l_{thr} = 0.333 \text{ cm} + l_{thr}$. This length corresponds to a delay time of $\Delta t_{long} = 11.11 \text{ ps} + l_{thr}/c_0$. The minimum frequency of the shortest Line is 1/8 of its maximum frequency, i.e. 5 GHz.
3. Select the length of the third Line in-between l_1 and l_2 , e.g. at 1.666 cm. This corresponds to a frequency range between 1 GHz and 8 GHz.


Perform the calibration as in the example above; [TRL calibration with 2 Lines](#). If you create a calibration kit with the three Lines and click *Channel – Calibration – Cal Kits – View/Modify Kit – Optimize Line Freq Ranges*, the analyzer will calculate the following transition frequencies between the lines:

- 1.5 GHz for the transition between Line 1 and Line 2.
- 7.5 GHz for the transition between Line 2 and Line 3.

TRL calibration with low-frequency TRM extension

Suppose you want to perform a [TRL](#) calibration using coaxial air Lines for the sweep range between 300 MHz and 4 GHz using a Line standard with an electrical length of $l_{long} = 16.6666 \text{ cm}$ and a through standard of $l_{thr} \ll l_{long}$. TRL calibration is known to become inaccurate in the frequency range below $f_{TRM} = c_0 / (18 * l_{long}) = 1 \text{ GHz}$; see [TRL Calibration with Two Lines](#). It is therefore advisable to perform a combined TRL/TRM calibration using an additional match or sliding match standard.

1. Make sure that the calibration kit contains a match or sliding match standard, in addition to the Line, the through and the reflect standards required for the TRL calibration. If necessary generate a cal kit file as described in section [TRL calibration with 2 Lines](#).
2. Click *Channel – Calibration – Start Cal – Two Port P1 P2 – TRL...* to open the calibration wizard (see also [Manual calibration](#)).
3. In the *Physical VNA Test Port Connector(s)* dialog, select your *Connector* type and *Calibration Kit*. Click *Next* >.
4. In the *Measured Standards* dialog opened, perform the calibration sweeps for the match (or sliding match) and the reflect standard at all ports. In addition, perform the calibration sweeps for the through and the Line (*Line 1*) between any combination of ports.

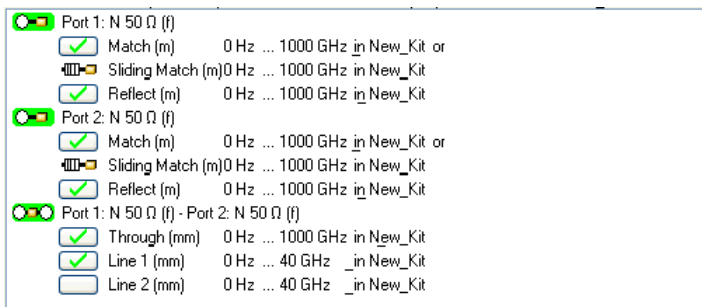

5. Click *Apply* to start the calculation of the system error correction data, apply them to the current channel and close the calibration wizard.
6. Replace the last measured standard with your DUT and perform calibrated measurements without changing the channel settings used for calibration.

NIST Multiline TRL with 5 Lines using a TEM connector

In the following example you will create a new connector type and calibration kit to perform a Two-Port NIST Multiline TRL calibration using 5 lines. You will also perform an optional reference plane transformation and store the calibration results for later use.

In order to **create a user-defined calibration kit with 5 Lines**, proceed as follows:

1. Click *Channel – Calibration – Cal Kits* and use the *Calibration Kits* dialog to add a new TEM connector for use with the new calibration kit. Click *Avail Conn Types...* to open the *Available Connector Types* dialog. Click *Add Type* and the [...] button in the *Offset Model* column to enter the Relative Permittivity ϵ_r .
2. Close both dialogs to return to the *Calibration Kits* dialog, select the calibration kit assigned to the connector created in step 1 and click *Copy Kit to...* to create a copy using a new cal kit name.
3. Click *View / Modify Kit...* to open the *View / Modify Calibration Kit* dialog and make sure you select the desired mode: Check *Agilent Mode* if you wish to use a delay to characterize your standards or uncheck *Agilent Mode* to use electrical lengths instead.
4. (Optional) Remove all standards except for Through, Reflect and the 3 Line standards of the appropriate gender.
5. Update the characteristics of the existing *Through*, *Reflect* and the 3 *Line* standards. Select each standard in turn and click *View / Modify Standard* to enter the appropriate values in the *View / Modify Standard* dialog.
6. Click *Add Standard...* to add the remaining 2 *Line* standards (*Line 4* and *Line 5*) selecting the appropriate gender and characteristic data. Note that the *Add Standard* dialog only has a single *Line* entry in the Type combo box. When you select the *Line* entry an additional index field will be displayed.

In order to **perform the manual calibration**, proceed as follows:

1. Click *Channel – Calibration – Start Cal – Two-Port P1 P2 – NIST Multiline TRL...* to launch the calibration wizard.
2. Select the connector created above and click *Next >*.
3. Connect the standards in turn and record the corresponding calibration sweeps. Note that the *Next >* button is enabled as soon as the *Reflect*, *Through*, and one of the *Line* measurements have been performed. While not strictly mandatory it is highly recommended to perform the remaining line measurements to significantly increase the accuracy of the calibration. Once all standards have been measured click *Next >* to move to the Reference Plane Transformation dialog.

4. Since the *NIST Multiline TRL* method produces an accurate result for the propagation constant it is possible to arbitrarily shift the reference plane. You can leave it at its default position (connector plane) or move it towards the DUT (positive values) or towards the connector (negative values) to meet your measurement requirements.
5. Click *Apply* to perform the calibration.

As with all other calibrations you can store the results to the Calibration Pool for later use. To do so click *Channel – Calibration – Cal Manager* to open the *Calibration Manager* dialog.

Waveguide Calibration using Kit R&S ZV-WR10

The waveguide calibration kit [R&S ZV-WR10](#) allows to calibrate network analyzers for test setups involving frequency converters, in particular R&S ZVA-Z110.



Accuracy considerations

- Thermal fluctuations cause linear expansion of the waveguide components and result in phase drift. An environment with a stable temperature within the range stated in the data sheet is a prerequisite for accurate measurements.
- A power calibration must be performed previous to system error correction. Refer to the documentation of your frequency converter for instructions.
- If you readjust the output power of the frequency converter (using the knurled knob at the top of the converter) an already performed system error correction is no longer valid. For that reason adjust the output power of the frequency converter before system error correction.


TOSM Calibration

The following example reports a TOSM calibration for a four port R&S ZVA analyzer which is connected to two frequency converters; see [Connecting the Converter](#). It is suitable for transmission and reflection measurements on two-port waveguide DUTs in the frequency range of the converters.


The calibration procedure using the analyzer's "Calibration Wizard" is straightforward (for details refer to the analyzer help system, section "Guided Calibration"):

1. Activate the Frequency Converter Mode ("System" > "System Config..." > "Frequency Converter") and connect the two converters.
2. Click "Channel" > "Start Cal" > "Two Port P1 P2" > "TOSM".

The calibration kit R&S ZV-WR10 is preinstalled. It is displayed in the "Select Physical VNA Test Port Connector(s)" dialog, together with the appropriate connector type.

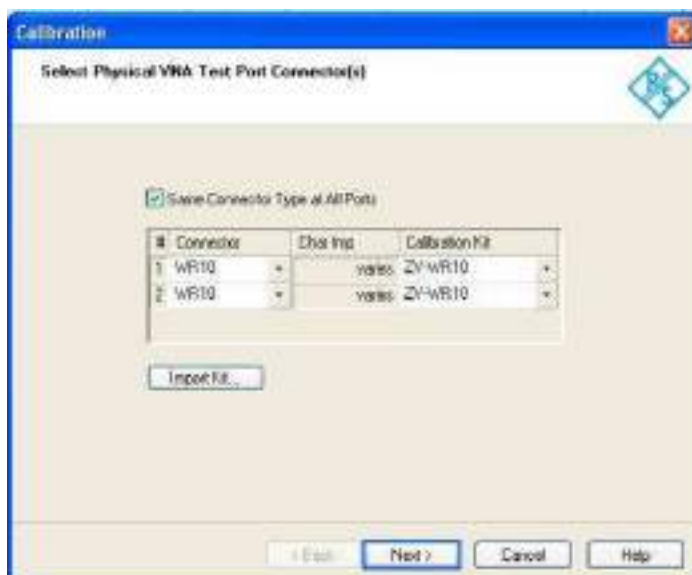

3. Click “Next” to proceed to the “Measure Standards” dialog.

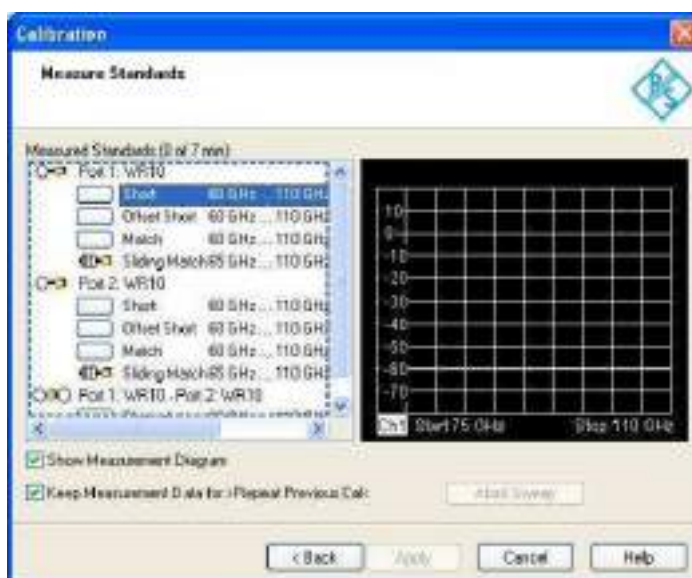

4. Connect the Short standard from the calibration kit to the frequency converter no. 1 (the converter with RF IN connected to the analyzer port no. 1) and click “Port 1: WR10” > “Short” to initiate the calibration sweep.
5. Proceed in a similar way, using the Short and the Shim in the calibration kit (producing an “Offset Short”) and the fixed Match.
6. Repeat the three one-port calibration sweeps at frequency converter no. 2 (the converter with RF IN connected to the analyzer port no. 2).
7. Connect the two waveguide flanges directly and click “Port 1: WR10 – Port 2: WR10” > “Through” to initiate the transmission calibration sweep.
8. Click “Apply” to calculate and apply the system error correction data and close the wizard.



You can use the [sliding match](#) instead of the fixed match in order to improve the accuracy of the system error correction. Both standards cover the same frequency range.

You can check the calibration by measuring a standard that was not used during the system error correction. If you use the sliding match for system error correction, you can use the fixed match to check the calibration. Note that this check is incomplete (e.g. the transmission is not verified when using a one-port standard like a fixed match).

UOSM Calibration

UOSM calibration uses an unknown through and yields two solutions related to different transmission phase values. The two solutions differ by 180 deg - only one solution is valid. Any two-port network whose S-parameters fulfill the reciprocity condition $S_{21}=S_{12}$ can be used as an unknown through (e.g. a waveguide bend).

Within a coaxial system the analyzer selects the correct solution automatically. This is not possible in a waveguide system because the delay time is frequency-dependent (dispersive propagation). The valid solution has to be selected manually. For this purpose the following dialog opens during calculation of the system error correction data (see step 8 above):



Check "Dispersive" and select the right solution from the "Phase" drop-down list.

Waveguide Calibration using Kit R&S ZV-WR03

The waveguide calibration kit [R&S ZV-WR03](#) allows to calibrate network analyzers for test setups involving [frequency converters](#), in particular R&S ZVA-Z325.



Accuracy considerations

- Thermal fluctuations cause linear expansion of the waveguide components and result in phase drift. An environment with a stable temperature within the range stated in the data sheet is a prerequisite for accurate measurements.
- A power calibration must be performed previous to system error correction. Refer to the documentation of your frequency converter for instructions.
- If you readjust the output power of the frequency converter (using the knurled knob at the top of the converter) an already performed system error correction is no longer valid. For that reason adjust the output power of the frequency converter before system error correction.

TRL Calibration


The following example reports a TRL calibration for a four port R&S ZVA analyzer which is connected to two frequency converters; see [Connecting the Converter](#). It is suitable for transmission and reflection measurements on two-port waveguide DUTs in the frequency range of the converters.

The calibration procedure using the analyzer's "Calibration Wizard" is straightforward (for details refer to the analyzer help system, section "Guided Calibration"):


1. Activate the Frequency Converter Mode ("System" > "System Config..." > "Frequency Converter") and connect the two converters.

- Click “Channel” > “Start Cal” > “Two Port P1 P2” > “TRL”.

The calibration kit R&S ZV-WR03 is preinstalled. It is displayed in the “Select Physical VNA Test Port Connector(s)” dialog, together with the appropriate connector type.

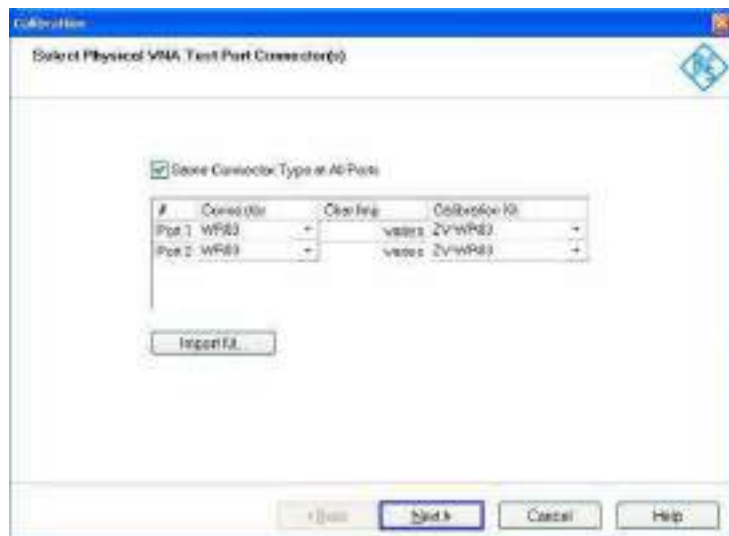

- Click “Next” to proceed to the “Measure Standards” dialog.

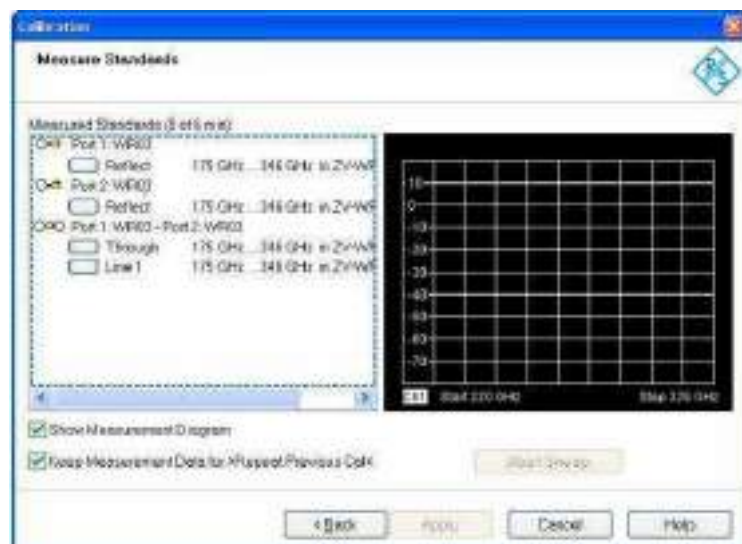

- Connect the Short standard from the calibration kit to the frequency converter no. 1 (the converter with RF IN connected to the analyzer port no. 1) and click “Port 1: WR03” > “Reflect” to initiate the calibration sweep.
- Proceed in a similar way, using the Short at Port 2.
- Establish the through connection using the Shim #1 between the ports.
- Establish the line connection using the Shim #2 between the ports.
- Click “Apply” to calculate and apply the system error correction data and close the wizard.



With calibration techniques involving a match standard (M) you can use the [sliding match](#) instead of

the fixed match in order to improve the accuracy of the system error correction. Both standards cover the same frequency range.

You can check the calibration by measuring a standard that was not used during the system error correction (e.g. the fixed match to check a TRL calibration). Note that this check is incomplete (e.g. the transmission is not verified when using a one-port standard like a fixed match).

UOSM Calibration

UOSM calibration uses an unknown through and yields two solutions related to different transmission phase values. The two solutions differ by 180 deg - only one solution is valid. Any two-port network whose S-parameters fulfill the reciprocity condition $S_{21}=S_{12}$ can be used as an unknown through (e.g. a waveguide bend).

Within a coaxial system the analyzer selects the correct solution automatically. This is not possible in a waveguide system because the delay time is frequency-dependent (dispersive propagation). The valid solution has to be selected manually. For this purpose the following dialog opens during calculation of the system error correction data (see step 8 above):

Unknown Through Between Ports	Dispersive	Delay Time	Phase
Port 1: WR03 - Port 2: WR03	☒		-79.1°

Check "Dispersive" and select the right solution from the "Phase" drop-down list.

Trace Evaluation

Operations on Traces


Trace Mathematics

Mathematical relations between traces can be used to compare different traces, correct traces, re-design measurements or create new measurements. Trace mathematics is always based on linear, complex trace data (irrespective of the actual trace format).

To compare two traces displayed in dB Mag format...

Suppose you have created a channel no. 1 with two traces named Trc1 and Mem2[Trc1] and that you wish to compare the magnitudes of the two traces.

1. Display the traces in a common diagram area using the default trace format dB Mag (see **example** of two traces with approx. constant magnitude difference).

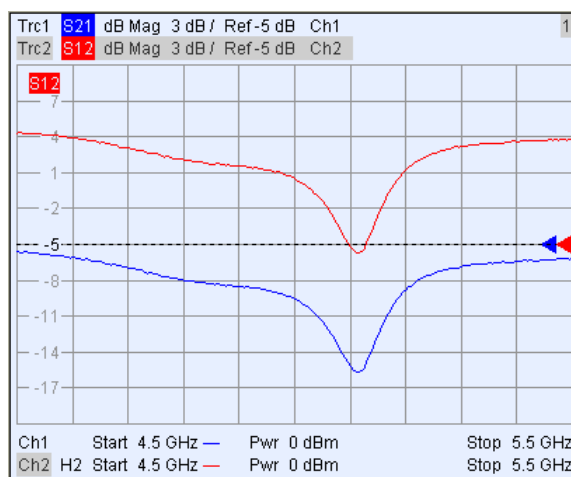


- Click *Trace – Trace Select – Add Trace* to add a new trace to the diagram area. The new trace is automatically assigned a trace name (e.g. *Trc3*) and selected as the active trace.
- Click *Channel – Trace Funct – User Def Math* to open the *User Def Math for Trc3* dialog and enter the following mathematical relation for the new trace: **Trc1/Mem2[Trc1]**. Click *OK* to confirm your definition and close the dialog



- Select *Trace – Trace Funct – Math = User Def* to display *Trc3* as a mathematical trace.

The mathematical relation $Trc1/Mem2[Trc1]$ is applied to the linear trace data. In logarithmic representation, the effect is a subtraction of the two traces. The mathematical trace shows the difference of the dB Mag values of *Trc1* and *Mem2[Trc1]*. In our **example** the difference trace is approximately constant.

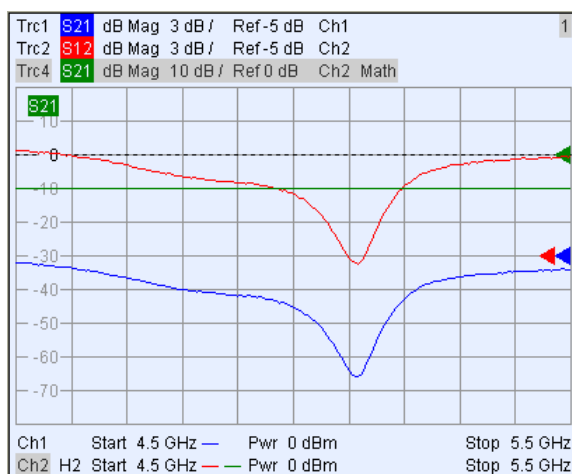

Trace Statistics

After measuring a quantity across the selected sweep range, the analyzer can analyze the trace and determine various statistical results.

To determine the x-dB compression point...

1. Press the *Sweep* key in the *Channel* keypad or click *Channel - Sweep* to access the *Sweep* submenu.
2. Click *Sweep Type - Power*. In the *CW Frequency* input field opened, enter the fixed stimulus frequency for the power sweep.
3. Click *Channel - Stimulus - Start* and *Channel - Stimulus - Stop* to define the power sweep range.
4. Click *Trace - Measure* and select an *S-Parameter* or a *Ratio* to be measured.
5. Click *Trace - Format* and ensure that the trace format is *dB Mag*.
6. Click *Trace Funct - Trace Statistics - Compression Point* to activate the compression point evaluation.

A marker is placed to the compression point. To refine the measurement, you can vary the *Compression Value* and the *Evaluation Range* in the *Trace Statistics* submenu.

Time Domain Measurements

With option ZVAB-K2, *Time Domain*, you can view the measurement results as a function of time.

To set up a time domain measurement...

1. Reset the analyzer to ensure that the following operating mode is set: *Sweep Type: Lin.*
Frequency, Trace - Meas.: S21, Trace - Format: dB Mag.
2. Open the *Trace - Meas* menu and select the measured quantity to be transformed (preferably: an

S-parameter or ratio).

3. Click *Trace - Trace Func - Time Domain - Time Domain* to transform the active trace to the time domain.

The transformed trace is displayed in the active diagram area. To refine the analysis, you can modify the number and position of the sweep points (*Channel - Sweep - Number of Points*, *Channel - Stimulus*), select a different transform type and window (*Trace - Trace Func - Time Domain - Define Transform...*) and vary the time range (*Trace - Trace Func - Time Domain - Time Domain Stimulus Axis...*).

To eliminate an unwanted response from the measured trace...

1. Calculate a time domain transform as described above, [Setting up a time domain measurement](#).
2. Click *Trace - Trace Func - Time Domain - Define Time Gate* and place a time gate on the transformed trace. To remove a single response use a *Notch* gate type. To remove everything outside a specified area, use a *Bandpass* gate type.
3. Click *Trace - Trace Func - Time Domain - Time Gate* to enable the time gate. If necessary, go back to the *Define Time Gate* dialog to correct your time gate settings.
4. Click *Trace - Trace Func - Time Domain - Frequency Domain*.

The frequency domain trace now corresponds to the modified time domain trace which is transformed back into the frequency domain.

Port Conversion

Defining a Balanced Ports Configuration


The *Balanced Ports and Port Groups* dialog comprises the functions for balanced port definition. The following examples show how to define and use balanced ports.

To perform a balanced measurement...

The following example shows how to perform S-parameter measurements on a 2-port DUT with balanced input and balanced output using a 4-port network analyzer. You can either use a [predefined port configuration](#) with fixed port assignments or define your [own port configuration](#).

To use a predefined port configuration,

1. Click *Trace – Measure – More S-Params... – Balanced Ports and Port Groups...*
2. In the *Predefined Configs* tab of the *Balanced Ports and Port Groups* dialog opened, select the port configuration that is suitable for your DUT.

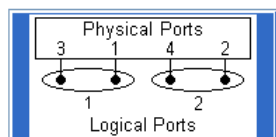

3. Open the *Def Balanced Port* tab and assign the appropriate differential and common mode reference impedances to both logical ports.

4. Connect your DUT to ports 1 to 4 of the network analyzer as shown in the figure above.
5. Click **OK** to close the *Balanced Ports and Port Groups* dialog.
6. Back in the *More S-Parameters* dialog, select the balanced S-parameter that you wish to measure.
7. Click **OK** to close the *More S-Parameters* dialog and perform the measurement.



You can also access all the described settings from the [Measurement Wizard](#).

To use your own port configuration,

1. Click *Trace – Measure – More S-Params... – Balanced Ports and Port Groups...*
2. In the *Def Balanced Port* tab of the *Balanced Ports and Port Groups* dialog opened, select *Logical Port # 1* and assign two *Physical Port Numbers*, e.g. 1 and 2.
3. Assign the appropriate differential and common mode reference impedances to logical port no. 1 and Click *Define*.
4. Select *Logical Port # 2* and assign the two remaining *Physical Port Numbers*, e.g. 3 and 4.
5. Assign the appropriate differential and common mode reference impedances to logical port no. 2 and Click *Define*.

The *Def Balanced Port* tab shows the balanced port configuration:



1. Connect one balanced port of your DUT to ports 1 and 2 of the network analyzer, the other balanced port of your DUT to ports 3 and 4 of the network analyzer, in accordance with the selected reference impedances.
2. Click **OK** to close the *Balanced Ports and Port Groups* dialog.
3. Back in the *More S-Parameters* dialog, select the balanced S-parameter that you wish to measure.
4. Click **OK** to close the *More S-Parameters* dialog and perform the measurement.

Using Virtual Networks (Embedding/Deembedding)

The *Virtual Transform* menu provides the functions for embedding/deembedding a DUT into/from virtual networks. The following examples show how to use the functions.

To add a virtual transformation network to a single-ended port...

Suppose that your DUT is a 2-port DUT with single ended ports.

1. Connect the DUT to your analyzer: For a two-port measurement, connect the DUT between test ports 1 and 2 of the analyzer.

2. Establish the necessary *Channel* settings (port configuration, sweep range and type etc.) and select the measured quantities (*Trace – Measure*).
3. Click *Channel – Mode – Virtual Transform – Single Port Embedding...* dialog.
4. In the dialog, select the *Physical Port* to which you want to add a virtual transformation network (e.g. *Physical Port 1*) and do one of the following:
5. If you wish to define the added network by an imported set of 2-port S-parameters, select the *2-Port* transformation network, click *Read Data From File*, and load the parameters from a 2-port (*.s2p) Touchstone file.
6. If you wish to define the added network by an equivalent circuit, select the circuit type and adjust the parameters R, C, and L displayed in the right half of the dialog.
7. Click *Embed DUT* and *Close* the dialog.

The traces of the active channel show the characteristics of the DUT including the virtual transformation network inserted between port 1 of the analyzer and the DUT.



You can also assign two-port networks to balanced ports; see [Combination of 2-Port and 4-Port \(De-\)Embedding Networks](#).

To remove a real transformation network from a single-ended port...

Suppose that your 2-port DUT has a real, known 2-port transformation network at port 1.

1. Connect the DUT (including the transformation network) between test ports 1 and 2 of the analyzer so that the transformation network is placed between port 1 of the analyzer and the DUT.
2. Establish the necessary *Channel* settings (port configuration, sweep range and type etc.) and select the measured quantities (*Trace – Measure*).
3. Click *Channel – Mode – Virtual Transform – Single Port Deembedding...* dialog.
4. In the dialog, select the *Physical Port* connected to the physical transformation network (e.g. *Physical Port 1*) and do one of the following:
5. If your transformation network is described by an imported set of 2-port S-parameters, select the *2-Port* transformation network, click *Read Data From File*, and load the data from a 2-port (*.s2p) Touchstone file.
6. If your transformation network can be described by an equivalent circuit, select the circuit type and adjust the parameters R, C, and L displayed in the right half of the dialog.
7. Click *Deembed DUT* and *Close* the dialog.

The traces of the active channel show the characteristics of the DUT without the effects of the removed physical transformation network.



You can also assign two-port networks to balanced ports; see [Combination of 2-Port and 4-Port \(De-\)Embedding Networks](#).

To add a virtual transformation network to a balanced port...

Suppose that your DUT has a single-ended and a balanced port and that you want to add a virtual 4-port network to the balanced port.

1. Connect ports 1 and 3 of a 3- or 4-port analyzer to the balanced ports of the DUT, connect port 2 to the single ended port of the DUT.
2. Click *Channel – Mode – Port Config... – Balanced Ports and Port Groups... Predefined Configs* and define the appropriate balanced port configuration (see also [Balanced Measurement Examples](#)), combining ports 1 and 3 of the analyzer to logical port no. 1.
3. Establish the necessary *Channel* settings (sweep range and type etc.) and select the measured quantities (*Trace – Measure*).
4. Click *Channel – Mode – Virtual Transform – Balanced Port Embedding* to open the *Balanced Port Embedding...* dialog.

In the dialog, the *Logical Port* no. 1 (the only balanced port) is already selected. To add a virtual network, do one of the following:

5. If you wish to define the added network by an imported set of 4-port S-parameters, select the *4-Port* transformation network, click *Read Data From File*, and load the parameters from a 4-port (*.s4p) Touchstone file.
6. If you wish to define the added network by an equivalent circuit, select the circuit type and adjust the parameters R, C, and L displayed in the right half of the dialog.
7. If you wish to use a combination of 2-port S-parameters and lumped circuit elements, select the appropriate *Serial 2-Port..* transformation network, import the 2-port files for each of the physical ports 1 and 3, and adjust the remaining R, C, and L parameters.
8. Click *Embed DUT* and *Close* the dialog.

The traces of the active channel show the characteristics of the DUT including the virtual transformation network inserted between the logical port 1 of the analyzer and the balanced DUT port.

To remove a real transformation network from a balanced port...

Suppose that your DUT has a single-ended and a balanced port and a real, known 4-port transformation network at the balanced port.

1. Connect the DUT (including the transformation network) to your 3- or 4-port analyzer: Connect ports 1 and 3 of the analyzer to the outer connectors of the transformation network, connect port 2 to the single ended port of the DUT.
2. Click *Channel – Mode – Port Config... – Balanced Ports and Port Groups... Predefined Configs* and define the appropriate balanced port configuration (see also [Balanced Measurement Examples](#)), combining ports 1 and 3 of the analyzer to logical port no. 1.
3. Establish the necessary *Channel* settings (sweep range and type etc.) and select the measured quantities (*Trace – Measure*).
4. Click *Channel – Mode – Virtual Transform – Balanced Port Deembedding* to open the *Balanced Port Deembedding...* dialog.

In the dialog, the *Logical Port* no. 1 (the only balanced port) is already selected. To virtually remove the physical network, do one of the following:

5. If you wish to describe the network by an imported set of 4-port S-parameters, select the *4-Port* transformation network, click *Read Data From File*, and load the parameters from a 4-port (*.s4p) Touchstone file.
6. If you wish to describe the network by an equivalent circuit, select the circuit type and adjust the parameters R, C, and L displayed in the right half of the dialog.
7. If you wish to use a combination of 2-port S-parameters and lumped circuit elements, select the

appropriate *Serial 2-Port..* transformation network, import the 2-port files, and adjust the remaining R, C, and L parameters.

8. Click *Deembed DUT* and *Close* the dialog.

The traces of the active channel show the characteristics of the DUT without the effects of the removed physical transformation network.

Using True Differential Mode

In *True Differential Mode*, the analyzer can generate balanced waves at arbitrary reference planes in the test setup and determine balanced results. The true differential mode also provides two additional sweep types.

Measuring balanced wave quantities and ratios...


The following example shows how to activate the true differential mode in order to perform balanced measurements on a 2-port DUT with balanced input and balanced output using a 4-port network analyzer. You can use a [predefined port configuration](#) with fixed port assignments.

To prepare the measurement,

1. Perform a full calibration of all four (single-ended) analyzer ports, preferably using a calibration unit for automatic (TOSM) calibration. You can also use the calibration wizard, e.g. if you want to use one of the 7-term calibration types (TNA, TRL, ...); see [Calibrating a Measurement Channel](#).
2. Preferably, perform a source [power calibration](#) at the input of your DUT.

To obtain balanced ratios,

1. Click *Trace – Measure – Ratios – More Ratios...*
2. In the *Port Configuration* panel of the *More Ratios* dialog opened, click *Balanced Ports and Port Groups*.
3. In the *Predefined Configs* tab of the *Balanced Ports and Port Groups* dialog opened, select the port configuration that is suitable for your DUT.

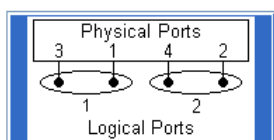

NOTE The true differential mode requires logical port combinations with independent power sources. Do not use ports 1/2 or ports 3/4 to create a logical port.

Exception: On R&S ZVA67 and on R&S ZVA24/40 network analyzers with four ports and four generators, all ports have independent internal sources. You can use true differential mode with an arbitrary combination of two source ports.

4. Still in the *Predefined Configs* tab, enable *True Differential Mode*.
5. Open the *Def Balanced Port* tab and assign the appropriate differential and common mode reference impedances to both logical ports.
6. Click *OK* to close the *Balanced Ports and Port Groups* dialog.

7. Connect one balanced port of your DUT to ports 1 and 3 of the network analyzer, the other balanced port of your DUT to ports 2 and 4 of the network analyzer, in accordance with the selected port combination and reference impedances.
8. Back in the *More Ratios* dialog, select the balanced ratio that you wish to measure.
9. Click *OK* to close the *More Ratios* dialog and perform the measurement.


To obtain balanced wave quantities,

1. Calibrate your test setup, define the balanced port configuration and set the reference impedances as described above.
2. Click *Trace – Measure – Wave Quantities – More Wave Quantities...*
3. Select the balanced wave quantity that you wish to measure.
4. Click *OK* to close the *More Wave Quantities* dialog and perform the measurement.

Measuring balanced S-parameters...

The following example shows how to activate the true differential mode in order to obtain mixed-mode S-parameters. We use a 2-port DUT with balanced input and balanced output and a 4-port network analyzer as described above.

1. Calibrate your test setup as outlined above ([Measuring balanced wave quantities and ratios](#))
2. Click *Trace – Measure – More S-Params...*
3. In the *Port Configuration* panel of the *More S-Parameters* dialog opened, click *Balanced Ports and Port Groups*.
4. In the *Predefined Configs* tab of the *Balanced Ports and Port Groups* dialog opened, select the port configuration that is suitable for your DUT.

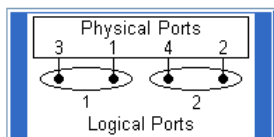

NOTE The true differential mode requires logical port combinations with independent power sources. Do not use ports 1/2 or ports 3/4 to create a logical port.

Exception: On R&S ZVA67 and on R&S ZVA24/40 network analyzers with four ports and four generators, all ports have independent internal sources. You can use an arbitrary combination of two source ports.

5. Open the *True Diff Mode* tab and enable *True Differential Mode*.
6. Open the *Def Balanced Port* tab and assign the appropriate differential and common mode reference impedances to both logical ports.
7. Click *OK* to close the *Balanced Ports and Port Groups* dialog.
8. Connect one balanced port of your DUT to ports 1 and 3 of the network analyzer, the other balanced port of your DUT to ports 2 and 4 of the network analyzer, in accordance with the selected port combination and reference impedances.
9. Back in the *More S-Parameters* dialog, select the mixed-mode S-parameter that you wish to measure.
10. Click *OK* to close the *More S-Parameters* dialog and perform the measurement.



You can also access all the described settings from the [Measurement Wizard](#).

Performing an amplitude or phase imbalance sweep...

Amplitude or phase imbalance sweeps are special sweep types in true differential mode. The analyzer generates a balanced signal at one of its logical ports, however, the amplitude of one signal component or the relative phase of the two components is varied according to a selected sweep range.

In the following examples we use a 2-port DUT with balanced input and balanced output and a 4-port network analyzer as described above.

1. Calibrate your test setup, define the appropriate port configuration and enable true differential mode as outlined above ([Measuring balanced wave quantities and ratios](#)).

To perform an amplitude imbalance sweep,

2. Click *Channel – Sweep – Sweep Type: Amplitude Imbalance*.
3. In the *Amplitude Imbalance Sweep* dialog opened, select the logical Port 1 (comprising the physical ports 1 and 3) as the swept port. The second logical port will continue providing an undisturbed balanced stimulus signal.
4. Select the *CW Frequency* and the reference power (*Source Power at 0 dB*) for the sweep.
5. Close the dialog, click *Channel – Stimulus – Start* to define the start power of port 3 relative to the *Source Power at 0 dB*.
6. Click *Channel – Stimulus – Stop* to define the stop power of port 3 relative to the *Source Power at 0 dB*.
7. Click *Trace – Measure – More S-Params...* and select the measured mixed-mode S-parameter.
8. Click *OK* to close the *More S-Parameters* dialog and perform the measurement.

To perform a phase imbalance sweep,

2. Click *Channel – Sweep – Sweep Type: Phase Imbalance*.
3. In the *Phase Imbalance Sweep* dialog opened, select the logical Port 1 (comprising the physical ports 1 and 3) as the swept port. The second logical port will continue providing an undisturbed balanced stimulus signal.
4. Select the *CW Frequency* and the constant *Source Power* for the sweep.
5. Close the dialog, click *Channel – Stimulus – Start* to define the start phase difference between the physical ports 3 and 1.
6. Click *Channel – Stimulus – Stop* to define the stop phase difference between the physical ports 3 and 1.
7. Click *Trace – Measure – More S-Params...* and select the measured mixed-mode S-parameter.
8. Click *OK* to close the *More S-Parameters* dialog and perform the measurement.

Measuring frequency converting DUTs...

In a true differential measurement on frequency-converting DUTs, accurate powers are of particular importance. This means that a system error calibration and a subsequent power calibration is required (see [True Differential Mode on Frequency-Converting DUTs](#)).

The following example shows how to perform scalar mixer measurements on a differential mixer with balanced RF input and IF output ports and a single-ended LO input. With a four-port analyzer, a possible test setup involves the following connections:

- Analyzer ports 1 and 3 to the mixer's RF input port
- Analyzer ports 2 and 4 to the mixer's IF output port
- LO signal provided by an external generator (must be configured in the *System Configuration* dialog)

Perform the measurement steps in the following order:

1. **Activate scalar mixer mode:** Click *Channel – Mode – Scalar Mixer – Define Scalar Mixer Meas.* Select the external generator as LO source and define the RF frequency range.
2. **System error correction:** Connect a calibration to the four (single-ended) analyzer ports and perform a full four-port (UOSM) calibration.
3. **Power calibration:** Perform a source power calibration at ports 1 and 3 (one power calibration for each true differential port).
4. **Activate true differential mode:** Open the *Balanced Ports and Port Groups* dialog as described above, combine ports 1 / 3 and ports 2 / 4 to balanced ports, and enable true differential mode.
5. **Measurement:** Connect the DUT and measure the desired balanced or mixed mode S-parameters (*Trace – Measure...*).

Harmonics Measurements

In the [Harmonic Distortion](#) menu you can measure arbitrary harmonics or ratios between harmonics and the fundamental wave (harmonic distortion factor).

To measure a harmonic of arbitrary order n...

1. Reset the analyzer to ensure that the following operating mode is set: *Sweep Type: Lin. Frequency, Trace - Meas.: S21, Trace - Format: dB Mag.*
2. Open the *Channel - Stimulus* menu and reduce the *Stop* frequency to the maximum frequency of your analyzer divided by n where n is the order of the harmonic you want to measure.
3. Click *Channel - Mode - Harmonics - More Harmonics*. In the dialog opened select the *Harmonic Order* you want to measure.
4. Adjust the *Source* port and the receive port (*Harmonics Measured at*) to your test setup (for a DUT connected between port 1 and 2 of the analyzer you can keep the default settings).
5. Close the *More Harmonics* dialog to enable the harmonics measurement and observe the changed default trace *Trc1*.

The trace shows the nth harmonic as a wave quantity b_2 . The measured quantity is changed automatically when the harmonics measurement is enabled.



Use 2nd Harmonic Port1 to Port2 and 3rd Harmonic Port1 to Port2 to activate the measurement of the second and third harmonics with a single menu command.

To obtain a harmonic distortion factor...

1. Reset the analyzer to ensure that the following operating mode is set: *Sweep Type: Lin. Frequency, Trace - Meas.: S21, Trace - Format: dB Mag.*
2. Open the *Channel - Stimulus* menu and reduce the *Stop* frequency to the maximum frequency of your analyzer divided by *n* where *n* is the order of the harmonic distortion factor you want to measure.
3. Click *Channel - Mode - Harmonics - More Harmonics*. In the dialog opened select the *Harmonic Order* you want to measure.
4. Adjust the *Source* port and the receive port (*Harmonics Measured at*) to your test setup (for a DUT connected between port 1 and 2 of the analyzer you can keep the default settings).
5. Close the *More Harmonics* dialog to enable the harmonics measurement.
6. Click *Relative Measurement* and observe the new mathematical trace *Trc2*.

The trace belongs to a new channel *Ch2* and shows the *n*th harmonic distortion factor as a wave quantity *b₂*. With the default trace format the result is displayed in dB units.

Noise Figure Measurement

The following example outlines the essential steps for a [noise figure](#) measurement. The measurement comprises the following stages:

1. [Activating the measurement and basic settings](#)
2. [Power and noise figure calibration](#)
3. [S-Parameter calibration](#)
4. [Measurement](#)


The procedure described below is valid for a test setup with the following external devices:

- An attenuator between the NWA source port and the DUT input limits the source power.
- A pre-amplifier between the DUT output and the NWA receive port can reduce the noise figure of the NWA receiver.



The Noise Figure Setup Guide guides you through the measurement procedure outlined below. All required settings and dialogs are accessible from the setup guide.

Test setup for noise figure measurement

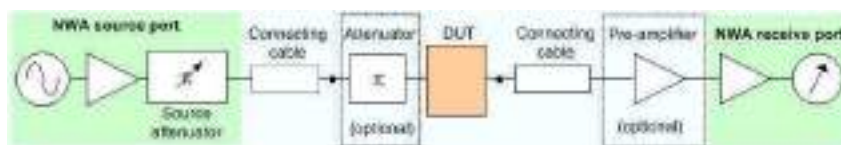

We assume that *Port 1* is used as the NWA source port, *Port 2* is used as the receive port. Generalization to other port assignments or to test setups without external attenuator and/or pre-amplifier is self-explanatory.

To activate the measurement...


1. Reset the analyzer to ensure that the basic operating mode is set: *Sweep Type: Lin. Frequency, Trace - Measure: S21, Trace - Format: dB Mag.*
2. Adjust the sweep range to your DUT, e.g. *Channel - Stimulus - Start: 1GHz, Stop: 6 GHz.*
3. Open the *Channel - Mode - Noise Figure Meas* menu and select *Define Noise Figure Measurement.*
4. Keep the default settings for measurement time and mode; click *OK* to activate the noise figure measurement.

After activating the measurement, the *Noise Figure Calibration* function is available.

Performing a power and noise figure calibration...

Calibration involves several stages. The first stage is a regular [power calibration](#) of the NWA source and receiver.

1. Connect an external power meter to the end of the cable between the NWA source port (port 1) and the attenuator input.

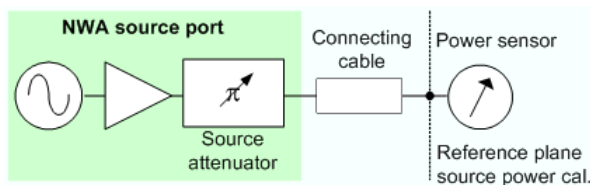

2. Select *Channel - Calibration - Start Power Cal - Source Power Cal* and calibrate the port 1 source power in the usual way. Ensure that the calibrated source power will not overdrive the pre-amplifier / NWA receiver system.
3. Remove the external power sensor and close the connection between port 1 and port 2.



4. Select *Channel - Calibration - Start Power Cal - Receiver Power Cal* and calibrate the port 2 receiver power (wave quantity b_2) in the usual way. For high input powers at the NWA receive port, it is recommended to set the *IF Gain b* to *Low Distortion* (*Channel - Mode - Port Configuration*). Make sure that the power calibration is applied to the active channel.

The power calibration is complemented by a *Noise Figure Calibration*.

5. Select *Channel - Mode - Noise Figure Meas - Noise Figure Cal* to open the calibration wizard.
6. Perform the three calibration steps as described in section [Noise Figure Calibration](#). Make sure that the calibration is applied to the active channel.

Performing an S-parameter calibration...

An S-parameter calibration is required for S-parameter measurements in parallel to the noise figure

measurement. You can choose between a one path two port and a full two port calibration for the analyzer ports 1 and 2. It is recommended to select the AVG detector in the calibration wizard.

Perform a manual or automatic calibration for your test setup as outlined in the [Calibration](#) example.


To measure the noise figure...

The default trace shows the forward transmission coefficient S_{21} , which is a measure of the gain, if the measured DUT is an amplifier. For a wide class of test setups the noise figure of the DUT can be measured and displayed in parallel to the S-parameters.

1. Establish the measurement test setup, connecting the external attenuator and the DUT as shown above (see [Test setup for noise measurement](#)).
2. Select *Trace - Trace Select - Add Trace + Diag Area* to create a new trace *Trc2*.
3. Select *Trace - Measure - Noise Figure*. In the dialog opened, ensure matching port assignments (*Dut Input: Port 1, Dut Output: Port 2*) and click *OK*.

The new trace *Trc2* shows the noise figure of the DUT. You do not have to repeat any of the preliminary steps (activation, calibration ...) if you wish to measure several DUTs using the same channel settings.

The figure below shows the noise figure and gain of a 3 dB amplifier. For convenience, the two traces *Trc1* and *Trc2* were renamed *Noise_Figure* and *Gain*, respectively. The second trace was assigned to a second channel.

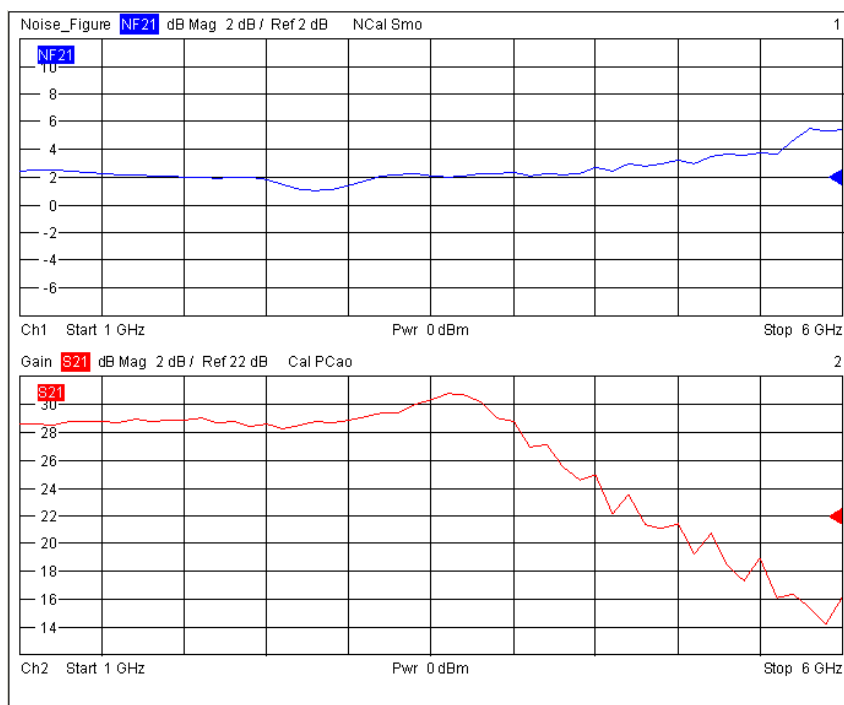

5 GUI Reference

This chapter explains all functions of the analyzer and their application. It is organized according to the menus/softkey groups of the user interface.

The topics in this chapter can be called up directly using the HELP key or the *Help* buttons in the dialogs.

For a general overview of the analyzer's capabilities and their use refer to the [System Overview](#).


Control Menus

The *Control* menu provide standard Windows™ functions to control windows. The analyzer provides two types of *Control* menu with analogous function:

- Clicking the  icon opens the *Control* menu for the main application window. To access this icon the [Title Bar](#) of the main application window must be open.
- Clicking a  icon opens the *Control* menu for an individual setup window. If a setup window is maximized, the icon is placed to the left of the *File* menu.

Double-clicking a control icon is the same as clicking the  icon or the *Close* menu command.

(No direct access via front panel keys)

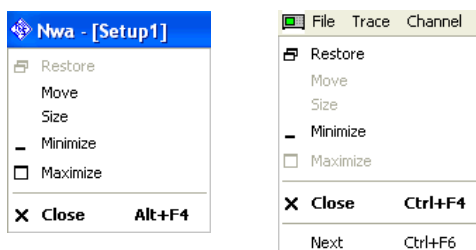

The *Control* menu contains the following functions:

- [Restore](#) returns the active window to its size and position.
- [Move](#) displays a cursor symbol to moves the active window within the available space.
- [Size](#) displays a cursor symbol to size the active window.
- [Minimize](#) reduces the active window to an icon.
- [Maximize](#) enlarges the active window to fill the available space.
- [Close](#) closes the application.
- [Next](#) switches to the next open setup window.

Restore

Returns the maximized or minimized active window to its size and position. *Restore* is available after a *Maximize* or *Minimize* command only.

Move

Displays a four-headed arrow to move the active window with the arrow keys or with the mouse.



This command is unavailable for maximized windows.

Size

Displays a four-headed arrow to change the size of the active window using the arrow keys or the mouse.

Minimize

Reduces the active window to an icon.



You can also configure the NWA application to be started with a minimized window; see *Startup Procedure*.

Maximize

Enlarges the active window to fill the available space.

Close

Closes the active setup window (setup control menu) or ends the analyzer session (application control menu).

- In a setup window the analyzer suggests to save changes to the setup before closing it. If a setup is closed without saving, all changes made since the last time it was saved are lost.
- In the application window the analyzer prompts you to save setups with unsaved changes.



The *Close* application command is equivalent to the [Exit](#) command in the *File* menu. Moreover *Close* is the same as double-clicking a *Control* menu icon or clicking the  icon in the title bar of the active window.

Next

Selects the next diagram area as the active diagram area. This command is available in setup control menus only and is disabled if only one setup is defined.


File Menu

The *File* menu provides standard Windows™ functions to create, save, recall or print setups, to copy the current screen and to shut down the application.

Setups

A setup comprises a set of diagram areas with all displayed information that can be stored to a NWA setup file (*.zvx). Each setup is displayed in an independent window.

- The [Window](#) menu commands arrange different windows on the screen.
- The [File](#) menu is used to organize setups.

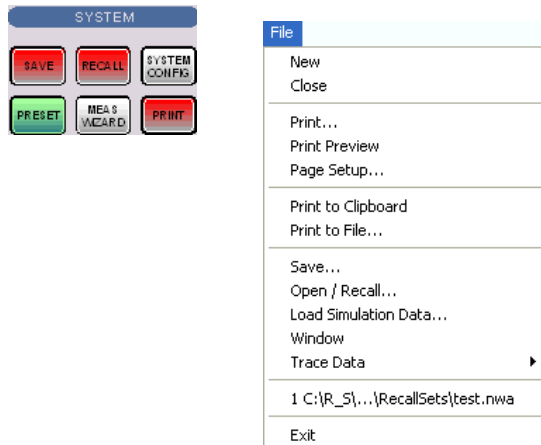

The [File](#) menu contains the following functions:

- [New](#) creates a new setup and opens a new setup window.
- [Close](#) closes an opened setup window.
- [Print](#) prints a setup.
- [Print Preview](#) displays the setup on the screen as it would appear printed.
- [Page Setup...](#) selects a printer and printer connection.
- [Print to Clipboard](#) copies the screen contents to the clipboard in order to be pasted into another application.
- [Print to File...](#) opens a dialog to select a file and file format to store the screen contents.
- [Save](#) saves an opened setup to a specific file.
- [Open/Recall](#) recalls an existing setup from a file.
- [Window](#) displays the softkeys of the [Window](#) menu.
- [Trace Data](#) opens a submenu to store one or several data or memory traces to a file or loads a memory trace from a file. The submenu is also part of the [Trace](#) menu ([Trace – Trace Funct – Import/Export Data](#)).
- [1 Set<n>.zvx](#) etc. is a list of the last 4 setups stored in the current or in previous sessions.
- [Exit](#) closes the application.

New

Creates a new setup and opens a new setup window. The new setup is named *Setup<n>* where <n> is the current number for all created setups.



To open an existing setup, select **File – Open / Recall**. To rename a setup, use **File – Save As**.

Remote control: `MEMory:DEFine "<setup_name>"`

Close

Closes an opened setup window. The analyzer suggests to save changes to the setup before closing it. If a setup is closed without saving, all changes made since the last time it was saved are lost.

Remote control: `MEMory:DElete[:NAME] "<setup_name>"`


Print

Prints the active setup. This command opens a standard Windows™ **Print** dialog box to, specify the range of pages to be printed, the number of copies, the destination printer, and other printer setup options.

Remote control: The commands in the `HCOPY...` system provide the printer settings.
`HCOPY[:IMMediate]` initiates the print.

Print Dialog

Provides options to specify how the setup should be printed. **Print** is opened by means of the **File – Print...** command.

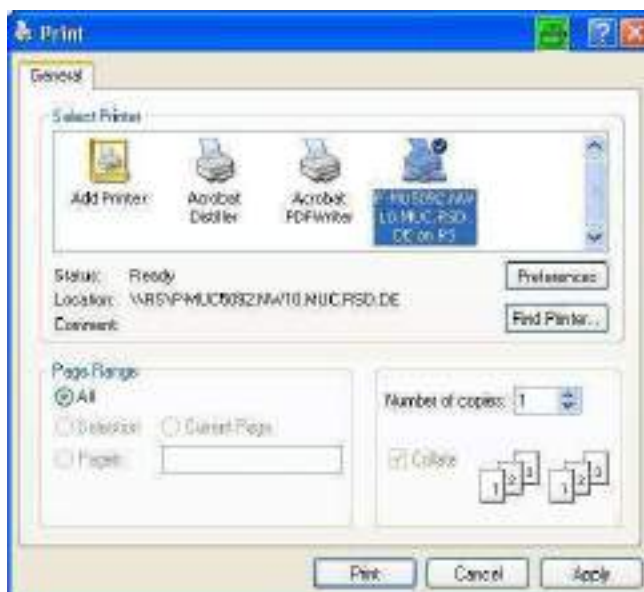

The following printer options are remembered when the dialog is closed:

- **Select Printer** displays the active printer and printer connection. The printers and printer connections can be selected from the *Name* drop-down list.

- *Preferences* opens a dialog to select the layout and paper format and specify further printer options.
- *Find Printer* opens a dialog to select and install a printer that is not yet installed on the instrument.
- *Page Range* specifies the pages to be printed. The analyzer prints the entire setup.
- *Number of Copies* specifies the number of copies to be printed for the above page range.




To select further printer options, open the [Print Setup](#) dialog.


Remote control: `HCOPY:DESTination`
`HCOPY[:IMMediate]`

Print Preview

Displays the active setup as it would appear when printed. The analyzer generates one printed page for each diagram area in the setup. The main window is replaced with a print preview window in which one or two pages/diagram areas are displayed in their printed format.

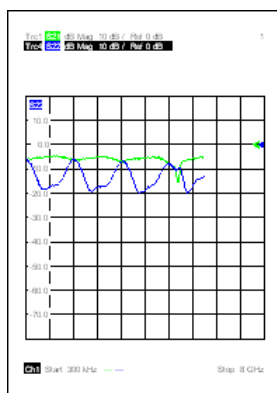

Across the top of the screen the print preview toolbar offers options to view either one or two pages/diagram areas at a time; move back and forth through the setup; zoom in and out of pages/diagram areas (2 steps possible); initiate a print job or close the preview without printing:



Remote control: No commands for check on screen.
`HCOPY[:IMMediate]` initiates the print.

Page Setup


Selects a printer and a printer connection. This command presents a [Page Setup](#) dialog box to specify the printer and its connection.

Page Setup Dialog

Provides options to specify how the document should be printed. *Page Setup* is opened by means of the *File – Page Setup...* command.



- *Paper – Size* specifies the size of paper that the document is to be printed on.
- *Paper – Source* specifies the paper source, because some printers offer multiple trays for different paper sources.
- The radio buttons in the *Print* panel specify whether or not different diagram areas are printed on different pages.
- The radio buttons in the *Orientation* panel specify whether the pages are printed in Portrait or Landscape format.
- The *Margins* panel contains input fields to define a margin on each of the four edges of the pages.
- The check boxes in the *Add* panel select additional information to be included in the printed document.
- *Printer...* opens the *Page Setup* dialog to select the printer and printer connection. The printers can be selected from the *Name* drop-down list. *Network...* opens a dialog to configure the printer connections. *Properties* opens a dialog to select the layout and paper format and specify further printer options.

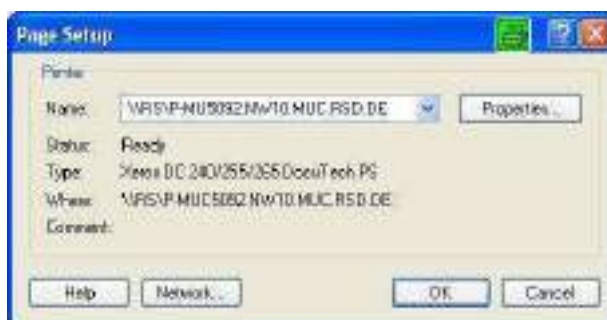

- [Preview](#) shows the active setup as it would appear when printed.



To select the *Print Range* and start printing, open the [Print](#) dialog. Use standard Windows techniques to install printers and configure ports.

Remote control: `HCOPY:DESTination`
`HCOPY:DEvice:LANGuage`
`HCOPY:ITEM:ALL`
`HCOPY:ITEM...`
`HCOPY:PAGE...`
`HCOPY:ORientation`
`HCOPY[:IMMediate]`

Print to Clipboard

Copies the current screen or a portion of it to the clipboard in order to be pasted into another application.



Use [Print to File](#) to copy the screen contents to a file with a selectable bitmap format. *Print to File* also provides options to specify which portion of the screen is copied to the clipboard.

Print to File

Opens a [Print to File](#) dialog to select a file and file format to store the current screen contents.

Remote control: `HCOPY:DESTination 'MMEM'`

Print to File Dialog

Provides options to specify how the screen contents are stored to a file. *Print to File* is opened by means of the *File* – [Print to File](#) command.



- **Save in** specifies the drive and directory in which the screen contents are stored. The icons to the right of the pull-down list are provided for easy navigation in the file system (place the cursor on the icons to obtain *What's this?* help).
- **File Name** specifies a file name to save the screen contents. The analyzer adds the extension (e.g. *.emf) selected in the **Save As Type** box.
- **Save** saves the screen contents in the selected file and directory and closes the dialog. The print options are maintained and can be reused when *Print to File* is used for the next time.
- **Cancel** closes the dialog without saving the screen contents.
- The **Options...** panel provides options to specify whether the entire screen (*All Diag. Areas*) or a portion of it (*Active Diag. Area*, *Marker Table Only*) is copied, whether or not the *logo* The default R&S logo (file Logo.gif) is stored in the Resources\Images subdirectory of the NWA program directory and can be replaced by another logo., date and time is placed above the selected output, and whether the analyzer displays a message to be confirmed before overwriting an existing file. The options are remembered when the dialog is closed.



After a file has been saved, the selected copy *Options* are also used if the screen is copied to the clipboard.

Remote control: `HCOPY:DEStination 'MMEM'`
`HCOPY:DEvice:LANGuage`
`HCOPY:MITEM...`
`HCOPY:MPAGe:WINDow`
`HCOPY[:IMMediate].`


Save

Saves and names the active setup. The analyzer opens a standard Windows™ [Save As](#) dialog box to select a NWA setup file name (*.zvx) and location for the [setup file](#).

Remote control: `MMEMory:STORe:STATe 1,"<file_name>"`

Save As Dialog

Specifies the name and location of a particular file (e.g. a NWA setup file) to save:

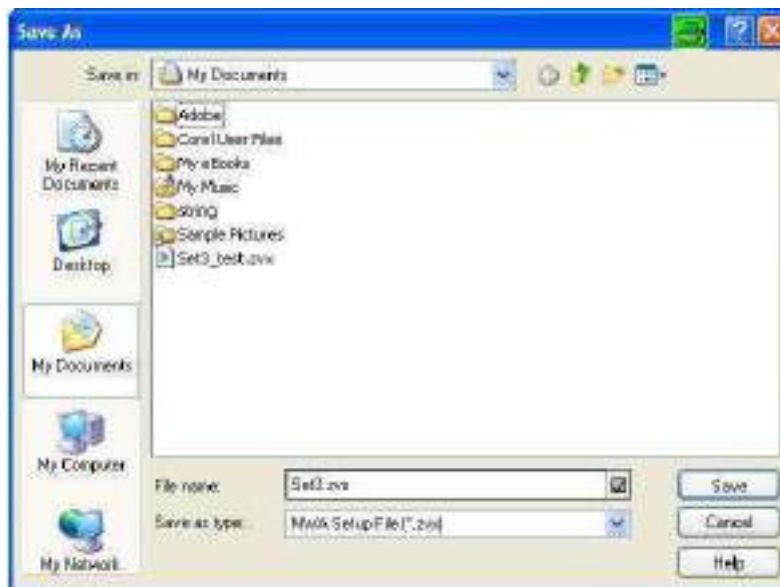

- *File Name* specifies a file name to save the current data (e.g. the setup). The analyzer adds the extension (e.g. *.zvx) in the *Save As Type* box.
- *Save in* specifies the drive and directory in which the data is stored. The icons to the right of the pull-down list are provided for easy navigation in the file system (place the cursor on the icons to obtain *What's this?* help).
- *Save* saves the data (e.g. the active setup) in the selected file and directory and closes the dialog.
- *Cancel* closes the dialog without saving the data.




The Save As dialog is used to store various data types (e.g. cal kit data, limit lines, sweep segment lists, ...). Depending on its use the dialog is opened with different file locations and data types. File locations (directories) are remembered when the dialog is closed. To restore default directories use the System – System Configuration – Resets dialog.

Open / Recall

Recalls an existing setup from a file. The analyzer opens a standard Windows™ [Open File](#) dialog box to select the file from all NWA setup files (*.zvx) stored on the file system.

It is not possible to open the same setup in different windows. If an opened setup is changed and an

attempt is made to open the same setup again the analyzer displays a warning:

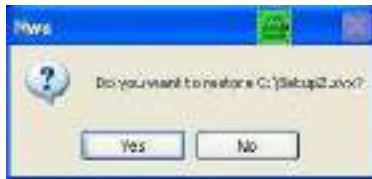

Yes overwrites the changes in the opened setup, No closes the message box, leaving the opened setup unchanged.



It is possible to create and open several setup files with the same contents but different names or locations. To open/recall a setup file (*.zvx) you can also use the Windows Explorer and simply double-click the file or drag and drop the file into the NWA application. The imported setup becomes the active setup.

Remote control: `MMEMory:LOAD:STATe 1,"<file_name>"`

Open File Dialog

Specifies the name and location of a particular file (e.g. a NWA [setup file](#)) to open:

- *Look in* specifies the drive and directory in which the file to open is stored. The icons to the right of the pull-down list are provided for easy navigation in the file system (place the cursor on the icons to obtain *What's this?* help).
- *File Name* specifies a file name (e.g. a setup file, *.zvx) to open. The file can be selected by clicking on the directory overview above.
- *Open* opens selected file and closes the dialog.
- *Cancel* closes the dialog without opening a setup file.

Recent File

Is a placeholder which is replaced by a list of the last 4 setups stored in the current or in previous sessions. Clicking an item in the list opens the corresponding setup.



Use the setup list in the [Window](#) menu to switch between different open setups.

Remote control: `MEMory:CAT?` (returns a list of the loaded files).

Exit

Ends the analyzer session. The analyzer prompts you to save setups with unsaved changes.



This command is equivalent to the [Close](#) command on the application Control menu.

Trace Menu

The *Trace* menu provides all trace settings and the functions to select, modify and store different traces. In addition the menu provides the marker, search and limit check functions.




Traces

A trace is a set of data points that can be displayed together in a diagram area. The trace settings specify the mathematical operations used in order to obtain traces from the collected data. They can be divided into several main groups:

- Selection of the measured quantity (S-parameters, wave quantities, ratios, impedances,...)
- Conversion into the appropriate display format and selection of the diagram type
- Scaling of the diagram and selection of the traces associated to the same channel
- Readout and search of particular values on the trace by means of markers
- Limit check

The trace settings complement the definitions of the *Channel* menu. Each trace is assigned to a channel; see [Traces, Channels and Diagram Areas](#). The channel settings apply to all traces assigned to the channel.

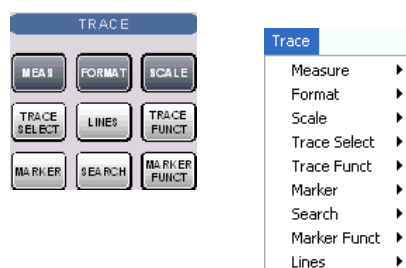


The *Trace* menu contains the following functions and submenus:

- [Measure](#) selects the quantity to be measured and displayed.
- [Format](#) defines how the measured data is presented in the graphical display.
- [Scale](#) defines how the current trace is presented in the diagram selected in the *Format* submenu.
- [Trace Select](#) provides functions to handle traces and diagram areas, and assign traces to channels.
- [Trace Funct\(ions\)](#) store traces to the memory and perform mathematical operations on traces.
- [Marker](#) positions markers on a trace, configures their properties and selects the format of the numerical readout.
- [Search](#) uses markers to locate specific points on the trace.
- [Marker Funct\(ions\)](#) define the sweep range, scale the diagram and introduce an electrical length offset using the active marker.
- [Lines](#) defines limits for measured values and activates the limit check.

Measure

The *Measure* submenu selects the quantity to be measured and displayed.

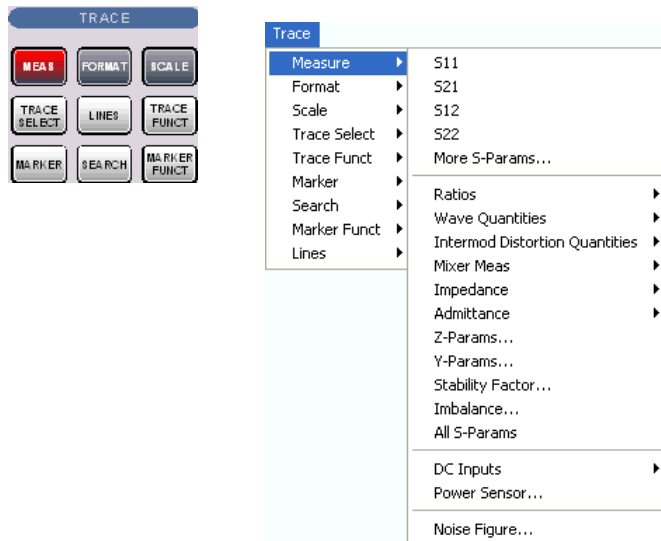

- [S11, S12, S21, S22](#) select the four elements of the standard 2-port scattering matrix (S-parameters).
- [More S-Parameters](#) opens a dialog to select S-parameters for multiport measurements or mixed mode S-parameters.
- [Ratios](#) opens a submenu to select and define ratios of wave quantities.
- [Wave Quantities](#) opens a submenu to select the absolute (unratioed) power of the analyzed signals (wave quantities).
- [Intermod Distortion Quantities](#) provides the results of the intermodulation distortion measurement (intermodulation products, intercept points, noise level).
- [Mixer Meas](#) provides the group delay of a mixer and derived results
- [Impedance](#) opens a submenu to convert reflection S-parameters into matched-circuit impedances (converted Z-parameters).
- [Admittance](#) opens a submenu to convert reflection S-parameters into matched-circuit admittances (converted Y-parameters).
- [Z-Parameters](#) opens a dialog to select arbitrary open-circuit impedance parameters describing a linear circuit.
- [Y-Parameters](#) opens a dialog to select arbitrary short-circuit admittance parameters describing a linear circuit.
- [Stability Factor](#) selects one of the three factors K, μ_1 or μ_2 to assess the stability of linear circuits (e.g. amplifiers).
- [Imbalance](#) opens a dialog to select the imbalance for balanced ports.
- [All S-Params](#) displays all S-parameters that the analyzer can measure in the appropriate diagram areas.
- [DC Inputs](#) selects and configures the measurement of DC powers and the Power Added

Efficiency (PAE).

- **Power Sensor** opens a configuration dialog for the measurement of wave quantities using an external power meter.
- **Noise Figure** selects the results of the *Noise Figure* measurement (with option R&S ZVAB-K30).



Port assignments of the DUT and the analyzer

S-parameters $S_{\langle out \rangle \langle in \rangle}$ characterize the Device Under Test, so the indices $\langle out \rangle$ and $\langle in \rangle$ denote the output and input ports of the DUT. Analogously the waves a_1 and a_2 are referred to as incident waves, b_1 and b_2 to as outgoing waves.

The analyzer measures the waves $a_1, b_1, \dots$ at its own test ports in order to obtain S-parameters, ratios and other derived quantities. The test ports of the analyzer are numbered, so it is convenient to use them as a reference, defining port number n of the DUT as the port connected to test port n of the analyzer. With this convention the waves a_n and b_n have the following meaning:


- a_n is the wave transmitted at test port no. n of the analyzer (stimulus signal) and fed to port number n of the DUT (incident wave).
- b_n is the wave transmitted at port number n of the DUT (response signal) and received at test port no. n of the analyzer (received wave).



The analyzer offers various diagrams and display formats to visualize the results. The analyzer places no restriction on the formats that are available for each measured quantity. However, to keep the interpretation simple, it is recommended to select an appropriate display format; see [Trace - Format](#).

S11, S12, S21, S22

Select one of the four elements of the standard 2-port scattering matrix (S-parameters).

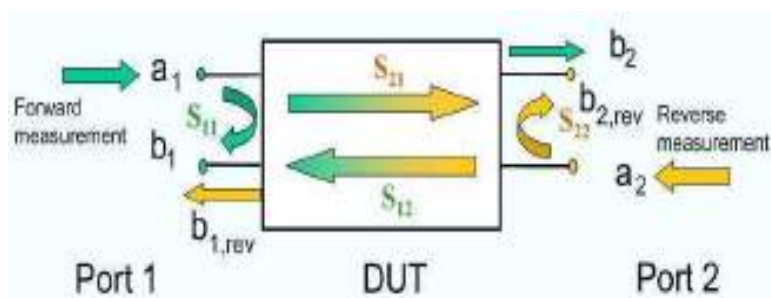

The S-parameters are the basic measured quantities of a network analyzer. They describe how the DUT modifies a signal that is transmitted or reflected in forward or reverse direction. S-parameters are expressed as $S_{\langle out \rangle \langle in \rangle}$, where $\langle out \rangle$ and $\langle in \rangle$ denote the output and input port numbers of the DUT.

A full 2-port S-parameter measurement involves 2 stages (referred to as partial measurements) with interchanged drive and receive ports. The analyzer automatically switches the internal power sources and the receivers to obtain the desired S-parameters.

Remote control: `CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "S11" | "S12" | "S21" | "S22"`
`[SENSe<Chn>:]FUNctioN[:ON] "...:POWer:S<11 | 12 | 21 | 22>"`

Create new trace and select name and measurement parameter:

`CALCulate<Ch>:PARAmeter:SDEFine "<Trace_Name>", "S11" | "S12" |`

"S21" | "S22"



Use `CALCulate<Ch>:PARAmeter:DEFine:SGRoup` to create traces for all S-parameters associated with a group of logical ports.

S-Parameters in Frequency Conversion Measurements

The concept of S-parameters can be extended to a- and b-waves with different frequencies ("arbitrary" S-parameters). The network analyzer provides arbitrary S-parameters for the following frequency conversion measurement modes:

- [Scalar mixer measurements](#)
- [Vector mixer measurements](#)

In an arbitrary frequency conversion test setup, it is possible to measure reflection coefficients (S_{11} , S_{22} ...) at ports with equal source and receive frequency (see [Port Configuration](#) dialog), provided that a one-port calibration is available.

At present, arbitrary S-parameter measurements are not suited for balanced ports and true differential mode.




NOTE Arbitrary S-parameters require a special calibration type; see background information in section [Correction Off](#). When a frequency conversion mode is activated, the analyzer checks which of the S-parameters actually involve a- and b-waves with different frequencies. Only these S-parameters are calculated (and should be calibrated) according to the rules for arbitrary S-parameters.

Example: Transmission measurement between ports 1 and 2 at the channel base frequency f_b . Port 3 is activated as an additional CW source port. This does not affect the calculation and calibration of the two-port S-parameters S_{11} , S_{12} , S_{21} , S_{22} .

More S-Parameters

Opens a dialog to select S-parameters for multiport measurements (including the 2-port S-parameters) or mixed mode S-parameters.

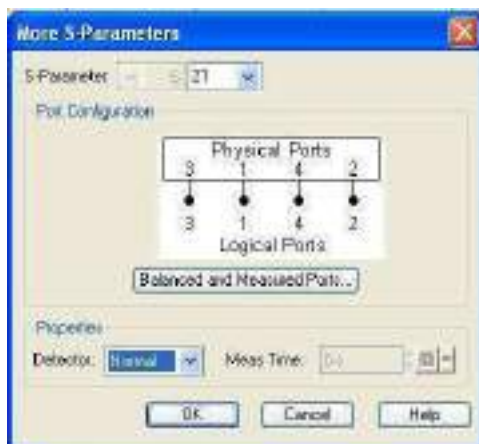

The *More S-Parameters* dialog provides the following settings:

- *S-Parameter* selects the type (left pull-down list) and the port number assignment (right pull-down list) of the *S-parameter*. Mixed mode parameters are only available if a balanced port configuration is active. They are expressed as $S_{\langle \text{mout} \rangle \langle \text{min} \rangle}$, where $\langle \text{mout} \rangle$ and $\langle \text{min} \rangle$ denote the output and input port modes. The port numbers are assigned in the order $S_{\langle \text{out} \rangle \langle \text{in} \rangle}$, where $\langle \text{out} \rangle$ and $\langle \text{in} \rangle$ denote the output (response) and input (stimulus) port numbers of the DUT.
- The graphics in the *Port Configuration* panel depicts the current port configuration. *Balanced and Measured Ports* opens the *Balanced Port and Port Groups* dialog to define the properties of the test ports. Single-ended (unbalanced) *S-parameters* are assigned to the physical test ports of the analyzer. Balanced *S-parameters* are assigned to logical test ports. Selecting a balanced port configuration with logical test ports means that the *unbalance-balance conversion* is switched on and that the analyzer provides *mixed mode S-parameters*.
- *Detector* selects the algorithm that is used to calculate the displayed trace from the individual measurement points. In the average (AVG) detector mode, it is possible to define the detector observation time (*Meas. Time*) for each single measurement point. The average detector is particularly suitable for *S-parameter* measurements in parallel to a noise figure measurement (option R&S ZVAB-K30), where an alternative reduction of the measurement bandwidth is not possible. For an overview of detector settings refer to section [Detector](#).



The port configuration is valid for all traces in the channel

The settings made in the *Balanced and Measured Ports* dialog are channel settings and therefore apply to all traces assigned to the channel (*Balanced and Measured Ports* is also accessible through *Channel – Mode – Port Config...*). Within a channel the analyzer measures either single-ended or mixed mode parameters. If a balanced test port configuration is selected the single-ended parameters assigned to the channel are converted into mixed mode parameters.

Remote control: `CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "S11" | "S12" | "S21" | "S22"`
`[SENSe<Chn>:]FUNctIon[:ON] "...:POWeR:S<11 | 12 | 21 | 22>"`

Create new trace and select name and measurement parameter:

`CALCulate<Ch>:PARAmeter:SDEFine "<Trace_Name>", "S11" | "S12" | "S21" | "S22"`



Use `CALCulate<Ch>:PARAmeter:DEFine:SGRoup` to create traces for all *S-parameters* associated with a group of logical ports.

Single-Ended and Mixed Mode Parameters

The analyzer measures *single-ended (unbalanced) parameters* (*S-parameters*, impedances, admittances, *Z-parameters*, *Y-parameters*) unless a balanced port configuration is selected. In the *More S-Parameters* dialog and the analogous dialogs for the other quantities, the left parameter selection field shows the parameter type (*S*, *Y*, *Z*) and is disabled (grayed). The range of output and input port numbers $\langle \text{out} \rangle$ and $\langle \text{in} \rangle$ depends on the analyzer model.

The analyzer switches to *mixed mode parameter* measurement if a balanced port configuration is selected. The left parameter selection field is enabled and offers a selection of matrices $S_{\langle \text{mout} \rangle \langle \text{min} \rangle}$ (or $Z_{\langle \text{mout} \rangle \langle \text{min} \rangle}$, ...) where $\langle \text{mout} \rangle$ and $\langle \text{min} \rangle$ denote the output and input port modes. The following three output or input modes are available:

- s: Single-ended (for unbalanced ports)
- d: Differential mode (for balanced ports)


- c: Common mode (for balanced ports)

All possible combinations of mixed mode parameters (e.g. S_{ss} , S_{cs} , S_{ds} , S_{dd} ,..., Z_{ss} , Z_{cs} ,...) are provided. S_{ss} is used for unbalanced S-parameters if the balanced-unbalanced conversion is active; otherwise the port mode indices ss are omitted.

The selected modes must be compatible with the port configuration. If an attempt is made to select an incompatible parameter (e.g. a single-ended parameter for a balanced port), the analyzer displays an error message.

Ratios

The *Ratios* submenu selects and defines ratios of wave quantities.

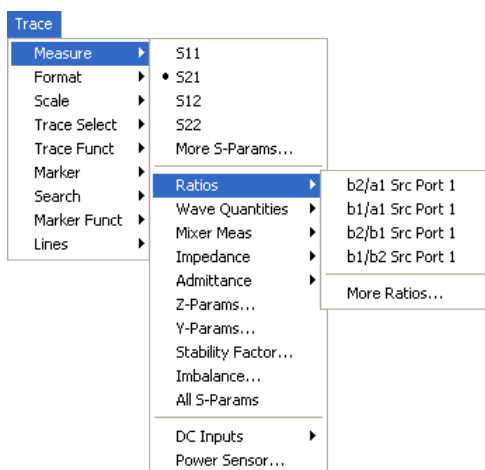


- *b2/a1 Src Port 1*, *b1/a1 Src Port 1*, *b2/b1 Src Port 1*, and *b1/b2 Src Port 1* select predefined ratios of the standard 2-port wave quantities a_1 , a_2 , b_1 , and b_2 , to be measured in forward direction with port 1 providing the stimulus signal.
- *More Ratios* opens a dialog to define and select arbitrary ratios of wave quantities for different detectors and source ports or higher port numbers or frequency offsets. In *true differential mode*, the dialog also offers ratios of balanced wave quantities.

In contrast to S-parameters, ratios are not system error corrected. A power calibration can be applied to ratios; see *Data Flow* in the *System Overview* chapter.

b2/a1 Src Port 1, b1/a1 Src Port 1, b2/b1 Src Port 1, b1/b2 Src Port 1

Select predefined complex ratios of the standard 2-port wave quantities a_1 , a_2 , b_1 , and b_2 :

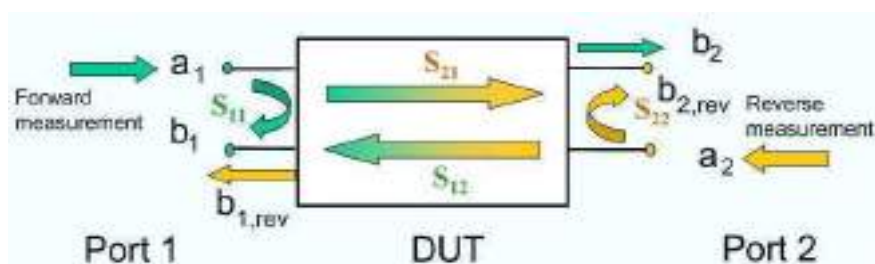

The predefined wave quantities are all obtained with the same test set configuration, port 1 providing the stimulus signal (source port 1, forward measurement if the stimulus signal is fed to the input of the DUT).

- b_2/a_1 *Src Port 1* is the ratio of the wave quantities b_2 and a_1 and corresponds to the S-parameter S_{21} (forward transmission coefficient).
- b_1/a_1 *Src Port 1* is the ratio of the wave quantities b_1 and a_1 , measured at PORT 1, and corresponds to the S-parameter S_{11} (input reflection coefficient).
- b_2/b_1 *Src Port 1* is the ratio of the transmitted to the reflected wave quantities in a forward measurement.
- b_1/b_2 *Src Port 1* is the inverse of b_2/a_1 *Src Port 1*.

The analyzer can also measure arbitrary ratios for other source ports; see [More Ratios](#).


Remote control: `CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "B2/A1" | ...`

Create new trace and select name and measurement parameter:

`CALCulate<Ch>:PARAmeter:SDEFine "<Trace_Name>", "B2/A1" | ...`

More Ratios

Opens a dialog to select arbitrary ratios of wave quantities, e.g. for different source ports or higher port numbers. In [true differential mode](#), the dialog also offers ratios of balanced wave quantities.

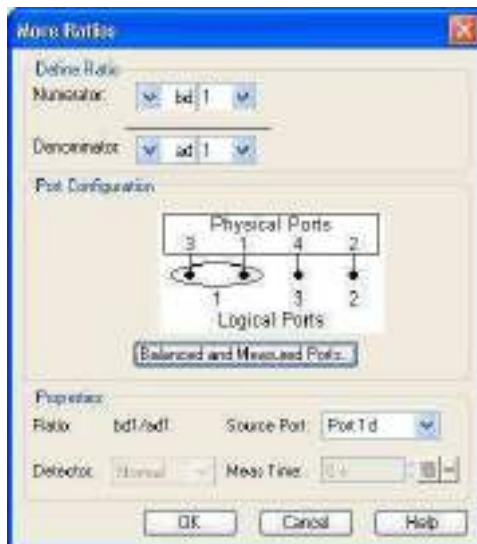

The notation for ratios and the functionality of the *More Ratios* dialog is analogous to the definition of [S-parameters](#).

- *Numerator* selects the type (left pull-down list) and the port number assignment (right pull-down list) of the wave that forms the *numerator of the ratio*. Ratios of balanced wave quantities are only available if the True Differential Mode is active; see background information below. The input (stimulus) or output (response) port number is selected in the right pull-down list. The range of output and input port numbers depends on the analyzer model.
- *Denominator* selects the type (left pull-down list) and the port number assignment (right pull-down list) of the wave that forms the denominator of the ratio. The same waves as for the *Numerator* are available.

- *Ratio* indicates the selected ratio.
- *Source Port* contains all analyzer ports or external generators which can be used as a source for the stimulus signal. The list contains all analyzer ports *Port 1* to *Port n*. Generators (*Gen 1*, *Gen 2*, ...) must be configured explicitly in the *System Configuration – External Generators* dialog before they appear in the list.
In the trace line and in the status bar, the source port is indicated in brackets, e.g. $b_2/a_1(P1)$ for the ratio b_2/a_1 with source port no. 1.
- *Detector* selects the algorithm that is used to calculate the displayed trace from the individual measurement points. In the *Max.* and *RMS* detector modes, it is possible to define the detector observation time (*Meas. Time*) for a single measurement point. The *Detector* and *Meas. Time* controls are both unavailable in *true differential mode*, because only the *Normal* detector provides consistent phase information. The detector settings are available for ZVA and ZVT network analyzers only.



External generators

The measurement process for external generators *Gen 1*, *Gen2*... in the *Source Port* list differs from the measurement process for internal source ports:

- An external generator always represents a permanent signal source that is switched on for all partial measurements. In contrast, an analyzer port is switched off for partial measurements that do not require a source signal. Exception: Internal ports can be configured as permanent sources (see *Gen* setting in the *Source* section of the *Port Configuration* dialog).
- The external source is measured in the first partial measurement where an internal source is active. This means that no separate partial measurement for the external generator signal is needed. If no internal source is needed at all, the external source is measured in the first partial measurement.



Ratios of single-ended and balanced wave quantities

If a balanced port configuration is selected and the True Differential Mode is active, the left *Numerator* and *Denominator* pull-down lists contain the following wave types:

- as, bs: Single-ended incident (a) or outgoing (b) wave. To select this wave type, the selected port must be unbalanced. If the port configuration contains no unbalanced ports, the single-ended wave quantities are hidden.
- ad, ac, bd, bc: Balanced incident (a) or outgoing (b) waves. d and c distinguish between the differential and common mode; see [Wave Quantities and Ratios](#).



In remote control, different drive ports for numerator and denominator waves are allowed.

Remote control: `CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "B2/A1" ...`

Create new trace and select name and measurement parameter:

`CALCulate<Ch>:PARAmeter:SDEFine "<Trace_Name>", "B2/A1" | ...`

Detector

Selects the algorithm that is used to calculate the displayed measurement points from the raw data. The *Detector* can be selected in the [More S-Parameters](#), [More Ratios](#) and [More Wave Quantities](#) dialogs.

The following detectors are available:

- **Normal** selects the default detector mode where each measurement point is displayed without modification as soon as it is recognized to be valid. The analyzer then proceeds to the next sweep point. Normal detector mode ensures that the measurement is performed at maximum speed and that a meaningful complex result is obtained.
- **AVG** collects all valid results at each sweep point during the Meas. Time set in the More S-Parameters, More Ratios or More Wave Quantities dialog and calculates the complex arithmetic mean value of these results. This yields the complex average of the wave quantities or ratios. Averaging tends to remove statistical fluctuations (e.g. noise contributions) from the measured signal.
The average(AVG) detector is also used for the [noise figure](#) measurement.

R&S ZVA and R&S ZVT analyzers provide the following additional detectors for ratios and wave quantities:

- **Peak** collects all valid results at each sweep point during the Meas. Time set in the More Ratios or More Wave Quantities dialog and selects the result with the maximum magnitude (maximum power) as the measurement point. Note that the phase is not evaluated in this process so that complex conversions (e. g. the calculation of real and imaginary values) do not really make sense.
- **RMS** collects all valid results at each sweep point during the Meas. Time set in the More Ratios or More Wave Quantities dialog and calculates the root mean square (RMS) of the linear magnitude of these results. This yields the magnitude of the measurement point. Note that the phase is not evaluated in this process so that complex conversions (e. g. the calculation of real and imaginary values) do not really make sense.

The detector settings have an influence on the displayed trace. They do not affect the [number of measurement points](#) in a sweep (or in a subset of the sweep range) but may increase the *sweep time* . In the Peak, RMS, and AVG detector settings, the sweep time cannot be smaller than the detector observation time (Meas. Time) set in the More Ratios or More Wave Quantities dialogs. The sweep time can be larger if additional delays are taken into account. Changing the Meas. Time affects the sweep time. On the other hand, increasing the [Sweep Time](#) in the Channel – Sweep menu leaves the Meas. Time unchanged . The AVG, Peak, and RMS detector settings appear in the trace line.



Combining different detectors

The detector setting in the *More Ratios* menu affects the ratio of a numerator and a denominator wave quantity. This does not place any restrictions on the measurement functionality of the analyzer, because ratios can also be formed by measuring the numerator and denominator individually and using the trace functions. A possible application is the comparison of different detector settings for a particular trace.



The analyzer generates a warning if the selected measurement time for AVG, Peak or RMS detectors is too long. At the same time, bit no. 15 in the ...INTegrity:HardWare status register is set. Reduce the measurement time and/or reduce the IF bandwidth until the warning disappears. A warning also appears if the measurement time for RMS detectors is too short. Increase the measurement time and/or increase the IF bandwidth until the warning disappears.

Remote control: `CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "<Par>"`
`CALCulate<Ch>:PARAmeter:SDEFine "<Trace_Name>", "<Par>"`
 (the parameter name <Par> also contains the detector)
`[SENSe<Ch>:]SWEep:DETEctor:TIME`

Measurements at Two Different Frequencies (for R&S ZVA and R&S ZVT)


Analyzers)

The [More Ratios](#) and [More Wave Quantities](#) dialogs provide the wave quantities a1, b1... These wave quantities are measured at the common receiver frequency, which is equal for all ports: If no frequency-converting mode is active, the common receiver frequency is equal to the stimulus frequency of the NWA source (channel base frequency f_b).

With option ZVA-K4, *Arbitrary Generator and Receiver Frequencies*, the network analyzer provides an additional set of "primed" wave quantities a'1, b'1..., to be measured at fixed, but port-specific frequency offsets from the common receiver frequency. Primed wave quantities can also be used to calculate ratios.

The basic and the primed results are measured in two different analyzer paths. The two signals are separated in the digital part of the receiver, after down-conversion of the RF input signal in the first mixer, a lowpass filter stage, and analog/digital conversion. The digital paths contain mixer stages with two independent numerically controlled oscillators NCO 1 and NCO 2. Each of the NCOs converts one signal component to the analyzer frequency.

The port-specific frequency offset between primed and unprimed waves can be set in the [Receiver](#) section of the [Port Configuration](#) dialog ($\Delta \text{Freq } a', b'$).

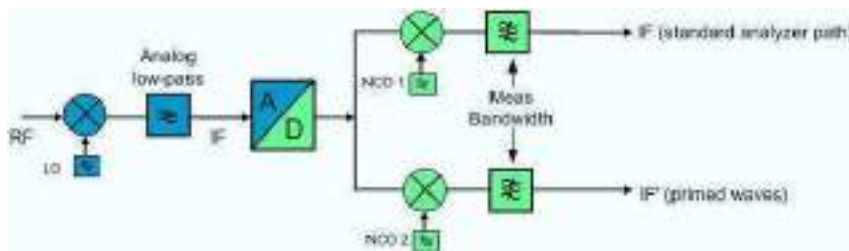

Measurement application, bandwidth considerations

The second analyzer and the quantities a'1, b'1, a's1, a'c1,... are suited for a comparison of two signals or signal components at different frequencies (two tone signals). Typical examples are:

- Measurement of intermodulation products
- Adjacent Channel Power (ACP) measurements

The maximum frequency offset between primed and unprimed waves is limited by the cutoff frequency of the analog lowpass filter. The minimum frequency offset is determined by the bandwidth of the digital IF filters (*Channel Power Bandwidth Average Meas Bandwidth*). It is recommended to use IF filters with high selectivity.




The port-specific frequency offset extends the receiver frequency conversion in the [Receiver Frequency](#) dialog, which is equal for all analyzer ports.

In remote control, it is possible to define an additional port-specific offset to the basic frequencies; see remote control commands below. The additional offset is not displayed in the Port Configuration dialog. The total frequency offset between primed and basic wave quantities is equal to ($\Delta \text{Freq } a', b' - \Delta \text{Freq } a, b$).

Remote control: `SENSe<Ch>:FREQuency<Pt>:OFFSet:PWAVes`
`SENSe<Ch>:FREQuency<Pt>:OFFSet:WAVes`

Wave Quantities

The *Wave Quantities* submenu selects a wave quantity to be measured and displayed.

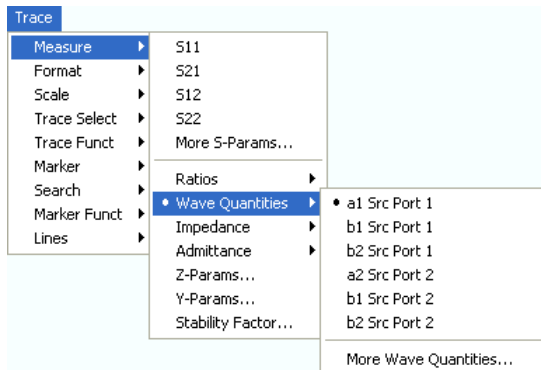


- *a1 Src Port 1*, *b1 Src Port 1*, *b2 Src Port 1*, *a2 Src Port 2*, *b1 Src Port 2* and *b2 Src Port 2* select the standard 2-port wave quantities a_1 , b_1 , a_2 , and b_2 , to be measured in forward or reverse direction with port 1 or 2 providing the stimulus signal.
- *More Wave Quantities* opens a dialog to define and select arbitrary wave quantities for different detectors and source ports or higher port numbers or frequency offsets. In *true differential mode*, the dialog also offers balanced wave quantities.

In contrast to S-parameters, wave quantities are not system error corrected. A power calibration can be applied to wave quantities; see *Data Flow* in the *System Overview* chapter.

a1 Src Port 1, b1 Src Port 1, b2 Src Port 1, a2 Src Port 2, b1 Src Port 2, b2 Src Port 2

Select the standard 2-port wave quantities a_1 , a_2 , b_1 , and b_2 for different source ports:

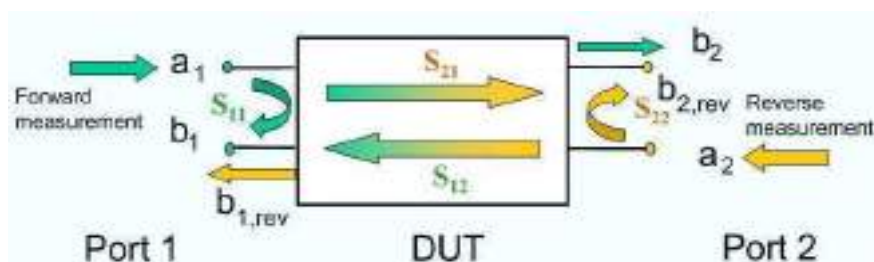

The predefined wave quantities are obtained with different source ports. *a1 Src Port 1*, *b1 Src Port 1* and *b1 Src Port 2* are measured at Port 1 of the analyzer. *a2 Src Port 2*, *b2 Src Port 1* and *b2 Src Port 2* are measured at Port 2 of the analyzer.

- *a1 Src Port 1* is the wave transmitted at test port 1. In a standard S-parameter measurement, this wave is fed to the input port (port 1) of the DUT (forward measurement).
- *b1 Src Port 1* is the wave received at test port 1. In a standard S-parameter measurement, this is the reflected wave at port 1 of the DUT (forward measurement).
- *b2 Src Port 1* is the wave received at test port 2. In a standard S-parameter measurement, this wave is transmitted at port 2 of the DUT (forward measurement).
- *a2 Src Port 2* is the wave transmitted at test port 2. In a standard S-parameter measurement, this

wave is fed to the output port (port 2) of the DUT (reverse measurement).

- *b1 Src Port 2* is the wave received at test port 1. In a standard S-parameter measurement, this wave is transmitted at port 2 of the DUT (reverse measurement).
- *b2 Src Port 2* is the wave received at test port 2. In a standard S-parameter measurement, this wave is fed to the output port (port 2) of the DUT (reverse measurement).

The analyzer can also measure wave quantities for other source ports; see [More Wave Quantities](#).


Remote control: `CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "A1" |`

Create new trace and select name and measurement parameter:

`CALCulate<Ch>:PARAmeter:SDEFine "<Trace_Name>", "A1" | ...`

More Wave Quantities

Opens a dialog to define and select arbitrary wave quantities for different detectors and source ports or higher port numbers. In [true differential mode](#), the dialog also offers balanced wave quantities.

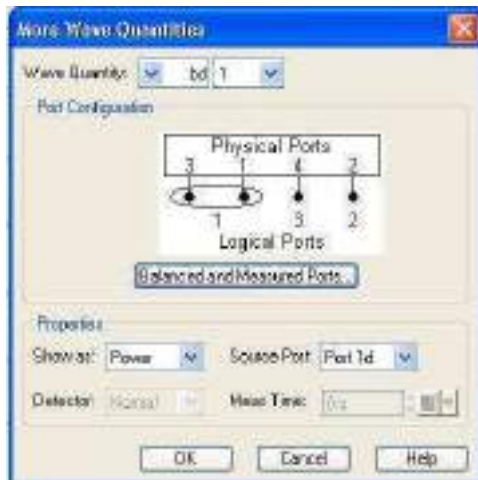

The notation for wave quantities and the functionality of the *More Wave Quantities* dialog is analogous to the definition of [S-parameters](#).

- *Wave Quantity* selects the type (left pull-down list) and the port number assignment (right pull-down list) of the *wave quantity*. Balanced wave quantities are only available if the True Differential Mode is active; see background information below. The output (transmit) or input (receive) port number of the analyzer (corresponding to the input (stimulus) or output (response) port number of the DUT, respectively) is selected in the right pull-down list. The range of output and input port numbers depends on the analyzer model.
- *Show as* selects the physical unit of the displayed trace. It is possible to display the measured Voltage V or convert the wave quantity into an effective power according to $P = V^2 / \text{Re}(Z_0)$. Z_0 denotes the reference impedance of the source port (for wave quantities a_n) or of the receive port (for wave quantities b_n). The reference impedances are defined in the [Port Configuration](#) dialog. This function is also available for memory traces where the remaining control elements of the dialog are grayed.
- *Source Port* contains all analyzer ports or external generators which can be used as a source for the stimulus signal. The list contains all analyzer ports *Port 1* to *Port n*. Generators (*Gen 1*, *Gen 2*, ...) must be configured explicitly in the *System Configuration – External Generators* dialog before

they appear in the list. The analyzer places no restriction on the combination of source ports and port numbers of the measured wave quantity, so it is even possible to measure a_2 while the source port is port 1 (e.g. in order to estimate the directivity of the coupler in the internal test set). In the trace line and in the status bar, the source port is indicated in brackets, e.g. $a1(P1)$ for the wave quantity a_1 with source port no. 1.

- **Detector** selects the algorithm that is used to calculate the displayed trace from the individual measurement points. In the *Max.* and *RMS* detector modes, it is possible to define the observation time (*Meas. Time*) for a single measurement point. The *Detector* and *Meas. Time* controls are both unavailable in **true differential mode**, because only the *Normal* detector provides consistent phase information. The detector settings are available for ZVA and ZVT network analyzers only.



External generators

The measurement process for external generators *Gen 1*, *Gen2*... in the *Source Port* list differs from the measurement process for internal source ports:

- An external generator always represents a permanent signal source that is switched on for all partial measurements. In contrast, an analyzer port is switched off for partial measurements that do not require a source signal. Exception: Internal ports can be configured as permanent sources (see *Gen* setting in the **Source** section of the *Port Configuration* dialog).
- The external source is measured in the first partial measurement where an internal source is active. This means that no separate partial measurement for the external generator signal is needed. If no internal source is needed at all, the external source is measured in the first partial measurement.



Single-ended and balanced wave quantities

If a balanced port configuration is selected and the True Differential Mode is active, the left *Wave Quantity* pull-down list contains the following wave types:

- as, bs: Single-ended incident (a) or outgoing (b) wave. To select this wave type, the selected port must be unbalanced. If the port configuration contains no unbalanced ports, the single-ended wave quantities are hidden.
- ad, ac, bd, bc: Balanced incident (a) or outgoing (b) waves. d and c distinguish between the differential and common mode; see **Wave Quantities and Ratios**.



Primed wave quantities

In addition to the wave quantities a and b, the analyzer provides "primed" wave quantities a', b'; see **Measurements at Different Frequencies**.

If a **mixer delay** measurement is active, the unprimed wave quantities correspond to the lower tone, the primed wave quantities correspond to the upper tone.

Remote control:

```
CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "A1" | "AP1"...
```

Create new trace and select name and measurement parameter:

```
CALCulate<Ch>:PARAmeter:SDEFine "<Trace_Name>", "A1" | "AP1"...
CALCulate<Chn>:FORMat:WQUType POWER | VOLTage
```

Intermod Distortion Quantities (for R&S ZVA and ZVT Analyzers)

The *Intermod Distortion Quantities* submenu provides the results of the intermodulation distortion measurement, enabled with option R&S ZVA-K4. The results are available as soon as the measurement has been properly configured using the [intermodulation wizard](#) (*Channel – Mode – Intermod Distortion Meas – Define Intermod Distortion Meas*).



Intermodulation distortion quantities

A nonlinear DUT that is supplied with a two-tone signal with the lower/upper frequencies f_L and f_U causes emissions at frequencies which correspond to sums and differences of the upper and lower tone frequencies and their integer multiples:

$$f_U - f_L, f_U + f_L, 2*f_U - f_L, 2*f_U + f_L, f_U + 2*f_L, 2*f_L - f_U \dots$$

The order of these intermodulation products is defined by the number of f_L and f_U terms. The analyzer measures the intermodulation products of k^{th} order IM $_k$ (where $k = 3, 5, 7, 9$) at the lower tone frequency minus $(k - 1)/2$ times the tone distance and at the upper tone frequency plus $(k - 1)/2$ times the tone distance. Intermodulation products can be measured at the DUT input (wave a_1) or at the DUT output (wave b_2).

The intermodulation suppression IM $_{k_{\text{rel}}}$ is the ratio of the power of an intermodulation product to the power of the lower tone fundamental wave in dB, measured at the DUT input or output.

For each intermodulation product, an intercept point IP $_k$ is defined as follows:

$$\text{IP}_k = P_L + \text{IM}_{k_{\text{rel}}} / (k - 1)$$


In this formula, P_L denotes the lower tone power in dBm, measured either at the DUT input or at the DUT output; the intermodulation suppression IM $_{k_{\text{rel}}}$ is always measured at the DUT output.

The intermodulation suppression generally decreases with increasing stimulus power. The intercept point is equal to the lower tone power for which the intermodulation suppression would reach 0 dB. The intercept point is a mathematical concept. For most DUTs, it is beyond the nominal power operating range.



Automatic filter settings

Intermodulation measurements require frequency-selective filter settings. When an intermodulation result is selected, the analyzer checks whether the IF bandwidth of the active channel is below 1/10 of the *Tone Difference* (see *Define Intermodulation Distortion*). If not, the IF bandwidth is reduced and a high sensitivity filter is selected. The analyzer displays a tooltip.

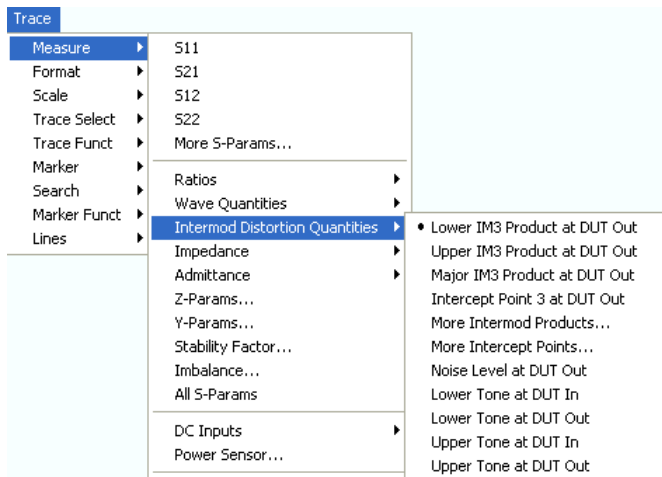

- The *Lower IM3 Product at DUT Out* is the third-order lower intermodulation product at the output of the DUT. This quantity corresponds to the outgoing wave quantity (b wave) at the output of the DUT, measured at the frequency of the lower tone minus the tone distance. The lower IM3 frequency is also displayed in the [Set Frequencies and Powers](#) dialog.
- The *Upper IM3 Product at DUT Out* is the third-order upper intermodulation product at the output of the DUT. This quantity corresponds to the outgoing wave quantity (b wave) at the output of the DUT, measured at the frequency of the upper tone plus the tone distance.
- The *Major IM3 Product at DUT Out* is the lower or upper IM3 product at DUT out, whichever is larger. The *Major IM3 Product* reveals the worst-case performance of the DUT.
- The *Intercept Point 3 at DUT Out* is the third-order intercept point at the output of the DUT. This quantity corresponds to the fictitious DUT output level (*Lower Tone at DUT Out*), measured at the lower tone frequency, where the major third-order intermodulation suppression (the ratio of the *Major IM3 Product at DUT Out* to the *Lower Tone at DUT Out*) reaches 0 dB (see background information above).
- [More Intermod Products](#) opens a dialog to select intermodulation products of higher order and intermodulation products which are measured at the input of the DUT.
- [More Intercept Points](#) opens a dialog to select intercept points of higher order and intercept points which are measured at the input of the DUT.
- *Noise Level at DUT Out* is a measure for the noise level and therefore the dynamic range of the intermodulation distortion measurement. The noise level is measured at the frequency of the lower tone minus 4/9 times the tone distance.
- *Lower Tone at DUT In*, *Lower Tone at DUT Out*, *Upper Tone at DUT In*, *Upper Tone at DUT Out* is a measurement of the two fundamental waves that are used for the intermodulation measurement either at the DUT input or the DUT output.



NOTE The measurement of higher-order intermodulation products should be enabled explicitly in the [Define Intermodulation Distortion Measurement](#) dialog, otherwise no calibration will be performed for these products.

The labels for the intermodulation quantities in the trace list are identical to the parameters used for remote control; see `CALCulate<Ch>:PARAmeter:SDEFine "<Trace_Name>", "IP3LI" | "IM3LI" | "LTI" | ...`

Remote control: `CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "IP3LI" | "IM3LI" | "LTI" | ...`

Create new trace and select name and measurement parameter:

`CALCulate<Ch>:PARAmeter:SDEFine "<Trace_Name>", "IP3LI" | "IM3LI" | "LTI" | ...`

More Intermodulation Products

This dialog selects general intermodulation products.



The controls in the dialog define the order of the intermodulation product, measurement at the DUT input or output, and the position of the intermodulation product relative to the lower and upper tones.

- The *Lower* intermodulation products are measured at frequencies below the lower tone (*above* the lower tone for intermodulation products at the DUT output in case of an *inverted* frequency conversion, where $IF=LO-RF$).
- The *Upper* intermodulation products are measured at frequencies above the upper tone (*below* the upper tone for intermodulation products at the DUT output in case of an *inverted* frequency conversion, where $IF=LO-RF$).
- *Major* denotes the lower or upper intermodulation product, whichever is larger. The *Major* intermodulation product reveals the worst-case performance of the DUT.

If *Relative* is selected, the intermodulation product is displayed in dB units relative to the measured lower tone level at the DUT input or output, depending on the *At DUT* setting (intermodulation suppression). In the case of a frequency sweep with constant source power settings, the power-calibrated input level should be equal to the *CW Power*.


Remote control: `CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "IM3LI" | ...`

Create new trace and select name and measurement parameter:

`CALCulate<Ch>:PARAmeter:SDEFine "<Trace_Name>", "IM3LI" | ...`

More Intercept Points

This dialog selects general intercept points. See [Intermodulation distortion quantities](#) for background information.

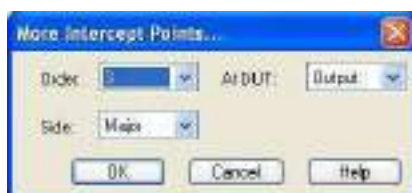

The controls in the dialog define the order of the intercept point, measured at the DUT input or output, and the position of the intercept point relative to the lower and upper tones.

- The *Lower* intercept points are calculated using the intermodulation suppression IMk_{rel} measured at frequencies below the lower tone (above the lower tone for an inverted frequency conversion, where $IF=LO-RF$). Please note that IMk_{rel} is always measured at the DUT output.
- The *Upper* intercept points are calculated using the intermodulation suppression IMk_{rel} measured at frequencies above the lower tone (below the lower tone for an inverted frequency conversion, where $IF=LO-RF$). Please note that IMk_{rel} is always measured at the DUT output.
- *Major* denotes the lower or upper intercept point, whichever is **smaller**. The *Major* intercept point reveals the worst-case performance of the DUT.

Remote control: `CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "MIXDLY" ...`


Create new trace and select name and measurement parameter:

`CALCulate<Ch>:PARAmeter:SDEFine "<Trace_Name>", "MIXDLY" ...`

Mixer Meas

The *Mixer Meas* submenu provides the results of the [mixer delay measurement](#) and results that the analyzer acquires at the RF image frequency:

- Mixer delay measurements require option R&S ZVA-K9. The results are available as soon as the measurement has been properly configured using the *Define Mixer Delay Measurement without LO Access* wizard (*Channel – Mode – Mixer Delay Meas – Define Mixer Delay Meas*).
- To obtain the RF image traces, a scalar mixer measurement must be active. When an image trace is selected, the analyzer opens a dialog to specify the [detector](#) settings. An error message is displayed if the [image frequency](#) range RF' exceeds the analyzer's frequency range.

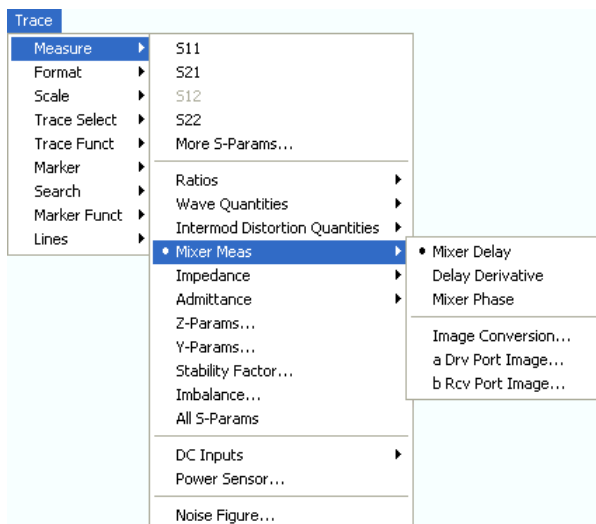

- *Mixer Delay* is the group delay of the mixer. This measured quantity is selected automatically when a mixer delay measurement is activated.
- The *Delay Derivative* is the derivative of the *Mixer Delay* with respect to the sweep variable. It shows how much the mixer delay changes at each sweep point as the sweep variable (typically, the frequency) changes.

- The *Mixer Phase* is the integral of the *Mixer Delay* over the sweep variable, multiplied by a factor of -360 deg. The domain of integration is the interval between the start of the sweep range and each sweep point. For frequency sweeps, this yields the transmission phase of the mixer relative to an initial phase at the first sweep point (see definition of the [group delay](#)). The initial phase is set to 0 deg.
- *Image Conversion* is the mixer's conversion gain $S_{\langle IF\_port \rangle \langle RF\_port \rangle}$ if the RF source port drives in the image frequency range RF'. In the trace list, the image conversion is shown as $S_{\langle IF\_port \rangle \langle RF\_port \rangle}img$, e.g. $S21img$.
- *a Drv Port Image* is the wave quantity that the analyzer provides at its RF port in the image frequency range RF'. In the trace list, the *a Drv Port Image* is shown as $a_{\langle RF\_port \rangle}img(P_{\langle RF\_port \rangle}s)$, e.g. $a1img(P1s)$.
- *b Rcv Port Image* is the wave quantity that the analyzer measures at its IF port if the RF source port drives in the image frequency range RF'. In the trace list, the *b Rcv Port Image* is shown as $b_{\langle IF\_port \rangle}img(P_{\langle RF\_port \rangle}s)$, e.g. $b2img(P1s)$.



Use the *Linearity Deviation* functions to calculate and display the deviation of the *Mixer Phase* from linearity. The linearity deviation does not depend on the arbitrary initial mixer phase.


Remote control: `CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "MIXDLY" | "MIXDERIV" | "MIXPHAS" | "S21I" | "A1D1ISAM" | "B2D1ISAM" | ...`

Create new trace and select name and measurement parameter:

`CALCulate<Ch>:PARAmeter:SDEFine "<Trace_Name>", "MIXDLY" | ... | "S21I" ...`

Impedance

The *Impedance* submenu contains the functions to calculate converted impedances from the measured S-parameters.

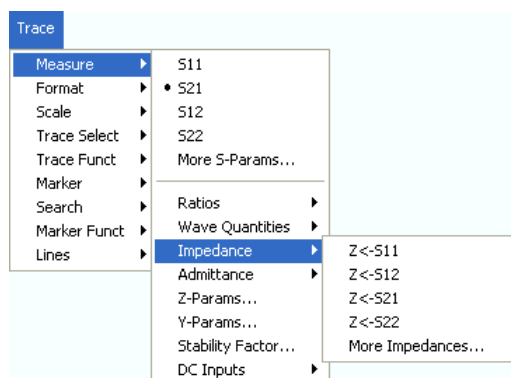

- $Z \leftarrow S11$, $Z \leftarrow S12$, $Z \leftarrow S21$, $Z \leftarrow S22$ select the converted impedances of a 2-port DUT.
- *More Impedances...* opens a dialog to select converted impedances for more ports or mixed mode measurements.

$Z \leftarrow S11$, $Z \leftarrow S12$, $Z \leftarrow S21$, $Z \leftarrow S22$

Select the 2-port converted impedance parameters. The parameters describe the impedances of a 2-port

DUT, obtained in forward and reverse transmission and reflection measurements:

- Z_{11} is the input impedance at port 1 of a 2-port DUT that is terminated at port 2 with the reference impedance Z_0 (matched-circuit impedance measured in a forward reflection measurement).
- Z_{22} is the input impedance at port 2 of a 2-port DUT that is terminated at port 1 with the reference impedance Z_0 (matched-circuit impedance measured in a reverse reflection measurement).
- Z_{12} and Z_{21} denote the forward and reverse converted transfer impedances, respectively.

The analyzer also provides converted impedances for more drive ports or balanced port configurations; see [More Impedances](#).




Use the [More Z-Parameters](#) dialog to measure Z-parameters including the transfer parameters. Use the [Smith chart](#) to obtain an alternative, graphical representation of the converted impedances in a reflection measurement.

Remote control: `CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "Z-S11" | "Z-S12" | "Z-S21" | "Z-S22"`
`[SENSe<Chn>:]FUNCTION[:ON] "...:POWer:Z<11 | 12 | 21 | 22>"`

Create new trace and select name and measurement parameter:
`CALCulate<Ch>:PARAmeter:SDEfine "<Trace_Name>", "Z-S11" | "Z-S12" | "Z-S21" | "Z-S22"`

More Impedances

Opens a dialog to select converted impedance parameters for more ports or balanced port measurements.

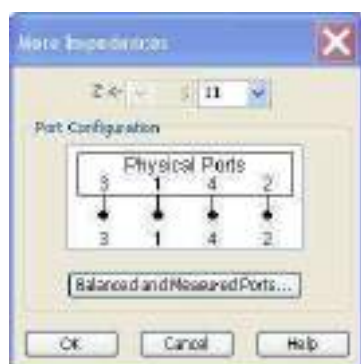

The notation for converted impedance parameters and the functionality of the *More Impedances* dialog is analogous to the definition of [S-parameters](#).

- $Z_{<out><in>}$ selects the type (left pull-down list) and the port number assignment (right pull-down list) of the impedance parameter. Mixed mode parameters are only available if a balanced port configuration is active. They are expressed as $Y_{<mout><min>}$, where $<mout>$ and $<min>$ denote the output and input port modes. The port numbers are assigned in the order $Y_{<out><in>}$, where $<out>$ and $<in>$ denote the output (response) and input (stimulus) port numbers of the DUT.
- *Balanced and Measured Ports* opens the [Balanced Port and Port Groups](#) dialog to define the properties of the test ports. Single-ended (unbalanced) impedance parameters are assigned to the physical test ports of the analyzer. Balanced impedance parameters are assigned to logical test ports. Selecting a balanced port configuration with logical test ports means that the

unbalance-balance conversion is switched on and that the analyzer provides mixed mode parameters.

- The graphics above the *Balanced and Measured Ports* button illustrates the current port configuration.



The port configuration is valid for all traces in the channel

The settings made in the *Balanced and Measured Ports* dialog are channel settings and therefore apply to all traces assigned to the channel (*Balanced and Measured Ports* is also accessible through *Channel – Mode – Port Config...*). Within a channel the analyzer measures either single-ended or mixed mode parameters. If a balanced test port configuration is selected the single-ended parameters assigned to the channel are converted into mixed mode parameters.



Relation between impedances and S-parameters

The relation between the generalized (multiport and mixed mode) impedance parameters and the S-parameters is analogous to the 2-port case. For reflection measurements:

$$Z_{\langle out \rangle \langle in \rangle ii} = Z_0 \frac{1 + S_{\langle out \rangle \langle in \rangle ii}}{1 - S_{\langle out \rangle \langle in \rangle ii}}, \quad \langle out \rangle = \langle in \rangle,$$

and for transmission measurements:

$$Z_{\langle out \rangle \langle in \rangle ij} = 2 \cdot \frac{\sqrt{Z_{0i} \cdot Z_{0j}}}{S_{\langle out \rangle \langle in \rangle ij}} - (Z_{0i} + Z_{0j}), \quad i \neq j,$$


where Z_{0i} denotes the reference impedance of the analyzer port no. i.

Remote control: `CALCulate<Ch>:PARAMeter:MEASure "<Trace_Name>", "Z-S11" | "Z-S12" ...`

Create new trace and select name and measurement parameter:
`CALCulate<Ch>:PARAMeter:SDEFine "<Trace_Name>", "Z-S11" | "Z-S22" | ...`

Admittance

The *Admittance* submenu contains the functions to calculate converted admittances from the measured S-parameters.

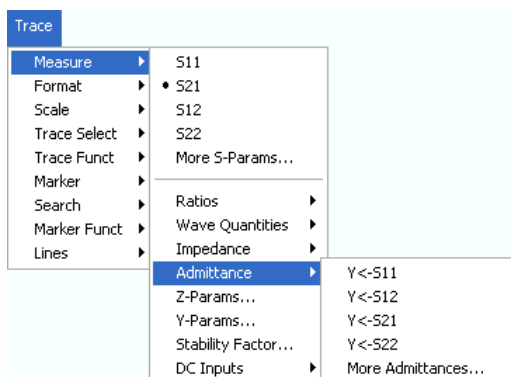

- $Y \leftarrow S11$, $Y \leftarrow S12$, $Y \leftarrow S21$, $Y \leftarrow S22$ select the converted admittances of a 2-port DUT.
- [More Admittances...](#) opens a dialog to select converted admittances for more ports or mixed mode measurements.

$Y \leftarrow S11$, $Y \leftarrow S12$, $Y \leftarrow S21$, $Y \leftarrow S22$

Select the 2-port converted admittance parameters. The parameters describe the admittances of a 2-port DUT, obtained in forward and reverse transmission and reflection measurements:

- Y_{11} is the input admittance at port 1 of a 2-port DUT that is terminated at port 2 with the reference impedance Z_0 (matched -circuit admittance measured in a forward reflection measurement).
- Y_{22} is the input admittance at port 2 of a 2-port DUT that is terminated at port 1 with the reference impedance Z_0 (matched -circuit admittance measured in a reverse reflection measurement).
- Y_{12} and Y_{21} denote the forward and reverse converted transfer admittances, respectively.

The analyzer also provides converted admittances for more drive ports or balanced port configurations; see [More Admittances](#).



Use the [More Y-Parameters](#) dialog to measure Y-parameters including the transfer parameters. Use the [Inverted Smith chart](#) to obtain an alternative, graphical representation of the converted admittances in a reflection measurement.

Remote control:

```
CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "Y-S11" | "Y-S12"
| "Y-S21" | "Y-S22"
[SENSe<Chn>:]FUNCTION[:ON] "...:POWer:Y<11 | 12 | 21 | 22>"

Create new trace and select name and measurement parameter:
CALCulate<Ch>:PARAmeter:SDEfine "<Trace_Name>", "Y-S11" | "Y-S12"
| "Y-S21" | "Y-S22"
```

More Admittances

Opens a dialog to select converted admittances for more ports or balanced port measurements.



The notation for admittance parameters and the functionality of the *More Admittances* dialog is analogous to the definition of [S-parameters](#).

- $Y \leftarrow$ selects the type (left pull-down list) and the port number assignment (right pull-down list) of the admittance parameter. Mixed mode parameters are only available if a balanced port

configuration is active. They are expressed as $Y_{\langle \text{mout} \rangle \langle \text{min} \rangle}$, where $\langle \text{mout} \rangle$ and $\langle \text{min} \rangle$ denote the output and input port modes. The port numbers are assigned in the order $Y_{\langle \text{out} \rangle \langle \text{in} \rangle}$, where $\langle \text{out} \rangle$ and $\langle \text{in} \rangle$ denote the output (response) and input (stimulus) port numbers of the DUT.

- *Balanced and Measured Ports* opens the [Balanced Port and Port Groups](#) dialog to define the properties of the test ports. Single-ended (unbalanced) admittance parameters are assigned to the physical test ports of the analyzer. Balanced admittance parameters are assigned to logical test ports. Selecting a balanced port configuration with logical test ports means that the [unbalance-balance conversion](#) is switched on and that the analyzer provides [mixed mode parameters](#).
- The graphics above the *Balanced and Measured Ports* button illustrates the current port configuration.



The port configuration is valid for all traces in the channel

The settings made in the *Balanced and Measured Ports* dialog are channel settings and therefore apply to all traces assigned to the channel (*Balanced and Measured Ports* is also accessible through *Channel – Mode – Port Config...*). Within a channel the analyzer measures either single-ended or mixed mode parameters. If a balanced test port configuration is selected the single-ended parameters assigned to the channel are converted into mixed mode parameters.

The relation between the generalized (multiport and mixed mode) admittance parameters and the S-parameters is analogous to the 2-port case and follows from the relations for [impedance parameters](#).

Remote control: `CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "Y-S11" | "Y-S12" ...`

Create new trace and select name and measurement parameter:

`CALCulate<Ch>:PARAmeter:SDEFine "<Trace_Name>", "Y-S11" | "Y-S22" | ...`


Z-Parameters...

Opens the [Z-Parameter](#) dialog to select arbitrary Z-parameters for different ports or mixed mode measurements. In analogy to the [converted impedances](#), the Z-parameters are available for any combination of input and output ports.

Z-parameters can be used as an alternative to [S-parameters](#) (or [Y-parameters](#)) in order to completely characterize a linear n-port network.

Z-Parameter

Is a dialog to select Z-parameters for multiport measurements (including the 2-port Z-parameters) or mixed mode Z-parameters.

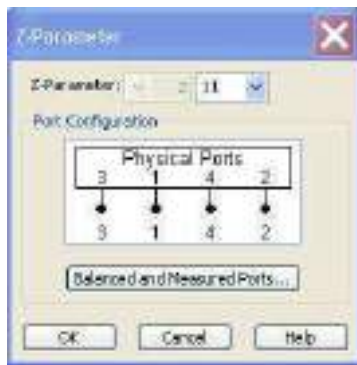

The notation for Z-parameters and the functionality of the *Z-Parameter* dialog is analogous to the definition of [S-parameters](#). The dialog provides the following settings:

- *Z-Parameter* selects the type (left pull-down list) and the port number assignment (right pull-down list) of the Z-parameter. Mixed mode parameters are only available if a balanced port configuration is active. They are expressed as $Z_{\langle \text{mout} \rangle \langle \text{min} \rangle}$, where $\langle \text{mout} \rangle$ and $\langle \text{min} \rangle$ denote the output and input port modes. The port numbers are assigned in the order $Z_{\langle \text{out} \rangle \langle \text{in} \rangle}$, where $\langle \text{out} \rangle$ and $\langle \text{in} \rangle$ denote the output (response) and input (stimulus) port numbers of the DUT.
- *Balanced and Measured Ports* opens the [Balanced Port and Port Groups](#) dialog to define the properties of the test ports. Single-ended (unbalanced) Z-parameters are assigned to the physical test ports of the analyzer. Balanced Z-parameters are assigned to logical test ports. Selecting a balanced port configuration with logical test ports means that the [unbalance-balance conversion](#) is switched on and that the analyzer provides [mixed mode Z-parameters](#).
- The graphics above the *Balanced and Measured Ports* button illustrates the current port configuration.



The port configuration is valid for all traces in the channel

The settings made in the *Balanced and Measured Ports* dialog are channel settings and therefore apply to all traces assigned to the channel (*Balanced and Measured Ports* is also accessible through *Channel – Mode – Port Config...*). Within a channel the analyzer measures either single-ended or mixed mode parameters. If a balanced test port configuration is selected the single-ended parameters assigned to the channel are converted into mixed mode parameters.

Remote control: `CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "Z11" | "Z12" | "Z21" | "Z22"`

Create new trace and select name and measurement parameter:

`CALCulate<Ch>:PARAmeter:SDEFine "<Trace_Name>", "Z11" | "Z12" | "Z21" | "Z22"`

Y-Parameters

Opens the [Y-Parameter](#) dialog to select arbitrary Y-parameters for different ports or mixed mode measurements. In analogy to the [converted admittances](#), the Y-parameters are available for any combination of input and output ports.

Y-parameters can be used as an alternative to [S-parameters](#) (or [Z-parameters](#)) in order to completely characterize a linear n-port network.

Y-Parameter

Opens a dialog to select Y-parameters for multiport measurements (including the 2-port Y-parameters) or mixed mode Y-parameters.



The notation for Y-parameters and the functionality of the *Y-Parameter* dialog is analogous to the definition of [S-parameters](#). The dialog provides the following settings:

- *Y-Parameter* selects the type (left pull-down list) and the port number assignment (right pull-down list) of the Y-parameter. Mixed mode parameters are only available if a balanced port configuration is active. They are expressed as $Y_{\langle \text{mout} \rangle \langle \text{min} \rangle}$, where $\langle \text{mout} \rangle$ and $\langle \text{min} \rangle$ denote the output and input port modes. The port numbers are assigned in the order $Y_{\langle \text{out} \rangle \langle \text{in} \rangle}$, where $\langle \text{out} \rangle$ and $\langle \text{in} \rangle$ denote the output (response) and input (stimulus) port numbers of the DUT.
- *Balanced and Measured Ports* opens the [Balanced Port and Port Groups](#) dialog to define the properties of the test ports. Single-ended (unbalanced) Y-parameters are assigned to the physical test ports of the analyzer. Balanced Y-parameters are assigned to logical test ports. Selecting a balanced port configuration with logical test ports means that the [unbalance-balance conversion](#) is switched on and that the analyzer provides [mixed mode parameters](#).
- The graphics above the *Balanced and Measured Ports* button illustrates the current port configuration.



The port configuration is valid for all traces in the channel

The settings made in the *Balanced and Measured Ports* dialog are channel settings and therefore apply to all traces assigned to the channel (*Balanced and Measured Ports* is also accessible through *Channel – Mode – Port Config...*). Within a channel the analyzer measures either single-ended or mixed mode parameters. If a balanced test port configuration is selected the single-ended parameters assigned to the channel are converted into mixed mode parameters.


Remote control: `CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "Y11" | "Y12" | "Y21" | "Y22"`

Create new trace and select name and measurement parameter:

`CALCulate<Ch>:PARAmeter:SDEFine "<Trace_Name>", "Y11" | "Y12" | "Y21" | "Y22"`

Stability Factor...

Opens a dialog to select one of the three two port stability factors K , μ_1 or μ_2 . Stability factors cannot be calculated in balanced port configurations.

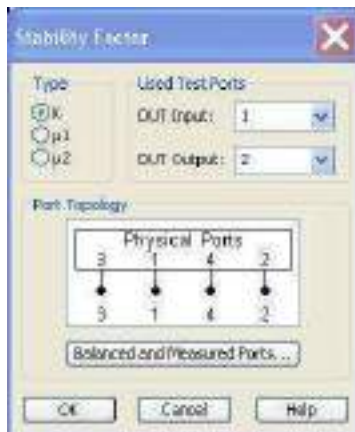

The *Stability* dialog provides the following settings:

- *Stability Factor* selects the stability factor to be calculated; see definitions below.
- *Used Test Ports* selects the test port number of the analyzer to be connected to the input (*DUT Input*) and the output of the DUT (*DUT Output*). The stability factor calculation is based on 2-port reflection **and** transmission S-parameters so that the input and output port numbers must be different.
- The *Port Topology* panel is analogous to the corresponding panel in the [More S Parameters](#) dialog. Stability factors can be calculated for unbalanced ports only. If a balanced port configuration is selected, the analyzer generates an error message.

Values of any of the stability factors less than 1 indicate potential instability.



Definition of stability factors and stability criteria

The stability factors K , μ_1 and μ_2 are real functions of the (complex) S-parameters, defined as follows:

$$K := \frac{1 - |S_{11}|^2 - |S_{22}|^2 + |S_{11} \cdot S_{22} - S_{12} \cdot S_{21}|^2}{2 \cdot |S_{12} \cdot S_{21}|}$$

$$\mu_1 := \frac{1 - |S_{11}|^2}{|S_{22} - \overline{S_{11}} \cdot (S_{11} \cdot S_{22} - S_{12} \cdot S_{21})| + |S_{12} \cdot S_{21}|}$$

$$\mu_2 := \frac{1 - |S_{22}|^2}{|S_{11} - \overline{S_{22}} \cdot (S_{11} \cdot S_{22} - S_{12} \cdot S_{21})| + |S_{12} \cdot S_{21}|}$$

where $\bar{S}$ denotes the complex conjugate of S .

Stability factors are calculated as functions of the frequency or another stimulus parameter. They provide criteria for linear stability of two-ports such as amplifiers. A linear circuit is said to be unconditionally stable if no combination of passive source or load can cause the circuit to oscillate.

- The K-factor provides a necessary condition for unconditional stability: A circuit is unconditionally stable if $K > 1$ and an additional condition is met. The additional condition can be tested by means of the stability factors μ_1 and μ_2 .
- The μ_1 and μ_2 factors both provide a necessary and sufficient condition for unconditional stability: The conditions $\mu_1 > 1$ or $\mu_2 > 1$ are both equivalent to unconditional stability. This means that μ_1 and μ_2 provide direct insight into the degree of stability or potential instability of linear circuits.

References: Marion Lee Edwards and Jeffrey H. Sinsky, "A New Criterion for Linear 2-Port Stability Using a Single Geometrically Derived Parameter", IEEE Trans. MTT, vol. 40, No. 12, pp. 2303-2311, Dec. 1992.

Remote control:

```
CALCulate<Ch>:PARAMeter:MEASure "<Trace_Name>", "KFAC21" |
"MUF121" | "MUF221" | ...
[SENSe<Chn>:]FUNCTION[:ON] "...:POWER:KFACTOR | MUFactor1 |
MUFactor2"
```

Create new trace and select name and measurement parameter:

```
CALCulate<Ch>:PARAMeter:SDEfine "<Trace_Name>", "SY11" | "SY12" |
"SY21" | "SY22"
```

Imbalance...


Opens a dialog to select the imbalance for balanced ports. This result is available in the simulated (virtual) differential mode but not in [true differential mode](#).




Definition of imbalance parameters

An ideal unbalance-balance transformer (balun) converts an unbalanced signal into a balanced one and vice versa. When it is driven with an unbalanced signal at its physical port k, unbalanced signals with equal amplitude and opposite phase appear at the physical ports m and n.

This means that the ratio $-S_{mk}/S_{nk}$ of the physical transmission coefficients of an ideal balun equals to 1. This ratio is called imbalance; it is a measure for the deviation of the balun from ideality. The definition of the imbalance of a DUT with one or two balanced ports and physical port numbers $m < n$, $k < l$ is given below.

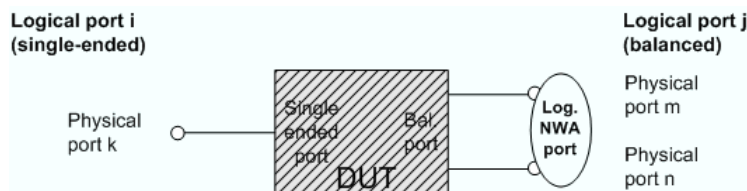


- The imbalance of a DUT with a single ended logical input port i and a balanced logical output port j is defined as $\text{Imb}_{ji} = -S_{mk}/S_{nk}$ and $\text{Imb}_{ij} = -S_{km}/S_{kn}$.

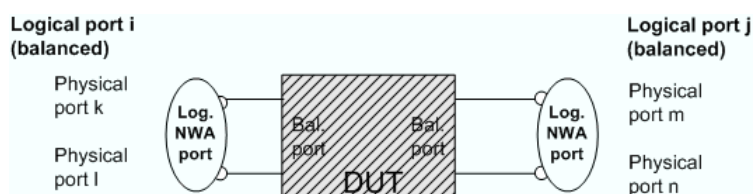

- The imbalance of a DUT with a balanced logical input port i and a balanced logical output port j is defined as $\text{Imb}_{ji} = -(S_{mk} - S_{nk})/(S_{ml} - S_{nl})$ and $\text{Imb}_{ij} = -(S_{km} - S_{kn})/(S_{lm} - S_{ln})$.

In general the imbalance is a quantity with two numeric indices numbering the logical output port and the logical input port of the DUT during the measurement ($\text{Imb}_{\text{out} < \text{in} >}$).

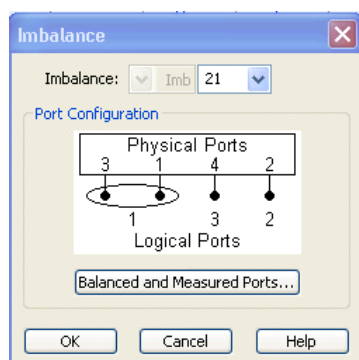

The *Imbalance* dialog provides the following settings:

- *Imbalance* selects the imbalance parameter $Imb_{<out><in>}$ to be measured.
- *Balanced and Measured Ports* opens the [Balanced Port and Port Groups](#) dialog to define the properties of the test ports. Single-ended (unbalanced) impedance parameters are assigned to the physical test ports of the analyzer. Balanced impedance parameters are assigned to logical test ports. Selecting a balanced port configuration with logical test ports means that the [unbalance-balance conversion](#) is switched on and that the analyzer provides [mixed mode parameters](#). A unbalance-balance conversion is a prerequisite for the calculation of imbalance parameters.


Remote control: `CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "IMB21" | "IMB12" ...`

Create new trace and select name and measurement parameter:

`CALCulate<Ch>:PARAmeter:SDEFine "<Trace_Name>", "IMB21" | "IMB12" ...`

All S-Params

Displays all S-parameters $S_{<out><in>}$ that the analyzer can calculate according to its port configuration. Reflection parameters S_{ii} are displayed in Smith charts; transmission parameters are displayed in Cartesian (dB Mag) diagrams. For a four-port analyzer with four single-ended ports:

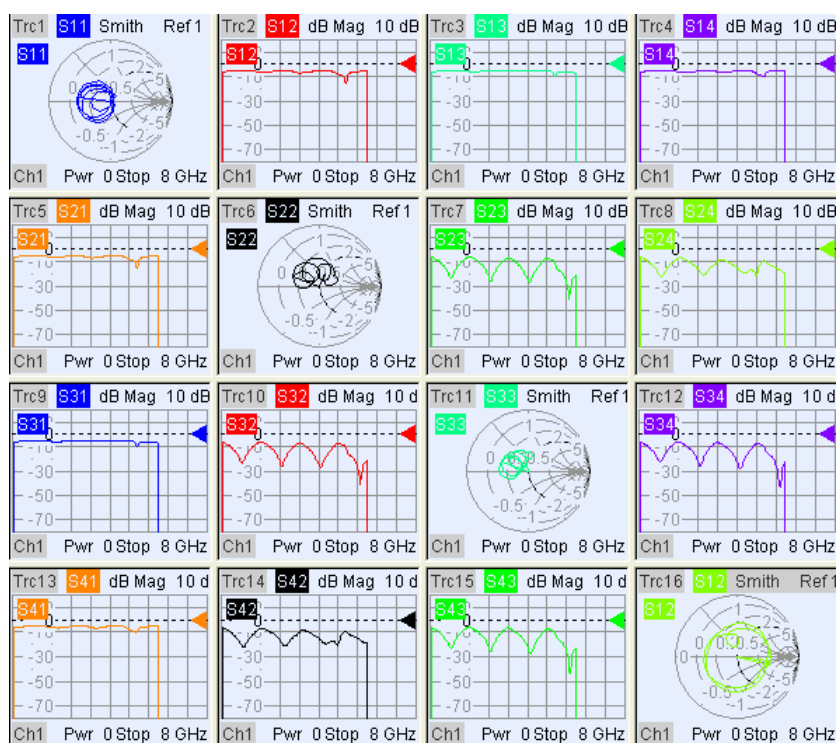


A n -port analyzer provides n^2 independent S-parameters $S_{\text{out}<\text{in}>}$. If a balanced port configuration is defined, the normal S-parameters are replaced by [mixed mode parameters](#).

Remote control: –

DC Inputs

The *DC Inputs* submenu selects DC voltages or the Power Added Efficiency (PAE) of an active two-port DUT to be measured and displayed.

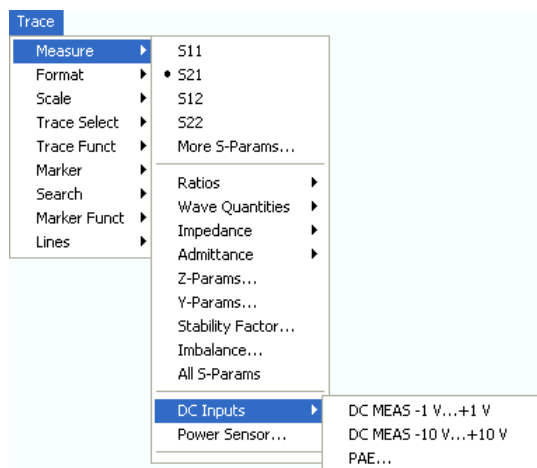

- [DC MEAS -1 V...+1 V](#) and [DC MEAS -10 V...+10 V](#) select the DC voltages fed to the input connectors [DC MEAS](#) as measured quantities.

- **PAE...** opens a dialog to select and configure the PAE measurement.

All DC and PAE measurements use the input connectors *DC MEAS* at the rear of the instrument. The measurement results are real-valued and displayed as a function of sweep variable (frequency, internal source power, time). The measurements can be performed in parallel to all RF measurements.

Exception: The PAE is not available in true differential mode.

DC MEAS –1 V...+1 V, DC MEAS –10 V...+10 V

Select the DC voltages between pins 6 and 8 of the *DC MEAS* input connectors as measured quantities. The input connectors are located at the rear panel of the instrument.



The two DC inputs cover different input voltage ranges; see data sheet or rear panel labelling.

- The left input connector *DC MEAS –1 V...+1 V* provides the most accurate measurement for smaller voltages but has a restricted input voltage range.
- The right input connector *DC MEAS –10 V...+10 V* can be used for larger voltages.


Remote control: `CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "DC+1V" | "DC+10V"`

Create new trace and select name and measurement parameter:

`CALCulate<Ch>:PARAmeter:SDEFine "<Trace_Name>", "DC+1V" | "DC+10V"`

PAE...

Opens a dialog to select the Power Added Efficiency (PAE) of an active 2-port device as measured quantity and to define the parameters for the PAE measurement.

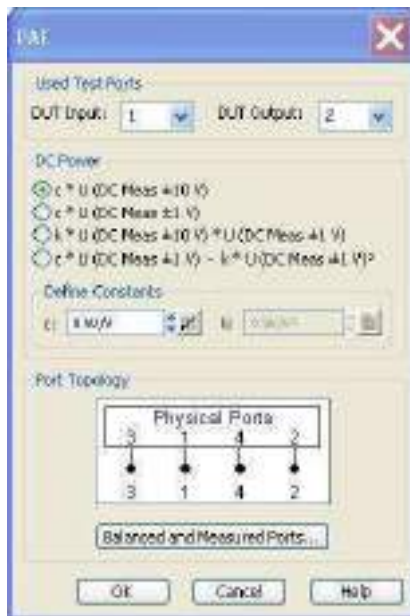

The PAE dialog provides the following settings:

- *Used Test Ports* selects the analyzer port providing the input signal a_1 (*DUT Input*) and the receiver port for the output signal b_2 (*DUT Output*).
- The radio buttons and input fields in the *DC Power* panel select the test model and the parameters for [measuring the DC power](#) P_{DC} supplied to the DUT. The constants can be incremented with the step size defined by clicking the buttons.
- *Select Topology* opens the [Port Configuration](#) dialog to define the properties of the test ports. Either physical test ports or logical ports can be used as *Input* and *Output* instrument ports. The graphics and messages displayed in the *Topology* panel are identical to the ones shown in the [More S-Parameters](#) dialog. When the unbalance-balance conversion is switched on, the PAE is calculated from the single-ended and differential mode wave quantities (see also [Mixed Mode Stability Factors](#)).




To obtain reasonable results, the test model and the respective Constant must be selected in accordance to the test setup.



Definition and measurement of PAE

The PAE measurement is based on the standard test setup for forward S-parameter measurements on a 2-port DUT. An additional measurement to determine the supplied power P_{DC} is required.

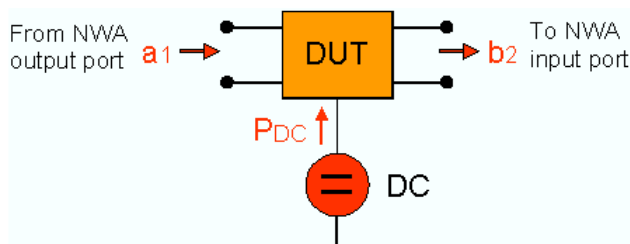

Definition:

The Power Added Efficiency (PAE) is the ratio of the added RF power generated by an active two-port

device (e.g. an amplifier) to the supplied DC power P_{DC} . The added RF power can be expressed as the difference between the power of the outgoing wave b_2 at the output of the DUT and the power of the incident wave a_1 at the input of the DUT; hence:

$$PAE = \frac{|b_2|^2 - |a_1|^2}{P_{DC}}$$

Positive PAE values indicate a gain in the RF power, negative values an attenuation. The PAE is always smaller than 1.

Remote control: `CALCulate<Ch>:PARAMeter:MEASure "<Trace_Name>", "PAE21" | "PAE12" | ...`

Create new trace and select name and measurement parameter:


`CALCulate<Ch>:PARAMeter:SDEFine "<Trace_Name>", "PAE21" | "PAE12" | ...`

DC Power Measurement

The power P_{DC} supplied to the DUT can be measured using either one of the DC inputs *DC MEAS ± 10V* (for large voltages), *DC MEAS ± 1V* (for small voltages) or both inputs. The *DC Power* panel in the *PAE* dialog suggests different models involving different test setups and approximations. The models are selected by means of the radio buttons in the *DC Power* panel; they depend on the properties of the DC power supply (constant current I_{DC} or constant voltage U_{DC}) and an optional precision resistor R used to measure the DC current. The values I_{DC} , U_{DC} and R determine the *Constants* c and k . These constants must be entered in the *DC Power* panel, using the appropriate physical units, before a particular model can be activated.

- $I_{DC} = \text{const.}, R = 0 \rightarrow P_{DC} = c * U \text{ (DC Meas } -10 \text{ V...+10 V)}$ Assume that the DC power supply provides a constant current I_{DC} and that the voltage applied to the DUT is measured via DC MEAS -10V...+10 V ($R = 0$). $P_{DC} = I_{DC} * U(\text{DC MEAS } -10\text{V...+10 V})$, hence the Constant c must be set equal to I_{DC} . The unit field shows the SI unit of a current (W/V). The input field for k is disabled (k is not used).
- $U_{DC} = \text{const.}, R \ll R_{DUT}, P_R = 0 \rightarrow P_{DC} = c * U \text{ (DC MEAS } -1 \text{ V...+1 V)}$ Assume that the DC power supply provides a constant voltage U_{DC} and that the current through the DUT is measured by means of a precision resistor R connected in series and DC INP 2. If $R \ll R_{DUT}$ the power consumption of the resistor can be neglected so that $P_{DC} = U_{DC} / R * U(\text{DC MEAS } -1 \text{ V...+1 V})$, hence the Constant c must be set equal to U_{DC} / R . The unit field shows the SI unit of a current (W/V). The input field for k is disabled (k is not used).
- $R \ll R_{DUT}, P_R = 0 \rightarrow P_{DC} = k * U \text{ (DC MEAS } -10 \text{ V...+10 V)} * U \text{ (DC MEAS } -1 \text{ V...+1 V)}$ Assume that the DC power supply provides an arbitrary (not necessarily constant) voltage U_{DC} and current I_{DC} . The current through the DUT is measured by means of a precision resistor R connected in series and DC INP 2. The voltage applied to the DUT and R is measured via DC MEAS -10 V...+10 V . If $R \ll R_{DUT}$ the power consumption of the resistor can be neglected so that $P_{DC} = 1 / R * U(\text{DC MEAS } -10 \text{ V...+10 V}) * U(\text{DC MEAS } -1 \text{ V...+1 V})$, hence the Constant k must be set equal to $1 / R$. The unit field shows the SI unit of an inverse resistance (W/V²). The input field for c is disabled (c is not used).
- $U_{DC} = \text{const.}, P_R = U \text{ (DC INP2)}^2 / R \rightarrow P_{DC} = c * U \text{ (DC MEAS } -1 \text{ V...+1 V)} + k * U \text{ (DC MEAS } -1 \text{ V...+1 V)}^2$ Assume that the DC power supply provides a constant voltage U_{DC} and that the current through the DUT is measured by means of a precision resistor R connected in series and DC INP 2. $P_{DC} = U_{DUT} / R * U(\text{DC MEAS } -1 \text{ V...+1 V}) = (U_{DC} - U_R) / R * U(\text{DC MEAS } -1 \text{ V...+1 V}) = U_{DC} / R * U(\text{DC MEAS } -1 \text{ V...+1 V}) - 1 / R * U(\text{DC MEAS } -1 \text{ V...+1 V})^2$, hence the

Constant c must be set equal to U_{DC} / R and k must be set equal to $1/R$. The unit fields for c and k show the SI units of a current (W/V) and an inverse resistance (W/V²), respectively.

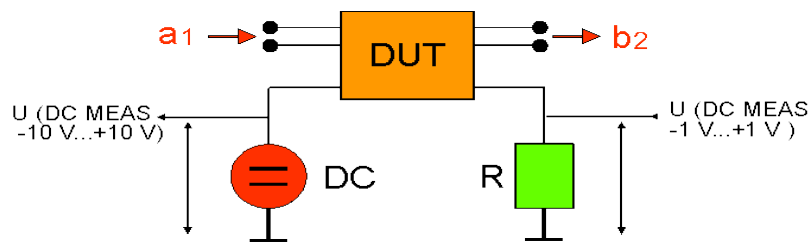

Models 1 and 4 provide the exact DC power supplied to the DUT, the two other models are based on the approximation $P_R = 0$.

Remote control: `[SENSe<Chn>:] PAE:EXPRession`
`[SENSe<Chn>:] PAE:C`
`[SENSe<Chn>:] PAE:K`


Power Sensor...

Opens a configuration dialog for the measurement of wave quantities using an external power meter.



Power Sensor measurement example

The simplest test setup for a *Power Sensor* measurement involves one analyzer source port and a power sensor. The power sensor is connected e.g. to the analyzer's USB port and provides the (scalar) wave quantity results.

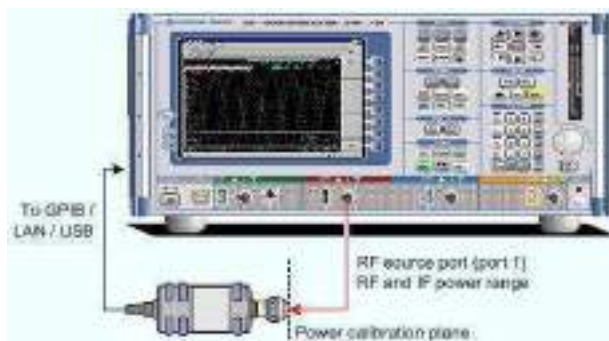

- The controls in the *Power Meter* panel show the configured power meters, open the *System Configuration – External Power Meters* dialog for adding and configuring external power meters, start *Auto Zeroing* for the selected power meter, and open the *Power Meter Correction* dialog..
- *Show as* selects the physical unit of the displayed trace. It is possible to display the measured Voltage V or convert the wave quantity into an effective power according to $P = V^2 / \text{Re}(Z_0)$. Z_0 denotes the reference impedance of the source port. The reference impedances are defined in the *Port Configuration* dialog.
- *Source Port* selects one of the available test ports of the analyzer as a source of the stimulus signal.



Auto zero function

Zeroing calibrates the external power sensor by adjusting its reading at zero signal power. For this purpose, the RF power source must be switched off or disconnected from the sensor (see below!). R&S power sensors automatically detect the presence of any significant input power. This aborts zeroing and generates an error message. Zeroing can take a few seconds, depending on the sensor model; refer to the documentation of your external power sensor for more information.

Repeat zeroing

- During warm-up after switching on or connecting the instrument
- After a substantial change of the ambient temperature
- After fastening the power sensor module to an RF connector at high temperature
- After several hours of operation
- When very low-power signals are to be measured, e.g. less than 10 dB above the lower measurement limit.

Switch off the RF power source for zeroing; do not disconnect it from the power sensor. In this way you will maintain the thermal equilibrium, and zeroing will also compensate for the noise superimposed on the measured signal (e.g. from a broadband amplifier).

A reset of the analyzer does not affect the last zeroing result.

Remote control: `CALCulate<Chn>:FORMat:WQUType POWer | VOLTage
CALCulate<Ch>:PARAmeter:MEASure "<Trace_Name>", "Pmtr1D1" | ...
SYSTem:COMMunicate:RDEVice:PMETer<pmeter_no>:AZERo`

Create new trace and select name and measurement parameter:

`CALCulate<Ch>:PARAmeter:SDEFine "<Trace_Name>", "Pmtr1D1" | ...`

Power Meter Correction

This dialog selects origin of the frequency information for the power meter.



For best accuracy, power meters must know the exact frequency of the measured signal. If the signal path


between the source and the power meter contains a frequency-converting device, the frequency at the power meter differs from the frequency of the source port. It is recommended to define the modified frequency range for the power meter in the *Port Configuration* dialog and select *From Power Meter Entry in Port Configuration*.

This setting overwrites the analogous setting in the *Power Meter Correction* dialog for source power calibration.

Remote control: `[SENSe<Ch>:]PMMO ON | OFF`

Noise Figure...

The *Noise Figure* dialog selects the *noise figure* of a DUT as measured quantity (with option R&S ZVAB-K30).

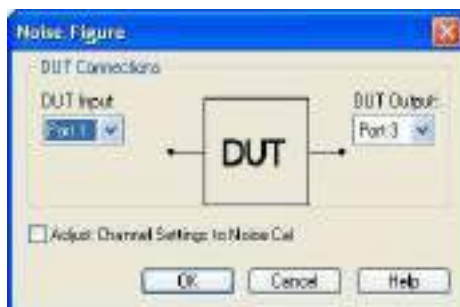

The dialog provides the following settings:

- *DUT Connections* selects the test port number of the analyzer to be connected to the input (*DUT Input*) and the output of the DUT (*DUT Output*). The noise figure may be measured in reflection or in transmission, so that arbitrary combinations of port numbers are allowed.
- *Adjust Channel Settings to Noise Cal* overwrites the current channel settings with the ones that were used during the active *Noise Figure Calibration*; see background information below.



Adjust Channel Settings to Noise Cal

The purpose of the *Adjust Channel Settings to Noise Cal* function is to avoid inconsistencies between the noise figure results and a previous noise figure calibration. The function is available if a *Noise Figure Calibration* has been performed and applied to the active channel. An overview of the channel settings and the calibration characteristics appears in the *Calibration Manager* dialog.

The analyzer adjusts the channel settings which are specific to the noise figure measurement. These settings are essentially accessible from the *Define Noise Figure Measurement* and *Noise Figure Calibration* dialog. General channel settings (such as the *Start* and *Stop* values of the sweep range) are not adjusted.

Remote control: `CALCulate<Ch>:PARAMeter:MEASure "<Trace_Name>", "NF11" | "NF12" | ... | "NF0101" | ...`


Create new trace and select name and measurement parameter:

`CALCulate<Ch>:PARAMeter:SDEFine "<Trace_Name>", "NF11" | "NF12" | ... | "NF0101" | ...`

`CALCulate<Ch>:PARAMeter:NFIGure:CSETtings`

Format

The *Format* submenu defines how the measured data is presented in the graphical display.

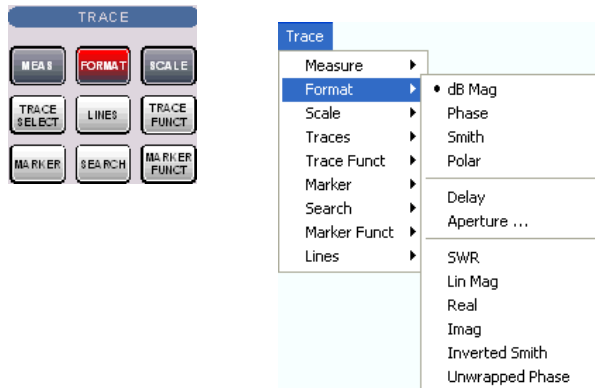

- **dB Mag** selects a Cartesian diagram with a logarithmic scale of the vertical axis to display the magnitude of a complex measured quantity.
- **Phase** selects a Cartesian diagram with a linear vertical axis to display the phase of a complex measured quantity in the range between -180 degrees and $+180$ degrees.
- **Smith** selects a Smith diagram to display an S-parameter or ratio.
- **Polar** selects a polar diagram to display an S-parameter or ratio.
- **Delay** calculates the group delay from an S-parameter or ratio and displays it in a Cartesian diagram.
- **Aperture** sets a delay aperture for the delay calculation.
- **SWR** calculates the Standing Wave Ratio from the measured reflection S-parameters and displays it in a Cartesian diagram.
- **Lin Mag** selects a Cartesian diagram with a linear scale of the vertical axis to display the magnitude of the measured quantity.
- **Real** selects a Cartesian diagram to display the real part of a complex measured quantity.
- **Imag** selects a Cartesian diagram to display the imaginary part of a complex measured quantity.
- **Inverted Smith** selects an inverted Smith diagram to display an S-parameter or ratio.
- **Unwrapped Phase** selects a Cartesian diagram with a linear vertical axis to display the phase of the measured quantity in an arbitrary phase range.

The *Format* settings are closely related to the settings in the **Scale** submenu and in the **Display** menu. All of them have an influence on the way the analyzer presents data on the screen.



The analyzer allows arbitrary combinations of display formats and measured quantities (**Trace – Measure**). Nevertheless, in order to extract useful information from the data, it is important to select a display format which is appropriate to the analysis of a particular measured quantity; see **Measured Quantities and Display Formats**.



An extended range of formats is available for markers. To convert any point on a trace, create a marker and select the appropriate **marker format**. Marker and trace formats can be applied independently.

dB Mag

Selects a Cartesian diagram with a logarithmic scale of the vertical axis to display the magnitude of the complex measured quantity.

Properties: The stimulus variable appears on the horizontal axis, scaled linearly. The magnitude of the complex quantity C , i.e. $|C| = \sqrt{\text{Re}(C)^2 + \text{Im}(C)^2}$, appears on the vertical axis, scaled in dB. The decibel conversion is calculated according to $\text{dB Mag}(C) = 20 * \log(|C|)$ dB.

Application: dB Mag is the default format for the complex, dimensionless S-parameters. The dB-scale is the natural scale for measurements related to power ratios (insertion loss, gain etc.).



Alternative Formats

The magnitude of each complex quantity can be displayed on a [linear scale](#). It is possible to view the [real](#) and [imaginary](#) parts instead of the magnitude and [phase](#). Both the magnitude and phase are displayed in the [polar](#) diagram.

Remote control: `CALCulate<Chn>:FORMat MLOGarithmic`

Phase

Selects a Cartesian diagram with a linear vertical axis to display the phase of a complex measured quantity in the range between -180 degrees and $+180$ degrees.

Properties: The stimulus variable appears on the horizontal axis, scaled linearly. The phase of the complex quantity C , i.e. $\varphi(C) = \arctan(\text{Im}(C) / \text{Re}(C))$, appears on the vertical axis. $\varphi(C)$ is measured relative to the phase at the [start](#) of the sweep (reference phase = 0°). If $\varphi(C)$ exceeds $+180^\circ$ the curve jumps by -360° ; if it falls below -180° , the trace jumps by $+360^\circ$. The result is a trace with a typical sawtooth shape. The alternative [Phase Unwrapped](#) format avoids this behavior.

Application: Phase measurements, e.g. phase distortion, deviation from linearity.



Alternative Formats:

The magnitude of each complex quantity can be displayed on a [linear scale](#) or on a [logarithmic scale](#). It is possible to view the [real](#) and [imaginary](#) parts instead of the magnitude and phase. Both the magnitude and phase are displayed in the [polar](#) diagram. As an alternative to direct phase measurements, the analyzer provides the derivative of the phase response for a frequency sweep ([Delay](#)).

Remote control: `CALCulate<Chn>:FORMat PHASe`

Smith

Selects a Smith chart to display a complex quantity, primarily a reflection S-parameter.

Properties: The [Smith chart](#) is a circular diagram obtained by mapping the positive complex semi-plane into a unit circle. Points with the same resistance are located on circles, points with the same reactance produce arcs. If the measured quantity is a complex reflection coefficient (S_{11} , S_{22} etc.), then the unit Smith chart represents the normalized impedance. In contrast to the [polar diagram](#), the scaling of the diagram is not linear.

Application: Reflection measurements, see [application example](#).



The axis for the sweep variable is lost in Smith charts but the marker functions easily provide the stimulus value of any measurement point. dB values for the magnitude and other conversions can be obtained by means of the [Marker Format](#) functions.

Remote control: `CALCulate<Chn>:FORMat SMITh`

Polar

Selects a polar diagram to display a complex quantity, primarily an S-parameter or ratio.

Properties: The [polar diagram](#) shows the measured data (response values) in the complex plane with a horizontal real axis and a vertical imaginary axis. The magnitude of a complex value is determined by its distance from the center, its phase is given by the angle from the positive horizontal axis. In contrast to the [Smith chart](#), the scaling of the axes is linear.

Application: Reflection or transmission measurements, see [application example](#).



The axis for the sweep variable is lost in polar diagrams but the marker functions easily provide the stimulus value of any measurement point. dB values for the magnitude and other conversions can be obtained by means of the [Marker Format](#) functions.

Remote control: `CALCulate<Chn>:FORMat POLar`

Delay

Calculates the (group) delay from the measured quantity (primarily: from a transmission S-parameter) and displays it in a Cartesian diagram.

Properties: The group delay τ_g represents the propagation time of wave through a device. τ_g is a real quantity and is calculated as the negative of the derivative of its phase response. A non-dispersive DUT shows a linear phase response, which produces a constant delay (a constant ratio of phase difference to frequency difference).



Mathematical relations: Delay, Aperture, Electrical Length

The group delay is defined as:

$$\tau_g = -\frac{d\phi_{rad}}{d\omega} = -\frac{d\phi_{deg}}{360^\circ df}$$

where

$\Phi_{rad/deg}$ = Phase response in radians or degrees

ω = Frequency/angular velocity in radians/s

f = Frequency in Hz

In practice, the analyzer calculates an approximation to the derivative of the phase response, taking a small frequency interval Δf and determining the corresponding phase change $\Delta\Phi$. The delay is thus computed as:

$$\tau_{g,meas} = -\frac{\Delta \phi_{deg}}{360^\circ \Delta f}$$

The **aperture** Δf must be adjusted to the conditions of the measurement.

If the delay is constant over the considered frequency range (non-dispersive DUT, e.g. a cable), then τ_g and $\tau_{g,meas}$ are identical and

$$\tau_g = \frac{d(360^\circ f \cdot \Delta t)}{360^\circ d f} = \Delta t = \frac{L_{mech} \cdot \sqrt{\epsilon}}{c}$$

where Δt is the propagation time of the wave across the DUT, which often can be expressed in terms of its mechanical length L_{mech} , the permittivity ϵ , and the velocity of light c . The product of $L_{mech} \cdot \sqrt{\epsilon}$ is termed the electrical length of the DUT and is always larger or equal than the mechanical length ($\epsilon > 1$ for all dielectrics and $\epsilon = 1$ for the vacuum).

Application: Transmission measurements, especially with the purpose of investigating deviations from linear phase response and phase distortions. To obtain the delay a **frequency sweep** must be active.



The cables between the analyzer test ports and the DUT introduce an unwanted delay, which often can be assumed to be constant. Use the **Zero Delay at Marker** function, define a numeric length **Offset** or use the **Auto Length** function to mathematically compensate for this effect in the measurement results. To compensate for a frequency-dependent delay in the test setup, a **system error correction** is required.



The delay for reflection factors corresponds to the transmission time in forward **and** reverse direction; see **Offset – Auto Length – Length and Delay Measurements**.

Remote control: `CALCulate<Chn>:FORMat GDElay`

Aperture


Sets a delay aperture for the **delay** calculation. The aperture Δf is entered as an integer number of **Aperture Steps**:

An aperture step corresponds to the distance between two sweep points.

Properties: The delay at each sweep point is computed as:

$$\tau_{g,meas} = -\frac{\Delta \phi_{deg}}{360^\circ \cdot \Delta f}$$

where the aperture Δf is a finite frequency interval around the sweep point f_0 and the analyzer measures the corresponding phase change $\Delta \Phi$.

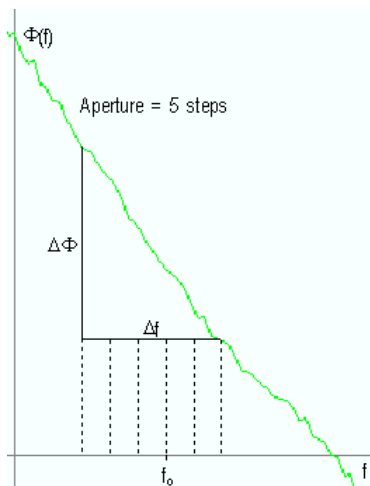

Calculation of Δf and $\Delta \Phi$

With a given number of aperture steps n the delay at sweep point no. m is calculated as follows:

- If n is even ($n = 2k$), then $\Delta f(m) = f(m+k) - f(m-k)$ and $\Delta \Phi(m) = \Delta \Phi(m+k) - \Delta \Phi(m-k)$.
- If n is odd ($n = 2k+1$), then $\Delta f(m) = f(m+k) - f(m-k-1)$ and $\Delta \Phi(m) = \Delta \Phi(m+k) - \Delta \Phi(m-k-1)$.

The calculated phase difference (and thus the group delay) is always assigned to the frequency point no. m . For linear sweeps and odd numbers of aperture steps, the center of the aperture range is $[f(m+k) + f(m-k-1)] / 2 = f(m-1/2)$, i.e. half a frequency step size below the sweep point $f(m)$. This is why toggling from even to odd numbers of aperture steps and back can virtually shift the group delay curve towards higher/lower frequencies. It is recommended to use even numbers of aperture steps, especially for large frequency step sizes.

The delay calculation is based on the already measured sweep points and does not slow down the measurement.

Δf is constant over the entire sweep range, if the sweep type is a [Lin. Frequency](#) sweep. For [Log. Frequency](#) and [Segmented Frequency](#) sweeps, it varies with the sweep point number m .

Application The aperture must be adjusted to the conditions of the measurement. A small aperture increases the noise in the group delay; a large aperture tends to minimize the effects of noise and phase uncertainty, but at the expense of frequency resolution. Phase distortions (i.e. deviations from linear phase) which are narrower in frequency than the aperture tend to be smeared over and cannot be measured.



Finding an optimum aperture


The measurement uncertainty $\delta\tau$ of the delay τ is essentially due to the uncertainty of the phase measurement. Other effects, such as the frequency uncertainty of the analyzer, are negligible. From the definition of the measured delay:

$$\tau_{g,meas} = -\frac{\Delta\phi_{deg}}{360^\circ \cdot \Delta f} \Rightarrow \delta\tau \approx \frac{\delta(\Delta\phi_{deg})}{360^\circ \cdot \Delta f} = \frac{\delta(\Delta\phi_{deg})}{\Delta\phi_{deg}} \cdot \tau_{g,meas}$$


From this equation, we can draw the following conclusions:

- The accuracy of the group delay measurement is proportional to the aperture Δf ; the uncertainty of the delay due to phase uncertainties increases when the aperture is reduced.
- If the aperture Δf approaches a value of $\delta(\Delta\Phi)/(360^\circ \cdot \tau_{g,meas})$, then the delay uncertainty is


comparable to the delay itself. Then the delay curve is noisy as shown below. The aperture in the example is set to $400 \text{ MHz} / 200 = 2 \text{ MHz}$, the group delay uncertainty is approx. 0.5 ns . The estimated uncertainty of the phase difference measurement is $\delta(\Delta\Phi) < 0.4 \text{ deg}$, in accordance with the specified phase uncertainty of the network analyzer.

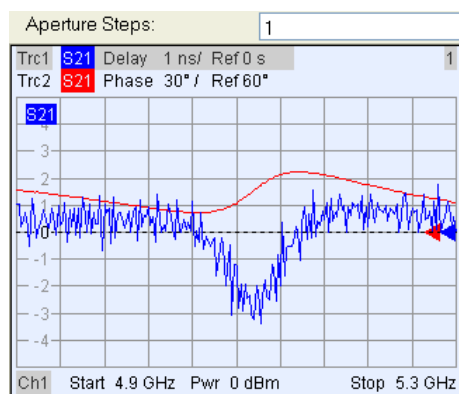

- With a phase uncertainty $\delta(\Delta\Phi) < 0.4 \text{ deg}$, the uncertainty of the delay equals to $\delta\tau \approx 0.001/\Delta f$. For vector network analyzers R&S ZVA8 and default settings (maximum span, 201 sweep points), the aperture is approx. $8 \text{ GHz} * 10 / 200 = 400 \text{ MHz}$. The delay uncertainty is smaller than 2.5 ps .
- In many instances an aperture around $\Delta f = 0.3 / \tau_{g, \text{meas}}$ provides optimum measurement accuracy. For a measured group delay of 1 ns (corresponding to a cable with an electrical length of approx. 30 cm), this condition results in an aperture of 300 MHz . Optimum apertures for other group delay values are listed below. In the following example, the measured group delay is approx. 3 ns . A 100 MHz aperture virtually eliminates the noise on the trace.

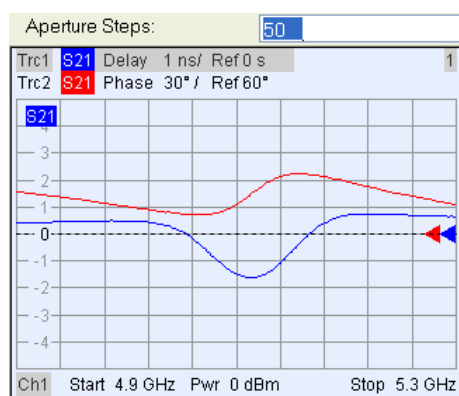


- The 100 MHz aperture in the example above is actually too wide, because the phase shows strong distortions in a frequency interval with a width of approx. 80 MHz . The wide aperture results in a smoothing effect of the delay trace. A reduced aperture of 20 MHz yields a more accurate group delay in the vicinity of the minimum.

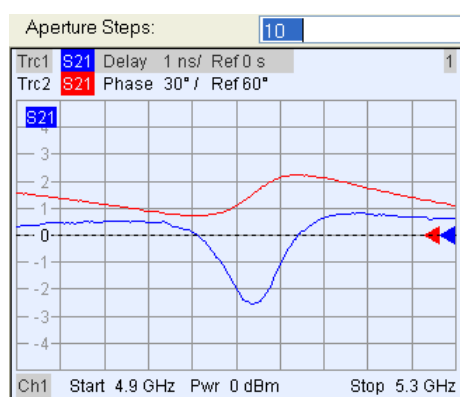

The following table lists "optimum" apertures $\Delta f = 0.3 / \tau_{g,meas}$ together with sample analyzer settings for a frequency sweep with 201 sweep points. Notice that the sweep span must be reduced or the number of frequency points increased to obtain small apertures.

Group delay $\tau_{g,meas}$	Aperture Δf	Span	No. of aperture steps
1 ns	300 MHz	6 GHz	10
10 ns	30 MHz	600 MHz	10
100 ns	3 MHz	60 MHz	10
1 μ s	300 kHz	6 MHz	10
10 μ s	30 kHz	600 kHz	10
10 μ s	3 kHz	60 kHz	10
1 ms	300 Hz	6 kHz	10

The relationship between group delay and "optimum" aperture is also shown in the following diagram.

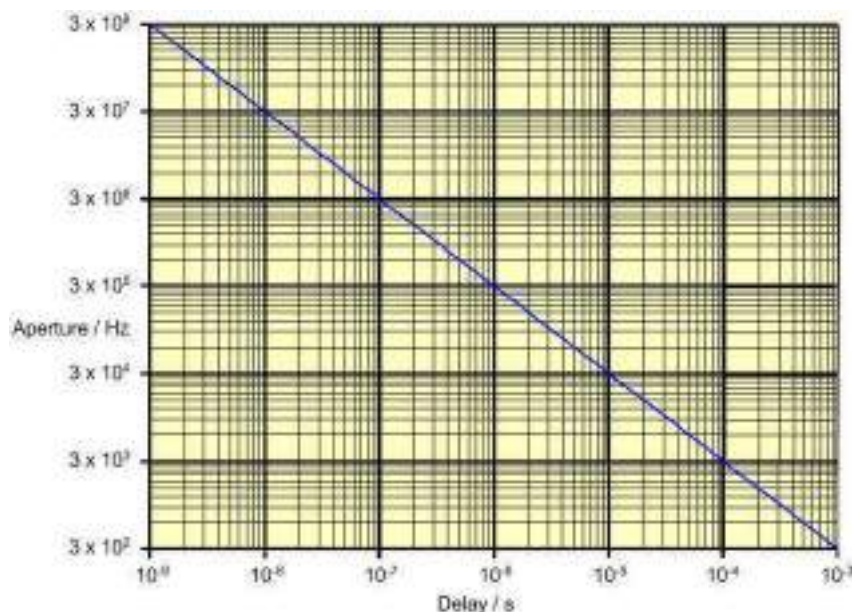

For more information about group and phase delay measurements refer to the application note 1EZ35_1E which is available for download on the Rohde & Schwarz internet.

<http://www2.rohde->

schwarz.com/en/products/test_and_measurement/network_analysis/?_view=downloads&downloadtype=20&type=20&downid=1550

Remote control: `CALCulate<Chn>:GDAPerture:SCount`

SWR

Calculates the Standing Wave Ratio (SWR) from the measured quantity (primarily: from a reflection S-parameter) and displays it in a Cartesian diagram.

Properties: The SWR (or Voltage Standing Wave Ratio, VSWR) is a measure of the power reflected at the input of the DUT. It is calculated from the magnitude of the [reflection coefficients](#) S_{ii} (where i denotes the port number of the DUT) according to:

$$SWR = \frac{1 + |S_{ii}|}{1 - |S_{ii}|}$$

The superposition of the incident and the reflected wave on the transmission line connecting the analyzer and the DUT causes an interference pattern with variable envelope voltage. The SWR is the ratio of the maximum voltage to the minimum envelope voltage along the line.



Interpretation of the SWR

The superposition of the incident wave I and the reflected wave R on the transmission line connecting the analyzer and the DUT causes an interference pattern with variable envelope voltage. The SWR is the ratio of the maximum voltage to the minimum envelope voltage along the line:

$$SWR = V_{Max}/V_{Min} = (|V_I| + |V_R|) / (|V_I| - |V_R|) = (1 + |S_{ii}|) / (1 - |S_{ii}|)$$

Application: Reflection measurements with conversion of the complex S-parameter to a real SWR.

Remote control: `CALCulate<Chn>:FORMat SWR`

Lin Mag

Selects a Cartesian diagram with a linear vertical axis scale to display the magnitude of the measured quantity.

Properties: The stimulus variable appears on the horizontal axis, scaled linearly. The magnitude of the complex quantity C, i.e. $|C| = \sqrt{\text{Re}(C)^2 + \text{Im}(C)^2}$, appears on the vertical axis, also scaled linearly.

Application: Real measurement data (i.e. the Stability Factors, DC Input 1/2, and the PAE) are always displayed in a Lin Mag diagram.



Alternative Formats

The magnitude of each complex quantity can be displayed on a [logarithmic scale](#). It is possible to view the [real](#) and [imaginary](#) parts instead of the magnitude and [phase](#).

Remote control: `CALCulate<Chn>:FORMat MLINear`

Real

Selects a Cartesian diagram to display the real part of a complex measured quantity.

Properties: The stimulus variable appears on the horizontal axis, scaled linearly. The real part $\text{Re}(C)$ of the complex quantity $C = \text{Re}(C) + j \text{Im}(C)$, appears on the vertical axis, also scaled linearly.

Application: The real part of an impedance corresponds to its resistive portion.



Alternative Formats

It is possible to view the magnitude and [phase](#) of a complex quantity instead of the real and imaginary part. The magnitude can be displayed on a [linear scale](#) or on a [logarithmic scale](#). Both the real and imaginary parts are displayed in the [polar](#) diagram.

Remote control: `CALCulate<Chn>:FORMat REAL`

Imag

Selects a Cartesian diagram to display the imaginary part of a complex measured quantity.

Properties: The stimulus variable appears on the horizontal axis, scaled linearly. The imaginary part $\text{Im}(C)$ of the complex quantity $C = \text{Re}(C) + j \text{Im}(C)$, appears on the vertical axis, also scaled linearly.

Application: The imaginary part of an impedance corresponds to its reactive portion. Positive (negative) values represent inductive (capacitive) reactance.



Alternative Formats

It is possible to view the magnitude and [phase](#) of a complex quantity instead of the real and imaginary part. The magnitude can be displayed on a [linear scale](#) or on a [logarithmic scale](#). Both the real and imaginary parts are displayed in the [polar](#) diagram.

Remote control: `CALCulate<Chn>:FORMat IMAGinary`

Inverted Smith

Selects an inverted Smith chart to display a complex quantity, primarily a reflection S-parameter.

Properties: The [Inverted Smith chart](#) is a circular diagram obtained by mapping the positive complex semi-plane into a unit circle. If the measured quantity is a complex reflection coefficient (S_{11} , S_{22} etc.), then the unit Inverted Smith chart represents the normalized admittance. In contrast to the [polar diagram](#), the scaling of the diagram is not linear.

Application: Reflection measurements, see [application example](#).



The axis for the sweep variable is lost in Smith charts but the marker functions easily provide the stimulus value of any measurement point. dB values for the magnitude and other conversions can be obtained by means of the [Marker Format](#) functions.

Remote control: `CALCulate<Chn>:FORMat ISMith`

Unwrapped Phase

Selects a Cartesian diagram with an arbitrarily scaled linear vertical axis to display the phase of the measured quantity.

Properties: The stimulus variable appears on the horizontal axis, scaled linearly. The phase of the complex quantity C , i.e. $\varphi(C) = \arctan(\operatorname{Im}(C) / \operatorname{Re}(C))$, appears on the vertical axis. $\varphi(C)$ is measured relative to the phase at the [start](#) of the sweep (reference phase = 0°). In contrast to the normal [Phase](#) format, the display range is not limited to values between –180° and +180°. This avoids artificial jumps of the trace but can entail a relatively wide phase range if the sweep span is large.

Application: Phase measurements, e.g. phase distortion, deviation from linearity.




After changing to the *Unwrapped Phase* format, use *Trace – Scale – Autoscale* to re-scale the vertical axis and view the entire trace.

Remote control: `CALCulate<Chn>:FORMat UPHase`

Scale

The *Scale* settings define how the active trace is presented in the diagram selected in the *Format* submenu.

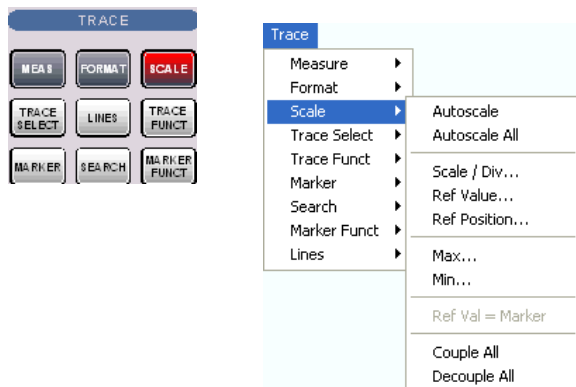

- [Autoscale](#) adjusts the diagram scale in order to display the entire active trace in the diagram area.
- [Autoscale All](#) adjusts the diagram scale in order to display all traces in the diagram area.
- [Scale/Div.](#) sets the value of the vertical diagram divisions.
- [Ref. Value](#) sets the reference line of a Cartesian diagram or the outer circumference of a polar diagram.
- [Ref. Position](#) defines the position of the reference line in a Cartesian diagram.
- [Max](#) and [Min](#) define the upper and lower edge of a Cartesian diagram.
- [Ref Val = Marker](#) sets the reference value equal to the active marker value.
- [Couple All / Decouple All](#) select common or independent scale settings for all traces in the active diagram area.

The *Scale* settings are closely related to the settings in the [Format](#) submenu and in the [Display](#) menu. All of them have an influence on the way the analyzer presents data on the screen.

The *Scale* settings depend on the diagram type ([Trace – Format](#)) because not all diagrams can be scaled in the same way:

- In Cartesian diagrams, all scale settings are available.
- In circular diagrams, no *Scale/Div.*, no *Ref. Position*, and no *Max* and *Min* values can be defined.

The default scale is activated automatically when a display format (diagram type) is selected. Scale settings that are not compatible with the current display format are disabled (grayed).



Relations between the scaling parameters

The scaling parameters *Scale / Div*, *Ref Value*, *Ref Position*, *Max*, *Min* are coupled together in the following manner:

Max – Min = Scale / Div * <Number of graticule divisions>
 Max = Ref Value when Ref Position is 10
 Min = Ref Value when Ref Position is 0



The [Marker Functions](#) provide a convenient alternative to manual diagram scaling.

Autoscale

Adjusts the [Scale Divisions](#) and the [Ref. Value](#) in order to display the entire active trace in the diagram area, leaving an appropriate display margin.

- In Cartesian diagrams, the analyzer re-calculates the values of the vertical divisions so that the trace fits onto 80% of the vertical grid. The reference value is chosen to center the trace in the diagram.
- In circular diagrams (*Polar*, *Smith*, *Inverted Smith*), the analyzer re-calculates the values of the radial divisions so that the diagram is confined to approx. 80% of the outer circumference. The reference value is set to the value of the outer circumference.

Autoscale does not affect the stimulus values and the horizontal axis.

Remote control: `DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:Y[:SCALe]:AUTO ONCE`

Autoscale All

Adjusts the [Scale Divisions](#) and the [Ref. Value](#) in order to display all traces in the diagram area, leaving an appropriate display margin. This scale settings are analogous to the [Autoscale](#) function. The traces in the active diagram area are taken into account irrespective of their channel assignment.

Scale Div.

Sets the value of the vertical diagram divisions in Cartesian diagrams.



Scale / Div corresponds to the increment between two consecutive grid lines. The unit depends on the display format: dB for display format *dB Mag*, degrees for *Phase* and *Unwrapped Phase*, ns for *Delay*, U

(units) for all other (dimensionless) formats.

Scale /Div is not available (grayed) for circular diagrams (*Polar, Smith, Inverted Smith*).

Remote control: `DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:Y:PDIVision`

Ref. Value

Sets the reference line of a Cartesian diagram or the outer circumference of a circular diagram.



- In Cartesian diagrams *Ref. Value* defines the value of the reference line, indicated by a  symbol at the right edge of the diagram area. The color of the symbol corresponds to the trace color. As the *Ref. Value* is varied, the position of the reference line ([Ref. Position](#)) is left unchanged, so that the current trace is shifted in vertical direction. The unit of the *Ref. Value* depends on the display format: dB for display format *dB Mag*, degrees for *Phase* and *Unwrapped Phase*, ns for *Delay*, U (units) for all other (dimensionless) formats.
- In circular diagrams (*Polar, Smith, Inverted Smith*), *Ref. Value* defines the value of the outer circumference. Changing *Ref. Value* enlarges or scales down the diagram, leaving the center unchanged. The unit is U (units) for all circular diagrams.



Use the [paste marker list](#) for convenient entry of the reference value.

Remote control: `DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:Y:RLEVel`

Ref. Position

Defines the position of the reference line in a Cartesian diagram.



The reference line is indicated by a  symbol at the right edge of the diagram area. The color of the symbol corresponds to the trace color. *Ref. Position* is defined on a linear scale between 0 (bottom line of the diagram) and 10 (top line of the diagram). As the *Ref. Position* is varied, the value of the reference line ([Ref. Value](#)) is left unchanged, so the current trace is shifted together with the *Ref. Position*.

Ref. Position is not available (grayed) for polar diagrams (*Polar, Smith, Inverted Smith*).



Use the analyzer's drag-and-drop functionality to move the reference line symbol to the desired position.

Remote control: `DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:Y:RPOSition`

Max and Min

Define the upper and lower edge of a Cartesian diagram.

Max: 2.8 dB   Close

Min: -37.2 dB   Close

Max and Min are not available (grayed) for polar diagrams (*Polar, Smith, Inverted Smith*).

Remote control: `DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:Y:TOP`
`DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:Y:BOTTom`

Ref. Val = Marker

Sets the [reference value](#) equal to the response value of the active marker, leaving the values of the vertical divisions ([Scale Div.](#)) unchanged.

- In Cartesian diagrams the operation shifts the trace in vertical direction.
- In polar diagrams (*Polar, Smith, Inverted Smith*), the operation re-defines the value of the outer circumference and therefore enlarges or scales down the diagram, leaving the center unchanged.



Use the analyzer's drag-and-drop functionality to move the reference line symbol to the desired position.

Remote control: No command, display configuration

Couple All / Decouple All

Select common or independent scale settings for all traces in the active diagram area.

- After *Decouple All*, the *Trace – Scale* functions affect the active trace only.
- After *Couple All*, the *Trace – Scale* functions affect all traces in the active diagram.

The checkmark in the next to the menu commands indicates the coupling state of the traces:

- If *Couple All* is checked, all traces in the active diagram area are coupled.
- If *Decouple All* is checked, no traces are coupled.
- If none of the menu commands is checked, some but not all traces are coupled. This happens e.g. if a new trace is added after *Couple All*.

Remote control: No command, display configuration

Trace Select

The *Trace Select* submenu provides functions to handle traces and diagram areas, and assign traces to channels.



- [Next Trace](#) selects the next trace as the active trace (disabled if only one trace is defined).
- [Select Trace](#) opens a box to select an arbitrary trace of the active setup as the active trace (disabled if only one trace is defined).
- [Add Trace](#) creates a new trace in the current diagram area.
- [Add Trace + Diag. Area](#) generates a new trace in a new diagram area.
- [Delete Trace](#) deletes the active trace.
- [Assign Channel](#) assigns the active trace to another channel.
- [Assign Diag. Area](#) assigns the active trace to another diagram area.
- [Trace Manager](#) opens a dialog to perform the previous actions systematically for all traces and diagram areas.



Active and inactive traces

The screen can display several diagram areas simultaneously, each with a variable number of traces.

- In an active diagram area one of these traces is the active trace. The active trace is highlighted in the [trace list](#) on top of the diagram area (Trc 4 in the figure below):

Trc1	a1(P1s)	dB Mag	10 dB / Ref 0 dBm	Ch1
Trc2	S21	dB Mag	10 dB / Ref 0 dB	Ch2 Math
Mem3[Trc2]	S21	dB Mag	10 dB / Ref 0 dB	Ch2
Trc4	S11	dB Mag	10 dB / Ref 0 dB	Ch2 Invisible

- If an inactive area is selected as the active area, the trace that was active last time when the area was active will again become the active trace. It is highlighted in the trace list of the inactive diagram area.

All settings in the *Trace* menu except the *Trace Functions* involving a memory trace apply to the active trace in the active diagram area.



In remote control each channel can contain an active trace. The active remote traces and the active manual trace are independent of each other; see [Active Traces in Remote Control](#).

Next Trace

Selects the next trace in a series of displayed traces as the active trace. This function is disabled if only one trace is defined.

Trc1	a1(P1s)	dB Mag	10 dB / Ref 0 dBm	Ch1
Trc2	S21	dB Mag	10 dB / Ref 0 dB	Ch2 Math
Mem3[Trc2]	S21	dB Mag	10 dB / Ref 0 dB	Ch2
Trc4	S11	dB Mag	10 dB / Ref 0 dB	Ch2 Invisible


Next Trace has the following meaning:

- In a list of traces displayed in a common diagram area, the next trace is the trace below the current trace (in the figure above, Trc 3 is the active trace and Trc 4 is the next trace).
- If the active trace is the last trace in the list, the next trace is the first trace in the trace list of the [next diagram area](#).

Remote control: The numeric suffix <Chn> appended to the first-level mnemonic of a command selects a trace as active trace.

Select Trace

Opens a box to select an arbitrary trace of the active setup as the active trace. This function is disabled if only one trace is defined.

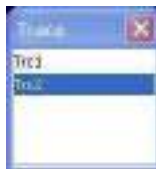

Remote control: The numeric suffix <Chn> appended to the first-level mnemonic of a command selects a trace as active trace.

Add Trace

Creates a new trace in the current diagram area and assigns it to the current channel. The new trace is created with the trace and channel settings of the former active trace but displayed with another color. The former and the new active trace are superimposed but can be easily separated, e.g. by changing the [Reference Position](#).

The new trace is named Trc <n>, where <n> is the largest of all existing trace numbers plus one. The name can be changed in the [Trace Manager](#).



To create a new trace in a new channel, use [Channel – Channel Select – New Channel](#).

Remote control: `CALCulate<Ch>:PARAmeter:SDEFine <Trace Name>, <Meas Parameter>`
`DISPlay:WINDow<Wnd>:TRACe<WndTr>:FEED`

Add Trace + Diag. Area

Creates a new trace in a new diagram area and assigns the trace to the current channel. The new trace is created with the trace and channel settings of the former active trace but displayed with another color.

The new trace is named Trc <n>, where <n> is the largest of all existing trace numbers plus one. The name can be changed in the [Trace Manager](#).

Remote control: `CALCulate<Ch>:PARAmeter:SDEFine <Trace Name>, < Meas Parameter>`
`DISPlay:WINDow<Wnd>:STATe ON`
`DISPlay:WINDow<Wnd>:TRACe<WndTr>:FEED`

Delete Trace

Deletes the current trace and removes it from the diagram area. *Delete Trace* is disabled if the setup contains only one trace: In manual control, each setup must contain at least one diagram area with one channel and one trace.



To restore a trace that was unintentionally deleted, use [Undo](#).

Remote control: `CALCulate<Ch>:PARAmeter:DELeTe <Trace Name>`
`CALCulate<Ch>:PARAmeter:DELeTe:ALL`
`CALCulate<Ch>:PARAmeter:DELeTe:CALL`

Assign Channel

Assigns the active trace to another channel. A popup window offers a list of all channels available:



- Selecting one of the existing channel names assigns the current trace to the existing channel.
- Selecting *New* creates a new channel and assigns the current trace to the new channel. The new channel is named Ch <n>, where <n> is the largest of all existing channel numbers plus one. The name can be changed in the [Channel Manager](#).



Assign Channel is disabled if the current setup contains only one channel. To create an additional channel, select *Channel – Channel Select – New Channel*.

Remote control: `CALCulate<Ch>:PARAmeter:SDEFine 'Trace_Name', 'Result'`

Assign Diag. Area

Assigns the active trace to another diagram area. A popup window offers a list of all areas available:



- Selecting one of the existing area numbers assigns the active trace to the existing diagram area: The active trace is removed from the previous area and displayed in the new diagram area.
- Selecting **New** creates a new diagram area and assigns the active trace to the new area. The new area is numbered <n>, where <n> is the largest of all existing area numbers plus one.



Assign Diag. Area is disabled if the current setup contains only one area. To create an additional area, click **Display – Area Select – New Diag. Area**.



To go to another diagram area and activate the last active trace in this area, simply click a point inside the new area.

Remote control: `DISPlay:WINDow<Wnd>:TRACe<WndTr>:FEED <Trace Name>`

Trace Manager

Opens a dialog to perform the actions in the *Trace Select* menu systematically for all traces and diagram areas.



All existing traces of the current setup are listed in a table with several editable (white) or non-editable (gray) columns. Below the table the *Trace Manager* provides the following buttons:

- **Add/Delete...** opens a dialog to add a new trace or delete a trace.
- **Coupling** opens a dialog to define coupling criteria (channel, scale) for all traces in the table.
- **Sort Table** opens a dialog to change the order of the traces (rows) in the table.



Columns in the Trace Manager table

- **Name** indicates the current trace name. The default names for new traces are Trc<n> where <n> is a current number. Current numbers in the trace names are necessary to make automatic assignments, e.g. decouple the channel settings in the **Coupling** dialog. To serve as an unambiguous reference, trace names must be unique across all channels and diagram areas.
- **On** indicates whether the trace is displayed on the screen (*On*) or invisible.
- **Meas** indicates the **measured parameter**.
- **Type** indicates whether the trace is a data trace (*DAT*), displaying the current measurement data, or a memory trace (*MEM*).
- **Channel** indicates the channel of each trace.
- **Area** indicates the diagram area of each trace.

- *Scale* shows which traces use [common scaling](#) and format settings.



Rules for trace names

The analyzer can define mathematical relations between different traces and calculate new mathematical traces ([User Def Math](#)). The trace names are used as operands in the mathematical expressions and must be distinguished from the mathematical operators +, -, *, /, (,) etc. This places some restrictions on the syntax of trace names:

- The first character of a trace name can be either one of the upper case letters A to Z, one of the lower case letters a to z, an underscore _ or a square bracket [or].
- For all other characters of a trace name, the numbers 0 to 9 can be used in addition.


The analyzer does not accept illegal trace names. If an illegal name is specified, the input field in the *Trace Manager* turns red.

Remote control:

```
CALCulate<Ch>:PARAmeter:SDEFine <Trace Name>, <Meas Parameter>
CONFigure:CHANnel<Ch>:TRACe:REName
CONFigure:TRACe<Trc>:CATalog?
CONFigure:TRACe<Trc>:NAME
CONFigure:TRACe<Trc>:NAME:ID?
CONFigure:TRACe:REName
```

Add/Delete

Opens a dialog to add a new trace or delete a trace.

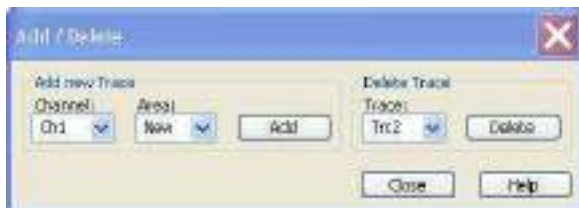

- *Add* creates a new trace and adds it to the list in the [Trace Manager](#), assigning it to the channel and diagram area selected in the drop-down lists. It is possible to create a *New* channel and/or diagram area for the new trace.
- *Delete* deletes the selected trace, removing it from the list in the *Trace Manager* and from the screen. This button is disabled if the setup contains only one trace: In manual control, each setup must contain at least one diagram area with one channel and one trace.

Remote control:

```
CALCulate<Ch>:PARAmeter:SDEFine <Trace Name>, < Meas Parameter>
DISPlay:WINDow<Wnd>:TRACe<WndTr>:FEED <Trace Name>
DISPlay[:WINDow<Wnd>]:TRACe:EFEEed <Trace Name>
CALCulate<Ch>:PARAmeter:DELeTe <Trace Name>
```

Coupling

Selects common or independent channel or scale settings for all traces in the *Trace Manager* dialog.



The channel and scale coupling is set in two independent panels.

- *Decouple All* assigns independent channel or scale settings to all traces in the [Trace Manager](#). If the channel and trace names include numbers, the trace with the lowest number is assigned to the channel with the lowest number and so forth. Measurement or data traces and their associated memory traces are assigned to the same channel.
- *Couple All* assigns all traces to the channel or scale settings selected in the corresponding drop-down lists. All channel or scale settings except the selected ones are lost. The analyzer displays a confirmation dialog box before deleting the unused channels.

Remote control: n/a

Sort Table

Changes the order of the traces (table rows) in the *Trace Manager* dialog.



- The drop-down list contains all trace properties that can provide the sorting criterion. The properties correspond to the column headers in the [Trace Manager](#).
- The two radio buttons qualify whether the traces in the table are sorted in ascending or descending order, according to the property selected in the pull-down list.


Remote control: No command, display configuration only.

Trace Funct

The *Trace Funct(ions)* store traces to the memory and perform mathematical operations on traces



Refer to section [Trace Types](#) in the *System Overview* chapter to learn more about data traces, memory traces, and mathematical traces.

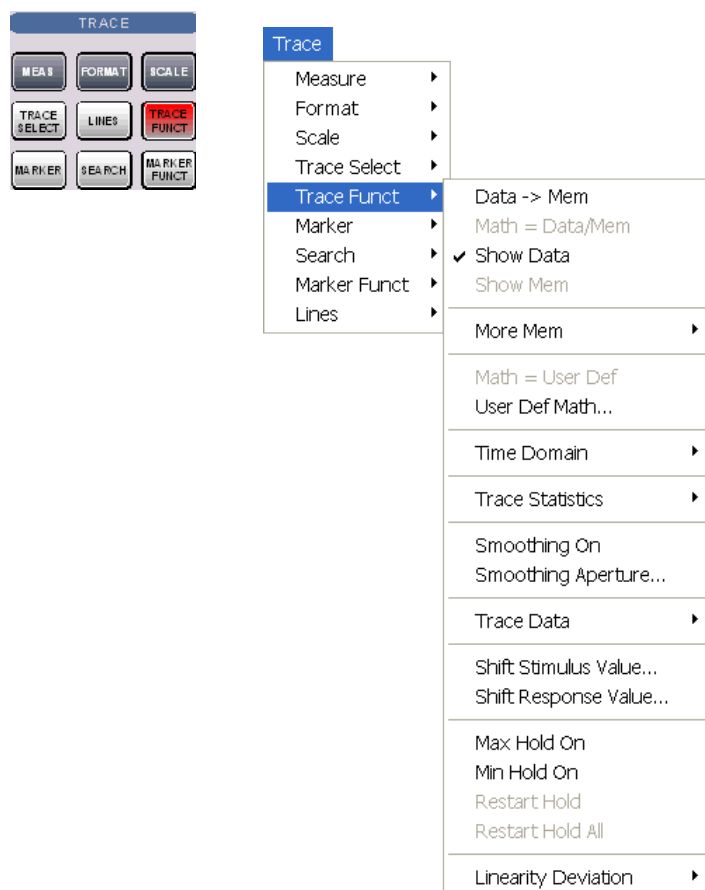

- [Data -> Mem](#) stores the active data trace as a memory trace.
- [Math = Data/Mem](#) activates the mathematical mode where the data trace is divided by the memory trace.
- [Show Data](#) shows or hides the active data trace.
- [Show Mem](#) shows or hides the active memory trace.
- [More Mem](#) opens a submenu to store traces as memory traces, show or hide traces.
- [Math = User Def](#) activates the mathematical mode with a user-defined relation between traces.
- [User Def Math...](#) opens a dialog to define a mathematical relation between traces.
- [Time Domain](#) opens a submenu with the time domain transformation functions (with option ZVAB-K2, *Time Domain*).
- [Trace Statistics](#) opens a submenu to evaluate statistical and phase information of the trace.
- [Smoothing On](#) activates the smoothing function for the active trace.
- [Smoothing Aperture...](#) defines how many measurement points are averaged to smooth the trace.
- [Trace Data](#) stores the active trace to a file or loads a memory trace from a file.
- [Shift Response Value...](#) opens a dialog to define a user-correction to the measured values.
- [Shift Stimulus Value...](#) shifts a memory trace in horizontal direction.

- **Max Hold On** enables or disables the max hold (peak hold) function for the active trace.
- **Min Hold On** enables or disables the min hold function for the active trace.
- **Restart Hold** restarts the max hold (peak hold) or min hold function for the active trace, discarding the old maximum or minimum measurement results.
- **Restart Hold All** restarts the max hold (peak hold) or min hold function for all traces with active max hold or min hold function.
- **Linearity Deviation** opens a submenu to compensate the active trace for the average slope and response value in order to show the deviation from linearity.

Many of the functions of the *Trace Funct* menu act on the **active trace**. Data traces and the associated memory traces share many of their properties; see [coupling of memory traces](#).

Data -> Mem

Stores the current state of the active trace as a memory trace. The memory trace is displayed in the active diagram area with another color, and its properties are indicated in the [trace list](#):

Trc1	821	dB Mag	10 dB / Ref 0 dB
Mem2[Trc1]	821	dB Mag	10 dB / Ref 0 dB

Memory traces are named *Mem<n>[<Data_Trace>]* where <n> counts all data and memory traces in the active setup in chronological order, and <Data_Trace> is the name of the associated data trace. Trace names can be changed in the [Trace Manager](#) dialog.

The exact function of *Data -> Mem* depends on the number of memory traces associated to the active data trace:

- If no memory trace is associated with the active trace, a new memory trace is generated.
- If several memory traces are associated with the active trace, the current measurement data overwrites the last generated or changed memory trace.



To store the current measurement data to a new memory trace (without overwriting an existing memory trace), or select and overwrite a particular memory trace, use the [-> Mem](#) dialog. You can also create multiple memory traces using the [Import Data](#) dialog. Notice that it is not possible to store **Max Hold** traces to memory.



Coupling of data and memory traces

When a memory trace is generated from a data trace, it is displayed in the same diagram area and inherits all channel and trace settings from the data trace.

The following display settings of a data trace and the associated memory traces are **fully coupled**. Changing a property of one trace affects the properties of all other traces.

- All settings in the [Trace – Format](#) menu
- All settings in the [Trace – Scale](#) menu

Selection of the measured quantity ([Trace – Measure](#)) is possible for the data trace but disabled for the memory traces.

Channel settings made for a memory trace act on the associated data trace. Some of the channel settings for a data trace (e.g. the *Stimulus* range) also affect the display of the memory traces.



If the sweep type of a data trace is changed so that the stimulus ranges of the data traces and the memory traces become incompatible, all coupled memory traces are removed from the diagram area and deleted.

Remote control: `CALCulate<Chn>:MATH:MEMorize`

Math = Data/Mem

Activates the mathematical mode where the active data trace is divided by the last generated memory trace. The division is calculated on a point-to-point basis: Each measurement point of the active trace is divided by the corresponding measurement point of the memory trace. The result of the division is a mathematical trace and replaces the active data trace in the diagram area. The mathematical trace is updated as the measurement goes on and the analyzer provides new active trace data.

This function is disabled unless a memory trace is coupled to the active data trace. Trace [coupling](#) ensures that the two traces have the same number of points so that the mathematical trace Data/Mem is well-defined.



Math = Data/Mem and *Math = User Def* are alternative options of the mathematical mode. Selecting one option disables the other. The mathematical expression defined via [User Def Math](#) is not affected.

Remote control: `CALCulate<Chn>:MATH[:EXPRession]:SDEFine <string>`
`CALCulate<Chn>:MATH:STATe ON`

Show Data

Displays or hides the active data trace in the diagram area. If one of the mathematical options *Math = Data/Mem* or *Math = User Def* are active, then the active mathematical trace is displayed or hidden.

Remote control: `DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:SHOW`

Show Mem


Displays or hides the active memory trace in the diagram area or the memory trace associated with the active data trace.

- If no memory trace is associated with the active data trace, *Show Mem* is disabled.
- If several memory traces are associated with the active data trace (see [-> Mem](#)), *Show Mem* affects the last generated or changed memory trace.

Remote control: `DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:SHOW`

More Mem

Opens a submenu to store traces as memory traces, show or hide traces. The submenu complements the [Data -> Mem](#) menu commands.

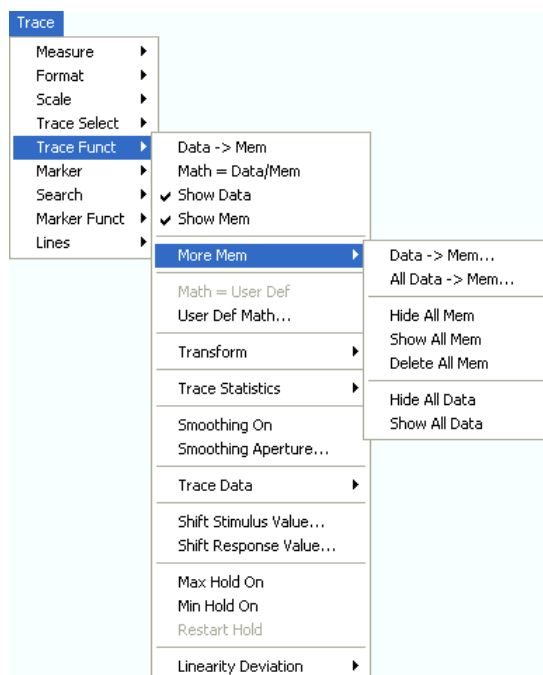

- **Data → Mem** opens a dialog to store the active trace to a memory trace.
- **All Data → Mem** opens a dialog to store all traces in the active setup to memory traces.
- The remaining functions hide or show all data traces or memory traces. Moreover it is possible to delete all memory traces in the active setup.

Remote control: `TRACe:COPIY <memory_trc>, <data_trc>` (copy data trace to memory trace)
`DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:SHOW DALL | MALL, ON | OFF` (show or hide all data or memory traces)
`CALCulate<Ch>:PARAmeter:DELeTe <Trace Name>` (delete single data or memory trace)
`CALCulate<Ch>:PARAmeter:DELeTe:ALL`
`CALCulate<Ch>:PARAmeter:DELeTe:CALL`

Data -> Mem Dialog

The *Data -> Mem* dialog stores the active trace to a memory trace.



- *Store Trace <trace_name> to* contains all memory traces associated with the active data trace. The selected memory trace can be replaced.
- *Data -> Mem* stores the active data trace to the memory trace selected above. If no memory trace is associated with the current trace, then a new memory trace is created. The new trace is named *Mem<n+1>[<Data_Trace>]*, where n is the largest of all existing memory trace indices.
- *Data -> New Mem* stores the active data trace to a new memory trace, leaving the existing memory traces unchanged.
- *Data & Trace Funct. -> Mem* stores the current state of the active data trace modified by the trace functions to the memory trace selected above. If no memory trace is associated with the current trace, then a new memory trace is created.
- *Data & Trace Funct. -> New Mem* stores the current state of the active data trace modified by the trace functions to a new memory trace, leaving the existing memory traces unchanged.



Trace functions

The trace functions comprise the following mathematical operations:

- Any mathematical relation applied to the trace (*Math = Data/Mem*, *Math = User Def*).
- A shift of the trace in horizontal or vertical direction (*Shift Response Value*, *Shift Stimulus Value*).

Data → *Mem* and *Data* → *New Mem* store the raw trace without the trace functions, *Data & Trace Funct* → *Mem* and *Data & Trace Funct* → *New Mem* store the trace after it has been transformed using the trace functions.

Remote control: `TRACe:COPIY <memory_trc>,<data_trc>`
`TRACe:COPIY:MATH <memory_trace>, <data_trace>`

All Data -> Mem

The *All Data -> Mem* dialog stores all traces in the active setup to memory traces.



- *Data -> Mem* stores all data traces in the current setup to memory traces. If no memory trace is associated with a data trace, then a new memory trace is created. The new trace is named *Mem<n+1>[<Data_Trace>]*, where n is the largest of all existing memory trace indices. If several memory traces are associated with a data trace, the newest memory trace is replaced.
- *Data -> New Mem* stores all data traces in the current setup to memory traces, leaving the existing memory traces unchanged.
- *Data & Trace Funct. -> Mem* stores the current state of all data traces modified by the trace functions to memory traces. If a trace has no memory trace, then a new memory trace is created.

- *Data & Trace Funct.* -> *New Mem* stores the current state of all data traces modified by the trace functions to new memory traces, leaving the existing memory traces unchanged.



Trace functions

The trace functions comprise the following mathematical operations:

- Any mathematical relation applied to the trace (*Math = Data/Mem*, *Math = User Def*).
- A shift of the trace in horizontal or vertical direction (*Shift Response Value*, *Shift Stimulus Value*).

Data —> *Mem* and *Data* —> *New Mem* store the raw trace without the trace functions, *Data & Trace Funct* —> *Mem* and *Data & Trace Funct* —> *New Mem* store the trace after it has been transformed using the trace functions.

Remote control: `TRACe:COPIY <memory_trc>,<data_trc>`
`TRACe:COPIY:MATH <memory_trace>,<data_trace>`

Math = User Def

Activates the mathematical mode and displays the mathematical trace defined via [User Def. Math](#). The mathematical trace replaces the active data trace in the diagram area; it is updated as the measurement goes on and the analyzer provides new active trace data.

This function is disabled unless a user-defined mathematical trace is available.



Math = User Def and *Math = Data/Mem* are alternative options of the mathematical mode. Selecting one option disables the other. The mathematical expression defined via [Define Math](#) is not affected.

Remote control: `CALCulate<Chn>:MATH[:EXPRession]:SDEFine <string>`
`CALCulate<Chn>:MATH:STATe ON`

User Def. Math...

Opens a dialog to define a mathematical relation between traces and calculate a new mathematical trace. Each measurement point of the active trace is replaced by the corresponding point of the mathematical trace.



Compatibility between traces in mathematical relations

Mathematical traces are either constant functions or functions of one or more data or memory traces. They are calculated on a point-to-point basis. Each trace point no. *i* of the mathematical trace is calculated from a set of constant values $c_1, \dots, c_n$ plus the trace points $\text{Trc1}_i, \text{Trcm}_i$ of all traces 1 to *m* in the mathematical relation:

$$\text{Math}_i = \text{Fct.} (c_1, \dots, c_n, \text{Trc1}_i, \text{Trcm}_i), i = 1, \text{ no. of points}$$

Different traces can be used in the same mathematical relation provided that they contain the same number of points. The analyzer places no further restriction on the compatibility of traces, e.g. the sweep points of the traces do not have to be the same.

The [number of points](#) belongs to the channel settings. Coupled data and memory traces are always compatible because they have the same channel settings.



NOTE The analyzer processes only numeric values without units in the mathematical formulas. No consistency check for units is performed.



In its upper part the dialog contains a window to view and edit the mathematical expression and four buttons:

- **Del. All** clears the window, so it is possible to start editing a new expression.
- **Del.** deletes the last character before the current cursor position (backspace function). Deleting a character of an operand causes the operand to become invalid.
- **Recall...** calls up an [Open File](#) dialog to load a mathematical expression from a trace math string file. Trace math string files are ASCII files with the default extension *.mth and contain the mathematical expression as it is written in the User Def Math... dialog. It is possible to change or create math string files using a text editor.
- **Save...** calls up a [Save As...](#) dialog to store the current expression to a trace math string file. Trace math string files are ASCII files with the default extension *.mth and contain the mathematical expression as it is written in the User Def Math... dialog. It is possible to change or create math string files using a text editor.



TIP To import a math file (*.mth) you can also use the Windows Explorer and simply double-click the file or drag and drop the file into the NWA application. You must enable the mathematical mode separately.

The operands and operators in the expression can be selected from two lists and the *Numeric Value* panel:

- **Operand** contains all data traces and memory traces of the active setup plus the constants pi (approx. 3.14159), e (approx. 2.71828) and the imaginary unit j. The trace operands denote unmodified data and memory traces. Mathematical relations for the traces are not taken into account, even if the mathematical mode is active (*Math = User Def*). The same applies to smoothing and Shift Response Value.

- **Operator**

Contains operators for arithmetic operations and mathematical functions. The following table lists how the operators act on a complex quantity $z = x + jy$.


+, -, *, /	Basic arithmetic operations

()	Grouping parts of an expression
linMag	$ z = \sqrt{x^2 + y^2}$
dBMag	$\text{dB Mag}(z) = 20 * \log z \text{ dB}$
Arg	Phase $\varphi(z) = \arctan(\text{Im}(z) / \text{Re}(z))$
Re, Im	x, y (Real and Imag)
log, ln	Common (base 10) or natural (base e) logarithm
Min, Max	Smaller or larger values of all points of two traces, e.g. Min(Trc1,Trc2)
StimVal	Stimulus value ^{*)}
tan, atan, sin, asin, cos, acos	Direct and inverse trigonometric functions.

*) The function StimVal can be used for all sweep types. Please note that – as with all user math operands – only the numerical value without unit is processed in the user math formula.

- In frequency sweeps StimVal provides the stimulus frequency in Hz.
- In power sweeps, StimVal provides the voltage in V that results from the source power in dBm. To obtain the correct source power in dBm (for *dB Mag* trace format), *Result is Wave Quantity* must be enabled. Note that, due to the conversion into a dBm value, the source power depends on the reference impedance of the port associated with the measured wave quantity, to be set in the *Port Configuration* dialog.
- In time sweeps, StimVal is the stimulus time in s.
- In CW mode sweeps, StimVal is the number of the point.
- **Numeric Value**

extends the *Define Math* dialog and opens the numeric input panel (toggle function):

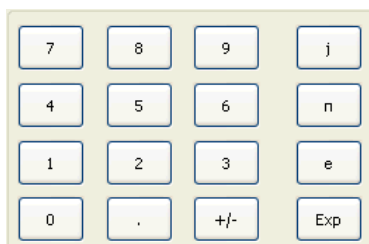

The numeric input panel supports the entry of numeric values and constants. In addition to the numbers 0 to 9, the decimal point and the constants j (complex unit), pi (approx. 3.14159) and e (approx. 2.71828), it contains the following buttons:

- +/- changes the sign
- Exp defines a number in exponential representation, e.g. 12 exp 3 for $12 \cdot 10^3 = 12000$.

Products of numbers and constants may be entered in abbreviated form, e.g. 2e for $2 \cdot e$.



If traces are used as operands, the unmodified, **linear** complex trace data (no dB-values) enter into the mathematical expression, irrespective of the current trace format. No mathematical traces are available as operands.

Result is Wave Quantity in the lower part of the dialog controls the conversion and formatting of the mathematic expression.

- If *Result is Wave Quantity* is enabled the analyzer assumes that the result of the mathematical

expression represents a voltage. Examples for voltage-type expressions are all terms proportional to a wave quantity (e.g. $1.1 * \text{Data}$, if a wave quantity is measured) or to a stimulus value of a power sweep. If *Show As: Power* is selected in the *More Wave Quantities* dialog, the result is converted into a linear power before the selected trace format is applied. Otherwise no conversion is performed, and *dB Mag* results are referenced to 1 μV .

- If *Result is Wave Quantity* is disabled the analyzer assumes that the result of the mathematical expression is dimensionless. Examples for dimensionless expressions are all terms proportional to ratios of wave quantities, e.g. $\text{Data} / \text{Mem2}[\text{Trc1}]$. The selected trace format is applied without previous conversion.

Result is Wave Quantity acts on the result of the mathematical expression only. Wave quantities and power sweep stimulus values always enter into the expression as voltages.



Effect of Result is Wave Quantity and numeric example

In the *More Wave Quantities* dialog, the *Show as:* control element specifies whether wave quantities are displayed as voltages or equivalent powers, using the port impedances for a conversion between the two representations. *Result is Wave Quantity* is relevant for mathematical traces displayed in units of *dBm* (*Show as: Power* and trace format *dB Mag*):

- If *Result is Wave Quantity* is on (checked), the mathematical trace values $\langle W \rangle$ are interpreted as voltages and first converted into equivalent powers ($\langle W \rangle \rightarrow \langle P \rangle = \langle W \rangle^2 / \text{Re}(Z_0)$). Results in *dB Mag* format are calculated according to $\langle P \rangle_{\log} = 10 * \log(\langle P \rangle / 1\text{mW})$.
- If *Result is Wave Quantity* is off, the mathematical trace values $\langle W \rangle$ are interpreted as dimensionless quantities. Results in *dB Mag* format are calculated according to $\langle W \rangle_{\log} = 20 * \log(\langle W \rangle)$.

Example: A mathematical trace value amounts to 1 (real value); the port impedance is 50 Ω . If *Result is Wave Quantity* is on, the analyzer assumes the trace value to be 1 V, which is converted into a linear power of 20 mW, corresponding to approx. 13 dBm. With *Result is Wave Quantity* off, the trace value 1 is directly converted into a logarithmic power of 0 dBm.



See also example for `CALCulate<Chn>:MATH:WUNit:STATe ON | OFF`.

Time Domain

Opens a submenu to view the measurement results as a function of time. The time domain transformation requires option ZVAB-K2, *Time Domain*.




Time domain transformation

The network analyzer measures and displays complex S-parameters and other quantities as a function of the frequency. The measurement results can be filtered and mathematically transformed in order to obtain the time domain representation, which often gives a clearer insight into the characteristics of the DUT.

Time domain transforms can be calculated in bandpass or lowpass mode. For the latter the analyzer offers the impulse and step response as two alternative transformation types. A wide selection of windows can be used to optimize the time domain response and suppress sidelobes due to the finite sweep range. Moreover, it is possible to eliminate unwanted responses by means of a time gate and transform the gated result back into the frequency domain.


For a detailed discussion of the time domain transformation including many examples refer to the application note 1EZ44 which is posted on the R&S internet.

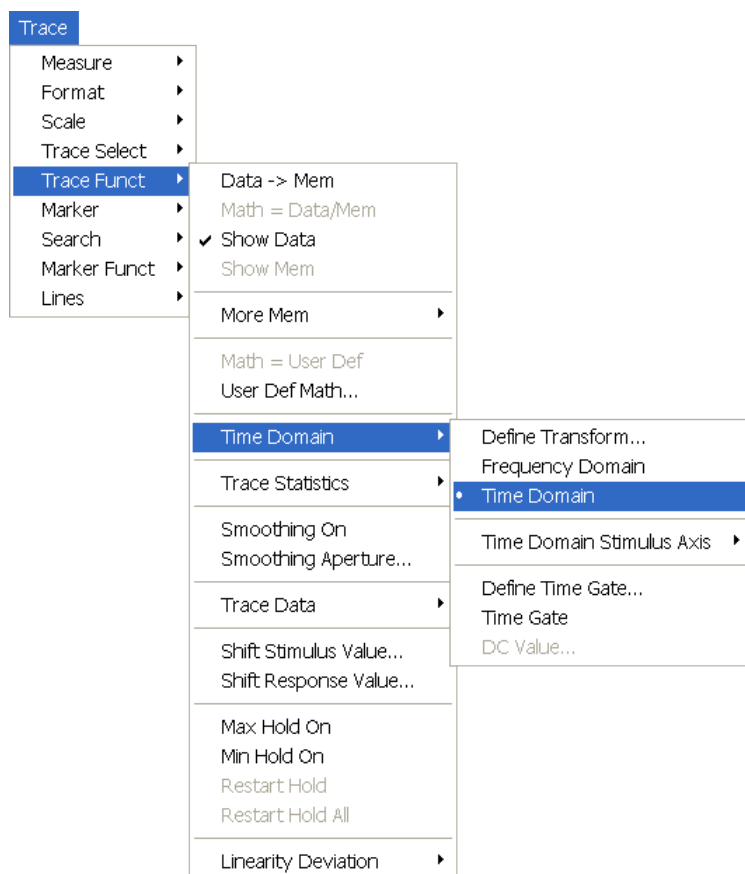

- [Define Transform...](#) opens a dialog to define the transformation type and the frequency domain window used to optimize the time domain response.
- [Frequency Domain](#) and [Time Domain](#) select frequency domain or time domain representation of the active trace.
- [Time Domain Stimulus Axis](#) opens a submenu to define the stimulus axis range for the time domain representation.
- [Define Time Gate...](#) opens a dialog to select the time gate and define its parameters.
- [Time Gate](#) switches the time gate defined with [Define Time Gate...](#) on or off.
- [DC Value](#) opens a dialog to define the measurement result at zero frequency

Define Transform

The *Define Transform* dialog selects the transformation type and the frequency domain window which is applied to the trace in order to optimize its time domain response.

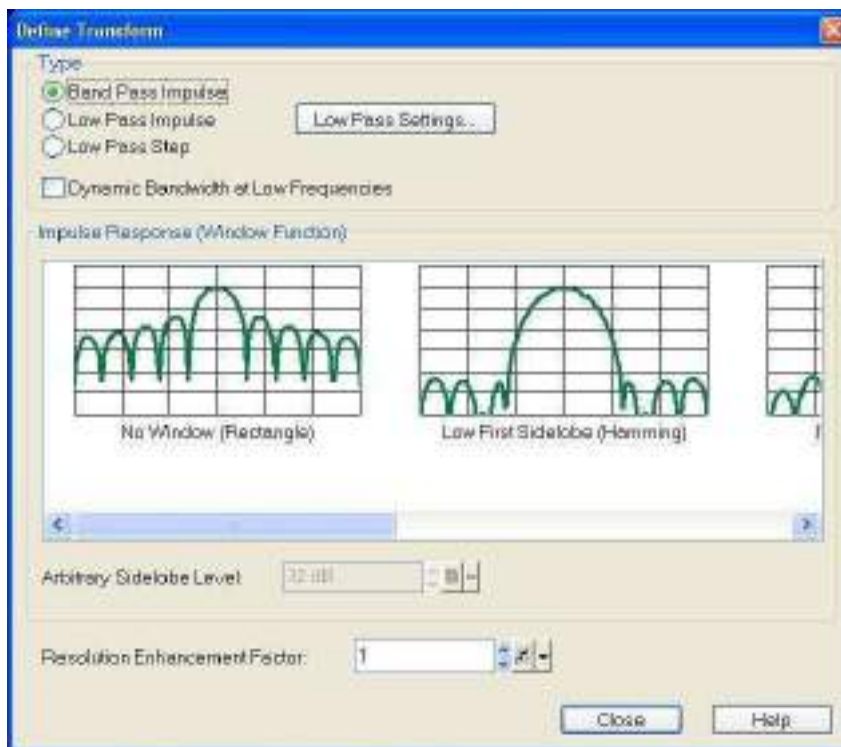

- The radio buttons in the *Type* panel select a [bandpass](#) or [lowpass](#) transform. To calculate a lowpass transform the sweep points must be on a harmonic grid (otherwise the analyzer will only be able to calculate an approximate result and generate a warning). [Low Pass Settings...](#) opens a dialog to establish or change a harmonic grid (not available for memory traces).
- If *Dynamic Bandwidth at Low Frequencies* is enabled, the analyzer reduces the IF bandwidths at receiver frequencies below 500 MHz by a frequency-dependent (dynamic) factor. This setting complements the automatic bandwidth reduction for frequency sweeps with small start frequencies; see [Bandwidth reduction at low frequencies](#). The bandwidth reduction reduces the trace noise at small frequencies and improves the accuracy of the time domain transform. It is recommended to select Dynamic Bandwidth at Low Frequencies when performing a low pass transformation.
- The *Impulse Response (Window Function)* panel allows to select a [window](#) function (in the frequency domain) to be applied to the active trace prior to the time domain transformation. The analyzer always uses *No Window (Rectangle)* to calculate the time-gated frequency domain trace, see background information in section [Frequency Domain](#).
- If an *Arbitrary Sidelobes (Dolph-Chebyshev)* window is selected, the *Arbitrary Sidelobe Level* (sidelobe suppression) can be set below the *Impulse Response* diagrams. The entered value is the ratio of the power of the central lobe to the power of the first side lobe in dB.
- The *Resolution Enhancement Factor* broadens the frequency range that the analyzer considers for the time domain transform by a linear factor. A factor of 1 means that the original sweep range and the measured sweep points are used; no additional assumptions are made. With higher resolution enhancement factors, the measurement data is extrapolated using a linear prediction method. As a result, the resolution in time domain can be improved. The ideal resolution enhancement factor depends on the properties of the DUT. In distance to fault measurements on cables, factors between 3 and 5 turned out to be a good choice.

For a comparison of the different transformation types and windows and for application examples please also refer to the application note 1EZ44 which is posted on the R&S internet.



An independent *Time Gate* can be used after the transformation in order to eliminate unwanted responses.

Remote control: `CALCulate<Chn>:TRANSform:TIME[:TYPE]`
`CALCulate<Chn>:TRANSform:TIME:STIMulus`
`CALCulate<Chn>:TRANSform:TIME:WINDow`
`CALCulate<Chn>:TRANSform:TIME:DCHebyshev`
`CALCulate<Chn>:TRANSform:TIME:RESolution:EFACTOR`

Band Pass and Low Pass Mode

The analyzer provides two essentially different types of time domain transforms:

- *Bandpass mode* : The time domain transform is based on the measurement results obtained in the sweep range between any set of positive start and stop values. The sweep points must be equidistant. No assumption is made about the measurement point at zero frequency (DC value). The time domain result is complex with a generally undetermined phase depending on the delay of the signal.
- *Low pass mode* : The measurement results are continued towards $f = 0$ (DC value) and mirrored at the frequency origin so that the effective sweep range (and thus the response resolution) is more than doubled. Together with the DC value, the condition of equidistant sweep points implies that the frequency grid must be *harmonic*. Due to the symmetry of the trace in the frequency domain, the time domain result is real valued.

The bandpass and lowpass modes are compared below.

Transform type	Bandpass	Lowpass
Advantages	Easiest to use: works with any set of equidistant sweep points	Higher response resolution (doubled) Includes information about DC value Real result Impulse and step response
Restrictions	No step response Undetermined phase	Needs harmonic grid
Use for...	Scalar measurements where the phase is not needed DUTs that don't operate down to $f = 0$ (e.g. pass band or highpass filters)	Scalar measurements where the sign is of interest DUT's with known DC value

Remote control: `CALCulate<Chn>:TRANSform:TIME[:TYPE]`

Impulse and Step Response

In *low pass mode*, the analyzer can calculate two different types of responses:


- The impulse response corresponds to the response of a DUT that is stimulated with a short pulse.
- The step response corresponds to the response of a DUT that is stimulated with a voltage waveform that transitions from zero to unity.

The two alternative responses are mathematically equivalent; the step response can be obtained by integrating the impulse response:



Integrate impulse response

Obtain step response

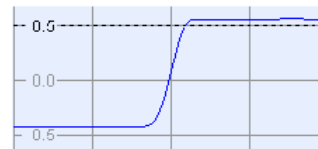

The step response is recommended for impedance measurements and for the analysis of discontinuities (especially inductive and capacitive discontinuities). The impulse response has an unambiguous magnitude and is therefore recommended for most other applications.

Please note that the unambiguous range for the step response is half of the unambiguous range for the impulse response, meaning that the unambiguous range for the step response is $\Delta t = 1/(2\Delta f)$, where Δf is the spacing between two consecutive frequency points.

Remote control: `CALCulate<Chn>:TRANSform:TIME:STIMulus`

Windows in the Frequency Domain

The finite sweep range in a frequency domain measurement with the discontinuous transitions at the start and stop frequency broadens the impulses and causes sidelobes (ringing) in the time domain response. The windows offered in the [Define Transform](#) dialog can reduce this effect and optimize the time domain response. The windows have the following characteristics:

Window	Sidelobe suppression	Relative impulse width	Best for...
No Window (Rectangle)	13 dB	1	–
Low First Sidelobe (Hamming)	43 dB	1.4	Response resolution: separation of closely spaced responses with comparable amplitude
Normal Window (Hann)	32 dB	1.6	Good compromise between pulse width and sidelobe suppression
Steep Falloff (Bohman)	46 dB	1.9	Dynamic range: separation of distant responses with different amplitude
Arbitrary Sidelobes (Dolph-Chebyshev)	User defined between 10 dB and 120 dB	1.2 (at 32 dB sidelobe suppression)	Adjustment to individual needs; tradeoff between sidelobe suppression and impulse width

Remote control: `CALCulate<Chn>:TRANSform:TIME:WINDow`
`CALCulate<Chn>:TRANSform:TIME:DCHebyshev`

Low Pass Settings

The *Low Pass Settings* dialog can be used to change the current grid of sweep points (that may or may not be harmonic) to obtain a harmonic grid for lowpass time domain transforms.



Harmonic grid

A harmonic grid is formed by a set of equidistant frequency points f_i ($i = 1 \dots n$) with spacing Δf and the additional condition that $f_1 = m \cdot \Delta f$ with $m < 0.2 \cdot n$. In other words, all frequencies f_i must be harmonics of the frequency gap Δf . Furthermore, the number of extrapolated points including the DC value must be less than 20 percent of the measured points.

If a harmonic grid, including the DC value ($f = 0$) is mirrored to the negative frequency range, the result is again an equidistant grid. The point symmetry with respect to the DC value makes harmonic grids suitable for **lowpass** time domain transformations.




The three buttons in the [Set Harmonic Grid...](#) panel provide alternative algorithms for calculation of a harmonic grid, based on the current sweep points.

Defining the low frequency sweep points

After calculating a harmonic grid, the analyzer must determine the value of the measured quantity at zero frequency and possibly at additional points in the range between $f = 0$ and $f = f_{\min}$, where $f_{\min}$ denotes the minimum frequency of the analyzer.


The following figure shows a scenario where the harmonic grid was calculated with fixed *Stop Frequency and Number of Points*. The DC value and the values at the two additional red points must be extrapolated or interpolated according to the measured sweep points (blue dots) and the properties of the DUT. The extrapolation of the DC value is described in section [DC Value](#). The additional points between the DC value and the first measured point are obtained by linear interpolation of the magnitude and phase by the analyzer.

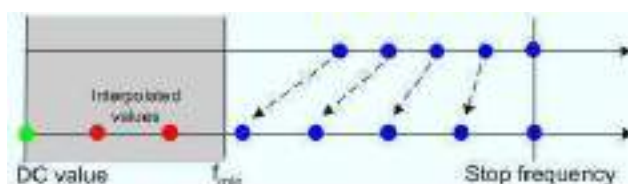

Remote control: `CALCulate<Chn>:TRANSform:TIME:LPASs KFSTop | KDFrequency | KSDFrequency`
`CALCulate<Chn>:TRANSform:TIME:LPFfrequency`

Set Harmonic Grid

In the *Set Harmonic Grid...* panel of the *Low Pass Settings* dialog, a harmonic grid can be calculated in three alternative ways:

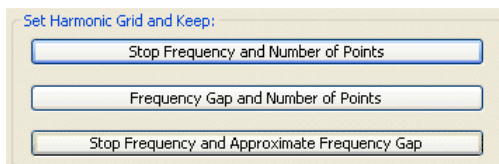

- Keep *Stop Frequency and Number of Points* calculates a harmonic grid based on the current stop frequency ($\text{Channel} - \text{Stimulus} - \text{Stop}$) and the current number of sweep points ($\text{Channel} - \text{Sweep} - \text{Number of Points}$). This may increase the *frequency gap* (the spacing between the equidistant sweep points, i.e. the sweep Span divided by the Number of Points minus one).
- Keep *Frequency Gap and Number of Points* calculates a harmonic grid based on the current frequency gap and number of points, modifying the stop frequency ($\text{Channel} - \text{Stimulus} - \text{Stop}$).
- Keep *Stop Frequency and Approximate Frequency Gap* calculates a harmonic grid based on the current stop frequency ($\text{Channel} - \text{Stimulus} - \text{Stop}$), increasing the number of points ($\text{Channel} - \text{Sweep} - \text{Number of Points}$) in such a way that the frequency gap remains approximately the same. This may increase the sweep time, due to the additional sweep points introduced.


The three grids can be calculated repeatedly in any order; the analyzer always starts from the original set of sweep points.




Visualization of the harmonic grid algorithms

The three types of harmonic grids have the following characteristics:

- Keep *Stop Frequency and Number of Points* means that the stop frequency and the number of sweep points is maintained. The sweep points are re-distributed across the range between the minimum frequency of the analyzer and the stop frequency; the step width may be increased.

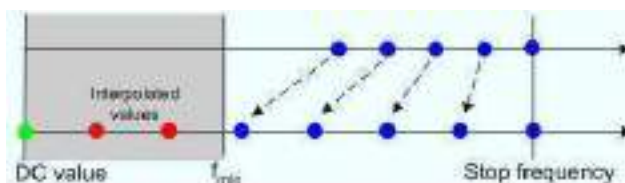


- Keep *Frequency Gap and Number of Points* means that the number of sweep points and their relative spacing is maintained. If the start frequency of the sweep is sufficiently above the $f_{\min}$, the entire set of sweep points is shifted towards lower frequencies so that the stop frequency is decreased.

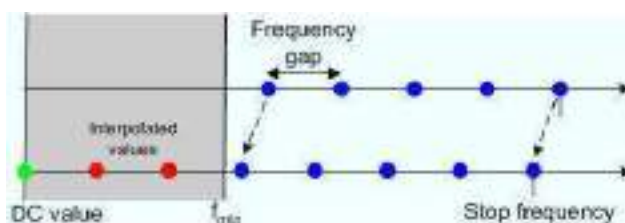

If the start frequency of the sweep is close to $f_{\min}$, then the sweep points may have to be shifted towards higher frequencies. If the last sweep point of the calculated harmonic grid exceeds the

maximum frequency of the analyzer, then an error message is displayed, and another harmonic grid algorithm must be used.

- Keep *Stop Frequency and Approximate Frequency Gap* means that the stop frequency is maintained and the number of sweep points is increased until the range between $f_{\min}$ and the stop frequency is filled. The frequency gap is approximately maintained.

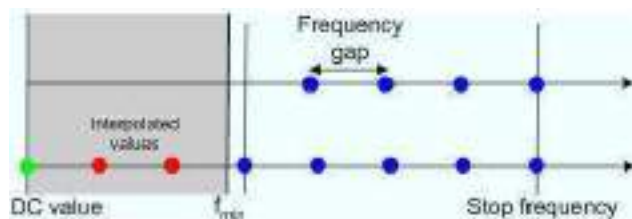

The figures above are schematic and do not comply with the conditions placed on the number of sweep points and interpolated/extrapolated values.



The harmonic grids can not be calculated for any set of sweep points. If the minimum number of sweep points is smaller than 6, then the interpolation/extrapolation algorithm for additional sweep points will not work. The same is true if the number of sweep points or stop frequency exceeds the upper limit. Besides, the ratio between the sweep range and the interpolation range between $f = 0$ and $f = f_{\min}$ must be large enough to ensure accurate results.

If the sweep range for the harmonic grid exceeds the frequency range of the current system error correction, a warning is displayed.



Finding the appropriate algorithm

The three types of harmonic grids have different advantages and drawbacks. Note that for a bandpass transformation the grid parameters have the following effect:

- A wider sweep range (i.e. a larger bandwidth) increases the time domain resolution.
- A smaller frequency gap extends the unambiguous range.
- A larger number of points increases the sweep time.

With default analyzer settings, the difference between the grid types are small. The following table helps you find the appropriate grid.

Grid type: Keep	Sweep time	Time domain resolution	Unambiguous range	Algorithm fails if...
Stop freq. and no. of points				–
Freq. gap and no. of points				Stop frequency beyond upper frequency limit
Stop freq. and approx. freq. gap				Number of sweep points beyond limit

Remote control: `CALCulate<Chn>:TRANSform:TIME:LPASS KFSTop | KDFrequency | KSDFrequency`

Frequency Domain

Selects the frequency domain representation for the active trace. The softkey is enabled if a linear frequency sweep (*Channel – Sweep – Sweep Type – Lin. Frequency*) is active.

In frequency domain representation the diagram shows the measured trace as a function of the stimulus frequency applied to the DUT. The trace corresponds to the results obtained during the frequency sweep, however, the effect of a time gate is taken into account as long as the *Time Gate* function is active. The x-axis corresponds to the sweep range (stimulus range) selected via *Channel – Stimulus*.




Gated and ungated state of the frequency domain representation

The trace in the frequency domain depends on the state of the *Time Gate*:

- If the gate is disabled, the frequency domain (FD) trace corresponds to the sweep results prior to the transformation.
- If the gate is enabled, the frequency domain trace shown is calculated from the time domain (TD) trace which is gated and transformed back into the frequency domain.

The analyzer uses fixed *No Window (Rectangle)* window settings to transform the measured trace into time domain. The TD trace is gated using the selected time gate. The gated trace is transformed back into frequency domain using a *No Profiling (Rectangle)* window.

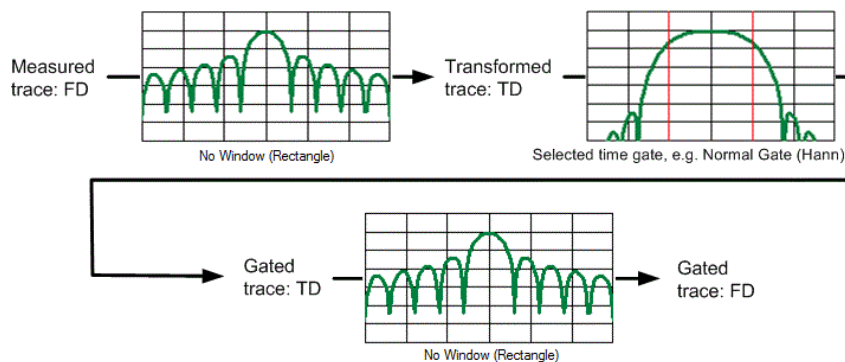

The shape, width and position of the time gate affect the gated frequency domain trace. The window type selection in the *Define Transform* dialog is ignored. The selected window is used again when the TD trace is displayed (*Time Domain: On*).

The rectangular *No Window (Rectangle)* windows minimize numerical inaccuracies near the boundaries of the measured frequency span.

In the limit where the effect of the time gate vanishes (e.g. a gate of type *Notch* and a very small width), the time gated trace is equal to the original measured trace.



In time domain representation, you can use the *Time Gate* settings in order to eliminate unwanted responses in your signal. After switching back to the frequency domain, you will receive the frequency response of your DUT without the contribution of the unwanted responses.

Remote control: `CALCulate<Chn>:TRANSform:TIME:STATe OFF`

Time Domain

Selects the time domain representation for the active diagram area. The softkey is enabled if a linear

frequency sweep (*Channel – Sweep – Sweep Type – Lin. Frequency*) is active. The analyzer automatically quits time domain representation as soon as a different sweep type is selected.

In time domain representation the diagram shows the measurement results as a function of time. The results are obtained by transforming the measured frequency sweep data into the time domain using an appropriate mathematical transformation type and frequency window (*Define Transform...*). The sweep range and the output power for the active channel is still displayed below the diagram; the displayed time interval is shown in a second line:

Ch1	Start 300 kHz	—Pwr	0 dBm	Stop 8 GHz
Trc2	Start -1 ns	—Time Domain		Stop 4 ns



Trace settings in time domain representation

While the time domain representation is active the trace settings behave as follows:

- The settings in the *Time Domain Stimulus Axis* submenu configure the time axis.
- All *Trace Formats* including the circular diagrams are available.
- *Limit lines* can be defined like the limit lines for time sweeps.
- The *bandfilter search* functions are available for the transformed trace.
- If *marker coupling* is active, then the markers in the time domain and in the frequency domain are coupled with each other.

The analyzer places no restriction on the measured quantities to be transformed into the time domain. Impedances and admittances are first converted back into the equivalent S-parameter, transformed, and restored after the transformation.



Properties of the Chirp z-transformation

The Chirp z-transformation that the analyzer uses to compute the time domain response is an extension of the (inverse) Fast Fourier Transform (FFT). Compared to the FFT, the number of sweep points is arbitrary (not necessarily an integer power of 2), but the computation time is increased by approx. a factor of 2. This increased computation time is usually negligible compared to the sweep times of the analyzer. Furthermore, the Chirp z-transformation allows zooming in and out in the time axis which is not possible using a FFT.


The following properties of the Chirp z-transformation are relevant for the analyzer settings:

- The frequency points must be equidistant.
- The time domain response is repeated after a time interval which is equal to $\Delta t = 1/\Delta f$, where Δf is the spacing between two consecutive sweep points in the frequency domain. For a sweep span of 4 GHz and 201 equidistant sweep points, $\Delta f = 4 \text{ GHz}/200 = 2 \cdot 10^7 \text{ Hz}$, so that $\Delta t = 50 \text{ ns}$. Δt is termed measurement range (in time domain) or unambiguous range.
- For a *lowpass* transformation the frequency points must lie on a *harmonic grid*.

Remote control: `CALCulate<Chn>:TRANSform:TIME:STATe ON`

Time Domain Stimulus Axis

Opens a submenu to define the stimulus axis range for time domain representation.

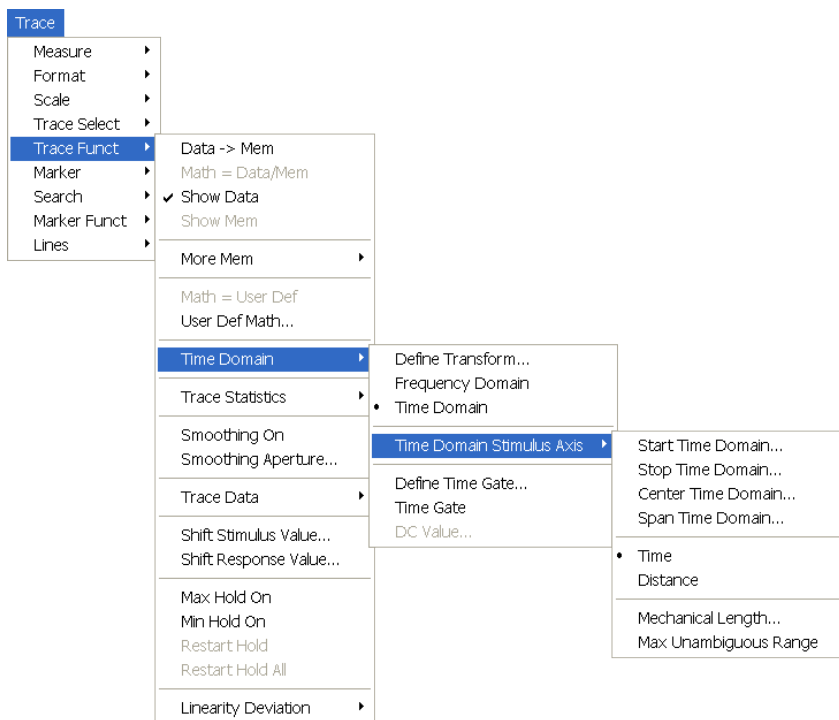

- *Start Time Domain* is the lowest displayed time and corresponds to the left edge of the Cartesian diagram.
- *Stop Time Domain* is the highest displayed time and corresponds to the right edge of the Cartesian diagram.
- *Center Time Domain* corresponds to the center of the Cartesian diagram, i.e. $(Start + Stop)/2$.
- *Span Time Domain* corresponds to the diagram width, i.e. $(Stop - Start)$.
- *Time* and *Distance* switch over between the x-axis scaling in time units or distance units.
- *Mechanical Length* opens the dialog which defines port-specific offset parameters (mechanical length, velocity factor, loss); see [Mechanical Length](#). The velocity factor affects the relationship between distance and time units; see background information below.
- *Max Unambiguous Range* selects a time domain stimulus axis between 0 s and the unambiguous range $\Delta t = 1/\Delta f$, where Δf is the spacing between two consecutive frequency points. Due to the properties of the [Chirp z-transformation](#) the trace is periodic in time and repeats after the unambiguous range. To extend the unambiguous range, you can either reduce the sweep span (*Channel* – *Stimulus*) or increase the number of sweep points.



Use the [paste marker list](#) for convenient entry of *Start* and *Stop* values.



Distance units for transmission and reflection parameters

The interpretation of time and distance depends on the measurement type. For reflection measurements, the time axis represents the propagation time of a signal from the source to the DUT and back. For transmission measurement, it represents the propagation time from the source through the device to the receiver. The *Distance* calculation is consistent with this interpretation:

- For reflection measurements (S-parameters S_{ii} or ratios with equal port indices) the distance between the source and the DUT is half the propagation time multiplied by the velocity of light in

the vacuum times the **velocity factor** of the receiving port defined in the *Channel – Offset* menu ($Distance = 1/2 * Time * c_0 * Velocity Factor$). The factor 1/2 accounts for the return trip from the DUT to the receiver.

- For transmission measurements, the distance is calculated as the propagation time times the velocity of light in the vacuum times the **velocity factor** of the receiving port defined in the *Channel – Offset* menu ($Distance = Time * c_0 * Velocity Factor$).

Remote control: `CALCulate<Chn>:TRANSform:TIME:START`
`CALCulate<Chn>:TRANSform:TIME:STOP`
`CALCulate<Chn>:TRANSform:TIME:CENTer`
`CALCulate<Chn>:TRANSform:TIME:SPAN`
`CALCulate<Chn>:TRANSform:TIME:XAXis TIME | DISTance`

Time Gate

Switches the time gate defined via *Define Time Gate* on or off. The softkey is enabled if a linear frequency sweep (Channel – Sweep – Sweep Type – Lin. Frequency) is active. An active time gate acts on the trace in time domain as well as in frequency domain representation. *Gat* is displayed in the trace list while the time gate is active.

Trc1 Sss22 Delay 1 ns/ Ref 0 s Gat



The time gate is independent of the **frequency window** used to filter the trace prior to the time domain transformation.




In time domain representation, you can use the time gate settings in order to eliminate unwanted responses in your signal. After switching back to the frequency domain, you will receive the frequency response of your DUT without the contribution of the unwanted responses.

Remote control: `CALCulate<Chn>:FILTer[:GATE]:TIME:STATe <Boolean>`

Define Time Gate

The *Define Time Gate* dialog defines the properties of the time gate used to eliminate unwanted responses that may appear on the time domain transform.

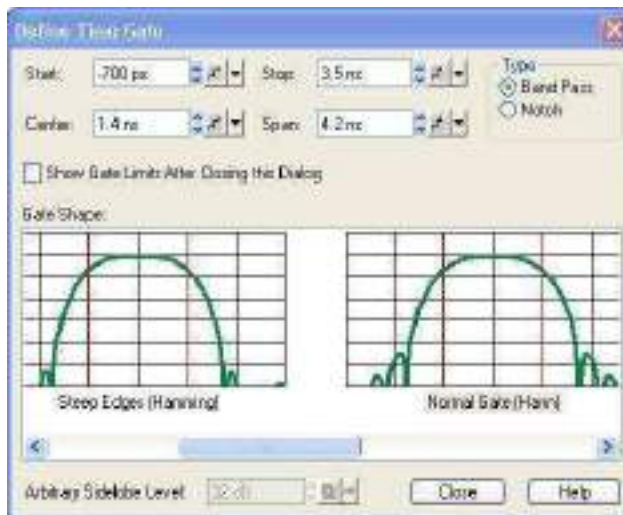

- *Start* and *Stop* or *Center* and *Span* define the size of the time gate. Please make sure that the selected time span does not exceed the unambiguous range which is given by $\Delta t = 1/\Delta f$, where Δf is the spacing between two consecutive frequency points.
- The filter *Type* defines what happens to the data in the specific time region. A *Band Pass* filter passes all information in the specified time region and rejects everything else. A *Notch* filter rejects all information in the specified time region and passes everything else.
- If the *Show Gate Limits after Closing this Dialog* check box is selected two red lines indicating the start and stop of the time gate are permanently displayed in the diagram area.
- The *Gate Shape* panel visualizes how the time gate will affect a constant function after transformation back into the frequency domain. The selected window is applied to the active trace. The two red vertical lines represent the *Start* and *Stop* values defining the size of the time gate. The analyzer always uses a *Steepest Edges (Rectangle)* window to calculate the time-gated frequency domain trace, see background information in section [Frequency Domain](#).
- If an *Arbitrary Gate Shape (Dolph-Chebyshev)* window is selected, the *Arbitrary Sidelobe Level* can be set below the *Gate Shape* diagrams.



Use the [paste marker list](#) for convenient entry of *Start* and *Stop* values.



Comparison of time gates

The properties of the time gates are analogous to the properties of the frequency domain [windows](#). The following table gives an overview:


Window	Sidelobe suppression	Passband ripple	Best for...
Steepest Edges (Rectangle)	13 dB	0.547 dB	Eliminate small distortions in the vicinity of the useful signal, if demands on amplitude accuracy are low
Steep Edges (Hamming)	43 dB	0.019 dB	Good compromise between edge steepness and sidelobe suppression
Normal Gate (Hann)	32 dB	0.032 dB	Good compromise between edge steepness and sidelobe suppression
Maximum Flatness (Bohman)	46 dB	0 dB	Maximum attenuation of responses outside the gate span

Window	Sidelobe suppression	Passband ripple	Best for...
Arbitrary Gate Shape (Dolph-Chebyshev)	User defined between 10 dB and 120 dB	0.071 dB	Adjustment to individual needs; tradeoff between sidelobe suppression and edge steepness

Remote control: `CALCulate<Chn>:FILTer[:GATE]:TIME:START`
`CALCulate<Chn>:FILTer[:GATE]:TIME:STOP`
`CALCulate<Chn>:FILTer[:GATE]:TIME:CENTer`
`CALCulate<Chn>:FILTer[:GATE]:TIME:SPAN`
`CALCulate<Chn>:FILTer[:GATE]:TIME[:TYPE] BPASs | NOTCh`
`CALCulate<Chn>:FILTer[:GATE]:TIME:SHOW`
`CALCulate<Chn>:FILTer[:GATE]:TIME:WINDow RECT | HAMMING | HANN`
`| BOHMan | DCHebyshev`
`CALCulate<Chn>:FILTer[:GATE]:TIME:DCHebyshev`

DC Value

The *DC Value* dialog defines the measurement result at zero frequency. The corresponding softkey is enabled if a linear frequency sweep is active (Channel – Sweep – Sweep Type – Lin. Frequency) and if the *lowpass mode* has been activated (in the *Define Transform* dialog).

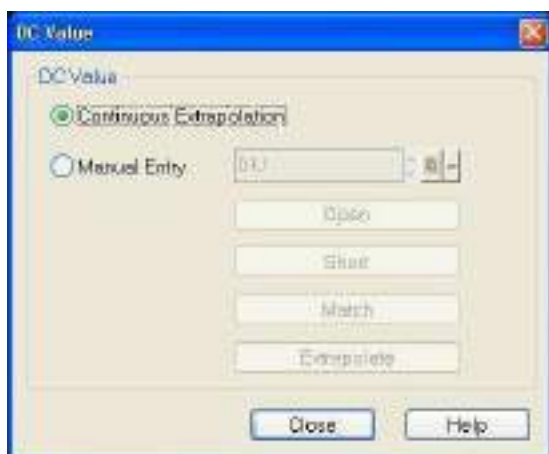


- The radio button *Continuous Extrapolation* activates the extrapolation of the DC value after each sweep based on the results of that sweep.
- The radio button *Manual Entry* activates the DC value which has been entered by the user. The buttons "Open", "Short", and "Match" set the manual DC value according to the corresponding termination type (at $f = 0$ the reflection factor of an open-ended cable is 1. It is -1 for a short-circuited cable and 0 for a cable with matched termination). The button *Extrapolate* sets the manual DC value based on a one time extrapolation from the currently available measurement values and will overwrite the current DC value. If the properties of the DUT at $f = 0$ are sufficiently well known, then it is recommendable to enter the DC value manually or via the buttons "Open", "Short", and "Match".

Remote control: `CALCulate<Chn>:TRANSform:TIME:LPASs:DCSParm`
`CALCulate<Chn>:TRANSform:TIME:LPASs:DCSParm:CONTInuous`
`CALCulate<Chn>:TRANSform:TIME:LPASs:DCSParm:EXTRApolate`

Trace Statistics

Opens a submenu to evaluate and display statistical and phase information of the entire trace or of a specific evaluation range and calculate the x-dB compression point.

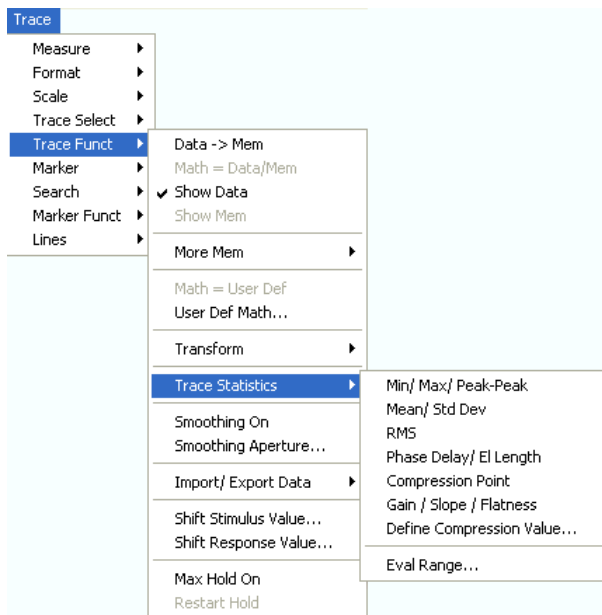

- **Min/Max/Peak-Peak** displays or hides the essential statistical parameters of the trace in the selected evaluation range.
- **Mean/Std Dev** displays or hides the arithmetic mean value and the standard deviation of the trace in the selected evaluation range.
- **RMS** displays or hides the RMS value of the trace in the selected evaluation range.
- **Phase Delay/El Length** displays or hides the phase delay and the electrical length of the trace in the selected evaluation range (*Eval Range...*).
- **Compression Point** starts the x-dB compression point evaluation
- **Define Compression Value...** sets the compression level (x dB).
- **Gain/Slope/Flatness** displays or hides trace parameters for the current evaluation range.
- **Eval Range...** opens a dialog to define the range for the statistical and phase evaluation and for the compression point measurement.

Statistical Evaluation

The first three commands in the *Trace Statistics* submenu display or hide the maximum (*Max.*), minimum (*Min.*), the peak-to-peak value (*Pk-Pk*), arithmetic mean value (*Mean*), the standard deviation (*Std. Dev.*), and the *RMS* value of all response values of the trace in the selected evaluation range (*Eval Range...*).

•Trac Stat:Trc1 S21 (Range 1)	
Min:	-6.0682 dB
Max:	-4.8224 dB
Pk-Pk:	1.2457 dB
Mean:	-5.4546 dB
Std Dev:	0.4370 dB
RMS:	-5.4326 dB



Definition of statistical quantities

The statistical quantities are calculated from all response values in the selected [evaluation range](#). Suppose that the trace in the evaluation range contains n stimulus values x_i and n corresponding response values y_i (measurement points).

- *Min.* and *Max.* are the largest and the smallest of all response values y_i .
- *Pk-Pk* is the peak-to-peak value and is equal to the difference *Max.* – *Min.*
- *Mean* is the arithmetic mean value of all response values:

$$Mean = \frac{1}{n} \sum_{i=1}^n y_i$$

- *SDev* is the standard deviation of all response values:

$$Std.Dev. = \sqrt{\frac{1}{n} \sum_{i=1}^n |y_i - \frac{1}{n} \sum_{i=1}^n y_i|^2}$$

- *RMS* is the root mean square (effective value) of all response values (real number!):

$$RMS = \sqrt{\frac{1}{n} \sum_{i=1}^n |y_i|^2}$$



To calculate the *Min.*, *Max.*, *Pk-Pk*, *Mean* and *SDev* values, the analyzer uses formatted response values y_i (see trace [formats](#)). Consequently, the mean value and the standard deviation of a trace depend on the selected trace format.

In contrast, the *RMS* calculation is based on linear, unformatted complex values and is then converted according to the trace format. Since the *RMS* value is a real number by definition, its phase and imaginary part are always zero. To prevent misunderstandings, the *RMS* result of the *Phase*, *Delay*, *Imag*, and *Unwrapped Phase* traces is therefore displayed as "RMS: -----".

Remote control: `CALCulate<Chn>:STATistics[:STATe]`
`CALCulate<Chn>:STATistics:RESult? MIN | MAX | PEAK2P | MEAN |`
`STDDev | RMS`
`CALCulate<Chn>:STATistics:MMPTpeak[:STATe]`
`CALCulate<Chn>:STATistics:MSTDev[:STATe]`
`CALCulate<Chn>:STATistics:RMS[:STATe]`

El. Length/Phase Delay

Displays or hides the phase delay (*Phs Dly*) and the electrical length (*El Len*) of the trace in the selected evaluation range ([Eval Range...](#)). The parameters are only available for trace formats that contain phase information, i.e. for the [formats](#) *Phase*, *Unwrapped Phase*, and the polar diagram formats *Polar*, *Smith*, *Inverted Smith*. Moreover, the [sweep type](#) must be a *frequency sweep*.

•Trac Stat:Trc1 S21 (Range 1)	
Phs Dly:	292.0872 ps
El Len:	87.5655 mm



Definition of phase parameters

The phase parameters are obtained from an approximation to the derivative of the phase with respect to frequency in the selected [evaluation range](#).

- *Delay* is the phase delay, which is an approximation to the group delay and calculated as follows:

$$PD = -\frac{\Delta \phi_{deg}}{360^\circ \cdot \Delta f},$$

where Δf is the width of the evaluation range and $\Delta \Phi$ is the corresponding phase change. See also note on transmission and reflection parameters below.

- *EL* is the electrical length, which is the product of the phase delay times the speed of light in the vacuum.

If no dispersion occurs the phase delay is equal to the group delay. For more information see [mathematical relations](#).

If a dispersive connector type (i.e. a waveguide; see [Offset Model](#) dialog) is assigned to a test port related to a particular quantity, then the dispersion effects of the connector are taken into account for the calculation of the phase delay and the electrical length.



To account for the propagation in both directions, the delay and the electrical length of a reflection parameter is only half the delay and the electrical length of a transmission parameter. The formula for PD above is for transmission parameters. See also introduction to section [Channel – Offset](#).



The phase parameters are available only if the evaluation range contains at least 3 measurement points.



The phase evaluation can cause misleading results if the evaluation range contains a ± 360 deg phase jump. The trace format [Unwrapped Phase](#) avoids this behavior.



*The delay for reflection factors corresponds to the transmission time in **one** direction; see [Offset – Auto Length – Length and Delay Measurements](#).*

Remote control: `CALCulate<Chn>:STATistics[:STATe]`
`CALCulate<Chn>:STATistics:RESult? ELENgth | PDELay`
`CALCulate<Chn>:STATistics:EPDelay[:STATe]`

Compression Point


Displays or hides all results related to the x-dB compression point of the trace, where x is the selected [compression value](#). To obtain valid compression point results, a power sweep must be active, and the trace format must be *dB Mag*.



Compression point

The x-dB compression point of an S-parameter or ratio is the stimulus signal level where the magnitude of

the measured quantity has dropped by x dB compared to its value at small stimulus signal levels (small-signal value). As an approximation for the small-signal value, the analyzer uses the value at the start level of the [evaluation range](#).

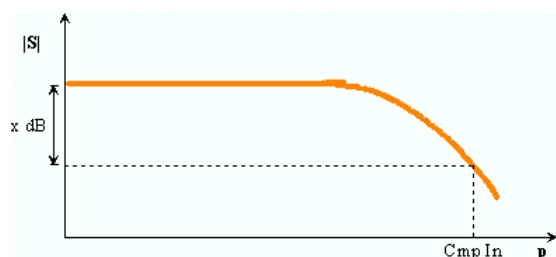

The compression point is a measure for the upper edge of the linearity range of a DUT. It is close to the highest input signal level for which the DUT shows a linear response ($|a_n| \rightarrow x^*|a_n| \Leftrightarrow |b_n| \rightarrow x^*|b_n|$, so that the magnitude of all S-parameters remains constant).

When *Compression Point* is activated, a marker labeled *Cmp* is placed to compression point with the smallest stimulus level. Moreover the *Trace Statistics* info field shows the numerical results of the compression point measurement:

•Trac Stat:Trc1 S21 (Range 1)	
Cmp In:	3.2E+009 dBm
Cmp Out:	3.2E+009 dBm

- *Cmp In* is the stimulus level at the compression point in units of dBm. *Cmp In* always corresponds to the driving port level (e.g. the level from port no. j , if a transmission parameter S_{ij} is measured).
- *Cmp Out* is the sum of the stimulus level *Cmp In* and the magnitude of the measured response value at the compression point.
The magnitude of a transmission S-parameter S_{ij} is a measure for the attenuation (or gain) of the DUT, hence: $Cmp Out = Cmp In + \langle Attenuation \rangle$. The example above is based on an attenuation of -14 dB, hence $Cmp Out = -39.4 \text{ dB} - 14 \text{ dB} = -53.4 \text{ dBm}$.

The info field shows invalid results ('---') if the wrong sweep type or trace format is selected, or if the trace contains no x -dB compression points in the selected evaluation range.

Remote control: `CALCulate:STATistics:NLINear:COMP[:STATe]`
`CALCulate:STATistics:NLINear:COMP:RESult?`

Define Compression Value

Opens the numeric entry bar to define the compression value x (in dB) for the [compression point](#) measurement.

Remote control: `CALCulate:STATistics:NLINear:COMP:LEVel`

Gain/Slope/Flatness

Displays or hides trace parameters that the analyzer calculates for the current evaluation range. If no evaluation range is defined, the parameters apply to the sweep range.

•Trac Stat:Trc1 S21 (Range 1)	
Gain:	-5.271 dB
Slope:	0.756 dB
Flatness:	11.231 dB

Suppose that A and B denote the trace points at the beginning and at the end of the evaluation range, respectively.

- *Gain* is the larger of the two stimulus values of points A and B.
- *Slope* is the difference of the stimulus values of point B minus point A.
- *Flatness* is a measure of the deviation of the trace in the evaluation range from linearity. The analyzer calculates the difference trace between the active trace and the straight line between points A and B. The flatness is the difference between the largest and the smallest response value of this difference trace.

Remote control: `CALCulate<Chn>:STATistics:SFlatness[:STATe]`
`CALCulate<Chn>:STATistics:RESult? GAIN | SLOPe | FLATness`

Eval Range

Opens a dialog that allows to define the evaluation range for the [trace statistics](#) functions. The evaluation range is a continuous interval of the sweep variable.



To restrict the evaluation range select one of the user-defineable [ranges](#) 1 to 10 and use the *Start* and *Stop* input fields to modify the selected range. The selected range is assigned to the active trace.

- *Evaluation Range* Selects the [range](#) confining the evaluation range of the active trace's statistics functions and makes it the active display range of the related channel.
- *Start/Stop* defines the lower/upper limit of the selected range.
The trace statistics functions take into account all measurement points with stimulus values x between the Start and Stop value of the evaluation range: $\text{Start} \leq x \leq \text{Stop}$.
- *Range Limit Lines On* If enabled, the Start and Stop of the channel's active display [range](#) are displayed as vertical lines whenever this channel becomes the active one.



NOTE The *Start* and *Stop* settings affect all search ranges and [evaluation ranges](#) that are defined using this range.

Remote control: `CALCulate<Chn>:STATistics:DOMain:USER <numeric_value>`
`CALCulate<Chn>:STATistics:DOMain:USER:START <numeric_value>`
`CALCulate<Chn>:STATistics:DOMain:USER:STOP <numeric_value>`
`CALCulate<Chn>:STATistics:DOMain:USER:SHOW`

Smoothing On

Activates the smoothing function for the active trace, which may be a data or a memory trace. With active smoothing function, each measurement point is replaced by the arithmetic mean value of all measurement points located in a symmetric interval centered on the stimulus value. The width of the smoothing interval is referred to as the *Smoothing Aperture* and can be adjusted according to the properties of the trace.



The *sweep average* is an alternative method of compensating for random effects on the trace by averaging consecutive traces. Compared to smoothing, the sweep average requires a longer measurement time but does not have the drawback of averaging out quick variations of the measured values.

Remote control: `CALCulate<Chn>:SMOothing[:STATe] <Boolean>`

Smoothing Aperture

Defines how many measurement points are averaged to smooth the trace if smoothing is switched on. The *Smoothing Aperture* is entered as a percentage of the total sweep span.

Smoothing Aperture:  

An aperture of n % means that the smoothing interval for each sweep point i with stimulus value x_i is equal to $[x_i - \text{span} \cdot n/200, x_i + \text{span} \cdot n/200]$, and that the result of i is replaced by the arithmetic mean value of all measurement points in this interval. The average is calculated for every measurement point. Smoothing does not significantly increase the measurement time.



Finding the appropriate aperture


A large smoothing aperture enhances the smoothing effect but may also average out quick variations of the measured values and thus produce misleading results. To avoid errors, observe the following recommendations.

- Start with a small aperture and increase it only as long as you are certain that the trace is still correctly reproduced.
- As a general rule, the smoothing aperture should be small compared to the width of the observed structures (e.g. the resonance peaks of a filter). If necessary, restrict the sweep range or switch smoothing off to analyze narrow structures.

Remote control: `CALCulate<Chn>:SMOothing:APERTure <numeric_value>`

Trace Data

Stores one or several data or memory traces to a file or loads a memory trace from a file. Import or export is selected from a submenu:

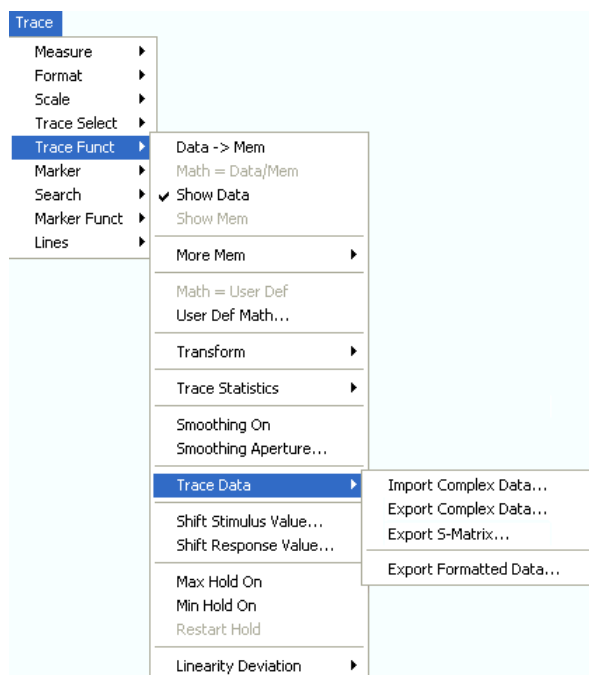


- [Import Complex Data...](#) calls up an *Open File* dialog to load a memory trace from a trace file.
- [Export Complex Data...](#) calls up a *Save As...* dialog to store data or memory traces to a trace file.
- [Export S-Matrix...](#) calls up a *Save As...* dialog to store a complete set of S-parameter data to a trace file.
- [Export Formatted Data...](#) calls up a *Save As...* dialog to store data or memory traces with their current trace format and stimulus values to a trace file.

Import Complex Data...

Calls up a dialog to load a memory trace from a trace file. Trace files are ASCII files with selectable [file format](#).



Trace data import requires complex trace values. A warning is displayed, and data import fails, if the trace file contains real data only, e.g. a magnitude trace exported via [Export Formatted Data](#).

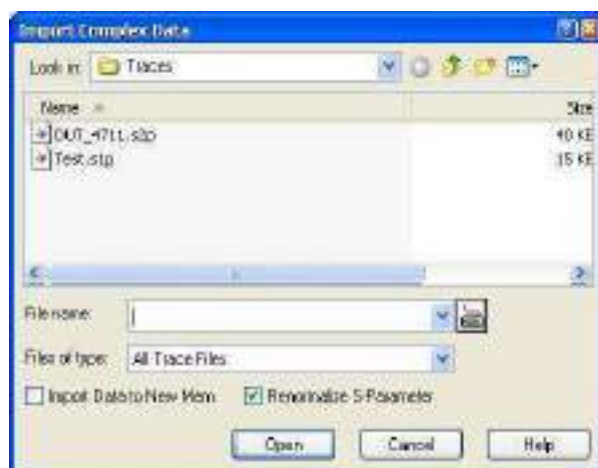

The loaded trace data is used to generate a memory trace which is coupled to the active data trace. *Import Data* corresponds to a standard [Open File](#) dialog with two additional check boxes:

- *Import Data to New Mem* qualifies whether the loaded data overwrite the active memory trace (box unchecked, analogous to [Data -> Mem](#)) or whether they are used to generate a new memory trace (box checked, analogous to [Data -> New Mem](#)).
- *Renormalize S-Parameter* causes the imported *.s<n>p data to be renormalized to the reference impedances of the physical ports 1 to n, as defined in the [Port Configuration](#) dialog (for background information about renormalization see [Reference Impedances](#)). If *Renormalize S-Parameter* is disabled, the analyzer imports the stored data without changes.




Trace file import and import conditions

On loading data from a trace file, the analyzer displays a list box to select one of the traces stored in the file. The example below shows a *Touchstone* (*.s2p) file, containing all four 2-port S-parameters; see [Trace File Formats](#).



Coupling between the imported memory trace and the active data trace implies that the stimulus values of the imported data and of the active trace must be compatible. Compatibility means that the [Sweep Type](#) of the two traces must match; the position and number of the sweep points do not have to be the same.

The analyzer checks for compatibility before importing data. A warning is displayed if the trace file is incompatible with the active trace.

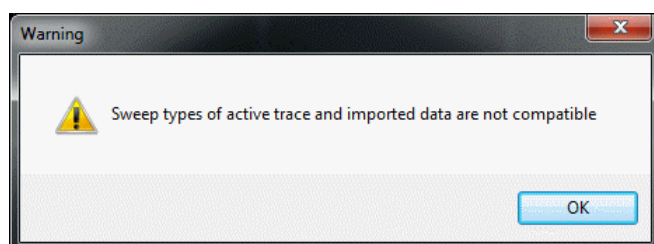



When a *.s1p file is opened the *Select Parameter* box indicates the 1-port (reflection) parameter S_{11} , irrespective of the actual S-parameter stored in the file.



To import a trace file (*.snp or *.csv) you can also use the Windows Explorer and simply double-click the file or drag and drop the file into the NWA application. The imported data generates a memory trace which is coupled to the active data trace.


Remote control: `MMEemory:LOAD:TRACe "<trc_name>","<file_name>"`
`MMEemory:SETTings:RENorm:MODE`
`MMEemory:SETTings:RENorm:STATe`

Export S-Matrix...

Calls up a dialog to store a full set of S-parameters to a Touchstone (*.s<n>p) file. The analyzer exports the complex measurement data after (de-)embedding but before renormalization and mixed-mode conversion; see [Complex vs. Formatted Data](#).

Data export can serve many purposes, e.g.:

- To process and evaluate measurement data in an external application.
- To store measurement data and re-import it in a future measurement session.

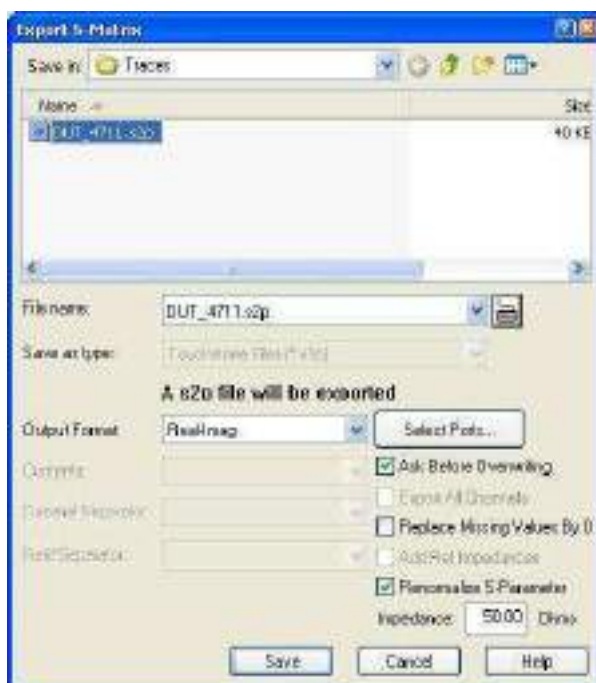

Export S-Matrix corresponds to a standard [Save As...](#) dialog with an additional panel to specify various export options. The Touchstone file format depends on the number of selected ports (*Select Ports...* button). Touchstone files use the point as *Dec. Separator* and contain the reference impedance of the associated ports in the file header; see [Trace File Formats](#). The following export options are available for Touchstone file export:

- *Output Format* selects the format for the exported trace data. In the Real - Imag format, each

complex measurement value is represented by its real and imaginary part. It is also possible to store the [linear magnitude](#) and [phase](#) (lin Mag-Phase) or [dB magnitude](#) and phase (dB Mag-Phase) of each value.

- *Select Ports* opens a [dialog](#) to define the port assignment for the created Touchstone (*.s<n>p) file.
- *Ask before Overwriting* activates a message box to be displayed before an older trace file with the same file name and directory is overwritten.
- *Export All Channels* causes the analyzer to export the trace data for all channels in the current setup to separate Touchstone files. The selected Touchstone file name is automatically extended by the channel identifier, e.g.: <File name>Ch1.s2p, <File Name>Ch2.s2p...
- *Replace Missing Values by 0* allows the export of incomplete, uncalibrated sets of n-port S-parameters to an *.s<n>p file (n > 1). The missing S-parameter columns are filled by zeros. For more information and prerequisites see [Select Ports](#).

- *Renormalize S-Parameter* allows for a renormalization of the S-matrix prior to Touchstone file export.
[See [Reference Impedances](#) for background information on renormalization in general, but note that the reference impedance for the Export S-Matrix function can be selected independently from the setting in the [Port Configuration](#) dialog.]

At the Export S-Matrix function (data access point 1 in the [data flow](#) diagram), S-parameters are normalized to the connector impedances of the related physical ports, as defined in the Connector column of the [Port Configuration](#) dialog and the settings in the [Available Connector Types](#) dialog. If Renormalize S-Parameter is disabled, they are exported according to these original impedances.

If Renormalize S-Parameter is enabled, the reference impedance of the S-parameters is changed to the specified target Impedance.

For waveguide "connectors" the impedances are frequency-dependent; the analyzer uses the "wave impedance of the basic transverse electric mode" as reference impedance:

$$Z_{\text{ref}} = Z_0 / \sqrt{1 - (f_c/f)^2},$$


where Z_0 denotes the wave impedance of free space, and f_c the cut-off frequency of the mode.

- *Impedance* indicates the reference port impedance that is written into the generated Touchstone file (irrespective of the renormalization setting) and used as a target impedance for renormalization (if selected). The default reference impedance is 50 Ω.

Remote control: [MMEMory:STORe:TRACe:PORTs](#)
[MMEMory:STORe:TRACe:PORTs:INComplete](#)
[MMEMory:SETTings:RENorm:MODE](#)
[MMEMory:SETTings:RENorm:RIMPedance](#)
[MMEMory:SETTings:RENorm:STATe](#)

Select Ports

Defines the port assignment for the created Touchstone (*.s<n>p) file.

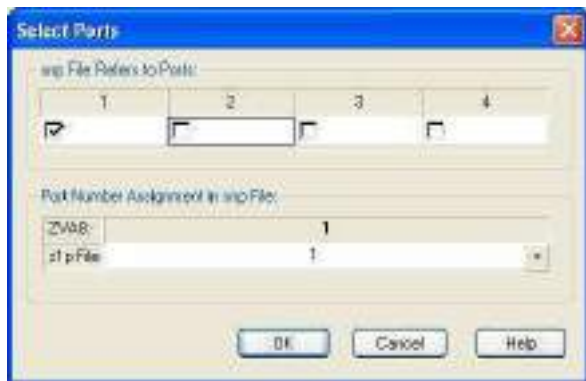

The network analyzer tries to ensure consistency of the exported data sets. The following conditions must be met for a Touchstone file export:

- For a one-port Touchstone file *.s1p, the reflection coefficient for the specified port (e.g. S_{11} for port no. 1) must be measured. Use [Export Complex Data](#) to export an arbitrary S-parameter to a *.s1p file.
- For a multiport Touchstone file *.s<n>p, **either** a full multiport system error correction **or** a complete set of $<n>^2$ S-parameters must be available. Export of system error corrected, incomplete S-parameter sets is possible, too. If the port configuration contains balanced ports, the Touchstone file will contain the corresponding single-ended S-parameters before mixed-mode conversion.

If *Replace Missing Values by 0* is checked in the *Export S-Parameters* dialog, incomplete, uncalibrated S-parameter sets can be exported, too. The export is denied if the S-parameter calculation implies a renormalization step, which requires the full S-matrix. This happens in the following instances:

- The reference impedances of the ports differ from each other.
- Dispersive connector types (e.g. wave guides) are used.

Remote control: [MMEMory:STORe:TRACe:PORTs](#)
[MMEMory:STORe:TRACe:PORTs:INComplete](#)



It should be noted that there is no dual import function for *Export S-Matrix*. This means that data that have been exported in this way cannot be re-imported and e.g. used as memory trace, if data processing steps between data access points 1 and 2 (see data flow diagram) are active.

Export Complex Data...

Calls up a dialog to store the active data or memory trace to a trace file. Trace files are ASCII files with selectable [file format](#).



Complex vs. Formatted Data


Complex and formatted data is tapped at different stages of the [trace data flow](#).

- *Complex* trace values are the raw values at the beginning of the channel data flow (data access point 1). None of the following stages (trace mathematics, shift response, time domain gate, and smoothing) affects the complex data. *Export Complex Data* writes the raw stimulus values (frequency/power/time, according to the sweep type) and the raw, complex measurement points

to a file.

- *Formatted* trace values are the fully processed trace values displayed on the analyzer screen (data access point 2). All possible stages of the trace data flow (trace mathematics, shift response, time domain gate, and smoothing) are taken into account. *Export Formatted Data* writes the displayed stimulus values (e.g. a time scale if a time domain transformation is used) and the displayed measurement points to a file.

Both complex and formatted data can be converted into different output formats.

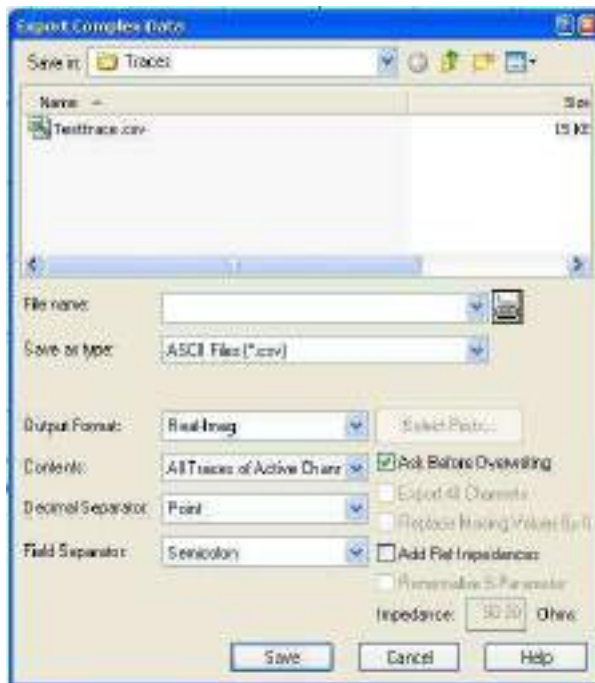

Export Complex Data corresponds to a standard *Save As...* dialog with an additional panel to specify various export options. The *Dec. Separator* export option is not available for Matlab (*.dat) and Touchstone file export. The *Export Complex Data* dialog offers the *.slp Touchstone file format for the active trace. Use *Export S-Matrix* to export several traces. Touchstone files use the point as *Dec. Separator*; see *Trace File Formats*.



The file header of the created Touchstone (*.slp) file always contains the reference impedance of the associated ports, as defined in the Port Configuration dialog. For one-port and single-mode S-parameters (e.g. S_{11} , S_{dd22} ...), this reference impedance is unambiguous. For two-port and mixed-mode parameters, the reference impedance is unambiguous only if it is equal for all associated ports and modes.

If an S-parameter with ambiguous reference impedances (e.g. S_{12} with different reference impedances at ports 1 and 2) is exported, a warning is displayed, and the reference impedance in the *.slp file is set to $1\ \Omega$. This also happens if the active trace shows a result other than an S-parameter (e.g. a wave quantity).

The following export settings are available for complex trace data:

- *Output Format* selects the format for the exported trace data. In the Real - Imag format, each complex measurement value is represented by its real and imaginary part. It is also possible to store the *linear magnitude* and *phase* (lin Mag-Phase) or *dB magnitude* and phase (dB Mag-Phase) of each value.
- *Contents* selects only the Active Trace or All Traces of (the) Active Channel (including all data and

memory traces) for data export to an ASCII (*.csv) file.

- *Dec. Separator* selects either the Point or the Comma (if needed to process the exported data with an external application) as a separator for decimal numbers exported to an ASCII (*.csv) file.
- *Field Separator*, the separator that the analyzer uses to separate different numbers in each line of an ASCII (*.csv) file.
- *Ask before Overwriting* activates a message box to be displayed before an older trace file with the same file name and directory is overwritten.
- *Export All Channels* causes the analyzer to export the trace data for all channels in the current setup to separate ASCII or Matlab files. The selected file name is automatically extended by the channel identifier, e.g.: <File name>Ch1.csv, <File Name>Ch2.csv... This option is not available for Touchstone files.
- *Add Ref. Impedances* includes the reference impedance of the analyzer ports in the file header of the ASCII (*.csv) or Matlab file. The value is displayed in the Impedance field.
- *Impedance* indicates the reference port impedance that is written into the generated ASCII (*.csv) or Matlab file. For Touchstone (*.s1p) files, the value is editable, however, no renormalization of S-parameters is performed. The default reference impedance is equal to the reference impedance of the physical ports, as defined in the [Port Configuration](#) dialog (or 1 Ω, if the reference impedances are ambiguous).

Exported complex data is never renormalized.



Selecting an appropriate file format

Use a **Touchstone** file format to export single-ended S-parameter data traces to a file that can be evaluated with applications such as Agilent's Microwave Design System (MDS) and Advanced Design System (ADS), and to convert mixed mode parameters back to single-ended parameters. The data must be acquired in a frequency sweep. Note the conditions for Touchstone file export in section [Select Ports](#).

Use the **ASCII (*.csv)** format if you want to do one of the following:

- Import the created file into a spreadsheet application such as Microsoft Excel.
- Export an arbitrary number of traces, multiple traces with the same parameter or memory traces.
- Export traces acquired in a [power sweep](#) or [CW sweep](#).
- Use export options.

Use the **Matlab (*.dat)** format if you want to import and process the trace data in Matlab.

For more information see [Trace File Formats](#).

Remote control: `MMEMoRY:STORe:TRACe`
`MMEMoRY:STORe:TRACe:CHANnel`

Export Formatted Data...


Calls up a dialog to store data or memory traces with their current trace format and stimulus values to an ASCII (*.csv) or Matlab file. Only the displayed values of the trace (e.g. the logarithmic magnitude, if trace format *dB Mag* is selected) are exported. Therefore the trace file does not necessarily contain the full (complex) information about the trace. See [Complex vs. Formatted Data](#).



The exported formatted values correspond to the results in the [marker info field](#). For trace formats

involving Cartesian diagrams (dB Mag, Real, Imag...), the stimulus value and a single real response value are exported. For circular diagrams, both the real and imaginary part of the response value is exported.

An exported formatted trace can be processed and evaluated in an external application. Re-import into the analyzer is only possible if the complex trace values are exported; see [Import Complex Data](#).

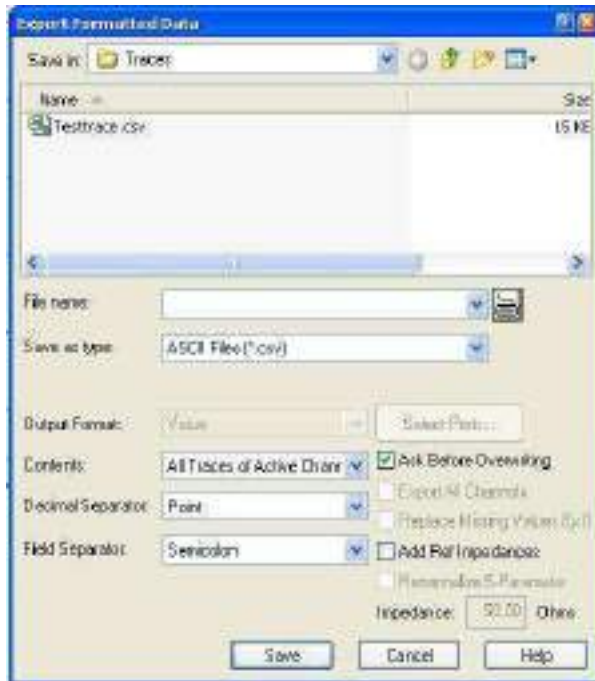

Export Formatted Data corresponds to a standard [Save As...](#) dialog with an additional panel to specify various export options. The *Dec. Separator* export option is not available for Matlab (*.dat) file export.

Some of the following output options also depend on the trace format.

- **Output Format** selects the format for the exported trace data. In the Re/Im format, each complex measurement value is represented by its real and imaginary part. It is also possible to store the [linear magnitude](#) and [phase](#) (lin Mag-Phase) or [dB magnitude](#) and phase (dB Mag-Phase) of each value.
This option is available for complex trace formats only (Polar, Smith, Inverted Smith). For traces in Cartesian diagrams, the displayed (real) values are exported.
- **Contents** selects only the Active Trace or All Traces of (the) Active Channel (including all data and memory traces) for data export to an ASCII (*.csv) file.
- **Dec. Separator** selects either the Point or the Comma (if needed to process the exported data with an external application) as a separator for decimal numbers exported to an ASCII (*.csv) file.
- **Field Separator**, the separator that the analyzer uses to separate different numbers in each line of an ASCII (*.csv) file.
- **Ask before Overwriting** activates a message box to be displayed before an older trace file with the same file name and directory is overwritten.
- **Export All Channels** causes the analyzer to export the trace data for all channels in the current setup to separate ASCII files. The selected ASCII file name is automatically extended by the channel identifier, e.g.: <File name>Ch1.csv, <File Name>Ch2.csv...
- **Add Ref. Impedances** includes the reference impedance of the analyzer ports in the file header of the ASCII (*.csv) or Matlab file. The value is displayed in the Impedance field.

Exported formatted data is never renormalized.



Selecting an appropriate file format

Use the **ASCII (*.csv)** format if you want to do one of the following:

- Import the created file into a spreadsheet application such as Microsoft Excel.
- Export an arbitrary number of traces, multiple traces with the same parameter or memory traces.
- Export traces acquired in a [power sweep](#) or [CW sweep](#).
- Use export options.

Use a the **Matlab (*.dat)** format if you want to import and process the trace data in Matlab.

For more information see [Trace File Formats](#).

Remote control: `MMEMory:STORe:TRACe`
`MMEMory:STORe:TRACe:CHANnel`

Trace File Formats

Trace files are ASCII files with selectable file format. The analyzer provides several types of trace files:

- [Touchstone \(*.s<n>p\)](#) files
- [ASCII \(*.csv\)](#) files
- *Matlab (*.dat)* files are ASCII files which can be imported and processed in Matlab.

The trace file formats complement each other; see [Selecting an appropriate file format](#).

Touchstone files

All Touchstone files contain a header, a comment section, and the actual trace data:

```
# HZ S RI R 50.00
! Rohde & Schwarz ZVA8 4Ports - Version 2.79 - 1145.1010k10 SN: 100001
! Date: 2011-03-17 17:29:05
! Measurement: S21
!
3.000000000000000E5 4.974100772242758E-1 -4.765769749721549E-2
4.029850000000000E7 4.993215759551635E-1 -4.876783852224179E-2
8.029700000000000E7 4.947516929605214E-1 -7.533998081687453E-2
...
```

The header consists of the following data elements:

specifies beginning of header line (required at top of file). *<Frequency unit>* HZ / KHZ / MHZ / GHZ allowed for imported files. The analyzer always uses HZ for exported data.

<Parameter type> Specifies what kind of network parameter data is contained in the file; S indicates S-parameter data.

<Data format> RI for Re/Im, MA for lin. Mag-Phase, DB for dB Mag-Phase. The data format for export files can be selected in the Export Data dialog.

R *<Reference resistance>* specifies the reference resistance as a real, positive number of ohms. The default reference resistance is 50 ohms.

Comment lines start with the exclamation mark (!) and may contain any text used for documentation of the trace data file. Any number of comment lines may be inserted before or after the header line. A Touchstone file created by the network analyzer contains the comment lines shown above: Manufacturer of the network analyzer, properties of the instrument, current date and time, measured S-parameter(s).

The trace data section corresponds to a set of single-ended S-parameters. It depends on the number of ports <n> and the data format. For real and imaginary values (data format = Real-Imag) the trace data for each stimulus frequency is arranged as follows:

- **1-port files (*.s1p)**

Freq Re(S11) Im(S11)

S11 can be replaced by any S-parameter; the *.s1p format is suitable for exporting an arbitrary data trace representing an S-parameter.

- **2-port files (*.s2p)**

Freq Re(S11) Im(S11) Re(S21) Im(S21) Re(S12) Im(S12) Re(S22) Im(S22)

(all values arranged in 1 line)

- **3-port files (*.s3p)**

Freq Re(S11) Im(S11) Re(S12) Im(S12) Re(S13) Im(S13)

Re(S21) Im(S21) Re(S22) Im(S22) Re(S23) Im(S23)

Re(S31) Im(S31) Re(S32) Im(S32) Re(S33) Im(S33)

(values arranged in 3 lines)

- **4-port files (*.s4p)**

Freq Re(S11) Im(S11) Re(S12) Im(S12) Re(S13) Im(S13) Re(S14) Im(S14)

Re(S21) Im(S21) Re(S22) Im(S22) Re(S23) Im(S23) Re(S24) Im(S24)

Re(S31) Im(S31) Re(S32) Im(S32) Re(S33) Im(S33) Re(S34) Im(S34)

Re(S41) Im(S41) Re(S42) Im(S42) Re(S43) Im(S43) Re(S44) Im(S44)

(values arranged in 4 lines)

The stimulus frequencies are arranged in ascending order. If a *lin. Mag-Phase (MA)* or *dB Mag-Phase (DB)* data format is selected the real and imaginary S-parameter values $\text{Re}(S_{ij})$, $\text{Im}(S_{ij})$ are replaced by $\text{lin Mag}(S_{ij})$, $\text{phase}(S_{ij})$ or $\text{dB Mag}(S_{ij})$, $\text{phase}(S_{ij})$, respectively.

According to Touchstone file specifications, no more than four pairs of network data are allowed per data line. The entries in the data lines are separated by white space, and a data line is terminated by a new line character. All data sets are arranged in increasing order of frequency.



When exporting traces to a Touchstone file, it is recommended to set the analyzer to single sweep mode (Channel – Sweep – Single (All Chans)). This will ensure that a complete sweep is exported.

ASCII (*.csv) files

ASCII files may be used to persist/load the data of one or more traces, sharing the same stimulus values. The following example shows the content of an ASCII trace file, as generated by the [Export Complex Data](#) function:


```
# Version 1.00
#
# Ref Impedances: Z01: 50, Z02: 50, Z03: 50, Z04: 50
```

```
#
freq[Hz];re:Trc1_S21;im:Trc1_S21;
3.000000000000000E+005;4.982868071198834E-001;-4.830951655465065E-002;
4.029850000000000E+007;4.960284141557844E-001;-4.770717265691336E-002;
8.029700000000000E+007;4.945932794558519E-001;-7.198394844983427E-002;
...
```

In general, an ASCII trace file consists of an optional comment block, a mandatory header line and a data block. In addition it may contain any number of blank lines. Together header line and data block form a data table, whose columns are separated by a particular character.

Comments are limited to the beginning of the file. A comment line must start with a # character. During export, if Add Ref. Impedances is checked in the [Export Complex Data](#) dialog, the reference impedances are written to the comment section. During import, comment lines are ignored.

The **header line** describes the traces contained in the file.

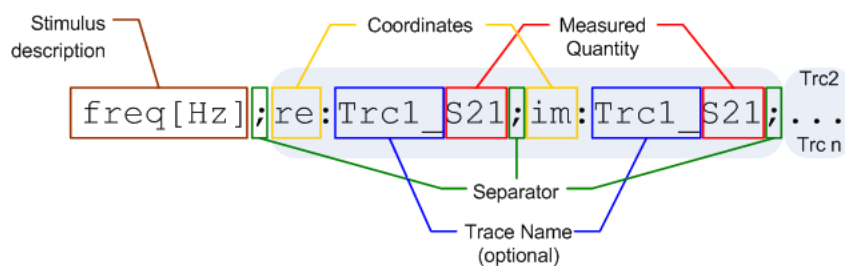

Header format

The header takes on the form

```
<Stimulus Descriptor><Separator><Trace Descriptor 1><Separator>[<Trace
Descriptor 2><Separator>[...]]
```

where

- **<Stimulus Descriptor>** defines the common sweep type, optionally followed by the stimulus unit enclosed in brackets:
 - `freq[Hz]` for frequency sweep
 - `power[dBm]` for power sweep
 - `time[s]` for time sweep
 - `trigger` for CW mode sweep
 - `imbalanced_amplitude_sweep[dB]` for amplitude imbalance sweeps
 - `imbalanced_phase_sweep[°]` for phase imbalance sweeps

[Export Complex Data](#) uses the default stimulus units shown above, [Import Complex Data](#) also accepts kHz, MHz and GHz for `freq` and ms for `time`. A missing, unknown or misspelled stimulus unit will be silently replaced by the default one.

- **<Separator>** is the character separating the columns of the header and data table (the *Field Separator* in the [Export Complex Data](#) dialog). The same separator char must be used throughout the header and data block; it can either be a comma, tab, space or semicolon (as in the example above) and must be different from the decimal separator that is used in the data block (the *Decimal Separator* in the [Export Complex Data](#) dialog).
- **<Trace Descriptor i>** describes trace *i* and takes on the form

```
<Coordinate 1>:<Trace Name>_<Measured Quantity><Separator><Coordinate 2>:<Trace Name>_<Measured Quantity>
```

where

- **<Coordinate 1>** and **<Coordinate 2>** define the representation of the related trace's (complex) response values. This can be either
 - **re** and **im** for cartesian coordinates (*Real/Imag* output format during [Export Complex Data](#)),
 - **mag** and **ang** for polar coordinates (*Lin Mag-Phase* output format) or
 - **dB** and **ang** for log-polar coordinates (*dB Mag-Phase* output format)
- **<Trace Name>_** is the name of the related trace, followed by an underscore. This part is optional, but may be required to uniquely identify a particular trace. [Export Complex Data](#) automatically inserts the names of the exported traces. [Import Complex Data](#) uses **<Trace Name>_<Measured Quantity>** to identify the trace to be imported.
- **<Measured Quantity>** indicates the measured quantity of the related trace. The keywords are the same as for the remote command [CALCulate<Ch>:PARAmeter:SDEFine](#) (but without quotes!).

The trace data is arranged as described in the header. The stimulus values are arranged in ascending order.



[Import Complex Data](#) requires the sweep type indicated in the ASCII file's header line to be the same as the sweep type of the active trace.

Shift Stimulus Value...

Shifts the active trace in horizontal direction, leaving the positions of all markers unchanged. The positive or negative offset value for the stimulus variable is entered into an input field. The unit depends on the sweep type.

Shift Stimulus Value:



Shift Stimulus Value can be used in Cartesian as well as in polar diagrams. The visible effect depends on the diagram type:

- In Cartesian diagrams, the trace is shifted relative to the markers and the x-axis.
- In polar diagrams, the trace is not affected, however, markers change their position.

Remote control: [DISPlay:WINDow<Wnd>:TRACe<WndTr>:X:OFFset](#) <numeric_value>

Shift Response Value...

Modifies all points of the active trace by means of an added and/or a multiplied complex constant. The constant complex values are entered in the four input fields of the *Shift Response Value* dialog.



The units of the constants are adjusted to the format of the active trace. Setting all values to zero (*Clear All Values*) restores the original trace.



Effect of the constants

The trace points are modified according to the formula displayed in the lower part of the dialog:

$$M_{\text{new}} = M_{\text{old}} \cdot 10^{<\text{Magnitude}>/20 \text{ dB}} \cdot e^{j \cdot <\text{Phase}>/180^\circ} + <\text{Real}> + j \cdot <\text{Imag}>$$

The formula and the different constants are adjusted to the different display formats of a trace:

- The *Magnitude* factor shifts a **dB Mag** trace in vertical direction, leaving the phase of a complex parameter unchanged.
- The *Phase* factor rotates a trace that is displayed in a **polar** diagram around the origin, leaving the magnitude unchanged.
- The *Real* added constant shifts a **real** trace in vertical direction, leaving the imaginary part unchanged.
- The *Imaginary* added constant shifts a **imaginary** trace in vertical direction, leaving the real part unchanged.



Shifting the trace by means of constant values is a simple case of trace mathematics. Use the **Define Math** dialog to define more complicated mathematical operations.

Remote control: `DISPlay:WINDow<Wnd>:TRACe<WndTr>:Y:OFFset <Magnitude>[, <Phase>, <Real>, <Imag>]`

Remote control: `CALCulate<Chn>:MATH:WUNit:STATe ON | OFF`

Max Hold On, Min Hold On

Enables (if selected) or disables the max hold (peak hold) or min hold function for the active trace. With enabled max hold or min hold function, the displayed trace shows the maximum or minimum values that the analyzer acquired since the start of the measurement. The max hold and min hold trace is real, it is based on the magnitude of the trace values (the phase values are discarded).

The max hold or min hold process can be restarted any time using **Restart Hold**. It is also restarted automatically when the channel or trace settings are changed so that the previous measurement results are no longer compatible.



Depending on the selected export file format and trace format, a data export (*Export Complex Data*, *Export Formatted Data*) may require complex trace data. In such situations, the analyzer exports the last

measured trace instead of the real max hold or min hold trace.

A memory trace is complex by definition. Therefore, *Data* --> *Mem* stores the last measured trace instead of the real max hold or min hold trace.

Remote control: `CALCulate<Chn>:PHOLD MAX | OFF`

Restart Hold, Restart Hold All

Restart Hold restarts the max hold (peak hold) function for the active trace, discarding the old maximum measurement results. This softkey is available only if *Max Hold On* or *Min Hold On* is enabled for the active trace.

Restart Hold All restarts the max hold (peak hold) or min hold function for all traces in the active setup with active max hold or min hold function. This softkey is available if *Max Hold On* or *Min Hold On* is enabled for at least one trace in the active setup.

Remote control: `CALCulate<Chn>:PHOLD MAX | OFF`

Marker

The functions in the *Marker* menu are used to position markers on a trace, configure their properties and select the format of the numerical readout.



Markers

Markers are tools for selecting points on the trace and for numerical readout of measured data. A marker is displayed with a symbol (a triangle, a crossbar or a line) on the trace, which may be a data trace or a memory trace. At the same time, the coordinates are displayed in a marker info field or in a table. Each marker can be defined as a normal marker, reference marker, delta marker or discrete marker.



Marker types

- A (normal) marker (*M 1*, *M 2*, ...) determines the coordinates of a measurement point on the trace. Up to 10 different normal markers can be assigned to a trace.
- A reference marker (*Ref*) defines the reference value for all delta markers.
- A delta marker (Δ) indicates the coordinates relative to the reference marker.
- The stimulus value of a discrete marker always coincides with a sweep point.


A special set of markers *M 1* to *M 4* is provided for bandfilter search mode.

The most common tasks to be performed with markers can be achieved using the *Marker* menu functions:

- Determine the coordinates of a measurement point on the trace. In polar diagrams where no x-axis is displayed, markers can be used to retrieve the stimulus value of specific points.
- Determine the difference between two trace points or the relative measurement result (*Delta Mode*).
- Convert a complex measurement result into other formats.

Markers also play an important role in performing the following advanced tasks:

- Change the sweep range and the diagram scale ([Marker Funct.](#)).
- Search for specific points on the trace ([Search](#)).

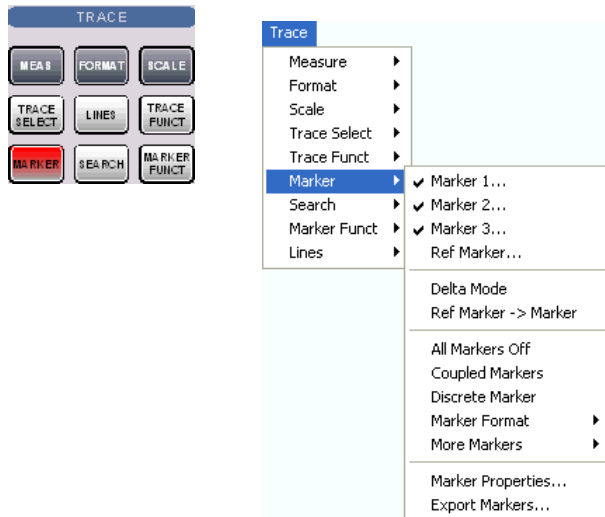

The *Marker* menu contains the following functions:

- [Marker 1/2/3](#) creates the markers numbered 1, 2, and 3.
- [Ref. Marker...](#) creates the reference marker which is used to measure relative values and distances.
- [Delta Mode](#) activates the display of the active marker values relative to the reference marker.
- [Ref. Marker -> Marker](#) places the reference marker to the position of the active marker.
- [All Markers Off](#) removes all markers from all traces of the active setup.
- [Coupled Markers](#) couples the markers on different traces.
- [Discrete Marker](#) turns the active marker into a discrete marker and vice versa.
- [More Markers](#) opens a submenu to create the markers numbered 4 to 10.
- [Marker Format](#) defines an output format for the (complex) marker values.
- [More Markers](#) opens a submenu to create the markers numbered 4 to 10.
- [Marker Properties...](#) opens a dialog with extended marker settings.
- [Export Markers...](#) exports the marker values to an ASCII file.



Toggle functions in the Marker menu

Some of the *Marker* functions toggle between two alternative states when they are pressed repeatedly:

- [Delta Mode](#) switches the delta mode for the active marker on or off.
- [Coupled Mkrs](#) activates or deactivates marker coupling.
- [Marker 1, ..., Marker 10](#) and [Ref. Marker](#) create a marker or remove it from the display. A removed marker remembers its properties (stimulus value, format, delta mode, number) and will be restored with these properties when [Marker <n>](#) or [Ref. Marker](#) is selected again. The marker properties are definitely lost when the associated trace is deleted.

Markers are available for all diagram types ([Trace – Format](#)).

Marker 1/2/3

Creates the markers numbered 1, 2, and 3, respectively, and assigns them to the active trace ([toggle function](#)). *Marker 1/2/3* opens the numeric entry bar to define the marker position (*Stimulus M 1/2/3*). The default position is the center of the sweep range.

Stimulus Mkr 1: 4.00015 GHz 

On closing the *Stimulus Mkr 1/2/3* numeric entry bar a marker symbol (triangle) labeled *M <n>* is positioned on the trace and the marker coordinates are displayed in the [Info Field](#).



Activating and moving markers

To select one of several markers as an active marker, do one of the following:

- Click the marker symbol.
- Click the marker line in the [marker info field](#).

To change the position of the active marker on the trace use one of the following methods:

- Drag-and-drop the marker symbol to the desired position.
- Click the *Marker <n>* or *Ref. Marker* softkey to call up the entry bar for the new stimulus value.
- Right-click the diagram area or select [Mkr. Properties](#) to call up the *Marker Properties* dialog and select the new stimulus value.
- Use the [Search](#) functions to place the marker to a specific point on the trace.



If the marker position is defined explicitly by entering a numeric value, the marker position can be outside the sweep range. If it is just varied using the rollkey, the mouse or the cursor keys, it always remains within the sweep range. If the position of a marker outside the sweep range is varied, it is automatically moved to the start or stop value of the sweep range, whichever is closer.

Remote control: `CALCulate<Chn>:MARKer<Mk>[:STATe] ON`
`CALCulate<Chn>:MARKer<Mk>:X`
`CALCulate<Chn>:MARKer<Mk>:Y?`

Ref. Marker

Creates a reference marker and assigns it to the active trace ([toggle function](#)). *Ref. Marker* opens the numeric entry bar to define the marker position (*Stimulus Ref Mkr*). The default position is the center of the sweep range.

Stim. Ref.Mkr.: 4.00015 GHz 

On closing the *Stimulus Ref Mkr* numeric entry bar a marker symbol (triangle) labeled *Ref* is positioned on the trace and a line indicating *R* plus the marker coordinates is inserted in the marker [info field](#).

The reference marker defines the reference value for all markers that are in [Delta Mode](#).

Remote control: `CALCulate<Chn>:MARKer<Mk>:REFerence[:STATe] ON`

```
CALCulate<Chn>:MARKer<Mk>:REFerence:X
CALCulate<Chn>:MARKer<Mk>:REFerence:Y?
```

Delta Mode

Converts the active marker to a delta marker so that its values are measured and indicated relative to the [reference marker](#) ([toggle function](#)). A Δ sign placed in front of the marker line indicates that the marker is in *Delta Mode*.

The reference marker itself can not be set to delta mode but must be present when another marker is set to delta mode. The analyzer takes into account these conditions when *Delta Mode* is selected:

- If *Delta Mode* is selected while the reference marker is active, the marker in the info list after the reference marker is activated and set to delta mode. If the current trace contains the reference marker only, a new *M 1* is created and set to delta mode.
- If *Delta Mode* is selected for a normal marker while the current trace contains no reference marker, a reference marker is created.



A delta marker is required to set the sweep span using marker functions ([Span = Marker](#)).

Remote control: `CALCulate<Chn>:MARKer<Mk>:DELta[:STATe] ON`

Ref. Marker -> Marker

Places the reference marker to the position of the active marker. *Ref. Marker -> Marker* is not active if the active marker is a reference marker.

Remote control: –

All Markers Off

Removes all markers from the active trace. Markers on other traces are not affected. The removed markers remember their properties (stimulus value, format, delta mode, number) when they are restored. The marker properties are definitely lost when the associated trace is deleted.

Remote control: `CALCulate<Chn>:MARKer<Mk>:AOFF`

Coupled Markers

Couples the markers of all traces in the active setup to the markers of the active trace ([toggle function](#)). While marker coupling is active, the active trace markers assume the role of master markers; the other markers behave as slave markers, following any change of position of the master marker.



Effects of marker coupling

The concept of marker coupling means that corresponding markers on different traces (i.e. markers with

the same number or reference markers) are positioned to the same stimulus values but keep their independent format and type settings. When a trace with markers is selected as the active trace and marker coupling is switched on, the following happens:

- The active trace and all associated markers are left unchanged. The active trace markers become the master markers of the setup.
- Markers on the other traces which have no corresponding master marker are removed but remember their properties and can be re-activated after the coupling is released.
- The remaining markers on the other traces become slave markers and are moved to the position of the corresponding master markers. "Missing" slave markers are created so that each trace has the same number of markers placed at the same position.
- If the position of a master marker is outside the sweep range of the slave trace, the slave marker is displayed at the edge of the diagram. The marker info field indicates an invalid measurement result: 

While marker coupling is active, it is possible to:

- Move a master marker and thus change the position of all corresponding slave markers.
- Activate another trace in order to make the associated markers the new master markers.



Marker coupling makes sense only if the master and the slave traces use the same stimulus variable. Channels with a different stimulus variable ([sweep type](#)) are not coupled.

Remote control: `CALCulate<Chn>:MARKer<Mk>:COUPled[:STATe] ON`

Discrete Marker

Turns the active marker into a discrete marker and vice versa.




The stimulus value of a discrete marker always coincides with a sweep point. Use discrete markers in order to avoid that the marker indicates an interpolated measurement value.

Remote control: `CALCulate<Chn>:MARKer<Mk>:MODE`
`CALCulate<Chn>:MARKer<Mk>:REFerence:MODE`

Marker Format

Opens a submenu to select an output format for the (complex) active marker value in the marker [info field](#). The default marker format is the format of the associated trace. The current format is indicated with a ●.

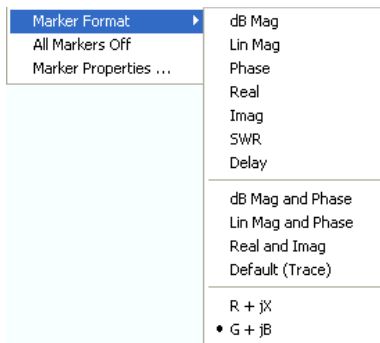

All marker formats are available irrespective of the measured quantity. The output values are calculated by a simple conversion of a complex measurement result, where the marker format defines the conversion rules. This flexibility in the calculation must be kept in mind when interpreting the results and physical units displayed; see also [Measured Quantities and Display Formats](#).



Short description of marker formats

The formats of the markers assigned to a trace are independent of each other and of the [trace format](#) settings. The following table gives an overview on how a complex marker value $z = x + jy$ is converted.

Marker Format	Description	Formula
dB Mag	Magnitude of z in dB	$ z = \sqrt{x^2 + y^2}$ $\text{dB Mag}(z) = 20 * \log z \text{ dB}$
Lin Mag	Magnitude of z , unconverted	$ z = \sqrt{x^2 + y^2}$
Phase	Phase of z	$\varphi(z) = \arctan(y/x)$
Real	Real part of z	$\text{Re}(z) = x$
Imag	Imaginary part of z	$\text{Im}(z) = y$
SWR	(Voltage) Standing Wave Ratio	$\text{SWR} = (1 + z) / (1 - z)$
Delay	Group delay, neg. derivative of the phase response ^{*)}	$-\text{d} \varphi(z) / \text{d} \omega$
dB Mag and Phase	Magnitude of z in dB and phase in two lines	$20 * \log z \text{ dB}$ $\arctan(\text{Im}(z) / \text{Re}(z))$
Lin Mag and Phase	Magnitude of z (unconverted) and phase in two lines	$ z $ $\arctan(\text{Im}(z) / \text{Re}(z))$
Real and Imag	Real and imaginary part of z in two lines	x y
Default (Trace)	Marker format identical with trace format	—
R + j X	Unnormalized resistance and reactance; L or C in three lines (Smith diagram)	R X L or C ^{**)}
G + j B	Unnormalized conductance and susceptance; L or C in three lines (Inverted Smith diagram)	G B L or C ^{**)}

^{*)} The delay aperture is defined in the [Trace – Format](#) menu.

^{**)} The equivalent inductances or capacitances L or C are calculated from the imaginary part of the impedance according to

$$L = \frac{1}{\omega} X \quad \text{if } X \geq 0$$

$$C = \frac{1}{\omega \cdot X} \quad \text{if } X < 0$$

Remote control: `CALCulate<Chn>:MARKer<Mk>:FORMat ...`

More Markers

Opens a submenu to create the markers numbered 4 to 10. The markers are analogous to [marker no. 1 to 3](#).

Remote control: `CALCulate<Chn>:MARKer<Mk>[:STATe] ON`

Marker Properties...

Opens a dialog to define the properties of all markers of the active trace.



In the left part the dialog contains four input fields and drop-down lists to select a marker and define the basic properties of a selected marker which is switched on in the *Mode* panel.

- *Select Mkr.* opens a drop-down list to select the [Ref. Marker](#) or one of the [Marker 1, ... 10](#) that may be associated to the active trace.
- *Name* defines a marker name which may exceed the length of the input box and contain letters, numbers, blanks and special characters.
- *Stimulus* defines the stimulus value (in Cartesian diagrams: the x-axis position) of the marker.
- *Format* defines the output [format](#) of the marker value.

The *Mode* panel contains check boxes to select properties that are related to the marker positions. All properties can be combined.

- *Marker On* displays the selected marker in the diagram and in the marker info field or removes it. Marker configurations are only available while the marker is switched On. A removed marker remembers its properties (stimulus value, format, delta mode, number ...) when it is switched on again. The marker properties are definitely lost if the associated trace is deleted.

- *Fixed Marker* freezes the current response value of the selected marker. The marker can still be shifted horizontally but the vertical position remains fixed if the other marker settings are changed. Markers must be inside the sweep range and have a valid response value when they are fixed.
- *Delta Mode* sets the selected marker to [delta mode](#) and displays its values relative to the reference marker.
- *Discrete Mode* means that a marker can be set to discrete sweep points only. If discrete mode is switched off, the marker can be positioned on any point of the trace, and its response values are obtained by interpolation.
- *All Mkrs Coupled* couples the markers of all traces in the active setup to the markers of the active trace; see [Coupled Markers](#).

Style defines how the selected marker is displayed on the screen.

Show Info selects the marker info to be displayed at the *Marker Position*, in the marker [info field](#) or in a separate *Table* below the diagram area. The display options may be selected simultaneously or all switched off. The table provides more information than the marker info field:

Marker	Trace	Stimulus	Response	Delta	Discr	Fixed	Tracking	Search Range
Ref	Trc1	3.440171000 GHz	-6.426 dB	☐	☒	☒	Off	Full Range
Mkr 1	Trc1	4.000150000 GHz	-5.364 dB	☐	☐	☐	Off	Full Range

Remote control: `CALCulate<Chn>:MARKer<Mk>:NAME`
`CALCulate<Chn>:MARKer<Mk>[:STATe] ON`
`CALCulate<Chn>:MARKer<Mk>:TYPE NORMal | FIXEd`
`CALCulate<Chn>:MARKer<Mk>:DELta[:STATe] ON`
`CALCulate<Chn>:MARKer<Mk>:MODE CONTinuous | DIScrete`
`CALCulate<Chn>:MARKer<Mk>:COUPled[:STATe] ON`
`CALCulate<Chn>:MARKer<Mk>:REFerence:NAME`
`CALCulate<Chn>:MARKer<Mk>:REFerence:TYPE`

Export Markers...

Calls up a [Save As...](#) dialog to store the current marker values to a marker file.

The analyzer uses a simple ASCII format to export marker values. By default, the marker file extension is *.txt. The file contains all traces in the active setup together with their names and measured quantities. Below each trace, the file shows a list of all markers with their names, stimulus and response values.

The following example of a marker file describes a setup with two traces *Trc1* and its memory trace. *Trc1* has no markers assigned, the memory trace has four markers named *M 1*, ..., *M 4*.

```
Trc1 S21
NO Markers

Mem2[Trc1] S21
Mkr 1 3.55992000 MHz -4.853 dB
Mkr 2 1.2971115 MHz -7.865 dB
Mkr 3 4.793734 GHz -7.896 dB
Mkr 4 2.461727 GHz -5.192 dB
```

Remote control: `MMEemory:STORe:MARKer "file_name"`

Search

The *Search* menu uses markers to locate specific points on the trace.




Search functions

The search functions are tools for searching measurement data according to specific criteria. A search consists of analyzing the measurement points of the current trace (or of a user-defined subrange termed the *Search Range*) in order to find one of the following:

- Absolute or relative (local) maxima and minima (minimum/maximum search).
- Trace points with a specific response value (target search).
- Trace segments with a shape that is characteristic for bandpass or bandstop filters (bandfilter search).

When the search is activated, the active marker is moved to the (next) point that meets the search criteria. If the trace contains no markers, a *M 1* is created and used for the search. The search result is displayed in the marker info field. If no search result can be found, the marker remains at its original position.

Some search functions can be activated repeatedly in order to find all possible search results. Moreover the analyzer provides a *Tracking* mode where the search is repeated after each sweep.

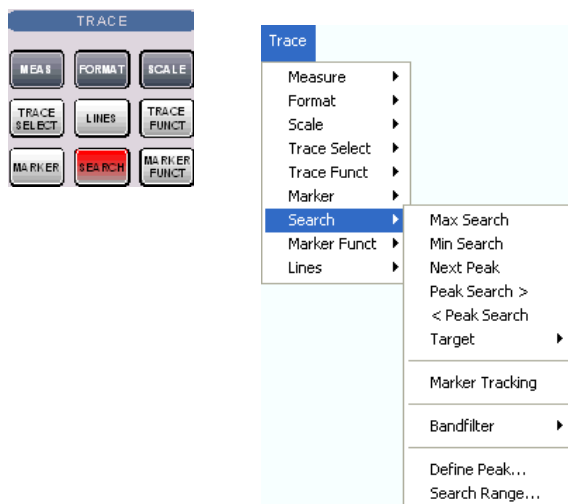

- **Max Search** sets the active marker to the absolute maximum in the **search range**.
- **Min Search** sets the active marker to the absolute minimum in the search range.
- **Next Peak** sets the active marker to the next maximum or minimum in the search range, depending on the current search criterion.
- **Peak Search >** sets the active marker to the next peak with higher stimulus value.
- **< Peak Search** sets the active marker to the next peak with lower stimulus value.
- **Target** opens a submenu to search for a specific value on the trace.
- **Marker Tracking** causes the search to be repeated after each sweep.
- **Bandfilter** opens a submenu to search for trace segments with characteristic bandfilter shape and calculate the filter parameters.
- **Define Peak** defines the criteria for the peak search.

- [Search Range...](#) assigns a search range to each marker of the current trace.



The search functions are available in all Cartesian and polar diagram types (see [Trace – Format](#)). In polar diagrams (*Polar*, *Smith*, *Inverted Smith*), where complex values are displayed, the magnitude of the response values provides the search criterion.

Max Search

Sets the active marker to the absolute maximum in the [search range](#), i.e. to the largest of all response values. If a complex trace format (e.g. a polar diagram) is active, the marker is set to the measurement point with the maximum magnitude.

By default the search range coincides with the sweep range. If the active trace contains no markers, a marker *M 1* is created to indicate the search result.

Remote control: `CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute MAXimum`
`CALCulate<Chn>:MARKer<Mk>:FUNCTION:RESult?`

Min Search

Sets the active marker to the absolute minimum in the [search range](#), i.e. to the smallest of all response values. If a complex trace format (e.g. a polar diagram) is active, the marker is set to the measurement point with the minimum magnitude.

By default the search range coincides with the sweep range. If the active trace contains no markers, a marker *M 1* is created to indicate the search result.

Remote control: `CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute MINimum`
`CALCulate<Chn>:MARKer<Mk>:FUNCTION:RESult?`

Next Peak

Sets the active marker to the next maximum or minimum in the [search range](#), depending on the current search criterion.

- If a *Max Search* or a *Bandpass Search* is active, then the marker is set to the next maximum. The next maximum is the maximum with the largest response value that is below the current marker response value.
- If a *Min Search* or a *Bandstop Search* is active, then the marker is set to the next minimum. The next minimum is the minimum with the smallest response value that is above the current marker response value.

By default the search range coincides with the sweep range. If the active trace contains no markers, a marker *M 1* is created to indicate the search result. *Next Peak* is disabled while a [Target Search](#) is active.

Remote control: `CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute NPEak`
`CALCulate<Chn>:MARKer<Mk>:FUNCTION:RESult?`

Peak Search >

Sets the active marker to the next peak with higher stimulus value. If the active trace contains no markers, a marker *M 1* created to indicate the search result. The peak criteria are defined via [Define Peak](#).

Remote control: `CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute RPEak`
`CALCulate<Chn>:MARKer<Mk>:FUNCTION:RESult?`


< Peak Search

Sets the active marker to the next peak with lower stimulus value. If the active trace contains no markers, a marker *M 1* created to indicate the search result. The peak criteria are defined via [Define Peak](#).

Remote control: `CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute LPEak`
`CALCulate<Chn>:MARKer<Mk>:FUNCTION:RESult?`

Target

Opens a submenu to search for a specific value on the trace.

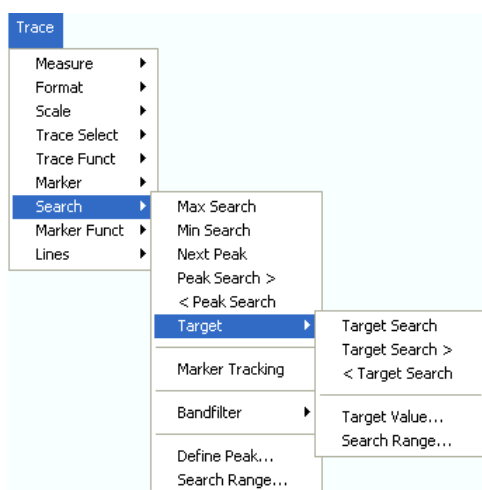

- [Target Search](#) activates the search for the target value.
- [Target Search >](#) activates the search for the target value to the right of the active marker.
- [< Target Search](#) activates the search for the target value to the left of the active marker.
- [Target Value](#) specifies the target value.
- [Search Range](#) confines the search to a subrange of the sweep.

Target Search

Activates the search and sets the active marker to the defined [target value](#). If the active trace contains no markers, a marker *M 1* is created to indicate the search result.

If the target value occurs at several stimulus values, the marker is placed to the search result with the smallest stimulus value. The other measurement points with the same target value can be located using the [Target Search >](#) function.

If the target is not found (e.g. because the active trace doesn't contain the target value), then the active marker is not moved away from its original position.

Remote control: `CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute TARGET`
`CALCulate<Chn>:MARKer<Mk>:FUNCTION:RESult?`

Target Search >

Activates the search to the right of the active marker position and sets the active marker to the defined [target value](#). The target search range is between the active marker position and the end ([Stop](#)) of the search range. If the active trace contains no markers, a marker *M 1* is created to indicate the search result, and the target search range starts at the beginning ([Start](#)) of the search range.

If the target value occurs at several stimulus values, the marker is placed to the search result with the smallest stimulus value (i.e. the one which is closest to the active marker position). The other measurement points with the same target value can be located using *Target Search >* repeatedly.

If the target is not found (e.g. because the active trace doesn't contain the target value), then the active marker is not moved away from its original position.

Remote control: `CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute RTARGET`
`CALCulate<Chn>:MARKer<Mk>:FUNCTION:RESult?`

< Target Search

Activates the search to the left of the active marker position and sets the active marker to the defined [target value](#). The target search range is between the [Start](#) value of the search range and the active marker position. If the active trace contains no markers, a marker *M 1* is created to indicate the search result, and the target search range starts at the end ([Stop](#)) of the search range.

If the target value occurs at several stimulus values, the marker is placed to the search result with the largest stimulus value (i.e. the one which is closest to the active marker position). The other measurement points with the same target value can be located using *Target Search >* repeatedly.

If the target is not found (e.g. because the active trace doesn't contain the target value), then the active marker is not moved away from its original position.

Remote control: `CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute LTARGET`
`CALCulate<Chn>:MARKer<Mk>:FUNCTION:RESult?`

Target Value

Opens an dialog to select a marker for the target search and define the target value.



It is possible to define up to ten different target values for each trace and assign them to the markers no. 1 to 10. The input fields in the *Target Search* dialog are used to select the markers and define the associated search ranges:

- *Marker* selects one of the ten markers that can be assigned to the trace. If a selected marker does not exist, it is created as soon as *On* is checked. A created marker is displayed in the center of the search range.
- *Value* selects the target value to be assigned to the selected marker. The target Value is entered with the unit of the active trace.

Remote control: `CALCulate<Chn>:MARKer<Mk>:TARget`

Search Range...

Opens the [Search Range Dialog](#) to confine the target search to a subrange of the sweep.

Bandfilter

Opens a submenu to search for trace segments with a bandpass or bandstop shape and determines characteristic filter parameters.




Bandfilter search and filter parameters

Bandpass and bandstop regions can be described with the same parameter set:

- A bandpass region contains a local maximum around which the magnitude of the trace falls off by more than a specified *x dB Bandwidth*.
- A bandstop region contains a local minimum around which the magnitude of the trace increases by more than a specified *x dB Bandwidth*.

The analyzer locates bandpass and bandstop regions and determines their position (*Center* frequency) and shape (*Bandwidth*, *LBE*, *UBE*, Quality factor *Q*; see [Show Results](#)). For a meaningful definition of the *x dB Bandwidth* criterion, the trace format must be *dB Mag*.

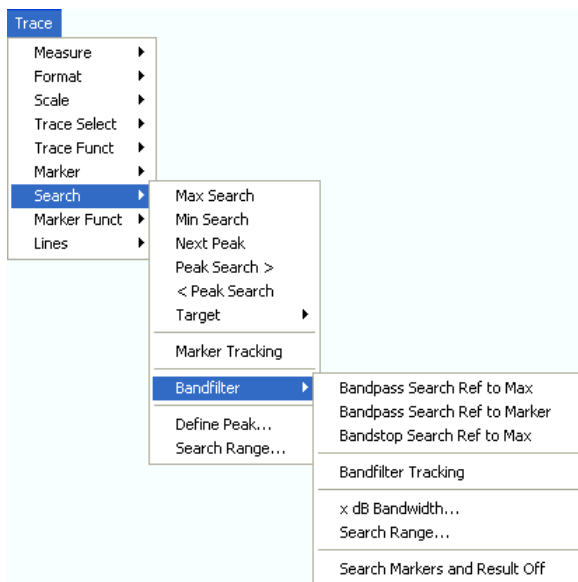

- **Bandpass Search Ref to Max** activates the search for a bandpass region in the active trace.
- **Bandpass Search Ref to Marker** activates the search for a bandpass region in the active trace, starting at the position of the active marker.
- **Bandstop Search Ref to Max** activates the search for a bandstop region in the active trace.
- **Bandfilter Tracking** causes the bandfilter search to be repeated after each sweep.
- **x dB Bandwidth...** sets the level defining the filter bandwidth.
- **Search Range...** confines the search to a subrange of the sweep.
- **Search Markers and Result Off** hides the markers and bandfilter parameters in the diagram area.




NOTE Bandfilter mode can be selected for a broad range of measured quantities (**Trace – Measure**), provided that the display format is **dB Mag**. To obtain real filter parameters, the measured quantity must be a transmission S-parameter and a frequency sweep must be performed. For other quantities (e.g. reflection parameters), the Bandfilter functions are still useful to analyze general trace properties. In some display formats (e.g. Phase) the bandfilter search is disabled.

Bandpass Search Ref to Max

Activates the search for a bandpass region on the active trace and activates bandfilter **Tracking**. A bandpass region is the tallest peak in the **search range** with a minimum excursion specified by means of the **x dB Bandwidth** parameter.

When **Bandpass Search** is activated the analyzer uses (or creates) the four markers **M 1** to **M 4** to locate the **bandpass region**.

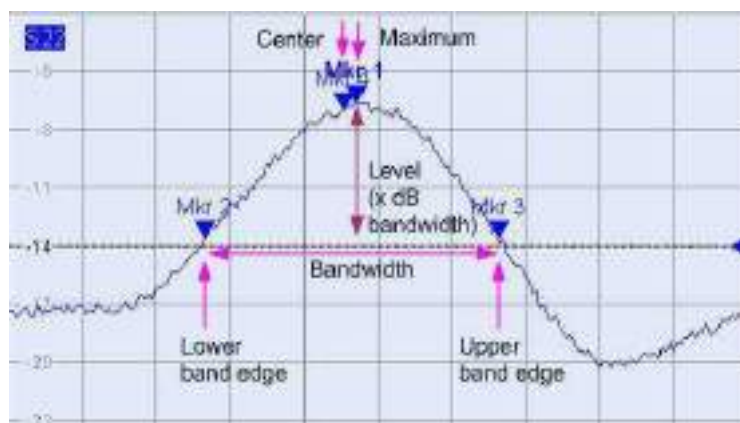

- M 1 indicates the maximum of the peak (*Max*).
- M 2 indicates the point on the left edge of the peak where the trace value is equal to the maximum minus *x dB Bandwidth* (*Lower Band Edge, LBE*).
- M 3 indicates the point on the right edge of the peak where the trace value is equal to the maximum minus *x dB Bandwidth* (*Upper Band Edge, UBE*).
- M 4 indicates the center of the peak, calculated as the geometric mean value of the *LBE* and *UBE* positions: $f_{\text{Center}} = \sqrt{f_{\text{LBE}} * f_{\text{UBE}}}$.

The bandfilter search results are displayed in the bandfilter [info field](#).




To search for a bandpass region in the vicinity of the active marker, use [Bandpass Search Ref to Marker](#).

Remote control: `CALCulate<Chn>:MARKer<Mk>:FUNCTION:BWIDth:MODE BPASS`
`CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute BFIIter`

Bandpass Search Ref to Marker

Activates the search for a bandpass region on the active trace in the vicinity of the active marker and activates bandfilter [Tracking](#). The bandpass region is the frequency range between the lower and the upper band edge; the band edges are defined by the magnitude of the trace at the **marker** position minus the *x dB Bandwidth* parameter:

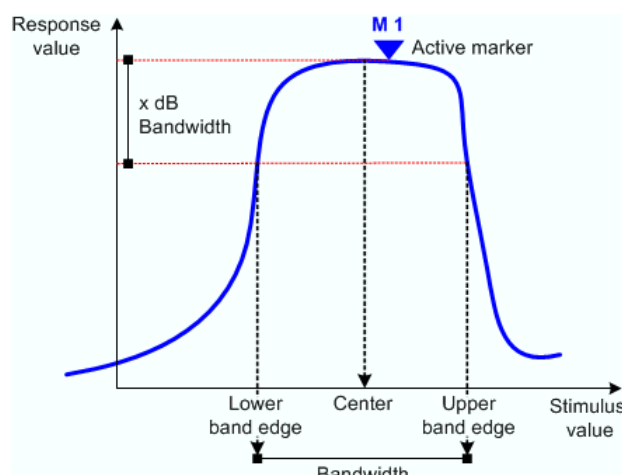

In contrast to a *Bandpass Search Ref to Max*, the *Bandpass Search Ref to Marker* does not change the position of the active markers. The *Loss* is the response value at the marker position; the bandfilter search results are displayed in the bandfilter [info field](#). The *Lower Band Edge* and the *Upper Band Edge* must fall into the [search range](#), otherwise the bandfilter search results are invalid.




Bandpass Search Ref to Marker is particularly suitable for bandfilters with known center frequency, with the active marker placed onto this center frequency. You can also use a peak search to place the active marker on the maximum of the trace. Notice that, if the active marker is off the peak, both band edges are more than x dB below the peak response value. To search for a bandstop region in the vicinity of the active marker, use [Bandfilter Tracking – Bandstop Search Ref to Marker](#).

Remote control: `CALCulate<Chn>:MARKer<Mk>:FUNCTION:BWIDth:MODE BPRMarker | BSRMarker`
`CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute BFILter`

Bandstop Search Ref to Max

Activates the search for a bandstop region on the active trace and activates bandfilter [Tracking](#). A bandstop region is the lowest peak (local minimum) in the [search range](#), provided that its level is at least $<x \text{ dB Bandwidth}>$ below the maximum (passband value).

When *Bandstop Search* is activated the analyzer uses (or creates) the four markers *M 1* to *M 4* to locate the **bandstop region**.

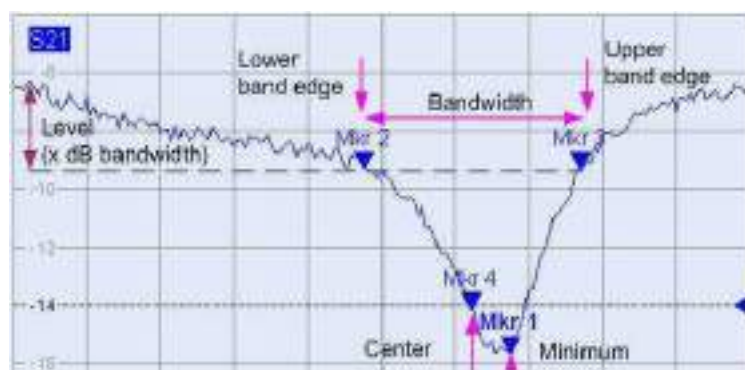

- *M 1* indicates the minimum of the peak (*Min*).
- *M 2* indicates the point on the left edge of the peak where the trace value is equal to the maximum in the search range (passband value) minus *x dB Bandwidth* (*Lower Band Edge, LBE*).
- *M 3* indicates the point on the right edge of the peak where the trace value is equal to the maximum in the search range (passband value) minus *x dB Bandwidth* (*Upper Band Edge, UBE*).
- *M 4* indicates the center of the peak, calculated as the geometric mean value of the *LBE* and *UBE* positions: $f_{\text{Center}} = \sqrt{f_{\text{LBE}} \cdot f_{\text{UBE}}}$.

The bandfilter search results are displayed in the bandfilter [info field](#).



To search for a bandpass region in the vicinity of the active marker, use [Bandpass Search Ref to Marker](#). Use [Bandfilter Tracking](#) to select other search modes.

Remote control: `CALCulate<Chn>:MARKer<Mk>:FUNCTION:BWIDth:MODE BStOP`
`CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute BFILter`

Bandfilter Tracking

Causes the bandfilter search to be repeated after each sweep: When tracking mode is active the markers typically change their horizontal and their vertical positions as the measurement goes on.

Tracking for the different bandfilter search modes is enabled or disabled in a selection box. Selecting a search mode for tracking also activates this mode.



The search modes have the following effect:

- [Bandpass Ref to Max](#) / [Bandstop Ref to Max](#): The bandpass / bandstop is the tallest / lowest peak in the search range.
- [Bandpass / Bandstop Ref to Marker](#): The bandpass / bandstop is the peak in the vicinity of the active marker position. The response values for the lower and upper band edges are calculated as the response values at the active marker position plus / minus *x dB*, where *x* is equal to the *<x dB Bandwidth>*. To be valid the peak must be above / below the response value for the band edges, and the band edges must fall into the search range.
- [Bandpass / Bandstop Absolute Level](#): The bandpass / bandstop is the tallest/lowest peak in the search range. To be valid, the peak must be above / below *-x dB*, where *x* is numerically equal to the *<x dB Bandwidth>* value. The Lower Band Edge and Upper Band Edge values are given by the frequencies where the trace is equal to *-x dB*.

Tracking is a toggle function: Selecting the function repeatedly switches the tracking mode on and off.

Remote control: `CALCulate<Chn>:MARKer<Mk>:FUNCTION:BWIDth:MODE`
`CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute BFILter`
`CALCulate<Chn>:MARKer<Mk>:SEARCh:TRACking`

x dB Bandwidth

Opens the numeric entry bar for the minimum excursion of the bandpass and bandstop peaks.



- A bandpass peak must fall off on both sides by the specified *x dB Bandwidth* to be considered a valid peak.
- A bandstop peak must be *x dB Bandwidth* below the maximum level in the search range (bandpass value) to be considered a valid peak.

Remote control: `CALCulate<Chn>:MARKer<Mk>:BWIDth <Level>`

Search Range...

Opens the *Search Range Dialog* to confine the bandfilter search to a subrange of the sweep.



It is possible to define and store up to ten different search ranges for each trace. The bandfilter search is performed using the markers *M 1*, ..., *M 4*, irrespective of the selected search range.

- *Search Range* Selects a search range for the bandfilter search. Full Span means that the search range is equal to the sweep range. Besides, it is possible to store up to 10 customized search ranges.
- *Start* defines the beginning of the search range. Start must be smaller than the Stop value, otherwise the search will not be initiated.
- *Stop* defines the end of the search range. Stop must be larger than the Start value, otherwise the search will not be initiated.
- *Range Limit Lines On* displays two vertical lines indicating the Start and the Stop value of the current bandfilter search range in the diagram area. This function is enabled as soon as one of the search ranges 1 to 10 is selected.




Search range properties

The ten search ranges are valid for the entire setup. Each of them can be assigned to any marker in the setup, irrespective of the trace and channel that the marker belongs to.

The default search range of any new marker is *Full Span*. The analyzer provides greatest flexibility in defining search ranges. In particular, two search ranges may overlap or even be identical. The search is confined to the part of the search range that belongs to the sweep range.

The following example shows how search ranges can be used to search a trace for several bandpass regions.

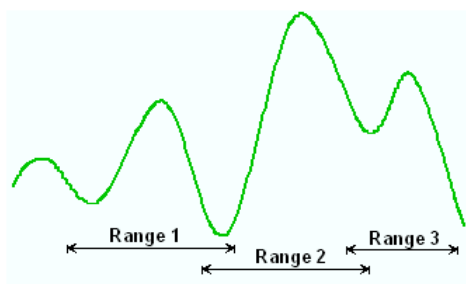

Remote control: `CALCulate<Chn>:MARKer<Mk>:FUNCTION:DOMain:USER`
`CALCulate<Chn>:MARKer<Mk>:FUNCTION:DOMain:USER:START`
`CALCulate<Chn>:MARKer<Mk>:FUNCTION:DOMain:USER:STOP`

Search Markers and Result Off

Hides the info field with the results of a bandpass or a bandstop search and disables bandfilter [tracking](#). The info field is displayed again (and tracking is re-enabled) when a new bandfilter search is performed.

Bandpass Ref to Max Parameters				tracking...
Bandwidth:				932.103853 MHz
Center:				1.813672673 GHz
Lower Band Edge:				1.347620747 GHz
Upper Band Edge:				2.279724600 GHz
Quality Factor:				1.9458 U
Loss:				5.604 dB



The analyzer provides an alternative, short version of the bandfilter info field; see *System – System Config...* – [General](#).



Bandfilter parameters

For a *Bandpass/Bandstop Ref to Marker* search, the info field contains the following search results:

- *Bandwidth* is the n-dB bandwidth of the bandpass/bandstop region, where n is the selected [x dB Bandwidth](#). The bandwidth is equal to the difference between the Upper Bandwidth Edge (UBE) and the Lower Bandwidth Edge (LBE).
- *Center* is calculated as the geometric mean value of the *LBE* and *UBE* positions: $f_{\text{Center}} = \sqrt{f_{\text{LBE}} \cdot f_{\text{UBE}}}$. If desired, the center frequency can be calculated as the arithmetic mean value $f_{\text{Center}} = (f_{\text{LBE}} + f_{\text{UBE}})/2$; see *System – System Config...* – [General](#).
- *Lower Band Edge* is the closest frequency below the center frequency where the trace is equal to the center value minus n dB.
- *Upper Band Edge* is the closest frequency above the center frequency where the trace is equal to the center value minus n dB.
- The *Quality Factor* is the ratio between the *Center* frequency and the 3-dB *Bandwidth*; it does not depend on the selected [x dB Bandwidth](#).
- *Loss* is the loss of the filter at its center frequency and is equal to the response value of marker no. 4. For an ideal bandpass filter the loss is zero (0 dB), for an ideal bandstop filter it is $-\infty$ dB.

For a *Bandpass/Bandstop Ref to Marker* search, the following modified definitions apply:

- *Lower Band Edge* is the closest frequency below the active marker position where the trace is

equal to the marker response value minus n dB.

- *Upper Band Edge* is the closest frequency above the active marker position where the trace is equal to the marker response value minus n dB.
- *Loss* is the response value of the active marker.

For a *Bandpass/Bandstop Absolute Level* search, the following modified definitions apply (x denotes the <x dB Bandwidth> value):

- *Lower Band Edge* is the closest frequency below the peak frequency where the trace is equal to – x dB.
- *Upper Band Edge* is the closest frequency above the peak frequency where the trace is equal to – x dB.

Remote control: `CALCulate<Chn>:MARKer<Mk>:BWIDth?`
`CALCulate<Chn>:MARKer<Mk>SEARch:BFILter:RESult[:STATe]`
`CALCulate<Chn>:MARKer<Mk>:SEARch:TRACking`

Define Peak

Opens a dialog to define the peak type to be searched for.



It is possible to select the peak type up to ten times for each trace and assign the selection to the markers no. 1 to 10.

- *Marker* Selects one of the ten markers that can be assigned to the trace. If a selected marker does not exist, it is created as soon as On is checked. A created marker is displayed in the center of the search range.

The radio buttons in the *Peak Type* panel offer the following alternative peak types:

- *Local Max* activates the peak search for local maxima only. The response value at a local maximum is larger than the values in the vicinity.
- *Local Min* activates the peak search for local minima only. The response value at a local minimum is smaller than the values in the vicinity.
- *Local Min or Max* activates the peak search for both local maxima and minima.

Search Range

Opens the [Search Range Dialog](#).

Search Range Dialog

Allows to create or delete markers for the active trace and to define a [search](#) range for each marker.



To create a marker, select it from the *Marker* combo-box and tick the *On* checkbox. Then, in the *Modify Search Range* section, select a range for the marker search and use the input fields to modify the selected range.




User-defined Ranges and Active Display Range

In addition to *Full Span*, representing the entire sweep range, there are 10 user-defined ranges per channel, which can be assigned

- to markers as [search ranges](#) and
- to traces as [evaluation ranges](#) for trace statistics

The resulting search or evaluation range is the intersection of the assigned range with the current sweep range.


The analyzer provides the greatest flexibility in defining ranges. In particular, ranges may overlap or even be identical. The following example shows how different search ranges can be used to search a trace for several local maxima.

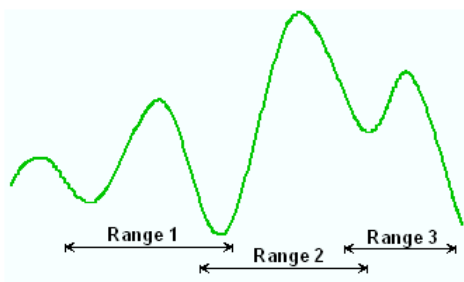

Whenever a range is assigned as search or evaluation range, it becomes the **active display range** of the related channel.

A channel's *Range Limit Lines On* property defines whether or not the limits of the channel's active display range are displayed as vertical lines, whenever this channel becomes the active one. If set to true, vertical lines are displayed in the active diagram, provided that

- the active display range is different from *Full Span*
- the limits are inside the sweep range

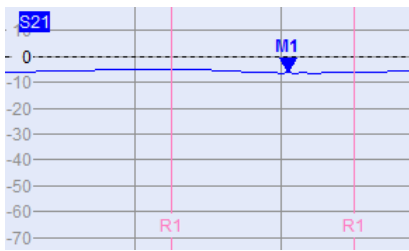

Range Limit Lines On is a **channel setting**, i.e. it not is limited to a particular trace, diagram, marker or range.

- **Marker/On Marker** selects one of the ten markers that can be assigned to a trace. If the selected marker does not yet exist, it is created as soon as On is ticked. A newly created marker is displayed in the center of the search range.



The search range of the last selected marker becomes the related channel's active **range**.

- **Search Range** Selects the **range** confining the search range of the selected Marker and makes it the active range of the related channel.
Note that the combo-box is only enabled, if the state of the related marker is On.
- **Start/Stop** defines the lower/upper limit of the selected range.
- **Range Limit Lines On** If enabled, the Start and Stop of the channel's active display **range** are displayed as vertical lines whenever this channel becomes the active one.




The **Start** and **Stop** settings affect all search ranges and **evaluation ranges** that are defined using this **range**.

Remote control: `CALCulate<Chn>:MARKer<Mk>:FUNction:DOMain:USER`
`CALCulate<Chn>:MARKer<Mk>:FUNction:DOMain:USER:START`
`CALCulate<Chn>:MARKer<Mk>:FUNction:DOMain:USER:STOP`
`CALCulate<Chn>:MARKer<Mk>:FUNction:DOMain:USER:SHOW`

Marker Tracking

Causes the active minimum/maximum or target search of the active marker to be repeated after each sweep: When tracking mode is active the marker typically changes its horizontal and its vertical position as the measurement goes on.

Tracking for the different search modes is enabled or disabled in a selection box. Selecting a search mode for tracking also activates this mode.

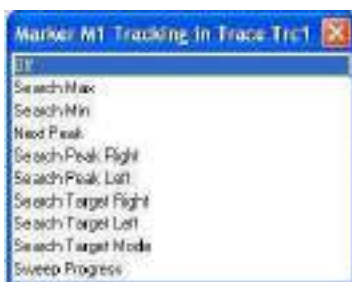

Sweep Progress tracking means that the active marker follows the latest valid measurement points and thus monitors the sweep progress. This complements the progress indication in the status bar below the diagram area.



Tracking mode properties

The tracking mode is available for all search modes, i.e. for minimum/maximum search, target search and bandfilter search. The *Marker Tracking* function in the *Search* submenu is valid for an active minimum/maximum and target search; **bandfilter tracking** can be activated separately. Tracking is marker-specific but can be switched on for several markers simultaneously.


A change of the marker positions of the search modes does not affect the tracking mode.

Tracking is a toggle function: Selecting the function repeatedly switches the tracking mode on and off.

Remote control: `CALCulate<Chn>:MARKer<Mk>:SEARch:TRACking`

Marker Funct

The *Marker Functions* use the active marker to define the sweep range, scale the diagram and introduce an electrical length offset.

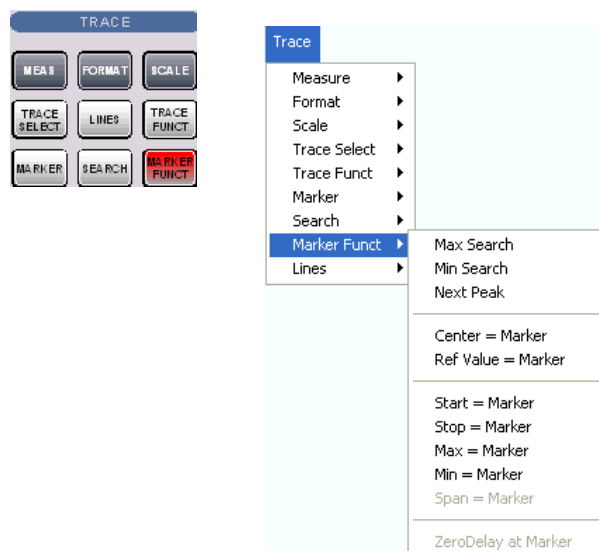

The functions in the upper section are also provided in the *Search* submenu:

- **Max Search** sets the active marker to the absolute maximum in the **search range**.
- **Min Search** sets the active marker to the absolute minimum in the search range.
- **Next Peak** sets the active marker to the next maximum or minimum in the search range, depending on the current search criterion.

The following functions use the stimulus value of the active marker to define the sweep range:

- **Center = Marker** sets the center of the sweep range equal to the marker value.
- **Start = Marker** sets the beginning of the sweep range equal to the marker value.
- **Stop = Marker** sets the end of the sweep range equal to the marker value.

- **Span = Marker** sets the span of the sweep range equal to the active delta marker value.

The following functions use the response value of the active marker to scale the y-axis of the diagram:

- **Ref. Value = Marker** sets the reference value equal to the marker value.
- **Max = Marker** sets the upper edge of the diagram equal to the marker value.
- **Min = Marker** sets the lower edge of the diagram equal to the marker value.
- **Zero Delay at Marker** corrects the measurement result by adding or subtracting a constant group delay.

Center = Marker

Sets the **center** of the sweep range equal to the stimulus value of the active marker, leaving the span unchanged. The active marker appears in the center of the diagram.

Remote control: `CALCulate<Chn>:MARKer<Mk>:FUNCTION:CENTer`

Start = Marker

Sets the beginning (**start**) of the sweep range equal to the stimulus value of the active marker, leaving the end (stop) value unchanged. The active marker appears at the left edge of the diagram.

Remote control: `CALCulate<Chn>:MARKer<Mk>:FUNCTION:START`

Stop = Marker

Sets the end (**stop**) of the sweep range equal to the stimulus value of the active marker, leaving the beginning (start) unchanged. The active marker appears at the right edge of the diagram.

Remote control: `CALCulate<Chn>:MARKer<Mk>:FUNCTION:STOP`

Span = Marker

Sets the **span** of the sweep range equal to the absolute value of the first coordinate of the active delta marker, i.e. to the difference between the delta marker and the reference marker positions. The function is available only if the active marker is in **Delta Mode**. The reference marker appears at the right, the delta marker at the left edge of the diagram or vice versa, depending on which of the two markers has the smaller stimulus value.

Ref. Value = Marker

Sets the **reference value** equal to the response value of the active marker, leaving the values of the vertical divisions (**Scale Div.**) unchanged.

Max = Marker

Sets the upper edge of the diagram equal to the response value of the active marker, leaving its lower edge unchanged. The vertical divisions ([Scale Div.](#)) are adjusted accordingly.

Min = Marker

Sets the lower edge of the diagram equal to the response value of the active marker, leaving its upper edge unchanged. The vertical divisions ([Scale Div.](#)) are adjusted accordingly.

Zero Delay at Marker

Corrects the measurement result by adding or subtracting a constant group delay. This function must be applied to a trace which is displayed in [group delay](#) format. The trace is shifted in vertical direction so that the delay at the marker position vanishes.

The delay represents the propagation time of the wave across the DUT, so this operation corresponds to a electrical length compensation, i.e. to a shift of the reference plane by adding to or subtracting from the test port a simulated lossless transmission line of variable length. The correction must be carried out on the *Delay* trace but has an impact on all trace formats.

A standard application of *Zero Delay at Marker* is correction of the constant delay caused by the interconnecting cables between the analyzer test ports and the DUT (line stretch).



The Zero Delay at Marker function modifies the [Offset](#) parameters and therefore influences the entire channel.

Lines

Trace - Lines

The commands in the *Lines* submenu define limits for the measurement results, visualize them in the diagrams and activate/deactivate the limit check. The analyzer provides upper, lower, and ripple limits. Besides the menu provides a horizontal line for each trace.



Limit Lines


A limit line is a set of data to specify the allowed range for some or all points of a trace. Typically, limit lines are used to check whether a DUT conforms to the rated specifications (conformance testing).

- The *upper* limit line defines the maximum value for the trace points.
- The *lower* limit line defines the minimum value for the trace points.
- The *ripple* limit defines the maximum difference between the largest and the smallest response value of the trace.

A limit check consists of comparing the measurement results to the limit lines and display a pass/fail indication. An acoustic warning and a TTL signal at the *USER CONTROL* port can be generated in addition if a limit is exceeded.

Upper and lower limit lines are both defined as a combination of segments with a linear dependence

between the measured quantity and the sweep variable (stimulus variable). Similar to this segmentation, ripple limits may be defined in several ranges. The limit lines can be stored to a file and recalled. Data or memory traces can be used to define the segments of an upper or lower limit line. Moreover it is possible to modify the upper and lower limit lines globally by adding an offset to the stimulus or response values.

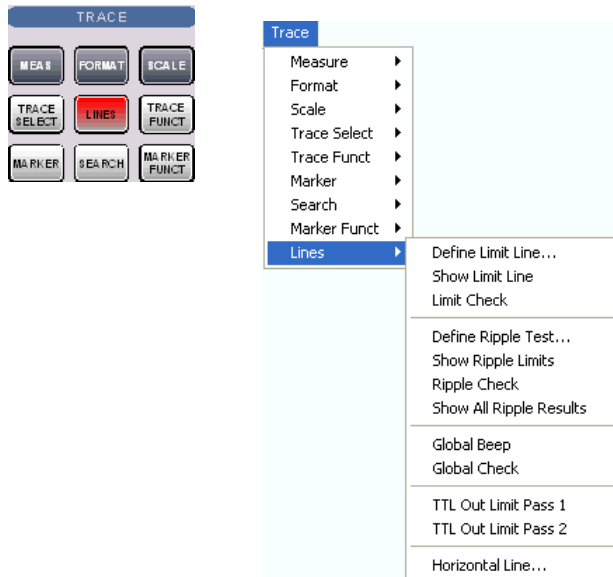

- [Define Limit Line](#) opens a dialog to define, save or recall limit lines.
- [Show Limit Line](#) displays or hides the limit line associated to the active trace.
- [Limit Check](#) activates or deactivates the limit check.
- The commands in the second section of the submenu configure the [ripple check](#).
- [Global Beep](#) activates or deactivates the acoustic signal indicating a limit or ripple limit excess.
- [Global Check](#) activates a global (composite) limit and ripple limit check on all traces in the active setup.
- [TTL Out Pass 1/2](#) activates or deactivates a TTL output signal at the *USER CONTROL* connector indicating whether the trace was passed or failed.
- [Horizontal Line...](#) displays or hides the horizontal line of the active trace and changes its position.

Limit lines are available for all Cartesian diagram types ([Trace – Format](#)). For polar diagrams, the functions of the *Lines* submenu except the *Global Check* are grayed. The limit lines are hidden and the limit check (except the global check and the global ripple check) is disabled when a Cartesian trace format is replaced by a polar diagram.

Define Limit Line


Opens a dialog to define the limit line for the active trace on a segment-by-segment basis. In each segment the limit line is defined as a straight line connecting two points.



Creating limit lines with minimum effort

Choose one of the following methods to efficiently create and handle limit lines:

- To define a limit line with only a few segments, use *Add Segment* and edit each segment in the segment table individually.
- Use the [multiselection](#) feature to edit several limit line segments at the same time.
- Select a data or memory trace as a limit line (*Import Trace*) or import a trace stored in a file (*Import File*).
- Save your limit lines to a file so you can re-use or modify them later sessions (*Save Limit Line*, *Recall Limit Line*).

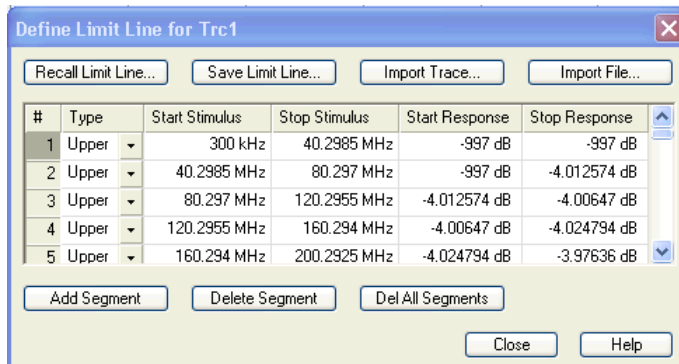

The *Define Limit Line* dialog contains a table to edit the individual segments of the limit line; see below. The active trace is indicated in the title bar of the dialog. The three buttons below the table extend or shorten the segment list.

- *Add Segment* adds a new segment to the list. The new segment is a copy of the previously active segment and inserted after that segment. The current segment numbers are adapted. The analyzer places no restriction on the number of segments in a limit line.
- *Del. Sel. Segment* removes the selected segment from the list.
- *Del All Segments* clears the entire segment list so it is possible to define or load a new limit line.

The buttons to the right of the table are used to import and export limit line data.

- *Recall Limit Line...* calls up an [Open File](#) dialog to load a limit line from a limit line file. Limit line files are ASCII files with the default extension *.limit and a special [file format](#).
- *Save Limit Line...* calls up a [Save As...](#) dialog to store the current limit line configuration to a limit line file. Limit line files are ASCII files with the default extension *.limit and a special [file format](#).
- **Import Trace**
opens a box to select a trace that can be used to define a limit line.



The box contains all data or memory traces of the active channel. As soon as a trace is selected, the [Properties of Imported Segments](#) dialog with further global import options is opened.

- **Import File**
Calls up a standard *Import File* dialog to load a limit line from a trace file. The limit line import is analogous to the [import of traces](#). Trace files are ASCII files with selectable [file format](#). After the

trace file is selected, the *Properties of Imported Segments* dialog with further global import options is opened.

Imported traces are polygonal curves with n points and $n - 1$ segments. The number of points n is set via *Channel – Sweep – Number of Points*. The $n - 1$ segments are appended to the current segment table for further editing. Existing limit line segments are not overwritten.



To import a limit line file (*.limit) you can also use the Windows Explorer and simply double-click the file or drag and drop the file into the NWA application. You have to switch on the limit check separately. Use the [paste marker list](#) for convenient entry of *Start* and *Stop* values.



Columns in the segment table

The table contains an automatically assigned current number for each segment plus the following editable columns:


- **Type** indicates whether the segment belongs to an Upper or a Lower limit line, or if the limit check at the segment is switched Off. Switching off the limit check does not delete the segment but changes its screen color.
- **Start Stimulus** is the stimulus (x-axis) value of the first point of the segment.
- **Stop Stimulus** is the stimulus (x-axis) value of the last point of the segment.
- **Start Response** is the response (y-axis) value of the first point of the segment.
- **Stop Response** is the response (y-axis) value of the last point of the segment.

The limit line segment is calculated as a straight line connecting the two points (<Start Stimulus>, <Start Response>) and (<Stop Stimulus>, <Stop Response>); see [Rules for Limit Line Definition](#).

Remote control: `CALCulate<Chn>:LIMit:CONTRol[:DATA]`
`CALCulate<Chn>:LIMit:DATA`
`CALCulate<Chn>:LIMit:SEGment<Seg>...`
`CALCulate<Chn>:LIMit:UPPer...`
`CALCulate<Chn>:LIMit:LOWer...`
`CALCulate<Chn>:LIMit:DElete:ALL`
`MMEMemory:STORe:LIMit`
`MMEMemory:LOAD:LIMit`

Multi-Selection of Limit Line Segments

In the *Define Limit Line* dialog it is possible to edit several limit line segments at the same time. Selection of one or more segments (use the left mouse key and the Shift key of an external keyboard) and a right-click on the dark grey Seg. area opens a context menu:

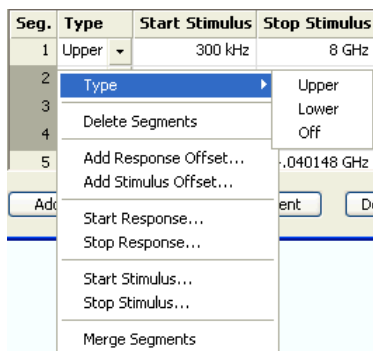

The context menu provides the following functions:

- **Modification of all entries in the [segment table](#):** Type, start and stop values for the stimulus and response variable.
- **Definition of an offset for response and stimulus values** in analogy to the [Properties of Imported Segments](#) dialog.
- **Delete the selected segments.**
- **Merge the selected segments to a single new segment.** The start and stop values of the new segment are given by the start values of the first selected segment and the stop value of the last selected segment. The type is taken from the first selected segment. The new segment replaces the selected segments.


Remote control: `CALCulate<Chn>:LIMit:UPPer...`
`CALCulate<Chn>:LIMit:LOWer...`

Rules for Limit Line Definition

The analyzer places very few restrictions on the definition of limit line segments. The following rules ensure a maximum of flexibility:

- Segments do not have to be sorted in ascending or descending order (e.g. the Start Stimulus value of segment no. n doesn't have to be smaller than the Start Stimulus value of segment no. n+1).
- Overlapping segments are allowed. The limit check in the overlapping area is related to the tighter limit (the pass test involves a logical AND operation).
- Gaps between segments are allowed and equivalent to switching off an intermediate limit line segment.
- Limit lines can be partially or entirely outside the sweep range, however, the limits are only checked at the measurement points.


The following figure shows a limit line consisting of 3 upper and 2 lower limit line segments. To pass the limit check, the trace must be confined to the shaded area.

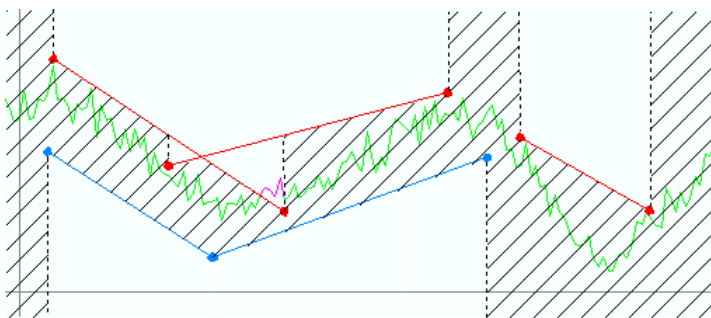

As a consequence of the limit line rules, the limit check will always pass a DUT if no limit lines are defined.

File Import Settings

The Properties of Imported Segments dialog appears before a trace is imported into the [Define Limit Line](#) dialog.

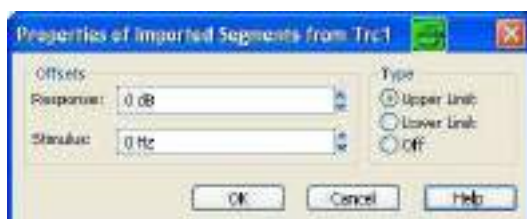

The dialog assigns common properties to all limit line segments generated by the imported trace.

- *Offsets* contains two input fields to define constant offset values for all imported segments. The Response offset shifts all segments in vertical direction, the Stimulus offset shifts them in horizontal direction. The offsets are added to the start and stop values of all segments.
- *Type* defines whether the imported segments belong to the Upper or Lower limit line. A third option is to import the segments but disable the limit check (Off).

Remote control:

```

CALCulate<Chn>:LIMit:LOWer:FEED
<stimulus_offset>,<response_offset>[,<trace_name>]
CALCulate<Chn>:LIMit:UPPer:FEED
<stimulus_offset>,<response_offset>[,<trace_name>]
MMEMory:LOAD:LIMit
  
```

File Format for Limit Lines

The analyzer uses a simple ASCII format to [export limit line](#) data. By default, the limit line file has the extension *.limit and is stored in the directory shown in the Export Limit Line and Import Limit Line dialogs. The file starts with a preamble containing the channel and trace name and the header of the segment list. The following lines contain the entries of all editable columns of the list.



Example of a limit line file

The limit line:

Seg.	Type	Start Stimulus	Stop Stimulus	Start Response	Stop Response
1	Upper	1 GHz	3 GHz	2 dB	2 dB
2	Lower	3 GHz	8 GHz	3 dB	4 dB
3	Off	300 kHz	1 GHz	1 dB	1 dB

is described by the limit line file:


[illegible]

Remote control: `MMEMory:LOAD:LIMit "Trc_name","file_name"`
`MMEMory:STORe:LIMit "Trc_name","file_name"`

Show Limit Line

Shows or hides the limit line associated with the active trace in a Cartesian diagram area. A checkmark appears next to the menu item when the limit line is shown.

In the diagram, upper and lower limit lines can be displayed with different colors. Limit line segments with disabled limit check (see [Define Limit Line](#)) can also be colored differently. The limit line colors are defined in the [Define User Color Scheme](#) dialog (Display – Display Config. – Color Scheme...).

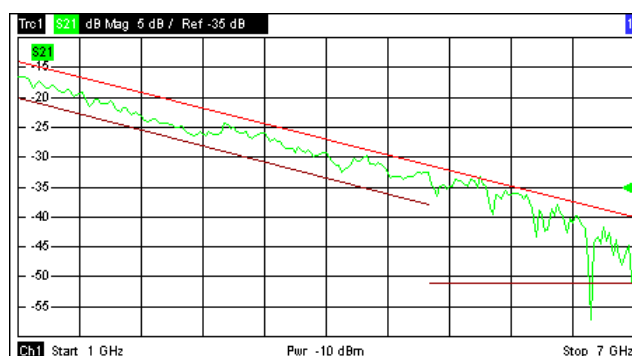

NOTE Display of the limit line and limit check are independent of each other: Hiding the limit line does not switch off the limit check.

Remote control: `CALCulate<Chn>:LIMit:DISPlay[:STATe]` ON | OFF

Limit Check

Switches the limit check of the active trace on or off. A checkmark appears next to the menu item when the limit check is enabled.

When the limit check is switched on, a PASS or FAIL message is displayed in the center of the diagram. If the limit check fails at a measurement point, the two trace segments to the left and right of the point can change their color. The Limit Fail Trace color is defined in the [Define User](#)

Color Scheme dialog (Display – Display Config. – Color Scheme...). An acoustic signal (**Global Beep**) and a **TTL signal** indicating pass or fail can be generated in addition.




Limit check and display of the limit lines are independent of each other: With disabled limit check, the limit line can still be displayed.

If no limit lines are defined for the active trace, the limit check can be switched on but will always PASS the trace.

Limits are checked at the actual measurement points, whereas a limit failure is indicated for the trace segments on both sides of a failed point. A small number of points causes wide trace segments so that the out-of tolerance regions can appear wider as they are.

Markers show interpolated values. As a consequence, a trace segment can be failed, whereas a marker placed on the segment may show a response value within the allowed range. This is shown in the example below, with an upper limit line at 26 dB, and a marker response value of 25.968 dB. The small circles correspond to the sweep points; the orange part of the trace is failed.

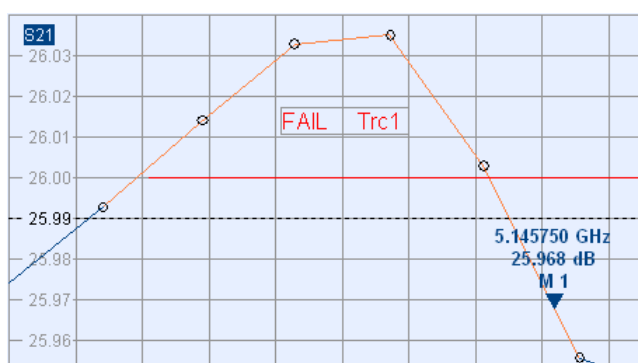


Remote control: `CALCulate<Chn>:LIMit:STATe ON | OFF`
`CALCulate<Chn>:LIMit:LOWer:STATe ON | OFF`
`CALCulate<Chn>:LIMit:UPPer:STATe ON | OFF`
`CALCulate<Chn>:LIMit:FAIL?`

Ripple Test

The commands in the second section of the *Lines* submenu define the ripple test. A ripple test is a special type of limit test where the maximum **difference** between the largest and the smallest response value of

the trace must not exceed the specified limit. This test is suitable e.g. to check whether the passband ripple of a filter is within acceptable limits, irrespective of the actual transmitted power in the passband. See also background information for [Limit Lines](#).

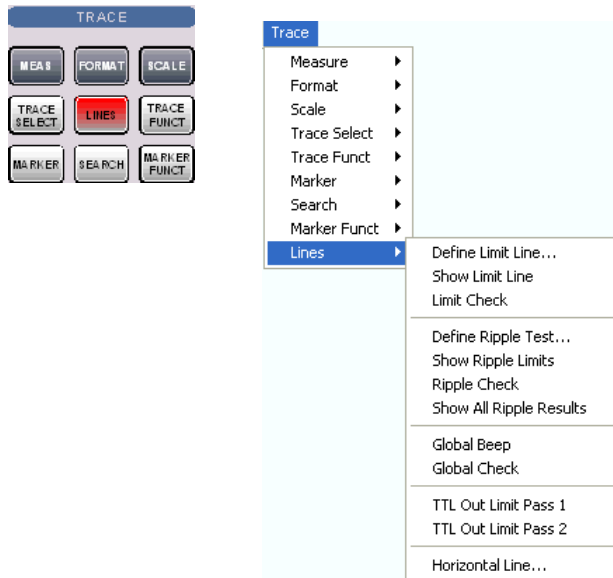

- [Define Ripple Test...](#) opens a dialog to define, save or recall ripple limits.
- [Show Ripple Limits](#) displays or hides the ripple limit line associated to the active trace.
- [Ripple Check](#) activates or deactivates the ripple limit check.
- [Show All Ripple Results](#) shows or hides the info field for all traces in the active setup, irrespective of the active trace.
- [Global Beep](#) activates or deactivates the acoustic signal indicating a limit or ripple limit excess.
- [Global Check](#) activates a global (composite) limit and ripple limit check on all traces in the active setup.
- [TTL Out Pass 1/2](#) activates or deactivates a TTL output signal at the *USER CONTROL* connector indicating whether the trace was passed or failed.
- [Horizontal Line...](#) displays or hides the horizontal line of the active trace and changes its position.

Ripple limit lines are available for all Cartesian diagram types ([Trace – Format](#)). For polar diagrams, the functions of the ripple check (except the *Global Check*) are grayed. The limit lines are hidden and the ripple limit check (except the global check) is disabled when a Cartesian trace format is replaced by a polar diagram.

Define Ripple Test...


Opens a dialog to define the ripple limits for the active trace on a range-by-range basis. A separate ripple limit can be assigned to each range.



Defining ripple limits with minimum effort

Choose one of the following methods to efficiently create and handle ripple limit ranges:

- To configure a limit test with only a few ranges, use *Add Range* and edit each range in the table individually.
- Use the *Align All Ranges* button to create non-overlapping, contiguous ranges of equal width.
- Use the [multiselection](#) feature to edit several ranges at the same time.
- Save your ripple ranges to a file so you can re-use or modify them in later sessions (*Save Ripple Limit...*, *Recall Ripple Limit...*).

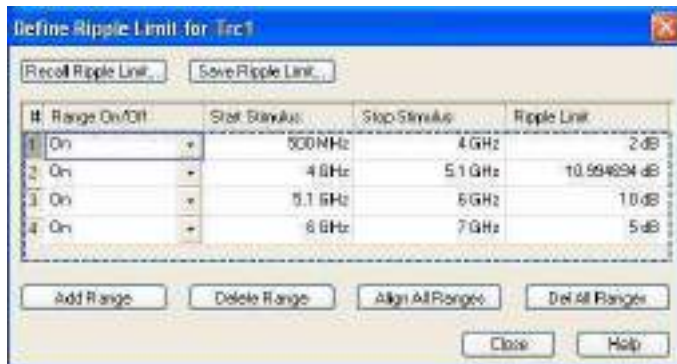

The *Define Ripple Limit* dialog contains a table to edit the individual ripple check ranges; see below. The active trace is indicated in the title bar of the dialog. The buttons below the table extend, shorten, or re-order the range list.

- *Add Range* adds a new range to the list. The new range is inserted after the previously selected range. The current range numbers are adapted; the start and stop stimulus values are set so that an overlap is avoided. Moreover, the ripple limit is estimated according to the measured ripple of the trace in the created range. The analyzer places no restriction on the number of ranges assigned to each trace.
- *Del. Range* removes the selected range from the list.
- *Align All Ranges* subdivides the entire sweep range into contiguous ripple limit ranges of equal width. The ripple limits are estimated according to the measured ripple of the trace in the created ranges.
- *Del All Ranges* clears the entire range list so it is possible to define or load a new ripple limit line.

The buttons to the right of the table are used to import and export limit line data.

- *Recall Ripple Limit...* calls up an [Open File](#) dialog to load a ripple limit line from a file. Ripple limit files are ASCII files with the default extension *.ripple and a special [file format](#).
- *Save Ripple Limit...* calls up a [Save As...](#) dialog to store the current ripple limit configuration to a ripple limit file. Ripple limit files are ASCII files with the default extension *.ripple and a special [file format](#).



To import a ripple limit file (*.ripple) you can also use the Windows Explorer and simply double-click the file or drag and drop the file into the NWA application. You have to switch on the limit check separately. Use the [paste marker list](#) for convenient entry of *Start* and *Stop* values.



Columns in the range table

The table contains an automatically assigned current number for each range plus the following editable columns:

- *Range On/Off* indicates whether the ripple limit check in the range is enabled (*On*) or *Off*.

Switching off the ripple limit check does not delete the range but hides the entry in the info field.


- *Start Stimulus* is the smallest stimulus (x-axis) value of the range.
- *Stop Stimulus* is the largest stimulus (x-axis) value of the range.
- *Ripple Limit* is the maximum allowed difference between the largest and the smallest trace value in the range.

The ripple limit range is displayed as two parallel, horizontal lines in the diagram. *Stop Stimulus – Start Stimulus* is the length of both lines; *Ripple Limit* is their distance; see [Rules for Limit Line Definition](#).

Remote control: `CALCulate<Chn>:RIPple:CONTrol:DOMain`
`CALCulate<Chn>:RIPple:DATA`
`CALCulate<Chn>:RIPple:SEGment<Seg>...`
`CALCulate<Chn>:RIPple:DELeTe:ALL`
`MMEMory:STORe:RIPple`
`MMEMory:LOAD:RIPple`

Multi-Selection of Ripple Limit Ranges

In the [Define Ripple Limit](#) dialog it is possible to edit several limit ripple ranges at the same time. Selection of one or more ranges (use the left mouse key and the *Shift* key of an external keyboard) and a right-click on the dark grey Seg. area opens a context menu:

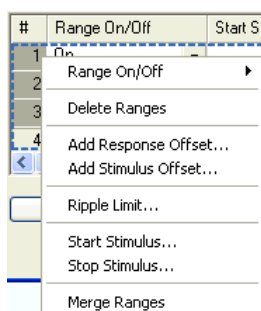

The context menu provides the following functions:

- Modification of all entries in the [range table](#): Range On/Off, stimulus start and stop values, ripple limit.
- Definition of an offset for response and stimulus values in analogy to the [Properties of Imported Ranges](#) dialog.
- *Delete* the selected ranges.
- *Merge* the selected ranges to a single *new range*. The start and stop values of the new range are given by the start values of the first selected range and the stop value of the last selected range. The first range also provides the ripple limit and the information whether the merged range is on or off. The new, merged range replaces the selected ranges.


Remote control: `CALCulate<Chn>:RIPple:SEGment<Seg>...`

Rules for Ripple Limit Definition

The analyzer places very few restrictions on the definition of ripple limit ranges. The following rules ensure a maximum of flexibility:

- Ranges do not have to be sorted in ascending or descending order (e.g. the *Start Stimulus* value of range no. n doesn't have to be smaller than the *Start Stimulus* value of range no. n+1).
- Overlapping ranges are allowed. The limit check in the overlapping area is related to the tighter limit (the pass test involves a logical AND operation).
- Gaps between ranges are allowed and equivalent to switching off an intermediate ripple limit range.
- Ripple limit ranges can be partially or entirely outside the sweep range, however, the limits are only checked at the measurement points.

The following figure shows a ripple limit test involving 3 ranges.

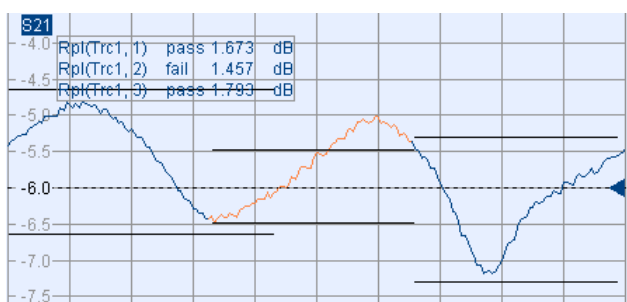

As a consequence of the limit line rules, the limit check will always pass a DUT if no limit lines are defined.

File Format for Ripple Limits

The analyzer uses a simple ASCII format to [export ripple limit](#) data. By default, the ripple limit file has the extension *.ripple and is stored in the directory shown in the *Save Ripple Limit* and *Recall Ripple Limit* dialogs. The file starts with a preamble containing the channel and trace name and the header of the range list. The following lines contain the entries of all editable columns of the list.



Example of a ripple limit file

The ripple limit list:

#	Range On/Off	Start Stimulus	Stop Stimulus	Ripple Limit
1	On	500 MHz	2 GHz	2 dB
2	On	1.65 GHz	2.8 GHz	1 dB
3	On	2.8 GHz	3.95 GHz	2 dB

is described by the ripple limit file:

```
# version 1.00
#
# channel 1
# trace 1
bo:Range (on/off;Start Stimulus[MHz];Stop Stimulus[MHz];Ripple Limit[dB];
true;1.000000000000E+002;1.000000000000E+003;2.000000000000E+000;
true;1.650000000000E+003;2.800000000000E+003;3.000000000000E+000;
true;2.800000000000E+003;3.950000000000E+003;2.000000000000E+000;
```

Remote control: `MMEMory:LOAD:RIPPlE "Trc_name","file_name"`
`MMEMory:STORe:RIPPlE "Trc_name","file_name"`

Show Ripple Limits

Shows or hides the ripple limit lines associated with the active trace in a Cartesian diagram area. A checkmark appears next to the menu item when the limit line is shown.

The vertical positions of the ripple lines are re-calculated after each sweep; only their stimulus range and distance (the ripple limit) is fixed. The limit line colors are defined in the [Define User Color Scheme](#) dialog (*Display – Display Config. – Color Scheme...*).




Display of the ripple limits and limit check are independent of each other: Hiding the limits does not switch off the limit check.

Remote control: `CALCulate<Chn>:RIPPlE:DISPlay[:STATe] ON | OFF`

Ripple Check

Switches the ripple limit check of the active trace on or off. A checkmark appears next to the menu item when the limit check is enabled.

When the limit check is switched on, an info field shows the pass/fail information and the measured ripple in each ripple limit range, and a *PASS* or *FAIL* message for the entire active trace is displayed in the center of the diagram. If the limit check fails in a particular ripple line range, the trace within the range can change its color. The *Limit Fail Trace* color is defined in the [Define User Color Scheme](#) dialog (*Display – Display Config. – Color Scheme...*). An acoustic signal ([Global Beep](#)) and a [TTL signal](#) indicating pass or fail can be generated in addition.

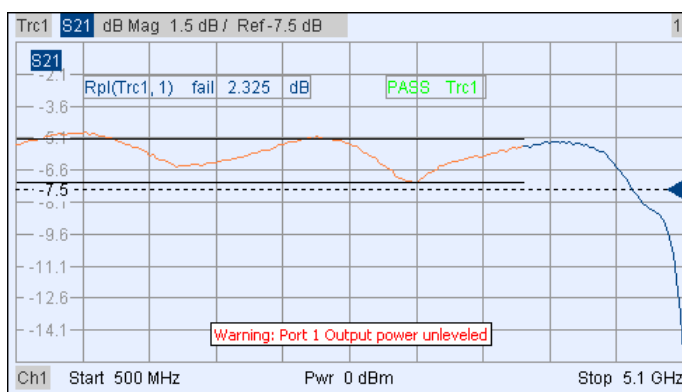

*Ripple limit check and display of the limit lines are independent of each other: With disabled limit check, the limit line can still be displayed.
 If no limit lines are defined for the active trace, the limit check can be switched on but will always PASS the trace.*

Remote control: `CALCulate<Chn>:RIPPlE:STATe ON | OFF`
`CALCulate<Chn>:RIPPlE:FAIL?`
`CALCulate<Chn>:RIPPlE:SEGment<Seg>:STATe ON | OFF`

CALCulate<Chn>:RIPPlE:SEGment<Seg>:RESult?

Show All Ripple Results

Shows or hides the info field for all traces in the active setup, irrespective of the active trace. If *Show Result All Traces* is disabled (and the ripple check is on), the info field covers the active trace only.

Rpl(Trc1, 1)	fail	2.343	dB
Rpl(Trc1, 2)	fail	9.963	dB
Rpl(Trc2, 1)	pass	10.426	dB
Rpl(Trc2, 2)	pass	0.000	dB

Remote control: No direct equivalent (display configuration)


Global Beep

Activates or deactivates the fail beep. The fail beep is a low-tone acoustic signal that is generated each time the analyzer detects an exceeded limit. No fail beep can be generated if the limit check is switched off. A checkmark appears next to the menu item when the fail beep is enabled.

Remote control: CALCulate<Chn>:RIPPlE:SOUNd:STATe ON | OFF

Global Check

Activates or deactivates the global limit check including upper/lower limits and ripple limits. The global limit check is a composite limit check over all traces of the current setup. The result of the global check appears in a popup box whenever *Global Limit Check* is pressed.

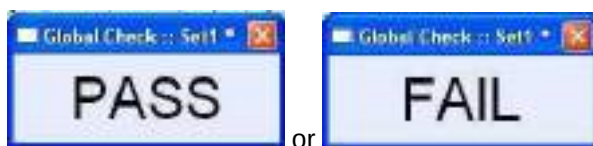

- *PASS* represents pass for all traces with enabled limit check. A trace without limit lines or with disabled individual limit check always passes the global check.
- *FAIL* means that the limit check for one or more traces failed.

Remote control: CALCulate<Chn>:CLIMits:FAIL?

TTL Out Pass 1/2

Assigns the active trace to the low-voltage (3.3 V) TTL output signals at the *USER CONTROL* connector. To select *TTL Out Pass 1 / 2*, the limit check of the active trace must be switched on.

- If *TTL Out Pass 1* is selected and the active trace passes the limit check (including upper/lower limits and ripple limits), then the TTL signal is applied to pin 13 of the *USER CONTROL* connector.

- If *TTL Out Pass 2* is selected and the active trace passes the limit check (including upper/lower limits and ripple limits), then the TTL signal is applied to pin 14 of the *USER CONTROL* connector.

If the active trace exceeds the limits, then no TTL signal is generated. It is possible to activate both pass/fail signals for the same trace or assign several traces to a signal.



Extension: Monitoring several traces

If a channel contains several traces, it is possible to assign them one after another to each pass/fail signal. The procedure divides the traces of the channel into four groups that are either assigned to signal 1, to signal 2, to both signals, or to none of them.

If several traces with independent limit check are assigned to a pass/fail signal, then the TTL signal is generated only if all traces are within limits. It is switched off as soon as one trace exceeds the limits.



Application: Graduated limit check

The two pass/fail signals can be used to distinguish three quality levels of a DUT. The test is performed with a looser and a tighter set of limit lines that are assigned to two traces with identical channel and trace settings. The limit check for the two traces is monitored by means of the signals *TTL Out Pass 1 / TTL Out Pass 2*, respectively.

- If the DUT is passed in both limit checks, the quality is good.
- If the DUT is failed in the limit check with tighter limits, the quality is still sufficient.
- If the DUT is failed in both limit checks, the quality is poor.


Instead of using two traces, it is possible to consider two groups of traces that are assigned to *TTL Out Pass 1* and *TTL Out Pass 2*.

Remote control: `CALCulate<Chn>:LIMit:TTLout<nr>[:STATe] ON | OFF`

Horizontal Line

Shows or hides the horizontal line associated to the active trace in a Cartesian diagram area. A checkmark appears next to the menu item when the horizontal line is shown.

The horizontal line (or display line) is a red line which can be moved to particular trace points in order to retrieve the response values.

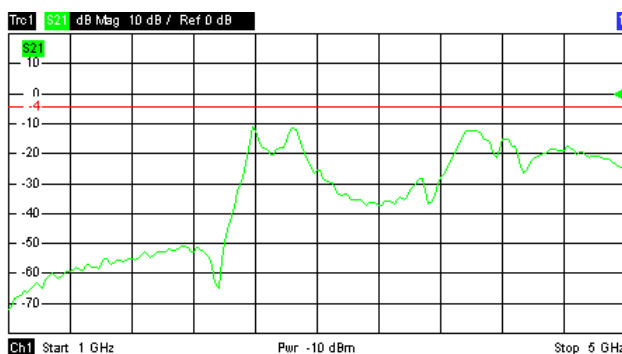

- Pressing *Horizontal Line* for a first time shows the line for the active trace and opens the numeric entry bar to define its position (response value). The (rounded) position is displayed near the left

edge of the screen.

- Pressing *Horizontal Line* for a second time hides the horizontal line for the active trace.



Use the analyzer's drag-and-drop functionality to move the horizontal line symbol to the desired position.

Remote control: `CALCulate<Chn>:DLINe:STATe ON | OFF`
`CALCulate<Chn>:DLINe`

Channel Menu

The *Channel* menu provides all channel settings and the functions to activate, modify and store different channels.




Channels

A channel contains hardware-related settings to specify how the network analyzer collects data. The channel settings can be divided into three main groups:

- Control of the measurement process (*Sweep, Trigger, Average*)
- Description of the test setup (*internal source power, IF filters and step attenuators*)
- Correction data (*Calibration, Offset*)

The channel settings complement the definitions of the *Trace* menu. Each trace is assigned to a channel, see [Traces, Channels and Diagram Areas](#). The channel settings apply to all traces assigned to the channel.

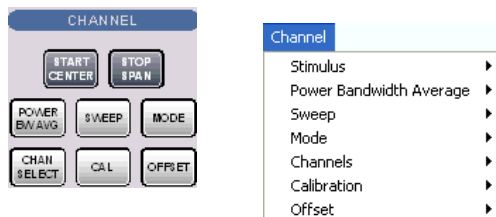


The *Channel* menu contains the following functions and submenus:

- [Stimulus](#) defines the sweep range, depending on the sweep type.
- [Power Bandwidth Average](#) defines the power of the internal signal source, sets the step attenuators and the IF bandwidths, and configures the sweep average.
- [Sweep](#) defines the scope of measurement, including the sweep type, the trigger conditions and the periodicity of the measurement.
- [Mode](#) opens the *Port Configuration* dialog to define the properties of the physical and logical (balanced) test ports.
- [Channel Select](#) provides functions to handle and activate channels.
- [Calibration](#) provides all functions that are necessary to perform a system error correction (calibration).
- [Offset](#) provides a selection of length offset parameters to shift the measurement plane.

Stimulus

The *Stimulus* submenu defines the sweep range in the current channel, depending on the sweep type.

- In Cartesian diagrams, the sweep range corresponds to the diagram width and defines the scaling of the x-axis.
- In polar diagrams and Smith charts the stimulus axis is lost but the marker functions easily provide the stimulus value of any measurement point.

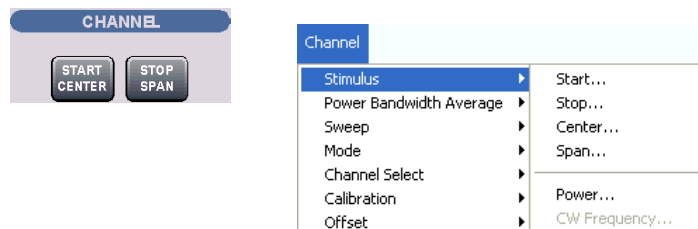

- *Start* is the lowest value of the sweep variable (e.g. the lowest frequency measured) and corresponds to the left edge of the Cartesian diagram.
- *Stop* is the highest value of the sweep variable (e.g. the highest frequency measured) and corresponds to the right edge of the Cartesian diagram.
- *Center* corresponds to the center of the Cartesian diagram, i.e. $(Start + Stop)/2$.
- *Span* corresponds to the diagram width, i.e. $(Stop - Start)$.
- *Power* defines the power of the internal signal source.
- *CW Frequency* sets the fixed frequency for the sweep types *Power*, *Time* and *CW Mode*.
- *START CENTER* opens the input field for the *Start* frequency, if the range is currently defined by *Start* and *Stop*. It opens the input field for the *Center* frequency, if the range is currently defined by *Center* and *Span*.
- *STOP SPAN* opens the input field for the *Stop* frequency, if the range is currently defined by *Start* and *Stop*. It opens the input field for the *Span*, if the range is currently defined by *Center* and *Span*.




The [Marker Functions](#) provide a convenient alternative to the manual entry of the sweep range parameters. Use the [paste marker list](#) for convenient entry of *Start* and *Stop* values.

Some of the *Stimulus* parameters and the *STOP SPAN* key are not provided for all sweep types; see [Stimulus and Sweep Types](#).

Equivalence of settings:

For a frequency sweep the *Start* and *Stop* frequencies or the *Center* frequency and *Span* are alternative settings:

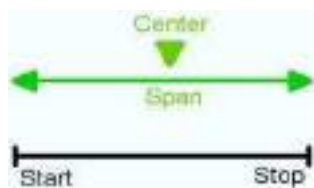

Remote

[SENSe<Ch>:] FREQuency:START

control: `[SENSe<Ch>:]FREQuency:STOP`
 `[SENSe<Ch>:]FREQuency:CENTer`
 `[SENSe<Ch>:]FREQuency:SPAN`
 `SYSTem:FREQuency?` (query frequency range of the network analyzer)

Stimulus and Sweep Types

The function of the *Start*, *Stop*, *Center* and *Span* softkeys depends on the sweep type:

Sweep type	Start [dimension]	Stop [dimension]	Center [dimension]	Span [dimension]
Equivalent hotkey			 (press twice)	 (press twice)
Lin. Frequency Log. Frequency Segmented Frequency	Start frequency [Hz]	Stop frequency [Hz]	Center frequency [Hz]	Frequency span [Hz]
Power	Start power [dBm]	Stop power [dBm]	–	–
Time	–	Total sweep time [s]	–	–
CW Mode	–	Number of points [1]	–	–

The ranges of numerical values must be compatible with the instrument model.



If a frequency sweep is selected, then the *START CENTER* and *STOP SPAN* are both toggle keys. In *Time* or *CW Mode* sweep mode the *Start*, *Center* and *Stop* softkeys are inactive, still you can use the *START CENTER* hardkey to select the fixed CW frequency.



The conditions for the stimulus range depend on the sweep type:

- **Lin. Frequency/Log. Frequency/Segmented Frequency**

The frequency range depends on the instrument type; see [SCPI command reference](#). The *Stop* frequency must be greater than the *Start* frequency; the *Span* must be ≥ 1 Hz. If a *Stop* frequency smaller than the current *Start* frequency is set, then the *Start* frequency is adjusted and vice versa.

A sweep must contain at least two different sweep points.

- **Power**

Start and *Stop* power are entered in absolute units (dBm) and over a wide range. The *Center* and *Span* softkeys are not active.

Start and *Stop* power must be different, the *Stop* power must be larger than the *Start* power. If a *Stop* power smaller than the *Start* power is set, then the *Start* power is adjusted automatically and vice versa.

The power corresponds to the actual output power at the test port that supplies the stimulus for the active channel or at the calibrated reference plane.

- **Time**

The *Stop* value represents the total sweep time. *Start* and the other parameters are not active as the sweep time is relative to the beginning of the sweep which starts immediately after the entry of the *Stop* value.

The sweep time is entered in seconds and must be positive; see also [Time](#) sweep.

- **CW Mode**

The *Stop* value represents the number of trigger events during the measurement. Each trigger event triggers one measurement point. *Start* and the other softkeys are not active as the first trigger event is the one immediately after the beginning of the sweep which starts after the entry of the *Stop* value.

The behavior is analogous to the *Time* sweep type.

- **Pulse Profile**

Start and *Stop* define the start and stop time in the diagram area relative to the trigger time. The stop time must be larger than the start time. *Center* and *Span* are not active.



The selected sweep range applies to all source and receive ports of the analyzer. The sweep range frequency is also used as the channel base frequency for frequency-converting measurements; see [Port Configuration](#).

CW Frequency

Opens the numeric entry bar to vary the fixed frequency for the sweep types [Power](#), [Time](#), [CW Mode](#), and [Pulse Profile](#) (*channel base frequency*). The CW frequency is also used as the channel base frequency for frequency-converting measurements; see [Port Configuration](#).

Channel Base CW Frequency:    




A frequency variation affects all source ports used in the active channel. Use the [Port Configuration](#) dialog to modify the output frequency ranges for the individual analyzer ports. If a specific port frequency is selected as a stimulus axis in the *Channel – Mode – Port Configuration – Stimulus* dialog, the actual port frequency (including possible frequency offsets) is displayed, however, a frequency variation still changes the channel base frequency.

Remote control: `SOURce<Ch>:POWer[:LEVel][:IMMediate][:AMPlitude]`

Remote control: `SOURce<Ch>:FREQuency<Pt>:CW|FIXed
[SENSe<Ch>:]FREQuency:CW|FIXed`

Power Bandwidth Average

The *Power Bandwidth Average* menu defines the power of the internal signal source, sets the step attenuators and the IF bandwidths, and configures the sweep average.

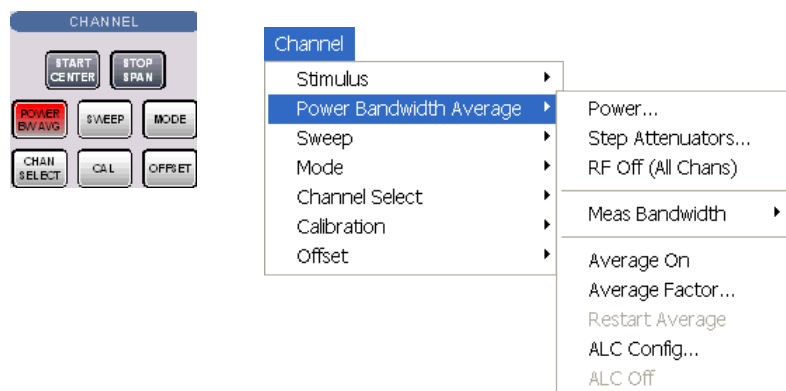

- **Power** defines the power of the internal signal source.
- **Step Attenuators** sets the attenuation for all received and generated waves.
- **Step Atten. b2** sets the attenuation for the received wave b2.
- **RF Off (All Chans)** switches the internal and external power sources off (if checked) or on.
- **Meas Bandwidth** selects the bandwidth of the IF measurement filter.
- **Average On** activates or de-activates the sweep average. With average on the measurement results are averaged over a selected number of consecutive sweeps (Average Factor).
- **Average Factor** defines the number of consecutive sweeps to be averaged.
- **Restart Average** starts a new average cycle, clearing all previous results and thus eliminating their effect on the new cycle. The new cycle is started as fast as possible; an ongoing sweep is terminated immediately.
- **ALC Config** opens a dialog that allows to configure the Automatic Level Control (ALC) for the current channel.
- **ALC Off** disables/enables ALC for the current channel

Remote control

(for RF Off, averaging and ALC Off):

```

DIAGnostic:SERVICE:RFPower
[SENSe<Ch>:]AVERage[:STATe] ON | OFF
[SENSe<Ch>:]AVERage:COUNT
[SENSe<Ch>:]AVERage:CLEAr
SOURce:POWer:ALC:CSTate ON | OFF
  
```

Power

Opens the numeric entry bar to vary the power of the internal signal source (*channel base power*).



The **Power** setting determines the output power at the test ports if a *Frequency Sweep*, *Time Sweep* or *CW Mode Sweep* is active; see background information below. It is unavailable if one of the following sweep types is active:

- A *Power Sweep*, where the source power is varied over a continuous range.
- A *Segmented Frequency* sweep with segment-specific power settings.



A power variation affects all source ports used in the active channel. Use the [Port Configuration](#) dialog to modify the output power ranges for the individual analyzer ports. If a specific port power is selected as a stimulus axis in the *Channel – Mode – Port Configuration – Stimulus* dialog, the actual port power (including possible power offsets) is displayed, however, a power variation still changes the channel base power.



Output power at the test ports

Power sets the output power at the test ports that supply the stimulus for the active channel. The channel power can be varied over a wide dynamic range; the range can be further increased by means of generator step attenuators. This leaves enough flexibility to include an attenuation or gain in the test setup.

The channel power can be modified by the following settings:


- Generator [step attenuators](#) decrease the output power by a definite factor a_{step} . a_{step} can be set individually for all test ports but should not change during a sweep. To ensure a sufficient dynamic range at the test ports, it is recommended to use [automatic](#) generator step attenuator setting.
- The [Source](#) section of the *Port Configuration* dialog provides a port-specific constant power offset (for arbitrary sweeps) and a port and frequency-dependent power slope factor (for frequency sweeps).
- A generator (source) [power calibration](#) generally modifies the channel power so that *Power* is equal to the power at the calibrated reference plane.

The [Port <port_no> Source Power](#) dialog gives an overview of all power settings.

Remote control: `SOURce<Ch>:POWer[:LEVel][:IMMediate][:AMPlitude]`

Step Attenuators (R&S ZVA, R&S ZVT20, and R&S ZVB Analyzers)

Opens a dialog to set the attenuation for the received and generated waves. The generator attenuation can be set automatically; see [Automatic generator attenuation](#) below. Step attenuators can also improve the measurement accuracy for special test scenarios; see ["Low Noise" generator attenuation mode](#).

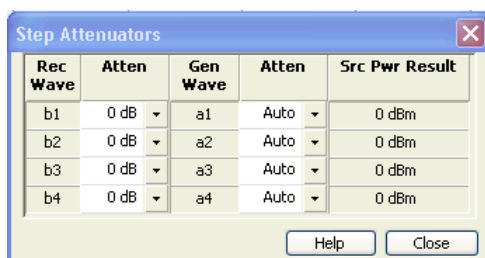

The Step Attenuators dialog contains the following columns:

- *Rec. Wave* lists the received waves b_1 to b_n . n is equal to the total number of test ports of the analyzer.
- *Attenuation* is used to enter the attenuation for each wave b_n .
- *Gen. Wave* lists the generated waves a_1 to a_n .
- *Attenuation* is used to enter the attenuation for each wave a_n . If *Auto* is selected, the analyzer automatically optimizes the generator attenuation according to the current channels settings. "Low

Noise" setting minimizes the broadband noise, especially at low signal levels and for analyzers with a large frequency range; see background information below.

- *Src Pwr Result* displays the source power according to the current channel and generator attenuator settings.

Attenuation factors can be entered only for ports where a receiver or generator step attenuator is installed.



Generator and receiver step attenuators

Receiver and generator step attenuators can be purchased as ZVA options. The following attenuators are available:

	Port 1	Port 2	Port 3	Port 4
ZVA8, generator	ZVA8-B21	ZVA8-B22	ZVA8-B23	ZVA8-B24
ZVA8, receiver	ZVA8-B31	ZVA8-B32	ZVA8-B33	ZVA8-B34
ZVA24, generator	ZVA24-B21	ZVA24-B22	ZVA24-B23	ZVA24-B24
ZVA24, receiver	ZVA24-B31	ZVA24-B32	ZVA24-B33	ZVA24-B34
ZVA40, generator	ZVA40-B21	ZVA40-B22	ZVA40-B23	ZVA40-B24
ZVA40, receiver	ZVA40-B31	ZVA40-B32	ZVA40-B33	ZVA40-B34
ZVA50, generator	ZVA50-B21	ZVA50-B22	ZVA50-B23	ZVA50-B24
ZVA50, receiver	ZVA50-B31	ZVA50-B32	ZVA50-B33	ZVA50-B34
ZVA67, generator	ZVA67-B21	ZVA67-B22	ZVA67-B23	ZVA67-B24
ZVA67, receiver	ZVA67-B31	ZVA67-B32	ZVA67-B33	ZVA67-B34

Refer to the data sheet for detailed ordering information and technical specifications.

Attenuation factors for the received waves and the generated waves serve different purposes:

- *Received wave factors* are used to adjust the received signal levels to the input level range of the analyzer in order to avoid damage to the instrument, e.g. if the DUT is a power amplifier. The range of attenuation values depends on the analyzer model.

Port-specific attenuation factors can be set in the [Receiver](#) section of the Port Configuration dialog.

- *Generated wave factors* are used to protect a sensitive DUT from excess input levels. The attenuation values can be set automatically. The range of values depends on the analyzer model.

Port-specific attenuation factors can be set in the [Source](#) section of the Port Configuration dialog.



Automatic generator attenuation

The aim of the automatic attenuator setting is to ensure that the analyzer can perform the entire sweep without switching the generator step attenuators. The output power p_{el} at each port depends on the following settings:

- The channel power p_{ch} (the [Power](#) set in the *Channel – Power Bandwidth Average* menu).
- The port-specific power offset p_b (for arbitrary sweeps) and the port and frequency-dependent power slope factor p_{slope} (for frequency sweeps) defined in the [Receiver](#) section of the *Port Configuration* dialog.
- A port and stimulus-dependent correction factor p_{corr} introduced by a generator (source) [power calibration](#).

- The port-specific generator step attenuator setting a_{step} .

If everything is expressed in dB units, the output power p_{el} at each port must be equal to the sum of the channel power and all port and stimulus-dependent correction factors:

$$p_{\text{el}} = p_{\text{ch}} + p_{\text{b}} + p_{\text{slope}} + p_{\text{corr}} + a_{\text{step}}$$

The automatic attenuator setting algorithm selects a_{step} such that the variation range for p_{el} is sufficient to account for the stimulus-dependent variations of p_{b} and p_{slope} , and p_{corr} . If this is not possible in a particular subrange of the sweep (e.g. because the sweep settings are such that an excess variation range for p_{el} or a negative attenuation factor a_{step} would be required) then the analyzer generates an error message.



"Low Noise" generator attenuation mode

In "Low Noise" mode, the automatic attenuator setting algorithm is modified in order to minimize the broadband noise in the generator signal. The modification can narrow the dynamic range that the generator covers without switching the attenuator. Use this mode if the following criteria apply:

- Your test setup contains a broadband power meter (that you use e.g. for a power calibration).
- Your generator levels are not significantly above the broadband noise level; see table below.
- Your analyzer supports a large frequency range (this applies to the high-frequency models, see table below).

The amount of broadband noise in the generator signal increases with the total bandwidth of the network analyzer. The following table gives an overview for the different R&S ZVA analyzer models.

R&S ZVA analyzer model	Typical broadband noise
R&S ZVA 8	–32 dBm
R&S ZVA 24	–25 dBm
R&S ZVA 40	–21 dBm (< 24 GHz) and –25 dBm (> 24 GHz)
R&S ZVA 50	–20 dBm (< 24 GHz) and –13 dBm (> 24 GHz)




The value selected by the automatic attenuator setting algorithm (in "Auto" or "Low Noise" mode) can be readout via the remote command `SOURce<Ch>:POWer<Pt>:ATTenuation:AUTO:VALue?`



A new system error correction is recommended whenever the step attenuator settings are changed. A change of the generator step attenuator settings may also occur in Auto mode; see above.

The position and function of the step attenuators is illustrated in the following figure. The analyzer measures both the attenuated generated waves and the attenuated waves received from the DUT.

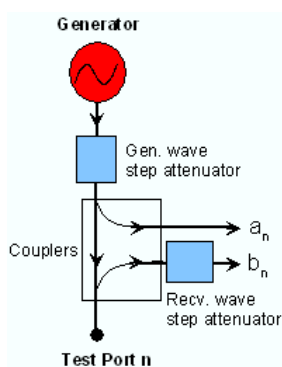

Remote control: `INPut<Pt>:ATTenuation`
`[SENSe<Ch>:]POWer:ATTenuation ARECeiver | BRECeiver | CRECeiver |`
`DRECeiver, <attenuation>`
`OUTPut<Pt>:ATTenuation`
`SOURce<Ch>:POWer<Pt>:ATTenuation`
`SOURce<Ch>:POWer<Pt>:ATTenuation:AUTO ON | OFF`
`SOURce<Ch>:POWer<Pt>:ATTenuation:MODE AUTO | LNOise | MANual`
`SOURce<Ch>:POWer<Pt>:ATTenuation:AUTO:VALue?`

Step Atten. b2 (R&S ZVA Analyzers)

Opens the numeric entry bar to set the attenuation for the received wave b2. This function is available only if a [receiver step attenuator](#) is installed at port 2.



The attenuation is used to adjust the received signal level at port 2 to the input level range of the analyzer in order to avoid damage to the instrument, e.g. if the DUT is a power amplifier. The range of values depends on the analyzer model.

Using a single step attenuation b2 corresponds to a standard test setup with 0 dB generator attenuation and attenuation of the (amplified) wave received at test port 2. The attenuation factors for all received and generated waves can be set via [Step Attenuators](#).

Remote control: `INPut<Pt>:ATTenuation`
`[SENSe<Ch>:]POWer:ATTenuation ARECeiver | BRECeiver | CRECeiver |`
`DRECeiver, <attenuation>`

RF Off

RF Off switches the internal and external power sources immediately off (if checked) or on. Switching off the RF power helps to prevent overheating of a connected DUT while no measurement results are taken. The exact behavior of *RF Off* is part of the system configuration; refer to the description of the [Power](#) tab.



After the RF power is switched on, the start of the measurement is delayed by approx. 1 s while the amplifier stages of the analyzer are allowed to settle. To avoid this delay, reduce the base channel power setting or turn off the drive ports in the [Port Configuration](#) dialog instead of using RF Off.




*Switching off the internal RF generator while an external generator is used can improve the measurement accuracy. *RF Off* also deactivates external generators, so you have to use the settings in the [Source](#) section of the *Port Configuration* dialog (with option R&S ZVA-K4).*

The RF sources must be switched on to perform a system error correction or a power calibration. In both cases, the analyzer checks whether any of the required source ports is switched off and displays a warning, if required.

Remote control: `OUTPut<Ch>[:STATe]`

Meas. Bandwidth

Sets the measurement bandwidth of the IF filter. *Meas Bandwidth* opens a submenu to select bandwidths between 10 Hz and 1 MHz:

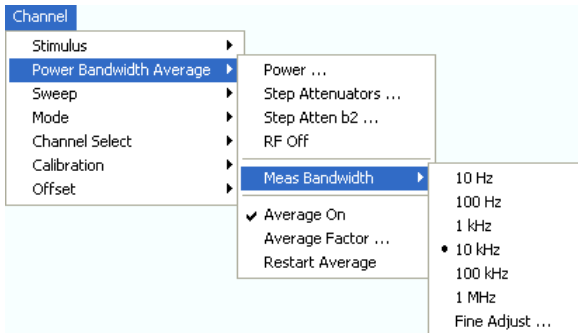

Fine Adjust... opens a dialog where you can modify the selected measurement bandwidth and the selectivity of the IF filter.



- The numeric entry field shows the last IF filter bandwidth selected. The arrow buttons increment and decrement the bandwidth in 1-2-5 steps for each decade. Entered values between the steps will be rounded up, values exceeding the maximum bandwidth rounded down.
- *Selectivity* selects between two types of IF filters: Filters with *Normal* selectivity and short settling time, and filters with *High* selectivity but larger settling time. This functionality is available on R&S ZVA and R&S ZVT network analyzers.
- If *Dynamic Bandwidth at Low Frequencies* is enabled, the analyzer reduces the IF bandwidths at receiver frequencies below 500 MHz by a frequency-dependent (dynamic) factor. This setting complements the automatic bandwidth reduction for frequency sweeps with small start frequencies; see [Bandwidth reduction at low frequencies](#) below.
The bandwidth reduction reduces the trace noise at small frequencies and improves the accuracy of the time domain transform.

The selected bandwidth and selectivity applies to all filters used in the current channel. This makes sense because the measurement speed is limited by the slowest filter in the channel. In *Segmented Frequency* sweeps, the bandwidth and selectivity can be set independently for each segment; see [Define Segments](#).



Optimizing the filter settings

A high selectivity and a small filter bandwidth both suppress the noise level around the measurement frequency and thus increase the dynamic range. On the other hand the time needed to acquire a single measurement point increases for small filter bandwidths and high selectivity. For small bandwidths, the filter settling time, which is inversely proportional to the bandwidth, is responsible for the predominant part of the measurement time.

The characteristics of the high selectivity filter makes it particularly suitable for isolating unexpected spurious responses or known mixer products.



Bandwidth reduction at low frequencies

To reduce the trace noise at small frequencies, the analyzer adjusts the IF bandwidths when its receiver frequency falls below a threshold value. A suitable bandwidth reduction also ensures accurate time domain transforms.

The bandwidth reduction depends on the dynamic bandwidth setting in the *Bandwidth Fine Adjust* dialog.

- If *Dynamic Bandwidth at Low Frequencies* is disabled ("static" correction), the bandwidth at frequencies below 25 MHz is limited by the values shown in the following table. At each sweep point, the analyzer uses the static limit or the *Meas Bandwidth* setting, whichever is lower.

Start frequencies f_{rec}	Static upper limit for <i>Meas Bandwidth</i>
$f_{\text{rec}} \geq 25 \text{ MHz}$	n/a (analyzer uses <i>Meas Bandwidth</i> setting)
$10 \text{ MHz} \leq f_{\text{rec}} < 25 \text{ MHz}$	1 MHz
$2 \text{ MHz} \leq f_{\text{rec}} < 10 \text{ MHz}$	100 kHz
$1 \text{ MHz} \leq f_{\text{rec}} < 2 \text{ MHz}$	1 kHz
$f_{\text{rec}} < 1 \text{ MHz}$	100 Hz

- Example:** The default sweep range of an R&S ZVA8 is 300 kHz to 8 GHz. After a preset, the analyzer replaces the default *Meas Bandwidth* of 10 kHz at the first sweep point (300 kHz) by 100 Hz. At frequencies of 2 MHz and above, the 10 kHz *Meas Bandwidth* setting applies.
- If *Dynamic Bandwidth at Low Frequencies* is enabled, the analyzer divides the *Meas Bandwidth* setting at each sweep point by the frequency-dependent correction factors listed below ("dynamic" correction). If the result is not equal to a selectable *Meas Bandwidth* value, the next lower *Meas Bandwidth* is used. The actual measurement bandwidth corresponds to the result of the static correction or to the dynamic value, whichever is lower.

Receiver frequencies f_{rec}	Dynamic correction factor for <i>Meas Bandwidth</i>
$f_{\text{rec}} > 500 \text{ MHz}$	1 (analyzer uses <i>Meas Bandwidth</i> setting)
$100 \text{ MHz} < f_{\text{rec}} \leq 500 \text{ MHz}$	10
$50 \text{ MHz} \leq f_{\text{rec}} \leq 100 \text{ MHz}$	50
$f_{\text{rec}} \leq 50 \text{ MHz}$	100

- Example 1:** The default sweep range of an R&S ZVA8 is 300 kHz to 8 GHz. The static upper limit for the bandwidth at the first sweep point (300 kHz) is 100 Hz. With a default *Meas Bandwidth* of 10 kHz, the dynamic correction at the first sweep point is equal to the static upper limit (10 kHz / 100 = 100 Hz).
If the *Meas Bandwidth* setting is reduced to 200 Hz, the dynamic correction replaces the bandwidth at the first sweep point by 200 Hz / 100 = 2 Hz (selectable *Meas Bandwidth* value). In the receiver frequency range between 50 MHz and 100 MHz, the dynamically corrected bandwidth is calculated as 200 Hz / 50 = 4 Hz, which is also replaced by the selectable value of 2 Hz. The dynamically corrected bandwidth at receiver frequencies between 100 MHz and 500 MHz is 20 Hz. At receiver frequencies of 500 MHz and above, the *Meas Bandwidth* setting of 200 Hz applies.
- Example 2:** An R&S ZVA8 is preset. A harmonic grid is calculated in order to obtain a lowpass time domain transform. This yields a start frequency of $f_{\text{start}} \approx 39.8 \text{ MHz}$. The static bandwidth correction does not affect the time domain transform, however, a dynamic correction can affect harmonic frequency points up to 500 MHz.



In general, the system error correction is no longer valid after a change of the IF filter bandwidth. The message Cal? appears in the trace list.

Remote control: `[SENSe<Ch>:]BANDwidth|BWIDth[:RESolution]`
`[SENSe<Ch>:]BANDwidth|BWIDth[:RESolution]:SElect`
`[SENSe<Ch>:]BANDwidth|BWIDth[:RESolution]:DREduction`

Average Factor

Opens the numeric entry bar to define the number of consecutive sweeps to be averaged.

Average Factor:

An average over several sweeps reduces the influence of random effects in the measurement and therefore minimizes the noise level. The effect increases with the average factor, however, obtaining an averaged result requires several sweeps and therefore increases the measurement time.



In contrast to the [sweep count](#) (for single sweep mode), averaging is always channel-specific. Both features are completely independent from each other. The average factor is also valid for calibration sweeps: The calculation of system correction data is based on the averaged trace.



Smoothing is an alternative method of compensating for random effects on the trace by averaging adjacent measurement points. Compared to the sweep average, smoothing does not significantly increase the measurement time but can eliminate narrow peaks and thus produce misleading results.

The sweep average is not frequency selective. To eliminate a spurious signal in the vicinity of the measurement frequency, alternative techniques (e.g. a smaller filter [bandwidth](#)) must be used.



Calculation of sweep average

The average trace is obtained as follows:

Let c be the Average Factor and assume that n sweeps have been measured since the start of the average cycle (start of the measurement or *Restart Average*). The following two situations are distinguished:

- $n < c$: At each sweep point, the average trace no. n is calculated from the average trace no. $n-1$ and the current trace no. n according to the following recurrence:

$$Avg(n) = \frac{n-1}{n} Avg(n-1) + \frac{1}{n} Curr(n) \quad (n = 1, \dots, c)$$

The average trace represents the arithmetic mean value over all n sweeps.

- $n > c$: At each sweep point, the average trace no. n is calculated from the average trace no. $n-c$ and the current trace no. n according to:

$$Avg(n) = \frac{c-1}{c} Avg(n-1) + \frac{1}{c} Curr(n) \quad (n > c)$$


The formulas hold for Average Factor $n = 1$ where the average trace becomes equal to the current trace.

Remote control: `[SENSe<Ch>:]AVERage[:STATe] ON | OFF`
`[SENSe<Ch>:]AVERage:COUNT`
`[SENSe<Ch>:]AVERage:COUNT:CURRent?` (query current sweep)

[SENSe<Ch>:] AVERage:CLEar

ALC Config

Enables and configures the Automatic Level Control (ALC) for the current channel. ALC keeps the level of the waves (source level) at a constant value, irrespective of the DUT's input impedance. The measurement speed is slightly reduced.

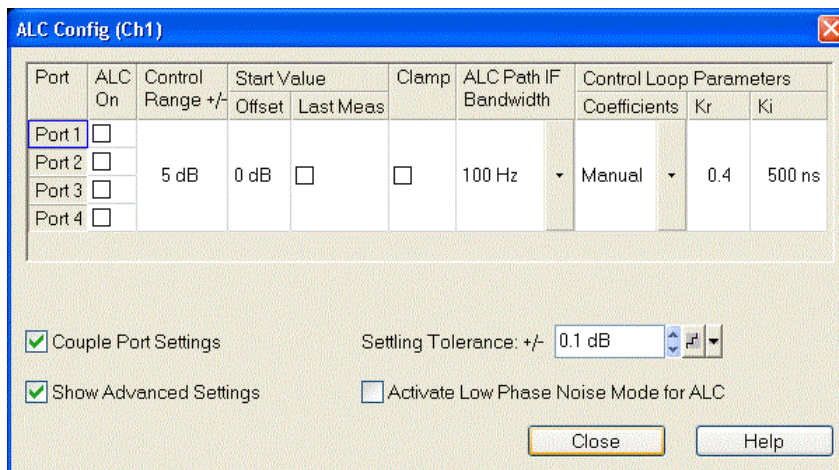

With *Show Advanced Settings* disabled only the following settings are visible:

- *Couple Port Settings* enforces identical ALC settings for the individual ports (except ALC On). If disabled, different settings can be made for the individual ports.
- *ALC On* enables ALC for the respective port.
- The *Control Range* is the maximum change of the source signal level due to the ALC; a value of 5 dB means that the source signal level may vary in a 10 dB wide symmetric range around the start value. With a wider control range, the ALC can compensate for larger attenuation/gain factors. A possible limitation of the port powers (*System Configuration – Power – Port Power Limits*) is ignored while the ALC loop is active. Therefore a narrower *Control Range* (smaller value) may be required to protect sensitive DUTs from excess input levels. A narrow control range is often sufficient if the source power is relatively well known, e.g. from a previous power calibration. A warning in the lower left corner of the *ALC Config* dialog points out the potential hazard.
- *Start Value Offset* increases/decreases the source signal level before the ALC loop is started. An appropriate value can speed up the ALC.

With *Show Advanced Settings* enabled the following additional settings are shown:

- If *Start Value Last Meas* is active, the ALC correction value (level offset) of the previous measurement (i.e. the last sweep point measured) is used. This setting is effective only for sweeps comprising a single partial measurement; it is ignored at the first sweep point or after a channel change.
- *Clamp* suspends the ALC mechanism while the analyzer acquires measurement data. The automatic level adjustment during the measurement is controlled via *Clamp* and *Control Range*.
- *ALC Path IF Bandwidth* selects the bandwidth in the ALC control loop. With the automatic selection, the analyzer selects an appropriate bandwidth, depending on the source frequency and level. The bandwidth has an impact on the *Control Loop Parameters*.

- *Control Loop Parameters* define the tuning coefficients of the Proportional-Integral (PI) controller the analyzer uses as a feedback controller for ALC.
By default the parameters are automatically selected (*Coefficients=Auto*). With automatic selection of the *ALC Path IF Bandwidth* this is the only option. If *ALC Path IF Bandwidth* is set manually, it is also possible to vary the coefficients manually; see background information below.
- *Settling Tolerance* defines the maximum variation of the source signal level after the ALC has settled.
The settling tolerance has an impact on the *ALC Path IF Bandwidth* in *Auto* mode: other things being equal, the smaller the *Settling Tolerance* the smaller the auto-selected filter bandwidth.
- *Activate Low Phase Noise Mode for ALC* ensures that [Low Phase Noise Mode](#) is activated whenever ALC is used on a port.



Control Loop Parameters

Proportional-Integral (PI) controllers provide two control parameters:

- The *Proportional Gain* K_r controls the change of the controller output in response to the current error value. If the value is too high, the ALC may become unstable. If it is too low, the ALC may not respond sufficiently to errors and become too slow.
- The *Integration Time* K_i controls the change of the controller output based on the integral of the error over time. If the value is high, the ALC becomes slower. If it is too low, the ALC may overshoot and thus become unstable.

The proportional and integration terms are summed to calculate the controller output, so there is a tradeoff between the two terms. With automatic ALC parameter setting, the control parameters are determined by the selected ALC bandwidth as shown in the following table.

ALC bandwidth	Proportional Gain	Integration Time [s]
20 Hz	0.00448	7.60e-5
30 Hz	0.00440	3.80e-5
50 Hz	0.01380	7.20e-5
100 Hz	0.04750	1.12e-4
200 Hz	0.05000	7.60e-5
500 Hz	0.01500	1.10e-5
1 kHz	1.92000	3.20e-4
10 kHz	1.76000	3.20e-5
100 kHz	1.28000	4.00e-6
1 MHz	0.76000	7.50e-7
7.12 MHz	1.12000	4.37e-7

For some test scenarios, an adjustment of the ALC parameters (loop tuning) can improve the stability and speed of the ALC.



Tooltips in the dialog

- *Please perform a source power calibration for all ALC ports.*

This tooltip is displayed if ALC is enabled at a port that doesn't have a source power calibration. For valid start values it is recommended to perform a Flatness Cal on every ALC port. Note that during a source power calibration, ALC is automatically switched off.

- *ALC is not compatible with intermodulation distortion measurement with two tone output at port 1.*
An intermodulation distortion measurement is only compatible with ALC, if the two-tone is generated by an external device.
This tooltip is also displayed in the [Define Intermodulation Distortion Measurement](#) dialog.
- *ALC is not supported for Mixer Delay Meas.*
You may not use an ALC port as a *Lower* or *Upper Tone Source* in the *Mixer Delay Measurement*. This message is also displayed in the [Define Mixer Delay Measurement without LO Access](#) dialog.
- *ALC is not compatible with Pulse Profile mode.*
See [Pulsed Measurements](#) for background information.
- *"ALC Off" selected. ALC is disabled for all ports.*
ALC is enabled for some ports, but switched off for the current channel (ALC Off in the [Power Bandwidth Average](#) menu).
- *ALC is not supported for true differential and defined coherence mode.*
Either true differential or defined coherence mode are active.



See Annex [Error Messages](#) for popup messages related to ALC errors that may occur during measurement. Detailed error information can be found under *Info - Setup Info*.



ALC handling was completely redesigned in firmware version 3.10. When loading a pre-V3.10 setup into V3.10 or higher, the ALC settings are converted without changing the ALC logic and are applied to all channels in the loaded setup. For example, the Settling Tolerance Window sizes Wide (1 dB), Normal (0.1 dB) and High Accuracy (0.02 dB) are converted to their corresponding numerical Settling Tolerance values.

Remote control: `SOURce<Ch>:POWer<Pt>:ALC:AUBW ON OFF`
`SOURce<Ch>:POWer<Pt>:ALC:BANDwidth`
`SOURce<Ch>:POWer<Pt>:ALC:CLAMp ON OFF`
`SOURce<Ch>:POWer<Pt>:ALC:CONTRol ON OFF`
`SOURce<Ch>:POWer<Pt>:ALC:COUPle ON OFF`
`SOURce<Ch>:POWer<Pt>:ALC:CSTate ON OFF`
`SOURce<Ch>:POWer<Pt>:ALC:LPNoise ON OFF`
`SOURce<Ch>:POWer<Pt>:ALC:PIParameter AUTO MANual`
`SOURce<Ch>:POWer<Pt>:ALC:PIParameter:GAIN`
`SOURce<Ch>:POWer<Pt>:ALC:PIParameter:ITIME`
`SOURce<Ch>:POWer<Pt>:ALC:POFFset ON OFF`
`SOURce<Ch>:POWer<Pt>:ALC:RANGe`
`SOURce<Ch>:POWer<Pt>:ALC:SOFFset`
`SOURce<Ch>:POWer<Pt>:ALC[:STATe] ON OFF`
`SOURce<Ch>:POWer<Pt>:ALC:STOLerance`

Sweep

The *Sweep* submenu defines the scope of the measurement in the active channel. This includes the sweep type with various parameters, the trigger conditions and the periodicity of the measurement.




Sweeps

A sweep is a series of consecutive measurements taken over a specified sequence of stimulus values. It represents the basic measurement cycle of the analyzer.

The analyzer can perform sweeps at constant power but variable frequency (frequency sweeps), sweeps at constant frequency but variable power (power sweeps), and sweeps at constant power and frequency that are repeated in time (Time/CW Mode sweeps); see [Sweep Type](#).

The sweeps are further specified by the number of measurement points, the total measurement time and the trigger mode. A measurement may consist of a single sweep or a series of sweeps repeated continuously.

On the other hand, depending on the measurement task and the measured quantity, the measurement at each point can consist of several partial measurements with definite hardware settings.

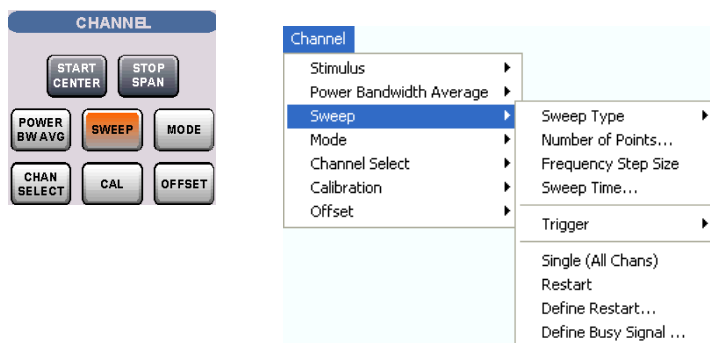


The *Sweep* menu provides the following settings:

- [Sweep Type](#) defines the sweep variable (frequency/power/time/CW mode) and the position of sweep points in the sweep range.
- [Number of Points](#) sets the total number of measurement points over the sweep range.
- [Frequency Step Size](#) sets the distance between two consecutive frequency sweep points.
- [Sweep Time](#) varies the measurement time for a sweep or delays the start of each sweep.
- [Trigger](#) selects the trigger mode for the measurement.
- [Manual Trigger](#) while the *Manual* trigger mode is active generates a trigger event. This softkey is also available in the [Trigger](#) submenu.
- If [Single \(All Chans\)](#) is selected the measurement is terminated after a single sweep or a group of single sweeps defined in the [Define Restart](#) dialog.
- [Restart](#) aborts the current measurement and restarts a new sweep sequence.
- [Define Restart](#) opens a dialog to specify which channels are affected and how many sweeps are repeated.
- [Define Busy Signal](#) opens a dialog to configure the output signal at pin no. 4 of the USER CONTROL connector.

Sweep Type

The *Sweep Type* submenu defines the sweep variable (frequency/power/time) and the position of the sweep points across the sweep range.

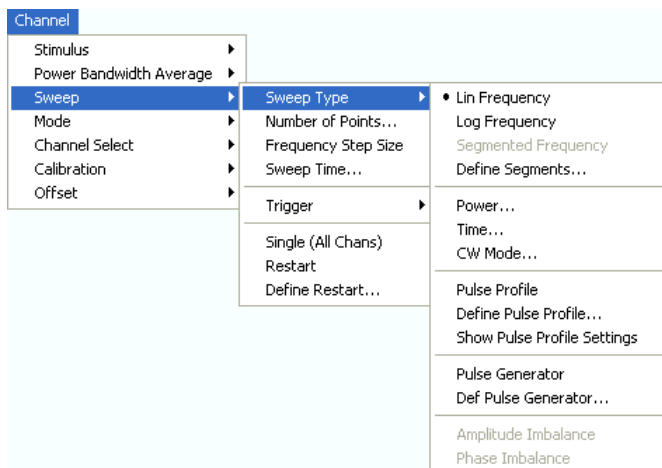


- **Lin. Frequency** is the default sweep type. The stimulus frequency is swept in equidistant steps over the continuous frequency range. In a Cartesian diagram, the x-axis is a linear frequency axis.
- **Log. Frequency** is analogous to **Lin. Frequency**, however, the frequency is swept in equidistant steps on a logarithmic scale. In a Cartesian diagram, the x-axis is a logarithmic frequency axis.
- **Segmented Frequency** is analogous to **Lin. Frequency** but uses a sweep range that can be composed of several continuous frequency ranges or single frequency points defined via **Define Segments**. A valid segment list must be defined before activating **Segment Frequency**.
- **Power** sweeps are performed at constant frequency but with variable generator power that is swept in linear, equidistant steps over a continuous range. In a Cartesian diagram, the x-axis is a dB-linear power axis.
- **Time** sweeps are performed at constant frequency and stimulus power. The measurement is repeated over a specified period of time at constant time intervals.
- **CW Mode** is a variant of the **Time** sweep where the individual measurements are triggered according to the current trigger settings.
- **Pulse Profile**, **Define Pulse Profile** and **Show Pulse Profile Settings** control the **pulsed sweep** mode (with option R&S ZVA-K7).
- **Amplitude Imbalance** and **Phase Imbalance** activate special sweep types for the **true differential mode** (with option R&S ZVA-K6).
- **Pulse Generator** turns the pulse generator on or off.
- **Def Pulse Generator** defines the properties of the pulse generator signals.

Lin. Frequency

In a **Lin. Frequency** sweep the stimulus frequency is swept in equidistant steps over the continuous frequency range. The frequency range (sweep range) is defined with the **Stimulus** settings. The step width between two consecutive sweep points is constant and given by $\text{Span} / (n - 1)$ where n is the specified **Number of Points** ($n > 1$). The internal generator power can be set, if so desired, in the **Power Bandwidth Average** submenu.

Lin. Frequency is the default sweep type. In a Cartesian diagram the measurement result is displayed as a trace over a linear frequency scale (as known e.g. from spectrum analyzers). The following example shows a **Lin. Frequency** sweep with a stimulus range between 300 kHz and 4 GHz, the forward transmission parameter S_{21} as measured quantity, and a **dB Mag** scaled y-axis.

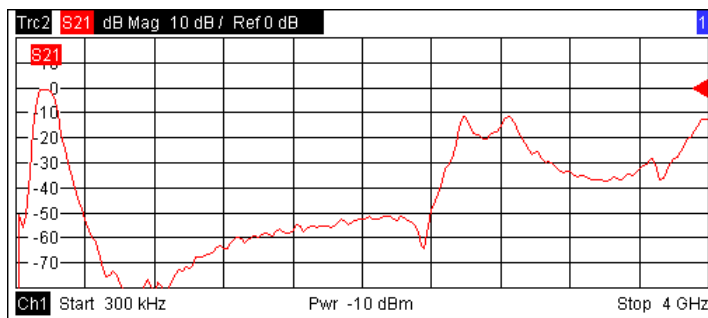


Remote control: `[SENSe<Ch>:]SWEep:TYPE LINear`
`[SENSe<Chn>:]FUNCTION[:ON] "XFrequency:..."`

Log. Frequency

In a *Log. Frequency* sweep the stimulus frequency is swept on a logarithmic scale over the continuous frequency range. The frequency range (sweep range) is defined with the *Stimulus* settings. The sweep points are calculated from the Span and the specified *Number of Points* ($n > 1$) with the condition that the step width is constant on the logarithmic scale. The internal generator power can be set, if so desired, in the *Power Bandwidth Average* submenu.

Log Frequency sweeps are suitable for the analysis of a DUT over a large frequency range, e.g. over several octaves. In a Cartesian diagram the measurement result is displayed as a trace over a logarithmic frequency scale. The following example shows a *Log. Frequency* sweep with a stimulus range between 50 MHz and 6 GHz, the forward transmission parameter S_{21} as measured quantity, and a *dB Mag* scaled y-axis.

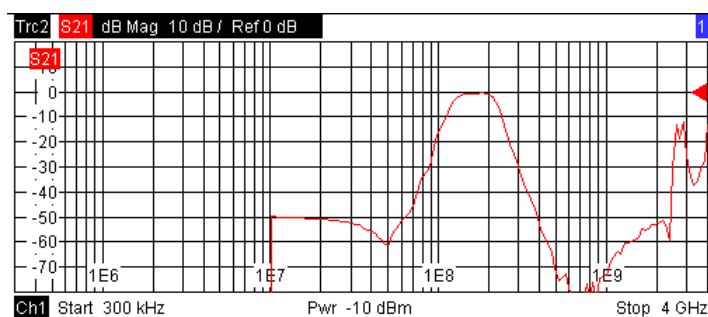

Remote control: `[SENSe<Ch>:]SWEep:TYPE LOGarithmic`
`[SENSe<Chn>:]FUNCTION[:ON] "XFrequency:..."`


Segmented Frequency

In a *Segmented Frequency* sweep the sweep range can be composed of several continuous frequency sub-ranges or single frequency points. The sub-ranges are termed sweep segments and defined in the *Define Segments* dialog. Sweep segments may overlap. The segment list must contain at least 2 distinct frequency points before a *Segmented Frequency* sweep can be started.

Instrument settings such as the internal generator power, the measurement (IF) bandwidth, the selectivity of the measurement filter, the frequency band of the local oscillator, and the measurement time can be set

independently for the individual segments.

Due to this flexibility *Segmented Frequency* sweeps are suitable for any detailed analysis of a DUT at specified frequencies. In a Cartesian diagram the measurement result is displayed as a trace over a linear frequency scale ranging from the lowest to the highest frequency point of all segments. The following example shows a *Segmented Frequency* sweep with 3 segments in the stimulus range between 300 kHz and 4 GHz, the forward transmission parameter S_{21} as measured quantity, and a *dB Mag* scaled y-axis. In the frequency ranges between the sweep segments the trace is displayed as a straight line.

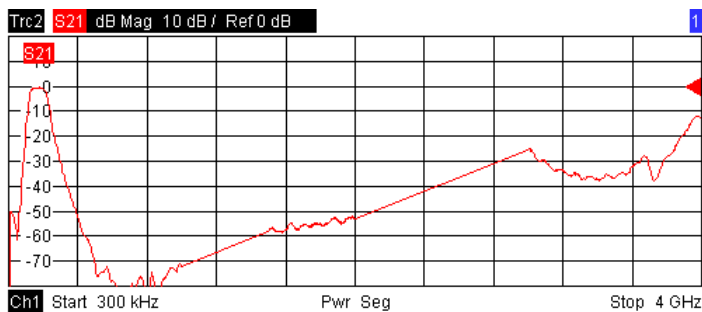

Remote control: `[SENSe<Ch>:]SWEep:TYPE SEGment`
`[SENSe<Chn>:]FUNCTION[:ON] "XFrequency:..."`


Power

In a *Power* sweep the internal generator power is swept in linear, equidistant steps over a continuous power range. The generator power range (sweep range) is defined via *Channel - Stimulus - Start* and *Channel - Stimulus - Stop*; see *Stimulus and Sweep Types*. The numeric entry bar for the fixed frequency (*CW Frequency*) appears as soon as *Power* is activated.

Channel Base CW Frequency:

Power sweeps are particularly suitable for the analysis of non-linear effects (saturation, compression) on active and passive DUTs (e.g. power amplifiers, mixers).

In a Cartesian diagram the measurement result is displayed as a trace over a dB-linear power scale. The following example shows a *Power* sweep with a linear DUT:

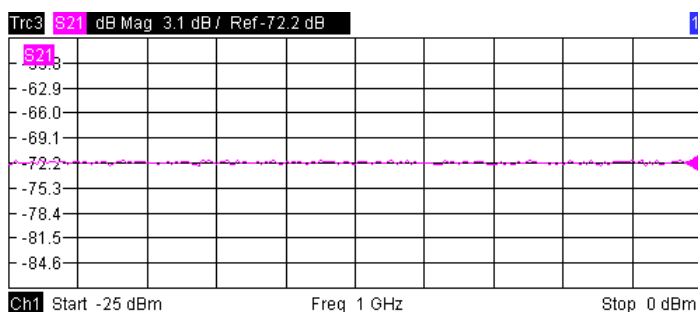

Generator power


The power range defined for a power sweep replaces the internal generator power setting in the *Power Bandwidth Average* submenu.

The power corresponds to the actual output power at the test port that supplies the stimulus for the active channel or at the calibrated reference plane. Any generator power calibration or attenuation of the active generator step attenuators is taken into account. The wide range of power stimulus values leaves enough flexibility to include an attenuation or gain in the test setup.


Remote control: [SENSe<Ch>:]SWEep:TYPE PWEr
 SEGment [SENSe<Chn>:]FUNctIon[:ON] "XPOWEr:..."
 SOURce<Ch>:FREQuency<Pt>:CW|FIXed

Time

Time sweeps are performed at constant frequency and stimulus power. A single sweep extends over a specified period of time. The sweep time is defined via *Channel - Stimulus - Stop*; see [Stimulus and Sweep Types](#). The time intervals between two consecutive sweep points are calculated according to $\frac{\text{Stop}}{(n - 1)}$ where n is the selected [Number of Points](#). The frequency (*CW Frequency*) and internal generator power (*Source Power*) is fixed and entered into a field which pops up as soon as *Time* is activated:

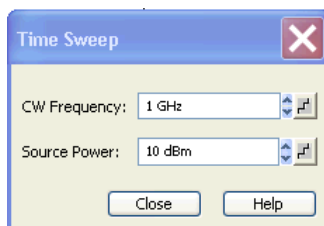

A *Time* sweep corresponds to the analysis of a signal over the time; the function of the analyzer is analogous to an oscilloscope. In a Cartesian diagram the measurement result is displayed as a trace over a linear time scale (oscillographic representation). The following example shows a *Time* sweep with a DUT that does not change its characteristics in time:

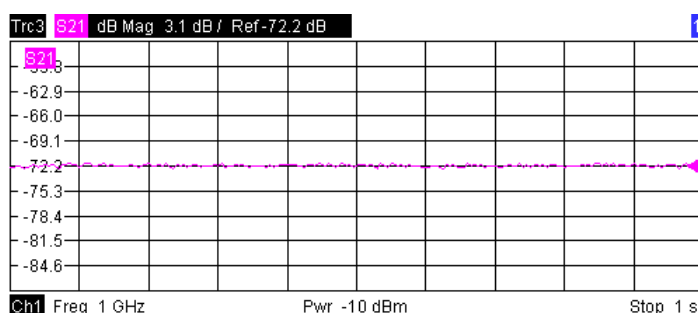

Sweep time

The minimum sweep time depends on the number of measurement points, the measurement bandwidth, the delay time before each partial measurement and the number of partial measurements required for each measurement point. The analyzer estimates this time, taking into account the current measurement settings.

If the total sweep time entered via *Channel - Stimulus - Stop* is smaller than the estimated minimum sweep time, the analyzer opens a dialog to adjust (increase) the stop time.



Equidistance of sweep points


The analyzer tries to keep the time intervals between any two consecutive time sweep points equal: The time sweep samples are equidistant. For unidirectional measurements, time sweeps up to the maximum number of 60001 sweep points are generally equidistant. For measurements with 4 drive ports, you can acquire between 18000 and 20000 equidistant results for each partial measurement. Equidistance also holds for sweeps which range over several channels.

If equidistance is no longer ensured, a tooltip is displayed. Reduce the number of points to restore equidistance. Equidistance is also impaired if an external power meter is active during the sweep.



Trigger settings

The *Time* sweep is incompatible with the *Periodic Trigger*: If *Periodic...* is selected while a time sweep is active, the analyzer generates an error message:

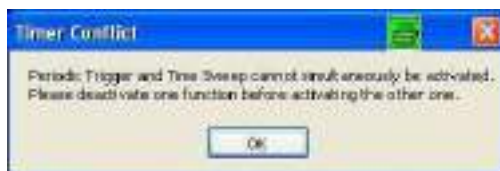

To continue, click *OK* and select any other trigger source.



In *Time* sweep mode the *Start*, *Center* and *Stop* softkeys are inactive, still you can use the *START CENTER* hardkey to select the fixed CW frequency.

Remote control: `[SENSe<Ch>:]SWEep:TYPE CW`
`[SENSe<Chn>:]FUNctIon[:ON] "XtIME:..."`
`SOURce<Ch>:FREQuency<Pt>:CW|FIXed`
`SOURce<Ch>:POWer[:LEVel] [:IMMediate] [:AMPlitude]`

CW Mode


CW Mode sweeps, like *Time* sweeps, are performed at constant frequency and stimulus power. The measurement is triggered according to the current trigger settings; each trigger event triggers the first partial measurement of a measurement point. The total number of measurement points is defined via *Channel - Stimulus - Stop*; see *Stimulus and Sweep Types*. The time interval between two consecutive measurements depends on the trigger settings. Any trigger mode is allowed.

The frequency (*CW*) and internal generator power (*Source Power*) is fixed and entered into a field which pops up as soon as *CW Mode* is activated.



A *CW Mode* sweep corresponds to the analysis of a signal over the time with a time scale and resolution that is determined by the trigger events. In a Cartesian diagram the measurement result is displayed as a trace over a linear time scale (oscillographic representation). The diagram is analogous to the *Time* diagram. The following example shows a *CW Mode* sweep with a DUT that does not change its

characteristics in time:

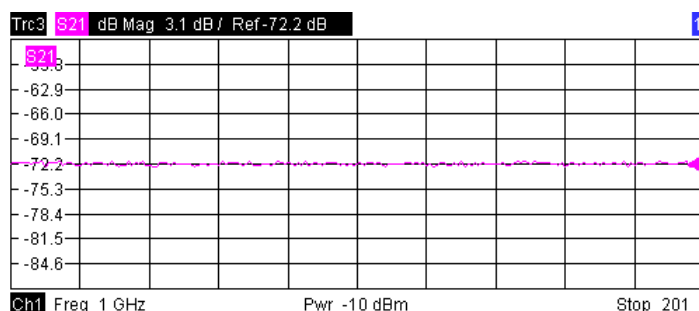

Sweep time

The time interval between two consecutive trigger pulses must not be smaller than the minimum measurement time for one measurement point described for [Time](#) sweeps.



In *CW Mode* sweep mode the *Start*, *Center* and *Stop* softkeys are inactive, still you can use the *START CENTER* hardkey to select the fixed CW frequency.

Remote control: `[SENSe<Ch>:]SWEep:TYPE POINT`
`[SENSe<Chn>:]FUNCTION[:ON] "XTIME:..."`
`SOURCE<Ch>:FREQuency<Pt>:CW|FIXed`
`SOURCE<Ch>:POWER[:LEVEL][:IMMediate][:AMPLitude]`

Define Segments

Opens a dialog to define all channel settings for a *Segmented Frequency* sweep and to import and export segmented sweep settings.



The *Define Segments* dialog contains a table to edit the individual segments of the sweep range. Sweep segments may have common points or even overlap; see [Columns in the Define Segments table](#).

Below the table, three groups of controls provide additional settings. Refer to the following sections below:

- [Inserting and Deleting Segments](#)
- [Individual Segment Settings](#)
- [Point List, Segment Import and Export](#)



Columns in the Define Segments table

The table contains an automatically assigned current number for each segment plus the following editable or non-editable columns:

#	Name	On	Start	Stop	Points	Power	Bandw	Sel	LO	Swp Tm	Auto	Trig	Bit 0	Bit 1	Bit 2	Bit 3
1		☒	1 GHz	2 GHz	201	-10 dBm	10 kHz	Norm	Auto	27.135 ms	☒	☒	☐	☐	☐	☐
2		☒	2 GHz	3 GHz	201	-10 dBm	10 kHz	Norm	Auto	27.135 ms	☒	☒	☐	☐	☐	☐
3		☒	3 GHz	4 GHz	201	-10 dBm	10 kHz	Norm	Auto	27.135 ms	☒	☒	☐	☐	☐	☐

- *On* provides check boxes to activate or deactivate each individual segment. Sweep points belonging to inactive segments only are not measured and not listed in the *Point List*.
- *Start* is the stimulus (x-axis) value of the first point of the segment. If the segment contains more than one *Point*, then *Start* must be smaller than the *Stop* value. If a *Start* value equal to or larger than the current *Stop* value is set, *Stop* is adjusted to the new *Start* value plus 1 Hz.
- *Stop* is the stimulus (x-axis) value of the last point of the segment. If the segment contains more than one *Point*, then *Stop* must be larger or equal than the *Start* value. If a *Stop* value equal to or smaller than the current *Start* value is set, *Start* is adjusted to the new *Stop* value minus 1 Hz.
- *Points* is the number of sweep points in the segment. A single segment can consist of only one point. If *Points* is set to 1, then the *Stop* frequency is set equal to the *Start* frequency.
- The *Trig* column is only visible if *Trigger* is enabled in the [Individual Segment Settings](#). It allows to deactivate triggering for selected segments.

The remaining columns show the channel settings for each segment. They are displayed only if they are selected in the [Individual Segment Settings](#) panel.



Limitations for overlapping segments

When overlapping sweep segments are created, the marker functions, trace evaluation functions, trace search functions and band filter functions are still available. It is possible, however, that these tools show an unexpected behavior when used in overlapping sweep segments.

The reason is that the assignment of markers to traces in overlapping segments is ambiguous. To avoid any problem, it is recommended to turn off the sweep segments that overlap with the one that needs to be analyzed in detail with the aid of a marker function.



Use the [paste marker list](#) for convenient entry of *Start* and *Stop* values.

Remote control:

The commands in the `[SENSe<Chn>:] SEGment...` subsystem define all sweep segment settings.

Inserting and Deleting Segments

Three buttons on the left side below the table in the *Define Segments* dialog extend or shorten the segment list:

- **Add**

adds a new segment to the list. The new segment is inserted after the active segment. The segment numbers (#) of all segments after the new segment are adapted.


The new segment ranges from the *Stop* value of the previously active segment to the maximum frequency of the analyzer. If the previously active segment ranges up to the maximum frequency, the new segment is created with minimum width. The analyzer places no restriction on the number of segments in a sweep range.

- *Delete* removes the selected segment from the list.
- *Delete All* clears the entire segment list so it is possible to define or load a new segmented sweep range.

Remote control: [SENSe<Chn>:] SEGMENT<Seg>:INSert
 [SENSe<Chn>:] SEGMENT<Seg>:DEFine
 [SENSe<Chn>:] SEGMENT<Seg>:DELete
 [SENSe<Chn>:] SEGMENT<Seg>:DELete:ALL

Individual Segment Settings

The options in the *Individual Segment Settings* panel can be used to vary the channel settings of every individual segment in the list.

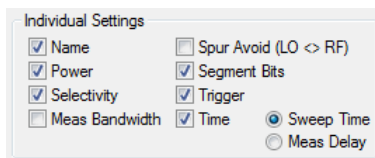

The first sweep segment is created with the channel settings defined for unsegmented sweep types. When any further sweep segment created, it uses the channel settings of the previously active segment. Each selected (checked) option adds a column to the segment list.

- *Name* adds a column to assign a name to each segment. A segment name is a string that may contain letters, numbers and special characters.
- *Power* defines the internal source *Power* for each individual sweep segment.
- *Meas Bandwidth* defines the *Meas Bandwidth* for each individual sweep segment.
- *Selectivity* defines the *Selectivity* of the IF filter used for each sweep segment.
- *Spur Avoid* defines whether the analyzer measures the segment with a local oscillator frequency LO below or above the RF input frequency. The parameter replaces the *Spurious Avoidance* settings for a particular segment.
- **Segment Bits**
 Enables the definition of a segment-dependent four-bit binary value to control four independent output signals at the *USER CONTROL* connector (lines 16, 17, 18, 19). The output signals are 3.3 V TTL signals which can be used to differentiate between up to 16 independent analyzer states. For an application example refer to the detailed [remote control description](#). Setting the segment bits does not change the analyzer state.
- **Trigger**
 Enables the *Trig* column in the *Define Segments table* which in turn allows to deactivate triggering for selected segments.
 If *Trig* is unchecked for a particular segment, all triggers within this segment are inactive: it will be

swept in one go, immediately after the previous one.

The configured *Trig* states are preserved while the *Trigger* flag is inactive (and the column is hidden). However, they only take effect while the *Trigger* flag is active and if

1. the analyzer is not in **Free Run** mode
2. the **Triggered Measurement Sequence** is different from *Sweep*

- **Time**

defines the sweep time for each segment. The default configuration for a new segment is equal to the **Sweep Time** settings.

When *Time* is checked two new columns appear in the table. The first column reads *Swp Tm* or *Meas Dly*, depending on the selected radio button below the *Time* checkbox. The second column reads *A(uto)* and is used to activate automatic sweep time setting.

- *A(uto)* minimizes the sweep time. If this option is checked, the columns *Swp Tm* or *Meas. Dly* can not be edited. *Swp Tm* indicates the estimated sweep time, taking into account the current measurement settings, the *Meas. Dly* is 0 s. The segment sweep time and point delay values are maintained until changed explicitly if Auto is switched off.
- *Sweep Time* or *Segment Sweep Time* is the total measurement time for the sweep segment. The minimum segment sweep time to be set is equal to the estimated value in the Auto mode.
- *Meas Delay* sets a delay time allowing the DUT to settle before the hardware settings of the analyzer are changed and a new partial measurement is started


Changing the *Meas. Delay* modifies the *Sweep Time* and vice versa.

Remote control: `[SENSe<Chn>:] SEGMENT<Seg>:INSert`
`[SENSe<Chn>:] SEGMENT<Seg>:DEFine`
`[SENSe<Chn>:] SEGMENT<Seg>:NAME`
`[SENSe<Chn>:] SEGMENT<Seg>:POWER[:LEVEL]`
`[SENSe<Chn>:] SEGMENT<Seg>:BWIDth[RESolution]`
`[SENSe<Chn>:] SEGMENT<Seg>:BWIDth[RESolution]:SElect`
`[SENSe<Chn>:] SEGMENT<Seg>:SBAND`
`[SENSe<Chn>:] SEGMENT<Seg>:SBAND:CONTRol`
`OUTPut<Ch>:UPOrt:SEGMENT<Seg>:STATe`
`OUTPut<Ch>:UPOrt:SEGMENT<Seg>[:VALue]`
`[SENSe<Ch>:] SEGMENT<Seg>:TRIGger:CONTRol`
`[SENSe<Ch>:] SEGMENT<Seg>:TRIGger:STATe`
`[SENSe<Chn>:] SEGMENT<Seg>:SWEep:TIME`
`[SENSe<Chn>:] SEGMENT<Seg>:SWEep:DWELL`

Point List, Segment Import and Export

The buttons on the right side below the table in the *Define Segments* dialog are used to retrieve the position of the defined sweep points import and export limit line data.

- **Show Point List**
 opens a list of all active sweep points and their channel settings.

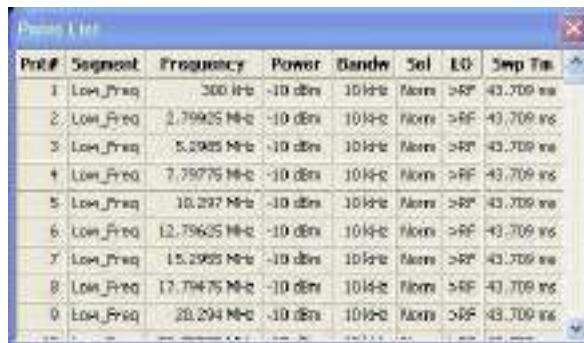

Ptr#	Segment	Frequency	Power	Bandw	Sol	EQ	Sweep Time
1	Low_Freq	300 kHz	-10 dBm	10 kHz	Norm	>RF	43.709 ms
2	Low_Freq	2.79925 MHz	-10 dBm	10 kHz	Norm	>RF	43.709 ms
3	Low_Freq	5.2985 MHz	-10 dBm	10 kHz	Norm	>RF	43.709 ms
4	Low_Freq	7.79775 MHz	-10 dBm	10 kHz	Norm	>RF	43.709 ms
5	Low_Freq	10.297 MHz	-10 dBm	10 kHz	Norm	>RF	43.709 ms
6	Low_Freq	12.79625 MHz	-10 dBm	10 kHz	Norm	>RF	43.709 ms
7	Low_Freq	15.2955 MHz	-10 dBm	10 kHz	Norm	>RF	43.709 ms
8	Low_Freq	17.79475 MHz	-10 dBm	10 kHz	Norm	>RF	43.709 ms
9	Low_Freq	20.294 MHz	-10 dBm	10 kHz	Norm	>RF	43.709 ms

Points in inactive sweep segments (i.e. segments that are not switched *On* in the segment table) are not shown. The table provides a check of the settings made and can not be edited.

- *Import Segment List...* calls up an *Open File* dialog to load a sweep segment list from a sweep segment file. Sweep segment files are ASCII files with the default extension *.seglist and a special *file format*.
- *Export Segment List...* calls up a *Save As...* dialog to store the current sweep segments to a sweep segment file. Sweep segment files are ASCII files with the default extension *.seglist and a special *file format*.



To import a segment list file (*.seglist) you can also use the Windows Explorer and simply double-click the file or drag and drop the file into the NWA application. You must enable the segmented sweep separately.

Remote control: `MMEMory:LOAD:SEGMent <Ch_no>,"file_name"`
`MMEMory:STORe:SEGMent <Ch_no>,"file_name"`

File Format for Sweep Segments

The analyzer uses a simple ASCII format to export sweep segment data. By default, the sweep segment file extension is *.seglist. The file starts with two comment lines containing the version and a third line reproducing the header of the segment list. The following lines contain the entries of all columns of the segment list, including the *Individual Segment Settings* that may be actually hidden.



Example of a sweep segment file

The segmented sweep range:

#	On	Start	Stop	Points
1	☒	300 kHz	300.002 kHz	401
2	☒	300.002 kHz	300.004 kHz	401
3	☒	4.5 GHz	8 GHz	401

is described by the following sweep segment file:

```

# 1 1 300 kHz 300.002 kHz 401
# 2 1 300.002 kHz 300.004 kHz 401
# 3 1 4.5 GHz 8 GHz 401

```



The sweep segment file actually contains more columns listing all channel settings of the individual sweep segments. The headings of the additional columns read:

Source Power [dBm]; IF Bandwidth [Hz]; enIF Selectivity; en IF Sideband; Meas Delay [μ s]; boSweep Time Auto;

Pulsed Measurements (for R&S ZVA and R&S ZVT)

The softkeys in the lower part of the *Sweep Type* submenu control pulsed measurements (with option ZVA-K7, *Pulsed Measurements*).



Pulse profile mode

Measurements on pulsed RF signals are required in many areas of RF and microwave technology. Pulsed signals are used in mobile phone applications and radar systems, and amplifiers are typically designed for pulsed rather than continuous wave (CW) conditions.

The analyzer performs pulsed measurements in analogy to a time sweep (i.e. at constant receiver frequency), but with a much higher sampling rate of 1/12.5 ns. The raw I/Q amplitudes are written into a ring buffer and processed at the end of each sweep. The buffer size allows for a maximum recording time (sweep time) of 3 ms. Due to the high sampling rate and the large IF bandwidths available, it is possible to obtain profiles for pulse widths from approx. 200 ns to the maximum recording time. Of course it is also possible to measure a sequence of pulses up to the maximum recording time.


Pulsed measurements require a trigger signal that is synchronized to the analyzed pulses. The analyzer's trigger system is idle while the data acquired in the last recording period is processed; it is re-armed after data processing is finished. To suppress the noise occurring at high IF bandwidths, sweep averaging is recommended.

The RF source signal of the vector network analyzer is continuous, so the pulsed stimulus signals must be generated by external means:



- Preferably, an R&S ZVAX [extension unit](#) equipped with one or more pulse modulator options provides the pulsed signal. The pulse modulators are controlled using the internal [pulse generator](#) of the network analyzer; see measurement example for pulse modulators.
- Alternatively, a chopper between the SOURCE OUT and the SOURCE IN connector of an analyzer port transforms the continuous source signal into a pulsed signal.
- An external generator can provide pulsed signals.
- The DUT can be switched on and off periodically to show a pulsed characteristic.

Basic relations: pulse width, repetition interval, IF bandwidth

A pulsed RF signal ideally consists of a sequence of periodic rectangular pulses. The pulse width PW and pulse repetition period PRP are shown in the following figure; the ratio PW/PRP is often referred to as the duty cycle.

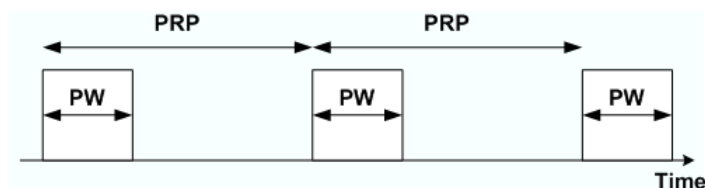

The spectrum of a pulsed signal in the frequency domain has a $\sin(x)/x$ envelope, where x is proportional to the duty cycle. The spectral components are equidistant with a spacing of $1/\text{PRP}$. The analyzer measures and displays the pulses in time domain. To be detected properly, the pulse width must be larger than twice the rise/fall time of the receiver, which roughly corresponds to the inverse of the IF bandwidth. The figure below shows a rectangular pulse with a width of $1\text{ }\mu\text{s}$, measured in a 10 MHz bandwidth. The rise and fall times are approximately 100 ns .

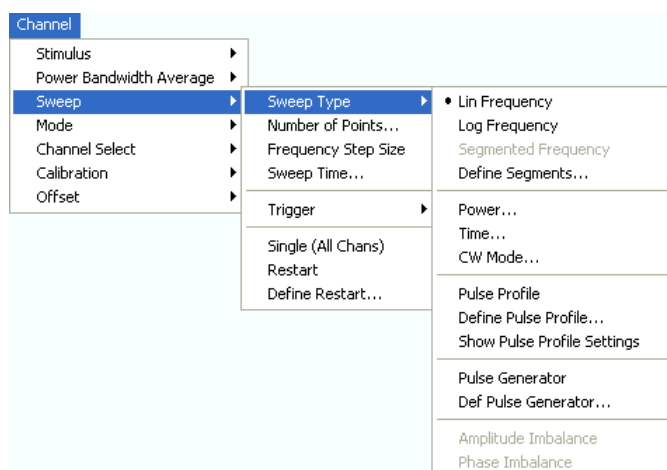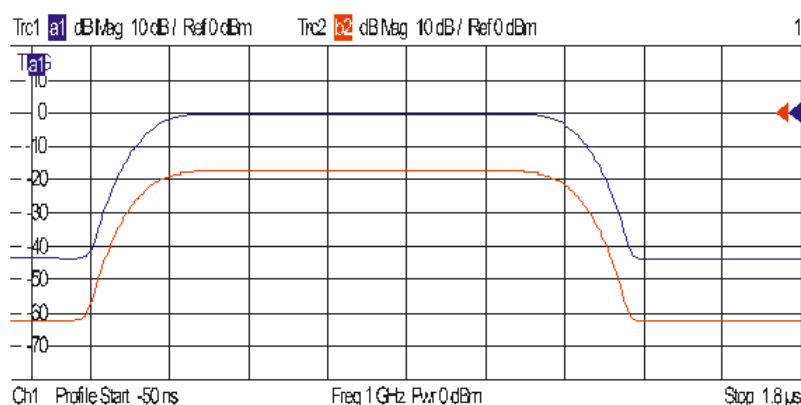

- [Pulse Profile](#) activates pulsed measurements.
- [Define Pulse Profile...](#) gives access to the time parameters, the stimulus signal settings, and the receiver settings for pulsed measurements.
- [Show Pulse Profile Settings](#) opens a screen with an overview of the current settings.


Pulse Profile

Pulse Profile measurements are performed at constant receiver frequency and stimulus power; see background information on [pulse profile mode](#). Pulsed measurements require a trigger signal that is synchronized to the analyzed pulses. Besides all settings are accessible in the [Define Pulse Profile](#) dialog.

Remote control: [SENSe<Ch>:]SWEp:TYPE PULSe

Define Pulse Profile...


Opens a dialog to configure the time parameters, the stimulus signal settings, and the receiver settings for pulsed measurements.

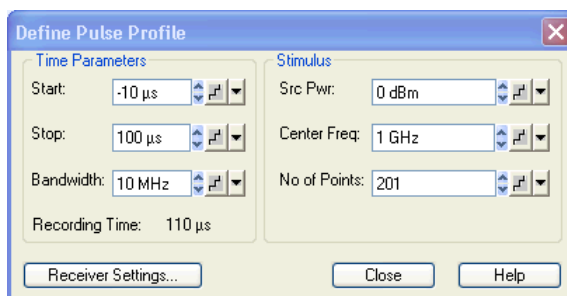

The *Time Parameters* define the displayed time range and the IF bandwidth:

- *Start* and *Stop* define the start and stop time in the diagram area relative to the trigger time; they are identical to the *Stimulus – Start* and *Stimulus – Stop* parameters. The stop time must be larger than the start time; **negative values** are allowed.

When the pulse profile measurement is activated (and then every time when the data of the last sweep has been processed) the analyzer immediately starts acquiring data, therefore it is possible to select negative start times (pre-trigger). Moreover, the time of the trigger event does not have to be within the displayed time range (i.e. start and stop time can both be negative or positive).

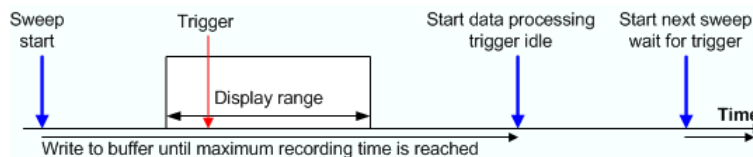

- *Bandwidth* selects the IF bandwidth for the pulse profile measurements. The measurements are performed with a fixed sampling rate and at fixed frequency, so the bandwidth does not affect the measurement speed. To obtain short rise and fall times of the receiver and measure short pulses, it is preferable to use large bandwidths; see background information on [basic relations](#).



NOTE Filter bandwidths above 10 MHz can be associated with increased measurement uncertainties. In particular, they tend to cause overshoot and ringing at the beginning and at the end of the pulses.

- *Recording Time* indicates the width of the display range, i.e. the difference of *Stop – Start* time. The calculated recording time is possibly modified if *Shift Stimulus* or *Coupled Section Limit Lines On* is active; see [Receiver Settings](#). An error message is displayed if the calculated recording time exceeds the maximum buffer recording time of 3 ms.



TIP The hardware option R&S ZVA-B7, Pulsed Measurements, enhances the maximum buffer recording

time to 25 ms.

The *Stimulus* parameters define fixed source and receiver settings for the pulse profile measurement. The parameter settings are also valid for other sweep types.

- *Source Power* is the channel base power; see [Power](#). This setting is relevant if the analyzer is used to generate the pulsed source signal, e.g. with an additional RF switch looped into the SOURCE path.
- *Center Freq.* is the channel base frequency; see [CW Frequency](#). Note that pulse profile measurements are compatible with the frequency-converting mode, so that it is possible to define port-specific corrections to the CW frequency.
- *No of Points* is the number of sweep points displayed; see [Number of Points](#). Due to the fixed sampling period of 12.5 ns and the fixed buffer size, this parameter does not directly affect the measurement speed. Results are interpolated if the number of points differs from the value (Stop – Start)/12.5 ns + 1 (*Optimum No of Points*).


[Receiver Settings](#) opens a dialog with advanced pulse profile settings.

Remote control: [SENSe<Ch>:] PULSe:TIME...
 SOURce<Ch>:POWer<Pt>[:LEVel][:IMMediate][:AMPlitude]
 SOURce<Ch>:FREQuency<Pt>[:CW]|FIXed
 [SENSe<Ch>:] SWEep:POINts

Retrieve raw measured data: CALCulate<Chn> DATA? TSData

Receiver Settings

This dialog provides advanced settings for the pulse profile mode. Most of the parameters can be set independently for the different receivers and source ports involved in the measurement.

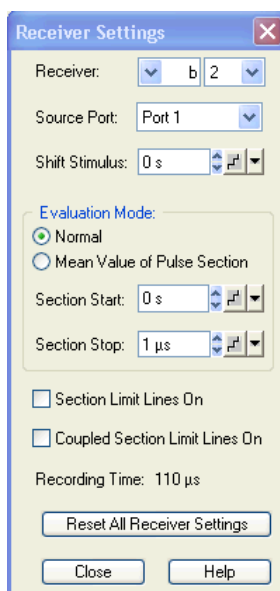

The receiver and source port are selected in the upper part of the dialog.

- *Receiver* selects a receiver for a received wave b_i or a reference wave a_i .
- *Source Port* contains all analyzer ports and external generators that are available as source ports.

Receiver and source ports can be selected although they may not be currently used. The analyzer can store predefined receiver settings for arbitrary port configurations.


- *Shift Stimulus* defines an offset time for the current receiver and source port. This is important for measuring DUTs with a noticeable transmission delay.



Effect of shift stimulus and examples

Shift Stimulus defines an offset time that is to compensate for a known transmission delay of a DUT. A non-zero shift stimulus value has the following effect:

- The trace for the wave quantity assigned to the active receiver is shifted in horizontal direction. A positive value shifts the trace to the left (subtraction of a known delay), a negative value shifts it to the right.
- All quantities depending on the shifted wave quantity are calculated with the corrected time reference. In the example below, the S-parameter S_{21} is calculated as $S_{21}(t) = b_2(t + \text{Shift stimulus})/a_1(t)$.
- The displayed *Recording Time* is extended to cover the delayed wave.

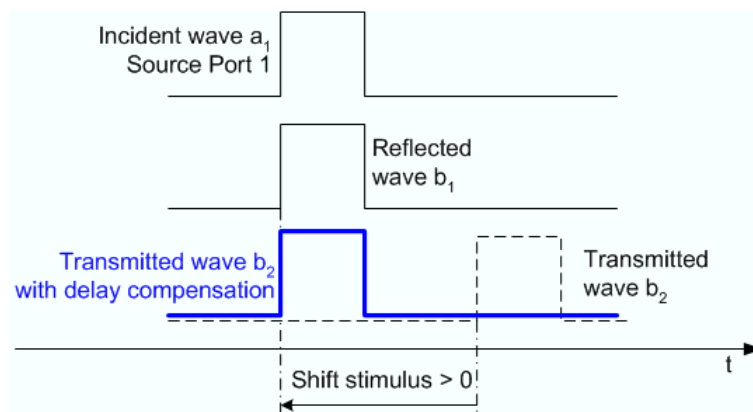

The example above illustrates the importance of a correct delay compensation for the calculation of S-parameters, ratios and other derived quantities in the time domain. Without compensation, the two pulses for a_1 and b_2 do not overlap so that no meaningful S-parameter calculation is possible.

Example: S-parameter measurement for a DUT with known delay D_{fw} and D_{rev} in forward and reverse direction. The DUT is connected between port 1 and port 2 of the analyzer. The test setup is fully calibrated so that the reference planes are at the DUT's input and output ports.

Receiver: a1	Receiver: b1	Receiver: b2
Source: 1	Source: 1	Source: 1
Shift stimulus: 0	Shift stimulus: 0	Shift stimulus: D_{fw}

Receiver: a2	Receiver: b1	Receiver: b2
Source: 2	Source: 2	Source: 2
Shift stimulus: 0	Shift stimulus: D_{rev}	Shift stimulus: 0


- The *Evaluation Mode* specifies how the wave quantity assigned to the current receiver and source port is displayed. In *Normal* mode, it is displayed as measured (pulse shape). If *Mean Value of Pulse Section* is selected, the wave quantity is replaced by its mean value (magnitude and phase) averaged over a configurable time interval [Section Start, Section Stop].



Effect of averaging, definition of the time interval

Mean Value of Pulse Section has the following effect:

- The trace for the wave quantity assigned to the active receiver is replaced by a constant trace.
- All quantities depending on the wave quantity are based on the averaged values.
- The displayed *Recording Time* is extended to cover the specified pulse section.

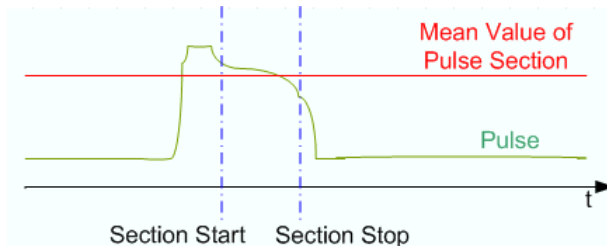

Section Start and Section Stop can be negative and even outside the displayed time range, however, Section Start must be smaller than Section Stop. A stimulus shift also shifts the Section Start and Section Stop values.


The remaining settings in the dialog are general; they do not depend on the selected receiver and source port.

- *Section Limit Lines On* places two vertical lines into the diagram(s), indicating the selected *Section Start* and *Section Stop*. The section limits can be modified using drag-and-drop.
- *Coupled Section Limit Lines On* couples the section limits (and the section limit lines) for all receivers and source ports and in all channels. The evaluation mode and the *Shift Stimulus* values are still independent. As a typical application, it is possible to create two channels, display the same wave quantity with different evaluation modes (pulse shape and average), vary the section limits in normal evaluation mode (pulse shape) and monitor the effect on the average trace.
- *Recording Time* indicates the width of the display range, possibly modified if *Shift Stimulus* or *Coupled Section Limit Lines On* is active; see background information above. An error message is displayed if the calculated recording time exceeds the maximum buffer recording time of 3 ms.
- *Reset All Receiver Settings* the parameters in the dialog for all receivers and source ports.

Remote control: `[SENSe<Ch>:]PULSe:COUPled[:STATe]`
`[SENSe<Ch>:]PULSe:RECeiver...`

Show Pulse Profile Settings

Gives an overview of the current time and stimulus settings for pulsed measurements. The info screen also display softkeys to *Print* the contents, save them to a file (*Print to File*) or *Close* the screen.

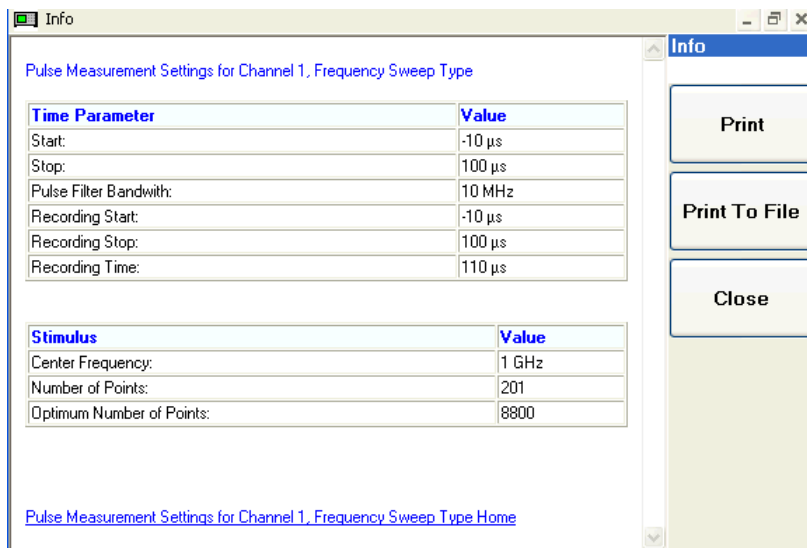

Remote control: Settings can be retrieved using the query form of the commands.

Pulse Generator (for R&S ZVA/ZVT)

Turns the pulse generator on or off (with option R&S ZVA-K27). The pulse generator provides two independent control signals at the **CASCADE** output connector on the rear panel of the network analyzer. The signals can be used to control a R&S ZVAX24 or R&S ZVAX-TRM Extension Unit equipped with pulse modulator option.

The pulse generator signals are configured using the [Define Pulse Generator](#) dialog.




Pulse generator signals

Pulse generator signals consist of rectangular pulses which are repeated periodically. The signals serve as modulation signals for pulse modulators: During the high signal periods, the pulse modulator generates an RF signal, during the low signal periods, the RF signal is switched off. The R&S ZVA provides two different pulsed signals:

- The *Gen 1* signal (the actual "pulse generator signal") consists of a single pulse or a pulse train with selectable period. A pulse train is a series of pulses with individual timing and width. The pulse generator signal is not used internally.
- The *Gen 2* signal ("sync signal") is a single pulse which is repeated after the pulse period. The sync signal can be used as a trigger signal for pulsed measurements but also available as a modulation signal. In *Chopped Pulse Profile* mode, it is used chop the measured RF signal into short measurement intervals.

The pulse period of the pulse generator and sync signals are identical. An example for a pulse generator signal consisting of a pulse train (*Gen1*) and a sync signal (*Gen 2*) is shown below.

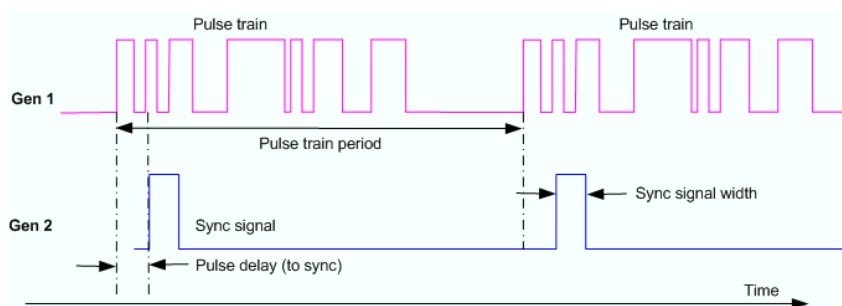

If not specified otherwise, the pulse generator settings are channel-specific.

A measurement example for pulse generators and pulsed measurements is reported in the Getting Started guide for the extension unit R&S ZVAX24, to be found on the R&S ZVA/B/T documentation CD-ROM.



To perform measurements on pulsed RF signals controlled by the pulse generator, the *Pulse Gen* trigger must be used. The trigger settings also control which of the trigger signals provides the trigger event.

Remote control: `[SENSe<Ch>:]PULSe:GENerator<gen_no>[:STATe]`

Define Pulse Generator

Defines the properties of the pulse generator signals.



- *Pulse Type* selects the shape of the pulse modulator (*Gen 1*) signal. For each pulse type, a subset of *Pulse Parameters* is available. A *Single Pulse* is a rectangular pulse with definite *Pulse Width* that is repeated after the *Single Pulse Period*. A *Pulse Train* is a series of single pulses; see *Pulse Generator Signals*. Constant signals (*Constant High* and *Constant Low*) need no further

specification.

When a *Constant High* or *Constant Low* signal is selected, the pulse type of the sync signal is set to *Constant High* or *Constant Low*, too. The previous pulse type of the sync signal is restored when the pulse generator signal is reset to *Single Pulse* or *Pulse Train*.

- The controls in the *Pulse Parameters* section specify the properties of *Single Pulse* signals and *Pulse Train* signals (*Gen 1*). It is possible to invert the polarity of the pulse generator signal, i.e. to exchange the high signal and low signal periods. The three buttons in the panel open configuration dialogs for the *Pulse Train*, the *Sync Generator (Gen 2)*, and the *chopped pulse profile* mode.
- The section *Settings valid for* defines the scope of the pulse generator settings. By default, all settings are valid for the *Active Channel*. If *All Channels (Continuous Mode)* is selected, the pulse generator settings of the active channel are applied to all channels. This ensures continuous pulse generator signals at the CASCADE output of the network analyzer when another channel is selected. Use *All Channels (Continuous Mode)* mode for measurement on DUTs which could be damaged by variable pulse generator settings.

Remote control: [SENSe<Ch>:]PULSe:GENerator1:TYPE
 [SENSe<Ch>:]PULSe:GENerator1:WIDTH
 [SENSe<Ch>:]PULSe:GENerator1:PERiod
 [SENSe<Ch>:]PULSe:GENerator1:TRain:PERiod
 [SENSe<Ch>:]PULSe:GENerator1:POLarity
 [SENSe<Ch>:]PULSe:GENerator1:MODE

Define Pulse Train


Defines a pulse train for the pulse modulator (*Gen 1*) signal on a segment-by-segment basis. This dialog is called from the *Define Pulse Generator* dialog.



Defining pulse trains with minimum effort

Choose one of the following methods to efficiently create and handle pulse train segments:

- To configure a pulse train with only a few segments, use *Add Segment* and edit each range in the table individually.
- Use the *Auto Arrange* button to sort the segments in ascending order of the *Start High Signal*.
- Save your pulse train definition to a file so you can re-use or modify it in later sessions (*Save Pulse Train...*, *Recall Pulse Train...*).

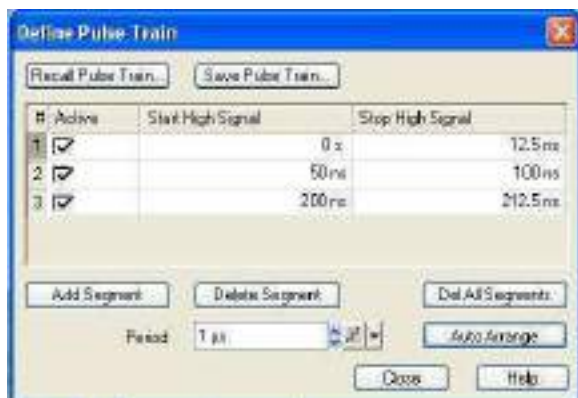

The *Define Pulse Train* dialog contains a table to edit the individual pulse segments; see below. The buttons below the table extend, shorten, or re-order the segment list.

- *Add Segment* adds a new segment to the list, assigning a Start High Signal value of 0 s, a Stop High Signal value of 12.5 ns. If Auto Arrange is active the new segment is inserted at the beginning of the list. The analyzer places no restriction on the number of ranges assigned to each trace.
- *Delete Segment* removes the selected segment from the list.
- *Del All Segments* clears the entire segment list so it is possible to define or load a new pulse train definition.
- *Auto Arrange* sorts the segments in ascending order of the Start High Signal.

The buttons above the table are used to import and export pulse train data. Pulse train files are ASCII files with the default extension *.train and a special [file format](#).

- *Recall Pulse Train...* calls up an [Open File](#) dialog to load a pulse train definition from a file.
- *Save Pulse Train...* calls up a [Save As...](#) dialog to store the current pulse train definition to a pulse train file.

Period denotes the duration of the entire pulse train. The period of the sync signal is adjusted to the pulse train period as long as the pulse train signal type is active.



Columns in the segment table

The table contains an automatically assigned current number for each segment/pulse plus the following editable columns:

- *Active* indicates whether the segment is active (checkbox selected) or inactive. Clearing the checkbox does not delete the segment but suppresses the pulse in the generator signal.
- *Start High Signal* is the start time of the segment.
- *Stop High Signal* is the stop time of the segment.

The minimum pulse width (the difference *Stop High Signal* – *Start High Signal*) is 12.5 ns. Segments/pulses may overlap, however, the largest *Stop High Signal* value must not exceed the pulse train *Period*.

Remote control: `[SENSe<Ch>:]PULSe:GENerator1:TRain:DATA`
`[SENSe<Ch>:]PULSe:GENerator1:TRain:SEGment<Seg>[:STATe]`
`[SENSe<Ch>:]PULSe:GENerator1:TRain:SEGment<Seg>:STIMulus:START`
`[SENSe<Ch>:]PULSe:GENerator1:TRain:SEGment<Seg>:STIMulus:STOP`
`[SENSe<Ch>:]PULSe:GENerator1:TRain:SEGment<Seg>:COUNT?`
`[SENSe<Ch>:]PULSe:GENerator1:TRain:PERiod`
`[SENSe<Ch>:]PULSe:GENerator1:TRain:DELete:ALL`
`MMEMemory:LOAD:PTRain`
`MMEMemory:STORe:PTRain`

Define Sync Generator

Defines the properties of the sync signal (*Gen 2*). This dialog is called from the [Define Pulse Generator](#) dialog.



The sync signal is either a single pulse signal with definite pulse width (*Sync Width*), following the pulse generator signal by a specified *Sync Delay (to Pulse)*, or a constant signal. Constant signals (*Constant High* and *Constant Low*) need no further specification. It is possible to invert the polarity of the sync signal, i.e. to exchange the high signal and low signal periods.

While the pulse generator signal type is *Constant High* or *Constant Low*, the sync generator signal type is *Constant High* or *Constant Low*, too.

See also background information on [Pulse Generator Signals](#).



Timing Restrictions

- If the *Sync Width* is greater than or equal to the *Pulse (Train) Period*, a constant sync signal is generated.
- Otherwise, in case the *Sync Delay* is set to a negative value or to a value greater than the *Pulse (Train) Period* T , it is internally shifted by multiples of T so that the resulting value is in the interval $[0, T)$.
- If (after this operation) the sync pulse overlaps with the pulse (train), the time origin is shifted to the rising edge of the first sync pulse.

Remote control: `[SENSe<Ch>:]PULSe:GENerator2:TYPE`
`[SENSe<Ch>:]PULSe:GENerator2:WIDTh`
`[SENSe<Ch>:]PULSe:GENerator1:DELay`
`[SENSe<Ch>:]PULSe:GENerator2:POLarity`

Adjust Settings for Chopped Pulse Profile

Defines the time resolution for the chopped pulse profile mode and activates the mode. This dialog is called from the [Define Pulse Generator](#) dialog.




Chopped pulse profile mode

Chopped pulsed profile mode is a means of achieving extremely small time resolutions for measurements on strictly periodic signals. Time resolution is the critical parameter for measurements on pulsed signals with very short pulse widths. In a normal time sweep at the default IF bandwidth of 10 kHz, the time resolution (i.e. the measurement time for each sweep point) is in the 100 μ s range. In chopped pulse profile mode, the analyzer achieves time resolutions down to 12.5 ns.

A power calibration is generally not possible, however, the measurement provides accurate relative powers at consecutive sweep points. Hence the measurement result shows the profile of the measured RF signal.

Chopped pulse profile results are measured as follows:

1. The signal is chopped into k measurement intervals of equal width. The interval width is equal to the time resolution. For each interval, the analyzer acquires measurement results in n consecutive pulse periods. Due to the periodicity of the signal, the amplitude in each of the measurement intervals is equal. The results from the individual intervals are integrated; the effective measurement time per interval is thus n times the interval length. With a suitable selection of the factor n , this method provides accurate results at common IF bandwidths.

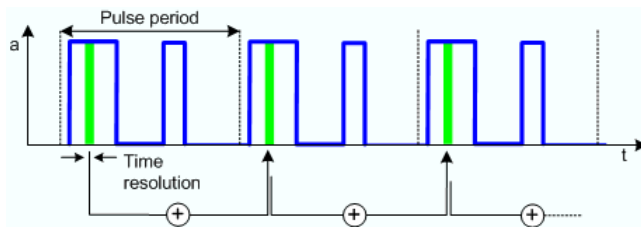

2. After integrating the n results for a given measurement interval, the analyzer steps to the next interval in order to repeat the procedure above. The total measurement for k measurement intervals covers $k \cdot n$ pulse periods. The measurement result is a time-domain trace consisting of k integrated measurement points.

The analyzer automatically selects a *CW Time sweep* mode and adjusts a number of data acquisition and pulse generator settings when the chopped pulse profile mode is activated:

- The width of the sync signal pulse (*Gen 1*) is set equal to the time resolution. The sync signal controls the width and timing of the measurement intervals in chopped pulse profile mode. After each sequence of n measurements, the sync signal is delayed by one pulse width so that the next measurement interval is reached.
- The period of the pulse generator signal (*Single Pulse Period* or *Pulse Train Period*, depending on the selected *Pulse Type*) is increased to the next integer multiple of the time resolution.
- The number of sweep points k is calculated as the ratio of the extended pulse period to the time resolution.
- The IF bandwidth is set to 1 over ten times the extended pulse period, and a high selectivity filter is used.



- *Time Resolution* selects the distance between two CW time sweep points in the chopped pulse profile measurement; see background information above. The width of the sync signal is always equal to the time resolution. Changing one value also affects the other.
- *Activate* enables the chopped pulse profile mode and adjusts the channel settings as described above.

- *Off* disables the chopped pulse profile mode. All other settings are left unchanged.



In remote control it is possible to skip measurement intervals (and thus accelerate the measurement, at the expense of the number of sweep points) by increasing the *Delay Increment* parameter.

Remote control: `[SENSe<Ch>:]PULSe:GENerator2:WIDTh`
`[SENSe<Ch>:]PULSe:GENerator<gen_no>:CPPRoFile`
`[SENSe<Ch>:]PULSe:GENerator<gen_no>:DINCrement`

File Format for Pulse Train Definitions

The analyzer uses a simple ASCII format to export **pulse train** definitions. By default, the pulse train file has the extension *.train and is stored in the directory shown in the *Save Pulse Train* and *Recall Pulse Train* dialogs. The file starts with a preamble containing the channel, the *Pulse Train Period*, and the *Pulse Delay (to Sync)* value. The following lines contain the entries of all editable columns of the list.



Example of a pulse train definition file

The pulse train definition:

#	Active	Start High Signal	Stop High Signal
1	☒	0 s	12.5 ns
2	☒	50 ns	62.5 ns
3	☒	100 ns	112.5 ns

is described by the pulse train file:

```
# version 1.00
#
# channel 1
# Pulse Train Period: 5.000000000000E-005 s
# Pulse Delay (to Sync): 0.000000000000E+000 s
# active, Start High Signal[s], Stop High Signal[s],
true, 0.000000000000E+000, 1.150000000000E-005,
true, 5.000000000000E-006, 6.250000000000E-006,
true, 1.000000000000E-005, 1.125000000000E-005,
```

Remote control: `MMEMory:LOAD:PTRain`
`MMEMory:STORe:PTRain`

Number of Points

Sets the total number of measurement points per sweep. The minimum number of points is 1 (measurement at a single frequency/power/time value).

Number of Points:

Together with the sweep range defined with the *Stimulus* settings, this parameter defines the grid of sweep points. The sweep points are equidistantly distributed over the entire sweep range: The step width between two consecutive sweep points is constant on a linear scale (**sweep types** *Lin. Frequency*, *Time* and *CW Mode*) or on a logarithmic scale (sweep types *Log. Frequency* and *Power*).

In *Segmented Frequency* sweeps, the number of points can be set independently for each segment; see

Define Segments.

As an alternative to the *Number of Points*, the *Stimulus Step Size* can be set.



Measurement time and screen resolution

A large number of points improves the resolution of the trace but increases the measurement time.

The overall measurement time is composed of a hardware settling time at the beginning of the sweep plus the sum of the measurement times at each individual sweep point. This implies that the measurement time increases roughly linearly with the number of points.



After changing the channel settings or selecting another measured quantity, the analyzer needs some time to initialize the new sweep. This preparation period increases with the number of points and the number of partial measurements involved. It is visualized by a Preparing Sweep symbol in the [status bar](#):

Preparing Sweep

All analyzer settings can still be changed during sweep initialization. If necessary, the analyzer terminates the current initialization and starts a new preparation period.

Remote control: [SENSe<Ch>:] SWEep:POINTs

Frequency Step Size

Sets the distance between two consecutive frequency sweep points.

Stimulus Step Size: 100 MHz 

The step size is an alternative to the *Number of Points* setting:

- If the sweep range is defined by means of the *Start* and *Stop* variables, both the *Stop* value and the *Number of Points* can vary as the *Frequency Step Size* is changed. The *Stop* value is changed as little as possible so that the condition $\text{Frequency Step Size} = (\text{Stop} - \text{Start}) / (\text{Number of Points} - 1)$ can be fulfilled. Changing the *Start* and *Stop* values modifies the *Frequency Step Size*.
- If the sweep range is defined by means of the *Center* and *Span* variables, both the *Span* value and the *Number of Points* can vary as the *Stimulus Step Size* is changed. The *Span* is reduced as little as possible so that the condition $\text{Frequency Step Size} = (\text{Stop} - \text{Start}) / (\text{Number of Points} - 1)$ can be fulfilled. Changing the *Span* modifies the *Frequency Step Size*.



This setting is valid for linear frequency sweeps only. It does not apply to logarithmic and segmented sweeps, power, time or CW Mode sweeps. Decreasing the Frequency Step Size generally increases the measurement time.

Remote control: [SENSe<Ch>:] SWEep:STEP

Sweep Time

Opens a dialog to vary the measurement time for a sweep or delay the start of each sweep. Note that these are only approximate values.



- *Auto* minimizes the sweep time. If this option is checked, the input fields *Sweep Time* and *Meas. Delay* can not be edited. *Sweep Time* indicates the estimated sweep time, taking into account the current measurement settings, the *Meas. Delay* is 0 s. The *Sweep Time* and *Meas. Delay* values are maintained until changed explicitly if *Auto* is switched off.
- *Sweep Time* is the total measurement time for the sweep. The minimum sweep time to be set is equal to the estimated value in the *Auto* mode. Setting a larger sweep time is equivalent to defining a *Meas. Delay* before each partial measurement.
- *Meas. Delay* sets a delay time allowing the DUT to settle before the hardware settings of the analyzer are changed and a new partial measurement is started.



Meas. Delay

A delay time before the start of each partial measurement increases the accuracy, in particular in measurements on DUTs with long settling times (e.g. quartz oscillators, SAW filters). As an alternative to increasing the delay (and thus the total sweep time), it is possible to select *Alternate* sweep.

The *Auto* and *Sweep Time* settings are not active in the *Time* and *CW Mode* sweep types. The *Meas. Delay* is taken into account for all sweep types.

In *Segmented Frequency* sweeps, the sweep time parameters can be set independently for each segment; see *Define Segments*. *Sweep Time* opens a message box indicating to total sweep time, i.e. the sum of the individual sweep segment times.



In general, the system error correction is no longer valid after a change of the sweep time. The message *Cal?* appears in the trace list.

Remote control: [SENSe<Ch>:] SWEep:TIME:AUTO
[SENSe<Ch>:] SWEep:TIME
[SENSe<Ch>:] SWEep:DWELL

Trigger

The *Trigger* submenu selects the source of the trigger signal and provides additional *Trigger Settings*.




Trigger system of the analyzer

The trigger system is used to synchronize the analyzer's actions with events that can be provided by an internal or external signal or user-generated (*Manual Trigger*). Triggered measurements are an alternative to the default mode (*Free Run*, *Continuous Sweep*), where the measurement is continuously repeated without fixed time reference.

Any trigger event may start an entire sweep or a part of it. Moreover, it is possible to switch off the RF source between consecutive triggered measurement sequences, and to define a delay between trigger events and the measurement sequences.



The trigger settings are also valid for calibration sweeps (see [Measure Standards](#) dialog). This means that, in external trigger mode, the external trigger signal must be available during the system error correction, too. To start the calibration sweeps without delay, use the Free Run trigger type.

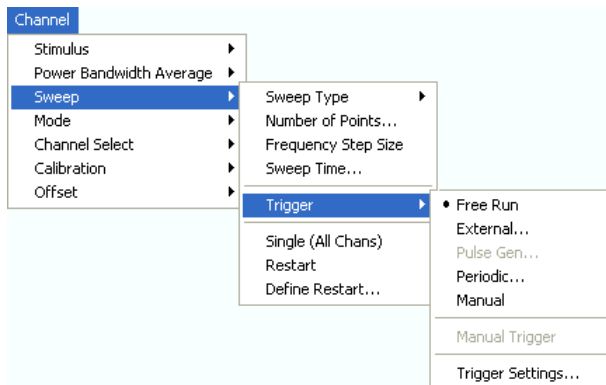

- **Free Run** is the default trigger mode. A new measurement is started immediately without waiting for a trigger signal and without fixed time reference.
- The **External** trigger signal is applied to the *EXT TRIGGER* or *USER CONTROL* connector at the rear panel.
- The **Pulse Gen** trigger signal is generated by the internal pulse generator of the analyzer
- The **Periodic** trigger signal is provided by an internal clock generator.
- In **Manual** trigger mode, the trigger signal is generated on pressing the *Manual Trigger* softkey.
- **Trigger Settings** opens a dialog to specify the operation that the analyzer carries out after receiving a trigger event.

Free Run

In *Free Run* mode a new measurement is started immediately without waiting for a trigger event and without fixed time reference. The **Trigger Settings** are not valid.

Free Run means that a measurement in *Continuous Sweep* mode is repeated as fast as possible.

Remote control: `TRIGger[:SEquence]:SOURce IMMEDIATE`

External

In *External* trigger mode the measurement is triggered by a low-voltage (3.3 V) external TTL signal applied either to the BNC connector **EXT TRIGGER** or to pin 2 of the **USER CONTROL** connector at the rear panel. The two trigger inputs are equivalent; no additional setting for signal routing is required.

Selecting *External* opens a dialog to select whether the rising or the falling edge of the external trigger signal provides the trigger event.



The period of the external trigger signal should be adjusted to the [triggered measurement sequence](#). If the analyzer receives a trigger event while the last sequence is still running, the trigger event is skipped and a message *Trigger event missed* is displayed.

Remote control: `TRIGger[:SEquence]:SOURce EXTernal`
`TRIGger[:SEquence]:SLOPe`

Pulse Gen

In *Pulse Gen* trigger mode the measurement is triggered by the internal [pulse generator](#) signals. The pulse generator trigger must be enabled explicitly when the pulse generator is used for pulsed measurements. The trigger is unavailable while the pulse generator is turned off.

Selecting *Pulse Gen* opens a dialog to select whether the rising or the falling edge of the *Sync* signal (*Gen 2*) or of the *Pulse* generator signal (*Gen 1*) provides the trigger event.



The propagation time of the *Pulse Gen Trigger* signal delays the start of the measurement. For an R&S ZVA24 which is connected to an R&S ZVAX24 extension unit, data acquisition starts approx. 150 ns after the rising edge of the RF signal.

Remote control: `TRIGger[:SEquence]:SOURce PGENerator`
`TRIGger[:SEquence]:PULSe`

Periodic

In *Periodic* trigger mode the measurement is triggered by the periodic signal of an internal clock generator. Selecting *Periodic* opens the numeric entry bar to select the trigger period.




The minimum trigger period that can be set corresponds to the estimated duration of the [triggered measurement sequence](#).



Time sweep

The periodic trigger is incompatible with *Time* sweeps: If a *Time* sweep is selected while the periodic trigger is active, the analyzer generates an error message:

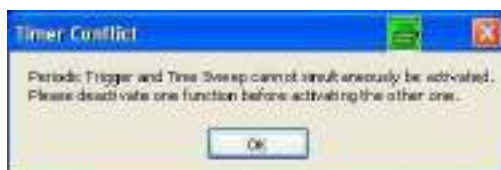

To continue, click *OK* and select any other trigger or sweep type (e.g. *CW Mode*).

Remote control: `TRIGger[:SEquence]:SOURce TIMer`
`TRIGger[:SEquence]:TIMer`


Manual

In *Manual* trigger mode the trigger signal is generated on pressing the *Manual Trigger* softkey. *Manual Trigger* is disabled unless manual trigger mode is active.

Remote control: `TRIGger[:SEquence]:SOURce MANual`
`*TRG`

Trigger Settings

Trigger Settings opens a dialog to specify the operation that the analyzer carries out after receiving a trigger event.

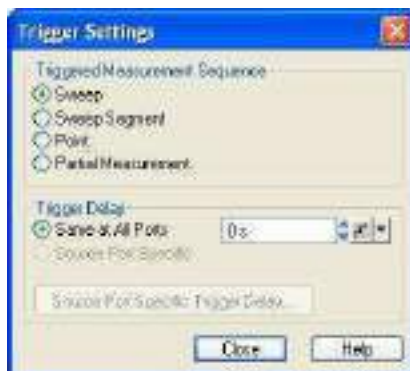

The dialog is divided into the following panels (for a detailed description refer to the following sections):


- *Triggered Meas. Sequence* selects the measurement cycle or sequence of actions to be triggered.
- *Trigger Delay* specifies a delay time between the trigger event and the start of the measurement. If the triggered measurement sequence is a *Partial Measurement*, it is possible to define source port-specific trigger delays.



NOTE The *Trigger Settings* are valid for all trigger modes except *Free Run*. Some trigger settings are incompatible with other measurement settings; see below.

Triggered Meas. Sequence

Selects the measurement cycle or sequence of actions to be triggered.

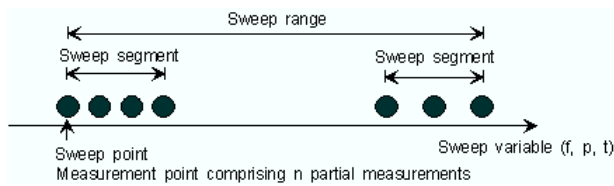

- *Sweep* means that each trigger event starts an entire sweep, according to the current sweep configuration.
- *Sweep Segment* means that each trigger event starts the next sweep segment within the current sweep. If a sweep type other than *Segmented Sweep* is active, this option is equivalent to *Sweep*.
- *Point* means that each trigger event starts the measurement at the next sweep point.
- *Partial Measurement* means that each trigger event starts the next partial measurement at the current or at the next sweep point. If each measurement points requires only one partial measurement, this option is equivalent to *Point*.

See also background information in section [Alternating Sweeps](#).



Relation to other sweep settings

Some sweep settings are logically incompatible with a particular selection of the *Triggered Meas. Sequence*:

- If a *Time* sweep is performed, the *Triggered Meas. Sequence* is always a sweep.
- *Alternating* sweep mode only differs from normal sweep mode if the measurement sequence comprises more than one sweep point and more than one partial measurement. If *Point* is selected, *Alternating Sweeps* has no effect.



The period of the trigger events should be adjusted to the triggered measurement sequence. If the analyzer receives a trigger event while the last sequence is still running, the trigger event is skipped and a message *Trigger event missed* is displayed.

Remote control: `TRIGger[:SEquence]:LINK`

Trigger Delay

Specifies a delay time between the trigger event and the start of the measurement. If the triggered measurement sequence is a *Partial Measurement*, it is possible to define source port-specific trigger delays. For an overview of trigger timing scenarios see background information in section [Alternating Sweeps](#).



The delay time entered must be zero or positive, so that the trigger event precedes the start of the measurement (post-trigger).

Remote control: `TRIGger[:SEquence]:HOLDoff`
`TRIGger[:SEquence]:HOLDoff:GENerator<Gen>`
`TRIGger[:SEquence]:HOLDoff:MODE`
`TRIGger[:SEquence]:HOLDoff:PORT<Pt>`

Single (All Chans)

Toggles between single sweep and continuous sweep mode.

- In continuous mode (*Single (All Chans)* not selected), the analyzer measures continuously, repeating the current sweep.
- In single sweep mode, the measurement is stopped after the number of sweeps selected in the [Define Restart](#) dialog.



Press *Single* to activate the single sweep mode and start a single sweep sequence. To start further sweep sequences press [Restart](#).

Remote control: `INITiate<Ch>:CONTinuous ON | OFF`

Restart

Stops the ongoing measurement and restarts a new measurement sequence. In [Single](#) sweep mode a new single sweep sequence is started, according to the *Define Restart* settings.



It is possible to set all traces to zero when a *Restart* is executed; see *System – System Config – General – Restart Behavior*.

Remote control: `ABORt`
`INITiate<Ch>[:IMMediate]`

Define Restart

Opens a dialog to configure the [Single](#) sweep mode.



- *Number of Sweeps* selects the number of sweeps to be measured in single sweep mode: either one (*Single Sweep*) or a group of consecutive sweeps.
- *Scope* defines whether the active sweep mode (single or continuous) and the *Number of Sweeps* are valid for the *Active Channel* only or for *All Channels* in the active setup. If *All Channels* is selected, the number of sweeps in the single sweep sequence is equal to the selected *Number of Sweeps* times the number of channels. The sequence starts with the first sweep in channel no. 1.



In remote control, it is possible to retrieve the results acquired in any of the sweeps within a single sweep group; see [Sweep History](#).

Remote control: `[SENSe<Ch>:]SWEep:COUNT`
`INITiate<Ch>:IMMediate:SCOPE`

Define Busy Signal

Opens a dialog to configure the BUSY output signal at pin no. 4 of the **USER CONTROL** connector on the rear panel of the analyzer.




- *Auto* couples the BUSY signal to the active [triggered measurement sequence](#) (*Channel – Sweep – Trigger – Trigger Settings*). After a *Preset*, the analyzer triggers an entire sweep. The BUSY signal is turned on ("High" state) when the analyzer acquires the first partial measurement data of the first sweep point. It returns to "Low" state after the last partial measurement of the last sweep point has been acquired.
- The remaining settings select a fixed behavior. The BUSY signal monitors the duration of a sweep, sweep segment, sweep point, or partial measurement.



In [Alternating](#) sweep mode, the BUSY signal can be used to monitor either each *Partial Measurement* or the entire *Sweep*. Avoid the busy signal settings *Point* or *Sweep Segment* in combination with alternating mode, since they may cause misleading results. In multi-channel setups where the busy signal monitors an entire sweep, the exact behavior depends on the restart scope (*Channel – Sweep – Define Restart – Scope*). The busy signal is active over *All Channels* or over the *Active Channel*, depending on the restart scope settings.

The BUSY signal monitors the **data acquisition** phase, irrespective of the time required for sweep


preparation and subsequent data processing stages.

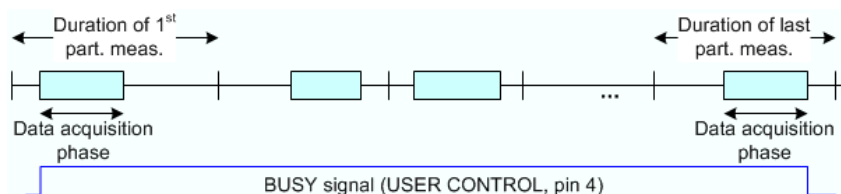

Remote control: `OUTPut<Ch>:UPORt:BUSY:LINK`

Mode

The *Mode* menu defines the properties of the physical and logical (balanced) test ports, configures the source signals and the receiver, and provides special measurement modes. Many of the measurement modes require option R&S ZVA-K4, *Arbitrary Generator and Receiver Frequencies*.

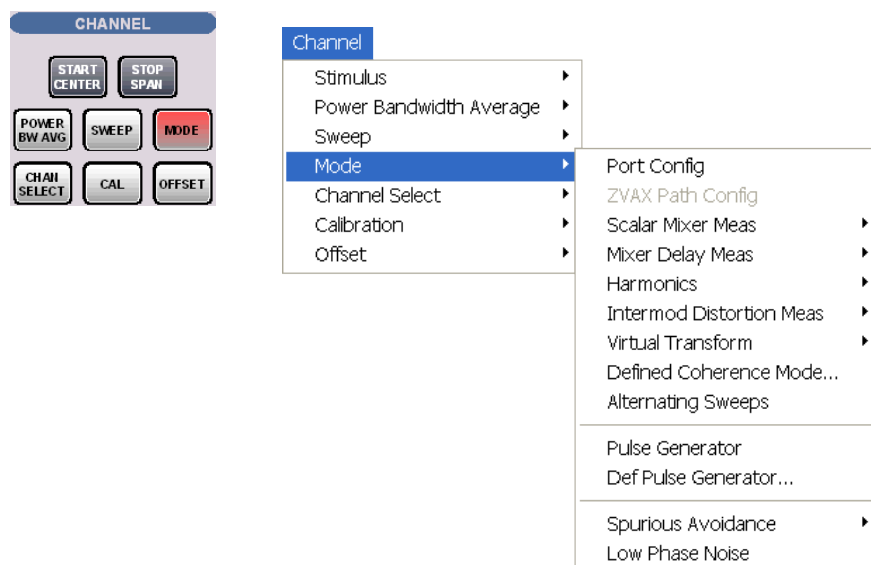

The items in the submenu depend on the analyzer type and on the installed options.


- [Port Config...](#) opens a dialog to define the properties of the test ports, the source and the receiver.
- [Scalar Mixer Meas](#) measures the mixing products generated by an external mixer that is supplied with two independent RF signals.
- [Mixer Delay Meas](#) gives access to the measurement of the absolute or relative group delay of a mixer.
- [Harmonics](#) provides arbitrary harmonic distortion measurements including power calibration.
- [Intermod Distortion Meas](#) opens a submenu to control intermodulation distortion measurements including power calibration.
- [Noise Figure Meas](#) configures and activates the measurement of the noise figure of a DUT.
- [Virtual Transform](#) defines the parameters of a virtual matching network to be used for

embedding/deembedding a DUT with single ended or balanced ports.

- [Defined Coherence Mode...](#) activates the operating mode where the analyzer generates several continuous signals with specific relative amplitude and phase (with option R&S ZVA-K6, *True Differential Mode*)
- [Alternating Sweeps](#) activates or deactivates the operating mode where the analyzer performs only one partial measurement per sweep.
- [Pulse Generator](#) turns the pulse generator on or off.
- [Def Pulse Generator](#) defines the properties of the pulse generator signals.
- [Spurious Avoidance](#) defines the relative position of the local oscillator (LO) relative to the RF input signal.
- [Low Phase Noise](#) reduces the phase noise of the source signals.
- [ZVAX Path Config](#) configures the RF signal paths in the Extension Unit R&S ZVAX24 and the installed hardware modules. This menu item is unavailable if no RZS ZVAX24 unit is connected.
- [ZVAX-TRM Config](#) configures the RF signal paths in the Extension Unit R&S ZVAX-TRM and the installed hardware modules. This menu item is unavailable if no R&S ZVAX-TRM unit is connected.

Port Configuration

The *Port Configuration* dialog defines the properties of the test ports and configures the source signals and the receiver.

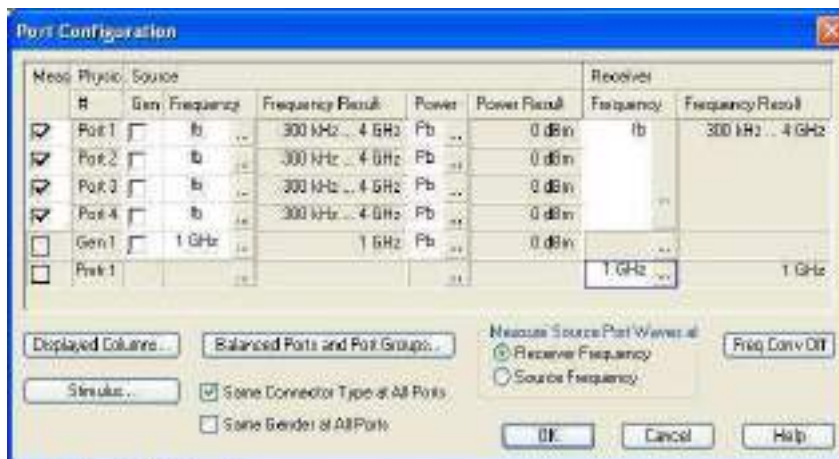

The table in the *Port Configuration* dialog contains the individual test port properties. Each table row corresponds to one logical or physical port; the number of rows is equal to the number of test ports of the analyzer.



Many measurement tasks can be performed with default port settings. Consequently the *Port Configuration* dialog does not show all columns in its default configuration. Use the [Displayed Columns](#) button to customize the table and display or hide columns.



Measured Ports (Meas/Group)

The measured ports are selected using the *Meas* column of the *Port Configuration* table. A measured port

can either be a source and receive port or a pure receive port (*RF Off* in the *Source* section).

Measurements do not necessarily require all of the physical or logical ports of the network analyzer. To save measurement time, it is recommended to restrict the measurement to the ports that are actually needed. To understand why, note that for certain measurement parameters the analyzer will actually perform a measurement at each of the measured ports. For example, the calculation of Z_{11} requires the knowledge of the whole scattering matrix of the device under test. So if a Z_{11} trace is active and all *Meas* flags are set, then the analyzer performs a measurement of all ports. If only port 1's *Meas* flag is set, then only a measurement of port 1 is performed. Similar logic applies to the calculation of other Z- and Y-parameters.

After an n-port (automatic or manual) system error correction, only the *Meas* flags of calibrated ports are set. Loading a set of calibration data also automatically adjusts the selection of measured ports.

It is possible though to re-enable uncalibrated ports manually in order to obtain additional (uncalibrated) measurement results. For example, adding a trace for S_{ij} automatically sets the *Meas* flags for ports *i* and *j*.

If one or more port groups to be measured are defined in the [Port Groups](#) tab of the *Balanced Ports and Port Groups* dialog, then the column header changes from *Meas.* to *Group* and the column shows the group names (capital letters).

The settings are grouped together in four sections:

- [Logical Port](#) shows the properties of the balanced ports after they have been defined in the *Balanced Port and Port Groups* dialog. This section is hidden if no balanced ports are defined.
- [Physical Port](#) shows and/or defines the properties of the physical (unbalanced) ports of the analyzer.
- [Source](#) shows and/or defines the generator settings at each physical port of the analyzer.
- [Receiver](#) shows and/or defines the receiver settings at each physical port of the analyzer.

Below the table, three buttons open additional dialogs:

- [Displayed Columns...](#) customizes the port configuration table by displaying or hiding columns.
- [Balanced Ports and Port Groups...](#) selects a balanced port configuration and defines the reference impedances at the ports.
- [Stimulus](#) modifies all sweep frequencies and powers in the active channel, based on an arbitrary frequency and power reference.

The dialog contains the following additional controls:

- If *Same Connector Type at All Ports* is active, the connector types at all ports (but not necessarily their gender) are always adjusted to the current selection in the *Connector* column.
- If *Same Gender at All Ports* is active, the connector genders at all ports (but not necessarily their types) are always adjusted to the current selection in the *Connector* column.
- *Measure Source Port Waves at* qualifies whether the waves at each source port are measured at the selected receiver or source frequency. The setting affects both the reference receiver (waves a_n) and the measurement receiver (waves b_n) while port *n* is used as a source port. Adjust the setting to the test setup and the measured quantity.
- *Freq Conv Off* disables all power and frequency-converting modes, i.e. it resets all port frequencies to the basic channel frequency and the power to the base power of the channel, resets *Measure Source Port Waves at* to *Receiver Frequency* and disables frequency-converting measurements such as the *Harmonics* and the *Mixer* measurements (with option R&S ZVA-K4).

S-parameter measurements for port configurations with different frequencies are not fully supported; see [S-Parameters in Frequency-Converting Modes](#).

Remote control: `SOURce<Ch>:GROup<group_no>:PORTs`
`[SENSe<Ch>:]CORRection:COLLect:CONNection:PORTs ALL | SINGLE`
`[SENSe<Ch>:]CORRection:COLLect:CONNection:GENDerS ALL | SINGLE`
`[SENSe<Ch>:]FREQuency:CONVersion:AWReceiver[:STATe]`

Logical Port

Defines the properties of the logical (balanced) ports defined in the *Balanced Port and Port Groups* dialog. To display this section, at least one balanced port configuration must be defined and *Logical Ports – Ref Impedance* must be selected in the *Displayed Columns* dialog.

Logical Port	
#	Ref Impedance
	DM: $100\ \Omega + j0\ \Omega$
1	CM: $25\ \Omega + j0\ \Omega$
2	$50\ \Omega + j0\ \Omega$
3	$50\ \Omega + j0\ \Omega$


- # is the port number of the logical port. This number is independent of the physical port numbers and of the ports that are combined to form a balanced port.
- Ref Impedance shows the complex reference impedances of the ports.



Reference impedance settings

The default reference impedance for a physical port is equal to the reference impedance of the connector type assigned to the port but can be defined as an arbitrary complex value (renormalization of port impedances). By changing the reference impedance, it is possible to convert the measured values at $50\ \Omega$ ($75\ \Omega$) into values at arbitrary port impedances. For details refer to section *Virtual Transform – Reference Impedances*.

For balanced ports it is possible to define separate complex reference impedances for differential and for common mode.

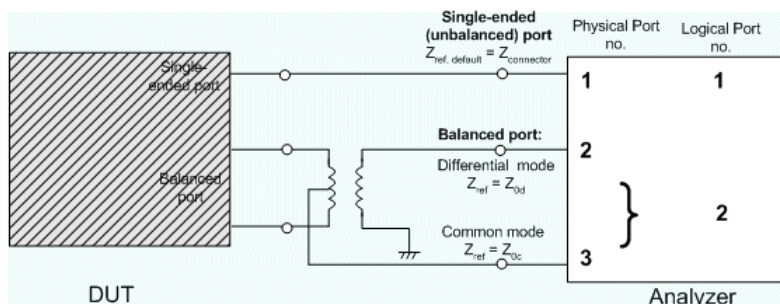

The default values for the balanced port reference impedances are derived from the default reference impedance of the physical analyzer ports ($Z_0 = 50\ \Omega$):

- The default value for the differential mode is $Z_{od} = 100\ \Omega = 2 \cdot Z_0$.
- The default value for the common mode is $Z_{oc} = 25\ \Omega = Z_0/2$.

Remote control: `SENSe:PORT<phys_port>:ZREFerence <real> [,<imaginary>]`
`SENSe:LPORT<log_port>:ZCOMmon <real> [,<imaginary>]`
`SENSe:LPORT<log_port>:ZDIFferent <real> [,<imaginary>]`

CALCulate<Chn>:TRANSform:IMPedance:RNORmal TWAVes | PWAVes

Physical Port

Shows and/or defines the properties of the physical (unbalanced) ports of the analyzer.

Physical Port			
#	Instrum.	Connector	Ref. Impedance
Port 1	ZVA8	N 50 Ω (f)	50 Ω + j0 Ω
Port 2	ZVA8	N 50 Ω (f)	50 Ω + j0 Ω
Port 3	ZVA8	N 50 Ω (f)	50 Ω + j0 Ω
Port 4	ZVA8	N 50 Ω (f)	50 Ω + j0 Ω
Gen 1	SHP02		
Power 1			

- # is the test port number of the analyzer as shown on the front panel. External [generators](#) and [power meters](#) configured in the *System Configuration* dialog are also shown in the list of physical ports.
- *Instrum.* shows the network analyzer type (e.g. ZVA8, ZVA24). The types of external generators and power meters are also displayed in this column.
- *Connector* opens a drop-down list to select the *connector type*. An (f) behind the connector type denotes female connectors, an (m) denotes male connectors. Symmetric (sexless) connectors (e.g. PC7) are not labeled. User-defined connectors can be added or removed in the [Available Connector Types](#) dialog, which is opened from the Channel – Calibration – Calibration Kits dialog. at the port and its gender. If *Same Connector at All Ports* is active, the connector types at all ports (but not their gender) are always adjusted to the current selection.
- *Ref. Impedance* shows the adjustable complex reference impedances of the physical port. For background information refer to [Reference Impedances](#). If a balanced port configuration is active the reference impedance settings for all ports are displayed in the [Logical Port](#) section. For external generators and frequency converters, no reference impedance settings are available. The reference impedance for external power meters must be real; no wave theory selection is required. If a value $\text{Re}(Z_0)$ other than 50 Ω is entered, the power result from the power meter is multiplied by the factor $50 \text{ Ω} / \text{Re}(Z_0)$ (conversion of the reported power to a voltage at 50 Ω, then re-conversion to a power using $\text{Re}(Z_0)$).



To perform a system error correction, the physical port must be available as a source and receive port. This condition is met if it is selected as a measured port in the [Balanced Ports and Port Groups](#) dialog (Meas is on).

Remote control: `[SENSe<Ch>:]CORRection:COLLect:CONNection<port_no>`
`[SENSe<Ch>:]CORRection:COLLect:SCONNection<port_no>`
`[SENSe<Ch>:]CORRection:COLLect:CONNection:PORTs ALL | SINGLE`
`SENSe:PORT<phys_port>:ZREFerence <real> [,<imaginary>]`

Source (Most Settings for R&S ZVA and R&S ZVT Analyzers)

Shows and/or defines the RF generator settings for each physical port of the analyzer and for each external generator. No source settings are provided for external power meters.



Most of the settings in this section require option ZVA-K4, Arbitrary Generator and Receiver

Frequencies. This option is available for ZVA and ZVT network analyzers only.

Source									
RF Off	Gen	Frequency	Frequency Result	Power	Power Result	PCor Off	Slope		
☐	☐	fb ...	300 kHz ... 8 GHz	Pb ...	0 dBm		0 dB/GHz		
☐	☐	fb ...	300 kHz ... 8 GHz	Pb ...	0 dBm		0 dB/GHz		
☐	☐	fb ...	300 kHz ... 8 GHz	Pb ...	0 dBm		0 dB/GHz		
☐	☐	fb ...	300 kHz ... 8 GHz	Pb ...	0 dBm		0 dB/GHz		
☐	☒	fb ...	300 kHz ... 8 GHz	Pb ...	0 dBm		0 dB/GHz		

- **RF Off** switches the RF signal source at the port off (box checked) or on for measurements in the related channel. *Dependencies:* The column is disabled (grayed) while the RF power is switched off globally for the active channel. The settings are restored as soon as the RF power is switched on again. RF Off and Meas are independent from each other: While the RF power is switched off, the port is not necessarily excluded from the measurement, it can still be used as a receive port. On the other hand, an excluded port (Meas = Off) can still be used as an RF signal source. The exact behavior of RF Off is part of the system configuration; refer to the description of the [Power](#) tab.

The RF sources must be switched on to perform a system error correction or a power calibration. In both cases, the analyzer checks whether any of the required source ports is switched off and displays a warning, if required.

- **Gen** qualifies whether the RF signal source at the port is switched on for all partial measurements (box checked, permanent signal source) or only for the partial measurements that require the port as a drive port. *Dependencies:* Gen has no effect unless the RF source at the port is switched on (RF Off is not checked). A port which is excluded from the measurement (Meas = Off) can still be used as a permanent RF signal source. If Gen is on, for most analyzers the source frequencies at port 1 and 2 and at port 3 and 4 are coupled; see note on coupled test ports below. Gen is unavailable in [true differential mode](#).



External generators

An external generator always represents a permanent signal source that is switched on for all partial measurements. *Gen* qualifies whether or not the generator is actually available as a signal source in the test setup.

The analyzer provides two alternative ways of selecting a generator as a signal source:

- *Gen: On* in the *Port Configuration* dialog, especially if the generator is not assigned to a particular measured quantity or drive port.
- Selection as a source for a particular measured quantity or for a power calibration, see e.g. [More Wave Quantities](#).

The two selection mechanisms are independent from each other.



Permanent vs. intermittent RF signal source

Switching on the signal source permanently eliminates the power settling times of the DUT but may introduce measurement inaccuracies, e.g. due to crosstalk between two ports. Therefore, the parameter must be switched off to perform a [system error correction](#).


- **Frequency** opens an input box to define a [port-specific stimulus frequency](#) range (for frequency sweeps) or CW frequency (for power, time and CW Mode sweeps). In the default configuration the [stimulus parameters](#) (sweep range, CW Frequency) are used. The result is displayed in the *Frequency Result* column. A red *Frequency* field indicates that the hardware limits are exceeded, e.g. if the default sweep range of the analyzer is beyond the frequency range of the external

generator. The port-specific frequency for frequency converter ports can be defined in a separate dialog; see [Converter Port <n> Frequency](#).



Coupled test ports

For most R&S ZVA analyzers ports 2k-1 and 2k are supplied by a common generator as shown below.

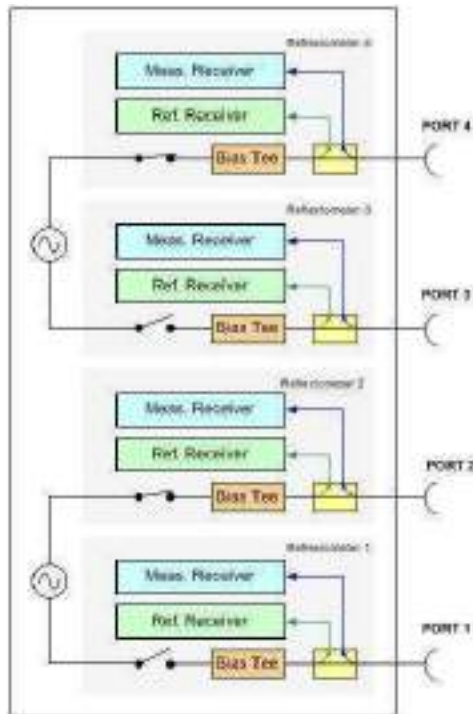

If the RF signal is simultaneously fed to two coupled ports (i.e. if *Gen* is switched on so that at least one signal source is permanent), the port frequencies must be the same. For normal measurements (*Gen* switched off), this restriction does not apply because there is only one source port per partial measurement.

The frequency formula for a permanent signal source is also used for the second (coupled) test port.



On R&S ZVA67 and on R&S ZVA24/40 network analyzers with four ports and four generators (order nos. 1145.1110.28/48), all four ports have independent internal sources. You can configure and combine the ports without restrictions.

- *Frequency Result* displays the current frequency range (for frequency sweeps) or CW frequency (for power, time and CW Mode sweeps); see [stimulus parameters](#).
- *Power* opens an input box to define a [port-specific source power](#) range (for power sweeps) or fixed power (for frequency and CW sweeps). The result (not taking into account a possible *Slope*) is indicated in the *Power Result* column. In the default configuration the [stimulus parameters](#) (sweep range, internal source *Power*) are used. The port-specific power for frequency converter ports can be defined in a separate dialog; see [Converter Port <n> Power](#).
- *Power Result* displays the current power range (for power sweeps) or fixed internal source power (for frequency, time and CW Mode sweeps); see [stimulus parameters](#).
- *PCor Off* enables or disables a source power calibration for an individual port. This function is available only for ports where a source power calibration is available. It is identical with *Source Power Correction Off* in the [Source Power Cal](#) menu.

- *Slope* defines a linear factor to modify the [port-specific source power](#) as a function of the stimulus frequency. The *Slope* factor increases the power at each sweep point by the following amount: Power --> Power + <Slope>*<Stimulus Frequency>. *Slope* is valid for all sweep types.



Impact of the Slope

The channel base power *pb* is defined by the following sweep settings:

- For a power sweep, the channel base power is equal to the [stimulus range](#).
- For a frequency or CW sweep, the channel base power is a fixed [Power](#) value.

The slope modifies the channel power *pb* so that the following source power *ps* is obtained at the ports:

$$ps = pb + \text{<Slope>} * f$$

In the formula above, *f* denotes the (current) source port frequency.

Examples:

1. Select a frequency sweep with a sweep range between 1 GHz and 4 GHz and set <Power> = 0 dBm, <Slope> = 2 dB/GHz. Across the sweep range, the stimulus power increases linearly between 2 dBm and 8 dBm.
2. Maintain the <Slope> setting and select a power sweep with a CW frequency of 1 GHz and a power sweep range between –25 dBm and 0 dBm. Due to the slope factor, the actual stimulus power varies between –23 dBm and +2 dBm.


With option R&S ZVA-K4, the source power can be modified; see [Port-Specific Power](#).

Remote control: `SOURce<Ch>:POWer<Pt>:STATe ON | OFF`
`SOURce<Ch>:POWer<Pt>:GENerator:STATe ON | OFF`
`SOURce<Ch>:POWer<Pt>:PERManent[:STATe] ON | OFF`
`[SENSe<Ch>:]FREQuency:START?`
`[SENSe<Ch>:]FREQuency:STOP?`
`[SENSe<Ch>:]SWEp:CW|FIXed?`
`SOURce<Ch>:POWer<Pt>[:LEVel][:IMMediate]:OFFSet`
`SOURce<Ch>:POWer[:LEVel][:IMMediate][:AMPlitude]?`
`SOURce<Ch>:POWer<Pt>:CORRection[:STATe]`
`SOURce<Ch>:POWer<Pt>[:LEVel][:IMMediate]:SLOPe`
`SOURce<Ch>:POWer<Pt>:GENerator<Gen>:OFFSet`
`SOURce<Ch>:POWer<Pt>:GENerator<Gen>:PERManent[:STATe]`

Receiver (Most Settings for R&S ZVA and R&S ZVT Analyzers)

Shows and/or defines the receiver settings for each physical port of the analyzer and each external power meter. No receiver settings are provided for external generators.

Some receiver settings can be defined independently for the reference channel a (the wave generated by the internal source and measured at the port) and the measurement channel b (the wave from the DUT) at each port.

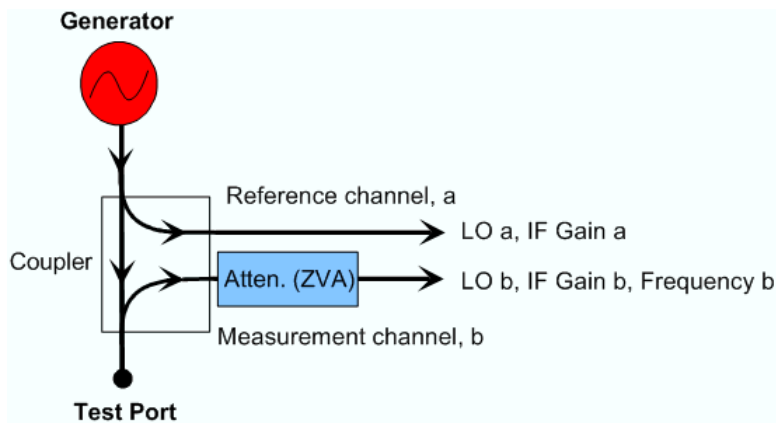

Most of the settings in this section require option ZVA-K4, Arbitrary Generator and Receiver Frequencies. This option is available for ZVA and ZVT network analyzers only.

Receiver									
LO a	LO b	Frequency	Frequency	Δ Freq a',b'	Frequency a',b' Result	PCor	Atten	IF Gain a	IF Gain b
☒	☒	fb - 300 kHz	1.9997 GHz ...	0 Hz	1.9997 GHz ... 7.9947 GHz		0 dB	Auto	Auto
☒	☒		7.9947 GHz	0 Hz	1.9997 GHz ... 7.9947 GHz		0 dB	Auto	Auto
☒	☒			0 Hz	1.9997 GHz ... 7.9947 GHz		0 dB	Auto	Auto
☒	☒			0 Hz	1.9997 GHz ... 7.9947 GHz		0 dB	Auto	Auto
		fb ...	2 GHz ...		2 GHz ... 7.995 GHz				

- LO a/b switch the two Local Oscillator amplifiers at the port on (box checked) or off. Both LOs must be switched on to perform a [system error correction](#).
- Frequency opens an input box to define a converted [receiver frequency](#) range (for frequency sweeps) or CW frequency (for power, time and CW Mode sweeps). The converted receiver frequencies are valid for all ports. In the default configuration the [stimulus parameters](#) (sweep range, CW Frequency) are used. The result is indicated in the *Frequency Result* column.
- Frequency Result displays the current frequency range (for frequency sweeps) or CW frequency (for power, time and CW Mode sweeps); see [stimulus parameters](#).
- PCor Off enables or disables a receiver power calibration for an individual port. This function is available only for ports where a receiver power calibration is available. It is identical with *Receiver Power Correction Off* in the [Receiver Power Cal](#) menu.
- Δ Frequency a', b' defines the port-specific frequency offset of the primed wave quantities relative to the unprimed quantities; see [Measurements at Different Frequencies](#). The port-specific offset is added to the common frequency offset (*Frequency...*). The result is indicated in the *Frequency a', b' Result* column.
- Atten defines port-specific attenuation factors for the received wave. The settings are analogous to the global [Step Attenuator](#) settings and replace them.
- IF Gain a and IF Gain b select the IF gain in the reference receiver and measurement receiver path, respectively. IF Gain a is not available on R&S ZVT20 analyzers.



Receiver path settings and AGC

The IF Gain settings are valid for all ports:

- Auto means that the analyzer adapts the IF gain to the RF input level (Automatic or Adaptive Gain

Control, AGC). The A/D converter is always operated at optimum input level.

The following settings accelerate the measurement:

- *Low Dist(ortion)* corresponds to a small IF gain (i.e. a lower internal A/D converter input level). This setting allows for a high RF overdrive reserve and is appropriate for high RF input levels.
- *Low Noise* corresponds to a large IF gain (i.e. a higher internal A/D converter input level). This setting increases the dynamic range and is appropriate for low RF input levels.

The *Low Dist* or *Low Noise* settings are appropriate whenever the characteristics of the input path must be constant, e.g. because:

- Interfering signal contributions originating from the receiver (noise, nonlinear contributions) must not change during the measurement.
- A large interfering signal in the vicinity of the measured signal must not overdrive the receiver.

Remote control: [SENSe<Ch>:] LOMeasure
 [SENSe<Ch>:] LOReference
 [SENSe<Ch>:] FREQuency: START?
 [SENSe<Ch>:] FREQuency: STOP?
 [SENSe<Ch>:] SWEep: CW|FIXed?
 [SENSe<Ch>:] CORRection: POWer[:STATe]
 [SENSe<Ch>:] POWer: ATTenuation
 [SENSe<Ch>:] POWer: IFGain: MEASure
 [SENSe<Ch>:] POWer: IFGain: REFerence

Converted Frequencies (R&S ZVA and R&S ZVT Analyzers)

In the *Source* and *Receiver* sections of the *Port Configuration* table, it is possible to convert the source and receiver frequency ranges (for frequency sweeps) or CW frequencies (for power, time and *CW Mode* sweeps) in order to perform measurements on frequency-converting DUTs. The source frequency is port-specific whereas the receiver frequency must be the same at all ports.



Test ports 1 and 2 and test ports 3 and 4 are supplied by a common generator (see block diagrams in the data sheet). If the RF signal is simultaneously fed to two coupled ports (i.e. if *Gen* is switched on so that at least one signal source is permanent), the port frequencies must be the same. For normal measurements (*Gen* switched off), this restriction does not apply because there is only one source port per partial measurement.

The frequency formula for a permanent signal source is also used for the second (coupled) test port. On R&S ZVA67 and R&S ZVA24/40 network analyzers with four ports and four generators (order nos. 1145.1110.28/48), all four ports have independent internal sources, and the aforementioned restrictions do not apply.

The port frequencies are calculated as a multiple of the stimulus frequency f_b plus an offset. The coefficients of the linear transformation between f_b and the port frequencies are entered in dialogs of the following type:





Relation between channel frequency and port frequencies

The stimulus frequency f_b is defined by the following sweep settings:

- For a frequency sweep or segmented frequency sweep, the channel frequency is equal to the [stimulus range](#).
- For a power, time or *CW Mode* sweep, the channel frequency is equal to the fixed [CW Frequency](#).

This linear frequency conversion formula has been modeled according to the needs of a typical frequency-converting measurement where mixer products and harmonics occur (see also the special [Mixer Mode](#) and [Harmonic Distortion](#) measurements). The port frequencies f (source frequency f_s or receiver frequency for the reference channel and the measurement channel f_{ra}/f_{rb}) are related to the stimulus frequency as follows:

$$f = \frac{k}{l} f_b + \frac{m}{n} c, \text{ if the fb radio button is selected}$$

$$f = \frac{m}{n} c, \text{ if the 0 radio button is selected}$$

k and m must be integer numbers, l and n nonzero positive integers. c must be a multiple of 1 Hz. Moreover the total port frequency is rounded to an integer Hz-value.



A port frequency that is used as a reference frequency must be a function of the channel base frequency f_b . The analyzer prevents inconsistent settings: E.g. if the source frequency at port 1 is selected as a reference frequency ([Stimulus](#) dialog, *Frequency – Enter & Display: Port 1 Source*), the *0 Hz* radio button in the *Port 1 Source Frequency* dialog becomes unavailable.



Use the [Stimulus](#) dialog to change all port frequencies based on an arbitrary reference frequency.

Remote control: `SOURce<Ch>:FREQuency<Pt>:CONVersion:ARBitrary:IFRequency`
`SOURce<Ch>:FREQuency<Pt>:CONVersion:ARBitrary:EFRequency<Gen>`
`[SENSe<Ch>:]FREQuency:CONVersion:ARBitrary`
`[SENSe<Ch>:]FREQuency:CONVersion:ARBitrary:PMETer<Meter>`

Converted Frequencies for Frequency Converters (R&S ZVA and R&S ZVT Analyzers)

The *Converter Port <n> Frequency* dialog defines the frequency axis for the source power calibration; it does not actually affect the converter output frequency. The dialog is similar to the [Port <n> Frequency](#) dialog (for network analyzer ports). It can be opened from the [Source](#) section of the *Port Configuration* dialog if a frequency converter test setup is active.




For more information and an example refer to section [Power and Frequency Settings](#).

Remote control: `SOURce<Ch>:FREQuency<Pt>:CONVersion:ARBitrary:CFRequency`

Port <i> Power

The *Port <n> Power* dialog defines the port-specific source power. This is either a power range (for power sweeps) or a fixed power (for frequency and CW sweeps). The general purpose of the port power settings is to ensure a definite signal power at the input of the DUT, considering all possible sources of power variations in the test setup.

The port-specific source power can be set to either the channel base power P_b plus an offset or to a constant value. The coefficients of the linear relation between P_b and the actual source power are entered in a dialog.

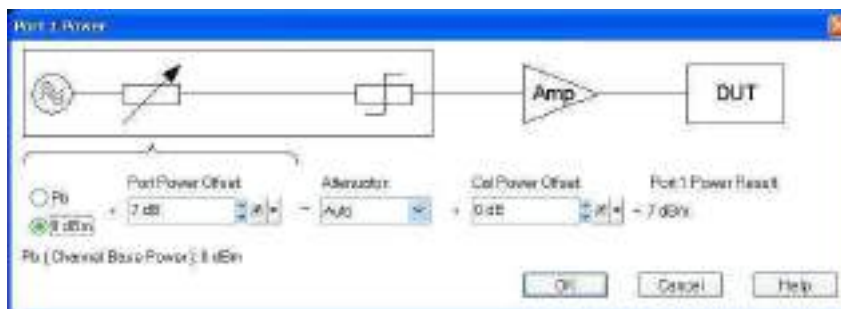

The *Port <n> Power* settings also appear in the [Modify Source Power Cal Settings](#) dialog:

- Port Power Offset** defines a port-specific offset to the channel power, to be added to the step attenuator settings.
 The actual output power at the port is equal to the channel power P_b (*Channel – Stimulus – Power*) plus the *Port Power Offset* minus the *Attenuator* setting. It is equal to the *Port Power Offset* (in dBm) minus the *Attenuator* setting if 0 dBm is selected instead of P_b . For power sweep and the selection P_b , the actual port power varies across the sweep, for other configurations the port power is constant.
- Attenuator** defines the source step attenuator setting (with options R&S ZVABxx-B21); see [Step Attenuators](#). If *Auto* is selected, the step attenuator is set such that it doesn't have to be switched over the entire sweep. The input field is unavailable and shows 0 dB if no generator step attenuator is installed.
- Cal Power Offset** is relevant for source power calibrations; see background information below.
 The parameter specifies a gain (positive values) or an attenuation (negative values) in the signal path between the source port and the calibrated reference plane. With a *Cal Power Offset* of n dB, the target power at the reference plane is equal to the actual output power at the port plus n dB. The *Cal Power Offset* has no direct impact on the source power. It can be seen as a constant power correction value.
- Port <n> Power Result** is the power at the reference plane of the power calibration (if available), considering all dialog settings, including the *Cal Power Offset*.



Use of an amplifier in the signal path

Assume that a DUT requires a constant input power of +35 dBm, and that the measurement path contains an amplifier with a 30 dB gain.

After a reset of the analyzer the channel power P_b is zero dBm. With a *Port Power Offset* of +5 dB at the calibrated source port and a *Cal Power Offset* of +30 dB, the source power calibration ensures that the

constant input power of +35 dBm is maintained across the entire sweep range. The actual output power of the analyzer is +5 dBm but the *Port Power Result* value shows the correct power value of +35 dBm at the DUT.

The *Cal Power Offset* is also closely related to source power calibration:

- If you don't tell the analyzer about the external amplifier and simply set the channel base power to +35 dBm, leaving *Cal Power Offset*, *Attenuator* and *Port Power Offset* at their defaults, a subsequent source power calibration will yield correction values around -30 dB, which has two potential hazards:
 1. At the start of the first source power calibration sweep the output power of the analyzer will roughly be 35 dBm, which may damage the amplifier.
 2. If after a successful (non-destructive) source power calibration the power calibration is turned off, the output power of the analyzer increases by 30 dB, which may destroy the DUTs.
- With *Cal Power Offset* set to 30 dB and a *Port Power Offset* of +5 dB, on the other hand, the correction values will be around 0 dB, eliminating the potential hazards described above.

Because of this, the *Cal Power Offset* value is stored together with the calibration data in the calibration pool. If a calibration is recalled at a later stage, the *Cal Power Offset* is set to its persisted value. To keep the *Port Power Result* constant, the *Port Power Offset* is adjusted accordingly.



Relation between channel power and port powers

The channel base power P_b is defined by the following sweep settings:

- For a power sweep, the channel base power is equal to the [stimulus range](#).
- For a frequency or CW sweep, the channel base power is a fixed [Power](#) value.

The actual output power at the ports (source power P_s) is related to the channel power P_b as follows:

$$P_s = P_b + c + \langle \text{Slope} \rangle * f, \text{ if the } P_b \text{ radio button is selected}$$

$$P_s = P_b + \langle \text{Slope} \rangle * f, \text{ if the } 0 \text{ dBm radio button is selected}$$

In the formulas above, f denotes the (current) source port frequency, c is the offset value entered in the *Port <nr> Source Power* dialog minus the *Attenuator* setting. The *Slope* parameter is set in the [Source](#) section of the *Port Configuration* table.



A source port power that is used as a reference power must be a function of the channel base power P_b . The analyzer prevents inconsistent settings: E.g. if the source power at port 1 is selected as a reference power ([Stimulus](#) dialog, *Power – Enter & Display: Port 1 Source*), the *0 dBm* radio button in the *Port 1 Power* dialog becomes unavailable.



Use the [Stimulus](#) dialog to change all port powers based on an arbitrary reference power. Use the *...Port Power Limits* in the *System Configuration – Power* tab if you want to limit the source power at a physical port permanently.

The analyzer generates a warning if the power settings for one of the ports exceed the hardware limits. At the same time, bit no. 14 in the *...INTEGRITY:HARDWARE* status register is set. Reduce or increase the power result until the warning disappears.

Remote control: `SOURCE<Ch>:POWER[:LEVEL][:IMMEDIATE]:OFFSET <numeric_value>, ONLY | CPAD`
`SOURCE<Ch>:POWER<Pt>:GENERATOR<Gen>:OFFSET <numeric_value>, ONLY | CPAD`


`SOURCE<Ch>:POWER<Pt>:CORRection:LEVel:OFFSet` (for Cal Power Offset)
`SOURCE<Ch>:POWER<Pt>:CORRection:GENerator<Gen>:LEVel:OFFSet` (for Cal Power Offset)

Converter Port <i> Power (R&S ZVA and R&S ZVT Analyzers)

The *Converter Port <n> Power* dialog displays the port-specific source power for frequency converter ports. The dialog is similar to the *Port <n> Power* dialog (for network analyzer ports). It can be opened from the *Source* section of the *Port Configuration* dialog if a frequency converter test setup is active.



Since FW version 3.40 the converter power configuration is part of the *Converter Control* configuration. The *Power Transfer* dialog was removed: its functionality was moved to the *Port<i> Power Control* and *Linear Approximation* dialogs.

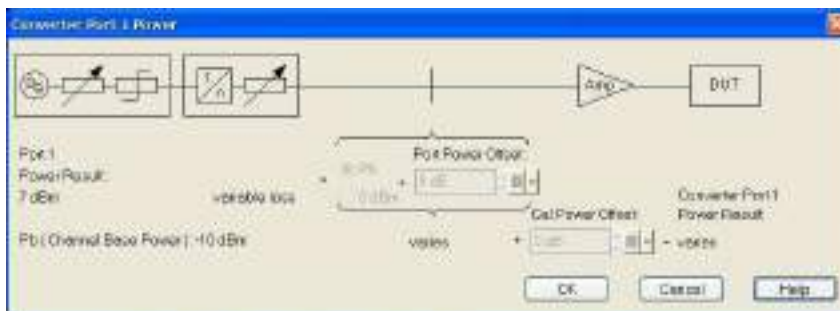

The *Converter Port <n> Power* settings serve different purposes:

- The block diagram in the upper part of the dialog symbolizes the NWA test port providing the converter input signals RF IN, including the signal source, a continuously adjustable attenuator providing the test port power offset, and the source step attenuator (if fitted). The test port signal is configured in the *Port <n> Power* dialog; the current output power result for the physical analyzer port is displayed below the block diagram.
- *Port Power Offset* and *Cal Power Offset* are analogous to the parameters in the *Port <n> Power* dialog (included in the *Port <n> Power Result*), however, the test port and converter values can be set independently. Depending on the *Port<i> Power Control* settings, the *Port Power Offset* for converters with electronic attenuators will either modify the analyzer power, the electronic attenuator of the converter, or both. The *Cal Power Offset* makes it possible e.g. to account for a second amplifier between the converter port and the DUT.
- *Converter Port <n> Power Result* is the power at the reference plane of the power calibration (if available), considering all dialog settings, including the *Cal Power Offset*.

Remote control: `SOURCE<Ch>:POWER<Pt>:CONVerter:OFFSet`
`SOURCE<Ch>:POWER<Pt>:CORRection:CONVerter<Con>:LEVel:OFFSet`

Displayed Columns

This dialog customizes the *Port Configuration* table and displays or hides columns.



- (Un)checking *Logical Port*, *Source* or *Receiver* displays (removes) the corresponding sections in (from) the *Port Configuration* table.
- (Un)checking one of the second-level boxes displays (removes) the corresponding column in (from) the *Port Configuration* table.

The physical port number is always displayed. The logical port information is displayed only if a [balanced port](#) configuration is defined.


Remote control: No command, display configuration only.

Stimulus Dialog

The *Stimulus* dialog modifies all sweep frequencies and powers in the active channel, based on an arbitrary frequency and power reference. This is particularly useful in arbitrary mode (with option R&S ZVA-K4), where the frequencies and source powers at the ports are independent. The dialog is accessed from the [Port Configuration](#) dialog.



The *Stimulus* dialog can be opened from the context menu of the channel list.

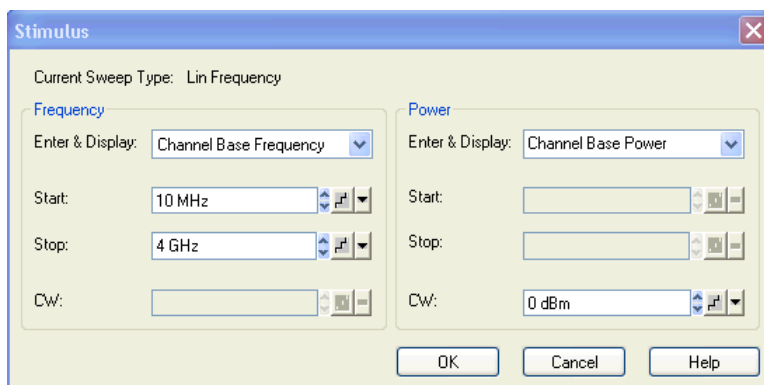

The available sweep parameters depend on the *Current Sweep Type* (*Channel – Sweep – Sweep Type*) which is displayed below the title bar of the dialog.

Sweep Type	Frequency parameters	Power parameters
Lin. Frequency	Start	CW
Log. Frequency	Stop	

Sweep Type	Frequency parameters	Power parameters
Segmented Frequency	– (defined by the sweep segments)	CW
Power	CW	Start Stop
Time CW Mode	CW	CW

The frequencies and powers are displayed in two separate but analogous panels:

- *Enter & Display* in the *Frequency* panel contains a list of the channel base frequency f_b plus the source and receiver frequencies at all logical ports that depend on f_b . The list includes the frequencies of external power meters and generators. Fixed source and receiver frequencies (see [Converted Frequencies](#)) are not in the list; they are not affected by the settings in the *Stimulus* dialog. For R&S ZVA analyzers without option R&S ZVA-K4, all frequencies and powers are coupled so that this selection has no effect.
- *Enter & Display* in the *Power* panel contains a list of the channel base power p_b plus the source and receiver powers at all logical ports that depend on p_b . The list includes the powers of external power meters and generators. Fixed source and receiver powers (see [Port-Specific Power](#)) are not in the list; they are not affected by the settings in the *Stimulus* dialog. The selected stimulus axis appears in the channel list when the *Port Configuration* dialog is closed, e.g. *Base Pwr. x dBm*, *Port 1 Pwr x dBm*, *Gen1 Pwr x dBm*.
- *Start*, *Stop* define the frequency/power sweep ranges; *CW* defines the fixed frequency/power.



Frequency and power definition in the Stimulus dialog

If the selected reference frequency or reference power is changed, the analyzer modifies all source and receiver frequencies/powers accordingly, leaving the frequency and power conversion formulas unchanged. The *Stimulus* dialog thus ensures that all system frequencies/powers can be modified consistently, based on an arbitrary reference frequency.

The power and frequency entries in the *Stimulus* dialog are unrestricted. A compatibility check is performed when the dialog is closed. Frequencies and powers beyond the analyzer's hardware limits are marked with a red input field in the calling *Port Configuration* dialog.

By default, all port frequencies/powers are referenced to the base frequency/power (*Channel Base f_b/P_b*). Once a port frequency or power is selected as a reference, this reference can no longer be set to a fixed stimulus value (see e.g. [Converted Frequencies](#)).

Remote control: `[SENSe<Ch>:] SWEep:AXIS:FREQuency`
`[SENSe<Ch>:] SWEep:AXIS:POWEr`

Balanced Ports and Port Groups

Opens a dialog to select a balanced port configuration and define reference impedances for balanced ports and to select the measured ports.



Balanced Ports and Port Groups

Selecting a balanced port configuration means that one or more pairs of physical test ports are combined to form logical (balanced) ports.


[Unbalance-balance conversion](#) is the simulation of one or more unbalance-balance transformers (baluns) integrated in the measurement circuit in order to convert the DUT ports from an unbalanced state into a

balanced state and virtually separate the differential and common mode signals. The analyzer measures the unbalanced state but converts the results and calculates mixed mode parameters, e.g. [mixed mode S-parameters](#). The balanced ports of the DUT are directly connected to the analyzer ports and no physical transformer is needed.

Measurements do not necessarily require all of the physical and logical ports of the network analyzer. To save measurement time, it is recommended to define the ports that are actually used in the current test setup ([Define Measured Ports](#)). Unused ports will not be considered for the calculation of mixed mode, Z- and Y-parameters.



Option R&S ZVA-K6 provides the [true differential mode](#). The true differential mode extends the virtual differential mode described so far, where the analyzer generates an unbalanced stimulus signal and uses mathematical transformations to determine the balanced results.

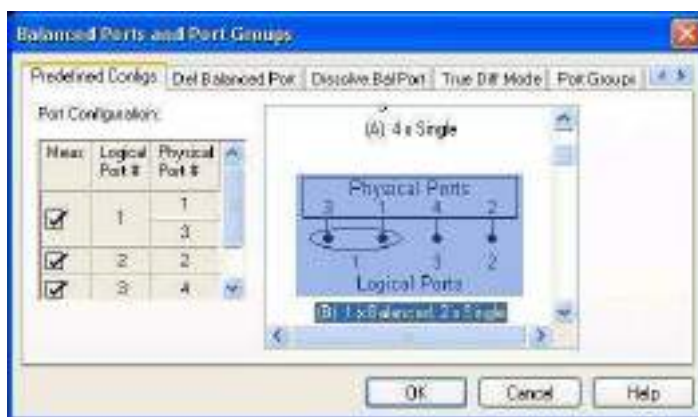


The tabs of the *Balanced Ports and Port Groups* dialog are used to:

- Select one of the predefined balanced port configurations ([Predefined Configs](#)).
- Define a logical port based on two physical ports and independent reference impedances for the calculation of common mode and differential mode parameters ([Def. Balanced Port](#)).
- Dissolve a single logical port so that the two involved ports are again used as physical ports ([Dissolve Bal. Port](#)).
- Switch the [True Differential Mode](#) (option R&S ZVA-K6) on or off.
- Define port groups in order to restrict the number of measured quantities and speed up the measurement ([Port Groups](#)).
- Apply a [frequency offset](#) to the simultaneous measurement of port groups which can be used in situations where "Crosstalk" between different DUTs (e.g. in wafer prober applications) would otherwise prevent the simultaneous measurement.

Predefined Configs

The *Predefined Configs* tab of the *Balanced Ports and Port Groups* dialog provides the most commonly used balanced port configurations for the analyzer.

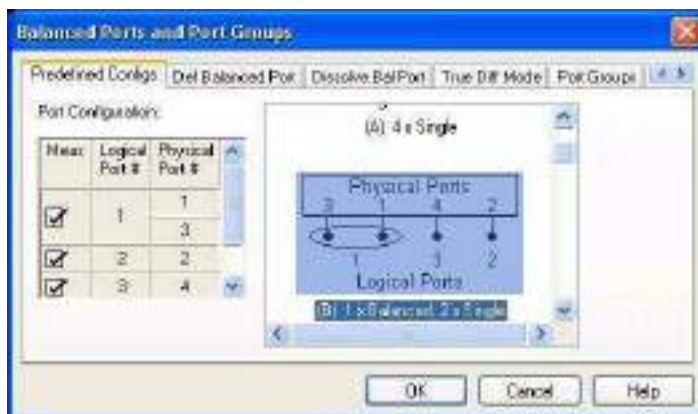

The port configurations are arranged in a scrollable list and selected with a mouse click. The resulting port number assignment is shown on the left-hand side of the *Balanced Ports and Port Groups* dialog and in the *Port Configuration* dialog. When a predefined port configuration is selected, all [user-defined port groups](#) are removed.



Predefined Configurations

The number of type of predefined configurations depends on the port number of the analyzer.

The predefined configurations comprise the fully single-ended (unbalanced) case, where the logical ports correspond to the physical ports, and all balanced configurations where two adjacent physical ports are connected to a logical port. In addition configurations where one or more ports are excluded from the measurement are provided (see [Measured Ports](#)).

Example: 4-port analyzer

- Fully unbalanced: Physical ports no. 3, 1, 4, 2 connected to logical ports (DUT ports) 3, 1, 4, 2.
- One balanced port:
 - a) Physical ports no. 3 and 1 connected to logical port 1, remaining ports unbalanced.
 - b) Physical ports no. 4 and 2 connected to logical port 2, remaining ports unbalanced.
- Two balanced ports: Physical ports no. 3 and 1 connected to logical port 1, physical ports no. 4 and 2 connected to logical port 2.
- In additional configurations one, two or three ports (marked as ) are excluded from the measurement.




To define a non standard configuration or use different port impedances, select the *Def. Balanced Port* tab.

Remote control: `SOURCE<Ch>:LPORT<log_port> <phys_port1>,<phys_port2>`
 (no extra command for predefined configurations)
`SOURCE<Ch>:TDIF[:STATE] ON | OFF`

Def. Balanced Port

The *Def. Balanced Port* tab of the *Balanced Ports and Port Groups* dialog defines new balanced port configurations with their reference impedances.

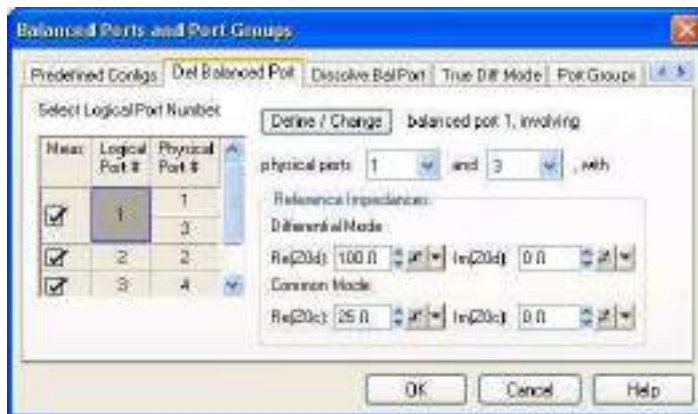

It is possible to combine any pair of two physical analyzer ports. An n-port analyzer supports a maximum of $n/2$ (n even) or $(n - 1)/2$ (n odd) logical ports.


- *Select Logical Port Number* shows the current port configuration. The selected logical port appears on a dark background. Click on the table cell of a logical port to view and change the settings.
- A balanced port definition involves two different *physical ports* and the *reference impedances* for differential mode and common mode waves.
- *Define/Change* updates the balanced port configuration (including the *Select Logical Port Number* table), based on the current settings. This button is required for any change of the balanced port configuration; *OK* activates the settings in the *Select Logical Port Number* table.



Reference impedance settings

The default reference impedance for a physical port is equal to the reference impedance of the connector type assigned to the port but can be defined as an arbitrary complex value (renormalization of port impedances). By changing the reference impedance, it is possible to convert the measured values at 50 Ω (75 Ω) into values at arbitrary port impedances. For details refer to section *Virtual Transform – Reference Impedances*.

For balanced ports it is possible to define separate complex reference impedances for differential and for common mode.

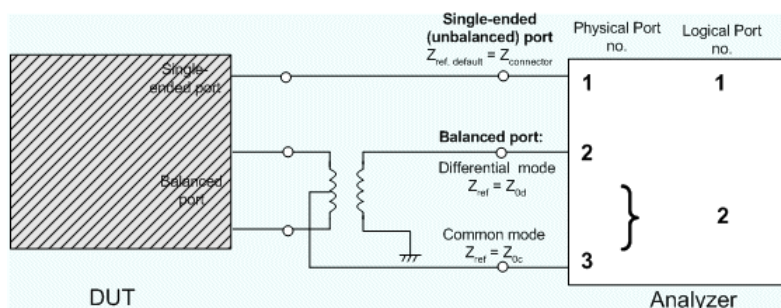

The default values for the balanced port reference impedances are derived from the (real) default reference impedance of the physical analyzer ports ($Z_0 = 50 \text{ } \Omega$):

- The default value for the differential mode is $Z_{0d} = 100 \text{ } \Omega = 2 \cdot Z_0$.
- The default value for the common mode is $Z_{0c} = 25 \text{ } \Omega = Z_0/2$.

Remote control: `SOURce<Ch>:LPORT<log_port> <phys_port1>,<phys_port2>`
`SENSe:LPORT<log_port>:ZCOMMon <real> [,<imaginary>]`
`SENSe:LPORT<log_port>:ZDIFFerent <real> [,<imaginary>]`
`SOURce<Ch>:TDIF[:STATe] ON | OFF`

Dissolve Bal. Port

The *Dissolve* tab of the *Balanced Ports and Port Groups* dialog reestablishes a single-ended (unbalanced) port configuration where logical ports correspond to (single) physical ports.



- *Select Logical Port Number* shows the current port configuration. Selecting a *Logical Port #* and clicking *Dissolve* reestablishes a single-ended (unbalanced) port configuration.

Remote control: `SOURce<Ch>:LPORT<log_port>:CLEAr [ALL]`
`SOURce<Ch>:TDIF[:STATe] ON | OFF`

True Diff Mode

The *True Diff Mode* tab of the *Balanced Ports and Port Groups* dialog activates the true differential mode (option R&S ZVA-K6).



To activate true differential mode, a balanced port configuration must be active. Moreover, the two physical ports providing the true differential signal must be fed by independent sources.


The dialog provides the following additional settings for the true differential mode with a [frequency converter](#). The frequency converter mode must be active to change these settings.

- *Receiver Frequency for True Diff Source Adjustment* defines the receiver frequency which the analyzer uses to adjust the desired amplitude and phase of the true differential signal. The adjustment requires a measurement of the a- and b-waves at the physical ports which belong to the balanced converter port.
By default the receiver frequency for the source adjustment is equal to the receiver frequency for measurement, to be defined in the [Receiver](#) section of the *Port Configuration* dialog.



True differential mode with frequency converters

If the frequency converter mode is combined with true differential mode, the analyzer generates a true differential or common mode stimulus signal at a calibrated reference plane which is located after two frequency converter ports. To achieve this, two frequency converters with independent sources are combined to form a balanced converter port. The frequency converters must provide the RF drive signal simultaneously so that a third, independent LO signal is required. This means that the standard test setup described in section *Converter Control – Connecting the Frequency Converters* must be replaced by the following scheme:

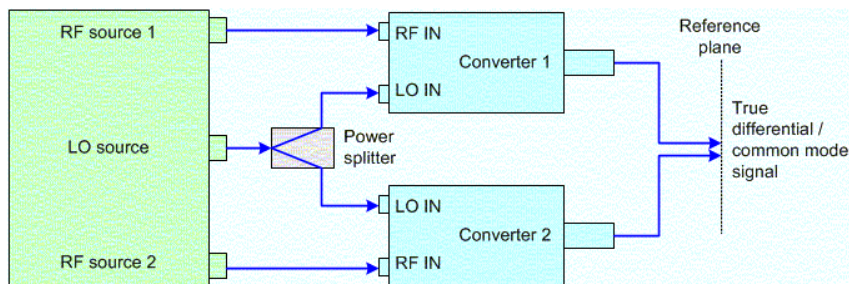

Depending on the network analyzer type and the number of independent sources available, different test setups are possible.

1. R&S ZVA24/40/50 with 4 ports and 2 generators

Ports 1 and 2 are driven by the same source (coupled ports); ports 3 and 4 by a different source. Possible connection: Analyzer port 1 to RF IN (converter 1), analyzer port 3 to RF IN (converter 2), the LO signal for both converters is provided by an external generator in combination with an external power splitter.

2. R&S ZVA24/40/67 with 4 ports and 4 generators

All ports are independent. Possible connection: Analyzer port 1 to RF IN (converter 1), analyzer port 2 to RF IN (converter 2), analyzer port 3 is not used, analyzer port 4 provides the LO IN signal for both converters (via an external power splitter). This corresponds to the standard connection of two frequency converters, if the true differential mode is not used.

3. R&S ZVT20 with 6 ports and 3 generators

Ports 1 / 2, 3 / 4 and 5 / 6 are coupled. Possible connection: Analyzer port 1 to RF IN (converter 1), analyzer port 3 to RF IN (converter 2), the LO signal for both converters is provided by analyzer port 5 in combination with an external power splitter.

Remote control: `SOURCE<Ch>:TDIF[:STATe] ON | OFF`
`SOURCE<Ch>:TDIF:CRFRequency`

Port Groups

The *Port Groups* tab of the *Balanced Ports and Port Groups* dialog defines port groups that can be used for simultaneous measurement of multiple independent devices under test.



- The *Port Configuration* table on the left of this tab shows an overview of the logical and physical numbering and grouping of the ports. This table is displayed as an information only and cannot be edited.
- *Simultaneous Measurement of Port Groups* activates/deactivates the simultaneous measurement of port groups. Please note that port groups can be defined independent of the selection of *Simultaneous Measurement of Port Groups*. To set up a simultaneous measurement this check box must be checked and at least two port groups must be defined.
- The *Port Groups* table shows the existing port groups, each consisting of a continuous range of measured ports. Selecting another *First Port* or *Last Port* changes the range. To avoid ambiguities the ports are always logical ports.
- The *Add Group* button adds a port group after the group selected in the *Port Groups* table. The logical ports contained in the selected port group are distributed among this group and the newly added group. If currently no port groups are defined, pressing the *Add Group* button will create two port groups at once.
- The *Delete Group* button removes the port group currently selected in the *Port Groups* table. The logical ports contained in the deleted group will be added to the port group before or after (only when the first port group is deleted) the deleted one. If exactly two port groups exist, pressing the *Delete Group* button will delete both groups.

Only ports whose *Meas* flags are set in the [Port Configuration](#) table can be assigned to a port group. After enabling *Simultaneous measurement of Port Groups* the *Meas* flags can no longer be modified.



Simultaneous Measurement of Port Groups is not available in any one of the following situations:

- Less than two port groups are defined
- [Frequency Converter](#) mode is active
- [True Differential Mode](#) or [Defined Coherence Mode](#) is active
- In a frequency converting measurement where *Measure Source Port Waves at: Source Frequency* is chosen in the [Port Configuration](#).



Simultaneous Measurement of Port Groups

A port group is a continuous range of measured ports which is labeled with a capital letter. The analyzer can measure several port groups in parallel. Port groups must not overlap and contain at least one logical port, so the maximum number of port groups is equal to the number of ports of the analyzer.

Example: Using port groups on a 4-port analyzer

A 4-port analyzer can be used for parallel measurements if only 1-port, 2-port or 3-port parameters are needed:

- Combining ports 1 and 2 to a first port group, ports 3 and 4 to a second port group leaves two sets of 2-port parameters to be measured in parallel. The measurement provides $2 * 4 = 8$ S-parameters and is faster than a full 4-port measurement (16 parameters).
- A reflection measurement involving four port groups, each with a single port, provides 4 parameters and is faster than the measurement with two groups of 2 ports.

The defined port groups are indicated in the first column of the [Port Configuration](#) table (Meas).



Always select the balanced port configuration **before** defining port groups. When a new balanced port is created, the analyzer deletes all existing port groups.

In remote control, there is an alternative way to create a port group, based on specifying the set of [Measured Ports](#) (see `SOURce<Ch>:GROup<group_no>:PORTs`). It allows to define **a single** group with arbitrary non-empty port range. However this port group cannot be measured simultaneously with other port groups.

Remote control: `SOURce<Ch>:GROup<group_no> <log_port1>,<log_port2>`
`SOURce<Ch>:GROup<group_no>:CLEar [ALL]`
`SOURce<Ch>:GROup<group_no>:COUNT`
`SOURce<Ch>:GROup<group_no>:SIMultaneous:STATe`

Frequency Offset

The *Frequency Offset* tab of the *Balanced Ports and Port Groups* dialog defines a frequency offset between different port groups which can be used in situations where "Crosstalk" between different DUTs (e.g. in wafer prober applications) would otherwise make the simultaneous measurement of port groups impossible.



This tab contains the following controls to activate/deactivate the frequency offset and to specify the minimum frequency offset between different port groups. For a more detailed explanation about how this minimum frequency offset affects the measurement please refer to [How the firmware applies the frequency offset](#) below.

- *Simultaneous Measurement with Frequency Offset* activates/deactivates the frequency offset. Please note that there are a number of preconditions that must be fulfilled for this measurement mode to actually become active. For a complete list of all these preconditions please refer to remote command `SOURce<Ch>:GROup:SIMultaneous:FOFFset:CONDition?`. The most important preconditions are that there must be more than one port group and that a linear or segmented frequency sweep must be used.
- *Direct Value* is used to directly specify the minimum frequency offset between different port groups.
- *Bandwidth Factor* is used to make the firmware calculate the minimum used frequency offset between different port groups depending on the actually used IF bandwidth. The minimum frequency offset is obtained by multiplying the actually used IF bandwidth with this factor. When segment specific IF bandwidths are specified this will result in segment specific minimum frequency offsets. Please note that *static and dynamic bandwidth reduction* is not considered when determining the minimum frequency offset from the IF bandwidth.



Please note that in *Simultaneous Measurement with Frequency Offset* the firmware uses a modified IF as compared to measurements not using this mode. This modified IF requires a special calibration, therefore, it is essential to perform the calibration with *Simultaneous Measurement with Frequency Offset* activated when the actual measurement is to be performed in this mode. Before performing the calibration, set up *Simultaneous Measurement with Frequency Offset* exactly in the same way as for the actual measurement. Otherwise, the calibration may be unsuitable, which is indicated by a "?" in the corresponding *calibration state label*. The IF offsets that were used in a calibration measurement are displayed in the *Calibration Manager*.

Please also note that in certain situations it may happen that automatic switches between small and large IF gain during the sweep may lead to visible steps in the measurement results when *Simultaneous Measurement with Frequency Offset* is active. This may be avoided by choosing a fixed value for the IF gain (either Low Distortion or Low Noise). See *Receiver path settings and AGC* for background information.



Examples

Consider a linear frequency sweep with 101 points from 100 MHz to 200 MHz resulting in a frequency spacing of 1 MHz. When two port groups are defined and a minimum frequency offset of 1 MHz is specified then a *Simultaneous Measurement with Frequency Offset* will internally be performed as follows:

- In the first measurement step no measurements for port group 1 will be performed, measurements for port group 2 will be performed at 100 MHz.
- In the second measurement step measurements for port group 1 will be performed at 100 MHz, measurements for port group 2 will be performed at 101 MHz.
- In the third measurement step measurements for port group 1 will be performed at 101 MHz, measurements for port group 2 will be performed at 102 MHz.
- ...
- In the 100th measurement step measurements for port group 1 will be performed at 199 MHz, measurements for port group 2 will be performed at 200 MHz.
- In the 101st measurement step measurements for port group 1 will be performed at 200 MHz, no measurements for port group 2 will be performed.

Please note that *Simultaneous Measurement with Frequency Offset* is completely transparent to the user: all port groups will be measured in the requested frequency range and the results are available in the same form as if they were obtained in separate measurements without frequency offset.



How the firmware applies the frequency offset

The firmware uses the minimum frequency offset specified as explained above to determine an actual frequency offset for each port group. The first port group is always measured without any frequency offset. For all other port groups there will be an offset (which may be positive or negative) applied to the generator frequency of the driving port(s) which is chosen in such a way that

- within each simultaneous measurement the source frequency for any two port groups differs at least by the minimum frequency offset
- and that the actual offset is an integer multiple of the frequency spacing of the sweep; in a segmented sweep this may result in different actual offsets due to different frequency spacings in different segments.

The frequency offset applied to the generator must of course be balanced by a corresponding offset on the receiving side. Since for technical reasons there can only be one LO frequency within a simultaneous measurement the offset on the receiving side is applied to the IF so that with a single LO frequency but different IFs one obtains different receiving frequencies. A simple example would be a situation in which a port group uses a generator offset of +4 MHz which must be balanced by an offset of +4 MHz applied to the receiving frequency which is achieved by applying an offset of -4 MHz to the IF ($f_{LO} = f_{rec} + IF \Leftrightarrow f_{rec} = f_{LO} - IF$ so that decreasing the IF will increase the receiving frequency).

The limiting factor concerning the magnitude of the actual frequency offset is the range of possible IF values. The VNA can handle IF values in the range from 5 MHz to 35 MHz. For the first port group (which is measured without any offset) the firmware will use the IF that would be used in setups without *Simultaneous Measurement with Frequency Offset*. This IF is chosen by an algorithm which considers different factors among which the receiving frequency is the most important one. When *Simultaneous Measurement with Frequency Offset* is activated the firmware will automatically try to choose sign and absolute value of the IF offsets for the different port groups in such a way that all resulting IFs will be in the valid range between 5 MHz and 35 MHz.

Please note that because the LO frequency may lie either in the upper or lower side band of the receiving frequency an IF offset that will yield an IF in the range -35 MHz to -5 MHz is valid as well. In certain setups the combination of frequency spacing in the sweep and the chosen minimum frequency offset may lead to IF offsets outside the valid range. In such a situation *Simultaneous Measurement with Frequency Offset* will **not** be activated and an according error message will be displayed.

The following example shows how a *Simultaneous Measurement with Frequency Offset* is done in the following setup:

- Linear frequency sweep or segment within segmented sweep from 100 MHz to 112 MHz
- 4 sweep points resulting in a frequency spacing of 4 MHz
- Minimum frequency offset in the range from 0 Hz to 4 MHz (all values in this range will lead to the exact same measurement)
- 4 port groups

In this example it is assumed that the firmware will choose the actual offsets as shown in column "Generator Offset" of the following table; this choice depends on the IF and may not be used in all circumstances. Please note that the first port group does not use an offset.

Internally, in this example the firmware has to perform measurements at seven measurement points (labeled "MP 1" through "MP 7" in the following table) to obtain the four measurement points requested by the user. The following table shows for each of the seven measurement points which port group is driving and measuring at which frequency. An entry of "-" means that no measurement is taking place at the according measurement point for the according port group. At these points the ports of the port group which is not measured will be switched off in a manner which corresponds to a fast [RF Off](#).

Port Group	Generator Offset	MP 1	MP 2	MP 3	MP 4	MP 5	MP 6	MP 7
1	0 MHz	-	100 MHz	104 MHz	108 MHz	112 MHz	-	-
2	+4 MHz	100 MHz	104 MHz	108 MHz	112 MHz	-	-	-
3	-4 MHz	-	-	100 MHz	104 MHz	108 MHz	112 MHz	-
4	-8 MHz	-	-	-	100 MHz	104 MHz	108 MHz	112 MHz

On the user level the firmware will provide for each port group only those four measurement points that were requested by the user; at this level measurement point 1 will for all port groups contain the measurement results taken at 100 MHz, measurement point 2 will contain the results taken at 104 MHz and so forth. The measurement pattern displayed in the table above only explains the internal mechanism of *Simultaneous Measurement with Frequency Offset* and is included in this manual to show how the firmware ensures that in each simultaneous measurement all measurements from different port groups are separated by a frequency difference whose absolute value is equal to or greater than the minimum frequency offset.

Remote control: `SOURce<Ch>:GROup:SIMultaneous:FOFFset[:STATe] ON | OFF`
`SOURce<Ch>:GROup:SIMultaneous:FOFFset:MOFFset:MODE DIReCT |`
`BANDwidth`
`SOURce<Ch>:GROup:SIMultaneous:FOFFset:MOFFset:BWFactor`
`SOURce<Ch>:GROup:SIMultaneous:FOFFset:MOFFset:DVALue`
`SOURce<Ch>:GROup:SIMultaneous:FOFFset:CONDition?`

Mixer Measurements

Scalar Mixer Meas

The *Scalar Mixer Meas* submenu controls the measurement of the mixing products generated by the mixer under test (MUT) when supplied with two independent RF signals. Together with the [Harmonic Distortion](#) measurement and the arbitrary configuration of generator and receiver frequencies ([Port Configuration](#)), the scalar mixer mode is included in option R&S ZVA-K4. An extension to a two-stage mixer system is possible; see *Test Setup with Two Mixers* below.



Mixer Measurements

RF mixers convert an RF signal at one frequency into a signal at another frequency. The frequency to be shifted is applied at the RF input and the frequency shifting signal (from a local oscillator, LO) is applied to the RF mixer's LO port, resulting in an output signal at the mixer's Intermediate Frequency (IF) port.

For a given RF signal, an ideal mixer would produce only two IF outputs: one at the frequency sum of the RF and LO ($IF = RF + LO$), and another at the frequency difference between the RF and LO ($IF = |RF - LO|$). An additional filter can then select one of these IF outputs and reject the unwanted one.



The frequency-converting property of the mixer (i.e. the fact that incident and transmitted waves are at different frequencies) causes a loss of phase information. While a scalar measurement is active, the reverse transmission parameter S_{12} is unavailable; the magnitude of the forward transmission parameter S_{21} describes the conversion gain. The conversion gain measurement can be improved by a source match and load match correction. The phase information, including the group delay, is meaningless. The phase or group delay of mixers can be analyzed in a [vector mixer measurement](#).

In mixer mode the analyzer provides the following functionality:


- Configuration of the RF and LO signals and measurement of the generated IF signal, see [Define](#)

Mixer Mode and *Mixer Signal Diagrams*.

- Power calibration of the signal sources and of the IF receiver; see *Mixer Power Calibration*.
- A system error correction including a possible enhanced wave correction at the RF and IF ports (source match correction) and a load match correction; see *Mixer Cal*.
- The mixer mode can be used to test important performance parameters of RF mixers such as frequency ranges, conversion loss, compression, and isolation.

Test Setup with Two Mixers


The scalar mixer measurement is also suited for measuring a system of two mixers with frequency multipliers at their RF and LO inputs. The RF and LO input frequencies of the first mixer are both multiplied by an integer fraction; the converted output signal f_{int} is fed to the second mixer, together with the multiplied second LO signal. The analyzer measures the output signal of the second mixer at its IF input port. The general test setup is shown below; the mixer system under test (MUT) is enclosed in a blue rectangle.

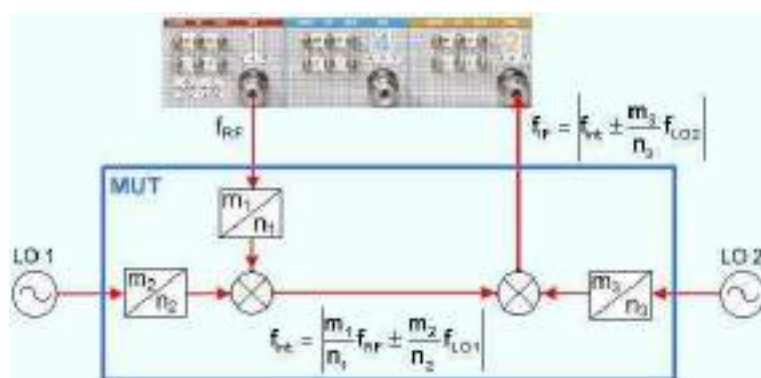

The figure above also shows the possible output frequencies of the two mixers. The actual values of f_{int} and f_{IF} depend on the RF and LO frequencies and of the measured conversion (lower sideband or upper sideband with up- or down-conversion). The analyzer automatically calculates all frequencies and sets its receiver according to the settings made; see *Set Frequencies*.

A test setup with two mixers requires 3 independent source ports plus one receive port. An R&S ZVA67 or one of the R&S ZVA24/40 network analyzers with four ports and four generators (order nos. 1145.1110.28/48) can be used for this measurement. For other network analyzer types an additional external generator is required.

A standard mixer measurement with a single mixer stage and no frequency multipliers corresponds to the figure above with the second mixer and LO 2 omitted and $m_1 = n_1 = m_2 = n_2 = 1$.

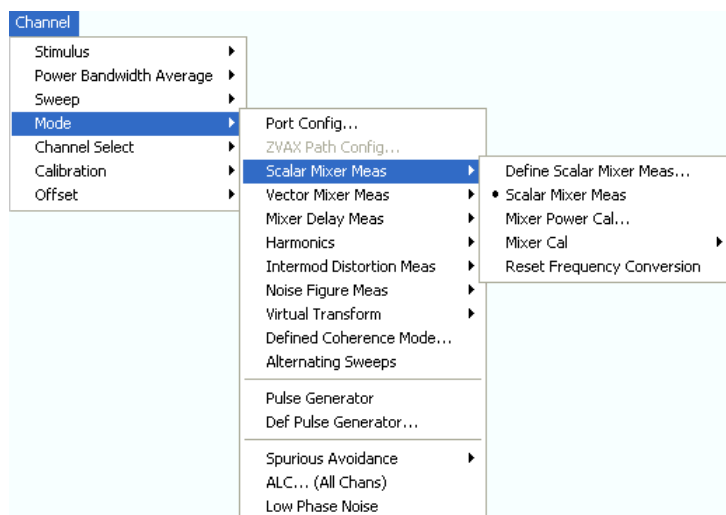

- [Define Scalar Mixer Meas...](#) opens a dialog to configure the mixer input signals.
- [Scalar Mixer Meas](#) and [Reset Frequency Conversion](#) toggle between the (frequency-converting) mixer mode and normal (non frequency converting) operation.
- [Mixer Power Cal...](#) opens a dialog to perform a power calibration of the signal sources and of the IF receiver.
- [Mixer Cal](#) opens a submenu to perform a system error correction for the scalar mixer measurement. The mixer calibration includes an enhanced wave calibration at the RF and IF ports and a load match correction (if selected).


Define Scalar Mixer Meas...

This dialog selects the test ports and configures the mixer input signals.



Restrictions

For vector mixer measurements (option R&S ZVA-K5), mixer delay measurements without LO access (option R&S ZVA-K9), and long distance mixer delay measurements (option R&S ZVA-K10), only one mixer stage is supported. The RF and IF port assignments are fixed.

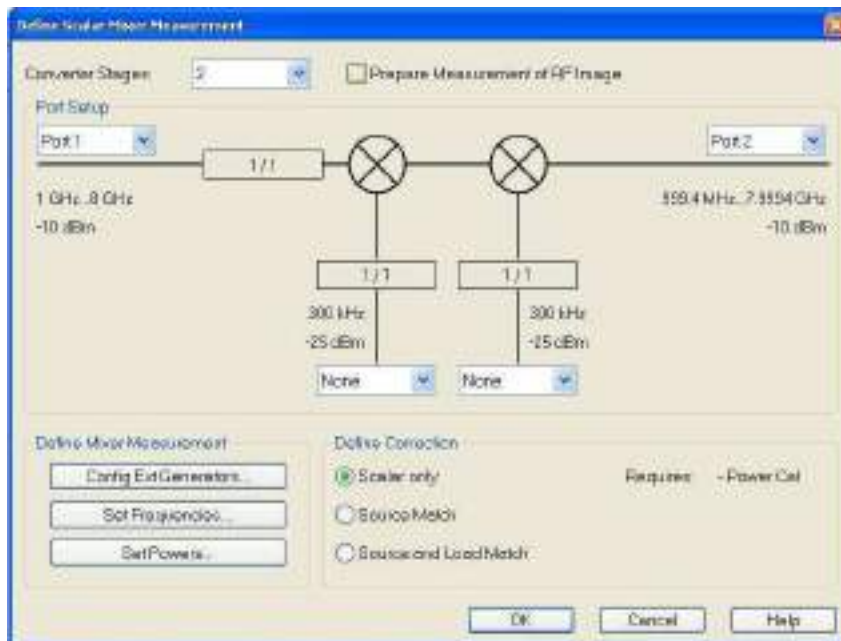

The upper part the *Define Mixer Measurement* dialog shows a [diagram](#) with the RF and LO signals, the mixing product (IF), and the current frequency and power ranges for all signals. The diagram is adjusted according to the selected *Converter Stages*; see [Test Setup with Two Mixers](#). In addition the dialog provides the following control elements:

- Prepare Measurement of RF Image* prepares an additional mixer measurement at the second RF frequency (range) that the mixer converts to the selected IF frequency ([RF Image Frequency](#), RF_{image}). When this option is selected, the image frequency (range) RF_{image} is displayed below the RF frequency (range). An error message appears if the image frequency range RF_{image} exceeds the analyzer's frequency range. In the *Scalar Mixer Measurement Power Calibration* dialog, a source power calibration step of the RF port in the new frequency range is added. The RF and RF_{image} power settings are identical.

The RF image measurement provides the image conversion gain, the generated wave at the drive port, and the received wave at the receive port as additional measurement results. These RF image traces can be selected via *Trace – Measure – Mixer Meas.*
- The port selection lists contain all analyzer ports or external generators which can provide the RF signal (left side) and local oscillator (LO) signals (lower signal(s)). The fractional numbers in the rectangles indicate the frequency conversion settings from the *Define Frequencies* dialog. The receive port for the IF signal is selected on the right side. Generators must be configured explicitly in the *System Configuration – External Generators* dialog before they appear in the list.

None means that the input signal at LO is not controlled by the analyzer, but known exactly. *Embedded* means that the input signal at LO is neither controlled by nor synchronized with the analyzer. Its frequency is not known exactly, but its deviation from the nominal LO frequency is "small" compared to the [measurement bandwidth](#).

The distinction between *None* and *Embedded* is most significant for Mixer Noise Figure Measurements, where a different measurement approach is taken for the *Embedded* case (see [Mixer Noise Figure Measurement with Embedded LO](#)).
- [Config Ext. Generators...](#) opens the *System Configuration – External Generators* dialog for adding and configuring external generators.
- [Set Powers...](#) opens a dialog to control the power of the RF and the LO signals.
- [Set Frequencies...](#) opens a dialog to control the frequency of the RF and the LO signal and the receiver (IF signal) frequency.

- *Define Correction* selects the system error correction type for the scalar mixer measurement. Select the appropriate correction type according to your accuracy and speed requirements; see table below. Notice that none of the correction types provides the phase information for transmission S-parameters.



1. The *Define Correction* settings are only valid for scalar mixer measurements. The panel is unavailable if the *Define Mixer Measurement* dialog is opened from another measurement (e.g. a mixer delay or intermodulation distortion measurement).

2. The options *Source Match* and *Source and Load Match* can **not** be used for DUTs with embedded LO.

Correction type	Properties	Required calibration steps
Scalar only	Power correction of the RF and LO sources and of the IF receiver, no phase correction, provides scalar results (wave quantities, ratios).	Mixer Power Cal
Source Match	Power correction plus enhanced wave correction at the RF and IF ports; see Enhanced Wave Correction (Scalar Mixer Meas.) . <i>Channel – Calibration – Enhanced Wave Correction</i> is activated implicitly.	Mixer Power Cal, Mixer Cal
Source and Load Match	Power correction plus enhanced wave correction plus Load Match Correction of the conversion gain S_{21} . <i>Channel – Calibration – Enhanced Wave Correction</i> and <i>Channel – Calibration – Load Match Correction</i> is activated implicitly.	Mixer Power Cal, Mixer Cal

Scalar Mixer Meas, Reset Frequency Conversion

The softkey *Scalar Mixer Meas* activates the scalar mixer mode, where the analyzer ports are at different frequencies. *Reset Frequency Conversion* disables all frequency conversion measurements, including e.g. an active harmonic distortion measurement.


A *Mix* label in the [channel list](#) indicates that a frequency conversion mode is active.

Ch1 Mix Freq Base Freq Start 1 GHz Base Pwr 0 dBm

Remote control: `[SENSe<Ch>:]FREQuency:CONVersion MIXer | FUNdamental`

Mixer Signal Diagrams

The mixer signal diagrams show the parameters of the mixer input signals (*RF*, *LO*) and of the mixing product (*IF* signal, output). The diagrams appear in the *Mixer Measurement*, *Define Power*, and *Define Frequencies* dialogs.

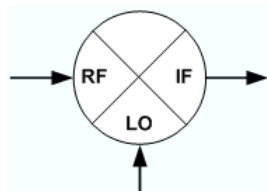

- The *RF* signal is the stimulus signal that the analyzer generates with the current channel settings. After a reset the frequency and power of the RF signal is as defined in the *Channel – Stimulus* menu. The RF signal parameters can be changed in the [Define Power...](#) and [Define Frequencies...](#) dialogs.
- The Local Oscillator (*LO*) signal is an additional RF signal that is either generated by the network

analyzer (at one of the ports that are not used for the RF and IF signals) or by an external source. A test setup with two mixers involves two independent LO signals at both mixers.

- The *IF* signal is the mixer output signal (mixing product), which is at one of the following conversion frequencies: $IF = LO + RF$ or $IF = |LO - RF|$, i.e. $LO - RF$ (for $LO > RF$) or $IF = RF - LO$ (for $RF > LO$). The IF frequency is selected in the [Define Frequencies...](#) dialog. A test setup with two mixers involves two independent conversion settings (see [Test Setup with Two Mixers](#)).




The signal description above with the swept RF signal and the LO signal at a fixed frequency corresponds to the default configuration. In the *Define Frequencies* dialog, you can select any of the signals as a *Sweep/CW* signal. You can set the frequency range for this signal via *Start/Stop* or *CW Frequency*. A second signal is at a *Fixed* frequency, and the third at the calculated sum or difference frequency (*Auto*).

The labeling of the complete diagrams depends on the sweep type.


- Frequency sweep**

The following mixer signal diagram corresponds to a frequency sweep:

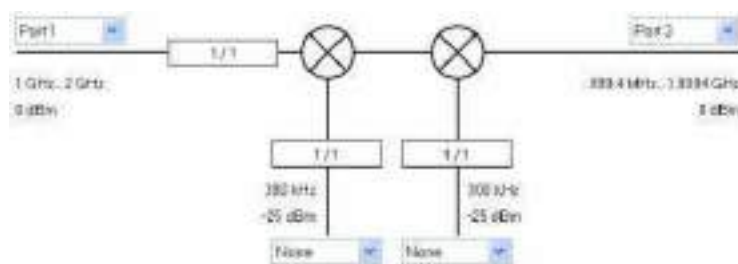

- RF* signal (left side): Analyzer port number (e.g. Port 1), frequency sweep range (or fixed frequency, if the LO signal is swept), CW power, frequency conversion settings (*1 / 1* denotes no conversion).
- LO signals (1 or 2, from below): Signal source (analyzer port or external generator), fixed power and frequency (or frequency sweep range, if the RF signal is at fixed frequency), frequency conversion settings.
- IF signal (right side): Analyzer port number (e.g. Port 2), frequency range = (sweep range + LO) or |sweep range – LO|, expected fixed power.
- Power sweep**


The following mixer signal diagram corresponds to a power sweep:

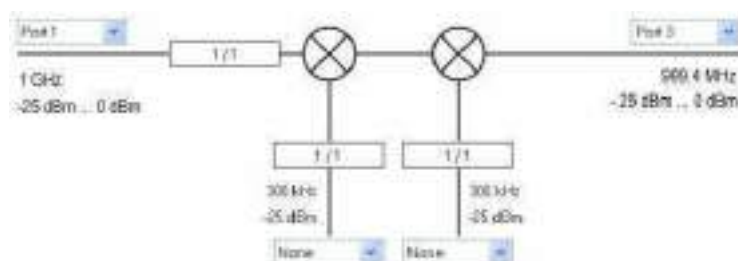

- RF* signal (left side): Analyzer port number (e.g. Port 1), power sweep range or fixed power, CW frequency, frequency conversion settings (*1 / 1* denotes no conversion).
- LO signals (1 or 2, from below): Signal source (analyzer port or external generator), fixed power or power sweep range, CW frequency, frequency conversion settings.

- IF signal (right side): Analyzer port number (e.g. Port 2), fixed frequency = $(RF + LO)$ or $|RF - LO|$, expected power range.
- **Time or CW mode sweep**

The following mixer signal diagram corresponds to a *Time* or *CW Mode* sweep.

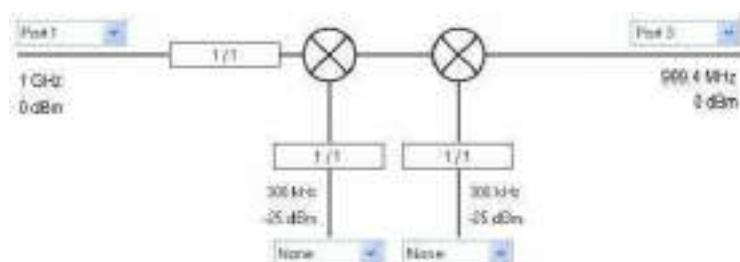

- RF signal (left side): Analyzer port number (e.g. Port 1), fixed power, CW frequency, frequency conversion settings (*1 / 1* denotes no conversion).
- LO signals (1 or 2, from below): Signal source (analyzer port or external generator), fixed power, CW frequency, frequency conversion settings.
- IF signal (right side): Analyzer port number (e.g. Port 2), fixed frequency = $(RF + LO)$ or $|RF - LO|$, expected fixed power.



The ports in the mixer signal diagrams are physical ports. To measure mixers with differential inputs, define a logical port configuration and enter one of the physical ports that belong to the logical port. The analyzer will implicitly account for the logical port settings. Balanced port configurations can also be used in true differential mode.

Vector mixer measurements require single-ended ports.


Define Powers

The *Define Powers* dialog defines the power of the RF and the LO signals.



Restrictions

For vector mixer measurements (option R&S ZVA-K5), mixer delay measurements without LO access (option R&S ZVA-K9), and long distance mixer delay measurements (option R&S ZVA-K10), only one LO signal (corresponding to one mixer stage) is supported.

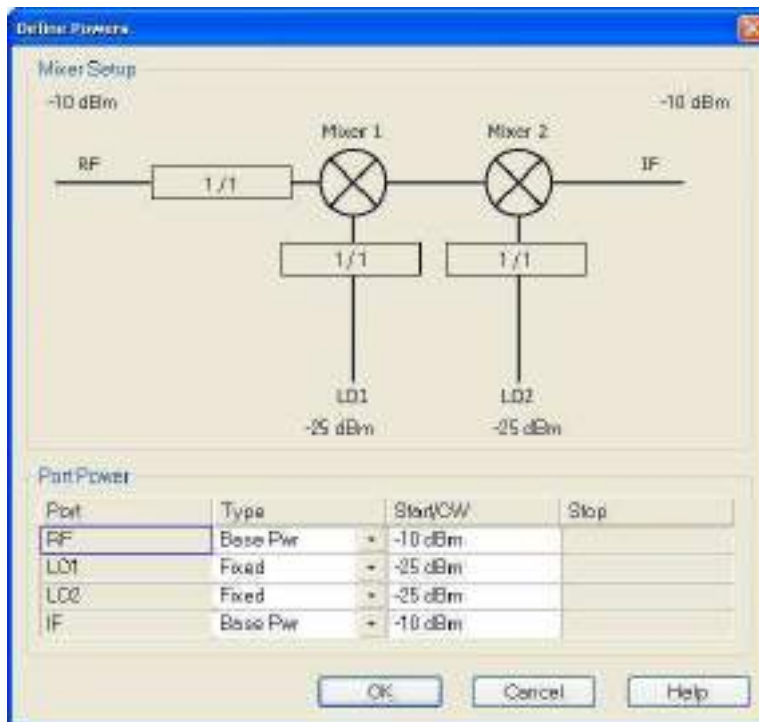

The diagram contains the mixer [signal diagram](#) with the current powers or power ranges and a *Port Power* table with the following columns:

- *Port* contains the RF and IF ports and one or two LO ports, depending on the number of *Converter Stages* selected in the mixer measurement dialog.
- *Type* specifies how the power for each signal is defined. Each of the mixer input signals RF, LO 1, and LO 2 (if present) can be either at the analyzer's channel base power (*Base Pwr*; the signal is swept if a power sweep is active; it is at fixed power (CW) for the other sweep types) or at the *Fixed* power. The same applies to the IF signal. For vector mixer measurements, the power of the *Aux LO* signal (fed to the MEAS and REF mixers) can be defined independently.
- *Start/CW* defines the output powers at the RF, LO 1 and LO 2 ports. The *Base Pwr* setting overwrites the power settings in the *Channel – Stimulus* menu (for power sweeps, where *Base Pwr* is the power sweep range) or *Channel – Power Bandwidth Average* menu (for the other sweep types). The *Fixed* power settings appear in the *Port Configuration* dialog. The *Start/CW* power for the IF port sets the IF source power for the reverse sweep. This setting is relevant only if a [Load Match Correction](#) is active.
- *Stop* shows the stop value of the power sweep range (for power sweeps only).



If a segmented frequency sweep with segment-specific powers is active, the *Base Pwr* is no longer editable but set to the minimum and maximum power of the sweep segments.

Remote control: `SOURce<Ch>:FREQuency CONVersion:MIXer:PMODE`
`SOURce<Ch>:FREQuency CONVersion:MIXer:PMFixed`

Define Frequencies


The *Define Frequencies* dialog controls the frequency of the RF and the LO signal(s) and the analyzer (IF

signal) frequency.



Restrictions

For vector mixer measurements (option R&S ZVA-K5), mixer delay measurements without LO access (option R&S ZVA-K9), and long distance mixer delay measurements (option R&S ZVA-K10), only one LO signal (corresponding to one mixer stage) is supported. In addition, the frequency conversion factors for vector mixer measurements must be equal to 1.

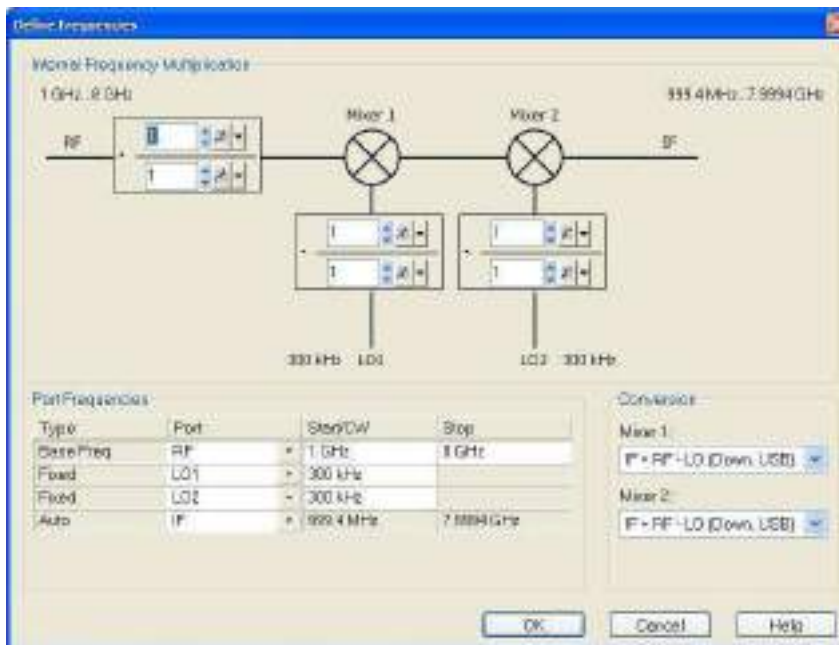

The diagram contains the mixer [signal diagram](#) with the frequencies or frequency ranges. The diagram also defines the frequency conversion factors for the input signals. Each conversion factor is ratio of two integer numbers. The frequency-converting device is considered to be part of the mixer system under test (MUT). In the default configuration where the RF signal is swept and the LO signals are at fixed frequency, the conversion factors do not modify the analyzer's source signals (RF, LO 1, LO 2); they are used for the calculation of the IF frequency only.

The *Port Frequencies* table consists of the following columns:

- *Type* specifies how the frequency for each signal is defined. One of the mixer input and output signals is at the analyzer's channel base frequency (*Base Freq*; the signal is swept if a frequency sweep is active; it is at fixed frequency (CW) for the other sweep types). One or two signals are at *Fixed* frequencies. The last frequency or frequency range is calculated automatically, depending of the other dialog settings.
- *Port* assigns the input and output ports to the predefined port frequency *Types*. The table contains one or two LO ports, depending on the number of *Converter Stages* selected in the mixer measurement dialog.
- *Start/CW* defines the start frequencies or fixed frequencies at the ports with *Base Freq* or *Fixed* frequency type and overwrites the *Channel – Stimulus* settings. For frequency sweeps, the *Base Freq* is the frequency sweep range.
- *Stop* defines the stop value of the frequency sweep range with *Base Freq* type (for frequency sweeps only).

The *Conversion* panel provides the following settings:

- *Mixer 1* and *Mixer 2* (if present) select the frequency of the signal with automatic frequency definition, see background information below.



Conversion formulas

The output signal (IF signal) of each mixer can be at the sum or at the difference of the RF and LO input frequencies.

- $IF = RF - LO$ means that the RF signal is down-converted (upper sideband). The analyzer automatically switches to $IF = LO - RF$ if the LO frequency is above the RF input frequency.
- $IF = LO - RF$ means that the LO signal is down-converted (lower sideband). The analyzer automatically switches to $IF = RF - LO$ if the RF input frequency is above the LO frequency.
- $IF = RF + LO$ means that the RF input signal is up-converted (upper sideband).

To perform measurements at different mixer output frequencies (e.g. to analyze the isolation for $IF = RF$ or higher-order mixing products), use option R&S ZVA-K4, *Arbitrary Generator and Receiver Frequencies*.

The basic formulas described above are adjusted to the mixer measurement settings:

- If the RF or one of the LO signals is in *Auto* mode (instead of IF), the formulas above are automatically converted. **Example:** LO 1 in *Auto* mode, down-conversion (lower sideband) --> $LO\ 1 = IF + RF$.
- If two mixer stages are present, the conversion formulas are applied twice; see [Test Setup with Two Mixers](#).

In a frequency sweep where one of the input frequencies varies over a definite range, the second swept signal (e.g. the IF signal) also covers a frequency range of the same width. An error message is displayed if the converted frequency exceeds the maximum frequency range of the analyzer.

Remote control: `[SENSe<Ch>:]FREQuency:CONVersion:MIXer:RFMultiplier`
`[SENSe<Ch>:]FREQuency:CONVersion:MIXer:LOMultiplier<Stg>`
`[SENSe<Ch>:]FREQuency:CONVersion:MIXer:FUNDamental`
`[SENSe<Ch>:]FREQuency:CONVersion:MIXer:MFFixed`
`[SENSe<Ch>:]FREQuency:CONVersion:MIXer:TFRFrequency`
`[SENSe<Ch>:]FREQuency:START` etc.

RF Image Frequencies

Mixers in general convert two different RF frequencies to the same IF frequency. The second RF frequency (or frequency band) is referred to as image frequency (RF_{image}). The image frequencies depend on the conversion mode of the mixer (see [Conversion formulas](#)):

- $IF = RF + LO$ (up-conversion, upper sideband): $RF_{image} = RF + 2*LO$. RF_{image} is always positive and $> RF$. RF_{image} never falls below the minimum frequency of the analyzer but may exceed its maximum frequency.
- $IF = RF - LO$ (down-conversion, upper sideband): $RF_{image} = 2*LO - RF$ or $RF_{image} = RF - 2*LO$, whichever is positive. For $RF = 2*LO$, $RF_{image} = 0$. RF can fall below the minimum frequency of the analyzer or exceed its maximum frequency.
- $IF = LO - RF$ (down-conversion, lower sideband): $RF_{image} = 2*LO - RF$. RF_{image} is always positive and $> IF$. RF_{image} never falls below the minimum frequency of the analyzer but may exceed its maximum frequency.

If RF_{image} exceeds the analyzer's frequency range, an error message is displayed.

Mixer Power Cal...

The *Scalar Mixer Measurement Power Calibration* wizard controls the power calibration of the scalar mixer measurement. A power calibration ensures accurate levels of the mixer input signals (RF and LO source power calibration) and an accurate power measurement of the mixer output signal (IF source or receiver calibration). The necessary calibration steps are automatically performed across the entire frequency range of the active mixer measurement (*Define Frequencies*).


The mixer power calibration procedure depends on the correction type selected in the *Define Scalar Mixer Measurement* dialog.




Mixer Power Cal procedure and example: scalar correction

Due to the different frequency ranges of the input and output signals and the external equipment needed, the mixer power calibration must be performed in several steps. For a test setup where the RF and LO signals are provided by port 1 and an external generator, respectively, where the RF signal is swept, the LO signal is at fixed frequency, and where the swept IF signal is analyzed at port 2, the following test setups are required:

1. Source power calibration for the RF signal. A power sensor is connected to port 1. The RF power (red) is calibrated over the selected RF sweep range. As a preparative for step 2 the analyzer also calibrates the source in the IF frequency range. The correction data for both calibration sweeps is stored.

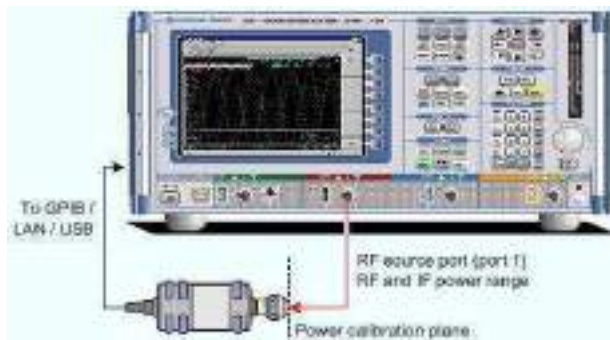

2. Receiver power calibration for the IF signal. No external device is needed. The receiver (port 2) is calibrated in the IF frequency range using the source signal from port 1 (red) calibrated in the first step.

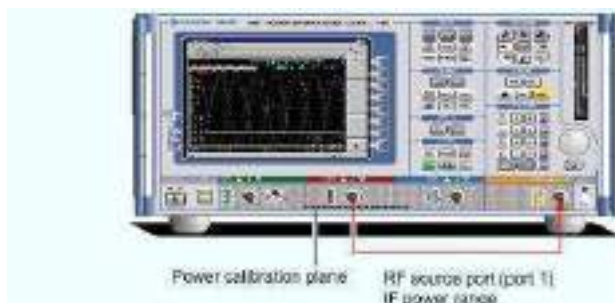


3. Source power calibration for the LO signal, provided e.g. by an external generator. A power sensor is connected to the generator's RF output (red signal). The analyzer controls the generator. The generator's RF source power (red) is calibrated at the selected LO frequency. No RF connection to or from the network analyzer is needed.



Mixer Power Cal procedure: source match or source and load match correction

The mixer power calibration for measurements with source match correction and with source and load match correction is similar to the power calibration for the scalar correction type described above, however, the following differences apply:

- A source power calibration of the IF port (in the IF frequency range) is recommended. The IF source power calibration avoids possible inaccuracies of an IF receiver calibration (due to cable loss, connectors and mismatch). This calibration step requires an additional connection of the power meter to the IF port. Together with the [enhanced wave correction](#), it also calibrates the IF receiver.
- If the IF source port calibration is performed, then no additional IF receiver calibration is necessary. Furthermore, the RF source power calibration in the IF range is not needed.
- If an additional IF receiver calibration is performed, it is possible to switch back to scalar correction or toggle between the correction types.

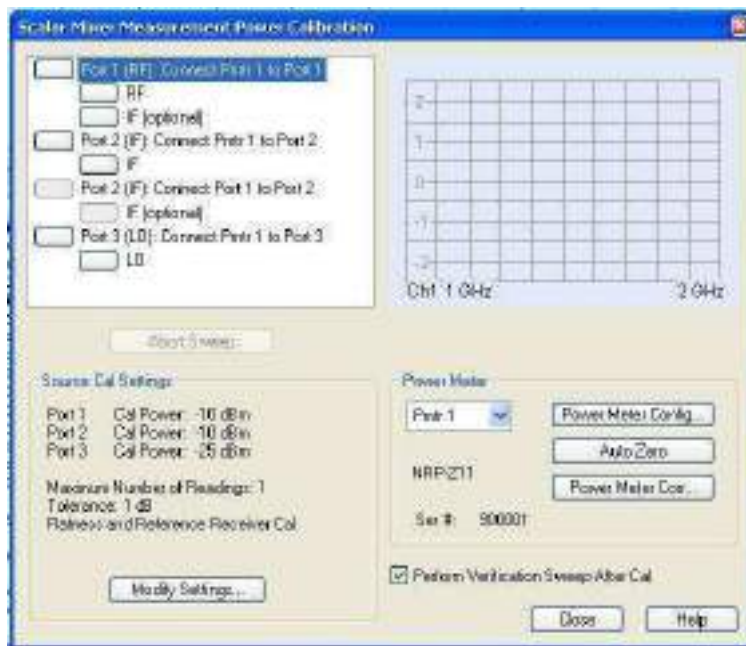

- A click in one of the boxes in the list of calibrations in the upper left part of the dialog starts the calibration sweeps for the RF source, IF source or receiver, and the LO source, respectively. The measured power is shown in the diagram to the right and the sweep progress in the message field below.
The list of calibrations depends on the correction type selected in the *Define Scalar Mixer Measurement* dialog; see background information above.
If a calibration cannot be performed using the currently selected settings, the respective box is marked with an exclamation mark and an error description is shown in the lower left part of the dialog.
- *Abort Sweep* stops the current sweep, e.g. in order to change the sweep settings.
- The calibration sweeps are performed according to the settings shown in the *Source/Receiver Cal Settings* panel below the list of calibrations. *Modify Settings* opens the [Modify Source Power Cal Settings](#) dialog to modify the essential settings of the next calibration sweep.
- *Power Meter* selects an external power meter that is used to measure the exact source power at the calibration plane; see [Power Meter Settings](#) in the *Power Calibration* section. Power meters (Pmt1, Pmt2, ...) must be configured in the *System Configuration – External Power Meters* dialog before they appear in the list.
- *Perform Verification Sweep after Cal* enables or disables a verification sweep that the analyzer performs after each source power calibration. The sweep is also displayed in the calibration sweep diagram. Its purpose is to test the accuracy of the source power calibration after the final correction data has been acquired. The final power calibration results are applied starting with the first sweep after the verification sweep.



The calibration sweeps for the different power calibration steps can be viewed in remote control, too. See [Viewing calibration sweeps in remote state](#).

Remote control: `SOURce<Ch>:POWer<Pt>:CORRection:PMETer:ID`
`SOURce<Ch>:POWer<Pt>:CORRection:MIXer:RF[:ACquire]`
`[SENSe<Ch>:]CORRection:POWer<port_no>:MIXer:IF:ACquire`
`SOURce<Ch>:POWer<Pt>:CORRection:MIXer:LO[:ACquire]`


```
SOURce<Ch>:POWer<Pt>:CORRection:MIXer:RF:NFIGure[:ACQuire]
[SENSe<Ch>:]CORRection:POWer<port_no>:MIXer:IF:NFIGure:ACQuire
```

Mixer Cal...

Opens a submenu to perform the system error corrections which are required for the enhanced mixer measurement. The calibration can be performed manually or using a calibration unit.

- *Manual...* opens the [Calibration](#) wizard for two full one-port calibrations at the RF and IF ports.
- *Calibration Unit...* opens the [Calibration Unit](#) dialog for automatic calibration using the connected calibration unit. The pre-selected calibration type is compatible to the scalar mixer measurement.

Both calibration methods provide equivalent results. After the mixer cal is applied, the analyzer automatically activates an enhanced wave correction at the RF and IF ports; see [Enhanced Wave Correction \(Scalar Mixer Meas.\)](#). A [Load Match Correction](#) can be activated in addition, depending on the correction type selected in the *Define Scalar Mixer Measurement* dialog.



The enhanced wave correction relies on accurate RF source and IF receiver powers. A *Mixer Power Cal* is required in addition to the *Mixer Cal*. After a completed power calibration and mixer calibration, the trace line for the conversion loss S_{21} shows the [calibration state label Pcal Cal](#). The mixer calibration improves the accuracy of the scalar mixer measurement but does not provide any additional results. The phase or group delay of mixers can be analyzed in a [vector mixer measurement](#).

Enhanced Wave Correction (Scalar Mixer Meas.)

The *Mixer Cal* automatically includes an [enhanced wave correction](#) at the RF and IF ports.

The enhanced wave correction for the scalar mixer measurement calibrates the a- and b-waves at the RF and IF ports of the mixer under test. The RF and IF frequencies are different from each other. Two steps are required to calibrate each of the ports:

- A source or receiver power calibration determines the absolute amplitude of the a- or b-waves.
- A full one-port system error correction calibrates the phase and relative power of the waves. Together with the power calibration, this yields the absolute power of all waves.

The order of the calibration steps is arbitrary. A [Scalar Mixer Measurement Power Calibration](#) provides a source power calibration for the RF port and a receiver power calibration for the IF port. The [Scalar Mixer Meas Calibration](#) provides both full one-port calibrations.

The one-port calibrations for the two ports are completely independent; the calibration does not involve a through-connection between the ports. Alternatively, it is possible to perform a single full two-port calibration at the RF and IF ports as shown in section [Enhanced Wave Correction Procedure](#). The analyzer will perform segmented calibration sweeps and discard the calibration data of the Through standard.



Note that *Enhanced Wave Correction* is not supported for [Mixer Delay Measurements](#) and [Harmonics Measurements](#).

Vector Mixer Meas (for R&S ZVA and R&S ZVT)

The *Vector Mixer Meas* submenu is used to assess the parameters of an external mixer including phase,

e.g. the complex conversion loss or reflection coefficients. Compared to scalar mixer measurements, vector mixer measurements require an extended test setup and calibration method. Vector mixer measurements also require option R&S ZVA-K5, *Vector Mixer Calibration*. Moreover, the hardware options R&S ZVA<frequency>-B16, *Direct Generator/Receiver Access*, must be fitted.



Vector mixer measurements


In contrast to [scalar mixer measurements](#), vector mixer measurements provide magnitude **and** phase information, including group delay, about the mixer under test (MUT). To assess the phase information, the IF signal at the mixer output is converted back to the original RF frequency using a second MEAS mixer. A third REF mixer ensures that the reference wave is converted back to the RF frequency. The test setup also requires a high or lowpass filter and a power splitter.

Vector mixer measurements are performed between the physical ports 1 and 2 of the network analyzer. No balanced port configurations are supported. Port 1 is assigned to the RF port of the mixer under test, port 2 to the IF port. Due to the two additional mixers, the frequencies of the measured waves a_1 , a_2 , b_1 , and b_2 are all equal so that S-parameters and other quantities can be interpreted in the usual way, in analogy to the parameters of a non frequency-converting network. The LO signals for the MUT and the additional mixers can be provided by additional analyzer ports (port3, port 4, if available) or by external generators.

With the extended test setup, calibration becomes an important issue: In addition to the power calibration of the source signals, a complete two-port calibration at ports 1 and 2 (mixer vector calibration) is required to compensate for the effects of the additional components and shift the reference plane towards the ports of the mixer under test.

In the vector mixer mode the analyzer provides the following functionality:

- Configuration of the RF and LO signals and measurement of the generated IF signal, see [Define Mixer Mode](#) and [Vector Mixer Test Setup](#).
- Power calibration of all signal sources; see [Mixer Power Calibration](#).
- Full two-port calibration of the test setup including the two additional mixers; see [Mixer Vector Calibration](#).
- The vector mixer mode can be used to test important performance parameters of RF mixers such as frequency ranges, conversion loss, compression, and isolation.

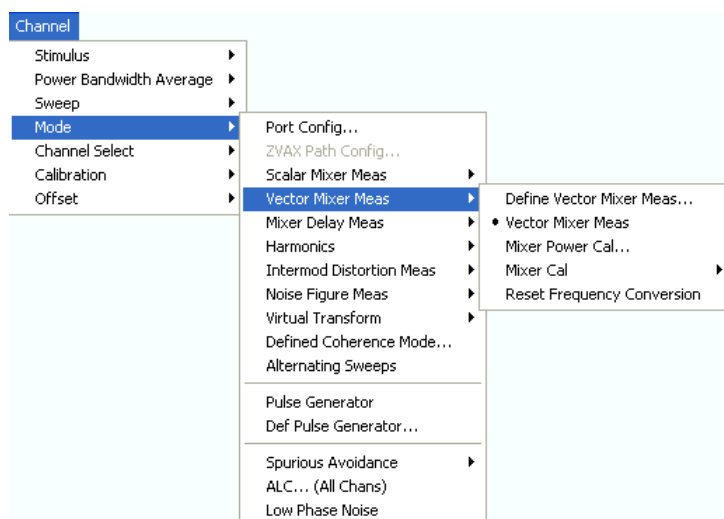


- [Define Vector Mixer Meas...](#) opens a dialog to configure the mixer input signals.

- [Vector Mixer Meas](#) and [Reset Frequency Conversion](#) toggle between the (frequency-converting) vector mixer mode and normal (non frequency converting) operation.
- [Mixer Power Cal...](#) opens a dialog to perform a power calibration of the signal sources and of the IF receiver.
- [Mixer Cal...](#) initiates a two-port calibration of the extended test setup including the two additional mixers and the lowpass or highpass filter.

Define Vector Mixer Meas...

Opens a configuration dialog for the mixer input signals and indicates the extended test setup.

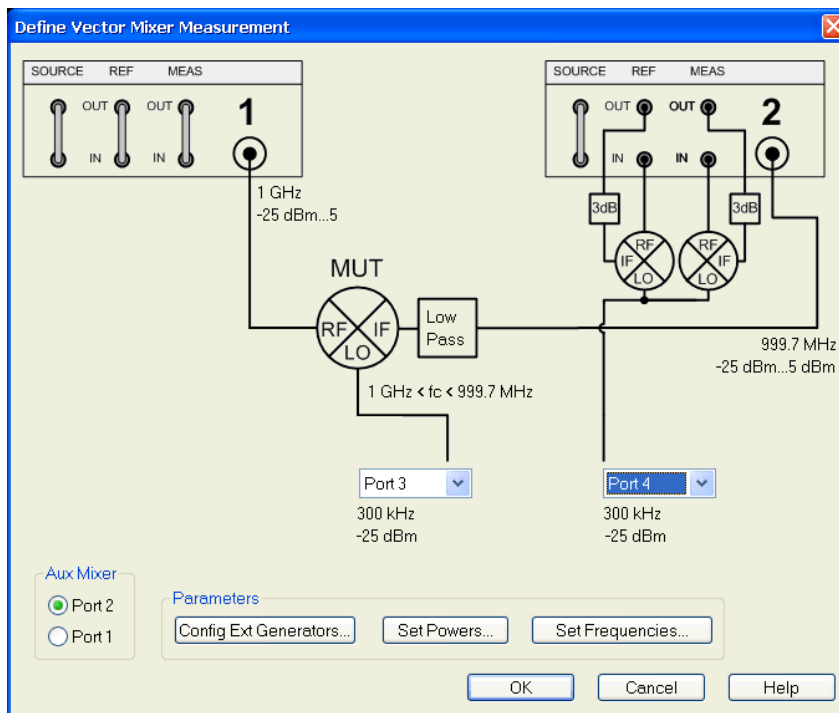

In the upper part the *Define Mixer Measurement* dialog shows a diagram with the [test setup](#) for vector mixer measurements. Below the dialog provides the following control elements:

- Two port selection lists contains all analyzer ports or external generators which can provide the local oscillator (LO) signals. Ports no. 1 and 2 are always used for the RF signal and the measured IF signal (mixing product), so they are not included in the lists. Generators must be configured explicitly in the *System Configuration – External Generators* dialog before they appear in the lists. *None* means that a LO generator is not controlled by the analyzer. A power splitter is required to supply both the MEAS and the REF mixer ("Aux Mixer") with a LO signal (termed "Aux LO") from a single source. With a second splitter or a 3-way splitter, it is possible to supply all three mixers from a single source.
- *Aux Mixer* selects one of two alternative [test setups](#), with the MEAS and REF mixers connected to either port 2 or port 1.
- *Config Ext. Generators...* opens the *System Configuration – External Generators* dialog for adding and configuring external generators.
- *Set Powers...* opens a dialog to control the power of the RF and the LO signals.

- [Set Frequencies...](#) opens a dialog to control the frequency of the RF and the LO signal and the analyzer (IF signal) frequency.



For network analyzers with upper frequency limits above 20 GHz, the lower IF frequency limit is 600 MHz, if the MEAS and REF mixers are connected to port 2. Change the [test setup](#) if the IF frequency falls below this limit.

Remote control:

```
[SENSe<Ch>:] FREQuency:CONVersion:MIXer:LOINternal <port_no>
[SENSe<Ch>:] FREQuency:CONVersion:MIXer:LOEXternal <gen_no>
[SENSe<Ch>:] FREQuency:CONVersion:MIXer:AINternal NONE |
<port_no>
[SENSe<Ch>:] FREQuency:CONVersion:MIXer:AEXternal NONE |
<gen_no>
[SENSe<Ch>:] FREQuency:CONVersion:MIXer:APORt <port_no>
```

Vector Mixer Meas, Reset Frequency Conversion

The softkey *Vector Mixer Meas* activates the vector mixer mode, where the analyzer ports provide different source frequencies. *Reset Frequency Conversion* disables all frequency-converting measurements, including e.g. an active scalar mixer, mixer delay, or harmonic distortion measurement.

A *Mix* label in the [channel list](#) indicates that a frequency-converting mode is active.


Ch1	Mix Freq	Base Freq	Start	1 GHz	Base Pwr	0 dBm

Remote control: `[SENSe<Ch>:] FREQuency:CONVersion VMIXer | FUNDamental`

Vector Mixer Test Setups

The mixer signal diagram shows the test setup including the mixer under test (MUT) and the two additional mixers ("Aux mixer"), the RF and LO signals, the mixing product (IF) with the necessary low or high pass filter, and the current frequency and power ranges for all signals. The diagram appears in the [Define Vector Mixer Measurement](#) dialog.

The mixer diagram changes along with the selected position of the MEAS and REF mixers. The example below corresponds to *Aux Mixer: Port 2*. The alternative diagram is symmetric, with the MEAS and REF mixers connected to port 1. See background information *Finding the best test setup* below.

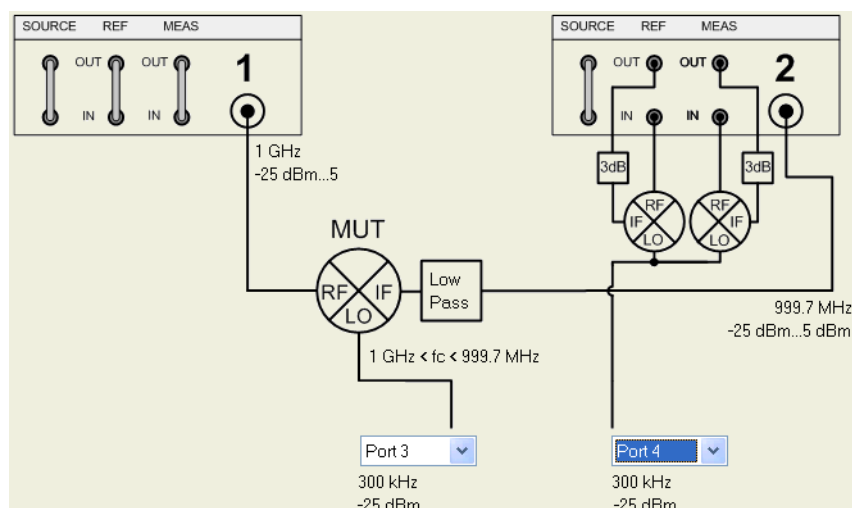


- The *RF* signal is the stimulus signal that the analyzer generates with the current channel settings. After a reset the frequency and power of the RF signal is as defined in the *Channel – Stimulus* menu. The RF signal parameters can be changed in the *Set Power...* and *Set Frequencies...* dialogs.
- The Local Oscillator (*LO*) signals are two additional RF signals that are either generated by the network analyzer (at the ports that are not used for the RF and IF signals, i.e. port 3, 4...) or by external generators. Both LO signals are at the same frequency. The first LO signal is fed to the LO input of the MUT, the second to the additional mixers using an appropriate power splitter (not in the diagram). If necessary, appropriate amplifiers can be used in addition. With a second power splitter or a 3-way splitter, it is also possible to supply all three mixers from a single source. On four-port analyzers, it is recommended to use the (coupled) analyzer ports port 3 and port 4 for the LO signals.
- The *IF* signal is the mixer output signal (mixing product), which is at one of the following frequencies: $IF = |LO - RF|$, i.e. $LO - RF$ (for $LO > RF$) or $IF = RF - LO$ (for $RF > LO$) or $IF = LO + RF$. The IF frequency band is selected in the *Set Frequencies...* dialog.
- The lowpass or highpass filter rejects the undesired mixing product that might impair the accuracy of the measurement and of the mixer vector calibration. The required filter type and cut-off frequency are displayed in the diagram, depending on the RF / LO frequencies and the **selected IF band**.

If the mixer under test is measured in **down-converting** mode ($IF = RF - LO$ or $IF = LO - RF$), a **lowpass** filter must be used to reject the up-converted IF signal at $IF = RF + LO$. If fed to the IF input of the MEAS mixer, the $RF + LO$ signal would be down-converted to RF, which would make it indistinguishable from the $RF - LO$ signal, up-converted to RF. The cut-off frequency of the lowpass filter must be between $\text{Max}(RF - LO)$ and $\text{Min}(RF + LO)$.

If the mixer under test is measured in **up-converting** mode ($IF = RF + LO$), a **highpass** filter must be used to reject the down-converted IF signal at $IF = RF - LO$. If fed to the IF input of the MEAS mixer, the $RF - LO$ signal would be up-converted to RF, which would make it indistinguishable from the $RF + LO$ signal, down-converted to RF. The cut-off frequency of the highpass filter must be between $Max(RF - LO)$ and $Min(RF + LO)$.

- The additional mixer MEAS converts the filtered IF signal from the mixer under test back to the RF frequency which is fed to the measurement receiver at port 2.
- The additional mixer REF converts the IF signal from the internal source at port 2 to an RF signal which is fed to the reference receiver.

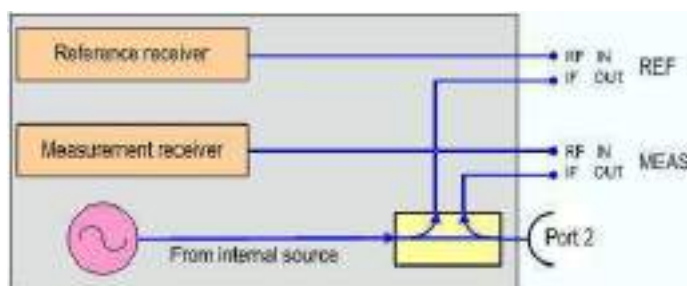

The signal description above with the swept RF signal and the LO signal at a fixed frequency corresponds to the default configuration. In the *Set Frequencies* dialog, you can select any of the signals as a *Sweep/CW* signal. You can set the frequency range of this signal via *Start/Stop or CW Frequency*. A second signal is at a *Fixed* frequency, and the third at the calculated sum or difference frequency (*Auto*).

The vector mixer measurement is also compatible with different sweep types, e.g. a power sweep. The labeling of the input and output signals of the MUT depends on the sweep type.



Finding the best test setup

The alternative test setups place different requirements on the NWA receivers and the additional equipment.

Test setup (Aux Mixer)	Receiver requirements	Lowpass / highpass filter requirements
Port 2, forward measurement (port 1 --> port 2)	RF signal is converted to IF by the MUT and passes the coupler at NWA port 2 as well as the MEAS mixer before it reaches the measurement receiver. --> Reduced accuracy for network analyzers with an upper frequency limit > 20 GHz and IF frequencies <600 MHz.	The distance between the two IF bands increases with the LO frequency. --> Moderate filter requirements for "standard" measurement scenarios where $f_{RF} \gg f_{IF}$, $f_{LO} \gg f_{IF}$.
Port 2, reverse measurement (port 2 --> port 1)	No limitations	n/a
Port 1, forward measurement (port 1 --> port 2)	No limitations	n/a
Port 1, reverse measurement (port 2 --> port 1)	IF signal is converted to RF by the MUT and passes the coupler at NWA port 2 as well as the MEAS mixer before it reaches the measurement receiver. --> Reduced accuracy for network analyzers with an upper frequency limit > 20 GHz and RF frequencies <600 MHz.	The distance between the two RF bands decreases if a smaller IF frequency is chosen. --> High filter requirements for "standard" measurement scenarios with low IF frequencies.



Avoid test setup "Port 2", if you use a network analyzer with an upper frequency limit > 20 GHz and work at IF frequencies <600 MHz.



Avoid test setup "Port 1", if the edge of your lowpass or highpass filter is not steep enough to clearly separate the two RF bands in the reverse measurement.

Example: RF frequency: 1.1 GHz ... 1.2 GHz, LO Frequency: 1.0 GHz, IF = RF – LO (Down, USB). An R&S ZVA24 network analyzer is used.

--> IF = 100 MHz ... 200 MHz. For best accuracy in the forward measurement, use test setup "Port 1". In the reverse measurement, this test setup requires a highpass filter with a cutoff $900 \text{ MHz} < f_c < 1.1 \text{ GHz}$.

Mixer Power Cal...


The *Vector Mixer Measurement Power Calibration* wizard controls the power calibration of the vector mixer measurement. A power calibration ensures accurate levels of the mixer input signals (RF, IF, and LO source power calibration). The necessary calibration steps are automatically performed across the entire frequency range of the active mixer measurement ([Set Frequencies](#)).



Mixer Power Cal procedure and example

Due to the different frequency ranges of the input and output signals and the external equipment needed, the mixer power calibration must be performed in several steps. For the standard test setup where the RF and LO signals are provided by port 1 and an external generator, respectively, where the RF signal is swept, and where the IF signal is analyzed at port 2, the following test setups are required:



1. Source power calibration for the RF signal. A power sensor is connected to port 1. The RF power (red) is calibrated over the selected RF sweep range.

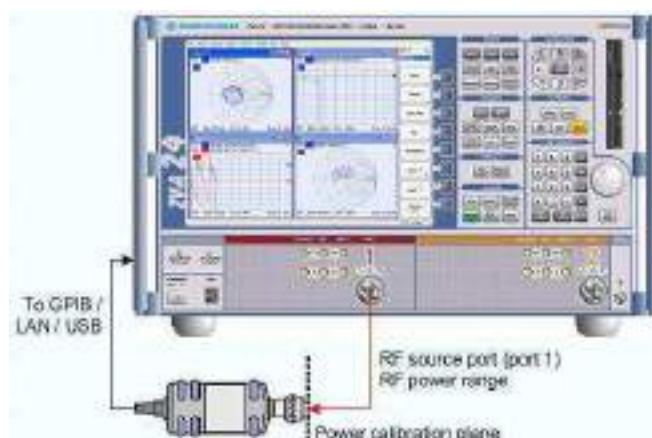

2. Source power calibration for the IF signal. A power sensor is connected to port 2. The IF power (red) is calibrated over the IF sweep range, calculated from the selected RF sweep range and the LO frequency. No additional external devices such as mixers are needed.



3. Source power calibration for the LO signal, provided by an external generator. A power sensor is connected to the generator's RF output (red signal). The analyzer controls the generator, its RF power (red) is calibrated at the selected IF frequency. No RF connection to or from the network analyzer is needed.

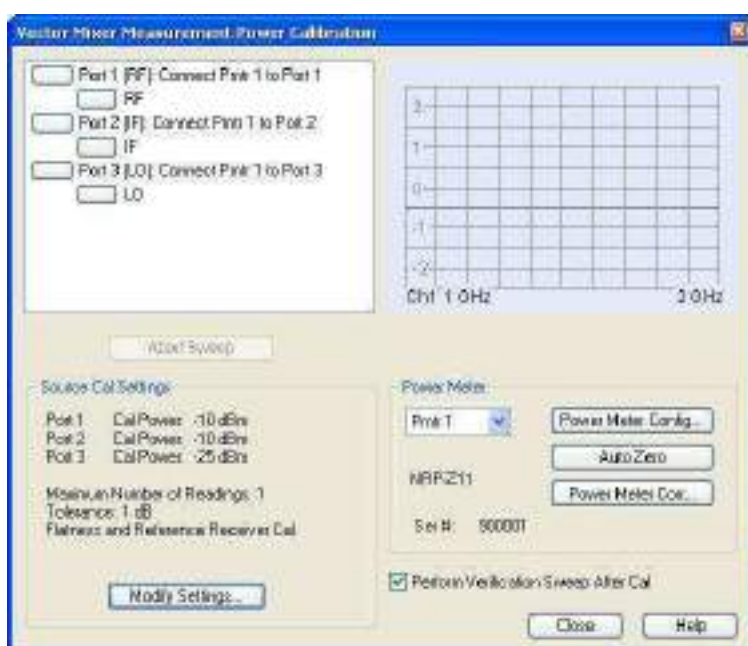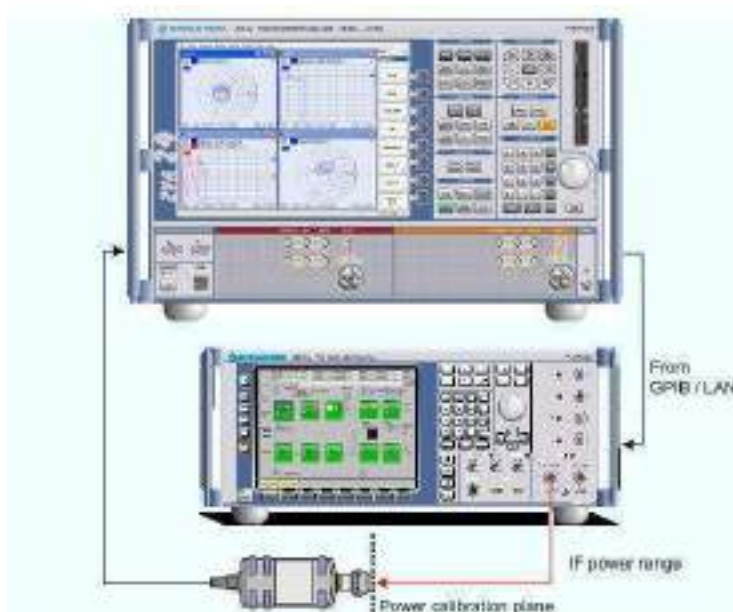

- A click in one of the boxes in the list of calibrations in the upper left part of the dialog starts the calibration sweeps for the RF source, IF source, and the LO source, respectively. The measured power is shown in the diagram to the right and the sweep progress in the message field below. If a calibration cannot be performed using the currently selected settings, the respective box is marked with an exclamation mark and an error description is shown in the lower left part of the dialog.
- *Abort Sweep* stops the current sweep, e.g. in order to change the sweep settings.
- The calibration sweeps are performed according to the settings shown in the *Source Cal Settings* panel below the list of calibrations. *Modify Settings* opens the [Modify Source Power Cal Settings](#) dialog to modify the essential settings of the next calibration sweep.
- *Power Meter* selects an external power meter that is used to measure the exact source power at

the calibration plane; see [Power Meter Settings](#) in the *Power Calibration* section. Power meters (Pmtr1, Pmtr2, ...) must be configured in the *System Configuration – External Power Meters* dialog before they appear in the list.

- *Perform Verification Sweep after Cal* enables or disables a verification sweep that the analyzer performs after each source power calibration. The sweep is also displayed in the calibration sweep diagram. Its purpose is to test the accuracy of the source power calibration after the final correction data has been acquired. The final power calibration results are applied starting with the first sweep after the verification sweep.

Remote control: `SOURce<Ch>:POWer<Pt>:CORRection:PMETer:ID`
`SOURce<Ch>:POWer<Pt>:CORRection:MIXer:RF[:ACQuire]`
`SOURce<Ch>:POWer<Pt>:CORRection:MIXer:IF[:ACQuire]`
`SOURce<Ch>:POWer<Pt>:CORRection:MIXer:LO[:ACQuire]`

Mixer Cal...

Opens a submenu to perform a 2-port calibration (system error correction) for vector mixer measurements. The calibration can be performed manually or using a calibration unit.

- [Manual Cal...](#) opens the *Calibration* wizard for two full one-port calibrations at ports 1 and 2.
- [Calibration Unit...](#) opens a dialog for (partially) automatic calibration using the connected calibration unit.


Both calibration methods provide equivalent results.

Manual Cal...

Opens the [calibration wizard](#) to perform a 2-port calibration (system error correction) for vector mixer measurements. The calibration is performed with the complete test setup including the additional mixers MEAS and REF and the highpass or low pass filter. The mixer under test (MUT) is simply replaced by the required calibration standards. The effect of the calibration is to shift the reference plane to the MUT ports as shown below (red lines represent the reference plane without calibration and with closed jumper connectors, green lines represent the reference plane after calibration).



Due to the frequency-converting properties of the vector mixer measurement, the factory calibration is not applicable and therefore suspended. The [Measure Standards](#) calibration dialog shows uncorrected, raw measurement results; the mixer vector calibration is based on these results. A proper mixer vector calibration is essential for an accurate vector mixer measurement.

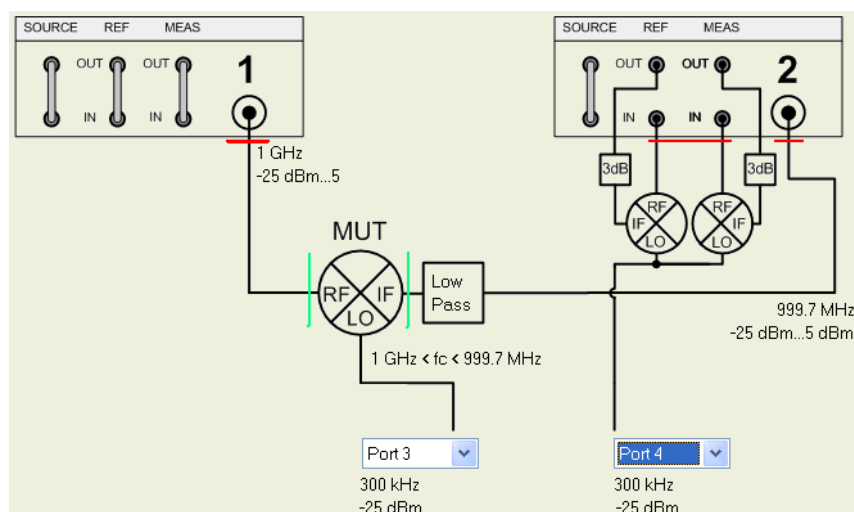

The mixer vector calibration corresponds to a 2-port **UOSM** calibration where the unknown through standard is replaced by an unknown calibration mixer. In analogy to the unknown through standard used for UOSM calibration, the calibration mixer must be reciprocal ($S_{21} = S_{12}$).




If your mixer under test is reciprocal, you can also use it as a calibration mixer.

Remote control: `[SENSe<Ch>:]CORRection:COLLect:METHod:DEFine
"<cal_name>", UOSM, <port_no>[,<port_no>][,<port_no>][,<port_no>]
[SENSe<Ch>:]CORRection:COLLect[:ACQuire]:SElected
UTHRough,<port_no>,<port_no>[, <Dispersion>, AUTO | <delay | phase>]`

See also calibration wizard description.

Calibration Unit...

Opens a dialog for automatic vector mixer calibration using the connected calibration unit.

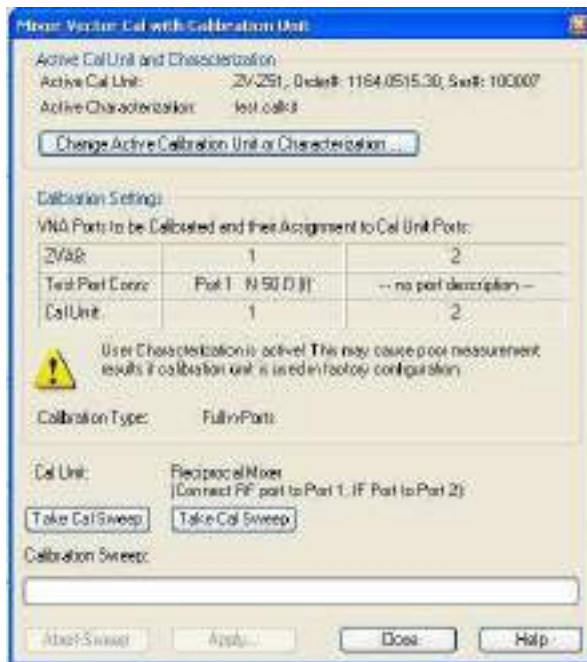

The dialog shows the active calibration unit and characterization. Click *Change Active Calibration Unit or Characterization...* to change these settings. The port assignment displayed in the center of the dialog must not be changed.



To prevent the LO power from being set to -10 dB during calibration, deactivate Automatic Power Reduction for Calibration Unit in the [Calibration](#) tab of the System Config dialog and ensure an input power below -10 dBm at the cal unit ports by other means.

The automatic calibration procedure is analogous to manual calibration, however, automatic calibration involves only two steps:

- Connect the cal unit between ports 1 and the lowpass filter (see figure in section [Manual Cal](#)) and click the left *Take Cal Sweep* button to obtain the one-port correction data. (The active cal unit contains the necessary one-port standards and provides all necessary one-port data at once.)
- Connect a reciprocal calibration mixer between ports 1 and the lowpass filter and click the right *Take Cal Sweep* button to obtain the missing 2-port correction data. (This step is necessary because the calibration unit does not provide any frequency-converting calibration standards.)

The order of the two calibration steps is arbitrary. After completing the calibration sweeps, click *Apply* to start the calculation of the system error correction data and apply the calibration to the active channel.

Remote control: `[SENSe<Ch>:]CORRection:COLLect:AUTO:VMIXer:ACQuire`

Mixer Delay Meas (for R&S ZVA or R&S ZVT)

The *Mixer Delay Meas* submenu controls the measurement of the absolute or relative group delay of a mixer. Mixer delay measurements require option R&S ZVA-K9, *Mixer Delay w/o LO Access*. An additional option R&S ZVA-K10, *Long Distance Mixer Delay*, enables mixer delay measurements with an external

receiver.



Mixer Delay Measurement

The mixer delay measurement is an extension of the [scalar mixer measurement](#): The network analyzer generates a two-tone RF signal as a mixer input signal and measures the converted IF signal at the mixer output. The mixer delay is derived from the relative phases of the two-tone signals at the mixer input and the mixer output.

The group delay τ_g of a circuit is defined as the negative derivative of its phase response (see [Delay](#)), hence, for two tones with phases Φ_1 and Φ_2 and a frequency difference ("aperture") Δf :

$$\tau_g = -\frac{d\phi_{deg}}{360^\circ df} \approx -\frac{\Delta\phi_{deg}}{360^\circ \Delta f} = -\frac{\Delta\phi_2 - \Delta\phi_1}{360^\circ \Delta f} = -\frac{(\phi_2^{out} - \phi_2^{in}) - (\phi_1^{out} - \phi_1^{in})}{360^\circ \Delta f} = \frac{\Delta\phi^{out} - \Delta\phi^{in}}{360^\circ \Delta f}$$

$\Delta\Phi^{in}$ and $\Delta\Phi^{out}$ are the phase differences of the two tones at the input and output of the DUT, respectively.

The phase difference of the source signal $\Delta\Phi^{in}$ and the aperture Δf are known quantities. $\Delta\Phi^{out}$ depends on the DUT and can be measured. As a phase difference, $\Delta\Phi^{out}$ is stable against variations of the LO frequency, because those will affect both signals in the same way. This means that the mixer delay measurement does not require any synchronization between the analyzer and the LO signal, even if the LO shows a noticeable frequency drift.


Compared to conventional measurement methods, the mixer delay measurement offers several additional advantages.

- No external mixers are needed
- A network analyzer with standard functionality is sufficient, see description of test setups below
- Easy calibration using a calibration mixer; see [Mixer Delay Meas Calibration](#).



Test Setups with Internal Receiver

The mixer delay measurement requires two independent RF signal sources. The two IF signals can be measured simultaneously at a single analyzer port. For an R&S ZVA analyzer that is equipped with option R&S ZVA<frequency>-B16, *Direct Generator/Receiver Access*, a test setup of the following type is recommended:

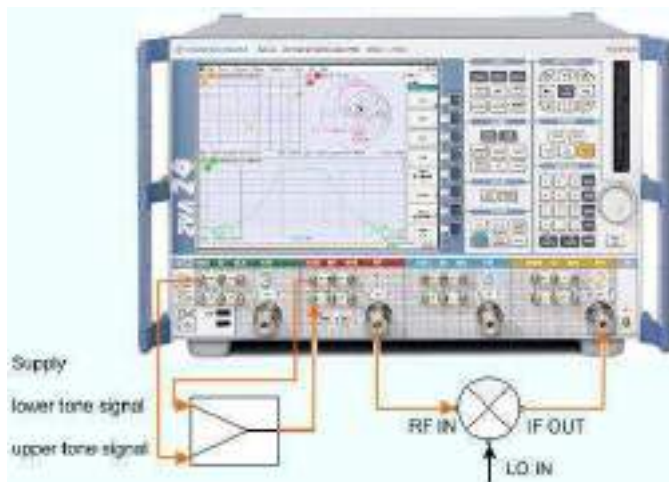

Test setup 1: External combiner

The lower tone signal is generated at port 1, the upper tone is provided by port 3. Both signals are combined externally and fed to the SOURCE IN connector at port 1. Thus the superimposed signals are

available at test port 1 and can be fed to the DUT input. The IF output signal is measured at port 2. It is possible to use an external generator for the upper tone signal, so that two analyzer ports are sufficient.



On R&S ZVA67 and on R&S ZVA24/40 network analyzers with four ports and four generators (order nos. 1145.1110.28/48), all ports have independent internal sources. You can use true differential mode with an arbitrary combination of two source ports.

As an alternative to the test setup 1 shown above, you can also combine the two tones using the coupler in the test set of port 3:



Test setup 2: Coupler used as an internal combiner

When using test setup 2, open the *Channel – Mode – Port Configuration* dialog and adjust the source powers: To compensate for the coupling loss of the internal coupler, the source power at port 1 should be 10 dB above the source power at port 1. See also section [Level Handling during Power Calibration](#).




For network analyzers with upper frequency limits of 20 GHz and above, test setup 2 causes some restrictions:

- The lower frequency limit is 500 MHz. Use external combiners at lower frequencies, especially if you want to measure at high RF source powers.
- If an high-frequency RF signal is down-converted to in IF signal with a frequency below 500 MHz, the IF signal should be measured directly at MEAS IN (rather than at test port 2).



Test Setups with External Receiver

With option R&S ZVA-K10, the mixer delay measurement can be performed with two different R&S ZVA or R&S ZVT network analyzers, one providing the source ports, the other the receive port. The two instruments can communicate with each other via LAN using LXI event messages. This can be advantageous e.g. for measurements on DUTs with large dimensions where the connection to a single instrument would require very long RF cables. The test setup for a source instrument with internal coupler is shown in the *Mixer Delay Measurement Setup* dialog.

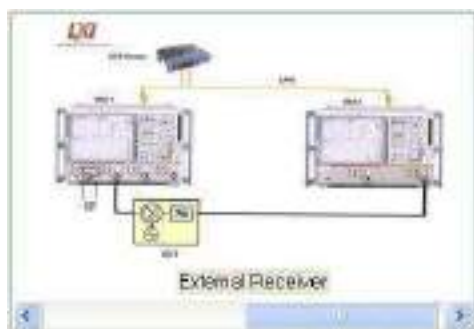

Test setup with external receiver

It is also possible to use an external coupler; in analogy to the [Test Setup with Internal Receiver](#), or establish a direct (dedicated) LAN connection between the two analyzers.

The measurement with external receiver is performed as follows:


1. The sender network analyzer (VNA1) transfers its channel settings to the receiver analyzer (VNA2), i.e. VNA2 is fully controlled by VNA1 and shows its remote screen.
2. VNA1 generates the dual-tone source signal for the first sweep point, VNA2 measures the b-waves and returns the results to VNA1.
3. VNA1 calculates and displays the mixer delay results.
4. Steps 2 and 3 are repeated for all sweep points.

Conditions and Restrictions

The mixer delay with external receiver requires a single-channel test setup. During the measurement, use the 10 MHz reference frequency to keep both analyzers synchronized and do not switch off any of the instruments.

If the NWA application is closed and started again, the measurement must be re-started manually (*Channel – Sweep – Restart*).

The *Mixer Delay Meas* menu is shown below.

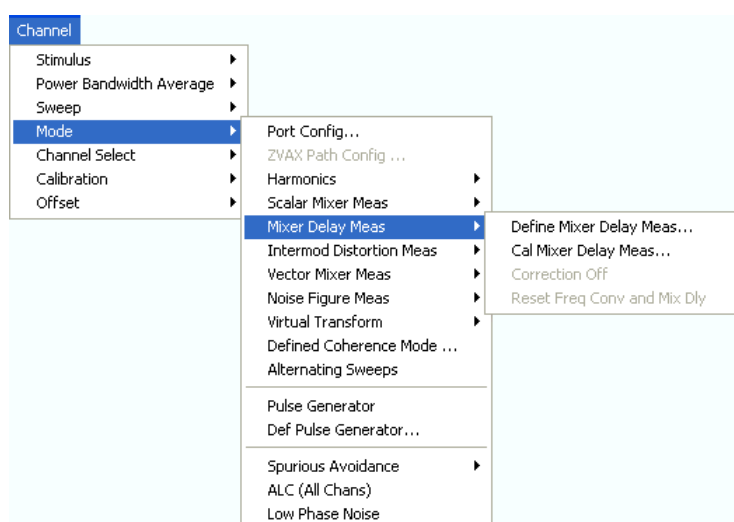

- [Define Mixer Delay Meas...](#) opens a dialog to configure and activate the mixer delay

measurement.

- [Cal Mixer Delay Meas...](#) opens a dialog to perform a power calibration of the signal sources and of the IF receiver.
- *Correction Off* switches the calibration on or off. To perform a calibration, click the *Cal Mixer Delay Meas...* softkey.
- [Reset Frequency Conv and Mix Dly](#) switches back to normal (non frequency converting) operation.

Define Mixer Delay Measurement without LO Access

The *Define Mixer Delay Measurement without LO Access* wizard defines the source and receiver settings for the mixer delay measurement.



Frequency range for mixer delay measurements

After a preset, the lower tone is swept across the full frequency range of the analyzer, and the aperture is set to 1 MHz. This means that both the lower tone and the upper tone frequencies are 1 out of range. Click [Set Frequencies and Powers](#) and reduce the sweep range to establish compatible settings.

The mixer delay measurement possible if the source frequency (as defined in the [Port Configuration](#) dialog) at one of the used source ports is different from the channel base frequency (the frequency-converting / arbitrary mode is active). When using this mode, ensure that the aperture does not exceed 15 MHz. Disabling the arbitrary mode can facilitate the configuration of the mixer delay measurement and the interpretation of the results.



- *Lower Tone* shows the (fixed) NWA source port for the lower tone signal (port 1).
- *Upper Tone* selects the NWA port 3 or external generator as a source of the upper tone signal. A combination of the NWA ports 1 and 3 ensures independent (uncoupled) sources.
- *Config Ext Generators...* opens the *System Configuration –External Generators* dialog for adding and configuring external generators.
- *Aperture* defines the frequency difference between the upper and the lower tone; see background information below. The aperture remains constant across the entire sweep.
- *Use Internal Combiner* activates the internal combiner
 - for network analyzers R&S ZVA connected to an Extension Unit R&S ZVAX24 or R&S ZVAX-TRM with installed combiner option

- for network analyzers R&S ZVT connected to an Extension Unit R&S ZVAX-TRM with installed combiner option
 - for network analyzers R&S ZVT20 that are equipped with option R&S ZVT20-B11
- With internal combiner, the two-tone signal is available at port 1.
- The settings in the *Receiver* panel define the bandwidth and selectivity of the IF filter at test port 2.
 - [Measurement Setup](#) opens the *Mixer Delay Measurement Setup* dialog for selection and configuration of a test setup with an additional R&S ZVA network analyzer, to be used as an external receiver.
 - [Define Mixer Measurement](#) opens the configuration dialog for a scalar mixer measurement. Use this dialog to select the LO source port and to define port frequencies and powers.
 - [Set Frequencies and Powers...](#) opens a dialog to define the sweep range.



Selecting appropriate apertures and meas. bandwidths

The mixer delay measurement depends on the frequency difference between the upper and lower tone termed the *Aperture*. Conversion of the two-tone RF signal in the mixer preserves the aperture. To ensure that the analyzer can detect the two IF signals and calculate reasonable group delay results, observe the following rules:

- Select a measurement bandwidth (IF bandwidth) which is significantly smaller than the aperture. High selectivity IF filters have steeper edges and improve the detection of the two adjacent signals.
- Detection fails if the frequency drift of the LO is larger than the IF bandwidth. An IF bandwidth larger than approx. 3 times the maximum LO drift is generally sufficient.
- The aperture must be adjusted to the mixer properties. A small aperture increases the noise in the group delay; a large aperture tends to minimize noise, but at the expense of the frequency resolution. Large aperture settings are preferable if the mixer shows little dispersion (i.e. almost constant delay).
For most broadband mixers, large aperture values (10 MHz to 15 MHz) are preferable. For satellite applications, smaller apertures (2 MHz to 4 MHz) are recommended. See also *Trace – Format – Aperture*.
- The calculation of the mixer delay fails if the phase shift difference between the upper and lower tones caused by the mixer exceeds 180 deg.




Primed wave quantities

When a mixer delay measurement is active, the wave quantities a and b in the [More Wave Quantities](#) and [More Ratios](#) dialogs correspond to the lower tone. The primed wave quantities a' and b' correspond to the upper tone.

Remote control: `[SENSe<Ch>:]FREQuency:MDElay:UTONe`
`[SENSe<Ch>:]FREQuency:MDElay:APERture`
`[SENSe<Ch>:]FREQuency:MDElay:COMBiner[:STATe]`
`[SENSe<Ch>:]BANDwidth|BWIDth[:RESolution]`
`[SENSe<Ch>:]BANDwidth|BWIDth[:RESolution]:SElect`
`[SENSe<Ch>:]FREQuency:MDElay:CORRection[:STATe]`

Mixer Delay Measurement Setup

The *Mixer Delay Measurement Setup* dialog provides the settings for a test setup with an additional R&S ZVA network analyzer (VNA2), to be used as an external receiver.

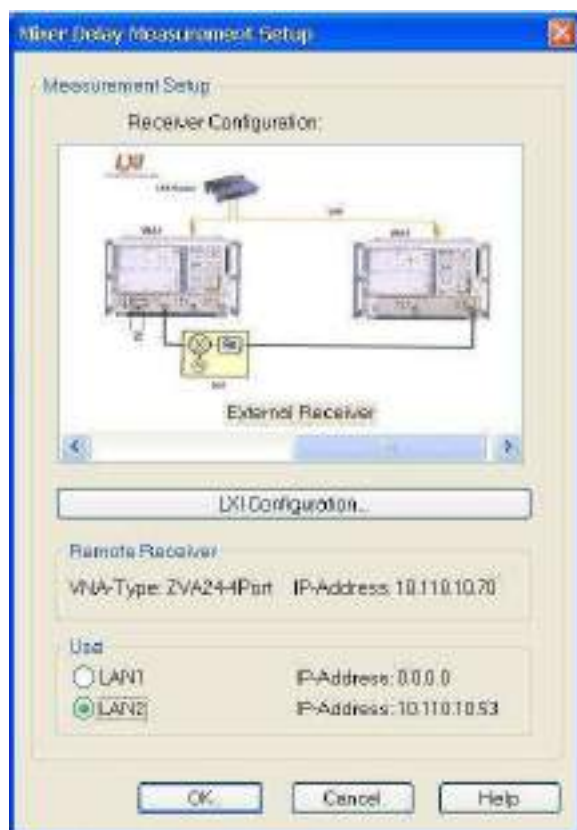

- *Receiver Configuration* shows the two alternative test setups with internal and external receiver. A mixer delay measurement with internal receiver (see [Test Setups with Internal Receivers](#) above) does not require any of the settings in the dialog.
- [LXI Configuration](#) opens a dialog to configure an additional network analyzer R&S ZVA as a remote receiver. The receiver instrument must be equipped with option R&S ZVA-K9, too.
- Use *LAN1* / *LAN2* selects one of the two LAN connectors at the rear panel of the source network analyzer (VNA1) for the connection. Both connectors are equivalent; select the one that you actually connect to the LAN/VNA2.



See [Test Setups with External Receiver](#)

Remote control: `[SENSe<Ch>:]FREQuency:MDElay:RECeiver`
`[SENSe<Ch>:]FREQuency:MDElay:RECeiver:USE`
`SYSTem:COMMUnicate:RDEvice:RECeiver:DEFine`
`SYSTem:COMMUnicate:RDEvice:RECeiver:DELete`

Set Frequencies and Powers

The *Set Frequencies and Powers* dialog defines the (frequency or power) sweep ranges for the lower and

upper tone.



The sweep range settings depend on the active sweep type (frequency or power sweep). The *Frequency* and *Power* settings are identical with the *Channel – Stimulus* settings.

The frequency of the lower tone is equal to the stimulus frequency minus half the *Aperture* defined in the *Define Mixer Delay Measurement without LO Access* dialog. The frequency of the upper tone is equal to the stimulus frequency plus half the *Aperture* defined in the *Define Mixer Delay Measurement without LO Access* dialog. The power of both tones is equal, however, the port powers can be varied using the *Channel – Mode – Port Configuration* table.

The *Frequency Range* table shows the frequency ranges for the lower and upper tone, depending on the current stimulus frequency range.

Remote control: `[SENSe<Ch>:]FREQuency:START`
`[SENSe<Ch>:]FREQuency:STOP`
`[SENSe<Ch>:]FREQuency:CW|FIXed`
`SOURce<Ch>:POWer<Pt>:START`
`SOURce<Ch>:POWer<Pt>:STOP`
`SOURce<Ch>:POWer<Pt>[:LEVel] [:IMMediate] [:AMPLitude]`

Mixer Delay Meas Calibration

This dialog controls the calibration for the mixer delay measurement. The calibration is based on a comparison of the measured mixer delay with the known delay of a calibration mixer. The necessary calibration sweep is automatically performed across the entire sweep range of the active mixer delay measurement (*Set Frequencies*).



Mixer Power Cal procedure and example

Connecting cables and other components in the test setup have an impact on the phase difference between the upper and the lower tone in the RF and IF signals and thus affect the measured mixer delay. Hence, an uncalibrated mixer delay measurement cannot provide the accurate "absolute" delay of a mixer.

A mixer delay calibration uses a mixer with known absolute delay as a calibration standard. Absolute mixer data can be acquired in a vector mixer measurement or in a simulation. The analyzer measures the calibration mixer and compares the measured group delay with the actual group delay in order to determine a set of correction data. The correction data is applied to subsequent measurements, if *Correction On* is selected in the *Define Mixer Delay Measurement without LO Access* dialog.

The following guidelines will help you find the appropriate calibration method:

- For many applications, the "relative" mixer delay of different mixers is a sufficient information. Relative measurements do not require any calibration; no calibration mixer with known absolute delay is needed.
- In cases where the delay of the calibration mixer is much smaller than the delay of the measured mixer (and small compared to an additional delay caused by the test setup), its absolute delay may be assumed to be zero. With this approximation, a calibration is still possible, but no previous vector mixer measurement for the calibration mixer is required.
- To determine accurate absolute delays, in particular for mixers with small delay values, a calibration using a calibration mixer with known (constant or frequency/power-dependent) delay is needed.



- The controls in the *Calibration Mixer Data* panel load absolute delay values for a calibration mixer. Mixer delays must be stored in ASCII files with the extension *.csv; two examples are stored in the default directory C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\MixerDelay. The files start with a preamble, followed by a list of stimulus values and absolute group delays. The file format is compatible with the export format for trace data, therefore it is possible to generate mixer delay files in a measurement with trace format *Delay*.
If an approximation with constant (or zero) delay of the calibration mixer is sufficient, select *Constant Delay* and enter the value into the *Const. Delay* input field.
Divide Calibration Data by 2 causes the analyzer to divide the delay values in the loaded mixer delay file by two. This is appropriate e.g. if the mixer delays were obtained in a reflection measurement: The division corrects for the double propagation time in forward and reverse direction.
- *Take Cal Sweep* starts the calibration sweep and calculates the correction data. If the current sweep points do not coincide with the stimulus values in the mixer data file, the delays are interpolated or extrapolated.
- *Save* calls up a *Save As...* dialog to store the calculated correction data to a calibration file for later re-use. To be distinguished from mixer data files (*.csv), calibration files have the extension *.mcal.

- *Load* calls up an *Open File* dialog to load correction data from a file.

Remote control: `[SENSe<Ch>]:FREQuency:MDElay:CDMode`
`MMEMemory:LOAD:MDADData`
`[SENSe<Ch>]:FREQuency:MDElay:CDElay`
`[SENSe<Ch>]:FREQuency:MDElay:DIVide`
`[SENSe<Ch>]:FREQuency:MDElay:ACQuire`
`MMEMemory:LOAD:MDCData`
`MMEMemory:STORe:MDCData`

File Format for Mixer Delay Calibration Files

The analyzer uses a simple ASCII format to export mixer delay correction data. By default, the mixer delay calibration file has the extension *.mcad and is stored in the directory shown in the *Save Correction Data* and *Load Correction Data* dialogs. The file starts with a preamble, followed by a list of stimulus values (frequencies or powers) and group delays.

Reset Freq Conv and Mix Dly

This softkey disables the mixer delay measurement mode and switches back to normal (non frequency-converting) mode.

A *Mix* label in the *channel list* indicates that a frequency-converting mode is active. A *MixDly* label in the trace list indicates an active mixer delay measurement.

Ch1	Mix Freq	Base Freq	Start	1 GHz	Base Pwr	0 dBm
Trc1	MixDly	Real	1 ns/	Ref 0 s		

Remote control: `[SENSe<Ch>]:FREQuency:MDElay:CONVersion OFF`

Harmonics

The *Harmonics* submenu controls the measurement of arbitrary harmonics or ratios between harmonics and the fundamental wave. Together with the *Mixer* measurement and the arbitrary configuration of generator and receiver frequencies (*Port Configuration*), the harmonics measurement is included in option R&S ZVA-K4.



Harmonics Measurements


Harmonics are signals at an integer multiple of the fundamental frequency. The fundamental is the first harmonic, the *n*th harmonic is *n* times the frequency of the fundamental. The production of harmonic frequencies by an electronic system when a signal is applied at the input is known as harmonic distortion.

The purpose of the *Harmonics* menu is to measure the harmonic distortion of a DUT. To this end the source remains at the fundamental frequency whereas the receiver is set to *n* times the fundamental frequency. Two different types of results are provided:

- In the direct measurement, the *n*th harmonic of the stimulus signal is measured. The result is displayed as a wave quantity but can be modified and converted using the functions in the *Trace* menu.

- In the relative measurement, the nth harmonic of the stimulus signal is divided by 1st harmonic (fundamental) received from the DUT. The result corresponds to the nth harmonic distortion factor.

Harmonic distortion measurements can be performed irrespective of the sweep type: A frequency sweep yields the harmonics as a function of the frequency, a power sweep yields the power-dependent harmonics at fixed frequency.

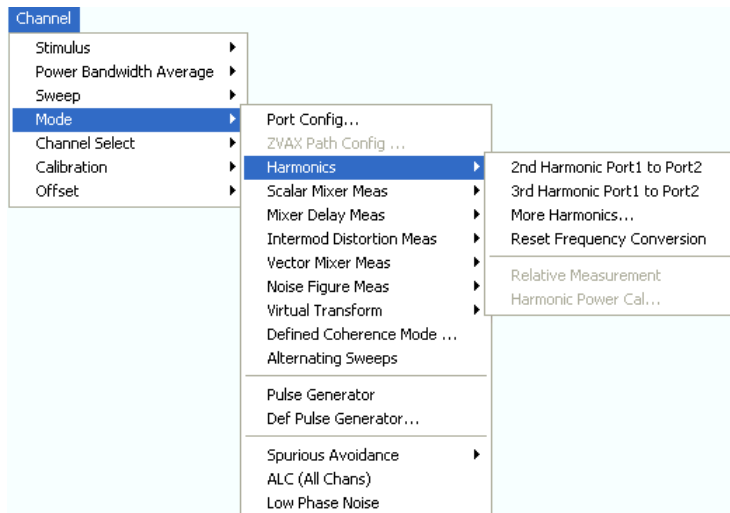

- [2nd Harmonic Port 1 to Port 2...](#) activates the measurement of the second harmonic at port 2 with port 1 as source port.
- [3rd Harmonic Port 1 to Port 2...](#) activates the measurement of the third harmonic at port 2 with port 1 as source port.
- [More Harmonics](#) opens a dialog for higher harmonics and arbitrary source and receive ports.
- [Reset Frequency Conversion](#) activates the measurement of the fundamental with the current port assignments and trace settings.
- [Relative Measurement](#) calculates the ratio of the selected harmonic to the fundamental and displays the result as a new trace.
- [Harmonic Power Cal...](#) opens a dialog to perform a power calibration of the signal source and of the receiver.



The result of several harmonic measurements can be displayed in a common diagram area (see [Traces, Channels and Diagram Areas](#)). To make the comparison of the fundamental trace and the harmonics easier the stimulus axis for frequency sweeps remains unchanged, and all fundamentals are displayed as a function of the stimulus frequency (rather than the harmonic frequencies).

A warning Frequency out of range. Please check dialog Mode: Port Configuration. is displayed if one of the harmonic frequencies to be measured exceeds the frequency range of the analyzer. The harmonic traces are truncated at the maximum receiver frequency.

The harmonic measurement mode is cancelled if the channel settings (e.g. port assignments, port frequencies) are no longer compatible with the selected harmonic.

2nd Harmonic Port1 to Port2

Activates the measurement of the second harmonic at port 2 with port 1 as source port. The active trace

shows the wave quantity b_2 . It is possible, however, to display other quantities and change the trace settings. A label *H2* in the channel list indicates that the second harmonic measurement is active.

Ch1 H2 Start 10 MHz Pwr 0 dBm Stop 2 GHz

In a frequency sweep the 2nd harmonic is displayed as a function of the stimulus frequency.

Remote control: `[SENSe<Ch>:]FREQuency:CONVersion:HARMonic:ORDer 2`
`[SENSe<Ch>:]FREQuency:CONVersion:HARMonic:RPORT 2`
`[SENSe<Ch>:]FREQuency:CONVersion:HARMonic:SPORT 1`

Alternative: `[SENSe<Ch>:]FREQuency:CONVersion SHARmonic`

3rd Harmonic Port1 to Port2

Activates the measurement of the third harmonic at port 2 with port 1 as source port. The active trace shows the wave quantity b_2 . It is possible, however, to display other quantities and change the trace settings. A label *H3* in the channel list indicates that the third harmonic measurement is active.

Ch4 H3 Start 10 MHz Pwr 0 dBm Stop 2 GHz

In a frequency sweep the 3rd harmonic is displayed as a function of the stimulus frequency.

Remote control: `[SENSe<Ch>:]FREQuency:CONVersion:HARMonic:ORDer 3`
`[SENSe<Ch>:]FREQuency:CONVersion:HARMonic:RPORT 2`
`[SENSe<Ch>:]FREQuency:CONVersion:HARMonic:SPORT 1`
`[SENSe<Ch>:]FREQuency:CONVersion THARmonic`

More Harmonics...

Opens a dialog for higher harmonics and arbitrary source and receive ports.



- The *Source* port provides the stimulus signal at the fundamental frequency.
- The receive port (*Harmonics Measured at:*) measures the signal at n times the fundamental frequency where n is the *Harmonic Order*.
- The *Harmonic Order* can be set in the range between 2 (2nd harmonic) and 100.

A label *H<n>* in the channel list indicates that the n th harmonic measurement is active.

Ch3 H10 Start 10 MHz Pwr 0 dBm Stop 2 GHz

In a frequency sweep all harmonics are displayed as a function of the stimulus frequency.



Use 2nd Harmonic Port1 to Port2 and 3rd Harmonic Port1 to Port2 to activate the measurement of the second and third harmonics with a single menu command.

Remote control: `[SENSe<Ch>:]FREQuency:CONVersion:HARMonic:ORDer <order>`
`[SENSe<Ch>:]FREQuency:CONVersion:HARMonic:RPORT <port_no>`
`[SENSe<Ch>:]FREQuency:CONVersion:HARMonic:SPORT <port_no>`

Reset Frequency Conversion

Activates the measurement of the fundamental with the current port assignments and trace settings. This disables the harmonics measurement and all other frequency-converting measurements (e.g. scalar mixer measurements) for the active channel.

Remote control: `[SENSe<Ch>:]FREQuency:CONVersion FUNDamental`

Relative Measurement

Calculates the ratio of the selected harmonic to the fundamental (harmonic distortion factor) and displays the result as a new trace. To avoid confusion between the original harmonic and the relative measurement, the harmonic is hidden (invisible) but can be retrieved using the [Trace Manager](#).

Trc1	b2	dB Mag	10 dB /	Ref 0 dBm	Ch1	Invisible
Trc2	b2	dB Mag	10 dB /	Ref 0 dBm	Ch2	Math

The relative trace belongs to a new channel. In the *dB Mag* trace format, the trace points are dB values, after conversion to the *lin Mag* format, they correspond to the (dimensionless) ratio of two voltages:

$$\text{Lin Mag (Relative)} = \frac{|U(\text{Harmonic})|}{|U(\text{Fundamental})|}$$



Calculation of the Relative Trace

To obtain the relative trace the analyzer must measure the fundamental signal in addition to the active harmonic. In a frequency sweep the two measurements require different sweep ranges so that the fundamental is measured in a new channel. The relative trace is then calculated using trace mathematics.

Assume that the active 2nd harmonic belongs to channel Ch1 with a sweep range between 10 MHz and 2 GHz. The relative measurement involves the following steps:

1. The analyzer creates a new channel Ch2 with maximum sweep range, e.g. for a 24 GHz analyzer:

Ch1	H2	Start 10 MHz	—	Pwr 0 dBm	Stop 2 GHz
Ch2		Start 10 MHz	—	Pwr 0 dBm	Stop 24 GHz

2. The harmonic trace is measured with Ch1 settings, the fundamental trace is measured with Ch2 settings.
3. The analyzer enables the [trace mathematics](#) and divides the harmonic trace by the fundamental trace:



4. The harmonic trace is hidden (invisible); the relative trace is displayed as a mathematical trace.

Trc1	b2	dB Mag	10 dB / Ref 0 dBm	Ch1	Invisible
Trc2	b2	dB Mag	10 dB / Ref 0 dBm	Ch2	Math

Remote control: `[SENSe<Ch>:]FREQuency:CONVersion:HARMonic:RELative ON`

Harmonic Power Cal


The *Harmonic Power Calibration* wizard controls the power calibration of the harmonics measurement. A power calibration ensures accurate levels at the input of the DUT (source power calibration) and an accurate power measurement of the harmonic (receiver calibration). The necessary calibration steps are automatically performed across the entire frequency or power range of the harmonics measurement.





Harmonic power calibration procedure and example

Due to the different frequency ranges of the input and output signals, the harmonic power calibration must be performed in two steps. For a test setup where the DUT's input signal (fundamental signal) is provided by analyzer port 1 and where the harmonic is analyzed at port 2, the following test setups are required:

1. Source power calibration of the fundamental signal. A power sensor is connected to port 1. The source power (red) is calibrated over the selected sweep range. As a preparative for step 2 the analyzer also calibrates the source in the harmonic frequency range. The correction data for both calibration sweeps is stored.

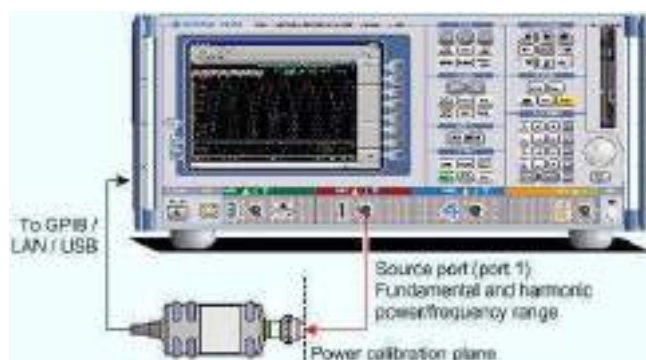

2. Receiver power calibration for the selected harmonic. No external device is needed. The receiver (port 2) is calibrated at the harmonic frequency using the source signal from port 1 (red) calibrated in the first step.

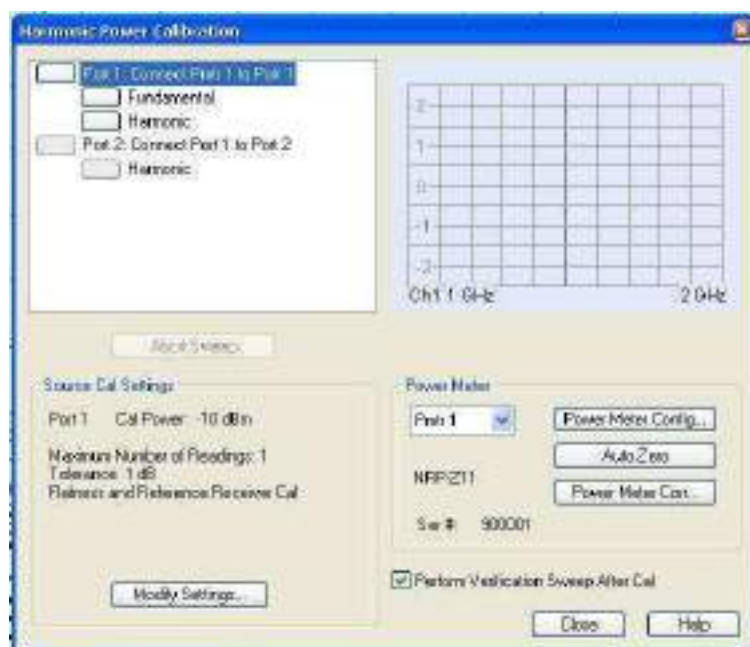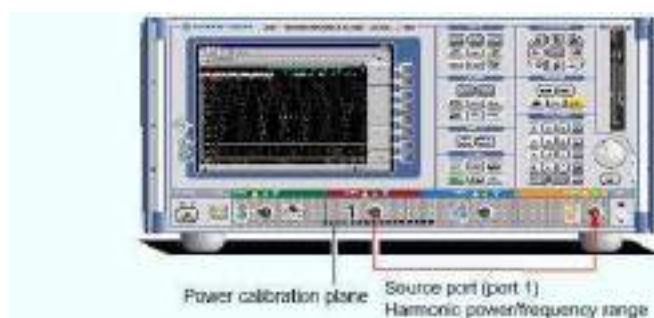

- A click in one of the boxes in the list of calibrations in the upper left part of the dialog starts the calibration sweeps for the source and receiver calibrations, respectively. The measured power is shown in the diagram to the right and the sweep progress in the message field below. If a calibration cannot be performed using the currently selected settings, the respective box is marked with an exclamation mark and an error description is shown in the lower left part of the

dialog.

- *Abort Sweep* aborts the calibration, e.g. in order to change the sweep settings.
- The calibration sweeps are performed according to the settings shown in the *Source/Receiver Cal Settings* panel below the list of calibrations. *Modify Settings...* opens the [Modify Source Power Cal Settings](#) dialog to modify the essential settings of the next calibration sweep.
- *Power Meter* selects an external power meter that is used to measure the exact source power at the calibration plane; see [Power Meter Settings](#) in the *Power Calibration* section. Power meters (Pmtr1, Pmtr2, ...) must be configured in the *System Configuration – External Power Meters* dialog before they appear in the list.
- *Perform Verification Sweep after Cal* enables or disables a verification sweep that the analyzer performs after the source power calibration. The sweep is also displayed in the calibration sweep diagram. Its purpose is to test the accuracy of the source power calibration after the final correction data has been acquired. The final power calibration results are applied starting with the first sweep after the verification sweep.

Remote control: `SOURce<Ch>:POWer<Pt>:CORRection:PMETer:ID`
`SOURce<Ch>:POWer<Pt>:CORRection:HAMonic[:ACQuire]`
`[SENSe<Ch>:]CORRection:POWer<Pt>:HARMonic:ACQuire`

Intermodulation Distortion Measurement (R&S ZVA and R&S ZVT)

The *Intermod Distortion Meas* submenu controls the intermodulation distortion measurement including power calibration and system error correction. The intermodulation distortion measurement requires option R&S ZVA-K4. The results can be selected from the *Trace – Measure – Intermod Distortion Quantities* submenu.




Intermodulation measurement, test setups

An intermodulation measurement is performed with two RF signals of equal power but different frequencies termed the upper and lower tone. The purpose of the measurement is to test the properties of a DUT that is supplied with a signal that covers a frequency band, typically a modulated RF channel. To simulate this scenario, the frequency difference ("tone distance") between the upper and lower signal is chosen to be small compared to the frequencies of the two tones:

$$f_L \approx f_U \text{ or } \Delta f = f_U - f_L \ll f_L$$

A nonlinear behavior of the DUT causes emissions at frequencies which correspond to sums and differences of the upper and lower tone frequencies and their integer multiples. These intermodulation products can be in the vicinity of the upper and lower tone frequencies, provided that their order is odd.

The analyzer measures the intermodulation products of k^{th} order IM k (where $k = 3, 5, 7, 9$) at the lower tone frequency minus $(k - 1)/2$ times the tone distance and at the upper tone frequency plus $(k - 1)/2$ times the tone distance. For an R&S ZVA analyzer that is equipped with option R&S ZVA<frequency>-B16, *Direct Generator/Receiver Access*, a test setup of the following type is recommended:

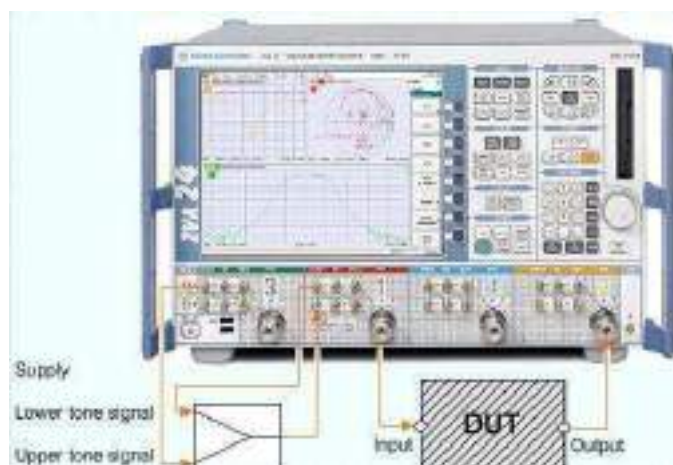

The lower tone signal is generated at port 1, the upper tone is provided by a second source (port 3). Both signals are combined externally and fed to the SOURCE IN connector at port 1. Thus the superimposed signals are available at test port 1 and can be fed to the DUT input. The intermodulation quantities can be measured at the DUT input (wave a_1) or at the DUT output (wave b_2). You can use different ports, however, the generators of the source ports must not be **coupled**. You may also use an external generator for the upper tone signal.



On R&S ZVA67 and on R&S ZVA24/40 network analyzers with four ports and four generators (order nos. 1145.1110.28/48), all ports have independent internal sources. You can perform intermodulation measurements with an arbitrary combination of two source ports.

Alternative test setup

The following test setup does not require an external coupler but provides a reduced dynamic range.



The lower tone from port 1 and the upper tone from port 3 are combined using the directional coupler of port 3. Ports 1 and 3 are connected as follows: SOURCE OUT (1) to MEAS OUT (3) and Port 3 to SOURCE IN (1). The superimposed signals are available at test port 1 and can be fed to the DUT input. The intermodulation quantities can be measured at the DUT input (wave a_1) or at the DUT output (wave b_2).

You can use different ports, however, the generators of the source ports must not be **coupled**. You may also use an external generator for the upper tone signal.

For more details about the test setup see [Intermodulation Power Calibration](#) and [Level Handling](#).

Other analyzer configurations

If you use an external combiner but no options R&S ZVA<frequency>-B16, you can still measure the intermodulation products at the **output** of the DUT.




With an R&S ZVT20 network analyzer that is equipped with option R&S ZVT-B11, you can combine the two source signals internally without using the SOURCE IN/OUT connectors and an external combiner. You can also replace the external combiner by an Extension Unit R&S ZVAX24 or R&S ZVAX-TRM with installed combiner option.




Intermodulation measurement, results

The intermodulation measurement provides two different types of results.

1. In the swept measurement, the analyzer performs a frequency or power sweep of the two-tone stimulus signal and displays the selected intermodulation quantities as a function of the lower-tone frequency or power.

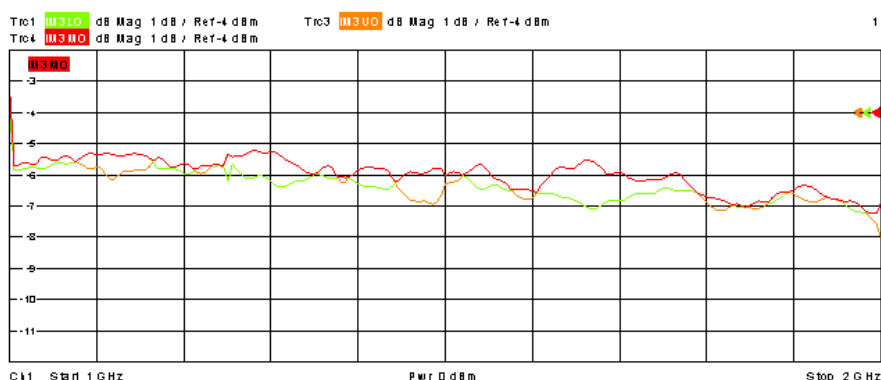

2. In the intermodulation distortion spectrum measurement, the frequency and power of the lower and upper tones are kept constant; the analyzer displays all intermodulation products in the vicinity of these signals up to a selectable order.

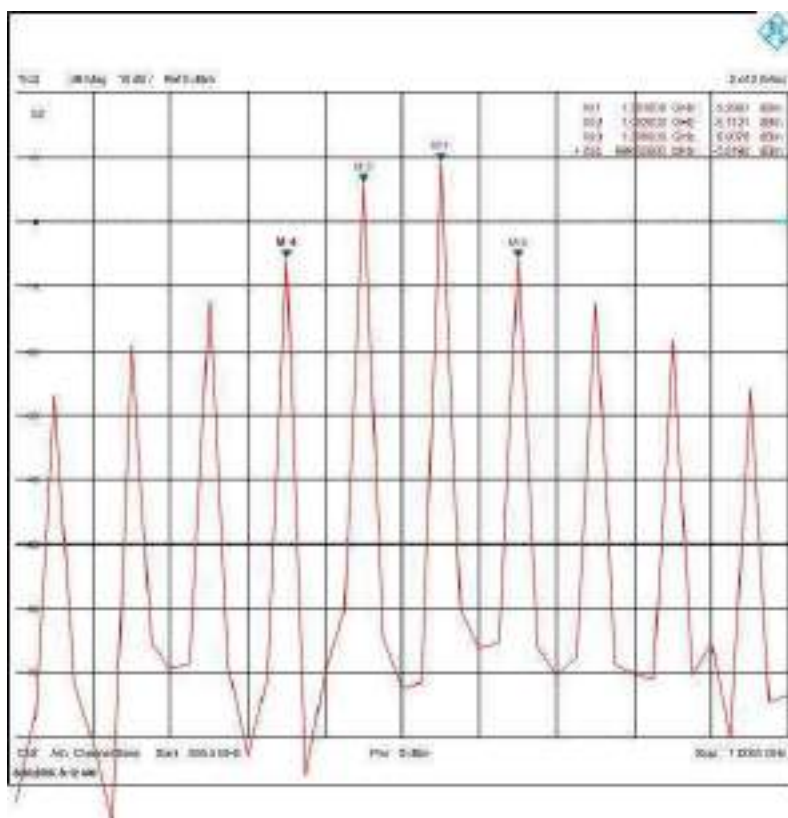

Intermodulation measurement with frequency conversion

The intermodulation distortion measurement can be extended to frequency-converting DUTs. E.g. it is possible to feed the two-tone source signal to the RF input of a mixer and measure the intermodulation distortion of the IF output signal, after conversion with an additional LO signal.




The *Define Mixer Measurement* dialog can be accessed from the intermodulation distortion measurement dialog to set up such a scalar mixer measurement.



The intermodulation distortion measurement may not work properly if arbitrary frequency converting

settings are enabled in the [Port Configuration](#) (e.g. it will not work for inverted conversion $IF=LO-RF$ and enhanced wave correction).

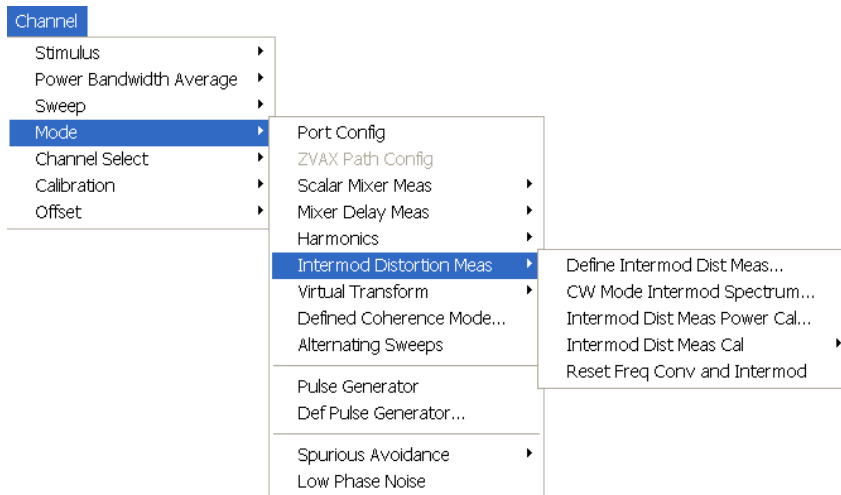

- [Define Intermod Dist Meas...](#) opens a wizard that you can use to configure the intermodulation measurement. The remaining entries in the submenu are available as soon as a valid configuration has been defined.
- [CW Mode Intermod Spectrum...](#) opens a dialog that you can use to configure the intermodulation distortion spectrum measurement.
- [Intermod Dist Meas Power Cal](#) opens the power calibration wizard for the intermodulation measurement.
- [Intermod Dist Meas Cal](#) opens a submenu to perform a system error correction for the intermodulation measurement.
- [Reset Frequency Conv and Intermod](#) disables the intermodulation measurement mode and switches back to normal (non frequency-converting) mode.

Define Intermodulation Distortion Measurement

The *Define Intermodulation Distortion Measurement* wizard defines the source and receiver settings for the intermodulation measurement.




Frequency range for intermodulation measurements

After a preset, the lower tone is swept across the full frequency range of the analyzer, which means that the upper tone frequency is out of range. Click *Set Frequencies and Powers* and reduce the sweep range to establish compatible settings.

The intermodulation products of k^{th} order (IM_k) are measured at the lower tone frequency minus $(k - 1)/2$ times the tone distance and at the upper tone frequency plus $(k - 1)/2$ times the tone distance. These receiver frequencies must be within the frequency range of the analyzer, too.

The analyzer displays a message if the source frequency (as defined in the [Port Configuration](#) dialog) at one of the used source ports is different from the channel base frequency (the frequency-converting / arbitrary mode is active). Disabling the arbitrary mode ensures a valid port configuration and facilitates the interpretation of the intermodulation distortion results.

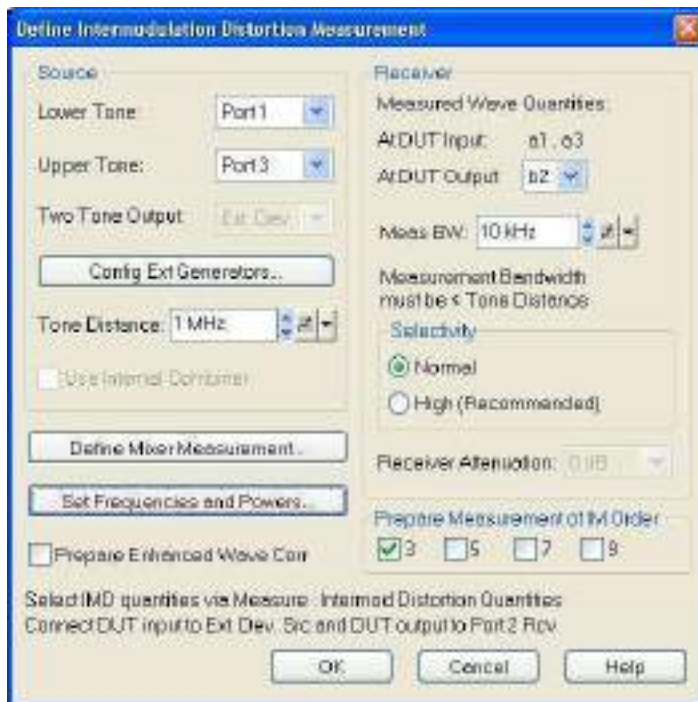

- **Lower Tone** selects an analyzer port as a source of the lower tone signal. If *Port 1* is selected as the **Two Tone Output**, then *Port 1* must also provide the lower tone. This condition ensures a consistent receiver power calibration for the intermodulation products at the DUT output port (e.g. Port 2, for details refer to the description of the power calibration procedure in section *Intermodulation Distortion Measurement Power Calibration*).
- **Upper Tone** selects an analyzer port or external generator as a source of the upper tone signal. The source must be different from the lower tone source and - if an internal source is used - the generators of the source ports must not be [coupled](#).



NOTE An external generator driving the upper tone must not be used in the same channel for other measurements requiring a driving frequency differing from the upper tone frequency. Also the power settings must not differ.

- **Two Tone Output** defines the source of the two tone signal which is fed to the input of the DUT. For analyzers without option R&S ZVA<frequency>-B16, *Direct Generator/Receiver Access*, and without an internal combiner (see *Use Internal Combiner* below), the setting *Ext. Dev.* (external device) is fixed: The analyzer assumes that the lower tone and the upper tone signals are combined by external means. If one of the options above is available, the lower tone source *Port 1* may be selected alternatively. The two basic test setups are described above; see [Intermodulation measurement, test setups](#).

The **Two Tone Output** setting affects the **fast power calibration** method (see [Modify Source Power Cal Settings](#) dialog, *Use Reference Receiver After First Cal Sweep: On*): If *Ext. Dev.* is selected, the actual source power is derived from the reference waves (a waves) of the lower and upper tone ports, respectively. If *Port 1* is selected, the source power is derived from the lower tone reference wave a_1 . Select the **Two Tone Output** in accordance with the test setup to ensure an accurate fast power calibration.

The **Two Tone Output** setting also affects the availability of an Enhanced Wave Correction: If *Ext. Dev.* is selected, an Enhanced Wave Correction is only possible at the DUT output. If *Port 1* is selected, an Enhanced Wave Correction is possible both at the DUT output and input. For details see section [Intermod Dist Meas Cal](#).

Furthermore, the **Two Tone Output** setting affects the possibility of performing [Automatic Level](#)

Control (ALC). ALC may only be performed if *Ext. Dev.* is selected as *Two Tone Output* (otherwise the reference receiver of the upper tone port is not calibrated). Please note that *Ext. Dev.* may be selected as *Two Tone Output* even if the actual setup corresponds to Port 1 as *Two Tone Output*.

- *Config Ext Generators...* opens the *System Configuration – External Generators* dialog for adding and configuring external generators.
- *Tone Distance* defines the frequency difference between the upper and the lower tone. The tone distance is kept constant across the entire sweep.
- *Use Internal Combiner* activates the internal combiner
 - for network analyzers R&S ZVA connected to an Extension Unit R&S ZVAX24 or R&S ZVAX-TRM with installed combiner option
 - for network analyzers R&S ZVT connected to an Extension Unit R&S ZVAX-TRM with installed combiner option
 - for network analyzers R&S ZVT20 that are equipped with option R&S ZVT20-B11
 The internal combiner requires the lower tone from port 1 and the upper tone from port 3.
- *Define Mixer Measurement...* opens the configuration dialog for a scalar mixer measurement, to be performed in parallel to the intermodulation measurement. Use this dialog if you want to determine the intermodulation distortion of a mixer which receives the two-tone signal at its RF input. In this dialog please select the *Lower Tone* port of the intermodulation measurement as RF port of the mixer measurement and the receive port of the intermodulation measurement as IF port of the mixer measurement. The LO signal must be provided by an additional source.
- *Set Frequencies and Powers...* opens a dialog where you can define the sweep ranges.
- If *Prepare Enhanced Wave Corr* is selected, the analyzer prepares itself for an enhanced wave correction, i.e. the power calibration wizard for the intermodulation measurement (see section [Intermodulation Distortion Measurement Power Calibration](#)) will perform a source power calibration at the receiving port. Otherwise it will perform a receiver power calibration at that port.



The enhanced wave correction will not work properly if you configure arbitrary frequency converting settings in the [Port Configuration](#).

- The *Receiver – Measured Wave Quantities* section adjusts the intermodulation measurement to the test setup; see [Intermodulation measurement, test setups](#). *At DUT Input* shows the wave quantities which are fed to the DUT input, depending on the source settings (*Lower Tone*, *Upper Tone*, *Two Tone Output*). Wave quantities from external generators are not listed. *At DUT Output* selects the receive port for the signal from the output of the DUT.
- *Meas BW* and *Selectivity* define the bandwidth and selectivity of the IF filter; see section [Meas. Bandwidth](#).
- *Receiver Attenuation* adjusts the attenuation of the wave received from the DUT output as described in section [Step Attenuators](#).
- *Prepare Measurement of IM Order* selects the order(s) of the intermodulation products which are to be prepared for measurement. This setting affects the frequency range for intermodulation power calibration and system error correction; it does not select which intermodulation products are to be measured, which has to be set up separately via the *Trace – Measure – Intermod Distortion Quantities* submenu. Please note that each order requires an additional measurement at a different frequency, therefore the measurement time increases with the number of selected orders. If a higher-order IM is selected, its frequency may exceed the upper or lower frequency limit of the analyzer. Use the *Fit Frequency Range* button in the *Set Frequencies and Powers* dialog to restrict the sweep range as required.

Remote control: `[SENSe<Ch>:]FREQuency:IMODulation:LTONE`

```
[SENSe<Ch>:] FREQuency:IMODulation:UTONe
[SENSe<Ch>:] FREQuency:IMODulation:TTOuTput
[SENSe<Ch>:] FREQuency:IMODulation:TDisTance
[SENSe<Ch>:] FREQuency:IMODulation:RECeiver
[SENSe<Ch>:] BANDwidth|BWIDth[:RESolution]
[SENSe<Ch>:] BANDwidth|BWIDth[:RESolution]:SElect
[SENSe<Ch>:] FREQuency:IMODulation:ORDer<Im>:STATe
[SENSe<Ch>:] FREQuency:IMODulation:PEWCorr[:STATe]
```

Set Frequencies and Powers

The *Set Frequencies and Powers* dialog defines the (frequency or power) sweep ranges for the lower tone. The frequency of the upper tone is equal to the lower tone frequency plus the *Tone Distance* defined in the *Define Intermodulation Distortion Measurement* dialog. Its power is equal to the lower tone power.



The sweep range settings depend on the active sweep type (frequency or power sweep). The frequency and power settings for the lower tone are identical with the *Channel – Stimulus* settings.

- The *Frequency Range* table shows the frequency ranges for the lower and upper tone and for the highest-order IM product which is selected to be prepared for measurement, depending on the current frequency settings. E.g. the lower IM3 product is measured at the lower tone frequency minus the tone difference. An orange background in the *Range* column indicates that the frequency range exceeds the upper or lower frequency limit of the analyzer.
- If one of the ranges exceeds the analyzer limits, the *Fit Frequency Range* button restricts the lower tone sweep range so that the analyzer can measure all selected IM products.

Remote control: `[SENSe<Ch>:] FREQuency:START`
`[SENSe<Ch>:] FREQuency:STOP`
`[SENSe<Ch>:] FREQuency:CW|FIXed`
`SOURce<Ch>:POWer<Pt>:START`
`SOURce<Ch>:POWer<Pt>:STOP`
`SOURce<Ch>:POWer<Pt>[:LEVel] [:IMMediate] [:AMPLitude]`

Def CW Mode Intermodulation Spectrum


The *Def CW Mode Intermodulation Spectrum* dialog configures and displays the intermodulation spectrum measurement.



The intermodulation spectrum measurement is performed at a fixed frequency of the lower tone (*CW Frequency*) and the upper tone (*CW Frequency* + *Tone Distance*), respectively. The measurement comprises intermodulation products up to a selectable order (*Max IM Order*). In order to display the intermodulation spectrum measurement the channel settings have to be modified by the firmware. This can either be done in the current channel (*Overwrite Current Channel Settings*) or a new channel can be created for the intermodulation spectrum measurement (*Create New Channel*).

The following example shows an intermodulation spectrum with the following settings:

- CW Frequency: 1 GHz (lower tone, position of marker M3)
- Tone Distance: 1 MHz (defines the upper tone, position of marker M1)
- Max. IM Order: 9. The peaks correspond to the intermodulation products lower IM9, lower IM7, lower IM5, lower IM3 (marker M4), lower tone, upper tone, upper IM3 (marker M2), upper IM5, upper IM7, upper IM9.

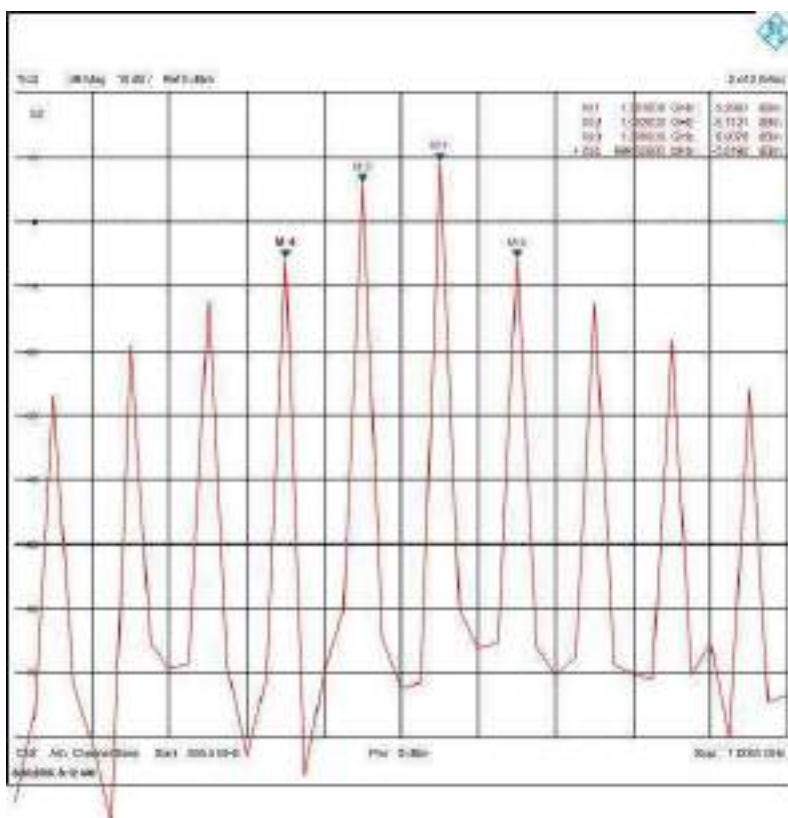

Remote control: `[SENSe<Ch>:]FREQuency:CW|FIXed`
`[SENSe<Ch>:]FREQuency:IMODulation:TDistance`
`[SENSe<Ch>:]FREQuency:IMODulation:SPECTrum:MORDer`
`[SENSe<Ch>:]FREQuency:IMODulation:SPECTrum[:STATe]`

Intermodulation Distortion Measurement Power Calibration

The *Intermodulation Distortion Measurement Power Calibration* wizard controls the power calibration for the intermodulation measurement. A power calibration ensures accurate levels at the input of the DUT (source power calibration for the lower and upper tone) and an accurate power measurement of the intermodulation distortion quantities (receiver calibration). The necessary calibration steps are automatically performed across the entire frequency or power range of the intermodulation measurement.



Power calibration procedure and example

Due to the different frequency ranges to be calibrated, the intermodulation distortion measurement power calibration is performed in several steps. For a scenario where the directional coupler of port 3 is used to combine the lower tone from port 1 and the upper tone from port 3, and where the output of the DUT is connected to port 2, the following test setups are required.

1. Source power calibration at the lower tone port. A power sensor is connected to port 1. Ports 1 and 3 are connected as shown below (SOURCE OUT (1) to MEAS OUT (3) and Port 3 to SOURCE IN (1)). The RF power (red) is calibrated over the selected sweep range.


In this calibration step the following frequency ranges will be calibrated with port 1 driving:

- The lower tone frequency range (the base frequency range)
- The frequency range for all lower and upper intermodulation products which have been selected

via *Prepare Measurement of IM Order* in the [Define Intermod Dist Meas](#) dialog. These power calibrations are required for the receiver calibration in step 3 (unless *Prepare Enhanced Wave Corr* was selected in the *Define Intermod Dist Meas* dialog) and for the measurement of intermodulation products at the DUT input.

- c. If in addition to the intermodulation measurement a mixer measurement is set up as well, all frequency ranges mentioned under a. and b. plus the upper tone range will be calibrated in the IF range as well unless *Prepare Enhanced Wave Corr* is selected in the [Define Intermod Dist Meas](#) dialog. In this case the IF frequency ranges are neither needed for intermodulation products at the DUT input (as those are measured in the RF range) nor for the receiver calibration (as a source power calibration will be performed at the receiving port).
- d. If in a non mixer measurement the upper tone is driven by an external generator and in the [Define Intermod Dist Meas](#) dialog *Ext. Dev.* is chosen as *Two Tone Output* and *Prepare Enhanced Wave Corr* is not selected, the upper tone frequency range is calibrated both at the lower tone and the upper tone port. At the upper tone port a flatness calibration is required as that port will be driving this frequency during actual measurements. At the lower tone port a reference receiver calibration is performed which is required for the receiver power calibration in step 3 and which cannot be performed at the external generator.

During these calibrations the upper tone port is switched off.

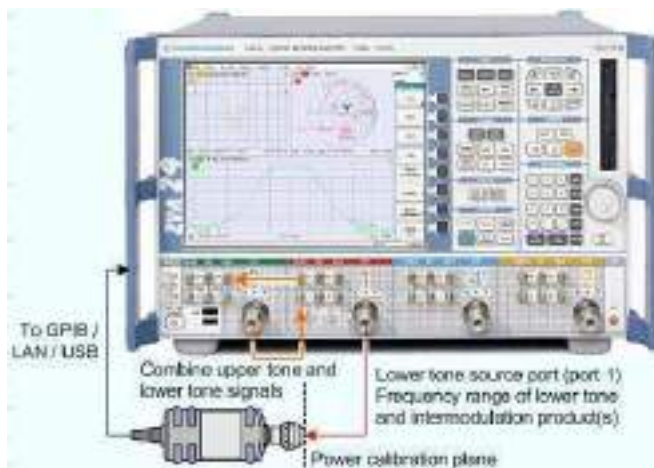

Power considerations

The directional coupler introduces a coupling loss of approx. 10 dB. Adjust the port power settings to account for this attenuation and possible additional effects; see [Level Handling during Power Calibration](#).

2. Source power calibration for the upper tone port. The test setup from step 1 is maintained. In this step the upper tone range will be calibrated with port 3 driving. The lower tone port is switched off during this calibration. For a mixer measurement only the RF range of the upper tone will be calibrated in this step.


3. Power calibration for the receiving port. If *Prepare Enhanced Wave Corr* is selected in the [Define Intermod Dist Meas](#) dialog, a source power calibration will be performed at the receiving port, otherwise a receiver power calibration will be performed.

For a receiver power calibration no external device is needed. The receiver (port 2) is calibrated using the source signal from port 1 (lower tone signal, red) calibrated in the first step.

For a source power calibration a power meter has to be connected to port 2 (not shown in the picture below). Both for a receiver power calibration and a source power calibration the calibration encompasses the lower and upper tone frequency range as well as the frequency range for all lower and upper intermodulation products which have been selected via *Prepare Measurement of IM Order* in the [Define Intermod Dist Meas](#) dialog. If in addition to the intermodulation measurement a mixer measurement is set up as well, only the IF frequency ranges will be measured.



The calibration steps for the other test setups are analogous. Refer to the indications in the power calibration dialog for a correct connection of the power meter and the receive port.

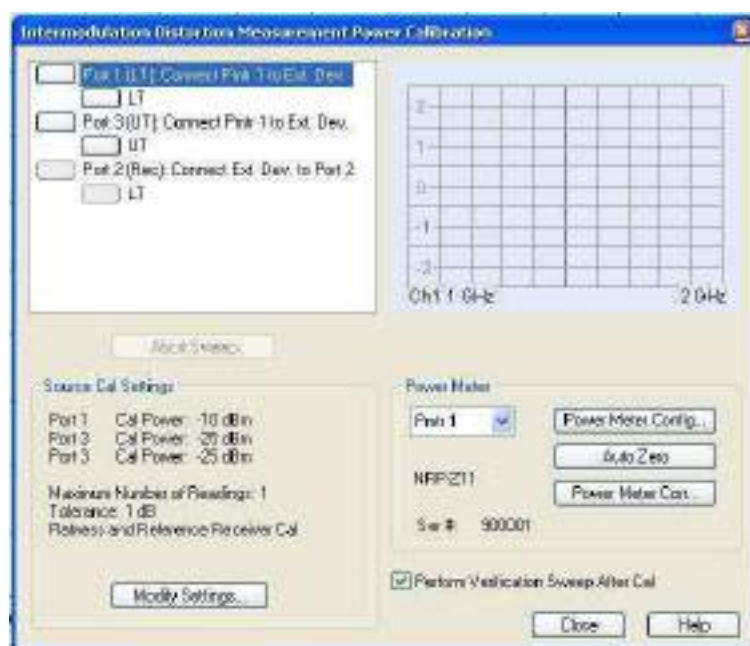

- The grouped list of calibrations in the upper left part of the dialog shows which frequency ranges will be calibrated for the different driving ports and for the receiving port. If *Prepare Enhanced Wave Corr* is selected in the [Define Intermod Dist Meas](#) dialog, a source power calibration will be performed for the receiving port, otherwise a receiver power calibration will be performed. This list also gives information on what connections have to be made for each group of calibrations (for example "Connect Pmtr to Ext. Dev."). A click on a box for an individual frequency range in this list will start the calibration sweeps for that specific frequency range. A click on a box of a group heading will perform all calibration sweeps for that group. Alternatively, all calibration sweeps can be performed sequentially by pressing the enter key once for each calibration sweep. The measured power is shown in the diagram to the right and the sweep progress in the message field below that diagram. If a calibration cannot be performed using the currently selected settings, the respective box is marked with an exclamation mark and an error description is shown in the lower left part of the dialog.

- *Abort Sweep* stops the current sweep, e.g. in order to change the sweep settings.
- The calibration sweeps are performed according to the settings shown in the *Source Cal Settings* panel below the list of calibrations. *Modify Settings...* opens the [Modify Source Power Cal Settings](#) dialog to modify the essential settings of the subsequent calibration sweeps.
- *Power Meter* selects an external power meter that is used to measure the exact source power at the calibration plane; see [Power Meter Settings](#) in the *Power Calibration* section. Power meters (Pmtr1, Pmtr2, ...) must be configured in the *System Configuration – External Power Meters* dialog before they appear in the list. This dialog can be opened directly with the *Power Meter Config* button.
- *Perform Verification Sweep after Cal* enables or disables a verification sweep that the analyzer performs after the source power calibration. The sweep is also displayed in the calibration sweep diagram. Its purpose is to test the accuracy of the source power calibration after the final correction data has been acquired. The final power calibration results are applied starting with the first sweep after the verification sweep.


Remote control: `SOURce<Ch>:POWer<Pt>:CORRection:IMODulation:LTONE[:ACQuire]`
`SOURce<Ch>:POWer<Pt>:CORRection:IMODulation:UTONE[:ACQuire]`
`SOURce<Ch>:POWer<Pt>:CORRection:IMODulation:SPORTs[:ACQuire]`
`SOURce<Ch>:POWer<Pt>:CORRection:IMODulation:RPORT[:ACQuire]`
`[SENSe<Ch>:]CORRection:POWer<port_no>:IMODulation:ACQuire`
`[SENSe<Ch>:]CORRection:POWer<port_no>:IMODulation:RPORT:ACQuire`

Level Handling during Power Calibration

The figure below shows the signal flow in the test scenario where the lower tone from port 1 and the upper tone from port 3 are combined using the directional coupler of port 3. In this scenario the directional coupler introduces an attenuation (coupling loss) of typically 10 dB for the lower tone signal.

To compensate for the coupling loss and obtain upper and lower tone signals with equal power, modify the source power settings for port 1:

1. Open the *Intermodulation Distortion Measurement Power Calibration* dialog and click *Modify Settings... – Modify Cal Power...* for port 1 to open the *Port 1 Power* dialog.
2. Select a 10 dB *Port Power Offset* to increase the source power, compensating for the 10 dB coupling loss.
3. Select a –10 dB *Cal Power Offset* to ensure that the calibrated power at the reference plane (*Cal Power*) remains at the channel base power p_b ($\text{Cal Power} = p_b + \text{Port Power Offset} + \text{Cal Power Offset}$).

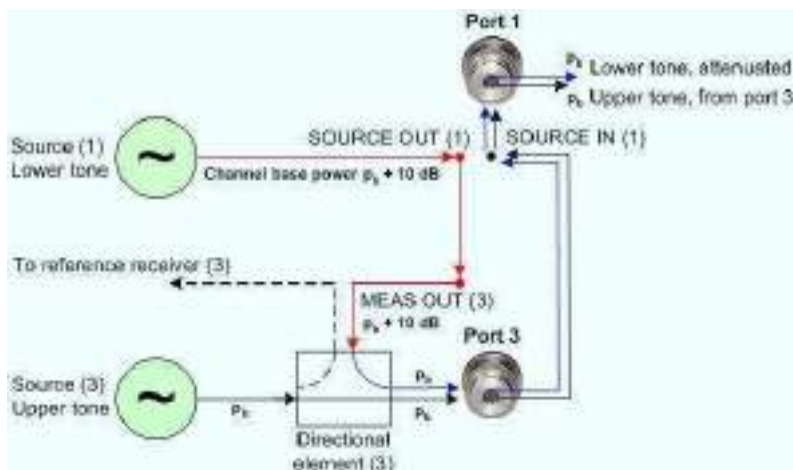

Larger *Port Power Offset* values (and hence smaller compensating *Cal Power Offset* values) may be required e.g. to account for an additional cable loss in the test setup. The maximum source power (depending on the analyzer model and the frequency; see data sheet) must not be exceeded. If necessary, reduce the channel base power (and thus the *Cal Power*).



Coupling loss for microwave analyzers

Please note that the directional couplers in network analyzers which cover the microwave range (R&S ZVA/ZVT20 and above) have a larger coupling loss, especially at very low frequencies (e.g. 20 dB loss at 10 MHz).

In a test setup with external coupler, the NWA settings should account for the coupling loss in an analogous way.

Intermod Dist Meas Cal

This softkey opens a submenu to perform a system error correction for the intermodulation measurement – using either a calibration unit (softkey *Calibration Unit*) or a manual calibration (softkeys in submenu *Manual*).

Together with an [Intermodulation Distortion Measurement Power Calibration](#) the system error correction allows for an enhanced wave correction which can be switched on via [Channel - Cal - Enhanced Wave Corr.](#)

If the *Two Tone Output* is set to *Ext. Dev.* in the [Define Intermod Dist Meas](#) dialog, an Enhanced Wave Correction is only possible at the DUT output. If the *Two Tone Output* is set to *Port 1*, an Enhanced Wave Correction is possible both at the DUT output and input. In the first case, the calibration unit will perform a full one port calibration at the receiving port, in the second case the calibration unit will perform a full two port calibration between port 1 and the receiving port. Accordingly, in the first case a full one port calibration is available in the submenu for manual calibration, while in the second case any full two port calibration method may be chosen from this submenu.

The system error correction will be performed at the following frequency ranges:

- The lower tone frequency range (the base frequency range)
- The upper tone frequency range (the base frequency range plus the two tone distance)
- The frequency range for all lower and upper intermodulation products which have been selected via *Prepare Measurement of IM Order* in the [Define Intermod Dist Meas](#) dialog.

If in addition to the intermodulation measurement a mixer measurement is set up as well, all frequency

ranges mentioned above will be calibrated both in the RF and IF range if the *Two Tone Output* is set to *Port 1*, and in the IF range only if the *Two Tone Output* is set to *Ext. Dev.*

Remote control: `[SENSe<Ch>:] CORRection:COLLect:IMODulation[:STATe]`

Reset Frequency Conv and Intermod

This softkey disables the intermodulation measurement mode and switches back to normal (non frequency-converting) mode.

Remote control: `[SENSe<Ch>:] FREQuency:IMODulation:CONVersion OFF`

Noise Figure Measurement

The *Noise Figure Meas* submenu controls the measurement of the noise figure of a DUT. This measurement requires option R&S ZVAB-K30.



Noise figure measurements

The noise figure of a device is the ratio of the output signal-to-noise ratio (SNR) to the input SNR, provided that a thermal noise signal is fed to the input. It is a measure of the degradation of the SNR caused by the device.

The purpose of the *Noise Figure Meas* is to assess the noise figure of a DUT which operates in its linear range. A typical example is an amplifier which is measured in transmission. The method of measurement offers several advantages:

- No additional noise source is required.
- The result can be obtained in a single sweep.
- The test setup is as simple as for a basic transmission measurement: The DUT must be connected only once. Moreover, it is possible to perform S-parameter measurements in parallel to the noise figure measurement.

Noise figure measurements can be performed irrespective of the sweep type: A frequency sweep yields the noise figure as a function of the frequency, a power sweep yields the power-dependent noise figure at fixed frequency. See also [Basic Test Setup and Noise Figure Calculation](#).



Refer to application note 1EZ61 for a detailed discussion of the noise figure measurement including many examples.




Mixer noise figure measurements

With option R&S ZVA-K31 (in addition to options R&S ZVAB-K30 and R&S ZVA-K4), R&S ZVA and R&S ZVT network analyzers can determine the noise figure of a mixer or of a system of two mixer stages. In analogy to the noise figure for non-frequency-converting two-port devices, we define the mixer noise figure as the ratio of the signal-to-noise ratio (SNR) at the mixer's IF output to the SNR at its RF input, provided that a thermal noise signal is supplied. This definition implies an important approximation; it neglects a possible effect due to the noise of the LO signal(s).

Mixers in general convert two different RF frequencies to the same IF frequency. The second RF frequency (or frequency band) is referred to as [image frequency](#). The image band contributes to the mixer's noise figure unless its reception is excluded by constructive measures, e.g. filters. The mixer noise

figure measurement can include the effect of the image frequency of the first mixer stage, if so desired.


With these assumptions, the mixer noise figure measurement can be performed in close analogy to the noise figure measurement for non-frequency-converting DUTs. A combination of the noise figure measurement and the scalar mixer measurement is involved. The mixer noise figure setup guide gives access to all necessary steps.

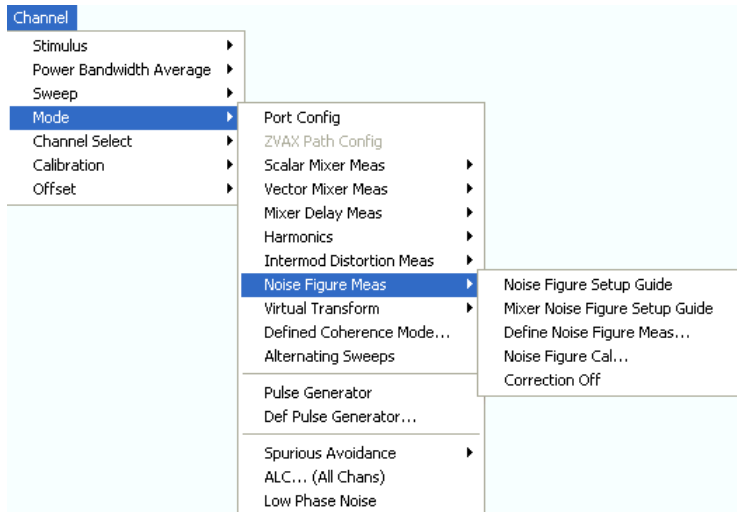

- [Noise Figure Setup Guide](#) opens a dialog which helps you perform all the necessary steps for a noise figure measurement in the right order. All configuration and calibration dialogs for the noise figure measurement can be accessed from the setup guide.
- [Mixer Noise Figure Setup Guide](#) opens a similar dialog for noise figure measurements on mixers (with option R&S ZVA-K31).
- [Define Noise Figure Meas...](#) provides basic parameters for the noise figure measurement. Open this dialog to modify the definitions of the setup guide.
- [Noise Figure Cal...](#) opens a dialog to assess and compensate the internal noise at the NWA receiver and source. Open this dialog to modify the calibration procedure of the setup guide.
- [Correction Off](#) (de)activates the noise figure calibration for the active channel.

Basic Test Setup and Noise Figure Calculation

The schematic test setup for a noise figure measurement is shown below.

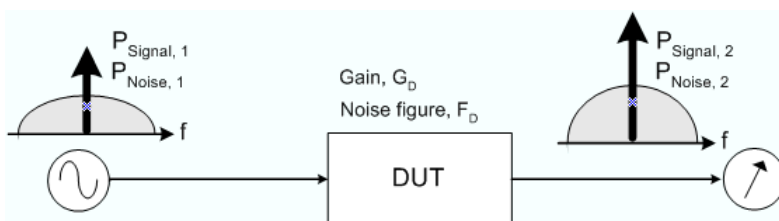

The NWA source provides a superposition of a CW signal and a noise signal. The latter generally consists of the thermal noise $N_{T,1}$ and a possible additional contribution ΔN :

$$P_{\text{Noise},1} = N_{T,1} + \Delta N$$

The definition of the noise figure F_D is based on a pure thermal noise signal ($\Delta N = 0$):

$$F_D = (P_{\text{Signal}, 1} / N_{T, 1}) / (P_{\text{Signal}, 2} / P_{\text{Noise}, 2}) = P_{\text{Noise}, 2} / (N_{T, 1} * G_D) \text{ where } G_D = P_{\text{Signal}, 2} / P_{\text{Signal}, 1}$$

ΔN is supposed to be amplified like the CW signal. Hence, the noise signal at the output of the DUT equals to:

$$P_{\text{Noise}, 2} = G_D * (F_D * N_{T, 1} + \Delta N)$$

According to the equations above, it is possible to calculate both the gain G_D and the noise figure F_D of the DUT, if the four powers $P_{\text{Signal}, 2}$, $P_{\text{Signal}, 1}$, $P_{\text{Noise}, 1}$, $P_{\text{Noise}, 2}$ can be measured with sufficient accuracy. The measurement requires two steps:

- Source noise calibration of the driving NWA port --> $P_{\text{Signal}, 1}$, $P_{\text{Noise}, 1}$. This step is required only once for a given channel configuration.
- Transmission measurement of the DUT --> $P_{\text{Signal}, 2}$, $P_{\text{Noise}, 2}$. The analyzer uses two different detector settings to separate the CW signal and the noise signal contributions. The *Average* detector yields the CW signal power; the *RMS* detector yields the sum of the CW signal and noise power.

In principle, this short description also holds for mixer noise figure measurements. The major extensions are the RF image band and the additional frequency ranges for calibration and for the measurement.

Conditions for the measurement

- Option R&S ZVAB-K30, *Noise Figure Measurement*, provides the measurement including the necessary (wide-band) IF filters. Internal source attenuators are recommended but may be replaced by an external attenuator.
An additional option R&S ZVA-K31 in combination with option R&S ZVA-K4 provides the mixer noise figure measurement. Due to the extended calibration procedure, mixer noise figure measurements cannot be performed with external attenuators.
- The measurement algorithm is based on the assumption that the DUT operates in its **linear** range so that all input signal contributions are amplified by the same gain factor.
- A set of power calibrations (source power calibration using an external power meter and subsequent receiver power calibration) prior to the noise figure calibration and to the actual measurement is essential for an accurate measurement of the noise power at the NWA receiver.
- The [Noise Figure Calibration](#) is important to assess the internal noise figure of the NWA receiver and generator.
- The power calibration and noise figure calibration correspond to a transmission normalization of the test setup. An additional system error correction (*S-Parameter Calibration*) using an AVG detector calibrates the gain G_D and improves the accuracy of the noise figure measurement.

The *Noise Figure Setup Guide* helps you perform all the necessary steps consistently and in the right order.

Extensions

- The network analyzer provides two alternative measurement procedures for maximum flexibility concerning the signal levels or maximum speed. See [Sequential vs. Simultaneous measurement](#).
- For measurements on non-frequency-converting DUTs: To prevent excess input levels (especially for analyzers without source attenuators), it is possible to loop an external attenuator in-between the NWA source port and the input of the DUT. An external attenuator can also improve the match


at the DUT input. Proper noise figure calibration ensures that the gain and noise figure of the external attenuator is compensated.

- Conversely, it is possible to use an external low-noise preamplifier in order to reduce the noise figure of the NWA receiver and thus improve the measurement accuracy. The gain and noise figure of the pre-amplifier is also compensated during the noise figure calibration. Refer to the background information in section [Noise Figure Calibration](#) to learn more about the relationship between receiver noise figure, preamplifier gain and measurement accuracy. A suitable low-noise preamplifier (option R&S ZVAX-B203) is available in combination with the Extension Unit, R&S ZVAX24.
- Options R&S ZVA-B16, *Direct Generator and Receiver Access*, improve (i.e. reduce) the noise figure of the NWA source and receiver. On analyzers equipped with options R&S ZVA<frequency>-B16, it is also possible to measure the noise figure using a single port. Connect the NWA port connector to the DUT and route back the output signal to the MEAS IN connector of option R&S ZVA<frequency>-B16. On a four-port analyzer, this allows you to measure four DUTs in parallel.
- On four-port analyzers, it is possible to perform two noise figure measurements in parallel using two different port combinations.
- Network analyzers with upper frequency limits in the microwave range have an enhanced coupling attenuation below 1 GHz. This can impair the accuracy of the noise figure measurement.

Noise Figure Setup Guide

The *Noise Figure Setup Guide* gives access to all necessary steps of a noise figure measurement. The dialog is similar to a wizard, however, everything is arranged in a single dialog. The panels numbered 1. to 7. suggest a meaningful order for the different steps. In some cases, it is possible to change the order or skip a step entirely (e.g. a calibration may be skipped if a valid calibration for the test setup is already available).

The buttons in the different panes open dialogs or wizards; all of them are also accessible from the menus of the network analyzer. In general, it is advantageous though to open the dialogs from the setup guide, because this will adjust some of the settings to the requirements of the noise figure measurement.

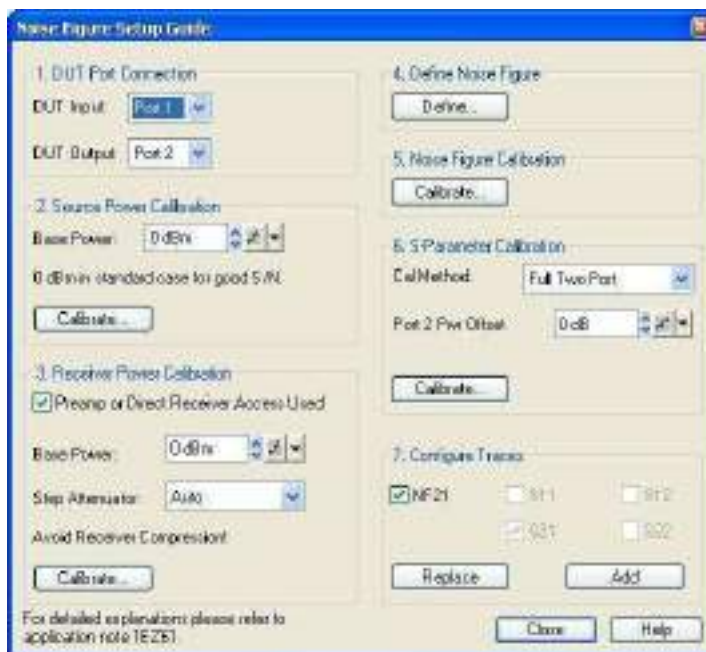

The setup guide provides the following panels/steps:

1. *DUT Port Connection* defines the basic test setup, i.e. the input and output ports of the DUT/NWA. With option R&S ZVA<frequency>-B16, *Direct Generator and Receiver Access*, it is possible to measure the noise figure at a single port (<DUT Input> = <DUT Output>); see section [Basic Test Setup and Noise Figure Calculation](#).

2. *Source Power Calibration* gives access to the [Source Power Cal](#) dialog for the previously selected *DUT Input* port and base power. The base power setting overwrites the *Channel – Power Bandwidth Average – Power* setting as soon as the calibration dialog is opened.

The ideal IF bandwidth setting for the source power calibration is smaller than the bandwidth used for the noise figure measurement. Moreover it is advantageous to set the source attenuation to 0 dB. If the current settings differ from the ideal values, a message box is opened where you can choose to work with ideal calibration settings. The current settings will be restored after the calibration.

3. *Receiver Power Calibration* gives access to the [Receiver Power Cal](#) dialog for the previously selected *DUT Output* port. If a preamplifier is connected between the DUT and the receive port of the analyzer, or if the output signal of the DUT is fed to the MEAS IN connector of option R&S ZVA<frequency>-B16, *Direct Generator and Receiver Access*, in order to bypass the coupler and improve the receiver noise figure, the check box should be selected. This activates the input fields for the base power and source step attenuator settings (if available), which you may have to adjust to the test setup in the receiver path in order to avoid excess receiver input powers (receiver compression; see data sheet). It also activates the *Port <n> Pwr Offset* field in the *S-Parameter Calibration* panel. An active check box has no additional effects.

The base power setting overwrites the *Channel – Power Bandwidth Average – Power* setting after you confirm the *Reduce IF bandwidth...* message box in order to open the calibration dialog. The step attenuator setting immediately overwrites the source attenuator settings for the *DUT Input* port in the *Channel – Power Bandwidth Average – Step Attenuators* dialog.

4. *Define Noise Figure* opens the [Define Noise Figure Measurement](#) dialog, providing basic settings for the noise figure measurement.

5. *Noise Figure Calibration* opens the [Noise Figure Calibration](#) dialog to assess and compensate the internal noise at the NWA receiver and source.

6. *S-Parameter Calibration* opens the [Calibration](#) wizard for the previously selected input and output ports and the *Cal Method*. If this step is skipped, the previous power and noise figure calibrations effectively ensure a transmission normalization; the noise figure trace line contains no [calibration state label](#) (except *Pcal* or another power calibration state label). With an additional *One Path Two Port* or *Full Two Port* calibration, the system error correction of the gain G_D (and thus the noise figure measurement in total) is improved. The trace lines for the calibrated ports indicate *Cal*; the noise figure trace is labeled *Cal NCal* (see [Noise Figure Calibration State Labels](#)). A *Full Two Port* calibration requires more calibration measurements but provides best accuracy; see section [Calibration Types](#).

Port <n> Pwr Offset is enabled if *Preamp or Direct Receiver Access Used* is checked in the *Receiver Power Calibration* panel. <n> is the DUT output port number. The power offset increases or decreases the source power at port <n> during the calibration. If a generator step attenuator is available at port <n>, it also selects the *Low Noise* step attenuator mode. If a pre-amplifier is used in the receiver path, a power reduction (negative value of the *Port <n> Pwr Offset*) may be required to prevent excess powers at the input of the pre-amplifier or at the NWA receiver port during the calibration.


Note: An S-parameter calibration is required for S-parameter measurements in parallel to the noise figure measurement. The large IF bandwidth required for noise figure measurements limits the accuracy of the calibration and the subsequent S-parameter measurements; the AVG detector can improve the results.

7. *Configure Traces* provides a selection of traces which are commonly of interest for the noise figure measurement. The selected traces are created and displayed when the *Replace* or *Add* buttons are clicked. Moreover, the DUT input port (e.g. *P 1*) appears in front of the power values in the channel line. The noise figure trace (*NF21*) is smoothed automatically (label *SMO* in the trace line). The large IF bandwidth limits the accuracy of the S-parameter measurement; the AVG detector can improve the results. Use the *Trace – Measure* menu if you wish to modify the trace settings.

To avoid misleading results, S-parameter selection is enabled only after an *S-Parameter Calibration* has been performed.

Mixer Noise Figure Setup Guide

The *Noise Figure Setup Guide* for mixers is similar to the setup guide for noise figure measurements on non-frequency converting DUTs described above. The basic steps will be outlined in the following.

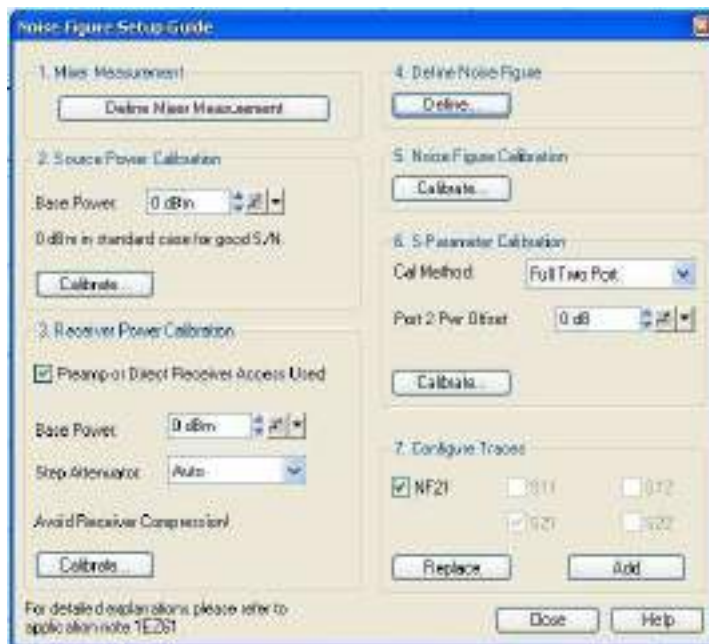

The setup guide provides the following panels/steps:

1. *Define Mixer Measurement* opens the [Define Scalar Mixer Measurement](#) dialog. This dialog activates the frequency conversion mode, selects the test ports, and configures the mixer input signals.



Mixer Noise Figure Measurement with Embedded LO

Compared to a synchronized LO source with known frequency, for *embedded* (non-synchronized) LO sources a different *Mixer Noise Figure Measurement* method is implemented.

This method uses RMS instead of AVG detectors and is selected automatically, if an *Embedded* LO port is configured in the [Define Scalar Mixer Measurement](#) dialog. It produces correct results if the embedded LO's deviation from the nominal LO frequency is "small" compared to the measurement bandwidth (e.g. < 10 kHz for the default Noise Figure Measurement setup). However, it has the following restrictions:

1. *Scalar only* corrections: *Source Match* and *Source and Load Match* corrections are not available (*Define Correction* setting in [Define Scalar Mixer Measurement](#))
2. Gain and noise cannot be measured in parallel (*Measurement of Gain and Noise* is fixed to *Sequential* in [Define Noise Figure Measurement](#) dialog)
3. S-parameter results are not available (*Configure Traces* step of *Mixer Noise Figure Setup Guide*)

2. *Source Power Calibration* gives access to the [Scalar Mixer Measurement Power Calibration](#) dialog for the previously selected DUT input port and *Base Power*. The base power setting overwrites the *Channel – Power Bandwidth Average – Power* setting as soon as the calibration dialog is opened.

The ideal IF bandwidth setting for the source power calibration is smaller than the bandwidth used for the noise figure measurement. Moreover it is advantageous to set the source attenuation to 0 dB. If the current settings differ from the ideal values, a message box is opened where you can choose to work with ideal calibration settings. The current settings will be restored after the calibration.

The RF source power must be calibrated in the RF and in the IF frequency range. The IF source calibration serves as a preparative for the subsequent IF receiver calibration. For a mixer measurement with RF image correction (enable *Prepare Measurement of RF Image* in the *Define Scalar Mixer Measurement* dialog), an additional calibration sweep in the RF image frequency range is required. Moreover, if a mixer measurement with *Source Match* or with *Source and Load Match* correction is active, a source power of the IF port (in the IF frequency range) is offered.

In general, it is recommended to calibrate all frequency ranges in all noise figure calibration stages at once to obtain a sufficient set of calibration data (click the higher-level node *Port <n> RF...* etc.).

3. *Receiver Power Calibration* gives access to the [Scalar Mixer Measurement Power Calibration](#) dialog for the previously selected DUT output port. If a preamplifier is connected between the DUT and the receive port of the analyzer, or if the output signal of the DUT is fed to the MEAS IN connector of option R&S ZVA<frequency>-B16, *Direct Generator and Receiver Access*, in order to bypass the coupler and improve the receiver noise figure, the check box should be selected. This activates the input fields for the base power and source step attenuator settings (if available), which you may have to adjust to the test setup in the receiver path in order to avoid excess receiver input powers (receiver compression; see data sheet). It also activates the *Port <n> Pwr Offset* field in the *S-Parameter Calibration* panel. An active check box has no additional effects.

The base power setting overwrites the *Channel – Power Bandwidth Average – Power* setting after you confirm the *Reduce IF bandwidth...* message box in order to open the calibration dialog. The step attenuator setting immediately overwrites the source attenuator settings for the DUT input port in the *Channel – Power Bandwidth Average – Step Attenuators* dialog.

4. *Define Noise Figure* opens the [Define Noise Figure Measurement](#) dialog, providing basic settings for the noise figure measurement.

5. *Noise Figure Calibration* opens the [Noise Figure Calibration](#) dialog to assess and compensate the internal noise at the NWA receiver and source.

6. *S-Parameter Calibration* opens the [Calibration](#) wizard for the previously selected input and output ports and the *Cal Method*. If this step is skipped, the previous power and noise figure calibrations effectively ensure a transmission normalization; the noise figure trace line contains no [calibration state label](#) (except *Pcal* or another power calibration state label). With an additional *S-Parameter Calibration* (i.e., a *Full One Port* calibration at the RF and IF ports), the system error correction of the gain G_D (and thus the noise figure measurement in total) is improved; the trace lines for the calibrated ports indicate *Cal*; the noise figure trace is labeled *Cal NCal* (see [Noise Figure Calibration State Labels](#)). The *S-Parameter Calibration* is a prerequisite for an [Enhanced Wave Correction](#) at the RF and IF ports.

Port <n> Pwr Offset is enabled if *Preamp or Direct Receiver Access Used* is checked in the *Receiver Power Calibration* panel. <n> is the DUT output port number. The power offset increases or decreases the source power at port <n> during the calibration. If a generator step attenuator is available at port <n>, it also selects the *Low Noise* step attenuator mode. If a pre-amplifier is used in the receiver path, a power reduction (negative value of the *Port <n> Pwr Offset*) may be required to prevent excess powers at the input of the pre-amplifier or at the NWA receiver port during the calibration.

Note: An S-parameter calibration is required for S-parameter measurements in parallel to the noise figure measurement. The large IF bandwidth required for noise figure measurements limits the accuracy of the calibration and the subsequent S-parameter measurements. In general, the AVG detector largely improves the results.

7. *Configure Traces* provides a selection of traces which are commonly of interest for the noise figure measurement. The selected traces are created and displayed when the *Replace* or *Add* buttons are clicked. Moreover, the DUT input port (e.g. *P 1*) appears in front of the power values in the channel line. The noise figure trace (*NF21*) is smoothed automatically (label *SMO* in the trace line). The large IF bandwidth limits the accuracy of the S-parameter measurement; the AVG detector can improve the results. Use the *Trace – Measure* menu if you wish to modify the trace settings.

To avoid misleading results, S-parameter selection is enabled only after an *S-Parameter Calibration* has been performed.

Define Noise Figure Meas...

Provides basic parameters for the noise figure measurement.



- *Detector Meas Time* sets the time that the analyzer uses to acquire data with each of the detector settings (Avg, RMS; see [Detector](#)). The two detectors are used to separate the CW signal and the noise signal at the output of the DUT. A smaller measurement time enhances the total measurement speed, possibly at the expense of accuracy. With the default measurement time, the great majority of noise powers should be measured correctly. If you reduce the detector measurement time, ensure that the variation of the measurement results does not increase significantly.
- *Measurement of Gain and Noise* selects a measurement procedure for maximum flexibility concerning the signal levels or maximum speed; see background information below.
- *Assume Ideal T0 Source Noise* causes the analyzer to discard the source noise determined during calibration and use the noise figure of an ideal 50 Ω resistor instead. You can use this setting in case the source noise is very small compared to the receiver noise so that the source noise figure calibration may become inaccurate. The recommended alternative is to use a preamplifier in order to reduce the receiver noise figure.
- *Apply RF Image Correction* is relevant for mixer noise figure measurements only (with option R&S ZVA-K31): The noise figure measurement accounts for the noise contribution originating from the RF image frequencies. To obtain consistent results, *Prepare Measurement of RF Image* must be enabled in the *Define Mixer Measurement* dialog, and a source and receiver calibration must be performed in the RF image range.
If the DUT suppresses the RF image frequencies, *Apply RF Image Correction* can be unchecked to speed up the measurement. In this case, you can also skip the calibration steps for the RF image frequencies.
- *Narrowband DUT* should be checked if the bandwidth of the DUT is smaller than approx. 50 MHz: Such small bandwidths suppress the noise contributions in the RF image band of the internal mixer in the analyzer's receiver path. Consequently, the analyzer detects the noise contribution from a single sideband of its internal mixer only (instead of both sidebands, if a broadband DUT is measured). The calculation of the receiver noise figure during the calibration and the measurement is modified accordingly.
- **OK** activates the noise figure measurement using the current settings. Note that the filter settings are automatically adjusted to the requirements of the noise figure measurement: An IF bandwidth of 5 MHz and a filter with high selectivity is activated. The filters are available if option R&S ZVAB-K30, *Noise Figure Measurement*, is installed.

For mixer noise figure measurements (option R&S ZVA-K31), a 50 kHz IF bandwidth is used, and the low phase noise mode is activated.



Sequential versus Simultaneous measurement

During the noise figure measurement stage, the analyzer must determine the powers of the CW signal and of the noise signal at the output of the DUT ($P_{\text{Signal}, 2}$, $P_{\text{Noise}, 2}$). This may be done in a single or in two measurement stages.

- In *Sequential* mode, the noise power and the CW signal power are measured in two consecutive sweeps. The first step consists of a normal gain measurement. In the second step the source CW power is reduced to obtain the noise power from the AVG and RMS detector values.
Advantages: This mode provides accurate results over a wide range of source powers. In general, no additional external equipment (attenuator) is needed.
Shortcoming: Increased (doubled) measurement time.
- In *Simultaneous* mode, the noise power and the CW signal power are measured in a single sweep using two different detector settings.
Advantages: Shortest measurement time; the noise figure of the DUT is measured under normal operating conditions.
Shortcoming: Higher source noise. For accurate results the input power at the DUT should be in the range between approx. –70 dBm and –50 dBm. For network analyzers without generator step attenuators, an external attenuator is required.

Remote control: `[SENSe<Ch>:]SWEp:DETECTOR:TIME`
`[SENSe<Ch>:]NFIGure:SEquential`
`[SENSe<Ch>:]NfIGure:RFICorr`
`[SENSe<Ch>:]NfIGure:NDUT`

Noise Figure Cal...

Opens a dialog to assess and compensate the internal noise at the NWA receiver and source. The noise figure calibration should be performed after regular power calibration using an external power sensor following the instructions in section [Power Calibration](#). It is required for various reasons (see also [Basic Test Setup and Noise Figure Calculation](#)):

- The *Receiver Noise Calibration* determines the noise figure of the internal NWA receiver and ensures an accurate measurement of the output signals $P_{\text{Signal}, 2}$, $P_{\text{Noise}, 2}$.
- The *Source Noise Calibration* determines the noise figure and gain of the internal NWA source and provides the accurate source signal contributions $P_{\text{Signal}, 1}$, $P_{\text{Noise}, 1}$.
- If an additional external attenuator is used (see [Sequential vs. Simultaneous measurement](#)), the noise contribution of this attenuator must be compensated in addition. The same applies if the *Gen Atten for Src NCal* and *Gen Atten for DUT Meas* settings differ from each other.

The necessary calibration steps are automatically performed with the channel settings of the active noise figure measurement.




Noise figure calibration procedure

The noise figure calibration is performed in two steps. A third step is added if an external attenuator is used.


1. *Receiver noise calibration* of the analyzer's receive port. The receive port (assigned to the DUT output) is terminated with a 50 Ω match. The connecting cable for the DUT should also be used to connect the match. If a pre-amplifier (preferably, the low-noise preamplifier R&S ZVAX-B203) is used for the

measurement, it is also part of the calibration test setup. The dot in the figure below denotes the position of the DUT output in the measurement test setup.

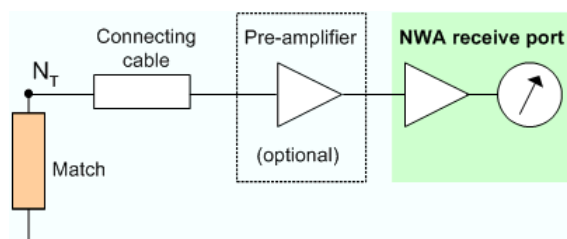


The noise figure of the NWA receiver (including the connecting cable and a possible pre-amplifier) limits the accuracy of the noise figure measurement as a whole. A pre-amplifier with a higher gain can reduce the receiver noise figure. An R&S ZVAB-K30 Noise Figure Error Estimation Tool is available for download at the Rohde & Schwarz internet site.


2. *Source noise calibration* of the analyzer's source port. The DUT is replaced by a through connection; its attenuation should be as small as possible. If a pre-amplifier is used for the measurement, it is also part of the calibration test setup. The two dots in the figure below denote the position of the DUT input and output in the measurement test setup.

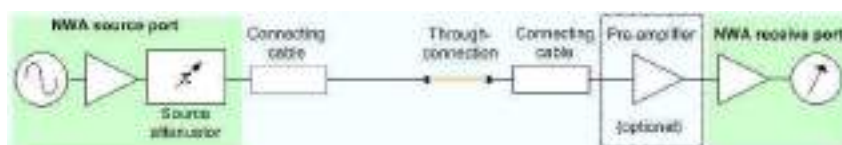

3. *Attenuator calibration*, if the measurement is performed with an external attenuator. The external attenuator and a possible pre-amplifier are part of the calibration test setup. The DUT is replaced by a through connection. The two dots in the figure below denote the position of the DUT input and output in the measurement test setup.

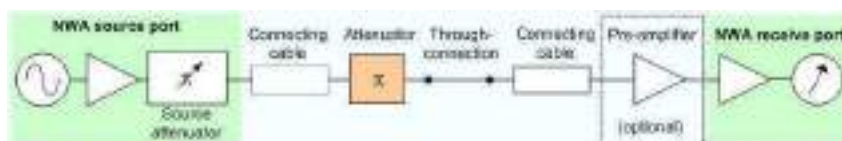

The noise figure calibration procedure does not include the S-parameter calibration. An S-parameter calibration (if desired) requires a series of additional calibration sweeps, according to the list of measured standards in the calibration wizard. See also [S-Parameter Calibration](#).

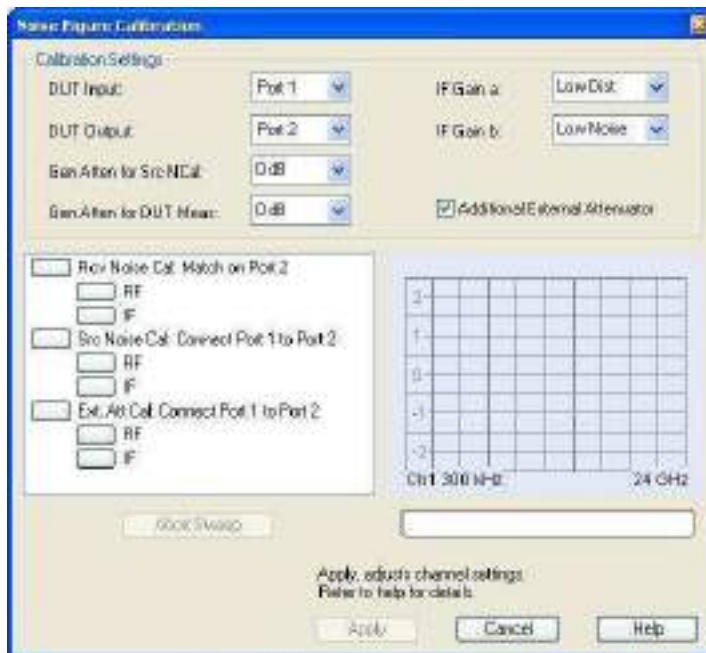

- *DUT Input* and *DUT Output* denote the input and output ports of the DUT/NWA.
- *Gen Atten for Src NCal* reduces the source level during the source noise calibration (calibration step no. 2) by the selected value. Increase the attenuation factor to protect a pre-amplifier with sensitive input from excess input levels. In general, a small attenuation factor improves the accuracy of the source noise figure measurement.
- *Gen Atten for DUT Meas* reduces the source level during the measurement (i.e., after the noise figure calibration). Select an appropriate factor to ensure that the DUT is operated in its linear range. If *Gen Atten for DUT Meas* differs from *Gen Atten for Src NCal*, then the source noise calibration is extended by a second calibration sweep which compensates the effect of the additional attenuator (*Attenuator Cal*).
- *IF Gain a* configures the receiver path for the reference channels (a-waves). The default setting *Low Distortion* is appropriate for relatively high RF levels. Changing the default setting can be appropriate e.g. if an external pre-amplifier and a large *Gen Atten for Src NCal* value is used.
- *IF Gain b* configures the receiver path for the measurement channels (b-waves). The default setting *Low Noise* is appropriate for relatively low RF levels and ensures maximum dynamic range.
- *Additional External Attenuator* must be checked when an external attenuator is used. It extends the list of calibrations by a third step (attenuator calibration). This option is not available for mixer noise figure measurements; see [Basic Test Setup and Noise Figure Calculation](#).
- The list of calibrations shows all calibration steps involved. A click on one of the boxes starts the corresponding calibration sweep. For mixer noise figure measurements, the RF and IF frequency ranges can be calibrated separately. If *Apply RF Image Correction* is selected in the *Define Noise Figure Measurement* dialog, the RF image frequencies are added for all three calibration steps. To obtain a sufficient set of calibration data, it is recommended to calibrate all frequency ranges for each step at once (click the higher-level nodes *Port <n> Connect Match*, *Port <m> Connect Port<m> to Port<n>*, *Additional External Generator* after establishing each calibration test setup).

Remote control: `SENSe1:POWer:IFGain<pt>:MEASure`
`[SENSe<Ch>:]CORRection:COLLect:NFIGure:START`
`[SENSe<Ch>:]CORRection:COLLect:NFIGure[:ACquire]`


```
[SENSe<Ch>:]CORRection:COLLect:NFIGure:SAVE
[SENSe<Ch>:]CORRection:COLLect:NFIGure:END
```

Correction Off

Activates or deactivates the *Noise Figure Calibration* in the active channel. *Correction Off* is available only after a calibration has been performed and applied to the active channel.

With deactivated correction, the analyzer calculates an approximate noise figure, neglecting the influence of internal noise, attenuators etc. This can introduce large deviations between the uncorrected and the corrected traces.

Remote control: [SENSe<Ch>:]CORRection:NFIGure[:STATe]


Virtual Transform

The *Virtual Transform* submenu defines virtual networks to be added to/removed from the measurement circuit for a DUT with single ended or balanced ports. The submenu is available for analyzer models with arbitrary numbers of ports.



Embedding a DUT into a matching network

To be integrated in application circuits, high-impedance components like Surface Acoustic Wave (SAW) filters are often combined with a matching network. To obtain the characteristics of a component with an added matching network, both must be integrated in the measurement circuit of the network analyzer. The figure below shows a DUT with a single-ended and a balanced port that is combined with a real matching circuit and a physical unbalance-balance transformer (balun) in order to be evaluated in a 2-port measurement.

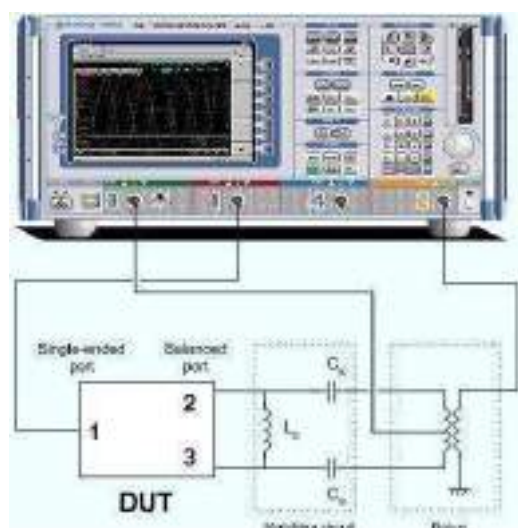

The idea of virtual embedding is to simulate the matching network and avoid using physical circuitry so that the analyzer ports can be directly connected to the input and output ports of the DUT. The matching circuit is taken into account numerically. The analyzer measures the DUT alone but provides the characteristics of the DUT, including the desired matching circuit. This method provides a number of advantages:

- The measurement uncertainty is not impaired by the tolerances of real test fixtures.
- There is no need to fabricate test fixtures with integrated matching circuits for each type of DUT.
- Calibration can be performed at the DUT's ports. If necessary (e.g. for compensating for the effect of a test fixture) it is possible to shift the calibration plane using length [offset parameters](#).




Deembedding a DUT from a matching network

Deembedding and embedding are inverse operations: A deembedding problem is given if an arbitrary real network connected to the DUT is to be virtually removed in order to obtain the characteristics of the DUT alone. Deembedding is typically used for DUTs which are not directly accessible because they are inseparably connected to other components, e.g. for MMICs in a package or connectors soldered to an adapter board.


To be numerically removed, the real network must be described by a set of S-parameters or by an equivalent circuit of lumped elements. Deembedding the DUT effectively extends the calibration plane towards the DUT ports, enabling a realistic evaluation of the DUT without the distorting network. Deembedding can be combined with length [offset parameters](#).

The simplest case of single port deembedding can be depicted as follows:

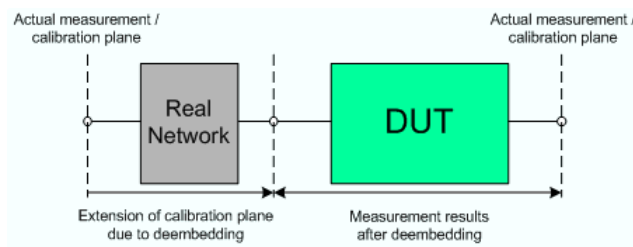

The embedding/deembedding function in the *Virtual Transform* menu has the following characteristics:


- Embedding and deembedding can be combined with balanced port conversion: the (de-)embedding function is available for single ended and balanced ports.
- A combination of [four-port and two-port networks](#) (not necessarily both) can be applied to balanced ports; two-port networks can be applied to single ended ports.
- A combination of four-port and two-port networks can be applied to any pair of single-ended ports. Moreover it is possible to combine an several port pairs in an arbitrary order ([port pair \(de-\)embedding](#)).
- (De-)embedding at a single-ended and/or balanced port may be combined with [ground loop \(de-\)embedding](#). A ground loop models the effect of a non-ideal ground connection of the DUT.
- Transformation networks can be defined by a set of S-parameters stored in a Touchstone file or by an equivalent circuit with lumped elements.
- The same networks are available for embedding and deembedding.

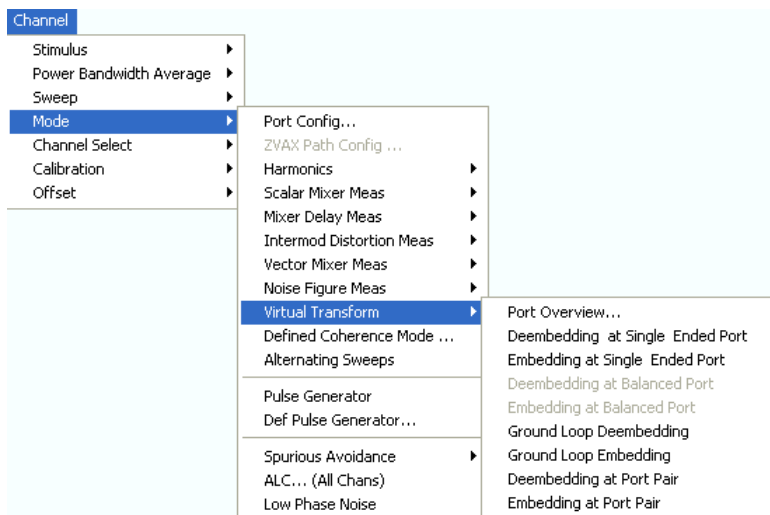

- [Port Overview...](#) opens a dialog providing an overview of all analyzer ports with their reference impedances and transformation networks.
- [Deembedding/Embedding at Single Ended Port](#) opens the configuration dialog for the single ended circuits and activates or deactivates (de-)embedding.
- [Deembedding/Embedding at Balanced Port](#) opens the configuration dialog for the balanced port circuits and activates or deactivates (de-)embedding. These commands are enabled only after a [balanced port](#) configuration has been defined.
- [Ground Loop Deembedding/Embedding](#) opens the configuration dialog for the ground loop circuits and activates or deactivates (de-)embedding.
- [Deembedding/Embedding at Port Pair](#) opens the configuration dialog for the port pair circuits and activates or deactivates (de-)embedding.

Port Overview

Provides an overview of analyzer ports with their reference impedances and transformation networks (if (de-)embedding is active).

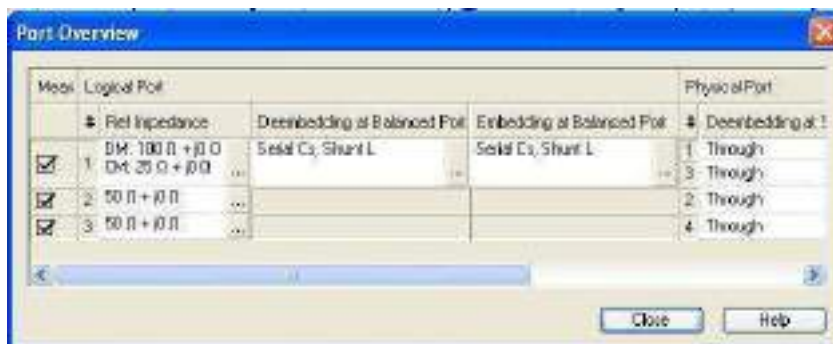

Each row in the *Port Overview* table corresponds to one logical or physical analyzer port; the number of rows in the different columns is equal to the number of balanced ports or physical test ports of the analyzer. The ... buttons open different dialogs for test port configuration:

- [Reference Impedance](#) defines complex impedances for balanced test ports.


- **Deembedding at Balanced Port** and **Embedding at Balanced Port** show the 4-port transformation networks to be numerically added or removed at balanced (logical) ports. *Off* denotes that no (de)embedding operation is performed.
- **Deembedding at Single Ended Port** and **Embedding at Single Port** show the 2-port transformation networks to be numerically added or removed at single ended (physical) or balanced (logical) ports. *Off* denotes that no (de)embedding operation is performed.



A ground loop cannot be assigned to a logical or physical analyzer port, so ground loop (de-)embedding is not shown in the Port Overview dialog. The same applies to port pair (de-)embedding which involves pairs of physical ports.


Combination of Different (De-)Embedding Networks

In the *Port Overview* dialog, it is possible to select a combination of 4-port and 2-port networks to be numerically added/removed at balanced (logical) ports, and to select 2-port networks at single ended (physical) ports. The following example shows the full configuration for a four-port analyzer where the physical ports 1 and 3 form a balanced port with the logical port no. 1 and the remaining ports 2 and 4 are single ended.

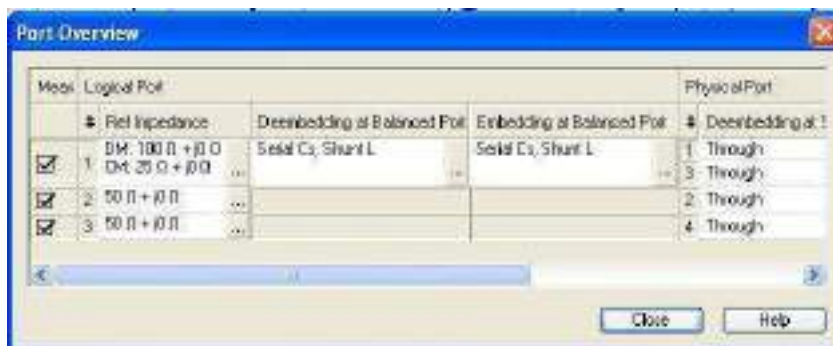

The port overview configuration above corresponds to the measurement circuits shown in steps 1 to 5 below.

The different steps for deembedding and embedding are carried out in the following order (the figure also contains possible ground loop and port pair (de-)embedding stages which are not shown in the *Port Overview* dialog):

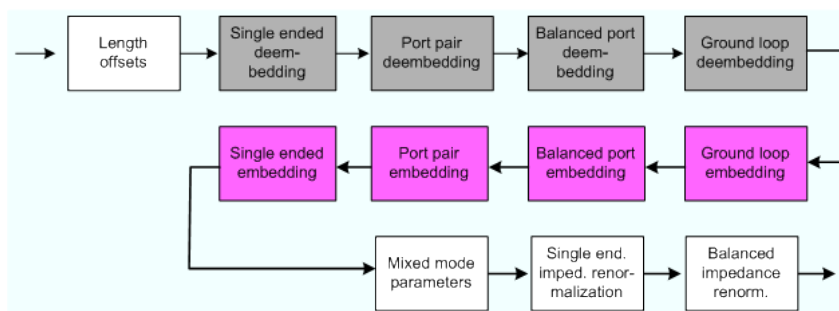

This means that the real networks are removed before virtual networks are added. For a single balanced port with all single ended and balanced port (de-)embedding networks enabled, the 4 (de-)embedding steps are carried out in the following order:

1. **Initial situation: DUT embedded in 2-port and 4-port networks (only 1 port shown)**

2. Deembedding at single ended port

3. Deembedding at balanced port

4. Embedding at balanced port

5. Embedding at single ended port

Reference Impedances...



Changes the reference impedances of the analyzer ports. This is often referred to as renormalization of port impedances. Renormalization means that the measurement results measured at 50 Ω (75 Ω) are converted into results at arbitrary port impedances.

- Renormalization of the physical port impedances affects e.g. S-parameters and wave quantities in *Power* representation.
- Renormalization of the balanced port impedances affects all measured quantities (*Trace – Measure*) that the analyzer provides for balanced ports.

The default reference impedance of a physical port is equal to the reference impedance of the connector type assigned to the port (50 Ω or 75 Ω). It can be defined as a complex value.



For balanced ports it is possible to define separate complex reference impedances for differential and for common mode.

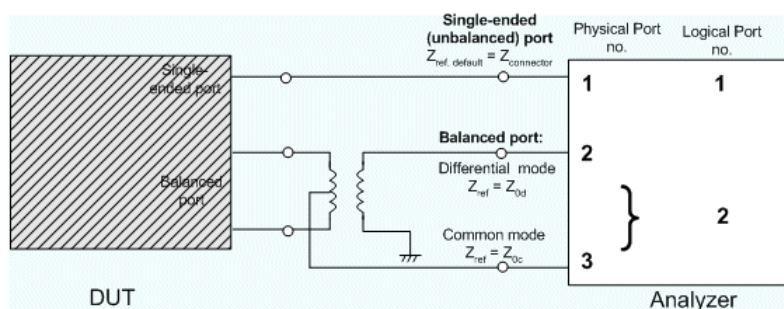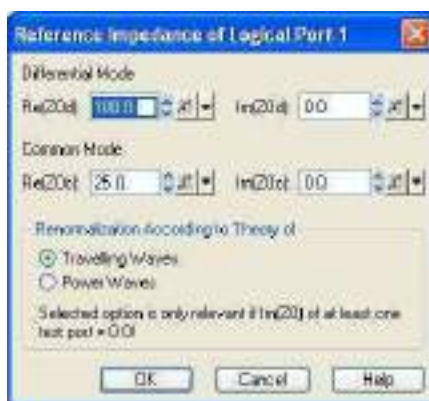

The default values for the balanced port reference impedances are derived from the default reference impedance of the physical analyzer ports ($Z_0 = 50 \Omega$):

- The default value for the differential mode is $Z_{0d} = 100 \Omega = 2 \cdot Z_0$.
- The default value for the common mode is $Z_{0c} = 25 \Omega = Z_0/2$.

Renormalization can be based on two alternative waveguide circuit theories. The conversion formula of both theories differ only if the reference impedance of at least one test port has a non-zero imaginary part.



Conversion formula for wave quantities and S-parameters

Renormalization transforms the "raw" S-matrix S_0 for the default reference impedances Z_{0i} (with physical port number index $i = 1, 2, \dots, n$) into a "renormalized" S-matrix S_1 for the modified reference impedances Z_{1i} . In terms of raw and renormalized wave quantities a_{0i} , b_{0i} and a_{1i} , b_{1i} , S_0 and S_1 are defined as follows:

$$\begin{pmatrix} b_{01} \\ b_{02} \\ \dots \\ b_{0n} \end{pmatrix} = S_0 \cdot \begin{pmatrix} a_{01} \\ a_{02} \\ \dots \\ a_{0n} \end{pmatrix}, \quad \begin{pmatrix} b_{11} \\ b_{12} \\ \dots \\ b_{1n} \end{pmatrix} = S_1 \cdot \begin{pmatrix} a_{11} \\ a_{12} \\ \dots \\ a_{1n} \end{pmatrix}.$$

The renormalized wave quantities (a_1 and b_1) and the S-matrix S_1 can be calculated from S_0 and the reference impedances Z_{0i} , Z_{1i} , according to two alternative waveguide circuit theories.

1. Travelling waves

In the model of Marks and Williams ("A General Waveguide Circuit Theory"), the wave quantities a and b are transformed as follows:

$$\begin{pmatrix} a_{1i} \\ b_{1i} \end{pmatrix} = \frac{1}{2Z_{0i}} \frac{|Z_{0i}|}{|Z_{1i}|} \sqrt{\frac{\operatorname{Re}(Z_{1i})}{\operatorname{Re}(Z_{0i})}} \cdot \begin{pmatrix} Z_{0i} + Z_{1i} & Z_{0i} - Z_{1i} \\ Z_{0i} - Z_{1i} & Z_{0i} + Z_{1i} \end{pmatrix} \cdot \begin{pmatrix} a_{0i} \\ b_{0i} \end{pmatrix}$$

The renormalized S-matrix S_1 is calculated as

$$S_1 = P^{-1}(S_0 - \gamma)(E - \gamma S_0)^{-1}P,$$

with the unit matrix E and two additional matrices with the elements

$$\gamma_{ii} = \frac{Z_{1i} - Z_{0i}}{Z_{1i} + Z_{0i}},$$

$$P_{ii} = \frac{2Z_{0i}}{Z_{0i} + Z_{1i}} \frac{|Z_{1i}|}{|Z_{0i}|} \sqrt{\frac{\operatorname{Re}(Z_{0i})}{\operatorname{Re}(Z_{1i})}}.$$

1. Power waves

In the model of Kurokawa ("Power Waves and the Scattering Matrix"), the wave quantities a and b are transformed as follows:

$$\begin{pmatrix} a_{1i} \\ b_{1i} \end{pmatrix} = \frac{1}{2\sqrt{\operatorname{Re}(Z_{0i}) \operatorname{Re}(Z_{1i})}} \cdot \begin{pmatrix} \overline{Z_{0i}} + Z_{1i} & Z_{0i} - \overline{Z_{1i}} \\ Z_{0i} - \overline{Z_{1i}} & \overline{Z_{0i}} + Z_{1i} \end{pmatrix} \cdot \begin{pmatrix} a_{0i} \\ b_{0i} \end{pmatrix}$$

The renormalized S-matrix S_1 is calculated as

$$S_1 = A^{-1}(S_0 - \overline{\Gamma})(E - \Gamma S_0)^{-1}A,$$

with the unit matrix E and two additional matrices with the elements

$$\Gamma_{ii} = \frac{Z_{1i} - Z_{0i}}{Z_{1i} + \overline{Z_{0i}}},$$

$$A_{ii} = \frac{1 - \overline{\Gamma_{ii}}}{|1 - \overline{\Gamma_{ii}}|} \sqrt{|1 - \Gamma_{ii}\overline{\Gamma_{ii}}|}.$$


In true differential mode, a renormalization formula for the balanced wave quantities is needed; refer to section [Wave Quantities and Ratios](#).

Remote control: `SENSe:PORT<phys_port>:ZREference <real> [,<imaginary>]`
`SENSe:LPORT<log_port>:ZCOMMON <real> [,<imaginary>]`
`SENSe:LPORT<log_port>:ZDIFFerent <real> [,<imaginary>]`

CALCulate<Chn>:TRANSform:IMPedance:RNORmal TWAVes | PWAVes

Embedding/Deembedding at Physical Port

Selects a 2-port transformation network for single port (de-)embedding, defines its parameters, assigns it to a physical port and enables (de-)embedding. Single port (de-)embedding can be used for balanced (logical) as well as for single ended (physical) ports. The two dialogs for deembedding and embedding are identical except for their inverse effect.

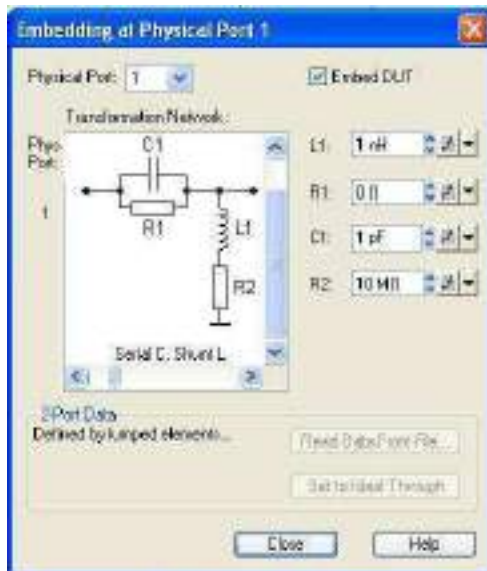

The dialogs contain the following control elements:

- *Physical Port* is the physical analyzer port for the added or removed circuit. The transformation networks are defined such that the physical analyzer test port is connected to the left of the circuit; the DUT port is on the right side.
- *(De-)embed DUT* enables or disables the (de-)embedding function.
- *Transformation Network* contains all available 2-port networks (see below). Networks are either defined by lumped elements or by means of imported S-parameter data. The active network appears in inverse colors. The element parameters (C, R, L) for the selected network are displayed on the right side.
- *Read Data From File...* is enabled as long as the *2-Port Data* network is active. This network is defined by its S-parameters stored in a two-port Touchstone file (*.s2p). No additional parameters are required.
In case the port number conventions of the loaded two-port Touchstone file differ from NWA conventions (see description of *Physical Port* above), it is possible to *Interchange Port Numbers of s2p File*.
- *Set to Ideal Through* is enabled as long as the *2-Port Data* network is active. An imported S-parameter set is replaced by the S-parameters of an ideal through connection, which eliminates the transformation network.



Circuit models for 2-port networks


The lumped element 2-port transformation networks for (de-)embedding consist of the following two basic

circuit blocks:


- A capacitor C connected in parallel with a resistor.
- An inductor L connected in series with a resistor.

The 2-port transformation networks comprise all possible combinations of 2 basic blocks, where one block represents a serial, the other a shunt element. In the default setting the resistors are not effective, since the serial R_s are set to $0\ \Omega$, the shunt R_s are set to $10\ M\Omega$.


The first network is defined by its S-parameters stored in an imported two-port Touchstone file (*.s2p). No additional parameters are required.

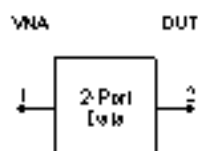

The following networks are composed of a serial C or L (as seen from the test port), followed by a shunt C or L. They are named *Serial C*, *Shunt C / Serial C*, *Shunt L / Serial C*, *Serial L*, *Shunt C / Serial L*, *Shunt L*.

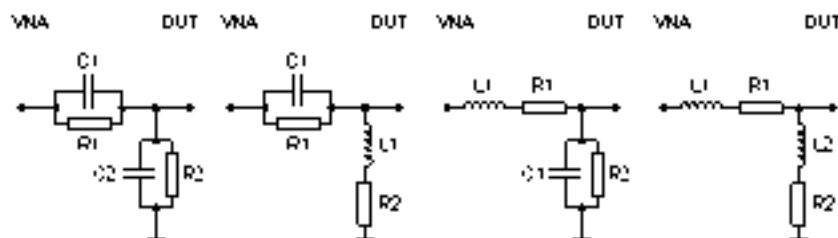

The following networks are composed of a shunt C or L (as seen from the analyzer port), followed by a serial C or L. They are named *Shunt C*, *Serial C / Shunt C*, *Serial L / Shunt L*, *Serial C / Shunt L*, *Serial L*.

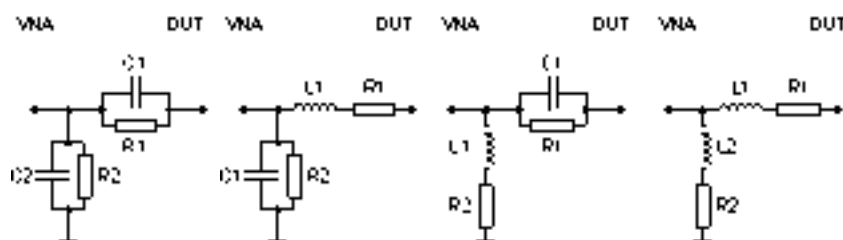

Remote control:

```


CALCulate<Ch>:TRANSform:VNETworks:SENDEd...
MMEMory:LOAD:VNETworks<Ch>:SENDEd:DEEMbedding<Ph_pt>
'<file_name>'
MMEMory:LOAD:VNETworks<Ch>:SENDEd:EMBedding<Ph_pt> '<file_name>'

```

Embedding/Deembedding at Logical Port

Selects a 4-port transformation network for balanced port (de-)embedding, defines its parameters, assigns

it to a physical port and enables (de-)embedding. The two dialogs for deembedding and embedding are identical except for their inverse effect. The dialogs are available only after a [balanced port](#) configuration has been defined.

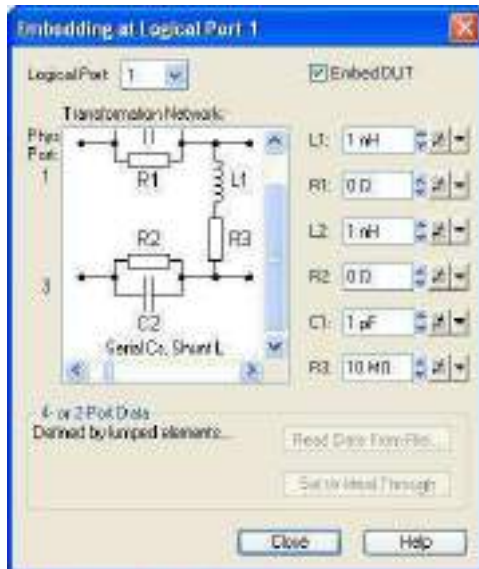

The dialogs contain the following control elements:

- *Physical Port* is the physical analyzer port for the added or removed circuit. The transformation networks are defined such that the physical analyzer test port is connected to the left of the circuit; the DUT port is on the right side.
- *(De-)embed DUT* enables or disables the (de-)embedding function.
- *Transformation Network* contains all available 4-port networks (see below). Networks are defined by lumped elements or by means of imported S-parameter data. The active network appears in inverse colors. The element parameters (C, R, L) for the selected network are displayed on the right side.
- *Read Data From File...* is enabled as long as one of the networks involving two-port or four-port S-parameter data is active. The S-parameters are read from two-port (*.s2p) or four-port (*.s4p) Touchstone files. Each two-port file can be assigned to one of two different physical ports, to be selected by means of the *Phys. Port* radio buttons.
S-parameter data are not renormalized during the import, however, they are renormalized to the connector impedances of the associated ports before they are used for (de-)embedding. This means that it is still possible to change the connector impedances after S-parameter import. For background information about renormalization see [Reference Impedances](#).
In case the port number conventions of the loaded two-port Touchstone file differ from NWA conventions (see description of *Physical Port* above), it is possible to *Interchange Port Numbers of s2p File*.
- *Set to Ideal Through* is enabled as long as one of the networks involving two-port or four-port S-parameter data is active. An imported S-parameter set is replaced by the S-parameters of an ideal through connection, which eliminates the transformation network.




Circuit models for 4-port networks

The lumped element 4-port transformation networks for (de-)embedding consist of the following two basic circuit blocks:


- A capacitor C connected in parallel with a resistor.
- An inductor L connected in series with a resistor.

The transformation networks comprise various combinations of 3 basic circuit blocks, where two blocks represent serial elements, the third a shunt element. In the default setting the resistors are not effective, since the serial R_s are set to $0\ \Omega$, the shunt R_s are set to $10\ M\Omega$. Moreover, the serial elements can be replaced by imported 2-port S-parameters, or the entire transformation network can be described by imported 4-port S-parameters.


The first network is defined by its S-parameters stored in an imported four-port Touchstone file (*.s4p). No additional parameters are required.

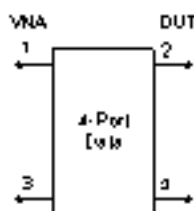


The following networks are composed of a shunt C or L and two serial elements, described by means of imported 2-port S-parameters. They are named *Serial 2-port, Shunt C / Serial 2-port, Shunt L / Shunt L, Serial 2-port / Shunt C, Serial 2-port*.

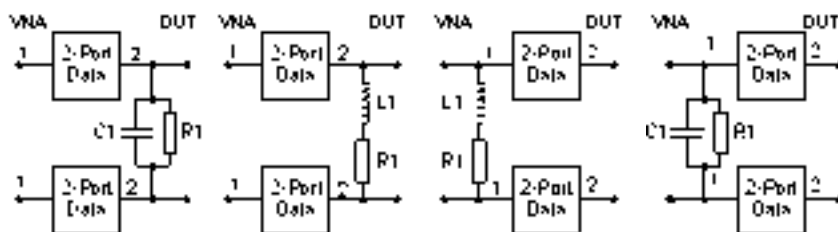

The following networks are composed of two serial Cs or Ls (as seen from the analyzer test port), followed by a shunt C or L. They are named *Serial Cs, Shunt C / Serial Cs, Shunt L / Serial Ls, Shunt C / Serial Ls, Shunt L*.

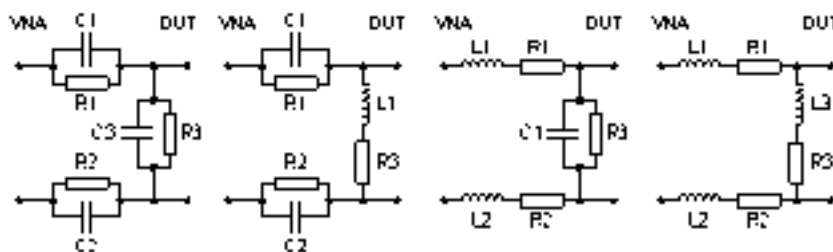

The following networks are composed of a shunt C or L (as seen from the analyzer test port), followed by two serial Cs or Ls. They are named *Shunt C, Serial Cs / Shunt C, Serial Ls / Shunt L, Serial Cs / Shunt L, Serial Ls*.

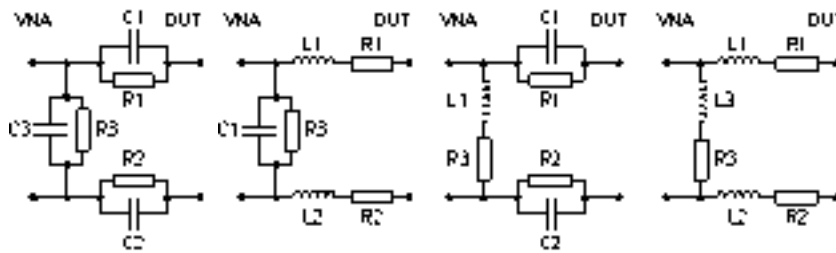

Remote control:

```
CALCulate<Ch>:TRANSform:VNETworks:BALanced...
MMEMory:LOAD:VNETworks<Ch>:BALanced:DEEMbedding<Log_pt>
'<file_name>', PMAIn, PSECondary
MMEMory:LOAD:VNETworks<Ch>:BALanced:EMBedding<Log_pt>
'<file_name>', PMAIn, PSECondary
```

Ground Loop (De-)Embedding

Selects a ground loop transformation network for (de-)embedding, defines its parameters, and enables (de-)embedding. Ground loop (de-)embedding is not assigned to a physical or logical analyzer port. The two dialogs for deembedding and embedding are identical except for their inverse effect.



Ground loops


A ground loop models the effect of a non-ideal ground connection of the DUT causing a difference in potential between the analyzer's and the DUT's ground reference. A typical and often unavoidable source of ground loops is the parasitic inductance of the ground contacts.

In contrast to the 2-port (de-)embedding networks, the ground loop represents a single-wire connection: The ground loop can be described by a one-port S-matrix. On the other hand, the ground loop (de-)embedding algorithm for an n-port DUT involves matrix operations which are based on the complete uncorrected nxn S-matrix. The number of (measured) ports of the DUT must be entered in the *Port Configuration* dialog; this ensures that the analyzer acquires the complete set of S-parameters.

The following port configuration corresponds to a DUT with one balanced and two single-ended ports. As a prerequisite for ground loop (de-)embedding the analyzer must determine a 4x4 S-matrix.

Port Configuration			
Meas	Logical Port #	Physical Port #	
☒	1	Port 1	Port 3
☒	2	Port 2	
☒	3	Port 4	

In general, an n-port analyzer is capable of measuring n 1-port DUTs in parallel. A four-port analyzer can also perform two simultaneous 2-port measurements, if appropriate port groups are defined. Ground loop (de-)embedding is compatible with simultaneous measurements on different DUTs; it does not affect the number of measurements which can be performed in parallel. Note however that all port groups are assigned the same ground loop transformation network.

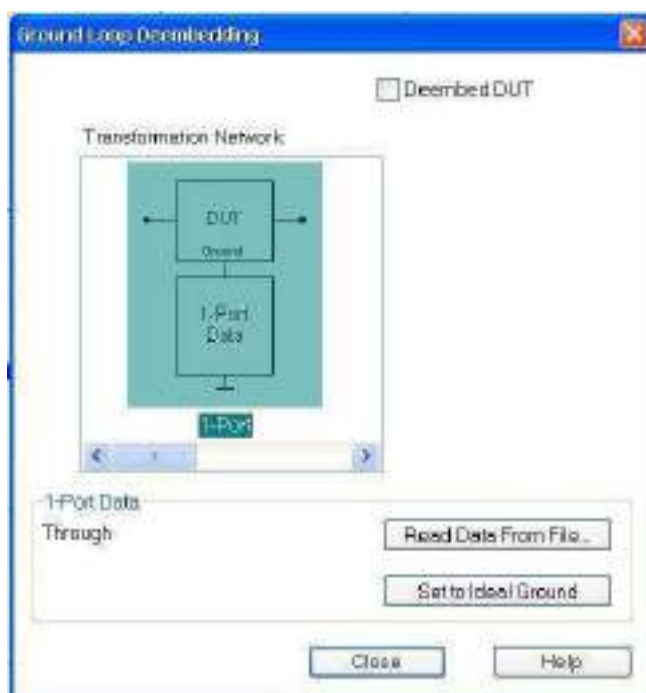


The *Ground Loop (De-)Embedding* dialogs contain the following control elements:

- *(De-)embed DUT* enables or disables the (de-)embedding function.
- *Transformation Network* contains all available ground loop networks (see below). Networks are defined either by means of imported S-parameter data or by lumped elements. The active network appears in inverse colors. The element parameters (C, R, L) for the selected network are displayed on the right side.
- *Read Data From File...* is enabled as long as the *1-Port Data* network is active. This network is defined by its S-parameters stored in a one-port Touchstone file (*.s1p). No additional parameters are required.
- *Set to Ideal Ground* is enabled as long as the *1-Port Data* network is active. An imported S-parameter set is replaced by the S-parameters of an ideal through connection, which eliminates the transformation network.




Circuit models for ground loops

The first ground loop network is defined by its S-parameters stored in an imported one-port Touchstone file (*.s1p). No additional parameters are required.

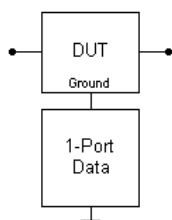

The alternative networks are defined by an inductor L connected in series with a resistor (*Shunt L*), and by a capacitor C connected in parallel with a resistor (*Serial C*). In the default setting the resistors are not effective, since the serial Rs are set to 0 Ω , the shunt Rs are set to 10 M Ω .

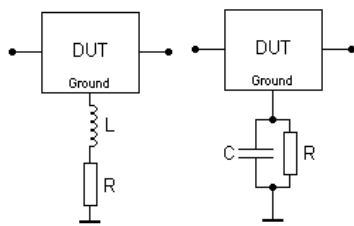

**Remote
control:**

```
CALCulate<Ch>:TRANSform:VNETworks:GLOop...
MMEMory:LOAD:VNETworks<Ch>:GLOop:DEEMbedding<Ph_pt>
'<file_name>'
MMEMory:LOAD:VNETworks<Ch>:GLOop:EMBedding<Ph_pt> '<file_name>'
```

(De-)Embedding at Port Pair

Selects a port pair transformation network for (de-)embedding, defines its parameters, and enables (de-)embedding. Each port pair transformation network is assigned to a pair of single ended (physical) ports. The two dialogs for deembedding and embedding are identical except for their inverse effect.




Port pairs

Port pair (de-)embedding extends the functionality of balanced port (de-)embedding to pairs of single-ended physical ports. The analyzer uses the 4-port transformation networks known from balanced port (de-)embedding, however, each transformation network is assigned to a pair of single-ended analyzer ports. The port pairs must have the following properties:


- The two ports must be different.
- If port groups are defined, the two ports must be within the same port group.

As shown in section [Combination of Different \(De-\)Embedding Networks](#), port pair deembedding is calculated after single-ended deembedding, and the port pair embedding step precedes single ended embedding. It is possible to combine a sequence of port pairs for (de-)embedding, each with its own transformation network. The effect of port pair (de-)embedding depends on the individual pairs but also on their order; see example in section [Define Port Pairs for \(De-\)embedding](#).



A simple circuit which can be modeled using port pair (de-)embedding is a circuit (e.g. a resistance) between two ports of a DUT. To obtain the circuit in the following figure, select port pair p,q and the *Serial Ls*, *Shunt L* transformation network with all inductances set to zero ($L1 = L2 = L3 = 0$ H), $R1 = R2 = 0$ Ω and $R3 = R$.

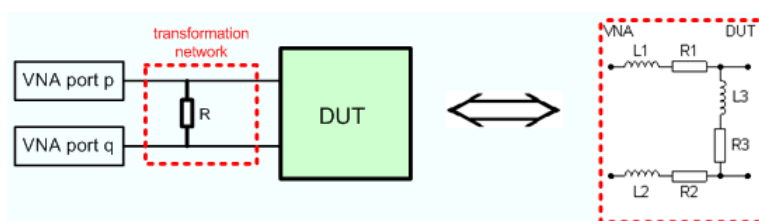

To model a 2-port (de-)embedding network between ports p and q, select port pair p,q and the *4-Port* data network, providing an appropriate set of equivalent 4-port S-parameters.

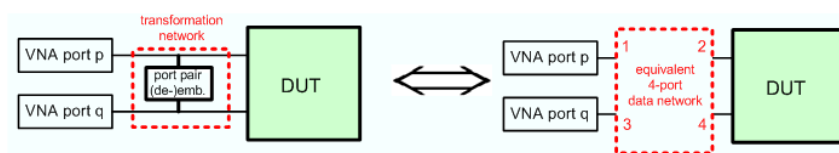

The two 2-port (de-)embedding networks in the figure below require two port pairs 1,2 and 1,3, each combined with an appropriate set of equivalent 4-port S-parameters.

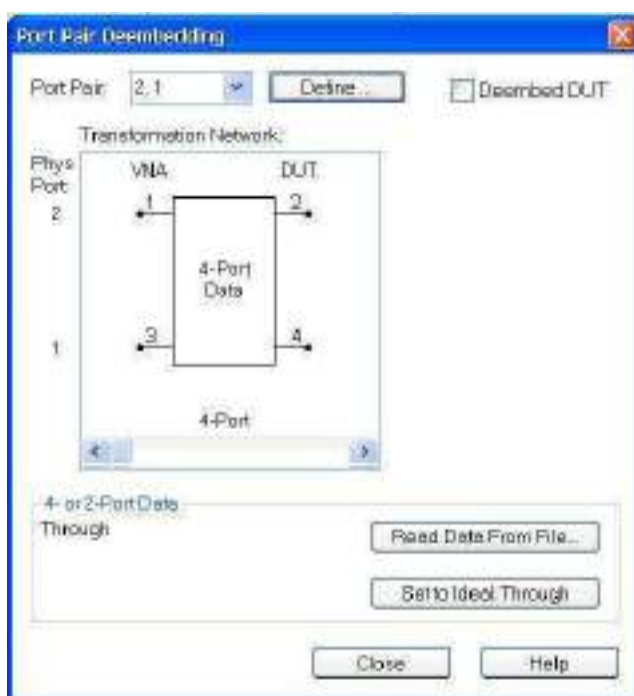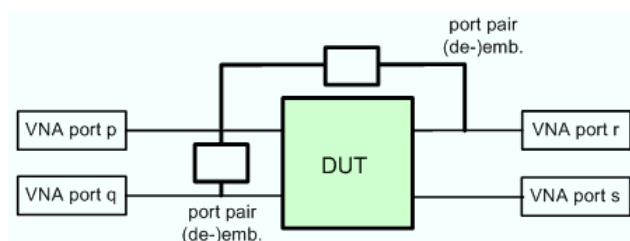

The *Port Pair (De-)Embedding* dialogs contain the following control elements:

- *Port Pair* shows the configured pair of single ended ports. *Define* opens a dialog to define an ordered list of port pairs.
- *(De-)embed DUT* enables or disables the (de-)embedding function.
- *Transformation Network* contains all available 4-port networks for port pairs (see below). Networks are defined either by means of imported S-parameter data or by lumped elements. The active network appears in inverse colors. The element parameters (C, R, L) for the selected network are displayed on the right side.
- *Read Data From File...* is enabled as long as one of the networks involving two-port or four-port S-parameter data is active. The S-parameters are read from two-port (*.s2p) or four-port (*.s4p) Touchstone files. In case the port number conventions of the loaded two-port Touchstone file differ from NWA conventions (see description of Physical Port above), it is possible to *Interchange*

Port Numbers of s2p File.

- *Set to Ideal Through* is enabled as long as one of the networks involving two-port or four-port S-parameter data is active. An imported S-parameter set is replaced by the S-parameters of an ideal through connection, which eliminates the transformation network.



The circuit models for port pair (de-)embedding are the same as the ones for [balanced port \(de-\)embedding](#).

Remote control:


```
CALCulate<Ch>:TRANSform:VNETworks:PPAir...
MMEMory:LOAD:VNETworks<Ch>:PPAir:DEEMbedding<List_idx>
'<file_name>'
MMEMory:LOAD:VNETworks<Ch>:PPAir:EMBedding<List_idx>
'<file_name>'
```

Define Port Pairs for (De-)embedding

Defines a list of port pairs to be numerically added or removed. Port pairs comprise two different single ended analyzer ports. If port groups are defined, the two ports must be within the same port group. *Add* opens an additional dialog to select and add a new port pair.



The same physical port(s) may be used repeatedly in different port pairs; it is also possible to repeat the same port pairs. The first pair in the *Embedding* list and the last pair in the *Deembedding* list correspond to the position closest to the DUT. The effect of port pair (de-)embedding depends on the order of the port pairs as shown in the following examples.

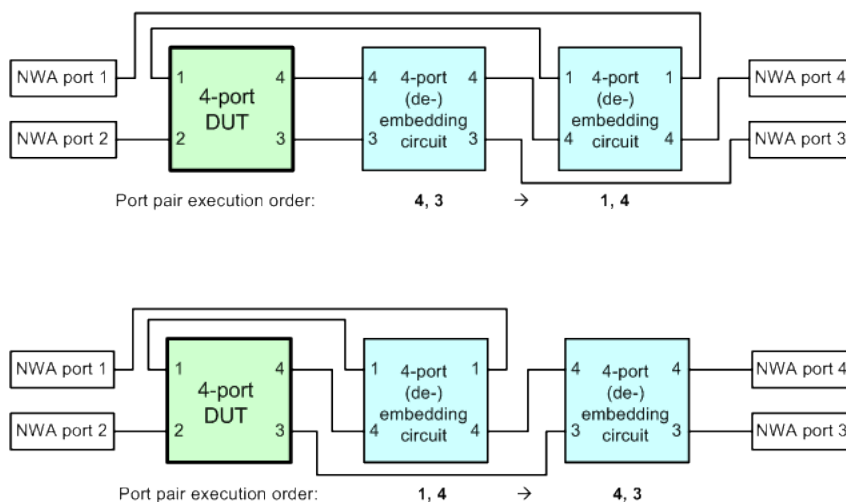


Remote control: `CALCulate<Ch>:TRANSform:VNETworks:PPAir:DEEMbedding:DEFine`
`CALCulate<Ch>:TRANSform:VNETworks:PPAir:DEEMbedding:DELeTe`
`CALCulate<Ch>:TRANSform:VNETworks:PPAir:EMBEding:DEFine`
`CALCulate<Ch>:TRANSform:VNETworks:PPAir:EMBEding:DELeTe`

True Differential Mode (for R&S ZVA and R&S ZVT)

Differential transmission lines and circuits are widely used, because their characteristics give them a lower susceptibility to electromagnetic interference. Linear balanced devices can be tested with sufficient accuracy using the virtual differential mode, where the vector network analyzer generates unbalanced stimulus signals and uses a mathematical transformation to convert unbalanced wave quantities into balanced S-parameters. A different behavior is expected for nonlinear balanced devices, where the transmission characteristics of the DUT may depend on how closely the stimulus signal matches real operating conditions.

With option R&S ZVA-K6, *True Differential Mode*, the vector network analyzer can generate true differential and common mode stimuli at arbitrary reference planes in the test setup and determine mixed-mode [S-parameters](#), [wave quantities and ratios](#). It is also possible to perform true differential measurements on [frequency-converting DUTs](#) or to use true differential mode in combination with external frequency converters (see background information in section *Balanced Ports and Port Groups – True Diff Mode*). Moreover the true differential mode provides two additional sweep types, the [amplitude imbalance](#) and [phase imbalance](#) sweeps. Like the virtual differential mode, the true differential mode requires a port configuration with at least one balanced port. The differential mode signal that the analyzer generates in true differential mode is shown below (the plot shows the waveforms of the two single-ended sources measured vs. ground).

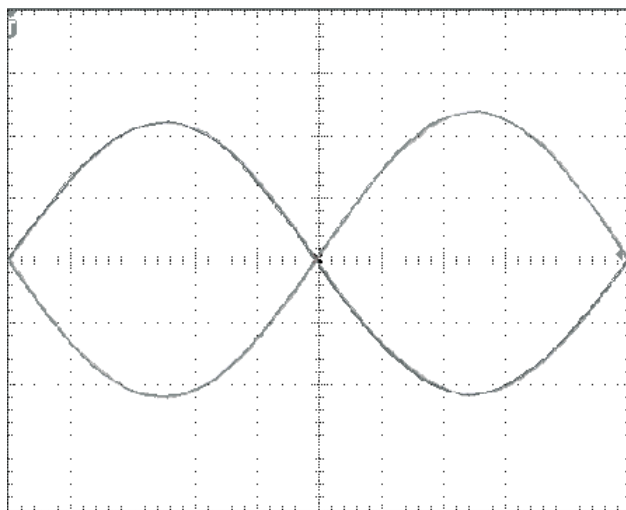

True differential mode requires an analyzer with at least two independent internal sources, i.e. a minimum of 3 ports. To activate true differential mode, open the *Balanced Ports and Port Groups* dialog to define a balanced port configuration, then select the *True Diff Mode* tab (*Channel – Mode – Port Configuration... – Balanced Ports and Port Groups... – True Diff Mode – True Differential Mode: On*). Refer to chapter *Measurement Examples* for details.



On R&S ZVA67 and on R&S ZVA24/40 network analyzers with four ports and four generators (order nos. 1145.1110.28/48), all ports have independent internal sources. You can use true differential mode with an arbitrary combination of two source ports.



Virtual and true differential mode

The analyzer uses different stimulus signals and different mathematical methods to obtain results in normal, virtual differential, or true differential mode. The following table gives an overview.

Normal (unbalanced) mode	Measurement of wave quantities and S-parameters for unbalanced ports. Unbalanced stimulus signals.
Virtual differential mode	Precondition: At least one balanced port is defined. Measurement of unbalanced wave quantities using unbalanced stimulus signals. Unbalanced system error correction. Conversion of unbalanced wave quantities into balanced and mixed-mode S-parameters with possible renormalization of port impedances.
True differential mode	Precondition: At least one balanced port is defined. Measurement of unbalanced wave quantities using balanced stimulus signals (differential and common mode). System error correction and conversion of unbalanced into balanced wave quantities. Calculation of balanced and mixed-mode S-parameters with possible renormalization of port impedances.



True Differential mode relies on [Enhanced Wave Correction](#). A consistent system error correction is essential for accurate balanced waves at the reference planes and accurate measurement results. You must perform a full n-port calibration (TOSM, UOSM or one of the Txx calibration types) of all physical ports involved in the true differential measurement and change the differential and common mode reference impedances, if they differ from the default settings. A subsequent source power calibration is recommended.

You can also use offset parameters or additional two-port transmission factors in order to move the reference plane where the analyzer provides an accurate differential or common mode signal.

See also [True Differential Mode on Frequency-Converting DUTs](#).



Option R&S ZVA-K6 provides an alternative [Defined Coherence Mode](#) where you can generate several continuous signals with specific relative amplitude and phase. True differential mode and defined coherence mode cannot be active at the same time because they require a different source port configuration.

Source Power in True Differential Mode

A single-ended stimulus can be thought of as resulting from the superposition of a differential and a common mode stimulus, where the signals add at one single-ended port and cancel at the other (see equations in section [Wave Quantities and Ratios in True Differential Mode](#) below). Therefore the differential content of a single-ended signal is 3 dB lower than the total signal power.

The stimulus power in true differential mode can be set in two different ways:

- If *Same Differential and Common Mode Voltages as in Single-Ended Mode* is selected, the analyzer ensures that the stimulus voltages in true differential or common mode are the same as the respective stimulus components in virtual differential mode. The single ended voltages at the involved physical test ports are divided by 2 and the output powers with reference Z_0 by 4 (see table below).
- If *Apply to Differential ($Z_d = 2Z_0$) and Common Mode ($Z_c = Z_0/2$) Waves* is selected, the channel power P_{ch} is interpreted as the power of the true differential or common mode stimulus signal, referenced to the corresponding mode impedance $Z_d = 2Z_0$ or $Z_c = Z_0/2$. The single ended voltages at the involved physical test ports are divided by $\sqrt{2}$ and the output powers with reference Z_0 are divided by two (see table below).

Switching between the two stimulus power modes changes the single ended powers by ± 3 dB. The channel power setting P_{ch} (*Channel – Stimulus – Power*) remains unchanged.

Mode	Stimulus signal	Nodal generator powers and voltages at physical ports	
		Port i	Port j
Virtual differential mode	Unbalanced	$P_{ch} (= U_d^2 / Z_0)$ $U_d / 2 + U_c (= U_d)^*)$	0 W $U_d / 2 - U_c (= 0)^*)$
True differential mode, "Same Differential and Common Mode Voltages as in Single-Ended Mode"	Differential mode	$P_{ch} / 4$ $U_d / 2$	$P_{ch} / 4$ $-U_d / 2$
	Common mode	$P_{ch} / 4$ U_c	$P_{ch} / 4$ U_c
True differential mode, "Apply to Differential ($Z_d = 2Z_0$) and Common Mode ($Z_c = Z_0/2$) Waves"	Differential mode	$P_{ch} / 2$ $U_d / \text{sqrt}(2)$	$P_{ch} / 2$ $-U_d / \text{sqrt}(2)$
	Common mode	$P_{ch} / 2$ $U_c * \text{sqrt}(2)$	$P_{ch} / 2$ $U_c * \text{sqrt}(2)$

*) This entails the condition $U_d = 2 * U_c$

Mode	Stimulus signal	Modal generator powers and voltages at balanced port	
		Differential mode	Common mode
Virtual differential mode	Unbalanced	$P_{ch} / 2$ U_d	$P_{ch} / 2$ U_c
True differential mode, "Same Differential and Common Mode Voltages as in Single-Ended Mode"	Differential mode	$P_{ch} / 2$ U_d	0 W 0 V
	Common mode	0 W 0 V	$P_{ch} / 2$ U_c
True differential mode, "Apply to Differential ($Z_d = 2Z_0$) and Common Mode ($Z_c = Z_0/2$) Waves"	Differential mode	P_{ch} $U_d * \text{sqrt}(2)$	0 W 0 V
	Common mode	0 W 0 V	P_{ch} $U_c * \text{sqrt}(2)$



Avoiding possible problems at very large or very low source powers

1st scenario: Large source powers

The maximum output power is not always exactly the same for different physical test ports. The deviations are generally small (< 1 dB).

If the network analyzer in true differential mode is operated in the vicinity of the maximum channel power ($> +5$ dBm), a message "Port<n> power unlevelled" may indicate that one of two combined physical ports cannot provide the required source power. The measurement is not aborted, however, the analyzer is no longer capable of providing accurate balanced waves.

If you operate the analyzer close to its maximum power, first check the reference channels (a-waves) and ensure a 1 dB reserve over the entire sweep range.

2nd scenario: Small source powers

To generate equal source powers, the signal-to-noise ratio at each port must be sufficiently high. At very low levels (< -30 dBm) and large IF bandwidths, a message "Port<n> power unlevelled" may indicate that the signal-to-noise ratio at one of the ports is too low. Again, the measurement is not aborted, however,

the analyzer is no longer capable of providing accurate balanced waves.

If you operate the analyzer at very low output power settings, reduce the IF bandwidth to 1 kHz or below.

The source power mode is a global setting. It is defined in the [Power](#) tab of the *System Configuration* dialog.

Remote control: [SOURCE<Ch>:TDIF:WAVes](#) [SENDEd](#) | [DCMode](#)

Wave Quantities and Ratios in True Differential Mode

In true differential mode, the analyzer can determine the balanced wave quantities and ratios for all balanced ports. The balanced quantities appear in the [More Wave Quantities](#) or [More Ratios](#) dialog as soon as the true differential mode is active.

Assume that a balanced port numbered i comprises the two physical ports k and l . To obtain the balanced wave quantities for port i , the analyzer measures the unbalanced wave quantities at ports k and l . The differential mode waves a_{di0} and b_{di0} and the common mode waves a_{ci0} and b_{ci0} can be calculated from the unbalanced waves using the following equations:

$$a_{di0} = \frac{1}{\sqrt{2}}(a_k - a_l); \quad b_{di0} = \frac{1}{\sqrt{2}}(b_k - b_l)$$

$$a_{ci0} = \frac{1}{\sqrt{2}}(a_k + a_l); \quad b_{ci0} = \frac{1}{\sqrt{2}}(b_k + b_l)$$



Possible modification for amplitude and phase imbalance sweep

In an [amplitude imbalance](#) or [phase imbalance](#) sweep, it is possible to compensate the a waves for the known phase imbalance φ and the amplitude imbalance $r = |a_k / a_l|$. This modifies the formulas for the balanced wave quantities as shown below.

For an amplitude imbalance sweep with known imbalance r :

$$a_{di0} = \frac{1}{\sqrt{2}}(a_k \frac{1}{\sqrt{r}} + a_l \sqrt{r}); \quad a_{di0} = \frac{1}{\sqrt{2}}(a_k \frac{1}{\sqrt{r}} - a_l \sqrt{r})$$

For a phase imbalance sweep with known imbalance φ :

$$a_{di0} = \frac{1}{\sqrt{2}}(a_k - a_l \cdot e^{-j\varphi}); \quad a_{di0} = \frac{1}{\sqrt{2}}(a_k + a_l \cdot e^{-j\varphi})$$

The amplitude and phase imbalances are known quantities (sweep parameters). The unbalanced waves a_k and a_l are measured in the reference channels. With ideal unbalanced waves and no additional disturbing effects, the compensated balanced stimulating a -waves remain constant over the entire sweep range.



Renormalization of port impedances

In the default scenario where the reference impedances for the differential and common mode are equal to $Z_d = 2 Z_0$ and $Z_c = 1/2 Z_0$, the waves a_{di0} , b_{di0} , a_{ci0} and b_{ci0} correspond to the true balanced waves at port i . With arbitrary reference impedances for the balanced waves, an additional renormalization step is necessary:

$$\begin{pmatrix} a_{di} \\ b_{di} \end{pmatrix} = \frac{1}{4Z_0} \begin{pmatrix} 2Z_0 & \sqrt{\frac{\text{Re}(Z_d)}{2\text{Re}(Z_0)}} \\ \sqrt{\frac{\text{Re}(Z_d)}{2\text{Re}(Z_0)}} & 2Z_0 - Z_d \end{pmatrix} \begin{pmatrix} a_{dio} \\ b_{dio} \end{pmatrix}$$

$$\begin{pmatrix} a_{ci} \\ b_{ci} \end{pmatrix} = \frac{1}{Z_0} \begin{pmatrix} Z_0 & \sqrt{\frac{2\text{Re}(Z_c)}{\text{Re}(Z_0)}} \\ \sqrt{\frac{2\text{Re}(Z_c)}{\text{Re}(Z_0)}} & \frac{Z_0}{2} - Z_c \end{pmatrix} \begin{pmatrix} a_{cio} \\ b_{cio} \end{pmatrix}$$

The reference impedances Z_c and Z_d can be entered in the [Balanced Ports and Port Groups](#) dialog.

Remote control: `CALCulate<Ch>:PARAmeter:SDEFine 'AS1D2S' |`


S-Parameters in True Differential Mode

The mixed-mode S-matrix elements that the analyzer acquires in true differential mode correspond to the [mixed-mode matrix](#) elements obtained in virtual differential mode, however, the analyzer uses true differential and true common mode stimuli at each balanced port of the DUT.



Example: 3x3 mixed-mode S-matrix

Suppose that a three-port analyzer is configured for one balanced and one single-ended port as shown below:

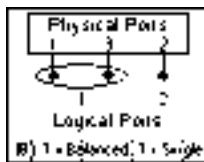


To obtain the complete mixed-mode S-matrix, the analyzer generates the following stimulus signals:

1. Differential mode signal fed to balanced port no. 1 of the DUT
2. Common mode signal fed to balanced port no. 1 of the DUT
3. Unbalanced signal fed to single-ended port no. 2 of the DUT


The DUT is fully characterized by the following mixed mode matrix:

	Single ended stimulus	Diff. mode stimulus	Comm. mode stimulus
Single-ended response →	S_{ss22}	S_{sd12}	S_{so12}
Differential mode response →	S_{ds21}	S_{dd11}	S_{do11}
Common mode response →	S_{cs21}	S_{cd11}	S_{co11}

For linear DUTs, the S-matrices acquired in virtual and in true differential mode are expected to be equal. The following figure shows a comparison for the transmission coefficient S_{sd12} . The red trace was measured in true differential mode. The blue trace (below, measured in virtual differential mode) is almost identical over the entire sweep range.

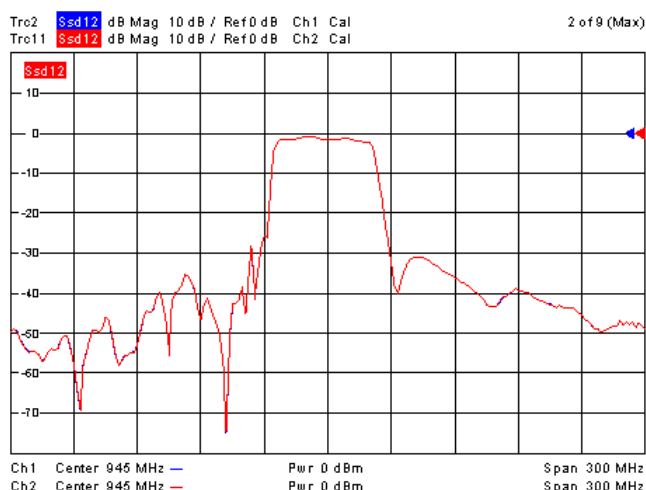


Differences may appear for nonlinear devices at high stimulus power levels. For example, the bias of semiconductor devices like transistors may depend on the kind of stimulus signal. The following figure shows a power sweep measured in virtual differential mode (green) and in true differential mode (blue). In true differential mode, gain peaking is smaller and compression starts at much lower stimulus power.

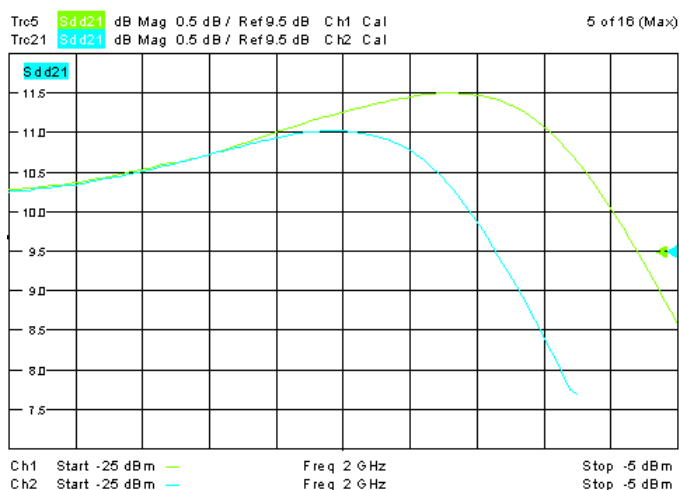

Remote control: `CALCulate<Ch>:PARAmeter:SDEFine 'SCD11' |`

True Differential Mode on Frequency-Converting DUTs

True differential mode can be combined with frequency-converting measurement modes. A measurement example is outlined in section *Measuring Frequency Converting DUTs* in chapter *Measurement Examples*. For this type of measurements, a consistent **calibration** is particularly important. E.g. scalar mixer measurements are typically performed at different RF and IF frequency ranges.

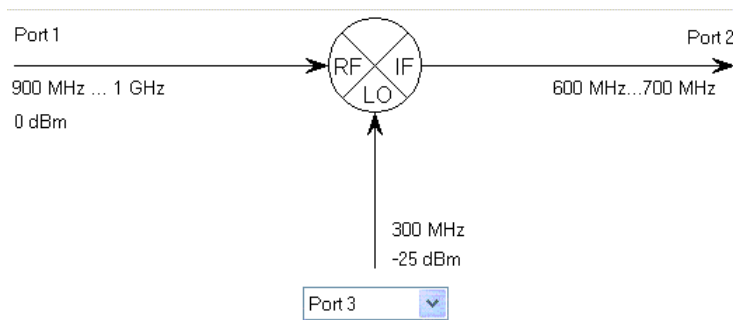

Calibration kits do not contain frequency-converting two-port standards so that any system error correction is performed at equal source and receiver frequencies. However, if a scalar mixer measurement is active, the analyzer automatically performs the system error correction in both the RF and the IF frequency range. The number of points for the calibration sweep is doubled. In the *Calibration Manager* dialog, the calibrated frequency range is referred to as a "Segmented Grid".

```

Use Correction Data
System Error Correction Data: 01/19/11 16:27:56
900 MHz - 1 GHz: 50 Points in Segmented Grid, 10 MHz; Neg: On
Receiver Stop Attenuation Settings: b1: 0 dB b2: 0 dB b3: 0 dB
TOSM (Calibration for Ports 1, 2 and 3)
Power Correction Data
at Gen: 0 Hz - 0 Hz: 0 Points in Linear Grid, Gen Stop Att: 0 dB, Cal Power
at Rec: 0 Hz - 0 Hz: 0 Points in Linear Grid 01/19/11, 17:42:17
  
```

A subsequent source or receiver power calibration not only calibrates the source power and the receiver but is also used to adjust the normalization of the system error corrections in both power ranges. For this reason, the measurement steps must be performed in the following order:

1. Activate the frequency-converting (e.g. scalar mixer) mode.
2. Perform a full n-port calibration for all ports involved.
3. Perform a power calibration (for true differential ports, once per balanced port).
4. Activate true differential mode.
4. Connect the DUT in order to perform measurements.

Amplitude Imbalance Sweep

To ensure proper operation, differential devices need a pure differential stimulus signal. Unequal attenuation or loss in the conductors of the balanced input or output line leads to a phase or amplitude imbalance of the stimulus signal. If the device under test is linear, the effects of this imbalance can be calculated from the mixed-mode S-parameters without performing an additional measurement. For nonlinear devices, however, the effects may be unpredictable. Therefore, the option *True Differential Mode* incorporates the ability to generate differential and common mode signals with a physical amplitude or phase imbalance. Moreover, the imbalance can be swept over a user-defined range.



Characteristics of the sweep

The amplitude imbalance sweep is performed as follows:

- The amplitude imbalance is defined as $r \text{ dB} = 20 \log(|a_k/a_l|)$ dB, where a_k and a_l are the wave quantities of the physical ports with the higher and lower port numbers.
- The selected amplitude imbalance is applied to both differential and common mode signals. The

analyzer generates both stimulus modes according to what the measurement of the selected quantity requires.

- The powers of the two sources are swept symmetrically around the equilibrium state $|a_k| = |a_l|$, where $r \text{ dB} = 0 \text{ dB}$ (see also [Wave Quantities and Ratios in True Differential Mode](#)).

At least one logical port must be defined, and the true differential mode must be active to enable the amplitude imbalance sweep. Activating the sweep (*Channel – Sweep – Sweep Type: Amplitude Imbalance*) opens the following configuration dialog:



- *Logical Port* selects the swept logical port.
- *Compensate Imbalance of a Waves* selects the calculation method for S-parameters, ratios and derived quantities; see background information below.
- *CW Frequency* defines the frequency of all stimulus signals, which is constant over the entire sweep. This setting is identical with the CW frequency for power, time and CW mode sweeps.
- *Source Power at 0 dB* defines a constant power reference, corresponding to the channel power P_{ch} in the tables in section [Source Power in True Differential Mode](#). The swept power range (*Channel – Stimulus – Start, Channel – Stimulus – Stop*) of the involved single-ended sources is defined relative to the reference value. This setting is identical with the constant channel base power for frequency, time and CW mode sweeps.

The power range for the amplitude imbalance sweep is independent of the power range for power sweeps.



Compensate Imbalance of a Waves

Since the mixed-mode S-parameters of a linear balanced DUT depend only on the DUT itself, they will be independent of the amplitude or phase imbalance of the stimulus signal. So looking for example at S_{dd21} of a differential amplifier in phase imbalance sweep will not reveal the amplitude reduction of the differential output signal caused by unequal lengths of the balanced input line conductors. This length asymmetry corresponds to a phase imbalance increasing over frequency.

In order to see the effect of such a phase or amplitude imbalance, modified S-parameters are required. The modification is done in such a way that if e.g. the imbalance of port 1 is swept, the imbalance of the a wave of port 1 is compensated before the S-parameters are calculated. The effect of the compensation is a constant amplitude of the differential or common mode stimulus wave of port 1 over the imbalance sweep range. This reflects the situation of the user applying a stimulus signal of known nominal amplitude to the DUT, but getting at the output only the amplified differential contents in this signal, which depends on the imbalance. Usually, S-parameters of balanced devices measured with active imbalance compensation will exhibit a maximum or minimum at zero imbalance.

The imbalance compensation is not only performed for mixed-mode S-parameters, but also for the imbalance-swept a wave itself when it is selected as a measured quantity, as well as for ratios including that wave.

Remote control: [SENSe<Ch>:]SWEep:TYPE IAmplitude
 SOURce<Ch>:TDIF:IMBalance:AMPLitude:LPORT
 SOURce<Ch>:TDIF:IMBalance:AMPLitude:START
 SOURce<Ch>:TDIF:IMBalance:AMPLitude:STOP
 CALCulate<Ch>:TDIF:IMBalance:COMPensation[:STATe]

Phase Imbalance Sweep

The phase imbalance sweep is a special application of the true differential mode. The analyzer generates a balanced signal at one of its logical ports, however, the relative phase of the two signal components is varied according to the selected phase range. This variation may have an impact on the measured mixed-mode S-parameters if the DUT is operated in its nonlinear range.



Characteristics of the sweep

The phase imbalance sweep is performed as follows:

- The phase imbalance of the differential mode signal is defined as the difference in phase (in deg) of the wave quantities at the two physical ports of the swept logical port plus 180 deg: $\text{Imbalance} = \arg(a_k) - \arg(a_l) - 180 \text{ deg}$, where $k > l$.
- The phase imbalance of the common mode signal is defined as the difference in phase (in deg) of the wave quantities at the two physical ports of the swept logical port: $\text{Imbalance} = \arg(a_k) - \arg(a_l)$, where $k > l$.
- The selected phase imbalance is applied to the differential as well as to the common mode signal. The analyzer generates both stimulus modes according to what the measurement of the selected quantity requires.

At least one logical port must be defined, and the true differential mode must be active to enable the phase imbalance sweep. Activating the sweep (*Channel – Sweep – Sweep Type: Phase Imbalance*) opens the following configuration dialog:



- *Logical Port* selects the swept logical port.
- *Compensate Imbalance of a Waves* selects the calculation method for S-parameters, ratios and derived quantities; see [background information](#) in section *Amplitude Imbalance Sweep*.
- *CW Frequency* defines the frequency of all stimulus signals, which is constant over the entire sweep. This setting is identical with the CW frequency for power, time and CW mode sweeps.
- *Source Power* defines the constant power of the balanced source, corresponding to the channel power P_{ch} in the tables in section [Source Power in True Differential Mode](#). This setting is identical with the constant power for frequency, time and CW mode sweeps.

The range of relative phases for the phase imbalance sweep is set via *Channel – Stimulus – Start* and

Channel – Stimulus – Stop.

Remote control: [SENSe<Ch>:]SWEep:TYPE IPHase
 SOURce<Ch>:TDIF:IMBalance:PHASe:LPORT
 SOURce<Ch>:TDIF:IMBalance:PHASe:START
 SOURce<Ch>:TDIF:IMBalance:PHASe:STOP
 CALCulate<Ch>:TDIF:IMBalance:COMPensation[:STATe]

Defined Coherence Mode (for R&S ZVA and R&S ZVT)

With option R&S ZVA-K6, *True Differential Mode*, the vector network analyzer can also generate several continuous signals with specific relative amplitude and phase. Typical application examples are measurements on balanced DUTs or the supply of antenna arrays which are designed for a well-defined radiation pattern.

True differential mode and defined coherence mode cannot be active at the same time because they require a different source port configuration. Both modes require an analyzer with at least two independent internal sources, i.e. a minimum of 3 ports. Defined coherence mode is compatible with arbitrary single-ended or balanced port configurations.



On R&S ZVA67 and on R&S ZVA24/40 network analyzers with four ports and four generators (order nos. 1145.1110.28/48), all ports have independent internal sources. You can use defined coherence mode with an arbitrary combination of two source ports.

Defined coherence mode can be used for **frequency conversion** measurements: The two combined ports providing the coherent signal must be at the same frequency. The remaining analyzer ports may measure at a different frequency.

The source ports and the properties of the coherent signals are all defined in the [Defined Coherence Mode](#) dialog. After a system error correction, the coherent signals with the selected properties are available at the calibrated reference plane.




Defined Coherence mode relies on [Enhanced Wave Correction](#). A consistent system error correction is essential for accurate coherent waves at the reference planes. You should always perform a full n-port calibration (TOSM, UOSM or one of the Txx calibration types) of all physical ports involved and change the reference impedances, if they differ from the default settings. A subsequent source power calibration is recommended.

The system error correction applies to all a- and b-waves of the n calibrated ports, not only to the waves with a fixed amplitude and phase relation.

You can also use offset parameters in order to move the reference plane where the analyzer provides an accurate coherent signal.

Defined Coherence Mode Dialog


Enables the defined coherence mode for signals from different source ports and defines the signal properties.

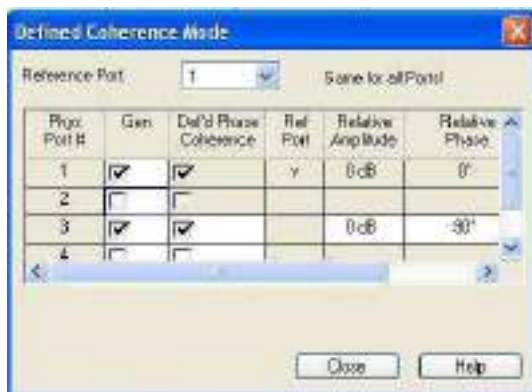


- *Reference Port* selects one of the physical analyzer ports as a reference port. The reference port is the source port for the reference signal; its properties are defined in the [Port Configuration](#) dialog. The amplitude and phase of all coherent signals are defined relative to the reference signal.
- *Gen* ensures a permanent signal; it is identical with the *Gen* setting in the [Source](#) section of the *Port Configuration* dialog. Coherent signals must be permanent. System error corrections must be performed with alternating source signals (*Gen* off).
- *Def'd Phase Coherence* defines the signals from the analyzer ports as coherent or non-coherent signals. For coherent signals, the specified amplitude and phase relation is maintained across the entire sweep. Non-coherent signals have an arbitrary relative phase. It is possible to select one signal per internal source as a coherent signal; see [Coupled Test Ports](#).
Examples: On a four port analyzer, ports 1 and 2 and ports 3 and 4 uses the same generator (coupled ports). If port 1 is the reference port, either port 3 or port 4 can be selected as the source port for the second, coherent signal.
- *Relative Amplitude* defines the amplitude of the coherent signals relative to the reference signal. The *Relative Amplitude* replaces the source power of the port (defined in the *Port Configuration* dialog) as long as *Def's Phase Coherence* is selected.
- *Relative Phase* defines the phase of the coherent signals relative to the phase of the reference signal; see below.

Relative phase examples

Suppose that Port 1 is the reference port and the coherent signal at Port 3 is defined with a relative phase setting of +90°. In the complex I/Q plane, the Port 3 signal precedes the Port 1 signal by 90°.

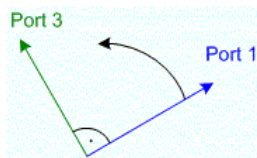

An oscilloscope shows the Port 3 and Port 1 signals as depicted below.

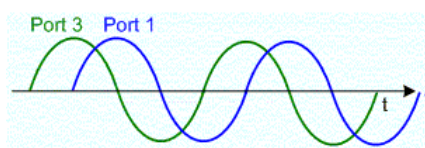

Remote control: `SOURce<Ch>:CMODE:CMODE:PORT<Pt>:AMPlitude`
`SOURce<Ch>:CMODE:CMODE:PORT<Pt>:PHASe`
`SOURce<Ch>:CMODE:PORT<Pt>[:STATe]`
`SOURce<Ch>:CMODE:CMODE:RPORT`

Alternating Sweeps

Activates or deactivates the operating mode where the analyzer performs only one partial measurement per sweep.

- In normal sweep mode (*Alternating Sweeps* off), the analyzer completes the necessary sequence of partial measurements at each sweep point and obtains the result (measurement point) before proceeding to the next sweep point.
- *Alternating Sweeps* reverses the order of partial measurements and sweeps: A partial measurement is performed at all sweep points (partial sweep) before the hardware settings are changed and the next partial measurement is carried out in an additional sweep.

The *Alternating Sweeps* mode is also valid during a system error correction.



Advantages of both sweep modes, alternative settings

If the settling time between adjacent frequency points is smaller than the settling time between the partial measurements, then the *Alternating Sweeps* measurement is faster than a normal sweep so that a smaller sweep times can be set. On the other hand, an *Alternating Sweeps* measurement provides a result only during the last partial sweep.



Use the *Alternating Sweeps* mode to increase the accuracy of measurements on DUTs with long level settling times (e.g. quartzes, SAW filters). To measure DUTs with short settling times or obtain a trace from the beginning of the sweep, deactivate the *Alternating Sweeps* mode.

As an alternative to activating the *Alternating Sweeps* mode, it is possible to insert a *Meas. Delay* before each partial measurement and thus improve the accuracy. The delay slows down the measurement.



Relation to trigger settings

In triggered measurements, *Alternate* has no effect if the *triggered measurement sequence* is identical to a single sweep point. The following table shows how the analyzer performs a sweep comprising m sweep points, assuming that each of them requires n partial measurements.

- **Sweep, Alternate On**
Trigger event starts n partial sweeps over all sweep points. For a 2-port transmission measurement comprising two partial measurements (S_{12} and S_{21}):

Sweep, Alternate Off

Trigger event starts m complete measurements at consecutive sweep points. For a 2-port transmission measurement comprising two partial measurements (S_{12} and S_{21}):

- **Sweep Segment, Alternate On**

Trigger event starts n partial sweeps over the next segment.

Sweep Segment, Alternate Off

Trigger event starts complete measurements at all consecutive sweep points in the segment.

- **Point, Alternate On**

All partial measurements of each sweep point are carried out one after another.

Point, Alternate Off

Same as *Alternate On*: All partial measurements of each sweep point are carried out one after another.

- **Partial Measurement, Alternate On**

Each partial measurement is carried out for all sweep points. Source port specific [trigger delays](#) are supported.

Partial Measurement, Alternate Off

All partial measurements of each sweep point are carried out one after another. Source port specific trigger delays are supported.



On R&S ZVA67 analyzers, the alternating sweep mode speeds up all measurements which require several partial measurements.

Remote control: `[SENSe<Ch>:]COUPle ALL | NONE`

Pulse Generator (for R&S ZVA/ZVT)

Turns the pulse generator on or off (with option R&S ZVA-K27). The pulse generator provides two independent control signals at the [CASCADE](#) output connector on the rear panel of the network analyzer. The signals can be used to control a R&S ZVAX24 or R&S ZVAX-TRM Extension Unit equipped with pulse modulator option.

The pulse generator signals are configured using the [Define Pulse Generator](#) dialog.




Pulse generator signals

Pulse generator signals consist of rectangular pulses which are repeated periodically. The signals serve as modulation signals for pulse modulators: During the high signal periods, the pulse modulator generates an RF signal, during the low signal periods, the RF signal is switched off. The R&S ZVA provides two different pulsed signals:

- The *Gen 1* signal (the actual "pulse generator signal") consists of a single pulse or a pulse train with selectable period. A pulse train is a series of pulses with individual timing and width. The pulse generator signal is not used internally.
- The *Gen 2* signal ("sync signal") is a single pulse which is repeated after the pulse period. The sync signal can be used as a trigger signal for pulsed measurements but also available as a modulation signal. In *Chopped Pulse Profile* mode, it is used chop the measured RF signal into short measurement intervals.

The pulse period of the pulse generator and sync signals are identical. An example for a pulse generator signal consisting of a pulse train (*Gen1*) and a sync signal (*Gen 2*) is shown below.

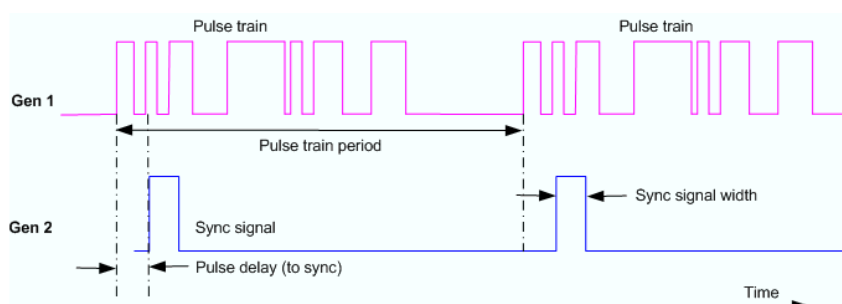

If not specified otherwise, the pulse generator settings are channel-specific.

A measurement example for pulse generators and pulsed measurements is reported in the Getting Started guide for the extension unit R&S ZVAX24, to be found on the R&S ZVA/B/T documentation CD-ROM.



To perform measurements on pulsed RF signals controlled by the pulse generator, the [Pulse Gen](#) trigger must be used. The trigger settings also control which of the trigger signals provides the trigger event.

Remote control: `[SENSe<Ch>:]PULSe:GENerator<gen_no>[:STATe]`

Define Pulse Generator

Defines the properties of the pulse generator signals.



- *Pulse Type* selects the shape of the pulse modulator (*Gen 1*) signal. For each pulse type, a subset of *Pulse Parameters* is available. A *Single Pulse* is a rectangular pulse with definite *Pulse Width* that is repeated after the *Single Pulse Period*. A *Pulse Train* is a series of single pulses; see [Pulse Generator Signals](#). Constant signals (*Constant High* and *Constant Low*) need no further specification.
When a *Constant High* or *Constant Low* signal is selected, the pulse type of the sync signal is set to *Constant High* or *Constant Low*, too. The previous pulse type of the sync signal is restored when the pulse generator signal is reset to *Single Pulse* or *Pulse Train*.
- The controls in the *Pulse Parameters* section specify the properties of *Single Pulse* signals and *Pulse Train* signals (*Gen 1*). It is possible to invert the polarity of the pulse generator signal, i.e. to exchange the high signal and low signal periods. The three buttons in the panel open configuration dialogs for the [Pulse Train](#), the [Sync Generator \(Gen 2\)](#), and the [chopped pulse profile](#) mode.
- The section *Settings valid for* defines the scope of the pulse generator settings. By default, all settings are valid for the *Active Channel*. If *All Channels (Continuous Mode)* is selected, the pulse generator settings of the active channel are applied to all channels. This ensures continuous pulse generator signals at the CASCADE output of the network analyzer when another channel is selected. Use *All Channels (Continuous Mode)* mode for measurement on DUTs which could be damaged by variable pulse generator settings.

Remote control: `[SENSe<Ch>:] PULSe:GENerator1:TYPE`
`[SENSe<Ch>:] PULSe:GENerator1:WIDTh`
`[SENSe<Ch>:] PULSe:GENerator1:PERiod`
`[SENSe<Ch>:] PULSe:GENerator1:TRaIn:PERiod`
`[SENSe<Ch>:] PULSe:GENerator1:POLarity`
`[SENSe<Ch>:] PULSe:GENerator1:MODE`

Define Pulse Train

Defines a pulse train for the pulse modulator (*Gen 1*) signal on a segment-by-segment basis. This dialog


is called from the [Define Pulse Generator](#) dialog.



Defining pulse trains with minimum effort

Choose one of the following methods to efficiently create and handle pulse train segments:

- To configure a pulse train with only a few segments, use *Add Segment* and edit each range in the table individually.
- Use the *Auto Arrange* button to sort the segments in ascending order of the *Start High Signal*.
- Save your pulse train definition to a file so you can re-use or modify it in later sessions (*Save Pulse Train...*, *Recall Pulse Train...*).

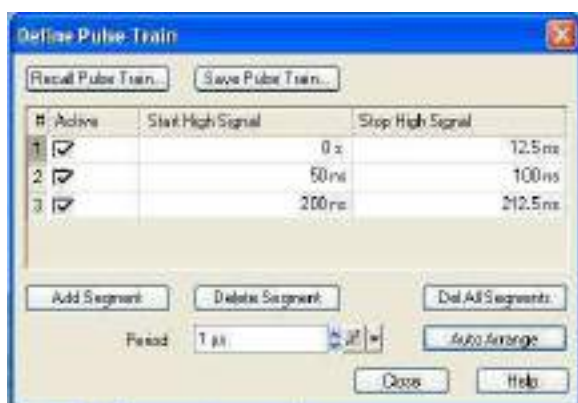

The *Define Pulse Train* dialog contains a table to edit the individual pulse segments; see below. The buttons below the table extend, shorten, or re-order the segment list.

- *Add Segment* adds a new segment to the list, assigning a Start High Signal value of 0 s, a Stop High Signal value of 12.5 ns. If Auto Arrange is active the new segment is inserted at the beginning of the list. The analyzer places no restriction on the number of ranges assigned to each trace.
- *Delete Segment* removes the selected segment from the list.
- *Del All Segments* clears the entire segment list so it is possible to define or load a new pulse train definition.
- *Auto Arrange* sorts the segments in ascending order of the Start High Signal.

The buttons above the table are used to import and export pulse train data. Pulse train files are ASCII files with the default extension *.train and a special [file format](#).

- *Recall Pulse Train...* calls up an [Open File](#) dialog to load a pulse train definition from a file.
- *Save Pulse Train...* calls up a [Save As...](#) dialog to store the current pulse train definition to a pulse train file.

Period denotes the duration of the entire pulse train. The period of the sync signal is adjusted to the pulse train period as long as the pulse train signal type is active.



Columns in the segment table

The table contains an automatically assigned current number for each segment/pulse plus the following editable columns:

- *Active* indicates whether the segment is active (checkbox selected) or inactive. Clearing the checkbox does not delete the segment but suppresses the pulse in the generator signal.

- *Start High Signal* is the start time of the segment.
- *Stop High Signal* is the stop time of the segment.

The minimum pulse width (the difference *Stop High Signal* – *Start High Signal*) is 12.5 ns.

Segments/pulses may overlap, however, the largest *Stop High Signal* value must not exceed the pulse train *Period*.

Remote control: `[SENSe<Ch>:]PULSe:GENerator1:TRain:DATA`
`[SENSe<Ch>:]PULSe:GENerator1:TRain:SEGment<Seg>[:STATe]`
`[SENSe<Ch>:]PULSe:GENerator1:TRain:SEGment<Seg>:STIMulus:START`
`[SENSe<Ch>:]PULSe:GENerator1:TRain:SEGment<Seg>:STIMulus:STOP`
`[SENSe<Ch>:]PULSe:GENerator1:TRain:SEGment<Seg>:COUNT?`
`[SENSe<Ch>:]PULSe:GENerator1:TRain:PERiod`
`[SENSe<Ch>:]PULSe:GENerator1:TRain:DElete:ALL`
`MMEMemory:LOAD:PTRain`
`MMEMemory:STORe:PTRain`

Define Sync Generator

Defines the properties of the sync signal (*Gen 2*). This dialog is called from the [Define Pulse Generator](#) dialog.



The sync signal is either a single pulse signal with definite pulse width (*Sync Width*), following the pulse generator signal by a specified *Sync Delay (to Pulse)*, or a constant signal. Constant signals (*Constant High* and *Constant Low*) need no further specification. It is possible to invert the polarity of the sync signal, i.e. to exchange the high signal and low signal periods.

While the pulse generator signal type is *Constant High* or *Constant Low*, the sync generator signal type is *Constant High* or *Constant Low*, too.

See also background information on [Pulse Generator Signals](#).



Timing Restrictions

- If the *Sync Width* is greater than or equal to the *Pulse (Train) Period*, a constant sync signal is generated.
- Otherwise, in case the *Sync Delay* is set to a negative value or to a value greater than the *Pulse (Train) Period* T , it is internally shifted by multiples of T so that the resulting value is in the interval $[0, T)$.
- If (after this operation) the sync pulse overlaps with the pulse (train), the time origin is shifted to the rising edge of the first sync pulse.

Remote control: [SENSe<Ch>:]PULSe:GENerator2:TYPE
 [SENSe<Ch>:]PULSe:GENerator2:WIDTh
 [SENSe<Ch>:]PULSe:GENerator1:DELaY
 [SENSe<Ch>:]PULSe:GENerator2:POLarity

Adjust Settings for Chopped Pulse Profile

Defines the time resolution for the chopped pulse profile mode and activates the mode. This dialog is called from the [Define Pulse Generator](#) dialog.




Chopped pulse profile mode

Chopped pulsed profile mode is a means of achieving extremely small time resolutions for measurements on strictly periodic signals. Time resolution is the critical parameter for measurements on pulsed signals with very short pulse widths. In a normal time sweep at the default IF bandwidth of 10 kHz, the time resolution (i.e. the measurement time for each sweep point) is in the 100 µs range. In chopped pulse profile mode, the analyzer achieves time resolutions down to 12.5 ns.

A power calibration is generally not possible, however, the measurement provides accurate relative powers at consecutive sweep points. Hence the measurement result shows the profile of the measured RF signal.

Chopped pulse profile results are measured as follows:

1. The signal is chopped into k measurement intervals of equal width. The interval width is equal to the time resolution. For each interval, the analyzer acquires measurement results in n consecutive pulse periods. Due to the periodicity of the signal, the amplitude in each of the measurement intervals is equal. The results from the individual intervals are integrated; the effective measurement time per interval is thus n times the interval length. With a suitable selection of the factor n , this method provides accurate results at common IF bandwidths.

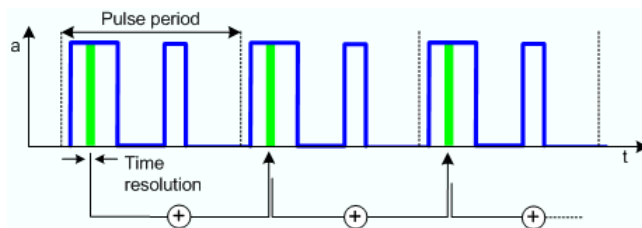

2. After integrating the n results for a given measurement interval, the analyzer steps to the next interval in order to repeat the procedure above. The total measurement for k measurement intervals covers $k \cdot n$ pulse periods. The measurement result is a time-domain trace consisting of k integrated measurement points.

The analyzer automatically selects a *CW Time sweep* mode and adjusts a number of data acquisition and pulse generator settings when the chopped pulse profile mode is activated:

- The width of the sync signal pulse (*Gen 1*) is set equal to the time resolution. The sync signal controls the width and timing of the measurement intervals in chopped pulse profile mode. After each sequence of n measurements, the sync signal is delayed by one pulse width so that the next measurement interval is reached.
- The period of the pulse generator signal (*Single Pulse Period* or *Pulse Train Period*, depending on the selected *Pulse Type*) is increased to the next integer multiple of the time resolution.
- The number of sweep points k is calculated as the ratio of the extended pulse period to the time

resolution.

- The IF bandwidth is set to 1 over ten times the extended pulse period, and a high selectivity filter is used.



- *Time Resolution* selects the distance between two CW time sweep points in the chopped pulse profile measurement; see background information above. The width of the sync signal is always equal to the time resolution. Changing one value also affects the other.
- *Activate* enables the chopped pulse profile mode and adjusts the channel settings as described above.
- *Off* disables the chopped pulse profile mode. All other settings are left unchanged.



In remote control it is possible to skip measurement intervals (and thus accelerate the measurement, at the expense of the number of sweep points) by increasing the *Delay Increment* parameter.

Remote control: `[SENSe<Ch>:]PULSe:GENerator2:WIDTh`
`[SENSe<Ch>:]PULSe:GENerator<gen_no>:CPPRoFile`
`[SENSe<Ch>:]PULSe:GENerator<gen_no>:DINCrement`

File Format for Pulse Train Definitions

The analyzer uses a simple ASCII format to export **pulse train** definitions. By default, the pulse train file has the extension *.train and is stored in the directory shown in the *Save Pulse Train* and *Recall Pulse Train* dialogs. The file starts with a preamble containing the channel, the *Pulse Train Period*, and the *Pulse Delay (to Sync)* value. The following lines contain the entries of all editable columns of the list.



Example of a pulse train definition file

The pulse train definition:

#	Active	Start High Signal	Stop High Signal
1	☒	0 s	12.5 ns
2	☒	50 ns	62.5 ns
3	☒	100 ns	112.5 ns


is described by the pulse train file:


```
# version 1.00
#
# Channel 1
# Pulse Train Period: 5.000000000000E-005 s
# Pulse Delay (to Sync): 0.000000000000E+000 s
# Active: Start High Signal[s], Stop High Signal[s],
true,0.000000000000E+000,1.250000000000E-005,
true,5.000000000000E-005,6.250000000000E-005,
true,1.000000000000E-007,1.125000000000E-007,
```

Remote control: [MMEMory:LOAD:PTRain](#)
[MMEMory:STORe:PTRain](#)

Spurious Avoidance

The *Spurious Avoidance* submenu defines whether the analyzer measures with a local oscillator frequency LO below or above the RF input frequency.

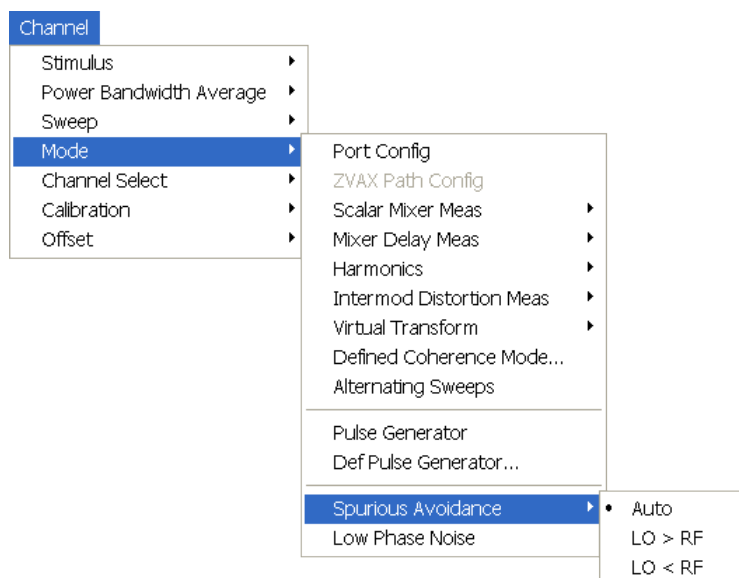

This feature can be used to eliminate known spurious components in the input signal that can distort the measurement, especially in the low frequency range.

- In *Auto* mode, the analyzer auto-selects the local oscillator frequency, depending on the receiver (RF) frequency and the test port. This mode systematically avoids known spurious signals provided that no frequency conversion occurs in the test setup.
- *LO > RF* means that the LO frequency is always above the measured RF frequency. This mode is appropriate for avoiding single, known spurious signals.
- *LO < RF* means that the LO frequency is always below the measured RF frequency. This mode is appropriate for avoiding single, known spurious signals.




In the presence of several spurious signals, setting the *Spurious Avoidance* parameter globally may not be sufficient. To improve the result, perform a *Segmented Frequency* sweep and assign independent LO frequencies to the individual [sweep segments](#).




Application example

Consider the following test setup with strongly reflecting DUT (e.g. a bandpass in its stop band) that is

measured in transmission. a_1 is generated at a frequency RF. The reflected wave b_1 falls into the receiver mixer of the analyzer port 1, where a small fraction of the mixer product $RF + 2*IF$ can be reflected back towards the DUT. If this spurious wave a'_1 passes the DUT, then it is received as b'_2 at port 2, together with the wanted signal b_2 .

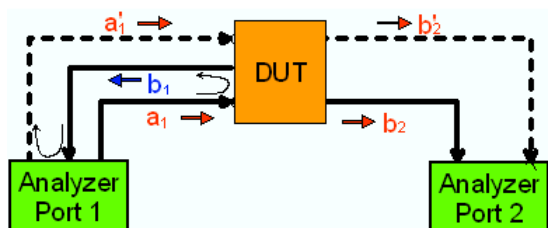

$LO > RF$ implies that $LO = RF + IF$. The mixer at port 2 converts both the wanted signal b_2 and the spurious signal b'_2 which is at the frequency $RF' = IF + LO$, to the same IF frequency. The response of an ideal, infinitely steep bandpass filter with a pass band between B^- and B^+ looks as follows:

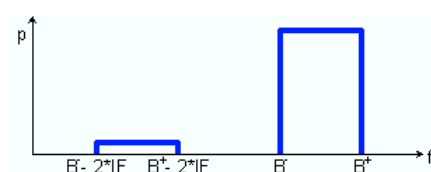

For a wide bandpass, the spurious response flattens the filter edges.



The spurious signal can be eliminated by dividing the sweep range into two segments with different LO settings:

- In the low-frequency segment, ranging up to the center frequency of the bandpass filter, the frequency of the local oscillator is set to $LO < RF$. This ensures that the spurious signal b'_2 is not measured at port 2.
- In the high-frequency segment, starting at the center frequency of the bandpass filter, the frequency of the local oscillator is set to $LO > RF$. If the center frequency is larger than $B^+ - 2*IF$, then there is no distortion from b'_2 .

Remote control: [SENSe<Ch>:]FREQuency:SBAND POSitive | NEGative | AUTO

Low Phase Noise

Reduces the phase noise of the source signals. The measurement speed is slightly reduced.



The "Low Phase Noise" setting is only available for older synthesizer generations with *coupled test ports*.

The latest synthesizer generations of ZVA67 and of ZVA24/40 with 4 ports and 4 sources do not offer this setting.

Remote control: [SENSe<Ch>:]FREQuency<1>:LPNoise ON | OFF

Extension Unit R&S ZVAX24 (for R&S ZVA)


The extension unit R&S ZVAX24 is an accessory for vector network analyzers R&S ZVA24. The extension unit can accommodate a variety of hardware options which extend the measurement functionality of the network analyzer. The table below lists all options with possible applications. For an introduction to the application unit and an application example refer to the Getting Started guide, stock no. 1312.7985.62.

Option	Type	Application
Low Noise Preamplifier	R&S ZVAX-B203	Amplifies the input signal at port 2 of the network analyzer. This reduces the noise figure of the NWA receiver and thus improves the accuracy of a noise figure measurement with option R&S ZVAB-K30.
Port 2 Receiver Monitor Output	R&S ZVAX-B210	The measured signal at port 2 is fed to the MONITOR connector on the R&S ZVAX24 front panel. An external device (e.g. a spectrum analyzer) can be connected to monitor the signal.
Combiner	R&S ZVAX-B211	Combines the source signals from ports 1 and 3. With different port frequencies, the combiner provides a two-tone signal, e.g. for intermodulation measurements.
Harmonic Filter Generator Port 1	R&S ZVAX-B251	Provides an RF source signal with excellent harmonics suppression at port 1. To be used for accurate harmonics measurements.
Harmonic Filter Receiver Port 2	R&S ZVAX-B252	Suppresses the fundamental wave in the received signal at port 3 and therefore prevents additional harmonics induced in the NWA receiver. To be used for highly accurate harmonics measurements.
Harmonic Filter Generator Port 3	R&S ZVAX-B253	Provides an RF source signal with excellent harmonics suppression at port 3. Harmonic filters for two independent source signals are used for differential measurements and mixer measurements which require RF and LO signals with a high spectral purity.
Pulse Modulator Generator Port 1	R&S ZVAX-B271	Provides pulsed signals at port 1. To be used for pulsed measurements on asymmetric DUTs (e.g. power amplifiers), where the reverse stimulus signal can be continuous.
Pulse Modulator Receiver Port 2	R&S ZVAX-B272	Modifies the pulsed received wave at port 3. Used to protect the NWA receiver from excess input levels (e.g. in T/R module measurements).
Pulse Modulator Generator Port 3	R&S ZVAX-B273	Provides pulsed signals at port 3. Pulsed signals at two independent ports are used for pulsed measurements on DUTs which require pulsed stimulus signals in forward and reverse direction (e.g. symmetric DUTs, T/R modules for phased-array pulse radar).
High Power Coupler Port 1	R&S ZVAX-B291	Extends the source power range at port 1 to values up to +43 dBm. Used for measurements on DUTs that require high stimulus powers
High Power Coupler Port 2	R&S ZVAX-B292	Extends the receiver power range at port 2 to values up to +43 dBm. Used for measurements on DUTs that provide high output powers.

ZVAX Path Configuration (for R&S ZVA)

The *ZVAX Path Configuration* dialog gives an overview of the RF signal paths in the Extension Unit R&S ZVAX24 and the installed hardware modules. It also loops the individual modules into the signal paths.

The dialog for a fully-equipped Extension Unit is shown below. If one of the harmonic filter, pulse modulator, preamplifier or combiner options is not fitted, it is replaced by a straight line (through path).

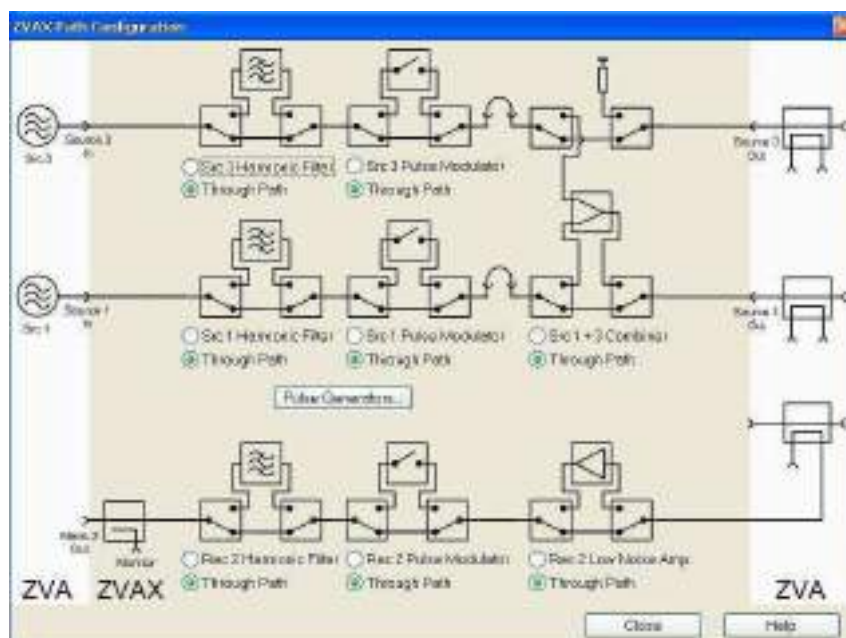

- The upper radio buttons loop a module into the signal path.
- The lower radio buttons cause the modules to be bypassed.
- *Pulse Generators...* opens a dialog to configure the pulse generator signals controlling the pulse modulators.


The Extension Unit provides three signal paths:

- **Source path for port 3**

The source signal from the analyzer is fed to the SOURCE PORT 3 IN connector of the Extension Unit. The modified source signal is looped back to the analyzer so that it is available at the test port. The internal R&S ZVAX signal path (green rectangle in the figure below) may contain the following modules:

- A harmonic filter for very accurate frequency-converting measurements, in particular harmonics measurements
- A pulse modulator to generate a pulsed source signal
- An external amplifier connected to the PORT 3 SOURCE IN / OUT connectors on the rear panel of the Extension Unit. The amplifier boosts the source signal after the pulse modulator stage
- A combiner for the two source signals from the analyzer ports no. 1 and 3. After connecting the SOURCE IN / OUT connectors of both ports, the combined source signal is available at analyzer port no. 1.

All modules are optional. The "empty" source path is a simple through connection between the SOURCE PORT 3 IN and SOURCE PORT 3 OUT connectors of the Extension Unit.

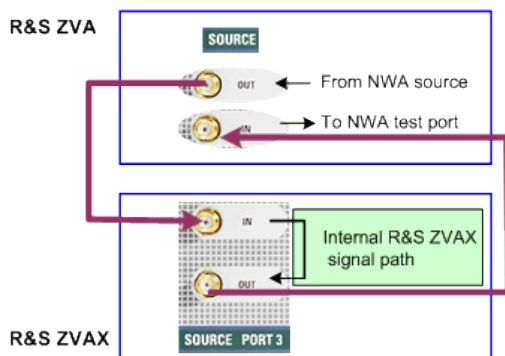

- **Source path for port 1**


The source path for port 1 is analogous to the source path for port 3 described above.

- **Receiver path for port 2**

The received signal from the analyzer test port is fed to the MEAS PORT 2 IN connector of the Extension Unit. The modified received signal is looped back to the analyzer and fed to the receiver. The internal R&S ZVAX signal path (green rectangle in the figure below) may contain the following modules:

- A low-noise preamplifier to amplify the signal and reduce the noise figure at the receiver, in particular for accurate noise figure measurements
- A pulse modulator to generate a pulsed source signal
- A harmonic filter for very accurate frequency-converting measurements, in particular harmonics measurements
- An external spectrum analyzer connected to the PORT 2 MONITOR connector of the Extension Unit, providing additional insight into the properties of the modified signal

Each of the modules above may be bypassed or missing. The "empty" source path is a simple through connection between the MEAS PORT 2 IN and MEAS PORT 2 OUT connectors of the Extension Unit.

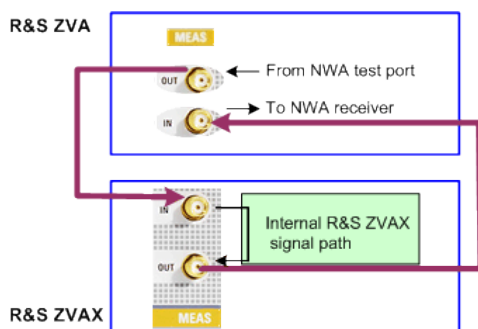


The external connectors are modified if a *High Power Coupler* is fitted at port 1 or port 2 of the Extension Unit. Refer to the R&S ZVAX operating manual for details. Please observe the safety instructions in the R&S ZVAX operating manual.

Remote control: `[SENSe<Ch>]:EUNit:COMBiner[:STATe]`
`[SENSe<Ch>]:EUNit:HFILter<Path>[:STATe]`
`[SENSe<Ch>]:EUNit:PMODulator<Path>[:STATe]`
`[SENSe<Ch>]:EUNit:LNAmplifier[:STATe]`

Pulse Generators

Defines the source and the output of the pulse generator signals and assigns pulse generator signals to the pulse modulators of the Extension Unit R&S ZVAX24.

The *Pulse Generators* dialog is opened from the *ZVAX Path Configuration* dialog. It provides three panels:

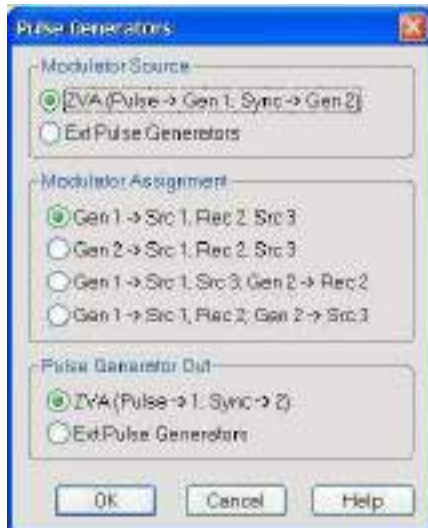

- *Modulator Source* selects the R&S ZVA or an external pulse generator as a source for the pulse generator signals. To use the R&S ZVA pulse generator signal, connect the CASCADE IN connector on the rear panel of the Extension Unit to the **CASCADE** connector on the rear panel of the R&S ZVA using the RJ-45 network cable supplied with the Extension Unit. The two pulse generator signals are configured in the *Channel – Mode – Define Pulse Generator* dialog. To use the signals of an external pulse generator, connect the external generator to the EXT PULSE GENERATOR IN connectors on the rear panel of the Extension Unit. Both modulator source signals may be connected simultaneously; see *Pulse Generator Out*.
- *Modulator Assignment* selects the pulse generator signal for each of the three pulse modulators Src1, Rec 2, Src 3; see *ZVAX Path Configuration* dialog. It is possible to use a single pulse generator signal for all three pulse modulators, or use *Gen 1* for two pulse modulators, *Gen 2* for the third pulse modulator.
- *Pulse Generator Out* selects the pulse generator signal type which is fed to the PULSE GENERATOR OUT connectors on the rear panel of the Extension Unit. The selection is independent of the *Modulator Source* setting. If *ZVA (Pulse ->1; Sync ->2)* is selected, the input signals from the CASCADE IN connector are looped through. Otherwise, the signals from EXT PULSE GENERATOR IN are used.
The PULSE GENERATOR OUT signal can be used to control or synchronize additional external devices. If *ZVA (Pulse ->1; Sync ->2)* is selected, it is possible to control an external pulse generator by means of the R&S ZVA pulse generator signals. The output connectors are also compatible with external pulse generators with a 50 Ω load impedance.


Remote control: `[SENSe<Ch>]:EUNit:PGENerator:INPut:EXTernal`
`[SENSe<Ch>]:EUNit:PGENerator:ASSignment`
`[SENSe<Ch>]:EUNit:PGENerator:OUTPut:EXTernal`

Extension Unit R&S ZVAX-TRM

The R&S ZVAX-TRM is a configurable extension unit for the R&S ZVA and R&S ZVT families of vector network analyzers, enabling enhanced measurements with high signal power, pulsed stimuli, two-tone stimuli or a combination thereof. The focus is on performing measurements on active devices such as T/R modules, receivers or output amplifiers without the need to reconnect the DUT ("single connection measurement"). The extension unit is fully controlled by the analyzer firmware (V3.30 or higher); the management connection is established via USB.

This documentation gives a rough overview of the extension unit and describes the operation from the analyzer firmware. For a general introduction to the extension unit including setup instructions and an overview of the available models and options refer to the "R&S ZVAX-TRM User Manual", stock no. 1325.1268.02, also available for [download](#) in the product section of the R&S web site.

The figure below illustrates the RF connections between the NWA and the extension unit: Connect the SOURCE/REF/MEAS **OUT** connectors in the upper part of extension unit's front panel to the corresponding **IN direct access connectors** of the NWA, and vice versa.

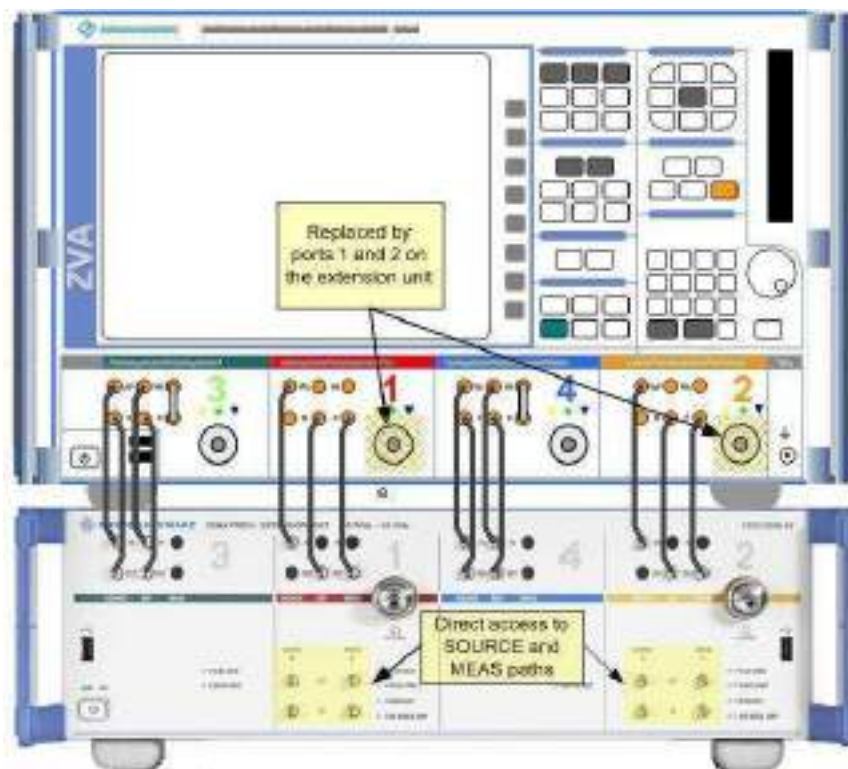


To establish the management link, connect the USB FROM NWA port, located at the back panel of the R&S ZVAX-TRM, to one of the USB ports (on the rear panel) of the analyzer. The required "USB type A to USB type B" cable is delivered with the extension unit.

To perform pulsed measurements with the [pulse generator](#) of the R&S ZVA/ZVT controlling the pulse modulator(s) of the extension unit, connect the CASCADE OUT of the analyzer to the CASCADE IN located on the back panel of the R&S ZVAX-TRM; the required RJ45 cable is delivered with the extension unit.



The block diagram below shows a R&S ZVAX-TRM equipped with all available options. It also illustrates the possible SOURCE, REF and MEAS signal paths, resulting from the available options and the state of the transfer switches related to a particular building block.

By means of the transfer switches, which are part of each building block, the respective component can be looped into the RF path or simply bypassed. This corresponds to activating/deactivating the corresponding module in the [ZVAX-TRM Configuration](#) dialog.

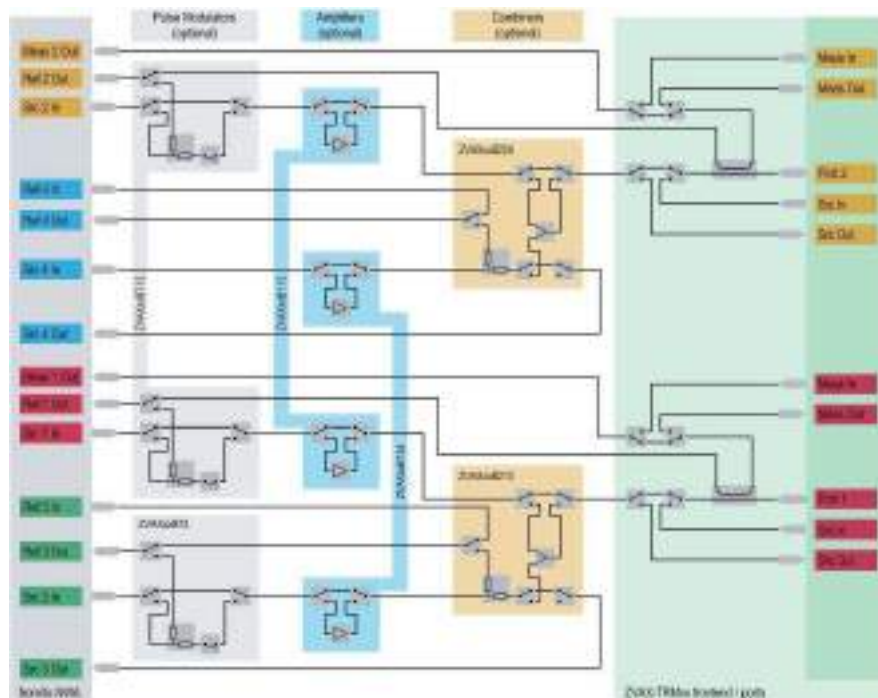

ZVAX-TRM Configuration


The *ZVAX-TRM Configuration* dialog comprises four tabs, providing access to the RF path configuration of the [R&S ZVAX-TRM](#) and to frequently used parameters of related measurements:

- [RF Path](#)
- [Pulse Generators](#)
- [Pulse Modulators](#)
- [Trigger](#)

Path

The *Path* tab allows to set up the channel specific RF path configuration of the extension unit.



The picture below shows a R&S ZVAX-TRM equipped with all available options. Modules drawn in black are looped into the signal path, while modules drawn in grey are bypassed.

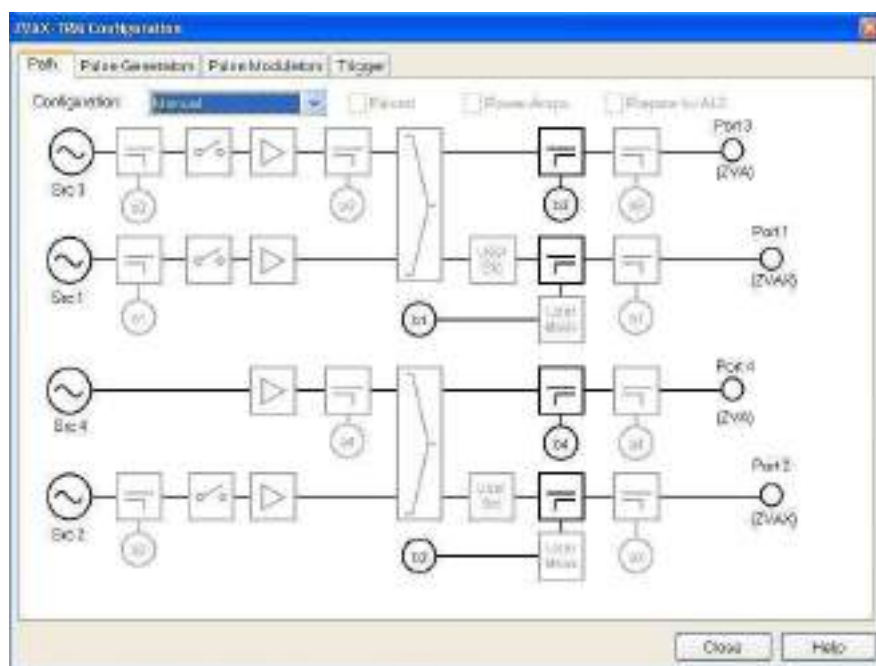

Building Blocks


The following table presents the GUI representation of the available [building blocks](#).

Graphical Representation	Name	Remarks
	Pulse modulator on source path $i=1,2,3$ with a-wave (REF signal) access	The a-wave access allows to use the unpulsed CW signal as the REF signal. It can only be used if the pulse modulator is looped into the signal path.
	Power amplifier	-/-
	Combiner for source paths 1 and 3 (source paths 2 and 4), output to port 1 (port 2) and with a-wave access to path 2 (path 4)	The a-wave access allows to access the combiner input from path 3 (path 4). It can be used irrespective of whether the combiner is looped into the signal path or not.

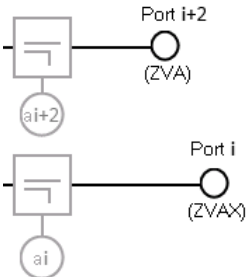	User access to source and measurement path on the extension unit (RF path i=1,2) and b-wave (MEAS signal) access	Direct access to the source and measurement paths via SOURCE IN/OUT and MEAS IN/OUT connectors in the lower part or the front panel . The b-waves are accessed at the high-power couplers of the extension unit.
	b-wave access for RF path i=3,4	The b-waves for RF paths 3 and 4 are accessed at the couplers of the analyzer; the MEAS path does not traverse the extension unit.
	Physical RF ports with a-wave access at the corresponding directional coupler	Ports 1 and 2 are located on the extension unit and equipped with high-power couplers. Ports 3 and 4 are located on the analyzer.

For each path, only one a-wave access can be active at a time. b-wave access is fixed for all paths (cannot be switched). If an optional module (pulse modulator, power amplifier, combiner) is not available, its building block is replaced by a straight horizontal line (through path).

Setting up the RF path configuration means defining which modules are looped into the signal paths and which ones are bypassed. You can select a predefined configuration, suitable for a particular measurement task, or choose the manual (=free) configuration mode.

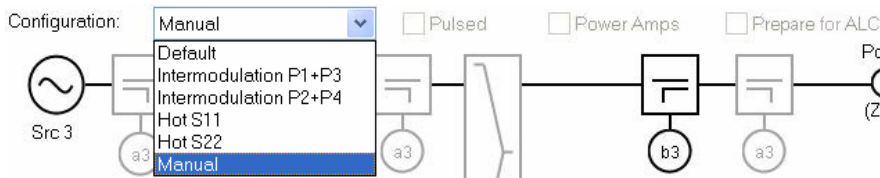

The settings in the Path tab only set up the RF paths of the R&S ZVAX-TRM. Even if the selected Configuration is targeting a particular measurement, the measurement itself must be configured as usual. There is no automatic configuration of the related measurement.

Depending on the selected *Configuration*, some of the configuration options *Pulsed*, *Power Amp* and *Prepare for ALC* may be selected in addition.

- **Default:** all components are set to their PRESET configuration (by default all optional modules and user paths are bypassed).
Config. options: -
- **Intermodulation P1+P3 (P2+P4):** configuration suitable for intermodulation measurement with the DUT connected to ports 1 and 2 on the extension unit and the two-tone signal at port 1 (port 2) combined from R&S ZVA ports 1 and 3 (2 and 4).
This configuration can also be used for [Mixer Delay Measurements](#).
Config. options: *Pulsed*, *Power Amp*, *Prepare for ALC*.



In order to use ALC, in the [Define Intermodulation Distortion Meas](#) wizard set Two Tone Output to Ext Dev.

- **Hot S parameter:** *Hot S22* is a measurement on 2-port DUTs, typically power amplifiers. At the DUT's "out port" 2 reflection *S22* is measured, while at the same time the DUT is stimulated at its "in port" 1. Because the stimulus frequencies at ports 2 and 1 must be different (which is not possible for analyzers with only two independent sources), ports 1 and 3 are combined in this configuration.

The frequencies for ports 1 and 2 must be set in the [Port Configuration](#) dialog.

For *Hot S11* the same logic applies, but with exchanged port numbers.

Config. options: *Power Amp*



Note that the input power at the analyzer must not exceed 27 dBm; excessive input power - up to the damage level of 43 dBm at the extension unit - must be compensated by adequate attenuators looped into the User Src and User Meas path extensions (at least 16 dB if an input level of +43 dBm is actually possible). In addition, the compression level of the analyzer's receivers has to be taken into account (see the data sheet for details).


- **Manual:** Free activation/deactivation of all modules (pulse modulators, power amplifiers, combiners, user paths).
Config. options: -
- **Pulsed (config. option):** enables the pulsed measurement mode (activates the pulse modulators) for the selected configuration
- **Power Amps (config. option):** enables the power amplifiers for the selected configuration
- **Prepare for ALC (config. option):** prepares for ALC by selecting the a-wave access before the pulse modulator for the selected configuration. Only takes effect, if *Pulsed* is also selected.
To configure and enable ALC, go to the [ALC Config](#) dialog.

To change a module's state, simply click its graphical representation. This will automatically activate the *Manual* configuration mode.

Remote control: `[SENSe<Ch>:]TEUNit:AMONitor`
`[SENSe<Ch>:]TEUNit:COMBiner[:STATe]`
`[SENSe<Ch>:]TEUNit:PAMPlifier[:STATe]`
`[SENSe<Ch>:]TEUNit:PMODulator[:STATe]`
`[SENSe<Ch>:]TEUNit:UMEas[:STATe]`
`[SENSe<Ch>:]TEUNit:USource[:STATe]`

Pulse Generators tab

The *Pulse Generators* tab allows to set up the pulse generators (same as Channel > Mode > Pulse Generator) and presents the settings of the [Define Pulse Generator](#) and [Define Sync Generator](#) dialogs, which configure the pulse and sync generator of the analyzer. The *Trigger Delay* setting is mirrored from the [Trigger Settings](#) dialog.

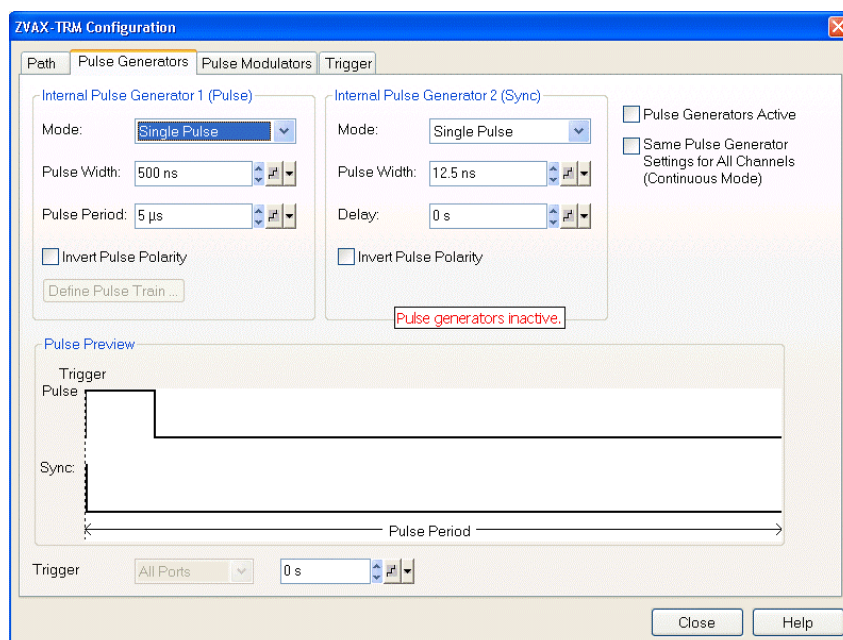


The *Pulse Preview* section in the lower part of the *Pulse Generators* tab presents a preview of the timing between the two pulse generator signals that are made available to the R&S ZVAX-TRM via the CASCADE connection. If the pulse generators are switched off (*Pulse Generators Active* deselected) this is indicated by a "Pulse generators inactive" tooltip. A tooltip is also displayed if the width of the pulse or sync signal is longer than the pulse (train) period.

Pulse Modulators tab

The *Pulse Modulators* tab allows to select the pulse generator signals

- to be used as input for the pulse modulators on RF paths 1, 2 and 3
- to be output at the EXT PULSE GENERATOR OUT ports of the extension unit


Any available generator signal from CASCADE IN (Internal Pulse Generator) or EXT PULSE GENERATOR IN (External Pulse Generator) may be selected.

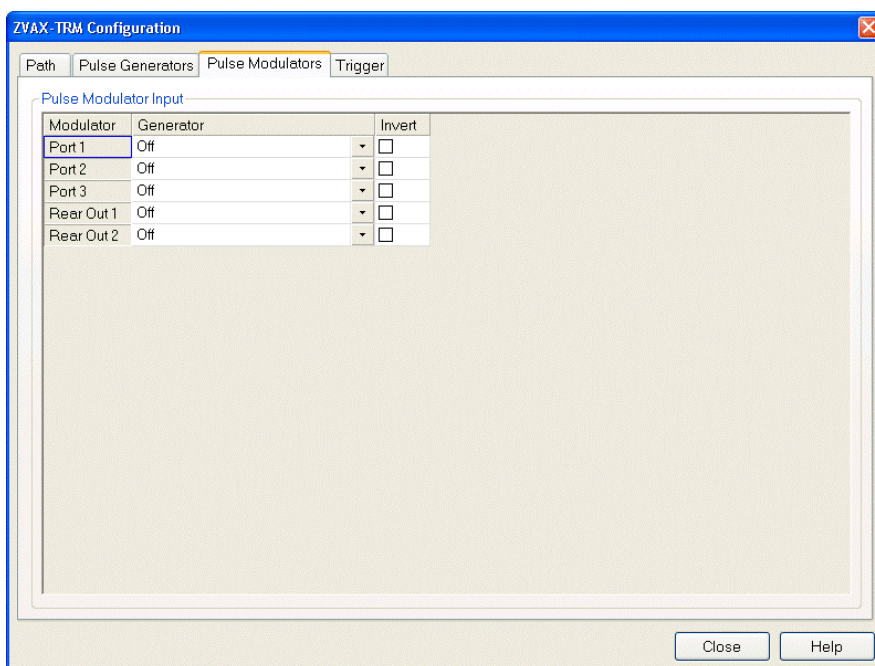

Remote control: [SENSe<Ch>:] TEUNit:PMODulator<Path>:SOURce
 [SENSe<Ch>:] TEUNit:PMODulator<Path>:INVert
 [SENSe<Ch>:] TEUNit:REAR<No>:SOURce
 [SENSe<Ch>:] TEUNit:REAR<No>:INVert


Trigger tab

The *Trigger* tab mirrors settings from the [Channel > Sweep > Trigger](#) submenu, in particular from the [Channel > Sweep > Trigger > Pulse Gen](#) and [Channel > Sweep > Trigger > Trigger Settings](#) dialog.

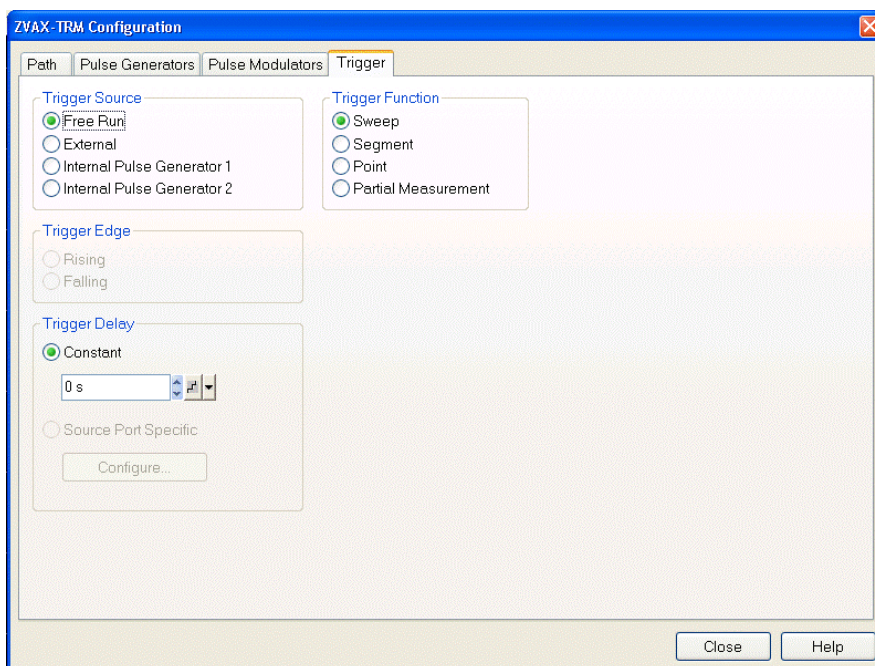

Channel Select

The *Channel Select* submenu provides functions to create and delete channels and select a channel as the active channel.

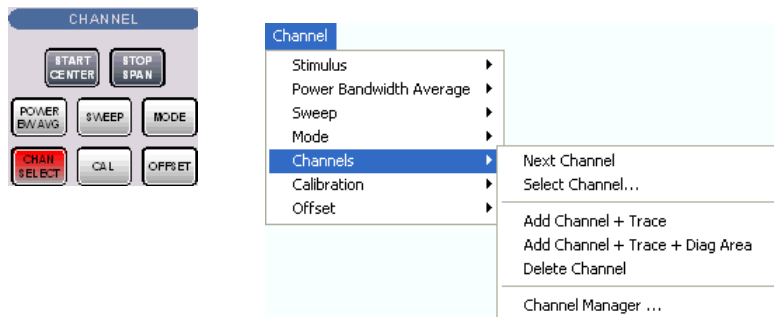

- *Next Channel* selects the next channel as the active channel (disabled if only one channel is defined).
- *Select Channel* opens a box to select an arbitrary channel of the active setup as the active channel (disabled if only one channel is defined).
- *Add Channel + Trace* creates a new channel and a new trace in the active diagram area.
- *Add Channel + Trace + Diag Area* creates a new channel and a new trace in a new diagram area.
- *Delete Channel* deletes the active channel.
- *Channel Manager* opens a dialog to perform the previous actions systematically, rename channels.



Active and inactive traces and channels

A window can display several diagram areas simultaneously, each with a variable number of traces. One of these traces is active at each time. The active trace is highlighted in the *trace list* on top of the active diagram area (Trc 4 in the figure below):

Trc1	S21	dB Mag	10 dB / Ref 0 dB
Trc2	S11	Phase	45° / Ref 0°
Trc3	a1	Lin Mag	10 dB / Ref 0 dBm
Trc4	S21	Phase	45° / Ref 0°

A mouse click onto a trace in the list selects the trace as the active trace. Alternatively, use the functions of the *Trace – Traces* menu.

The active channel is the channel which belongs to the active trace. The channels of all traces in a diagram area are listed at the bottom of the diagram, together with the *Stimulus* values and the display colors of all traces. The active channel is highlighted (Ch1 in the example below, with two associated traces).

Ch1	Start	300 kHz	—
Ch2	Start	500 kHz	—
Ch3	Start	5 MHz	—

A mouse click onto a trace in the trace list selects the channel associated to the trace as the active

channel. Channels with no traces are not indicated in the diagram areas but can be accessed via the [Channel Manager](#).



You can monitor the channel activity using the `OUTPut<Ch>:UPORt[:VALue] <numeric_value>` command and the output signals at pins 8 to 11 of the USER CONTROL connector.

Next Channel

Selects the next channel in a list of defined channels as the active channel. This function is disabled if the current setup contains only one channel.

Ch1	Start	300 kHz	—
Ch2	Start	500 kHz	—
Ch3	Start	5 MHz	—


If one or several traces are assigned to the next channel, one of these traces becomes the active trace.

The order of all channels belonging to a setup is given by the channels' creation time. By default, the channels are named Ch1, Ch2, ... so that Ch<n> follows Ch<n – 1>. This order is always maintained, even if channels are renamed, invisible (because no traces are assigned to them) or distributed over several diagram areas.

Remote control: The numeric suffix <Ch> appended to the first-level mnemonic of a command selects a channel as active channel.

Select Channel

Opens a box to select an arbitrary channel of the active setup as the active channel. This function is disabled if the current setup contains only one channel.

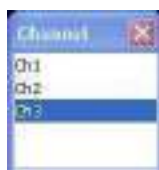

If one or several traces are assigned to the selected channel, one of these traces becomes the active trace.

The order of all channels belonging to a setup is given by the channels' creation time. By default, the channels are named Ch1, Ch2, ... so that Ch<n – 1> precedes Ch<n>. This order is always maintained, even if channels are renamed, invisible (because no traces are assigned to them) or distributed over several diagram areas.

Remote control: The numeric suffix <Ch> appended to the first-level mnemonic of a command selects a channel as active channel.

Add Channel + Trace

Creates a new channel and a new trace, which is displayed in the active diagram area. The new channel

settings (including a possible channel calibration) are identical to the previous channel settings; the trace is created with the trace settings of the former active trace but displayed with another color. The former and the new active trace are superimposed but can be easily separated, e.g. by changing the [Reference Position](#).

The new channel is named Ch<n>, where <n> is the largest of all existing channel numbers plus one. The name can be changed in the [Channel Manager](#).



To create a new trace in the active channel, use the [Trace – Traces – Add Trace](#) function. To create a new channel and a new trace and display it in a new diagram area, use [Add Channel + Trace + Diag. Area](#).

Remote control: `CONFigure:CHANnel<Ch>[:STATe] ON`
`CALCulate<Ch>:PARAmeter:SDEFine "<Trc_name>", "<Parameter>"`
`DISPlay:WINDow<No>:TRACe:FEED "<Trc_name>"`

Add Channel + Trace + Diag. Area

Creates a new channel and a new trace, which is displayed in a new diagram area. The new channel settings (including a possible channel calibration) are identical to the previous channel settings; the trace is created with the trace settings of the former active trace but displayed with another color.

The new channel is named Ch<n>, where <n> is the largest of all existing channel numbers plus one. The name can be changed in the [Channel Manager](#).



To create a new trace in the active channel, use the [Trace – Traces – Add Trace](#) function. To create a new channel and a new trace and display it in the active diagram area, use [Add Channel + Trace](#).

Remote control: `CONFigure:CHANnel<Ch>[:STATe] ON`
`CALCulate<Ch>:PARAmeter:SDEFine "<Trc_name>", "<Parameter>"`
`DISPlay:WINDow<No>:STATe ON`
`DISPlay:WINDow<No>:TRACe:FEED "<Trc_name>"`

Delete Channel

Deletes the active channel including all traces assigned to the channel and removes all display elements related to the channel from the diagram area. *Delete Channel* is disabled if the setup contains only one channel: In manual control, each setup must contain at least one diagram area with one channel and one trace.



To restore a channel that was unintentionally deleted, use the [Undo](#) function.

Remote control: `CONFigure:CHANnel<Ch>[:STATe] OFF`

Channel Manager

Opens a dialog to perform the actions in the *Channel Select* menu systematically and rename channels.



All existing channels of the current setup are listed in a table; see below. Below the table the *Trace Manager* provides the following buttons:

- *Add Channel* adds a new channel to the list. The new channel is named Ch<n>, where <n> is the largest of all existing channel numbers plus one.
- *Delete Channel* deletes the channel selected in the drop-down menu. This button is disabled if the setup contains only one channel: In manual control, each setup must contain at least one diagram area with one channel and one trace.



Columns in the Channel Manager table

The channel table contains several editable (white) or non-editable (gray) columns.

Name	Traces
Ch2	Trc4
Ch3	None

- *Channel* indicates the current channel name. The default names for new channels are Ch<n> where <n> is a current number.
- *Traces* indicates the names of all traces assigned to the channel.


Remote control: `CONFigure:CHANnel<Ch>:CATalog?`
`CONFigure:CHANnel<Ch>:NAME`
`CONFigure:CHANnel<Ch>:NAME:ID?`
`CONFigure:CHANnel<Ch>[:STATe]`

Channel - Calibration

The *Calibration* menu provides all functions that are necessary to perform a system error correction (calibration) or a power calibration.




For an introduction to calibration and calibration types refer to section [Calibration Overview](#) in the *System Overview* chapter. See also the *Data Flow* overview in the *System Overview* chapter.

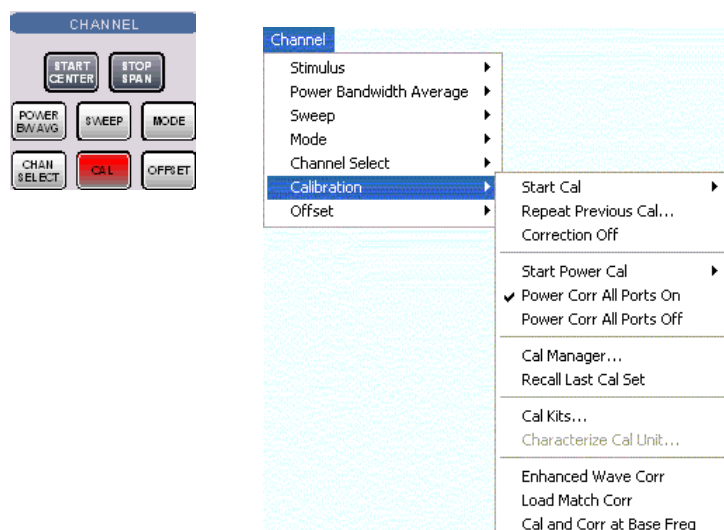

- **Start Cal** opens a submenu to select a new calibration and start the calibration wizard.
- **Repeat Previous Cal** reopens the wizard to repeat and optimize the previous calibration.
- **Correction Off** activates or deactivates the system error correction in the active channel.
- **Start Power Cal** opens a submenu controlling the source and receiver power calibration.
- **Power Corr All Ports On** (re-)applies the current power calibration to the active channel.
- **Power Corr All Ports Off** disables the power calibration in the active channel.
- **Cal Manager** opens a dialog to store system error correction data to a Cal Pool and to assign correction data to channels.
- **Recall Last Cal Set** loads and activates the setup for which the last calibration was performed.
- **Cal Kits** opens a dialog to manage the calibration kits in use, add new kits and import or export kits.
- **Characterize Cal Unit...** opens a dialog to select a characterization file for a calibration unit or start a new characterization of the cal unit.
- **Enhanced Wave Corr** activates or deactivates the system error correction of all a- and b-waves which are related to the ports of the active calibration.
- **Load Match Corr** activates or deactivates a load match correction (after previous enhanced wave correction).
- **Cal and Corr at Base Freq** forces power calibrations and system error corrections to be performed at the channel base frequency.

Start Cal

The *Start Cal* submenu selects the calibrated ports and the calibration type.

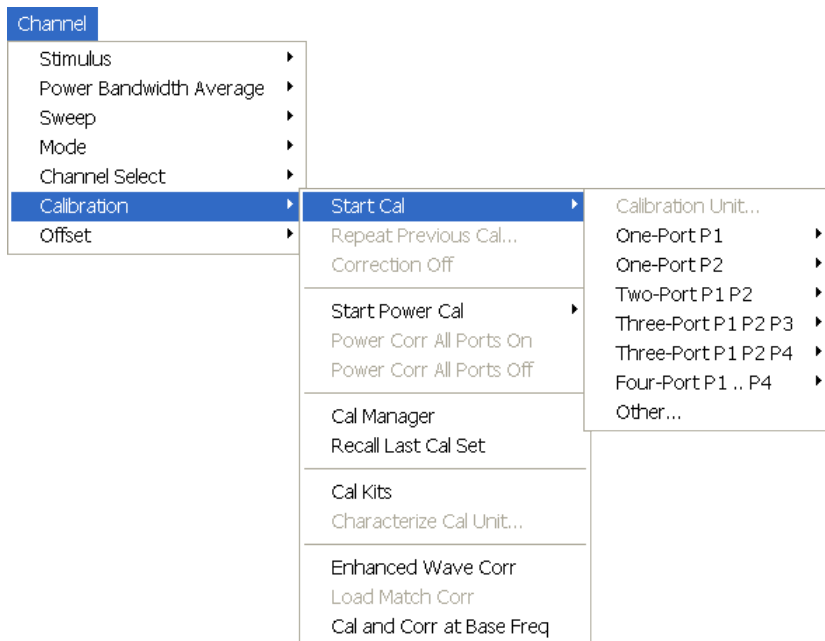

The calibration types depend on the number of test ports of the analyzer. For a four-port unit:

- **Calibration Unit** opens the dialog for automatic one-port or multi-port calibration using a calibration unit.
- **One-Port P1** and **One Port P2** open submenus to select a one-port calibration at test ports PORT 1 and PORT 2, respectively.
- **Two-Port P1 P2** opens a submenu to select a two-port calibration at test ports PORT 1 and PORT 2.
- **Three-Port P1 P2 P3**, **Three-Port P1 P2 P4** and **Four-Port P1 ... P4** open submenus to select a **three- or four-port calibration** at the respective test ports.
- **Other...** opens the **calibration wizard** to select a calibration type for an arbitrary number of ports.




Use **Other...** if you wish to perform several calibrations in a single measurement sequence and with a minimum of effort. The **Other...** calibration wizard allows you to measure a particular standard and reuse the results for different calibration types.

Remote control: `[SENSe<Ch>:]CORRection:COLlect:METHod:DEfine '<cal_name>', REFL | RSHort | FOPort | FRTRans | OPTPort | TOSM | TOM | TRM | TRL | NMTRL | TNA | UOSM, <port_no>[,<port_no>][,<port_no>][,<port_no>]`

One Port P1, One Port P2

Opens a submenu to select a one-port calibration at test ports PORT 1 or PORT 2. The two submenus are identical:

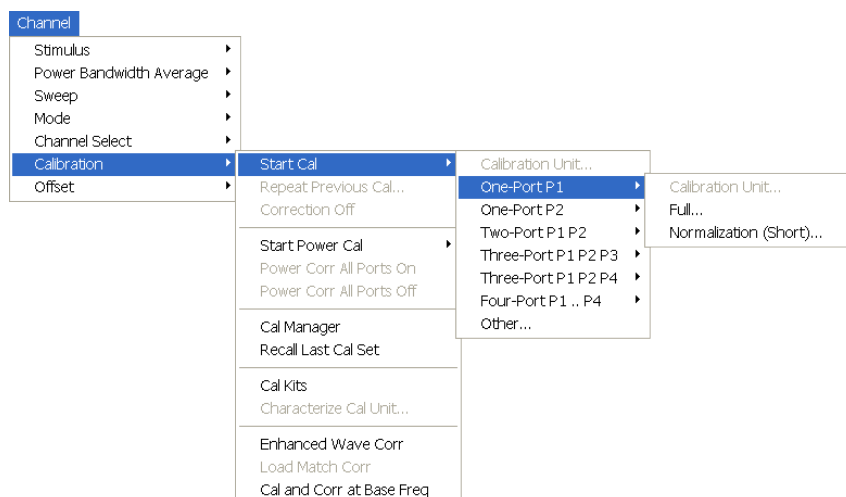

One-port calibrations can be performed automatically or manually.

- *Calibration Unit* starts an automatic full one-port calibration. This function is enabled while a *Calibration Unit* is connected.


The following menu commands calls up the start dialog of the *calibration wizard* to start a manual calibration:

- *Full* initiates a *full one-port calibration*.
- *Normalization (Short)* initiates a *normalization* using a short standard.

Remote control: `[SENSe<Ch>:]CORRection:COLLect:AUTO ' ', <port_no>` (for matching analyzer and cal unit ports)
`[SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs` (for arbitrary pairs of ports)
`[SENSe<Ch>:]CORRection:COLLect:METHod:DEFine "<cal_name>",`
`REFLshort | FOPort , <port_no>`

Two-Port P1 P2

Opens a submenu to select a two-port calibration at test ports PORT 1 and PORT 2:

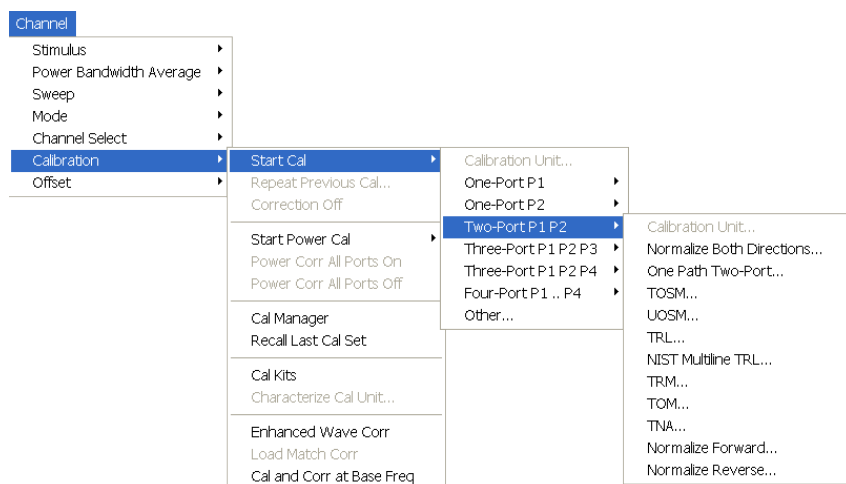

Two-port calibrations can be performed automatically or manually.

- *Calibration Unit* starts an automatic two-port TOSM calibration. This function is enabled while a [Calibration Unit](#) is connected.

The following menu commands calls up the start dialog of the [calibration wizard](#) to start a manual calibration:

- *Normalization Both Directions...* initiates a [normalization](#) using a through standard.
- *One Path Two Port* initiates a [full one-port calibration](#).
- *TOSM* initiates a [Through-Open-Short-Match](#) (12-term) calibration
- *UOSM* initiates a [TOSM calibration with Unknown Through](#)
- *TRL* initiates a [Through-Reflect-Line](#) calibration
- *NIST Multiline TRL* initiates a [NIST Multiline TRL](#) calibration
- *TRM* initiates a [Through-Reflect-Match](#) calibration
- *TOM* initiates a [Through-Open-Match](#) calibration
- *TNA* initiates a [Through-Network-Attenuation](#) calibration
- *Normalize Forward* and *Normalize Reverse* initiate a normalization in forward and reverse direction, respectively. The normalization uses a through standard, however, only one direction is normalized.




Use *Start Cal – Other...* to set up and perform other two-port calibrations .

Remote control: `[SENSe<Ch>:]CORRection:COLLect:AUTO ' ', <port_no>` (for matching analyzer and cal unit ports)
 `[SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs` (for arbitrary pairs of ports)
 `[SENSe<Ch>:]CORRection:COLLect:METHod:DEFine "<cal_name>", FRTRans | OPTPort | TOSM | UOSM | TRL | NMTRL | TRM | TOM | TNA | FTRans | RTRans, <port_no>, <port_no>`

Three- or Four-Port Calibrations

Three-Port P1 P2 P3, *Three-Port P1 P2 P4* and *Four-Port P1 ... P4* open a submenu to select and perform a calibration at the respective test ports. The submenu structure is identical for all three submenus:

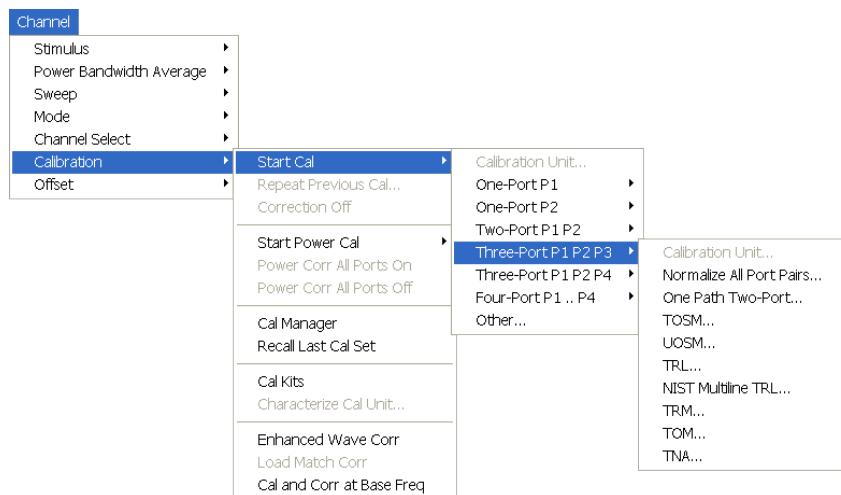

Calibrations can be performed automatically or manually.

- *Calibration Unit* starts an automatic TOSM calibration at the respective ports. This function is enabled while a [Calibration Unit](#) is connected.

The following menu commands calls up the start dialog of the [calibration wizard](#) to start a manual calibration:

- *Normalization All Port Pairs...* initiates a [normalization](#) of all (directed) port pairs using a through standard.
- *One Path Two Port* initiates a [full one-port calibration](#).
- *TOSM* initiates a [Through-Open-Short-Match](#) (12-term) calibration
- *UOSM* initiates a [TOSM calibration with Unknown Through](#)
- *TRL* initiates a [Through-Reflect-Line](#) calibration
- *NIST Multiline TRL* initiates a [NIST Multiline TRL](#) calibration
- *TRM* initiates a [Through-Reflect-Match](#) calibration
- *TOM* initiates a [Through-Open-Match](#) calibration
- *TNA* initiates a [Through-Network-Attenuation](#) calibration



Use *Start Cal – Other...* to set up and perform other 3- or 4-port calibrations.

Remote control: `[SENSe<Ch>:]CORRection:COLLect:AUTO ' ', <port_no>` (for matching analyzer and cal unit ports)
`[SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs` (for arbitrary pairs of ports)
`[SENSe<Ch>:]CORRection:COLLect:METHod:DEFine "<cal_name>", FRTAns | OPTPort | TOSM | UOSM | TRL | NMTRL | TRM | TOM | TNA | FTRAns | RTRAns, <port_no>, <port_no>`

Calibration Wizard

The analyzer provides a calibration wizard for each calibration type. The guided calibration consists of the following steps:

1. [Select Physical Port Connectors](#) and calibration kits at all calibrated ports.
2. [Compile Calibrations](#): Select a calibration type and the physical ports to be calibrated (skipped for predefined calibrations).
3. [Measure Standards](#): Acquire measurement data for all standards required for the selected calibration type.
4. [Reference Plane Transformation](#) (NIST Multiline TRL only): For a [NIST Multiline TRL](#) calibration it is possible to account for a reference plane shift (optional).
5. [Apply](#): Calculate the resulting system error correction data (error terms) from the measurement data of the standards and apply the result to the active channel.




A successful calibration will supersede the previous calibration, discarding all previous system error correction data. To keep older correction data you can transfer them into a *Cal Pool* using the [Calibration Manager](#).

The system error correction data determined in a calibration procedure are stored on the analyzer. You can read these correction data using the remote control command `[SENSe<Ch>:]CORRection:CDATa`. You can also replace the correction data of the analyzer by your own correction data sets.

Select Connectors

The first dialog of the calibration wizard displays a table to select the connectors and calibration kits for all calibrated physical ports, the detector, and the sweep setup.

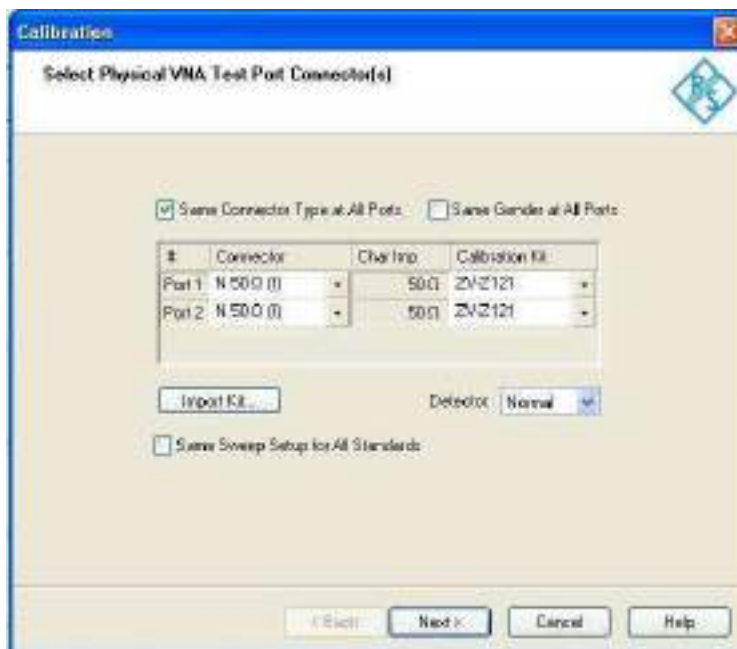

The check boxes above the table allow you to select equal connector types and genders at all ports. For some multi-port calibration types, the port connector types must be equal, e.g. because they require a Through standard with known characteristics.

The *table* contains the following rows:

- **Physical Port Number #**

The ports (and therefore the number of table rows) are determined by the active calibration type

selected in the [Start Cal](#) submenu. For a user-defined calibration (*Start Cal – Other...*) all measurement ports of the analyzer are displayed regardless of their port configuration.



To perform a system error correction, the physical port must be available as a source and receive port. This condition is met if it is selected as a measured port in the port configuration dialog (Meas is on), and if the RF source power is not switched off (RF Off is off).

- **Connector**

provides a drop-down list to select the *connector type*. An (f) behind the connector type denotes female connectors, an (m) denotes male connectors. Symmetric (sexless) connectors (e.g. PC7) are not labeled. User-defined connectors can be added or removed in the [Available Connector Types](#) dialog, which is opened from the Channel – Calibration – Calibration Kits dialog. at the port and its gender. If *Same Connector at All Ports* is active, the connector types at all ports (but not their gender) are always adjusted to the current selection. If *Same Gender at All Ports* is active, the genders at all ports (but not the connector type) are always adjusted to the current selection.

- *Ref. Imp.* shows the reference impedance for the selected connector.

- **Calibration Kits**

provides a drop-down list to select a calibration kit. The list contains all calibration kits available for the selected connector type. The assignment of a calibration kit to a connector type must be the same for all physical ports: If a calibration kit is changed, the analyzer automatically assigns the new kit to all ports with the same connector type.



Completeness: *The selected calibration kit must contain all standards needed for the active calibration type. If it doesn't the analyzer displays an error message.*



Waveguide cutoff: *If a user-defined waveguide connector is assigned to one of the calibrated ports, then the start frequency of the active channel must be above the waveguide cutoff. Otherwise the analyzer displays an error message.*

Import Kit opens the *Import Calibration Kit* dialog to load and (if desired) activate a [cal kit file](#). *Next >* opens the second dialog of the wizard to continue the calibration procedure:

- In a user-defined (*Other...*) calibration, the [Compile Calibrations](#) dialog is called up.
- In a predefined calibration, *Compile Calibrations* is skipped and the [Measure Standards](#) dialog is called up.

Detector selects the [detector](#) settings for the S-parameters which the analyzer uses during the calibration. The average (AVG) detector eliminates noise contributions which are superimposed on the measured signal; it is needed for [noise figure](#) measurements using option R&S ZVAB-K30. The *Normal* detector is recommended for all other applications.



*If the calibrated channel has already been assigned to a [cal group](#), the correction data overwrites the cal group data, so the new calibration will affect all channels assigned to the cal group. The network analyzer generates a notice message "New calibration will overwrite cal pool!" when opening the *Select Physical Port Connectors* dialog.*

Same Sweep Setup for All Standards selects one of two alternative calibration methods:

- If the check box is off, the analyzer prepares the calibration sweep(s) for each individual measured standard ("Preparing Cal Sweep...") and reduces the number of drive ports to the required minimum. This can be the fastest method, in particular if the calibration sweeps take longer than the preparation phase (e.g. due to small bandwidths, a large number of sweep points), or if many ports are calibrated.

- If the check box is on, each standard involved in an n-port calibration (or in n one-port calibrations) is measured with n drive ports. The calibration sweep setup is the same for all standards; no individual preparation phases are required. This speeds up the calibration, provided that the calibration sweeps are fast compared to the preparation phases.
Due to the similarity of the measurement phases and timing with the later measurement of the device under test, this calibration method is potentially more accurate than the previous method. If the sweeps are relatively slow, or if many ports are calibrated, it causes longer calibration times.



Checks on switching to the next dialog


When the *Next>* button is pressed the analyzer checks the calibration kits and the matching of the calibration standards and possibly displays a notice box (confirm with *OK*). This happens:

- If one of the calibration kits is described by [ideal kit parameters](#) or [typical values](#).
- If different connector types are defined at the ports but the selected calibration type requires uniform connectors.
- If a predefined 7-term calibration method TXX (*TOM*, *TRL*, *TNA*, *TRM*) is selected but one of the calibration standards is mismatched. A standard is assumed to be mismatched if it is described by [S-parameter data](#) (*.snp file) with a reflection factor > –30 dB.

Remote control: `[SENSe<Ch>:]CORRection:COLLect:CONNection<port_no>:PORTs`
`[SENSe<Ch>:]CORRection:COLLect:CONNection<port_no>:GENDerS`
`[SENSe<Ch>:]CORRection:COLLect:CONNection<port_no>`
`[SENSe<Ch>:]CORRection:COLLect:SCONNection<port_no>`
`[SENSe<Ch>:]CORRection:CKIT:<conn_type>:SElect "<Ckit_Name>"`
`[SENSe<Ch>:]CORRection:COLLect:DETEctor`
`[SENSe<Ch>:]CORRection:COLLect:CSETup`

Compile Calibrations

The second dialog of the calibration wizard appears for user-defined (*Other...*) calibrations only. It is used to compile a list of calibration types and physical ports in order to perform all calibrations in a single measurement sequence. A measurement of a particular standard that is required for different calibration types can be reused.

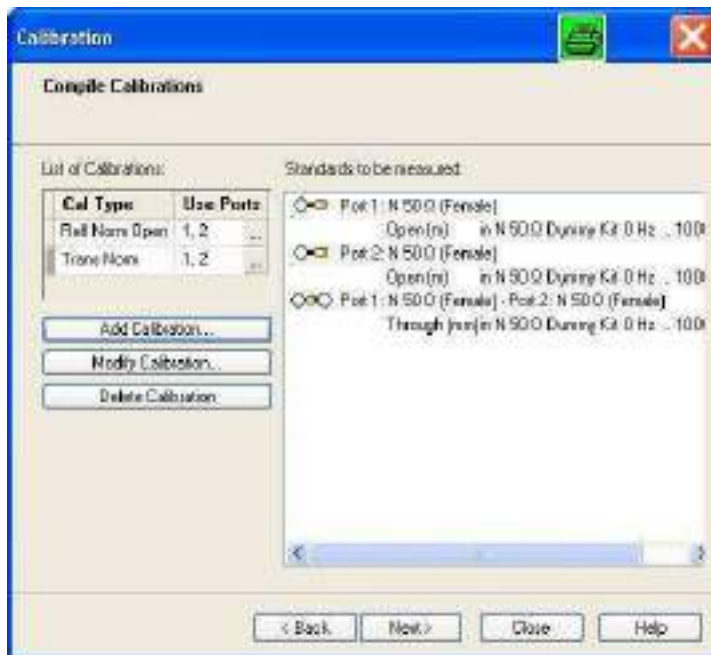

The selected calibrations and ports appear in the *List of Calibrations*. An (N) behind the ports number denotes a node port (see [Add Calibration](#) dialog). The list of *Standards to be Measured* is automatically generated according to the *List of Calibrations*. A red line in the list indicates that the sweep range exceeds the frequency range of the standard.

The dialog provides three buttons to extend or modify the *List of Calibrations*:

- *Add Calibration...* opens the *Add Calibration* dialog to add a new calibration to the list.
- *Modify Calibration...* opens the *Add Calibration* dialog to modify the selected calibration.
- *Delete Calibration* removes the selected calibration from the list.

Two buttons at the bottom of the dialog move back and forward in the calibration wizard:

- < Back opens the [Select Physical Port Connectors](#) dialog.
- > Next opens the [Measure Standards](#) dialog.

If one of the calibration kits is described by [ideal kit parameters](#) or [typical values](#), the analyzer displays a notice box.

Remote control: `[SENSe<Ch>:]CORRection:COLlect:METHod:DEFine
"<cal_name>", REFLshort | FOPort | FRTRans | OPTPort | TOSM | TOM |
TRM | TRL | NMTRL | TNA | UOSM,
<port_no>[,<port_no>][,<port_no>][,<port_no>]`

Add Calibration

The *Add Calibration* dialog adds a new calibration to the list in the [Compile Calibrations](#) dialog or modifies an existing calibration.



- *Type* contains a drop-down list to select a [calibration type](#).
- *Calibrate Ports* provides a list of all test ports of the analyzer (no external device ports). Ports with unsuitable port configuration (see [Select Connector](#) – *Physical Port Number #*) are grayed.
- *Node Port* is available for [One Path Two Port](#) calibrations where it selects the fully calibrated port (i.e. the source port). All ports selected in the *Calibrate Ports* table can be used as node ports.



NOTE Tooltips and checks in the dialog

The frequency range for waveguide ports is limited by the cutoff frequency f_c . If the start frequency of the sweep (i.e. the lowest frequency point) is below f_c , the analyzer displays a tooltip, and the waveguide port is excluded from the calibration.


When the *OK* button is pressed the analyzer checks the calibration kits and the selected calibration (s) and possibly displays a notice box (confirm with *OK*) or a status message. This happens:

- If one of the calibration kits is described by [ideal kit parameters](#) or [typical values](#).
- If one of the selected calibration types is redundant. A calibration is redundant if another selected calibration provides more complete correction data. Redundant calibrations are deleted from the list of calibrations.

Remote control: `[SENSe<Ch>:]CORRection:COLlect:METHod:DEFine
"<cal_name>", REFLshort | FOPort | FRTRans | OPTPort | TOSM | TOM |
TRM | TRL | NMTRL | TNA | UOSM,
<port_no>[,<port_no>][,<port_no>][,<port_no>]`

Measure Standards

The *Measure Standards* dialog of the calibration wizard is used to perform the necessary measurements of standards and to calculate the correction data.

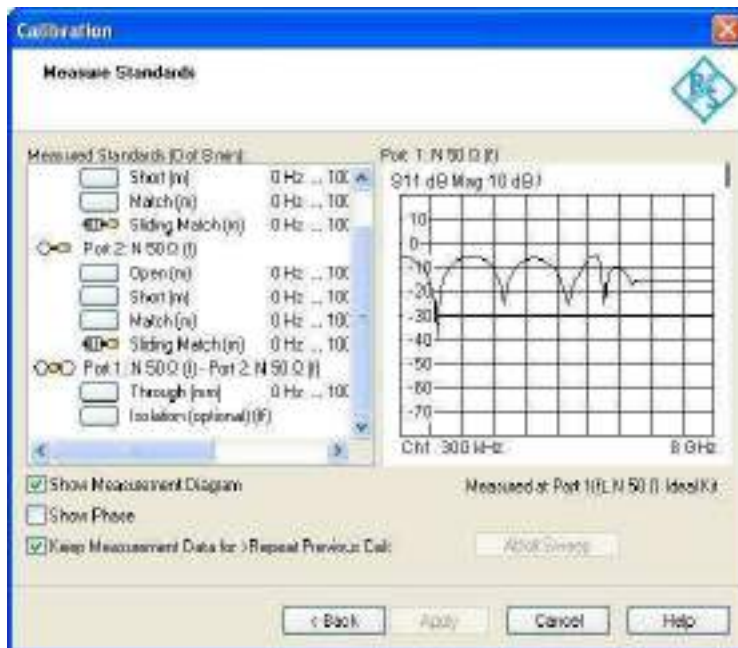

Measured Standards displays the list of measured standards compiled in the previous dialogs. With the exception of the *Isolation (optional)* measurement, all standard measurements are required perform the selected calibration.



Structure of the Measured Standards list

The list of measured standards has a tree structure.

- The first level contains all physical ports where one-port  (reflection) measurements are required and all physical port combinations where two-port  (transmission) measurements must be performed.
- The second level contains check boxes for the standards to be measured at each port or port combination. The frequency range for each standard is also displayed. A red line indicates that the sweep range exceeds the frequency range of the standard.
- For a sliding match, a third level contains check boxes for the different positions of the sliding element.



Double-click a physical port symbol to expand or collapse the list.

Through connections for full n-port calibrations and $n \geq 3$


The list of *Measured Standards* for the full n-port calibration types (TOSM, UOSM, TOM, TRM, TRL, MTRL, TNA) contains all $n!/(2*(n-2)!)$ possible Through connections between the calibrated analyzer ports. The analyzer can calculate the error terms after $(n-1)$ Through measurements, provided that the Throughs connect all analyzer ports. As soon as a sufficient set of Through measurements is available, you can *Apply* the calibration and close the wizard. You can also measure additional Through connections in order to improve the accuracy of the calibration.

To establish a sufficient set of Through connections, you can select an arbitrary analyzer port as a node port and measure all Through connections to this port. You can also connect all ports in increasing order, e.g. 1 --> 2, 2 --> 3, 3 --> 4.

For more information refer to section [Full n-Port Calibration with Reduced Number of Through Connections](#).

Calibrations using a match or sliding match

If the calibration kit contains a sliding match standard, the *Sliding Match* appears in the *Measured Standards* list whenever the selected calibration type requires a *Match*. A click on the node expands the check boxes for the different positions of the load element. The number of different positions is defined in the *User Interface* tab of the *System Configuration* dialog.

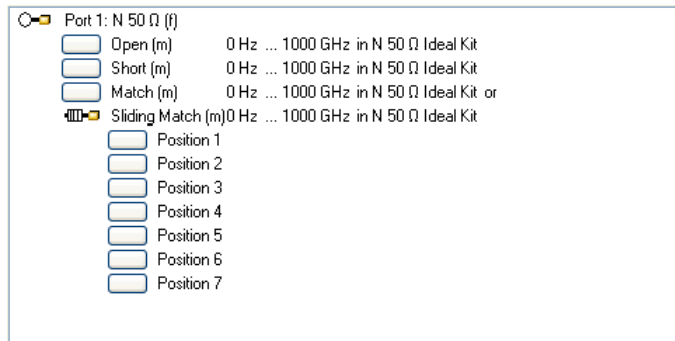

The sliding match is a one-port standard consisting of an air line with a movable, low-reflection load element (sliding load). This standard is used because a no perfect match is available over a wide frequency range. However, a series of measurements at a given frequency with equal mismatch and varying phase yields reflection factors that are located on a circle in the Smith chart. The center of this circle corresponds to perfect match. The network analyzer determines and further corrects this match point following I. Kása's circle-fitting algorithm.

To obtain the reflection coefficient for a perfectly matched calibration standard, the sliding load must be measured at least at 3 positions which should be unequally spaced to avoid overlapping data points. Increasing the number of positions to 4 – 6 can improve the accuracy. Moreover it is recommended to use the predefined load positions of the standard.

The calibration is valid (*Apply* is available) if either the match or three positions of the sliding match have been measured. However, it is often desirable to acquire calibration data from both standards. The analyzer combines the data in an appropriate manner:

- The match results are used up to the lower edge of the specified frequency range of the sliding match (Min Freq).
- The sliding match results are used for frequencies above the Min Freq. In general, the sliding match will provide better results than the match within its specified frequency range.

Isolation measurement (optional)

For two or multiport normalizations, the *Measured Standards* list contains an *Isolation (optional)* standard in addition to each through standard. Measurement of the isolation is optional; the normalization correction is calculated as:

Correction value = (Transmission coefficient DUT – Isolation) / (Transmission coefficient Through – Isolation).

The isolation term accounts for a possible crosstalk between a pair of analyzer ports. The isolation standard is not a physical standard; it is recommended to terminate the analyzer ports with 50 Ω to measure the isolation.

Waveguide calibration

When calibrating waveguide ports, ensure that the calibration standards are connected correctly. The electric fields at each of the waveguide transitions must be parallel. For example, if you use a [frequency converter](#) and a [waveguide calibration kit](#), the rectangular waveguide cross sections of

the frequency converter flanges and of the waveguide calibration standards must have the same orientation.

TRL extensions: [calibration with two Lines](#), [combination with TRM](#)

Checking one of the boxes in the list causes the analyzer to stop the measurement in all channels except the active one and measure the standard according to the active channel settings. The progress of the calibration sweep and the result can be monitored in the diagram. In case of an error (e.g. if the measurement result shows that the calibration standard was not connected properly), *Abort Sweep* immediately terminates the sweep.

After completing the sweep the analyzer generates a short sound and a green checkmark appears in the checkbox. Measurements can be repeated as often as desired. Newer results overwrite older measurement data.



Most channel settings including the [trigger settings](#) remain valid for calibration sweeps and power calibration sweeps. To start the calibration sweeps without delay select *Free Run* trigger mode.



Checks for the calibration sweep

If the generator frequency range of the active ports exceeds the validity range of the standard model (defined by *Min. Freq.* and *Max. Freq.* in the [Add/Modify Standard](#) dialog) the analyzer displays a notice box (confirm with OK).

The *Measure Standards* dialog provides further controls:

- *Show Measurement Diagram* displays or hides the diagram to the right of the list of Measured Standards. Hiding the diagram leaves more space for displaying the characteristics of the measured standards.
- *Show Phase* displays or hides the phase trace (in addition to the dB Mag trace) in the measurement diagram.
- *Keep Measurement Data for >Repeat Previous Cal<* causes the raw measurement data of the standards to be stored after the calibration is completed. This enables the [Repeat Previous Cal...](#) command, which can be used to optimize a previous calibration without repeating the measurement of all standards. If *Keep Measurement Data...* is not active, then the raw measurement data of the standards is deleted and the analyzer only stores the system error correction data. Deleting the raw data saves disk space.
- *Apply* is enabled as soon as data has been acquired for all standards. The button starts the calculation of the system error correction data and closes the calibration wizard. The calibration is applied to the active channel. In the [Port Configuration](#) dialog, only the calibrated ports are enabled for the measurement. The current instrument settings are stored with the correction data. To avoid incompatibilities, older system error correction data is deleted unless it has been transferred into a Cal Pool using the [Calibration Manager](#). If an unknown through standard is measured, *Apply* opens an additional dialog to check the calculated length offset parameters; see [Unknown Through Standard](#).



The *Keep Measurement Data for >Repeat Previous Cal<* setting is valid for the current calibration only. To activate this function in general, use the parameter in the *User Interface* tab of the *System Config* dialog (menu *System – System Config*).



Checks during the calculation of correction data

Incompatibilities between the selected calibration type, the standards and the channel settings may cause the calibration to be inaccurate. The analyzer auto-detects potential sources of errors and displays

appropriate, self-explanatory notice boxes.

Remote control: `[SENSe<Ch>:]CORRection:COLLect[:ACQuire]:RSAVE`
`[SENSe<Ch>:]CORRection:COLLect[:ACQuire]:SElected`
`[SENSe<Ch>:]CORRection:COLLect:DElete ["<cal_name>"]`
`[SENSe<Ch>:]CORRection:STIMulus?`

TRL Extensions

The frequency range for a [TRL](#) calibration is restricted due to singularities in the system of equations to be solved. Singularities occur whenever the electrical length difference ΔL_{el} between the Through and the Line is an integer multiple of half of the wave length:

$$\Delta L_{el} \neq n \frac{\lambda}{2}$$

As a rule, singularities are avoided with sufficient accuracy if the phase shift due to the (electrical) length difference between the Through and the Line standard is between 20° and 160°. This corresponds to a ratio of 1:8 for the start and stop frequency of the calibrated sweep range:

$$f_{\min} = 20^\circ/360^\circ \cdot 1/[d_{\text{Line}} - d_{\text{Through}}]; f_{\max} = 160^\circ/360^\circ \cdot 1/[d_{\text{Line}} - d_{\text{Through}}].$$

In the formula above, d denotes the delay, which is the electrical length divided by the velocity of light ($d = L_{el} / c$).




To shift the calibrated sweep range to smaller or larger frequencies, you can use a longer or shorter Line. To extend the calibrated range, use one of the following methods:

- Perform TRL calibration with two or three different Line standards. With an appropriate length of the Lines, the ratio for the start and stop frequency of the calibrated sweep range can increase to approx. 1:64 (for 2 Lines) or 1:512 (for 3 Lines).
- In the low-frequency domain where TRL becomes inaccurate, replace TRL by TRM calibration.
- To check the frequency range of the Line standards, open the *Channel – Calibration – Calibration Kits – View/Modify Kit – View/Modify Standard* dialog. The *Optimize Line Freq Ranges* button in the [Add Calibration Kit](#) dialog re-adjusts the frequency ranges and transition frequencies between the Line segments. You can also manually change the minimum and maximum frequency of each Line standard and the adjusted transition frequencies.

The methods can be combined or used separately. The *Measured Standards* list for TRL calibration is extended if the [calibration kit](#) in use contains the necessary standards:

- A 2-Line (3-Line) calibration requires two (three) different Lines of matching gender. The Lines must be measured between any combination of two ports.
- A TRM extension at low frequencies requires either a Match or a sliding Match standard. The standard must be measured at each port.

The complete *Measured Standards* list for a two-port calibration is shown below. The calibration is valid as soon as the standards for *TRL with 1 Line* have been measured. The extensions are applied automatically if the necessary standards have been measured.

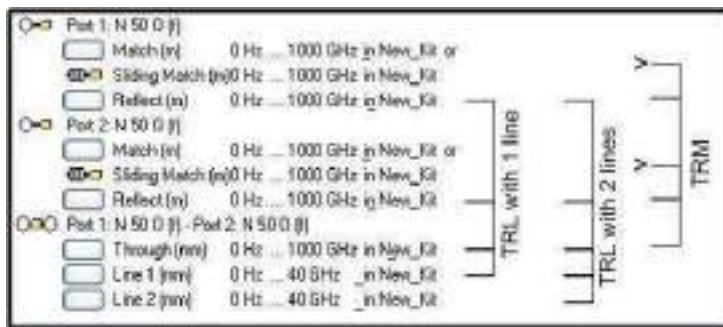

Frequency range for waveguide standards

For waveguide Line standards with a lower cutoff frequency f_c , the formulas for the minimum and maximum frequency are modified as follows:

$$f_{\min} = \sqrt{1/[18 \cdot (d_{\text{Line}} - d_{\text{Through}})]^2 + f_c^2}$$

$$f_{\max} = \sqrt{16/[9 \cdot (d_{\text{Line}} - d_{\text{Through}})]^2 + f_c^2}$$

TRL Calibration with Two or Three Lines

If several Lines with different lengths are measured, the analyzer automatically divides the calibrated frequency range into sub-ranges; see background information below. The calibration data of the longest Line is applied to the lowest sub-range, the calibration data of the shortest Line to the highest sub-range.

Calculation of sub-ranges

The transition frequency $f_{\text{transition}}$ between the calibration sweep sub-ranges for two Lines with delays d_{long} and d_{short} is obtained according to:

$$f_{\text{transition}} = 1 / [2 \cdot (|d_{\text{long}} - d_{\text{Through}}| + |d_{\text{short}} - d_{\text{Through}}|)]$$

d_{Through} denotes the delay of the Through standard. At $f_{\text{transition}}$ the phase difference between the longer Line and the Through and the phase difference between the shorter Line and the Through are at an equal distance from the ideal value of 90 deg. The delays d_{long} , d_{short} , and d_{Through} are extracted from the cal kit data.


For a TRL calibration using three Lines with different delays, the transition frequencies between adjacent sweep ranges are calculated in an analogous manner.

Modifications of the transition frequency formula

The formula for $f_{\text{transition}}$ is modified in the following instances:

- For waveguide standards with a lower cutoff frequency f_c , $f_{\text{transition}} = \sqrt{1/[2 \cdot (|d_{\text{long}} - d_{\text{Through}}| + |d_{\text{short}} - d_{\text{Through}}|)]^2 + f_c^2}$.
- If the frequency ranges of both Line standards overlap but the calculated transition frequency is below (above) the minimum (maximum) frequency of the shorter (longer) Line, it is replaced by the minimum (maximum) frequency of the shorter (longer) Line.

If the frequency ranges of both Line standards do not overlap, $f_{\text{transition}}$ is not modified, but a warning is displayed before the calibration is applied.

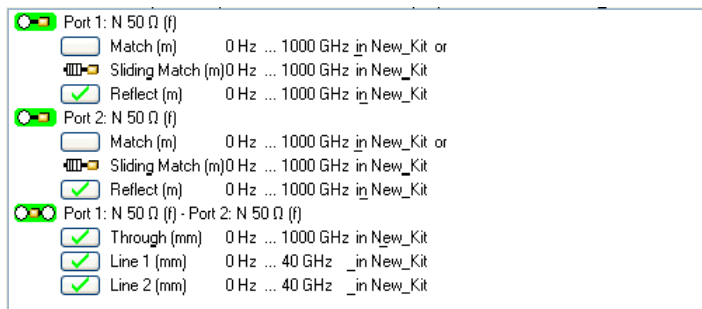

A second or third Line in the list does not always mean that you have to measure two or three Line standards. If the calibrated frequency range is small enough, the calibration is valid as soon as the analyzer has acquired correction data for a single Line standard. The match and sliding match standards are not necessary for TRL calibration, however, they must be measured if TRL is combined with TRM calibration.



Defining cal kits with several Line standards

Predefined calibration kits usually do not provide several Line standards with different lengths. To generate a calibration kit appropriate for TRL calibration with two or three Lines, proceed as described in [Creating a user-defined calibration kit](#). Click *Optimize Line Freq Ranges* in the *View Calibration Kit* dialog to check the transition frequencies between the Lines that the analyzer calculates according to the rules described above.

Low-frequency extension with TRM

TRL calibration becomes inaccurate if the electrical length difference between Line and Through standard corresponds to a phase shift below 20°. In practice this means that TRL is only practicable above a threshold frequency f_{TRM} which depends on the delays of the longest Line and Through standards. The threshold frequency is given by:

$$f_{TRM} = 1/[18*(d_{long} - d_{Through})]$$

where d_{long} denotes the delay of the longest of the used Line standards, $d_{Through}$ the delay of the Through. For waveguide standards, a modified formula applies; see [Frequency for waveguide standards](#). At frequencies below f_{TRM} , TRL calibration is automatically replaced by TRM, provided that the necessary calibration data has been acquired. For a line with $l_{long} = c_0 * d_{long} = 16.666$ cm, the threshold frequency is $f_{TRM} = 100$ MHz.

TRL calibration with low-frequency TRM extension

Accuracy conditions for the Line(s)


The length error of the Line, converted into a transmission phase error, must be below the minimum difference to the singularity points 0 deg or 180 deg multiplied by two. Suppose that an approximately known Line standard causes a transmission phase of 30 deg at the start frequency and of 160 deg at the stop frequency of the sweep. Its length error must cause a phase difference below $(180 \text{ deg} - 160 \text{ deg}) * 2 = 40 \text{ deg}$.

Unknown Through Standard


If an Unknown Through standard (or an unknown reciprocal mixer; see [Mixer Vector Cal](#)) is measured, the analyzer must determine its delay time or transmission phase. This involves a measurement at different frequencies (see mathematical relations in section [Delay](#)). The spacing between the frequency points must be small enough to avoid phase ambiguities: The phase must not change by more than 135 deg

from one frequency point to the next. The R&S ZVA automatically establishes an appropriate frequency grid for the Unknown Through calibration sweep, depending on the active sweep type:

- If a frequency sweep (*Lin Frequency*, *Log Frequency*, *Segmented Frequency*) is active, additional frequency points are inserted between the sweep points of the calibrated channel.
- If a sweep type with constant frequency (*Power*, *Time*, *CW Mode*) is active, additional frequency points are inserted over a 2 GHz-wide frequency range centered around the CW frequency. If the CW frequency is too close to the upper/lower frequency limit of the analyzer, the frequency range is cut in half (e.g. 0.5 GHz to 1.5 GHz, if the CW frequency is 0.5 GHz). A message dialog of the following type appears.

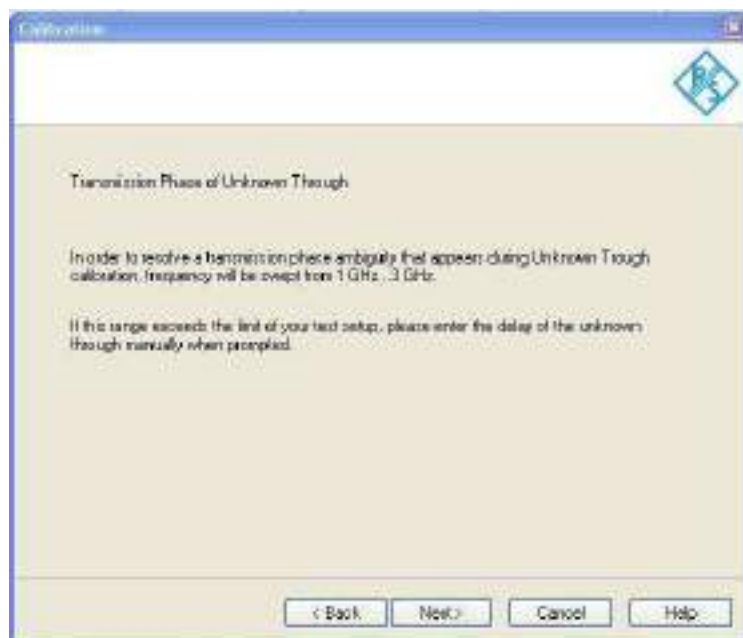

The additional frequency points are used for the calibration only and do not overwrite the channel settings. Should any of the components in your test setup not be designed for the required frequency range (causing a faulty delay or transmission phase and thus an inaccurate calibration), you can still proceed to the next dialog (*Measure Standards*), perform the necessary calibration sweeps for the UOSM calibration, press *Next*, and enter the delay manually.

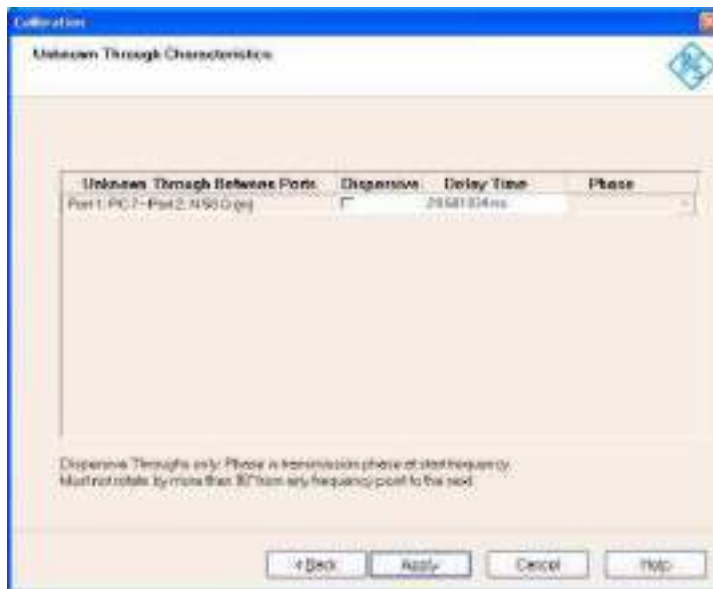

The *Unknown Through Characteristics* dialog shows the delay time or transmission phase that the analyzer determined during the calibration sweep.

- For a non-dispersive standard (*Dispersive* check box cleared), the *Delay Time* can be determined unambiguously. In this case it is sufficient to press *Apply* in order to calculate the system error correction data and close the calibration wizard.
- For a dispersive standard (*Dispersive* check box selected), the delay time is frequency-dependent, however, the analyzer can determine two solutions for the transmission phase at the start frequency of the calibration sweep. The two solutions differ by 180 deg; the right solution must be selected from a drop-down list. The analyzer assumes that the transmission phase difference between two consecutive sweep points is below 90 deg (make sure that the spacing between the sweep points is small enough).




If you are not sure which one of the two phases for a dispersive standard is correct, select one, press *Apply* and check the measured result. If the transmission phase looks incorrect, use *Channel – Calibration – Repeat Previous Cal...* to select the alternative solution.



You can correct the delay time or phase determined by the analyzer manually e.g. by entering a value derived from the mechanical length of the standard. Doubtful delay times or phases are displayed with a question mark.

Reference Plane Transformation (NIST Multiline TRL only)

By default the reference plane for a calibration is at the connector plane. Since in addition to the error correction terms a NIST Multiline TRL calibration produces an accurate propagation constant for each frequency point, this result can be used to apply a reference plane transformation following the calibration. In case of a NIST Multiline TRL calibration the Reference Plane Transformation dialog is displayed to provide the user with a UI to specify the desired transformation.

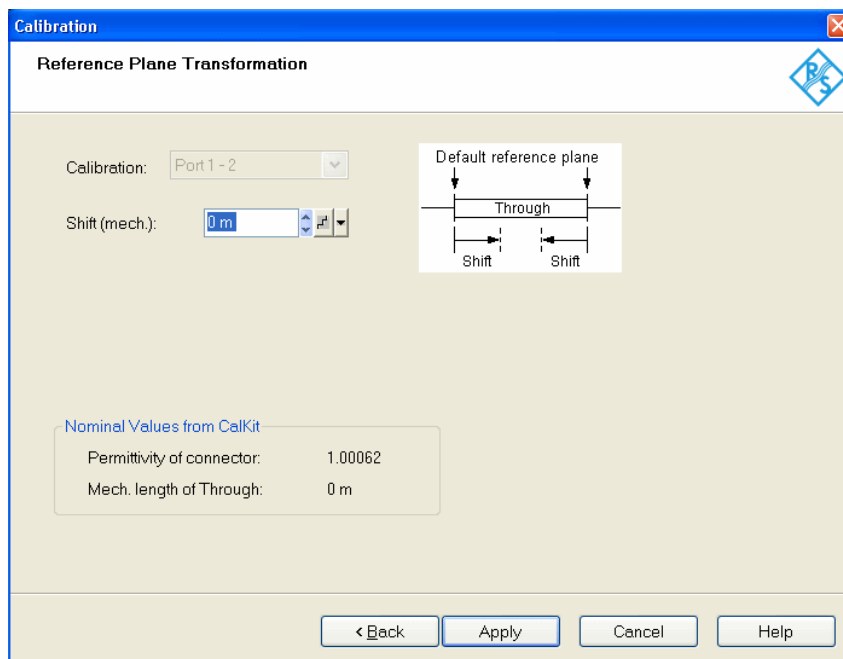

The transformation is entered as a mechanical length, where positive values move the reference plane towards the DUT and negative values towards the connector. If a user-defined (*Other...*) calibration contains multiple NIST Multiline TRL calibrations, the reference plane transformation can be applied for each NIST Multiline TRL calibration individually. The relationship between mechanical length l_{mech} , electrical length l_{el} and *delay* is given by

$$l_{mech} = l_{el} / \sqrt{\epsilon_{r,eff}} \quad \text{and} \quad l_{el} = c_0 \cdot \text{delay}$$

where $\epsilon_{r,eff}$ denotes the effective relative permittivity and c_0 the speed of light in vacuum.

Remote control: `[SENSe<Ch>:]CORRection:COLLect:RPSHift`
`[SENSe<Ch>:]CORRection:DATA:PARAMeter<Cal>? RPSHift`

Apply

Finally *Apply* the resulting system error correction to the active channel or use *Cancel* to discard it and keep the current one.

Remote control: `[SENSe<Ch>:]CORRection:COLLect:SAVE:SELected`

Repeat Previous Cal

Reopens the *Measure Standards* dialog of the calibration wizard to repeat and optimize the previous calibration without necessarily repeating the measurement of all standards.

Repeat Previous Cal is active only if *Keep Measurement Data for >Repeat Cal<* in the *Measure Standards* dialog was enabled when the last calibration for the active channel was successfully completed.



Additional conditions for repeating a calibration

Changing the channel settings can cause incompatibilities between the current instrument state and the previous calibration. In particular the following conditions must be met:

- The configuration of all ports needed must be correct (see [Select Connector – Physical Port Number #](#)).
- The *Sweep Type* must be unchanged.

If incompatible settings occur the analyzer displays an error message and does not repeat the calibration.

Recall Last Cal Set

Loads and activates the setup for which the last calibration was performed. If the last calibrated setup is already active, nothing is changed.

The calibrated setups are automatically stored in the C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\RecallSets directory. A message box pops up if the directory is empty, e.g. because no calibration was performed yet.

Correction Off

Activates or deactivates the system error correction in the active channel. *Correction Off* is active only if a valid system error correction is assigned to the active channel; see *Cal State* in the [Calibration Manager](#).



A red label *Cal Off !* appears behind the trace list if the system error correction is switched off; see also [Calibration Overview](#).



Correction for S-parameters and wave quantities

"Arbitrary" S-parameters are S-parameters for a- and b-waves at different frequencies, e.g. for scalar mixer measurements (see [S-Parameters in Frequency Conversion Measurements](#)). For full consistency, these S-parameters require a power calibration in combination with the system error correction; an additional enhanced wave correction is recommended. To account for the extended calibration requirements of arbitrary S-parameters, *Correction Off* activates or deactivates both the system error correction and the power calibration of the active channel. The *Power Correction Off* state is ignored. If no user system error correction or power calibration is available, the factory calibrations are used.

The calibration state label (*Cal Off !* or *Cal*) for an arbitrary S-parameter trace indicates whether or not *Correction Off* is active; it does not distinguish the *Enhanced Wave Corr* state. This is in contrast to the calibration state label for wave quantities and ratios; see [Enhanced Wave Correction](#).


Remote control: [:SENSe<Ch>]:CORRection:STATe ON | OFF

Power Calibration

The *Power Calibration* submenu configures and starts a [source](#) or [receiver](#) power calibration.



In [true differential mode](#) only the source power calibration results are used, no receiver power calibration is possible.

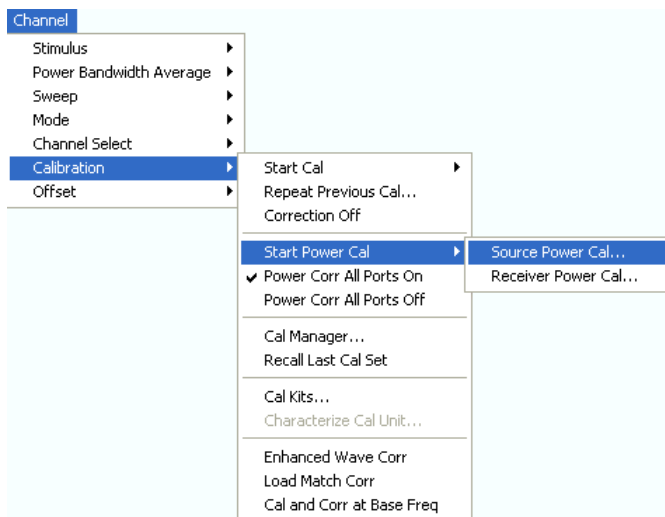

- [Source Power Cal...](#) opens the configuration dialog for a source power calibration.
- [Receiver Power Cal...](#) opens the configuration dialog for a receiver power calibration.



Power correction data can be stored to a cal group and applied to several channels; see description of the [Calibration Manager](#).

In remote control it is possible to read, modify and reload power calibration data. Refer to the description of the commands `SOURce<Ch>:POWer<Pt>:CORRection:DATA` and `[SENSe<Ch>:]CORRection:POWer<port_no>:DATA`.

Remote control: `SOURce<Ch>:POWer:CORRection...`
`[SENSe<Ch>:]CORRection:POWer...`

Source Power Cal...

Opens the configuration dialog for a source power calibration.



Purpose of a source power calibration

A source power calibration ensures accurate power levels of the generated wave at an arbitrary reference plane in the measurement path. The calibrated reference plane is typically the input of the DUT.

In a frequency sweep, the power at the reference plane is maintained at a constant *Cal Power* value. The source power calibration eliminates frequency response errors in the signal path between the source and the reference plane. It is possible to introduce an arbitrary attenuation or gain into the signal path so that the *Cal Power* is not restricted to the power range of the source. A typical application for a power calibration in a frequency sweep is the measurement of the gain of an amplifier across a frequency range but at a fixed input power.

In a power sweep, the power calibration ensures that the power at the reference plane is either constant or a linear function of the stimulus power. A typical application for a power calibration in a power sweep is the measurement of the gain of an amplifier across a power range but at a fixed frequency.

The correction data acquired in a frequency or power sweep is re-used if a *Time* or *CW Mode* sweep is activated.




Calibration procedure

The source power calibration requires an external [power meter](#), to be connected via GPIB bus, USB or LAN interface. Use the *USB-to-IEC/IEEE Adapter* (option [R&S ZVAB-B44](#)) to control devices equipped with a GPIB interface. The power sensor can be connected directly at the reference plane or to any other point in the test setup where the signal power is known to be proportional to the power at the reference plane.

The source power calibration involves several steps:

1. The analyzer performs a first calibration sweep at the source power that is likely to produce the target power (*Cal Power*) at the reference plane. A known attenuation or gain at the source port and in the signal path between the source port and the reference plane is taken into account.



2. The power measured at the reference plane is displayed in the calibration sweep diagram and compared to the *Cal Power*. The comparison serves as an input for the correction of the source power.
3. Steps 1 and 2 are repeated for a specified *Number of Readings* or after the deviation between the measured power at the reference plane and the *Cal Power* is below a specified *Tolerance*.
4. After the last calibration sweep, it is possible to perform an additional *Verification Sweep* in order to check the accuracy.

After a power calibration one can expect the power at the reference plane to be within the range of uncertainty of the power meter. After a change of the sweep points or sweep range, the analyzer [interpolates or extrapolates](#) the calibration data.



The *Source Power Cal* dialog provides the following control elements:

- *Calibrate – Source* contains all analyzer ports or external generators and frequency converters which can be used as a source for the calibrated wave quantity. The list contains all analyzer ports *Port 1* to *Port n*. For an R&S ZVA110 system with external test sets, *Port 1* and *Port 2* denote the external diplexer ports. Generators (*Gen 1*, *Gen 2* ...) must be configured explicitly in the *System Configuration – External*

Generators dialog before they appear in the list. Frequency converters (*Conv 1, Conv 2 ...*) must be configured in the *System Configuration – Frequency Converters* dialog. Only frequency converters with electronic attenuators (R&S ZVA-ZxxxE) can be power-calibrated.

- *Set as Stimulus Axis* causes the channel line of the active channel to show the (target) power of the calibrated source port instead of the channel base power (e.g. *Port 1 Pwr 0 dBm* instead of *Base Pwr 0 dBm*). This is particularly useful if the source port powers differ from each other and from the channel base power. For power sweeps, the original stimulus axis range is replaced by the target power range of the calibrated port. After the calibration, the selected stimulus axis is maintained and shows the calibrated source power at the reference plane. Use the context menu of the channel line or the *Channel – Mode – Port Configuration – Stimulus* dialog to select an arbitrary stimulus axis.
- *Take Cal Sweep* initiates a calibration sweep for the selected source. The progress of the sweep is monitored in the [calibration sweep diagram](#). After the necessary calibrations have been completed, a [message](#) in the trace list indicates the status of the power calibration.
- *Abort Sweep* stops a running sweep. The data acquired in the aborted sweep is discarded.
- The *Settings* panel displays the essential parameters of the source power calibration, to be defined in the [Modify Source Power Cal Settings](#) dialog.
- *Source Power Correction Off* can be selected/deselected as soon as power calibration data has been acquired for the selected source. If the box is checked, the calibration data is kept in memory but not applied to the source. The [Power Correction Off](#) softkey disables the power correction for all receivers and sources.
- *Modify Settings...* opens the [Modify Source Power Cal Settings](#) dialog.
- *Power Meter* selects an external power meter that is used to measure the exact source power at the calibration point. Power meters (Pmtr1, Pmtr2, ...) must be configured in the *System Configuration External Power Meters* dialog before they appear in the list. The buttons in the *Power Meter* panel provide settings for the selected power meter; see [Power Meter Settings](#) below.
- *Perform Verification Sweep after Cal* enables or disables a verification sweep that the analyzer performs after the source power calibration. The sweep is also displayed in the calibration sweep diagram. Its purpose is to test the accuracy of the source power calibration after the final correction data has been acquired. The final power calibration results are applied starting with the first sweep after the verification sweep.

Remote control: `SOURce<Ch>:POWer<Pt>:CORRection[:ACQuire]`
`SOURce<Ch>:POWer<Pt>:CORRection:COLLect[:ACQuire]`
`SOURce<Ch>:POWer<Pt>:CORRection[:STATe]`
`SOURce<Ch>:POWer<Pt>:CORRection:GENerator[:STATe]`
`SOURce<Ch>:POWer<Pt>:CORRection:PMETer:ID`
`SOURce<Ch>:POWer<Pt>:CORRection:COLLect[:ACQuire]:VERification[:STATe]`
`]`
`SOURce<Ch>:POWer<Pt>:CORRection[:ACQuire]:VERification:RESult?`

Calibration Sweep Diagram

The calibration sweep diagram displays the power measured by the external power meter while a source power calibration is performed.

- A trace is displayed for each calibration sweep.
- If *Perform Verification Sweep after Cal* is enabled in the *Source Power Cal* dialog, an additional


trace is displayed after the end of the calibration.

The diagram is automatically scaled so that the center corresponds to the selected *Cal Power*. For frequency sweeps, a horizontal trace close to the *Cal Power* indicates an accurate power calibration. For power sweeps, the ideal trace is a power ramp.

Below the sweep diagram, the status messages *Calibration in Progress/Finished* and *Verification in Progress/Finished* show the progress of the calibration procedure.

Viewing calibration sweeps in remote state


The analyzer provides calibration sweep diagrams for remote-controlled source and receiver calibrations. To view the progress of the calibrations, you have to switch on the display (use `SYSTem:DISPlay:UPDate ON` or the equivalent *Display On/Off* softkey in the remote screen). When a calibration sweep or a sweep sequence is initiated (e.g. `SOURce:POWer:CORRection:ACQuire PORT, 1`), the screen changes as shown below.

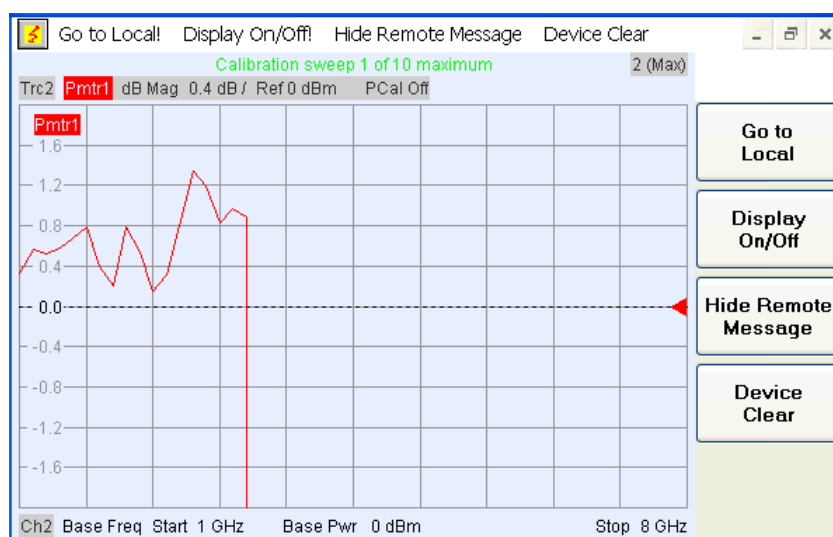

The current sweep number is indicated in the title line; the trace line indicates whether the power meter (*Pmtr<n>*) or the reference receiver reading (*a<n>(P<m>)*) is used. After completing the entire sequence of calibration sweeps (including a possible verification sweep), the analyzer returns to the previous measurement screen.

Modify Source Power Cal Settings

The *Modify Source Power Cal Settings* dialog displays the target power for the source power calibration and defines stop criteria.

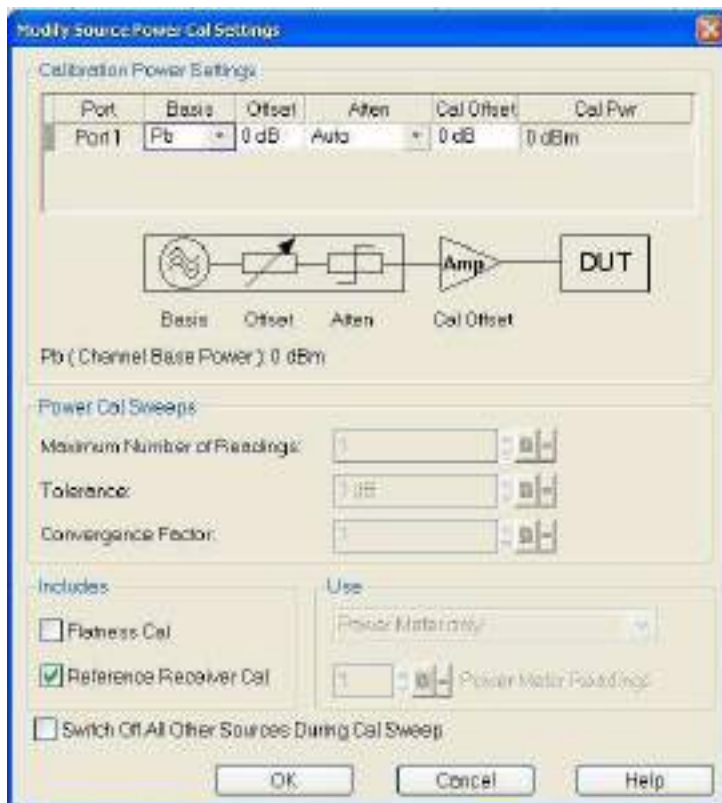

The dialog provides the following control elements:

- *Calibration Source Power Settings* shows the calibrated *Port(s)*, the *Basis* of the power conversion formula, the port power *Offset*, the source step *Attenuator* setting, *Cal (Power) Offset*, and the target power of the source power calibration at the calibration plane (*Cal Pwr*). The power settings are analogous to the settings in the [Port <n> Power](#) dialog.
- The parameters in the *Power Cal Sweeps* panel provide stop criteria for the calibration procedure: *Maximum Number of Readings* is a limit for the number of calibration sweeps. *Tolerance* denotes the maximum deviation of the measured power from the *Cal Power*. The calibration procedure is stopped if the *Maximum Number of Readings* is reached **or** if the measured power is within the *Tolerance*.
The *Convergence Factor* can be used to modify the amount of power correction after each calibration sweep. The deviation from the desired power at the reference plane, as measured by the external power meter or a-wave receiver, is multiplied by the selected convergence factor. The variable attenuator setting is modified by the product of <power deviation> times <convergence factor>. With a convergence factor larger (smaller) than 1, the source power correction after each power calibration step is larger (smaller) than the measured deviation from the desired power. Convergence factors different from 1 are indicated only if the test setup includes non-linear components. External frequency converters may require convergence factors <1 at some source powers and frequencies. In general, it is recommendable to start the calibration with a convergence factor 1 and choose smaller values (0.8 ... 0.4) in case that the iteration fails. Inappropriate convergence factors can slow down the source power calibration or even prevent convergence.
- *Includes – Flatness Cal* enables the iterative source power calibration with the stop criteria specified above. This corresponds to the normal source calibration procedure. If the *Flatness Cal* is disabled, the analyzer performs a single calibration sweep in order to calibrate the reference receiver (see below) but without overwriting the previous source power calibration data. The *Port n Cal Power* and *Power Meter Readings* are disabled. A [frequency extension](#) with an external

converter without electronic attenuator is a typical example for a measurement where the *Flatness Cal* should be disabled.

- *Includes – Reference Receiver Cal* enables a calibration of the reference receiver of the active source port together with the source power calibration. The reference receiver reading is set equal to the power reading of the external sensor. This can replace a subsequent a-wave receiver power calibration.
- *Use Reference Receiver after <n> Power Meter Readings* enables the **fast power calibration** mode where the external power meter is used for the first <n> calibration sweeps only. The analyzer uses its reference receiver for the following, iterative calibration sweeps. The gain in speed increases with the number of readings minus <n>. The verification sweep (if it is enabled) is also performed using the reference receiver; it may be used to estimate the accuracy of the fast power calibration. See also [Conditions for fast power calibration](#) below.
Use Power Meter only disables fast power calibration; the power meter is used for all calibration sweeps.
Reference Receiver only is available while the *Reference Receiver Cal* is disabled. This method also requires an existing source power calibration of the active channel and test setup for a particular target power <Cal Power 1>, including a reference receiver calibration. The calibration for the new target power <Cal Power> is based on the existing calibration data at <Cal Power 1>. During the sequence of calibration sweeps, the source power is varied such that the reference receiver indicates the new power <Cal Power>. Assuming a sufficiently linear behavior of the components in the test setup, <Cal Power> is also available at the reference plane.
- If *Switch off All Other Sources...* is checked, the power at all sources except the calibrated source is switched off during the calibration. This is advisable especially if the power calibration is intended for intermodulation measurements where different signals are combined.



The analyzer performs either a *Flatness Cal* or a *Reference Receiver Cal*, or both. The two options must not be disabled simultaneously.



Conditions for fast power calibration


To use fast power calibration, ensure that the analyzer is configured as follows:

1. An internal source is used.
2. The *Reference Receiver Cal* is enabled.
3. On an R&S ZVA network analyzer that is equipped with option R&S ZVA<frequency>-B16, *Direct Generator/Receiver Access*, the jumper for the REF OUT / REF IN connectors is connected so that the reference receiver loop is closed.

Remote control: `SOURce<Ch>:POWer<Pt>:CORRection:NREadings`
`SOURce<Ch>:POWer<Pt>:CORRection:COLLect:AVERAge[:COUNT]`
`SOURce<Ch>:POWer<Pt>:CORRection:COLLect:AVERAge:NTOLerance`
`SOURce<Ch>:POWer<Pt>:CORRection:COLLect:CFACTOR`
`SOURce<Ch>:POWer<Pt>:CORRection:COLLect:FLATness`
`SOURce<Ch>:POWer<Pt>:CORRection:COLLect:RREceiver`
`SOURce<Ch>:POWer<Pt>:CORRection:FAST`
`SOURce<Ch>:POWer<Pt>:CORRection:COLLect:METHod`
`SOURce<Ch>:POWer<Pt>:CORRection:COLLect:PMReadings`
`SOURce<Ch>:POWer<Pt>:CORRection:OSources[:STATe]`

Power Meter Settings

The *Power Meter* settings in the *Source Power Cal* dialog (and similar dialogs) are used to select the external power meter that is used to measure the exact source power at the calibration point and to ensure maximum accuracy of the power measurement. Power meters (*Pmtr1*, *Pmtr2*, ...) must be configured in the *System Configuration – External Power Meters* dialog before they appear in the list.

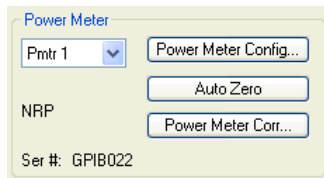

The *Power Meter* panel provides the following buttons.

- *Power Meter Config...* opens the *System Configuration – External Power Meters* dialog.
- *Auto Zero* initiates a zeroing procedure of the power meter; see background information below.
- *Power Meter Correction...* opens a dialog to define the frequency range for the sensitivity correction of the power meter and an additional transmission coefficient in front of the power meter or the DUT.



Zeroing

Zeroing calibrates the external power meter by adjusting its reading at zero signal power. For this purpose, the RF cable between the analyzer and the power sensor must be disconnected (see tips below!). R&S power sensors and power meters automatically detect the presence of any significant input power. This aborts zeroing and generates an error message. Zeroing can take a few seconds, depending on the power meter model; refer to the documentation of your external power meter for more information.



Repeat zeroing:

- During warm-up after switching on or connecting the instrument
- After a substantial change of the ambient temperature
- After fastening the power meter to an RF connector at high temperature
- After several hours of operation
- When very low-power signals are to be measured, e.g. less than 10 dB above the lower measurement limit.

A reset of the network analyzer does not affect the last zeroing result.

Power Meter Correction

Defines the frequency range for the sensitivity correction of the power meter and an additional transmission coefficient in front of the power meter or the DUT.



The settings appear in two panels:

- Frequency Information for Power Meter* selects the origin of the frequency information for the power meter.

For best accuracy, power meters must know the exact frequency of the measured signal. If the signal path between the source and the power meter contains a frequency-converting device, the frequency at the power meter differs from the frequency of the calibrated source. It is recommended to define the modified frequency range for the power meter in the *Port Configuration* dialog and select *From Power Meter Entry in Port Configuration*. This setting overwrites the analogous setting in the *Power Meter Correction* dialog for the power sensor measurement.
- The *Additional Two-Port* settings allow you to modify the power calibration data in order to account for an additional two-port device with known transmission coefficients. Configuration of the transmission coefficients and activation (*Take Transmission Coefficient into Account*) are independent from each other.
- In Front of* selects the position of the additional two-port in the test setup.

If *Power Sensor (during Calibration)* is active, the analyzer **increases** the measured power sensor values by the two-port transmission coefficients to ensure that a subsequent measurement without the additional two-port is correctly calibrated.

If *Device under Test (during Measurement)* is active, the analyzer **decreases** the measured power sensor values by the two-port transmission coefficients to move the reference plane of the power calibration towards the input of the DUT. For examples see background information below.
- The *Transmission Coefficient* panel defines the transmission characteristics of the additional two-port in the calibrated frequency range. The required information is a list of transmission coefficients at different frequency values. It is possible to edit the list manually, use one of the traces in the active setup (*Use Trace*), or import the list from a trace file (*Import Data...*). The file import dialog contains a checkbox for renormalization, in analogy to the *Import Complex Data* dialog. The imported trace file must be either in Touchstone (*.s<n>p) or in *.csv format; see also *Trace File Formats*.

The list must contain at least one frequency point before you can enable the additional two-port correction. In a power, time or CW mode sweep, one point at the fixed CW frequency is sufficient. In a frequency sweep it is possible to enter several values to account for a frequency-dependent

attenuation.


You can also save the displayed list to a power meter correction list file with extension (*.pmcl) and re-load it in later sessions (*Save List...*, *Load List...*).



Test setups with "additional two-port" devices

The two test setups for additional two-ports can be depicted as follows.

Case A: 2-port in front of power sensor (during calibration)

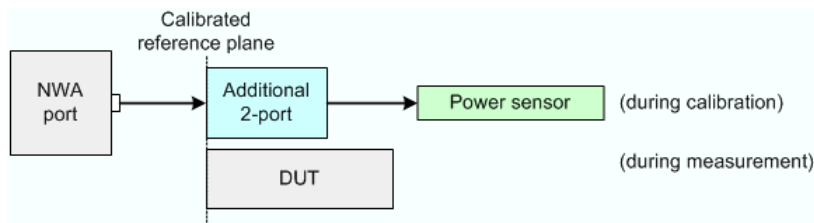


Test and measurement procedure:

1. Perform the calibration with the additional two-port between the analyzer port and the power sensor. During the calibration the analyzer increases the power sensor values by the 2-port transmission coefficients. The calibrated reference plane corresponds to the input of the additional 2-port.
2. Perform the measurement without the additional two-port.

Practical example:

- An adapter or attenuator with known attenuation is needed to connected the power sensor to the NWA test port. The transmission coefficients of the adapter are used for the power meter correction.

Case B: 2-port in front of DUT (during measurement)

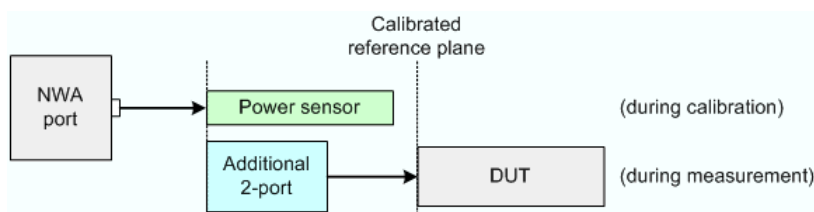

Test and measurement procedure:

1. Perform the calibration without the additional two-port. During the calibration the analyzer decreases the power sensor values by the 2-port transmission coefficients. The calibrated reference plane corresponds to the output of an additional 2-port which is placed in-between the NWA port and the DUT.
2. Perform the measurement with the additional two-port.

Practical example:

- On-wafer measurements. The power sensor cannot be directly connected to the input of the DUT. The transmission coefficients of the wafer probe are used for the power meter correction.

Remote control:

```
[SENSe<Ch>:]PMMO ON | OFF
SOURce<Ch>:POWer:CORRection:TCOefficient[:STATe]
SOURce<Ch>:POWer:CORRection:TCOefficient:CALibration
SOURce<Ch>:POWer:CORRection:TCOefficient:INSErt
SOURce<Ch>:POWer:CORRection:TCOefficient:DEFine
```

```

SOURCE<Ch>:POWER:CORRection:TCoefficient:COUNT?
SOURCE<Ch>:POWER:CORRection:TCoefficient:DELeTe[:DUMMy]
SOURCE<Ch>:POWER:CORRection:TCoefficient:DELeTe:ALL
SOURCE<Ch>:POWER:CORRection:TCoefficient:FEED
MMEMory:LOAD:CORRection:TCoefficient
"<file_name>"[, "parameter"]
MMEMory:SAVE:CORRection:TCoefficient "<file_name>"

```

Receiver Power Cal...

Opens the configuration dialog for a receiver power calibration. The receiver power calibration data is acquired in a calibration sweep after appropriate selection of the calibrated wave quantity and the source.



Purpose of a receiver power calibration

A receiver power calibration ensures that the power readings at a specified input port of the analyzer agree with the source power level calibrated at an arbitrary reference plane. Typically, the reference plane is at the input of the receiver so that the calibration eliminates frequency response errors in the calibrated receiver.

A receiver power calibration generally improves the accuracy of power (wave quantity) measurements.

The correction data acquired in a frequency or power sweep is re-used if a *Time* or *CW Mode* sweep is activated.



Calibration procedure and calibration sweep

The receiver power calibration is based on a wave with known power.

- No external connection is needed for a receiver power calibration on the reference receiver (wave quantity a_n with Port n used as a source). Besides, the reference receiver is automatically calibrated together with any source power calibration of an analyzer port unless this feature is disabled in the *Modify Source Power Cal Settings* dialog.
- A reference receiver power calibration with a different source port (wave quantity a_n with source Port m ; $n \neq m$) can make sense if the *Direct Generator and Receiver Access* connectors (option R&S ZVA<frequency>-B16) are used.
- Calibration of a received wave b_n involves an external test setup. The received wave to calibrate can be generated by the analyzer or an [external generator](#).

The receiver power calibration involves a single calibration sweep. The calibration sweep is performed with current channel settings but with a maximum IF bandwidth of 1 kHz. Smaller IF bandwidths are maintained during the calibration sweep; larger bandwidths are restored after the sweep.

The analyzer measures the received power at each sweep point, compares the result with the known power of the source, and compiles a correction table.


An acoustic signal indicates the end of the calibration sweep. At the same time, a [message](#) next to the calibrated source indicates the status of the receiver power calibration. After a change of the sweep points or sweep range, the analyzer [interpolates or extrapolates](#) the calibration data.



The *Receiver Power Cal* dialog provides the following control elements:

- *Wave Quantity to Calibrate* provides two pull-down lists to select one of the transmitted waves a_n or one of the received waves b_n for the calibration. Each power calibration only applies to the selected wave quantity in the active measurement.
- *Receiver Power Correction Off* can be selected/deselected as soon as power calibration data has been acquired for the active wave quantity. If the box is checked, the calibration data is kept in memory but not applied to the wave quantity. The [Power Correction Off](#) softkey disables the power correction for all receivers and sources.
- *Calibration Source* contains all analyzer ports or external generators which can be used as a source for the calibrated wave quantity. The list contains all analyzer ports *Port 1* to *Port n*. Generators (*Gen 1*, *Gen 2* ...) must be configured explicitly in the *System Configuration – External Generators* dialog before they appear in the list.

Beneath the selected source, a label displays the current status of the selected source's *Flatness* and/or *Reference Rcvr* power calibration (if available)



See [Power Calibration State Labels](#) for the possible states.

- If an analyzer port (*Port 1* ...) is selected as a *Calibration Source*, the *Reference Power Value* for the receiver calibration can be selected in addition. The *Reference Receiver* values are potentially more accurate, provided that an accurate source power calibration including a reference receiver calibration is available (*Channel – Calibration – Start Power Cal – Source Power Cal... – Modify Settings – Reference Receiver Cal: On*). Alternatively, you can use the (factory-calibrated) nominal source powers.
- *Take Cal Sweep* initiates a calibration sweep for the selected wave quantity and source. The progress of the sweep is monitored in the *Sweep* progress bar.
- *Abort Sweep* stops a running sweep. The data acquired in the aborted sweep is discarded.



NOTE The accuracy of the receiver power calibration depends on the accuracy of the source. Depending on the test setup and reference plane, it is recommendable to perform a source power calibration before the receiver power calibration.

Remote control: `[SENSe<Ch>:]CORRection:POWer:ACQuire`


```
[SENSe<Ch>:]CORRection:POWer:AWAVe[:STATe]
[SENSe<Ch>:]CORRection:POWer:DATA
[SENSe<Ch>:]CORRection:POWer[:STATe]
```

Interpolation and Extrapolation

The analyzer can interpolate and extrapolate power correction data so that a source or receiver power calibration can be reused after a change of the frequency sweep range:

- At new sweep points within the calibrated sweep range, interpolation is applied to calculate the correction data. A label *PCai* in the trace list indicates an interpolated power calibration.
- At new sweep points outside the calibrated sweep range, the correction values are extrapolated: Sweep points below the lowest calibrated frequency are assigned the correction value of the lowest frequency. Sweep points above the highest calibrated frequency are assigned the correction value of the highest frequency. A label *PCax* in the trace list indicates an extrapolated power calibration.

Power Corr All Ports On

Applies all available source and/or receiver power calibrations to the active channel. This function is disabled if no power correction data has been acquired for the active channel.



Uncheck the ...*Power Correction Off* boxes in the [Source Power Cal](#) and [Receiver Power Cal](#) dialogs to enable an individual source or receiver calibration. The settings are also accessible from the *Port Configuration* dialog. Press [Power Corr All Ports Off](#) to disable the power calibration of all sources and receivers.

The checkmarks next to the *Power Corr All Ports On / Off* menu commands indicate the power calibration state of the active channel:

- If *Power Corr All Ports On* is checked, the power calibration of the active channel is applied without exceptions.
- If *Power Corr All Ports On* is checked, the power calibration of the active channel is not applied.
- If none of the commands is checked, the power calibration of the channel is applied but one or several source or receiver power calibrations have been disabled (*Source Power Cal / Receiver Power Cal / Port Configuration* dialogs).

Remote control: `SOURce<Ch>:POWer:CORRection:STATe ON`
`[SENSe<Ch>:]CORRection:POWer:STATe ON`

Power Corr All Ports Off

Disables all source and receiver power calibrations of the active channel so that all power correction data is ignored. This function is disabled if no power correction data has been acquired for the active channel.



Check the ...*Power Correction Off* boxes in the [Source Power Cal](#) and [Receiver Power Cal](#) dialogs to disable an individual source or receiver calibration. The settings are also accessible from the *Port Configuration* dialog. Press [Power Corr All Ports On](#) to re-enable the power calibration of all sources and receivers. For more information refer to the description of [Power Corr All Ports On](#).


Remote control: `SOURce<Ch>:POWer:CORRection:STATe OFF`
`[SENSe<Ch>:]CORRection:POWer:STATe OFF`

Calibration Manager

Opens a dialog to store system error correction and power correction data to the cal pool and to assign stored correction data to channels.

Cal pool

The cal pool is a collection of correction data sets (cal groups) that the analyzer stores in a common directory `C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Data`. Cal groups in the pool can be applied to different channels and setups. Each cal group is stored in a separate file named `<CalGroup_name>.cal`. The cal group name can be changed in the *Calibration Manager* dialog.

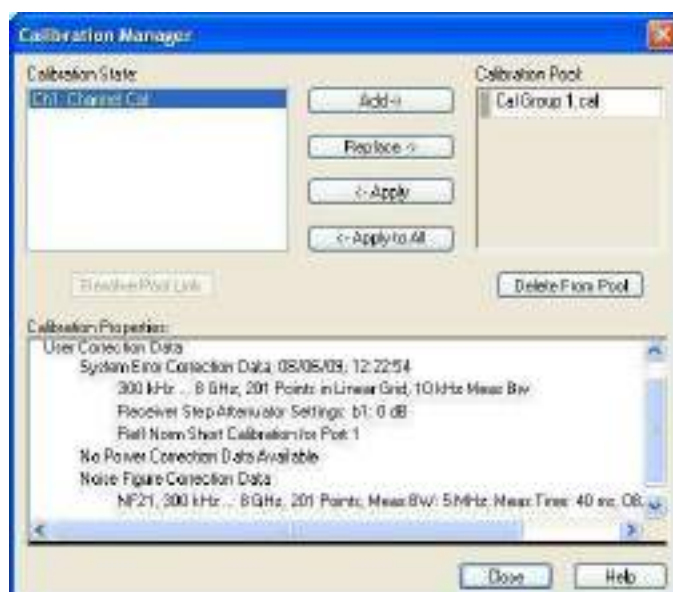

The *Calibration Manager* dialog contains three main panels:

- *Calibration State* lists all channels and their current calibration state.
- *Calibration Pool* contains a list of all stored correction data sets.
- *Calibration Properties* displays the basic channel settings and describes the *System Error Correction* and the *Power Correction* which is available for the channel selection in the *Calibration State* panel. If available, the *Noise Figure Correction Data* (with option R&S ZVAB-K30) is displayed in addition.

Full n-port system error corrections for $n > 2$ ports can be performed with a variable number of through connections (see [Full n-Port Calibration with Reduced Number of Through Connections](#)). For these calibration types, the *System Error Correction* section contains the Throughs that were actually measured.

When [Simultaneous Measurement with Frequency Offset](#) was active during calibration then the IF offsets used in the individual calibration measurements are displayed as well.



Calibration states

One of the following calibration states is assigned to each of the channels listed in the *Cal State* table:

- *No Calibration* No specific channel correction data is available. The factory system error correction is used. This is the default situation when a new setup is created (File – [New](#)).
- *Channel Cal* A system error correction and/or power correction with channel-specific correction data is active. A new calibration of the channel affects the channel-specific correction data only; no cal group file will be overwritten..
- *Uses <CalGroup>* A system error correction with one of the correction data sets (cal groups) stored in the cal pool is active. A new calibration of the channel replaces the correction data in the cal pool and may affect several channels, see below.

The channel calibration of the active channel is also applied to a new channel created via [Add Channel + Trace](#). *Corr Off* indicates that the system error correction for the channel has been deactivated using [Correction Off](#).



If a new calibration is performed for a channel assigned to a cal group (marked as *Uses <CalGroup>*), the correction data overwrites the cal group data, so the new calibration will affect all channels assigned to the cal group. The network analyzer generates a notice message "New calibration will overwrite cal pool!" when opening the first dialog ([Select Physical Port Connectors](#)) of the calibration wizard.

The buttons in the upper half of the dialog are used to modify the Cal Pool and apply pool data to channels:

- *Add* -> copies the correction data of the selected channel to the cal pool, generating a new pool member (cal group).
- *Replace* -> overwrites a cal group with new correction data.
- *<- Apply* assigns the selected cal group to the selected channel.
- *<- Apply to All* assigns the selected cal group to all channels in the *Cal State* table.
- *Resolve Pool Link* deletes the assignment between the selected channel (*Ch<n>: Uses <CalGroup_name>*) and the cal group. The correction data from the cal group *<CalGroup_name>* is used as a channel calibration for *<Ch<n>>*, the *Calibration State* list displays *Ch<n>: Channel Cal*.
- *Delete From Pool* deletes the selected cal group.



You can apply any correction data set (cal group) from the Cal Pool to several channels, which may belong to different setups. When doing so make sure that the [port configuration](#) of the channels (connectors, state, ...) and the cal group are compatible. You can also use a cal group stored in the Cal Pool to define a channel-specific calibration. Apply the cal group to the channel and click *Resolve Pool Link*.

Remote control:

```
MMEMory:STORe:CORRection <Ch>, "<file_name>"
MMEMory:LOAD:CORRection <Ch>, "<file_name>"
MMEMory:LOAD:CORRection:RESolve <Ch>, "<file_name>"
MMEMory:DELeTe "C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Data\<file_name>"
MMEMory:DELeTe:CORRection "<file_name>"
[SENSe<Ch>:]CORRection:DATE?
SENSe<Ch>:]CORRection:DATA:PARAmeter?
[SENSe<Ch>:]CORRection:SState?
SOURce<Ch>:POWER:CORRection:DATA:PARAmeter<Wave>?
```

SOURCE<Ch>:POWER:CORRection:DATA:PARAmeter:COUNT?
 MMEMory:LOAD:CORRection:MERGe (merge calibration files)

Calibration Kits

Opens a dialog to manage the calibration kits in use, add new kits and import or export kits.



Calibration kits

A calibration kit is a set of physical calibration standards for a particular connector type. The magnitude and phase response of the calibration standards (i.e. their S-parameters) must be known or predictable within a given frequency range.

The standards are grouped into several types (open, through, match,...) corresponding to the different input quantities for the analyzer's error models. The standard type also determines the equivalent circuit model used to describe its properties. The circuit model depends on several parameters that are stored in the cal kit file associated with the calibration kit.

As an alternative to using circuit models, it is possible to describe the standards by means of S-parameter tables stored in a file.

The analyzer provides a large number of predefined cal kits but can also import cal kit files and create new kits:

- A selection of predefined kits with different [types of parameters](#) is available for all connector types. The parameters of these kits are displayed in the [Add/Modify Standards](#) dialog, however, it is not possible to change or delete the kits.
- Imported and user-defined kits can be changed in the *Calibration Kits* dialog and its various sub-dialogs.

Calibration kits and connector types are [global resources](#); the parameters are stored independently and available irrespective of the current setup.



The *Calibration Kits* dialog contains a series of buttons, each of them opening a dialog:

- *Import Kit* imports a previously stored [cal kit file](#). The analyzer asks whether to set the imported calibration kit active.
- *Add Kit* combines different standards to form a new calibration kit.
- *View/ Modify Kit* adds or deletes standards in an imported or user-defined calibration kit and/or

changes their parameters.

- *Copy Kit to...* creates a copy of the selected kit with a new cal kit name.
- *Delete Kit* removes an imported or user-defined kit from the list of *Calibration Kits in Use*.
- *Export Kit* exports calibration kit data to a [cal kit file](#).
- *Avail. Conn. Types* adds or deletes connector types.

The *Calibration Kits in Use*: table is used to select a calibration kit for each connector type. The pull-down lists contain all kits for the individual connector types.



Rohde&Schwarz offers special calibration kits for measurements involving external frequency converters. For a description of the standards and the system error procedure procedure refer to section [Waveguide Calibration Kits](#).

Remote control: `[SENSe<Ch>:]CORRection:CKIT:<conn_type>:SElect '<ckit_name>'`
`[SENSe<Ch>:]CORRection:CKIT:SElect '<conn_type>', '<ckit_name>'`
 (the previous two commands also create new cal kits)
`[SENSe<Ch>:]CORRection:CKIT:DElete '<ckit_name>'`

Query connector types, calibration kits, and standards:

`[SENSe<Ch>:]CORRection:CONNection:CATalog?`
`[SENSe<Ch>:]CORRection:CKIT:CATalog?`
`[SENSe<Ch>:]CORRection:CKIT:STANdard:CATalog?`

Cal Kit Parameter Types

The analyzer uses three types of parameters to describe the calibration standards. The parameter type is the same for all standards in a kit and therefore annexed to the kit name:

New_Kit
85032B/E
85032F
85054B
85054D
N 50 Ω Ideal Kit
ZCAN 50 Ω
ZV-Z21 typical

- **Universal parameters** (*no label*) describe calibration kit models with highly standardized components so that the parameters are valid for all calibration kits of the model.
- **Typical parameters** (*labelled typical*) approximately describe a calibration kit model. To correct for deviations between the standards, each kit of the model is individually measured and delivered with an additional, kit-specific parameter set. Therefore each typical parameter set <kit_name> typical is complemented by an additional parameter set <kit_name> containing optimized parameters for an individual kit.
- **Ideal parameters** (*labelled Ideal Kit*) describe an idealized calibration kit for each connector type; see below.



Make sure to use universal or individual parameter sets if you need to obtain high-precision results. The precision of the calibration kit parameters determine the accuracy of the system error correction and of the measurements. The [calibration wizard](#) displays a warning if you use a typical or ideal parameter set to calibrate a channel.

Calibration kits can be obtained as network analyzer accessories; refer to the data sheet for the relevant

ordering information. The name of all parameter sets is equal to the name of the corresponding calibration kit model.



Ideal parameters

All ideal kits contain the following standards:

Standard (Gender)	R (Load)	Electrical Length (Offset)
Open (f, m)	$\infty \Omega$	0 mm (Delay: 0 s)
Short (f, m)	0 Ω	0 mm
Offset Short (f, m)	0 Ω	10 mm
Match (f, m)	Z_0 (reference impedance of the connector type)	0 mm
Sliding Match (f, m)	–	0 mm
Reflect (f, m)	$\infty \Omega$	0 mm
Through (ff, mm, mf)	–	0 mm
Line (ff, mm, mf)	–	10 mm
Attenuation (ff, mm, mf)	–	0 mm
Symm. Network (ff, mm, mf)	–	0 mm

The following additional parameters are used:

- Characteristic impedance: Z_0 (reference impedance of the connector type)
- Loss: 0 dB / sqrt(GHz) or (0 G Ω / s) in Agilent mode
- All inductance and capacitance parameters are set to zero.

Cal Kit Files

Calibration kit files can be used to store the parameters of a particular calibration kit, to re-load the data and to exchange calibration kits from one network analyzer to another.



Cal kit file contents

Cal kit files are independent of the current [setup](#) and contain the following information:

- Name and label of the calibration kit
- Connector type including all [connector type parameters](#) (name, polarity, offset model, reference impedance)
- Type, gender and label of all standards in the kit together with the [circuit model parameters](#) (offsets, load) or S-parameter tables (.snp file) that are necessary to determine its magnitude and phase response.

By default cal kit files are stored in the C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Kits directory.

- To **export** cal kit data, the analyzer uses a specific binary file format *.calkit.
- Three different **import** file formats are supported: ZVA-specific binary cal kit files (*.calkit), ZVR-specific binary cal kit files (*.ck), cal kit files in Agilent-specific ASCII formats (*.csv, *.prn; see notes below).



To import a ZVA-specific or ZVR-specific cal kit file (*.ck or *.ckit) you can also use the Windows Explorer and simply double-click the file or drag and drop the file into the NWA application. The imported cal kit file is automatically set active.



Importing older ZVR cal kit files

On loading some older ZVR-specific *.ck files, e.g. the ZV-Z23 cal kit file, the ZVA generates the message *File does not comply with instrument calibration kit file format*. The files must be converted using a ZVR network analyzer equipped with a firmware version V3.52 or higher. Proceed as follows:

1. On the ZVR, press *CAL – CAL KITS – MODIFY KITS – INSTALL NEW KIT* to import the *.ck file.
2. Press *CREATE INST FILE* in the same submenu to export the *.ck file in a ZVA-compatible format.
3. Import the converted file into the ZVA.

*.csv cal kit files: VNA Cal Kit Manager 2.1

The *VNA Cal Kit Manager* is a free, Windows-based software tool intended to import, edit, and export *.csv cal kit files. The software is available for download at <http://www.vnahelp.com/products.html>. The decimal separator used by the *VNA Cal Kit Manager* V2.1 depends on the language version of the Windows operating system: Cal kit files generated on an English operating system contain dots, the ones generated on a German system contain commas.

The network analyzer expects the dot as a separator and displays an error message when a *.csv file with commas is loaded. Please install the *VNA Cal Kit Manager* V2.1 on an appropriate (e.g. English) Windows version to avoid trouble.

*.prn cal kit files: PNA Cal Kit Editor

The network analyzer can import and process cal kit files created with the *PNA Cal Kit Editor*. The files use the extension *.prn; the data format is identical to the *.csv format.

The decimal separator used by the *PNA Cal Kit Editor* depends on the language version of the Windows operating system: Cal kit files generated on an English operating system contain dots, the ones generated on a German system contain commas.

The network analyzer expects the dot as a separator and displays an error message when a *.prn file with commas is loaded. Please install the *PNA Cal Kit Editor* on an appropriate (e.g. English) Windows version to avoid trouble.


Remote control: `MMEMory:LOAD:CKIT "file_name"`
`MMEMory:STORe:CKIT "kit_name", "file_name"`
`MMEMory:STORe:CKIT:WLABel "ckit_name", "ckit_label", "file_name"`
`[SENSe<Ch>:]CORRection:CKIT:INSTall "<file_name>"`

Add / View / Modify Calibration Kit

Combines different standards to form a new calibration kit, assigning a connector type and further attributes (name, labels). This dialog is opened from the *Calibration Kits* dialog using the *Add Kit...* button (the dialog title is *Add Calibration Kit*) or using the *View/Modify Kit* button (the dialog title is *View Calibration Kit* or *View / Modify Calibration Kit*). The functionality of both dialog versions is the same.



If *Add Calibration Kit* is used for a predefined calibration kit, the *View / Modify Standard...* button can be used to open the *View / Modify Standard in <kit_name>* dialog check the standard parameters. All other controls are inactive.

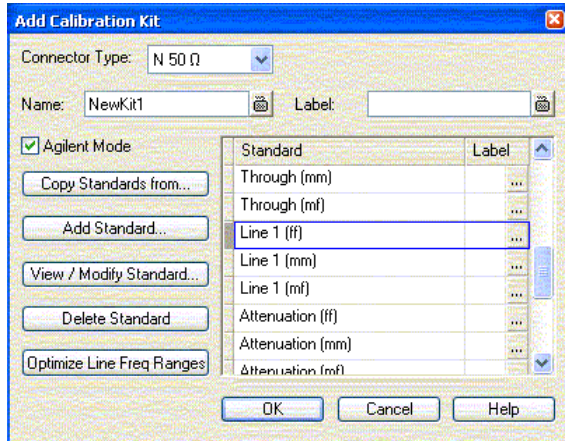

In its upper part the *Add Calibration Kit* dialog contains several controls to do the following:

- Select a predefined or user-defined *Connector Type*.
- Insert the (unique) *Name* of the new kit and assign a *Label*.
- Qualify whether or not the *Offset* and *Load* parameters for the standards are defined and displayed in *Agilent Mode*.



Assigning a label to user-defined calibration kits is optional. However, the label is displayed in many dialogs and can provide useful information about the kit, e.g. its serial number. It is even possible to assign several calibration kits with the same name, distinguished by their label, to a common connector type. See also [\[SENSe<Ch>:\]CORRection:CKIT... with Labels](#).

The table in the center of the dialog lists all standards in the new kit together with either their gender or their port assignment (see [Restrict Port Assignment](#)) and the label (if defined). Clicking a standard opens the *View / Modify Standard in <kit_name>* dialog where it is possible to change the parameters. Several buttons can be used to change the entries in the list.



Using the dialog buttons

- *Copy Standards from...* opens a dialog to copy standards from another calibration kit to the new kit.
- *Add Standard...* selects, defines and adds a new standard to the kit. A calibration kit may only contain a single standard of each type.
- *View / Modify Standard...* displays or changes the properties of the selected standard.
- *Delete Standard* removes the selected standard from the list and from the calibration kit.
- *Optimize Line Freq Ranges* is available if the calibration kit contains two or more Line standards with different electrical lengths. This button adjusts the frequency ranges of the Lines according to the rules described in section [TRL Calibration with Two Lines](#).
View the properties of the Line standards in order to check (and possibly change) the adjusted *Min Freq* and *Max Freq* values. Notice that, during a calibration with several lines, the analyzer will have to re-calculate the transition frequencies, depending on the sub-set of standards that you actually use.



Use *Copy Standards from...* to avoid the (re-)definition of their properties. Standards are copied together with their parameters and their label, which you can modify once they belong to the new kit.

Remote control: `[SENSe<Ch>:]CORRection:CKIT:LABel`
`[SENSe<Ch>:]CORRection:CKIT:LLABel`

Copy Standards from


Copies standards together with their parameters from a calibration kit in use to a new calibration kit. This dialog is opened from the [View / Modify Calibration Kit](#) dialog (*Copy Standards from...* button).



In the dialog, it is possible to select one of the calibration kits in use (*Kit Name*) and select either all or a single standard to be copied. A calibration kit may only contain a single standard of each type.

Select Cal Kit to Delete

Displays a list of calibration kits to be deleted. This dialog is opened from the [Calibration Kits](#) dialog (*Delete Kits...* button).

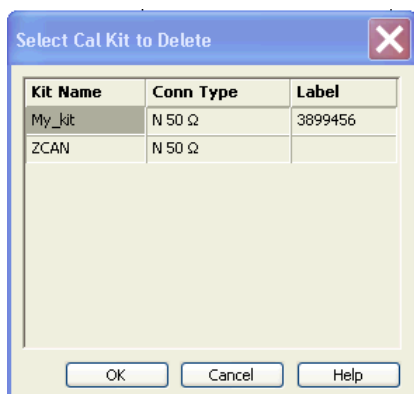

The table shows the imported and user-defined calibration kits with their name, connector type and label (if defined). *OK* deletes the selected kit. Predefined kits cannot be deleted.

Available Connector Types

Displays and modifies the list of available connector types. This dialog is opened from the [Calibration Kits](#) dialog (*Connector Types...* button).



The list shows the available connector types with their name (*Conn Type*), polarity (*Sexless*) and reference impedance (*Ref Imp*). The *Offset Model* describes the mode of wave propagation in the transmission lines of the standards associated with the connector type. The buttons below are used to add and delete user-defined connector types. Deleting a connector type will also delete all calibration or adapter kits assigned to it.



Impact of reference impedance

The reference impedance (*Ref Imp*) Z_0 for the connectors is a critical value that is displayed in the *Port Configuration* menu and represents an input value for various parameter conversions. Z_0 enters into:

- The calculation of the S-parameters for the calibration standards associated with the connector type, provided that they are derived from a circuit model (*Add/Modify Standard* dialog).
- The calculation of the (default) reference impedances for balanced ports (*Def. Balanced Port* tab of the *Balanced Ports and Port Groups* dialog).
- The calculation of **impedance** and **admittance** parameters.



Storing connector type settings

Calibration kits and connector types are **global resources**; the parameters are stored independently and available irrespective of the current setup. The connector type settings are always stored together with the associated calibration kit parameters. It is possible to export and import the connector settings using *Export Kit...* and *Import Kit...* in the *Calibration Kits* dialog.

The name, polarity and reference impedance of a user-defined connector can be changed in the table. The button in the *Offset Model* column opens the *Offset Model* dialog to define the propagation mode in detail.




NOTE After assigning a calibration or adapter kit to a user-defined connector type, you can still change its name, offset model and reference impedance. Switching between sexed and sexless will delete all kits assigned to the connector type.

Remote control: `[SENSe<Ch>:]CORRection:CONNection`
`[SENSe<Ch>:]CORRection:CONNection:DELeTe`

Offset Model of <Standard>

Defines the wave propagation mode in the lines of the standards associated with the connector type. This dialog is opened from the *Available Connector Types* dialog (button in the table).

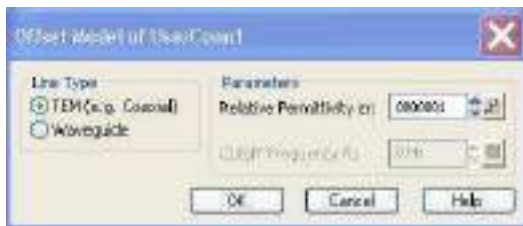

The *Parameters* to be selected depend on the *Line Type*:

- If the calibration kit standards contain lines with transverse electric propagation mode (TEM), then the *Relative Permittivity* ϵ_r of the dielectric can be defined. The default permittivity is the value for air. TEM-type lines have no cutoff frequency.
- If the calibration kit standards contain waveguides, then the lowest frequency where a wave propagation is possible (*Cutoff Frequency* f_c) can be defined. The default cutoff frequency is 0 Hz (propagation at all frequencies). No relative permittivity is needed for waveguides.



The impedance for waveguides is frequency-dependent. If a waveguide line type is selected, various dialogs (e.g. Add Standard...) will indicate varies instead of a definite impedance value.



Impact of offset model parameters

The offset model parameters are used for the calculation of the S-parameters for the calibration standards associated with the connector type, provided that they are derived from a circuit model ([Add/Modify Standard](#) dialog).

- For TEM-type lines, the relative permittivity ϵ_r is needed for the conversion of a ZVR-type *Loss* (in units of dB/sqrt(GHz)) into an Agilent-type *Offset Loss* (in units of GΩ/s) and vice versa (see [Offset](#) and [Load](#) parameters). The *Electrical Length* and *Delay* values in the *Modify Offset* dialog are directly entered and therefore independent of ϵ_r .
- For waveguides, the low frequency cutoff frequency f_c is important because no wave propagation is possible at frequencies below f_c . If a standard is measured in order to acquire calibration data, the analyzer checks the low frequency cutoff. If the start frequency of the sweep range is below f_c , then the calibration wizard generates an error message.

The offset model parameters are not used except in the context of calibration. The offset parameter definitions (see [Mechanical Length](#)) are based on independent ϵ_r values.


Remote control: `[SENSe<Ch>:]CORRection:CONNection`

Add or View / Modify Standard

Defines, displays or modifies the properties of the calibration standards in a particular calibration kit. This dialog is opened from the [Add or View / Modify Calibration Kit](#) dialog ([Add Standard...](#) or [View / Modify Standard...](#) buttons). Depending on the title, some control elements may not be active.



For an overview of calibration standards and their properties refer to section [Calibration standard types](#) below.

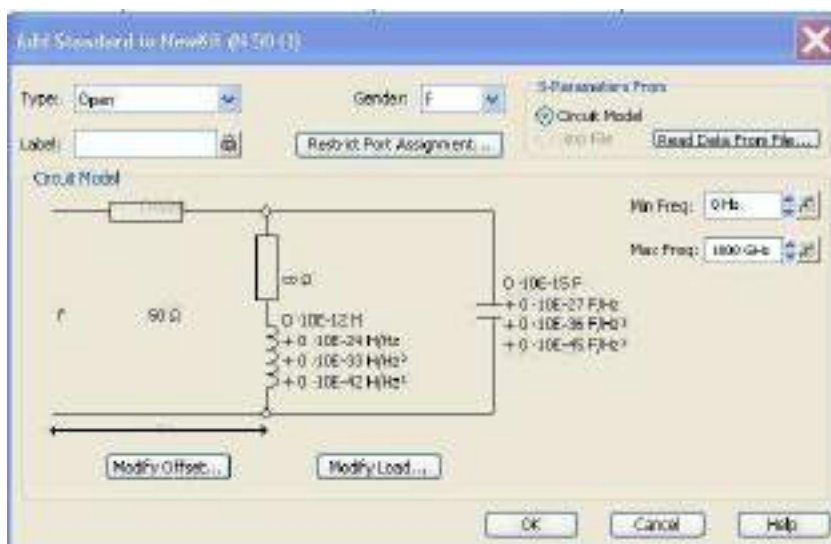

In its upper part the *Add Standard* or *View / Modify Standard* dialog contains several controls to do the following:

- Select a standard *Type* and its *Gender* (for polarized/not sexless connector types and if the port assignment is not restricted) and assign a *Label*. For line standards the GUI displays an additional index field to distinguish between multiple line standards.



- *Restrict Port Assignment*
- **Select S-Params From**

Qualify whether the standard is described by a *Circuit Model* from which the analyzer can calculate the S-parameters or by a table of measured or simulated S-parameters stored in a [Touchstone file](#). Pressing the *Read Data from File...* button opens a file selection dialog where the appropriate file type (*.s1p for one-port standards and *.s2p for two-port standards) is automatically selected. The file import dialog contains a checkbox for renormalization, in analogy to the [Import Complex Data](#) dialog.



NOTE The *Sliding Match* and *Attenuation* are special **standard types** which must be described by a circuit model. The controls in the *S-Params From* panel are disabled.

For two-port standards described by a *.s2p file, the implicit ports 1 and 2 (given by the order of S-parameters $\text{Re}(S_{11})$ $\text{Im}(S_{11})$ $\text{Re}(S_{21})$ $\text{Im}(S_{21})$ $\text{Re}(S_{12})$ $\text{Im}(S_{12})$ $\text{Re}(S_{22})$ $\text{Im}(S_{22})$ in the file) are assigned to the test ports that the analyzer actually calibrates as follows: Port 1 is always assigned to the lower-numbered calibrated test port, port 2 to the other (higher-numbered) calibrated test port.



 Assigning a label to standards is optional. However, the label is displayed in many dialogs and can help you identify a standard or distinguish different standards with similar parameters.

If *Circuit Model* is selected in the *S-params From* panel, then the controls in the central panel of the dialog are enabled. The circuit diagram is adjusted to the selected **standard type**. The following parameters can be set:

- Frequency range (*Min. Freq.* to *Max. Freq.*) for which the circuit model is valid. During calibration, the analyzer checks whether the sweep range is within the validity range of all measured standards and possibly generates a warning (see [Measure Standards](#) dialog).

- [Offset](#) and [Load](#) parameters of the circuit model.



The impedance for waveguides is frequency-dependent. If a waveguide line type is selected in the [Offset Model](#) dialog, the circuit model indicates varies instead of a definite impedance value.

Remote control: `[SENSe<Ch>:]CORRection:CKIT:<std_type>`
`[SENSe<Ch>:]CORRection:CKIT:<conn_type>:<std_type>`
`MMEMemory:LOAD:CKIT:SDATa`

Restrict Port Assignment

Opens a dialog to define whether the standard can be connected to any port of the analyzer or to just one port (for one-port standards) or a pair of ports (for two-port standards).



The port assignment is displayed in the [Add or View / Modify Calibration Kit](#) dialogs.



Port assignment and gender

The standards are handled differently, depending on their port assignment:


- If the port assignment is not restricted, the gender belongs to the definition of polarized standards. When the connector type and calibration kit is selected in the [calibration wizard](#), the analyzer checks whether the kit contains the necessary standard types and whether the standards have the right gender.
- Standards with restricted port assignment are assumed to have the gender that is appropriate for the calibrated port. In the *View Modify Standard* dialog, the *Gender:* input field is disabled. In the calibration wizard, the analyzer checks whether the kit contains the necessary standard types for the required ports. Instead of the gender, the port assignment is stored in the calibration kit file.

This approach simplifies the definition of standards and helps to avoid inconsistencies.

Remote control: `[SENSe<Ch>:]CORRection:CKIT:<std_type>`

Modify Offset

Specifies the offset parameters for the transmission lines of a particular calibration standard. This dialog is opened from the [Add or View / Modify Standard...](#) dialog (*Modify Offset...* button).

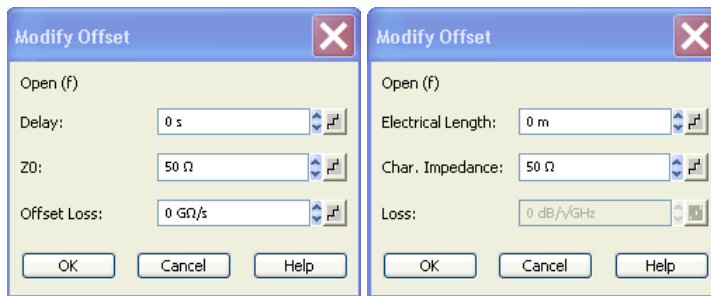

The offset parameters depend on whether or not the circuit model is defined in *Agilent Mode* (see [Add/Modify Calibration Kit](#) dialog):

- If *Agilent Mode* is active, then the standard is characterized by its *Delay* (in s), its characteristic impedance Z_0 (in Ω) and its *Offset Loss* (in $G\Omega$).
- If *Agilent Mode* is switched off, then the standard is characterized by the ZVR-compatible parameters *Electrical Length* (in m), its *Char. Impedance* (in Ω) and its *Loss* (in dB/sqrt(GHz)). The loss is zero and not editable as long as the electrical length is zero.

Both parameter sets are closely related. The *Electrical Length* is proportional to the *Delay*; Z_0 corresponds to the *Char. Impedance*. Moreover the analyzer converts an Agilent-type *Offset Loss* into a ZVR-type *Loss* and vice versa using the *Relative Permittivity* ϵ_r for the connector type defined in the [Offset Model...](#) dialog.



Offset parameters

The offset parameters have the following physical meaning:

- The *Delay* is the propagation time of a wave traveling through the standard. The *Electrical Length* is equal to the *Delay* times the speed of light in the vacuum and is a measure for the length of transmission line between the standard and the actual calibration plane. For a waveguide with permittivity ϵ_r and mechanical length L_{mech} the following relations hold:

$$\text{Delay } d = \frac{L_{\text{mech}} \cdot \sqrt{\epsilon_r}}{c}; \quad \text{Electrical Length } L_{\text{el}} = L_{\text{mech}} \cdot \sqrt{\epsilon_r}$$

The default delay is 0 s, the default step width is 1 ns, corresponding to a step width of 299.792 mm for the electrical length. The relations hold for one-port and 2-port standards.

- Z_0 is the *Characteristic Impedance* of the standard. If the standard is terminated with Z_0 , then its input impedance is also equal to Z_0 . Z_0 is not necessarily equal to the reference impedance of the system (depending on the [Connector Type](#)) or the terminal impedance of the standard. The characteristic impedance of the standard is only used in the context of calibration.

The default characteristic impedance is equal to the reference impedance of the system.

- The *Loss* is the energy loss along the transmission line due to the skin effect. For resistive lines and at RF frequencies the loss is approximately proportional to the square root of the frequency.

In Agilent mode the *Offset Loss* is expressed in units of Ω/s at a frequency of 1 GHz. The following formula holds for two-port standards:

$$\text{Offset Loss } [\Omega/s] = \frac{\text{Loss } [dB] \cdot Z_0 [\Omega]}{4.3429 [dB] \cdot \text{delay } [s]}$$

The conversion formula for one-port standards has an additional factor 1/2 on the right-hand side. The reason for this factor is that the *Loss* in dB accounts for the attenuation along the forward **and**

the reverse path (no matter how often the wave actually propagates through the line), whereas the *Offset Loss* is proportional to the attenuation of the line.

To determine an offset loss value experimentally, measure the delay in seconds and the loss in dB at 1 GHz and use the formula above.

The default *Loss* or *Offset Loss* is zero.



*The impedance for waveguides is frequency-dependent. If a waveguide line type is selected in the [Offset Model](#) dialog, the *Char. Impedance* field is disabled and indicates "varies" instead of a definite impedance value. Moreover no *Loss* or *Offset Loss* can be set.*



Offset parameters and standard types

Offset parameters are used to describe all [types of standards](#) except the *Sliding Match* and the *Attenuation*.

- The *Sliding Match* is a one-port standard with variable load parameters (sliding load) and unspecified length. The reference impedance is fixed and equal to the characteristic impedance of the connector type. No load and offset parameters need to be set.
- The *Attenuation* is a two-port standard which is fully matched in both directions (the reflection factor at both ports is zero). No load and offset parameters need to be set.

Remote control: `[SENSe<Ch>:]CORRection:CKIT:<conn_type>:<std_type>`

Modify Load

Specifies the load parameters for a particular calibration standard describing its terminal impedance. This dialog is opened from the [Add or View / Modify Standard...](#) dialog (*Modify Load...* button).



The circuit model for the load consists of capacitance *C* which is connected in parallel to an inductance *L* and a resistance *R*, both connected in series.

- *R* is the constant resistive contribution. It is possible to select a special value (*Open* for $\infty \Omega$ so that the inductance coefficients are irrelevant, *Short* for 0Ω , *Match* for the reference impedance of the current [connector type](#)) or set any resistance *R*.
- The fringing capacitance *C* and the residual inductance *L* are both assumed to be frequency-dependent and approximated by the first four terms of the Taylor series around $f = 0 \text{ Hz}$.



Load parameters and standard types

Load parameters are used to describe all [types of standards](#) except a *Through*, a *Sliding Match*, a *Line*

and an *Attenuation*.

- The *Through* standard is a through-connection between two ports with minimum loss which is taken into account by the [Offset Parameters](#).
- The *Sliding Match* is a one-port standard with variable load parameters (sliding load), so there is no fixed load model.
- The *Line* standard is a line of variable length with minimum loss which is taken into account by the [Offset Parameters](#).
- The *Attenuation* is a two-port standard which is fully matched in both directions (the reflection factor at both ports is zero). No load and offset parameters need to be set.

Remote control: `[SENSe<Ch>:]CORRection:CKIT:<conn_type>:<std_type>`

Calibration Standard Types

The following table gives an overview of the different standards and their offset and load models:

Standard Type	Characteristics	Ideal Standard	Offset Model	Load Model
Open	Open circuit (one-port)	$\infty \Omega$	☒	☒
Short	Short circuit (one-port)	0Ω	☒	☒
Offset short	Short circuit with added electrical length offset, for waveguide calibration (one-port)	0Ω	☒	☒
Match	Matched broadband termination (one-port)	Z_0 (reference impedance of the connector type)	☒	☒
Sliding match	One-port standard consisting of an air line with a movable, low-reflection load element (sliding load).	–	–	–
Reflect	Unknown mismatched standard (one-port)	$\infty \Omega$	☒	☒
Through	Through-connection with minimum loss (two-port)	–	☒	–
Line1, Line 2, Line 3, ...	Line(s) for TRL calibration with minimum loss (two-port) and NIST Multiline TRL calibration	–	☒	–
Attenuation	Fully matched standard in both directions (two-port; the reflection factor at both ports is zero).	–	–	–
Symm. network	Unknown mismatched reflection-symmetric standard (two-port)	–	☒	☒

The calibration of rectangular waveguides at very high frequencies requires a special set of standards; see [Frequency Extension – Calibration](#).

Remote control: For an overview of standard parameters see also `[SENSe<Ch>:]CORRection:CKIT:<conn_type>:<std_type>`

Waveguide Calibration Kits

Rohde & Schwarz offers special waveguide calibration kits for test setups involving [frequency converters](#).

- Calibration Kit R&S [ZV-WR10](#) is suited for the frequency converter R&S ZVA-Z110(E) (frequency range: 75 GHz to 110 GHz)

- Calibration Kit R&S [ZV-WR12](#) is suited for the frequency converter R&S ZVA-Z90E (frequency range: 60 GHz to 90 GHz)
- Calibration Kit R&S [ZV-WR15](#) is suited for the frequency converter R&S ZVA-Z75 (frequency range: 50 GHz to 75 GHz)
- Calibration Kit R&S [ZV-WR03](#) is suited for the frequency converter R&S ZVA-Z325 (frequency range: 220 GHz to 325 GHz)

The following sections describe the standards in the waveguide calibration kits and their use for system error corrections.

Calibration Kit R&S ZV-WR10

The waveguide calibration kit R&S ZV-WR10 allows to calibrate network analyzers for test setups involving frequency converters, in particular R&S ZVA-Z110 or R&S ZVA-Z110E.

The calibration kit contains the following standards:

- A Short standard which also serves as a Reflect standard
- A (Fixed) Match standard
- A Shim that contains a short transmission line causing a $\lambda/4$ phase shift around the center frequency of the converters operating range and a 180 deg phase shift of the reflecting coefficient.
- A Sliding Match standard (kit 1307.7100.11 only), providing more accurate results than the Fixed Match standard – at higher test effort.



The following table provides an overview of the available standards for rectangular waveguide calibration and the technical implementation using the calibration kit.

Standard Type	Technical implementation
Open	Not available in waveguide technology, replaced by "Offset Short"
Short	Contained in the calibration kit
Offset short	Short + Shim, both contained in the calibration kit
Match	Contained in the calibration kit
Sliding match	Contained in the calibration kit 1307.7100.11, 1307.7500.31, and 1307.7700.11

Standard Type	Technical implementation
Reflect	Short, contained in the calibration kit
Through	Direct through connection of the two waveguide flanges
Line1	Through connection of the two waveguide flanges with Shim in-between. In view of the bandwidth of the frequency converters, line 2 is not needed.
Attenuation	Not contained in the calibration kit
Symm. network	Not contained in the calibration kit

The standards in the calibration kit allow all one-port and two-port calibration types supported by the network analyzer except TNA.

The characteristic data of the standards are very stable and independent of the individual calibration kit. It is not required to deliver individual data with each kit and load the data into the analyzer. Instead the data is already stored in the network analyzer (software option R&S ZVA-K8 and a sufficiently new firmware version is required; refer to the What's New... section). It is possible to export the stored data to a file. Use the "Cal-Kits" dialog of the network analyzer for this purpose: "Channel" > "Calibration" > "Cal-Kits" > "Export Kit ..."

Sliding Match Standard

The sliding match is a one-port standard consisting of a precision waveguide section with a movable, low-reflection load element (sliding load). This standard is used because no perfect match is available. However, a series of measurements at a given frequency with equal mismatch and varying phase yields reflection factors that are located on a circle in the Smith chart. The center of this circle corresponds to perfect match. The network analyzer determines and further corrects this match point following I. Kása's circle-fitting algorithm.

To obtain the reflection coefficient for a perfectly matched calibration standard, the sliding load must be measured at least at three positions which should be unequally spaced to avoid overlapping data points. Increasing the number of positions to 4 – 6 can improve the accuracy. It is recommended to use the positions listed below. Depending on your calibration kit, set the adjustable screw of the standard to the following positions:

- R&S ZV-WR10: 0 mm, 0.35 mm, 0.8 mm, 1.4 mm, 2.1 mm, 4.2 mm
- R&S ZV-WR12: 0 mm, 0.42 mm, 0.96 mm, 1.68 mm, 2.52 mm, 5.04 mm
- R&S ZV-WR15: 0 mm, 0.52 mm, 1.2 mm, 2.1 mm, 3.15 mm, 6.3 mm

If you accidentally unscrew the knob completely, simply screw it on again.

Calibration Kit R&S ZV-WR12

The calibration kit R&S ZV-WR12 contains the same standard types as the calibration kit R&S [ZV-WR10](#), however, the standards are optimized for the frequency range of the R&S ZVA-Z90E frequency converter (60 to 90 GHz). The calibration procedure for both kits is identical.

Calibration Kit R&S ZV-WR15

The calibration kit R&S ZV-WR15 contains the same standard types as the calibration kit R&S [ZV-WR10](#), however, the standards are optimized for the frequency range of the R&S ZVA-Z75 frequency converter (50 to 75 GHz). The calibration procedure for both kits is identical.

ZV-WR03

Calibration Kit R&S ZV-WR03

The waveguide calibration kit R&S ZV-WR03 allows to calibrate network analyzers for test setups involving [frequency converters](#), in particular R&S ZVA-Z325.

The calibration kit contains the following standards:

- A Short standard which also serves as a Reflect standard
- A (Fixed) Match standard
- Two Shims containing a short transmission line. The length of the line equals 1 mm for Shim #1 and 1.371 mm for Shim #2. Both lines exhibit a $\lambda/4$ length difference around the center frequency of the converters operating range and a 180 deg phase shift of the reflecting coefficient.
- A Sliding Match standard (kit 1307.7100.11 only), providing more accurate results than the Fixed Match standard – at higher test effort.



The following table provides an overview of the available standards for rectangular waveguide calibration and the technical implementation using the calibration kit.

Standard Type	Technical implementation
Open	Not available in waveguide technology, replaced by "Offset Short"
Short	Short + Shim #1, both contained in the calibration kit
Offset short	Short + Shim #2, both contained in the calibration kit
Match	Contained in the calibration kit
Sliding match	Contained in the calibration kit 1307.7300.31
Reflect	Short, contained in the calibration kit
Through	Through connection of the two waveguide flanges with Shim #1 in-between
Line1	Through connection of the two waveguide flanges with Shim #2 in-between. In view of the bandwidth of the frequency converters, line 2 is not needed.
Attenuation	Not contained in the calibration kit
Symm. network	Not contained in the calibration kit

The standards in the calibration kit allow all one-port and two-port calibration types supported by the network analyzer except TNA.

The characteristic data of the standards are very stable and independent of the individual calibration kit. It is not required to deliver individual data with each kit and load the data into the analyzer. Instead the data are already stored in the network analyzer (software option R&S ZVA-K8 and at least firmware version 2.45 are required). It is possible to export the stored data to a file. Use the "Cal-Kits" dialog of the network analyzer for this purpose: "Channel" > "Calibration" > "Cal-Kits" > "Export Kit ..."

Sliding Match Standard

The sliding match standard is only contained in the calibration kit 1307.7300.31. It is a one-port standard consisting of a precision waveguide section with a movable, low-reflection load element (sliding load). This standard is used because no perfect match is available. However, a series of measurements at a given frequency with equal mismatch and varying phase yields reflection factors that are located on a circle in the Smith chart. The center of this circle corresponds to perfect match. The network analyzer determines and further corrects this match point following I. Kása's circle-fitting algorithm.

To obtain the reflection coefficient for a perfectly matched calibration standard, the sliding load must be measured at least at three positions which should be unequally spaced to avoid overlapping data points. Increasing the number of positions to 4 – 6 can improve the accuracy. It is recommended to use the positions listed below. They are optimized for the frequency range between 220 GHz and 325 GHz. Set the adjustable screw of the standard to the following positions:

0 mm, 0.12 mm, 0.27 mm, 0.48 mm, 0.71 mm, 1.2 mm

If you accidentally unscrew the knob completely, simply screw it on again.

Enhanced Wave Correction

Activates or deactivates the system error correction of all a- and b-waves which are related to the ports of the active channel calibration. The enhanced wave correction provides system error corrected complex wave quantities and ratios for a group of analyzer ports.

If no channel calibration is available the enhanced wave correction is still applied, based on the factory calibration. The [calibration state labels](#) in the trace lines of the wave quantities and ratios allow you to distinguish the enhanced wave correction states:

- Enhanced wave correction off: no *Cal* label, *Pcal* label according to the power calibration state.
- Enhanced wave correction on, factory calibration: no *Cal* label, no *Pcal* label, irrespective of the power calibration state.
- Enhanced wave correction on, channel calibration: *Cal* label, *Pcal* label according to the power calibration state. A single power calibration at one port ensures power calibrated waves (*Pcal*) at all ports.

For consistent measurements, it is recommended to use the enhanced wave correction in combination with a (sufficient) set of system error corrections and power calibrations; see [Enhanced Wave Correction Procedure and Limitations](#).



*In the present firmware version, the enhanced wave correction for all ports is referenced to the factory calibration when a wave quantity or ratio for an uncalibrated port is selected. The *Cal* labels are removed in all trace lines for ratios and wave quantities, including the traces lines for calibrated ports. The same happens if an uncalibrated port is activated for the measurement using the Meas check box in the Port Configuration dialog.*

*It is recommended to provide the calibrations for all ports **before** activating the enhanced wave correction, creating traces, and activating ports.*

The enhanced wave correction is automatically activated when one of the following measurement modes is selected:

- **True differential** mode or **defined coherence** mode (with option R&S ZVA-K6). Enhanced wave correction is a prerequisite for these modes and cannot be disabled.
- Scalar mixer measurement with source match or source and load match correction (see [Define Scalar Mixer Meas](#)). The source match correction corresponds to an enhanced wave correction. Activating the enhanced wave correction activates source match correction for the scalar mixer mode and vice versa.

Remote control: `[SENSe<Ch>:]CORRection:EWAVE[:STATe]`

Procedure, Extensions and Limitations

The enhanced wave correction for a group of analyzer ports (referred to as "port group" in the following which is not the same as port groups used for simultaneous measurement as described in [Define Port Groups](#)) is based on a system error correction which provides the correct power ratios and phase relationships between the waves. For a single port, a full one-port calibration is required. For n ports, a full n-port calibration (TOSM, TRL, TNA ...) is required.

A power calibration is not mandatory but required for absolute power measurements. To obtain the absolute powers at **all** ports within the port group, either a source power calibration with reference receiver calibration or a receiver calibration at a **single** port is sufficient. For best accuracy, perform a source power calibration with active reference receiver calibration.




With active enhanced wave correction and power calibration, the analyzer shows the true waves and ratios at the calibrated reference plane. For a one-port measurement at port n, the corrected ratio b_n/a_n is equal to the system error-corrected reflection coefficient S_{nn} . For n-port measurements, due to the definition of the [S-matrix](#), ratios and S-parameters are generally different.


Some frequency-converting measurement modes combine different port groups with different frequencies. The port groups are defined as follows:

- No frequency conversion: The ports which are selected for the measurement (*Meas* check box on in the *Port Configuration* dialog) form a port group for enhanced wave correction. After a full n-port calibration, the n calibrated ports are selected.
- Scalar Mixer Measurement: Port 1 corresponds to port group 1, port 2 corresponds to port group 2, see detailed example below.
- Defined Coherence Mode: All driving (coherent) ports form port group 1, the remaining ports (with *Meas* on) form port group 2.
- Intermodulation Distortion Measurement: see [Intermod Dist Meas Cal](#).


Example: In a scalar mixer measurement, port 1 drives at the RF output frequency f_{RF} , port 2 measures at the different IF frequency f_{IF} . For a 300 kHz LO frequency and an RF frequency range of 1 GHz ... 2 GHz, the *Port Configuration* dialog shows the following settings.

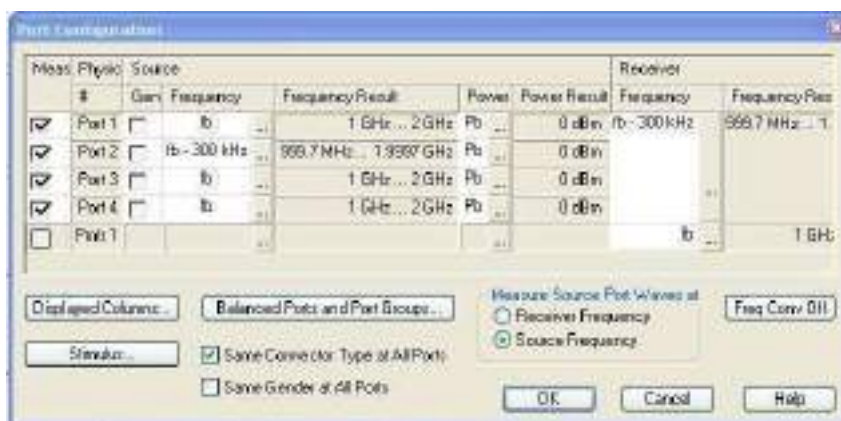

An *Enhanced Scalar Mixer Measurement* is a combination of the scalar mixer measurement with enhanced wave correction at port 1 and port 2. This requires two full one port calibrations (predefined as a *Scalar Mixer Meas Cal*). Alternatively, you can perform a full two-port calibration for ports 1 and 2. The analyzer will perform "segmented" calibration sweeps over all required frequency ranges and extract the calibration data for the individual port groups from the full set of calibration data. The *Channel Manager* displays the properties of the two-port system error correction as follows (2 frequency segments, each with 201 points):

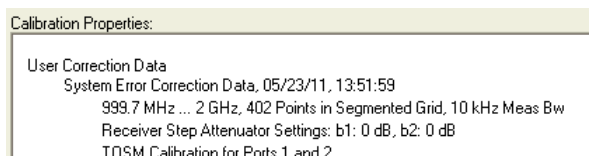

The two alternative calibration schemes are depicted below.

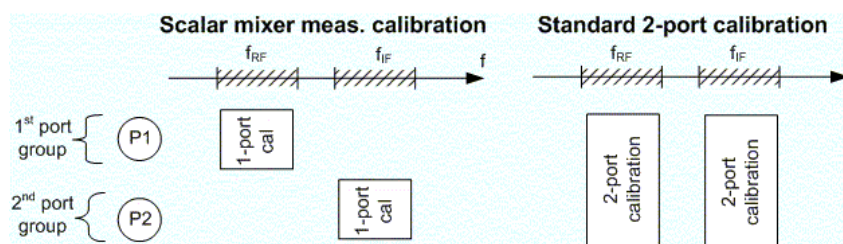

The *Scalar Mixer Meas Power Cal* provides the necessary power calibrations for consistent absolute powers at Port 1 and Port 2.

Limitations for enhanced wave correction

- No frequency conversion: All measured ports belong to the same port group.
- Scalar Mixer Measurement, arbitrary mode: Two port groups, must correspond to the logical ports no. 1 and 2.
- Defined Coherence Mode: The combined ports which provide the coherent signals (port group 1) must be at the same frequency. The remaining analyzer ports (port group 2) may measure at a different frequency.
- *Simultaneous Measurement with Frequency Offset*: in this mode enhanced wave correction is not available.


Load Match Correction

Activates or deactivates the load match correction for frequency conversion measurements. The softkey is disabled if no frequency conversion mode is active. The load match correction prevents a possible impairment of the transmission S-parameter measurements due to the influence of the waves reflected at the receive (load) ports.



In the present firmware version, the load match correction is suited for scalar mixer measurements only.

In a scalar mixer measurement, port 1 is used as a source port, port 2 is the load port. The load match correction compensates for the effect of a mismatched load port 2, on the conversion gain S_{21} .

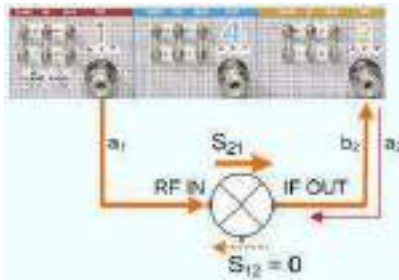

The load match correction is performed as follows:

- The correction is based on the system error corrected a- and b-waves of the source and load ports. This means that an [Enhanced Wave Correction](#) must be performed prior to the load match correction.
- A reverse sweep with port 2 as drive port is automatically performed during the measurement.
- The correction is calculated under the assumption that the reverse transmission factor (S_{12} in the example above) is zero.

The load match correction can provide a significant improvement of the transmission S-parameter measurements if the load ports are poorly matched. With sufficiently matched load ports, you can disable the correction to gain speed.

The load match correction is automatically activated when a scalar mixer measurement with source and load match correction (see [Define Scalar Mixer Meas](#)) is selected. Conversely, activating the load match correction activates source and load match correction for the scalar mixer mode.



The full two-port calibration types (TOSM, UOSM, TNA, TRL...) and the full n-port calibration for three and more ports provide the load match correction terms: No additional load match correction is required for measurements without frequency conversion.


Remote control: `[SENSe<Ch>:]FREQuency:CONVersion:GAIN:LMCorrection`

Cal and Corr at Base Frequency

Forces power calibrations and system error corrections to be performed at the channel base frequency f_b , irrespective of the port frequencies. This setting is suitable for test setups with external frequency conversion where the frequency at the DUT input/output ports differs from the analyzer port frequencies.

Example: The signal from the analyzer source port 1 is up-converted to the channel base frequency f_b ;

the output signal of the DUT is down-converted and measured at port 2.

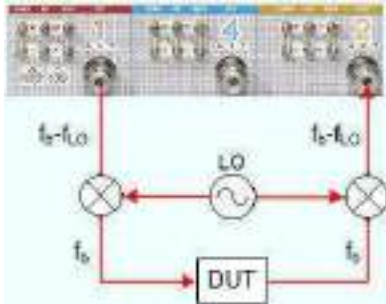

With a channel base frequency in the range 3 GHz ... 4 GHz and an LO frequency of 2 GHz, the port configuration table could look like this:

Source				Receiver			
#	Gen	Frequency	Frequency Result	Power	Power Result	Frequency	Frequency Result
☒	Port 1	f _b - 2 GHz	1 GHz ... 2.6 GHz	P _b	0 dBm	f _b - 2 GHz	1 GHz ... 2.6 GHz
☒	Port 2	f _b - 2 GHz	1 GHz ... 2.6 GHz	P _b	0 dBm		
☐	Port 3	f _b	3 GHz ... 4.6 GHz	P _b	0 dBm		
☐	Port 4	f _b	3 GHz ... 4.6 GHz	P _b	0 dBm		

Enable *Cal and Corr at Base Frequency* to ensure that the calibration is referenced to the channel base frequency.



Cal and Corr at Base Frequency is also effective in special frequency conversion modes. E.g. in a scalar mixer measurement, the frequency range for the mixer calibration will be restricted to the frequency range of the RF source port (Port 1) and no longer cover the complete frequency range of the IF receive port (Port 2). Always ensure that *Cal and Corr at Base Frequency* is in accordance with your test setup and measurement task to avoid inconsistencies.

Remote control: `[SENSe<Ch>:]CORRection:CBFReq[:STATe]`

Automatic Calibration

A *Calibration Unit* is an integrated solution for automatic system error correction of vector network analyzers of the R&S ZVAB family. Rohde & Schwarz provides different types of [calibration units](#); for an overview refer to the *System Overview* chapter. The use of the calibration units is described below.



Attention!

Please observe the safety instructions in the "Technical Information" provided with the calibration unit to avoid any damage to the unit and the network analyzer. Safety-related aspects of the connection and operation of the units are also reported in the sections below.

Connecting the Calibration Units to the Network Analyzer

The calibration units provide the following connectors:

- **Calibration units R&S ZV-Z51/.../-Z55 or R&S ZN-Z51/-Z151**
 - A USB type B connector at the rear is used to power-supply and control the unit. A USB cable for connection to the network analyzer is provided with the calibration unit.
 - Two or four RF connectors numbered 1 to 4 are to be connected to the test ports 1 to 4 of the analyzer. The connector type is equal for all ports. Depending on the calibration unit model, it is either type N (f), 3.5 mm (f), 2.92 mm (f) or 2.4 mm (f).
- **Calibration units R&S ZV-Z58/-K59**
 - A USB type B connector at the front is used to control the unit. A USB cable for connection to the network analyzer is provided with the calibration unit.
 - The RF connectors numbered 1 to 8 / 6 are to be connected to the corresponding test ports of the analyzer. The connector type is type N (f) or 3.5 mm (f) for all connectors.

To connect the unit...

1. Switch on and start-up your network analyzer.
2. To protect your equipment against ESD damage use the wrist strap and grounding cord supplied with the instrument and connect yourself to the **GND** connector at the front panel.
3. Connect the USB type A connector of the USB cable to any of the USB type A connectors on the front or rear panel of the analyzer. Connect the USB type B connector of the USB cable to the USB type B connector of the calibration unit.
4. Wait until the operating system has recognized and initialized the new hardware. When the unit is connected for the first time, this may take longer than in normal use.

The unit is ready to be used when the *Channel – Calibration – Start Cal – Calibration Unit* menu command is available.



Note:

- The calibration unit is intended for direct connection to ZVA network analyzers following the procedure described above. You can also connect the unit before switching on the analyzer. Do not connect the unit to other USB hosts, e.g. a PC, or insert any USB hubs between the analyzer and the unit, as this may cause damage to the unit or the host.
- You can connect several calibration units to the different USB ports of the analyzer. You can also connect cal units and other devices (mouse, USB memory stick etc.) simultaneously.
- An unused calibration unit may remain connected to the USB port while the network analyzer is performing measurements. It must be disconnected during a firmware update.
- It is safe to connect or disconnect the calibration unit while the network analyzer is operating. Never connect or disconnect the unit while data is being transferred between the analyzer and the unit. Never connect the unit during a firmware update.

Performing an Automatic Calibration

After [connection and initialization](#), you can use the calibration unit as follows:

1. Connect n analyzer ports ($n = 1$ to 8, depending on your analyzer and calibration unit model and the number of ports to be calibrated) to n arbitrary ports of the calibration unit. Terminate all unused cal unit ports (no. $n + 1$ to 2, 4, or 8) with a 50 Ω match.
You can also connect an n -port cal unit repeatedly in order to calibrate more than n analyzer ports; see [Using Multiple Port Assignments](#) below.
2. Perform the automatic calibration for the selected number of ports using the [Measurement Wizard](#) or the [Start Calibration](#) menu.
3. Remove the test cables from the unit, connect your DUT instead and perform calibrated measurements.



The assignment between the analyzer ports and the cal unit ports is detected automatically. If auto-detection fails (e.g. because of a high attenuation in the signal path), connect matching port numbers and click [Default Port Assignment](#) at the beginning of the calibration process.



Accuracy considerations

To ensure an accurate calibration, please observe the following items:

- Unused cal unit ports must be terminated with a 50 Ω match.
- No adaptors must be inserted between the calibration unit and the test ports.
- After connecting the unit to the USB port, allow for a sufficient warm-up time (see "Specifications") before starting the calibration.
- To ensure best accuracy the analyzer automatically reduces the source power to –10 dBm. If the test setup contains a large attenuation, deactivate *Automatic Power Reduction for Calibration Unit* in the [Calibration](#) tab of the *System Config* dialog and ensure an input power of –10 dBm at the cal unit ports (please also refer to the separate "Specifications" document).



Attention!

The maximum RF input power of the calibration unit is beyond the RF output power range of the analyzer, so there is no risk of damage if the device is directly connected to the test ports. If you use an external power amplifier, make sure that the maximum RF input power of the calibration unit quoted in the data sheet is never exceeded.

The calibration type depends on the number of ports. If a single port is calibrated, the analyzer uses [full one-port](#) calibration. For 2 and more ports, the analyzer provides the following additional options:

- A single full n -port calibration for n calibrated ports.
- n full one-port calibrations for n calibrated ports.
- $n/2 * (n - 1)$ separate full two-port (TOSM or UOSM) calibrations for n calibrated ports (all possible 2-port combinations). This calibration type is required for isolation measurements on mixers where a full 3-port calibration is inappropriate.
- $(n - 1)$ one path two port calibrations for n calibrated ports (all possible 2-port combinations from

the *Node Port* to any other port). The node port is the source port for each one path two port calibration (fully calibrated port).

- $(n - 1)$ transmission normalizations (bidirectional, forward or reverse) for n calibrated ports (all possible 2-port combinations from the first port to any other port). "Forward" transmission normalization means that the signal direction is from the ports with the lower numbers to the port with the higher numbers.

Example: Select ports no. 1, 2, 3. A forward transmission normalization calibrates the S-parameters S_{21} , S_{31} , and S_{32} . A reverse transmission normalization calibrates the S-parameters S_{12} , S_{13} , and S_{23} . A bidirectional transmission normalization calibrates all six S-parameters.

Remote control: `[SENSe<Ch>:]CORRection:COLLect:AUTO`
`[SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs`
`[SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs:CONNection?`
`[SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs:TYPE`
`[SENSe<Ch>:]CORRection:COLLect:AUTO:TYPE`

Calibration Procedure

The automatic calibration is started on clicking *Calibration Unit* in the [Start Calibration](#) menu. The *Calibration Unit* dialog shows the active cal unit type and characterization, the calibrated ports, and the progress of the calibration procedure.



Messages on opening the dialog and in the dialog

When opening the *Calibration Unit* dialog, the network analyzer checks the current channel settings for compatibility with the connected cal unit. The following message may be displayed before the dialog is opened:

- "Warning: Current frequency range is not covered by available data of calibration unit."
 --> Adjust frequency range of the channel **or** select another cal unit characterization **or** select another cal unit type.

The following information may appear in the warning section inside the dialog:


- "User characterization is active! ..."
 In general, user characterizations are required for modified test setups (e.g. cal units with external adapters); see [Manual Characterization of Cal Units](#). For an unmodified calibration unit, the factory calibration is adequate.
- "Current test port connectors will be changed ..."
 If the test port connectors in the [Port Configuration](#) dialog and the connectors of the calibration unit do not match, the test port connectors are changed.
- "Calibration requires measurements at frequencies up to 1 GHz apart from current single frequency ..."
 If a sweep type with constant frequency (*Power*, *Time*, *CW Mode*) **and** a full n-port ($n > 1$) calibration type is active, then the analyzer must perform a frequency sweep to determine the delay or transmission phase of the Unknown Through standard in the cal unit. If any of the components in your test setup (e.g. narrow-band filters or amplifiers) are not designed for the required frequency range, you may still be able to perform a manual calibration and enter the delay or phase manually. See section [Unknown Through Standard](#). You can also use a calibration unit that is characterized for TOSM (instead of UOSM) calibration.



Select *Channel – Calibration – Characterize Cal Unit...* – *Disable User Characterization Warnings* if you do not want to display the warnings in the dialog.


Additional tooltips may appear inside the dialog, e.g.:

- To indicate that the analyzer is detecting the port assignment.
- To indicate a missing or faulty port assignment.

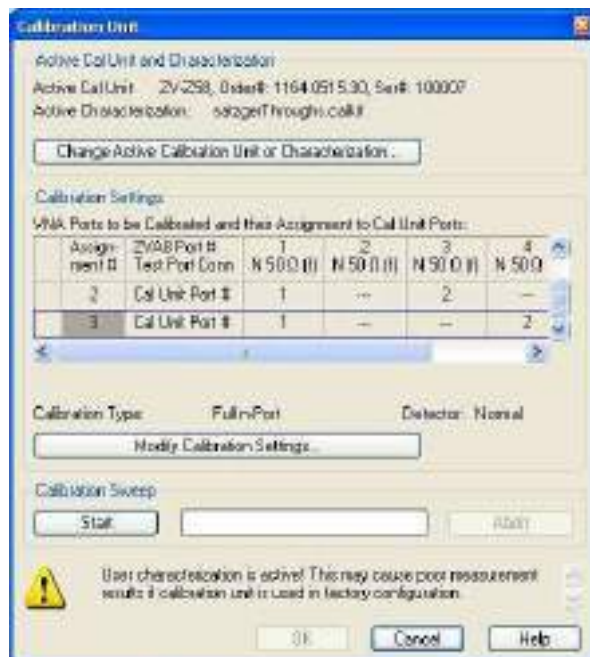

In the dialog, you can:

- Click **Change Active Calibration Unit or Characterization** in case that several cal units are connected to the analyzer and you wish to select another unit or characterization. For manual characterization see [Characterize Cal Unit](#).

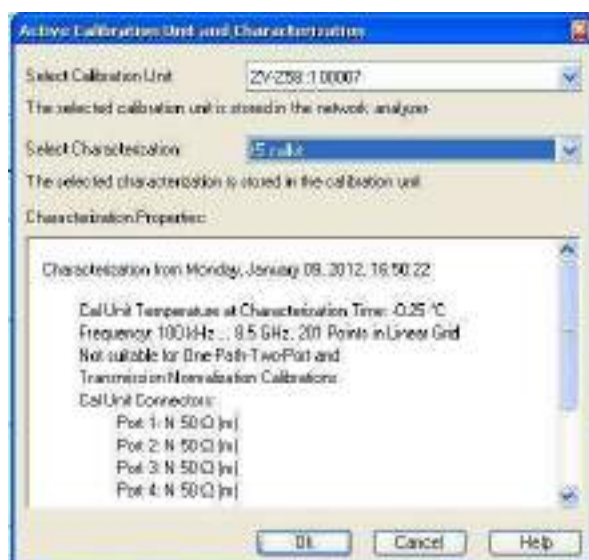

The properties of the selected characterization are displayed in the dialog. A message *Not suitable for One-Path-Two-Port and Transmission Normalization Calibrations* indicates missing Through data in the characterization. See also [Missing Through Data](#).

- View the assignment(s) between network analyzer ports and cal unit ports and select an assignment, in case that you have defined multiple assignments. See [Using Multiple Port Assignments](#) below.
- Click [Modify Calibration Settings](#) to change the calibration type and node port (for *One Path Two Port* calibrations), the detector settings, the calibrated ports, and the port assignment(s).
- Start the necessary calibration sweeps or *Abort* an ongoing sweep. *Start* is available as after a valid port assignment between the analyzer and the cal unit has been defined.

The *Calibration Unit* dialog can be closed when all standards have been measured and the system error correction data has been calculated. On pressing OK, the result is applied to the active channel. The network analyzer is ready to perform calibrated measurements.



The full two-port and full n-port calibration types require a maximum frequency step size $\Delta f_{\max}$ which ensures that the difference in phase of the internal through-connection between any two consecutive sweep points is below 180 deg minus an appropriate margin to account for measurement inaccuracies. Condition: $|\Delta\phi_{\max}| = \max_n |\phi_n - \phi_{n-1}| < 135 \text{ deg}$; $|\Delta\phi_{\max}|$ is proportional to $\Delta f_{\max}$. The analyzer automatically inserts additional sweep points to reduce the maximum frequency step size if the condition above is not met. After the calibration, the measurements are performed with the original sweep points.

Remote control:

```
[SENSe<Ch>:]CORRection:COLLect:AUTO
[SENSe<Ch>:]CORRection:COLLect:AUTO:CKIT
[SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs
[SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs:CONNection?
[SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs:TYPE
[SENSe<Ch>:]CORRection:COLLect:AUTO:TYPE

SYSTem:COMMunicate:RDEvice:AKAL:ADDReSS
SYSTem:COMMunicate:RDEvice:AKAL:ADDReSS:ALL?

SYSTem:COMMunicate:AKAL:CONNection
SYSTem:COMMunicate:AKAL:MMEMoRY[:STATe]


MMEMoRY:AKAL:FACToRY:CONVeRSion
MMEMoRY:AKAL:USER:CONVeRSion
```



The Calibration Settings are reset every time the Calibration Unit dialog is closed. Do not attempt to switch on the display and open the cal unit dialogs from a remote script, otherwise you will lose your settings.

Modify Calibration Settings

The *Calibration Settings* dialog defines the calibrated ports and the calibration type for automatic calibration.

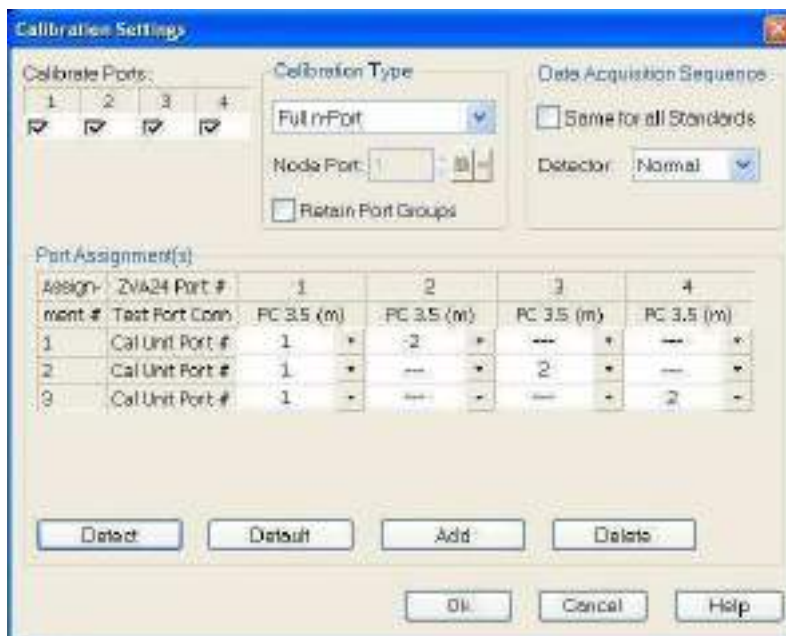

In the *Calibration Settings* dialog, you can:

- Select the network analyzer ports to be calibrated (*Calibrate Ports*).
- Select the *Calibration Type*, *Detector*, and *Node Port*: See [Calibration Types](#) above and note on *One Path Two Port* calibration below.
- Define how port groups are treated during calibration.
Uncheck *Retain port groups* (default) to dissolve port groups during calibration and to create a single system error correction for all selected ports.
Check *Retain port groups* to create a separate system error correction for every port group, which is particularly useful to calibrate port groups with [frequency offset](#). Note that this is not supported for *One Path Two-Port* and *Separate Full Two-Port* calibrations and is not compatible with [multiple port assignments](#).
- Select the sweep setup for the calibration; see [Same Sweep Setup for All Standards](#).
- Select the *Normal* or *AVG* detector, the latter primarily for noise figure measurements with option R&S ZVAB-K30.
- Manually assign cal unit ports to network analyzer port (*Port Assignment(s)* table).
- *Detect* the current port assignment between the analyzer and the connected calibration unit in order to overwrite the *Port Assignment* table.
- Restore the *Default* port assignment (matching port numbers of the analyzer and the cal unit). This is important if the automatic detection of the port assignment fails.
- *Add* and *Delete* port assignments. Multiple port assignments allow you to calibrate n analyzer ports with an m-port calibration unit or calibration unit characterization, where $m < n$. See [Using Multiple Port Assignments](#) below.



Missing Through data

One Path Two Port calibrations and *Transmission Normalizations* require two-port (Through) characterization data for the cal unit, which is not available on older calibration units. If a tooltip indicates missing two-port characterization data, simply perform a new [characterization](#) of your cal unit. In the first dialog of the *Characterization Wizard*, make sure the cal unit is characterized for all calibration types

including *One Path Two Port* calibration.

Remote control: [SENSe<Ch>:]CORRection:COLLect:AUTO
 [SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs
 [SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs:CONNection?
 [SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs:TYPE
 [SENSe<Ch>:]CORRection:COLLect:AUTO:TYPE
 [SENSe<Ch>:]CORRection:COLLect:AUTO:RPGRoup

Using Multiple Port Assignments

With multiple port assignments, it is possible to calibrate a number of analyzer ports that exceeds the number of port of the calibration unit or cal unit characterization in use. E.g. you can use a 2-port calibration unit R&S ZV-Z55, order no. 1164.0480.42, to perform a full 4-port calibration of a 4-port network analyzer R&S ZVA50, order no. 1145.1110.52.



The multiple port assignment method considerably extends the range of applications of the calibration units: A two-port unit is sufficient to perform a full n-port calibration of an arbitrary number of analyzer ports. The method entails some loss of convenience because you have to re-connect the calibration unit between the different calibration stages. It may also cause a loss of accuracy because only a sub-set of all possible through connections is measured.

Multiple port assignments are defined in the [Calibration Settings](#) dialog; they are supported for *Full One Port*, *Full n-Port*, and *One Path Two Port* calibrations.

To calibrate n network analyzer ports with an m-port calibration unit ($m < n$), you have to define an appropriate set of port assignments and perform an automatic calibration for each assignment, observing the correct cal unit connection. After measuring all port assignments, the analyzer will combine the individual calibration data and calculate the required n-port error terms. As a rule, a given port configuration and calibration type is compatible with many different sets of port assignments.

For Full n-Port calibrations, additional port assignments can improve the accuracy, provided that they add more measured through connections.

The *Calibration Settings* dialog provides tooltips that assist you in defining the port assignments and prevent inconsistent, insufficient, or redundant entries. The rules for a consistent, sufficient set of port assignments depend on the calibration type as shown in the following table.

Calibration type	Conditions	Recommendation ("Default" configuration)
Full One Port Calibration	Each calibrated analyzer port must appear in exactly one port assignment.	Subdivide the n analyzer ports into groups of m ports with increasing port numbers. Create a separate port assignment for each group.
Full n-Port Calibration	The port assignments must establish a connection between all calibrated analyzer ports. For n calibrated analyzer ports, n – 1 connections are required. A star-shaped configuration with a central port fulfills this requirement (see <i>One Path Two Port Calibration</i>). Another option is to connect the calibration unit between ports 1 and 2, ports 2 and 3 and so forth ¹⁾ .	Assign the analyzer port with the lowest port number (e.g. port 1) to port 1 of the calibration unit. Subdivide the remaining n – 1 analyzer ports into groups of m – 1 ports with increasing port numbers. Create a separate port assignment for each group; leave port 1 of the calibration unit connected to the analyzer port with the lowest port number and connect the ports of each of the port groups to the remaining m – 1 ports of the calibration unit.
One Path Two Port Calibration	The node port must be included in all port assignments. The calibration unit must be connected between the node port and all other calibrated analyzer ports (star-shaped calibration). For n calibrated analyzer ports, n – 1 connections between the node port and the other	Assign the node port to port 1 of the calibration unit. Subdivide the remaining n – 1 analyzer ports into groups of m – 1 ports. Create a separate port assignment for each group; leave port 1 of the calibration unit connected to the node port and connect the ports of each of the port groups to the remaining m – 1 ports of the calibration unit.

Calibration type	Conditions	Recommendation ("Default" configuration)
	ports are required. Additional condition: The cal unit port assigned to a given analyzer port must be the same ²⁾ .	

1) The general condition is that every port is connected at least once, and that the connections form no cycles (the connections correspond to a "tree" in graph theory). This condition can be fulfilled with two-port calibration units (or cal unit characterizations) only; cal units with more ports involve cycles.

2) This rule minimizes the number of re-connections between the calibration stages.



Full n-Port Calibration: The number of re-connections between the calibration stages is minimized if you always assign the same cal unit port to a given analyzer port. This rule is applied in the examples below.

Example 1: Full One Port calibration

The following example shows a valid port assignment for a Full One Port calibration of four analyzer ports using a two-port calibration unit.

Assign- ment #	ZVT8 Port #	1	2	3	4
	Test Port Conn	N 50 Ω (f)	N 50 Ω (f)	N 50 Ω (f)	N 50 Ω (f)
1	Cal Unit Port #	1	2	---	---
2	Cal Unit Port #	---	---	1	2

The same for six calibrated analyzer ports and a four-port calibration unit.

ZVT8 Port #	1	2	3	4	5	6
Test Port Conn	PC 3.5 (m)	PC 3.5 (m)	PC 3.5 (m)	PC 3.5 (m)	PC 3.5 (m)	PC 3.5 (m)
Cal Unit Port #	1	2	3	4	---	---
Cal Unit Port #	---	---	---	---	1	2

Example 2: Full n-Port calibration

The following examples show a valid port assignment for a Full n-Port calibration of four analyzer ports using a two-port calibration unit.

Assign- ment #	ZVT8 Port #	1	2	3	4
	Test Port Conn	N 50 Ω (f)	N 50 Ω (f)	N 50 Ω (f)	N 50 Ω (f)
1	Cal Unit Port #	1	2	---	---
2	Cal Unit Port #	1	---	2	---
3	Cal Unit Port #	1	---	---	2

Assign- ment #	ZVT8 Port #	1	2	3	4
	Test Port Conn	N 50 Ω (f)	N 50 Ω (f)	N 50 Ω (f)	N 50 Ω (f)
1	Cal Unit Port #	1	2	---	---
2	Cal Unit Port #	---	2	1	---
3	Cal Unit Port #	---	---	1	2

The examples for One Path Two Port calibration below are also valid for Full n-Port calibration.

Example 3: One Path Two Port calibration

The following example shows a valid port assignment for a One Path Two Port calibration of four analyzer ports using a two-port calibration unit. Port 2 is the node port.

Assign- ment #	ZVT8 Port #	1	2	3	4
	Test Port Conn	N 50 Ω (f)	N 50 Ω (f)	N 50 Ω (f)	N 50 Ω (f)
1	Cal Unit Port #	2	1	---	---
2	Cal Unit Port #	---	1	2	---
3	Cal Unit Port #	---	1	---	2

The same for six calibrated analyzer ports and a four-port calibration unit.

ZVT8 Port #	1	2	3	4	5	6
Test Port Conn	PC 3.5 (m)	PC 3.5 (m)	PC 3.5 (m)	PC 3.5 (m)	PC 3.5 (m)	PC 3.5 (m)
Cal Unit Port #	2	1	3	4	---	---
Cal Unit Port #	---	1	---	---	2	3

Remote control: `[SENSe<Ch>:]CORRection:COLLect:AUTO:ASSignment<Asg>:DEFine`
`[SENSe<Ch>:]CORRection:COLLect:AUTO:ASSignment<Asg>:ACQuire`
`[SENSe<Ch>:]CORRection:COLLect:AUTO:ASSignment<Asg>:DELeTe:ALL`
`[SENSe<Ch>:]CORRection:COLLect:AUTO:CONFIgure`
`[SENSe<Ch>:]CORRection:COLLect:AUTO:SAVE`



The port assignments are reset every time the Calibration Unit dialog is closed. Do not attempt to switch on the display and open the cal unit dialogs from a remote script, otherwise you will lose your settings.

Characterize Cal Unit


The [Calibration Unit](#) is delivered with factory characterization data which ensure an accurate calibration for all standard applications. For specific modifications of the test setup, e.g. the connection of additional adapters to a calibration unit, a modified set of characterization data (suitable for the cal unit with adapters) may be desirable. The analyzer provides a *Characterization Wizard* for performing a guided characterization of (modified) R&S calibration units. The acquired characterization data is stored to a characterization file, so that it can be used for automatic calibration whenever needed.

A cal unit characterization can be performed in a frequency sweep. The network analyzer must be properly calibrated for the test setup, with the reference plane at the input ports of the (modified) cal unit to be characterized. The procedure involves the following steps:

1. Perform a calibration of your network analyzer, using the test setup and calibration type you wish to perform with your (modified) calibration unit (see description of the [Characterization Wizard](#)).
2. Connect the modified calibration unit to the reference plane (see [Connection and Installation](#)).
3. Click *Channel – Calibration – Characterize Cal Unit* to access the [Characterize Cal Unit](#) dialog and start the wizard.
4. Step through the [wizard](#), following the instructions in the dialogs.

Characterize Cal Unit

The *Characterize Cal Unit* dialog displays the properties of the connected cal units, provides control elements for characterization file management, and starts the characterization wizard.

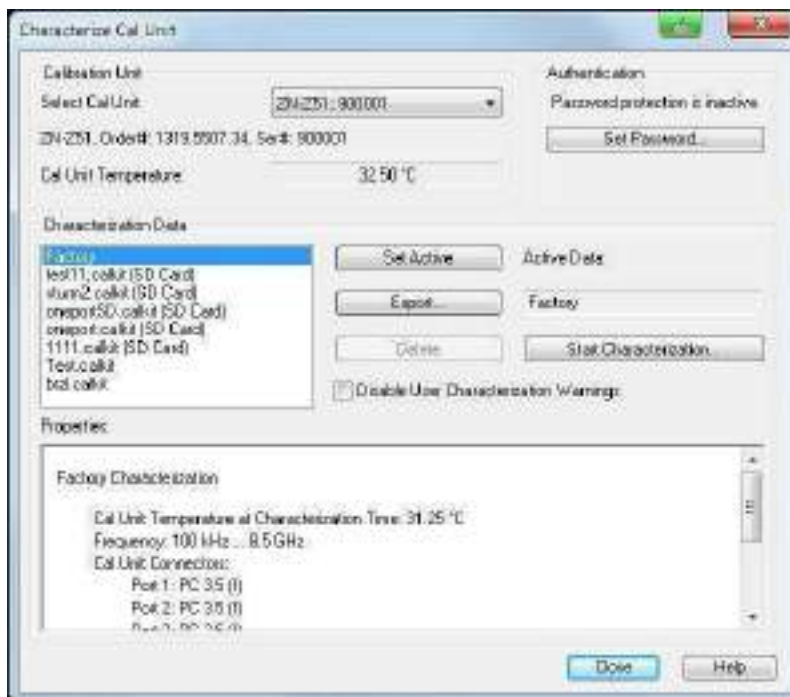

In the dialog, you can:

- Select a cal unit from the list of connected units (*Select Cal Unit*, relevant if several units are connected). The list is updated whenever a calibration unit is connected to (or disconnected from) the analyzer.
- Set a password to protect the characterization dialog and the *Start Characterization* wizard from unauthorized access and operation. *Set Password* opens a dialog to enter the password and activate password protection at the next time the *Characterize Cal Unit* dialog is opened. Enter an empty string (no password) to deactivate password protection.
- View the list of available characterization data sets and their *Properties*.
- Select a characterization from the list. You can set this characterization active for subsequent calibration processes using the selected cal unit (*Set Active*), *Export* the data to a *.s1p [Touchstone file](#) (e.g. for comparison with older characterization data or characterization data with/without connected adapters), or *Delete* the data. Note that *Export...* will initiate an export of **all** characterization data to different *.s1p files, each containing the name of the characterization in its file name.
- *Disable User Characterization Warnings* in the [Calibration Unit](#) dialog.
- Start the [characterization wizard](#) (*Start Characterization*).

If the calibration unit supports SD cards and an SD Card is inserted into the calibration unit's SD card slot, characterizations stored on the SD Card are marked with (SD Card) after their name in the *Characterization Data* selection list



NOTE A cal unit characterization can be performed in a frequency sweep. *Start Characterization* is unavailable while a power, CW Mode, or time sweep is active. The analyzer always uses a fixed source power of -10 dBm to acquire the characterization data.

Remote control: `[SENSe<Ch>:]CORRection:COLLect:AUTO`
`[SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs`

[SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs:CONNection?

Characterization Wizard

The *Characterization Wizard* consists of a series of dialogs which perform a new characterization of the R&S calibration unit. It is opened from the *Characterize Cal Unit* dialog. Characterization involves the following steps:

1. Select the calibration type

The calibration unit supports different calibration types. Depending on the desired calibration type, a simpler or more complicated characterization procedure is required. The NWA calibration that you have to perform before connecting the calibration unit also depends on the desired calibration type:

- If Full One Port and Full Two Port calibrations are needed, a simple characterization procedure involving only one-port measurements is sufficient. The calibrated ports are connected one after another. A Full One Port or Full Two Port calibration of the analyzer at all ports used for the characterization is recommended.
- If a One Path Two Port calibration is needed in addition, the characterization procedure also involves two-port measurements. The calibrated ports are all connected at the same time. A Full N Port calibration of the analyzer (for N calibrated ports), for different connector types and adapters preferably UOSM, is required.

2. Select the characterized cal unit ports

3. Perform the necessary characterization sweeps, depending the selected calibration type (step 1)

4. Save the characterization data

Characterization data are saved in ASCII format with a specified file name and comment. The default file extension is *.calkit; the files are written to a subdirectory of C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration (or any other specified directory). The network analyzer automatically creates a file header containing the following information:

- Current date and time
- Characterized ports, together with their connector types and gender
- Operating temperature of the calibration unit
- Sweep parameters: sweep type, number of points, frequency range

If the calibration unit supports SD cards and an SD Card is inserted into the calibration unit's SD card slot a check box *Store on SD Card* is displayed left of the filename entry field. If checked, on pressing *Save and finish* the characterization is written to the SD Card.

The created characterization data set is automatically transferred to the active cal unit; the *.calkit file name appears in the list of available *Characterization Data*.

Remote control: [SENSe<Ch>:]CORRection:COLLect:AUTO
 [SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs
 [SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs:CONNection?
 [SENSe<Ch>:]CORRection:COLLect:AUTO:CKIT

Calibration State Labels

Calibration State Labels

System Error Correction State Labels

The following labels in the trace list inform you about the status or type of the current system error correction.

Label	Meaning
Cal	The system error correction is applied without interpolation. This means that a set of measured correction data is available at each sweep point.
Cal int	The system error correction is applied, however, the correction data for at least one sweep point is interpolated from the measured values. This means that the channel settings have been changed so that a current sweep point is different from the calibrated sweep points. It is not possible to disable interpolation.
Cav	The system error correction uses variable calibration methods to calculate a measurement parameter. This happens for example, if a Z-parameter is calculated from S-parameters which are partly factory calibrated and partly normalized. This can also happen, if an S-parameter is measured with different port impedances, or if the analyzer uses a one port calibration at port 1 and a normalization at port 2.
Ca?	The system error correction is applied, however, the accuracy is questionable because one of the following applies: • The attenuator settings during the calibration differ from the attenuator settings during the measurement. • The bandwidth settings during the calibration differ from the bandwidth settings during the measurement. • The point delay settings during the calibration differ from the point delay settings during the measurement. • The IF offsets during the calibration differ from the IF offsets during the measurement (see Simultaneous Measurement with Frequency Offset). • The detector settings during the calibration differ from the detector settings during the measurement (e.g. Calibration was performed using the <i>Normal</i> detector while the measurement uses the <i>AVG</i> detector). • The dynamic bandwidth reduction setting during the calibration differs from the dynamic bandwidth reduction setting during the measurement.
Cal Off !	The system error correction is no longer applied (e.g. turned off by the user). See also Calibration Overview .

Remote control: `[SENSe<Ch>:]CORRection:SSTate?`

Power Calibration State Labels

The status of a power calibration is indicated in the trace list and in the *Calibration Source* panel of the *Receiver Power Cal* dialog. The following messages can be displayed:

- *PCal* denotes an active power calibration with unchanged sweep points (no [interpolation or extrapolation](#)).
- *PCai* denotes an active, interpolated power calibration (the calibration data for at least one sweep point is interpolated).
- *PCa?* denotes an active power calibration with changed receiver settings (changed step attenuator settings and disabled ALC) or with changed IF offsets (see [Simultaneous Measurement with Frequency Offset](#)).
- *PCao* denotes an active power calibration with a changed source power (changed base power or

generator step attenuator settings).

- *PCax* denotes an active, extrapolated power calibration. The current stimulus range exceeds the calibrated stimulus range. The power calibration data of the first calibrated sweep point is used for all smaller stimulus values; the power calibration data of the last calibrated sweep point is used for all larger stimulus values.
- *Pcal Off* indicates that the power calibration was deliberately switched off.

A lower label in the list has priority over the higher labels (e.g. if the power calibration is interpolated and the source power is changed, then the label *PCao* is displayed).

The labels appear in the trace list, provided that the measurement result is an S-parameter, wave quantity, ratio, or a derived quantity (stability factor, PAE), and that the effects of an inaccurate source or receiver power have been consistently removed. The conditions for consistency depend on the measured quantity (see also [Data Flow](#)):

- For S-parameters and quantities derived from S-parameters (stability factors), only the source power calibration is relevant. S-parameters S_{xy} represent the ratio of a received wave b_x to a driving wave a_y , therefore the absolute receiver powers are not critical. A *PCal* label indicates a calibrated source power at all drive ports.
- For wave quantities and derived quantities (e.g. ratios, PAE), only the receiver power calibration is relevant. Due to the linearity of the receiver, a modification of the base power or generator step attenuator settings has no effect. A *PCal* label for a wave quantity indicates a calibrated receive port. A *PCal* label for a ratio indicates that both receive ports are calibrated. Notice that wave quantities and ratios are not system error corrected.

Remote control: `[SENSe<Ch>:]CORRection:PSTATe?`

Noise Figure Calibration State Labels

The following labels in the noise figure trace line inform you about the status or type of the current noise figure calibration.

Label	Meaning
NCal	A consistent set of power and noise figure calibration data is available at each sweep point. The calibration is applied.
NCai	The noise figure calibration is applied, however, the correction data for at least one sweep point is interpolated from the measured values. This means that the channel settings have been changed so that a current sweep point is different from the calibrated sweep points. It is not possible to disable interpolation.
NCax	The noise figure calibration is applied, however, the current stimulus range exceeds the calibrated sweep range. The calibration data is extrapolated.
NCa?	The noise figure calibration is applied, however, the accuracy is questionable e.g. because one of the following applies: • Missing source or receiver power calibration data (steps 2 and 3 of the setup guide). • The bandwidth or detector measurement time settings during the calibration differ from the settings during the measurement.
NCal Inv	The noise figure calibration is invalid, e.g. because: • The gain and noise measurement method was changed from "Sequential" to "Simultaneous" or vice versa (see Define Noise Figure Measurement dialog). • The <i>IF Gain</i> settings were changed.
NCal Off	The system error correction is no longer applied (e.g. turned off using Correction Off).

Remote control: `[SENSe<Ch>:]CORRection:NSTate?`

Channel - Offset

The *Offset* menu defines a length offset and a loss for the test ports. The offset parameters complement the system error correction, compensating for the known length and loss of a (non-dispersive and perfectly matched) transmission line between the calibrated reference plane and the DUT.



Length offset parameters: Definition

The *Delay* is the propagation time of a wave traveling through the transmission line. The *Electrical Length* is equal to the *Delay* times the speed of light in the vacuum and is a measure for the length of transmission line between the standard and the actual calibration plane. For a line with permittivity ϵ_r and mechanical length L_{mech} the delay and the electrical length are calculated as follows:

$$\text{Delay } d = \frac{L_{\text{mech}} \cdot \sqrt{\epsilon_r}}{c}; \quad \text{Electrical Length } L_{\text{el}} = L_{\text{mech}} \cdot \sqrt{\epsilon_r}$$

Electrical Length, *Mechanical Length* or *Delay* are coupled parameters. When one of them is changed, the other two follow.

For a non-dispersive DUT, the delay defined above is constant over the considered frequency range and equal to the negative derivative of the phase response with respect to the frequency (see [mathematical relations](#)). The length offset parameters compensate for a constant delay, which is equivalent to a linear phase response.

If a dispersive connector type (i.e. a waveguide; see [Offset Model](#) dialog) is assigned to a test port that is related to a particular quantity, then the phase of the quantity is calculated taking dispersion effects into account.

Loss parameters: Definition

The loss L is the attenuation of a wave traveling through the offset transmission line. In logarithmic representation, the loss can be modeled as the sum of a constant and a frequency-dependent part. The frequency dependence is essentially due to the skin effect; the total loss can be approximated by an expression of the following form:

$$Loss(f) = [Loss(f_{\text{ref}}) - Loss_{\text{DC}}] \cdot \sqrt{\frac{f}{f_{\text{ref}}}} + Loss_{\text{DC}}$$

The DC loss $Loss_{\text{DC}}$, the reference frequency f_{ref} , and the loss at the reference frequency $Loss(f_{\text{ref}})$ are empirical parameters for the transmission lines connected to each port which can be entered into any of the dialogs in the *Offset* menu (see figure below). For a lossless transmission line, $Loss_{\text{DC}} = Loss(f_{\text{ref}}) = 0$ dB. In practice, the frequency-dependent loss often represents the dominant contribution so that $Loss_{\text{DC}}$ can be set to zero.

The entries in the *One-Way Loss* section of the offset dialogs have the following meaning: DC loss $Loss_{\text{DC}}$ (at DC), total loss at the reference frequency $Loss(f_{\text{ref}})$ (at Freq), reference frequency f_{ref} (Freq). Experimentally, the two loss values $Loss_{\text{DC}}$ and $Loss(f_{\text{ref}})$ are determined in two separate measurements at a very low frequency ($f \rightarrow 0$) and at $f = f_{\text{ref}}$.

One-Way Loss			
at DC	at Freq	Freq	
0.013 dB ...	0.312 dB ...	1 GHz	...
0.006 dB ...	0.3 dB ...	1 GHz	...
0 dB ...	0 dB ...	1 GHz	...
0 dB ...	0 dB ...	1 GHz	...

Offset parameters: Application and effect

Offset parameters can be particularly useful if the reference plane of the calibration cannot be placed directly at the DUT ports, e.g. because the DUT has non-coaxial ports and can only be measured in a test fixture. Offset parameters can also help to avoid a new complete system error correction if a cable with known properties has to be included in the test setup.

- A positive length offset moves the reference plane of the port towards the DUT, which is equivalent to [deembedding](#) the DUT by numerically removing a (perfectly matched) transmission line at that port.
- A negative offset moves the reference plane away from the DUT, which is equivalent to [embedding](#) the DUT by numerically adding a (perfectly matched) transmission line at that port.

The offset parameters are also suited for length and delay measurements; see [Auto Length](#). In contrast to embedding/deembedding by means of the *Channel – Mode – Virtual Transform* functions, the offset parameters cannot compensate for a possible mismatch in the test setup.

Each offset parameter is assigned to a particular port. The delay parameters affect the phase of all measured quantities related to this port; the loss parameters affect their magnitude. An offset at port 1 affects the S-parameters S_{11} , S_{21} , S_{12} , S_{31} ... Some quantities (like the Z-parameters) depend on the whole of all S-parameters, so they are all more or less affected when one S-parameter changes due to the addition of an offset length.



To account for the propagation in both directions, the phase shift of a reflection parameter due to a given length offset is twice the phase shift of a transmission parameter. If, at a frequency of 300 MHz, the electrical length is increased by 250 mm ($\lambda/4$), then the phase of S_{21} increases by 90 deg, whereas the phase of S_{11} increases by 180 deg. Equivalent relations hold for the loss.


If the trace is displayed in [Delay](#) format, changing the offset parameters simply shifts the whole trace in vertical direction. The sign of the phase shift is determined as follows:

- A positive offset parameter causes a positive phase shift of the measured parameter and therefore reduces the calculated group delay.
- A negative offset parameter causes a negative phase shift of the measured parameter and therefore increases the calculated group delay.

Offset parameters for balanced ports

The functions in the *Offset* menu can be used for balanced port configurations:

- If a balanced port configuration is active the logical and physical ports are shown in the *Electrical Length*, *Mechanical Length* and *Delay* dialogs.
- Offset parameters must be assigned to both physical ports of a logical port.
- *Auto Length* corrects the length offset of both physical ports of a logical port by the same amount.

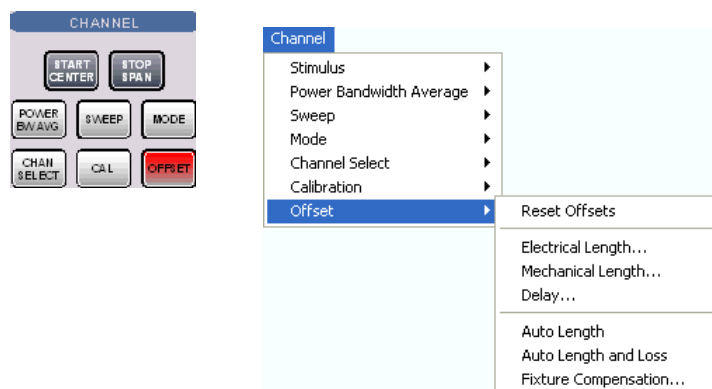

The offset parameters can be defined separately for each port.

- *Reset Offsets* sets all length offsets to zero.
- *Electrical Length* defines electrical length offsets and loss parameters at all test ports.
- *Mechanical Length* defines mechanical length offsets and loss parameters at all test ports.
- *Delay* defines delay times and loss parameters at all test ports.
- *Auto Length* determines a length offset for the receiving port of the active measured quantity with the condition that the residual group delay of the active trace is minimized.
- *Auto Length and Loss* determines a length offset and loss for the receiving port of the active measured quantity with the condition that the residual group delay of the active trace is minimized and the measured loss is minimized as far as possible across the entire sweep range.
- *Fixture Compensation*, corrects the measurement result for the effects of a test fixture.



The *Zero Delay at Marker* function overwrites the Offset parameters.

Remote control `[SENSe<Ch>:]CORRection:OFFSet<port_no>[:STATe] <numeric`
(for Reset `_value>`
Offsets):

Electrical Length

Opens a dialog to define the length offset parameters for the physical test ports as electrical lengths. The dialog also contains the DC loss, the loss at the reference frequency $\text{Loss}(f_{\text{ref}})$, and the reference frequency f_{ref} ; see *Loss parameters: Definition* above.

Compensate Meas's Transm. indicates the ports for which a *direct fixture compensation* has been carried out, replacing the offset parameters.



Since the loss at the reference frequency is stored as loss per length, it can only be changed if the corresponding length is larger than zero.



Remote control: [SENSE<Ch>:]CORRection:EDELay<port_no>:ELENGth
 [SENSE<Ch>:]CORRection:LOSS<port_no>
 [SENSE<Ch>:]CORRection:LOSS<port_no>:FREQuency
 [SENSE<Ch>:]CORRection:LOSS<port_no>:OFFSet
 [SENSE<Ch>:]CORRection:OFFSet<port_no>:DFComp[:STATE]?

Mechanical Length

Opens a dialog to define length offset parameters for the physical test ports as mechanical lengths and permittivities. The dialog also contains the DC loss, the loss at the reference frequency $\text{Loss}(f_{\text{ref}})$, and the reference frequency f_{ref} ; see [Loss parameters: Definition](#) above.

Compensate Meas's Transm. indicates the ports for which a [direct fixture compensation](#) has been carried out, replacing the offset parameters.



The *Mechanical Length* dialog contains the three editable columns *Mech. Length*, *Permittivity* (ϵ_r) and *Velocity Fact*. The velocity factor is $1/\sqrt{\epsilon_r}$ and is a measure for the velocity of light in a dielectric with permittivity ϵ_r relative to the velocity of light in the vacuum (velocity factor < 1); see [Offset parameters: Definition](#) above. Permittivity and velocity factor are coupled parameters.



Click *Same Dielectric at Each Port* to change the permittivity or velocity factor for all ports by entering a single value.



Since the loss at the reference frequency is stored as loss per length, it can only be changed if the corresponding length is larger than zero.


Remote control: [SENSE<Ch>:]CORRection:EDELay<port_no>:DISTANCE
 [SENSE<Ch>:]CORRection:EDELay<port_no>:DIElectric
 [SENSE<Ch>:]CORRection:LOSS<port_no>
 [SENSE<Ch>:]CORRection:LOSS<port_no>:FREQuency
 [SENSE<Ch>:]CORRection:LOSS<port_no>:OFFSet
 [SENSE<Ch>:]CORRection:OFFSet<port_no>:DFComp[:STATE]?

Delay

Opens a dialog to define the length offset parameters for the physical test ports as delays. The dialog also contains the DC loss, the loss at the reference frequency $\text{Loss}(f_{\text{ref}})$, and the reference frequency f_{ref} ; see [Loss parameters: Definition](#) above.

Compensate Meas's Transm. indicates the ports for which a [direct fixture compensation](#) has been carried out, replacing the offset parameters.

NOTE Since the loss at the reference frequency is stored as loss per length, it can only be changed if the corresponding length is larger than zero.

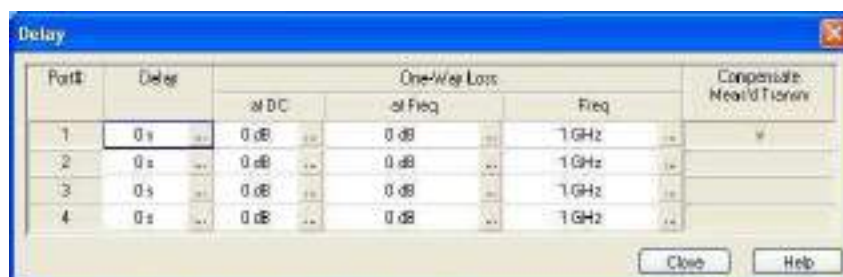

Remote control: `[SENSe<Ch>:]CORRection:EDELay<port_no>[:TIME]`
`[SENSe<Ch>:]CORRection:LOSS<port_no>`
`[SENSe<Ch>:]CORRection:LOSS<port_no>:FREQuency`
`[SENSe<Ch>:]CORRection:LOSS<port_no>:OFFSet`
`[SENSe<Ch>:]CORRection:OFFSet<port_no>:DFComp[:STATE]?`

Auto Length

Adds an electrical length offset to the active test port with the condition that the residual delay of the active trace (defined as the negative derivative of the phase response) is minimized across the entire sweep range. If [Delay](#) is the selected trace format, the entire trace is shifted in vertical direction and centered around zero. In phase format, the *Auto Length* corrected trace shows the deviation from linear phase. The effect of a dispersive connector type (i.e. a waveguide; see [Offset Model](#) dialog) assigned to the receiving port of the measured quantity is taken into account.

If the measured quantity is a ratio, or if it is derived from a ratio, its receiving port is given as the index of the wave quantity in the numerator. If the active trace shows an S-parameter S_{ij} , then *Auto Length* adds a length offset at port i .

TIP Length and delay measurement, related settings

Auto Length is suited for length and delay measurements on transmission lines.

 Connect a (non-dispersive) cable to a single analyzer port no. n and measure the reflection factor S_{nn} .

 Select *Auto Length*.

The delay is displayed in the *Delay* dialog. The cable length, depending on the velocity factor, can be read in the *Mechanical Length* dialog.

It is also possible to determine cable lengths using a transmission measurement. Note that *Auto Length*

always provides the **single** cable length and the delay for a propagation in **one** direction.

The analyzer provides alternative ways for delay measurements:



Measure the reflection factor and select *Trace – Format – Delay*. This yields the delay for propagation in forward **and** reverse direction and should be approx. twice the *Auto Length* result. For transmission measurements, both results should be approx. equal.



Measure the reflection factor and select *Trace – Format – Phase*. Place a marker to the trace and activate *Trace – Trace Funct – Trace Statistics – Phase Delay / El Length*. This yields the delay in one direction and should be approx. equal to the *Auto Length* result.

The measurement results using trace formats and trace statistics functions depend on the selected delay aperture and evaluation range. *Auto Length* is particularly accurate because it uses all sweep points. For non-dispersive cables, aperture and evaluation range effects are expected to vanish.

Use [Zero Delay at Marker](#) to set the delay at a special trace point to zero.



Preconditions for Auto Length, effect on measured quantities and exceptions

Auto Length is enabled if the measured quantity contains the necessary phase information as a function of frequency, and if the interpretation of the results is unambiguous:

- A frequency sweep must be active.
- The measured quantity must be an S-parameter, ratio, wave quantity, a converted impedance or a converted admittance.

The effect of *Auto Length* on S-parameters, wave quantities and ratios is to eliminate a linear phase response as described above. The magnitude of the measured quantity is not affected. Converted [admittances](#) or [impedances](#) are calculated from the corresponding *Auto Length* corrected S-parameters. Y-parameters, Z-parameters and stability factors are not derived from a single S-parameter, therefore *Auto Length* is disabled.

Auto Length for logical ports

The *Auto Length* function can be used for balanced port configurations as well. If the active test port is a logical port, then the same length offset is assigned to both physical ports that are combined to form the logical port. If different length offsets have been assigned to the physical ports before, they are both corrected by the same amount.

Remote control: `[SENSe<Ch>:]CORRection:EDELay<port_no>:AUTO ONCE`

Auto Length and Loss

Determines all offset parameters such that the residual group delay of the active trace (defined as the negative derivative of the phase response) is minimized and the measured loss is minimized as far as possible across the entire sweep range. *Auto Length and Loss* involves a two-step procedure:

- An [Auto Length](#) correction modifies the phase of the measured quantity, minimizing the residual group delay. The magnitude of the measured quantity is not affected.
- The *Auto Loss* correction modifies the magnitude of the measured quantity, leaving the (auto length-corrected) phase unchanged.



If *Auto Length and Loss* is used with a line connected to a test port, the end of the line should be left open.

**Preconditions for Auto Length and Loss, effect on measured quantities and exceptions**

Auto Length and Loss is enabled if the measured quantity contains the necessary phase information as a function of the frequency, and if the interpretation of the results is unambiguous:

- A frequency sweep must be active.
- The measured quantity must be an S-parameter, ratio, wave quantity, a converted impedance or a converted admittance.

The effect of *Auto Length and Loss* on S-parameters, wave quantities and ratios is to eliminate a linear phase response and account for a loss as described above. Converted [admittances](#) or [impedances](#) are calculated from the corresponding *Auto Length and Loss* corrected S-parameters. Y-parameters, Z-parameters and stability factors are not derived from a single S-parameter, therefore *Auto Length and Loss* is disabled.

Calculation of loss parameters

The loss is assumed to be given in terms of the DC loss Loss_{DC} , the reference frequency f_{ref} , and the loss at the reference frequency $\text{Loss}(f_{\text{ref}})$. The formula used in the *Auto Loss* algorithm is similar to the formula for manual entry of the loss parameters (see [Loss parameters: Definition](#)). The result is calculated according to the following rules:

- The reference frequency f_{ref} is kept at its previously defined value (default: 1 GHz).
- The DC loss c is zero except for wave quantities and for S-parameters and ratios with maximum dB magnitude larger than -0.01 dB.
- *Auto Length and Loss* for a wave quantity centers the corrected dB magnitude as close as possible around 0 dBm.
- *Auto Length and Loss* for S-parameters and ratios centers the corrected dB magnitude as close as possible around 0 dB.

The resulting offset parameters are displayed in the *Electrical Length*, *Mechanical Length*, and *Delay* dialogs.

Auto Length and Loss for logical ports

The *Auto Length and Loss* function can be used for balanced port configurations as well. If the active test port is a logical port, then the same offset parameters are assigned to both physical ports that are combined to form the logical port. If different offset parameters have been assigned to the physical ports before, they are both corrected by the same amount.

Remote control: `[SENSe<Ch>:]CORRection:LOSS<port_no>:AUTO ONCE`

Fixture Compensation

Fixture Compensation opens a submenu to correct the measurement result for the effects of a test fixture.


**Fixture Compensation**

Fixture compensation is an automated length offset and loss compensation for test fixtures with up to four ports (for 4-port analyzers). The analyzer performs a one-port reflection measurement at each port, assuming the inner contacts of the test fixtures to be terminated with an open or short circuit.

Fixture compensation complements a previous system error correction and replaces a possible manual length offset and loss correction. For maximum accuracy, it is recommendable to place the reference plane as close as possible towards the outer test fixture connectors using a full n-port calibration. The fixture compensation is then carried out in a second step, it only has to compensate for the effect of the test fixture connections.

The following features can further improve the accuracy of the fixture compensation:

- *Direct Compensation* provides a frequency-dependent transmission factor (instead of a global electrical length and loss).
- *Open and Short* causes the analyzer to calculate the correction data from two subsequent sweeps. The results are averaged in order to compensate for errors due to non-ideal terminations.

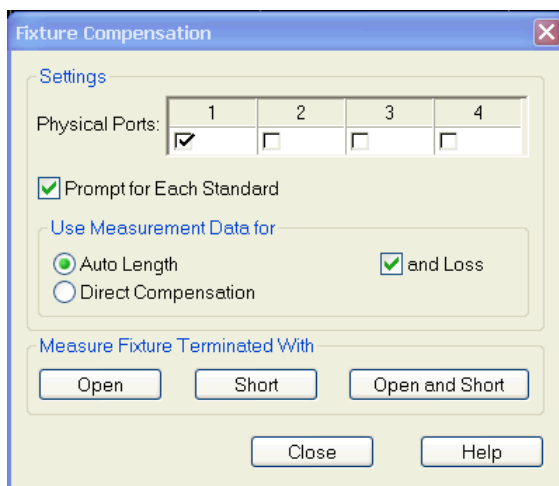

The *Fixture Compensation* dialog provides the following control elements:

- *Physical Ports* selects the NWA/fixture ports where the analyzer performs a fixture compensation sweep in order to determine the compensation data.
- *Prompt for Each Standard* interrupts the fixture compensation process after each fixture compensation sweep so that you can modify your test setup (e.g. terminate the next measured port). Disable *Prompt for Each Standard* to perform all calibration sweeps without interruption.
- *Use Measurement Data for* selects the type of compensation that the network analyzer calculates from the acquired compensation data. *Auto Length* or *Auto Length and Loss* implies that a global electrical length offset and loss is determined in analogy to the general offset compensation (see [Auto Length](#), [Auto Length and Loss](#)). With *Direct Compensation*, a frequency-dependent transmission factor is calculated.
- The *Open*, *Short*, and *Open and Short* buttons open the [Measure Fixture](#) dialog to start the fixture compensation sweeps for test fixture connections which are terminated with an open circuit, a short circuit, or both (*Open and Short*).



Auto Length and Loss vs. Direct Compensation

Auto Length and Loss compensation is a descriptive correction type: The effects of the test fixture connection are traced back to quantities that are commonly used to characterize transmission lines. Use this correction type if your test fixture connections have suitable properties in the considered frequency range:

- The electrical length is approximately constant.

- The loss varies essentially due to the skin effect.

Refer to section [Channel - Offset](#) for details.

Direct Compensation provides a frequency-dependent transmission factor. The phase of the transmission factor is calculated from the square root of the measured reflection factor, assuming a reciprocal test fixture. The sign ambiguity of this calculated transmission factor is resolved by a comparison with the phase obtained in an *Auto Length* calculation. This compensation type is recommended for test fixture connections that do not have the properties described above.

A *Direct Compensation* resets the offset parameters to zero. In the [Electrical Length](#), [Mechanical Length](#), and [Delay](#) dialogs, a checkmark indicates the ports for which a direct compensation has been carried out.



Open / Short vs. Open and Short compensation

A non-ideal open or short termination of the test fixture connections during fixture compensation impairs subsequent measurements, causing an artificial ripple in the measured reflection factor of the DUT. If you observe this effect, an *Open and Short* compensation may improve the accuracy.

Open and Short compensation is more time-consuming because it requires two consecutive fixture compensation sweeps for each port, the first with an open, the second with a short circuit. The analyzer automatically calculates suitable averages from both fixture compensation sweeps in order to compensate for the inaccuracies of the individual *Open* and *Short* compensations.

Remote control: `[SENSe<Ch>:]CORRection:COLLect:FIXTure[:ACQuire]`
`[SENSe<Ch>:]CORRection:COLLect:FIXTure:LMPParameter:LOSS[:STATe]`
`[SENSe<Ch>:]CORRection:COLLect:FIXTure:LMPParameter[:STATe]`



Remote control provides additional flexibility. You can:


- Measure the same port(s) repeatedly without changing the standards and attribute the results to different channels.
- Calculate the compensation data for different ports, using mixed *Open* and *Short* standards.

Refer to the program example for

`[SENSe<Ch>:]CORRection:COLLect:FIXTure[:ACQuire]`.

Measure Fixture

The *Measure Fixture* dialog is opened when an *Open*, *Short*, or *Open and Short* fixture compensation is selected.

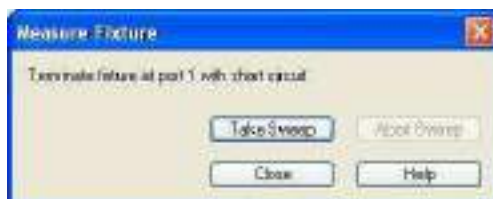

The dialog acts as a wizard for fixture compensation measurements, depending on the settings in the [Fixture Compensation](#) dialog. Proceed as indicated below the title bar. Press *Take Sweep* to start a fixture compensation sweep after establishing the required test setup.

Remote control: `[SENSe<Ch>:]CORRection:COLLect:FIXTure:START`
`[SENSe<Ch>:]CORRection:COLLect:FIXTure[:ACQuire]`
`[SENSe<Ch>:]CORRection:COLLect:FIXTure:SAVE`

Display Menu

The *Display* menu provides all display settings and the functions to activate, modify and arrange different diagram areas.



Diagram Areas

A diagram area is a rectangular portion of the screen used to display traces. Diagram areas are arranged in windows; they are independent of trace and channel settings.

- A diagram area can contain a practically unlimited number of traces, assigned to different channels (overlay mode); see [Traces, Channels and Diagram Areas](#).
- The traces displayed in the diagram area are listed in the upper left corner.
- The channels for all traces are listed in the lower left corner.

The contents of the diagram areas are explained in section [Display Elements](#). Diagram areas are controlled and configured by means of the functions in the *Display* menu and the following additional settings:

- The settings in the [Window](#) menu arrange several windows containing one or more diagram areas within the entire screen.
- Various settings to assign traces to diagram areas are provided in the [Trace – Traces](#) submenu.



The *Display* menu contains the following functions and submenus:

- [Area Select](#) provides functions to create and delete diagram areas, select an area as the active area, arrange traces to diagram areas and arrange the diagram areas in the active window.
- [Display Config](#) configures the entire screen and the individual diagram areas.

Display - Area Select

The *Area Select* submenu provides functions to create and delete diagram areas, select an area as the active area, and arrange areas in the active window.




Active and inactive traces and diagram areas

The active window can display several diagram areas simultaneously, each with a variable number of traces. One of these areas and traces is active at each time. The area number in the upper right corner of the active area is highlighted. At the same time the active trace is highlighted in the [trace list](#) on top of the active diagram area (Trc 4 in the figure below):

Trc1	S21	dB Mag	10 dB /	Ref 0 dB
Trc2	S11	Phase	45° /	Ref 0°
Trc3	a1	Lin Mag	10 dB /	Ref 0 dBm
Trc4	S21	Phase	45° /	Ref 0°

The analyzer provides several tools to activate a diagram area:

- A left mouse click on a point in the diagram activates the diagram including the last active trace in the diagram.
- [Next Diag. Area](#) and [Previous Diag. Area](#) activate the next/previous diagram including the last active trace in the diagram.
- A left mouse click on a trace list activates the trace including the corresponding diagram.
- Some of the functions of the [Trace – Traces](#) menu activate a particular trace including the corresponding diagram.

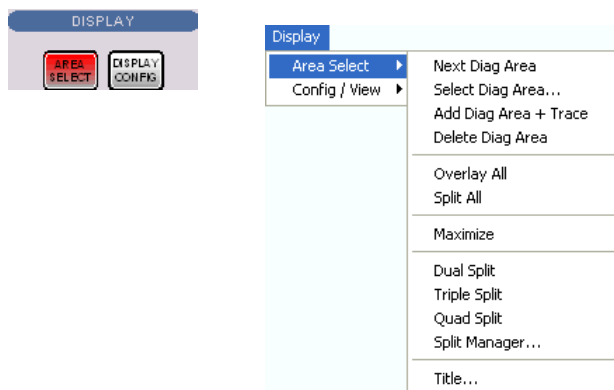

- [Next Diag. Area](#) selects the next diagram area as the active diagram area (disabled if only one diagram area is defined).
- [Select Diag. Area](#) opens a box to select an arbitrary diagram area as the active diagram area (disabled if only one diagram area is defined).
- [Add Diag Area + Trace](#) creates a new diagram area with a new trace.
- [Delete Diag. Area](#) deletes the active diagram area.
- [Overlay all](#) places all traces in a single diagram area which occupies the whole window.
- [Split all](#) splits the active window into as many diagram areas as there are traces and assigns a single trace to each area.
- [Maximize](#) maximizes the active diagram area to occupy the whole window.
- [Dual Split](#) splits the active window into two diagram areas and distributes the traces among the two areas.
- [Triple Split](#) splits the active window into three diagram areas and distributes the traces among the three areas.
- [Quad Split](#) splits the active window into four diagram areas and distributes the traces among the four areas.
- [Split Manager](#) opens a dialog to arrange the diagram areas in the active window.
- [Title](#) opens a dialog to define a title and display it in one of the diagram areas.

Next Diag. Area

Selects the next diagram area as the active diagram area. This function is disabled if the current setup contains only one diagram area. The order of the diagram areas is given by the diagram numbers displayed in the upper right corner.

The diagram number of the active diagram area is highlighted. If one or several traces are assigned to the next diagram area, the last active trace again becomes the active trace.



To activate any diagram area including the last active trace in this area, simply click a point inside the new area.

Remote control:

The numeric suffix `<Wnd>` appended to the `DISPlay:WINDow<Wnd>:...` commands selects a diagram area.

Select Diag. Area

Opens a box to select an arbitrary diagram area of the active setup as the active diagram area. This function is disabled if the current setup contains only one diagram area. The diagram area numbers are displayed in the upper right corner.



The diagram number of the active diagram area is highlighted. If one or several traces are assigned to the previous diagram area, the last active trace again becomes the active trace.



To activate any diagram area including the last active trace in this area, simply click a point inside the new area.

Remote control:

The numeric suffix `<Wnd>` appended to the `DISPlay:WINDow<Wnd>:...` commands selects a diagram area.

Add Diag. Area + Trace

Creates a new diagram area and a new trace, which is displayed in the new diagram area. The trace is created with the channel settings of the previous active trace but with default trace settings.

The new diagram area is numbered `<n>`, where `<n>` is the largest of all existing diagram area numbers plus one.

Remote control: `DISPlay:WINDow<Wnd>:STATe ON`

Delete Diag Area

Deletes the current diagram area including all traces displayed in the diagram area. *Delete Diag Area* is disabled if the setup contains only one diagram area: In manual control, each setup must contain at least one diagram area with one channel and one trace.




To restore a diagram area that was unintentionally deleted, use the [Undo](#) function.

Remote control: `DISPlay:WINDow<Wnd>:STATe OFF`

Overlay all

Places all traces in a single diagram area which is maximized to occupy the whole window. This function is available irrespective of the trace [Format](#) and the [Channel](#) settings; it is even possible to overlay Cartesian and polar diagrams.

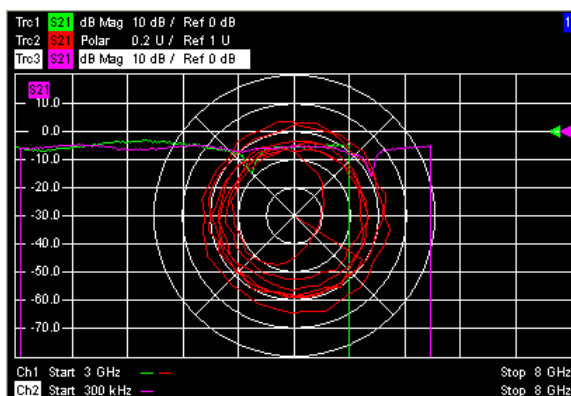

The active trace and active channel is highlighted. The scaling of the axes corresponds to the active trace.




To hide all traces except the active one, select [Split All](#) and [Maximize](#).

Remote control: No command, display configuration only.

Split all

Splits the active setup window into as many diagram areas as there are traces and assigns a single trace to each area. Traces which have been created via remote control but not assigned to diagram areas are also displayed.

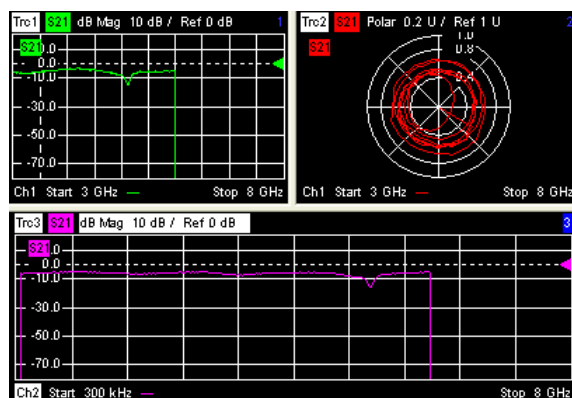


To vary the size and position of the diagram areas, drag and drop the separating frames, use the [Split Manager](#) or the functions of the [Window](#) menu.

Remote control: No command, display configuration only.

Maximize

Maximizes all diagram areas of the active setup to occupy the whole window, placing the active diagram area on top. While *Maximize* is selected *Next Diag. Area* or *Select Diag. Area* can be used to activate and display the other diagram areas. The remaining commands of the *Area Select* submenu except *Title* are disabled.

Clicking *Maximize* again restores the previous display configuration.

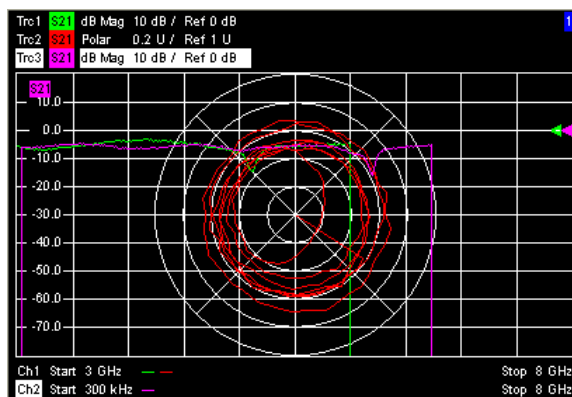


A double-click into any point in the diagram area is equivalent to the *Maximize* function. To view all traces in a common, maximized diagram area, select [Overlay all](#).

Remote control: `DISPlay:WINDow<Wnd>:MAXimize ON | OFF`

Dual Split

Splits the window horizontally into two diagram areas and distributes the traces among the two areas, separating diagrams with different trace [Format](#) and [Channel](#) settings (e.g. Cartesian and polar diagrams).

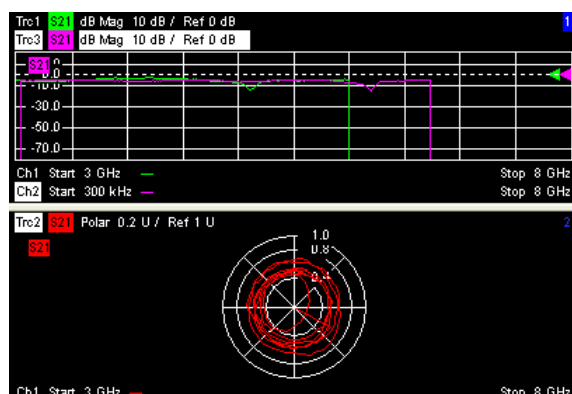

If only one trace is available, the lower diagram area is created with a new trace.




To vary the size and position of the two diagram areas, drag and drop the separating frames, use the [Split Manager](#) or the functions of the [Window](#) menu.

Remote control: No command, display configuration only.

Triple Split

Splits the active window into three diagram areas and distributes the traces among the three areas, separating diagrams with different trace [Format](#) and [Channel](#) settings (e.g. Cartesian and polar diagrams).

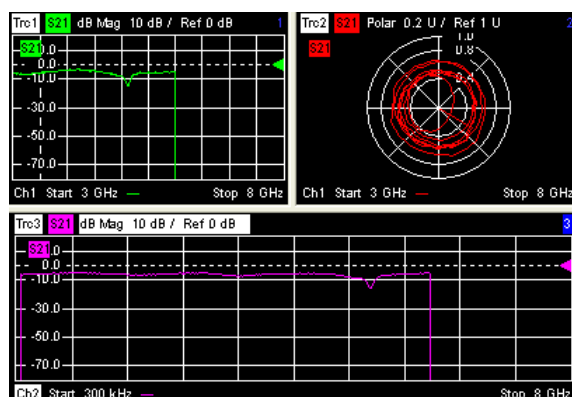

If less than three traces are available, some diagram areas are empty and display *No Trace*.




To vary the size and position of the diagram areas, drag and drop the separating frames, use the [Split Manager](#) or the functions of the [Window](#) menu.

Remote control: No command, display configuration only.

Quad Split

Splits the active window into four diagram areas and distributes the traces among the four areas, separating diagrams with different trace [Format](#) and the [Channel](#) settings (e.g. Cartesian and polar diagrams).

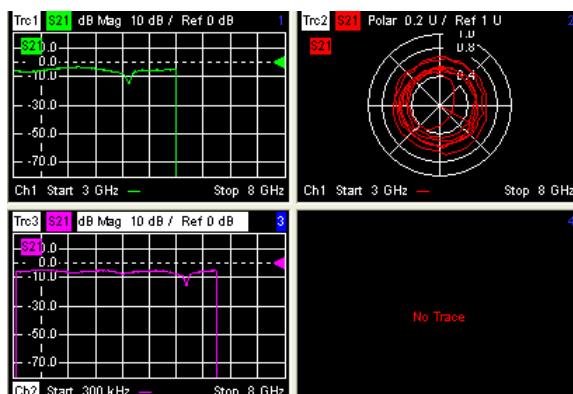

If less than four traces are available, some diagram areas are empty and display *No Trace*.

TIP To vary the size and position of the diagram areas, drag and drop the separating frames, use the [Split Manager](#) or the functions of the [Window](#) menu.

Remote control: No command, display configuration only.

Split Manager

Opens a dialog to arrange the diagram areas in the active window.




- *Split Mode* provides a drop-down list to select alternative display schemes for the diagram areas (see examples for split modes below).
- *Number of Diagram Areas* indicates the total number of diagram areas. Increasing/decreasing the number creates new diagram areas or deletes diagram areas.




Examples for split modes

The following examples were obtained with 3 diagram areas, each with 1 trace.


Lineup

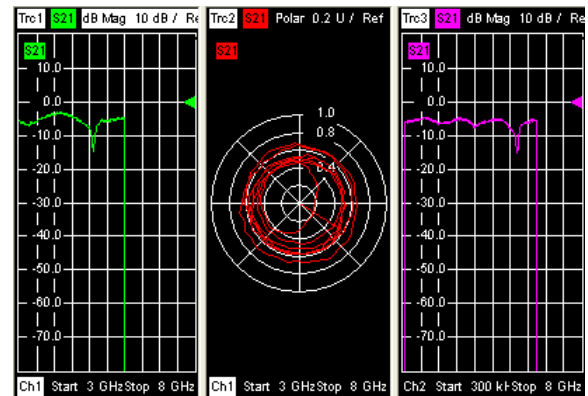


Stack

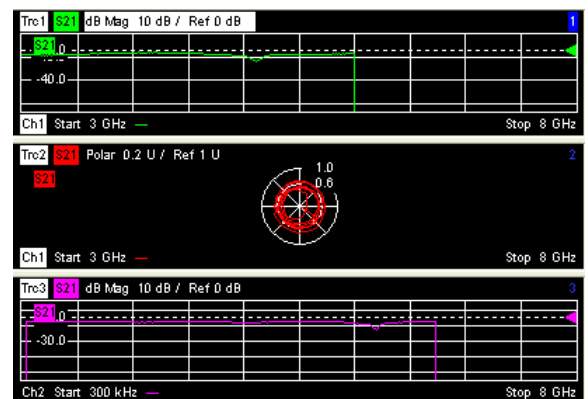


Tile Horizontally

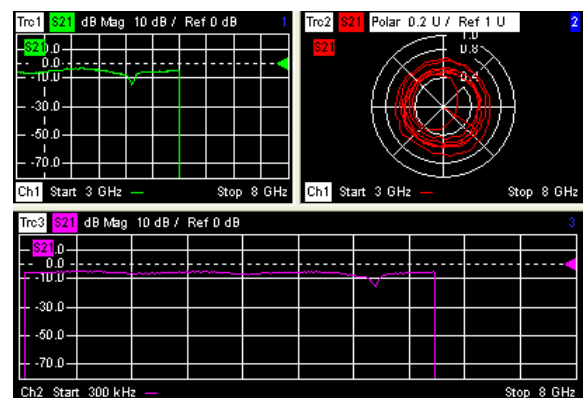

Tile Vertically

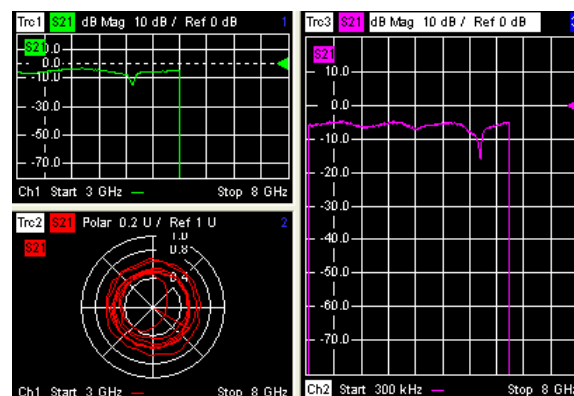

Rows and Columns (2 | 1): the 3rd trace is displayed in overlay mode.

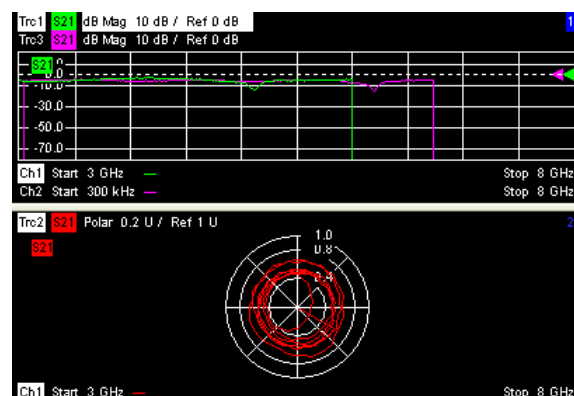

Remote control: No command, display configuration only.

Title

Opens a dialog to opens a dialog to define a title and display it in one of the diagram areas.



- *Title* provides an input field for the title string. The title may comprise a practically unlimited number of characters and is centered in a line below the top of the diagram area.
- *Diagram Area* provides a drop-down list of all diagram areas of the current setup. The title is assigned to the selected area.
- *All Titles Off* removes the titles from all diagram areas. The titles are hidden but not deleted: Unchecking *All Titles Off* displays the titles again.

Remote control: `DISPlay:WINDow<Wnd>:TITle:DATA '<title>'`
`DISPlay:WINDow<Wnd>:TITle:STATE <Boolean>`


In remote control, it is also possible to define a diagram name, and to retrieve lists of

diagram areas and traces:

```
DISPlay:WINDow<Wnd>:NAME '<Name>'
DISPlay:WINDow<Wnd>:CATalog?
DISPlay:WINDow<Wnd>:TRACe<WndTr>:CATalog?
```

Display Config

The *Display Config* submenu configures the screen by showing or hiding controls and information elements and controls the appearance of the individual diagrams.

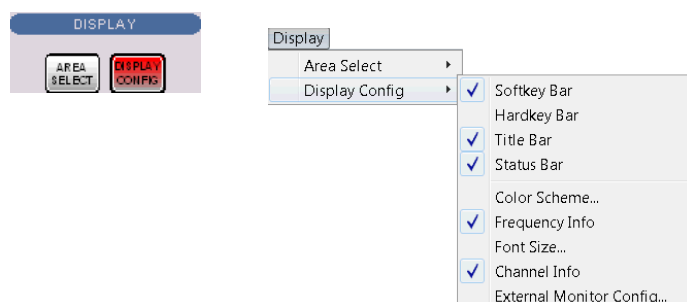

The *Display Config* menu contains the following functions:

- **Softkey Bar** shows or hides the softkey bar at the right edge of the screen.
- **Hardkey Bar** shows or hides the hardkey bar at the left edge of the screen.
- **Title Bar** shows or hides the title bar of the NWA application.
- **Status Bar** shows or hides the status bar across the bottom of the screen.
- **Color Scheme** controls the colors in all diagram areas.
- **Frequency Info** shows or hides the frequency values in the diagram areas.
- **Font Size** changes the size of the fonts in the diagram on a relative scale between 80% and 170%. 100% corresponds to normal font size.
- **Channel Info** shows or hides the channel list below the diagram.
- On instruments running Windows 7, *External Monitor Config* opens a small dialog that briefly describes how to use the *Graphics Control Panel* in order to set up an **external monitor** and provides direct access to it.

Hiding the controls and information elements leaves more space for the diagram areas. All elements may be shown or hidden simultaneously. A checkmark next to the menu item indicates that the view element is displayed.


Remote control

Font Size:

Channel Info: `DISPlay:RFSize`
`DISPlay:ANNotation:CHANnel[:STATE] ON | OFF`

Softkey Bar

Shows or hides the softkey bar at the right edge of the screen.

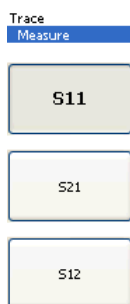

The softkey bar shows up to 8 commands of the active menu indicated above softkey no. 1. The figure above shows the upper part of the softkey bar corresponding to the *Trace – Measure* submenu. Pressing the key to the right of a softkey directly activates a submenu, calls up the numeric entry bar or a dialog or initiates an action. See [Softkey Bar](#) in the introductory chapter for more information.

Hardkey Bar

Shows or hides the hardkey bar (front panel key bar) at the right edge of the screen (to the left of the softkey bar).



The hardkey bar represents the most commonly used front panel keys of the analyzer. Clicking a key symbol executes the action of the corresponding key.

See [Hardkey Bar](#) in the introductory chapter for more information.

Title Bar

Shows or hides the title bar of the NWA application.



The title bar provides the [Control](#) menu and the buttons to minimize, maximize and close the main application window. In normal operation using the analyzer's display these functions are not needed, so the title bar is hidden by default.

Status Bar

Shows or hides the [status bar](#) across the bottom of the screen.



The status bar describes the current channel (if the setup contains only one channel), the progress of the

sweep and the control mode of the analyzer (*LOCAL* or *REMOTE*).

Color Scheme

Controls the colors in the diagram areas. Color schemes are global settings and apply to all active setups.



The following *Predefined Schemes* are optimized for the analyzer screen and for color hardcopies, respectively:

- *Dark Background* sets a black background color. The traces and information elements in the diagram areas are displayed in different colors. This setting is usually suitable for observing results on the analyzer screen.
- *Light Background* sets a light background color. The traces and information elements in the diagram areas are displayed in different colors. This setting is suitable for generating color hardcopies of the screen.

The following *Predefined Schemes* can be appropriate for generating black-and-white hardcopies of the screen:

- *Black and White Line Styles* sets a white background color. All traces and information elements in the diagram areas are black, however, the traces are drawn in different line styles.
- *Black and White Solid* sets a white background color. All traces and information elements in the diagram areas are black. All traces are drawn with solid lines.

[Define User Scheme...](#) opens a dialog to modify the predefined schemes, changing the colors and styles of the individual display elements.



Use *Define User Scheme* to create, save and recall your own color scheme.

Remote control: `SYSTem:DISPlay:COLor`

Define User Color Scheme

The *Define User Color Scheme* dialog modifies the predefined [color schemes](#), changing the colors and styles of the individual display elements. User-defined color schemes can be saved to a file for later reuse.



The following control elements change the current color scheme:

- The screen element to be modified is selected from the *Element* drop-down list. The list contains the background and all traces, text elements and lines in the diagrams.
- *Color* opens a standard color dialog to assign a color to the selected element. Use the *What's This?* help button  in the dialog to obtain detailed information.
- *Trace Style* and *Trace Width* are enabled if the selected element is a trace.
- *Use same Color for all Markers* allows to select a common marker color, which is independent of the trace colors. To define the common color, select the *Same Color for all Markers* element.
- *Keep Trace Color over Reassignment of Diagram Area* controls the color of traces that are assigned to another diagram area or created together with a new diagram areas; see background information below.



Effects of Keep Trace Color...

The analyzer assigns trace colors according to a predefined scheme, starting with the colors that are easiest to distinguish. On one hand it is advantageous to use the colors at the beginning of the scheme. On the other hand, it is often desirable to use different colors in different diagram areas so that any trace that is moved from one diagram area to another can keep its color.

Keep Trace Color... changes between these two alternative color modes as shown below.

Keep Trace Color	Move trace to another diagram area (Trace Manager)	Add Trace + Diag. Area (Trace – Trace Select...)
☐	Trace color changed according to the new diagram area's color scheme	Color scheme of the new diagram area is independent, restarts with the first colors. Consequently the new trace is displayed with a color that has been already used.
☒	Trace keeps its color	Color scheme of the new diagram area continues color scheme of the previously active area. The new trace is displayed with a new color.

See also program example for `DISPlay:CMAP<Element>:TRACe:COLor[:STATe]`.

Two buttons at the bottom of the dialog are used to save or recall user-defined color schemes.

- *Save...* opens a [Save As...](#) dialog to select a color scheme file and save the current settings. Color scheme files are non-editable files with the extension **ColorScheme*; the default directory is `C:\Program Files\Rohde&Schwarz\Network Analyzer\ColorSchemes`.
- *Recall...* opens an [Open File...](#) dialog to load and apply a color scheme saved before.



To recall a color scheme file (*.ColorScheme) you can also use the Windows Explorer and simply

double-click the file or drag and drop the file into the NWA application.

Remote control: `DISPlay:CMAP<Element>:RGB <red>, <green>, <blue> [,<trace_style>, <trace_width>]`
`DISPlay:CMAP<Element>:MARKer[:STATe] ON | OFF`
`DISPlay:CMAP<Element>:TRACe:COLor[:STATe] ON | OFF`
`MMEMoRY:LOAD:CMAP`
`MMEMoRY:STORe:CMAP`

Frequency Info

Shows or hides all frequency stimulus values in the diagrams. This comprises:


- The frequency stimulus ranges below the diagram area, if a frequency sweep is active.
- The CW frequency in the center below the diagram area, if a power, time or CW mode sweep is active.
- The frequency stimulus values in the marker info field, at the marker position and in the marker table.

The *Frequency Info* setting is valid for frequency and segmented frequency sweeps only.

Remote control: `DISPlay:ANNotation:FREQuency[:STATe] ON | OFF`

System Menu

The *System* menu provides functions to return to a defined instrument state, reverse operations, access service functions and define various system-related settings.

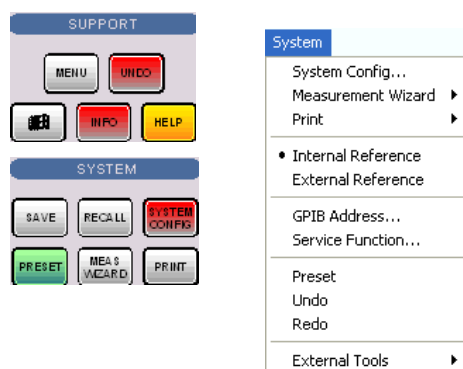


The *System* menu contains the following functions:

- *System Config* opens a dialog to define various system-related settings.
- *Measurement Wizard* calls up a series of dialogs providing a guided standard measurement.
- *Print* opens a submenu to generate a copy of the current screen.
- *Int. Reference* selects the internal reference clock for synchronization.
- *Ext. Reference* selects an external clock signal for synchronization.

- [GPIB Address](#) opens the numeric entry bar to define the analyzer's GPIB address.
- [Service Function](#) opens a dialog to access the service functions of the instrument.
- [Preset](#) performs a configurable instrument reset.
- [Undo](#) reverses the previous operation.
- [Redo](#) reverses the action of the *Undo* command.
- [External Tools](#) opens a submenu with various demo setups and editing tools.

System Configuration

Opens a dialog to define various system-related settings.

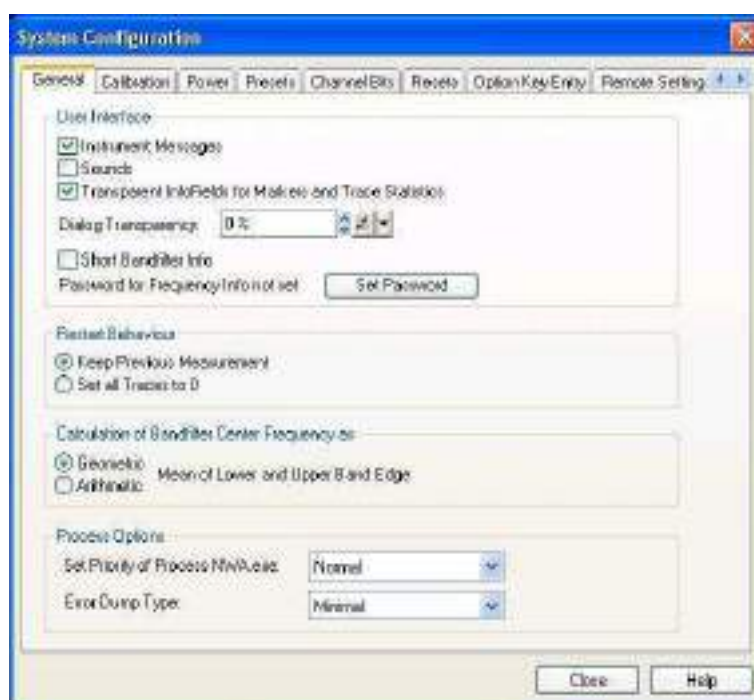

The *System Configuration* dialog is divided into the following tabs:

- [General](#)
- [Calibration](#)
- [Power](#)
- [Presets](#)
- [Channel Bits](#)
- [Resets](#)
- [Option Key Entry](#)
- [Remote Settings](#)
- [External Power Meters](#)


- [External Generators](#)
- [Frequency Converter](#)
- [LXI Configuration](#)
- [Matrix Configuration](#)



The System Configuration comprises global settings that are not affected by a preset of the instrument ([Preset](#) or **RST*).

General

Provides user interface configurations and other general settings.

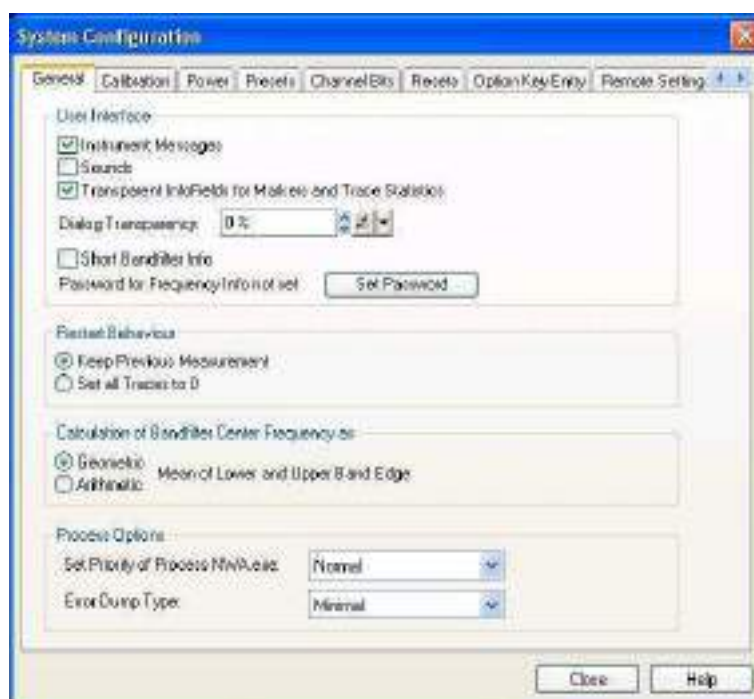

The settings in the *General* tab are arranged in several panels.

- The check boxes in the *User Interface* panel switch the instrument messages, acoustic messages, or transparent info fields for [markers](#) and [trace statistics](#) on or off. Sounds are generated when the analyzer generates a notice/status message or a warning (alarm sounds) or during calibration. The settings are also valid if the instrument is remote-controlled. Transparent info fields do not hide an underlying trace.
- *Dialog Transparency* varies the transparency of all dialogs on a scale between 0% and 100%. 0% transparency means that dialogs completely hide the diagram area in the background. With a maximum transparency of 100%, the dialogs are still visible but clearly show the underlying traces and display elements.
- *Short Bandfilter Info* reduces the size and contents of the bandfilter info field; see [Search Markers and Result Off](#): Results are described in abbreviated form; values are rounded to 5 decimal places.
- *Password for Frequency Info* allows you to enter a password to permanently suppress all


frequency information in the dialogs (including the channel list, the marker info fields, and the marker tables). The same password is used to de-activate the password protection. If no password is set, *Display – Display Config – Frequency Info* displays or hides the frequency information.

- *Restart Behavior* configures the sweep behavior after a restart (*Channel – Sweep – Restart*). *Keep Previous Measurement* means that the previous measurement results are maintained until they are replaced by new, valid results. *Set all Traces to 0* means that the restart deletes all previous results and sets the traces to zero. The zeros are progressively replaced by the new, valid results. The setting is also valid for remote-controlled operation. If a single sweep is interrupted and restarted while *Set all Traces to 0* is active, then the sweep segment with zero trace data indicates the previous (interrupted) sweep range. A typical scenario is a sweep in external trigger mode, where the triggered measurement sequence is a sweep segment or point: The sweep will be interrupted when the analyzer receives no more trigger pulses.
- *Calculation of Bandfilter Center Frequency as* selects the definition of the center frequency for the bandfilter search; see [Bandfilter parameters](#). The center frequency f_{Center} is calculated from the measured *Lower Band Edge* (LBE) and *Upper Band Edge* (UBE) values. If *Geometric* mean is selected, $f_{\text{Center}} = \sqrt{f_{\text{LBE}} \cdot f_{\text{UBE}}}$. On a logarithmic frequency scale, this ensures equal spacing from the band edges. If *Arithmetic* mean is selected, $f_{\text{Center}} = (f_{\text{LBE}} + f_{\text{UBE}})/2$. The arithmetic mean value is always larger than the geometric mean value. Both values are close if the bandwidth is small compared to the center frequency.
- *Process Options* offers settings to control aspects of the NWA application
Set Priority of Process Nwa.exe selects the priority of the running NWA application. Normal priority is the recommended setting for most measurements. Raise the priority for remote-controlled measurements which produce large amounts of data that the network analyzer must process synchronously and without interruption. Note that a higher priority of the NWA application can adversely affect the performance of other processes running on the analyzer.
Error Dump Type controls the amount of diagnostic information collected when the NWA application encounters an error.
 When the firmware encounters an internal error it writes a dump file to disk. Dump files are included in the [System Report](#) and can help to identify issues. They are small and should not affect normal operation. Generation of dump files can still be disabled altogether by selecting *None* from the *Error Dump Type* list. The remaining options (*Normal*, *Large*, *Full*) should only be used when instructed to do so by R&S Support.

Remote control `SYSTem:SOUNd:ALARm[:STATe]`
`SYSTem:SOUNd:STATus[:STATe]`
`SYSTem:TRESet[:STATe]`
`CALCulate<Chn>:MARKer<Mk>:FUNctio:n:BWIDth:GMCenter`
`SYSTem:PRIority NORMal | ANORMal | HIGH`

Calibration

Provides general system error correction (calibration) settings.

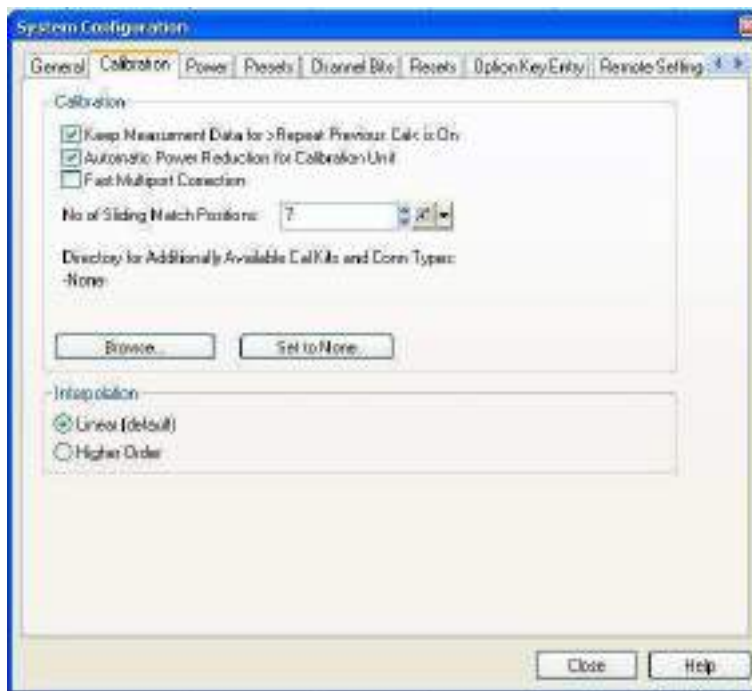

The *Calibration* tab provides the following settings:

- *Keep Measurement Data for >Repeat Previous Cal<* causes the raw measurement data of the standards to be stored after the calibration is completed. This function is equivalent to the parameter in the [Measure Standards](#) dialog of the calibration wizard (see detailed description there) but applies to all calibrations.
- *Automatic Power Reduction for Calibration Unit* sets the source power at all test ports to –10 dBm while an [automatic calibration](#) using the calibration unit R&S ZV-Z5x is active. Applying this source power to the ports of the calibration unit ensures best accuracy of the automatic calibration. The source powers are reset to their original values after the calibration is completed. The automatic power reduction can be deactivated in case that the test setup introduces a large attenuation.
- *Fast Multiport Correction* activates an approximate but faster algorithm for the correction of measurement results based on the system error correction data. The fast algorithm is used for measurements with more than 2 ports. Select *Fast Multiport Correction* to speed up the measurement, especially if you use 4 or more analyzer ports and if your network analyzer is equipped with a CPU board FMR6. Depending on the test scenario, the exact algorithm (*Fast Multiport Correction: Off*) can improve the measurement accuracy.
- *No of Sliding Match Positions* defines the maximum number of different positions to be measured if a sliding match standard (sliding load) is used for calibration. The different positions appear in the [Measure Standards](#) dialog of the calibration wizard. A sliding match calibration is valid after three calibration sweeps at different match positions; however, calibration sweeps at additional positions can still improve the accuracy. In general 4 to 6 positions are recommended.
- *Directory for Additionally Available Cal Kits and Conn Types* shows the name and path of a special directory for [cal kit files](#) (*.calkit). All cal kit files in the special directory will be (re-)loaded automatically as predefined kits (i.e. read-only kits which cannot be modified) every time the NWA application is started. It is possible to select the default cal kit directory *C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Kits* or any other directory. *None* means that no cal kit files are loaded on start-up.
Use the special directory to make sure that you do not have to import kits manually, even after


terminating the NWA application improperly, in which case previously imported cal kit files will not be stored to the setup file.

- *Interpolation* selects an algorithm for the interpolation of the user system error correction data. Interpolation is applied if the sweep points during the measurement differ from the sweep points during calibration ([state label Cal int](#)). Compared to linear interpolation, the higher order (spline) interpolation may slightly slow down the measurement but can provide better results, at least if the measured trace shows no significant noise or discontinuities. For the factory system error correction data, the analyzer always uses linear interpolation. As a general rule, it is recommended to avoid interpolation whenever possible.

Remote control `[SENSe<Ch>:]CORRection:COLlect[:ACQuire]:RSave:Default
SYSTEM:COMMunicate:RDEvice:AKAL:PREduction[:STATe]
SYSTEM:CORRection:FMPort[:STATe]
MMEMory:LOAD:CKIT:UDIRectory`

Power

Provides source power settings and settings for the true differential mode.

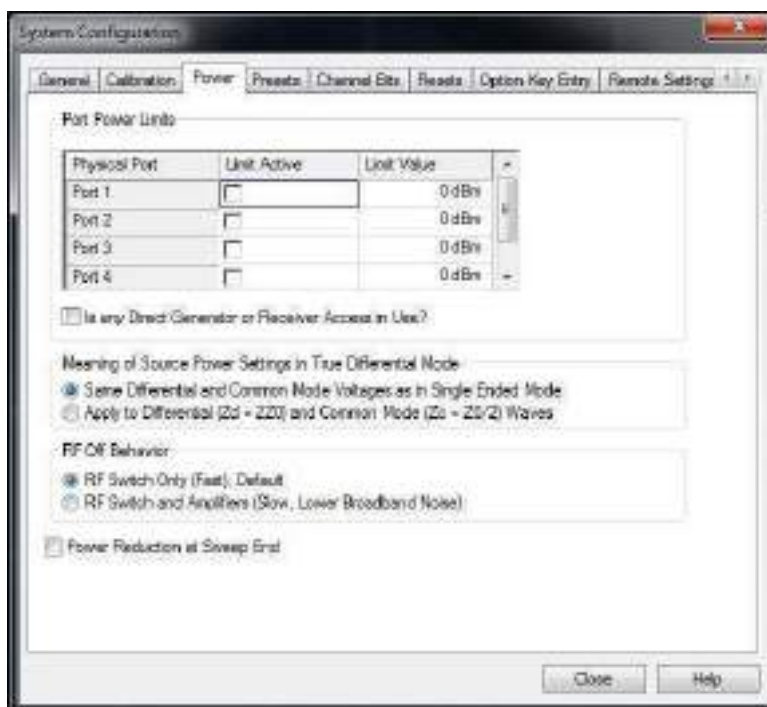

- The *Port Power Limits* limit the source power at the analyzer ports or at the output ports of previously configured external generators. The limits are also valid for measurements with variable source power.
- *Is any Direct Generator or Receiver Access in Use?* should be selected if the additional connectors of option R&S ZVA<frequency>-B16, *Direct Generator and Receiver Access*, are used and if an automatic level control (ALC) is active. With this scenario, the ALC is limited to +1 dB so that the active port power limits cannot be exceeded by more than 1 dB.
- *Meaning of Source Power Settings...* defines the power reference for the true differential mode; see [Source Power in True Differential Mode](#).

- *RF Off Behavior* configures the behavior of the *RF Off* switches in the *Channel – Power Bandwidth Average* menu and in the *Source* section of the *Port Configuration* dialog. In the factory default configuration, only the RF source signal is turned off; the RF amplifiers are still power supplied. In the alternative configuration, the power supply of the RF amplifiers is turned off, too. This further reduces the broadband noise at the source port, however, the required switch-on and settling times introduce an additional delay.
- *Power Reduction at Sweep End* is intended for measurements (primarily: power sweeps) on sensitive DUTs. If enabled, at sweep end the output power of the driving port is reduced as if the channel base power was set to its minimum possible value.
Note: The power is not reduced if there's only a single channel with a single driving port, performing a *Time* or *CW Mode* sweep.




Use port power limits if you want to ensure that sensitive DUTs are protected from excess input levels. Keep in mind that you have to disable the limits explicitly if you want to use the full output level range of your analyzer again. Note that the port power limits are ignored while an ALC loop is active. A small ALC control range will ensure low signal levels.

Remote control `SOURce<Ch>:POWER<Pt>[:LEVel][:IMMediate]LLIMit[:STATe]`
`SOURce<Ch>:POWER<Pt>[:LEVel][:IMMediate]LLIMit:VALue`
`SOURce<Ch>:POWER<Pt>[:LEVel][:IMMediate]:LLIMit:DGRaccess`
`SOURce<Ch>:POWER<Pt>:GENerator<Gen>:LLIMit[:STATe]`
`SOURce<Ch>:POWER<Pt>:GENerator<Gen>:LLIMit:VALue`
`SOURce<Ch>:TDIF:WAVes SENDed | DCMode`
`OUTPut:STATe:TYPE`
`SOURce<Ch>:POWER<Pt>:REDuce`

Presets

This tab specifies the preset behavior of the network analyzer.

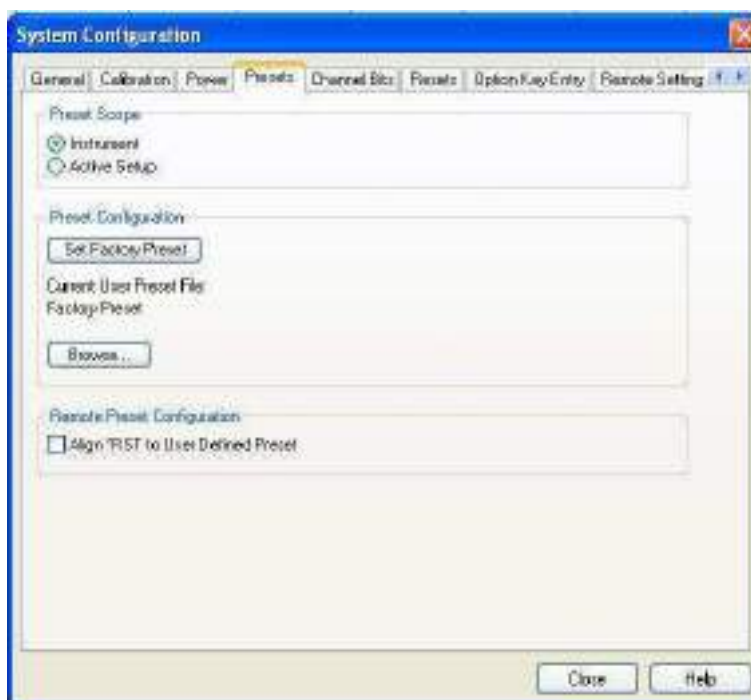

The *Preset Scope* defines whether a [Preset](#) should restore default settings for the *Active Setup* only, or if it should preset the *Instrument* by closing all open setups and creating a single setup "Set1" with default settings.

The *Preset Configuration* panel allows to specify the default setup to be used for new setups (*File > New*) or as [Preset](#): press *Set Factory Preset* to use the factory-defined setup or press *Browse...* to select a user-defined setup file (*User Preset File*).

If the selected *User Preset File* cannot be accessed (e.g. because it was deleted or moved) or cannot be loaded (e.g. because it contains mismatching frequency converter settings), the *Factory Preset* is used as a fall-back.

Note that a Preset does not affect the global settings of the *System Configuration* dialog.

The *Remote Preset Configuration* pane allows to define how the remote commands `*RST` and `SYSTem:PRESet` restore default settings:

- If *Align *RST to User Defined Preset* is **not** selected, they **always** restore the *Factory Preset*
- If *Align *RST to User Defined Preset* is selected, they restore the same settings (*Factory Preset* or *User Preset File*) as a [Preset](#) would do




The scope of the `*RST` command is always the *Instrument*, while the scope of the `SYSTem:PRESet` and `SYSTem:FPReset` commands is always the *Active Setup* (in the sense defined above).

Remote control (for Presets):

```
SYSTem:PRESet:SCOPE SINGLE | ALL
SYSTem:PRESet:USER:NAME '<Setup_file>'
SYSTem:PRESet:USER[:STATe]
SYSTem:PRESet:REMOte[:STATe]
```

Channel Bits


Sets a channel-dependent four-bit binary value to control four independent output signals at the [USER CONTROL](#) connector (lines 8, 9, 10, 11). The output signals are 3.3 V TTL signals which can be used to differentiate between up to 16 independent analyzer states. For an application example refer to the detailed [remote control description](#). Setting the channel bits does not change the analyzer state.

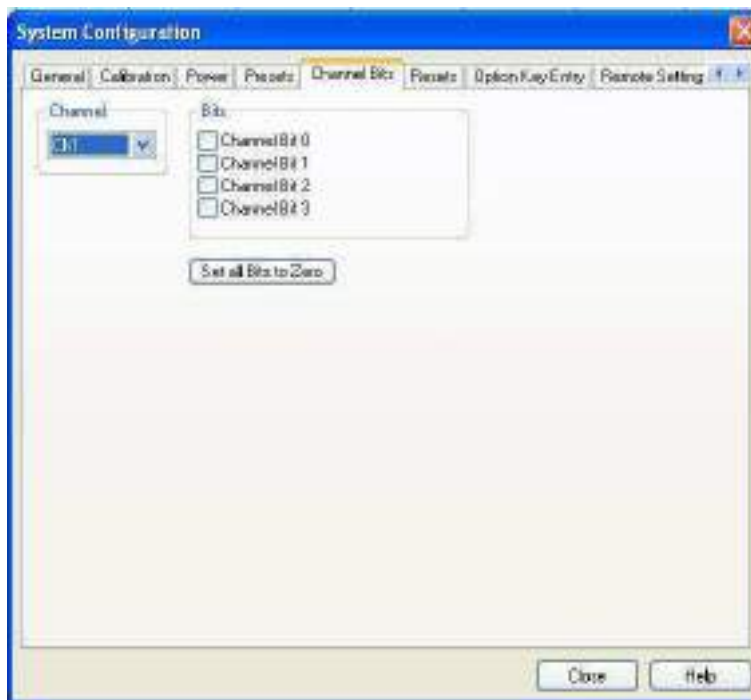

Remote control `CONTrol:AUXiliary:C[:DATA]`
(for Channel Bits): `OUTPut<Ch>:UPORT[:VALue]`

Resets

Provides several buttons to reset global instrument settings and properties. Global settings (e.g. the data related to [global resources](#)) are not affected by an instrument [Preset](#).

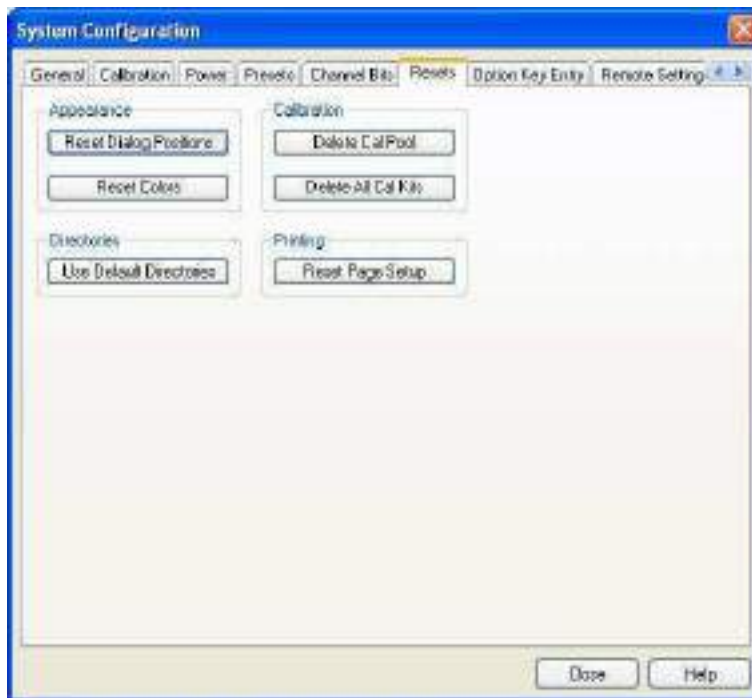

Option Key Entry


Provides an input field for the option key code supplied with each option. A new software option for the network analyzer is enabled by entering the option key and pressing *Install* as described in the dialog.

Alternatively, it is possible to load the option key from the option key (*.xml) file. Use one of the following methods:

- Copy the *.xml file to the root directory of a memory stick accessible from your analyzer and press *Install*.
- Copy the *.xml file to the directory C:\Rohde&Schwarz\Nwa of the analyzer's hard disk and press *Install*.




You can use several *.xml files in order to enable several options simultaneously. *.xml files on the storage medium that are no option key files are ignored.

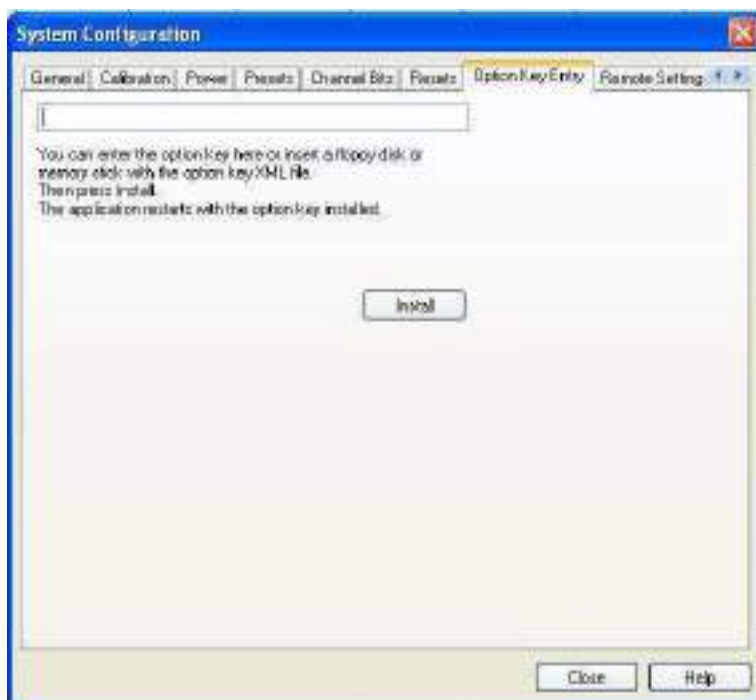

Remote Settings

Provides settings for the remote control (RC) interface of the analyzer.

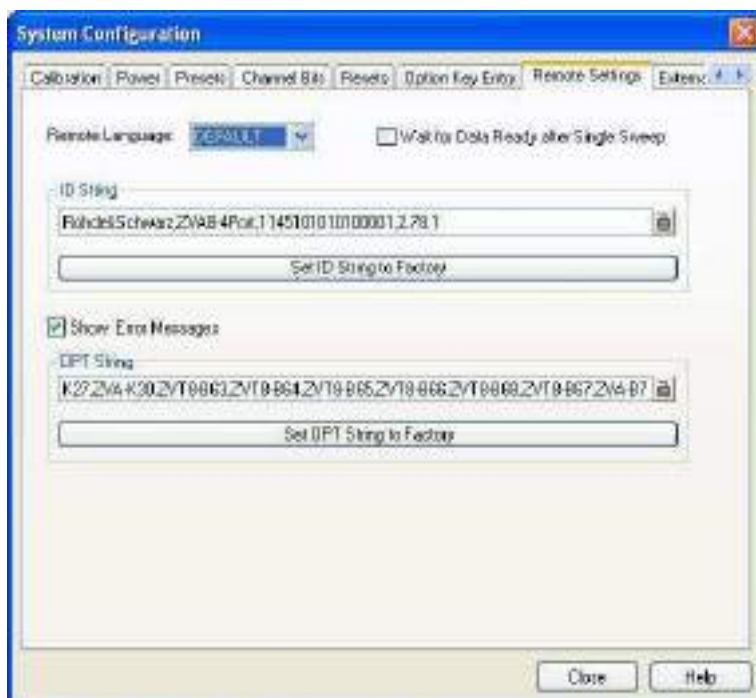

The *Remote Language* for the analyzer is specified in the upper part.

- The *DEFAULT* language corresponds to the instrument control commands reported in this

manual; see chapter SCPI Command Reference.

- PNA, HP8510, HP8720, HP8753 ... denote command sets for network analyzers from other manufacturers. The ANRITSU language comprises a basic command set only.



Remote Language settings other than DEFAULT are intended for remote control of the analyzer. A mixed approach, with part of the instrument configuration defined via the GUI, is possible but may cause unexpected results in some instances.

Depending on the remote language, *Wait for Data Ready after Single Sweep* should be selected to ensure the calculation of measurement results is properly completed. The setting causes a *WAI to be inserted after each INITiate<Ch>[:IMMediate] command.

The *ID String* and the *OPT String* of the analyzer are adjusted to the selected *Remote Language*. The strings can be queried via *IDN? and *OPT?, respectively.

- If the *DEFAULT* language is activated, the factory ID string *Rohde&Schwarz,ZVB<Max. Freq.-Ports>Port,<Serial_no>,<FW_Version>* (e.g. *Rohde&Schwarz,ZVB8-4Port,1145101010100001,1.70.5*) is set. The OPT string is a comma-separated list of all installed software and hardware options, e.g. *ZVAB-K2, ZVA-K4*. The bit order for transferred binary data is swapped.
- If the *PNA* language is activated, Agilent-compatible ID and OPT strings are set. The bit order for transferred binary data is normal.
- If one of the *HP xxxx* languages is activated, HP xxxx-compatible ID and OPT strings are set. Binary data is transferred in a device-specific bit order, however, the bit order can be changed using HP xxxx-specific commands.

The ID and OPT strings can be changed or reset to the R&S factory ID string.

Show Error Messages activates a information popup box (tooltip), to be displayed whenever the parser encounters an remote control command error. The tooltip appears at the bottom of the remote or manual screen; e.g.:

Remote Error : -222,"Data out of range;FREQ:STAR 1"

The tooltip is **not** displayed for SCPI errors no. –113, *Undefined header*. Its purpose is to provide information that can be useful for program development and optimization; it does not necessarily indicate that a remote control script is faulty or non-executable.

Remote control `SYSTem:LANGuage`
(for Remote Settings): `SYSTem:IDENTify:STRing`
 `SYSTem:IDENTify:FACTory`
 `FORMat:BORDER NORMal | SWAPped`
 `SYSTem:ERRor:DISPlay`

External Power Meters

Configures external power meters with their connection type and device address.




Use of external power meters, examples


An external power meter can serve different purposes:

- Extended measurement functionality: Each external power meter represents an additional receive port. External generators increase the number of RF output signals of a DUT that the analyzer can

measure simultaneously. They can also provide accurate results for signals at inaccurate or unknown frequencies. A typical example is a [mixer measurement](#) with an unknown LO signal (and therefore unknown IF output frequency).

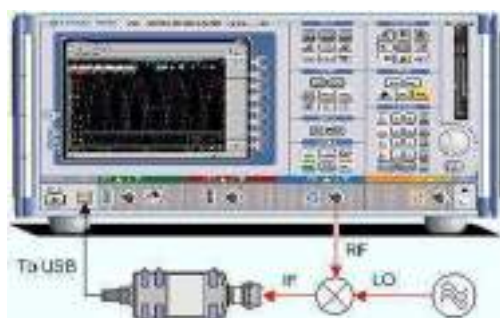

- Power calibration: An external power meter can measure the exact signal power at an arbitrary point in the test setup (reference plane) and thus provide the reference values for a power calibration. A typical example is a [source power calibration](#) for an arbitrary analyzer port.

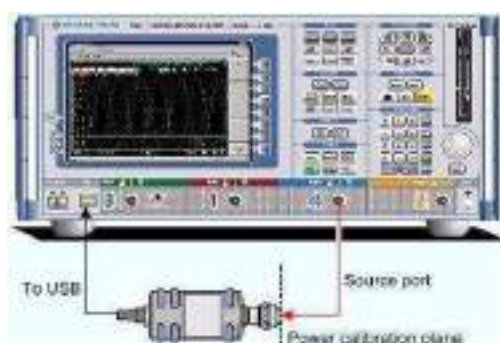

Configured external power meters can be selected as additional receivers in the [Port Configuration](#) and in the power calibration dialogs.



To control external power meters via LAN or GPIB interface, it is necessary to install the Virtual Instrument Software Architecture (VISA) library on the network analyzer. VISA provides the programming interface between the hardware and the analyzer's application environment. A suitable VISA library is available from Rohde & Schwarz, see [Introduction to Remote Control](#). Use the USB-to-IEC/IEEE Adapter (option [R&S ZVAB-B44](#)) to control devices equipped with a GPIB interface.



The *External Power Meters* dialog provides two tables and some additional buttons.

- The upper table (*Found:*) shows all power meters that the analyzer detects to be on line (i.e. connected and switched on). To appear in the table, power meters (except the USB sensors R&S NRT-Zxx) must have been configured previously.
- The *Add v* and *Add All v* buttons copy the selected power meter in the upper table to the lower table so that it is possible to modify the power meter settings and select the power meters as receivers for measurements and power calibrations.
- If *Auto Config NRP-Zxx* is selected, the analyzer automatically configures all NRP-Zxx power meters detected at any of the USB ports as Pmtr 1, Pmtr 2, ... No manual configuration is required.
- The lower table (*Configured:*) shows all configured power meters with their properties. The properties are defined in the [Add/Modify External Power Meter](#) dialog, to be opened by means of the *Add Other...* or *Modify...* buttons. All configured power meters are available as additional receivers for measurements and power calibrations. Once configured, power meters may be temporarily removed from the table of *Configured* devices using the *Delete* button. *Refresh Tables* will recover a previously configured, connected power meter.

An icon in the first columns of the tables indicates whether the power meters are currently available. The *Found:* table and the icons in the *Configured:* table are automatically updated each time the *External Generators* dialog is opened (to update explicitly use the *Refresh Tables* button). The remaining control elements are self-explanatory.



Unintentional switchover to remote control

When using the NI-VISA library, ensure that the network analyzer itself is not listed as a network device in the Measurement & Automation Explorer. Otherwise, Refresh Tables will send an identification query (*IDN?), causing the analyzer to close the System Configuration dialog (without executing Refresh Tables) and to activate the remote screen.



Icons in the power meter tables

The following icons describe the status of a power meter:



The power meter is on-line (connected, switched on, ready to be used).



The power meter was detected (upper table) or configured (lower table) but is not on-line (VISA communication error). Other possible reason: a user-defined power meter configuration file is inconsistent; see [General Rules for Configuration Files](#).



The power meter list could not be refreshed, no communication with the power meter is possible.

Remote control: `SYSTem:COMMunicate:RDEvice:PMETer<pmeter_no>:DEFine`
`SYSTem:COMMunicate:RDEvice:PMETer<pmeter_no>:DELeTe`
`SYSTem:COMMunicate:RDEvice:PMETer<pmeter_no>:CONFIgure:AUTO`
`SYSTem:COMMunicate:RDEvice:PMETer<pmeter_no>:CATalog?`
`SYSTem:COMMunicate:RDEvice:PMETer<pmeter_no>:COUNT?`

Add/Modify External Power Meter

Selects and configures an external power meter.



The following control elements select the power meter type and its connection:

- *Name* is an optional, arbitrary name associated with the power meter. Names appear in the power meter lists in the [External Power Meters](#) tab and in the selection dialogs for received signals (measurements and power calibration). If no name is specified, the power meters are listed as *Pmtr 1*, *Pmtr 2*...
- *Interface* selects an interface/protocol type for the connection. In addition to the *GPiB0* and *VXI-11* interface types (for devices connected to the *IEC Bus* or *LAN1/2* connectors on the rear panel of the analyzer, respectively), the analyzer supports any *Other* interface supported by the installed VISA library.
- *GPiB Address* (or *Hostname* or *IP Address* or *Resource String*, depending on the *Interface* selection) contains the address for the current interface type. GPiB addresses must be unique for all devices connected to the GPiB bus (range: 0 to 30), GPiB and IP addresses must agree with the entries in the VISA library. For an *Other* interface type, the input field contains the *Resource String* from the installed VISA library.
- *Driver* contains a list of all supported power meter driver types. The names in the list are identical with the name of the power meter configuration files (*.pwm) stored in the `resources\extdev` subdirectory of the analyzer's program directory. For detailed information about the configuration files refer to section [Configuration Files](#).
- *Identify Type* sends an identification query (*IDN?) to the specified device address in order to identify the power meter type and select an appropriate configuration file. An error message is displayed if the identification fails. See also [Naming Conventions for Automatic Detection](#).

Remote control: `SYSTem:COMMunicate:RDEvice:GENerator<gen_no>:DEFine`

External Generators


Configures external generators with their connection type and device address.




Use of external generators, examples

An external generator can serve different purposes:

- Extended measurement functionality: Each external generator represents an additional source port. External generators increase the number of RF input signals for the DUT. A typical example is a [mixer measurement](#) with a 2-port analyzer, where an external generator provides the LO input signal.

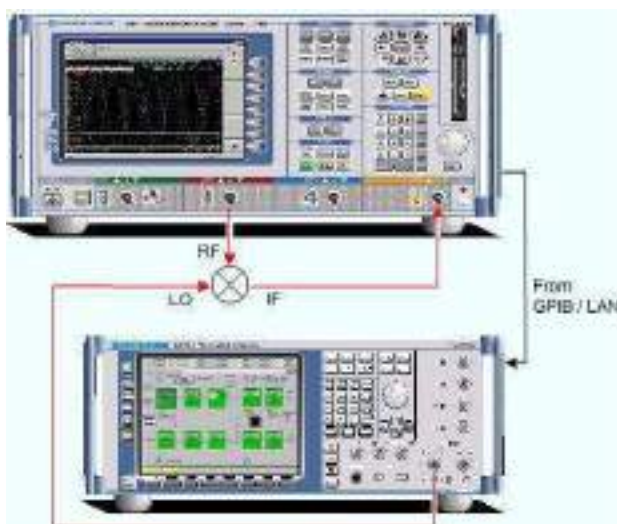


- Power calibration: An external generator can provide the reference signal for a source or receiver calibration. A typical example is a [receiver power calibration](#) using a measured wave b_1 .

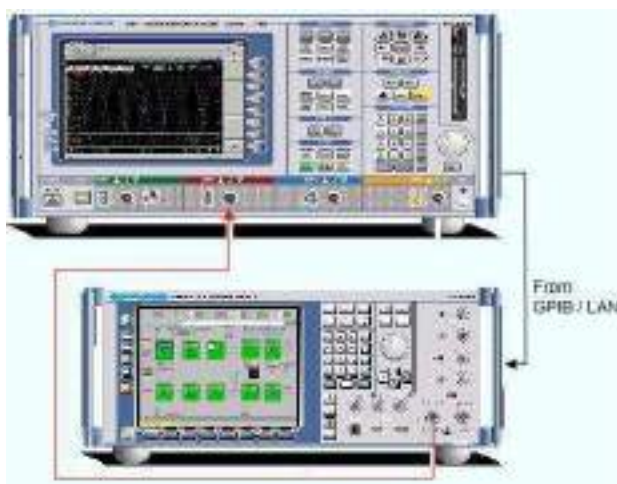

Configured external generators can be selected as additional sources in the [More Wave Quantities](#), [More Ratios](#), [Port Configuration](#), and in the power calibration dialogs.



To control external generators via LAN or GPIB interface, it is necessary to install the Virtual Instrument Software Architecture (VISA) library on the network analyzer. VISA provides the programming interface between the hardware and the analyzer's application environment. A suitable VISA library is available from Rohde & Schwarz, see [Introduction to Remote Control](#). Use the USB-to-IEC/IEEE Adapter (option [R&S ZVAB-B44](#)) to control devices equipped with a GPIB interface.

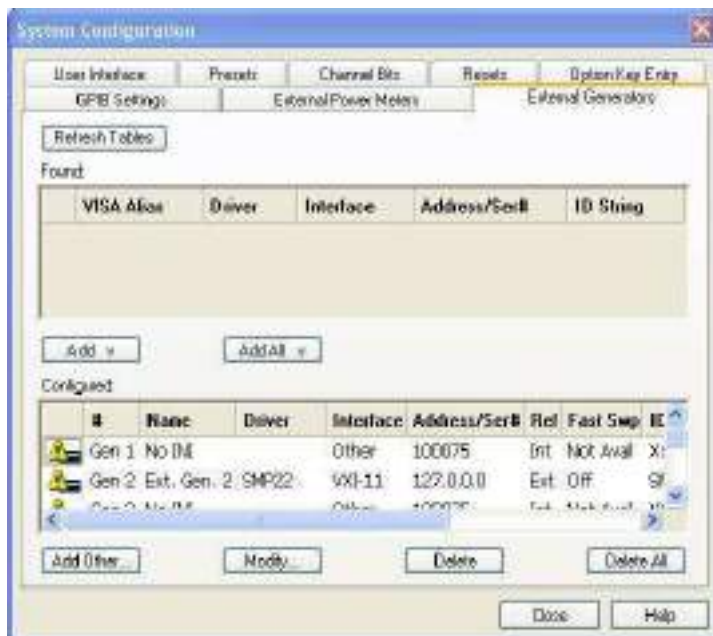

The *External Generators* dialog provides two tables and some additional buttons.

- The upper table (*Found:*) shows all generators that the analyzer detects to be on-line (i.e. connected and switched on). All generators in the table must have been configured previously, however, they can be deleted in the lower table.
- The *Add v* and *Add All v* buttons copy the selected generator in the upper table to the lower table.
- The lower table (*Configured:*) shows all configured generators with their properties. The properties are defined in the [Add/Modify External Generator](#) dialog, to be opened by means of the *Add Other...* or *Modify...* buttons. All configured generators are available as additional sources for measurements and power calibrations.

An icon in the first columns of the tables indicates whether the generators are currently available; see below. The *Found:* table and the icons in the *Configured:* table are automatically updated each time the *External Generators* dialog is opened (to update explicitly use the *Refresh Tables* button). The remaining control elements are self-explanatory.



Unintentional switchover to remote control

When using the NI-VISA library, ensure that the network analyzer itself is not listed as a network device in the Measurement & Automation Explorer. Otherwise, *Refresh Tables* will send an identification query (*IDN?), causing the analyzer to close the *System Configuration* dialog (without executing *Refresh Tables*) and to activate the remote screen.



Icons in the generator tables

The following icons describe the status of a generator:



The generator is on-line (connected, switched on, ready to be used).



The generator was detected (upper table) or configured (lower table) but is not on-line (VISA communication error). Other possible reason: a user-defined power meter configuration file is inconsistent; see [General Rules for Configuration Files](#).



The generator list could not be refreshed, no communication with the generator is possible.

Remote control: `SYSTem:COMMunicate:RDEvice:GENerator<gen_no>:DEFine`
`SYSTem:COMMunicate:RDEvice:GENerator<gen_no>:DELeTe`
`SYSTem:COMMunicate:RDEvice:GENerator<gen_no>:CATalog?`
`SYSTem:COMMunicate:RDEvice:GENerator<gen_no>:COUNT?`

Add/Modify External Generator

Selects and configures an external generator.



The following control elements select the generator type and its connection:

- *Name* is an optional, arbitrary name associated with the generator. Names appear in the generator lists in the [External Generators](#) tab and in the selection dialogs for source signals (measurements and power calibration). If no name is specified, the generators are listed as *Gen 1*, *Gen 2*...
- *Interface* selects an interface type for the connection. In addition to the *GPiB0* and *VXI-11* interface types (for devices connected to the *IEC Bus* or *LAN1/2* connectors on the rear panel of the analyzer, respectively), the analyzer supports any *Other* interface supported by the installed VISA library.
- *GPIB Address* or *Hostname* or *IP Address* (depending on the *Interface* selection) contains the address for the current interface type. GPIB addresses must be unique for all devices connected to the GPIB bus (range: 0 to 30), GPIB and IP addresses must agree with the entries in the VISA library. For an *Other* interface type, the input field contains the *Resource String* from the installed VISA library.
- *Driver* contains a list of all supported generator types. The names in the list are identical with the name of the generator configuration files (*.gen) stored in the `Resources\ExtDev` subdirectory of the analyzer's program directory. For detailed information about the configuration files refer to section [Configuration Files](#).
- *Identify Type* sends an identification query (IDN?) to the specified device address in order to identify the generator type and select an appropriate configuration file. An error message is displayed if the identification fails.

The following control elements provide hardware-related settings:

- *Fast Sweep* enables or disables the fast sweep mode for external generators that support a

frequency and level list mode (triggered mode).

- *10 MHz Ref* switches the analyzer to either internal or external frequency reference.



Fast sweep mode and conditions

In the list mode the external generator steps through a predefined list of frequencies or signal powers. This mode can be used to accelerate the measurements involving external generators.

If *Fast Sweep* is activated, the analyzer compiles a list of the stimulus values (frequencies and powers) in all channels and transfers it to the generator. The list is automatically updated and re-transferred whenever the channel settings are changed.

The analyzer uses a trigger handshake mechanism in order to control the generator's list mode; see [Generator List Mode](#).



If the number of sweep points exceeds the maximum number of entries in the list (depending on the generator type), the analyzer must interrupt the sweep in order to send a new list and complete the stimulus information. This generally slows down the measurement.



Reference frequency

To ensure frequency accuracy and frequency stability in a test setup where different devices represent the signal sources and receivers, it is generally advisable to use a common reference frequency. Accurate frequencies are particularly important if external generators are used for measurements with narrow measurement bandwidths.

A common reference frequency can be established in different ways:

- Use the analyzer as master device: Set the analyzer to *Internal* reference frequency mode and operate all other devices in external reference mode using the reference clock signal from the *10 MHz REF* connector on the analyzer's rear panel.
- Use another device as master: Set the analyzer to *External* reference and synchronize it (and all other devices) to the master's reference clock signal, fed in at the *10 MHz REF* connector on the analyzer's rear panel.

The *10 MHz REF* settings in the *Add External Generator* dialog are generator-specific and not overwritten by a change of the global [Internal Reference](#) / [External Reference](#) settings.

Remote control: `SYSTem:COMMunicate:RDEvice:GENerator<gen_no>:DEFine`
`SYSTem:COMMunicate:RDEvice:GENerator<gen_no>:DElete`

Matrix Configuration

Configures and opens/closes a LAN connection to a switch matrix/multiport test set R&S ZV-Z81/82/83.



Switch matrices R&S ZV-Z81/-Z82 and multiport test set R&S ZV-83

The purpose of a switch matrix or a multiport test set is to extend the number of test ports.


E.g. the multiport test set R&S ZV-Z83 multiplies the number of network analyzer ports by four. If it is connected to a four-port network analyzer, the test set provides 16 "output" ports numbered A1, A2, A3, A4, B1 ... D4.



The multiport test set can be configured to provide several channel-specific port groups. The "input" ports (numbered 1 to 4) are connected to the corresponding network analyzer ports. The signal at each "input" port is routed to one of the "output" ports 1 to 4, to be connected to the DUT. Signal routing is channel-dependent, which makes it possible to connect and measure several DUTs in parallel.

Example: Create four analyzer channels no. 1 to 4. Use the "output" connectors A1, B1, C1, D1 for channel no. 1, A2, B2, C2, D2 for channel no. 2 and so forth. This configuration allows you to perform simultaneous four-port measurements on four DUTs.

The switch matrices are configured and operated using SCPI commands. A separate tool for LAN configuration is supplied with the switch matrices. For details refer to the relevant operating manuals.

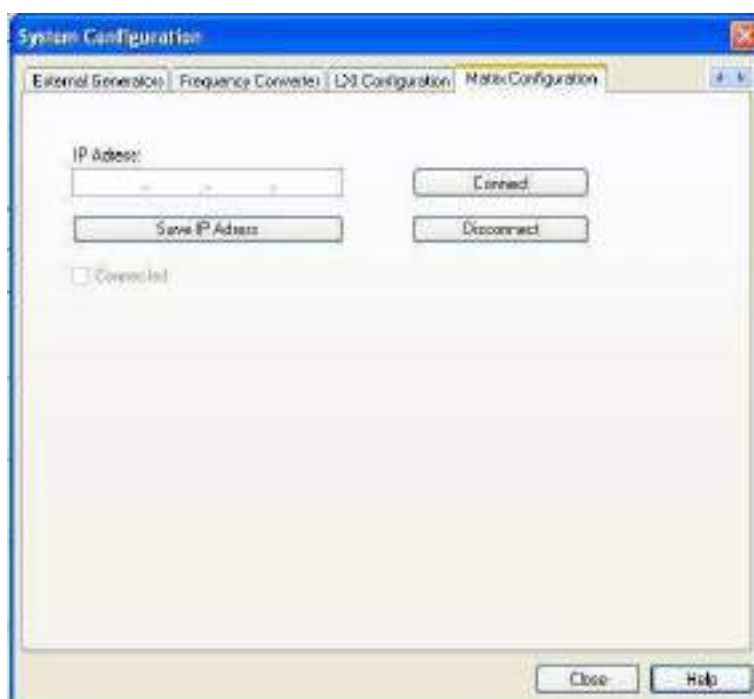

- The *IP Address* setting must correspond to the IP address of the multiport test set. Use the LANCONFIG.EXE tool (supplied with the switch matrix/multiport test set) to determine the current IP address. Press *Save IP Address* if you want to keep the current address for later connections.
- *Connect/Disconnect* establishes or closes the connection.
- The *Connected* box is checked while a connection is active. Unchecking the box is equivalent to *Disconnect*.

Remote control: n/a

For internal path configuration of the switch matrix/multiport test set see [ROUTe...](#)

commands.

System Config

Converter Control (Option R&S ZVA-K8, for R&S ZVA and R&S ZVT)

Measurements at frequencies beyond the network analyzer's operating range (mm-wave measurements) are performed with an external test set (frequency converter) that multiplies the source frequency of the analyzer up to the target mm-wave band and uses harmonic mixers to down-convert reference and test receiver signals to an IF below 1 GHz. Rohde & Schwarz offers dedicated frequency converter types for various mm-wave bands. The frequency converters R&S ZVA-Z110 and R&S ZV-Z110E, for example, extend the frequency range of R&S ZVA or R&S ZVT network analyzers to a W-band range between 75 GHz and 110 GHz.

The test ports of the frequency converters and the connecting elements are rectangular waveguides. For the R&S ZVA-Z110(E) converter, the dimensions of the waveguides are according to EIA WR-10, equivalent to RCSR WG-27. Refer to the Getting Started guide and the "Specifications" supplied with your converter for detailed information about the frequency range and the waveguide type of your converter model.

Two different converter types are available:

- Converters without electronic attenuators.
Even without electronic attenuator, some converter models allow a variation of the output power by changing the input power of the source multiplier.
- Converters with electronic attenuators (and a "E" in the type designation, e.g. R&S ZVA-Z110E).
For these models the output power can be adjusted either by the electronic attenuator alone or by combining the attenuator with variable multiplier input power.



Required equipment and options

Frequency extension is available on R&S ZVA and R&S ZVT analyzers which are specified for frequencies up to 20 GHz or above (e.g. ZVT 20, ZVA24, ZVA 40). The required firmware version depends on the converter mode. Refer to the release notes (What's new) or to the Getting Started guide of your converter.

The following additional options and accessories are needed:


- One or more frequency converters, depending on the test setup.
- Option R&S ZVA-K8, *Converter Control*. Option R&S ZVA-K8 also comprises option ZVA-K4, *Arbitrary Generator and Receiver Frequencies*.
- Option R&S ZVA<frequency>-B16, *Direct Generator/Receiver Access*
- For converters with electronic attenuator (e.g. R&S ZVA-Z110E): Option R&S ZVA-B8 to establish the control connection between the NWA and the converter
- A two-port transmission measurement requires two frequency converters plus a four-port network analyzer or a two-port analyzer with an external generator (see [External Generators](#)). The external generator must provide frequencies up to 20 GHz or above and sufficient signal power. Reflection measurements can be performed with a two-port analyzer without external generator.
- The external generator must be synchronized to the network analyzer using the 10 MHz reference clock signal. It is not possible to use several external generators simultaneously.

- A suitable set of [calibration](#) standards

Test Setup and Principle of the Measurement

The frequency converters use frequency multipliers to transform the RF source signal from one of the network analyzer ports into a high-frequency (mm-wave) stimulus signal. A dual directional coupler separates the reference and measurement channels from the waveguide test port. A second signal (Local Oscillator, LO) is used for down-conversion of the reference and measurement channels. The LO signal can be provided either by a second analyzer port or by an external generator. The down-converted signals are fed to the REF IN and MEAS IN input connectors of the analyzer port providing the RF source signal.

The schematic test setup for a two-port transmission measurement using four analyzer ports (no external generator) is shown below.

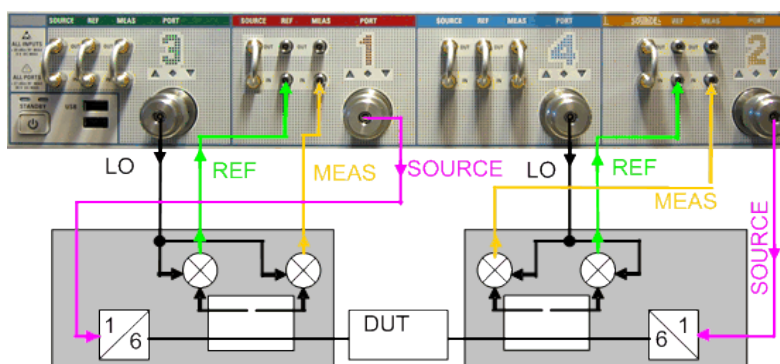

The analyzer firmware supports R&S ZVA-Zxxx series converters. In the R&S ZVA-Zxxx series, two models are equipped with electronic attenuators: R&S ZVA-Z90E and R&S ZVA-Z110E.

Generally, a measurement with a mm-wave converter without electronic attenuator involves the following steps:

1. R&S ZVA-Zxxx series: Selection of the converter type and of the test setup in the [Frequency Converter](#) dialog
R&S ZCxxx series: Connection of the converter to the NWA via USB, which enables the analyzer firmware to automatically identify the converter type
2. [Connection](#) of the frequency converters
3. [System Error Correction](#) using a suitable waveguide calibration kit
4. Connection of the DUT and [measurement](#)

For converters with electronic attenuators, the following additional steps are required:


- Entry of power coefficients that describe the transfer characteristics ($att = f(I)$) of the electronic attenuator. This is only needed once (when the converter is used for the first time)
- Power settings
- Optionally: Power calibration for flat and absolutely known output power

For converters whose output power can be controlled by varying the input power, the following additional steps can be performed:

- Provide a 2-dimensional data array that describes the dependency of output power from input power and frequency. The data are collected with the converter leveling tool (see below)
- Power settings

Frequency Converter

The *Frequency Converter* tab belongs to the *System Configuration* menu (*System – System Config*). It selects the frequency converter type and the external test setup as well as the *Power Control* model to be used.

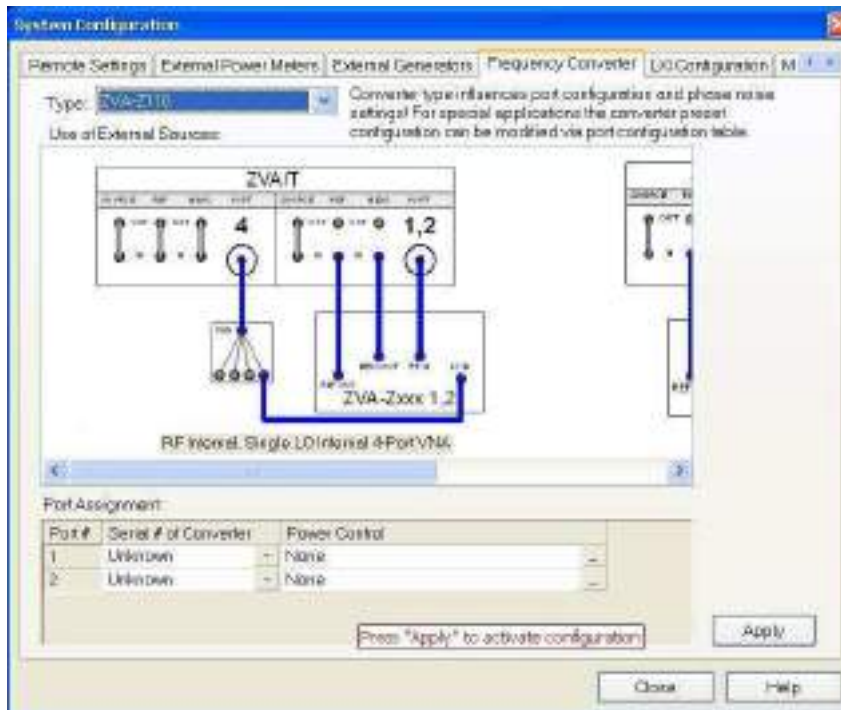

The dialog provides the following control elements:

- *Type* selects a frequency converter type.
- *Use of External Sources* provides the possible test setups for each converter type. The test setups differ in the way how the LO signal is provided (from the analyzer port or from an external generator).
- The *Port Assignment* table provides an overview of the assignment between converters and NWA ports. In addition, the table defines whether, and if yes then how the source power of the converters is controlled by the analyzer firmware (see [Port<i>i> Power Control](#)).
- *Apply* activates the selected test setup and adjusts the analyzer settings; see information below. The button is enabled only if the frequency range of the external generator's analyzer matches the selected test setup.

The frequency-converter settings are part of the global NWA resources; they are not changed upon a *Preset* or **RST*.

The way how a converter setup is put into operation by the NWA software depends on the converter series. R&S ZVA-Zxxx converters must be activated manually via *Type* and *Apply*. When a R&S ZCxxx is connected to the NWA via USB, the operational data are automatically transferred from the converter's read-only memory to the NWA. After this, the user is asked whether he wants to configure a 2-port setup with this new converter. If yes, he is prompted to assign the individual converters that have been found on the USB, named by serial numbers, to the available test ports.



Once retrieved from the R&S ZCxxx, the operational data are persisted in the NWA for further use, so the converter can be selected at a later time without the need to reconnect it via USB.

R&S ZCxxx converters are provided with internal supervision of certain vital operating conditions, like temperature, fan function and availability of the supply voltages. If one of these conditions exceeds its allowed tolerance range, a tool tip message appears on the NWA screen. This message will be shown as long as the respective parameter remains ill-conditioned. In case that the operating condition exceeds the safe range by far, the converter will automatically switch off its power supply.



Analyzer settings with active frequency converter


After a particular converter type and test setup is applied, the analyzer is automatically configured as follows:

- A preset is applied. The [preset behavior](#) will be reset to *Preset Scope: Instrument* and *Preset Configuration: Factory Preset*.
- The default frequency range of the selected converter type is set (e.g. 75 GHz to 110 GHz for R&S ZVA-Z110 converters). If no converter is selected, (Type = <NONE>), the default frequency of the network analyzer is set. The [Source](#) section of the *Port Configuration* table shows the true output frequencies at all analyzer ports and the frequency conversion formulas.
- The output powers at the RF and LO ports are set to optimum values. For converters without electronic attenuator, the output power of the converters can be reduced using the knurled adjusting knob on top of the converter.
- The LO signals are permanently on; the RF source signal is present only during the partial measurements that require the respective test port as a drive port.
- *Low Phase Noise* is enabled.
- *ALC (All Chans)* is disabled.
- For frequency converters without electronic attenuators, *Flatness Cal* is disabled in the *Modify Source Power Cal* dialog (see [Calibration for Converters without Electronic Attenuators](#)). For converters with electronic attenuators, *Flatness Cal* remains enabled.

All signal settings appear in the *Port Configuration* dialog as soon as the frequency converter mode is active. In the example below, a sweep range between 75 GHz and 110 GHz is selected. The frequency multipliers for the RF signals have a multiplication factor of 6, so the actual output frequency at the RF ports 1 and 2 is between 12.5 GHz and 18.3333333 GHz. The frequency of the LO signal is such that the reference and measurement channels are received at the fixed IF frequency of 279 MHz (shown in the *Receiver* section of the *Port Configuration* dialog). The LO frequency is always below the RF frequency (upper sideband).



It is also possible to define port-specific frequencies and powers at the converter ports; see [Power and Frequency Settings](#).

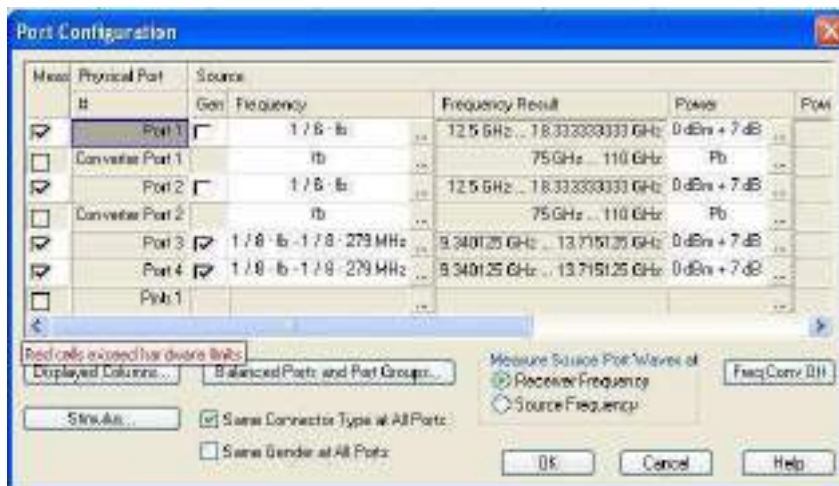

Tooltips in the dialog

- *Insufficient Frequency Range of Analyzer or external Generator.*

This tooltip is displayed in the following cases:

- The frequency range of the analyzer is insufficient (e.g. in case of R&S ZVA/T8)
- For converter setups if an external generator with insufficient frequency range is used as LO signal; please check the related generator [configuration file](#) in this case.

Remote control: `[SENSe<Ch>:] FREQuency:CONVersion:DEVIce:MODE`
`[SENSe<Ch>:] FREQuency:CONVersion:DEVIce:NAME`

Port Assignment

The current assignment of converters to NWA test ports is shown in the *Port Assignment* table. If upon powering-up of the NWA a converter is found in the port assignment table whose serial number has already been registered, no user prompts are issued. It is assumed that the user wants to continue with the current setup.

The *Port Assignment* table is only shown if a converter *Type* other than *None* was selected. The available ports are determined by the configuration selected in the *Use of External Sources* picture list.

Port #	Serial # of Converter	Power Control
1	110374	Factory Data
2	Unknown	None

In the example above a converter R&S ZC110 with serial number 110374 was assigned to test port 1. From the system configuration (R&S ZVA24 without external generator) two test ports are available, and hence the table contains two rows. As no converter was assigned to port 2, no power control data can be provided.

Column *Port #* is read-only. Column *Serial # of Converter* is for future use. The combo-box allows to select the serial number of a converter R&S ZCxxx or *Unknown*. If you select a serial number that was previously assigned to a different test port, this assignment is automatically deleted. For converters of the R&S ZVA-Zxxx family the serial number is *Unknown*.


A click on the ellipsis button in the *Power Control* column opens the **Port<i> Power Control** dialog. The *Power Control* method must be selected and configured in the following cases:

- For converters R&S ZVA-ZxxxE with electronic attenuator
Each electronic attenuator has its individual characteristics represented by a polynomial that describes the dependence of the attenuation on the control current generated by hardware option R&S ZVA-B8. The coefficients of this polynomial must be entered manually for the port to which the converter is connected.
- For all converters for which linearization data have been acquired using the *R&S ZVA Frequency Converter Leveling Tool* (see <http://www.rohde-schwarz.com/en/software/zvaz/>)
- For converters whose power transfer characteristics can be approximated by a (piecewise) linear function
- For all converters of the R&S ZCxxx family (which provide level linearization data via USB)

Remote control: `[SENSe<Ch>:]CONVerter:ASSign<Port>`

Port<i> Power Control

The *Port<i> Power Control* dialog allows to select (and configure) the power control model to be used for the respective converter port.

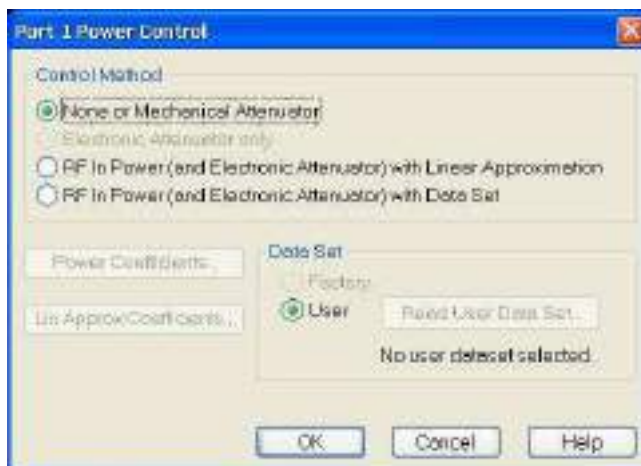

The *Control Method* radio button group provides the different level adjustment options:

- *None or Mechanical Attenuator* (default) is suitable for converters without or with manually adjustable variable attenuator. A power calibration is not possible. This option can always be selected.
- *Electronic Attenuator only* is exclusively for converters with electronic attenuator. If selected, the *Power Coefficients* button becomes enabled, which in turn opens the **Power Coefficients** dialog. A power calibration is possible.
- *RF In Power (and Electronic Attenuator) with Linear Approximation* models the logarithmized output power as a linear function of the logarithmized input power, taking the electronic attenuator into account, if available. If selected, the *Lin Approx Coefficients* button becomes enabled, which opens the **Linear Approximation** dialog. This option is available for all converter types.

- *RF In Power (and Electronic Attenuator) with Data Set* is used for converters with or without electronic attenuator, for which leveling data are available (either Factory data, provided via USB or acquired using the Leveling Tool).
The analyzer uses a set of power calibration data to ensure accurate power at the reference plane. The calibration data set is acquired by the *R&S ZVA Frequency Converter Leveling Tool* (see <http://www.rohde-schwarz.com/en/software/zvaz/>) that can automatically acquire calibration data over a wide range of powers and frequencies. This control method is recommended for best accuracy, in particular if large sets of calibration data are required.
If selected, the *Read User Data Set* button becomes enabled (see below for details).

Furthermore, there are the following controls available in the dialog:

- The *Power Coefficients* button is enabled, if a converter with electronic attenuator is connected to port <i> and either *Electronic Attenuator only* or *RF In Power (and Electronic Attenuator) with Linear Approximation* is selected as *Control Method*. It opens the [Power Coefficients](#) dialog.
- The *Lin Approx Coefficients* button is enabled if *RF In Power (and Electronic Attenuator) with Linear Approximation* is selected as *Control Method*. It opens the [Linear Approximation](#) dialog.
- The *Data Set* section is enabled if *RF In Power (and Electronic Attenuator) with Data Set* is selected as *Control Method*.
Factory data are only supported by R&S ZCxxx models. Selecting the *User* radio button enables the *Read User Data Set* button. The latter opens a standard folder browser dialog, allowing to pick a calibration data folder (*Calibration Subdirectory*) for the current channel, in accordance with the definitions in the leveling tool.



The leveling tool relates the collected calibration data to the used test ports (suffix "_P<j>" in generated filenames); in order to apply them correctly, you have to use the same port assignment during measurement. If the selected data set does not contain leveling data for port <i> the following message is displayed: "Data set <...> does not contain correction data for port <i>". If a Data Set selected before is no longer available, a warning "Selected linearization data set could not be found. Power control by instrument software is no longer possible" is raised and the option None or Mechanical Attenuator is selected.

Remote control: `SOURce<Ch>:POWer<Pt>:CONVerter:TRANsfer:DESCRiption`
`SOURce<Ch>:POWer<Pt>:CONVerter:TRANsfer:DSET`
`SOURce<Ch>:POWer<Pt>:CONVerter:TRANsfer:PATH`

Power Coefficients (for Converters with Electronic Attenuators)

The *Power Coefficients* dialog can be opened from the *Power Coefficients* button in the [Port<i> Power Control](#) dialog. It is used to enter the power coefficients for a converter with electronic attenuator, connected to port <i>.

For accurate control of the converter output power, the NWA must know the converter's (non-linear) current-power characteristics, which are sufficiently described by a third-order polynomial.



Keep *Use default coefficients* checked to use a set of default power coefficients, providing acceptable output power control for arbitrary converters. For accurate measurements always use the actual power coefficients of the currently connected converter.




A label with the four polynomial coefficients c_0 , c_1 , c_2 , and c_3 is affixed to each converter. Don't forget to overwrite the coefficients whenever you connect a new converter to a NWA port.

Remote control: `[SENSe<Ch>:]FREQuency:CONVersion:DEVIce:PCOefficient<Port>`
`[SENSe<Ch>:]FREQuency:CONVersion:DEVIce:PCOefficient<Port>:DEfault`

Linear Approximation

The *Linear Approximation* dialog configures a linear model for the converter output power at a specific port. It can be opened from the *Lin. Approx Coefficients* button in the [Port<i>i</i> Power Control](#) dialog.

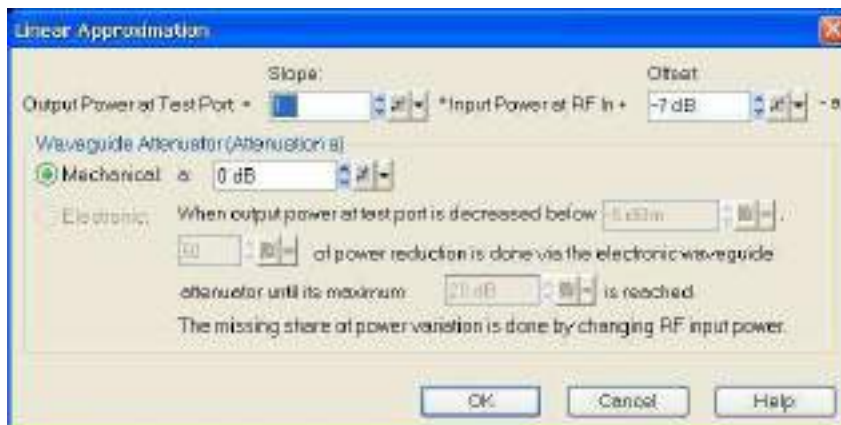

This power control mode can be used for converters with electronic attenuator and some converter types, like R&S ZVA-Z90 and R&S ZVA-Z110 var. 03 that have flat-sloped power transfer characteristics (P_{out} vs P_{RFIn} on a dBm scale). The power transfer curve is approximated by a straight line described by slope and offset. If the converter has an electronic attenuator, it is additionally used in order to control the output power. The mechanism used to control the power depends on the output power level. At high power, the electronic waveguide attenuator settings are fixed and output power is controlled by varying the input power. In a medium power range, a selectable portion of the attenuation is contributed by the electronic attenuator, until it reaches its maximum attenuation. Below this point, only RF input power is varied again.

This power transfer model provides a maximum dynamic range while maintaining the spectral purity of the converter output signal in the low-power range. The output power of converters without electronic attenuator can additionally be set by the power adjustment knob. It is possible to adjust the knob to a desired attenuation value and use this value as a correction factor for the port power.

The parameters configure a linear approximation of the relation between the input power $P_{RF\ IN}$ at the converter's RF IN connector and the output power P_{TP} at its test port:

$$P_{TP} = Slope \cdot P_{RF\ IN} + Offset - a$$

where a distinction is made between the waveguide attenuation a and an additional constant *Offset*, indicating the output power at $P_{RF\ IN} = 0$ dBm.

- *Output Power at Test Port* defines the *Slope* and *Offset* parameters within this equation.
- *Waveguide Attenuator (Attenuation a)* specifies the waveguide attenuation inside the converter
 - *Mechanical* assumes a fixed, frequency-independent waveguide attenuation a the analyzer will compensate for by increasing the RF In power. This attenuation is subtracted from the offset as shown in the formula above.


This model is suitable for frequency converters without electronic attenuators but with an output power adjustment knob; see background information below how to set a defined attenuation. Increasing mechanical attenuation allows one to measure power-sensitive DUTs while maintaining a sufficient input power at RF IN, which in turn provides a good spectral purity of the mm-wave signal.

- *Electronic* is only available for converters with electronic attenuator. A piecewise linear model is applied in this case.

The output power of frequency converters with electronic attenuators can be varied by means of RF input power (i.e. the source power at the analyzer test port providing the signal fed to RF IN) and/or by means of the electronic waveguide attenuators in the converters. A combination of both methods will generally provide an RF output signal with optimum characteristics; see [Port<i>i> Power Control](#).

In the figure below, the green area corresponds to the test port power range where the electronic attenuator is used. The output power threshold P_{THR} ("...output power at test port is decreased below $<P_{THR}>$ dBm...") defines the right border of the area. The selected percentage ("...% of power reduction...") due to the electronic attenuator defines the slope of the green curve in the shaded area relative to the original slope (the larger the percentage, the steeper the curve). The shaded area ends where the distance between the green curve and the original blue curve has reached the selected "maximum attenuation" of the electronic attenuator.

As a result of the combination between RF and waveguide attenuation, lower converter output powers can be obtained at larger RF input powers. This improves the spectral purity of the converter output signal in the low-power range.

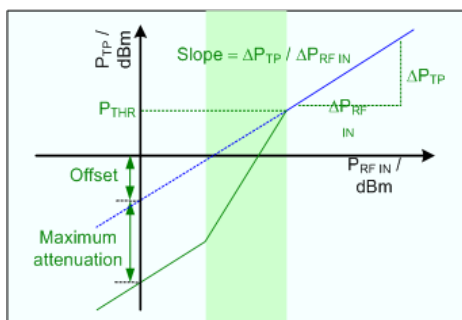

Recommended procedure for setting a defined mechanical attenuation

In order to set a particular attenuation, e.g. 3 dB, with the mechanical attenuator at port n, proceed as follows:

1. Turn the converter's adjustment knob counter-clockwise until the mechanical stop is reached.
2. Select wave a<n> as measured quantity (*Trace – Measure – Wave Quantities – a<n> Src Port <n>*).
3. Store the a<n> trace to the memory (*Trace – Trace Funct – Data -> Mem*).
4. Select the mathematical trace mode *Trace – Trace Funct – Math = Data / Mem*.
5. Slowly turn the knob clockwise until the mathematical trace has been shifted down by 3 dB. Keep the knob at this position.

The waveguide attenuation caused by the adjustment screw is also shown in the *Converter Port <n> Power* dialog. The analyzer will increase its port power, compensating for the power reduction selected in the first step. The converter's output power is reduced by 3 dB.



Remote control:

```
SOURce<Ch>:POWER<Pt>:CONVerter:TRANsfer:DEScripTion
SOURce<Ch>:POWER<Pt>:CONVerter:TRANsfer:SLOPe
SOURce<Ch>:POWER<Pt>:CONVerter:TRANsfer:OFFSet
SOURce<Ch>:POWER<Pt>:CONVerter:TRANsfer:ATTenuator
SOURce<Ch>:POWER<Pt>:CONVerter:TRANsfer:MECHanical:ATTenauTion
SOURce<Ch>:POWER<Pt>:CONVerter:TRANsfer:ELECtronic:LIMit
SOURce<Ch>:POWER<Pt>:CONVerter:TRANsfer:ELECtronic:REDUction
SOURce<Ch>:POWER<Pt>:CONVerter:TRANsfer:ELECtronic:MATTenuation
```

Connecting the Frequency Converters

Each frequency converter must be connected to the DUT, the network analyzer, and the power supply. The DUT is screwed on the waveguide flange at the front of the converter. The remaining connectors are located on the rear panel of the converter:



Attention! Input powers RF IN and LO IN



The RF input power at the connectors RF IN and LO IN must not exceed the maximum values quoted in the data sheet. The maximum values are below the maximum RF source power of the network analyzer. The frequency converter mode ensures compatible source powers.

Before you connect your converter to the network analyzer, always activate the frequency converter mode using the [Frequency Converter](#) dialog and select the proper converter type and connecting diagram.

Connection to the network analyzer comprises the following RF input and output signals:

1. RF source signal (input): Connect port 1 or port 2 of the analyzer to RF IN of the converters.
2. LO signal (input): Connect port 3 or port 4 of the analyzer to LO IN of the converters. If a R&S ZVA24 var. 28, a R&S ZVA40 var. 48 or a R&S ZVA67 is used as NWA, take the LO signal from NWA port 4 and split it to both converters via a power splitter. Alternative: Connect an external generator signal to LO IN; see [Frequency Converter](#) dialog.
3. Reference signal (output): Connect REF OUT of the converters to the REF IN connector of the analyzer port providing the RF source signal. The reference signal corresponds to the incident wave (a-wave) applied to the input of the DUT.
4. Measurement signal (output): Connect MEAS OUT of the converters to the MEAS IN connector of the analyzer port providing the RF source signal. The measured signal corresponds to the b-wave caused due to reflection or transmission at the DUT.

For converters with electronic attenuators, an additional control connection between the 3-pin output connector of option R&S ZVA-B8 (EXTATT CTRL) on the front panel of the analyzer and the corresponding control connector at the rear panel of the converter is required. Observe the port assignment of the NWA output connector.



The input signals at the frequency converters must be stable over the entire sweep range. Use high-quality cables for the connection of the RF and LO input signals. Appropriate cables for the REF OUT and MEAS OUT signals are supplied with the frequency converters.



In view of the port arrangement at the front panel of the analyzer, it is advantageous to use test ports 1 and 2 as RF sources, ports 3 and 4 as LO sources. The frequencies of the RF and LO signal must be independent, therefore do not combine a pair of ports as RF and LO sources that is supplied by a common generator (ports 1 and 2, 3 and 4; see [Coupled test ports](#)).

To supply the frequency converter, connect the external DC power supply provided with the converter to the 9 V DC input. A complete test setup for a two-port transmission measurement using converters without electronic attenuators is shown below.



Frequency converters and true differential mode

To generate a true differential signal with two frequency converters, a modified test setup with three independent sources is required. See background information in *Balanced Ports and Port Groups – True Diff Mode*.

Attention!

Supply voltage and power



The input voltage and current must not exceed the maximum values according to the rear panel labeling or the data sheet.

Always use the DC power supply shipped along with your converter.


Power and Frequency Settings

While the frequency converter mode is active, the *Channel – Stimulus* settings of the network analyzer control the frequency and power range of the converters. In addition the *Channel – Mode – Port Configuration* dialog shows an additional row for each converter. The *Frequency* and *Power* settings in the *Source* section of the dialog serve different purposes:

- The output power for each converter can be set in the *Power* column. This setting only takes effect if one of the options *Electronic Attenuator Only*, *RF In Power ... with Linear Approximation* or *RF In Power ... with Data Set* is selected in the [Port <i>i> Power Control](#) dialog.
- The source frequency at the converter test ports is determined by the frequency at the RF In input. This frequency is set in the port configuration table for the associated NWA port. The formula in the converter row of the *Port Configuration* table defines the frequency that is transferred to a power meter for correction during source power calibrations and to the waveguide standards during system error correction. It actually does not affect the converter output frequencies. Ensure that the correct converter frequencies are set, especially if the test setup contains additional frequency-converting components.

Example: In the example below, the frequency at the NWA *Port 1* has been increased by a 50 MHz offset. The converter source frequency six times the NWA source frequency, therefore a 300 MHz offset has

been entered for *Converter Port 1*.

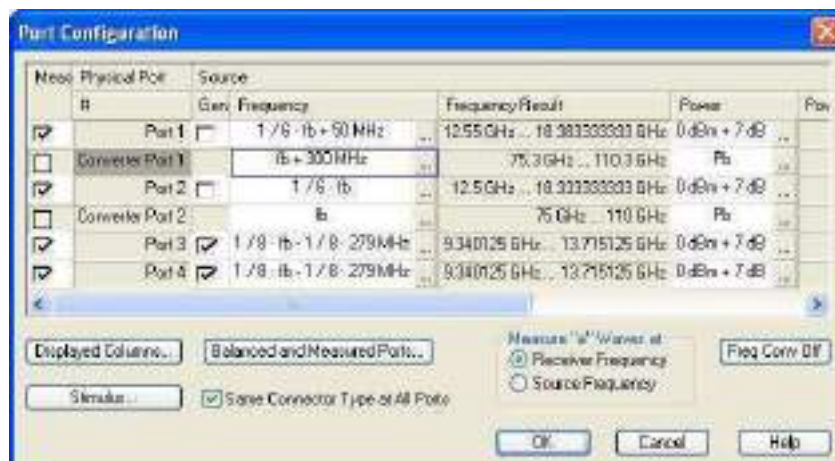


Remote control: `SOURCE<Ch>:FREQUENCY<Pt>:CONVERSION:ARBITRARY:CFREQUENCY`
`SOURCE<Ch>:POWER<Pt>:CONVERTER:OFFSet`

Power Calibration for Converters without Electronic Attenuators

If *Control Method* in the [Port <i> Power Control](#) dialog is set to *None* or *Mechanical Attenuator*, the output power of the frequency converter can only be manually set (at the converter) only. Therefore no source power calibration can be performed that eliminates frequency response errors in the signal path between source and reference plane (external power meter). A power calibration of the reference receiver (a-wave) using an external power meter, however, is possible. It is recommended for measurements where knowledge of the absolute powers of wave quantities a and b is required. Proceed as follows:

1. Ensure that the output power of the frequency converter is not attenuated (adjust the knurled knob at the top of the converter to 2 mm). For R&S ZCxxx converters, rotate the knob counter-clockwise until the stop is reached.
2. Connect an appropriate external waveguide power meter to the waveguide flange and open the *Channel – Calibration – Start Power Cal – Source Power Cal* dialog (see [Source Power Cal](#)).
3. Click *Modify Settings* and disable *Flatness Cal*, leaving *Reference Receiver Cal* checked.

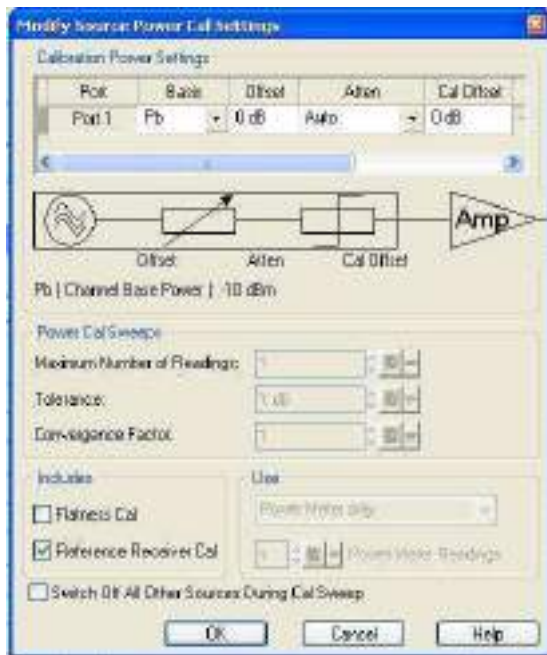

4. Start the calibration sweep.

This power calibration procedure ensures a reasonable accuracy of the reference power readings over a wide range of converter output powers (i.e. even if the adjusting knob is used to reduce the powers).



A *receiver power calibration* of the b waves (without external power meter) is possible after completion of the power calibration of an a wave. Use a through connection in order to calibrate the b wave of a second converter, or a short circuit to calibrate b on the same converter. Having performed a receiver power calibration for the a wave allows one to adjust the mechanical attenuator and to observe the effect on the power-calibrated a trace on the screen in real time.

Remote control: `SOURce<Ch>:POWer<Pt>:CORRection:DATA`

Power Calibration for Converters with Electronic Attenuators

A source power calibration for a frequency converter requires an appropriate external power meter, to be connected to the converter's waveguide flange. Waveguide power meters are configured in the usual way using the *System Configuration – External Power Meters* tab.

To perform the source power calibration, proceed as follows:

1. Connect the waveguide power meter and open the *Channel – Calibration – Start Power Cal – Source Power Cal* dialog.
2. Select your converter and source port from the *Source* pull-down list (e.g. *Conv 1* for a frequency converter connected to NWA port 1).
3. Click *Modify Settings* and ensure that both *Flatness Cal* and *Reference Receiver Cal* are checked.
4. If the P_{OUT} vs. P_{IN} curve of the converter is very steep or if your test setup exhibits other strong nonlinearities in the source path, you can choose a Convergence Factor different from one (usually smaller than one).
5. Start the calibration sweep.

To ensure an accurate source power calibration and quick convergence, use the correct power coefficients. A receiver power calibration of the b-waves (without external power meter, using the “Receiver Power Calibration” dialog) is possible after having completed the source power calibration.

Remote control: `SOURce<Ch>:POWer<Pt>:CORRection[:ACQuire]`
`SOURce<Ch>:POWer<Pt>:CORRection:CONVerter<Con>[:STATe]`
`SOURce<Ch>:POWer<Pt>:CORRection:DATA`
`SOURce<Ch>:POWer<Pt>:CORRection:COLLect:CFACTOR`

System Error Correction

If S-parameters are to be measured, an additional system error calibration is recommended after power calibration. Measurements with frequency converters require a special waveguide calibration kit for system error correction. Rohde & Schwarz offers these, e.g. the calibration kits R&S ZV-WRxx. The standards in the calibration kits allow all one-port and two-port calibration types supported by the network analyzer except for TNA. Refer to the documentation of the calibration kit for details.

When a R&S ZVA-Zxxx converter type is selected via *Apply* in the *Frequency Converter* tab of the *System Configuration* dialog, the corresponding waveguide connector type WRyy and the associated R&S ZV-WRyy calibration kit are automatically set active. The R&S ZCxxx converters conform to standard IEEE 1785. The designation of their waveguide sizes is WM-xxxx, which are identical to the former WRyy sizes between the 75 – 110 GHz and the 220 – 330 bands. In order to allow for the use of the ZV-WRyy kits for the calibration of a ZCxxxx converter, these kits have additionally been pre-defined in the NWA software for the WM-xxxx connector types.

For some high-frequency converter types (e.g. R&S ZV-Z500) each calibration sweep of the system error correction is performed twice. The first sweep is named Preparation Sweep; a tooltip below the calibration sweep diagram indicates an ongoing preparation sweep.


Measurement

After power calibration and system error correction, the mm-wave measurement can be performed like any other network analyzer measurement. The *Port Configuration* settings (together with the *Stimulus* settings) determine the sweep range of the converted signals (i.e. the input and output frequencies at the DUT ports). All measured quantities (S-parameters, wave quantities, ratios etc.) and other trace settings are available.

The following restrictions hold for measurements with converters without external attenuators:

- With *Control Method* in the *Port <i> Power Control* dialog set to *None* or *Mechanical Attenuator*, the measurement is performed at fixed RF source and LO power. No power sweep is possible. To reduce the actual output power of the converters (e.g. for measuring wave quantities or testing compression effects), turn the adjusting knob on top of the converters clockwise. You will see an effect on the output power within the last 2 mm of the adjustable range.
- Note the special analyzer settings listed in section *Frequency Converter*.

The following example shows the transmission and reflection coefficients of a bandpass filter in the frequency range between 75 GHz and 110 GHz, i.e. the measurement range of the converter R&S ZVA-Z110.

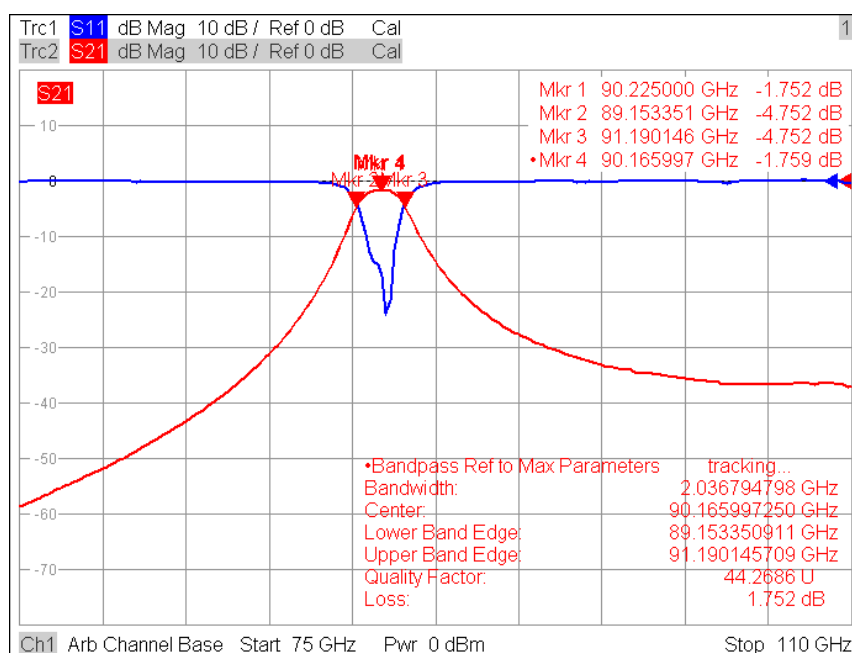

Vector Network Analyzer R&S ZVA110

The R&S ZVA-Z110 vector network analyzer supports two essentially different measurement modes:


- Measurements with internal test sets cover a frequency range between 10 MHz and approx. 67 GHz. The R&S ZVA-Z110 is based on a four-port R&S ZVA67 vector network analyzer. The DUT can be connected to any of the four test ports of the R&S ZVA67. One to four-port measurements can be performed as described in this help system.
- Measurements with external test sets cover an extended frequency range between 10 MHz and 110 GHz. The DUT is connected to the 1 mm connector(s) at the front of the diplexers R&S ZVA-ZD110. This measurement mode is described in the following sections.

For a general introduction to the R&S ZVA110 refer to the Getting Started guide R&S ZVA110, *Broadband Measurements Using the 1 mm External Test Sets*, which is posted on the R&S ZVA110 product pages on the internet. Please note in particular the safety instructions in the Getting Started guide.

The R&S ZVA110 is delivered with all measurement equipment needed. An additional 1 mm calibration kit is required for calibration.

Test Setup and Principle of the Measurement

The R&S ZVA110 is delivered with two fully assembled external test sets, each consisting of a diplexer R&S ZVA-ZD110 and a frequency converter WR10 R&S ZVA-Z110E. The connection for a single external test set is shown below; for details refer to the Getting Started guide R&S ZVA110.

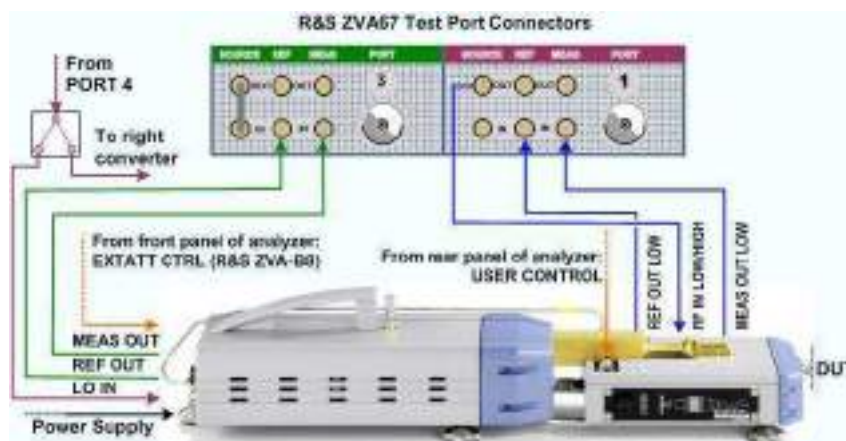

The external test sets enable a frequency range between 10 MHz and 110 GHz. The analyzer combines two different measurement methods to achieve this extended range.

- At frequencies below approx. 67 GHz (i.e. in "low frequency" mode), the frequency converter in the external test set is bypassed. The source signals from test ports PORT 1 / 2 of the vector network analyzer unit are directly fed to the 1 mm test port connectors of the diplexers. The network analyzer measures the a-waves (reference channels) from REF OUT and the b-waves (measurement channels) from MEAS OUT on the diplexers. The connector groups PORT 3 / 4 on the network analyzer and the RF connectors LO IN, RF IN, REF OUT, MEAS OUT on the rear panel of the converters are not used.
- To achieve frequencies above approx. 67 GHz (i.e. to measure in "high frequency" mode), the source signals from test ports PORT 1 / 2 of the network analyzer are fed to the frequency converters; the converted signals are routed to the 1 mm test port connectors of the diplexers. The frequency converters use frequency multipliers to transform the source signal into a high-frequency stimulus signal. An additional Local Oscillator (LO) signal from PORT 4 of the analyzer is used for down-conversion of the reference and measurement channels. A power divider feeds the LO signal to both the left and the right converter. This test setup ensures a stable phase relationship between both LO signals. The analyzer measures the a-waves from REF OUT and the b-waves from MEAS OUT on the converters. The RF connectors REF OUT, MEAS OUT on the rear panel of the diplexers are not used. This measurement mode is analogous to the frequency converter mode described in the [Converter Control](#) section.

The analyzer automatically switches between low frequency and high frequency mode, depending on the stimulus frequency.

A measurement using the external test sets involves the following stages:


1. Activation of the ZVA110-BU mode for measurements with external test set
2. Entry of power coefficients (when an external test set is used for the first time)
3. Connection of the external test sets
4. Power and frequency settings
5. Power calibration using an appropriate external power meter
6. System error correction (calibration) using a suitable calibration kit
7. Connection of the DUT and measurement

Activating the ZVA110-BU Mode

After a factory preset, the R&S ZVA67 is configured for measurements using the internal test sets. You have to activate the *ZVA110-BU* mode explicitly before you connect the external test sets.

To (re-)activate the *ZVA110-BU* mode,

1. Click *System – System Config ...* and open the *Frequency Converter* tab of the *System Configuration* dialog.
2. Select *Type: ZVA110-BU*.
3. Click *Apply* to activate the mode.
4. If you use your vector network analyzer for the first time, click *Power Coefficients* to enter the power coefficients. Refer to the Getting Started guide for details.
5. Close the *System Configuration* dialog.

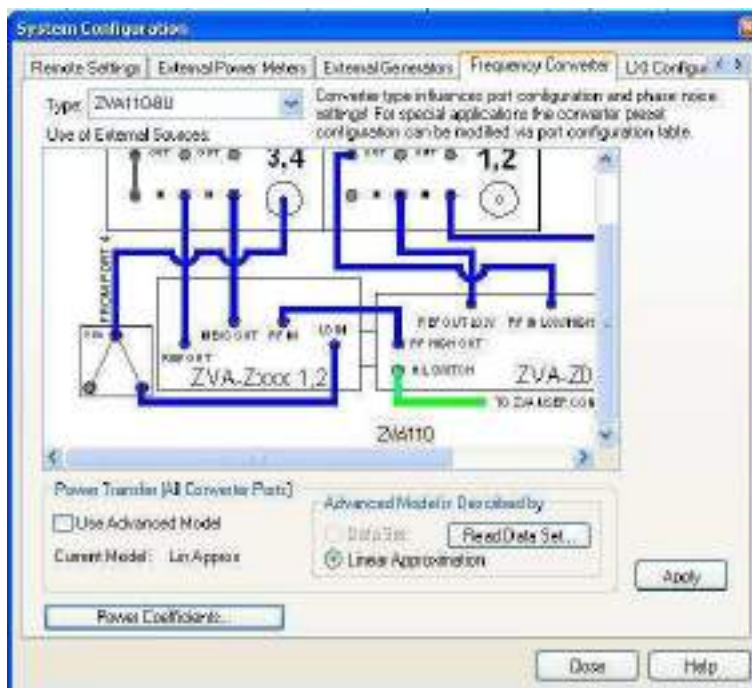

See also [Frequency Converter](#) in the *Converter Control* section.



Analyzer settings with active ZVA110-BU mode

In "ZVA110-BU" mode, the frequency and level settings of the network analyzer are automatically set to be compatible with the external test sets. "Low Phase Noise" is enabled, Automatic Level Control (ALC) is disabled. The frequency and levels of all ports are displayed in the "Port Configuration" dialog ("Channel > Mode > Port Config ...").

Remote control: `[SENSe<Ch>:]FREquency:CONVersion:DEvice:NAME 'ZVA110-BU'`

Connecting the External Test Sets

Each of the external test sets must be connected to the R&S ZVA110 base unit, the power supply and the

DUT. Please refer to the R&S ZVA110 Getting Started guide for details. A complete test setup for 2-port transmission measurements is shown below.




Calibration

A source power calibration for an external test set requires an appropriate external power meter, to be connected to the converter's 1 mm test port connector. The power meter is configured in the ordinary way using the *System Configuration – External Power Meters* tab.

To perform the source power calibration, proceed as follows:

1. Connect the power meter to the 1 mm test port connector of the external test set and open the *Channel – Calibration – Start Power Cal – Source Power Cal* dialog.
2. Select your converter and source port from the *Source* pull-down list (e.g. *Conv 1* for the left external test set connected to Port 1 and Port 3).
3. Click *Modify Settings* and ensure that both *Flatness Cal* and *Reference Receiver Cal* are checked.

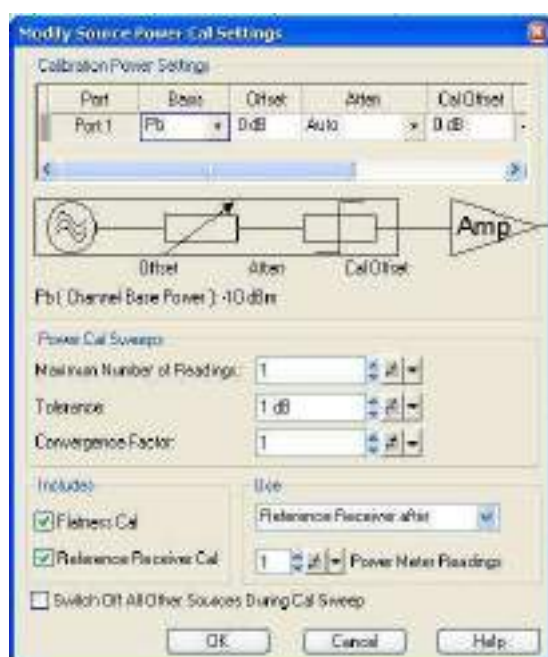

4. If your test setup causes strong nonlinear effects, you can choose a *Convergence Factor* different from one.

5. Start the calibration sweep.

A receiver power calibration of the b-waves (without external power meter, using the *Receiver Power Calibration* dialog) is possible after completed source power calibration.


After the power calibration procedure a system error correction is recommended. Measurements with external test sets require a 1 mm calibration kit for system error correction.

Remote control: `SOURce<Ch>:POWer<Pt>:CORRection:DATA`

Measurement

After power calibration and system error correction, the millimeter wave measurement can be performed like any other network analyzer measurement. The analyzer may perform a frequency or power sweep. The *Port Configuration* settings (together with the *Stimulus* settings), determine the sweep range of the converted signals (for a frequency sweep, the input and output frequencies at the DUT ports). All measured quantities (Sparameters, wave quantities, ratios etc.) and other trace settings are available.

The following example shows a transmission measurement on a through connection in the frequency range between 10 MHz and 110 GHz.

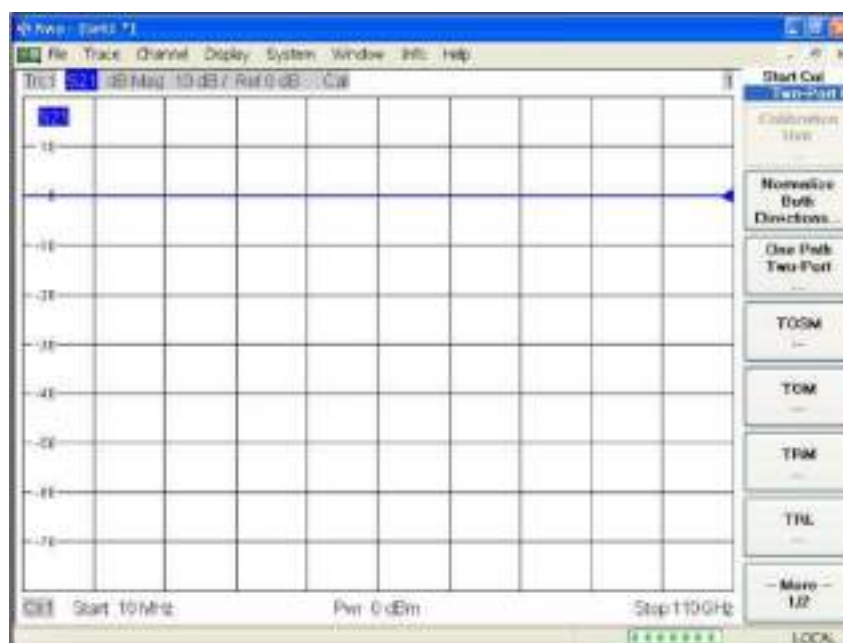


LXI Configuration (R&S ZVA and R&S ZVB Analyzers)

LAN eXtensions for Instrumentation (LXI) is an instrumentation platform for measuring instruments and test systems that is based on standard Ethernet technology. LXI is intended to be the LAN-based successor to GPIB, combining the advantages of Ethernet with the simplicity and familiarity of GPIB.



LXI classes and LXI functionality

LXI-compliant instruments are divided into three classes, A, B and C, with the functionality of the classes hierarchically based one upon the other:

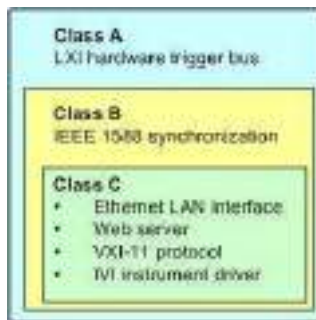

- **Class C** instruments are characterized by a common LAN implementation, including an ICMP [ping](#) responder for diagnostics. The instruments can be configured via a [web browser](#); a LAN Configuration Initialize ([LCI](#)) mechanism resets the LAN configuration. The LXI class C instruments shall also support automatic detection in a LAN via the VXI-11 discovery protocol and programming by means of IVI drivers.
- **Class B** adds IEEE 1588 Precision Time Protocol (PTP) and peer-to-peer communication to the base class. IEEE 1588 allows all instruments on the same network to automatically synchronize to the most accurate clock available and then provide time stamps or time-based synchronization signals to all instruments with exceptional accuracy.
- **Class A** instruments are additionally equipped with the eight-channel hardware trigger bus (LVDS interface) defined in the LXI standard.

Instruments of classes A and B can generate and receive software triggers via LAN messages and communicate with each other without involving the controller.

The network analyzer complies with LXI class C. In addition to the general class C features described above, it provides the following LXI-related functionality:

- Integrated [LXI Configuration](#) dialog for LXI activation and reset of the LAN configuration (LAN Configuration Initialize, LCI)



The LXI functionality requires a Windows XP operating system with service pack 2 or higher. Please contact your Rohde & Schwarz service representative if your network analyzer's operating system needs an upgrade. To check the version of your operating system, open the System – General dialog in the Control Panel.

After a firmware update, use the standby key to shut-down and re-start the instrument in order to enable the full LXI functionality.


For instruments running Windows 7, LXI is currently not fully supported.



For information about the LXI standard refer to the LXI website at <http://www.lxistandard.org>. See also "News from Rohde & Schwarz, article [2006/II - 190](#)".

LXI Configuration Dialog

This dialog provides basic LXI functions for the analyzer. *LXI Configuration* is a tab of the *System – System Configuration* dialog.

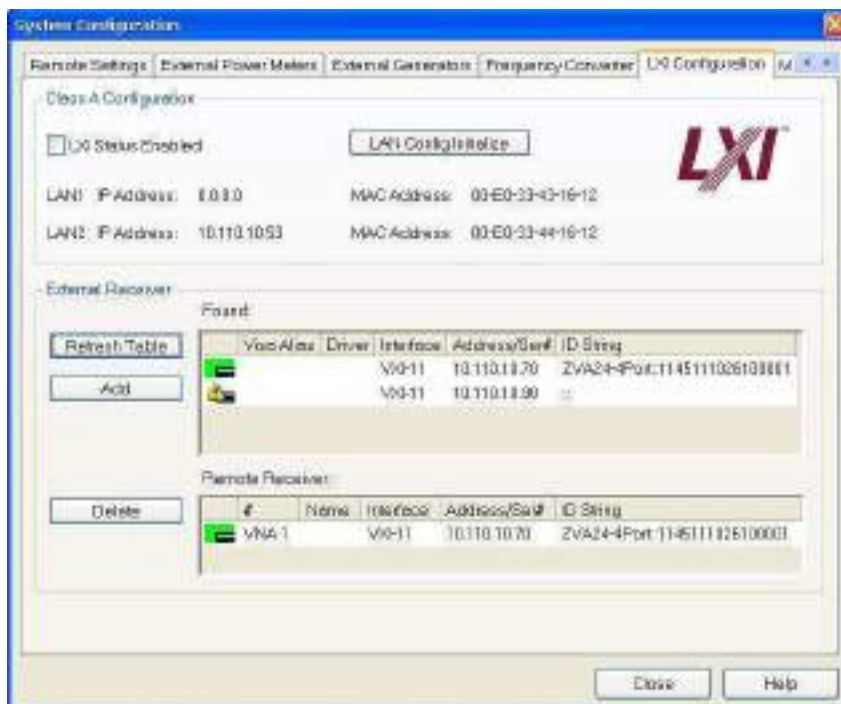

- *LXI Status Enabled* switches the LXI logo in the [status bar](#) on or off. For instruments running Windows 7, LXI is currently not fully supported and hence this control is disabled.
- *LAN Config Initialize* initiates the network configuration reset mechanism (LCI) for the instrument.



Default state of the network settings

According to the LXI standard, an LCI must place the following parameters to a default state.

Parameter	Value
TCP/IP Mode	DHCP + Auto IP Address
Dynamic DNS	Enabled
ICMP Ping	Enabled
Password for LAN configuration	LxiWebIfc

The LCI for the network analyzer also resets the following parameters:

Parameter	Value
Hostname	<Instrument-specific host name>
Description	Vector Network Analyzer
Negotiation	Auto Detect
VXI-11 Discovery	Enabled

The LAN settings are configured using the instrument's [LXI Browser Interface](#).

The tables in the *External Receiver* panel show the R&S ZVA network analyzers which may be used as remote receivers for a mixer delay measurement.

- The upper table (*Found:*) shows all receivers that the analyzer detects to be on-line (i.e. connected and switched on) with their properties.
- *Add* copies the selected receiver from the upper table to the lower table.
- The receivers in the lower table (*Remote Receiver:*) are available as remote receivers for the measurement.

An icon in the first columns of the tables indicates whether the receivers are currently available; see below. The *Found:* table and the icons in the *Configured:* table are automatically updated each time the *External Generators* dialog is opened (to update explicitly use the *Refresh Table* button). The remaining control elements are self-explanatory.



Unintentional switchover to remote control

When using the NI-VISA library, ensure that the network analyzer itself is not listed as a network device in the *Measurement & Automation Explorer*. Otherwise, *Refresh Tables* will send an identification query (*IDN?), causing the analyzer to close the *System Configuration* dialog (without executing *Refresh Tables*) and to activate the remote screen.



Icons in the lower table

The following icons describe the status of a receiver:



The receiver is on-line (connected, switched on, appropriately equipped and ready to be used)



The receiver was detected (upper or lower table) before but is not on-line (VISA communication error)



The receiver list could not be refreshed, no communication with the receiver is possible

Remote control:

`SYSTem:COMMunicate:RDEvice:RECeiver:DEFine`
`SYSTem:COMMunicate:RDEvice:RECeiver:DELet`

LXI Browser Interface

The instrument's LXI browser interface works correctly with all W3C compliant browsers. Typing the instrument's host name or IP address in the address field of the browser on your PC, e.g.

`http://10.113.10.203`

opens the *Instrument Home Page* (welcome page).



The instrument home page displays the device information required by the LXI standard including the VISA resource string in read-only format. The *Device Indicator* toggle button causes the LXI symbol in the [status bar](#) of the analyzer to blink (if active). A green LXI status symbol indicates that a LAN connection has been established; a red symbol indicates that no LAN cable is connected. The *Device Indicator* setting is not password-protected.



The navigation pane of the browser interface contains the following control elements:

- *Lan Configuration* opens the [LAN Configuration](#) page.
- *Glossary* opens a document with a glossary of terms related to the LXI standard.
- *Status* displays information about the LXI status of the instrument.

LAN Configuration

The *Lan Configuration* web page displays all mandatory LAN parameters and allows their modification.



The *TCP/IP Mode* configuration field controls how the IP address for the instrument gets assigned (see also *TCP/IP Configuration*). For the manual configuration mode, the static IP address, subnet mask, and default gateway are used to configure the LAN. The automatic configuration mode uses DHCP server or Dynamic Link Local Addressing (Automatic IP) to obtain the instrument IP address.



NOTE Changing the LAN configuration is password-protected. The password reads **LxiWebIfc** (notice upper and lower case characters). This password cannot be changed in the current firmware version.

The subentries of the *Lan Configuration* menu open other pages:

- **Ping Client** provides the ping utility to verify the connection between the instrument and other devices.
- **Advanced LAN Configuration** provides LAN settings that are not declared mandatory by the LXI standard.



The *Advanced LAN Configuration* parameters are used as follows:


- The *Negotiation* configuration field provides different Ethernet speed and duplex mode settings. In general, the *Auto Detect* mode is sufficient.
- *ICMP Ping* must be enabled to use the ping utility.
- *VXI-11* and *mDNS and DNS-SD* are protocols which can be used for discovery of the instrument in the LAN. The *VXI-11* discovery mechanism is a requirement on LXI devices from the first revision of the standard. Support for the multicast DNS (mDNS) and DNS-SD (DNS Service Discovery) mechanisms has been introduced as a requirement in version 1.3 of the standard. The network analyzers support both discovery mechanisms.

Ping

Ping is a utility that verifies the connection between the analyzer and another device. The ping command uses the ICMP echo request and echo reply packets to determine whether the LAN connection is functional. Ping is useful for diagnosing IP network or router failures.

The ping utility is not password-protected. To initiate a ping between the analyzer and a second connected device,

1. Enable *ICMP Ping* on the *Advanced LAN Configuration* page (enabled after an LCI).
2. Enter the IP address of the second device **without the ping command and without any further parameters** into the *Destination Address* field (e.g. 10.113.10.82).
3. Click *Submit*.

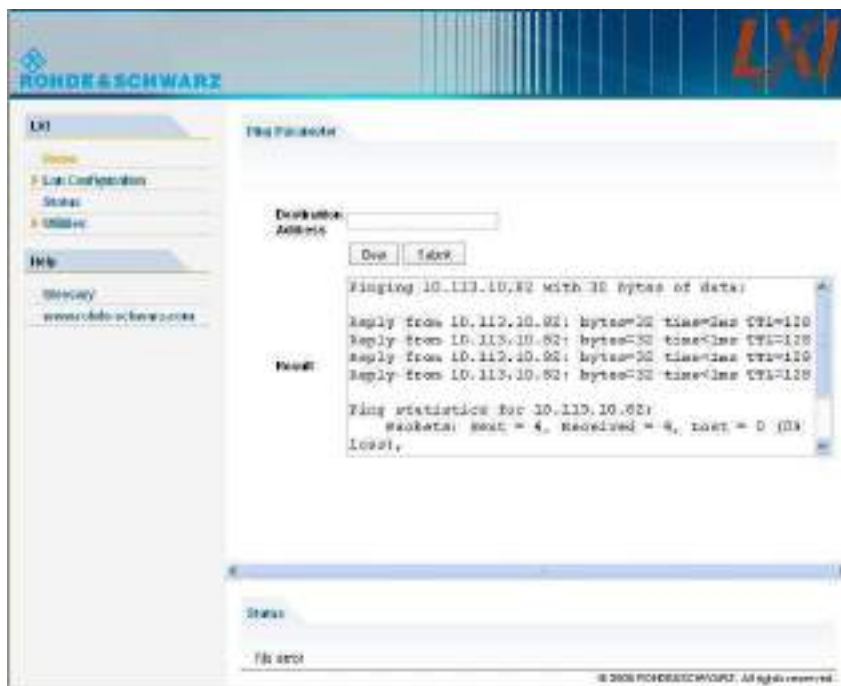

Utilities

The pages in the *Utilities* section are mainly intended for event logging and connection tests.



- If logging is enabled, all internal and external LXI events (e.g. the LXI event messages exchanged by two network analyzers which are connected for a mixer delay measurement with external receiver) and all status transitions appear in the *Logging Entries* table.

- *Flush logfile to disk / Clear current logfile* writes the logging entries to an xml file on the internal hard disk / clears the file. Use *Download current logfile* to load the xml contents into the browser and save a copy.
- *Dump the current state into a file* creates a status file for debugging purposes.
- *Get next* displays the next entry in the log file.

The *Manual Lan Events* page allows you to configure and transmit LAN packets. This can be used for connection tests, similar to the ping functionality.



- *Transmit LAN Packet* transmits a single LAN packet to the selected IP address (for connections using *TCP*) or port (for *UDP*-based connections).
- The LAN packet parameters and flags are described in the LXI standard.

The *Event History* page lists all received events, together with the event status. Transmit a LAN packet to the network analyzer's own TCP address to test this functionality.



S-Parameter Wizard

The *S-Parameter Wizard* menu consists of a series of dialogs providing the settings for a standard S-parameter measurement in a frequency sweep.



The measurement comprises the following stages:

1. Select the test setup

Choose the single-ended or balanced ports of the analyzer according to the port configuration of your DUT and connect the DUT to the selected analyzer ports. This dialog corresponds to the [Predefined Configs](#) tab of the *Balanced Ports and Port Groups* dialog.



The default test setup corresponds to a standard 2-port S-parameter measurement. You do not need to select another test setup unless you want to measure multiport parameters or apply a [unbalance-balance conversion](#) in order to obtain [mixed mode parameters](#).

2. Define port impedances

Assign reference impedances to all physical and balanced test ports selected in the previous step. The reference impedances can be complex.

The values for balanced ports are by pressing the buttons in a table of the following shape:

Physical Port	Ref Impedance	
1	50 Ω + j0 Ω	
2	50 Ω + j0 Ω	
3	50 Ω + j0 Ω	
4	50 Ω + j0 Ω	

The buttons open the [Reference Impedance of Physical Port](#) dialog.

The values for balanced ports are by pressing the buttons in a table of the following shape:

Physical Port	Logical Port	Ref Impedance	
1	1	DM: 100 Ω + j0 Ω CM: 25 Ω + j0 Ω	
3			
2	2	DM: 100 Ω + j0 Ω CM: 25 Ω + j0 Ω	
4			

The buttons open the [Reference Impedance of Logical Port](#) dialog.



The default reference impedance of the physical analyzer ports is $Z_0 = 50 \Omega$. The default reference impedances for balanced ports are derived hereof. You do not need to change these value unless you want to renormalize the port impedances; see [Reference Impedances](#).

3. Select the measurement parameters and the diagram areas

Choose an [S-parameter](#) or a group of S-parameters to be measured and displayed. The measurement parameters are displayed in separate diagram areas: Cartesian diagram areas are used for transmission S-parameters, [Cartesian](#) or [Smith](#) diagrams for reflection parameters.

The selections to be made depend on the test setup selected in the previous stage.



In case of an error in a previous stage, you can always use the *Back* button and correct your settings.

4. Select the sweep settings

Choose the [frequency range](#) and the [number of measurement points](#) per sweep. The sweep range is defined by two values (start and stop frequency or center frequency and span). The measurement points are equidistant across the sweep range. Increasing the number of points also increases the measurement time per single sweep.

5. Select the measurement bandwidth and source power

Choose a typical [measurement bandwidth](#) and one of two typical [source power](#) values. A smaller measurement bandwidth increases the dynamic range but slows down the measurement. A smaller source power protects the input port of the analyzer from being overdriven if an active DUT with high gain is measured.



The predefined bandwidths and source powers have been selected according to the following criteria:

- The large measurement bandwidth (*Fast Sweep*) ensures that the noise of a S_{21} trace at minimum (–40 dBm) source power and 0 dB attenuation is smaller than 0.1 dB.
- The default source power for a passive DUT ensures that the analyzer receiver is in its linear range (no compression) if a passive DUT with 0 dB attenuation is measured. The default source power for an active DUT ensures no compression if an active DUT with 20 dB gain is measured. If the actual gain of the DUT is more than 30 dB, then the default source power of –20 dB is still too high and needs to be changed after finishing the wizard.

6. Perform a calibration (optional)

Call up the [calibration wizard](#) and perform a calibration. The calibration type is a full n-port calibration, where n is the number of analyzer ports selected in the first stage of the calibration wizard. This calibration can be performed as well using [automatic calibration](#) (if accessory R&S ZV-Z5x, Calibration Unit, is available).



You can skip the automatic calibration stage (select *Finish now without calibration*) if

- A valid calibration is already assigned to the active channel
- You want to apply a valid calibration stored in the [cal pool](#)
- You want to perform the calibration manually, e.g. because you wish to select another [calibration type](#).
- You don't want to use a calibration, e.g. because the factory calibration is accurate enough for your measurement.



In order to obtain a predictable result the measurement wizard has to reset all settings except the current calibration data. Store your setup if you don't want to lose the current configuration.

Int. Reference

Selects the internal reference clock for synchronization. The analyzer provides a 10 MHz internal reference clock which can be tapped off at the [10 MHz REF](#) connector at the rear of the instrument in order to synchronize other devices, e.g. signal generators or a second network analyzer of the ZVAB family. See also example for [reference frequency](#) settings for external generators.

Remote control: `[SENSe<Ch>:]ROSCillator[:SOURce] INTernal`

Ext. Reference

Selects an external reference clock signal for synchronization. The external 10 MHz reference clock signal must be applied to the [10 MHz REF](#) connector at the rear of the instrument. The external reference signal must meet the specifications of the data sheet. The internal reference signal is synchronized to the

external signal. See also example for [reference frequency](#) settings for external generators.

As a reminder, *Ext Ref* is indicated in the [status bar](#).

Remote control: `[SENSe<Ch>:]ROSCillator[:SOURce] EXternal`

GPIO Address

Opens the numeric entry bar to define the analyzer's GPIO address.



The GPIO address must be in the range between 0 and 30.

Remote control: `SYSTem:COMMunicate:GPIO[:SELF]:ADDRes`

Service Function...

Opens a dialog to access the service functions of the instrument. Service functions are password-protected and should be used by a R&S service representative only. Refer to the service manual for more information.



If you press *Enter* twice without changing the name of the service function, the analyzer opens the internal [On-Screen Keyboard](#). Use *Shift* + *Enter* to execute a service function repeatedly.

Remote control: `SYSTem:PASSword[:CENable]
DIAGnostic:SERvice:FUNctIon
DIAGnostic:SERvice:SFUNctIon`

Preset

Performs a preset, whose scope and restored settings are defined in the [Presets](#) tab of the [System Config](#) dialog.



Scope of the preset and exceptions

A preset can affect all open setups or the active setup only and can restore factory defaults or user-defined settings.

However, it does not change the data related to [global resources](#) (cal pool, cal kit data), the position of dialogs, the color scheme of the diagram areas, and the directory and printer settings. These properties can be reset in the [Resets](#) tab of the [System Config](#) dialog.



If you activate *Preset* by mistake, you can use [Undo](#) in order to restore your previous instrument settings.

Remote control: `*RST; SYSTem:PRESet`

Undo

Reverses the last action, if possible. Otherwise, *Undo* is disabled (grayed).



You can use *Undo* even after a *Preset*, in order to restore your own instrument settings.

Redo

Reverses the action of the *Undo* command. If *Undo* was not used before, *Redo* is disabled (grayed).

External Tools

Opens a submenu with various demo setups and editing tools:


- *Mouse Keyboard.Ink*: Opens the Windows On-Screen Keyboard.
- *Demo*.vbs*: Shows how to perform the settings for typical measurement tasks.



After running a *.vbs file you can modify the demo setup according to your own needs and store it to a *.zvx file for later reuse.

Info Menu

The *Info* menu gives access to information about the instrument and its operation. All functions are primarily intended for error diagnostic and service purposes; see [Obtaining Support](#). Many *Info* dialogs also display softkeys to *Print* the contents, save them to a file (*Print to File*) or *Close* the dialog.

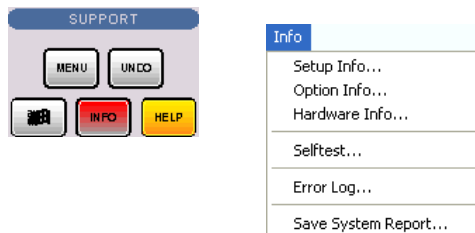

The *Info* menu contains the following functions:

- *Setup Info* displays the channel and trace settings of the active setup and the main characteristics of the instrument including its IP address.
- *Option Info* shows the installed software options with their type and name, the option key and key type, the duration of activation, and the expiry date (if applicable).
- *Hardware Info* gives an overview of the analyzer's hardware configuration, basic hardware-related instrument settings, and the version of the "Specifications" which correspond to the current firmware version.
- *Selftest...* displays a list of the automatic selftests of the analyzer together with the current results.
- *Error Log...* opens a chronological record of [errors](#) that occurred in the current and in previous sessions. While the error log is open, additional softkeys to print, close or clear (delete) the log are

provided. The deleted error log shows the message *No errors found*.

- *Save System Report...* opens a dialog that allows to initiate a selftest and to write the current setup, log files, hardware configuration, a screenshot and the selftest result to a zipped report file.

Remote control: `DIAGnostic:DEvice:STATe`

Window Menu


The *Window* menu provides standard Windows™ functions to arrange different windows on the screen.



A window is a rectangular portion of the screen showing all diagram areas of a particular setup. Windows are limited by a blue frame with several icons. The analyzer uses standard windows provided by the operating system.

- A window can show a practically unlimited number of diagram areas.
- The icons on the frame of the window are used to minimize, maximize or close windows.
- The functions of the *Windows* menu are used to arrange windows automatically and select a particular window.
- New windows with new setups are created using the [New](#) command.

The contents of the windows are explained in section [Display Menu](#).

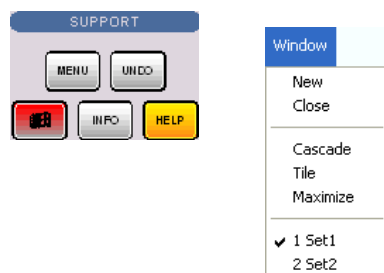

The *Window* menu contains the following functions:

- [New](#) creates a new setup and opens a new setup window.
- [Close](#) closes an opened setup window.
- [Cascade](#) arranges all opened windows in an overlapped fashion.
- [Tile](#) arranges all opened windows in non-overlapped tiles.
- [Maximize](#) maximizes the active window to occupy the whole screen.
- [1 Set<n>.zvx...](#) activates a specific window with a specific setup

New

Creates a new setup and opens a new setup window. The new setup is named *Setup<n>* where <n> is the current number for all created setups.



This command is equivalent to **File – New**. To open an existing setup, select **File – Open / Recall**. To rename a setup, use **File – Save As**.

Remote control: `MEMory:DEFine "<setup_name>"`

Close

Closes an opened setup window. The analyzer suggests to save changes to the setup before closing it. If a setup is closed without saving, all changes made since the last time it was saved are lost.



This command is equivalent to **File – Close**.

Remote control: `MEMory:DElete[:NAME] "<setup_name>"`

Cascade

Arranges all opened windows in an overlapped fashion, showing each one's title bar. The active window is placed in the foreground.

Remote control: None (screen configuration only)

Tile

Arranges all opened windows in non-overlapped tiles.

Remote control: None (screen configuration only)

Maximize

Maximizes the active setup window to occupy the whole screen.

Remote control: None (screen configuration only)


1 Set<n>.zvx

Displays a list of currently open setup windows. A checkmark appears in front of the setup name of the active window. Selecting a setup from this list makes its window active and places it in the foreground.

Remote control: `MEMory:CAT?`

Help Menu

The *Help* menu provides assistance with the network analyzer and its operation.

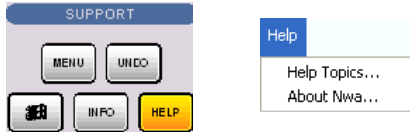

The *Help* menu contains the following functions:

- [Help Topics](#) opens this help system.
- [About Nwa...](#) opens a dialog to retrieve information about the network analyzer and the current firmware version.

Help Topics

Opens this help system. The help file is opened with the *Welcome* topic and remembers its last size, position and default navigation tab (*Contents*, *Index*,...). For more information see *About this Help*.

About Nwa...

Opens a dialog to retrieve information about the network analyzer and the current firmware version. *OK* closes the dialog.

6 Remote Control

This chapter provides instructions on how to set up the analyzer for remote control, a general introduction to remote control of programmable instruments, and the description of the analyzer's remote control concept. For reference information about all remote control commands implemented by the instrument, complemented by comprehensive program examples, refer to the [SCPI Reference](#) chapter.

Remote Control: Introduction

The instrument is equipped with different interfaces for remote control:

- A GPIB bus interface according to standard IEC 625.1/IEEE 488.1. The [GPIB bus connector](#) for control of the analyzer from a controller is located on the rear panel of the instrument.
- Analyzers connected to a Local Area Network can be controlled via the RSIB or VXI-11 protocols. Two connectors for [LAN connection](#) are located on the rear panel. A VISA installation on the controller is required.
- The network analyzer can itself act as a master and control external devices (e.g. [power meters](#), [generators](#)) via LAN, USB, or GPIB interface. A VISA installation on the analyzer is required for this remote control type.



Visa library

VISA is a standardized software interface library providing input and output functions to communicate with instruments. The I/O channel (LAN or TCP/IP, USB...) is selected at initialization time by means of the channel-specific resource string (also termed address string) or by an appropriately defined VISA alias (short name). A VISA installation on the master device is a prerequisite for remote control over LAN interface and for control of external devices from the analyzer.

The *VISA I/O Library* is available from Rohde & Schwarz, order no. 1310.0054.02. For more information about VISA refer to the user documentation.

Starting a Remote Control Session

A remote control program must open a connection to the analyzer (using VISA functionality), before it can send commands to the analyzer and receive device responses (e.g. measurement data). The programming details depend on the library version used and on the programming language. For this reason, the examples in chapters "Command Reference" and "Programming Examples" are reduced to the mere SCPI syntax.

Example controller programs may be obtained from the Rohde & Schwarz support centers. In many cases, it can be preferable to integrate the controller program into post-processing tools (e.g. Microsoft Excel) in order to list, draw, or manipulate the measured values retrieved from the analyzer.

The following tools can make remote control more comfortable and faster:

- Various software tools provide an easy-to-use graphical user interface for remote control. An example is the [GPIB Explorer](#) which is pre-installed on the analyzer.
- Instrument drivers provide an improved interface between the test software and the test instruments. They perform the actual control of the instrument using higher-level functions for operations such as configuring, reading from, writing to, and triggering the instrument. This reduces development time, eliminating the need to learn the specific command set for each


instrument. In general, program development is further simplified by a graphical program environment.

Rohde & Schwarz offers various R&S ZVA driver types (LabView, LabWindows/CVI, IVI, VXIplug&play...) for different programming languages. The drivers are available free of charge on the product pages in the R&S internet, along with installation information.

GPIB Explorer

The *GPIB Explorer* is a software tool that allows you to connect to the analyzer, obtain an overview of all implemented remote control programs, test programs, compile and run test scripts. The program can be opened from the Windows Start Menu: *Programs – R&S Network Analyzer – GPIB Explorer* or by starting the executable file *iecw32.exe* in the program directory of the network analyzer (e.g. *C:\Program Files\Rohde&Schwarz\Network Analyzer\Bin*).

After the *GPIB Explorer* is started, the interface and protocol for the connection to the instrument can be selected in a dialog:

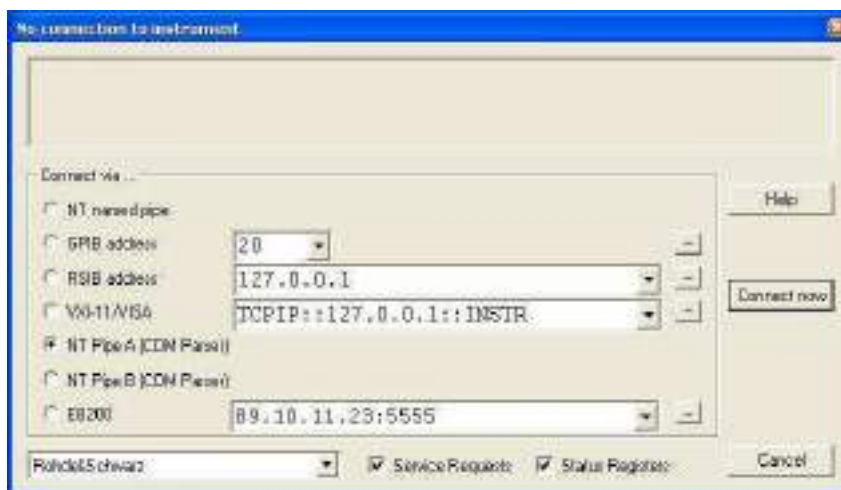


The following options are provided:

- NT named pipe (not supported at present)
- GPIB address (for connection to controllers equipped with a National Instruments GPIB interface using the GPIB bus connector)
- RSIB address and VXI-11/VISA (for LAN connection, requires an appropriate IP or local host address; see *LAN Connection* sections in the Getting Started guide)
- Named pipe A/B (only for a *GPIB Explorer* installed on the analyzer, recommended for "remote" test on the instrument)
- EB200 (not supported at present)



Select *Info – Setup Info* to look up the IP address information of your analyzer. If you run the *GPIB Explorer* on the analyzer, the local host address (loopback address) is 127.0.0.1.

After the connection is established, the *GPIB Explorer* displays a tree view of all commands included in the current firmware version of the network analyzer. The programs can be selected for execution by a single mouse click.

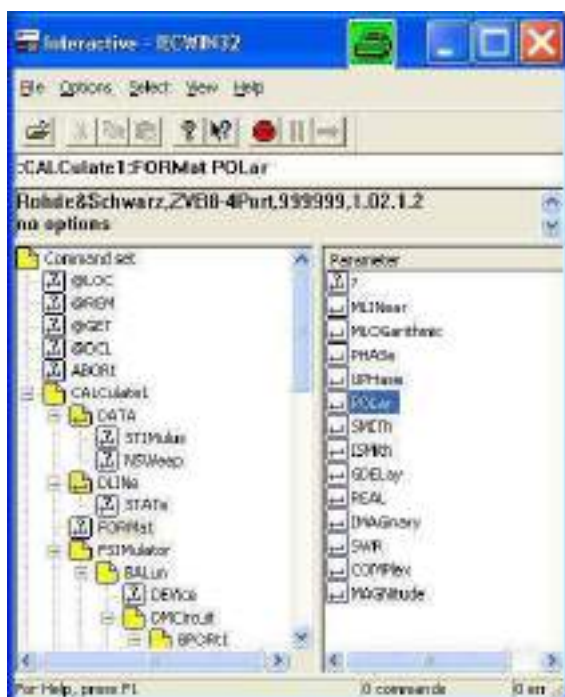

Refer to the GPIB explorer's help system for more information.




It remote logging is enabled (**SYSTem:LOGGing:REMOte[:STATe] ON**) the analyzer stores all received commands to the file 'c:\ZVAB Remote.log'.

Switchover to Remote Control

On power-up, the instrument is always in the manual operating state and can be operated via the front panel controls. The instrument is switched to remote control as soon as it receives a command from the controller. If the instrument is controlled via RSIB or VXI-11 protocol, the alternative commands **@REM** and **@LOC** can be used to switch from manual to remote control and back.

While remote control is active, operation via the front panel is disabled with the exception of four softkeys. The instrument settings are optimized for maximum measurement speed; the display is switched off.

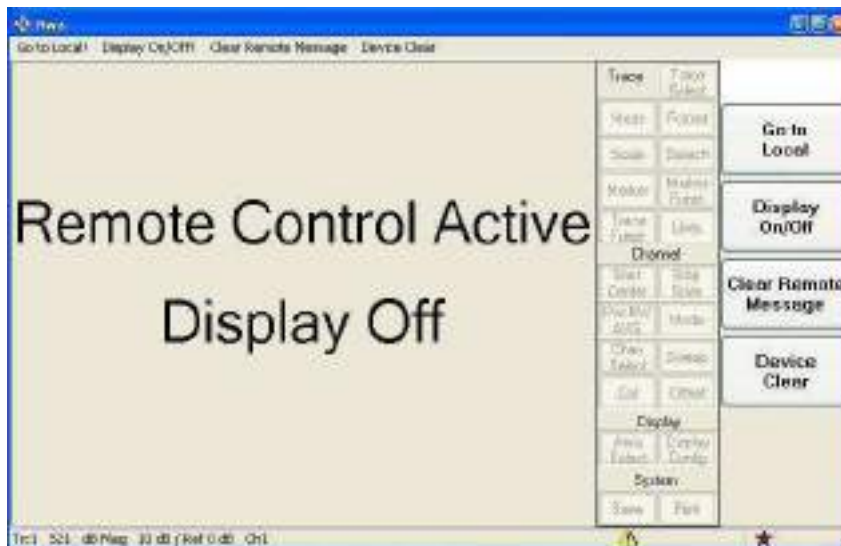


The softkeys in the remote screen are used to modify or quit the remote state:

- *Go to Local* switches the instrument to local state. This key is locked while a sequential command is executed; see [Command Synchronization](#).
- *Display On/Off* switches the display on or off.
- *Clear Remote Message* removes the current remote error tooltip; see tips below. Manual control messages/tooltips are not affected.
- *Device Clear* aborts command execution and resets the command processing software to its initial state. You can use this softkey to unlock the *Go to Local* key while a sequential command is executed. *Device Clear* does not change the analyzer settings.



Display On/Off states

Switching on the display means that the analyzer shows the measurement screen with the current setups, diagram areas and traces without leaving the remote state. In this operating mode, it is possible to observe the screen while a remote control script is executed and the control elements on the front panel are still disabled:

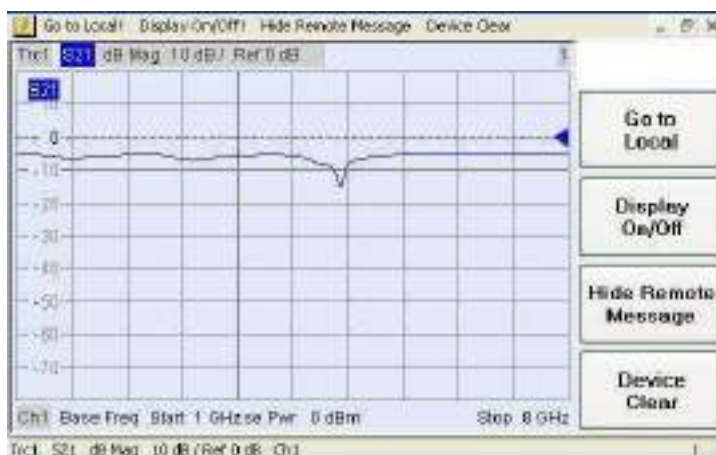

Switching on the display is ideal for program test purposes but tends to slow down the measurement. Therefore it is recommended to switch off the display in real measurement applications where a tested

program script is to be executed repeatedly. See also [Viewing calibration sweeps in remote state](#).



The display update is also enabled while a remote control command is executed. Use this feature e.g. in order to view the [calibration sweeps in remote state](#).

The analyzer provides a third display option where the measurement screen is only updated when this is triggered by a remote control command; see `SYSTem:DISPlay:UPDate ONCE`.

The instrument remains in the remote state until it is reset to the manual state via the GUI or via remote control (see section [Return to Manual Operation](#)).



You can create your own keys to replace the two default softkeys *Go to Local* and *Display On/Off*. See [Combining Manual and Remote Control](#).

A tooltip across the bottom of the remote screen indicates a remote command error, e.g.

`Remote Error : -222, "Data out of range;FREQ:STAR 1"`. You can switch off this tooltip using *Clear Remote Message* or

`SYSTem:ERRor:DISPlay OFF`.

Remote control: `@REM`
`SYSTem:DISPlay:UPDate`
`SYSTem:USER:DISPlay:TITLe` (define a title for the remote display)
`SYSTem:ERRor:DISPlay` (Clear Remote Message)

Setting the Device Address

The GPIB address (primary address) of the instrument is factory-set to 20. It can be changed manually in the *System* menu or via remote control. For remote control, addresses 0 through 30 are permissible. The GPIB address is maintained after a reset of the instrument settings.

Remote control: `SYSTem:COMMunicate:GPIB[:SELF]:ADDRes`

Return to Manual Operation

Return to manual operation can be initiated via the front panel or via remote control.

- Manually: Click the *Local* softkey in the remote screen.
- Via GPIB bus: `CALL IBLOC(device%)`
- Via RSIB or VXI-11 protocol: `@LOC` and `@REM` can be used to switch from remote to manual control and back.



Local lockout

Before returning to manual control, command processing must be completed. If this is not the case, the analyzer switches back to remote control immediately.

Returning to manual control by pressing the *Local* softkey can be disabled by the GPIB Local Lockout Message (LLO; see [GPIB Bus Interface](#), *Universal Commands*) which is also included in the NI commands `SetRWLS` (Set Remote With Lockout State) or `SendLLO`. This prevents unintentional switch-over, i.e. return to manual control is possible via the GPIB bus only.

Returning to manual control via the front panel keys can be enabled again by deactivating the REN control line of the GPIB bus.


Combining Manual and Remote Control

Using a remote control script is the quickest and easiest way of performing complicated tasks which need to be repeated many times. On the other hand, it is often preferable to control a previously configured measurement manually in order to observe the result on the screen.

The analyzer provides a number of tools for combining manual and remote control:

- **User Keys**

The remote control commands `SYSTem:USER:KEY...` place up to 8 softkeys with arbitrary functionality on the remote screen. The softkeys replace the default softkeys *Go to Local* and *Display On/Off*.

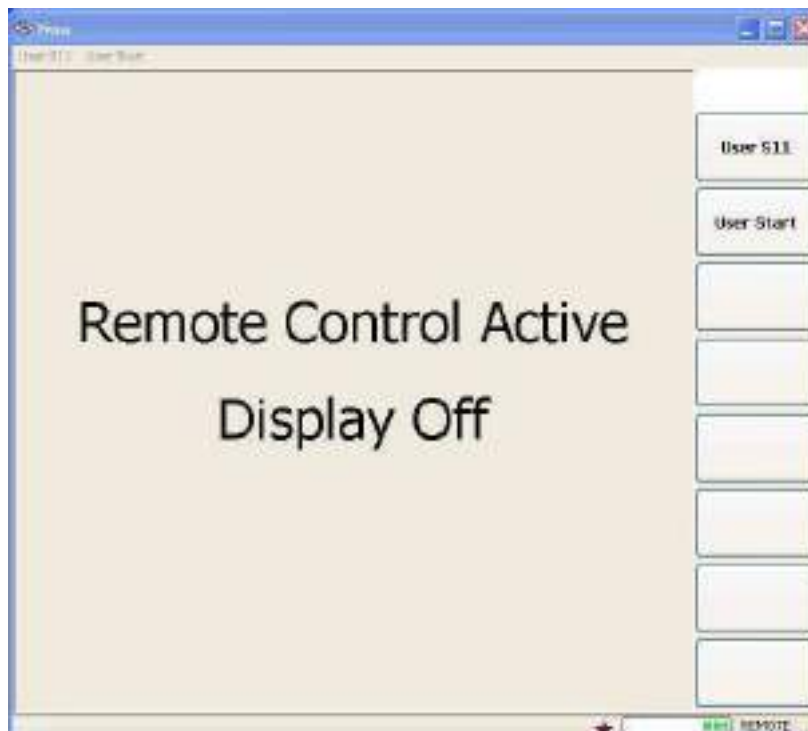

Pressing a user softkey or clicking the corresponding command across the top of the remote screen executes the assigned functionality.



If you want to use more than 8 user keys, you can easily introduce additional levels: Simply reserve one key for re-defining the entire user key bar. If you press or click the key, your remote script should re-assign the labels and functions of the existing keys. If you use this procedure repeatedly, you can emulate an arbitrary number of manual control features on your remote screen.

- **Menu key commands**

The commands in the `DISPlay:MENU:KEY...` subsystem open the manual control screen, activate menus or submenus for manual control, or execute a specified menu command.

`DISPlay:MENU:KEY:EXECute '<menu_key>'` can be used in different ways:

- If the menu key causes an event (e.g. selection of the measured quantity: S11, S12 etc.), the function is executed immediately. No further action is required; the instrument remains in remote control mode.

- If the menu key requires a numeric entry (e.g. entry of the sweep range: Start, Stop etc.) the command opens the numeric entry bar. The instrument is switched back to remote control mode as soon as the entry has been made manually.
- If the menu key requires several entries to be made in a dialog or in a wizard (e.g. the S-Param Wizard), the command opens this dialog/wizard. All entries can be made manually. The instrument is switched back to remote control mode as soon as the dialog or wizard is closed.



TIP `DISPlay:MENU:KEY:EXECute '<menu_key>'` works for all menu keys, even though the analyzer may not provide an equivalent remote control command.

Remote control: `SYSTem:USER:KEY`
`SYSTem:USER:KEY:FUNction`
`DISPlay:MENU:KEY:EXECute`
`DISPlay:MENU:KEY:SElect`

Messages

The messages transferred on the data lines of the [GPIB bus](#) or via the RSIB / VXI-11 protocol can be either interface messages or device messages. For a description of interface messages refer to the relevant sections:

- [GPIB Bus Interface](#)
- [RSIB Protocol](#)
- [VXI-11 Protocol](#)

Device Messages (Commands and Device Responses)

Device messages are transferred in ASCII format. A distinction is made according to the direction in which device messages are transferred:

- *Commands* are messages the controller sends to the instrument. They operate the device functions and request information.
- *Device responses* are messages the instrument sends to the controller after a query. They can contain measurement results, instrument settings and information on the instrument status.

Commands are subdivided according to two criteria:

1. According to the effect they have on the instrument:

- *Setting commands* cause instrument settings such as a reset of the instrument or setting the output level to some value.
- *Queries* cause data to be provided for output on the GPIB bus, e.g. for identification of the device or polling the active input.

2. According to their definition in standard IEEE 488.2:

- *Common commands* have a function and syntax that is exactly defined in standard IEEE 488.2. Typical tasks are the management of the standardized status registers, reset and selftest.
- *Instrument-control commands* are functions that depend on the features of the instrument such as frequency settings. A majority of these commands has also been standardized by the SCPI

consortium.

The device messages have a characteristic [structure and syntax](#). In the [SCPI reference](#) chapter all commands are listed and explained in detail.

SCPI Command Structure and Syntax

SCPI commands consist of a so-called header and, in most cases, one or more parameters. The header and the parameters are separated by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank). The headers may consist of several key words. Queries are formed by directly appending a question mark to the header.

[Common commands](#) and [device-specific commands](#) differ in their syntax.



SCPI compatibility

The analyzers are compatible to the final SCPI version 1999.0. Not all of the commands supported by the instrument are taken from the SCPI standard (Standard Commands for Programmable Instruments), however, their syntax follows SCPI rules. The SCPI standard is based on standard IEEE 488.2 and aims at the standardization of instrument-control commands, error handling and the status registers.

The requirements that the SCPI standard places on command syntax, error handling and configuration of the [status registers](#) are explained in detail in the following sections.



Reset values

In contrast to instruments with manual control, which are designed for maximum possible operating convenience, the priority of remote control is the "predictability" of the device status. This means that when incompatible settings are attempted, the command is ignored and the device status remains unchanged, i.e. other settings are not automatically adapted. Therefore, GPIB bus control programs should always define an initial device status (e.g. with the command *RST) and then implement the required settings.

Common Commands

Common (=device-independent) commands consist of a header preceded by an asterisk "*" and possibly one or more parameters.

Examples:

- *RST RESET, resets the instrument.
- *ESE 253 EVENT STATUS ENABLE, sets the bits of the event status enable registers.
- *ESR? EVENT STATUS QUERY, queries the contents of the event status register.

Instrument-Control Commands

Instrument-control commands are based on a hierarchical structure and can be represented in a command tree. The command headers are built with one or several mnemonics (keywords). The first level (root level) mnemonic identifies a complete command system.

Example:

`SENSe` This mnemonic identifies the command system `SENSe`.

For commands of lower levels, the complete path has to be specified, starting on the left with the highest level, the individual key words being separated by a colon ":".

Example:

`SENSe:FREQuency:STARt 1GHZ`

This command is located on the third level of the `SENSe` system. It defines the start frequency of the sweep.

The following rules simplify and abbreviate the command syntax:

- **Multiple mnemonics**

Some mnemonics occur on several levels within one command system. Their effect depends on the structure of the command, i. e. on the position in the command header they are inserted in.

Example:

`SOURce:FREQuency:CW 1GHZ`

This command contains the key word `SOURce` in the first command level. It defines the frequency for sweep types operating at fixed frequency.

`TRIGger:SOURce EXTernal`

This command contains the key word `SOURce` in the second command level. It defines the trigger source "external trigger".

- **Optional mnemonics**

Some command systems permit certain mnemonics to be optionally inserted into the header or omitted. These mnemonics are marked by square brackets in this manual. The full command length must be recognized by the instrument for reasons of compatibility with the SCPI standard. Some commands are considerably shortened by omitting optional mnemonics.

Example:

`TRIGger[:SEQuence]:SOURce EXTernal`

This command defines the trigger source "external trigger". The following command has the same effect:

`TRIGger:SOURce EXTernal`



An optional mnemonic must not be omitted if its effect is additionally specified by a numeric suffix.

- **Long and short form**

The key words feature a long form and a short form. Either the short form or the long form can be entered; other abbreviations are not permitted.

Example:

```
TRIGger:SOURce EXTernal
TRIG:SOUR EXT
```



The short form is marked by upper case letters, the long form corresponds to the complete word. Upper case and lower case notation only serves to distinguish the two forms in the manual, the instrument itself is case-insensitive.

- **Parameters**

Parameters must be separated from the header by a "white space". If several parameters are specified in a command, they are separated by a comma ",". For a description of the parameter types, refer to section [Parameters](#).

Example:

```
SOURce:GROup 1,1
```

This command defines a group of measured ports.

- **Numeric suffix**

If a device features several functions or features of the same kind, e.g. several channels or test ports, the desired function can be selected by a suffix added to the command. Entries without suffix are interpreted like entries with the suffix 1.

Example:

```
SOURce:GROup2 1,1
```

This command defines a second group (group no 2) of measured ports.

Structure of a Command Line

A command line may consist of one or several commands. It is terminated by a <New Line>, a <New Line> with EOI or an EOI together with the last data byte. Visual BASIC automatically produces an EOI together with the last data byte.

Several commands in a command line must be separated by a semicolon ";". If the next command belongs to a different command system, the semicolon is followed by a colon.

Example: `TRIGger:SOURce EXTernal;;SENSe:FREQuency:START 1GHZ`

This command line contains two commands. The first command belongs to the `TRIGger` system and defines the trigger source (external trigger). The second command belongs to the `SENSe` system and defines the start frequency of the sweep.

If the successive commands belong to the same system, having one or several levels in common, the command line can be abbreviated. To this end, the second command after the semicolon starts with the level that lies below the common levels. The colon following the semicolon must be omitted in this case.

Example: `TRIG:SOUR EXT;:TRIG:TIM 0.1`

This command line is represented in its full length and contains two commands separated from each other by the semicolon. Both commands are part of the `TRIGger` command system, i.e. they have one level in common.

When abbreviating the command line, the second command begins with the level below `TRIG`. The colon after the semicolon is omitted. The abbreviated form of the command line reads as follows:

```
TRIG:SOUR EXT; TIM 0.1
```

However, a new command line always begins with the complete path.

Example: `TRIG:SOUR EXT`
`TRIG:THR LOW`

Responses to Queries

A query is defined for each setting command unless explicitly specified otherwise. It is formed by adding a question mark to the associated setting command. According to SCPI, the responses to queries are partly subject to stricter rules than in standard IEEE 488.2.

1. The requested parameter is transmitted without header.

Example: `TRIGger:SOURce?` Response: IMM

2. Maximum values, minimum values and all further quantities which are requested via a special text parameter are returned as numerical values.

Example: `SENSe:FREQuency:STOP? MAX` Response: 8000000000

3. Numerical values are output without their unit. The default unit for each command is reported in the [SCPI command description](#).

Example: `SENSe:FREQuency:STOP? MAX` Response: 8000000000 for 8 GHz

4. Boolean values are returned as 0 (for OFF) and 1 (for ON).

Example: `SWEep:TIME:AUTO?` Response: 1

5. Text (character data) is returned in short form (see also next section).

Example: `TRIGger:SOURce?` Response: IMM

SCPI Parameters

Many commands are supplemented by a parameter or a list of parameters. The parameters must be separated from the header by a "white space". Permissible parameters are numerical values, Boolean parameters, text, character strings and block data. The type of parameter required for the respective command and the permissible range of values are specified in the command description.

Numeric Values

Numeric values can be entered in any form, i.e. with sign, decimal point and exponent. Values exceeding the resolution of the instrument are rounded up or down. The mantissa may comprise up to 255 characters, the values must be in the value range $-9.9\text{E}37$ to $9.9\text{E}37$. The exponent is introduced by an "E" or "e". Entry of the exponent alone is not allowed. In the case of physical quantities, the unit can be entered. Permissible unit prefixes are G (giga), MA (mega), MOHM and MHZ are also permissible), K (kilo), M (milli), U (micro) and N (nano). If the unit is missing, the default unit is used.

Example:

`SOUR:RFG:FREQ 1.5GHz` is equivalent to

`SOUR:RFG:FREQ 1.5E9`

Special numeric values

The texts MINimum, MAXimum, DEFault, UP and DOWN are interpreted as special numeric values. A query returns the associated numerical value.

Example:

Setting command: `SENSe:FREQuency:START MINimum`

The query `SENSe:FREQuency:START?` returns 300000 (the exact value depends on the analyzer)

model).

The following special values can be used:

- *MIN/MAX* MINimum and MAXimum denote the minimum and maximum value of a range of numeric values.
- *DEF* DEFault denotes the preset value. This value is set by the *RST command.
- *UP/DOWN* UP, DOWN increases or reduces the numeric value by one step. The step width is reported in the detailed [command description](#).
- *INF/NINF* Negative INFinity (NINF) represent the numerical values $-9.9E37$ or $+9.9E37$, respectively. INF and NINF are only sent as device responses.
- *NAN* Not a Number (NAN) represents the value $9.91E37$. NAN is only sent as device response. This value is not defined. Possible causes are division by zero, subtraction or addition of infinite and the representation of missing values.



Unless it is explicitly stated in the command description you can use the special numeric parameters for all commands of the analyzer.

Boolean Parameters

Boolean parameters represent two states. The ON state (logically true) is represented by ON or a numerical value different from 0. The OFF state (logically false) is represented by OFF or the numerical value 0. A query responds with 0 or 1.

Example: Setting command: `SWEep:TIME:AUTO ON`
Query: `SWEep:TIME:AUTO?` returns 1

Text Parameters

Text parameters observe the syntax rules for key words, i.e. they can be entered using a short or long form. Like any parameter, they have to be separated from the header by a white space. In the case of a query, the short form of the text is provided.

Example: Setting command: `TRIGger:SOURce EXTernal`
Query: `TRIGger:SOURce?` returns EXT

Strings

Strings must always be entered within single or double quotation marks (' or ").

Example: `CONFigure:CHANnel:NAME "Channel 4"` or
`CONFigure:CHANnel:NAME 'Channel 4'`

Block Data Format

Block data is a transmission format which is suitable for the transmission of large amounts of data. A command using a block data parameter with definite length has the following structure:

Example: `HEADer:HEADer #45168xxxxxxxx`

The hash symbol # introduces the data block. The next number indicates how many of the following digits describe the length of the data block. In the example the 4 following digits indicate the length to be 5168 bytes. The data bytes follow. During the transmission of these data bytes all End or other control signs are ignored until all bytes are transmitted.

A #0 combination introduces a data block of indefinite length. The use of the indefinite format requires a NL^END message to terminate the data block. This format is useful when the length of the transmission is not known or if speed or other considerations prevent segmentation of the data into blocks of definite length.

Overview of Syntax Elements

- : The colon separates the key words of a command. In a command line the separating semicolon marks the uppermost command level.
- ; The semicolon separates two commands of a command line. It does not alter the path.
- , The comma separates several parameters of a command.
- ? The question mark forms a query.
- * The asterisk marks a common command.
- ' ,
" Quotation marks introduce a string and terminate it.
- # The hash sign # introduces binary, octal, hexadecimal and block data.
Binary: #B10110
Octal: #O7612
Hexadecimal: #HF3A7
Block: #21312

A "white space" (ASCII-Code 0 to 9, 11 to 32 decimal, e.g. blank) separates header and parameter.

Basic Remote Control Concepts

The functionality of the network analyzer's remote control commands has been defined in close analogy to the menu commands and control elements of the graphical user interface (GUI). The [basic concepts](#) of setups, traces, channels, and diagram areas remain valid in remote control. Moreover, all commands follow SCPI syntax rules, and SCPI-confirmed commands have been used whenever possible. These principles largely simplify the development of remote control scripts.

The GUI and the remote control command set both aim at maximum operating convenience. In manual control this generally means that the control elements are easy to find and intuitive to handle, and that the effect of each operation is easy to verify on the screen. Convenient remote control operation depends on a simple and systematic program syntax and on a predictable instrument state; the display of results is secondary.

These differences suggest the peculiarities in the analyzer's remote control concept discussed in the following sections.

Traces, Channels, and Diagram Areas

Like in manual control, traces can be assigned to a channel and displayed in diagram areas (see section [Traces, Channels and Diagram Areas](#) in chapter *System Overview*). There are two main differences between manual and remote control:

- A trace can be created without being displayed on the screen.
- A channel must not necessarily contain a trace. Channel and trace configurations are independent of each other.

The following frequently used commands create and delete traces, channels, and diagram areas:

Create new trace and new channel (if channel <Ch> does not exist yet)	<code>CALCulate<Ch>:PARameter:SDEFine '<Trace Name>', '< Meas Parameter>'</code>
Delete trace	<code>CALCulate<Ch>:PARameter:DElete '<Trace Name>'</code> <code>CALCulate<Ch>:PARameter:DElete:ALL</code> <code>CALCulate<Ch>:PARameter:DElete:CALL</code>
Create or delete channel	<code>CONFigure:CHANnel<Ch>[:STATe] ON OFF</code>
Create or delete diagram area	<code>DISPlay:WINDow<Wnd>:STATe ON OFF</code>
Display trace in diagram area	<code>DISPlay:WINDow<Wnd>:TRACe<WndTr>:FEED</code>

The assignment between traces, channels, and diagram areas is defined via numeric suffixes as illustrated in the following example:

```
CALC4:PAR:SDEF 'Ch4Tr1', 'S11'
```

Create channel 4 (channel suffix 4) and a trace named *Ch4Tr1* to measure the input reflection coefficient S_{11} . The trace is created but not displayed.

```
DISP:WIND2:STAT ON
```

Create diagram area no. 2 (window suffix 2).


```
DISP:WIND2:TRAC9:FEED 'CH4TR1'
```

Display the generated trace (identified by its name *Ch4Tr1*) in diagram area no. 2 (window suffix 2), assigning the trace number 9 (trace suffix 9) to it.

Active Traces in Remote Control

In manual control there is always exactly one active trace, irrespective of the number of channels and traces defined. The *active channel* contains the active trace; see section [Trace Settings](#) in chapter *System Overview*.

In remote control, each channel contains an active trace (unless the channel contains no trace at all), so the notion of *active channel* is meaningless. This principle actually simplifies the remote control command syntax, because it allows the active trace in a particular channel to be referenced by means of the channel suffix. No additional trace identifier is needed; there is no need either to distinguish channel and trace settings using mnemonics or suffixes.

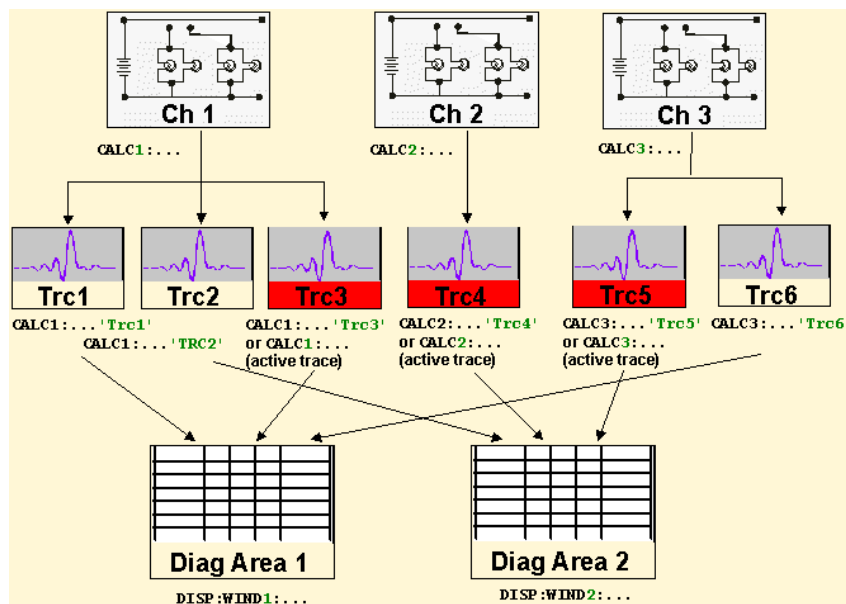

The active traces are handled as follows:

- After a preset (*RST), the analyzer displays a single diagram area with the default trace no. 1 named *Trc1*. The trace is active in manual and in remote control.
- In manual control, a new, added trace automatically becomes the active trace. To select another trace as the active trace, click inside the trace list.
- In remote control, a new trace added via `CALCulate<Ch>:PARAmeter:SDEFine '<trace_name>'`, `'<parameter>'` also becomes the active trace. To select another trace as the active trace, use `(CALCulate<Ch>:PARAmeter:SElect '<trace_name>')`.
- The active traces for manual and remote control may be different.

The following program example illustrates how to create, select and reference traces. It is instructive to observe the analyzer screen in order to check the effect of each step.

*RST

Reset the analyzer, creating channel no. 1 with the default trace *Trc1*. The trace is displayed in diagram area no. 1.

`CALC1:PAR:SDEF 'Trc2', 'S11'; DISP:WIND:TRAC2:FEED 'Trc2'`

Create a new trace named *Trc2*, assigned to channel no. 1 (the suffix 1 after `CALC`, may be omitted), and display the trace. The new trace automatically becomes the active trace for manual and for remote control. To check this, click *Trace – Marker – Marker 1* to create a marker. The marker is assigned to *Trc2*. Delete all markers (*Trace – Marker – All Markers Off*).

`CALC1:MARK ON`

To verify that *Trc2* is also active for remote control, use the channel suffix 1 after `CALC` (may be omitted) to reference the active trace in channel 1 and create a marker *M 1*. The marker is assigned to *Trc2*.

`CALC:PAR:SEL 'Trc1'; CALC1:MARK ON`

Select the old default trace *Trc1* as the active trace for remote control. Create a new marker to verify that *Trc1* is now the active trace in channel 1.



NOTE In the SCPI command description, the numeric suffix `<Ch>` is used for channel settings (it denotes the configured channel), whereas `<Chn>` is used for trace settings (it denotes the active trace in the channel).

Initiating Measurements, Speed Considerations

After a reset the network analyzer measures in continuous mode. The displayed trace shows the result of the last sweep and is continuously updated. This provides a permanent visual control over the measurement and the effect of any analyzer settings.

In remote control, it is advisable to follow a different approach in order use the analyzer's resources to full capacity and gain measurement speed. The following principles can help to optimize a remote control program (see also programming example [Typical Stages of a Measurement](#)):

- Switch off the measurement while configuring your instrument.
- Use a minimum number of suitably positioned sweep points.
- Start a single sweep, observing proper command synchronization, and retrieve your results.
- Ensure that the display is switched off while the analyzer operates in remote mode (`SYSTem:DISPlay:UPDate OFF`, default setting).
- If you have to change several instrument settings between two consecutive sweeps, avoid using `SYSTem:SETTings:UPDate ONCE`, since this mode may delay the measurement.

The following command sequence performs a single sweep in a single channel.

```
*RST; INITiate:CONTInous OFF
```

Activate single sweep mode for all channels (including the channels created later).

```
INITiate:SCOpe SING
```

State that a single sweep will be performed in the active channel only.

```
INITiate2:IMMEDIATE; *WAI
```

Start a single sweep in channel no. 2, wait until the sweep is terminated before proceeding to the next command (see [Command Synchronization](#)).

Addressing Traces and Channels

The analyzer provides a variety of schemes for addressing traces and channels and for querying trace and channel names. The following tables give an overview.

Addressing channels

Method	Commands / Example
Channel number <Ch> as a numeric suffix	<code>CONFigure:CHANnel<Ch>[:STATe] ON</code>
Query all channel names	<code>CONFigure:CHANnel<Ch>:CATalog?</code> (returns the names of all channels; the channel suffix is ignored)
Assign or query channel name of a channel numbered <Ch>	<code>CONFigure:CHANnel<Ch>:NAME 'ABCD'</code> <code>CONFigure:CHANnel<Ch>:NAME?</code> (returns 'ABCD')
Query channel number assigned to a channel named 'ABCD'	<code>CONFigure:CHANnel<Ch>:NAME:ID? 'ABCD'</code> (returns the actual channel number, the channel suffix is ignored)

Addressing traces

Method	Commands / Example
Channel number <Chn> used as a reference	<code>CALCulate<Chn>:MARKer<Mk>[:STATe] ON</code>

Method	Commands / Example
for the active trace in the channel	
Trace name (string variable) used as a reference for the trace	<code>CALCulate<Ch>:PARAmeter:DELeTe '<Trace Name>'</code>
Trace number <Trc> as a numeric suffix (exception!)	<code>CONFigure:TRACe<Trc>:NAME?</code>
Trace number <WndTr> within a particular diagram area <Wnd>	<code>DISPlay:WINDow<Wnd>:TRACe<WndTr>:FEED</code>
Query all trace names	<code>CONFigure:TRACe<Trc>:CATalog?</code> (returns the names of all traces; the trace suffix is ignored)
Assign or query trace name of a trace numbered <Trc>	<code>CONFigure:TRACe<Trc>:NAME '<Trc>'</code> <code>CONFigure:TRACe<Trc>:NAME?</code> (returns '<Trc>')
Query trace number assigned to a trace named 'ABCD'	<code>CONFigure:TRACe<Trc>:NAME:ID? 'ABCD'</code> (returns the actual trace number; the trace suffix is ignored)


Mixed commands

Method	Commands / Example
Query channel name for a trace referenced by its trace name	<code>CONFigure:TRACe<Trc>:CHANnel:NAME? '<Trc>'</code> (returns the channel name for trace '<Trc>'; the trace suffix is ignored)
Query channel number for a trace referenced by its trace name	<code>CONFigure:TRACe<Trc>:CHANnel:NAME:ID? '<Trc>'</code> (returns the actual channel number for trace '<Trc>'; the trace suffix is ignored)

Command Processing

The block diagram below shows how GPIB bus commands are serviced in the instrument.

The individual components work independently and simultaneously. They communicate with each other by means of so-called "messages".

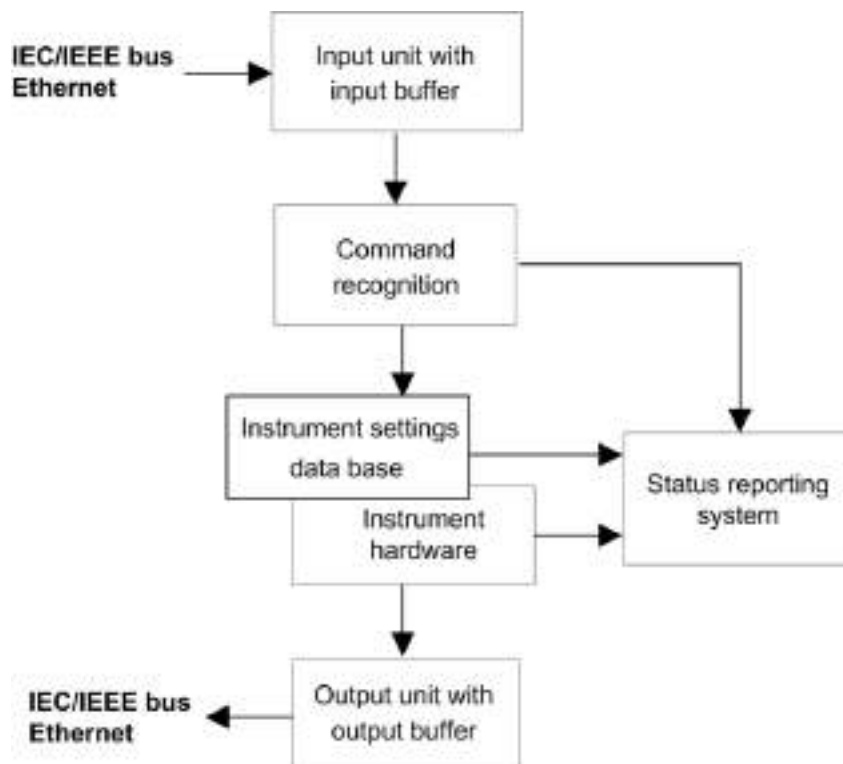

Input Unit

The input unit receives commands character by character from the controller and collects them in the input buffer. The input unit sends a message to the command recognition as soon as the input buffer is full or as soon as it receives a delimiter, <PROGRAM MESSAGE TERMINATOR>, as defined in IEEE 488.2, or the interface message DCL.

If the input buffer is full, the message data traffic is stopped and the data received up to then is processed. Subsequently the traffic is continued. If, however, the buffer is not yet full when receiving the delimiter, the input unit can already receive the next command during command recognition and execution. The receipt of a DCL clears the input buffer and immediately initiates a message to the command recognition.

Command Recognition

The command recognition stage analyzes the data received from the input unit. It proceeds in the order in which it receives the data. Only a DCL is serviced with priority, e.g. a GET (Group Execute Trigger) is only executed after the commands received before. Each recognized command is immediately transferred to the data set but not executed immediately.

The command recognition detects syntax errors in the commands and transfers them to the status reporting system. The rest of a command line after a syntax error is still executed, if possible. After the syntax check, the range of the numerical parameters is checked, if required.

If the command recognition detects a delimiter or a DCL, it also requests the data set to perform the necessary instrument hardware settings. Subsequently it is immediately prepared to process further commands. This means that new commands can already be serviced while the hardware is still being set ("overlapping execution").

Data Base and Instrument Hardware

The expression "instrument hardware" denotes the part of the instrument fulfilling the actual instrument function – signal generation, measurement etc. The controller is not included. The data base manages all the parameters and associated settings required for the instrument hardware.

Setting commands lead to an alteration in the data set. The data set management enters the new values (e.g. frequency) into the data set, however, it only passes them on to the hardware when requested by the command recognition. This can only occur at the end of a command line, therefore the order of the setting commands in the command line is not relevant.

The commands are only checked for their compatibility among each other and with the instrument hardware immediately before they are transmitted to the instrument hardware. If the instrument detects that execution is not possible, an "execution error" is signalled to the status reporting system. All alterations of the data set are cancelled, the instrument hardware is not reset. Due to the delayed checking and hardware setting, however, impermissible instrument states can be set for a short period of time within one command line without this leading to an error message (example: simultaneous activation of a frequency and a power sweep). At the end of the command line, however, a permissible instrument state must have been reached again.

Before passing on the data to the hardware, the settling bit in the `STATus:OPERation` register is set (cf. section [STATus:OPERation Register](#)). The hardware executes the settings and resets the bit again as soon as the new state has settled. This fact can be used to synchronize command servicing.

Queries induce the data set management to send the desired data to the output unit.

Status Reporting System

The status reporting system collects information on the instrument state and makes it available to the output unit on request. The exact structure and function are described in section [Status Reporting System](#).

Output Unit

The output unit collects the information requested by the controller, which it receives from the data set management. It processes it according to the SCPI rules and makes it available in the output buffer. If the information requested is longer, it is made available "in portions" without this being recognized by the controller.

If the instrument is addressed as a talker without the output buffer containing data or awaiting data from the data set management, the output unit sends the error message "Query UNTERMINATED" to the status reporting system. No data is sent on the GPIB bus or via the Ethernet, the controller waits until it has reached its time limit. This behavior is specified by SCPI.

Command Sequence and Command Synchronization

IEEE 488.2 defines a distinction between overlapped and sequential commands:

- A sequential command is one which finishes executing before the next command starts executing. Commands that are processed quickly are usually implemented as sequential commands. The preset and the *Go to Local* key are locked while a sequential command is executed.
- An overlapping command is one which does not automatically finish executing before the next command starts executing. Usually, overlapping commands take longer to process and allow the program to do other tasks while being executed. If overlapping commands do have to be executed

in a defined order, e.g. in order to avoid wrong measurement results, they must be serviced sequentially. This is called synchronization between the controller and the analyzer.

According to section [Data Set and Instrument Hardware](#), setting commands within one command line, even though they may be implemented as sequential commands, are not necessarily serviced in the order in which they have been received. In order to make sure that commands are actually carried out in a certain order, each command must be sent in a separate command line. **Examples:**

Example 1: Commands and queries in one message

The response to a query combined in a program message with commands that affect the queried value is not predictable. Sending

```
:FREQ:STAR 1GHZ;SPAN 100
```

```
:FREQ:STAR?
```

always returns 1000000000 (1 GHz). When:

```
:FREQ:STAR 1GHz;STAR?;SPAN 1000000
```

is sent, however, the result is not specified by SCPI. The result could be the value of `START` before the command was sent since the instrument might defer executing the individual commands until a program message terminator is received. The result could also be 1 GHz if the instrument executes commands as they are received.

As a general rule, send commands and queries in different program messages.

Example 2: Overlapping command with *OPC

The analyzer implements `INITiate[:IMMediate]` as an overlapped command. Assuming that `INITiate[:IMMediate]` takes longer to execute than `*OPC`, sending the command sequence `INIT; *OPC`.

results in initiating a sweep and, after some time, setting the OPC bit in the ESR. Sending the commands: `INIT; *OPC; *CLS`

still initiates a sweep. Since the operation is still pending when the analyzer executes `*CLS`, forcing it into the Operation Complete Command Idle State (OCIS), `*OPC` is effectively skipped. The OPC bit is not set until the analyzer executes another `*OPC` command.



The analyzer provides only one overlapped command, `INITiate<Ch>[:IMMediate]`. What is said below is not relevant for the other (sequential) SCPI commands.



Preventing overlapping execution

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used. For a programming example refer to section [Command Synchronization](#) in Chapter *Programming Examples*.

Command	Action after the hardware has settled	Programming the controller
*WAI	Stops further command processing until all commands sent before *WAI have been executed Note: The GPIB bus handshake is not stopped	Send *WAI directly after the command which should be terminated before the next command is executed.

Command	Action after the hardware has settled	Programming the controller
*OPC?	Stops command processing until 1 is returned, i.e. until the Operation Complete bit has been set in the ESR. This bit indicates that the previous commands have been completed.	Send *OPC? directly after the command which should be terminated before the next command is executed.
*OPC	Sets the operation complete bit in the ESR after all previous commands have been executed.	– Set bit 0 in the ESE – Set bit 5 in the SRE – Wait for service request (SRQ)

Status Reporting System

The status reporting system stores all information on the present operating state of the instrument, and on errors which have occurred. This information is stored in the status registers and in the error queue. Both can be queried via GPIB bus or Ethernet ([STaTus...](#) commands).



Hierarchy of status registers

As shown in the [graphical overview](#), the status information is of hierarchical structure.

- **STB, SRE** The [STatus Byte](#) (STB) register and its associated mask register Service Request Enable (SRE) form the highest level of the status reporting system. The STB provides a rough overview of the instrument status, collecting the information of the lower-level registers.
- **ESR, SCPI registers**
The STB receives its information from the following registers:
 - The [Event Status Register](#) (ESR) with the associated mask register standard event status enable (ESE).
 - The [STaTus:OPeRation](#) and [STaTus:QUEStionable](#) registers which are defined by SCPI and contain detailed information on the instrument.
- **IST, PPE** The [IST](#) flag ("Individual STatus"), like the SRQ, combines the entire instrument status in a single bit. The [PPE](#) is associated to the IST flag. It fulfills an analogous function for the IST flag as the SRE does for the service request.
- **Output buffer** contains the messages the instrument returns to the controller. It is not part of the status reporting system but determines the value of the MAV bit in the STB and thus is represented in the [overview](#).


All status registers have the same [internal structure](#).



The service request enable register SRE can be used as ENABLE part of the STB if the STB is structured according to SCPI. By analogy, the ESE can be used as the ENABLE part of the ESR.


Overview of Status Registers

The status registers of the network analyzer are implemented as shown below.

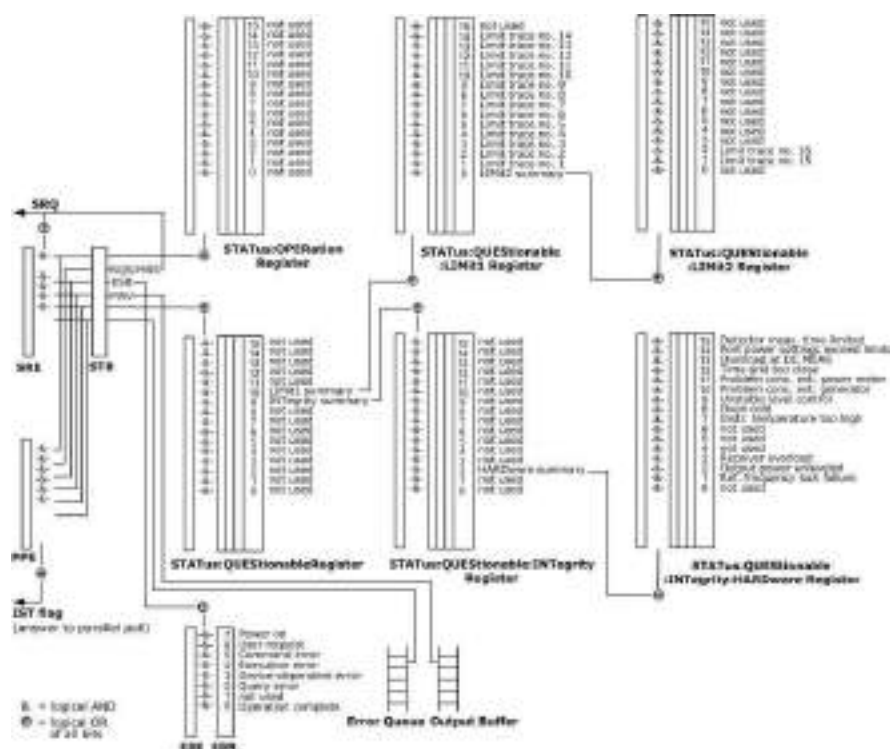

Structure of a SCPI Status Register

Each standard SCPI register consists of 5 parts which each have a width of 16 bits and have different functions. The individual bits are independent of each other, i.e. each hardware status is assigned a bit number which is valid for all five parts. Bit 15 (the most significant bit) is set to zero for all parts. Thus the contents of the register parts can be processed by the controller as positive integer.

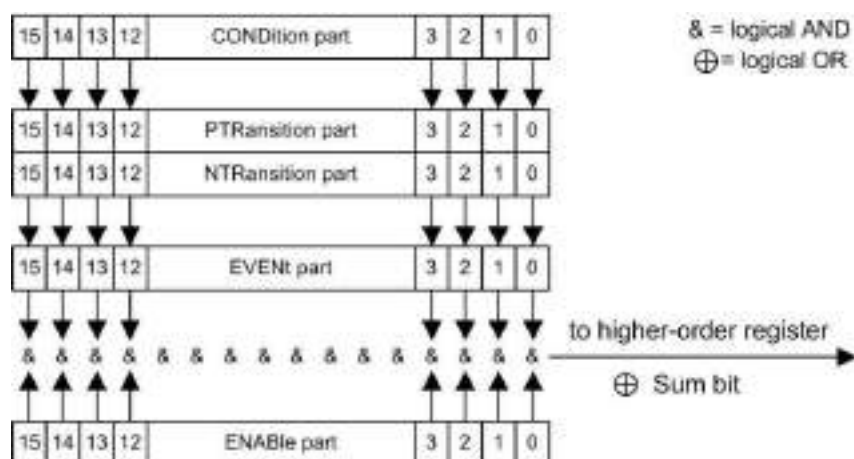

Description of the five status register parts

The five parts of an SCPI register have different properties and function:

- **CONDition**

The CONDition part is permanently overwritten by the hardware or the sum bit of the next lower register. Its contents always reflect the current instrument state.

This register part can only be read, but not overwritten or cleared. Reading the CONDition register is nondestructive.

- **PTRansition**

The two transition register parts define which state transition of the condition part (none, 0 to 1, 1 to 0 or both) is stored in the EVENT part.

The Positive TRansition part acts as a transition filter. When a bit of the CONDition part is changed from 0 to 1, the associated PTR bit decides whether the EVENT bit is set to 1:

- PTR bit =1: the EVENT bit is set.
- PTR bit =0: the EVENT bit is not set.

This status register part can be overwritten and read at will. Reading the PTRansition register is nondestructive.

- **NTRansition**

The Negative TRansition part also acts as a transition filter. When a bit of the CONDition part is changed from 1 to 0, the associated NTR bit decides whether the EVENT bit is set to 1.

NTR bit =1: the EVENT bit is set.

NTR bit =0: the EVENT bit is not set.

This part can be overwritten and read at will. Reading the PTRansition register is nondestructive.

- **EVENT**

The EVENT part indicates whether an event has occurred since the last reading, it is the "memory" of the condition part. It only indicates events passed on by the transition filters. It is permanently updated by the instrument. This part can only be read by the user. Reading the register clears it. This part is often equated with the entire register.

- **ENABLE**

The ENABLE part determines whether the associated EVENT bit contributes to the sum bit (cf. below). Each bit of the EVENT part is ANDed with the associated ENABLE bit (symbol '&'). The results of all logical operations of this part are passed on to the sum bit via an OR function (symbol '+').

- ENAB bit =0: The associated EVENT bit does not contribute to the sum bit.
- ENAB bit =1: If the associated EVENT bit is "1", the sum bit is set to "1" as well.

This part can be overwritten and read by the user at will. Its contents are not affected by reading.

As shown in the [graphical overview](#), the status information is of hierarchical structure.

- **STB, SRE** The register SStatus Byte (STB) defined in IEEE 488.2 and its associated mask register Service Request Enable (SRE) form the highest level of the status reporting system. The STB provides a rough overview of the instrument status, collecting the information of the lower-level registers.

- **ESR, SCPI registers**

The STB receives its information from the following registers:

- The standard IEEE 488.2 [Event Status Register](#) (ESR) with the associated mask register standard event status enable (ESE).
- The [STATus:OPERation](#) and [STATus:QUEStionable](#) registers which are defined by SCPI

and contain detailed information on the instrument.

- *IST, PPE* The **IST** flag ("Individual Status"), like the SRQ, combines the entire instrument status in a single bit. The **PPE** is associated to the IST flag. It fulfills an analogous function for the IST flag as the SRE does for the service request.
- *Output buffer* contains the messages the instrument returns to the controller. It is not part of the status reporting system but determines the value of the MAV bit in the STB and thus is represented in the [overview](#).

The **sum bit** is obtained from the EVENT and ENABLE part for each register. The result is then entered into a bit of the CONDition part of the higher-order register.

The instrument automatically generates the sum bit for each register. Thus an event can lead to a [service request](#) throughout all levels of the hierarchy.

Contents of the Status Registers

The individual status registers are used to report different classes of instrument states or errors. The following status registers belong to the general model described in IEEE 488.2:

- The **Status Byte** (STB) gives a rough overview of the instrument status.
- The **IST flag** combines the entire status information into a single bit that can be queried in a [parallel poll](#).
- The **Event Status Register** (ESR) indicates general instrument states.

The status registers below belong to the device-dependent SCPI register model:

- The **STATUS:OPERation** register contains conditions which are part of the instrument's normal operation.
- The **STATUS:QUESTIONable** register indicates whether the data currently being acquired is of questionable quality.
- The **STATUS:QUESTIONable:LIMit<1|2>** register indicates the result of the limit check.
- The **STATUS:QUESTIONable:INTegrity** register monitors hardware failures of the analyzer.

STB and SRE

The Status Byte (STB) provides a rough overview of the instrument status by collecting the pieces of information of the lower registers. The STB represents the highest level within the SCPI hierarchy. A special feature is that bit 6 acts as the summary bit of the remaining bits of the status byte.



SRE and Service Request

The Status Byte (STB) is linked to the Service Request Enable (SRE) register on a bit-by-bit basis.

- The STB corresponds to the **EVENT** part of an SCPI register, indicating the current instrument state.
- The SRE corresponds to the **ENABLE** part of an SCPI register. If a bit is set in the SRE and the associated bit in the STB changes from 0 to 1, a [Service Request](#) (SRQ) is generated on the GPIB bus.

Bit 6 of the SRE is ignored, because it corresponds to the summary bit of the STB.



Related common commands

The STB is read out using the command **STB?* or a [serial poll](#).

The SRE can be set using command **SRE* and read using **SRE?*.

The bits in the STB are defined as follows:

Bit No.	Meaning
3	QUESTionable status summary bit This bit is set if an EVENT bit is set in the QUESTionable register and the associated ENABLE bit is set to 1. The bit indicates a questionable instrument status, which can be further pinned down by polling the QUESTionable register.
5	ESB bit Sum bit of the event status register. It is set if one of the bits in the event status register is set and enabled in the event status enable register. Setting of this bit implies an error or an event which can be further pinned down by polling the event status register.

IST Flag and PPE

In analogy to the [Service Request](#) (SRQ), the IST flag combines the entire status information in a single bit. It can be queried by means of a [parallel poll](#).

The Parallel Poll Enable (PPE) register determines which bits of the STB contribute to the IST flag. The bits of the STB are ANDed with the corresponding bits of the PPE, with bit 6 being used as well in contrast to the [SRE](#). The IST flag results from the ORing of all results.



Related common commands

The IST flag is queried using the command **IST?*.

The PPE can be set using **PRE* and read using command **PRE?*.

ESR and ESE

The Event Status Register (ESR) indicates general instrument states. It is linked to the Event Status Enable (ESE) register on a bit-by-bit basis.

- The ESR corresponds to the [CONDition](#) part of an SCPI register, indicating the current instrument state.
- The ESE corresponds to the [ENABLE](#) part of an SCPI register. If a bit is set in the ESE and the associated bit in the ESR changes from 0 to 1, the ESB bit in the [STatus Byte](#) is set.



Related common commands

The Event Status Register (ESR) can be queried using **ESR?*.

The Event Status Enable (ESE) register can be set using the command **ESE* and read using **ESE?*.

The bits in the ESR are defined as follows:

Bit No.	Meaning
0	Operation Complete This bit is set on receipt of the command *OPC after all previous commands have been executed.
2	Query Error This bit is set if either the controller wants to read data from the instrument without having sent a query, or if it does not fetch requested data and sends new instructions to the instrument instead. The cause is often a query which is faulty and hence cannot be executed.
3	Device-Dependent Error This bit is set if a device-dependent error occurs. An error message with a number between -300 and -399 or a positive error number, which describes the error in greater detail, is entered into the error queue (see chapter Error Messages).
4	Execution Error This bit is set if a received command is syntactically correct, but cannot be performed for other reasons. An error message with a number between -200 and -300, which describes the error in greater detail, is entered into the error queue (see chapter Error Messages).
5	Command Error This bit is set if a command which is undefined or syntactically incorrect is received. An error message with a number between -100 and -200, which describes the error in greater detail, is entered into the error queue (see chapter Error Messages).
6	User Request This bit is set when the instrument is switched over to manual control or when a user-defined softkey is used (<code>SYSTem:USER:KEY...</code>).
7	Power On (supply voltage on) This bit is set when the instrument is switched on.

STATus:OPERation

The STATus:OPERation register contains conditions which are part of the instrument's normal operation. The analyzer does not use the STATus:OPERation register.

STATus:QUESTionable

The STATus:QUESTionable register indicates whether the acquired data is of questionable quality and monitors hardware failures of the analyzer. It can be queried using the commands `STATus:QUESTionable:CONDition?` or `STATus:QUESTionable[:EVENT]?`

The bits in the STATus:QUESTionable register are defined as follows:

Bit No.	Meaning
9	INTEgrity register summary This bit is set if a bit is set in the STATus:QUESTionable:INTEgrity register and the associated ENABLE bit is set to 1.
10	LIMit register summary This bit is set if a bit is set in the STATus:QUESTionable:LIMit1 register and the associated ENABLE bit is set to 1.

STATUS:QUESTIONable:LIMit1<1|2>

The STATUS:QUESTIONable:LIMit<1|2> registers indicate the result of the limit check. They can be queried using the commands `STATUS:QUESTIONable:LIMit<1|2>:CONDition?` or `STATUS:QUESTIONable:LIMit<1|2>[:EVENT]?` STATUS:QUESTIONable:LIMit1 is also the summary register of the lower-level STATUS:QUESTIONable:LIMit2 register.

The bits in the STATUS:QUESTIONable:LIMit1 register are defined as follows:

Bit No.	Meaning
0	LIMit2 register summary This bit is set if a bit is set in the STATUS:QUESTIONable:LIMit2 register and the associated ENABLE bit is set to 1.
1	Failed limit check for trace no. 1 This bit is set if any point on trace no. 1 fails the limit check.
...	...
14	Failed limit check for trace no. 14 This bit is set if any point on trace no. 14 fails the limit check.

The bits in the STATUS:QUESTIONable:LIMit2 register are defined as follows:

Bit No.	Meaning
0	Not used
1	Failed limit check for trace no. 15 This bit is set if any point on trace no. 15 fails the limit check.
2	Failed limit check for trace no. 16 This bit is set if any point on trace no. 16 fails the limit check.



Numbering of traces

The traces numbers 1 to 16 are assigned as follows:

- Traces assigned to channels with smaller channel numbers have smaller trace numbers.
- Within a channel, the order of traces reflects their creation time: The oldest trace has the smallest, the newest trace has the largest trace number. This is equivalent to the order of traces in the response string of the `CALCulate<Ch>:PARAMeter:CATalog?` query.
- The number of traces monitored cannot exceed 16. If a setup contains more traces, the newest traces are not monitored.

STATUS:QUESTIONable:INTegrity...

The STATUS:QUESTIONable:INTegrity register monitors hardware failures of the analyzer. It can be queried using the commands `STATUS:QUESTIONable:INTegrity:CONDition?` or `STATUS:QUESTIONable:INTegrity[:EVENT]?` STATUS:QUESTIONable:INTegrity is also the summary register of the lower-level STATUS:QUESTIONable:INTegrity:HARDware register.



Refer to the [Error Messages](#) section for a detailed description of hardware errors including possible remedies.

The bits in the STATUS:QUESTIONable:INTEgrity register are defined as follows:

Bit No.	Meaning
2	HARDware register summary This bit is set if a bit is set in the STATUS:QUESTIONable:INTEgrity:HARDware register and the associated ENABLE bit is set to 1.

The STATUS:QUESTIONable:INTEgrity:HARDware register can be queried using the commands `STATUS:QUESTIONable:INTEgrity:HARDware:CONDition?` or `STATUS:QUESTIONable:INTEgrity:HARDware[:EVENT]?`

The bits in the STATUS:QUESTIONable:INTEgrity:HARDware register are defined as follows:

Bit No.	Meaning
0	Not used
1	Reference frequency lock failure With external reference signal (System – External Reference active) or option ZVAB-B4 (oven quartz), the reference oscillator is phase locked to a 10 MHz signal. This bit is set if this phase locked loop (PLL) fails. For external reference: check frequency and level of the supplied reference signal.
2	Output power unlevelled This bit is set if the level control at one of the ports is unsettled (target power was not reached) or unstable (during measurement), possibly due to an external disturbing signal or to restrictive ALC settings. Check the ALC Config ; check external components.
3	Receiver overload protection tripped This bit is set if the analyzer detects an excessive input level at one of the ports. If this condition persists, all internal and external generators are switched off. Reduce RF input level at the port. Check amplifiers in the external test setup, then switch on the internal source using OUTPut ON .
...	Not used
7	Instrument temperature is too high This bit is set if the analyzer detects that the instrument temperature is too high. Reduce ambient temperature, keep ventilation holes of the casing unobstructed.
8	Oven cold This bit is set if the oven for the optional oven quartz (OCXO, option ZVAB-B4) is not at its operating temperature. Wait until the oven has been heated up.
9	Unstable level control This bit is set if the analyzer detects the ALC to be instable, because of invalid ALC settings. Check the ALC Config .
10	Problem concerning external generator This bit is set if an external generator has been configured but cannot be controlled or provides error messages. Check whether the generator is properly connected and switched on. Check the GPIB address; exclude address conflicts when using several external generators or other equipment.

Bit No.	Meaning
11	Problem concerning external power meter This bit is set if an external power meter has been configured but cannot be controlled or provides error messages. Check whether the power meter is properly connected and switched on. Check the GPIB address; exclude address conflicts when using several external power meters or other equipment.
12	Time grid too close This bit is set if the sweep points for a time sweep are too close, so that the analyzer cannot process the measurement data until the next sweep point starts. Increase stop time, reduce no. of points, increase IF bandwidth. If possible reduce number of partial measurements, e.g. by restricting the number of ports measured.
13	Overload at DC MEAS This bit is set if the input voltage at one of the DC input connectors on the rear panel is too high. Reduce input voltage.
14	Power settings exceed hardware limits This bit is set if the source power at one of the test ports is too high or too low. Reduce or increase the source power.
15	Detector meas time has been internally limited This bit is set if the selected measurement time for a detector (observation time) is too long. If desired, reduce the measurement time or select a smaller IF bandwidth.

Application of the Status Reporting System

The purpose of the status reporting system is to monitor the status of one or several devices in a measuring system. To do this and react appropriately, the controller must receive and evaluate the information of all devices. The following standard methods are used:

- [Service request](#) (SRQ) initiated by the measuring device
- [Serial poll](#) of all devices in the bus system, initiated by the controller in order to find out who sent a SRQ and why
- [Parallel poll](#) of all devices
- Query of a specific [instrument status](#) by means of commands
- Query of the [error queue](#)

Service Request

The measuring device can send a service request (SRQ) to the controller. Usually this service request causes an interrupt, to which the control program can react appropriately.



Initiating an SRQ

As shown in the [graphical overview](#), an SRQ is initiated if one or several of bits 2, 3, 4, 5 or 7 of the status byte are set and enabled in the SRE. Each of these bits summarizes the information of a further register, the error queue or the output buffer.

The ENABLE parts of the status registers can be set such that arbitrary bits in an arbitrary status register initiate an SRQ. To use the possibilities of the service request effectively, all bits in the enable registers SRE and ESE should be set to "1".

Examples:

- **Use *OPC to generate an SRQ**

1. Set bit 0 in the ESE (Operation Complete).
2. Set bit 5 in the SRE (ESB).
3. Insert *OPC in the command sequence (e.g. at the end of a sweep).

As soon as all commands preceding *OPC have been completed, the instrument generates an SRQ.

- **Generate an SRQ when a limit is exceeded**

1. Set bit 3 in the SRE (summary bit of the STATus:QUEStionable register, set after [STATus:PRESet](#))
2. Set bit 10 in the STATus:QUEStionable:ENABle register (summary bit of the STATus:QUEStionable:LIMit1 register)
3. Set bit 1 in the STATus:QUEStionable:LIMit1:ENABle register

The analyzer generates an SRQ when the event associated with bit 1 of the STATus:QUEStionable:LIMit1:ENABle register occurs, i.e. when any point on the first trace fails the limit check.

- **Find out which event caused an SRQ**

The procedure to find out which event caused an SRQ is analogous to the procedure to generate an SRQ:

1. STB? (query the contents of the status byte in decimal form)

If bit 3 (QUEStionable summary bit) is set, then:

2. STAT:QUES:EVENT? (query STATus:QUEStionable register)

If bit 10 (QUEStionable:LIMit1 summary bit) is set, then:

3. Query STAT:QUES:LIMit1:EVENT? (query STATus:QUEStionable:LIMit1 register)

If bit 1 is set, then the first trace failed the limit check.



The SRQ is the only possibility for the instrument to become active on its own. Each controller program should set the instrument such that a service request is initiated in the case of malfunction. The program should react appropriately to the service request.

Serial Poll

In a serial poll, the controller queries the SStatus Bytes of the devices in the bus system one after another. The query is made via interface messages, so it is faster than a poll by means of *STB?.



Serial poll procedure

The serial poll method is defined in IEEE 488.1 and used to be the only standard possibility for different instruments to poll the status byte. The method also works for instruments which do not adhere to SCPI or IEEE 488.2.

The Visual BASIC command for executing a serial poll is "IBRSP()".

The serial poll is mainly used to obtain a fast overview of the state of several instruments connected to the controller.

Parallel Poll

In a parallel poll, up to eight instruments are simultaneously requested by the controller by means of a single command to transmit 1 bit of information each on the data lines, i.e., to set the data line allocated to each instrument to a logical "0" or "1".



Parallel poll procedure

In addition to the SRE register, which determines the conditions under which an SRQ is generated, there is a [Parallel Poll Enable](#) register (PPE). This register is ANDed with the STB bit by bit, considering bit 6 as well. The results are ORed, the result is possibly inverted and then sent as a response to the parallel poll of the controller. The result can also be queried without parallel poll by means of the command `"*IST?"`.

The instrument first has to be set for the parallel poll using the Visual BASIC command `"IBPPC()"`. This command allocates a data line to the instrument and determines whether the response is to be inverted. The parallel poll itself is executed using `"IBRPP()"`.

The parallel poll method is mainly used to find out quickly which one of the instruments connected to the controller has sent a service request. To this effect, SRE and PPE must be set to the same value.

Query of an Instrument Status

Each part of any status register can be read by means of queries. There are two types of commands:

- The [common commands](#) `*ESR?`, `*IDN?`, `*IST?`, `*STB?` query the higher-level registers.
- The commands of the [STATus](#) system query the SCPI registers (STATus:QUESTIONable...)

All queries return a decimal number which represents the bit pattern of the status register. This number is evaluated by the controller program.



Decimal representation of a bit pattern

The STB and ESR registers contain 8 bits, the SCPI registers 16 bits. The contents of a status register is keyed and transferred as a single decimal number. To make this possible, each bit is assigned a weighted value. The decimal number is calculated as the sum of the weighted values of all bits in the register that are set to 1.

Bits	0	1	2	3	4	5	6	7	...
Weight	1	2	4	8	16	32	64	128	...

Example: The decimal value $40 = 32 + 8$ indicates that bits no. 3 and 5 in the status register (e.g. the QUESTIONable status summary bit and the ESB bit in the [STatus Byte](#)) are set.

Queries are usually used after an SRQ in order to obtain more detailed information on its cause.

Error Queue

Each error state in the instrument leads to an entry in the error queue. The entries of the error queue are detailed plain text error messages that can be looked up in the [Error Log](#) or queried via remote control using `SYSTem:ERRor[:NEXT]?` or `SYSTem:ERRor:ALL?`. Each call of `SYSTem:ERRor[:NEXT]?` provides one entry from the error queue. If no error messages are stored there any more, the instrument responds with 0, "No error".

The error queue should be queried after every SRQ in the controller program as the entries describe the cause of an error more precisely than the status registers. Especially in the test phase of a controller program the error queue should be queried regularly since faulty commands from the controller to the instrument are recorded there as well.

Reset Values of the Status Reporting System

The table below indicates the effects of various commands upon the status reporting system of the analyzer.

Event	Switching on supply voltage Power-On-Status-Clear		DCL,SDC(Device Clear, Selected Device Clear)	*RST or SYSTem:PRESet	STATus:PRESet	*CLS
Effect	0	1				
Clear STB,ESR		yes				yes
Clear SRE,ESE		yes				
Clear PPE		yes				
Clear EVENT parts of the registers		yes				yes
Clear ENABLE parts of all OPERation-and QUESTionable registers, Fill ENABLE parts of all other registers with "1".		yes			yes	
Fill PTRansition parts with „1“ Clear NTRansition parts		yes			yes	
Clear error queue	yes	yes				yes
Clear output buffer	yes	yes	yes	1)	1)	1)
Clear command processing and input buffer	yes	yes	yes			

1) Every command being the first in a command line, i.e. immediately following a <PROGRAM MESSAGE TERMINATOR> clears the output buffer.

7 Command Reference

This chapter lists all common commands and SCPI commands implemented by the analyzer.

Special Terms and Notation

This section explains the meaning of special syntax elements used in the SCPI command reference sections. A general description of the SCPI command syntax can be found in section [SCPI Command Structure and Syntax](#) in Chapter *Remote Control*.



Compatibility with ZVR and other instruments

The SCPI command set for the R&S ZVA vector network analyzer has been designed for compatibility with older R&S network analyzers of the ZVR type. A special class of commands, marked with the symbol **ZVR** ✓, has been implemented primarily for compatibility reasons. Use these commands if you want to maintain compatibility with ZVR analyzers. If you want to make full use of the ZVA features and don't need ZVR compatibility, you should use the generalized, R&S ZVA-specific commands. A link to a generalized command is provided in the description of each ZVR-specific command. Similar considerations also hold for other commands that have been "implemented for compatibility reasons".

- **Information in the command tables**

All commands are described according to the same scheme. The following information is provided:

1. Complete command syntax and parameter list
2. Description of the command and its relationship with other commands
3. List and description of the parameters with their numerical ranges, default values and default units
4. SCPI conformance information, supported command types (setting command, query)
5. Program example

- **Order of commands**

The commands are arranged in alphabetical order. SCPI systems or subsystems are arranged in one topic.

- **Parameters**

Many commands are supplemented by a parameter or a list of parameters. Parameters either provide alternative options (setting a or setting b or setting c ..., see special character "|"), or they form a list separated by commas (setting x,y).

1. **<Par_Name>** In the command tables and lists, parameters are generally described by a name (literal) written in angle brackets (<>). This literal merely serves as a parameters description; in an application program it must be replaced by one of the possible settings reported in the detailed parameter description.

Example: CONTrol:AUXiliary:C[:DATA] <numeric_value>
with <numeric_value> = 0 to 15
possible command syntax: CONT:AUX:C 1

2. **NAN** (Not A Number) is generally used to represent missing data, e.g. if a portion of a trace has not been acquired yet. It is also returned after invalid mathematical operations

such as division by zero. As defined in the SCPI standard, NAN is represented as 9.91 E 37.

3. **INV** (invalid) is returned e.g. if a limit check is performed without defining the appropriate tolerance values.

- **Upper/lower case**

Upper/lower case characters characterize the long and short form of the mnemonics in a command. The short form consists of all upper-case characters, the long form of all upper case plus all lower case characters. On the ZVA, either the short form or the long form are allowed; mixed forms will generally not be recognized. The instrument itself does not distinguish upper case and lower case characters.

- **Special characters**

1. **|** A vertical stroke in the parameter list characterizes alternative parameter settings. Only one of the parameters separated by **|** must be selected.

Example: The following command has two alternative settings:

```
FORMat[:DATA] ASCii | REAL
```

2. **[]** Key words in square brackets can be omitted when composing the command header (see [SCPI Command Structure and Syntax](#)). The complete command must be recognized by the instrument for reasons of compatibility with the SCPI standard. Parameters in square brackets are optional as well. They may be used in some application contexts, omitted in others.

3. **{ }** Braces or curly brackets enclose one or more parameters that may be included zero or more times.

- **Numeric suffixes**

Symbols in angular brackets (**<Ch>**, **<Chn>**, **<Mk>**...) denote numeric suffixes. Numeric suffixes are replaced by integer numbers to distinguish various items of the same type. The analyzer provides numeric suffixes for channels, traces, ports, markers etc. If unspecified, a numeric suffix is replaced by 1.

The marker suffix must be in the range between 1 and 10, the number of ports depends on the analyzer model. No restrictions apply to channel, trace, and diagram area suffixes.

In remote control, one active trace can be selected for each channel; see [Active Traces in Remote Control](#). This concept simplifies the remote control command syntax, because it allows the active trace in a particular channel to be referenced by means of the channel suffix. To keep the syntax transparent, **<Ch>** is used for channel settings (it denotes the configured channel), whereas **<Chn>** is used for trace settings (it denotes the active trace in the channel).

Common Commands

Common commands are described in the IEEE 488.2 (IEC 625-2) standard. These commands have the same effect on different devices. The headers of these commands consist of "*" followed by three letters. Many common commands are related to the [status reporting system](#).

Command	Parameters	Description
*CLS		CLear Status, no query Sets the status byte (STB), the standard event register (ESR) and the EVENT -part of the QUESTIONable and the OPERATION registers to zero. The command does not alter the mask and transition parts of the registers. It clears the output buffer and the tooltip for remote error messages .
*ESE	0...255	Event Status Enable

Command	Parameters	Description
		Sets the event status enable register to the value indicated. The query *ESE? returns the contents of the event status enable register in decimal form.
*ESR?		Event Status Read; query only Returns the contents of the event status register in decimal form (0 to 255) and subsequently sets the register to zero.
*IDN?		IDeNtification query; query only Returns the instrument identification. The response is of the form "Rohde&Schwarz,ZVA8-4Port,12345,0.10.1.23", where ZVxx-nPort is the analyzer type 12345 is the serial number of the analyzer 0.10.1.23 is the firmware version number. The ID string can be changed in the System Config dialog.
*IST?		Individual SStatus query; query only Returns the contents of the IST flag in decimal form (0 1). The IST-flag is the status bit which is sent during a parallel poll .
*OPC		OPeration Complete Sets bit 0 in the event status register when all preceding commands have been executed. This bit can be used to initiate a service request. The query form writes a "1" into the output buffer as soon as all preceding commands have been executed. This is used for command synchronization .
*OPT?		OPTion identification query; query only Queries the options included in the instrument and returns a list of the options installed. The response consists of arbitrary ASCII response data according to IEEE 488.2. The options are returned at fixed positions in a comma-separated string. A zero is returned for options that are not installed.
*PCB	0...30	Pass Control Back; no query Indicates the controller address to which GPIB bus control is returned after termination of the triggered action.
*PRE	0...255	Parallel poll Register Enable Sets parallel poll enable register to the value indicated. The query *PRE? returns the contents of the parallel poll enable register in decimal form.
*PSC	0 1	Power on Status Clear Determines whether the contents of the ENABLE registers is maintained or reset when the analyzer is switched on. *PSC = 0 causes the contents of the status registers to be maintained. Thus a service request can be triggered on switching on in the case of a corresponding configuration of status registers ESE and SRE. *PSC ≠ 0 resets the registers.
*RST		ReSeT; no query Sets the instrument to a defined default status by closing all open setups and creating a single setup "Set1" with factory-defined or user-defined default settings (see PRESet:USER[:STATe]).
*SRE	0...255	Service Request Enable Sets the service request enable register to the value indicated. Bit 6 (MSS mask bit) remains 0. This command determines under which conditions a service request is triggered. The query *SRE? returns the contents of the service request enable register in decimal form. Bit 6 is always 0.
*STB?		SStatus Byte query; query only Reads the contents of the status byte in decimal form.
*TRG		TRiGger; no query Triggers all actions waiting for a trigger event. In particular *TRG generates a manual trigger signal (Manual Trigger). This common command complements the commands of the TRiGger subsystem.
*TST?		self TeST query; query only Triggers selftests of the instrument and returns an error code in decimal form.
*WAI		WAI to continue; no query Prevents servicing of the subsequent commands until all preceding commands have been executed and all signals have settled (see also command synchronization and *OPC).

SCPI Command Reference

ABORt...

This subsystem resets the trigger system and places all trigger sequences in the IDLE state. Any actions related to the trigger system that are in progress, such as a sweep or acquiring a measurement, shall also be aborted as quickly as possible.

ABORt

Aborts a running measurement and resets the trigger system.

In continuous sweep mode (`INITiate<Ch>:CONTinuous ON`) the ZVA automatically starts a new sweep.

Parameters	—
SCPI, Command Types	Confirmed, no query.
Example:	<pre>INIT:CONT OFF</pre> Set the analyzer to "Single Sweep" mode. <pre>INIT:IMM</pre> Start a new single sweep sequence. <pre>ABORt</pre> Abort the running measurement. <pre>INIT:IMM</pre> Initiate new sweep ("Restart").

CALCulate

CALCulate<Chn>:CLIMits...

This subsystem controls the composite limit check.

CALCulate<Chn>:CLIMits:FAIL?

Returns a 0 or 1, to indicate whether or not a global, composite limit check on several traces has failed.



In remote control, the limit check result is calculated once at the end of each sweep. If the limit lines are changed, a new sweep is required to obtain updated limit check results. In single sweep mode (`INITiate<Ch>:CONTinuous OFF`), the new sweep must be started explicitly using `INITiate<Ch>[:IMMEDIATE]:SCOPE ALL | SINGLE`. This behavior is different from manual control

where a changed limit line can directly affect the pass/fail result of the displayed trace.

<Chn>	Channel number used to identify the active trace. This suffix is not relevant because the command provides a summary of all individual limit fails.
Response	0 1 - 0 represents pass for all individual limit checks (also returned if no limit check is active at all), 1 means that the limit checks for one or more traces failed.
*RST value	0
SCPI, Command Types	Device-specific, query only.
Example:	<pre>*RST; CALC:LIM:CONT 1 GHZ, 2 GHZ</pre> Define an upper limit line segment in the stimulus range between 1 GHz and 2 GHz, using default response values. <pre>CALC:LIM:STAT ON; FAIL?</pre> Switch the limit check on and query the result. <pre>CALC:CLIM:FAIL?</pre> Query the result for the composite limit check. As only one trace is tested, the response should be equal to the previous response..

CALCulate<Chn>:DATA...

This subsystem provides access to the results of a measurement.

 *The trace data is transferred in either ASCII or block data (REAL) format, depending on the [FORMat\[:DATA\]](#) setting. If the block data format is used, it is recommended to select EOI as receive terminator ([SYSTem:COMMunicate:GPIB\[:SELF\]:RTErminator EOI](#)).*

CALCulate<Chn>:DATA SDATa, <data>

Reads the current response values of the active data trace, reads or writes a memory trace, and reads or writes error terms.

<Chn>	Channel number used to identify the active trace. If unspecified the numeric suffix is set to 1.
Parameters	See list of parameters below.
Range [def. unit]	The data format is parameter-dependent; see below. The unit is the default unit of the measured parameter; see CALCulate<Ch>:PARameter:SDEFine .
*RST value	–
<data>	Unformatted trace data in ASCII or block data format, depending on FORMat[:DATA] setting. This parameter is only used for writing memory traces; see example 2 below.
SCPI, Command Types	Confirmed, command (for memory traces or error terms) or query.

Example 1:

```
*RST; SWE:POIN 20
```

Create a trace with 20 sweep points, making the created trace the active trace of channel 1 (omitted optional mnemonic `SENSe1`).

```
CALC:DATA? FDAT
```

Query the 20 response values of the created trace. In the `FDATa` setting, 20 comma-separated ASCII values are returned.

```
CALC:DATA:STIM?
```

Query the 20 stimulus values of the created trace. 20 comma-separated ASCII values are returned.

```
CALC2:PAR:SDEF 'Trc2', 'S11'
```

Create a second trace in a new channel no. 2.

```
CALC:DATA:ALL? FDAT
```

Query the response values of all traces. 40 comma-separated ASCII values are returned.

**Example 2:
Write memory
trace**

```
*RST; SWE:POIN 3
```

Create a data trace 'Trc1' with 3 sweep points, making the created trace the active trace of channel 1 (omitted optional mnemonic `SENSe1`).

```
TRAC:COPY 'MemTrc1','Trc1'; :CALC:PAR:SEL 'MemTrc1'
```

Copy the data trace to a memory trace and select the memory trace as an active trace.

```
CALC:DATA SDAT, 1,2, 3,4, 5,6
```

Write numbers (1,2), (3,4), (5,6) to the memory trace.

```
CALC:DATA? SDAT
```

Query the memory trace. The response is 1, 2, 3, 4, 5, 6.

```
FORM REAL,32
```

Change the data format to 4-byte block data.

```
CALC:DATA SDAT, #224123456789012345678901234
```

Write 24 bytes (= 4 * 2 * 3 bytes) of data to the memory trace.

The following parameters are related to trace data (see also [Data Flow](#) diagram):

FDATa	Formatted trace data, according to the selected trace format (<code>CALCulate<Chn>:FORMat</code>). 1 value per trace point for Cartesian diagrams, 2 values for polar diagrams.
SDATa	Unformatted trace data: Real and imaginary part of each measurement point. 2 values per trace point irrespective of the selected trace format. The trace mathematics is not taken into account. Wave quantities are returned as voltages.
MDATa	Unformatted trace data (see <code>SDATa</code>) after evaluation of the trace mathematics.
TSData	Raw measured values in pulse profile mode, only available for wave quantities and if pulse profile mode is active. The values correspond to the real output values of the A/D converter; acquired at a fixed sampling rate of 1/12.5 ns. The number of values in the returned array is not correlated with the number of sweep points; it is equal to the <i>Optimum No of Points</i> plus a few values at the beginning which the analyzer acquires during the settling time of the IF filter. See also Show Pulse Profile Settings .

The following parameters denote the error terms generated during a calibration:

Error Term	Description	Receive Ports (S-parameter)
SCORr1, ... SCORr12	2-port error terms; see [SENSe<Ch>:]CORRection:DATA (ZVR ☒) .	1 and 2 (S11, S12, S21, S22)
SCORr13	Directivity	3 (S33)
SCORr14	Source match	3 (S33)
SCORr15	Reflection tracking	3 (S33)
SCORr16	Isolation	3 (S31)
SCORr17	Load match	3 (S31)
SCORr18	Transmission tracking	3 (S13)
SCORr19	Isolation	1 (S13)
SCORr20	Load match	1 (S13)
SCORr21	Transmission tracking	1 (S13)
SCORr22	Isolation	3 (S32)
SCORr23	Load match	3 (S32)
SCORr24	Transmission tracking	3 (S32)
SCORr25	Isolation	2 (S23)
SCORr26	Load match	2 (S23)
SCORr27	Transmission tracking	2 (S23)



The error terms are channel-specific; they apply to the active calibration of channel no. <Chn> or to the factory calibration (if no channel calibration is active). For the factory calibration, the query form is allowed only (no change of factory calibration data).



Use the generalized command [\[SENSe<Ch>:\]CORRection:CDATa](#) to read or write error terms for arbitrary analyzer ports. For a programming example refer to [Saving and Recalling Error Terms](#).

CALCulate<Chn>:DATA:ALL? FDATA | SDATa | MDATa

Reads the current response values of all data and memory traces of the current test setup.

<Chn> Channel number used to identify the active trace. This suffix is ignored, the commands returns all traces.

Parameters Output format for the S-parameter data, see [CALCulate<Chn>:DATA](#).

*RST value –

SCPI, Command Types Device-specific, query only.

Example: See [CALCulate<Chn>:DATA](#)

CALCulate<Ch>:DATA:CALL? FDATA | SDATa | MDATa

Reads the current response values of all S-parameter data traces in channel no. <Ch>. If a full n-port

system error correction (TOSM, TOM, TRL ...) is active in the referenced channel, the command reads the full $n \times n$ S-matrix of the calibrated ports (there is no need to create or display the S-parameter traces). Use `CALCulate<Ch>:DATA:CALL:CATalog?` to query the available traces.

<Ch>	Channel number.
Parameters	Output format for the S-parameter data, see <code>CALCulate<Chn>:DATA</code> .
*RST value	–
SCPI, Command Types	Device-specific, query only.
Example:	Suppose that a TOSM calibration for ports 1 and 3 is active in channel no. 1. <pre>:CALCulate:DATA:CALL:CATalog?</pre> Query the traces available for <code>CALCulate<Ch>:DATA:CALL?</code>. The response is 'S11,S13,S31,S33' <pre>CALCulate:DATA:CALL? SDATa</pre> Return the complex response values of all traces. The traces in the catalog list are read one after another: The response array contains n (number of points) pairs of real and imaginary values for S_{11}, followed by n pairs of values for S_{13}, S_{31}, and S_{33}.

`CALCulate<Ch>:DATA:CALL:CATalog?`

Returns all traces which are available for `CALCulate<Ch>:DATA:CALL?` in channel no. `<Ch>`.

<Ch>	Channel number.
Response	String parameters with all S-parameter traces in the current channel or in the active system error correction; see example.
*RST value	–
SCPI, Command Types	Device-specific, query only.
Example:	See <code>CALCulate:DATA:CALL?</code>

`CALCulate<Chn>:DATA:DALL? FDATA | SDATa | MDATa`

Reads the current response values of all data traces of the current test setup. Use `CALCulate<Ch>:DATA:ALL?` to query data traces and memory traces.

<Chn>	Channel number used to identify the active trace. This suffix is ignored, the commands returns all data traces.
Parameters	Output format for the S-parameter data, see <code>CALCulate<Chn>:DATA</code> .
*RST value	–
SCPI, Command Types	Device-specific, query only.

Example:Analogous to CALCulate<Chn>:DATA:ALL?; see [CALCulate<Chn>:DATA](#).**CALCulate<Ch>:DATA:SGROUP? FDATA | SDATA | MDATA**

Reads the current response values of all S-parameters associated to a group of logical ports (S-parameter group). The S-parameter group must be created before using

[CALCulate<Ch>:PARAMeter:DEFine:SGROUP](#).

<Ch>	Channel number of the previously defined S-parameter group.
Parameters	Output format for the S-parameter data, see CALCulate<Chn>:DATA .
*RST value	–
SCPI, Command Types	Device-specific, query only. The order of the returned S-parameters within the S-parameter group is fixed; see example.

Example:See [CALCulate<Ch>:PARAMeter:DEFine:SGROUP](#)**CALCulate<Chn>:DATA:NSWEEP:COUNT?**

Reads the number of completed sweeps in single sweep mode ([INITiate<Ch>:CONTinuous OFF](#)). The trace can be any of the traces acquired during the single sweep cycle.

<Chn>	Channel number used to identify the active trace.
Response	Number of last completed sweep.
Range [def. unit]	1 to sweep count defined via [SENSe<Ch>:]SWEEP:COUNT [-]
*RST value	–
SCPI, Command Types	Device-specific, query only

Example (see also [Sweep History](#)):See [CALCulate<Chn>:DATA:NSWEEP:FIRST?](#)**CALCulate<Chn>:DATA:NSWEEP:FIRST? SDATA, <Forward_Count>[, <Forward_Count_End>**

Reads the response values of a trace or a consecutive group of traces acquired in single sweep mode ([INITiate<Ch>:CONTinuous OFF](#)). The trace can be any of the traces acquired during the single sweep cycle.

<Chn>	Channel number used to identify the active trace.
SDATA	Read unformatted sweep data (fixed parameter): Returns the real and imaginary part of each measurement point (2 values per trace point irrespective of the selected trace format). Wave quantities are returned as voltages.
<Forward_Count>	Number of first sweep to be read. 1 denotes the first sweep acquired, 2

Range [def. unit]	denotes the second and so forth. 1 to sweep count defined via <code>[SENSe<Ch>:]SWEep:COUNT [-]</code>
*RST value	–
<Forward_Count_End>	Number of last sweep to be read. If this parameter is omitted, it is implicitly set to <Forward_Count> (a single sweep is read).
Range [def. unit]	<Forward_Count> to sweep count defined via <code>[SENSe<Ch>:]SWEep:COUNT [-]</code>
*RST value	–
SCPI, Command Types	Device-specific, query only
Example (see also Sweep History):	<pre>SWE:COUN 10</pre> Define the number of sweeps (10) to be measured in single sweep mode. <pre>INIT:CONT OFF; :INIT;</pre> Activate single sweep mode and start a single sweep sequence in channel no. 1. No synchronization is necessary. <pre>if (CALC:DATA:NSW:COUN? > 4) CALC:DATA:NSW:FIRS? SDAT, 5</pre> Wait until 5 sweeps have been measured, then query the results of the 5th sweep.

CALCulate<Chn>:DATA:NSWeep[:LAST]? SDATa, <Reverse_Count>

Reads the response values of a trace acquired in single sweep mode (`INITiate<Ch>:CONTinuous OFF`). The trace can be any of the traces acquired during the single sweep cycle.



Ensure that the single sweep is terminated before using this command, otherwise the results of the trace count will be unpredictable. See example below. Alternatively, use the `CALCulate<Chn>:DATA:NSWeep:FIRSt?` command.

<Chn>	Channel number used to identify the active trace.
SDATa	Read unformatted sweep data (fixed parameter): Returns the real and imaginary part of each measurement point (2 values per trace point irrespective of the selected trace format). Wave quantities are returned as voltages.
<Reverse_Count>	Number of sweep to be read. 1 denotes the last sweep acquired, 2 denotes the second-last and so forth.
Range [def. unit]	1 to sweep count defined via <code>[SENSe<Ch>:]SWEep:COUNT [-]</code>
*RST value	–
SCPI, Command Types	Device-specific, query only
Example (see also Sweep History):	<pre>SWE:COUN 10</pre> Define the number of sweeps (10) to be measured in single sweep mode. <pre>INIT:CONT OFF; :INIT; *OPC?</pre> Activate single sweep mode and start a single sweep sequence in channel

no. 1. Wait until the single sweep sequence is complete.

```
CALC:DATA:NSW? SDAT, 3
```

Query the results of the 8th sweep.

CALCulate<Chn>:DATA:STIMulus?

Reads the stimulus values of the active data or memory trace.

<Chn>	Channel number used to identify the active trace.
Parameters	–
Range [def. unit]	The data is transferred in the data format defined via FORMat [:DATA] . The unit is the default unit of the sweep variable (Hz or dBm or s).
*RST value	–
SCPI, Command Types	Device-specific, query only
Example:	See CALCulate<Chn>:DATA?

CALCulate<Chn>:DLINe...

This subsystem controls the horizontal line used to mark and retrieve response values (display line).

CALCulate<Chn>:DLINe <numeric_value>

Defines the position (response value) of the horizontal line.

<Chn>	Channel number used to identify the active trace. If unspecified the numeric suffix is set to 1.
Parameters	See list of parameters below.
Range [def. unit]	–200 dB to +200 dB [dB]
*RST value	0 dB
SCPI, Command Types	Device-specific, command or query.
Example:	<pre>*RST; :CALC:DLIN 10</pre> Define the position of the horizontal line in the default dB Mag diagram at +10 dBm. <pre>CALC:DLIN:STAT ON</pre> Display the defined horizontal line.

CALCulate<Chn>:DLINe:STATe <Boolean>

Switches the horizontal line on or off.

<Chn>	Channel number used to identify the active trace.
<Boolean>	ON OFF - horizontal line on or off
*RST value	OFF
SCPI, Command Types	Device-specific, command or query.

Example: See `CALC:DLIN`.

CALCulate<Chn>:FILTer[:GATE]...

This subsystem defines the properties of the time gate which is used to optimize the time domain response (with option ZVAB-K2, *Time Domain*).

CALCulate<Chn>:FILTer[:GATE]:TIME:CENTer <numeric_value>

Defines the center time of the time gate.

<Chn>	Channel number used to identify the active trace.
<numeric_value>	Center time of the time gate
Range [def. unit]	-99.8999999 s to +99.8999999 s. The increment (parameters UP or DOWN) is 0.1 ns. [s]
*RST value	1.5E-009 s
SCPI, Command Types	Confirmed, command or query

Example: `*RST; :CALC:TRAN:TIME:STAT ON; :CALC:FILT:TIME:STAT ON`
Reset the instrument and enable the time domain representation and the time gate.

`CALC:FILT:TIME:CENT 0; SPAN 5ns`

set the center time to 0 ns and the time span to 5 ns.

CALCulate<Chn>:FILTer[:GATE]:TIME:DCHebyshev <numeric_value>

Sets the sideband suppression for the Dolph-Chebyshev time gate. The command is only available if a Dolph-Chebyshev time gate is active (`CALCulate<Chn>:FILTer[:GATE]:TIME:WINDow DCHebyshev`).

<Chn>	Channel number used to identify the active trace.
<numeric_value>	Sideband suppression

Range [def. unit] 10 dB to 120 dB. The increment (parameters UP or DOWN) is 10 dB. [dB]
 *RST value 32 dB

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; :CALC:FILT:TIME:WIND DCH
```

Reset the instrument and select a Dolph-Chebyshev time gate for filtering the data in the frequency domain.

```
CALC:FILT:TIME:DCH 25
```

set the sideband suppression to 25 dB.

CALCulate<Chn>:FILTer[:GATE]:TIME:SHAPE MAXimum | WIDE | NORMal | MINimum

Selects the time gate to be applied to the time domain transform.



Use the generalized command `CALCulate<Chn>:FILTer[:GATE]:TIME:WINDow` if you wish to select a Dolph-Chebyshev time gate.

<Chn> Channel number used to identify the active trace.

Parameters MINimum – steepest edges (rectangle)
 WIDE – normal gate (Hann)
 NORM – steep edges (Hamming)
 Maximum – maximum flatness (Bohman)

*RST value WIDE

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; :CALC:FILT:TIME:SHAP?
```

Reset the instrument and query the type of time gate used. The response is WIDE.

CALCulate<Chn>:FILTer[:GATE]:TIME:SHOW <Boolean>

Enables or disables permanent display of the gate limits.

<Chn> Channel number used to identify the active trace.

<Boolean> ON – time gate permanently displayed
 OFF – time gate hidden

*RST value OFF [-]

SCPI, Command Types Device-specific, command or query

Example:

```
See CALCulate<Chn>:FILTer[:GATE]:TIME:CENTer
```

**CALCulate<Chn>:FILTer[:GATE]:TIME:SPAN **

Defines the span of the time gate.

<Chn>	Channel number used to identify the active trace.
	Span of the time gate.
Range [def. unit]	2E-012 s to 200 s. The increment (parameters UP or DOWN) is 0.1 ns. [s]
*RST value	5E-009 s
SCPI, Command Types	Confirmed, command or query

Example:

See `CALCulate<Chn>:FILTer[:GATE]:TIME:CENTer`

CALCulate<Chn>:FILTer[:GATE]:TIME:START <start>

Defines the start time of the time gate.

<Chn>	Channel number used to identify the active trace.
<start>	Start time of the time gate
Range [def. unit]	–100 s to +99.999999999998 s. The increment (parameters UP or DOWN) is 0.1 ns. [s]
*RST value	–1E-009 s
SCPI, Command Types	Confirmed, command or query

Example:

```
*RST; :CALC:TRAN:TIME:STAT ON; :CALC:FILT:TIME:STAT ON
```

Reset the instrument and enable the time domain representation and the time gate.

```
CALC:FILT:TIME:STAR 0; STOP 10ns; SHOW ON
```

set the start time to 0 ns and the stop time to 10 ns and display the time gate permanently.

Note: If the start frequency entered is greater than the current stop frequency (`CALCulate<Chn>:FILTer[:GATE]:TIME:STOP`), the stop frequency is set to the start frequency plus the minimum frequency span (`CALCulate<Chn>:FILTer[:GATE]:TIME:SPAN`).

CALCulate<Chn>:FILTer[:GATE]:TIME:STATE <Boolean>

Determines whether the time gate for trace no. <Chn> is enabled.

<Chn>	Channel number used to identify the active trace.
<Boolean>	ON – time gate enabled OFF – time gate disabled
*RST value	OFF [–]
SCPI, Command Types	Confirmed, command or query

Example:

```
*RST; :CALC:TRAN:TIME:STAT?; :CALC:FILT:TIME:STAT?
```

Reset the instrument, activating a frequency sweep, and query whether the default trace is displayed in the time domain and whether the time gate is enabled. The response is 0;0.

CALCulate<Chn>:FILTer[:GATE]:TIME:STOP <numeric_value>

Defines the stop time of the time gate.

<Chn>	Channel number used to identify the active trace.
<numeric_value>	Stop time of the time gate
Range [def. unit]	–99.999999999998 s to +100 s. The increment (parameters UP or DOWN) is 0.1 ns. [s]
*RST value	+4E-009 s
SCPI, Command Types	Confirmed, command or query
Example:	See CALCulate<Chn>:FILTer[:GATE]:TIME:START .

Note: If the stop frequency entered is smaller than the current start frequency ([CALCulate<Chn>:FILTer\[:GATE\]:TIME:START](#)), the start frequency is set to the stop frequency minus the minimum frequency span ([CALCulate<Chn>:FILTer\[:GATE\]:TIME:SPAN](#)).

CALCulate<Chn>:FILTer[:GATE]:TIME[:TYPE] BPASs | NOTCh

Selects the time gate filter type, defining what occurs to the data in the specific time region.

<Chn>	Channel number used to identify the active trace.
Parameters	BPASs – bandpass filter: Pass all information in specified time region and reject everything else. NOTCh – notch filter: Reject all information in specified time region and pass everything else.
*RST value	BPASs
SCPI, Command Types	Confirmed, command or query
Example:	<pre>*RST; :CALC:FILT:TIME:STAT ON</pre> Reset the instrument and enable the time gate. <pre>CALC:FILT:TIME NOTCh</pre> Select a notch filter in order to reject unwanted pulses.

CALCulate<Chn>:FILTER[:GATE]:TIME:WINDow RECT | HAMMING | HANN | BOHMan | DCHebyshev

Selects the time gate to be applied to the time domain transform.

<Chn>	Channel number used to identify the active trace.
Parameters	RECT – steepest edges (rectangle) HANN – normal gate (Hann) HAMMING – steep edges (Hamming) BOHMan – minimum flatness (Bohman) DCHebyshev – arbitrary gate shape (Dolph-Chebyshev)
*RST value	HANN
SCPI, Command Types	Confirmed (with some device-specific parameters), command or query
Example:	See <code>CALCulate<Chn>:FILTER[:GATE]:TIME:DCHebyshev</code>

CALCulate<Chn>:FORMat...

This subsystem determines a post-processing of the measured data in order to obtain various display formats.

CALCulate<Chn>:FORMat MLINear | MLOGarithmic | PHASe | UPHase | POLar | SMITH | ISMith | GDElay | REAL | IMAGinary | SWR | COMPLEX | MAGNitude

Defines how the measured result at any sweep point is post-processed and presented in the graphical display.

Note: The analyzer allows arbitrary combinations of display formats and measured quantities; see [Trace - Format](#) and [CALCulate<Chn>:PARAmeter...](#) commands. Nevertheless, it is advisable to check which display formats are generally appropriate for an analysis of a particular measured quantity; see [Measured Quantities and Display Formats](#).

<Chn>	Channel number used to identify the active trace.
Parameters	See list of parameters below.
*RST value	MLOGarithmic
SCPI, Command Types	Confirmed, command or query
Example:	<pre>CALC4:PAR:SDEF 'Ch4Tr1', 'S11'</pre> Create channel 4 and a trace named <i>Ch4Tr1</i> to measure the input reflection coefficient S11. The trace becomes the active trace in channel 4. <pre>CALC4:FORM MLIN; :DISP:WIND:TRAC2:FEED 'CH4TR1'</pre> Calculate the magnitude of S11 and display it in a linearly scaled Cartesian diagram assigning the trace number 2.

Assume that the result at a sweep point is given by the complex quantity $z = x + jy$. The meaning of the parameters is as follows (see also table in [CALCulate<Chn>:MARKer<Mk>:FORMat](#) description):

MLINear	Calculate the magnitude of z, to be displayed in a Cartesian diagram with a linear scale
MLOGarithmic	Calculate the magnitude of z, displayed in a Cartesian diagram with a logarithmic scale
PHASe	Phase of z, displayed in a Cartesian diagram with a linear vertical axis
UPHase	Unwrapped phase of z, displayed in a Cartesian diagram with a linear vertical axis
POLar	Magnitude and phase, displayed in a polar diagram
SMITH	Magnitude and phase, displayed in a Smith chart
ISMith	Magnitude and phase, displayed in an inverted Smith chart
GDELay	Group delay, displayed in a Cartesian diagram
REAL	Real part (x), displayed in a Cartesian diagram
IMAGinary	Imaginary part (y), displayed in a Cartesian diagram
SWR	Standing Wave Ratio (SWR), displayed in a Cartesian diagram
ZVR ✓ COMplex	x, y, displayed in a polar diagram
ZVR ✓ MAGNitude	Magnitude ($\sqrt{x^2 + y^2}$), displayed in a Cartesian diagram with a logarithmic scale

CALCulate<Chn>:FORMat:WQUType POWER | VOLTage

Selects the physical unit of the displayed trace.

<Chn> Channel number used to identify the active trace

Parameters Power or voltage units

***RST value** POWER

SCPI, Command Types Confirmed, command or query

Example:

```
CALC4:PAR:SDEF 'Ch4Tr1', 'b1'
```

Create channel 4 and a trace named *Ch4Tr1* to measure the wave quantity b_1 . The trace becomes the active trace in channel 4.

```
CALC4:FORM:WQUType VOLT
```

Select voltage units for the created trace (identified by the suffix 4).

CALCulate<Chn>:FSIMulator...

This subsystem enables the virtual *SAW Matching Network* and defines its parameters. When the virtual network is enabled, port 1 serves as an unbalanced port, the physical ports no. 2 and 4 of the analyzer are combined to a logical (balanced) port no. 2.



The commands in this subsystem are supported for the sake of compatibility with older firmware versions. Starting with firmware V1.70 the commands have been superseded by the [CALCulate:TRANSform:VNETwork...](#) subsystem. Virtual network (de-)embedding is controlled by the [Virtual Transform](#) menu.

The commands may be removed in future firmware versions.

CALCulate<Chn>:GDAPerture...

This subsystem configures the group delay measurement.

CALCulate<Chn>:GDAPerture:SCount <Steps>

Defines an aperture for the calculation of the group delay as an integer number of frequency sweep steps.

<Chn>	Channel number used to identify the active trace.
<steps>	Number of steps
Range [def. unit]	1 to 10000 [–]
*RST value	10

SCPI, Command Types Confirmed, with query.

Example:

```
*RST; :CALC:FORM GDEL
```

Select group delay calculation for the active trace.

```
CALC:GDAP:SCO 15
```

Select an aperture of 15 steps.

CALCulate<Chn>:LDEViation...

This subsystem controls the linearity deviation calculation.

CALCulate<Chn>:LDEViation:AUTO ONCE

Initiates a (re-)calculation of the linearity deviation correction factors and applies them to the active trace.

<Chn>	Channel number used to identify the active trace. If unspecified the numeric suffix is set to 1.

ONCE Initiates the calculation

*RST value –

SCPI, Command Types Device-specific, no query.

Example:

```
*RST; CALC:FORM UPH
```

Reset the analyzer; assign the unwrapped phase of the transmission parameter S_{21} to the default trace.

```
CALC:LDEV:AUTO ONCE
```

Calculate correction factors and apply them to the default trace.

```
CALC:LDEV:SLOP?; ELEN?; CONS?
```

Query the values of the correction factors.

```
CALC:LDEV:MODE OFF
```

Disable the correction.

CALCulate<Chn>:LDEViation:CONStant <Constant>

Defines the constant value for the linearity deviation calculation.

<Chn>	Channel number used to identify the active trace.
<Constant>	Constant value
Range [def. unit]	The range depends on the trace format. For the default trace: –200 dB to + 200 dB [dB]. The increment (UP, DOWN) is 10^{-2} dB.
*RST value	0 dB
SCPI, Command Types	Device-specific, command or query.

Example: See [CALCulate<Chn>:LDEViation:AUTO](#)

CALCulate<Chn>:LDEViation:ELENgth <El Length>

Defines the electrical length for the linearity deviation calculation. This command is available if the active trace format is *Phase* or *Unwrapped Phase*, or if a mixer delay is measured.

<Chn>	Channel number used to identify the active trace.
<El Length>	Electrical length
Range [def. unit]	0 m to + 1000 m [m]. The increment (UP, DOWN) is 10^{-4} m.
*RST value	0 m
SCPI, Command Types	Device-specific, command or query.

Example: See [CALCulate<Chn>:LDEViation:AUTO](#)

CALCulate<Chn>:LDEViation:MODE ON | OFF | TRACking

Applies /discards the correction factors or re-calculates them for each trace (Tracking).

<Chn>	Channel number used to identify the active trace.
ON	Apply the correction using the latest correction factors.
OFF	Discard the correction.
TRACking	Repeat calculation for each measured trace and apply the correction.
*RST value	0 dB/MHz
SCPI, Command Types	Device-specific, command or query.

Example: See [CALCulate<Chn>:LDEViation:AUTO](#)

CALCulate<Chn>:LDEVIation:SLOPe <Slope>

Defines the slope of the regression line for the linearity deviation calculation.

<Chn>	Channel number used to identify the active trace.
<Slope>	Slope of the regression line
Range [def. unit]	The range depends on the trace format. For the default trace: -10^{15} dB/MHz to $+10^{15}$ dB/MHz [dB/MHz]. The increment (UP, DOWN) is 10^4 dB/MHz.
*RST value	0 dB/MHz
SCPI, Command Types	Device-specific, command or query.
Example:	See <code>CALCulate<Chn>:LDEVIation:AUTO</code>

CALCulate<Chn>:LIMit...

This subsystem defines the limit lines and controls the limit check.

CALCulate<Chn>:LIMit:CONTRol[:DATA]

<numeric_value>,<numeric_value>{,<numeric_value>,<numeric_value>}

Defines the stimulus values of the limit line and/or creates new limit line segments.

**Rules for creating segments**

The following rules apply to an active trace with n existing limit line segments:

- An odd number of values is rejected; an error message –109,"Missing parameter..." is generated.
- An even number of $2 \cdot k$ values updates or generates k limit line segments.
- For $n > k$ the stimulus values of all existing limit line segments no. 1 to k are updated, the existing limit line segments no. k+1, ..., n are deleted.
- For $n < k$ the stimulus values of the limit line segments no. 1 to n are updated, the limit line segments n+1, ..., k are generated with default response values (see `CALCulate<Chn>:LIMit:UPPer[:DATA]`, `CALCulate<Chn>:LIMit:LOWer[:DATA]`).



The generated segments are upper or lower limit line segments, depending on the `CALCulate<Chn>:LIMit:SEGment<Seg>:TYPE` setting.

`CALCulate<Chn>:LIMit:CONTRol[:DATA]` does not overwrite the type setting.



To define additional new limit line segments without overwriting the old segments use `CALCulate<Chn>:LIMit:DATA`.

<Chn>	Channel number used to identify the active trace.
<numeric_value>	Pair(s) of frequency, power or time values, to be defined in accordance with the current sweep type (<code>[SENSe<Ch>:]SWEep:TYPE</code>).

Range [def. unit]	Almost no restriction for limit segments; see Rules for Limit Line Definition . [Hz for frequency sweeps, dBm for power sweeps, s for time sweeps]
*RST value	– A segment that is created implicitly, e.g. by means of <code>CALCulate<Chn>:LIMit:UPPer[:DATA]</code> or <code>CALCulate<Chn>:LIMit:LOWer[:DATA,]</code> , covers the maximum sweep range of the analyzer.
SCPI, Command Types	Confirmed, with query.
Example:	<pre>*RST; :CALC:LIM:CONT 1 GHz, 2 GHz</pre> Define an upper limit line segment in the stimulus range between 1 GHz and 2 GHz, using default response values. <pre>CALC:LIM:DISP ON</pre> Show the limit line segment in the active diagram.

CALCulate<Chn>:LIMit:CONTRol:DOMain FLIN | FLOG | FSEG | FSINGle | TLIN | TLOG | PLIN | PLOG | PSINGle

[Deprecated command, not needed on R&S ZVA]

Deletes the existing limit line and (re-)defines the physical units of the stimulus values of the limit line. The units of the response values and the scaling of the y-axis are defined via
`CALCulate<Chn>:LIMit:RDOMain:...`

<Chn>	Channel number used to identify the active trace.
Parameters	Keywords for the units of the stimulus values. The selected unit must be compatible with the sweep type (<code>[SENSe<Ch>:]SWEep:TYPE</code>); otherwise the limit line can not be displayed and no limit check is possible.
Range [def. unit]	The parameters form three groups: • FLIN, FLOG, FSEG, and FSINGle select frequency units [default: Hz] for the limit line. • TLIN and TLOG select time units [default: s]. • PLIN, PLOG and PSINGle select power units [default: dBm].
*RST value	FLIN
SCPI, Command Types	Device-specific, no query.
Example:	<pre>SWE:TYPE POW</pre> Select a power sweep. <pre>CALC:LIM:CONT:DOM PLIN</pre> Delete all existing limit line segments and select level units for the limit line of the active trace. <pre>CALC:LIM:CONT -20 DBM, -10 DBM</pre>

Define a limit line segment in the stimulus range between –20 dBm and –10 dBm.

CALCulate<Chn>:LIMit:CONTRol:SHIFt <numeric_value>

Shifts the limit line in horizontal direction.

<Chn>	Channel number used to identify the active trace.
<numeric_value>	Offset value for the limit line.
Range [def. unit]	Almost no restriction for limit segments; see Rules for Limit Line Definition . [Hz for frequency sweeps, dBm for power sweeps, s for time sweeps]
*RST value	–

SCPI, Command Types Device-specific, no query.

Example:

```
*RST; :CALC:LIM:CONT 1 GHz, 2 GHz
```

Define a limit line segment in the stimulus range between 1 GHz and 2 GHz, using default response values.

```
CALC:LIM:CONT:SHIF 1; :CALC:LIM:CONT?
```

Shift the segment by 1 Hz. The modified limit line segment extends from 1000000001 (Hz) to 2000000001 (Hz).

CALCulate<Chn>:LIMit:DATA <type>, <start_stim>, <stop_stim>, <start_resp>, <stop_resp>{,<type>, <start_stim>, <stop_stim>, <start_resp>, <stop_resp>}

Defines the limit line type, the stimulus and response values for a limit line with an arbitrary number of limit line segments.



In contrast to [CALCulate<Chn>:LIMit:CONTRol\[:DATA\]](#), this command does not overwrite existing limit line segments. The defined segments are appended to the segment list as new segments.

<Chn>	Channel number used to identify the active trace.
<type>	Identifier for the type of the limit line segment.
Range [def. unit]	0 – Limit line segment off, segment defined but no limit check performed 1 – Upper limit line segment 2 – Lower limit line segment
<start_stim>, <stop_stim>, <start_resp>, <stop_resp>	Stimulus and response values of the first and last points of the limit line segment.
Range [def. unit]	Almost no restriction for limit segments; see Rules for Limit Line Definition . [Hz for frequency sweeps, dBm for power sweeps, s for time sweeps, see CALCulate<Chn>:LIMit:CONTRol:DOMain]
*RST values	– (no limit line defined after *RST)
SCPI,	Device-specific, with query.

Command Types**Example:**

```
*RST; :CALC:LIM:CONT 1 GHz, 1.5 GHz
```

Define an upper limit line segment in the stimulus range between 1 GHz and 1.5 GHz, using default response values.

```
CALC:LIM:DATA 1,1500000000, 2000000000,2,3
```

Define an upper limit line segment in the stimulus range between 1.5 GHz and 2 GHz, assigning response values of +2 dB and +3 dB.

```
CALC:LIM:DISP ON
```

Show the limit line segment in the active diagram.

CALCulate<Chn>:LIMit:DELeTe:ALL

Deletes all limit line segments.

<Chn> Channel number used to identify the active trace.

***RST value** —

SCPI, Command Device-specific, no query.

Types**Example:**

```
*RST; :CALC:LIM:CONT 1 GHz, 1.5 GHz
```

Define an upper limit line segment in the stimulus range between 1 GHz and 1.5 GHz, using default response values.

```
CALC:LIM:DATA 1,1500000000, 2000000000,2,3
```

Define an upper limit line segment in the stimulus range between 1.5 GHz and 2 GHz, assigning response values of +2 dB and +3 dB.

```
CALC:LIM:DEL:ALL
```

Delete both created limit line segments.

CALCulate<Chn>:LIMit:DISPlay[:STATe] <Boolean>

Displays or hides the entire limit line (including all segments) associated to the active trace.

<Chn> Channel number used to identify the active trace.

<Boolean> ON | OFF - Limit line on or off.

***RST value** OFF

SCPI, Command Device-specific, command or query.

Types**Example:**

```
*RST; :CALC:LIM:CONT 1 GHz, 2 GHz
```

Define an upper limit line segment in the stimulus range between 1 GHz and 2 GHz, using default response values.

```
CALC:LIM:DISP ON
```

Show the limit line segment in the active diagram.

CALCulate<Chn>:LIMit:FAIL?

Returns a 0 or 1 to indicate whether or not the limit check has failed.



Use `CALCulate<Chn>:CLIMits:FAIL?` to perform a composite (global) limit check.



In remote control, the limit check result is calculated once at the end of each sweep. If the limit lines are changed, a new sweep is required to obtain updated limit check results. In single sweep mode (`INITiate<Ch>:CONTinuous OFF`), the new sweep must be started explicitly using `INITiate<Ch>[:IMMediate]:SCOPE ALL | SINGLE`. This behavior is different from manual control where a changed limit line can directly affect the pass/fail result of the displayed trace.

<Chn> Channel number used to identify the active trace.

Response 0 | 1 - 0 represents pass, 1 represents fail.

***RST value** 0

SCPI, Command Types Confirmed, query only.

Example:

```
*RST; :CALC:LIM:CONT 1 GHz, 2 GHz
```

Define an upper limit line segment in the stimulus range between 1 GHz and 2 GHz, using default response values.

```
CALC:LIM:STAT ON; FAIL?
```

Switch the limit check on and query the result.

CALCulate<Chn>:LIMit:LOWer[:DATA]

<numeric_value>,<numeric_value>{,<numeric_value>,<numeric_value>}

Defines the response (y-axis) values of the lower limit line and/or creates new limit line segments.



The commands `CALCulate<Chn>:LIMit:LOWer[:DATA]` and `CALCulate<Chn>:LIMit:UPPer[:DATA]` use a fixed numbering scheme for limit line segments: Upper limit line segments are assigned odd numbers (1, 3, 5,...), lower limit line segments are assigned even numbers (2, 4, 6,...).



Rules for creating segments

The following rules apply to an active trace with n existing upper and n existing lower limit line segments:

- An odd number of values is rejected; an error message –109,"Missing parameter..." is generated.
- An even number of 2*k values updates or generates k lower limit line segments.
- For n > k the response values of all existing lower limit line segments no. 2, 4, ..., 2*k are updated, the existing upper and lower limit line segments no. 2*k+1, ..., 2*n are deleted. The existing upper limit line segments no. 1, 3, 2*k–1 are not affected.

- For $n < k$ the response values of the lower limit line segments no. 2, 4 to $2*n$ are updated, the lower limit line segments $2*n+2$, $2*n+4$, ..., $2*k$ are generated with default stimulus values (see [CALCulate<Chn>:LIMit:CONTRol\[:DATA\]](#)). In addition, the missing upper limit line segments $2*n+1$, $2*n+3$, ..., $2*k-1$ are generated with default stimulus and response values

<Chn> Channel number used to identify the active trace.

<numeric_value> Pair(s) of response values.

Range [def. unit] Almost no restriction for limit segments; see [Rules for Limit Line Definition](#). [dB]

*RST value –
The response value of a segment that is created implicitly, e.g. an upper limit line segment, is –20 dB.

SCPI, Command Types Confirmed, with query.

Example:

CALC:LIM:LOW -10, 0, 0, -10

Define the following lower and (default) upper limit line segments:

Seg.	Type	Start Stimulus	Stop Stimulus	Start Response	Stop Response
1	Upper	300 kHz	8 GHz	-20 dB	-20 dB
2	Lower	300 kHz	8 GHz	-10 dB	0 dB
3	Upper	300 kHz	8 GHz	-20 dB	-20 dB
4	Lower	300 kHz	8 GHz	0 dB	-10 dB

CALC:LIM:DISP ON

Show the limit line segments in the active diagram.

CALCulate<Chn>:LIMit:LOWer:FEED

<stimulus_offset>,<response_offset>[,<trace_name>]

Generates a lower limit line using the stimulus values of a data or memory trace and specified offset values.

<Chn> Channel number used to identify the active trace. This trace provides the stimulus data for the limit line unless another trace <trace_name> is specified.

<stimulus_offset> Stimulus offset value, used to shift all imported limit line segments in horizontal direction.

Range [def. unit] -1000 GHz to +1000 GHz [Hz]

*RST value 0 Hz

<response_offset> Response offset value, used to shift all imported limit line segments in vertical direction.

Range [def. unit] -10^{12} dB to $+10^{12}$ dB [dB]

*RST value 0 dB

<trace_name> Name of the selected trace as used e.g. in [CALCulate<Ch>:PARAmeter:SDEFine](#). If no trace name is specified the analyzer uses the active trace no. <Chn>.

SCPI, Command Types Device-specific, no query.

Example:

```
CALC:LIM:LOW:FEED 1 GHz, -10
```

Use the stimulus values of the active trace, shifted by 1 GHz to the right and decreased by 10 dB, to create a lower limit line.

```
CALC:LIM:LOW:SHIF -3; :CALC:LIM:CON:SHIF 1 GHz
```

Shift the limit line by an additional –3 dB in vertical and by 1 GHz in horizontal direction. If an upper limit line exists, it is also shifted.

CALCulate<Chn>:LIMit:LOWer:SHIFt <numeric_value>

Shifts all lower and upper limit line segments assigned to the active trace in vertical direction.



This command is identical with [CALCulate<Chn>:LIMit:UPPer:SHIFt](#).

<Chn>	Channel number used to identify the active trace.
<numeric_value>	Response offset value for all limit line segments.
Range [def. unit]	Almost no restriction for limit segments; see Rules for Limit Line Definition . [dB]
*RST value	–
SCPI, Command Types	Device-specific, no query.
Example:	See CALCulate<Chn>:LIMit:LOWer:FEED .

CALCulate<Chn>:LIMit:LOWer:STATe <Boolean>

Switches the lower limit check on or off. Lower limit line segments are assigned even numbers; see [CALCulate<Chn>:LIMit:LOWer\[:DATA\]](#). The command does not affect segments with odd numbers.



Use [CALCulate<Chn>:LIMit:STATe](#) to switch on or off the entire limit check, including upper and lower limit lines.

<Chn>	Channel number used to identify the active trace.
<Boolean>	ON OFF - Limit check on or off.
*RST value	OFF
SCPI, Command Types	Confirmed, command or query.

Example:

```
CALC:LIM:LOW -10, 0, 0, -10
```

Define the following lower and (default) upper limit line segments:

Seg.	Type	Start Stimulus	Stop Stimulus	Start Response	Stop Response
1	Upper	300 kHz	8 GHz	-20 dB	-20 dB
2	Lower	300 kHz	8 GHz	-10 dB	0 dB
3	Upper	300 kHz	8 GHz	-20 dB	-20 dB
4	Lower	300 kHz	8 GHz	0 dB	-10 dB

```
CALC:LIM:LOW:STAT ON; CALC:LIM:FAIL?
```

Switch the limit check on and query the result.

CALCulate<Chn>:LIMit:RDOMain:COMPLex S | SINV | Y | Z | YREL | ZREL

[Deprecated command, not needed on R&S ZVA]

Deletes the existing limit line and (re-)defines the physical units of the response values of the limit line. The units of the stimulus values are defined via `CALCulate<Chn>:LIMit:CONTrol:DOMain`.



This command is complemented by `CALCulate<Chn>:LIMit:RDOMain:FORMat` and `CALCulate<Chn>:LIMit:RDOMain:SPACing`.

<Chn>	Channel number used to identify the active trace.
Parameters	Keyword for the physical unit of the response values.
Range [def. unit]	The parameters form four groups: • S and SINV select relative units (dB) for the limit line. • Y selects admittance units (S/Siemens). • Z selects impedance units (Ω). • YREL and ZREL select dimensionless numbers (U).
	[–]
*RST value	–
SCPI, Command Types	Device-specific, no query.

CALCulate<Chn>:LIMit:RDOMain:FORMat COMPLex | MAGNitude | PHASe | REAL | IMAGinary | SWR | GDElay | L | C

[Deprecated command, not needed on R&S ZVA]

Deletes the existing limit line and (re-)defines the physical units of the response values of the limit line. The units of the stimulus values are defined via `CALCulate<Chn>:LIMit:CONTrol:DOMain`.



This command is complemented by `CALCulate<Chn>:LIMit:RDOMain:COMPLex` and `CALCulate<Chn>:LIMit:RDOMain:SPACing`.

<Chn>	Channel number used to identify the active trace.
Parameters	Keyword for the physical unit of the response values.
Range [def. unit]	The parameters form six groups: • COMPLex, REAL, IMAGinary, and SWR select dimensionless numbers (U) for the limit line. • MAGNitude selects relative units (dB). • PHASe selects phase units (deg). • GDElay selects time units (s). • L selects inductance units (H/Henry).

- C selects capacitance units (F/Farad).

	[–]
*RST value	–
SCPI, Command Types	Device-specific, no query.

CALCulate<Chn>:LIMit:RDOMain:SPACing LINear | LOGarithmic | dB | SIC

[Deprecated command, not needed on R&S ZVA]

Deletes the existing limit line and (re-)defines the physical units of the response values of the limit line. The units of the stimulus values are defined via `CALCulate<Chn>:LIMit:CONTrol:DOMain`.



This command is complemented by `CALCulate<Chn>:LIMit:RDOMain:COMPLex` and `CALCulate<Chn>:LIMit:RDOMain:FORMat`.

<Chn>	Channel number used to identify the active trace.
Parameters	Keyword for the physical unit of the response values.
Range [def. unit]	The analyzer uses dB units, irrespective of the parameter selected. [–]
*RST value	–
SCPI, Command Types	Device-specific, no query.

CALCulate<Chn>:LIMit:SEGment<Seg>:AMPLitude:START <numeric_value>

Changes the start response value (i.e. the response value assigned to the start stimulus value) of a limit line segment. A segment must be created first to enable this command (e.g. `CALC:LIM:DATA`).



To define the response values of several limit line segments with a single command, use `CALCulate<Chn>:LIMit:LOWer[:DATA]` or `CALCulate<Chn>:LIMit:UPPer[:DATA]`.

<Chn>	Channel number used to identify the active trace.
<Seg>	Segment number
<numeric_value>	Response value
Range [def. unit]	Almost no restriction for limit segments; see Rules for Limit Line Definition . [dB]
*RST value	– The default response values of a segment that is created by defining its stimulus values only (e.g. by means of <code>CALCulate<Chn>:LIMit:CONTrol[:DATA]</code>), is –20 dB.
SCPI, Command Types	Device-specific, with query.
Example:	<code>CALC:LIM:DATA 1,1500000000, 2000000000,2,3</code>

Define an upper limit line segment (segment no. 1) in the stimulus range

between 1.5 GHz and 2 GHz, assigning response values of +2 dB and +3 dB.

```
:CALC:LIM:SEGM:AMPL:STAR 5; STOP 5; :CALC:LIM:SEGM:TYPE LMIN
```

Change the segment to a lower limit line segment with a constant response value of +5 dB.

```
CALC:LIM:DATA?
```

Query the type, the stimulus and response values of the created segment with a single command. The response is 2, 1500000000, 2000000000, 5, 5.

CALCulate<Chn>:LIMit:SEGment<Seg>:AMPLitude:STOP <numeric_value>

Changes the stop response value (i.e. the response value assigned to the stop stimulus value) of a limit line segment. A segment must be created first to enable this command (e.g. [CALC:LIM:DATA](#)).



To define the response values of several limit line segments with a single command, use [CALCulate<Chn>:LIMit:LOWer\[:DATA\]](#) or [CALCulate<Chn>:LIMit:UPPer\[:DATA\]](#).

<Chn>	Channel number used to identify the active trace.
<Seg>	Segment number
<numeric_value>	Response value
Range [def. unit]	Almost no restriction for limit segments; see Rules for Limit Line Definition . [dB]
*RST value	– The default response values of a segment that is created by defining its stimulus values only (e.g. by means of CALCulate<Chn>:LIMit:CONTRol[:DATA]), is –20 dB.

SCPI, Command Types Device-specific, with query.

Example: See [CALCulate<Chn>:LIMit:SEGment<Seg>:AMPLitude:STAR](#).

CALCulate<Chn>:LIMit:SEGment<Seg>:COUNT?

Queries the number of limit line segments.

<Chn>	Channel number used to identify the active trace.
<Seg>	Limit line segment number. This suffix is ignored; the command counts all ranges.
Response	0 1 ... - number of (enabled or disabled) limit line segments.
*RST value	0
SCPI, Command Types	Device-specific, query only.

Example: [CALC:LIM:DATA 1,1500000000, 2000000000,2,3](#)

Define an upper limit line segment (segment no. 1) in the stimulus range between

1.5 GHz and 2 GHz, assigning response values of +2 dB and +3 dB.

```
CALC:LIM:SEGM:COUNT?
```

Query the number of segments. The response is *1*.

CALCulate<Chn>:LIMit:SEGMent<Seg>:STIMulus:STARt <numeric_value>

Changes the start stimulus value (i.e. the smallest stimulus value) of a limit line segment. A segment must be created first to enable this command (e.g. [CALC:LIM:DATA](#)).



To define the stimulus values of several limit line segments with a single command, use [CALCulate<Chn>:LIMit:CONTRol\[:DATA\]](#).

<Chn>	Channel number used to identify the active trace.
<Seg>	Segment number
<numeric_value>	Frequency, power or time value, to be defined in accordance with the domain setting (CALCulate<Chn>:LIMit:CONTRol:DOMain).
Range [def. unit]	Almost no restriction for limit segments; see Rules for Limit Line Definition . [Hz for frequency sweeps, dBm for power sweeps, s for time sweeps]
*RST value	– A segment that is created implicitly, e.g. by means of CALCulate<Chn>:LIMit:UPPer[:DATA] or CALCulate<Chn>:LIMit:LOWer[:DATA,] , covers the maximum sweep range of the analyzer.

SCPI, Command Types

Device-specific, with query.

Example:

```
CALC:LIM:DATA 1,1500000000, 2000000000,2,3
```

Define an upper limit line segment (segment no. 1) in the stimulus range between 1.5 GHz and 2 GHz, assigning response values of +2 dB and +3 dB.

```
CALC:LIM:SEGM:STIM:STAR 1GHZ; STOP 2 GHZ; :CALC:LIM:SEGM:TYPE LMIN
```

Change the segment to a lower limit line segment with a stimulus range between 1 GHz and 2 GHz.

```
CALC:LIM:DATA?
```

Query the type, the stimulus and response values of the created segment with a single command. The response is *2, 1000000, 2000000, 2, 3*.

CALCulate<Chn>:LIMit:SEGMent<Seg>:STIMulus:STOP <numeric_value>

Changes the stop stimulus value (i.e. the largest stimulus value) of a limit line segment. A segment must be created first to enable this command (e.g. [CALC:LIM:DATA](#)).



To define the stimulus values of several limit line segments with a single command, use [CALCulate<Chn>:LIMit:CONTRol\[:DATA\]](#).

<Chn>	Channel number used to identify the active trace.
<Seg>	Segment number
<numeric_value>	Frequency, power or time value, to be defined in accordance with the domain setting (<code>CALCulate<Chn>:LIMit:CONTRol:DOMain</code>).
Range [def. unit]	Almost no restriction for limit segments; see Rules for Limit Line Definition . [Hz for frequency sweeps, dBm for power sweeps, s for time sweeps]
*RST value	– A segment that is created implicitly, e.g. by means of <code>CALCulate<Chn>:LIMit:UPPer[:DATA]</code> or <code>CALCulate<Chn>:LIMit:LOWer[:DATA,]</code> , covers the maximum sweep range of the analyzer.
SCPI, Command Types	Device-specific, with query.
Example:	See <code>CALCulate<Chn>:LIMit:SEGment<Seg>:STIMulus:START</code> .

CALCulate<Chn>:LIMit:SEGment<Seg>:TYPE LMIN | LMAX | OFF

Selects the limit line type for a limit line segment. This can be done before or after defining the stimulus and response values of the segment, however, a segment must be created first to enable this command (e.g. `CALC:LIM:DATA`).



The type command overwrites the `CALCulate<Chn>:LIMit:DATA` settings and is overwritten by them. It is not affected by the other commands in the LIMit subsystem defining stimulus and response values of limit lines.

<Chn>	Channel number used to identify the active trace.
<Seg>	Segment number
Parameters	Limit line type
Range [def. unit]	LMAX (upper limit line segment), LMIN (lower limit line segment), OFF (limit check switched off, limit line segment not deleted) [–]
*RST value	LMAX
SCPI, Command Types	Device-specific, with query.
Example:	<code>*RST; :CALC:LIM:UPP 0, 0</code>

Define an upper limit line segment across the entire sweep range, using a constant upper limit of 0 dBm.

`CALC:LIM:SEGM:TYPE LMIN`

Turn the defined limit line segment into a lower limit line segment.

CALCulate<Chn>:LIMit:SOUND[:STATe]

Switches the acoustic signal (fail beep) on or off. The fail beep is generated each time the analyzer detects an exceeded limit.

<Chn>	Channel number used to identify the active trace.
<Boolean>	ON OFF - Fail beep on or off.
*RST value	OFF
SCPI, Command Types	Confirmed, command or query.
Example:	<code>CALC:LIM:STAT ON; SOUN ON</code> Switch the limit check on and activate the fail beep.

CALCulate<Chn>:LIMit:STATe

Switches the limit check (including upper and lower limits) on or off.



Use `CALCulate<Chn>:LIMit:UPPer:STATe` or `CALCulate<Chn>:LIMit:LOWer:STATe` to switch on or off the individual limit checks for upper or lower limit lines.

<Chn>	Channel number used to identify the active trace.
<Boolean>	ON OFF - Limit check on or off.
*RST value	OFF
SCPI, Command Types	Confirmed, command or query.
Example:	<code>*RST; :CALC:LIM:CONT 1 GHZ, 2 GHZ</code> Define an upper limit line segment in the stimulus range between 1 GHz and 2 GHz, using default response values. <code>CALC:LIM:STAT ON; FAIL?</code> Switch the limit check on and query the result.

CALCulate<Chn>:LIMit:TTLout<Output_no>[:STATe] <Boolean>

Switches the TTL pass/fail signals on or off. The signals are applied to the USER CONTROL connector as long as the active trace <Chn> is within limits, including the ripple limits.

<Chn>	Channel number used to identify the active trace.
<Output_no>	1 – TTL out pass 1 (pin 13 of USER CONTROL connector) 2 – TTL out pass 2 (pin 14 of USER CONTROL connector)
<Boolean>	ON OFF - TTL output signal on or off.
*RST value	OFF
SCPI, Command Types	Device-specific, command or query.
Example:	<code>*RST; :CALC:LIM:CONT 1 GHZ, 2 GHZ</code> Define an upper limit line segment in the stimulus range between 1 GHz and 2 GHz, using default response values.

CALC:LIM:STAT ON; TTL2 ON

Switch the limit check on and activate the TTL out pass 2 signal.

CALCulate<Chn>:LIMit:UPPer[:DATA] <numeric_value>,<numeric_value>{,<numeric_value>,<numeric_value>}

Defines the response (y-axis) values of the upper limit line and/or creates new limit line segments.



The commands `CALCulate<Chn>:LIMit:LOWer[:DATA]` and `CALCulate<Chn>:LIMit:UPPer[:DATA]` use a fixed numbering scheme for limit line segments: Upper limit line segments are assigned odd numbers (1, 3, 5,...), lower limit line segments are assigned even numbers (2, 4, 6,...).



Rules for creating segments

The following rules apply to an active trace with n existing upper and n existing lower limit line segments:

- An odd number of values is rejected; an error message –109,"Missing parameter..." is generated.
- An even number of $2 \cdot k$ values updates or generates k upper limit line segments.
- For $n > k$ the response values of all existing upper limit line segments no. 1, 3, ..., $2 \cdot k - 1$ are updated, the existing upper and lower limit line segments no. $2 \cdot k + 1$, ..., $2 \cdot n$ are deleted. The existing lower limit line segments no. 2, 4, $2 \cdot k$ are not affected.
- For $n < k$ the response values of the upper limit line segments no. 1, 3 to $2 \cdot n - 1$ are updated, the upper limit line segments $2 \cdot n + 1$, $2 \cdot n + 3$, ..., $2 \cdot k - 1$ are generated with default stimulus values (see `CALCulate<Chn>:LIMit:CONTRol[:DATA]`). In addition, the missing lower limit line segments $2 \cdot n + 2$, $2 \cdot n + 4$, ..., $2 \cdot k$ are generated with default stimulus and response values

<Chn>	Channel number used to identify the active trace.
<numeric_value>	Pair(s) of response values.
Range [def. unit]	Almost no restriction for limit segments; see Rules for Limit Line Definition . [dB]
*RST value	– The response value of a segment that is created implicitly, e.g. an lower limit line segment, is –20 dB.

SCPI, Command

Types

Example:

CALC:LIM:UPP -10, 0, 0, -10

Define the following upper and (default) lower limit line segments:

Seg.	Type	Start Stimulus	Stop Stimulus	Start Response	Stop Response
1	Upper	300 kHz	8 GHz	-10 dB	0 dB
2	Lower	300 kHz	8 GHz	-20 dB	-20 dB
3	Upper	300 kHz	8 GHz	0 dB	-10 dB
4	Lower	300 kHz	8 GHz	-20 dB	-20 dB

CALC:LIM:DISP ON

Show the limit line segments in the active diagram.

CALCulate<Chn>:LIMit:UPPer:FEED

Generates an upper limit line using the stimulus values of a data or memory trace and specified offset values.

<Chn>	Channel number used to identify the active trace. This trace provides the stimulus data for the limit line unless another trace <trace_name> is specified.
<stimulus_offset>	Stimulus offset value, used to shift all imported limit line segments in horizontal direction.
Range [def. unit]	-1000 GHz to +1000 GHz [Hz]
*RST value	0 Hz
<response_offset>	Response offset value, used to shift all imported limit line segments in vertical direction.
Range [def. unit]	-10 ¹² dB to +10 ¹² dB [dB]
*RST value	0 dB
<trace_name>	Name of the selected trace as used e.g. in CALCulate<Ch>:PARAmeter:SDEFine . If no trace name is specified the analyzer uses the active trace no. <Chn>.

SCPI, Command Types

Device-specific, no query.

Example:

```
CALC:LIM:UPP:FEED 1 GHz, 10
```

Use the stimulus values of the active trace, shifted by 1 GHz to the right and increased by 10 dB, to create an upper limit line.

```
CALC:LIM:UPP:SHIF 3; :CALC:LIM:CONT:SHIF 1 GHz
```

Shift the limit line by an additional 3 dB in vertical and by 1 GHz in horizontal direction. If a lower limit line exists it is also shifted.

CALCulate<Chn>:LIMit:UPPer:SHIFt <numeric_value>

Shifts all lower and upper limit line segments assigned to the active trace in vertical direction.



This command is identical with [CALCulate<Chn>:LIMit:LOWer:SHIFt](#).

<Chn>	Channel number used to identify the active trace.
<numeric_value>	Response offset value for all limit line segments.
Range [def. unit]	Almost no restriction for limit segments; see Rules for Limit Line Definition . [dB]
*RST value	—

SCPI, Command Types

Device-specific, no query.

Example:

```
See CALCulate<Chn>:LIMit:UPPer:FEED.
```

CALCulate<Chn>:LIMit:UPPer:STATe <Boolean>

Switches the upper limit check on or off. Upper limit line segments are assigned odd numbers; see [CALCulate<Chn>:LIMit:UPPer\[:DATA\]](#). The command does not affect segments with even numbers.



Use [CALCulate<Chn>:LIMit:STATe](#) to switch on or off the entire limit check, including upper and lower limit lines.

<Chn> Channel number used to identify the active trace.

<Boolean> ON | OFF - Limit check on or off.

***RST value** OFF

SCPI, Command Types Confirmed, command or query.

Example:

```
CALC:LIM:UPP -10, 0, 0, -10
```

Define the following upper and (default) lower limit line segments:

Seg.	Type	Start Stimulus	Stop Stimulus	Start Response	Stop Response
1	Upper	300 kHz	8 GHz	-10 dB	0 dB
2	Lower	300 kHz	8 GHz	-20 dB	-20 dB
3	Upper	300 kHz	8 GHz	0 dB	-10 dB
4	Lower	300 kHz	8 GHz	-20 dB	-20 dB

```
CALC:LIM:UPP:STAT ON; :CALC:LIM:FAIL?
```

Switch the limit check on and query the result.

CALCulate<Chn>:MARKer<Mk>...

This subsystem controls the marker functions. The commands are device-specific and beyond what is specified in the SCPI subsystem [SOURce:MARKer](#).

CALCulate<Chn>:MARKer<Mk>:AOFF

Removes all markers from all traces of the active setup. The removed markers remember their properties (stimulus value, format, delta mode, number) when they are restored ([CALC<Chn>:MARK<Mk> ON](#)). The marker properties are definitely lost if the associated trace is deleted.

<Chn> Channel number used to identify the active trace. If unspecified the numeric suffix is set to 1.

<Mk> Marker number in the range 1 to 10. This numeric suffix is ignored and may be set to any value.

***RST value** —

SCPI, Command Types Device-specific, no query.

Example:

```
Suppose that the active setup contains an active trace no. 1.
```

```
CALC:MARK1 ON; MARK2 ON
```

Create markers 1 and 2 and assign them to the trace no. 1.

```
CALC:MARK:AOff
```

Remove both markers.

CALCulate<Chn>:MARKer<Mk>:BWIDth <x_dB_Bandwidth>

Sets the bandfilter level for a bandfilter search or returns the results. The command is only available after a bandfilter search has been executed ([CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute BFIIter](#); see example below).

<Chn>	Channel number used to identify the active trace.
<Mk>	Marker number in the range 1 to 10. This numeric suffix is ignored and may be set to any value because the bandfilter search functions always use markers M 1 to M 4.
<x_dB_Bandwidth>	<i>x dB Bandwidth</i> parameter. The <i>x dB Bandwidth</i> is the difference between the band edges and the center response value of a bandfilter peak; it must be negative for a bandpass search and positive for a bandstop search.
Range [def. unit]	For bandpass: –100.00 dB to –0.01 dB, the increment (UP/DOWN) is 0.3 dB. [dB] For bandstop: +0.01 dB to +100.00 dB, the increment (UP/DOWN) is 0.3 dB. [dB]
*RST value	–3 dB
Response for query:	Search result in the format <Bandwidth>, <Center_Stimulus>, <Q>, <Loss>, <LBE>, <UBE> where:
<Bandwidth>	n-dB bandwidth of the bandpass/bandstop region, where n is the selected <i>x dB Bandwidth</i> (setting command CALCulate<Chn>:MARKer<Mk>:BWIDth <x_dB_Bandwidth>).
<Center_Stimulus>	Stimulus frequency at the center of the bandpass/bandstop region (the stimulus value of marker no. 4).
<Q>	Quality factor, i.e. the ratio between the center frequency and the 3-dB bandwidth
<Loss>	Loss at the center of the bandpass/bandstop region (the response value of marker no. 4 at the time of the bandfilter search).
<LBE>	Lower band edge
<UBE>	Upper band edge
Range [def. unit]	Depending on the measurement parameter. [units depending on the sweep type and the marker format; see CALCulate<Chn>:MARKer<Mk>:FORMat]
*RST value	–
SCPI, Command Types	Device-specific, query only.
Example:	<pre>CALC:MARK:FUNC:BWID:MODE BST</pre> Select a bandstop filter search. <pre>CALC:MARK:FUNC:BWID:GMC OFF</pre> Use the arithmetic mean value of lower and upper band edge to calculate the

center of the bandstop region.

```
CALC:MARK:FUNC:EXEC BFIL
```

Initiate the bandpass filter search for the current trace. Create markers 1 to 4.

```
CALC:MARK:SEAR:BFIL:RES ON
```

Display the marker info field in the diaram area.

```
CALC:MARK:BWID 6
```

Select a 6-dB bandwidth for the bandstop.

```
CALC:MARK:BWID?
```

Query the results of the bandfilter search. An error message is generated if the bandfilter search fails so that no valid results are available.

CALCulate<Chn>:MARKer<Mk>:COUPled[:STATe] <Boolean>

Couples the markers of all traces in the active setup to the markers of trace no. <Chn>, provided that they have the same sweep type ([SENSe<Chn>:FUNCTion](#)).

<Chn> Channel number used to identify the active trace. The effects of marker coupling depend on the active trace number; see [Coupled Markers](#) in the GUI Reference chapter.

<Mk> Marker number in the range 1 to 10. This suffix is ignored because the command affects all markers.

<Boolean> ON | OFF - Enables or disables marker coupling.

***RST value** OFF

SCPI, Command Types Device-specific, command or query.

Example:

Suppose that the active setup contains two traces Trc1 and Trc2, assigned to channels no. 1 and 2, respectively.

```
:CALC1:PAR:SEL 'TRC1'; :CALC1:MARK1 ON; MARK2 ON
```

Select Trc1 as the active trace and create the two markers no. 1 and 2. The default position for both markers is the center of the sweep range.

```
CALC1:MARK:COUP ON
```

Create two markers no. 1 and 2 on Trc 2 and couple them to the markers of Trc 1.

CALCulate<Chn>:MARKer<Mk>:DELTA[:STATe] <Boolean>

Switches the delta mode for marker <Mk> on trace no. <Chn> on or off. The marker must be created before using [CALCulate<Chn>:MARKer<Mk>\[:STATe\]](#) ON. If the active trace contains no reference marker, the command also creates a reference marker.

<Chn> Channel number used to identify the active trace.

<Mk> Marker number in the range 1 to 10.

<Boolean> ON | OFF - Enables or disables the delta mode.

***RST value** OFF

SCPI, Command Types Device-specific, command or query.

Example:

Suppose that the active setup contains an active trace no. 1.

```
CALC:MARK ON
```

Create marker no. 1 and set it to the center of the sweep range.

```
CALC:MARK:DELT ON
```

Create a reference marker at the center of the sweep range and set marker 1 to delta mode.

CALCulate<Chn>:MARKer<Mk>:FORMat MLINear | MLOGarithmic | PHASe | POLar | COMPLex | GDELay | REAL | IMAGinary | SWR | LINPhase | LOGPhase | IMPedance | ADMittance | MDB | MLPHase | MDPHase | DEFault

Defines the output format for the (complex) value of marker <Mk> on trace no. <Chn>.

Note: The formats of the markers assigned to a trace are independent of each other and of the trace format settings; see [CALCulate<Chn>:FORMat](#).

<Chn> Channel number used to identify the active trace.

<Mk> Marker number in the range 1 to 10.

Parameters See list of parameters below.

***RST value** DEFault

SCPI, Command Types Device-specific, command or query

Example:

Suppose that the active setup contains an active trace no. 1.

```
CALC:MARK ON; :CALC:MARK:FORM?
```

Create marker 1, assign it to the trace no. 1 and query its format. The analyzer returns the format of the active trace.

Assume that the marker result is given by the complex quantity $z = x + jy$. The meaning of the parameters is as follows:

DEFault	The format of the trace no. <Chn> (MLOG after *RST); see CALCulate<Chn>:FORMat .
MLINear	$ z = \sqrt{x^2 + y^2}$
MLOGarithmic ZVR ☒ MDB	$ z = \sqrt{x^2 + y^2}$ $\text{dB Mag}(z) = 20 * \log z \text{ dB}$
PHASe	$\varphi(z) = \arctan(\text{Im}(z) / \text{Re}(z))$
POLar ZVR ☒ COMPLex	x, y (Real and Imag)

GDElay	Group Delay, $-\mathrm{d}\phi(z)/\mathrm{d}\Omega$
REAL	x
IMAGinary	y
SWR	Standing Wave Ratio, $\mathrm{SWR} = (1 + z) / (1 - z)$
LINPhase ZVR ☒ MLPhase	Lin Mag and Phase, $ z $, $\arctan(\mathrm{Im}(z) / \mathrm{Re}(z))$
LOGPhase ZVR ☒ MDPhase	dB Mag and Phase, $20 * \log z $ dB, $\arctan(\mathrm{Im}(z) / \mathrm{Re}(z))$
IMPedance	R, X, L or C (depending on sign(X))
ADMittance	G, B, L/C (depending on sign(X))

CALCulate<Chn>:MARKer<Mk>:FUNCTION:BWIDth <x dB Bandwidth>

[Deprecated command]

Defines the bandfilter level, i.e. the minimum excursion for the bandpass and bandstop peaks.



Use CALCulate<Chn>:MARKer<Mk>:BWIDth to set the *x dB Bandwidth* and query the results of a bandfilter search. Note the sign convention for input values.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10. This numeric suffix is ignored and may be set to any value because the bandfilter search functions always use markers M 1 to M 4.
<x dB Bandwidth>	<i>x dB Bandwidth</i> parameter
Range [def. unit]	0.01 dB to 100.00 dB, the increment (UP. DOWN) is 0.3 dB. [dB]
*RST value	3 dB.
SCPI, Command Types	Device-specific, command or query.
Example:	See CALCulate<Chn>:MARKer<Mk>:BWIDth.

CALCulate<Chn>:MARKer<Mk>:FUNCTION:BWIDth:GMCenter <Boolean>

Specifies how the center frequency of a bandfilter search is calculated.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10. This numeric suffix is ignored and may be set to any value because the bandfilter search functions always use markers M 1 to M 4.
<Boolean>	ON – use geometric mean of lower and upper band edge OFF – use arithmetic mean value
*RST value	n/a (*RST does not affect the calculation rule; the factory setting is ON/geometric mean)

**SCPI,
Command
Types**

Device-specific, command or query.

Example: See `CALCulate<Chn>:MARKer<Mk>:BWIDth`.

CALCulate<Chn>:MARKer<Mk>:FUNCtion:BWIDth:MODE BPASs | BStOp | BPRMarker | BSRMarker | BPABsolute | BSABsolute

Selects the bandfilter search mode.

<Chn> Channel number used to identify the active trace

<Mk> Marker number in the range 1 to 10. This numeric suffix is ignored and may be set to any value because the bandfilter search functions always use markers M 1 to M 4.

Parameters Bandfilter search type:
 BPASs: Bandpass Search Ref to Max
 BStOp: Bandstop Search Ref to Max
 BPRMarker: Bandpass Search Ref to Marker
 BSRMarker: Bandstop Search Ref to Marker
 BPABsolute: Bandpass Absolute Level
 BSABsolute: Bandstop Absolute Level

***RST value** BPASs

**SCPI,
Command
Types** Device-specific, command or query.

Example: See `CALCulate<Chn>:MARKer<Mk>:BWIDth`.

CALCulate<Chn>:MARKer<Mk>:FUNCtion:CENTer

Sets the center of the sweep range equal to the stimulus value of the marker <Mk> on trace no. <Chn>.

<Chn> Channel number used to identify the active trace

<Mk> Marker number in the range 1 to 10

Range [def. unit] – [–]

***RST value** –

**SCPI, Command
Types** Device-specific, no query.

Example: `*RST; :CALC:MARK ON`

Create marker 1 in the center of the current sweep range and assign it to trace no. 1.

`CALC:MARK:FUNC:CENT`

Leave the sweep range unchanged.

CALCulate<Chn>:MARKer<Mk>:FUNCtion:DELTA:STATe <Boolean>

[Deprecated command]

Switches the delta mode for marker <Mk> on trace no. <Chn> on or off.

Note: This command is the ZVR-compatible equivalent of

[CALCulate<Chn>:MARKer<Mk>:DELTA\[:STATe\]](#).

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10
<Boolean>	ON OFF - Enables or disables the delta mode
*RST value	OFF
SCPI, Command Types	Device-specific, command or query.

CALCulate<Chn>:MARKer<Mk>:FUNCtion:DOMain:USER <range_no>

Assigns a search range no. <numeric_value> to marker no <Mk> and selects the search range, e.g. in order to display range limit lines or define the start and stop values.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10
<range_no>	Number of the search range
Range [def. unit]	0 – fixed full span search range (equal to the sweep range) 1 to 10 – user-definable search ranges; see example
*RST value	0 (reserved for full span search range)
SCPI, Command Types	Device-specific, command or query.

Example:

```
CALC1:MARK1:FUNC:DOM:USER 2
```

Select the search range no. 2, assigned to marker no. 1 and trace no. 1.

```
CALC:MARK:FUNC:DOM:USER:START 1GHz
```

Set the start frequency of the search range to 1 GHz.

```
CALC:MARK:FUNC:DOM:USER:STOP 1.2GHz
```

Set the stop frequency of the search range to 1.2 GHz.

CALCulate<Chn>:MARKer<Mk>:FUNCtion:DOMain:USER:SHOW <Boolean>

Displays or hides range limit lines for the search range selected via

[CALCulate<Chn>:MARKer<Mk>:FUNCtion:DOMain:USER <range_no>](#).

This command is **not** available if the search range is *Full Span* (<range_no> = 0).

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10
<Boolean>	ON OFF - Range limit lines on or off
*RST value	OFF

SCPI, Command Types Device-specific, command or query.

Example: See [CALCulate<Chn>:STATistics:DOMain:USER](#)

CALCulate<Chn>:MARKer<Mk>:FUNCTION:DOMain:USER:START <start_value>

Defines the start value of the search range selected via
[CALCulate<Chn>:MARKer<Mk>:FUNCTION:DOMain:USER <numeric_value>](#).

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10
<start_value>	Beginning of the search range.
Range [def. unit]	Maximum allowed sweep range, depending on the instrument model and on the sweep type. [Hz, dBm or s, depending on the sweep type]
*RST value	0 Hz
SCPI, Command Types	Device-specific, command or query.
Example:	See CALCulate<Chn>:MARKer<Mk>:FUNCTION:DOMain:USER <numeric_value>

CALCulate<Chn>:MARKer<Mk>:FUNCTION:DOMain:USER:STOP <stop_value>

Defines the stop value of the search range selected via
[CALCulate<Chn>:MARKer<Mk>:FUNCTION:DOMain:USER <numeric_value>](#).

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10
<stop_value>	End of the search range.
Range [def. unit]	Maximum allowed sweep range, depending on the instrument model and on the sweep type. [Hz, dBm or s, depending on the sweep type]
*RST value	0 Hz
SCPI, Command Types	Device-specific, command or query.
Example:	See CALCulate<Chn>:MARKer<Mk>:FUNCTION:DOMain:USER <numeric_value>

CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute MAXimum | MINimum | RPEak | LPEak | NPEak | TARGET | LTARGET | RTARGET | BFILter | SPRogress

Selects a search mode for marker no. <Mk> and initiates the search. The marker must be created before using [CALCulate<Chn>:MARKer<Mk>\[:STATe\] ON](#) (exception: bandfilter search).

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10. For a bandfilter search (BFILter) this numeric suffix is ignored and may be set to any value because the bandfilter search functions always use markers M 1 to M 4.

Parameters See list of parameters below.

*RST value –

SCPI, Command Types Device-specific, no query.

Example:

Suppose that the active setup contains an active trace no. 1.

```
CALC:MARK ON
```

Create marker 1 and assign it to trace no. 1.

```
CALC:MARK:FUNC:EXEC MAX; RES?
```

Move the created marker to the absolute maximum of the trace and query the stimulus and response value of the search result.

The analyzer provides the following search modes:

Mode	Find...
MAXimum	Absolute maximum in the search range (see CALCulate<Chn>:MARKer<Mk>:FUNCTION:DOMAIN:USER<numeric_value>)
MINimum	Absolute maximum in the search range
RPEak	Next valid peak to the right of the current marker position
LPEak	Next valid peak to the left
NPEak	Next highest or lowest value among the valid peaks (next peak)
TARGETet	Target value (see CALCulate<Chn>:MARKer<Mk>:TARGET)
RTARGETet	Next target value to the right of the current marker position
LTARGETet	Next target value to the left
BFILTER	Bandfilter search. The results are queried using CALCulate<Chn>:MARKer<Mk>:BWIDth .
SPROgress	Sweep progress (marker tracking)

CALCulate<Chn>:MARKer<Mk>:FUNCTION:RESult?

Returns the result (stimulus and response value) of a search started by means of [CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute](#). The search must be executed before the command is enabled.

<Chn> Channel number used to identify the active trace

<Mk> Marker number in the range 1 to 10. This numeric suffix is ignored and may be set to any value.

Response The result information depends on the search mode of the preceding marker search.
In case a bandfilter search was executed, the marker number is ignored and the query returns the following list of values:
<bandwidth>,
<Center freq>,
<Lower Band Edge Stimulus>,

	<Lower Band Edge Response>, <Extreme Stimulus>, <Extreme Response>, <Upper Band Edge Stimulus>, <Upper Band Edge Response> For all other search modes the marker number identifies a particular marker of the active trace and the query returns the value pair <stimulus>, <response>.
Range [def. unit]	Depending on the measurement parameter. [unit depending on the sweep type and the marker format; see CALCulate<Chn>:MARKer<Mk>:FORMat]
*RST value	–
SCPI, Command Types	Device-specific, query only
Example:	See CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute .

CALCulate<Chn>:MARKer<Mk>:FUNCTION[:SElect] MAXimum | MINimum | RPEak | LPEak | NPEak | TARGET | LTARGET | RTARGET | BFILTER | SPROgress

[Deprecated command]

Selects a search mode for marker no. <Mk>, which can then be initiated using one of the [CALCulate<Chn>:MARKer<Mk>:SEARCH...](#), [CALCulate<Chn>:MARKer<Mk>:MAXimum](#) or [CALCulate<Chn>:MARKer<Mk>:MINimum](#) functions. The marker must be created before using [CALCulate<Chn>:MARKer<Mk>\[:STATE\] ON](#).

Note: This command is not needed except for compatibility with ZVR programs. Use [CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute](#) to select a search mode and at the same time initiate the search. The [CALCulate<Chn>:MARKer<Mk>:SEARCH...](#), [CALCulate<Chn>:MARKer<Mk>:MAXimum](#) or [CALCulate<Chn>:MARKer<Mk>:MINimum](#) functions also select the search mode.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10. For a bandfilter search (BFILTER) this numeric suffix is ignored and may be set to any value because the bandfilter search functions always use markers M 1 to M 4.

Parameters See list of parameters below

*RST value –

SCPI, Command Types Device-specific, command or query

The analyzer provides the following search modes:

Mode	Selected search mode
MAXimum	Absolute maximum in the search range (see CALCulate<Chn>:MARKer<Mk>:FUNCTION:DOMAIN:USER <numeric_value>)
MINimum	Absolute maximum in the search range
RPEak	Next valid peak to the right of the current marker position
LPEak	Next valid peak to the left
NPEak	Next highest value among the valid peaks

TARGet	Target value (see CALCulate<Chn>:MARKer<Mk>:TARget)
RTARget	Next target value to the right of the current marker position
LTARget	Next target value to the left
BFILter	Bandfilter search. Bandfilter search. The results are queried using CALCulate<Chn>:MARKer<Mk>:BWIDth .
SPRogress	Sweep progress (marker tracking)

CALCulate<Chn>:MARKer<Mk>:FUNCtion:STARt

Sets the beginning (start) of the sweep range equal to the stimulus value of the marker <Mk> on trace no. <Chn>.

<Chn> Channel number used to identify the active trace

<Mk> Marker number in the range 1 to 10

Range [def. unit] – [-]

*RST value –

SCPI, Command Types Device-specific, no query

Example:

```
*RST; :CALC:MARK ON
```

Create marker 1 in the center of the current sweep range and assign it to trace no. 1.

```
CALC:MARK:FUNC:STAR
```

Divide the sweep range in half, starting at the current marker position.

CALCulate<Chn>:MARKer<Mk>:FUNCtion:STOP

Sets the end (stop) of the sweep range equal to the stimulus value of the marker <Mk> on trace no. <Chn>.

<Chn> Channel number used to identify the active trace

<Mk> Marker number in the range 1 to 10

Range [def. unit] – [-]

*RST value –

SCPI, Command Types Device-specific, no query

Example:

```
*RST; :CALC:MARK ON
```

Create marker 1 in the center of the current sweep range and assign it to trace no. 1.

```
CALC:MARK:FUNC:STOP
```

Divide the sweep range in half, ending at the current marker position.

CALCulate<Chn>:MARKer<Mk>:FUNction:TARGET <search_value>

[Deprecated command]

Defines the target value for the target search of marker no. <Mk>, which can be activated using `CALCulate<Chn>:MARKer<Mk>:FUCTION:EXECute TARGET`.

Note: This command is the ZVR-compatible equivalent of `CALCulate<Chn>:MARKer<Mk>:TARget`.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10
<search_value>	Target search value of marker no. <Mk>.
Range [def. unit]	Depending on the format of the active trace (<code>CALCulate<Chn>:FORMat</code>). For a dB Mag trace the range is –300 dB to +200 dB, the increment (UP. DOWN) is 0.1 dB. [dB, deg etc., depending on the trace format]
*RST value	Depending on the trace format; 0 dB for a dB Mag trace
SCPI, Command Types	Device-specific, command or query

CALCulate<Chn>:MARKer<Mk>:MAXimum

[Deprecated command]

Selects a search mode for marker no. <Mk> and initiates a maximum search. The marker must be created before using `CALCulate<Chn>:MARKer<Mk>[:STATe] ON`.

Note: This command is the ZVR-compatible equivalent of `CALCulate<Chn>:MARKer<Mk>:FUNction:EXECute MAXimum`.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10
Range [def. unit]	– [–]
*RST value	–
SCPI, Command Types	Device-specific, no query

CALCulate<Chn>:MARKer<Mk>:MINimum

[Deprecated command]

Selects a search mode for marker no. <Mk> and initiates a minimum search. The marker must be created before using `CALCulate<Chn>:MARKer<Mk>[:STATe] ON`.

Note: This command is the ZVR-compatible equivalent of `CALCulate<Chn>:MARKer<Mk>:FUNction:EXECute MINimum`.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10
Range [def. unit]	– [–]
*RST value	–
SCPI, Command Types	Device-specific, no query

CALCulate<Chn>:MARKer<Mk>:MODE CONTInuous | DISCrete

Sets marker no. <Mk> to continuous or discrete mode. The marker doesn't have to be created before (CALCulate<Chn>:MARKer<Mk>[:STATe] ON), the mode can be assigned in advance.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10
Parameters	CONTInuous – marker can be positioned on any point of the trace, and its response values are obtained by interpolation. DISCrete – marker can be set to discrete sweep points only.
*RST value	CONT

SCPI, Command Types Device-specific, command or query.

Example:

Suppose that the active setup contains an active trace no. 1.

```
CALC:MARK:MODE DISC; :CALC:MARK2:MODE CONT
```

Create marker 1 in discrete mode and marker 2 in continuous mode.

```
CALC:MARK ON; MARK2 ON
```

Display the two markers. Due to the different modes the horizontal positions can be different.

CALCulate<Chn>:MARKer<Mk>:NAME '<name>'

Defines a name for marker no. <Mk>. The marker doesn't have to be created before (CALCulate<Chn>:MARKer<Mk>[:STATe] ON), the name can be assigned in advance.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10
'<name>'	Marker name (string parameter)
*RST value	'M 1' for marker no. 1 etc.

SCPI, Command Types Device-specific, command or query

Example:

Suppose that the active setup contains an active trace no. 1.

```
CALC:MARK:NAME '&$% 1'; :CALC:MARK ON
```

Create marker 1 named &\$% 1 and display the marker .

```
CALC:MARK:REF ON; :CALC:MARK:REF:NAME 'Reference'
```

Display the reference marker and rename it *Reference*.

CALCulate<Chn>:MARKer<Mk>:REFerence:MODE CONTInuous | DISCrete

Sets the reference marker to continuous or discrete mode. The marker doesn't have to be created before (CALCulate<Chn>:MARKer<Mk>:REFerence[:STATe] ON), the mode can be assigned in advance.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10. This numeric suffix is ignored and may be set to any value.
Parameters	CONTinuous – marker can be positioned on any point of the trace, and its response values are obtained by interpolation. DISCrete – marker can be set to discrete sweep points only.
*RST value	CONT
SCPI, Command Types	Device-specific, command or query
Example:	Suppose that the active setup contains an active trace no. 1. <pre>CALC:MARK:REF:MODE DISC; :CALC:MARK2:REF:MODE CONT</pre> Create the reference marker in discrete mode and marker 2 in continuous mode. <pre>CALC:MARK:REF ON; :CALC:MARK2 ON</pre> Display the two markers. Due to the different modes the horizontal positions can be different.

CALCulate<Chn>:MARKer<Mk>:REFerence:NAME '<name>'

Defines a name for the reference marker. The marker doesn't have to be created before ([CALCulate<Chn>:MARKer<Mk>:REFerence\[:STATe\] ON](#)), the name can be assigned in advance.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10. This numeric suffix is ignored and may be set to any value.
'<name>'	Marker name (string parameter)
*RST value	'R'
SCPI, Command Types	Device-specific, command or query
Example:	See CALCulate<Chn>:MARKer<Mk>:NAME .

CALCulate<Chn>:MARKer<Mk>:REFerence[:STATe] <Boolean>

Creates the reference marker and assigns it to trace no. <Chn>.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10. This numeric suffix is ignored and may be set to any value.
<Boolean>	ON OFF - Creates or removes the marker.
*RST value	OFF

SCPI, Command Types Device-specific, command or query

Example:

Suppose that the active setup contains an active trace no. 1.

```
CALC:MARK:REF ON; :CALC:MARK ON
```

Create the reference marker and marker 1 and assign them to trace no. 1. The default position of both markers is the center of the sweep range.

CALCulate<Chn>:MARKer<Mk>:REFerence:TYPE NORMal | FIXed

Sets the reference to normal or fixed mode. The marker must be created before using [CALCulate<Chn>:MARKer<Mk>:REFerence\[:STATe\] ON](#).

<Chn> Channel number used to identify the active trace

<Mk> Marker number in the range 1 to 10. This numeric suffix is ignored and may be set to any value.

Parameters NORMal – response value changes according to the measurement result.
FIXed – marker keeps its current response value.

***RST value** NORMal

SCPI, Command Types Device-specific, command or query

Example:

```
CALC:MARK:REF ON; :CALC:MARK:REF:TYPE FIX
```

Create the reference marker and display it in the center of the sweep range as a fixed marker.

```
CALC:MARK:REF:X 1GHz
```

Shift the marker horizontally. The response value remains fixed.

CALCulate<Chn>:MARKer<Mk>:REFerence:X <stimulus>

Defines the stimulus (in Cartesian diagrams: x-axis) value of the reference marker, which can (but doesn't have to) be displayed using [CALCulate<Chn>:MARKer<Mk>:REFerence\[:STATe\] ON](#).

<Chn> Channel number used to identify the active trace

<Mk> Marker number in the range 1 to 10. This numeric suffix is ignored and may be set to any value.

<stimulus> Stimulus value of the reference marker

Range [def. unit] –9.9E+11 Hz to +9.9E+11 Hz [Hz] (for frequency sweeps)
–999 dBm to +999 dBm [dBm] (for power sweeps)
0 s to 127500 s [s] (for time and CW mode sweeps)

***RST value** 0 Hz

SCPI, Command Types Device-specific, command or query

Example:

Suppose that the active setup contains an active trace no. 1 and that the sweep

range for a frequency sweep starts at 1 GHz.

```
CALC:MARK:REF ON
```

Create the reference marker and display it in the center of the sweep range.

```
CALC:MARK:REF:X 1GHz
```

Set the reference marker to the beginning of the sweep range.

CALCulate<Chn>:MARKer<Mk>:REFerence:Y?

Returns the response (in Cartesian diagrams: y-axis) value of the reference marker. The reference marker must be created before using `CALCulate<Chn>:MARKer<Mk>:REFerence[:STATe] ON`.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10. This numeric suffix is ignored and may be set to any value.
Response	Response value of the reference marker
Range [def. unit]	Depending on the measured quantity. [unit depending on the marker format; see <code>CALCulate<Chn>:MARKer<Mk>:FORMat</code>]
*RST value	–
SCPI, Command Types	Device-specific, query only
Example:	

Suppose that the active setup contains an active trace no. 1.

```
CALC:MARK:REF ON
```

Create the reference marker and display it in the center of the sweep range.

```
CALC:MARK:REF:Y?
```

Query the measurement value at the reference marker position.

CALCulate<Chn>:MARKer<Mk>:SEARch:BFILter:RESult[:STATe] <Boolean>

Shows or hides the bandfilter search results in the diagram area.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10. This numeric suffix is ignored and may be set to any value.
<Boolean>	ON - Show the bandfilter search results. If no bandfilter search has been initiated before (<code>CALCulate<Chn>:MARKer<Mk>:FUNctioN:EXECute BFILter</code>), nothing is displayed. OFF - hide the bandfilter search results.
*RST value	OFF
SCPI, Command Types	Device-specific, command or query

Example:See `CALCulate<Chn>:MARKer<Mk>:BWIDth`.**CALCulate<Chn>:MARKer<Mk>:SEARch[:IMMediate]**

[Deprecated command]

Initiates a search according to the search function selected with `CALCulate<Chn>:MARKer<Mk>:FUNCTION[:SElect]`. The marker must be created before using `CALCulate<Chn>:MARKer<Mk>[:STATe] ON`.

Note: Together with `CALCulate<Chn>:MARKer<Mk>:FUNCTION[:SElect]` this command is the ZVR-compatible equivalent of `CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute ....`

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10. For a bandfilter search (<code>BFIltEr</code>) this numeric suffix is ignored and may be set to any value because the bandfilter search functions always use markers M 1 to M 4.
Range [def. unit]	– [–]
*RST value	–
SCPI, Command Types	Device-specific, no query

CALCulate<Chn>:MARKer<Mk>:SEARch:LEFT

[Deprecated command]

Selects a search mode for marker no. <Mk> and initiates a search for the next valid peak to the left. The marker must be created before using `CALCulate<Chn>:MARKer<Mk>[:STATe] ON`.

Note: This command is the ZVR-compatible equivalent of `CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute LPEak`.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10
Range [def. unit]	– [–]
*RST value	–
SCPI, Command Types	Device-specific, no query

CALCulate<Chn>:MARKer<Mk>:SEARch:NEXT

[Deprecated command]

Selects a search mode for marker no. <Mk> and initiates a search for the next highest or lowest value among the valid peaks. The marker must be created before using `CALCulate<Chn>:MARKer<Mk>[:STATe] ON`.

Note: This command is the ZVR-compatible equivalent of

CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute NPEak.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10
Range [def. unit]	– [–]
*RST value	–
SCPI, Command Types	Device-specific, no query

CALCulate<Chn>:MARKer<Mk>:SEARch:RIGHT

[Deprecated command]

Selects a search mode for marker no. <Mk> and initiates a search for the next valid peak to the right. The marker must be created before using *CALCulate<Chn>:MARKer<Mk>[:STATE] ON*.

Note: This command is the ZVR-compatible equivalent of

CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute RPEak.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10
Range [def. unit]	– [–]
*RST value	–
SCPI, Command Types	Device-specific, no query

CALCulate<Chn>:MARKer<Mk>:SEARch:TRACking <Boolean>

Enables or disables the marker tracking mode for marker no. <Mk>. Tracking mode causes the active minimum/maximum or target search of the active marker to be repeated after each sweep. A marker must be created and a search mode must be active (*CALCulate<Chn>:MARKer<Mk>:FUNCTION:EXECute ...*) to use this command.



If the current search mode is a bandfilter search this command enables or disables bandfilter tracking.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10. For a bandfilter search (BFIltEr) this numeric suffix is ignored and may be set to any value because the bandfilter search functions always use markers M 1 to M 4.
<Boolean>	ON OFF - Enables or disables the marker tracking mode.
*RST value	OFF
SCPI, Command Types	Device-specific, command or query

Example:

Suppose that the active setup contains an active trace no. 1.

```
CALC:MARK ON; :CALC:MARK:FUNC:EXEC MAXimum
```

Create marker no. 1 and assign them to trace no. 1. Activate a maximum search

for marker no. 1.

```
CALC:MARK:SEAR:TRAC ON
```

Enable the tracking mode for the created marker.

CALCulate<Chn>:MARKer<Mk>[:STATe] <Boolean>

Creates the marker numbered <Mk> and assigns it to trace no. <Chn>.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10. If unspecified the numeric suffix is set to 1.
<Boolean>	ON OFF - Creates or removes the marker.
*RST value	OFF

SCPI, Command Types Device-specific, command or query

Example:

Suppose that the active setup contains an active trace no. 1.

```
CALC:MARK ON; MARK2 ON
```

Create markers 1 and 2 and assign them to trace no. 1. The default position of both markers is the center of the sweep range.

CALCulate<Chn>:MARKer<Mk>:TARGet <search_value>

Defines the target value for the target search of marker no. <Mk>, which can be activated using [CALCulate<Chn>:MARKer<Mk>:FUCTion:EXECute TARGet](#).

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10
<search_value>	Target search value of marker no. <Mk>
Range [def. unit]	Depending on the format of the active trace (CALCulate<Chn>:FORMat). For a dB Mag trace the range is –300 dB to +200 dB, the increment (UP. DOWN) is 0.1 dB. [dB, deg etc., depending on the trace format]
*RST value	Depending on the trace format; 0 dB for a dB Mag trace

SCPI, Command Types Device-specific, command or query

Example:

```
CALC:MARK ON
```

Create marker no. 1 and display it in the center of the sweep range.

```
:CALC:MARK:TARG -10; FUNC:EXEC TARG
```

Define a target search value of –10 dB and start the target search.

```
CALC:MARK:X?
```

Query the stimulus value corresponding to the target search result.

CALCulate<Chn>:MARKer<Mk>:TYPE NORMAL | FIXEd

Sets marker no. <Mk> to normal or fixed mode. The marker must be created before using `CALCulate<Chn>:MARKer<Mk>[:STATe] ON`.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10
Parameters	NORMAL – response value changes according to the measurement result FIXEd – marker keeps its current response value
*RST value	NORMAL
SCPI, Command Types	Device-specific, command or query
Example:	<pre>CALC:MARK ON; :CALC:MARK:TYPE FIX</pre>

Create marker 1 and display it in the center of the sweep range as a fixed marker.

```
CALC:MARK:X 1GHz
```

Shift the marker horizontally. The response value remains fixed.

CALCulate<Chn>:MARKer<Mk>:X <stimulus_value>

Defines the stimulus (in Cartesian diagrams: x-axis) value of the marker no. <Mk>, which can (but doesn't have to) be created using `CALCulate<Chn>:MARKer<Mk>[:STATe] ON`.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10
<stimulus_value>	Stimulus value of marker no. <Mk>
Range [def. unit]	–9.9E+11 Hz to +9.9E+11 Hz [Hz] (for frequency sweeps) –999 dBm to +999 dBm [dBm] (for power sweeps) 0 s to 127500 s [s] (for time and CW mode sweeps)
*RST value	0 Hz
SCPI, Command Types	Device-specific, command or query
Example:	<pre>CALC:MARK ON</pre>

Suppose that the active setup contains an active trace no. 1 and the sweep range for a frequency sweep starts at 1 GHz.

```
CALC:MARK ON
```

Create marker no. 1 and display it in the center of the sweep range.

```
CALC:MARK:X 1GHz
```

Set the marker to the beginning of the sweep range.

CALCulate<Chn>:MARKer<Mk>:Y?

Returns the response (in Cartesian diagrams: y-axis) value of marker no. <Mk>. The marker must be created before using `CALCulate<Chn>:MARKer<Mk>[:STATe] ON`.

<Chn>	Channel number used to identify the active trace
<Mk>	Marker number in the range 1 to 10
Response	Response value of marker no. <Mk>
Range [def. unit]	Depending on the measured quantity. [unit depending on the marker format; see CALCulate<Chn>:MARKer<Mk>:FORMat]
*RST value	–
SCPI, Command Types	Device-specific, query only
Example:	Suppose that the active setup contains an active trace no. 1. <pre>CALC:MARK ON</pre> Create marker no. 1 and display it in the center of the sweep range. <pre>CALC:MARK:Y?</pre> Query the measurement value at the marker position.

CALCulate<Chn>:MATH...

This subsystem permits processing of measured data in numerical expression format. The operators are +, -, *, / and use of constants and data arrays are permitted.

CALCulate<Chn>:MATH[:EXPRession][:DEFine] <expression>

[Deprecated command]

Defines a simple mathematical relation between traces. To calculate and display the new mathematical trace, the mathematical mode must be switched on ([CALCulate<Chn>:MATH:STATe ON](#)).



This command places some restrictions on the mathematical expression and the operands. Use [CALCulate<Chn>:MATH\[:EXPRession\]:SDEFine](#) to define general expressions.

<Chn>	Channel number used to identify the active trace. If unspecified the numeric suffix is set to 1.
<expression>	(<operand1><operator1><operand2>[<operator2><operand3>]) The expression must be enclosed in brackets.
Parameters	Operands: See list of trace names in section TRACe Operators: +, -, *, /
*RST value	–
SCPI, Command Types	Confirmed, no query. The defined expression can be queried using CALCulate<Chn>:MATH[:EXPRession]:SDEFine?
Example:	<pre>*RST;:CALC:MATH:MEM</pre> Copy the current state of the default trace <i>Trc1</i> to a memory trace named 'Mem2[Trc1]'. The memory trace is not displayed. <pre>CALC:MATH (CH1DATA / MDATA2)</pre>

Define a mathematical trace, dividing the data trace by the stored memory trace.
The mathematical trace is not displayed

CALC:MATH:STAT ON

Display the mathematical trace instead of the active data trace.

CALCulate<Chn>:MATH[:EXPRession]:SDEFine '<string>'

Defines a general mathematical relation between traces. To calculate and display the new mathematical trace, the mathematical mode must be switched on (CALCulate<Chn>:MATH:STATe ON).

<Chn>	Channel number used to identify the active trace.
'<string>'	String parameter for the mathematical expression, enclosed in brackets. The string format must correspond to an allowed string in the Define Math dialog.
Parameters	Operands, operators and functions; see table below.
*RST value	–
SCPI, Command Types	Device-specific, command or query. This command also queries a mathematical expression defined via CALCulate<Chn>:MATH[:EXPRession] [:DEFine].
Example:	*RST; :CALC:MATH:MEM Copy the current state of the default trace <i>Trc1</i> to a memory trace named 'Mem2[Trc1]'. The memory trace is not displayed. CALC:MATH:SDEF 'Trc1 / Mem2[Trc1]' Define a mathematical trace, dividing the data trace by the stored memory trace. The mathematical trace is not displayed. CALC:MATH:STAT ON Display the mathematical trace instead of the active data trace.

Expressions defined via CALCulate<Chn>:MATH[:EXPRession]:SDEFine may contain the following elements:

Type	Complete List	Description
Operands	<Trace name> activeTrc Mem[activeTrc]	All traces and memory traces of the active setup Active trace Active memory trace assigned to the active trace
Constants	e, pi 1, -1.2, 8e9 1 + 2j, 2 + 1e-9j	Constants Real values in decimal or exponential format Complex numbers
Operators	- + , - , * , / , ^	Basic arithmetic operations; ^ for exponentiation
Functions	linMag (), dBMag (), Arg (), Re (), Im (), log (), ln (), tan (), atan (), sin (), asin (), cos (), acos (), Min (... , ...), Max (... , ...)	Mathematical functions with one or two arguments
Special Functions	StimVal	Current stimulus value (see description of operators for User Defined Math)

Type	Complete List	Description
Brackets	()	Priority of operations in complex expressions

CALCulate<Chn>:MATH:FUNCTION NORMAL | ADD | SUBTRACT | MULTIPLY | DIVIDE

Defines a simple mathematical relation between the active trace and the active memory trace to calculate a new mathematical trace and displays the mathematical trace.



This command places some restrictions on the mathematical expression and the operands. Use `CALCulate<Chn>:MATH[:EXPRESSION]:SDEFine` to define general expressions.

<Chn> Channel number used to identify the active trace.

NORMAL Math. trace = active data trace

ADD Math. trace = data + memory

SUBTRACT Math. trace = data – memory

MULTIPLY Math. trace = data * memory

DIVIDE Math. trace = data / memory

***RST value** NORMAL

SCPI, Command Types Confirmed, with query.

Example:

```
*RST; :CALC:MATH:MEM
```

Copy the current state of the default trace *Trc1* to a memory trace named 'Mem2[Trc1]'. The memory trace is not displayed.

```
CALC:MATH:FUNC DIV
```

Define a mathematical trace, dividing the data trace by the stored memory trace. The mathematical trace is displayed instead of the active data trace.

```
CALC:MATH:STAT?
```

The response is 1 (mathematical mode switched on, mathematical trace displayed).

CALCulate<Chn>:MATH:MEMorize

Copies the current state of the active data trace to a memory trace. If a mathematical trace is active, the data trace associated with the mathematical trace is copied. The memory trace is named *Mem<n>[<Data_Trace>]* where *<n>* counts all data and memory traces in the active setup in chronological order, and *<Data_Trace>* is the name of the associated (copied) data trace.

The exact function of the command depends on the number of memory traces associated to the active data trace:

- If no memory trace is associated to the active trace, a new memory trace is generated.
- If several memory traces are associated to the active trace, the current measurement data overwrites the last generated or changed memory trace.



To copy a trace to the memory without overwriting an existing memory trace or define a memory trace name, use `TRACe:COpy <memory_trc>,<data_trc>`. To copy an active mathematical trace use

TRACe:COPI:MATH <memory_trc>,<data_trc>

<Chn> Channel number used to identify the active trace.

*RST value –

SCPI, Command Types Device-specific, no query

Example:

```
*RST; :CALC:MATH:MEM
```

Copy the current state of the default trace *Trc1* to a memory trace named 'Mem2[Trc1]'. The memory trace is not displayed.

```
DISP:WIND:TRAC2:FEED 'Mem2[Trc1]'
```

Display the created memory trace in the active diagram area (diagram area no. 1).

CALCulate<Chn>:MATH:STATe <Boolean>

Activates or deactivates the mathematical mode where the mathematical trace defined via *CALCulate<Chn>:MATH[:EXPRession]:SDEFine* is calculated and displayed instead of the active data trace. The command is not valid for mathematical traces calculated via *CALCulate<Chn>:MATH:FUNCTion*.

<Chn> Channel number used to identify the active trace.

<Boolean> ON - Display the active data trace
OFF - Display the mathematical trace

*RST value OFF

SCPI, Command Types Confirmed, command or query.

Example:

```
*RST; :CALC:MATH:MEM
```

Copy the current state of the default trace *Trc1* to a memory trace named 'Mem2[Trc1]'. The memory trace is not displayed.

```
CALC:MATH:SDEF 'Trc1 / Mem2[Trc1]'
```

Define a mathematical trace, dividing the data trace by the stored memory trace. The mathematical trace is not displayed

```
CALC:MATH:STAT ON
```

Display the mathematical trace instead of the active data trace.

CALCulate<Chn>:MATH:WUNit[:STATe] <Boolean>

Controls the conversion and formatting of the mathematic expression defined via *CALCulate<Chn>:MATH[:EXPRession]:SDEFine* (see *Result is Wave Quantity* in the *User Def Math* dialog).

<Chn> Channel number used to identify the active trace.

<Boolean> ON - *Result is Wave Quantity* enabled; the analyzer assumes that the result of the mathematical expression represents a voltage.

*RST value	OFF - <i>Result is Wave Quantity</i> disabled; the analyzer assumes that the result of the mathematical expression is dimensionless. OFF
SCPI, Command Types	Device-specific, command or query.
Example:	<pre>*RST; SWE:TYPE POW</pre> Reset the instrument, activate a power sweep, and select a wave quantity a1 for the trace Trc1. <pre>CALC:PAR:SDEF 'Trc1', 'a1'</pre> Select a wave quantity a1 for the trace Trc1. <pre>DISP:WIND:TRAC:FEED 'Trc1'</pre> Display the generated trace in the active window. <pre>CALC:MATH:SDEF 'StimVal'; STAT ON</pre> Define a mathematical trace, dividing the data trace by the stored memory trace. Display the mathematical trace instead of the active data trace. <pre>CALC:MATH:WUN ON</pre> Take into account that the stimulus value is a voltage (derived from the source power) rather than a dimensionless quantity. The y-axis range of the mathematical trace now exactly corresponds to the power sweep range.

CALCulate<Ch>:PARAmeter...

This subsystem assigns names and measured quantities to traces. The commands are device-specific.

CALCulate<Ch>:PARAmeter:CATalog?

Returns the trace names and measured quantities of all traces assigned to a particular channel.

<Ch>	Channel number. If unspecified the numeric suffix is set to 1.
Response	String parameter with comma-separated list of trace names and measured quantities, e.g. 'CH4TR1, S11, CH4TR2, S12'. The measured quantities are returned according to the naming convention of CALCulate<Ch>:PARAmeter:SDEFine . The order of traces in the list reflects their creation time: The oldest trace is the first, the newest trace is the last trace in the list.
*RST value	—
SCPI, Command Types	Device-specific, query only.
Example:	<pre>CALC4:PAR:SDEF 'Ch4Tr1', 'S11'</pre> Create channel 4 and a trace named <i>Ch4Tr1</i> to measure the input reflection coefficient S11.

CALC4:PAR:CAT?

Query the traces assigned to channel 4. If *Ch4Tr1* is the only trace assigned to channel 4, the response is 'CH4TR1, S11'.

CALCulate<Ch>:PARAmeter:DEFine '<string>', S11 | ... | S44 | A | B | C | D | R1 | R2 | R3 | R4 | AB | AC | AD | BA | BC | BD | CA | CB | CD | DA | DB | DC | AR1 | ... | DR4 | R1A | ... | R4D | R1R2 | ... | R4R3, [<numeric_value>]

[Deprecated command]

Creates a trace and assigns a channel number, a name and a measured quantity to it. The trace is not displayed. To display a trace defined via `CALCulate<Ch>:PARAmeter:DEFine`, a window must be created (`DISPlay:WINDow<Wnd>[:STATe] ON`) and the trace must be assigned to this window (`DISPlay:WINDow<Wnd>:TRACe:FEED`); see example below.

Traces must be selected to become active traces; see `CALCulate:PARAmeter:SElect`.



This command has been implemented for compatibility reasons. The parameter names in this command differ from ZVA conventions; moreover the parameter list is not complete. The alternative command `CALCulate<Ch>:PARAmeter:SDEFine` uses a complete parameter list with compatible names.

<Ch>	Channel number. <Ch> may be used to reference a previously defined channel. If <Ch> does not exist, it is generated with default channel settings.
'<string>'	Trace name, e.g. 'Trc4'. See <i>Rules for trace names</i> in the Trace Manager description.
S11, ... R4R3	Measured quantity; see list of parameters below.
*RST value	—
[<numeric_value>]	Test port number, driving port for wave quantities and ratios, ignored for S-parameters.
Range [def. unit]	1 to 4 [—] (depending on instrument model)
*RST value	—
SCPI, Command Types	Device-specific, no query. <code>CALCulate<Ch>:PARAmeter:CATalog?</code> returns a list of all defined traces.

Example:

```
CALC4:PAR:DEF 'Ch4Tr1', S11
```

Create channel 4 and a trace named *Ch4Tr1* to measure the input reflection coefficient S11.

```
DISP:WIND:STAT ON
```

Create diagram area no. 1.

```
DISP:WIND:TRAC2:FEED 'CH4TR1'
```

Display the generated trace in diagram area no. 1, assigning a trace number 2.

The measured quantity is selected by means of the following keywords (the selection depends on the number of test ports of the analyzer, e.g. S44 is not available on 2-port analyzers):

S11 S12 S13 S14 S21 S22 S23 S24 S31 S32 S33 S34 S41 S42 S43 S44	S-parameters
A B C D	Wave quantities b1, b2, b3, b4 (received waves)
R1 R2 R3 R4	Wave quantities a1, a2, a3, a4 (reference waves)
AB AC AD BA BC BD CA CB CD DA dB DC	Ratio of wave quantities b1/b2, b1/b3, ... , b4/b3 (received waves only)
AR1 AR2 AR3 AR4 BR1 BR2 BR3 BR4 CR1 CR2 CR3 CR4 DR1 DR2 DR3 DR4 R1A R1B R1C R1D R2A R2B R2C R2D R3A R3B R3C R3D R4A R4B R4C R4D	Ratio of wave quantities b1/a1, b1/a2, ... , b4/a4, a1/b1, a1/b2, ..., A4/B4 (received waves to reference waves or reference waves to received waves)
R1R2 R1R3 R1R4 R2R1 R2R3 R2R4 R3R1 R3R2 R3R4 R4R1 R4R2 R4R3	Ratio of wave quantities a1/a2, a1/a3, ... , a4/a3 (reference waves only)

CALCulate<Ch>:PARAmeter:DEFine:SGRoup <log_port1>[, <log_port2>,...]

Creates the traces for all S-parameters associated with a group of logical ports (S-parameter group). The traces can be queried using [CALCulate<Ch>:DATA:SGRoup?](#)

Traces must be selected to become active traces; see [CALCulate:PARAmeter:SElect](#).



Each channel can contain a single S-parameter group only. Defining a new S-parameter group deletes the previous one. Use [CALCulate<Ch>:PARAmeter:DELeTe:SGRoup](#) to delete the current S-group explicitly.

<Ch> Channel number. <Ch> may be used to reference a previously defined channel. If <Ch> does not exist, it is generated with default channel settings.

<log_port1>... Logical (balanced or unbalanced) port numbers. The port numbers must be in ascending order, their number is limited by the test ports of the analyzer. With n logical port numbers, the command generates n^2 traces. The traces correspond to the following S-parameters:
 $S_{\langle \text{log\_port1} \rangle \langle \text{log\_port1} \rangle}, S_{\langle \text{log\_port1} \rangle \langle \text{log\_port2} \rangle} \dots S_{\langle \text{log\_port1} \rangle \langle \text{log\_port} \langle n \rangle \rangle}$
 ...
 $S_{\langle \text{log\_port} \langle n \rangle \rangle \langle \text{log\_port1} \rangle}, S_{\langle \text{log\_port} \langle n \rangle \rangle \langle \text{log\_port2} \rangle} \dots S_{\langle \text{log\_port} \langle n \rangle \rangle \langle \text{log\_port} \langle n \rangle \rangle}$
 e.g. $S_{11}, S_{12}, S_{21}, S_{22}$ for $\langle \text{log\_port1} \rangle = 1, \langle \text{log\_port2} \rangle = 2$. If only one logical port $\langle \text{log\_port1} \rangle$ is specified, a single trace with the reflection coefficient $S_{\langle \text{log\_port1} \rangle \langle \text{log\_port1} \rangle}$ is created.



Trace names

The generated traces are assigned the following trace names:

$\langle \text{Ch\_name} \rangle\_SG\_S_{\langle \text{log\_port1} \rangle \langle \text{log\_port1} \rangle},$
 $\langle \text{Ch\_name} \rangle\_SG\_S_{\langle \text{log\_port1} \rangle \langle \text{log\_port2} \rangle} \dots$
 $\langle \text{Ch\_name} \rangle\_SG\_S_{\langle \text{log\_port1} \rangle \langle \text{log\_port} \langle n \rangle \rangle}$
 ...
 $\langle \text{Ch\_name} \rangle\_SG\_S_{\langle \text{log\_port} \langle n \rangle \rangle \langle \text{log\_port1} \rangle},$

<Ch_name>_SG_S<log_port<n>><log_port2>...
 <Ch_name>_SG_S<log_port<n>><log_port<n>>,
 e.g. Ch1_SG_S11, Ch1_SG_S12, Ch1_SG_S21, Ch1_SG_S22 for <Ch_name> = Ch1, <log_port1> = 1, <log_port2> = 2.

The trace names are displayed in the [Trace Manager](#) (DISPlay:MENU:KEY:EXECute 'Trace Manager') and [Channel Manager](#) dialogs where they can be changed manually. The <Ch_name> is defined via CONFigure:CHANnel<Ch>:NAME '<Ch_name>'.
 Trace names are important for referencing the generated traces; see program example below.

Range [def. unit] 1 to 4 [-] (depending on instrument model)

*RST value NONE (see below)

SCPI, Command Types Device-specific, with query. The query returns the port numbers of the current S-parameter group, NONE if no S-parameter group has been defined.

Example:

```
CALC2:PAR:DEF:SGR 1,2
```

Create channel 2 and four traces to measure the two-port S-parameters S_{11} , S_{12} , S_{21} , S_{22} . The traces are not displayed.

```
DISP:WIND:TRAC2:FEED 'Ch2_SG_S11'
DISP:WIND:TRAC3:FEED 'Ch2_SG_S12'
DISP:WIND:TRAC4:FEED 'Ch2_SG_S21'
DISP:WIND:TRAC5:FEED 'Ch2_SG_S22'
```

Display the four traces in the diagram area no. 1.

```
INIT:CONT OFF
INIT:IMMediate *OPC
```

Perform a complete sweep to ensure the traces are completely "filled" with data.

```
CALC2:DATA:SGR? SDAT
```

Retrieve all four traces as unformatted data (real and imaginary part at each sweep point). The analyzer first returns the complete S_{11} trace, followed by the S_{12} , S_{21} , and S_{22} traces.

```
CALC2:PAR:DEL:SGR
```

Delete the previously created port group.

CALCulate<Ch>:PARAmeter:DELeTe '<trace>'

Deletes a trace with a specified trace name and channel.

<Ch> Channel number

'<trace>' Trace name, e.g. 'Trc4'. See *Rules for trace names* in the [Trace Manager](#) description.

*RST value –

SCPI, Command Types Device-specific, no query.

Example:

```
CALCulate4:PARAmeter:SDEFine 'Ch4Tr1', 'S11'
```

Create channel 4 and a trace named *Ch4Tr1* to measure the input reflection coefficient S_{11} .

```
CALCulate4:PARAmeter:CATalog?
```

Query the traces assigned to channel 4. If *Ch4Tr1* is the only trace assigned to channel 4, the response is 'CH4TR1,S11'.

```
CALCulate4:PARAmeter:SDEFine 'CH4TR2', 'S21'; SDEFine 'CH4TR3', 'S12'; SDEFine 'CH4TR4', 'S22'
```

Create three more traces for the remaining 2-port S-parameters.

```
CALCulate4:PARAmeter:DELeTe 'CH4TR1'
```

Delete the first created trace.

```
CALCulate4:PARAmeter:DELeTe:CALL
```

Delete the remaining three traces in channel 4.

```
CALCulate:PARAmeter:DELeTe:ALL
```

Delete all traces, including the default trace *Trc1* in channel 1.

CALCulate<Ch>:PARAmeter:DELeTe:ALL

Deletes all traces in all channels of the active setup, including the default trace *Trc1* in channel no. 1. The manual control screen shows "No Trace".

<Ch> Channel number. This suffix is ignored, the command affects all channels in the active setup. To delete all traces in a channel, use `CALCulate<Ch>:PARAmeter:DELeTe:CALL`.

SCPI, Command Types Device-specific, no query.

Example: See `CALCulate<Ch>:PARAmeter:DELeTe`

CALCulate<Ch>:PARAmeter:DELeTe:CALL

Deletes all traces in channel no. <Ch>.

<Ch> Channel number

SCPI, Command Types Device-specific, no query.

Example: See `CALCulate<Ch>:PARAmeter:DELeTe`

CALCulate<Ch>:PARAmeter:DELeTe:SGRoup

Deletes a group of logical ports (S-parameter group), previously defined via `CALCulate<Ch>:PARAmeter:DEFine:SGRoup`.

<Ch>	Channel number. <Ch> may be used to reference a previously defined channel. If <Ch> does not exist, it is generated with default channel settings.
*RST value	– (no query form)
SCPI, Command Types	Device-specific, no query.
Example:	See CALCulate<Ch>:PARAmeter:DEFine:SGRoup

CALCulate<Ch>:PARAmeter:MEASure '<string>', 'S11' | ... | 'S0101' | ... | 'SCD11' | ... | 'Y11' | ... | 'Z11' | ... | 'Y-S11' | ... | 'Z-S11' | ... | 'A1' | ... | 'A01' | ... | 'B1' | ... | 'B01' | ... | 'B2/A1' | ... | 'B02/A01' | ...

Assigns a measured quantity to an **existing** trace.

Note: To create a new trace and at the same time assign the attributes, use [CALCulate<Ch>:PARAmeter:SDEFine](#). To display the trace, create a digram area ([DISPlay:WINDow<Wnd>\[:STATe\] ON](#)) and assign the trace to this diagram area ([DISPlay:WINDow<Wnd>:TRACe:FEED](#)); see example below.

Traces must be selected to become active traces; see [CALCulate:PARAmeter:SElect](#). [CALCulate<Ch>:PARAmeter:CATalog?](#) returns a list of all defined traces. You can open the trace manager ([DISPlay:MENU:KEY:EXECute 'Trace Manager'](#)) to obtain an overview of all channels and traces, including the traces that are not displayed.

<Ch>	Channel number of an existing channel containing the referenced trace.
'<string>'	Trace name, e.g. 'Trc4'. See <i>Rules for trace names</i> in the Trace Manager description.
'S11', ...	Measured quantity (string variable); see list of in the CALCulate<Ch>:PARAmeter:SDEFine command description. A query of a wave quantity 'xy' returns 'xyD<n><Detector>', where <n> numbers the source (drive) port, and <Detector> denotes the detector setting (SAM for a normal (sample), RMS or PEAK for an RMS or peak detector). A query of a ratio 'x/y' returns 'xD<n>/yD<m><Detector>', where <n> and <m> number the source ports.
*RST value	–
SCPI, Command Types	Device-specific, with query (see 'S11',... parameter description above).
Example:	<pre>CALC4:PAR:SDEF 'Ch4Tr1', 'S11'</pre>

Create channel 4 and a trace named *Ch4Tr1* to measure the input reflection coefficient S11.

```
CALC4:PAR:MEAS 'Ch4Tr1', 'a1'
```

Change the measured quantity of the trace and measure the wave quantity a1.

```
CALC4:PAR:MEAS? 'Ch4Tr1'
```

Query the measured quantity. The response is 'A1D1SAM'.

CALCulate<Ch>:PARAmeter:NFIGure:CSETtings '<trace>'

Overwrites the current channel settings with the ones that were used during the active (previously performed) noise figure calibration. The referenced trace must show the noise figure of a device.

<Ch> Channel number.

'<trace>' Name of a noise figure trace, e.g. 'Trc4'. See *Rules for trace names* in the [Trace Manager](#) description.

*RST value –

SCPI, Command Types Device-specific, no query.

Example: See [Noise Figure Measurement](#) (condensed measurement example)

CALCulate<Ch>:PARAmeter:SDEFine '<trc_name>', 'S11' | ... | 'S0101' | ... | 'SCD11' | ... | 'Y11' | ... | 'Z11' | ... | 'Y-S11' | ... | 'Z-S11' | ... | 'A1' | ... | 'A01' | ... | 'B1' | ... | 'B01' | ... | 'B2/A1' | ... | 'B02/A01' | ... | 'Pmtr2D1' | ...

Creates a trace and assigns a channel number, a name and a measured quantity to it. The trace becomes the active trace in the channel but is not displayed.



To display the trace defined via `CALCulate<Ch>:PARAmeter:SDEFine`, create a diagram area (`DISPlay:WINDow<Wnd>[:STATe] ON`) and assign the trace to this area (`DISPlay:WINDow<Wnd>:TRACe:FEED`); see example below. `CALCulate<Ch>:PARAmeter:MEASure` changes the measured quantity of an existing trace.

To select an existing trace as the active trace, use `CALCulate:PARAmeter:SElect`. You can open the trace manager (`DISPlay:MENU:KEY:EXEcute 'Trace Manager'`) to obtain an overview of all channels and traces, including the traces that are not displayed.



Use `CALCulate<Ch>:PARAmeter:DEFine:SGRoup` to create traces for all S-parameters associated with a group of logical ports.

<Ch> Channel number. <Ch> may be used to reference a previously defined channel. If <Ch> does not exist, it is generated with default channel settings.

'<trc_name>' Trace name, string variable, e.g. 'Trc4'. See *Rules for trace names* in the [Trace Manager](#) description.

Trace names must be unique across all channels and diagram areas. If a trace with the selected trace name already exists, the analyzer behaves as follows:

- If the existing trace is assigned to the same channel as the new trace, it is deleted. The new trace is not automatically assigned to a diagram area; see note above.
- If the existing trace is assigned to a different channel, no new trace can be created. The analyzer returns an error message.

'S11', ... Measured quantity (string variable); see list of parameters below.

*RST value –

SCPI, Device-specific, no query. `CALCulate<Ch>:PARAmeter:MEASure?`

Command '<Trc_name>' queries the measured quantity of the trace.
Types CALCulate<Ch>:PARAmeter:CATalog? returns a list of all defined traces.

Example: CALC4:PAR:SDEF 'Ch4Tr1', 'S11'

Create channel 4 and a trace named *Ch4Tr1* to measure the input reflection coefficient S11.

DISP:WIND2:STAT ON

Create diagram area no. 2.

DISP:WIND2:TRAC:FEED 'CH4TR1'

Display the generated trace in diagram area no. 2.

The measured quantity is selected by means of the following keywords:

'S11' 'S12' ... 'S0101' ... 'S11SAM' 'S11AVG' 'S12SAM' ...	Normal mode S-parameters S<out><in>, where <out> and <in> denote the output and input port numbers of the DUT. To avoid ambiguities, <out> and <in> must be either both 1-digit numbers (e.g. 21) or both 2-digit numbers (e.g. 0201). The strings SAM and AVG appended to the wave quantities denote a normal (sample) or average detector. The observation time for average detectors is set via [SENSe<Ch>:]SWEp:DETECTOR:TIME.
'SCD11' ... 'SCD11SAM' 'SCD11AVG' ...	Mixed mode S-parameters S<mout><min>, where <mout> and <min> denote the output and input port modes. All combinations of S (single-ended, unbalanced), D (differential) and C (common) are allowed. Port numbers like for normal mode S-parameters. The strings SAM and AVG appended to the wave quantities denote a normal (sample) or average detector.
'Y11' ... 'YSS11' ... 'YCC11' ... 'YDD11' 'Z11' ... 'ZSS11' ... 'ZCC11' ... 'ZDD11' ...	Short-circuit Y-parameters and open-circuit Z-parameters with port modes and port numbers like for normal mode S-parameters*).
'Y-S11' ... 'Y-SSS11' ... 'Y-SCC11' ... 'Y-SDD11' 'Z-S11' ... 'Z-SSS11' ... 'Z-SCC11' ... 'Z-SDD11' ...	S-parameters converted to matched-circuit admittances and impedances with port modes and port numbers like for normal mode S-parameters.
'A1' ... 'A01' ... 'B1' ... 'B01' ... 'A1SAM' 'A1RMS' 'A1PEAK' 'A1AVG' ...	Wave quantities with port numbers like for normal mode S-parameters. The strings SAM, RMS, PEAK, AVG appended to the wave quantities denote a normal (sample), RMS, peak, or average detector. The observation time for RMS, peak, and average detectors is set via [SENSe<Ch>:]SWEp:DETECTOR:TIME.
'AP1' ... 'AP01' ... 'BP1' ... 'BP01' ... 'AP1SAM' 'AP1RMS' 'AP1PEAK' 'AP1AVG' ...	Primed wave quantities, e.g. for mixer delay measurements, with port numbers like for normal mode S-parameters. Strings SAM, RMS, PEAK, AVG see above.
'A1D2' ... 'A01D02' ... 'B1D2' ... 'B01D02' ... 'A1D1SAM' 'A1D1RMS' 'A1D1PEAK' 'A1D1AVG' ...	Wave quantities with port numbers and source port numbers (D<no> for drive port). The strings SAM, RMS, PEAK, AVG appended to the wave quantities denote a normal (sample), RMS, peak, or average detector.
'AP1D2' ... 'AP01D02' ... 'BP1D2' ... 'BP01D02' ... 'AP1D1SAM' 'AP1D1RMS' 'AP1D1PEAK' 'AP1D1AVG' ...	Primed wave quantities, e.g. for mixer delay measurements, with port numbers and source port numbers (D<no> for drive port). The strings SAM, RMS, PEAK, AVG appended to the wave quantities denote a normal (sample), RMS, peak, or average detector.
'A1G2' ... 'A01G02' ... 'B1G2' ... 'B01G02' ... 'A1G1SAM' 'A1G1RMS' 'A1G1PEAK' 'A1G1AVG' ...	Wave quantities with port numbers and external generator providing the stimulus signal (G<no> for generator no.). The strings SAM, RMS, PEAK, AVG appended to the wave quantities denote a normal (sample), RMS, peak, or average detector.

'AP1G2' ... 'AP01G02' ... 'BP1G2' ... 'BP01G02' ... 'AP1G1SAM' 'AP1G1RMS' 'AP1G1PEAK' 'AP1G1AVG' ...	Primed wave quantities, e.g. for mixer delay measurements, with port numbers and external generator providing the stimulus signal (G<no> for generator no.). The strings SAM, RMS, PEAK, AVG appended to the wave quantities denote a normal (sample), RMS, peak, or average detector.
'AS1D2S' ... 'AS1D2C' ... 'BS1D2S' 'AS1D2SSAM' 'AS1D2SRMS' 'AS1D2SPEAK' 'AS1D2SAVG' ...	Balanced (D, C) or single-ended (S) wave quantities with port numbers and source port numbers (D<no> for drive port) in true differential mode (option R&S ZVA-K6). The strings SAM, RMS, PEAK, AVG appended to the wave quantities denote a normal (sample), RMS, peak, or average detector.
'APS1D2S' ... 'APS1D2C' ... 'BPS1D2S' 'APS1D2SSAM' 'APS1D2SRMS' 'APS1D2SPEAK' 'APS1D2SAVG' ...	Primed balanced (D, C) or single-ended (S) wave quantities with port numbers and source port numbers (D<no> for drive port) in true differential mode (option R&S ZVA-K6). The strings SAM, RMS, PEAK, AVG appended to the wave quantities denote a normal (sample), RMS, peak, or average detector..
'B2/A1' ... 'B02/A01' ... 'B2/A1SAM' 'B2/A1RMS' 'B2/A1PEAK' 'B2/A1AVG' ...	Ratio of wave quantities with port numbers like for normal mode S-parameters, but with port 1 as driving port. The strings SAM, RMS, PEAK, AVG appended to the wave quantities denote a normal (sample), RMS, peak, or average detector.
'BP2/A1' ... 'BP02/A01' ... 'BP2/A1SAM' 'B2/AP1RMS' 'B2/AP1PEAK' 'B2/AP1AVG' ...	Ratio of primed/unprimed wave quantities with port numbers like for normal mode S-parameters. The strings SAM, RMS, PEAK, AVG appended to the wave quantities denote a normal (sample), RMS, peak, or average detector.
'B2D1/A1D1' ... 'B02D01/A01D01' ... 'B2D1/A1D1SAM' 'B2D1/A1D1RMS' 'B2D1/A1D1PEAK' 'B2D1/A1D1AVG' ...	Ratio of wave quantities with port numbers and source port numbers (D<no> for drive port). The strings SAM, RMS, PEAK, AVG appended to the wave quantities denote a normal (sample), RMS, peak, or average detector. In contrast to manual control, different drive ports for numerator and denominator wave quantity are allowed.
'BP2D1/A1D1' ... 'BP02D01/A01D01' ... 'BP2D1/A1D1SAM' 'B2D1/AP1D1RMS' 'BP2D1/AP1D1PEAK' 'BP2D1/AP1D1AVG' ...	Ratio of primed/unprimed wave quantities with port numbers and source port numbers (D<no> for drive port). The strings SAM, RMS, PEAK, AVG appended to the wave quantities denote a normal (sample), RMS, peak, or average detector. In contrast to manual control, different drive ports for numerator and denominator wave quantity are allowed.
'B2G1/A1G1' ... 'B02G01/A01G01' ... 'B2G1/A1G1SAM' 'B2G1/A1G1RMS' 'B2G1/A1G1PEAK' 'B2G1/A1G1AVG' ...	Ratio of wave quantities with port numbers and external generator providing the stimulus signal (G<no> for generator no.). The strings SAM, RMS, PEAK, AVG appended to the wave quantities denote a normal (sample), RMS, peak, or average detector.
'BP2G1/A1G1' ... 'BP02G1/A01G1' ... 'B2G1/AP1G1SAM' 'B2G1/AP1G1RMS' 'BP2G1/AP1G1PEAK' 'BP2G1/AP1G1AVG' ...	Ratio of primed/unprimed wave quantities with port numbers and external generator providing the stimulus signal (G<no> for generator no.). The strings SAM, RMS, PEAK, AVG appended to the wave quantities denote a normal (sample), RMS, peak, or average detector.
'BD1D1D/AD1D1D' ... 'BD1D1D/AD1D3S' 'BD1D1D/AD1D3SSAM' 'BD1D1D/AD1D3SRMS' 'BD1D1D/AD1D3SPEAK' 'BD1D1D/AD1D3SAVG' ...	Ratio of balanced (D, C) or single-ended (S) wave quantities with port numbers and source port numbers (D<no> for drive port) in true differential mode (option R&S ZVA-K6). The strings SAM, RMS, PEAK, AVG appended to the wave quantities denote a normal (sample), RMS, peak, or average detector. In contrast to manual control, different drive ports for numerator and denominator wave quantity are allowed.
'BPD1D1D/AD1D1D' ... 'BPD1D1D/AD1D3S' 'BD1D1D/APD1D3SSAM' 'BD1D1D/APD1D3SRMS' 'BPD1D1D/APD1D3SPEAK' 'BPD1D1D/APD1D3SAVG' ...	Ratio of primed/unprimed balanced (D, C) or single-ended (S) wave quantities with port numbers and source port numbers (D<no> for drive port) in true differential mode (option R&S ZVA-K6). The strings SAM, RMS, PEAK, AVG appended to the wave quantities denote a normal (sample), RMS, peak, or average detector. In contrast to manual control, different drive ports for numerator and denominator wave quantity are allowed.
'IMB21' 'IMB12' 'IMB31' ...	Imbalance parameter for balanced ports Imb<receive_port><drive_port>. The indices denote the logical receive port and the logical drive port of the analyzer.

'KFAC21' 'KFAC12' ...	Stability factor K (for unbalanced ports only)
'MUF121' 'MUF112' ...	Stability factor μ_1 (for unbalanced ports only)
'MUF221' 'MUF212' ...	Stability factor μ_2 (for unbalanced ports only)
'PAE21' 'PAE12' ...	Power added efficiency
'DC1V' 'DC10V' (query returns 'DC±1V' or 'DC±10V')	DC MEAS -1 V...+1 V, DC MEAS -10 V...+10 V
'Pmtr1G1' 'Pmtr2G1' 'Pmtr3D1' ...	Power sensor measurement using a power meter 'Pmtr<no>' and either an external generator 'G<no>' or an analyzer source port 'D<n>'
'IM3UI' 'IM3UO' 'IM3LI' 'IM3LO' 'IM3MI' 'IM3MO' 'IM5UI' ... 'IM9MO'	Intermodulation product IM<order><side><at DUT> where <order> = 3 5 7 9, <side> = U L M (for upper or lower or major), <at DUT> = I O (for input or output)
'IP3UI' 'IP3UO' 'IP3LI' 'IP3LO' 'IP3MI' 'IP3MO' 'IP5UI' ... 'IP9MO'	Intercept point IP<order><side><at DUT> where <order> = 3 5 7 9, <side> = U L M (for upper or lower or major), <at DUT> = I O (for input or output)
'NLO'	Noise level at DUT output
'MIXDLY' 'MIXDERIV' 'MIXPHAS'	Mixer delay, mixer derivative, mixer phase (with options R&S ZVA-K4 and R&S ZVA-K9)
'S21I' 'S21IAVG' ... 'A1D1ISAM' 'A1D1IAVG' ... 'B2D1ISAM' 'B1D1IAVG' ...	Image conversion gain (scalar mixer measurements) a drive port image b receive port image
'UTI' 'UTO' 'LTI' 'LTO'	Upper or lower tone at DUT input or output
'NF11' 'NF12' ... 'NF0101' ...	Noise Figure parameters NF<out><in>, where <out> and <in> denote the output and input port numbers of the DUT. To avoid ambiguities, <out> and <in> must be either both 1-digit numbers (e.g. 21) or both 2-digit numbers (e.g. 2121 or 0133).

*Selecting a parameter Y...<n><m> or Z...<n><m> sets the range of port numbers to be considered for the Y and Z-parameter measurement to <n>:<m>.



The available measured quantities depend on the available ports: e.g. S44 is not available on 2-port analyzers.

CALCulate<Ch>:PARAmeter:SElect <string>

Selects an existing trace as the active trace of the channel. All trace commands without explicit reference to the trace name act on the active trace (e.g. CALCulate<Chn>:FORMat).

CALCulate<Ch>:PARAmeter:SElect is also necessary if the active trace of a channel has been deleted.

<Ch> Channel number.

<string> Trace name, e.g. 'Trc4'. See *Rules for trace names* in the [Trace Manager](#) description.

*RST value –

SCPI, Command Types

Device-specific, with query (returns the name of the active trace).

Example:

```
CALC4:PAR:SDEF 'Ch4Tr1', 'S11'
```

Create channel 4 and a trace named *Ch4Tr1* to measure the input reflection coefficient S11. The trace is the active trace in channel 4.

```
CALC4:PAR:SDEF 'Ch4Tr2', 'S22'
```

Create another trace named *Ch4Tr2* to measure the output reflection coefficient S22. Again this new trace becomes the active trace in channel 4.

```
CALC4:PAR:SEL 'Ch4Tr1'
```

Select the first trace *Ch4Tr1* as the active trace.

```
CALC4:FORM MLIN
```

Calculate the magnitude of S11 and display it in a linearly scaled Cartesian diagram.

CALCulate<Chn>:PHOLd

This subsystem controls the max hold (peak hold) function.

CALCulate<Chn>:PHOLd MIN | MAX | OFF

Enables, disables, or restarts the max hold and the min hold functions.

<Chn> Channel number used to identify the active trace.

Parameters MIN - enable the min hold function.
MAX - enable the max hold function.
OFF - disable the max hold or min hold function.

***RST value** OFF

SCPI, Command Types Device-specific, command or query.

Example:

```
*RST; :CALC:PHOL MAX
```

Reset the instrument and enable the max hold function.

```
CALC:PHOL OFF; PHOL MAX
```

Restart max hold.

CALCulate<Chn>:RIPPLe...

This subsystem defines the ripple limits and controls the ripple check.

CALCulate<Chn>:RIPPLe:CONTrol:DOMain FLIN | FLOG | FSEG | FSINgle | TLIN |

TLOG | PLIN | PLOG | PSINgle

Deletes the existing ripple limit ranges and (re-)defines the physical units of the stimulus values of the ripple limit lines. The unit of the ripple limit is defined via `CALCulate<Chn>:RIPple:RDOMain:FORMat`

<Chn> Channel number used to identify the active trace.

Parameters Keywords for the units of the stimulus values.
The selected unit must be compatible with the sweep type (`[SENSe<Ch>:]SWEep:TYPE`); otherwise the ripple limit lines cannot be displayed and no ripple limit check is possible.

Range [def. unit] The parameters form three groups:

- FLIN, FLOG, FSEG, and FSINgle select frequency units [default: Hz] for the ripple limit.
- TLIN and TLOG select time units [default: s].
- PLIN, PLOG and PSINgle select power units [default: dBm].

***RST value** FLIN

SCPI, Command Types Device-specific, no query.

Example:

```
SWE:TYPE POW
```

Select a power sweep.

```
CALC:RIPP:CONT:DOM PLIN
```

Delete all existing ripple limit ranges and select level units for the ripple limit of the active trace.

```
CALC:RIPP:DATA 1, -10,-5,3
```

Define and enable a ripple limit range in the stimulus range between -10 dBm and -5 dBm, assigning a ripple limit of 3 dB.

CALCulate<Chn>:RIPple:DATA <type>, <start_stim>, <stop_stim>, <limit>{,<type>, <start_stim>, <stop_stim>, <limit>}

Adds and enables/disables an arbitrary number of ripple limit ranges, assigning the stimulus values and the ripple limits.



This command does not overwrite existing ripple limit ranges. The defined ranges are appended to the range list as new ranges. Use the `CALCulate<Chn>:RIPple:SEGMent<Seg>... commands to change existing ripple limits.`

<Chn> Channel number used to identify the active trace.

<type> Boolean identifier for the type of the ripple limit range.

Range [def. unit] **0** – ripple limit range off, range defined but no limit check result displayed. The result is still available via `CALCulate<Chn>:RIPple:SEGMent<Seg>:RESult?`
1 – ripple limit range on (with limit check)

<start_stim>, <stop_stim> Stimulus values of the first and last points of the ripple limit range and associated ripple limit. The unit of the ripple limit is adjusted to the format of the active trace

<limit>	(CALCulate<Chn>:FORMat).
Range [def. unit]	Almost no restriction for ripple limit ranges; see Rules for Ripple Limit Definition . [Hz for frequency sweeps, dBm for power sweeps, s for time sweeps, see CALCulate<Chn>:RIPple:CONTRol:DOMain]
*RST values	– (no ripple limit line defined after *RST)
SCPI, Command Types	Device-specific, with query.
Example:	<pre>*RST; :CALC:RIPP:DATA 1,1500000000, 2000000000, 3, 1, 2000000000, 3000000000, 5</pre> Define and enable a ripple limit range in the stimulus range between 1.5 GHz and 2 GHz, assigning a ripple limit of +3 dB. Define and enable a second ripple limit range in the stimulus range between 2 GHz and 3 GHz, assigning a ripple limit of +5 dB. <pre>CALC:RIPP:DISP ON</pre> Show the ripple limits in the active diagram.

CALCulate<Chn>:RIPple:DELeTe:ALL

Deletes all ripple limit ranges.

<Chn>	Channel number used to identify the active trace.
*RST value	–
SCPI, Command Types	Device-specific, no query.
Example:	<pre>*RST; :CALC:RIPP:DATA 1,1500000000, 2000000000, 3, 1, 2000000000, 3000000000, 5</pre> Define and enable a ripple limit range in the stimulus range between 1.5 GHz and 2 GHz, assigning a ripple limit of +3 dB. Define and enable a second ripple limit range in the stimulus range between 2 GHz and 3 GHz, assigning a ripple limit of +5 dB. <pre>CALC:RIPP:DEL:ALL</pre> Delete both created ripple limit ranges.

CALCulate<Chn>:RIPple:DISPlay[:STATe] <Boolean>

Displays or hides all ripple limit lines (including all ranges) associated to the active trace.

<Chn>	Channel number used to identify the active trace.
<Boolean>	ON OFF - ripple limit line on or off.
*RST value	OFF
SCPI, Command Types	Device-specific, command or query.
Example:	<pre>*RST; :CALC:RIPP:DATA 1,1500000000, 2000000000, 3</pre>

Define and enable a ripple limit range in the stimulus range between 1.5 GHz and 2 GHz, assigning a ripple limit of +3 dB.

```
CALC:RIPP:DISP ON
```

Show the ripple limit range in the active diagram.

CALCulate<Chn>:RIPPlE:FAIL?

Returns a 0 or 1 to indicate whether or not the global ripple limit check has failed.



Use `CALCulate<Chn>:RIPPlE:SEGment<Seg>:RESult?` to query the result for a single ripple limit range.



In remote control, the ripple limit check result is calculated once at the end of each sweep. If the ripple limits are changed, a new sweep is required to obtain updated ripple limit check results. In single sweep mode (`INITiate<Ch>:CONTinuous OFF`), the new sweep must be started explicitly using `INITiate<Ch>[:IMMediate]:SCOpe ALL | SINGle`. This behavior is different from manual control where a changed ripple limit line can directly affect the pass/fail result of the displayed trace.

<Chn>	Channel number used to identify the active trace.
Response	0 1 - 0 represents pass (or a disabled limit check), 1 represents fail in at least one ripple limit range.
*RST value	0
SCPI, Command Types	Device-specific, query only.
Example:	<pre>*RST; :CALC:RIPP:DATA 1,1500000000, 2000000000,3</pre>

Define and enable a ripple limit range in the stimulus range between 1.5 GHz and 2 GHz, assigning a ripple limit of +3 dB.

```
CALC:RIPP:STAT ON; FAIL?
```

Switch the limit check on and query the result.

CALCulate<Chn>:RIPPlE:RDOMain:FORMat COMPlEx | MAGNitude | PHASe | REAL | IMAGinary | SWR | GDELay | L | C

Deletes the existing ripple limit ranges and (re-)defines the physical unit of the ripple limit. The units of the stimulus values are defined via `CALCulate<Chn>:RIPPlE:CONTrol:DOMain`.

<Chn>	Channel number used to identify the active trace.
Parameters	Keyword for the physical unit of the response values.
Range [def. unit]	The parameters form six groups: • COMPlEx, REAL, IMAGinary, and SWR select dimensionless numbers (U) for the ripple limit. • MAGNitude selects relative units (dB).

- PHASe selects phase units (deg).
- GDElay selects time units (s).
- L selects inductance units (H/Henry).
- C selects capacitance units (F/Farad).

*RST value [-]
 -

SCPI, Command Types Device-specific, no query.

Example

```
*RST; :CALC:RIPP:DATA 1,1500000000, 2000000000,3
```

Define and enable a ripple limit range in the stimulus range between 1.5 GHz and 2 GHz, assigning a ripple limit of +3 dB.

```
CALC:RIPP:RDOM:FORM COMP
```

Delete the ripple limit range, select complex units for the ripple limit.

CALCulate<Chn>:RIPple:SEGment<Seg>:COUNT?

Queries the number of ripple limit ranges.

<Chn> Channel number used to identify the active trace.

<Seg> Ripple limit range number. This suffix is ignored; the command counts all ranges.

Response 0 | 1 | ...- number of (enabled or disabled) ripple limit ranges.

*RST value 0

SCPI, Command Types Device-specific, query only.

Example:

```
*RST; :CALC:RIPP:DATA 1,1500000000, 2000000000, 3, 1, 2000000000, 3000000000, 5
```

Define and enable a ripple limit range in the stimulus range between 1.5 GHz and 2 GHz, assigning a ripple limit of +3 dB. Define and enable a second ripple limit range in the stimulus range between 2 GHz and 3 GHz, assigning a ripple limit of +5 dB.

```
CALC:RIPP:SEGM:COUNT?
```

Query the number of ranges. The response is 2.

CALCulate<Chn>:RIPple:SEGment<Seg>:LIMit <limit_value>

Defines the ripple limit for ripple limit range no. <Seg>. A range must be created first to enable this command (e.g [CALCulate<Chn>:RIPple:DATA](#)).



To define several ripple limit ranges with a single command, use [CALCulate<Chn>:RIPple:DATA](#).

<Chn> Channel number used to identify the active trace.

<Seg> Segment number

<limit_value>	Limit value, to be defined in accordance with the selected format (<code>CALCulate<Chn>:RIPple:RDOMain:FORMat</code>).
Range [def. unit]	Almost no restriction for limit ranges; see Rules for Ripple Limit Definition . [according to the format of the active trace]
*RST value	– (no ripple limit line defined after *RST)
SCPI, Command Types	Device-specific, with query.
Example:	See <code>CALCulate<Chn>:RIPple:SEGment<Seg>:STIMulus:STARt</code> .

CALCulate<Chn>:RIPple:SEGment<Seg>:RESult?

Returns the result of the ripple limit check in the previously defined limit range no. <Seg>.



Use `CALCulate<Chn>:RIPple:FAIL?` to query the result for global ripple limit check.



In remote control, the ripple limit check result is calculated once at the end of each sweep. If the ripple limits are changed, a new sweep is required to obtain updated ripple limit check results. In single sweep mode (`INITiate<Ch>:CONTinuous OFF`), the new sweep must be started explicitly using `INITiate<Ch>[:IMMediate]:SCOpe ALL | SINGLE`. This behavior is different from manual control where a changed ripple limit line can directly affect the pass/fail result of the displayed trace.

<Chn>	Channel number used to identify the active trace.
<Seg>	Ripple limit range number
Response:	
<Fail>, <Limit>	0 1 - 0 represents pass, 1 represents fail Measured ripple in the limit range. A result is returned even if the limit check in the range no. <Seg> is disabled; see example below.
*RST value	– (a reset deletes all ripple limit ranges)
SCPI, Command Types	Device-specific, query only
Example:	<code>*RST; :CALC:RIPP:DATA 1,1500000000, 2000000000,3</code>

Define and enable a ripple limit range in the stimulus range between 1.5 GHz and 2 GHz, assigning a ripple limit of +3 dB.

`CALC:RIPP:STAT ON; SEGM:RES?`

Enable the limit check and query the result for the created range. Possible response: 0,0.3529814004.

`CALC:RIPP:DATA 0,2500000000, 3000000000,3`

Define a second ripple limit range with disabled limit check (no limit check results are displayed in the diagram area).

`CALC:RIPP:SEGM2:RES?`

Query the result for the second range. Possible response: 0,1.149071925.

CALCulate<Chn>:RIPPlE:SEGMent<Seg>:STIMulus:STARt <start_value>

Changes the start stimulus value (i.e. the smallest stimulus value) of a ripple limit range. A range must be created first to enable this command (e.g. [CALCulate<Chn>:RIPPlE:DATA](#)).



To define several ripple limit ranges with a single command, use [CALCulate<Chn>:RIPPlE:DATA](#).

<Chn>	Channel number used to identify the active trace.
<Seg>	Ripple limit range number
<start_value>	Frequency, power or time value, to be defined in accordance with the sweep type of the active channel.
Range [def. unit]	Almost no restriction for limit ranges; see Rules for Ripple Limit Definition . [Hz for frequency sweeps, dBm for power sweeps, s for time sweeps]
*RST value	– (no ripple limit line defined after *RST)

SCPI, Command Types Device-specific, with query.

Example:

```
*RST; :CALC:RIPP:DATA 1,1500000000, 2000000000,3
```

Define and enable a ripple limit range in the stimulus range between 1.5 GHz and 2 GHz, assigning a ripple limit of +3 dB.

```
CALC:RIPP:SEGM:STIM:STAR 1GHZ; STOP 2.5 GHZ; :CALC:RIPP:SEGM:LIM 5
```

Change the range to a stimulus range between 1 GHz and 2.5 GHz and a limit of 5 dB.

```
CALC:RIPP:SEGM:STAT OFF
```

Disable the limit check in the modified stimulus range.

CALCulate<Chn>:RIPPlE:SEGMent<Seg>[:STATe] <Boolean>

Enables or disables the limit check in the ripple limit range no. <Seg>.

<Chn>	Channel number used to identify the active trace.
<Seg>	Segment number
<Boolean>	ON OFF - Ripple limit check on or off. A result is available even if the limit check is disabled; see example for CALCulate<Chn>:RIPPlE:SEGMent<Seg>:RESult? .
*RST value	– (no ripple limit line defined after *RST)

SCPI, Command Types Device-specific, command or query.

Example:

See [CALCulate<Chn>:RIPPlE:SEGMent<Seg>:STIMulus:STARt](#).

CALCulate<Chn>:RIPPlE:SEGMent<Seg>:STIMulus:STOP <stop_value>

Changes the stop stimulus value (i.e. the largest stimulus value) of a ripple limit range. A range must be created first to enable this command (e.g. [CALCulate<Chn>:RIPPlE:DATA](#)).



To define several ripple limit ranges with a single command, use `CALCulate<Chn>:RIPple:DATA`.

<Chn>	Channel number used to identify the active trace.
<Seg>	Segment number
<stop_value>	Frequency, power or time value, to be defined in accordance with the sweep type of the active channel.
Range [def. unit]	Almost no restriction for limit ranges; see Rules for Ripple Limit Definition . [Hz for frequency sweeps, dBm for power sweeps, s for time sweeps]
*RST value	– (no ripple limit line defined after *RST)

SCPI, Command Types Device-specific, with query.

Example: See `CALCulate<Chn>:RIPple:SEGment<Seg>:STIMulus:START`.

CALCulate<Chn>:RIPple:SOUNd[:STATe] <Boolean>

Switches the acoustic signal (fail beep) on or off. The fail beep is generated each time the analyzer detects an exceeded ripple limit.

<Chn>	Channel number used to identify the active trace.
<Boolean>	ON OFF - Fail beep on or off.
*RST value	OFF

SCPI, Command Types Device-specific, command or query.

Example: `CALC:RIPP:STAT ON; SOUN ON`
Switch the limit check on and activate the fail beep.

CALCulate<Chn>:RIPple:STATe <Boolean>

Switches the ripple limit check for the active trace on or off.



Use `CALCulate<Chn>:RIPple:SEGment<Seg>[:STATe]` to switch the limit check for a single ripple limit range on or off.

<Chn>	Channel number used to identify the active trace.
<Boolean>	ON OFF - ripple limit check on or off.
*RST value	OFF

SCPI, Command Types Device-specific, command or query.

Example: See `CALCulate<Chn>:RIPple:FAIL?`

CALCulate<Chn>:SMOothing...

This subsystem provides the settings for trace smoothing.

CALCulate<Chn>:SMOothing:APERture <numeric_value>

Defines how many measurement points are averaged to smooth the trace.

<Chn> Channel number used to identify the active trace. If unspecified the numeric suffix is set to 1.

<numeric_value> Smoothing aperture.

Range [def. unit] 0.05% to 100%. A smoothing aperture of n % means that the smoothing interval for each sweep point i with stimulus value x_i is equal to $[x_i - \text{span} \cdot n/200, x_i + \text{span} \cdot n/200]$, and that the result of i is replaced by the arithmetic mean value of all measurement points in this interval. [%]

*RST value 1

SCPI, Command Types Device-specific, command or query.

Example:

```
*RST; :CALC:SMO ON
```

Activate smoothing for the default trace.

```
CALC:SMO:APER 0.5
```

Reduce the smoothing aperture to 0.5 %.

CALCulate<Chn>:SMOothing[:STATe] <Boolean>

Enables or disables smoothing for trace no. <Chn>.

<Chn> Channel number used to identify the active trace.

<Boolean> ON | OFF - Smoothing on or off.

*RST value OFF

SCPI, Command Types Device-specific, command or query.

Example:

See [CALCulate<Chn>:STATistics:SMOothing:APERture](#)

CALCulate<Chn>:STATistics...

This subsystem evaluates and displays statistical and phase information of the trace.

CALCulate<Chn>:STATistics:DOMain:USER <range_no>

Selects one out of 10 evaluation ranges to be configured with the

`CALCulate<Chn>:STATistics:DOMain:USER:SHOW`,
`CALCulate<Chn>:STATistics:DOMain:USER:START` and
`CALCulate<Chn>:STATistics:DOMain:USER:STOP` commands.

<Chn> Channel number used to identify the active trace. If unspecified the numeric suffix is set to 1.

<range_no> Number of the evaluation range.

Range [def. unit] 1 to 10. In addition, 0 denotes the (non-configurable) *Full Span* evaluation range. [-]

*RST value 0

SCPI, Command Types Device-specific, command or query.

Example:

```
*RST; :CALC:STAT:DOM:USER?
```

Query the default evaluation range. The response is zero, i.e. the evaluation range is equal to the complete sweep range

```
CALC:STAT:DOM:USER 1; :CALC:STAT:DOM:USER:START 1GHZ; STOP 2GHZ; SHOW ON
```

Select evaluation range no. 1 and define the evaluation range between 1 GHz and 2 GHz. Display the range limit lines.

CALCulate<Chn>:STATistics:DOMain:USER:SHOW <Boolean>

Displays or hides range limit lines for the evaluation range selected via `CALCulate<Chn>:STATistics:DOMain:USER`.

<Chn> Channel number used to identify the active trace.

<Boolean> ON | OFF - Range limit lines on or off.

*RST value OFF

SCPI, Command Types Device-specific, command or query.

Example:

```
See CALCulate<Chn>:STATistics:DOMain:USER
```

CALCulate<Chn>:STATistics:DOMain:USER:START <start_value>

Defines the start value of the evaluation range selected via `CALCulate<Chn>:STATistics:DOMain:USER`.

<Chn> Channel number used to identify the active trace.

<start_value> Start value of the evaluation range.

Range [def. unit] -1000 GHz to 999.999999999 GHz. [Hz]

*RST value Lowest frequency of the analyzer, depending on the [analyzer model](#).

SCPI, Command Types Device-specific, command or query.

Example:

```
See CALCulate<Chn>:STATistics:DOMain:USER
```


CALCulate<Chn>:STATistics:DOMain:USER:STOP <stop_value>

Defines the stop value of the evaluation range selected via

[CALCulate<Chn>:STATistics:DOMain:USER](#).

<Chn>	Channel number used to identify the active trace.
<stop_value>	Stop value of the evaluation range.
Range [def. unit]	–999.999999999 GHz to 1000 GHz. [Hz]
*RST value	Highest frequency of the analyzer, depending on the analyzer model .

SCPI, Command Types Device-specific, command or query.

Example: See [CALCulate<Chn>:STATistics:DOMain:USER](#)

CALCulate<Chn>:STATistics:EPDelay[:STATe] <Boolean>

Displays or hides the *Phase Delay/EI Length* results in the diagram area of trace no. <Chn>.

<Chn>	Channel number used to identify the active trace.
<Boolean>	ON OFF - Statistical info field on or off.
*RST value	OFF

SCPI, Command Types Device-specific, command or query.

Example: See [CALCulate<Chn>:STATistics\[:STATe\]](#)

CALCulate<Chn>:STATistics:MMPTpeak[:STATe] <Boolean>

Displays or hides the *Min/Max/Peak-Peak* results in the diagram area of trace no. <Chn>.

<Chn>	Channel number used to identify the active trace.
<Boolean>	ON OFF - Statistical info field on or off.
*RST value	OFF

SCPI, Command Types Device-specific, command or query.

Example: See [CALCulate<Chn>:STATistics\[:STATe\]](#)

CALCulate<Chn>:STATistics:MSTDdev[:STATe] <Boolean>

Displays or hides the *Mean/Std Dev* results in the diagram area of trace no. <Chn>.

<Chn>	Channel number used to identify the active trace.
<Boolean>	ON OFF - Statistical info field on or off.
*RST value	OFF

SCPI, Command Types Device-specific, command or query.

Example: See `CALCulate<Chn>:STATistics[:STATe]`

CALCulate<Chn>:STATistics:NLINear:COMP:LEVel <compression_value>

Defines the compression value x for the x-dB [compression point](#) measurement (enabled via `CALCulate<Chn>:STATistics:MSTDdev[:STATe] ON`).

<Chn> Channel number used to identify the active trace.

<compression_value> Compression value.

Range [def. unit] +0.01 dBm to +100.00 dBm [dBm]

*RST value 1 dBm

SCPI, Command Types Device-specific, command or query.

Example: See `CALCulate<Chn>:NLINear:COMP:RESult?`

CALCulate<Chn>:STATistics:NLINear:COMP:RESult?

Returns the x-dB compression point of an S-parameter or ratio measured in a power sweep, where the compression value x is set via `CALCulate<Chn>:STATistics:NLINear:COMP:LEVel`.

In order to get more accurate results the command should be preceded by activation of enhanced compression point measurement via `CALCulate<Chn>:STATistics:NLINear:COMP[:STATe]`. The accuracy depends on the state set by this command:

- If set to ON, the enhanced calculation method is activated which uses the explicitly measured reference receiver value of the driving port as input power.
- If set to OFF, the calculation can use only the nominal stimulus power of the trace for calculation. But the nominal input power may differ slightly from the real input power especially if no flatness calibration or ALC is applied to the driving port

<Chn> Channel number used to identify the active trace.

Result <Cmp_In>, <Cmp_Out>
 <Cmp_In> is the stimulus level at the compression point
 <Cmp_Out> is the magnitude of the wave reflected or transmitted by the DUT.

Range [def. unit] For <Cmp_In>: Current sweep range or evaluation range (`CALCulate<Chn>:STATistics:DOMain:USER`), if different from the sweep range. [dBm]
 For <Cmp_Out>: Measurement range of the analyzer. [dBm]

*RST value –

SCPI, Command Types Device-specific, query only.

Example: *RST; SWE:TYPE POW

Select a power sweep with default CW frequency and sweep range.

CALC:STAT:NLIN:COMP:LEV 2

Define a compression value of 2 dB.

CALC:STAT:NLIN:COMP ON

Enable the enhanced compression point calculation (and display the compression point result in the diagram area).

CALC:STAT:NLIN:COMP:RES?

Query the compression point results <Cmp_In>, <Cmp_Out>. An execution error message (error no. -200) is returned if no compression point is found.

CALCulate<Chn>:STATistics:NLINear:COMP[:STATe] <Boolean>

Enables or disables the enhanced compression point measurement and - at the same time - displays or hides the compression point result in the diagram area of trace no. <Chn>. See [CALCulate<Chn>:NLINear:COMP:RESult?](#) for additional information.

<Chn> Channel number used to identify the active trace.

<Boolean> ON | OFF

*RST value OFF

SCPI, Command Types Device-specific, command or query.

Example: See [CALCulate<Chn>:NLINear:COMP:RESult?](#)

CALCulate<Chn>:STATistics:RESult? MEAN | STDDDev | MAX | MIN | RMS | PTPeak | ELENgth | PDELay | GAIN | SLOPe | FLATness | ALL

Returns a single statistical parameter of the trace no. <Chn> or all parameters. It is not necessary to display the info field ([CALCulate<Chn>:STATistics\[:STATe\] ON](#)) before using this command.

<Chn> Channel number used to identify the active trace.

Parameters

- MEAN – Return arithmetic mean value of all response values of the trace in the entire sweep range (or in the [evaluation range](#) defined in manual control)
- STDDDev – Return standard deviation of all response values
- MAX – Return the maximum of all response values
- MIN – Return the minimum of all response values
- RMS – Return the root mean square of all response values
- PTPeak – Return the peak-to-peak value (MAX – MIN)
- ELENgth – Return the electrical length
- PDELay – Return the phase delay
- GAIN – Return the gain, i.e. the larger of two marker values
- SLOPe – Return the slope (difference) between two marker values
- FLATness – Return the flatness of the trace between two marker positions
- ALL – Return all statistical values, observing the order used above

Range [def. unit] The data is returned as a comma-separated list of real numbers. The unit is the default unit of the measured parameter; see

[CALCulate<Ch>:PARAmeter:SDEFine](#) but also depends on the trace format (linear or logarithmic scale, see [CALCulate<Chn>:FORMat](#)). If a polar trace format is selected, then the statistical parameters are calculated from the linear magnitude of the measurement parameter. [–]

*RST value

–

**SCPI,
Command
Types**

Device-specific, query only.

Example:

```
*RST; :CALC:STAT:RES? MAX
```

Calculate and return the maximum of the default trace showing an S-parameter on a dB Mag scale.

```
:CALC:FORM POL; STAT:RES? MAX
```

Display the trace in a polar diagram and re-calculate the maximum. The result corresponds to the previous result but is converted to a unitless linear value.

CALCulate<Chn>:STATistics:RMS[:STATe] <Boolean>

Displays or hides the *RMS* results in the diagram area of trace no. <Chn>.

<Chn>

Channel number used to identify the active trace.

<Boolean>

ON | OFF - Statistical info field on or off.

*RST value

OFF

SCPI, Command Types

Device-specific, command or query.

Example:

See [CALCulate<Chn>:STATistics\[:STATe\]](#)

CALCulate<Chn>:STATistics:SFLatness[:STATe] <Boolean>

Displays or hides the *Gain/Slope/Flatness* results in the diagram area of trace no. <Chn>.

<Chn>

Channel number used to identify the active trace.

<Boolean>

ON | OFF - Statistical info field on or off.

*RST value

OFF

SCPI, Command Types

Device-specific, command or query.

Example:

See [CALCulate<Chn>:STATistics\[:STATe\]](#)

CALCulate<Chn>:STATistics[:STATe] <Boolean>

Displays or hides all statistical results in the diagram area of trace no. <Chn> except the compression point results.



You can display or hide the *Min/Max/Peak-Peak*, *Mean/Std Dev*, *RMS*, *Phase Delay/EI Length* and *Gain/Slope/Flatness* results separately; see example below.

<Chn> Channel number used to identify the active trace.

<Boolean> ON | OFF - Statistical info field on or off.

***RST value** OFF

SCPI, Command Types Device-specific, command or query.

Example:

```
*RST; :CALC:STAT:MMPT ON
```

Reset the instrument, hiding all statistical results. Display the *Min/Max/Peak-Peak* results.

```
CALC:STAT:MSTD ON
```

Display the *Mean/Std Dev* results in addition.

```
CALC:STAT:RMS ON
```

Display the *RMS* results in addition.

```
CALC:STAT:EPD ON
```

Display the *Phase Delay/EI Length* results in addition.

```
CALC:STAT:SFL ON
```

Display the *Gain/Slope/Flatness* results in addition.

```
CALC:STAT OFF
```

Hide all results.

CALCulate<Ch>:TDIF...

This subsystem provides settings for the *True Differential Mode* (with option R&S ZVA-K6).

CALCulate<Ch>:TDIF:IMBalance:COMPensation[:STATe] <Boolean>

Selects the calculation method for S-parameters, ratios and derived quantities during an amplitude imbalance or phase imbalance sweep.

<Ch> Channel number

<Boolean> ON – Compensate imbalance of a waves
OFF – Use the actual a-waves, depending on the imbalance parameters

***RST value** OFF [-]

SCPI, Command Types Device-specific, command or query

Example:

```
See SOURce<Ch>:TDIF:IMBalance:AMPLitude:LPORT
```

CALCulate<Chn>:TRANSform...

This subsystem converts measured data from one representation to another and controls the transformation into the time domain (with option ZVAB-K2, *Time Domain*).

CALCulate<Chn>:TRANSform:COMplex S | Y | Z

Converts S-parameters into matched-circuit (converted) [Y-parameters](#) or [Z-parameters](#) and vice versa, assuming that port no. i is terminated with Z_{0i} so that the three parameter sets are equivalent and the following formulas apply:

$$Z_{\langle out \rangle \langle in \rangle ii} = Z_0 \frac{1 + S_{\langle out \rangle \langle in \rangle ii}}{1 - S_{\langle out \rangle \langle in \rangle ii}}, \quad \langle out \rangle = \langle in \rangle,$$

$$Z_{\langle out \rangle \langle in \rangle ij} = 2 \cdot \frac{\sqrt{Z_{0i} \cdot Z_{0j}}}{S_{\langle out \rangle \langle in \rangle ij}} - (Z_{0i} + Z_{0j}), \quad i \neq j,$$

$$Y_{ii} = \frac{1}{Z_{0i}} \frac{1 - S_{ii}}{1 + S_{ii}} = 1 / Z_{ii},$$

$$Y_{ij} = \frac{S_{ij}}{2 \cdot \sqrt{Z_{0i} \cdot Z_{0j}} - S_{ij} \cdot (Z_{0i} + Z_{0j})} = 1 / Z_{ij}, \quad i \neq j,$$

<Chn>

Channel number used to identify the active trace. If unspecified the numeric suffix is set to 1.

S | Y | P

S-parameters, Y-parameters, Z-parameters

***RST value**

– (The initial representation of the trace is determined by means of [CALCulate<Ch>:PARAmeter:SDEFine](#))

SCPI, Command Types

Device-specific, command or query.

Example:

```
*RST; :CALC:PAR:MEAS 'Trc1', '"Y-S22'
```

Select the converted admittance Y<--S22 as measurement parameter of the default trace.

```
CALC:TRAN:COMP S
```

Convert the converted Y-parameter into an S-parameter.

CALCulate<Chn>:TRANSform:IMPedance:RNORmal TWAVes | PWAVes

Selects the theory for the renormalization of port impedances. The selection has an impact on the conversion formulas for wave quantities and S-parameters.

<Chn>

Channel number used to identify the active trace.

TWAVes

TWAVes – travelling waves

PWAVes

PWAVes – power waves

***RST value**

TWAVes

SCPI, Command Types Device-specific, command or query.

Example: See [\[SENSe<Ch>:\]PORT<phys_port>:ZREference](#)

CALCulate<Chn>:TRANSform:TIME:CENTER <numeric_value>

Defines the center time of the diagram in time domain.

<Chn> Channel number used to identify the active trace

<numeric_value> Center time of the diagram in time domain

Range [def. unit] -99.99999999999 s to +99.99999999999 s. The increment (parameters UP or DOWN) is 0.1 ns. [s]

*RST value 1.5E-009 s

SCPI, Command Types Confirmed, command or query

Example:

```
*RST; :CALC:TRAN:TIME:STAT ON
```

Reset the instrument, activating a frequency sweep, and enable the time domain transformation for the default trace.

```
CALC:TRAN:TIME:CENT 0; SPAN 5ns
```

set the center time to 0 ns and the time span to 5 ns.

Note: If the x-axis is scaled in distance units ([CALCulate<Chn>:TRANSform:TIME:XAXis DISTance](#)), then the center value is entered in m; the range and default value changes accordingly.

CALCulate<Chn>:TRANSform:TIME:DCHebyshev <numeric_value>

Sets the sideband suppression for the Dolph-Chebyshev window. The command is only available if a Dolph-Chebyshev window is active ([CALCulate<Chn>:TRANSform:TIME:WINDow DCHebyshev](#)).

<Chn> Channel number used to identify the active trace

<numeric_value> Sideband suppression

Range [def. unit] 10 dB to 120 dB. The increment (parameters UP or DOWN) is 10 dB. [dB]

*RST value 32 dB

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; :CALC:TRAN:TIME:WIND DCH
```

Reset the instrument and select a Dolph-Chebyshev window for filtering the data in the frequency domain.

```
CALC:TRAN:TIME:DCH 25
```

set the sideband suppression to 25 dB.

CALCulate<Chn>:TRANSform:TIME:LPASs KFSTop | KDFrequency |

KSDfrequency

Calculates the harmonic grid for lowpass time domain transforms according to one of the three alternative algorithms.

<Chn>	Channel number used to identify the active trace
Parameters	KFSTop – Keep stop frequency and number of points KDFrequency – Keep frequency gap and number of points KSDfrequency – Keep stop frequency and approximate frequency gap
*RST value	–
SCPI, Command Types	Device-specific, no query (the command causes an event)
Example:	See <code>CALCulate<Chn>:TRANSform:TIME[:TYPE]</code>

CALCulate<Chn>:TRANSform:TIME:LPASs:DCSPParam <numeric_value>

Defines the DC value for lowpass transforms. The command is enabled only if the sweep points are on a harmonic grid (to be set explicitly or using `CALCulate<Chn>:TRANSform:TIME:LPASs`).

<Chn>	Channel number used to identify the active trace
<numeric_value>	DC value of the measured quantity
Range [def. unit]	Depending on the measured quantity (–1E5 to +1E5 for S-parameters)
*RST value	0
SCPI, Command Types	Device-specific, command or query

Example:

```
*RST; :CALC:TRAN:TIME:STAT ON
```

Reset the instrument, activating a frequency sweep with S21 as measured quantity, and enable the time domain transformation for the default trace.

```
CALC:TRAN:TIME LPAS; TIME:STIM STEP
```

Select a lowpass step transformation.

```
CALC:TRAN:TIME:LPAS KFST
```

Calculate a harmonic grid, keeping the stop frequency and the number of points.

```
CALC:TRAN:TIME:LPAS:DCSP 0.2
```

Set the DC value.

```
CALC:TRAN:TIME:LPAS:DCSP:EXTR; CALC:TRAN:TIME:LPAS:DCSP?
```

Extrapolate the measured trace, overwrite the defined DC value, and query the new value.

```
CALC:TRAN:TIME:LPAS:DCSP:CONT ON
```

Switch over to continuous extrapolation (e.g. because you noticed a discrepancy between the manually entered DC value and the extrapolation and assume the extrapolation to be more trustworthy).

```
CALC:TRAN:TIME:RES:EFAC 3
```

Select a resolution enhancement factor of 3 in order to improve the resolution in time domain.

CALCulate<Chn>:TRANSform:TIME:LPASs:DCSParam:CONTInuous <Boolean>

Determines whether continuous extrapolation for the DC value is enabled.

<Chn>	Channel number used to identify the active trace
<Boolean>	ON – Continuous extrapolation enabled OFF – Continuous extrapolation disabled
*RST value	ON [-]
SCPI, Command Types	Device-specific, command or query

Example:

See `CALCulate<Chn>:TRANSform:TIME:LPASs:DCSParam`

CALCulate<Chn>:TRANSform:TIME:LPASs:DCSParam:EXTRapolate

Extrapolates the measured trace towards $f = 0$ and overwrites the current DC value (`CALCulate<Chn>:TRANSform:TIME:LPASs:DCSParam`). The command is relevant for lowpass time domain transforms.

<Chn>	Channel number used to identify the active trace
Parameters	None
*RST value	–
SCPI, Command Types	Device-specific, no query (the command causes an event)

Example:

See `CALCulate<Chn>:TRANSform:TIME:LPASs:DCSParam`

CALCulate<Chn>:TRANSform:TIME:LPFRequency

Calculates the harmonic grid for lowpass time domain transforms, keeping the stop frequency and the number of points.



Use `CALCulate<Chn>:TRANSform:TIME:LPASs` if you wish to use one of the other algorithms for calculating the grid.

<Chn>	Channel number used to identify the active trace
Parameters	None
*RST value	–
SCPI, Command Types	Device-specific, no query (the command causes an event)

Example:

See `CALCulate<Chn>:TRANSform:TIME[:TYPE]`

CALCulate<Chn>:TRANSform:TIME:RESolution:EFACtor <factor>

Defines the resolution enhancement factor for the time domain transform.

<Chn>	Channel number used to identify the active trace
<factor>	Resolution enhancement factor.
Range [def. unit]	1 to 10. The increment (parameters UP or DOWN) is 0.1. [-]
*RST value	1 (no resolution enhancement)
SCPI, Command Types	Device-specific, command or query

Example: See `CALCulate<Chn>:TRANSform:TIME:LPASs:DCSParam`

CALCulate<Chn>:TRANSform:TIME:SPAN <time_span>

Defines the time span of the diagram in time domain.

<Chn>	Channel number used to identify the active trace
<time_span>	Time span of the diagram in time domain.
Range [def. unit]	2E-012 s to 200 s. The increment (parameters UP or DOWN) is 0.1 ns. [s]
*RST value	5E-009 s
SCPI, Command Types	Confirmed, command or query

Example: See `CALCulate<Chn>:TRANSform:TIME:CENTer`

Note: If the x-axis is scaled in distance units (`CALCulate<Chn>:TRANSform:TIME:XAXis DISTance`), then the span is entered in m; the range and default value changes accordingly.

CALCulate<Chn>:TRANSform:TIME:START <start_time>

Defines the start time of the diagram in time domain.

<Chn>	Channel number used to identify the active trace
<start_time>	Start time of the diagram.
Range [def. unit]	-100 s to +99.999999999998 s. The increment (parameters UP or DOWN) is 0.1 ns. [s]
*RST value	-1E-009 s
SCPI, Command Types	Confirmed, command or query

Example: `*RST; :CALC:TRAN:TIME:STAT ON`

Reset the instrument, activating a frequency sweep, and enable the time domain transformation for the default trace.

`CALC:TRAN:TIME:STAR 0; STOP 10 ns`

set the start time to 0 ns and the stop time to 10 ns.

Note: If the start frequency entered is greater than the current stop frequency (`CALCulate<Chn>:TRANSform:TIME:STOP`), the stop frequency is set to the start frequency plus the minimum frequency span (`CALCulate<Chn>:TRANSform:TIME:SPAN`).
If the x-axis is scaled in distance units (`CALCulate<Chn>:TRANSform:TIME:XAxis DISTance`), then the start value is entered in m; the range and default value changes accordingly.

CALCulate<Chn>:TRANSform:TIME:STATe <Boolean>

Determines whether the time domain transformation for trace no. <Chn> is enabled.

<Chn>	Channel number used to identify the active trace
<Boolean>	ON – Time domain representation active OFF – Frequency domain representation active
*RST value	OFF [-]

SCPI, Command Types Confirmed, command or query

Example: `*RST; :CALC:TRAN:TIME:STAT?`

Reset the instrument, activating a frequency sweep, and query whether the default trace is displayed in the time domain. The response is 0.

CALCulate<Chn>:TRANSform:TIME:STIMulus STEP | IMPulse

Selects the type of stimulus to be simulated in the lowpass transformation process.

<Chn>	Channel number used to identify the active trace
Parameters	IMPulse – Impulse response, in bandpass or lowpass mode STEP – Step response, only in lowpass mode (a bandpass mode setting <code>CALCulate<Chn>:TRANSform:TIME[:TYPE] BPASS</code> is automatically changed to lowpass)
*RST value	IMP

SCPI, Command Types Confirmed, command or query

Example: See `CALCulate<Chn>:TRANSform:TIME[:TYPE]`

CALCulate<Chn>:TRANSform:TIME:STOP <numeric_value>

Defines the stop time of the diagram in time domain.

<Chn>	Channel number used to identify the active trace
<numeric_value>	Stop time of the diagram.
Range [def. unit]	–99.999999999999 s to +100 s. The increment (parameters UP or DOWN) is 0.1 ns. [s]
*RST value	+4E-009 s

SCPI, Command Types Confirmed, command or query

Example: See `CALCulate<Chn>:TRANSform:TIME:START`.

Note: If the stop frequency entered is smaller than the current start frequency (`CALCulate<Chn>:TRANSform:TIME:START`), the start frequency is set to the stop frequency minus the minimum frequency span (`CALCulate<Chn>:TRANSform:TIME:SPAN`).
If the x-axis is scaled in distance units (`CALCulate<Chn>:TRANSform:TIME:XAXis DISTance`), then the stop value is entered in m; the range and default value changes accordingly.

CALCulate<Chn>:TRANSform:TIME[:TYPE] BPASSs | LPASSs

Selects the time domain transformation type.

<Chn> Channel number used to identify the active trace

Parameters BPASSs – Bandpass impulse (only impulse response; a step response `CALCulate<Chn>:TRANSform:TIME:STIMulus STEP` is automatically changed to impulse response)
LPASSs – Lowpass (impulse or step response, depending on `CALCulate<Chn>:TRANSform:TIME:STIMulus` setting)

***RST value** BPASSs

SCPI, Command Types Confirmed, command or query

Example: `*RST; :CALC:TRAN:TIME:STAT ON`
Reset the instrument, activating a frequency sweep, and enable the time domain transformation for the default trace.
`CALC:TRAN:TIME LPAS; TIME:STIM STEP`
Select a lowpass step transformation.
`CALC:TRAN:TIME:LPAS KFST`
Calculate a harmonic grid, keeping the stop frequency and the number of points.

CALCulate<Chn>:TRANSform:TIME:WINDow RECT | HAMMing | HANN | BOHMan | DCHebyshev

Selects the window type for filtering the data in the frequency domain prior to the time domain transformation.

<Chn> Channel number used to identify the active trace

Parameters RECT – No profiling (rectangle)
HANN – Normal profile (Hann)
HAMMing – Low first sidelobe (Hamming)
BOHMan – Steep falloff (Bohman)
DCHebyshev – Arbitrary sidelobes (Dolph-Chebyshev)

***RST value** HANN

SCPI, Command Types Confirmed (with some device-specific parameters), command or query

Example:

See `CALCulate<Chn>:TRANSform:TIME:DCHebychev`

CALCulate<Chn>:TRANSform:TIME:XAXis TIME | DISTance

Switches over between the x-axis scaling in time units or distance units.

<Chn> Channel number used to identify the active trace

TIME x-axis scaled in time units

DISTance x-axis scaled in distance units ($Distance = Time * c_0 * Velocity\ Factor$)

***RST value** OFF [-]

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; :CALC:TRAN:TIME:STAT ON
```

Reset the instrument, activating a frequency sweep, and enable the time domain transformation for the default trace.

```
CALC:TRAN:TIME:XAX DIST
```

Convert the x-axis scaling to distance units.

CALCulate<Ch>:TRANSform:VNETworks...

This subsystem defines the circuit models for single ended and balanced port (de-)embedding and activates the (de-)embedding function.

The circuit models are referenced by means of predefined character data parameters. They are different for single ended port, balanced port, and ground loop (de-)embedding.

Circuit models for balanced port and port pair embedding/deembedding:

Parameter	Circuit model	Capacitances	Resistances	Inductances
FIMPort	File import, no circuit model	–	–	–
STSL	Serial Touchstone (.s2p) data, shunt L	–	R1	L1
STSC	Serial Touchstone (.s2p) data, shunt C	C1	R1	–
SLST	Shunt L, serial Touchstone (.s2p) data	–	R1	L1
SCST	Shunt C, serial Touchstone (.s2p) data	C1	R1	–
CSSL	Serial Cs, shunt L	C1, C2	R1, R2, R3	L1
LSSC	Serial Ls, shunt C	C1	R1, R2, R3	L1, L2
CSSC	Serial Cs, shunt C	C1, C2, C3	R1, R2, R3	–
LSSL	Serial Ls, shunt L	–	R1, R2, R3	L1, L2, L3

Parameter	Circuit model	Capacitances	Resistances	Inductances
SLCS	Shunt L, serial Cs	C1, C2	R1, R2, R3	L1
SCLS	Shunt C, serial Ls	C1	R1, R2, R3	L1, L2
SCCS	Shunt C, serial Cs	C1, C2, C3	R1, R2, R3	–
SLLS	Shunt L, serial Ls	–	R1, R2, R3	L1, L2, L3

Circuit models for single ended port embedding/deembedding:

Parameter	Circuit model	Capacitances	Resistances	Inductances
FIMPort	File import, no circuit model	–	–	–
CSL	Serial C, shunt L	C1	R1, R2	L1
LSC	Serial L, shunt C	C1	R1, R2	L1
CSC	Serial C, shunt C	C1, C2	R1, R2	–
LSL	Serial L, shunt L	–	R1, R2	L1, L2
SLC	Shunt L, serial C	C1	R1, R2	L1
SCL	Shunt C, serial L	C1	R1, R2	L1
SCC	Shunt C, serial C	C1, C2	R1, R2	–
SLL	Shunt L, serial L	–	R1, R2	L1, L2

Circuit models for ground loop embedding/deembedding:

Parameter	Circuit model	Capacitances	Resistances	Inductances
FIMPort	File import, no circuit model	–	–	–
SL	Shunt L	–	R	L
SC	Shunt C	C	R	–

CALCulate<Ch>:TRANSform:VNETworks:BALanced:DEEMbedding<Log_pt>:PARAMeters:C<no> STSC | SCST | CSSL | LSSC | CSSC | SLCS | SCLS | SCCS,<numeric_value>

Specifies the capacitance values C1, C2, C3 in the different circuit models for balanced port deembedding.

<Ch>	Channel number. If unspecified the numeric suffix is set to 1.
<Log_pt>	Logical port number (balanced port)
<no>	Number of capacitance in circuit model. If unspecified the numeric suffix is set to 1.
Range [def. unit]	1 to 3 [–] The number of capacitances depends on the selected circuit model .
Parameters	Possible circuit models (character data); see circuit models .
*RST value	– (see command type description below)

<numeric_value>	Capacitance C<no> for the specified circuit model.
Range [def. unit]	–1mF to 1 mF [F]. The increment is 1 fF (10^{-15} F).
*RST value	1 pF (10^{-12} F)
SCPI, Command Types	Device-specific, command or query. In the query form, the <numeric_value> parameter must be omitted. The command returns the capacitance value for the specified circuit model.

Example:

```
*RST; :SOUR:LPOR1 1,2; :CALC:TRAN:VNET:BAL:DEEM:PAR:C2? CSSL
```

Create a balanced port and query the default capacitance C2 for the *Serial Cs*, *shunt L* circuit model. The response is 1E-012 (1 pF).

```
CALC:TRAN:VNET:BAL:DEEM:PAR:C2 CSSL, 2.2E-12
```

Increase the capacitance to 2.2 pF.

CALCulate<Ch>:TRANSform:VNETworks:BALanced:DEEMbedding<Log_pt>:PARAMeters:L<no> STSL | SLST | CSSL | LSSC | LSSL | SLCS | SCLS | SLLS,<numeric_value>

Specifies the inductance values L1, L2, L3 in the different circuit models for balanced port deembedding.

<Ch>	Channel number
<Log_pt>	Logical port number (balanced port)
<no>	Number of inductance in circuit model. If unspecified the numeric suffix is set to 1.
Range [def. unit]	1 to 3 [–] The number of inductances depends on the selected circuit model .
Parameters	Possible circuit models (character data); see circuit models .
*RST value	– (see command type description below)
<numeric_value>	Inductance L<no> for the specified circuit model.
Range [def. unit]	–1H to 1 H [H]. The increment is 1 pH (10^{-12} H).
*RST value	1 nH (10^{-9} H)
SCPI, Command Types	Device-specific, command or query. In the query form, the <numeric_value> parameter must be omitted. The command returns the inductance value for the specified circuit model.

Example:

```
*RST; :SOUR:LPOR1 1,2; :CALC:TRAN:VNET:BAL:DEEM:PAR:L1? CSSL
```

Create a balanced port and query the default inductance L1 for the *Serial Cs*, *shunt L* circuit model. The response is 1E-009 (1 nH).

```
CALC:TRAN:VNET:BAL:DEEM:PAR:L1 CSSL, 2.2E-9
```

Increase the inductance to 2.2 nH.

CALCulate<Ch>:TRANSform:VNETworks:BALanced:DEEMbedding<Log_pt>:PARAMeters:R<no> STSL | STSC | SLST | SCST | CSSL | LSSC | CSSC | LSSL | SLCS | SCLS | SCCS | SLLS,<numeric_value>

Specifies the resistance values R1, R2, R3 in the different circuit models for balanced port deembedding.

<Ch>	Channel number
<Log_pt>	Logical port number (balanced port)
<no>	Number of resistance in circuit model. If unspecified the numeric suffix is set to 1.
Range [def. unit]	1 to 3 [–] The number of resistances depends on the selected circuit model .
Parameters	Possible circuit models (character data); see circuit models .
*RST value	– (see command type description below)
<numeric_value>	Resistance R<no> for the specified circuit model.
Range [def. unit]	–10 MΩ to 10 MΩ [Ω]. The increment is 1 mΩ (10^{-3} Ω).
*RST value	0 Ω for all resistances connected in series with an inductance 10 MΩ for all resistances connected in parallel with a capacitance
SCPI, Command Types	Device-specific, command or query. In the query form, the <numeric_value> parameter must be omitted. The command returns the resistance value for the specified circuit model.

Example:

```
*RST; :SOUR:LPOR1 1,2; :CALC:TRAN:VNET:BAL:DEEM:PAR:R1? CSSL; R2? CSSL; R3? CSSL
```

Create a balanced port and query the default resistances for the *Serial Cs, shunt L* circuit model. The response is 10000000000;10000000000; 0.

```
CALC:TRAN:VNET:BAL:DEEM:PAR:R3 CSSL, 2.2E+3
```

Increase the resistance R3 to 2.2 kΩ.

CALCulate<Ch>:TRANSform:VNETworks:BALanced:DEEMbedding<Log_pt>[:STATe] <Boolean>

Enables or disables the deembedding function for balanced ports. It is allowed to change the circuit model and its parameters while deembedding is enabled.

<Ch>	Channel number
<Log_pt>	Logical port number (balanced port)
<Boolean>	ON – Deembedding active OFF – Deembedding inactive
*RST value	OFF [–]
SCPI, Command Types	Device-specific, command or query

Example:

```
*RST; SOUR:LPOR1 1,2; LPOR2 3,4
```

Define a balanced port configuration.

```
CALC:TRAN:VNET:BAL:DEEM:TND CSSL
```

Select the *Serial Cs, shunt L* circuit model for deembedding.

```
CALC:TRAN:VNET:BAL:DEEM:PAR:R3 CSSL, 2.2E+3; :CALC:TRAN:VNET:BAL:DEEM ON
```

Increase the resistance R3 for the *Serial Cs, shunt L* circuit model to 2.2 kΩ and enable deembedding.

CALCulate<Ch>:TRANSform:VNETworks:BALanced:DEEMbedding<Log_pt>:TND efinition FIMPort | STSL | STSC | SLST | SCST | CSSL | LSSC | CSSC | LSSL | SLCS | SCLS | SCCS | SLLS

Selects the circuit model for balanced port deembedding.

<Ch>	Channel number
<Log_pt>	Logical port number (balanced port)
Parameters	Possible circuit models (character data); see circuit models .
*RST value	CSSL
SCPI, Command Types	Device-specific, command or query.

Example: See `CALCulate<Ch>:TRANSform:VNETworks:BALanced:DEEMbedding[:STATe]`

CALCulate<Ch>:TRANSform:VNETworks:BALanced:EMBEding<Log_pt>:PARAm eters:C<no> STSC | SCST | CSSL | LSSC | CSSC | SLCS | SCLS | SCCS,<numeric_value>

Specifies the capacitance values C1, C2, C3 in the different circuit models for balanced port embedding.

<Ch>	Channel number
<Log_pt>	Logical port number (balanced port)
<no>	Number of capacitance in circuit model. If unspecified the numeric suffix is set to 1.
Range [def. unit]	1 to 3 [–] The number of capacitances depends on the selected circuit model .
Parameters	Possible circuit models (character data); see circuit models .
*RST value	– (see command type description below)
<numeric_value>	Capacitance C<no> for the specified circuit model.
Range [def. unit]	–1mF to 1 mF [F]. The increment is 1 fF (10^{-15} F).
*RST value	1 pF (10^{-12} F)
SCPI, Command Types	Device-specific, command or query. In the query form, the <numeric_value> parameter must be omitted. The command returns the capacitance value for the specified circuit model.

Example: `*RST; :SOUR:LPOR1 1,2; :CALC:TRAN:VNET:BAL:EMB:PAR:C2? CSSL`

Create a balanced port and query the default capacitance C2 for the *Serial Cs, shunt L* circuit model. The response is 1E-012 (1 pF).

```
CALC:TRAN:VNET:BAL:EMB:PAR:C2 CSSL, 2.2E-12
```

Increase the capacitance to 2.2 pF.

CALCulate<Ch>:TRANSform:VNETworks:BALanced:EMBedding<Log_pt>:PARameters:L<no> STSL | SLST | CSSL | LSSC | LSSL | SLCS | SCLS | SLLS,<numeric_value>

Specifies the inductance values L1, L2, L3 in the different circuit models for balanced port embedding.

<Ch>	Channel number
<Log_pt>	Logical port number (balanced port)
<no>	Number of inductance in circuit model. If unspecified the numeric suffix is set to 1.
Range [def. unit]	1 to 3 [–] The number of inductances depends on the selected circuit model .
Parameters	Possible circuit models (character data); see circuit models .
*RST value	– (see command type description below)
<numeric_value>	Inductance L<no> for the specified circuit model.
Range [def. unit]	–1H to 1 H [H]. The increment is 1 pH (10^{-12} H).
*RST value	1 nH (10^{-9} H)
SCPI, Command Types	Device-specific, command or query. In the query form, the <numeric_value> parameter must be omitted. The command returns the inductance value for the specified circuit model.

Example:

```
*RST; :SOUR:LPOR1 1,2; :CALC:TRAN:VNET:BAL:EMB:PAR:L1? CSSL
```

Create a balanced port and query the default inductance L1 for the *Serial Cs*, *shunt L* circuit model. The response is 1E-009 (1 nH).

```
CALC:TRAN:VNET:BAL:EMB:PAR:L1 CSSL, 2.2E-9
```

Increase the inductance to 2.2 nH.

CALCulate<Ch>:TRANSform:VNETworks:BALanced:EMBedding<Log_pt>:PARameters:R<no> STSL | STSC | SLST | SCST | CSSL | LSSC | CSSC | LSSL | SLCS | SCLS | SCCS | SLLS,<numeric_value>

Specifies the resistance values R1, R2, R3 in the different circuit models for balanced port embedding.

<Ch>	Channel number
<Log_pt>	Logical port number (balanced port)
<no>	Number of resistance in circuit model. If unspecified the numeric suffix is set to 1.
Range [def. unit]	1 to 3 [–] The number of resistances depends on the selected circuit model .
Parameters	Possible circuit models (character data); see circuit models .
*RST value	– (see command type description below)

<numeric_value>	Resistance R<no> for the specified circuit model.
Range [def. unit]	–10 MΩ to 10 MΩ [Ω]. The increment is 1 mΩ (10^{-3} Ω).
*RST value	0 Ω for all resistances connected in series with an inductance 10 MΩ for all resistances connected in parallel with a capacitance
SCPI, Command Types	Device-specific, command or query. In the query form, the <numeric_value> parameter must be omitted. The command returns the resistance value for the specified circuit model.
Example:	<pre>*RST; :SOUR:LPOR1 1,2; :CALC:TRAN:VNET:BAL:EMB:PAR:R1? CSSL; R2? CSSL; R3? CSSL</pre> Create a balanced port and query the default resistances for the <i>Serial Cs</i>, <i>shunt L</i> circuit model. The response is 10000000000;10000000000; 0. <pre>CALC:TRAN:VNET:BAL:EMB:PAR:R3 CSSL, 2.2E+3</pre> Increase the resistance R3 to 2.2 kΩ.

CALCulate<Ch>:TRANSform:VNETworks:BALanced:EMBedding<Log_pt>[:STATe]<Boolean>

Enables or disables the embedding function for balanced ports. It is allowed to change the circuit model and its parameters while embedding is enabled.

<Ch>	Channel number
<Log_pt>	Logical port number (balanced port)
<Boolean>	ON – Embedding active OFF – Embedding inactive
*RST value	OFF [–]
SCPI, Command Types	Device-specific, command or query
Example:	<pre>*RST; SOUR:LPOR1 1,2; LPOR2 3,4</pre> Define a balanced port configuration. <pre>CALC:TRAN:VNET:BAL:EMB:TND CSSL</pre> Select the <i>Serial Cs</i>, <i>shunt L</i> circuit model for embedding. <pre>CALC:TRAN:VNET:BAL:EMB:PAR:R3 CSSL, 2.2E+3; :CALC:TRAN:VNET:BAL:EMB ON</pre> Increase the resistance R3 for the <i>Serial Cs</i>, <i>shunt L</i> circuit model to 2.2 kΩ and enable embedding.

CALCulate<Ch>:TRANSform:VNETworks:BALanced:EMBedding<Log_pt>:TNDefin ition FIMPort | STSL | STSC | SLST | SCST | CSSL | LSSC | CSSC | LSSL | SLCS | SCLS | SCCS | SLLS

Selects the circuit model for balanced port embedding.

<Ch>	Channel number
<Log_pt>	Logical port number (balanced port)
Parameters	Possible circuit models (character data); see circuit models .
*RST value	CSSL
SCPI, Command Types	Device-specific, command or query.
Example:	See <code>CALCulate<Ch>:TRANSform:VNETworks:BALanced:EMbedding[:STATe]</code>

CALCulate<Ch>:TRANSform:VNETworks:GLOop:DEEMbedding:PARAmeters:C SC, <capacitance>

Specifies the capacitance value for ground loop deembedding.

<Ch>	Channel number
Parameters	SC – Shunt C circuit model (character data); see circuit models .
<capacitance>	Capacitance C for ground loop deembedding.
Range [def. unit]	–1mF to 1 mF [F]. The increment is 1 fF (10^{-15} F).
*RST value	1 pF (10^{-12} F)
SCPI, Command Types	Device-specific, command or query. In the query form, only the first parameter is required; the <capacitance> must be omitted.
Example:	<pre>*RST; :CALC:TRAN:VNET:GLO:DEEM:PAR:C? SC</pre> Query the default capacitance for ground loop deembedding. The response is 1E-012 (1 pF). <pre>CALC:TRAN:VNET:GLO:DEEM:PAR:C SC, 2.2E-12</pre> Increase the capacitance to 2.2 pF.

CALCulate<Ch>:TRANSform:VNETworks:GLOop:DEEMbedding:PARAmeters:L SL, <inductance>

Specifies the inductance value for ground loop deembedding.

<Ch>	Channel number.
Parameters	SL – Shunt L circuit model (character data); see circuit models .
<inductance>	Inductance L for ground loop deembedding.
Range [def. unit]	–1H to 1 H [H]. The increment is 1 pH (10^{-12} H).
*RST value	1 nH (10^{-9} H)
SCPI, Command Types	Device-specific, command or query. In the query form, only the first parameter is required; the <inductance> must be omitted.
Example:	<pre>*RST; :CALC:TRAN:VNET:GLO:DEEM:PAR:L? SL</pre> Query the default inductance for ground loop deembedding. The response is 1E-009 (1 nH).

```
CALC:TRAN:VNET:GLO:DEEM:PAR:L SL, 2.2E-9
```

Increase the inductance to 2.2 nH.

CALCulate<Ch>:TRANSform:VNETworks:GLOop:DEEMbedding:PARameters:R SC | SL, <resistance>

Specifies the resistance value R in the different circuit models for ground loop deembedding.

<Ch>	Channel number.
Parameters	Possible circuit models (character data); see circuit models .
<resistance>	Resistance R for the specified circuit model.
Range [def. unit]	–10 MΩ to 10 MΩ [Ω]. The increment is 1 mΩ (10^{-3} Ω).
*RST value	0 Ω if the resistance is connected in series with an inductance (SL) 10 MΩ if the resistance is connected in parallel with a capacitance (SC))
SCPI, Command Types	Device-specific, command or query. In the query form, only the first parameter is required; the <resistance> parameter must be omitted. The command returns the resistance value for the specified circuit model.

Example:

```
*RST; :CALC:TRAN:VNET:GLO:DEEM:PAR:R? SC; R? SL
```

Query the default resistances for ground loop deembedding. The response is 10000000; 0.

```
CALC:TRAN:VNET:GLO:DEEM:PAR:R SC, 2.2E+3
```

Increase the resistance for the Shunt C model to 2.2 kΩ.

CALCulate<Ch>:TRANSform:VNETworks:GLOop:DEEMbedding[:STATe] <Boolean>

Enables or disables the deembedding function for ground loops. It is allowed to change the circuit model and its parameters while deembedding is enabled.

<Ch>	Channel number.
<Boolean>	ON – Deembedding active OFF – Deembedding inactive
*RST value	OFF [–]
SCPI, Command Types	Device-specific, command or query

Example:

```
CALC:TRAN:VNET:GLO:DEEM:TND SL
```

Select the *Shunt L* circuit model for deembedding.

```
CALC:TRAN:VNET:GLO:DEEM:PAR:R SL, 2.2E+3; :CALC:TRAN:VNET:GLO:DEEM ON
```

Increase the resistance for the *Shunt L* circuit model to 2.2 kΩ and enable deembedding.

CALCulate<Ch>:TRANSform:VNETworks:GLOop:DEEMbedding:TNDefinition FIMPort | SL | SC

Selects the circuit model for ground loop deembedding.

<Ch>	Channel number.
Parameters	Possible circuit models (character data); see circuit models .
*RST value	FIMPort
SCPI, Command Types	Device-specific, command or query.
Example:	See <code>CALCulate<Ch>:TRANSform:VNETworks:GLOop:DEEMbedding[:STATe]</code>

CALCulate<Ch>:TRANSform:VNETworks:GLOop:EMBedding:PARAmeters:C CSL | LSC | CSC | SLC | SCL | SCC,<capacitance>

Specifies the capacitance values C1, C2 in the different circuit models for ground loop embedding.

<Ch>	Channel number.
Parameters	SC – Shunt C circuit model (character data); see circuit models .
<capacitance>	Capacitance C for ground loop embedding.
Range [def. unit]	–1mF to 1 mF [F]. The increment is 1 fF (10^{-15} F).
*RST value	1 pF (10^{-12} F)
SCPI, Command Types	Device-specific, command or query. In the query form, only the first parameter is required; the <capacitance> must be omitted.
Example:	<code>*RST; :CALC:TRAN:VNET:GLO:EMB:PAR:C? SC</code>

Query the default capacitance for ground loop embedding. The response is 1E-012 (1 pF).

`CALC:TRAN:VNET:GLO:EMB:PAR:C SC, 2.2E-12`

Increase the capacitance to 2.2 pF.

CALCulate<Ch>:TRANSform:VNETworks:GLOop:EMBedding:PARAmeters:L SL, <inductance>

Specifies the inductance value for ground loop embedding.

<Ch>	Channel number.
Parameters	SL – Shunt L circuit model (character data); see circuit models .
<inductance>	Inductance L for ground loop embedding.
Range [def. unit]	–1H to 1 H [H]. The increment is 1 pH (10^{-12} H).
*RST value	1 nH (10^{-9} H)
SCPI, Command Types	Device-specific, command or query. In the query form, only the first parameter is required; the <inductance> must be omitted.

Example:

```
*RST; :CALC:TRAN:VNET:GLO:EMB:PAR:L? SL
```

Query the default inductance for ground loop embedding. The response is 1E-009 (1 nH).

```
CALC:TRAN:VNET:GLO:EMB:PAR:L SL, 2.2E-9
```

Increase the inductance to 2.2 nH.

CALCulate<Ch>:TRANSform:VNETworks:GLOop:EMBedding:PARAmeters:R SC | SL,<resistance>

Specifies the resistance value R in the different circuit models for ground loop embedding.

<Ch> Channel number.

Parameters Possible circuit models (character data); see [circuit models](#).

<resistance> Resistance R for the specified circuit model.

Range [def. unit] –10 MΩ to 10 MΩ [Ω]. The increment is 1 mΩ (10^{-3} Ω).

*RST value 0 Ω if the resistance is connected in series with an inductance (SL)
10 MΩ if the resistance is connected in parallel with a capacitance (SC)

SCPI, Command Types Device-specific, command or query. In the query form, only the first parameter is required; the <resistance> parameter must be omitted. The command returns the resistance value for the specified circuit model.

Example:

```
*RST; :CALC:TRAN:VNET:GLO:EMB:PAR:R? SC; R? SL
```

Query the default resistances for ground loop embedding. The response is 10000000; 0.

```
CALC:TRAN:VNET:GLO:EMB:PAR:R SC, 2.2E+3
```

Increase the resistance for the *Shunt C* model to 2.2 kΩ.

CALCulate<Ch>:TRANSform:VNETworks:GLOop:EMBedding[:STATe] <Boolean>

Enables or disables the embedding function for ground loops. It is allowed to change the circuit model and its parameters while embedding is enabled.

<Ch> Channel number.

<Boolean> ON – Embedding active
OFF – Embedding inactive

*RST value OFF [–]

SCPI, Command Types Device-specific, command or query

Example:

```
CALC:TRAN:VNET:GLO:EMB:TND SL
```

Select the *Shunt L* circuit model for embedding.

```
CALC:TRAN:VNET:GLO:EMB:PAR:R SL, 2.2E+3; :CALC:TRAN:VNET:GLO:EMB ON
```

Increase the resistance for the *Shunt L* circuit model to 2.2 kΩ and enable

embedding.

CALCulate<Ch>:TRANSform:VNETworks:GLOop:EMBedding:TNDefinition FIMPort | SL | SC

Selects the circuit model for ground loop embedding.

<Ch>	Channel number.
Parameters	Possible circuit models (character data); see circuit models .
*RST value	FIMPort
SCPI, Command Types	Device-specific, command or query.
Example:	See <code>CALCulate<Ch>:TRANSform:VNETworks:GLOop:EMBedding[:STATe]</code>

CALCulate<Ch>:TRANSform:VNETworks:PPAir:DEEMbedding<List_idx>:DEFine <first port no>, <second port no>{, <first port no>, <second port no>}

Defines a list of port pairs for port pair deembedding. The command can be used repeatedly to extend or overwrite the list.

<Ch>	Channel number
<List_idx>	List index, denotes the current number of the defined pair of ports within the list. If several port pairs are defined, <List_idx> is the number of the first port pair.
<first port no>, <second port no>	Two different analyzer ports
Range [def. unit]	1 to 4 (depending on analyzer model) [–]
*RST value	–
SCPI, Command Types	Device-specific, no query
Example:	See <code>CALCulate<Ch>:TRANSform:VNETworks:PPAir:DEEMbedding<List_idx>[:STATe]</code>

CALCulate<Ch>:TRANSform:VNETworks:PPAir:DEEMbedding<List_idx>:DElete

Deletes the previously defined list of port pairs for port pair deembedding.

<Ch>	Channel number
<List_idx>	List index, is available for systematic reasons, but must be always 1 or omitted. The list index in the other <code>...PPAir:DEEMbedding...</code> commands denotes the current number of a pair of ports within the list.

*RST value –

SCPI, Command Types Device-specific, no query

Example: See `CALCulate<Ch>:TRANSform:VNETworks:PPAir:DEEMbedding<List_idx>[:STATe]`

CALCulate<Ch>:TRANSform:VNETworks:PPAir:DEEMbedding<List_idx>:PARame ters:C<no> STSC | SCST | CSSL | LSSC | CSSC | SLCS | SCLS | SCCS,<numeric_value>

Specifies the capacitance values C1, C2, C3 in the different circuit models for port pair deembedding.

<Ch> Channel number

<List_idx> Current number of a port pair in the list, defined via
`CALCulate<Ch>:TRANSform:VNETworks:PPAir:DEEMbedding<List_idx>:DEFine`

<no> Number of capacitance in circuit model. If unspecified the numeric suffix is set to 1.

Range [def. unit] 1 to 3 [–] The number of capacitances depends on the selected [circuit model](#).

Parameters Possible circuit models (character data); see [circuit models](#).

*RST value – (see command type description below)

<numeric_value> Capacitance C<no> for the specified circuit model.

Range [def. unit] –1mF to 1 mF [F]. The increment is 1 fF (10^{-15} F).

*RST value 1 pF (10^{-12} F)

SCPI, Command Types Device-specific, command or query. In the query form, the <numeric_value> parameter must be omitted. The command returns the capacitance value for the specified circuit model.

Example: `*RST; :CALC:TRAN:VNET:PPA:DEEM:DEF 1,2; :CALC:TRAN:VNET:PPA:DEEM1:PAR:C2? CSSL`

Create a list of port pairs and query the default capacitance C2 for the *Serial Cs*, *shunt L* circuit model. The response is 1E-012 (1 pF).

`CALC:TRAN:VNET:PPA:DEEM:PAR:C2 CSSL, 2.2E-12`

Increase the capacitance to 2.2 pF.

CALCulate<Ch>:TRANSform:VNETworks:PPAir:DEEMbedding<List_idx>:PARame ters:L<no> STSL | SLST | CSSL | LSSC | LSSL | SLCS | SCLS | SLLS,<numeric_value>

Specifies the inductance values L1, L2, L3 in the different circuit models for port pair deembedding.

<Ch> Channel number

<List_idx> Current number of a port pair in the list, defined via

CALCulate<Ch>:TRANSform:VNETworks:PPAir:DEEMbedding<List_id x>:DEFine

<no>	Number of inductance in circuit model. If unspecified the numeric suffix is set to 1.
Range [def. unit]	1 to 3 [–] The number of inductances depends on the selected circuit model .
Parameters	Possible circuit models (character data); see circuit models .
*RST value	– (see command type description below)
<numeric_value>	Inductance L<no> for the specified circuit model.
Range [def. unit]	–1H to 1 H [H]. The increment is 1 pH (10^{-12} H).
*RST value	1 nH (10^{-9} H)
SCPI, Command Types	Device-specific, command or query. In the query form, the <numeric_value> parameter must be omitted. The command returns the inductance value for the specified circuit model.

Example:

```
*RST; :CALC:TRAN:VNET:PPA:DEEM:DEF 1,2; :CALC:TRAN:VNET:PPA:DEEM:PAR:L1?
CSSL
```

Create a list of port pairs and query the default inductance L1 for the *Serial Cs*, *shunt L* circuit model. The response is 1E-009 (1 nH).

```
CALC:TRAN:VNET:PPA:DEEM:PAR:L1 CSSL, 2.2E-9
```

Increase the inductance to 2.2 nH.

CALCulate<Ch>:TRANSform:VNETworks:PPAir:DEEMbedding<List_idx>:PARameters:R<no> STSL | STSC | SLST | SCST | CSSL | LSSC | CSSC | LSSL | SLCS | SCLS | SCCS | SLLS,<numeric_value>

Specifies the resistance values R1, R2, R3 in the different circuit models for port pair deembedding.

<Ch>	Channel number
<List_idx>	Current number of a port pair in the list, defined via CALCulate<Ch>:TRANSform:VNETworks:PPAir:DEEMbedding<List_id x>:DEFine
<no>	Number of resistance in circuit model. If unspecified the numeric suffix is set to 1.
Range [def. unit]	1 to 3 [–] The number of resistances depends on the selected circuit model .
Parameters	Possible circuit models (character data); see circuit models .
*RST value	– (see command type description below)
<numeric_value>	Resistance R<no> for the specified circuit model.
Range [def. unit]	–10 MΩ to 10 MΩ [Ω]. The increment is 1 mΩ (10^{-3} Ω).
*RST value	0 Ω for all resistances connected in series with an inductance 10 MΩ for all resistances connected in parallel with a capacitance
SCPI, Command Types	Device-specific, command or query. In the query form, the <numeric_value> parameter must be omitted. The command returns the resistance value for the specified circuit model.

Example:

```
*RST; :CALC:TRAN:VNET:PPA:DEEM:DEF 1,2;
CALC:TRAN:VNET:PPA:DEEM:PAR:R1? CSSL; R2? CSSL; R3? CSSL
```

Create a list of port pairs and query the default resistances for the *Serial Cs*, *shunt L* circuit model. The response is 10000000000;10000000000; 0.

```
CALC:TRAN:VNET:PPA:DEEM:PAR:R3 CSSL, 2.2E+3
```

Increase the resistance R3 to 2.2 kΩ.

CALCulate<Ch>:TRANSform:VNETworks:PPAir:DEEMbedding<List_idx>[:STATe] <Boolean>

Enables or disables the deembedding function for port pairs. It is allowed to change the circuit model and its parameters while deembedding is enabled.

<Ch>	Channel number
<List_idx>	Current number of a port pair in the list, defined via CALCulate<Ch>:TRANSform:VNETworks:PPAir:DEEMbedding<List_idx>:DEFine
<Boolean>	ON – Deembedding active OFF – Deembedding inactive
*RST value	OFF [–]

**SCPI,
Command
Types** Device-specific, command or query

Example:

```
*RST; :CALC:TRAN:VNET:PPA:DEEM:DEF 1,2,3,4
```

Define a port pair configuration with two port pairs.

```
CALC:TRAN:VNET:PPA:DEEM1:TND CSSL
```

Select the *Serial Cs*, *shunt L* circuit model for the first port pair.

```
CALC:TRAN:VNET:PPA:DEEM:PAR:R3 CSSL, 2.2E+3; :CALC:TRAN:VNET:PPA:DEEM ON
```

Increase the resistance R3 for the *Serial Cs*, *shunt L* circuit model to 2.2 kΩ and enable deembedding.

```
...
CALC:TRAN:VNET:PPA:DEEM:DEL
```

Delete the port pair configuration.

CALCulate<Ch>:TRANSform:VNETworks:PPAir:DEEMbedding<List_idx>:TNDefini tion FIMPort | STSL | STSC | SLST | SCST | CSSL | LSSC | CSSC | LSSL | SLCS | SCLS | SCCS | SLLS

Selects the circuit model for port pair deembedding.

<Ch>	Channel number
<List_idx>	Current number of a port pair in the list, defined via CALCulate<Ch>:TRANSform:VNETworks:PPAir:DEEMbedding<List_idx>:DEFine

Fine

Parameters Possible circuit models (character data); see [circuit models](#).***RST value** CSSL**SCPI,
Command
Types** Device-specific, command or query.**Example:** See `CALCulate<Ch>:TRANSform:VNETworks:PPAir:DEEMbedding[:STATe]`**CALCulate<Ch>:TRANSform:VNETworks:PPAir:EMBedding<List_idx>:DEFine
<first port no>, <second port no>{, <first port no>, <second port no>}**

Defines a list of port pairs for port pair embedding. The command can be used repeatedly to extend or overwrite the list.

<Ch> Channel number**<List_idx>** List index, denotes the current number of the defined pair of ports within the list. If several port pairs are defined, <List_idx> is the number of the first port pair.**<first port no>,
<second
port no>** Two different analyzer ports

Range [def. unit] 1 to 4 (depending on analyzer model) [–]

***RST value** –**SCPI,
Command
Types** Device-specific, no query**Example:** See `CALCulate<Ch>:TRANSform:VNETworks:PPAir:EMBedding<List_idx>[:STATe]`**CALCulate<Ch>:TRANSform:VNETworks:PPAir:EMBedding<List_idx>:DELeTe**

Deletes the previously defined list of port pairs for port pair embedding.

<Ch> Channel number**<List_idx>** List index, is available for systematic reasons, but must be always 1 or omitted. The list index in the other ...PPAir:EMBedding... commands denotes the current number of a pair of ports within the list.***RST value** –**SCPI,
Command
Types** Device-specific, no query**Example:** See `CALCulate<Ch>:TRANSform:VNETworks:PPAir:EMBedding<List_idx>[:STATe]`

CALCulate<Ch>:TRANSform:VNETworks:PPAir:EMBedding<List_idx>:PARAmeter s:C<no> STSC | SCST | CSSL | LSSC | CSSC | SLCS | SCLS | SCCS,<numeric_value>

Specifies the capacitance values C1, C2, C3 in the different circuit models for port pair embedding.

<Ch>	Channel number
<List_idx>	Current number of a port pair in the list, defined via <code>CALCulate<Ch>:TRANSform:VNETworks:PPAir:EMBedding<List_idx>:DEFine</code>
<no>	Number of capacitance in circuit model. If unspecified the numeric suffix is set to 1.
Range [def. unit]	1 to 3 [–] The number of capacitances depends on the selected circuit model .
Parameters	Possible circuit models (character data); see circuit models .
*RST value	– (see command type description below)
<numeric_value>	Capacitance C<no> for the specified circuit model.
Range [def. unit]	–1mF to 1 mF [F]. The increment is 1 fF (10^{-15} F).
*RST value	1 pF (10^{-12} F)
SCPI, Command Types	Device-specific, command or query. In the query form, the <numeric_value> parameter must be omitted. The command returns the capacitance value for the specified circuit model.

Example:

```
*RST; :CALC:TRAN:VNET:PPA:EMB:DEF 1,2; :CALC:TRAN:VNET:PPA:EMB:PAR:C2?
CSSL
```

Query the default capacitance C2 for the *Serial Cs, shunt L* circuit model. The response is 1E-012 (1 pF).

```
CALC:TRAN:VNET:PPA:EMB:PAR:C2 CSSL, 2.2E-12
```

Increase the capacitance to 2.2 pF.

CALCulate<Ch>:TRANSform:VNETworks:PPAir:EMBedding<List_idx>:PARAmeter s:L<no> STSL | SLST | CSSL | LSSC | LSSL | SLCS | SCLS | SLLS,<numeric_value>

Specifies the inductance values L1, L2, L3 in the different circuit models for port pair embedding.

<Ch>	Channel number
<List_idx>	Current number of a port pair in the list, defined via <code>CALCulate<Ch>:TRANSform:VNETworks:PPAir:EMBedding<List_idx>:DEFine</code>
<no>	Number of inductance in circuit model. If unspecified the numeric suffix is set to 1.
Range [def. unit]	1 to 3 [–] The number of inductances depends on the selected circuit model .
Parameters	Possible circuit models (character data); see circuit models .
*RST value	– (see command type description below)

<numeric_value>	Inductance L<no> for the specified circuit model.
Range [def. unit]	–1H to 1 H [H]. The increment is 1 pH (10^{-12} H).
*RST value	1 nH (10^{-9} H)
SCPI, Command Types	Device-specific, command or query. In the query form, the <numeric_value> parameter must be omitted. The command returns the inductance value for the specified circuit model.

Example:

```
*RST; :CALC:TRAN:VNET:PPA:EMB:DEF 1,2; :CALC:TRAN:VNET:PPA:EMB:PAR:L1?
CSSL
```

Query the default inductance L1 for the *Serial Cs*, *shunt L* circuit model. The response is 1E-009 (1 nH).

```
CALC:TRAN:VNET:PPA:EMB:PAR:L1 CSSL, 2.2E-9
```

Increase the inductance to 2.2 nH.

CALCulate<Ch>:TRANSform:VNETworks:PPAir:EMBedding<List_idx>:PARAmeter s:R<no> STSL | STSC | SLST | SCST | CSSL | LSSC | CSSC | LSSL | SLCS | SCLS | SCCS | SLLS,<numeric_value>

Specifies the resistance values R1, R2, R3 in the different circuit models for port pair embedding.

<Ch>	Channel number
<List_idx>	Current number of a port pair in the list, defined via <code>CALCulate<Ch>:TRANSform:VNETworks:PPAir:EMBedding<List_idx>:DEFine</code>
<no>	Number of resistance in circuit model. If unspecified the numeric suffix is set to 1.
Range [def. unit]	1 to 3 [–] The number of resistances depends on the selected circuit model .
Parameters	Possible circuit models (character data); see circuit models .
*RST value	– (see command type description below)
<numeric_value>	Resistance R<no> for the specified circuit model.
Range [def. unit]	–10 MΩ to 10 MΩ [Ω]. The increment is 1 mΩ (10^{-3} Ω).
*RST value	0 Ω for all resistances connected in series with an inductance 10 MΩ for all resistances connected in parallel with a capacitance
SCPI, Command Types	Device-specific, command or query. In the query form, the <numeric_value> parameter must be omitted. The command returns the resistance value for the specified circuit model.

Example:

```
*RST; :CALC:TRAN:VNET:PPA:EMB:DEF 1,2
CALC:TRAN:VNET:PPA:EMB:PAR:R1? CSSL; R2? CSSL; R3? CSSL
```

Query the default resistances for the *Serial Cs*, *shunt L* circuit model. The response is 10000000000;10000000000; 0.

```
CALC:TRAN:VNET:PPA:EMB:PAR:R3 CSSL, 2.2E+3
```

Increase the resistance R3 to 2.2 kΩ.

**CALCulate<Ch>:TRANSform:VNETworks:PPAir:EMBedding<List_idx>[:STATe]
<Boolean>**

Enables or disables the embedding function for port pairs. It is allowed to change the circuit model and its parameters while embedding is enabled.

<Ch>	Channel number
<List_idx>	Current number of a port pair in the list, defined via CALCulate<Ch>:TRANSform:VNETworks:PPAir:EMBedding<List_idx>:DEFine
<Boolean>	ON – Embedding active OFF – Embedding inactive
*RST value	OFF [-]

**SCPI,
Command
Types**

Device-specific, command or query

Example:

```
*RST; :CALC:TRAN:VNET:PPA:EMB:DEF 1,2,3,4
```

Define a port pair configuration with two port pairs.

```
CALC:TRAN:VNET:PPA:EMB1:TND CSSL
```

Select the *Serial Cs, shunt L* circuit model for port pair no. 1.

```
CALC:TRAN:VNET:PPA:EMB:PAR:R3 CSSL, 2.2E+3; :CALC:TRAN:VNET:PPA:EMB ON
```

Increase the resistance R3 for the *Serial Cs, shunt L* circuit model to 2.2 kΩ and enable embedding.

```
...
CALC:TRAN:VNET:PPA:EMB:DEL
```

Delete the port pair configuration.

**CALCulate<Ch>:TRANSform:VNETworks:PPAir:EMBedding<List_idx>:TNDefinitio
n FIMPort | STSL | STSC | SLST | SCST | CSSL | LSSC | CSSC | LSSL | SLCS |
SCLS | SCCS | SLLS**

Selects the circuit model for port pair embedding.

<Ch>	Channel number
<List_idx>	Current number of a port pair in the list, defined via CALCulate<Ch>:TRANSform:VNETworks:PPAir:EMBedding<List_idx>:DEFine
Parameters	Possible circuit models (character data); see circuit models .
*RST value	CSSL

**SCPI,
Command
Types**

Device-specific, command or query.

Example:

See [CALCulate<Ch>:TRANSform:VNETworks:PPAir:EMBedding\[:STATe\]](#)

CALCulate<Ch>:TRANSform:VNETworks:SENDEd:DEEMbedding<Ph_pt>:PARame ters:C<no> CSL | LSC | CSC | SLC | SCL | SCC,<numeric_value>

Specifies the capacitance values C1, C2 in the different circuit models for single ended port deembedding.

<Ch>	Channel number
<Ph_pt>	Physical port number
<no>	Number of capacitance in circuit model. If unspecified the numeric suffix is set to 1.
Range [def. unit]	1 to 2 [–] The number of capacitances depends on the selected circuit model .
Parameters	Possible circuit models (character data); see circuit models .
*RST value	– (see command type description below)
<numeric_value>	Capacitance C<no> for the specified circuit model.
Range [def. unit]	–1mF to 1 mF [F]. The increment is 1 fF (10^{-15} F).
*RST value	1 pF (10^{-12} F)
SCPI, Command Types	Device-specific, command or query. In the query form, the <numeric_value> parameter must be omitted. The command returns the capacitance value for the specified circuit model.

Example:

```
*RST; :CALC:TRAN:VNET:SEND:DEEM:PAR:C2? CSC
```

Query the default capacitance C2 for the *Serial C*, *shunt C* circuit model. The response is 1E-012 (1 pF).

```
CALC:TRAN:VNET:SEND:DEEM:PAR:C2 CSC, 2.2E-12
```

Increase the capacitance to 2.2 pF.

CALCulate<Ch>:TRANSform:VNETworks:SENDEd:DEEMbedding<Ph_pt>:PARame ters:L<no> CSL | LSC | LSL | SLC | SCL | SLL,<numeric_value>

Specifies the inductance values L1, L2 in the different circuit models for single ended port deembedding.

<Ch>	Channel number.
<Ph_pt>	Physical port number
<no>	Number of inductance in circuit model. If unspecified the numeric suffix is set to 1.
Range [def. unit]	1 to 2 [–] The number of inductances depends on the selected circuit model .
Parameters	Possible circuit models (character data); see circuit models .
*RST value	– (see command type description below)
<numeric_value>	Inductance L<no> for the specified circuit model.
Range [def. unit]	–1H to 1 H [H]. The increment is 1 pH (10^{-12} H).
*RST value	1 nH (10^{-9} H)
SCPI, Command Types	Device-specific, command or query. In the query form, the <numeric_value> parameter must be omitted. The command returns the inductance value for the

specified circuit model.

Example:

```
*RST; :CALC:TRAN:VNET:SEND:DEEM:PAR:L1? SLL
```

Query the default inductance L1 for the *Shunt L*, *serial L* circuit model. The response is 1E-009 (1 nH).

```
CALC:TRAN:VNET:SEND:DEEM:PAR:L1 SLL, 2.2E-9
```

Increase the inductance to 2.2 nH.

CALCulate<Ch>:TRANSform:VNETworks:SENDEd:DEEMbedding<Ph_pt>:PARame ters:R<no> CSL | LSC | CSC | LSL | SLC | SCL | SCC | SLL,<numeric_value>

Specifies the resistance values R1, R2 in the different circuit models for single ended port deembedding.

<Ch>	Channel number.
<Ph_pt>	Physical port number
<no>	Number of resistance in circuit model. If unspecified the numeric suffix is set to 1.
Range [def. unit]	1 to 2 [-] The number of resistances depends on the selected circuit model .
Parameters	Possible circuit models (character data); see circuit models .
*RST value	– (see command type description below)
<numeric_value>	Resistance R<no> for the specified circuit model.
Range [def. unit]	–10 MΩ to 10 MΩ [Ω]. The increment is 1 mΩ (10 ⁻³ Ω).
*RST value	0 Ω for all resistances connected in series with an inductance 10 MΩ for all resistances connected in parallel with a capacitance
SCPI, Command Types	Device-specific, command or query. In the query form, the <numeric_value> parameter must be omitted. The command returns the resistance value for the specified circuit model.

Example:

```
*RST; :CALC:TRAN:VNET:SEND:DEEM:PAR:R1? CSL; R2? CSL
```

Query the default resistances for the *Serial C*, *shunt L* circuit model. The response is 10000000; 0.

```
CALC:TRAN:VNET:SEND:DEEM:PAR:R2 CSL, 2.2E+3
```

Increase the resistance R2 to 2.2 kΩ.

CALCulate<Ch>:TRANSform:VNETworks:SENDEd:DEEMbedding<Ph_pt>[:STATE] <Boolean>

Enables or disables the deembedding function for single ended ports. It is allowed to change the circuit model and its parameters while deembedding is enabled.

<Ch>	Channel number.
<Ph_pt>	Physical port number

<Boolean>	ON – Deembedding active OFF – Deembedding inactive
*RST value	OFF [–]
SCPI, Command Types	Device-specific, command or query
Example:	

```
CALC:TRAN:VNET:SEND:DEEM:TND CSL
```

Select the *Serial C, shunt L* circuit model for deembedding.

```
CALC:TRAN:VNET:SEND:DEEM:PAR:R2 CSL, 2.2E+3; :CALC:TRAN:VNET:SEND:DEEM ON
```

Increase the resistance R2 for the *Serial C, shunt L* circuit model to 2.2 kΩ and enable deembedding.

CALCulate<Ch>:TRANSform:VNETworks:SENDEd:DEEMbedding<Ph_pt>:TNDefini tion FIMPort | CSL | LSC | CSC | LSL | SLC | SCL | SCC | SLL

Selects the circuit model for single ended port deembedding.

<Ch>	Channel number.
<Ph_pt>	Physical port number
Parameters	Possible circuit models (character data); see circuit models .
*RST value	CSL
SCPI, Command Types	Device-specific, command or query.
Example:	See <code>CALCulate<Ch>:TRANSform:VNETworks:SENDEd:DEEMbedding[:STATe]</code>

CALCulate<Ch>:TRANSform:VNETworks:SENDEd:EMBedding<Ph_pt>:PARAmeter s:C<no> CSL | LSC | CSC | SLC | SCL | SCC,<numeric_value>

Specifies the capacitance values C1, C2 in the different circuit models for single ended port embedding.

<Ch>	Channel number.
<Ph_pt>	Physical port number
<no>	Number of capacitance in circuit model. If unspecified the numeric suffix is set to 1.
Range [def. unit]	1 to 2 [–] The number of capacitances depends on the selected circuit model .
Parameters	Possible circuit models (character data); see circuit models .
*RST value	– (see command type description below)
<numeric_value>	Capacitance C<no> for the specified circuit model.
Range [def. unit]	–1mF to 1 mF [F]. The increment is 1 fF (10 ^{–15} F).
*RST value	1 pF (10 ^{–12} F)
SCPI, Command Types	Device-specific, command or query. In the query form, the <numeric_value> parameter must be omitted. The command returns the capacitance value for

the specified circuit model.

Example:

```
*RST; :CALC:TRAN:VNET:SEND:EMB:PAR:C2? CSC
```

Query the default capacitance C2 for the *Serial C*, *shunt C* circuit model. The response is 1E-012 (1 pF).

```
CALC:TRAN:VNET:SEND:EMB:PAR:C2 CSC, 2.2E-12
```

Increase the capacitance to 2.2 pF.

CALCulate<Ch>:TRANSform:VNETworks:SENDED:EMBedding<Ph_pt>:PARAmeter s:L<no> CSL | LSC | LSL | SLC | SCL | SLL,<numeric_value>

Specifies the inductance values L1, L2 in the different circuit models for single ended port embedding.

<Ch>	Channel number.
<Ph_pt>	Physical port number
<no>	Number of inductance in circuit model. If unspecified the numeric suffix is set to 1.
Range [def. unit]	1 to 2 [-] The number of inductances depends on the selected circuit model .
Parameters	Possible circuit models (character data); see circuit models .
*RST value	– (see command type description below)
<numeric_value>	Inductance L<no> for the specified circuit model.
Range [def. unit]	–1H to 1 H [H]. The increment is 1 pH (10^{-12} H).
*RST value	1 nH (10^{-9} H)
SCPI, Command Types	Device-specific, command or query. In the query form, the <numeric_value> parameter must be omitted. The command returns the inductance value for the specified circuit model.

Example:

```
*RST; :CALC:TRAN:VNET:SEND:EMB:PAR:L1? SLL
```

Query the default inductance L1 for the *Shunt L*, *serial L* circuit model. The response is 1E-009 (1 nH).

```
CALC:TRAN:VNET:SEND:EMB:PAR:L1 SLL, 2.2E-9
```

Increase the inductance to 2.2 nH.

CALCulate<Ch>:TRANSform:VNETworks:SENDED:EMBedding<Ph_pt>:PARAmeter s:R<no> CSL | LSC | CSC | LSL | SLC | SCL | SCC | SLL,<numeric_value>

Specifies the resistance values R1, R2 in the different circuit models for single ended port embedding.

<Ch>	Channel number.
<Ph_pt>	Physical port number
<no>	Number of resistance in circuit model. If unspecified the numeric suffix is set to 1.

Range [def. unit]	1 to 2 [–] The number of resistances depends on the selected circuit model .
Parameters	Possible circuit models (character data); see circuit models .
*RST value	– (see command type description below)
<numeric_value>	Resistance R<no> for the specified circuit model.
Range [def. unit]	–10 MΩ to 10 MΩ [Ω]. The increment is 1 mΩ (10^{-3} Ω).
*RST value	0 Ω for all resistances connected in series with an inductance 10 MΩ for all resistances connected in parallel with a capacitance
SCPI, Command Types	Device-specific, command or query. In the query form, the <numeric_value> parameter must be omitted. The command returns the resistance value for the specified circuit model.
Example:	<pre>*RST; :CALC:TRAN:VNET:SEND:EMB:PAR:R1? CSL; R2? CSL</pre> Query the default resistances for the <i>Serial C</i>, <i>shunt L</i> circuit model. The response is 10000000; 0. <pre>CALC:TRAN:VNET:SEND:EMB:PAR:R2 CSL, 2.2E+3</pre> Increase the resistance R2 to 2.2 kΩ.

CALCulate<Ch>:TRANSform:VNETworks:SENDED:EMBedding<Ph_pt>[:STATe]<Boolean>

Enables or disables the embedding function for single ended ports. It is allowed to change the circuit model and its parameters while embedding is enabled.

<Ch>	Channel number.
<Ph_pt>	Physical port number
<Boolean>	ON – Embedding active OFF – Embedding inactive
*RST value	OFF [–]
SCPI, Command Types	Device-specific, command or query

Example:	<pre>CALC:TRAN:VNET:SEND:EMB:TND CSL</pre> Select the <i>Serial C</i>, <i>shunt L</i> circuit model for embedding. <pre>CALC:TRAN:VNET:SEND:EMB:PAR:R2 CSL, 2.2E+3; :CALC:TRAN:VNET:SEND:EMB ON</pre> Increase the resistance R2 for the <i>Serial C</i>, <i>shunt L</i> circuit model to 2.2 kΩ and enable embedding.

CALCulate<Ch>:TRANSform:VNETworks:SENDED:EMBedding<Ph_pt>:TNDefinitio n FIMPort | CSL | LSC | CSC | LSL | SLC | SCL | SCC | SLL

Selects the circuit model for single ended port embedding.

<Ch>	Channel number.

<Ph_pt>	Physical port number
Parameters	Possible circuit models (character data); see circuit models .
*RST value	CSL
SCPI, Command Types	Device-specific, command or query.
Example:	See <code>CALCulate<Ch>:TRANSform:VNETworks:SENDED:EMBedding[:STATe]</code>

CONFigure

CONFigure...

This subsystem creates and deletes channels or traces and assigns channel or trace names. The commands are device-specific.

CONFigure:CHANnel<Ch>:CATalog?

Returns the numbers and names of all channels in the current setup.

<Ch>	Channel number. This parameter is ignored because the command returns all channels.
Response	String with comma-separated list of channel numbers and names, see example below. If all channels have been deleted the response is an empty string ("").
*RST value	–
SCPI, Command Types	Device-specific, query only.
Example:	<code>*RST; :CONF:CHAN2:STAT ON; NAME 'New Channel'</code>

Create channel 2 and assign the channel name "New Channel".

`CONF:CHAN:CAT?`

Query all channels and their names. As a default channel no. 1 is created on *RST, the response is '1,Ch1,2,New_Channel'.

`CONF:CHAN:NAME:ID? 'New Channel'`

Query the channel number for the channel named "New Channel". The response is 2.

CONFigure:CHANnel<Ch>:NAME '<Ch_name>'

Assigns a name to channel number <Ch>. The channel must be created before (`CONFigure:CHANnel<Ch>[:STATe] ON`). Moreover it is not possible to assign the same name to two different channels. `CONFigure:CHANnel<Ch>:CATalog?` returns a list of all defined channels with their names.

<Ch>	Number of an existing channel.
'<Ch_name>'	Channel name, e.g. 'Channel 4'.
*RST value	'Ch1'
SCPI, Command Types	Device-specific, command or query.
Example:	See <code>CONFigure:CHANnel<Ch>:CATalog?</code>

CONFigure:CHANnel<Ch>:NAME:ID? '<Ch_name>'

Queries the channel number (numeric suffix) of a channel with known channel name. A channel name must be assigned before (`CONFigure:CHANnel<Ch>NAME '<Ch_name>'`).

`CONFigure:CHANnel<Ch>:CATalog?` returns a list of all defined channels with their names.

<Ch>	Channel number. This suffix is not relevant and may be omitted (the command returns the actual channel number).
'<Ch_name>'	Channel name, e.g. 'Channel 4'.
*RST value	–
SCPI, Command Types	Device-specific, command or query.
Example:	See <code>CONFigure:CHANnel<Ch>:CATalog?</code>

CONFigure:CHANnel<Ch>:TRACe:REName '<Tr_name>'

Assigns a (new) name to the active trace in channel <Ch>.

<Ch>	Channel number.
'<Tr_name>'	Trace name, e.g. 'Trace 4'.
*RST value	–
SCPI, Command Types	Device-specific, no query.
Example:	<code>*RST; :CONF:CHAN:TRAC:REN 'Testtrace_1'</code>

Reset the analyzer to create a default trace in channel 1 and set this trace as the active trace. Rename the trace 'Testtrace_1'.

`CALC:PAR:SDEF 'Testtrace_2', 'S11'`

Create a new trace which will become the active trace in channel no. 1.

`CONF:TRAC:REN 'Testtrace_1', 'Testtrace_3'`

Rename the first trace (which is currently not active) 'Testtrace_3'.

CONFigure:CHANnel<Ch>[:STATe] <Boolean>

Creates or deletes channel no. <Ch> and selects it as the active channel.

CONFigure:CHANnel<Ch>:NAME defines the channel name.



A channel created with CONFigure:CHANnel<Ch>[:STATe] ON can be configured but has no trace assigned so that no measurement can be initiated. Use CALCulate<Ch>:PARAmeter:SDEFine "<Trace_name>," "<Parameter>" to create a new channel and a new trace. In remote control it is possible to remove all channels. This is in contrast to manual control where at least one channel with one diagram area and one trace must be available.

<Ch> Number of the channel to be created or deleted.

<Boolean> ON - Create channel no. <Ch>. If the channel no. <Ch> exists already, it is not modified but selected as the active channel
OFF - Delete channel no. <Ch>.

***RST value** ON for channel no. 1 (created on *RST), OFF for all other channels.

SCPI, Command Types Device-specific, command or query.

Example: See CONFigure:CHANnel<Ch>:CATalog?

CONFigure:TRACe<Trc>:CATalog?

Returns the numbers and names of all traces in the current setup.

<Trc> Trace number. This suffix is ignored; the command returns a list of all traces.

Response String with comma-separated list of trace numbers and names, see example below. If all traces have been deleted the response is an empty string ("").

***RST value** –

SCPI, Command Types Device-specific, query only.

Example: *RST; :CALC2:PAR:SDEF 'Ch2Trc2', 'S11'

Create channel 2 and a new trace named Ch2Trc2.

CONF:TRAC:CAT?

Query all traces and their names. As a default trace no. 1 is created upon *RST, the response is '1, TRC1, 2, Ch2Trc2'.

CONF:TRAC:NAME:ID? 'Ch2Trc2'

Query the trace number for the trace named "Ch2Trc2". The response is 2.

CONF:TRAC2:NAME?

Query the trace name for trace no. 2. The response is 'Ch2Trc2'.

CONF:TRAC:CHAN:NAME? 'Ch2Trc2'

Query the channel name for trace Ch2Trc2. The response is 'Ch2'.

CONF:TRAC:CHAN:NAME:ID? 'Ch2Trc2'

Query the channel number for trace Ch2Trc2. The response is 2.

CONFigure:TRACe<Trc>:CHANnel:NAME? '<Trc_name>'

Queries the channel name for an existing trace named '<Trc_name>'.

<Trc>	Trace number. This suffix is ignored; the trace is referenced by its name.
'<Trc_name>'	Trace name, e.g. 'Ch2Trc2'.
*RST value	– (a trace name must be specified whenever the query is used)
SCPI, Command Types	Device-specific, query only.

Example: See [CONFigure:TRACe<Trc>:CATalog?](#)

CONFigure:TRACe<Trc>:CHANnel:NAME:ID? '<Trc_name>'

Queries the channel number (numeric suffix) for an existing trace named '<Trc_name>'.

<Trc>	Trace number. This suffix is ignored; the trace is referenced by its name.
'<Trc_name>'	Trace name, e.g. 'Ch2Trc2'.
*RST value	– (a trace name must be specified whenever the query is used)
SCPI, Command Types	Device-specific, query only.

Example: See [CONFigure:TRACe<Trc>:CATalog?](#)

CONFigure:TRACe<Trc>:NAME '<Trc_name>'

Assigns a name to an existing trace number <Trc>. Note that it is not possible to assign the same name to two different traces. [CONFigure:TRACe<Trc>:CATalog?](#) returns a list of all traces in the active setup with their names.

<Trc>	Number of an existing trace.
'<Trc_name>'	Trace name, e.g. 'Ch2Trc2'.
*RST value	'Trc1'
SCPI, Command Types	Device-specific, command or query.

Example: See [CONFigure:TRACe<Trc>:CATalog?](#)

CONFigure:TRACe<Trc>:NAME:ID? '<Trc_name>'

Queries the trace number (numeric suffix) of a trace with known trace name.

[CONFigure:TRACe<Trc>:CATalog?](#) returns a list of all traces in the active setup with their names.

<Trc>	Trace number. This suffix is not relevant and may be omitted (the command

	returns the actual trace number).
'<Trc_name>'	Trace name, e.g. 'Ch2Trc2'.
*RST value	–
SCPI, Command Types	Device-specific, command or query.
Example:	See CONFigure:TRACe<Trc>:CATalog?

CONFigure:TRACe<Trc>:REName '<Old_Tr_Name>', '<New_Tr_Name>'

Assigns a new name to a trace. The trace does not have to be the active trace.

<Trc>	Trace number. This suffix is ignored; the trace is identified via its <Old_Tr_Name>
'<Old_Tr_Name>'	Old trace name, e.g. 'Trace 1'
'<New_Tr_Name>'	New trace name, e.g. 'Trace 2'
*RST value	–
SCPI, Command Types	Device-specific, no query.
Example:	See CONFigure:CHANnel<Ch>:TRACe:REName

CONTrol

AUXiliary

CONTrol...

This subsystem provides device-specific commands to control hardware settings related to the rear panel connectors.

CONTrol:AUXiliary:A[:DATA] <numeric_value> CONTrol:AUXiliary:B[:DATA] <numeric_value>

Writes a channel-dependent bit pattern to the output ports A or B of the Universal Interface (option R&S ZVAB-B14). The channel bits are combined with the (static) output bits defined via [CONTrol:HANDler:A|B\[:DATA\]](#) using a logical "or" operation. The channel bits must be **defined** while the channel is active ([CONTrol:NSElect <Ch>](#)); the corresponding signals will be **in effect** while the channel is measured (dynamic output signals).

To prevent undefined states, it is recommendable to subdivide output pins of ports A and B into two groups: The first pin group is used as an interface for the static information, the second group provides channel-dependent output signals, in addition to the channel bits at the USER CONTROL connector (see

`CONTrol:AUXiliary:C[:DATA]`). Up to $2 \times 8 = 16$ additional channel bits are available.

<numeric_value>	Decimal value .
Range [def. unit]	0 to 255 [-] The transferred values correspond to the following states of the Universal Interface connector: 0 – no channel-dependent (dynamic) signal at any of the pins A7 ... A0 or B7 ... B0; the static configuration of the output ports A and B is unchanged 1 – additional dynamic output signal at pin A0 or B0 2 – additional dynamic output signal at pin A1 or B1 3 – additional dynamic output signal at pin A0 and A1 or B0 and B1 ... 255 – additional dynamic output signal at pins A7 ... A0 or B7 ... B0
*RST value	0 (no dynamic signal)

SCPI, Command Types Device-specific, command or query

Example:

```
CONTrol:HANDler:A:DATA 192
```

Write a static bit pattern 1100 0000 to port A.

```
INSTRument:NSElect 1; :CONTrol:AUXiliary:A:DATA 1
INSTRument:NSElect 2; :CONTrol:AUXiliary:A:DATA 2
INSTRument:NSElect 3; :CONTrol:AUXiliary:A:DATA 3
```

Select channel no. 1, define a bit pattern 1 for channel 1. Repeat this for channels no. 2 and 3, using the bit patterns 10 and 11, respectively.

While channel 1 is measured, the output port A is configured according to the bit pattern 1100 0001. While channels no. 2 and 3 are measured, the bit patterns are 1100 0010 and 1100 0011, respectively.

CONTrol:AUXiliary:C[:DATA] <numeric_value>

Sets or queries a channel-dependent four-bit decimal value to control four independent output signals at the **USER CONTROL** connector (applied to pins 8, 9, 10, 11). The output signals are 3.3 V TTL signals which can be used to differentiate between up to 16 independent analyzer states.

`CONTrol:AUXiliary:C[:DATA]` itself does not change the analyzer state.



Channel bit definition and activation

The channel bits have the following properties:

- After a *RST of the analyzer all channel bits (including the value for the active, sweeping channel no. 1) are set to zero; no signal is applied to pins 8 to 11 of the **USER CONTROL** connector.
- The value defined with `CONTrol:AUXiliary:C[:DATA]` is assigned to the **active** channel (`INSTRument:NSElect <Ch>`).
- The signals at the **USER CONTROL** connector reflect the channel bits of the **measuring** channel, i.e. the channel for which the analyzer performs a sweep. This channel is not necessarily identical with the active channel.
- The signals are switched on as soon as a measurement (sweep) in a channel with non-zero channel bits is started. They are changed whenever a channel with different channel bits becomes the measuring channel.

- The signals at the USER CONTROL connector are maintained after the analyzer enters the hold state. This happens if all channels use single sweep mode and if all sweep sequences have been terminated.



A simple application consists of selecting the channel numbers as parameters for `CONTrol:AUXiliary:C[:DATA]` and monitor the activity of up to 16 different channels at the USER CONTROL connector; see example below. You can also use the USER CONTROL output signals as channel-dependent trigger signals for external devices. Use `OUTPut<Ch>:UPORt[:VALue]` to transfer the four bit value for an arbitrary channel <Ch> in binary representation.

<numeric_value>	Decimal value .
Range [def. unit]	0 to 15 [–] The transferred values correspond to the following states of the USER CONTROL connector: 0 – no signal at any of the four pins 8, 9, 10, 11 1 – output signal at pin 8 2 – output signal at pin 9 3 – output signal at pin 8 and 9 ... 15 – output signal at pin 8, 9, 10 and 11
*RST value	0 (no signal)

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; :CONT:AUX:C 1
```

Assign the channel bit value 1 to the active channel no. 1. The analyzer performs a measurement in channel no. 1, therefore the output signal at pin 8 is switched on.

```
CONF:CHAN2:STAT ON; :CONT:AUX:C 2
```

Create channel no. 2, causing it to become the active channel, and assign the channel bit value 2. The analyzer performs no measurement in channel no. 2, therefore the output signal is not changed.

```
CALC2:PAR:SDEF 'Ch2Tr1', 'S11'
```

Create a trace named 'Ch2Tr1' and assign it to channel 2. While the analyzer measures in channel 2, the output signal changes from pin 8 to pin 9.

CONTrol:HANDler...

This subsystem provides device-specific commands to control the "Universal Interface", option R&S ZVAB-B14. For a detailed description refer to section [Universal Interface](#).

**CONTrol:HANDler:A[:DATA] <decimal> CONTrol:HANDler:B[:DATA] <decimal>
CONTrol:HANDler:C[:DATA] <decimal> CONTrol:HANDler:D[:DATA] <decimal>
CONTrol:HANDler:E[:DATA] <decimal> CONTrol:HANDler:F[:DATA] <decimal>**

The setting commands write data to ports A, B, C, D, E, F. To write data to a port, the port must be configured as an output port (see example). The port lines have negative logic: A "0" at a pin corresponds to a high signal, a "1" to a low signal.

The queries read data from ports A, B, C, D, E, F. If the port is an output port, the queries return the last value that was written to the port.

<decimal>	Decimal representation of an n-bit binary value.
Range	Port A: 0 to 255 (pins A7 ... A0) Port B: 0 to 255 (pins B7 ... B0) Port C: 0 to 15 (pins C3 ... C0) Port D: 0 to 15 (pins D3 ... D0) Port E: 0 to 255 (pins D3 ... D0 C3 ... C0) Port F: 0 to 65535 (pins B7 ... B0 A7 ... A0) The parameters MIN , MAX , DEF are not supported.
*RST value	0 (port A, B, and F) Ports C, D, and E are configured as input ports Note: *RST does not change the configuration of the Universal Interface. Use CONTrol:HANDler:RESet to restore default values.

SCPI, Command Types Device-specific, command or query

Example 1:

```
CONT:HAND:A:MODE OUTP
```

Configure port A as an output port.

```
CONT:HAND:A 192
```

Write data to port A.

```
CONT:HAND:B:MODE INP
```

Configure port B as an input port.

```
CONT:HAND:B?
```

Read data from port B.

Example 2:

Use the output ports A or B for channel monitoring; see [CONTrol:AUXiliary:A\[:DATA\]?](#)

CONTrol:HANDler:A:MODE INPut | OUTPut CONTrol:HANDler:B:MODE INPut | OUTPut CONTrol:HANDler:C:MODE INPut | OUTPut CONTrol:HANDler:D:MODE INPut | OUTPut

Controls the direction of the data flow at ports A, B, C, D. The direction at the combined ports E and F is according to the configuration at the other ports.

Parameters	INPut – Input of data at the port OUTPut – Output of data at the port
*RST value	Port A and B: OUTPut (also valid for port F) Port C and D: INPut (also valid for port E) Note: *RST does not change the configuration of the Universal Interface. Use CONTrol:HANDler:RESet to restore default values.

SCPI, Command Types Device-specific, command or query

Example:

See [CONTrol:HANDler:A\[:DATA\]](#)

CONTrol:HANDler[:EXTension]:INDex:STATe <Boolean>

Selects the digital signal that is routed to pin 20 of the Universal Interface connector.

<Boolean>	ON – /INDEX signal at pin 20 OFF – /PORT_B6 signal at pin 20
*RST value	OFF
SCPI, Command Types	Device-specific, command or query Note: *RST does not change the configuration of the Universal Interface. Use CONTrol:HANDler:RESet to restore default values.

Example:

```
CONT:HAND:EXT:IND:STAT ON
```

Route the /INDEX signal to pin 20.

```
CONT:HAND:EXT:RTR:STAT ON
```

Route the /READY_FOR_TRIGGER signal to pin 21.

```
CONT:HAND:RES
```

Restore the default state: Pins no. 20 and 21 are available for port B input/output signals.

CONTrol:HANDler[:EXTension]:RTRigger:STATe

Selects the digital signal that is routed to pin 21 of the Universal Interface connector.

<Boolean>	ON – /READY_FOR_TRIGGER OFF – /PORT_B7 signal at pin 21
*RST value	OFF
SCPI, Command Types	Device-specific, command or query Note: *RST does not change the configuration of the Universal Interface. Use CONTrol:HANDler:RESet to restore default values.

Example:

See [CONTrol:HANDler\[:EXTension\]:INDex:STATe](#)

CONTrol:HANDler:OUTPut<port>[:DATA] <binary>

Writes a 0 or 1 to the output ports (pin 3 or 4) of the Universal Interface connector. The port lines have negative logic: A "0" corresponds to a high signal, a "1" to a low signal.

The query reads the last value that has been written to the output port.

<port>	Output port number: 1 – /OUTPUT1 (pin 3) 2 – /OUTPUT2 (pin 4)
<binary>	0 – high 1 – low The parameters MIN, MAX, DEF are not supported.
*RST value	0
SCPI,	Device-specific, command or query

Command Types

Note: *RST does not change the configuration of the Universal Interface. Use [CONTrol:HANDler:RESet](#) to restore default values.

Example:

```
CONT:HAND:OUTP2:DATA 0
```

Set the /OUTPUT2 line (pin 4) to 0 (current state of /OUTPUT2).

```
CONT:HAND:OUTP2:USER 1
```

Define the next state of the /OUTPUT2 line as 1 (low). /OUTPUT2 will go from 0 to 1 when the analyzer receives a negative pulse on the /INPUT1 line (pin 2).

CONTrol:HANDler:OUTPut<port>:USER <binary>

Defines the state of the output ports (pin 3 or 4) of the Universal Interface connector after the next negative pulse on the /INPUT1 line (pin 2).

<port> Output port number:
1 – /OUTPUT1 (pin 3)
2 – /OUTPUT2 (pin 4)

<binary> 0 – high
1 – low

The parameters MIN, MAX, DEF are not supported.

*RST value 0

SCPI, Command Types

Device-specific, command or query

Note: *RST does not change the configuration of the Universal Interface. Use [CONTrol:HANDler:RESet](#) to restore default values.

Example:

See [CONTrol:HANDler:OUTPut<port>\[:DATA\]](#)

CONTrol:HANDler:RESet

Restores the default states of the [CONTrol:HANDler...](#) commands including the data port values.

*RST value n/a

SCPI, Command Types Device-specific, no query (event)

Example:

See [CONTrol:HANDler\[:EXTension\]:INDEX:STAtE](#)

DIAGnostic

This subsystem provides access to service and diagnostic routines used in service, maintenance and repair. In accordance with the SCPI standard all commands are device-specific.

Service functions are password-protected ([SYSTem:PASSword\[:CENable\]](#)) and should be used by a R&S service representative only. Refer to the service manual for more information.

DIAGnostic:ALC:SETTings[:STATe] <Boolean>

[Deprecated command, replaced by [SOURCE<Ch>:POWER<Pt>:ALC\[:STATe\]](#)]

Enables or disables the Automatic Level Control for all channels.

<Boolean>	ON OFF – ALC on or off.
*RST value	OFF
SCPI, Command Types	Device-specific, command or query.

Example:

See [DIAGnostic:ALC:SETTings:AUBW](#)
See [SOURCE<Ch>:POWER<Pt>:ALC:CONTRol](#)

DIAGnostic:ALC:AUBW <Boolean>

[Deprecated command, replaced by [SOURCE<Ch>:POWER<Pt>:ALC:AUBW](#)]

Enables or disables automatic bandwidth setting.

<Boolean>	ON OFF - automatic bandwidth on or off.
*RST value	ON
SCPI, Command Types	Device-specific, command or query.

Example:

DIAG:ALC:SETT ON

Enable automatic level control.

DIAG:ALC:AUBW OFF; BW 10000

Disable automatic bandwidth setting and select a 10 kHz loop bandwidth.

DIAG:ALC:CLAM ON; RANGE 4

Suspend the ALC during the measurement and select a 4 dB control range.

DIAG:ALC:STOL WIDE

Select a wide settling tolerance window.

DIAG:ALC:PIP MAN; :DIAG:ALC:PIP:GAIN 0.35; ITIM 6E-7

Enable manual entry of PI controller parameters and define the proportional gain and the integration time.

DIAG:ALC:SOFF 1

Define a 1 dB ALC start offset.

...
DIAG:ALC:POFFset ON

Change last setting; cause the analyzer to use the ALC offset of the previous measurement.

DIAGnostic:ALC:BW <bandwidth>

[Deprecated command, replaced by [SOURCE<Ch>:POWER<Pt>:ALC:BANDwidth](#)]

Selects the bandwidth in the ALC control loop. The setting takes effect when automatic bandwidth setting is disabled.

<bandwidth>	Bandwidth setting
Range [def. unit]	20 Hz to 7.12 MHz [Hz]. For a list of possible values refer to ALC Config .
*RST value	1 kHz
SCPI, Command Types	Device-specific, command or query.
Example:	See DIAGnostic:ALC:SETTings:AUBW

DIAGnostic:ALC:CLAMP <Boolean>

[Deprecated command, replaced by [SOURce<Ch>:POWer<Pt>:ALC:CLAMP](#)]

Suspends the ALC mechanism while the analyzer acquires measurement data (*Clamp ALC during Measurement*).

<Boolean>	ON OFF - <i>Clamp ALC...</i> on or off.
*RST value	OFF
SCPI, Command Types	Device-specific, command or query.
Example:	See DIAGnostic:ALC:SETTings:AUBW

DIAGnostic:ALC:PIParameter AUTO | MANual

[Deprecated command, replaced by [SOURce<Ch>:POWer<Pt>:ALC:PIParameter](#)]

Enables automatic or manual setting of the PI controller parameters.

Parameters	AUTO – Automatic setting, depending on the bandwidth (DIAGnostic:ALC:BW) MANual – Manual setting using DIAGnostic:ALC:PIParameter:GAIN and DIAGnostic:ALC:PIParameter:ITIME .
*RST value	NORMal
SCPI, Command Types	Device-specific, command or query.
Example:	See DIAGnostic:ALC:SETTings:AUBW

DIAGnostic:ALC:PIParameter:GAIN <prop_gain>

[Deprecated command, replaced by [SOURce<Ch>:POWer<Pt>:ALC:PIParameter:GAIN](#)]

Defines the proportional gain of the PI controller. This setting takes effect when manual setting of the controller parameters is enabled ([DIAGnostic:ALC:PIParameter MANual](#)).

<prop_gain>	Proportional gain setting
Range [def. unit]	0.001 to 100 [1]. UP and DOWN increment the proportional gain in 0.001 steps.
*RST value	0.4

SCPI, Command Types

Device-specific, command or query.

Example:See [DIAGnostic:ALC:SETTings:AUBW](#)**DIAGnostic:ALC:PIParameter:ITIME <int_time>**[Deprecated command, replaced by [SOURce<Ch>:POWer<Pt>:ALC:PIParameter:ITIME](#)]Defines the integration time of the PI controller. This setting takes effect when manual setting of the controller parameters is enabled ([DIAGnostic:ALC:PIParameter MANual](#)).**<prop_gain>**

Integration time setting

Range [def. unit]

10 ns to 100 s [s]. UP and DOWN increment the integration time in 10 ns steps.

*RST value

500 ns

SCPI, Command Types

Device-specific, command or query.

Example:See [DIAGnostic:ALC:SETTings:AUBW](#)**DIAGnostic:ALC:POFFset <Boolean>**[Deprecated command, replaced by [SOURce<Ch>:POWer<Pt>:ALC:POFFset](#)]Causes the analyzer to use the ALC of the previous measurement as an ALC start offset value (*Use ALC Offset of Prev. Measurement*).**<Boolean>**

ON | OFF -Use ALC Offset... on or off.

*RST value

OFF

SCPI, Command Types

Device-specific, command or query.

Example:See [DIAGnostic:ALC:SETTings:AUBW](#)**DIAGnostic:ALC:RANGe <cont_range>**[Deprecated command, replaced by [SOURce<Ch>:POWer<Pt>:ALC:RANGe](#)]Defines the maximum change of the source signal level due to the ALC (*Control Range*).**<cont_range>**

Control range setting

Range [def. unit]

0 dB to 100 dB [dB]. The control range setting must be compatible with the specified source power of the analyzer. 0 dB effectively disables the ALC. UP and DOWN increment the control range in 0.1 dB steps.

*RST value

5 dB

SCPI, Command Types

Device-specific, command or query.

Example:See [DIAGnostic:ALC:SETTings:AUBW](#)

DIAGnostic:ALC:SOffset <start_offset>

[Deprecated command, replaced by [SOURce<Ch>:POWer<Pt>:ALC:SOffset](#)]

Increases or decreases the signal level before the ALC loop is started (*Start Offset*).

<start_offset>	Start offset
Range [def. unit]	–3 dB to +3 dB [dB]. UP and DOWN increment the start offset in 0.1 dB steps.
*RST value	0.0 dB
SCPI, Command Types	Device-specific, command or query.
Example:	See DIAGnostic:ALC:SETTings:AUBW

DIAGnostic:ALC:STOLerance WIDE | NORMal | HIGH

[Deprecated command, replaced by [SOURce<Ch>:POWer<Pt>:ALC:STOLerance](#)]

Defines the variation of the ALC-controlled source signal level (*Settling Tolerance Window*).

Parameters	WIDE – Wide tolerance window (1 dB) NORMal – Normal (0.1 dB) HIGH – High Accuracy (0.02 dB)
*RST value	NORMal
SCPI, Command Types	Device-specific, command or query.
Example:	See DIAGnostic:ALC:SETTings:AUBW

DIAGnostic:DEVIce:STATe '<file_name>'

Generates a *System Report* and writes it to the specified file. See [Obtaining Support](#).

'<file_name>'	String parameter containing the file name. If no path is specified, the file is stored to the directory C:\Program Files\Rohde&Schwarz\Network Analyzer\Report; the extension *.zip is appended automatically.
*RST value	–
SCPI, Command Types	Device-specific, command or query.
Example:	DIAG:DEV:STAT 'report_16112010_1120'

Generate a report and store it to C:\Program Files\Rohde&Schwarz\Network Analyzer\Report\report_16112010_1120.zip. Use the `MMEMory...` commands to rename, move, or delete the file.

DIAGnostic:SERVice:FUNCTion <SFId1>, <SFId2> ...

[Deprecated command, replaced by `DIAGnostic:SERVice:SFUNCTion`]

DIAGnostic:SERVice:SFUNCTion '<SFIdentifier>'

Activates a service function (mainly for internal use). Service functions are identified by groups of numbers, separated by dots.

- `DIAGnostic:SERVice:SFUNCTion` requires the service function identifier (including the dots) in single or double quotes (string parameter). This is analogous to manual entry of the identifier in the *Service Function* dialog.
- `DIAGnostic:SERVice:FUNCTion` requires the service function identifier as a (pseudo-)numeric value, the dots being replaced by commas. No quotation marks are needed. Five groups of numbers are allowed at maximum.

DIAGnostic:SERVice:RFPower <Boolean>

Turns the internal source power at all ports and the power of all external generators on or off. This command is equivalent to `OUTPut<Ch>[:STATe]`.

<Boolean> ON | OFF - Switches the power on or off.

*RST value ON

SCPI, Command Types Device-specific, command or query

Example: `DIAG:SERV:RFP OFF`

Turn off the RF source power.

DISPlay...

This subsystem controls the selection and presentation of graphical and trace information on the screen.

Note: Traces are generally identified by a string parameter defining the trace name (e.g. `CALCulate<Ch>:PARAmeter:SElect <Trace_Name>`). In the *DISPlay...* subsystem, traces are assigned to diagram areas (`DISPlay:WINDow<Wnd>:TRACe<WndTr>:FEED <Trace_Name>`). While this assignment is valid, the trace is identified by the numeric suffix `<WndTr>` and the trace name is not needed.

DISPlay:ANNotation:FREQuency[:STATe] <Boolean>

Shows or hides all frequency stimulus values in the diagrams.

<Boolean> ON | OFF - Show or hide stimulus values.

*RST value ON

SCPI, Command Confirmed, command or query

Types**Example:**

```
*RST; :DISP:ANN:FREQ OFF
```

Create diagram area no. 1 (with default trace) and hide the frequency stimulus values.

DISPlay:ANNotation:CHANnel[:STATe] <Boolean>

Shows or hides the channel list below the diagrams.

<Boolean> ON | OFF - Show or hide channel list.

***RST value** ON

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; :DISP:ANN:CHAN OFF
```

Create diagram area no. 1 (with default trace) and hide the channel list.

DISPlay:CMAP<Element>:MARKer[:STATe] <Boolean>

Displays all markers with the same color or display each marker with the color of the associated trace. The colors of all display elements are defined via [DISPlay:CMAP<Element>:RGB <red>, <green>, <blue>, ...](#).

<Element> Numeric suffix, not used in this command. Implemented for compatibility with [DISPlay:CMAP<Element>:RGB](#).

<Boolean> ON – All markers have the same color, to be defined via [DISPlay:CMAP6:RGB <red>, <green>, <blue>](#). The marker color is independent of the trace colors.
OFF - Each marker has the color of the associated trace.

***RST value** *RST does not affect the color settings; see also description of the [Preset](#) command.

SCPI, Command Types Device-specific, command or query

Example:

See [DISPlay:CMAP<Element>:RGB](#).

DISPlay:CMAP<Element>:RGB <red>, <green>, <blue> [,<trace_style>, <trace_width>]

Defines the color of all display elements based on the Red/Green/Blue color model.

<Element> Number of the display element. The display elements corresponding to the numbers 1 to 28 are listed below.

<red>	Red, green, and blue content of the defined color.
<green>	
<blue>	
Range [def. unit]	0 (zero intensity, corresponding to a 0 in the 24-bit color model) to 1 (full intensity, corresponding to 255 in the 24-bit color model) [–]
<trace_style>	Optional trace style, only for traces (<Element> > 12): One of the string parameters SOLid DASHed DOTTed DDOTted DDDotted.
<trace_width>	Optional trace width, only for traces (<Element> > 12).
Range [def. unit]	1 to 20 [–]
*RST values	*RST does not affect the color settings; see also description of the Preset command.
SCPI, Command Types	Confirmed (with device-specific numeric suffix and parameters), command or query. The query returns three values between 0 and one, separated by commas, corresponding to the red, green, and blue color content.

Example:

```
*RST; :DISP:CMAP:MARK ON; :CALC:MARK ON
```

Create diagram area no. 1 (with default trace showing the S-parameter S_{21}) and a marker *M 1*.

```
CALC:PAR:SDEF 'TRC2', 'S11'; :DISP:WIND:TRAC2:FEED 'TRC2'
```

Create a new trace named *TRC2* and display the trace in diagram area no. 1. Note that the new trace automatically becomes the active trace.

```
CALC:MARK2 ON
```

Assign a marker *M 2* to the trace. Both markers are displayed with the same color.

```
DISP:CMAP13:RGB 1,0,0; :DISP:CMAP14:RGB 0,1,0
```

Color the first trace red, the second trace green.

```
DISP:CMAP6:RGB?
```

Query the marker color. The marker color depends on the settings made in previous sessions; it is not reset. A possible response is *0,0,0* for black markers.

```
DISP:CMAP:MARK OFF
```

Change the marker colors: *M 1* turns red, *M 2* turns green.

The numeric suffixes <Element> denote the following display elements:

<Element>	Display Element
1	Background
2	Text
3	Selected Text
4	Grid
5	Reference Line
6	Same Color for all Markers
7	Horizontal Line / Vertical Range Lines
8	Diagram Title
9	Limit Fail Trace Color

<Element>	Display Element
10	Limit Line Type Off
11	Limit Line Type Upper
12	Limit Line Type Lower
13	Trace 1 (see also DISPlay:CMAP<Element>:TRACe:RGB)
14	Trace 2
15	Trace 3
16	Trace 4
17	Trace 5
18	Trace 6
19	Trace 7
20	Trace 8
21	Trace 9
22	Trace 10
23	Trace 11
24	Trace 12
25	Trace 13
26	Trace 14
27	Trace 15
28	Trace 16

DISPlay:CMAP<Element>:TRACe:COLor[:STATe] <Boolean>

Defines the trace color schemes in different diagram areas.

<Element>	Numeric suffix, not used in this command. Implemented for compatibility with DISPlay:CMAP<Element>:RGB .
<Boolean>	OFF – Independent color scheme in new diagram area. Moved traces change their color. ON – Color scheme in new diagram area continues the previous color scheme. Moved traces keep their color.
*RST value	*RST does not affect the color settings; see also description of the Preset command.

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; :DISP:CMAP13:RGB 1,0,0
```

Create diagram area no. 1 (with default trace showing the S-parameter S_{21}) and color the trace red.

```
DISP:CMAP:TRAC:COL OFF; :DISP:WIND2:STAT ON
```

Select independent color schemes for new diagram areas. Create a new diagram area no. 2.

```
CALC:PAR:SDEF 'TRC2', 'S11'; :DISP:WIND2:TRAC2:FEED 'TRC2'
```

Create a new trace named *TRC2* and display the trace in a new diagram area no. 2. The new trace is red like the first trace.

```
DISP:CMAP:TRAC:COL ON; :DISP:WIND3:STAT ON
```

Continue the same color scheme in new diagram areas. Create a new diagram area no. 3.

```
CALC:PAR:SDEF 'TRC3', 'S22'; :DISP:WIND3:TRAC3:FEED 'TRC3'
```

Create a new trace named *TRC3* and display the trace in a new diagram area no. 3. The new trace is not red.

DISPlay:CMAP<Element>:TRACe:RGB '<trace_name>, <red>, <green>, <blue> [,<trace_style>, <trace_width>]

Defines the color of a trace referenced by its name, based on the Red/Green/Blue color model. Use the generalized command [DISPlay:CMAP<Element>:RGB](#) to define the color of other display elements.

<Element>	Numeric suffix, not used in this command. Implemented for compatibility with DISPlay:CMAP<Element>:RGB .
'<trace_name>'	Trace name, string parameter
<red>	Red, green, and blue content of the defined color.
<green>	
<blue>	
Range [def. unit]	0 (zero intensity, corresponding to a 0 in the 24-bit color model) to 1 (full intensity, corresponding to 255 in the 24-bit color model) [–]
<trace_style>	Optional trace style, only for traces (<Element> > 12): One of the string parameters SOLID DASHed DOTTed DDOTTed DDDotted.
<trace_width>	Optional trace width, only for traces (<Element> > 12).
Range [def. unit]	1 to 20 [–]
*RST values	*RST does not affect the color settings; see also description of the Preset command.
SCPI, Command Types	Device-specific, command or query. The query returns three values between 0 and one, separated by commas, corresponding to the red, green, and blue color content.

Example:

```
*RST; :DISP:CMAP:TRAC:RGB 'Trc1', 1, 0, 0
```

Color the default trace 'Trc1' red..

See also [DISPlay:CMAP<Element>:RGB](#)

DISPlay:MENU:KEY:EXECute '<menu_key>'

Executes the function of a key with a specified name and switches to the local screen.



You can use this command to execute part of your measurement task manually; see [Combining Manual and Remote Control](#). Menu keys that initiate events are executed immediately, because no

additional input is necessary. However, `DISPlay:MENU:KEY:EXECute` can be used as well for manual entries in numeric entry bars, dialogs or wizards.

'<menu_key>' Name of the key as shown in the analyzer's softkey bar (case-sensitive string variable, may contain blanks but no dots). If the name is not unique, the complete menu path, preceded by a colon, can be specified, e.g. `' :Trace:Format:Phase '`. Menus, submenus and menu function must also be separated by colons.
If the name designates a menu entry that opens a sub menu, the respective sub menu is activated. (**Note:** It is not possible to activate a menu that contains only sub menu entries. For example, `' :DISPlay:MENU:KEY:SElect :Trace '` will fail.)

*RST value –

SCPI, Command Types Device-specific, no query

Example:

```
*RST; :DISP:MENU:KEY:EXEC 'S11'; EXEC ' :Trace:Format:Phase'
```

Assign the S-parameter S_{11} to the default trace, open the local analyzer screen, then display the phase of the measured quantity. The commands are executed immediately without any manual entry.

```
DISP:MENU:KEY:EXEC 'Start'
```

Open the numeric input bar for the start frequency of the sweep. The frequency can be entered manually.

```
DISP:MENU:KEY:EXEC 'About Nwa'
```

Display information about your network analyzer and the firmware version. The info box is closed when you click the analyzer screen or if you send another command.

DISPlay:MENU:KEY:SElect '<menu_key>'

Activates the menu or submenu of the specified key.

'<menu_key>' Name of the key as shown in the analyzer's softkey bar (case-sensitive string variable).

*RST value –

SCPI, Command Types Device-specific, no query

Example:

```
*RST; :DISP:MENU:KEY:SEL 'S11'
```

Open the *Trace – Meas* menu in order to select a measured quantity.

DISPlay:RFSize <rel. size>

Defines the size of the fonts in the diagram on a relative scale.

<rel size>	Relative font size
Range [def. unit]	80 % to 170 % [%]
*RST value	100 %
SCPI, Command Types	Device-specific, with query

Example:

```
*RST; :DISP:RFS 80
```

Use smaller fonts to gain more space for the traces in the diagram.

DISPlay[:WINDow<Wnd>]:CATalog?

Returns the numbers and names of all diagram areas in the current setup.

<Wnd>	Number of a diagram area. This suffix is ignored; the command returns a list of all diagram areas.
Response	String with comma-separated list of diagram area numbers and names, see example below. If all diagram areas have been deleted the response is an empty string ("").
*RST value	–
SCPI, Command Types	Device-specific, query only.

Example:

```
*RST; :DISP:WIND2:STAT ON
```

Create diagram area no. 2.

```
DISP:WIND2:NAME 'S11 Test Diagram'
```

Assign a name to the new diagram area.

```
DISP:CAT?
```

Query all diagram areas and their names. As a default diagram area no. 1 is created upon *RST, the response is '1,1,2,S11 Test Diagram'. The first diagram area is not named; its default name is equal to the diagram number.

```
CALC:PAR:SDEF 'Win2_Tr1', 'S11'
```

Create a trace named *Win2_Tr1* to measure the input reflection coefficient S11.

```
DISP:WIND2:TRAC9:FEED 'Win2_Tr1'
```

Display the generated trace in diagram area no. 2, assigning the trace number 9 to it.

```
DISP:WIND2:TRAC:CAT?
```

Query all traces in diagram area no. 2. The response is '9,Win2_Tr1'.

DISPlay[:WINDow<Wnd>]:MAXimize <Boolean>

Maximizes all diagram areas in the active setup or restores the previous display configuration.

<Wnd>	Number of the diagram area to become the active diagram area. <code>DISPlay:WINDow<Wnd>:MAXimize</code> acts on all diagrams of the current setup, however, the diagram no. <Wnd> is displayed on top of the others.
<Boolean>	ON OFF - Maximize all diagram areas or restore the previous display configuration.
*RST value	OFF
SCPI, Command Types	Device-specific, command or query (returns whether or not the diagrams are maximized).
Example:	<pre>*RST; :DISP:WIND2:STAT ON</pre> Create diagram areas no. 1 (with default trace) and 2 (with no trace). <pre>DISP:WIND2:MAXimize ON</pre> Maximize the diagram areas, placing area no. 2 on top.

DISPlay[:WINDow<Wnd>]:NAME '<string>'

Defines a name for diagram area <Wnd>. The name appears in the list of diagram areas, to be queried by `DISPlay[:WINDow<Wnd>]:CATalog?`.

<Wnd>	Number of the diagram area.
'<string>'	String variable for the name.
*RST value	' '
SCPI, Command Types	Device-specific, command or query
Example:	See <code>DISPlay[:WINDow<Wnd>]:CATalog?</code>

DISPlay[:WINDow<Wnd>]:STATE <Boolean>

Creates or deletes a diagram area, identified by its area number <Wnd>.

<Wnd>	Number of the diagram area to be created or deleted.
<Boolean>	ON OFF - Creates or deletes diagram area no. <Wnd>.
*RST value	–
SCPI, Command Types	Device-specific, command or query (returns whether or not a particular diagram area exists).
Example:	<pre>CALC4:PAR:SDEF 'Ch4Tr1', 'S11'</pre> Create channel 4 and a trace named <i>Ch4Tr1</i> to measure the input reflection coefficient S11. <pre>DISP:WIND2:STAT ON</pre> Create diagram area no. 2. <pre>DISP:WIND2:TRAC9:FEED 'CH4TR1'</pre>

Display the generated trace in diagram area no. 2, assigning the trace number 9 to it.

DISPlay[:WINDow<Wnd>]:TITLe:DATA '<string>'

Defines a title for diagram area <Wnd>.

<Wnd> Number of the diagram area.

'<string>' String variable for the title. The length of the title is practically unlimited but should be kept short enough to be displayed in the diagrams.

***RST value** ' '

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; :DISP:WIND:TITL:DATA 'S21 Test Diagram'
```

Define a title for the default diagram area. The title is displayed below the top of the diagram area.

```
DISP:WIND:TITL OFF; TITL:DATA?
```

Hide the title. The title is no longer displayed but still defined so it can be displayed again.

DISPlay[:WINDow<Wnd>]:TITLe[:STATe] <Boolean>

Displays or hides the title for area number <Wnd>, defined by means of [DISPlay:WINDow<Wnd>:TITLe:DATA](#).

<Wnd> Number of the diagram area.

<Boolean> ON | OFF - Displays or hides the title.

***RST value** ON

SCPI, Command Types Device-specific, command or query

Example:

See [DISPlay:WINDow<Wnd>:TITLe:DATA](#).

DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:CATalog?

Returns the numbers and names of all traces in diagram area no. <Wnd>.

<Wnd> Number of a diagram area.

<WndTr> Trace number used to distinguish the traces of the same diagram area <Wnd>. This suffix is ignored; the command returns a list of all traces.

Response String with comma-separated list of trace numbers and names, see example. If all traces have been deleted the response is an empty string ("").

*RST value –

SCPI, Command Types Device-specific, query only.

Example: See `DISPlay[:WINDow<Wnd>]:CATalog?`

DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:DELeTe

Releases the assignment between a trace and a diagram area, as defined by means of `DISPlay:WINDow<Wnd>:TRACe<WndTr>:FEED <Trace_Name>` and expressed by the `<WndTr>` suffix. The trace itself is not deleted; this must be done via `CALCulate<Ch>:PARAmeter:DELeTe <Trace_Name>`.

<Wnd> Number of an existing diagram area (defined by means of `DISPlay:WINDow<Wnd>:STATe ON`).

<WndTr> Trace number used to distinguish the traces of the same diagram area `<Wnd>`.

*RST value –

SCPI, Command Types Device-specific, no query.

Example:

```
CALC4:PAR:SDEF 'Ch4Tr1', 'S11'
```

Create channel 4 and a trace named *Ch4Tr1* to measure the input reflection coefficient S11.

```
DISP:WIND2:STAT ON
```

Create diagram area no. 2.

```
DISP:WIND2:TRAC9:FEED 'CH4TR1'
```

Display the generated trace in diagram area no. 2, assigning the trace number 9 to it.

```
DISP:WIND2:TRAC9:DELeTe
```

Release the assignment between trace no. 9 and window no. 2. The trace can still be referenced with its trace name *Ch4Tr1*.

DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:EFEEd '<trace_name>'

Assigns an existing trace (`CALCulate<Ch>:PARAmeter:SDEFine <Trace_Name>`) to a diagram area `<Wnd>`, and displays the trace. Use `DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:FEED` to assign the trace to a diagram area using a numeric suffix (e.g. in order to use the `DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:Y:OFFSet` command).



You can open the trace manager (`DISPlay:MENU:KEY:EXECute 'Trace Manager'`) to obtain an overview of all channels and traces, including the traces that are not displayed.

<Wnd> Number of an existing diagram area (defined by means of `DISPlay:WINDow<Wnd>:STATe ON`).

<WndTr> Trace number. This suffix is ignored; the trace is referenced by its name.
'<trace_name>' String parameter for the trace name, e.g. 'Trc4'.

*RST value –

SCPI, Command Types Device-specific, no query.

Example:

```
CALC4:PAR:SDEF 'Ch4Tr1', 'S11'
```

Create channel 4 and a trace named *Ch4Tr1* to measure the input reflection coefficient S11.

```
DISP:WIND2:STAT ON
```

Create diagram area no. 2.

```
DISP:WIND2:TRAC:EFE 'CH4TR1'
```

Display the generated trace in diagram area no. 2. No trace number is assigned.

DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:FEED '<trace_name>'

Assigns an existing trace (`CALCulate<Ch>:PARAmeter:SDEFine <Trace_Name>`) to a diagram area, using the <WndTr> suffix, and displays the trace. Use `DISPlay[:WINDow<Wnd>]:TRACe:EFEed` to assign the trace to a diagram area without using a numeric suffix.



A trace can be assigned to a diagram only once. If a attempt is made to assign the same trace a second time (e.g. by typing `DISP:WIND2:TRAC8:FEED 'CH4TR1'` after executing the program example below) an error message –114, "Header suffix out of range" is generated.

You can open the trace manager (`DISPlay:MENU:KEY:EXECute 'Trace Manager'`) to obtain an overview of all channels and traces, including the traces that are not displayed.

<Wnd> Number of an existing diagram area (defined by means of `DISPlay:WINDow<Wnd>:STATe ON`).

<WndTr> Trace number used to distinguish the traces of the same diagram area <Wnd>.

'<trace_name>' String parameter for the trace name, e.g. 'Trc4'.

*RST value –

SCPI, Command Types Device-specific, no query.

Example:

```
CALC4:PAR:SDEF 'Ch4Tr1', 'S11'
```

Create channel 4 and a trace named *Ch4Tr1* to measure the input reflection coefficient S11.

```
DISP:WIND2:STAT ON
```

Create diagram area no. 2.

```
DISP:WIND2:TRAC9:FEED 'CH4TR1'
```

Display the generated trace in diagram area no. 2, assigning the trace number 9 to it.

DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:SHOW DALL | MALL | '<trace_name>', <Boolean>

Displays or hides an existing trace, identified by its trace name ([CALCulate<Ch>:PARAmeter:SDEFine<Trace_Name>](#)), or a group of traces.



You can open the trace manager ([DISPlay:MENU:KEY:EXECute 'Trace Manager'](#)) to obtain an overview of all channels and traces, including the traces that are not displayed.

<Wnd>	Number of a diagram area. This suffix is ignored; the command affects traces in all diagram areas.
<WndTr>	Trace number. This suffix is ignored; the trace is referenced by its name.
DALL	All data traces
MALL	All memory traces
'<trace_name>'	Single trace identified by its trace name (string parameter), e.g. 'Trc4'.
*RST value	–
<Boolean>	ON OFF – display or hide trace(s)
*RST value	1 (for the default trace 'Trc1')
SCPI, Command Types	Device-specific, command or query. The query must be sent with the first parameter; see example below.

Example:

```
*RST; :DISP:TRAC:SHOW? 'Trc1'
```

Reset the analyzer, creating the default trace 'Trc1'. The trace is displayed; the query returns 1.

```
CALC4:PAR:SDEF 'Ch4Tr1', 'S11'
```

Create channel 4 and a trace named Ch4Tr1 to measure the input reflection coefficient S_{11} .

```
DISP:WIND2:STAT ON; :DISP:WIND2:TRAC:FEED 'CH4TR1'
```

Create diagram area no. 2 and display the generated trace in the diagram area.

```
DISP:TRAC:SHOW DALL, OFF
```

Hide both traces in both diagrams.

```
DISP:TRAC:SHOW? DALL
```

Query whether all data traces are displayed. The response 0 means that at least one trace is hidden.

DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:X:OFFSet <numeric_value>

Shifts the trace <WndTr> in horizontal direction, leaving the positions of all markers unchanged.

<Wnd>	Number of an existing diagram area (defined by means of DISPlay:WINDow<Wnd>:STATe ON).
<WndTr>	Existing trace number, assigned by means of DISPlay:WINDow<Wnd>:TRACe<WndTr>:FEED .
<numeric_value>	Stimulus offset value.

Range [def. unit] –1000 GHz to +1000 GHz [Hz, for frequency sweeps]. The range and unit depends on the sweep type ([SENSe<Ch>:] SWEep:TYPE).

*RST value 0.

SCPI, Command Types Device-specific, with query.

Example:

```
*RST; :DISP:WIND:TRAC:X:OFFS 1MHZ; :DISP:WIND:TRAC:Y:OFFS 10
```

Create the default trace and shift it horizontally by 1 MHz, vertically by 10 dB.

DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:Y:OFFSet <Magnitude>[,<Phase>,<Real>,<Imaginary>]

Modifies all points of the trace <WndTr> by means of an added and/or a multiplied complex constant. The response values M of the trace are transformed according to:

$$M_{new} = M_{old} \cdot 10^{<Magnitude>/20 \text{ dB}} \alpha \cdot e^{j \cdot <Phase>/180^\circ} + <Real> + j <Imag>$$

<Wnd> Number of an existing diagram area (defined by means of DISPlay:WINDow<Wnd>:STATe ON).

<WndTr> Existing trace number, assigned by means of DISPlay:WINDow<Wnd>:TRACe<WndTr>:FEED.

<Magnitude> Multiplied magnitude factor

Range [def. unit] –300 dB to + 300 dB [dB]

*RST value 0 dB

<Phase> Multiplied phase factor, optional for setting command but returned by query

Range [def. unit] $-3.4 \cdot 10^{38}$ deg to $+3.4 \cdot 10^{38}$ deg [deg]

*RST value 0 deg

<Real>,<Imaginary> Real and imaginary part of added complex constant, optional for setting command but returned by query

Range [def. unit] $-3.4 \cdot 10^{38}$ to $+3.4 \cdot 10^{38}$ [–]

*RST value 0.

SCPI, Command Types Device-specific, with query.

Example:

```
*RST; :DISP:WIND:TRAC:X:OFFS 1MHZ; :DISP:WIND:TRAC:Y:OFFS 10
```

Create the default trace and shift it horizontally by 1 MHz, vertically by 10 dB.

```
DISP:WIND:TRAC:Y:OFFS?
```

Query all response offset values. The response is 10,0,0,0.

DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:Y[:SCALe]:AUTO ONCE[, '<trace_name>']

Displays the entire trace in the diagram area, leaving an appropriate display margin. The trace can be referenced either by its number <WndTr> or by its name <trace_name>.

<Wnd>	Number of an existing diagram area (defined by means of DISPlay:WINDow<Wnd>:STATe ON). This suffix is ignored if the optional <trace_name> parameter is used.
<WndTr>	Existing trace number, assigned by means of DISPlay:WINDow<Wnd>:TRACe<WndTr>:FEED . This suffix is ignored if the optional <trace_name> parameter is used.
ONCE	Activate the autoscale function.
'<trace_name>'	Optional string parameter for the trace name, e.g. 'Trc4'. If this optional parameter is present, both numeric suffixes are ignored (trace names must be unique across different channels and windows).

*RST value

–

SCPI, Command Types

Confirmed, no query.

Example:

```
*RST; :DISP:WIND:TRAC:Y:PDIV?; RLEV?
```

Query the value between two grid lines and the reference value for the default trace. The response is 10;0.

```
DISP:WIND:TRAC:Y:AUTO ONCE; PDIV?; RLEV?
or: DISP:WIND:TRAC:Y:AUTO ONCE, 'Trc1'; PDIV?; RLEV?
```

Autoscale the default trace and query the scaling parameters again. In general both values have changed.

DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:Y[:SCALe]:BOTTom <lower_value>[, '<trace_name>']

Sets the lower (minimum) edge of the diagram area <Wnd>.

<Wnd>	Number of an existing diagram area (defined by means of DISPlay:WINDow<Wnd>:STATe ON). This suffix is ignored if the optional <trace_name> parameter is used.
<WndTr>	Existing trace number, assigned by means of DISPlay:WINDow<Wnd>:TRACe<WndTr>:FEED . This suffix is ignored if the optional <trace_name> parameter is used.
<lower_value>	Value and unit for the lower diagram edge.
Range [def. unit]	Range and unit depend on the measured quantity, see Units for DISPlay... Commands .
*RST value	Depending on the measured quantity. The default lower edge for a <i>dB Mag</i> diagram is –80 dB.
'<trace_name>'	Optional string parameter for the trace name, e.g. 'Trc4'. If this optional parameter is present, both numeric suffixes are ignored (trace names must be

*RST value unique across different channels and windows).
—

SCPI, Command Types Confirmed, with query.

Example:

```
CALC4:PAR:SDEF 'Ch4Tr1', 'S11'
```

Create channel 4 and a trace named *Ch4Tr1* to measure the input reflection coefficient S11.

```
DISP:WIND2:STAT ON
```

Create diagram area no. 2.

```
DISP:WIND2:TRAC9:FEED 'CH4TR1'
```

Display the generated trace in diagram area no. 2, assigning the trace number 9 to it.

```
DISP:WIND2:TRAC9:Y:BOTT -40; TOP 10  
or: DISP:WIND2:TRAC:Y:BOTT -40, 'CH4TR1'; TOP 10, 'CH4TR1'
```

Scale the diagram between -40 dB and +10 dB.

DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:Y[:SCALe]:PDIVision <numeric_value>[, '<trace_name>']

Sets the value between two grid lines (value “per division”) for the diagram area <Wnd>. When a new PDIVision value is entered, the current RLEVEL is kept the same, while the top and bottom scaling is adjusted for the new PDIVision value.

<Wnd> Number of an existing diagram area (defined by means of [DISPlay:WINDow<Wnd>:STATe ON](#)). This suffix is ignored if the optional <trace_name> parameter is used.

<WndTr> Existing trace number, assigned by means of [DISPlay:WINDow<Wnd>:TRACe<WndTr>:FEED](#). This suffix is ignored if the optional <trace_name> parameter is used.

<numeric_value> Value and unit for the vertical diagram divisions.

Range [def. unit] Range and unit depend on the measured quantity, see [Units for DISPlay... Commands](#).

*RST value Depending on the measured quantity. The default reference level for an S-parameter displayed in a *dB Mag* diagram is 10 dB.

'<trace_name>' Optional string parameter for the trace name, e.g. 'Trc4'. If this optional parameter is present, both numeric suffixes are ignored (trace names must be unique across different channels and windows).

*RST value —

SCPI, Command Types Confirmed, with query.

Example:

```
CALC4:PAR:SDEF 'Ch4Tr1', 'S11'
```

Create channel 4 and a trace named *Ch4Tr1* to measure the input reflection coefficient S11.

```
DISP:WIND2:STAT ON
```

Create diagram area no. 2.

```
DISP:WIND2:TRAC9:FEED 'CH4TR1'
```

Display the generated trace in diagram area no. 2, assigning the trace number 9 to it.

```
DISP:WIND2:TRAC9:Y:PDIV 5
or: DISP:WIND2:TRAC:Y:PDIV 5, 'CH4TR1'
```

Set the value per division to 5 dB.

DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:Y[:SCALE]:RLEVel <numeric_value>[, '<trace_name>']

Sets the reference level (or reference value) for a particular displayed trace. Setting a new reference level does not affect the value of PDIVision. The trace can be referenced either by its number <WndTr> or by its name <trace_name>.

<Wnd>	Number of an existing diagram area (defined by means of DISPlay:WINDow<Wnd>:STATE ON). This suffix is ignored if the optional <trace_name> parameter is used.
<WndTr>	Existing trace number, assigned by means of DISPlay:WINDow<Wnd>:TRACe<WndTr>:FEED . This suffix is ignored if the optional <trace_name> parameter is used.
<numeric_value>	Value and unit for the reference level (or reference value, if the trace does not show a level).
Range [def. unit]	Range and unit depend on the measured quantity, see Units for DISPlay... Commands .
*RST value	Depending on the measured quantity. The default reference level for an S-parameter displayed in a <i>dB Mag</i> diagram is 0 dB.
'<trace_name>'	Optional string parameter for the trace name, e.g. 'Trc4'. If this optional parameter is present, both numeric suffixes are ignored (trace names must be unique across different channels and windows).
*RST value	—

SCPI, Command Types Confirmed, with query.

Example:

```
CALC4:PAR:SDEF 'Ch4Tr1', 'S11'
```

Create channel 4 and a trace named *Ch4Tr1* to measure the input reflection coefficient S11.

```
DISP:WIND2:STAT ON
```

Create diagram area no. 2.

```
DISP:WIND2:TRAC9:FEED 'CH4TR1'
```

Display the generated trace in diagram area no. 2, assigning the trace number 9 to it.

```
DISP:WIND2:TRAC9:Y:RLEV -10
or: DISP:WIND2:TRAC:Y:RLEV -10, 'CH4TR1'
```

Change the reference level to –10 dB.

DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:Y[:SCALe]:RPOSition <numeric_value>[, '<trace_name>']

Sets the point on the y-axis to be used as the reference position as a percentage of the length of the y-axis. The reference position is the point on the y-axis which should equal the RLEVel.

<Wnd>	Number of an existing diagram area (defined by means of <code>DISPlay:WINDow<Wnd>:STATe ON</code>). This suffix is ignored if the optional <trace_name> parameter is used.
<WndTr>	Existing trace number, assigned by means of <code>DISPlay:WINDow<Wnd>:TRACe<WndTr>:FEED</code> . This suffix is ignored if the optional <trace_name> parameter is used.
<numeric_value>	Value of the reference position in percent. The top of the y-axis is defined to have a reference position of 100%, while the bottom of the y-axis is defined to have a reference position of 0%.
Range [def. unit]	0 to 100 [%].
*RST value	80%
'<trace_name>'	Optional string parameter for the trace name, e.g. 'Trc4'. If this optional parameter is present, both numeric suffixes are ignored (trace names must be unique across different channels and windows).
*RST value	–
SCPI, Command Types	Confirmed, with query.
Example:	

```
CALC4:PAR:SDEF 'Ch4Tr1', 'S11'
```

Create channel 4 and a trace named *Ch4Tr1* to measure the input reflection coefficient S11.

```
DISP:WIND2:STAT ON
```

Create diagram area no. 2.

```
DISP:WIND2:TRAC9:FEED 'CH4TR1'
```

Display the generated trace in diagram area no. 2, assigning the trace number 9 to it.

```
DISP:WIND2:TRAC9:Y:RPOS 50  
or: DISP:WIND2:TRAC:Y:RPOS 50, 'CH4TR1'
```

Set the reference position to the center of the diagram area.

DISPlay[:WINDow<Wnd>]:TRACe<WndTr>:Y[:SCALe]:TOP <upper_value>[, '<trace_name>']

Sets the upper (maximum) edge of the diagram area <Wnd>.

<Wnd>	Number of an existing diagram area (defined by means of <code>DISPlay:WINDow<Wnd>:STATe ON</code>). This suffix is ignored if the optional <code><trace_name></code> parameter is used.
<WndTr>	Existing trace number, assigned by means of <code>DISPlay:WINDow<Wnd>:TRACe<WndTr>:FEED</code> . This suffix is ignored if the optional <code><trace_name></code> parameter is used.
<upper_value>	Value and unit for the upper diagram edge.
Range [def. unit]	Range and unit depend on the measured quantity, see Units for DISPlay... Commands .
*RST value	Depending on the measured quantity. The default upper edge for a <i>dB Mag</i> diagram is +20 dB.
'<trace_name>'	Optional string parameter for the trace name, e.g. 'Trc4'. If this optional parameter is present, both numeric suffixes are ignored (trace names must be unique across different channels and windows).
*RST value	–
SCPI, Command Types	Confirmed, with query.
Example:	See <code>DISPlay:WINDow<Wnd>:TRACe<WndTr>:Y[:SCALe]:BOTTom</code>

Units for DISPlay... Commands

The DISPlay... subsystem contains commands to define particular points in the diagram, e.g. to set the scale or a reference value. This requires the entry of a numeric value and a physical unit, depending on the parameter type displayed. The following table lists the physical units accepted by the analyzer.

Power	DBM, DB, DBW, W, MW, UW, NW, PW
Voltage	V, MV, UV, NV, PV, DBV, DBMV, DBUV
Phase	DEG, KDEG, MDEG, UDEG, NDEG, PDEG
Group delay	S, MS, US, NS, PS
Impedance	OHM, GOHM, MOHM, KOHM
Admittance	SIE, MSIE, USIE, NSIE
Inductance	H, MH, UH, NH, PH, FH
Capacitance	F, MF, UF, NF, PF, FF
Dimensionless	UNIT, MUNIT, UUNIT, NUNIT, PUNIT, FUNIT

FORMat...

This subsystem selects a data format for transferring numeric and array information from and to the analyzer.

FORMat:BORDER NORMal | SWAPped

Controls whether binary data is transferred in normal or swapped byte order.

Parameters SWAPped – The least significant byte is transferred first (little endian)
 NORMal – The most significant byte is transferred first (big endian)

***RST value** SWAPped (if the [GPiB Language](#) is set to *PNA* or *HP xxxx*, then the order is NORMal)

SCPI, Command Types Confirmed, command or query

Example: FORM:BORD NORM

Change the byte order to normal mode.

FORMat[:DATA] ASCii | REAL [,<length>]

Selects the format for numeric data transferred to and from the analyzer.



The format setting is only valid for commands and queries whose description states that the response is formatted as described by FORMat [:DATA]. In particular, it affects trace data transferred by means of the commands in the TRACe: . . . system.

ASCII Numeric data is transferred as ASCII bytes. The numbers are separated by commas as specified in IEEE 488.2.

REAL Data is transferred in a definite length block as IEEE floating point numbers of the specified <length>. See [block data format](#).



If binary data is transferred to the analyzer, the receive terminator should be set to EOI (SYSTem:COMMunicate:GPiB[:SELf]:RTERminator EOI) to avoid inadvertent interruption of the data transfer.

<length> The optional <length> parameter is needed for REAL format only. It defines the length of the floating point numbers in bits. Valid values are 32 and 64.

***RST value** ASCII. The default length of REAL data is 32 bits (single precision).

SCPI, Command Types Confirmed, command or query

Example: FORM REAL, 32

Select real data format.

SYST:COMM:GPiB:RTER EOI

Set the terminator to EOI.

(During a calibration) ... CORR:CDAT? 'REFLTRACK',1,0

Query a system error correction term. The data is transferred in a definite length block which can be written to a file; the analyzer displays the message <no_of_bytes> bytes binary data received.

FORMat:DEXPort:SOURce FDATA | SDATa | MDATA

[Deprecated command]

Defines the format for traces retrieved with the ZVR-compatible command

[TRACe\[:DATA\]\[\[:RESPonse\]\[\[:ALL\]\]?](#)



This command is not relevant for results read with the [CALCulate:DATA...](#) commands.

Parameters	See list of parameters below.
Range [def. unit]	Depending on the measured parameter and format. The unit is the default unit of the measured parameter; see CALCulate<Ch>:PARameter:SDEFine .
*RST value	SDATa
SCPI, Command Types	Device-specific, command or query.
Example:	See TRACe[:DATA][[:RESPonse][[:ALL]]?

The following parameters are related to trace data (see also *Data Flow* diagram):

FDATA	Formatted trace data, according to the selected trace format (CALCulate<Chn>:FORMat). 1 value per trace point for Cartesian diagrams, 2 values for polar diagrams.
SDATa	Unformatted trace data: Real and imaginary part of each measurement point. 2 values per trace point irrespective of the selected trace format. The trace mathematics is not taken into account. Wave quantities are returned as voltages.
MDATa	Unformatted trace data (see SDATa) after evaluation of the trace mathematics.

HCOPY...

The HCOPI system controls the output of screen information to an external device. Part of the functionality of this system is included in the [File](#) menu.

HCOPY:DESTination <string> | 'MMEM' | 'DEFPRt'

Selects a printer name or file as destination for the screen output.

<string>	Printer name, string variable. One of the printers accessible from the analyzer.
'MMEM'	Print to file. The file name is defined via MMEMory:NAME . The command HCOPY:DEVIce:LANGuage WMF EWMF BMP PNG selects the file format.
'DEFPRt'	Use the default printer (of user <i>instrument</i>)
*RST value	n/a (*RST does not overwrite the printer destination)
SCPI, Command Types	Confirmed, command or query.
Example:	MMEM:NAME 'C:\Screenshots\Plot1.BMP'

Define a printer file name (without creating the file),

assuming that .BMP is the current file format (see [HCOpy:DEvice:LANGuage](#)).

```
HCOpy:MIT:LOGO ON; TIME ON
```

Include the logo and current time and date in the printed file.

```
HCOpy:MPAG:WIND ALL
```

Include all diagram areas one one page of the printed file.

```
HCOpy:DEST 'MMEM'; :HCOpy
```

Select 'Print to file' and create the printer file specified before.

HCOpy:DEvice:LANGuage EMF | WMF | EWMF | BMP | JPG | PNG

Selects a file format for printer files. Selecting the format is recommended to ensure that the file defined via [MMEMory:NAME](#) can be read or imported by an external application.

EMF, WMF, EWMF	Windows enhanced metafile format (vector-based, file extension *.emf). The parameter WMF is equivalent to EMF; a query returns EMF.
BMP	Windows bitmap
JPG	JPEG bitmap
PNG	Portable network graphics format
*RST value	BMP
SCPI, Command Types	Confirmed, command or query.

Example:

```
HCOpy:DEV:LANG BMP
```

Select Windows bitmap format for printer files.

```
MMEM:NAME 'C:\Screenshots\Plot1.BMP'
```

Define a printer file name and specify an existing directory (without creating the file).

```
HCOpy:DEST 'MMEM'; :HCOpy
```

Select 'Print to file' and create the printer file specified before.

HCOpy[:IMMediate]

Initializes the print according to the current [HCOpy...](#) configuration.

*RST value	—
SCPI, Command Types	Confirmed, no query.

Example:

```
HCOpy:DEST '<Printer_name>'
```

Select the printer for the output of screen data.

```
HCOpy
```

Start printing.

HCOPy:ITEM:ALL

Selects the complete screen contents to be printed, including the logo ([HCOPy:ITEM:LOGO](#)), time ([HCOPy:ITEM:TIME](#)), and the marker list ([HCOPy:ITEM:MLIST](#)).

***RST value** After a reset, the complete information is printed; see commands for logo, time, marker list and settings.

SCPI, Command Types Confirmed, no query.

Example:

```
HCOP:ITEM:ALL
```

Select the complete information to be printed.

```
HCOP
```

Start printing.

HCOPy:ITEM:LOGO[:STATe] <Boolean>

Qualifies whether or not the printed hardcopy contains the logo. The default R&S logo (file Logo.gif) is stored in the Resources\Images subdirectory of the NWA program directory and can be replaced by another logo.



This command is valid for printed hardcopies. If you print to a file ([HCOPy:DESTination 'MMEM'](#)), use [HCOPy:MITem:LOGO\[:STATe\]](#).

<Boolean> ON | OFF - Logo is included or excluded.

***RST value** n/a (*RST does not affect the printer configuration)

SCPI, Command Types Device-specific, command or query

Example:

```
HCOP:ITEM:ALL
```

Select the complete information to be printed.

```
HCOP:ITEM:LOGO ON; :HCOP
```

Include the logo in the printed output and start printing.

HCOPy:ITEM:MLIST[:STATe] <Boolean>

Qualifies whether or not the printed output contains the information in the marker info field (marker list).

<Boolean> ON | OFF - Marker list is included or excluded.

***RST value** n/a (*RST does not affect the printer configuration)

SCPI, Command Device-specific, command or query

Types**Example:**

```
HCOP:ITEM:ALL
```

Select the complete information to be printed.

```
HCOP:ITEM:MLIST ON; :HCOP
```

Include the marker list in the printed output and start printing.

HCOPy:ITEM:TIME[:STATe] <Boolean>

Qualifies whether or not the printed hardcopy contains the current date and time.



This command is valid for printed hardcopies. If you print to a file ([HCOPy:DESTination 'MMEM'](#)), use [HCOPy:MITem:TIME\[:STATe\]](#).

<Boolean> ON | OFF - Date and time is included or excluded.
***RST value** n/a (*RST does not affect the printer configuration)

SCPI, Command Types Device-specific, command or query

Example:

```
HCOP:ITEM:ALL
```

Select the complete information to be printed.

```
HCOP:ITEM:TIME ON; :HCOP
```

Include the data and time in the printed output and start printing .

HCOPy:MITem:LOGO[:STATe] <Boolean>

Qualifies whether or not the printed file contains the logo. The default R&S logo (file Logo.gif) is stored in the Resources\Images subdirectory of the NWA program directory and can be replaced by another logo.



This command is valid for screen content which is printed to a file ([HCOPy:DESTination 'MMEM'](#)). To configure hardcopies, use [HCOPy:ITEM:LOGO\[:STATe\]](#).

<Boolean> ON | OFF - Logo is included or excluded.
***RST value** n/a (*RST does not affect the printer configuration)

SCPI, Command Types Device-specific, command or query

Example:

See [HCOPy:DESTination](#)

HCOPy:MITem:TIME[:STATe] <Boolean>

Qualifies whether or not the printed file contains the current date and time.



This command is valid for screen content which is printed to a file ([HCOPy:DESTination 'MMEM'](#)).

To configure hardcopies, use [HCOpy:ITEM:TIME\[:STATe\]](#).

<Boolean>	ON OFF - Date and time is included or excluded.
*RST value	n/a (*RST does not affect the printer configuration)
SCPI, Command Types	Device-specific, command or query

Example:

See [HCOpy:DESTination](#)

HCOpy:MPAGe:WINDow ALL | ACTive | MARKer

Defines the diagram areas to be printed to file.



This command is valid for screen content which is printed to a file ([HCOpy:DESTination](#) 'MMEM').

To configure hardcopies, use [HCOpy:PAGE:WINDow](#).

ALL 	All diagram areas are printed.
ACTive 	Only the active diagram area is printed.
MARKer	Only the Marker Info Field (Marker Table) is printed.
*RST value	n/a (*RST does not affect the print-to-file-configuration)

SCPI, Command Types Confirmed, command or query

Example:

See [HCOpy:DESTination](#)

HCOpy:PAGE:MARGin:BOTTom <numeric_value>

Defines the distance between the bottom of the page and the bottom of the printed information.

<numeric_value>	Lower margin.
Range [def. unit]	0.01 mm to 10000 mm [mm]
*RST value	n/a (*RST does not affect the printer configuration)
SCPI, Command Types	Device-specific, command or query

Example:

`HCOpy:PAGE:MARG:BOT 10; TOP 10`

Set an upper and a lower margin of 1 cm.

HCOpy:PAGE:MARGin:LEFT <numeric_value>

Defines the distance between the left edge of the page and the left edge of the printed information.

<numeric_value>	Left margin.
Range [def. unit]	0.01 mm to 10000 mm [mm]
*RST value	n/a (*RST does not affect the printer configuration)
SCPI, Command Types	Device-specific, command or query

Example:

`HCOpy:PAGE:MARG:LEFT 10; RIGHT 10`

Set an left and a right margin of 1 cm.

HCOPy:PAGE:MARGIn:RIGHT <numeric_value>

Defines the distance between the right edge of the page and the right edge of the printed information.

<numeric_value>	Right margin.
Range [def. unit]	0.01 mm to 10000 mm [mm]
*RST value	n/a (*RST does not affect the printer configuration)

SCPI, Command Types Device-specific, command or query

Example:

```
HCOP:PAGE:MARG:LEFT 10; RIGHT 10
```

Set an left and a right margin of 1 cm.

HCOPy:PAGE:MARGIn:TOP <numeric_value>

Defines the distance between the top of the page and the top of the printed information.

<numeric_value>	Upper margin.
Range [def. unit]	0.01 mm to 10000 mm [mm]
*RST value	n/a (*RST does not affect the printer configuration)

SCPI, Command Types Device-specific, command or query

Example:

```
HCOP:PAGE:MARG:BOTT 10; TOP 10
```

Set an upper and a lower margin of 1 cm.

HCOPy:PAGE:ORientation PORTrait | LANDscape

Defines the orientation of the printed page. Switching between LANDscape and PORTrait rotates the hardcopy result by 90 degrees. No other settings are changed.

PORTrait 	Short edge of the paper is the top of the page.
LANDscape	Long edge of the paper is the top of the page.
*RST value	n/a (*RST does not affect the printer configuration)

SCPI, Command Types Confirmed, command or query

Example:

```
HCOP:PAGE:ORI LAND; :HCOP
```

Select landscape page orientation and start printing.

HCOPy:PAGE:WINDow ACTIVE | ALL | SINGLE

Defines the number of diagram areas per printed page.



This command is valid for printed hardcopies. If you print to a file (`HCOPY:DESTINATION 'MMEM'`), use `HCOPY:MPAGE:WINDOW`.

ACTIVE 	Print only active diagram area.
ALL 	All diagram areas are printed on one page.
SINGLE	One diagram area per page.
*RST value	n/a (*RST does not affect the printer configuration)

SCPI, Command Types Confirmed, command or query

Example:

```
HCOP:PAGE:WIND SING; :HCOP
```

Select one diagram area per page and start printing.

INITiate<Ch>...

This subsystem controls the initiation of the trigger system and defines the scope of the triggered measurement.

INITiate<Ch>:CONTInuous <Boolean>

Qualifies whether the analyzer measures in single sweep or in continuous sweep mode.

<Ch>	Channel number. The channel is ignored because the command affects all channels.
<Boolean>	ON - The analyzer measures continuously, repeating the current sweep. OFF - The measurement is stopped after the number of sweeps defined via <code>[SENSe<Ch>:]SWEep:COUNT</code> . <code>INITiate<Ch>[:IMMediate]</code> initiates a new measurement cycle.
*RST value	ON

SCPI, Command Types Confirmed, command or query

Example:

```
*RST; :INIT:CONT OFF
```

Activate single sweep mode for all channels (including channel no. 2 created later).

```
INIT:SCOP SING
```

State that a single sweep will be performed in the active channel only.

```
CALC2:PAR:SDEF 'TRC2','S11'; :INIT2
```

Create channel no. 2 with a new trace and start a single sweep in channel no. 2.

INITiate<Ch>[:IMMediate]

Starts a new single sweep sequence. This command is available in single sweep mode only (`INITiate<Ch>:CONTInuous OFF`). The data of the last sweep (or previous sweeps, see [Sweep History](#))

can be read using `CALCulate<Ch>:DATA:NSWeep:FIRSt? SDATa, <count>`.



In contrast to all other commands of the analyzer, `INITiate<Ch>[:IMMediate]` has been implemented for overlapped execution; see [Command Synchronization](#).

<Ch> Channel number. If the channel number does not exist the analyzer returns an error message. If `INITiate<Ch>[:IMMediate]:SCOPE ALL` is active, this suffix is ignored.

***RST value** –

SCPI, Command Types Confirmed, no query

Example: See `INITiate<Ch>:CONTinuous`

INITiate<Ch>[:IMMediate]:SCOPE ALL | SINGLE

Selects the scope of the single sweep sequence. The setting is applied in single sweep mode only (`INITiate<Ch>:CONTinuous OFF`).

<Ch> Channel number. The channel is ignored because the command affects all channels.

ALL `INITiate<Ch>[:IMMediate]` starts a single sweep in all channels.

SINGLE `INITiate<Ch>[:IMMediate]` starts a single sweep in the referenced channel `<Ch>` only.

***RST value** ALL

SCPI, Command Types Device-specific, command or query

Example: See `INITiate<Ch>:CONTinuous`

INPut...

This subsystem controls the characteristics of the analyzer's input ports.

INPut<port_no>:ATTenuation <numeric_value>

Sets the attenuation for the received waves. The generated wave is attenuated via `OUTPut<port_no>:ATTenuation`.

Note: `INPut<port_no>:ATTenuation` is not channel-specific; the value is valid for all channels. Use `[SENSe<Ch>:]POWer:ATTenuation` to set or query a channel-specific attenuation value.

<port_no> Test port number of the analyzer, 1 to 2, 3 or 4, depending on the [analyzer model](#). If unspecified the numeric suffix is set to 1.

<numeric_value> Attenuation factor for the received wave.

Range [def. unit] Depending on the analyzer/attenuator model, e.g. 0 dB to 75 dB for ZVA8/ZVA8-B31/32/B33/B34 [dB]. UP and DOWN increment/decrement the attenuation in 5 or 10 dB steps. The analyzer rounds any entered value below

*RST value	the maximum attenuation to the closest step. 0 dB
SCPI, Command Types	Confirmed, no query (query cannot return channel-specific settings, would be misleading).
Example:	<pre>INP2:ATT 10</pre> Set the step attenuator for the wave received at port 2 and for all channels to 10 dB. The waves at the other test ports are not affected. <pre>SENS1:POW:ATT? BREC</pre> Query the receiver step attenuator setting at port 2 and for channel no. 1. The response is 10.

INSTrument...

This subsystem selects or queries particular resources (SCPI: logical instruments) of the analyzer.

INSTrument:NSElect <Channel>

Selects channel as the active channel.

<Channel>	Number of the channel to be activated. The channel must be created before using <code>CONFigure:CHANnel<Ch>:STATe ON</code> .
Range [def. unit]	1, 2, ... [-]
*RST value	1
SCPI, Command Types	Confirmed, command or query. If all channels have been deleted <code>CONFigure:CHANnel<Ch>:STATe OFF</code> the query returns 0.
Example:	<pre>CONF:CHAN2:STAT ON; :INST:NSEL?</pre> Create channel no. 2 and select it as the active channel. The query returns 2.

INSTrument:PORT:COUNT?

Returns the number of test ports of the analyzer.

Response	Number of ports (integer number).
Range [def. unit]	1, 2, 3 or 4, depending on the analyzer model.
*RST value	—
SCPI, Command Types	Device-specific, query only.
Example:	<pre>INST:PORT:COUN?</pre> Return the number of ports of your analyzer.

INSTRument[:SElect] CHANNEL1 | CHANNEL2 | CHANNEL3 | CHANNEL4

[Deprecated command]

Selects channel <Ch> as the active channel.



To select a channel number > 4 use the generalized command `INSTRument:NSElect <Ch>`.

Parameters	Number of the channel to be activated. The channel must be created before using <code>CONFigure:CHANnel<Ch>:STATe ON</code> .
Range [def. unit]	CHANNEL1, CHANNEL2, CHANNEL3, CHANNEL4 [-]
*RST value	CHANNEL1
SCPI, Command Types	Confirmed, command or query. If all channels have been deleted (<code>CONFigure:CHANnel<Ch>:STATe OFF</code>) the query returns CHANNEL0.
Example:	<pre>CONF:CHAN2:STAT ON; :INST CHANNEL2</pre>

Create channel no. 2 and select it as the active channel.

MEMory...

The MEMory system controls the loaded [setups](#) of the analyzer.



The MEMory... commands don't affect any stored files. Use the [MMEMory...](#) commands to store and load data and to manage files stored on a mass storage device.

MEMory:CATalog?

Returns the names of all loaded setups.

Response	Comma-separated list of all setups.
*RST value	'Set1' (the default setup is created after each *RST).
SCPI, Command Types	Confirmed (with device-specific response), query only.
Example:	<pre>*RST; :MEM:DEF 'SETUP_2'</pre>

Create a setup named 'Setup_2' and make it the active setup.

```
MEM:CAT?
```

Query all setups. The response is 'Set1,Setup_2'.

```
MMEM:STOR:STAT 1, 'C:\Program Files\Rohde&Schwarz\Network Analyzer\RecallSets\Setup_2.zvx'; :MEM:DEL 'Setup_2.zvx'
```

Store the active setup Setup_2 to a file, renaming it Setup_2.zvx. Close the setup.

MEMory:DEFine '<setup_name>'

Creates a new setup <setup_name> using default settings for the traces, channels and diagram areas. The created setup becomes the active setup.

'<setup_name>'	String parameter to specify the name of the created setup.
*RST value	–
SCPI, Command Types	Device-specific, no query.

Example:

See [MEM:CAT?](#).

MEMory:DELeTe[:NAME] '<file_name>'

Closes the specified setup.

'<setup_name>'	String parameter to specify the name of the setup to be closed.
*RST value	–
SCPI, Command Types	Confirmed, no query.

Example:

See [MEM:CAT?](#).

MEMory:SELeCt '<setup_name>'

Selects a setup as the active setup.

'<setup_name>'	String parameter to specify the setup.
*RST value	–
SCPI, Command Types	Device-specific, no query.

Example:

```
*RST; :MEM:DEF 'SETUP_2'
```

Create a setup named 'Setup_2' and make it the active setup.

```
MEM:SEL 'Set1'
```

Activate the default setup Set1.

```
MMEM:STOR:STAT 1, 'C:\Program Files\Rohde&Schwarz\Network Analyzer\RecallSets\Set1.zvx'; :MEM:DEL 'Set1.zvx'
```

Store the active setup Set1 to a file, renaming it Set1.zvx. Close the setup.

MMEMory...

The MMEMory system provides mass storage capabilities for the analyzer.

**Internal and external mass storage**

The mass storage of the analyzer may be internal or external. The internal mass storage device can be any section of the internal hard disk (mapped to drive C:\). The external mass storage device can be a USB memory stick connected to one of the USB ports (mapped to any free drive letter) or a network connection.

**File and directory names**

The <file_name> and <directory_name> parameters are strings. Some commands use a fixed directory; for others the <file_name> can contain the complete path including the drive name and all subdirectories, e.g. 'C:\TEMP\TRASH\test.txt' for the file named test.txt in the TEMP\TRASH subdirectory of the internal hard disk drive C:\. If no complete path is specified, the file location is relative to the current directory (queried with [MMEMory:CDIRectory?](#)). The file name itself may contain the period as a separator for extensions.

File and directory names can be chosen according to Windows™ conventions; the restrictions placed on file names known from DOS systems do not apply. All letters and numbers are allowed, as well as the special characters "_", "^", "\$", "~", "!", "#", "%", "&", "-", "{", "}", "(", ")", "@", and "\". Reserved file names are CON, AUX, COM1, ..., COM4, LPT1, ..., LPT3, NUL and PRN.

The use of wildcards ? and * is not allowed.

MMEMory:AKAL:FACTory:CONVersion '<directory_name>'

Converts the factory calibration data of the standards in the active calibration unit ([SYSTem:COMMunicate:RDEvice:AKAL:ADDRess](#)) to Touchstone format and copies it to the specified directory.

'<directory_name>' String parameter to specify the directory.

*RST value –

SCPI, Command Types Device-specific, no query.

Example:

```
MMEM:AKAL:FACT:CONV 'C:\AKAL\Touchstone'
```

Convert and copy the factory calibration data of the active calibration unit to the specified directory.

MMEMory:AKAL:USER:CONVersion '<directory_name>','<file_name>'

Converts an arbitrary (e.g. user-defined) set of calibration data of the standards in the active calibration unit ([SYSTem:COMMunicate:RDEvice:AKAL:ADDRess](#)) to Touchstone format and copies it to the specified directory.

'<directory_name>' String parameter to specify the directory.

*RST value –

'<file_name>' Name and (possibly) directory of the cal kit file to be used for the automatic calibration (optional string parameter):

- If the parameter is omitted, the analyzer uses the last characterized

cal kit file.

- If an empty string (' ') is specified, the factory cal kit file stored in the active calibration unit (`SYSTem:COMMunicate:RDEvice:AKAL:ADDress`) is used. By default this file is also used in manual control.
- A NWA cal kit file name *.calkit without path denotes a specific cal kit file stored in the active calibration unit.
- A NWA cal kit file name *.calkit with path denotes a specific cal kit file stored in an arbitrary directory.

SCPI, Command Types

Device-specific, no query.

Example:

```
MMEM:AKAL:USER:CONV 'C:\AKAL\Touchstone'
```

Convert and copy the calibration data of the standards of the last characterized cal kit to the specified directory.

```
MMEM:AKAL:USER:CONV 'C:\AKAL\Touchstone', 'user.calkit'
```

Convert and copy the calibration data of the standards of the user-defined cal kit 'user.calkit' to the specified directory.

MMEMory:CATalog? [<directory_name>]

Returns the contents of the current or of a specified directory.



Use `MMEMory:CATalog:ALL?` to query the contents of the current directory and all subdirectories.

'<directory_name>'

String parameter to specify the directory. If the directory is omitted, the command queries the contents of the current directory, to be queried with `MMEMory:CDIRectory?`

Response

Directory information in the following format:

```
<used_size>,<free_disk_space> {,<file_name>,,<file_size>}
```

The first two numeric parameters denote the total amount of storage currently used in the directory and the total amount of storage available, both expressed in bytes. All files are returned with their file name and their size in bytes.

*RST value

—

SCPI, Command Types

Confirmed, query only.

Example:

```
MMEM:CAT?
```

```
Response: 2056878, 809734144, zvb_quickstart.pdf, , 2056878,
```

MMEMory:CATalog:ALL? [<directory_name>]

Returns the contents of the current or of a specified directory and all subdirectories.



Use [MMEMory:CATalog?](#) to query the contents of the current directory.

'<directory_name>' String parameter to specify the directory. If the directory is omitted, the command queries the contents of the current directory, to be queried with [MMEMory:CDIRectory?](#)

Response Directory information in the following format:

```
Directory of <Dir_name>, <used_size>, <free_disk_space>
{, <Subdir>, <DIR>,}{,<file_name>,,<file_size>},
Directory of <Subdir_name_1>,
<used_size>,<free_disk_space> {, <Subdir>,
<DIR>,}{,<file_name>,,<file_size>},
Directory of <Subdir_name_2>,
<used_size>,<free_disk_space> ...
```

The first line is omitted if the current directory contains no subdirectories. The following lines are analogous to the output of [MMEMory:CATalog?](#).

***RST value** –

SCPI, Command Types Confirmed, query only.

Example: `MMEM:CAT:ALL?`

Response: Directory of C:\Program Files\Rohde&Schwarz\Network Analyzer\DOC\, 2056878, 809734144, zvb_quickstart.pdf, , 2056878,

MMEMory:CDIRectory '<directory_name>' | DEFault

Changes the default directory for mass memory storage.

'<directory_name>' String parameter to specify the directory. If DEFault is used, the analyzer selects the default directory 'C:\Program Files\Rohde&Schwarz\Network Analyzer'.

***RST value** – (A *RST does not change the current directory)

SCPI, Command Types Confirmed, command or query (without parameter, returns the current directory).

Example: `MMEM:CDIR 'C:\Documents and Settings\NetworkService\Application Data'`

Change to the specified directory.

See also condensed program example [Path Independent RC Programs](#).

MMEMory:COPY '<file_source>','<file_destination>'

Copies an existing file to a new file.

'<file_source>', String parameters to specify the name of the file to be copied and the
'<file_destination>' name of the new file.
*RST value –

SCPI, Command Types Confirmed, no query.

Example:

```
MMEM:COPY 'C:\USER\DATA\SETUP.zvx','A: '
```

Copy file Setup.zvx in directory C:\USER\DATA to the external storage medium, mapped to drive A:\.

MMEMory:DATA '<file_name>', <data>

Loads <data> into the file <file_name>.

'<file_name>' String parameter to specify the name of the file.
<data> Data in 488.2 [block data format](#). The delimiter EOI must be selected to achieve correct data transfer.
*RST value –

SCPI, Command Types Confirmed, with query. The query form is MMEMory:DATA? <file_name> with the response being the associated <data> in block format.

Example:

```
MMEM:DATA? 'C:\TEMP\TEST01.HCP '
```

Query the block data contained in file TEST01.HCP.

MMEMory:DELeTe '<file_name>',[FORCE]

Removes a file from the specified directory.

'<file_name>' String parameter containing the path and file name of the removed file. If the path is omitted, the current directory is used (see [MMEMory:CDIRectory](#)).

FORCE Optional parameter, allows you to delete read-only files, too.

*RST value n/a

SCPI, Command Types Confirmed, no query.

Example:

```
MMEM:DEL 'C:\TEMP\TEST01.HCP '
```

Remove file TEST01.HCP from the directory C:\TEMP. The file must not be read-only; otherwise the additional parameter FORCE is required.

MMEMory:DELeTe:CORRection <file_name>

Deletes a system error correction data set stored in the cal pool (cal group file).

'<file_name>' String parameter to specify the name of the cal group file to be deleted. Cal group files must have the extension *.cal. The directory path must not be specified; the analyzer always uses the default cal pool directory C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Data.

***RST value** –

SCPI, Command Types Device-specific, no query.

Example: See [MMEMory:LOAD:CORRection](#)

MMEMory:LOAD:CKIT '<file_name>'

Loads cal kit data from a specified NWA cal kit file.

'<file_name>' String parameter to specify the name and directory of the cal kit file to be loaded. If no path is specified the analyzer searches the current directory, to be queried with [MMEMory:CDIRectory?](#).

*Note: The loaded file must be a NWA-specific cal kit file with the extension *.calkit. ZVR cal kit files can be imported using the [SENSe<Ch>:]CORRection:CKIT:INSTall command. Agilent cal kit files can be imported manually and converted into *.calkit files.*

***RST value** –

SCPI, Command Types Device-specific, no query.

Example:

```
MMEM:LOAD:CKIT 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Kits\New_kit.calkit'
```

Load the previously created cal kit file New_kit.calkit from the default cal kit directory.

```
... :MMEM:STOR:CKIT 'New_kit', 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Kits\New_kit.calkit'
```

Store the data for the user-defined cal kit Newkit and overwrite the cal kit file New_kit.calkit.

MMEMory:LOAD:CKIT:SDATa '<conn_name>', '<ckit_name>', MMThrough | MFThrough | FFThrough | MMLine | MMLINE1 | MMLINE2 | MMLINE3 | MFLine | MFLINE1 | MFLINE2 | MFLINE3 | FFLine | FFLINE1 | FFLINE2 | FFLINE3 | MMATten | MFATten | FFATten | MMSNetwork | MFSNetwork | FFSNetwork | MOPen | FOPen | MSHort | FSHort | MOShort | MOSHORT1 | MOSHORT2 | MOSHORT3 | FOShort |

FOSHORT1 | FOSHORT2 | FOSHORT3 | MREFlect | FREFlect | MMTCh | FMTCh | MSMatch | FSMatch, '<stdlabel_name>', '<file_name>' [,<port1_no>][,<port2_no>]

Loads cal kit data for a specific connector type, cal kit, and calibration standard from a specified Touchstone file, assigning a label for the cal data. A restriction on the port assignment may be defined in addition.



Renormalization rules

In automatic renormalization mode (`MMEMory:SETTings:RENorm:MODE AUTO`), renormalization is enabled. In explicit renormalization mode (`MMEMory:SETTings:RENorm:MODE EXPLicit`), renormalization is controlled by `MMEMory:SETTings:RENorm:STATE`.

The analyzer uses the line impedance of the connector type as a target impedance; the `MMEMory:SETTings:RENorm:RIMPedance` setting is ignored.

'<conn_name>'	String parameters containing the name of the connector type.
'<ckit_name>'	String parameters containing the name of a calibration kit available on the analyzer.
Parameters	Standard type; for a description refer to the table of standard types .
'<stdlabel_name>'	String parameter defining a label for the cal kit data. An empty string means that no label is defined.
'<file_name>'	String parameter to specify the name and directory of the Touchstone file to be loaded. A *.s1p file must be used for one-port standards, a *.s2p file for two-port standards. If no path is specified the analyzer searches the current directory, to be queried with <code>MMEMory:CDIRectory?</code> .
<port1_no>, <port2_no>	Port assignment: One port number for one-port standards, two port number for two-port standards. If the port numbers are omitted, the cal kit data is valid for all ports.
*RST value	–
SCPI, Command Types	Device-specific, no query.

Example:

```
MMEM:LOAD:CKIT:SDAT 'N 50 Ohm','Default Kit',MOPEN,'Test data','test.slp',1
```

Load the file *Test.slp* from the current directory in order to define the properties of an Open (m) standard in the cal kit named *Default Kit* for the *N 50 Ω* connector type. Assign the label *Test data* and specify that the standard data is valid for port no. 1 only.



Connector and cal kit naming conventions

Connector and calibration kit names must be entered as string parameters. The strings contain the connector and cal kit names used in the *Calibration Kits* dialog; a Ω in the name must be replaced by 'Ohm', e.g.:

- 'NewKit1' denotes the user-defined calibration kit *NewKit1*.
- 'N 50 Ohm Ideal Kit' denotes the *N 50 Ω Ideal Kit*.
- 'ZV-Z21 typical' denotes the cal kit *ZV-Z21 typical*.

MMEMory:LOAD:CKIT:UDIRectory '<directory>'

Specifies the *Directory for Additionally Available Cal Kits and Conn Types*. All cal kit files in the specified directory will be (re-)loaded automatically as predefined kits (i.e. read-only kits which cannot be modified) every time the NWA application is started.

'<directory>' String parameter to specify the directory path. The directory can be created separately (**MMEMory:MDIRectory**). An empty string means that no cal kit files will be loaded.

***RST value** –

SCPI, Command Types Device-specific, no query.

Example:

```
MMEM:LOAD:CKIT:UDIR 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Kits\Autoload'
```

Specify the directory for additionally available cal kits.

```
MMEM:MDIR 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Kits\Autoload'
```

Create the specified 'Autoload' directory.

```
MMEM:STOR:CKIT 'New_kit', 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Kits\New_kit.calkit'
```

Store the data for the user-defined cal kit *New_kit* to the 'Autoload' directory.

MMEMory:LOAD:CMAP '<file_name>'

Loads a color scheme from a specified NWA color scheme file.

'<file_name>' String parameter to specify the name and directory of the color scheme file to be loaded. The default extension (manual control) for color scheme files is *.ColorScheme, although other extensions are allowed.

***RST value** –

SCPI, Command Types Device-specific, no query.

Example:

```
MMEM:LOAD:CMAP 'C:\Program Files\Rohde&Schwarz\Network Analyzer\ColorSchemes\Test.ColorScheme'
```

Load the previously created color scheme file *Test.ColorScheme* from the default color scheme directory.

```
DISP:CMAP13:RGB 1,0,0; DISP:CMAP14:RGB 0,1,0
```

Color the first trace red, the second trace green.

```
MMEM:STOR:CMAP 'C:\Program Files\Rohde&Schwarz\Network Analyzer\ColorSchemes\Test.ColorScheme'
```

Store the data for the user-defined cal kit *Newkit* and

overwrite the cal kit file New_kit.calkit.

MMEMory:LOAD:CORRection <channel> | ALL, '<file_name>' MMEMory:LOAD:CORRection? <channel>

Applies a system error correction data set stored in the cal pool (cal group file) to channel no. <Ch>.

<channel> ALL	Channel number of an existing channel. ALL applies the selected data set to all channels.
<file_name>	String parameter to specify the name of the cal group file to be loaded. Cal group files must have the extension *.cal. The directory path must not be specified; the analyzer always uses the default cal pool directory C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Data.
*RST value	–
SCPI, Command Types	Device-specific, command or query. The query form returns the cal group file assigned to the specified channel (empty string if no cal group file is assigned).

Example:

```
MMEM:STOR:CORR 1, 'Calgroup1.cal'
```

Copy the current correction data set of channel 1 to a cal group file Calgroup1.cal.

```
CONF:CHAN2:STAT ON; :MMEM:LOAD:CORR 2, 'Calgroup1.cal'
```

Apply the stored correction data (cal group file) to channel 2.

```
MMEM:LOAD:CORR? 2
```

Query the cal group file for channel 2. Response: 'Calgroup1.cal'

```
MMEM:LOAD:CORR:RES 2, 'Calgroup1.cal'
```

Resolve the pool link between channel 2 and the cal group file.

```
MMEM:LOAD:CORR? 2
```

Query the cal group file for channel 2. Response: ''

```
MMEM:DEL:CORR 'Calgroup1.cal'
```

Delete the created cal group file.

MMEMory:LOAD:CORRection:MERGE <Channel>, '<file1>.cal', '<file2>.cal', ...

Merges (activates) several cal group files for channel no. <channel> (equivalent to the *Calibration Pool* list in the *Calibration Manager* dialog). The merged cal group files can be stored to a common file; see example.

<channel>	Channel number of an existing channel.

'<file1>.cal', '<file2>.cal', ...	String parameters with the names of the cal group files to be merged. Cal group files must have the extension *.cal. The file extensions must be specified as part of the string parameters. In contrast the directory path must not be specified; the analyzer always uses the default path C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Data.
*RST value	–
SCPI, Command Types	Device-specific, no query.
Example:	<pre>SENS1:CORR:COLL:METH:DEF 'Test', FRTRans, 1, 3</pre> Define a bidirectional transmission normalization between ports 1 and 3 as calibration Test for channel 1. <pre>CORR:COLL:METH:DEF?</pre> Query the defined calibrations for channel 1. The response is FRTR0103. <pre>CORR:COLL:SAVE:SEL:DEF; :MMEM:STOR:CORR 1, 'P1-P3.cal'</pre> Create a default calibration data set for the selected calibration and store the data to a cal group file. <pre>SENS1:CORR:COLL:METH:DEF 'Test', FRTRans, 1, 4</pre> Overwrite channel 1's existing calibration Test by a bidirectional transmission normalization between ports 1 and 4. <pre>CORR:COLL:METH:DEF?</pre> Query the defined calibrations for channel 1. The response is FRTR0104. <pre>CORR:COLL:SAVE:SEL:DEF; :MMEM:STOR:CORR 1, 'P1-P4.cal'</pre> Create a default calibration data set for the selected calibration and store the data to a cal group file. <pre>MMEM:LOAD:CORR:MERGE 1, 'P1-P3.cal', 'P1-P4.cal'; :CORR:COLL:METH:DEF?</pre> Load and merge the two cal group files and query the active calibrations again. The response is FRTR0103,FRTR0104. <pre>MMEM:STOR:CORR 1, 'Merged.cal'</pre> Store both calibrations to a common cal group file.

MMEMory:LOAD:CORRection:RESolve <channel> | ALL [, '<file_name>']

Resolves the pool link between channel <Ch> and a correction data set (cal group file). After resolving the pool link, the analyzer keeps the previous system error correction as a channel calibration (*Channel Cal*). A new calibration will replace the channel calibration but not overwrite the old cal group file (and not affect other channels).

<channel> ALL	Channel number of an existing channel. ALL resolves the pool link for all channels.
'<file_name>'	Optional string parameter to specify the name of the cal group file. Cal group files must have the extension *.cal. The directory must not be specified; the analyzer always uses the default path C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Data. If there is no link between <Ch> and the specified file, the command has no effect. If no file is specified, the command resolves any link between <Ch> and an arbitrary cal group file.
*RST value	–
SCPI, Command Types	Device-specific, no query.
Example:	See MMEMory:LOAD:CORRection

MMEMory:LOAD:CORRection:TCOEfficient '<file name>','<parameter name/trace name>']

Loads trace data from a specified power meter correction file or [trace file](#) and assigns it to a trace with a specified name. Traces are created using the [CALCulate<Ch>:PARAmeter:SDEFine...](#) command.



Renormalization rules for imported Touchstone files

In automatic renormalization mode ([MMEMory:SETTings:RENorm:MODE AUTO](#)), renormalization is enabled. In explicit renormalization mode ([MMEMory:SETTings:RENorm:MODE EXPLicit](#)), renormalization is controlled by [MMEMory:SETTings:RENorm:STATe](#). The analyzer uses the connector impedance of the physical ports as a target impedance; the [MMEMory:SETTings:RENorm:RIMPedance](#) setting is ignored. ASCII file data (*.csv, *.pmcl) are never renormalized.

'<file name>'	String parameter to specify the name and directory of the loaded trace file. The analyzer supports power meter correction list files (*.pmcl, to be generated using MMEMory:STORe:CORRection:TCOEfficient), *.csv, and Touchstone (*.s<n>p) files. If no path is specified the analyzer searches the current directory, to be queried with MMEMory:CDIRectory? . The file extensions *.s<n>p, *.csv, and *.pmcl for Touchstone, ASCII, and power meter correction list files are mandatory.
'<parameter name/trace name>'	Optional string parameter: For imported Touchstone files for more than one port (*.s2p, *.s3p, *.s4p), the parameter denotes the imported S-parameter ('S11', 'S12', ...). For ASCII (*.csv) files, the parameter references a trace name in the file (case sensitive). If the parameter is omitted, the first trace in the specified file is imported. The parameter is not used for power meter correction list files (*.pmcl).
*RST value	–
SCPI, Command Types	Confirmed, no query.
Example:	See SOURce<Ch>:POWer<Pt>:CORRection:TCOEfficient:CALibration

MMEMory:LOAD:LIMit '<trc_name>','<file_name>',['<param_name>','<x_offset>','<y_offset>','<type>']

Loads a limit line definition from a specified file and assigns it to a trace with a specified name. Limit lines are created using the [CALCulate<Chn>:LIMit...](#) commands.



Limit lines can be loaded from [Touchstone files](#) (.s<n>p, where <n> denotes the number of ports). The optional parameters '<param_name>', '<x_offset>', '<y_offset>', '<type>' are only relevant for Touchstone files. For *.limit files, no optional parameters can be set.*

'<trc_name>'	Name of an existing trace in the active setup (string parameter). The imported limit line is assigned to this trace, irrespective of the trace information in the limit line file .
*RST value	—
'<file_name>'	String parameter to specify the name and directory of the limit line file to be loaded. The default extension (manual control) for limit line files is *.limit, although other extensions are allowed. If no path is specified the analyzer searches the current directory, to be queried with MMEMory:CDIRectory? . See also note on Touchstone files above.
*RST value	—
'<param_name>'	String parameter, selects an S-parameter from a Touchstone file. The parameter must be compatible with the file type (e.g. for one-port Touchstone files *.s1p, only the parameter name 'S11' is allowed).
*RST value	'S11' (if all optional parameters are omitted)
<x_offset>	Stimulus offset for limit lines loaded from a Touchstone file. A 1 GHz offset shifts the limit line by 1 GHz in (positive) horizontal direction.
Range [def. unit]	Depending on the sweep range of the analyzer. [The default units for frequency, power and time sweeps are Hz, dB and s, respectively.]
*RST value	0
<y_offset>	Response offset for limit lines loaded from a Touchstone file. A 1 dB offset shifts the limit line by 1 dB in (positive) vertical direction.
Range [def. unit]	Depending on the measured quantity. [dB]
*RST value	0
<type>	Limit line type : LMAX – upper limit line LMIN – lower limit line OFF – limit line off
*RST value	LMAX (if all optional parameters are omitted)

SCPI, Command Types

Device-specific, no query.

Example:

Assume that the current setup contains two traces named Trc1 and Trc2, respectively, and that limit lines have been defined for Trc1.

```
MMEM:STOR:LIM 'TRC1', 'C:\Program
Files\Rohde&Schwarz\Network
Analyzer\LIMitLines\Lim_Trcl.limit'
```

Store the limit line definition of Trc1 to a limit line

file.

```
MMEM:LOAD:LIM 'TRC2', 'C:\Program
Files\Rohde&Schwarz\Network
Analyzer\LIMitLines\Lim_Trc1.limit'
```

Load the previously created limit line file and assign the limit lines to Trc2.

```
MMEM:STOR:TRAC 'TRC1', 'C:\Program
Files\Rohde&Schwarz\Network Analyzer\LIMitLines\Trc1.slp'
```

Store the current trace data of Trc1 to a limit line file in Touchstone format.

```
MMEM:LOAD:LIM 'TRC1', 'C:\Program
Files\Rohde&Schwarz\Network Analyzer\LIMitLines\Trc1.slp',
'S11', 0, 2, LMAX
```

Load the previously created Touchstone limit line file and assign the limit lines to Trc1, applying a response offset of 2 dB.

```
CALC:LIMit:DISPlay ON
```

Show the limit line in the diagram.

MMEMory:LOAD:MDADData <Channel>, '<file_name>' | CDElay

Loads the known delay values of a calibration mixer, to be used as a reference for a mixer delay measurement calibration, and enables variable or constant delay mode. Mixer delay measurements are controlled using the [SENSe<Ch>:FREQuency:MDElay...](#) commands.

<Channel>	Channel number
*RST value	–
'<file_name>'	String parameter to specify the name and directory of the loaded file. The default extension (manual control) for files containing known delays is *.csv, although other extensions are allowed. If no path is specified the analyzer searches the current directory, to be queried with MMEMory:CDIRectory? . If a file name is specified, the analyzer activates variable delay mode.
CDElay	Use the constant delay values defined via SENSe<Ch>:FREQuency:MDElay:CDElay
*RST value	–
SCPI, Command Types	Device-specific, no query.
Example:	See MMEMory:LOAD:MDCData

MMEMory:LOAD:MDCData <Channel>, '<file_name>'

Loads correction data for a mixer delay measurement calibration from a specified file and assigns it to a

channel with a specified number. Mixer delay measurements are controlled using the `SENSe<Ch>:FREQuency:MDElay...` commands.



Use `MMEMory:LOAD:MDAData` to load delay values of a calibration mixer stored in a file.

<Channel>	Channel number
*RST value	–
'<file_name>'	String parameter to specify the name and directory of the calibration file to be loaded. The default extension (manual control) for mixer delay calibration files is *.mcad, although other extensions are allowed. If no path is specified the analyzer searches the current directory, to be queried with <code>MMEMory:CDIRectory?</code> .
*RST value	–
SCPI, Command Types	Device-specific, no query.

Example:

Assume that a mixer delay measurement has been configured and enabled (see examples for the `SENSe<Ch>:FREQuency:MDElay...` commands), and that a calibration mixer is connected to the analyzer.

```
MMEM:LOAD:MDAD 1, 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\MixerDelay\MDelay.csv'
```

Load mixer data for the calibration mixer and activate variable delay mode.

```
SENS1:FREQ:MDElay:DIV ON
```

Divide the loaded calibration data by two.

```
SENS1:FREQ:MDElay:CORR OFF
```

Disable the current correction (if a correction is on).

```
SENS1:FREQ:MDEL:ACQ
```

Take a calibration sweep.

```
MMEM:STOR:MDCD 1, 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\MixerDelay\Mixer1.mcal'
```

Store the measured calibration data for the calibration mixer to a file.

For a new mixer delay measurement:

```
MMEM:LOAD:MDCD 1, 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\MixerDelay\Mixer1.mcal'
```

Load the previously generated mixer delay calibration file and apply the calibration data to the current mixer delay measurement.

MMEMory:LOAD:PTRain <Channel>, <Generator>, '<file_name>'

Loads a pulse train definition from a specified file and assigns it to a channel with a specified number.

Pulse train definitions are created using the `SENSe<Ch>:PULSe:GENerator<Gen>...` commands.

<Channel>	Channel number
*RST value	–
<Generator>	Generator number. In the present firmware version, this number is always 1.
*RST value	1
'<file_name>'	String parameter to specify the name and directory of the pulse train file to be loaded. The default extension (manual control) for pulse train files is *.train, although other extensions are allowed. If no path is specified the analyzer searches the current directory, to be queried with <code>MMEMory:CDIRectory?</code> .
*RST value	–
SCPI, Command Types	Device-specific, no query.

Example:

Assume that the current setup contains two channels Ch1 and Ch2, and that a pulse train has been defined for Ch1.

```
MMEM:STOR:PTR 1, 1, 'C:\Program Files\Rohde&Schwarz\Network
Analyzer\PulseTrain\PulseTrain.train'
```

Store the pulse train definition of Ch1 to a pulse train file.

```
MMEM:LOAD:PTR 2, 1, 'C:\Program Files\Rohde&Schwarz\Network
Analyzer\PulseTrain\PulseTrain.train'
```

Load the previously created pulse train file and assign the definition to Trc2.

MMEMory:LOAD:RIPPlE '<trc_name>','<file_name>'

Loads a ripple limit definition from a specified file and assigns it to a trace with a specified name. Ripple limits are created using the `CALCulate<Chn>:RIPPlE...` commands.

'<trc_name>'	Name of an existing trace in the active setup (string parameter). The imported ripple limit line is assigned to this trace, irrespective of the trace information in the ripple limit file .
*RST value	–
'<file_name>'	String parameter to specify the name and directory of the ripple limit file to be loaded. The default extension (manual control) for ripple limit files is *.ripple, although other extensions are allowed. If no path is specified the analyzer searches the current directory, to be queried with <code>MMEMory:CDIRectory?</code> .
*RST value	–
SCPI, Command Types	Device-specific, no query.

Example:

Assume that the current setup contains two traces named Trc1 and Trc2, respectively, and that ripple limits have been

defined for Trc1.

```
MMEM:STOR:RIPP 'TRC1', 'C:\Program
Files\Rohde&Schwarz\Network
Analyzer\LIMitLines\Lim_Trcl.limit'
```

Store the ripple limit definition of Trc1 to a ripple limit file.

```
MMEM:LOAD:RIPP 'TRC2', 'C:\Program
Files\Rohde&Schwarz\Network
Analyzer\LIMitLines\Lim_Trcl.limit'
```

Load the previously created ripple limit file and assign the limits to Trc2.

```
CALC:RIPP:DISPlay ON
```

Show the ripple limit line for the active trace in the diagram.

MMEMory:LOAD:SEGMENT <Ch>,'<file_name>'

Loads a sweep segment definition from a specified file and assigns it to a specified channel. Sweep segments are defined using the [SENSe<Ch>:]SEGMENT<Seg>... commands.

<Ch>	Channel number.
'<file_name>'	String parameter to specify the name and directory of the sweep segment file to be loaded. The default extension (manual control) for sweep segment files is *.seglist, although other extensions are allowed. If no path is specified the analyzer searches the current directory, to be queried with MMEMory:CDIRectory? .

*RST value	–

SCPI, Command Types	Device-specific, no query.

Example:

Assume that the current setup contains two channels numbered 1 and 2, respectively, and that sweep segments have been defined for channel no. 1.

```
MMEM:STOR:SEGM 1, 'C:\Program Files\Rohde&Schwarz\Network
Analyzer\SweepSegments\Seg_Ch1.seglist'
```

Store the sweep segment definition of channel 1 to a sweep segment file.

```
MMEM:LOAD:SEGM 2, 'C:\Program Files\Rohde&Schwarz\Network
Analyzer\SweepSegments\Seg_Ch1.seglist'
```

Load the previously created sweep segment file and use the sweep segments for channel 2.

MMEemory:LOAD:STATe <numeric_value>,'<file_name>'

Loads configuration data from a specified [setup file](#) and sets the analyzer to the corresponding instrument state.

<numeric_value>	1 (the <numeric_value> is used for compatibility with the SCPI standard but is ignored).
<file_name>	String parameter to specify the name and directory of the setup file to be loaded. The default extension (manual control) for setup files is *.zvx, although other extensions are allowed. If no path is specified the analyzer searches the current directory, to be queried with MMEemory:CDIRectory? .

*RST value –

SCPI, Command Types Confirmed, no query.

Example:

```
MMEM:CDIR 'C:\Program Files\Rohde&Schwarz\Network Analyzer'
```

Set the active directory.

```
MMEM:STOR:STAT 1,'RecallSets\Setup_0413.zvx'
```

Store the current setup configuration in the file Setup_0413.zvx in the default directory for setup files C:\Program Files\Rohde&Schwarz\Network Analyzer\RecallSets\Setup_0413.zvx.

```
MMEM:LOAD:STAT 1,'RecallSets\Setup_0413.zvx'
```

Re-load the settings stored in Setup_0413.zvx.

MMEemory:LOAD:TRACe '<trc name>','<file name>',['<parameter name/trace identifier>']

Loads trace data from a specified [trace file](#) and assigns it to a trace with a specified name. Traces are created using the [CALCulate<Ch>:PARAmeter:SDEFine...](#) command.

**Renormalization rules for imported Touchstone files**

In automatic renormalization mode (MMEemory:SETTings:RENorm:MODE AUTO), renormalization is enabled. In explicit renormalization mode (MMEemory:SETTings:RENorm:MODE EXPLicit), renormalization is controlled by MMEemory:SETTings:RENorm:STATe.

The analyzer uses the reference impedance of the physical ports as a target impedance; the MMEemory:SETTings:RENorm:RIMPedance setting is ignored.

ASCII file data (.csv, *.dat) are never renormalized.*

'<trc name>' Name of an existing data trace in the active setup (string parameter). The trace data is loaded into a memory trace associated with the specified data trace. If one or more memory traces are already associated with the specified data trace, the last generated memory trace is overwritten.

'<file name>' String parameter to specify the name and directory of the trace file to be loaded. Several [file formats](#) for trace files are supported. If no path is specified the analyzer searches the current directory, to be queried with [MMEemory:CDIRectory?](#).

The file extensions *.s<n>p, *.csv, and *.dat for Touchstone, ASCII, and Matlab files are mandatory.

'<parameter
name/trace
identifier>'

Optional string parameter: For imported Touchstone files for more than one port (*.s2p, *.s3p, *.s4p), the parameter denotes the imported S-parameter ('S11', 'S12', ...). For [ASCII \(*.csv\)](#) and Matlab (*.dat) files, the parameter identifies a particular trace in the file (case sensitive). If the parameter is omitted, the first trace in the specified file is imported.

*RST value

–

SCPI,
Command
Types

Confirmed, no query.

Example:

Assume that the current setup contains a trace named Trcl.

```
MMEM:STOR:TRAC 'TRC1', 'C:\Program
Files\Rohde&Schwarz\Network Analyzer\Traces\Trcl.slp'
```

Store the current trace data of Trcl to a trace file.

```
MMEM:LOAD:TRAC 'TRC1', 'C:\Program
Files\Rohde&Schwarz\Network Analyzer\Traces\Trcl.slp'
```

Load the previously created trace file and create a memory trace assigned to Trcl.

```
CALC:PAR:DEF:SGR 1,2
```

Create four traces to measure the two-port S-parameters S_{11} , S_{12} , S_{21} , S_{22} . The traces are not displayed.

```
MMEM:STOR:TRAC 'TRC1', 'C:\Program
Files\Rohde&Schwarz\Network Analyzer\Traces\Trcl.s2p'
```

Store the four S-parameter traces to a two-port Touchstone file.

```
MMEM:LOAD:TRAC 'TRC1', 'C:\Program
Files\Rohde&Schwarz\Network Analyzer\Traces\Trcl.s2p'
```

Load the previously created Touchstone file and overwrite the previously generated memory trace assigned to Trcl with the S_{11} trace.

MMEMory:LOAD:VNETworks<Ch>:BALanced:DEEMbedding<Log_pt> '<file_name>', PMAin | PSECondary[, IPORTs]

Loads data from a specified [Touchstone file](#) defining a balanced port circuit model for deembedding. Select a balanced port circuit model involving file import before using the command.

<Ch>

Channel number

<Log_pt>

Logical port number

'<file_name>'

String parameter to specify the name and directory of the loaded Touchstone file. The balanced port circuit models STSL | STSC | SLST | SCST require two 2-port (*.s2p) files, to be assigned to the different ports PMAin and PSECondary; the FIMPort model requires a single 4-port (*.s4p) file but no additional port

assignment.

If no path is specified the analyzer searches the current directory, to be queried with `MMEemory:CDIRectory?`.

Parameters

Port assignment for two 2-port (*.s2p) files:

PMAin – Port 1

PSECondary – Port 2

The ports **must be specified** for the import of 2-port (*.s2p) files; they **must be omitted** for 4-port (*.s4p) files.

[IPORTs]

Interchange port numbers of loaded *.s2p file. If the parameter is omitted, the port numbers are not interchanged. The parameter must not be used for 4-port files.

*RST value

–

SCPI, Command Types

Device-specific, no query.

Example:

```
*RST; SOUR:LPOR1 1,2; LPOR2 3,4
```

Define a balanced port configuration.

```
CALC:TRAN:VNET:BAL:DEEM:TND STSL
```

Select the *Serial .s2p data, shunt L* circuit model.

```
MMEemory:LOAD:VNET:BAL:DEEM2 'C:\Program  
Files\Rohde&Schwarz\Network Analyzer\VNET\Test.s2p', PMA
```

Load a Touchstone file and assign it to logical port no. 2.

MMEemory:LOAD:VNETworks<Ch>:BALanced:EMBedding<Log_pt> '<file_name>', PMAin | PSECondary[, IPORTs]

Loads data from a specified [Touchstone file](#) defining a balanced port circuit model for embedding. Select a balanced port circuit model involving file import before using the command.

<Ch> Channel number

<Log_pt> Logical port number

'<file_name>' String parameter to specify the name and directory of the loaded Touchstone file. The balanced port circuit models STSL | STSC | SLST | SCST require two 2-port (*.s2p) files, to be assigned to the different ports PMAin and PSECondary; the FIMPort model requires a single 4-port (*.s4p) file but no additional port assignment. If no path is specified the analyzer searches the current directory, to be queried with `MMEemory:CDIRectory?`.

Parameters

Port assignment for two 2-port (*.s2p) files:

PMAin – Port 1

PSECondary – Port 2

The ports **must be specified** for the import of 2-port (*.s2p) files; they **must be omitted** for 4-port (*.s4p) files.

[IPORTs]

Interchange port numbers of loaded *.s2p file. If the parameter is omitted, the port numbers are not interchanged. The parameter must not be used for 4-port files.

*RST value

–

**SCPI,
Command
Types**

Device-specific, no query.

Example:

```
*RST; SOUR:LPOR1 1,2; LPOR2 3,4
```

Define a balanced port configuration.

```
CALC:TRAN:VNET:BAL:EMB:TND STSL
```

Select the *Serial .s2p data, shunt L* circuit model.

```
MMEM:LOAD:VNET:BAL:EMB2 'C:\Program  
Files\Rohde&Schwarz\Network Analyzer\VNET\Test.s2p', PMA
```

Load a Touchstone file and assign it to logical port no. 2.

MMEMory:LOAD:VNETworks<Ch>:GLOop:DEEMbedding '<file_name>'

Loads data from a specified one-port (*.s1p) [Touchstone file](#) defining a ground loop circuit model for deembedding. Select the ground loop circuit model involving file import (FIMPorT) before using the command.

<Ch> Channel number.**'<file_name>'** String parameter to specify the name and directory of the loaded Touchstone file. If no path is specified the analyzer searches the current directory, to be queried with [MMEMory:CDIRectory?](#).***RST value** —**SCPI,
Command
Types** Device-specific, no query.**Example:**

```
CALC:TRAN:VNET:GLO:DEEM:TND FIMP
```

Select the *1-Port Data (s1p)* circuit model.

```
MMEM:LOAD:VNET:GLO:DEEM2 'C:\Program  
Files\Rohde&Schwarz\Network Analyzer\VNET\Test.s1p'
```

Load a Touchstone file.

MMEMory:LOAD:VNETworks<Ch>:GLOop:EMBedding '<file_name>'

Loads data from a specified one-port (*.s1p) [Touchstone file](#) defining a ground loop circuit model for embedding. Select the ground loop circuit model involving file import (FIMPorT) before using the command.

<Ch> Channel number.**'<file_name>'** String parameter to specify the name and directory of the loaded Touchstone file. If no path is specified the analyzer searches the current directory, to be queried with [MMEMory:CDIRectory?](#).***RST value** —

SCPI, Command Types

Device-specific, no query.

Example:

```
CALC:TRAN:VNET:SEND:GLO:TND FIMP
```

Select the *1-Port Data (slp)* circuit model.

```
MMEM:LOAD:VNET:GLO:EMB 'C:\Program  
Files\Rohde&Schwarz\Network Analyzer\VNET\Test.slp'
```

Load a Touchstone file.

MMEMory:LOAD:VNETworks<Ch>:PPAir:DEEMbedding<List_idx> '<file_name>', PMAin | PSECondary[, IPORts]

Loads data from a specified [Touchstone file](#) defining a port pair circuit model for deembedding. Select a port pair with a circuit model involving file import before using the command.

<Ch> Channel number

<List_idx> Current number of a port pair in the list, defined via
[CALCulate<Ch>:TRANSform:VNETworks:PPAir:DEEMbedding<List_idx>:DEFine](#)

'<file_name>' String parameter to specify the name and directory of the loaded Touchstone file. The port pair circuit models [STSL](#) | [STSC](#) | [SLST](#) | [SCST](#) require two 2-port (*.s2p) files, to be assigned to the different ports [PMAin](#) and [PSECondary](#); the [FIMP](#)Port model requires a single 4-port (*.s4p) file but no additional port assignment. If no path is specified the analyzer searches the current directory, to be queried with [MMEMory:CDIRectory?](#).

Parameters Port assignment for two 2-port (*.s2p) files:
PMAin – Port 1
PSECondary – Port 2
The ports **must be specified** for the import of 2-port (*.s2p) files; they **must be omitted** for 4-port (*.s4p) files.

[IPORts] Interchange port numbers of loaded *.s2p file. If the parameter is omitted, the port numbers are not interchanged. The parameter must not be used for 4-port files.

*RST value –

SCPI,
Command
Types

Device-specific, no query.

Example:

```
*RST; :CALC:TRAN:VNET:PPA:DEEM:DEF 1,2,3,4
```

Define a port pair configuration with two port pairs (<List_idx> = 1 or 2).

```
CALC:TRAN:VNET:PPA:DEEM2:TND STSL
```

Select the *Serial .s2p data, shunt L* circuit mode for port pair no. 2.

```
MMEM:LOAD:VNET:PPA:DEEM2 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Traces\Test.s2p',  
PMA
```

Load a Touchstone file and assign it to port pair no. 2.

MMEMory:LOAD:VNETworks<Ch>:PPAir:EMBedding<List_idx> '<file_name>', PMAin | PSECondary[, IPORts]

Loads data from a specified [Touchstone file](#) defining a balanced port circuit model for embedding. Select a port pair with a circuit model involving file import before using the command.

<Ch>	Channel number
<List_idx>	Current number of a port pair in the list, defined via CALCulate<Ch>:TRANSform:VNETworks:PPAir:EMBedding<List_idx>:DEFine
'<file_name>'	String parameter to specify the name and directory of the loaded Touchstone file. The balanced port circuit models STSL STSC SLST SCST require two 2-port (*.s2p) files, to be assigned to the different ports PMAin and PSECondary; the FIMPort model requires a single 4-port (*.s4p) file but no additional port assignment. If no path is specified the analyzer searches the current directory, to be queried with MMEMory:CDIRectory? .
Parameters	Port assignment for two 2-port (*.s2p) files: PMAin – Port 1 PSECondary – Port 2 The ports must be specified for the import of 2-port (*.s2p) files; they must be omitted for 4-port (*.s4p) files.
[IPORts]	Interchange port numbers of loaded *.s2p file. If the parameter is omitted, the port numbers are not interchanged. The parameter must not be used for 4-port files.
*RST value	–
SCPI, Command Types	Device-specific, no query.
Example:	<pre>*RST; :CALC:TRAN:VNET:PPA:EMB:DEF 1,2,3,4</pre>

Define a port pair configuration with two port pairs (<List_idx> = 1 or 2).

```
CALC:TRAN:VNET:PPA:EMB2:TND STSL
```

Select the *Serial .s2p data, shunt L* circuit mode for port pair no. 2.

```
MMEM:LOAD:VNET:PPA:EMB2 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Traces\Test.s2p', PMA
```

Load a Touchstone file and assign it to port pair no. 2.

MMEMory:LOAD:VNETworks<Ch>:SENDED:DEEMbedding<Ph_pt> '<file_name>',[IPORts]

Loads data from a specified two-port (*.s2p) [Touchstone file](#) defining a single ended circuit model for deembedding. Select the single ended port circuit model involving file import (FIMPort) before using the command.

<Ch>	Channel number.
<Ph_pt>	Physical port number
'<file_name>'	String parameter to specify the name and directory of the loaded Touchstone file. If no path is specified the analyzer searches the current directory, to be queried with MMEMory:CDIRectory? .
*RST value	–
[IPORts]	Interchange port numbers of loaded *.s2p file. If the parameter is omitted, the port numbers are not interchanged.
SCPI, Command Types	Device-specific, no query.
Example:	<pre>CALC:TRAN:VNET:SEND:DEEM:TND FIMP</pre> Select the <i>Serial .s2p</i> data circuit model. <pre>MMEM:LOAD:VNET:SEND:DEEM2 'C:\Program Files\Rohde&Schwarz\Network Analyzer\VNET\Test.s2p'</pre> Load a Touchstone file and assign it to the physical port no. 2.

MMEMory:LOAD:VNETworks<Ch>:SENDEd:EMBedding<Ph_pt> '<file_name>',[IPORts]

Loads data from a specified two-port (*.s2p) [Touchstone file](#) defining a single ended circuit model for embedding. Select the single end. Select the single ended port circuit model involving file import (FIMPORt) before using the command.

<Ch>	Channel number.
<Ph_pt>	Physical port number
'<file_name>'	String parameter to specify the name and directory of the loaded Touchstone file. If no path is specified the analyzer searches the current directory, to be queried with MMEMory:CDIRectory? .
*RST value	–
[IPORts]	Interchange port numbers of loaded *.s2p file. If the parameter is omitted, the port numbers are not interchanged.
SCPI, Command Types	Device-specific, no query.
Example:	<pre>CALC:TRAN:VNET:SEND:EMB:TND FIMP</pre> Select the <i>Serial .s2p</i> data circuit model. <pre>MMEM:LOAD:VNET:SEND:EMB2 'C:\Program Files\Rohde&Schwarz\Network Analyzer\VNET\Test.s2p'</pre> Load a Touchstone file and assign it to the physical port no. 2.

MMEMory:MDIRectory '<directory_name>'

Creates a new subdirectory for mass memory storage in an existing directory.

'<directory_name>' String parameter to specify the new directory. Either the full path or a subdirectory for the current directory (see [MMEMory:CDIRectory](#)).

***RST value** –

SCPI, Command Types Device-specific, no query.

Example:

```
MMEM:MDIR 'C:\Documents and Settings\New_Directory'
```

Create the specified directory. The parent directory 'C:\Documents and Settings' must have been created before.

```
MMEM:MDIR 'C:\Documents and Settings\New_Directory\New_Subdirectory'
```

Create an additional subdirectory.

```
MMEM:CDIR 'C: '; MDIR 'New_Rootdirectory'
```

Create an additional directory C:\New Rootdirectory.

MMEMory:MOVE '<file_source>','<file_destination>'

Moves a file to the indicated directory and stores it under the file name specified, if any. If <file_destination> contains no path indication, the command renames the file without moving it.

'<file_source>','<file_destination>' String parameters to specify the name and the path of the file to be copied and the name and the path of the new file.

***RST value** –

SCPI, Command Types Confirmed, no query.

Example:

```
MMEM:MOVE 'C:\USER\DATA\SETUP.zvx','A: '
```

Move file Setup.zvx in directory C:\USER\DATA to the external storage medium, mapped to drive A:\.

MMEMory:NAME '<file_name>'

Defines a name for a file which can be used to store the printer output. The file is created when it is selected as a printer destination ([HCOPY:DESTination 'MMEM'](#)).

'<file_name>' String parameter to specify the file name. The supported file formats are *.wmf, *.ewmf, *.bmp, *.png; see command [HCOPY:DEvice:LANGuage](#). The specified directory must exist, otherwise no file can be generated. If no path is specified the analyzer uses the current directory, to be queried with [MMEMory:CDIRectory?](#).

***RST value** 'Hardcopy'

SCPI, Device-specific, with query.

Command Types**Example:**

```
MMEM:NAME 'C:\Screenshots\PLOT1.BMP'
```

Define a printer file name, to be stored in the existing directory C:\Screenshots (without creating the file).

```
HCOP:DEST 'MMEM'; :HCOP
```

Select 'Print to file' and create the printer file specified before.

MMEMory:RDIrectory '<directory_name>'

Removes an existing directory from the mass memory storage system.

'<directory_name>' String parameter to specify the directory.

***RST value** –

SCPI, Command Types Device-specific, no query.

Example:

```
MMEM:RDIR 'C:\Documents and Settings\NetworkService\Application Data'
```

Removes the specified directory.

MMEMory:SETTings:RENorm:MODE AUTO | EXPLicit

Controls the renormalization rules for data export and import globally.

AUTO The analyzer uses default renormalization rules; refer to the documentation of the following commands:

[MMEMory:STORE:TRACe](#)

[MMEMory:STORE:TRACe:CHANnel](#)

[MMEMory:STORE:TRACe:PORTs](#)

[MMEMory:STORE:TRACe:PORTs:INComplete](#)

[MMEMory:LOAD:TRACe](#)

[MMEMory:LOAD:CKIT:SDATA](#)

[MMEMory:LOAD:CORRection:TCoefficient](#)

The [MMEMory:SETTings:RENorm:RIMPedance](#) and [MMEMory:SETTings:RENorm:STATE](#) settings are ignored.

EXPLicit Data export and import according to the [MMEMory:SETTings:RENorm:RIMPedance](#) and [MMEMory:SETTings:RENorm:STATE](#) settings.

***RST value** AUTO

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; :MMEMory:SETTings:RENorm:MODE EXPLicit; RIMPedance 75.0; STATE ON
```

Reset the analyzer to create the default trace. Select explicit mode, define a reference impedance of 75 Ω , and enable renormalization.

```
MMEMory:STORe:TRACe:PORTs:INComplete 1, 'C:\Program
Files\Rohde&Schwarz\Network Analyzer\Traces\Trcl.s2p',
COMPLex, 1, 2
```

Store the renormalized trace data to a two-port Touchstone file. The 75 Ω reference impedance appears in the file header.

MMEMory:SETTings:RENorm:RIMPedance <impedance>

Defines the target reference impedance for S-matrix export. The value is written into the file header of the generated Touchstone file. If renormalization is enabled (MMEMory:SETTings:RENorm:STATe ON), it is also used for renormalization.



This setting is valid in explicit mode only (MMEMory:SETTings:RENorm:MODE EXPLiCit).

<impedance> Real impedance value

*RST value [def. unit] 1 [Ω]

SCPI, Command Types Device-specific, command or query

Example:

See [MMEMory:SETTings:RENorm:MODE](#)

MMEMory:SETTings:RENorm:STATe <Boolean>

Enables or disables renormalization during Touchstone file export and import.



This setting is valid in explicit mode only (MMEMory:SETTings:RENorm:MODE EXPLiCit).

<Boolean> ON | OFF – enable or disable renormalization.

*RST value OFF

SCPI, Command Types Device-specific, command or query

Example:

See [MMEMory:SETTings:RENorm:MODE](#)

MMEMory:STORe:CKIT '<ckit_name>', '<file_name>'

Stores the data of a calibration kit to a specified file. The calibration kit is identified by its name.

'<ckit_name>' Name of a user-defined calibration kit available on the analyzer.



It is not possible to modify or store predefined or ideal kits.

'<file_name>' String parameter to specify the name and directory of the cal kit file to be created. The file is a NWA-specific cal kit file with the extension *.calkit. If no path is specified the analyzer uses the current directory, to be queried with

	<code>MMEMory:CDIRectory?.</code>
*RST value	–
SCPI, Command Types	Device-specific, no query.
Example:	<pre>MMEM:LOAD:CKIT 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Kits\New_kit.calkit'</pre> Load the previously created cal kit file <code>New_kit.calkit</code> from the default cal kit directory. <pre>... :MMEM:STOR:CKIT 'New_kit', 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Kits\New_kit.calkit'</pre> Store the data for the user-defined cal kit <code>New_kit</code> and overwrite the cal kit file <code>New_kit.calkit</code>.

MMEMory:STOR:CKIT:WLABel '<ckit_name>', '<ckit_label>', '<file_name>'

Stores the data of a calibration kit to a specified file. The calibration kit is identified by its name and label.

'<ckit_name>'	Name of a user-defined calibration kit available on the analyzer.
	 <i>It is not possible to modify or store predefined or ideal kits.</i>
'<ckit_label>'	Label of the calibration kit, usually its serial number.
'<file_name>'	String parameter to specify the name and directory of the cal kit file to be created. The file is a NWA-specific cal kit file with the extension <code>*.calkit</code> . If no path is specified the analyzer uses the current directory, to be queried with <code>MMEMory:CDIRectory?.</code>
*RST value	–
SCPI, Command Types	Device-specific, no query.
Example:	See <code>[SENSe<Ch>:]CORRection:CKIT:LLABel</code>

MMEMory:STOR:CMAP '<file_name>'

Stores a color scheme to a specified NWA color scheme file.

'<file_name>'	String parameter to specify the name and directory of the color scheme file to be created. If no path is specified the analyzer uses the current directory, to be queried with <code>MMEMory:CDIRectory?.</code> The default extension (manual control) for color scheme files is <code>*.ColorScheme</code> , although other extensions are allowed.
*RST value	–
SCPI,	Device-specific, no query.

**Command
Types****Example:**See [MMEMory:LOAD:CMAP](#)**MMEMory:STORe:CORRection <Ch>,'<file_name>'**

Copies the correction data of channel <Ch> to the cal pool, generating a new correction data file (cal group). The file has the extension *.cal and is stored in the C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Data directory.

<Ch>	Channel number
'<file_name>'	String parameter to specify the name of the created cal group file. There is no need to specify the directory path and file extension; the analyzer uses the default cal pool directory C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Data and a *.cal extension.
*RST value	–
SCPI, Command Types	Device-specific, no query.

Example:See [MMEMory:LOAD:CORRection](#)**MMEMory:STORe:CORRection:TCOefficient '<file name>'**

Saves the current power loss list to a specified power meter correction list file.

'<file name>'	String parameter to specify the name and directory of the created power meter correction list file. The file extension *.pmcl is mandatory. If no path is specified the analyzer uses the current directory, to be queried with MMEMory:CDIRectory? .
*RST value	–
SCPI, Command Types	Confirmed, no query.

Example:See [SOURce<Ch>:POWER<Pt>:CORRection:TCOefficient:CALibration](#)**MMEMory:STORe:LIMit '<trc_name>', '<file_name>'**

Saves the limit lines associated to a specified trace to a limit line file. Limit lines are created using the [CALCulate<Chn>:LIMit...](#) commands.

'<trc_name>'	Name of an existing trace in the active setup (string parameter) for which a limit line definition exists.
'<file_name>'	String parameter to specify the name and directory of the created limit line file . The default extension (manual control) for limit line files is *.limit, although other

extensions are allowed. If no path is specified the analyzer uses the current directory, to be queried with [MMEMory:CDIRectory?](#).

*RST value

–

**SCPI,
Command
Types**

Device-specific, no query.

Example:

See [MMEMory:LOAD:LIMit](#).

MMEMory:STORe:MARKer '<file_name>'

Saves the values of all markers to a ASCII file.

'<file_name>'

String parameter to specify the name and directory of the created ASCII file. The default extension (manual control) for marker files is *.txt, although other extensions are allowed. If no path is specified the analyzer uses the current directory, to be queried with [MMEMory:CDIRectory?](#). An example for the file contents is given below.

*RST value

–

**SCPI,
Command
Types**

Device-specific, no query.

Example:

*RST

Reset the analyzer, creating the default trace no. 1 in channel no. 1.

CALC:MARK ON; MARK:X 1GHz

Create marker no. 1 and place it to 1 GHz.

CALC:MARK2 ON; MARK2:X 2GHz

Create a second marker and place it to 2 GHz.

MMEM:STOR:MARK 'Marker.txt'

Store the marker values to an ASCII file. The file contains both marker values:

```
Trc1 S21
Mkr 1 1.000000 GHz -4.900 dB
Mkr 2 2.000000 GHz -6.087 dB
```

MMEMory:STORe:MDCData <Channel>, '<file_name>'

Stores the correction data for a mixer delay measurement calibration to a specified file. Mixer delay measurements are controlled using the [SENSe<Ch>:FREQuency:MDELay...](#) commands.

<Channel>

Channel number. This parameter is ignored; the data is assigned to a channel when the file is re-loaded.

*RST value

–

'<file_name>'	String parameter to specify the name and directory of the created calibration file. The default extension (manual control) for mixer delay calibration files is *.mcald, although other extensions are allowed. If no path is specified the analyzer uses the current directory, to be queried with MMEemory:CDIRectory? .
*RST value	–
SCPI, Command Types	Device-specific, no query.
Example:	See MMEemory:LOAD:MDCData

MMEemory:STORe:PTRain <Channel>, <Generator>, '<file_name>'

Saves a pulse train definition associated with a specified channel to a pulse train file. Pulse train definitions are created using the [SENSe<Ch>:PULSe:GENerator<Gen>...](#) commands.

<Channel>	Channel number. This parameter is ignored; the data is assigned to a channel when the file is re-loaded.
*RST value	–
<Generator>	Generator number. In the present firmware version, this number is always 1.
*RST value	1
'<file_name>'	String parameter to specify the name and directory of the created pulse train file. The default extension (manual control) for pulse train files is *.train, although other extensions are allowed. If no path is specified the analyzer uses the current directory, to be queried with MMEemory:CDIRectory? .
*RST value	–
SCPI, Command Types	Device-specific, no query.
Example:	See MMEemory:LOAD:PTRain.

MMEemory:STORe:RIPple '<trc_name>', '<file_name>'

Saves the ripple limits associated with a specified trace to a ripple limit file. Ripple limit definitions are created using the [CALCulate<Chn>:RIPple...](#) commands.

'<trc_name>'	Name of an existing trace in the active setup (string parameter) for which a ripple limit definition exists.
'<file_name>'	String parameter to specify the name and directory of the created ripple limit file . The default extension (manual control) for ripple limit files is *.ripple, although other extensions are allowed. If no path is specified the analyzer uses the current directory, to be queried with MMEemory:CDIRectory? .
*RST value	–
SCPI, Command	Device-specific, no query.

Types

Example: See `MMEMory:LOAD:LIMit`.

MMEMory:STORe:SEGMeNt <Ch>, '<file_name>'

Saves the sweep segment definition of a specified channel to a sweep segment file. Sweep segments are defined using the `[SENSe<Ch>:] SEGMeNt<Seg>...` commands.

<Ch>	Channel number.
'<file_name>'	String parameter to specify the name and directory of the created sweep segment file . The default extension (manual control) for sweep segment files is *.seglist, although other extensions are allowed. If no path is specified the analyzer uses the current directory, to be queried with <code>MMEMory:CDIRectory?</code> .
*RST value	–
SCPI, Command Types	Device-specific, no query.
Example:	See <code>MMEMory:LOAD:SEGMeNt</code> .

MMEMory:STORe:STATe <numeric_value>,'<file_name>'

Stores the configuration data of the current setup to a specified [setup file](#).

 *NOTE* `MMEMory:STORe:STATe` renames the current setup, appending a .zvx extension. See example for `MMEMory:LOAD:STATe`.

<numeric_value>	1 (the <numeric_value> is used for compatibility with the SCPI standard but is ignored).
'<file_name>'	String parameter to specify the name and directory of the created setup file. The default extension (manual control) for setup files is *.zvx, although other extensions are allowed. If no path is specified the analyzer uses the current directory, to be queried with <code>MMEMory:CDIRectory?</code> .
*RST value	–
SCPI, Command Types	Confirmed, no query.
Example:	See <code>MMEMory:LOAD:STATe</code> .

MMEMory:STORe:TRACe '<trc_name>','<file_name>',[UNFormattEd | FORMatted, COMPlEx | LINPhase | LOGPhase, POINt | COMMa, SEMicolon | COMMa | TABulator | SPACE]

Stores the data trace '<trc_name>' to a [trace file](#). Corresponds to [Export Complex Data](#) and [Export Formatted Data](#) with disabled options "All Traces of Active Channel" or "Export All Channels". Exports a

single trace (except for multi-port Touchstone files, see below for details).

Traces are created using the `CALCulate<Ch>:PARAmeter:SDEFine...` command.



As *.s<n>p **Touchstone files** (<n> = 1, 2, 3, ...) are intended for a complete set of <n>-port S-parameters, export to this file type is only possible if the active channel contains the full set of <n>² traces. Export of multiport channels with balanced ports is also not supported for this file type. Use `MMEMory:STORe:TRACe:PORTs` to create multiport Touchstone files for incomplete sets of <n>-port S-parameters or with balanced ports.



Renormalization rules

Renormalization is NOT performed! The exported values are always based on the reference impedance of the physical ports.

For one-port Touchstone files, the **Reference resistance** written to the file header depends on the current renormalization mode `MMEMory:SETTings:RENorm:MODE`:

- if set to **AUTO**, the analyzer either uses the common reference impedance if unambiguous, or 1 Ohm otherwise as described in the help of the "Export Complex Data ..." menu command.
- if set to **EXPLiCit**, the analyzer uses the specified reference impedance

`MMEMory:SETTings:RENorm:RIMPedance`.

For multiport Touchstone files always a **Reference resistance** of 50 Ω is used.

'<trc_name>' Name of an existing data trace in the active setup (string parameter).

'<file_name>' String parameter to specify the name and directory of the created trace file. Several **file formats** for trace files are supported. The file extensions *.s<n>p, *.csv, and *.dat for Touchstone, ASCII, and Matlab files are mandatory. To generate a multiport Touchstone file *.s2p, *.s3p..., the channel must contain traces for the full set of S-parameters; the '<trc_name>' is ignored. If no path is specified the analyzer uses the directory 'C:\Program Files\Rohde&Schwarz\Network Analyzer\RecallSets'.

Optional parameters

UNFormatted – Unformatted data export specified by the second optional parameter

FORMatted – Formatted data export (for *.csv and *.dat files only)

If the first optional parameter is omitted, the command stores unformatted data.

COMPLex – Complex values (real and imaginary part)

LINPhase – Linear magnitude and phase

LOGPhase – dB-magnitude and phase

If the second optional parameter is omitted, the command stores complex data.

POINT – Decimal separator: point

COMMa – Decimal separator: comma

If the third optional parameter is omitted, points are used.

SEMIColon – Field separator: semicolon

COMMa – Field separator: comma

TABulator – Field separator: tabulator

SPACE – Field separator: space

If the fourth optional parameter is omitted, semicolons are used.

*RST value – (the default export format is UNFormatted)

SCPI, Command Types Confirmed, no query.

Example: See `MMEMory:LOAD:TRACe`.

MMEMory:STORE:TRACe:CHANnel <channel no.> | ALL,'<file_name>'[,UNFormatted | FORMatted, COMPLex | LINPhase | LOGPhase, POINT | COMMa, SEMicolon | COMMa | TABulator | SPACE]

Stores all data traces in the specified channel to a [trace file](#). Corresponds to [Export Complex Data](#) and [Export Formatted Data](#) with options "All Traces of Active Channel" or "Export All Channels" enabled.

Traces are created using the `CALCulate<Ch>:PARAmeter:SDEFine...` command.



As *.s<n>p [Touchstone files](#) (<n> = 1, 2, 3, ...) are intended for a complete set of <n>-port S-parameters, export to this file type is only possible if the active channel contains the full set of <n>² traces. Export of multiport channels with balanced ports is also not supported for this file type. Use `MMEMory:STORE:TRACe:PORTs` to create multiport Touchstone files for incomplete sets of <n>-port S-parameters or with balanced ports.



Renormalization rules

Renormalization is NOT performed! The exported values are always based on the reference impedance of the physical ports.

For one-port Touchstone files, the [Reference resistance](#) written to the file header depends on the current renormalization mode `MMEMory:SETTings:RENorm:MODE`:

- if set to **AUTO**, the analyzer either uses the common reference impedance if unambiguous, or 1 Ohm otherwise as described in the help of the "Export Complex Data ..." menu command.
- if set to **EXPLICIT**, the analyzer uses the specified reference impedance

`MMEMory:SETTings:RENorm:RIMPedance`.

For multiport Touchstone files always a [Reference resistance](#) of 50 Ω is used.

<channel no.> 	Channel number in the active setup.
ALL	ALL – A separate file is created for each channel in the active setup.
'<file_name>'	String parameter to specify the name and directory of the created trace file. Several file formats for trace files are supported. The file extensions *.s<n>p, *.csv, and *.dat for Touchstone, ASCII, and Matlab files are mandatory. To generate a multiport Touchstone file *.s2p, *.s3p..., the channel must contain traces for the full set of S-parameters. If no path is specified the analyzer uses the C:\Program Files\Rohde&Schwarz\Network Analyzer\Traces directory.
Optional parameters	UNFormatted – Unformatted data export specified by the second optional parameter FORMatted – Formatted data export (for *.csv and *.dat files only) If the first optional parameter is omitted, the command stores unformatted data. COMPLex – Complex values (real and imaginary part) LINPhase – Linear magnitude and phase LOGPhase – dB-magnitude and phase If the second optional parameter is omitted, the command stores complex data. POINT – Decimal separator: point COMMa – Decimal separator: comma If the third optional parameter is omitted, points are used. SEMicolon – Field separator: semicolon COMMa – Field separator: comma TABulator – Field separator: tabulator SPACE – Field separator: space If the third optional parameter is omitted, semicolons are used.
*RST value	– (the default export format is UNFormatted)
SCPI,	Confirmed, no query.

Command Types

Example:

```
*RST; :CONF:TRAC:NAME?
```

Reset the instrument, creating a default channel no 1 and a default trace Trc1.

```
CALC:PAR:DEF:SGR 1,2
```

Create four traces to measure the two-port S-parameters S_{11} , S_{12} , S_{21} , S_{22} . The traces are not displayed.

```
MMEM:STOR:TRAC:CHAN 1, 'C:\Program  
Files\Rohde&Schwarz\Network Analyzer\Traces\Chn1.csv'
```

Store all trace data of channel 1 to a trace file.

```
MMEM:STOR:TRAC:CHAN 1, 'C:\Program  
Files\Rohde&Schwarz\Network Analyzer\Traces\Chn1.s2p'
```

Store the four S-parameter traces to a two-port Touchstone file. The Touchstone file will not contain the default trace Trc1.

MMEMory:STORe:TRACe:PORTs '<channel no.>','<file_name>', COMPLEX | LINPhase | LOGPhase, <Port 1>[, <Port 2>, ...]

Generates a Touchstone file for the specified ports. Corresponds to [Export S-Matrix](#).

The Touchstone file (.s<n>p where <n> is the number of ports) contains a full set of <n>² single-ended S-parameters for the selected ports. Traces are created using the [CALCulate<Ch>:PARAMeter:SDEFine...](#) command. The command fails unless the following conditions are met:

- For a one-port Touchstone file, the reflection coefficient for the specified port (e.g. S_{11} for port no. 1) must be measured. If a full one-port system error correction is available for the specified port, it is also possible to export transmission parameters that are related to the calibrated port (e.g. S_{12} or S_{21} for port no. 1).
- For a multiport Touchstone file, a full multiport system error correction must be available. It is not necessary to measure the full set of S-parameters. Moreover, if the port configuration contains balanced ports, the Touchstone file will contain the converted single-ended S-parameters.

To export uncalibrated, incomplete sets of S-parameters, use

[MMEMory:STORe:TRACe:PORTs:INComplete](#).



Renormalization rules

- In automatic renormalization mode ([MMEMory:SETTings:RENorm:MODE AUTO](#)), the analyzer uses the common reference impedance of the physical ports as the target impedance (or 50 Ω , if different port impedances are defined). The [Reference resistance](#) written to the file header of a Touchstone file is set according to the target impedance; the configured reference impedance ([MMEMory:SETTings:RENorm:RIMPedance](#)) is ignored.
- In explicit renormalization mode ([MMEMory:SETTings:RENorm:MODE EXPLICIT](#)), renormalization is enabled if and only if the renormalization state ([MMEMory:SETTings:RENorm:STate](#)) is ON. If enabled, S-parameters are renormalized to the configured reference impedance ([MMEMory:SETTings:RENorm:RIMPedance](#)). The Reference resistance written to the file header of a Touchstone file is set according to the configured reference

impedance (MMEMory:SETTings:RENorm:RIMPedance) - irrespective of the renormalization state.

<channel no.>	Channel number in the active setup.
'<file_name>'	String parameter to specify the name and directory of the created Touchstone file. The file extension *.s<n>p for a n-port Touchstone file is mandatory. If no path is specified the analyzer uses the current directory, to be queried with MMEMory:CDIRectory? .
Other parameters	COMPLex – Complex values (real and imaginary part) LINPhase – Linear magnitude and phase LOGPhase – dB-magnitude and phase <Port 1>, <Port 2>... – First, second... port number .
*RST value	– (the default export format in manual control is COMPLex)
SCPI, Command Types	Device-specific, no query.
Example:	Suppose that a full four-port calibration for ports 1 to 4 and channel 1 has been performed, and that a DUT with two balanced ports is connected. The analyzer measures an arbitrary mixed mode S-parameter.

```
MMEM:STOR:TRAC:PORT 1, 'Test.s4p', COMPLex, 1,2,3,4
```

Calculate all single-ended S-parameters and store them to a four-port Touchstone file.

MMEMory:STORe:TRACe:PORTs:INComplete '<channel no.>','<file_name>', COMPLex | LINPhase | LOGPhase, <Port 1>[, <Port 2>, ...]

Exports a (possibly) incomplete, uncalibrated set of S-parameters to an n-port Touchstone file ($n > 1$). The missing S-parameter columns are filled by zeros. Corresponds to [Export S-Matrix](#) with option *Replace Missing Values by 0*.

The conditions for exporting incomplete, uncalibrated S-parameter sets are listed in section [Select Ports](#).



Renormalization rules

- In automatic renormalization mode ([MMEMory:SETTings:RENorm:MODE AUTO](#)), the analyzer uses the common reference impedance of the physical ports as the target impedance (or $50\ \Omega$, if different port impedances are defined). The [Reference resistance](#) written to the file header of a Touchstone file is set according to the target impedance; the configured reference impedance ([MMEMory:SETTings:RENorm:RIMPedance](#)) is ignored.
- In explicit renormalization mode ([MMEMory:SETTings:RENorm:MODE EXPLiCit](#)), renormalization is enabled if and only if the renormalization state ([MMEMory:SETTings:RENorm:STAtE](#)) is ON. If enabled, S-parameters are renormalized to the configured reference impedance ([MMEMory:SETTings:RENorm:RIMPedance](#)). The Reference resistance written to the file header of a Touchstone file is set according to the configured reference impedance ([MMEMory:SETTings:RENorm:RIMPedance](#)) - irrespective of the renormalization state.

<channel no.>	Channel number in the active setup.
'<file_name>'	String parameter to specify the name and directory of the created Touchstone file. The file extension *.s<n>p for a n-port Touchstone file is mandatory. If no path is specified the analyzer uses the current directory, to be queried with

	<code>MMEmory:CDIRectory?.</code>
Other parameters	COMpLex – Complex values (real and imaginary part) LINPhase – Linear magnitude and phase LOGPhase – dB-magnitude and phase <Port 1>, <Port 2>... – First, second... port number
*RST value	– (the default export format in manual control is COMpLex)
SCPI, Command Types	Device-specific, no query.
Example:	<pre>*RST</pre> Reset the analyzer, generating the default trace <i>Trc1</i>. The S-parameter S_{21} is measured; the channel is uncalibrated. <pre>MMEm:STOR:TRAC:PORT:INC 1, 'Test.s2p', COMpLex, 1,2</pre> Store the trace to a two-port Touchstone file. The columns for S_{11}, S_{12}, and S_{22} are filled with zeros.

OUTPut...

This subsystem controls the characteristics of the analyzer's output ports.

OUTPut<port_no>:ATTenuation

[Deprecated command]

Sets an attenuation factor for the generated wave transmitted at test port no. <Pt>. The incident wave is attenuated via `INPut<Pt>:ATTenuation`.



OUTPut<Pt>:ATTenuation is not channel-specific; the value is valid for all channels. Use `SOURce<Ch>:POWer<Pt>:ATTenuation` to set or query a channel-specific attenuation value.



Use `SOURce<Ch>:POWer<Pt>:ATTenuation:AUTO ON` for automatic generator attenuator setting. Automatic attenuator setting overwrites the manual attenuation factor. Conversely, a manual entry resets the mode to manual (OFF).

<port_no>	Test port number of the analyzer, 1 to 2, 3 or 4, depending on the analyzer model . If unspecified the numeric suffix is set to 1.
<numeric_value>	Attenuation factor for the generated wave.
Range [def. unit]	Depending on the analyzer/attenuator model, e.g. 0 dB to 80 dB for ZVA8 with ZVA8-B21/B22/B23/B24 [dB]. UP and DOWN increment/decrement the attenuation in 10 dB steps. The analyzer rounds any entered value below the maximum attenuation to the closest step.
*RST value	0 dB
SCPI, Command Types	Confirmed, no query (query cannot return channel-specific settings, would be misleading).
Example:	<pre>SOUR:POW -6</pre>

Set the internal source power for channel 1 to -6 dBm.

```
OUTP2:ATT 10
```

Set the step attenuator for the wave transmitted at port 2 and for all channels to 10 dB. The internal source power and the waves at the other test ports are not affected.

```
SOUR1:POW2:ATT?
```

Query the generator step attenuator setting at port 2 and for channel no. 1. The response is 10.

OUTPut<Chn>:DPORT PORT1 | PORT2 | PORT3 | PORT4

[Deprecated command]

Selects a source port for the stimulus signal (drive port). The setting acts on the active trace. The effect of the drive port selection depends on the measurement parameter associated to the active trace:

- If an S-parameter $S_{\text{out}<\text{in}>}$ is measured, the second port number index <in> (input port of the DUT = drive port of the analyzer) is set equal to the selected drive port: Drive port selection affects the measured quantity.
- If a wave quantity or a ratio is measured, the drive port is independent of the measured quantity.

Note: This command is equivalent to [\[SENSe<Chn>:\]SWEep:SRCPort](#).

<Chn> Channel number used to identify the active trace. If unspecified the numeric suffix is set to 1.

PORT1 ... Test port number of the analyzer, 1 to 2, 3 or 4, depending on the [analyzer model](#).

***RST value** PORT1

SCPI, Command Types Device-specific, with query.

Example:

```
CALC4:PAR:SDEF 'Ch4Tr1', 'A1'
```

Create channel 4 and a trace named *Ch4Tr1* to measure the wave quantity a1. The trace automatically becomes the active trace.

```
OUTP4:DPOR PORT2
```

Select drive port 2 for the active trace.

OUTPut[:STATe] <Boolean>

Turns the internal source power at all ports and the power of all external generators immediately on or off.



After the RF power is switched on, the start of the measurement is delayed by approx. 1 s while the amplifier stages of the analyzer are allowed to settle. To circumvent this delay if you need to turn off the base channel power for a limited period of time, reduce the base channel power setting or turn off the drive ports in the [Port Configuration](#) dialog instead of using RF Off.

<Boolean> ON | OFF - Switches the power on or off.

*RST value	ON
SCPI, Command Types	Device-specific, command or query
Example:	OUTP OFF Turn off the RF source power.

OUTPut:STATe:TYPE FAST | LBNoise

Defines the "RF off Behavior" of the network analyzer.

Parameters	FAST – Only the RF source signal is turned off; the RF amplifiers are still power supplied. LBNoise – The power supply of the RF amplifiers is turned off, too (reduced broadband noise).
*RST value	– (a reset leaves the setting unchanged)
SCPI, Command Types	Device-specific, with query.
Example:	OUTPut:STATe:TYPE FAST Select the fast RF off mode.

OUTPut<Ch>:UPORt:BUSY:LINK <Boolean>

Defines the behavior of the BUSY output signal at pin no. 4 of the **USER CONTROL** connector on the rear panel of the analyzer.

<Ch>	Channel number.
<Boolean>	AUTO – Auto (according to the triggered measurement sequence) POInt – Seeep point PPOInt – Partial measurement SEGMENT – Sweep segment SWEep – Entire sweep
*RST value	AUTO
SCPI, Command Types	Device-specific, command or query
Example:	*RST; :TRIGger:SEquence:LINK?; :OUTP:UPORt:BUSY:LINK? Reset the analyzer and query the triggered measurement sequence. The response is 'SWEEP';AUTO. The BUSY signal is turned on ("High" state) when the analyzer acquires the first partial measurement data of the first sweep point. It returns to "Low" state after the last partial measurement of the last sweep point has been acquired.

OUTPut<Ch>:UPORt:SEGMent<Seg>:STATe <Boolean>

Enables or disables segment bits for the sweep segments in channel no. <Ch>; see [OUTPut<Ch>:UPORt:SEGMent<Seg>\[:VALue\]](#). The command is valid for segmented frequency sweep.

<Ch>	Channel number.
<Seg>	Sweep segment number. This suffix is ignored; the setting is valid for all segments.
<Boolean>	ON OFF - Enables or disables channel bits.
*RST value	OFF

SCPI, Command Types Device-specific, command or query

Example: See [OUTPut<Ch>:UPORt:SEGMent<Seg>\[:VALue\]](#)

OUTPut<Ch>:UPORt:SEGMent<Seg>[:VALue] <numeric_value>

Sets or queries a sweep segment-dependent four-bit binary value to control four independent output signals at the **USER CONTROL** connector (lines 16, 17, 18, 19). The output signals are 3.3 V TTL signals which can be used to differentiate between up to 16 independent analyzer states for each channel. The command is valid for segmented frequency sweeps. It is analogous to the channel-dependent command [OUTPut<Ch>:UPORt\[:VALue\]](#) (for unsegmented sweeps).

The bits for the sweep segments must be enabled explicitly using [OUTPut<Ch>:UPORt:SEGMent:STATe](#).

**Segment bit definition and activation**

The segment bits have the following properties:

- After a *RST of the analyzer all segment bits are set to zero; no signal is applied to pins 16 to 19 of the USER CONTROL connector.
- The value defined with [OUTPut<Ch>:UPORt:SEGMent<Seg>\[:VALue\]](#) is assigned to segment no. <Seg> in channel no. <Ch>.
- The signals at the USER CONTROL connector reflect the segments bits of the currently measured segment.
- The signals are switched on as soon as a measurement in a segment with non-zero segment bits is started. They are changed whenever a segment with different segment bits is measured.
- The signals at the USER CONTROL connector are maintained after the analyzer enters the hold state. This happens in single sweep mode after all sweep sequences have been terminated.



You can use the active segment number as a parameter for [OUTPut<Ch>:UPORt:SEGMent<Seg>\[:VALue\]](#) and monitor the measurement in up to 16 different segments per channel at the USER CONTROL connector; see example below. You can also use the USER CONTROL output signals as segment-dependent trigger signals for external devices. Use [CONTRol:AUXiliary:C\[:DATA\]](#) to transfer the four bit value in decimal representation.

<Ch> Channel number.

<Seg>	Sweep segment number
<numeric_value>	Binary value.
Range [def. unit]	#B0000 to #B1111 (for setting command), 0 to 15 (query) [–] The transferred values correspond to the following states of the USER CONTROL connector: #B0000 – no signal at any of the four pins 16, 17, 18, 19 #B0001 – output signal at pin 16 #B0010 – output signal at pin 17 #B0011 – output signal at pin 16 and 17 ... #B1111 – output signal at pin 16, 17, 18, and 19
*RST value	#B0000 (0)
SCPI, Command Types	Device-specific, with query. The query returns a decimal value.
Example:	<pre>*RST; :SEGM:INS 1MHZ, 1.5MHZ, 111, -21DBM, 0.5S, 0, 10KHZ</pre> Create a sweep segment no. 1 with a sweep range between 1.0 MHz and 1.5 MHz. <pre>SWE:TYPE SEGM</pre> Set the segmented frequency sweep active. <pre>OUTP:UPOR:SEGM:STAT ON</pre> Enable segment bits. <pre>OUTP:UPOR:SEGM1 #B0001</pre> Assign the segment bit value #B0001 to segment no. 1. The output signal at pin 16 is switched on while the first segment is measured. <pre>SEGM2:ADD</pre> Create a second sweep segment. The frequency range of the second segment will be between 1.5 MHz and the maximum frequency of the analyzer. <pre>OUTP:UPOR:SEGM2 #B0010</pre> Assign the segment bit value #B0010 to segment no. 2. While the analyzer measures the second segment, the output signal changes from pin 16 to pin 17.

OUTPut<Ch>:UPORt[:VALue] <numeric_value>

Sets or queries a channel-dependent four-bit binary value to control four independent output signals at the **USER CONTROL** connector (lines 8, 9, 10, 11). The output signals are 3.3 V TTL signals which can be used to differentiate between up to 16 independent analyzer states. `OUTPut<Ch>:UPORt[:VALue]` itself does not change the analyzer state.



Channel bit definition and activation

The channel bits have the following properties:

- After a *RST of the analyzer all channel bits (including the value for the active, sweeping channel

no. 1) are set to zero; no signal is applied to pins 8 to 11 of the USER CONTROL connector.

- The value defined with `OUTPut<Ch>:UPORt[:VALue]` is assigned to channel no. <Ch>.
- The signals at the USER CONTROL connector reflect the channel bits of the **measuring** channel, i.e. the channel for which the analyzer performs a sweep. This channel is not necessarily identical with the active channel.
- The signals are switched on as soon as a measurement (sweep) in a channel with non-zero channel bits is started. They are changed whenever a channel with different channel bits becomes the measuring channel.
- The signals at the USER CONTROL connector are maintained after the analyzer enters the hold state. This happens if all channels use single sweep mode and if all sweep sequences have been terminated.



You can use the active channel number as a parameter for `OUTPut<Ch>:UPORt[:VALue]` and monitor the activity of up to 16 different channels at the USER CONTROL connector; see example below. You can also use the USER CONTROL output signals as channel-dependent trigger signals for external devices. Use `CONTRol:AUXiliary:C[:DATA]` to transfer the four bit value in decimal representation.

<Ch>	Channel number.
<numeric_value>	Binary value.
Range [def. unit]	#B0000 to #B1111 (for setting command), 0 to 15 (query) [–] The transferred values correspond to the following states of the USER CONTROL connector: #B0000 – no signal at any of the four pins 8, 9, 10, 11 #B0001 – output signal at pin 8 #B0010 – output signal at pin 9 #B0011 – output signal at pin 8 and 9 ... #B1111 – output signal at pin 8, 9, 10 and 11
*RST value	#B0000 (0)

SCPI, Command Types Device-specific, with query. The query returns a decimal value.

Example:

```
*RST; :OUTP1:UPOR #B0001
```

Assign the channel bit value #B0001 to the active channel no. 1. The analyzer performs a measurement in channel no. 1, therefore the output signal at pin 8 is switched on.

```
CONF:CHAN2:STAT ON; OUTP2:UPOR #B0010
```

Create channel no. 2, causing it to become the active channel, and assign the channel bit value #B0010. The analyzer performs no measurement in channel no. 2, therefore the output signal is not changed.

```
CALC2:PAR:SDEF 'Ch2Tr1', 'S11'
```

Create a trace named 'Ch2Tr1' and assign it to channel 2. While the analyzer measures in channel 2, the output signal changes from pin 8 to pin 9.

PROGram...

This subsystem controls external application programs that can be run on the analyzer.

PROGram[:SElected]:EXECute '<file_path>[<command>]'

Starts an application program or open a file using an application available on the analyzer.



It is not possible to run several programs simultaneously. If the command `PROGram[:SElected]:EXECute` is sent while a previously started program is still executed, the analyzer generates a SCPI error –100, "Command error..."

**Executing batch files; command prompt**

When executing batch scripts or other DOS applications, the analyzer does not display any DOS windows; the screen is left for the network analyzer (NWA) application. The same applies to the Windows NT command prompt (cmd.exe).

To access the command prompt, proceed as follows:

1. Create a batch file (e.g. "Start_cmd.bat") containing the command line `start cmd.exe` and store the file to `C:\Winnt\system32`.
2. Execute the batch file: `PROG:EXEC 'C:\winnt\system32\Start_cmd.bat'`

The command prompt window is displayed in front of the NWA application. You can also open several command prompt windows simultaneously.

'<file_path>' Name and path of an application program to be executed or of a file to be opened. The path can be defined as an absolute path (e.g. 'c:\...') or relative to the current directory ([MMEMory:CDIRectory](#)). Blanks in the file name are not allowed because everything after a blank is interpreted as a <command>.

<command> Command name in the selected application <file_name> (optional).

*RST value –

SCPI, Command Types Confirmed, no query.

Example:

```
PROG:SEL:NAME PROG
```

Select general program execution on the analyzer.

```
MMEM:CDIR 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Bin'
```

Go to the program directory.

```
PROG:EXEC 'iecw32.exe'
```

Start the application icewin32.

```
PROG:WAIT
```

Lock command execution and manual control of the analyzer until icewin32 is paused or stopped.

PROGram[:SElected]:INIMessage '<file_path>', '<message>' PROGram[:SElected]:INIMessage? '<file_path>'

Writes a <message> into the preferences file (*.ini) specified by <file_path>. The message is entered into the [MESSAGE] section using the fixed key Send. The value for the fixed key Receive is set to an empty string.

The query reads the value associated with the fixed key Receive from the [MESSAGE] section of the preferences file specified by <file_path>. If no value exists for that key, the query returns an empty string.

Both commands can be used to establish a simple file-based two-way communication mechanism to an external application launched by PROGram[:SElected]:EXECute; see example.

'<file_path>' Name and path of the ini file. The *.ini extension may be omitted as it is created automatically by the command. The specified path/directory must exist. If the *.ini file does not exist, it is created.

<message> Value for the fixed key Send

*RST value –

**SCPI,
Command
Types** Device-specific, command or query.

Example:

```
PROG:INIM 'c:\preferences\myapp', 'this is a message'
```

Write the string `this is a message` into the file `c:\preferences\myapp.ini`. The contents of the file look like:

```
[MESSAGE]
Send="this is a message"
Receive=
```

Suppose the external program writes the string `this is a response` to the Receive key (and possibly deletes the contents of the Send key).

```
PROG:INIM? 'c:\preferences\myapp'
```

Query the value of the key Receive in the *.ini file. The response is `this "is a response"`.

PROGram[:SElected]:INIPParameter '<file_path>{'<key>', '<value>' | <value>}' PROGram[:SElected]:INIPParameter? '<file_path>', '<key>'

Defines and writes one or several key/value pairs into the preferences file (*.ini) specified by <file_path>. The information is entered into the [PARAMETER] section.

This command can be used to supply information to an external application launched by :PROGram[:SElected]:EXECute.

The query reads a value associated with a key from the [PARAMETER] section of the preferences file specified by <file_path>. If the key/value pair does not exist, the query returns an empty string.

'<file_path>'	Name and path of the *.ini file. The *.ini extension may be omitted as it is created automatically by the command. The specified path/directory must exist. If the *.ini file does not exist, it is created.
<key>	Key for the key/value pair(s)
<value>	String or numeric value for the key/value pair(s). If a string parameter is supplied, it has to be enclosed in single or double quotes.
*RST value	–
SCPI, Command Types	Device-specific, command or query.
Example:	<pre> PROG:INIP 'c:\preferences\myapp', 'myparameter', 'myvalue', 'startf', 123.05 </pre> Write two key/value pairs into the file c:\preferences\myapp.ini. The contents of the file look like: <pre> [PARAMETER] myparameter="myvalue" startf="123.05" </pre> <pre> PROG:INIP? 'c:\preferences\myapp', 'myparameter' </pre> Query the value of the key myparameter in the *.ini file. The response is "myvalue".

PROGram[:SElected]:NAME PROG

Selects the application to be run on the analyzer. At present, only the general parameter PROG is available. This means that [PROGram\[:SElected\]:EXECute](#) can start any program.



Use this command in order to avoid problems should the default value change in future firmware versions.

PROG	Any program that can be run on the analyzer or any file that can be opened with an application program available on the analyzer
*RST value	PROG
SCPI, Command Types	Confirmed, command or query
Example:	See PROGram[:SElected]:EXECute .

PROGram[:SElected]:WAIT

Locks command execution and manual control of the analyzer while a program started via [PROGram\[:SElected\]:EXECute](#) is running. The analyzer does not execute any further commands or queries until the program is stopped or paused.

Use this command or query before trying to retrieve the return value of the executed program (using [PROGram\[:SElected\]:RETVal?](#)).

Parameters	None.
*RST value	–
SCPI, Command Types	Confirmed, command or query. The query returns 1 as soon as the executed program is stopped or paused.
Example:	See <code>PROGram[:SElected]:EXECute</code> or <code>PROGram[:SElected]:RETVal</code> .

PROGram[:SElected]:RETVal?

Queries the return value of an application or process started via `PROGram[:SElected]:EXECute`.

Since `PROG:RETVal?` is a non-blocking command, it has to be preceded by a `PROG:WAIT` (command or query).

Parameters	None.
*RST value	n.a.
SCPI, Command Types	Confirmed, query only
Example:	<code>PROG:EXEC 'iecwin32.exe'</code> Run <code>iecwin32.exe</code> . <code>PROG:WAIT</code> Lock command execution until <code>iecwin32.exe</code> is stopped. <code>PROG:RETVal?</code> Query the return value (0 in case of success)

ROUTe<Ch>...

This subsystem configures the internal signal paths of a connected switch matrix R&S ZV-Z81/-82 or a multiport test set R&S ZV-83. For details refer to *System Configuration – Matrix Configuration* in the GUI reference chapter.

ROUTe<Ch>:CFile <Boolean>

Overwrites the current settings of the switch matrix/multiport test set with the settings stored in the configuration file `matrix.mtx`. The file is stored in the directory `C:\Program Files\Rohde&Schwarz\Network Analyzer\resources\extdev`.

<Ch>	Channel number. This parameter is ignored; the settings in the configuration file affect all channels no. Ch1 to Ch9.
<Boolean>	ON - The multiport test set uses the default settings of the configuration file OFF - The default settings have been changed (for query only)
*RST value	ON

SCPI, Command Types

Device-specific, with query.

Example:

```
*RST; :ROUT:CFIL?
```

Reset the analyzer and query the default configuration state. The response is *1* (default settings are used).

```
ROUT5:PORTS A, 2
```

Change the signal routing for channel no. 5 and port group A.

```
ROUT:CFIL?
```

Query the default configuration state again. The response is *0* (default settings are no longer used).

ROUTe<Ch>:PORTS <port group>, <port no>{, <port group>, <port no>}

Configures the internal signal paths of the switch matrix/multiport test set for channel no. <Ch>.

<Ch> Channel number.

<port group> Group of "output" ports of the test set.

Range [def. unit]
A | B | C | D

*RST value See example below

<port no.> "Output" port number

Range [def. unit]
0 – retain the existing port configuration when channel <Ch> is measured.
1 | 2 | 3 | 4 – use port no. 1, 2, 3, 4

*RST value 0 (see example below)

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; :ROUT1:PORT?
```

Query the default port configuration of the switch matrix/multiport test set. The analyzer returns *A, 0, B, 0, C, 0, D, 0*. Channel 1 does not change the previous port configuration.

```
CONF:CHAN2 ON; CHAN3 ON; CHAN4 ON
```

Create channels no. 2, 3, 4.

```
ROUT1:PORT A, 1, B, 1, C, 1, D, 1; :ROUT2:PORT A, 2, B, 3, C, 4, D, 4
```

Use the "output" ports no. A1, B1, C1, D1 for channel 1, A2, B3, C4, D4 for channel 2.

```
ROUT3:PORT A, 4, D, 3
```

Use the "output" port no. A4 and D3 for channel 3, do not change port B and C when measuring channel 3.

```
ROUT4:PORT A, 4, B, 0, C, 0, D, 3
```

Select the port configuration for channel 4 to be identical with channel 3.

[SENSe...]

[SENSe<Ch>:]AVERage...

This subsystem sets sweep averaging parameters. The sweep average is a noise-reduction technique which consists of calculating each measurement point as an average of the same measurement point over several consecutive sweeps.



In contrast to the sweep count (for single sweep mode, [SENSe<Ch>:]SWEep:COUNT), averaging is always channel-specific. Both features are completely independent from each other.

[SENSe<Ch>:]AVERage:CLEar

Starts a new average cycle, clearing all previous results and thus eliminating their effect on the new cycle.

<Ch> Channel number. If unspecified the numeric suffix is set to 1.

***RST value** –

SCPI, Command Types Confirmed, no query

Example:

```
SENS1:AVER:COUN 15; :AVER ON
```

Set the average factor for channel 1 to 15 (the mnemonic SENS1 can be omitted) and enable the sweep average.

```
SENS1:AVER:COUN:CURR?
```

Query the currently measured sweep.

```
AVER:COUN 5; CLE
```

Reduce the average factor and restart the average.

[SENSe<Ch>:]AVERage:COUNT <factor>

Defines the number of consecutive sweeps to be combined for the sweep average (*Average Factor*).

<Ch> Channel number.

<factor> Average factor

Range [def. unit] 1 to 1000 [1]

***RST value** 10

SCPI, Command Types Confirmed, command or query

Example:

See [SENSe<Ch>:]AVERage:CLEar

[SENSe<Ch>:]AVERage:COUNT:CURRent?

Queries the number of the sweep which is currently measured. Use this command to monitor the progress of sweep averaging.

<Ch>	Channel number.
Response	Number of current sweep
Range [def. unit]	1 to the average factor ([SENSe<Ch>:]AVERage:COUNT) [1]
*RST value	10
SCPI, Command Types	Device-specific, query only
Example:	See [SENSe<Ch>:]AVERage:CLEar

[SENSe<Ch>:]AVERage[:STATe] <Boolean>

Enable or disable the sweep average.

<Ch>	Channel number.
<Boolean>	ON OFF - Enables or disables the automatic calculation of the sweep average over the specified number of sweeps ([SENSe<Ch>:]AVERage:COUNT).
*RST value	ON
SCPI, Command Types	Confirmed, command or query
Example:	See [SENSe<Ch>:]AVERage:CLEar

[SENSe<Ch>:]BANDwidth...

This subsystem sets the bandwidth of the IF measurement filter (resolution bandwidth). The forms BANDwidth and BWIDth are equivalent.

[SENSe<Ch>:]BANDwidth|BWIDth[:RESolution] <bandwidth>

Defines the resolution bandwidth of the analyzer (*Meas. Bandwidth*).

<Ch>	Channel number. If unspecified the numeric suffix is set to 1.
<bandwidth>	Resolution bandwidth
Range [def. unit]	1 Hz to 1 MHz (5 (10) MHz with option R&S ZVA-K17, 10 (30) MHz with option R&S ZVA-K7; see Pulsed Measurements) [Hz]. UP and DOWN increment/decrement the bandwidth in 1-2-5 steps for each decade. The analyzer rounds up any entered value between these steps and rounds down values exceeding the maximum bandwidth.
*RST value	10 kHz
SCPI,	Confirmed, command or query

Command Types**Example:**

BAND 1.1

Set a resolution bandwidth of approx. 1.1 Hz for channel 1.

BAND?

The analyzer returns the rounded bandwidth of 2 Hz.

[SENSe<Ch>:]BANDwidth[BWIDth[:RESolution]:DREDuction <Boolean>

Enables or disables dynamic bandwidth reduction at low frequencies.

<Ch> Channel number**<Boolean>** ON | OFF – enable or disable dynamic bandwidth reduction.***RST value** OFF**SCPI, Command Types** Device-specific, command or query**Example:**

*RST; :BANDwidth 200

Set a resolution bandwidth of 200 Hz for channel 1.

BANDwidth:DREDuction ON

Enable dynamic bandwidth reduction in order to obtain smaller bandwidths in the low frequency range.

[SENSe<Ch>:]BANDwidth[BWIDth[:RESolution]:SELEct NORMAL | HIGH

Defines the selectivity of the IF filter for an unsegmented sweep. The value is also used for all segments of a segmented sweep, provided that separate selectivity setting is disabled ([SENSe<Ch>:]SEGMENT<Seg>:BWIDth[:RESolution]:SELEct:CONTrol OFF).

<Ch> Channel number.**NORMAL** Use IF filter with normal selectivity and short settling time.**HIGH** Use IF filter with higher selectivity but larger settling time.***RST value** NORMAL**SCPI, Command Types** Device-specific, command or query**Example:**

See [SENSe<Ch>:]SEGMENT<Seg>:BWIDth[:RESolution]:SELEct:CONTrol

[SENSe<Ch>:]CONVerter...

This subsystem provides general frequency converter settings.

[SENSe<Ch>:]CONVerter:AMODEl <Boolean>

[Deprecated command, superseded by

[SOURce<Ch>:POWer<Port>:CONVerter:TRANsfer:DESCRiption](#)]

Enables or disables the *RF In Power (and Electronic Attenuator) with Linear Approximation* power control method ([SOURce<Ch>:POWer<Pt>:CONVerter:TRANsfer:DESCRiption LAPProx](#)) on **all** frequency converter ports.



Since FW version 3.40 this is a *global setting*.

<Ch> Channel number. This suffix is ignored, the command affects all channels.

<Boolean> ON | OFF - Enables or disables the advanced model

*RST value n/a (a *RST does not affect the general frequency converter settings)

SCPI, Command Device-specific, command or query

Types

Example:

```
CONV:AMOD ON; DESC LAPP
```

Enable the advanced power transfer model based on a linear approximation for all converter ports.

[SENSe<Ch>:]CONVerter:ASSign<Port> '<Serial #>'

Assigns a R&S ZCxxx converter to port no. <Port> (see [Port Assignment](#)).

The adequate converter type and test setup have to be set beforehand using

[\[SENSe<Ch>:\]FREQuency:CONVersion:DEVIce:NAME](#) and

[\[SENSe<Ch>:\]FREQuency:CONVersion:DEVIce:MODE](#), respectively.



This is a *global setting*.

<Ch> Channel number. This suffix is ignored, the command affects all channels.

<Port> NWA port number

'<Serial #>' Serial number of the converter.

For converters of the R&S ZCxxx family this value should be set correctly.

For converters of the ZVA-Zxxx family it should be set to the empty string.

*RST value " (empty string; indicated as *Unknown* in the *Port Assignment* table)

SCPI, Command Device-specific, command or query

Types

Example:

```
CONV:ASS1 '100001'
```

[SENSe<Ch>:]CONVerter:DESCRiption DSET | LAPProx | ELECTronic | NONE

[Deprecated command, superseded by

[SOURce<Ch>:POWer<Port>:CONVerter:TRANsfer:DESCRiption](#)]

Selects the power control method for **all** converter ports. Overwrites the port specific setting of `SOURCE<Ch>:POWER<Pt>:CONVERTer:TRANSfer:DESCription`.



Since FW version 3.40 this is a [global setting](#).

<Ch> Channel number. This suffix is ignored, the command affects all channels.

Parameters See [Port<i> Power Control](#)
 NONE - None or Mechanical Attenuator
 ELECTronic - Electronic Attenuator only
 LAPProx - RF IN power (and Electronic Attenuator) with Linear Approximation
 DSET - RF IN power (and Electronic Attenuator) with Data Set

***RST value** n/a (a *RST does not affect the general frequency converter settings)

SCPI, Command Types Device-specific, command or query

Example: See [\[SENSe<Ch>:\]CONVERTer:AMODEl](#)

[SENSe<Ch>:]CONVERTer:PATH '<directory>'

[Deprecated command, superseded by [SOURCE<Ch>:POWER<Pt>:CONVERTer:TRANSfer:PATH](#)]

Selects the data directory for the *RF In Power (and Electronic Attenuator) with Data Set* power transfer model for all converter ports.



Since FW version 3.40 this is a [global setting](#).

<Ch> Channel number. This suffix is ignored, the command affects all channels.

'<directory>' String parameter to specify an existing directory path.

***RST value** n/a (a *RST does not affect the general frequency converter settings)

SCPI, Command Types Device-specific, command or query

Example: `CONV:AMOD ON; DESC DSET`
 Enable the advanced power transfer model based on a data set for all converter ports.
`CONV:PATH 'C:\Program Files\Rohde&Schwarz\Network Analyzer\FrequencyConverter'`
 Define a directory for calibration files. 'C:\Program Files\Rohde&Schwarz\Network Analyzer\FrequencyConverter' is the factory default setting.

[SENSe<Ch>:]CORREction...

This subsystem controls system error correction and recording of correction data.

[SENSe<Ch>:]CORRection:CBFReq[:STATe] <Boolean>

Forces system error corrections to be performed at the channel base frequency f_b , irrespective of the port frequencies.

<Ch> Channel number

<Boolean> ON | OFF - Enable or disable "Cal and Corr at Base Freq".

***RST value** OFF

SCPI, Command Types Device-specific, command or query.

Example: *RST; SENSe1:CORRection:BCFReq:STATe?

Query the default state of "Cal and Corr at Base Freq". The response is 0.

[SENSe<Ch>:]CORRection:CDATa 'DIRECTIVITY' | 'SRCMATCH' | 'REFLTRACK' | 'LOADMATCH' | 'TRANSTRACK' | 'G11' | ... 'G22' | 'H11' | ... | 'H22', <port1_no>, <port2_no>

Writes or reads system error correction data for a specific channel <Ch>, calibration method ([SENSe<Ch>:]CORRection:COLLect:METHod:DEFine), and port combination <Port1_no>, <Port2_no>. The setting command can be used to transfer user-defined correction data to the analyzer; the query returns the current correction data set. ASCII or block data can be transferred, depending on the selected data transfer format (FORMat[:DATA]).

The sweep must be stopped to transfer calibration data; see program example for [SENSe<Ch>:]CORRection:COLLect:SAVE:SELected:DEFault.



This command affects the active calibration of channel no. <Ch> or the factory calibration (if no channel calibration is active). For the factory calibration, the query form is allowed only (no change of factory calibration data).



For an overview of calibration methods and error terms refer to section [Calibration Types](#).

<Ch> Channel number of the calibrated channel. If unspecified the numeric suffix is set to 1.

Error term parameters String parameters describing the different error terms, depending on the current calibration method; see table below. Each term contains one complex value (real and imaginary part) for each sweep point.

Range [def. unit] The error terms are dimensionless complex numbers. The parameters must be transferred in full length and have the following meaning:

- 'DIRECTIVITY' – Directivity at port <port1_no>
- 'SRCMATCH' – Source match at port <port1_no>
- 'REFLTRACK' – Reflection tracking at port <port1_no>
- 'LOADMATCH' – Load match at <port2_no>
- 'TRANSTRACK' – Transmission tracking between port <port1_no> and <port2_no>
- 'G11' ... 'G22' – G matrix elements, referenced to <port1_no> (irrespective of the values of <port1_no> and <port2_no>)
- 'H11' ... 'H22' – H matrix elements, referenced to <port2_no> (irrespective of the values of <port1_no> and <port2_no>)



G and H Matrices

The 7-term calibration types named Txx (e.g. TOM, TRM, TRL, TNA) are based on a network analyzer with two ports i and j, each equipped with a test receiver and a reference receiver. The system errors are described in terms of two "error two-ports" P_G and P_H :

- The error two-port P_G is assigned to port i of the analyzer. Its transmission matrix G describes how the system errors modify the outgoing and incident waves at port i:
- The error two-port P_H is assigned to port j of the analyzer. Its transmission matrix H describes how the system errors modify the measured incident and outgoing waves at port j:

In the two equations above, a and b denote the waves at the calibrated reference plane i and j (e.g. the input and output of the 2-port DUT). The m waves are the raw measured waves of test port i and j. The subscripts "ref" and "test" refer to the reference and test receivers, respectively.

During the calibration the network analyzer acquires ratios of wave quantities, which leaves one of non-diagonal matrix elements of G or H as a free normalization factor. The network analyzer uses the normalization $H_{21} = 1$.

*RST value

–

The analyzer provides a default calibration corresponding to a test setup which does not introduce any systematic errors; see
[\[SENSe<Ch>:\]CORRection:COLLect:SAVE:SELected:DEFault](#).

<port1_no>

Source port number.

<port2_no>

Load port number. If the error term is not related to the load port, a dummy number can be used; e.g. `CORR:CDAT 'REFLTRACK', 1, 0`

SCPI,
Command
Types

Device-specific, command or query



After a system error correction in one of the sweep types Power, Time, or CW Mode, the query returns two sets of correction data, corresponding to the fixed CW frequency and the CW frequency plus 1 Hz (minus 1 Hz if the CW frequency is equal to the maximum frequency of the analyzer).

Example:

See [\[SENSe<Ch>:\]CORRection:COLLect:SAVE:SELected:DEFault](#).

The different calibration types of the analyzer provide the following error terms:

Calibration type	Parameters in [SENSe<Ch>:]CORRection:COLLect:METHod:DEFine	Available error terms (depending on port numbers)
One-port normalization (reflection)	REFL, RSHort	'REFLTRACK'

Calibration type	Parameters in [SENSe<Ch>:]CORRection:COLLect:METHod:DEFine	Available error terms (depending on port numbers)
using an open or a short standard		
Full one port	FOPort	'DIRECTIVITY', 'SRCMATCH', 'REFLTRACK'
Two-port normalization	FRTRans	'TRANSTRACK'
One path two port	OPTPort	'DIRECTIVITY', 'SRCMATCH', 'REFLTRACK', 'TRANSTRACK'
TOSM	TOSM	'DIRECTIVITY', 'SRCMATCH', 'REFLTRACK', 'LOADMATCH', 'TRANSTRACK'
TOM, TRM, TRL, TNA	TOM TRM TRL TNA	'DIRECTIVITY', 'SRCMATCH', 'REFLTRACK', 'LOADMATCH', 'TRANSTRACK' (for reading and writing) 'G11' ... 'G22' and 'H11', 'H12', 'H22' (for reading only; the 'H21' matrix elements are normalized to 1)

[SENSe<Ch>:]CORRection:CKIT...

The [\[SENSe:\]CORRection:CKIT...](#) commands deal with calibration kits and cal kit data. The calibration kits are distinguished by their names (<CalkitName>), the optional labels (<label>) can be used to carry information about the calibration standard.

In order to handle several identical calibration kits with different serial numbers use the commands of section [\[SENSe<Ch>:\]CORRection:CKIT... with Labels](#).

[SENSe<Ch>:]CORRection:CKIT:CATalog? '<conn_name>'

Returns a list of all cal kits for a given connector type. The kit is identified by its name.



The result is undefined if multiple calibration kits with the same name but different [labels](#) exist.

<Ch>	Channel number. This suffix is ignored because cal kits are channel-independent.
<conn_name>	Name of the connector type. Use SENSe1:CORRection:CONNection:CATalog? to query connector names.
*RST value	—
SCPI, Command Types	Device-specific, query only
Example:	See SENSe<Ch>:CORRection:CONNection:CATalog?

[SENSe<Ch>:]CORRection:CKIT:<conn_type>:SElect '<ckit_name>'

Selects the calibration kit to be used for a ZVR-compatible connector type <conn_type>.

For connector types with arbitrary, user-defined names you can use the command [\[SENSe<Ch>:\]CORRection:CKIT:SElect '<conn_name>', '<ckit_name>'](#).



The result is undefined if multiple calibration kits with the same name but different *labels* exist.

<Ch> Channel number. This suffix is ignored because calibration kits are channel-independent.

<conn_type> Connector type, one of the following identifiers:
 N50, N75: N 50 Ω or N 75 Ω connectors
 PC7, PC35, PC292: PC 7, PC 3.5 or 2.92 mm connectors
 USER<no>: User-defined connectors UserConn1, UserConn2
 SMA: User-defined connector type SMA ...

'<ckit_name>' String parameter containing the *name of a calibration kit* available on the analyzer.

***RST value** – (A *RST does not change the assignment between connector types and calibration kits.)

SCPI, Command Types Device-specific, command or query

Example:

```
MMEM:LOAD:CKIT 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Kits\New_kit.calkit'
```

Load the previously created cal kit file New_kit.calkit from the default cal kit directory.

```
CORR:CKIT:N50:SEL 'New_kit'
```

Assign the imported kit to the N 50 Ω connector type (assuming that the cal kit name stored in New_kit.calkit reads New_kit).



Cal kit naming conventions

Calibration kit names must be entered as string parameters. The string contains the cal kit name used in the *Calibration Kits* dialog; a Ω in the name must be replaced by 'Ohm', e.g.:

- 'NewKit1' denotes the user-defined calibration kit *NewKit1*.
- 'N 50 Ohm Ideal Kit' denotes the *N 50 Ω Ideal Kit*.
- 'ZV-Z21 typical' denotes the cal kit *ZV-Z21 typical*.

**[SENSe<Ch>:]CORRection:CKIT:<conn_type>:<std_type>
 '<Ckit_Name>','<Std_No>','<Min_Freq>','<Max_Freq>','<El_Length>','<Loss>','<C0> |
 <L0>','<C1> | <L1>','<C2> | <L2>','<C3> | <L3>', OPEN | SHORT**

[Deprecated command, replaced by **[SENSe<Ch>:]CORRection:CKIT:<std_type>]**

Defines the parameters of a calibration standard <std_type> for a specified connector type <conn_type>. A particular physical standard can be selected by specifying the name of the calibration kit and its serial number.

It is **not** possible to modify predefined or ideal kits. If the specified cal kit does not exist, it is created with the specified calibration standard.



The result is undefined if multiple calibration kits with the same name but different *labels* exist.

Depending on the standard type, only a subset of the parameters may be used; refer to the table of

standard types.

<Ch>	Channel number. This suffix is ignored because calibration kits are channel-independent.
<conn_type>	Connector type, one of the following identifiers: N50, N75: N 50 Ω or N 75 Ω connectors PC7, PC35, PC292: PC 7, PC 3.5 or 2.92 mm connectors USER<no>: User-defined connectors UserConn1, UserConn2, SMA: User-defined connector type SMA... Note: This command only supports ZVR-compatible connector types. For general definitions use [SENSe<Ch>:]CORRection:CKIT:<std_type> .
<std_type>	Standard type. For reflection standards, the first character denotes the gender, e.g.: FOPEN, MOPEN: Open (f) or Open (m) standard. For transmission standards, the first two characters denotes the genders on both ends, e.g.: FFThrough, MFThrough, MMThrough: Through (ff), Through (mf) or Through (mm) standard. For a complete list of standard types refer to the table of standard types .
Parameter list	String parameters to specify the configured standard ('<Ckit_Name>', '<Std_No>') and numeric parameters defining its properties. See detailed description below.
*RST value	–
SCPI, Command Types	Device-specific, command or query
Example:	<pre>CORR:CKIT:N50:FOPEN 'ZV-Z21',"0,1.8E+010,0.0151,0,0,0.22,-0.22,0.0022</pre> Define the properties of the open (f) standard for the N 50 Ω connector type contained in the ZV-Z21 calibration kit: Assign a valid frequency range of 0 Hz to 18 GHz, an electrical length of 15.1 mm, 0 dB loss and define the polynomial coefficients of the fringing capacitance as 0 fF, 0.22 fF/GHz, $-0.22 \text{ fF}/(\text{GHz})^2$, $0.0022 \text{ fF}/(\text{GHz})^3$.

The parameters in the [\[SENSe<Ch>:\]CORRection:CKIT:<std_type>](#) and [\[SENSe<Ch>:\]CORRection:CKIT:<conn_type>:<std_type>](#) commands have the following meaning:

Parameter	Meaning	Comment/Unit
'<Conn_Name>'	Name of the connector type. Use SENSe1:CORRection:CONNection:CATalog? to query connector names.	String parameter
'<Ckit_Name>'	Name of the calibration kit. Use [SENSe<Ch>:]CORRection:CKIT:CATalog? to query cal kit names.	String parameter
'<Std_No>'	Label (e.g. the serial number) of the standard	String parameter
<Min_Freq>	Min. frequency for which the circuit model is valid	Default unit is Hz
<Max_Freq>	Max. frequency for which the circuit model is valid	Default unit is Hz

Parameter	Meaning	Comment/Unit
<El_Length>	Electrical length (offset parameter) of the standard	Default unit is m
<Loss>	Loss (offset parameter) of the standard	To be specified without unit (implicit unit is dB)
<Z0>	Reference impedance (no unit)	To be specified without unit (implicit unit is Ω)
<C0> <L0>	Polynomial coefficients C_0 or L_0 for the fringing capacitance or residual inductance of the standard (load parameter)	To be specified without unit (implicit unit is fF or pH)
<C1> <L1>	Polynomial coefficients C_1 or L_1 for the fringing capacitance or residual inductance of the standard (load parameter)	To be specified without unit (implicit unit is fF /GHz or pH /GHz)
<C2> <L2>	Polynomial coefficients C_2 or L_2 for the fringing capacitance or residual inductance of the standard (load parameter)	To be specified without unit (implicit unit is fF/GHz ² or pH/GHz ²)
<C3> <L3>	Polynomial coefficients C_3 or L_3 for the fringing capacitance or residual inductance of the standard (load parameter)	To be specified without unit (implicit unit is fF/GHz ³ or pH/GHz ³)
OPEN SHORT MATCH <Resistance>	Modelling as an Open, Short or Match standard or as a Resistance. The load circuit for Open, Short and Match consists of capacitance C which is connected in parallel to an inductance L and a resistance R, both connected in series. OPEN means that R is infinite so that the standard behaves like a capacitor (no inductance, the polynomial coefficients specify C). SHORT means that R is zero so that the standard behaves like an inductance (no capacitance, the polynomial coefficients specify L). MATCH means that the standard behaves like a perfect 50 Ω match.	Character data
, <Port_1>, <Port_2>	Optional port restriction: one port number for one port standards, two port numbers for two port standards	Integer value

The different standard types are defined by the following parameters. Port restrictions are indicated in brackets:

<std_type>	Meaning	Parameters in [SENSe<Ch>:]CORRection:CKIT:<conn_type>:<std_type>
MOPen FOPen MOPen(P1) FOPen(P2) ...	Open (m) or open (f) Open (m or f with port restriction)...	'<Ckit_Name>' ... <C3>[, <Port_1>] complete parameter list with capacitance coefficients, no OPEN SHORT MATCH
MSHort FSHort	Short (m) or short (f)	'<Ckit_Name>' ... <L3>[, <Port_1>] complete parameter list with inductance coefficients, no OPEN SHORT MATCH
OShort MOShort MOSHORT1 MOSHORT2 MOSHORT3 FOShort	Offset short (sexless) or offset short (m) or offset short (f)	'<Ckit_Name>' ... <L3>[, <Port_1>] complete parameter list with inductance coefficients, no OPEN SHORT MATCH

<std_type>	Meaning	Parameters in [SENSe<Ch>:]CORRection:CKIT:<conn_type>:<std_type>
FOSHORT1 FOSHORT2 FOSHORT3 (MOSHort and MOSHORT1 etc. are equivalent)	(for user-defined connector types only)	
MMTCh FMTCh	Match (m) or match (f)	'<Ckit_Name>' ... <Max_Freq>[, <Port_1>] no offset parameters, no load parameters (polynomial coefficients), no OPEN SHORT MATCH
MSMatch FSMATCH	Sliding match (m) or sliding match (f)	'<Ckit_Name>' ... <Max_Freq>[, <Port_1>] no offset parameters, no load parameters (polynomial coefficients), no OPEN SHORT MATCH
MREFlect FRElect	Reflect (m) or reflect (f)	'<Ckit_Name>' ... OPEN SHORT[, <Port_1>] no loss, otherwise complete parameter list
MMTHrough MFTThrough FFTThrough	Through (m - m) or through (m - f) or through (f - f)	'<Ckit_Name>' ... <Loss>[, <Port_1>, <Port_2>] no load parameters (polynomial coefficients), no OPEN SHORT MATCH
MMLine MMLINE1 MFLine MFLINE1 FFLine FFLINE1 MMLine(P2P3) ...	Line1 (m - m) or line1 (m - f) or line1 (f - f) Line1 (m - m, with port restriction)...	'<Ckit_Name>' ... <Loss>[, <Port_1>, <Port_2>] no load parameters (polynomial coefficients), no OPEN SHORT MATCH
MMLINE<No.> MFLINE<No.> FFLINE<No.>	Line<No.> (m - m) or Line<No.> (m - f) or Line<No.> (f - f), with an index <No.> between 1 and 99. Especially for TRL and NIST Multiline TRL calibration.	'<Ckit_Name>' ... <Loss>[, <Port_1>, <Port_2>] no load parameters (polynomial coefficients), no OPEN SHORT MATCH
MMATten MFATten FFATten	Attenuation (m - m) or attenuation (m - f) or attenuation (f - f)	'<Ckit_Name>' ... <Max_Freq>[, <Port_1>, <Port_2>] no offset parameters, no load parameters (polynomial coefficients), no OPEN SHORT MATCH
MMSNetwork MFSNetwork FFSNetwork	Symmetric network (m - m) or symmetric network (m - f) or symmetric network (f - f)	'<Ckit_Name>' ... OPEN SHORT MATCH[, <Port_1>, <Port_2>] no loss, otherwise complete parameter list

[SENSe<Ch>:]CORRection:CKIT:DELeTe '<ckit_name>'

Deletes an imported or user-defined cal kit which is identified by its name. It is **not** possible to delete predefined or ideal kits.



*The result is undefined if multiple calibration kits with the same name but different **labels** exist.*

<Ch>

Channel number. This suffix is ignored because calibration kits are channel-independent.

'<ckit_name>'

String parameter containing an imported or user-defined **calibration kit** available on the analyzer.

*RST value

– (A *RST does not affect calibration kits)

SCPI, Command Types

Device-specific, no query

Example:

```
CORR:CKIT:N50:FOPEN 'NewKit1','',0,1.8E+010,0.0151,0,0,0.22,-0.22,0.0022
```

Create a new cal kit `NewKit1` and assign an open (f) standard for the N 50 Ω connector type with specific properties.

```
CORR:CKIT:DEL 'NewKit1'
```

Delete the previously created kit.

[SENSE<Ch>:]CORRection:CKIT:INSTall '<file_name>'

Loads cal kit data from a specified ZVR cal kit file.

<Ch>

Channel number. This suffix is ignored because calibration kits are channel-independent.

'<file_name>'

String parameter to specify the name and directory of the cal kit file to be loaded.

*Note: The loaded file must be a ZVR-specific cal kit file with the extension *.ck. NWA cal kit files (*.calkit) can be imported using the [MMEMory:LOAD:CKIT](#) command. Agilent cal kit files can be imported manually and converted into *.calkit files.*

***RST value**

—

SCPI, Command Types

Device-specific, no query.

Example:

```
CORR:CKIT:INST 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Kits\ZCAN.ck'
```

Load the previously created ZVR cal kit file `ZCAN.ck` from the default cal kit directory.

```
MMEM:STOR:CKIT 'ZCAN', 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Kits\ZCAN.calkit'
```

Store the imported cal kit data to a NWA cal kit file `ZCAN.calkit` (assuming that the cal kit name stored in `ZCAN.ck` reads `ZCAN`).

**[SENSE<Ch>:]CORRection:CKIT:LABel '<ckit_name>', '<label>'
[SENSE<Ch>:]CORRection:CKIT:LABel? '<ckit_name>'**

Assigns a label to an imported or user-defined calibration kit.



The result is undefined if multiple calibration kits with the same name but different [labels](#) exist.

<Ch>

Channel number. This suffix is ignored because calibration kits are channel-independent.

'<ckit_name>'

String parameter containing an imported or user-defined [calibration kit](#) available on the analyzer.

'<label>'	String parameter containing the label.
*RST value	– (A *RST does not affect calibration kits)
SCPI, Command Types	Device-specific, command or query
Example:	<pre>CORR:CKIT:N50:FOPEN 'NewKit1','',0,1.8E+010,0.0151,0,0,0.22,-0.22,0.0022</pre> Create a new cal kit NewKit1 and assign an open (f) standard for the N 50 Ω connector type with specific properties. <pre>CORR:CKIT:LAB 'NewKit1', 'Test kit created today'</pre> Label the previously created kit. <pre>CORR:CKIT:LAB? 'NewKit1'</pre> Check the label.

[SENSe<Ch>:]CORRection:CKIT:SElect '<conn_type>', '<ckit_name>'

Selects the calibration kit to be used, specifying its connector type and name.

The command is suitable for connector types with arbitrary, user-defined names. For standard connector types you can use the command [SENSe<Ch>:]CORRection:CKIT:<conn_type>:SElect.



*The result is undefined if multiple calibration kits with the same name but different **labels** exist.*

<Ch>	Channel number. This suffix is ignored because calibration kits are channel-independent.
'<conn_type>'	Connector type, e.g. a user-defined connector type (string variable)
'<ckit_name>'	String parameter containing the name of a calibration kit available on the analyzer.
*RST value	– (A *RST does not change the assignment between connector types and calibration kits.)
SCPI, Command Types	Device-specific, command or query (the query requires the first string parameter only)
Example:	<pre>MMEM:LOAD:CKIT 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Kits\New_kit.calkit'</pre> Load the previously created cal kit file New_kit.calkit from the default cal kit directory. <pre>CORR:CKIT:SEL 'N 50 Ohm', 'New_kit'</pre> Assign the imported kit to the N 50 Ω connector type (assuming that the cal kit name stored in New_kit.calkit reads New_kit).

[SENSe<Ch>:]CORRection:CKIT:STANdard:CATalog? '<ckit_name>'

Returns a list of all standards in a given calibration kit.



The result is undefined if multiple calibration kits with the same name but different *labels* exist.

<Ch>	Channel number. This suffix is ignored because cal kits are channel-independent.
'<ckit_name>'	Name of the cal kit. Use SENSe<Ch>:CORRection:CKIT:CATalog? to query cal kit names.
*RST value	–
SCPI, Command Types	Device-specific, query only
Example:	See SENSe<Ch>:CORRection:CONNection:CATalog?

[SENSe<Ch>:]CORRection:CKIT:<std_type>
'<Conn_Name>','<Ckit_Name>','<Std_No>','<Min_Freq>','<Max_Freq>','<El_Length>','<Loss>','<Z0>','<C0>','<C1>','<C2>','<C3>','<L0>','<L1>','<L2>','<L3>[[, OPEN | SHORT | MATCH | <Resistance>], <Port_1>,<Port_2>]

Defines the parameters of a non-ideal 1 port or 2-port calibration standard <std_type>. A particular physical standard can be selected by specifying the name of the calibration kit and its serial number.



The result is undefined if multiple calibration kits with the same name but different *labels* exist.

If the specified cal kit does not exist, it is created with the specified calibration standard.

Depending on the standard type, only a subset of the parameters may be used; refer to the table of [standard types](#).

<Ch>	Channel number. This suffix is ignored because calibration kits are channel-independent.
<std_type>	Standard type. For reflection standards, the first character denotes the gender, e.g.: FOPEN, MOPEN: Open (f) or Open (m) standard. The following reflection standards are supported: MOPen, FOPen, MSHort, FSHort, OSHort, MOShort, FOShort, MMTCh, FFTCh, MREFlect, FREFLect For transmission standards, the first two characters denotes the genders on both ends, e.g.: FFSNetwork, MFSNetwork, MMSNetwork: Symm. network (ff), symm. network (mf) or symm. network (mm) standard. For a complete list of standard types refer to the table of standard types .
Parameter list	String parameters to specify the configured standard ('<Conn_Name>', '<Ckit_Name>', '<Std_No>') and numeric parameters defining its properties. See detailed description . Note: The following transmission standards have only 8 parameters (until <Z0>): MMTHrough, MFTHrough, FFTHrough, MMLine, MFLine, FFLine The following reflection and transmission standards have only 5 parameters (until <Max_Freq>): MSMatch, FSMatch, MMATten, MFATten, FFATten
*RST value	–
SCPI, Command	Device-specific, command or query (see examples below)

Types**Example:**

```
CORR:CKIT:FOP 'N 50 Ohm','Test Kit',...
```

Define the properties of the Open (f) standard for a N 50 Ω connector type in cal kit 'Test Kit'. See also example for

```
[SENSe<Ch>:]CORRection:CKIT:<conn_type>:<std_type>.
```

```
CORR:CKIT:FOP? 'N 50 Ohm'
```

Query the properties of the open (f) standard for a N 50 Ω connector type in the active cal kit.

```
CORR:CKIT:FOP? 'N 50 Ohm','Test Kit'
```

Query the properties of the Open (f) standard for a N 50 Ω connector type in cal kit 'Test Kit'.

[SENSe<Ch>:]CORRection:CKIT... with Labels

The following [SENSe:]CORRection:CKIT... commands identify the calibration kit to be used by a combination of its <CalkitName> and <CalkitLabel>. Typically, the serial number of the calibration kit serves as a calibration kit label. Due to their different labels, the analyzer can handle several calibration kits with identical names.



*If multiple calibration kits with the same name and different labels exist, the behavior of certain legacy [SENSe<Ch>:]CORRection:CKIT commands **without label** is undefined.*

[SENSe<Ch>:]CORRection:CKIT:<conn_type>:LSElect '<ckit_name>', '<ckit_label>'

Selects the calibration kit to be used for a specified connector type <conn_type>. The kit is identified by its name and label.



For connector types with arbitrary, user-defined names and labels you can use the command [SENSe<Ch>:]CORRection:CKIT:LSElect '<conn_name>', '<ckit_name>', <ckit_label>'.

<Ch>	Channel number. This suffix is ignored because calibration kits are channel-independent.
<conn_type>	Connector type, one of the following identifiers: N50, N75: N 50 Ω or N 75 Ω connectors PC7, PC35, PC292: PC 7, PC 3.5 or 2.92 mm connectors USER<no>: User-defined connectors UserConn1, UserConn2 SMA: User-defined connector type SMA ...
'<ckit_name>'	String parameter containing the name of a calibration kit available on the analyzer.
'<ckit_label>'	String parameter containing the label of a calibration kit available on the analyzer, usually the serial number.
*RST value	– (A *RST does not change the assignment between connector types and calibration kits.)
SCPI, Command Types	Device-specific, command or query

Example:

```
MMEM:LOAD:CKIT 'C:\Program Files\Rohde&Schwarz\Network
Analyzer\Calibration\Kits\New_kit (123456).calkit'
```

Load the previously created cal kit file New_kit (123456).calkit from the default cal kit directory.

```
CORR:CKIT:N50:LSEL 'New_kit', '123456'
```

Assign the imported kit to the N 50 Ω connector type (assuming that the cal kit name stored in New_kit (123456).calkit reads New_kit and that its label reads 123456).

[SENSe<Ch>:]CORRection:CKIT:LCATalog? '<conn_name>'

Returns a list of all cal kits and their labels for a given connector type.

<Ch>	Channel number. This suffix is ignored because cal kits are channel-independent.
<conn_name>	Name of the connector type. Use SENSe<Ch>:CORRection:CONNection:CATalog? to query connector names.
*RST value	–
SCPI, Command Types	Device-specific, query only
Example:	See SENSe<Ch>:CORRection:CONNection:CATalog?

[SENSe<Ch>:]CORRection:CKIT:LDELeTe '<ckit_name>', '<ckit_label>'

Deletes an imported or user-defined cal kit which is identified by its cal kit name and label.



It is not possible to modify or store predefined or ideal kits.

<Ch>	Channel number. This suffix is ignored because calibration kits are channel-independent.
'<ckit_name>'	String parameter containing an imported or user-defined calibration kit available on the analyzer.
'<ckit_label>'	String parameter containing the label of an imported or user-defined calibration kit available on the analyzer.
*RST value	– (A *RST does not affect calibration kits)
SCPI, Command Types	Device-specific, no query
Example:	See [SENSe<Ch>:]CORRection:CKIT:LLABel

[SENSe<Ch>:]CORRection:CKIT:LLABel '<ckit_name>', '<ckit_label>',[
'<new_label>'] [SENSe<Ch>:]CORRection:CKIT:LLABel? '<ckit_name>',
'<ckit_label>'

Assigns a calibration kit label to an imported or user-defined calibration kit or renames an existing calibration kit label.

<Ch>	Channel number. This suffix is ignored because calibration kits are channel-independent.
'<ckit_name>'	String parameter containing an imported or user-defined calibration kit available on the analyzer.
'<ckit_label>'	String parameter containing the current label.
'<new_label>'	String parameter containing the new calibration kit label.
*RST value	– (A *RST does not affect calibration kits)
SCPI, Command Types	Device-specific, command or query
Example:	

```
CORR:CKIT:FOP:WLAB 'N 50 Ohm','New Kit 1','Test kit created today',",0,4000000000,0,0,50,99,-2,3,0,22,0,0,0,0,0
```

Create a new cal kit New Kit 1 labeled "Test kit created today" and assign an open (f) standard for the N 50 Ω connector type with specific properties..

```
CORR:CKIT:LLAB 'New Kit 1', 'Test kit created today', '2012-05-25'
```

Change the label of the previously created kit.

```
CORR:CKIT:LLAB? 'New Kit 1', '2012-05-25'
```

Check the label.

```
MMEMory:STORe:CKIT:WLABel 'New Kit 1', '2012-05-25', 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Kits\New Kit 1 (2012-05-25).calkit'
```

Store the data for the labeled cal kit to the cal kit file New Kit 1 (2012-05-25).calkit.

```
CORR:CKIT:LDEL 'New Kit 1', '2012-05-25'
```

Delete the kit from the internal memory.

```
MMEMory:LOAD:CKIT 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Kits\New Kit 1 (2012-05-25).calkit'
```

Re-load the kit.

[SENSe<Ch>:]CORRection:CKIT:LSElect '<conn_type>', '<ckit_name>',
'<ckit_label>'

Selects the calibration kit to be used, specifying its connector type, name, and label.



The command is suitable for connector types with arbitrary, user-defined names. For standard connector types you can use the command

[SENSe<Ch>:]CORRection:CKIT:<conn_type>:LSElect.

<Ch>	Channel number. This suffix is ignored because calibration kits are channel-independent.

'<conn_type>'	Connector type, e.g. a user-defined connector type (string variable)
'<ckit_name>'	String parameter containing the name of a calibration kit available on the analyzer.
'<ckit_label>'	String parameter containing the label of a calibration kit.
*RST value	– (A *RST does not change the assignment between connector types and calibration kits.)
SCPI, Command Types	Device-specific, command or query (the query requires the first string parameter only)
Example:	<pre>MMEMory:LOAD:CKIT 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Kits\New Kit 1 (2012-05-25).calkit'</pre> Load the previously created cal kit file New Kit 1 (2012-05-25).calkit from the default cal kit directory. <pre>CORR:CKIT:LSEL 'N 50 Ohm', 'New_kit', '2012-05-25'</pre> Assign the imported kit to the N 50 Ω connector type (assuming that the cal kit name stored in New Kit 1 (2012-05-25).calkit reads New_kit and its label reads 2012-05-25.

[SENSe<Ch>:]CORRection:CKIT:STANdard:LCATalog? '<ckit_name>', '<ckit_label>'

Returns a list of all standards in a given calibration kit.

<Ch>	Channel number. This suffix is ignored because cal kits are channel-independent.
'<ckit_name>'	Name of the cal kit. Use SENSe<Ch>:CORRection:CKIT:LCATalog? to query cal kit names and labels.
'<ckit_label>'	String parameter containing the label of a calibration kit.
*RST value	–
SCPI, Command Types	Device-specific, query only
Example:	See SENSe<Ch>:CORRection:CONNection:CATalog?

[SENSe<Ch>:]CORRection:CKIT:<std_type>:WLAbel

'<Conn_Name>', '<Ckit_Name>', '<Ckit_label>', '<Std_No>', '<Min_Freq>', '<Max_Freq>', '<El_Length>', '<Loss>', '<Z0>', '<C0>', '<C1>', '<C2>', '<C3>', '<L0>', '<L1>', '<L2>', '<L3>[[, OPEN | SHORt | MATCh | <Resistance>], <Port_1>, <Port_2>]

Defines the parameters of a non-ideal 1 port or 2-port calibration standard <std_type>. A particular physical standard can be selected by specifying the name and label of the calibration kit and the standard's serial number. Depending on the standard type, only a subset of the parameters may be used; refer to the table of [standard types](#).



If the specified cal kit does not exist, it is created with the specified calibration standard.

<Ch>	Channel number. This suffix is ignored because calibration kits are channel-independent.
<std_type>	Standard type. For reflection standards, the first character denotes the gender, e.g.: FOPEN, MOPEN: Open (f) or Open (m) standard. The following reflection standards are supported: MOPen, FOPen, MSHort, FSHort, OSHort, MOShort, FOShort, MMTCh, FFTCh, MREFlect, FREFlect For transmission standards, the first two characters denotes the genders on both ends, e.g.: FFSNetwork, MFSNetwork, MMSNetwork: Symm. network (ff), symm. network (mf) or symm. network (mm) standard. For a complete list of standard types refer to the table of standard types.
Parameter list	String parameters to specify the configured standard ('<Conn_Name>', '<Ckit_Name>', '<Ckit_label>', '<Std_No>') and numeric parameters defining its properties. See detailed description. Note: The following transmission standards have only 8 parameters (until <Z0>): MMTHrough, MFTHrough, FFTHrough, MMLine, MFLine, FFLine The following reflection and transmission standards have only 5 parameters (until <Max_Freq>): MSMatch, FSMatch, MMATten, MFATten, FFATten
*RST value	–
SCPI, Command Types	Device-specific, command or query (see examples below)
Example:	<pre>CORR:CKIT:FOP:WLAB 'N 50 Ohm','New Kit 1','123456', "0,4000000000,0,0,50,99,-2.3,0.22,0,0,0,0,0</pre> Define the properties of the Open (f) standard for a N 50 Ω connector type in the calibration kit New Kit 1 labeled 123456. <pre>CORR:CKIT:FOP? 'N 50 Ohm','New Kit 1','123456'</pre> Query the properties of the open (f) standard for a N 50 Ω connector type in the active cal kit. <pre>CORR:CKIT:FOP? 'N 50 Ohm','Test Kit'</pre> Query the properties of the Open (f) standard for a N 50 Ω connector type in the calibration kit.

[SENSe<Ch>:]CORRection:COLlect...

This subsystem controls the system error correction.

[SENSe<Ch>:]CORRection:COLLect[:ACQuire] THROugh | OPEN1 | OPEN2 | OPEN12 | SHORT1 | SHORT2 | SHORT12 | MATCH1 | MATCH2 | MATCH12 | NET | ATT | IMATCH12 | REFL1 | REFL2 | SLIDE1 | SLIDE2 | SLIDE12 | LINE1 | LINE2 | LINE3 | M1O2 | O1M2 | M1S2 | S1M2 | OSHORT1 | OSHORT11 | OSHORT12 | OSHORT13 | OSHORT2 | OSHORT21 | OSHORT22 | OSHORT23 | UTHROugh | ISOLation [, <Dispersion>, AUTO | <delay | phase>]

[Deprecated command]

Starts a calibration measurement in order to acquire measurement data for the selected standards. The standards are reflection or transmission standards and must be connected to port 1 or 2 of the analyzer.



Use the generalized command [SENSe<Ch>:]CORRection:COLLect[:ACQuire]:SElected to obtain measurement data at arbitrary analyzer ports.

<Ch>	Channel number
THROugh ... UTHROugh	Standard types: <i>Through (between port 1 and 2), Open, Short, Match (MATCH12 and IMATCH12 are synonymous), Symmetric Network (NET), Attenuation (ATT), Reflect, Sliding Match (SLIDE), Line1 (LINE1 and LINE are synonymous), Line2 and Line3 (esp. for TRL calibration), Match/Open (M1O2, O1M2), Match/Short (M1S2, S1M2), Offset Short (OSHORT), Unknown Through (UTHROugh), Isolation (optional, between port 1 and 2).</i> The numbers in the parameter names denote the analyzer ports. Two numbers 12 mean that two separate calibrations are performed at ports 1 and 2. For Offset Short standards, the first number denotes the port (1 or 2), the second number denotes the number of the standard (1 to 3).
*RST value	ON
<Dispersion>	Optional status parameter for UTHROugh standard: OFF – Unknown through standard is non-dispersive ON – Unknown through standard is dispersive
*RST value	OFF
AUTO <delay phase>	Optional entry of delay time or phase for UTHROugh standard: AUTO – The analyzer determines the delay time or phase during the calibration sweep <delay or phase> – entry of the delay time in ps (for non-dispersive standards) or of an estimate of the phase at the start frequency of the sweep in deg (for dispersive standards). See also background information for [SENSe<Ch>:]CORRection:COLLect[:ACQuire]:SElected.
*RST value	AUTO
SCPI, Command Types	Confirmed (with device-specific standards), no query
Example:	See [SENSe<Ch>:]CORRection:COLLect:SAVE.

[SENSe<Ch>:]CORRection:COLLect[:ACQuire]:RSAVe <Boolean>

Activates or deactivates the calibration mode where the raw measurement data of the standards is stored after the calibration is completed. The setting is valid for the current calibration, where it overwrites the

global setting (`[SENSe<Ch>:]CORRection:COLLect[:ACQuire]:RSAVe:DEFault`). A new calibration deletes the calibration data acquired in previous calibrations.

<Ch> Channel number

<Boolean> ON | OFF - Keep measurement data on or off.

*RST value no change

SCPI, Command Types Device-specific, command or query

Example:

```
CORR:COLL:RSAV:DEF ON
```

Generally keep the raw measurement data of the standards after the calibration is completed.

```
CORR:COLL:METH:DEF 'Test',RSHort,1
```

Select a one-port normalization at port 1 with a short standard as calibration type.

```
CORR:COLL:SEL SHOR,1
```

Measure a short standard connected to port 1 and store the raw measurement results of this standard.

```
CORR:COLL:RSAV OFF
```

To save disk space, delete the current raw calibration data after the calibration is completed.

```
CORR:COLL:SAVE:SEL
```

Calculate the system error correction data and apply it to the active channel.

[SENSe<Ch>:]CORRection:COLLect[:ACQuire]:RSAVe:DEFault <Boolean>

Activates or deactivates the calibration mode where the raw measurement data of the standards is stored after the calibration is completed. The setting remains valid for all subsequent calibrations until it is changed explicitly. A new calibration deletes the calibration data acquired in previous calibrations.

<Ch> Channel number

<Boolean> ON | OFF - Keep measurement data on or off.

*RST value OFF

SCPI, Command Types Device-specific, command or query

Example:

```
See [SENSe<Ch>:]CORRection:COLLect[:ACQuire]:RSAVe.
```

[SENSe<Ch>:]CORRection:COLLect[:ACQuire]:SELEcted THROugh | OPEN | SHORt | MATCH | NET | ATT | REFL | SLIDe | LINE | LINE1 | LINE2 | LINE3 | LINEN, <index> | OSHort | OSHORT1 | OSHORT2 | OSHORT3 | UTHROugh | ISOLation, <port_no>, <port_no> [, <Dispersion>, AUTO | <delay | phase>]

Starts a calibration measurement in order to acquire measurement data for the selected standards. The standards are reflection or transmission standards and can be connected to arbitrary analyzer ports.



For successful execution of a subsequent `SENS:CORR:COLL:SAVE:SEL`, complete measurement data sets must be available for *all selected calibrations*. See the description of `[SENSe<Ch>:]CORRection:COLLect:METHod:DEFine` for background information.

<Ch>	Channel number
THROUGH ... ISOLation	Standard types: <i>Through, Open, Short, Match, Symmetric Network (NET), Attenuation (ATT), Reflect, Sliding Match (SLIDe), Line l</i> ($1 \leq l \leq 99$), <i>Offset Short 1 to 3 (OSHort), Unknown Through, Isolation</i> . LINE and LINE1 are equivalent. LINE<I> and LINEN,I are equivalent for I=1,2,3.
<port_no>	Port numbers of the analyzer. For a transmission standard (through, line, attenuation, symmetric network) the input and output port numbers must be specified, for reflection standards, only one port number is required.
*RST value	–
<Dispersion>	Optional status parameter for UTHROUGH standard: OFF – Unknown through standard is non-dispersive ON – Unknown through standard is dispersive
*RST value	OFF
AUTO <delay phase>	Optional entry of delay time or phase for UTHROUGH standard: AUTO – The analyzer determines the delay time or phase during the calibration sweep <delay or phase> – entry of the delay time in ps (for non-dispersive standards) or of the phase at the start frequency of the sweep in deg (for dispersive standards). If an estimate of the start phase is entered, the analyzer uses the calculated value which is closest to the estimate.
	Automatic determination of the phase The UOSM algorithm provides the transmission factor of the unknown through standard up to an ambiguous sign. This yields the two alternative phase values displayed in the calibration wizard; see Unknown Through Standard. In remote control, the analyzer performs a plausibility check in order to determine the correct phase. No manual selection is necessary. The check starts at the first sweep point, using the transmission factor with negative phase. The analyzer measures the phase at the subsequent sweep points, assuming that the phase difference between any two consecutive points is less than 90 deg. From these phase values, the analyzer calculates a linear extrapolation and derives an estimate for the DC phase limit. If this DC phase is in the vicinity of ... –180 deg, +180 deg, ... then the transmission factor with negative phase is adopted. If the DC phase is in the vicinity of ... 0 deg, +360 deg, ... then the transmission factor with inverted sign (corresponding to a 180 deg phase shift) is adopted.
*RST value	AUTO
SCPI, Command Types	Device-specific, no query
Example:	See <code>[SENSe<Ch>:]CORRection:COLLect:SAVE:SElcted.</code>

[SENSe<Ch>:]CORRection:COLLect:AUTO '<file_name>',<port_no>{,<port_no>}

Initiates a one-port, two-port, three-port or four-port [automatic calibration](#) at arbitrary analyzer and cal unit ports.



If the test setup contains a high attenuation the analyzer may fail to detect the cal unit ports connected to each of its ports. In this case use the extended command

[\[SENSe<Ch>:\]CORRection:COLLect:AUTO:PORTs](#). Use

[\[SENSe<Ch>:\]CORRection:COLLect:AUTO:TYPE](#) if you want to specify a particular calibration type for the automatic calibration. Use [\[SENSe<Ch>:\]CORRection:COLLect:AUTO:CONFigure](#) to prepare an calibration with multiple port assignments.

If several calibration units are connected, use [SYSTem:COMMunicate:RDEvice:AKAL:ADDRes](#) to select a unit for the calibration.

<Ch> Channel number

'<file_name>' Name and (possibly) directory of the characterization (cal kit file) to be used for the automatic calibration (string parameter):

- If nothing is specified (empty string ' '), the factory cal kit file stored in the active calibration unit is used.
- A NWA cal kit file name *.calkit without path denotes a specific cal kit file stored in the active calibration unit.
- A NWA cal kit file name without path but prefixed with **SD:** refers to a specific cal kit file stored on the SD card inserted at the active calibration unit.
- A NWA cal kit file name *.calkit with path denotes a specific cal kit file stored in an arbitrary directory.

<port_no> Port numbers of the analyzer. For an n-port automatic calibration (n = 1 to 4), n arbitrary (not necessarily consecutive) port numbers must be specified. The analyzer automatically detects the calibration unit ports connected to each analyzer port.

***RST value** –

SCPI, Command Types Device-specific, no query

Example: `CORR:COLL:AUTO ", 1, 2, 4`

Perform an automatic 3-port calibration at test ports 1, 2, and 4 using the calibration unit's default calibration kit file and arbitrary test ports of the cal unit.

[SENSe<Ch>:]CORRection:COLLect:AUTO:ASSignment<Asg>:ACQuire

Initiates an [automatic calibration](#) for a previously defined port assignment numbered <Asg>.



A complete, valid set of port assignments must be defined before you can initiate a calibration; see program example.

<Ch> Channel number

<Asg> Current number of the port assignment.

*RST value n/a

SCPI, Command Types Device-specific, no query

Example:

See

[\[SENSe<Ch>:\]CORRection:COLLect:AUTO:ASSignment<Asg>:DEFine](#)

[SENSe<Ch>:]CORRection:COLLect:AUTO:ASSignment<Asg>:DEFine <analyzer_port_no>,<cal_unit_port_no>{,<analyzer_port_no>,<cal_unit_port_no>}

Defines a port assignment numbered <Asg>. This command is particularly relevant for multiple port assignments.

<Ch> Channel number

<Asg> Current number of the port assignment

<analyzer_port_no> Port numbers of the analyzer. For an n-port automatic calibration (n = 1 to 4), n arbitrary (not necessarily consecutive) port numbers must be specified.

<cal_unit_port_no> Port numbers of the cal unit. The rules for valid port assignments depend on the calibration type selected via [\[SENSe<Ch>:\]CORRection:COLLect:AUTO:CONFigure](#); see section [Using Multiple Port Assignments](#). Only port combinations with assigned cal unit ports must be specified; see example.

*RST value —

SCPI, Command Types Device-specific, command or query

Example:

Suppose that a 2-port calibration unit with a factory characterization is connected to a four-port analyzer.

```
CORR:COLL:AUTO:CONFigure FNPort, ''
```

Select the factory cal kit file (empty string) and a full n-port (i.e. 4-port) calibration.

```
CORR:COLL:AUTO:ASSignment1:DEFine 1, 1, 2, 2
CORR:COLL:AUTO:ASSignment2:DEFine 2, 2, 3, 1
CORR:COLL:AUTO:ASSignment3:DEFine 3, 1, 4, 2
```

Define three port assignments, corresponding to the following table in the *Calibration Settings* dialog.

Assign- ment #	ZVT8 Port #	1	2	3	4
	Test Port Conn	PC 3.5 (f)	PC 3.5 (f)	PC 3.5 (f)	PC 3.5 (f)
1	Cal Unit Port #	1	2	---	---
2	Cal Unit Port #	---	2	1	---
3	Cal Unit Port #	---	---	1	2

```
CORR:COLL:AUTO:ASSignment1:DEFine?
```

Query the first port assignment. The response is 1, 1, 2, 2.

--> Connect the calibration unit between port 1 and 2 of the analyzer.

```
CORR:COLL:AUTO:ASSignment1:ACQuire
```

Acquire the calibration data for the first port assignment.

--> Disconnect the analyzer port 1, connect port 3 instead.

```
CORR:COLL:AUTO:ASSignment2:ACQuire
```

Acquire the calibration data for the second port assignment.

--> Disconnect the analyzer port 2, connect port 4 instead.

```
CORR:COLL:AUTO:ASSignment3:ACQuire
```

Acquire the calibration data for the third port assignment.

```
CORR:COLL:AUTO:SAVE
```

Calculate the error terms from all three calibrations, store them, and apply the calibration to the active channel.

```
CORR:COLL:AUTO:ASSignment:DELeTe:ALL
```

Delete all port assignments.

[SENSe<Ch>:]CORRection:COLLect:AUTO:ASSignment<Asg>:DELeTe:ALL

Deletes all port assignments.

<Ch>	Channel number
<Asg>	Current number of the port assignment. This suffix is ignored; the command deletes all assignments.
*RST value	n/a
SCPI, Command Types	Device-specific, no query
Example:	

See [SENSe<Ch>:]CORRection:COLLect:AUTO:ASSignment<Asg>:DEFine

[SENSe<Ch>:]CORRection:COLLect:AUTO:CKIT '<file_name>',[<characterizationMethod>]

Generates a cal kit file with the specified name containing the cal kit data of the active calibration unit (SYSTem:COMMunicate:RDEvice:AKAL:ADDReSS). The cal kit file can be stored in the calibration unit or written to a directory on the analyzer.

The optional <characterizationMethod> defines the calibration types to be supported with this characterization (implicitly: the standards to be included in the characterization).



Note that this command assumes the "canonical" assignment of cal unit ports and physical VNA ports: VNA port 1 assigned to cal unit port 1, VNA port 2 assigned to cal unit port 2 etc. The command [SENSe:]CORRection:COLLect:AUTO:CKIT:PORTs allows for flexible port assignments.

<Ch>	Channel number (ignored)
'<file_name>'	Name and (possibly) directory of the created characterization / cal kit file (string parameter, extension *.calkit): - If no path and directory is specified, the file is stored in the calibration unit (see also [SENSe<Ch>:]CORRection:COLLect:AUTO). The factory calibration data on the unit is not overwritten. If the file name is prefixed by SD:, the file is saved to the SD card inserted at the calibration unit (if available/accessible). - If a path and directory is specified, the file is stored in the directory on the analyzer's hard disk. The default directory (MMEMoRY:CDIRectory) is not used.
<characterizationMethod>	The calibration types that shall be supported with this characterization: FOPort – Full One Port (one port standards only) FNPport – Full N Port (one and two port standards) DEFAult [or omitted] – Default characterization method of the active cal unit (property [CAL_PROCEEDURE] > ExtCalProc set in the calu's config.ini)
*RST value	–
SCPI, Command Types	Device-specific, no query
Example:	<pre>CORR:COLL:AUTO:CKIT 'AutoCalChar.calkit'</pre> Generate a cal kit file AutoCalChar.calkit for the active calibration unit (supporting the CalUnit's default calibration procedure) and store it internally.

[SENSe<Ch>:]CORRection:COLLect:AUTO:CKIT:PORTs

**'<file_name>','<characterizationMethod>,'
<VNA_port_1>,<CalU_port_1>,<VNA_port_2>,<CalU_port_2>...**

Generates a cal kit file with the specified name containing the cal kit data of the active calibration unit ([SYSTem:COMMunicate:RDEvice:AKAL:ADDReSS](#)). The cal kit file can be stored in the calibration unit or written to a directory on the analyzer.

The **<characterizationMethod>** defines the calibration types to be supported with this characterization (implicitly: the standards to be included in the characterization). The port pairs **<VNA_port_i>,<CalU_port_i>** specify the current port connections between VNA and CalU.

Similar logic as [\[SENSe:\]CORRection:COLLect:AUTO:CKIT](#), but with flexible port assignment.

<Ch>	Channel number (ignored)
'<file_name>'	Name and (possibly) directory of the created characterization / cal kit file (string parameter, extension *.calkit): If no path and directory is specified, the file is stored in the calibration unit (see also [SENSe<Ch>:]CORRection:COLLect:AUTO). The

factory calibration data on the unit is not overwritten. If the file name is prefixed by **SD :**, the file is saved to the SD card inserted at the calibration unit (if available/accessible).

- If a path and directory is specified, the file is stored in the directory on the analyzer's hard disk.

The default directory (**MMEMory:CDIRectory**) is not used.

<characterizationMethod>

The calibration types that shall be supported with this characterization:

FOPort – Full One Port (one port standards only)

FNPort – Full N Port (one and two port standards)

Default] – Default characterization method of the active cal unit (property [CAL_PROCEDURE] > ExtCalProc set in the calu's config.ini)

<VNA_port_i>,<CalU_port_i>

Port pair i

*RST value

–

SCPI, Command Types

Device-specific, no query

Example:

```
CORR:COLL:AUTO:CKIT:PORTs 'AutoCalChar.calkit',FNPort,1,1,2,2
```

Generate a cal kit file AutoCalChar.calkit for the active calibration unit and store it internally.

[SENSe<Ch>:]CORRection:COLLect:AUTO:CONFigure <cal_type>, '<file_name>'

Selects a calibration type and a cal unit characterization (cal kit file) for an automatic calibration with multiple port assignments.

<Ch> Channel number

<cal_type>

FNPort – Full n-Port calibration

FOPort – Full One Port calibration

OPTPort – One Path Two Port calibration

The other calibration types require a single port assignment; use

[SENSe<Ch>:]CORRection:COLLect:AUTO:TYPE to perform the calibration.

*RST value

FNPort

<file_name>

Name and (possibly) directory of the characterization (cal kit file) to be used for the automatic calibration (string parameter):

- If nothing is specified (empty string ' '), the factory cal kit file stored in the active calibration unit is used.
- A NWA cal kit file name *.calkit without path denotes a specific cal kit file stored in the active calibration unit.
- A NWA cal kit file name without path but prefixed with **SD :** refers to a specific cal kit file stored on the SD card inserted at the active calibration unit.
- A NWA cal kit file name *.calkit with path denotes a specific cal kit file stored in an arbitrary directory.

*RST value ' ' (empty string, factory calibration)

SCPI, Command Types Device-specific, command or query

Example:

See `[SENSe<Ch>:]CORRection:COLLect:AUTO:ASSignment<Asg>:DEFine`

`[SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs`

`'<file_name>','<analyzer_port_no>,<cal_unit_port_no>{,<analyzer_port_no>,<cal_unit_port_no>}'`

Selects and initiates a one-port, two-port, three-port or four-port [automatic calibration](#) at arbitrary analyzer and calibration unit ports.



This command is necessary if the analyzer fails to detect the cal unit ports connected to each of its ports (e.g. because of a high attenuation in the test setup). If auto-detection works you can use the simpler command `[SENSe<Ch>:]CORRection:COLLect:AUTO`. Use `[SENSe<Ch>:]CORRection:COLLect:AUTO:CONFigure` to prepare an calibration with multiple port assignments.

<Ch>

Channel number

'<file_name>'

Name and (possibly) directory of the characterization (cal kit file) to be used for the automatic calibration (string parameter):

- If nothing is specified (empty string ' '), the factory cal kit file stored in the active calibration unit is used.
- A NWA cal kit file name *.calkit without path denotes a specific cal kit file stored in the active calibration unit.
- A NWA cal kit file name without path but prefixed with **SD**: refers to a specific cal kit file stored on the SD card inserted at the active calibration unit.
- A NWA cal kit file name *.calkit with path denotes a specific cal kit file stored in an arbitrary directory.

<analyzer_port_no>

Port numbers of the analyzer. For an n-port automatic calibration (n = 1 to 4), n arbitrary (not necessarily consecutive) port numbers must be specified.

<cal_unit_port_no>

Port numbers of the cal unit. For an n-port automatic calibration (n = 1 to 4), n arbitrary (not necessarily consecutive) port numbers must be specified. It is possible to combine arbitrary (not necessarily matching) pairs of analyzer and cal unit ports.

*RST value

—

SCPI, Command Types

Device-specific, no query

Example:

`CORR:COLL:AUTO:PORT " , 1, 2, 2, 4, 4, 1`

Perform an automatic 3-port calibration at the analyzer test ports 1, 2, and 4 using the calibration unit's default calibration kit file and ports 2, 4, and 1 of the cal unit.

[SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs:CONNection?

Returns the assignment between the network analyzer ports and the ports of the connected [automatic calibration](#) unit.

<Ch> Channel number (ignored)

***RST value** –

**SCPI,
Command
Types** Device-specific, query only

Example: CORR:COLL:AUTO:PORT ", 1, 2, 2, 4, 4, 1

Perform an automatic 3-port calibration at the analyzer test ports 1, 2, and 4 using the calibration unit's default calibration kit file and ports 2, 4, and 1 of the cal unit.

CORR:COLL:AUTO:PORT:CONN?

Query the actual port assignment. If the cal unit is properly connected according to the previous command, the response is *1,2,2,4,3,0,4,1*. A zero means that the corresponding analyzer port is not connected to any port of the calibration unit.

[SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs:TYPE <cal_type>, <'file_name'>, <analyzer_port_no>, <cal_unit_port_no> {,<analyzer_port_no>, <cal_unit_port_no>}

Selects and initiates a one-port, two-port, three-port or four-port [automatic calibration](#) at arbitrary analyzer and calibration unit ports.



This command is necessary if the analyzer fails to detect the cal unit ports connected to each of its ports (e.g. because of a high attenuation in the test setup). If auto-detection works you can use the simpler command [\[SENSe<Ch>:\]CORRection:COLLect:AUTO:TYPE](#). Use [\[SENSe<Ch>:\]CORRection:COLLect:AUTO:CONFIgure](#) to prepare an calibration with multiple port assignments.

<Ch> Channel number

<cal_type> FNPort – Full n-Port calibration
FOPort – Full One Port calibration
SFTPort – Separate Full Two-Port calibration
OPTPort – One Path Two Port calibration
FRTRans – Transmission normalization, bidirectional
FTRans – Transmission normalization, forward
RTRans – Transmission normalization, reverse

<'file_name'> Name and (possibly) directory of the characterization (cal kit file) to be used for the automatic calibration (string parameter):

- If nothing is specified (empty string ' '), the factory cal kit file stored in the active calibration unit is used.
- A NWA cal kit file name *.calkit without path denotes a specific cal kit file stored in the active calibration unit.
- A NWA cal kit file name without path but prefixed with **SD**: refers to a specific cal kit file stored on the SD card inserted at the active

calibration unit. A NWA cal kit file name *.calkit with path denotes a specific cal kit file stored in an arbitrary directory.

<analyzer_port_no> Port numbers of the analyzer. For an n-port automatic calibration (n = 1 to 4), n arbitrary (not necessarily consecutive) port numbers must be specified. For a one path two port calibration (OPTPort), the first port no. denotes the node port (fully calibrated port). The transmission normalizations are two-port calibrations.

<cal_unit_port_no> Port numbers of the cal unit. For an n-port automatic calibration (n = 1 to 4), n arbitrary (not necessarily consecutive) port numbers must be specified. It is possible to combine arbitrary (not necessarily matching) pairs of analyzer and cal unit ports.

*RST value –

SCPI, Command Types Device-specific, no query

Example: CORR:COLL:AUTO:PORT FNPort, ", 1, 2, 2, 4, 4, 1

Perform an automatic full 3-port calibration at the analyzer test ports 1, 2, and 4 using the calibration unit's default calibration kit file and ports 2, 4, and 1 of the cal unit.

[SENSe<Ch>:]CORRection:COLLect:AUTO:RPGRoup <Boolean>

Retain port groups during parser calibration with calibration Unit, using one of the commands

- SENSe<Ch>:CORRection:COLLect:AUTO
- SENSe<Ch>:CORRection:COLLect:AUTO:TYPE
- SENSe<Ch>:CORRection:COLLect:AUTO:PORTs
- SENSe<Ch>:CORRection:COLLect:AUTO:PORTs:TYPE

This flag has no effect for calibration types "One Path Two Port" (OPTPort) and "Separate Full Two-Port" (SFTPort) or if calibration data are acquired using multiple port assignments (see [SENSe:CORRection:COLLect:AUTO:ASSignment:ACQUire](#)).

The functionality is identical to the *Retain Port Groups* checkbox in the [Calibration Settings](#) dialog. However, parser and GUI are not synchronized, i.e. a modification in the GUI does not affect the parser setting and vice versa.

<Ch> Channel number – ignored (global setting)

<Boolean> ON | OFF
 OFF: Port groups are resolved and a single system error correction for all selected ports is created during calibration
 ON: For every port group a separate system error correction is created, which is particularly useful to calibrate port groups with frequency offset.

*RST value OFF

SCPI, Command Types Device-specific, command or query

Example: -/-

[SENSe<Ch>:]CORRection:COLLect:AUTO:SAVE

Calculates the error terms, based on the previously acquired calibration sweeps for multiple port assignments, saves the data and applies the calibration to the active channel <Ch>.



A complete, valid set of port assignments must have been measured ([SENSe<Ch>:]CORRection:COLLect:AUTO:ASSignment<Asg>:ACquire) before the analyzer can calculate the error terms; see program example.

<Ch> Channel number

***RST value** n/a

SCPI, Command Types Device-specific, no query

Example:

See

[SENSe<Ch>:]CORRection:COLLect:AUTO:ASSignment<Asg>:DEFine

[SENSe<Ch>:]CORRection:COLLect:AUTO:TYPE <cal_type>, '<file_name>',<port_no>{,<port_no>}

Initiates a one-port, two-port, three-port or four-port **automatic calibration** at arbitrary analyzer and cal unit ports. This command also selects the calibration type.



If the test setup contains a high attenuation the analyzer may fail to detect the cal unit ports connected to each of its ports. In this case use the extended command

[SENSe<Ch>:]CORRection:COLLect:AUTO:PORTs:TYPE.

If several calibration units are connected, use **SYSTEM:COMMunicate:RDEvice:AKAL:ADDRESS** to select a unit for the calibration.

<Ch> Channel number

<cal_type> FNPort – Full n-Port calibration
FOPort – Full One Port calibration
SFTPort – Separate Full Two-Port calibration
OPTPort – One Path Two Port calibration
FRTRans – Transmission normalization, bidirectional
FTRans – Transmission normalization, forward
RTRans – Transmission normalization, reverse

'<file_name>' Name and (possibly) directory of the characterization (cal kit file) to be used for the automatic calibration (string parameter):

- If nothing is specified (empty string ' '), the factory cal kit file stored in the active calibration unit is used.
- A NWA cal kit file name *.calkit without path denotes a specific cal kit file stored in the active calibration unit.
- A NWA cal kit file name without path but prefixed with **SD:** refers to a specific cal kit file stored on the SD card inserted at the active calibration unit.

- A NWA cal kit file name *.calkit with path denotes a specific cal kit file stored in an arbitrary directory.

<port_no> Port numbers of the analyzer. For an n-port automatic calibration (n = 1 to 4), n arbitrary (not necessarily consecutive) port numbers must be specified. The analyzer automatically detects the calibration unit ports connected to each analyzer port. For a one path two port calibration (OPTPort), the first port no. denotes the node port (fully calibrated port). The transmission normalizations are two-port calibrations.

***RST value** –

SCPI, Command Types Device-specific, no query

Example: CORR:COLL:AUTO:TYPE FNPort, ", 1, 2, 4

Perform an automatic full 3-port calibration at test ports 1, 2, and 4 using the calibration unit's default calibration kit file and arbitrary test ports of the cal unit.

[SENSE<Ch>:]CORREction:COLLect:AUTO:VMIXer:ACQuire BASE | MIXer [, <Dispersion>, AUTO | <delay | phase>]

This command allows the automatic **automatic vector mixer calibration** using a calibration unit. It is only available in Vector Mixer Mode (SENSE:FREQuency:CONVersion VMIXer).



To prevent the LO power from being set to -10 dB during calibration, deactivate Automatic Power Reduction for Calibration Unit (SYSTEM:COMMunicate:RDEvice:AKAL:PREduction[:STATe] OFF) and ensure an input power below -10 dBm at the cal unit ports by other means.

The first part of the calibration (acquisition of one-port correction data using the calibration unit) is performed using :SENSE<Ch>:CORRECTION:COLLECT:AUTO:VMIXer:ACQuire BASE. Like in manual operation, the assignment between analyzer and calibration unit ports must be 1:1, i.e. analyzer ports 1 and 2 must be connected to calibration unit ports 1 and 2, respectively.

After connecting the reciprocal calibration mixer, the second part (acquisition of 2-port correction data) is performed using :SENSE<Ch>:CORRECTION:COLLECT:AUTO:VMIXer:ACQuire MIXer [, <Dispersion>, AUTO | <delay | phase>].

Finally, to apply the resulting error terms to the related channel, use the :SENSE<Ch>:CORRECTION:COLLECT:AUTO:SAVE command. Keep the USB connection to the calibration unit alive until then!



1. The cal sweeps (the first and second part of the calibration) can be performed in any order.
2. As part of the calibration sequence a temporary channel is created, which must not be modified by any means. This channel is deleted when the SAVE command is called, so in order to finish the calibration procedure (complete or incomplete) **always use the SAVE command**
3. Mixed operation GUI|remote is not supported
4. If several calibration units are connected via USB, use SYSTEM:COMMunicate:RDEvice:AKAL:ADDRESS to select a particular one for the calibration

<Ch>	Channel number
BASE MIXer	BASE – One-port calibration with calibration unit MIXer - Mixer calibration
<Dispersion>	boolean Optional status parameter of the mixer: • If FALSE (or omitted) the mixer is non-dispersive • If TRUE the mixer is dispersive
AUTO <delay phase>	The missing mixer parameter can either be calculated automatically (AUTO) or specified by the user (<delay phase>) If not set to AUTO, the parameter is interpreted as • delay(in picoseconds) if <Dispersion> is FALSE • phase (in degrees) if <Dispersion> is TRUE
*RST value	–
SCPI, Command Types	Device-specific, no query
Example:	CORR:COLL:AUTO:VMIX:ACQ BASE CORR:COLL:AUTO:VMIX:ACQ MIX CORR:COLL:AUTO:SAVE
	or equivalently
	CORR:COLL:AUTO:VMIX:ACQ MIX CORR:COLL:AUTO:VMIX:ACQ BASE CORR:COLL:AUTO:SAVE

[SENSe<Ch>:]CORRection:COLLect:CONNection<port_no> N50FEMALE | N50MALE | N75FEMALE | N75MALE | PC7 | PC35FEMALE | PC35MALE | PC292FEMALE | PC292MALE | PC24FEMALE | PC24MALE | PC185FEMALE | PC185MALE | PC1FEMALE | PC1MALE

Additional parameters (): UFEMALE1 | UMALE1 | UFEMALE2 | UMALE2 | SMAFEMALE | SMALE

Selects a connector type at a specified port <port_no> and its gender.



Use [SENSe<Ch>:]CORRection:COLLect:SCONNection<port_no> to select an arbitrary connector type using a string variable.

<Ch>	Channel number
<port_no>	Port number of the analyzer. Note: If the analyzer is set to use the same connectors at all ports ([SENSe<Ch>:]CORRection:COLLect:CONNection<port_no>:PORTs ALL), then a change of a connector type is valid for all ports. The gender of the connectors can still be different.

Parameters	Connector type and gender of the connectors (omitted for query). PC1MALE denotes a 1.0 mm (m) connector, PC185MALE a 1.85 mm (m) connector and so forth. UFEMALE1 and UMALE1 denote the user-defined connector type <i>UserConn1</i> , UFEMALE2 and UMALE2 denote the user-defined connector type <i>UserConn2</i> . SMAFEMALE and SMAMALE denote the user-defined connector type <i>SMA</i> . The user-defined connector types must be defined before being addressed by [SENSe<Ch>:]CORRection:COLLect:CONNection<port_no>.
*RST value	N50FEMALE for all ports.
SCPI, Command Types	Device-specific, command or query.
Example:	<pre>*RST; :CORR:COLL:CONN1 N75MALE; CONN4?</pre> Change the connector type at port 1 from N50FEMALE to N75MALE. The connector type at the other ports is also changed to N75, however, the gender (female) is maintained. CORR:COLL:CONN4? returns N75FEMALE.

[SENSe<Ch>:]CORRection:COLLect:CONNection<port_no>:GENDeRs ALL | SINGle

Qualifies whether the genders of the connectors at the analyzer ports (but not their types) are equal or independent.

<Ch>	Channel number
<port_no>	Port number of the analyzer. This suffix is ignored; the command affects all ports.
Parameters	ALL: Equal (uniform) connector genders. If the gender at one port is changed, the gender at all other ports is changed accordingly. SINGle: Independent (possibly non-uniform) connector genders at the ports.
*RST value	SINGle
SCPI, Command Types	Device-specific, command or query.
Example:	See [SENSe<Ch>:]CORRection:COLLect:CONNection:PORTs.

[SENSe<Ch>:]CORRection:COLLect:CONNection<port_no>:PORTs ALL | SINGle

Qualifies whether the connector types at the analyzer ports (but not their genders) are equal or independent. Some calibration types require uniform port connector types.

<Ch>	Channel number
<port_no>	Port number of the analyzer. This suffix is ignored; the command affects all ports.
Parameters	ALL: Equal (uniform) connector types. If the connector type at one port is changed, the connector type at all other ports is changed accordingly. SINGle: Independent (possibly non-uniform) connector types at the ports.
*RST value	ALL
SCPI,	Device-specific, command or query.

Command Types**Example:**

```
CORR:COLL:CONN:PORT SING; :CORR:COLL:CONN:GEND SING
```

Select independent connector types and genders at the ports.

```
CORR:COLL:CONN1 N50MALE; CONN4 N75FEMALE; CONN2?
```

Select independent connector types at ports 1 and 4. The connector type at port 2 is not changed; the query returns the original connector type (depending on the analyzer model), e.g. *N50FEMALE*.

```
CORR:COLL:CSET ON
```

Select the calibration method where the same sweep setup is used for all standards.

```
CORR:COLL:DET AVER
```

Select an average detector for the calibration, e.g. for a noise figure measurement.

[SENSe<Ch>:]CORRection:COLLect:CSETup <Boolean>

Selects the sweep setup for the calibration sweeps. This setting is valid for manual and automatic calibration.

<Ch> Channel number

<Boolean> ON – same sweep setup for all standards (no preparation phase for each standard)
OFF – individual sweep setups (is faster for some configurations)

*RST value OFF

SCPI, Command Types Device-specific, command or query

Example: See [\[SENSe<Ch>:\]CORRection:COLLect:CONNect:port_no>:PORTs](#)

[SENSe<Ch>:]CORRection:COLLect:DELeTe ['<cal_name>' | ALL]

Deletes system error correction data generated and stored previously .

<Ch> Channel number

'<cal_name>' | ALL Name of the calibration (string parameter) defined together with the calibration type ([\[SENSe<Ch>:\]CORRection:COLLect:METHod:DEFine](#)) .
ALL – The analyzer deletes all calibrations.
If nothing is specified the analyzer deletes the last system error correction stored by means of [\[SENSe<Ch>:\]CORRection:COLLect:SAVE:SELected](#).

*RST value –

SCPI, Command Types Device-specific, no query

Example:

```
CORR:COLL:METH:DEF 'Test',RSHort,1
```


Select a one-port normalization at port 1 with a short standard as calibration type.

```
CORR:COLL:SEL SHOR,1
```

Measure a short standard connected to port 1 and store the measurement results of this standard.

```
CORR:COLL:SAVE:SEL  
CORR:COLL:DEL
```

Calculate the system error correction data and apply it to the active channel, then delete the data.

[SENSe<Ch>:]CORRection:COLLect:DETEctor NORMal | AVERage

Selects the S-parameter detector type during the calibration.

<Ch>	Channel number
Parameters	AVERage: AVG detector, especially for noise figure measurements NORMal: Normal detector, recommended for all other applications
*RST value	NORMal
SCPI, Command Types	Device-specific, command or query.
Example:	See [SENSe<Ch>:]CORRection:COLLect:CONNection<port_no>:PORTs

[SENSe<Ch>:]CORRection:COLLect:FIXTure[:ACQuire] OPEN | SHORT, <port_no>{,<port_no>}

Starts a fixture compensation sweep in order to acquire measurement data for a test fixture that has its inner conductor terminated with the selected standards.

<Ch>	Channel number
OPEN, SHORT	Standard type, open or short circuit
<port_no>	Port numbers of the analyzer. For an n-port fixture compensation (n = 1 to 4), n arbitrary (not necessarily consecutive) port numbers must be specified.
*RST value	–
SCPI, Command Types	Device-specific, no query
Example:	<pre>*RST; CORR:COLL:FIXT:LMP:LOSS OFF</pre> Configure a fixture compensation measurement (for all channels): The analyzer performs an <i>Auto Length</i> (no loss) calculation. <pre>CORR:COLL:FIXT:ACQ OPEN, 2; :CORR:COLL:FIXT:ACQ SHOR, 4</pre> Perform a fixture compensation sweep at port 2, terminated with an open standard, and at port 4, terminated with a short. <pre>CORR:COLL:FIXT:SAVE</pre> Save and apply the compensation data.

CORR:COLL:FIXT:STAR

Prepare a new fixture compensation measurement, deleting the previous data for channel 1.

CORR:COLL:FIXT:LMP OFF

Select a *Direct Compensation* measurement (for all channels and traces).

CORR:COLL:FIXT:ACQ SHOR, 1, 3

Perform a fixture compensation sweep at ports 1 and 3, terminated with a short standard.

CALC2:PAR:SDEF 'Trc2', 'S22'

Create channel no. 2 with a trace named *Trc2*.

SENS2:CORR:COLL:FIXT:STAR

Prepare a fixture compensation measurement for channel 2. The channel 1 data is not affected.

SENS2:CORR:COLL:FIXT:ACQ SHOR, 1, 3

Repeat the previous fixture compensation sweep for channel 2.

SENS1:CORR:COLL:FIXT:SAVE; :SENS2:CORR:COLL:FIXT:SAVE

Save and apply the compensation data for both channels.

SENS1:CORR:OFFS3:DFC?; :SENS2:CORR:OFFS3:DFC?

Query whether the analyzer uses *Direct Compensation* results at port 3. The response is 1;1 (true for both channels).

[SENSe<Ch>:]CORRection:COLLect:FIXTure:LMPParameter:LOSS[:STATe] <Boolean>

Selects an *Auto Length* or an *Auto Length and Loss* calculation.

<Ch> Channel number (ignored)

<Boolean> 1 – Auto Length and Loss
0 – Auto Length, no loss

*RST value 1

SCPI, Command Types Device-specific, command or query

Example: See [SENSe<Ch>:]CORRection:COLLect:FIXTure[:ACQuire]

[SENSe<Ch>:]CORRection:COLLect:FIXTure:LMPParameter[:STATe] <Boolean>

Selects an *Auto Length (and Loss)* calculation or a *Direct Compensation*.

<Ch> Channel number (ignored)

<Boolean> 1 – Auto Length (and Loss), depending on the last
[SENSe<Ch>:]CORRection:COLLect:FIXTure:LMPParameter:LOSS[:STATe]
setting
0 – Direct Compensation

*RST value 0

SCPI, Command Types Device-specific, command or query

Example: See `[SENSe<Ch>:]CORRection:COLLect:FIXTure[:ACQuire]`

[SENSe<Ch>:]CORRection:COLLect:FIXTure:SAVE

Completes a fixture compensation, storing and applying the acquired data.

<Ch> Channel number

SCPI, Command Types Device-specific, no query

Example: See `[SENSe<Ch>:]CORRection:COLLect:FIXTure[:ACQuire]`

[SENSe<Ch>:]CORRection:COLLect:FIXTure:START

Prepares the analyzer for fixture compensation comprising a single or a series of fixture compensation sweeps (`[SENSe<Ch>:]CORRection:COLLect:FIXTure[:ACQuire]`). Previous compensation data is deleted.

<Ch> Channel number

SCPI, Command Types Device-specific, no query

Example: See `[SENSe<Ch>:]CORRection:COLLect:FIXTure[:ACQuire]`

[SENSe<Ch>:]CORRection:COLLect:IMODulation[:STATe] <Boolean>

Activates or deactivates calibrations (system error correction) at all selected intermodulation frequency ranges.

This command has to be used with parameter **ON** when collecting calibration data for system error correction for an intermodulation measurement. It ensures that the calibration will be performed at the proper frequencies. It must be called before the first command of the calibration procedure (e.g. before `[SENSe<Ch>:]CORRection:COLLect:METHod:DEFine` or `[SENSe<Ch>:]CORRection:COLLect:AUTO:CONFigure`).

Please note that all calibrations performed after this command has been called with parameter **ON** will be performed at all selected intermodulation frequency ranges. To prevent unwanted effects in non intermodulation calibrations, the state should be reset to **OFF** after use.

<Ch> Channel number

<Boolean> ON | OFF - Activates or deactivates calibrations (system error correction) at all selected intermodulation frequency ranges.

*RST value OFF

SCPI, Command Types

Device-specific, command or query

Example:

CORR:COLL:IMOD ON

Activate system error correction at all selected intermodulation frequency ranges

CORR:COLL:AUTO:PORT:TYPE FNPort, ", 1, 1, 2, 2

Select and initiate a full two port automatic calibration at analyzer ports 1 and 2 using ports 1 and 2 of the calibration unit

CORR:COLL:IMOD OFF

Deactivate system error correction at all selected intermodulation frequency ranges

[SENSe<Ch>:]CORRection:COLLect:METHod TOM | TRM | TRL | TNA | TOSM | FOPORT1 | FOPORT2 | FOPORT12 | FOPTport | ROPTport | REFL1 | REFL2 | REFL12 | FRTRans | FTRans | RTRans | TPORT | UOSM

[Deprecated command]

Selects a one-port or two-port calibration type for channel <Ch> at ports 1/2.



Use the generalized command `[SENSe<Ch>:]CORRection:COLLect:METHod:DEFine` to select the calibration type for arbitrary analyzer ports or a multiport calibration type.

<Ch> Channel number**Parameters**

Calibration types, see list below.

The numbers in the parameters denote the analyzer ports. Parameters for two-port calibration types contain no numbers because the command is only valid for ports 1 and 2.

UOSM is interpreted as a mixer vector calibration if vector mixer measurements are active (`[SENSe<Ch>:]FREQuency:CONVersion VMIXer`).

***RST value** –**SCPI, Command Types**

Confirmed (with device-specific calibration types), command or query. If several "merged" calibration types are assigned to channel <Ch> (see `MMEMoRY:LOAD:CORRection:MERGe`), the query returns a list of all calibration types.

Example: See `[SENSe<Ch>:]CORRection:COLLect:SAVE`.

The supported calibration types are listed below.

Parameter	Type (Add Calibration dialog)
TOM TRM TRL TNA	TOM TRM TRL TNA
TOSM	TOSM
FOPORT1 FOPORT2 FOPORT12	Full One Port at port 1 at port 2 at port 1 and 2
FOPTport ROPTport	Forward One Path Two Port (node port: port 1) Reverse One Path Two Port (node port: port 2)
REFL1 REFL2 REFL12	Refl Norm Open at port 1 at port 2 at ports 1 and 2

Parameter	Type (Add Calibration dialog)
FRTRans FTRans RTRans	Trans Norm - Bidirectional Trans Norm - Forward Trans Norm - Reverse
TPort	Two-port normalization at ports 1 and 2 (corresponds to a Trans Norm - Bidirectional in combination with a Refl Norm Open at both ports)
UOSM	UOSM

[SENSe<Ch>:]CORRection:COLLect:METHod:DEFine '<cal_name>', REFL | RSHort | FOPort | FRTRans | FTRans | RTRans | OPTPort | TOSM | TOM | TRM | TRL | NMTRI | TNA | UOSM, <port_no>[,<port_no>][,<port_no>][,<port_no>]

Defines a one-port, two-port, three-port or four-port calibration for channel <Ch> at arbitrary analyzer ports and adds it to the channel's "selected calibrations". This is similar to the [Add Calibration](#) function of the generic [Calibration Wizard](#) (Channel - Calibration - Start Cal - Other).

Multiple non-redundant calibrations can be defined and added to a channel's selected calibrations by calling this command multiple times with identical <Ch> but different '<cal_name>' parameters. After a [MMEMory:LOAD:CORRection](#) or [MMEMory:LOAD:CORRection:MERGe](#) the loaded calibrations become the selected ones.

The query and subsequent [SENS:CORR:COLL:ACQ:SEL](#) and [SENS:CORR:COLL:SAVE:SEL](#) commands refer to all currently selected calibrations.

<Ch>	Channel number
'<cal_name>'	Name of the calibration (string identifier). Serves as a reference e.g. to delete a particular set of system correction data (using [SENSe<Ch>:]CORRection:COLLect:DELeTe ; see also SENS:CORR:COLL:SAVE:SEL). If a calibration with the given name is already defined it is overwritten by the command.
Parameters	Calibration types; see list below. UOSM is interpreted as a mixer vector calibration if vector mixer measurements are active ([SENSe<Ch>:]FREQuency:CONVersion VMIXer).
<port_no>	Port numbers of the analyzer. For an n-port calibration type (n = 1 to 4), n port numbers must be specified. If more than n numbers are defined, the spare numbers (the last ones in the list) are ignored. Entering less than n numbers causes an error message. For a one path two port calibration (OPTPort), the first port no. denotes the node port (fully calibrated port).
*RST value	–
SCPI, Command Types	Device-specific, command or query. The query returns the types of the currently selected calibrations, suffixed by the calibrated ports (e.g. RSH01 ,UOSM0204, ...; comma-separated list).
Example:	See [SENSe<Ch>:]CORRection:COLLect:SAVE:SElected .

The supported calibration types are listed below.

Parameter	Type (Add Calibration dialog)
REFL RSHort	Refl Norm Open Refl Norm Short
FOPort	Full One Port

Parameter	Type (Add Calibration dialog)
FRTRans FTRans RTRans	Trans Norm - Bidirectional Trans Norm - Forward Trans Norm - Reverse
OPTPort	One Path Two Port
TOSM	TOSM
TOM TRM TRL NMTRI TNA	TOM TRM TRL NIST Multiline TRL TNA
UOSM	UOSM

[SENSe<Ch>:]CORRection:COLLect:NFIGure[:ACQuire] RECeiver | SOURce | ATTenuator

Starts a noise figure calibration sweep for the NWA receiver, NWA source, or an external attenuator. The port assignment is defined via [\[SENSe<Ch>:\]CORRection:COLLect:NFIGure:STARt](#).

If the mixer mode is active (mixer noise figure measurement, with option R&S ZVA-K31), then the command starts two calibration sweeps for each calibration step, one in the RF frequency range, the other in the IF frequency range. If the RF image correction is enabled in addition ([\[SENSe<Ch>:\]FREQuency:CONVersion:MIXer:PRFimage ON](#)), a third calibration sweep in the RF image frequency range is added.



A noise figure calibration must be terminated with one of the following commands, to be sent immediately after the sequence of ... [:ACQuire] commands:

[\[SENSe<Ch>:\]CORRection:COLLect:NFIGure:END](#) – terminate calibration, discarding the acquired calibration data (the active channel is not calibrated)

[\[SENSe<Ch>:\]CORRection:COLLect:NFIGure:SAVE](#) – terminate calibration, applying the acquired calibration data (the active channel is calibrated)

These commands ensure that the analyzer is able to start a new measurement sweep.

<Ch> Channel number

RECeiver, SOURce, ATTenuator Calibration step, to be performed in the order RECeiver -> SOURce -> ATTenuator (optional, if an external attenuator is used or if internal attenuators with different attenuation values during calibration and during the measurement are used; see [\[SENSe<Ch>:\]CORRection:COLLect:NFIGure:STARt](#); corresponds to the Attenuator Cal label in the *Noise Figure Calibration* dialog)

***RST value** –

SCPI, Command Types Device-specific, no query

Example: See [Noise Figure Measurement](#) (condensed programming examples)

[SENSe<Ch>:]CORRection:COLLect:NFIGure:END

Terminates a noise figure calibration, discarding the acquired data (see note for [\[SENSe<Ch>:\]CORRection:COLLect:NFIGure\[:ACQuire\]](#)).

<Ch> Channel number

SCPI, Command Types Device-specific, no query

Example: See [Noise Figure Measurement](#) (condensed programming examples)

[SENSe<Ch>:]CORRection:COLLect:NFIGure:SAVE

Completes a noise figure calibration, storing and applying the acquired data (see note for [\[SENSe<Ch>:\]CORRection:COLLect:NFIGure\[:ACquire\]](#)).

<Ch> Channel number

SCPI, Command Types Device-specific, no query

Example: See [Noise Figure Measurement](#) (condensed programming examples)

[SENSe<Ch>:]CORRection:COLLect:NFIGure:STARt <port1_no>, <port2_no>, <ext_att_ON | OFF>, <src_ncal_att>, <DUT_meas_att>

Defines the calibration settings (port assignment, attenuations) for a noise figure calibration.

<Ch> Channel number

**<port1_no>,
<port2_no>,** Port numbers of the DUT output (<port1_no>) and the DUT input. The port numbers may be different from each other or equal.

<ext_att_ON | OFF>, ON | OFF – Boolean parameter, indicates whether an external attenuator is used.

<src_ncal_att>, Attenuation of the source level during the source noise calibration.

<DUT_meas_att> Attenuation of the source level during the measurement (i.e. after calibration).

***RST value** –

SCPI, Command Types Device-specific, no query

Example: See [Noise Figure Measurement](#) (condensed programming examples)

[SENSe<Ch>:]CORRection:COLLect:RPSHift <value>[, <cal_name>]

Specifies the [reference plane shift](#) to be applied to the result of a [NIST Multiline TRL](#) calibration. The <value> is entered as a mechanical length, where positive values denote a transformation towards the DUT, and negative values towards the connector. The default is 0 and corresponds to a reference plane at the connector plane. If the optional <cal_name> parameter is missing the reference plane shift is applied to all existing NIST Multiline TRL calibrations on channel <Ch>. If the optional <cal_name> parameter is provided, the reference plane shift is applied to the specified calibration only.

An error is raised if no system error correction is defined for channel <Ch> (using [\[SENSe<Ch>:\]CORRection:COLLect:METHod:DEfine](#)). If the parameter <cal_name> is provided an error is raised if a calibration with that name is not defined for channel <Ch>.



This command can not be used to shift the reference plane of existing NIST Multiline TRL calibration. It rather stores the value to be used the next time such a calibration is applied using `[SENSe<Ch>:]CORRection:COLLect:SAVE:SELeCted`. If the optional `<cal_name>` parameter is provided, the referenced calibration must have been created prior to executing the command (either through `[SENSe<Ch>:]CORRection:COLLect:METHod:DEFine` or `MMEMoRY:LOAD:CORRection`). For an applied NIST Multiline TRL calibration (i.e. after `[SENSe<Ch>:]CORRection:COLLect:SAVE:SELeCted` has been called) the reference plane shift can be queried using the remote control command `[SENSe<Ch>:]CORRection:DATA:PARAmeter<Cal>?RPSHift`.

<Ch>	Channel number
<value>	Reference plane shift in meters (mechanical length)
<cal_name>	Optional calibration name
*RST value	-
SCPI, Command Types	Device-specific, command or query Query syntax: <code>[SENSe<Ch>:]CORRection:COLLect:RPSHift? [<cal_name>]</code> . Returns the reference plane shift to be used for a calibration. If the optional <code><cal_name></code> parameter is missing the reference plane shift for the first NIST Multiline TRL calibration of channel <code><Ch></code> is returned. If the optional parameter is provided the reference plane shift to be used for the specified calibration is returned.

Example:

```
SENSe:CORRection:COLLect:METHod:DEFine 'Cal 1',NMTRL,3,4
```

Defines a NIST Multiline TRL calibration named 'Cal 1' at ports 3 and 4

```
SENSe:CORRection:COLLect:RPSHift 0.0014,'Cal 1'
```

Specifies a reference plane shift of 1.4 mm towards the DUT for 'Cal 1'

```
SENSe:CORRection:COLLect:RPSHift? 'Cal 1'
```

Returns the reference plane shift to be used for the calibration 'Cal 1' (1.4 mm)

[SENSe<Ch>:]CORRection:COLLect:SAVE

[Deprecated command]

Calculates the system error correction data from the acquired one or two-port measurement results (`[SENSe<Ch>:]CORRection:COLLect[:ACQuire]`), stores them and applies them to the calibrated channel `<Ch>`. To avoid incompatibilities, older system error correction data is deleted unless it has been transferred into a cal pool (`MMEMoRY:STORe:CORRection <Ch>, '<file_name>'`).



This command is the ZVR-compatible equivalent of `[SENSe<Ch>:]CORRection:COLLect:SAVE:SELeCted`. It must be used in combination with the ZVR-compatible commands for calibration method and standard selection; see example below.

<Ch>	Channel number
*RST value	–
SCPI, Command Types	Confirmed, no query
Example:	<pre>CORR:COLL:METH REFL1</pre>

Select a one-port normalization at port 1 as calibration type.

CORR:COLL:OPEN1

Measure an open standard connected to port 1 and store the measurement results of this standard.

CORR:COLL:SAVE

Calculate the system error correction data and apply it to the active channel.

[SENSe<Ch>:]CORRection:COLLect:SAVE:DEFault

[Deprecated command]

Generates a set of default system error correction data for the selected ports and calibration type. The default data set corresponds to a test setup which does not introduce any systematic errors; none of the measurement results acquired previously (`[SENSe<Ch>:]CORRection:COLLect[:ACQuire]`) is taken into account.



The main purpose of the default correction data set is to provide a dummy system error correction which you can replace with your own, external correction data. You may have acquired the external data in a previous session or even on an other instrument. If you want to use the external correction data on the analyzer, simply generate the default data set corresponding to your port configuration and calibration type and overwrite the default data. For details refer to the program example below.



This command must be used in combination with the ZVR-compatible commands `[SENSe<Ch>:]CORRection:COLLect:METHod` and `[SENSe<Ch>:]CORRection:DATA`. Use `[SENSe<Ch>:]CORRection:COLLect:SAVE:SELeCted:DEFault` if you want to use ZVA-specific calibration commands or if you want to calibrate more than 2 ports.

<Ch>	Channel number
*RST value	–
SCPI, Command Types	Device-specific, no query
Example:	

CORR:COLL:METH REFL1

Select a one-port normalization at port 1 with an open standard as calibration type.

CORR:COLL:SAVE:DEF

Calculate a dummy system error correction for the normalization at port 1. The dummy system error correction provides the reflection tracking error term 'SCORR3'.

INIT:CONT OFF; :INIT; *WAI

Stop the sweep to ensure correct transfer of calibration data.

CORR:DATA? 'SCORR3'

Query the dummy system error correction term. The response is a 1 (written as 1,0 for the real and imaginary part) for each sweep point (no attenuation and no phase shift between the analyzer and the calibration plane).

CORR:DATA 'SCORR3',<ASCII_data>

Replace the dummy system error correction term with your own correction data, transferred in ASCII format.

```
INIT:CONT ON
```

Restart the sweep in continuous mode.

[SENSe<Ch>:]CORRection:COLLect:SAVE:SELeCted

Calculates the system error correction data from the acquired measurement results ([SENSe<Ch>:]CORRection:COLLect[:ACQuire]:SELeCted) , stores them, and applies them to the calibrated channel <Ch>.

For successful execution of this command, complete measurement data sets must be available for *all currently selected calibrations*. See the description of [SENSe<Ch>:]CORRection:COLLect:METHod:DEFine) for background information.

To avoid incompatibilities, older system error correction data is deleted if one of the following applies:

- The older calibration has the same name as the current calibration (see [SENSe<Ch>:]CORRection:COLLect:METHod:DEFine)
- The older calibration is completely covered by the current calibration.

To avoid inadvertent loss of calibration data, you can transfer the active channel calibration to the cal pool (MMEMory:STORe:CORRection <Ch>, '<file_name>') .

<Ch> Channel number

*RST value –

SCPI, Command Types Confirmed, no query

Example:

```
CORR:COLL:METH:DEF 'Test',RSHort,1
```

Select a one-port normalization at port 1 with a short standard as calibration type.

```
CORR:COLL:SEL SHOR,1
```

Measure a short standard connected to port 1 and store the measurement results of this standard.

```
CORR:COLL:SAVE:SEL
```

Calculate the system error correction data and apply it to the active channel.

[SENSe<Ch>:]CORRection:COLLect:SAVE:SELeCted:DEFault

Generates a set of default system error correction data for the selected ports and calibration type. The default data set corresponds to a test setup which does not introduce any systematic errors; none of the measurement results acquired previously

([SENSe<Ch>:]CORRection:COLLect[:ACQuire]:SELeCted) is taken into account.



The main purpose of the default correction data set is to provide a dummy system error correction which you can replace with your own, external correction data. You may have acquired the external data in a previous session or even on another instrument. If you want to use the external correction data on the analyzer, simply generate the default data set corresponding to your port configuration and calibration

type and overwrite the default data. For details refer to the program example below.

<Ch> Channel number

***RST value** –

**SCPI,
Command
Types** Device-specific, no query

Example:

```
CORR:COLL:METH:DEF 'Test',RSHort,1
```

Select a one-port normalization at port 1 with a short standard as calibration type.

```
CORR:COLL:SAVE:SEL:DEF
```

Calculate a dummy system error correction for the normalization at port 1. The dummy system error correction provides the reflection tracking error term 'REFLTRACK'.

```
CORR:CDAT? 'REFLTRACK',1,0
```

Query the dummy system error correction term. The response is a 1 (written as 1,0 for the real and imaginary part) for each sweep point (no attenuation and no phase shift between the analyzer and the calibration plane).

```
INIT:CONT OFF; :INIT; *WAI
```

Stop the sweep to ensure correct transfer of calibration data.

```
CORR:CDAT 'REFLTRACK',1,0,<ASCII_data>
```

Replace the dummy system error correction term with your own correction data, transferred in ASCII format.

```
INIT:CONT ON
```

Restart the sweep in continuous mode.

[SENSe<Ch>:]CORRection:COLLect:SCONnection<port_no> '<conn_name>', MALE | FEMale

Selects a connector type at a specified port <port_no> and its gender. In contrast to [\[SENSe<Ch>:\]CORRection:COLLect:CONNECTION<port_no>](#), this command uses a string variable to identify the connector type.

<Ch> Channel number

<port_no> Port numbers of the analyzer.

Note: If the analyzer is set to use the same connectors at all ports ([\[SENSe<Ch>:\]CORRection:COLLect:CONNECTION<port_no>:PORTs ALL](#)), then a change of a connector type is valid for all ports. The gender of the connectors can still be different.

Parameters Connector type (string parameter) and gender of the connectors. The gender designation MALE | FEMale is not necessary (and ignored) for sexless connector types.

***RST value** 'N 50 Ohm', FEM for all ports.

**SCPI,
Command
Types** Device-specific, command or query.

Example:

```
*RST; :CORR:COLL:SCON1 'N 75 Ohm', MALE; SCON4?
```

Change the connector type at port 1 from 'N 50 Ohm', FEM to 'N 75 Ohm', MALE. The connector type at the other ports is also changed to N 75 Ohm, however, the gender (female) is maintained. `CORR:COLL:SCON4?` returns 'N 75 Ohm', FEM.

[SENSe<Ch>:]CORRection:CONNection '<conn_name>', TEM | WGUide, GENDer | NGENDER, <perm_rel>, <imped>

Configures the user-defined connector types.

<Ch>	Channel number
'<conn_name>'	Name of the user-defined connectors, string parameter
TEM WGUide	Transverse electric or waveguide type propagation mode
GENDer NGENDER	Polar connector type (m/f) Sexless connector type
<perm_rel>	Relative permittivity
Range [def. unit]	0.000000001 to 1000. [–] UP/DOWN/MIN/MAX parameters are not available for this command
*RST value	–
<imped>	For TEM type connectors: reference impedance in Ω (without unit), For WGUide type connectors: cutoff frequency in Hz (without unit)
Range [def. unit]	Ref. impedance: $1\mu\Omega$ to 1000 M Ω Cutoff frequency: 0 Hz to 1000 GHz
*RST value	–
SCPI, Command Types	Device-specific, command or query

Example:

```
CORR:CONN 'USERCON', TEM, GEND, 1.00000, 50
```

Define a TEM type connector type named USERCON.

```
CORR:CONN? 'USERCON'
```

Query the properties of the configured connector type.

```
CORR:CONN:DEL 'USERCON'
```

Delete the configured connector type.

[SENSe<Ch>:]CORRection:CONNection:CATalog?

Returns a list of the connector types of all calibration kits in use.

<Ch>	Channel number. This suffix is ignored because connectors are channel-independent.
*RST value	–
SCPI, Command Types	Device-specific, query only

Example:

```
:SENSe1:CORRection:CONNection:CATalog?
```

Query connector types. Possible response: 'N 50 Ohm,N 75 Ohm,PC 7,PC 3.5,2.92 mm,2.4 mm,1.85 mm,7-16' '

```
:SENSe1:CORRection:CKIT:CATalog? 'PC 7'
```

Query cal kits for PC 7 connector types. Possible response: 'PC 7 Ideal Kit,85031B,85050B,85050C,85050D'

```
:SENSe1:CORRection:CKIT:LCATalog? 'N 50 Ohm'
```

Query cal kits for N (50 Ω) connector types with their labels. Possible response: 'N 50 Ohm Ideal Kit,,3653,,85054D,,ZV-Z121,,ZCAN 50 Ohm,,ZV-Z21 typical,,85032B/E,,85032F,,85054B,,New Kit 1,2012-05-25'.

A sequence of two commas means that the preceding cal kit has no label assigned. We assume that a cal kit New Kit 1 with label 2012-05-25 was created before.

```
:SENSe1:CORRection:CKIT:STANdard:CATalog? '85032B/E'
```

Query standards in cal kit named 85032B/E. Possible response: 'MOP,FOP,MSH,FSH,MMMT,FMMT,MFTH' '

```
:SENSe:CORRection:CKIT:STANdard:LCATalog? 'New Kit 1','2012-05-25'
```

Query standards in user-defined cal kit named New Kit 1 labeled 2012-05-25.

Possible response:

'MOP,FOP,MSH(P1),FSH,MMMT,FMMT,MSM,FSM,MREF,FREF,MOSHORT2,FOSHORT2,MOSHORT3,FOSHORT3,MMTH,MMTH(P2P3) ...' (P1 etc. denote restricted port assignments).

[SENSe<Ch>:]CORRection:CONNection:DELeTe '<conn_name>'

Deletes a user-defined connector type named '<conn_name>'.

<Ch>	Channel number
'<conn_name>'	Name of the user-defined connectors, string parameter
SCPI, Command Types	Device-specific, no query
Example:	See [SENSe<Ch>:]CORRection:CONNection

[SENSe<Ch>:]CORRection:DATA 'SCORR1' | ... | 'SCORR12' | 'G11' | ... 'G22' | 'H11' | ... | H22'

[Deprecated command]

Writes or reads system error correction data for a specific channel <Ch> and calibration method ([\[SENSe<Ch>:\]CORRection:COLLect:METHod](#)). The analyzer test ports 1 or 2 are implicitly specified with the correction terms. The setting command can be used to transfer user-defined correction data to the analyzer; the query returns the current correction data set. ASCII or block data can be transferred, depending on the selected data transfer format ([FORMat\[:DATA\]](#))

The sweep must be stopped to transfer calibration data; see program example for [\[SENSe<Ch>:\]CORRection:COLLect:SAVE:DEFault](#).



This command affects the active calibration of channel no. <Ch> or the factory calibration (if no channel calibration is active). For the factory calibration, the query form is allowed only (no change of factory calibration data).



Use the generalized command [SENSe<Ch>:]CORRection:COLLect:CDATa to transfer calibration data for arbitrary analyzer ports.

<Ch>	Channel number of the calibrated channel. If unspecified the numeric suffix is set to 1.
Error term parameters	String parameters describing the different error terms, depending on the current calibration method; see table below. Each term contains one complex value (real and imaginary part) for each sweep point.
Range [def. unit]	The error terms consist of dimensionless complex numbers. The parameters must be transferred in full length and have the following meaning: 'SCORR1' – Directivity at port 1 'SCORR2' – Source match at port 1 'SCORR3' – Reflection tracking at port 1 'SCORR4' – Reserved for future extensions 'SCORR5' – Load match at port 2 'SCORR6' – Forward transmission tracking between port 1 and port 2 'SCORR7' – Directivity at port 2 'SCORR8' – Source match at port 2 'SCORR9' – Reflection tracking at port 2 'SCORR10' – Reserved for future extensions 'SCORR11' – Load match at port 1 'SCORR12' – Reverse transmission tracking between port 2 and port 1 'G11' ... 'G22' – G matrix elements 'H11' ... 'H22' – H matrix elements



G and H Matrices

The 7-term calibration types named Txx (e.g. TOM, TRM, TRL, TNA) are based on a network analyzer with two ports i and j, each equipped with a test receiver and a reference receiver. The system errors are described in terms of two "error two-ports" P_G and P_H :

- The error two-port P_G is assigned to port i of the analyzer. Its transmission matrix G describes how the system errors modify the outgoing and incident waves at port i:
- The error two-port P_H is assigned to port j of the analyzer. Its transmission matrix H describes how the system errors modify the measured incident and outgoing waves at port j:

In the two equations above, a and b denote the waves at the calibrated reference plane i and j (e.g. the input and output of the 2-port DUT). The m waves are the raw measured waves of test port i and j. The subscripts "ref" and "test" refer to the

reference and test receivers, respectively.

During the calibration the network analyzer acquires ratios of wave quantities, which leaves one of non-diagonal matrix elements of G or H as a free normalization factor. The network analyzer uses the normalization $H_{21} = 1$.

*RST value

–

The analyzer provides a default calibration corresponding to a test setup which does not introduce any systematic errors; see

[SENSe<Ch>:]CORRection:COLLect:SAVE:DEFault.

**SCPI,
Command
Types**

Device-specific, command or query



After a system error correction in one of the sweep types Power, Time, or CW Mode, the query returns two sets of correction data, corresponding to the fixed CW frequency and the CW frequency plus 1 Hz (minus 1 Hz if the CW frequency is equal to the maximum frequency of the analyzer).

Example:

See [SENSe<Ch>:]CORRection:COLLect:SAVE:DEFault.

The different calibration types of the analyzer provide the following error terms:

Calibration type	Parameter in [SENSe<Ch>:]CORRection:COLLect:METHod	Available error terms (depending on port numbers)
One-port normalization (reflection) using an open standard	REFL1 REFL2 REFL12	'SCORR3' 'SCORR9' 'SCORR3' and 'SCORR9'
Full one port	FOPort1 FOPort2 FOPort12	'SCORR1' to 'SCORR3' 'SCORR7' to 'SCORR9' 'SCORR1' to 'SCORR3' and 'SCORR7' to 'SCORR9'
Two-port normalization	FTRans RTRans FRTRans	'SCORR6' 'SCORR12' 'SCORR6' and 'SCORR12'
One path two port	FOPTport ROPTport	'SCORR1' to 'SCORR3', 'SCORR6' 'SCORR7' to 'SCORR9', 'SCORR12'
TOSM	TOSM	'SCORR1' to 'SCORR12' (at present the isolation terms 'SCORR4' and 'SCORR10' are not included)
TOM, TRM, TRL, TNA	TOM TRM TRL TNA	'DIRECTIVITY', 'SRCMATCH', 'REFLTRACK', 'LOADMATCH', 'TRANSTRACK' (for reading and writing) 'G11' ... 'G22' and 'H11', 'H12', 'H22' (for reading only; the 'H21' matrix elements are normalized to 1)

[SENSe<Ch>:]CORRection:DATA:PARAmeter<Cal>? [<info>]

Returns the parameters of the active system error correction(s) for channel <Ch>. If only the factory calibration is available, an error is raised.

<Ch> Channel number of the calibrated channel.

<Cal> Current number of calibration, if several calibrations are assigned to the channel (see example).

[<info>]	Optional parameter to specify the information retrieved; see table below.
Response	If <info> is omitted: Five values, corresponding to the start and stop frequency of the calibration sweep, the number of points, the source power, and the sweep type. With <info> parameter: see table below
*RST value	n/a (the command generates an execution error if no system error correction is active)
SCPI, Command Types	Device-specific, query only
Example:	<pre>CORR:COLL:METH:DEF 'Test1',RShort,1 CORR:COLL:SEL SHOR,1 CORR:COLL:SAVE:SEL</pre> Define a reflection normalization with a Short standard at port 1, perform the calibration sweep, and apply the calibration to the active channel. <pre>CORR:COLL:METH:DEF 'Test2',REFL,2 CORR:COLL:SEL OPEN,2 CORR:COLL:SAVE:SEL</pre> Define a reflection normalization with an Open standard at port 2, perform the calibration sweep, and apply the calibration to the active channel. <pre>CORRection:DATA:PARAmeter1? TYPE</pre> Query the calibration type of the first calibration. The response is RSH. <pre>CORRection:DATA:PARAmeter2? TYPE</pre> Query the calibration type of the second calibration. The response is REFL. <pre>CORRection:DATA:PARAmeter:COUNT?</pre> Query the number of active calibrations. The response is 2.

Optional parameters of [SENSE<Ch>:] CORRection:DATA:PARAmeter<Cal>?

Parameter <info>	Response
– (omitted)	Start and stop frequency, no. of points, source power, sweep type
START	Start frequency (or CW frequency, if no frequency sweep is active)
STOP	Stop frequency (or CW frequency, if no frequency sweep is active)
POINTs	Number of points
SPOWer	Source power (or stop power, for power sweeps)
STYPe	Sweep type or grid (LIN, LOG, SEGM)
BANDwidth	Measurement bandwidth
PDLY	Point delay (<i>Meas Delay</i>)
RATTenuation	Calibrated ports with receiver attenuation settings: <1st cal port>, <atten1>, <2nd cal port>, <atten2>, <3rd cal port> ... , e.g. 1, 0.0, 2, 1.0 (calibration of ports 1 and 2, attenuation settings 0 dB and 1 dB)
TYPE	Calibration type (e.g. TOSM, UOSM ...). For a complete list of returned values see table below.
PORTs	Calibrated ports: comma-separated list, <1st cal port>, <2nd cal port> ... , e.g. 1, 2 (calibration of ports 1 and 2)

Parameter <info>	Response
THRoughs	List of measured Throughs with port assignment, if more than two ports are calibrated: <1st Through, 1st port no> - <1st Through, 2nd port no>, <2nd Through, 1st port no> - <2nd Through, 2nd port no> ... , e.g. 2-3, 2-4, 3-4 (3 measured Throughs between ports 2 and 3, 2 and 4, and 3 and 4)
RPSHift	Reference plane shift applied to the calibration. The value represents the shift as a mechanical length in meters as set through <code>[SENSe<Ch>:]CORRection:COLLect:RPSHift</code> . This is only valid for NIST Multiline TRL calibrations
TSTamp	Timestamp of the calibration in 24-hour clock, returned as a comma-separated list of integers <Year>,<Month>,<Day>,<Hour>,<Minute>,<Second>

Returned values for `[SENSe<Ch>:]CORRection:DATA:PARAMeter<Cal>? TYPE`

Value	Calibration type
REFL	Refl Norm Open
RSH	Refl Norm Short
OSM	Full One Port
FRTR	Trans Norm - Bidirectional
FTR	Trans Norm - Forward
RTR	Trans Norm - Reverse
OPTP	One Path Two Port
TOSM	TOSM
TOM	TOM
TRM	TRM
TRM	TRM
TRL	TRL
NMTR	NIST Multiline TRL
TNA	TNA
UOSM	UOSM
????	Undefined (e.g. no calibration available)

`[SENSe<Ch>:]CORRection:DATA:PARAMeter:COUNT?`

Returns the number of active system error corrections in channel no. <Ch>.

<Ch>	Channel number of the calibrated channel.
Response	Integer number. 0 means that no calibration is available.
*RST value	0
SCPI, Command Types	Device-specific, query only
Example:	See <code>[SENSe<Ch>:]CORRection:DATA:PARAMeter<Cal>?</code>

`[SENSe<Ch>:]CORRection:DATE?`

Returns the date and time when the active system error correction data for channel <Ch> was acquired.

<Ch>	Channel number of the calibrated channel.

*RST value	– (the command generates an execution error if no system error correction is active)
SCPI, Command Types	Device-specific, query only
Example:	CORR:COLL:METH REFL1 Select a one-port normalization at port 1 as calibration type. CORR:COLL:OPEN1 Measure an open standard connected to port 1 and store the measurement results of this standard. CORR:COLL:SAVE Calculate the system error correction data and apply it to the active channel. CORR:DATE? Query the time when the system error correction became active. The analyzer returns the date and time, e.g. '03/20/06,18:30:39'. CORR:DATA:PAR? Query the sweep settings for the calibration sweep. The analyzer returns the start and stop frequency, the number of points, source power, and the sweep type, e.g. 300000,8000000000,201,0,LIN. CORR:SST? Query the calibration status. The analyzer returns 'CAL OFF' (because the performed one-port calibration is not sufficient for the measured transmission S-parameter S_{21}).

[SENSe<Ch>:]CORRection:EDELay<port_no>:AUTO ONCE

Defines the offset parameter for the active test port such that the residual delay of the active trace (defined as the negative derivative of the phase response) is minimized across the entire sweep range.

<Ch>	Channel number of the offset-corrected channel.
<port_no>	Port number of the analyzer. This numeric suffix is ignored; the active port is determined by the active trace.
ONCE	Applies the <i>Auto Length</i> function.
*RST value	–
SCPI, Command Types	Device-specific, no query
Example:	*RST; :CORR:EDEL:AUTO ONCE Reset the instrument and apply the auto length function to the default trace (<i>Trc1</i> in channel 1).

[SENSe<Ch>:]CORRection:EDELay<port_no>:DIElectric <permittivity>

Defines the permittivity for the offset correction at test port <port_no>.

<Ch>	Channel number of the offset-corrected channel
<port_no>	Port number of the analyzer
<permittivity>	Permittivity
Range [def. unit]	1 to +1E+6 []
*RST value	1.00062
SCPI, Command Types	Device-specific, command or query

Example:

See [\[SENSe<Ch>:\]CORRection:EDELay<port_no>:ELENgth](#)

[SENSe<Ch>:]CORRection:EDELay<port_no>:DISTance <length>

Defines the offset parameter for test port <port_no> as a mechanical length.

<Ch>	Channel number of the offset-corrected channel
<port_no>	Port number of the analyzer
<length>	Mechanical length
Range [def. unit]	–3.402823466E+038 m to +3.4028234664E+038 m.
*RST value	0 m [m]
SCPI, Command Types	Device-specific, command or query

Example:

See [\[SENSe<Ch>:\]CORRection:EDELay<port_no>:ELENgth](#)

[SENSe<Ch>:]CORRection:EDELay<port_no>:ELENgth <length>

Defines the offset parameter for test port <port_no> as an electrical length.

<Ch>	Channel number of the offset-corrected channel
<port_no>	Port number of the analyzer
<length>	Electrical length
Range [def. unit]	–1E+9 m to +1E+9 m [m]. The increment (UP, DOWN) is 1 mm.
*RST value	0 m
SCPI, Command Types	Device-specific, command or query

Example:

```
CORR:EDEL2:ELEN 0.3
```

Define an electrical length of 30 cm for channel 1 and port no. 2.

```
CORR:EDEL2:DIST?; DIEL?
```

Query the values of the mechanical length and the permittivity at port 2. The

mechanical length is equal to the electrical length divided by the square root of the permittivity; the latter is set to its default value. The response is *0.29990704322;1.00062*.

CORR:EDEL2?

Query the value of the delay at port 2. The delay is equal to the electrical length divided by the speed of light in the vacuum, so the response is *1.0006922856E-009*.

CORR:LOSS2 2; LOSS2:FREQ 1.5 GHz; OFFS 3 dB

Define the offset loss parameters at port 2.

[SENSe<Ch>:]CORRection:EDELay<port_no>[:TIME] <delay>

Defines the offset parameter for test port <port_no> as a delay time.

<Ch>	Channel number of the offset-corrected channel
<port_no>	Port number of the analyzer
<delay>	Delay
Range [def. unit]	-3.40282346638529E+038 s to +3.40282346638529E+038 s [s].
*RST value	0 s
SCPI, Command Types	Device-specific, command or query

Example:

See [\[SENSe<Ch>:\]CORRection:EDELay<port_no>:ELENgth](#)

[SENSe<Ch>:]CORRection:EWAVE[:STATe] <Boolean>

Activates or deactivates the system error correction of all a- and b-waves which are related to the ports of the active calibration.

<Ch>	Number of the active channel
<Boolean>	Enable or disable enhanced wave calibration
*RST value	OFF
SCPI, Command Types	Device-specific, command or query

Example:

See [One and Two-Port Calibration](#)

[SENSe<Ch>:]CORRection:FACTory[:STATe] <Boolean>

Enables or disables the factory calibration for all channels in the active setup.

<Ch>	Channel number. This parameter is ignored; the command affects all channels.
<Boolean>	Enable or disable factory calibration
*RST value	ON

SCPI, Command Types

Device-specific, command or query

Example:

*RST; :CORR:FACT?

Reset the instrument and query whether the factory calibration for channel 1 is enabled. The response is 1.

[SENSe<Ch>:]CORRection:LOSS<port_no> <ref_loss>

Defines the offset loss at the reference frequency

([SENSe<Ch>:]CORRection:LOSS<port_no>:FREQuency).

<Ch>	Channel number of the offset-corrected channel
<port_no>	Port number of the analyzer
<ref_loss>	Frequency-dependent part of the offset loss
Range [def. unit]	-200 dB to +200 dB [dB]. The increment (UP/DOWN) is 0.001 dB.
*RST value	0 dB

SCPI, Command Types Device-specific, command or query

Example:

See [SENSe<Ch>:]CORRection:EDELay<port_no>:ELENgth

[SENSe<Ch>:]CORRection:LOSS<port_no>:AUTO ONCE

Defines the offset parameters for the active test port such that the residual delay of the active trace (defined as the negative derivative of the phase response) is minimized and the measured loss is reproduced as far as possible across the entire sweep range.

<Ch>	Channel number of the offset-corrected channel.
<port_no>	Port number of the analyzer. This numeric suffix is ignored; the active port is determined by the active trace.
ONCE	Applies the <i>Auto Length and Loss</i> function.
*RST value	–

SCPI, Command Types Device-specific, no query

Example:

*RST; :CORR:LOSS:AUTO ONCE

Reset the instrument and apply the *Auto Length and Loss* function to the default trace (*Trc1* in channel 1).

[SENSe<Ch>:]CORRection:LOSS<port_no>:FREQuency <ref_frequency>

Defines the reference frequency for the frequency-dependent part of the offset loss

([SENSe<Ch>:]CORRection:LOSS<port_no>).

<Ch>	Channel number of the offset-corrected channel
<port_no>	Port number of the analyzer
<ref_frequency>	Reference frequency
Range [def. unit]	Frequency range of the analyzer model [Hz]. The increment (UP/DOWN) is 1 MHz.
*RST value	1000000000 Hz (= 1 GHz)
SCPI, Command Types	Device-specific, command or query
Example:	See <code>[SENSe<Ch>:]CORRection:EDELay<port_no>:ELENgth</code>

[SENSe<Ch>:]CORRection:LOSS<port_no>:OFFSet <DC_loss>

Defines the frequency-independent part (DC value) of the offset loss.

<Ch>	Channel number of the offset-corrected channel
<port_no>	Port number of the analyzer
<DC_loss>	Frequency-independent part of the offset loss
Range [def. unit]	-200 dB to +200 dB [dB]. The increment (UP/DOWN) is 0.001 dB.
*RST value	0 dB
SCPI, Command Types	Confirmed, command or query
Example:	See <code>[SENSe<Ch>:]CORRection:EDELay<port_no>:ELENgth</code>

[SENSe<Ch>:]CORRection:NFIGure[:STATe] <Boolean>

Disables or enables the *Noise Figure Calibration* for the active channel <Ch>.

<Ch>	Channel number
<Boolean>	OFF - Disable calibration (select <i>Correction Off</i>) ON - (re-)enable calibration
*RST value	OFF (calibration disabled, no noise figure calibration available after a reset)
SCPI, Command Types	Device-specific, command or query
Example:	See Noise Figure Measurement (condensed programming examples)

[SENSe<Chn>:]CORRection:NState?

Returns the noise figure calibration state label of active trace in channel <Chn>. The active trace must be a noise figure trace, otherwise an empty string is returned.

<Chn>	Channel number used to identify the active trace.

Response	String variable containing the calibration state label in the trace list ('NCal', 'NCai', 'NCax', 'Nca?', 'NCal Inv', 'NCal Off'; see Noise Figure Calibration State Labels).
*RST value	" (empty string, is returned e.g. if no noise figure calibration is available for trace <Chn>)
SCPI, Command Types	Device-specific, query only
Example:	See Noise Figure Measurement (condensed programming examples)

[SENSE<Ch>:]CORRection:OFFSet<port_no>:DFComp[:STATe]? <Boolean>

Returns whether a direct fixture compensation has been carried out at port no. <port_no>. A direct fixture compensation resets the offset parameters to zero, the analyzer uses calculated transmission factors instead.

<Ch>	Channel number of the offset-corrected channel
<port_no>	Port number of the analyzer.
<Boolean>	1 – direct fixture compensation data used 0 – no direct fixture compensation data used
*RST value	-
SCPI, Command Types	Device-specific, query only
Example:	<pre>*RST; :CORR:OFFS:DFC?</pre> Reset the instrument and query whether the analyzer uses direct fixture compensation data at port 1. The response is 0.

[SENSE<Ch>:]CORRection:OFFSet<port_no>:MAGNitude <DC_loss>

[Deprecated command]

Defines the frequency-independent part (DC value) of the offset loss.



Use the [SENSE<Ch>:]CORRection:LOSS<port_no>... commands to define the complete set of loss offset parameters. [SENSE<Ch>:]CORRection:OFFSet<port_no>:MAGNitude is equivalent to [\[SENSE<Ch>:\]CORRection:LOSS<port_no>:OFFSet](#)

<Ch>	Channel number of the offset-corrected channel
<port_no>	Port number of the analyzer
<DC_loss>	Frequency-independent part of the offset loss
Range [def. unit]	-200 dB to +200 dB [dB]. The increment (UP/DOWN) is 0.001 dB.
*RST value	0 dB
SCPI, Command Types	Confirmed, command or query

[SENSe<Ch>:]CORRection:OFFSet<port_no>[:STATe] <Boolean>

Resets the offset parameters for all test ports to zero or queries whether any of the offset parameters are different from zero.

<Ch>	Channel number of the offset-corrected channel
<port_no>	Port number of the analyzer. This numeric suffix is ignored; the command affects the parameters of all ports.
<Boolean>	The parameter function depends on whether the command is used as a setting command or as a query: For setting command: ON – no effect OFF – resets all length offsets to zero For query: 1 – at least one length offset is different from zero 0 – all length offsets are zero
*RST value	OFF

SCPI, Command Types Device-specific, command or query

Example:

```
*RST, :CORR:OFFS?
```

Reset the instrument and query whether the length offset parameters have been reset as well. The response is 0.

SENSe<Ch>:CORRection:POWer**[SENSe<Ch>:]CORRection:POWer<port_no>...**

This subsystem controls the receiver power calibration.

[SENSe<Ch>:]CORRection:POWer<port_no>:ACQuire AWAVe | BWAVe | B1 | B2 | B3 | B4[,<cal_port>, PORT | GENerator | CONVerter, <source_no>, AWAVe | NOMinal]

Selects the wave quantity and the source for the receiver power calibration, starts the calibration sweep, and applies the receiver power correction.



The command triggers an event and has no query form. The calibrated waves and the used source are not shown in the Receiver Power Cal dialog.

<Ch>	Calibrated channel number
<port_no>	Calibrated port number. This suffix is ignored because the port number is specified in the parameter list.
AWAVe	Calibration of reference waves $a_1, a_2, \dots$
BWAVe	Calibration of received waves $b_1, b_2, \dots$
	The port number <cal_port>, the used source (PORT GENerator), and the source number <source_no> must be specified in addition. Alternative: Parameters B1 and

	B2.
B1 B2 B3 B4	Direct wave and cal port setting for received waves $b_1, b_2, \dots$. The parameters B1 and B2 are ZVR-compatible. No additional parameters need to be specified. The source for B1 is Port 2 and vice versa.
<cal_port>	Calibrated port number
Range [def. unit]	1 to port number of the analyzer [–]
PORT 	Internal source at port <source_no>, to be fed to port <cal_port> using an external through connection.
GENerator 	External generator no. <source_no>
CONVerter	Frequency converter with electronic attenuator (R&S ZVA-ZxxxE) no. <source_no>
<source_no>	Number of the port for the internal source / generator / converter
Range [def. unit]	1 to port number of the analyzer/number of external generators [–]
AWAVE NOMinal	Select the reference receiver value (a-wave) of the calibration source or its nominal power as a reference power value for the calibration.
*RST values	– (for all parameters)
SCPI, Command Types	Device-specific, no query
Example:	<pre>*RST; :CORR:POW:ACQ AWAVE,1,PORT,1,AWAVE</pre>

Perform a receiver power calibration of the wave a_1 using port 1 as a source port, assuming that the transmitted source power a_1 is correct. No external cabling is needed.

```
CORR:POW:AWAV?
```

Check whether the calibration is applied (the response is 1).

```
CALC:PAR:MEAS 'TRC1', 'A1'
```

Select a_1 as a measured quantity for the default trace.

```
CALC:MARK ON; MARK:Y?; :SOUR:POW?
```

Create marker no. <Mk> in the center of the sweep range and query the measurement value. The calibrated power of the reference wave a_1 is approx. equal to the default source power value.

See also example for [SENSe<Ch>:\]CORRection:POWer<port_no>\[:STATe\]](#).

[SENSe<Ch>:]CORRection:POWer<port_no>:AWAVE[:STATe] <Boolean>

Enables or disables the receiver power calibration for channel <Ch> and for the reference waves a_n . The setting command is disabled unless the reference waves have been power calibrated ([\[SENSe<Ch>:\]CORRection:POWer<port_no>:ACQuire AWAVE,...](#)). The query always returns a result.

<Ch>	Calibrated channel number
<port_no>	Calibrated port number

<Boolean>	Enables (ON) or disables (OFF) the receiver power calibration for the reference waves a_n .
*RST value	OFF [-]
SCPI, Command Types	Device-specific, command or query
Example:	See <code>[SENSe<Ch>:]CORRection:POWer<port_no>:ACQuire</code>

[SENSe<Ch>:]CORRection:POWer<port_no>:AWAVe:IPMMatch[:STATe] <Boolean>

Enables or disables the assumption of an ideal power meter match when system error correction data and power calibration data are combined for the enhanced wave correction. The command is intended for the case that the system error coefficients used for enhanced wave correction are set via remote command.

For enhanced wave correction the 12-Term error coefficients (that can be set via the remote command `SENS:CORR:CDAT`) and the results of a scalar reference receiver power calibration are combined to an "absolute power normalized 8-Term error model".

- If the assumption of ideal power meter match is enabled, the error coefficient e_{10} of the 8-term error model is chosen to be the scalar reference receiver power calibration coefficients set via the `SENS:CORR:POW:DATA` remote command.
- If the assumption is disabled, additional internal data of the power meter match stored during a source power calibration is used to correct for the network analyzer port match and power meter match when calculating the e_{10} error term.

If a reference receiver power calibration for port 2 is performed then the error term e_{23} is chosen to be equal to the power calibration coefficients. If multiple reference receiver power calibrations are performed and set via remote command the ideal power meter match setting has to be set for each power calibration since the power calibration chosen by the firmware for the absolute power normalization is implementation specific.

The command only applies to enhanced wave correction and has no effect on scalar power corrected wave quantities. It is not needed if calibration and power calibration are performed using the functions of the network analyzer.

<Ch>	Calibrated channel number
<port_no>	Calibrated port number
<Boolean>	Enables (ON) or disables (OFF) the assumption of ideal power meter match.
*RST value	OFF [-]
SCPI, Command Types	Device-specific, command or query
Example:	<code>CORR:POW:AWAVe:IPMMatch ON</code>

Enable the assumption of ideal power meter match.

[SENSe<Ch>:]CORRection:POWer<port_no>:DATA '<wave_string>', <block> | <numeric_value>...

Reads or writes receiver power correction data sets. A power correction data set contains n real values where:

- Each value corresponds to the ratio of the actual power at the receiver input (value provided by the used source) to the uncalibrated power in dB.
- The number n is equal to the number of sweep points.

Increasing (decreasing) the values in the correction data sets increases (decreases) the input power reading. Writing correction data (the setting command) fails if the number of transferred values is not equal to the number of sweep points.

<Ch>	Calibrated channel number
<port_no>	Calibrated port number
'<wave_string>'	Identifier for the calibrated wave: • 'A<n>' or 'AWAV<n>' denote correction data for the reference wave a<n>, where <n> corresponds to the port number. • 'B<n>' or 'BWAV<n>' denote correction data for the reference wave b<n>.
<block> <numeric_value>...	Power correction values in block data format or as a comma-separated list of real numbers. The query returns a list of numbers.
Range [def. unit]	All numbers are interpreted as dB-values.
*RST value	—
SCPI, Command Types	Device-specific, command or query

Example:

```
*RST; :SWE:POIN 10
```

Reset the instrument and reduce the number of sweep points to 10.

```
CORR:POW:ACQ AWAVE,1,PORT,1
```

Perform a receiver power calibration of the wave a₁ using port 1 as a source port, assuming that the transmitted source power a₁ is correct. No external cabling is needed.

```
CORR:POW:DATA? 'AWAV1'
```

Query the correction values. The analyzer returns 10 comma-separated real numbers.

```
CORR:POW:DATA 'AWAV1', 1, 2, 3, 4, 5, -6, -7, -8, -9, -0
```

Replace the correction values by ten (new) numbers.

[SENSe<Ch>:]CORRection:POWer<port_no>:HARMonic:ACQuire

Starts the receiver calibration (3rd power calibration step for harmonic measurements), stores and applies the calibration data.



The receiver calibration relies on the source power calibration acquired in steps no. 1 and 2. [SENSe<Ch>:]CORRection:POWer<port_no>:HARMonic:ACQuire is enabled only after the previous steps have been carried out

(SOURce<Ch>:POWer<port_no>:CORRection:HARMonic[:ACQuire]).

<Ch> Calibrated channel number

<port_no> Port number. This suffix is ignored; the analyzer calibrates the port that is selected as a receive port for the harmonic measurement
([SENSe<Ch>:]FREQuency:CONVersion:HARMonic:RPORT).

SCPI, Command Types Device-specific, no query

Example: See SOURce<Ch>:POWer<port_no>:CORRection:HARMonic[:ACQuire].

[SENSe<Ch>:] CORRection:POWer<port_no>:IMODulation:ACQuire

[Deprecated command]

Starts the receiver calibration (3rd legacy power calibration step for intermodulation measurements), stores and applies the calibration data.



The receiver calibration relies on the source power calibration acquired in step no. 1 using SOURce<Ch>:POWer<port_no>:CORRection:IMODulation:LTONE[:ACQuire]. Make sure to first perform step no. 1 before performing this step.

This command will perform a calibration only at the lower tone frequency. If the intermodulation measurement is combined with a mixer measurement the calibration will be performed at the IF range of the lower tone frequency only.

- To perform a receiver calibration at the upper tone frequency and at all selected intermodulation orders as well, use the command [SENSe<Ch>:]CORRection:POWer<port_no>:IMODulation:RPORT:ACQuire
- To perform a source power calibration of the receive port of the intermodulation measurement (usually done as preparation for an enhanced wave correction) at the lower and upper tone frequency and at all selected intermodulation orders, use the command SOURce<Ch>:POWer<Pt>:CORRection:IMODulation:RPORT[:ACQuire].

<Ch> Channel number

<port_no> Port number. This suffix is ignored; the analyzer calibrates the port that is selected as receive port for the intermodulation measurement
([SENSe<Ch>:]FREQuency:IMODulation:RECeiver).

SCPI, Command Types Device-specific, no query

Example: See SOURce<Ch>:POWer<port_no>:CORRection:IMODulation:LTONE[:ACQuire].

[SENSe<Ch>:]CORRection:POWer<port_no>:IMODulation:RPORT:ACQuire

Starts the receiver calibration (2nd power calibration step for intermodulation measurements), stores and

applies the calibration data.



The receiver calibration relies on the source power calibration acquired in step no. 1 (`SOURce<Ch>:POWer<port_no>:CORRection:IMODulation:SPORts[:ACquire]`). Make sure to first perform step no. 1 before performing this step.

This calibration encompasses the lower and upper tone frequency range as well as the frequency range for all lower and upper intermodulation products which have been selected via `[SENSe<Ch>:]FREQuency:IMODulation:ORDer<Im>:STATe`. If in addition to the intermodulation measurement a mixer measurement is set up as well, only the IF frequency ranges will be measured.

<Ch> Channel number

<port_no> Port number. This suffix is ignored; the analyzer calibrates the port that is selected as receive port of the intermodulation measurement (`[SENSe<Ch>:]FREQuency:IMODulation:RECeiver`).

**SCPI,
Command
Types** Device-specific, no query

Example: See `SOURce<Ch>:POWer<Pt>:CORRection:IMODulation:SPORts[:ACquire]`

[SENSe<Ch>:]CORRection:POWer<port_no>:MIXer:IF:ACquire

Starts the IF receiver calibration (2nd power calibration step for scalar mixer measurements), stores and applies the calibration data.



The receiver calibration relies on the RF source power calibration acquired in step no. 1. `[SENSe<Ch>:]CORRection:POWer<port_no>:MIXer:IF:ACquire` is enabled only after step 1 has been carried out (`SOURce<Ch>:POWer<Pt>:CORRection:MIXer:RF[:ACquire]`).

<Ch> Calibrated channel number

<port_no> Calibrated port number. This suffix is ignored; the port is selected via `[SENSe<Ch>:]FREQuency:CONVersion:MIXer:IFPort`.

**SCPI,
Command
Types** Device-specific, no query

Example: See `SOURce<Ch>:POWer<Pt>:CORRection:MIXer:RF[:ACquire]`.

[SENSe<Ch>:]CORRection:POWer<port_no>:MIXer:IF:NFIGure:ACquire

Starts the IF receiver calibration (2nd power calibration step for mixer noise figure measurements), stores and applies the calibration data.



The receiver calibration relies on the RF source power calibration acquired in step no. 1; see `SOURce<Ch>:POWer<Pt>:CORRection:MIXer:RF:NFIGure[:ACquire]`.

<Ch> Calibrated channel number

<port_no> Calibrated port number. This suffix is ignored; the port is selected via `[SENSe<Ch>:]FREQuency:CONVersion:MIXer:IFPort`.

SCPI, Device-specific, no query

Command Types

Example: See `SOURce<Ch>:POWer<Pt>:CORRection:MIXer:RF:NFIgure[:ACQuire]`.

[SENSe<Ch>:]CORRection:POWer<port_no>[:STATe] <Boolean>

Enables or disables the receiver power calibration for channel <Ch> and for the received waves b_n . The setting command is disabled unless the received waves have been power calibrated (`[SENSe<Ch>:]CORRection:POWer<port_no>:ACQuire BWAVE,...`). The query always returns a result.

<Ch> Calibrated channel number

<port_no> Calibrated port number

<Boolean> Enables (ON) or disables (OFF) the receiver power calibration for the received waves b_n .

*RST value OFF [-]

SCPI, Device-specific, command or query
Command Types

Example: `*RST; :CORR:POW:ACQ BWAVE,1,PORT,2`

Perform a receiver power calibration of the wave b_1 using port 2 as a source port, assuming that the source power a_2 is correct. A through connection from port 2 to port 1 is needed.

`CORR:POW?`

Check whether the calibration is applied (the response is 1).

`CALC:PAR:MEAS 'TRC1', 'B1D2'`

Select b_1 as a measured quantity for the default trace.

`CALC:MARK ON; MARK:Y?; :SOUR:POW?`

Create marker no. <Mk> in the center of the sweep range and query the measurement value. The calibrated power of the received wave b_1 is approx. equal to the default source power value.

See also example for `SENSe<Ch>:]CORRection:POWer<port_no>:ACQuire`.

[SENSe<Ch>:]CORRection:PSTate?

Returns the power calibration state label of the active trace in channel <Ch>.

<Ch> Channel number used to identify the active trace.

Response String variable containing the power calibration state label in the trace list ('PCal', 'PCal', 'PCa?', 'PCao', 'PCax', 'PCal Off'; see [Power Calibration State Labels](#)).

*RST value " (empty string, is returned e.g. if no power calibration is available for channel <Ch>)

SCPI, Command Types Device-specific, query only

Example: See [SOURce<Ch>:POWER:CORRection\[:ACquire\]](#)

[SENSe<Ch>:]CORRection:SSTate?

Returns the system error correction state label of the active trace in channel <Ch>.

<Ch> Channel number. used to identify the active trace.

Response String variable containing the calibration state label in the trace list ('Cal', 'Cai', 'Ca?', 'Cav', 'Cal Off'; see [System Error Correction State Labels](#)).

***RST value** " (empty string, is returned e.g. if no system error correction is available for channel <Ch>)

SCPI, Command Types Device-specific, query only

Example: See [\[SENSe<Ch>:\]CORRection:DATE?](#)

[SENSe<Ch>:]CORRection[:STATE] <Boolean>

Enables or disables the system error correction for channel <Ch>.

<Ch> Calibrated channel number

<Boolean> Enables (ON) or disables (OFF) the correction.

***RST value** ON [-]

SCPI, Command Types Confirmed, command or query

Example: `*RST; :CORR?`

Reset the instrument and query whether channel 1 is system error corrected. The response is 1.

[SENSe<Ch>:]CORRection:STIMulus?

Queries the stimulus values of the active calibration. A calibration must be selected before the command is executed; see example.

<Ch> Channel number of the calibrated channel.

***RST value** –

SCPI, Command Types Device-specific, query only

Example: `*RST; :CORR:COLL:METH:DEF 'Test',RShort,1`

Select a one-port normalization at port 1 with a short standard as calibration

type.

```
CORR:STIM?
```

Query the stimulus frequencies. The response contains 201 frequency values.

```
CORR:COLL:SEL SHOR,1
```

Measure a short standard connected to port 1 and store the measurement results of this standard.

```
CORR:COLL:SAVE:SEL
```

Calculate the system error correction data and apply it to the active channel.

[SENSe<Ch>:]COUPle...

This subsystem selects the sweep type and the measurement parameter.

[SENSe<Ch>:]COUPle ALL | NONE

Activates normal or alternating sweep mode.

<Ch>	Channel number. If unspecified, this parameter is set to 1.
Parameters	ALL – normal sweep mode (alternate off), complete all partial measurements before proceeding to the next sweep point NONE – alternating sweep mode on, reverse the order of partial measurements and sweeps
*RST value	ALL
SCPI, Command Types	Device-specific, command or query
Example:	<pre>COUP NONE</pre> Activate the alternating sweep mode. <pre>TRIG:LINK 'PPO'</pre> Set the triggered measurement sequence equal to one partial measurement. Each trigger event starts one partial measurement for all sweep points.

[SENSe<Ch>:]EUNit...

This subsystem configures the different signal paths in the Extension Unit R&S ZVAX24 and selects the connectors for the pulse generators.

[SENSe<Ch>:]EUNit:COMBiner<Path>[:STATe] <Boolean>

Switches the internal combiner in-between the RF signal paths no. 1 and 3 (source path).

<Ch>	Channel number. If unspecified, this parameter is set to 1.
<Path>	Signal path, must be set to 1 (or omitted).
<Boolean>	ON – Internal combiner used. The combined source signals of the R&S ZVAX signal paths 1 and 3 are available at the NWA port 1. OFF – No combiner used (through path). The source signals of the R&S ZVAX signal paths 1 and 3 are available at the NWA ports no. 1 and 3, respectively.
*RST value	OFF

SCPI, Command Types Device-specific, command or query

Example:

```
EUN:COMB ON
```

Activate the internal combiner.

```
EUN:HFIL1 ON; HFIL3 ON
```

Loop harmonic filters into the source signal paths no. 1 and 3.

```
EUN:PMOD1 ON; PMOD3 ON
```

Loop pulse modulators into the source signal paths no. 1 and 3.

```
EUN:LNAM ON
```

Loop the low-noise preamplifier into the receiver signal path no. 2.

[SENSe<Ch>:]EUNit:HFILter<Path>[:STATe] <Boolean>

Loops harmonic filters into the RF signal paths no. <Path>. Paths no. 1 and 3 in the extension unit are source paths, path no. 2 is a receiver path.

<Ch>	Channel number
<Path>	Signal path no. 1, 2, or 3. If unspecified, this parameter is set to 1.
<Boolean>	ON – Harmonic filter used OFF – No harmonic filter (through path)
*RST value	OFF

SCPI, Command Types Device-specific, command or query

Example:

```
See [SENSe<Ch>:]EUNit:COMBiner[:STATe]
```

[SENSe<Ch>:]EUNit:LNAMplifier[:STATe] <Boolean>

Loops the low noise preamplifier into the RF receiver path no. 2. No path suffix is required.

<Ch>	Channel number
<Boolean>	ON – Low-noise amplifier used OFF – No low-noise amplifier (through path)
*RST value	OFF

SCPI, Command Types Device-specific, command or query

Example:

```
See [SENSe<Ch>:]EUNit:COMBiner[:STATe]
```

[SENSe<Ch>:]EUNit:PGENerator:ASSignment G1Mall | G2Mall | G1M2 | G1M3

Defines the assignment between pulse generator signals and pulse modulators.

<Ch>	Channel number
Parameters	G1Mall – Generator signal 1 controls all three modulators G2Mall – Generator signal 2 controls all three modulators G1M2 – Generator signal 1 controls modulators 1 and 2, generator signal 2 controls modulator 3 G1M3 – Generator signal 1 controls modulators 1 and 3, generator signal 2 controls modulator 2
*RST value	G1M
SCPI, Command Types	Device-specific, command or query
Example:	See <code>[SENSe<Ch>:]EUNit:PGENerator:INPut:EXTernal</code>

[SENSe<Ch>:]EUNit:PGENerator:INPut:EXTernal <Boolean>

Selects the R&S ZVA or an external pulse generator as a source for the pulse generator signals.

<Ch>	Channel number
<Boolean>	ON – External generator signals, fed in via EXT PULSE GENERATOR IN OFF – R&S ZVA signals, fed in via CASCADE IN
*RST value	OFF
SCPI, Command Types	Device-specific, command or query
Example:	<code>EUN:PGEN:INP:EXT ON</code>

Select an external pulse generator.

```
EUN:PGEN:ASS G2Mall
```

Use the pulse generator signal 2 to control all three pulse modulators.

```
EUN:PGEN:OUTP:EXT ON
```

Select the EXT PULSE GENERATOR OUT connectors as output connectors for the pulse generator signals.

[SENSe<Ch>:]EUNit:PGENerator:OUTPut:EXTernal <Boolean>

Routes either the R&S ZVA pulse generator signals or the external pulse generator signals to the PULSE GENERATOR OUT connector.

<Ch>	Channel number
<Boolean>	ON – External pulse generator signals, fed in via EXT PULSE

GENERATOR IN
OFF – R&S ZVA signals, fed in via CASCADE IN
*RST value OFF

SCPI, Command Types Device-specific, command or query

Example: See `[SENSe<Ch>:]EUNit:PGENerator:INPut:EXTernal`

[SENSe<Ch>:]EUNit:PMODulator<Path>[:STATe] <Boolean>

Loops pulse modulators into the RF signal paths no. <Path>. Paths no. 1 and 3 in the extension unit are source paths, path no. 2 is a receiver path.

<Ch> Channel number
<Path> Signal path no. 1, 2, or 3. If unspecified, this parameter is set to 1.
<Boolean> ON – Pulse modulator used
OFF – No pulse modulator (through path)
*RST value OFF

SCPI, Command Types Device-specific, command or query

Example: See `[SENSe<Ch>:]EUNit:COMBiner[:STATe]`

[SENSe<Ch>:]FREQuency...

This subsystem sets frequency-related parameters, especially the measurement and display ranges for the different sweep types, and controls the frequency-converting measurement modes ([harmonic distortion](#), [mixer mode](#), etc.).

The frequency ranges for the different instrument models are listed below:

	ZVA8	ZVA24	ZVA40	ZVA50	ZVA67
Start, Stop	300 kHz to 8 GHz	10 MHz to 25 GHz (the specified frequency range is 10 MHz to 24 GHz; see data sheet)	10 MHz to 40 GHz	10 MHz to 50 GHz	10 MHz to 67 GHz
Center	> 300 kHz to < 8 GHz	> 10 MHz to < 25 GHz	> 10 MHz to < 40 GHz	> 10 MHz to < 50 GHz	> 10 MHz to < 67 GHz
Span	10 mHz to 7.9997 GHz	10 mHz to 24.99 GHz	10 mHz to 39.99 GHz	10 mHz to 49.99 GHz	10 mHz to 66.99 GHz



Use `SYSTem:FREQuency? MINimum | MAXimum` to query the frequency range of your analyzer.

Note: For a frequency sweep the range can be defined alternatively by a combination of Start/Stop frequencies or a Center frequency and Span. In fixed frequency mode (power sweep or Time/CW Mode; see `[SENSe<Chn>:]FUNCTION[:ON]`) the measurement frequency is set by means of `[SENSe<Ch>:]FREQuency:CW|FIXed`.

[SENSe<Ch>:]FREQuency:CENTer <center_frequency>

Defines the center of the measurement and display range for a frequency sweep.

<Ch>	Channel number. If unspecified the numeric suffix is set to 1.
<center_frequency>	Center frequency of the sweep.
Range [def. unit]	Depending on the instrument model [Hz]. The increment (parameters UP or DOWN) is 0.1 kHz.
*RST value	Center of the analyzer's maximum frequency range: $(f_{\text{MIN}} + f_{\text{MAX}})/2$

SCPI, Command Types Confirmed, command or query.

Example:

```
*RST; :SYST:FREQ? MIN; :SYST:FREQ? MAX
```

Activate a frequency sweep and query the frequency range of the analyzer.

```
FREQ:CENT 100MHz
```

Set the center frequency to 100 MHz.

```
FREQ:SPAN 50000
```

Set the frequency span to 50 kHz.



The measurement range defined by means of the center frequency and the current span ([SENSe<Ch>:]FREQuency:SPAN) must not exceed the allowed frequency range of the analyzer. If necessary, the span is reduced to min (Center – f_{MIN} , f_{MAX} – Center).

[SENSe<Ch>:]FREQuency:CONVersion FUNDamental | HARMonic | SHARmonic | THARmonic | MIXer | VMIXer

Enables/disables a frequency converting measurement for channel <Ch>.



Enabling a (different) frequency converting measurement also resets the measured quantity; see program example below.

<Ch>	Channel number.
FUNDamental	Measurement of the fundamental signal (no frequency-converting mode). When a frequency conversion is reset, the status of SENSe<Ch>:FREQuency:CONVersion:AWReceiver[:STATe] is reset to 1 (= ON = measure source port waves at receiver frequency).
HARMonic	Harmonics measurement. The order of the measured harmonic, the source port, and the receive port must be selected using the [SENSe<Ch>:]FREQuency:CONVersion:HARMonic... commands; see example below.
SHARmonic THARmonic	Measurement of the 2nd or 3rd harmonic with source port 1 and receive port 2. These parameters have been introduced for compatibility with the ZVR. While they are active, a query returns HARM.
MIXer VMIXer	Scalar or vector mixer mode. Both mixer modes are configured using the [SENSe<Ch>:]FREQuency:CONVersion:MIXer... commands.
*RST value	FUNDamental

SCPI,
Command
Types

Example:

Device-specific, command or query. Returned values: FUND or HARM.

```
*RST; FREQ:STAR 0.5E+9; STOP 1E+9
```

Reset the analyzer (activating a frequency sweep) and set the sweep range between 1 GHz and 1.1 GHz.

```
FREQ:CONV:HARM:ORD 4; SPOR 1; RPOR 2
```

Configure a 4th harmonic measurement with source port 1 and receive port 2. The measurement is still not enabled.

```
FREQ:CONV HARM
```

Enable the configured harmonic measurement.

```
CALC:PAR:MEAS? "TRC1"
```

Query the measured quantity. The analyzer measures the wave quantity b2, the response is 'B2D1SAM'.

```
FREQ:CONV:HARM:RELative ON
```

Enable the relative harmonic measurement, creating a new channel and a new trace *Trc2*.

```
CALC2:PAR:MEAS? "TRC2"
```

Query the measured quantity in the new channel no. 2. The analyzer still measures the wave quantity b2, the response is 'B2D1SAM'.

```
CALC2:MATH:STAT?
```

Check whether the active trace in channel no. 2 (i.e. *Trc2*) is a mathematical trace: the response is 1.

[SENSe<Ch>]:FREQuency:CONVersion:ARBitrary <numerator>, <denominator>, <offset>, CW | FIXed | SWEEp

Defines the receiver frequency for frequency-converting measurements. The receiver frequency is either a range (for frequency sweeps) or a CW frequency (for power, time and CW Mode sweeps). The receiver frequency is valid for all ports.



The frequency formula is applied even if the analyzer returns an error message, because the frequency is outside the allowed range.

<Ch> Channel number.

<numerator> Parameters of the frequency formula. The receiver frequency f_r is calculated according to
 <denominator> $f_r = \text{<numerator>/<denominator>} * f_b + \text{<offset>}$
 <offset> where f_b represents the channel base frequency (parameter SWEEp). For parameters CW or FIXed, $f_b = 0$.



The conversion formula for f_r is ZVR-compatible but differs from manual control where the ratio <numerator>/<denominator> also multiplies the <offset>.

Range [def. unit] The converted frequency or frequency range must be within the analyzer's frequency range, depending on the [instrument model](#) [Hz]. In addition the following restrictions apply:

	<numerator> – Values are rounded to positive or negative integer numbers; zero is not allowed [1] <denominator> – Values are rounded to positive integer numbers [1] <offset> – Values are rounded to (positive or negative) multiples of 1 Hz [Hz].
*RST value	The default frequency/frequency range corresponds to the sweep range or CW frequency of the analyzer, i.e. <numerator> = <denominator> = 1 <offset> = 0 Hz
Sweep type Parameters	SWEEp – The full formula is applied. For frequency sweeps, the command defines a sweep range. CW FIXEd – The reduced formula with $f_b = 0$ is applied. $f_r = \text{<offset>}$; the command defines a fixed frequency.
*RST value	SWEEp
SCPI, Command Types	Device-specific, command or query.
Example:	<pre>*RST;FREQ:STAR 1E+9;STOP 1.1E+9</pre> Reset the analyzer (activating a frequency sweep) and set the sweep range between 1 GHz and 1.1 GHz. <pre>SENS:FREQ:CONV:ARB 2,1,1E+9,SWE</pre> Convert the receiver frequency to the range between 3 GHz and 3.2 GHz.

[SENSe<Ch>:]FREQuency:CONVersion:ARBitrary:PMETer<Mtr> <numerator>, <denominator>, <offset>, CW | FIXEd | SWEEp

Defines the receiver frequency of a power meter used for frequency-converting measurements. The receiver frequency is either a range (for frequency sweeps) or a CW frequency (for power, time and CW Mode sweeps). The receiver frequency is valid for all ports.



The frequency formula is applied even if the analyzer returns an error message, because the frequency is outside the allowed range.

<Ch>	Channel number.
<Mtr>	Power meter number
<numerator> <denominator> <offset>	Parameters of the frequency formula. The receiver frequency f_r is calculated according to $f_r = \frac{\text{<numerator>}}{\text{<denominator>}} \cdot f_b + \text{<offset>}$ where f_b represents the channel base frequency (parameter SWEEp). For parameters CW or FIXEd, $f_b = 0$.



The conversion formula for f_r is ZVR-compatible but differs from manual control where the ratio <numerator>/<denominator> also multiplies the <offset>.

Range [def. unit]	The converted frequency or frequency range must be within the power meter's receive frequency range [Hz]. In addition the following restrictions apply: <numerator> – Values are rounded to positive or negative integer numbers; zero is not allowed [1] <denominator> – Values are rounded to positive integer numbers [1] <offset> – Values are rounded to (positive or negative) multiples of 1 Hz [Hz].

*RST value	The default frequency/frequency range corresponds to the sweep range or CW frequency of the analyzer, i.e. <numerator> = <denominator> = 1 <offset> = 0 Hz
Sweep Type Parameters	SWEep – The full formula is applied. For frequency sweeps, the command defines a sweep range. CW FIXed – The reduced formula with $f_b = 0$ is applied. $f_r = \text{<offset>}$; the command defines a fixed frequency.
*RST value	SWEep
SCPI, Command Types	Device-specific, command or query.
Example:	<pre>*RST; FREQ:STAR 1E+9; STOP 1.1E+9</pre> Reset the analyzer (activating a frequency sweep) and set the sweep range between 1 GHz and 1.1 GHz. <pre>SYST:COMM:RDEV:PMET1:DEF 'USB Power Meter', 'NRP-Z55', 'usb', '100045'</pre> Configure an R&S NRP power meter as external power meter no. 1, assigning the name USB Power Meter and an serial number 100045. <pre>SENS:FREQ:CONV:ARB:PMET 2,1,1E+9,SWE</pre> Convert the receiver frequency to the range between 3 GHz and 3.2 GHz.

[SENSE<Ch>:]FREQuency:CONVersion:AWReceiver[:STATe] <Boolean>

Qualifies whether a-waves (outgoing waves) are measured at the source or at the receiver frequency. The setting is relevant for all frequency-converting measurements.

<Ch>	Channel number.
<Boolean>	OFF - Measurement at source frequency ON - Measurement at receiver frequency
*RST value	ON
SCPI, Command Types	Device-specific, command or query.

Example:

```
FREQ:CONV:AWR ON
```

Measure a waves at the receiver frequency.

[SENSE<Ch>:]FREQuency:CONVersion:DEVIce:MODE RILI | RILE | RILI4 | RILI56

Selects the test setup (internal or external sources) for the frequency converter measurement (with option ZVA-K8, Converter Control).

The available test setups depend on the instrument type:

	RILI	RILE	RILI4	RILI56
R&S ZVA 24 40 50	x	x		

R&S ZVA 67		X	X	
R&S ZVT 20		X		X



This is a [global setting](#).

<Ch> Channel number. This suffix is ignored, the command affects all channels.

RILI *RF internal, LO internal (4-Port)*
Ports 1 and 2: Converter RF Signal
Ports 3 and 4: Converter LO

RILE *RF internal, LO external (4-Port)*
Ports 1 to 4: Converter RF Signal
External Generator #1: Converter LO

RILI4 *RF internal, LO internal, Port4=LO (R&S ZVA 67 only)*
Ports 1 and 2: Converter RF Signal
Port 4: Converter LO

RILI56 *RF internal, LO internal, 6-Port (R&S ZVT 20 only)*
Ports 1 to 4: Converter RF Signal
Ports 5 and 6: Converter LO

*RST value RILI

SCPI, Command Types Device-specific, command or query.

Example:

```
FREQ:CONV:DEV:NAME 'ZVA-Z110'
```

Select frequency converter type R&S ZVA-Z110.

```
SYST:COMM:RDEV:GEN1:DEF 'Ext. Gen. 1', 'SME02', 'gpi0', '21'
```

Configure an R&S SME02 generator as external generator no. 1, assigning the name Ext. Gen. 1 and a GPIB address 21.

```
FREQ:CONV:DEV:MODE RILE
```

Measure a waves at the receiver frequency.

[SENSE<Ch>:]FREQuency:CONVersion:DEVIce:NAME '<Converter Type>'

Selects the frequency converter type for enhanced frequency-converting measurements (with option ZVA-K8, Converter Control). The preset configuration will be reset to *Instrument* scope (`SYSTem:PRESet:SCOPE ALL`) and *Factory Preset* (`SYSTem:PRESet:USER:STATe OFF`).



This is a [global setting](#).

<Ch> Channel number. This suffix is ignored, the command affects all channels.

'<Converter Type>' 'ZVA-Z110' - Frequency converter R&S ZVA-Z110
" - No frequency converter selected

*RST value OFF

SCPI, Command Types Device-specific, command or query.

Example:

See `[SENSe<Ch>:]FREQuency:CONVersion:DEVIce:MODE`

[SENSe<Ch>:]FREQuency:CONVersion:DEVIce:PCOefficient<Port> <C0>, <C1>, <C2>, <C3>

Defines power coefficients for frequency converters R&S ZVA-ZxxxE.



*This is a **global setting**.*

<Ch> Channel number. This suffix is ignored, the command affects all channels.

<Port> NWA port number

<C0>, <C1>, <C2>, <C3> Coefficient of order 0, 1, 2, and 3.

Range [def. unit] -500 to +500 [-].

*RST value Depending on the individual converter

SCPI, Command Types Device-specific, command or query.

Example:

See `[SENSe<Ch>:]FREQuency:CONVersion:DEVIce:PCOefficient:DEFault`

[SENSe<Ch>:]FREQuency:CONVersion:DEVIce:PCOefficient<Port>:DEFault <Boolean>

Enables or disables default power coefficients for frequency converters R&S ZVA-ZxxxE.



*This is a **global setting**.*

<Ch> Channel number. This suffix is ignored, the command affects all channels.

<Port> NWA port number. This suffix is ignored because the command affects all ports.

<Boolean> ON - Use default power coefficients
OFF - Use power coefficients defined via `[SENSe<Ch>:]FREQuency:CONVersion:DEVIce:PCOefficient<Port>`

*RST value ON

SCPI, Command Types Device-specific, command or query.

Example:

`FREQ:CONV:DEV:NAME 'ZVA-Z110E'`

Select frequency converter type R&S ZVA-Z110E.

`FREQ:CONV:DEV:PCO3:DEF OFF`

`FREQ:CONV:DEV:PCO3 0.5479,0.03426,-0.002866,2.124E-006`

Re-define the power coefficients for port 3 according to the connected converter unit.

```
FREQ:CONV:DEV:PCO3:DEF ON
```

Use default power coefficients for all ports.

```
FREQ:CONV:DEV:PCO3?
```

Query the default power coefficients for port 3. The analyzer returns the predefined values (generally different from the coefficients entered above).

[SENSe<Ch>:]FREQuency:CONVersion:GAIN:LMCorrection <Boolean>

Enables the load match correction for frequency conversion measurements. The load match correction requires an enabled Enhanced Wave Correction ([SENSe<Ch>:]CORRection:EWAVE[:STATE] ON).

<Ch>	Channel number.
<Boolean>	ON OFF - Enable or disable load match correction
*RST value	OFF
SCPI, Command Types	Device-specific, command or query.

Example:

```
SENSe1:CORRection:EWAVE:STATE ON
```

Activate enhanced wave correction for channel 1.

```
SENSe1:FREQuency:CONVersion:GAIN:LMCorrection ON
```

Activate load match correction for frequency conversion measurements.

[SENSe<Ch>:]FREQuency:CONVersion:HARMonic:ORDER <order>

Selects the order of the harmonic measured if a harmonic measurement is enabled ([SENSe<Ch>:]FREQuency:CONVersion HARMonic).

<Ch>	Channel number.
<order>	Order of the harmonic, integer multiple of the fundamental frequency measured.
Range [def. unit]	2 to 100 [–].
*RST value	2
SCPI, Command Types	Device-specific, command or query.

Example:

```
See [SENSe<Ch>:]FREQuency:CONVersion
```

[SENSe<Ch>:]FREQuency:CONVersion:HARMonic:RELative <Boolean>

Enables or disables the relative harmonic measurement where the harmonic is divided by the fundamental wave.



With enabled relative measurement the analyzer creates a new channel and a new (mathematical) trace; see program example for [\[SENSe<Ch>:\]FREQuency:CONVersion](#).

<Ch>	Channel number.
<Boolean>	Enable (ON) or disable (OFF) the relative harmonic measurement.
*RST value	OFF
SCPI, Command Types	Device-specific, command or query.
Example:	See [SENSe<Ch>:]FREQuency:CONVersion

[SENSe<Ch>:]FREQuency:CONVersion:HARMonic:RPORT <port_no>

Selects the receive port for the harmonic measurement.

<Ch>	Channel number.
<port_no>	Integer port number.
Range [def. unit]	Depending on the analyzer model [–].
*RST value	2
SCPI, Command Types	Device-specific, command or query.
Example:	See [SENSe<Ch>:]FREQuency:CONVersion

[SENSe<Ch>:]FREQuency:CONVersion:HARMonic:SPORT <port_no> | <ext. gen. no.>

Selects the source port for the harmonic measurement.

<Ch>	Channel number.
<port_no>	Positive integer analyzer port number.
<ext. gen. no.>	Negative integer external generator number (the minus sign serves as an identifier for external generators; –1 denotes the external generator no. 1)
Range [def. unit]	Depending on the analyzer model and the number of external generators [–].
*RST value	1
SCPI, Command Types	Device-specific, command or query.
Example:	See [SENSe<Ch>:]FREQuency:CONVersion

[SENSe<Ch>:]FREQuency:CONVersion:MIXer...

This subsystem controls the analyzer's mixer measurement mode. Together with the [Harmonic Distortion](#) measurement, the [intermodulation](#) measurement, and the arbitrary configuration of generator and receiver

frequencies ([Port Configuration](#)), the mixer mode is included in option R&S ZVA-K4.



Deprecated and generalized mixer commands

With firmware version V2.90, the mixer measurement has been extended to support a second mixer stage and frequency converters in the RF and LO signal paths. To account for these changes, a new set of mixer commands has been introduced. The old mixer commands (marked as deprecated commands in this documentation) are still supported, however, it is recommended to use the new command set listed below.

- [SENSe<Ch>:]FREQuency:CONVersion:MIXer:AEXternal NONE
- [SENSe<Ch>:]FREQuency:CONVersion:MIXer:AINternal NONE
- [SENSe<Ch>:]FREQuency:CONVersion:MIXer:APORT
- [SENSe<Ch>:]FREQuency:CONVersion:MIXer:FIXed<Sig>
- [SENSe<Ch>:]FREQuency:CONVersion:MIXer:FUNDamental
(replaces SOURce<Ch>:FREQuency<Pt>:CONVersion:MIXer:FUNDamental)
- [SENSe<Ch>:]FREQuency:CONVersion:MIXer:IFPort
- [SENSe<Ch>:]FREQuency:CONVersion:MIXer:LOMultiplier<Stg>
- [SENSe<Ch>:]FREQuency:CONVersion:MIXer:LOPort<Stg>
(replaces [SENSe<Ch>:]FREQuency:CONVersion:MIXer:LOEXternal and [SENSe<Ch>:]FREQuency:CONVersion:MIXer:LOInternal)
- [SENSe<Ch>:]FREQuency:CONVersion:MIXer:MFFixed
(replaces [SENSe<Ch>:]FREQuency:CONVersion:MIXer:FFIXed, [SENSe<Ch>:]FREQuency:CONVersion:MIXer:RFFixed, [SENSe<Ch>:]FREQuency:CONVersion:MIXer:IFFixed, and [SENSe<Ch>:]FREQuency:CONVersion:MIXer:LOFixed)
- [SENSe<Ch>:]FREQuency:CONVersion:MIXer:RFMultiplier
- [SENSe<Ch>:]FREQuency:CONVersion:MIXer:RFPort
- [SENSe<Ch>:]FREQuency:CONVersion:MIXer:STAGes
- [SENSe<Ch>:]FREQuency:CONVersion:MIXer:TFRrequency<Stg>
- SOURce<Ch>:FREQuency<Pt>:CONVersion:MIXer:PMFixed
(replaces SOURce<Ch>:FREQuency<Pt>:CONVersion:MIXer:PFIXed and SOURce<Ch>:FREQuency<Pt>:CONVersion:MIXer:PAFixed)
- SOURce<Ch>:FREQuency<Pt>:CONVersion:MIXer:PMODE

[SENSe<Ch>:]FREQuency:CONVersion:MIXer:AEXternal NONE | <gen_number>

Selects an external generator as a signal source for the Aux LO signal in a vector mixer measurement (option R&S ZVA-K5). The Aux LO signal is fed to the MEAS and REF mixers.

<Ch>	Channel number
NONE	LO signal is not controlled by the analyzer.
<gen_number>	Number of external generator as defined in the <i>System Configuration – External Generators</i> dialog.
*RST value	NONE
SCPI, Command	Device-specific, command or query

Types**Example:**See [SOURce<Ch>:FREQuency:CONVersion:MIXer:PAFixed](#)**[SENSE<Ch>:]FREQuency:CONVersion:MIXer:AINternal NONE | <port_number>**

Selects an analyzer port as a signal source for the Aux LO signal in a vector mixer measurement (option R&S ZVA-K5). The Aux LO signal is fed to the MEAS and REF mixers.

<Ch>	Channel number
NONE	LO signal is not controlled by the analyzer.
<port_number>	Analyzer port number
Range [def. unit]	3 (for 3-port analyzers), 3, 4 (for 4-port analyzers) No internal source is available for 2-port instruments.
*RST value	NONE
SCPI, Command Types	Device-specific, command or query

Example:See [SOURce<Ch>:FREQuency:CONVersion:MIXer:PAFixed](#)**[SENSE<Ch>:]FREQuency:CONVersion:MIXer:APOrt <port_number>**

Selects the *Aux Mixer* port (and thus the basic test setup) for vector mixer measurements (option R&S ZVA-K5).

<Ch>	Channel number
<port_number>	Analyzer port number 1 or 2
Range [def. unit]	1 or 2
*RST value	2
SCPI, Command Types	Device-specific, command or query

Example:See [SOURce<Ch>:FREQuency:CONVersion:MIXer:PAFixed](#)**[SENSE<Ch>:]FREQuency:CONVersion:MIXer:FFIXed <fixed_frequency>**

[Deprecated command, replaced by [\[SENSE<Ch>:\]FREQuency:CONVersion:MIXer:MFFixed](#)]

Defines a fixed frequency, to be assigned to the RF, LO 1, or to the IF signal ([\[SENSE<Ch>:\]FREQuency:CONVersion:MIXer:FIXed<Stg>](#)).

<Ch>	Channel number
<fixed_frequency>	Fixed frequency
Range [def. unit]	Depending on the instrument model [Hz]. The increment (parameters UP or DOWN) is 0.1 kHz.
*RST value	Minimum of the analyzer's frequency range, f_{MIN}
SCPI, Command	Device-specific, command or query

Types**Example:**

```
*RST; FREQ:CONV:MIX:FFIX 1 GHz
```

Reset the analyzer and specify a fixed frequency of 1 GHz.

```
FREQ:CONV:MIX:RFSource 1; IFSource 2
```

Select the analyzer port 1 as a source port for the RF signal, port 2 as a receive port for the IF signal.

```
FREQ:CONV:MIX:FIX RF
```

Assign the fixed frequency to the RF signal. The fundamental frequency is automatically assigned to the LO signal.

```
FREQ:CONV:MIX:FUND?
```

Query the assignment of the fundamental frequency to prove the last statement. The response is LO.

[SENSe<Ch>:]FREQuency:CONVersion:MIXer:FIXed<Sig> RF | LO | LO1 | LO2 | IF

Selects the mixer input or output signals which are at fixed frequency. The fixed frequencies are defined via [\[SENSe<Ch>:\]FREQuency:CONVersion:MIXer:MFFixed](#).

<Ch>	Channel number
<Sig>	Counter for fixed signal (1 if only one mixer stage is used, 1 or 2 for 2 mixer stages)
Parameters	RF – mixer input signal LO LO1 – local oscillator signal no. 1 LO2 – local oscillator signal no. 2, for 2-stage mixer measurements ([SENSe<Ch>:]FREQuency:CONVersion:MIXer:STAGes) IF – mixer output signal
*RST value	LO
SCPI, Command Types	Device-specific, command or query
Example:	See [SENSe<Ch>:]FREQuency:CONVersion:MIXer:MFFixed

[SENSe<Ch>:]FREQuency:CONVersion:MIXer:FUNDamental RF | LO | LO1 | LO2 | IF

Selects the mixer input or output signal which is at the channel base frequency, to be defined via [\[SENSe<Ch>:\]FREQuency:START](#), [\[SENSe<Ch>:\]FREQuency:STOP](#), [\[SENSe<Ch>:\]FREQuency:CW](#) etc..

<Ch>	Channel number
Parameters	RF – mixer input signal LO LO1 – local oscillator signal no. 1 LO2 – local oscillator signal no. 2, for 2-stage mixer measurements ([SENSe<Ch>:]FREQuency:CONVersion:MIXer:STAGes)

*RST value IF – mixer output signal
 RF

SCPI, Command Types Device-specific, command or query

Example: See `[SENSe<Ch>:]FREQuency:CONVersion:MIXer:MFFixed`

[SENSe<Ch>:]FREQuency:CONVersion:MIXer:IFFixed <fixed freq>

[Deprecated command, replaced by `[SENSe<Ch>:]FREQuency:CONVersion:MIXer:MFFixed`]

Defines a fixed frequency and assigns it to the IF signal (for alternative commands see example below).

<Ch> Channel number

<fixed freq> Fixed frequency.

Range [def. unit] Depending on the [instrument model](#) [Hz]. The increment (parameters UP or DOWN) is 0.1 kHz.

*RST value Minimum of the analyzer's frequency range, f_{MIN}

SCPI, Command Types Device-specific, command or query

Example: `*RST; FREQ:CONV:MIX:IFF 1 GHz`

Reset the analyzer and specify a fixed frequency of 1 GHz, to be assigned to the IF signal.

`FREQ:CONV:MIX:FFIX?; FIX?`

Query the fixed frequency and the signal assignment using the alternative commands. The response is `1000000000; IF`.

[SENSe<Ch>:]FREQuency:CONVersion:MIXer:IFPort <port_number>

Selects an analyzer port as receive port for the IF signal.

 *For mixer delay measurements and vector mixer measurements (options R&S ZVA-K5, R&S ZVA-K9, R&S ZVA-K10), the IF signal must be measured at port 2.*

<Ch> Channel number

<port_number> Analyzer port number (physical port)

Range [def. unit] 1 to number of analyzer ports [1].

*RST value 2

SCPI, Command Types Device-specific, command or query

Example: See `[SENSe<Ch>:]FREQuency:CONVersion:MIXer:MFFixed`

[SENSe<Ch>:]FREQuency:CONVersion:MIXer:LOEXternal NONE | <gen_number> | SOURce1 | SOURce2

[Deprecated command, replaced by [\[SENSe<Ch>:\]FREQuency:CONVersion:MIXer:LOPort<Stg>\]](#)

Selects an external generator as a signal source for the LO signal (external source).

<Ch>	Channel number
NONE	LO signal is not controlled by the analyzer.
<gen_number>	Number of external generator as defined in the <i>System Configuration – External Generators</i> dialog.

*RST value NONE

SCPI, Command Types Device-specific, command or query

Example:

```
FREQ:CONV:MIX:LOEX 1
```

Select the generator no. 1 as a signal source for the LO signal. An error message -222,"Data out of range..." is generated unless an external generator is available.

[SENSe<Ch>:]FREQuency:CONVersion:MIXer:LOFixed <fixed_frequency>

[Deprecated command, replaced by [\[SENSe<Ch>:\]FREQuency:CONVersion:MIXer:MFFixed\]](#)

Defines a fixed frequency and assigns it to the LO signal (for alternative commands see example below).

<Ch>	Channel number
<fixed_frequency>	Fixed frequency
Range [def. unit]	Depending on the instrument model [Hz]. The increment (parameters UP or DOWN) is 0.1 kHz.
*RST value	Minimum of the analyzer's frequency range, f_{MIN}

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; FREQ:CONV:MIX:LOF 1 GHz
```

Reset the analyzer and specify a fixed frequency of 1 GHz, to be assigned to the LO signal.

```
FREQ:CONV:MIX:FFIX?; FIX?
```

Query the fixed frequency and the signal assignment using the alternative commands. The response is 1000000000;LO.

[SENSe<Ch>:]FREQuency:CONVersion:MIXer:LOInternal NONE | <port_number>

[Deprecated command, replaced by [\[SENSe<Ch>:\]FREQuency:CONVersion:MIXer:LOPort<Stg>\]](#)

Selects an analyzer port as a signal source for the LO signal (internal source).

<Ch>	Channel number
NONE	LO signal is not controlled by the analyzer.
<port_number>	Analyzer port number
Range [def. unit]	3 (for 3-port analyzers), 3, 4 (for 4-port analyzers) No internal source is available for 2-port instruments.
*RST value	NONE
SCPI, Command Types	Device-specific, command or query
Example:	<pre>FREQ:CONV:MIX:LOIN 3</pre> Select port no. 3 as a signal source for the LO signal.

[SENSe<Ch>:]FREQuency:CONVersion:MIXer:LOMultiplier<Stg> <numerator>, <denominator>

Selects the frequency conversion factors for the LO 1 or LO 2 signal.



The frequency conversion factors for vector mixer measurements (options R&S ZVA-K5) must be equal to 1.

<Ch>	Channel number
<Stg>	Mixer stage (signals LO 1 or LO 2; see [SENSe<Ch>:]FREQuency:CONVersion:MIXer:STAGes)
<numerator>, <denominator>	The conversion factor is a ratio of two integer numbers
Range [def. unit]	1, 2, 3 ... [1]
*RST value	1
SCPI, Command Types	Device-specific, command or query
Example:	See [SENSe<Ch>:]FREQuency:CONVersion:MIXer:MFFixed

[SENSe<Ch>:]FREQuency:CONVersion:MIXer:LOPort<Stg> NONE | EMBedded | PORT, <port_number> | GENERator, <gen_number>

Selects an analyzer or an external generator port as a signal source for the LO 1 or LO 2 signal.



For mixer delay measurements and vector mixer measurements (options R&S ZVA-K5, R&S ZVA-K9, R&S ZVA-K10), ports 1 and 2 are reserved for the RF and IF signals, respectively. Only a single mixer stage (<Stg> = 1) is supported.

<Ch>	Channel number
<Stg>	Mixer stage (signals LO 1 or LO 2; see [SENSe<Ch>:]FREQuency:CONVersion:MIXer:STAGes)
NONE	LO signal is not controlled by the analyzer.
EMBEdded	LO is embedded in the DUT, and not controlled by or synchronized with the

PORT,
<port_number>

Range [def. unit] 1 to number of analyzer ports [1]

*RST value NONE

SCPI, Command
Types

Example: See [\[SENSe<Ch>:\]FREQuency:CONVersion:MIXer:MFFixed](#)

[SENSe<Ch>:]FREQuency:CONVersion:MIXer:MFFixed RF | LO | LO1 | LO2 | IF, <fixed_frequency>

Assigns a fixed frequency to the RF, LO 1, LO 2, or to the IF signal. The fixed frequency setting becomes active if the port is selected as a port with fixed frequency

([\[SENSe<Ch>:\]FREQuency:CONVersion:MIXer:FIXed<Stg>](#)).

<Ch> Channel number

Port parameters RF – mixer input signal
LO | LO1 – local oscillator signal no. 1
LO2 – local oscillator signal no. 2, for 2-stage mixer measurements
([\[SENSe<Ch>:\]FREQuency:CONVersion:MIXer:STAGes](#))
IF – mixer output signal

<fixed_frequency> Fixed frequency for the specified port

Range [def. unit] Depending on the [instrument model](#) [Hz]. The increment (parameters UP or DOWN) is 0.1 kHz.

*RST value Minimum of the analyzer's frequency range, f_{MIN}

SCPI, Command
Types

Example:

The following example assume a four-port analyzer with independent source ports no. 1 and 3. Moreover, an external generator *Gen 1* must be connected to the analyzer and configured.

```
FREQ:CONV MIXER
```

Activates scalar mixer measurement.

```
*RST; FREQ:CONV:MIX:STAG 2
```

Select a mixer measurement with two mixer stages.

```
FREQ:CONV:MIX:RFPort 1; IFPort 2
```

Select the analyzer port 1 as a source port for the RF signal, port 2 as a receive port for the IF signal.

```
FREQ:CONV:MIX:LOPort PORT, 3; LOPort2 GEN, 1
```

Select port 3 as source port for the local oscillator LO1 and generator 1 as source for LO 2.

```
FREQ:CONV:MIX:RFMultiplier 2, 1; LOMultiplier1 2, 1; LOMultiplier2 2, 1
```

Define frequency conversion factors 2 for the RF signals and the LO signals.

```
FREQ:START 1GHz; STOP 2 GHz
```

Select a sweep range between 1 and 2 GHz.

```
FREQ:CONV:MIX:FIXed1 LO1; FIXed2 LO2
```

Assign fixed frequency settings to the two LO signals.

```
FREQ:CONV:MIX:FUNDamental RF; MFFixed LO1, 10 MHz; MFFixed LO2, 10 MHz
```

Assign the channel base frequency (sweep range) to the RF signal, fixed frequencies of 10 MHz to both LO signals.

```
FREQ:CONV:MIX:TFrequency1 DCUP; TFrequency2 UCON
```

Select down-conversion (USB) at the first mixer-stage, up-conversion (USB) at the second mixer stage.

```
SOUR:FREQ:CONV:MIX:PMODE RF, FUNDamental; PMODE LO1, FIXed; PMODE LO2, FIXed; PMODE IF, FUNDamental
```

Assign the channel base power to the RF and IF signals, a fixed power to the LO signals.

```
SOUR:FREQ:CONV:MIX:PMFixed LO1, -20; PMFixed LO2, -10
```

Define the fixed powers of the LO signals.

[SENSe<Ch>:]FREQuency:CONVersion:MIXer:PRFImage <Boolean>

Prepares an additional mixer measurement at the second RF frequency (range) that the mixer converts to the selected IF frequency ([RF Image Frequency](#)).

<Ch>	Channel number
<Boolean>	ON OFF – enable or disable RF image measurement.
*RST value	OFF
SCPI, Command Types	Device-specific, command or query
Example:	See [SENSe<Ch>:]FREQuency:CONVersion:MIXer:MFFixed

[SENSe<Ch>:]FREQuency:CONVersion:MIXer:RFFixed <fixed_frequency>

[Deprecated command, replaced by [\[SENSe<Ch>:\]FREQuency:CONVersion:MIXer:MFFixed](#)]

Defines a fixed frequency and assigns it to the RF signal (for alternative commands see example below).

<Ch>	Channel number
<fixed_frequency>	Fixed frequency.
Range [def. unit]	Depending on the instrument model [Hz]. The increment (parameters UP or DOWN) is 0.1 kHz.
*RST value	Minimum of the analyzer's frequency range, f_{MIN}
SCPI, Command Types	Device-specific, command or query
Example:	*RST; FREQ:CONV:MIX:RFF 1 GHz

Reset the analyzer and specify a fixed frequency of 1 GHz, to be assigned to the RF signal.

```
FREQ:CONV:MIX:FFIX?; FIX?
```

Query the fixed frequency and the signal assignment using the alternative commands. The response is 1000000000;RF.

[SENSe<Ch>:]FREQuency:CONVersion:MIXer:RFMultiplier <numerator>, <denominator>

Selects the frequency conversion factor for the RF signal.



The frequency conversion factors for vector mixer measurements (options R&S ZVA-K5) must be equal to 1.

<Ch>	Channel number
<numerator>, <denominator>	The conversion factor is a ratio of two integer numbers
Range [def. unit]	1, 2, 3 ... [1]
*RST value	1
SCPI, Command Types	Device-specific, command or query

Example:

See [\[SENSe<Ch>:\]FREQuency:CONVersion:MIXer:MFFixed](#)

[SENSe<Ch>:]FREQuency:CONVersion:MIXer:RFPort <port_number>

Selects an analyzer port as source port for the RF signal.



For mixer delay measurements and vector mixer measurements (options R&S ZVA-K5, R&S ZVA-K9, R&S ZVA-K10), the RF signal must be generated at port 1.

<Ch>	Channel number
<port_number>	Analyzer port number (physical port)
Range [def. unit]	1 to number of analyzer ports [1].
*RST value	1
SCPI, Command Types	Device-specific, command or query

Example:

See [\[SENSe<Ch>:\]FREQuency:CONVersion:MIXer:MFFixed](#)

[SENSe<Ch>:]FREQuency:CONVersion:MIXer:STAGes <mixers>

Selects the number of converter/mixer stages for scalar mixer measurements and intermodulation distortion measurements.



For mixer delay measurements and vector mixer measurements (options R&S ZVA-K5, R&S ZVA-K9,

R&S ZVA-K10), a single mixer stage is supported only.

<Ch> Channel number

<mixers>

Range [def. unit] 1 | 2 [-]

*RST value 1

SCPI, Command Types Device-specific, command or query

Example: See [\[SENSe<Ch>:\]FREQuency:CONVersion:MIXer:MFFixed](#)

[SENSe<Ch>:]FREQuency:CONVersion:MIXer:TFRrequency<Stg> DCLower | DCUPper | UCONversion | BAND1 | BAND2

Selects the frequency conversion modes of the IF signal.

<Ch> Channel number

<Stg> Mixer stage (1 or 2; see [\[SENSe<Ch>:\]FREQuency:CONVersion:MIXer:STAGes](#))

DCLower IF = LO – RF (down conversion lower sideband, equivalent to BAND1)

DCUPper IF = RF – LO (down conversion upper sideband, equivalent to BAND2)

UCONversion IF = LO + RF (up conversion)

*RST value DCUPper

SCPI, Command Types Device-specific, command or query

Example: *RST; FREQ:CONV:MIX:LOF 3 GHz

Reset the analyzer and specify a fixed frequency of 1 GHz, to be assigned to the LO signal.

FREQ:STAR 1 GHz; STOP 2 GHz

Define a sweep range between 3 and 4 GHz, to be assigned to the RF signal.

FREQ:CONV:MIX:TFR DCL

Select down conversion to the lower sideband, corresponding to an IF frequency range between 2 GHz and 1 GHz.

[SENSe<Ch>:]FREQuency...

This subsystem sets frequency-related parameters, especially the measurement and display ranges for the different sweep types, and controls the harmonic distortion measurement.

Note: For a frequency sweep the range can be defined alternatively by a combination of Start/Stop frequencies or a Center frequency and Span. In fixed frequency mode (power sweep or Time/CW Mode; see [\[SENSe<Chn>:\]FUNCTion\[:ON\]](#)) the measurement frequency is set by means of [\[SENSe<Ch>:\]FREQuency:CW|FIXed](#).

[SENSe<Ch>:]FREQuency[:CW]:FIXed <CW_frequency>

Defines the fixed (Continuous Wave, CW) frequency for all sweep types operating at fixed frequency (power sweep, time sweep, CW mode sweep). The two command forms `FREQ:CW` and `FREQ:FIX` are equivalent.



[SENSe<Ch>:]FREQuency:CW|FIXed is equivalent to

SOURce<Ch>:FREQuency<Pt>:CW|FIXed. Source and receiver frequency are equal; the four commands overwrite each other. With option ZVA-K4, Frequency Conversion, independent offset frequencies can be defined for the source and receiver frequencies; see

SOURce<Ch>:FREQuency<Pt>:CONVersion:ARBitrary:IFrequency and [SENSe<Ch>:]FREQuency:CONVersion:ARBitrary.

<Ch> Channel number.

<CW_frequency> Fixed stimulus and analyzer frequency.

Range [def. unit] Depending on the [instrument model](#) [Hz]. The increment (parameters UP or DOWN) is 0.1 kHz.

*RST value 1 GHz

SCPI, Command Types Confirmed, command or query.

Example:

```
FUNC "XPOW:POW:A1"
```

Activate a power sweep and select the wave quantity a1 as measured parameter for channel and trace no. 1.

```
FREQ:CW 100MHz
```

Set the CW frequency to 100 MHz.

[SENSe<Ch>:]FREQuency:LPNoise <Boolean>

Enables or disables the *Low Phase Noise* function.



The "Low Phase Noise" function is only available for older synthesizer generations with [coupled test ports](#).

The latest synthesizer generations of ZVA67 and of ZVA24/40 with 4 ports and 4 sources do not offer this setting.

<Ch> Channel number.

<Boolean> ON | OFF - Low phase noise on or off.

*RST value OFF

SCPI, Command Types Device-specific, command or query.

Example:

```
FREQ:LPN ON
```

Enable the *Low Phase Noise* function.

[SENSe<Ch>:]FREQuency:MODE SWEep | SEGMENT | CW | FIXed

[Deprecated command; [SENSe<Ch>:]SWEep:TYPE provides a complete list of sweep types.]

Selects the sweep type and defines which set of commands controls the stimulus frequency.

<Ch>	Channel number.
SWEep	Linear or logarithmic frequency sweep, depending on the selected spacing ([SENSe<Ch>:]SWEep:SPACing LINear LOGarithmic). The frequency range is set via [SENSe<Ch>:]FREQuency:START etc.
SEGMENT	Segmented frequency sweep. The sweep range is composed of several continuous frequency ranges or single frequency points defined by means of the commands in the [SENSe<Ch>:]SEGMENT<Seg>... subsystem.
CW FIXed	Time sweep. The measurement is performed at constant frequency ([SENSe<Ch>:]FREQuency:CW FIXed) and repeated over a specified period of time at constant time intervals.
*RST value	SWEep
SCPI, Command Types	Confirmed (with device-specific *RST value and parameters), command or query.
Example:	<pre>FREQ:MODE CW</pre> Activate a time sweep. <pre>FREQ:CW 100MHz</pre> Set the CW frequency to 100 MHz.

[SENSe<Ch>:]FREQuency<Pt>:OFFSet:PWAVes <offset>

Defines the constant receiver frequency offset for primed wave quantities relative to the common receiver frequency.

<Ch>	Channel number.
<Pt>	Test port number of the analyzer.
<offset>	Frequency offset.
Range [def. unit]	Depending on the instrument model [Hz]. The increment (parameters UP or DOWN) is 1 kHz.
*RST value	0 Hz
SCPI, Command Types	Device-specific, command or query.
Example:	<pre>FREQ:STAR 2GHz; STOP 3 GHz</pre> Define a sweep range between 2 GHz and 3 GHz. <pre>FREQ:OFFS:PWAV 10kHz; WAV 20kHz</pre> Modify the receiver frequency settings.

[SENSe<Ch>:]FREQuency<Pt>:OFFSet:WAVes <offset>

Defines the constant receiver frequency offset for **unprimed** wave quantities relative to the common receiver frequency.



The offset for unprimed waves is not displayed in the Port Configuration dialog.

<Ch>	Channel number.
<Pt>	Test port number of the analyzer.
<offset>	Frequency offset.
Range [def. unit]	Depending on the instrument model [Hz]. The increment (parameters UP or DOWN) is 1 kHz.
*RST value	0 Hz
SCPI, Command Types	Device-specific, command or query.

Example:

See [\[SENSe<Ch>:\]FREQuency<Pt>:OFFSet:PWAVes](#)

[SENSe<Ch>:]FREQuency:SBAND POSitive | NEGative | AUTO

Defines whether the analyzer measures with a local oscillator frequency LO below or above the RF input frequency.



In a segmented frequency sweep, it is possible to set the sideband (SBAND) parameter individually for each segment; see [\[SENSe<Ch>:\]SEGment<Seg>:DEFine](#). The [\[SENSe<Ch>:\]FREQuency:SBAND](#) setting is global and not valid for segmented sweeps. The two sideband settings do not overwrite each other.

<Ch>	Channel number.
POSitive	The LO frequency is always above the measured RF frequency.
NEGative	The LO frequency is always below the measured RF frequency.
AUTO	The analyzer auto-selects the local oscillator frequency, depending on the receiver (RF) frequency and the test port.
*RST value	AUTO
SCPI, Command Types	Device-specific, command or query.

Example:

*RST; :SWE:TYPE?; :FREQ:SBAND?

Query the *RST values for the sweep type and the sideband setting. The response is *LIN* (linear frequency sweep) and *AUTO* (automatic setting of the LO frequency).

**[SENSe<Ch>:]FREQuency:SPAN **

Defines the width of the measurement and display range for a frequency sweep.

<Ch>	Channel number.

	Frequency span of the sweep.
Range [def. unit]	Depending on the instrument model [Hz]. The increment (parameters UP or DOWN) is 0.1 kHz.
*RST value	Maximum frequency range of the analyzer: $f_{\text{MAX}} - f_{\text{MIN}}$
SCPI, Command Types	Confirmed, command or query.
Example:	See [SENSe<Ch>:]FREQuency:CENTer

Note: The measurement range defined by means of the span and the current center frequency ([\[SENSe<Ch>:\]FREQuency:CENTer](#)), must not exceed the allowed frequency range of the analyzer. If necessary, the center frequency is adjusted to $f_{\text{MIN}} + \text{Span}/2$ or $f_{\text{MAX}} - \text{Span}/2$.

[SENSe<Ch>:]FREQuency:START <start_frequency>

Defines the start frequency for a frequency sweep which is equal to the left edge of a Cartesian diagram.

<Ch>	Channel number.
<start_frequency>	Start frequency of the sweep.
Range [def. unit]	Depending on the instrument model [Hz]. The increment (parameters UP or DOWN) is 0.1 kHz.
*RST value	Minimum frequency of the analyzer: MIN
SCPI, Command Types	Confirmed, command or query.
Example:	See [SENSe<Ch>:]FREQuency:STOP

Note: If the start frequency entered is greater than the current stop frequency ([\[SENSe<Ch>:\]FREQuency:STOP](#)), the stop frequency is set to the start frequency plus the minimum frequency span ([\[SENSe<Ch>:\]FREQuency:SPAN](#)).

[SENSe<Ch>:]FREQuency:STOP <stop_frequency>

Defines the stop frequency for a frequency sweep which is equal to the right edge of a Cartesian diagram.

<Ch>	Channel number.
<stop_frequency>	Stop frequency of the sweep.
Range [def. unit]	Depending on the instrument model [Hz]. The increment (parameters UP or DOWN) is 0.1 kHz.
*RST value	Maximum frequency of the analyzer: MAX
SCPI, Command Types	Confirmed, command or query.
Example:	<pre>*RST; :SENS:FREQ:STAR 100000</pre>

Activate a frequency sweep and set the start frequency to 100 kHz.

```
FREQ:STOP 10MHz
```

Set the stop frequency to 10 MHz.

Note: If the stop frequency entered is smaller than the current start frequency ([SENSe<Ch>:FREQUency:START), the start frequency is set to the stop frequency minus the minimum frequency span ([SENSe<Ch>:FREQUency:SPAN).

[SENSe<Ch>]:FREQUency:IMODulation...

This subsystem controls the analyzer's intermodulation measurement mode. Together with the [Harmonic Distortion](#) measurement, the [mixer](#) measurement, and the arbitrary configuration of generator and receiver frequencies ([Port Configuration](#)), the intermodulation measurement is included in option R&S ZVA-K4.

[SENSe<Ch>]:FREQUency:IMODulation:COMBiner[:STATe] <Boolean>

Enables or disables the internal combiner

- for network analyzers R&S ZVA connected to an Extension Unit R&S ZVAX24 or R&S ZVAX-TRM with installed combiner option
- for network analyzers R&S ZVT connected to an Extension Unit R&S ZVAX-TRM with installed combiner option
- for network analyzers R&S ZVT20 that are equipped with option R&S ZVT20-B11

The internal combiner requires the following port configuration: Lower Tone: Port 1, Upper Tone: Port 3 (see example).

<Ch>	Channel number. If unspecified the numeric suffix is set to 1.
<Boolean>	ON OFF – enables or disables the measurement using the internal combiner
*RST value	ON (for <Im> = 3), OFF (for <Im> > 3)
SCPI, Command Types	Device-specific, command or query.

Example:

```
*RST; FREQ:IMOD:LTON PORT,1
```

Select port 1 as a source port for the lower tone.

```
FREQ:IMOD:UTON PORT,3
```

Select port 3 as a source port for the upper tone.

```
FREQ:IMOD:COMB ON
```

Enable internal combiner.

[SENSe<Ch>]:FREQUency:IMODulation:CONVersion OFF

Disables the intermodulation measurement and switches back to normal (non frequency-converting) mode.

<Ch>	Channel number.
OFF	Disable intermodulation measurement
*RST value	OFF
SCPI, Command Types	Device-specific, no query.

Example:See `[SENSe<Ch>:]FREQuency:IMODulation:LTONE`**[SENSe<Ch>:]FREQuency:IMODulation:LTONE PORT, <source_no>**

Selects the source for the lower tone signal that is used for the intermodulation measurement. Please note that external generators are not allowed to drive the lower tone signal.

<Ch>	Channel number.
Parameters	Lower tone source: PORT – internal source at port <source_no>
<source_no>	Number of the internal port
Range [def. unit]	1 to port number of the analyzer [–]
*RST value	– (for all parameters)
SCPI, Command Types	Device-specific, command or query.

Example:

```
*RST; FREQ:IMOD:LTON PORT,1
```

Select port 1 as a source port for the lower tone.

```
FREQ:IMOD:UTON PORT,3
```

Select port 3 as a source port for the upper tone.

```
FREQ:IMOD:TTO EDEV
```

Select *External Device* as a source port for the two tone signal.

```
FREQ:IMOD:REC 2
```

Select port 2 as the receiver port for the intermodulation measurement.

```
FREQ:IMOD:TDIS 2E6
```

Select a tone distance of 2 MHz.

```
FREQ:IMOD:ORD3 ON; ORD5 ON; ORD7 OFF; ORD9 OFF
```

Enable the measurement of the intermodulation products up to the 5th order.

```
...
```

(Perform intermodulation measurement, evaluate results.)

```
FREQ:IMOD:CONV OFF
```

Disable intermodulation measurement, switch back to normal (non frequency-converting) mode.

[SENSe<Ch>:]FREQuency:IMODulation:ORDER<Im>[:STATe] <Boolean>

Enables or disables the measurement of the intermodulation products of order <IM order>.

<Ch>	Channel number.
<Im>	Order of IM products
Range [def. unit]	3 5 7 9 [–]
*RST value	–

<Boolean> ON | OFF – enables or disables measurement
***RST value** ON (for <Im> = 3), OFF (for <Im> > 3)
SCPI, Command Types Device-specific, command or query.
Example: See [\[SENSe<Ch>:\]FREQuency:IMODulation:LTONE](#)

[SENSe<Ch>:]FREQuency:IMODulation:PEWCorr[:STATe] <Boolean>

Switches the preparation for an enhanced wave correction of an intermodulation measurement on or off. This flag should be switched on when a source power calibration is to be performed for the receive port ([SOURce<Ch>:POWer<Pt>:CORRection:IMODulation:RPORT\[:ACQuire\]](#)).

<Ch> Channel number.
<Boolean> ON | OFF – enables or disables preparation for an enhanced wave correction.
***RST value** OFF
SCPI, Command Types Device-specific, command or query.
Example: See [SOURce<Ch>:POWer<Pt>:CORRection:IMODulation:RPORT\[:ACQuire\]](#)

[SENSe<Ch>:]FREQuency:IMODulation:RECeiver <port no.>

Selects the receiver port for the intermodulation measurement.

<Ch> Channel number.
<port no.> Analyzer port number
Range [def. unit] 1 to the number of ports of the analyzer. [–]
***RST value** 2
SCPI, Command Types Device-specific, command or query.
Example: See [\[SENSe<Ch>:\]FREQuency:IMODulation:LTONE](#)

[SENSe<Ch>:]FREQuency:IMODulation:SPECTrum:MORDer <IM order>

Defines the maximum order of intermodulation products for the intermodulation spectrum measurement.

<Ch> Channel number.
<IM order> Maximum order of IM products
Range [def. unit] 3 | 5 | 7 | 9 [–]
***RST value** 3
SCPI, Command Types Device-specific, command or query.
Example: See [\[SENSe<Ch>:\]FREQuency:IMODulation:SPECTrum\[:STATe\]](#)

[SENSe<Ch>:]FREQuency:IMODulation:SPECtrum[:STATe] <Boolean>

Enables or disables the measurement of the intermodulation spectrum without creating a new channel. If a new channel is desired, it must be created by other means; see example below.

<Ch> Channel number.

<Boolean> ON | OFF – enables or disables intermodulation spectrum measurement

***RST value** OFF

SCPI, Command Types Device-specific, command or query.

Example:

```
*RST; FREQ:IMOD:LTON PORT,1; UTON PORT, 3
```

Reset the instrument to create the default channel no. 1. Select port 1 as a source port for the lower tone, port 3 as a source port for the upper tone.

```
FREQ:STAR 1GHZ; STOP 2GHz
```

Define a suitable sweep range to ensure that the analyzer can measure all intermodulation products.

```
CALC2:PAR:SDEF 'IM_SPEC', 'IP7UI'
```

Create a new channel no. 2 and a trace named 'IM SPEC'. Select the upper 7th-order intercept point at the DUT input as a measured quantity.

```
SENS2:FREQ:IMOD:SPEC:MORD 5
```

Select 5 as the maximum IM order for the intermodulation spectrum measurement.

```
SENS2:FREQ:IMOD:SPEC ON
```

Enable the intermodulation spectrum measurement for the new channel no. 2.

[SENSe<Ch>:]FREQuency:IMODulation:TDIStance <tone distance>

Defines the tone distance (frequency offset) between the upper and the lower tone.

<Ch> Channel number.

<tone distance> Upper tone frequency minus lower tone frequency.

Range [def. unit] Lower limit: 0 Hz, upper limit depending on the [instrument model](#) and the sweep range for the lower tone [Hz]. The increment (parameters UP or DOWN) is 1 kHz.

***RST value** 1 MHz

SCPI, Command Types Device-specific, command or query.

Example:

```
See [SENSe<Ch>:]FREQuency:IMODulation:LTONe
```

[SENSe<Ch>:]FREQuency:IMODulation:TTOutput PORT | EDEvice

Selects the source for the two tone output signal for intermodulation measurements.

<Ch>	Channel number.
Parameters	Two tone output: PORT – analyzer port 1 (for instruments with option R&S ZVA<frequency>-B16 or with internal combiner only) EDEvice – external device (Ext. Dev.)
*RST value	EDEvice
SCPI, Command Types	Device-specific, command or query.
Example:	See [SENSe<Ch>:]FREQuency:IMODulation:LTONE

[SENSe<Ch>:]FREQuency:IMODulation:UTONE PORT | GENERator, <source_no>

Selects the source for the upper tone signal that is used for the intermodulation measurement.

<Ch>	Channel number.
Parameters	Upper tone source: PORT – internal source at port <source_no> GENERator – external generator no. <source_no>, as defined in the <i>System Configuration – External Generators</i> dialog.
<source_no>	Number of the port for the internal source or of the generator
Range [def. unit]	1 to port number of the analyzer/number of external generators [–]
*RST value	– (for all parameters)
SCPI, Command Types	Device-specific, command or query.
Example:	See [SENSe<Ch>:]FREQuency:IMODulation:LTONE

[SENSe<Ch>:]FREQuency:MDELay...

This subsystem controls the analyzer's mixer delay measurement mode. This mode requires options R&S ZVA-K9 and R&S ZVA-K4. Option R&S ZVA-K4 also provides [Harmonic Distortion](#) measurements, [mixer](#) measurements, arbitrary configuration of generator and receiver frequencies ([Port Configuration](#)), and [intermodulation](#) measurements.

[SENSe<Ch>:]FREQuency:MDELay:ACQuire

Starts a calibration sweep for the mixer delay measurement. As a prerequisite, the calibrated channel must have at least one mixer delay trace.

<Ch>	Channel number. If unspecified the numeric suffix is set to 1.
SCPI, Command Types	Device-specific, no query.

Example:See [MMEMory:LOAD:MDCData](#)**[SENSe<Ch>:]FREQuency:MDELay:APERture <Aperture>**

Defines the frequency difference between the upper and lower tone (aperture).

<Ch> Channel number. If unspecified the numeric suffix is set to 1.

<Aperture> Aperture

Range [def. unit] 0 Hz to 15 MHz [Hz]

*RST value 0 Hz

SCPI, Command Device-specific, command or query.

Types**Example:**

```
*RST; SENS1:FREQ:STAR 1 GHz; STOP 2 GHz
```

Select a stimulus range between 1 GHz and 2 GHz.

```
FREQ:MDEL:APER 1 MHz
```

Select a 1 MHz aperture.

```
FREQ:MDEL:UTON PORT, 3
```

Select NWA port 3 as a source port for the upper tone (no external generator).

```
FREQ:MDEL:COMB ON
```

Use the internal combiner to generate the two-tone signal at port 1 (for instruments equipped with the necessary options).

```
...
```

(Perform mixer delay measurement, evaluate results.)

```
FREQ:MDELay:CONV OFF
```

Disable mixer delay measurement, switch back to normal (non frequency-converting) mode.

[SENSe<Ch>:]FREQuency:MDELay:CDELay <Delay>

Enables constant mixer delay and defines a constant mixer delay value, to be used as a reference for a mixer delay measurement calibration.

<Ch> Channel number. If unspecified the numeric suffix is set to 1.

<Delay> Constant delay

Range [def. unit] 0 s to 0.001 s [s]

*RST value 0 s

SCPI, Command Device-specific, command or query.

Types**Example:**

```
*RST; :FREQ:MDEL:CDEL 1 ns
```

Enable constant mixer delay and define a constant mixer delay value of 1 ns.

```
FREQ:MDEL:CDM?
```


Query whether the constant delay mode is active. The response is 1.

[SENSe<Ch>:]FREQuency:MDELay:CDMode <Boolean>

Selects constant or variable delay for the mixer delay calibration.

<Ch>	Channel number.
<Boolean>	ON – Constant delay OFF – Variable delay
*RST value	ON
SCPI, Command Types	Device-specific, command or query.

Example: See [\[SENSe<Ch>:\]FREQuency:MDELay:CDELay](#)

[SENSe<Ch>:]FREQuency:MDELay:COMBiner[:STATe] <Boolean>

Enables or disables the internal combiner

- for network analyzers R&S ZVA connected to an Extension Unit R&S ZVAX24 or R&S ZVAX-TRM with installed combiner option
 - for network analyzers R&S ZVT connected to an Extension Unit R&S ZVAX-TRM with installed combiner option
 - for network analyzers R&S ZVT20 that are equipped with option R&S ZVT20-B11
- The internal combiner requires the following port configuration: Lower Tone: Port 1, Upper Tone: Port 3.
The two-tone signal is available at port 1.

<Ch>	Channel number.
<Boolean>	ON OFF – enables or disables the measurement using the internal combiner
*RST value	OFF
SCPI, Command Types	Device-specific, command or query.

Example: See [\[SENSe<Ch>:\]FREQuency:MDELay:APERture](#)

[SENSe<Ch>:]FREQuency:MDELay:CONVersion OFF

Disables the mixer delay measurement and switches back to normal (non frequency-converting) mode.

<Ch>	Channel number.
OFF	Disable mixer delay measurement
*RST value	OFF
SCPI, Command Types	Device-specific, no query.

Example: See [\[SENSe<Ch>:\]FREQuency:MDELay:APERture](#)

[SENSe<Ch>:]FREQuency:MDELay:CORRection[:STATe] <Boolean>

Qualifies whether the analyzer applies the current mixer delay meas. calibration data.



The analyzer automatically applies the calibration data when a calibration file is loaded ([MMEMory:LOAD:MDCData](#)) or after a calibration sweep has been completed ([\[SENSe<Ch>:\]FREQuency:MDELay:ACQuire](#)).

<Ch>	Channel number.
<Boolean>	ON OFF – Apply / ignore calibration data
*RST value	OFF
SCPI, Command Types	Device-specific, command or query.

Example: See [MMEMory:LOAD:MDCData](#)

[SENSe<Ch>:]FREQuency:MDELay:DIVide <Boolean>

Enables or disables the division of loaded mixer delay calibration data by two.

<Ch>	Channel number.
<Boolean>	ON OFF – Enable / disable division
*RST value	OFF
SCPI, Command Types	Device-specific, command or query.

Example: See [MMEMory:LOAD:MDCData](#)

[SENSe<Ch>:]FREQuency:MDELay:RECeiver INTERNAL | EXTERNAL

Selects the measurement setup/receiver configuration for the mixer delay measurement.

<Ch>	Channel number.
Parameters	INTERNAL – internal receiver (one network analyzer only) EXTERNAL – external receiver (second analyzer)
*RST value	INTERNAL
SCPI, Command Types	Device-specific, command or query.

Example:

[SENSe<Ch>:]FREQuency:MDELay:RECeiver:USE LAN1 | LAN2

Selects the LAN connection for the mixer delay measurement with external receiver. The command has no effect if a single analyzer (internal receiver) is used.

<Ch>	Channel number.

Parameters	LAN1 LAN – LAN connector on the rear panel of the analyzer
*RST value	LAN1
SCPI, Command Types	Device-specific, command or query.
Example:	See [SENSe<Ch>:]FREQuency:MDELay:RECeiver

[SENSe<Ch>:]FREQuency:MDELay:UTONe PORT | GENerator, <source_no>

Selects the source for the upper tone signal that is used for the mixer delay measurement.

<Ch>	Channel number.
Parameters	Upper tone source: NONE – no source selected PORT – internal source at port <source_no> GENerator – external generator no. <source_no>, as defined in the <i>System Configuration – External Generators</i> dialog.
<source_no>	Number of the port for the internal source or of the generator (to be omitted for source: NONE)
Range [def. unit]	1 to port number of the analyzer/number of external generators [–]
*RST value	– (for all parameters)
SCPI, Command Types	Device-specific, command or query.
Example:	See [SENSe<Ch>:]FREQuency:IMODulation:LTONe

[SENSe<Chn>:]FUNCTion...

This subsystem selects the sweep type and the measurement parameter.

[SENSe<Chn>:]FUNCTion[:ON] '<string>'

[Deprecated command]

Defines the sweep type and the measurement parameter in a single string.

Note: To select a measurement parameter without changing the sweep type, use [CALCulate<Ch>:PARAMeter:MEASure](#). Use the other commands in the [CALCulate<Ch>:PARAMeter...](#) subsystem to create or delete traces and select measurement parameters.

<Chn>	Channel number used to identify the active trace. If [SENSe<Chn>:]FUNCTion[:ON] is not used as a query, the number must be 1.
'<string>'	Single string parameter defining the sweep type and the parameter to be measured: <string> = "<sweep_type>:<parameter>".
Range [def. unit]	See list of strings below [–].
*RST value	"XFR:S21" "
SCPI, Command	Confirmed, command or query

Types

Example:

```
CALC4:PAR:SDEF "Ch4Tr1", "S11"
```

Create channel 4 and a trace named *Ch4Tr1* to measure the input reflection coefficient S11. The trace automatically becomes the active trace.

```
SENS4:FUNC?
```

Check (query) the sweep type and measurement parameter of the active trace. The result is 'XFR:POW:S11'.

The following keywords define the sweep type (see SCPI command reference: presentation layer):

XFR <u>Frequency</u>	Frequency sweep (<i>Lin. Frequency/Log. Frequency/Segmented Frequency</i>)
XPOW <u>er</u>	<i>Power</i> sweep
XTIME	<i>Time</i> sweep
XCW?	<i>CW Mode</i> sweep (output variable for query only)

The following keywords define the measurement parameter (see SCPI command reference: function name):

POW <u>er</u> :S<Pt _{out} ><Pt _{in} >	S-parameter with output and input port number of the DUT, e.g. S11, S21.
POW <u>er</u> :RAT <u>io</u> A<Pt _{out} > B<Pt _{in} >, A<Pt _{out} > B<Pt _{in} > Output: A<Pt _{out} >/B<Pt _{in} >	Ratio, e.g. B2, A1 for b2/a1 drive Port 1
POW <u>er</u> :A<Pt _{out} >	Wave quantity with stimulus port number of the analyzer, e.g. A1.
POW <u>er</u> :B<Pt _{in} >	Wave quantity with receive port number of the analyzer, e.g. B2.
POW <u>er</u> :Z<Pt _{out} ><Pt _{in} >	Matched-circuit impedance (converted Z-parameter) with output and input port number of the DUT, e.g. Z11, Z21.
POW <u>er</u> :Y<Pt _{out} ><Pt _{in} >	Matched-circuit admittance (converted Y-parameter) with output and input port number of the DUT, e.g. Y11, Y21.
POW <u>er</u> :KFA <u>cto</u> r POW <u>er</u> :MUFa <u>cto</u> r<1 2>	Stability factor K Stability factors μ 1 or μ 2
PAE<Pt _{out} ><Pt _{in} >	Power Added Efficiency (PAE) with output and input port number of the DUT, e.g. PAE21 (output variable for query only)
VOLT <u>age</u> [:DC] DCIN1 DCIN2 Output: DC $\pm$ 1 V, DC $\pm$ 10 V	DC Input 1 (DC –1 V...+1 V) or DC Input 2 (DC –10 V...+10 V)

Note: The mnemonics *POWer:* and *VOLTage:* are not used in output strings.

[SENSe<Ch>:]LO...

This subsystem controls the Local Oscillator (LO) amplifiers for the reference and measurement channels.

[SENSe<Ch>:]LOMeasure<Pt>[:STATe] <Boolean>

Switches the Local Oscillator amplifier for the measurement channel b on or off.

<Ch>	Channel number. If unspecified the numeric suffix is set to 1.
<Pt>	Test port number of the analyzer.
<Boolean>	ON OFF – Switches the LO oscillator on or off.
*RST value	ON
SCPI, Command Types	Device-specific, command or query
Example:	<pre>LOM1 OFF; LOR1 OFF</pre> Switch the local oscillators for the measurement channel b and the reference channel a at port no. 1 off.

[SENSe<Ch>:]LOReference<Pt>[:STATe] <Boolean>

Switches the Local Oscillator amplifier for the reference channel a on or off.

<Ch>	Channel number.
<Pt>	Test port number of the analyzer.
<Boolean>	ON OFF – Switches the LO oscillator on or off.
*RST value	ON
SCPI, Command Types	Device-specific, command or query
Example:	<pre>LOM1 OFF; LOR1 OFF</pre> Switch the local oscillators for the measurement channel b and the reference channel a at port no. 1 off.

[SENSe<Ch>:]LPORt...

This subsystem defines the reference impedances of the balanced ports.

[SENSe<Ch>:]LPORt<log_port>:ZCOMmon <real>[, <imaginary>]

Specifies the complex common mode reference impedance for the balanced (logical) port numbered <log_port>.

<Ch>	Channel number. If unspecified the numeric suffix is set to 1.
<log_port>	Logical port number. The logical ports must be defined using <code>SOURce<Ch>:LPORt<log_port> <phys_port1>,<phys_port2></code> . An n port analyzer supports a maximum of $n/2$ (n even) or $(n - 1)/2$ (n odd) logical ports.
<real> <imaginary>	Real and imaginary part of the port impedance. <imaginary> may be omitted to define a real impedance.
Range [def.	1mΩ to 10 MΩ for the real part [Ω]

unit] – 10 MΩ to 10 MΩ for the imaginary part [Ω]
 *RST value 25 Ω (real impedance)

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; :CALC:PAR:DEL 'TRC1'
```

Reset the analyzer and delete the (default) trace for channel no. 1.

```
SOUR:LPOR1 1,2
```

Combine the physical ports no. 1 and 2 to define the balanced (logical) port no. 1.

```
LPOR1:ZCOM 27, 2
```

Specify a complex common mode reference impedance of $27\Omega + j \cdot 2\Omega$ for the defined port.

[SENSe<Ch>:]LPORt<log_port>:ZDIFferent <real>[, <imaginary>]

Specifies the complex differential mode reference impedance for the balanced (logical) port numbered <log_port>.

<Ch> Channel number. If unspecified the numeric suffix is set to 1.

<log_port> Logical port number. The logical ports must be defined using `SOURce<Ch>:LPORt<log_port> <phys_port1>,<phys_port2>`. An n port analyzer supports a maximum of $n/2$ (n even) or $(n - 1)/2$ (n odd) logical ports.

<real> Real and imaginary part of the port impedance. <imaginary> may be omitted to define a real impedance.

Range [def. unit]
 1mΩ to 10 MΩ for the real part [Ω]
 – 10 MΩ to 10 MΩ for the imaginary part [Ω]

*RST value 100 Ω (real impedance)

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; :CALC:PAR:DEL 'TRC1'
```

Reset the analyzer and delete the (default) trace for channel no. 1.

```
SOUR:LPOR1 1,2
```

Combine the physical ports no. 1 and 2 to define the balanced (logical) port no. 1.

```
LPOR1:ZDIF 27, 2
```

Specify a complex differential mode reference impedance of $27\Omega + j \cdot 2\Omega$ for the defined port.

[SENSe<Ch>:]NFIGure...

This subsystem configures the noise figure measurement.

[SENSe<Ch>:]NFIGure:ISNoise <Boolean>

Qualifies whether the analyzer assumes an ideal T0 source noise.

<Ch>	Channel number. If unspecified the numeric suffix is set to 1.
<Boolean>	ON OFF – Switches the LO oscillator on or off.
*RST value	OFF
SCPI, Command Types	Device-specific, command or query

Example: See [Noise Figure Measurement](#) (condensed programming examples)

[SENSe<Ch>:]NFIGure:NDUT <Boolean>

Configures the noise figure measurement for a narrowband DUT.

<Ch>	Channel number.
<Boolean>	ON OFF – suitable if a narrowband DUT (< 50 MHz) or a broadband DUT is measured.
*RST value	OFF
SCPI, Command Types	Device-specific, command or query

Example: See [Noise Figure Measurement](#) (condensed programming examples)

[SENSe<Ch>:]NFIGure:RFICorr <Boolean>

Enables or disables the RF image correction for mixer noise figure measurements.

<Ch>	Channel number.
<Boolean>	ON OFF – Enable or disable RF image correction.
*RST value	OFF
SCPI, Command Types	Device-specific, command or query

Example: See [Noise Figure Measurement](#) (condensed programming examples)

[SENSe<Ch>:]NFIGure:SEQuential <Boolean>

Selects sequential or simultaneous measurement mode.

Noise figure measurements for mixers with embedded LO

([\[SENSe<Ch>:\]FREQuency:CONVersion:MIXer:LOPort<Stg> EMBedded](#)) cannot be performed in

simultaneous mode.

<Ch>	Channel number.
<Boolean>	ON OFF – Sequential or simultaneous measurement
*RST value	ON
SCPI, Command Types	Device-specific, command or query

Example: See [Noise Figure Measurement](#) (condensed programming examples)

[SENSe<Chn>:]PAE...

This subsystem configures the measurement of the Power Added Efficiency (PAE).

[SENSe<Chn>:]PAE:C <numeric_value>

Defines the constant c for the PAE measurement.

<Chn>	Channel number used to identify the active trace.
<numeric_value>	Value of the constant c in the PAE test model ([SENSe<Chn>:]PAE:EXPRession). The value is used if one of the test models C10 C1 CK11 is selected.
Range [def. unit]	-3.4028234664E+038 W/V to +3.4028234664E+038 W/V [W/V].
*RST value	0 W/V
SCPI, Command Types	Device-specific, command or query

Example: *RST; CALC:PAR:MEAS "TRC1", "PAE21"

Select the PAE as a measurement parameter for the default trace *Trc1*. Select port 1 as the DUT input port, port 2 as the DUT output port.

PAE:EXPR CK11

Select the test model involving both constants and no power approximation.

PAE:C 10; K 1

Set the constant $c = U_{DC} / R$ to 10 W/V and the constant $k = 1 \text{ W/V}^2$. If the test setup is in accordance with the settings made, the trace shows the PAE for a constant DC supply voltage U_{DC} .

[SENSe<Chn>:]PAE:EXPRession C10 | C1 | K101 | CK11

Selects the [test model](#) for the PAE measurement.

<Chn>	Channel number used to identify the active trace.
C10	The DC power is equal to the constant c ([SENSe<Chn>:]PAE:C) times the DC voltage measured at the DC input <i>DC MEAS</i> -10 V...+10 V.
C1	The DC power is equal to the constant c times the DC voltage measured at the DC input <i>DC MEAS</i> -1 V...+1 V.

K101	The DC power is equal to the constant k ([SENSe<Chn>:] PAE:K) times the DC voltage measured at the DC input <i>DC MEAS -10 V...+10 V</i> times the DC voltage measured at the DC input <i>DC MEAS -1 V...+1 V</i> .
CK11	The DC power is equal to the constant c times the DC voltage measured at the DC input <i>DC MEAS -1 V...+1 V</i> minus k times the square of the DC voltage measured at the DC input <i>DC MEAS -1 V...+1 V</i> .
*RST value	CDC10
SCPI, Command Types	Device-specific, command or query
Example:	See [SENSe<Chn>:] PAE:C

[SENSe<Chn>:]PAE:K <numeric_value>

Defines the constant k for the PAE measurement.

<Chn>	Channel number used to identify the active trace.
<numeric_value>	Value of the constant k in the PAE test model ([SENSe<Chn>:] PAE:EXPRession). The value is used if one of the test models K101 CK11 is selected.
Range [def. unit]	-3.4028234664E+038 W/V ² to +3.4028234664E+038 W/V ² [W/V ²].
*RST value	0 W/V
SCPI, Command Types	Device-specific, command or query
Example:	See [SENSe<Chn>:] PAE:C

[SENSe<Ch>:]PMMO

This subsystem controls the sensitivity correction of the external power meter which is used for a source power calibration.

[SENSe<Ch>:]PMMO <boolean>

Selects the origin of the frequency information for the connected power meter.

<Ch>	Calibrated channel number
<boolean>	ON – from power meter entry in Port Configuration dialog OFF – from source to be calibrated
*RST value	OFF
SCPI, Command Types	Device-specific, command or query
Example:	*RST; SENS1:PMMO? Query the default frequency origin for the power meter in channel 1. The response is 0.

[SENSe<Ch>:]PORT...

This subsystem controls the frequency reference oscillator.

[SENSe<Ch>:]PORT<phys_port>:ZREference <real>[, <imaginary>]

Specifies the complex reference impedance for the physical port numbered <phys_port>.

<Ch>	Channel number. If unspecified the numeric suffix is set to 1.
<phys_port>	Physical port number. The number of ports depends on the analyzer model.
<real>	Real and imaginary part of the port impedance. <imaginary> may be omitted to define a real impedance.
<imaginary>	
Range [def. unit]	1mΩ to 10 MΩ for the real part [Ω] –10 MΩ to 10 MΩ for the imaginary part [Ω]
*RST value	Default reference impedance of the connector family assigned to the port (real impedance, e.g. 50 Ω).

SCPI, Command Types Device-specific, command or query

Example:

```
PORT2:ZREF 52, 2
```

Specify a complex reference impedance of 52 Ω + j * 2 Ω for the (physical) port no. 2.

```
CALC:TRAN:IMP:RNOR PWAV
```

Select renormalization of port impedances according to the power waves theory.

[SENSe<Ch>:]POWER...

This subsystem controls the power at the input ports of the analyzer.

[SENSe<Ch>:]POWER:ATTenuation ARECeiver | BRECeiver | CRECeiver | DRECeiver | <port_no>, <attenuation>

Sets an attenuation factor for the received waves. The generated wave is attenuated via [SOURce:POWer<Port_no>:ATTenuation](#).

<Ch>	Channel number.
ARECeiver BRECeiver CRECeiver DRECeiver <port_no>	Test port of the analyzer, depending on the analyzer model: Test port 1: ARECeiver or 1 (<port_no> = 1) Test port 2: BRECeiver or 2 (<port_no> = 2) Test port 3: CRECeiver or 3 (<port_no> = 3) Test port 4: DRECeiver or 4 (<port_no> = 4)

<attenuation>	Attenuation factor for the received wave.
Range [def. unit]	Depending on the analyzer/attenuator model, e.g. 0 dB to 75 dB for ZVA8/ZVA8-B31/32/B33/B34 [dB]. UP and DOWN increment/decrement the attenuation in 5 or 10 dB steps. The analyzer rounds any entered value below the maximum attenuation to the closest step.
*RST value	0 dB
SCPI, Command Types	Confirmed, command or query
Example:	<pre>POW:ATT AREC, 10</pre> Set an attenuation factor of 10 dB for the waves received at test port 1 and channel no. 1. The other test ports and channels are not affected.

[SENSe<Ch>:]POWer:IFGain<Pt>:MEASure AUTO | LNOise | LDISTortion

Selects the IF gain in the measurement channel (b-waves).

<Ch>	Channel number.
<Pt>	Test port number of the analyzer.
Parameters	AUTO – Adaptive Gain Control according to the RF input level LNOise – Fixed, large IF gain, for low input levels LDISTortion – Fixed, small IF gain, for high input levels
*RST value	AUTO
SCPI, Command Types	Device-specific, command or query
Example:	<pre>POWer:IFG2:MEAS LDIS; POWer:IFG2:REF LNO</pre> Optimize the measurement channel b for small input levels, the reference channel a for high input levels.

[SENSe<Ch>:]POWer:IFGain<Pt>:REFerence AUTO | LNOise | LDISTortion

Selects the IF gain in the reference channel (a-waves). This setting is not available on R&S ZVB4, R&S ZVB8, R&S ZVB20, and R&S ZVT20 analyzers.

<Ch>	Channel number.
<Pt>	Test port number of the analyzer.
Parameters	AUTO – Adaptive Gain Control according to the RF input level LNOise – Fixed, small IF gain, for high input levels LDISTortion – Fixed, large IF gain, for low input levels
*RST value	AUTO
SCPI, Command Types	Device-specific, command or query

Example:See `[SENSe<Ch>:]POWer:IFGain<Pt>:MEASure`**[SENSe<Ch>:]PULSe:GENerator...**

This subsystem represents the pulse generator signals controlling the pulse modulator(s) of an extension unit R&S ZVAX24 or R&S ZVAX-TRM.

[SENSe<Ch>:]PULSe:GENerator<gen_no>:CPPRofile <Boolean>

Enables or disables the chopped pulse profile mode.



When the chopped pulse profile mode is activated, the analyzer automatically selects a CW Time sweep mode and adjusts a number of data acquisition and pulse generator settings. As explained in the [GUI reference](#) these settings are based on the current Sync Width (set via `[SENSe<Ch>:]PULSe:GENerator2:WIDTh`) and the current Pulse Period (set via `[SENSe<Ch>:]PULSe:GENerator1:PERiod`). Hence Sync Width and Pulse Period have to be set appropriately prior to activating the chopped pulse profile mode.

<Ch>	Channel number. If unspecified, this parameter is set to 1.
<gen_no>	Number of the pulse generator signal: 1 for pulse generator, 2 for sync generator signal. This suffix must be set to 1, the chopped pulse profile mode is general.
<Boolean>	ON OFF – Enable or disable chopped pulse profile settings
*RST value	OFF

SCPI, Command Types Device-specific, command or query

Example:

```
PULS:GEN:DINC?
```

Query the delay increment. The response is 0 since chopped pulse profile mode is not active.

```
PULS:GEN:CPPR ON; :PULS:GEN:DINC?
```

Enable chopped pulse profile settings. The delay increment is set to 200 ns.

```
PULS:GEN:DINC 0 ns
```

Define a zero delay increment. This disables the chopped pulse profile mode.

[SENSe<Ch>:]PULSe:GENerator<gen_no>:DELay <Delay>

Defines the delay of the sync signal relative to the pulse generator signal.

<Ch>	Channel number.
<gen_no>	Number of the pulse generator signal. This suffix must be set to 1, the setting is general.
<Delay>	Delay (to sync)

Range [def. unit]	-26.8435455875 s to +53.6870911875 s [s]. UP and DOWN increment/decrement the delay in 12.5 ns steps.
*RST value	0 s
SCPI, Command Types	Device-specific, command or query
Example:	Configure the pulse generator signal (<gen_no> = 1, omitted in commands). <pre>PULS:GEN:DEL 100 ns</pre> Define a 100 ns delay. <pre>PULS:GEN:MODE CONT</pre> Select continuous pulse mode. <pre>PULS:GEN:MCH 1</pre> Select channel 1 as master for continuous pulse mode. <pre>PULS:GEN:PER 200 us</pre> Select a pulse period of 200 µs. <pre>PULS:GEN ON</pre> Turn the pulse generator signals on.

[SENSe<Ch>:]PULSe:GENerator<gen_no>:DINcrement <Increment>

Defines a delay increment for the sync signal in chopped pulse profile mode. The delay increment defines the distance between two measurement intervals (sweep points). For sweep point no. n, the total delay of the sync signal relative to the pulse generator signal is <Delay> + n * <Increment>.

This parameter is not available in manual control.

<Ch>	Channel number.
<gen_no>	Number of the pulse generator signal. This suffix must be set to 1, the command is general.
<Increment>	Delay increment
Range [def. unit]	0 s to +0.8191875 s [s]. UP and DOWN increment/decrement the delay in 12.5 ns steps. A zero delay disables the chopped pulse profile mode.
*RST value	0 s
SCPI, Command Types	Device-specific, command or query
Example:	See [SENSe<Ch>:]PULSe:GENerator<gen_no>:CPProfile

[SENSe<Ch>:]PULSe:GENerator<gen_no>:MCHannel <Channel>

Selects the master channel for **CONTinuous** pulse mode.

<Ch>	Channel number. This Parameter is ignored, the setting affects all channels.
<gen_no>	Number of the pulse generator signal. This parameter is ignored, the setting

	affects both signals.
<Channel>	Master Channel. The settings of the master channel are used for all channels. Channel-specific pulse generator settings for other channels are not overwritten. If Mode is changed to CSP they are used again.
Range	1...Max channel number. It is recommended to use channel 1.
*RST value	1
SCPI, Command Types	Device-specific, command or query
Example:	See [SENSe<Ch>:]PULSe:GENerator<gen_no>:DELay

[SENSe<Ch>:]PULSe:GENerator<gen_no>:MODE CSPecific | CONTinuous

Selects the channel-specific or continuous pulse mode.

<Ch>	Channel number. This Parameter is ignored, the setting affects all channels.
<gen_no>	Number of the pulse generator signal. This parameter is ignored, the setting affects both signals.
Parameters	CSPecific – Channel-specific pulse generator settings CONTinuous – The settings of the master channel (set via [SENSe<Ch>:]PULSe:GENerator<gen_no>:MCHannel <Channel>) are used for all channels; continuous pulse generator signal on a channel change
*RST value	CSPecific
SCPI, Command Types	Device-specific, command or query
Example:	See [SENSe<Ch>:]PULSe:GENerator<gen_no>:DELay

[SENSe<Ch>:]PULSe:GENerator<gen_no>:PERiod <Period>

Defines the pulse period of the single pulse generator signal ([\[SENSe<Ch>:\]PULSe:GENerator<gen_no>:TYPE SINGLE](#)).

<Ch>	Channel number.
<gen_no>	Number of the pulse generator signal. This suffix must be set to 1; the period of the sync signal is always adjusted to the pulse generator signal.
<Period>	Pulse period
Range [def. unit]	12.5 ns to 54948 s [s]. UP and DOWN increment/decrement the period in 1 µs steps.
*RST value	10 µs
SCPI,	Device-specific, command or query

Command Types**Example:** See [\[SENSe<Ch>:\]PULSe:GENerator<gen_no>:DELay](#)**[SENSe<Ch>:]PULSe:GENerator<gen_no>:POLarity NORMal | INVerted**

Selects the polarity of the pulse generator signal <gen_no>.

<Ch> Channel number.

<gen_no> Number of the pulse generator signal: 1 for pulse generator, 2 for sync generator signal.

Parameters NORMal – Normal polarity, high pulses
INVerted – Inverted polarity

***RST value** NORMal

SCPI, Command Types Device-specific, command or query

Example: See [\[SENSe<Ch>:\]PULSe:GENerator<gen_no>:WIDTh](#)**[SENSe<Ch>:]PULSe:GENerator<gen_no>[:STATe] <Boolean>**

Turns the pulse generator on or off.

<Ch> Channel number.

<gen_no> Number of the pulse generator signal. This parameter is ignored, the setting affects both signals.

<Boolean> ON | OFF – Turn pulse generator on or off

***RST value** OFF

SCPI, Command Types Device-specific, command or query

Example: See [\[SENSe<Ch>:\]PULSe:GENerator<gen_no>:DELay](#)**[SENSe<Ch>:]PULSe:GENerator<gen_no>:TRain:DATA <Active>, <Start High>, <Stop High>{, <Active>, <Start High>, <Stop High>}**

Adds and enables/disables an arbitrary number of pulse train segments. Each segment consists of a single pulse of definite width and position which may be active or inactive.



This command does not overwrite existing pulse train segments. The defined segments are appended to the list as new segments.

<Ch> Channel number

<gen_no> Number of the pulse generator signal. This suffix must be set to 1, since pulse trains are available for the pulse generator signal only.

<Active>	Identifier for the state of the pulse train segment. The state of individual segments may be changed using [SENSe<Ch>:]PULSe:GENerator<gen_no>:TRain:SEGment<Seg>[:STATe]
Range	0 – Pulse train segment inactive, range defined but no pulse generated. 1 – Pulse train segment active
*RST value	1 (for all segments)
<Start High>	Start time of the segment (pulse).
Range [def. unit]	0 s to 54975.5813622 s [s]
*RST value	0 s (no pulse train segment defined after *RST)
<Stop High>	Stop time of the segment (pulse).
Range [def. unit]	12.5 ns to 54975.5813632 s [s]. The minimum width of a pulse is 12.5 ns, its maximum width is given by the pulse train period ([SENSe<Ch>:]PULSe:GENerator<gen_no>:TRain:PERiod).
*RST value	12.5 ns (no pulse train segment defined after *RST)
SCPI, Command Types	Device-specific, with query.
Example:	SENS1:PULS:GEN:TYPE TRA Select a pulse train for the pulse generator signal. SENS1:PULS:GEN:TRA:PER 1 us Define a pulse train period of 1000 ns. SENS1:PULS:GEN:TRA:DATA DEF, DEF, DEF, 0, 2.5E-8, 5E-8 Define and enable a pulse train segment with an active pulse between 0 s and 12.5 ns. Define and enable a second active pulse train segment with an inactive pulse between 25 ns and 50 ns. PULS:GEN:TRA:SEGM:COUN? Display the number of defined segments. The response is 1. PULS:GEN:TRA:SEGM2 ON Set the second segment active. PULS:GEN:TRA:SEGM2:STOP 200 ns; STAR 100 ns Change position and length of second pulse. PULS:GEN:TRA:DEL:ALL Delete all pulse train segments PULS:GEN:TRA:DATA? Query existing pulse train segments. An error message "-114 "Header suffix out of range..." indicates that there are no segments.

[SENSe<Ch>:]PULSe:GENerator<gen_no>:TRain:DELeTe:ALL

Deletes all pulse train segments.

<Ch>	Channel number
<gen_no>	Number of the pulse generator signal. This suffix must be set to 1, since the command affects the pulse generator signal only.
*RST value	–
SCPI, Command Types	Device-specific, no query.
Example:	See [SENSe<Ch>:]PULSe:GENerator<gen_no>:TRAI:n:DATA

[SENSe<Ch>:]PULSe:GENerator<gen_no>:TRAI:n:PERiod <Period>

Defines the pulse period of the pulse generator signal.

<Ch>	Channel number.
<gen_no>	Number of the pulse generator signal. This suffix must be set to 1; the period of the sync signal is always adjusted to the pulse generator signal.
<Period>	Pulse period
Range [def. unit]	12.5 ns to 54948 s [s]. UP and DOWN increment/decrement the delay in 1 µs steps.
*RST value	100 µs
SCPI, Command Types	Device-specific, command or query
Example:	See [SENSe<Ch>:]PULSe:GENerator<gen_no>:TRAI:n:DATA

[SENSe<Ch>:]PULSe:GENerator<gen_no>:TRAI:n:SEGment<Seg>:COUNT?

Queries the number of pulse train segments.

<Ch>	Channel number
<gen_no>	Number of the pulse generator signal. This suffix must be set to 1, since the command affects the pulse generator signal only.
<Seg>	Pulse train segment number. This suffix is ignored; the command counts all segments.
Response	0 1 ...- number of (active or inactive)) pulse train segments.
*RST value	0
SCPI, Command Types	Device-specific, query only.
Example:	See [SENSe<Ch>:]PULSe:GENerator<gen_no>:TRAI:n:DATA

[SENSe<Ch>:]PULSe:GENerator<gen_no>:TRAI:n:SEGMENT<Seg>:START <Start High>

Changes the start time of a pulse train segment. A range must be created first to enable this command (see [\[SENSe<Ch>:\]PULSe:GENerator<gen_no>:TRAI:n:DATA](#)).

<Ch>	Channel number
<gen_no>	Number of the pulse generator signal. This suffix must be set to 1, since the command affects the pulse generator signal only.
<Seg>	Pulse train segment number
<Start High>	Start time of segment.
Range [def. unit]	0 s to 54975.5813622 s [s]
*RST value	0 s (no pulse train segment defined after *RST)
SCPI, Command Types	Device-specific, with query.

Example: See [\[SENSe<Ch>:\]PULSe:GENerator<gen_no>:TRAI:n:DATA](#)

[SENSe<Ch>:]PULSe:GENerator<gen_no>:TRAI:n:SEGMENT<Seg>[:STATe] <Boolean>

Set the pulse train segment no. <Seg> active or inactive.

<Ch>	Channel number
<gen_no>	Number of the pulse generator signal. This suffix must be set to 1, since the command affects the pulse generator signal only.
<Seg>	Segment number
<Boolean>	ON OFF - Segment active or inactive
*RST value	ON (no pulse train segment defined after *RST)
SCPI, Command Types	Device-specific, command or query.

Example: See [\[SENSe<Ch>:\]PULSe:GENerator<gen_no>:TRAI:n:DATA](#)

[SENSe<Ch>:]PULSe:GENerator<gen_no>:TRAI:n:SEGMENT<Seg>:STOP <Stop High>

Changes the stop stimulus value (i.e. the largest stimulus value) of a pulse train segment. A range must be created first to enable this command (see [\[SENSe<Ch>:\]PULSe:GENerator<gen_no>:TRAI:n:DATA](#)).

<Ch>	Channel number
<gen_no>	Number of the pulse generator signal. This suffix must be set to 1, since the command affects the pulse generator signal only.
<Seg>	Segment number

<Stop High>	Stop time of segment.
Range [def. unit]	12.5 ns to 54975.5813632 s [s]. The minimum width of a pulse is 12.5 ns, its maximum width is given by the pulse train period ([SENSe<Ch>:]PULSe:GENerator<gen_no>:TRAI:n:PERiod).
*RST value	12.5 ns (no pulse train segment defined after *RST)
SCPI, Command Types	Device-specific, with query.
Example:	See [SENSe<Ch>:]PULSe:GENerator<gen_no>:TRAI:n:DATA

[SENSe<Ch>:]PULSe:GENerator<gen_no>:TYPE SINGLE | TRAI:n | CHIGH | CLOW

Selects the pulse type of the pulse generator signal <gen_no>.

<Ch>	Channel number.
<gen_no>	Number of the pulse generator signal: 1 for pulse generator, 2 for sync generator signal.
Parameters	SINGle – Single pulse CHIGH – Constant high CLOW – Constant low TRAI:n – Pulse train (available for pulse generator signal only, <gen_no> = 1)
*RST value	SINGle (for both signals)
SCPI, Command Types	Device-specific, command or query
Example:	See [SENSe<Ch>:]PULSe:GENerator<gen_no>:TRAI:n:DATA

[SENSe<Ch>:]PULSe:GENerator<gen_no>:WIDTh <Width>

Defines the pulse width of the pulse generator signal <gen_no>.

<Ch>	Channel number.
<gen_no>	Number of the pulse generator signal: 1 for pulse generator, 2 for sync generator signal.
<Width>	Pulse width
Range [def. unit]	12.5 ns to 54948 s [s] for pulse generator signal, increment: 100 ns 12.5 ns to 53.6870911875 s [s] for sync signal, increment: 12.5 ns
*RST value	1 µs (for pulse generator signal) 200 ns (for sync signal)
SCPI, Command Types	Device-specific, command or query
Example:	SENS1:PULS:GEN2:TYPE SING

Define a single pulse sync signal.

```
SENS1:PULS:GEN2:WIDT 100 ns
```

Define a pulse width of 100 ns for the sync signal.

```
SENS1:PULS:GEN2:POL INV
```

Invert the polarity of the sync signal.

[SENSe<Ch>:]PULSe...

This subsystem controls pulsed measurements (with option ZVA-K7, Measurements on Pulsed Signals).

[SENSe<Ch>:]PULSe:COUPled[:STATe] <Boolean>

Couples the section limits for averaging (and the section limit lines) for all receivers and source ports and in all channels.

<Ch> Channel number. If unassigned this value is set to 1.

<Boolean> ON | OFF - Section limits coupled or uncoupled

***RST value** OFF

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; SWE:TYPE PULS; :PULS:COUP ON
```

Select pulse profile mode and activate coupled section limits.

```
SENS2:PULS:REC:A1:SRCP1:EVAL:STAR 200 ns
```

Create channel 2 and define a start value of 200 ns for the averaging section for the a₁ receiver and source port no. 1.

```
SENS1:PULS:REC:A1:SRCP1:EVAL:STAR?
```

Query the section start value for channel 1. As the sections are coupled, the response is 2E-007.

[SENSe<Ch>:]PULSe:RECeiver:A<rec_no>:GENerator<gen_no>:EVALuation:MODE NORMAL | MEAN

Specifies whether the wave quantity assigned to the reference receiver <rec_no> and the external generator <gen_no> is displayed as measured or whether it is averaged.

<Ch> Channel number

<rec_no> Number of the reference receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.

<gen_no> Number of a previously configured external generator

Parameters NORMAL – wave quantity is as measured (pulse shape)
MEAN – wave quantity is replaced by its mean value (magnitude and phase)

*RST value averaged over a configurable time interval; see example below
NORMal

SCPI, Command Types Device-specific, command or query

Example:

```
SYST:COMM:RDEV:GEN1:DEF 'Ext. Gen. 1', 'SME02', 'gpib0', '21'
```

Configure an R&S SME02 generator as external generator no. 1, assigning the name Ext. Gen. 1 and a GPIB address 21.

```
PULS:REC:A2:GEN1:EVAL:STAR 200 ns; STOP 500 ns
```

Specify the averaging section for the a₂ receiver and the configured generator: Define a start value of 200 ns and a stop value of 500 ns.

```
PULS:REC:A2:GEN1:LIN ON
```

Display the section limit lines in the diagram.

```
PULS:REC:A2:GEN1:EVAL:MODE MEAN
```

Enable averaging of the a₂ wave.

```
PULS:REC:A2:GEN1:TRIG:DEL 100 ns
```

Shift the stimulus axis of the a₂ wave by 100 ns.

[SENSe<Ch>]:PULSe:RECEiver:A<rec_no>:GENerator<gen_no>:EVALuation:STARt <section_start>

Defines the start time of the averaging section for the wave quantity assigned to the reference receiver <rec_no> and the external generator <gen_no>.

<Ch> Channel number

<rec_no> Number of the reference receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.

<gen_no> Number of a previously configured external generator

<section_start> Start time of the section

Range [def. unit] –0.003 s to +0.002999975 s [s]. The increment (UP/DOWN) is 50 ns. The width of the averaging section must be between 25 ns and 3 s.

*RST value 0 s

SCPI, Command Types Device-specific, command or query

Example:

```
See [SENSe<Ch>]:PULSe:RECEiver:A<rec_no>:GENerator<gen_no>:EVALuation:MODE
```

[SENSe<Ch>]:PULSe:RECEiver:A<rec_no>:GENerator<gen_no>:EVALuation:STOP <section_stop>

Defines the stop time of the averaging section for the wave quantity assigned to the reference receiver <rec_no> and the external generator <gen_no>.

<Ch> Channel number

<rec_no>	Number of the reference receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.
<gen_no>	Number of a previously configured external generator
<section_stop>	Stop time of the section
Range [def. unit]	–0.002999975 s to +0.003 s [s]. The increment (UP/DOWN) is 50 ns. The width of the averaging section must be between 25 ns and 3 s.
*RST value	0 s
SCPI, Command Types	Device-specific, command or query
Example:	See [SENSe<Ch>:]PULSe:RECEiver:A<rec_no>:GENerator<gen_no>:EVALuation:MODE

[SENSe<Ch>:]PULSe:RECEiver:A<rec_no>:GENerator<gen_no>:LINes[:STATe] <Boolean>

Displays or hides the limit lines of the averaging section for the wave quantity assigned to the reference receiver <rec_no> and the external generator <gen_no>.

<Ch>	Channel number
<rec_no>	Number of the reference receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.
<gen_no>	Number of a previously configured external generator
<Boolean>	ON OFF – Display or hide lines
*RST value	OFF
SCPI, Command Types	Device-specific, command or query
Example:	See [SENSe<Ch>:]PULSe:RECEiver:A<rec_no>:GENerator<gen_no>:EVALuation:MODE

[SENSe<Ch>:]PULSe:RECEiver:A<rec_no>:GENerator<gen_no>:TRIGger:DELay <shift_stimulus>

Defines an offset time (shift stimulus) for the wave quantity assigned to the reference receiver <rec_no> and the external generator <gen_no>.

<Ch>	Channel number
<rec_no>	Number of the reference receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.
<gen_no>	Number of a previously configured external generator
<shift_stimulus>	Offset time
Range [def. unit]	–0.003 s to +0.003 s [s]. The increment (UP/DOWN) is 50 ns.
*RST value	0 s

SCPI, Command Types Device-specific, command or query

Example: See `[SENSe<Ch>:]PULSe:RECeiver:A<rec_no>:GENerator<gen_no>:EVALuation:MODE`

`[SENSe<Ch>:]PULSe:RECeiver:A<rec_no>:SRCPort<port_no>:EVALuation:MODE NORMal | MEAN`

Specifies whether the wave quantity assigned to the reference receiver <rec_no> and the analyzer source port <port_no> is displayed as measured or whether it is averaged.

<Ch> Channel number

<rec_no> Number of the reference receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.

<port_no> Number of the analyzer source port. 1 to the total number of test ports.

Parameters NORMal – wave quantity is as measured (pulse shape)
MEAN – wave quantity is replaced by its mean value (magnitude and phase) averaged over a configurable time interval; see example below

***RST value** NORMal

SCPI, Command Types Device-specific, command or query

Example: `PULS:REC:A2:SRCP2:EVAL:STAR 200 ns; STOP 500 ns`
Specify the averaging section for the a₂ receiver and the analyzer source port no. 2: Define a start value of 200 ns and a stop value of 500 ns.

`PULS:REC:A2:SRCP2:LIN ON`
Display the section limit lines in the diagram.

`PULS:REC:A2:SRCP2:EVAL:MODE MEAN`
Enable averaging of the a₂ wave.

`PULS:REC:A2:SRCP2:TRIG:DEL 100 ns`
Shift the stimulus axis of the a₂ wave by 100 ns.

`[SENSe<Ch>:]PULSe:RECeiver:A<rec_no>:SRCPort<port_no>:EVALuation:START <section_start>`

Defines the start time of the averaging section for the wave quantity assigned to the reference receiver <rec_no> and the analyzer source port <port_no>.

<Ch> Channel number

<rec_no> Number of the reference receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.

<port_no> Number of the analyzer source port. 1 to the total number of test ports.

<section_start> Start time of the section

Range [def. unit] –0.003 s to +0.002999975 s [s]. The increment (UP/DOWN) is 50 ns. The width

*RST value of the averaging section must be between 25 ns and 3 s.
0 s

SCPI, Command Types Device-specific, command or query

Example: See [\[SENSe<Ch>:\]PULSe:RECeiver:A<rec_no>:SRCPort<gen_no>:EVALuation:MODE](#)

[SENSe<Ch>:]PULSe:RECeiver:A<rec_no>:SRCPort<port_no>:EVALuation:STOP<section_stop>

Defines the stop time of the averaging section for the wave quantity assigned to the reference receiver <rec_no> and the analyzer source port <port_no>.

<Ch> Channel number

<rec_no> Number of the reference receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.

<port_no> Number of the analyzer source port. 1 to the total number of test ports.

<section_stop> Stop time of the section

Range [def. unit] –0.002999975 s to +0.003 s [s]. The increment (UP/DOWN) is 50 ns. The width of the averaging section must be between 25 ns and 3 s.

*RST value 0 s

SCPI, Command Types Device-specific, command or query

Example: See [\[SENSe<Ch>:\]PULSe:RECeiver:A<rec_no>:SRCPort<gen_no>:EVALuation:MODE](#)

[SENSe<Ch>:]PULSe:RECeiver:A<rec_no>:SRCPort<port_no>:LINEs[:STATe]<Boolean>

Displays or hides the limit lines of the averaging section for the wave quantity assigned to the reference receiver <rec_no> and the analyzer source port <port_no>.

<Ch> Channel number

<rec_no> Number of the reference receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.

<port_no> Number of the analyzer source port. 1 to the total number of test ports.

<Boolean> ON | OFF – Display or hide lines

*RST value OFF

SCPI, Command Types Device-specific, command or query

Example: See [\[SENSe<Ch>:\]PULSe:RECeiver:A<rec_no>:SRCPort<gen_no>:EVALuation:MODE](#)

[SENSe<Ch>:]PULSe:RECeiver:A<rec_no>:SRCPort<port_no>:TRIGger:DElay<shift_stimulus>

Defines an offset time (shift stimulus) for the wave quantity assigned to the reference receiver <rec_no> and the analyzer source port <port_no>.

<Ch>	Channel number
<rec_no>	Number of the reference receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.
<port_no>	Number of the analyzer source port. 1 to the total number of test ports.
<shift_stimulus>	Offset time
Range [def. unit]	–0.003 s to +0.003 s [s]. The increment (UP/DOWN) is 50 ns.
*RST value	0 s
SCPI, Command Types	Device-specific, command or query
Example:	See [SENSe<Ch>:]PULSe:RECeiver:A<rec_no>:SRCPort<gen_no>:EVALuation:MODE

[SENSe<Ch>:]PULSe:RECeiver:B<rec_no>:GENerator<gen_no>:EVALuation:MODE NORMAL | MEAN

Specifies whether the wave quantity assigned to the measurement receiver <rec_no> and the external generator <gen_no> is displayed as measured or whether it is averaged.

<Ch>	Channel number
<rec_no>	Number of the measurement receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.
<gen_no>	Number of a previously configured external generator
Parameters	NORMAL – wave quantity is as measured (pulse shape) MEAN – wave quantity is replaced by its mean value (magnitude and phase) averaged over a configurable time interval; see example below
*RST value	NORMAL
SCPI, Command Types	Device-specific, command or query
Example:	SYST:COMM:RDEV:GEN1:DEF 'Ext. Gen. 1', 'SME02', 'gpib0', '21'

Configure an R&S SME02 generator as external generator no. 1, assigning the name Ext. Gen. 1 and a GPIB address 21.

```
PULS:REC:B2:GEN1:EVAL:STAR 200 ns; STOP 500 ns
```

Specify the averaging section for the b₂ receiver and the configured generator: Define a start value of 200 ns and a stop value of 500 ns.

```
PULS:REC:B2:GEN1:LIN ON
```

Display the section limit lines in the diagram.

```
PULS:REC:B2:GEN1:EVAL:MODE MEAN
```

Enable averaging of the b₂ wave.

```
PULS:REC:B2:GEN1:TRIG:DEL 100 ns
```

Shift the stimulus axis of the b₂ wave by 100 ns.

[SENSe<Ch>]:PULSe:RECEiver:B<rec_no>:GENerator<gen_no>:EVALuation:STARt <section_start>

Defines the start time of the averaging section for the wave quantity assigned to the measurement receiver <rec_no> and the external generator <gen_no>.

<Ch>	Channel number
<rec_no>	Number of the measurement receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.
<gen_no>	Number of a previously configured external generator
<section_start>	Start time of the section
Range [def. unit]	–0.003 s to +0.002999975 s [s]. The increment (UP/DOWN) is 50 ns. The width of the averaging section must be between 25 ns and 3 s.
*RST value	0 s

SCPI, Command Types Device-specific, command or query

Example: See [\[SENSe<Ch>\]:PULSe:RECEiver:B<rec_no>:GENerator<gen_no>:EVALuation:MODE](#)

[SENSe<Ch>]:PULSe:RECEiver:B<rec_no>:GENerator<gen_no>:EVALuation:STOP <section_stop>

Defines the stop time of the averaging section for the wave quantity assigned to the measurement receiver <rec_no> and the external generator <gen_no>.

<Ch>	Channel number
<rec_no>	Number of the measurement receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.
<gen_no>	Number of a previously configured external generator
<section_stop>	Stop time of the section
Range [def. unit]	–0.002999975 s to +0.003 s [s]. The increment (UP/DOWN) is 50 ns. The width of the averaging section must be between 25 ns and 3 s.
*RST value	0 s

SCPI, Command Types Device-specific, command or query

Example: See [\[SENSe<Ch>\]:PULSe:RECEiver:B<rec_no>:GENerator<gen_no>:EVALuation:MODE](#)

[SENSe<Ch>:]PULSe:RECEiver:B<rec_no>:GENerator<gen_no>:LINEs[:STATe] <Boolean>

Displays or hides the limit lines of the averaging section for the wave quantity assigned to the measurement receiver <rec_no> and the external generator <gen_no>.

<Ch>	Channel number
<rec_no>	Number of the measurement receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.
<gen_no>	Number of a previously configured external generator
<Boolean>	ON OFF – Display or hide lines
*RST value	OFF
SCPI, Command Types	Device-specific, command or query

Example: See [\[SENSe<Ch>:\]PULSe:RECEiver:B<rec_no>:GENerator<gen_no>:EVALuation:MODE](#)

[SENSe<Ch>:]PULSe:RECEiver:B<rec_no>:GENerator<gen_no>:TRIGger:DELay <shift_stimulus>

Defines an offset time (shift stimulus) for the wave quantity assigned to the measurement receiver <rec_no> and the external generator <gen_no>.

<Ch>	Channel number
<rec_no>	Number of the measurement receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.
<gen_no>	Number of a previously configured external generator
<shift_stimulus>	Offset time
Range [def. unit]	–0.003 s to +0.003 s [s]. The increment (UP/DOWN) is 50 ns.
*RST value	0 s

SCPI, Command Types Device-specific, command or query

Example: See [\[SENSe<Ch>:\]PULSe:RECEiver:B<rec_no>:GENerator<gen_no>:EVALuation:MODE](#)

[SENSe<Ch>:]PULSe:RECEiver:B<rec_no>:SRCPort<port_no>:EVALuation:MODE NORMal | MEAN

Specifies whether the wave quantity assigned to the measurement receiver <rec_no> and the analyzer source port <port_no> is displayed as measured or whether it is averaged.

<Ch>	Channel number
<rec_no>	Number of the measurement receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.

<port_no>	Number of the analyzer source port. 1 to the total number of test ports.
Parameters	NORMAL – wave quantity is as measured (pulse shape) MEAN – wave quantity is replaced by its mean value (magnitude and phase) averaged over a configurable time interval; see example below
*RST value	NORMAL
SCPI, Command Types	Device-specific, command or query
Example:	

```
PULS:REC:B2:SRCP2:EVAL:STAR 200 ns; STOP 500 ns
```

Specify the averaging section for the b_2 receiver and the analyzer source port no. 2: Define a start value of 200 ns and a stop value of 500 ns.

```
PULS:REC:B2:SRCP2:LIN ON
```

Display the section limit lines in the diagram.

```
PULS:REC:B2:SRCP2:EVAL:MODE MEAN
```

Enable averaging of the b_2 wave.

```
PULS:REC:B2:SRCP2:TRIG:DEL 100 ns
```

Shift the stimulus axis of the b_2 wave by 100 ns.

[SENSe<Ch>:]PULSe:RECeiver:B<rec_no>:SRCPort<port_no>:EVALuation:STARt<section_start>

Defines the start time of the averaging section for the wave quantity assigned to the measurement receiver <rec_no> and the analyzer source port <port_no>.

<Ch>	Channel number
<rec_no>	Number of the measurement receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.
<port_no>	Number of the analyzer source port. 1 to the total number of test ports.
<section_start>	Start time of the section
Range [def. unit]	–0.003 s to +0.002999975 s [s]. The increment (UP/DOWN) is 50 ns. The width of the averaging section must be between 25 ns and 3 s.
*RST value	0 s
SCPI, Command Types	Device-specific, command or query
Example:	See [SENSe<Ch>:]PULSe:RECeiver:B<rec_no>:SRCPort<gen_no>:EVALuation:MODE

[SENSe<Ch>:]PULSe:RECeiver:B<rec_no>:SRCPort<port_no>:EVALuation:STOP<section_stop>

Defines the stop time of the averaging section for the wave quantity assigned to the measurement receiver <rec_no> and the analyzer source port <port_no>.

<Ch>	Channel number

<rec_no>	Number of the measurement receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.
<port_no>	Number of the analyzer source port. 1 to the total number of test ports.
<section_stop>	Stop time of the section
Range [def. unit]	–0.002999975 s to +0.003 s [s]. The increment (UP/DOWN) is 50 ns. The width of the averaging section must be between 25 ns and 3 s.
*RST value	0 s
SCPI, Command Types	Device-specific, command or query
Example:	See [SENSe<Ch>]:PULSe:RECEiver:B<rec_no>:SRCPort<gen_no>:EVALuation:MODE

[SENSe<Ch>]:PULSe:RECEiver:B<rec_no>:SRCPort<port_no>:LINEs[:STATE] <Boolean>

Displays or hides the limit lines of the averaging section for the wave quantity assigned to the measurement receiver <rec_no> and the analyzer source port <port_no>.

<Ch>	Channel number
<rec_no>	Number of the measurement receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.
<port_no>	Number of the analyzer source port. 1 to the total number of test ports.
<Boolean>	ON OFF – Display or hide lines
*RST value	OFF
SCPI, Command Types	Device-specific, command or query
Example:	See [SENSe<Ch>]:PULSe:RECEiver:B<rec_no>:SRCPort<gen_no>:EVALuation:MODE

[SENSe<Ch>]:PULSe:RECEiver:B<rec_no>:SRCPort<port_no>:TRIGger:DELay <shift_stimulus>

Defines an offset time (shift stimulus) for the wave quantity assigned to the measurement receiver <rec_no> and the analyzer source port <port_no>.

<Ch>	Channel number
<rec_no>	Number of the measurement receiver (= port number of the analyzer). Values range from 1 to the total number of test ports.
<port_no>	Number of the analyzer source port. 1 to the total number of test ports.
<shift_stimulus>	Offset time
Range [def. unit]	–0.003 s to +0.003 s [s]. The increment (UP/DOWN) is 50 ns.
*RST value	0 s
SCPI, Command	Device-specific, command or query

Types**Example:**See [\[SENSe<Ch>:\]PULSe:RECeiver:B<rec_no>:SRCPort<gen_no>:EVALuation:MODE](#)**[SENSe<Ch>:]PULSe:TIME:BWIDth[:RESolution] <bandwidth>**

Selects the IF bandwidth for pulse profile measurements.

<Ch>	Channel number
<bandwidth>	IF bandwidth
Range [def. unit]	100 kHz to 10 MHz [Hz]. UP and DOWN increment/decrement the bandwidth in 1-2-5 steps for each decade (the value 3 MHz is provided in addition). The analyzer rounds up any entered value between these steps and rounds down values exceeding the maximum bandwidth.
*RST value	10 MHz

**SCPI,
Command
Types**

Example:

*RST; SWE:TYPE PULS; :PULS:TIME:BWID 5 MHz

Select pulse profile mode and select an IF bandwidth of 5 MHz.

PULS:TIME:STAR -10 us; STOP 200 us

Select a displayed time range between –10 µs and +200 µs.

[SENSe<Ch>:]PULSe:TIME:STARt <start>

Selects the start time of the displayed time range relative to the trigger time.

<Ch>	Channel number
<start>	Start time
Range [def. unit]	–0.003 s to +0.002999975 s [s]. The increment (UP/DOWN) is 50 ns. The width of the displayed time range must be between 25 ns and 3 s.
*RST value	–10 µs

**SCPI,
Command
Types**

Example:See [\[SENSe<Ch>:\]PULSe:TIME:BWIDth\[:RESolution\]](#)**[SENSe<Ch>:]PULSe:TIME:STOP <stop>**

Selects the stop time of the displayed time range relative to the trigger time.

<Ch>	Channel number
<stop>	Stop time

Range [def. unit]	–0.002999975 s to +0.003 s [s]. The increment (UP/DOWN) is 50 ns. The width of the displayed time range must be between 25 ns and 3 s.
*RST value	+100 µs
SCPI, Command Types	Device-specific, command or query
Example:	See [SENSe<Ch>:]PULSe:TIME:BWIDth[:RESolution]

[SENSe<Ch>:]ROSCillator...

This subsystem controls the frequency reference signal.

[SENSe<Ch>:]ROSCillator[:SOURce] INTERNAL | EXTERNAL

Selects the source of the reference oscillator signal.

<Ch>	Channel number. This suffix is ignored in the <code>ROSCillator</code> subsystem and can be set to any value.
INTERNAL	Select internal 10 MHz reference oscillator.
EXTERNAL	Select external reference clock. The frequency of the external reference clock is specified via [SENSe<Chn>:]ROSCillator:EXTERNAL:FREQUENCY .
*RST value	INTERNAL
SCPI, Command Types	Confirmed, command or query
Example:	<code>ROSC EXT</code>

Select external reference oscillator.

`ROSC:EXT:FREQ?`

Query the frequency of the external reference oscillator. The response is 10000000 Hz, i.e. the frequency of the external reference oscillator must be 10 MHz.

[SENSe<Ch>:]ROSCillator:EXTERNAL:FREQUENCY <numeric_value>

Specifies or queries the frequency of the external reference oscillator.

<Ch>	Channel number. This suffix is ignored in the <code>ROSCillator</code> subsystem and can be set to any value.
<numeric_value>	Frequency of the external reference clock signal. The frequency must be 10 MHz; any other setting is ignored.
Range [def. unit]	10 MHz [Hz].
*RST value	10 MHz
SCPI, Command	Confirmed, command or query

Types

Example: See `[SENSe<Ch>:]ROSCillator[:SOURce]`.

[SENSe<Ch>:]SEGMENT<Seg>...

This subsystem defines all channel settings for a *Segmented Frequency* sweep. A segmented sweep is activated via `[SENSe<Ch>:]SWEep:TYPE SEGMENT`.

 **NOTE** The commands in the `[SENSe<Ch>:]SEGMENT<Seg>...` subsystem do not accept the step parameters `UP` and `DOWN`. Numeric values can be entered directly or using the `DEFAULT`, `MINimum`, `MAXimum` parameters.

[SENSe<Ch>:]SEGMENT<Seg>:ADD

Inserts a new sweep segment using default channel settings (*Insert New Segment*). The added segment covers the frequency interval between the maximum frequency of the existing sweep segments and the stop frequency of the entire sweep range.

 **NOTE** Use `[SENSe<Ch>:]SEGMENT<Seg>:INSERT` to create a segment with specific channel settings.

<Ch>	Channel number. If unspecified the numeric suffix is set to 1.
<Seg>	Sweep segment number. Segment numbers must be sequential. If <i>n</i> segments already exist, the added segment must have the segment number <i>n</i> +1.
*RST value	–
SCPI, Command Types	Device-specific, no query.
Example:	<pre>SEGMENT:INS 1MHZ, 1.5MHZ, 111, -21DBM, 0.5S, 0, 10KHZ</pre>

Create a sweep segment with a sweep range between 1.0 MHz and 1.5 MHz.

```
SEGMENT2:ADD
```

Create a second sweep segment. The frequency range of the second segment will be between 1.5 MHz and the **maximum frequency** of the analyzer.

[SENSe<Ch>:]SEGMENT<Seg>:BWIDth[:RESolution] <Bandwidth>

Defines the resolution bandwidth of the analyzer (*Meas. Bandwidth*) in sweep segment no. `<Seg>`. At the same time, the command activates separate bandwidth setting in all sweep segments (`[SENSe<Ch>:]SEGMENT<Seg>:BWIDth[:RESolution]:CONTROL ON`).

<Ch>	Channel number
<Seg>	Sweep segment number
<Bandwidth>	Resolution bandwidth.
Range [def. unit]	1.0E-6 Hz to 5 MHz [Hz]. <code>UP</code> and <code>DOWN</code> increment/decrement the bandwidth in 1-2-5 steps for each decade. The analyzer rounds up any entered value between

these steps and rounds down values exceeding the maximum bandwidth.
 *RST value 10 kHz

SCPI, Command Types Device-specific, command or query

Example:

```
SEGM:ADD
```

Create a new sweep segment no. 1 in channel no. 1 using default settings and thus 10 kHz measurement bandwidth.

```
SEGM:BWID 1 MHZ
```

Increase the resolution bandwidth to 1 MHz.

[SENSe<Ch>:]SEGMENT<Seg>:BWIDth[:RESolution]:CONTrol <Boolean>

Selects common or independent *Meas. Bandwidth* settings for the sweep segments.

<Ch> Channel number

<Seg> Sweep segment number. This suffix is ignored; the setting controls the whole segmented sweep.

<Boolean> ON: Use independent bandwidth settings, to be defined via [SENSe<Ch>:]SEGMENT<Seg>:BWIDth[:RESolution].
 OFF: Reset the bandwidth in all sweep segments to the bandwidth for unsegmented sweeps, defined via SENSe<Ch>:BWIDth[:RESolution]. ON will not restore the previous values.

*RST value OFF. The parameter is automatically switched to ON when a bandwidth is entered using [SENSe<Ch>:]SEGMENT<Seg>:BWIDth[:RESolution].

SCPI, Command Types Device-specific, command or query

Example:

```
SEGM:ADD
```

Create a new sweep segment no. 1 in channel no. 1 using default settings and thus 10 kHz measurement bandwidth.

```
SEGM:BWID 1 MHZ
```

Increase the resolution bandwidth to 1 MHz.

```
SEGM:BWID:CONT OFF
```

Couple the bandwidths in all segments and reset the bandwidth in segment no. 1 to the initial value.

[SENSe<Ch>:]SEGMENT<Seg>:BWIDth[:RESolution]:SElect NORMal | HIGH

Defines the *Selectivity* in sweep segment no. <Seg>. At the same time, the command activates separate selectivity setting in all sweep segments

([SENSe<Ch>:]SEGMENT<Seg>:BWIDth[:RESolution]SElect:CONTrol ON).

<Ch> Channel number

<Seg> Sweep segment number

NORMal Use IF filter with normal selectivity and short settling time.

HIGH Use IF filter with higher selectivity but larger settling time.

*RST value NORMal

SCPI, Command Types Device-specific, command or query

Example:

```
SEGM:ADD
```

Create a new sweep segment no. 1 in channel no. 1 using default settings and thus NORMal selectivity.

```
SEGM:BWID:SEL HIGH
```

Activate an IF filter with high selectivity.

[SENSe<Ch>:]SEGMENT<Seg>:BWIDth[:RESolution]:SElect:CONTrol <Boolean>

Selects common or independent *Selectivity* settings for the sweep segments.

<Ch> Channel number

<Seg> Sweep segment number. This suffix is ignored; the setting controls the whole segmented sweep.

<Boolean> ON – Use independent selectivity settings, to be defined via [SENSe<Ch>:]SEGMENT<Seg>:BWIDth[:RESolution]:SElect.
OFF – Reset the selectivity in all sweep segments to the selectivity for unsegmented sweeps, defined via SENSe<Ch>:BWIDth[:RESolution]:SElect. ON will not restore the previous values.

*RST value OFF. The parameter is automatically switched to ON when a selectivity is entered using [SENSe<Ch>:]SEGMENT<Seg>:BWIDth[:RESolution]:SElect.

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; :SEGM:ADD
```

Create a new sweep segment no. 1 in channel no. 1 using default settings and thus NORMal selectivity.

```
SEGM:BWID:SEL HIGH
```

Change the selectivity to HIGH.

```
BWID:SEL?
```

Query the (default) selectivity for unsegmented sweeps. The response is NORM.

```
SEGM:BWID:SEL:CONT OFF
```

Couple the selectivities in all segments and reset the selectivity in segment no. 1 to the unsegmented value NORMal.

[SENSe<Ch>:]SEGMENT<Seg>:CLEAr

[Deprecated command]

Deletes all sweep segments in the channel. The command is equivalent to

`[SENSe<Ch>:]SEGMENT<:Seg>:DELEte:ALL.`

[SENSe<Ch>:]SEGMENT<Seg>:COUNT?

Returns the number of sweep segments in the channel including all segments that are switched off (`[SENSe<Ch>:]SEGMENT<Seg>[:STATe] OFF`).

<Ch>	Channel number
<Seg>	Sweep segment number. This suffix is ignored; the command counts all segments.
*RST value	–
SCPI, Command Types	Device-specific, query only.

Example:

```
SEGM:ADD
```

Create a new sweep segment no. 1 in channel no. 1 using default settings.

```
SEGM OFF
```

Disable the measurement in the created sweep segment.

```
SEGM:COUN?
```

Query the number of segments.

**[SENSe<Ch>:]SEGMENT<Seg>:DEFine
<Start>,<Stop>,<Points>,<Power>,<Time>[<Point Delay>,<Unused>,<Meas.
Bandwidth>[,<LO>,<Selectivity>]**

Creates or re-defines a sweep segment <Seg> with specific channel settings.

Entry of the first seven numeric parameters is mandatory; no default values are provided. All settings can be changed for existing segments using other commands of the `[SENSe<Ch>:]SEGMENT<Seg>...` subsystem.

Note: Use `[SENSe<Ch>:]SEGMENT<Seg>:Add` to create a segment with default channel settings. Use `[SENSe<Ch>:]SEGMENT<Seg>:INSert` (no query) to insert a new segment into the current segment list.

<Ch>	Channel number
<Seg>	Sweep segment number. Segment numbers must be sequential. The specified segment number must be smaller or equal to the number of existing segments plus 1.

	If segment number <Seg> already exists, it is replaced by the new segment.
<Start>, <Stop>	Start and stop frequency of the segment. See [SENSe<Ch>:]SEGMENT<Seg>:FREQuency:START and [SENSe<Ch>:]SEGMENT<Seg>:FREQuency:STOP.
Range [def. unit]	Depending on the analyzer model . [Hz]
<Points>	Number of sweep points in the segment. See [SENSe<Ch>:]SEGMENT<Seg>:SWEep:POINts.
Range [def. unit]	1 to 60001. [1] 1 is allowed if start and stop frequencies are equal.
<Power>	Internal source power in the segment. See [SENSe<Ch>:]SEGMENT<Seg>:POWEr.
Range [def. unit]	–40 dBm to +10 dBm. The exact range depends on the analyzer model; refer to the data sheet [dBm]. UP and DOWN increment/decrement the source power in 1-dB steps.
<Time>	Duration of the sweep in the segment. See [SENSe<Ch>:]SEGMENT<Seg>:SWEep:TIME. In the setting [SENSe<Ch>:]SEGMENT<Seg>:INSert:SElect DWELL, this parameter is replaced by <Point Delay>.
Range [def. unit]	Depending on other channel settings [s]. AUTO activates automatic sweep time setting in the segment, which is equivalent to the minimum sweep time possible.
<Point Delay>	Delay for each partial measurement in the segment. See [SENSe<Ch>:]SEGMENT<Seg>:SWEep:DWELL. In the setting [SENSe<Ch>:]SEGMENT<Seg>:INSert:SElect SWTime, this parameter is replaced by <Time>.
Range [def. unit]	0 s to 2.5E+003 s. [s] AUTO activates automatic sweep time setting in the segment, which is equivalent to a meas. delay of 0 s.
ZVR  <Unused>	Ignored parameter, should be set to the default value 0.
<Meas. Bandwidth>	Resolution bandwidth in the segment. See [SENSe<Ch>:]SEGMENT<Seg>:BWIDth[:RESolution].
Range [def. unit]	1 Hz to 1 MHz (5 (10) MHz with option R&S ZVA-K17, 10 (30) MHz with option R&S ZVA-K7) [Hz].
<LO>	Position of the local oscillator frequency LO relative to the RF frequency (<i>Spur Avoid</i>). See [SENSe<Ch>:]SEGMENT<Seg>:SBAND.
Range [def. unit]	POSitive: LO > RF NEGative: LO < RF AUTO: The analyzer auto-selects the local oscillator frequency, depending on the receiver (RF) frequency and the test port.
<Selectivity>	Selectivity of the IF filter. See [SENSe<Ch>:]SEGMENT<Seg>:BWIDth[:RESolution]:SElect.
Range [def. unit]	NORMal HIGH [–]
SCPI, Command Types	Device-specific, with query (used to retrieve the channel settings for a particular sweep segment).
Example:	SEGM:ADD Create a new sweep segment no. 1 in channel no. 1 using default settings.

```
SEGM:DEF?
```

Query the channel settings for the new segment.

[SENSe<Ch>:]SEGMENT<Seg>:DEFine:SElect SWTime | DWELI

Defines whether the sweep time of a new segment, i.e. numeric parameter no. 5 of the command [SENSe<Ch>:]SEGMENT<Seg>:DEFine, is entered as a segment sweep time or as a meas. delay.

<Ch>	Channel number
<Seg>	Sweep segment number
SWTime	Use segment sweep time.
DWELI	Use meas. delay.
*RST value	SWTime
SCPI, Command Types	Device-specific, command or query.

Example:

```
SEGM:DEF:SEL DWEL
```

Select the meas. delay to determine the sweep time in a new sweep segment.

```
SEGM:DEF 1MHZ, 1.5MHZ, 111, -21DBM, 0.01S, 0, 10KHZ
```

Create a sweep segment with a sweep range between 1.0 MHz and 1.5 MHz and a meas. delay of 10 ms.

```
SEGM:SWE:TIME?
```

Query the sweep time in the new segment.

[SENSe<Ch>:]SEGMENT<Seg>:DELeTe

Deletes the specified (single) sweep segment (*Del. Selected Segment*).

[SENSe<Ch>:]SEGMENT<Seg>:DELeTe:ALL deletes all segments in the channel.

<Ch>	Channel number
<Seg>	Sweep segment number
*RST value	—
SCPI, Command Types	Device-specific, no query.

Example:

```
SEGM:ADD
```

Create a new sweep segment no. 1 in channel no. 1 using default settings.

```
SEGM:DEL
```

Delete the created segment.

[SENSe<Ch>:]SEGMENT<Seg>:DELEte:ALL

Deletes all sweep segments in the channel (*Del. All Segments*). [\[SENSe<Ch>:\]SEGMENT<Seg>:DELEte](#) deletes a single segment.

<Ch> Channel number

<Seg> Sweep segment number. This suffix is ignored; the command deletes all segments.

***RST value** –

SCPI, Command Types Device-specific, no query.

Example:

```
SEGM:ADD
```

Create a new sweep segment no. 1 in channel no. 1 using default settings.

```
SEGM:DEL:ALL
```

Delete the created segment and all segments in the channel created before.

[SENSe<Ch>:]SEGMENT<Seg>:FREQuency:CENTer?

Returns the center frequency of sweep segment no. <Seg>.

<Ch> Channel number

<Seg> Sweep segment number

Response Center frequency of the sweep.

Range [def. unit] Depending on the [instrument model](#) [Hz].

***RST value** –

SCPI, Command Types Device specific, query only.

Example:

```
SEGM:INS 1MHZ, 1.5MHZ, 111, -21DBM, 0.5S, 0, 10KHZ
```

Create a sweep segment with a sweep range between 1.0 MHz and 1.5 MHz.

```
SEGM:FREQ:CENT?
```

Query the center frequency of the created segment. The response is 1.2500000000E+006.

Note: The frequency range of the sweep segment can be changed via [\[SENSe<Ch>:\]SEGMENT<Seg>:FREQuency:START](#) and [\[SENSe<Ch>:\]SEGMENT<Seg>:FREQuency:STOP](#).

[SENSe<Ch>:]SEGMENT<Seg>:FREQuency:SPAN?

Returns the span (width) of sweep segment no. <Seg>.

<Ch>	Channel number
<Seg>	Sweep segment number
Response	Frequency span of the sweep.
Range [def. unit]	Depending on the instrument model [Hz].
*RST value	–

SCPI, Command Types Device specific, query only.

Example:

```
SEGM:INS 1MHZ, 1.5MHZ, 111, -21DBM, 0.5S, 0, 10KHZ
```

Create a sweep segment with a sweep range between 1.0 MHz and 1.5 MHz.

```
SEGM:FREQ:SPAN?
```

Query the span of the created segment. The response is 5.0000000000E+005.

Note: The frequency range of the sweep segment can be changed via [\[SENSe<Ch>:\]SEGMent<Seg>:FREQuency:START](#) and [\[SENSe<Ch>:\]SEGMent<Seg>:FREQuency:STOP](#).

[SENSe<Ch>:]SEGMent<Seg>:FREQuency:START <Start>

Defines the *Start* frequency of sweep segment no. <Seg>.

<Ch>	Channel number
<Seg>	Sweep segment number
<Start>	Start frequency of the sweep.
Range [def. unit]	Depending on the instrument model [Hz]. The increment is 0.1 kHz.
*RST value	– (no sweep segment defined after reset)

SCPI, Command Types Device-specific, command or query

Example:

```
SEGM:INS 1MHZ, 1.5MHZ, 111, -21DBM, 0.5S, 0, 10KHZ
```

Create a sweep segment with a sweep range between 1.0 MHz and 1.5 MHz.

```
SEGM:FREQ:STAR?
```

Query the start frequency of the created segment. The response is 1.0000000000E+006.

Note: If the start frequency entered is greater than the current stop frequency ([\[SENSe<Ch>:\]SEGMent<Seg>:FREQuency:STOP](#)), the stop frequency is set to the start frequency plus the minimum frequency span of 1 Hz.

[SENSe<Ch>:]SEGMent<Seg>:FREQuency:STOP <Stop>

Defines the *Stop* frequency of sweep segment no. <Seg>.

<Ch>	Channel number
<Seg>	Sweep segment number
<Stop>	Stop frequency of the sweep.
Range [def. unit]	Depending on the instrument model [Hz]. The increment is 0.1 kHz.
*RST value	– (no sweep segment defined after reset)
SCPI, Command Types	Device-specific, command or query
Example:	<pre>SEGM:INS 1MHZ, 1.5MHZ, 111, -21DBM, 0.5S, 0, 10KHZ</pre> Create a sweep segment with a sweep range between 1.0 MHz and 1.5 MHz. <pre>SEGM:FREQ:STOP?</pre> Query the stop frequency of the created segment. The response is 1.5000000000E+006.

Note: If the stop frequency entered is smaller than the current start frequency (`[SENSe<Ch>:]SEGMent<Seg>:FREQuency:START`), the start frequency is set to the stop frequency minus the minimum frequency span (`[SENSe<Ch>:]SEGMent<Seg>:FREQuency:SPAN`).

[SENSe<Ch>:]SEGMent<Seg>:INSert

<Start>,<Stop>,<Points>,<Power>,<Time>|<Point Delay>,<Unused>,<Meas. Bandwidth>[,<LO>,<Selectivity>]

Adds a new sweep segment with specific channel settings.

Entry of the first seven numeric parameters is mandatory; no default values are provided. All settings can be changed for existing segments using other commands of the `[SENSe<Ch>:]SEGMent<Seg>...` subsystem.

Note: Use `[SENSe<Ch>:]SEGMent<Seg>:Add` to create a segment with default channel settings. Use `[SENSe<Ch>:]SEGMent<Seg>:DEfine` to change or query all settings of an existing segment.

<Ch>	Channel number
<Seg>	Sweep segment number. Segment numbers must be sequential. The specified segment number must be smaller or equal to the number of existing segments plus 1. Moreover, segment numbers must be selected such that the corresponding frequency ranges are in ascending order. If one or more sweep segments with segment numbers <Seg> or larger exist in the current channel, then all these existing segment numbers are incremented by 1 and the new segment is inserted as segment no. <Seg>.
<Start>,<Stop>	Start and stop frequency of the segment. See <code>[SENSe<Ch>:]SEGMent<Seg>:FREQuency:START</code> and <code>[SENSe<Ch>:]SEGMent<Seg>:FREQuency:STOP</code>.
Range [def. unit]	Depending on the analyzer model . [Hz]
<Points>	Number of sweep points in the segment. See <code>[SENSe<Ch>:]SEGMent<Seg>:SWEep:POINts</code>.
Range [def. unit]	1 to 60001. [1] 1 is allowed if start and stop frequencies are equal.

<Power>	Internal source power in the segment. See [SENSe<Ch>:]SEGMENT<Seg>:POWer .
Range [def. unit]	–40 dBm to +10 dBm. The exact range depends on the analyzer model; refer to the data sheet [dBm]. UP and DOWN increment/decrement the source power in 1-dB steps.
<Time>	Duration of the sweep in the segment. See [SENSe<Ch>:]SEGMENT<Seg>:SWEp:TIME . In the setting [SENSe<Ch>:]SEGMENT<Seg>:INSert:SElect DWELL , this parameter is replaced by <Point Delay>. AUTO activates automatic sweep time setting in the segment, which is equivalent to the minimum sweep time possible.
Range [def. unit]	Depending on other channel settings [s].
<Point Delay>	Delay for each partial measurement in the segment. See [SENSe<Ch>:]SEGMENT<Seg>:SWEp:DWELL . In the setting [SENSe<Ch>:]SEGMENT<Seg>:INSert:SElect SWTime , this parameter is replaced by <Time>.
Range [def. unit]	0 s to 2.5E+003 s. [s] AUTO activates automatic sweep time setting in the segment, which is equivalent to a meas. delay of 0 s.
ZVR ☒ <Unused>	Ignored parameter, should be set to the default value 0.
<Meas. Bandwidth>	Resolution bandwidth in the segment. See [SENSe<Ch>:]SEGMENT<Seg>:BWIDth[:RESolution] .
Range [def. unit]	1.0E-6 Hz to 5 MHz [Hz].
<LO>	Position of the local oscillator frequency LO relative to the RF frequency (<i>Spur Avoid</i>). See [SENSe<Ch>:]SEGMENT<Seg>:SBAND .
Range [def. unit]	POSitive: LO > RF NEGative: LO < RF AUTO: The analyzer auto-selects the local oscillator frequency, depending on the receiver (RF) frequency and the test port.
<Selectivity>	Selectivity of the IF filter. See [SENSe<Ch>:]SEGMENT<Seg>:BWIDth[:RESolution]:SElect .
Range [def. unit]	NORMal HIGH [–]
SCPI, Command Types	Device-specific, no query.
Example:	<pre>SEGM:INS 1MHZ, 1.5MHZ, 111, -21DBM, 0.5S, 0, 10KHZ</pre> Create a sweep segment with a sweep range between 1.0 MHz and 1.5 MHz. <pre>SEGM2:ADD</pre> Create a second sweep segment. The frequency range of the second segment will be between 1.5 MHz and the maximum frequency of the analyzer.

[SENSe<Ch>:]SEGMENT<Seg>:INSert:SElect SWTime | DWELL

Defines whether the sweep time of a new segment, i.e. numeric parameter no. 5 of the command

[SENSe<Ch>:] SEGMENT<Seg>:INSert, is entered as a segment sweep time or as a meas. delay.

<Ch>	Channel number
<Seg>	Sweep segment number
SWTime	Use segment sweep time.
DWELI	Use meas delay.
*RST value	SWTime
SCPI, Command Types	Device-specific, command or query

Example:

```
SEGM:INS:SEL DWEL
```

Select the meas. delay to determine the sweep time in a new sweep segment.

```
SEGM:INS 1MHZ, 1.5MHZ, 111, -21DBM, 0.01S, 0, 10KHZ
```

Create a sweep segment with a sweep range between 1.0 MHz and 1.5 MHz and a meas. delay of 10 ms.

```
SEGM:SWE:TIME?
```

Query the sweep time in the new segment.

[SENSe<Ch>:]SEGMENT<Seg>:NAME '<segment_name>'

Defines the *Name* of the sweep segment no. <Seg>.

<Ch>	Channel number
<Seg>	Sweep segment number
'<segment_name>'	String parameter defining the segment name.
*RST value	" (empty string) – a new segment is created without segment name ([SENSe<Ch>:] SEGMENT<Seg>:ADD).
SCPI, Command Types	Device-specific, command or query

Example:

```
*RST; :SEGM:ADD
```

Create a new sweep segment no. 1 in channel no. 1 using default settings.

```
SEGM:NAME 'Passband'
```

Assign a segment name.

```
SEGMent:SBANd POSitive
```

Select LO > RF for the created segment. .

```
SEGM:SBANd:CONT?
```

Query whether individual *Spur Avoid* (LO <> RF) settings for the sweep segments are enabled. The response is 1.

[SENSe<Ch>:]SEGMENT<Seg>:OVERlap <Boolean>

[Deprecated command. not needed on R&S ZVA analyzers]

Queries whether the analyzer supports overlapping sweep segments.

<Ch>	Channel number This suffix is ignored; the command is instrument-specific.
<Seg>	Sweep segment number. This suffix is ignored; the command is instrument-specific.
<Boolean>	ON OFF: No effect.
*RST value	ON. If used as a query, the command returns the information that overlapping sweep segments are supported (ON).
SCPI, Command Types	Device-specific, command (no effect) or query

[SENSe<Ch>:]SEGMENT<Seg>:POWER[:LEVel] <Power>

Defines the *Power* of the internal signal source in sweep segment no. <Seg>. At the same time, the command activates separate power control in all sweep segments ([SENSe<Ch>:]SEGMENT<Seg>:POWER[:LEVel]:CONTROL ON).

<Ch>	Channel number
<Seg>	Sweep segment number
<Power>	Internal source power.
Range [def. unit]	–40 dBm to +10 dBm. The exact range depends on the analyzer model; refer to the data sheet [dBm].
*RST value	–10 dBm.
SCPI, Command Types	Device-specific, command or query

Example:

```
SEGM:ADD
```

Create a new sweep segment no. 1 in channel no. 1 using default settings and thus –10 dBm internal source power.

```
SEGM:POW -20
```

Decrease the power to –20 dBm.

[SENSe<Ch>:]SEGMENT<Seg>:POWER[:LEVel]:CONTROL <Boolean>

Selects common or independent internal source *Power* settings for the sweep segments.

<Ch>	Channel number
<Seg>	Sweep segment number. This suffix is ignored; the setting controls the whole segmented sweep.

<Boolean>	ON: Use independent power settings, to be defined via <code>[SENSe<Ch>:]SEGMENT<Seg>:POWer[:LEVel]</code> . OFF: Reset the power in all sweep segments to the power for unsegmented sweeps, defined via <code>SOURce<Ch>:POWer[:LEVel][:IMMediate][:AMPlitude]</code> . ON will not restore the previous values.
*RST value	OFF. The parameter is automatically switched to ON when a segment power is entered using <code>[SENSe<Ch>:]SEGMENT<Seg>:POWer[:LEVel]</code> .
SCPI, Command Types	Device-specific, command or query
Example:	<pre>SEGM:ADD</pre> Create a new sweep segment no. 1 in channel no. 1 using default settings and thus – 10 dBm internal source power. <pre>SEGM:POW -20</pre> Decrease the power to –20 dBm. <pre>SEGM:POW:CONT OFF</pre> Couple the powers in all segments and reset the power in segment no. 1 to the initial value.

[SENSe<Ch>:]SEGMENT<Seg>:SBAND AUTO | POSitive | NEGative

Defines the position of the local oscillator frequency LO relative to the RF frequency (sideband, *Spur Avoid*) in sweep segment no. <Seg>. At the same time, the command activates separate sideband settings in all sweep segments (`[SENSe<Ch>:]SEGMENT<Seg>:SBAND:CONTrol ON`).

<Ch>	Channel number
<Seg>	Sweep segment number
AUTO	The analyzer auto-selects the LO frequency, depending on the receiver (RF) frequency and the test port.
POSitive	LO > RF
NEGative	LO < RF
*RST value	AUTO
SCPI, Command Types	Device-specific, command or query
Example:	See <code>[SENSe<Ch>:]SEGMENT:NAME</code>

[SENSe<Ch>:]SEGMENT<Seg>:SBAND:CONTrol <Boolean>

Selects common or independent LO sideband (*Spur Avoid*) settings for the sweep segments.

<Ch>	Channel number

<Seg>	Sweep segment number. This suffix is ignored; the setting controls the whole segmented sweep.
<Boolean>	ON – Use independent sideband settings, to be defined via <code>[SENSe<Ch>:]SEGMENT<Seg>:SBAND</code> . OFF – Reset the sideband in all sweep segments to the sideband for unsegmented sweeps, defined via <code>SENSe<Ch>:FREQUENCY:SBAND</code> . ON will not restore the previous values.
*RST value	OFF. The parameter is automatically switched to ON when a sideband setting is defined using <code>[SENSe<Ch>:]SEGMENT<Seg>:SBAND</code> .
SCPI, Command Types	Device-specific, command or query
Example:	See <code>[SENSe<Ch>:]SEGMENT:NAME</code>

[SENSe<Ch>:]SEGMENT<Seg>[:STATe] <Boolean>

Activates or deactivates the sweep segment <Seg>. Sweep points belonging to inactive segments only are not measured

<Ch>	Channel number
<Seg>	Sweep segment number
<Boolean>	ON OFF - Activates or deactivates the measurement in sweep segment <Seg>.
*RST value	ON
SCPI, Command Types	Device-specific, command or query
Example:	SEGM:ADD

Create a new sweep segment no. 1 in channel no. 1 using default settings.

SEGM OFF

Disable the measurement in the created sweep segment.

[SENSe<Ch>:]SEGMENT<Seg>:SWEep:DWELl <Meas. Delay>

Defines the delay time for each partial measurement in sweep segment no. <Seg> (*Meas. Delay*). If coupling of the segments is switched on (`[SENSe<Ch>:]SEGMENT<Seg>:SWEep:DWELl:CONTRol ON`) the delay is valid for all sweep segments in the current channel.

<Ch>	Channel number
<Seg>	Sweep segment number
<Meas. Delay>	Meas. delay before each partial measurement.
Range [def. unit]	0 s to 2.5E+003 s. [s] Changing the delay leaves the number of points unchanged but has an impact on the duration of the sweep

*RST value ([SENSe<Ch>:]SEGMENT<Seg>:SWEep:TIME).
0 s

SCPI,
Command
Types Device-specific, command or query. This default value corresponds to automatic sweep time setting in manual control.

Example:

SEGMENT:ADD

Create a new sweep segment no. 1 in channel no. 1 using default settings.

SEGMENT:SWE:DWEL 1 MS

Set the meas. delay in segment no. 1 to 1 ms.

SEGMENT:DEF? Response: 300000,8000000000,51,-300,0.056559,0,10000,POS,NORM

Query the channel parameters for sweep segment 1. The response value for the segment sweep time (olive) implicitly contains the defined meas. delay.

[SENSe<Ch>:]SEGMENT<Seg>:SWEep:DWEL:CONTROL <Boolean>Selects common or independent *Meas. Delay* settings for the sweep segments.

<Ch> Channel number

<Seg> Sweep segment number. This suffix is ignored; the setting controls the whole segmented sweep.

<Boolean> ON: Use independent delay settings, to be defined via
[SENSe<Ch>:]SEGMENT<Seg>:SWEep:DWEL1.
OFF: Reset the delay in all sweep segments to the delay for unsegmented sweeps, defined via [SENSe<Ch>:]SWEep:DWEL1. ON will not restore the previous values.

*RST value OFF. The parameter is automatically switched to ON when a delay is entered using [SENSe<Ch>:]SEGMENT<Seg>:SWEep:DWEL1.

SCPI,
Command
Types Device-specific, command or query.

Example:

SEGMENT:ADD

Create a new sweep segment no. 1 in channel no. 1 using default settings and thus 0 s meas. delay.

SEGMENT:SWE:DWEL 0.1

Increase the meas. delay to 0.1 s.

SEGMENT:SWE:DWEL:CONTROL OFF

Couple the meas. delay in all segments and reset the delay in segment no. 1 to the initial value of 0 s.

[SENSe<Ch>:]SEGMENT<Seg>:SWEep:POINTS <Points>Defines the total number of measurement *Points* in sweep segment no. <Seg>.

<Ch>	Channel number
<Seg>	Sweep segment number
<Points>	Number of points in the segment.
Range [def. unit]	1 to 60001. [1] 1 is allowed if start and stop frequencies are equal.
*RST value	201

SCPI, Command Types Device-specific, command or query

Example:

```
SEGM:ADD
```

Create a new sweep segment no. 1 in channel no. 1 using default settings.

```
SEGM:SWE:POIN 401
```

Increase the number of points to 401.

[SENSe<Ch>:]SEGMENT<Seg>:SWEep:TIME <Sweep Time>

Sets the duration of the sweep in sweep segment no. <Seg> (*Segment Sweep Time*). At the same time, the command activates separate sweep time setting in all sweep segments (`[SENSe<Ch>:]SEGMENT<Seg>:SWEep:TIME:CONTRol ON`).

<Ch>	Channel number
<Seg>	Sweep segment number
<Sweep Time>	Segment sweep time.
Range [def. unit]	The minimum duration depends on the other channel settings, in particular on the number of points (<code>[SENSe<Ch>:]SEGMENT<Seg>:SWEep:POINTs</code>), the IF bandwidth (BWID) and the delay for each partial measurement (<code>[SENSe<Ch>:]SEGMENT<Seg>:SWEep:DWELL</code>). The maximum is 1000 s. [s] Changing the duration leaves the number of points unchanged but directly affects the delay.
*RST value	MIN, depending on the channel settings. This default value corresponds to automatic sweep time setting in manual control.

SCPI, Command Types Device-specific, command or query

Example:

```
SEGM:ADD
```

Create a new sweep segment no. 1 in channel no. 1.

```
SEGM:SWE:TIME 0.1
```

Increase the segment sweep time to 0.1 s.

```
SEGM:SWE:TIME:SUM?
```

Query the total duration of the segmented sweep. The response is *0.1*, because there is only one sweep segment.

[SENSe<Ch>:]SEGMENT<Seg>:SWEep:TIME:CONTROL <Boolean>

Selects common or independent *Segment Sweep Time* settings for the sweep segments.

<Ch>	Channel number
<Seg>	Sweep segment number. This suffix is ignored; the setting controls the whole segmented sweep.
<Boolean>	ON: Use independent segment sweep time settings, to be defined via <code>[SENSe<Ch>:]SEGMENT<Seg>:SWEep:TIME</code> . OFF: Reset the segment sweep time in all sweep segments to the segment sweep time for unsegmented sweeps, defined via <code>[SENSe<Ch>:]SWEep:TIME</code> . ON will not restore the previous values.
*RST value	OFF. The parameter is automatically switched to ON when a segment sweep time is entered using <code>[SENSe<Ch>:]SEGMENT<Seg>:SWEep:TIME</code> or if the channel settings in a sweep segment require a sweep time larger than the unsegmented sweep time.

SCPI, Command Types Device-specific, command or query

Example:

```
SEGM:ADD
```

Create a new sweep segment no. 1 in channel no. 1.

```
SEGM:SWE:TIME 0.1
```

Increase the segment sweep time to 0.1 s.

```
SEGM:SWE:TIME:CONT OFF
```

Couple the sweep times in all segments and reset the sweep time in segment no. 1 to the initial value.

[SENSe<Ch>:]SEGMENT<Seg>:SWEep:TIME:SUM?

Returns the total duration of the segmented sweep, calculated as the sum of the sweep times of the individual segments (`[SENSe<Ch>:]SEGMENT<Seg>:SWEep:TIME`).

<Ch>	Channel number
<Seg>	Sweep segment number. This suffix is ignored; the command returns the sum of all segments.
<Sweep Time>	Segment sweep time.
Range [def. unit]	See <code>[SENSe<Ch>:]SEGMENT<Seg>:SWEep:TIME [s]</code>
*RST value	–
SCPI, Command Types	Device-specific, command or query

Example:See `[SENSe<Ch>:]SEGMENT<Seg>:SWEep:TIME`**[SENSe<Ch>:]SEGMENT<Seg>:TRIGger:CONTRol <Boolean>**

Enables/disables selective segment triggering (configured using `[SENSe<Ch>:]SEGMENT<Seg>:TRIGger:STATe`).

<Ch>	Channel number
<Seg>	Sweep segment number. This suffix is ignored: the command affects the whole segmented sweep.
<Boolean>	OFF: Disables selective segment triggering. ON: Enables selective segment triggering.
*RST value	OFF
SCPI, Command Types	Device-specific, command or query

Example:See `[SENSe<Ch>:]SEGMENT<Seg>:TRIGger:STATe`**[SENSe<Ch>:]SEGMENT<Seg>:TRIGger:STATe <Boolean>**

Deactivates/activates triggering for segment <Seg>. This setting only takes effect if

1. the analyzer is not in Free Run mode (see `TRIGger<Ch>[:SEQUence]:SOURCE`)
2. selective segment triggering is enabled (`[SENSe<Ch>:]SEGMENT<Seg>:TRIGger:CONTRol ON`)

<Ch>	Channel number
<Seg>	Sweep segment number
<Boolean>	ON: All triggers within the segment are active, except when <code>TRIGger<Ch>[:SEQUence]:LINK</code> is set to 'SWEep'. OFF: All triggers within the segment are inactive, i.e. the segment will be swept in one go - immediately after the previous segment.
*RST value	ON
SCPI, Command Types	Device-specific, command or query

Example:`SEGM2:TRIG:STAT OFF`

Deactivates triggering for segment 2.

`SEGM2:TRIG:STAT?`

Returns 0. However, this will not take effect unless selective segment triggering is enabled.

`SEGM:TRIG:CONT ON`

Enables selective segment triggering

[SENSe<Ch>:]SWEep...

This subsystem provides general settings to control the sweep. Most of the settings have an impact on the sweep time.



The [SENSe<Ch>:]SWEep... settings apply to non-segmented sweep types. Segmented sweeps are selected via [SENSe<Ch>:]SWEep:TYPE SEGMENT and configured in the [SENSe<Ch>:]SEGMENT<Seg>... subsystem.

[SENSe<Ch>:]SWEep:AXIS:FREQuency '<frequency_ref>'

Selects the stimulus signal that is used for the definition of the frequency sweep range or CW frequency.



This command is particularly useful in arbitrary mode (with option R&S ZVA-K4), where the frequencies and source powers at the ports are independent. For R&S ZVA analyzers without option R&S ZVA-K4, all frequencies are coupled so that this selection has no effect.

<Ch>	Channel number. If unspecified the numeric suffix is set to 1.
'<frequency_ref>'	String parameter, one of the following signals: 'Channel Base; Source' – Base channel frequency 'Port 1; Source' – Source frequency at port 1, 'Port 2; Source' – Source frequency at port 2 ... 'Port All; Receiver' – Receiver frequency (equal for all analyzer ports) 'Gen 1; Source' – External generator frequency 1 ... 'Pmtr 1; Receiver' – External power meter frequency 1 ...
*RST value	'Channel Base: Source'

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; FREQ:STAR 1 GHz; STOP 2 GHz
```

Define a base channel frequency range between 1 GHz and 2 GHz. This frequency is also used as an (initial) frequency range for all test ports and external generators.

```
SOUR:FREQ1:CONV:ARB:IFR 1, 1, 1E+9, SWE
```

Convert the source frequency at test port no. 1 to the range between 2 GHz and 3 GHz.

```
SWE:AXIS:FREQ 'Port 1; Source'
```

Select the source signal at port 1 as the reference signal for frequency definitions.

```
FREQ:STAR 3 GHz; STOP 4 GHz
```

Shift all frequency ranges by +1 GHz.

```
SWE:AXIS:FREQ 'Port 2; Source'
```

Select the source signal at port 2 as the reference signal for frequency definitions.

```
FREQ:STAR?: STOP?
```

Query the frequency range at test port 2. The response is
2000000000;3000000000.

```
DISP:MENU:KEY:EXEC 'Port Config'
```

Meas	Physic	Source					
	#	Gen	Frequency		Frequency Result	Power	Power Result
☒	Port 1	☐	fb + 1 GHz	...	3 GHz ... 4 GHz	Pb ...	0 dBm
☒	Port 2	☐	fb	...	2 GHz ... 3 GHz	Pb ...	0 dBm
☒	Port 3	☐	fb	...	2 GHz ... 3 GHz	Pb ...	0 dBm
☒	Port 4	☐	fb	...	2 GHz ... 3 GHz	Pb ...	0 dBm
	Gen 1	☐	fb	...	2 GHz ... 3 GHz	Pb ...	0 dBm

[SENSe<Ch>:]SWEep:AXIS:POWer '<power_ref>'

Selects the stimulus signal that is used for the definition of the power sweep range or fixed power.



This command is particularly useful in arbitrary mode (with option R&S ZVA-K4), where the frequencies and source powers at the ports are independent. For R&S ZVA analyzers without option R&S ZVA-K4, all powers are coupled so that this selection has no effect.

<Ch>

Channel number.

'<frequency_ref>'

String parameter, one of the following signals:
'Channel Base; Source' – Base channel power
'Port 1; Source' – Source power at port 1,
'Port 2; Source' – Source power at port 2
...
'Gen 1; Source' – External generator power 1
...

***RST value**

'Channel Base; Source'

SCPI, Command Types

Device-specific, command or query

Example:

```
*RST; SOUR:POW 5
```

Define a base channel power of +5 dBm. This power is also used as an (initial) power for all test ports and external generators.

```
SOUR:POW1:OFFS -5, CPAD
```

Change the source power at test port no. 1 to 0 dB without affecting the power at the remaining ports.

```
SWE:AXIS:POW 'Port 1; Source'
```

Select the source signal at port 1 as the reference signal for power definitions.

```
SOUR:POW -5
```

Shift all powers by -5 GHz.

SWE:AXIS:POW 'Port 2; Source'

Select the source signal at port 2 as the reference signal for power definitions.

SOUR:POW?

Query the power at test port 2. The response is 0.

DISP:MENU:KEY:EXEC 'Port Config'

Meas	Physic	Source		Frequency	Frequency Result	Power	Power Result
	#	Gen					
☒	Port 1	☐	fb	...	10 MHz ... 400 GHz	Pb - 5 dB	...
☒	Port 2	☐	fb	...	10 MHz ... 400 GHz	Pb	...
☒	Port 3	☐	fb	...	10 MHz ... 400 GHz	Pb	...
☒	Port 4	☐	fb	...	10 MHz ... 400 GHz	Pb	...
	Gen 1	☐	fb	...	10 MHz ... 400 GHz	Pb	...

[SENSe<Ch>:]SWEep:COUNT <No_of_Sweeps>

Defines the number of sweeps to be measured in single sweep mode ([INITiate<Ch>:CONTinuous OFF](#)).

<Ch> Channel number. If the single sweep mode settings apply to all channels ([INITiate<Ch>\[:IMMEDIATE\]:SCOPE ALL](#)), this suffix is ignored; see program example in section [Single Sweep Mode](#).

<No_of_Sweeps> Number of consecutive sweeps to be measured.

Range [def. unit] 1 to 999. [-]

*RST value 1

SCPI, Command Types Confirmed, command or query

Example: See [CALCulate<Chn>:DATA:NSweep:FIRST?](#).

[SENSe<Ch>:]SWEep:DETECTOR:TIME <det_time>

Defines the detector observation time for ratios and wave quantities if a *Peak* or *RMS* detector is active. The detector is selected together with the measured quantity ([CALCulate<Ch>:PARAMeter:MEASure](#) or [CALCulate<Ch>:PARAMeter:SDEFine](#)).

<Ch> Channel number.

<det_time> Detector time.

Range [def. unit] 0 s to 3456000 s. [s]

*RST value 0.01 s

SCPI, Command Types Confirmed, command or query

Example: *RST; :CALC:PAR:MEAS 'TRC1', 'a1D1RMS'

Select the wave quantity a1 for the default trace and activate the RMS

detector.

```
SWE:DET:TIME 1
```

Specify an observation time of 1 s at each sweep point.

[SENSe<Ch>:]SWEep:DWELI <delay>

Defines the *Meas. Delay* for each partial measurement. Setting a delay disables the automatic calculation of the (minimum) sweep time; see [SENSe<Ch>:]SWEep:TIME:AUTO.

<Ch> Channel number.

<delay> Meas. delay before each partial measurement.

Range [def. unit] 0 s to 3.179551E+002 s. [s] Changing the delay leaves the number of points unchanged but has an impact on the duration of the sweep ([SENSe<Ch>:]SWEep:TIME).

*RST value 0 s

SCPI, Command Types Confirmed, command or query

Example:

```
FUNC "XFR:POW:S12"
```

Activate a frequency sweep and select the S-parameter S12 as measured parameter for channel and trace no. 1.

```
SWE:TIME?
```

Query total sweep time.

```
SWE:DWEL 1
```

Set a delay of 1 s for each partial measurement.

```
SWE:TIME?
```

Query total sweep time. The time is extended by the delay times the total number of partial measurements per sweep.

[SENSe<Ch>:]SWEep:POINTs <no_points>

Defines the total number of measurement points per sweep (*Number of Points*).

<Ch> Channel number 1.

<no_points> Number of points per sweep.

Range [def. unit] 1 to 60001. [-]

*RST value 201

SCPI, Command Types Confirmed, command or query

Example:

```
FUNC "XFR:POW:S12"
```

Activate a frequency sweep and select the S-parameter S12 as measured

parameter for channel and trace no. 1.

```
SWE:TIME?
```

Query total sweep time.

```
SWE:POIN 2010
```

Multiply the (default) number of points by 10.

```
SWE:TIME?
```

Query total sweep time again. The analyzer estimates a sweep time that is also multiplied by 10.

[SENSe<Ch>:]SWEep:SPACing LINear | LOGarithmic

[Deprecated command]

Defines the frequency vs. time characteristics of a frequency sweep (*Lin. Frequency* or *Log Frequency*). The command has no effect on segmented frequency, power or time sweeps.

Note: Use [SENSe<Ch>:]SWEep:TYPE to select sweep types other than *Lin. Frequency* or *Log Frequency*.

<Ch> Channel number.

LINear The stimulus frequency is swept in equidistant steps over the frequency range. In a Cartesian diagram, the x-axis is a linear frequency axis.

LOGarithmic The frequency is swept in equidistant steps on a logarithmic scale. In a Cartesian diagram, the x-axis is a logarithmic frequency axis.

*RST value LINear

SCPI, Command Types Confirmed, command or query

Example:

```
FUNC "XFR:POW:S12"
```

Activate a frequency sweep and select the S-parameter S12 as measured parameter for channel and trace no. 1.

```
SWE:SPAC LOG
```

Change to sweep type *Log Frequency*.

[SENSe<Chn>:]SWEep:SRCPort 1 | 2 | 3 | 4

Selects a source port for the stimulus signal (*Drive Port*). The setting acts on the active trace. The effect of the drive port selection depends on the measurement parameter associated to the active trace:

- If an S-parameter $S_{\text{out}<\text{in}>}$ is measured, the second port number index <in> (input port of the DUT = drive port of the analyzer) is set equal to the selected drive port: Drive port selection affects the measured quantity.
- If a wave quantity or a ratio is measured, the drive port is independent from the measured quantity:

<Chn> Channel number used to identify the active trace. If unspecified the numeric suffix is set to 1.

1 ... Test port number of the analyzer, 1 to 2, 3 or 4, depending on the analyzer model.

***RST value** 1 (test port 1)

SCPI, Command Types Device-specific, with query.

Example:

```
CALC4:PAR:SDEF "Ch4Tr1", "A1"
```

Create channel 4 and a trace named *Ch4Tr1* to measure the wave quantity a1. The trace automatically becomes the active trace.

```
SENS4:SWE:SRCP 2
```

Select drive port 2 for the active trace.

[SENSe<Ch>:]SWEep:STEP <step_size>

Sets the distance between two consecutive sweep points.



This setting is valid for sweep types with equidistant sweep points only. It does not apply to logarithmic and segmented sweeps.

<Ch> Channel number.

<step_size> Stimulus step size.

Range [def. unit] Depending on the other channel settings. The minimum step size is equal to the sweep span divided by the maximum number of points minus one ([SENSe<Ch>:]SWEep:POINTS), the maximum step size is equal to the sweep span ([SENSe<Ch>:]FREQuency:SPAN). See also description of [manual control](#) and program example below. [–]

***RST value** Depending on the analyzer model. The default step size is equal to the default sweep span of the analyzer divided by the default number of points minus one.

SCPI, Command Types Confirmed, with query.

Example:

```
*RST::SWE:STEP?
```

Query the default step size. For a 24 GHz analyzer, the response is 119950000. 119950000 Hz = (24 GHz – 10 MHz) / 200.

```
SWE:STEP UP
```

Increase the step size.

```
FREQ:STOP?; :SWE:POIN?
```

Query the stop frequency of the sweep and the number of points. Increasing the step size has changed both values.

[SENSe<Ch>:]SWEep:TIME <duration>

Sets the duration of the sweep (*Sweep Time*). Setting a duration disables the automatic calculation of the

(minimum) sweep time; see [\[SENSe<Ch>:\]SWEep:TIME:AUTO](#).

Note: The sweep duration is ignored for the sweep types Time and CW Mode.

<Ch>	Channel number.
<duration>	Duration of the sweep.
Range [def. unit]	The minimum duration depends on the other channel settings, in particular on the number of points ([SENSe<Ch>:]SWEep:POINTS), the IF bandwidth (BWID) and the Meas. Delay for each partial measurement ([SENSe<Ch>:]SWEep:DWELI). The maximum is 100000 s. [s] Changing the duration leaves the number of points unchanged but directly affects the delay.
*RST value	MIN, depending on the channel settings

SCPI, Command Types
Confirmed, command or query

Example:

```
SWE:TIME 1
```

Set a total sweep time of 1 s.

```
SWE:DWEL?
```

Query the delay for each partial measurement.

```
SWE:TIME 2
```

Increase the total sweep time to 2 s.

```
SWE:DWEL?
```

Query the meas. delay for each partial measurement again. The delay is increased by 1 s divided by the total number of partial measurements per sweep.

[SENSe<Ch>:]SWEep:TIME:AUTO <Boolean>

When enabled, the (minimum) sweep duration is calculated internally using the other channel settings and zero delay ([\[SENSe<Ch>:\]SWEep:DWELI](#)).

Note: The automatically calculated sweep duration is ignored for the sweep types Time and CW Mode.

<Ch>	Channel number.
<Boolean>	ON OFF - Turns the automatic calculation of the sweep time on or off. OFF is also set if the sweep duration or delay is set explicitly using [SENSe<Ch>:]SWEep:TIME or [SENSe<Ch>:]SWEep:DWELI .
*RST value	ON

SCPI, Command Types
Confirmed, command or query

Example:

```
SWE:TIME 1
```

Set a total sweep time of 1 s.

```
SWE:TIME:AUTO?
```

A query returns the value 1.

[SENSe<Ch>:]SWEep:TYPE LINear | LOGarithmic | SEGment | POWER | CW | POINT | PULSe | IAMPlitude | IPHase

Selects the sweep type, i.e. the sweep variable (frequency/power/time) and the position of the sweep points across the sweep range.

<Ch>	Channel number.
LINear	Lin. frequency sweep at constant source power (<code>SOURce<Ch>:POWer<Pt>[:LEVel][:IMMediate][:AMPlitude]</code>). The stimulus frequency (<code>[SENSe<Ch>:]FREQuency:...</code>) is swept in equidistant steps over the frequency range. In a Cartesian diagram, the x-axis is a linear frequency axis.
LOGarithmic	Log. frequency sweep. The frequency is swept in equidistant steps on a logarithmic scale. In a Cartesian diagram, the x-axis is a logarithmic frequency axis.
SEGment	Segmented frequency sweep. The sweep range is composed of several continuous frequency ranges or single frequency points defined by means of the commands in the <code>[SENSe<Ch>:]SEGment<Seg>...</code> subsystem.
POWER	Power sweep. The measurement is performed at constant frequency (<code>SOURce<Ch>:FREQuency<Pt>:CW FIXed</code>) but with variable generator power that is swept in linear, equidistant steps over a continuous range (<code>SOURce<Ch>:POWer<Pt>:START, SOURce<Ch>:POWer<Pt>:STOP</code>). In a Cartesian diagram, the x-axis is a dB-linear power axis.
CW	Time sweep. The measurement is performed at constant frequency (<code>SOURce<Ch>:FREQuency<Pt>:CW FIXed</code>) and source power (<code>SOURce<Ch>:POWer<Pt>[:LEVel][:IMMediate][:AMPlitude]</code>) and repeated over a specified period of time at constant time intervals.
POINT	CW Mode sweep, time sweep triggered according to the current trigger settings .
PULSe	Pulse profile mode, configured via <code>SENSe:PULSe...</code>
IAMPlitude	Amplitude imbalance sweep, configured via <code>SOURce:TDIF...</code>
IPHase	Phase imbalance sweep, configured via <code>SOURce:TDIF...</code>
*RST value	LINear
SCPI, Command Types	Device-specific, command or query
Example:	<pre>FUNC "XFR:POW:S12"</pre> Activate a frequency sweep and select the S-parameter S12 as measured parameter for channel and trace no. 1. <pre>SWE:TYPE LOG</pre> Change to sweep type <i>Log Frequency</i>.

[SENSe<Ch>:]TEUNit...

This subsystem configures the different signal paths in the Extension Unit R&S ZVAX-TRM and selects the connectors for the pulse generators.

[SENSe<Ch>:]TEUNit:AMONitor<Path> PMODulator | COMBiner | OUTPut

Selects the input for the a-wave (REF) receiver at paths no. 1-4.

<Ch>	Channel number. If unspecified, this parameter is set to 1.
<Path>	Signal path, must be set to 1...4 (defaults to 1 if omitted).
Parameters	Position of the a-wave access in the RF path: • PMODulator: before the pulse modulator (only available for paths 1,2 and 3) • COMBiner: before the combiner • OUTPut: at the output.
*RST value	OUTPut
SCPI, Command Types	Device-specific, command or query
Example:	<pre>TEUN:AMON3 COMB</pre> On path 3, measure the a-wave before the combiner

[SENSe<Ch>:]TEUNit:COMBiner<Path>[:STATe] <Boolean>

Switches the internal combiner in-between RF signal paths 1 and 3 or 2 and 4 (source path).

<Ch>	Channel number. If unspecified, this parameter is set to 1.
<Path>	Signal path, must be set to 1 or 2 (defaults to 1 if omitted).
<Boolean>	ON – Internal combiner used. The combined source signals of paths <path> and <path>+2 are available at the NWA port <path>. OFF – No combiner used for paths <path> and <path>+2.
*RST value	OFF
SCPI, Command Types	Device-specific, command or query
Example:	<pre>TEUN:COMB ON</pre> Activate the internal combiner for RF paths 1 and 3.

[SENSe<Ch>:]TEUNit:PAMPlifier<Path>[:STATe] <Boolean>

Loops an internal power amplifier into one of the RF signal paths (source paths).

<Ch>	Channel number. If unspecified, this parameter is set to 1.
<Path>	Signal path no. 1, 2, 3 or 4. If unspecified, this parameter is set to 1.
<Boolean>	ON – Power amplifier used OFF – No power amplifier (through path)
*RST value	OFF

SCPI, Command Types Device-specific, command or query

Example:

```
TEUN:PAMP1 ON
```

Switch Power amplifier into path 1

[SENSe<Ch>:]TEUNit:PMODulator<Path>[:STATe] <Boolean>

Loops a pulse modulator into the RF signal path no. <Path>.

<Ch> Channel number

<Path> Signal path no. 1, 2, or 3. If unspecified, this parameter is set to 1.

<Boolean>
ON – Pulse modulator used
OFF – No pulse modulator (through path)

*RST value OFF

SCPI, Command Types Device-specific, command or query

Example:

```
TEUN:PMOD1 ON
```

Loop pulse modulator into path 1

[SENSe<Ch>:]TEUNit:PMODulator<Path>:SOURce G1INt | G2INt | G1Ext | G2Ext | OFF

Selects the source (i.e. the pulse generator) for the pulse modulator at RF path <Path>.

<Ch> Channel number.
If unspecified, this parameter is set to 1.

<Path> Signal path no. 1, 2 or 3.
If unspecified, this parameter is set to 1.

Parameters
G1INt – internal pulse generator (via CASCADE IN)
G2INt – internal sync generator (via CASCADE IN)
G1EXt – external generator 1 (via EXT PULSE GENERATOR 1)
G2EXt – external generator 2 (via EXT PULSE GENERATOR 2)
OFF

*RST value OFF

SCPI, Command Types Device-specific, command or query

Example:

```
TEUN:PMOD3:SOUR G1IN
```

Select the internal pulse generator as source for path 3

[SENSe<Ch>:]TEUNit:PMODulator<Path>:INVert <Boolean>

Invert the source of the pulse modulator on RF path <Path>.

<Ch> Channel number.
If unspecified, this parameter is set to 1.

<Path>	Signal path no. 1, 2 or 3. If unspecified, this parameter is set to 1.
<Boolean>	ON – Input is inverted OFF – Input is not inverted
*RST value	OFF
SCPI, Command Types	Device-specific, command or query
Example:	<code>TEUN:PMOD1:INV ON</code> Invert pulsed source signal modulator at path 1

[SENSe<Ch>:]TEUNit:REAR<No>:SOURce G1INt | G2INt | G1Ext | G2Ext | OFF

Defines the source signal for pulse generator output <No> of the R&S ZVAX-TRM.

<Ch>	Channel number. If unspecified, this parameter is set to 1.
<No>	Ext. OUT no. 1 or 2. If unspecified, this parameter is set to 1.
Parameters	G1INt – internal pulse generator (via CASCADE IN) G2INt – internal sync generator (via CASCADE IN) G1Ext – external generator 1 (via EXT PULSE GENERATOR 1) G2Ext – external generator 2 (via EXT PULSE GENERATOR 2) OFF
*RST value	OFF
SCPI, Command Types	Device-specific, command or query
Example:	<code>TEUN:REAR1:SOUR G1IN</code> Propagate internal pulse generator signal 1 to external pulse generator output 1

[SENSe<Ch>:]TEUNit:REAR<No>:INVert <Boolean>

Defines whether the signal at the pulse generator output no. <No> shall be inverted.

<Ch>	Channel number. If unspecified, this parameter is set to 1.
<No>	Ext. OUT no. 1 or 2. If unspecified, this parameter is set to 1.
<Boolean>	ON – Input is inverted OFF – Input is not inverted
*RST value	OFF
SCPI, Command Types	Device-specific, command or query
Example:	<code>TEUN:PORT1:INV ON</code> Invert signal at external pulse generator output 1

[SENSe<Ch>:]TEUNit:UMEas<Path>[:STATe] <Boolean>

Enables/disables the user measurement path extension for RF signal path <Path>.

<Ch>	Channel number
<Path>	Signal path no. 1 or 2. If unspecified, this parameter is set to 1.
<Boolean>	ON – User meas path extension enabled OFF – User meas path extension disabled (through path)
*RST value	OFF
SCPI, Command Types	Device-specific, command or query

Example:

TEUN:UME1 ON

Enable the user measurement path extension for path 1

[SENSe<Ch>:]TEUNit:USource<Path>[:STATe] <Boolean>

Enables/disables the user source path extension for RF signal path <Path>.

<Ch>	Channel number
<Path>	Signal path no. 1 or 2. If unspecified, this parameter is set to 1.
<Boolean>	ON – User source path extension enabled OFF – User source path extension disabled (through path)
*RST value	OFF
SCPI, Command Types	Device-specific, command or query

Example:

TEUN:USO1 ON

Enable the user source path extension for path 1

[SENSe<Chn>:]UDSPParams<Pt>...

This subsystem defines user-defined (virtual) ports. All commands are supported for compatibility with R&S ZVR functionalities.



User-defined S-parameters are intended for standard S-parameter measurements. They are not compatible with special measurement modes such as True Differential Mode or Defined Coherence Mode.

[SENSe<Ch>:]UDSPParams<Pt>:ACTive <Boolean>

Enables or disables the user-defines S-parameters for channel <Ch> and port no. <Pt>.

<Ch>	Channel number
<Pt>	Physical analyzer port number
<Boolean>	ON OFF – Enable or disable user-defined S-parameters

*RST value OFF

SCPI, Command Types Device-specific, command or query

Example:

```
SENSe2:UDSPARAMS1:ACTive ON
```

Enable user-defined ports for channel no. 2 and port no. 1

```
SENSe2:UDSPARAMS1:PARAm '1:a1:b2'
```

Define a port combining the drive port 1, the reference wave a_1 . (i.e. the source signal which the analyzer transmits at port no. 1) and the measured wave at port 2 b_2 . The ratio b_2/a_1 is interpreted as a reflection parameter; a one-port calibration can be performed for the user-defined port.

[SENSe<Ch>:]UDSPARAMS<Pt>:PARAm '<port_string>'

Defines a user-defined analyzer port, based on a combination of generator index/drive port, reference wave (a), and measured wave (b). A standard analyzer port no. <n> combines the drive port no. <n> with the waves $a_{<n>}$ and $b_{<n>}$. With unequal drive port and wave indices, the interpretation of measured quantities can be changed; see measurement example for [\[SENSe<Ch>:\]UDSPARAMS<Pt>:ACTive](#).

<Ch> Channel number

<Pt> Physical analyzer port number

'<port_string>' Port definition string in the format '<drive port>:<a-wave>:<b-wave>'

Range [def. unit] Drive ports and waves depending on the number of analyzer ports

*RST value '1:a1:b1'

SCPI, Command Types Device-specific, command or query

Example:

```
See [SENSe<Ch>:]UDSPARAMS<Pt>:ACTive
```

SOURce

SOURce<Ch>:CMODE...

This subsystem controls the frequency and power of the internal signal source for *Defined Coherence Mode*, configures and starts the source power calibration, and provides output port settings.

Note: The *SOURce<Ch>:POWER...* subsystem comprises port-specific and general settings. Port-specific settings are valid for the port specified by the numeric suffix <Pt> (... :POWER<Pt>:...). General settings are valid for all test ports of the analyzer; the port suffix is ignored. Refer to the description of the individual commands for more information.

SOURce<Ch>:CMODE:PORT<Pt>:AMPLitude <rel. amplitude>

Defines the amplitude for the coherent signal at port no. <Pt> relative to the amplitude of the reference

signal ([SOURce<Ch>:CMODE:RPORT](#)). The amplitude replaces the port amplitude (see [SOURce<Ch>:POWER<Pt>\[:LEVEL\]\[:IMMEDIATE\]\[:AMPLITUDE\]](#) and related commands) as long as the port signal is selected as a coherent signal ([SOURce<Ch>:CMODE:PORT<Pt>\[:STATE\] ON](#)).

<Ch>	Channel number. If unspecified the numeric suffix is set to 1.
<Pt>	Test port number of the analyzer.
<rel. amplitude>	Port-specific relative amplitude.
Range [def. unit]	–300 dB to +300 dB [dB]. UP and DOWN increment/decrement the phase in 1-dB steps.
*RST value	0 dB

SCPI, Command Types Device-specific, command or query

Example (for an analyzer with 3 or more ports):

```
*RST; SOUR:CMOD:RPOR 2
```

Reset the analyzer and select port 2 as the reference port.

```
SOUR:CMOD:PORT3 ON
```

Select the signal from port 3 as a coherent signal.

```
SOUR:CMOD:PORT3:AMPL 10; :PHAS 90
```

Select the signal from port 3 as a coherent signal.

```
SOUR:CMOD:REF VOLT
```

Assign the specified amplitude and phase relation to the voltage of the coherent signals.

SOURce<Ch>:CMODE:PORT<Pt>:PHASe <rel. phase>

Defines the phase for the coherent signal at port no. <Pt> relative to the phase of the reference signal ([SOURce<Ch>:CMODE:RPORT](#)).

<Ch>	Channel number. If unspecified the numeric suffix is set to 1.
<Pt>	Test port number of the analyzer.
<rel. phase>	Port-specific relative phase.
Range [def. unit]	–162 deg to +162 deg [deg]. UP and DOWN increment/decrement the phase in 1-deg steps.
*RST value	0 deg

SCPI, Command Types Device-specific, command or query

Example:

```
See SOURce<Ch>:CMODE:PORT<Pt>:AMPLitude
```

SOURce<Ch>:CMODE:PORT<Pt>[:STATE] <Boolean>

Qualifies whether the signal at port no. <Pt> is a coherent or a non-coherent signal.

<Ch>	Channel number. If unspecified the numeric suffix is set to 1.

<Pt>	Test port number of the analyzer.
<Boolean>	Signal is coherent (ON) or non-coherent (OFF).
*RST value	OFF
SCPI, Command Types	Device-specific, command or query
Example:	See <code>SOURce<Ch>:CMODE:PORT<Pt>:AMPLitude</code>

SOURce<Ch>:CMODE:RPORT <port no.>

Selects the reference port for the *Defined Coherence Mode*.

<Ch>	Channel number. If unspecified the numeric suffix is set to 1.
<port no.>	Test port number of the analyzer.
Range [def. unit]	1 to the total number of ports of the analyzer (must be > 2)
*RST value	1
SCPI, Command Types	Device-specific, command or query
Example:	See <code>SOURce<Ch>:CMODE:PORT<Pt>:AMPLitude</code>

SOURce<Ch>:...

This subsystem controls the frequency and power of the internal signal source, configures and starts the source power calibration, and provides output port settings.

Note: The `SOURce<Ch>:POWER...` subsystem comprises port-specific and general settings. Port-specific settings are valid for the port specified by the numeric suffix `<Pt>` (`...:POWER<Pt>:...`). General settings are valid for all test ports of the analyzer; the port suffix is ignored. Refer to the description of the individual commands for more information.

SOURce<Ch>:FREQuency<Pt>[:CW] <fixed frequency> SOURce<Ch>:FREQuency<Pt>:FIXed <fixed frequency>

Defines the fixed (Continuous Wave, CW) frequency for all sweep types operating at fixed frequency (power sweep, time sweep, CW mode sweep). The two command forms `SOUR:FREQ:CW` and `SOUR:FREQ:FIX` are equivalent.



NOTE `SOURce<Ch>:FREQuency<Pt>:CW|FIXed` is equivalent to `[SENSe<Ch>:]FREQuency:CW|FIXed`. Source and receiver frequency are equal; the four commands overwrite each other. With option R&S ZVA-K4, *Frequency Conversion*, independent offset frequencies can be defined for the source and receiver frequencies; see `SOURce<Ch>:FREQuency<Pt>:CONVersion:ARBitrary:IFRequency` and `[SENSe<Ch>:]FREQuency:CONVersion:ARBitrary`.

<Ch>	Channel number. If unspecified the numeric suffix is set to 1.
<Pt>	Test port number of the analyzer. This suffix is ignored because the selected

	frequency applies to all source ports used in the active channel.
<fixed_frequency>	Fixed stimulus and analyzer frequency.
Range [def. unit]	Depending on the instrument model [Hz]. The increment (parameters UP or DOWN) is 0.1 kHz.
*RST value	1 GHz
SCPI, Command Types	Confirmed, command or query
Example:	<pre>FUNC "XPOW:POW:A1"</pre> Activate a power sweep and select the wave quantity a_1 as measured parameter for channel and trace no. 1. <pre>SOUR:FREQ:CW 100 MHz</pre> Set the CW frequency to 100 MHz.

SOURce<Ch>:FREQuency<Pt>:CONVersion:ARBitrary:CFRequency <numerator>, <denominator>, <offset>, CW | FIXEd | SWEep

Defines the converter source frequency at the converter port <Pt>. This command is available for frequency converters with electronic attenuators R&S ZVA-ZxxxE. The converter source frequency is either a range (for frequency sweeps) or a CW frequency (for power, time and *CW Mode* sweeps). It is used as a reference during power calibration.



The frequency formula is applied even if the analyzer returns an error message, because the frequency is outside the allowed range.

<Ch>	Channel number.
<Pt>	Test port number of the analyzer.
<numerator> <denominator> <offset>	Parameters of the frequency formula. The source frequency f_s is calculated according to $f_s = \frac{\text{<numerator>}}{\text{<denominator>}} \cdot f_b + \text{<offset>}$ where f_b represents the channel base frequency (parameter SWEep). For parameters CW or FIXEd, $f_b = 0$.
	<i>In manual control, the <offset> is defined as a product of a ratio of two integers times a multiple of 1 Hz.</i>
Range [def. unit]	For consistency the converter source frequency or frequency range should be an integer multiple of the source frequency at the analyzer port (SOURce<Ch>:FREQuency<Pt>:CONVersion:ARBitrary:IFRequency). The multiplier must be equal to the selected harmonic order (<denominator>/<numerator>); see example below. In addition the following restrictions apply: <numerator> – Values are rounded to positive or negative integer numbers [1] <denominator> – Values are rounded to positive integer numbers [1] <offset> – Values are rounded to (positive or negative) multiples of 1 Hz [Hz]. The selected converter source frequency must be within the nominal frequency range of the frequency converter, otherwise an error message "-222, Data out of range..." is generated.
*RST value	The default frequency/frequency range corresponds to the frequency range or

	start frequency of the converter, i.e. $\langle \text{numerator} \rangle = \langle \text{denominator} \rangle = 1$ $\langle \text{offset} \rangle = 0 \text{ Hz}$
Sweep type	SSWEep – The full formula is applied. For frequency sweeps, the command defines a sweep range.
Parameters	CW FIXed – The reduced formula with $f_b = 0$ is applied. $f_r = \langle \text{offset} \rangle$; the command defines a fixed frequency.
*RST value	SWEep
SCPI, Command Types	Device-specific, command or query
Example:	<pre>FREQ:CONV:DEV:NAME 'ZVA-Z110E'</pre> Select frequency converter type R&S ZVA-Z110E. <pre>FREQ:CONV:DEV:MODE RILI</pre> Select internal RF and source frequencies. <pre>FREQ:STAR 7.5E+10; :STOP 1E+11</pre> Restrict the base frequency range to 75 GHz to 100 GHz. <pre>SOUR:FREQ1:CONV:ARB:IFR 1, 6, 5E+7, SWE</pre> Increase the RF source frequency at port 1 by 50 kHz. <pre>SOUR:FREQ1:CONV:ARB:CFR 1, 1, 3E+8, SWE</pre> Adjust the frequency axis of the converter output. <pre>SOUR:POW:CONV:OFFS 3, CPAD</pre> Increase the output power of the converter by +3 dB.. <pre>SOURce:POWer:CORRection:CONVerter:LEVel:OFFSet 20</pre> Define a 20 dB cal power offset to account for an additional amplifier in the signal path.

SOURce<Ch>:FREQuency<Pt>:CONVersion:ARBitrary:EFRequency<Gen> <Boolean>, <numerator>, <denominator>, <offset>, CW | FIXed | SWEep

Defines an external generator frequency for frequency-converting measurements. The external generator frequency is either a range (for frequency sweeps) or a CW frequency (for power, time and *CW Mode* sweeps).

<Ch>	Channel number.
<Pt>	Test port number of the analyzer. This suffix is ignored because the generator is referenced via <Gen>.
<Gen>	Generator number
<Boolean>	Switch the generator on or off.
<numerator> <denominator> <offset>	Parameters of the frequency formula. The source frequency f_s is calculated according to $f_s = \langle \text{numerator} \rangle / \langle \text{denominator} \rangle * f_b + \langle \text{offset} \rangle$ where f_b represents the channel base frequency (parameter SWEep). For

parameters CW or FIXed, $f_b = 0$.



In manual control, the <offset> is defined as a product of a ratio of two integers times a multiple of 1 Hz.

Range [def. unit]

The converted frequency or frequency range must be within the external generator's frequency range [Hz]. In addition the following restrictions apply:
 <numerator> – Values are rounded to positive or negative integer numbers [1]
 <denominator> – Values are rounded to positive integer numbers; zero is not allowed [1]
 <offset> – Values are rounded to (positive or negative) multiples of 1 Hz [Hz].

*RST value

The default frequency/frequency range corresponds to the sweep range or CW frequency of the analyzer, i.e.
 <numerator> = <denominator> = 1
 <offset> = 0 Hz

**Sweep type
Parameters**

SWEep – The full formula is applied. For frequency sweeps, the command defines a sweep range.
 CW | FIXed – The reduced formula with $f_b = 0$ is applied. $f_r = \text{<offset>}$; the command defines a fixed frequency.

*RST value

SWEep

**SCPI, Command
Types**

Device-specific, command or query

Example:

```
*RST; FREQ:STAR 1E+9; STOP 1.1E+9
```

Reset the analyzer (activating a frequency sweep) and set the sweep range between 1 GHz and 1.1 GHz.

```
SYST:COMM:RDEV:GEN1:DEF 'Ext. Gen. 1', 'SME02', 'gpib0', '21'
```

Configure an R&S SME02 generator as external generator no. 1, assigning the name Ext. Gen. 1 and a GPIB address 21.

```
SOUR:FREQ:CONV:ARB:EFR ON, 1, 4, 1E+9, SWE
```

Switch the generator on and convert the generator frequency to the range between 1.25 GHz and 1.275 GHz.

SOURce<Ch>:FREQuency<Pt>:CONVersion:ARBitary:IFRequency <numerator>, <denominator>, <offset>, CW | FIXed | SWEep

Defines the port-specific source frequency for frequency-converting measurements. The source frequency is either a range (for frequency sweeps) or a CW frequency (for power, time and CW Mode sweeps).



The frequency formula is applied even if the analyzer returns an error message, because the frequency is outside the allowed range.

<Ch> Channel number.

<Pt> Test port number of the analyzer. Note that the source frequencies at ports 1/2 and at ports 3/4 must be the same if the RF signal is simultaneously fed to two coupled ports.

<numerator>
<denominator>
<offset> Parameters of the frequency formula. The source frequency f_s is calculated according to

$$f_s = \text{<numerator>/<denominator>} * f_b + \text{<offset>}$$

where f_b represents the channel base frequency (parameter SWEep). For parameters CW or FIXed, $f_b = 0$.



In manual control, the <offset> is defined as a product of a ratio of two integers times a multiple of 1 Hz.

Range [def. unit]	The converted frequency or frequency range must be within the analyzer's frequency range, depending on the instrument model [Hz]. In addition the following restrictions apply: <numerator> – Values are rounded to positive or negative integer numbers [1] <denominator> – Values are rounded to positive integer numbers; zero is not allowed [1] <offset> – Values are rounded to (positive or negative) multiples of 1 Hz [Hz].
*RST value	The default frequency/frequency range corresponds to the sweep range or CW frequency of the analyzer, i.e. <numerator> = <denominator> = 1 <offset> = 0 Hz
Sweep type Parameters	SWEep – The full formula is applied. For frequency sweeps, the command defines a sweep range. CW FIXed – The reduced formula with $f_b = 0$ is applied. $f_r = \text{<offset>}$; the command defines a fixed frequency.
*RST value	SWEep
SCPI, Command Types	Device-specific, command or query
Example:	<pre>*RST; FREQ:STAR 1E+9; STOP 1.1E+9</pre> Reset the analyzer (activating a frequency sweep) and set the sweep range between 1 GHz and 1.1 GHz. <pre>SOUR:FREQ2:CONV:ARB:IFR 2, 1, 1E+9, SWE</pre> Convert the source frequency at test port no. 2 to the range between 3 GHz and 3.2 GHz.

SOURce<Ch>:FREQuency<Pt>:CONVersion:MIXer:FUNDamental RF | LO

[Deprecated command, replaced by [\[SENSe<Ch>:\]FREQuency:CONVersion:MIXer:FUNDamental](#)]

Selects the mixer input signal which is at the channel base power (to be defined by means of [SOURce<Ch>:POWer<Pt>:START](#), [SOURce<Ch>:POWer<Pt>:STOP](#), [SOURce<Ch>:POWer<Pt>\[:LEVel\]\[:IMMediate\]\[:AMPlitude\]](#)).

<Ch>	Channel number.
<Pt>	Physical port number of the analyzer. This suffix is ignored, because the port assignments for mixer measurement are fixed.
Parameters	RF – mixer input signal LO – local oscillator signal
*RST value	RF
SCPI, Command Types	Device-specific, command or query.
Example:	See SOURce<Ch>:FREQuency:CONVersion:MIXer:PFIXed

SOURce<Ch>:FREQuency<Pt>:CONVersion:MIXer:PAFixed <aux_fixed_power>

[Deprecated command, replaced by [SOURce<Ch>:FREQuency<Pt>:CONVersion:MIXer:PMFixed](#)]

Defines a fixed power for the Aux LO signal in a vector mixer measurement (option R&S ZVA-K5). The Aux LO signal is fed to the MEAS and REF mixers.

<Ch>	Channel number.
<Pt>	Physical port number of the analyzer. This suffix is ignored, because the port assignments for mixer measurement are fixed.
<aux_fixed_power>	Fixed power for Aux LO
Range [def. unit]	–40 dBm to +10 dBm. The exact range depends on the analyzer model or external generator used; refer to the data sheet [dBm]. UP and DOWN increment/decrement the source power in 0.1-dB steps.
*RST value	–25 dBm

SCPI, Command Types Device-specific, command or query.

Example:

```
*RST; SOUR:FREQ:CONV:MIX:PAF -10
```

Reset the analyzer and specify a fixed Aux LO power of –10 dBm.

```
SENS:FREQ:CONV:MIX:APOR 1
```

Select the test setup where the additional mixers MEAS and REF are connected to port 1 of the NWA.

```
SENS:FREQ:CONV:MIX:AINT 3
```

Select the analyzer port 3 as a source port for the Aux LO signal.

Alternatively, e.g. for a 2-port NWA in combination with an external generator:

```
SYST:COMM:RDEV:GEN1:DEF 'Ext. Gen. 1', 'SME02', 'gpi0', '21'
```

Configure an R&S SME02 generator as external generator no. 1, assigning the name Ext. Gen. 1 and a GPIB address 21.

```
FREQ:CONV:MIX:AEXT 1
```

Select the generator no. 1 as a signal source for the Aux LO signal.

SOURce<Ch>:FREQuency<Pt>:CONVersion:MIXer:PFIxed <fixed_power>

[Deprecated command, replaced by [SOURce<Ch>:FREQuency<Pt>:CONVersion:MIXer:PMFixed](#)]

Defines a fixed power, to be assigned either to the RF or to the LO signal (the signal not addressed by [SOURce<Ch>:\]FREQuency:CONVersion:MIXer:FUDamental RF | LO](#)).

<Ch>	Channel number
<Pt>	Physical port number of the analyzer. This suffix is ignored, because the port assignments for mixer measurement are fixed.
<fixed_power>	Fixed power
Range [def. unit]	–40 dBm to +10 dBm. The exact range depends on the analyzer model or external generator used; refer to the data sheet [dBm]. UP and DOWN increment/decrement the source power in 0.1-dB steps.

*RST value –25 dBm

SCPI, Command Types Device-specific, command or query.

Example:

```
*RST; SOUR:FREQ:CONV:MIX:PFIX -10
```

Reset the analyzer and specify a fixed power of –10 dBm.

```
SOUR:FREQ:CONV:MIX:FUND LO
```

Assign the channel base frequency to the LO signal. The fixed power is automatically assigned to the RF signal.

SOURce<Ch>:FREQuency<Pt>:CONVersion:MIXer:PMFixed RF | LO | LO1 | LO2 | AUXLo | IF, <fixed_power>

Assigns a fixed power to the RF, LO 1, LO 2, Aux LO, or to the IF signal.

<Ch> Channel number

<Pt> Physical port number of the analyzer. This suffix is ignored, because the port assignments for mixer measurement are fixed.

Port parameters RF – mixer input signal
 LO | LO1 – local oscillator signal no. 1
 LO2 – local oscillator signal no. 2, for 2-stage mixer measurements
 ([SENSe<Ch>:]FREQuency:CONVersion:MIXer:STAGes)
 AUXLo – Aux LO signal for vector mixer measurements (option R&S ZVA-K5)
 IF – mixer output signal

<fixed_power> Fixed power

Range [def. unit] –40 dBm to +10 dBm. The exact range depends on the analyzer model or external generator used; refer to the data sheet [dBm]. UP and DOWN increment/decrement the source power in 0.1-dB steps.

*RST value –25 dBm

SCPI, Command Types Device-specific, command or query

Example:

```
See [SENSe<Ch>:]FREQuency:CONVersion:MIXer:MFFIXed
```

SOURce<Ch>:FREQuency<Pt>:CONVersion:MIXer:PMODE RF | LO | LO1 | LO2 | AUXLo | IF, FIXed | FUNDamental

Sets the RF, LO 1, LO 2, Aux LO, or the IF signal ports to fixed power or to the channel base power.

<Ch> Channel number

<Pt> Physical port number of the analyzer. This suffix is ignored, because the port assignments for mixer measurement are fixed.

Port parameters RF – mixer input signal
 LO | LO1 – local oscillator signal no. 1
 LO2 – local oscillator signal no. 2, for 2-stage mixer measurements
 ([SENSe<Ch>:]FREQuency:CONVersion:MIXer:STAGes)

	AUXLo – Aux LO signal for vector mixer measurements (option R&S ZVA-K5)
	IF – mixer output signal
Power parameters	FIXed – use a fixed power, to be specified via <code>SOURce<Ch>:FREQuency<Pt>:CONVersion:MIXer:PMFixed</code> FUNDamental – use the channel base power specified via <code>SOURce<Ch>:POWer<Pt>:STARt, SOURce<Ch>:POWer<Pt>:STOP,</code> <code>SOURce<Ch>:POWer<Pt>[:LEVel] [:IMMediate] [:AMPlitude]</code>
*RST value	Minimum of the analyzer's frequency range, f_{MIN}
SCPI, Command Types	Device-specific, command or query
Example:	See <code>[SENSe<Ch>]:FREQuency:CONVersion:MIXer:MFFIXed</code>

SOURce<Ch>:GROup<group_no> <log_port1>,<log_port2>

Explicitly defines port group <group_no> as the continuous range of logical ports from <log_port1> to <log_port2>.

- Port groups must be non-empty and disjoint; they are always numbered consecutively, starting at 1.
- Group 1 is always present, either unrestricted (i.e. containing all available ports) or restricted (i.e. containing only a proper subset of the available ports).
- After a *RST or `SOURce<Ch>:GROup<group_no>:CLEar ALL` group 1 is unrestricted and all other groups are removed.
- Restricted port groups cannot be overwritten; use the `CLEar`-command to dissolve/unrestrict them.



NOTE The port groups defined with this command are intended for simultaneous measurement and cannot be combined with the "arbitrary" port group defined with `SOURce<Ch>:GROup<group_no>:PORTs <log_port1>{,<log_port2> ...}`: the respective port group definitions override each other.

<Ch>	Channel number.
<group_no>	Port group number. In "Set" direction <group_no> is ignored: the analyzer automatically selects the next free group number. Number 1 remains free as long as group 1 is unrestricted (i.e. contains all available ports).
Range [def. unit]	As port groups must be non-empty and disjoint, the maximum number of port groups for an n-port analyzer is n. [–]
<log_port1>,<log_port2>	First and last logical port number in the port group. In "Set" direction, the defined port group consists of ports <log_port1> to <log_port2>. The command generates an error message if only one parameter is transferred. For queries, both parameters must be omitted.
Range [def. unit]	1 to n where n is the number of ports of the analyzer. [–] <log_port1> must be less or equal than <log_port2> and the port range from <log_port1> to <log_port2> must not overlap with previously defined port groups.
SCPI, Command	Device-specific, command or query

Types**Example:**

```
RST*; SOUR:GRO:COUN?
```

Reset and query the number of existing port groups.
The response is 1: there is only port group 1.

```
SOUR:GRO?
```

After a reset, port group 1 is unrestricted: on an analyzer with n logical ports the result is 1, n.

Querying for a port group number >1 would raise an error.

```
SOUR:GRO 1,2; SOUR:GRO 3,4; SOUR:GRO:COUN?
```

Restrict port group 1 to logical ports no. 1 and 2, and assign logical ports 3 and 4 to port group 2.

The response to the group count query is 2.

```
SOUR:GRO1?; SOUR:GRO2?
```

Query the port ranges of groups 1 and 2. The response is 1, 2; 3, 4.

```
SOUR:GRO:CLE ALL; SOUR:GRO:COUN?; SOUR:GRO1?
```

Dissolve all port groups and query for existing port groups.

The response is 1; 1, 4. Port group 1 is again the only one and unrestricted.

```
SOUR:GRO 1,3; SOUR:GRO 4,4
```

Restrict port group 1 to logical ports 1 to 3 and assign logical port 4 to port group 2.

```
SOUR:GRO2:CLE; SOUR:GRO:COUN?;
```

Dissolve port group 2 and query for existing port groups.

The response is 1.

```
SOUR:GRO:PORT?;
```

Query the ports of group 1. The response is 1, 2, 3.

Querying for a port group number >1 would raise an error!

```
SOUR:GRO:PORT 1,2,4
```

Dissolve all existing port groups and restrict port group 1 to ports 1, 2 and 4. Sets the "Measured" flag for ports 1,2,4 and removes it from all other ports.

```
SOUR:GRO:PORT?
```

Query the ports of group 1. The response is 1, 2, 4.

Querying for a port group number >1 would raise an error!

```
SOUR:GRO1 1; SOUR:GRO2 2,4
```

Dissolve the port group created with `SOUR:GRO:PORT`.

Then restrict port group 1 to logical port 1 and arrange logical ports 2 to 4 in port group 2.

```
SOUR:GRO1:CLE; SOUR:GRO:COUN?;
```

Dissolve port group 1 and query for existing port groups.

The response is 1.

```
SOUR:GRO1:PORT?;
```

Query the ports of group 1. The response is 2, 3, 4.

Group 2 was renumbered to 1. Querying for a port group number 2 would raise an error.

SOUR:GRO 1; SOUR:GRO:COUN?; SOUR:GRO2:PORT?

Create a second port group by assigning port 1.
The queries for existing port groups return 2 ; 1.

SOURce<Ch>:GROup<group_no>:CLEar [ALL]

Dissolves port group <group_no> or all port groups.

- Groups are created either using the [SOURce:GROup](#) or the [SOURce:GROup:PORTs](#) command
- Groups are always numbered consecutively, starting at 1.
- If groups 1,...,m were created and group $i < m$ is dissolved, this results in groups $i+1, \dots, m$ being renumbered to $i, \dots, m-1$, respectively. After renumbering, group m no longer exists.
- After a CLEar [ALL] or after the last restricted group has been dissolved, only group 1 exists and is unrestricted (i.e. consists of all available ports)

<Ch>	Channel number.
<group_no>	Port group number. If unspecified the numeric suffix is set to 1.
Range [def. unit]	Range according to the current port groups (SOURce<Ch>:GROup<group_no>). If an unassigned port group number is used, the analyzer generates an error message. Exception: Parameter ALL, see below. [-]
ALL	If ALL is specified, all port groups except group 1 are dissolved and all available ports are assigned to port group 1; the <group_no> suffix is ignored. If ALL is omitted, only the specified port group is dissolved.
SCPI, Command Types	Device-specific, no query
Example:	See SOURce<Ch>:GROup<group_no> .

SOURce<Ch>:GROup<group_no>:COUNT?

Queries the number of port groups in channel no. <Ch>.

<Ch>	Channel number.
<group_no>	Port group number. This suffix is ignored, because the command returns the number of all port groups.
Range [def. unit]	Port groups must contain at least one logical port and must not overlap, so the maximum number of port groups for an n-port analyzer is n. [-] <i>Note: Port group no 1 is always present and can not be dissolved. After a *RST or after SOURce<Ch>:GROup<group_no>:CLEar ALL, port group no. 1 contains all ports of the analyzer.</i>
SCPI, Command Types	Device-specific, query only
Example:	See SOURce<Ch>:GROup<group_no>

SOURce<Ch>:GROup<group_no>:PORTs <log_port1>{,<log_port2> ...}

Defines a port group containing an arbitrary selection of logical ports. The ports do not have to be numbered continuously (as for port groups defined via `SOURce<Ch>:GROup<group_no><log_port1>,<log_port2>`).



It is not possible to create more than one port group with arbitrary ports. To avoid errors, use the setting command only while the channel contains a single port group (e.g. after a `*RST`). You can use `SOURce<Ch>:GROup<group_no>:PORTs?` to query the ports for a port group created via `SOURce<Ch>:GROup<group_no>`.

<Ch>	Channel number.
<group_no>	Port group number. In "set" direction this suffix is ignored.
Range [def. unit]	As port groups must be non-empty and disjoint, the maximum number of port groups for an n-port analyzer is n. [-]
<log_port1>, ...	Numbers of all logical ports in the port group. The port numbers must be omitted if the command is used as a query.
Range [def. unit]	Overall, the specified ports must define a non-empty subset of the set of logical port numbers; repetitions are not allowed.

SCPI, Command Types Device-specific, command or query

Example: See `SOURce<Ch>:GROup<group_no>`

SOURce<Ch>:GROup:SIMultaneous:FOFFset:CONDition?

This command is used to query the operation mode of *Simultaneous Measurement with Frequency Offset*. The following list contains all possible return values of this query.

Please note that this query will return an error if the channel specified by <Ch> does not contain any trace. This is due to the fact that without traces no measurements are performed so that no information about *Simultaneous Measurement with Frequency Offset* is available.

This query waits until all previous commands are fully executed because these commands may affect the operation mode of *Simultaneous Measurement with Frequency Offset*.

- 0, "switched off"
Simultaneous Measurement with Frequency Offset is switched off, meaning `SOURce<Ch>:GROup:SIMultaneous:FOFFset[:STATe]?` would return 0.
- 1, "active"
Simultaneous Measurement with Frequency Offset is active, meaning it has been activated via `SOURce<Ch>:GROup:SIMultaneous:FOFFset[:STATe] ON` and all preconditions for this mode to be operational are met.
- -1, "too few port groups"
There must be at least two port groups defined, otherwise no parallel measurement is possible.
- -2, "invalid port groups"
The ports in different port groups must be pairwise independent regarding their source generator.

This means that on analyzers with every two ports sharing a source synthesizer, these ports may not be in different port groups because in that case the ports in these port groups are not able to operate at different frequencies as it is required for *Simultaneous Measurement with Frequency Offset*.

- -3, "permanent port without port group"
Simultaneous Measurement with Frequency Offset will not be activated if there are permanent ports defined in the port configuration which do not belong to any port group.
- -4, "invalid sweep type"
Simultaneous Measurement with Frequency Offset requires either a linear frequency sweep or a segmented sweep.
- -5, "frequency converter not supported"
Simultaneous Measurement with Frequency Offset is not able to operate together with a frequency converter.
- -6, "no simultaneous measurement possible"
Simultaneous Measurement with Frequency Offset requires that port groups may actually be measured simultaneously. There are some situations in which this is not possible (see [Define Port Groups](#)); in these situations *Simultaneous Measurement with Frequency Offset* is not available.
- -7, "stimulus buffer too small"
The stimulus buffer must contain at least two elements.
- -8, "invalid offset or frequency spacing"
The frequency offset which is actually used and which is determined both by the minimum frequency offset and the frequency spacing may not be too large as in that case the VNA is not able to simultaneously measure at different frequencies anymore. There is no simple formula specifying the maximum frequency offset which can be handled by the VNA. However, in all but very special cases an actual frequency offset of several MHz can be used, even with four or more port groups. Please note, however, that a small minimum frequency offset combined with a large frequency spacing may lead to a large actual frequency offset.
- -9, "extended stimulus buffer too large"
Internally, the firmware uses additional measurement points which are completely transparent to the user. However, the number of sweep points entered by the user plus the number of additional internal sweep points (called the "extended stimulus buffer") must not exceed the maximum number of sweep points (60001). The number of additional sweep points depends on the relation between minimum frequency offset and frequency spacing. The worst case occurs when the minimum frequency offset is equal to or greater than the sweep range, in this case the extended stimulus buffer contains the number of sweep points entered by the user times the number of port groups.

<Ch> Channel number.
If unspecified, this parameter is set to 1.

SCPI, Command Types Device-specific, query only

Example: See `SOURce<Ch>:GROup:SIMultaneous:FOFFset[:STATe]`

SOURce<Ch>:GROup:SIMultaneous:FOFFset:MOFFset:BWFactor <bandwidth factor>

This command is used for *Simultaneous Measurement with Frequency Offset* to define the multiplication factor to calculate the minimum frequency offset in BANDwidth mode from the measurement bandwidth.

If `SOURce<Ch>:GROup:SIMultaneous:FOFFset:MOFFset:MODE` is set to `DIRECT`, the value set via this command has no effect. For details see description for command

`SOURce<Ch>:GROup:SIMultaneous:FOFFset:MOFFset:MODE`.

<Ch>	Channel number. If unspecified, this parameter is set to 1.
<bandwidth factor>	The multiplication factor to calculate the minimum frequency offset.
Range [def. unit]	1 to 100 [-]
*RST value	10
SCPI, Command Types	Device-specific, command or query
Example:	<pre>FREQ:STAR 0.9E+9; STOP 1.1E+9</pre> Set frequency range from 0.9 GHz to 1.1 GHz. <pre>SWEp:POINts 101</pre> Set number of sweep points to 101 resulting in a frequency spacing of 2 MHz. <pre>SOUR:GRO 1,2 SOUR:GRO 3,4</pre> Create two port groups with ports 1 and 2 in port group 1 and ports 3 and 4 in port group 2. <pre>SOURce:GROup:SIMultaneous:FOFFset:MOFFset:BWFactor 15</pre> Set minimum frequency offset to 15 times the maximum bandwidth in the sweep. <pre>SOURce:GROup:SIMultaneous:FOFFset:STATe ON</pre> Activate Simultaneous Measurement with Frequency Offset. <pre>SOURce:GROup:SIMultaneous:FOFFset:CONDition?</pre> Check the operation mode of <i>Simultaneous Measurement with Frequency Offset</i>.

SOURce<Ch>:GROup:SIMultaneous:FOFFset:MOFFset:DVALue <min_offset>

This command is used for *Simultaneous Measurement with Frequency Offset* to directly specify the minimum frequency offset in `DIRECT` mode.

If `SOURce<Ch>:GROup:SIMultaneous:FOFFset:MOFFset:MODE` is set to `BANDwidth`, the value set via this command has no effect. For details see description of remote command

`SOURce<Ch>:GROup:SIMultaneous:FOFFset:MOFFset:MODE`.

<Ch>	Channel number. If unspecified, this parameter is set to 1.
<min_offset>	The minimum frequency offset
Range [def. unit]	0 Hz to 70 MHz [Hz] A value of 0 Hz will result in an actual offset equal to the frequency spacing

between consecutive measurement points.

*RST value

1 MHz

SCPI, Command Types

Device-specific, command or query

Example:

See `SOURce<Ch>:GROup:SIMultaneous:FOFFset[:STATe]`

SOURce<Ch>:GROup:SIMultaneous:FOFFset:MOFFset:MODE DIRect | BANDwidth

This command is used to define how the minimum frequency offset between different port groups is determined for *Simultaneous Measurement with Frequency Offset*.

The minimum frequency offset specifies the minimum frequency difference between the measurements performed in parallel in any two different port groups. The frequency offset which is actually used may be larger than the minimum offset as the firmware chooses the smallest multiple of the frequency spacing between the points in a segment or in a linear frequency sweep, respectively, which is larger than the minimum offset.

<Ch>

Channel number.

If unspecified, this parameter is set to 1.

DIRect

The minimum frequency offset to be used is directly specified by the command `SOURce<Ch>:GROup:SIMultaneous:FOFFset:MOFFset:DVALue`.

BANDwidth

The minimum frequency offset to be used is calculated by the firmware as a product of the (possibly segment specific) measurement bandwidth and the factor specified by the command

`SOURce<Ch>:GROup:SIMultaneous:FOFFset:MOFFset:BWFactor`. In this calculation of the minimum frequency offset neither static nor dynamic bandwidth reduction of the measurement bandwidth is considered, the firmware uses the measurement bandwidth as it has been specified via `SENSe<Ch>:BWIDth[:RESolution]` (for the entire sweep) or via `[SENSe<Ch>:]SEGment<Seg>:BWIDth[:RESolution]` (segment specific).

*RST value

BANDwidth

SCPI, Command Types

Device-specific, command or query

Example:

See `SOURce<Ch>:GROup:SIMultaneous:FOFFset[:STATe]`

SOURce<Ch>:GROup:SIMultaneous:FOFFset[:STATe] <Boolean>

This command is used to activate/deactivate the *Simultaneous Measurement with Frequency Offset* which performs measurements within different port groups in parallel while applying different frequency offsets to the measurements in different port groups.

Even when this flag is set to ON the *Simultaneous Measurement with Frequency Offset* may not be active if not all preconditions for this mode are met. For each precondition there is a unique return value for the

query `SOURce<Ch>:GROup:SIMultaneous:FOFFset:CONDition?` which is returned when the according precondition is not met. A complete list of all preconditions for the *Simultaneous Measurement with Frequency Offset* can be found in the description of its return values. It is possible to first activate the *Simultaneous Measurement with Frequency Offset* and afterwards issue other remote commands to set up all necessary preconditions.

<Ch>	Channel number. If unspecified, this parameter is set to 1.
<boolean>	ON OFF – activates or deactivates <i>Simultaneous Measurement with Frequency Offset</i>
*RST value	OFF
SCPI, Command Types	Device-specific, command or query
Example:	<pre>FREQ:STAR 0.9E+9; STOP 1.1E+9</pre> Set frequency range from 0.9 GHz to 1.1 GHz. <pre>SWEep:POINts 101</pre> Set number of sweep points to 101 resulting in a frequency spacing of 2 MHz. <pre>SOUR:GRO 1,2 SOUR:GRO 3,4</pre> Create two port groups with ports 1 and 2 in port group 1 and ports 3 and 4 in port group 2. <pre>SOURce:GROup:SIMultaneous:FOFFset:MOFFset:MODE DIRect</pre> Set minimum frequency offset to be specified directly. <pre>SOURce:GROup:SIMultaneous:FOFFset:MOFFset:DVALue 2 MHz</pre> Set minimum frequency offset to 2 MHz. <pre>SOURce:GROup:SIMultaneous:FOFFset:STATe ON</pre> Activate <i>Simultaneous Measurement with Frequency Offset</i>. <pre>SOURce:GROup:SIMultaneous:FOFFset:CONDition?</pre> // Check the operation mode of <i>Simultaneous Measurement with Frequency Offset</i>.

SOURce<Ch>:GROup:SIMultaneous:STATe <Boolean>

This command is used to activate/deactivate simultaneous measurement of port groups. Please note that setting this flag does not change the port group setup.

<Ch>	Channel number. If unspecified, this parameter is set to 1.
<boolean>	ON OFF – activates or deactivates simultaneous measurement of port groups
*RST value	ON Please note that after a factory reset no port groups are defined so that no simultaneous measurement takes place even though this flag is set to ON.
SCPI, Command Types	Device-specific, command or query

Example:

```
SOURce:GROup:SIMultaneous:STATe OFF
```

Deactivate the simultaneous measurement of (existing) port groups e.g. to compare measurement results with and without simultaneous measurement.

SOURce<Ch>:LPORt<log_port> <phys_port1>[,<phys_port2>]

Defines a logical port numbered <log_port>, by either assigning a single physical port <phys_port1>, or combining two physical ports <phys_port1> and <phys_port2> to form a balanced port.



A balanced port configuration generally introduces a new set of *mixed mode* measured quantities. Therefore the traces must be redefined when a balanced port is created. To avoid any inconsistencies the analyzer deletes all traces when `SOURce<Ch>:LPORt<log_port>` is used to define a balanced port. When defining a single-ended logical port no traces are deleted.

`SOURce<Ch>:LPORt<log_port>` cannot be used to dissolve balanced ports. If <phys_port1> or <phys_port2> is part of a balanced port, this command will fail. Balanced ports must be dissolved explicitly using `SOURce<Ch>:LPORt:CLEAr` before the physical ports can be reused.



With redefined logical ports only S-, Y-, and Z-Parameter measurements are supported – except in *True Differential Mode*, where wave quantities and ratios can also be measured.

<Ch>	Channel number.
<log_port>	Logical port number used to number balanced or physical ports. If unspecified the numeric suffix is set to 1.
Range [def. unit]	One balanced port requires two physical ports, so the maximum number of balanced ports for an n-port analyzer is $n/2$ (n even) or $(n - 1)/2$ (n odd). If the command is used to define a single-ended logical port, or if the command is used as a query, then <log_port> can range up to n (no balanced ports, see example below). [-]
<phys_port1>, <phys_port2>	Physical port numbers. If <phys_port2> is omitted, a single-ended logical port is defined. If <phys_port1> or <phys_port2> are part of a balanced port, this command fails. Both parameters must be omitted if the command is used as a query.
Range [def. unit]	1 to n where n is the number of ports of the analyzer. The port numbers must be different from each other. Moreover, a physical port cannot be assigned to several logical ports. [-]
SCPI, Command Types	Device-specific, command or query

Example:

```
*RST; :SOUR:LPOR1 1,2; LPOR2 3,4
```

Assuming that the analyzer provides 4 test ports, combine the physical ports 1 and 2 to the logical port 1, the physical ports 3 and 4 to the logical port 2.

```
SOUR:LPOR1?
```

Query the physical ports assigned to logical port no. 1. The response is 1,2.

```
SOUR:LPOR:CLE ALL
SOUR:LPOR1?
```

Dissolve all logical ports and repeat the query. The response is 1: the logical

port no. 1 is identical to the physical port no. 1.

SOURce<Ch>:LPORt<log_port>:CLEAr[:ALL]

Dissolves either a single balanced logical port (<log_port>) to single-ended ports, or ALL logical ports to the default port configuration (1:1 mapping between physical and logical ports).

Also in the former case, when the last balanced port is dissolved, the default port configuration is restored.



Traces that are incompatible with the resulting logical port configuration are reset to the default measurement parameter (usually S21).

<Ch> Channel number.

<log_port> Logical port number of a balanced port. If unspecified the numeric suffix is set to 1.
If an undefined balanced port or a single-ended port number is used, the analyzer generates an error message.
Exception: Parameter ALL, see below.

ALL If ALL is specified, all balanced ports are dissolved and the default port configuration is restored; the <log_port> suffix is ignored.
If ALL is omitted, only the specified balanced port is dissolved.

SCPI, Command Types Device-specific, no query

Example: See SOURce<Ch>:LPORt<log_port>

SOURce<Ch>:POWER<Pt>...

This subsystem controls the power of the internal signal source and provides output port settings.

Note: The SOURce<Ch>:POWER... subsystem comprises port-specific and general settings. Port-specific settings are valid for the port specified by the numeric suffix <Pt> (...:POWER<Pt>:...). General settings are valid for all test ports of the analyzer; the port suffix is ignored. Refer to the description of the individual commands for more information.

SOURce<Ch>:POWER<Pt>:ATTenuation <numeric_value>

Sets a fixed attenuation factor for the generated wave at test port no. <Pt> and switches the attenuator mode to MANual setting. The incident wave is attenuated via [SENSe<Ch>:]POWER:ATTenuation.



Use SOURce<Ch>:POWER<Pt>:ATTenuation:MODE AUTO for automatic generator attenuator setting.

<Ch> Channel number.

<Pt> Test port number of the analyzer.

<numeric_value> Attenuation factor for the generated wave.

Range [def. unit] Depending on the analyzer/attenuator model, e.g. 0 dB to 80 dB [dB]. UP and

*RST value	DOWN increment/decrement the attenuation in 10-dB steps. The analyzer rounds any entered value below the maximum attenuation to the closest step. 0 dB
SCPI, Command Types	Confirmed, command or query
Example:	<pre>SOUR:POW -6</pre> Set the internal source power for channel 1 to -6 dBm. <pre>SOUR:POW2:ATT 10</pre> Set the step attenuator for the wave transmitted at port 2 to 10 dB. The internal source power and the waves at the other test ports are not affected. <pre>SOUR:POW2:ATT:MODE?</pre> Query whether an automatic or manual generator attenuation is used. The response is <i>MAN</i>. <pre>SOUR:POW2:ATT:MODE AUTO</pre> Switch back to automatic attenuator setting.

SOURce<Ch>:POWER<Pt>:ATTenuation:AUTO ON | OFF

Qualifies whether the attenuation factor for the generated wave at test port no. <Pt> is set manually or automatically.



Use [SOURce<Ch>:POWER<Pt>:ATTenuation](#) to define a fixed generator attenuation factor. Use [SOURce<Ch>:POWER<Pt>:ATTenuation:MODE](#) to select an arbitrary attenuator mode.

<Ch>	Channel number.
<Pt>	Test port number of the analyzer.
Parameters	ON – automatic generator attenuator setting OFF – manual entry of a fixed attenuation step
*RST value	AUTO
SCPI, Command Types	Confirmed, command or query. The query returns <i>OFF</i> (0) if <i>MAN</i> ual or <i>LNO</i> ise attenuation mode is set; see SOURce<Ch>:POWER<Pt>:ATTenuation:MODE .
Example:	See SOURce<Ch>:POWER<Pt>:ATTenuation (use SOURce<Ch>:POWER<Pt>:ATTenuation:MODE instead of SOURce<Ch>:POWER<Pt>:ATTenuation:AUTO).

SOURce<Ch>:POWER<Pt>:ATTenuation:AUTO:VALue?

Queries the attenuation for the generated wave at test port <Pt> in channel <Ch>.

If no generator step attenuator is present at port <Pt>, the analyzer generates an "option not available" error.



This command is particularly useful if the generator attenuator setting is currently selected by the

analyzer firmware (*SOURCE<Ch>:POWER<Pt>:ATTenuation:MODE AUTO | LNOise*). In manual mode (*SOURCE<Ch>:POWER<Pt>:ATTenuation:MODE MANual*) it returns the attenuation factor specified using *SOURCE<Ch>:POWER<Pt>:ATTenuation*, just as *SOURCE<Ch>:POWER<Pt>:ATTenuation?* would do.

<Ch> Channel number
<Pt> Test port number of the analyzer
SCPI, Command Types Confirmed, query only

Example: `SOUR:POW:ATT:AUTO:VAL?`

SOURCE<Ch>:POWER<Pt>:ATTenuation:MODE AUTO | MANual | LNOise

Defines how the attenuation factor for the generated wave at test port no. <Pt> is set.



Use *SOURCE<Ch>:POWER<Pt>:ATTenuation* to define a fixed (manual) generator attenuation factor.

<Ch> Channel number.
<Pt> Test port number of the analyzer.
Parameters AUTO – automatic generator attenuator setting
 MANual – manual entry of a fixed attenuation step
 LNOise – Low noise mode (for measurements involving external power meters with a wide bandwidth)
***RST value** AUTO
SCPI, Command Types Confirmed, command or query
Example: See *SOURCE<Ch>:POWER<Pt>:ATTenuation*

SOURCE<Ch>:POWER<Pt>:GENERator<Gen>:LLIMit[:STATe] <Boolean>

Enables or disables the limit for the source power of an external generator no. <Gen>. The limit is defined using *SOURCE<Ch>:POWER<Pt>:GENERator<Gen>:LLIMit:VALue*.

<Ch> Channel number. This suffix is ignored; the setting applies to all channels.
<Pt> Test port number of the analyzer. This suffix is ignored; the generator is selected via <Gen>.
<Gen> Generator number
<Boolean> ON | OFF: Enable or disable the power limit.
***RST value** The power limit settings are not changed after a *RST. The factory setting is OFF.
SCPI, Command Types Device-specific, command or query
Example: See *SOURCE<Ch>:POWER<Pt>[:LEVel][:IMMediate]LLIMit:VALue*

SOURce<Ch>:POWER<Pt>:GENerator<Gen>:LLIMit:VALue <limit>

Defines a limit for the source power of an external generator no. <Gen>. The limit must be enabled explicitly using `SOURce<Ch>:POWER<Pt>:GENerator<Gen>:LLIMit[:STATe]`.

<Ch>	Channel number. This suffix is ignored; the limit applies to all channels.
<Pt>	Test port number of the analyzer. This suffix is ignored; the generator is selected via <Gen>.
<Gen>	Generator number
<limit>	Limit for the generator power.
Range [def. unit]	Depending on the generator model [dBm]. UP and DOWN increment/decrement the generator power limit in 0.1-dB steps.
*RST value	The power limit is not changed after a *RST. The factory setting is 0 dBm.
SCPI, Command Types	Device-specific, command or query
Example:	See <code>SOURce<Ch>:POWER<Pt>[:LEVel][:IMMediate]LLIMit:VALue</code>

SOURce<Ch>:POWER<Pt>:GENerator<Gen>:OFFSet <numeric_value>, ONLY | CPADd

Defines the power of an external generator or its power offset relative to the channel power (`SOURce<Ch>:POWER<Pt>[:LEVel][:IMMediate][:AMPlitude]`).

<Ch>	Channel number.
<Pt>	Test port number of the analyzer. This suffix is ignored; the generator is selected via <Gen>.
<Gen>	Generator number
<numeric_value>	Port-specific power offset.
Range [def. unit]	–300 dB to +300 dB [dB]. UP and DOWN increment/decrement the phase in 1-dB steps.
*RST value	0 dB
Offset parameters	ONLY – only the port-specific power is used; the channel power is ignored. CPADd – the port-specific power is added as an offset to the channel power.
*RST value	CPADd
SCPI, Command Types	Device-specific, command or query
Example:	*RST; SOUR:POW -6

Reset the instrument, activating a frequency sweep and set the internal source power (channel power) for the default channel 1 to -6 dBm.

```
SYST:COMM:RDEV:GEN1:DEF 'Ext. Gen. 1', 'SME02', 'gpi0', '21';
SYST:COMM:RDEV:GEN2:DEF 'Ext. Gen. 2', 'SME02', 'gpi0', '22'
```

Configure an R&S SME02 generator as external generator no. 1, assigning the name Ext. Gen. 1 and a GPIB address 21. Configure a second R&S SME02

generator, assigning the name Ext. Gen. 2 and a GPIB address 22.

```
SOUR:POW:GEN1:OFFS 6, ONLY; :SOUR:POW:GEN2:OFFS 6, CPAD
```

Set the source power of generator no. 1 to +6 dBm, the source power of generator no. 2 to 0 dBm.

SOURce<Ch>:POWER<Pt>:GENerator<Gen>:PERManent[:STATe] <Boolean>

Defines whether the external generator is available as an external signal source in the test setup. External generators are always on for all partial measurements.

<Ch> Channel number.

<Pt> Test port number of the analyzer. This suffix is ignored; the generator is selected via <Gen>.

<Gen> Generator number

<Boolean> ON - Generator no. <Pt> is available.
OFF - Generator is available only if a measurement result with a generator drive port is selected.

*RST value OFF

SCPI, Command Types Device-specific, command or query

Example:

```
SYST:COMM:RDEV:GEN1:DEF 'Ext. Gen. 1', 'SME02', 'gpi0', '21'
```

Configure an R&S SME02 generator as external generator no. 1, assigning the name Ext. Gen. 1 and a GPIB address 21.

```
SOUR:POW:GEN:PERM ON
```

Activate the generator as an external signal source.

SOURce<Ch>:POWER<Pt>:GENerator<Gen>:STATe <Boolean>

Turns an external generator numbered <Gen> on or off.

<Ch> Channel number.

<Pt> Test port number of the analyzer. This suffix is ignored; the generator is selected via <Gen>.

<Gen> Generator number

<Boolean> ON | OFF - Generator is on or off

*RST value ON

SCPI, Command Types Device-specific, command or query

Example:

```
SYST:COMM:RDEV:GEN1:DEF 'Ext. Gen. 1', 'SME02', 'gpi0', '21'
```

Configure an R&S SME02 generator as external generator no. 1, assigning the name Ext. Gen. 1 and a GPIB address 21.


```
SOUR:POW:GEN:STAT OFF
```

Turn the external generator off. In the *Port Configuration* dialog, *RF Off* is checked for generator no. 1.

SOURce<Ch>:POWer<Pt>[:LEVel][:IMMediate][:AMPLitude] <power>

Defines the power of the internal signal source (channel base power). The setting is valid for all sweep types except power sweep and segmented frequency sweep with segment-specific power settings ([SENSe<Chn>:] SEGment<Seg>:POWer[:LEVel]).



Use SOURce<Ch>:POWer<Pt>:START and SOURce<Ch>:POWer<Pt>:STOP to define the sweep range for a power sweep.

<Ch>	Channel number.
<Pt>	Test port number of the analyzer. This suffix is ignored because the selected channel power applies to all source ports used in the active channel. It is possible though to define a port-specific power limit (SOURce<Ch>:POWer<Pt>[:LEVel][:IMMediate]LLIMit:VALue) and a slope factor for the source power (SOURce<Ch>:POWer<Pt>[:LEVel][:IMMediate]:SLOPe). Moreover, it is possible to define a port-specific power offset (SOURce<Ch>:POWer<Pt>[:LEVel][:IMMediate]:OFFSet).
<power>	Internal source power.
Range [def. unit]	–40 dBm to +10 dBm. The exact range depends on the analyzer model; refer to the data sheet [dBm]. UP and DOWN increment/decrement the source power in 0.1-dB steps.
*RST value	–10 dBm
SCPI, Command Types	Confirmed, command or query
Example:	FUNC "XFR:POW:RAT B1, A2"

Activate a frequency sweep and select the ratio B1/A2 as measured parameter for channel and trace no. 1.

```
SOUR:POW -6
```

Set the internal source power for channel 1 to -6 dBm.

```
SOUR:POW2:SLOP 10
```

Set the power slope factor for the wave transmitted at port 2 to 10 dB/GHz. The internal source power and the waves at the other test ports are not affected.

SOURce<Ch>:POWer<Pt>[:LEVel][:IMMediate]:LLIMit:DGRaccess <Boolean>

Optimizes the automatic level control (ALC) for test setups where the additional connectors of option R&S ZVA<frequency>-B16 are used. If the optimization is enabled, the ALC is limited to +1 dB so that the active port power limits cannot be exceeded by more than 1 dB.



This command is unavailable unless option R&S ZVA<frequency>-B16, Direct Generator and Receiver Access, is installed.

<Ch>	Channel number. This suffix is ignored; the setting applies to all channels.
<Pt>	Test port number of the analyzer. This suffix is ignored; the setting applies to all ports.
<Boolean>	ON OFF: Optimize ALC for additional connectors use normal ALC algorithm
*RST value	The setting is not changed after a *RST. The factory setting is OFF.
SCPI, Command Types	Device-specific, command or query
Example:	See <code>SOURce<Ch>:POWER<Pt>[:LEVel][:IMMediate]LLIMit:VALue</code>

SOURce<Ch>:POWER<Pt>[:LEVel][:IMMediate]:LLIMit[:STATe] <Boolean>

Enables or disables the limit for the source power at port no. <Pt>. The limit is defined using `SOURce<Ch>:POWER<Pt>[:LEVel][:IMMediate]LLIMit:VALue`.

<Ch>	Channel number. This suffix is ignored; the setting applies to all channels.
<Pt>	Test port number of the analyzer.
<Boolean>	ON OFF: Enable or disable the power limit.
*RST value	The power limit settings are not changed after a *RST. The factory setting is OFF.
SCPI, Command Types	Device-specific, command or query
Example:	See <code>SOURce<Ch>:POWER<Pt>[:LEVel][:IMMediate]LLIMit:VALue</code>

SOURce<Ch>:POWER<Pt>[:LEVel][:IMMediate]:LLIMit:VALue <limit>

Defines a limit for the source power at port no. <Pt>. The limit must be enabled explicitly; see example.

<Ch>	Channel number. This suffix is ignored; the limit applies to all channels.
<Pt>	Test port number of the analyzer.
<limit>	Limit for the internal source power at port no. <Pt>.
Range [def. unit]	–40 dBm to +10 dBm. The exact range depends on the analyzer model; refer to the data sheet [dBm]. UP and DOWN increment/decrement the source power limit in 0.1-dB steps.
*RST value	The power limit is not changed after a *RST. The factory setting is 0 dBm.
SCPI, Command Types	Device-specific, command or query
Example:	<code>SOUR:POW2:LLIM:VAL -10; STAT ON</code>

Limit the analyzer source power at port 2 to –10 dBm and enable the source power

limit.

```
SOUR:POW2:LLIM:DGR ON
```

Optimize the automatic level control (ALC) for additional connectors (option R&S ZVA<frequency>-B16).

```
SYST:COMM:RDEV:GEN1:DEF 'Ext. Gen. 1', 'SME02', 'gpi0', '21'
```

Configure an R&S SME02 generator as external generator no. 1, assigning the name Ext. Gen. 1 and a GPIB address 21.

```
SOUR:POW3:GEN:LLIM:VAL -10; STAT ON
```

Limit the power of the external generator port 3 to –10 dBm and enable the source power limit.

SOURce<Ch>:POWER<Pt>[:LEVel][:IMMediate]:OFFSet <offset>, ONLY | CPADd

Defines a port-specific source power or a power offset relative to the channel power (SOURce<Ch>:POWER<Pt>[:LEVel][:IMMediate][:AMPlitude]). An additional *Cal Power Offset* can be defined via SOURce<Ch>:POWER<Pt>:CORRection:LEVel:OFFSet.

<Ch>	Channel number.
<Pt>	Test port number of the analyzer.
<offset>	Port-specific power offset.
Range [def. unit]	–300 dB to +300 dB [dB]. UP and DOWN increment/decrement the phase in 1-dB steps.
*RST value	0 dB
Offset parameters	ONLY – only the port-specific power is used; the channel power is ignored. CPADd – the port-specific power is added as an offset to the channel power.
*RST value	CPADd
SCPI, Command Types	Confirmed (with additional device-specific character data parameters), command or query

Example:

```
*RST; SOUR:POW -6
```

Reset the instrument, activating a frequency sweep and set the internal source power (channel power) for the default channel 1 to -6 dBm.

```
SOUR:POW1:OFFS 6, ONLY; SOUR:POW2:OFFS 6, CPAD
```

Replace the source power at port 1 by +6 dBm, the source power at port 2 by 0 dBm. The powers at the remaining ports (if available) are not affected.

SOURce<Ch>:POWER<Pt>[:LEVel][:IMMediate]:SLOPe <slope>

Defines a linear factor to modify the internal source power at port <Pt> as a function of the stimulus frequency.

<Ch>	Channel number.

<Pt>	Test port number of the analyzer.
<slope>	Port-specific slope factor.
Range [def. unit]	–40 dB/GHz to +40 dB/GHz. The resulting power range over the entire frequency sweep must be within the power range of the analyzer; refer to the data sheet [dBm]. UP and DOWN increment/decrement the source power in 0.1-dB/GHz steps.
*RST value	0 dB/GHz
SCPI, Command Types	Device-specific, command or query
Example:	See <code>SOURce<Ch>:POWER<Pt>[:LEVel][:IMMediate][:AMPlitude]</code>

SOURce<Ch>:POWER<Pt>:PERManent[:STATe] <Boolean>

Defines whether the source power is permanently on.

<Ch>	Channel number.
<Pt>	Test port number of the analyzer.
<Boolean>	ON - Power at port <Pt> is permanently on OFF - Power is only on for the partial measurements that require the port as a drive port.
*RST value	OFF
SCPI, Command Types	Device-specific, command or query
Example:	<code>SOUR:POW2:STAT ON</code> Switch the RF power at port no. 2 on. <code>SOUR:POW2:PERM ON</code> Activate a permanent signal source.

SOURce<Ch>:POWER<Pt>:REDuce <Boolean>

Defines whether the power at the NWA ports shall be reduced at sweep end.
[Exception: single channel with a single driving port, performing a Time or CW Mode sweep (`SENSe<Ch>:SWEep:TYPE CW | POINT`)]

<Ch>	Channel number. This suffix is ignored because the setting applies to all channels.
<Pt>	Test port number of the analyzer. This suffix is ignored because the setting applies to all source ports.
<Boolean>	ON – Power shall be reduced at sweep end. OFF – Power shall be not be reduced at sweep end.
*RST value	– (a reset leaves the setting unchanged)
SCPI, Command Types	Device-specific, command or query
Example:	<code>SOUR:POW:RED ON</code>

Reduce power at sweep end.

SOURce<Ch>:POWer<Pt>:STARt <numeric_value>

Defines the start power for a power sweep which is equal to the left edge of a Cartesian diagram. A power sweep must be active (`[SENSe<Ch>:] SWEep:TYPE POWer`) before this command can be used.

<Ch>	Channel number.
<Pt>	Test port number of the analyzer. This suffix is ignored because the selected power sweep range applies to all source ports used in the active channel.
<numeric_value> Range [def. unit]	Start power of the sweep. –40 dBm to +9.99 dBm. The exact range depends on the analyzer model; refer to the data sheet [dBm]. UP and DOWN increment/decrement the source power in 1-dB steps.
*RST value	–25 dBm
SCPI, Command Types	Confirmed, command or query

Example:

```
SWE:TYPE POW
```

Activate a power sweep.

```
SOUR:POW:STAR -6; STOP 10
```

Select a power sweep range between –6 dBm and +10 dBm.

Note: If the start power entered is greater than the current stop power (`SOURce<Ch>:POWer<Pt>:STOP`), the stop power is set to the start power plus the minimum power span of 0.01 dB.

SOURce<Ch>:POWer<Pt>:STATe <Boolean>

Turns the RF source power at a specified test port on or off.



In contrast to the system-wide command `OUTPut[:STATe]` the power is not turned on or off immediately when the command is executed but when a measurement in the related channel is performed.

<Ch>	Channel number.
<Pt>	Test port number of the analyzer.
<Boolean>	ON OFF - Turns the internal source power at the specified test port no. <Pt> on or off.
*RST value	ON

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; SOUR:POW -6
```

Set the internal source power for channel 1 and all test ports to -6 dBm.

```
SOUR:POW2:STAT?
```

Query whether the source power at test port 2 is on. The analyzer returns a 1.

SOURce<Ch>:POWER<Pt>:STOP <numeric_value>

Defines the stop power for a power sweep which is equal to the right edge of a Cartesian diagram. A power sweep must be active (`[SENSe<Ch>:]SWEep:TYPE POWER`) before this command can be used.

<Ch>	Channel number.
<Pt>	Test port number of the analyzer. This suffix is ignored because the selected power sweep range applies to all source ports used in the active channel.
<numeric_value> Range [def. unit]	Stop power of the sweep. –39.99 dBm to +10 dBm. The exact range depends on the analyzer model; refer to the data sheet [dBm]. UP and DOWN increment/decrement the source power in 1-dB steps.
*RST value	0 dBm

SCPI, Command Types Confirmed, command or query

Example:

```
SWE:TYPE POW
```

Activate a power sweep.

```
SOUR:POW:STAR -6; STOP 10
```

Select a power sweep range between –6 dBm and +10 dBm.



If the stop power entered is smaller than the current start power (`SOURce<Ch>:POWER<Pt>:START`), the start power is set to the stop power minus the minimum power span of 0.01 dB.

ALC

SOURce<Ch>:POWER<Pt>:ALC...

This subsystem controls the port and channel specific Automatic Level Control (ALC) settings.

SOURce<Ch>:POWER<Pt>:ALC:AUBW <Boolean>

Enables or disables automatic bandwidth setting for port <Pt> in channel <Ch> .

<Ch>	Channel number
<Pt>	Port number
<Boolean>	ON - automatic bandwidth selection (ALC Path IF Bandwidth in ALC Config dialog set to <i>Auto</i>)

	OFF - manual bandwidth selection (using SOURce<Ch>:POWer<Pt>:ALC:BANDwidth)
*RST value	ON
SCPI, Command Types	Device-specific, command or query.
Example:	SOURce1:POWer:ALC:CSTAate ON Allow automatic level control for channel 1. SOURce1:POWer1:ALC ON; SOURce1:POWer2:ALC ON Enable automatic level control for ports 1 and 2 in channel 1. SOURce1:POWer:ALC:COUPle ON Use identical ALC settings for all ports in channel 1. SOURce1:POWer:ALC:RANGe 5 Select a 5 dB control range (for all ALC ports). SOURce1:POWer1:ALC:SOFFset 0; POFFset OFF Select a start value offset of 0 and don't use the ALC correction value of the last measured sweep point as the start value. SOURce1:POWer1:ALC:CLAMP OFF Don't suspend the ALC during the measurement. SOURce1:POWer:ALC:AUBW ON Enable automatic bandwidth setting. SOURce1:POWer:ALC:STOL 1 Select a 1 dB settling tolerance window. SOURce1:POWer:ALC:LPNoise OFF Don't activate the Low Phase Noise Mode for ALC.

SOURce<Ch>:POWer<Pt>:ALC:BANDwidth <bandwidth>

Selects the bandwidth in the ALC control loop for port <Pt> in channel <Ch>. The setting takes effect when automatic bandwidth setting is disabled (using [SOURce<Ch>:POWer<Pt>:ALC:AUBW](#)).

<Ch>	Channel number
<Pt>	Port number
<bandwidth>	Bandwidth setting (<i>ALC Path IF Bandwidth</i> in ALC Config dialog not set to <i>Auto</i>)
Range [def. unit]	20 Hz to 7.12 MHz [Hz]. For a list of possible values refer to the Control Loop Parameters section of the ALC Config dialog description.
*RST value	1 kHz
SCPI, Command Types	Device-specific, command or query.
Example:	See SOURce<Ch>:POWer<Pt>:ALC:PIParameter

SOURce<Ch>:POWER<Pt>:ALC:CLAMp <Boolean>

Suspends the ALC mechanism at source port <Pt> in channel <Ch> while the analyzer acquires measurement data (*Clamp* in [ALC Config](#) dialog).

<Ch>	Channel number
<Pt>	Port number
<Boolean>	ON OFF
*RST value	OFF
SCPI, Command Types	Device-specific, command or query.
Example:	See SOURce<Ch>:POWER<Pt>:ALC:AUBW

SOURce<Ch>:POWER<Pt>:ALC:CONTRol <Boolean>

[Deprecated command. Has no effect.]

Enables or disables individual ALC (Automatic Level Control) settings at source port <Pt>.

<Ch>	Channel number
<Pt>	Port number
<Boolean>	Enables (ON) or disables (OFF) individual ALC settings.
*RST value	OFF [-]
SCPI, Command Types	Device-specific, command or query
Example:	-/-

SOURce<Ch>:POWER<Pt>:ALC:COUPle <Boolean>

Enforces identical ALC settings for the individual ports in channel <Ch> (*Couple Port Settings* in [ALC Config](#) dialog).

<Ch>	Channel number
<Pt>	Port number. This suffix is ignored; the setting applies to all ports.
<Boolean>	Enforces identical settings (ON) or enables port-specific ALC settings (OFF).
*RST value	ON [-]
SCPI, Command Types	Device-specific, command or query
Example:	See SOURce<Ch>:POWER<Pt>:ALC:AUBW

SOURce<Ch>:POWER<Pt>:ALC:CState <Boolean>

Enables or disables ALC (Automatic Level Control) for channel <Ch> (ALC Off item in [Power Bandwidth Average](#) menu)

<Ch>	Channel number
<Pt>	Port number. This suffix is ignored; the setting applies to all ports.
<Boolean>	Enables (ON) or disables (OFF) ALC for channel <Ch>.
*RST value	ON [-]

SCPI, Command Types Device-specific, command or query

Example: See [SOURce<Ch>:POWER<Pt>:ALC:AUBW](#)

SOURce<Ch>:POWER<Pt>:ALC:LPNoise <Boolean>

Defines whether [Low Phase Noise Mode](#) shall be activated whenever ALC is used on a port in channel <Ch> (*Activate Low Phase Noise Mode for ALC* in [ALC Config](#) dialog).

<Ch>	Channel number
<Pt>	Port number. This suffix is ignored; the setting applies to all ports.
<Boolean>	Enables (ON) or disables (OFF) automatic activation of Low Phase Noise Mode.
*RST value	OFF [-]

SCPI, Command Types Device-specific, command or query

Example: See [SOURce<Ch>:POWER<Pt>:ALC:AUBW](#)

SOURce<Ch>:POWER<Pt>:ALC:PIParameter AUTO | MANual

Enables automatic or manual setting of the PI controller parameters at source port <Pt> in channel <Ch> (*Control Loop Parameters > Coefficients* in [ALC Config](#) dialog).

<Ch>	Channel number
<Pt>	Port number
Parameters	AUTO – Automatic setting, depending on the bandwidth (SOURce<Ch>:POWER<Pt>:ALC:BANDwidth). With automatic bandwidth selection (SOURce<Ch>:POWER<Pt>:ALC:AUBW <Boolean> ON) this is the only option. MANual – Manual setting using SOURce<Ch>:POWER<Pt>:ALC:PIParameter:GAIN and SOURce<Ch>:POWER<Pt>:ALC:PIParameter:ITIME .

*RST value AUTO

SCPI, Command Types Device-specific, command or query.

Example: [SOURce1:POWER:ALC:AUBW OFF; BANDwidth 10000](#)

Disable automatic bandwidth setting and select a 10 kHz loop bandwidth.

```
SOURce1:POWer1:ALC:PIParameter:MAN; :SOURce1:POWer1:ALC:PIParameter:GAIN 0.35; ITIM 6E-7
```

Enable manual entry of PI controller parameters and define the proportional gain and the integration time.

SOURce<Ch>:POWer<Pt>:ALC:PIParameter:GAIN <prop_gain>

Defines the proportional gain of the PI controller at source port <Pt> in channel <Ch> (*Control Loop Parameters* > *Kr* in [ALC Config](#) dialog). This setting takes effect when manual setting of the controller parameters is enabled ([SOURce<Ch>:POWer<Pt>:ALC:PIParameter MANual](#)).

<Ch>	Channel number
<Pt>	Port number
<prop_gain>	Proportional gain setting
Range [def. unit]	0 dB to 100 dB [dB]. UP and DOWN increment the proportional gain in 0.001 dB steps.
*RST value	0.4 dB
SCPI, Command Types	Device-specific, command or query.
Example:	See SOURce<Ch>:POWer<Pt>:ALC:PIParameter

SOURce<Ch>:POWer<Pt>:ALC:PIParameter:ITIME <int_time>

Defines the integration time of the PI controller at source port <Pt> in channel <Ch> (*Control Loop Parameters* > *Ki* in [ALC Config](#) dialog). This setting takes effect when manual setting of the controller parameters is enabled ([SOURce<Ch>:POWer<Pt>:ALC:PIParameter MANual](#)).

<Ch>	Channel number
<Pt>	Port number
<prop_gain>	Integration time setting
Range [def. unit]	10 ns to 100 s [s]. UP and DOWN increment the integration time in 10 ns steps.
*RST value	500 ns
SCPI, Command Types	Device-specific, command or query.
Example:	See SOURce<Ch>:POWer<Pt>:ALC:PIParameter

SOURce<Ch>:POWer<Pt>:ALC:POFFset <Boolean>

Causes the analyzer to use the ALC of the previous measurement as an ALC start offset value for port <Pt> in channel <Ch> (*Start Value* > *Last Meas* in [ALC Config](#) dialog).

<Ch>	Channel number
<Pt>	Port number
<Boolean>	ON OFF -Use ALC Offset... on or off.
*RST value	OFF
SCPI, Command Types	Device-specific, command or query.

Example:See `SOURce<Ch>:POWer<Pt>:ALC:AUBW`**SOURce<Ch>:POWer<Pt>:ALC:RANGe <cont_range>**

Defines the maximum change of the source signal level due to the ALC (*Control Range* in [ALC Config](#) dialog) for port <Pt> in channel <Ch>.

<Ch>	Channel number
<Pt>	Port number
<cont_range>	Control range setting
Range [def. unit]	0 dB to 100 dB [dB]. The control range setting must be compatible with the specified source power of the analyzer. 0 dB effectively disables the ALC. UP and DOWN increment the control range in 0.1 dB steps.
*RST value	5 dB
SCPI, Command Types	Device-specific, command or query.

Example:See `SOURce<Ch>:POWer<Pt>:ALC:AUBW`**SOURce<Ch>:POWer<Pt>:ALC:SOFFset <start_offset>**

Increases or decreases the signal level before the ALC loop is started (*Start Value > Offset* in [ALC Config](#) dialog) for port <Pt> in channel <Ch>.

<Ch>	Channel number
<Pt>	Port number
<start_offset>	Start offset
Range [def. unit]	–3 dB to +3 dB [dB]. UP and DOWN increment the start offset in 0.1 dB steps.
*RST value	0.0 dB
SCPI, Command Types	Device-specific, command or query.

Example:See `SOURce<Ch>:POWer<Pt>:ALC:AUBW`

SOURce<Ch>:POWER<Pt>:ALC[:STATe] <Boolean>

Enables or disables ALC at source port <Pt> (ALC *On* in [ALC Config](#) dialog).

<Ch>	Channel number
<Pt>	Port number
<Boolean>	Enables (ON) or disables (OFF) ALC.
*RST value	OFF [-]
SCPI, Command Types	Device-specific, command or query

Example:

See [SOURce<Ch>:POWER<Pt>:ALC:AUBW](#)

SOURce<Ch>:POWER<Pt>:ALC:STOLerance <settling_tolerance>

Defines the variation of the ALC-controlled source signal level (*Settling Tolerance* in [ALC Config](#) dialog) for port <Pt> in channel <Ch>.

<Ch>	Channel number
<Pt>	Port number
<settling_tolerance>	Settling tolerance
Range [def. unit]	0.02 to 1.0 [dB]. Increment 0.01 dB.
*RST value	0.1 dB
SCPI, Command Types	Device-specific, command or query.

Example:

See [SOURce<Ch>:POWER<Pt>:ALC:AUBW](#)

CONVerter**SOURce<Ch>:POWER<Pt>:CONVerter...**

This subsystem provides general frequency converter settings.

SOURce<Ch>:POWER<Pt>:CONVerter:OFFSet <offset>, ONLY | CPADd

Defines a source power or a power offset relative to the channel power ([SOURce<Ch>:POWER<Pt>\[:LEVel\]\[:IMMediate\]\[:AMPlitude\]](#)) for a frequency converter port <Pt>. The command is available for converters with electronic attenuators (R&S ZVA-ZxxxE). An additional *Cal Power Offset* can be defined via [SOURce<Ch>:POWER<Pt>:CORRection:LEVel:OFFSet](#).

<Ch>	Channel number
<Pt>	Converter port number

<offset>	Port-specific power offset
Range [def. unit]	–300 dB to +300 dB [dB]. UP and DOWN increment/decrement the phase in 1-dB steps.
*RST value	0 dB
Offset parameters	ONLY – only the port-specific power is used; the channel power is ignored. CPADd – the port-specific power is added as an offset to the channel power.
*RST value	CPADd
SCPI, Command Types	Device-specific, command or query
Example:	See SOURce<Ch>:FREQuency<Pt>:CONVersion:ARBitrary:CFRequency

SOURce<Ch>:POWER<Pt>:CONVerter:TRANSfer:AMODEl <Boolean>

[Deprecated command, superseded by

[SOURce<Ch>:POWER<Port>:CONVerter:TRANSfer:DESCription](#)]

Enables or disables the advanced power transfer model for the converter port <Pt>.



Since FW version 3.40 this is a *global setting*.

<Ch>	Channel number. This suffix is ignored, the command affects all channels.
<Pt>	Converter port number
<Boolean>	ON OFF - Enables or disables the advanced model.
*RST value	OFF
SCPI, Command Types	Device-specific, command or query
Example:	SOUR:POW2:CONV:TRAN:AMOD ON; DESC LAPP

Enable the advanced power transfer model at the frequency converter port 2 and select a linear approximation.

[SOUR:POW2:CONV:TRAN:SLOP 1; OFFS 0](#)

Define the slope and offset for the linear model with 0 dB waveguide attenuators setting.

[SOUR:POW2:CONV:TRAN:ATT MECH](#)
[SOUR:POW2:CONV:TRAN:MECH:ATT 3](#)

Select a converter type with a mechanical waveguide attenuator and define a 3-dB attenuation

Alternatively....

[SOUR:POW2:CONV:TRAN:ATT ELEC](#)
[SOUR:POW2:CONV:TRAN:ELEC:LIM -5; RED 50; MATT 20](#)

Select a converter type with electronic attenuators and define a power threshold of -5 dBm, 50 % power reduction due to the waveguide attenuator, and a maximum attenuation of 20 dB.

SOURce<Ch>:POWER<Pt>:CONVerter:TRANSfer:ATTenuator MECHanical | ELECTronic

Selects the waveguide attenuator type of the converter port <Pt>.



Since FW version 3.40 this is a [global setting](#).

<Ch>	Channel number. This suffix is ignored, the command affects all channels.
<Pt>	Converter port number
Parameters	MECHanical - Adjustment screw (most converter models R&S ZVA-Zxxx)
	ELECTronic - Electronic attenuator (converters R&S ZVA.ZxxxE)
*RST value	MECH
SCPI, Command Types	Device-specific, command or query
Example:	See SOURce<Ch>:POWER<Pt>:CONVerter:TRANSfer:DESCription

SOURce<Ch>:POWER<Pt>:CONVerter:TRANSfer:DESCription NONE | ELECTronic | LAPProx | DSET

Selects the power control method for the converter port <Pt>, see [Port<i> Power Control](#).



Since FW version 3.40 this is a [global setting](#).

<Ch>	Channel number. This suffix is ignored, the command affects all channels.
<Pt>	Converter port number
Parameters	NONE - <i>None or Mechanical Attenuator</i> ELECTronic - <i>Electronic Attenuator only</i> LAPProx - <i>RF IN power (and Electronic Attenuator) with Linear Approximation</i> DSET - <i>RF IN power (and Electronic Attenuator) with Data Set</i>
*RST value	NONE
SCPI, Command Types	Device-specific, command or query
Example:	SOUR:POW2:CONV:TRAN:DESC LAPP

Enable the *RF IN power (and Electronic Attenuator) with Linear Approximation* control method at frequency converter port 2 and select a linear approximation.

SOUR:POW2:CONV:TRAN:SLOP 1; OFFS 0

Define the slope and offset for the linear model with 0 dB waveguide attenuators setting.

SOUR:POW2:CONV:TRAN:ATT MECH
SOUR:POW2:CONV:TRAN:MECH:ATT 3

Select a converter type with a mechanical waveguide attenuator and define a 3-dB attenuation

Alternatively....

SOUR:POW2:CONV:TRAN:ATT ELEC
SOUR:POW2:CONV:TRAN:ELEC:LIM -5; RED 50; MATT 20

Select a converter type with electronic attenuators and define a power threshold of -5 dBm, 50 % power reduction due to the waveguide attenuator, and a maximum attenuation of 20 dB.

SOURce<Ch>:POWER<Pt>:CONVerter:TRANSfer:DSET FACTory | USER

For the RF IN power (and Electronic Attenuator) with Data Set control method (SOURce<Ch>:POWER<Pt>:CONVerter:TRANSfer:DESCRiption DSET) this command specifies whether factory data or a user-defined data set shall be used (Data Set mode in Port<i> Power Control dialog).



This is a *global setting*.

<Ch>	Channel number. This suffix is ignored, the command affects all channels.
<Pt>	Converter port number
Parameters	FACTory - Use factory data (only supported by certain converter models) USER - Use linearization data collected with the leveling tool. The path to the user data folder is specified using SENS:CONV:PATH.
SCPI, Command Types	Device-specific, command or query
Example:	See SOURce<Ch>:POWER<Pt>:CONVerter:TRANSfer:PATH

SOURce<Ch>:POWER<Pt>:CONVerter:TRANSfer:ELECTronic:LIMit <threshold>

Specifies the converter output power threshold for a converter with electronic attenuators at port <Pt>.



Since FW version 3.40 this is a *global setting*.

<Ch>	Channel number. This suffix is ignored, the command affects all channels.
<Pt>	Converter port number
<threshold>	Converter output power below which the waveguide attenuator is used
Range [def. unit]	-300 dBm to +200 dBm [dBm], the increment (UP DOWN) is 0.1 dB
*RST value	-5 dBm
SCPI, Command Types	Device-specific, command or query
Example:	See SOURce<Ch>:POWER<Pt>:CONVerter:TRANSfer:DESCRiption

SOURce<Ch>:POWER<Pt>:CONVerter:TRANSfer:ELECTronic:MATTenuation <attenuation>

Specifies the maximum attenuation for a converter with electronic attenuators at port <Pt>.



Since FW version 3.40 this is a *global setting*.

<Ch>	Channel number. This suffix is ignored, the command affects all channels.

<Pt>	Converter port number
<attenuation>	Maximum attenuation due to the waveguide attenuator
Range [def. unit]	0 dB to INF [dB], the increment (UP DOWN) is 0.1 dB
*RST value	20 dB
SCPI, Command Types	Device-specific, command or query
Example:	See SOURce<Ch>:POWer<Pt>:CONVerter:TRANsfer:DESCription

SOURce<Ch>:POWer<Pt>:CONVerter:TRANsfer:ELECtronic:REDuction<percentage>

Specifies the percentage of power reduction for a converter with electronic attenuators at port <Pt>.



Since FW version 3.40 this is a [global setting](#).

<Ch>	Channel number. This suffix is ignored, the command affects all channels.
<Pt>	Converter port number
<percentage>	Percentage of power reduction due to the waveguide attenuator
Range [def. unit]	1 % to 100 % [%], the increment (UP DOWN) is 1 %
*RST value	50 %
SCPI, Command Types	Device-specific, command or query
Example:	See SOURce<Ch>:POWer<Pt>:CONVerter:TRANsfer:DESCription

SOURce<Ch>:POWer<Pt>:CONVerter:TRANsfer:MECHanical:ATTenuation<attenuation>

Specifies the attenuation factor for a converter with mechanical adjustment screw at port <Pt>.



Since FW version 3.40 this is a [global setting](#).

<Ch>	Channel number. This suffix is ignored, the command affects all channels.
<Pt>	Converter port number
<attenuation>	Attenuation due to the adjustment screw
Range [def. unit]	0 dB to INF [dB], the increment (UP DOWN) is 0.1 dB
*RST value	8 dB
SCPI, Command Types	Device-specific, command or query
Example:	See SOURce<Ch>:POWer<Pt>:CONVerter:TRANsfer:DESCription

SOURce<Ch>:POWer<Pt>:CONVerter:TRANsfer:OFFSet <offset>

Specifies the offset factor for the linear power transfer approximation (*Offset* value in [Linear Approximation](#) dialog).



Since FW version 3.40 this is a [global setting](#).

<Ch>	Channel number. This suffix is ignored, the command affects all channels.
<Pt>	Converter port number
Parameters	Offset in the linear power transfer model
Range [def. unit]	–300 dB to +300 dB [dB], the increment (UP DOWN) is 1 dB
*RST value	0 dB
SCPI, Command Types	Device-specific, command or query

Example:

See [SOURCE<Ch>:POWER<Pt>:CONVERTer:TRANSfer:DESCription](#)

SOURCE<Ch>:POWER<Pt>:CONVERTer:TRANSfer:PATH '<directory>'

This command specifies the user data directory for the *RF In Power (and Electronic Attenuator) with Data Set* power control method ([SOURCE<Ch>:POWER<Pt>:CONVERTer:TRANSfer:DESCription DSET; DSET USER](#)).



This is a [global setting](#).

<Ch>	Channel number. This suffix is ignored, the command affects all channels.
'<directory>'	String parameter to specify an existing directory path
*RST value	n/a (a *RST does not affect the general frequency converter settings)
SCPI, Command Types	Device-specific, command or query

Example:

SOUR:POW1:CONV:TRAN:DESC DSET

Enable the *RF IN power (and Electronic Attenuator) with Data Set* control method for converter port 1.

CONV:TRAN:DSET USER

Use linearization data collected with the leveling tool

CONV:TRAN:PATH 'C:\Program Files\Rohde&Schwarz\Network Analyzer\FrequencyConverter'

SOURCE<Ch>:POWER<Pt>:CONVERTer:TRANSfer:SLOPe <slope>

Specifies the slope for the linear power transfer approximation (*Slope* value in [Linear Approximation](#) dialog).



Since FW version 3.40 this is a [global setting](#).

<Ch>	Channel number. This suffix is ignored, the command affects all channels.
<Pt>	Converter port number
<slope>	Slope in the linear power transfer model
Range [def. unit]	1 to 1000000 [1], the increment (UP DOWN) is 1
*RST value	1
SCPI, Command Types	Device-specific, command or query

Example:See [SOURCE<Ch>:POWER<Pt>:CONVerter:TRANsfer:DEScRiption](#)**SOURCE<Ch>:POWER<Pt>:CORRection...**

This subsystem controls the source power calibration.

Note: The *SOURCE<Ch>:POWER...* subsystem comprises port-specific and general settings. Port-specific settings are valid for the port specified by the numeric suffix *<Pt>* (...:POWER<Pt>:...). General settings are valid for all test ports of the analyzer; the port suffix is ignored. Refer to the description of the individual commands for more information.

SOURCE<Ch>:POWER<Pt>:CORRection[:ACQuire] PORT | GENerator | CONVerter | A1 | A2 | A3 | A4 | ESRC1 | ESRC2, <source_pt>

Selects the source for the source power calibration, starts and applies the source power calibration.



The command cannot be used unless a power meter is connected via GPIB bus, USB or LAN interface and configured in the [External Power Meters](#) dialog.

<Ch>	Calibrated channel number
<pt>	Calibrated port number. This suffix is ignored because the port number is specified in the parameter list.
PORT	Analyzer port is the source of the calibrated wave.
GENerator	External generator is the source.
CONVerter	Frequency converter with electronic attenuator (R&S ZVA-ZxxxE) is the source. The port, generator, or converter numbers are specified by means of the <source_number> parameter.
A1 A2 A3 A4	Direct analyzer port selection. The parameters A1 and A2 are ZVR-compatible. No additional <port_number> parameter needs to be specified.
ESRC1 ESRC2	Direct external generator selection. The parameters are ZVR-compatible. No additional parameters need to be specified.
<source_pt>	Analyzer port / generator port / converter port number, if PORT / GENerator / CONVerter is the first parameter.
Range [def. unit]	1 to port number of the analyzer/number of external generators [–]
*RST values	– (for all parameters)
SCPI, Command Types	Device-specific, no query
Example 1:	<pre>*RST; SOUR:POW:CORR:COLL:VER 0</pre> Disable the verification sweep to speed up the source power calibration procedure. <pre>SOUR:POW:CORR:OSO:STAT OFF</pre> To improve the accuracy, switch off all other sources during the calibration sweep. <pre>SOUR:POWer:CORR:COLL:METH RRAF; COLL:PMR 2</pre> Enable fast power correction with two power meter readings.

```
SOUR:POW:CORR:NRE 2; COLL:AVER:NTOL 0.5
```

Increase the number of readings and reduce the power tolerance to improve the accuracy.

```
SOURce:POW:CORR:COLL:CFAC 0.9
```

Reduce the correction factor to 0.9.

```
SOUR:POW:CORR:ACQ PORT,1
```

Perform a source power calibration using port 1 as a source port.

```
SOUR:POW:CORR:STAT?
```

Check whether the calibration is applied (if no error occurred during the calibration sweep, the response is 1).

```
SENSe:CORRection:PSTaTe?
```

Query the power calibration state label (if no error occurred during the calibration sweep, the response is 'Pcal').

Change the test setup, connect an external generator no. 1 to the reference plane.

```
SOUR:POW:CORR:ACQ GEN,1
```

Perform a source power calibration using the external generator no. 1 as a source.

```
SOUR:POW:CORR:GEN?
```

Check whether the calibration is applied (if no error occurred during the calibration sweep, the response is 1).

Example 2:

Suppose that an external frequency converter with electronic attenuator is connected to port 1 of the analyzer and that the instrument is configured for frequency converter measurements.

```
SOUR:POW:CORR:ACQ CONV,1
```

Perform a source power calibration using the external converter no. 1 as a source.

```
SOUR:POW:CORR:CONV?
```

Check whether the calibration is applied (if no error occurred during the calibration sweep, the response is 1).

SOURce<Ch>:POWER<Pt>:CORRection[:ACQuire]:VERification:RESult?

Returns the result of the last verification sweep. This command requires an enabled verification sweep (`SOURce<Ch>:POWER<Pt>:CORRection:COLLect[:ACQuire]:VERification[:STaTe] ON`, see example below).

<Ch> Calibrated channel number. This suffix is ignored; the result is based on the last verification sweep acquired.

<Pt> Calibrated port number. This suffix is ignored; the result is based on the last verification sweep acquired.

Response: Result of the sweep in the format <Boolean>, <Max. Offset> where:

<Boolean>	Calibration passed, i.e. the cal. power offset is below the tolerance (1), or failed (0).
<Max. Offset>	Maximum power offset between the measured power at the reference plane and the <i>Cal Power</i> during the verification sweep in dB.
*RST value	– If no verification sweep result is available, the command returns 0.
SCPI, Command Types	Device-specific, command or query
Example:	<pre>*RST; SOUR:POW:CORR:COLL:VER ON</pre> Enable the verification sweep. <pre>SOUR:POW:CORR:NRE 2; COLL:AVER:NTOL 0.5</pre> Increase the number of readings and reduce the power tolerance to improve the accuracy. <pre>SOUR:POW:CORR:ACQ PORT,1</pre> Perform a source power calibration using port 1 as a source port. <pre>SOUR:POW:CORR:COLL:VER:RES?</pre> Query the result of the verification sweep.

SOURce<Ch>:POWER<Pt>:CORRection:COLLect[:ACQuire] ASENsor | BSENsor

Initiates a source power calibration for the source port <Pt> using an external power meter no. 1 or 2. To initiate a source power calibration for arbitrary power meters, use the alternative commands listed in the program example below.

 *The command cannot be used unless a power meter is connected via GPIB bus, USB or LAN interface and configured in the [External Power Meters](#) dialog.*

<Ch>	Calibrated channel number
<Pt>	Calibrated port number.
ASENsor BSENsor	External power meter Pmtr 1 External power meter Pmtr 2
*RST value	ASENsor
SCPI, Command Types	Device-specific, no query
Example:	<pre>SOUR:POW3:CORR:COLL BSEN</pre> Perform a source power calibration for port 3 using power meter no. 2. <pre>SOUR:POW:CORR:PMET:ID 2</pre> Select power meter no. 2. <pre>SOUR:POW:CORR:ACQ PORT,3</pre> Perform a source power calibration for port 3 using the previously selected power meter no. 2.

SOURce<Ch>:POWER<Pt>:CORRection:COLLect[:ACQuire]:VERification[:STATe] <Boolean>

Enables or disables a verification sweep that the analyzer performs after the source power calibration. The command is valid for all channels, ports and external generators.

<Ch>	Calibrated channel number. This parameter is ignored; the verification is either enabled or disabled for all channels.
<Pt>	Calibrated port number. This parameter is ignored; the verification is either enabled or disabled for all sources.
<Boolean>	Enables (ON) or disables (OFF) the verification sweep.
*RST value	ON
SCPI, Command Types	Device-specific, command or query
Example:	See SOURce<Ch>:POWER<Pt>:CORRection[:ACQuire] , SOURce<Ch>:POWER<Pt>:CORRection[:ACQuire]:VERification:RESult?

SOURce<Ch>:POWER<Pt>:CORRection:COLLect:AVERage[:COUNT] <readings>

Sets a limit for the number of calibration sweeps in the source power calibration. The command is valid for all channels, ports and external generators. Equivalent command:

[SOURce<Ch>:POWER<Pt>:CORRection:NREadings](#).

<Ch>	Calibrated channel number. This parameter is ignored; the limit applies to all channels.
<Pt>	Calibrated port number. This parameter is ignored; the limit applies to all sources.
<readings>	Number of readings
Range [def. unit]	1 to 100 [–]
*RST value	1
SCPI, Command Types	Device-specific, command or query
Example:	See SOURce<Ch>:POWER<Pt>:CORRection[:ACQuire] (for equivalent command SOURce<Ch>:POWER<Pt>:CORRection:NREadings).

SOURce<Ch>:POWER<Pt>:CORRection:COLLect:AVERage:NTOLerance <tolerance>

Specifies the maximum deviation of the measured power from the target power of the calibration. The command is valid for all channels and calibrated ports.

<Ch>	Calibrated channel number. This parameter is ignored; the tolerance value is valid for all sources.
<Pt>	Calibrated port number. This parameter is ignored; the tolerance value is valid for all sources.

<tolerance>	Tolerance value
Range [def. unit]	0.001 dB to 1000 dB [dB]
*RST value	1 dB
SCPI, Command Types	Device-specific, command or query
Example:	See SOURce<Ch>:POWer<Pt>:CORRection[:ACQuire] .

SOURce<Ch>:POWer<Pt>:CORRection:COLLect:CFACTOR <convergence>

Specifies the convergence factor for a source power calibration.

<Ch>	Calibrated channel number. This parameter is ignored; the convergence factor is valid for all sources.
<Pt>	Calibrated port number. This parameter is ignored; the convergence factor is valid for all sources.
<convergence>	Convergence factor
Range [def. unit]	0 to 2 [-]. UP and DOWN increment/decrement the convergence factor in 1-dB steps.
*RST value	1
SCPI, Command Types	Device-specific, command or query
Example:	See SOURce<Ch>:POWer<Pt>:CORRection[:ACQuire] .

SOURce<Ch>:POWer<Pt>:CORRection:COLLect:FLATness <Boolean>

Enables or disables the source power calibration. The command is valid for all channels, ports and external generators.



It is not possible to disable flatness calibration and the reference receiver calibration simultaneously ([SOURce<Ch>:POWer<Pt>:CORRection:COLLect:RREceiver](#)).

<Ch>	Calibrated channel number. This parameter is ignored; the verification is either enabled or disabled for all channels.
<Pt>	Calibrated port number. This parameter is ignored; the verification is either enabled or disabled for all sources.
<Boolean>	Enables (ON) or disables (OFF) the flatness calibration. With disabled flatness calibration, only one calibration sweep is performed in order to calibrate the reference receiver; the previous source calibration data is not overwritten.
*RST value	ON Flatness calibration is automatically disabled when a frequency converter without external attenuators R&S ZV-Zxxx is selected in the <i>System Configuration</i> dialog.
SCPI, Command Types	Device-specific, command or query

Example:

```
*RST; SOUR:POW:CORR:COLL:VER 0
```

Disable the verification sweep to speed up the source power calibration procedure.

```
SOUR:POW:CORR:COLL:FLAT OFF; RREC ON
```

Disable flatness cal and enable reference receiver calibration.

```
SOUR:POW:CORR:ACQ PORT,1
```

Perform a single source power calibration sweep using port 1 as a source port.

SOURce<Ch>:POWER<Pt>:CORRection:COLLect:METHod PMONLY | RRAfter | RRONLY

Selects the source power calibration method.

<Ch>	Calibrated channel number. This parameter is ignored; the method is valid for all channels.
<Pt>	Calibrated port number. This parameter is ignored; the method is valid for all sources.
Parameters	PMONLY – Power Meter only (requires SOURce<Ch>:POWER<Pt>:CORRection:COLLect:FLATness ON and SOURce<Ch>:POWER<Pt>:CORRection:COLLect:RRECeiver OFF) RRAfter – Reference Receiver after the number of readings specified via SOURce<Ch>:POWER<Pt>:CORRection:COLLect:PMReadings (requires SOURce<Ch>:POWER<Pt>:CORRection:COLLect:FLATness ON) RRONLY – Reference Receiver only (requires SOURce<Ch>:POWER<Pt>:CORRection:COLLect:RRECeiver OFF)
*RST value	RRAfter
SCPI, Command Types	Device-specific, command or query
Example:	See SOURce<Ch>:POWER<Pt>:CORRection[:ACQuire].

SOURce<Ch>:POWER<Pt>:CORRection:COLLect:PMReadings <no_readings>

Selects the number of power meter readings for source power calibration method

SOURce<Ch>:POWER<Pt>:CORRection:COLLect:METHod RRAfter.

<Ch>	Calibrated channel number. This parameter is ignored; the parameter is valid for all channels.
<Pt>	Calibrated port number. This parameter is ignored; the parameter is valid for all sources.
<no_readings>	Number of power meter readings. If the value exceeds the maximum number of calibration sweeps (SOURce<Ch>:POWER<Pt>:CORRection:COLLect:AVERAge[:COUNT]) the latter is adjusted.
Range [def. unit]	1 to 100 [–]

*RST value 1

SCPI, Command Types Device-specific, command or query

Example: See [SOURce<Ch>:POWER<Pt>:CORRection\[:ACQuire\]](#).

SOURce<Ch>:POWER<Pt>:CORRection:COLLect:RRECeiver <Boolean>

Enables or disables calibration of the reference receiver together with the source power calibration.



It is not possible to disable flatness calibration ([SOURce<Ch>:POWER<Pt>:CORRection:COLLect:FLATness](#)) and the reference receiver calibration simultaneously.

<Ch> Calibrated channel number. This parameter is ignored; the verification is either enabled or disabled for all channels.

<Pt> Calibrated port number. This parameter is ignored; the verification is either enabled or disabled for all sources.

<Boolean> Enables (ON) or disables (OFF) reference receiver calibration.

*RST value ON

SCPI, Command Types Device-specific, command or query

Example: See [SOURce<Ch>:POWER<Pt>:CORRection:COLLect:FLATness](#)

SOURce<Ch>:POWER<Pt>:CORRection:CONVerter<Con>:LEVel:OFFSet <offset>

Specifies a gain (positive values) or an attenuation (negative values) in the signal path between the converter source port <Con> and the calibrated reference plane (*Cal Power Offset*). The value has no impact on the source power.

<Ch> Calibrated channel number

<Pt> Calibrated port number. This suffix is ignored; the converter is selected via <Con>.

<Con> Converter number

<offset> Gain or attenuation value

Range [def. unit] –300 dB to +300 dB [dB]

*RST value 0 dB

SCPI, Command Types Device-specific, command or query

Example: See [SOURce<Ch>:FREQuency<Pt>:CONVersion:ARBitrary:CFRequency](#)

SOURce<Ch>:POWER<Pt>:CORRection:CONVerter<Con>[:STATe] <Boolean>

Enables or disables the source power calibration for channel <Ch> and for an external frequency converter number <Con>. The converter must be equipped with an electronic attenuator (R&S ZVA-ZxxxE). The command is disabled unless a source power calibration for the external converter has been performed ([SOURce<Ch>:POWER<Pt>:CORRection\[:ACQuire\] CONVerter, <source_pt>](#)). To enable or disable a source power calibration for an analyzer port use [SOURce<Ch>:POWER<Pt>:CORRection\[:STATe\]](#).

<Ch>	Calibrated channel number
<Pt>	Calibrated port number. This suffix is ignored; the converter is selected via <Con>.
<Con>	Converter number
<Boolean>	Enables (ON) or disables (OFF) the source power calibration for the converter <Con>.
*RST value	OFF [-]

SCPI, Command Types Device-specific, command or query

Example: See [SOURce<Ch>:POWER<Pt>:CORRection\[:ACQuire\]](#).

SOURce<Ch>:POWER<Pt>:CORRection:DATA '<src_string>', <block> | <numeric_value>...

Reads or writes source power correction data sets. A power correction data set contains n real values where:

- Each value corresponds to the ratio of the actual power at the reference plane (value provided by the used source) to the uncalibrated power in dB.
- The number n is equal to the number of sweep points.

Increasing (decreasing) the values in the correction data sets increases (decreases) the power at the reference plane. Writing correction data (the setting command) fails if the number of transferred values is not equal to the number of sweep points.

<Ch>	Calibrated channel number
<Pt>	Calibrated port number. This parameter is ignored; the port is identified by the '<src_string>'.
'<src_string>'	Identifier for the source of the calibrated wave: • 'A<n>' or 'PORT<n>' denote correction data for the analyzer port no. <n>. • 'ESRC<n>' or 'GEN<n>' denote correction data for the external generator no. <n>. • 'CONV<n>' denotes correction data for a frequency converter (e.g. R&S ZVA-Z110E) at port no. <n>
<block> <numeric_value>...	Power correction values in block data format or as a comma-separated list of real numbers. The query returns a list of numbers.
Range [def. unit]	All numbers are interpreted as dB-values.
*RST value	–

SCPI, Command Types

Device-specific, command or query

Example:

```
*RST; :SWE:POIN 10
```

Reset the instrument and reduce the number of sweep points to 10.

```
SOUR:POW:CORR:ACQ PORT,1
```

Perform a source power calibration using port 1 as a source port.

```
SOUR:POW:CORR:DATA? 'A1'
```

Query the correction values. The analyzer returns 10 comma-separated real numbers.

```
SOUR:POW:CORR:DATA 'A1', 1, 2, 3, 4, 5, -6, -7, -8, -9, -0
```

Replace the correction values by ten (new) numbers.

SOURce<Ch>:POWer<Pt>:CORRection:DATA:PARAmeter<Cal_index>? <info>

Returns the sweep settings of the active source and receiver power calibrations for channel <Ch>.

<Ch> Calibrated channel number**<Pt>** Calibrated port number. This parameter is ignored; the port is identified by the <Cal_index> suffix.**<Cal_index>** Current number of calibrated a-wave or b-wave (for receiver power calibration).**<info>** Parameter to specify the information retrieved; see table below.***RST value** n/a (the command generates an execution error if no power calibration is active)**SCPI, Command Types**

Device-specific, query only

Example:

```
*RST; :SWE:POIN 10
```

```
SOURce:POWer:CORRection:DEFault ON
```

```
SOURce:POWer:CORRection:ACQuire PORT,1
```

Perform a dummy source power calibration at port 1 (no external power meter required).

```
SOURce:POWer:CORRection:DATA:PARAmeter:COUNT?
```

Query the number of calibrated waves. The response is 1.

```
SOURce:POWer:CORRection:DATA:PARAmeter1? WAVE
```

Query the first calibrated wave. The response is a1 Gen (source power calibration).

```
SOURce:POWer:CORRection:DATA:PARAmeter2? WAVE
```

Query the first calibrated wave. The response is a1 Rec (reference receiver calibration).

Optional parameters of SOURce<Ch>:POWer<Pt>:CORRection:DATA:PARAmeter<Wave>?

Parameter <info>	Response
WAVE	Calibrated wave: a1 Gen denotes the source power at port 1, Ext Gen1 the source power of an external generator, a1 Rec or b1 Rec the receiver power at port 1 etc.
START	Start frequency or power (or CW frequency, if no frequency or power sweep is active)
STOP	Stop frequency or power (or CW frequency, if no frequency or power sweep is active)
POINTs	Number of points
STYPe	Sweep type or grid (LIN, LOG, SEGM)
ATTenuation	Source or receiver attenuation, depending on calibrated wave (e.g. 0.0)
CPower	CW power (for frequency sweeps; returns -200 for power sweeps)
CFrequency	CW frequency (for power sweeps, not available for frequency sweeps)
TSTamp	Timestamp of the calibration in 24-hour clock, returned as a comma-separated list of integers <Year>, <Month>, <Day>, <Hour>, <Minute>, <Second>

SOURce<Ch>:POWER<Pt>:CORRection:DATA:PARAmeter:COUNT?

Returns the number of calibrated waves of the active source and receiver power calibrations for channel <Ch>.

<Ch>	Calibrated channel number
<Pt>	Calibrated port number. This parameter is ignored; the commands counts the waves at all ports.
Response	1 to the number of calibrated waves. For a single source power calibration: 1 – the source power calibration does not include a reference receiver calibration. 2 – the source power calibration includes a reference receiver calibration.

*RST value n/a (zero is returned if no power calibration is active)

SCPI, Command Types Device-specific, query only

Example: See [SOURce<Ch>:POWER:CORRection:DATA:PARAmeter<Wave>](#)

SOURce<Ch>:POWER<Pt>:CORRection:DEFault <Boolean>


Enables the analyzer to create a set of default source power calibration data. The analyzer uses the reference channel power to acquire the default calibration data. No external power meter is required.



The main purpose of the default calibration data set is to provide a dummy power calibration which you can replace with your own, external power calibration data. You may have acquired the external data in a previous session or even on an other instrument. If you want to use the external power calibration data on the analyzer, generate the default data set first and overwrite it with the external data. For details refer to the program example below.

<Ch> Calibrated channel number. This parameter is ignored, the channel settings are relevant only when the default data set is created
([SOURce<Ch>:POWER<Pt>:CORRection\[:ACQuire\]](#)).

<Pt>	Calibrated port number. This parameter is ignored.
<Boolean>	Enables (ON) or disables (OFF) the dummy source power calibration for port number <Pt>. OFF means that a real source power calibration is performed, for which an external power meter must be connected to the analyzer.
*RST value	OFF [-]
SCPI, Command Types	Device-specific, command or query
Example:	<pre>*RST; :SWE:POIN 10</pre> Reset the instrument and reduce the number of sweep points to 10. <pre>SOUR:POW:CORR:DEF ON</pre> Enable a dummy source power calibration. <pre>SOUR:POW:CORR:ACQ PORT, 1</pre> Perform a dummy source power calibration using port 1 as a source port. <pre>SOUR:POW:CORR:DATA? 'A1'</pre> Query the correction values. The analyzer returns 10 comma-separated real numbers. <pre>MMEM:STOR:CORR 1, 'Calgroup_Ch1.cal'</pre> Store the default source power calibration data to the calibration pool in the default directory C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Data. <Replace the generated file Calgroup_Ch1.cal with your external power calibration data.> <pre>MMEM:LOAD:CORR 1, 'Calgroup_Ch1.cal'</pre> Load the external data and apply them to channel 1 and port 1. <pre>DISP:MENU:KEY:EXEC 'Cal Manager'</pre> Open the <i>Calibration Manager</i> dialog to check the result of the previous actions.

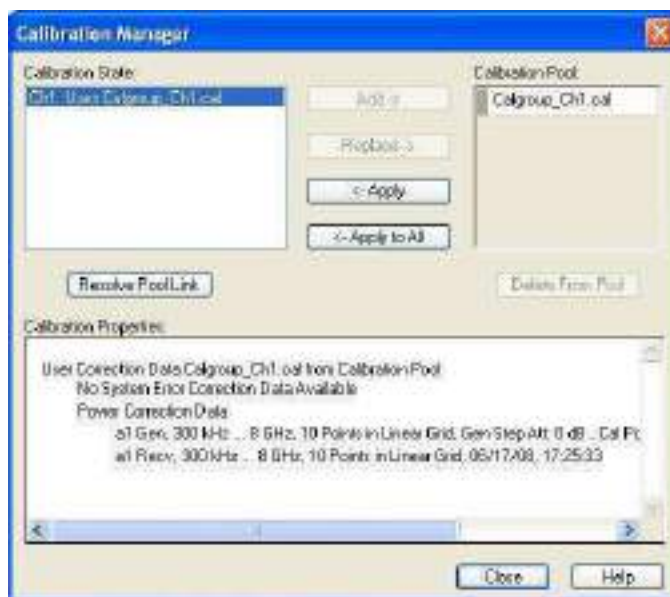

SOURce<Ch>:POWER<Pt>:CORRection:FAST <Boolean>

Enables or disables a fast source power calibration, where the external power meter is used for the first calibration sweep only.



In firmware versions V2.71 and higher, it is recommended to use the generalized commands `SOURce<Ch>:POWER<Pt>:CORRection:COLLect:METHod` and `SOURce<Ch>:POWER<Pt>:CORRection:COLLect:PMReadings`.

<Ch>	Calibrated channel number. This parameter is ignored; the fast calibration mode applies to all channels.
<Pt>	Calibrated port number. This parameter is ignored; the fast calibration mode is either enabled or disabled for all sources.
<Boolean>	Enables (ON) or disables (OFF) fast source power calibration.
*RST value	OFF [-]
SCPI, Command Types	Device-specific, command or query

SOURce<Ch>:POWER<Pt>:CORRection:GENerator<Gen>:LEVel:OFFSet <offset>

Specifies a gain (positive values) or an attenuation (negative values) in the signal path between the external generator and the calibrated reference plane (*Cal Power Offset*). The value has no impact on the generator power.

<Ch>	Calibrated channel number
<Pt>	Calibrated port number. This suffix is ignored; the generator is selected via <Gen>.
<Gen>	Generator number
<offset>	Gain or attenuation value
Range [def. unit]	–300 dB to +300 dB [dB]
*RST value	0 dB
SCPI, Command Types	Device-specific, command or query

Example:

Assume that a DUT requires a constant input power of +35 dBm at its port 2, and that the measurement path contains an amplifier with a 30 dB gain.

```
SYST:COMM:RDEV:GEN1:DEF 'Ext. Gen. 1', 'SME02', 'gpib0', '21'
```

Configure an R&S SME02 generator as external generator no. 1, assigning the name Ext. Gen. 1 and a GPIB address 21.

```
SOUR:POW:GEN1:OFFS 5, ONLY
```

Set the source power of generator no. 1 to +5 dBm.

```
SOUR:POW:CORR:GEN1:LEV:OFFS 30
```

Specify the gain of the amplifier in the signal path between the external generator and the input port of the DUT.

```
SOUR:POW:CORR:ACQ GEN,1
```

Perform a source power calibration using the external generator no. 1 as a

source port and the target power of +35 dBm.

SOURce<Ch>:POWER<Pt>:CORRection:GENerator<Gen>[:STATe] <Boolean>

Enables or disables the source power calibration for channel <Ch> and for an external generator number <Gen>. The command is disabled unless a source power calibration for the external generator has been performed ([SOURce<Ch>:POWER<Pt>:CORRection\[:ACQuire\] GENerator, <source_pt>](#)). To enable or disable a source power calibration for an analyzer port use [SOURce<Ch>:POWER<Pt>:CORRection\[:STATe\]](#).

<Ch>	Calibrated channel number
<Pt>	Calibrated port number. This suffix is ignored; the generator is selected via <Gen>.
<Gen>	Generator number
<Boolean>	Enables (ON) or disables (OFF) the source power calibration for an external generator number <Gen>.
*RST value	OFF [-]

SCPI, Command Types Device-specific, command or query

Example: See [SOURce<Ch>:POWER<Pt>:CORRection\[:ACQuire\]](#).

SOURce<Ch>:POWER<Pt>:CORRection:HARMonic[:ACQuire]

Starts the source calibration (1st power calibration step for harmonic measurements), stores and applies the calibration data. The external power meter used is selected via [SOURce<Ch>:POWER<Pt>:CORRection:PMETer:ID](#).

<Ch>	Calibrated channel number
<pt>	Port number This suffix is ignored; the analyzer calibrates the port that is selected as a source port for the harmonic measurement ([SENSe<Ch>:]FREQuency:CONVersion:HARMonic:SPORt).

SCPI, Command Types Device-specific, no query

Example: *RST; FREQ:STAR 0.5E+9; STOP 1E+9

Reset the analyzer (activating a frequency sweep) and set the sweep range between 1 GHz and 1.1 GHz.

FREQ:CONV:HARM:ORD 4; SPOR 1; RPOR 2

Configure a 4th harmonic measurement with source port 1 and receive port 2. The measurement is still not enabled.

FREQ:CONV HARM

Enable the configured harmonic measurement.

SOUR:POW:CORR:PMET:ID 1

Select power meter no. 1 (previously configured in the [External Power Meters](#) dialog and properly connected) for the RF source calibration.

```
SOUR:POW:CORR:HARM
```

Start source power calibration at the previously selected source port 1.

```
CORR:POW:HARM:ACQ
```

Start receiver power calibration at the previously selected receive port 2.

```
CALC:PAR:MEAS? "TRC1"
```

Query the measured quantity. The analyzer measures the wave quantity b2, the response is 'B2D1SAM'.

SOURce<Ch>:POWER<Pt>:CORRection:IMODulation:LTONE[:ACQuire]

[Deprecated command, replaced by

[SOURce<Ch>:POWER<Pt>:CORRection:IMODulation:SPORTs\[:ACQuire\]](#)]

Starts the source calibration for the lower tone port (1st legacy power calibration step for intermodulation measurements), stores and applies the calibration data. The external power meter used is selected via [SOURce<Ch>:POWER<Pt>:CORRection:PMETer:ID](#).

This command will perform a calibration only at the lower tone frequency (legacy power calibration). If the intermodulation measurement is combined with a mixer measurement the calibration will be performed both at the RF and the IF range of the lower tone frequency. To perform a calibration at all selected intermodulation orders as well, use the command

[SOURce<Ch>:POWER<Pt>:CORRection:IMODulation:SPORTs\[:ACQuire\]](#) which combines steps 1 and 2 of the legacy power calibration into one step.

During this calibration the upper tone port of the intermodulation measurement is switched off.

<Ch> Channel number

<pt> Port number This suffix is ignored; the analyzer calibrates the port that is selected as source port for the lower tone of the intermodulation measurement ([\[SENSe<Ch>:\]FREQuency:IMODulation:LTONE](#)).

SCPI, Command Types Device-specific, no query

Example:

```
*RST; FREQ:IMOD:LTON PORT,1; UTON PORT, 3
```

Reset the instrument to create the default channel no. 1. Select port 1 as a source port for the lower tone, port 3 as a source port for the upper tone.

```
FREQ:IMOD:REC 2
```

Select port 2 as a receiver port.

```
FREQ:STAR 1GHZ; STOP 2GHz
```

Define a suitable sweep range to ensure that the analyzer can measure all intermodulation products.

```
SOUR:POW:CORR:PMET:ID 1
```

Select power meter no. 1 (previously configured in the [External Power Meters](#) dialog and properly connected) for the RF source calibration.

```
SOUR:POW:CORR:IMOD:LTON
```

Start source power calibration for the lower tone at the previously selected source port 1.

```
SOUR:POW:CORR:IMOD:UTON
```

Start source power calibration for the upper tone at the previously selected source port 3.

```
CORR:POW:IMOD:ACQ
```

Start receiver power calibration at the previously selected receive port 2.

```
CALC:PAR:SDEF 'IM_Meas', 'IP3UI'
```

Create a new trace named 'IM_Meas'. Select the upper 3rd-order intercept point at the DUT input as a measured quantity.

```
DISPlay:WINDow1:TRACe2:FEED 'IM_Meas'
```

Display the newly created trace in diagram area no. 1

SOURce<Ch>:POWER<Pt>:CORRection:IMODulation:RPORT[:ACquire]

Starts a source power calibration for the receive port of the intermodulation measurement (2nd power calibration step for intermodulation measurements), stores and applies the calibration data. The external power meter used is selected via `SOURce<Ch>:POWER<Pt>:CORRection:PMETer:ID`.

A source power calibration of the receive port is usually done as preparation for an enhanced wave correction. Make sure that the Prepare Enhanced Wave Corr (`[SENSe<Ch>:]FREQuency:IMODulation:PEWCorr[:STATe]`) flag is set before calling this command. To perform a receiver power calibration of the receive port use command `[SENSe<Ch>:]CORRection:POWER<port_no>:IMODulation:RPORT:ACquire`.

This calibration encompasses the lower and upper tone frequency range as well as the frequency range for all lower and upper intermodulation products which have been selected via `[SENSe<Ch>:]FREQuency:IMODulation:ORDer<Im>:STATe`. If in addition to the intermodulation measurement a mixer measurement is set up as well, only the IF frequency ranges will be measured.

<Ch> Channel number

<pt> Port number. This suffix is ignored; the analyzer calibrates the port that is selected as receive port for the intermodulation measurement (`[SENSe<Ch>:]FREQuency:IMODulation:RECeiver`).

SCPI, Command Types Device-specific, no query

Example:

```
*RST; FREQ:IMOD:LTON PORT,1; UTON PORT, 3
```

Reset the instrument to create the default channel no. 1. Select port 1 as a source port for the lower tone, port 3 as a source port for the upper tone.

```
FREQ:IMOD:REC 2
```

Select port 2 as a receiver port.

```
FREQ:STAR 1GHZ; STOP 2GHz
```

Define a suitable sweep range to ensure that the analyzer can measure all

intermodulation products.

```
FREQ:IMOD:PEWC ON
```

Prepare enhanced wave correction

```
SOUR:POW:CORR:PMET:ID 1
```

Select power meter no. 1 (previously configured in the *External Power Meters* dialog and properly connected) for the RF source calibration.

```
SOUR:POW:CORR:IMOD:SPOR
```

Start source power calibration for the lower and upper tone port (previously selected source ports 1 and 3).

```
SOUR:POW:CORR:IMOD:RPOR
```

Start source power calibration at the previously selected receive port 2.

```
CALC:PAR:SDEF 'IM_Meas', 'IP3UI'
```

Create a new trace named 'IM_Meas'. Select the upper 3rd-order intercept point at the DUT input as a measured quantity.

```
DISPlay:WINDow1:TRACe2:FEED 'IM_Meas'
```

Display the newly created trace in diagram area no. 1

SOURce<Ch>:POWER<Pt>:CORRection:IMODulation:SPORTs[:ACQuire]

Starts the source calibration for the lower and upper tone ports (1st power calibration step for intermodulation measurements), stores and applies the calibration data. The external power meter used is selected via `SOURce<Ch>:POWER<Pt>:CORRection:PMETer:ID`.

The calibration will be performed at the following frequency ranges:

- The lower tone frequency range (the base frequency range) with lower tone port driving.
- The upper tone frequency range with upper tone port driving.
- The frequency range for all lower and upper intermodulation products which have been selected via `[SENSe<Ch>:]FREQuency:IMODulation:ORDeR<Im>:STATe` with lower tone port driving. These power calibrations are required for the receiver calibration in step 2 (unless *Prepare Enhanced Wave Corr* is selected via `[SENSe<Ch>:]FREQuency:IMODulation:PEWCorr[:STATe]`) and for the measurement of intermodulation products at the DUT input.
- If in a non mixer measurement the upper tone is driven by an external generator, an external device is chosen as *Two Tone Output* (via `[SENSe<Ch>:]FREQuency:IMODulation:TTOuTput`) and *Prepare Enhanced Wave Corr* is not selected (`[SENSe<Ch>:]FREQuency:IMODulation:PEWCorr[:STATe]`), the upper tone frequency range is calibrated not only at the upper tone port but at the lower tone port as well. At the upper tone port a flatness calibration is required as that port will be driving this frequency during actual measurements. At the lower tone port a reference receiver calibration is performed which is required for the receiver power calibration in step 2 and which cannot be performed at the external generator.
- If in addition to the intermodulation measurement a mixer measurement is set up as well, all frequency ranges mentioned under a. through c. will be calibrated in the IF range as well unless *Prepare Enhanced Wave Corr* is selected (`[SENSe<Ch>:]FREQuency:IMODulation:PEWCorr[:STATe]`). In that case the IF frequency

ranges are neither needed for intermodulation products at the DUT input (as those are measured in the RF range) nor for the receiver calibration (as a source power calibration will be performed at the receiving port).

<Ch> Channel number

<pt> Port number This suffix is ignored; the analyzer calibrates the ports that are selected as source ports for the lower and upper tone of the intermodulation measurement, respectively (`[SENSe<Ch>:]FREQuency:IMODulation:LTONE` and `[SENSe<Ch>:]FREQuency:IMODulation:UTONE`).

SCPI, Command Types Device-specific, no query

Example:

```
*RST;FREQ:IMOD:LTON PORT,1;UTON PORT,3
```

Reset the instrument to create the default channel no. 1. Select port 1 as a source port for the lower tone, port 3 as a source port for the upper tone.

```
FREQ:IMOD:REC 2
```

Select port 2 as a receiver port.

```
FREQ:STAR 1GHZ;STOP 2GHz
```

Define a suitable sweep range to ensure that the analyzer can measure all intermodulation products.

```
SOUR:POW:CORR:PMET:ID 1
```

Select power meter no. 1 (previously configured in the *External Power Meters* dialog and properly connected) for the RF source calibration.

```
SOUR:POW:CORR:IMOD:SPOR
```

Start source power calibration for the lower and upper tone port (previously selected source ports 1 and 3).

```
CORR:POW:IMOD:RPOR:ACQ
```

Start receiver power calibration at the previously selected receive port 2.

```
CALC:PAR:SDEF 'IM_Meas','IP3UI'
```

Create a new trace named 'IM_Meas'. Select the upper 3rd-order intercept point at the DUT input as a measured quantity.

```
DISPlay:WINDow1:TRACe2:FEED 'IM_Meas'
```

Display the newly created trace in diagram area no. 1

SOURce<Ch>:POWER<Pt>:CORRection:IMODulation:UTONE[:ACQuire]

[Deprecated command, replaced by

`SOURce<Ch>:POWER<Pt>:CORRection:IMODulation:SPORTs[:ACQuire]`]

Starts the source calibration for the upper tone port (2nd legacy power calibration step for intermodulation measurements), stores and applies the calibration data. The external power meter used is selected via `SOURce<Ch>:POWER<Pt>:CORRection:PMETer:ID`.

This command will perform a calibration only at the upper tone frequency. If the intermodulation measurement is combined with a mixer measurement the calibration will be performed at the RF range of the upper tone frequency only. During this calibration the lower tone port of the intermodulation

measurement is switched off.

When performing a power calibration at all selected intermodulation orders, the command `SOURce<Ch>:POWer<Pt>:CORRection:IMODulation:SPORTs[:ACQuire]` should be used which combines steps 1 and 2 of the legacy power calibration into one step.

When the upper tone source is an external generator (`[SENSe<Ch>:]FREQuency:IMODulation:UTONe`) and Port 1 is selected as *Two Tone Output* (`[SENSe<Ch>:]FREQuency:IMODulation:TTOuTput`) the source calibration for the upper tone port must not use any reference receiver. If the source power settings are not set accordingly before calling this command an error will be returned.

<Ch>	Channel number
<pt>	Port number This suffix is ignored; the analyzer calibrates the port that is selected as source port for the upper tone of the intermodulation measurement (<code>[SENSe<Ch>:]FREQuency:IMODulation:UTONe</code>).
SCPI, Command Types	Device-specific, no query
Example:	See <code>SOURce<Ch>:POWer<Pt>:CORRection:IMODulation:LTONe[:ACQuire]</code>

SOURce<Ch>:POWer<Pt>:CORRection:LEVel:OFFSet <offset>

Specifies a gain (positive values) or an attenuation (negative values) in the signal path between the source port and the calibrated reference plane (*Cal Power Offset*). The value has no impact on the source power.

<Ch>	Calibrated channel number
<Pt>	Calibrated port number
<offset>	Gain or attenuation value
Range [def. unit]	–300 dB to +300 dB [dB]
*RST value	0 dB

SCPI, Command Types Device-specific, command or query

Example:	Assume that a DUT requires a constant input power of +35 dBm at port 2, and that the measurement path contains an amplifier with a 30 dB gain. *RST; SOUR:POW 0 Reset the instrument and set the internal source power (base channel power) for the default channel 1 to 0 dBm. SOUR:POW2:OFFS 5, ONLY Replace the source power at port 2 by +5 dBm. The powers at the remaining ports are not affected. SOUR:POW2:CORR:LEV:OFFS 30 Specify the gain of the amplifier in the signal path between the analyzer port 2 and the input port of the DUT. SOUR:POW:CORR:ACQ PORT, 2 Perform a source power calibration using port 2 as a source port and the target

power of +35 dBm.

SOURce<Ch>:POWER<Pt>:CORRection:MIXer:IF[:ACQuire]

Starts the IF source calibration, stores and applies the calibration data. The IF source calibration is the 2nd power calibration step for vector mixer measurements; it may be used as well for scalar mixer measurements with enhanced wave correction.

The external power meter is selected via `SOURce<Ch>:POWER<Pt>:CORRection:PMETer:ID`.



The IF source calibration is independent of the RF source and LO source calibration; see description of the [mixer calibration procedure](#).

<Ch>	Calibrated channel number
<Pt>	Calibrated port number. This suffix is ignored; the port is selected via <code>[SENSe<Ch>:]FREQuency:CONVersion:MIXer:IFPort</code> . In a mixer delay or vector mixer measurement the IF signal is always measured at port 2.
SCPI, Command Types	Device-specific, no query

Example:

```
FREQ:CONV VMIX
...
```

Select a vector mixer measurement; set frequencies, see e.g. example for `[SENSe<Ch>:]FREQuency:CONVersion:MIXer:TFrequency`.

```
SOUR:POW:CORR:PMET:ID 1
```

Select power meter no. 1 (previously configured in the [External Power Meters](#) dialog and properly connected) for the RF source calibration.

```
SOUR:POW:CORR:MIX:RF
```

Start the RF source calibration. Change the test setup for the IF source calibration (see [mixer calibration procedure](#)).

```
SOUR:POW:CORR:MIX:IF
```

Start the IF source calibration.

```
FREQ:CONV:MIX:LOIN 3
```

Select port no. 3 as a signal source for the LO signal. Adjust the test setup for the LO source calibration.

```
SOUR:POW:CORR:MIX:LO
```

Start the LO source calibration.

SOURce<Ch>:POWER<Pt>:CORRection:MIXer:LO<Stg>[:ACQuire]

Starts the LO source calibration (3rd power calibration step for scalar and vector mixer measurements, 4th calibration step for two-stage scalar mixer measurements), stores and applies the calibration data. The external power meter is selected via `SOURce<Ch>:POWER<Pt>:CORRection:PMETer:ID`.



The LO source calibration is independent of the RF source and IF receiver calibration; see description of the [mixer calibration procedure](#).

<Ch>	Calibrated channel number
<Stg>	Mixer stage (signals LO 1 or LO 2; see SENSe<Ch>:]FREQuency:CONVersion:MIXer:STAGes)
<Pt>	Calibrated port number. This suffix is ignored; the port is selected via [SENSe<Ch>:]FREQuency:CONVersion:MIXer:LOPort<Stg> .

**SCPI,
Command
Types**

Example:

See [SOURce<Ch>:POWer<Pt>:CORRection:MIXer:RF\[:ACQuire\]](#).

SOURce<Ch>:POWer<Pt>:CORRection:MIXer:RF[:ACQuire]

Starts the RF source calibration (1st power calibration step for scalar and vector mixer measurements), stores and applies the calibration data. The external power meter used is selected via [SOURce<Ch>:POWer<Pt>:CORRection:PMETer:ID](#).



For scalar mixer measurements the command initiates two calibration sweeps, the first over the RF frequency range, the second over the IF frequency range (for a subsequent receiver power calibration, [\[SENSe<Ch>:\]CORRection:POWer<port_no>:MIXer:IF:ACQuire](#)). See description of the [mixer calibration procedure](#). If the RF image correction is enabled in addition ([\[SENSe<Ch>:\]FREQuency:CONVersion:MIXer:PRFimage ON](#)), a third calibration sweep in the RF image frequency range is added.

<Ch>	Calibrated channel number
<pt>	Calibrated port number. This suffix is ignored; the port is selected via [SENSe<Ch>:]FREQuency:CONVersion:MIXer:RFPort . In a mixer delay or vector mixer measurement the RF signal is always generated at port 2.

**SCPI,
Command
Types**

Example:

```
FREQ:CONV MIX
...
```

Select a scalar mixer measurement; set frequencies, see e.g. example for [\[SENSe<Ch>:\]FREQuency:CONVersion:MIXer:TFRequency](#).

```
SOUR:POW:CORR:PMET:ID 1
```

Select power meter no. 1 (previously configured in the [External Power Meters](#) dialog and properly connected) for the RF source calibration.

```
SOUR:POW:CORR:MIX:RF
```

Start the RF source calibration. Change the test setup for the IF receiver calibration (see [mixer calibration procedure](#)).

```
CORR:POWer:MIX:IF:ACQuire
```

Start the IF receiver calibration.

```
FREQ:CONV:MIX:LOIN 3
```

Select port no. 3 as a signal source for the LO signal. Adjust the test setup for the LO source calibration.

```
SOUR:POW:CORR:MIX:LO
```

Start the LO source calibration.

SOURce<Ch>:POWER<Pt>:CORRection:MIXer:RF:NFIGure[:ACQuire]

Starts the RF source calibration (1st power calibration step for mixer noise figure measurements), stores and applies the calibration data.

The effect of this command is identical to the mixer command

```
SOURce<Ch>:POWER<Pt>:CORRection:MIXer:RF[:ACQuire].
```

Example:

```
FREQ:CONV MIX
...
```

Select mixer measurement mode in order to prepare a mixer noise figure measurement; set frequencies, see e.g. example for
[SENSe<Ch>:]FREQuency:CONVersion:MIXer:TFRequency.

```
SOUR:POW:CORR:PMET:ID 1
```

Select power meter no. 1 (previously configured in the *External Power Meters* dialog and properly connected) for the RF source calibration.

```
SOUR:POW:CORR:MIX:RF:NFIGure
```

Start the RF source calibration. Change the test setup for the IF receiver calibration (see *mixer calibration procedure*).

```
CORR:POWER:MIX:IF:NFIGure:ACQuire
```

Start the IF receiver calibration.

Proceed with the noise figure measurement settings, noise figure calibration etc.; see also *Noise Figure Measurement (Programming)*.

SOURce<Ch>:POWER<Pt>:CORRection:NREadings <readings>

Sets a limit for the number of calibration sweeps in the source power calibration. The command is valid for all channels, ports and external generators. Equivalent command:

```
SOURce<Ch>:POWER<Pt>:CORRection:COLLect:AVERage[:COUNT].
```

<Ch>	Calibrated channel number. This parameter is ignored; the limit applies to all sources.
<Pt>	Calibrated port number. This parameter is ignored; the limit applies to all sources.
<readings>	Number of readings
Range [def. unit]	1 to 100 [–]
*RST value	1

SCPI, Command Types Device-specific, command or query

Example: See `SOURce<Ch>:POWER<Pt>:CORRection[:ACQuire]`.

SOURce<Ch>:POWER<Pt>:CORRection:OSources[:STATe] <Boolean>

Switches off all other sources during the calibration sweep for channel <Ch>.

<Ch> Calibrated channel number

<Pt> Calibrated port number. This parameter is ignored; the setting is valid for all sources.

<Boolean> ON – Other sources not necessarily switched off
OFF – Other sources switched off during the calibration sweep

***RST value** ON [–]

SCPI, Command Types Device-specific, command or query

Example: See `SOURce<Ch>:POWER<Pt>:CORRection[:ACQuire]`.

SOURce<Ch>:POWER<Pt>:CORRection:PMETER:ID <pmeter_no>

Selects an external power meter for the source power calibration.



The command cannot be used unless a power meter is connected via GPIB bus, USB or LAN interface and configured in the [External Power Meters](#) dialog.

<Ch> Calibrated channel number

<Pt> Calibrated port number. This parameter is ignored; the power meter selection is valid for all sources.

<pmeter_no> Number of external power meter. The parameters UP, DOWN, MIN, MAX are not available for this command.

Range [def. unit] 1 to number of external generators [–]

***RST value** The power meter selection is not changed by a reset of the analyzer.

SCPI, Command Types Device-specific, command or query.

Example: See `SOURce<Ch>:POWER<Pt>:CORRection:COLLect[:ACQuire]` and `SOURce<Ch>:POWER<Pt>:CORRection:MIXer:RF[:ACQuire]`.

SOURce<Ch>:POWER<Pt>:CORRection:STATe <Boolean>

Enables or disables the source power calibration for channel <Ch> and for port number <Pt>. The setting command is disabled unless a source power calibration for the analyzer port has been performed (`SOURce<Ch>:POWER<Pt>:CORRection[:ACQuire]`). The query always returns a result. To enable or disable a source power calibration for an external generator use `SOURce<Ch>:POWER<Pt>:CORRection:GENerator[:STATe]`.

<Ch>	Calibrated channel number
<Pt>	Calibrated port number
<Boolean>	Enables (ON) or disables (OFF) the source power calibration for port number <Pt>.
*RST value	OFF [-]
SCPI, Command Types	Device-specific, command or query
Example:	See SOURce<Ch>:POWer<Pt>:CORRection[:ACQuire] .

TCoefficient

SOURce<Ch>:POWer<Pt>:CORRection:TCoefficient...

This subsystem defines the transmission coefficients for an additional two-port in the test setup (power loss list)).

SOURce<Ch>:POWer<Pt>:CORRection:TCoefficient:CALibration <Boolean>

Selects the position of the additional two-port in the test setup.

<Ch>	Calibrated channel number. This parameter is ignored; the transmission coefficient settings are valid for all channels.
<Pt>	Calibrated port number. This parameter is ignored; the transmission coefficient settings are valid for all sources.
<Boolean>	ON – Power sensor (during calibration) OFF – Device under test (during measurement)
*RST value	ON
SCPI, Command Types	Device-specific, command or query
Example:	<pre>*RST; :SOUR:POW:CORR:TCO:CAL OFF</pre> Select the test setup with the additional two-port in front of the DUT. <pre>SOUR:POW:CORR:TCO:DEF 1GHz, -5; DEF 2GHz, -10; DEF2?</pre> Define two points in the power loss list; query the second point. <pre>SOUR:POW:CORR:TCO:INS2 1.5 GHz, -7.5</pre> Insert a third point as point no. 2 in the list. <pre>SOUR:POW:CORR:TCO:COUN?</pre> Query the number of points. The response is 3. <pre>SOUR:POW:CORR:TCO ON</pre> Enable the use of two-port transmission coefficients. <pre>SOUR:POW:CORR:TCO:FEED 'Trc1'</pre>

Replace the previous 3 points by the trace points of the default trace 'Trc1'.

```
MMEM:STOR:CORR:TCO 'C:\Program Files\Rohde&Schwarz\Network
Analyzer\PowermeterCorrLists\Test.pmc1'
```

Store the power loss list to the power meter correction list file Test.pmc1 in the directory C:\Program Files\Rohde&Schwarz\Network Analyzer\PowermeterCorrLists.

```
MMEM:LOAD:CORR:TCO 'C:\Program Files\Rohde&Schwarz\Network
Analyzer\PowermeterCorrLists\Test.pmc1'
```

Re-load the stored power meter correction list file.

```
SOUR:POW:CORR:TCO:DEL1
```

Delete the first point in the list.

```
SOUR:POW:CORR:TCO:DEL:ALL; :SOUR:POW:CORR:TCO?
```

Clear the entire list. Query whether the transmission coefficients are still taken into account. The response is 0.

```
MMEM:LOAD:CORR:TCO 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Traces\Test.s2p', 'S21'
```

Load a power loss list from a previously created 2-port Touchstone file.

SOURce<Ch>:POWER<Pt>:CORRection:TCOefficient:COUNT?

Queries the number of frequency values and transmission coefficients in the power loss list.

<Ch>	Calibrated channel number. This parameter is ignored; the transmission coefficient settings are valid for all channels.
<Pt>	Calibrated port number. This parameter is ignored; the transmission coefficient settings are valid for all sources.
SCPI, Command Types	Device-specific, query only
Example:	See SOURce<Ch>:POWER<Pt>:CORRection:TCOefficient:CALibration

SOURce<Ch>:POWER<Pt>:CORRection:TCOefficient:DEFine<List_No> <frequency>, <transmission>

Adds a new frequency and transmission coefficient to the end of the power loss list.

<Ch>	Calibrated channel number. This parameter is ignored; the transmission coefficient settings are valid for all channels.
<Pt>	Calibrated port number. This parameter is ignored; the transmission coefficient settings are valid for all sources.
<List_no>	Number of point in the list. This suffix is only used for queries.
<frequency>	Stimulus frequency value
Range [def. unit]	Stimulus values outside the frequency range of the analyzer are allowed [Hz]. If several points with identical frequencies are added, the analyzer automatically

<transmission>	ensures a frequency spacing of 1 Hz.
Range [def. unit]	Transmission coefficient
*RST values	–300 dB to +200 dB [dB]
	n/a
SCPI, Command Types	Device-specific, command or query. The query returns the frequency and transmission coefficient no. <List_No>.

Example: See [SOURce<Ch>:POWer<Pt>:CORRection:TCOefficient:CALibration](#)

SOURce<Ch>:POWer<Pt>:CORRection:TCOefficient:DELeTe<List_No>:ALL

Clears the power loss list.

<Ch>	Calibrated channel number. This parameter is ignored; the transmission coefficient settings are valid for all channels.
<Pt>	Calibrated port number. This parameter is ignored; the transmission coefficient settings are valid for all sources.
<List_no>	Number of point in the list. This suffix is ignored; the command deletes all points.
*RST values	n/a
SCPI, Command Types	Device-specific, no query.

Example: See [SOURce<Ch>:POWer<Pt>:CORRection:TCOefficient:CALibration](#)

SOURce<Ch>:POWer<Pt>:CORRection:TCOefficient:DELeTe<List_No>[:DUMMy]

Deletes a single point no. <List_No> in the power loss list.

<Ch>	Calibrated channel number. This parameter is ignored; the transmission coefficient settings are valid for all channels.
<Pt>	Calibrated port number. This parameter is ignored; the transmission coefficient settings are valid for all sources.
<List_no>	Number of point in the list.
*RST values	n/a
SCPI, Command Types	Device-specific, no query.

Example: See [SOURce<Ch>:POWer<Pt>:CORRection:TCOefficient:CALibration](#)

SOURce<Ch>:POWer<Pt>:CORRection:TCOefficient:FEED '<trace_name>'

Selects a trace which provides the points for the power loss list.

<Ch>	Calibrated channel number. This parameter is ignored; the transmission coefficient settings are valid for all channels.

<Pt>	Calibrated port number. This parameter is ignored; the transmission coefficient settings are valid for all sources.
'<trace_name>'	String parameter for the trace name, e.g. 'Trc1'. The trace must exist in the active setup.
*RST value	n/a
SCPI, Command Types	Device-specific, no query
Example:	See SOURce<Ch>:POWer<Pt>:CORRection:TCOefficient:CALibration

SOURce<Ch>:POWer<Pt>:CORRection:TCOefficient:INSert<List_No> <frequency>, <transmission>

Inserts a new frequency and transmission coefficient at position no. <List_no> in the power loss list. The following points are shifted down in the list.

<Ch>	Calibrated channel number. This parameter is ignored; the transmission coefficient settings are valid for all channels.
<Pt>	Calibrated port number. This parameter is ignored; the transmission coefficient settings are valid for all sources.
<List_no>	Number of inserted point in the list.
<frequency>	Stimulus frequency value
Range [def. unit]	Stimulus values outside the frequency range of the analyzer are allowed [Hz]. If several points with identical frequencies are added, the analyzer automatically ensures a frequency spacing of 1 Hz.
<transmission>	Transmission coefficient
Range [def. unit]	–300 dB to +200 dB [dB]
*RST values	n/a
SCPI, Command Types	Device-specific, command or query.
Example:	See SOURce<Ch>:POWer<Pt>:CORRection:TCOefficient:CALibration

SOURce<Ch>:POWer<Pt>:CORRection:TCOefficient[:STATe] <Boolean>

Enables or disables the use of two-port transmission coefficients.



The power loss list must contain at least one point before the transmission coefficients can be enabled.

<Ch>	Calibrated channel number. This parameter is ignored; the transmission coefficient settings are valid for all channels.
<Pt>	Calibrated port number. This parameter is ignored; the transmission coefficient settings are valid for all sources.
<Boolean>	Enables (ON) or disables (OFF) the two-port transmission coefficients.
*RST value	OFF [–]

**SCPI,
Command
Types**

Device-specific, command or query

Example:

See [SOURce<Ch>:POWER<Pt>:CORRection:TCoefficient:CALibration](#)

SOURce<Ch>:TDIF...

This subsystem controls the True Differential Mode (with option R&S ZVA-K6).

SOURce<Ch>:TDIF:CRFRequency <Frequency>

Defines the receiver frequency for true differential source adjustment. The setting is relevant in frequency converter mode only.

<Ch> Channel number.

<Frequency> Converter mode receiver frequency

Range [def. unit] 0 Hz to E+12 Hz [Hz]

*RST value 1 GHz

SCPI, Command Types Device-specific, command or query

Example:

SOURce:TDIF:CFRequency 3E+9

Set a receiver frequency of 3 GHz.

SOURce<Ch>:TDIF:IMBalance:AMPLitude:LPORT <Log Port>

Selects a logical (balanced) port for the amplitude imbalance sweep in true differential mode. A balanced port configuration must be defined and an amplitude imbalance sweep must be active to use this command; see program example.

<Ch> Channel number.

<Log Port> Logical port number of the balanced port. The balanced port must be defined using [SOURce<Ch>:LPORt<log_port>](#) before it can be selected.

Range [def. unit] Depending on the number of balanced ports defined. [-]

**SCPI,
Command
Types** Device-specific, command or query

Example:

*RST; SOUR:LPOR1 1,3

Reset the analyzer and combine the physical ports 1 and 3 to the logical port 1.

SWE:TYPE IAMP; :SOUR:TDIF?

Select an amplitude imbalance sweep. This sweep type automatically activates the true differential mode (the query returns 1).

CALC:TDIF:IMB:COMP ON

Use imbalance-compensated wave quantities to calculate S-parameters, ratios and derived quantities.

```
SOUR:TDIF:IMB:AMPL:LPOR 1; STAR -20; STOP 0
```

Configure the amplitude imbalance sweep, selecting the logical port no. 1 and a swept power range between -20 dBm and 0 dBm at the physical port no. 3 (i.e. at the physical port with the highest port number that belongs to the selected logical port).

```
CALC:PAR:SDEF 'Trc1', 'SDS12'
```

Create a new trace named 'Trc1' to measure the mixed mode S-parameter S_{ds12} .

```
DISP:TRAC:FEED 'Trc1'
```

Display the result.

SOURce<Ch>:TDIF:IMBalance:AMPLitude:STARt <Start Power>

Defines the start power for an amplitude imbalance sweep, which is equal to the left edge of a Cartesian diagram. A balanced port configuration must be defined and an amplitude imbalance sweep must be active to use this command; see program example.

<Ch> Channel number.

<Start Power> Start power of the sweep.

Range [def. unit] -40 dBm to +9.99 dBm. The exact range depends on the analyzer model; refer to the data sheet [dBm]. UP and DOWN increment/decrement the source power in 0.01-dB steps. The start power must be smaller than the stop power (SOURce<Ch>:TDIF:IMBalance:AMPLitude:STOP).

*RST value -10 dBm

SCPI, Command Types Device-specific, command or query

Example: See SOURce<Ch>:TDIF:IMBalance:AMPLitude:LPORT

SOURce<Ch>:TDIF:IMBalance:AMPLitude:STOP <Stop Power>

Defines the stop power for an amplitude imbalance sweep, which is equal to the right edge of a Cartesian diagram. A balanced port configuration must be defined and an amplitude imbalance sweep must be active to use this command; see program example.

<Ch> Channel number.

<Stop Power> Stop power of the sweep.

Range [def. unit] -39.99 dBm to +10 dBm. The exact range depends on the analyzer model; refer to the data sheet [dBm]. UP and DOWN increment/decrement the source power in 0.01-dB steps. The stop power must be larger than the start power (SOURce<Ch>:TDIF:IMBalance:AMPLitude:STARt).

*RST value +10 dBm

**SCPI,
Command
Types**

Device-specific, command or query

Example: See [SOURce<Ch>:TDIF:IMBalance:AMPLitude:LPORT](#)

SOURce<Ch>:TDIF:IMBalance:PHASe:LPORT <Log Port>

Selects a logical (balanced) port for the phase imbalance sweep in true differential mode. A balanced port configuration must be defined and a phase imbalance sweep must be active to use this command; see program example.

<Ch> Channel number.

<Log Port> Logical port number of the balanced port. The balanced port must be defined using [SOURce<Ch>:LPORt<log_port>](#) before it can be selected.

Range [def. unit] Depending on the number of balanced ports defined. [–]

**SCPI,
Command
Types**

Device-specific, command or query

Example: *RST; SOUR:LPOR1 1,3

Reset the analyzer and combine the physical ports 1 and 3 to the logical port 1.

SWE:TYPE IPH; :SOUR:TDIF?

Select a phase imbalance sweep. This sweep type automatically activates the true differential mode (the query returns 1).

SOUR:TDIF:IMB:PHAS:LPOR 1; STAR -20; STOP 0

Configure the phase imbalance sweep, selecting the logical port no. 1 and a swept phase range between -20 deg and 0 deg at the physical port no. 3 (i.e. at the physical port with the highest port number that belongs to the selected logical port).

CALC:PAR:SDEF 'Trc1', 'SDS12'

Create a new trace named 'Trc1' to measure the mixed mode S-parameter S_{ds12} .

DISP:TRAC:FEED 'Trc1'

Display the result

SOURce<Ch>:TDIF:IMBalance:PHASe:STARt <Start Phase>

Defines the start phase for a phase imbalance sweep, which is equal to the left edge of a Cartesian diagram. A balanced port configuration must be defined and a phase imbalance sweep must be active to use this command; see program example.

<Ch> Channel number.

**<Start
Phase>** Start phase of the sweep.

Range [def. unit] –180 deg to +179.99 deg [deg]. UP and DOWN increment/decrement the phase in 1-deg / 0.1-deg / 0.01-deg steps. The start phase must be smaller than the stop phase

*RST value (SOURCE<Ch>:TDIF:IMBalance:PHASe:STOP).
–180 deg

SCPI,
Command
Types Device-specific, command or query

Example: See SOURCE<Ch>:TDIF:IMBalance:PHASe:LPORT

SOURCE<Ch>:TDIF:IMBalance:PHASe:STOP <Stop Phase>

Defines the stop phase for a phase imbalance sweep, which is equal to the right edge of a Cartesian diagram. A balanced port configuration must be defined and a phase imbalance sweep must be active to use this command; see program example.

<Ch> Channel number.

<Stop
Phase> Stop phase of the sweep.

Range [def. unit] –179.99 deg to +180 deg [deg]. UP and DOWN increment/decrement the phase in 1-deg / 0.1-deg / 0.01-deg steps. The stop phase must be larger than the start phase (SOURCE<Ch>:TDIF:IMBalance:PHASe:START).

*RST value +180 deg

SCPI,
Command
Types Device-specific, command or query

Example: See SOURCE<Ch>:TDIF:IMBalance:PHASe:LPORT

SOURCE<Ch>:TDIF[:STATE] <Boolean>

Switches the true differential mode on or off. This command is available only if a suitable balanced port configuration is active.



Balanced port configurations for true differential mode

The true differential mode requires at least one balanced port. The two physical ports of the balanced port must be supplied by different power sources. This means that the analyzer port combinations 1/2, 3/4 are forbidden.

The number of possible port configurations increases with the number of analyzer ports:

- For 2-port analyzers, no suitable balanced port configuration is possible.
- For 3-port analyzers, either ports no. 1 and 3 or ports no. 2 and 3 can be combined to form a single balanced port. The third port is single-ended (unbalanced).
- For 4-port analyzers, the port combinations 1/3, 1/4, 2/3, 2/4 are allowed. The analyzer may contain either one or two balanced ports.

<Ch> Channel number.

<Boolean> ON - True differential mode active
OFF - True differential mode inactive, the virtual differential mode provides

*RST value balanced results
 OFF

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; SOUR:LPOR1 1,3
```

Reset the analyzer and combine the physical ports 1 and 3 to the logical port 1. Defining a balanced port configuration deletes the default trace.

```
SOUR:TDIF ON
```

Switch true differential mode on.

```
CALC:PAR:SDEF 'Trc1', 'BD1D2S'
```

Create a new trace to measure the differential received wave quantity b_{d1} , using the single-ended analyzer port no. 2 as a source port.

SOURce<Ch>:TDIF:WAVes SENDEd | DCMode

Qualifies whether the source power

([SOURce<Ch>:POWer<Pt>\[:LEVel\] \[:IMMediate\] \[:AMPlitude\]](#)) is equal to the power of each single-ended wave or to the balanced waves in true differential mode.

<Ch> Channel number.

SENDEd | DCMode Single-ended: Same Differential and Common Mode Voltages as in Single-Ended Mode.
 Differential and common mode: Apply to Differential ($Z_d = 2Z_0$) and Common Mode ($Z_d = Z_0/2$) Waves.

*RST value – (a reset leaves the setting unchanged)

SCPI, Command Types Device-specific, command or query

Example:

```
*RST; SOUR:LPOR1 1,3
```

Reset the analyzer and combine the physical ports 1 and 3 to the logical port 1. Defining a balanced port configuration deletes the default trace.

```
SOUR:TDIF ON
```

Switch true differential mode on.

```
SOUR:TDIF:WAV SEND
```

Select single-ended source power mode.

STATus...

This subsystem controls the [Status Reporting System](#). Status registers are not reset by *RST; use *CLS for this purpose.

STATus:PRESet

Configures the status reporting system such that device-dependent events are reported at a higher level. The command affects only the transition filter registers, the ENABLE registers, and queue enabling:

- The ENABLE parts of the STATus:OPERation and STATus:QUEStionable... registers are set to all 1's.
- The PTRansition parts are set all 1's, the NTRansition parts are set to all 0's, so that only positive transitions in the CONDition part are recognized.

The status reporting system is also affected by other commands, see [Reset Values of the Status Reporting System](#).

*RST value	–
SCPI, Command Types	Confirmed, no query
Example:	STAT:PRES Preset the status registers.

STATus:QUEStionable:CONDition?

Returns the contents of the CONDition part of the QUEStionable register. Reading the CONDition registers is nondestructive.

*RST value	–
SCPI, Command Types	Confirmed, query only
Example:	STAT:QUES:COND? Query the CONDition part of the QUEStionable register to check for questionable instrument states.

STATus:QUEStionable:ENABLE

Sets the enable mask which allows true conditions in the EVENT part of the QUEStionable register to be reported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition will occur in the summary bit (bit 3 of the SStatus Byte).

<NRf>	0 to 65535 (decimal representation)
*RST value	– (see also Reset Values of the Status Reporting System)
SCPI, Command Types	Confirmed, command or query
Example:	STAT:QUES:ENABLE 1536 Set bits no. 9 and 10 of the QUEStionable:ENABLE register

STATus:QUESTionable[:EVENT]?

Returns the contents of the **EVENT** part of the **QUESTionable** register. Reading an **EVENT** register clears it.

***RST value** –

SCPI, Command Types Confirmed, query only

Example: STAT:OPER?

Query the **EVENT** part of the **OPERation** register to check whether an event has occurred since the last reading.

STATus:QUESTionable:NTRansition

Sets the **negative transition** filter. If a bit is set, a 1 to 0 transition in the corresponding bit of the associated condition register causes a 1 to be written in the associated bit of the corresponding event register.

<NRf> 0 to 65535 (decimal representation)

***RST value** – (see also [Reset Values of the Status Reporting System](#))

SCPI, Command Types Confirmed, command or query

Example: STAT:QUES:NTR 1536

Set bits no. 9 and 10 of the **QUESTionable:NTRansition** register

STATus:QUESTionable:PTRansition

Sets the **positive transition** filter. If a bit is set, a 0 to 1 transition in the corresponding bit of the associated condition register causes a 1 to be written in the associated bit of the corresponding event register.

<NRf> 0 to 65535 (decimal representation)

***RST value** – (see also [Reset Values of the Status Reporting System](#))

SCPI, Command Types Confirmed, command or query

Example: STAT:QUES:PTR 1536

Set bits no. 9 and 10 of the **QUESTionable:PTRansition** register

STATus:QUESTionable:INTegrity:CONDition?

Returns the contents of the **CONDition** part of the **QUESTionable:INTegrity** register. Reading the **CONDition** registers is nondestructive.

***RST value** –

SCPI, Command Types Confirmed, query only

Example:

STAT:QUES:INT:COND?

Query the CONDition part of the QUESTionable:INTegrity register to detect current hardware failures.

STATus:QUESTionable:INTegrity:ENABLE

Sets the enable mask which allows true conditions in the [EVENT](#) part of the [QUESTionable:INTegrity](#) register to be reported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition will occur in the summary bit (bit 9 of the [QUESTionable](#) register).

<NRf> 0 to 65535 (decimal representation)
***RST value** – (see also [Reset Values](#) of the status reporting system)
SCPI, Command Types Confirmed, command or query

Example:

STAT:QUES:INT:ENAB 4

Set bit no. 2 of the QUESTionable:INTegrity:ENABLE register

STATus:QUESTionable:INTegrity[:EVENT]?

Returns the contents of the [EVENT](#) part of the [QUESTionable:INTegrity](#) register. Reading an EVENT register clears it.

***RST value** –
SCPI, Command Types Confirmed, query only

Example:

STAT:QUES:INT?

Query the EVENT part of the QUESTionable:INTegrity register to check whether an event has occurred since the last reading.

STATus:QUESTionable:INTegrity:HARDware:CONDition?

Returns the contents of the [CONDition](#) part of the [QUESTionable:INTegrity:HARDware](#) register. Reading the CONDition registers is nondestructive.

***RST value** –
SCPI, Command Types Confirmed, query only

Example:

STAT:QUES:INT:HARD:COND?

Query the CONDition part of the QUESTionable:INTegrity:HARDware register to detect current hardware failures.

STATus:QUESTionable:INTegrity:HARDware:ENABLE

Sets the enable mask which allows true conditions in the **EVENT** part of the **QUESTionable:INTegrity:HARDware** register to be reported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition will occur in the summary bit (bit 2 of the **QUESTionable:INTegrity** register).

<NRf> 0 to 65535 (decimal representation)
***RST value** – (see also [Reset Values](#) of the status reporting system)

SCPI, Command Types Confirmed, command or query

Example: STAT:QUES:INT:HARD:ENAB 394

Set bits no. 1, 3, 7, and 8 of the **QUESTionable:INTegrity:HARDware:ENABLE** register

STATus:QUESTionable:INTegrity:HARDware[:EVENT]?

Returns the contents of the **EVENT** part of the **QUESTionable:INTegrity:HARDware** register. Reading an **EVENT** register clears it.

***RST value** –

SCPI, Command Types Confirmed, query only

Example: STAT:QUES:INT:HARD?

Query the **EVENT** part of the **QUESTionable:INTegrity:HARDware** register to check whether an event has occurred since the last reading.

STATus:QUESTionable:INTegrity:HARDware:NTRansition

Sets the **negative transition** filter. If a bit is set, a 1 to 0 transition in the corresponding bit of the associated condition register causes a 1 to be written in the associated bit of the corresponding event register.

<NRf> 0 to 65535 (decimal representation)
***RST value** – (see also [Reset Values](#) of the status reporting system)

SCPI, Command Types Confirmed, command or query

Example: STAT:QUES:INT:HARD:NTR 394

Set bits no. 1, 3, 7, and 8 of the **QUESTionable:INTegrity:HARDware:NTRansition** register

STATus:QUESTionable:INTegrity:HARDware:PTRansition

Sets the [positive transition](#) filter. If a bit is set, a 0 to 1 transition in the corresponding bit of the associated condition register causes a 1 to be written in the associated bit of the corresponding event register.

<NRf> 0 to 65535 (decimal representation)
***RST value** – (see also [Reset Values](#) of the status reporting system)

SCPI, Command Types Confirmed, command or query

Example: `STAT:QUES:INT:HARD:PTR 394`
 Set bits no. 1, 3, 7, and 8 of the
 QUESTionable:INTegrity:HARDware:PTRansition register

STATus:QUESTionable:INTegrity:NTRansition

Sets the [negative transition](#) filter. If a bit is set, a 1 to 0 transition in the corresponding bit of the associated condition register causes a 1 to be written in the associated bit of the corresponding event register.

<NRf> 0 to 65535 (decimal representation)
***RST value** – (see also [Reset Values](#) of the status reporting system)

SCPI, Command Types Confirmed, command or query

Example: `STAT:QUES:INT:NTR 4`
 Set bit no. 2 of the QUESTionable:INTegrity:NTRansition register

STATus:QUESTionable:INTegrity:PTRansition

Sets the [positive transition](#) filter. If a bit is set, a 0 to 1 transition in the corresponding bit of the associated condition register causes a 1 to be written in the associated bit of the corresponding event register.

<NRf> 0 to 65535 (decimal representation)
***RST value** – (see also [Reset Values](#) of the status reporting system)

SCPI, Command Types Confirmed, command or query

Example: `STAT:QUES:INT:PTR 4`
 Set bit no. 2 of the QUESTionable:INTegrity:PTRansition register

STATus:QUESTionable:LIMit<1|2>:CONDition?

Returns the contents of the [CONDition](#) part of the [QUESTionable:LIMit<1|2>](#) register. Reading the CONDition registers is nondestructive.

***RST value** –

SCPI, Command Types Confirmed, query only

Example:

```
STAT:QUES:LIMit:COND?
```

Query the CONDition part of the QUEStionable:LIMit1 register to retrieve the current status of the limit check.

STATus:QUEStionable:LIMit<1|2>:ENABLE

Sets the enable mask which allows true conditions in the [EVENT](#) part of the [QUEStionable:LIMit<1|2>](#) register to be reported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition will occur in the summary bit (bit 10 of the [QUEStionable](#) register for the LIMit1 register, bit 0 of the LIMit1 register for the LIMit2 register).

<NRf> 0 to 65535 (decimal representation)
***RST value** – (see also [Reset Values](#) of the status reporting system)

SCPI, Command Types Confirmed, command or query

Example:

```
STAT:QUES:LIM2:ENAB 6
```

Set bits no. 1 and 2 of the QUEStionable:LIMit2:ENABLE register

STATus:QUEStionable:LIMit<1|2>[:EVENT]?

Returns the contents of the [EVENT](#) part of the [QUEStionable:LIMit<1|2>](#) register. Reading an EVENT register clears it.

***RST value** –

SCPI, Command Types Confirmed, query only

Example:

```
STAT:QUES:LIM1?
```

Query the EVENT part of the QUEStionable:LIMit1 register to check whether an event has occurred since the last reading.

STATus:QUEStionable:LIMit<1|2>:NTRansition

Sets the [negative transition](#) filter. If a bit is set, a 1 to 0 transition in the corresponding bit of the associated condition register causes a 1 to be written in the associated bit of the corresponding event register.

<NRf> 0 to 65535 (decimal representation)
***RST value** – (see also [Reset Values of the Status Reporting System](#))

SCPI, Command Types Confirmed, command or query

Example:

```
STAT:QUES:LIM2:NTR 6
```

Set bits no. 1 and 2 of the QUEStionable:LIMit2:NTRansition register

STATus:QUESTionable:LIMit<1|2>:PTRansition

Sets the [positive transition](#) filter. If a bit is set, a 0 to 1 transition in the corresponding bit of the associated condition register causes a 1 to be written in the associated bit of the corresponding event register.

<NRf> 0 to 65535 (decimal representation)
***RST value** – (see also [Reset Values of the Status Reporting System](#))

SCPI, Command Types Confirmed, command or query

Example: `STAT:QUES:LIM2:PTR 6`
 Set bits no. 1 and 2 of the QUESTionable:LIMit2:PTRansition register

STATus:QUEue[:NEXT]?

Queries and at the same time deletes the oldest entry in the error queue. Operation is identical to that of [SYSTem:ERRor\[:NEXT\]?](#)

The entry consists of an error number and a short description of the error. Positive error numbers are instrument-dependent. Negative error numbers are reserved by the SCPI standard; see section [Error Messages](#).

***RST value** –

SCPI, Command Types Confirmed, query only

Example: `STAT:QUE?`
 Query the oldest entry in the error queue. 0, "No error" is returned if the error queue is empty.

SYSTem...

This subsystem collects the functions that are not related to instrument performance, such as functions for general housekeeping and global configurations.

SYSTem:COMMunicate:AKAL:CONNection THROugh | OPEN | SHORt | MATCh, <port_1>, <port_2>

Connects the selected calibration standard to one or two ports of the active calibration unit (see [SYSTem:COMMunicate:RDEvice:AKAL:ADDRes](#)).

THROugh | OPEN | SHORt | MATCh Connected one or two-port standard
<port_1> Port number of the calibration unit, for one and two-port standards
<port_2> Second port number of the calibration unit, for two-port standards

*RST value	(THROUGH) only, omitted for the one-port standards –
SCPI, Command Types	Device-specific, command or query
Example:	<pre>SYST:COMM:AKAL:CONN THR, 1, 2</pre> Connect a trough standard between ports 1 and 2 of the cal unit.

SYSTem:COMMunicate:AKAL:MMEMory[:STATe] <Boolean>

Shows or hides the memory of the active calibration unit (see [SYSTem:COMMunicate:RDEvice:AKAL:ADDRess](#)).

<Boolean>	ON – memory is shown in a separate drive OFF – memory is not shown
*RST value	OFF
SCPI, Command Types	Device-specific, command or query
Example:	<pre>SYST:COMM:AKAL:MMEM ON</pre> Show the memory of the active calibration unit.

SYSTem:COMMunicate:GPIB[:SELF]:ADDRess <address_no>

Sets the GPIB address of the analyzer.

<address_no>	GPIB address (integer number)
Range [def. unit]	0 to 30 [–].
*RST value	The GPIB address is factory-preset. *RST has no effect on the value.
SCPI, Command Types	Confirmed, command or query
Example:	<pre>SYST:COMM:GPIB:ADDR 10</pre> Set the GPIB address to 10. <pre>*RST; :SYST:COMM:GPIB:ADDR?</pre> After a reset, the address is maintained (the response is 10).

SYSTem:COMMunicate:GPIB[:SELF]:RTERminator LFEoi | EOI

Sets the receive terminator of the analyzer. The receive terminator indicates the end of a command or a data block.

The receive terminator setting is relevant if block data is transferred to the analyzer ([FORMat \[:DATA\] REAL](#)). In the default setting LFEOI, the analyzer recognizes an LF character sequence with or without the EOI [control bus](#) message as a receive terminator. An accidental LF in a data block can be recognized as a terminator and cause an interruption of the data transfer.

The EOI setting is especially important if commands are transferred in block data format, because it ensures that the parser for command decoding is activated by the terminator only after the command has been completely transferred. Readout of binary data does not require a change of the receive terminator.

LFEoi	LF character sequence with or without EOI recognized
EOI	EOI recognized only
*RST value	LFEoi.
SCPI, Command Types	Device-specific, command or query
Example:	<code>SYST:COMM:GPIB:RTER EOI</code> Set the terminator to EOI.

SYSTem:COMMunicate:NET:HOSTname '<host_name>'

Queries or sets the analyzer's host name (computer name). The domain is not included.

'<host_name>'	Host name (string variable)
*RST values	n/a
SCPI, Command Types	Device-specific, command or query
Example:	<code>SYSTem:COMMunicate:NET:HOSTname?</code> Query the hostname of the analyzer.

SYSTem:COMMunicate:RDEvice:AKAL:ADDRess '<cal_unit_name>'

Selects one of the USB-connected calibration units for calibration (see commands [SENSe<Ch>:CORRection:COLLect:AUTO...](#)). This command is not necessary if only one cal unit is connected.

<cal_unit_name>	Name (USB address) of a connected calibration unit (string variable). The names of all connected cal units can be queried using SYSTem:COMMunicate:RDEvice:AKAL:ADDRess:ALL?
*RST values	" (empty string; *RST has no effect on external devices).
SCPI, Command Types	Device-specific, command or query
Example:	<code>SYST:COMM:RDEV:AKAL:ADDR:ALL?</code> Query the names of all connected calibration units. <code>SYST:COMM:RDEV:AKAL:ADDR 'ZV-Z52::1234'</code> Select the cal unit named 'ZV-Z52::1234' for calibration. <code>CORR:COLL:AUTO ", 1, 2, 4</code> Perform an automatic 3-port TOSM calibration at test ports 1, 2, and 4 using the calibration unit's default calibration kit file and arbitrary test ports of the cal unit.

SYSTem:COMMunicate:RDEvice:AKAL:ADDRes:ALL?

Queries the names (USB addresses) of all connected calibration units.

Response	Names (USB addresses) of all connected calibration units (comma-separated list of string variables).
*RST values	" (empty string; *RST has no effect on external devices).
SCPI, Command Types	Device-specific, query only
Example:	See SYSTem:COMMunicate:RDEvice:AKAL:ADDRes

SYSTem:COMMunicate:RDEvice:AKAL:PREduction[:STATe] <Boolean>

Enables or disables automatic power reduction at all test ports while an automatic calibration using the calibration unit R&S ZV-Zxx is active.

<Boolean>	ON – automatic power reduction enabled OFF – automatic power reduction disabled
*RST value	ON
SCPI, Command Types	Device-specific, command or query
Example:	<code>SYSTem:COMMunicate:RDEvice:AKAL:PREduction OFF</code> Disable automatic power reduction.

SYSTem:COMMunicate:RDEvice:EUNit:IDN?

Queries the device ID of a connected extension unit R&S ZVAX24.

Response	Manufacturer, type of the extension unit, 10-digit order number, serial number, see example below. If no extension unit is connected, an execution error is generated.
*RST values	– (*RST has no effect on external devices)
SCPI, Command Types	Device-specific, query only
Example:	<code>SYST:COMM:RDEV:EUN:IDN?</code>

Query the device ID. A possible device response is *Rohde&Schwarz,ZVAX24,1311250902100001*, where 1311.2509.02 is the order number of the extension unit R&S ZVAX24, 100001 is the serial number of the connected unit.

`SYST:COMM:RDEV:EUN:OPT?`

Query the installed hardware options of the extension unit. A possible device response is *ZVAX-B211, ZVAX-B252, ZVAX-B273*.

SYSTem:COMMunicate:RDEvice:EUNit:OPT?

Queries the hardware options of a connected extension unit R&S ZVAX24.

Response	Comma-separated list of options, see example.
*RST values	– (*RST has no effect on external devices)
SCPI, Command Types	Device-specific, query only
Example:	See SYSTem:COMMunicate:RDEvice:EUNit:IDN?

SYSTem:COMMunicate:RDEvice:GENerator<gen_no>:CATalog?

Queries the numbers of all configured external generators.

<gen_no>	Number of the configured generator. This suffix is ignored; the command affects all generators.
Response	String parameter with a comma-separated list of generator numbers.
*RST values	*RST has no effect on the configured generators.
SCPI, Command Types	Device-specific, query only
Example:	<pre>SYST:COMM:RDEV:GEN1:DEF 'Ext. Gen. 1', 'SME02', 'gpib0', '21' SYST:COMM:RDEV:GEN2:DEF 'Ext. Gen. 2', 'SME02', 'gpib0', '22'</pre> Configure two R&S SME02 generators as external generators no. 1 and 2, assigning different names and GPIB addresses. <pre>SYST:COMM:RDEV:GEN1:CAT?</pre> Query the generator numbers. The response is '1, 2'. <pre>SYST:COMM:RDEV:GEN1:COUN?</pre> Query the number of configured generators. The response is 2.

SYSTem:COMMunicate:RDEvice:GENerator<gen_no>:COUNT?

Queries the number of configured external generators.

<gen_no>	Number of the configured generator. This suffix is ignored; the command affects all generators.
Response	Number of generators.
*RST values	*RST has no effect on the configured generators.
SCPI, Command Types	Device-specific, query only
Example:	See SYSTem:COMMunicate:RDEvice:GENerator<gen_no>:CATalog?

SYSTem:COMMunicate:RDEvice:GENerator<gen_no>:DEFine '<gen_name>', '<driver>', '<interface>', '<address>',[<fast_sweep>, <10_MHz_Ref>]

Configures an external generator and adds it to the list of available generators.

<gen_no>	Number of the configured generator. Generators must be numbered in ascending order, starting with 1. If a number is re-used, the previous generator configuration is overwritten. Generators can be assigned several times so that the number of configured generators is practically unlimited.
'<gen_name>'	Name of the external generator (string parameter). An empty string means that no particular name is assigned to the generator.
'<driver>'	Generator type (string parameter). The generator type is identical with the name of the generator driver file (*.gen) stored in the resources\extdev subdirectory of the analyzer's program directory. Type the driver file name as shown in the <i>Add External Generator</i> dialog, i.e. without the file extension ".gen" (example: use 'sme02', if the corresponding driver file name is <i>sme02.gen</i>). Alternative: The '<driver>' string may also contain the generator driver file name with its complete path, e.g. 'C:\Program Files\Rohde&Schwarz\Network Analyzer\resources\extdev\sme02.gen'.
'<interface>'	Interface type (string parameter): 'GPIB0', 'VXI-11',...
'<address>'	Interface address (string parameter), depending on the interface type.
<fast_sweep>	Optional Boolean parameter, enables or disables the list mode (triggered mode).
<10_MHz_Ref>	Optional Boolean parameter, sets the generator to internal (OFF) or external (ON) reference frequency.
*RST values	*RST has no effect on the configured generators.

SCPI, Device-specific, command or query

Command Types

Example:

```
SYST:COMM:RDEV:GEN1:DEF 'Ext. Gen. 1', 'SME02', 'gpib0', '21'
```

Configure an R&S SME02 generator as external generator no. 1, assigning the name Ext. Gen. 1 and a GPIB address 21.

```
SYST:COMM:RDEV:GEN1:DEF?
```

Query the generator configuration. The response 'Ext. Gen. 1', 'SME02', 'GPIB0', '21', OFF, OFF indicates that the fast sweep mode is disabled and that the analyzer is set to internal reference frequency.

```
SYST:COMM:RDEV:GEN1:DEL
```

Clear the generator configuration table.

```
SYST:COMM:RDEV:GEN1:DEF?
```

Query the generator configuration. The analyzer returns an error message because the generator no. 1 is no longer configured.

SYSTem:COMMunicate:RDEvice:GENerator<gen_no>:DELete

Clears the configuration table for external generators.

<gen_no>	Number of the configured generator. This number is ignored, the command clears

all entries in the configuration table.
Device-specific, no query

**SCPI,
Command
Types**

Example:

See [SYSTem:COMMunicate:RDEvice:GENerator<gen_no>:DEFine](#)

SYSTem:COMMunicate:RDEvice:PMETer<pmeter_no>:AZERo

Starts auto zeroing of the external power meter.

<pmeter_no> Number of the configured power meter. Power meters must be numbered in ascending order, starting with 1. If a number is re-used, the previous power meter configuration is overwritten.
Power meters can be assigned several times so that the number of configured power meters is practically unlimited.

***RST values** *RST has no effect on the configured power meters.

**SCPI,
Command
Types** Device-specific, no query

Example:

See [SYSTem:COMMunicate:RDEvice:PMETer<pmeter_no>:DEFine](#)

SYSTem:COMMunicate:RDEvice:PMETer<pmeter_no>:CATalog?

Queries the numbers of all configured external power meters.

<pmeter_no> Number of the configured power meter. This suffix is ignored; the command affects all power meters.

Response String parameter with a comma-separated list of power meter numbers.

***RST values** *RST has no effect on the configured power meters.

**SCPI, Command
Types** Device-specific, query only

Example:

```
SYST:COMM:RDEV:PMET1:DEF 'USB Power Meter 1', 'NRP-Z55', 'usb', '100045'
SYST:COMM:RDEV:PMET2:DEF 'USB Power Meter 2', 'NRP-Z55', 'usb', '100046'
```

Configure two R&S NRP power meters as external power meter no. 1 and 2, assigning names and serial numbers.

```
SYST:COMM:RDEV:PMET1:CAT?
```

Query the power meter numbers. The response is '1, 2'.

```
SYST:COMM:RDEV:PMET1:COUN?
```

Query the number of configured power meters. The response is 2.

SYSTem:COMMunicate:RDEvice:PMETer<pmeter_no>:CONFigure:AUTO[:STATe] <Boolean>

Enables or disables *Auto Config NRP-Zxx*. If the function is enabled, the analyzer automatically configures all power meters detected at any of the USB ports as Pmtr 1, Pmtr2, ...

<pmeter_no> Number of the configured power meter. This suffix is ignored; the command affects all power meters.
Power meters can be assigned several times so that the number of configured power meters is practically unlimited.

<Boolean> ON | OFF – Enable or disable *Auto Config NRP-Zxx*

***RST values** *RST has no effect on the configured power meters.

SCPI, Command Types Device-specific, command or query

Example: See [SYSTem:COMMunicate:RDEvice:PMETer<pmeter_no>:DEFine](#)

SYSTem:COMMunicate:RDEvice:PMETer<pmeter_no>:COUNT?

Queries the number of configured external power meters.

<pmeter_no> Number of the configured power meter. This suffix is ignored; the command affects all power meters.

Response Number of power meters.

***RST values** *RST has no effect on the configured power meters.

SCPI, Command Types Device-specific, query only

Example: See [SYSTem:COMMunicate:RDEvice:PMETer<pmeter_no>:CATalog?](#)

SYSTem:COMMunicate:RDEvice:PMETer<pmeter_no>:DEFine '<pmeter_name>', '<driver>', '<interface>', '<address>'

Configures an external power meter and adds it to the list of available power meters.

<pmeter_no> Number of the configured power meter. Power meters must be numbered in ascending order, starting with 1. If a number is re-used, the previous power meter configuration is overwritten.
Power meters can be assigned several times so that the number of configured power meters is practically unlimited.

'<pmeter_name>' Name of the external power meter (string parameter). An empty string means that no particular name is assigned to the power meter.

'<driver>' Power meter type (string parameter). The power meter type is identical with the name of the power meter driver file (*.pwm) stored in the resources\extdev subdirectory of the analyzer's program directory. Type the driver file name as shown in the *Add External Generator* dialog, i.e. without the file extension ".pwm" (example: use 'NRVD', if the corresponding driver file name is *NRVD.pwm*).

Alternative: The '<driver>' string may also contain the power meter driver file

	name with its complete path, e.g. 'C:\Program Files\Rohde&Schwarz\Network Analyzer\resources\extdev\nrvd.pwm'.
'<interface>'	Interface type (string parameter): 'USB' (for the supported USB devices)
'<address>'	Interface address (string parameter), depending on the interface type.
*RST values	*RST has no effect on the configured power meters.
SCPI, Command Types	Device-specific, command or query
Example:	SYST:COMM:RDEV:PMET:CONF:AUTO OFF Disables <i>Auto Config NRP-Zxx</i> (if it was enabled previously). SYST:COMM:RDEV:PMET1:DEF 'USB Power Meter', 'NRP-Z55', 'usb', '100045' Configure an R&S NRP power meter as external power meter no. 1, assigning the name USB Power Meter and a serial number 100045. SYST:COMM:RDEV:PMET:DEL Clear the power meter configuration table. SYST:COMM:RDEV:PMET:DEF? Query the power meter configuration. The analyzer returns an error message because the power meter no. 1 is no longer configured.

SYSTem:COMMunicate:RDEvice:PMETer<pmeter_no>:DELeTe

Clears the configuration table for external power meters.

<pmeter_no>	Number of the configured power meter. This number is ignored, the command clears all entries in the configuration table.
SCPI, Command Types	Device-specific, no query
Example:	See SYSTem:COMMunicate:RDEvice:PMETer<pmeter_no>:DEFine

SYSTem:COMMunicate:RDEvice:RECeiver:DEFine '<IP_address>'

Configures a network analyzer as an external receiver for the mixer delay measurement and adds it to the list of available receivers.

'<IP_address>'	IP address (string parameter)
*RST values	*RST has no effect on the configured receivers.
SCPI, Command Types	Device-specific, command or query
Example:	See [SENSe<Ch>:]FREQuency:MDELay:RECeiver

SYSTem:COMMunicate:RDEvice:RECeiver:DELeTe

Clears the configuration table for external receivers for the mixer delay measurement.

SCPI, Command Types Device-specific, no query

Example:

See `[SENSe<Ch>:]FREQuency:MDELaY:RECeiver`

SYSTem:COMMunicate:RDEvice:TEUNit:COUNt?

Queries the number of connected extension units R&S ZVAX-TRM.

Because the firmware currently only supports a single extension unit (R&S ZVAX-TRM or R&S ZVAX24), the query returns

- 1, if the first detected extension unit is a R&S ZVAX-TRM and
- 0 otherwise

Response Number of connected extension units R&S ZVAX-TRM.

***RST values** – (*RST has no effect on external devices)

SCPI, Command Types Device-specific, query only

Example:

`SYST:COMM:RDEV:TEUN:COUN?`

If a single R&S ZVAX-TRM is connected, the query returns 1.

SYSTem:COMMunicate:RDEvice:TEUNit:IDN?

Queries the device ID of a connected extension unit R&S ZVAX-TRM.

Response Manufacturer, type of the extension unit, 10-digit order number, serial number, see example below. If no extension unit is connected, an execution error is generated.

***RST values** – (*RST has no effect on external devices)

SCPI, Command Types Device-specific, query only

Example:

`SYST:COMM:RDEV:TEUN:IDN?`

Query the device ID. A possible device response is *Rohde&Schwarz,ED INTERFACE ZVAX-TRM24,13226500K50100001*, where 13221.6500.K24 is the order number of the extension unit R&S ZVAX-TRM24, 100001 is the serial number of the connected unit.

`SYST:COMM:RDEV:TEUN:OPT?`

Query the installed hardware options of the extension unit. A possible device response is *ZVAX-TRM24B112,ZVAX-TRM24B134,ZVAX-TRM24B213,ZVAX-TRM24B224,ZVAX-TRM24B712,ZVAX24B73*.

SYSTem:COMMunicate:RDEvice:TEUNit<zvax_trm_no>:OPT?

Queries the hardware options of a detected extension unit R&S ZVAX-TRM.

Response	Comma-separated list of options, see example.
*RST values	– (*RST has no effect on external devices)
SCPI, Command Types	Device-specific, query only
Example:	See SYSTem:COMMunicate:RDEvice:TEUNit:IDN?

SYSTem:CORRection:FMPort[:STATe] <Boolean>

Enables or disables *Fast Multiport Correction*. In manual control, the setting appears in the *System Configuration – General* tab.

<Boolean>	ON OFF – Enable or disable fast multiport correction.
*RST value	*RST has no effect on the calibration algorithm.
SCPI, Command Types	Device-specific, command or query
Example:	SYST:CORR:FMP ON Enable fast multiport correction.

SYSTem:DATA:SIZE ALL | AUTO

Defines the block size for the data transfer between the instrument hardware and the software. The block size has an impact on the display of traces and on the readout of trace data using the commands of the [TRACE...](#) or [CALCulate<Chn>:DATA...](#) subsystems.

ALL	Data transfer with full buffer size. The data for each sweep are transferred together so that each displayed trace contains the data of exactly one sweep. The same is true for queried trace data. The trace is displayed or updated at once, the sweep progress is not visible on the screen.  TIP To make sure that all queried trace points stem from the same sweep you can also use single sweep mode (INITiate<Ch>:CONTinuous OFF) and the common command *OPC?
AUTO	Data transfer with an automatically determined block size. In general the data blocks comprise only part of a trace, therefore the sweep progress is visible on the screen. On the other hand the displayed trace can show the results of two consecutive sweeps.
*RST value	AUTO.
SCPI, Command Types	Device-specific, command or query
Example:	SYST:DATA:SIZE ALL Select data transfer with full buffer size in order to view the trace data from a single sweep..

SYSTem:DATE <Year>, <Month>, <Day>

Queries or defines the instrument's current date setting. The setting command requires administrator rights.

<Year>	Four-digit number
<Month>	Two-digit number, 01 (for January) to 12 (for December)
<Day>	Two-digit number, 01 to the number of days in the month
*RST value	n/a

SCPI, Command Types Confirmed, command or query

Example:

```
SYSTem:DATE?
```

Response: 2012, 05, 01 – it is the 1st of May, 2012.

SYSTem:DISPlay:COLor DBACKground | LBACKground | BWLStyles | BWSolid

Selects the color scheme for all diagram areas in the active setup.

DBACKground	Dark background
LBACKground	Light background
BWLStyles	Black and white line styles
BWSolid	Black and white solid
*RST value	— *RST does not affect the color settings; see also description of the Preset command.

SCPI, Command Types Device-specific, command or query

Example:

```
SYST:DISP:COL LBAC
```

Select a light background, e.g. to generate color hardcopies.

SYSTem:DISPlay:UPDate <Boolean> | ONCE

Switches the display on or off while the analyzer is in the remote state. The command has no effect while the analyzer is in the *Local* operating state.



Switching off the display speeds up the measurement. This command may have an impact on the update of trace and channel settings; see [SYSTem:SETTings:UPDate](#).

<Boolean>	ON OFF – Switch the display on or off. If the display is switched on, the analyzer shows the diagrams and traces like in manual control.
ONCE	Switch the display on and show the current trace. This parameter can be used for occasional checks of the measurement results or settings. The measurement is continued, however, the measurement results are not updated. Compared to the ON setting, ONCE does not slow down the measurement speed.
*RST value	OFF

SCPI, Command Types Device-specific, command or query

Example: `SYST:DISP:UPD ON`

Switch the display on to view the traces and diagrams.

SYSTem:ERRor[:NEXT]?

Queries and at the same time deletes the oldest entry in the error queue. Operation is identical to that of `STATus:QUEue[:NEXT]?`

The entry consists of an error number and a short description of the error. Positive error numbers are instrument-dependent. Negative error numbers are reserved by the SCPI standard; see section [Error Messages](#).

***RST value** –

SCPI, Command Types Confirmed, query only

Example: `SYST:ERR?`

Query the oldest entry in the error queue. 0, "No error" is returned if the error queue is empty.

SYSTem:ERRor:ALL?

Queries and at the same time deletes all entries in the error queue.

The entries consist of an error number and a short description of the error. Positive error numbers are instrument-dependent. Negative error numbers are reserved by the SCPI standard; see section [Error Messages](#).

***RST value** –

SCPI, Command Types Confirmed, command or query

Example: `SYST:ERR:ALL?`

Query all entries in the error queue. 0, "No error" is returned if the error queue is empty.

SYSTem:ERRor:DISPlay <Boolean>

Switches the display of a tooltip for remote command errors on or off. The tooltip appears at the bottom of the remote screen and of the manual screen; it is **not** displayed for SCPI errors no. –113, *Undefined header*.

<Boolean> ON | OFF – Switch the tooltip on or off.

***RST value** OFF

SCPI, Command Types Device-specific, command or query

Example:

```
SYST:ERR:DISP ON
```

Switch the display of the tooltip for remote command errors on.

```
FREQ:STAR 1
```

```
Remote Error : -222,"Data out of range;FREQ:STAR 1"
```

SYSTem:FIRMware:UPDate '<file_name>'

Installs a firmware version stored in a NWA setup file (*.msi) on the analyzer. The installation is automatic and does not require any further action.

'<file_name>' String variable for the name and directory of a NWA setup file (*.msi).

*RST value

–

SCPI, Command Types Device-specific, no query

Example:

```
SYST:FIRM:UPD 'C:\Setup\ZVAB_01.10.msi'
```

Install the firmware version 01.10 from the setup file stored in the *Setup* directory of the analyzer's internal hard disk.

SYSTem:FPRreset

Similar to [SYSTem:PRESet](#), but in addition deletes all channels from the active setup.

As a result, the active setup contains no channels, traces, and diagrams. Other open setups remain unchanged.

*RST value

–

SCPI, Command Types Device-specific, no query

Example:

```
SYST:FPR
```

Reset the parameters of the current setup and delete channel 1.

SYSTem:FREQuency? MINimum | MAXimum

Queries the minimum and maximum frequency of the network analyzer. For an overview refer to the tables at the beginning of the [\[SENSe:\]FREQuency](#) section.



In contrast to [\[SENSe<Ch>:\]FREQuency:START? STOP. etc.](#), [SYSTem:FREQuency?](#) can be used in all sweep modes.

Parameters

Center frequency of the sweep.

*RST value

n/a

SCPI, Command Types Device-specific, query only

Example: See `[SENSe<Ch>:]FREQuency:CENTer`

SYSTem:IDENtify:FACTory

Resets the response to the `*IDN?` query to the factory default value. This command overwrites a user-defined identification string; see example.

SCPI, Command Types Device-specific, command

Example: `SYSTem:IDENtify:STRing 'MyDevice'; *IDN?`

Define an identity string. The response is 'MyDevice'.

`SYSTem:IDENtify:FACTory; *IDN?`

Re-activate the factory setting. The response is of the form 'Rohde&Schwarz,ZVA8-4Port,12345,0.10.1.23', where ZVxx-nPort is the analyzer type 12345 is the serial number of the analyzer and 0.10.1.23 is the firmware version number.

SYSTem:IDENtify:STRing '<string>'

Defines an identification string (remote [ID String](#)) for the network analyzer. The query is equivalent to `*IDN?`.

'<string>' String variable for the name and directory of a NWA setup file (*.msi).
***RST value** – (the function is not affected by *RST)

SCPI, Command Types Device-specific, command or query

Example: See `SYSTem:IDENtify:FACTory`

SYSTem:KLOCK <Boolean>

Locks or unlocks the local controls of the analyzer. This includes the front panel keys, the keyboard, or other local interfaces.

<Boolean> ON | OFF – Lock or unlock the local keys.
***RST value** OFF

SCPI, Command Types Confirmed, command or query

Example: `SYST:KLOCK ON`

Lock the local keys.

SYSTem:LANGuage '<Language>'

Specifies the *Remote Language* for the analyzer.

'<Language>' Command syntax for the analyzer, string variable:
 'SCPI' - R&S ZVA-specific command set: the analyzer supports all commands described in this help system
 'PNA' | 'HP8510' | 'HP8720' | 'HP8753' | 'ANRI' ... - Compatibility with network analyzers from other manufacturers.

***RST value** SCPI

SCPI, Command Types Device-specific, command or query

Example: SYST:LANG 'PNA'

Select a PNA-compatible command set.

SYSTem:LOGGing:REMOte[:STATe] <Boolean>

Enables logging of all remote control commands transferred to the analyzer.

<Boolean> ON - Command sequence stored to file 'C:\Program Files\Rohde&Schwarz\Network Analyzer\RemoteLog\NWARemote.log'
 OFF - Command sequence not logged

***RST value** – (the function is not affected by *RST)

SCPI, Command Types Device-specific, command or query.

Example: SYST:LOGG:REM ON

Enable remote logging. The log file 'C:\Program Files\Rohde&Schwarz\Network Analyzer\RemoteLog\NWARemote.log' is fixed and does not have to be specified.

SYSTem:PASSword[:CENable] '<password>'

Sends a password to the analyzer enabling a class of service functions to function (Command ENable). Service functions are activated with the commands of the [DIAGnostic](#) system and should be used by a R&S service representative only. Refer to the service manual for more information.

'<password>' Case-sensitive string variable. Sending an invalid password generates error - 221, (settings conflict).

***RST value** – (neither the password nor the protection of service functions is affected by *RST)

SCPI, Command Types Confirmed, no query

Example: SYST:PASS "XXXX"

Enter password.

SYSTem:PRESet

Presets the active setup. Restores factory-defined or user-defined default settings (see [SYSTem:PRESet:REMOte\[:STATe\]](#)).

Other open setups remain unchanged.

*RST value –

SCPI, Command Types Confirmed, no query

Example:

```
SYST:PRES
```

Reset the parameters of the current setup.

SYSTem:PRESet:REMOte[:STATe] <Boolean>

Defines whether the remote commands [*RST](#) and [SYSTem:PRESet](#) shall use factory-defined or user-defined default settings (see [PRESet:USER\[:STATe\]](#)).

<Boolean> OFF - always restore factory-defined settings (*Factory Preset*)
ON - restore user-defined settings

*RST value – (*RST does not affect the preset state setting)

SCPI, Command Types Device-specific, command or query

Example:

See [SYSTem:PRESet:USER\[:STATe\]](#)

SYSTem:PRESet:SCOPE ALL | SINGLE

Defines whether a manual [Preset](#) (via GUI or front panel key) shall affect all open setups or the active setup only.



On the R&S ZVA, a [SYSTem:PRESet:SCOPE ALL](#) automatically executes a [SYSTem:PRESet](#).

ALL All open setups are closed and a single setup "Set1" is created with default settings

SINGLE The settings of the active setup are reset; the name of the active setup and the parameters of all other setups remain unchanged

*RST value – (*RST does not affect the preset scope setting)

SCPI, Command Types Device-specific, command or query

Example:

See [SYSTem:PRESet](#)

SYSTem:PRESet:USER[:STATe] <Boolean>

Activates or deactivates the *User Preset File* specified using [SYSTem:PRESet:USER:NAME '<Setup_file>'](#).

If the *User Preset File* cannot be accessed (e.g. because it was deleted or moved) or cannot be loaded (e.g. because it contains mismatching frequency converter settings), the *Factory Preset* is used as a fall-back.



When activated, the selected User Preset File defines the default settings for `MEMory:DEFine '<setup_name>'` and manual `Preset` (via GUI or front panel key). **RST* and `SYSTem:PRESet` only use it if `SYSTem:PRESet:REMOte[:STATe]` is set to `ON`.

<Boolean> OFF - User Preset File inactive (factory preset is used)
ON - User Preset File active

***RST value** – (*RST does not affect the preset state setting)

SCPI, Command Types Device-specific, command or query

Example:

```
SYST:PRESet:USER:NAME 'C:\Program Files\Rohde&Schwarz\Network
Analyzer\RecallSets\Setup_2.zvx'
```

Select a setup file for the user-defined preset.

```
SYST:PRESet:USER ON
```

Enable a user-defined preset.

Press *System – Preset* (manual control) or use
`MEM:DEF 'My Setup'`

Alternative setting:

```
SYSTem:PRESet:REMOte ON; *RST
```

Align *RST to the user-defined preset and carry out the user-defined preset.

SYSTem:PRESet:USER:NAME '<Setup_file>'

Specifies the setup file that will be used as *User Preset File* if `SYSTem:PRESet:USER[:STATe]` is `ON`.

'<Setup_file>' String parameter to specify the name and directory of the setup file to be loaded. The default extension (manual control) for setup files is *.zvx, although other extensions are allowed. If no path is specified the analyzer searches the default directory (subdirectory `...RecallSets`)

***RST value** – (*RST does not affect the preset settings)

SCPI, Command Types Device-specific, command or query

Example:

See `SYSTem:PRESet:USER[:STATe]`

SYSTem:PRIOrity NORMal | ANORMal | HIGH

Selects the priority of the running NWA application.

Parameters Normal priority, priority above normal, high priority

***RST value** NORMal (*RST does not affect the priority settings)

SCPI, Command Types Device-specific, command or query

Example:

```
SYST:PRI ANOR
```

Enhance the priority of the NWA application.

SYSTem:SETTings:UPDate ONCE

Initiates an immediate update of the channel or trace settings.

The command has an effect if the analyzer operates in single sweep mode (`INITiate<Ch>:CONTinuous OFF`) and if the display update is switched off (`SYSTem:DISPlay:UPDate OFF`). In this scenario, a change of the channel or trace settings is usually not taken into account immediately. The analyzer aborts the current sweep sequence but postpones the preparation of the next sweep sequence (including a re-configuration of all settings made during the last sweep period) until the next single sweep sequence is initiated. Several settings can be made en bloc, which generally saves time.

See also programming example in section [Initiating Measurements, Speed Considerations](#).

`SYSTem:SETTings:UPDate ONCE` causes the analyzer to apply the settings immediately without waiting for the end of the current single sweep sequence. The command has no effect in continuous sweep mode or if the display update is switched on.



The settings are also updated when the continuous sweep mode is activated deliberately (`INITiate<Ch>:CONTinuous ON`).

ONCE Causes an immediate update of the settings.

***RST value** —

SCPI, Command Types Confirmed, no query

Example:

```
INIT:CONT OFF
Activate single sweep mode.
SYST:SETT:UPD ONCE
```

Update the settings made during the current single sweep period.

SYSTem:SHUTdown

Switches the analyzer to the standby state.

***RST value** —

SCPI, Command Types Device-specific, no query

Example:

```
SYST:SHUT
Switch the network analyzer to standby state.
```

SYSTem:SOUNd:ALARm[:STATe] <Boolean>

Switches alarm sounds on or off.

<Boolean>	OFF - Alarm sounds switched off ON - Alarm sounds switched on
*RST value	ON
SCPI, Command Types	Device-specific, command or query.
Example:	<code>SYST:SOUN:ALAR OFF; STAT OFF</code> Switch alarm and status sounds off.

SYSTem:SOUNd:STATus[:STATe] <Boolean>

Switches status sounds on or off.

<Boolean>	OFF - Status sounds switched off ON - Status sounds switched on
*RST value	ON
SCPI, Command Types	Device-specific, command or query.
Example:	See <code>SYSTem:SOUNd:ALARm[:STATe]</code>

SYSTem:TIME <Hours>, <Minutes>, <Seconds>

Queries or defines the instrument's current time setting. The setting command requires administrator rights.

<Hours>	0 to 23
<Minutes>	0 to 59
<Seconds>	0 to 59
*RST value	n/a
SCPI, Command Types	Confirmed, command or query
Example:	<code>SYSTem:TIME?</code> Response: 12, 0, 0 – it is precisely 12 pm.

SYSTem:TRESet[:STATe] <Boolean>

Defines the restart behavior of the instrument.

<Boolean>	OFF - Keep previous measurement ON - Set all traces to 0
*RST value	n/a (a reset does not change the restart behavior)
SCPI, Command Types	Device-specific, command or query.

Example:

```
SYST:TRES ON
```

Define the sweep restart behavior such that trace values are set to 0.

SYSTem:USER:DISPlay:TITLe '<title>'

Defines a title for the remote display.

'<title>' Title (string variable). \n in the string starts a new line; see example
***RST value** – (*RST does not affect the title)

SCPI, Command Types Device-specific, command or query.

Example:

```
SYST:USER:DISP:TITL 'Rohde & Schwarz \n Vector Network Analyzer \n Remote test running'
```

Define a title for the remote display. The title is displayed in three lines; \n is not displayed.

SYSTem:USER:KEY <ukey_no>[, '<ukey_name>']

Labels a user-defined key in the remote display. In the query form the command returns whether or not a user-defined key was used.

<ukey_no> Number of the user key
Range [def. unit] 0 – Delete all user keys and restore the default keys (*Go to Local, Display Off*)
 1 to 8 – user key numbers
***RST value** 0
'<ukey_name>' Label for user key no. 1 to 8 (string variable)
***RST value** " (empty string)

SCPI, Command Types Device-specific, command or query.

Example:

```
SYST:USER:KEY 1, 'User S11'
```

Define a user key no. 1 labeled S11. The user key is only labeled, no functionality has been assigned yet.

```
SYST:USER:KEY:FUNC 1, 'S11'
```

Assign the functionality 'S11' (select S11 as a measured quantity for the active trace) to the created user key.

```
SYST:USER:KEY?
```

The query returns 0," indicating that no user key has been pressed. If you press the user softkey no. 1, the response is 1, 'User S11'.

```
CALC:PAR:MEAS? 'Trc1'
```

The query returns 'S11'," indicating that the measured quantity for trace 'Trc1' has been changed.

```
SYST:USER:KEY 0
```

Delete the user key and restore the default keys..

SYSTem:USER:KEY:FUNCTION <ukey_no>[, '<ukey_name>']

Labels the functionality of a function key to a user-defined key in the remote display.



You can use this command to execute part of your measurement task manually; see [Combining Manual and Remote Control](#).

<ukey_no>	Number of the user key
Range [def. unit]	1 to 8 – user key numbers
*RST value	– (the parameter is also needed in the query form)
'<ukey_name>'	Name of a function key, e.g. 'S11', 'Start' etc. (string variable)
*RST value	" (empty string)
SCPI, Command Types	Device-specific, command or query.

Example:

See `SYST:USER:KEY`

SYSTem:VERSion?

Returns the SCPI version number to which the analyzer complies. The analyzer complies to the final SCPI version 1999.0

*RST value	–
SCPI, Command Types	Confirmed, query only

Example:

`SYST:VERS?`

Query the SCPI version. The response is *1999.0*.

TRACe...

This subsystem handles active trace data and trace data stored in the analyzer's internal memory.



Trace data is transferred in either ASCII or block data (REAL) format, depending on the `FORMat[:DATA]` setting. If the block data format is used, it is recommended to select EOI as receive terminator (`SYSTem:COMMunicate:GPIB[:SELF]:RTERminator EOI`).

Reserved Trace Names

The commands in the `TRACe...` menu use the following ZVR-compatible parameters to specify traces:

Parameter	Meaning	Used in
CH1DATA, CH2DATA, CH3DATA, CH4DATA	Active data trace of channels 1 to 4	TRACe:COpy TRACe[:DATA][:RESPonse][:ALL]? TRACe[:DATA][:STIMulus][:ALL]? CALCulate<Chn>:MATH[:EXPRession][:DEFine]
CH1MEM, CH2MEM, CH3MEM, CH4MEM	Active memory trace associated to the active data trace CH1DATA, CH2DATA, CH3DATA, CH4DATA, respectively.	TRACe[:DATA][:RESPonse][:ALL]? TRACe[:DATA][:STIMulus][:ALL]? CALCulate<Chn>:MATH[:EXPRession][:DEFine]
IMPLied	Active data trace, addressed with <Chn>	CALCulate<Chn>:MATH[:EXPRession][:DEFine]
CHMem	Active memory trace assigned to the IMPLied trace	CALCulate<Chn>:MATH[:EXPRession][:DEFine]
MDATA1, MDATA2, MDATA3, MDATA4, MDATA5, MDATA6, MDATA7, MDATA8	Memory trace named <i>Mem<n>[Trc<m>]</i> . The trace name is unique because <n> counts all data and memory traces in the active setup.	TRACe:CLear TRACe:COpy TRACe[:DATA][:RESPonse][:ALL]? TRACe[:DATA][:STIMulus][:ALL]? CALCulate<Chn>:MATH[:EXPRession][:DEFine]

TRACe:CLear MDATA1 | MDATA2 | MDATA3 | MDATA4 | MDATA5 | MDATA6 | MDATA7 | MDATA8

[Deprecated command, replaced by `CALCulate<Ch>:PARAmeter:DELeTe`]

Deletes one of the memory traces *Mem<n>[Trc<m>]*, where n = 1, ... 8.

Parameters Identifier for the memory trace; see list of [trace names](#).

Range [def. unit] MDATA<n> where <n> = 1 to 8. [–]

*RST value –

SCPI, Command Types Device-specific, no query

Example:

SWE:POIN 20

Create a trace with 20 sweep points, making the created trace the active trace of channel 1 (omitted optional mnemonic `SENSe1`).

TRAC:COpy "Mem_Pt20",CH1DATA

Copy the current state of the created trace to a memory trace named "Mem_Pt20". The memory trace is not displayed.

DISP:WIND:TRAC2:FEED "MEM_PT20"

Display the created memory trace in the active diagram area (diagram area no. 1).

TRACe:COpy <memory_trc>,<data_trc>

Copies a data trace to a memory trace. The trace to be copied can be specified by two alternative methods:

- As the active data trace of channels 1 to 4 (CH1DATA, CH2DATA, CH3DATA, CH4DATA). If a mathematical trace is active, the associated data trace is copied.
- As a trace with a name (string variable)

The created memory trace can be specified as follows:

- As the memory trace named *Mem<n>[Trc<m>]*, where *n* = 1, ... 8 and *Trc<m>* is the name of the copied data trace (MDATA1, MDATA2, MDATA3, MDATA4, MDATA5, MDATA6, MDATA7, MDATA8)
- As a memory trace with an arbitrary name (string variable)

An existing memory trace with the same name is overwritten.



*The copied trace is the data trace which is not modified by any mathematical operations. To copy a mathematical trace to a memory trace, use **TRACe:COPIY:MATH**. To copy the active trace to the memory using an automatic memory trace name, use **CALCulate<Chn>:MATH:MEMorize**.*

<memory_trc>	Name of the memory trace.
Range [def. unit]	<memory_trace> is either a string variable (enclosed in single or double quotes) or one of the following reserved names (no string variables): ZVR ✓ MDATA1 MDATA2 MDATA3 MDATA4 MDATA5 MDATA6 MDATA7 MDATA8 (only for memory traces <i>Mem<n>[Trc<m>]</i> , where <i>n</i> = 1, ... 8; see list of trace names). [-]
*RST value	—
<data_trc>	Name of the data trace
Range [def. unit]	<data_trace> is either a string variable (enclosed in single or double quotes) or one of the following reserved names (no string variables): ZVR ✓ CH1DATA CH2DATA CH3DATA CH4DATA (only for the active data trace in channels Ch1, Ch2, Ch3, Ch4; see list of trace names). [-]
*RST value	—
SCPI, Command Types	Confirmed, no query
Example:	*RST; :SWE:POIN 20

Create a trace with 20 sweep points, making the created trace the active trace of channel 1 (omitted optional mnemonic **SENSe1**).

TRAC:COPIY "Mem_Pt20",CH1DATA

Copy the current state of the created trace to a memory trace named "Mem_Pt20". The memory trace is not displayed.

DISP:WIND:TRAC2:FEED "MEM_PT20"

Display the created memory trace in the active diagram area (diagram area no. 1).

TRACe:COPIY:MATH <memory_trc>,<data_trc>

Copies a mathematical trace to a memory trace. The trace to be copied can be specified by two alternative methods:

- As the active mathematical trace of channels 1 to 4 (CH1DATA, CH2DATA, CH3DATA, CH4DATA)
- As a trace with a name (string variable)

The created memory trace can be specified as follows:

- As the memory trace named *Mem<n>[Trc<m>]*, where $n = 1, \dots, 8$ and *Trc<m>* is the name of the copied data trace (MDATA1, MDATA2, MDATA3, MDATA4, MDATA5, MDATA6, MDATA7, MDATA8)
- As a memory trace with an arbitrary name (string variable)

An existing memory trace with the same name is overwritten.



To copy a data trace which is not modified by any mathematical operations, use [TRACe:COPIY](#).

<memory_trc>	Name of the memory trace.
Range [def. unit]	<memory_trace> is either a string variable (enclosed in single or double quotes) or one of the following reserved names (no string variables): ZVR ✓ MDATA1 MDATA2 MDATA3 MDATA4 MDATA5 MDATA6 MDATA7 MDATA8 (only for memory traces <i>Mem<n>[Trc<m>]</i> , where $n = 1, \dots, 8$; see list of trace names). [-]
*RST value	—
<data_trc>	Name of the data trace
Range [def. unit]	<data_trace> is either a string variable (enclosed in single or double quotes) or one of the following reserved names (no string variables): ZVR ✓ CH1DATA CH2DATA CH3DATA CH4DATA (only for the active data trace in channels Ch1, Ch2, Ch3, Ch4; see list of trace names). [-]
*RST value	—
SCPI, Command Types	Confirmed, no query
Example:	

```
*RST; :SWE:POIN 20
```

Create a trace with 20 sweep points, making the created trace the active trace of channel 1 (omitted optional mnemonic *SENSe1*).

```
CALC:MATH:SDEF 'Trc1 / 2'; :CALC:MATH:STAT ON
```

Define a mathematical trace, dividing the data trace by 2. Activate the mathematical mode and display the mathematical trace instead of the data trace.

```
TRAC:COPIY:MATH 'Mem_Pt20',CH1DATA; :CALC:MATH:STAT OFF
```

Copy the current state of the mathematical trace to a memory trace named "Mem_Pt20". The memory trace is not displayed. Switch the display back to the data trace.

```
DISP:WIND:TRAC2:FEED 'MEM_PT20'
```

Display the created memory trace together with the data trace.

TRACe[:DATA][:RESPonse][:ALL]? CH1DATA | CH2DATA | CH3DATA | CH4DATA | CH1MEM | CH2MEM | CH3MEM | CH4MEM | MDATA1 | MDATA2 | MDATA3 | MDATA4 | MDATA5 | MDATA6 | MDATA7 | MDATA8

[Deprecated command]

Returns the response values of the active data trace or memory trace (see [trace names](#)).



To read the response values of an arbitrary data or memory trace, use [CALCulate<Chn>:DATA?](#) To

read the response values of a trace acquired in single sweep mode (*INITiate<Ch>:CONTinuous OFF*), use *CALCulate<Chn>:DATA:NSWeep:FIRSt?*

<Response> Response data of the selected trace, see list of [trace names](#).
Range [def. unit] The data is transferred in the data format defined via *FORMat[:DATA]* and *FORMat:DEXPort:SOURce*. The unit is the default unit of the measured parameter; see *CALCulate<Ch>:PARAmeter:SDEFine*.
***RST value** –

SCPI, Command Types Device-specific, query only

Example:

SWE:POIN 20

Create a trace with 20 sweep points, making the created trace the active trace of channel 1 (omitted optional mnemonic *SENSe1*).

CALC:FORM MLIN; :FORM ASCII; FORM:DEXP:SOUR FDATA

Select the trace data format: linear magnitude values, ASCII format and formatted trace data (1 value per sweep point).

TRAC? CH1DATA

Query the 20 response values of the created trace according to the previous format settings.

TRACe[:DATA]:STIMulus[:ALL]? CH1DATA | CH2DATA | CH3DATA | CH4DATA | CH1MEM | CH2MEM | CH3MEM | CH4MEM | MDATA1 | MDATA2 | MDATA3 | MDATA4 | MDATA5 | MDATA6 | MDATA7 | MDATA8

[Deprecated command]

Returns the stimulus values of the active data trace or memory trace (see [trace names](#)).



*To read the stimulus values of an arbitrary data or memory trace, use *CALCulate<Chn>:DATA:STIMulus?**

<Response> Response data of the selected trace, see list of [trace names](#).
Range [def. unit] The data is transferred in the data format defined via *FORMat[:DATA]*. The numeric values are expressed in the default unit of the stimulus variable. [Hz, dBm or s, depending on the sweep type]
***RST value** –

SCPI, Command Types Device-specific, query only

Example:

SWE:POIN 20

Create a trace with 20 sweep points, making the created trace the active trace of channel 1 (omitted optional mnemonic *SENSe1*).

TRAC:STIM? CH1DATA

Query the 20 stimulus values of the created trace. In the default format setting, the data is returned as a comma-separated list of 10-digit ASCII values.

TRIGger<Ch>...

This subsystem is used to synchronize the analyzer's actions (in particular, the start of a measurement sequence) with events.

TRIGger<Ch>[:SEQuence]:HOLDOff <delay>

Sets a delay time between the trigger event and the start of the measurement (*Trigger Delay*).

<Ch>	Channel number. If unspecified the numeric suffix is set to 1.
<delay>	Delay time.
Range [def. unit]	0 s to 13680 s [s]. UP and DOWN increment/decrement the trigger delay in 10 ms steps.
*RST value	0 s
SCPI, Command Types	Confirmed, command or query
Example:	<pre>TRIG:SOUR TIM</pre> Activate internal timer as trigger source. <pre>TRIG:HOLD UP</pre> Set a delay time of 10 ms.

TRIGger<Ch>[:SEQuence]:HOLDOff:GENerator<Gen> <delay>

Defines the trigger delay for a generator port <Gen>. The setting takes effect when a port-specific trigger delay is selected ([TRIGger<Ch>\[:SEQuence\]:HOLDOff:MODE PSpEcific](#)).

<Ch>	Channel number
<Gen>	Generator number
<delay>	Delay time.
Range [def. unit]	0 s to 13680 s [s]. UP and DOWN increment/decrement the trigger delay in 10 ms steps.
*RST value	0 s
SCPI, Command Types	Device-specific, command or query
Example:	See TRIGger<Ch>[:SEQuence]:HOLDOff:MODE

TRIGger<Ch>[:SEQuence]:HOLDOff:MODE PALL | PSpEcific

Qualifies whether the trigger delay is valid for all physical ports (including external generator) or source port-specific. This setting is available if the triggered measurement sequence is a partial measurement

(TRIGger<Ch>[:SEquence]:LINK 'PPoint').

<Ch> Channel number

Parameters PALL – Same trigger delay at all ports (TRIGger<Ch>[:SEquence]:HOLDoff)
 PSpecific – Port-specific trigger delay defined via
 TRIGger<Ch>[:SEquence]:HOLDoff:PORT<Pt> (for physical analyzer ports) or
 TRIGger<Ch>[:SEquence]:HOLDoff:GENerator<Gen> (for external
 generators).

*RST value PALL

SCPI, Command Types Device-specific, command or query

Example:

```
TRIG:LINK 'PPoint'
```

Select partial measurement as triggered measurement sequence.

```
TRIG:HOLD:MODE PSP
```

Select port-specific trigger delay.

```
SYST:COMM:RDEV:GEN1:DEF 'Ext. Gen. 1', 'SME02', 'gpib0', '21'
```

Configure an R&S SME02 generator as external generator no. 1.

```
TRIG:HOLD:PORT1 0.001; PORT2 0.002; GEN1 0.003
```

Define port-specific trigger delays at the analyzer ports 1 and 2 and at the external generator port 1.

TRIGger<Ch>[:SEquence]:HOLDoff:PORT<Pt> <delay>

Defines the trigger delay for a physical analyzer port <Pt>. The setting takes effect when a port-specific trigger delay is selected (TRIGger<Ch>[:SEquence]:HOLDoff:MODE PSpecific).

<Ch> Channel number

<Pt> Analyzer port number

<delay> Delay time.

Range [def. unit] 0 s to 13680 s [s]. UP and DOWN increment/decrement the trigger delay in 10 ms steps.

*RST value 0 s

SCPI, Command Types Device-specific, command or query

Example:

```
See TRIGger<Ch>[:SEquence]:HOLDoff:MODE
```

TRIGger<Ch>[:SEquence]:LINK 'POINT' | 'SWEep' | 'PPoint' | 'SEGMENT'

Selects the *Triggered Meas. Sequence*. The identifier for the sequence is a string variable.

<Ch> Channel number

'SWEep' | Trigger event starts an entire sweep.

'SEGment' 	Trigger event starts a sweep segment, if segmented frequency sweep is active (see example below). If another sweep type is active, the trigger event starts an entire sweep.
'POINT' 	Trigger event starts measurement at the next sweep point.
'PPOint'	Trigger event starts the next partial measurement at the current or at the next sweep point.
*RST value	'SWEep'
SCPI, Command Types	Confirmed, command or query. The query returns the complete string; see example below.
Example:	<pre>SEGM:ADD; :SWE:TYPE SEGM</pre> Select segmented frequency sweep. <pre>TRIG:LINK 'SEGM'</pre> Select a trigger segment as triggered measurement sequence. <pre>TRIG:LINK?</pre> Query the triggered measurement sequence. The response is 'SEGMENT'.

TRIGger<Ch>[:SEquence]:PULSe REPulse | FEPulse | RESYnc | FESYnc

Selects the trigger source for pulsed measurements (option R&S ZVA-K27) using

- a network analyzer R&S ZVA connected to an Extension Unit R&S ZVAX24 or R&S ZVAX-TRM with installed pulse modulator option
- a network analyzer R&S ZVT connected to an Extension Unit R&S ZVAX-TRM with installed pulse modulator option

<Ch>	Channel number
REPulse 	Rising edge of (external) pulse signal (generator 1)
FEPulse 	Falling edge of pulse signal
RESYnc 	Rising edge of (internal) sync signal (generator 2)
FESYnc	Falling edge of sync signal
*RST value	REPulse
SCPI, Command Types	Device-specific, command or query.
Example:	<pre>TRIG:PULS REP</pre> Trigger pulsed measurement by rising edge of external pulse signal

TRIGger<Ch>[:SEquence]:SLOPe POSitive | NEGative

Qualifies whether the trigger event occurs on the rising or on the falling edge of the external TTL trigger signal.

<Ch>	Channel number
POSitive 	Rising edge.

NEGative	Falling edge.
*RST value	POSitive
SCPI, Command Types	Confirmed, command or query
Example:	<pre>TRIG:SOUR EXT</pre> Activate external signal as trigger source. <pre>TRIG:SLOP NEG</pre> Trigger on the negative edge of the (external TTL) trigger signal.

TRIGger<Ch>[:SEQuence]:SOURce IMMEDIATE | EXTERNAL | TIMer | MANual | PGENerator

Selects the source for the events that the analyzer uses to start a measurement sequence.

<Ch>	Channel number
IMMEDIATE	Free run measurement (untriggered)
EXTERNAL	Trigger by external signal applied to the <i>EXT TRIGGER</i> or pin 2 of <i>USER CONTROL</i> connector on the rear panel.
TIMer	Periodic internal trigger signal. The period of the timer is specified by the <code>TRIGger[:SEQuence]:TIMer</code> command.
MANual	Trigger event generated by pressing the <i>Manual Trigger</i> softkey.
PGENerator	Trigger event generated the pulse generator (with option R&S ZVA-K27), depending on the <code>TRIGger<Ch>[:SEQuence]:PULSe</code> settings.
*RST value	IMMEDIATE
SCPI, Command Types	Confirmed, command or query.
Example:	<pre>TRIG:SOUR MAN</pre> Activate manual trigger mode. The analyzer starts the next sweep when the <i>Manual Trigger</i> softkey is pressed.

TRIGger<Ch>[:SEQuence]:TIMer <numeric_value>

Sets the period of the internal periodic signal that can be used as a trigger source (`TRIGger<Ch>[:SEQuence]:SOURce TIMer`).

<Ch>	Channel number
<numeric_value>	Timer period
Range [def. unit]	1E-005 s to 13680 s [s]. UP and DOWN increment/decrement the timer period in 10 ms steps.
*RST value	1 s
SCPI, Command Types	Confirmed, command or query
Example:	<pre>TRIG:SOUR TIM</pre>

Activate internal timer as trigger source.

```
TRIG:TIM 0.1
```

Set a timer period of 100 ms.

8 Programming Examples

This chapter contains detailed programming examples.

The syntax and use of all SCPI commands is described in the [SCPI Reference](#) chapter, where you will also find additional examples. For a general introduction to remote control of the analyzer refer to chapter [Remote Control](#). For an overview of special remote control features of the network analyzers refer to section [NWA Remote Control Features](#).

Basic Tasks

Typical Stages of a Remote Control Program

A typical remote control program comprises the following stages:

Very often, steps 3 and 4 (or steps 2 to 4) must be repeated several times.



All example programs in this section have been developed and tested by means of the [GPIB Explorer](#) provided with the network analyzer. No extra programming environment is needed.

Basic Instrument Settings

Programming task: Adjust the basic network analyzer settings to your measurement tasks, optimizing the instrument for fast measurements.



Considerations for high measurement speed

The measurement speed depends on the sweep time but also on an efficient preparation of the instrument and on proper command synchronization. The following items should be kept in mind:

- For maximum speed the basic channel settings should be set while the sweep is stopped and with a minimum of sweep points. It is advisable to increase the number of points after all instrument settings have been performed, and to initiate the sweep after the test setup has been completed.
- Execution of the `INITiate[:IMMediate]` command is fastest in synchronized mode. Insertion of fixed waiting periods into the command sequence is possible but generally less efficient.
- The sweep time depends on several parameters discussed in section [Optimizing the Measurement Speed](#). In particular it is recommended to select the best set of sweep points, e.g. using the segmented sweep.

// Reset the instrument, switch off the measurement (after one sweep),

// reduce the number of sweep points.

*RST

INITiate1:CONTinuous OFF

SENSe1:SWEep:POINts 2

//

// Avoid a delay time between different partial measurements and before the start of the sweeps (is default setting).

```

SENSe1:SWEep:TIME:AUTO ON
TRIGger1:SEquence:SOURce IMMEDIATE
//
// Select the widest bandwidth compatible with your measurement.
SENSe1:BANDwidth:RESolution 10
//
// Adjust your sweep points to your measurement task, e.g. using a segmented sweep.
SENSe1:SEGMENT...
```

Adjusting the Test Setup

In general the preparatives described above can be used for a series of measurements. In-between the measurements it is often necessary to change the test setup, e.g. in order to replace the DUT, change the connected ports, connect external devices etc.

Start of the Measurement and Command Synchronization

Programming task: Start a measurement in single sweep mode. Wait until all single sweep data has been acquired before you proceed to the next stage of the measurement.

`INITiate<Ch>[:IMMEDIATE]` is used to start a single sweep or a group of single sweeps. This command has been implemented for overlapped execution. The advantage of overlapped commands is that they allow the program to do other tasks while being executed.

In the present example the sweep must be completed before measurement results can be retrieved. To prevent wrong results (e.g. a mix-up of results from consecutive sweeps) the controller must synchronize its operation to the execution of `INITiate<Ch>[:IMMEDIATE]`. IEEE 488.2 defines three common commands (`*WAI`, `*OPC?`, `*OPC`) for synchronization.

```

//
// 1. Start single sweep, use *WAI
// *WAI is the easiest method of synchronization. It has no effect when sent after sequential commands.
// If *WAI follows INITiate<Ch>[:IMMEDIATE] (overlapped command),
// the analyzer executes no further commands or queries until the sweep is terminated.
// *WAI does prevent the controller from sending other commands to the analyzer or other devices
// on the GPIB bus
INITiate1:SCOPE SINGLE // Single sweep will be started in the referenced channel only
INITiate1:IMMEDIATE; *WAI // Start single sweep in channel no. 1, wait until the end of the sweep
<Continue program sequence>
```

```

//
// 2. Start single sweep, use *OPC?
// If *OPC follows INITiate<Ch>[:IMMEDIATE], it places a 1 into the output queue when the sweep is
// terminated.
// An appropriate condition in the remote control program must cause the controller to wait until *OPC?
```

returns one.

// The controller is stopped from the moment when the condition is set.

INITiate1:IMMediate; *OPC? // Start single sweep in channel no. 1, indicate the end of the sweep by a 1 in the output queue.

// So far the controller may still send messages to other devices on the GPIB bus.

<Condition OPC=1> // Stop the controller until *OPC? returns one (program syntax depends on your programming environment).

<Continue program sequence>

//

// 3. Start single sweep, use *OPC

// If *OPC follows INITiate<Ch>[:IMMediate], it sets the OPC bit in the ESR after the sweep is terminated.

// This event can be [polled](#) or used to trigger a [service request](#) of the analyzer.

// The advantage of *OPC synchronization is that both the controller and the analyzer can continue

// processing commands while the sweep is in progress.

*SRE 32 // Enable a service request for the ESR

*ESE 1 // Set event enable bit for operation complete bit

INITiate1:IMMediate; *OPC // Start single sweep in channel no. 1, set the OPC bit in the ESR after the sweep is terminated.

// The controller may still send messages, the analyzer continues to parse and execute commands.

<Wait for service request> // Controller waits for service request from the analyzer (program syntax depends on your programming environment).

<Continue program sequence>

Retrieving Measurement Results

Programming task: Read the results acquired in a single sweep.

//

// 1. Read single values (-> Markers)

// Markers are the most convenient tool for determining and retrieving single values on traces.

// The analyzer provides up to ten markers; see [Markers and Limit Lines](#).

//

// 2. Read complete trace

// Select a trace format and read formatted trace data.

CALCulate1:FORMat MLINear // Calculate the linear magnitude of z

CALCulate1:DATA? FDATa // Read the formatted trace data

//



Use `CALCulate<Chn>:DATA:NSweep:FIRSt?` to retrieve a particular trace within a group of sweeps.

Handling of Channels, Traces and Diagram Areas


The following examples show you how to perform basic tasks related to channel and trace definition and to the display of traces in diagram areas.



All example programs in this section have been developed and tested by means of the [GPIB Explorer](#) provided with the network analyzer. No extra programming environment is needed.

Several Traces with Equal Channel Settings

Programming task: Create up to four different traces with equal channel settings, assign the four 2-port standard S-parameters to the traces and display them in up to four diagram areas.

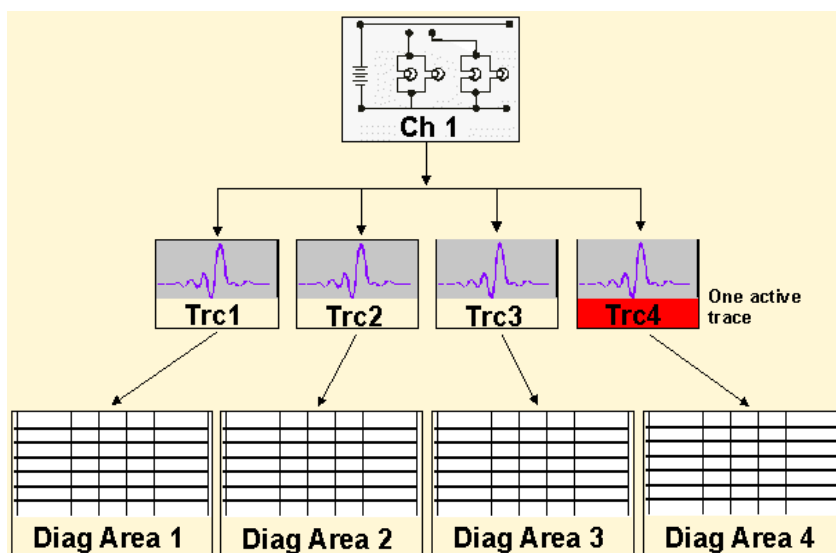

Important remote control features for this program example

The following command sequence illustrates the structure of the remote commands discussed in section [Basic Remote Control Concepts](#). In particular it shows that:


- A trace can be created and handled without being displayed.
- Traces are referenced by trace names. The active trace of a channel is often referenced by the channel suffix.
- Diagram areas are referenced by a window suffix <Wnd>. An additional suffix <WndTr> in the `DISPlay:WINDow<Wnd>:TRACe<WndTr>...` commands numbers the different traces in a diagram area.
- In remote control, it is possible to display the same trace in several diagram areas.
- The analyzer provides several commands allowing a smooth transition between remote and manual control.

//

// 1. One channel, two traces, one diagram area


// Reset the instrument, creating the default trace Trc1 in channel 1.

```
// The default measured quantity is the forward transmission S-parameter S21.
// The default format is dB Mag.
*RST
//
// Create a second trace in channel 1, assign the format Phase,
// and display the new trace in the same diagram area.
CALCulate1:PARAMeter:SDEFine 'Trc2', 'S21' // the trace becomes the active trace but is not displayed
CALCulate1:FORMat PHASe // the trace is referenced by the channel suffix 1
DISPlay:WINDow1:TRACe2:FEED 'Trc2' // display the second trace, numbering it the second trace in
// diagram area no. 1
//
// ▶Check the result on the local screen
// Go to local
SYSTem:DISPlay:UPDate ONCE
```

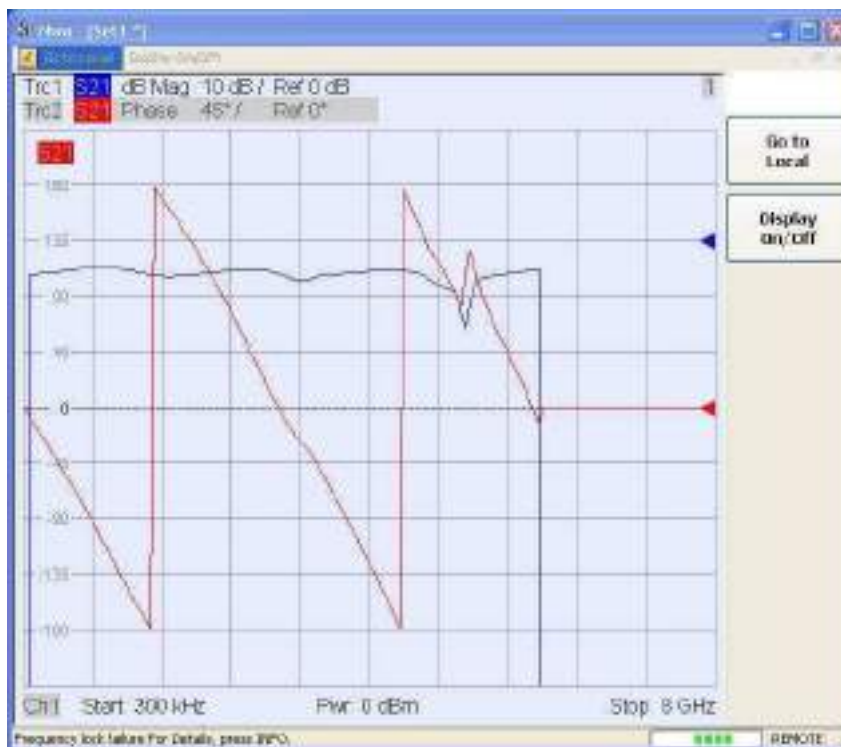

```
//
//
// 2. One channel, two traces, two diagram areas
// Create a second diagram area, assign Trc2 to the new area, and remove it from the first area.
DISPlay:WINDow2:STATe ON
DISPlay:WINDow2:TRACe2:FEED 'Trc2' // Trc2 is now displayed in both diagram areas
DISPlay:WINDow1:TRACe2:DELeTe
```

```
//
// ▶ Check the result on the local screen
// Go to local
SYSTem:DISPlay:UPDate ONCE
```

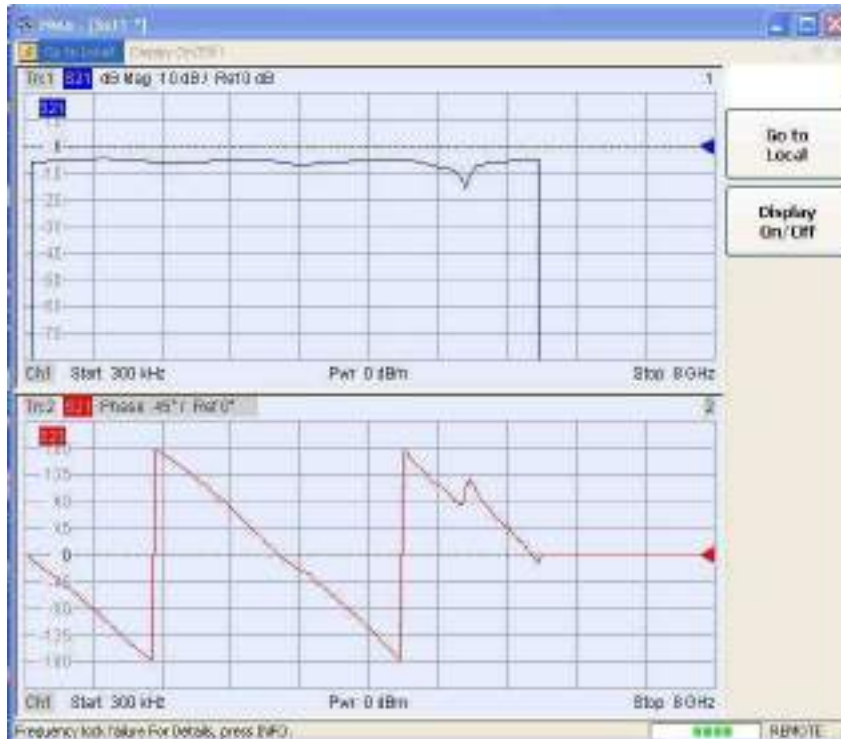

```
//
//
// 3. One channel, four traces, four diagram areas
// Reset the instrument, add diagram areas no. 2, 3, 4.
*RST; :DISPlay:WINDow2:STATe ON
DISPlay:WINDow3:STATe ON
DISPlay:WINDow4:STATe ON
//
// Assign the reflection parameter S11 to the default trace.
:CALCulate1:PARAmeter:MEASure 'Trc1', 'S11'
//
// Assign the remaining S-parameters to new traces Trc2, Trc3, Tr4;
// select the Smith chart format for the reflection parameters.
CALCulate1:FORMat SMITH // Smith chart for the active trace Trc1
CALCulate1:PARAmeter:SDEFine 'Trc2', 'S21'
CALCulate1:PARAmeter:SDEFine 'Trc3', 'S12'
CALCulate1:PARAmeter:SDEFine 'Trc4', 'S22'
```

CALCulate1:FORMat SMITH // Smith chart for the active trace Trc4, referenced by the channel number

//

// Display the new traces in diagram areas no. 2 to 4.

DISPlay:WINDow2:TRACe2:FEED 'Trc2'

DISPlay:WINDow3:TRACe3:FEED 'Trc3'


DISPlay:WINDow4:TRACe4:FEED 'Trc4'

//

// ▶ **Check the result on the local screen**

// Go to local

SYSTem:DISPlay:UPDate ONCE

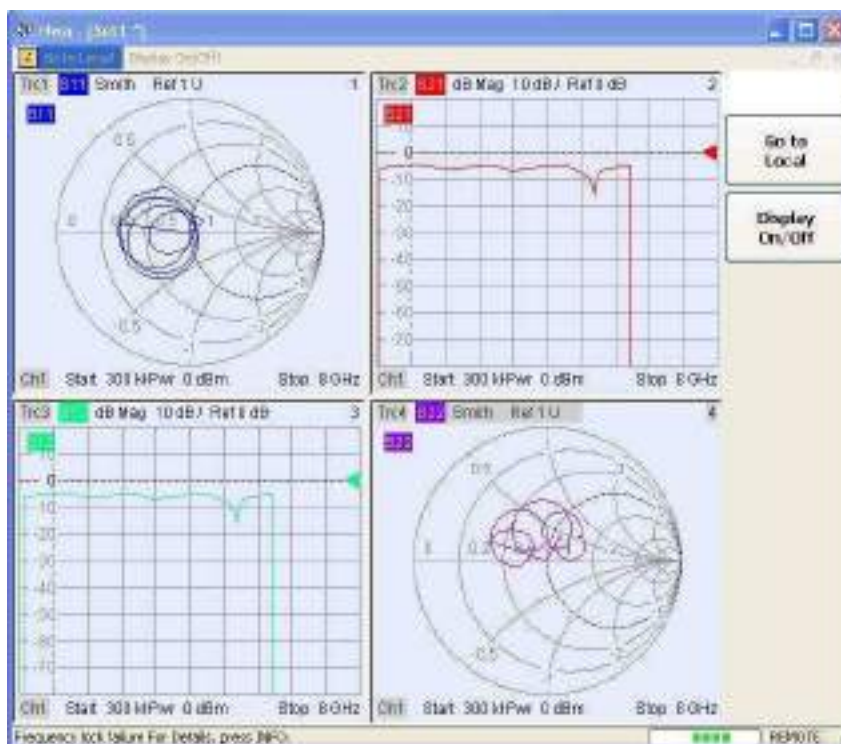


//

// ▶ **Check the result in the trace manager**


// The trace manager gives an overview of the current channel/trace configuration

DISPlay:MENU:KEY:EXECute 'Trace Manager'

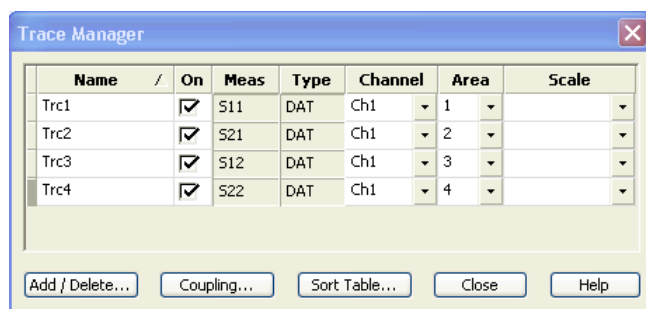

Several Traces with Different Channel Settings...

Programming task: Create three channels with 3, 1 and 2 traces, respectively, and display the traces in two diagram areas.

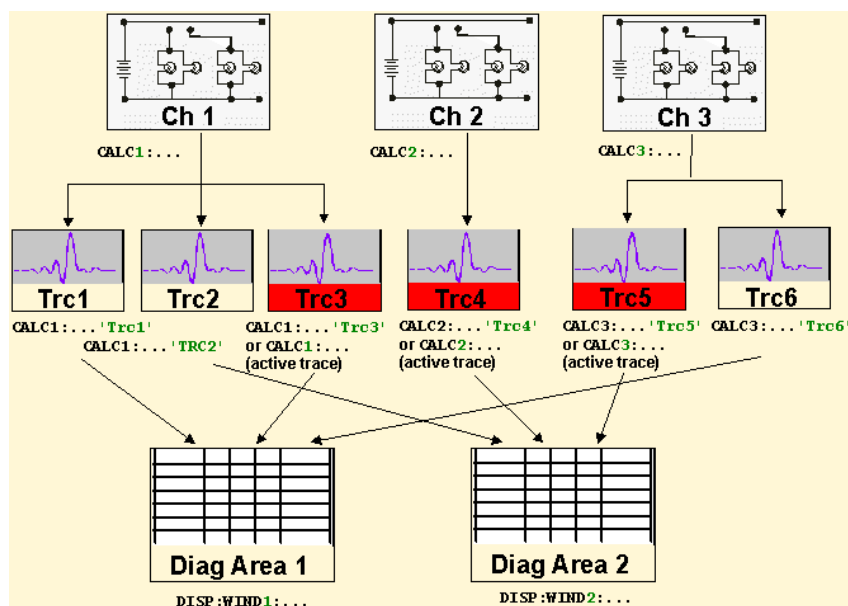

Important remote control features for this program example


The following command sequence illustrates the structure of the remote commands discussed in section [Basic Remote Control Concepts](#). In particular it shows that:

- Channels are always referenced by a channel suffix.
- Traces are referenced by trace names. The active trace of a channel is often referenced by the channel suffix.
- Diagram areas are referenced by a window suffix <Wnd>. An additional suffix <WndTr> in the `DISPlay:WINDow<Wnd>:TRACe<WndTr>...` commands numbers the different traces in a diagram area.
- The analyzer provides several commands allowing a smooth transition between remote and manual control.


//

// 1. Create all channels and traces

```
// Reset the instrument, creating the default trace Trc1 in channel 1.
// The default measured quantity is the forward transmission S-parameter S21.
// The default format is dB Mag.
*RST
//
// Create two more traces in channel 1, assigning a trace name and a measured quantity
// to each of them. Choose descriptive trace names (instead of the short default names used above).
CALCulate1:PARAMeter:SDEFine 'Impedance_trace', 'Z-S21' // the trace becomes the active trace for
channel 1 but is not displayed
CALCulate1:PARAMeter:SDEFine 'Admittance_trace', 'Y-S21' // the trace becomes the active trace for
channel 1
//
// Create channel 2 with one new trace, channel 3 with two new traces.
CALCulate2:PARAMeter:SDEFine 'Ratio_trace', 'B1/B2'
CALCulate3:PARAMeter:SDEFine 'Z_trace', 'Z21'
CALCulate3:PARAMeter:SDEFine 'Y_trace', 'Y21'
CALCulate3:PARAMeter:SElect 'Z_trace' // the trace created previously becomes the active trace for
channel 3
// So far, only the default trace is displayed.
//
// ►Check the result in the trace manager
// The trace manager gives an overview of the current channel/trace configuration
DISPlay:MENU:KEY:EXECute 'Trace Manager'
```

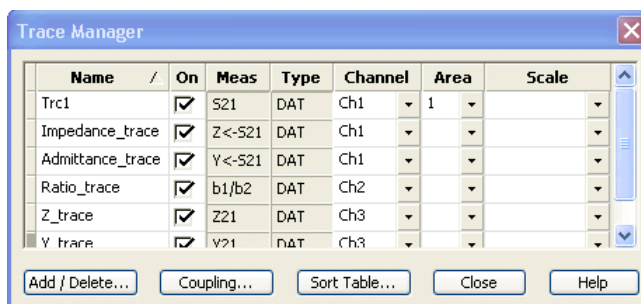

```
//
// ►Check the result on the local screen
// Go to local
SYSTem:DISPlay:UPDate ONCE
```

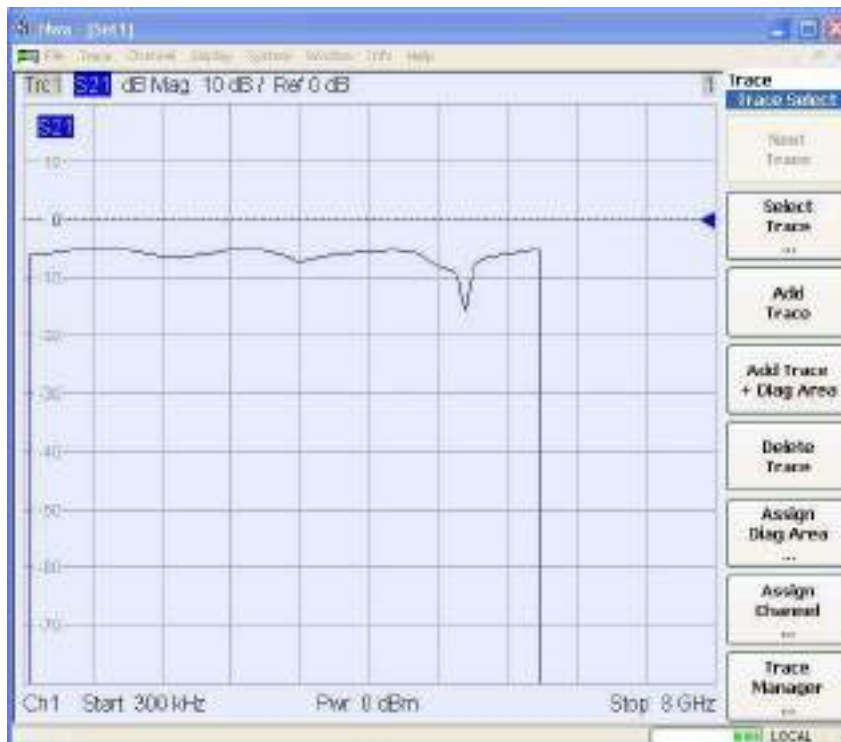

```
//
```

```
//
```

// 2. Create second diagram area and display traces

```
DISPlay:WINDow2:STATe ON
```

```
DISPlay:WINDow1:TRACe2:FEED 'Admittance_trace'
```

```
DISPlay:WINDow1:TRACe3:FEED 'Y_trace'
```

```
DISPlay:WINDow2:TRACe1:FEED 'Impedance_trace'
```

```
DISPlay:WINDow2:TRACe2:FEED 'Ratio_trace'
```


```
DISPlay:WINDow2:TRACe3:FEED 'Z_trace'
```

```
//
```

// ▶ Check the result on the local screen

```
// Go to local
```

```
SYSTem:DISPlay:UPDate ONCE
```
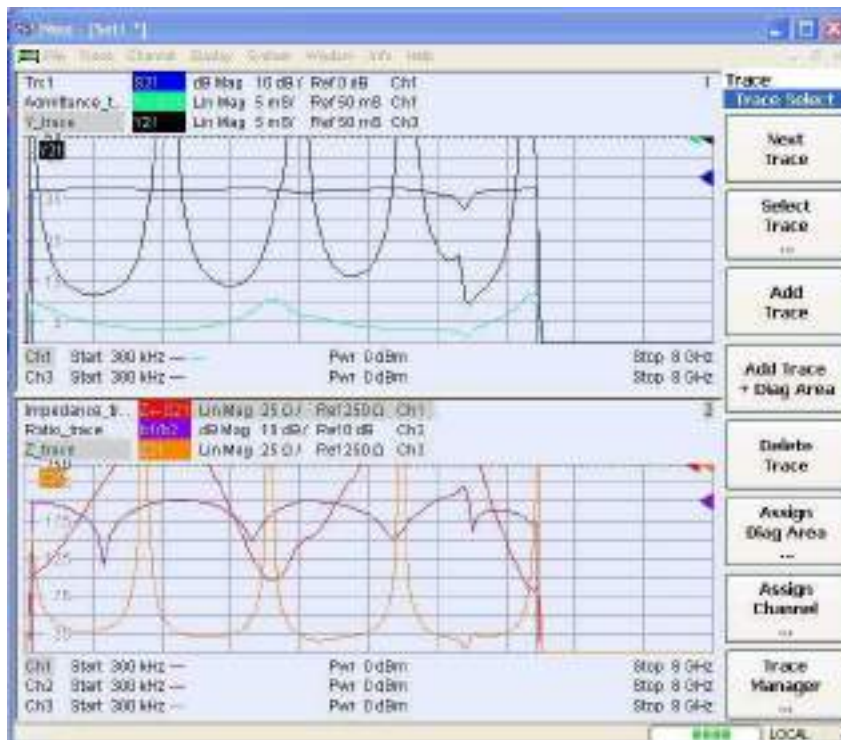
```
//
```

```
//
```

// 3. Check and modify your configuration

```
// Query the traces in channel 1.
```

```
CALCulate1:PARAMeter:CATalog?
```

```
// The response is 'Trc1,S21,Impedance_trace,Z-S21,Admittance_trace,Y-S21'
```

```
//
```

```
// Query the reference level for the 'Z_trace'.
```

```
// The trace is referenced by its number in diagram area no. 2.
```

```
DISPlay:WINDow2:TRACe3:Y:RLEVel?
```

```
//
```


```
// Change the display format for the 'Z_trace'. The trace is the active trace in channel 3,
```

```
// so it is referenced by the channel suffix 3.
```

```
CALCulate3:FORMat PHASe
```

Markers and Limit Lines...

Programming task: Display two traces in a single diagram area, use markers to read results, and perform a limit check.

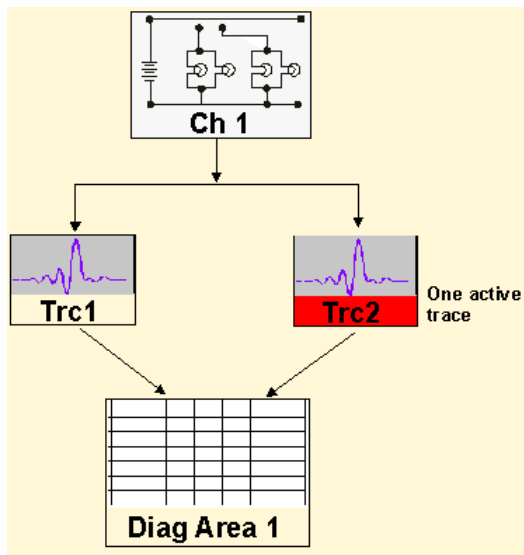

Important remote control features for this program example

The following command sequence illustrates the structure of the remote commands discussed in section [Basic Remote Control Concepts](#). In particular it shows that:

- Traces are referenced by trace names. The active trace of a channel is often referenced by the channel suffix. This simplifies the program syntax, e.g. in the commands for marker settings and for the limit check.
- Diagram areas are referenced by a window suffix <Wnd>. An additional suffix <WndTr> in the `DISPlay:WINDow<Wnd>:TRACe<WndTr>...` commands numbers the different traces in a diagram area.
- The analyzer provides several commands allowing a smooth transition between remote and manual control.

//

//

// 1. Create one channel, two traces, one diagram area

// Reset the instrument, creating the default trace Trc1 in channel 1.

// The default measured quantity is the forward transmission S-parameter S21.

// The default format is dB Mag.

*RST

//

// Create a second trace in channel 1, assign the format *Phase*,
// and display the new trace in the same diagram area.

CALCulate1:PARAMeter:SDEFine 'Trc2', 'S21' // the trace becomes the active trace but is not displayed

CALCulate1:FORMat PHASe // the trace is referenced by the channel suffix 1


DISPlay:WINDow1:TRACe2:FEED 'Trc2' // display the second trace, numbering it the second trace in diagram area no. 1

//

// ▶ Check the result on the local screen

// Go to local

SYSTem:DISPlay:UPDate ONCE

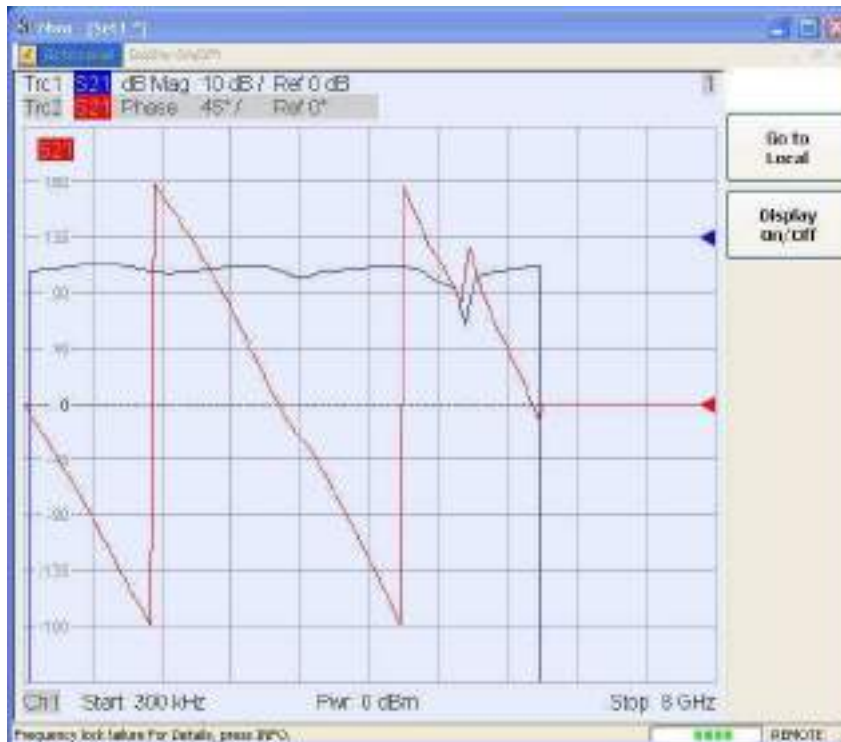

//

//

// 2. Marker settings

// Adjust the sweep range to consider an interesting segment of the trace and re-scale the diagram.

SENSe1:FREQuency:START 4.5 GHz; STOP 5.5 GHz

DISPlay:WINDow1:TRACe1:Y:SCALE:AUTO ONCE // in the autoscale command the trace is referenced by its number in the diagram

//

// Select trace Trc1 as the active trace of the channel, define a reference marker and a delta marker.

// In the marker commands the active trace is referenced by the channel suffix.

CALCulate1:PARAMeter:SELEct 'Trc1'

CALCulate1:MARKer1:STATe ON // the marker is set to the center of the sweep range

CALCulate1:MARKer1:DELTA:STATe ON // this command also creates the reference marker

CALCulate1:MARKer1:REFerence:X 4.5 GHz // set the reference marker to the beginning of the sweep range

//

// Use the delta marker to search for the minimum of the trace and query the result.

CALCulate1:MARKer1:FUNCTION:EXECute MIN; RES? // the query returns the stimulus and the response


value at the marker position

//

// ▶ **Check the result on the local screen**

// Go to local

SYSTem:DISPlay:UPDate ONCE

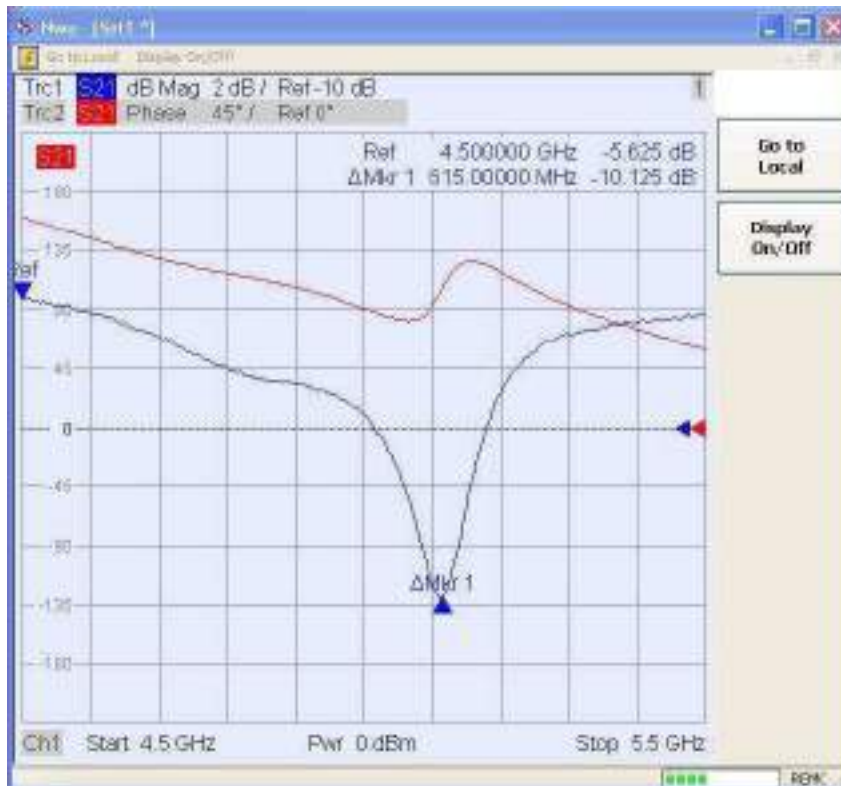

//

TIP Use the `CALCulate<Chn>:DATA...` commands to retrieve the complete trace; see [Retrieving Measurement Results](#).

//

//

// 2. Limit lines and limit check

// Remove all markers and define a limit line for the active trace.

`CALCulate1:MARKer1:AOff`

`CALCulate1:LIMit:DATA 1, 4500000000, 5500000000, -5, -5` // define an upper limit line across the entire sweep range

`CALCulate1:LIMit:DATA 2, 4500000000, 5000000000, -10, -15`

`CALCulate1:LIMit:DATA 2, 5000000000, 5500000000, -15, -10` // define two segments for the lower limit line

//

// Display the limit line and perform the limit check.

CALCulate1:LIMit:DISPlay:STATe ON


CALCulate1:LIMit:STATe ON; FAIL? // if the trace is failed; the response is 1.

//

// ▶ **Check the result on the local screen**

// Go to local

SYSTem:DISPlay:UPDate ONCE

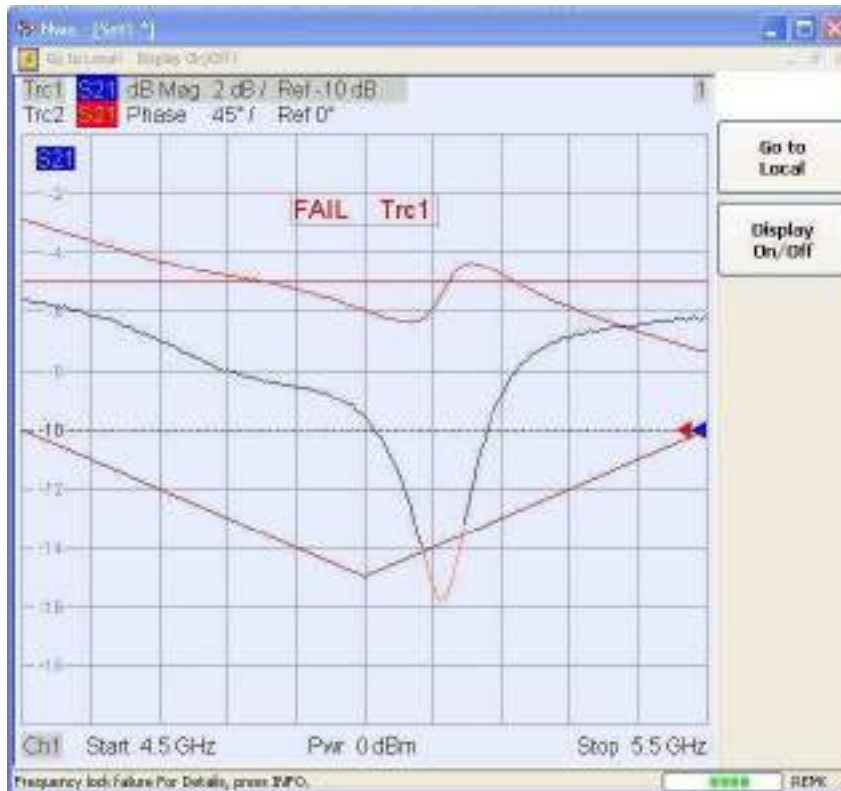

//

// ▶ **Check the result in the Define Limit Line dialog**

// The *Define Limit Line* dialog gives an overview of the limit line segments of the active trace.

DISPlay:MENU:KEY:EXECute 'Define Limit Line'

#	Type	Start Stimulus	Stop Stimulus	Start Response	Stop Response
1	Upper	4.5 GHz	5.5 GHz	-5 dB	-5 dB
2	Lower	4.5 GHz	5 GHz	-10 dB	-15 dB
3	Lower	5 GHz	5.5 GHz	-15 dB	-10 dB


Buttons: Recall Limit Line..., Save Limit Line..., Import Trace..., Import File..., Add Segment, Delete Segment, Del All Segments, Close, Help

Condensed Programming Examples

This section contains short program examples for select issues. The comments have been commented in concise style; for more detailed information on the commands refer to the [SCPI Reference](#) chapter.

If the example you are looking for is not in this section, we suggest you to refer to the short command sequences in the reference chapter. Proceed as follows:

1. Find your subject in the help system, preferably using context-sensitivity (of the help system on your network analyzer) or the index:

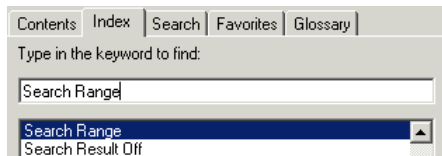

2. Activate the link to the command description:

Remote control: [CALCulate<Chn>:MARKer<Mk>:FUNCTION:DOMain:USER](#)
 [CALCulate<Chn>:MARKer<Mk>:FUNCTION:DOMain:USER:START](#)
 [CALCulate<Chn>:MARKer<Mk>:FUNCTION:DOMain:USER:STOP](#)

3. A short example appears at the end of each command description:

Example:

```
CALC1:MARK1:FUNC:DOM:USER 2
Select the search range no. 2, assigned to marker no. 1 and trace no. 1.

CALC:MARK:FUNC:DOM:USER:START 1GHz
Set the start frequency of the search range to 1 GHz.

CALC:MARK:FUNC:DOM:USER:STOP 1.2GHz
Set the stop frequency of the search range to 1.2 GHz.
```



The command [SYSTEM:DISPLAY:UPDATE ON](#) precedes some of the command scripts so that you can watch the progress of the script on the screen. For maximum performance, simply omit this command.

Assigning Channels, Traces, and Diagram Areas

The following example is a short version of section [Creating Traces and Channels](#).

```
// Reset the analyzer
*RST
:SYSTEM:DISPLAY:UPDATE ON

// Create a new trace for S21 with the name TrcDisp
:CALCULATE1:PARAMETER:SDEFINE "TrcDisp","S21"
// Display the trace in the display area 1
:DISPLAY:WINDOW1:TRACE9:FEED 'TrcDisp'
:DISPLAY:WINDOW1:TRACE9:DELETE
```

```
// List the traces, assigned to a certain Channel
// format "<trace name>,<meas param>[,<trace name>,<meas param>...]"
:CALCULATE1:PARAMETER:CATALOG?

// Channel 4 does not exist, a new channel and trace is created
:CALCULATE4:PARAMETER:SDEFINE "Ch4Trc2","S22"
:CALCULATE4:PARAMETER:SDEFINE "Ch4Trc3","S33"
:CALCULATE4:PARAMETER:CATALOG?

// Select active traces for channel 4
:CALCULATE4:PARAMETER:SELECT "Ch4Trc2"
:CALCULATE4:PARAMETER:SELECT?
//:CALCULATE4:FORMAT POLAR
:CALCULATE4:PARAMETER:SELECT "Ch4Trc3"
//:CALCULATE4:FORMAT DB_LIN
:CALCULATE4:PARAMETER:SELECT?
:CALCULATE4:PARAMETER:SELECT "Ch4Trc2"
:CALCULATE4:FORMAT?
:CALCULATE4:PARAMETER:SELECT "Ch4Trc3"
:CALCULATE4:FORMAT?

// Create trace
:CALCULATE1:PARAMETER:SDEFINE "Trc2","S21"
:CALCULATE1:PARAMETER:SDEFINE "Trc3","S31"
:CALCULATE1:PARAMETER:CATALOG?

// Delete trace
:CALCULATE1:PARAMETER:DELETE "Trc2"
:CALCULATE1:PARAMETER:CATALOG?

// Assign a trace to a window = diagram, diagram 1 always exists
:DISPLAY:WINDOW1:TRACE2:FEED 'TrcDisp'

// Create diagram 2
:DISPLAY:WINDOW2:STATE?
:DISPLAY:WINDOW2:STATE ON
:DISPLAY:WINDOW2:STATE?
:DISPLAY:WINDOW2:TRACE6:FEED 'Ch4Trc2'
:DISPLAY:WINDOW2:TRACE2:FEED 'Trc1'
:DISPLAY:WINDOW2:TRACE3:FEED 'Ch4Trc3'
```

// **Create traces:** trace names are not case sensitive

```
:CALCULATE4:PARAMETER:SELECT "Ch4Trc2"
:CALCULATE4:PARAMETER:SELECT?
:CALCULATE4:PARAMETER:SELECT "CH4TRC3"
:CALCULATE4:PARAMETER:SELECT?
:CALCULATE4:PARAMETER:SELECT "ch4trc2"
:CALCULATE4:PARAMETER:SELECT?
```

Exporting S-Parameters

The calibration defines which S-Parameters are allowed to be exported to a Touchstone file. In the following example a default (TOSM) calibration is created to make all S-Parameters available.

// **Reset** the analyzer

```
*RST
:SYSTEM:DISPLAY:UPDATE ON
```

// **Select current directory, create default calibration**

```
:MMEMory:CDIRectory 'C:\Program Files\Rohde&Schwarz\Network Analyzer\Traces'
```

```
:SENSe1:CORRection:COLLect:METHod:DEFine 'Test', TOSM, 1, 2, 3, 4
```

```
:SENSe1:CORRection:COLLect:SAVE:SElected:DEFault
```

// **Initiate a complete sweep**

```
:INITiate1:CONTinuous OFF; :INITiate:IMMediate;*WAI
:MMEMory:STORe:TRACe:PORTs 1, 'ParserTouchstonePorts.s1p', COMPLex, 2
:MMEMory:STORe:TRACe:PORTs 1, 'ParserTouchstonePorts.s2p', COMPLex, 3, 2
:MMEMory:STORe:TRACe:PORTs 1, 'ParserTouchstonePorts.s4p', COMPLex, 1, 4, 3, 2
:MMEMory:CDIRectory DEFault
```

Path Independent RC Programs

The default directory for R&S ZVA user data is C:\Program Files\Rohde&Schwarz\Network Analyzer. Other instruments may use different default directories. To make remote control programs compatible, it is recommended to define all paths relative to the default directory, to be set via `MMEMory:CDIRectory DEFault`.

// **Select default directory, change to sub-directory (relative to default directory)**

```
MMEMory:CDIRectory DEFault
MMEMory:CDIRectory 'Traces'
```

```
MMEMory:STORe:TRACe 'Trc1', 'S21.s1p'
```

```
MMEMory:LOAD:TRACe 'Trc1', 'S21.s1p'
```

// Alternative, more compact definition

```
MMEMory:CDIRectory DEFault
MMEMory:STORe:TRACe 'Trc1', 'Traces\S21.s1p'
```

You may also read the default path (`MMEMory:CDIRectory?`) and use the external RC program to build the complete paths.

Noise Figure Measurement

The following example shows how to calibrate and perform a noise figure measurement.

// Reset the analyzer

```
*RST
:SYSTEM:DISPLAY:UPDATE ON
```

// Reduce number of sweep points for slow measurement

```
:SENSe1:SWEEp:POINts 11
```

// Configure measurement (dialog "Define Noise Figure Measurement")

```
:SENSe1:SWEEp:DETEctor:TIME 40 ms
:SENSe1:NFIGure:SEQuential OFF // simultaneous
:SENSe1:NFIGure:ISNoise OFF // Do not assume Ideal T0 Source Noise
:SENSe1:NFIGure:RFICorr OFF // Do not apply RF image correction
:SENSe1:NFIGure:NDUT OFF // Assume normal (no narrowband) DUT
```

// Configure meas. and noise figure calibration (dialog "Noise Figure Calibration")

```
:SENSe1:BANDwidth:RESolution 5 MHz
:SENSe1:BANDwidth:RESolution:SElect HIGH
:SENSe1:POWer:IFGain2:MEASure LNOise
//:SENSe1:POWer:IFGain1:REFerence LDISTortion
```

// Perform noise figure measurement (uncalibrated)

```
:SENSe1:CORRection:NFIGure? %0
:CALCulate1:PARAmeter:MEASure 'Trc1', 'NF21'
:CALCulate1:PARAmeter:MEASure? 'Trc1' %'NF21'
```

// Noise figure calibration without external attenuator

```
:SENSe1:CORRection:COLLect:NFIGure:STARt 2, 1, OFF, 10, 20
:SENSe1:CORRection:COLLect:NFIGure:ACQuire RECeiver
:SENSe1:CORRection:COLLect:NFIGure SOURCE
:SENSe1:CORRection:COLLect:NFIGure ATTenuator
:SENSe1:CORRection:COLLect:NFIGure:SAVE
```


// Note: The previous SAVE command switches the correction ON !

```
:SENSe1:CORRection:NFIGure? %1
:SENSe1:CORRection:NFIGure OFF
:SENSe1:CORRection:NFIGure ON
:SENSe1:CORRection:NState? %'NCa?'
```

// Noise figure calibration with external attenuator

```
:SENSe1:CORRection:COLlect:NFIGure:STARt 1, 2, ON, 30, 30
:SENSe1:CORRection:COLlect:NFIGure:ACQuire RECeiver
:SENSe1:CORRection:COLlect:NFIGure SOURCE
:SENSe1:CORRection:COLlect:NFIGure ATTenuator
:SENSe1:CORRection:COLlect:NFIGure:SAVE
```

// Noise figure without ext. attenuator --> The third (unnecessary) cal. step fails

```
:SENSe1:CORRection:COLlect:NFIGure:STARt 1, 2, OFF, 30, 30
:SENSe1:CORRection:COLlect:NFIGure:ACQuire RECeiver
:SENSe1:CORRection:COLlect:NFIGure SOURCE
:SENSe1:CORRection:COLlect:NFIGure ATTenuator |-200
:SENSe1:CORRection:COLlect:NFIGure:SAVE
```

// If a ...:STARt command sequence is not terminated by a ...:SAVE,

// an ...:END command has to be used (to enable measurement sweeps)

```
:SENSe1:CORRection:COLlect:NFIGure:STARt 1, 2, OFF, 0, 0
:SENSe1:CORRection:COLlect:NFIGure:ACQuire RECeiver
```

// calibration has not been finished !!!

```
:SENSe:CORRection:COLlect:NFIGure:END
```

// Adjust channel settings to previous noise figure calibration

```
:CALCulate1:PARAmeter:NFIGure:CSEttings 'Trc1'
:CALCulate1:PARAmeter:MEASure 'Trc1', 'NF21'
```

Memory Traces

The following example shows how to work with memory traces.

// Reset the analyzer

```
*RST
:SYSTEM:DISPLAY:UPDATE ON
```

```
:SENSE1:SWEEP:POINTS 20
```

```

// Create memory trace of the "active" trace (active for the parser !)
// the name of the created memory trace is "Mem2[Trc1]"
:TRACE:COPY MDATA2,CH1DATA
:SENSE1:FUNCTION:ON 'XFREQUENCY:POWER:S11'
:CALCULATE1:PARAMETER:CATALOG?

// Assign the memory trace to a window = diagram, diagram 1 always exists
:DISPLAY:WINDOW1:TRACE2:FEED 'Mem2[Trc1]'

// Create further memory traces and assign them to a window
:TRACE:COPY 'Mem3x[Trc1]',CH1DATA           // mixed parameters String, Char
:DISPLAY:WINDOW1:TRACE3:FEED 'Mem3x[Trc1]'
:TRACE:COPY MDATA4,CH1DATA
:DISPLAY:WINDOW1:TRACE4:FEED 'Mem4[Trc1]'

// Create new normal trace on channel 1, assign it to a window
:CALCULATE1:PARAMETER:SDEFINE "Trc2","S22"
:DISPLAY:WINDOW1:TRACE5:FEED 'Trc2'
:CALCULATE1:PARAMETER:SELECT 'Trc2'  // now active for channel 1
:CALCULATE1:PARAMETER:SELECT?
:CALCULATE1:PARAMETER:CATALOG?

// Create memory trace for 'Trc2',
// the memory trace can be assigned to the diagram of the mother trace only (diagram 1)
:TRACE:COPY MDATA6,CH1DATA
:DISPLAY:WINDOW1:TRACE6:FEED 'Mem6[Trc2]'

// Create new diagram 2 and new channel and trace
:DISPLAY:WINDOW2:STATE ON
:CALCULATE2:PARAMETER:SDEFINE "Ch2Trc1","S22"
:CALCULATE2:PARAMETER:SELECT 'Ch2Trc1'  // now active for channel 2
:SENSE1:SWEEP:POINTS 21
:TRACE:COPY MDATA1,CH2DATA
:DISPLAY:WINDOW2:TRACE7:FEED 'Mem1[Ch2Trc1]'
:TRACE:DATA:STIMULUS? CH1DATA
:TRACE:DATA:RESPONSE? MDATA6

// Create new channel 3 and new trace
:CALCULATE3:PARAMETER:SDEFINE "Ch3Trc1","S21"
:CALCULATE3:PARAMETER:SELECT 'Ch3Trc1'  // now active for channel 3
:CALCULATE3:PARAMETER:SELECT? '%Ch3Trc1'

```

```

:SENSE1:SWEEP:POINTS 22
:TRACE:COPY MDATA8,CH3DATA
:TRACE:COPY MDATA7,CH3DATA
:DISPLAY:WINDOW2:TRACE1:FEED 'Mem8[Ch3Trc1]'
:TRACE:DATA:RESPONSE? MDATA7 // assigned to no diagram
//
// Copy with arbitrary trace names, no blanks in trace names !!!
:TRACE:COPY 'Trace_Name','Ch3Trc1'
:DISPLAY:WINDOW2:TRACE2:FEED 'Trace_Name'
:CALCULATE3:PARAMETER:SELECT 'Trace_Name'
:CALCULATE3:PARAMETER:SELECT?
:TRACE:COPY 'XYZ','Ch2Trc1'
:DISPLAY:WINDOW2:TRACE3:FEED 'XYZ'
:CALCULATE2:PARAMETER:SELECT 'XYZ'
:CALCULATE2:PARAMETER:SELECT?
:TRACE:COPY MDATA4 ,'Ch3Trc1' // mixed parameters Char, String
:DISPLAY:WINDOW2:TRACE4:FEED 'Mem4[Ch3Trc1]'

// Copy to existing memory traces = update trace data
:TRACE:COPY MDATA6,CH1DATA
:TRACE:COPY 'XYZ','Ch2Trc1'
:CALCULATE1:PARAMETER:CATALOG?
:CALCULATE2:PARAMETER:CATALOG?
:CALCULATE3:PARAMETER:CATALOG?

```

Using Markers

The following example shows you how to define markers and use them to read trace values.

// **Reset** the analyzer

```
*RST
```

```
:SYSTEM:DISPLAY:UPDATE ON
```

// Initiate a **single sweep**

```
:INITiate1:CONTinuous OFF
```

```
:INITiate1:IMMediate;*WAI
```

// The following marker commands have the channel no. as a numeric suffix.

// The parameter belongs to a trace, the assignment channel -> trace

// is done via a "active" trace for each channel

```
:CALCULATE1:PARAMETER:SELECT 'Trc1'
```

// Marker ON / OFF

```
:CALCULATE1:MARKER1 ON
:CALCULATE1:MARKER1:STATE?
```

```
//
```

// Coupled Markers

```
// All markers belonging to channels with the same sweep type
// (FREQUENCY, TIME, POWER, CW FREQUENCY) are coupled/decoupled
:CALCULATE1:MARKER:COUPLED ON
```

// Marker Continuous / Discrete

```
:CALCULATE1:MARKER1:MODE CONTINUOUS
```

```
//
```

// Normal / Delta / Reference / Fixed Marker

```
:CALCULATE1:MARKER:AOFF          // all markers off
:CALCULATE1:MARKER1 ON
:CALCULATE1:MARKER1:X 1GHZ
:CALCULATE1:MARKER2 ON
:CALCULATE1:MARKER2:X 2GHZ
:CALCULATE1:MARKER3 ON
:CALCULATE1:MARKER3:X 3GHZ
:CALCULATE1:MARKER4:DELTA:STATE ON
:CALCULATE1:MARKER:REFERENCE ON
:CALCULATE1:MARKER:REFERENCE:X 5GHZ
:CALCULATE1:MARKER1:TYPE FIXED
```

// Query marker response values

```
:CALCULATE1:FORMAT MLINEAR
:CALCULATE1:MARKER1 ON
:CALCULATE1:MARKER1:X DEF
:CALCULATE1:MARKER1:FORMAT MLINEAR      // DataBase EMarkerFormat::LIN_MAG
:CALCULATE1:MARKER1:Y?
:CALCULATE1:MARKER1:FORMAT MLOGARITHMIC // ..... DB_MAG
:CALCULATE1:MARKER1:Y?
```

Marker Search Functions

The following example shows how to search for particular measurement points using markers.

```
// Reset the analyzer
```

```
*RST
```

```
:DISPlay:WINDow1:TITLe:DATA 'Max Hold Function Emulation'
```

```

// Define marker and stimulus range
:CALCULATE1:MARKER1 ON
:SENSE1:FREQUENCY:START 1GHZ
:SENSE1:FREQUENCY:STOP 2GHZ
// Do the marker search in the format DB Magnitude
:CALCULATE1:FORMAT MLOGARITHMIC
//
// Define marker search ranges (stimulus range of the marker search)
// Range 0 is always the stimulus range of the trace (can't be changed)
:CALCULATE1:MARKER1:FUNCTION:DOMAIN:USER 0
:CALCulate1:MARKer1:FUNctio:n:DOMai:n:USER:START?
:CALCulate1:MARKer1:FUNctio:n:DOMai:n:USER:STOP?

// Range 1 (within the stimulus range)
:CALCULATE1:MARKER1:FUNCTION:DOMAIN:USER 1
:CALCulate1:MARKer1:FUNctio:n:DOMai:n:USER:START 1.2GHZ
:CALCulate1:MARKer1:FUNctio:n:DOMai:n:USER:STOP 1.8GHZ
// Range 2 (includes the stimulus range)
:CALCULATE1:MARKER1:FUNCTION:DOMAIN:USER 2
:CALCulate1:MARKer1:FUNctio:n:DOMai:n:USER:START 0.8GHZ
:CALCulate1:MARKer1:FUNctio:n:DOMai:n:USER:STOP 2.2GHZ
// Use range 0 (stimulus range of the trace)
:CALCULATE1:MARKER1:FUNCTION:DOMAIN:USER 0
//
// Select linear magnitude scale for diagram
:CALCULATE1:FORMAT MLINEAR

// Search for global minimum and maximum (MIN, MAX)
// (initial marker value may be inside or outside the marker search range)
:CALCULATE1:MARKER1:X 1.5GHZ
:CALCULATE1:MARKER:MIN
:CALCULATE1:MARKER1:X?

:CALCULATE1:MARKER1:X 1.5GHZ
:CALCULATE1:MARKER:MAX
:CALCULATE1:MARKER1:X?
//
// Minimum peak search functions
:CALCULATE1:MARKER1:FUNCTION:SELECT MINIMUM
:CALCULATE1:MARKER1:FUNCTION:SELECT?

```

```
// NEXT PEAK
:CALCULATE1:MARKER1:X 1.5GHZ
:CALCULATE1:MARKER:SEARCH:NEXT
:CALCULATE1:MARKER1:X?
// PEAK RIGHT
:CALCULATE1:MARKER1:X 1.5GHZ
:CALCULATE1:MARKER:SEARCH:RIGHT
:CALCULATE1:MARKER1:X?
// PEAK LEFT
:CALCULATE1:MARKER1:X 1.5GHZ
:CALCULATE1:MARKER:SEARCH:LEFT
:CALCULATE1:MARKER1:X?
//
// Maximum peak search functions
:CALCULATE1:MARKER1:FUNCTION:SELECT MAXIMUM
// Proceed as for minimum search
```

Trace Mathematics

The following script contains examples for trace mathematics.

// **Reset** the analyzer

```
*RST
:SYSTEM:DISPLAY:UPDATE ON
```

// **Create memory trace** on active trace of channel 1,

// assign the memory trace to a diagram

```
:CALCULATE1:MATH:MEMORIZE
:DISPLAY:WINDOW1:TRACE2:FEED 'Mem2[Trc1]'
```

// **Define simple trace mathematics**

```
:CALCULATE1:MATH:FUNCTION ADD
:CALCULATE1:MATH:FUNCTION?
// Trace mathematics off
:CALCULATE1:MATH:FUNCTION NORMAL
:CALCULATE1:MATH:FUNCTION?
*RST
```

// **Create Trc2** in channel 1 and display it in diagram 1

```
:CALCULATE1:PARAMETER:SDEFINE "Trc2","S11"
:DISPLAY:WINDOW1:TRACE2:FEED 'Trc2'
```

// **Create diagram 2 and Trc3** in new channel

```
:DISPLAY:WINDOW2:STATE ON
:CALCULATE2:PARAMETER:SDEFINE "Trc3","S11"
:DISPLAY:WINDOW2:TRACE1:FEED 'Trc3'
```

// **Select active traces** for channels 1 and 2

```
:CALCULATE1:PARAMETER:SELECT "Trc1"
:CALCULATE2:PARAMETER:SELECT "Trc3"
```

// **Create memory trace** on Trc1 and assign it to a diagram, same for TRC3

```
:TRACE:COPY MDATA7,CH1DATA
:DISPLAY:WINDOW1:TRACE3:FEED 'Mem7[Trc1]'
:TRACE:COPY MDATA8,CH2DATA
:DISPLAY:WINDOW2:TRACE2:FEED 'Mem8[Trc3]'
```

// Examples for Trace Mathematics

// Special operands Data and Mem

```
:CALCULATE1:MATH:SDEFINE "Data * Mem"
:CALCULATE1:MATH:STATE ON
```

// Constants

```
:CALCULATE1:MATH:SDEFINE "Pi * e * j"
```

// Functions

```
:CALCULATE1:MATH:SDEFINE "linMag (1) + dBMag (2) + Arg (3) + Re (4) + Im (5j)"
:CALCULATE1:MATH:SDEFINE "log (2) * ln (3) * Min (1, 2) * Max (2, 3)"
:CALCULATE1:MATH:SDEFINE "StimVal + asin (sin (3)) + acos (cos (4)) + atan (tan (4))"
:CALCULATE1:MATH:SDEFINE "(Trc1 + 2) * 1.1"
:CALCULATE1:MATH:SDEFINE "(tRC1 + e) * Pi + STIMVAL - sin (1) + Min (TRC1, Trc1)"
```

// Imaginary unit j = sqrt (-1)

// j is no ordinary operand: 1j not 1 * j

```
:CALCULATE1:MATH:SDEFINE "(1 + 3 ^ (1 / 2) * 1j) / 2" // magnitude: 1, phase: 60 degree
:CALCULATE1:MATH:SDEFINE "sin (1) + ACOS (0.5)"
```

// 2 periods for sin (), ... when stop frequency 8 GHz = 8e9 Hz

```
:CALCULATE1:MATH:SDEFINE "sin (2 * 2 * Pi * StimVal / 8e9) "
:CALCULATE1:MATH:SDEFINE "cos (2 * 2 * Pi * StimVal / 8e9) "
:CALCULATE1:MATH:SDEFINE "tan (2 * 2 * Pi * StimVal / 8e9) "
:CALCULATE1:MATH:SDEFINE "Min (sin (6 * Pi * StimVal / 8e9), cos (6 * Pi * StimVal / 8e9))"
:CALCULATE1:MATH:SDEFINE "Max (sin (6 * Pi * StimVal / 8e9), cos (6 * Pi * StimVal / 8e9))"
```

```
:CALCULATE1:MATH:SDEFINE "Trc1 ^ 2"
:CALCULATE1:MATH:SDEFINE "Trc1 + Trc2 + Trc3"
:CALCULATE1:MATH:SDEFINE "(Trc1 + e) * Pi + Mem8[Trc3] + StimVal + Min (Trc1, Mem7[Trc1])"
:CALCULATE1:MATH:SDEFINE "tan (5 * 2 * Pi * StimVal / 8e9)"
```

Trace Statistics

The following script contains examples for trace statistics.

// **Reset** the analyzer

```
*RST
```

```
:SYSTEM:DISPLAY:UPDATE ON
```

// **Create new channel** and trace

```
:CALCULATE2:PARAMETER:SDEFINE 'Trc2', 'S11'
```

```
:CALCULATE2:PARAMETER:SELECT 'Trc2'
```

```
:DISPLAY:WINDOW2:STATE ON
```

```
:DISPLAY:WINDOW2:TRACE1:FEED 'Trc2'
```

```
:SENSE1:SWEEP:TIME:AUTO ON
```

```
:SENSE2:SWEEP:TIME:AUTO ON
```

// Search **full-span evaluation range**, display statistical results

```
:CALCulate1:STATistics:DOMain:USER 0
```

```
:CALCulate2:STATistics:DOMain:USER 0
```

```
:CALCULATE1:STATISTICS ON
```

```
:CALCULATE2:STATISTICS ON
```

// **Single sweep**, global scope

```
:INITIATE:CONTINUOUS OFF
```

```
:INITIATE:IMMEDIATE:SCOPE ALL
```

```
:SENSE:SWEEP:COUNT 4
```

```
:INITIATE:IMMEDIATE; *WAI
```

// Calculate **statistical results** (also possible if info field is switched off)

```
:CALCULATE1:STATISTICS:RESULT? MEAN
```

```
:CALCulate1:STATistics:RESult? ELENgth
```

```
:CALCULATE1:STATISTICS:RESULT? ALL
```

// **Modify evaluation range** (is automatically confined to sweep range)

```
:CALCulate1:STATistics:DOMain:USER 1
```

```
:CALCulate1:STATistics:DOMain:USER:START 0 HZ
```

```
:CALCulate1:STATistics:DOMain:USER:STOP 100 GHZ
```



```
:CALCULATE1:STATISTICS:RESULT? MEAN
```

```
:CALCULATE1:STATISTICS:RESULT? MAX
```

Bandfilter Search

The following example shows how to use markers for a bandpass or bandstop search.

// **Reset** the analyzer

```
*RST
```

```
:SYSTEM:DISPLAY:UPDATE ON
```

```
:SENSe1:FREQuency:STARt 1 GHZ
```

```
:SENSe1:FREQuency:STOP 6 GHZ
```

// **Bandpass search** ref. to max.

```
:CALCulate1:MARKer:FUNCTion:BWIDth:MODE BPASs
```

```
:CALCulate1:MARKer:FUNCTion:BWIDth:MODE? %BPAS
```

// Measure single sweep, wait until complete sweep is finished

```
:INITiate:CONTInuous OFF
```

```
:INITiate; *WAI;
```

```
:CALCulate1:MARKer:FUNCTion:EXECute BFILter
```

// All markers OFF

```
:CALCulate1:MARKer:AOFF
```

// **Bandpass search** ref. to marker

```
:CALCulate1:MARKer1:STATe ON
```

```
:CALCulate1:MARKer1:X 3.0 GHZ
```

```
:CALCulate1:MARKer:FUNCTion:BWIDth:MODE BPRMarker
```

```
:CALCulate1:MARKer:FUNCTion:BWIDth:MODE? %BPRM
```

```
:INITiate; *WAI;
```

```
:CALCulate1:MARKer:FUNCTion:EXECute BFILter
```

```
:CALCulate1:MARKer:AOFF
```

// **Bandstop search** ref. to max.

```
:CALCulate1:MARKer:FUNCTion:BWIDth:MODE BSTop
```

```
:CALCulate1:MARKer:FUNCTion:BWIDth:MODE? %BST
```

```
:INITiate; *WAI;
```

```
:CALCulate1:MARKer:FUNCTion:EXECute BFILter
```

```
:CALCulate1:MARKer:AOFF
```

```
// Bandstop search ref. to marker
:CALCulate1:MARKer1:STATe ON
:CALCulate1:MARKer1:X 1.7 GHz
:CALCulate1:MARKer:FUNCTion:BWIDth:MODE BsRMarker
:CALCulate1:MARKer:FUNCTion:BWIDth:MODE? %BsRM
:INITiate; *WAI;
:CALCulate1:MARKer:FUNCTion:EXECute BFILter
```

Single Sweep Mode

The commands `CALCulate<Ch>:DATA:NSweep...? SDAta, <Trace_Hist_Count>` retrieve the results of any sweep within a previously defined single sweep group. This means that, in single sweep mode, you can first measure a specified number of sweeps (`SENSe<Ch>:SWEep:COUNT <sweeps>`) and then read any of the data traces acquired.

This feature has no equivalent in manual control where always the last data trace is displayed.

```
// Reset the analyzer
```

```
*RST
:SYSTEM:DISPLAY:UPDATE ON
```

```
// Create a second and third channel with new diagram areas and traces.
```

```
:CALCULATE2:PARAMETER:SDEFINE "Trc2","S11"
:CALCULATE2:PARAMETER:SELECT "Trc2"
:DISPLAY:WINDOW2:STATE ON
:DISPLAY:WINDOW2:TRACE1:FEED 'Trc2'
```

```
:CALCULATE3:PARAMETER:SDEFINE "Trc3","S11"
:CALCULATE3:PARAMETER:SELECT "Trc3"
:DISPLAY:WINDOW3:STATE ON
:DISPLAY:WINDOW3:TRACE1:FEED 'Trc3'
```

```
// Select sweep time for the channels.
```

```
:SENSE1:SWEEP:TIME 1 S
:SENSE2:SWEEP:TIME 1 S
:SENSE3:SWEEP:TIME 1 S
```

```
// Enable single sweep mode for all channels so that sweep count settings are used
```

```
:INITIATE:CONTINUOUS OFF
```

```
// Select single sweep mode with channel-specific sweep count settings
```

```
// Set sweep counts and start measurement in all channels
```

```
:INITIATE:IMMEDIATE:SCOPE SINGLE
```

```
:SENSE1:SWEEP:COUNT 1
```

```
:SENSE2:SWEEP:COUNT 2
```

```
:SENSE3:SWEEP:COUNT 3
```

```
:INITIATE1:IMMEDIATE; *WAI
```

```
:INITIATE2:IMMEDIATE; *WAI
```

```
:INITIATE3:IMMEDIATE; *WAI
```

```
// Select single sweep mode with global sweep count settings
```

```
// Set global sweep count for all channels, start measurement in all channels
```

```
:INITIATE:IMMEDIATE:SCOPE ALL
```

```
:SENSE:SWEEP:COUNT 4
```

```
:INITIATE:IMMEDIATE; *WAI
```

Modeling a Max Hold Function

The following example shows you how to emulate a max hold function.

```
// Reset the analyzer
```

```
*RST
```

```
:DISPlay:WINDow1:TITLe:DATA 'Max Hold Function Emulation'
```

```
// Create a trace with the last extremum as memory trace.
```

```
:TRACe:COPIY 'LastExtr', 'Trc1'
```

```
// Display this last extremum trace.
```

```
// Because it's a memory trace it must be displayed in the same diagram as the mother trace.
```

```
:DISPlay:WINDow1:TRACe2:FEED 'LastExtr'
```

```
:CALCulate1:MATH:SDEFine 'Max (Data, Mem)'
```

```
:CALCulate1:MATH:STATe ON
```

```
// Single sweep mode
```

```
:INITIATE:CONTINUOUS OFF
```

```
// Do a single sweep and update trace with the current extremum.
```

```
// This is the last extremum for the next sweep
```

```
:INITIATE:IMMEDIATE; *WAI
```

```
:TRACe:COPIY:MATH 'LastExtr', 'Trc1'
```

```
// Loop over these 2 commands
:INITIATE:IMMEDIATE; *WAI
:TRACe:COPIY:MATH 'LastExtr', 'Trc1'
:INITIATE:IMMEDIATE; *WAI
:TRACe:COPIY:MATH 'LastExtr', 'Trc1'
// .....
// Continuous sweep mode
:INITIATE:CONTINUOUS ON
//
```

Retrieving the Results of Previous Sweeps

The commands `CALCulate<Ch>:DATA:NSweep...? SDATa, <Trace_Hist_Count>` retrieve the results of any sweep within a previously defined single sweep group. This means that, in single sweep mode, you can first measure a specified number of sweeps (`SENSe<Ch>:SWEep:COUNT <sweeps>`) and then read any of the data traces acquired.

This feature has no equivalent in manual control where always the last data trace is displayed.

```
// Reset the analyzer
*RST
:SYSTEM:DISPLAY:UPDATE ON

// Create a second channel with a second trace.
:CALCULATE2:PARAMETER:SDEFINE "Trc2","S11"
:CALCULATE2:PARAMETER:SELECT "Trc2"
:DISPLAY:WINDOW2:STATE ON
:DISPLAY:WINDOW2:TRACE1:FEED 'Trc2'

// Select active trace for the created channel 2. Adjust the number of sweep points.
:CALCULATE2:PARAMETER:SELECT "Trc2"
:SENSE1:SWEEP:POINTS 3
:SENSE2:SWEEP:POINTS 4

// Set sweep time and sweep count for the channels
// (3 traces per single sweep in channel 1, 4 traces in channel 2)
:SENSE1:SWEEP:TIME 1 S
:SENSE2:SWEEP:TIME 1 S
:SENSE1:SWEEP:COUNT 3
:SENSE2:SWEEP:COUNT 4

// State that INITIATE<Ch>:IMMEDIATE will start a single sweep for the
```

```
// referenced channel <Ch> only, not for all channels
:INITIATE:IMMEDIATE:SCOPE SINGLE
:INITIATE:CONTINUOUS OFF

// 1st Alternative: Reverse reading with command synchronization
// Select single sweep mode and measure a single sweep group for channels no. 1 and 2
:INITIATE:IMMEDIATE:SCOPE ALL
:INITIATE1:IMMEDIATE; *WAI
:INITIATE2:IMMEDIATE; *WAI

// Read trace data (without history, i.e. the last trace acquired in each channel)
:CALCULATE1:DATA? SDATA
:CALCULATE2:DATA? SDATA

// Read last and previous trace data in channel 1 and 2
:CALCULATE1:DATA:NSWEEP? SDATA, 1           // last trace data
:CALCULATE1:DATA:NSWEEP? SDATA, 3           // previous trace data
:CALCULATE2:DATA:NSWEEP? SDATA, 1           // last trace data
:CALCULATE2:DATA:NSWEEP? SDATA, 4           // previous trace data

// 2nd Alternative: Forward reading (no command synchronization necessary)
// Select single sweep mode and measure a single sweep group for channel no. 1
:INITIATE:IMMEDIATE:SCOPE SINGLE
:INITIATE1:IMMEDIATE

// Read the first and the following trace data in channel 1
if (CALCULATE1:DATA:NSWEEP:COUNT? > 2)
:CALCULATE1:DATA:NSWEEP:FIRST? SDATA, 1      // first trace data
:CALCULATE1:DATA:NSWEEP:FIRST? SDATA, 3      // third trace data
```

One and Two-Port Calibration

The following example calibrates one or two analyzer ports.

```
// Reset the analyzer
*RST
:SYSTEM:DISPLAY:UPDATE ON
//
// Set cal kit as active kit for N50
:SENSE:CORRECTION:CKIT:N50:SELECT 'ZV-Z121'
```

```
//
// Select connectors for the ports
:SENSE1:CORRECTION:COLLECT:CONNECTION1 N50MALE
:SENSE1:CORRECTION:COLLECT:CONNECTION2 N50MALE
//
//
// Full one port = OSM
// Select cal procedure
:SENSe1:CORRection:COLlect:METHod:DEFine 'Test SFK OSM 1', FOPORT, 1
//
// Measure Standards
:SENSe1:CORRection:COLlect:ACQuire:SElected OPEN, 1
:SENSe1:CORRection:COLlect:ACQuire:SElected SHORT, 1
:SENSe1:CORRection:COLlect:ACQuire:SElected MATCH, 1
//
// Apply cal, activate enhanced wave calibration and load match correction in addition
:SENSe1:CORRection:COLlect:SAVE:SElected
:SENSe1:CORRection:EWAVE:STATE ON
//
//
// 2 port TOSM
// Select cal procedure
:SENSe1:CORRection:COLlect:METHod:DEFine 'Test SFK TOSM 12', TOSM, 1, 2
//
// Measure Standards
:SENSe1:CORRection:COLlect:ACQuire:SElected THROUGH, 1, 2
:SENSe1:CORRection:COLlect:ACQuire:SElected OPEN, 1
:SENSe1:CORRection:COLlect:ACQuire:SElected SHORT, 1
:SENSe1:CORRection:COLlect:ACQuire:SElected MATCH, 1
:SENSe1:CORRection:COLlect:ACQuire:SElected OPEN, 2
:SENSe1:CORRection:COLlect:ACQuire:SElected SHORT, 2
:SENSe1:CORRection:COLlect:ACQuire:SElected MATCH, 2
//
// Apply calibration
:SENSe1:CORRection:COLlect:SAVE:SElected
//
// Save / load cal files
// Save calibration in calibration file pool in directory
```

```
// C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Data
// the file name in the commands must not contain the path !
:MMEMORY:STORE:CORRection 1, 'OSM1 TOSM12.cal'
//
// load cal file from calibration file pool
:MMEMORY:LOAD:CORRection 1, 'OSM1 TOSM12.cal'
```

Create Calibration Kit

The following example defines the properties of different calibration standards.

// **Reset** the analyzer

*RST

:SYSTEM:DISPLAY:UPDATE ON

////////////////////////////////////

//

// **Remarks:** if a cal kit name contains "Ohm", this "Ohm" (case insensitive) is replaced by the

// capital greek omega for the cal kit name used in the DataBase !!!

//

////////////////////////////////////

// One port standards

////////////////////////////////////

//

// All commands to set the parameters of a physical standard

// have the following first 4 parameters :

// standard label, serial number, min frequency, max frequency

//

// The one port standard REFLECT and the two port standard SYMMETRIC NETWORK

// have 2 possibilities for parameter 10:

// OPEN: parameters 6 ... 9 are polynomial coefficients of the capacitance

// SHORT: parameters 6 ... 9 are polynomial coefficients of the inductance

// **Define OPEN (female):** + length, loss, capacitance[4]

:SENSE:CORRECTION:CKIT:N50:FOPEN "Parser N50 Ohm","Ser 1-1",1.1MHZ,2.1MHZ,0.1m,11,12,13,14,15

// **Set active cal kit** for the connector N50. This active cal kit is used in the

```
// query commands for the standard data of the connector
// This active cal kit isn't changed in the command above to set the standard data.
// Therefore set the active cal kit for the current connector.
//
:SENSE:CORRECTION:CKIT:N50:SELECT "Parser N50 Ohm"
:SENSE:CORRECTION:CKIT:N50:SELECT?
// Now the query works
:SENSE:CORRECTION:CKIT:N50:FOPEN?

// Define SHORT (male): + length, loss, inductivity[4]
:SENSE:CORRECTION:CKIT:N50:MSHORT "Parser N50 Ohm","Ser 2-
2",1.2MHZ,2.2MHZ,0.2m,21,22,23,24,25
:SENSE:CORRECTION:CKIT:N50:MSHORT?

// Define REFLECT (female): + length, capacity[4] | inductivity[4], OPEN | SHORT
// See also two port standard SYMMETRIC NETWORK
// First option: REFLECT : + length, capacity[4], OPEN
:SENSE:CORRECTION:CKIT:N50:FREFLECT "Parser N50 Ohm","Ser 4-
4",1.4MHZ,2.4MHZ,0.4m,41,42,43,44,OPEN
:SENSE:CORRECTION:CKIT:N50:FREFLECT?
// Second option: REFLECT : + length, inductivity[4], SHORT
:SENSE:CORRECTION:CKIT:N50:MREFLECT "Parser N50 Ohm","Ser 5-
5",1.5MHZ,2.5MHZ,0.5m,51,52,53,54,SHORT
:SENSE:CORRECTION:CKIT:N50:MREFLECT?

// Define MATCH (male): + no further parameters
:SENSE:CORRECTION:CKIT:N50:MMTCH "Parser N50 Ohm","Ser 6-6",1.6MHZ,2.6MHZ
:SENSE:CORRECTION:CKIT:N50:MMTCH?

// Define SLIDING MATCH (female): + no further parameters
:SENSE:CORRECTION:CKIT:N50:FSMATCH "Parser N50 Ohm","Ser 7-7",1.7MHZ,2.7MHZ
:SENSE:CORRECTION:CKIT:N50:FSMATCH?
//
////////////////////////////////////
// Two port standards
////////////////////////////////////
//
// Define THROUGH (male/male): + length, loss
:SENSE:CORRECTION:CKIT:N50:MMTHROUGH "Parser N50 Ohm","Ser 8-8",1.8MHZ,2.8MHZ,0.8m,81
```



```

:SENSE:CORRECTION:CKIT:N50:MMTHROUGH?
//
// Define LINE1/2 = LINE : + length, loss
:SENSE:CORRECTION:CKIT:N50:FFLINE1 "Parser N50 Ohm","Ser 9-9",1.9MHZ,2.9MHZ,0.9m,91
:SENSE:CORRECTION:CKIT:N50:FFLINE1?
:SENSE:CORRECTION:CKIT:N50:MMLINE2 "Parser N50 Ohm","Ser 99-99",1.9MHZ,2.9MHZ,0.9m,92
:SENSE:CORRECTION:CKIT:N50:MMLINE2?
:SENSE:CORRECTION:CKIT:N50:MFLINE3 "Parser N50 Ohm","Ser 999-
999",1.9MHZ,2.9MHZ,0.9m,93
:SENSE:CORRECTION:CKIT:N50:MFLINE3?

// Define ATTENUATION: + no further parameters
:SENSE:CORRECTION:CKIT:N50:MFATTEN "Parser N50 Ohm","Ser 10-10",2.0MHZ,3.0MHZ
:SENSE:CORRECTION:CKIT:N50:MFATTEN?

// Define SYMMETRIC NETWORK: + length, capacity[4] | inductivity[4], OPEN SHORT
// See also one port standard REFLECT
// SYMMETRIC NETWORK : + length, capacity[4], OPEN
:SENSE:CORRECTION:CKIT:N50:MMSNETWORK "Parser N50 Ohm","Ser 11-
11",2.1MHZ,3.1MHZ,1.1m,111,112,113,114,OPEN
:SENSE:CORRECTION:CKIT:N50:MMSNETWORK?
// SYMMETRIC NETWORK : + length, inductivity[4], SHORT
:SENSE:CORRECTION:CKIT:N50:MFSNETWORK "Parser N50 Ohm","Ser 12-
12",2.2MHZ,3.2MHZ,1.2m,121,122,123,124,SHORT
:SENSE:CORRECTION:CKIT:N50:MFSNETWORK?

// Set cal kit label
:SENSe:CORRection:CKIT:LABel 'Parser N50 Ohm', 'Parser N 50'
:SENSe:CORRection:CKIT:LABel? 'Parser N50 Ohm' '%Parser N 50'

```

Perform Power Calibration

The following example performs a source power calibration at port 1 and a receiver power calibration at ports 2 and 4.

```

// Reset the analyzer
*RST
:SYSTEM:DISPLAY:UPDATE ON

// Delete external device tables
:SYSTem:COMMunicate:RDEvice:GENerator:DELeTe

```

```
:SYSTem:COMMunicate:RDEvice:PMETer:DELeTe
// Define external devices
:SYSTem:COMMunicate:RDEvice:PMETer1:DEFine 'Power Meter 1', 'NRVD', 'VXI-11', '127.0.0.0'

// Measure b2 instead of default parameter S21
:CALCulate1:PARAmeter:MEASure 'Trc1', 'b2'
// Create a new trace Trc2 with the b4 wave and display it
:CALCulate1:PARAmeter:SDEFine 'Trc2', 'B4'
:DISPlay:WINDow1:TRACe2:FEED 'Trc2'

// Set sweep parameters: Start and Stop frequency, No. of Points, IF Bandwidth and Power
:SENSe1:FREQuency:STARt 300 KHZ
:SENSe1:FREQuency:STOP 1.0 GHZ
:SENSe1:SWEEp:POINts 51
:SENSe1:BANDwidth 10000
:SOURce1:POWer -10

// Configure source power calibration sweeps.
// Set number of readings, tolerance and no verification sweep for the power calibration
:SOURce:POWer:CORRection:COLLect:AVERAge:COUNt 3
:SOURce:POWer:CORRection:COLLect:AVERAge:NTOLerance 0.1 dB
:SOURce:POWer:CORRection:COLLect:ACQuire:VERification OFF

// Enable the source power calibration
:SOURce:POWer:CORRection:COLLect:FLATness ON

// Enable reference receiver calibration within the source power calibration
:SOURce:POWer:CORRection:COLLect:RRECeiver ON

// Set ID of the power meter used for the calibration
:SOURce:POWer:CORRection:PMETer:ID 1

// Switch off all other sources during cal sweep
:SOURce:POWer:CORRection:OSources OFF

// Initiate source power cal of port 1
:SOURce1:POWer:CORRection:ACQuire PORT, 1
:SOURce1:POWer1:CORRection:STATe ON
```

```
// Initiate receiver power cal of ports 2 and 4
:SENSe1:CORRection:POWer:ACQuire BWAV, 2, PORT, 1
:SENSe1:CORRection:POWer:ACQuire BWAV, 4, PORT, 1

// Save power cal correction values as file to calibration pool in directory
// C:\Program Files\Rohde&Schwarz\Network Analyzer\Calibration\Data
// the file name in the commands must not contain the path !
:MMEMORY:STORE:CORRection 1,'B2_B4_Pwr_cal.cal'
```

Saving and Recalling Error Terms

The following examples show you how to perform a system error correction, save the acquired system error correction data to a file and re-load them.

Performing a Calibration, Saving the Error Terms

```
// Reset the analyzer
*RST
//
// Set frequency range
:SENSe1:FREQuency1:STARt 1GHz
:SENSe1:FREQuency1:STOP 4GHz
:SENSe1:SWEep:POINts 6
//
// Select calibration type: TOSM at ports 1 and 2
:SENSe1:CORRection:COLLect:METHod:DEFine 'Test SFK TOSM 12', TOSM, 1, 2
//
// Measure Standards
:SENSe1:CORRection:COLLect:ACQuire:SELected THROUGH, 1, 2
:SENSe1:CORRection:COLLect:ACQuire:SELected OPEN, 1
:SENSe1:CORRection:COLLect:ACQuire:SELected SHORT, 1
:SENSe1:CORRection:COLLect:ACQuire:SELected MATCH, 1
:SENSe1:CORRection:COLLect:ACQuire:SELected OPEN, 2
:SENSe1:CORRection:COLLect:ACQuire:SELected SHORT, 2
:SENSe1:CORRection:COLLect:ACQuire:SELected MATCH, 2
//
// Apply calibration
:SENSe1:CORRection:COLLect:SAVE:SELected
```

```
//
// Save error terms
:FORMAT REAL,32
@TRACEFILE:scorr1.dat
:CALCulate1:DATA? SCORr1
@TRACEFILE:scorr2.dat
:CALCulate1:DATA? SCORr2
@TRACEFILE:scorr3.dat
:CALCulate1:DATA? SCORr3
// We are omitting the isolation term, as it is not implemented on the ZVAB
// @TRACEFILE:scorr4.dat
// :CALCulate1:DATA? SCORr4
@TRACEFILE:scorr5.dat
:CALCulate1:DATA? SCORr5
@TRACEFILE:scorr6.dat
:CALCulate1:DATA? SCORr6
@TRACEFILE:scorr7.dat
:CALCulate1:DATA? SCORr7
@TRACEFILE:scorr8.dat
:CALCulate1:DATA? SCORr8
@TRACEFILE:scorr9.dat
:CALCulate1:DATA? SCORr9
// We are omitting the isolation term, as it is not implemented on the ZVAB
// @TRACEFILE:scorr10.dat
// :CALCulate1:DATA? SCORr10
@TRACEFILE:scorr11.dat
:CALCulate1:DATA? SCORr11
@TRACEFILE:scorr12.dat
:CALCulate1:DATA? SCORr1
```

Performing a New Calibration, Recalling the Error Terms

```
// Reset the analyzer
*RST
//
// Set frequency range
:SENSe1:FREQuency1:STARt 1GHz
:SENSe1:FREQuency1:STOP 4GHz
:SENSe1:SWEep:POINts 6
//
// Select calibration type: TOSM at ports 1 and 2
```

```

:SENSe1:CORRection:COLLect:METHod:DEFine 'XYZ', TOSM, 1, 2
//
// Generate a set of default correction data, switch on user calibration
:SENSe1:CORRection:COLLect:SAVE:SElecteD:DEFault
:SENSE1:CORRECTION:STATE ON
//
// In the previous section, the following error terms were saved:
// SCORR1 Forward Directivity
// SCORR2 Forward Source Match
// SCORR3 Forward Reflection Tracking
// SCORR4 Forward Isolation
// SCORR5 Forward Load Match
// SCORR6 Forward Transmission Tracking
// SCORR7 Reverse Directivity
// SCORR8 Reverse Source Match
// SCORR9 Reverse Reflection Tracking
// SCORR10 Reverse Isolation
// SCORR11 Reverse Load Match
// SCORR12 Reverse Transmission Tracking
//
//
// Equivalences between the first parameter of CALculate:DATA
// and the first 3 Parameters of SENSe:CORRection:CDATa
//
// 'SCORR1' 'DIRECTIVITY', 1, 0 <Port 2> = 0 ignored
// 'SCORR2' 'SRCMATCH', 1, 0 <Port 2> = 0 ignored
// 'SCORR3' 'REFLTRACK', 1, 0 <Port 2> = 0 ignored
// 'SCORR4' 'ISOLATION', 1, 2
// 'SCORR5' 'LOADMATCH', 1, 2
// 'SCORR6' 'TRANSTRACK', 1, 2
// 'SCORR7' 'DIRECTIVITY', 2, 0 <Port 2> = 0 ignored
// 'SCORR8' 'SRCMATCH', 2, 0 <Port 2> = 0 ignored
// 'SCORR9' 'REFLTRACK', 2, 0 <Port 2> = 0 ignored
// 'SCORR10' 'ISOLATION', 2, 1
// 'SCORR11' 'LOADMATCH', 2, 1
// 'SCORR12' 'TRANSTRACK', 2, 1
//

```

```
// Set format for data transfer
:FORMAT REAL,32
//
// !!! Important !!! Stop sweep when loading error terms
:INITiate:CONTInuous OFF
//
// Recall error terms
// CALCulate:DATA is suitable for 2-port terms;
// use SENSE:CORRection:CDAta for more than 2 ports
:CALCulate1:DATA      SCORR1,#@scorr1.dat
:CALCulate1:DATA      SCORR2,#@scorr2.dat
:CALCulate1:DATA      SCORR3,#@scorr3.dat
// We are omitting the isolation term, as it is not implemented on the ZVAB
//:CALCulate1:DATA      SCORR4,#@scorr4.dat
:CALCulate1:DATA      SCORR5,#@scorr5.dat
:CALCulate1:DATA      SCORR6,#@scorr6.dat
:CALCulate1:DATA      SCORR7,#@scorr7.dat
:CALCulate1:DATA      SCORR8,#@scorr8.dat
:CALCulate1:DATA      SCORR9,#@scorr9.dat
// We are omitting the isolation term, as it is not implemented on the ZVAB
//:CALCulate1:DATA      SCORR10,#@scorr10.dat
:CALCulate1:DATA      SCORR11,#@scorr11.dat
:CALCulate1:DATA      SCORR12,#@scorr12.dat

:INITiate:CONTInuous ON
```

Using a Calibration Data Recorded Previously

You can re-use any set of correction data that you acquired in earlier sessions on your analyzer. In general you have to carry out the following steps:

1. Create a dummy correction data set and store it to a file.
2. Replace the dummy data with your correction data.
3. Re-import the correction data file and apply it to a channel.

See also the program examples for the following commands:

- `[SENSe<Ch>:]CORRection:COLlect:SAVE:SElected:DEFault` (dummy system error correction)
- `SOURce<Ch>:POWer<Pt>:CORRection:DEFault` (dummy source power calibration without external power meter)

9 Annexes

Increasing the Monitor Resolution

The default resolution of the external VGA monitor or LCD display is equal to the resolution of the analyzer's display (800 by 600 pixels). A higher resolution leaves additional space on the external monitor.

The *Intel Graphics Control Panel*, a software utility which is pre-installed on your analyzer, helps you perform the following tasks.

- Connecting and activating the monitor ([Windows XP](#) / [Windows 7](#))
- Changing the monitor resolution ([Windows XP](#) / [Windows 7](#))
- Switching back to the analyzer's display ([Windows XP](#))



Using the Windows 7 Screen Resolution dialog (not recommended!)

The Windows 7 *Screen Resolution* dialog lists the following display devices:

1. Digital Flat Panel (800x600 60Hz)
2. Display device on: DVI
3. Display device on: VGA (if an external monitor is connected)

The first one is an internal connector on the FMR11 CPU board that can neither be used nor deactivated. The second one is the internal display.



The display settings should only be changed from the Intel Graphics Control Panel. Do not use the Windows Screen Resolution dialog for this purpose.



For instruments running Windows 7 do not use the hotkey CTRL + ALT+ F8 to reset the display configuration as this will disable both the external monitor and the internal display! In case the internal display was disabled accidentally, use Windows + P to call the (invisible) Windows display switching utility, click TAB and then ENTER. Repeat this until the internal display is enabled again.

Connecting and Activating the Monitor (Windows XP)

Under Windows XP the monitor must be connected while the analyzer is switched off or in standby mode. An external keyboard and a mouse is recommended.

1. Connect a monitor or LCD display to the analog VGA connector (labeled **MONITOR**) at the rear panel.
2. Switch on the monitor or LCD display.
3. Switch on the instrument.
4. When the instrument is running, press CTRL + ALT+ F12 on your external keyboard to start the *Intel Graphics Controller Properties* dialog and select the *Devices* tab.



Alternatives for starting the Graphics Controller

If the keyboard shortcut CTRL + ALT + F12 does not work, try one of the following:

- Open the Windows control panel and select "Intel Graphics Technology".

- Click *Properties* in the context menu of the Windows desktop. In the *Settings* tab, press the *Advanced* button, select the *Intel Graphics Technology* tab and press the *Graphics Properties* button.



- Select *Monitor*, select the *Activate Monitor* check box and then press *OK*.

The internal LCD-Display will be turned off and the external monitor should display the instrument screen with the internal resolution of 800 by 600 pixels.

- Confirm this change in the next dialog opened. Press *OK* to close the *Controller Properties* dialog.



After connecting the external monitor, select *Display – Display Config – Hardkey Bar* at the NWA GUI to display the analyzer's hardkeys together with the menus, softkeys and the diagram areas. This allows you to control the instrument very comfortably with the mouse.

Connecting and Activating the Monitor (Windows 7)

Under Windows 7 it is safe to connect or disconnect an external monitor during the measurement. An external keyboard and a mouse is recommended.

- Connect a monitor or LCD display to the analog VGA connector (labeled **MONITOR**) at the rear panel.
- Switch on the monitor.
- Press CTRL + ALT+ F12 on your external keyboard to start the *Intel Graphics Control Panel* and select the *Display* button.
If the keyboard shortcut does not work, click *Graphics Properties* in the context menu of the Windows desktop.



4. Under *Select Profile* select *Clone* and press *Apply*.

The external monitor should now display the instrument screen with the internal resolution of 800 by 600 pixels.




After connecting the external monitor, select *Display – Display Config – Hardkey Bar* at the NWA GUI to display the analyzer's hardkeys together with the menus, softkeys and the diagram areas. This allows you to control the instrument very comfortably with the mouse. You do not have to change between hardkeys and mouse.

Changing the Resolution (Windows XP)

After the external monitor is active, the *Graphics Controller* displays a list of possible resolutions.

1. Press CTRL + ALT + F12 again. Now the *Screen Area* contains all possible resolutions of the external monitor. Select a valid combination of resolution and refresh rate for your monitor.

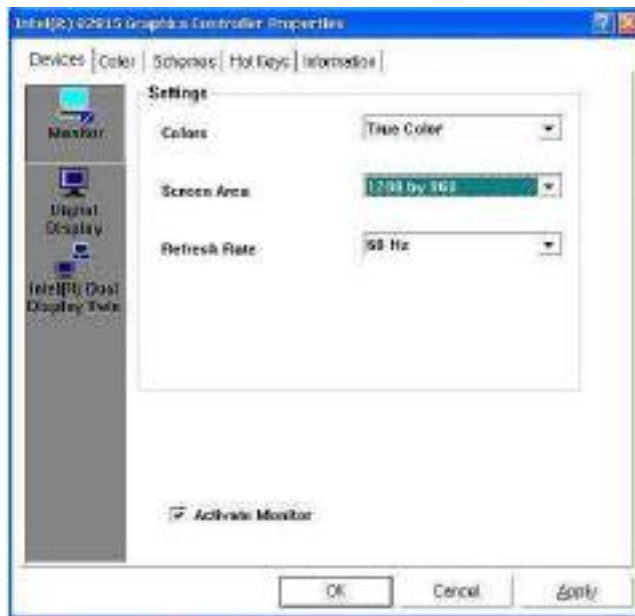

2. Press **OK** and confirm the changes in the next dialog box opened. Press **OK** to close the *Controller Properties* dialog.

The network analyzer application is now displayed with the selected resolution.

Changing the Resolution (Windows 7)

Before setting the external monitor to a resolution different to that of the internal display (800x600), the desktop must either be extended to or displayed exclusively on the external monitor. The following procedure addresses the second possibility: the desktop is shown on the external monitor, the internal display is switched off.

1. Press **CTRL + ALT + F12** on your external keyboard to start the *Intel Graphics Control Panel* and select the *Display* button.
If the keyboard shortcut does not work, click *Graphics Properties* in the context menu of the Windows desktop.



2. Select *Multiple Displays* from the *Display* drop-down menu.
3. On the left hand side of the modified dialog select the *Single Display* mode and, in the center select the external monitor:



4. Press *Apply* and in the following confirmation dialog press *OK*.
5. Select *Display Settings* from the *Display* drop-down menu and change the display settings for the external monitor as needed:



The *Select Display* combo-box lists the following devices:

1. <Your External Monitor> (if connected)
2. Digital display
3. Built-in display

The second one is the internal display. The last one is an internal connector on the FMR11 CPU board that can neither be used nor deactivated.




Do not select the internal connector.

Switching back to the Analyzer's Display

If the analyzer is running Windows 7, the internal display is automatically (re-)activated when the external monitor is disconnected. If the analyzer is running Windows XP, proceed as follows:

1. Press CTRL + ALT + F12 and select *Digital Display*.

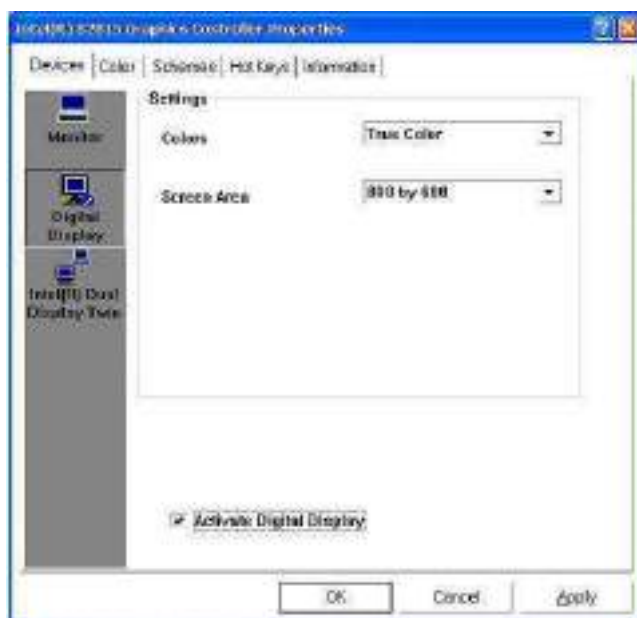

2. Select the *Activate Digital Display* check box and press *OK*. The external monitor is turned off and the analyzer's internal LCD display is reactivated.

Interfaces and Connectors

This chapter provides a detailed description of the hardware interfaces and connectors of the instrument. For a graphical overview of the front panel and rear panel connectors and their use refer to chapter *Preparing for Use*:

Front Panel Connectors

The test ports and various additional connectors are located on the front panel of the analyzer.

Test Ports

N-connectors (or smaller connectors for microwave analyzer types), numbered 1, 2 ... The test ports serve as outputs for the RF stimulus signal and as inputs for the measured RF signals from the DUT (response signals).

- With a single test port, it is possible to generate a stimulus signal and measure the response signal in reflection.
- With 2, 3 or 4 test ports, it is possible to perform full two-port, 3-port or 4-port measurements; see [S-Parameters](#) section in chapter *System Overview*. Note that pairs of test ports (1 and 2, 3 and 4) are supplied by a common generator [Coupled Test Ports](#) (exceptions: R&S ZVA24 with 4 ports and 4 sources, R&S ZVA40 with 4 ports and 4 sources, R&S ZVA67).
- Each test port may be complemented by three pairs of additional connectors used to test high power devices and extend the dynamic range, see section [Direct Generator and Receiver Access](#) below.

**Attention!**

The maximum input levels at all test ports according to the front panel labeling or the data sheet must not be exceeded.

In addition, the maximum input voltages of the other input connectors at the front and rear panel must not be exceeded.

The three LEDs above each test port indicate the connector state:



- The **amber** LED is on while the connector is used as a source port.
- The **green** LED is on while the connector is used as a bidirectional (source and receive) port.
- The **blue** LED is on while the connector is used as a receive port.



It is recommended to use a torque wrench when screwing RF cables on the test port connectors. Standard IEEE 287 specifies a torque of (1.5 ± 0.2) Nm for N connectors, (0.9 ± 0.1) Nm for the other connector types.


USB Connector

Double Universal Serial Bus connector of type A (master USB), used to connect e.g. a keyboard, mouse or other pointing devices, the [Calibration Unit](#) (accessory R&S ZV-Z5x), a printer or an external storage device (USB stick, CD-ROM drive etc.).

The USB connector can be used for data transfer from and to the analyzer, in particular to do the following:

- Store data files from the analyzer, e.g. store a setup to be used on another instrument or at a later time.
- Load data files, e.g. calibration kits, memory traces, setups.
- Perform a firmware update.

To control external devices (e.g. power meters, generators) via USB connector, a VISA installation on the network analyzer is required. Use the *USB-to-IEC/IEEE Adapter* (option [R&S ZVAB-B44](#)) to control devices equipped with a GPIB interface.

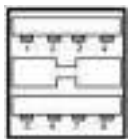

*The length of passive connecting USB cables should not exceed 1 m. The maximum current per USB port is 500 mA.
See also EMI Suppression in chapter Preparing for Use.*



R&S ZVAB-B44 on network analyzers with FMR6/7 and FMR9

The driver software of the USB-to-IEC/IEEE Adapter (option R&S ZVAB-B44) must be installed on the network analyzer. On analyzers equipped with a CPU board FMR7/6 or FMR9, this installation disables GPIB control from an external PC. A reinstallation of the NWA firmware (e.g. in repair mode) will resolve the problem; see *Firmware Update*.

Ground Connector

Connector providing the ground of the analyzer's supply voltage.



Attention!

Electrostatic discharge (ESD) may cause damage to the electronic components of the DUT and the analyzer. Use the wrist strap and cord supplied with the instrument to connect yourself to the GND connector.

Direct Generator and Receiver Access

Option R&S ZVA<frequency>-B16, *Direct Generator/Receiver Access*, provides 3 pairs of SMA connectors (or smaller connectors, for microwave analyzers) for each test port. <frequency> corresponds to the network analyzer type. For detailed ordering information refer to the product brochure. See also section [Converter Control](#).

The connectors give direct access to various RF input and output signals. They can be used to insert external components (e.g. external signal separating devices, power amplifiers, an extension unit etc.) into the signal path in order to develop custom measurements, e.g. to test high power devices and extend the dynamic range. If no external components are connected, each OUT/IN loop should be closed using a jumper.



- The SOURCE OUT signal comes from the internal RF signal source. The SOURCE IN signal goes to the test port. A power amplifier can be inserted between SOURCE OUT and SOURCE IN in order to boost the test port power.
- The REF OUT signal comes from the coupler and provides the reference signal. The REF IN signal goes to the receiver input for the reference signal.
- The MEAS OUT signal comes from the coupler and provides the received (measured) signal. The MEAS IN signal goes to the receiver input for the measured signal.

**Attention!**

The maximum RF input levels at all SMA inputs according to the front panel labeling or the data sheet must not be exceeded.

In addition, it is important that the signal fed in at the SMA inputs contains no DC offset, as this may impair the measurements and even cause damage to the instrument.

Rear Panel Connectors

The rear panel of the analyzer provides various connectors for external devices and control signals.

PORT BIAS

Coaxial BNC connectors used to apply an external DC voltage (bias) to the test ports. The PORT BIAS connectors are numbered 1 to 4 (for four-port analyzers). The internal equivalent circuit is shown in section [Direct Generator and Receiver Access](#).



NOTE Each PORT BIAS input is protected by an exchangeable fuse.

Pin No.	Name	Input (I) or Output (O) or Bidirectional (B)	Voltage Range	Function
Center conductor	PORTBIAS1/2/3/4	I	See data sheet	DC input for test port 1/2/3/4
Outer conductor	GNDA	–	0 V	Analog ground

**Attention!**

Use double shielded cables at the BNC rear panel connectors and match signal with 50 Ω in order to comply with EMC directives!

See also *EMI Suppression* in chapter *Preparing for Use*.


AUX

Coaxial bidirectional auxiliary connector that can be wired as needed. The AUX connector is not fitted on standard instruments.

LAN1 / LAN 2

8-pin connector RJ-45 used to connect the analyzer to a Local Area Network (LAN). The pin assignment of the RJ-45 connector supports category 6 / 7 UTP/STP (Unshielded/Shielded Twisted Pair) cables.

See also *EMI Suppression* in chapter *Preparing for Use*.

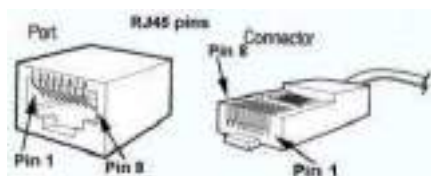

UNIVERSAL INTERFACE

Female Centronics 36 connector for option R&S ZVAB-B14, "Universal Interface". For a detailed description refer to section [Universal Interface](#).



Important note:

Use only well shielded cables or disconnect the input pins of the UNIVERSAL INTERFACE connector in order to avoid spurious input signals which may cause undesirable events.

IEC BUS, IEC SYSTEM BUS


GPIO bus (IEC/IEEE) connector. For a detailed description refer to section [GPIO Bus Interface](#). See also *EMI Suppression* in chapter *Preparing for Use*.

USB

Double Universal Serial Bus connector of type A (master USB), equivalent to the USB connectors at the [front panel](#). See also *EMI Suppression* in chapter *Preparing for Use*.

DC MEAS

Two inputs for [DC measurements](#). The connectors are of the same type but specified for different input voltage ranges, see data sheet. The DC measurement provides the voltage between pins 6 and 8 of the connectors.

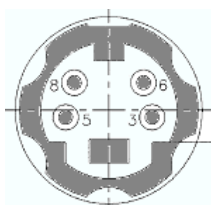

Pin No.	Name	Input (I) or Output (O)	Function
3	GNDA	-	Analog ground
5	GNDA	-	Analog ground
6	DCMEAS1VPOS	I	Positive 1 V or 10 V DC input

Pin No.	Name	Input (I) or Output (O)	Function
	DCMEAS10VPOS		(see data sheet)
8	DCMEAS1VNEG DCMEAS10VNEG	I	Negative 1 V or 10 V DC input (see data sheet)

10 MHz REF

Coaxial BNC connector used as an input or output for the 10 MHz reference clock signal.



The function of the *10 MHz REF* connector depends on the *Int. Reference* or *Ext. Reference* setting in the *System* menu:

- If *Int. Reference* is active, *10 MHz REF* is used as an output connector for the 10 MHz internal reference clock signal of the analyzer.
- If *Ext. Reference* is active, *10 MHz REF* is used as an input connector for an external 10 MHz reference clock signal. The external reference signal must meet the specifications of the data sheet. The internal reference signal is synchronized to the external signal.

Pin No.	Name	Input (I) or Output (O) or Bidirectional (B)	Voltage Range	Function
Center conductor	FR_REF_10_OUT/IN	B	See data sheet	Reference frequency
Outer conductor	GNDA	–	0 V	Analog ground




Use double shielded cables at the BNC rear panel connectors and match signal with 50 Ω in order to comply with EMC directives!

See also EMI Suppression in chapter Preparing for Use.

MONITOR

15-pole Sub-Min-D connector used to connect an external VGA monitor.



Pin No.	Name	Input (I) or Output (O)	Voltage Range	Function
1	RED	O	75 Ω shielded	Red signal
2	GREEN	O	75 Ω shielded	Green signal
3	BLUE	O	75 Ω shielded	Blue signal
4	NC	–	–	–
5	GNDA	–	0 V	Analog ground


Pin No.	Name	Input (I) or Output (O)	Voltage Range	Function
6	GNDA	–	0 V	Analog ground
7	GNDA	–	0 V	Analog ground
8	GNDA	–	0 V	Analog ground
9	GNDA	–	0 V	Analog ground
10	GNDA	–	0 V	Analog ground
11	NC	–	–	–
12	DDCDAT			
13				
14				
15				

CASCADE

8-pin RJ-45 connector used as output and input connectors for [pulse generator](#) signals. The CASCADE connector is located between the MONITOR and the USER CONTROL connectors.



On older instruments the CASCADE connector may be hidden behind a cover plate. Simply unscrew the plate if you want to use the connector.

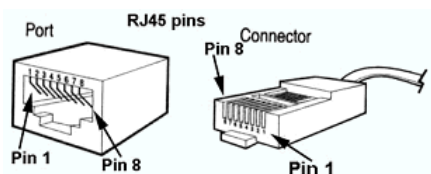

Pin No.	Name	Input (I) or Output (O) or Bidirectional (B)	Voltage Range	Function
1	FR_REF_128_IO_P	B	LVDS high	128 MHz reference signal
2	FR_REF_128_IO_N	B	LVDS low	128 MHz reference signal
3	FR_AD_CLK_IO_N	B	LVDS low	80 MHz A/D converter clock
4	RP_CASC_READY_B	B	LVDS low	Ready signal
5	RP_CASC_READY_A	B	LVDS high	Ready signal
6	FR_AD_CLK_IO_P	B	LVDS high	80 MHz A/D converter clock
7	RP_CASC_SYNC_B	B	LVDS low	Synchronization signal
8	RP_CASC_SYNC_A	B	LVDS high	Synchronization signal

USER CONTROL

25-pole D-Sub connector used as an input and output for low-voltage (3.3 V) TTL control signals. Some of the USER CONTROL lines can be controlled via GPIB bus (see [CONTrol...](#) and [OUTPut...](#) subsystems).



Pin No.	Name	Input (I) or Output (O)	Function
1	GNDD	-	Digital ground
2	EXT TRG	I	External trigger signal *)
3	GNDD	-	Digital ground
4	BUSY	O	Measurement running, configurable signal (see Define Busy Signal)
5	GNDD	-	Digital ground
6	READY FOR TRIGGER	O	Measurement terminated, ready for trigger (not available for pulsed measurements)
7	GNDD	-	Digital ground
8	CHANNEL BIT 0	O	Channel-specific bit 0; see CONTrol:AUXiliary:C[:DATA] and OUTPut<Ch>:UPORT[:VALue]
9	CHANNEL BIT 1	O	Channel-specific bit 1
10	CHANNEL BIT 2	O	Channel-specific bit 2
11	CHANNEL BIT 3	O	Channel-specific bit 3
12	GNDD	-	Digital ground
13	PASS 1	O	Pass/fail result of limit check TTL Out Pass 1
14	PASS 2	O	Pass/fail result of limit check TTL Out Pass 2
15	GNDD	-	Digital ground
16	DRIVE PORT 1	O	Test port 1 is source port (drive port)
17	DRIVE PORT 2	O	Test port 2 is source port (drive port)
18	DRIVE PORT 3	O	Test port 3 is source port (drive port)
19	DRIVE PORT 4	O	Test port 4 is source port (drive port)
20	GNDD	-	Digital ground
21	EXT GEN TRG	O	Control signal for external generator
22	EXT GEN BLANK	I	Handshake signal from external generator
23	GNDD	-	Digital ground
24	FOOT SWITCH 1	I	Control input A
25	FOOT SWITCH 2	I	Control input B

*) **Note:** Feeding in the external trigger signal via the BNC connector [EXT TRIGGER](#) is equivalent. Both input connectors must not be used simultaneously, because this can cause malfunctions of the analyzer.



Important note:

Use only well shielded cables or disconnect the input pins of the USER CONTROL connector in order to avoid spurious input signals which may cause undesirable events.

This is of particular importance for the external trigger input (pin no. 2) if the EXT TRIGGER input is used.

EXT TRIGGER

Coaxial BNC connector used as an input for a low-voltage (3.3 V) TTL external trigger signal.



*) **Note:** Feeding in the external trigger signal at pin 2 of the D-Sub connector [USER CONTROL](#) is equivalent. Both input connectors must not be used simultaneously, because this can cause malfunctions of the analyzer.

Pin No.	Name	Input (I) or Output (O) or Bidirectional (B)	Voltage Range	Function
Center conductor	RP_EXT_TRG	I	3.3 V TTL	External trigger signal
Outer conductor	GNDA	–	0 V	Analog ground



Use double shielded cables at the BNC rear panel connectors and match signal with 50 Ω in order to comply with EMC directives!

See also EMI Suppression in chapter Preparing for Use.

LAN Interface

The analyzer provides two LAN connectors for direct connection to a Local Area Network. Remote control via LAN requires a VISA installation but no additional hardware at the controller. VISA provides the TCPIP interface type and several protocol types to communicate with LAN-connected devices. The analyzer supports the following protocols

- [VXI-11](#)
- [RSIB](#)

VXI-11 Protocol


The VXI-11 standard is based on the RPC protocol which in turn relies on TCP/IP as the network/transport layer. The TCP/IP network protocol and the associated network services are pre-configured. TCP/IP ensures connection-oriented communication, where the order of the exchanged messages is adhered to and interrupted links are identified. With this protocol, messages cannot be lost.

Remote control of an instrument via a network is based on standardized protocols which follow the OSI reference model (see Fig. below).


Based on TCP/UDP, messages between the controller and the instrument are exchanged via open network computing (ONC) – remote procedure calls (RPC). With XDR (VXI–11), legal RPC messages are known as VXI–11 standard. Based on this standard, messages are exchanged between the controller and the instrument. The messages are identical with SCPI commands. They can be organized in four groups:

- Program messages (control command to the instrument)
- Response messages (values returned by the instrument)
- Service request (spontaneous queries of the instrument)
- Low–level control messages (interface messages)

A VXI–11 link between a controller and an instrument uses three channels: core, abort and interrupt channel. Instrument control is mainly performed on the core channel (program, response and low–level control messages). The abort channel is used for immediate abort of the core channel; the interrupt channel transmits spontaneous service requests of the instrument. Link setup itself is very complex. For more details refer to the VXI–11 specification.

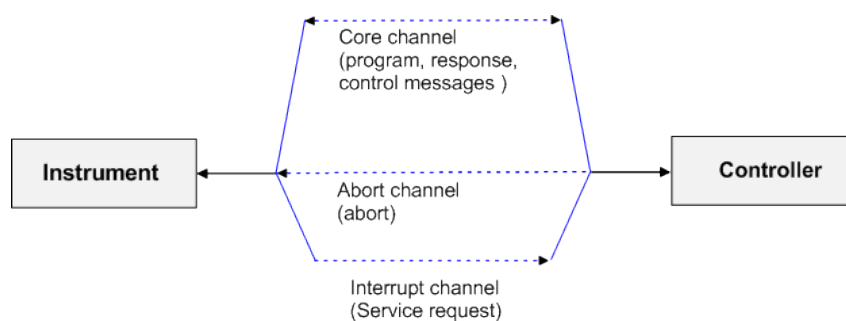

The number of controllers that can address an instrument is practically unlimited in the network. In the instrument, the individual controllers are clearly distinguished. This distinction continues up to the application level in the controller, i.e. two applications on a computer are identified by the instrument as two different controllers.

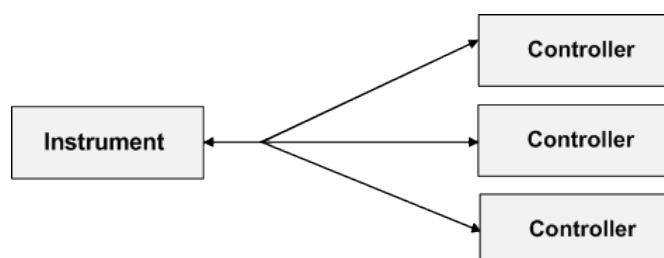

The controllers can lock and unlock the instrument for exclusive access. This regulates access to the instrument of several controllers.

VXI-11 Interface Messages

On the Ethernet link, the interface messages are called low-level control messages. These messages can be used to emulate interface messages of the IEC/IEEE bus.

Command		Effect on the instrument
&ABO	(Abort)	Aborts processing of the commands just received.
&DCL	(Device Clear)	Aborts processing of the commands just received and sets the command processing software to a defined initial state. Does not change the instrument setting.
&GTL	(Go to Local)	Transition to the "Local" state (manual control).
&GTR	(Go to Remote)	Transition to the "Remote" state (remote control).
&GET	(Group Execute Trigger)	Triggers the active measurement sequence (e.g. a sweep). The effect of the command is the same as with that of a pulse at the external trigger signal input.
&LLO	(Local Lockout)	Disables switchover from remote control to manual control by means of the front panel keys.
&POL	(Serial Poll)	Starts a serial poll.
&NREN	(Not Remote Enable)	Enables switchover from remote control to manual control by means of the front panel keys.

RSIB Protocol

RSIB Interface Functions

This section lists all functions of the DLL "RSIB.DLL" or "RSIB32.DLL" or "librsib.so", which allow to produce control applications.

- [Variables](#)
- [Interface Functions](#)

Variables **ibsta**, **iberr**, **ibcntl**

Same as with the National Instruments interface, successful execution of a command can be checked by means of the variables **ibsta**, **iberr** and **ibcntl**. To this end, references to the three variables are transferred to all RSIB functions. In addition, the status word **ibsta** is returned as a function value by all functions.

Status word **ibsta**

All functions send back a status word that provides information on the status of the RSIB interface. The following bits are defined:

Bit name	Bit	Hex code	Description
ERR	15	8000	This bit is set if an error occurs during a function call. If this bit is set, iberr contains an error code which specifies the error.

Bit name	Bit	Hex code	Description
TIMO	14	4000	This bit is set if a timeout occurs during a function call. A timeout may occur in the following situations: - while waiting for an SRQ with the function <code>RSDLLWaitSrq()</code> . - if no acknowledgment is received for data sent to an instrument with <code>RSDLLibwrt()</code> or <code>RSDLLilwrt()</code> . - if no response from server to a data request with function <code>RSDLLibrd()</code> or <code>RSDLLilrd()</code> .
CMPL	8	0100	This bit is set if the reply of the IEC/IEEE-bus parser is completely read. If a reply of the parser is read with the function <code>RSDLLilrd()</code> and the buffer length is not sufficient, the bit is cleared.

Error variable iberr

If the ERR bit (8000h) is set in the status word, `iberr` contains an error code that specifies the error. The RSIB has error codes of its own independent of the National Instrument interface.

Error	Error code	Description
IBERR_DEVICE_REGISTER	1	RSIB.DLL cannot register any new device.
IBERR_CONNECT	2	Link to the device has failed.
IBERR_NO_DEVICE	3	An interface function was called with an invalid device handle.
IBERR_MEM	4	No free memory available.
IBERR_TIMEOUT	5	Timeout has occurred.
IBERR_BUSY	6	The RSIB interface is blocked by a function not yet completed. Windows is not blocked, for example, by function <code>RSDLLibrd()</code> if data is still to be transmitted in response to this function. In this case a new call is possible. Further calls are however rejected by RSIB.DLL with error code <code>IBERR_BUSY</code> .
IBERR_FILE	7	Error in reading from or writing to a file.
IBERR_SEMA	8	Error upon creating or assigning a semaphore (only under Unix)

Count variable - ibcntl

The variable `ibcntl` is updated with the number of bytes transmitted on every read and write function call.

Overview of Interface Functions

The library functions are adapted to the interface functions of National Instruments for GPIB programming. The functions supported by the libraries are listed in the following table.

Function	Description
RSDLLibfind()	Provides a handle for access to a device.
RSDLLibwrt()	Sends a zero-terminated string to a device.
RSDLLilwrt()	Sends a certain number of bytes to a device.
RSDLLibwrtf()	Sends the contents of a file to a device.
RSDLLibrd()	Reads data from a device into a string.
RSDLLilrd()	Reads a certain number of bytes from a device.

Function	Description
RSDLLibrdf()	Reads data from a device into a file.
RSDLLibtmo()	Sets timeout for RSIB functions
RSDLLibsre()	Switches a device into the local or remote state
RSDLLibloc()	Temporarily switches a device into the local state
RSDLLibeot()	Enables/disables the END message for write operations.
RSDLLibrsp()	Performs a serial poll and provides the status byte.
RSDLLibclr	Sends the command SDC (Device Clear) to the instrument.
RSDLLibonl()	Sets the device On/Offline.
RSDLLTestSrQ()	Checks whether a device has generated an SRQ.
RSDLLWaitSrQ()	Waits until a device generates an SRQ.
RSDLLSwapBytes	Swaps the byte sequence for binary numeric display (only required for non-Intel platforms)

Description of Interface Functions

RSDLLibfind()

The function provides a handle for access to the device with the name `udName`.

VB format	Function RSDLLibfind (ByVal udName\$, ibsta%, iberr%, ibcntl&) As Integer
C-format	short WINAPI RSDLLibfind(char far *udName, short far *ibsta, short far *iberr, unsigned long far *ibcntl)
C format (Unix)	short RSDLLibfind(char *udName, short *ibsta, short *iberr, unsigned long *ibcntl)
Parameter	udName // IP address of device
Example	ud = RSDLLibfind ("89.10.38.97", ibsta, iberr, ibcntl)

The function must be called prior to all other functions of the interface.

As return value, the function provides a handle that must be indicated in all functions for access to the device. If the device with the name `udName` is not found, the handle has a negative value.

RSDLLibwrt

This function sends data to the device with the handle `ud`.

VB format	Function RSDLLibwrt (ByVal ud%, ByVal Wrt\$, ibsta%, iberr%, ibcntl&) As Integer
C-format	short WINAPI RSDLLibwrt(short ud, char far *Wrt, short far *ibsta, short far *iberr, unsigned long far *ibcntl)
C format (Unix)	short RSDLLibwrt(short ud, char *Wrt, short *ibsta, short *iberr, unsigned long *ibcntl)
Parameters	ud // Device handle Wrt // String sent to the device
Example	RSDLLibwrt(ud, "SENS:FREQ:STAR?", ibsta, iberr, ibcntl)

This function allows to send setting and query commands to the measuring instruments. Whether the data is interpreted as a complete command can be set using the function `RSDLLibeot()`.

RSDLLilwrt

This function sends `Cnt` bytes to a device with the handle `ud`.

VB format	Function <code>RSDLLilwrt (ByVal ud%, ByVal Wrt\$, ByVal Cnt&, ibsta%, iberr%, ibcntl&) As Integer</code>
C-format	<code>short WINAPI RSDLLilwrt(short ud, char far *Wrt, unsigned long Cnt, short far *ibsta, short far *iberr, unsigned long far *ibcntl)</code>
C format (Unix)	<code>short RSDLLilwrt(short ud, char *Wrt, unsigned long Cnt, short *ibsta, short *iberr, unsigned long *ibcntl)</code>
Parameters	<code>ud</code> // Device handle <code>Wrt</code> // String sent to the device <code>Cnt</code> // Number of bytes sent to the device
Example	<code>RSDLLilwrt (ud, '.....', 100, ibsta, iberr, ibcntl)</code>

Like `RSDLLibwrt()` this function sends data to a device. The only difference is that binary data can be sent as well. The length of the data is not determined by a zero-terminated string, but by the indication of `Cnt` bytes. If the data is to be terminated with EOS (0Ah), the EOS byte must be appended to the string.

RSDLLibwrtf

This function sends the contents of a file `file$` to the device with the handle `ud`.

VB format	Function <code>RSDLLibwrtf (ByVal ud%, ByVal file\$, ibsta%, iberr%, ibcntl&) As Integer</code>
C-format	<code>short WINAPI RSDLLibwrtf(short ud, char far *Wrt, short far *ibsta, short far *iberr, unsigned long far *ibcntl)</code>
C format (Unix)	<code>short RSDLLibwrtf(short ud, char *Wrt, short *ibsta, short *iberr, unsigned long *ibcntl)</code>
Parameters	<code>ud</code> // Device handle <code>file</code> // File the contents of which are sent to the device
Example	<code>RSDLLibwrtf(ud, "C:\db.sav", ibsta, iberr, ibcntl)</code>

This function allows to send setting and query commands to the measuring instruments. Whether the data is interpreted as complete command can be set using the function `RSDLLibeot()`.

RSDLLibrd()

The function reads data from the device with the handle `ud` into the string `Rd`.

VB format	Function <code>RSDLLibrd (ByVal ud%, ByVal Rd\$, ibsta%, iberr%, ibcntl&) As Integer</code>
C-format	<code>short WINAPI RSDLLibrd(short ud, char far *Rd, short far *ibsta, short far *iberr, unsigned long far *ibcntl)</code>
C format (Unix)	<code>short RSDLLibrd(short ud, char *Rd, short *ibsta, short *iberr, unsigned long *ibcntl)</code>
Parameters	<code>ud</code> // Device handle

	Rd // String into which the read data is copied
Example	RSDLLibrd (ud, Rd, ibsta, iberr, ibcntl)

This function fetches the responses of the GPIB parser to a query.

In the case of Visual Basic programming, a string of sufficient length must be generated before. This can be done during the definition of the string or using the command `Space$()`.

Generation of a string of the length 100:

```
- Dim Rd as String * 100
- Dim Rd as String
Rd = Space$(100)
```

RSDLLlird

This function reads `Cnt` bytes from the device with the handle `ud`.

VB format	Function RSDLLlird (ByVal ud%, ByVal Rd\$, ByVal Cnt&, ibsta%, iberr%, ibcntl&) As Integer
C-format	short WINAPI RSDLLlird(short ud, char far *Rd, unsigned long Cnt, short far *ibsta, short far *iberr, unsigned long far *ibcntl)
C format (Unix)	short RSDLLlird(short ud, char *Rd, unsigned long Cnt, short *ibsta, short *iberr, unsigned long *ibcntl)
Parameters	ud // Device handle cnt // Maximum number of bytes copied from the DLL into the target // string Rd.
Example	RSDLLlird (ud, RD, 100, ibsta, iberr, ibcntl)

Like the function `RSDLLibrd()`, this function reads data from a device. The only difference is that in this case the maximum number of bytes to be copied into the target string `Rd` can be indicated by means of `Cnt`. This function prevents writing beyond the end of the string.

RSDLLibrdf()

Reads data from the device with the handle `ud` into the file `file`.

VB format	Function RSDLLibrdf (ByVal ud%, ByVal file\$, ibsta%, iberr%, ibcntl&) As Integer
C-format	short WINAPI RSDLLibrdf(short ud, char far *file, short far *ibsta, short far *iberr, unsigned long far *ibcntl)
C format (Unix)	short RSDLLibrdf(short ud, char *file, short *ibsta, short *iberr, unsigned long *ibcntl)
Parameters	ud // Device handle file // File into which the read data is written
Example	RSDLLibrdf (ud, "c:\db.sav", ibsta, iberr, ibcntl)

The file name may as well include a drive or path specification.

RSDLLibtmo

This function defines the timeout for a device. The default value for the timeout is set to 5 seconds.

VB format	Function RSDLLibtmo (ByVal ud%, ByVal tmo%, ibsta%, iberr%, ibcntl&) As Integer

C-format	short WINAPI RSDLLibtmo(short ud, short tmo, short far *ibsta, short far *iberr, unsigned long far *ibcntl)
C format (Unix)	short RSDLLibtmo(short ud, short tmo, short *ibsta, short *iberr, unsigned long *ibcntl)
Parameters	ud // Device handle tmo // Timeout in seconds
Example	RSDLLibtmo (ud, 10, ibsta, iberr, ibcntl)

RSDLLibsre

This function sets the device to the 'LOCAL' or 'REMOTE' state.

VB format	Function RSDLLibsre (ByVal ud%, ByVal v%, ibsta%, iberr%, ibcntl%) As Integer
C-format	short WINAPI RSDLLibsre(short ud, short v, short far *ibsta, short far *iberr, unsigned long far *ibcntl)
C format (Unix)	short RSDLLibsre(short ud, short v, short *ibsta, short *iberr, unsigned long *ibcntl)
Parameters	ud // Device handle v // State of device (0 - local or 1 - remote)
Example	RSDLLibsre (ud, 0, ibsta, iberr, ibcntl)

RSDLLibloc

This function temporarily switches the device to the 'LOCAL' state.

VB format	Function RSDLLibloc (ByVal ud%, ibsta%, iberr%, ibcntl%) As Integer
C-format	short WINAPI RSDLLibloc(short ud, short far *ibsta, short far *iberr, unsigned long far *ibcntl)
C format (Unix)	short RSDLLibloc(short ud, short *ibsta, short *iberr, unsigned long *ibcntl)
Parameter	ud // Device handle
Example	RSDLLibloc (ud, ibsta, iberr, ibcntl)

After switchover to LOCAL state, the instrument can be manually operated via the GUI. On the next access to the instrument by means of one of the functions of the library the instrument is switched again to the REMOTE state.

RSDLLibeot

This function enables or disables the END message after write operations.

VB format	Function RSDLLibeot (ByVal ud%, ByVal v%, ibsta%, iberr%, ibcntl%) As Integer
C-format	short WINAPI RSDLLibeot(short ud, short v, short far *ibsta, short far *iberr, unsigned long far *ibcntl)
C format (Unix)	short RSDLLibeot(short ud, short v, short *ibsta, short *iberr, unsigned long *ibcntl)
Parameters	ud // Device handle v // State of END message (0 - no END message or 1 - send END message)
Example	RSDLLibeot (ud, 1, ibsta, iberr, ibcntl)

If the END message is disabled, the data of a command can be sent with several successive calls of write functions. The END message must be enabled again before sending the last data block.

RSDLLibrsp

This function performs a serial poll and provides the status byte of the device.

VB format	Function RSDLLibrsp(ByVal ud%, spr%, ibsta%, iberr%, ibcntl%) As Integer
C-format	short WINAPI RSDLLibrsp(short ud, char far* spr, short far *ibsta, short far *iberr, unsigned long far *ibcntl)
C format (Unix)	short RSDLLibrsp(short ud, char *spr, short *ibsta, short *iberr, unsigned long *ibcntl)
Parameters	ud // Device handle spr // Pointer to status byte
Example	RSDLLibrsp(ud, spr, ibsta, iberr, ibcntl)

RSDLLibclr

Sends the command SDC (Device Clear) to the instrument.

VB format	Function RSDLLibclr(ByVal ud%, spr%, ibsta%, iberr%, ibcntl%) As Integer
C-format	short WINAPI RSDLLibclr(short ud, short far *ibsta, short far *iberr, unsigned long far *ibcntl)
C format (Unix)	short RSDLLibclr(short ud, short *ibsta, short *iberr, unsigned long *ibcntl)
Parameter	ud // Device handle
Example	RSDLLibclr(ud, ibsta, iberr, ibcntl)

RSDLLibonl

This function switches the device to 'online' or 'offline' mode. When it is switched to 'offline' mode, the interface is released and the device handle becomes invalid. By calling RSDLLibfind again, the communication is set up again.

VB format	Function RSDLLibonl (ByVal ud%, ByVal v%, ibsta%, iberr%, ibcntl%) As Integer
C-format	short WINAPI RSDLLibonl(short ud, short v, short far *ibsta, short far *iberr, unsigned long far *ibcntl)
C format (Unix)	short RSDLLibonl(short ud, short v, short *ibsta, short *iberr, unsigned long *ibcntl)
Parameters	ud // Device handle v // State of device (0 - local or 1 - remote)
Example	RSDLLibonl(ud, 0, ibsta, iberr, ibcntl)

RSDLLTestSRQ

This function checks the status of the SRQ bit.

VB format	Function RSDLLTestSrQ (ByVal ud%, Result%, ibsta%, iberr%, ibcntl%) As Integer
C-format	short WINAPI RSDLLTestSrQ(short ud, short far *result, short far *ibsta, short far *iberr, unsigned long far *ibcntl)

C format (Unix)	short RSDLLTestSrq(short ud, short *result, short *ibsta, short *iberr, unsigned long *ibcntl)
Parameters	ud // Device handle result // Reference to an integer value in which the library returns the status of the SRQ bit (0 - no SRQ, or 1 - SRQ active, device requests service)
Example	RSDLLTestSrq (ud, result%, ibsta, iberr, ibcntl)

This function corresponds to the function `RSDLLWaitSrq`. The only difference is that `RSDLLTestSRQ` immediately returns the current status of the SRQ bit, whereas `RSDLLWaitSrq` waits for an SRQ to occur.

RSDLLWaitSrq

This function waits until the device triggers an SRQ with the handle `ud`.

VB format	Function RSDLLWaitSrq (ByVal ud%, Result%, ibsta%, iberr%, ibcntl&) As Integer
C-format	short WINAPI RSDLLWaitSrq(short ud, short far *result, short far *ibsta, short far *iberr, unsigned long far *ibcntl)
C format (Unix)	short RSDLLWaitSrq(short ud, short *result, short *ibsta, short *iberr, unsigned long *ibcntl)
Parameters	ud // Device handle result // Reference to an integer value in which the library returns the status of the SRQ bit (0 - No SRQ has occurred during the timeout, or 1 - SRQ has occurred during the timeout)
Example	RSDLLWaitSrq(ud, result, ibsta, iberr, ibcntl); The function waits until one of the following two events occurs: • The measuring instrument triggers an SRQ • No SRQ occurs during the timeout defined with <code>RSDLLibtmo()</code>

RSDLLSwapBytes

This function changes the display of binary numbers on non-Intel platforms.

VB format	Not provided at present since it is required only on non-Intel platforms.
C-format	void WINAPI RSDLLSwapBytes(void far *pArray, const long size, const long count)
C format (Unix)	void RSDLLSwapBytes(void *pArray, const long size, const long count)
Parameters	pArray // Array in which modifications are made size // Size of a single element in pArray count // Number of elements in pArray
Example	RSDLLSwapBytes(Buffer, sizeof(float), ibcntl/sizeof(float))

This function swaps the display of various elements from *Big Endian* to *Little Endian* and vice versa. It is expected that a coherent storage area of elements of the same file type (*size* byte) is transferred to *pArray*. This function has no effect on Intel platforms.

Different types of processor architecture store data in different byte sequences. For example, Intel processors store data in the reverse order of Motorola processors. Comparison of byte sequences:

Byte sequence	Use in	Display in memory	Description
Big Endian	Motorola processors, network standard	Most significant byte at least significant address	The <i>most significant</i> byte is at the left end of the word.
Little Endian	Intel processors	Least significant byte at least significant address	The <i>most significant</i> byte is at the right end of the word.

IEC/IEEE Bus Interface

The standard instrument is equipped with a GPIB bus (IEC/IEEE bus) interface. The two interface connectors labeled *IEC BUS* and *IEC SYSTEM BUS* are located on the rear panel of the instrument.

- The *IEC BUS* connector is intended for remote control of the analyzer from a controller (slave GPIB bus connector).
- The *IEC SYSTEM BUS* is not fitted. To use the analyzer as a GPIB master and control other devices, e.g. external generators or power meters, option R&S ZVAB-B44 is required.



Option R&S ZVAB-B44, USB-to-IEC/IEEE Adapter

Option R&S ZVAB-B44 (order no. 1302.5544.02) consists of an adapter and a driver software for controlling external devices which are equipped with a GPIB bus interface (but do not provide a USB interface). The driver software is installed on the network analyzer. It includes the VISA library which is a prerequisite for establishing a connection from the analyzer to an external device.

Connect the USB port of the adapter to any of the master USB connectors on the front or rear panel of the analyzer. The GPIB port of the adapter is connected to the external device. If hardware detection fails, an update of the VISA library is recommended. An appropriate NI-VISA 4.6.2 is available free of charge for download on the internet; refer to the National Instruments web site.



R&S ZVAB-B44 on network analyzers with FMR6/7 and FMR9

The driver software of the USB-to-IEC/IEEE Adapter (option R&S ZVAB-B44) must be installed on the network analyzer. On analyzers equipped with a CPU board FMR7/6 or FMR9, this installation disables GPIB control from an external PC. A reinstallation of the NWA firmware (e.g. in repair mode) will resolve the problem.




Always use a shielded cable to connect the GPIB bus interfaces.



Characteristics of the interface

- 8-bit parallel data transfer
- Bidirectional data transfer
- Three-line handshake
- High data transfer rate of max. 1 MByte/s
- Up to 15 devices can be connected
- Maximum length of the connecting cables 15 m. The length of a single connecting cable should not exceed 2 m, if many devices are used, it should not exceed 1 m.
- Wired OR if several instruments are connected in parallel

Pin assignment/p>

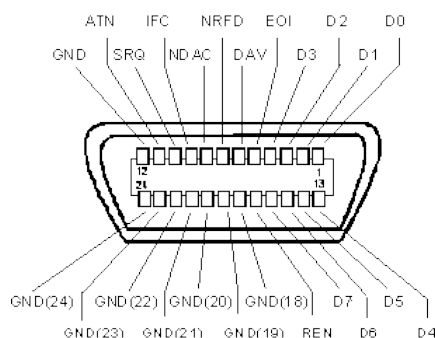

Bus lines

1. Data bus with 8 lines D0 to D7 The transmission is bit-parallel and byte-serial in the ASCII/ISO code. D0 is the least significant bit, D7 the most significant bit.

2. Control bus with five lines

IFC (Interface Clear): active LOW resets the interfaces of the instruments connected to the default setting.

ATN (Attention): active LOW signals the transmission of interface messages, inactive HIGH signals the transmission of device messages.

SRQ (Service Request): active LOW enables the connected device to send a service request to the controller.

REN (Remote Enable): active LOW permits switchover to remote control.

EOI (End or Identify): has two functions in connection with ATN:

ATN=HIGH active LOW marks the end of data transmission.

ATN=LOW active LOW triggers a parallel poll.

3. Handshake bus with three lines

DAV (Data Valid): active LOW signals a valid data byte on the data bus.

NRFD (Not Ready For Data): active LOW signals that one of the connected devices is not ready for data transfer.

NDAC (Not Data Accepted): active LOW signals that the instrument connected is accepting the data on the data bus.

The analyzer provides the following functions to communicate via GPIB bus:

- [Interface functions](#)
- [Interface messages](#)
- [Instrument messages](#)

Interface Functions

Instruments which can be controlled via GPIB bus can be equipped with different interface functions. The interface function for the network analyzer are listed in the following table.

Control character	Interface function
SH1	Handshake source function (source handshake), full capability
AH1	Handshake sink function (acceptor handshake), full capability

Control character	Interface function
L4	Listener function, full capability, de-addressed by MTA.
T6	Talker function, full capability, ability to respond to serial poll, deaddressed by MLA
SR1	Service request function (Service Request), full capability
PP1	Parallel poll function, full capability
RL1	Remote/Local switch over function, full capability
DC1	Reset function (Device Clear), full capability
DT1	Trigger function (Device Trigger), full capability

Interface Messages

Interface messages are transmitted to the instrument on the data lines, with the attention line being active (LOW). They serve to communicate between controller and instrument.

Universal Commands

Universal commands are encoded in the range 10 through 1F hex. They are effective for all instruments connected to the bus without previous addressing.

Command	QuickBASIC command	Effect on the instrument
DCL (Device Clear)	IBCMD (controller%, CHR\$(20))	Aborts the processing of the commands just received and sets the command processing software to a defined initial state. Does not change the instrument settings.
IFC (Interface Clear)	IBSIC (controller%)	Resets the interfaces to the default setting.
LLO (Local Lockout)	IBCMD (controller%, CHR\$(17))	The LOC/IEC ADDR key is disabled.
SPE (Serial Poll Enable)	IBCMD (controller%, CHR\$(24))	Ready for serial poll.
SPD (Serial Poll Disable)	IBCMD (controller%, CHR\$(25))	End of serial poll.
PPU (Parallel Poll Unconfigure)	IBCMD (controller%, CHR\$(21))	End of the parallel-poll state.

Addressed Commands

Addressed commands are encoded in the range 00 through 0F hex. They are only effective for instruments addressed as listeners.

Command	QuickBASIC command	Effect on the instrument
GET (Group Execute Trigger)	IBTRG (device%)	Triggers a previously active device function (e.g. a sweep). The effect of the command is the same as with that of a pulse at the external trigger signal input.
GTL (Go to Local)	IBLOC (device%)	Transition to the "Local" state (manual control).
PPC (Parallel Poll Configure)	IBPPC (device%, data%)	Configures the instrument for parallel poll. Additionally, the QuickBASIC command executes PPE/PPD.

Command	QuickBASIC command	Effect on the instrument
SDC (Selected Device Clear)	IBCLR (device%)	Aborts the processing of the commands just received and sets the command processing software to a defined initial state. Does not change the instrument setting.

Instrument Messages


Instrument messages (commands) are transferred on the data lines of the GPIB bus while the *ATN* line is not active. ASCII code is used.

Structure and syntax of the instrument messages are described the [SCPI Reference](#) chapter. The chapter also provides a detailed description of all messages implemented by the analyzers.

Universal Interface

Universal Interface

A network analyzer which is equipped with option R&S ZVAB-B14, Universal Interface, can interact with an external part handler. The digital control signals on the interface connector indicate the possible start and the end of a measurement, as well as a global limit check result. Typically, the handler will insert the device to be tested into a test fixture, provide a trigger pulse to initiate the measurement, remove and replace the device after the measurement is complete and sort it into pass/fail bins. A sample flow diagram for this process is shown below.

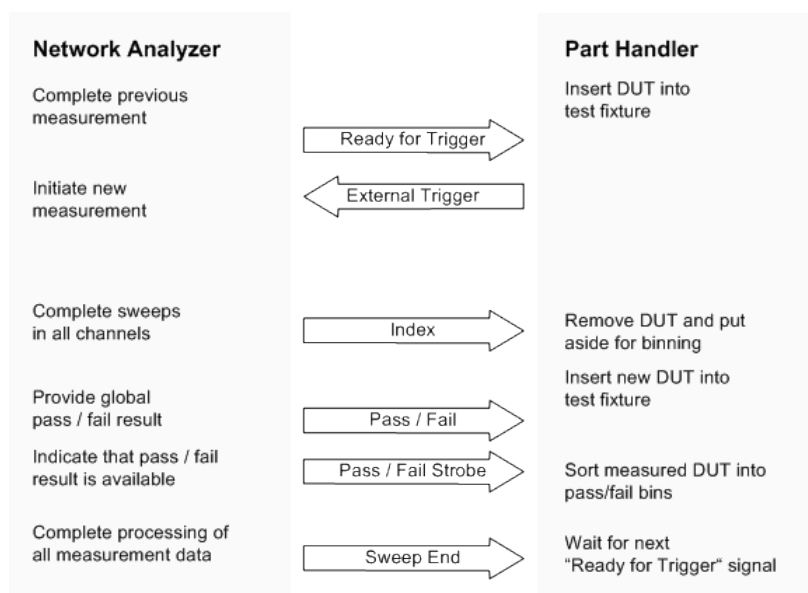

Possible stages of an automated test



Preparation of the network analyzer and the part handler

The network analyzer configuration depends on the measurement to be made. Starting from the preset state, you will usually have to adjust the following settings:


- Enable external trigger: *Channel – Sweep – Trigger – External*
- (Optional:) Select single sweep mode: *Channel – Sweep – Single(All Chans)*
- Define limit lines and enable the limit check: *Trace – Lines – Define Limit Line....*

The Universal Interface connector must be connected to the part handler using an appropriate cable. If required, configure the data ports to ensure that the network analyzer and the part handler are compatible.

Control Signals

Most of the signals in the figure below are controlled by the measurement. It is possible though to configure the *Output 1* and *Output 2* signals and to route the *Index* and *Ready for Trigger* signals using SCPI commands.

- The `CONTROL:HAndler:OUTPut<port>... commands` set the output signals to a definite state and specify whether this state will change to "Low" when the *Input 1* signal goes to "Low". This mechanism provides either static output signals or output signals which are controlled by *Input 1*.
- The *Index* and *Ready for Trigger* signals can be routed to pins 20 and 21 of the Universal Interface connector, where they replace the PORT B6 and PORT B7 input/output signals. See section [Data Ports](#) below.

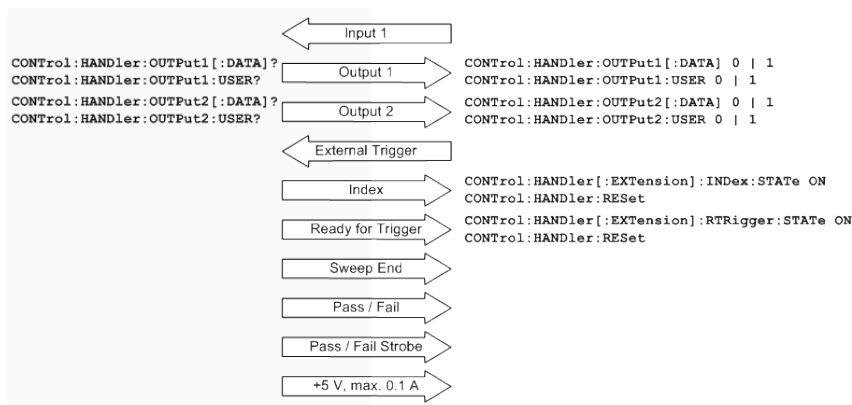

Control signals and power supply


Remote control: `CONTROL:HAndler...`

Data Ports

In addition to the control signals, the Universal Interface provides four bi-directional data ports A, B, C, D. The data ports must be configured explicitly using SCPI commands; they are not controlled by the measurement.

- With an output data port you can configure the part handler or other devices used in testing from the network analyzer.
- With an input data port you can configure the network analyzer using external signals and an appropriate control program.


Device configurations via data port signals are usually performed in a preliminary stage, prior to the actual measurement sequence. If the *Index* and *Ready for Trigger* signals are enabled at this stage (see section [Control Signals](#)), they replace the PORT B6 and PORT B7 signals. Port B can still be used as a 6-bit parallel input/output port.

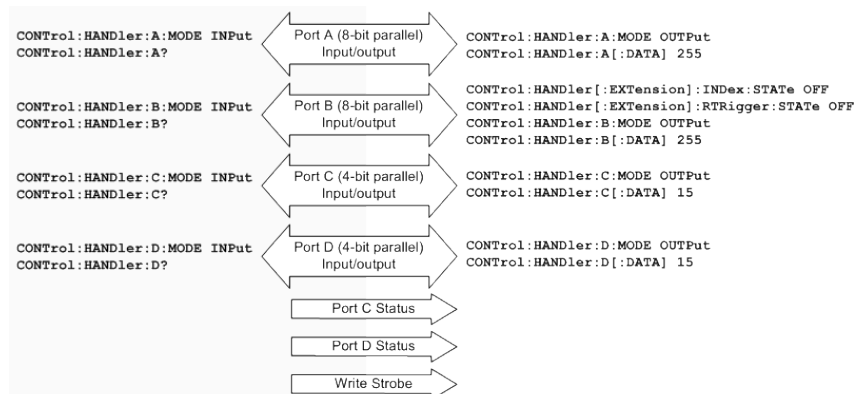

Data ports and related signals

Combined ports (Port E and Port F)

A combination of ports A / B and ports C / D provides two additional 16-bit and 8-bit-wide bidirectional ports. The combined ports are termed ports E and F, respectively.

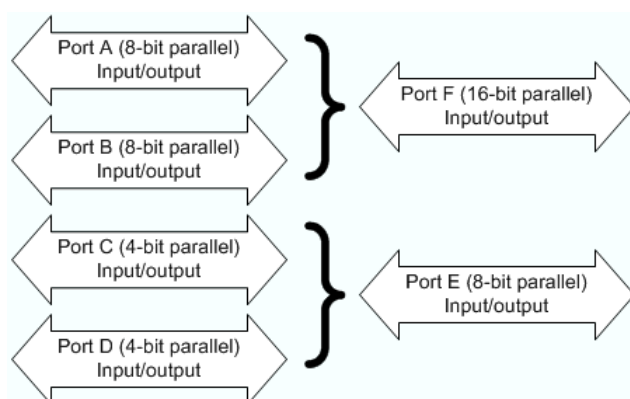

Definition of port E and port F


The properties of the combined ports are as follows:

- The signal direction (input or output) is according to the configuration of ports A, B, C, and D. To write data to port E (F), both port C and port D (A and B) must be configured as output ports.
- Data can be read and written using the `CONTROL:HANDLER:E[:DATA]` and `CONTROL:HANDLER:F[:DATA]` commands.
- The bit order is D3 ... D0 C3 ... C0 (port E) and B7 ... B0 A7 ... A0 (port F).

Remote control: `CONTROL:HANDLER...`

Universal Interface Connector

Option R&S ZVAB-B14, Universal Interface, must be installed by an R&S service representative. The option includes a Centronics 36 input/output connector which is placed in the top left panel of the rear panel. The pin assignment of the connector is shown below. A slash (/) at the beginning of the signal name indicates that it is an active low (negative logic) signal.

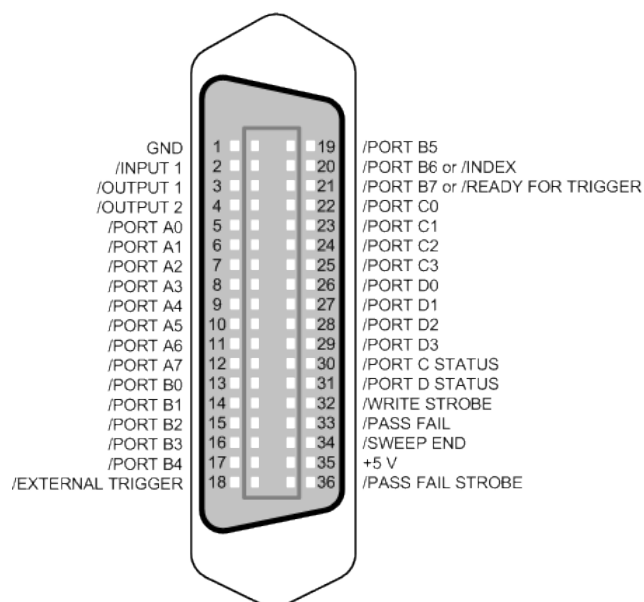


Pin assignment of the Universal Interface connector

The input and output signals at the connector are described below.

Pin No.	Signal	Input (I) or Output (O)	Function
1	GND	—	Ground
2	/INPUT 1	I	When a negative pulse is fed to this port, the /OUTPUT 1 and /OUTPUT 2 signals (pins no. 3 and 4) change to "Low".
3	/OUTPUT 1	O	Changes to "Low" when the /INPUT 1 (pin no. 2) receives a negative pulse.
4	/OUTPUT 2	O	Changes to "Low" when the /INPUT 1 (pin no. 2) receives a negative pulse.
5	/PORT A0	I or O	Port A, bit no. 0 (8-bit parallel input or output port)
6	/PORT A1	I or O	Port A, bit no. 1
7	/PORT A2	I or O	Port A, bit no. 2
8	/PORT A3	I or O	Port A, bit no. 3
9	/PORT A4	I or O	Port A, bit no. 4
10	/PORT A5	I or O	Port A, bit no. 5
11	/PORT A6	I or O	Port A, bit no. 6
12	/PORT A7	I or O	Port A, bit no. 7
13	/PORT B0	I or O	Port B, bit no. 0 (8-bit parallel input or output port)
14	/PORT B1	I or O	Port B, bit no. 1
15	/PORT B2	I or O	Port B, bit no. 2


Pin No.	Signal	Input (I) or Output (O)	Function
16	/PORT B3	I or O	Port B, bit no. 3
17	/PORT B4	I or O	Port B, bit no. 4
18	/EXTERNAL TRIGGER	I	External trigger signal
19	/PORT B5	I or O	Port B, bit no. 5
20	/PORT B6 or /INDEX	I or O O	Port B, bit no. 6 The /INDEX signal changes to "Low" when a measurement is complete (all sweeps in all channels have been performed; the DUT can be removed, but the measurement results may not be valid yet).
21	/PORT B7 or /READY FOR TRIGGER	I or O O	Port B, bit no. 7 The /READY FOR TRIGGER signal changes to "Low" when the analyzer is ready to receive a trigger for a new measurement.
22	/PORT C0	I or O	Port C, bit no. 0 (4-bit parallel input or output port)
23	/PORT C1	I or O	Port C, bit no. 1
24	/PORT C2	I or O	Port C, bit no. 2
25	/PORT C3	I or O	Port C, bit no. 3
26	/PORT D0	I or O	Port D, bit no. 0 (4-bit parallel input or output port)
27	/PORT D1	I or O	Port D, bit no. 1
28	/PORT D2	I or O	Port D, bit no. 2
29	/PORT D3	I or O	Port D, bit no. 3
30	/PORT C STATUS	O	Indicates the status of port C: – Low: port C is an input port – High: port C is an output port
31	/PORT D STATUS	O	Indicates the status of port D: – Low: port D is an input port – High: port D is an output port
32	/WRITE STROBE	O	Changes to "Low" when valid data is present at any of the output ports (i.e. when the output level at any port changes).
33	/PASS FAIL	O	Indicates the status of the global limit check for the last measurement: – Low: global limit check failed – High: global limit check passed
34	/SWEEP END	O	Indicates the end of the measurement. Changes to "Low" after all sweeps in all channels have been completed and the measurement data has been processed.
35	+5 V DC	O	DC power supply for external devices; +5 V $\pm$ 250 mV, max. 0.1 A
36	/PASS FAIL STROBE	O	Changes to "Low" when limit check results are present on /PASS FAIL (pin no. 33).

All digital input signals must be TTL compatible with an allowed input voltage range between –0.5 V and +5.5 V. The circuit diagram of the input path is shown below.

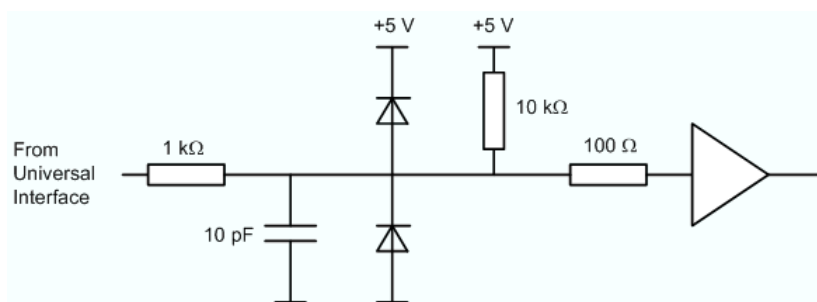

Circuit diagram of the input path

Digital output signals are low-voltage TTL compatible with output voltages between 0 V and +3.3 V. The circuit diagram of the output path is shown below.

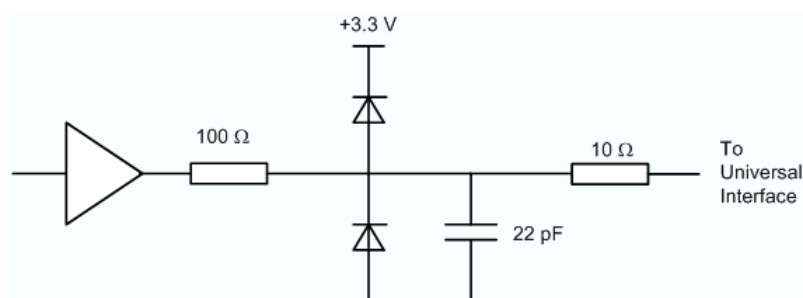

Circuit diagram of the output path


The default configuration of the signals is listed below. Notice that *RST or *Preset* do not change the configuration of the Universal Interface. Use [CONTrol:HANDler:RESet](#) to restore default values.

Signal	*RST Configuration
Port A, Port B	Output ports, all bits "High" (decimal 0)
Port C, Port D	Input ports
/PORT C STATUS, /PORT D STATUS	"Low"
/OUTPUT 1, /OUTPUT 2	"High"
/SWEEP END	"High"
/PASS_FAIL	"High"

Remote control: [CONTrol:HANDler:RESet](#) (resets all configurable signals)

Timing of Control Signals

The timing of the essential measurement control signals is shown in the figure below. The duration of the shaded time intervals depends on the measurement settings.

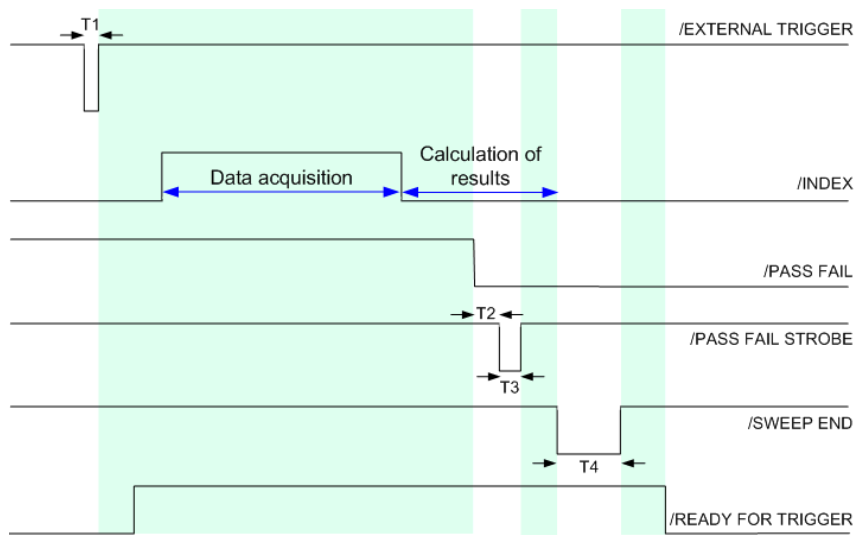

Timing of measurement control signals

The figure above contains the following pulse durations and response times.

Time	Description	Value
T1	Pulse duration of /EXTERNAL TRIGGER	Minimum value: 1 μ s
T2	Response time of /PASS FAIL STROBE	1 μ s
T3	Pulse duration of /PASS FAIL STROBE	1 μ s
T4	Pulse duration of /SWEEP END	12 μ s

The timing of the data port signals and the input/output signals is as follows:

- The low pulse of the /WRITE STROBE signal occurs approx. 0.1 μ s after a value is written to the output ports A to D. The pulse duration of the /WRITE STROBE signal is 1 μ s.
- The low pulse of the /OUTPUT 1 or /OUTPUT 2 signals (if enabled) occur approx. 0.4 μ s and 0.6 μ s after the falling edge of the /INPUT 1 signal. The minimum pulse duration of the /INPUT 1 signal is 1 μ s.

Configuration Files for External Devices

The network analyzer provides configuration files for many external power meters and generators. When an external device is configured in the *System Configuration* dialog, the analyzer loads its configuration file and accounts for the settings made as far as possible.

The following sections describe the configuration files and their parameters.

General Rules for Configuration Files

The following rules apply to power meter and generator configuration files.

- All configuration file entries may appear in arbitrary order.
- A command line starting with a semicolon (;) is interpreted as a (non-executable) comment line.
- "Unnecessary" parameters (e.g. list mode parameters for generators which do not support list

mode) are ignored and cause a warning, if logging is activated.

- In case of configuration file errors, the external device is marked with the symbol  in the *System Configuration* dialog, and the external device is not available for use.
The following conditions are checked and treated as errors:
 - Multiple occurrence of a configuration file entry
 - Presence of any additional, unsupported entry
 - Missing "mandatory" parameters. Some of the "mandatory" parameters are not utilized by the network analyzer although they must be included in the configuration files.
- Optional parameters:
A missing "optional" parameter is identical to an entry with empty string; i.e. the following 2 lines are equivalent:


```
; GENERATORREFEXT
GENERATORREFEXT =
```
- SCPI command sequence:
It is possible combine several SCPI-commands, separated by semicolons, into one command line.
Example:


```
GENERATORINIT = *RST;*CLS;*PSC 1;*ESE 0;*SRE 16;:LEVEL:RF ON
```
- It is not allowed to use *OPC and *OPC? in a command sequence (creates an error message in case of activated error logging).
For command synchronization, the POWERMEASUREOPC and GENERATORUSEOPC mechanisms must be used.
- Unless otherwise specified by the optional POWERMEAS_COMMANDPREFIX and GENERATOR_COMMANDPREFIX parameters, a *CLS command is prepended to every SCPI-command.

Naming Conventions for Automatic Detection

The configuration files are stored in the `Network Analyzer\resources\extdev` subdirectory of the analyzer's installation directory. Power meter configuration files have a file extension `*.pwm`; generator files an extension `*.gen`. A correct file name is essential for automatic detection of the external devices.

The names of the pre-installed configuration files are composed of the <device type> identifier in the *IDN? string and the extension. The general format of the *IDN? string is:

```
"<manufacturer>,<device type>,<serial number>,<firmware version>
```

Example: "Rohde&Schwarz,SMU200A,1141.2005k02/102753,2.1.72.0-02.05.222.34"

--> The configuration file name is `SMU200A.gen`.

The analyzer also recognizes similar file names, provided they fulfil the following conditions:

- The filename and the model name match until the first numerical digit (e.g. `SMU222A.gen` instead of `SMU200A.gen`).
- The filename contains the model name (e.g. `R&S_SMU200A.gen` instead of `SMU200A.gen`).
- The model name contains the file name (e.g. `SMU200.gen` instead of `SMU200A.gen`).

The analyzer automatically complements a missing <serial number> in the *IDN? string.

Power Meter Parameters

The following parameter set is used to control external power meters from the network analyzer.



The "mandatory" parameters must be included in every power meter configuration file; see [General Rules for Configuration Files](#).

Parameter	Status	Description
POWERMEASMINFRQ	mandatory	Minimum input frequency [Hz] Example: POWERMEASMINFRQ = 100e3
POWERMEASMAXFRQ	mandatory	Maximum input frequency [Hz] Example: POWERMEASMAXFRQ = 110e9
POWERMEASMINPOW	mandatory	Minimum input power [dBm] Example: POWERMEASMINPOW = -40
POWERMEASMAXPOW	mandatory	Maximum input power [dBm] Example: POWERMEASMAXPOW = 20
POWERMEASINIT	mandatory	SCPI-Command or command sequence sent to the power meter for initialization Example: :UNIT:POW DBM;:AVER:COUN:AUTO ON
POWERMEASUSEOPC	mandatory	Select operation complete synchronization method. After every command, do the following (depending on the value set): 0 = Add delay times, defined by POWERMEASUSEDDELAY, POWERMEASINITDELAY, POWERMEASUSEZERROADJUSTDELAY (see below) 1 = Add *OPC IEEE 488 command 2 = Wait for SRQ, but do not add *OPC command 3 = Add *OPC? IEEE 488 command Example: POWERMEASUSEOPC = 3 --> InitCmd *RST;:ABOR;:INIT:CONT OFF is extended to *RST;:ABOR;:INIT:CONT OFF;*OPC?
POWERMEASUSEDDELAY	mandatory (ignored, if POWERMEASUSEOPC != 0)	Delay time [sec] after every command Used only if POWERMEASUSEOPC = 0 Example: POWERMEASINITDELAY = 1.0
POWERMEASINITDELAY	mandatory	Wait time after initialization [sec] Used only if POWERMEASUSEOPC = 0 Example: POWERMEASINITDELAY = 1.0 POWERMEASINITDELAY = 2
POWERMEASZERROADJUST	mandatory	SCPI-command to define zero adjust Example: :CAL2:ZERO:AUTO ONCE
POWERMEASUSEZERROADJUSTDELAY	mandatory	Wait time [sec] after sending the POWERMEASZERROADJUST

Configuration Files for External Devices

Parameter	Status	Description
		command Used only if POWERMEASUSEOPC = 0 Example: <pre>POWERMEASUSEZERROADJUSTDELAY = 0.5</pre>
POWERMEASQUERY	mandatory	SCPI-Command to query and retrieve the measurement result Example: <pre>:INIT1;:FETC2?</pre>
POWERMEASUSECORR	mandatory	1 = Parameter POWERMEASCORR is mandatory; i.e. the power meter can do the correction. 0 = Parameter POWERMEASCORR is optional.
POWERMEASCORR	mandatory, if POWERMEASUSECORR = 1, else optional	SCPI-Command to send the current measurement frequency for the internal correction to the power meter. Format: <Command> <Freq format> Where: Command: SCPI command to set the frequency Freq format: Defines the frequency format for double values according to C++ printf rules. Examples: <pre>:SENS:FREQ %.5e :SENS:FREQ:CW %f</pre>
POWERMEASCORR_FREQUNIT	optional	Frequency unit in the command POWERMEASCORR Possible values: Hz (default) kHz MHz GHz Note: required for Elva W-freq band power meter Example: <pre>POWERMEASCORR_FREQUNIT = GHz</pre>
POWERMEASERRORMODE	mandatory	Error detection mode. Possible values: None No error detection STB5 For Rohde & Schwarz power meters NRV and NRVS: An error sets bit no. 5 in the status byte; no detection of the error reason. IEEE The instrument must support an IEEE 488.1-compliant status byte (STB) and event status register (ESR). STB bit no. 5 means that an ESR bit is set. The ESR bits have the following meaning: Bit 2: query error Bit 3: device-dependent error Bit 4: execution error Bit 5: Command error SCPI The instrument is SCPI-compliant. The STB bit no. 2 indicates that the error queue contains a message. If this bit is set, the error queue is read using the <code>SYSTem:ERRor?</code> query. If the STB bit no. 2 is not set, the analyzer proceeds as described for IEEE: If the STB bit no. 5 is set, the ESR bit no. 2 to 5 are evaluated.
POWERMEAS_SPLITCOMMANDS	optional	Qualifies whether or not to split SCPI command sequences into individual commands. 0: false (default) 1: true (= split command sequence) Example: 'SYST2:PRES; UNIT:POW DBM' is split into <pre>*CLS (if POWERMEAS_COMMANDPREFIX = *CLS</pre>

Parameter	Status	Description
		or no POWERMEAS_COMMANDPREFIX definition) SYST2: PRES UNIT: POW DBM *OPC or *OPC? (if POWERMEASUSEOPC = 1 or 3)
POWERMEASEXIT	mandatory	For future extensions.
POWERMEAS_COMMANDPREFIX	optional	Defines the string to be used as prefix for any sent command. If there is no POWERMEAS_COMMANDPREFIX definition, the default value "CLS" is used, otherwise the defined string. Remark: The defined string may be empty! "POWERMEAS_COMMANDPREFIX = *CLS" has the same effect as no POWERMEAS_COMMANDPREFIX definition. "POWERMEAS_COMMANDPREFIX = " has the effect that no prefix is added. If the defined prefix is not empty, a semicolon (";") is automatically added by the firmware.
POWERMEASSETUP	optional	Setup command on every measurement point before sending the POWERMEASQUERY command; May be used for measurement preparation. Command sequence for every measurement point: POWERMEASSETUP (optional) POWERMEAS_SETUPDELAY (optional) POWERMEASQUERY POWERMEAS_CONVERSION (optional)
POWERMEAS_SETUPDELAY	optional	Additional delay time [sec] after POWERMEASSETUP command; May be used for measurement preparation (optional). Default value = 0.
POWERMEAS_CONVERSION	optional	Optional conversion factor for the measured value obtained by POWERMEASQUERY. May be used e.g. to convert the measured value into [dBm], in case that the external device delivers the measurement result in a different unit. Format: Math expression as string, with the measured value as ,Data'. Examples: 10 * Data + 2 2.5E-3 * log (Data) - 5 + Data Supported operators: +, -, *, /, ^, () Supported functions: ln, log, abs, sqrt Supported constants: e, Pi The function/constant names are identical and consistent with the NWA firmware.

Generator Parameters

The following parameter set is used to control external generators from the network analyzer.



The "mandatory" parameters must be included in every generator configuration file; see [General Rules for Configuration Files](#). "Unnecessary" parameters are ignored.

Configuration Files for External Devices

Parameter	Status	Description
GENERATORMINFRQ	mandatory	Minimum output frequency [Hz] Example: GENERATORMINFRQ = 300e3
GENERATORMAXFRQ	mandatory	Maximum output frequency [Hz]
GENERATORMINPOW	mandatory	Minimum output power [dBm]
GENERATORMAXPOW	mandatory	Maximum output power [dBm]
GENERATORINIT	mandatory	SCPI command sequence sent to the generator for initialization. This command has to: - Clear and reset status - Set the (frequency and) power to initial values - Set trigger and blank polarity - Set frequency mode to fixed/CW freq - Delete all fast sweep lists It is not allowed to set/modify the reference frequency in the GENERATORINIT command! Reason: You can modify the reference frequency manually and independent of the configuration file. During initialization, the reference is set via GENERATORREFEXT / GENERATORREFINTERN. The GENERATORINIT command is sent to the generator every time the sweep settings are changed (<i>Preparing Sweep</i>). Example: <pre>GENERATORINIT = *RST;*CLS;:LIST:DEL:ALL;*ESE 1;*SRE 32;:POW - 100DBM;:OUTP ON;:SOUR:INP:TRIG:SLOP POS;:OUTP:USER1:SOUR ABL</pre>
GENERATORINITDELAY	mandatory	Time needed after initialization (delay time) [sec]
GENERATORERRORMODE	mandatory	Error detection mode. Possible values: None No error detection STB5 For Rohde & Schwarz power meters NRV and NRVS: An error sets bit no. 5 in the status byte; no detection of the error reason. IEEE The instrument must support an IEEE 488.1-compliant status byte (STB) and event status register (ESR). STB bit no. 5 means that an ESR bit is set. The ESR bits have the following meaning: Bit 2: query error Bit 3: device-dependent error Bit 4: execution error Bit 5: Command error SCPI The instrument is SCPI-compliant. The STB bit no. 2 indicates that the error queue contains a message. If this bit is set, the error queue is read using the <code>SYSTem:ERRor?</code> query. If the STB bit no. 2 is not set, the analyzer proceeds as described for IEEE: If the STB bit no. 5 is set, the ESR bit no. 2 to 5 are evaluated.
GENERATORUSEOPC	mandatory	Select operation complete synchronization method. After every command, do the following (depending on the value set):

Configuration Files for External Devices

Parameter	Status	Description
		0 = Add delay times, defined by GENERATORUSEDLAY (see below) 1 = Add *OPC IEEE 488 command 2 = Wait for SRQ, but do not add *OPC command 3 = Add *OPC? IEEE 488 command Example: <pre>GENERATORUSEOPC = 3 --> InitCmd *RST;:ABOR;:INIT:CONT OFF is extended to *RST;:ABOR;:INIT:CONT OFF;*OPC?</pre>
GENERATORUSEDLAY	mandatory, if GENERATORUSEOPC = 0, else unnecessary	Delay time [sec], used as synchronization period after every SCPI command, if GENERATORUSEOPC = 0.
GENERATORFREQ	mandatory	SCPI-Command to set the generator frequency [Hz]. Format: <Command> <Freq format> Where: Command: SCPI command to set the frequency Freq format: Defines the frequency format for double values according to C++ printf rules. Examples: :SOUR:FREQ %lf Hz :SOUR:FREQ %5e
GENERATORLEVEL	mandatory	SCPI command to set the generator power [dBm]. Format: <Command> <Power format> Command: SCPI command to set the power Power format: Defines the power format for double values according to the C++ printf rules Example: :POW %lf DBM
GENERATORRFOFF	mandatory	SCPI command to turn RF output OFF Example: :OUTP:STAT OFF
GENERATORRFON	mandatory	SCPI command to turn RF output ON Example: :OUTP:STAT ON
GENERATORREFEXT	optional	SCPI command to set reference oscillator to EXT. Optional parameter, as not every generator supports this command. Example: <pre>:ROSC:EXT:FREQ 10e6;:ROSC:SOUR EXT</pre>
GENERATORREFINTERN	optional	SCPI command to set reference oscillator to INT Optional parameter, as not every generator supports this command. Example: <pre>:ROSC:SOUR INT</pre>
GENERATORIECAVAIL	mandatory	Qualifies whether list mode is available (i.e. whether the generator supports hardware handshake)? IEC = List mode not supported TTL = List mode supported In list mode the generator steps through a predefined list of frequencies or signal powers via hardware handshake. This is supported with Rohde & Schwarz generators only.
GENERATORNOFLISTS	Mandatory if GENERATORIECAVAIL =	Maximum number of lists for generator list mode [int]

Parameter	Status	Description
	TTL, else unnecessary	
GENERATORNOFPOINTSPELIST	Mandatory if GENERATORIECAVAIL = TTL, else unnecessary	Maximum number of points per list for generator list mode [int]
GENERATORLISTMAX	Mandatory if GENERATORIECAVAIL = TTL, else unnecessary	Maximum number of points for all lists together [int]
GENERATOR_TRIGPULSE_WIDTH	Mandatory if GENERATORIECAVAIL = TTL, else unnecessary	Trigger pulse length [sec]
GENERATORREADYINVALIDTIME	Mandatory if GENERATORIECAVAIL = TTL, else unnecessary	Settling time after blank-signal [sec] if blank-signal is ready and GENERATORREADYINVALIDTIME elapsed -> the external generator should be ready and we can start the measurement.
GENERATORINITLIST	Mandatory if GENERATORIECAVAIL = TTL, else unnecessary	SCPI command to activate and initialize the list mode. The command has to: - Select list mode - Set step-by-step processing mode of the list - Set trigger source to external - Set external trigger on rising slope The command does not include the transmission of the list data (-> this is done via GENERATORFREQLIST / GENERATORLEVELLIST) Example: SOUR:LIST:MODE STEP; :SOUR:LIST:TRIG:SOUR EXT; :INP:TRIG:SLOP POS; :SOUR:LIST:RES
GENERATORSELECTLISTBYNAME	Mandatory if GENERATORIECAVAIL = TTL, else unnecessary	SCPI command to select a named list / create a new list. Format: <Command> "%s" %s = list name place holder If FULL_MULTI_LIST_MODE = 0, the list is sent to the generator. Example: :LIST:SEL "%s"
GENERATORDELETELISTBYNAME	Mandatory if GENERATORIECAVAIL = TTL, else unnecessary	SCPI command to deactivate the list mode and delete the named list. Format: <Command> %s %s = list name place holder The command must switch to CW mode first and set the power to minimum. Then, it must delete the list. Example: :FREQ:MODE CW; :POW -20DBM; :LIST:DEL "%s"
GENERATORFREQLIST	Mandatory if GENERATORIECAVAIL = TTL, else unnecessary	SCPI command to send a frequency list to the generator (comma-separated ASCII format). Format: <Command> %s %s = parameter for ascii data Example: :FORM ASC; :LIST:FREQ %s
GENERATORLEVELLIST	Mandatory if GENERATORIECAVAIL = TTL, else unnecessary	SCPI command to send a power level list to the generator (comma separated ASCII-format). Format: <Command> %s

Configuration Files for External Devices

Parameter	Status	Description
		%s = parameter for ascii data Example: :FORM ASC;:LIST:POW %s
GENERATORFREQLISTBLOCK	Optional if GENERATORIECAVAIL = TTL, else unnecessary	SCPI command to send a frequency list to the generator ("real, 64" block data format). If this command is not used in the configuration file, the list is sent in ASCII format using GENERATORFREQLIST. Block data format is recommended (if possible), because it reduces the amount of data to be transferred over GPIB bus or LAN. Format: <Command> %s %s = parameter for block data Example: :FORM REAL,64;:LIST:FREQ %s
GENERATORLEVELLISTBLOCK	Optional if GENERATORIECAVAIL = TTL, else unnecessary	SCPI command to send a power level list to the generator ("real, 64" block data format). If this command is not used in the configuration file, the list is sent in ASCII format using GENERATORLEVELLIST. Block data format is recommended (if possible), because it reduces the amount of data to be transferred over GPIB bus or LAN. Format: <Command> %s %s = parameter for block data Example: :FORM REAL,64;:LIST:POW %s
FULL_MULTI_LIST_MODE	Mandatory if GENERATORIECAVAIL = TTL, else unnecessary	0 = after every selection of a list, the command GENERATORLEARNLIST is sent to the generator in order to learn the list. 1 = learn list not required after list selection. --> command GENERATORLEARNLIST is not sent after list selection. This parameter not necessary for most generators; it is required e.g. for the R&S SMP.
GENERATORLEARNLIST	Optional if GENERATORIECAVAIL = TTL, else unnecessary	SCPI command to start the "learn list" function after transfer or modification of the list data. Neither the list name (as for GENERATORSELECTLISTBYNAME) nor a list of frequencies or power levels is sent to the generator. The R&S SMP generator requires this command after a list selection. It is not needed for most other generators. Example SMP: :SOUR:LIST:LEAR
GENERATORRESETLIST	Mandatory if GENERATORIECAVAIL = TTL, else unnecessary	SCPI command to reset the list (index) to the starting point. This command is used after list selection, if the GENERATORLEARNLIST command is empty. Example: :SOUR:LIST:RES
GENERATOR_SPLITCOMMANDS	Optional	Qualifies whether or not to split SCPI command sequences into individual commands. 0: false (default) 1: true (= split command sequence) Example: 'SYST2:PRES; UNIT:POW DBM' is split into *CLS (if GENERATOR_COMMANDPREFIX


Parameter	Status	Description
		= *CLS or no GENERATOR_COMMANDPREFIX definition) SYST2:PRES UNIT:POW DBM *OPC or *OPC? (if GENERATORUSEOPC = 1 or 3)
GENERATOR_COMMANDPREFIX	Optional	Defines the string to be used as a prefix for any sent command. If no GENERATOR_COMMANDPREFIX is defined, the default value *CLS is used. Remark: It is possible to define an empty string . "GENERATOR_COMMANDPREFIX = *CLS" has the same effect as no GENERATOR_COMMANDPREFIX definition. "GENERATOR_COMMANDPREFIX = " has the effect that no prefix is added. If the defined prefix is not empty, a semicolon (";") is automatically added by the firmware.
GETGENERATORMINFRQ	Optional	minimum output frequency [Hz] SCPI command to query the generator for its minimum output frequency. If the query fails, the static value GENERATORMINFRQ is returned. Example (smb100a): GETGENERATORMINFRQ = FREQ? MIN
GETGENERATORMAXFRQ	Optional	maximum output frequency [Hz] SCPI command to query the generator for its maximum output frequency. If the query fails, the static value GENERATORMAXFRQ is returned. Example (smb100a): GETGENERATORMAXFRQ = FREQ? MAX
GETGENERATORMINPOW	Optional	minimum output power [dBm] SCPI command to query the generator for its minimum output power. If the query fails, the static value GENERATORMINPOW is returned. Example (smb100a): GETGENERATORMINPOW = POW? MIN
GETGENERATORMAXPOW	Optional	maximum output power [dBm] SCPI command to query the generator for its maximum output power. If the query fails, the static value GENERATORMAXPOW is returned. Example (smb100a): GETGENERATORMAXPOW = POW? MAX

Generator List Mode (Fast Sweep)


In *Fast Sweep* mode, the analyzer uses a trigger handshake mechanism in order to control the generator's list mode:

- The generator sends an EXT GEN BLANK signal to pin no. 22 of the USER CONTROL connector on the rear panel of the analyzer to show that it is ready to step to the next frequency or power value in the list.
- The analyzer transmits an EXT GEN TRG signal at pin no. 21 of the USER CONTROL connector

in order to switch the generator to the next point in the list. Afterwards the analyzer waits for the next EXT GEN BLANK signal.

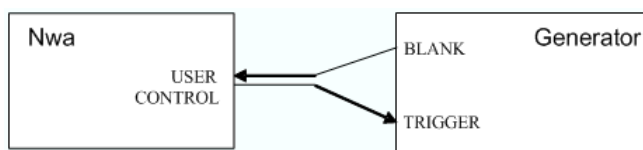

The timing of the control signals is shown below.

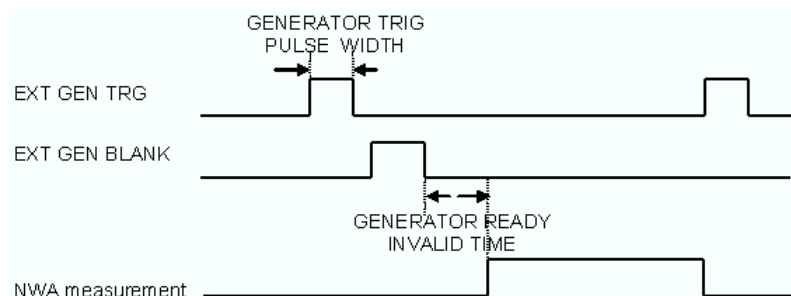

Hardware-related settings:

- **EXT GEN TRG signal:** The network analyzer uses a positive edge to trigger the generator. The correct trigger edge polarity has to be set in the `GENERATORINIT` command.
- **EXT GEN BLANK signal:** The signal duration can be set at the generator.

The following list shows the Rohde & Schwarz signal generators that support the fast sweep mode.

Generator type	Description	List mode characteristics
SMA100	RF analog up to 3 GHz / 6 GHz	
SMB100A	RF analog up to 6 GHz / 12 GHz	
SMF100A	Microwave generator 43 GHz	Must set <code>OUTPut:BLANk:MODE ON</code> (After every <code>*RST</code> command, <code>BLANk:MODE</code> will be reset to <code>AUTO</code>).
SMR	Microwave generator, cost-effective, 20 GHz 40 GHz	
SMU200A	RF vector high-end up to 6 GHz	
SMATE200A	RF vector = SMU200A without GUI, only remote	
SMJ100A, SMBV100A	RF vector signal generator up to 6 GHz	
SMP		Requires <code>LEARN</code> command after every list selection and modification.

Required settings to operate the instrument in list mode:

1. Create a list.

A list is created by selecting a list which does not exist yet using the command `GENERATORSELECTLISTBYNAME`.

2. Fill the list with values.

GENERATORFREQLIST / GENERATORFREQLISTBLOCK (Frequency data)
GENERATORLEVELLIST / GENERATORLEVELLISTBLOCK (Power data)

All list components must be of the same length.

3. Select a list.

GENERATORSELECTLISTBYNAME

Note: A list must be selected before the list mode can be activated.

4. Initialize and activate list mode.

GENERATORINITLIST

5. Delete a list.

A list can be deleted only when unselected. For this reason, this command has to switch to CW mode first (= deactivate list mode) before deleting the list.

6. Deactivate the list mode (= switch to CW mode):

Currently done by deleting all lists.

Maintenance

The network analyzer does not require any special maintenance. Make sure that the air vents are not obstructed. The outside of the instrument is suitably cleaned using a soft, lint-free dust cloth.



Attention!

Never use solvents such as thinners, acetone and similar things, as they may damage the front panel labeling or plastic parts.

The address of our support center and a list of useful contact addresses can be found on the *Contact* page.

Storing and Packing

The network analyzer can be stored at the temperature range quoted in the data sheet. When it is stored for a longer period of time the instrument should be protected against dust.

The original packing should be used, particularly the protective caps at the front and rear, when the instrument is to be transported or dispatched. If the original packing is no longer available, use a sturdy cardboard box of suitable size and carefully wrap the instrument to protect it against mechanical damage.

Error Messages, Troubleshooting

An error generally causes the analyzer to display a tooltip across the lower part of the screen. The tooltip provides a textual description of the error, e. g.:

Remote Error : -222, "Data out of range;FREQ:STAR.1"

The errors can be divided into three categories:

- Remote errors (SCPI errors) may occur during the execution of a remote control program. They include an error code, followed by the short description of the error. Remote errors are specified and described in the SCPI standard; they are cleared upon *CLS.
- Software errors (setting errors) can occur e.g. if numeric entries in an analyzer dialog are incompatible with each other or with the current analyzer state. These errors are generally self-explanatory and easy to correct.
- Hardware errors indicate an incorrect hardware state. Some of the hardware errors cause the instrument to be switched off in order to avoid damage. Hardware errors with possible causes and remedies are listed below.



A misspelled command header causes SCPI error –113, "Undefined header;..."; a misspelled parameter causes SCPI error –141, "Invalid character data;...". The [GPIB explorer](#) provides a list of all supported commands and their character data parameters.



Hardware error categories

Hardware errors can be detected at various stages of the start-up or measurement procedure.

- **Configuration errors** occur on start-up of the analyzer, e.g. if a hardware module or configuration file cannot be detected. Configuration errors cause an entry in the error log (*Info – [Error Log](#)*).
- **Asynchronous errors** can occur any time while the analyzer is operating. The analyzer is checked periodically for asynchronous errors.
- **Measurement errors** are due to inadmissible hardware settings and states during the measurement process.

Configuration Errors

Configuration errors occur on start-up of the analyzer, e.g. if a hardware module or configuration file cannot be detected. Configuration errors cause an entry in the error log (*Info – [Error Log](#)*).

Error	Description	Remedy
FMRxx CPU board requires Netcon Digital PCI version 8.5 or higher for maximum performance!	The analyzer is equipped with a CPU board FMR9 or higher, but the PCINT FPGA wasn't upgraded to version 8.5 or higher.	The analyzer is still functional but for maximum performance the FPGA upgrade should be performed by R&S service.

Asynchronous Errors

Asynchronous errors can occur any time while the analyzer is operating. The analyzer is checked periodically for asynchronous errors. Many of these errors also cause an entry in the status reporting system.

Error	Description	Remedy	Bit no. *)
Instrument temperature is too high	The analyzer detects that the instrument temperature is too high. After three warnings, the analyzer is shut down.	Reduce ambient temperature, keep ventilation holes of the casing unobstructed.	7

Error	Description	Remedy	Bit no. *)
Receiver overload protection tripped	The analyzer detects an excessive input level at one of the ports. If this condition persists, all internal and external generators are switched off (<i>Channel – Power Bandwidth Average – RF Off</i>).	Reduce RF input level at the port. Check amplifiers in the external test setup.	3
Reference frequency lock failure	With external reference signal (<i>System – External Reference</i> active) or option ZVAB-B4 (oven quartz), the reference oscillator is phase locked to a 10 MHz signal. The message appears when this phase locked loop (PLL) fails.	For external reference: check frequency and level of the supplied reference signal.	1
Converter clock frequency lock failure	The clock generator for the AD converter clock is phase locked to the reference oscillator. The message appears when this PLL fails.	–	–
Oven cold	With option R&S ZVAB-B4, oven quartz: The oven temperature is too low.	Wait until the oven has been heated up	8

*) The following bits in the [STATus:QUEStionable:INTegrity:HARDware](#) register are set when the error occurs.

Errors during the Measurement

The following errors are due to inadmissible hardware settings and states during the measurement process. Some of the errors also cause an entry in the status reporting system.

Error	Description	Remedy	Bit no. ¹⁾
Unstable level control at port <i>	The analyzer detects an excessive source level at one of the ports. The signal is turned off and the sweep halted.	Check signal path for the wave a _i , especially check external components. Then press <i>Channel – Sweep – Restart</i> .	9
Problem concerning external generator Gen<i>	An external generator has been configured, however, it cannot be controlled or provides error messages. If several generators cause problems, the lowest number is indicated.	Check whether the generator is properly connected and switched on. Check the GPIB address; exclude address conflicts when using several external generators or other equipment.	10
Problem concerning external power meter Pmet<i>	An external power meter has been configured, however, it cannot be controlled or provides error messages. If several power meters cause problems, the lowest number is indicated.	Check whether the power meter is properly connected and switched on. Check the GPIB address; exclude address conflicts when using several external power meters or other equipment.	11
Time grid too close	The sweep points for a time sweep are too close, the analyzer cannot process the measurement data until the next sweep point starts.	Increase stop time, reduce no. of points, increase IF bandwidth. If possible reduce number of partial measurements, e.g. by restricting the number of ports measured.	12
Overload at DC MEAS <range>	The input voltage at one of the DC input connectors on the rear panel is too high.	Reduce input voltage.	13
Port <i> ALC target power not reached	The desired ALC target power wasn't reached within the expected time limit. ²⁾	Increase the allowed control range and settling tolerance.	2
ALC output power unstable during measurement	The ALC target power significantly deviates from its target value during measurement. ²⁾	Reduce noise and/or drift.	2
Invalid ALC parameter settings	An invalid (unsupported) combination of Kr and Ki parameter values was selected. ²⁾	Adjust Kr and Ki.	9

1) The following bits in the [STATus:QUEStionable:INTegrity:HARDware](#) register are set when the error occurs.

2) See [ALC Config](#) for details.

Performance Problems



This section applies to instruments which are **not** equipped with option R&S ZVAB-B18, "Removable Hard Disk".

On older network analyzers, the virtual memory paging file is disabled. This means that the operating system cannot use the hard disk to extend its RAM. For very complex setups with many traces and large numbers of sweep points the limited RAM size may cause software crashes.

To enable the paging file, press the *Windows* key to access the desktop of your analyzer. Press *Start > Control Panel > System > Advanced > Performance: Settings > Advanced > Virtual Memory: Change*. In the *Virtual Memory* dialog, select *System managed size > Set* and close all dialogs using the *OK* buttons.

Restart the analyzer to enable the new virtual memory settings.

Obtaining Technical Support

Our customer support centers are there to assist you in solving any problems that you may encounter with your network analyzer. We will find solutions more quickly and efficiently if you provide us with the information listed below. Simply open the relevant dialogs in the *Info* menu, press *Print to File*, and send us the file.

- **Setup Info:** The instrument setup information (*Info – Setup Info*) contains your instrument settings. You can also send us the NWA setup file (*.zvx) that you generate after the fault occurs (*File – Save...*).
- **Option Info:** The option info (*Info – Option Info*) informs us about the status of all software and hardware options of your analyzer.
- **Hardware Info:** The hardware info (*Info – Hardware Info*) shows us the installed options and hardware assemblies.
- **Error Log:** The error log (*Info – Error Log*) contains a chronological record of errors.
- **Save System Report:** The system report command (*Info – Save System Report*) starts a selftest, collects the setup, option, and hardware information and the error log and writes everything to a *.zip file. The *.zip file also contains the current eeprom data and a screenshot of the NWA display. It is written to the report directory `C:\Program Files\Rohde&Schwarz\Network Analyzer\Report`. The file name contains the current date and time, e.g. `report_16112010_1120.zip`. *Save System Report* provides the most comprehensive information, comprising all other *Info* files.
- If possible, list the operating sequence (after the last preset of the instrument) that caused the fault.

