

Keysight 11713D/E Attenuator/Switch Driver

Operating and
Service Manual

Notices

Copyright Notice

© Keysight Technologies 2020

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies as governed by United States and international copyright laws.

Manual Part Number

11713-90028

Edition

Edition 3, December 1, 2020

Printed in:

Printed in Malaysia

Published by:

Keysight Technologies
Bayan Lepas Free Industrial Zone,
11900 Penang, Malaysia

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Declaration of Conformity

Declarations of Conformity for this product and for other Keysight products may be downloaded from the Web. Go to <http://www.keysight.com/go/conformity>. You can then search by product number to find the latest Declaration of Conformity.

U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at <http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR OF ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT SHALL CONTROL.

Safety Information

CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Certification

Keysight Technologies certifies that this product met its published specifications at the time of shipment from the factory. Keysight Technologies further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology (NIST, formerly NBS), to the extent allowed by the Institute's calibration facility, and to the calibration facilities of the other International Standards Organization members.

Safety Considerations

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Keysight Technologies assumes no liability for the customer's failure to comply with these requirements.

WARNING

BEFORE APPLYING POWER

- Verify that the correct fuse is installed.
 - Ensure the mains supply voltage fluctuation do not exceed $\pm 10\%$ of the nominal supply voltage.
-

WARNING

GROUND THE INSTRUMENT

This product is a Safety Class I instrument (provided with a protective earth terminal). To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument must be connected to the AC power supply mains through a three-conductor power cable, with the third wire firmly connected to an electrical ground (safety ground) at the power outlet. Any interruption of the protective (grounding) conductor or disconnection of the protective earth terminal will cause a potential shock hazard that could result in personal injury. If the instrument is to be energized via an external autotransformer for voltage reduction, be certain that the autotransformer common terminal is connected to the neutral (earthed pole) of the AC power lines (supply mains).

WARNING

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE OR WET ENVIRONMENTS

Do not operate the device around flammable gases or fumes, vapor, or wet environments.

WARNING

DO NOT OPERATE DAMAGED OR DEFECTIVE INSTRUMENTS

Instruments that appear damaged or defective should be made inoperative and secured against unintended operation until they can be repaired by qualified service personnel.

WARNING

DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the instrument. Return the instrument to a Keysight Technologies Sales and Service Office for service and repair to ensure that safety features are maintained.

WARNING

USE THE POWER CORD PROVIDED

Use the device with the power cord provided with the shipment.

WARNING**USE THE DEVICE AS SPECIFIED**

If the device is used in a manner not specified by manufacturer, the device protection may be impaired.

WARNING

Keysight 11713D/E attenuator/switch drivers are designed for indoor use and in an area with low condensation.

CAUTION**CLEAN WITH SLIGHTLY DAMPENED CLOTH**

Clean the outside of the instrument with a soft, lint-free, slightly dampened cloth. Do not use detergent, volatile liquids, or chemical solvents.

CAUTION

The instrument is designed for use in Overvoltage Category II and Pollution Degree 2.

Safety Symbols

The following symbols on the instrument and in the documentation indicate precautions which must be taken to maintain safe operation of the instrument.

	<p>When you see this symbol on your instrument, you should refer to the instrument's instruction manual for important information.</p>		<p>This symbol indicates that the instrument requires alternating current (ac) input.</p>
	<p>This symbol indicates the protective earth (ground) terminal.</p>		<p>This symbol indicates the Fuse.</p>

Regulatory Markings

 <p>The CE mark is a registered trademark of the European Community. If it is accompanied by a year, it indicates the year the design was proven.</p>	 <p>The CSA mark is a registered trademark of the Canadian Standards Association.</p>
<p>ISM 1-A</p> <p>This text indicates that the instrument is an Industrial Scientific and Medical Group 1 Class A product (CISPR 11, Clause 4).</p>	<p>ICES/NMB-001</p> <p>ICES/NMB-001 indicates that this ISM device complies with the Canadian ICES-001. Cet appareil ISM est conforme a la norme NMB-001 du Canada.</p>
 <p>The RCM mark is a registered trademark of the Australian Communications and Media Authority.</p>	 <p>This symbol indicates the time period during which no hazardous or toxic substance elements are expected to leak or deteriorate during normal use. Forty years is the expected useful life of the product.</p>
<p>This symbol is a South Korean Class A EMC Declaration. This equipment is Class A suitable for professional use and is for use in electromagnetic environments outside of the home.</p> <p> R-R-Kst-WN19609 이 기기는 업무용 (A 급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라 며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.</p>	

South Korean Class A EMC Declaration

Information to the user:

This instrument has been conformity assessed for use in business environments. In a residential environment, this equipment may cause radio interference.

This EMC statement applies to the equipment only for use in business environment.

사용자 안내문

이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전파간섭의 우려가 있습니다.

사용자 안내문은 "업무용 방송통신기자재"에만 적용한다.

Safety and EMC Requirements

This instrument is designed to comply with the following safety and EMC (Electromagnetic Compatibility) requirements:

- Low Voltage Directive 2014/35/EU
- EMC Directive 2014/30/EU

Waste Electrical and Electronic Equipment (WEEE) Directive

This instrument complies with the WEEE Directive marking requirement. This affixed product label indicates that you must not discard this electrical or electronic product in domestic household waste.

Product category:

With reference to the equipment types in the WEEE directive Annex 1, this instrument is classified as a “Monitoring and Control Instrument” product.

The affixed product label is as shown below.



Do not dispose in domestic household waste.

To return this unwanted instrument, contact your nearest Keysight Service Center, or visit

<http://about.keysight.com/en/companyinfo/environment/takeback.shtml> for more information.

Sales and Technical Support

To contact Keysight for sales and technical support, refer to the support links on the following Keysight websites:

- www.keysight.com/find/11713
(product-specific information and support, software and documentation updates)
- www.keysight.com/find/assist
(worldwide contact information for repair and service)

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

Table of Contents

Certification	3
Safety Considerations	4
Safety Symbols	5
Regulatory Markings	6
South Korean Class A EMC Declaration	6
Safety and EMC Requirements	6
Waste Electrical and Electronic Equipment (WEEE) Directive	7
Sales and Technical Support	7
1 Introduction	
Key Features of Keysight 11713D/E Attenuator/Switch Driver	16
Compatible Keysight Attenuators and Switches	16
Connecting Accessories	17
11713D Front and Rear Panels at a Glance	19
11713E Front and Rear Panels at a Glance	21
2 Installation	
Initial Inspection	26
Preparing for Use	27
Connecting to Keysight Attenuators and Switches	28
3 Specifications	
General Specifications	36
Environmental Specifications	37
4 Verification	
Operator's Check for Local Operation	40
Operator's Check for Remote Operation	41
5 Local Operations	
Getting Started with the 11713D/E	44
Main Menu of the 11713D/E	53
Save/Recall State Menu	60
6 Remote Operations	
Configuring Remote Interface	64
Control using Keysight IO Libraries Suite	66
Programming Guide (SCPI)	67
7 Remote Interface Configurations	
Connecting the 11713D/E to your Computer	92

Exploring the 11713D/E Web Interface over LAN	98
8 Servicing the Attenuator/Switch Driver	
Preparing a Static-Safe Workstation	102
Maintenance and Adjustments	103

List of Figures

Figure 1-1	11713D front panel features	19
Figure 1-2	11713D rear panel features	20
Figure 1-3	11713E front panel features	21
Figure 1-4	11713E rear panel features	23
Figure 2-1	Handle positioning for bench operation	27
Figure 2-2	Typical connection for a programmable four-section attenuator	31
Figure 2-3	Typical connection for 8762 and 8765 series coaxial switches	32
Figure 2-4	Typical connection for relay driving circuit	33
Figure 4-1	Switching system for verification	40
Figure 6-1	Example of control using Keysight IO Libraries Suite	66
Figure 7-1	11713D/E Web Interface's Welcome Window	99
Figure 7-2	Navigation bar	99
Figure 7-3	Enable Password window	100

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

List of Tables

Table 1-1	Key features of 11713D/E	16
Table 1-2	Compatible Keysight switches	17
Table 1-3	Compatible Keysight attenuators	17
Table 1-4	Connecting accessories for Keysight 11713D/E	18
Table 2-1	Summary of switches and attenuators connections to 11713D/E	28
Table 2-2	11713D/E front panel and back panel properties	30
Table 3-1	11713D/E supplemental characteristics	36
Table 3-2	11713D/E environmental specifications	37
Table 4-1	Recommended test equipment	40
Table 5-1	Connection between 11713D/E and programmable attenuators	51
Table 5-2	Connection between 11713D/E and switches	51
Table 6-1	Bit configuration of Standard Event Status Enable register	85
Table 6-2	Bit configuration of Status Byte Enable register	88

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

1 Introduction

Key Features of Keysight 11713D/E Attenuator/Switch Driver	16
Compatible Keysight Attenuators and Switches	16
Connecting Accessories	18
11713D Front and Rear Panels at a Glance	20
11713E Front and Rear Panels at a Glance	22

This chapter provides an overview of the Keysight 11713D/E attenuator/switch drivers which includes the instruments' functions and capabilities, compatibility with Keysight switching components, and physical appearances.

Key Features of Keysight 11713D/E Attenuator/Switch Driver

The 11713D attenuator/switch driver is a GPIB/USB/LAN compatible instrument that concurrently drives up to two four-section programmable step attenuators and two microwave coaxial switches, or up to 10 SPDT switches.

The 11713E attenuator/switch driver is a GPIB/USB/LAN compatible instrument that concurrently drives up to four four-section programmable step attenuators and four microwave coaxial switches, or up to 20 SPDT switches. The 11713E comes with tri-voltage selection of +5 V, +15 V and +24 V and also permits user-defined voltage supply capability.

NOTE

The 11713D/E attenuator/switch drivers output continuous current and support pulse drive. Please ensure your switching devices can withstand continuous current or have a built-in current interrupt feature.

Table 1-1 Key features of 11713D/E

Key features	11713D	11713E
Manually-controlled using front panel push buttons	Yes	Yes
Automatically-control through:		
– GPIB	Yes	Yes
– USB	Yes	Yes
– LAN	Yes	Yes
Integrated LCD display	Yes	Yes
Self-contained power supply with current limiting	Yes	Yes
Common terminal supplies of:		
– +5 Vdc	No	Yes
– +15 Vdc	No	Yes
– +24 Vdc	Yes	Yes
– User-defined ^[a]	No	Yes
TTL control ^[b]	No	Yes

[a] For 11713E, maximum user-defined voltage supply is 28 Vdc.

[b] This TTL specification is 2.4 V at 1 mA.

Compatible Keysight Attenuators and Switches

The 11713D/E attenuator/switch drivers are designed to drive the following Keysight attenuators and switches. If you are using attenuators and switches made by another supplier, check the switching characteristics against those specified in [Chapter 3, "Specifications"](#). Refer to *Keysight 11713D/E Configuration Guide*, available at www.keysight.com/find/11713, for the most updated list.

Table 1-2 Compatible Keysight switches

Keysight model number	Description ^[a]
8765A/B/C/D/F (33314A/B/D), N1810UL	SPDT, unterminated
8762A/B/C/F (33311A/B/C), N1810TL	SPDT, terminated
8763A/B/C (33312A/B/C), N1811TL	Bypass, 4-port, terminated
8764A/B/C (33313A/B/C), N1812UL	Bypass, 5-port, unterminated
8766K (33366K)	SP3T, unterminated
8767K (33367K), 8767M, L7204A/B/C	SP4T, unterminated
87104A/B/C/D/P/Q/R, 87204A/B/C, L7104A/B/C	SP4T, terminated
8768K (33368K), 8768M	SP5T, unterminated
8769K (33369K), 8769M, L7206A/B/C	SP6T, unterminated
87106A/B/C/D/P/Q/R, 87206A/B/C, L7106A/B/C	SP6T, terminated
87222C/D/E, L7222C	DPDT (transfer), unterminated
87406B	Matrix, 4-port, terminated
87606B	Matrix, 6-port, terminated
U9397A/C	SPDT, terminated, solid state
U9400A/C	SPDT, terminated, solid state
P9400A/C	SPDT, terminated, solid state
P9402A/C	SPDT, terminated, solid state
P9404A/C	SP4T, terminated, solid state
U7104E/F/N	SP4T, terminated
U7106E/F/N	SP6T, terminated
U7108A/B/C	SP8T, terminated
U7110A/B/C	SP10T, terminated

[a] * Electromechanical switches unless specified

Table 1-3 Compatible Keysight attenuators

Keysight model number	Description
8494G/H (33320G/H), 84904K/L/M (33324K/L)	11 dB, 1 dB steps
8495G/H/K (33321 G/H/K), 84907K/L (33327K/L)	70 dB, 10 dB steps
8496G/H (33322G/H)	110 dB, 10 dB steps
8497K (33323K), 84906K/L (33326K/L)	90 dB, 10 dB steps
84905M	60 dB, 10 dB steps
84908M	65 dB, 5 dB steps

Connecting Accessories

Various types of connecting accessories are available to drive Keysight attenuators and switches using the 11713D/E attenuator/switch drivers. [Table 1-4](#) lists the available accessories.

Table 1-4 Connecting accessories for Keysight 11713D/E

Connecting accessories	Description
11716A	Interconnect kit (Type-N connectors) ^[a]
11716C	Interconnect kit (SMA connectors) ^[a]
11713D-102 11713E-102	11713-60068, Viking connector to 4 cables with 4-conductor bare wires
11713D-103 11713E-103	11713-60069, Viking connector to 2 cables with 5-conductor bare wires
11713D-104 11713E-104	11713-60071, Viking connector to 4 cables with 3-pin connector
11713D-105 11713E-105	11713-60072, Viking connector to 4 cables with 3-conductor bare wires
11713D-106 11713E-106	11713-60073, Dual Viking connector to 24-pin connector
11713D-107 11713E-107	11713-60074, Triple Viking connector to 24-pin connector
11713D-001 11713E-001	11764-60004, Viking connector to 10-pin DIP connector, 60 inches long
11713D-101 11713E-101	8120-2703, Viking connector to Viking connector, 60 inches long
11713D-201 11713E-201	5061-0969, Viking connector to 12-pin conductor cable, bare wire (for five switches), 60 inches long
11713D-301 11713E-301	11761-60001, Viking connector to (4) ribbon cables, connect up to four switches, 60 inches long
11713D-401 11713E-401	11713-60042, Dual Viking connector to 16-pin DIP connector, 60 inches long
11713D-501 11713E-501	11713-60043, Viking connector to (4) 9-pin Dsub connectors, connect up to four switches, 60 inches long
11713D-502 11713E-502	11713-60043, Viking connector to (2) 9-pin Dsub connectors, connect up to 2 switches, 60 inches long
11713D-601 11713E-601	11713-60044, Viking connector to 16-pin DIP connector, 60 inches long
11713D-701 11713E-701	5064-7848, Viking connector to 14-pin DIP connector, 60 inches long
11713D-801 11713E-801	11713-60047, Viking connector to (4) 10-pin DIP connectors, connect up to 4 switches, 50 inches long

Table 1-4 Connecting accessories for Keysight 11713D/E

Connecting accessories	Description
11713D-908 11713E-908	1CM124A, Rack mount kit for one instrument
11713D-909 11713E-909	5061-9694 & 1CM107A, rack mount kit for two instruments

[a] Order this kit to connect two programmable step attenuators in series

For the configuration details, refer to *Keysight 11713D/E Configuration Guide* available at www.keysight.com/find/11713.

11713D Front and Rear Panels at a Glance

This section briefly describes the function of the front panel keys of 11713D.



Figure 1-1 11713D front panel features

- 1 LCD screen**
- 2 Softkeys:** These unmarked keys are referred to by the text on display next to them.
- 3 Menu/Enter:** Press this key to select the highlighted parameter On/Off or select the highlighted field or go back to the main menu.
- 4 Preset:** Press this key to preset the driver.
- 5 Config:** Press this key to access the configuration menu. You can set the attenuator type, supply voltage, and TTL condition through this menu.
- 6 Save/Recall:** Press this key to save current settings or recall saved settings.
- 7 Navigation buttons:** The arrow keys are used to navigate parameters displayed on the LCD screen or change parameters such as GPIB address.
- 8 Switches:** In the local mode, pushbutton switches 9 and 0 change the position of a coaxial switch connected to rear panel banana jacks S9 A/B and S0 A/B respectively.
- 9 Attenuator Y:** In the local mode, pushbuttons 5, 6, 7, and 8 change the attenuation setting of an attenuator or change the position of coaxial switch(es) connected to the ATTEN Y connector on the rear panel.
- 10 Attenuator X:** In the local mode, pushbuttons 1, 2, 3, and 4 change the attenuation setting of an attenuator or change the position of coaxial switch(es) connected to the ATTEN X connector on the rear panel.
- 11 On/Standby:** Press this key to switch between on and standby. When power is supplied, the background LED is red. Pressing the key once switches the driver on and the background LED turns to green.
- 12 Local:** Press this key to control the driver from the front panel when it is operating via the remote interfaces.

This section briefly describes the function of the rear panel connectors of 11713D.

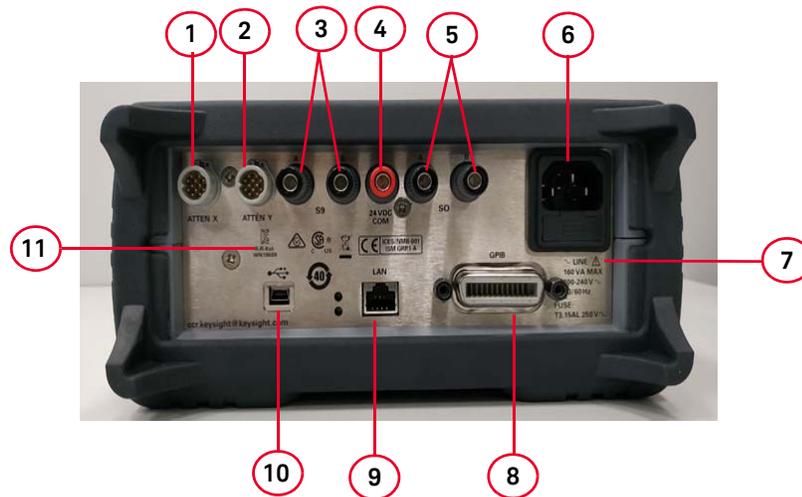


Figure 1-2 11713D rear panel features

- 1 **ATTEN X:** Viking connector for connection to attenuator or switch(es).
- 2 **ATTEN Y:** Viking connector for connection to attenuator or switch(es).
- 3 **S9 A/B:** Banana jack connectors for connection to coaxial switch.
- 4 **24 VDC COM:** Banana jack connector to provide common +24 Vdc in driving the coaxial switches connected to S9 and/or S0.
- 5 **S0 A/B:** Banana jack connectors for connection to coaxial switch.
- 6 **Receptacle:** Matches transformer primary to line voltage via power cable.
- 7 **Alert symbol:** This symbol is used to point out a necessary reference for the user.
- 8 **GPIB connector:** The interface connector from a source device to a listening device for the remote mode of operation.
- 9 **LAN connector:** The interface connector for LAN cable (option LXI only).
- 10 **USB connector:** The interface connector for Type mini B 5-pin USB cable (option LXI only).
- 11 **Instrument markings**

11713E Front and Rear Panels at a Glance

This section briefly describes the function of the front panel keys of 11713E.



Figure 1-3 11713E front panel features

- 1 LCD screen**
- 2 Softkeys:** These unmarked keys are referred to by the text on display next to them.
- 3 Navigation buttons:** The arrow keys are used to navigate parameters displayed on the LCD screen or change parameters such as GPIB address.
- 4 Menu/Enter:** Press this key to select the highlighted parameter On/Off or select the highlighted field or go back to the main menu.
- 5 Preset:** Press this key to preset the driver.
- 6 Config:** Press this key to access the configuration menu. You can set the attenuator type, supply voltage, and TTL condition through this menu.
- 7 Save/Recall:** Press this key to save current settings or recall saved settings.
- 8 Supply Voltage for Bank 1:** Indicates supply voltage setting (background LED in red) for bank 1.
- 9 Supply Voltage for Bank 2:** Indicates supply voltage setting (background LED in red) for bank 2.
- 10 Switches for Bank 1:** In the local mode, pushbutton switches 9 and 0 change the position of a coaxial switch connected to rear panel banana jacks S9 A/B and S0 A/B respectively, for bank 1.
- 11 Switches for Bank 2:** In the local mode, pushbutton switches 9 and 0 change the position of a coaxial switch connected to rear panel banana jacks S9 A/B and S0 A/B respectively for, bank 2.
- 12 Attenuator Y for Bank 1:** In the local mode, pushbuttons 5, 6, 7, and 8 change the attenuation setting of an attenuator or change the position of coaxial switch(es) connected to the ATTEN Y connector on the rear panel, for bank 1.

- 13 Attenuator Y for Bank 2:** In the local mode, pushbuttons 5, 6, 7, and 8 change the attenuation setting of an attenuator or change the position of coaxial switch(es) connected to the ATTEN Y connector on the rear panel, for bank 2.
- 14 Attenuator X for Bank 1:** In the local mode, pushbuttons 1, 2, 3, and 4 change the attenuation setting of an attenuator or change the position of coaxial switch(es) connected to the ATTEN X connector on the rear panel, for bank 1.
- 15 Attenuator X for Bank 2:** In the local mode, pushbuttons 1, 2, 3, and 4 change the attenuation setting of an attenuator or change the position of coaxial switch(es) connected to the ATTEN X connector on the rear panel, for bank 2.
- 16 On/Standby:** Press this key to switch between on and standby. When power is supplied, the background LED is red. Pressing the key once switches the driver on and the background LED turns to green.
- 17 Local:** Press this key to control the driver from the front panel when it is operating via the remote interfaces.

This section briefly describes the function of the rear panel connectors of 11713E.

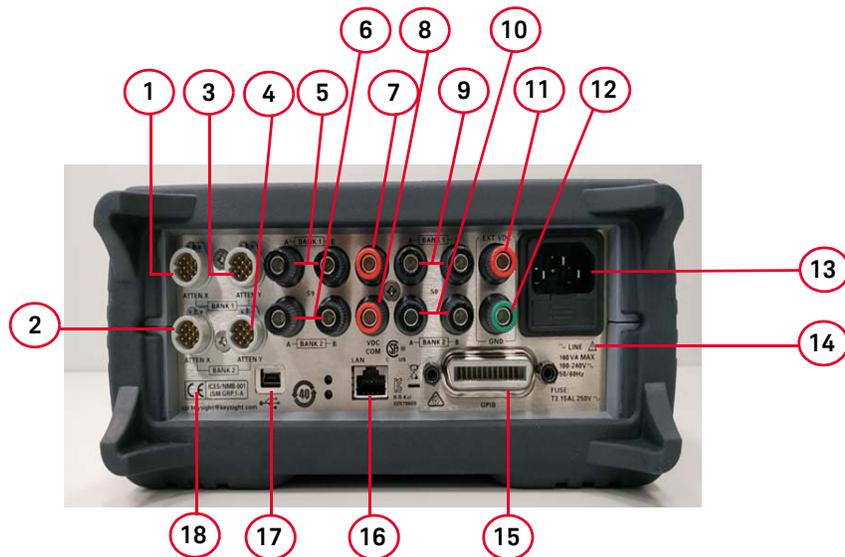


Figure 1-4 11713E rear panel features

- 1 ATTEN X Bank 1:** Viking connector for connection to attenuator or switch(es), for bank 1.
- 2 ATTEN X Bank 2:** Viking connector for connection to attenuator or switch(es), for bank 2.
- 3 ATTEN Y Bank 1:** Viking connector for connection to attenuator or switch(es), for bank 1.
- 4 ATTEN Y Bank 2:** Viking connector for connection to attenuator or switch(es), for bank 2.
- 5 S9 A/B Bank 1:** Banana jack connectors for connection to coaxial switch, for bank 1.
- 6 S9 A/B Bank 2:** Banana jack connectors for connection to coaxial switch, for bank 2.
- 7 VDC COM Bank 1:** Banana jack connector to provide common Vdc in driving the coaxial switches connected to S9 and/or S0, for bank 1.
- 8 VDC COM Bank 2:** Banana jack connector to provide common Vdc in driving the coaxial switches connected to S9 and/or S0, for bank 2.
- 9 S0 A/B Bank 1:** Banana jack connectors for connection to coaxial switch, for bank 1.
- 10 S0 A/B Bank 2:** Banana jack connectors for connection to coaxial switch, for bank 2.
- 11 EXT (External) VDC:** Banana jack connector to provide user-defined Vdc, for both banks.
- 12 GND (Ground):** Banana jack connector to provide grounding, for both banks.
- 13 Receptacle:** Matches transformer primary to line voltage via power cable.
- 14 Alert symbol:** This symbol is used to point out a necessary reference for the user.
- 15 GPIB connector:** The interface connector from a source device to a listening device for the remote mode of operation.
- 16 LAN connector:** The interface connector for LAN cable.
- 17 USB connector:** The interface connector for Type mini B 5-pin USB cable.
- 18 Instrument markings**

2 Installation

Initial Inspection	26
Preparing for Use	27
Connecting to Keysight Attenuators and Switches	28

This chapter provides you important information on how to unpack and check your instrument, how to prepare your instrument for bench operation, and tips on configuring the 11713D/E with Keysight attenuators and switches.

Initial Inspection

- 1** Unpack and inspect the shipping container and its contents thoroughly to ensure that nothing was damaged during shipment. If the shipping container or cushioning material is damaged, the contents should be checked both mechanically and electrically.
- 2** If the contents are damaged or defective, contact your nearest Keysight Technologies Service and Support Office. Refer to **“Sales and Technical Support”** on page 7. Keysight Technologies will arrange for repair or replacement of the damaged or defective equipment. Keep the shipping materials for the carrier's inspection.
- 3** If you are returning your instrument for service, repackaging the attenuator/switch driver requires original shipping containers and materials or their equivalents. Keysight Technologies can provide packaging materials identical to the original materials. Refer to **“Sales and Technical Support”** on page 7 for the Keysight Technologies nearest to you.

Preparing for Use

Bench operation

Pull the handle outwards, and adjust it into one of the two positions illustrated in [Figure 2-1](#).

- (Top) Handle placed underneath the instrument to assure self- alignment of the instruments when stacked.
- (Bottom) Handle tilted to raise the front of the instrument for easier viewing of the front panel.



Figure 2-1 Handle positioning for bench operation

Connecting to Keysight Attenuators and Switches

The 11713D/E attenuator/switch drivers can be used to drive various switches and attenuators. [Table 2-1](#) shows the summary of switches and attenuators connections to the 11713D/E, with various interface cables for point-to-point connection. [Table 2-2](#) shows the properties of 11713D/E's front panel and rear panel.

For the configuration details, refer to *Keysight 11713D/E Configuration Guide* available at www.keysight.com/find/11713.

Table 2-1 Summary of switches and attenuators connections to 11713D/E

Switches/attenuators	11713D/E cable option ^[a]	# of channels required ^[b]	Controlled by ATTEN X (1-4) ATTEN Y (5-8)	Controlled by SWITCHES (9/0)
Switches – 8762A/B/C/F – 8763A/B/C – 8764A/B/C	201	2	Yes	Yes
Switches – 8765A/B/C/D/F	201, 301	2	Yes	Yes
Switches – 8766K	001, 101	2	Yes	Yes
Switches – N1810UL/TL ^[c] – N1811TL ^[c] – N1812UL ^[c]	201, 501	2	Yes	Yes
Switches – 87222C/D/E – L7222C	201, 801	2	Yes	No
Switches – 8767K Attenuators – 8495G/H	001, 101	3	Yes	Yes
Switches – 8767M Attenuators – 84905M – 84907K/L	001	3	Yes	Yes
Switches – 8768K Attenuators – 8494G/H – 8496G/H – 8495K, 8497K	001, 101	4	Yes	Yes

Table 2-1 Summary of switches and attenuators connections to 11713D/E (continued)

Switches/attenuators	11713D/E cable option ^[a]	# of channels required ^[b]	Controlled by ATTEN X (1-4) ATTEN Y (5-8)	Controlled by SWITCHES (9/0)
Switches – 8768M				
Attenuators – 84904K/L/M – 84906K/L – 84908M	001	4	Yes	Yes
Switches ^[d] – 87104A/B/C/D/P/Q/R – 87204A/B/C – L7104A/B/C – L7204A/B/C – U7104E/F/N	201, 601	4 ^[e]	Yes	Yes
Switches – 8769K	101	5	Yes	Yes
Switches – 8769M	701	5	Yes	Yes
Switches – 87106A/B/C/D/P/Q/R – 87206A/B/C – L7106A/B/C – L7206A/B/C – 87406B/Q, 87606B/Q – U7106E/F/N	201, 401	6 ^[f]	Yes	Yes
Switches – U9397A/C	105	1	Yes	No
Switches – U9400A/C	104	1	Yes	No
Switches – P9400A/C	102	1	Yes	No
Switches – P9402A/C	103	2	Yes	No
Switches – P9404A/C	201	4	Yes	No
Switches – U7108A/B/C	106, 201	8	Yes	Yes
Switches – U7110A/B/C	107, 201	10	Yes	Yes

[a] Type of interface cable required depends on the DC connector on the switching device

- [b] One channel represent control with one pushbutton
- [c] Ensure switch is equipped with current interrupt (option 403) to protect switch from overheating and destruction as this switch cannot withstand continuous current
- [d] For switches with option 161, ground pin 16 opens all path. Use S9 for Attenuator X or S0 for Attenuator Y. Do not close any path and ground pin 16 simultaneously as this makes the switch buzz.
- [e] If option 601 is used, number of channels required is 5, to cater for open all path function controlled via S9/S0
- [f] If option 401 is used, number of channels required is 7, to cater for open all path function controlled via S9/S0

Table 2-2 11713D/E front panel and back panel properties

Front panel pushbuttons ^[a]		Rear panel connectors	
Pushbutton number	Pushbutton LEDs	Pin numbers	Wire color code ^[b]
		1	Red (Vcc)
		2	White/Brown (Gnd)
X			
9	ON	ATTEN X-3 (S9-A)	Gray
	OFF	ATTEN X-4 (S9-B)	White/Red
Y			
0	ON	ATTEN Y-3 (S0-A)	Gray
	OFF	ATTEN Y-4 (S0-B)	White/Red
ATTENUATORS			
X	Y		
1	5	OFF	5
		ON	6
2	6	OFF	7
		ON	8
3	7	OFF	9
		ON	10
4	8	OFF	11
		ON	12

[a] The ON/OFF status of the pushbutton LEDs indicates which cable wire or pin on the rear panel connector is grounded. As an example, if ATTENUATOR X pushbutton 3 is illuminated, pin 10 of the ATTEN X connector (blue wire from cable) is grounded and pin 9 floats at a high impedance. For solid state switches (P and U series switches), pin 3 is NC (No connected), pin 4 is connected to -5V, regardless of whether pushbuttons 9 and 0 LEDs are ON or OFF.

Vcc will auto reset to 5V and TTL mode will automatically turn on for rear panel connector pins 5, 7, 9 and 11.

[b] With reference to interface cable option 201 (Viking connector to 12-pin bare), consists of 12 color-coded wires

Driving four-section attenuators and switches

- To use one four-section attenuator assembly, connect an attenuator interface cable either to the ATTEN X output (A6J1) or ATTEN Y output (A6J2). Connect all outputs (two for 11713D and four for 11713E) to have more than four attenuator segments.
- A typical connection for a programmable four-section attenuator to 11713D is illustrated in [Figure 2-2](#), together with pin number for each connector.
- Using these same connections to Keysight 8762 or 8765 series coaxial switches, control can be extended to number of switches in multiple of four. If S9 and S0 outputs are utilized, 11713D and 11713E can drive up to 10 switches and 20 switches respectively.

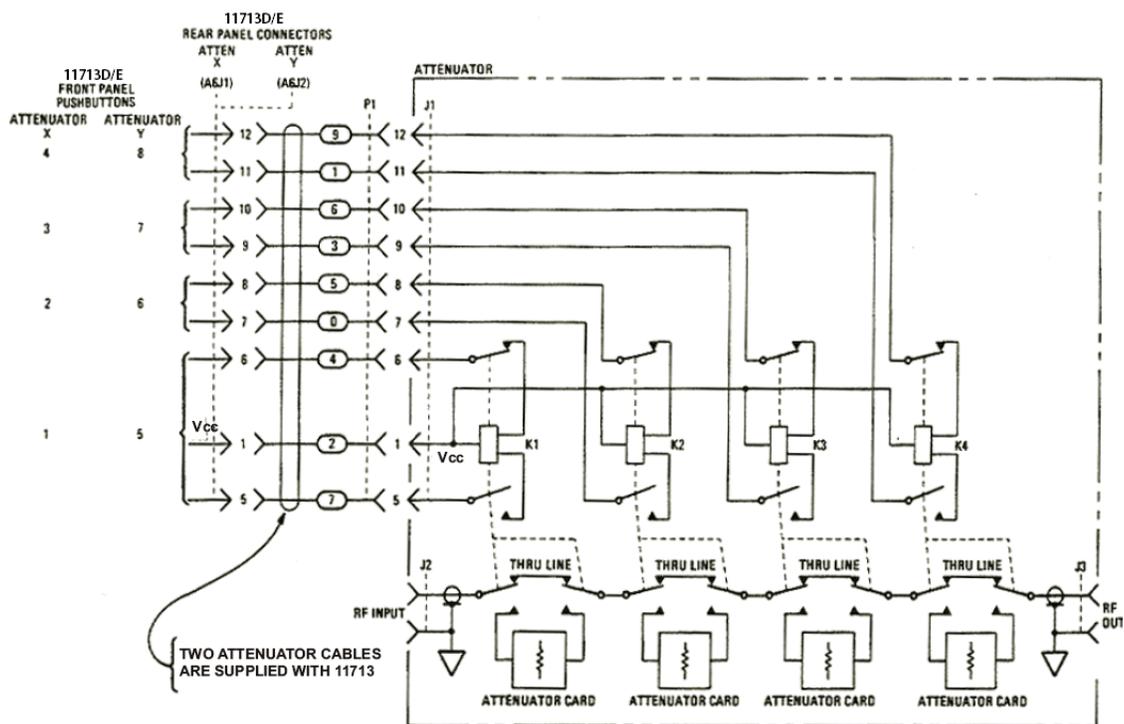


Figure 2-2 Typical connection for a programmable four-section attenuator

Driving additional coaxial switches

- Make switch connections to S0 outputs, S9 outputs, or to rear panel ATTEN X output or ATTEN Y output.
- [Figure 2-3](#) below shows the rear panel connections to S0 outputs and the corresponding switch positions reflected by pushbutton indicators.
- Connections to Keysight 8762 or 8765 series coaxial switches can also be made to the ATTEN X output or ATTEN Y output as illustrated in [Figure 2-2](#).

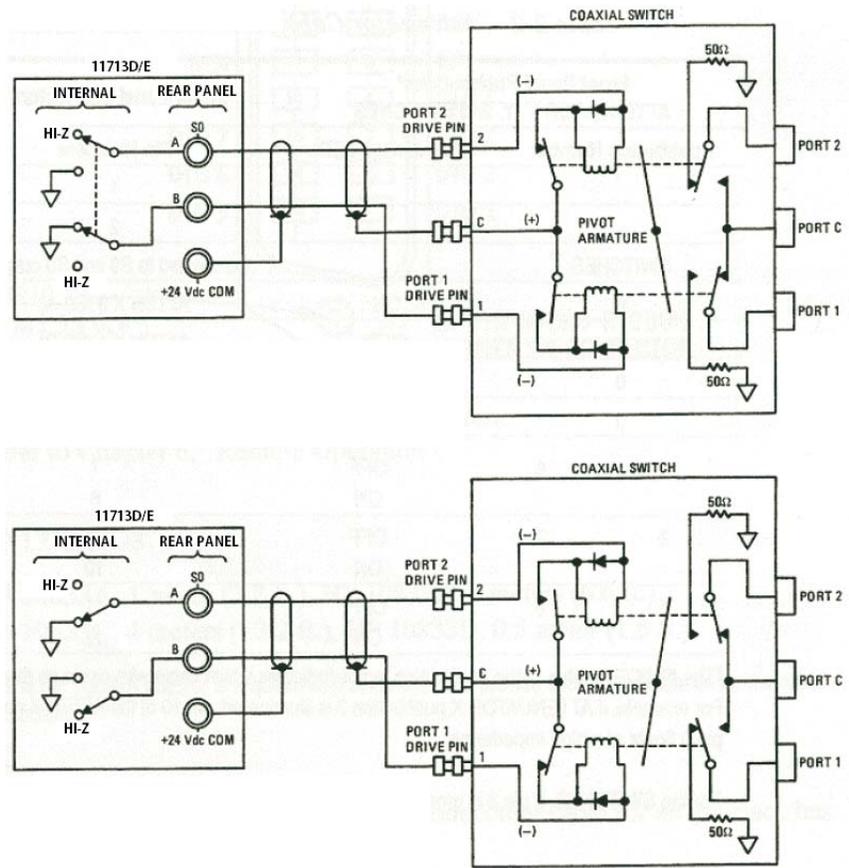


Figure 2-3 Typical connection for 8762 and 8765 series coaxial switches

Driving relays

- To drive ten devices for 11713D, connect attenuator cables at ATTEN X and Y and switch cables to S9 and S0.
- A total of 10 relays may be on at one time if the total current is less than 3.4 A. However, since there are dual transistor and relay drivers, where one driver is on while the other is off, a total of 20 relays may be controlled.

NOTE

11713E is capable of driving double the amount of devices that 11713D can. However, the total load current that can be consumed is still 3.4 A.

CAUTION

If the total load current of 3.4 A is exceeded, damage may result.

- Figure 2-4 below shows the connections for a simplified relay driving circuit. The circuit is adaptable for simple non-latching relays.

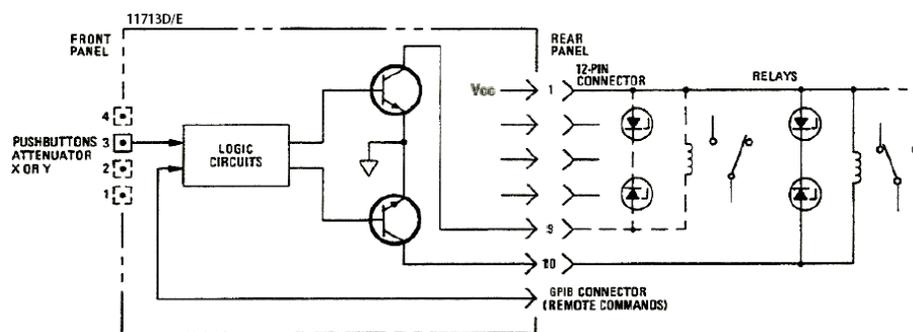


Figure 2-4 Typical connection for relay driving circuit

NOTE

It is also recommended that two 28.7 V zener diodes be connected back-to-back across the relay coils to reduce voltage transients.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

3 Specifications

General Specifications	36
Environmental Specifications	37

This chapter provides you the specifications of Keysight 11713D/E attenuator/switch drivers.

General Specifications

Supplemental characteristics

Supplemental characteristics are intended to provide useful information and are typical but non-warranted performance parameters.

Table 3-1 11713D/E supplemental characteristics

Current	3.4 A maximum continuous current Contact pairs 1 through 8, 9, and 0, total maximum current of 3.4 A continuous through all contacts (< 0.7 A per contact)
Power	100 to 240 Vac, automatic selection, 50/60 Hz 160 VA maximum Mains supply voltage fluctuations are not to exceed 10% of the nominal supply voltage
Maximum load inductance	500 mH
Maximum load capacitance	< 0.01 uF for contact pairs 9 and 0

Physical specifications

Model	Description	Dimension	Weight
11713D	With handle and bumper	103.0 mm x 261.3 mm x 378.7 mm (4.06 inches x 10.29 inches x 14.91 inches)	3.5 kg (7.7 lbs)
	Without handle and bumper	87.7 mm x 212.7 mm x 364.1 mm (3.45 inches x 8.37 inches x 14.34 inches)	3.1 kg (6.8 lbs)
11713E	With handle and bumper	103.0 mm x 261.3 mm x 378.7 mm (4.06 inches x 10.29 inches x 14.91 inches)	3.6 kg (7.9 lbs)
	Without handle and bumper	87.7 mm x 212.7 mm x 364.1 mm (3.45 inches x 8.37 inches x 14.34 inches)	3.2 kg (7.1 lbs)

Remote programming characteristics

Interface	GPIB interface operates to IEEE 488.2 and IEC 65 10/100 BaseT LAN interface USB 2.0 interface
Command language	SCPI standard interface commands (Keysight 11713A backward compatible)
GPIB compatibility	SH0, AH1, T0, TE0, L2, LE0, SR0, RL1, PPO, DCO, DTO, CO

Environmental Specifications

Keysight 11713D/E attenuator/switch drivers are designed to fully comply with Keysight Technologies' product operating environmental specifications as shown in the table below.

Table 3-2 11713D/E environmental specifications

Temperature	
- Operating	0 °C to +50 °C
- Storage	-40 °C to +70°C
Humidity	
	95% RH up to 40 °C, decreases linearly to 45% RH at 50 °C, non-condensing;
- Operating	95% RH at 40°C, 5 days cyclic
- Storage	45% RH at 50°C, non-condensing
- Condensing	95% RH at 40°C, 5 hours (condensation 15 minutes)
Shock	
- End-user handling	Half-sine: 2 to 3 ms duration, 60 in/s (1.6 ms) delta-V
- Bench handling	Per MIL-PRF-28800F
- Functional	Half-sine: 11 ms duration, 30 grms
- Transportation	Trapezoidal: 18 to 22 ms duration, 337 in/s (8.56 ms) delta-V
Vibration	
- Operating (Random)	0.21 G rms, 5 to 500 Hz, 10 min/axis
- Survival (Random)	2.09 G rms, 5 to 500 Hz, 10 min/axis
- Swept-sine	0.5 G rms, 5 to 500 Hz, 10 min/axis
Altitude	
- Operating	≤ 4,000 meters (13,123 feet)
- Non-operating	≤ 15,300 meters (50,000 feet)

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

4 Verification

Operator's Check for Local Operation	40
Operator's Check for Remote Operation	41

This chapter provides you simple instructions to verify Keysight 11713D/E attenuator/switch drivers' functionality in both local operation and remote (GPIB/USB/LAN) operation.

Operator's Check for Local Operation

Recommended test equipment

Table 4-1 lists the test equipment required for performance test verification and equipment troubleshooting. Equipment other than the recommended models can be used, provided minimum specifications are satisfied.

Table 4-1 Recommended test equipment

Instrument type	Critical specifications	Use ^[a]
Digital voltmeter	0 to +30 Vdc	T
Attenuators (2 required)	Programmable, 4 sections	P, T
Switches (2 required)	+5 Vdc, +15 Vdc, or +24 Vdc drive source	P, T

[a] P = Performance, T = Troubleshooting

Procedure

- 1 Configure the switching system as illustrated in Figure 4-1 by following all steps described in Chapter 5, "Local Operations".

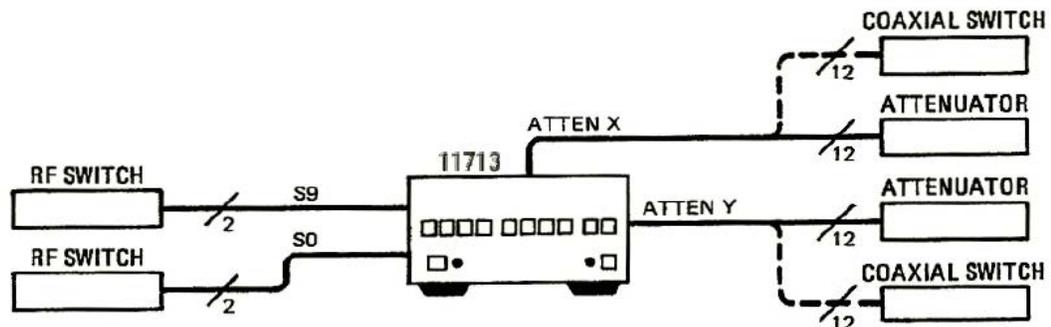


Figure 4-1 Switching system for verification

- 2 Once configuration is completed, press and depress the 10 numbered pushbuttons on the driver front panel. Each LED should alternate between off and on as each key is pressed.
- 3 In addition, if any switching devices is connected (attenuators, relays, or switches), an audible click should be heard from the unit actuated. Pressing any numbered pushbutton should not cause any other pushbutton to change state.

Operator's Check for Remote Operation

These procedure verify that the driver can be controlled remotely using GPIB, USB, and/or LAN.

- 1 Refer to [Chapter 7, "Remote Interface Configurations"](#), to connect the 11713D/E to your computer through GPIB, USB, and/or LAN.
- 2 Once remote connection is available, send the following SCPI commands to the driver and note the changes on front panel LEDs.

Description	Command	Observation
Close switching paths from channel 1 to channel 4 (bank1)	ROUTe:CLoSe (@101:104)	LEDs for pushbuttons 1 to 4 light ON
Open switching paths from channel 5 to channel 8 (bank 1)	ROUTe:OPEn (@105:108)	LEDs for pushbuttons 5 to 8 light OFF
Query status on channel 2 (bank 1)	ROUTe:CLoSe? (@102)	Return value "1" (LED for pushbutton 2 light ON)
Query status on channel 7 (bank 1)	ROUTe:CLoSe? (@107)	Return value "0" (LED for pushbutton 7 light OFF)

If the above checks are successful, the driver's remote operation is working correctly. These procedures do not check all of the driver's program codes that can be executed. However, if the driver work correctly from the front panel, there is a high probability that the driver will respond to all the program codes.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

5 Local Operations

Getting Started with the 11713D/E	44
Main Menu of the 11713D/E	53
Save/Recall State Menu	60

This chapter outlines some simple steps to start using the 11713D/E in local operations. Also, functionality of all menus are described to assist operations using the 11713D/E.

Getting Started with the 11713D/E


The Keysight 11713D/E attenuator/switch driver can be easily configured to drive programmable attenuators and/or switches through the front panel operations. The following three simple steps will guide you through the configuration of the 11713D/E.

Step 1: Turn on the 11713D/E

NOTE

For Step 1, all details on the 11713E are applicable to the 11713D.

- 1 Connect the AC power supply to the 11713D/E. You should see:
 - the background LED of the power button is red which indicates that the 11713D/E is in the standby mode.
- 2 Press the power button once to turn on the 11713D/E. You should see:
 - the background LED turns green.
 - six menus are displayed on the LCD screen.
 - all numbered buttons are lighted up^[1].

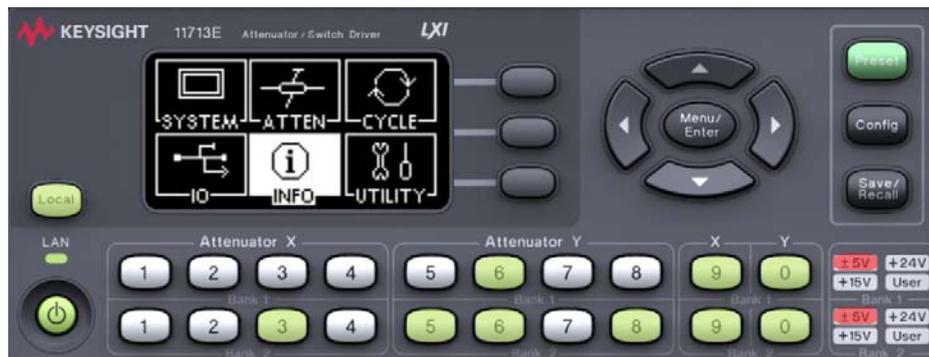

- 3 Ensure the **Local** button is lighted up to enable operation through the front panel. If not, press the button once.
- 4 Now, you are ready to configure the 11713D/E.

Step 2: Configure the 11713D/E settings to drive attenuators and switches




To drive programmable attenuators


NOTE

Step 2 – To drive programmable attenuators, only item 2 is applicable to the 11713D. When the **Config** button is pressed, the next screen is **CONFIGURATION MENU**.

[1] At factory default setting. Last state is followed if instrument was configured before shutdown.

Item	Action	Illustration
1 Select bank (only for 11713E)	<p>a Press Config button.</p> <p>b On SELECT BANK screen, you can see two softkey selections: BANK1 and BANK2.</p> <p>c Press Bank1 softkey to select bank 1.</p> <p>d Press Bank2 softkey to select bank 2.</p>	
2 Select attenuator type	<p>a On CONFIGURATION MENU screen, press Type softkey.</p> <p>b On ATTEN/SWITCH screen, scroll to highlight the desired attenuator/switch model number using the navigation keys.</p> <p>c Once the attenuator/switch model is determined, press X or Y softkey to assign the selected attenuator/switch model.</p> <p>d Repeat steps b and c if needed.</p> <p>e Model assigned to ATTEN X and ATTEN Y is marked <X> (e.g. P9400A/C) and <Y> (e.g. P9404A/C) respectively.</p> <p>f To return to the previous screen, press Back softkey.</p>	

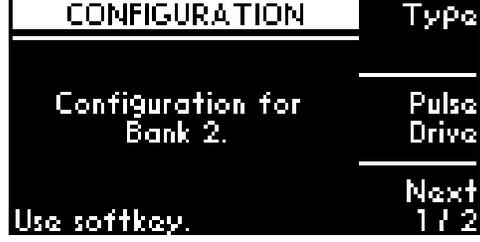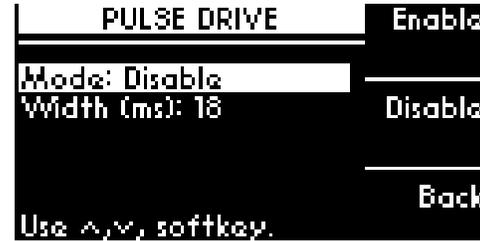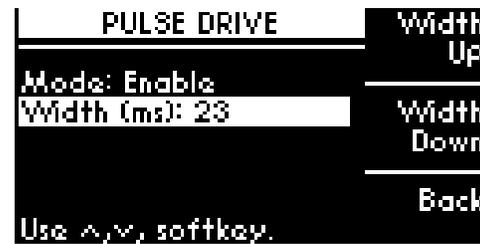
Item	Action	Illustration
<p>3 Enable Pulse Drive</p>	<p>a On CONFIGURATION MENU screen, press Pulse Drive softkey. b On PULSE DRIVE screen, press Enable softkey to enable Pulse Drive mode. c Scroll to highlight Width (ms) using the navigation keys. d Adjust pulse width using Width Up and Width Down softkeys. e To return to the previous screen, press Back softkey.</p>	 <p>CONFIGURATION</p> <p>Type</p> <p>Configuration for Bank 2.</p> <p>Pulse Drive</p> <p>Next</p> <p>Use softkey. 1 / 2</p>
		 <p>PULSE DRIVE</p> <p>Enable</p> <p>Mode: Disable</p> <p>Width (ms): 18</p> <p>Disable</p> <p>Back</p> <p>Use ▲,▼, softkey.</p>
		 <p>PULSE DRIVE</p> <p>Width Up</p> <p>Mode: Enable</p> <p>Width (ms): 23</p> <p>Width Down</p> <p>Back</p> <p>Use ▲,▼, softkey.</p>


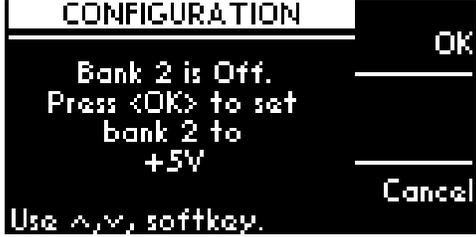
Item	Action	Illustration
4 Select voltage type (only for 11713E)	a On CONFIGURATION MENU screen, press Voltag. Level softkey.	
	b On OUTPUT VOLTAGE screen, scroll to highlight the desired voltage (e.g. +5V).	
	c Press SET softkey to assign highlighted voltage.	
	d On the next screen, press OK softkey to confirm decision or press Cancel softkey to cancel.	
	e Output voltage assigned is marked <*>.	
	f To exit this screen, press Back softkey.	

To drive switches

NOTE Step 2 – To drive switches, only applicable to the 11713E as the 11713D is predefined with +24 Vdc supply and no TTL drive.

Item	Action	Illustration
1 Select bank (only for 11713E)	<p>a Press Config button.</p> <p>b On SELECT BANK screen, you can see two softkey selections: BANK1 and BANK2.</p> <p>c Press BANK1 softkey to select bank 1.</p> <p>d Press BANK2 softkey to select bank 2.</p>	

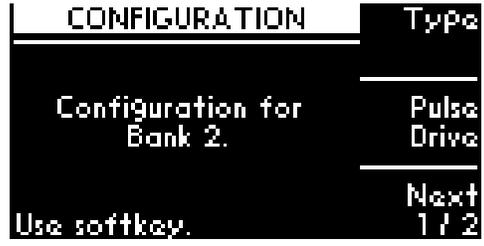Item	Action	Illustration
<p>2 Enable Pulse Drive</p>	<p>a On CONFIGURATION MENU screen, press Pulse Drive softkey.</p>	
	<p>b On PULSE DRIVE screen, press Enable softkey to enable Pulse Drive mode.</p>	
	<p>c Scroll to highlight Width (ms) using the navigation keys.</p> <p>d Adjust pulse width using Width Up and Width Down softkeys.</p> <p>e To return to the previous screen, press Back softkey.</p>	

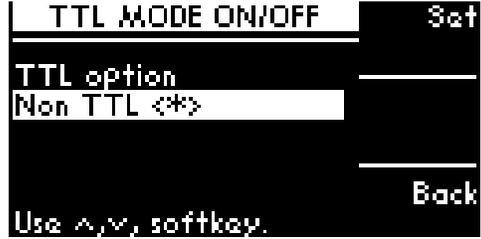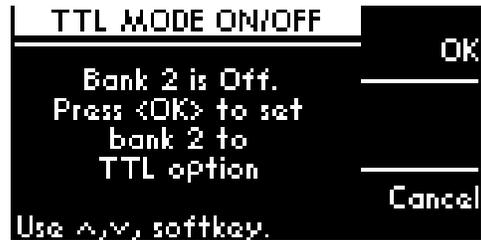Item	Action	Illustration
3 Set TTL mode (only for 11713E)	a On CONFIGURATION MENU screen, press TTL ON/OFF softkey.	
	b On TTL MODE ON/OFF screen, scroll to highlight the TTL option or Non TTL (e.g. <i>TTL option</i>).	
	c Press Set softkey to assign highlighted voltage. d On the next screen, press OK softkey to confirm decision or press Cancel softkey to cancel. e Selection is marked <*>. f To exit this screen, press Back softkey.	

Item	Action	Illustration
<p>4 Select voltage type (only for 11713E)</p>	<p>a On CONFIGURATION MENU screen, press Voltag. LEVEL softkey.</p>	
	<p>b On OUTPUT VOLTAGE screen, scroll to highlight the desired voltage (e.g. +5V).</p>	
	<p>c Press Set softkey to assign highlighted voltage.</p>	
	<p>d On the next screen, press OK softkey to confirm decision or press Cancel softkey to cancel.</p>	
	<p>e Output voltage assigned is marked <*>.</p>	
	<p>f To exit this screen, press Back softkey.</p>	

Step 3: Configure the 11713D/E connections to attenuators and switches

- 1 Determine the interface cable option of the 11713D/E.
- 2 Determine the DC connector option of the attenuator(s) or switch(es).
- 3 Check for compatibility using [Table 1-3](#) for programmable attenuators and [Table 1-2](#) for switches:

Table 5-1 Connection between 11713D/E and programmable attenuators

11713D/E	Attenuators (Option)
Option 001	8494G/H, 8495G/H, 8496G/H, 8495K, 8497K (Option 016) 84904K/L/M, 84905M, 84906K/L, 84907K/L, 84908M (No option)
Option 101	8494G/H, 8495G/H, 8496G/H, 8495K, 8497K (Option 060)

Table 5-2 Connection between 11713D/E and switches


11713D/E	Switches (Option)
Option 001	8766K, 8767K/M, 8768K/M (Option 016)
Option 101	8766K, 8767K, 8768K, 8769K (Option 060)
Option 102	P9400A/C
Option 103	P9402A/C
Option 104	U9400A/C
Option 105	U9397A/C
Option 201	8763A/B/C, 8764A/B/C, 8762A/B/C/F (No option) 8765A/B/C/D/F (Option 305/310/315/324) N1810UL/TL, N1811TL, N1812UL (Option ^[a] 202) 87104A/B/C/D, 87204A/B/C, 87106A/B/C/D, 87206A/B/C (Option 100) L7104A/B/C, L7204A/B/C, L7106A/B/C, L7206A/B/C (Option 100) 87406B, 87606B (Option 100) 87222C/D/E, L7222C (Option 100) P9404A/C
Option 301	8765A/B/C/D/F (Option 005/010/015/024)
Option 401	87106A/B/C/D, 87206A/B/C (Option 161) L7106A/B/C, L7206A/B/C (Option 161) 87406B, 87606B (Option 161)
Option 501	N1810UL/TL, N1811TL, N1812UL (Option ^[a] 201)
Option 601	87104A/B/C/D, 87204A/B/C (Option 161) L7104A/B/C, L7204A/B/C (Option 161)
Option 701	8769M (Option 016)
Option 801	87222C/D/E, L7222C (Option 161)

[a] If TTL is required, include Option 401. Must order switch with Option 403 (current interrupt) as switch cannot withstand continuous current supplied by 11713D/E.

4 For more details, refer to *Keysight 11713D/E Configuration Guide* available at www.keysight.com/find/11713.

Main Menu of the 11713D/E

The main menu can be displayed on the LCD screen by pressing the **Menu/Enter** button. The six submenus, each with their own functionality, are described in the subsequent sections.

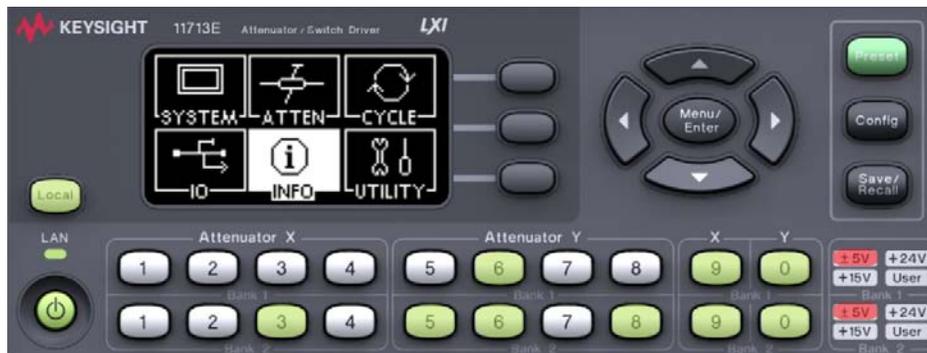

SYSTEM menu

Function	Action	Illustration
Display attenuator type(s) configured for 11713D/E	a Navigate to the SYSTEM icon using the navigation keys.	
	b Press Menu/Enter button when SYSTEM icon is highlighted.	
	c On display are attenuator models assigned to ATTEN X and ATTEN Y for each bank (e.g. 8494G/H, 8496G/H, N/A, N/A).	
	d Press Menu/Enter button again to return to main menu.	

ATTEN menu

Function	Action	Illustration
Display attenuation levels of each bank	a Navigate to the ATTEN icon using the navigation keys.	
	b Press Menu/Enter button when ATTEN icon is highlighted.	
	c On display are attenuation levels for ATTEN X and ATTEN Y (e.g. 11 dB, 110 dB, 0, 0).	
	d Press Menu/Enter button again to return to main menu.	

Attenuation value on display changes according to the input from the front panel pushbuttons or through the virtual web interface:

5 Local Operations

- Pushbutton LED ON – attenuation card selected (attenuation applied) on corresponding attenuator section
- Pushbutton LED OFF – thru path selected (attenuation lifted) on corresponding attenuator section

CYCLE menu

Function	Action	Illustration
<p>Display number of cycles of switching path for each channel</p> <ul style="list-style-type: none"> - 10 channels for 11713D (CH1 to CH9, CH0) - 20 channels for 11713E (B1-1 to B1-10, B2-1 to B2-10) 	<p>a Navigate to the CYCLE icon using the navigation keys.</p> <p>b Press Menu/Enter button when CYCLE icon is highlighted.</p> <p>c On display are number of relay cycles for each channel.</p> <p>d Press Menu/Enter button again to return to main menu.</p>	<pre> RELAY CYCLE ----- B1-1 4294967295 Clear B1-2 4294967295 Clear B1-3 4294967295 All B1-4 4294967295 All Use ^, v for more. </pre>
<p>Clear cycle for selected channel(s)</p>	<p>a Scroll to the desired bank-channel (e.g. B1-1) using the navigation keys.</p> <p>b Press Clear Cycle.</p> <p>c On the next screen, press OK softkey to confirm decision or press Cancel softkey to cancel.</p> <p>d.Note that relay cycle for B1-1 is 0 and below screen indicates CLEARED.</p>	<pre> RELAY CYCLE ----- Press <OK> to clear B1-1 OK Cancel </pre> <pre> RELAY CYCLE ----- B1-1 0 B1-2 4294967295 B1-3 4294967295 B1-4 4294967295 CLEARED Clear Cycle All Save All </pre>
<p>Clear cycle for all channels</p>	<p>a Press Clear All.</p> <p>b On the next screen, press OK softkey to confirm decision or press Cancel softkey to cancel.</p> <p>c.Note that relay cycle for all channels is 0.</p>	<pre> RELAY CYCLE ----- Press <OK> to clear all? OK Cancel </pre> <pre> RELAY CYCLE ----- B1-1 0 B1-2 4294967295 B1-3 4294967295 B1-4 4294967295 CLEARED Clear Cycle All Save All </pre>

Function	Action	Illustration
Save cycle for all channels	<p>a Press Save All.</p> <p>b On the next screen, Cycles saved. appears and this confirms all channels' cycles are saved.</p>	<pre> RELAY CYCLE ----- B1-1 0 B1-2 0 B1-3 0 B1-4 0 Cycles saved. Clear Cycle Clear All Save All </pre>

IO menu

Refer to [Chapter 7, "Remote Interface Configurations"](#).

INFO menu

Function	Action	Illustration
Display system info for 11713D/E <ul style="list-style-type: none"> - Model - Serial number - Firmware revision - GPIB address - LAN IP - USB address - MAC address 	<p>a Navigate to the INFO icon using the navigation keys.</p> <p>b Press Menu/Enter button when INFO icon is highlighted.</p> <p>c Press Menu/Enter button again to return to main menu.</p>	

UTILITY menu

Function	Action	Illustration
<p>Display system utility settings for 11713D/E and adjust beep volume.</p> <p>Beep volume range from 0 (mute) to 8 (loudest).</p>	<p>a Navigate to the UTILITY icon using the navigation keys.</p> <p>b Press Menu/Enter button when UTILITY icon is highlighted.</p> <p>c Scroll to highlight Beep volume using the navigation keys.</p> <p>d Adjust beep volume using Volume up and Volume down softkeys.</p> <p>e Press Menu/Enter button again to return to main menu.</p>	
<p>Set factory default</p> <p>– For more information: “List of default values” on page 61</p>	<p>a Scroll to highlight Factory default using the navigation keys, then press Yes softkey.</p> <p>b On the next screen, press OK softkey to confirm decision or press Cancel softkey to cancel.</p>	
<p>Reset LAN</p>	<p>a Scroll to highlight LAN reset using the navigation keys, then press Yes softkey.</p> <p>b On the next screen, press OK softkey to confirm decision or press Cancel softkey to cancel.</p>	

Preset menu

The preset function is used to apply full attenuation or open all switching paths (all LEDs light ON). For more information: “[List of default values](#)” on page 61.

Save/Recall State Menu

The save state function is important to enable you to store up to four different configurations and the recall state function allows you to re-instate one of the four saved states for use. This greatly helps to minimize the amount of work required to make “standard” configuration changes.

Function	Action	Illustration
To save state	<p>a Press Save/Recall button.</p> <p>b Scroll to the desired state to store configuration (e.g. <i>State 0</i>) using the navigation keys.</p> <p>c Press Save State softkey to store configuration.</p> <p>d Press Menu/Enter button again to return to main menu.</p>	<pre> SAVE RECALL ----- State 0 State 1 State 2 State 3 Use ^, v, softkey Recall State Save State Clear State </pre>
To recall state	<p>a Press Save/Recall button.</p> <p>b Scroll to the desired state to recall configuration (e.g. <i>STATE 2</i>) using the navigation keys.</p> <p>c Press Recall State softkey to reinstate configuration.</p> <p>d Press Menu/Enter button again to return to main menu.</p>	<pre> SAVE RECALL ----- State 0 State 1 State 2 State 3 State 2 recalled. Recall State Save State Clear State </pre>

List of default values

Key operation	Factory-shipped setting	Factory default key	Preset (*RST)	Backup	Save/Recall	Available means of defining a setting
Channel	All Lights ON ^[a]	<< ^[b]	<<	*	*	K/C ^[c]
Attenuator Type	N/A	<<		*	*	K/C
Supply Voltage	+24V	<<		*	*	K/C
TTL	OFF	<<		*	*	K/C
Beep Volume	8	<<		*		K
GPIB Address	28	<<		*		K
IP Config	AUTO	<<		*		K
Manual IP Addr	"192.168.1.101"	<<		*		K
Manual Gateway	"0.0.0.0"	<<		*		K
Manual Subnet Mask	"255.255.255.0"	<<		*		K

[a] When channel light is ON, it means attenuation is being applied (when attenuator is connected) or switch path is open (when switch is connected).

[b] "<<" symbol shows that the setup is the same as that in the box to the left.

[c] K = Using front panel. C = Using SCPI command.

Definition

Factory Default	All data that the user can set are cleared. The relay cycle count is not cleared.
Preset	Status when you press Preset key.
*RST	Status when you execute *RST in your program.
Backup	Settings that are backed up (set state not affected by turning power ON/OFF). In the table, a setting that is automatically backed up is denoted in the following manner: *: Backup operation performed. Blank: Backup operation not performed.
Save/Recall	Settings that permit Save/Recall of a setup state. In the table, states that can be saved/recalled are denoted in the following manner: *: Save/Recall can be performed. Blank: Save/Recall cannot be performed.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

6 Remote Operations

Configuring Remote Interface	64
Control using Keysight IO Libraries Suite	66
Programming Guide (SCPI)	67

This chapter provides the programming guide for the 11713D/E in SCPI commands.

Configuring Remote Interface

This section briefly describes how to configure the GPIB, USB, and LAN remote interfaces.

NOTE

For more detailed information on remote interface connectivity configuration, refer to the *Keysight Technologies USB/LAN/GPIB Interfaces Connectivity Guide*. If you have installed the IO Libraries Suite, you can access the Connectivity Guide via the Keysight IO Libraries Control icon. Alternatively, you can access the Connectivity Guide via the Web at www.keysight.com/find/connectivity.

NOTE

The latest version of Keysight IO Libraries Suite can be downloaded from www.keysight.com/find/iosuitedownload. The Keysight Instrument Control DVD, with the above software, is no longer shipped with Keysight instruments. If you require a Keysight Instrument Control DVD, it can be ordered by contacting your local Keysight Customer Contact Center.

Interface selection

You can choose to control the 11713D/E remotely using the GPIB, USB, or LAN interfaces.

For information on selecting and configuring the remote interface manually from the driver front panel or remotely via virtual front panel, refer to [Chapter 5, "Local Operations"](#).

NOTE

It is expected that most users will use the front panel keys to set up the remote interfaces. The remote interface commands are provided for completeness (for front panel operation).

GPIB configuration

Each device on the GPIB (IEEE-488) interface must have a unique address. You can set the 11713D/E's address to any value between 0 and 30. The attenuator/switch driver is shipped with a default address set to 28. The GPIB address is stored in non-volatile memory and does not change when the driver is switched off or after a remote interface reset.

For information on setting the GPIB address manually from the front panel, refer to ["Connecting over GPIB"](#) on page 92.

USB configuration

The USB interface requires no front panel or remote configuration. The USB cannot be changed – it is set at the factory and is unique for each 11713D/E.

NOTE

For further information on USB configuration, refer to ["Connecting over USB"](#) on page 93.

NOTE

Before connecting the USB cable, make sure that I/O software is installed on your computer.

NOTE

For more information about *Keysight IO Libraries software*, refer to the Connectivity Guide. If you have installed other I/O software, refer to the documentation that accompanies the software.

LAN configuration

The 11713D/E has three LAN operating modes:

- Dynamic mode (Dynamic Host Configuration Protocol or DHCP)
- Auto IP mode (Local PC Control or isolated LAN)
- Static mode (Manual mode)

Refer to “[Connecting over LAN](#)” on page 94 to configure the above LAN operating modes.

Control using Keysight IO Libraries Suite

The Keysight IO Libraries Suite is a collection of libraries that provides an ability to use the Keysight instruments from a test and measurement program. **Figure 6-1** shows an example of controlling the instrument via Keysight IO Libraries Suite (when the IP address of the 11713E is 10.74.76.53). Please ensure the remote instrument name is selected.

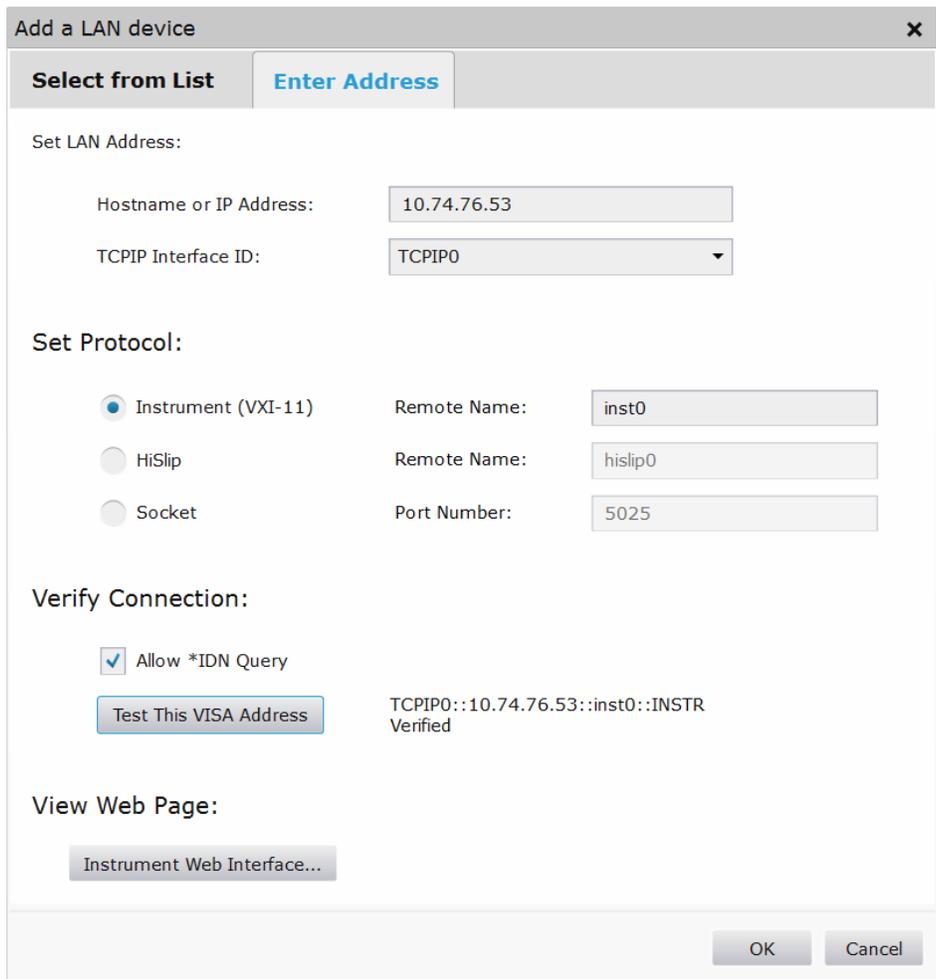


Figure 6-1 Example of control using Keysight IO Libraries Suite

Programming Guide (SCPI)

SCPI command syntax

The following conventions are used for SCPI command syntax for remote interface programming.

- Square brackets ([]) indicate optional keywords or parameters
- Braces ({}) enclose parameter choices within a command string
- Angle brackets (<>) enclose parameters for which you must specify a value
- A vertical bar (|) separates multiple parameters

Rules for using a channel or scan list

Many of the SCPI commands include a channel list or scan list parameter which allows you to specify one or more channels. The channel number has the form (@*bnn*), where *b* is the bank number and *nn* is the channel number.

Channel list is from 101 to 110 for bank 1 and 201 to 210 for bank 2.

You can specify a bank, a single channel, multiple channels, or a range of channels as described below.

- The following command closes a single channel (channel 4) on bank 1:

ROUTE:CLOSE (@104)

- The following command closes multiple channels on modules in banks 1 and 2:

ROUTE:CLOSE (@104,107, 201, 206)

- The following command closes a range of channels. When you specify a range of channels, the range may contain invalid channels (they are ignored), but the first and last channel in the list must be valid:

ROUTE:CLOSE (@101:109)

Commands relevant to 11713D/E

ROUTE:CLOSE

Closes the switching path(s). The first parameter specifies the Channels in the form of 'bcc' where b = bank number (0-n, range model dependent) and cc = channel number (00-nn, range model dependent). For example: 103 or 104 or 108. For detailed information, refer to *Rules for using a channel or scan list* section.

ROUTE:CLOSE <channel_list>

Query?	Yes
Set?	Yes
Set/Return Parameters	Numeric representation format: Integer (for example, 8)
Minimum	101 (11713D) 101, 201 (11713E)
Maximum	110 (11713D) 110, 210 (11713E)
Units	None

Examples

To close the channel number 106:

ROUTE:CLOSE (@106)

To query the closed list of channels:

ROUTE:CLOSE? <channel_list>

Related Commands

ROUTE:OPEn

ROUTE:CLOSE:ALL

ROUTE:OPEn:ALL

ROUTE:OPEn

Opens the switching path(s). The first parameter specifies the Channels in the form of 'bcc' where b = bank number (0-n, range model dependent) and cc = channel number (00-nn, range model dependent). For example: 103 or 104 or 108. For detailed information, refer to *Rules for using a channel or scan list* section.

ROUTE:OPEn <channel_list>

Query?	Yes
Set?	Yes
Set/Return Parameters	Numeric representation format: Integer (for example, 8)
Minimum	101 (11713D) 101, 201 (11713E)

Maximum	110 (11713D) 110,210 (11713E)
Units	None

Examples

To open the channel number 103:

`ROUTE:OPEn (@103)`

To query the open list of channels:

`ROUTE:OPEn? <channel_list>`

Related Commands

`ROUTE:CLOSe`

`ROUTE:CLOSe:ALL`

`ROUTE:OPEn:ALL`

ROUTE:CLOSe:ALL

Closes all switching paths.

`ROUTE:CLOSe:ALL`

Query?	No
Set?	Yes
Set Parameters	Numeric representation format: Integer (for example, 8)
Minimum	n/a
Maximum	n/a
Units	None

Examples

To close all channels:

`ROUTE:CLOSe:ALL`

Related Commands

`ROUTE:CLOSe`

`ROUTE:OPEn`

`ROUTE:OPEn:ALL`

ROUTE:OPEn:ALL

Opens all switching paths.

`ROUTE:OPEn:ALL`

Query?	No
Set?	Yes

Set Parameters	Numeric representation format: Integer (for example, 8)
Minimum	n/a
Maximum	n/a
Units	None

Examples

To open all channels:

```
ROUTE:OPEn:ALL
```

Related Commands

```
ROUTE:CLOSe
```

```
ROUTE:OPEn
```

```
ROUTE:CLOSe:ALL
```

```
:CONFigure[:BANK1]:X/:CONFigure[:BANK1]:Y
```

```
:CONFigure:BANK2:X/:CONFigure:BANK2:Y
```

Set the attenuator or solid state switch type (model number) for corresponding attenuators or solid state switches.

```
:CONFigure[:BANK1]:X <model>
```

```
:CONFigure[:BANK1]:Y <model>
```

```
:CONFigure:BANK2:X <model>
```

```
:CONFigure:BANK2:Y <model>
```

Query?	Yes
Set?	Yes
Set/Return Parameters	NA KT8494 KT8495 KT8495K KT8496 KT8497 KT84904 KT84905 KT84906 KT84907 KT84908 KTP9400 KTP9402 KTP9404 KTU9400 KTU9397
Minimum	n/a
Maximum	n/a
Units	None

Examples

To set the attenuator or solid state switch type to KTP9400:

```
:CONF:BANK1:X KTP9400
```

To query the set attenuator or solid state switch type:

```
:CONFigure[:BANK1]:Y?
```

```
:CONFigure:BANK2:X?
```

```
:CONFigure:BANK2:Y?
```

Related Commands

```

CONFigure[:BANK1]/CONFigure:BANK2
CONFigure[:BANK1]:TTL/CONFigure:BANK2:TTL
CONFigure[:BANK1]:PULSe:DRIVE
CONFigure:BANK2:PULSe:DRIVE
CONFigure[:BANK1]:PULSe:WIDTH
CONFigure:BANK2:PULSe:WIDTH
ATTenuator[:BANK1]:X/ATTenuator[:BANK1]:Y
ATTenuator:BANK2:X/ATTenuator:BANK2:Y

```

CONFigure[:BANK1]/CONFigure:BANK2

Sets and returns the supply voltage for each bank.

```

CONFigure[:BANK1] <voltage>
CONFigure:BANK2 <voltage>

```

Query?	Yes
Set?	Yes
Set/Return Parameters	OFF P5v P15v P24v USER
Minimum	n/a
Maximum	n/a
Units	None

Examples

To set the supply voltage for bank 1 to P24v:

```
CONF:BANK1 P24v
```

To query the set supply voltage for bank 1 and bank 2:

```
CONFigure:BANK1?
```

```
CONFigure:BANK2?
```

Related Commands

```

:CONFigure[:BANK1]:X/:CONFigure[:BANK1]:Y
:CONFigure:BANK2:X/:CONFigure:BANK2:Y
CONFigure[:BANK1]:TTL/CONFigure:BANK2:TTL
CONFigure[:BANK1]:PULSe:DRIVE
CONFigure:BANK2:PULSe:DRIVE
CONFigure[:BANK1]:PULSe:WIDTH
CONFigure:BANK2:PULSe:WIDTH
ATTenuator[:BANK1]:X/ATTenuator[:BANK1]:Y
ATTenuator:BANK2:X/ATTenuator:BANK2:Y

```

CONFigure[:BANK1]:TTL/CONFigure:BANK2:TTL

Turns TTL ON or OFF for each bank. The query commands return supply voltage status for each bank.

CONFigure[:BANK1]:TTL <bool>

CONFigure:BANK2:TTL <bool>

Query?	Yes
Set?	Yes
Set/Return Parameters	Boolean Data: 0 1 OFF ON
Minimum	n/a
Maximum	n/a
Units	n/a

Examples

To turn TTL ON for bank 1:

CONF:BANK1:TTL 1

To turn TTL OFF for bank 1:

CONF:BANK1:TTL 0

To query the set supply voltage status for bank 1 and bank 2:

CONFigure[:BANK1]:TTL?

CONFigure:BANK2:TTL?

Related Commands

:CONFigure[:BANK1]:X/:CONFigure[:BANK1]:Y

:CONFigure:BANK2:X/:CONFigure:BANK2:Y

CONFigure[:BANK1]/CONFigure:BANK2

CONFigure[:BANK1]:PULSe:DRIVE

CONFigure:BANK2:PULSe:DRIVE

CONFigure[:BANK1]:PULSe:WIDTh

CONFigure:BANK2:PULSe:WIDTh

ATTenuator[:BANK1]:X/ATTenuator[:BANK1]:Y

ATTenuator:BANK2:X/ATTenuator:BANK2:Y

CONFigure[:BANK1]:PULSe:DRIVE**CONFigure:BANK2:PULSe:DRIVE**

Sets or returns the instrument's pulse drive operating mode: 0 for standard mode and 1 for pulse mode.

CONFigure[:BANK1]:PULSe:DRIVE <bool>

CONFigure:BANK2:PULSe:DRIVE <bool>

Query?	Yes
Set?	Yes
Set/Return Parameters	Boolean Data: 0 1 OFF ON
Minimum	n/a
Maximum	n/a
Units	n/a

Examples

To set the pulse drive operating mode to 1 (pulse mode):

```
CONF:PULS:DRIV 1
```

To set the pulse drive operating mode to 0 (standard mode):

```
CONF:PULS:DRIV 0
```

To query the set pulse drive operating mode:

```
CONFfigure[:BANK1]:PULS:DRIV?
```

```
CONFfigure:BANK2:PULS:DRIV?
```

Related Commands

```
:CONFfigure[:BANK1]:X/:CONFfigure[:BANK1]:Y
```

```
:CONFfigure:BANK2:X/:CONFfigure:BANK2:Y
```

```
CONFfigure[:BANK1]/CONFfigure:BANK2
```

```
CONFfigure[:BANK1]:TTL/CONFfigure:BANK2:TTL
```

```
CONFfigure[:BANK1]:PULSe:WIDTh
```

```
CONFfigure:BANK2:PULSe:WIDTh
```

```
ATTenuator[:BANK1]:X/ATTenuator[:BANK1]:Y
```

```
ATTenuator:BANK2:X/ATTenuator:BANK2:Y
```

CONFfigure[:BANK1]:PULSe:WIDTh

CONFfigure:BANK2:PULSe:WIDTh

Sets or returns the instrument's pulse drive width.

```
CONFfigure[:BANK1]:PULSe:WIDTh <NRf+>
```

```
CONFfigure:BANK2:PULSe:WIDTh <NRf+>
```

Query?	Yes
Set?	Yes
Set/Return Parameters	Numeric representation format: Integer (for example, 8)
Minimum	1
Maximum	50
Units	milliseconds

Examples

To set the pulse drive width:

```
CONF:BANK2:PULS:WIDT 20
```

To query the set pulse drive width:

```
CONFfigure[:BANK1]:PULSe:WIDTh?
```

```
CONFfigure:BANK2:PULSe:WIDTh?
```

Related Commands

```
:CONFfigure[:BANK1]:X/:CONFfigure[:BANK1]:Y
```

```
:CONFfigure:BANK2:X/:CONFfigure:BANK2:Y
```

```
CONFfigure[:BANK1]/CONFfigure:BANK2
```

```
CONFfigure[:BANK1]:TTL/CONFfigure:BANK2:TTL
```

```
CONFfigure[:BANK1]:PULSe:DRIVE
```

```
CONFfigure:BANK2:PULSe:DRIVE
```

```
ATTenuator[:BANK1]:X/ATTenuator[:BANK1]:Y
```

```
ATTenuator:BANK2:X/ATTenuator:BANK2:Y
```

NOTE

CONFfigure[:BANK1]:PULSe:DRIVE, CONFfigure:BANK2:PULSe:DRIVE, CONFfigure[:BANK1]:PULSe:WIDTh and CONFfigure:BANK2:PULSe:WIDTh SCPI commands are only supported for 11713D and 11713E instruments.

ATTenuator[:BANK1]:X/ATTenuator[:BANK1]:Y

ATTenuator:BANK2:X/ATTenuator:BANK2:Y

Sets the attenuation level of corresponding attenuator(s).

```
ATTenuator[:BANK1]:X <NR1>
```

```
ATTenuator:BANK2:X <NR1>
```

Query?	Yes
Set?	Yes
Set/.Return Parameters	Attenuation level of corresponding attenuator
Minimum	n/a
Maximum	n/a
Units	n/a

Examples

To set the attenuation level to 4:

```
ATT:X 4
```

To query the set attenuation level:

```
ATTenuator[:BANK1]:X?
```

```
ATTenuator:BANK2:X?
```

Related Commands

```

:CONFigure[:BANK1]:X/:CONFigure[:BANK1]:Y
:CONFigure:BANK2:X/:CONFigure:BANK2:Y
CONFigure[:BANK1]/CONFigure:BANK2
CONFigure[:BANK1]:TTL/CONFigure:BANK2:TTL
CONFigure[:BANK1]:PULSe:DRIVE
CONFigure:BANK2:PULSe:DRIVE
CONFigure[:BANK1]:PULSe:WIDTh
CONFigure:BANK2:PULSe:WIDTh

```

DIAGnostic:RELAy:CYCLes?

Checks number of cycles for individual section. For detailed information, refer to *Rules for using a channel or scan list* section.

```
DIAGnostic:RELAy:CYCLes? <channel_list>
```

Query?	Yes, query only
Set?	No
Return Parameters	Numeric representation format: Integer (for example, 8)
Minimum	101 (11713D) 101, 201 (11713E)
Maximum	110 (11713D) 110, 210 (11713E)
Units	None

Examples

To query the number of cycles:

```
DIAG:REL:CYCL? (@1,8)/DIAG:REL:CYCL? (@1:8)
```

DISPlay:ATTenuation

Turns the front panel display to the ATTN page.

```
DISPlay:ATTenuation
```

Query?	No
Set?	Yes
Set Parameters	n/a
Minimum	n/a
Maximum	n/a
Units	None

Examples

DISP:ATT

Related Commands

DISPlay:IO

DISPlay:SYSTem

DISPlay:CYCLe

DISPlay:INFormation

DISPlay:UTILity

HCOPY:SDUMp:DATA?

DISPlay:IO

Turns the front panel display to the IO page.

DISPlay:IO

Query?	No
Set?	Yes
Set Parameters	n/a
Minimum	n/a
Maximum	n/a
Units	None

Examples

DISP:IO

Related Commands

DISPlay:ATTenuation

DISPlay:SYSTem

DISPlay:CYCLe

DISPlay:INFormation

DISPlay:UTILity

HCOPY:SDUMp:DATA?

DISPlay:SYSTem

Turns the front panel display to the SYSTEM page.

DISPlay:SYSTem

Query?	No
Set?	Yes
Set Parameters	n/a
Minimum	n/a

Maximum	n/a
Units	None

Examples

DISP:SYST

Related Commands

DISPlay:ATTenuation

DISPlay:IO

DISPlay:CYCLe

DISPlay:INFormation

DISPlay:UTILity

HCOPY:SDUMP:DATA?

DISPlay:CYCLe

Turns the front panel display to the CYCLE page.

DISPlay:CYCLe

Query?	No
Set?	Yes
Set Parameters	n/a
Minimum	n/a
Maximum	n/a
Units	None

Examples

DISP:CYCL

Related Commands

DISPlay:ATTenuation

DISPlay:IO

DISPlay:SYSTEM

DISPlay:INFormation

DISPlay:UTILity

HCOPY:SDUMP:DATA?

DISPlay:INFormation

Turns the front panel display to the INFO page.

DISPlay:INFormation

Query?	No
Set?	Yes
Set Parameters	n/a
Minimum	n/a
Maximum	n/a
Units	None

Examples

DISP:INF

Related Commands

DISPlay:ATTenuation

DISPlay:IO

DISPlay:SYSTem

DISPlay:CYCLe

DISPlay:UTILity

HCOPY:SDUMp:DATA?

DISPlay:UTILity

Turns the front panel display to the UTILITY page.

DISPlay:UTILity

Query?	No
Set?	Yes
Set Parameters	n/a
Minimum	n/a
Maximum	n/a
Units	None

Examples

DISP:UTIL

Related Commands

DISPlay:ATTenuation

DISPlay:IO

DISPlay:SYSTem

DISPlay:CYCLe

DISPlay:INFormation

HCOPY:SDUMp:DATA?

HCOPY:SDUMp:DATA?

Provides screen shots of the front panel display. Returns an image of the display in .bmp format.

HCOPY:SDUMp:DATA?

Query?	Yes, query only
Set?	No
Return Parameters	Binary Data
Minimum	n/a
Maximum	n/a
Units	None

Examples

HCOPY:SDUMp:DATA?

Related Commands

DISPlay:ATTenuation

DISPlay:IO

DISPlay:SYSTem

DISPlay:CYCLE

DISPlay:INFormation

DISPlay:UTILity

SYSTEM:ERRor?

Returns the next error number followed by its corresponding error message string from the remote programming error queue. The queue is FIFO (first-in, first-out) buffer that stores errors as they occur. As it is read, each error is removed from the queue. When all errors have been read, the query returns "0,No Error". If more errors are accumulated than the queue can hold, the last error in the queue is "-350,Too Many Errors".

SYSTEM:ERRor?

Query?	Yes, query only
Set?	No
Return Parameters	Integer, String
Minimum	n/a
Maximum	n/a
Units	None

Examples

To query the next error from the queue:

SYST:ERR?

Related Commands`SYSTem:PREset``SYSTem:REMOte``SYSTem:COMMunicate:TCPIp:CONTRol?`**SYSTem:PREset**

Presets the switch/attenuator driver to the following factory-defined states:

- All channels in both banks will be lighted on.

`SYSTem:PREset`

Query?	No
Set?	Yes
Set Parameters	n/a
Minimum	n/a
Maximum	n/a
Units	None

Examples

To preset the switch/attenuator driver:

`SYSTem:PREset`**Related Commands**`SYSTem:ERRor?``SYSTem:REMOte``SYSTem:COMMunicate:TCPIp:CONTRol?`**SYSTem:REMOte**

Sets the interface in the Remote state, which disables all front panel controls except the Local key. Pressing the Local key in the Remote state returns the front panel to the Local state.

`SYSTem:REMOte`

Query?	No
Set?	Yes
Set Parameters	n/a
Minimum	n/a
Maximum	n/a
Units	None

Examples

To set the interface in the Remote state:

```
SYST:REM
```

Related Commands

```
SYSTem:ERRor?
```

```
SYSTem:PREset
```

```
SYSTem:COMMunicate:TCPIP:CONTRol?
```

SYSTem:COMMunicate:TCPIP:CONTRol?

Reads the initial control connection port number for Sockets communications. This connection is used to send and receive commands and queries.

- Use the Control socket connection to send a Device Clear (DCL) to the instrument or to detect pending Service Request (SRQ) events.

```
SYSTem:COMMunicate:TCPIP:CONTRol?
```

Query?	Yes, query only.
Set?	No
Return Parameters	Integer
Minimum	n/a
Maximum	n/a
Units	None

Examples

To query the initial control connection port number for Sockets communications:

```
SYST:COMM:TCP:CONT?
```

Related Commands

```
SYSTem:ERRor?
```

```
SYSTem:PREset
```

```
SYSTem:REMote
```

SYSTem:PERSONa:MANUFACTURer

Sets the manufacturer string returned by *IDN? Query.

```
SYSTem:PERSONa:MANUFACTURer <quoted string>
```

Query?	Yes
Set?	Yes
Set/Return Parameters	String
Minimum	n/a
Maximum	n/a
Units	None

Examples

To set the manufacturer string to “Keysight Technologies”:

```
SYST:PERS:MAN "Keysight Technologies"
```

To query the set manufacturer string:

```
SYSTem:PERS:MAN?
```

Related Commands

```
SYSTem:PERSONa:MANUFACTURer:DEFault
```

SYSTem:PERSONa:MANUFACTURer:DEFault

Sets the manufacturer string to default (Keysight Technologies).

```
SYSTem:PERSONa:MANUFACTURer:DEFault
```

Query?	Yes
Set?	Yes
Set/Return Parameters	String
Minimum	n/a
Maximum	n/a
Units	None

Examples

To set the manufacturer string to default:

```
SYST:PERS:MAN:DEF
```

To query the default manufacturer string:

```
SYSTem:PERSONa:MANUFACTURer:DEFault?
```

Related Commands

```
SYSTem:PERSONa:MANUFACTURer
```

SYSTem:PERSONa:MODEl

Sets the model string returned by *IDN? Query.

```
SYSTem:PERSONa:MODEl <quoted string>
```

Query?	Yes
Set?	Yes
Set/Return Parameters	String
Minimum	n/a
Maximum	n/a
Units	None

Examples

To set the model string to “11713E”:

```
SYST:PERS:MOD "11713E"
```

To query the set model string:

```
SYSTem:PERSONa:MODEl?
```

Related Commands

```
SYSTem:PERSONa:MODEl:DEFault
```

SYSTem:PERSONa:MODEl:DEFault

Sets the model string to default (depends on the model).

```
SYSTem:PERSONa:MODEl:DEFault
```

Query?	Yes
Set?	Yes
Set/Return Parameters	String
Minimum	n/a
Maximum	n/a
Units	None

Examples

To set the model string to default:

```
SYST:PERS:MOD:DEF
```

To query the default model string:

```
SYSTem:PERSONa:MODEl:DEFault?
```

Related Commands

```
SYSTem:PERSONa:MODEl
```

SYSTem:SET

Sets up the instrument as defined by the data in the binary block of data from the computer.

- A binary block of data, consisting of bytes of setup information. The number of bytes is a dynamic number that is read and allocated by the instrument's firmware.
- SYSTem:SET query operates the same as the *LRN? query

```
SYSTem:SET <Binary Block>
```

Query?	Yes
Set?	Yes
Set/Return Parameters	Binary Data
Minimum	n/a

Maximum	n/a
Units	None

Examples

To define the setup information:

`SYST:SET #516384.....`

To query the setup information:

`SYSTem:SET?`

Related Commands

`*LRN?`

***CLS**

Clears the following registers:

- Standard Event Status
- Operation Status Event
- Questionable Status Event
- Status Byte
- Error Queue

`*CLS`

Query?	No
Set?	Yes
Set Parameters	n/a
Minimum	n/a
Maximum	n/a
Units	None

Examples

To clear the registers:

`*CLS`

Related Commands

`*IDN?`

`*OPC?`

`*RST`

***ESE**

Programs the Standard Event Status Enable register bits. The programming determines which events of the Standard Event Status Event register (refer to “*ESR?”) are allowed to set the ESB (Event Summary Bit) of the Status Byte register. A “1” in the bit position enables the corresponding event. All of the enabled events of the Standard Event Status Event Register are logically ORed to cause the Event Summary Bit (ESB) of the Status Byte Register to be set.

The query reads the Standard Event Status Enable register.

Table 6-1 Bit configuration of Standard Event Status Enable register

Bit Position	7	6	5	4	3	2	1	0
Bit Name	PON	n.u.	CME	EXE	DDE	QYE	n.u.	OPC
Bit Weight	128		32	16	8	4		1

n.u. - Not Used
 PON- Power On
 CME - Command Error
 EXE - Execution Error
 DDE - Device-dependent Error
 QYE - Query Error
 OPC - Operation Complete

***ESE <Integer>**

Query?	Yes
Set?	Yes
Set/Return Parameters	Integer (register value)
Minimum	0
Maximum	255
Units	None

Examples

To set the bit in the enable register part of the standard event status register to 129:

***ESE 129**

To query the enable register part of the standard event status register:

***ESE?**

Related Commands

***ESR?**

***SRE**

***STB?**

***ESR?**

Reads and clears the Standard Event Status Event register. The bit configuration of this register is the same as the Standard Event Status Enable register (refer to “*ESE”).

***ESR?**

Query?	Yes, query only
Set?	No
Return Parameters	Integer (register value)
Minimum	n/a
Maximum	n/a
Units	None

Examples

To query the Standard Event Status Event register:

ESR?*Related Commands*****ESE*****SRE*****STB?*****IDN?**

Requests the switch/attenuator driver to identify itself. It returns the data in four fields separated by commas. For example, Keysight Technologies, 11713E, MY00000000, A.00.01.

Field	Description
Keysight Technologies	Manufacturer
11713x	Model number
MYxxxxxxx	Serial number
A.xx.xx	Firmware revision

***IDN?**

Query?	Yes, query only
Set?	No
Return Parameters	String
Minimum	n/a
Maximum	n/a
Units	None

Examples

To query identification information of the device:

`*IDN?`

Related Commands

`*CLS`

`*OPC?`

`*RST`

***OPC?**

Sets the standard event status register to monitor the completion of all commands. The OPC command query returns the ASCII character “1” in the output queue to indicate completion of all pending operations.

`*OPC?`

Query?	Yes, query only
Set?	No
Return Parameters	Integer, 0 1
Minimum	n/a
Maximum	n/a
Units	None

Examples

To query the Standard Event Status Register:

`*OPC?`

Related Commands

`*CLS`

`*IDN?`

`*RST`

***RST**

Resets the switch/attenuator driver to the following factory-defined states:

- All channels in both banks will be lighted on.

`*RST`

Query?	No
Set?	Yes
Set Parameters	n/a
Minimum	n/a

Maximum	n/a
Units	None

Examples

To reset the instrument:

*RST

Related Commands

*CLS

*IDN?

*OPC?

*SRE

Enables the bits in the status byte enable register. The selected enabled bits are summarized in the “Master Status Summary” (MSS) bit (bit 6) of the Status Byte register. If any of the selected bit condition changes from 0 to 1, a service request is generated. Table below shows the contents of this register.

The query returns the current contents of the status byte enable register. The format of the return is in the range of 0 to 255.

Table 6-2 Bit configuration of Status Byte Enable register

Bit Position	7	6	5	4	3	2-0
Bit Name	OPER	MSS RQS	ESB	MAV	QUES	n.u.
Bit Weight	128	64	32	16	8	

n.u. - Not Used

OPER - Operation Status Summary

MSS - Master Status Summary

RQS - Request for Service

ESB - Event Status Byte Summary

MAV - Message Available

QUES - Questionable Status Summary

*SRE <Integer>

Query?	Yes
Set?	Yes
Set/Return Parameters	Integer (register binary value)
Minimum	0

Maximum	255
Units	None

Examples

To set the bit in the status byte enable register to 128:

***SRE 128**

To query the status byte enable register:

***SRE?**

Related Commands

***ESE**

***ESR?**

***STB?**

*STB?

Reads the condition register of the Status Byte register and returns a decimal value which corresponds to the binary-weighted sum of all bits set in the register.

***STB?**

Query?	Yes
Set?	No
Return Parameters	Integer (register value)
Minimum	n/a
Maximum	n/a
Units	None

Examples

To query the condition register of the status byte register:

***STB?**

Related Commands

***ESE**

***ESR?**

***SRE**

*LRN?

Returns a binary string of all the saved EEPROM values required to set the instrument to its current state.

The return string includes “SYSTEM:SET” command header that can be used directly, provided the receiver accepts binary data.

***LRN?**

Query?	Yes, query only
Set?	No
Return Parameters (Optional)	Binary Data
Minimum	n/a
Maximum	n/a
Units	None

Examples

To return all the saved EEPROM values:

*LRN?

Related Commands

*CLS

*IDN?

*OPC?

*RST

SYSTem:SET

7 Remote Interface Configurations

- Connecting the 11713D/E to your Computer 92
- Exploring the 11713D/E Web Interface over LAN 98

This chapter provides you information and steps to establish remote connections with the Keysight 11713D/E attenuator/switch drivers via GPIB, USB, and LAN. You will also be introduced to the 11713D/E web interface over LAN.

Connecting the 11713D/E to your Computer

NOTE

To easily connect the 11713D/E to your PC, configure and verify your connection, you can use the Keysight IO Libraries Suite, the E2094M Keysight IO Libraries for Windows, or and equivalent.

- Keysight IO Libraries Suite for Windows 98/2000/ME/XP. For information and to install, use the *Automation Ready CD with the Keysight IO Libraries Suite*, which is shipped with the 11713D/E.
- E2094M Keysight IO Libraries Suite for Windows 98/NT/2000/ME/ XP. You can find information and install this application via the Web at www.keysight.com/find/iolib.
- You can also access other information about Keysight IO Libraries at www.keysight.com/find/iolib.

NOTE

The procedures in this section refer to the *Keysight Technologies USB/LAN/GPIB Interfaces Connectivity Guide*. If you have installed the IO Libraries Suite, you can access the Connectivity Guide via the Keysight IO Libraries Control icon. Or, you can access the Connectivity Guide via the Web at www.keysight.com/find/connectivity.

Connecting over GPIB

- 1 Make sure you have installed the required I/O software on your computer.
- 2 Follow the instructions included with your GPIB interface card to install the GPIB hardware in your computer.
- 3 Connect the GPIB cable (not provided) between the computer and the 11713D/E.
- 4 Make sure power is applied to your computer and verify that the operating system is fully booted. Then apply power to 11713D/E.
- 5 Configure your GPIB hardware as instructed by the documentation provided by the hardware vendor.
- 6 Use the *Connection Expert* utility of the Keysight IO Libraries Suite to add the 11713D/E and verify a connection.

NOTE

If you have installed any other I/O software, refer to the documentation included with that software.

- 7 The 11713D/E is shipped from the factory with a default GPIB address of **28**. To change the address, refer to table below:

Step	Action	Illustration
1	<p>Changing GPIB address (integer between 0 to 30)</p> <p>a At IO SETUP screen, press GPIB ADDR softkey.</p> <p>b Current GPIB address is displayed on screen (default address is 28).</p> <p>c Use navigation keys to change value.</p> <p>d Press SAVE ADDR to save and GPIB ADDR SAVED is displayed at the bottom of LCD.</p> <p>e Press BACK softkey to return to IO SETUP.</p>	

- 8** Now you can use various programming environments to control the 11713D/E. For an overview on programming instruments via GPIB, refer to the *Connectivity Guide*.

Connecting over USB

The USB interface requires no front panel configuration.

NOTE Before connecting the USB cable, make sure that I/O software is installed on your computer. See **“Connecting the 11713D/E to your Computer”** on page 92 for more information on installing the Keysight IO Libraries software.

- 1 After the I/O software is installed on your computer, connect a 11713D/E to your computer using a Type Mini-B 5 pin USB cable.
- 2 Make sure power is applied to your computer and verify that the operating system is fully booted. Then apply power to the 11713D/E.
- 3 The *Found New Hardware Wizard* will automatically start and guide you through configuring the 11713D/E as a USB device. To install the software automatically, accept all defaults.

NOTE If you have installed the Keysight I/O Libraries Software, this also installs the required low-level software drivers. Therefore you do not need to insert the CD when the Found New Hardware Wizard instructs you to do so.

NOTE If you have installed any other I/O interface software, refer to the documentation included in that software.

- 4 Use the *Connectivity Expert* utility of the Keysight I/O Libraries Suite to verify that the 11713D/E is displayed under the USB interface.
- 5 Now you can use various programming environments to control the 11713D/E. For an overview on programming instructions via USB, refer to the *Connectivity Guide*.

Connecting over LAN

The 11713D/E has two LAN operating modes:

- Auto mode
- Manual mode

Selecting the LAN network type

You can connect and configure your 11713D/E for site LAN or isolated (non-site) LAN operation.



- A *Site LAN* network is defined as a local area network (LAN) in which computers and LAN-enabled instruments are connected to a site LAN (workgroup LAN, Intranet, or enterprise LAN) via optional routers, hubs, and/or switches.
- An *Isolated LAN* network is defined as a local area network (LAN) in which computers and LAN-enabled instruments are not connected to a site LAN.

Auto mode

This mode is used when you are connecting 11713D/E via site LAN. In auto mode, the IP Address, Subnet Mask, and Default Gateway values are obtained from the DHCP server or automatically assigned and the values cannot be configured from the front panel.

To prepare the 11713D/E for auto mode,

Step	Action	Illustration
1	Ensure your computer and 11713D/E are turned on and connected to LAN <ol style="list-style-type: none"> a Connect your computer and 11713D/E to LAN outlets using standard LAN cable. b Make sure power is applied to your computer and verify that the operating system is fully booted. c Apply power to 11713D/E and background LED color turns red, indicating standby mode. d Allow 11713D/E to warm up for 15 seconds, then press the ON button (LED turns from red to green). 	

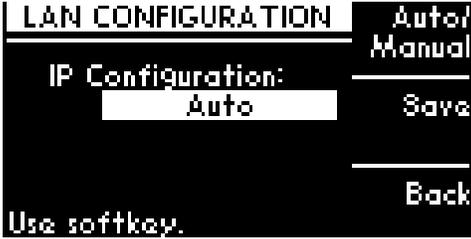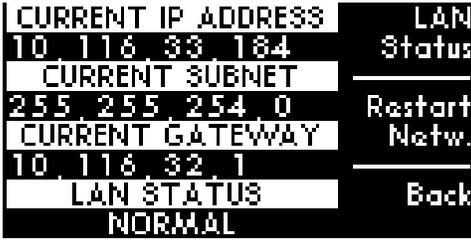Step	Action	Illustration
2	<p>Verify 11713D/E LAN configuration is ready for auto mode</p> <p>a Press Menu/Enter button on the front panel of 11713D/E.</p> <p>b Select IO using navigation keys and press Menu/Enter.</p> <p>c At IO SETUP screen, press LAN CONFIG softkey.</p> <p>d At LAN CONFIGURATION screen, ensure IP Configuration is AUTO.</p> <p>e If needed, press Auto/Manual softkey until AUTO is displayed and SAVE.</p> <p>f Press BACK softkey to go back to IO SETUP screen.</p>	 <p>IO SETUP</p> <p>GPIB Addr</p> <p>IP Addr</p> <p>LAN Config</p> <p>Use softkey.</p>
		 <p>LAN CONFIGURATION</p> <p>Auto/Manual</p> <p>IP Configuration: Auto</p> <p>Save</p> <p>Back</p> <p>Use softkey.</p>
3	<p>Verify LAN status on 11713D/E</p> <p>a At IO SETUP screen, press IP ADDR softkey.</p> <p>b At IP ADDRESS screen, select LAN STAT softkey.</p> <p>c Verify values CURRENT IP ADDRESS, CURRENT SUBNET, and CURRENT GATEWAY are valid.</p> <p>d Ensure LAN STATUS is NORMAL.</p> <p>e If LAN STATUS is FAULT, check your LAN connection and then press Restart Netw softkey and wait.</p> <p>f Press BACK softkey to go back to IP ADDRESS screen.</p>	 <p>IP ADDRESS :</p> <p>LAN Status</p> <p>Manual IP</p> <p>Back</p> <p>Use softkey.</p>
		 <p>CURRENT IP ADDRESS</p> <p>10.118.33.184</p> <p>CURRENT SUBNET</p> <p>255.255.254.0</p> <p>CURRENT GATEWAY</p> <p>10.118.32.1</p> <p>LAN STATUS</p> <p>NORMAL</p> <p>LAN Status</p> <p>Restart Netw.</p> <p>Back</p>

Now you can use the 11713D/E Web Browser Interface to access and control the instrument. See [“Exploring the 11713D/E Web Interface over LAN”](#) on page 98.

If you plan to program the instrument over LAN or use such programs, make sure you have installed the required I/O software on your computer.

Use the *Connectivity Expert* utility of the Keysight IO Libraries Suite to add the 11713D/E and verify a connection. When identifying the instrument, it is easiest if you use the IP address noted in step 3 above.


NOTE If you have installed any other I/O software, refer to the documentation included with that software.

Now you can use various programming environments to control the 11713D/E. For an overview on programming instructions via USB, refer to the *Connectivity Guide*.

Manual mode

In a manual mode, you must set up the IP Address, Subnet Mask, and Default Gateway that are compatible with your network infrastructure. If it is not correctly set up, the 11713D/E will not be visible on your network.

To prepare the 11713D/E for manual mode,

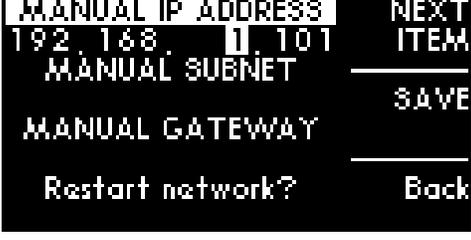Step	Action	Illustration	
1	Ensure your computer is connected to 11713D/E are turned on	<ul style="list-style-type: none"> a Connect your computer to 11713D/E using CAT5 crossover cable. b Make sure power is applied to your computer and verify that the operating system is fully booted. c Apply power to 11713D/E and background LED color turns red, indicating standby mode. d Allow 11713D/E to warm up for 15 seconds, then press the ON button (LED turns from red to green). 	
2	Verify 11713D/E LAN configuration is ready for manual mode	<ul style="list-style-type: none"> a Press Menu/Enter button on the front panel of 11713D/E. b Select IO using navigation keys and press Menu/Enter. c At IO SETUP screen, press LAN CONFIG softkey. d At LAN CONFIGURATION screen, ensure IP Configuration is Manual. e If needed, press Auto/Manual softkey until Manual is displayed and SAVE. f Press BACK softkey to go back to IO SETUP screen. 	 <p>The screenshot shows the IO SETUP menu with three options: GPIB Addr, IP Addr, and LAN Config. The LAN Config option is highlighted, and the text 'Use softkey.' is visible at the bottom left.</p>
3	Manually enter IP ADDRESS, SUBNET, and GATEWAY	<ul style="list-style-type: none"> a At IO SETUP screen, press IP ADDR softkey. b At IP ADDRESS screen, select MANUAL IP softkey. c At MANUAL IP ADDRESS screen, enter IP ADDRESS, SUBNET, and GATEWAY (scroll using NEXT ITEM softkey). d Then SAVE. e Press BACK softkey to go back to IP ADDRESS screen. 	 <p>The screenshot shows the LAN CONFIGURATION screen with 'IP Configuration: Manual' selected. The 'Auto/Manual' and 'Save' options are visible on the right, and 'Use softkey.' is at the bottom left.</p>
		<ul style="list-style-type: none"> a At IO SETUP screen, press IP ADDR softkey. b At IP ADDRESS screen, select MANUAL IP softkey. c At MANUAL IP ADDRESS screen, enter IP ADDRESS, SUBNET, and GATEWAY (scroll using NEXT ITEM softkey). d Then SAVE. e Press BACK softkey to go back to IP ADDRESS screen. 	 <p>The screenshot shows the MANUAL IP ADDRESS screen with fields for IP ADDRESS (192.168.11.101), MANUAL SUBNET, and MANUAL GATEWAY. The 'NEXT ITEM' and 'SAVE' options are visible on the right, and 'Restart network?' and 'Back' are at the bottom.</p>

Step	Action	Illustration
4	<p>Verify LAN status on 11713D/E</p> <p>a At IO SETUP screen, press IP ADDR softkey.</p> <p>b At IP ADDRESS screen, select LAN STAT softkey.</p> <p>c Verify values CURRENT IP ADDRESS, CURRENT SUBNET, and CURRENT GATEWAY are valid.</p> <p>d Ensure LAN STATUS is NORMAL.</p> <p>e If LAN STATUS is FAULT, check your LAN connection and then press Restart Netw softkey and wait.</p> <p>f Press BACK softkey to go back to IP ADDRESS screen.</p>	

Now you can use the 11713D/E Web Browser Interface to access and control the instrument. See [“Exploring the 11713D/E Web Interface over LAN”](#) on page 98.

If you plan to program the instrument over LAN or use such programs, make sure you have installed the required I/O software on your computer.

Use the *Connectivity Expert* utility of the Keysight IO Libraries Suite to add the 11713D/E and verify a connection. When identifying the instrument, it is easiest if you use the IP address noted in step 3 above.

NOTE If you have installed any other I/O software, refer to the documentation included with that software.

Now you can use various programming environments to control the 11713D/E. For an overview on programming instructions via USB, refer to the *Connectivity Guide*.

Exploring the 11713D/E Web Interface over LAN

You can use the 11713D/E's Web Browser Interface for remote access and control of the instrument via a Java™-enabled Web browser, such as Microsoft Internet Explorer. Using the Web Interface, you can configure, troubleshoot, and monitor your system remotely. This section provides an overview of the 11713D/E Web Interface.

NOTE


The following tasks assume you have configured the 11713D/E for LAN communication and have verified connection to a LAN network. See [“Connecting over LAN”](#) on page 94 for more information.

Launching the web interface

- 1 Open your Internet browser from your computer.
- 2 From the **Tools > Internet Options** menu, navigate to **Connections** (exact navigation depends on your browser), and then select **LAN Settings**.
- 3 From the LAN Settings dialog, select/activate bypass proxy server for local addresses (exact terminology depends on your browser).
- 4 Exit the Options window.
- 5 Enter the IP address of the 11713D/E in the Address field and press return. Use the 11713D/E's front panel utility menu to read the IP address.
- 6 After entering the appropriate IP address, the 11713D/E Web Interface's Welcome Window should appear.

NOTE

The procedure in this section will help you understand tasks commonly performed using the 11713D/E Web Interface. For additional help on using the interface, click the **? Help with the Page** tab on the lower-left corner of the Web Interface window.

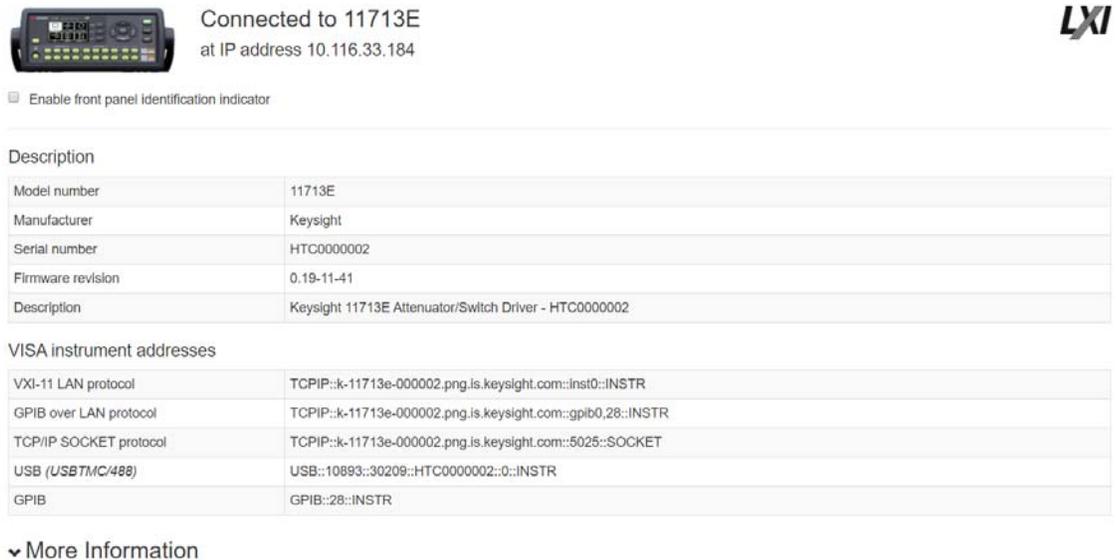

Connected to 11713E
at IP address 10.116.33.184

Enable front panel Identification indicator

Description

Model number	11713E
Manufacturer	Keysight
Serial number	HTC0000002
Firmware revision	0.19-11-41
Description	Keysight 11713E Attenuator/Switch Driver - HTC0000002

VISA instrument addresses

VXI-11 LAN protocol	TCPIP::k-11713e-000002.png.is.keysight.com::inst0::INSTR
GPIB over LAN protocol	TCPIP::k-11713e-000002.png.is.keysight.com::gpi0,28::INSTR
TCP/IP SOCKET protocol	TCPIP::k-11713e-000002.png.is.keysight.com::5025::SOCKET
USB (USB7MC/488)	USB::10893::30209::HTC0000002::0::INSTR
GPIB	GPIB::28::INSTR

▼ More Information

Figure 7-1 11713D/E Web Interface's Welcome Window

Navigation bar



Figure 7-2 Navigation bar

- Home: Displays various setting information.
- Control Instrument: Virtual front panel.
- Get Image: Receives image.
- Configure LAN: Displays and modifies LAN settings.
- Help icon: Displays the Help file.

Displaying the browser web control page

- 1 In the Home window, click **Control Instrument** on the top bar of the window.
- 2 You can view the virtual front panel of 11713D/E.
- 3 Now, you can control this device remotely, similar to the front panel of the actual instrument.
- 4 Click the **Settings** icon on the top left corner of the window to open the **Password Options** window.

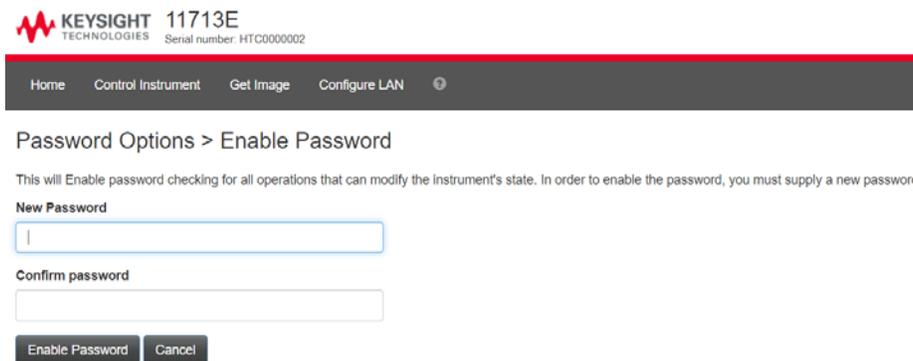


Figure 7-3 Enable Password window

- 5 Enter a new password and click **Enable Password** if you wish to enable password for controlling the instrument.

8 Servicing the Attenuator/Switch Driver

Preparing a Static-Safe Workstation	102
Maintenance and Adjustments	103

This chapter provides the procedures for removal and replacement of major assemblies in the 11713D/E and the list of replaceable parts.

Preparing a Static-Safe Workstation

Electrostatic discharge (ESD) can damage or destroy electronic components. All works performed on assemblies consisting of electronic components should be done at a static-safe workstation.

An example of a static-safe workstation is shown below using two types of ESD protection:

- conductive table mat and wrist strap combination, and
- conductive floor mat and heel strap combination

The methods may be used together or separately.

Reducing ESD damage

To help reduce the amount of ESD damage that occurs during installation, testing, or servicing instruments, use the following guidelines:

- Be sure that all instruments are properly earth-grounded to prevent buildup of static charge.
- Personnel should be grounded with a resistor-isolated wrist-strap before touching the center pin of any connector and before removing any assembly from the instrument.
- Before connecting any coaxial cable to an instrument connector for the first time each day, momentarily ground the center and outer conductor of the cable.
- Handle all PC board assemblies and electronic components only at static-safe workstations.
- Store or transport PC board assemblies and electronics components only in static-shielding containers.
- PC board assembly edge-connector contacts may be cleaned by using a lint-free cloth with a solution of 80% electronics-grade isopropyl alcohol and 20% deionized water. This should be performed at a static-safe workstation.

Maintenance and Adjustments

Fuse removal/replacement

User maintenance is limited to replacement of the rear panel fuse. The main ac line fuse is located on the rear panel in the line power module. *Please ensure that the fuse is 250 V, T3.15 A.*

Use the following procedure to replace fuse.

- 1 Remove the fuse holder using a tweezer.
- 2 You will see two fuses – the one on the left is the active fuse and the other is backup.



- 3 Remove fuse and replace with one of the correct rating and type for your selected input ac line voltage.

NOTE

Be sure to select the correct fuse rating for the selected line voltage. Do not use repaired fuses or short circuited fuse-holders. To do so could cause a shock or fire hazard.

Adjustment

The 11713D/E attenuator/switch driver has no internal electrical or mechanical adjustments.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK



This information is subject to change without notice. Always refer to the Keysight website for the latest revision.

© Keysight Technologies 2020
Edition 3, December 1, 2020

Printed in Malaysia



11713-90028

www.keysight.com