

## Errata

**Title & Document Type:** 5383A Frequency Counter Operating and Service Manual

**Manual Part Number:** 05383-90005

**Revision Date:** September 1976

---

### HP References in this Manual

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, semiconductor products and chemical analysis businesses are now part of Agilent Technologies. We have made no changes to this manual copy. The HP XXXX referred to in this document is now the Agilent XXXX. For example, model number HP8648A is now model number Agilent 8648A.

### About this Manual

We've added this manual to the Agilent website in an effort to help you support your product. This manual provides the best information we could find. It may be incomplete or contain dated information, and the scan quality may not be ideal. If we find a better copy in the future, we will add it to the Agilent website.

### Support for Your Product

Agilent no longer sells or supports this product. You will find any other available product information on the Agilent Test & Measurement website:


[www.tm.agilent.com](http://www.tm.agilent.com)

Search for the model number of this product, and the resulting product page will guide you to any available information. Our service centers may be able to perform calibration if no repair parts are needed, but no other support from Agilent is available.



# FREQUENCY COUNTER

## 5383A

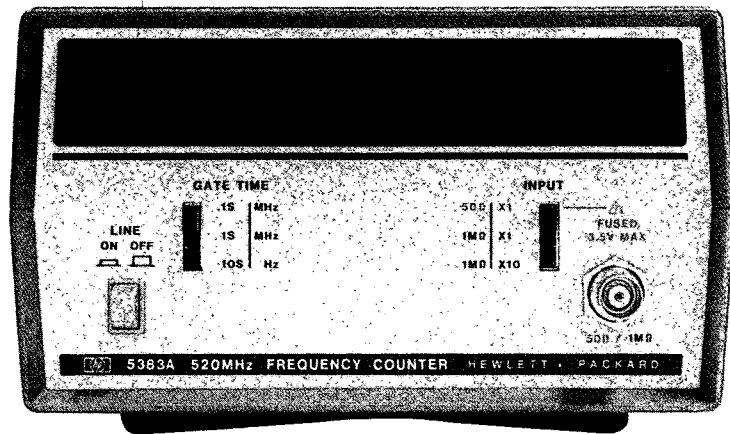

 **HEWLETT  
PACKARD**

# FREQUENCY COUNTER

## 5383A

### OPERATING AND SERVICE MANUAL

#### SERIAL PREFIX: 1628A

This manual applies directly to HP Model 5383A Frequency Counters having serial number prefix 1628A.

#### NEWER INSTRUMENTS

This manual, with enclosed "Manual Changes" sheet, applies to HP Model 5383A Frequency Counters having serial number prefixes as listed on the "Manual Changes" sheet.

#### OLDER INSTRUMENTS

For serial prefixes below the serial prefix shown above, refer to Section VII for manual backdating instructions.

Copyright HEWLETT-PACKARD COMPANY 1975  
5301 STEVENS CREEK BLVD., SANTA CLARA, CALIF. 95050

MANUAL PART NUMBER 05383-90005  
Microfiche Part Number 05383-90006

Printed: SEP 1976



## TABLE OF CONTENTS

| Section |  | Page |
|---------|--|------|
| I       | GENERAL INFORMATION .....                                  | 1-1  |
|         | 1-1. Introduction .....                                    | 1-1  |
|         | 1-3. Instrument Description .....                          | 1-1  |
|         | 1-5. Accessories and Options .....                         | 1-1  |
|         | 1-8. Instrument Identification .....                       | 1-1  |
|         | 1-11. Microfiche Number .....                              | 1-2  |
|         | 1-13. Recommended Test Equipment .....                     | 1-2  |
|         | 1-15. Specifications .....                                 | 1-2  |
| II      | INSTALLATION .....   | 2-1  |
|         | 2-1. Introduction .....                                    | 2-1  |
|         | 2-3. Unpacking and Inspection .....                        | 2-1  |
|         | 2-5. Storage and Shipment .....                            | 2-1  |
|         | 2-8. Line Voltage Selection .....                          | 2-1  |
|         | 2-11. Mounting .....                                       | 2-2  |
| III     | OPERATION .....  | 3-1  |
|         | 3-1. Introduction .....                                    | 3-1  |
|         | 3-3. Controls, Connectors and Indicators .....             | 3-1  |
|         | 3-5. Measurement Techniques .....                          | 3-1  |
|         | 3-7. Ratio Measurements (Standard Counter Only) .....      | 3-1  |
|         | 3-10. Operator Checks .....                                | 3-3  |
| IV      | THEORY OF OPERATION .....                                  | 4-1  |
|         | 4-1. Introduction .....                                    | 4-1  |
|         | 4-3. Functional Description .....                          | 4-1  |
|         | 4-5. Input Circuits .....                                  | 4-1  |
|         | 4-7. Balanced Input Amplifier .....                        | 4-2  |
|         | 4-9. TBO and Main Gate Circuits .....                      | 4-2  |
|         | 4-11. Scan Timing Circuits .....                           | 4-2  |
|         | 4-15. Multiplexed Display Function .....                   | 4-4  |
|         | 4-17. Leading Zero Blanking .....                          | 4-4  |
|         | 4-19. Unique Integrated Circuits .....                     | 4-4  |
| V       | MAINTENANCE .....  | 5-1  |
|         | 5-1. Introduction .....                                    | 5-1  |
|         | 5-3. In-Cabinet Performance Check .....                    | 5-1  |
|         | 5-5. Adjustments .....                                     | 5-5  |
|         | 5-7. Balanced Input Amplifier .....                        | 5-5  |
|         | 5-10. Standard Time Base Oscillator Adjustment .....       | 5-5  |
|         | 5-13. Option 001 Time Base Oscillator Adjustment .....     | 5-6  |
|         | 5-16. Instrument Access .....                              | 5-8  |
|         | 5-18. Troubleshooting .....                                | 5-9  |
| VI      | REPLACEABLE PARTS .....                                    | 6-1  |
|         | 6-1. Introduction .....                                    | 6-1  |
|         | 6-4. Ordering Information .....                            | 6-1  |
|         | 6-6. LED Display Digit Ordering Information .....          | 6-9  |
|         | 6-8. Replacement Hardware for Mounting U27 Regulator ..... | 6-9  |
| VII     | MANUAL CHANGES .....                                       | 7-1  |
|         | 7-1. Introduction .....                                    | 7-1  |
|         | 7-3. Manual Changes .....                                  | 7-1  |
|         | 7-5. Newer Instruments .....                               | 7-1  |
|         | 7-7. Manual Backdating for Older Instruments .....         | 7-1  |
| VIII    | SCHEMATIC DIAGRAMS .....                                   | 8-1  |
|         | 8-1. Introduction .....                                    | 8-1  |

## LIST OF TABLES

| <b>Table</b>                                 | <b>Page</b> |
|--|-------------|
| 1-1. Recommended Test Equipment .....        | 1-2         |
| 1-2. Specifications .....                    | 1-3         |
| 3-1. Measurement Techniques .....            | 3-2         |
| 4-1. Sample and Display Timing .....         | 4-4         |
| 5-1. In-Cabinet Performance Check .....      | 5-1         |
| 5-2. Test Counter Set-Up .....               | 5-7         |
| 6-1. A1 Main Board Assembly Parts List ..... | 6-3         |
| 6-2. A2 Display Board Parts List .....       | 6-6         |
| 6-3. Miscellaneous Parts List .....          | 6-7         |
| 6-4. Manufacturers Code List .....           | 6-8         |
| 6-5. LED Display Digit Part Numbers .....    | 6-9         |
| 7-1. Manual Changes .....                    | 7-1         |
| 8-1. Major Signal Definitions .....          | 8-3         |

## LIST OF FIGURES

| <b>Figure</b>  | <b>Page</b> |
|--|-------------|
| 1-1. Model 5383A Frequency Counter .....   | 1-1         |
| 2-1. Power Cord Connector for 240-Volt Operation .....   | 2-2         |
| 2-2. Rack Mounting Instructions .....  | 2-2         |
| 2-3. Rack Mounting Kit .....   | 2-3         |
| 3-1. Front Panel and Internal Controls, Indicators and Connectors .....                              | 3-5         |
| 3-2a. Rear Panel Operating Controls and Indicators .....   | 3-7         |
| 3-2b. Rear Panel Operating Controls and Indicators (Continued) .....                                 | 3-8         |
| 4-1. Simplified Block Diagram .....  | 4-3         |
| 4-2. Scan Timing Waveforms .....   | 4-5         |
| 4-3. Update Function .....   | 4-6         |
| 4-4. 10S/Hz Leading Zero Blanking Function .....   | 4-7         |
| 4-5. Variable Time Base Counter A1U11 .....  | 4-8         |
| 4-6. Hex Multiplexed Counter A1U18 .....   | 4-9         |
| 5-1. Display Function Troubleshooting Flowchart .....  | 5-9         |
| 5-2. Counter Function Troubleshooting Flowchart .....  | 5-11        |
| 5-3. Multiplexed Display Bus Monitoring .....  | 5-12        |
| 8-1. Schematic Diagram Notes .....   | 8-2         |
| 8-2. A1 Main Board Schematic Diagram (Standard and Option 001) and<br>Part of A2 Display Board ..... | 8-5         |
| 8-3. Part of A2 Display Board Schematic Diagram .....  | 8-7         |

## SAFETY CONSIDERATIONS

### GENERAL

This is a Safety Class I instrument. This instrument has been designed and tested according to IEC Publication 348, "Safety Requirements for Electronic Measuring Apparatus".

### OPERATION

**BEFORE APPLYING POWER** verify that the power transformer primary is matched to the available line voltage and the correct fuse is installed (see Section II, Paragraphs 2-8 through 2-10). Make sure that only fuses with the required rated current and of the specified type (normal blow, time delay, etc.) are used for replacement. The use of repaired fuses and the short-circuiting of fuseholders must be avoided.


### SERVICE

Although this instrument has been designed in accordance with international safety standards, this manual contains information, cautions, and warnings which must be followed to ensure safe operation and to retain the instrument in safe condition. Service and adjustments should be performed only by qualified service personnel.

Any adjustment, maintenance, and repair of the opened instrument under voltage should be avoided as much as possible and, when inevitable, should be carried out only by a skilled person who is aware of the hazard involved.

Capacitors inside the instrument may still be charged even if the instrument has been disconnected from its source of supply.



This symbol: , which appears on the instrument in several places means: Read the instruction manual before operating the instrument. If the instrument is operated without reading the instructions, it may not operate correctly.

## SECTION I GENERAL INFORMATION

### 1-1. INTRODUCTION

1-2. This section of the manual gives a description of the instrument, information on instrument identification and available options, and complete specifications.

### 1-3. INSTRUMENT DESCRIPTION

1-4. The HP Model 5383A (see Figure 1-1) is a direct-counting frequency counter that has a range of 10 Hz to 520 MHz. Nine display digits provide a resolution of one Hz per second for inputs up to 520 MHz. Front panel controls allow a selection of gate times, input impedances, and attenuators. A rear panel connector and associated selector switch allow either an external time base oscillator input, or monitoring of the internal time base oscillator. When the optional temperature compensated crystal oscillator (TCXO) is installed, the rear panel connector serves only as a time base monitor. In addition, a rear panel power selector switch permits the 5383A Counter to operate with line voltages ranging from 90V to 252V (line frequency range: 48 to 440 Hz).

### 1-5. ACCESSORIES AND OPTIONS

1-6. Two accessories are available for mounting the 5383A counter onto the user's rack. The 10851A kit permits the mounting of a single counter, while the 10852A kit is used for mounting two counters in a side-by-side configuration. Refer to Section II for detailed rack mounting kit information.

1-7. Option 001 provides a more accurate and stable time base oscillator. This Temperature Compensated Crystal Oscillator (TCXO) installation modifies the rear panel so that the connector is used only as a MONITOR output. As a result, an external standard (i.e., time base) cannot be applied to the Option 001 counter.

### 1-8. INSTRUMENT IDENTIFICATION

1-9. Hewlett-Packard uses a 2-section, 10-character serial number (0000A00000) mounted on the rear panel to identify the instrument. The first four digits are the serial prefix and the last five digits refer to the specific instrument. The alphabetical character identifies the country of manufacture. If the serial prefix on your instrument differs from that listed on the title page of this manual, there are differences between the manual and your instrument. Any lower serial prefixes are documented separately in this manual, and higher serial prefixes are covered by a manual change sheet included with the manual.

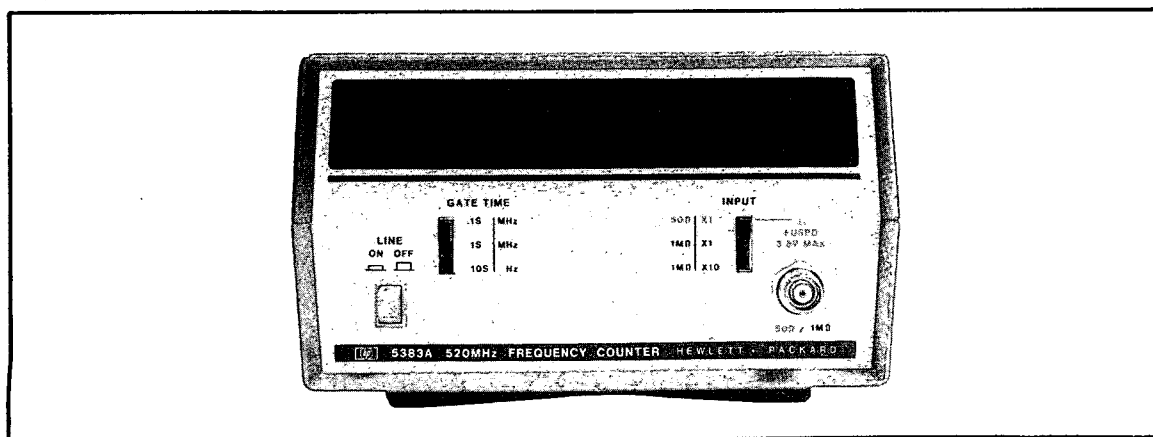


Figure 1-1. Model 5383A Frequency Counter

1-10. The printed circuit boards within the instrument are identified by a 2-section, 10-digit part number (e.g., 05383-60001) and a 4-digit series number (e.g., "SERIES 1508"). The series number identifies the electrical characteristics of the complete printed-circuit assembly. A replacement circuit-board assembly may have a different series number than the assembly originally supplied with the instrument. Therefore, when troubleshooting a circuit-board assembly, ensure that the series number on the schematic diagram matches the series number on the board assembly. If the series number of the assembly is lower than the number on the schematic diagram in Section VIII, refer to backdating information in this manual for change information. If the series number on the assembly is higher than the number on the schematic diagram, the change information is provided in a manual change sheet which is available from the nearest Hewlett-Packard Sales and Service Office.

**1-11. MICROFICHE NUMBER**

1-12. On the title page of this manual, below the manual part number, is the microfiche part number. This number may be used to order 4 x 6 transparencies of the manual. The microfiche package also includes the latest Manual Change Supplements as well as all pertinent Service Notes.

**1-13. RECOMMENDED TEST EQUIPMENT**

1-14. Table 1-1 lists test equipment which is recommended for confirming instrument specifications (i.e., in-cabinet performance tests), as well as troubleshooting and adjusting the instrument.

*Table 1-1. Recommended Test Equipment*

| <b>Equipment Type</b>                                       | <b>Required Characteristics</b>             | <b>Suggested Model</b>                 | <b>Use*</b> |
|---|---|--|-------------|
| Oscilloscope  | 50 MHz Bandwidth                            | HP 180A System                         | A,T         |
| Test Oscillator   | 10 Hz to 10 MHz<br>25 mV Output             | HP 651B                                | P,T         |
| Signal Generator  | 10 MHz to 520 MHz<br>25 mV Output           | HP 8654A                               | P,T         |
| DVM   | 0—25V Range                                 | HP 970A                                | T           |
| Frequency Counter   | High stability 10 MHz<br>frequency standard | HP 5328A with Option 10<br>or HP 5345A | A,P         |
| 50 Ohm Feedthru<br>Connector                                | 50 Ohm Termination                          | HP 11048C                              | P,T         |
| *A = Adjustments, P = Performance Test, T = Troubleshooting |   |  |             |

**1-15. SPECIFICATIONS**

1-16. Table 1-2 lists the 5383A specifications.



Table 1-2. Specifications

**FREQUENCY RANGE:** 10 Hz to 520 MHz

**DISPLAY:** Nine-segment LED digits

**DISPLAY TEST:** RESET function (activated with GATE TIME switch) illuminates all segments of all digits.

**INPUT IMPEDANCE:** Three selections:

50Ω X1 (nominal) — fuse protected

1MΩ X1 (<40 pF shunt)

1MΩ X10 (<40 pF shunt, attenuation factor of 10)

**ATTENUATION:** X10 in 1MΩ

**SENSITIVITY:**

| INPUT Switch Position | Frequency Range  | Sensitivity (RMS) |
|-----------------------|------------------|-------------------|
| 50Ω X1                | 20 Hz to 520 MHz | 25 mV             |
| 1MΩ X1                | 20 Hz to 10 MHz  | 25 mV             |
|                       | 10 Hz to 50 MHz  | 50 mV             |

**MAXIMUM INPUT:**

| INPUT Switch Position   | Range             | Maximum Input  |
|-------------------------|-------------------|--|
| 50Ω X1 (Fuse protected) | DC to 520 MHz     | 3.5V rms (+24 dBm)   |
| 1MΩ X1                  | DC to 40 MHz      | 200V (sum of dc + peak ac)   |
|                         | 40 Hz to 100 kHz  | 200V dc + 250V rms (ac)  |
|                         | 100 kHz to 5 MHz  | 200V dc = $\frac{2.5 \times 10^7 \text{V rms (ac)}}{\text{Freq. (in Hz)}}$ |
|                         | 5 MHz to 520 MHz  | 200V dc + 5V rms (ac)  |
| 1MΩ X10                 | DC to 40 Hz       | 200V (sum of dc + peak ac)   |
|                         | 40 Hz to 1 MHz    | 200V dc + 250V rms (ac)  |
|                         | 1 MHz to 50 MHz   | 200V dc + $\frac{2.5 \times 10^8 \text{V rms (ac)}}{\text{Freq. (in Hz)}}$ |
|                         | 50 MHz to 520 MHz | 200V dc + 5V rms (ac)  |

**ACCURACY:** ±1 Count ± Time Base Accuracy

**GATE TIME:** Manually selected .1 second, 1 second, 10 seconds

**RESOLUTION:** (Direct Count)

| GATE TIME | Least-Significant Digit Value |
|-----------|-------------------------------|
| .1s/MHz   | 10 Hz                         |
| 1s/MHz    | 1.0 Hz                        |
| 10s/Hz    | 0.1 Hz                        |

**OVERFLOW:** LED indicator lamp shows display overflow.

**RESET:** Manual reset occurs when GATE TIME switch is between three normal positions.

\*For example: The maximum signal level (when 1MΩ X1 input impedance is selected) for a 100 kHz input is:

$$\frac{2.5 \times 10^7}{100 \times 10^3} = 250\text{V (rms)} + 200\text{V dc}$$

Table 1-2. Specifications (Continued)

**STANDARD**

**TIME BASE DATA:**

**Time Base:** 10 MHz (Xtal Oscillator)

<3 ppm per month due to aging

$\pm 2.5$  ppm due to temperature variations between 0°C and 40°C

$\pm 0.5$  ppm due to  $\pm 10\%$  line (power) variation

**Time Base Output:** Frequency: 10 MHz Time Base

Voltage: 200 mV peak-to-peak into 50 $\Omega$

Control: Active when the INT/EXT switch is in INT position.

**External Frequency Standard Input (rear panel):** 10 MHz

**Rear Panel Input:** Sensitivity: 250 mV rms

Impedance: >500 $\Omega$

Maximum Input: 10V rms

Control: Internal/External rear-panel switch at EXT.

**Ratio:** Rear Panel Input, 100 kHz to 10 MHz

**OPERATING TEMPERATURE:** 0°C to 40°C

**POWER REQUIREMENTS:** 100, 120, 220, and 240V rms +5 -10%; 48 Hz to 440 Hz; 30VA max.

**WEIGHT:** Net: 2.2 kg (4.75 lbs). Shipping: 2.7 kg (6 lbs).

**DIMENSIONS:** 89 mm H x 160 mm W x 248 mm D (3.5 in H x 6.25 in W x 9.75 in D).

**OPTION 001 TEMPERATURE COMPENSATED XTAL OSCILLATOR**

Does not provide rear panel input capability.

**TIME BASE DATA:**

**Frequency:** 10 MHz TCXO

**Stability:** <0.1 ppm per month due to aging

$\pm 1$  ppm due to temperature variations between 0°C and 40°C

$\pm 0.1$  ppm due to 10% line (power) variation

**Rear Panel Input:** Not available with Option 001.

## SECTION II INSTALLATION

### 2-1. INTRODUCTION

2-2. This section of the manual provides information about unpacking, inspecting, storing, and shipping the frequency counter.

### 2-3. UNPACKING AND INSPECTION

2-4. If the shipping carton is damaged, ask that the carrier's agent be present when the instrument is unpacked. Inspect the instrument for damage such as scratches, dents, broken switches, etc. If the instrument is damaged or fails to meet performance tests, notify the carrier and the nearest Hewlett-Packard Sales and Service Office immediately. Performance check procedures are located in Section V, and Sales and Service Offices are listed at the back of this manual. Retain the shipping carton and the padding material for the carrier's inspection. The Sales and Service Office will arrange for the repair or replacement of the instrument without waiting for the claim against the carrier to be settled.

### 2-5. STORAGE AND SHIPMENT

2-6. **PACKAGING.** To protect valuable electronic equipment during storage or shipment, always use the best packaging methods available. Your Hewlett-Packard Sales and Service Office can provide packaging material such as that used for original factory packaging. Contract packaging companies in many cities can provide dependable custom packaging on short notice.

2-7. **ENVIRONMENT.** Conditions during storage and shipment should normally be limited as follows:

- a. Maximum altitude: 25,000 ft.
- b. Minimum temperature:  $-40^{\circ}\text{F}$  ( $-40^{\circ}\text{C}$ ).
- c. Maximum temperature:  $+167^{\circ}\text{F}$  ( $+75^{\circ}\text{C}$ ).

### 2-8. LINE VOLTAGE SELECTION

2-9. The counter is supplied from the factory with the **LINE VOLTAGE SELECTOR** switches set for 120-volt. If any other supply voltage is to be used, change the rear-panel switch settings as follows:

- a. Using a small screwdriver, a pencil, or other suitable tool, set the **LINE VOLTAGE SELECTOR** switches on the counter's rear panel to the positions shown next to the desired voltage marking on the rear panel.
- b. Ensure that the correct fuse is installed. Use a Listed, 0.500 ampere, slow-blow fuse for 100-volt or 120-volt operation. Use a Listed, 0.150 ampere, slow-blow for 220-volt or 240-volt operation.

2-10. If the counter is to be used in the USA with a 240-volt, 60 Hz power source, use a power cord with a Listed connector of the type shown in Figure 2-1.

### 2-11. MOUNTING

2-12. The 5383A Frequency Counter is built to be portable, and may be used at any test bench position. Two kits are available for the user who desires to mount his counter on a rack. Kit 10851A permits one counter to be mounted in the center of a rack, while Kit 10852A allows the user to mount two counters, side-by-side on a rack. Figure 2-2 describes how to mount the counter onto the rack provided. Figure 2-3 shows these kits and provides a component parts list.

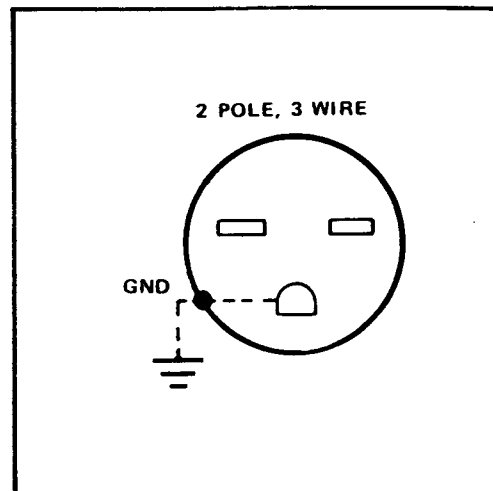


Figure 2-1. Power Cord Connector for 240-Volt Operation

1. REMOVE BOTH PLASTIC FEET FROM INSTRUMENT.
2. LOOSELY INSTALL STANDOFFS BETWEEN SCREW HOLES IN BRACKET.
3. PUSH INSTRUMENT THRU PROFILED CUTOUT IN BRACKET.
4. TIGHTEN CLAMPING SCREWS.


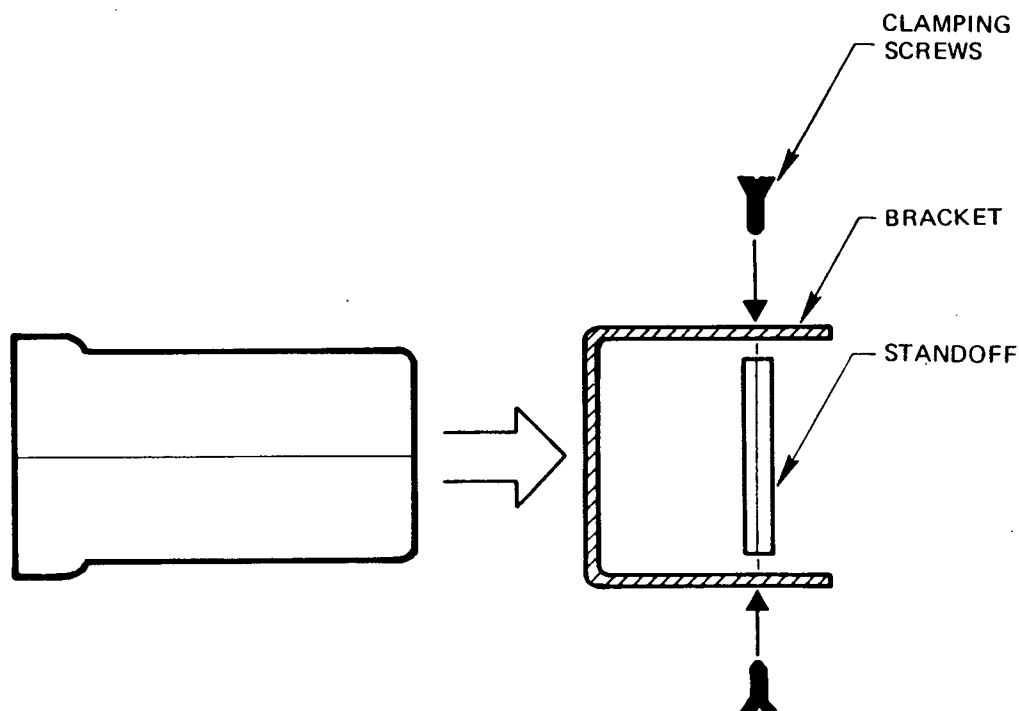


Figure 2-2. Rack Mounting Instructions

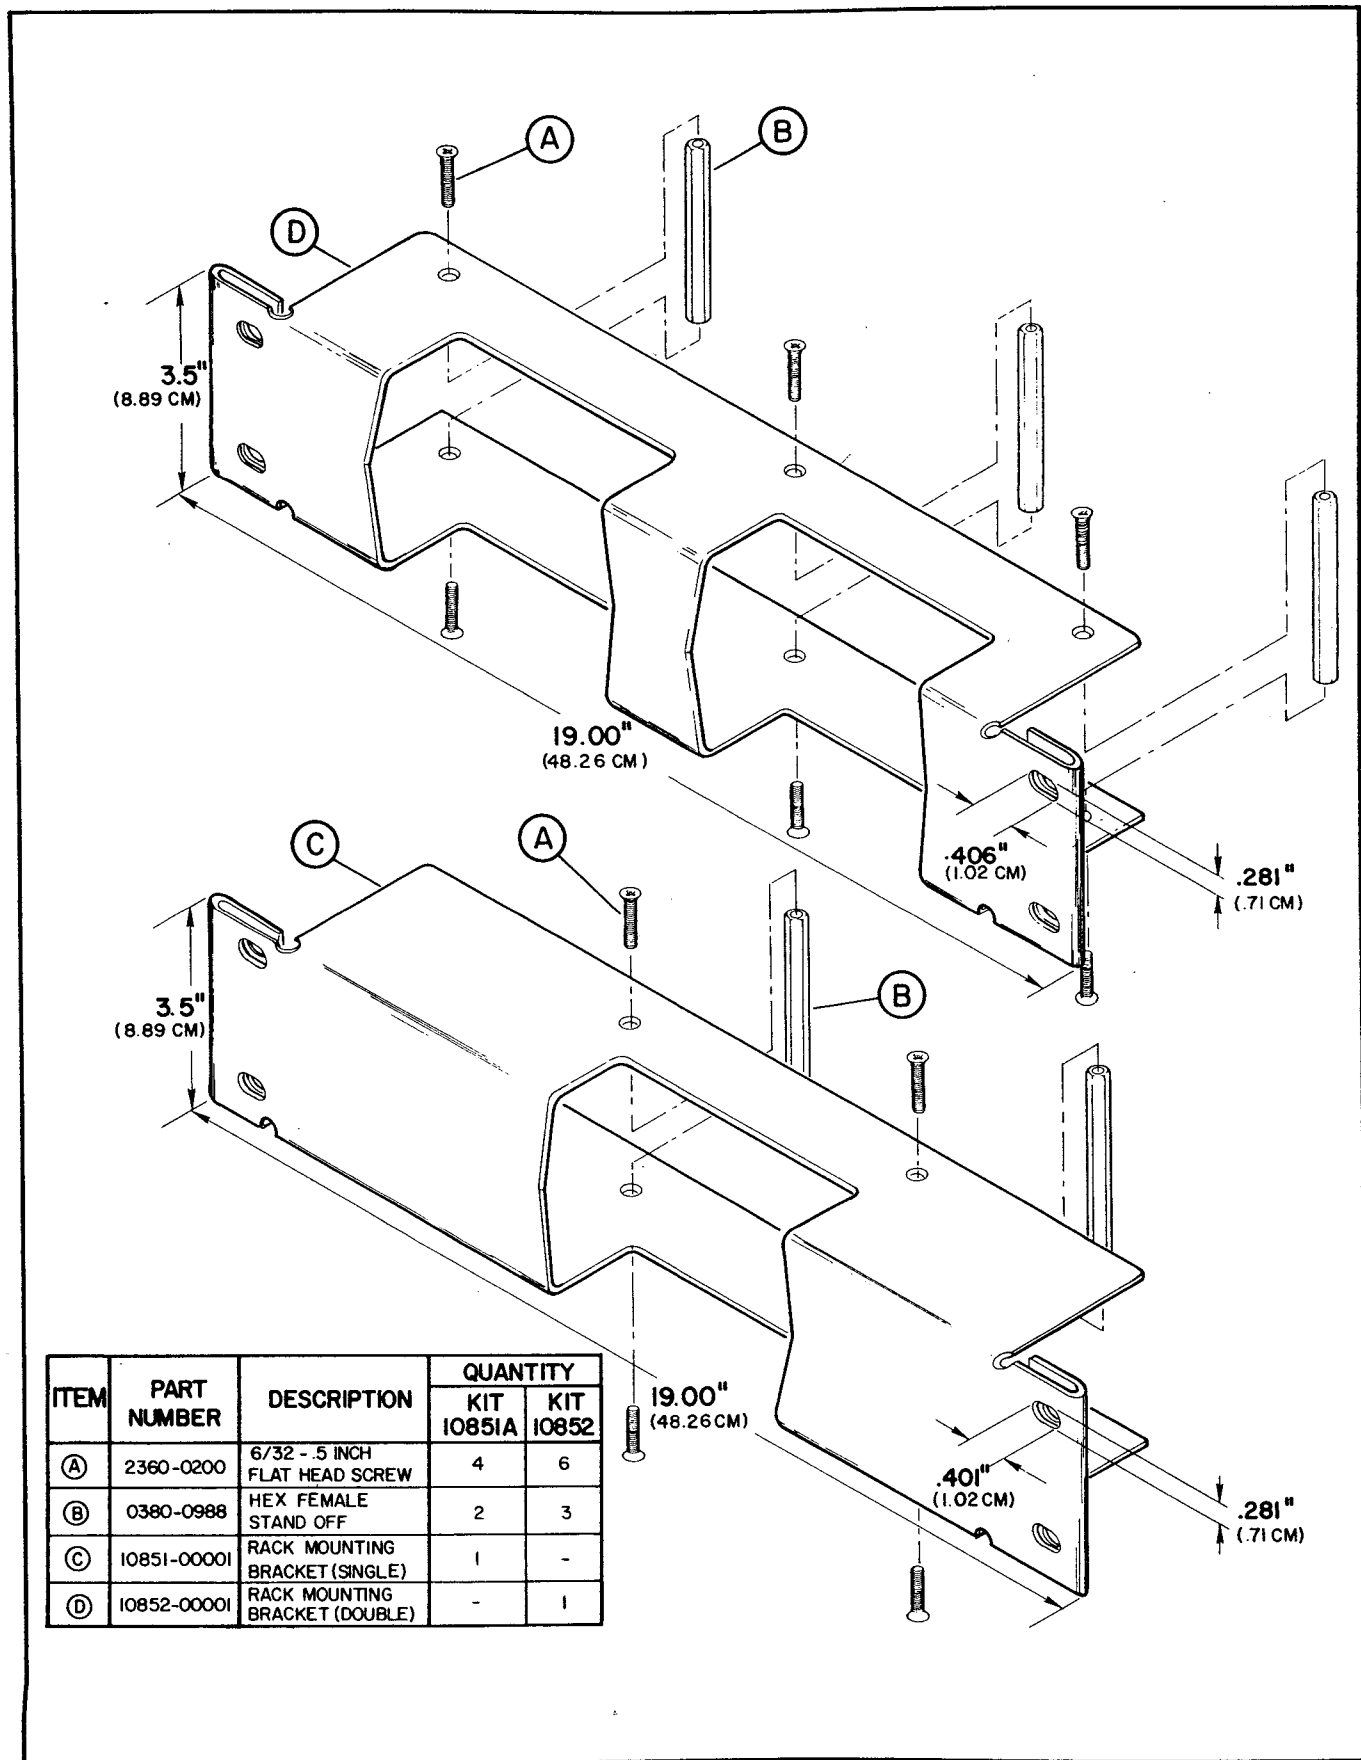

| ITEM | PART NUMBER | DESCRIPTION                       | QUANTITY   |           |
|------|-------------|-----------------------------------|------------|-----------|
|      |             |                                   | KIT 10851A | KIT 10852 |
| (A)  | 2360-0200   | 6/32 - .5 INCH<br>FLAT HEAD SCREW | 4          | 6         |
| (B)  | 0380-0988   | HEX FEMALE<br>STAND OFF           | 2          | 3         |
| (C)  | 10851-00001 | RACK MOUNTING<br>BRACKET (SINGLE) | 1          | -         |
| (D)  | 10852-00001 | RACK MOUNTING<br>BRACKET (DOUBLE) | -          | 1         |

Figure 2-3. Rack Mounting Kit

## SECTION III

### OPERATION

#### 3-1. INTRODUCTION

3-2. This section contains descriptions of the controls, connectors and indicators, measurement techniques, and operator checks.

#### 3-3. CONTROLS, CONNECTORS AND INDICATORS

3-4. Figures 3-1 and 3-2 describe the operation of the 5383A controls and the function of the various connectors and indicators. The following paragraphs also provide operating guidelines and brief operator maintenance procedures for the frequency counter.

#### 3-5. MEASUREMENT TECHNIQUES

3-6. Noise riding on the input signal can cause erroneous or unstable frequency measurements. Using the internal X10 attenuator, or external attenuators minimizes this problem. Proper selection of the input impedance also allows for stable and accurate frequency measurements. When there is a difference between the signal source impedance and the counter input impedance, ringing may appear on the signal. This ringing could interfere with, and degrade the capability of the counter. Knowledge of the signal source circuit characteristics and selection of compatible 5383A input impedances and attenuation permits proper measurements. Table 3-1 (page 3-2) provides some suggested measurement techniques to help the user obtain maximum use of the frequency counter.

#### 3-7. Ratio Measurements (Standard Counter Only)

3-8. The standard counter will measure the ratio between the frequencies of two signals if one of the signals is applied to the rear-panel OSCILLATOR-EXT IN connector and the other signal is applied to the front-panel INPUT connector. (The Option 001 counter does not have an external oscillator input connector.) Be sure to refer to Table 1-2 for signal level and frequency limits. The displayed value is in units which represent the ratio of one frequency to the other as shown by the following formula:

$$\frac{\text{frequency at front panel INPUT}}{\text{freq at rear panel OSCILLATOR-EXT IN}} = \frac{\text{Display Value}}{X}$$

$$\text{where } X = \begin{cases} 10 & \text{if GATE TIME is .1s} \\ 10 & \text{if GATE TIME is 1s} \\ 10^7 & \text{if GATE TIME is 10s} \end{cases}$$

3-9. Note that in the above formula the term "X" changes by a factor of  $10^7$  when a 10s GATE TIME is set. The GATE TIME is the same when 1s and .1s selections are made. Note, also, that actual measurement time increases as the frequency applied to the OSCILLATOR-EXT IN connector decreases. If the frequency applied to the OSCILLATOR-EXT IN connector is 1 MHz, for example, and GATE TIME is set to 1s, actual measurement time will be 10 seconds.

Table 3-1. Measurement Techniques

| Signal Source   | Recommended Connection   | Recommended 5383A Impedance/Attenuator Selection   |
|---|--|--|
| <p>1. Signal Generators, or circuits with output:</p> <p>a. Frequency range from 10 MHz to 520 MHz</p> <p>b. Level less than 3.5V (rms) or +24 dBm</p> <p>c. Impedance of 50Ω</p>           | Via Coaxial cable or 50 ohm oscilloscope probe system (e.g., HP 10020A or equivalent)  | 50Ω X1   |
| <p>2. Signal Generators, or circuits with output:</p> <p>a. Frequency range from 10 MHz to 520 MHz</p> <p>b. Level exceeding 3.5V (rms) or more than +24 dBm</p> <p>c. Impedance of 50Ω</p> | Via external 50 ohm coaxial attenuator and coaxial cable   | 50Ω X1   |
| 3. Signal Generators, circuits with output frequency less than 50 MHz, or high voltage circuits   | Via appropriately terminated coaxial cable, 1 MΩ oscilloscope probe (e.g., HP 10004D or equivalent)  | 1MΩ X1<br>1MΩ X10  |
| 4. 10 Hz to 100 kHz signals with high frequency noise components  | Via coaxial cable or oscilloscope probes   | 1MΩ X1, or 1MΩ X10 with internal 100 kHz low pass filter selected (see Figure 3-1, item 6) |
| 5. Transmitter or other high voltage oscillator circuits  | DO NOT CONNECT DIRECTLY TO COUNTER INPUT! Use a pick-up antenna and proper attenuators. NOT THE TRANSMITTER ANTENNA!                                   | 50Ω X1   |
| 6. High frequency, high power, high impedance circuits  | DO NOT CONNECT DIRECTLY TO COUNTER INPUT! Use an inductive loop pick-up device and appropriate attenuators   | 50Ω X1   |
| 7. High frequency, high impedance low power output  | Active probe system (e.g., HP 1120A or equivalent)<br>NOTE: A probe power supply (e.g., HP 1122A or equivalent) is required, passive attenuator probes | 50Ω X1   |
| 8. High frequency signals with a dc level other than zero volts   | Coaxial cable with dc blocking capacitor (e.g., HP 10240B or equivalent)   | 50Ω X1   |

**3-10. OPERATOR CHECKS**

3-11. These quick preliminary checks should be performed by the operator when an instrument failure is suspected:

Problem I. No display digits are illuminated

**CHECK**


- a. Equipment cable plugged in?
- b. Proper line voltage selected on rear panel? (Refer to Paragraph 2-8.)
- c. Rear panel fuse blown? Replace blown fuse with a Listed, 1/2 Amp slow-blow 125-volt fuse (HP Part Number 2110-0008) for 100-120 volt operation or a Listed, 1/4 Amp (HP Part Number 2110-0201) slow-blow 250-volt fuse for 220-240 volt operation.

Problem II. All display digits are not illuminated.

- a. This is normal. The counter provides a leading zero blanking feature which blanks non-significant display digits. The following displays are correct when a signal is not applied to the counter input:

| <u>GATE TIME Switch<br/>Position</u> | <u>DISPLAY</u> |
|--------------------------------------|----------------|
| .1 S/MHz                             |                |
| 1 S/MHz                              |                |
| 10 S/Hz                              |                |

- b. For further assurance, set the GATE TIME switch between any two positions. The following display indicates that all display digit circuits are operating correctly:

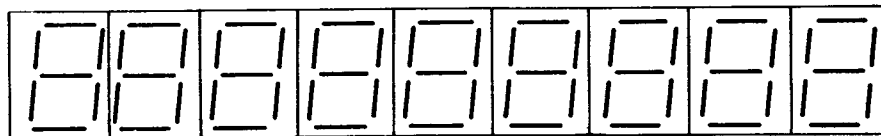

**NOTE**

When positioned for the display digits test function, GATE TIME switch A1S2 may or may not open the ground lead to the decimal point input of the display LED. For this reason the decimal point may or may not be illuminated during this digit test.



Problem III. The frequency counter is not counting the input signal.

CHECK:

- a. Is the rear panel INT/EXT switch in the INT position? (This switch exists in the standard counter only.)
- b. Does this problem occur only when the front panel INPUT switch is in the  $50\Omega$  X1 or  $1M\Omega$  X1 position? This indicates that the internal fuse, A1F1, is blown. Remove instrument covers to gain access to this fuse (refer to Paragraph 5-17, note WARNING). Replace fuse with spare provided on the Main Board Assembly. Order another .1 amp 125-volt fuse (HP Part Number 2110-0436).

**NOTE**


REMEMBER TO KEEP THE INPUT SIGNAL LEVEL BELOW 3.5V (RMS) OR +24 DBM WHEN THE INPUT SWITCH IS IN THE  $50\Omega$  X1!

- c. Does this problem occur only when the INPUT switch is in the  $1M\Omega$  X1 or X10 positions and the input frequency goes higher than 100 kHz? Remove the covers (refer to Paragraph 5-17, note the WARNING). Set the board-mounted FILTER switch to the left (i.e., away from the ">").

3-12. Finally, this quick and convenient loop-around check is provided to verify normal operation of the instrument:

- a. Set the rear panel INT/EXT switch (exists on the standard counter only) to the INT position.
- b. Set the front panel INPUT switch to the  $50\Omega$  X1 position.
- c. Connect a coaxial cable between the rear panel OSCILLATOR jack and the front panel INPUT jack.
- d. 10 MHz display ( $\pm 1$  least-significant digit) indicates that the counter is operating normally.
- e. For loop-around check of the  $1M\Omega$  X1, or X10 INPUT paths, use a  $50\Omega$  Feedthru connector (see Table 5-1, test 2 items e, f, g.).

3-13. If, after these operator checks are performed, the counter does not operate normally, refer to the Troubleshooting Charts: Figure 5-1 and 5-2 in Section V for fault analysis procedures.

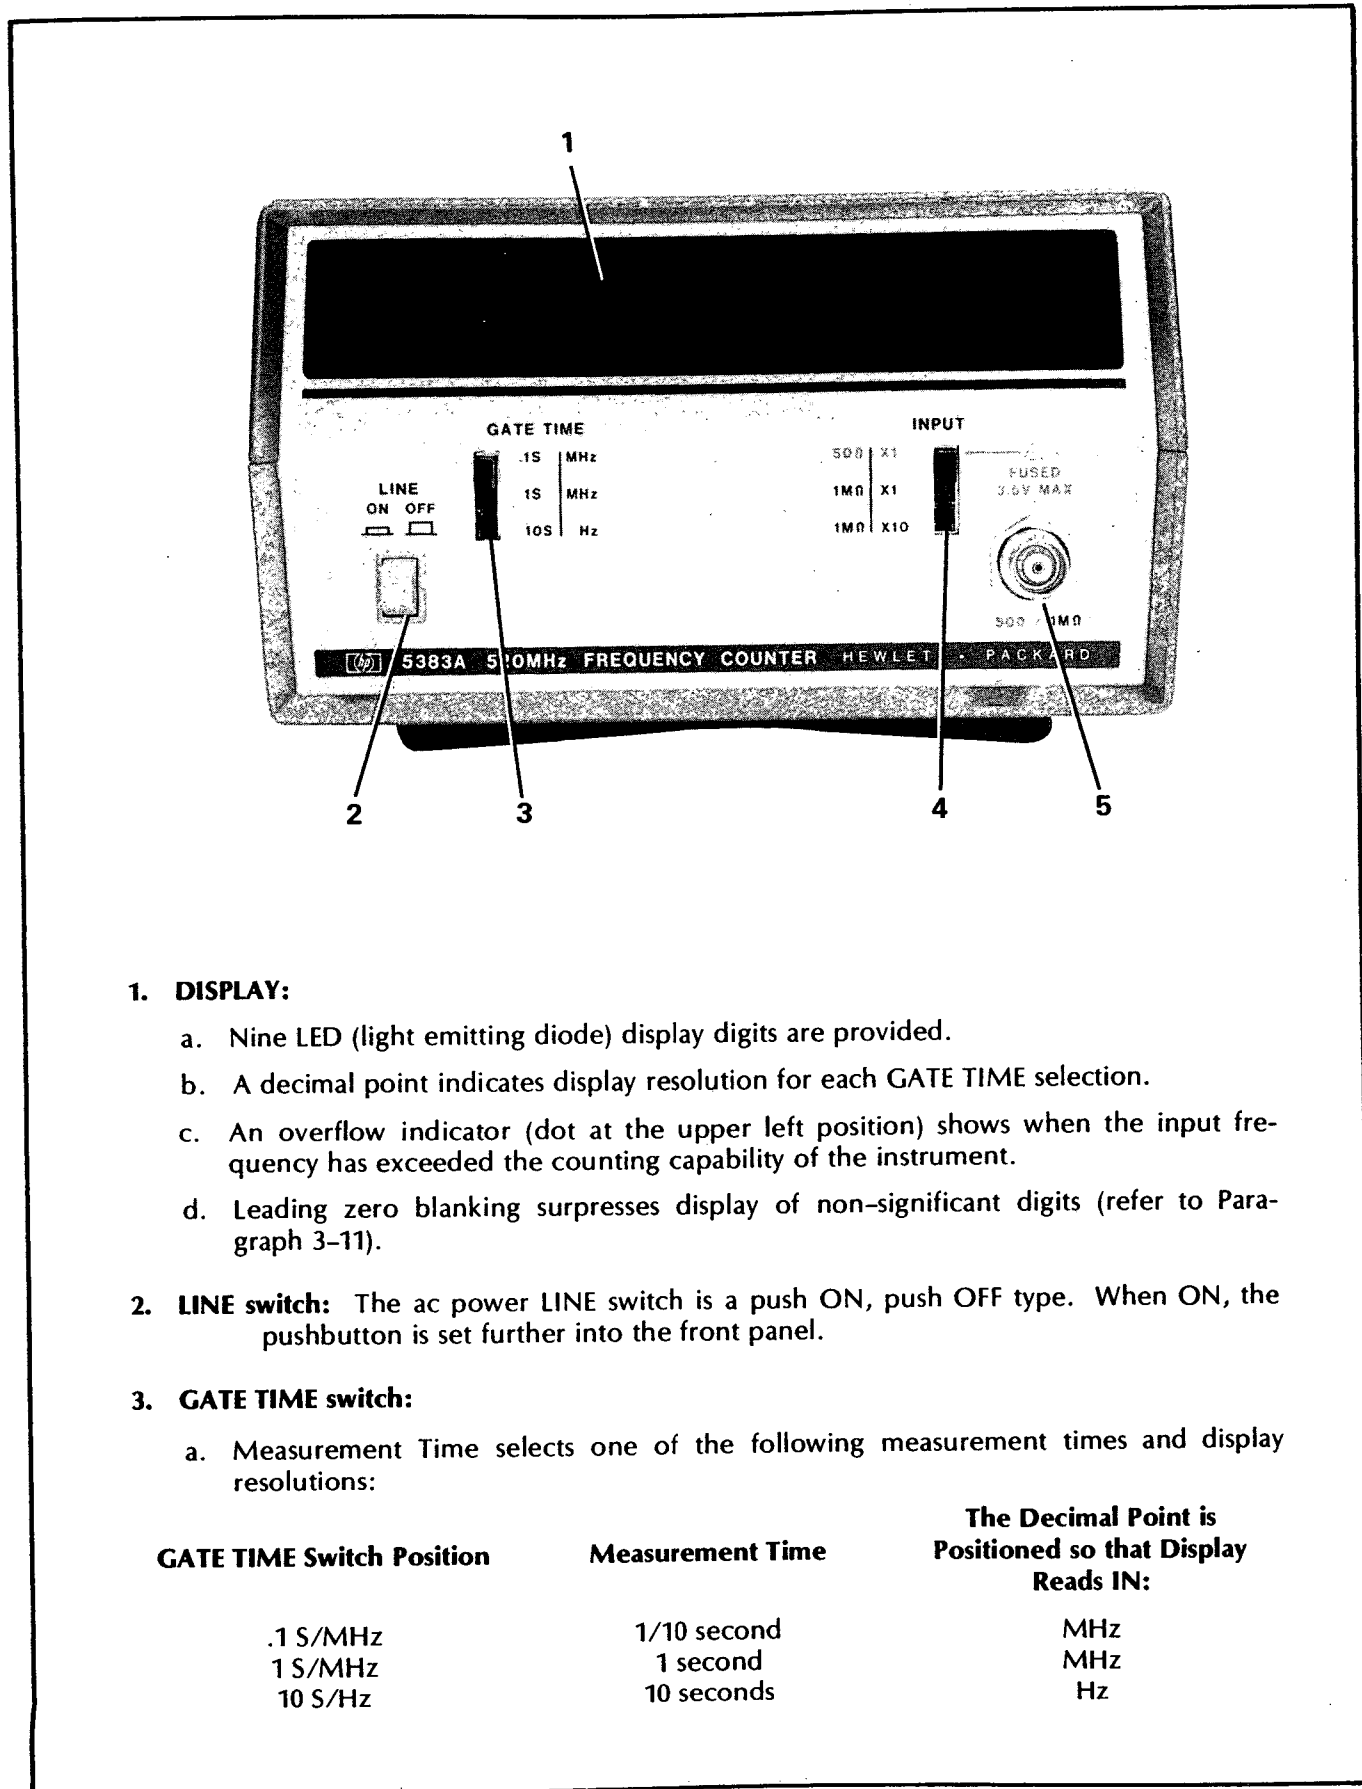

**1. DISPLAY:**

- a. Nine LED (light emitting diode) display digits are provided.
- b. A decimal point indicates display resolution for each GATE TIME selection.
- c. An overflow indicator (dot at the upper left position) shows when the input frequency has exceeded the counting capability of the instrument.
- d. Leading zero blanking suppresses display of non-significant digits (refer to Paragraph 3-11).

**2. LINE switch:** The ac power LINE switch is a push ON, push OFF type. When ON, the pushbutton is set further into the front panel.

**3. GATE TIME switch:**


- a. Measurement Time selects one of the following measurement times and display resolutions:

| GATE TIME Switch Position | Measurement Time | The Decimal Point is Positioned so that Display Reads IN: |
|---------------------------|------------------|---|
| .1 S/MHz                  | 1/10 second      | MHz   |
| 1 S/MHz                   | 1 second         | MHz   |
| 10 S/Hz                   | 10 seconds       | Hz  |

Figure 3-1. Front Panel and Internal Controls, Indicators and Connectors

- b. When this switch position is changed, the frequency counting circuits are automatically reset to zero count. The new frequency count is then displayed after a delay which is determined by the GATE TIME position (i.e., the measurement time).
  - c. Digit self-test provides a display digit self-test capability. When this switch is set between two GATE TIME positions, all display digits should shown "8" (see NOTE in Paragraph 3-11).
4. **INPUT switch:** Selects one of the following input impedances and attenuations:
- 50 $\Omega$  X1 This input is protected from input signals that exceed 3.5V rms (+24 dBm) by an internal 0.1 amp fuse (refer to Paragraph 3-11).
  - 1M $\Omega$  X1 Shunt capacity: less than 40 pf.
  - 1M $\Omega$  X10 Shunt capacity: less than 40 pf.
5. **INPUT connector:** Connects signal to be measured to internal circuits. Impedance and attenuation at this jack is selected by INPUT switch.
6. **INTERNAL FILTER switch (not shown, see Figure 8-1):** This switch is positioned in the direction of the arrow (">") to select a 100 kHz low pass filter. This filter permits stable frequency measurements in the 10 Hz to 100 kHz range when the input contains higher frequency noise.

Figure 3-1. Front Panel and Internal Controls, Indicators and Connectors (Continued)

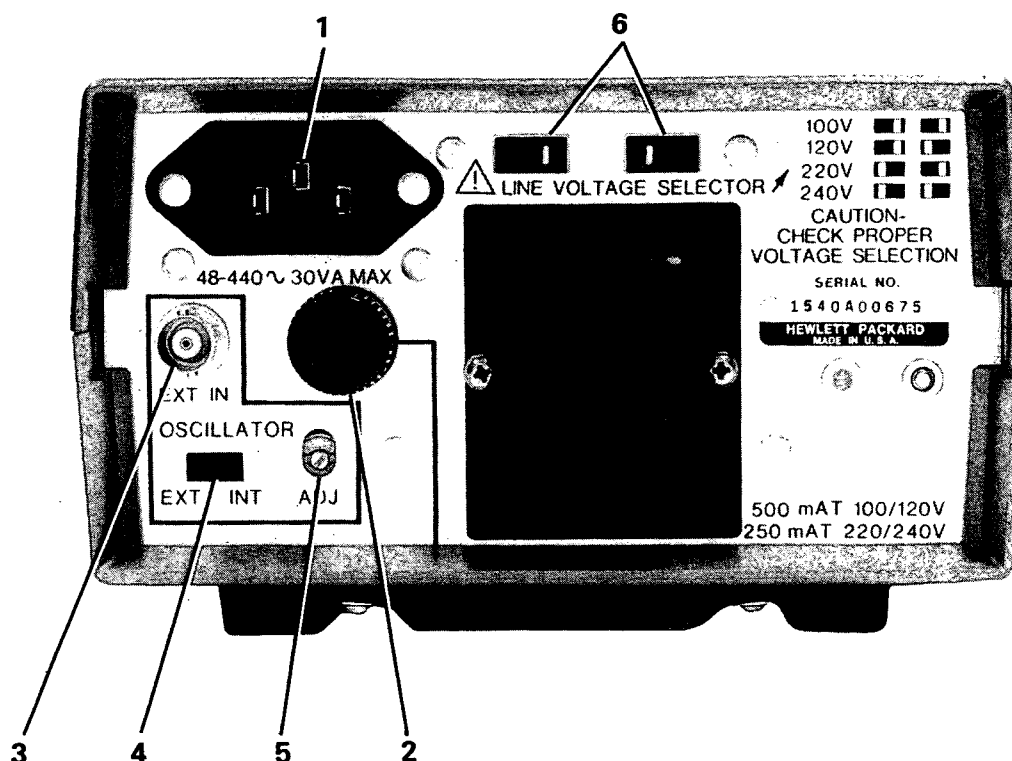

**STANDARD REAR PANEL**

1. **POWER connector:** Connect the source of ac power to the rear-panel power connector.
2. **FUSE:** A Listed, 0.500 ampere, slow-blow fuse is required for 100-volt or 120-volt operation; a Listed, 0.250 ampere, slow-blow fuse is required for 220-volt or 240-volt operation.
3. **OSCILLATOR connector:** Serves as a monitoring point for the internal time base oscillator, or provides an input path for an external time base oscillator, depending on the EXT/INT switch setting.


**NOTE**

- a. The monitor output is designed to drive a 50Ω load.
- b. The internal time base oscillator output may be connected to the front panel input jack (with INPUT switch in the 50Ω X1 position) to provide a convenient counter self-check operation.

4. **EXT/INT switch:** Selects the function of the OSCILLATOR connector:

| Switch Position | OSCILLATOR Connector Function  |
|-----------------|--|
| EXT             | Provides a nominal 50Ω input impedance path for an external 10 MHz time base or ratio input.                                       |
| INT             | Monitors the internal timebase oscillator. An optimum signal is obtained when the output drives a 50Ω load (>200 mV peak-to-peak). |

Figure 3-2a. Rear Panel Operating Controls and Indicators

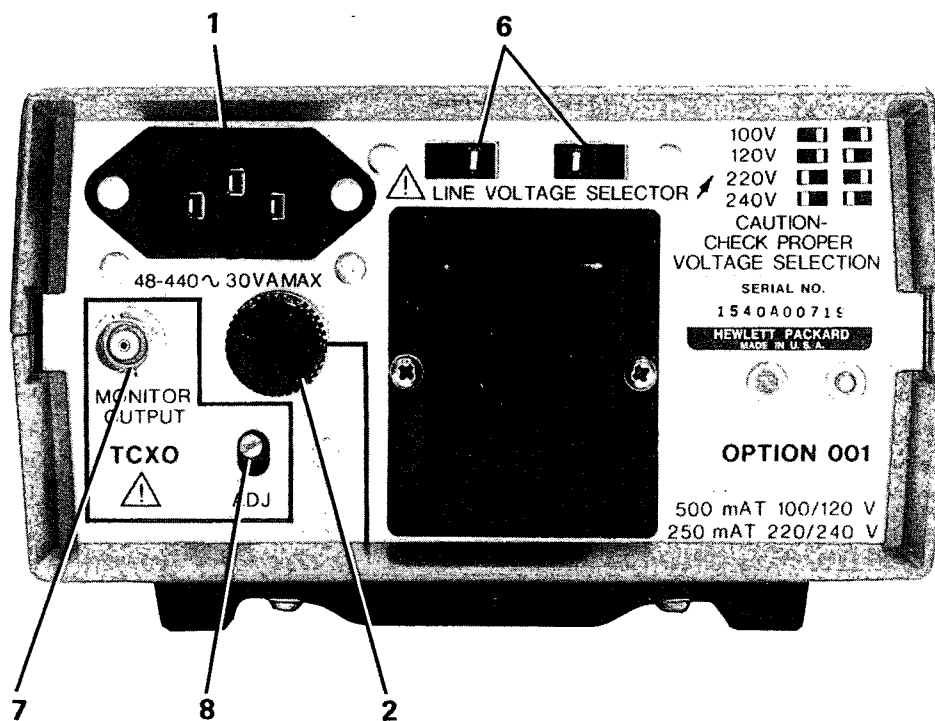

OPTION 001 REAR PANEL

5. **OSCILLATOR-ADJ control:** The ADJ control is used to set the frequency of the internal time base oscillator. Refer to the *Adjustment* Paragraphs 5-10 or 5-13, in Section V for information.
6. **LINE VOLTAGE SELECTOR switches:** Set the switches to correspond with the voltage of the ac power source. (Refer to Paragraph 2-8 for instructions.)
7. **MONITOR OUTPUT connector:** Serves as an internal time base oscillator monitor output connector only (see NOTE under item 3) for Option 001.
8. **TCXO ADJ control:** Same as 5, above. Refer to Paragraph 5-13, in Section V for information on Option 011 time base adjustment.

Figure 3-2b. Rear Panel Operating Controls and Indicators (Continued)

## SECTION IV

### THEORY OF OPERATION

#### 4-1. INTRODUCTION

4-2. The theory of operation is written primarily at a functional block level. Some detailed circuit theory is provided as an aid to troubleshooting when circuit complexity requires it. In addition, brief circuit explanations are given for two unique integrated circuit packages: the Variable Time Base Counter and the Hex Multiplexed Counters.

#### 4-3. FUNCTIONAL DESCRIPTION

4-4. The 5383A is a direct frequency counting instrument which computes input frequency "f" by counting the number of cycles "n" that occurs during an internally generated time base interval "t". This frequency measurement function is described simply by the following equation:

$$n = f \times t$$

n = number of cycles

f = frequency of input signal

t = internally generated time base interval

Once calculated, "n" data must be sampled and correctly transferred to the 9-digit counter display.

#### 4-5. INPUT CIRCUIT

4-6. (Refer to Figure 4-1 and to schematic.) Signal "f" is applied to the input circuits consisting of A2S2, A1Q15, and A1Q14. Input switch S2 routes the signal to either the 1M $\Omega$  X1, X10 path, or the the 50 $\Omega$  path. Q14 and Q15 biases these signal paths, allowing the Balanced Input Amplifier to accept either the 50 $\Omega$  or the 1M $\Omega$  signal (refer to the schematic for detailed biasing information and corresponding signal path selection). A2S2 can also select a 1M $\Omega$  X10 attenuator consisting of a 1:10 voltage divider network.

The 50 $\Omega$  signal path consists of:

- a. 0.1 amp fuse A1F1 (3.5V rms maximum input).
- b. Clamping and limiting diodes (A1CR12 and CR13; and A1CR8 thru CR11) which limit the input to 1 volt peak-to-peak.

The 1M $\Omega$  X1, X10 path consists of:

- a. FET's A1Q17, Q18, and Emitter follower A1Q16.
- b. A switchable low pass filter consisting of A1R55 and C44. Board-mounted switch A1S2 ("FILTER") switches this filter in or out.

#### 4-7. BALANCED INPUT AMPLIFIER

4-8. (Refer to Figure 4-1 and schematic.) This circuit provides approximately 24 dBm of signal gain for the Schmitt trigger input. In addition, the balanced input amplifier uses a feedback circuit to ensure that the dc level of the Schmitt Trigger input remains constant in spite of input circuit or temperature variations. Dc offsets, that result from these variations are sensed by feedback comparator, A1U5 and compared with the level set by balance potentiometer A1R32. A difference results in compensating voltage drive to a differential terminal of A1U8. This compensating voltage ultimately drives the output of A1U6 in a direction which nulls the original offset voltage. For example; if, due to temperature or circuit variations, the input dc level to the Schmitt Trigger becomes more positive; A1U5 senses the change at its input. The comparator responds by providing a negative voltage which is proportional to this positive offset. This negative voltage drives a differential terminal of A1U8; forcing its output in a more positive direction. This positive increase causes the inverting output of A1U6 to go more negative; nulling the original positive offset. This consistent dc level ensures that a sine wave input to the Schmitt trigger (A1U2) produces a symmetrical square wave output.

#### 4-9. TBO AND MAIN GATE CIRCUITS

4-10. (Refer to Figure 4-1 and schematic.) As a result of the Schmitt trigger, signal "f" is now an EECL square wave that is compatible to the digital counter circuits. This square wave is applied to the Main Gate (part of A1U1). The Main Gate is enabled by the low MGE signal which is derived from the T.B. (Time Base) circuits. The width of MGE, or "t", is determined by the setting of the front panel GATE TIME switch. The TBO count down circuits respond to the switch input by counting down the 10 MHz TBO to provide a 0.1, 1.0, or 10 second MG ("t") width (refer to Figure 4-5). It is during this "t" interval, that the enabled Main Gate passes signal "f" through to the Decade Counters. These counters count the number of cycles (during interval "t") and provide the resulting "n" data in the form of nine (4 bit) BCD characters. This accumulated data is transferred to 9 storage latches when a TR (transfer) pulse is received from the Scan Timing circuits.

#### 4-11. SCAN TIMING CIRCUITS

4-12. (Refer to Figure 4-1 or schematic.) A1U24, the Scan Oscillator, is a nominal 2 kHz timing signal generator. The 2 kHz output drives the Scan Timing Circuits which provide update, sample, and display timing signals to the counter storage latches and the display circuits. Figure 4-2 shows the waveforms associated with the Scan Timing circuits.

4-13. The update signals are held off until the measuring time interval, "t", ends. At this time MG goes high enabling generation of the following signals: RSTB (Reset Time Base), TR (Transfer "n" data) and RSC (Reset Counters). These signals are synchronous with the 2 kHz Scan Oscillator. RSTB occurs first and remains active during the entire up date sequence. Typically this sequence lasts approximately 0.4 milliseconds. During this brief time (i.e., brief in proportion to the 0.1, 1.0, or 10 second MG interval):

- ① RSTB disables the TBO count down circuits (holding MG high).
- ② The TR pulse is generated, transferring all nine "n" data BCD characters to the storage latches. The storage latches are isolated from the Decade counters at all times, except during TR pulse time.
- ③ The RSC pulse is generated (after the TR pulse terminates) to reset all counters to zero.

4-14. After RSC pulse time, the RSTB signal changes state, releasing the T.B. count down circuits so they can initiate another frequency measurement cycle. Figure 4-3 (on page 4-6) provides waveforms and a detailed circuit description of the display update sequence.

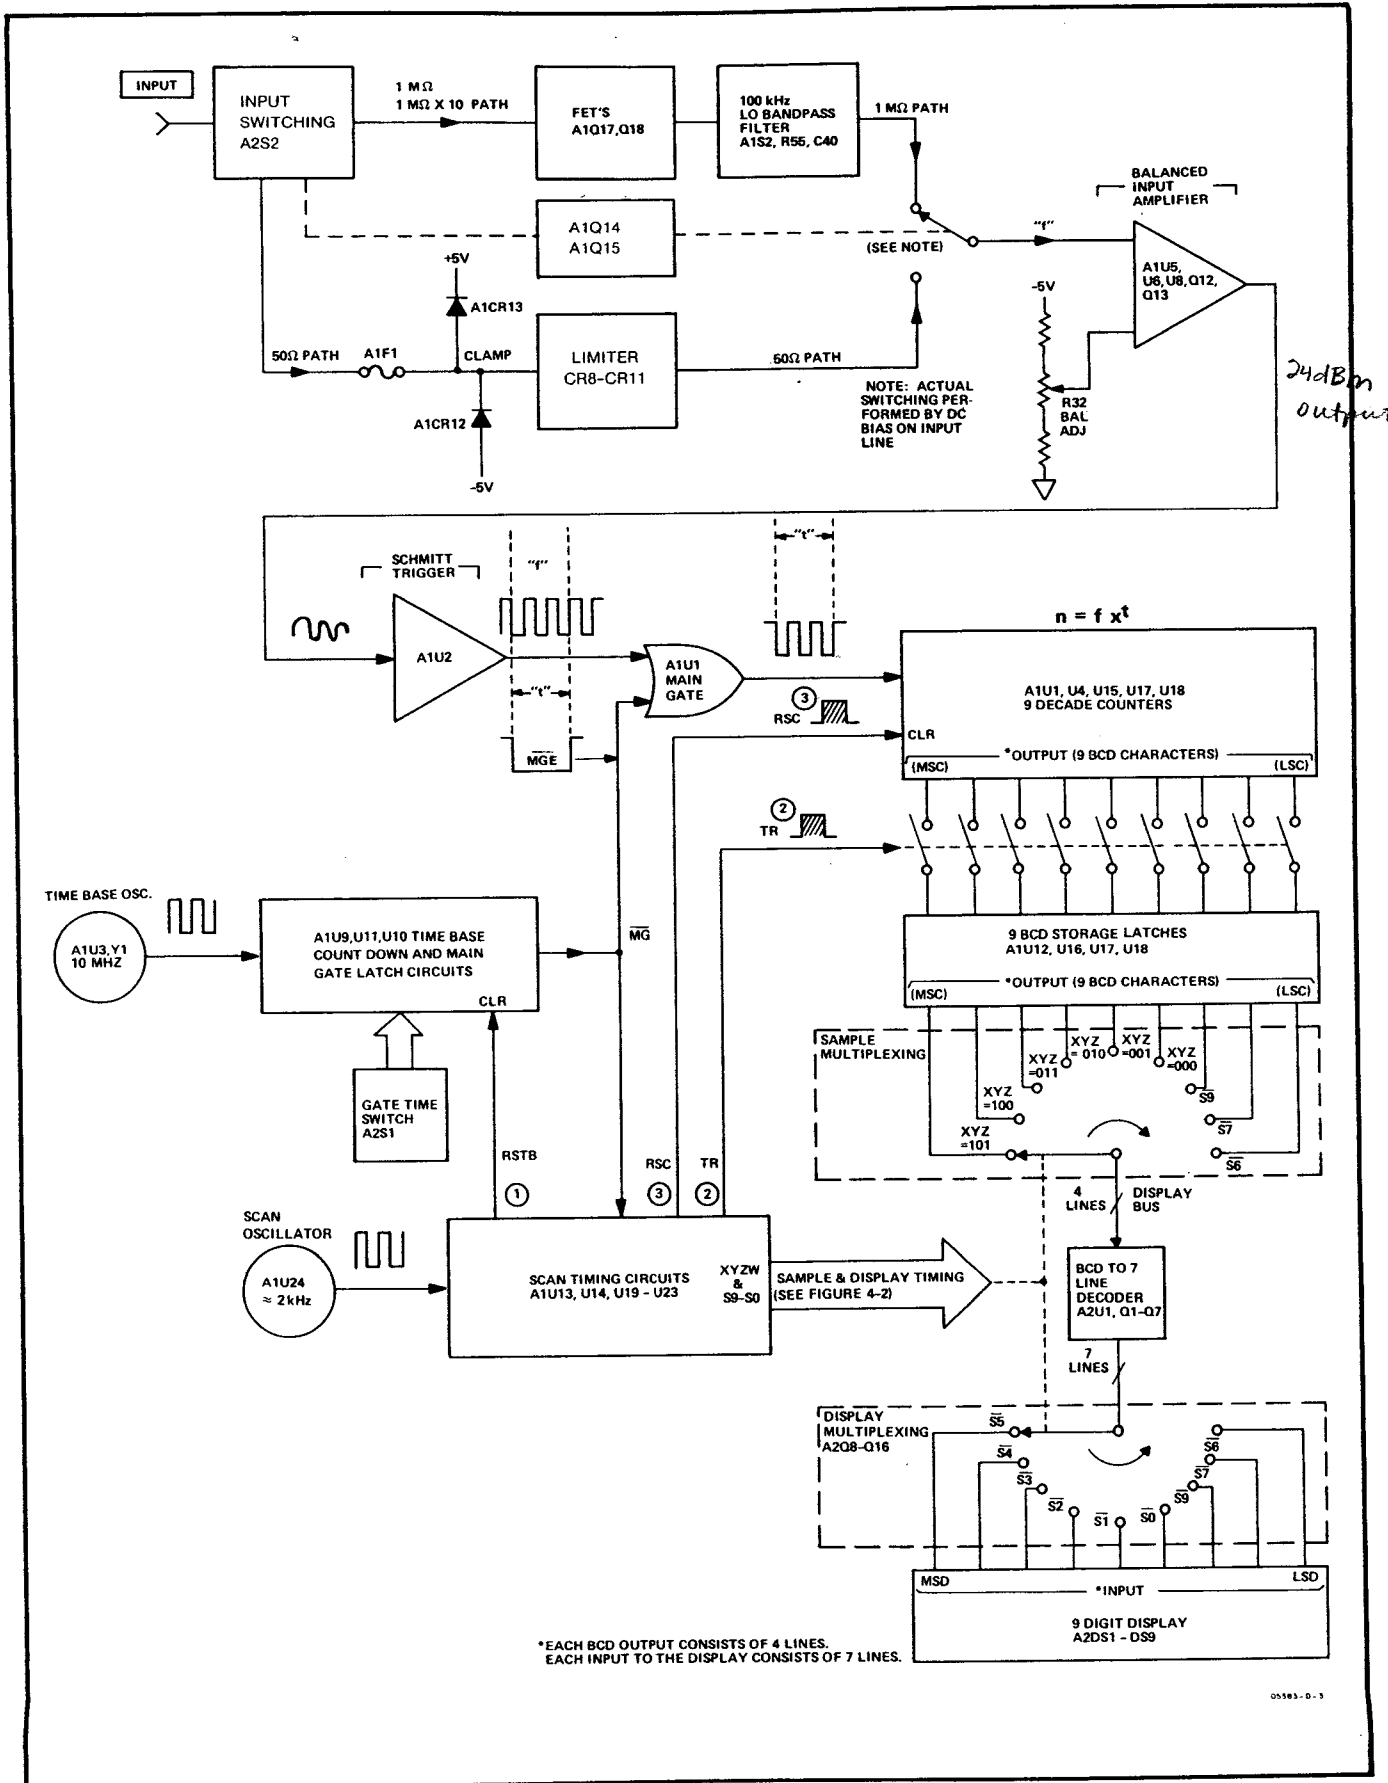


Figure 4-1. Simplified Block Diagram



**4-15. MULTIPLEXED DISPLAY FUNCTION**

4-16. The sample and display timing circuits provide signals WXYZ, and S0 through S9. These signals sequentially transfer counter data, one (BCD) character at a time to the appropriate display digit. Figure 4-1 shows a mechanical representation of the actual electronic multiplexing function. The wiper arms of the multiplexer "switches" are linked so that when a BCD character is sampled, the correct display digit is activated. For example, during time S5, the most significant character (MSC) is sampled at the counter latches as a result of an XYZ "101" (BCD "5") signal. At the same time a low S5 signal activates the most significant counter display digit (i.e., the left-most display digit). Therefore, during time S5, the MSC is transferred to the BCD-to-seven line decoder via the display bus. The resulting decoder output drives the activated left-most display digit. In a similar manner, lower significant characters are transferred and lower significant display digits are activated during subsequent scan times. Table 4-1 shows correlation between scan times, multiplexing signals, the characters sampled, and the display digits that are activated. Also refer to the scan signal timing diagram (Figure 4-2).

**4-17. LEADING ZERO BLANKING**

4-18. (Refer to schematic.) The Scan Timing circuits also provides the logic for the leading zero blanking function. Figure 4-4 (page 4-7) describes this function in detail. When the GATE TIME switch is in the 10 S/MHz position the circuit operates as shown. A 1 S/MHz or 10 S/MHz GATE TIME selection changes the RBI gate width and corresponding events to respective 0.4 millisecond or 0.6 millisecond time durations.

**4-19. UNIQUE INTEGRATED CIRCUITS**

4-20. Figure 4-5 (page 4-8) and 4-6 (page 4-8) contain circuit descriptions of Variable Time Base Counter A1U11 and Hex Multiplexed Counter A1U18. These descriptions pertain to the direct application of these integrated circuits in the 5383A Frequency Counter.

Table 4-1. Sample and Display Timing

|   |       | SCAN TIME    |       |       |       |       |       |       |    |               |              |
|---|-------|--------------|-------|-------|-------|-------|-------|-------|----|---------------|--------------|
|   |       | S5           | S4    | S3    | S2    | S1    | S0    | S9    | S8 | S7            | S6           |
| Sample  | W     | 0            | 0     | 0     | 0     | 0     | 0     | 1     |    | 0             | 0            |
|   | X     | 1            | 0     | 1     | 0     | 1     | 0     |       |    |               |              |
| Multiplexing Control Signal   | Y     | 0            | 0     | 1     | 1     | 0     | 0     | S9    |    | S7            | S6           |
|   | Z     | 1            | 1     | 0     | 0     | 0     | 0     |       |    |               |              |
| Counter/Latch   | Cntr. | A1U18        | A1U18 | A1U18 | A1U18 | A1U18 | A1U18 | A1U15 |    | A1U4<br>A1U15 | A1U1<br>A1U4 |
|   | Latch | A1U18        | A1U18 | A1U18 | A1U18 | A1U18 | A1U18 | A1U15 |    | A1U16         | A1U12        |
| Display Activated   |       | DS1<br>(MSD) | DS2   | DS3   | DS4   | DS5   | DS6   | DS7   |    | DS8           | DS9<br>(LSD) |
| MSD = Most significant display digit.<br>LSD = Least significant display digit. |       |              |       |       |       |       |       |       |    |               |              |


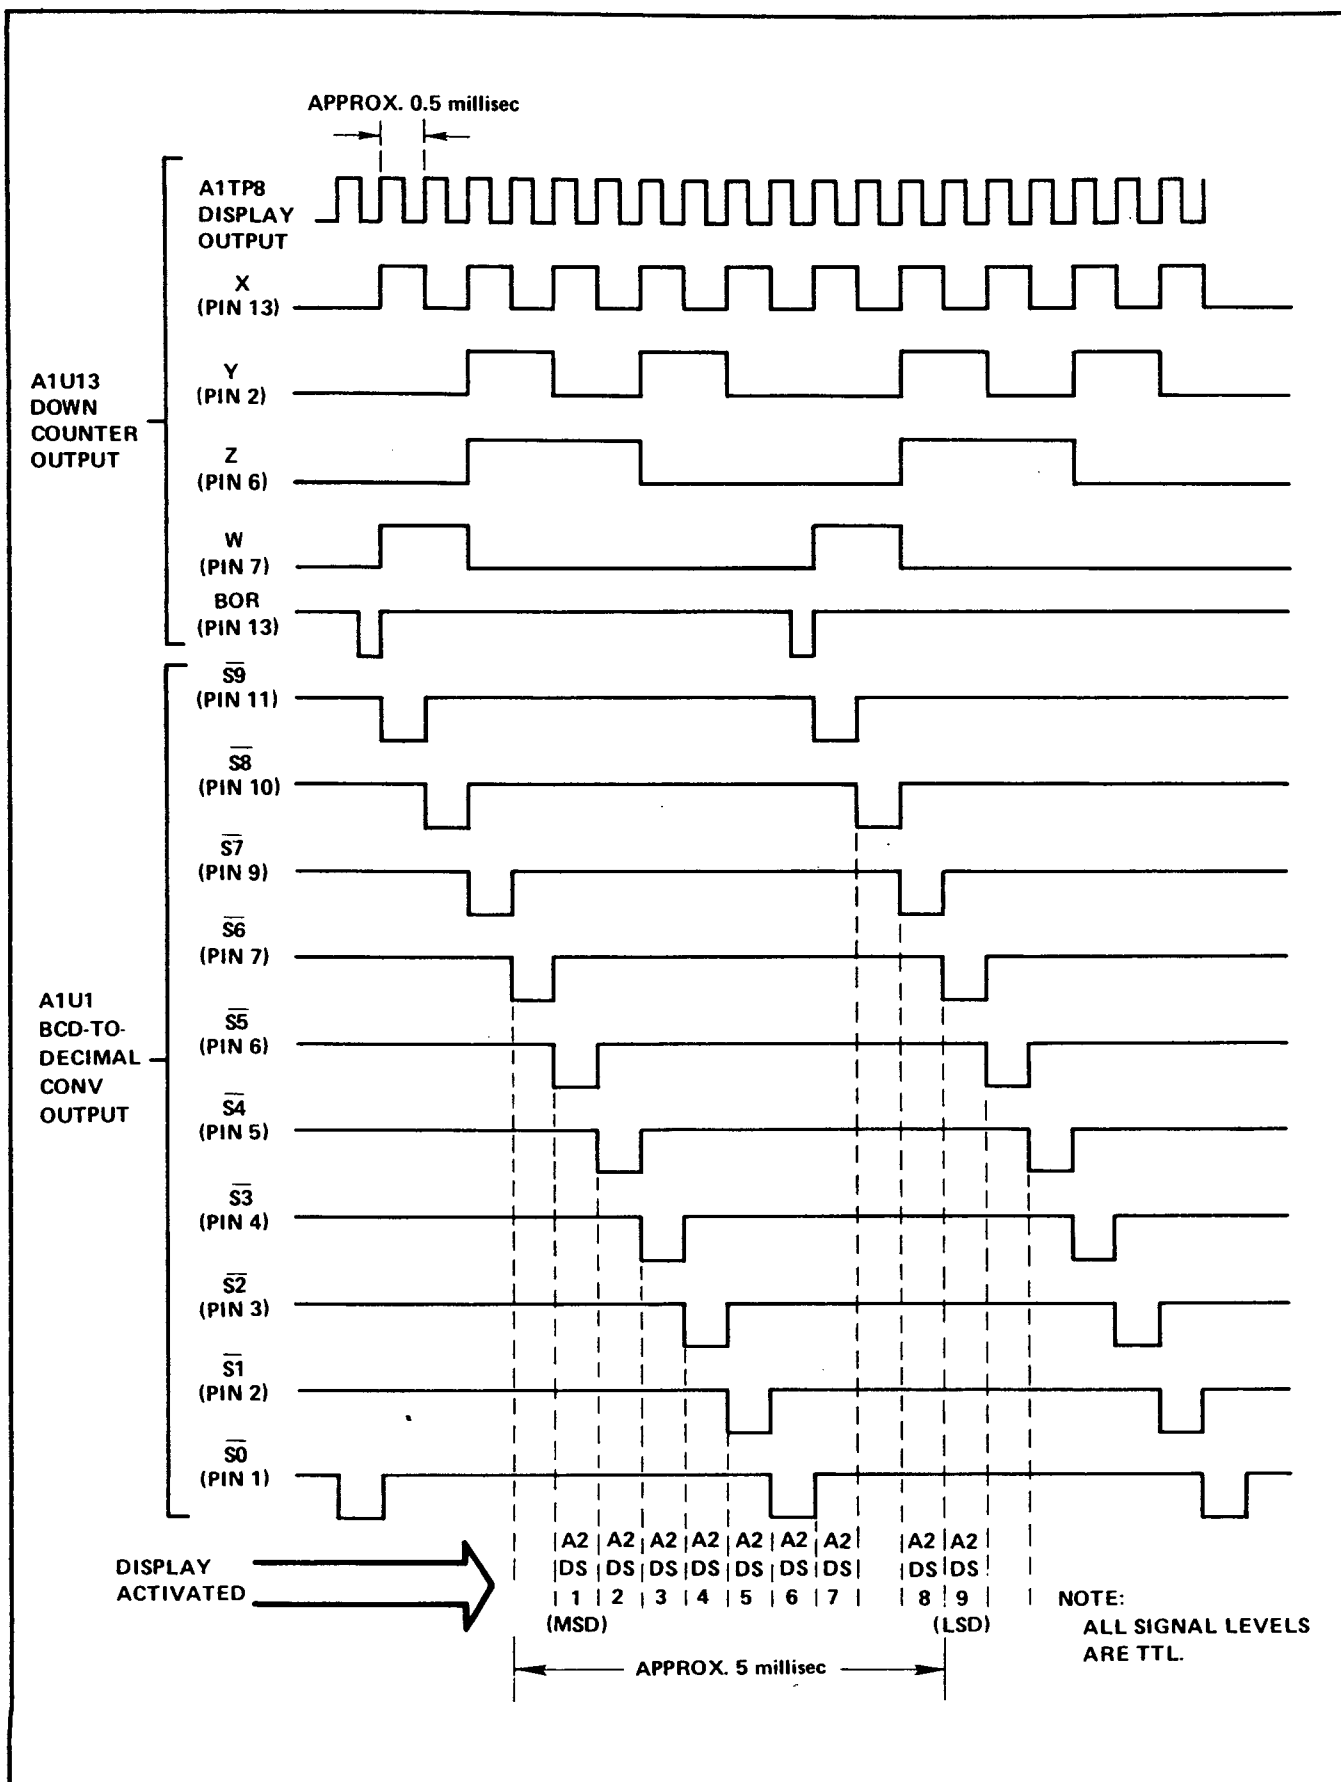


Figure 4-2. Scan Timing Waveforms

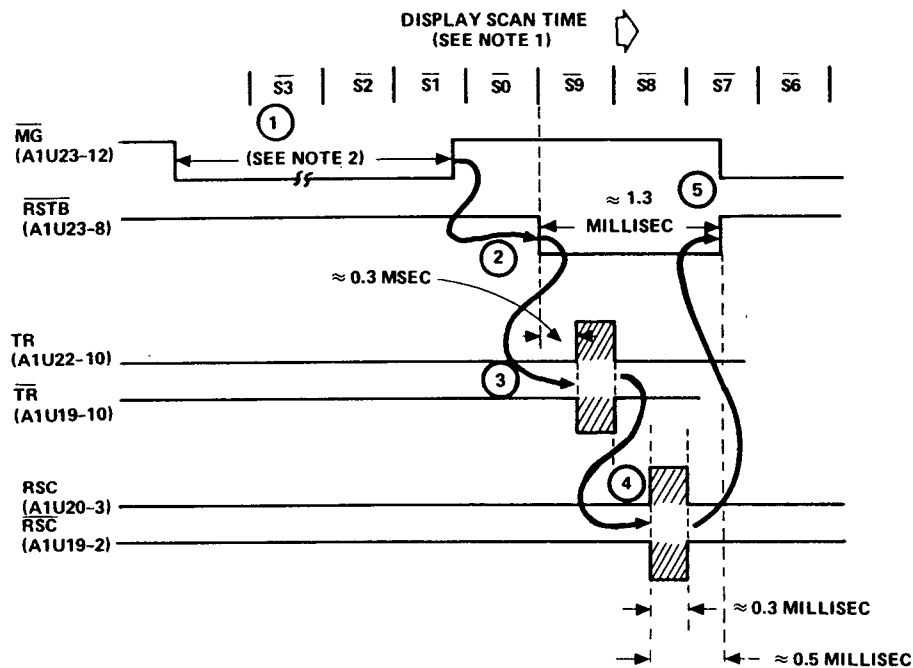


**NOTES**

1.  $\overline{MGE}$  is an EECL version of the TTL  $\overline{MG}$  signal.
2. Display scan timing and the timing of the  $\overline{MG}$  (or  $\overline{MGE}$ ) signal are asynchronous. Therefore, the positive transition of the  $\overline{MG}$  (or  $\overline{MGE}$ ) signal (i.e., trailing edge) occurs during any random time.
3.  $\overline{MG}$  (or  $\overline{MGE}$ ) width ("t") depends on the setting of the GATE TIME switch.

- ①  $\overline{MGE}$  is low during time "t", allowing the frequency counters to count the input signal frequency. The storage latches are isolated from the counters at this time.
- ② After the  $\overline{MG}$  signal terminates, the RSTB latch is set at the beginning of scan time  $\overline{S9}$ . This initiates the update sequence. A RSTB signal holds  $\overline{MGE}$  off (i.e., high) until the completion of the update sequence (approximately 0.5 milliseconds later).
- ③ During scan time  $\overline{S9}$ , TR and  $\overline{TR}$  pulses are generated. These signals connect the counter outputs to the storage latches; resulting in the transfer of nine BCD characters to the latches. When the TR and  $\overline{TR}$  pulses end, the latches are again isolated from the frequency counters.
- ④ During scan time  $\overline{S8}$  RSC and  $\overline{RSC}$  pulses reset the frequency counters to zero.
- ⑤ During scan time  $\overline{S7}$ , the RSTB latch is cleared, ending the update sequence, and releasing  $\overline{MGE}$  (i.e., allowing it to go low) to allow another frequency count.

Figure 4-3. Update Function

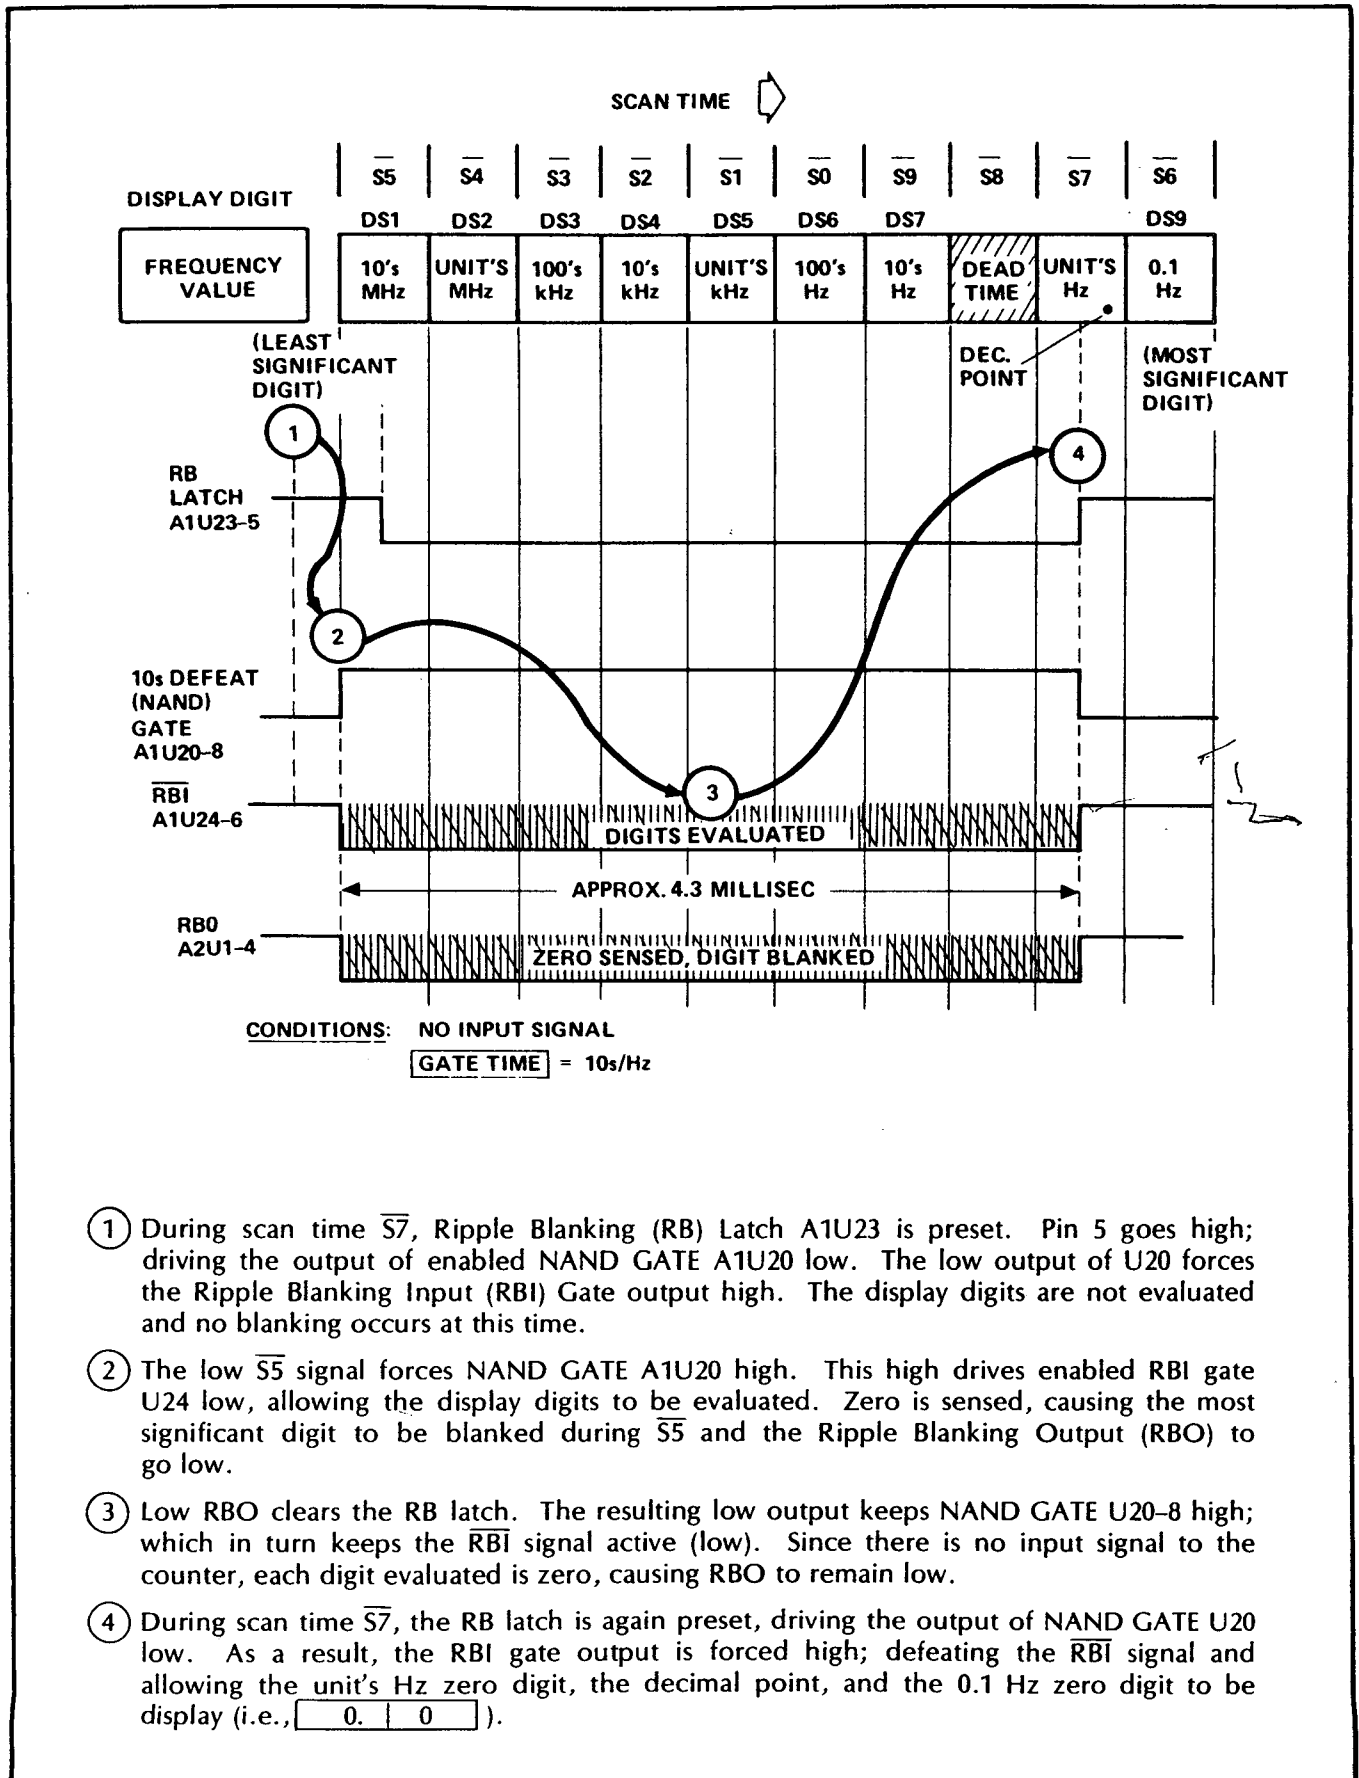

- ① During scan time  $\overline{S7}$ , Ripple Blanking (RB) Latch A1U23 is preset. Pin 5 goes high; driving the output of enabled NAND GATE A1U20 low. The low output of U20 forces the Ripple Blanking Input (RBI) Gate output high. The display digits are not evaluated and no blanking occurs at this time.
- ② The low  $\overline{S5}$  signal forces NAND GATE A1U20 high. This high drives enabled RBI gate U24 low, allowing the display digits to be evaluated. Zero is sensed, causing the most significant digit to be blanked during  $\overline{S5}$  and the Ripple Blanking Output (RBO) to go low.
- ③ Low RBO clears the RB latch. The resulting low output keeps NAND GATE U20-8 high; which in turn keeps the  $\overline{RBI}$  signal active (low). Since there is no input signal to the counter, each digit evaluated is zero, causing RBO to remain low.
- ④ During scan time  $\overline{S7}$ , the RB latch is again preset, driving the output of NAND GATE U20 low. As a result, the RBI gate output is forced high; defeating the  $\overline{RBI}$  signal and allowing the unit's Hz zero digit, the decimal point, and the 0.1 Hz zero digit to be display (i.e., 

|    |   |
|----|---|
| 0. | 0 |
|----|---|

).

Figure 4-4. 10 S/Hz Leading Zero Blanking Function

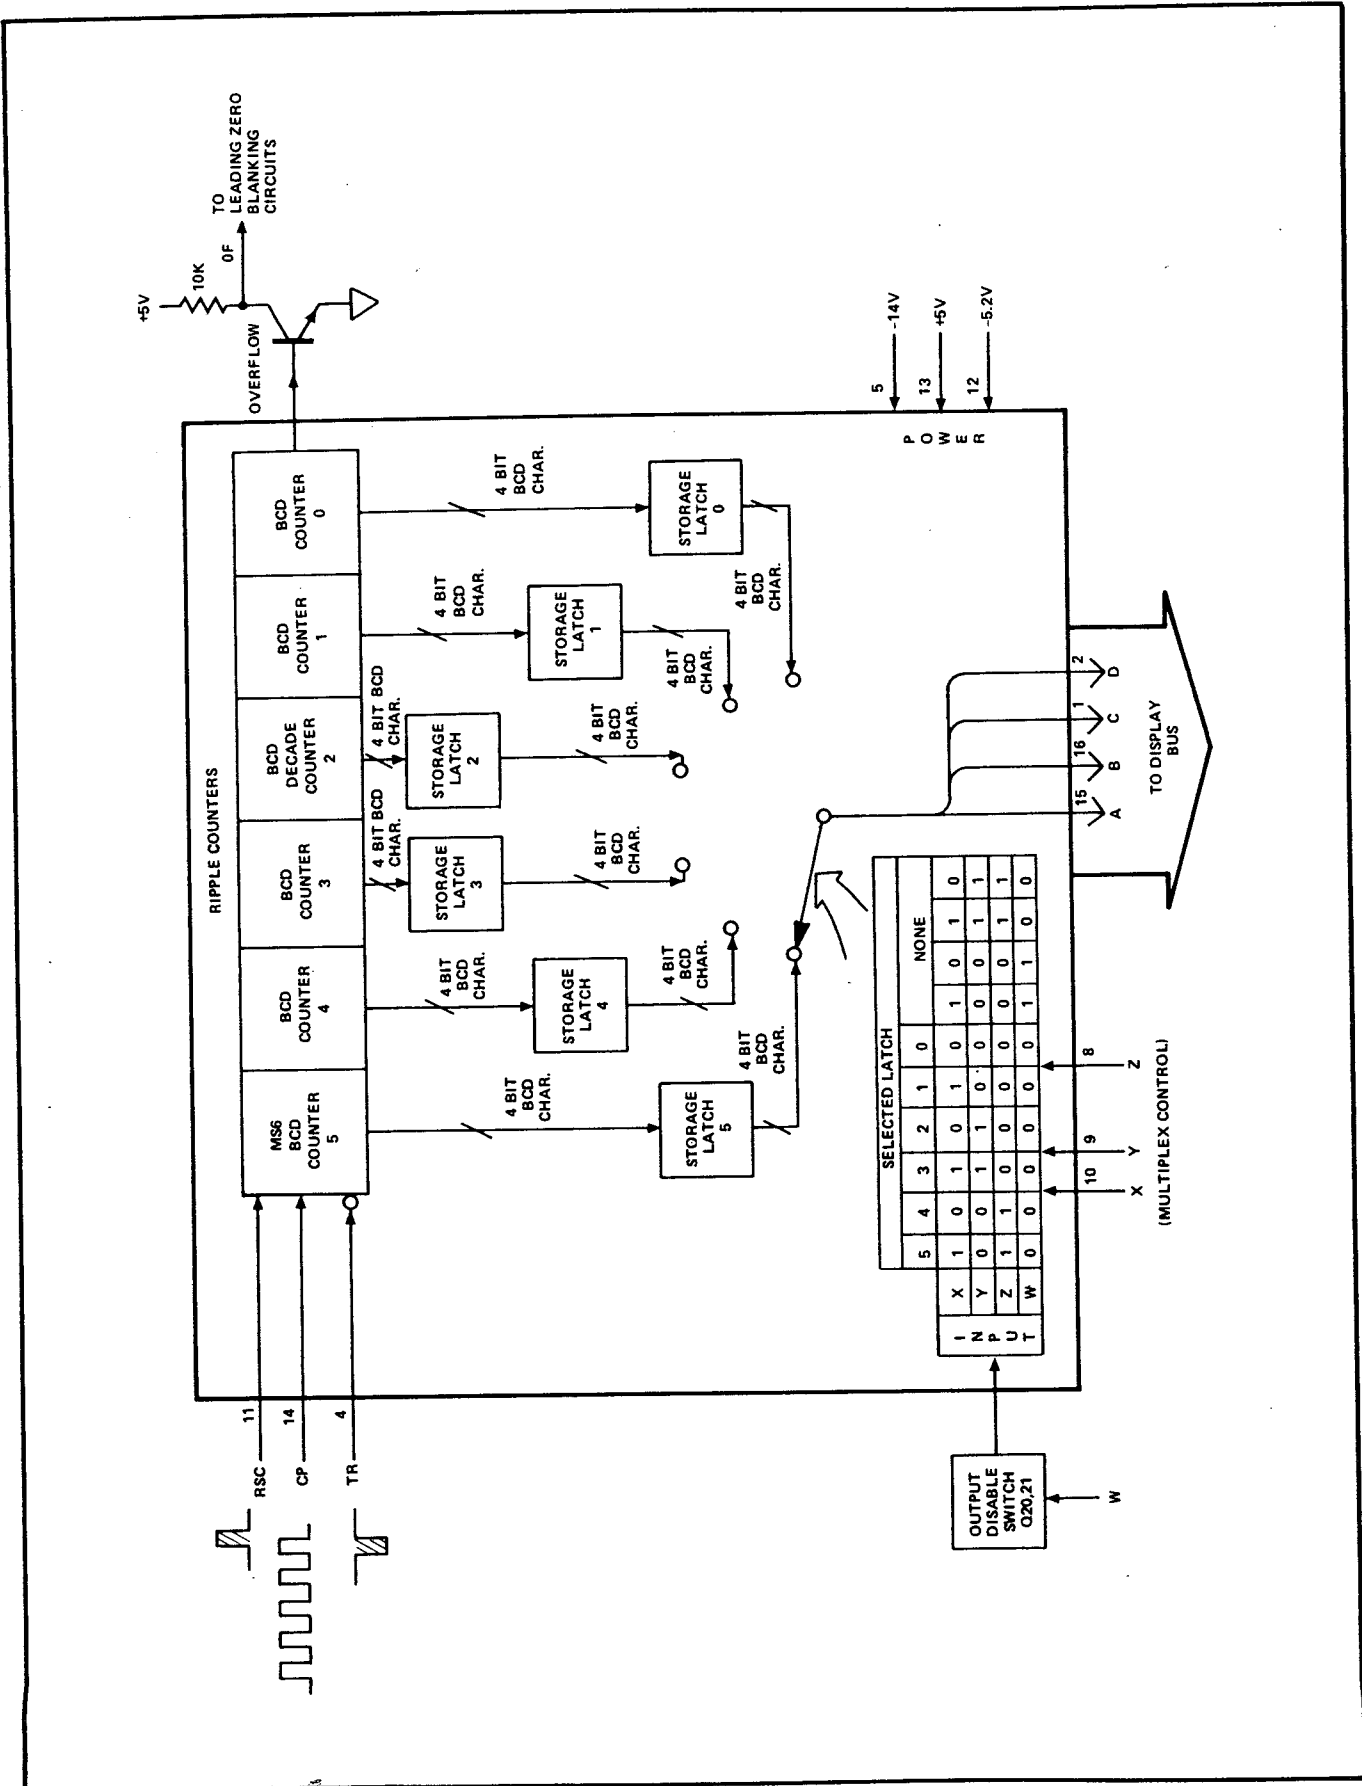



Figure 4-5. Hex Multiplexed Counter A1U18

### HEX MULTIPLEXED COUNTER A1U18

The Hex multiplexed counter integrated circuit package consists of six BCD ripple counters, six corresponding storage latches and a multiplex selector circuit. It functions in the following manner:

- a. The clock pulse ( $C_p$ ) input is counted by the six BCD counters: Counter "5" through Counter "0".
- b. The six (4-bit) BCD characters that result from the counting operation are transferred to the storage latches when the  $\overline{TR}$  (transfer) pulse is applied. Otherwise i.e., when no  $\overline{TR}$  pulse is applied), the counter outputs are isolated from the storage latches.
- c. After the transfer operation, a reset counters (RSC) pulse clears all the BCD counters to zero.
- d. The BCD characters in the storage latches are sequentially addressed and transferred, one character at a time, to the display bus according to the XYZ multiplexing control signal. A binary XYZ input of six (110) and seven (111) are not recognized by the counter. These inputs result in the isolation of the counter output from the display bus. A high "W" signal also isolates the counter during scan times S8 and S9 to avoid interaction on the display bus between its output and the output of Counter/Storage Latch A1U15.
- e. The Hex Multiplexed Counter generates a high OF (overflow) signal when all six BCD counters reach a terminal nine count. This output is inverted by Q19 to provide the  $\overline{OF}$  which:
  1. Lights the overflow light on the left-most front panel display digit.
  2. Disables the leading zero blanking circuits.

Figure 4-5. Hex Multiplexed Counter A1U18 (Continued)

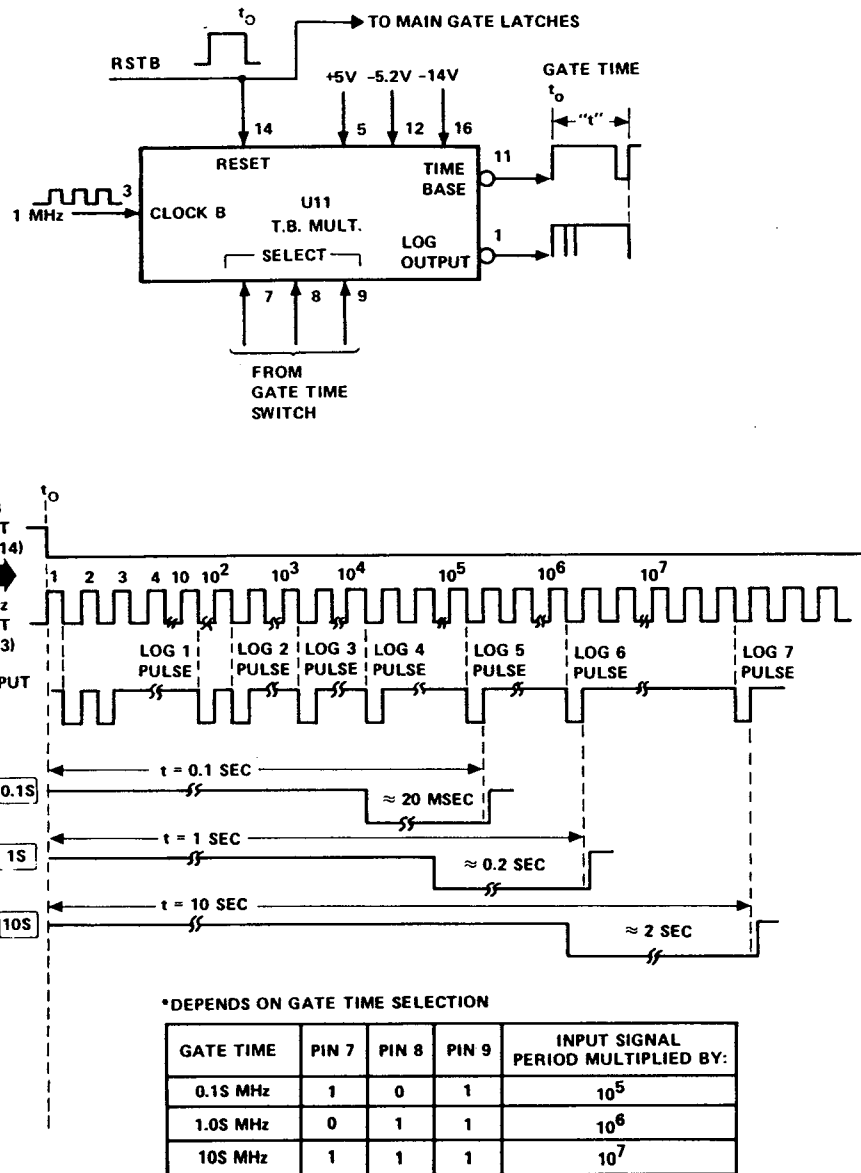

### VARIABLE TIME BASE COUNTER U11

The variable time base counter responds to a 3-bit binary input (controlled by the front panel GATE TIME switch) by multiplying the one microsecond period of the input signal by a factor of  $10^5$ ,  $10^6$ , or  $10^7$ . The resulting time base output gate drives the Main Gate Latches which are clocked by the Log pulse outputs of this integrated circuit. These output Log pulses are spaced according to a logarithmic function of the input signal count. As a result of these signals, an accurate and stable main gate ( $\overline{MGE}$ ) is provided for the frequency counting function. A logic high Reset Time Base (RSTB) signal resets the variable time base counter and the Main Gate Latches (resulting in a High  $\overline{MGE}$ ) while the frequency counters are transferring data.

Figure 4-6. Variable Time Base Counter A1U11

## SECTION V MAINTENANCE

### 5-1. INTRODUCTION

5-2. This section provides data to:

- Verify correct counter operation.
- Define a counter failure.
- Establish guidelines to restore normal counter operation.

The following information is included:

- a. Performance checks.
- b. Adjustment procedures.
- c. Assembly/Dissassembly procedures.
- d. Troubleshooting procedures.

### 5-3. IN-CABINET PERFORMANCE CHECK

5-4. Use the performance check in Table 5-1 to verify proper operation of counter. This check should be used when improper operation or nonconformance to specifications is suspected.

*Table 5-1. In-Cabinet Performance Check*


#### 1. DISPLAY

- a. Set the GATE TIME switch between any two positions. Observe all nine display digits read "8" (see NOTE at the bottom of page 3-3 in Section III).
- b. Set the GATE TIME to the .1s MHz, 1s MHz, and 10s MHz positions while observing the display for the correct indication as shown below:


GATE TIME

DISPLAY

.1S/MHz



1S/MHz



10S/Hz



- c. If your instrument does not meet the above specifications perform the troubleshooting procedures provided in Figure 5-1.



Table 5-1. In-Cabinet Performance Check (Continued)

**2. LOOP-AROUND (SELF-CHECK)**

- a. (Standard Counter only) set the counter rear panel INT/EXT switch to the INT position.
- b. Set the counter front panel INPUT switch to 50Ω X1.
- c. Connect a coaxial cable between the rear panel connector and the front panel connector.
- d. The counter display should indicate 10 MHz ±1 count in all GATE TIME switch positions.
- e. Obtain a 50Ω Feedthru connector (HP 11048C or equivalent).
- f. Disconnect the coaxial cable from the front panel INPUT connector and reconnect to INPUT via a 50Ω Feedthru connector.
- g. The counter display should indicate 10 MHz ±1 count in the 1MΩ X1 and the 1MΩ X10 INPUT switch positions.

**3. SENSITIVITY**

- a. Obtain the following test equipment:

HP 11048C or equivalent 50Ω Feedthru connector  
HP 8654B Signal Generator or equivalent  
HP 651B Test Oscillator or equivalent

- b. Connect a coaxial cable between the output of the test equipment and the 5383A front panel INPUT connector.
- c. Set up switches, test equipment, and the 5383A as described in Table A. Observe that the counter displays the correct frequency, and that the display is stable (see NOTE).

**TABLE A**

| TEST EQUIPMENT                     | FREQUENCY | OUTPUT LEVEL (RMS) | 5383A INPUT SWITCH POSITION |
|------------------------------------|-----------|--------------------|-----------------------------|
| HP 8654B or equivalent             | 520 MHz   | 25 mV              | 50Ω X1                      |
|                                    | 100 MHz   | 25 mV              | 50Ω X1                      |
|                                    | 50 MHz    | 50 mV              | *1MΩ X1                     |
|                                    | 10 MHz    | 25 mV              | *1MΩ X1                     |
| HP 651B or equivalent              | 20 Hz     | 25 mV              | *1MΩ X1 and 50Ω X1          |
|                                    | 10 Hz     | 25 mV              | *1MΩ X1                     |
| *Through a 50Ω Feedthru connector. |           |                    |                             |

**NOTE**

The stability of the counter display depends on the stability of the test equipment being used. The HP 8654B, for example, has a short term stability which should cause at least the first five most-significant display digits of the counter to be stable.

Table 5-1. In-Cabinet Performance Check (Continued)

#### 4. EXTERNAL TIME BASE INPUT

- a. Obtain the following test equipment:

HP 651B Test Oscillator  
BNC "TEE" Connector

- b. At the counter front panel:

Set the INPUT Switch to  $50\Omega$  X1  
Set the GATE TIME Switch to .1s/MHz

- c. At the counter rear panel, set the INT/EXT switch to EXT.

- d. Connect the  $50\Omega$  output of the HP 651B to the 5383A counter via the "TEE" connector as shown in Figure A.

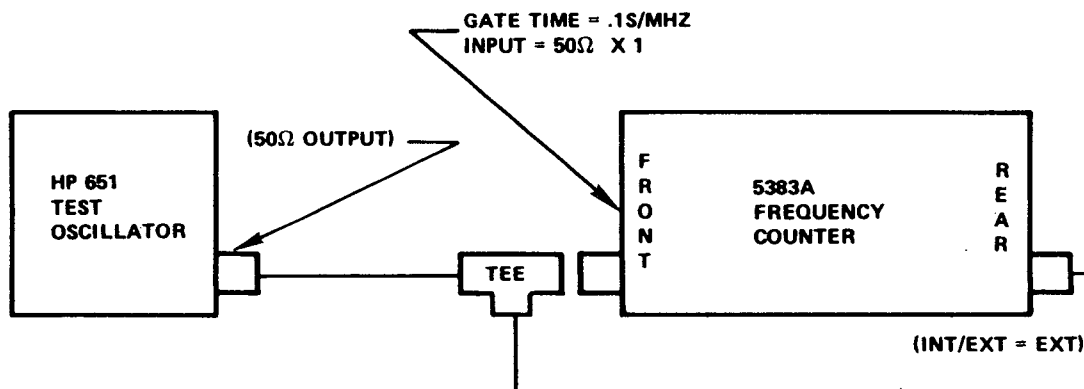


Figure A

- e. Set the HP 651B for an output of 10 MHz at 250 mV rms. The counter's display should be  $10.00000 \pm 1$  count.
- f. Set the HP 651B for an output of 100 kHz at 250 mV rms. The counter's display should be  $10.00000 \pm 1$  count. NOTE Because of the input time base, the gate time (i.e., time to make a frequency measurement) is 10 seconds.

#### 5. STANDARD TIME BASE OSCILLATOR

- a. Obtain the following test equipment:

HP 5328A (Option 010) Universal Counter, or  
HP 5345A Electronic Counter

- b. At the 5383A front panel:

Set the INPUT switch to  $50\Omega$  X1  
Set the GATE TIME switch to 1s/MHz

Table 5-1. In-Cabinet Performance Check (Continued)

- c. Connect a coaxial cable to:

The HP 5345A rear panel FREQ STD OUTPUT 10 MHz, or  
The HP 5328A (Option 010) rear panel OSC connector

**NOTE**

The rear panel EXT/INT switch should be in the INT position

- d. Connect the other end of the cable to the 5383A front panel connector.
- e. Observe the 5383A Frequency Counter for a displayed value of 10.000000 MHz  $\pm$ 25 Hz. If this value is not observed, perform the adjustment procedures in Paragraph 5-10.

**6. OPTION 001 TIME BASE OSCILLATOR**

- a. Obtain the following test equipment:

HP 5328A (Option 010) Universal Counter, or  
HP 5345A Electronic Counter

- b. Set the 5383A front panel switches as follows:

INPUT switch to 50 $\Omega$  X1  
GATE TIME switch to 10s/Hz

- c. Connect a coaxial cable between the 5383A front panel and:

The HP 5345A rear panel FREQ STD OUTPUT 10 MHz connector, or  
The HP 5328A (Option 010) rear panel OSC connector

**NOTE**

Rear panel INT/EXT switch should be in the INT position.

- d. Observe the 5383A Frequency Counter for a displayed value of 10000000.0 Hz  $\pm$ 10.1 Hz. If this value is not observed, perform the adjustment procedure in Paragraph 5-13.

**PERFORMANCE CHECK RECORD SHEET**

HEWLETT-PACKARD MODEL 5383A  
FREQUENCY COUNTER

Test Performed by \_\_\_\_\_  
Date \_\_\_\_\_

Serial No. \_\_\_\_\_

**TESTS**

**RESULTS**

(NOTE: Enter your initials to indicate passed or failed.)

**PASSED      FAILED**

- 1. DISPLAY CHECK (Table 5-1, 1) \_\_\_\_\_
- 2. LOOP AROUND CHECK (Table 5-1, 2) \_\_\_\_\_
- 3. SENSITIVITY CHECK (Table 5-1, 3) \_\_\_\_\_

| FREQUENCY | OUTPUT LEVEL (RMS) | 5383A INPUT SWITCH POSITION | PASSED | FAILED |
|-----------|--------------------|-----------------------------|--------|--------|
| 520 MHz   | 25 mV              | 50Ω X1                      |        |        |
| 100 MHz   | 25 mV              | 50Ω X1                      |        |        |
| 50 MHz    | 50 mV              | *1MΩ X1                     |        |        |
| 10 MHz    | 25 mV              | *1MΩ X1                     |        |        |
| 20 Hz     | 25 mV              | 50Ω X1                      |        |        |
| 20 Hz     | 25 mV              | *1MΩ X1                     |        |        |
| 10 Hz     | 25 mV              | *1MΩ X1                     |        |        |

\*Through a 50Ω Feedthru connector.

**PASSED      FAILED**

- 4. EXTERNAL TIME BASE INPUT (Table 5-1, 4)  
(Standard Counter Only) \_\_\_\_\_
- 5. STANDARD TIME BASE OSCILLATOR (Table 5-1, 5)  
(Standard Counter Only) \_\_\_\_\_
- 6. OPTION 001 TIME BASE OSCILLATOR (Table 5-1, 6)  
(Option 001 Only) \_\_\_\_\_

**PERFORMANCE CHECK RECORD SHEET**

HEWLETT-PACKARD MODEL 5383A  
FREQUENCY COUNTER

Test Performed by \_\_\_\_\_  
Date \_\_\_\_\_

Serial No. \_\_\_\_\_

**TESTS**

**RESULTS**

(NOTE: Enter your initials to indicate passed or failed.)

1. DISPLAY CHECK (Table 5-1, 1)
2. LOOP AROUND CHECK (Table 5-1, 2)
3. SENSITIVITY CHECK (Table 5-1, 3)

**PASSED**      **FAILED**

\_\_\_\_\_

\_\_\_\_\_

| FREQUENCY | OUTPUT LEVEL (RMS) | 5383A INPUT SWITCH POSITION | PASSED | FAILED |
|-----------|--------------------|-----------------------------|--------|--------|
| 520 MHz   | 25 mV              | 50Ω X1                      |        |        |
| 100 MHz   | 25 mV              | 50Ω X1                      |        |        |
| 50 MHz    | 50 mV              | *1MΩ X1                     |        |        |
| 10 MHz    | 25 mV              | *1MΩ X1                     |        |        |
| 20 Hz     | 25 mV              | 50Ω X1                      |        |        |
| 20 Hz     | 25 mV              | *1MΩ X1                     |        |        |
| 10 Hz     | 25 mV              | *1MΩ X1                     |        |        |

\*Through a 50Ω Feedthru connector.

4. EXTERNAL TIME BASE INPUT (Table 5-1, 4)  
(Standard Counter Only)
5. STANDARD TIME BASE OSCILLATOR (Table 5-1, 5)  
(Standard Counter Only)
6. OPTION 001 TIME BASE OSCILLATOR (Table 5-1, 6)  
(Option 001 Only)

**PASSED**      **FAILED**

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

## 5-5. ADJUSTMENTS

5-6. The counter requires two circuit adjustments: The Balanced Input Amplifier adjustment, and the Time Base Oscillator adjustment. Perform these adjustments according to the following procedures:

### WARNING

**DISCONNECT THE AC POWER CORD FROM THE COUNTER PRIOR TO REMOVING THE COVERS. EXPOSED TERMINALS WITHIN THE COUNTER (INCLUDING SEVERAL POINTS ON THE PRINTED CIRCUIT BOARD) HAVE VOLTAGES PRESENT WHICH ARE SUFFICIENT TO CAUSE INJURY OR DEATH.**

## 5-7. Balanced Input Amplifier

5-8. The input amplifier positive and negative triggering thresholds are adjusted with the following recommended test equipment:

HP 180A Oscilloscope  
HP 1801A Oscilloscope Plug-in  
HP 651B Test Oscillator

5-9. Perform the adjustment as follows:

- Remove the top and bottom covers from the counter as described in Paragraph 5-16. Observe WARNING note.
- Connect the oscilloscope to A1TP1 of the Main Board Assembly.
- Connect the Test Oscillator 50 Ohm output to the front panel 50Ω/1MΩ input connector of the counter. Set the counter INPUT switch to 50Ω X1.
- Set the Test Oscillator for a 1 MHz output at a 25 mV level.
- Connect AC power to the counter. Observe WARNING note. Set the counter LINE switch to ON.
- Adjust the oscilloscope sweep time vernier so that one cycle takes up the complete width of the oscilloscope display.
- On the counter, adjust potentiometer A1R32 until the signal on the oscilloscope shows a 50% duty cycle. *Connect scope probe to A1TP1 and adjust A1R72 for a 50% duty cycle. Set as close as possible. 45/55 to 55/45 is acceptable.*
- Remove test equipment, ac power from the counter, and install the top and bottom counter covers per Paragraph 5-16.

## 5-10. Standard Time Base Oscillator Adjustment

5-11. The standard time base oscillator is adjusted with the following test equipment:

HP 5328A Universal Counter with Option 010 (10544A Crystal Oscillator)  
HP 11048C or equivalent 50Ω Feedthru connector  
OR  
HP 5345A Electronic Counter

\* *Note: If symmetric waveform (50% duty cycle) cannot be achieved, \* R33 may require changing. Values between 1.5kΩ and 4.7kΩ are acceptable.*

5-12. Perform the adjustment procedure as follows:

**NOTE**

1. Ensure that the ambient (room) temperature is 25°C.
  2. Allow 1-hour for the 5383A time base oscillator to stabilize before making adjustment.
- a. Set the 5383A INT/EXT switch at the rear panel to the INT position.
  - b. Connect a coaxial cable between the 5383A rear panel oscillator and the test counter front panel input connector (described in Table 5-2).
  - c. Set up the test counter according to the procedures in Table 5-2.
  - d. Adjust the 5383A rear panel OSC ADJ control for the following test counter display:

| <u>TEST COUNTER</u>        | <u>DISPLAY</u> |
|----------------------------|----------------|
| HP 5328A (with Option 010) | 10000.000 kHz  |
| HP 5345A                   | 10.000000 MHz  |

**5-13. Option 001 Time Base Oscillator Adjustment**

5-14. The Option 001 time base oscillator uses the same test equipment called out in Paragraph 5-10.

5-15. Perform the adjustment procedures as follows:

**NOTE**

Ensure that the ambient temperature is 25°C (normal room temperature).

- a. Disconnect power from the 5383A and remove the top and bottom covers per Paragraph 5-16. Observe WARNING note.
- b. Connect ac power to the 5383A and set the LINE switch to ON. Allow at least 5 minutes for the TCXO to stabilize.
- c. Connect a coaxial cable between the 5383A rear panel MONITOR connector and the test counter front panel connector (refer to Table 5-2).
- d. Set up the test counter per Table 5-2.
- e. Observe the 25°C frequency offset that is stamped on the **side** of the 5383A TCXO Assembly (A1U25).
- f. Adjust the TCXO Assembly ADJ control so that the value displayed on the test counter equals 10 MHz plus the 25°C frequency offset. FOR EXAMPLE, if +4 Hz is stamped on the side of the TCXO, set the TCXO ADJ control for the following test counter display:

| <u>TEST COUNTER</u>        | <u>DISPLAY (example)</u> |
|----------------------------|--------------------------|
| HP 5328A (with Option 010) | 10000.004 K Hz           |
| HP 5345A                   | 10.000004 M Hz           |

Table 5-2. Test Counter Set-Up

**HP 5328A UNIVERSAL COUNTER (with Option 010)**

**NOTE**

HP 11048C or equivalent 50 $\Omega$  Feedthru connector is also required.

1. Connect the coaxial cable to INPUT A through the 50 $\Omega$  Feedthru connector (HP 11048C).
2. Set ATTEN switch to "1".
3. Set LEVEL A to PRESET (fully CCW).
4. Set FUNCTION switch to FREQ A.
5. Set FREQ RESOLUTION to 1 Hz ( $10^6$ ).

**HP 5345A ELECTRONIC COUNTER**

1. Connect coaxial cable to front panel CHANNEL A input connector.
2. Set CHANNEL A input impedance to 50 $\Omega$ .
3. Set CHANNEL A ATTEN switch to "X1".
4. Set CHANNEL A "- LEVEL +" control to PRESET (fully CCW).
5. Set FUNCTION switch to FREQ A.
6. Set GATE TIME (outer) control knob to 100 mS.
7. Set /DISPLAY POSITION (inner blue) control knob to AUTO.



### 5-16. INSTRUMENT ACCESS

5-17. Most maintenance operations require that the top and bottom covers be removed from the counter. Remove the covers according to the following procedure:

#### **WARNING**

**DISCONNECT THE AC POWER CORD FROM THE COUNTER PRIOR TO REMOVING THE COVERS. EXPOSED TERMINALS WITHIN THE COUNTER (INCLUDING SEVERAL POINTS ON THE PRINTED CIRCUIT BOARD) HAVE VOLTAGES PRESENT WHICH ARE SUFFICIENT TO CAUSE INJURY OR DEATH.**

- a. Position the instrument upside down and remove the four flat head screws from the bottom of the instrument.
- b. Lift the bottom cover from the instrument, then remove the printed circuit board (with the front and rear panels attached) by pulling the boards straight out of the top cover.
- c. Reassemble in reverse order of disassembly. While mating the top and bottom covers, **MAKE SURE** that:
  1. The standoff spacers (attached to the top cover) are properly inserted into corresponding holes on the Main Board Assembly and the bottom cover.
  2. Wires on the Main Board Assembly are clear of the standoff spacers and the Main Board Assembly holes.
  3. The front and rear panels are properly inserted into the grooves of the top and bottom covers.

#### **CAUTION**

**Failure to comply with 5-17.c., items 1, 2, and 3 may result in damage to the Main Board Assembly.**

- d. Insert and tighten the four flat head screws at the bottom of the counter.

### 5-18. TROUBLESHOOTING

5-19. If the instrument fails Performance Test one on Table 5-1 (i.e., the Display Test) perform the checks listed on the troubleshooting flowchart, Figure 5-1. If the instrument fails Performance Test Two, refer to the troubleshooting flowchart in Figure 5-2.



Figure 5-1  
**DISPLAY FUNCTION TROUBLESHOOTING FLOWCHART**

(See Page 5-9)

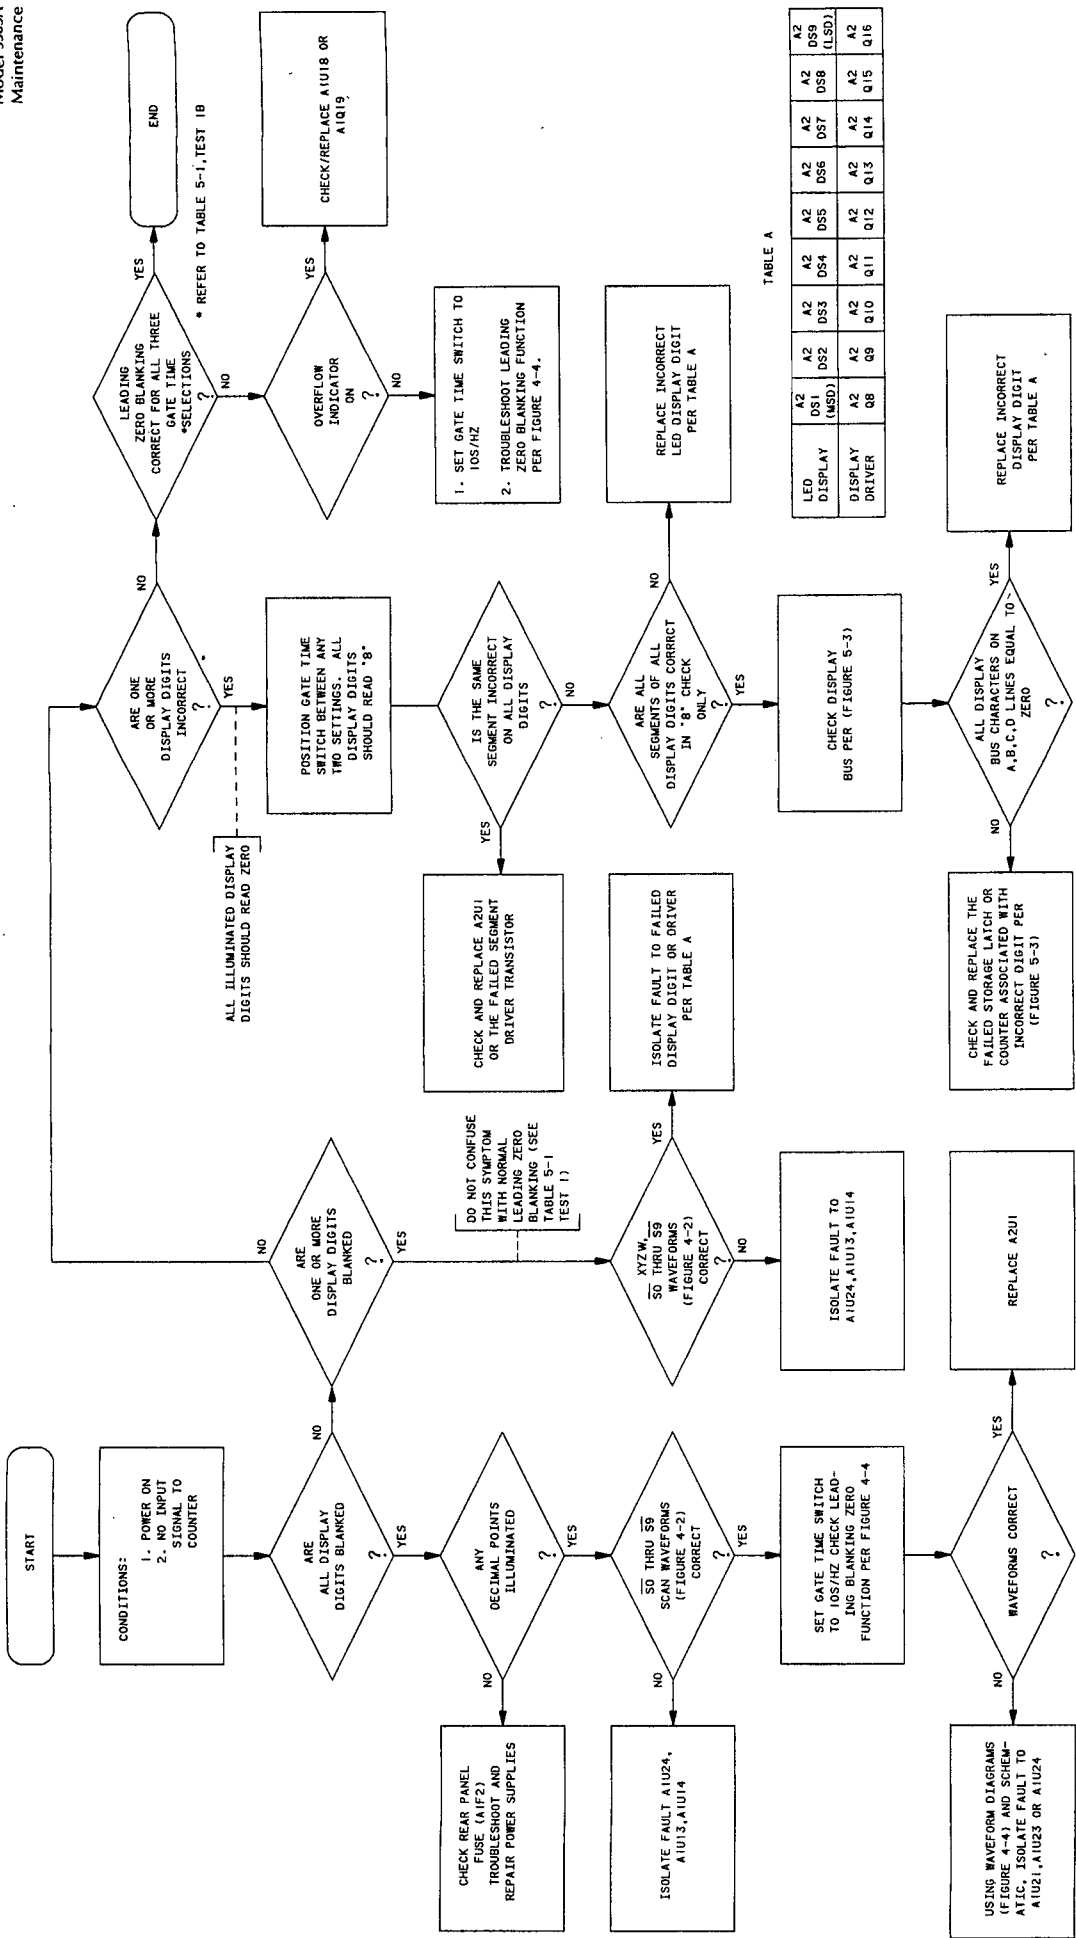


TABLE A

|                |              |         |         |         |         |         |         |              |
|----------------|--------------|---------|---------|---------|---------|---------|---------|--------------|
| LED DISPLAY    | A2 DS1 (MSD) | A2 DS2  | A2 DS3  | A2 DS4  | A2 DS5  | A2 DS6  | A2 DS7  | A2 DS8 (LSD) |
| DISPLAY DRIVER | A2 Q8        | A2 Q9   | A2 Q10  | A2 Q11  | A2 Q12  | A2 Q13  | A2 Q14  | A2 Q15       |
|                | A2 DS9       | A2 DS10 | A2 DS11 | A2 DS12 | A2 DS13 | A2 DS14 | A2 DS15 | A2 DS16      |

Figure 5-1. Display Function Troubleshooting Flowchart

**Figure 5-2**  
**COUNTER FUNCTION TROUBLESHOOTING FLOWCHART**

(See Page 5-11)

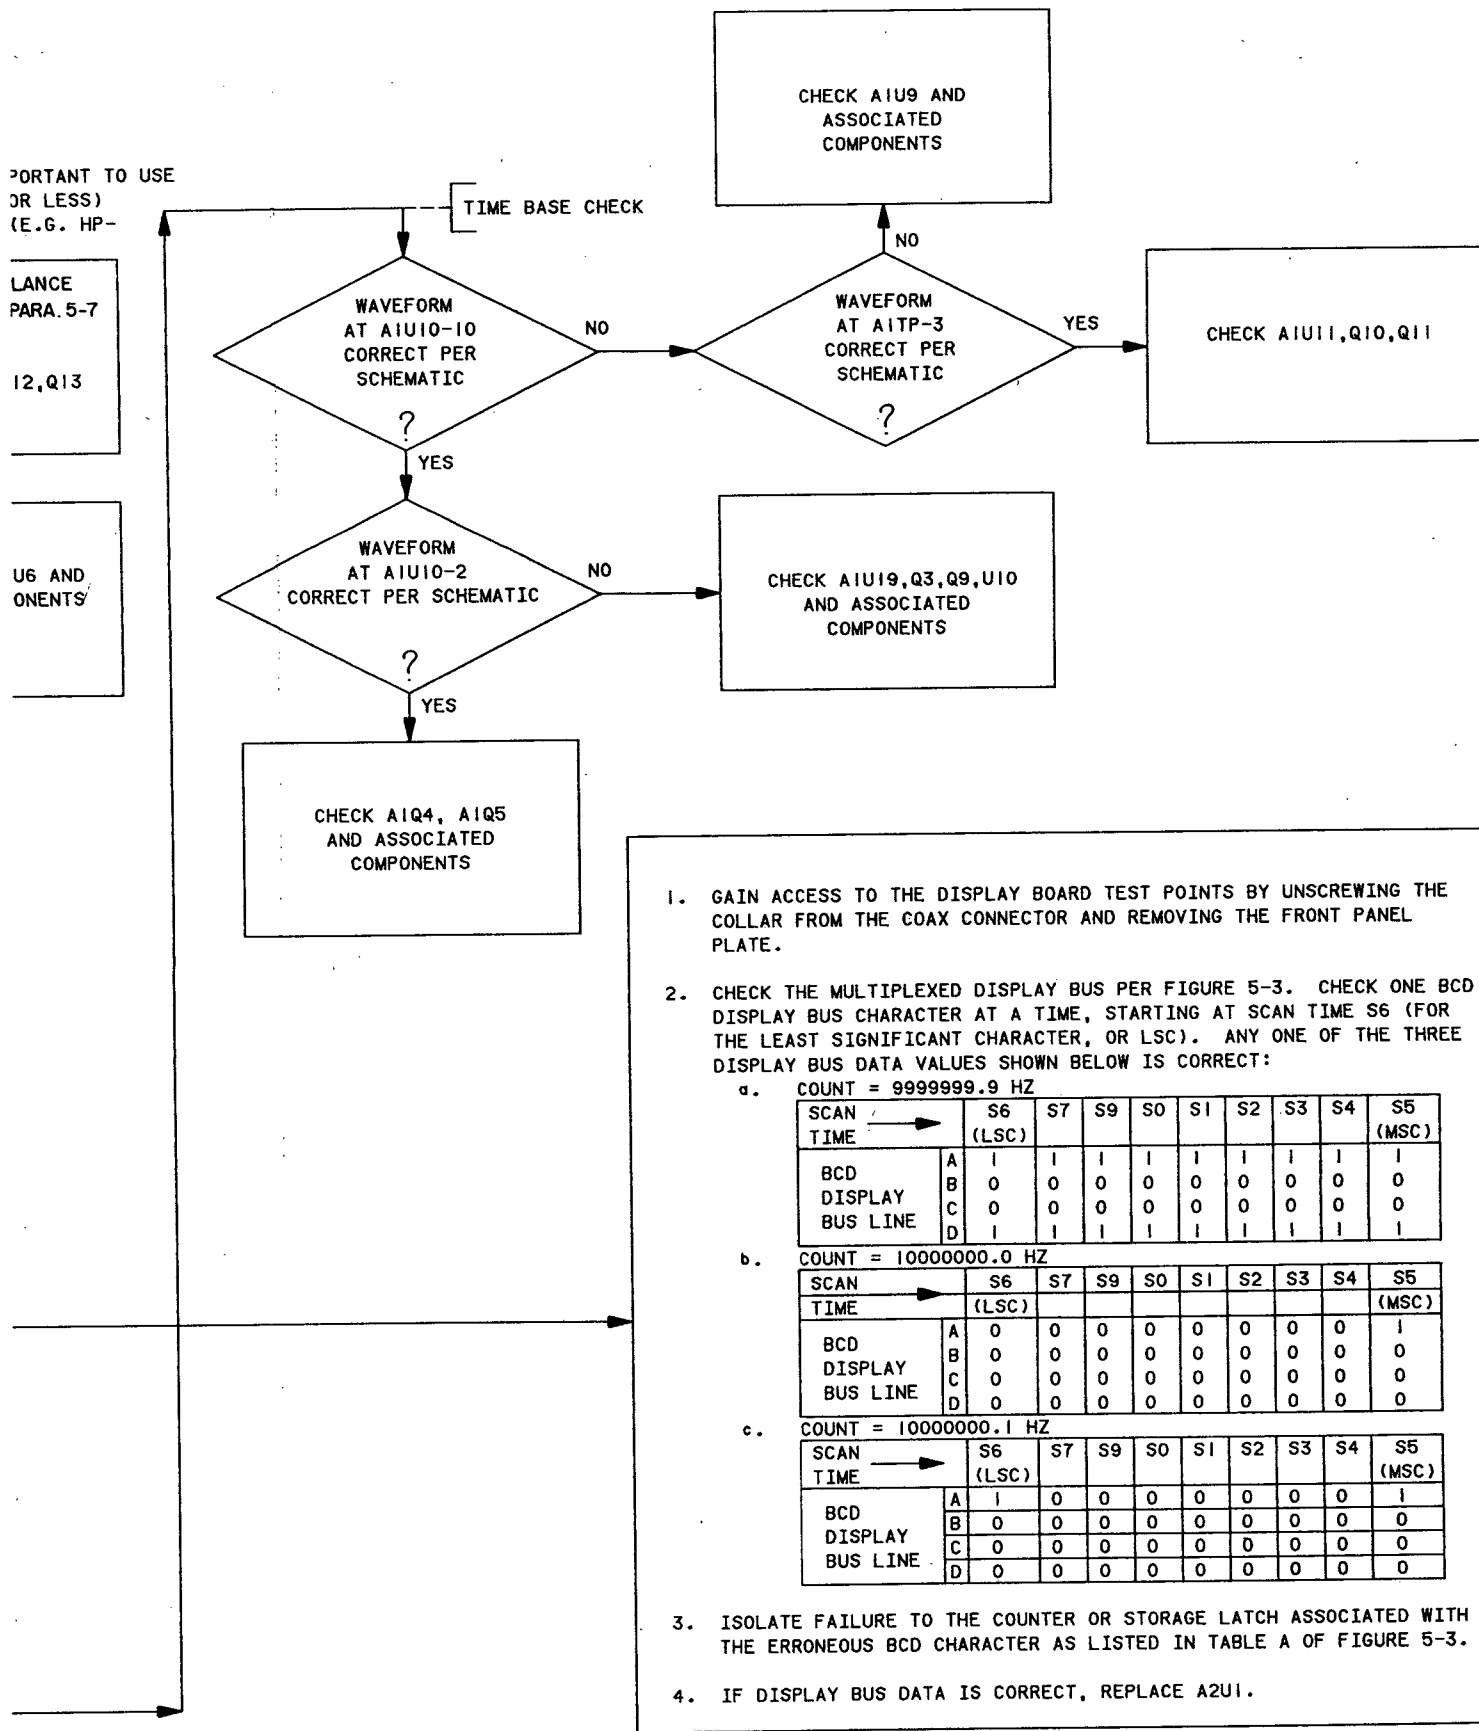



Figure 5-2. Counter Function Troubleshooting Flowchart


TABLE B

| INPUT SW. POSITION | AIU8      |           | TOLERANCE |
|--------------------|-----------|-----------|-----------|
|                    | PIN 7     | PIN 8     |           |
| 500Ω X 1           | -2.0 V DC | -3.4 V DC | ±0.2V     |
| IMAX 1 OR IMAX 10  | -3.4 V DC | -2.0 V DC |           |

\* NOTE:

TO OBTAIN CORRECT WAVEFORM IT IS IMPORTANT TO USE A PROBE WITH A SHORT CABLE (3 FEET OR LESS) AND A GROUND LEAD LESS THAN 1 INCH (E.G. HP-10004 WITH SCANNER TIP).

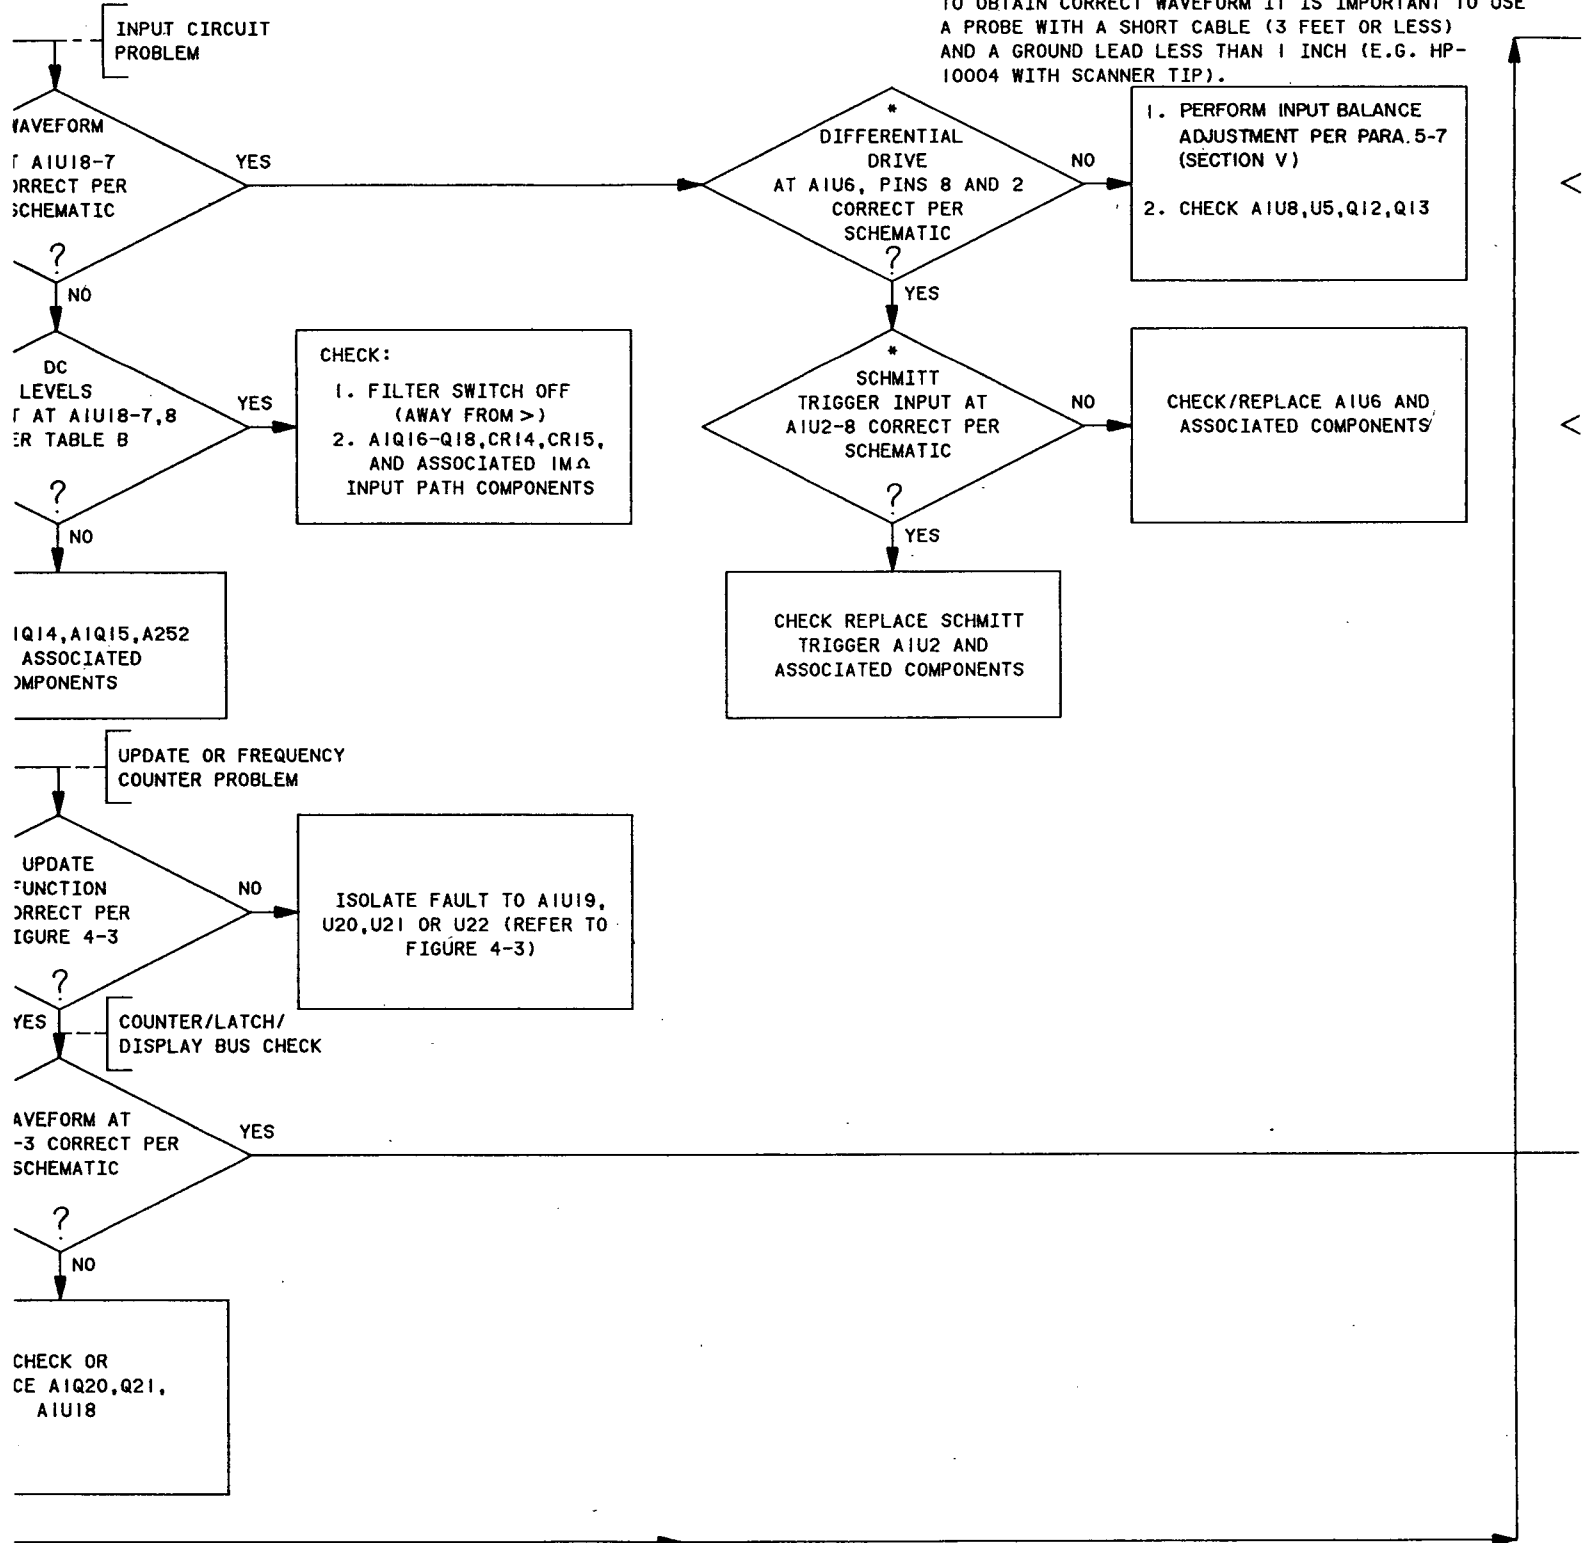


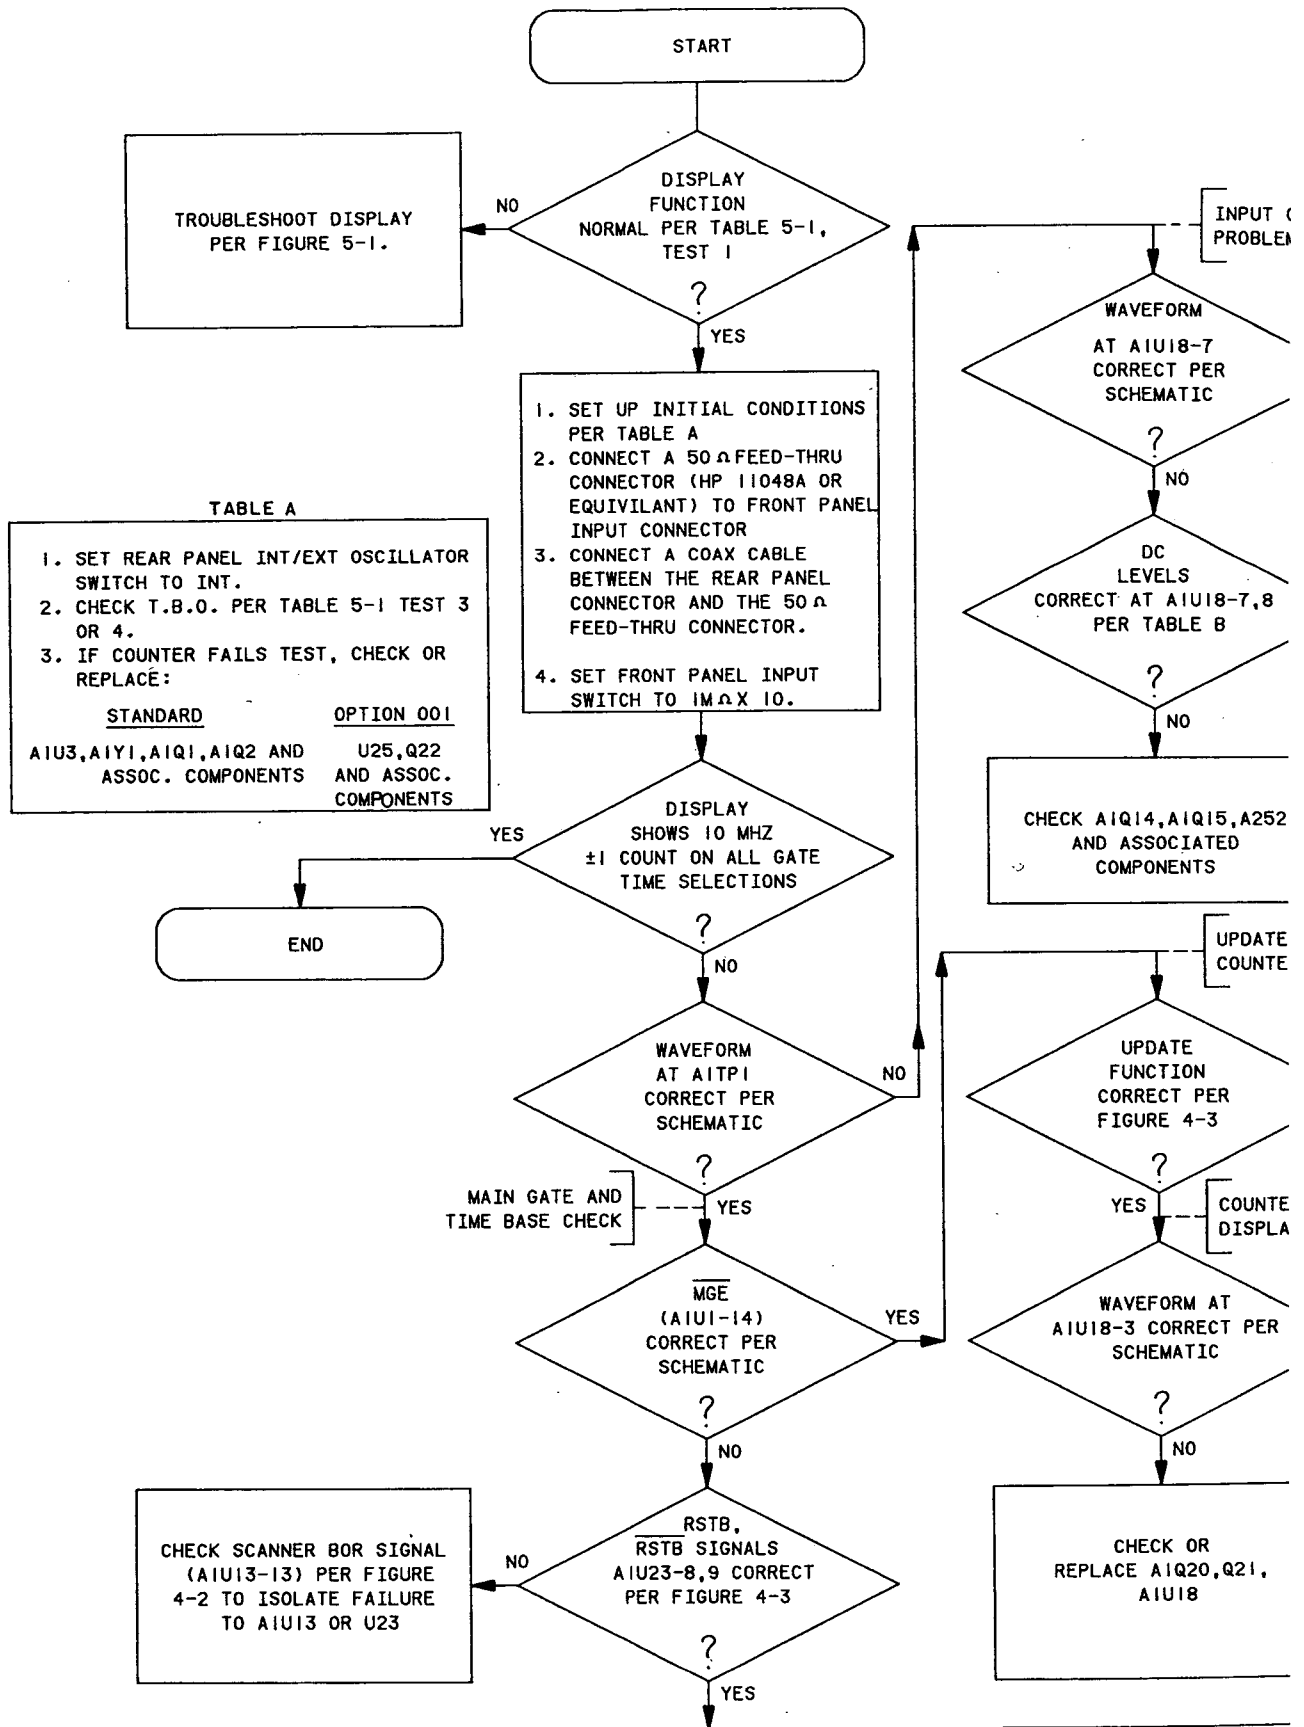

**TABLE A**

1. SET REAR PANEL INT/EXT OSCILLATOR SWITCH TO INT.
2. CHECK T.B.O. PER TABLE 5-1 TEST 3 OR 4.
3. IF COUNTER FAILS TEST, CHECK OR REPLACE:

| STANDARD                                     | OPTION 001                     |
|--|--------------------------------|
| AIU3, AIY1, AIQ1, AIQ2 AND ASSOC. COMPONENTS | U25, Q22 AND ASSOC. COMPONENTS |

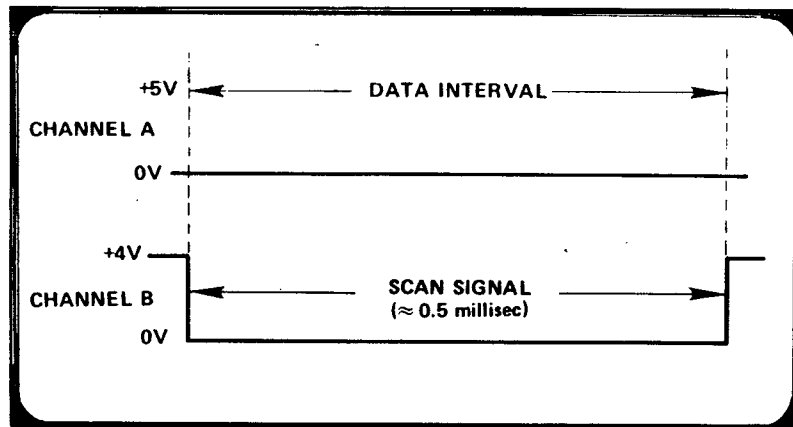

OSCILLOSCOPE DISPLAY

TABLE A

| Active Display Digit                 | A2 DS1 (MSD) | A2 DS2 | A2 DS3 | A2 DS4 | A2 DS5 | A2 DS6 | A2 DS7      | A2 DS8             | A2 DS9 (LSD)      |
|--------------------------------------|--------------|--------|--------|--------|--------|--------|-------------|--------------------|-------------------|
| Scan Signal                          | S5           | S4     | S3     | S2     | S1     | S0     | S9          | S7                 | S6                |
| Counter and Storage Latch Components | A1 U18       | A1 U18 | A1 U18 | A1 U18 | A1 U18 | A1 U18 | A1 U17, U21 | A1 U4, U7 U15, U16 | A1 U1, U4 U7, U12 |

**PROCEDURE**

- a. Remove counter front panel to gain access to display bus A,B,C, and D lines.
- b. Set up oscilloscope to trigger on the negative slope of the B channel input.
- c. Connect scan signal of interest to oscilloscope B channel (see Table A).
- d. Set up oscilloscope sweep time vernier so that the scan signal takes up the full width of the oscilloscope display. This width is the "data interval".
- e. With the oscilloscope channel A probe, check lines A,B,C, and D lines for correct BCD data (weight: A=1, B=2, C=4, D=8). Valid data occurs only during the "data interval" established in step (d). For example if a 5 should be displayed at DS2, then the S4 signal should trigger the oscilloscope and be displayed on channel B. Display Bus lines A,B,C, and D should show respective high, low, high and low TTL levels (BCD 5).

**WARNING**

**DISCONNECT THE AC POWER CORD FROM THE COUNTER PRIOR TO REMOVING THE COVERS. EXPOSED TERMINALS WITHIN THE COUNTER (INCLUDING SEVERAL POINTS ON THE PRINTED CIRCUIT BOARD) HAVE VOLTAGES PRESENT WHICH ARE SUFFICIENT TO CAUSE INJURY OR DEATH.**

Figure 5-3. Multiplexed Display Bus Monitoring



## SECTION VI REPLACEABLE PARTS

### 6-1. INTRODUCTION

6-2. The major replaceable parts of the 5383A Counter are presented in these tables:

- Table 6-1. Main Board Assembly A1 Parts List
- Table 6-2. Display Board Assembly A2 Parts List
- Table 6-3. Miscellaneous Parts List
- Table 6-4. Manufacturers Code List

6-3. In addition, the following notation is provided to indicate whether the part is a factory selected value or is added or removed for the Option 001 TCXO time base oscillator.

| Notation              | Meaning  |
|-----------------------|--|
| Asterisk (*)          | Part has factory selected value or may not be used in a particular instrument. |
| Triangle ( $\Delta$ ) | Part used in standard counter only; removed for Option 001.                    |
| Square ( $\square$ )  | Part added in Option 001 counter only; removed in standard counter.            |

### REFERENCE DESIGNATIONS

|    |  |    |   |    |  |    |                                      |
|----|--|----|---|----|--|----|--------------------------------------|
| A  | = assembly   | E  | = miscellaneous electrical part                   | P  | = electrical connector (movable portion); plug | U  | = integrated circuit; microcircuit   |
| AT | = attenuator; isolator; termination                            | F  | = fuse  | Q  | = transistor; SCR; triode thyristor            | V  | = electron tube                      |
| B  | = fan; motor   | FL | = filter  | R  | = resistor                                     | VR | = voltage regulator; breakdown diode |
| BT | = battery  | H  | = hardware  | RT | = thermistor                                   | W  | = cable; transmission path; wire     |
| C  | = capacitor  | HY | = circulator                                      | S  | = switch                                       | X  | = socket                             |
| CP | = coupler  | J  | = electrical connector (stationary portion); jack | T  | = transformer                                  | Y  | = crystal unit-piezoelectric         |
| CR | = diode; diode thyristor; varactor                             | K  | = relay   | TB | = terminal board                               | Z  | = tuned cavity; tuned circuit        |
| DC | = directional coupler  | L  | = coil; inductor                                  | TC | = thermocouple                                 |    |                                      |
| DL | = delay line   | M  | = meter   | TP | = test point                                   |    |                                      |
| DS | = annunciator; signaling device (audible or visual); lamp; LED | MP | = miscellaneous mechanical part                   |    |  |    |                                      |

### ABBREVIATIONS

|        |                               |       |                             |       |                                  |                  |   |
|--------|-------------------------------|-------|-----------------------------|-------|----------------------------------|------------------|---|
| A      | = ampere                      | avg   | = average                   | CHAN  | = channel                        | dc               | = direct current                              |
| ac     | = alternating current         | AWG   | = American wire gauge       | cm    | = centimeter                     | deg              | = degree (temperature interval or difference) |
| ACCESS | = accessory                   | BAL   | = balance                   | CMO   | = cabinet mount only             | $\dots^\circ$    | = degree (plane angle)                        |
| ADJ    | = adjustment                  | BCD   | = binary coded decimal      | COAX  | = coaxial                        | $^\circ\text{C}$ | = degree Celsius (centigrade)                 |
| A/D    | = analog-to-digital           | BD    | = board                     | COEF  | = coefficient                    | $^\circ\text{F}$ | = degree Fahrenheit                           |
| AF     | = audio frequency             | BE CU | = beryllium copper          | COM   | = common                         | $^\circ\text{K}$ | = degree Kelvin                               |
| AFC    | = automatic frequency control | BFO   | = beat frequency oscillator | COMP  | = composition                    | DEPC             | = deposited carbon                            |
| AGC    | = automatic gain control      | BH    | = binder head               | COMPL | = complete                       | DET              | = detector                                    |
| AL     | = aluminum                    | BKDN  | = breakdown                 | CONN  | = connector                      | diam             | = diameter                                    |
| A/LC   | = automatic level control     | BP    | = bandpass                  | CP    | = cadmium plate                  | DIA              | = diameter (used in parts list)               |
| AM     | = amplitude modulation        | BPF   | = bandpass filter           | CRT   | = cathode-ray tube               | DIFF             | = differential amplifier                      |
| AMPL   | = amplifier                   | BRS   | = brass                     | CTL   | = complementary transistor logic | div              | = division                                    |
| APC    | = automatic phase control     | RWO   | = backward-wave oscillator  | CW    | = continuous wave                | DPDT             | = double-pole, double-throw                   |
| ASSY   | = assembly                    | CAL   | = calibrate                 | cw    | = clockwise                      | DR               | = drive                                       |
| AUX    | = auxiliary                   | ccw   | = counterclockwise          | cm    | = centimeter                     |                  |   |
|        |                               | CER   | = ceramic                   | D/A   | = digital-to-analog              |                  |   |
|        |                               |       |                             | dB    | = decibel                        |                  |   |
|        |                               |       |                             | dBm   | = decibel referred to 1 mW       |                  |   |

### ABBREVIATIONS

|  |   |   |  |
|--|---|---|--|
| DSB = double sideband                                  | MFR = manufacturér  | PJV = peak inverse voltage                  | TFT = thin-film transistor                         |
| DTL = diode transistor logic                           | mg = milligram  | pk = peak                                   | TGL = toggle                                       |
| DVM = digital voltmeter                                | MHz = megahertz   | PL = phase lock                             | THD = thread                                       |
| ECL = emitter coupled logic                            | mH = millihenry   | PLO = phase lock oscillator                 | THRU = through                                     |
| EMF = electromotive force                              | mho = mho   | PM = phase modulation                       | TI = titanium                                      |
| EDP = electronic data processing                       | MIN = minimum   | PNP = positive-negative-positive            | TOI = tolerance                                    |
| ELECT = electrolytic                                   | min = minute (time)   | P/O = part of                               | TRIM = trimmer                                     |
| ENCAP = encapsulated                                   | ... = minute (plane angle)                                  | POLY = polystyrene                          | TSTR = transistor                                  |
| EXT = external   | MINAT = miniature   | PORC = porcelain                            | TTI = transistor-transistor logic                  |
| F = farad  | mm = millimeter   | POS = positive; position(s)                 | TV = television                                    |
| FET = field-effect transistor                          | MOD = modulator   | (used in parts list)                        | TVI = television interference                      |
| F/F = flip-flop  | MOM = momentary   | POSN = position                             | TWT = traveling wave tube                          |
| FH = flat head   | MOS = metal-oxide semiconductor                             | POT = potentiometer                         | U = micro (10 <sup>-6</sup> ) (used in parts list) |
| FIL. H = fillister head                                | ms = millisecond  | p-p = peak-to-peak                          | UF = microfarad (used in parts list)               |
| FM = frequency modulation                              | MTG = mounting  | PP = peak-to-peak (used in parts list)      | UHF = ultrahigh frequency                          |
| FP = front panel                                       | MTR = meter (indicating device)                             | PPM = pulse-position modulation             | UNREG = unregulated                                |
| FREQ = frequency                                       | mV = millivolt  | PREAMPL. = preamplifier                     | V = volt   |
| FXD = fixed  | mVac = millivolt, ac  | PRF = pulse-repetition frequency            | VA = voltampere                                    |
| g = gram   | mVdc = millivolt, dc  | PRR = pulse repetition rate                 | Vac = volts, ac                                    |
| GE = germanium   | mVpk = millivolt, peak                                      | ps = picosecond                             | VAR = variable                                     |
| GHz = gigahertz  | mV p-p = millivolt, peak-to-peak                            | PT = point                                  | VCO = voltage-controlled oscillator                |
| GL = glass   | mVrms = millivolt, rms                                      | PTM = pulse-time modulation                 | Vdc = volts, dc                                    |
| GND) = ground(ed)                                      | mW = milliwatt  | PWM = pulse-width modulation                | VDCW = volts, dc, working (used in parts list)     |
| H = henry  | MUX = multiplex   | PWV = peak working voltage                  | V(F) = volts, filtered                             |
| h = hour   | MY = mylar  | RC = resistance capacitance                 | VFO = variable-frequency oscillator                |
| HET = heterodyne                                       | μA = microampere  | RECT = rectifier                            | VHF = very-high frequency                          |
| HEX = hexagonal  | μF = microfarad   | REF = reference                             | Vpk = volts, peak                                  |
| HD = head  | μH = microhenry   | REG = regulated                             | Vp-p = volts, peak-to-peak                         |
| HIW = hardware   | μmho = micromho   | REPL. = replaceable                         | Vrms = volts, rms                                  |
| HF = high frequency                                    | μs = microsecond  | RF = radio frequency                        | VSWR = voltage standing wave ratio                 |
| HG = mercury   | μV = microvolt  | RFI = radio frequency interference          | VTO = voltage-tuned oscillator                     |
| HI = high  | μVac = microvolt, ac  | RH = round head; right hand                 | VTVM = vacuum-tube voltmeter                       |
| HP = Hewlett-Packard                                   | μVdc = microvolt, dc  | RIC = resistance-inductance-capacitance     | V(X) = volts, switched                             |
| HPF = high pass filter                                 | μVpk = microvolt, peak                                      | RMO = rack mount only                       | W = watt   |
| HR = hour (used in parts list)                         | μVp-p = microvolt, peak-to-peak                             | rms = root-mean-square                      | W/ = with  |
| HV = high voltage                                      | μVrms = microvolt, rms                                      | RND = round                                 | WIV = working inverse voltage                      |
| Hz = Hertz   | nA = nanoampere   | ROM = read-only memory                      | WW = wirewound                                     |
| IC = integrated circuit                                | NC = no connection  | R&P = rack and panel                        | W/O = without                                      |
| ID = inside diameter                                   | N/C = normally closed                                       | RWV = reverse working voltage               | YIG = yttrium-iron-garnet                          |
| IF = intermediate frequency                            | NE = neon   | S = scattering parameter                    | Zo = characteristic impedance                      |
| IMPG = impregnated                                     | NEG = negative  | s = second (time)                           |  |
| in = inch  | nF = nanofarad  | ... = second (plane angle)                  |  |
| INCD = incandescent                                    | NI PL. = nickel plate                                       | S-B = slow-blow (fuse) (used in parts list) |  |
| INCL. = include(s)                                     | N/O = normally open   | SCR = silicon controlled rectifier; screw   |  |
| INP = input  | NOM = nominal   | SE = selenium                               |  |
| INS = insulation                                       | NORM = normal   | SECT = sections                             |  |
| INT = internal   | NPN = negative-positive-negative                            | SEMICON = semiconductor                     |  |
| kg = kilogram  | NPO = negative-positive zero (zero temperature coefficient) | SHF = superhigh frequency                   |  |
| kHz = kilohertz  | NRFR = not recommended for field replacement                | SI = silicon                                |  |
| kΩ = kilohm  | NSR = not separately replaceable                            | SIL = silver                                |  |
| kV = kilovolt  | ns = nanosecond   | SL = slide                                  |  |
| lb = pound   | nW = nanowatt   | SNR = signal-to-noise ratio                 |  |
| LC = inductance-capacitance                            | OBD = order by description                                  | SPDT = single-pole, double-throw            |  |
| LED = light-emitting diode                             | OD = outside diameter                                       | SPG = spring                                |  |
| LF = low frequency                                     | OH = oval head  | SR = split ring                             |  |
| LG = long  | OP AMPL. = operational amplifier                            | SPST = single-pole, single-throw            |  |
| LH = left hand   | OPT = option  | SSB = single sideband                       |  |
| LIM = limit  | OSC = oscillator  | SST = stainless steel                       |  |
| LIN = linear taper (used in parts list)                | OX = oxide  | STL = steel                                 |  |
| lin = linear   | oz = ounce  | SQ = square                                 |  |
| LK = lock washer                                       | Ω = ohm   | SWR = standing-wave ratio                   |  |
| LOW = low; local oscillator                            | P = peak (used in parts list)                               | SYNC = synchronize                          |  |
| LOG = logarithmic taper (used in parts list)           | PAM = pulse-amplitude modulation                            | T = timed (slow-blow fuse)                  |  |
| log = logarithmic                                      | PC = printed circuit  | TA = tantalum                               |  |
| L.P.F. = low pass filter                               | PCM = pulse-code modulation; pulse-count modulation         | TC = temperature compensating               |  |
| L.V. = low voltage                                     | PDM = pulse-duration modulation                             | TD = time delay                             |  |
| m = meter (distance)                                   | pF = picofarad  | TERM = terminal                             |  |
| mA = milliampere                                       | PH BRZ = phosphor bronze                                    |   |  |
| MAX = maximum  | PHI. = Phillips   |   |  |
| MΩ = megohm  | PIN = positive-intrinsic-negative                           |   |  |
| MEG = meg (10 <sup>6</sup> ) (used in parts list)      |   |   |  |
| MET FILM = metal film                                  |   |   |  |
| MET OX = metal oxide                                   |   |   |  |
| MF = medium frequency; microfarad (used in parts list) |   |   |  |

**NOTE**  
All abbreviations in the parts list will be in upper case.

### MULTIPLIERS

| Abbreviation | Prefix | Multiple          |
|--------------|--------|-------------------|
| T            | tera   | 10 <sup>12</sup>  |
| G            | giga   | 10 <sup>9</sup>   |
| M            | mega   | 10 <sup>6</sup>   |
| k            | kilo   | 10 <sup>3</sup>   |
| da           | deka   | 10                |
| d            | deci   | 10 <sup>-1</sup>  |
| c            | centi  | 10 <sup>-2</sup>  |
| m            | milli  | 10 <sup>-3</sup>  |
| μ            | micro  | 10 <sup>-6</sup>  |
| n            | nano   | 10 <sup>-9</sup>  |
| p            | pico   | 10 <sup>-12</sup> |
| f            | femto  | 10 <sup>-15</sup> |
| a            | atto   | 10 <sup>-18</sup> |

Table 6-1. Main Board Assembly A1 Parts List

| Reference Designation                               | HP Part Number   | Qty              | Description  | Mfr Code   | Mfr Part Number   |
|---|--|------------------|--|--|---|
| A1  | 05383-60001<br><i>05383-60009</i>  | 1                | MAIN BOARD ASSEMBLY (STANDARD) SERIES 1620<br><i>Series 2552 (\$1200)</i>  | 28480  | 05383-60001   |
| A1  | 05383-60003<br><i>05383-60010</i>  | 1                | MAIN BOARD ASSEMBLY (OPTION 001) SERIES 1620<br><i>Series 2552 (\$1300)</i>  | 28480  | 05383-60003   |
| A1C1▲<br>A1C2▲                                      | 0121-0059<br>0160-2265   | 1                | CAPACITOR-V TRMR-CER 2/8PF 350V PC-MTG   | 00668  | 304324 2/8PF NPO  |
| A1C3▲<br>A1C4▲                                      | 0160-0161<br>0160-3878   | 1<br>20          | CAPACITOR-FXD 22PF +-5% 500WVDC CER<br>*FACTORY SELECTED PART<br>CAPACITOR-FXD .01UF +-10% 200WVDC POLYE.<br>CAPACITOR-FXD 1000PF +-20% 100WVDC CER  | 28480<br>56289<br>28480                            | 0160-2265<br>892P10392<br>0160-3878   |
| A1C5<br>A1C6▲<br>A1C7▲<br>A1C8<br>A1C9              | 0180-0428<br>0160-2055<br>0160-3878<br>0160-3878<br>0160-3879              | 4<br>4<br>4<br>3 | CAPACITOR-FXD 68UF+-20% 6VDC TA<br>CAPACITOR-FXD .01UF +-80-20% 100WVDC CER<br>CAPACITOR-FXD 1000PF +-20% 100WVDC CER<br>CAPACITOR-FXD 1000PF +-20% 100WVDC CER<br>CAPACITOR-FXD .01UF +-20% 100WVDC CER     | 28480<br>28480<br>28480<br>28480<br>28480          | 0180-0428<br>0160-2055<br>0160-3878<br>0160-3878<br>0160-3879                 |
| A1C10<br>A1C11<br>A1C12<br>A1C13<br>A1C14▲          | 0180-0058<br>0160-2055<br>0180-0480<br>0180-0480<br>0160-2055              | 1<br>2           | CAPACITOR-FXD 50UF+75-10% 25VDC AL<br>CAPACITOR-FXD .01UF +-80-20% 100WVDC CER<br>CAPACITOR-FXD 4500UF+75-10% 25VDC AL<br>CAPACITOR-FXD 4500UF+75-10% 25VDC AL<br>CAPACITOR-FXD .01UF +-80-20% 100WVDC CER   | 56289<br>28480<br>56289<br>56289<br>28480          | 30D5060025CC2<br>0160-2055<br>36DX452G025AA2A<br>36DX452G025AA2A<br>0160-2055 |
| A1C15▲<br>A1C16<br>A1C17<br>A1C18<br>A1C19          | 0160-3879<br>0160-3878<br>0160-3878<br>0180-0428<br>0160-3878              |                  | CAPACITOR-FXD .01UF +-20% 100WVDC CER<br>CAPACITOR-FXD 1000PF +-20% 100WVDC CER<br>CAPACITOR-FXD 1000PF +-20% 100WVDC CER<br>CAPACITOR-FXD 68UF+-20% 6VDC TA<br>CAPACITOR-FXD 1000PF +-20% 100WVDC CER       | 28480<br>28480<br>28480<br>28480<br>28480          | 0160-3879<br>0160-3878<br>0160-3878<br>0180-0428<br>0160-3878                 |
| A1C20<br>A1C21<br>A1C22<br>A1C23<br>A1C24           | 0160-3879<br>0160-3878<br>0180-1701<br>0160-3878<br>0180-1701              | 7                | CAPACITOR-FXD .01UF +-20% 100WVDC CER<br>CAPACITOR-FXD 1000PF +-20% 100WVDC CER<br>CAPACITOR-FXD 6.8UF+-20% 6VDC TA<br>CAPACITOR-FXD 1000PF +-20% 100WVDC CER<br>CAPACITOR-FXD 6.8UF+-20% 6VDC TA            | 28480<br>28480<br>56289<br>28480<br>56289          | 0160-3879<br>0160-3878<br>150D685X0006A2<br>0160-3878<br>150D685X0006A2       |
| A1C25<br>A1C26<br>A1C27<br>A1C28<br>A1C29           | 0180-0428<br>0180-1701<br>0160-3878<br>0160-3878<br>0160-3878              |                  | CAPACITOR-FXD 68UF+-20% 6VDC TA<br>CAPACITOR-FXD 6.8UF+-20% 6VDC TA<br>CAPACITOR-FXD 1000PF +-20% 100WVDC CER<br>CAPACITOR-FXD 1000PF +-20% 100WVDC CER<br>CAPACITOR-FXD 1000PF +-20% 100WVDC CER            | 28480<br>56289<br>28480<br>28480<br>28480          | 0180-0428<br>150D685X0006A2<br>0160-3878<br>0160-3878<br>0160-3878            |
| A1C30<br>A1C31<br>A1C32<br>A1C33<br>A1C34           | 0160-0128<br>0180-1701<br>0160-3878<br>0160-3875<br>0160-3878              | 2<br>1           | CAPACITOR-FXD 2.2UF +-20% 50WVDC CER<br>CAPACITOR-FXD 6.8UF+-20% 6VDC TA<br>CAPACITOR-FXD 1000PF +-20% 100WVDC CER<br>CAPACITOR-FXD 22PF +-5% 200WVDC CER<br>CAPACITOR-FXD 1000PF +-20% 100WVDC CER          | 28480<br>56289<br>28480<br>28480<br>28480          | 0160-0128<br>150D685X0006A2<br>0160-3878<br>0160-3875<br>0160-3878            |
| A1C35<br>A1C36<br>A1C37<br>A1C38<br>A1C39           | 0160-3878<br>0160-3878<br>0160-3878<br>0160-3878<br>0160-0128              |                  | CAPACITOR-FXD 1000PF +-20% 100WVDC CER<br>CAPACITOR-FXD 1000PF +-20% 100WVDC CER<br>CAPACITOR-FXD 1000PF +-20% 100WVDC CER<br>CAPACITOR-FXD 1000PF +-20% 100WVDC CER<br>CAPACITOR-FXD 2.2UF +-20% 50WVDC CER | 28480<br>28480<br>28480<br>28480<br>28480          | 0160-3878<br>0160-3878<br>0160-3878<br>0160-3878<br>0160-0128                 |
| A1C40<br>A1C41<br>A1C42<br>A1C43<br>A1C44           | 0160-3454<br>0160-3878<br>0160-0182<br>0160-3454<br>0160-0428              | 2<br>1           | CAPACITOR-FXD 220PF +-10% 1000WVDC CER<br>CAPACITOR-FXD 1000PF +-20% 100WVDC CER<br>CAPACITOR-FXD 47PF +-5% 300WVDC MICA<br>CAPACITOR-FXD 220PF +-10% 1000WVDC CER<br>CAPACITOR-FXD 68UF+-20% 6VDC TA        | 28480<br>28480<br>28480<br>28480<br>28480          | 0160-3454<br>0160-3878<br>0160-0182<br>0160-3454<br>0180-0428                 |
| A1C45<br>A1C46<br>A1C47<br>A1C48<br>A1C49           | 0160-3878<br>0180-1701<br>0160-3878<br>0180-1701<br>0180-1701              |                  | CAPACITOR-FXD 1000PF +-20% 100WVDC CER<br>CAPACITOR-FXD 6.8UF+-20% 6VDC TA<br>CAPACITOR-FXD 1000PF +-20% 100WVDC CER<br>CAPACITOR-FXD 6.8UF+-20% 6VDC TA<br>CAPACITOR-FXD 6.8UF+-20% 6VDC TA                 | 28480<br>56289<br>28480<br>56289<br>56289          | 0160-3878<br>150D685X0006A2<br>0160-3878<br>150D685X0006A2<br>150D685X0006A2  |
| A1C50 = A   | 0160-2055  |                  | CAPACITOR-FXD .01UF +-80-20% 100WVDC CER   | 28480  | 0160-2055   |
| A1CR1▲<br>A1CR2▲<br>A1CR3<br>A1CR4                  | 1901-0040<br>1901-0040<br>1901-0028<br>1906-0028                           | 7<br>1<br>1      | DIODE-SWITCHING 30V 50MA 2NS DO-35<br>DIODE-SWITCHING 30V 50MA 2NS DO-35<br>DIODE-PWR RECT 400V 750MA DO-29<br>DIODE-PW BRDG 100V 1.8A   | 28480<br>28480<br>28480<br>04713                   | 1901-0040<br>1901-0040<br>1901-0028<br>MDA922-J                               |
| A1CR5<br>A1CR6<br>A1CR7<br>A1CR8<br>A1CR9<br>A1CR10 | 1902-0040<br>1901-0040<br>1901-0040<br>1901-0535<br>1901-0535<br>1901-0535 | 1<br>4           | DIODE-ZNR 14V 5% DO-7 PD=.4W TC=+.056K<br>DIODE-SWITCHING 30V 50MA 2NS DO-35<br>DIODE-SWITCHING 30V 50MA 2NS DO-35<br>DIODE-SCHOTTKY<br>DIODE-SCHOTTKY<br>DIODE-SCHOTTKY                                     | 07263<br>28480<br>28480<br>28480<br>28480<br>28480 | FZ 1201<br>1901-0040<br>1901-0040<br>1901-0535<br>1901-0535<br>1901-0535      |
| A1CR11<br>A1CR12<br>A1CR13<br>A1CR14<br>A1CR15      | 1901-0535<br>1901-0050<br>1901-0050<br>1901-0040<br>1901-0040              | 2                | DIODE-SCHOTTKY<br>DIODE-SWITCHING 80V 200MA 2NS DO-7<br>DIODE-SWITCHING 80V 200MA 2NS DO-7<br>DIODE-SWITCHING 30V 50MA 2NS DO-35<br>DIODE-SWITCHING 30V 50MA 2NS DO-35                                       | 28480<br>28480<br>28480<br>28480                   | 1901-0535<br>1901-0050<br>1901-0050<br>1901-0040<br>1901-0040                 |
| A1CR16 = A  | 1901-0040  |                  | DIODE-SWITCHING 30V 50MA 2NS DO-35   | 28480  | 1901-0040   |

▲ Removed for Option 001  
▲ Added for Option 001

See introduction to this section for ordering information

Table 6-1. Main Board Assembly A1 Parts List Cont'd

| Reference Designation | HP Part Number | Qty | Description  | Mfr Code | Mfr Part Number  |
|-----------------------|----------------|-----|--|----------|------------------|
| A1F1                  | 2110-0436      | 2   | FUSE .1A 125V FA9T-BLO .348X.25 UL   | 28480    | 2110-0436        |
| A1F2                  | 2110-0436      |     | FUSE .1A 125V FA9T-BLO .348X.25 UL (SPARE)                                     | 28480    | 2110-0436        |
| A1L1                  | 9140-0210      | 1   | COIL-MLD 100UH 5X G=50 .155DX.375LG  | 24226    | 19/103           |
| A1L2                  | 9100-1788      | 3   | COIL; FXD; NON-MOLDED RF CHOKE; .75UH  | 02114    | VK200-20/4B      |
| A1L3                  | 9100-1788      |     | COIL; FXD; NON-MOLDED RF CHOKE; .75UH  | 02114    | VK200-20/4B      |
| A1L4                  | 9100-1788      |     | COIL; FXD; NON-MOLDED RF CHOKE; .75UH  | 02114    | VK200-20/4B      |
| A1L5                  | 9100-2269      | 2   | COIL-MLD 27UH 10X G=45 .095DX.25LG   | 24226    | 10/272           |
| A1L6                  | 9100-2269      |     | COIL-MLD 27UH 10X G=45 .095DX.25LG   | 24226    | 10/272           |
| A1L7                  | 9170-0029      | 1   | CORE-SHIELDING BEAD  | 02114    | 56-590-65A2/4A   |
| A1Q1A                 | 1853-0015      | 4   | TRANSISTOR PNP SI PD=200MW FT=500MHZ   | 28480    | 1853-0015        |
| A1Q2A                 | 1853-0015      |     | TRANSISTOR PNP SI PD=200MW FT=500MHZ   | 28480    | 1853-0015        |
| A1Q3                  | 1853-0015      |     | TRANSISTOR PNP SI PD=200MW FT=500MHZ   | 28480    | 1853-0015        |
| A1Q4                  | 1854-0092      | 4   | TRANSISTOR NPN SI PD=200MW FT=600MHZ   | 28480    | 1854-0092        |
| A1Q5                  | 1854-0092      |     | TRANSISTOR NPN SI PD=200MW FT=600MHZ   | 28480    | 1854-0092        |
| A1Q6                  | 1854-0215      | 3   | TRANSISTOR NPN SI PD=350MW FT=300MHZ   | 04713    | SP8 3611         |
| A1Q7                  | 1854-0215      |     | TRANSISTOR NPN SI PD=350MW FT=300MHZ   | 04713    | SP8 3611         |
| A1Q8                  | 1853-0036      | 3   | TRANSISTOR PNP SI PD=310MW FT=250MHZ   | 28480    | 1853-0036        |
| A1Q9                  | 1853-0036      |     | TRANSISTOR PNP SI PD=310MW FT=250MHZ   | 28480    | 1853-0036        |
| A1Q10                 | 1854-0092      |     | TRANSISTOR NPN SI PD=200MW FT=600MHZ   | 28480    | 1854-0092        |
| A1Q11                 | 1854-0092      |     | TRANSISTOR NPN SI PD=200MW FT=600MHZ   | 28480    | 1854-0092        |
| A1Q12                 | 1854-0546      | 2   | TRANSISTOR NPN SI TO=72 PD=200MW   | 28480    | 1854-0546        |
| A1Q13                 | 1854-0546      |     | TRANSISTOR NPN SI TO=72 PD=200MW   | 28480    | 1854-0546        |
| A1Q14                 | 1854-0071      | 4   | TRANSISTOR NPN SI PD=300MW FT=200MHZ   | 28480    | 1854-0071        |
| A1Q15                 | 1854-0071      |     | TRANSISTOR NPN SI PD=300MW FT=200MHZ   | 28480    | 1854-0071        |
| A1Q16                 | 1854-0215      |     | TRANSISTOR NPN SI PD=350MW FT=300MHZ   | 04713    | SP8 3611         |
| A1Q17                 | 1853-0081      | 2   | TRANSISTOR J-FET 2N5245 N-CHAN D-MODE SI                                       | 01295    | 2N5245           |
| A1Q18                 | 1853-0081      |     | TRANSISTOR J-FET 2N5245 N-CHAN D-MODE SI                                       | 01295    | 2N5245           |
| A1Q19                 | 1854-0071      |     | TRANSISTOR NPN SI PD=300MW FT=200MHZ   | 28480    | 1854-0071        |
| A1Q20                 | 1853-0036      |     | TRANSISTOR PNP SI PD=310MW FT=250MHZ   | 28480    | 1853-0036        |
| A1Q21                 | 1854-0071      |     | TRANSISTOR NPN SI PD=300MW FT=200MHZ   | 28480    | 1854-0071        |
| A1Q22                 | 1853-0015      |     | TRANSISTOR PNP SI PD=200MW FT=500MHZ   | 28480    | 1853-0015        |
| A1R1A                 | 0757-0893      | 1   | RESISTOR 51 2X .125W F TC=0/+100   | 24546    | C4=1/8-T0-51R0-8 |
| A1R2A                 | 0683-2025      | 3   | RESISTOR 2K 5X .25W FC TC=400/+700   | 01121    | C82025           |
| A1R3A                 | 0683-2025      |     | RESISTOR 2K 5X .25W FC TC=400/+700   | 01121    | C82025           |
| A1R4A                 | 0683-2025      |     | RESISTOR 2K 5X .25W FC TC=400/+700   | 01121    | C82025           |
| A1R5A                 | 0683-2715      | 2   | RESISTOR 270 5X .25W FC TC=400/+600  | 01121    | C82715           |
| A1R6A                 | 0683-2015      | 3   | RESISTOR 200 5X .25W FC TC=400/+600  | 01121    | C82015           |
| A1R7                  | 0683-4315      | 1   | RESISTOR 430 5X .25W FC TC=400/+600  | 01121    | C84315           |
| A1R8A                 | 1810-0020      | 1   | NETWORK-RES 8-PIN-SIP .125-PIN-SPCG  | 11236    | 750              |
| A1R9A                 | 0683-2715      |     | RESISTOR 270 5X .25W FC TC=400/+600  | 01121    | C82715           |
| A1R10A                | 0683-5115      | 3   | RESISTOR 510 5X .25W FC TC=400/+600  | 01121    | C85115           |
| A1R11A                | 0683-5605      | 2   | RESISTOR 56 5X .25W FC TC=400/+500   | 01121    | C85605           |
| A1R12                 | 1810-0030      | 1   | NETWORK-RES 8-PIN-SIP .125-PIN-SPCG  | 11236    | 750              |
| A1R13                 | 0683-1515      | 2   | RESISTOR 150 5X .25W FC TC=400/+600  | 01121    | C81515           |
| A1R14                 | 0683-2015      |     | RESISTOR 200 5X .25W FC TC=400/+600  | 01121    | C82015           |
| A1R15                 | 0683-1025      | 5   | RESISTOR 1K 5X .25W FC TC=400/+600   | 01121    | C81025           |
| A1R16                 | 0683-5115      |     | RESISTOR 510 5X .25W FC TC=400/+600  | 01121    | C85115           |
| A1R17                 | 0683-1025      |     | RESISTOR 1K 5X .25W FC TC=400/+600   | 01121    | C81025           |
| A1R18                 | 0683-1825      | 1   | RESISTOR 1.8K 5X .25W FC TC=400/+700   | 01121    | C81825           |
| A1R19                 | 0683-1025      |     | RESISTOR 1K 5X .25W FC TC=400/+600   | 01121    | C81025           |
| A1R20                 | 0683-1025      |     | RESISTOR 1K 5X .25W FC TC=400/+600   | 01121    | C81025           |
| A1R21                 | 0698-4123      | 2   | RESISTOR 499 1X .125W F TC=0/+100  | 24546    | C4=1/8-T0-499R-F |
| A1R22                 | 0698-5176      | 8   | RESISTOR 510 5X .125W CC TC=330/+800   | 01121    | B85115           |
| A1R23                 | 0698-5176      |     | RESISTOR 510 5X .125W CC TC=330/+800   | 01121    | B85115           |
| A1R24                 | 0698-5176      |     | RESISTOR 510 5X .125W CC TC=330/+800   | 01121    | B85115           |
| A1R25                 | 0698-6244      | 2   | RESISTOR 3.3K 5X .125W CC TC=350/+857  | 01121    | B83325           |
| A1R26                 | 0698-5174      | 3   | RESISTOR 200 5X .125W CC TC=330/+800   | 01121    | B82015           |
| A1R27                 | 0683-1035      | 1   | RESISTOR 10K 5X .25W FC TC=400/+700  | 01121    | C81035           |
| A1R28                 | 0683-3325      | 1   | RESISTOR 3.3K 5X .25W FC TC=400/+700   | 01121    | C83325           |
| A1R29                 | 0683-3025      | 1   | RESISTOR 3K 5X .25W FC TC=400/+700   | 01121    | C83025           |
| A1R30                 | 0698-5180      | 1   | RESISTOR 2K 5X .125W CC TC=350/+857<br>*SELECTED VALUE; NOT IN ALL INSTRUMENTS | 01121    | B82025           |
| A1R31                 | 0698-6294      | 3   | RESISTOR 47K 5X .125W CC TC=466/+875   | 01121    | B84735           |
| A1R32                 | 2100-1986      | 1   | RESISTOR-TMR 1K 10X C TOP=ADJ 1-TRN  | 73138    | 62-206-1         |
| A1R33                 | 0698-6244      |     | RESISTOR 3.3K 5X .125W CC TC=350/+857  | 01121    | B83325           |
| A1R34                 | 0698-6294      |     | RESISTOR 47K 5X .125W CC TC=466/+875   | 01121    | B84735           |
| A1R35                 | 0698-5174      |     | RESISTOR 200 5X .125W CC TC=330/+800   | 01121    | B82015           |
| A1R36                 | 0698-5179      | 1   | RESISTOR 1.8K 5X .125W CC TC=350/+857  | 01121    | B81825           |
| A1R37                 | 0698-5174      |     | RESISTOR 200 5X .125W CC TC=330/+800   | 01121    | B82015           |
| A1R38                 | 0698-4123      |     | RESISTOR 499 1X .125W F TC=0/+100  | 24546    | C4=1/8-T0-499R-F |
| A1R39                 | 0698-3374      | 1   | RESISTOR 20 5X .125W CC TC=270/+540  | 01121    | B82005           |
| A1R40                 | 0698-6242      | 4   | RESISTOR 1.2K 5X .125W CC TC=350/+857  | 01121    | B81225           |

▲ Removed for Option 001  
● Added for Option 001

See introduction to this section for ordering information

Table 6-1. Main Board Assembly A1 Parts List Cont'd

| Reference Designation | HP Part Number       | Qty | Description                             | Mfr Code | Mfr Part Number |
|-----------------------|----------------------|-----|---|----------|-----------------|
| A1R41                 | 0698-7080            | 2   | RESISTOR 27 5% .125W CC TC=-270/+540    | 01121    | 882705          |
| A1R42                 | <del>0698-3174</del> | 2   | RESISTOR 51 5% .125W CC TC=-270/+540    | 01121    | 885105          |
| A1R43                 | <del>0698-3174</del> |     | RESISTOR 51 5% .125W CC TC=-270/+540    | 01121    | 885105          |
| A1R44                 | 0698-7080            |     | RESISTOR 27 5% .125W CC TC=-270/+540    | 01121    | 882705          |
| A1R45                 | 0698-8354            | 1   | RESISTOR 270 5% .125W CC TC=-330/+800   | 01121    | 882715          |
| A1R46                 | 0698-6241            | 1   | RESISTOR 750 5% .125W CC TC=-330/+800   | 01121    | 887515          |
| A1R47                 | 0698-5176            |     | RESISTOR 510 5% .125W CC TC=-330/+800   | 01121    | 885115          |
| A1R48                 | 0698-7102            | 1   | RESISTOR 5.1K 5% .125W CC TC=-350/+857  | 01121    | 885125          |
| A1R49                 | 1810-0055            | 2   | NETWORK-RES 9-PIN-81P .15-PIN-8PCG      | 28480    | 1810-0055       |
| A1R50                 | 0683-2015            |     | RESISTOR 200 5% .25W FC TC=-400/+600    | 01121    | 882015          |
| A1R51                 | 0698-6242            |     | RESISTOR 1.2K 5% .125W CC TC=-350/+857  | 01121    | 881225          |
| A1R52                 | 0698-5177            | 1   | RESISTOR 820 5% .125W CC TC=-330/+800   | 01121    | 888215          |
| A1R53                 | 0698-6294            |     | RESISTOR 47K 5% .125W CC TC=-466/+875   | 01121    | 884735          |
| A1R54                 | 0698-5183            | 2   | RESISTOR 4.3K 5% .125W CC TC=0/+882     | 01121    | 884325          |
| A1R55                 | 0698-5426            | 1   | RESISTOR 10K 10% .125W CC TC=-350/+857  | 01121    | 881031          |
| A1R56                 | 0683-2745            | 1   | RESISTOR 270K 5% .25W FC TC=-800/+900   | 01121    | 882745          |
| A1R57                 | 0698-5176            |     | RESISTOR 510 5% .125W CC TC=-330/+800   | 01121    | 885115          |
| A1R58                 | 0698-5176            |     | RESISTOR 510 5% .125W CC TC=-330/+800   | 01121    | 885115          |
| A1R59                 | 0698-6283            | 1   | RESISTOR 10 5% .125W CC TC=-120/+400    | 01121    | 881005          |
| A1R60                 | 0698-6242            |     | RESISTOR 1.2K 5% .125W CC TC=-350/+857  | 01121    | 881225          |
| A1R61                 | 0698-5176            |     | RESISTOR 510 5% .125W CC TC=-330/+800   | 01121    | 885115          |
| A1R62                 | 0675-1021            | 2   | RESISTOR 1K 10% .125W CC TC=-330/+800   | 01121    | 881021          |
| A1R63                 | 0698-5176            |     | RESISTOR 510 5% .125W CC TC=-330/+800   | 01121    | 885115          |
| A1R64                 | 0675-1021            |     | RESISTOR 1K 10% .125W CC TC=-330/+800   | 01121    | 881021          |
| A1R65                 | 0683-5605            |     | RESISTOR 56 5% .25W FC TC=-400/+500     | 01121    | 885605          |
| A1R66                 | 0698-6242            |     | RESISTOR 1.2K 5% .125W CC TC=-350/+857  | 01121    | 881225          |
| A1R67                 | 0698-5183            |     | RESISTOR 4.3K 5% .125W CC TC=0/+882     | 01121    | 884325          |
| A1R68                 | 1810-0055            |     | NETWORK-RES 9-PIN-81P .15-PIN-8PCG      | 28480    | 1810-0055       |
| A1R69                 | 0683-1515            |     | RESISTOR 150 5% .25W FC TC=-400/+600    | 01121    | 881515          |
| A1R70                 | 0683-1025            |     | RESISTOR 1K 5% .25W FC TC=-400/+600     | 01121    | 881025          |
| A1R71                 | 0683-5115            |     | RESISTOR 510 5% .25W FC TC=-400/+600    | 01121    | 885115          |
| A181                  | 3101-1618            | 1   | SWITCH=8L DPDT-NS SUBMIN .9A 125VAC/DC  | 28480    | 3101-1618       |
| A182                  | 3101-1341            | 1   | SWITCH=8L 8PDT-NS SUBMIN .5A 125VAC/DC  | 95146    | 3101-1341       |
| A183                  | 3101-0680            | 1   | SWITCH=PB DPDT ALTN 4A 250VAC           | 28480    | 3101-0680       |
| A1U1                  | 1820-0736            | 1   | IC-DIGITAL ECL DUAL 8IN                 | 28480    | 1820-0736       |
| A1U2                  | 1820-0982            | 1   | IC 5084-0164 DIFF AMPL                  | 28480    | 1820-0982       |
| A1U3                  | 1820-1224            | 1   | IC-DIGITAL MC10216P ECL TPL 2 LINE RCVR | 04713    | MC10216P        |
| A1U4                  | 1820-0736            | 1   | IC-DIGITAL ECL 8I-GUINARY               | 28480    | 1820-1019       |
| A1U5                  | 1826-0139            | 1   | IC MC 1458 OP AMP                       | 04713    | MC1458P1        |
| A1U6                  | 1820-0982            |     | IC 5084-0164 DIFF AMPL                  | 28480    | 1820-0982       |
| A1U7                  | 1820-1025            | 1   | IC-DIGITAL MC10125L ECL/TTL QUAD 2      | 04713    | MC10125L        |
| A1U8                  | 1820-0982            |     | IC 5084-0164 DIFF AMPL                  | 28480    | 1820-0982       |
| A1U9                  | 1820-1251            | 1   | IC-DIGITAL SN74LS196N TTL L8 DECD       | 01295    | SN74LS196N      |
| A1U10                 | 1820-0817            | 1   | IC-DIGITAL MC10131P ECL DUAL D=M/8      | 04713    | MC10131P        |
| A1U11                 | 1820-0633            | 1   | IC-DIGITAL                              | 28480    | 1820-0633       |
| A1U12                 | 1820-1166            | 2   | IC-DIGITAL DM85LS1N TTL L QUAD          | 27014    | DM85LS1N        |
| A1U13                 | 1820-0911            | 1   | IC-DIGITAL SN74LS192N TTL L DECD        | 01295    | SN74LS192N      |
| A1U14                 | 1820-0491            | 1   | IC-DIGITAL SN74LS145N TTL 4 BCD-TO-DEC  | 01295    | SN74LS145N      |
| A1U15                 | 1820-1166            | 1   | IC-DIGITAL N62390A TTL 8 DECD           | 18324    | N62390A         |
| A1U16                 | 1820-1166            |     | IC-DIGITAL DM85LS1N TTL L QUAD          | 27014    | DM85LS1N        |
| A1U17                 | 1820-1143            | 1   | IC-DIGITAL DM8552N TTL DECD SYNCHRO     | 27014    | DM8552N         |
| A1U18                 | 1820-0634            | 1   | IC-DIGITAL MOS DECD                     | 28480    | 1820-0634       |
| A1U19                 | 1820-0174            | 1   | IC-DIGITAL SN7404N TTL HEX 1            | 01295    | SN7404N         |
| A1U20                 | 1820-0054            | 1   | IC-DIGITAL SN7400N TTL QUAD 2 NAND      | 01295    | SN7400N         |
| A1U21                 | 1820-0661            | 1   | IC-DIGITAL SN7432N TTL QUAD 2 OR        | 01295    | SN7432N         |
| A1U22                 | 1820-0328            | 1   | IC-DIGITAL SN7402N TTL QUAD 2 NOR       | 01295    | SN7402N         |
| A1U23                 | 1820-0077            | 1   | IC-DIGITAL SN7474N TTL DUAL D-TYPE      | 01295    | SN7474N         |
| A1U24                 | 1820-0537            | 1   | IC-DIGITAL SN7413N TTL DUAL 4 NAND      | 01295    | SN7413N         |
| A1U25                 | 0960-0394            | 1   | TCXO CRYSTAL OSCILLATOR                 | 28480    | 0960-0394       |
| A1XP1                 | 1251-3205            | 4   | CONNECTOR=8GL CONT SKT .022-DIA         | 28480    | 1251-3205       |
| A1XP2                 | 1251-3205            |     | CONNECTOR=8GL CONT SKT .022-DIA         | 28480    | 1251-3205       |
| A1Y1A                 | 0410-0405            | 1   | CRYSTAL=QUARTZ 10 MHZ A1 MISCELLANEOUS  | 28480    | 0410-0405       |
|                       | 0560-0393            | 1   | TERMINAL=LUG=8LDR 6 SCR .144/.144 ID    | 79963    | 176             |

●  
 ●  
 ●  
 R  
 } A  
 R  
 New part #  
 10C9-  
 0001  
 as  
 of  
 3/11/85  
 A  
 1869

1820-2642  
 see Serw Note  
 5383A-2  
 2642  
 NLA  
 used on  
 8340B

\* Removed for Option 001  
 \* Added for Option 001

See introduction to this section for ordering information

Table 6-2. Display Board Assembly A2 Parts List

| Reference Designation | HP Part Number            | Qty | Description                             | Mfr Code | Mfr Part Number    |
|-----------------------|---------------------------|-----|---|----------|--------------------|
| A2                    | 05383-60002               | 1   | DISPLAY BOARD ASSEMBLY                  | 28480    | 05383-60002        |
| A2C1                  | 0180-0106                 | 1   | CAPACITOR-FXD 60UF+-20% 6VDC TA         | 56289    | 150D606X000682     |
| A2C2                  | 0160-4182                 | 1   | CAPACITOR-FXD .01UF +-20% 200WVDC CER   | 6F364    | 200-200-X7R-103M   |
| A2C3                  | 0140-0209                 | 1   | CAPACITOR-FXD 5PF +-10% 500WVDC MICA    | 72136    | DM15C050K0500WVICR |
| A2CR1                 | 1901-0040                 | 1   | DIODE-SWITCHING 30V 50MA 2N8 DO-35      | 28480    | 1901-0040          |
| A2D91                 | 1990-0469                 | 9   | DISPLAY NUM SEG 1 CHAR ,3 IN HIGH       | 28480    | 1990-0469          |
| A2D92                 | OR                        |     | DISPLAY NUM SEG 1 CHAR ,3 IN HIGH       | 28480    | 1990-0469          |
| A2D93                 | 1990-0470                 |     | DISPLAY NUM SEG 1 CHAR ,3 IN HIGH       | 28480    | 1990-0469          |
| A2D94                 | OR                        |     | DISPLAY NUM SEG 1 CHAR ,3 IN HIGH       | 28480    | 1990-0469          |
| A2D95                 | 1990-0471                 |     | DISPLAY NUM SEG 1 CHAR ,3 IN HIGH       | 28480    | 1990-0469          |
| A2D96                 | (Refer to Paragraph 6-6.) |     | DISPLAY NUM SEG 1 CHAR ,3 IN HIGH       | 28480    | 1990-0469          |
| A2D97                 |                           |     | DISPLAY NUM SEG 1 CHAR ,3 IN HIGH       | 28480    | 1990-0469          |
| A2D98                 |                           |     | DISPLAY NUM SEG 1 CHAR ,3 IN HIGH       | 28480    | 1990-0469          |
| A2D99                 |                           |     | DISPLAY NUM SEG 1 CHAR ,3 IN HIGH       | 28480    | 1990-0469          |
| A2J1                  | 1250-1163                 | 1   | CONNECTOR-RF BNC FEM 8GL-HOLE-RR 50-OHM | 28480    | 1250-1163          |
| A2L1                  | 9100-1620                 | 1   | COIL-MLD 15UH 10% Q=65 ,155DX,375LG     | 24226    | 15/152             |
| A2Q1                  | 1854-0492                 | 7   | TRANSISTOR NPN SI PD=350MW FT=250MHZ    | 28480    | 1854-0492          |
| A2Q2                  | 1854-0492                 |     | TRANSISTOR NPN SI PD=350MW FT=250MHZ    | 28480    | 1854-0492          |
| A2Q3                  | 1854-0492                 |     | TRANSISTOR NPN SI PD=350MW FT=250MHZ    | 28480    | 1854-0492          |
| A2Q4                  | 1854-0492                 |     | TRANSISTOR NPN SI PD=350MW FT=250MHZ    | 28480    | 1854-0492          |
| A2Q5                  | 1854-0492                 |     | TRANSISTOR NPN SI PD=350MW FT=250MHZ    | 28480    | 1854-0492          |
| A2Q6                  | 1854-0492                 |     | TRANSISTOR NPN SI PD=350MW FT=250MHZ    | 28480    | 1854-0492          |
| A2Q7                  | 1854-0492                 |     | TRANSISTOR NPN SI PD=350MW FT=250MHZ    | 28480    | 1854-0492          |
| A2Q8                  | 1853-0318                 | 9   | TRANSISTOR PNP SI PD=500MW FT=60MHZ     | 04713    | MP86562            |
| A2Q9                  | 1853-0318                 |     | TRANSISTOR PNP SI PD=500MW FT=60MHZ     | 04713    | MP86562            |
| A2Q10                 | 1853-0318                 |     | TRANSISTOR PNP SI PD=500MW FT=60MHZ     | 04713    | MP86562            |
| A2Q11                 | 1853-0318                 |     | TRANSISTOR PNP SI PD=500MW FT=60MHZ     | 04713    | MP86562            |
| A2Q12                 | 1853-0318                 |     | TRANSISTOR PNP SI PD=500MW FT=60MHZ     | 04713    | MP86562            |
| A2Q13                 | 1853-0318                 |     | TRANSISTOR PNP SI PD=500MW FT=60MHZ     | 04713    | MP86562            |
| A2Q14                 | 1853-0318                 |     | TRANSISTOR PNP SI PD=500MW FT=60MHZ     | 04713    | MP86562            |
| A2Q15                 | 1853-0318                 |     | TRANSISTOR PNP SI PD=500MW FT=60MHZ     | 04713    | MP86562            |
| A2Q16                 | 1853-0318                 |     | TRANSISTOR PNP SI PD=500MW FT=60MHZ     | 04713    | MP86562            |
| A2R1                  | 0683-2705                 | 11  | RESISTOR 27 5% .25W FC TC=-400/+500     | 01121    | CB2705             |
| A2R2                  | 0683-2705                 |     | RESISTOR 27 5% .25W FC TC=-400/+500     | 01121    | CB2705             |
| A2R3                  | 0683-2705                 |     | RESISTOR 27 5% .25W FC TC=-400/+500     | 01121    | CB2705             |
| A2R4                  | 0683-2705                 |     | RESISTOR 27 5% .25W FC TC=-400/+500     | 01121    | CB2705             |
| A2R5                  | 0683-2705                 |     | RESISTOR 27 5% .25W FC TC=-400/+500     | 01121    | CB2705             |
| A2R6                  | 0683-2705                 |     | RESISTOR 27 5% .25W FC TC=-400/+500     | 01121    | CB2705             |
| A2R7                  | 0683-2705                 |     | RESISTOR 27 5% .25W FC TC=-400/+500     | 01121    | CB2705             |
| A2R8                  | 0683-0395                 | 9   | RESISTOR 3.9 5% .25W FC TC=-400/+500    | 01121    | CB3905             |
| A2R9                  | 0683-0395                 |     | RESISTOR 3.9 5% .25W FC TC=-400/+500    | 01121    | CB3905             |
| A2R10                 | 0683-0395                 |     | RESISTOR 3.9 5% .25W FC TC=-400/+500    | 01121    | CB3905             |
| A2R11                 | 0683-0395                 |     | RESISTOR 3.9 5% .25W FC TC=-400/+500    | 01121    | CB3905             |
| A2R12                 | 0683-0395                 |     | RESISTOR 3.9 5% .25W FC TC=-400/+500    | 01121    | CB3905             |
| A2R13                 | 0683-0395                 |     | RESISTOR 3.9 5% .25W FC TC=-400/+500    | 01121    | CB3905             |
| A2R14                 | 0683-0395                 |     | RESISTOR 3.9 5% .25W FC TC=-400/+500    | 01121    | CB3905             |
| A2R15                 | 0683-0395                 |     | RESISTOR 3.9 5% .25W FC TC=-400/+500    | 01121    | CB3905             |
| A2R16                 | 0683-0395                 |     | RESISTOR 3.9 5% .25W FC TC=-400/+500    | 01121    | CB3905             |
| A2R17                 | 1810-0076                 | 1   | NETWORK-REB 9-PIN-SIP ,15-PIN-SPCG      | 28480    | 1810-0076          |
| A2R18                 | 0683-2705                 |     | RESISTOR 27 5% .25W FC TC=-400/+500     | 01121    | CB2705             |
| A2R19                 | 0683-2705                 |     | RESISTOR 27 5% .25W FC TC=-400/+500     | 01121    | CB2705             |
| A2R20                 | 0683-2705                 |     | RESISTOR 27 5% .25W FC TC=-400/+500     | 01121    | CB2705             |
| A2R21                 | 0683-4715                 | 9   | RESISTOR 470 5% .25W FC TC=-400/+600    | 01121    | CB4715             |
| A2R22                 | 0683-4715                 |     | RESISTOR 470 5% .25W FC TC=-400/+600    | 01121    | CB4715             |
| A2R23                 | 0683-4715                 |     | RESISTOR 470 5% .25W FC TC=-400/+600    | 01121    | CB4715             |
| A2R24                 | 0683-4715                 |     | RESISTOR 470 5% .25W FC TC=-400/+600    | 01121    | CB4715             |
| A2R25                 | 0683-4715                 |     | RESISTOR 470 5% .25W FC TC=-400/+600    | 01121    | CB4715             |
| A2R26                 | 0683-4715                 |     | RESISTOR 470 5% .25W FC TC=-400/+600    | 01121    | CB4715             |
| A2R27                 | 0683-4715                 |     | RESISTOR 470 5% .25W FC TC=-400/+600    | 01121    | CB4715             |
| A2R28                 | 0683-4715                 |     | RESISTOR 470 5% .25W FC TC=-400/+600    | 01121    | CB4715             |
| A2R29                 | 0683-2705                 |     | RESISTOR 27 5% .25W FC TC=-400/+500     | 01121    | CB2705             |
| A2R30                 | 0683-1825                 | 1   | RESISTOR 1.8K 5% .25W FC TC=-400/+700   | 01121    | CB1825             |
| A2R31                 | 0683-4715                 |     | RESISTOR 470 5% .25W FC TC=-400/+600    | 01121    | CB4715             |
| A2R32                 | 0690-8354                 | 1   | RESISTOR 270 5% .125W CC TC=-330/+800   | 01121    | BB2715             |
| A2R33                 | 0690-7102                 | 1   | RESISTOR 5.1K 5% .125W CC TC=-350/+857  | 01121    | BB5125             |
| A2R34                 | 0690-7097                 | 1   | RESISTOR 1M 5% .125W CC TC=-600/+1137   | 01121    | BB1055             |
| A2R35                 | 0690-7964                 | 1   | RESISTOR 100K 5% .125W CC TC=-466/+875  | 01121    | BB1045             |
| A2S1                  | 3101-1598                 | 2   | SWITCH-3L DPST-NS MINTR 1A 125VAC PC    | 28480    | 3101-1598          |
| A2S2                  | 3101-1598                 |     | SWITCH-3L DPST-NS MINTR 1A 125VAC PC    | 28480    | 3101-1598          |
| A2U1                  | 1820-0914                 | 1   | IC-DIGITAL 9307DC TTL 4 BCD-TO-7-SEG    | 07863    | 9307DC             |
|                       |                           |     | A2 MISCELLANEOUS                        |          |                    |
|                       | 0510-0076                 | 1   | NUT-8MHET 6-32-TMD .63-ND STL           | 78553    | C8999-632-248      |
|                       | 1251-3768                 | 32  | CONTACT-CONN U/W POST TYPE MALE DP8LDR  | 28480    | 1251-3768          |

See introduction to this section for ordering information

Table 6-3. Miscellaneous Parts List

| Reference Designation                      | HP Part Number | Qty | Description                                  | Mfr Code | Mfr Part Number |
|--|----------------|-----|--|----------|-----------------|
| <b>CHASSIS MTD AND MISCELLANEOUS PARTS</b> |                |     |  |          |                 |
| C51  | 0160-3043      | 1   | CAPACITOR=FXD 5000PF/5000PF +/-20%           | 28480    | 0160-3043       |
| F2   | 2110-0008      | 1   | FUSE .5A 125V SLO-BLO 1.25X.25 UL            | 75919    | 313-500         |
| F2   | 2110-0201      | 1   | FUSE .25A 250V SLO-BLO 1.25X.25 UL IEC       | 75915    | 313-2503        |
| J1   | 1251-2357      | 1   | CONNECTOR=AC PWR HP=9 MALE PLG=MTG           | 28480    | 1251-2357       |
| J2   | 1250-0083      | 1   | CONNECTOR=RF BNC FEM SGL-HOLE=FR 50-OHM      | 24931    | 28JR-130-1      |
| S4   | 3101-1609      | 1   | SWITCH=SL 2-DPDT=NS STD 1.5A 250VAC 8LDR     | 82389    | 11E-1036        |
| T1   | 9100-3039      | 1   | TRANSFORMER, POWER                           | 28480    | 9100-3039       |
| U26  | 1826-0122      | 1   | IC +5.0 VOLT RGLTR                           | 07263    | 7805UC          |
| U27  | 1826-0215      | 1   | IC -5.2 VOLT RGLTR                           | 04713    | MC7905.2CP      |
| W1   | 8120-1378      | 1   | CABLE ASSEMBLY 18AWG 3-CNDCT GRY-JKT .253-OD | 28480    | 8120-1378       |
| XF2  | 2110-0464      | 1   | FUSEHOLDER=EXTR POST 20A 300V UL/IEC         | 75919    | 345002-010      |
| XF2  | 2110-0465      | 1   | FUSEHOLD-CAP UL/IEC .25X1.25FUSE             | 28480    | 2110-0465       |
| XF2  | 2950-0054      | 1   | NUT=HEX=OBL=CHAM 1/2-28=THD .125=THK         | 28480    | 2950-0072       |
|  | 0340-0765      | 1   | INSULATOR=XSTR T0=220 .002=THK               | 28480    | 0340-0765       |
|  | 0370-0914      | 1   | BEZEL/PUSHBUTTON KNOB, JADE GREY             | 28480    | 0370-0914       |
|  | 0370-2486      | 1   | PUSHBUTTON(SOLID GRAY)                       | 28480    | 0370-2486       |
|  | 7101-0373      | 1   | PANEL, FRONT                                 | 28480    | 7101-0373       |
|  | 5040-7032      | 1   | FOOT, REAR                                   | 28480    | 5040-7032       |
|  | 05300-00006    | 2   | CLIP=RFI                                     | 28480    | 05300-00006     |
|  | 05301-20005    | 1   | STAND, TILT                                  | 28480    | 05301-20005     |
|  | 05301-40001    | 1   | FOOT   | 28480    | 05301-40001     |
|  | 05381-20003    | 1   | COVER, TOP                                   | 28480    | 05381-20003     |
|  | 05381-20004    | 1   | COVER, BOTTOM                                | 28480    | 05381-20004     |
|  | 05381-20005    | 4   | STANDOFF, A1 MOUNTING                        | 28480    | 05381-20005     |
|  | 05382-00002    | 1   | PANEL, REAR (STANDARD INSTRUMENT)            | 28480    | 05382-00002     |
|  | 05382-00003    | 1   | PANEL, REAR (OPTION 001 INSTRUMENT)          | 28480    | 05382-00003     |

See introduction to this section for ordering information

Table 6-4. Manufacturers Code List

| Mfg. No. | Manufacturer Name        | Address                         | Zip Code |
|----------|--------------------------|---------------------------------|----------|
| 00865    | STETTNER-TRUSH INC.,     | CAZENOVIA, NY                   | 13035    |
| 01121    | ALLEN-BRADLEY CO.,       | MILWAUKEE, WI                   | 53212    |
| 01295    | TEXAS INSTR INC SEMICOND | CMPNT DIV, DALLAS, TX           | 75231    |
| 02114    | FERROXCUBE CORP.,        | SAUGERTIES, NY                  | 12477    |
| 04713    | MOTOROLA SEMICONDUCTOR   | PRODUCTS, PHOENIX, AZ           | 85008    |
| 07263    | FAIRCHILD SEMICONDUCTOR  | DIV, MOUNTAIN VIEW, CA          | 94040    |
| 11236    | CTS OF BERNE INC.,       | BERNE, IN                       | 46711    |
| 18324    | SIGNETICS CORP.,         | SUNNYVALE, CA                   | 94086    |
| 24226    | GOWANDA ELECTRONICS      | CORP., GOWANDA, NY              | 14070    |
| 24546    | CORNING GLASS WORKS      | (BRADFORD), BRADFORD, PA        | 16701    |
| 24931    | SPECIALTY CONNECTOR      | CO INC., INDIANAPOLIS, IN       | 46227    |
| 27014    | NATIONAL SEMICONDUCTOR   | CORP., SANTA CLARA, CA          | 95051    |
| 28480    | HEWLETT-PACKARD CO       | CORPORATE HQ, PALO ALTO, CA     | 94304    |
| 56289    | SPRAGUE ELECTRIC CO.,    | NORTH ADAMS, MA                 | 01247    |
| 6F364    | CENTRE ENGINEERING       | INC., STATE COLLEGE, PA         | 16801    |
| 72136    | ELECTRO MOTIVE CORP      | SUB IEC, WILLIMANTIC, CT        | 06226    |
| 73138    | BECKMAN INSTRUMENTS      | INC HELIPOT DIV., FULLERTON, CA | 92634    |
| 75915    | LITTELFUSE INC.,         | DES PLAINES, IL                 | 60016    |
| 78553    | TINNERMAN PRODUCTS       | INC., CLEVELAND, OH             | 44129    |
| 79963    | ZIERICK MFG CO.,         | MT. KISCO, NY                   | 10549    |
| 82389    | SWITCHCRAFT INC.,        | CHICAGO, IL                     | 60630    |
| 95146    | ALCO ELECTRONIC          | PRODUCTS INC., LAWRENCE, MA     | 01843    |



#### 6-4. ORDERING INFORMATION

6-5. To obtain replacement parts, address order to your local Hewlett-Packard Sales and Service Office (see lists at the back of this manual for addresses). Identify parts by their Hewlett-Packard part number. To obtain a part that is not listed, include:

- a. Instrument model number.
- b. Instrument serial number.
- c. Description of the part.
- d. Function and location of the part.

#### 6-6. LED Display Digit Ordering Information

6-7. The 5380 series frequency counter uses three types of LED display digits. These LEDs differ according to light intensity. Table 6-5 lists the three LED intensities together with the original and new part numbers. The original part numbers denote the intensity level of the LED with the suffix C, D, or E; while the new part numbers are different for each intensity level.

Table 6-5. LED Display Digit Part Numbers

| LED LIGHT INTENSITY | ORIGINAL PART NUMBERS         | CORRECT REPLACEMENT PART NUMBERS |
|---------------------|-------------------------------|----------------------------------|
| C Light Intensity   | 5082-7731 C or<br>1990-0452 C | 1990-0469                        |
| D Light Intensity   | 5082-7731 D or<br>1990-0452 D | 1990-0470                        |
| E Light Intensity   | 5082-7731 E or<br>1990-0452 E | 1990-0471                        |

#### NOTE

When replacing an LED, check the part number to determine the correct intensity level for its replacement. Order the new LED using the correct replacement part number listed in Table 6-5.

#### 6-8. Replacement Hardware for Mounting U27 Regulator

6-9. Two methods have been used for mounting -5.2V regulator U27 on the rear panel. One method uses a single nylon screw which screws into a 6-32 threaded hole in the rear panel. The second method uses a stainless steel machine screw and a nylon shoulder washer. The screw fits a 4-40 threaded hole in the rear panel and the shoulder washer insulates the screw from the body of the regulator.

6-10. The 6-32 x 1/4" nylon slotted head machine screw is available under HP Part Number 2360-0055. This screw will break if overtightened.

6-11. A number 4-40 x 1/4" binding head Pozi-drive machine screw with lockwasher (HP Part Number 2200-0103) and flat washer (HP Part No. 3050-0124) is used in the second, more recent, mounting for U27. The flat washer prevents the lockwasher from damaging the nylon shoulder washer (HP Part Number 3050-0756).

6-12. Both mounting methods require the use of an insulator between the chassis and the body of U27. This insulator is listed in Table 6-3 under HP Part Number 0340-0765.

## SECTION VII MANUAL CHANGES

### 7-1. INTRODUCTION

7-2. This section contains information regarding manual changes for instrument serial prefixes other than that listed on the title page.

### 7-3. MANUAL CHANGES

7-4. This manual applies directly to Model 5383A's with serial prefix on inside front cover. See Paragraph 1-8 (in Section I) for the method of serial number identification.

### 7-5. Newer Instruments

7-6. As changes are made, newer instruments may have serial prefixes that are not listed in this manual. The manual for these instruments are supplied with a manual change sheet which contains the required updating information. If this sheet is missing, contact the nearest Hewlett-Packard Sales and Service Office listed at the back of this manual.

### 7-7. Manual Backdating for Older Instruments

7-8. This manual, with the changes listed in Table 7-1, also applied to 5383A Counters with Serial Prefix 1508A or 1516A, Serial No. 1516A00275 and below, or Serial Prefixes of 1532A, 1540A, and 1620A.

7-9. To backdate this manual for any instrument with the serial numbers or serial prefixes listed above and in Table 7-1, make the changes shown in Table 7-1. Make the change in descending sequence starting with Change 3.

*Table 7-1. Manual Changes*

| Serial Prefix or Serial Number                         | Changes |
|--|---------|
| Serial Prefixes 1508A or 1516A                         | 1,2,3   |
| Serial No. 1516A00276 and above or Serial Prefix 1532A | 2,3     |
| Serial Prefix 1540A                                    | 3       |
| Serial Prefix 1620A                                    | 4       |

### CHANGE 1

Page 2-1, Paragraph 2-9, step b:

Change to the following: "Ensure that the correct fuse is installed. Use a Listed 0.250 ampere, slow-blow fuse for 100-volt or 120-volt operation. Use a Listed 0.125 ampere, slow-blow fuse for 220-volt or 240-volt operation. See NOTE at end of Change 1.

Page 3-3, Paragraph 3-10, Problem 1, Check c. and

Page 6-7, Table 6-3, Chassis Mounted and Miscellaneous Parts:

Change  $\frac{1}{2}$  Amp fuse F2 (HP Part No. 2110-0008) to  $\frac{1}{4}$  Amp (HP Part No. 2110-0018) and the  $\frac{1}{4}$  Amp fuse for F2 (HP Part No. 2110-0201) to  $\frac{1}{8}$  Amp (HP Part No. 2110-0318).

### CHANGE 1 Cont'd

Page 3-7, Figure 3-2a; Page 3-8, Figure 3-2b; and Page 8-5, Figure 8-2, A1 Schematic Diagram:

- Change VA rating (adjacent to power connector) from 30 to 20 VA.
- Change fuse values of 500 and 250 MAT to 250 and 125 MAT, respectively.

#### NOTE

The recommended replacement fuse for F2 in any instrument is the 500 MAT 125V fuse (HP Part No. 2110-0008) for 100 or 120V operation; the 250 MAT 250V fuse (HP Part No. 2110-0201) for 220 or 240V operation.

### CHANGE 2

Page 6-6, Table 6-2, A2 Display Board Replaceable Parts:

Change A2 series number to "(SERIES 1540)".

Change A2Q1 through A2Q7 from HP Part No. 1854-0492 to 1854-0246, "Mfr Code" to 04713, and "Mfr Part Number" to SPS233. See NOTE below.

Page 8-7, Figure 8-3: A2 Schematic Diagram table of "ACTIVE ELEMENTS":

Change "HP Part No." for "Q1-7" from 1854-0492 to 1854-0246 (SPS233).

Page 6-7, Table 6-3, Chassis Mounted and Miscellaneous Parts:

Change front panel from 7101-0373 to 05383-00001 in columns for "HP Part Number" and "Mfr Part Number". See NOTE below.

Page 1-1, Figure 1-1, Front Panel View:

Change name to read "500 MHz FREQUENCY COUNTER".

Change all front-panel views in the same manner.

Page 1-3, Table 1-2, Specifications:

Change "Frequency Range" maximum for 520 to 512 MHz.

#### NOTE

All 5383A Counters will meet the same specifications as those given in Table 1-2 for Series 1628A including the 520 MHz maximum frequency range.

The 7101-0373 panel can be used for replacement purposes in any series 1508A, 116A, or 1532A instrument. This panel shows 520 MHz in place of 500 MHz.

The HP Part No. 1854-0492 transistor is recommended for replacement of A2Q1 through A2Q7 in any series 1508A, 1516A, or 1532A instrument.

### CHANGE 3

Pages 6-3 and 6-5, Table 6-1, 05383-60001/05383-60003 Replaceable Parts:

Change A1 series number to 1540.

Change A1U14 from 1820-0491 (SN74145N) to 1820-0214 (SN7442N) in "HP Part Number" and "Mfr Part Number" columns in Table 6-1. See NOTE below.

Page 6-6, Table 6-2, 05383-60002, Replaceable Parts:

Change A2 series number to 1540.

Change A2R7 from 1810-0076 (8 x 1800 $\Omega$ ) to 1810-0041 (8 x 1800 $\Omega$ ). See NOTE below.

Change A2R30 from 0683-1825 (1800 $\Omega$ ) to 0683-2725; (2700 $\Omega$ ) and change "Mfr Part Number" from "CB1825" to "CB2725".

Page 8-5, Figure 8-2, A1 Schematic Diagram:

Change series number at top of schematic to 1540.

Change A1U1 in table of ACTIVE ELEMENTS from 1820-0491 (74145) to 1820-0214 (7442).

**CHANGE 3 Cont'd**

Page 8-7, Figure 8-3, A2 Schematic Diagram:

Change series number, at top of schematic, to 1540.

Change A1R17 from 1800 to 2700 ohms per section.

Change A2R30 from 1800 to 2700 ohms.

**NOTE**

The SN74145N (HP Part No. 1820-0491) integral circuit is recommended for A1U14 replacement in all serial prefix 1508A, 1516A, 1532A, or 1540A instruments. If the SN74145N is used for A1U14, an 8 x 1800 ohm resistor pack (HP Part No. 1810-0076) is recommended for A2R7 and an 1800 ohm resistor (HP Part No. 0683-1825) is recommended for A2R30.

**CHANGE 4**

Page 1-3, Table 1-2:

Change SENSITIVITY specification as follows:

| INPUT Switch Positon | Frequency Range    | Sensitivity (RMS) |
|----------------------|--------------------|-------------------|
| 50Ω X1               | 20 Hz to 100 MHz   | 25 mV             |
|                      | 100 MHz to 520 MHz | 50 mV             |

Page 5-2, Table A:

In first line of Table A, change output level at 520 MHz to 50 mV.

Page 5-4a, Performance Check Record Sheet:

In step 3, in first line of table, change output level for 520 MHz to 50 mV.

## SECTION VIII

### SCHEMATIC DIAGRAMS

#### 8-1. INTRODUCTION

8-2. This section contains component location and schematic diagrams. Included on the schematic diagrams are key waveforms for the convenience of the troubleshooter. These waveforms show nominal values that are present when the 5383A Counter is set up in the following manner:

- a. Loop-around test configuration (the rear panel OSCILLATOR output connector is connected to the front panel INPUT connector with a coaxial cable and a  $50\Omega$  feedthru connector (i.e., HP 11048C or equivalent).
- b. The INPUT switch is set to  $1M\Omega \times 10$ .

8-3. A list of active components is provided for quick identification of those parts which are more likely to fail. A complete listing of all replaceable parts is provided in Section VI.


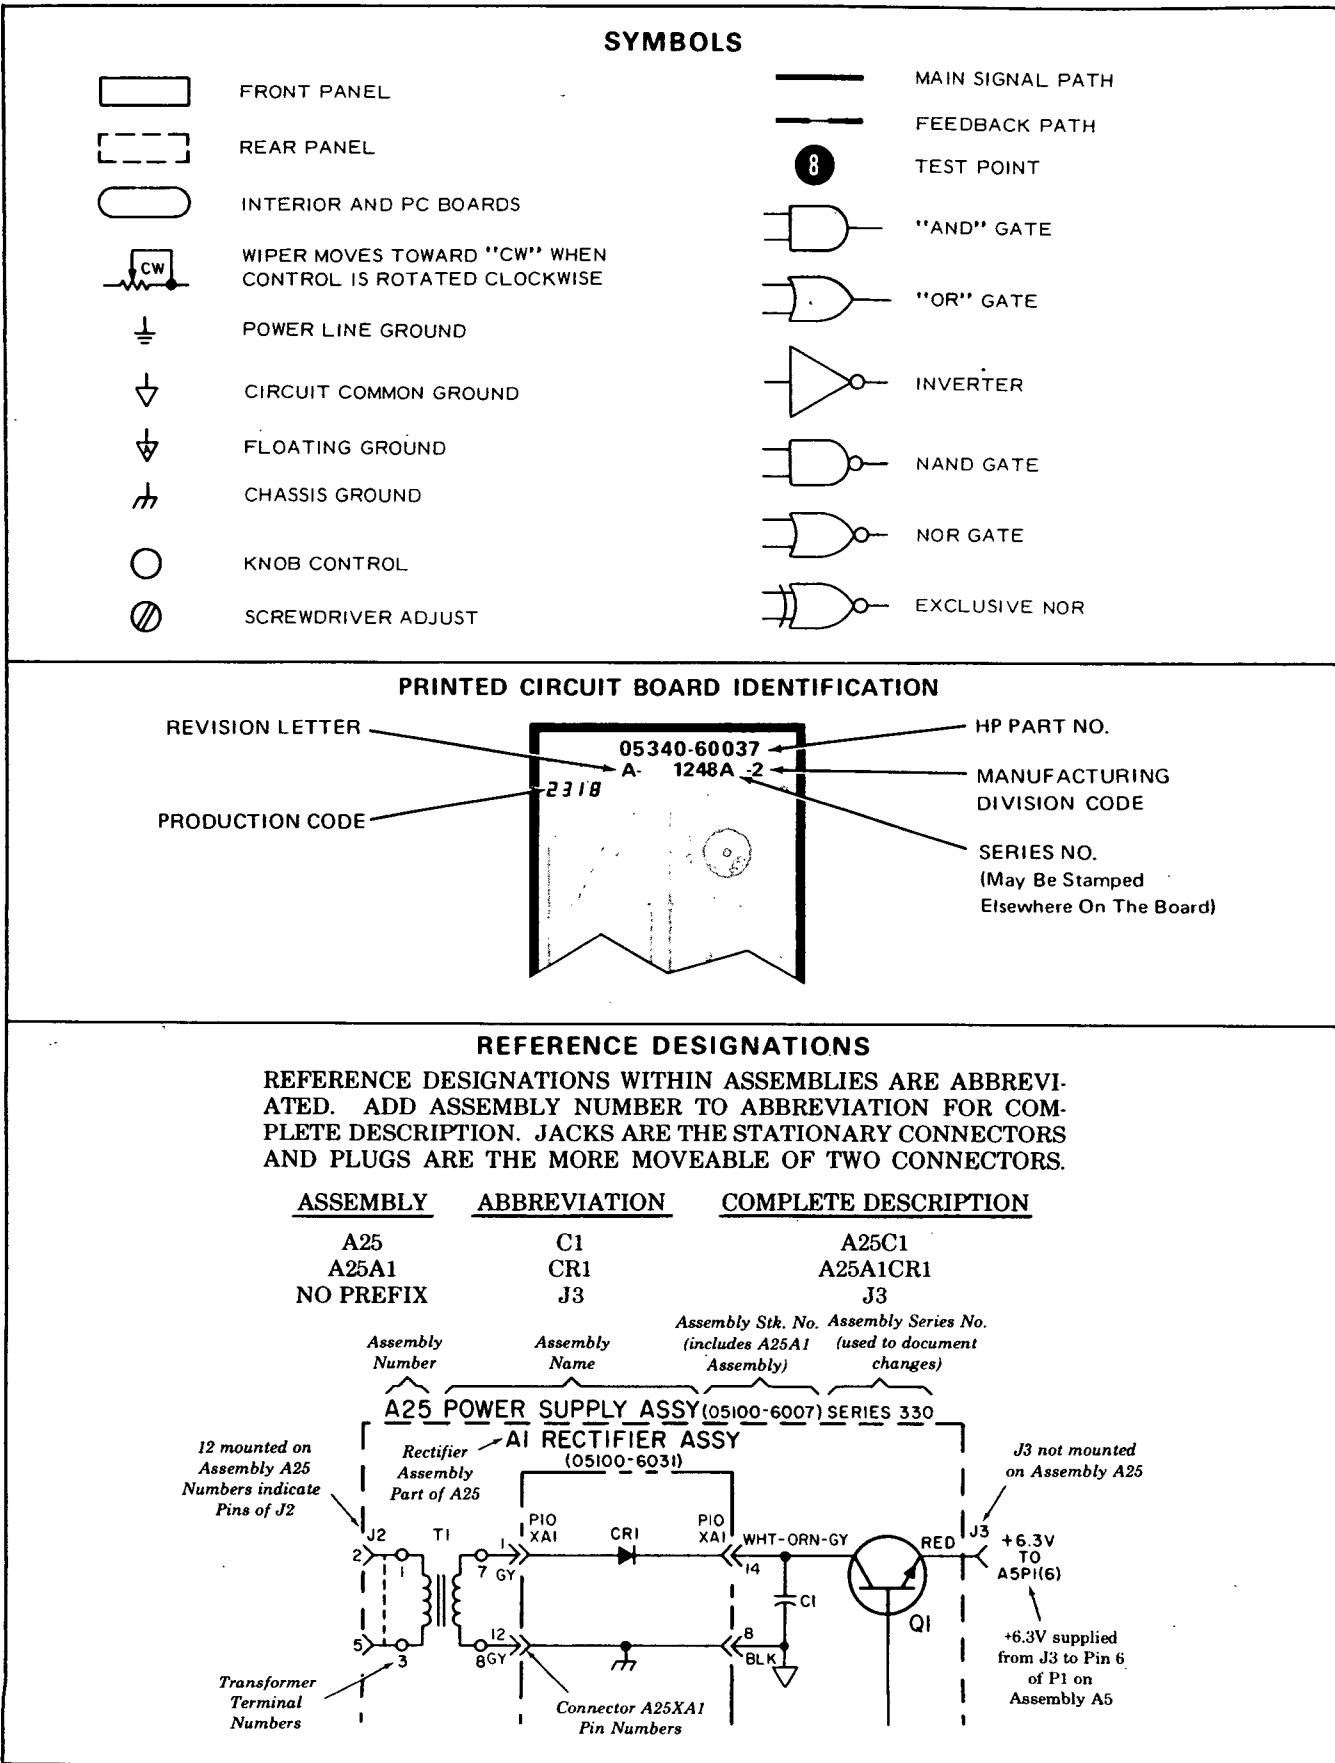


Figure 8-1. Schematic Diagram Notes

Table 8-1. Major Signal Definitions

| Mnemonic  | Description  |
|---|--|
| A,B,C,D   | Display Data Bus BCD lines (Weight: A=1, B=2, C=4, D=8).   |
| $\overline{MG}$   | TTL version of MGE; used to control RSTB Latch.  |
| $\overline{MGE}$  | Main gate control signal (EECL logic level); allows input to frequency counters (when Low).  |
| $\overline{MRS}$  | Counter reset and display digit test command (generated by RS signal).   |
| $\overline{OF}$   | Overflow; low TTL level indicates overflow of frequency counters.  |
| $\overline{RBI}$  | Ripple Blanking Input; low TTL level allows blanking of zeros in display; high TTL level inhibits zero blanking.   |
| RBO   | Ripple Blanking Output; low TTL level when zeros are blanked from display; high TTL level at all other times.  |
| RS  | High TTL level resets counter when GATE TIME switch position is changed.<br>Provides display digit test when GATE TIME switch is held between positions.                             |
| $\overline{RSC}$<br>$\overline{RSC}$                    | TTL signals that reset frequency counters.   |
| $\overline{RSTB}$<br>$\overline{RSTB}$                  | TTL signals that reset the variable Time Base counter and Main Gate Latches during the update sequence (see Figure 4-3).   |
| $\overline{S0}$ THRU $\overline{S9}$                    | Eight continuously cycling display scan signals; each scan line activates one display digit.   |
| $\overline{TR}$<br>$\overline{TR}$                      | TTL signals that transfer frequency counter BCD data to the storage latches during the update sequence (see Figure 4-3).   |
| W<br>X<br>Y<br>Z  | Used for output multiplexing of the Hex Multiplexed Decade Counter BCD characters. These signals also drive the Hu BCD-to-Decimal converter providing the Scan signals (S0 thru S9). |
| $\overline{.1s}$<br>$\overline{1s}$<br>$\overline{10s}$ | Low TTL level that illuminate the LED display decimal points and control leading zero blanking.  |

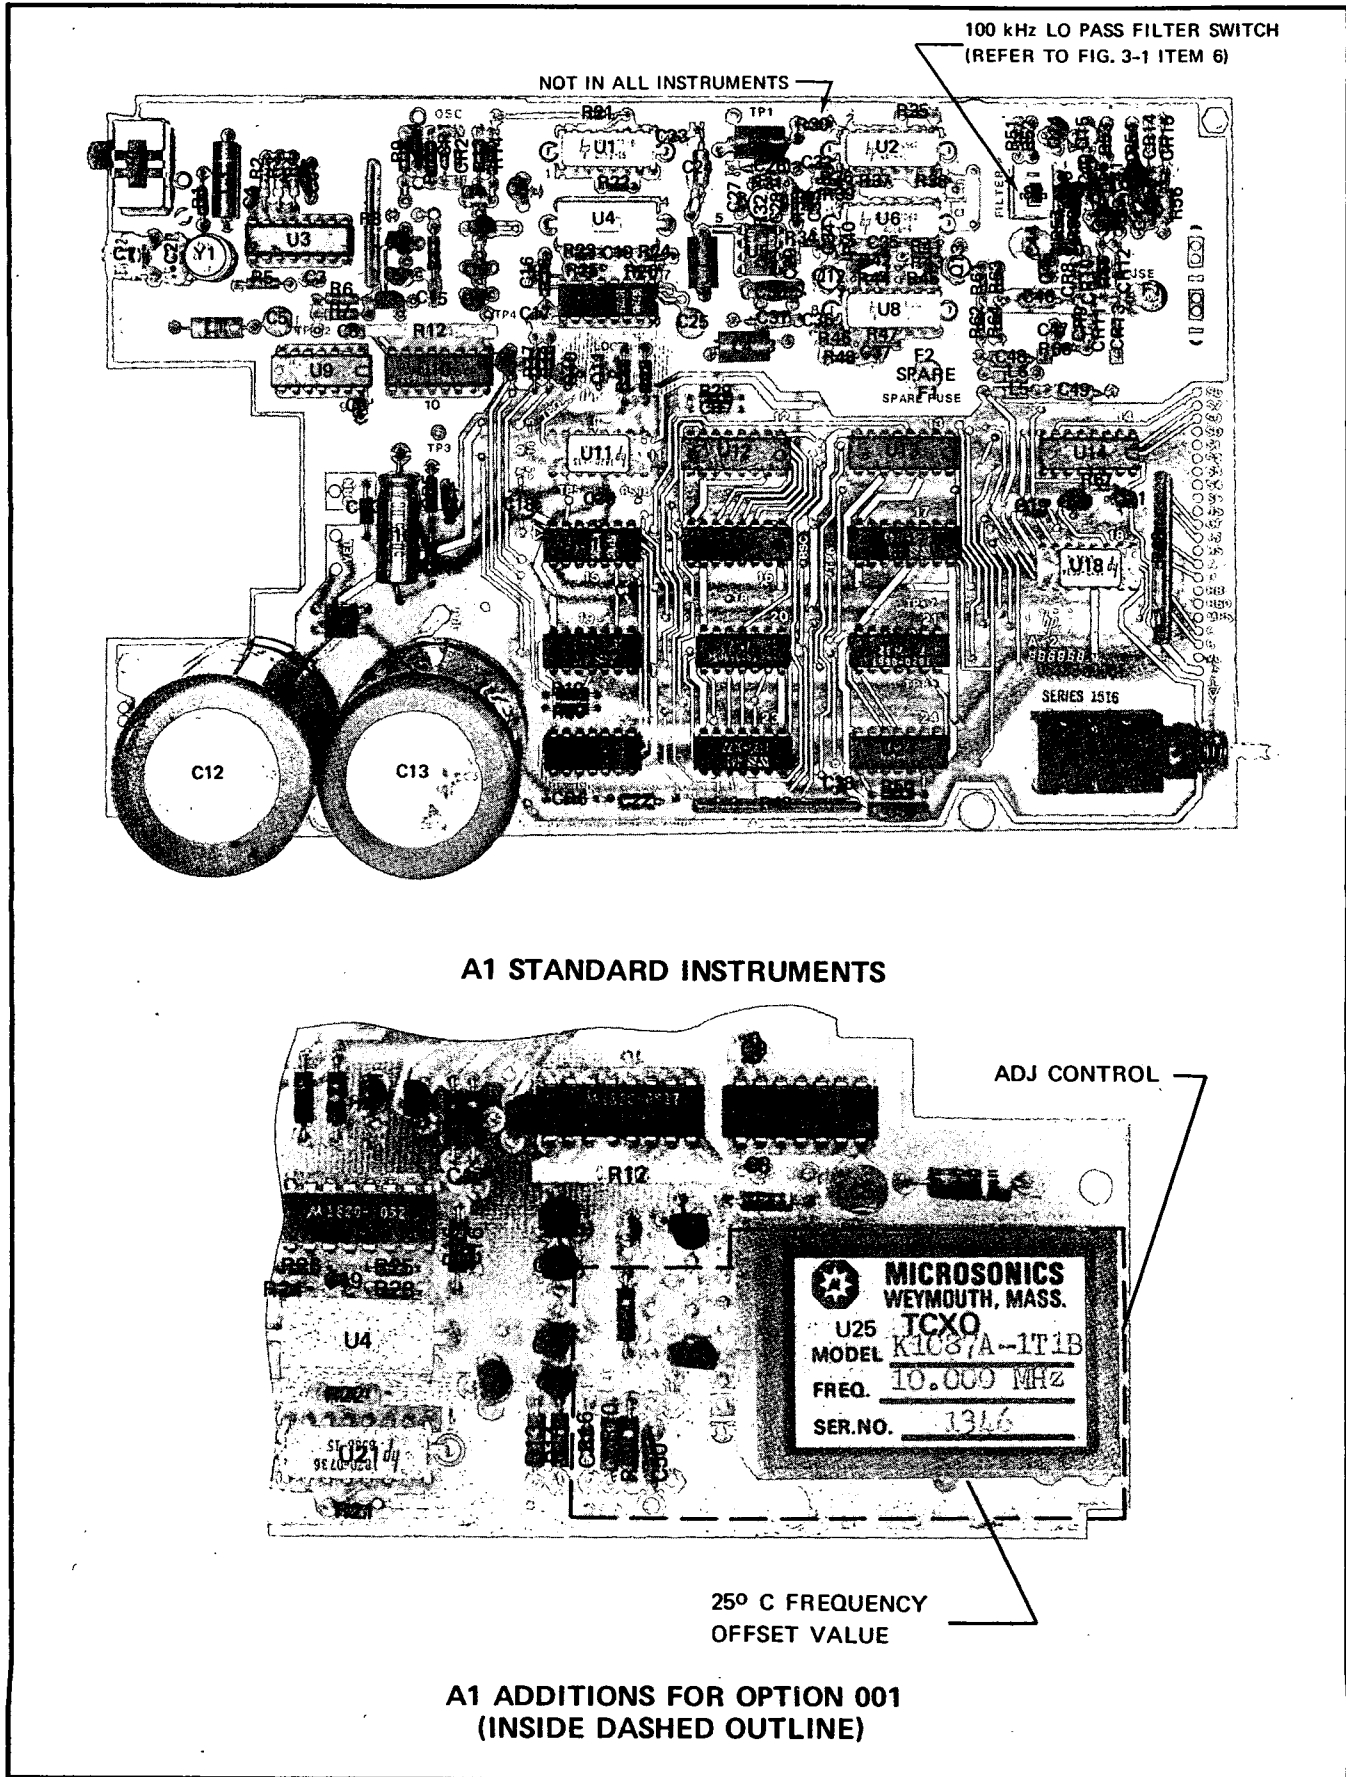

Part of Figure 8-2. A1 Main Board Schematic Diagram (Standard and Option 001)  
and Part of A2 Display Board



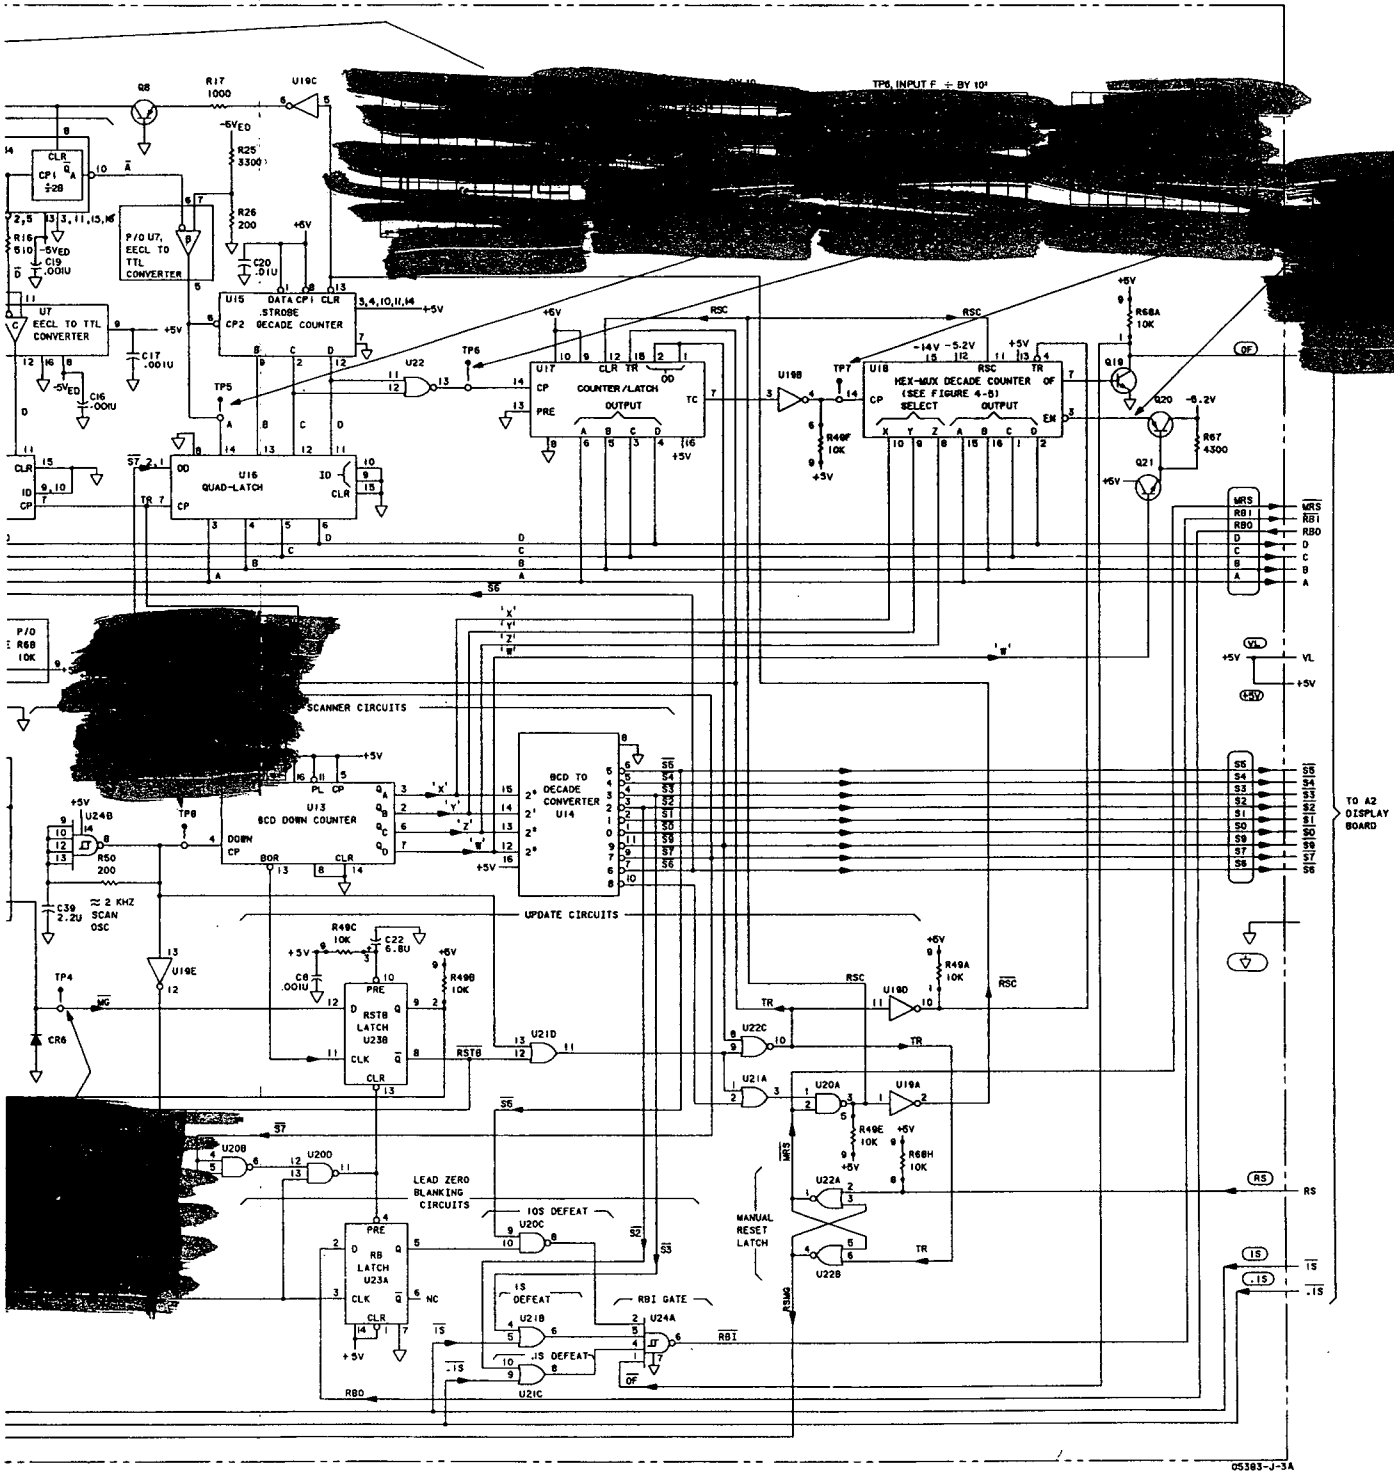


Figure 8-2. A1 Main Board Schematic Diagram (Standard and Option 001) and Part of A2 Display Board

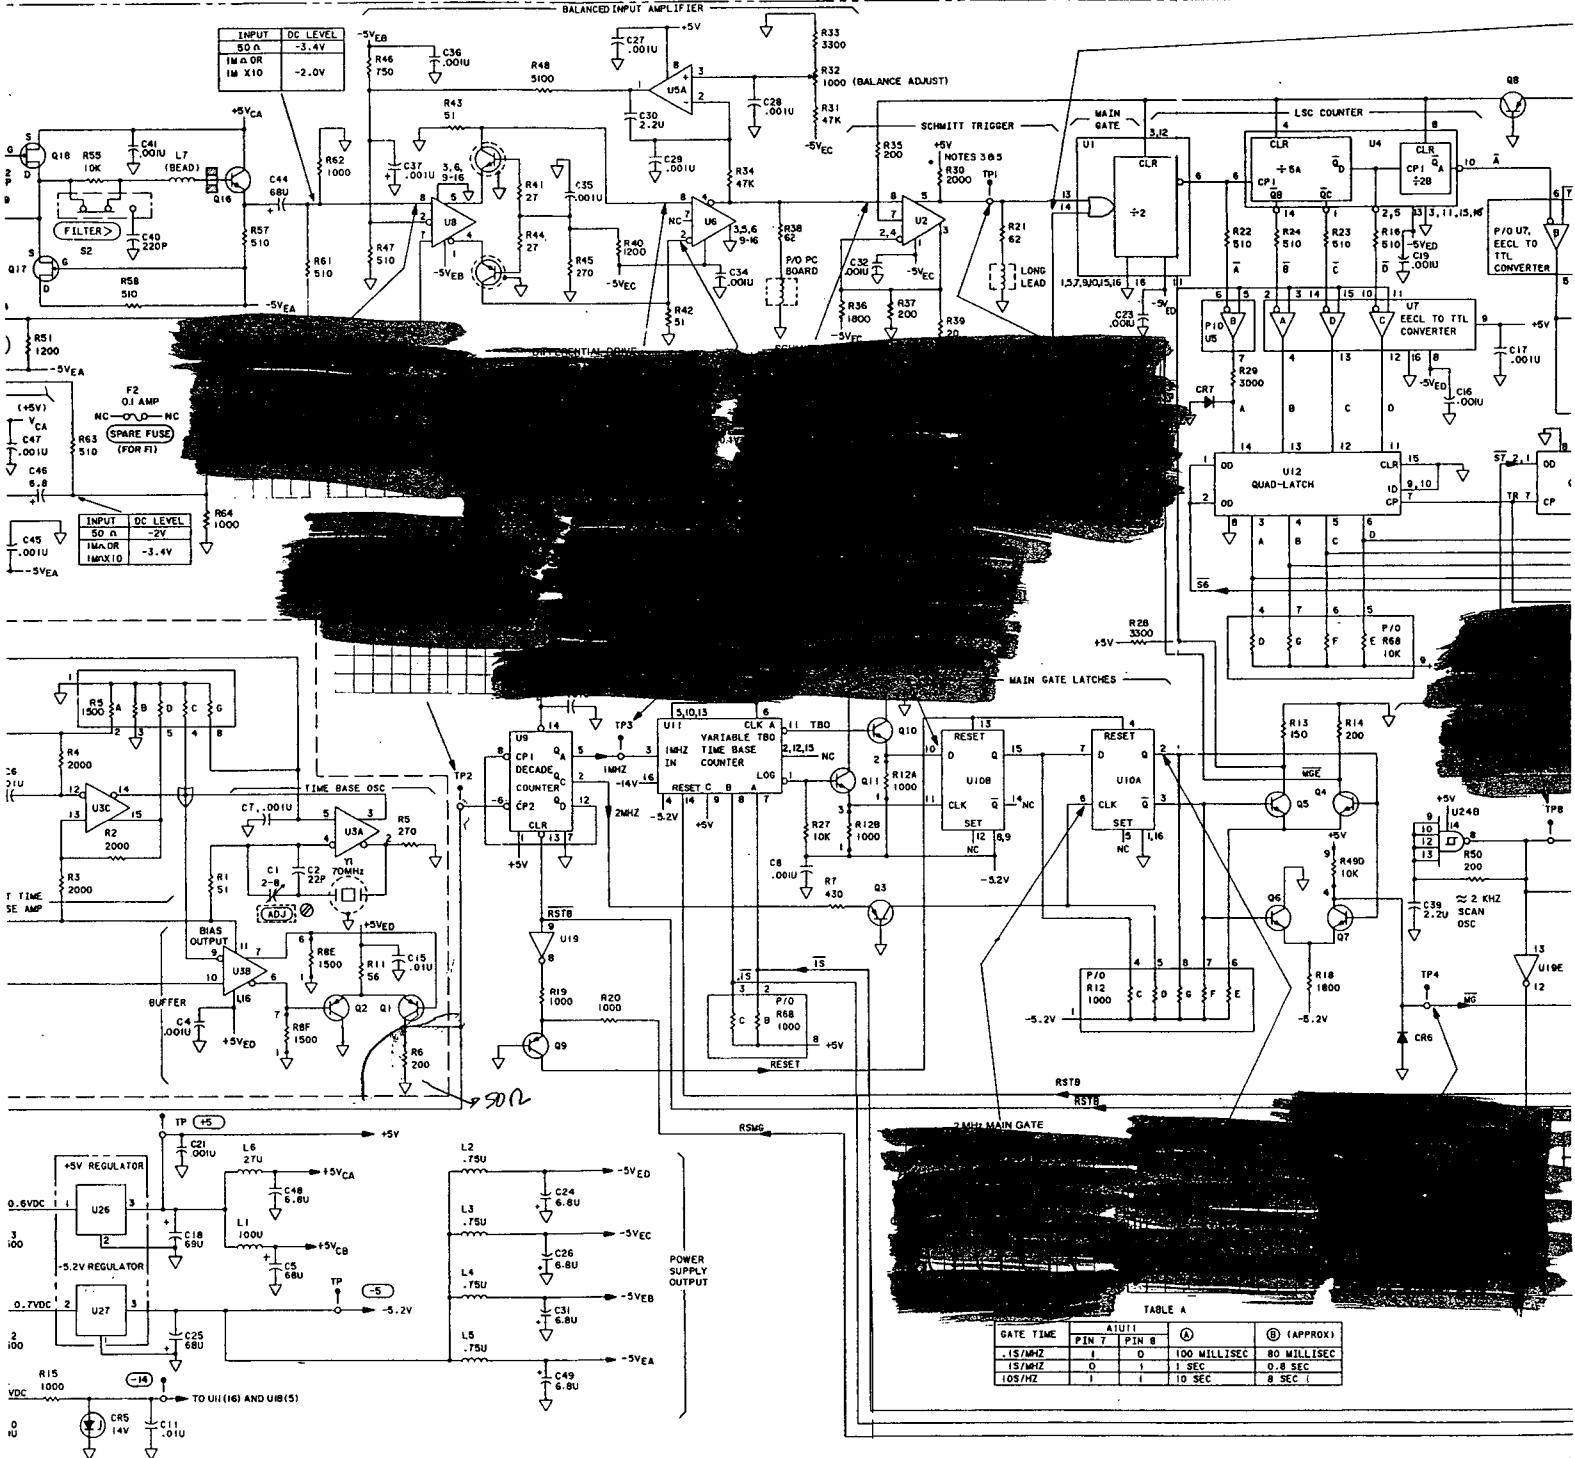


TABLE A

| GATE TIME | A(U1) |   | Q            | Q (APPROX)  |
|-----------|-------|---|--------------|-------------|
|           | 7     | 8 |              |             |
| 1S/MHZ    | 1     | 0 | 100 MILLISEC | 80 MILLISEC |
| 1S/MHZ    | 0     | 1 | 1 SEC        | 0.8 SEC     |
| 10S/MHZ   | 1     | 1 | 10 SEC       | 8 SEC       |

3  
 THIN THIS ASSEMBLY ARE ABBREVIATED.  
 3B REVIATION FOR COMPLETE DESCRIPTION.  
 ):

ETED COMPONENT.  
 FROM SET-UP DESCRIBED IN PARA. 8-2.  
 IUMENTS.


| WBERS     | A1              | A2          | CHASSIS   |
|-----------|-----------------|-------------|-----------|
| 040       | C1-50<br>CR1-16 | C1-3<br>CR1 | C51<br>F2 |
| IR1358-9) | F1,2            | DS1-9       | J1,2      |
| IDA922-3) | L1-7            | J1          |           |
| FZ1201)   | Q1-22           | L1          |           |
| 901-0050  | R1-71           | Q1-16       | S4        |
| 2N3563)   | S1-3            | R1-35       | T1        |
| 2N3563)   | T1              | S1,2        | U26,27    |
| 2N3904)   | U1-25           | U1          | W1        |
| 2N5179)   | Y1              |             |           |
| 071       |                 |             |           |
| 2N5245)   |                 |             |           |

|           | PWR (PIN)                         | PWR RTN PIN |
|-----------|-----------------------------------|-------------|
| 736       | VED(11)                           | 16          |
| 982       | -5.2V(1)                          | 9           |
| CL10216)  | VCB(16), (1)                      | 8           |
| 019       | VEB(13)                           | 3,11,15     |
| 1139      | VEC(4)                            |             |
| 18N)      | +5V(8)                            |             |
| CL10125)  | +5V(9)                            | 16          |
| 74LS196)  | VED(11)<br>+5V(14)                | 7           |
| VC10131)  | -5.2V(8)                          | 1, 16       |
| 1633      | -14V(16)<br>-5.2V(4)<br>+5V(9)    |             |
| M85L51)   | +5V(16)                           | 8           |
| (74L192)  | +5V(16)                           | 8           |
| (74145)   | +5V(16)                           | 8           |
| (82S90)   | +5V(14)                           | 7           |
| (8552)    | +5V(14)                           | 8           |
| 1634      | +5V(13),<br>-5.2V(12),<br>-14V(5) |             |
| (7404)    | +5V(14)                           | 7           |
| (7400)    | +5V(14)                           | 7           |
| (7432)    | +5V(14)                           | 7           |
| (7402)    | +5V(14)                           | 7           |
| (7474)    | +5V(14)                           | 7           |
| (7413)    | +5V(14)                           | 7           |
| 1394      | See schem.                        | See schem.  |
| (7805)    | See schem.                        | See schem.  |
| MC7905.2) | See schem.                        | See schem.  |


REFERENCE DESIGNATIONS

| A1              | A2          | CHASSIS   |
|-----------------|-------------|-----------|
| C1-50<br>CR1-16 | C1-3<br>CR1 | C51<br>F2 |
| F1,2            | DS1-9       | J1,2      |
| L1-7            | J1          |           |
| Q1-22           | L1          |           |
| R1-71           | Q1-16       | S4        |
| S1-3            | R1-35       | T1        |
| T1              | S1,2        | U26,27    |
| U1-25           | U1          | W1        |
| Y1              |             |           |

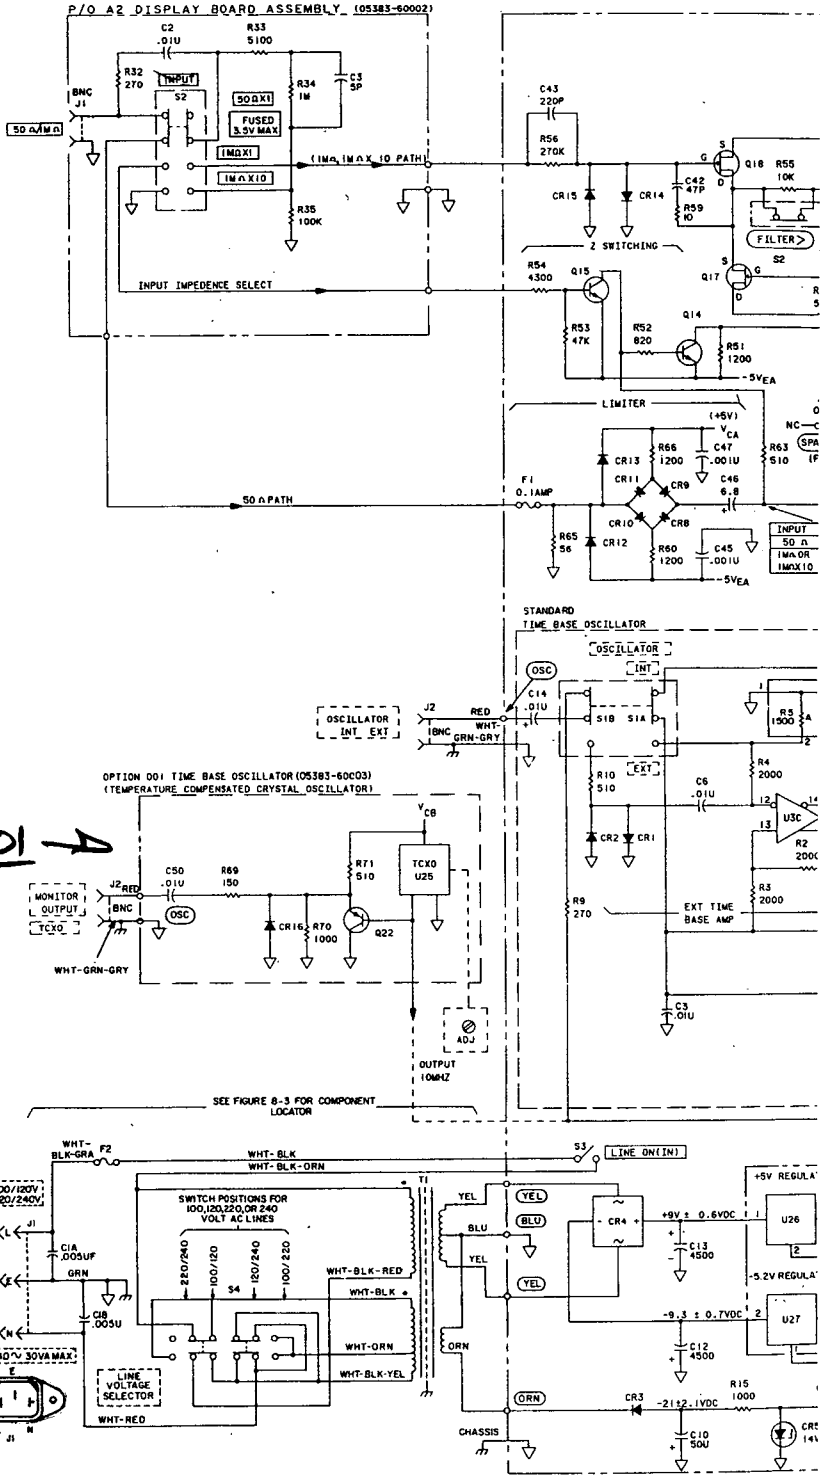

**NOTES**

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED.
2. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION. UNLESS OTHERWISE INDICATED:  
RESISTANCE IN OHMS;  
CAPACITANCE IN FARADS;  
INDUCTANCE IN HENRIES.
3. ASTERISK (\*) INDICATES SELECTED COMPONENT.
4. WAVEFORMS SHOWN RESULT FROM SET-UP DESCRIBED IN PARA. 8-2.
5. ATR30 NOT USED IN ALL INSTRUMENTS.

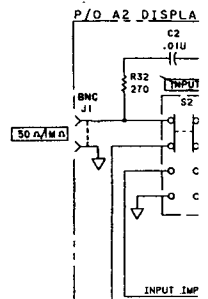



**ACTIVE ELEMENTS**

| REFERENCE DESIGNATIONS  | PART NUMBERS         |
|---|----------------------|
| CR1 <sup>▲</sup> , 2 <sup>▲</sup> , 6, 7, 14, 15, 16 <sup>▲</sup> | 1901-0040            |
| CR3   | 1901-0028 (SR1358-9) |
| CR4   | 1906-0028 (MDA922-3) |
| CR5   | 1902-0040 (FZ1201)   |
| CR8-11, CR12, 13  | 1901-0535, 1901-0050 |
| Q1-3, 22 <sup>■</sup>   | 1853-0015 (2N3563)   |
| Q4, 5, 10, 11   | 1854-0092 (2N3563)   |
| Q6, 7, 16   | 1854-0215 (2N3904)   |
| Q12, 13   | 1854-0546 (2N5179)   |
| Q14, 15, 19, 21   | 1854-0071            |
| Q17, 18   | 1855-0081 (2N5245)   |
| U1  | 1820-0736            |
| U2, 6, 8  | 1820-0982            |
| U3 <sup>▲</sup>   | 1820-1224 (ECL10216) |
| U4  | 1820-1019            |
| U5  | 1826-0139 (LM1458N)  |
| U7  | 1820-1052 (ECL10125) |
| U9  | 1820-1251 (74LS196)  |
| U10   | 1820-0817 (MC10131)  |
| U11   | 1820-0633            |
| U12, 16   | 1820-1166 (DM85L51)  |
| U13   | 1820-0911 (74L192)   |
| U14   | 1820-0491 (74145)    |
| U15   | 1820-1155 (82S90)    |
| U17   | 1820-1143 (8552)     |
| U18   | 1820-0634            |
| U19   | 1820-0174 (7404)     |
| U20   | 1820-0054 (7400)     |
| U21   | 1820-0661 (7432)     |
| U22   | 1820-0328 (7402)     |
| U23   | 1820-0077 (7474)     |
| U24   | 1820-0537 (7413)     |
| U25 <sup>■</sup>  | 0960-0394            |
| U26   | 1826-0122 (7805)     |
| U27   | 1826-0215 (MC7905.2) |


**REFERENCE DESIGNATIONS**

| A1     | A2    | CHASSIS |
|--------|-------|---------|
| C1-50  | C1-3  | C51     |
| CR1-16 | CR1   | F2      |
| F1, 2  | DS1-9 | J1, 2   |
| L1-7   | J1    |         |
| Q1-22  | L1    | S4      |
| R1-71  | Q1-16 | T1      |
| S1-3   | R1-35 | U26, 27 |
| T1     | S1, 2 | W1      |
| U1-25  | U1    |         |
| Y1     |       |         |


| PWR (PIN)    | PWR RTN PIN |
|--------------|-------------|
| VED(11)      | 16          |
| -5.2V(1)     | 9           |
| VCB(16), (1) | 8           |
| VEB(13)      | 3, 11, 15   |
| VEC(4)       |             |
| +5V(8)       |             |
| +5V(9)       | 16          |
| VED(11)      |             |
| +5V(14)      | 7           |
| -5.2V(8)     | 1, 16       |
| -14V(16)     |             |
| -5.2V(4)     |             |
| +5V(9)       |             |
| +5V(16)      | 8           |
| +5V(16)      | 8           |
| +5V(16)      | 8           |
| +5V(14)      | 7           |
| +5V(14)      | 8           |
| +5V(13),     |             |
| -5.2V(12),   |             |
| -14V(5)      |             |
| +5V(14)      | 7           |
| +5V(14)      | 7           |
| +5V(14)      | 7           |
| +5V(14)      | 7           |
| +5V(14)      | 7           |
| +5V(14)      | 7           |
| See schem.   | See schem.  |
| See schem.   | See schem.  |
| See schem.   | See schem.  |

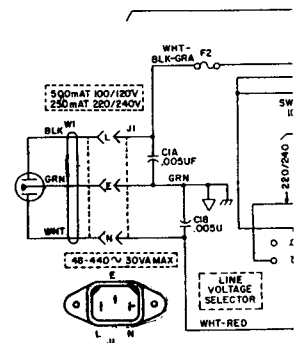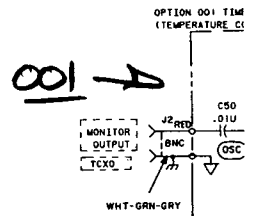

■ ADDED FOR OPTION 001.  
▲ DELETED FOR OPTION 001.

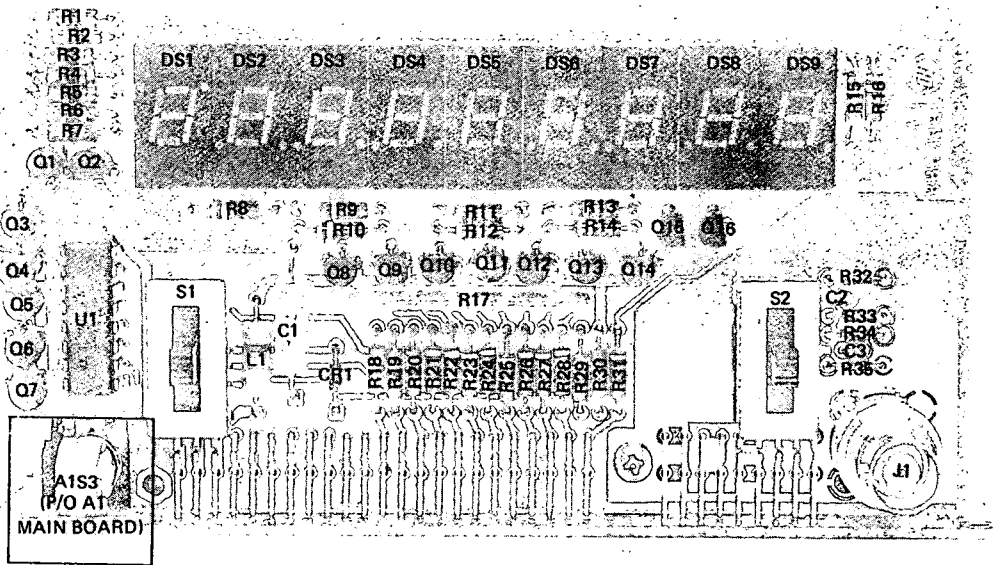

A2

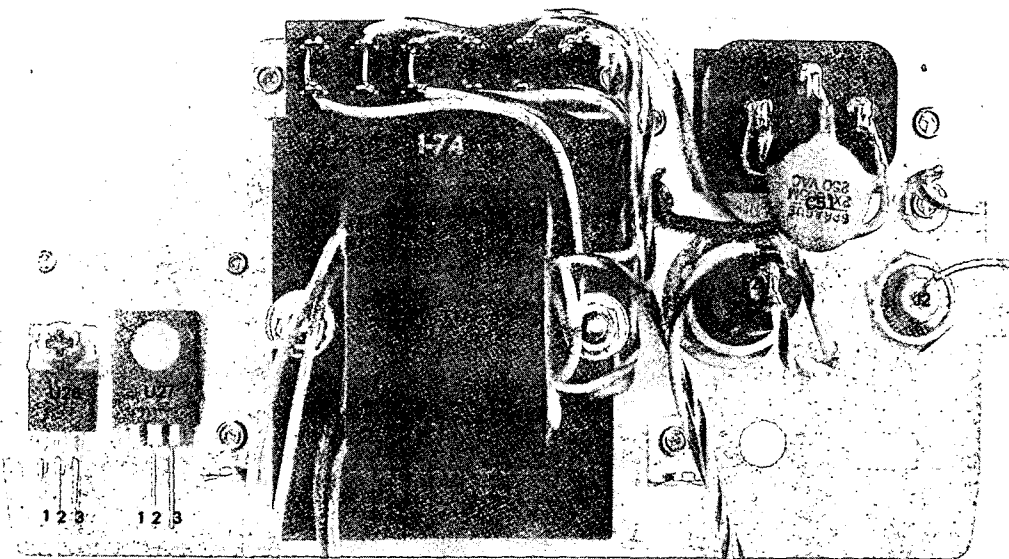

REAR PANEL

Part of Figure 8-3. Part of A2 Display Board Schematic Diagram


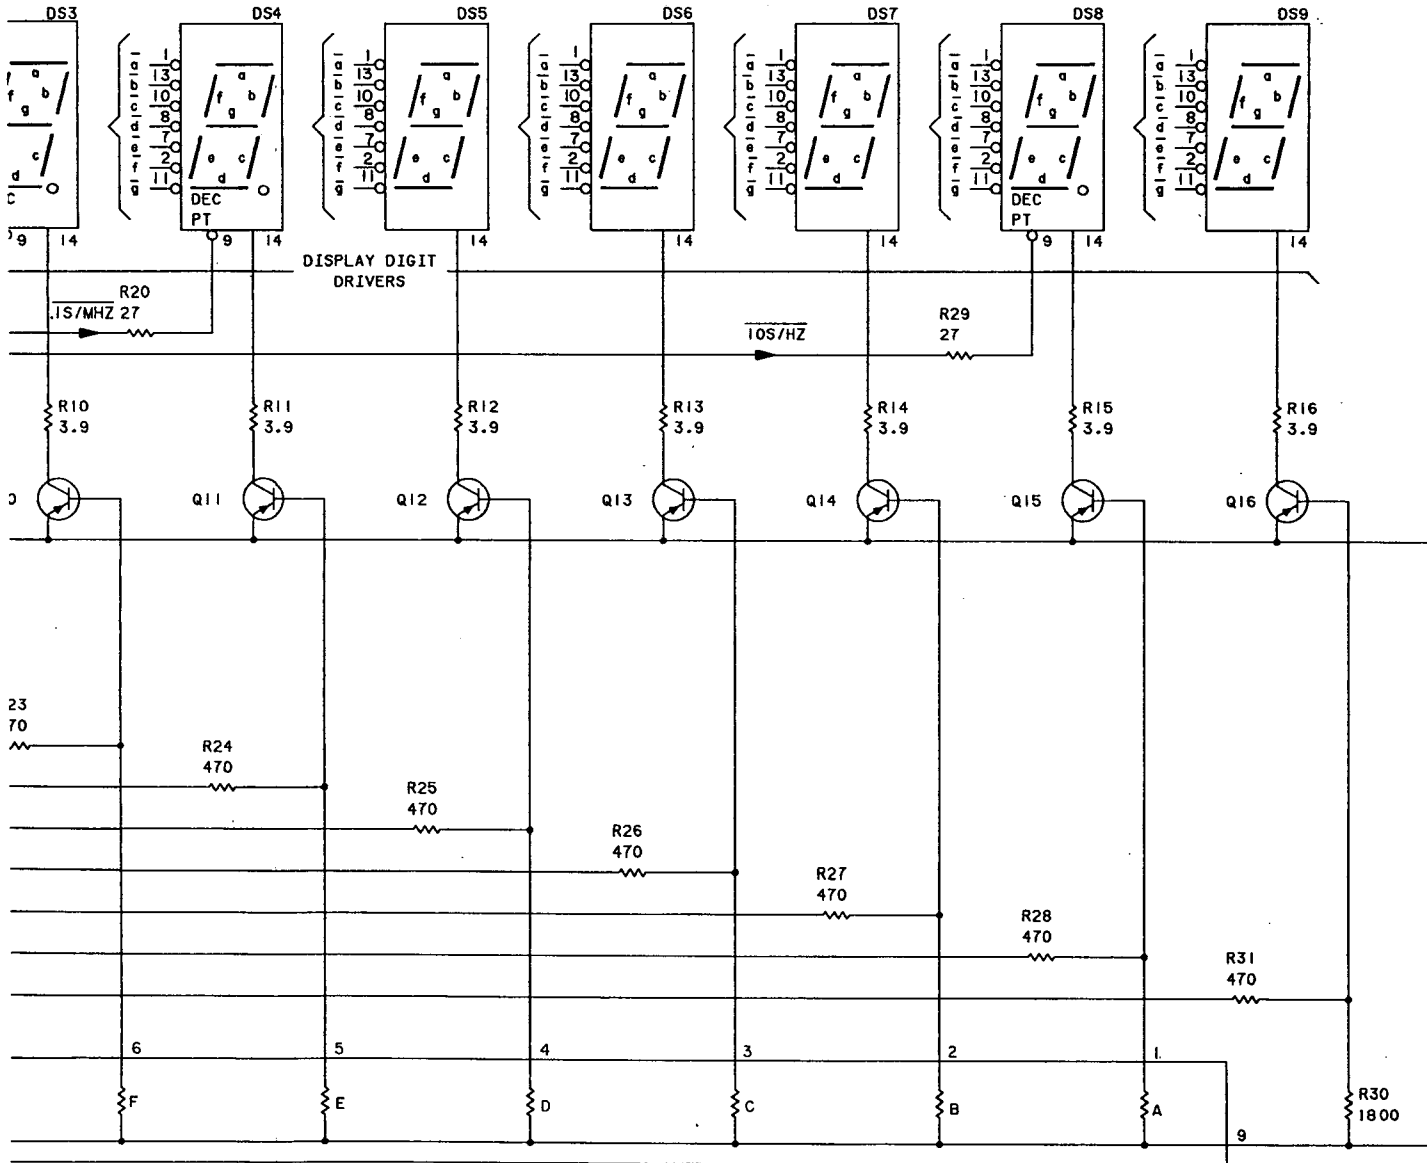


Figure 8-3. Part of A2 Display Board Schematic Diagram

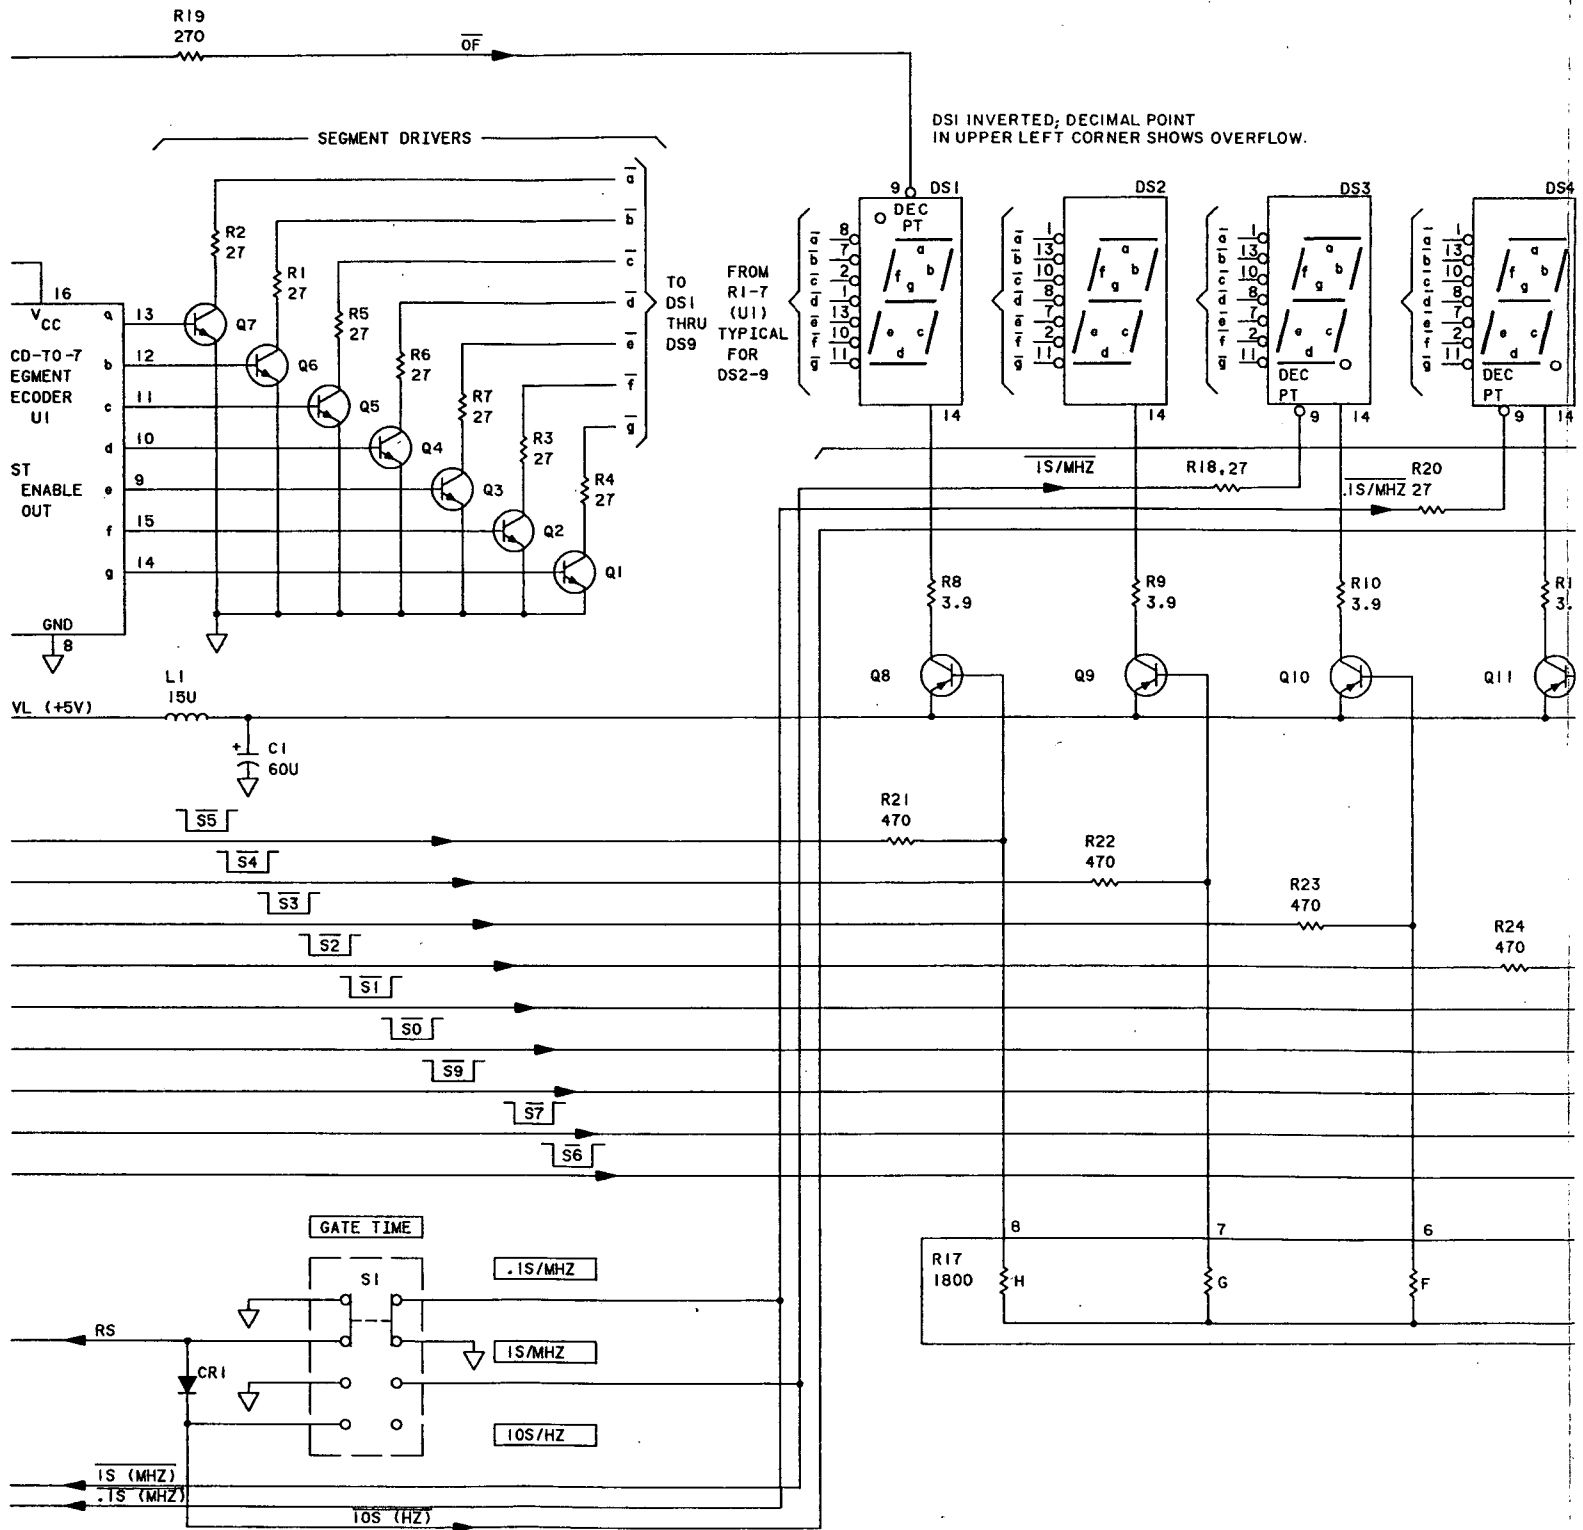

| f DRIVE |   | DISPLAYED DIGIT VALUE |
|---------|---|-----------------------|
| f       | g |                       |
| 0       | 1 | 0                     |
| 1       |   | 1                     |
| 1       | 0 | 2                     |
| 1       | 0 | 3                     |
| 0       | 0 | 4                     |
| 0       | 0 | 5                     |
| 0       | 0 | 6                     |
| 1       | 1 | 7                     |
| 0       | 0 | 8                     |
| 0       | 0 | 9                     |
| 0       | 0 | 8                     |

er.  
ox. 0 volts


THIS ASSEMBLY ARE  
MBER TO ABBREVIATION

MPONENT.

REFERENCE DESIGNATIONS

| A2    |
|-------|
| C1-3  |
| CR1   |
| DS1-9 |
| J1    |
| L1    |
| Q1-16 |
| R1-35 |
| S1, 2 |
| U1    |

| f/R PIN |
|---------|
|         |

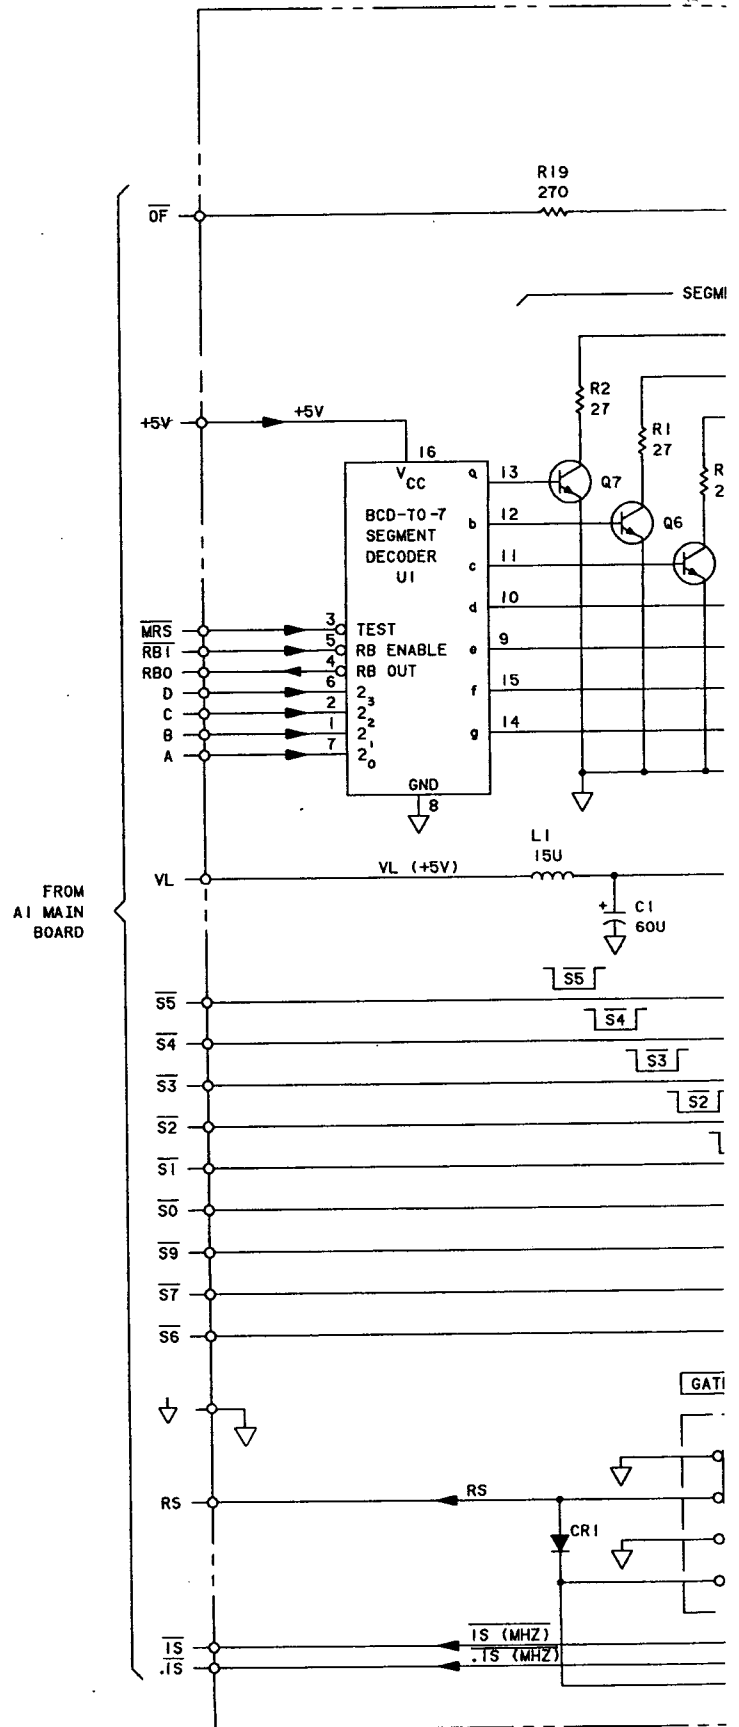



| DISPLAY BUS BCD INPUT                |   |   |   | TEST INPUT | DISPLAY DIGIT DRIVE |   |   |   |   |   |   | DISPLAYED DIGIT VALUE |
|--------------------------------------|---|---|---|------------|---------------------|---|---|---|---|---|---|-----------------------|
| A                                    | B | C | D | MRS        | a                   | b | c | d | e | f | g |                       |
| 0                                    | 0 | 0 | 0 | 1          | 0                   | 0 | 0 | 0 | 0 | 0 | 1 | 0                     |
| 1                                    | 0 | 0 | 0 | 1          | 1                   | 0 | 0 | 1 | 1 | 1 |   | 1                     |
| 0                                    | 1 | 0 | 0 | 1          | 0                   | 0 | 1 | 0 | 0 | 1 | 0 | 2                     |
| 1                                    | 1 | 0 | 0 | 1          | 0                   | 0 | 0 | 0 | 1 | 1 | 0 | 3                     |
| 0                                    | 0 | 1 | 0 | 1          | 1                   | 0 | 0 | 1 | 1 | 0 | 0 | 4                     |
| 1                                    | 0 | 1 | 0 | 1          | 0                   | 1 | 0 | 0 | 1 | 0 | 0 | 5                     |
| 0                                    | 1 | 1 | 0 | 1          | 1                   | 1 | 0 | 0 | 0 | 0 | 0 | 6                     |
| 1                                    | 1 | 1 | 0 | 1          | 1                   | 0 | 0 | 1 | 1 | 1 | 1 | 7                     |
| 0                                    | 0 | 0 | 1 | 1          | 0                   | 0 | 0 | 0 | 0 | 0 | 0 | 8                     |
| 1                                    | 0 | 0 | 1 | 1          | 0                   | 0 | 0 | 1 | 1 | 0 | 0 | 9                     |
| X                                    | X | X | X | 0          | 0                   | 0 | 0 | 0 | 0 | 0 | 0 | 8                     |
| X = Does not matter                  |   |   |   |            |                     |   |   |   |   |   |   |                       |
| 1 = approx. +4V, 0 = approx. 0 volts |   |   |   |            |                     |   |   |   |   |   |   |                       |

**NOTES**

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED:  
RESISTANCE IN OHMS;  
CAPACITANCE IN FARADS;  
INDUCTANCE IN HENRIES.
3. ASTERISK (\*) INDICATES SELECTED COMPONENT.

**ACTIVE ELEMENTS**

| REFERENCE DESIGNATIONS | HP PART NO.                         | PWR (PIN) | PWR RTN PIN |
|------------------------|-------------------------------------|-----------|-------------|
| CR1<br>DS1-9<br>Q1-7   | 1901-0040<br>1990-0452<br>1854-0492 |           |             |
| Q8-11, 13-16<br>U1     | 1853-0318<br>1820-0914<br>(9307)    | VL (16)   | 8           |

**REFERENCE DESIGNATIONS**

| A2  |
|---|
| C1-3<br>CR1<br>DS1-9<br>J1<br>L1<br>Q1-16<br>R1-35<br>S1, 2<br>U1 |