

User Guide

Cell Master

MT8212E and MT8213E

MT8212E

2 MHz to 4 GHz Cable and Antenna Analyzer
100 kHz to 4 GHz Spectrum Analyzer
10 MHz to 4 GHz Power Meter

MT8213E

2 MHz to 6 GHz Cable and Antenna Analyzer
100 kHz to 6 GHz Spectrum Analyzer
10 MHz to 6 GHz Power Meter

The Anritsu logo is displayed in a bold, sans-serif font. The letter 'A' is stylized with a diagonal slash through it.

Anritsu Company
490 Jarvis Drive
Morgan Hill, CA 95037-2809
USA

Part Number: 10580-00250
Revision: D
Published: May 2010
Copyright 2009 Anritsu Company

www.valuetronics.com

WARRANTY

The Anritsu product(s) listed on the title page is (are) warranted against defects in materials and workmanship for one year from the date of shipment.

Anritsu's obligation covers repairing or replacing products which prove to be defective during the warranty period. Buyers shall prepay transportation charges for equipment returned to Anritsu for warranty repairs. Obligation is limited to the original purchaser. Anritsu is not liable for consequential damages.

LIMITATION OF WARRANTY

The foregoing warranty does not apply to Anritsu connectors that have failed due to normal wear. Also, the warranty does not apply to defects resulting from improper or inadequate maintenance by the Buyer, unauthorized modification or misuse, or operation outside of the environmental specifications of the product. No other warranty is expressed or implied, and the remedies provided herein are the Buyer's sole and exclusive remedies.

DISCLAIMER OF WARRANTY

DISCLAIMER OF WARRANTIES. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, ANRITSU COMPANY AND ITS SUPPLIERS DISCLAIM ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WITH REGARD TO THE SOFTWARE PRODUCT. THE USER ASSUMES THE ENTIRE RISK OF USING THE PROGRAM. ANY LIABILITY OF PROVIDER OR MANUFACTURER WILL BE LIMITED EXCLUSIVELY TO PRODUCT REPLACEMENT.

NO LIABILITY FOR CONSEQUENTIAL DAMAGES. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL ANRITSU COMPANY OR ITS SUPPLIERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR ANY OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OF OR INABILITY TO USE THE SOFTWARE PRODUCTS, EVEN IF ANRITSU COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES AND JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

TRADEMARK ACKNOWLEDGMENTS

VxWorks is a registered trademark, and WindML is a trademark of Wind River Systems, Inc. Cell Master is a trademark of Anritsu Company. Google Earth is a trademark of Google Inc. Windows is a registered trademark of Microsoft Corporation.

NOTICE

Anritsu Company has prepared this manual for use by Anritsu Company personnel and customers as a guide for the proper installation, operation and maintenance of Anritsu Company equipment and computer programs. The drawings, specifications, and information contained herein are the property of Anritsu Company, and any unauthorized use or disclosure of these drawings, specifications, and information is prohibited; they shall not be reproduced, copied, or used in whole or in part as the basis for manufacture or sale of the equipment or software programs without the prior written consent of Anritsu Company.

UPDATES

Updates, if any, can be downloaded from the Documents area of the Anritsu web site at: <http://www.us.anritsu.com>

DECLARATION OF CONFORMITY

Manufacturer's Name: ANRITSU COMPANY

Manufacturer's Address: Microwave Measurements Division
490 Jarvis Drive
Morgan Hill, CA 95037-2809
USA

declares that the product specified below:

Product Name: Cell Master

Model Number: MT8212E, MT8213E

conforms to the requirement of:

EMC Directive: 2004/108/EC
Low Voltage Directive: 2006/95/EC

Electromagnetic Compatibility: EN61326:2006

Emissions: EN55011: 2007 Group 1 Class A

Immunity: EN 61000-4-2:1995 +A1:1998 +A2:2001 4kV CD, 8kV AD
EN 61000-4-3:2006 +A1:2008 3V/m
EN 61000-4-4:2004 0.5kV SL, 1kV PL
EN 61000-4-5:2006 0.5kV L-L, 1kV L-E
EN 61000-4-6: 2007 3V
EN 61000-4-11: 2004 100% @ 20msec

Electrical Safety Requirement:

Product Safety: EN 61010-1:2001

Morgan Hill, CA


Eric McLean, Corporate Quality Director

23 DEC 2009
Date

European Contact: For Anritsu product EMC & LVD information, contact Anritsu LTD, Rutherford Close, Stevenage Herts, SG1 2EF UK, (FAX 44-1438-740202)

产品中有毒有害物质或元素的名称及含量

For Chinese Customers Only YLYB

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 [Cr(VI)]	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷线路板 (PCA)	×	○	×	×	○	○
机壳、支架 (Chassis)	×	○	×	×	○	○
LCD	×	×	×	×	○	○
其他(电缆、风扇、 连接器等) (Appended goods)	×	○	×	×	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。
 ×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。

环保使用期限



这个标记是根据 2006/2/28 公布的「电子信息产品污染控制管理办法」以及 SJ/T 11364-2006 「电子信息产品污染控制标识要求」的规定，适用于在中国销售的电子信息产品的环保使用期限。仅限于在遵守该产品的安全规范及使用注意事项的基础上，从生产日起算的该年限内，不会因产品所含有害物质的泄漏或突发性变异，而对环境污染，人身及财产产生深刻地影响。
 注：电池的环保使用期限是 5 年。生产日期标于产品序号的前四码（如 S/N 0728XXXX 为 07 年第 28 周生产）。

Equipment marked with the Crossed-out Wheelie Bin symbol complies with the European Parliament and Council Directive 2002/96/EC (the "WEEE Directive") in the European Union.



For Products placed on the EU market after August 13, 2005, please contact your local Anritsu representative at the end of the product's useful life to arrange disposal in accordance with your initial contract and the local law.

CE Conformity Marking

Anritsu affixes the CE Conformity marking onto its conforming products in accordance with Council Directives of The Council Of The European Communities in order to indicate that these products conform to the EMC and LVD directive of the European Union (EU).



C-tick Conformity Marking

Anritsu affixes the C-tick marking onto its conforming products in accordance with the electromagnetic compliance regulations of Australia and New Zealand in order to indicate that these products conform to the EMC regulations of Australia and New Zealand.



Notes On Export Management

This product and its manuals may require an Export License or approval by the government of the product country of origin for re-export from your country.

Before you export this product or any of its manuals, please contact Anritsu Company to confirm whether or not these items are export-controlled.

When disposing of export-controlled items, the products and manuals need to be broken or shredded to such a degree that they cannot be unlawfully used for military purposes.


Mercury Notification

This product uses an LCD backlight lamp that contains mercury. Disposal may be regulated due to environmental considerations. Please contact your local authorities or, within the United States, the Electronics Industries Alliance (www.eiae.org) for disposal or recycling information.

VxWorks Runtime
License 2000-1189



WindML Target License
2000-1372



NI Device License
3-2000-1486



WindRiver USB Runtime License
2000-1421



Safety Symbols

To prevent the risk of personal injury or loss related to equipment malfunction, Anritsu Company uses the following symbols to indicate safety-related information. For your own safety, please read the information carefully *before* operating the equipment.

Symbols Used in Manuals

Danger



This indicates a very dangerous procedure that could result in serious injury or death, or loss related to equipment malfunction, if not performed properly.

Warning



This indicates a hazardous procedure that could result in light-to-severe injury or loss related to equipment malfunction, if proper precautions are not taken.

Caution



This indicates a hazardous procedure that could result in loss related to equipment malfunction if proper precautions are not taken.

Safety Symbols Used on Equipment and in Manuals

The following safety symbols are used inside or on the equipment near operation locations to provide information about safety items and operation precautions. Ensure that you clearly understand the meanings of the symbols and take the necessary precautions *before* operating the equipment. Some or all of the following five symbols may or may not be used on all Anritsu equipment. In addition, there may be other labels attached to products that are not shown in the diagrams in this manual.



This indicates a prohibited operation. The prohibited operation is indicated symbolically in or near the barred circle.



This indicates a compulsory safety precaution. The required operation is indicated symbolically in or near the circle.



This indicates a warning or caution. The contents are indicated symbolically in or near the triangle.



This indicates a note. The contents are described in the box.



These indicate that the marked part should be recycled.

For Safety

Warning



Always refer to the operation manual when working near locations at which the alert mark, shown on the left, is attached. If the operation, etc., is performed without heeding the advice in the operation manual, there is a risk of personal injury. In addition, the equipment performance may be reduced. Moreover, this alert mark is sometimes used with other marks and descriptions indicating other dangers.

Warning



or



When supplying power to this equipment, connect the accessory 3-pin power cord to a 3-pin grounded power outlet. If a grounded 3-pin outlet is not available, use a conversion adapter and ground the green wire, or connect the frame ground on the rear panel of the equipment to ground. If power is supplied without grounding the equipment, there is a risk of receiving a severe or fatal electric shock.

Warning



This equipment can not be repaired by the operator. Do not attempt to remove the equipment covers or to disassemble internal components. Only qualified service technicians with a knowledge of electrical fire and shock hazards should service this equipment. There are high-voltage parts in this equipment presenting a risk of severe injury or fatal electric shock to untrained personnel. In addition, there is a risk of damage to precision components.

Caution



Electrostatic Discharge (ESD) can damage the highly sensitive circuits in the instrument. ESD is most likely to occur as test devices are being connected to, or disconnected from, the instrument's front and rear panel ports and connectors. You can protect the instrument and test devices by wearing a static-discharge wristband. Alternatively, you can ground yourself to discharge any static charge by touching the outer chassis of the grounded instrument before touching the instrument's front and rear panel ports and connectors. Avoid touching the test port center conductors unless you are properly grounded and have eliminated the possibility of static discharge.

Repair of damage that is found to be caused by electrostatic discharge is not covered under warranty.

Table of Contents

Chapter 1—General Information

1-1	Introduction	1-1
1-2	Chapter Overview	1-1
1-3	Available Models	1-1
1-4	Available Options	1-2
1-5	Standard Accessories	1-3
1-6	Optional Accessories	1-4
1-7	Additional Documents	1-4
1-8	General Description	1-4
1-9	Cell Master Specifications	1-5
1-10	Preventive Maintenance	1-5
1-11	Calibration Requirements	1-5
1-12	Annual Verification	1-5
1-13	ESD Caution	1-6
1-14	Battery Replacement	1-6
1-15	Soft Carrying Case	1-8
1-16	Tilt Bail Stand	1-10
1-17	Secure Environment Workplace	1-11
	Cell Master Memory Types	1-11
	Erase All User Files in Internal Memory	1-11
	Recommended Usage in a Secure Environment	1-12

Chapter 2—Instrument Overview

2-1	Introduction	2-1
2-2	Chapter Overview	2-1
2-3	Turning On the Cell Master	2-1
2-4	Front Panel Overview	2-2
	Front Panel Keys	2-3
	Touch Screen Keys	2-5
	Keypad Menu Keys (1 to 9)	2-5
	LED Indicators	2-6
2-5	Display Overview	2-6
2-6	Test Panel Connector Overview	2-9

Table of Contents (Continued)

2-7	Symbols and Indicators	2-11
	Calibration Symbols	2-11
	Battery Symbols	2-11
	Additional Symbols	2-12
2-8	Data Entry	2-13
	Numeric Values	2-13
	Parameter Setting	2-13
	Text Entry	2-13
2-9	Mode Selector Menu	2-14

Chapter 3—Quick Start Guide

3-1	Introduction	3-1
3-2	Measurement Mode Selection	3-1
3-3	Cable & Antenna Analyzer	3-2
	Select the Measurement Type	3-2
	Set the Frequency	3-2
	Set the Amplitude	3-2
	Turn on Markers	3-3
	Single Limit Line	3-4
	DTF Setup	3-5
	Calibrate with OSL Calibration	3-6
3-4	Spectrum Analyzer	3-7
	Set Start and Stop Frequencies	3-7
	Enter the Center Frequency	3-7
	Select a Signal Standard	3-7
	Set the Measurement Frequency Bandwidth	3-7
	Set the Amplitude	3-8
	Power Offset Set Up for Compensating External Loss	3-8
	Set the Span	3-8
	Single Limit Line	3-9
	Create a Limit Envelope	3-9
	Setting Up Markers	3-10
	Select a Smart Measurement Type	3-11
3-5	Saving Measurements	3-12
3-6	Useful MST Utilities	3-13
	Converting Files to .DAT File Format	3-13
	Group Edit	3-14
	Print All to PDF	3-15

Table of Contents (Continued)

Chapter 4—File Management

4-1	Introduction	4-1
4-2	Managing Files	4-1
	Save Files	4-1
	Save Dialog Box	4-2
	Quick Name Keys	4-2
	Quick Name Matrix	4-2
	Recall Files	4-4
	Recall Dialog Box	4-4
	Copying Files	4-5
	Deleting Files	4-6
	Delete Dialog Box	4-6
4-3	File Menu Overview	4-7
4-4	File Menu	4-8
	Save Menu	4-9
	Save Location Menu	4-10
	Save On Event Menu	4-11
	Recall Menu	4-12
	Copy Menu	4-13
	Delete Menu	4-14

Chapter 5—System Operations

5-1	Introduction	5-1
5-2	System Menu Overview	5-2
5-3	System Menu	5-3
	System Options Menu	5-4
	Display Settings Menu	5-5
	Reset Menu	5-6
5-4	Preset Menu	5-7
5-5	Self Test	5-8
5-6	Updating the Cell Master Firmware	5-8
5-7	Cell Master Firmware Emergency Repair	5-9

Chapter 6—GPS (Option 31)

6-1	Introduction	6-1
6-2	Chapter Overview	6-1
6-3	Activating the GPS Feature	6-1
6-4	Saving and Recalling Traces with GPS Information	6-3
	Saving Traces with GPS Information	6-3
	Recalling GPS Information	6-3
6-5	GPS Menu	6-4

Table of Contents (Continued)

Chapter 7—Bias Tee (Option 10)

7-1	Overview	7-1
-----	----------------	-----

Chapter 8—Master Software Tools

8-1	Introduction	8-1
8-2	MST Overview	8-1
8-3	Feature Overview	8-1
8-4	Installing MST	8-2
8-5	Connecting to the Instrument	8-2
8-6	Updating Cell Master Firmware	8-2

Appendix A—Measurement Guides

A-1	Introduction	A-1
-----	--------------------	-----

Index

Chapter 1 — General Information

1-1 Introduction

This chapter provides information about frequency range, available options, additional documents, general overview, preventive maintenance, and annual verification requirements for the Anritsu Handheld MT821xE Cell Master models. Throughout this manual, the term Cell Master will refer to both the MT8212E and MT8213E.

1-2 Chapter Overview

- [“Available Models” on page 1-1](#)
- [“Available Options” on page 1-2](#)
- [“Standard Accessories” on page 1-3](#)
- [“Optional Accessories” on page 1-4](#)
- [“Additional Documents” on page 1-4](#)
- [“General Description” on page 1-4](#)
- [“Cell Master Specifications” on page 1-5](#)
- [“Preventive Maintenance” on page 1-5](#)
- [“Calibration Requirements” on page 1-5](#)
- [“Annual Verification” on page 1-5](#)
- [“ESD Caution” on page 1-6](#)
- [“Battery Replacement” on page 1-6](#)
- [“Soft Carrying Case” on page 1-8](#)
- [“Tilt Bail Stand” on page 1-10](#)
- [“Secure Environment Workplace” on page 1-11](#)

1-3 Available Models

Table 1-1 lists the Cell Master models and frequency range described in this User Guide.

Table 1-1. Cell Master Model

Model	Frequency Range
MT8212E	Cable & Antenna Analyzer, 2 MHz to 4 GHz Spectrum Analyzer, 100 kHz to 4 GHz Power Meter, 10 MHz to 4 GHz
MT8213E	Cable & Antenna Analyzer, 2 MHz to 6 GHz Spectrum Analyzer, 100 kHz to 6 GHz Power Meter, 10 MHz to 6 GHz

1-4 Available Options

Available options for the Cell Master is shown in [Table 1-2](#).

Table 1-2. Available Options

MT8212E	MT8213E	Description
MT8212E-0021	MT8213E-0021	2-Port Transmission Measurement
MT8212E-0010	MT8213E-0010	Bias-Tee
MT8212E-0031	MT8213E-0031	GPS Receiver (Requires Antenna P/N 2000-1528-R)
MT8212E-0019	MT8213E-0019	High-Accuracy Power Meter (Requires External Power Sensor)
MT8212E-0025	MT8213E-0025	Interference Analyzer ⁽¹⁾
MT8212E-0027	MT8213E-0027	Channel Scanner
MT8212E-0431	MT8213E-0431	Coverage Mapping ⁽¹⁾
MT8212E-0090	MT8213E-0090	Gated Sweep
MT8212E-0028	MT8213E-0028	C/W Signal Generator (Requires CW Signal Generator Kit, P/N 69793)
MT8212E-0040	MT8213E-0040	GSM/GPRS/EDGE RF Signal Analyzer
MT8212E-0041	MT8213E-0041	GSM/GPRS/EDGE Demodulated Signal Analyzer
MT8212E-0044	MT8213E-0044	W-CDMA/HSDPA RF Signal Analyzer
MT8212E-0045	MT8213E-0045	W-CDMA Demodulated Signal Analyzer
MT8212E-0065	MT8213E-0065	W-CDMA/HSDPA Demodulated Signal Analyzer
MT8212E-0035	MT8213E-0035	W-CDMA/HSDPA Over-the-Air Signal Analyzer ⁽¹⁾
MT8212E-0060	MT8213E-0060	TD-SCDMA/HSDPA RF Signal Analyzer
MT8212E-0061	MT8213E-0061	TD-SCDMA/HSDPA Demodulated Signal Analyzer
MT8212E-0038	MT8213E-0038	TD-SCDMA/HSDPA Over-the-Air Signal Analyzer
MT8212E-0541	MT8213E-0541	LTE RF Measurements ⁽¹⁾
MT8212E-0542	MT8213E-0542	LTE Modulation Measurement ⁽¹⁾
MT8212E-0546	MT8213E-0546	LTE Over-the-Air Measurements ⁽¹⁾
MT8212E-0042	MT8213E-0042	cdmaOne/CDMA2000 1X RF Signal Analyzer
MT8212E-0043	MT8213E-0043	cdmaOne/CDMA2000 1X Demodulated Signal Analyzer
MT8212E-0033	MT8213E-0033	cdmaOne/CDMA2000 1X Over-the-Air Signal Analyzer ⁽¹⁾
MT8212E-0062	MT8213E-0062	CDMA2000 1xEV-DO RF Signal Analyzer
MT8212E-0063	MT8213E-0063	CDMA2000 1xEV-DO Demodulated Signal Analyzer
MT8212E-0034	MT8213E-0034	CDMA2000 1xEV-DO Over-the-Air Signal Analyzer ⁽¹⁾
MT8212E-0046	MT8213E-0046	IEEE 802.16 Fixed WiMAX RF Signal Analyzer
MT8212E-0047	MT8213E-0047	IEEE 802.16 Fixed WiMAX Demodulated Signal Analyzer

Table 1-2. Available Options

MT8212E	MT8213E	Description
MT8212E-0066	MT8213E-0066	IEEE 802.16 Mobile WiMAX RF Signal Analyzer
MT8212E-0067	MT8213E-0067	IEEE 802.16 Mobile WiMAX Demodulated Signal Analyzer
MT8212E-0037	MT8213E-0037	IEEE 802.16 Mobile WiMAX Over-the-Air Signal Analyzer
MT8212E-0030	MT8213E-0030	ISDB-T Digital Video Measurements
MT8212E-0032	MT8213E-0032	ISDB-T SFN Measurements
MT8212E-0051	MT8213E-0051	T1 Analyzer ⁽²⁾
MT8212E-0052	MT8213E-0052	E1 Analyzer ⁽²⁾
MT8212E-0053	MT8213E-0053	T3/T1 Analyzer ⁽²⁾
MT8212E-0098	MT8213E-0098	Standard Calibration (ANSI Z540-1-1994)
MT8212E-0099	MT8213E-0099	Premium Calibration (ANSI Z540-1-1994 plus test data)

1. Requires GPS Receiver Option 0031.
2. Mutually exclusive.

1-5 Standard Accessories

The Anritsu Cell Master includes a one year warranty which includes: battery, firmware, software, and Certificate of Calibration and Conformance. The following items are supplied with the product.

Table 1-3. Standard Accessories for Cell Master Models

Part Number	Description
10580-00250	Cell Master User Guide
3-68736	Soft Carrying Case
2300-498	MST CD: Master Software Tools, User/Measurement Guides, Programming Manual, Troubleshooting Guides, Application Notes, Data Sheet
633-44	Rechargeable Li-Ion Battery
40-168-R	AC-DC Adapter
806-141-R	Automotive Cigarette Lighter Adapter
3-2000-1498	USB A/5-pin mini-B Cable, 10 feet/305 cm
11410-00485	Cell Master MT821xE Technical Data Sheet

Caution

When using the Automotive Cigarette Lighter Adapter, Anritsu Part Number 806-141-R, always verify that the supply is rated for a minimum of 60 Watts at 12 VDC, and that the socket is clear of any dirt or debris. If the adapter plug becomes hot to the touch during operation, then discontinue use immediately.

1-6 Optional Accessories

The Cell Master Technical Data Sheet (P/N 11410-00485) contains a list and description of available optional accessories. The data sheet is available on the Master Software Tools CD-ROM provided with the instrument or the Anritsu web site: <http://us.anritsu.com>.

1-7 Additional Documents

This user guide is specific to the Cell Master and includes a general description about the Cell Master. For information about Cable & Antenna Measurement, Spectrum Analysis, Interference Analysis, 2-port Transmission Measurements, Power Meter, 3GPP Signal Analysis, 3GPP2 Signal Analysis, WiMAX Signal Analysis, Backhaul Analyzer, and Master Software Tools, refer to the individual Measurement Guides listed in [Appendix A, "Measurement Guides"](#).

1-8 General Description

The Cell Master MT821xE is a hand held multi-function Base Station Analyzer designed to make Cable and Antenna Analysis, Spectrum Analysis and Power Meter measurements in the field. In addition, the Cell Master can be equipped with 2-port Transmission Measurement capability, Interference Analyzer, Channel Scanner, Coverage Mapping, CW Signal Generator, GSM/EDGE Analyzer, W-CDMA/HSDPA Analyzer, TD-SCDMA Analyzer, CDMA Analyzer, EVDO Analyzer, Fixed and Mobile WiMAX Analyzer, T1/T3 and E1 Analyzer, thus eliminating the need to carry multiple instruments to the field.

The cable & antenna analyzer includes Return Loss, Cable Loss, VSWR, Distance-to-fault -Return Loss, Distance-to-Fault SWR, 1-port phase and smith chart measurements. The 2-port transmission measurement option includes two power levels and access to a built-in 32V bias tee.

The bright 8.4" TFT color display provides easy viewing in a variety of lighting conditions. The Cell Master MT821xE is equipped with a Li-Ion battery delivering more than three hours of battery life. The combination of a touch screen and keypad enables users to navigate menus with the touch screen and enter numbers with the keypad. The internal memory is large enough to store approximately 2,000 traces or setups. Measurements and setups can also be stored in a USB flash drive or transferred to a PC using the included USB cable. A GPS receiver can be added to Cell Master MT821xE.

Note For USB storage, Anritsu recommends P/N 2000-1520-R USB Flash Drive.
--

Master Software Tools (MST), a PC based software program, can be used to create reports, view and organize data, analyze historical data, add markers and limit lines, rename traces, trace analysis, 2D and 3D Folder Spectrogram of Spectrum Analyzer data and Mapping functionality. Please see Chapter 6 for a brief overview of Master Software Tools and the Master Software Tools Users Guide for additional information. A .pdf file of the User Guide is available on the MST CD-ROM provided with the Cell Master.

1-9 Cell Master Specifications

Refer to the Cell Master Technical Data Sheet (P/N 11410-00485) for general specifications, detailed measurement specifications for all available measurement modes, ordering information, power sensors, and available accessories. The data sheet is included with the instrument and also available on the Master Software Tools CD-ROM. It is also available on the Anritsu web site: <http://us.anritsu.com>.

1-10 Preventive Maintenance

Cell Master preventive maintenance consists of cleaning the unit and inspecting and cleaning the RF connectors on the instrument and all accessories. Clean the Cell Master with a soft, lint-free cloth dampened with water or water and a mild cleaning solution.

Caution To avoid damaging the display or case, do not use solvents or abrasive cleaners.

Clean the RF connectors and center pins with a cotton swab dampened with denatured alcohol. Visually inspect the connectors. The fingers of the N(f) connectors and the pins of the N(m) connectors should be unbroken and uniform in appearance. If you are unsure whether the connectors are undamaged, gauge the connectors to confirm that the dimensions are correct.

Visually inspect the test port cable(s). The test port cable should be uniform in appearance, and not stretched, kinked, dented, or broken.

1-11 Calibration Requirements

Anritsu recommends annual calibration and performance verification by local Anritsu service centers. The Cable and Antenna Analyzer mode requires calibration standards for OPEN, SHORT, and LOAD (OSL) or InstaCal module, which are sold separately.

1-12 Annual Verification

Anritsu recommends an annual calibration and performance verification of the Cell Master and the OSL calibration components and InstaCal module by local Anritsu service centers.

The Cell Master is self-calibrating and there are no field-adjustable components. The OSL calibration components are crucial to the integrity of the calibration. As a result, they must be verified periodically to ensure performance conformity. This is especially important if the OSL calibration components have been accidentally dropped or over-torqued.

Contact information for Anritsu Service Centers is available at:

<http://www.anritsu.com/Contact.asp>

1-13 ESD Caution

The Cell Master, like other high performance instruments, is susceptible to electrostatic discharge (ESD) damage. Coaxial cables and antennas often build up a static charge, which (if allowed to discharge by connecting directly to the Cell Master without discharging the static charge) may damage the Cell Master input circuitry. Cell Master operators must be aware of the potential for ESD damage and take all necessary precautions.

Operators should exercise practices outlined within industry standards such as JEDEC-625 (EIA-625), MIL-HDBK-263, and MIL-STD-1686, which pertain to ESD and ESDS devices, equipment, and practices. Because these apply to the Cell Master, it is recommended that any static charges that may be present be dissipated before connecting coaxial cables or antennas to the Cell Master. This may be as simple as temporarily attaching a short or load device to the cable or antenna prior to attaching to the Cell Master. It is important to remember that the operator may also carry a static charge that can cause damage. Following the practices outlined in the above standards will ensure a safe environment for both personnel and equipment.

1-14 Battery Replacement

The battery can be replaced without the use of tools. The battery compartment is located on the lower left side of the instrument (when you are facing the measurement display). Slide the battery door down, towards the bottom of the instrument, to remove it. Remove the battery pack from the instrument by grabbing the battery lanyard and pulling out. Replacement is the opposite of removal. The battery key side (slot below the contacts) should be facing the front on the unit and slide in first.

Note

When inserting the battery the battery label should face the back of the instrument and the guide slot on the battery should be below the contacts. If the battery door does not latch closed, the battery may be inserted incorrectly.



Figure 1-1. Battery Compartment Door

The battery that is supplied with the Cell Master may need charging before use. The battery can be charged while it is installed in the Cell Master by using either the AC-DC Adapter (40-168-R) or the Automotive Cigarette Lighter Adapter (806-141-R), or outside the Cell Master with the optional Dual Battery Charger (2000-1374). Refer to [“Battery Symbols” on page 2-11](#) for a description of battery symbols.

Note Use only Anritsu Company approved batteries, adapters, and chargers with this instrument.

Caution When using the Automotive Cigarette Lighter Adapter, Anritsu Part Number 806-141-R, always verify that the supply is rated for a minimum of 60 Watts @ 12 VDC, and that the socket is clear of any dirt or debris. If the adapter plug becomes hot to the touch during operation, then discontinue use immediately.

Note Anritsu Company recommends removing the battery for long-term storage of the instrument.

1-15 Soft Carrying Case

The Cell Master can be operated while in the soft carrying case. On the back of the case is a large storage pouch for accessories and supplies.

To install the instrument into the soft carrying case:

1. The front panel of the case is secured with hook-and-loop fasteners. Fully close the front panel of the case. When closed, the front panel supports the shape of the case while you are inserting the Cell Master.
2. Place the soft carrying case face down on a stable surface, with the front panel fully closed and laying flat.

Note

The soft case has two zippers near the back. The zipper closer to the front of the case opens to install and remove the instrument. The zipper closer to the back of the case opens an adjustable support panel that can be used to provide support for improved stability and air flow while the instrument is in the case. This support panel also contains the storage pouch.

3. Open the zippered back of the case.
4. Insert the instrument face down into the case, take care that the connectors are properly situated in the case top opening. You may find it easier to insert the connectors first, then pull the corners over the bottom of the Cell Master.



Figure 1-2. Instrument Inserted into the Soft Carrying Case

5. Close the back panel and secure with the zipper to secure the Cell Master.

The soft carrying case includes a detachable shoulder strap, which can be connected to the D-rings of the case.

Caution	The soft case has panel openings for the fan inlet and exhaust ports. Do not block the air flow through the panels when the unit is operating.
----------------	--

1-16 Tilt Bail Stand

A Tilt Bail is attached to the back of the Cell Master for desktop operation. The tilt bail provides two settings of backward tilt for improved stability. To deploy the tilt bail, pull the bottom of the tilt bail away from the back of the instrument. To store the tilt bail, push the bottom of the bail towards the back of the instrument until it attaches to the Cell Master.

Note

Do not use the tilt bail while the instrument is in the soft case. The soft case has an adjustable support panel in the back zipper.



Figure 1-3. Tilt Bail Extended

1-17 Secure Environment Workplace

This section details the types of memory in the Cell Master, how to delete stored user files in internal memory, and recommended usage in a secure environment workplace.

Cell Master Memory Types

The instrument contains non-volatile disk-on-a-chip memory, EEPROM, and volatile DRAM memory. The instrument does not have a hard disk drive or any other type of volatile or non-volatile memory.

Disk-On-A-Chip (DOC)

DOC is used for storage of instrument firmware, factory calibration information, user measurements, setups, and .jpg screen images. User information stored on the DOC is erased by the master reset process described below.

EEPROM

This memory stores the model number, serial number, and calibration data for the instrument. Also stored here are the user-set operating parameters such as frequency range. During the master reset process all operating parameter stored in the EEPROM are set to standard factory default values.

RAM Memory

This is volatile memory used to store parameters needed for the normal operation of the instrument along with current measurements. This memory is reset whenever the instrument is restarted.

External USB Flash Drive (not included with the instrument)

This memory may be selected as the destination for saved measurements and setups for the instrument. The user can also copy the contents of the internal disk-on-chip memory to the external flash memory for storage or data transfer. The external Flash USB can be reformatted or sanitized using software on a PC.

Refer to the [Chapter 4, “File Management”](#) for additional information on saving and copying files to the USB flash drive.

Erase All User Files in Internal Memory

Perform a Master Reset:

1. Turn the instrument on.
2. Press the **Shift** button then the **System** (8) button.
3. Press the System Options submenu key.
4. Press the Reset key, then the Master Reset key.
5. A dialog box will be displayed on the screen warning that all settings will be returned to factory default values and all user files will be deleted. This deletion is a standard file delete and does not involve overwriting exiting information.
6. Press the **ENTER** button to complete the master reset.
7. The instrument will reboot and the reset is complete.

Recommended Usage in a Secure Environment

Set the Cell Master to save files to the external USB Flash drive:

1. Attach the external Flash drive and turn the instrument on.
2. Press the **Shift** button then the **File** (7) button.
3. Press the **Save** submenu key.
4. Press the **Change Save Location** submenu key, then select the USB drive with the rotary knob, **Up/Down** arrow keys, or the touchscreen.
5. Press the **Set Location** submenu key.

The external USB drive is now the default location for saving files.

Note For USB storage, Anritsu recommends P/N 2000-1520-R USB Flash Drive.
--

Chapter 2 — Instrument Overview

2-1 Introduction

This chapter provides a brief overview of the Anritsu Cell Master. The intent of this chapter is to acquaint the user with the instrument. For detailed measurement information, refer to a specific measurement guide listed in [Appendix A, “Measurement Guides”](#).

2-2 Chapter Overview

- [“Turning On the Cell Master” on page 2-1](#)
- [“Front Panel Overview ” on page 2-2](#)
- [“Display Overview ” on page 2-6](#)
- [“Test Panel Connector Overview” on page 2-9](#)
- [“Symbols and Indicators” on page 2-11](#)
- [“Data Entry” on page 2-13](#)
- [“Mode Selector Menu” on page 2-14](#)

2-3 Turning On the Cell Master

The Anritsu Cell Master is capable of approximately three hours of continuous operation from a fully charged, field-replaceable battery (see [Section 1-14 “Battery Replacement” on page 1-6](#)). The Cell Master can also be operated from a 12 Vdc source (which will also simultaneously charge the battery). This can be achieved with either the Anritsu AC-DC Adapter (Anritsu part number 40-168-R) or the Automotive Cigarette Lighter Adapter (Anritsu part number 806-141-R). Both items are included with the Cell Master ([Table 1-3](#)).

Caution

When using the Automotive Cigarette Lighter Adapter, Anritsu Part Number 806-141-R, always verify that the supply is rated for a minimum of 60 Watts @ 12 VDC, and that the socket is clear of any dirt or debris. If the adapter plug becomes hot to the touch during operation, discontinue use immediately.

To turn on the Cell Master, press the green **On/Off** button on the front panel (Figure 2-1)

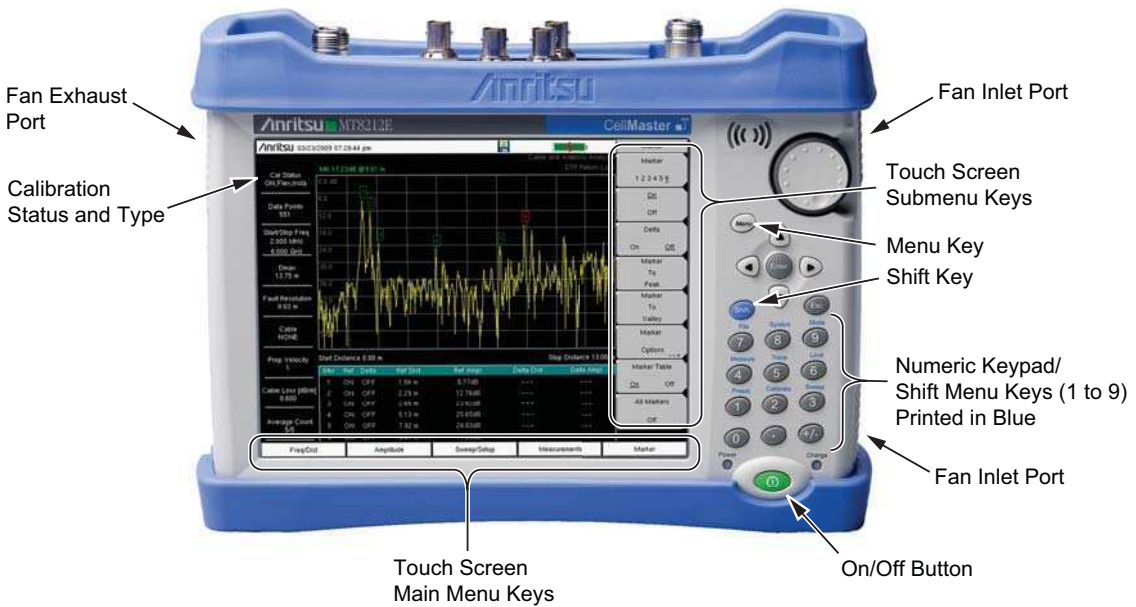


Figure 2-1. Cell Master Overview

The Cell Master takes approximately sixty seconds to complete power warm-up and to load the application software. At the completion of this process, the instrument is ready for use.

2-4 Front Panel Overview

The Cell Master menu-driven interface is easy to use and requires little training. The Cell Master uses a touch screen and keypad for data input. The five bottom menu keys and eight submenu keys on the right side are touch screen keys. The menu and submenu keys will vary depending upon the selected mode of operation, see “[Mode Selector Menu](#)” on page 2-14.

Numeric keys 1 through 9 are dual purpose, depending upon the current mode of operation. The dual-purpose keys are labeled with a number on the key itself and the alternate function is printed in blue above each of the keys. Use the blue **Shift** key to access the functions printed on the panel. The **Escape** key, used for aborting data entry, is the oval button located above numeric key 9. The rotary knob, the four arrow keys, and the keypad can be used to change the value of an active parameter.

The Menu key provides graphical icons of all the installed measurement modes and user defined short-cuts (see “[Menu Key](#)” on page 2-3). The locations of the keys are shown in [Figure 2-1](#).

Note Keep the fan inlet and exhaust ports clear of obstructions at all times for proper ventilation and cooling of the instrument.

Front Panel Keys

Menu Key

Press this key to display a grid of shortcut icons for installed measurement modes and user selected menus and setup files.

Figure 2-2 shows the **Menu** key screen with shortcut icons for the installed measurement modes. Touch one of the icons in the top two rows to change modes. These icons are preinstalled and can not be moved or deleted.

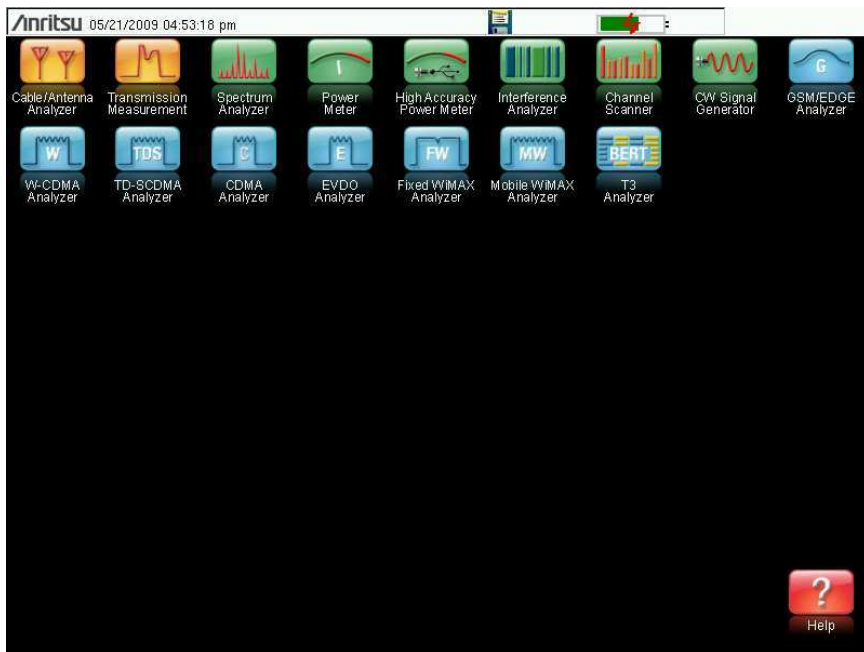


Figure 2-2. Menu Key Screen, Icons for Installed Measurements

Note

The display of the Menu screen will vary depending on Cell Master model and installed options.

Figure 2-3 shows the **Menu** key screen with shortcut icons for the installed measurement modes and four rows of user-defined shortcuts to menus and setup files.

Press and hold down any key for a few seconds to add a shortcut to this screen. To add shortcut setup files (.stp), open the recall menu and hold down on the file name for several seconds. Then select the location for the shortcut.



Figure 2-3. Menu Key Screen

User-defined shortcuts will stay in memory until deleted. To delete or move a shortcut button, press the **Menu** key then press and hold the shortcut for approximately 3 seconds. The Customize Button dialog box will open to allow a button to be deleted or moved. Press **Esc** to exit the Menu shortcut display.

Note

The Factory Default reset will delete all user created shortcut icons from the Menu screen. Refer to the [“Reset Menu”](#) on page 5-6 for additional information.

Help for the Menu shortcut screen is available by pressing the icon in the lower-right corner of the display.

Esc Key

Press this key to cancel any setting that is currently being made.

Enter Key

Press this key to finalize data input or select a highlighted item from a list.

Arrow Keys

The four arrow keys (around the **Enter** key) are used to scroll up, down, left, or right. The arrow keys can often be used to change a value or to change a selection from a list. This function is similar to the function of the rotary knob. The arrow keys are also used to move markers.

Shift Key

Pressing the **Shift** key and then a number key executes the function that is indicated in blue text above the number key. When the **Shift** key is active, its icon is displayed at the top-right of the measurement display area by the battery charge indicator.



Figure 2-4. Shift Key Icon

Number Keypad

The Number keypad has two functions: The primary function is number entry. The secondary function of the number keypad is to list various menus. See [“Keypad Menu Keys \(1 to 9\)” on page 2-5](#).

Rotary Knob

Turning the rotary knob changes numerical values, scrolls through selectable items from a list, and moves markers. Values or items may be within a dialog box or an edit window.

Touch Screen Keys

Main Menu Touch Screen Keys

These five main menu keys are horizontally arranged along the lower edge of the touch screen. The main menu key functions change to match specific instrument Mode settings. The main menu keys generate function-specific submenus. The various measurement modes are selected by pressing the **Shift** key and then the **Mode** (9) key. Descriptions of the various measurement modes can be found in the applicable Measurement Guides listed in [Appendix A, “Measurement Guides”](#).

Note	Available measurement modes are based on model and options purchased. Refer to Table 1-1 and Table 1-2 for additional information.
-------------	--

Submenu Touch Screen Keys

These submenu keys are arranged along the right-hand edge of the touch screen. The submenu labels change as instrument measurement settings change. The current submenu title is shown at the top of the submenu key block.

Keypad Menu Keys (1 to 9)

Pressing the **Shift** key and then a number key selects the menu function that is printed in blue characters above the number key. See [Figure 2-1 on page 2-2](#).

Not all Secondary Function Menus are active in various measurement modes. If any one of these menus is available in a specific instrument mode of operation, then it can be called from the number keypad. It may also be available from a main menu key or a submenu key.

The Preset Menu (1) and System Menu (8) are described in [Chapter 5, “System Operations”](#). The Sweep Menu (3), Measure Menu (4), Trace Menu (5), and Limit Menu (6) vary depending on measurement mode, see the Measurement Guides listed in [Appendix A](#) for information. The File Menu (7) is described in [Chapter 4, “File Management”](#). The Mode Menu (9) is described in [“Mode Selector Menu” on page 2-14](#).

LED Indicators

Power LED

The Power LED is located to the left of the **On/Off** key. The LED is solid green when the unit is on and slowly blinks when the unit is off but has external power.

Charge LED

The Charge LED is located to the right of the **On/Off** key. The LED slowly blinks when the battery is charging and is solid green when the battery is fully charged.

2-5 Display Overview

Figure 2-5 and Figure 2-6 illustrate some of the key information areas of the Cell Master in Cable & Antenna mode and Spectrum Analyzer mode. For detailed information on either mode, refer to the Measurement Guides listed in Appendix A, "Measurement Guides".

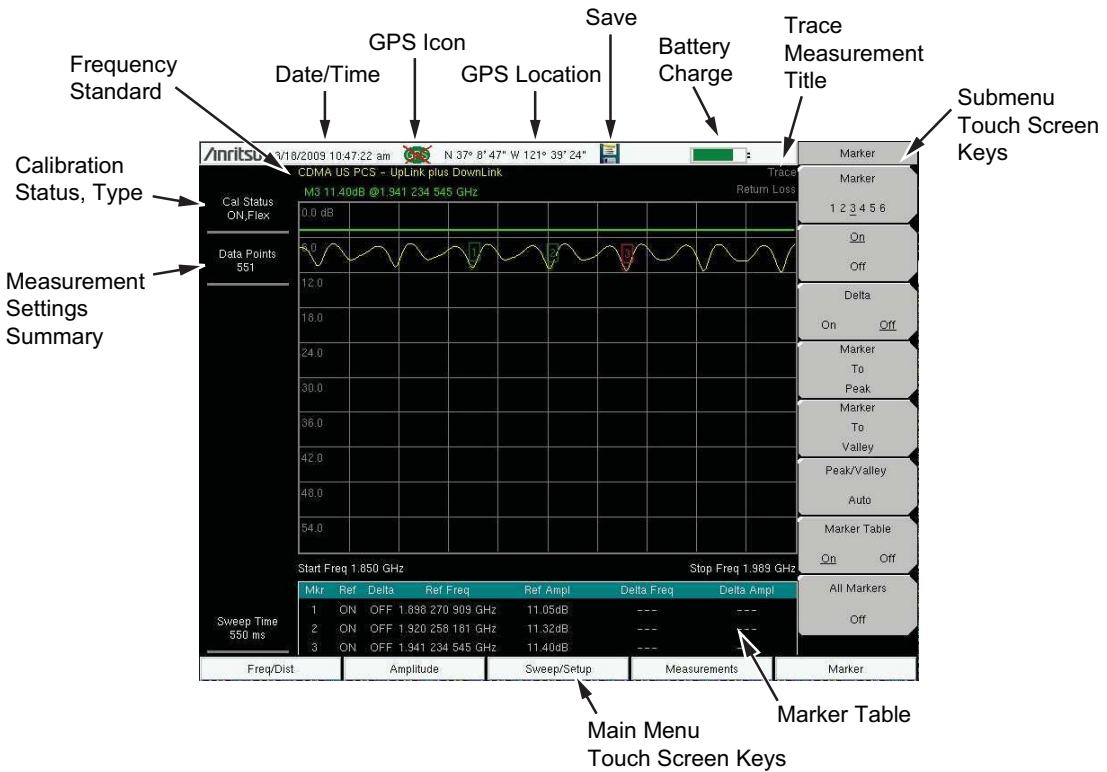


Figure 2-5. Cable & Antenna Analyzer Return Loss Measurement Display


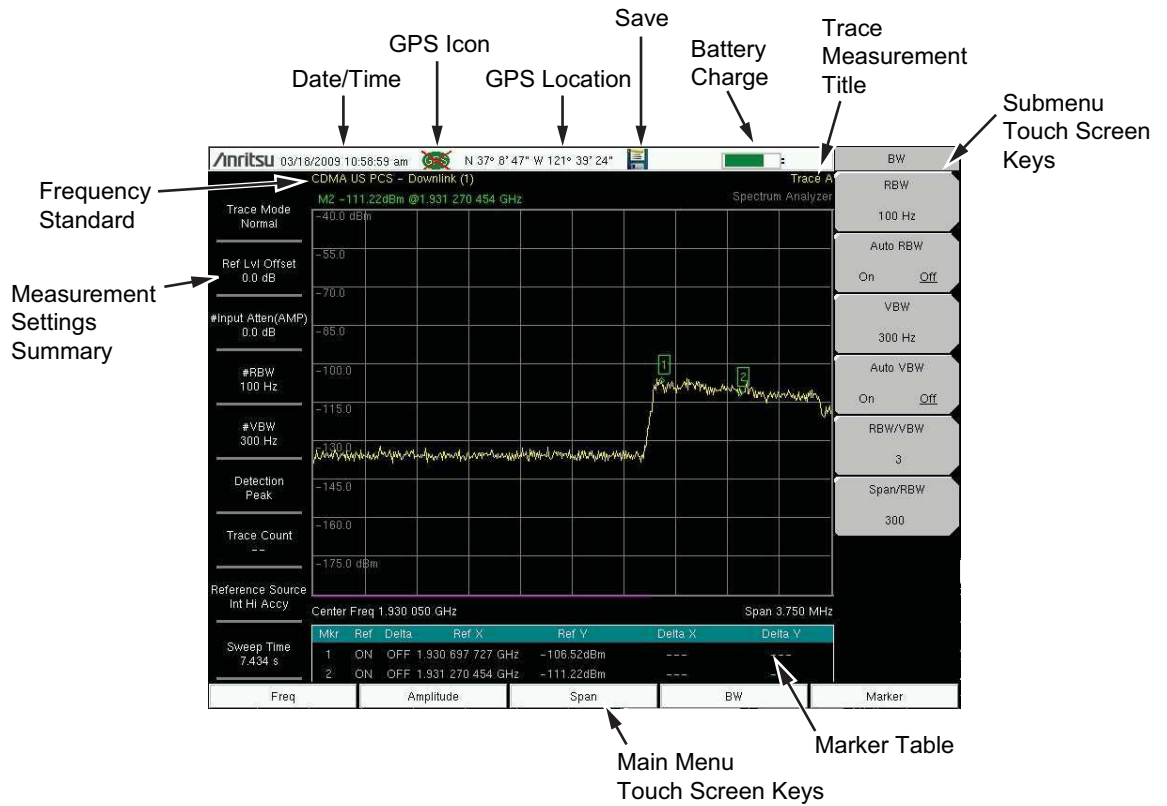


Figure 2-6. Spectrum Analyzer Display

In addition to the default color display, Cell Master offers the following display settings for the Spectrum Analyzer, Transmission Measurement, Interference Analyzer, Channel Scanner, CW generator, Power Meter, and High Accuracy Power Meter modes:


- Black & White** for printing and viewing in broad daylight conditions
- Night Vision** optimized for night-time viewing
- High Contrast** for other challenging viewing conditions

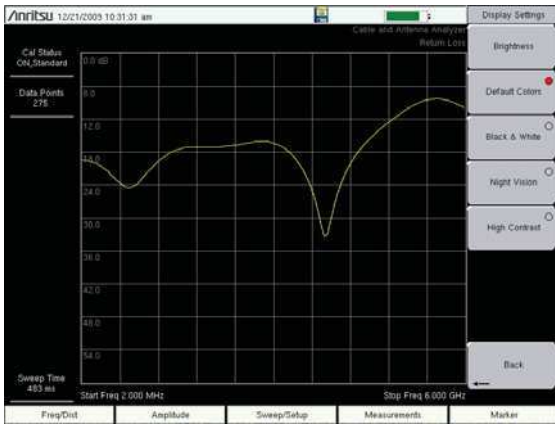


Default Colors



Black & White

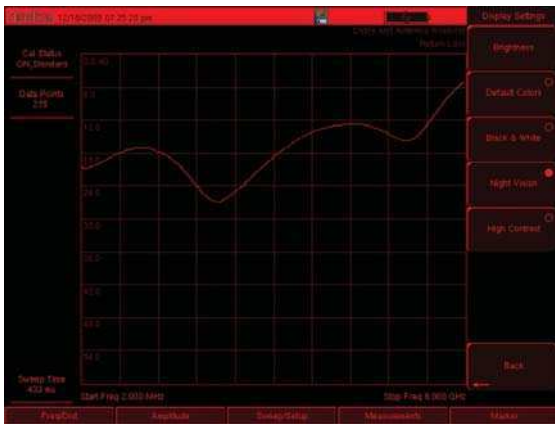

Night Vision

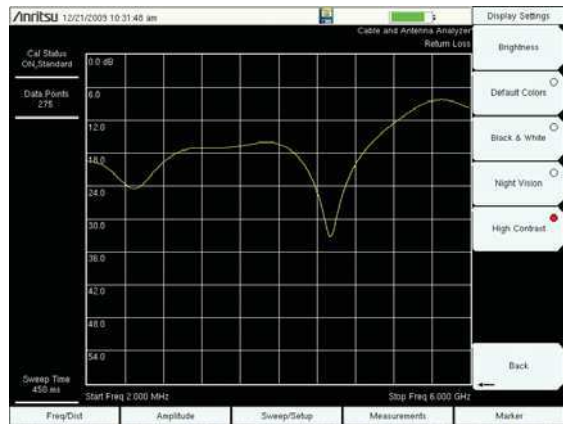

High Contrast

Figure 2-7. Cell Master Display Settings

2-6 Test Panel Connector Overview

Test panel connectors for the Cell Master are shown in [Figure 2-8](#).

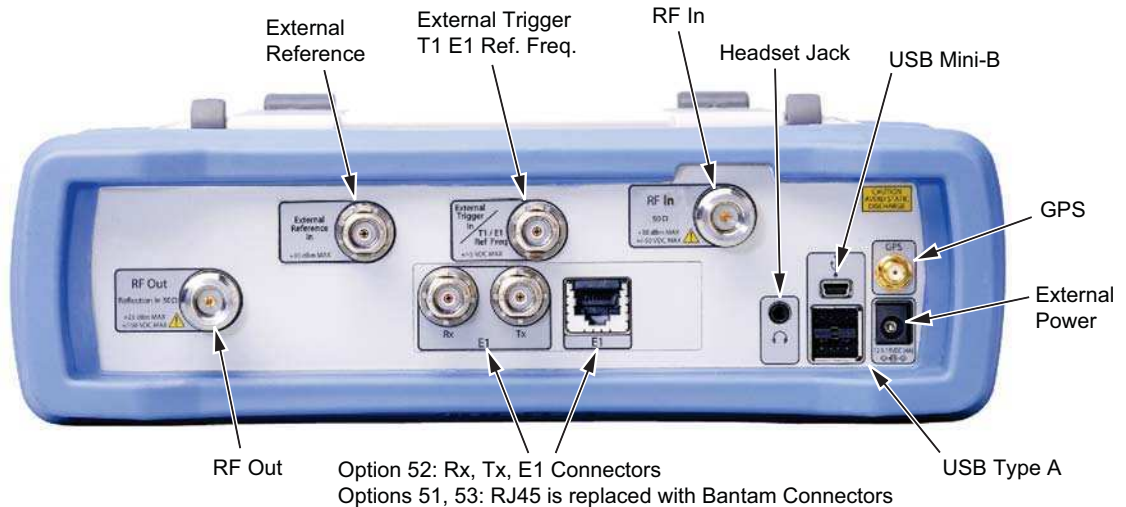


Figure 2-8. Test Panel Connector

External Power

The external power connector is used to power the unit and for battery charging. Input is 12 VDC to 15 VDC at up to 5.0 A. The green flashing Power LED near the power switch indicates that the instrument has external power.

Warning

When using the AC-DC Adapter, always use a three-wire power cable that is connected to a three-wire power line outlet. If power is supplied without grounding the equipment in this manner, then the user is at risk of receiving a severe or fatal electric shock.

USB Interface – Type A

The Cell Master has two Type A USB connectors that accept USB Flash Memory devices for storing measurements, setups data, and screen images.

USB Interface – Mini-B

The USB 2.0 Mini-B connector can be used to connect the Cell Master directly to a PC. The first time the Cell Master is connected to a PC, the normal USB device detection by the computer operating system will take place. The CD-ROM that is shipped with the instrument contains a driver for Windows XP that is installed when Master Software Tools is installed. Drivers are not available for earlier versions of the Windows operating system. During the driver installation process, place the CD-ROM in the computer drive and specify that the installation wizard should search the CD-ROM for the driver.

Note

For proper detection, Master Software Tools should be installed on the PC prior to connecting the Cell Master to the USB port.

Headset Jack

The headset jack provides audio output from the built-in AM/FM/SSB demodulator for testing and troubleshooting wireless communication systems. The jack accepts a 2.5 mm 3-wire miniature phone plug such as those commonly used with cellular telephones.

Ext Trigger In

A TTL signal that is applied to the External Trigger female BNC input connector causes a single sweep to occur. In the Spectrum Analyzer mode, it is used in zero span, and triggering occurs on the rising edge of the signal. After the sweep is complete, the resultant trace is displayed until the next trigger signal arrives.

RF In

50 Ω Type-N female connector. Maximum input is +26 dBm at 50 VDC.

RF Out/Reflection In

RF output, 50 impedance, for reflection measurements. Maximum input is +23 dBm at ± 50 VDC.

GPS Antenna Connector

The GPS antenna connection on the Cell Master is type SMA-female. GPS function is described in [Chapter 6, "GPS \(Option 31\)"](#).

Rx, Tx, E1 Connectors

These ports are used in T1/T3/E1 operations described in the Backhaul Measurement Guide (PN: 10580-00238) available on the Master Software Tools CD-ROM. Refer to [Appendix A, "Measurement Guides"](#) for additional information.

2-7 Symbols and Indicators

The following symbols and indicators indicate the instrument status or condition on the display.

Calibration Symbols

The current calibration status and type is displayed in the upper-left of the screen when in Cable & Antenna Analyzer mode. See [Figure 2-5 on page 2-6](#). The five status messages are described next.

Cal Status: ON, Flex

The Cell Master has been calibrated with discrete Open, Short, and Load components. This is a FlexCal calibration indicating it is possible to change the frequency range after calibration.

Cal Status: ON, Standard

The Cell Master has been calibrated with discrete Open, Short, and Load components. This is a Standard calibration indicating it is not possible to change the frequency range after calibration without performing another calibration.

Cal Status: ON, Flex, Insta

The Cell Master has been calibrated with the InstaCal module. This is a FlexCal calibration indicating it is possible to change the frequency range after calibration.

Cal Status: ON, Standard, Insta

The Cell Master has been calibrated with the InstaCal module. The Cell Master has been calibrated with discrete Open, Short, and Load components. This is a Standard calibration indicating it is not possible to change the frequency range after calibration without performing another calibration.

Cal Status Off:

The Cell Master has not been calibrated.

For calibration procedures refer to the Cable & Antenna Measurement Guide (PN: 10580-00241) listed in [Appendix A](#).

Battery Symbols

The battery symbol above the display indicates the charge remaining in the battery. The colored section inside the symbol changes size and color with the charge level.



Figure 2-9. Battery Status

Green: Battery is 30% to 100% charged

Yellow: Battery is 10% to 30% charged

Red: Battery 0% to 10% charged

Lightning Bolt: Battery is being charged (any color symbol)

Detailed battery information is also available in the Status dialog box (**System** > Status).

When either the AC-DC Adapter (40-168-R) or the Automotive Cigarette Lighter Adapter (806-141-R) is connected, the battery automatically receives a charge, and the battery symbol with the lightning bolt is displayed (Figure 2-10).



Figure 2-10. Battery Charging Icon

The green Charge LED flashes when the battery is charging, and remains on steady when the battery is fully charged.

Caution Use only Anritsu-approved batteries, adapters, and chargers with this instrument.

When operating from external power without a battery installed, the battery symbol is replaced by a red plug body (Figure 2-11).



Figure 2-11. Battery Not Installed

Additional Symbols

Single Sweep

Single Sweep is selected. Press Continuous in the **Sweep** menu to resume continuous sweeping.

Floppy Icon

Shortcut to the Save submenu. Touch the icon to open the touch screen keyboard for saving measurements, setups, or screen displays.

2-8 Data Entry

Numeric Values

Numeric values are changed using the rotary knob, arrow keys, or the keypad. Pressing one of the main menu keys will display a list of submenus on the right side of the touch screen. When the value on a submenu key is displayed in red, it is ready for changing. When using the rotary knob or arrow keys the changing value is shown on the submenu and in red on the graticule. When using the keypad, the new value is shown in red on the graticule and the submenu changes to Units. Selecting a unit for the new value completes the entry.

Parameter Setting

Pop-up list boxes or edit boxes are used to provide selection lists and selection editors. Scroll through a list of items or parameters with the arrow keys, the rotary knob, or the touch screen. These list boxes and edit boxes frequently display a range of possible values or limits for possible values.

Finalize the input by pressing the **Enter** key. At any time before finalizing the input, press the escape (**Esc**) key to abort the change and retain the previously existing setting.

Some parameters (such as for antennas or couplers) can be added to list boxes by creating them and importing them using Master Software Tools.

Text Entry

When entering text, as when saving a measurement, the touch screen keyboard is displayed ([Figure 2-12](#)). Characters are entered directly with the touch screen keyboard. The keypad can be used for numeric entry. The left and right arrow keys will scroll the cursor through the filename. See [“Save Menu” on page 4-9](#) for additional information.

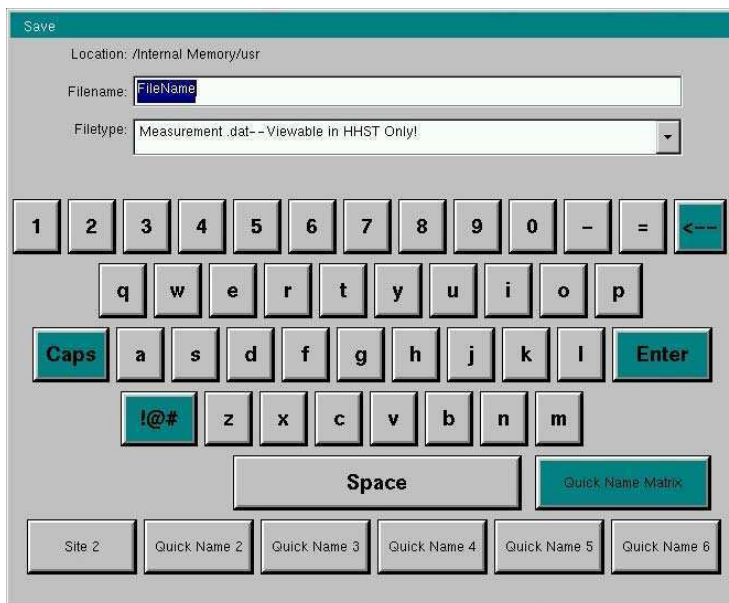


Figure 2-12. Touch Screen Keyboard

2-9 Mode Selector Menu

To access the functions under the Mode menu, select the **Shift** key, then the **Mode** (9) key. Use the directional arrow keys, the rotary knob, or the touch screen to highlight the selection, and press the **Enter** key to select. The list of modes that appear in this menu will vary depending upon the options that are installed and activated in the instrument. [Figure 2-13](#) is an example of the Mode menu. Your instrument may not show the same list. The current mode is displayed below the battery symbol.

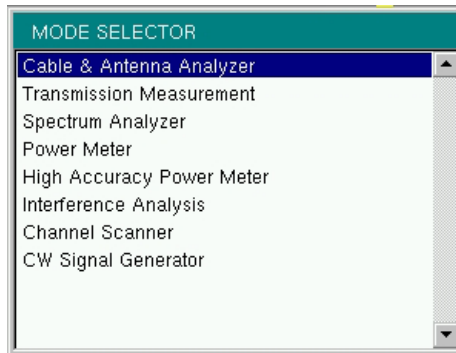


Figure 2-13. Mode Selector Menu

Note The display of the Mode Selector will vary depending on the installed options.

The **Menu** key is another option to quickly change measurement modes. Press the **Menu** key then select one of the Measurement icons in the top two rows ([Figure 2-2 on page 2-3](#)).

Chapter 3 — Quick Start Guide

3-1 Introduction

This chapter provides a brief overview of basic measurement setups. For detailed measurement information, refer to a specific measurement guide listed in [Appendix A, “Measurement Guides”](#). This chapter provides quick start measurement information for the following measurement modes:

- [Section 3-3 “Cable & Antenna Analyzer” on page 3-2](#)
- [Section 3-4 “Spectrum Analyzer” on page 3-7](#)

3-2 Measurement Mode Selection

Press the **Menu** key and use the touch screen to select the appropriate measurement icon.



Figure 3-1. Menu Screen with Icons for Installed Measurement Modes

Note The display of the Menu screen will vary depending on installed options.

3-3 Cable & Antenna Analyzer

Set the instrument to Cable & Antenna Analyzer mode as described in the previous section.

Select the Measurement Type

Press the **Measurement** main menu key and select the appropriate measurement.

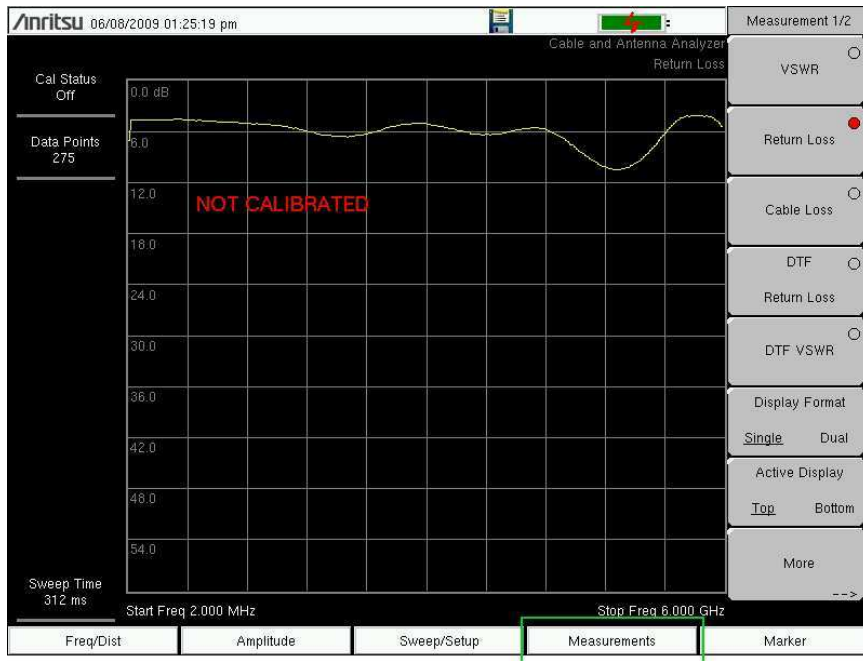


Figure 3-2. Measurement Menu

Set the Frequency

1. Press the **Freq/Dist** main menu key.
2. Press the **Start Freq** submenu key and use the keypad, rotary knob, or the arrow keys to enter the start frequency.
3. Press the **Stop Freq** submenu key and use the keypad, rotary knob, or the arrow keys to enter the stop frequency.

Set the Amplitude

1. Press the **Amplitude** main menu key.
2. Press the **Top** submenu key and use the keypad, rotary knob, or the arrow keys to edit the top scale value. Press **Enter** to set.

3. Press the **Bottom** submenu key and use the keypad, rotary knob, or the arrow keys to edit the bottom scale value. Press **Enter** to set.

Note

For Amplitude in Smith Chart measurements, refer to “Smith Chart” in the Cable & Antenna Measurement Guide listed in [Appendix A](#).

Turn on Markers

1. Press the **Marker** main menu key.
2. Press the **Marker 1 2 3 4 5 6** submenu key and select the marker number 1 button using the touch screen. The underlined number on the **Marker** submenu key indicates the active marker.
3. Use the arrow keys, the keypad, or the rotary knob to move the marker. The current value for the selected marker is shown above the upper-left corner of the graph. It is also possible to drag the marker using the touch screen.
4. Delta Markers are available for each of the six reference markers. For the selected marker, Toggle the **Delta On/Off** submenu key to turn on the Delta marker.

Peak/Valley Auto Markers

When making Return Loss and VSWR measurements, the Peak/Valley Auto feature can be used to automatically turn on Marker 1 to peak, Marker 2 to valley, and display M1 and M2 in the Marker Table. This feature is not available for DTF measurements.

1. Press the **Marker** main menu key.
2. Press the **Peak/Valley Auto** key.

Single Limit Line

1. Press **Shift** and then **Limit** (6) to enter the Limit menu.
2. Press the Limit On/Off key to turn on the Limit.
3. Press Single Limit and then use the numeric keypad, the arrow keys, or the rotary knob to change the limit value and then press **Enter**.

Note Refer to the Cable & Antenna Measurement Guide listed in [Appendix A](#) for creating multi-segment limit lines.

4. Press the Limit Alarm key to turn on or off the Limit Alarm.

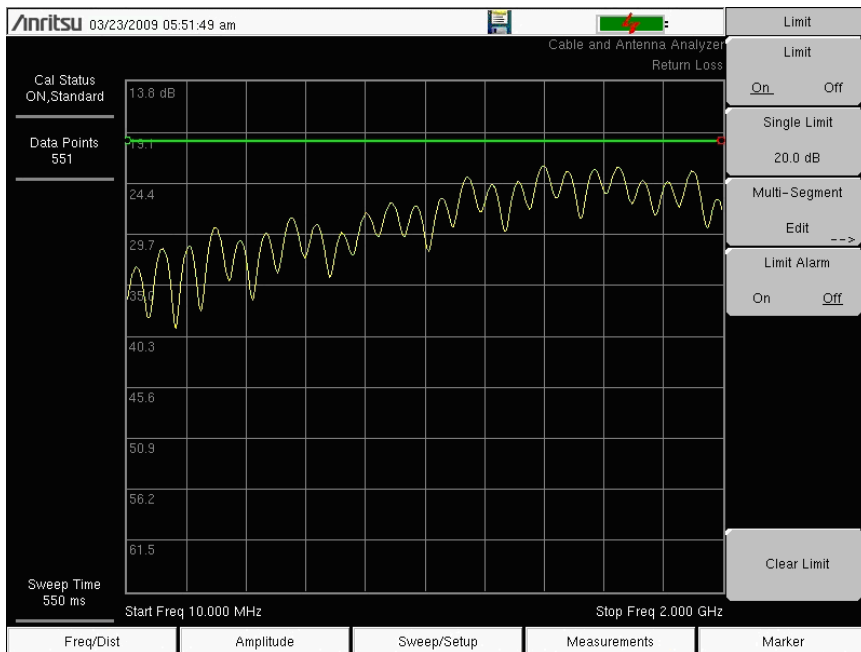


Figure 3-3. Single Limit Lines

DTF Setup

1. Press the **Measurements** main menu key and select DTF Return Loss or DTF VSWR.
2. Press the **Freq/Dist** main menu key.
3. Press the Units submenu key and select m to display distance in meters or ft to display distance in feet.
4. Press DTF Aid and use the touch screen, or arrow keys to navigate through all the DTF parameters.
 - a. Set Start Distance and Stop Distance. Stop Distance needs to be smaller than Dmax.
 - b. Enter the Start and Stop frequencies.
 - c. Press Cable, select the appropriate cable from the cable list and press **Enter**.
 - d. Press Continue.

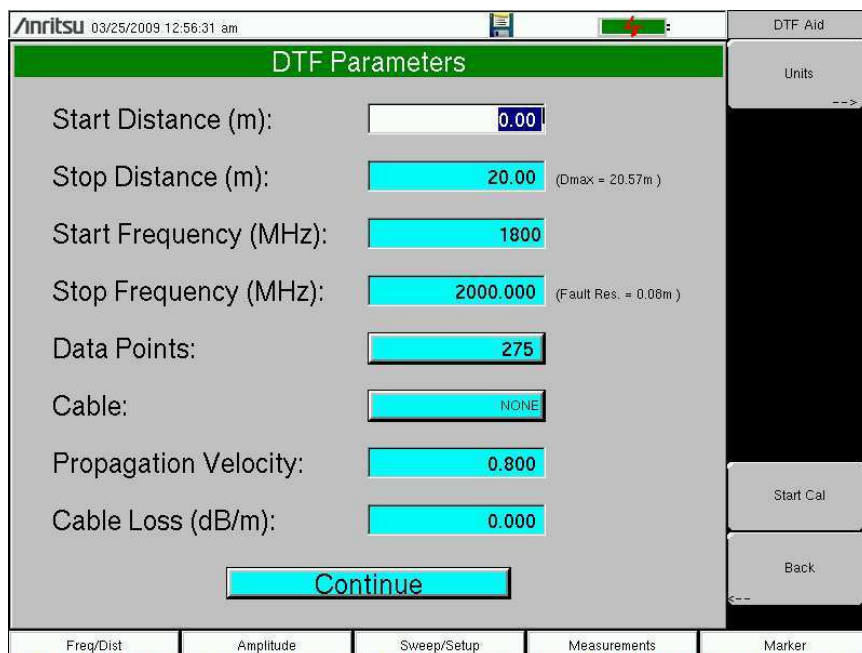


Figure 3-4. DTF Aid

5. Press **Shift** then **Calibrate** (2) to calibrate the instrument. Refer to “[Calibrate with OSL Calibration](#)” on page 3-6 for additional information.
6. Press the **Marker** main menu key and set the appropriate markers.
7. Press **Shift** and **Limit** (6) to enter and set the appropriate limit lines.
8. Press **Shift** and **File** (7) to save the measurement. See the User Guide for details.

Calibrate with OSL Calibration

Note Refer to the Cable & Antenna Measurement Guide listed in [Appendix A](#) for calibration details.

1. Press the **Freq/Dist** main menu key and enter the appropriate frequency range
2. Press **Shift** then **Calibrate (2)** key.
3. Select Standard or FlexCal.
4. Press Start Cal and follow instructions on screen.
5. Connect Open to RF Out and press the **Enter** key.
6. Connect Short to RF Out and press the **Enter** key.
7. Connect Load to RF Out and press the **Enter** key.
8. Verify that the calibration has been properly performed by checking that the Cal Status message is now displaying “ON, Standard” or “ON, FlexCal”.

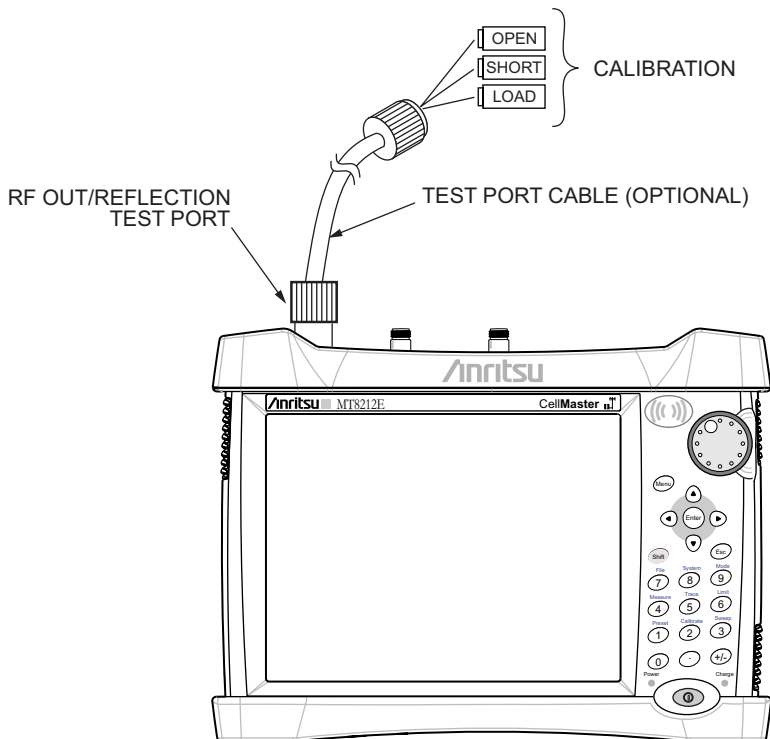


Figure 3-5. Calibration Setup with OSL Cal

3-4 Spectrum Analyzer

Set the instrument to Spectrum Analyzer mode as described in [Section 3-2 “Measurement Mode Selection”](#) on page 3-1.

Set Start and Stop Frequencies

1. Press the **Freq** main menu key.
2. Press the Start Freq submenu key.
3. Enter the desired start frequency using the keypad, the arrow keys, or the rotary knob. When entering a frequency using the keypad, the submenu key labels change to GHz, MHz, kHz, and Hz. Press the appropriate unit key. Pressing the **Enter** key has the same affect as pressing the MHz submenu key.
4. Press the Stop Freq submenu key.
5. Enter the desired stop frequency.

Enter the Center Frequency

1. Press the **Freq** main menu key.
2. Press the Center Freq submenu key.
3. Enter the desired center frequency using the keypad, the arrow keys, or the rotary knob. When entering a frequency using the keypad, the submenu key labels change to GHz, MHz, kHz, and Hz. Press the appropriate unit key. Pressing the **Enter** key has the same affect as pressing the MHz submenu key.

The center frequency and span is shown at the bottom of the screen.

Select a Signal Standard

1. Press the **Freq** main menu key.
2. Press the Signal Standard submenu key. The Signal Standards dialog box opens.
3. Highlight a signal standard and press **Enter** to select.
4. Press the Channel submenu key to change the channel value in the Channel Editor.

The signal standard is shown in yellow at the top of the screen.

Set the Measurement Frequency Bandwidth

1. Press the **BW** main menu key to display the BW menu.
 - Press the RBW and/or the VBW submenu key to manually change the values.
 - Set RBW and VBW automatically by pressing the Auto RBW submenu key or the Auto VBW submenu key.
2. Press the RBW/VBW submenu key to change the resolution bandwidth and video bandwidth ratio.
3. Press the Span/RBW submenu key to change the span width to resolution bandwidth ratio.

Set the Amplitude

Press the **Amplitude** main menu key to display the Amplitude menu.

Set Amplitude Reference Level and Scale

1. Press the Reference Level submenu key and use the arrow keys, rotary knob, or the keypad to change the reference level. Press **Enter** to set the reference level value.
2. Press the Scale submenu key and use the arrow keys, rotary knob, or the keypad to enter the desired scale. Press **Enter** to set the scale value.

Set Amplitude Range and Scale

1. Press the Auto Atten submenu key to set an optimal reference level based on the measured signal.
2. Press the Scale submenu key.
3. Enter the desired scale units by using the keypad, the arrow keys, or the rotary knob. Press **Enter** to set. The y-axis scale is automatically renumbered.

Power Offset Set Up for Compensating External Loss

To obtain accurate results, compensate for any external attenuation by using power offset. In power offset mode, the compensation factor is in dB. (External attenuation can be created by using an external cable or an external high power attenuator.)

Press the RL Offset submenu key and use the keypad, the arrow keys, or the rotary knob to enter the desired offset value. When using the rotary knob, the value changes in increments of 0.1 dB. Using the **Left/Right** arrow keys changes the value in 10% increments of the value shown on the Scale submenu key. When using the **Up/Down** arrow keys, the value changes in the increment shown on the Scale submenu key. When using the keypad, enter the new value then press **Enter** or the dB submenu key to set the value. The power offset is displayed in the instrument settings summary column on the left side of the measurement display.

Set the Span

1. Press the **Span** main menu key or the **Freq** main menu key followed by the Span submenu key.
2. To select full span, press the Full Span submenu key. Selecting full span overrides any previously set Start and Stop frequencies.
3. For a single frequency measurement, press the Zero Span submenu key.

Note	To quickly move the span value up or down, press the Span Up 1-2-5 or Span Down 1-2-5 submenu keys. These keys facilitate a zoom-in, zoom-out feature in a 1-2-5 sequence.
-------------	--

Single Limit Line

Press the **Limit** menu key to display the Limit menu.

1. Press the Limit (Upper / Lower) submenu key to select the desired limit line, Upper or Lower.
2. Activate the selected limit line by pressing the On Off submenu key so that On is underlined.
3. Press the Limit Move submenu key to display the Limit Move menu. Press the first Move Limit submenu key and use the arrows keys, rotary knob, or keypad to change the dBm level of the limit line.
4. Press the Back submenu key to return to the Limit menu.
5. If necessary, press the Set Default Limit submenu key to redraw the limit line in view.

Create a Limit Envelope

1. Press **Shift** then **Limit** (6) to open the Limit menu.
2. Select Limit Envelope.
3. Press the Create Envelope key.

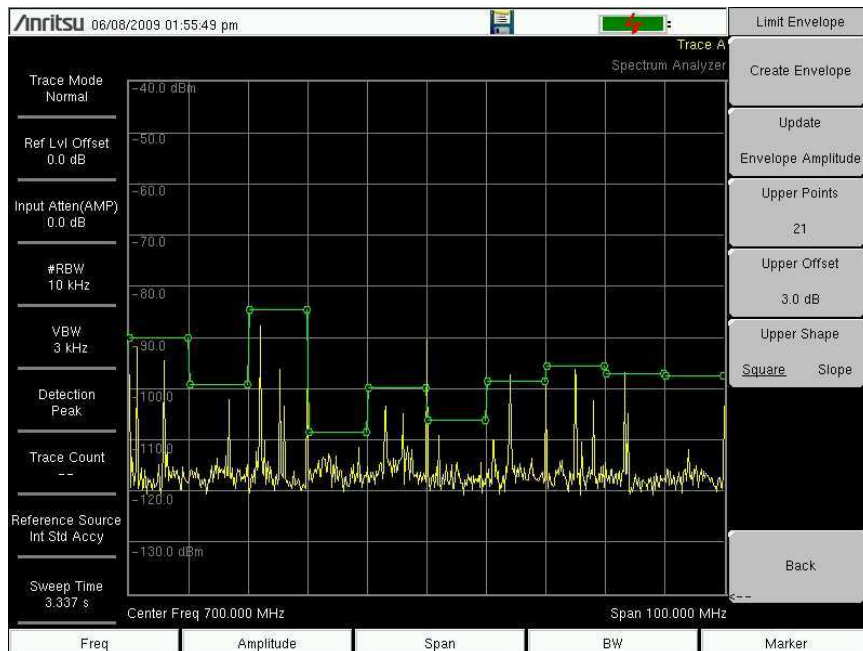


Figure 3-6. Limit Envelope

Setting Up Markers

Press the **Marker** main menu key to display the Marker menu.

Selecting, Activating, and Placing a Marker

1. Press the Marker 1 2 3 4 5 6 submenu key and then select the desired marker using the touch screen marker buttons. The selected marker is underlined on the Marker submenu key.
2. Press the On Off submenu key so that On is underlined. The selected marker is displayed in red and ready to be moved.
3. Use the rotary knob to place the marker on the desired frequency.
4. Repeat steps 1 through 3 to activate and move additional markers.

Selecting, Activating, and Placing a Delta Marker:

1. Press the Marker 1 2 3 4 5 6 submenu key and select the desired delta marker. The selected marker is underlined.
2. Press the Delta On Off submenu key so that On is underlined. The selected marker is displayed in red and ready to be moved.
3. Use the rotary knob to place the delta marker on the desired frequency.
4. Repeat steps 1 through 3 to activate and move additional markers.

Viewing Marker Data in a Table Format

1. Press the More submenu key.
2. Press the Marker Table On Off submenu key so that On is underlined. All marker and delta marker data are displayed in a table under the measurement graph.

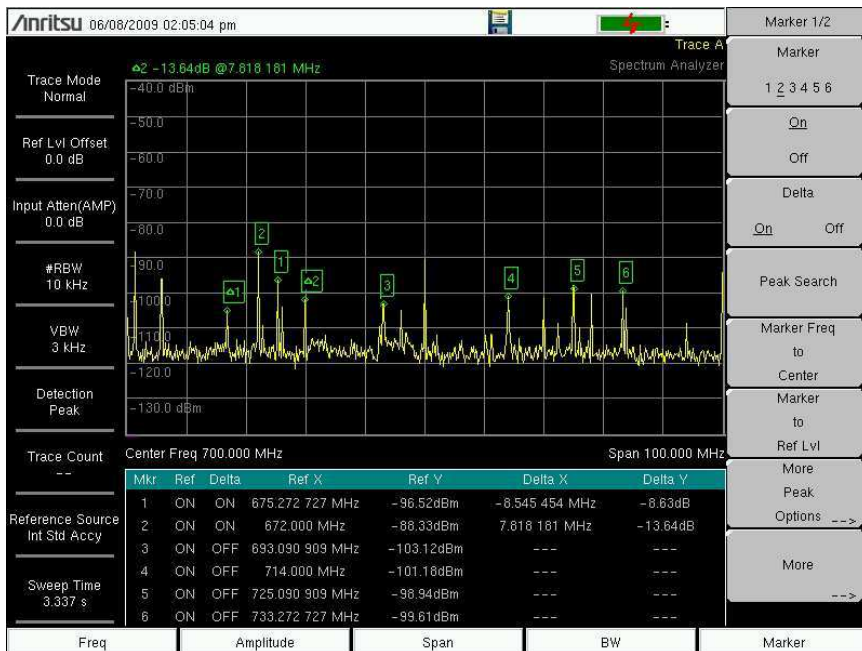


Figure 3-7. Marker Table

Select a Smart Measurement Type

In Spectrum Analyzer mode, press **Shift** then **Measure** (4) and select a smart measurement using the submenu keys.

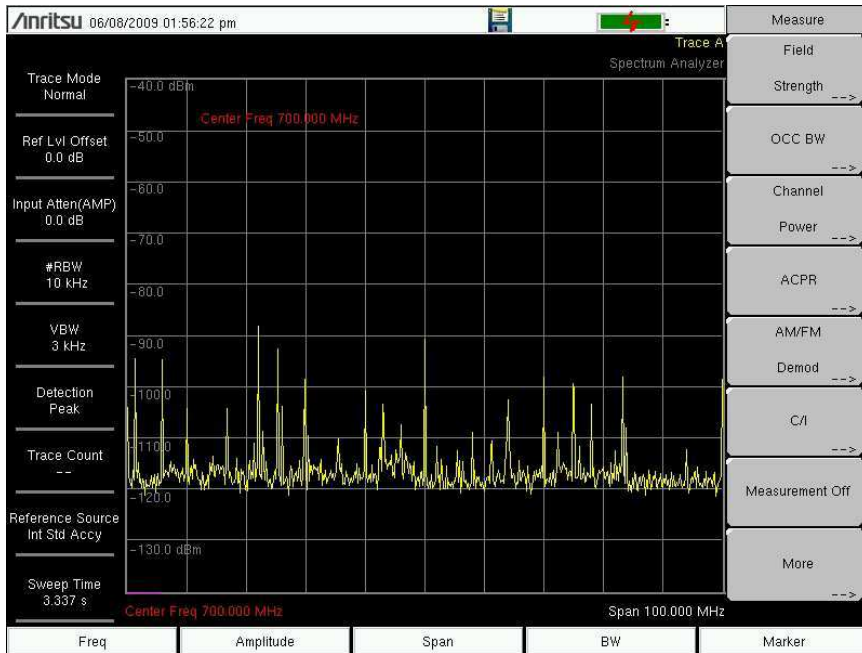


Figure 3-8. Spectrum Analyzer Measure Menu

3-5 Saving Measurements

Measurement files can be stored in the following formats:

- .VNA or .DAT for Cable and Antenna analyzer measurements
- .SPA for Spectrum Analyzer measurements

Saving files in .VNA or .SPA is recommended as it enables users to edit, view, and analyze traces with Master Software Tools (MST).

Anritsu recommends saving files to the internal memory and then transferring the files to an external USB memory device if needed. Refer to [Chapter 4, “Copying Files”](#) for more details.

The .DAT file format is only recommended for users who need to work with this format or prefer using Handheld Software Tools (HHST). Traces saved as .DAT can be viewed, edited, and analyzed with Handheld Software Tools. If the DUAL measurement display is turned on, files will be saved as Filename_1 and Filename_2.

Note

.DAT is only supported for Return Loss, VSWR, Cable Loss, DTF RL, DTF VSWR and only supports 137, 275, 551 data points. 1102 and 2204 data points are not supported in the .DAT file format. Use the .VNA file format if these resolutions are required.

.DAT files cannot be recalled to the instrument for viewing. If this is required, use the .VNA file format.

Procedure for saving files:

1. Press **Shift** then File (#7).
2. Press Save Measurement.
3. Press Change Save Location and set the current location to be the USB flash drive or internal memory, and then press Set Location.
4. Press Change Type (Setup/JPG/...) and select Measurement .VNA or Measurement .DAT or Measurement (when in Spectrum Analyzer mode).
5. Enter the file name using the keyboard and press Enter.

Refer to [Chapter 4, “File Management”](#) for more details about working with files.

3-6 Useful MST Utilities

Converting Files to .DAT File Format

1. Establish a connection with MST.
2. Download measurements:
 - a. Go to Sync | Download all measurements.
 - b. Select the folder on the computer or select Local, and then set the location.
 - c. Click Device and drag all of the traces into the measurement window. All of the traces will automatically be saved in the selected “Local” location.
3. To convert all of the files in a folder, select File | Save Folder as .DAT, and then select the folder used above. To convert files one-by-one, select File | Save As, and then change the extension to .DAT to convert the trace.

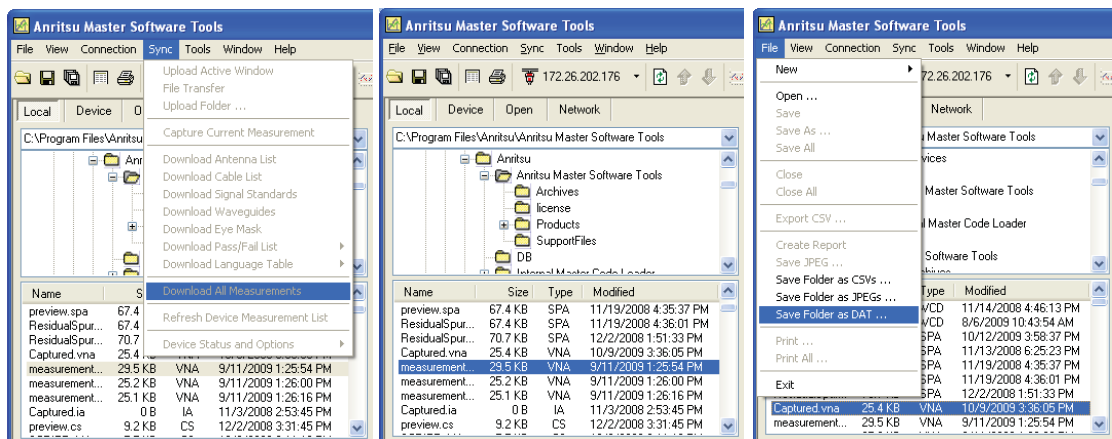


Figure 3-9. MST Dialog

4. Files converted to .DAT file format can be opened in HHST.

Group Edit

The Group Edit feature allows markers and limit lines to be copied from one trace to all of the traces in a folder. In addition, the title and subtitle can be quickly renamed for all of the traces in a folder. For example, to add a cell site number on the title.

To change the title to be the cell site number for all traces in a folder:

1. Select Tools | Group Edit.
2. Set the application type to VNA.
3. Select the location of the folder.
4. Enter the cell site number and check Plot Title.
5. Click Apply to rename all of the plot titles in the selected folder.

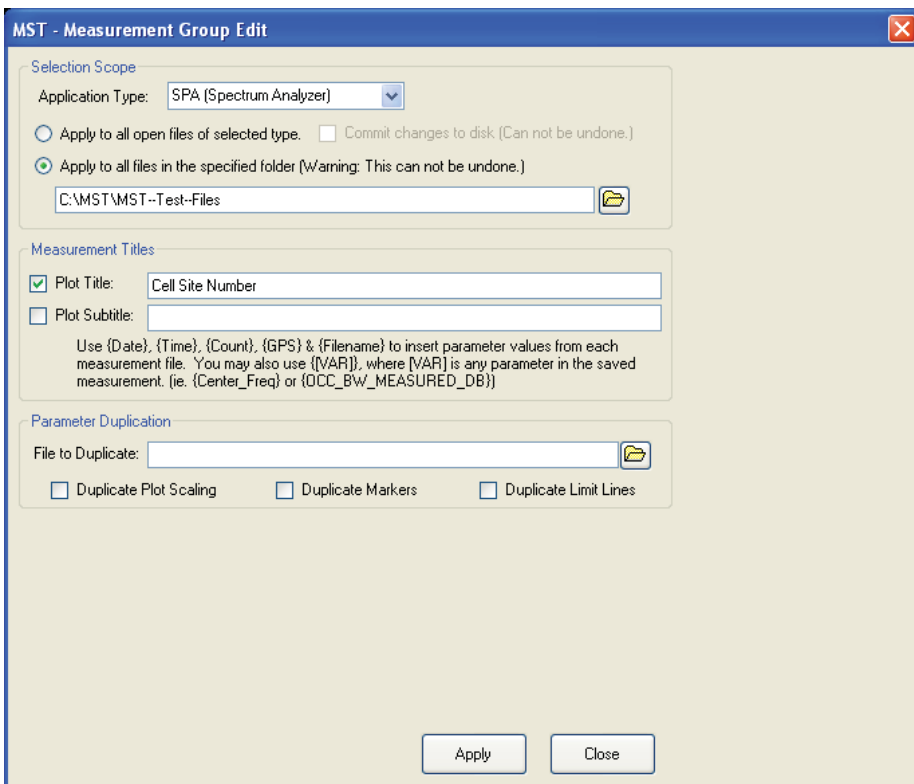


Figure 3-10. MST Measurement Group Edit Dialog

Print All to PDF

If Adobe Acrobat is installed on the computer with MST, traces can be converted to PDF using Print All and selecting Print to PDF. This creates a compact and portable PDF report of all of the traces in a folder with just one click.

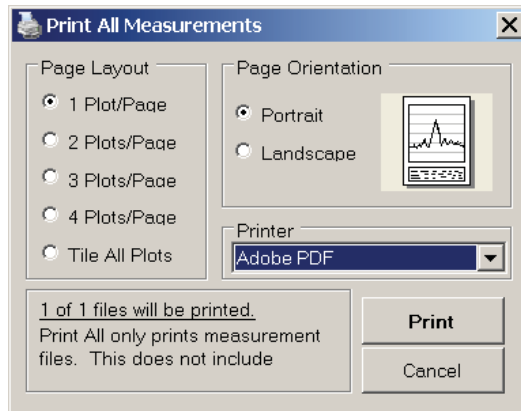


Figure 3-11. MST Print All Measurements Dialog

Chapter 4 — File Management

4-1 Introduction

This chapter will review the file management features of the Cell Master and detail the **File** menu. The submenus under this menu allow the user to save, recall, copy, and delete files in internal memory or an external USB flash drive.

4-2 Managing Files

Press the **Shift** key then the **File** (7) key on the numeric keypad to list the **File** menu. Follow the additional steps below.

Note

When navigating through the **File** menu, pressing the **Esc** key will return to the previous menu.

Save Files

Set the Save Location

Press **Save** then the **Change Save Location** submenu keys and select the location to save files. You can save files to the internal memory or to an external USB flash drive. You can also create new folders. If an external USB flash drive is connected or disconnected, press **Refresh Directories** to update the location tree. Press the **Set Location** key to store the save location.

Save Measurement As

The **Save Measurement As** key is used to quickly save measurements with a specific file name. The Cell Master saves the measurement with the latest file name that was used to save a measurement and with a number that is automatically incremented and appended to the end of the file name. For instance, if the last measurement was saved with the name **System Return Loss**, **Save Measurement As** saves the next measurement as **System Return Loss_#1**, **System Return Loss_#2** etc. The file name used can be changed using the **Save** dialog box ([Figure 4-1](#)).

Save a Measurement

Press the **Save Measurement** key and enter the name for the measurement file. The file type will default to measurement and the appropriate extension will be added based on the current measurement mode. Measurement files can be stored as **.DAT** file types to edit traces in **Handheld Software Tools**. Note that **.DAT** files do not support 1102 and 2204 data points. Also, measurements saved as **.DAT** can not be recalled and viewed in the instrument.

Save a Setup

Press the **Save** submenu key, type a name for the setup file, confirm that the file type is **Setup** using the **Change Type** key or the touchscreen and press **Enter** to save.

Create a Menu Shortcut for a Setup file

Press the **Recall** submenu key to display saved setup files. Locate the setup file to shortcut and then press and hold on the file name for a few seconds. Select a location in the shortcut grid to save the setup file.

Save a Measurement Screen as JPEG

Press the **Save** submenu key, type a name for the JPEG file, confirm that the file type is Jpeg, and press **Enter** to save.

Save Dialog Box

The save dialog box ([Figure 4-1](#)) is used to store files on the internal memory or an external flash drive. The file type, file name, and save location are set at this display. See [“Save Menu” on page 4-9](#) and [“Save Location Menu” on page 4-10](#) for details.

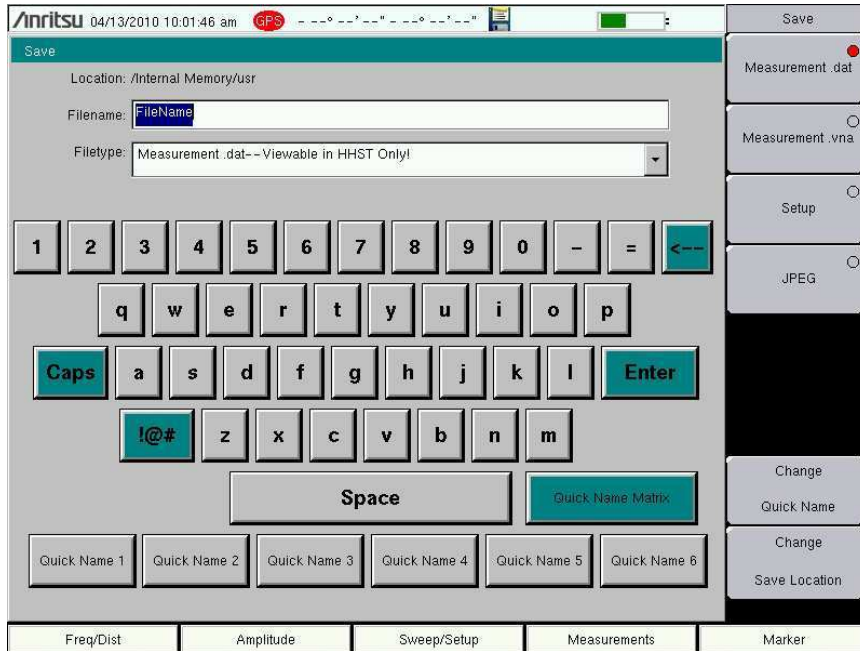


Figure 4-1. Save Dialog Box

Quick Name Keys

Quick Name keys below the keyboard in [Figure 4-1](#) allow users to enter quick names for frequently used file measurement names. To edit the keys, press the **Shift** key, then the **File** (7) key. Press **Save** then the **Change Quick Name** key, select one of the **Quick Names** for editing, press **Enter** and enter the new name for the key. Press **Enter** again and the new name will be displayed on the key.

Quick Name Matrix

The Quick Name Matrix button displays in the Cable and Antenna Analyzer measurement mode. The Quick Name Matrix button allows contractors and field personnel to save time entering file names when they are making measurements. Using the touchscreen, press the Quick Name Matrix key shown in [Figure 4-1](#) to open the Quick Name Matrix shown in [Figure 4-2](#).

Often carriers require file names to be reported in special conventions including site number, sector information, color coding, measurement type, termination device, and frequency information. Setup the buttons in this matrix to quickly enter the required file name.

1. Press and hold any Matrix key in the first column to edit the label. Use this column to enter the first set of variables required in the file naming convention.
2. Continue with additional columns as necessary.

After the keys have been labeled they can be used to quickly create filenames with the required file naming conventions. Select the type of file and press Enter to save the file.

The Keyboard key returns to the Save Dialog Box (Figure 4-1).

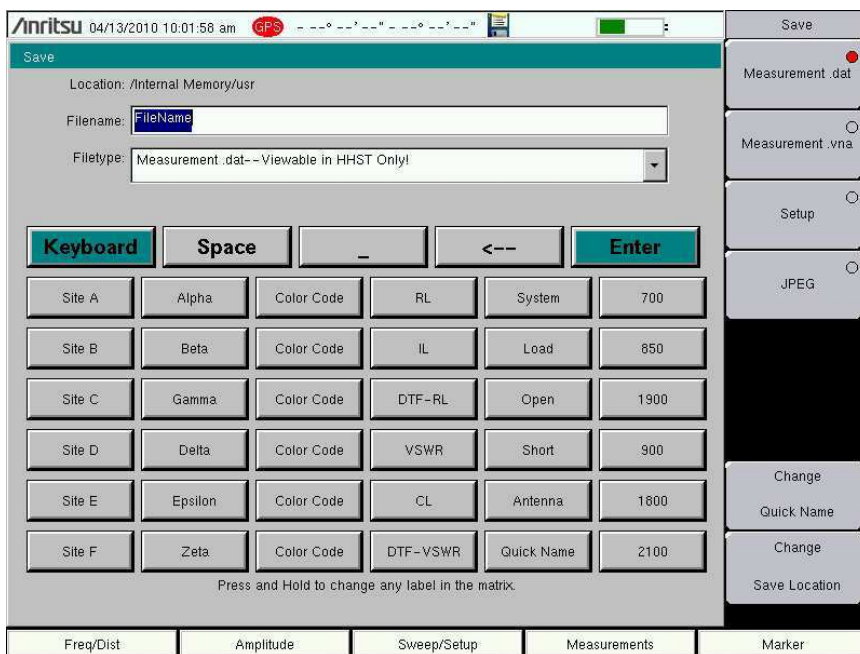


Figure 4-2. Quick Name Matrix

Recall Files

The recall menu enables you to view all the Measurement and Setup files in the internal memory and external USB flash drive.

You can sort the recall menu by name, date, or type. You can also select to view only measurement files or setup files by pressing **File Type** on the Recall dialog box and selecting the file type you want to view.

Recall a Measurement

From the **File** menu, press the Recall Measurement submenu key, select the measurement with the touchscreen, rotary knob or the **Up/Down** arrow keys and press **Enter**.

Recall a Setup

Press the Recall submenu key. Confirm that the file type is **Setup** or **All**. Select the setup file (.stp) with the touchscreen, rotary knob or the **Up/Down** arrow keys and press **Enter**.

Recall Dialog Box

The Recall dialog box (Figure 4-3) will open previously saved measurements and setups. See the “[Recall Menu](#)” on page 4-12 for additional information.

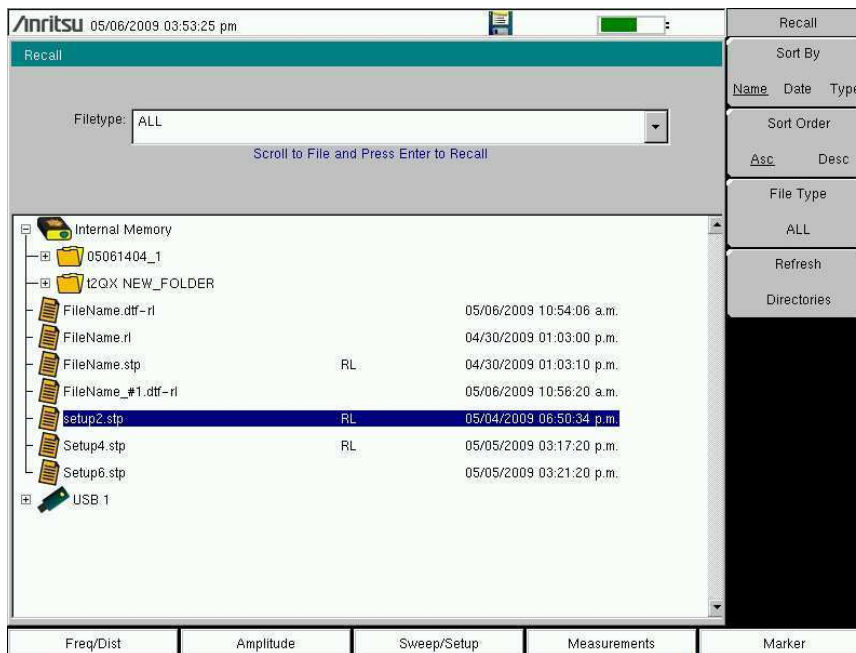


Figure 4-3. Recall Dialog Box

Copying Files

The steps below detail copying a file from internal memory to an external flash drive. Select the files to copy in the top window and the location for the files to be copied to in the bottom window (Figure 4-4). Refer to the “Copy Menu” on page 4-13 for additional information.

1. Insert a USB drive into either USB Type A port of the Cell Master.
2. From the **File** main menu, press the **Copy** submenu key. The Copy submenu and Copy dialog box are displayed.
3. Select the file(s) to copy. To select multiple files, highlight the first then press the **Select** or **De-Select** key to keep the file selected. The file will be outlined in blue. Repeat with all the files to copy. To display files in a folder, select the folder and press the **Enter** key.
4. Press the **Scroll** key and highlight the USB drive in the lower window using the touch screen or the **Up/Down** arrow keys. The **Scroll** submenu key toggles between **Src** (top window) and **Dst** (bottom window).
5. Press the **Copy** key to copy the files to the flash drive.

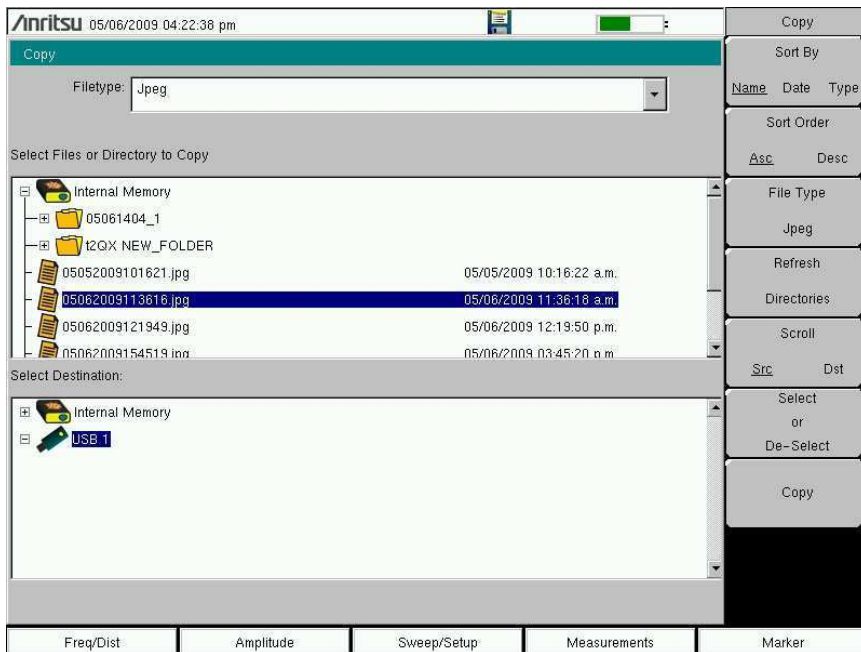


Figure 4-4. Copy Dialog Box

Deleting Files

Delete a Selected File or Files

Press the Delete submenu key. Highlight the file to be deleted with the touchscreen or the **Up/Down** arrow keys. Press the Select or De-Select key. The file will be outlined in blue when selected. Press the Delete key and **Enter** to delete the selected file.

Delete Dialog Box

Press the Delete submenu key to open the Delete dialog box (Figure 4-5). The submenus allow sorting by file type, name and saved date. See the “Delete Menu” on page 4-14 for additional information.

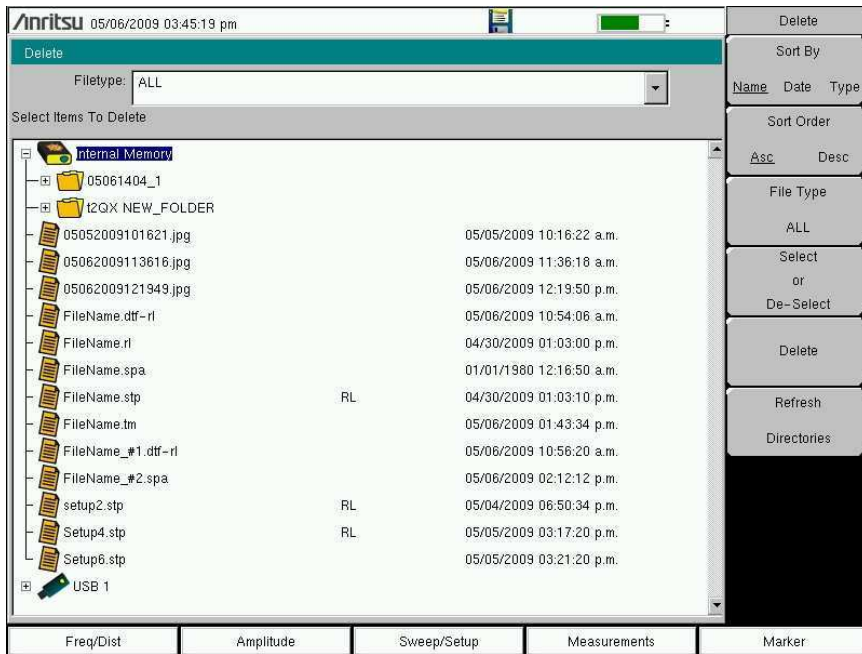


Figure 4-5. Delete Dialog Box

4-3 File Menu Overview

Open this menu by pressing the **Shift** key, then the **File** (7) key.

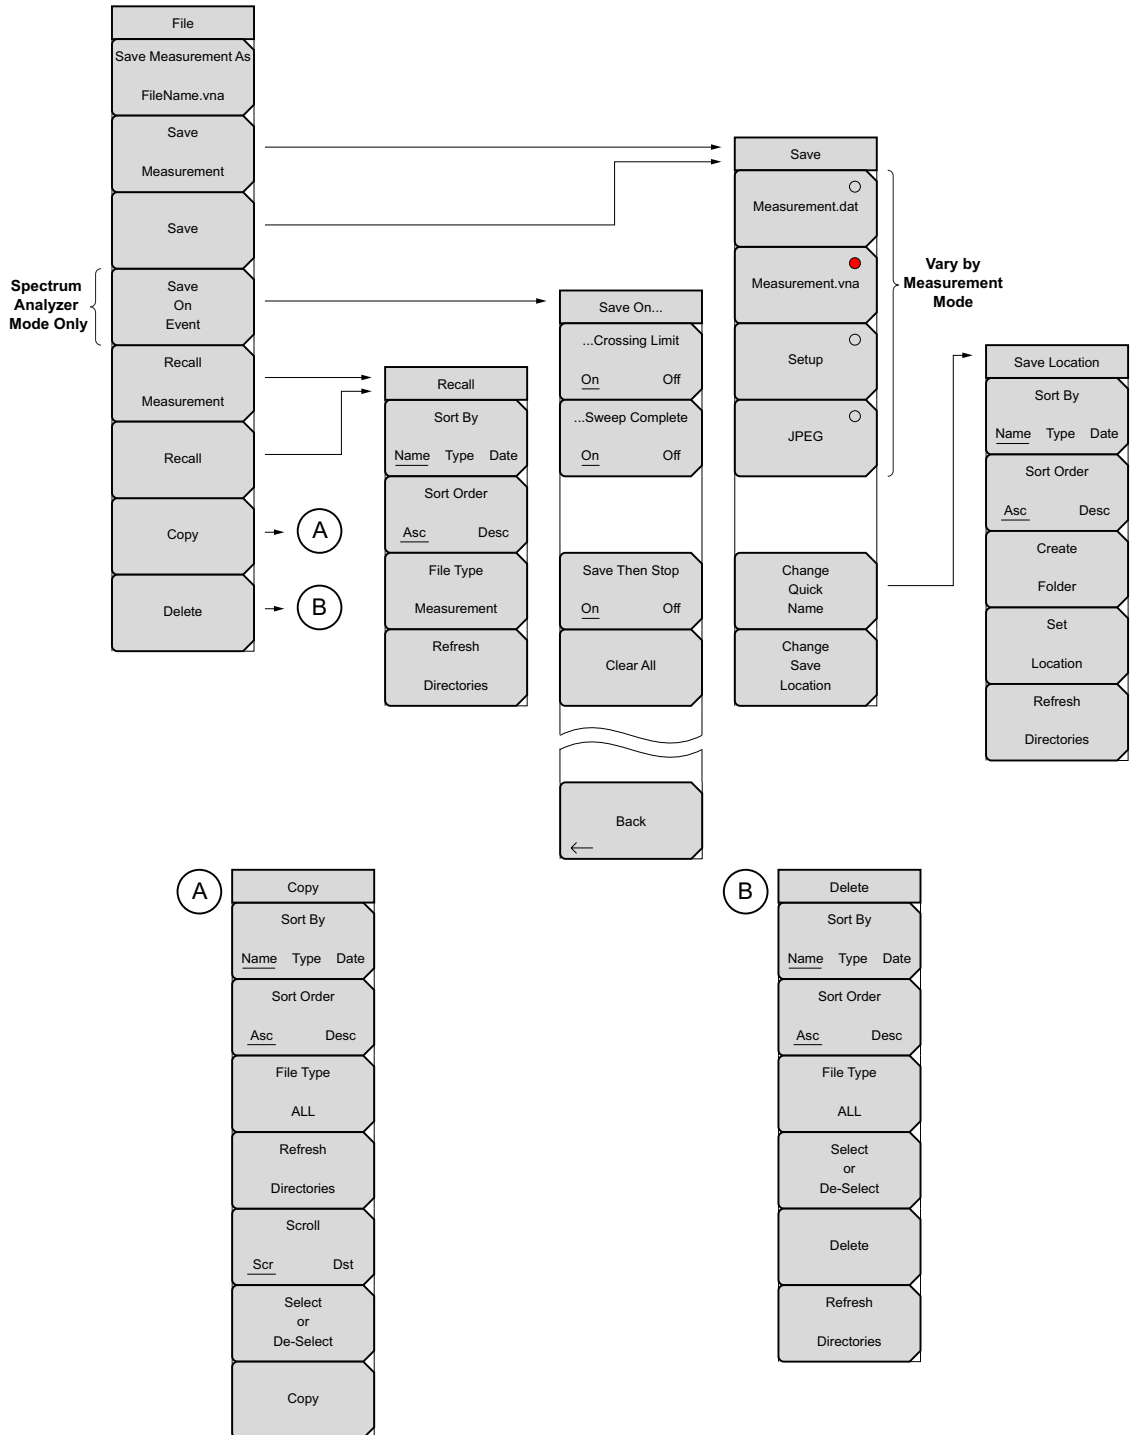


Figure 4-6. File Menu

4-4 File Menu

Key Sequence: **File**

File	Save Measurement As: This key will save the current setup with a user defined file name. The default file name is changed using the Save submenu. To change the default file name, type in a new file with the touch screen keyboard and press Enter . After a few seconds the screen will return to File menu. Press the Save Measurement As key again and the new file name will be used. Measurement files names have a .rl extension.
Save Measurement As FileName.vna	
Save Measurement	Save Measurement: Press this submenu key to display the “Save Menu” on page 4-9 and the touch screen keyboard. Measurements can be saved to internal memory or to a USB flash drive. The saved measurement can be named by using touch screen keyboard. By default, measurements are saved in a directory named /user to internal memory. The save destination is set with the “Save Location Menu” on page 4-10 .
Save	
Save On Event	Save: Press this submenu key to display the “Save Menu” on page 4-9 and the touch screen keyboard. Measurements can be saved to internal memory or to a USB flash drive. The saved setup, measurement or JPEG file can be named by using touch screen keyboard. By default, measurements are saved in a directory named /user to internal memory. The save destination is set with the “Save Location Menu” on page 4-10 .
Recall Measurement	Save on Event (Spectrum Analyzer mode only): Press this submenu key to display the “Save On Event Menu” on page 4-11 .
Recall	
Copy	Recall Measurement: Press this submenu key to display the “Recall Menu” on page 4-12 . This menu is for recalling measurements from internal memory or a USB flash drive.
Delete	Recall: Press this submenu key to display the “Recall Menu” on page 4-12 . This menu is for recalling measurement or setup data from internal memory or a USB flash drive.
	Copy: Press this submenu key to display the “Copy Menu” on page 4-13 . This submenu is for copying files or folders from internal memory or a USB flash drive.
	Delete: Press this submenu key to display the “Delete Menu” on page 4-14 and a selection box that shows the setup and measurement names, the type and the date and time that the information was saved. Use the rotary knob or the Up/Down arrow keys to highlight the file that is to be deleted and press the Delete submenu key, then Enter . Press the Esc key to cancel the operation. Note that deleted files can not be recovered.

Figure 4-7. File Menu

Save Menu

Key Sequence: **File** > Save

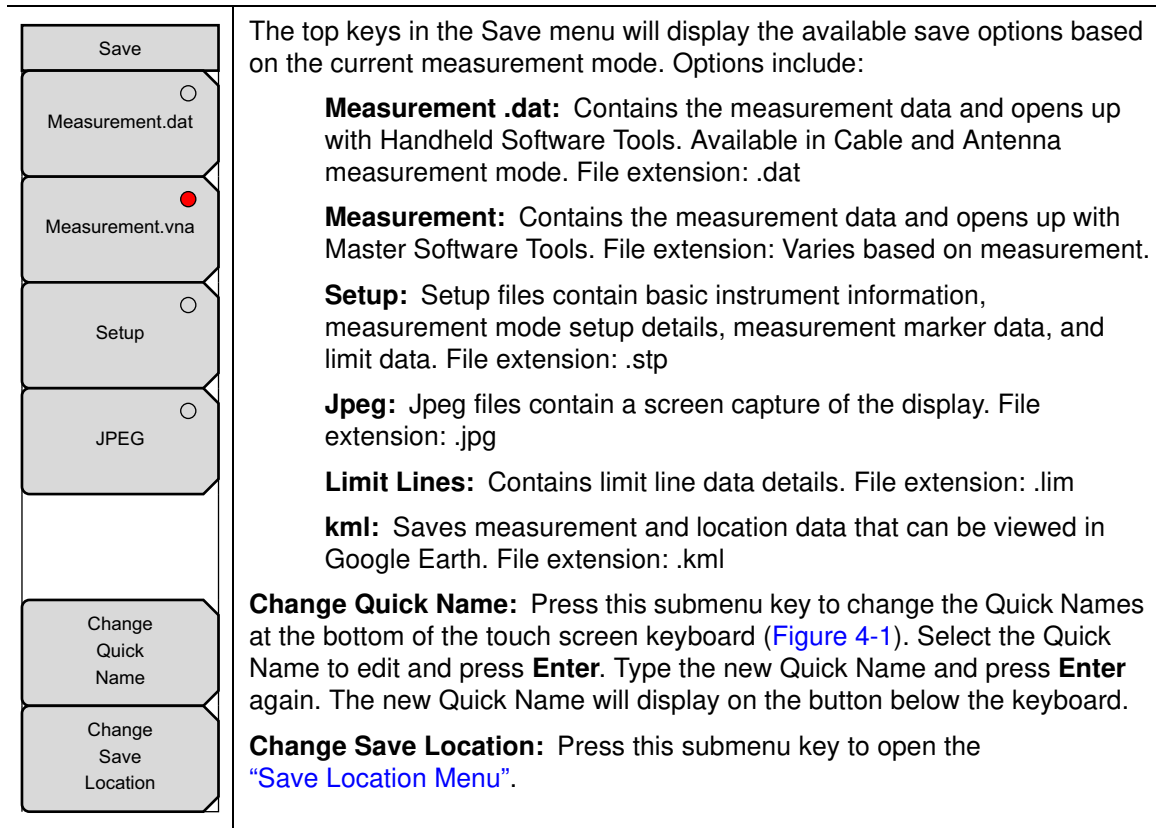


Figure 4-8. Save Menu

Save Location Menu

Key Sequence: **File** > Save > Change Save Location

Save Location	<p>This menu and dialog box is used to create folders and select where the Cell Master will save the current file. Select folders or drives with the Up/Down keys, the rotary knob or the touch screen.</p> <p>Note: Only folders (not files) are visible in the Save Location dialog box. To view files, use the “Recall Menu” on page 4-12.</p> <p>Sort By: Press this submenu key to sort the folders by Name, Type, or Date.</p> <p>Sort Order: Displays the folder names in ascending or descending order .</p> <p>Create Folder: This key will create a new folder in the highlighted location or folder. The create directory dialog box will display for naming the folder.</p> <p>Set Location: This key will set the current location for saving files and return to the “Save Menu” on page 4-9.</p> <p>Refresh Directories: Press this key to update the display.</p>
Sort By	
Name Type Date	
Sort Order	
Asc Desc	
Create Folder	
Set Location	
Refresh Directories	

Figure 4-9. Save Location Menu



Figure 4-10. Select Save Location Dialog Box

Save On Event Menu

Key Sequence: **File** > Save On Event


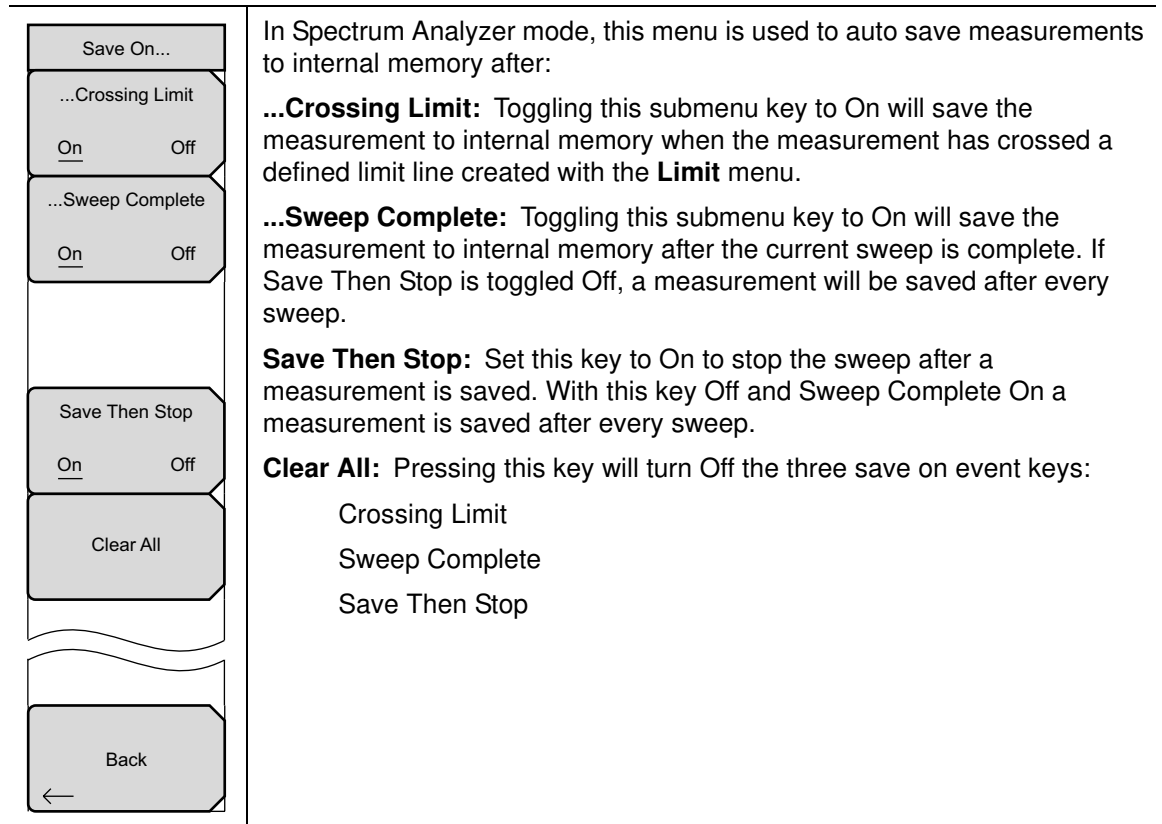


Figure 4-11. Save On Menu

Recall Menu

Key Sequence: **File** > Recall

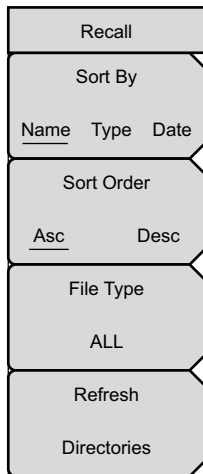

This menu and dialog box is used to create folders and select where the Cell Master will save the current file. Select folders or drives with the **Up/Down** keys, the rotary knob or the touch screen.

Sort By: Press this submenu key to sort file and folders by the file name, by the type of file, or by the date that the file or folder was saved.

Sort Order: Displays the folder or file in ascending or descending order based on the selection in the Sort By key.

File Type: Press this submenu key to select what type of file is viewed. The options are the ALL, Measurement, or Setup. The file type can be changed with the **Up/Down** keys, the rotary knob, or the touch screen. Press **Enter** to make the selection.

Setup: Setup files contain basic instrument information, measurement mode setup details, measurement marker data, and limit data.

Measurement: Measurement files contain all of the information in the setup files and the measurement data.

Limit Lines (.lim): The Limit line file contains limit line data details.

ALL: Displays all file types.

Refresh Directories: Press this key to update the display.

Figure 4-12. Recall Menu

Copy Menu

Key Sequence: **File** > Copy



This menu and dialog box is used to copy folders and files. Select folders or files with the **Up/Down** keys, the rotary knob or the touch screen. [Figure 4-4 on page 4-5](#) shows the Copy dialog box with two Jpeg images and one folder (including the folder's contents) selected and ready to be copied to the USB flash drive. Highlight a folder and press **Enter** to view the contents.

Sort By: Press this submenu key to sort file and folder lists by name, by type of file, or by the date that the file was saved.

Sort Order: Displays the folder or file in ascending or descending order based on the selection in the Sort By key.

File Type: Press this submenu key to select what type of file to view for copying. The options are: ALL, Measurement, Setup, or Jpeg. The file type can be changed with the **Up/Down** keys, the rotary knob, or the touch screen. Press **Enter** to make the selection.

Refresh Directories: Press this key to update the display.

Scroll Files To Copy: This key toggles with the Scroll Destination Folder key. It has the same function as touching the top (Select Files or Directory to Copy) window in [Figure 4-4](#). When the circle is red you can use the **Up/Down** keys or the rotary knob to scroll through the files.

Scroll Scr Dst: Press this submenu key to use the scroll function in the Source Folder (Scr - top panel) or Destination Folder (Dst - bottom panel). See [Figure 4-4](#).

Note: Previously saved files are not visible in this window.

Select or De-Select: Use this key to select or deselect the file(s) or folder(s) to be copied. When selected, a file or folder will be outlined in blue, see [Figure 4-4](#).

Copy: Copies the files or folders selected in the top window to the destination selected in the bottom window. A dialog box will display showing when the copying is complete. If a file with the same name exists in the destination folder a warning box will display to allow file overwrite or to cancel.

Figure 4-13. Copy Menu

Delete Menu

Key Sequence: **File** > Delete

Delete	<p>This menu and dialog box is used to delete folders and files. Select folders or files with the Up/Down keys, the rotary knob or the touch screen.</p> <p>Sort By: Press this submenu key to sort files and folders by name, by the type of file, or by the date that the file or folder was saved.</p> <p>Sort: Displays the folder or file in ascending or descending order based on the selection in the Sort By key.</p> <p>File Type: Press this submenu key to select what type of file view for deleting. The options are the ALL, Measurement, Setup, Limit Lines, or Jpeg. The file type can be changed with the Up/Down keys, the rotary knob, or the touch screen. Press Enter to make the selection.</p> <p>Select or De-Select: Use this key to select or deselect the file(s) or folder(s) to be deleted. When selected, a file or folder will be outlined in blue.</p> <p>Delete: Press this key to open the Delete dialog box. Press Enter to delete the selected item or Esc to Cancel.</p> <p>Refresh Directories: Press this key to update the display.</p>
Sort By	
Name Type Date	
Sort Order	
Asc Desc	
File Type	
ALL	
Select or De-Select	
Delete	
Refresh	
Directories	

Figure 4-14. Delete Menu

Chapter 5 — System Operations

5-1 Introduction

This chapter will review the Cell Master system operations.

- [“System Menu Overview” on page 5-2](#)
- [“System Menu” on page 5-3](#)
- [“Preset Menu” on page 5-7](#)
- [“Self Test” on page 5-8](#)
- [“Updating the Cell Master Firmware” on page 5-8](#)
- [“Cell Master Firmware Emergency Repair” on page 5-9](#)

The other menus (Sweep Measure Trace and Limit) are detailed in the Measurement Guides listed in [Appendix A](#).

5-2 System Menu Overview

To access the functions under the System menu, select the **Shift** key, then the **System** (8) key.

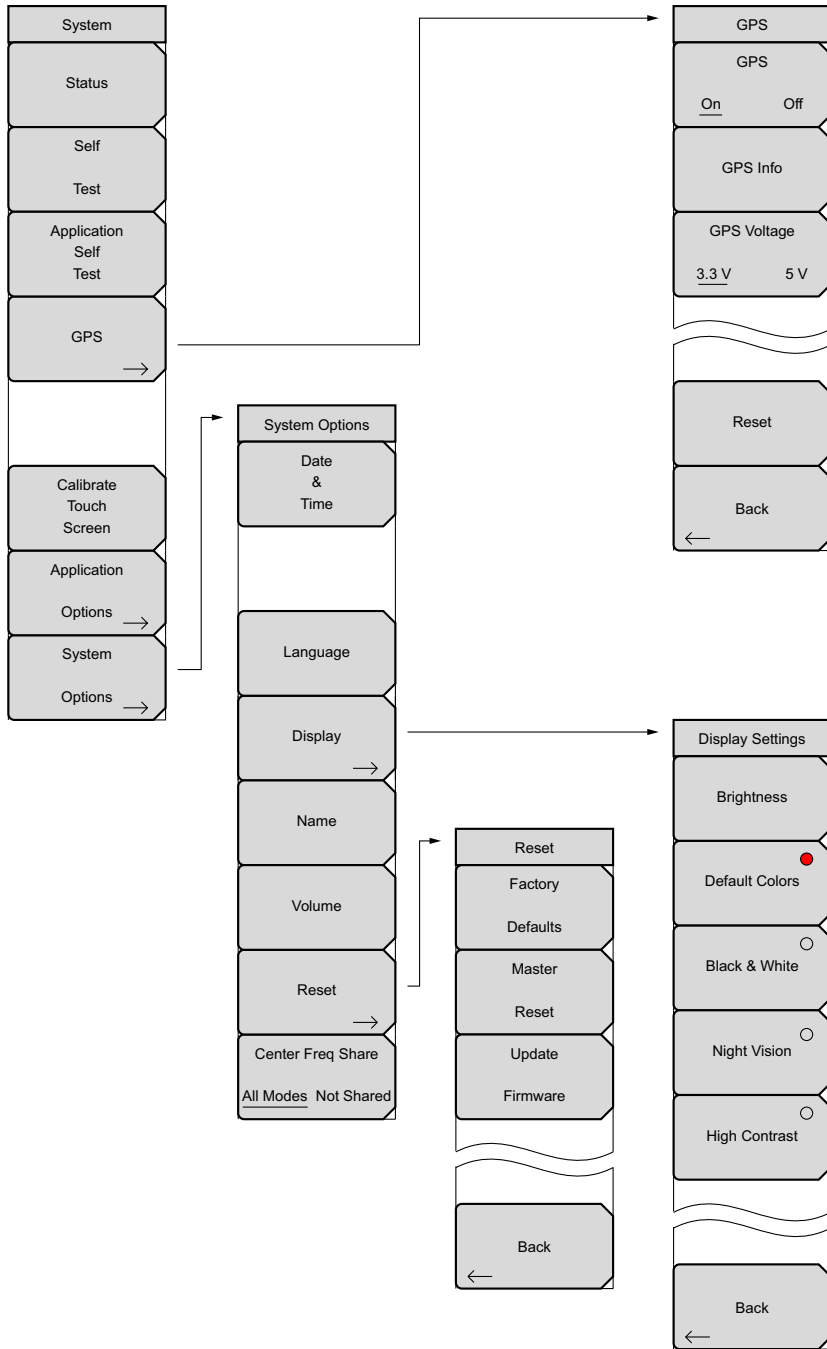


Figure 5-1. System Menu

5-3 System Menu

Key Sequence: **Shift, System** (8)

System	Status: Pressing this submenu key displays the current system status, including the operating system and firmware versions, temperatures and other details such as current battery information. Press Esc or Enter to return to normal operation.
Status	
Self	Self Test: This key initiates a series of diagnostic tests that check the components of the instrument. A display will list the individual tests with a pass or fail indication. Press Esc or Enter to return to normal operation.
Test	
Application	Application Self Test: This key initiates a series of diagnostic tests related to the performance of the instrument for specific applications. A display will list the individual tests with a pass or fail indication. Press Esc or Enter to return to normal operation.
Self	
Test	
GPS	GPS : Opens the “GPS Menu” on page 6-4.
→	Calibrate Touch Screen: Start the touch screen calibration. Run the calibration procedure when instrument is not responding to your screen taps as expected.
Calibrate	
Touch	
Screen	
Application	Application Options: This submenu key presents a menu to select application options. This will vary depending upon the measurement mode.
Options	
→	System Options: This key opens the “System Options Menu” on page 5-4.
System	
Options	
→	

Figure 5-2. System Menu

System Options Menu

Key Sequence: **Shift, System** (8) > System Options

System Options	
Date & Time	<p>Date and Time: This key brings up a dialog box for setting the current date and time. Use the submenu keys or the Left/Right arrow keys to select the field to be modified. Use the keypad, the Up/Down arrow keys or the rotary knob to select the date and time. Press Enter to accept the changes, or press the Esc key to return to normal operation without changing anything.</p>
Language	<p>Language: This submenu key brings up a selection box allowing selection from a list of built-in languages for the Spectrum Master displays. The languages currently available are English, French, German, Spanish, Japanese, Chinese, Korean, and Italian. In addition, up to two custom languages may be loaded into the instrument if they have been defined using the Master Software Tools. If a mode does not have language translations available, English is the default language. Press Enter to accept the change, or press the Esc key to return to normal operation without changing the setting.</p>
Display →	<p>Display: The Display submenu key opens the “Display Settings Menu” on page 5-5 allowing brightness control and the selection of the default color display, black & white display, night vision display, or a high contrast display.</p>
Name	<p>Name: Opens a dialog box to name the instrument. The unit can be named using the keypad to select numbers and the touch screen keys to select letter groups. Use the Shift key to select an upper case letter. Use the Left/Right directional arrows to move the cursor position. The Back Space key will remove the last character entered. Press Enter to save the name.</p>
Volume	<p>Volume: The current volume setting is displayed on the screen. Use the keypad, the Up/Down arrow keys or the rotary knob to change the volume and press the Enter key to accept the change.</p>
Reset →	<p>Reset: Press this submenu key to open the “Reset Menu” on page 5-6.</p>
Center Freq Share	<p>Center Freq Share: Select All Modes to have the current center frequency setting carried over when changing measurement modes. Not applicable to measurements which do not have a center frequency setting or measurements where the current center frequency setting is outside the range of the new measurement.</p>
All Modes Not Shared	

Figure 5-3. System Options Menu

Display Settings Menu

Key Sequence: **Shift, System** (8) > System Options > Display

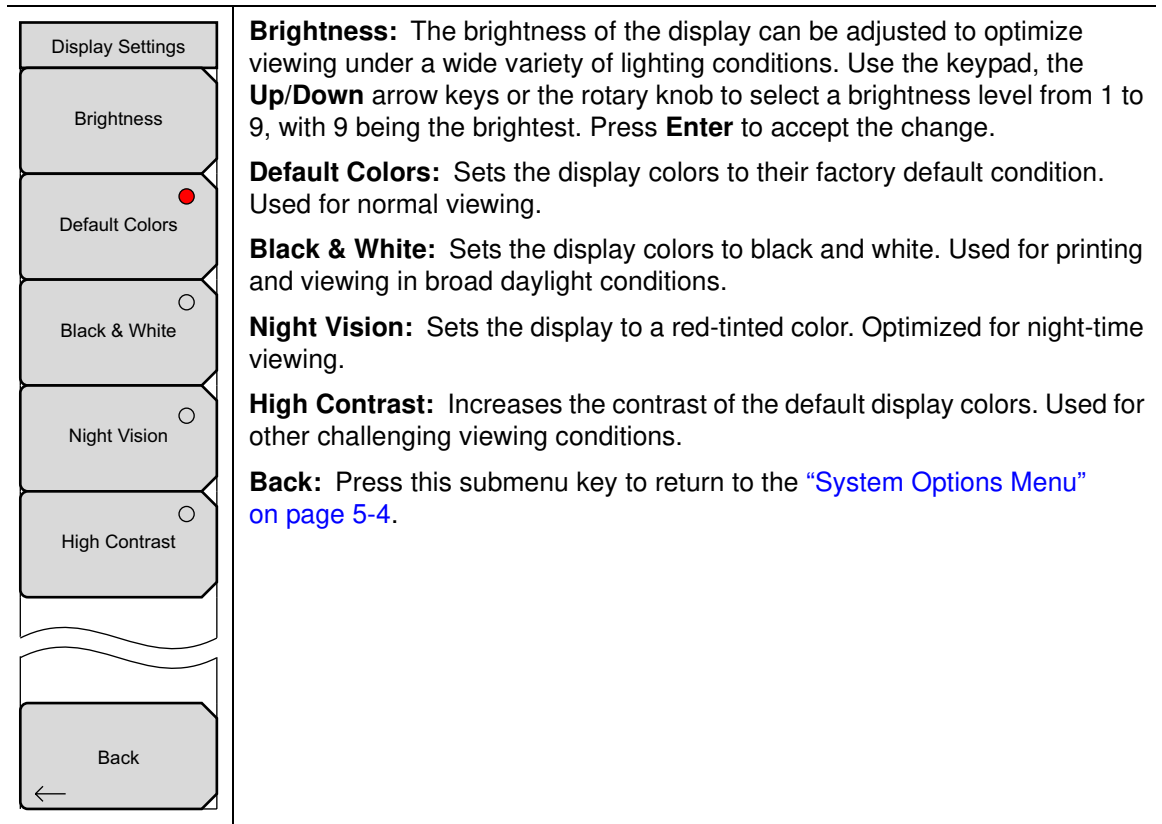


Figure 5-4. Display Settings Menu

Reset Menu

Key Sequence: **Shift, System** (8) > System Options > Reset

Reset	Factory Defaults: Restores the instrument to the factory default values, including language, volume, brightness setting, and user created shortcut icons on the Menu screen. Press the Enter key to initiate the reset, and power-cycle the instrument.
Factory Defaults	Master Reset: In addition to the functions described in Factory Defaults above, all user files in the internal memory are deleted, and the original language and antenna files are restored. Press the Enter key to initiate the Master Reset and power-cycle the instrument. Press Esc to return to normal operation without resetting.
Master Reset	Update Firmware: Press this submenu key to update the instrument operating system with a USB memory device. Press Enter and follow the onscreen instructions to update the firmware or press Esc to return to normal operation without updating. Refer to “Updating the Cell Master Firmware” on page 5-8 for additional information on firmware update options.
Update Firmware	Back: Press this submenu key to return to the “System Options Menu” on page 5-4 .
Back	

Figure 5-5. Reset Menu

5-4 Preset Menu

Key Sequence: **Shift, Preset** (1)

Preset	<p>Preset: This key resets the instrument to the default starting conditions.</p> <p>Save Setup: Opens the Save dialog box (Figure 4-1) to name and save the current operating settings, allowing them to be recalled later to return the instrument to the state it was in at the time the setup was saved.</p> <p>The saved setup can be named using the touch screen keyboard. Use the Caps key to select an upper case letter. Use the Left/Right directional arrows to move the cursor position. Press Enter to save the setup.</p> <p>Note: Set the File type as Setup. See “Save Menu” on page 4-9 for details.</p> <p>Recall Setup: This key allows the selection and recall of a previously stored instrument setup using the “Recall Menu” on page 4-12. Use the rotary knob, the Up/Down arrow keys, or the touchscreen to highlight the saved setup, and press Enter. All current instrument settings are replaced by the stored setup information.</p>
Preset	
Save Setup	
Recall Setup	

Figure 5-6. Preset Menu

5-5 Self Test

At power on, the Cell Master runs through a series of quick checks to ensure that the system is functioning properly. The System self test runs a series of tests that are related to the instrument. The Application Self Test runs a series of tests that are related to the current operating mode of the instrument.

If the Cell Master is within the specified operating range with a charged battery, and the self test fails, then contact your Anritsu Service Center (<http://www.anritsu.com/Contact.asp>).

To start a self test when the system is already powered up:

1. Press the **Shift** key and then the **System** (8) key.
2. Press the Self Test submenu key. The Self Test results are displayed.
3. Press **Esc** to continue.

5-6 Updating the Cell Master Firmware

Please review the MST User Guide section on copying firmware to a USB memory device.

Update From USB Memory Device

1. Run Master Software Tools and load the firmware update onto the USB memory device. Review the section (in MST Help) that discusses this process.
2. After the firmware is loaded, insert the USB memory device into the USB port of the instrument.
3. Press the following key sequence: **Shift** > **System** (8) > **System Options** > **Reset** > **Update Firmware**. The Load Firmware main menu key is displayed.
4. Press the **Load Firmware** main menu key to list the Firmware Update menu and Update Application Firmware submenu key.
5. Press the Update Application Firmware submenu key and the Firmware Update dialog opens.
6. Highlight each of the save choices: **Save None**, **Save User Data**, and **Save & Restore User Data**. Read through each choice carefully and then select the desired save mode.
 - **Save None:** No attempt will be made to save any user data.
 - **Save User Data:** User data will be save to the selected external media device.

Warning If there is not enough available memory space for all user data, then some data may be lost during this process.

- **Save & Restore:** User data will be saved to the selected external media device. The instrument will also attempt to restore the files to the instrument after the update.

Warning If there is not enough available memory space for all user data, then some data may be lost during this process.

7. Press **Enter** to begin the firmware update process. To abort the process, press **Esc** then choose another analyzer mode or power down.

8. The Firmware Update dialog will query you to confirm the process by pressing **Enter** to continue or **Esc** to abort.
9. Select **Enter** and the firmware update process begins and the Firmware Update dialog displays the following message
Updating firmware. Please Wait.
10. When complete, the instrument will reboot.

5-7 Cell Master Firmware Emergency Repair

If you have problems with booting up or updating firmware on the instrument, use the following steps to resolve the problem.

1. Press and hold the **Shift, 4 (Measure), 0,** and **On/Off** keys simultaneously until a green bar displays at the top of the screen. The Bootstrap window opens.
2. Place the USB memory device with update firmware into the USB connector on the instrument. Please review the MST User Guide section on copying firmware to a USB memory device.
3. Touch the Load All command line on the screen.
4. A successful emergency repair returns:
Loading applications passed.
Loading DSP FPGA passed.
Loading SPA FPGA passed.
Loading OS passed.
5. Power down and power up the instrument.

Chapter 6 — GPS (Option 31)

6-1 Introduction

The Cell Master is available with a built-in GPS receiver feature (Option 31) that can provide latitude, longitude, altitude, and UTC timing information. This option also enhances frequency reference oscillator accuracy in the spectrum analyzer mode. Within three minutes of satellite acquisition, the reference oscillator will have an accuracy of better than 50 ppb (parts per billion).

In order to acquire data from the GPS satellites, the user must have line-of-sight to the satellites or the antenna must be placed outside without any obstructions. Anritsu GPS antenna 2000-1528-R is required.

Note	The Cell Master Technical Data Sheet provides a list of the options and measurements that require GPS (Option 31).
-------------	--

6-2 Chapter Overview

- [Section 6-3 “Activating the GPS Feature” on page 6-1](#)
- [Section 6-4 “Saving and Recalling Traces with GPS Information” on page 6-3](#)
- [Section 6-5 “GPS Menu” on page 6-4](#)

6-3 Activating the GPS Feature

Install the Anritsu GPS antenna onto the GPS Antenna connector on the Cell Master.

1. Press the **Shift** key, then the **System** (8) key.
2. Press the GPS submenu key.
3. Press the GPS On/Off submenu key to toggle the GPS feature on or off. When GPS is first turned on, a RED GPS icon will be appear at the top of the display.



Figure 6-1. GPS Icon, Red

4. When the GPS receiver has tracked at least three satellites, the GPS icon will change to GREEN. Latitude and Longitude information is displayed in the white bar on top of the display. Acquiring satellites may take as long as three minutes.



Figure 6-2. GPS Icon, Green

5. Press the GPS Info submenu key to view information about:

- Tracked Satellites
- Latitude and Longitude
- Altitude
- UTC
- Fix Available
- Almanac complete
- Antenna and Receiver Status
- GPS Antenna Voltage and Current

See [Section 6-5 “GPS Menu” on page 6-4](#) for details about the GPS Info dialog box.

6. Press the Reset submenu key to reset the GPS.

7. The GREEN GPS icon with a RED CROSS through it, as shown below, appears when GPS satellite tracking is lost (after actively tracking 3 or more satellites). The GPS longitude and latitude are saved in the instrument memory until the Cell Master is turned off or until GPS is turned off by using the GPS On/Off key.



Figure 6-3. GPS Icon, Tracking Lost

6-4 Saving and Recalling Traces with GPS Information

Saving Traces with GPS Information


The GPS coordinates of a location can be saved along with a measurement trace. Refer to the [“Save Menu” on page 4-9](#) for more information. The current GPS coordinates will be saved with the measurement traces whenever GPS is on and actively tracking satellites.

Recalling GPS Information

If the GPS coordinates were saved with a measurement, then when the measurement is recalled, the coordinates that were saved are recalled as well. Refer to the [“Recall Menu” on page 4-12](#) for more information about recalling a saved trace.

6-5 GPS Menu

Key Sequence: **Shift, System** (8) > GPS

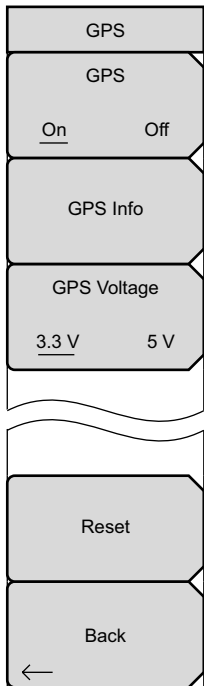

GPS: Press this submenu key to turn GPS on or off.

GPS Info: Press this submenu key to display the current GPS information.

Tracked Satellites: Shows the number of tracked satellites (three are required to retrieve latitude and longitude, four are required to resolve altitude). Generally, the larger number of satellites tracked, the more accurate the information.

Latitude and Longitude: Shows location in degrees, minutes, and seconds.

Altitude: Shows altitude information in meters.

UTC: Universal Coordinated Time.

Fix Available: The cold start search sets are established to ensure that at least three satellites are acquired within the first couple of minutes. When three satellites are found, the receiver will compute an initial fix (typically in less than two minutes). **Fix Not Available** means that the initial position has not been established.

Almanac Complete: The system Almanac contains information about the satellites in the constellation, ionospheric data, and special system messages. In a cold start, the GPS receiver does not have any navigation data so the receiver does not have a current almanac. A complete system almanac is not required to achieve a first position fix. The availability of the almanac, however, can significantly reduce the time to first fix.

Antenna Status:

OK: Antenna is connected properly and antenna is working properly

Short/Open: A short or open exists between the antenna and the connection. If this message is displayed, then remove and replace the GPS antenna. If the message persists, then try another Anritsu GPS antenna (part number 2000–1528-R). If the message persists, then contact your nearest Anritsu Service Center.

Receiver Status: Current status of the receiver.

GPS Antenna Voltage and Current: Shows voltage and current.

GPS Voltage: Press this submenu key to set the source voltage to be either 3.3 V or 5 V depending on the GPS receiver being used. GPS antenna voltage is set to 3.3 V by default in order to prevent accidental damage to lower-voltage GPS antennas.

Reset: The Reset key sets the tracked number of satellites to 0 and erases any almanac data, along with saved coordinates. The process of searching for and reacquiring satellites will begin again.

Back: Press this submenu key to return to the [“System Menu” on page 5-3](#).

Figure 6-4. GPS Menu

Chapter 7 — Bias Tee (Option 10)

7-1 Overview

Option 10 provides a bias tee that is installed inside the instrument. The bias arm is connected to a 12 VDC-to-32 VDC power source that can be turned on as needed to place the voltage on the center conductor of the instrument's RF In port. This supply of bias implies it is mostly useful when conducting two-port transmission measurements. This voltage can be used to provide power to block down-converters in satellite receivers and can also be used to power some tower-mounted amplifiers.

The bias can be turned on only when the instrument is in transmission measurement or spectrum analyzer mode.

When bias is turned on, the bias voltage and current are displayed in the lower left corner of the display. The 12 VDC-to-32 VDC power supply is designed to continuously deliver a maximum of 6 Watts.

The bias tee menu can be accessed from the applications options menu and in transmission measurement, it can also be accessed from the **Measure** main menu.

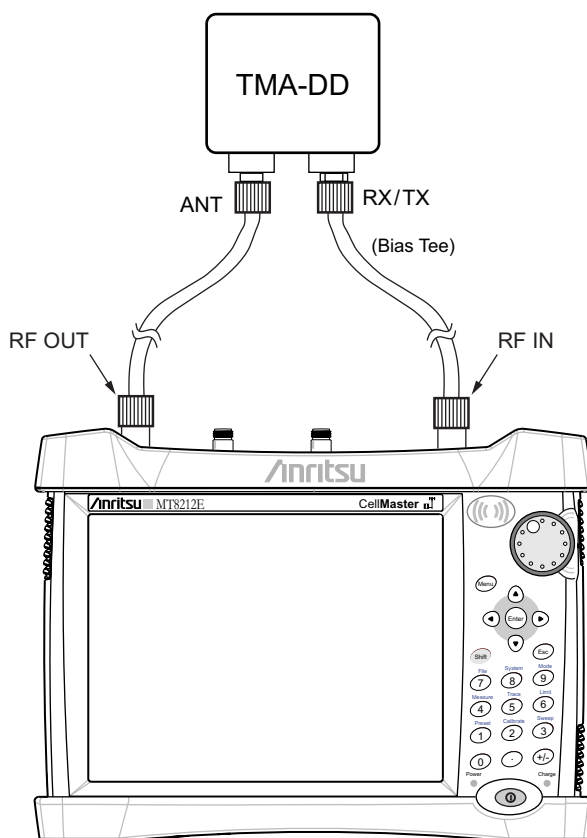


Figure 7-1. Variable Bias Tee

Chapter 8 — Master Software Tools

8-1 Introduction

This chapter provides a brief overview of Master Software Tools (MST). For detailed information, refer to the MST Manual.

8-2 MST Overview

Anritsu Master Software Tools is a Windows 2000 and later compatible program for transferring and editing saved measurements, markers, and limit lines to a PC. Master Software Tools will not function on earlier versions of the Microsoft Windows operating system.

8-3 Feature Overview

Capturing or Retrieving Traces

MST includes a feature to capture the current screen and associated data from the test instrument to the Master Software Tools Graphic Display Editor window. Saved files on the test instrument can also be retrieved and displayed or edited with Master Software Tools.

Editing Graphs

MST can be used to change the scale, limit lines, and markers in a measurement through the Edit Graph button in the workspace toolbar, or through the Context Menus.

Context Menus

Context Menus are accessed by right-clicking the mouse on an active measurement screen in the Graphic Display Editor Window. Context Menu functions may include commands that are also available on the pull down menus and toolbar buttons, or functions, commands, and options specific to the active measurement window.

Overlaying Traces

Trace Math and Overlays allow for comparing multiple traces.

Folder Spectrogram

Folder Spectrogram provides a simulated three dimensional view of a large amount of data in one set of graphs.

8-4 Installing MST

MST is provided on the CD-ROM included with the instrument. Insert the CD-ROM into a PC to run the installer. Follow the onscreen instruction.

8-5 Connecting to the Instrument

Use the USB cable supplied with the test instrument to make the connection.

1. Connect the USB cable to the USB-A port on the computer and to the USB-min B port on the test instrument.
2. Turn on the test instrument. Run the Master Software Tools program.
3. Pull down the **Connection** menu and click on Connect – USB. This establishes communication to the test instrument.

8-6 Updating Cell Master Firmware

Refer to [“Updating the Cell Master Firmware”](#) on page 5-8.

Appendix A — Measurement Guides

A-1 Introduction

This appendix provides a list of supplemental documentation for Cell Master features and options. These measurement guides are available as PDF files on the Master Software Tools CD-ROM and the Anritsu Website.

Table A-1. Analyzers and Analyzer Options

Cell Master Feature (Required Option)	Related Document (Part Number)
Cable and Antenna Analyzer	Cable and Antenna Analyzer Measurement Guide (10580-00241)
Bias-Tee (0010) 2-Port Transmission Measurement (0021)	2-Port Transmission Measurement Guide (10580-00242)
W-CDMA/HSDPA Over-the-Air Signal Analyzer (0035) TD-SCDMA/HSDPA Over-the-Air Signal Analyzer (0038) GSM/GPRS/EDGE RF Signal Analyzer (0040) GSM/GPRS/EDGE Demodulated Signal Analyzer (0041) W-CDMA/HSDPA RF Signal Analyzer (0044) W-CDMA Demodulated Signal Analyzer (0045) TD-SCDMA/HSDPA RF Signal Analyzer (0060) TD-SCDMA/HSDPA Demodulated Signal Analyzer (0061) W-CDMA/HSDPA Demodulated Signal Analyzer (0065) LTE RF Measurements (0541) LTE Modulation Measurement (0542) LTE Over-the-Air Measurements (0546)	3GPP Signal Analyzer Measurement Guide (10580-00234)
cdmaOne/CDMA2000 1X Over-the-Air Signal Analyzer (0033) CDMA2000 1xEV-DO Over-the-Air Signal Analyzer (0034) cdmaOne/CDMA2000 1X RF Signal Analyzer (0042) cdmaOne/CDMA2000 1X Demodulated Signal Analyzer (0043) CDMA2000 1xEV-DO RF Signal Analyzer (0062) CDMA2000 1xEV-DO Demodulated Signal Analyzer (0063)	3GPP2 Signal Analyzer Measurement Guide (10580-00235)

Table A-1. Analyzers and Analyzer Options

Cell Master Feature (Required Option)	Related Document (Part Number)
ISDB-T Measurements (0030) ISDB-T SFN Field Measurements (0032)	Digital Video Broadcast Signal Analyzer Measurement Guide (10580-00237)
High-Accuracy Power Meter (0019) Power Meter (0029)	Power Meter Measurement Guide (10580-00240)
Spectrum Analyzer Interference Analyzer (0025) Channel Scanner (0027) C/W Signal Generator (0028) Gated Sweep (0090) Coverage Mapping (0431)	Spectrum Analyzer Measurement Guide (10580-00231)
IEEE 802.16 Mobile WiMAX Over-the-Air Signal Analyzer (0037) IEEE 802.16 Fixed WiMAX RF Signal Analyzer (0046) IEEE 802.16 Fixed WiMAX Demodulated Signal Analyzer (0047) IEEE 802.16 Mobile WiMAX RF Signal Analyzer (0066) IEEE 802.16 Mobile WiMAX Demodulated Signal Analyzer (0067)	WiMAX Signal Analyzer Measurement Guide (10580-00236)
T1 Analyzer (0051) E1 Analyzer (0052) T3/T1 Analyzer (0053)	Backhaul Analyzer Measurement Guide (10580-00238)
ODTF-1 Optical Distance-to-Fault Module	ODTF-1 Optical Distance-to-Fault User Guide (10580-00215)
Performance Specifications	Cell Master Technical Data Sheet (11410-00485)
SCPI Programming Manual	Cell Master Programming Manual (10580-00256)
Computer Software Application	Master Software Tools (CD-ROM or Download)

Index

- A**
- additional documents A-1
 - annual verification 1-5
 - application
 - self test 5-8
- B**
- batteries and chargers 2-12
 - battery replacement 1-6
 - battery symbols 2-11
 - bias tee 7-1
 - black and white 5-5
 - brightness 5-5
- C**
- calibrate touch screen 5-3
 - calibration symbols 2-11
 - carrying case 1-8
 - center frequency share 5-4
 - change directory 4-9
 - charging battery 1-7
 - connecting to a PC 8-2
 - connector panel 2-9
 - copy menu 4-13
 - create folder 4-10
- D**
- default colors 5-5
 - display 5-4
- E**
- electrostatic discharge 1-6
 - emergency repair 5-9
 - entering data 2-13
 - external power 2-9
- F**
- factory defaults 5-6
 - file management 4-1
 - file menu 4-8
 - file name 4-2
 - file types 4-9
 - firmware
 - updating 5-6, 5-8, 8-2
 - floppy icon 2-12
 - frequency range 1-1
- G**
- GPS 6-1
 - GPS menu 6-4
- H**
- high contrast 5-5
- L**
- language, display 5-4
- M**
- maintenance 1-5
 - master reset 5-6
 - Master Software Tools 2-9, 8-1
 - measurement guides A-1
 - menu
 - copy 4-13
 - delete 4-14
 - file 4-8
 - GPS 6-4
 - mode selector 2-14
 - preset 5-7
 - recall 4-12
 - reset 5-6
 - save 4-9
 - save location 4-10
 - save on event 4-11
 - system 5-3
 - system options 5-4, 5-5
 - mode selector 2-14
- N**
- night vision 5-5
- P**
- packaged items 1-3
 - power supply 2-1
 - preset menu 5-7
- Q**
- quick name key 4-2
- R**
- recall menu 4-11, 4-12
 - refresh directories 4-10
 - reset settings 5-6
- S**
- safety symbols
 - for safety Safety-2
 - in manuals Safety-1
 - on equipment Safety-1

T to V

save menu 4-9
select files and folders 4-13
self test 5-3, 5-8
single sweep 2-12
standard accessories 1-3
system menu 5-2
system self test 5-8

T

tilt bail 1-10
touch screen keyboard 2-13
touch screen keys 2-5

U

USB connectors 2-9

V

volume 5-4

Anritsu



Anritsu prints on recycled paper with vegetable soybean oil ink.

Anritsu Company
490 Jarvis Drive
Morgan Hill, CA 95037-2809
USA
<http://www.anritsu.com/>

www.valuetronics.com