

OPERATING INFORMATION

86602B RF SECTION 1-1300 MHz

DUPLICATE OF SECTIONS 1 THRU 3
OF YOUR OPERATING AND SERVICE MANUAL
KEEP WITH INSTRUMENT

Printed: AUGUST 1981

© Hewlett-Packard Co. 1975, 1977, 1979



**HEWLETT
PACKARD**

MODEL 86602B



Figure 1-1. HP Model 86602B RF Section (Option 002 Shown)

SECTION I GENERAL INFORMATION

1-1. INTRODUCTION

1-2. This manual contains all information required to install, operate, test, adjust and service the Hewlett-Packard Model 86602B RF Section plug-in, hereinafter referred to as the RF Section. For information concerning related equipment, such as the Hewlett-Packard Model 8660-series mainframes or the Model 11661 Frequency Extension Module, refer to the appropriate manual or manuals.

1-3. This manual is divided into eight sections which provide information as follows:

a. SECTION I, GENERAL INFORMATION, contains the instrument description and specifications as well as the accessory and recommended test equipment list.

b. SECTION II, INSTALLATION, contains information relative to receiving inspection, preparation for use, mounting, packing, and shipping.

c. SECTION III, OPERATION, contains operating instructions for the instrument.

d. SECTION IV, PERFORMANCE TESTS, contains information required to verify that instrument performance is in accordance with published specifications.

e. SECTION V, ADJUSTMENTS, contains information required to properly adjust and align the instrument after repair.

f. SECTION VI, REPLACEABLE PARTS, contains information required to order all replacement parts and assemblies.

g. SECTION VII, MANUAL CHANGES, provides information to document all serial number prefixes listed on the title page.

h. SECTION VIII, SERVICE, contains descriptions of the circuits, schematic diagrams, parts location diagrams, and troubleshooting procedures to aid the user in maintaining the instrument.

1-4. Figure 1-1 shows the Option 002 RF Section.

1-5. Packaged with this manual is an Operating Information Supplement. This is simply a copy of the first three sections of this manual. This supplement should stay with the instrument for use by the operator. Additional copies of the Operating Information Supplement may be ordered separately through your nearest Hewlett-Packard office. The part number is listed on the title page of this manual.

1-6. On the title page of this manual, below the manual part number, is a "Microfiche" part number. This number may be used to order 4 x 6-inch microfilm transparencies of the manual. Each microfiche contains up to 60 photoduplicates of the manual pages. The microfiche package also includes the latest Manual Changes supplement as well as all pertinent Service Notes.

1-7. SPECIFICATIONS

1-8. Instrument specifications are listed in Table 1-1. These specifications are the performance standards, or limits against which the instrument may be tested.

1-9. INSTRUMENTS COVERED BY MANUAL

1-10. This instrument has a two-part serial number. The first four digits and the letter comprise the serial number prefix. The last five digits form the sequential suffix that is unique to each instrument. The contents of this manual apply directly to instruments having the same serial number prefix(es) as listed under SERIAL NUMBERS on the title page.

1-11. For information concerning a serial number prefix not listed on the title page or in the Manual Changes supplement, contact your nearest Hewlett-Packard office.

1-12. MANUAL CHANGE SUPPLEMENTS

1-13. An instrument manufactured after the printing of this manual may have a serial prefix that is not listed on the title page. This unlisted serial

Table 1-1. Models 86602B/11661 Specifications (1 of 3)

SPECIFICATIONS

FREQUENCY CHARACTERISTICS

Range: 1.0 to 1299.999999 MHz selectable in 1 Hz steps. Frequencies from 200 kHz to 1 MHz may also be selected with some degradation in specifications.

Accuracy and Stability¹: CW frequency accuracy and long term stability are determined by the aging rate of the time base (internal or external) and its sensitivity to changes in temperature and line voltage. Internal reference oscillator accuracy = \pm aging rate $\pm 3 \times 10^{-10} / ^\circ\text{C} \pm 3 \times 10^{-10} / 1\%$ change in line voltage.

Switching Time: 6 ms to be within 50 Hz of any new frequency selected; 100 ms to be within 5 Hz of any new frequency selected.

Largest Digit Changed	Error at:	
	1 ms	1 ms
1 Hz 10 Hz	<1 Hz	<1 Hz
100 Hz	<100 Hz	<1 Hz
1 kHz 10 kHz	<500 Hz	<10 Hz
100 kHz 1 MHz	<500 Hz	<50 Hz
10 MHz	<500 Hz	<50 Hz
100 MHz, 1 GHz	Undefined	<50 Hz

Typical 86602B/11661
Frequency Switching Characteristics

Harmonic Signals:

All harmonically related signals are at least 30 dB below the desired output signal for output levels $\leq +3$ dBm. (25 dB down for output levels above +3 dBm.)

Spurious Signals (CW, AM, and ϕ M only):


- 80 dB down from carrier at frequencies <700 MHz
- 80 dB down from carrier within 45 MHz of the carrier at frequencies ≥ 700 MHz
- 70 dB down from carrier >45 MHz from carrier at frequencies ≥ 700 MHz
- 50 dB down from carrier on the +10 dBm range.

All Power Line Related spurious signals are 70 dB down from carrier.

Signal-to-Phase Noise Ratio (CW, AM, and ϕ M only):

Greater than 45 dB in a 30 kHz band centered on the carrier and excluding a 1 Hz band centered on the carrier.

Typical SSB Phase Noise Curve:

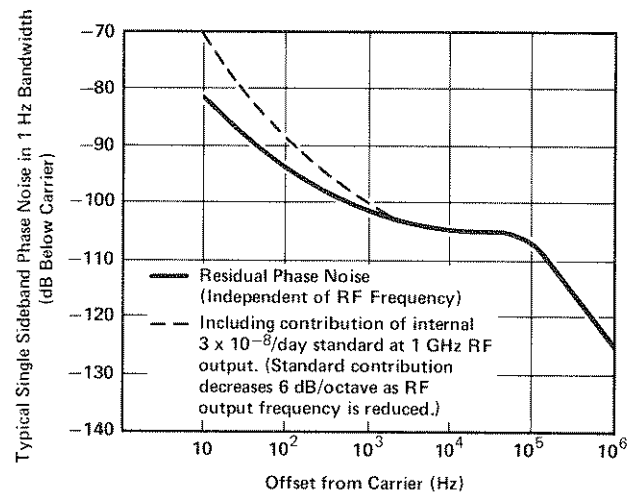

Typical 86602B Phase Noise

Signal-to-AM Noise Ratio: Greater than 65 dB down in a 30 kHz bandwidth centered on the carrier and excluding a 1 Hz band centered on the carrier

¹ Aging rate for the time base of standard mainframes is 3×10^{-8} /day; for option 001 mainframes, 3×10^{-9} /day.

Table 1-1. Models 86602B/11661 Specifications (2 of 3)

OUTPUT CHARACTERISTICS

Level: Continuously adjustable from +10 to -146 dBm (0.7 Vrms to 0.01 μ Vrms) into a 50 Ω resistive load. Output attenuator calibrated in 10 dB steps from 1.0V full scale (+10 dBm range) to 0.03 μ Vrms full scale (-140 dBm range). Vernier provides continuous adjustment between attenuator ranges. Output level indicated on output level meter calibrated in volts and dBm into 50 ohms.

Accuracy: (Local and remote modes)
 ± 1.5 dB to -76 dBm; ± 2.0 dB to -146 dBm at meter readings between +3 and -6 dB.

Flatness: Output level variation with frequency is less than ±1.0 dB from 1-1300 MHz at meter readings between +3 and -6 dB.

Level Switching Time: In the remote mode any level change can be accomplished in less than 50 ms. Any change to another level on the same attenuator range can be accomplished in less than 5 ms.

Impedance: 50 Ω .

VSWR: <2.0 on +10 and 0 dBm range; <1.3 on -10 dBm range and below.

MODULATION CHARACTERISTICS
 (With compatible Modulation Sections)


Amplitude Modulation:

Depth: 0 - 90% for RF output level meter readings from +3 to -6 dB and only at +3 dBm and below.


AM 3 dB Bandwidth:

Center Frequency	AM 3 dB Bandwidth		
	0 to 30% AM	0 to 70% AM	0 to 90% AM
<10 MHz	10 kHz	6 kHz	5 kHz
≥10 MHz	100 kHz	60 kHz	50 kHz

AM Total Harmonic Distortion ²		
AT 30% AM	AT 70% AM	AT 90% AM
<1%	<3%	<5%

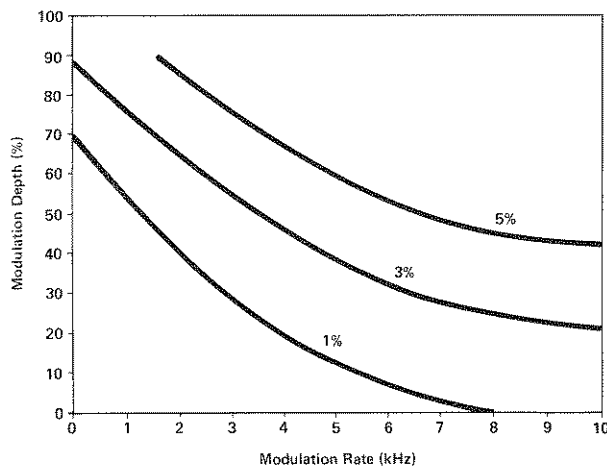

Typical AM Distortion (Center Frequency <10 MHz)

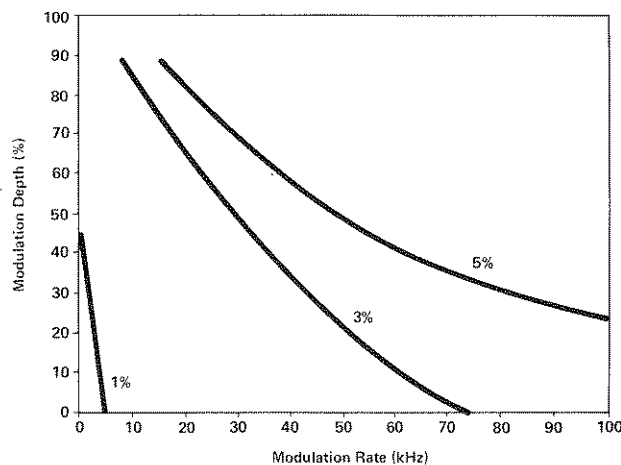

Typical AM Distortion (Center Frequency ≥10 MHz)

Incidental PM: Less than 0.2 radians peak at 30% AM.

Incidental FM: Less than 0.2 times the frequency of modulation (Hz) at 30% AM.

² Applies only at 400 Hz and 1 kHz rates with the RF Section front panel meter indicating from 0 to +3 dBm. At a meter indication of -6 dB the distortion approximately doubles. The modulating signal distortion must be <0.3% for the system performance to meet these specifications.

Table 1-1. Models 86602B/11661 Specifications (3 of 3)

FREQUENCY MODULATION


Rate: DC to 200 kHz with the 86632B and 86635A.
20 Hz to 100 kHz with the 86633B.

Maximum Deviation (peak):
200 kHz with the 86632B and 86635A
100 kHz with the 86633B

Incidental AM: AM sidebands are greater than 60 dB down from the carrier with 75 kHz peak deviation at a 1 kHz rate.

FM Total Harmonic Distortion (at rates up to 20 kHz):
<1% up to 200 kHz deviation. (External modulating signal distortion must be less than 0.3%.)

Residual FM: less than 10 Hz rms average in 300 Hz to 3 kHz, post-detection bandwidth, FM x 0.1 mode.

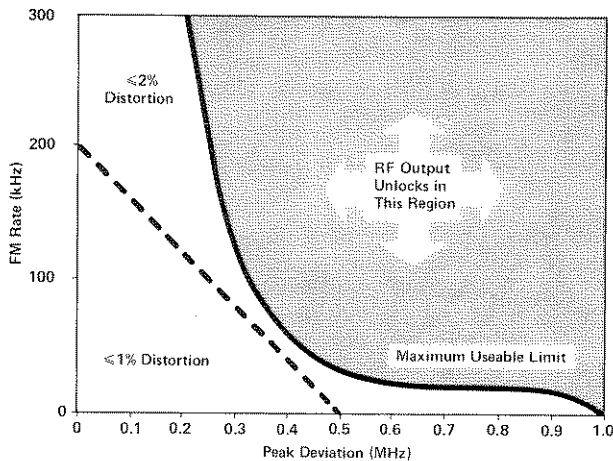

Typical FM Distortion Curve

PULSE MODULATION

(With the 86631B Auxiliary Section only)

Source: External

Rise/Fall Time: 50 ns.

ON/OFF Ratio: At least 40 dB.

Input Level Required: -10 ± 0.5 Vdc turns RF on.

PHASE MODULATION
(Option 002 Instruments only)

Rate:
with 86635A dc to 1 MHz
with 86634A
dc to 1 MHz at center frequencies less than 100 MHz
dc to 10 MHz at center frequencies greater or equal to 100 MHz.

Maximum Peak Deviation:
0 to 100 degrees peak. May be overdriven to 2 radians (115°) in the Modulation Section's external dc mode.

ϕM Distortion:
<5% up to 1 MHz rates
<7% up to 5 MHz rates
<15% up to 10 MHz rates

(External modulation signal distortion must be less than 0.3% to meet this specification.)

REMOTE PROGRAMMING
(Through the 8660-series mainframes)

Frequency: Programmable in 1 Hz steps.
Output Level: Programmable in 1 dB steps from +10 to -146 dBm.
Modulation: See specifications for modulation section installed.

GENERAL

Leakage: Meets radiated and conducted limits of MIL-I-6181D.
Size: Plug-in to fit 8660-series mainframe.
Weight: Net 9 lb (3.9 kg).

prefix indicates that the instrument is different from those documented in this manual. The manual for this instrument is supplied with a yellow Manual Changes supplement that contains "change information" that documents the differences.

1-14. In addition to change information, the supplement may contain information for correcting errors in the manual. To keep this manual as current and accurate as possible, Hewlett-Packard recommends that you periodically request the latest Manual Changes supplement. The supplement for this manual is keyed to this manual's print date and part number, both of which appear on the title page. Complimentary copies of the supplement are available from Hewlett-Packard.

1-15. DESCRIPTION

1-16. The HP Model 86602B RF Section is one of several RF Sections available for use in an 8660-series Synthesized Signal Generator System. This RF Section plug-in is used with an option 100 8660-series mainframe (Frequency Extension Module installed). The RF Section provides precisely tuned RF output frequencies over the 1 to 1300 MHz range with 1 Hz frequency resolution (8660-series option 004 instruments have resolutions of 100 Hz.) Frequencies from 200 kHz to 1 MHz can also be generated with some degradation in the amplitude leveling and other related specifications.

1-17. The output power can be set to any level between +10 and -146 dBm by means of the front panel VERNIER and calibrated OUTPUT RANGE controls. A front panel-mounted meter and the OUTPUT RANGE switch indicate the output power and voltage levels delivered by the RF Section to any external load having a characteristic impedance of 50 ohms. Output power levels are maintained within ± 1 dB of selected values through internal leveling of the output signal over the full frequency range of the instrument.

1-18. Amplitude, frequency, phase, or pulse modulation of the RF OUTPUT signal can be accomplished within the RF Section by using the appropriate Auxiliary or Modulation Section plug-in.

1-19. External programming permits remote selection of the output signal frequency in 1 Hz steps (100 Hz for option 004 mainframes) and the output power in 1 dB steps over the full operating

range of the instrument. External programming is accomplished via the mainframe computer-compatible interface and digital control unit circuits.

1-20. OPTIONS

1-21. This RF Section has two options available. They affect the instrument's RF output level, and phase modulation capabilities.

1-22. **Option 001.** The RF output attenuator is removed. This limits the RF output level range from +10 to -6 dBm.

1-23. **Option 002.** Circuits are added to provide the phase modulation capability. A compatible modulation section is required.

1-24. COMPATIBILITY

1-25. Except for Option 002 instruments, the Model 86602B is compatible with all 8660-series option 100 mainframes, all AM-FM Modulation Sections and the Auxiliary Section. This RF Section is partially compatible with the FM/ ϕ M Modulation Section.

CAUTION

Damage to the signal generator system may result if an option 002 RF Section is used with Model 8660A or 8660B mainframes with serial prefixes 1349A and below.

1-26. Option 002 instruments are compatible with all instruments which are part of the Model 8660-series Synthesized Signal Generator System except early model 8660A and 8660B Mainframes. Refer to the paragraph entitled Modifications in Section II of this manual for further information.

1-27. EQUIPMENT REQUIRED BUT NOT SUPPLIED

1-28. System Mainframe

1-29. The mainframe uses phase-locked loops to accurately generate clock, reference, and tuning signals required for operation of the Synthesized Signal Generator System. Front panel-mounted mainframe controls are used to digitally tune two phase-locked loops in the Frequency Extension Module which, in turn, produce two high-frequency output signals that are applied to the RF Section. The RF Section mixes the two signals

and presents their frequency difference at the front panel OUTPUT jack. The output frequency is either the value selected by the mainframe front panel controls or external programming.

1-30. The mainframe power supply provides all dc operating voltages required by the RF Section, Frequency Extension Module, and Modulation Section plug-ins. Remote programming of the plug-ins is accomplished via the mainframe interface and digital control unit circuits.

1-31. Frequency Extension Module

1-32. The Frequency Extension Module plug-in extends the output frequency range of the mainframe to meet the input requirements of the RF Section. The Frequency Extension Module plug-in contains two high-frequency phase-locked loops which receive digital tuning signals, variable synthesized signals, and fixed synthesized signals from the mainframe. The phase-locked loops use the mainframe signals, in conjunction with the output frequency from a 4.43 GHz oscillator that is common to both loops, to produce two high-frequency output signals that are supplied to the RF Section. One output signal is generated by a phase-locked loop using a Voltage Controlled Oscillator (VCO) that is tuneable in 1 Hz steps (100 Hz steps for option 004 mainframe) over the 3.95 to 4.05 GHz range. The other output signal is generated by a phase-locked loop using a Yttrium-Iron-Garnet (YIG) oscillator that is tunable in 100 MHz steps over the 3.95 to 2.75 GHz range. The two outputs from the Frequency Extension Module plug-in are applied to the RF Section for mixing, amplification of the converted signal, and final output power level control.

1-33. Auxiliary Section

1-34. The Auxiliary Section plug-in provides a means of applying externally generated amplitude or pulse modulation drive signals to modulate the RF Section's output carrier.

1-35. Modulation Section Plug-ins

1-36. The Model 86630-series Modulation Section plug-ins can accept external modulation drive signals or generate internal drive signals to amplitude, frequency, phase or pulse modulate the RF Sections output signal.

1-37. EQUIPMENT AVAILABLE

1-38. Extender cables, coaxial adapters, and an adjustment tool are available for use in performance testing, adjusting, and maintaining the RF Section. Each piece may be ordered separately or as part of the 11672A Service Kit.

1-39. Extender cards for use in servicing the RF Section and a type N to BNC adapter for use on the front panel RF OUTPUT connector are contained in the HP Rack Mount Kit, Part Number 08660-60070, that is supplied with the mainframe.

1-40. SAFETY CONSIDERATIONS

1-41. This instrument has been designed in accordance with international safety standards and has been supplied in safe condition.

1-42. Although this instrument has been designed in accordance with international safety standards, this manual contains information, cautions, and warnings which must be followed to retain the instrument in safe condition. Be sure to read and follow the safety information in Sections II, III, V, and VIII.

SECTION II INSTALLATION

2-1. INTRODUCTION

2-2. This section provides information relative to initial inspection, preparation for use, and storage and shipment of the Model 86602B RF Section plug-in. Initial Inspection provides instructions to be followed when an instrument is received in a damaged condition. Preparation For Use gives all necessary interconnection and installation instructions. Storage and Shipment provides instructions and environmental limitations pertaining to instrument storage. Also provided are packing and packaging instructions which should be followed in preparing the instrument for shipment.

2-3. INITIAL INSPECTION

2-4. Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked for completeness and the instrument has been checked mechanically and electrically. The contents of the shipment should be as shown in Figure 1-1, and procedures for checking electrical performance are given in Section IV. If the contents are incomplete, if there is mechanical damage or defect, or if the instrument does not pass the electrical performance test, notify the nearest Hewlett-Packard office. If the shipping container is damaged, or the cushioning material shows signs of stress, notify the carrier as well as the Hewlett-Packard office. Keep the shipping materials for carrier's inspection. The HP office will arrange for repair or replacement without waiting for claim settlement.

2-5. PREPARATION FOR USE

2-6. Power Requirements

2-7. All power required for operation of the RF Section is furnished by the mainframe. This RF Section requires approximately 40 volt-amperes.

2-8. Interconnections

2-9. Prior to installing the RF Section plug-in into the mainframe, verify that the Frequency Extension Module plug-in and interconnecting cable assemblies have been installed in accordance with the instructions contained in the Frequency Extension Module manual.

2-10. Modifications

2-11. A power supply modification to older versions of Model 8660A and 8660B mainframes are required if they are to be used with the option 002 RF Section.

CAUTION

Damage to the synthesized signal generator system may result if an option 002 RF Section is used with an older 8660A or 8660B mainframe.

2-12. Due to the increased power consumption of the option 002 instrument, mainframes with serial prefixes 1349A and below must be modified by installing a Field Update Kit. For mainframe configurations other than option 003 (60 Hz line operation), order kit number 08660-60273. For option 003 mainframes (50 — 400 Hz line operation) order kit number 08660-60274.

NOTE

Verify that a new higher current fuse, HP Part Number 2110-0365, 4A Slow Blow, is used in mainframes with the power supply modification.

2-13. Operating Environment

2-14. The RF Section is designed to operate within the following environmental conditions:

Temperature 0° to +55° C
Humidity less than 95% relative
Altitude less than 15,000 feet

2-15. Installation Instructions

WARNING

The multi-pin plug connector which provides interconnection from mainframe to RF Section, will be exposed with the RF Section removed from the right-hand mainframe cavity. With the Line (Mains) Voltage off and power cord disconnected, power supply voltages may still remain which, if contacted, may constitute a shock hazard.

2-16. Insert the plug-in approximately half-way into the right cavity of the mainframe. Rotate the latch (lower right corner) to the left until it protrudes perpendicular to the front panel. Refer to Figure 2-1, which shows the plug-in partially inserted into the mainframe and the latch rotated to a position that is perpendicular to the plug-in front panel. Push the plug-in all the way into the mainframe cavity and then rotate the latch to the right until it snaps into position.

2-17. STORAGE AND SHIPMENT

2-18. Environment

2-19. The storage and shipping environment of the RF Section should not exceed the following limits:

Temperature	40° to +75° C
Humidity	less than 95% relative
Altitude	less than 25,000 feet

2-20. Packaging

2-21. Original Type Packaging. Containers and materials identical to those used in factory packaging are available through Hewlett-Packard offices. If the instrument is being returned to Hewlett-Packard for servicing, attach a tag indicating the type of service required, return address, model number, and full serial number. Also mark

the container **FRAGILE** to assure careful handling. In any correspondence, refer to the instrument by model number and full serial number.

2-22. Other Packaging. The following general instructions should be used for re-packaging with commercially available materials:

- a. Wrap the instrument in heavy paper or plastic. (If shipping to a Hewlett-Packard office or service center, attach a tag indicating the type of service required, return address, model number, and full serial number.)
- b. Use a strong shipping container. A double-wall carton made of 350-pound test material is adequate.
- c. Use enough shock-absorbing material (3 to 4-inch layer) around all the sides of the instrument to provide firm cushion and prevent movement inside the container. Protect the control panel with cardboard.
- d. Seal the shipping container securely.
- e. Mark the shipping container **FRAGILE** to assure careful handling.

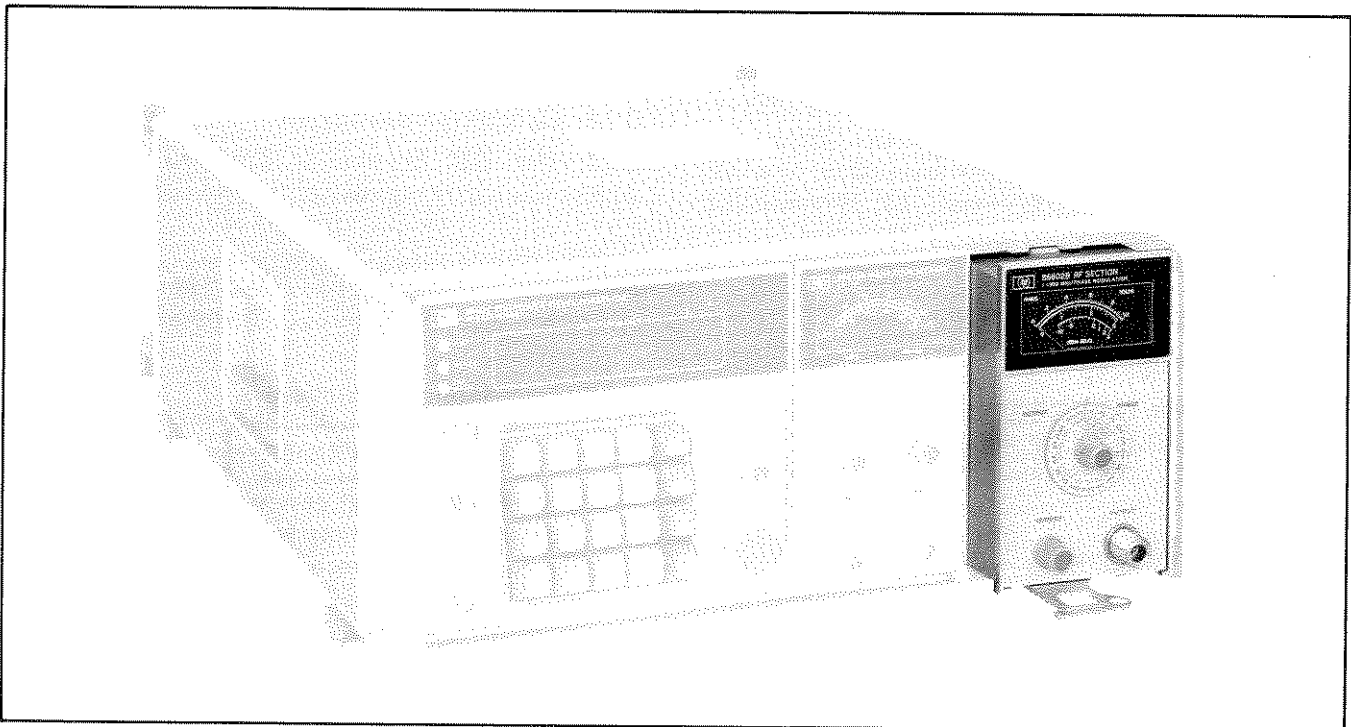


Figure 2-1. RF Section Partially Inserted into Mainframe

SECTION III OPERATION

3-1. INTRODUCTION

3-2. This section contains information which will enable the operator to learn to operate and quickly check for proper operation of the RF Section plug-in as part of the Synthesized Signal Generator System.

3-3. PANEL FEATURES

3-4. The front and rear panel controls, connectors, and indicators of the RF Section and its options are described by Figure 3-1 and 3-2.

3-5. OPERATOR'S CHECKS


3-6. The RF Section, as part of the Synthesized Signal Generator System, accepts inputs from the rest of the system but controls only the RF output level. Even though the controlled circuits for most other functions are within the RF Section, the actual checks are found in the manual of the instrument which controls that function.

3-7. The Operator's Checks in this manual are intended to verify proper operation of the circuits which control and are controlled by the RF output level controls. This includes the meter, the VERNIER control, the OUTPUT RANGE switch, and the Output Range Attenuator when operating in the local mode. When the system is being remotely controlled, the 1 dB and 10 dB remote step attenuator switches are checked in place of the VERNIER control and OUTPUT RANGE switch. Refer to Figure 3-3.

3-8. OPERATING INSTRUCTIONS

3-9. In this system, the mainframe and plug-ins contain the controls for frequency, modulation, and RF level selection. The mainframe controls frequency, the Modulation Section plug-in controls modulation type and level, and the RF Section plug-in controls RF output level. The Operating Instructions for the RF Section plug-in are included in Table 3-1.

FRONT PANEL FEATURES

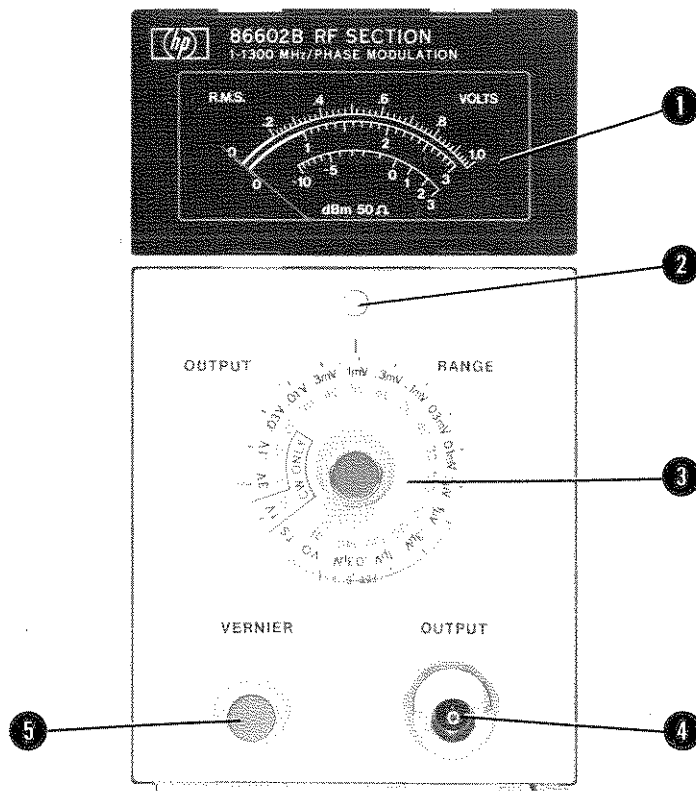

NOTE

The front panel of the option 002 instrument is shown. The standard instrument does not have the term PHASE MODULATION after 1-1300 MHz. The option 001 instrument has an OUTPUT RANGE switch which shows only the +10 and 0 dBm ranges.

- 1 Meter.** Indicates the RF Output level in Vrms and dBm (50Ω) with the scale reference indicated by the OUTPUT RANGE switch.
- 2 Mechanical Meter Zero Control.** Sets the Panel Meter indicator to zero when the mainframe LINE Switch is set to STBY.
- 3 OUTPUT RANGE Switch.** Sets the output level range of all except option 001 instruments from +10 to -140 dBm (50Ω) in 10 dB steps. For option 001 instruments, +10 and 0 dBm ranges only.
- 4 OUTPUT Jack.** Type-N female coaxial connector. RF Output level +10 to -146 dBm (0.7 Vrms to 0.01 μVrms) into a 50Ω load. Frequency range is 1 to 1299.999 999 MHz in 1 Hz steps.
- 5 VERNIER Control.** RF Output continuously variable within the useable range (+3 to -6 dB) as indicated by the meter.

Figure 3-1. Front Panel Controls, Connectors, and Indicators


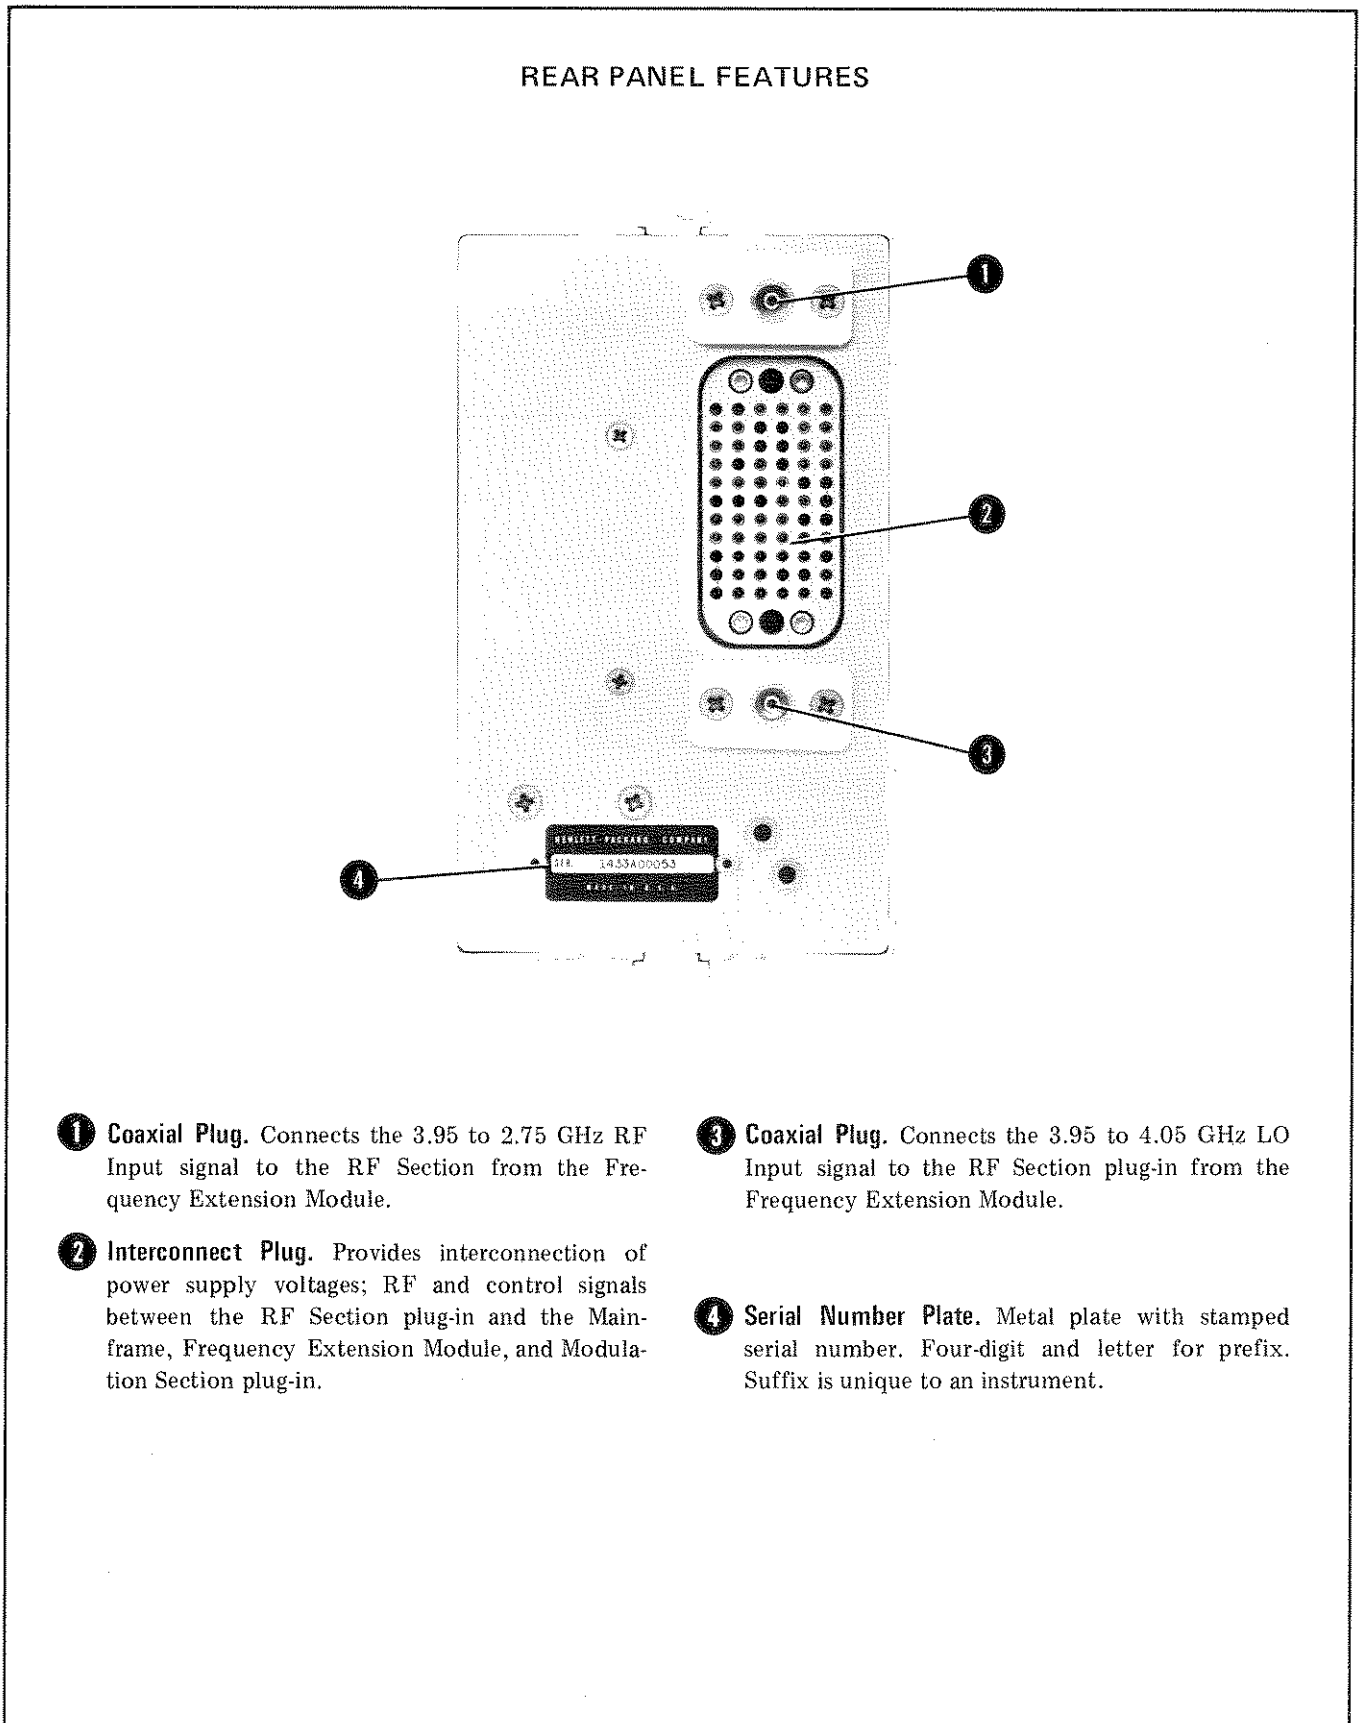


Figure 3-2. Rear Panel Connectors and Indicators

OPERATOR'S CHECKS

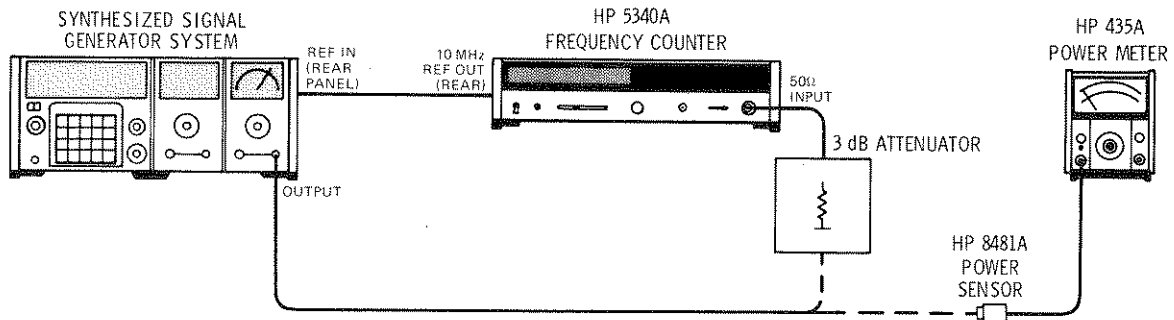

WARNING

BEFORE CONNECTING THIS SYSTEM TO LINE (MAINS) VOLTAGE, the safety and installation instructions found in Sections II and III of the mainframe manual should be followed.

CAUTION

Damage to the signal generator system may occur if option 002 RF Sections are used with unmodified 8660A and 8660B mainframes with serial prefixes 1349A and below. See the paragraph entitled Modifications in Section II.

NOTE

Refer to Section II for RF Section Installation instructions.

1. Set the System controls as follows:

Mainframe	
LINE Switch	ON
REFERENCE SELECTOR	EXT
CENTER FREQUENCY	500 MHz
Modulation Section plug-in	
MODE Switch	OFF
RF Section plug-in	
OUTPUT RANGE Switch	0 dBm
VERNIER Control	+3 dB meter reading

Figure 3-3. Operator's Checks (1 of 2)

OPERATOR'S CHECKS

2. Connect the RF Section OUTPUT to the power sensor input. Verify that the amplitude of the 500 MHz signal is approximately +3 dBm.
3. Set the OUTPUT RANGE Switch to +10 dBm and adjust the VERNIER control for a -3 dB meter reading. Verify that the output level is approximately +7 dBm.
4. Connect the RF Section OUTPUT to the frequency counter input through the 3 dB attenuator. Verify that the signal is accurate within ± 1 Hz.
5. To check the remote control capabilities of the RF Section, connect a control unit to the mainframe. Repeat steps 1 through 4 while the system is remotely programmed from an external source. Application Note 164-1 "Programming the 8660A/B Synthesized Signal Generator" provides the information needed for remote BCD operation of this system. Application Note 164-2 "Calculator Control of the 8660A/B/C Synthesized Signal Generator" provides the information needed for calculator control of the system using the HP-IB (option 005). Section III of the mainframe manual contains the same information in abridged form.

Figure 3-3. Operator's Checks (2 of 2)

Table 3-1. Operating Instructions (1 of 2)

OPERATING INSTRUCTIONS**TURN ON****WARNING**

BEFORE CONNECTING THIS SYSTEM TO THE LINE (MAINS) VOLTAGE, the safety and installation instructions found in Sections II and III of the mainframe manual should be followed.

CAUTION

Damage to the signal generator system may occur if option 002 RF Sections are used with unmodified 8660A and 8660B mainframes with serial prefixes 1349A and below. See the paragraph entitled Modifications in Section II.

NOTE

Refer to Section II for RF Section Installation Instructions.

1. Set the mainframe's LINE Switch to ON and the rear panel REFERENCE SELECTOR Switch to INT. Wait for the mainframe "oven" indication to go out.

FREQUENCY SELECTION

2. Refer to Section III of the mainframe operating and service manual for information on system frequency selection.

RF OUTPUT LEVEL

3. dBm. Set the OUTPUT RANGE switch to within +3 and -6 dB of the desired output level. Adjust the VERNIER control for a meter reading which when added to the OUTPUT RANGE switch indication equals the desired output level.
4. VOLTS. To set the RF output level in rms volts, the OUTPUT RANGE switch selected the full scale meter reading and the VERNIER control is adjusted for the correct voltage reading on the meter. The voltage level for meter scale 1.0 should not be set below 0.32 of full scale. The voltage level should not be set below 1 when using the meter scale of 3.

NOTE

In order to achieve the output level accuracy specified, the level selected must be $\leq +10$ dBm and the RF Section front panel meter reading must be as stated above.

5. Connect the RF Output to the Device Under Test. The front panel meter reading of RF Output level will be correct only if the input impedance of the Device Under Test is 50Ω .

*Table 3-1. Operating Instructions (2 of 2)***MODULATION SELECTION**

6. Refer to Section III of the Modulation Section plug-in operating and service manual for information relating to selection of modulation type and level.

REMOTE OPERATION

7. Application Note 164-1 "Programming the 8660A/B Synthesized Signal Generator" provides most of the information needed for remote BCD operation of this system. AN 164-2 "Calculator Control of the 8660A/B/C Synthesized Signal Generator" provides information for remote HP-IB operation of this system. In abridged form, Section III of the mainframe manuals contain the same information.

SALES OFFICES

Arranged alphabetically by country

ANGOLA

Teletra
Empresa Técnica de Equipamentos Eléctricos, S.A.R.L.
R. Barbosa Rodrigues, 41-J.OT.
Caixa Postal, 6487
Luanda
Tel: 35515/6

ARGENTINA

Hewlett-Packard Argentina S.A.
Santa Fe 2035, Martínez
6140 Buenos Aires
Tel: 792-1239, 798-6086
Telex: 122443 AR GIGY
Biotron S.A.C.I y M.
Avda. Paseo Colon 221
9 piso
1399 Buenos Aires
Tel: 30-4846/1851/8384
34-9356/0450/4551
Telex: (33) 17595 BÍO AR

AUSTRALIA CAPITAL TERR.

Hewlett-Packard Australia Pty. Ltd.
121 Wollongong Street
Fyshwick, 2609
Tel: 804244
Telex: 626550

NEW SOUTH WALES

Hewlett-Packard Australia Pty. Ltd.
31 Bridge Street
Pymble, 2073
Tel: 4496566
Telex: 215611

QUEENSLAND

Hewlett-Packard Australia Pty. Ltd.
5th Floor
Teachers Union Building
495-499 Boundary Street
Spring Hill, 4000
Tel: 2291544

SOUTH AUSTRALIA

Hewlett-Packard Australia Pty. Ltd.
153 Greenhill Road
Parkside, 5063
Tel: 2725911
Telex: 825366

VICTORIA

Hewlett-Packard Australia Pty. Ltd.
31-41 Joseph Street
Blackburn, 3130
Tel: 89-6351
Telex: 31024 MELB

WESTERN AUSTRALIA

Hewlett-Packard Australia Pty. Ltd.
141 Stirling Highway
Hedlands, 6009
Tel: 3865455
Telex: 93859

AUSTRIA

Hewlett-Packard Ges.m.b.H.
Wendlingstrasse 29
P.O. Box 7
A-1205 Vienna
Tel: 35-16-21-0
Telex: 13582/135066

HAWAII

Hewlett-Packard Ges.m.b.H.
Wendlingstrasse, 29
A-1205 Wien
Tel: 35-16-21
Telex: 135066

BAHRAIN

Medical Only
Wael Pharmacy
P.O. Box 648
Bahrain
Tel: 54886, 56123
Telex: 8550 WAEI GJ
Al Hamdiya Trading and Contracting
P.O. Box 20074
Manama
Tel: 259978, 259958
Telex: 8895 KALDIA GJ

BANGLADESH

The General Electric Co. of Bangladesh Ltd.
Magnat House 72
Dikusna Commercial Area
Motihalli, Dacca 2
Tel: 252415, 252419
Telex: 734

BELGIUM

Hewlett-Packard Benelux S.A./N.V.
Avenue du Col-Vert, 1,
(Groenkraglaan)
B-1700 Brussels
Tel: 23 67 22

BRAZIL

Hewlett-Packard do Brasil
I.e.C. Ltda.
Alameda Rio Negro, 750
Alphaville
06400 Barueri SP
Tel: 429-3222
Hewlett-Packard do Brasil
I.e.C. Ltda.
Rua Padre Chapas, 32
90000-Pórtico Alegre-RS
Tel: 22-2998, 22-6621
Hewlett-Packard do Brasil
I.e.C. Ltda.
Av. Epitácio Pessoa, 4664
22471-Rio de Janeiro-RJ
Tel: 286-0237
Telex: 021-21905 HPBR BR

CANADA

ALBERTA
Hewlett-Packard (Canada) Ltd.
11620A - 168th Street
Edmonton T5M 3T9
Tel: (403) 452-3670
TWX: 610-831-2431

Hewlett-Packard (Canada) Ltd.
210, 7220 Fisher St. S.E.
Calgary T2H 2H6
Tel: (403) 253-2713
TWX: 610-821-6141

BRITISH COLUMBIA

Hewlett-Packard (Canada) Ltd.
10691 Shellbridge Way
Richmond V6X 2W7
Tel: (604) 270-2277
TWX: 610-925-5059

MANITOBA

Hewlett-Packard (Canada) Ltd.
380-550 Century St.
St. James,
Winnipeg R3M 0Y1
Tel: (204) 786-6701
TWX: 610-871-3531

NOVA SCOTIA

Hewlett-Packard (Canada) Ltd.
P.O. Box 931
800 Windmill Road
Dartmouth B3B 1L1
Tel: (902) 469-9430
TWX: 610-271-4482

ONTARIO

Hewlett-Packard (Canada) Ltd.
1020 Morrison Dr.
Ottawa K2H 8K7
Tel: (613) 820-6483
TWX: 610-563-1636

Hewlett-Packard (Canada) Ltd.

6877 Goreway Drive
Mississauga L4V 1M8
Tel: (416) 678-9430
TWX: 610-492-4246

Hewlett-Packard (Canada) Ltd.

552 Newwood Street
London N6E 2S5
Tel: (519) 686-9185
TWX: 610-352-1201

QUEBEC

Hewlett-Packard (Canada) Ltd.
275 Hymus Blvd.
Pointe Claire H9R 1G7
Tel: (514) 697-4232
TWX: 610-422-3022

FOR CANADIAN AREAS NOT LISTED:

Contact Hewlett-Packard (Canada) Ltd. in Mississauga.
CHILE
Jorge Calcagni y Cia. Ltda.
Arturo Burtie 065
Casilla 16475
Correo 9, Santiago
Tel: 220222
Telex: JCALCAGN

COLUMBIA

Instrumentación
Henrik A. Langebaek & Kier S.A.
Carrera 7 No. 48-75
Apartado Aéreo 8287
Bogotá, D.E.
Tel: 269-8877
Telex: 44400

INSTRUMENTACIÓN

H.A. Langebaek & Kier S.A.
Carrera 63 No. 49-A-31
Apartado 54098
Medellín
Tel: 304475

COSTA RICA

Científica Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159
San José
Tel: 24 66 72

CYPRUS

Kyprionics
19 Gregorios Xenopoulos Street
P.O. Box 1152
Nicosia
Tel: 45628/29
Telex: 3018

CZECHOSLOVAKIA

Hewlett-Packard
Obchodní zastupitelství v CSSR
Přemysly styk
Post. schránka 27
CS 118 01 Praha 011
CSSR
Vývojova a Provozni Zakladna
Vyzkumnych Ustavu v
Bechovicich
CSSR-25097 Bechovice u
Prahy
Tel: 89 93 41
Telex: 12133

Institute of Medical Bionics

Vyskumny Ustav Lekarskej
Bioniky
Jedlova 6
CS-88346 Bratislava-
Kramare
Tel: 44-551
Telex: 93229

DENMARK

Hewlett-Packard A/S
Dalavej 52
DK-3480 Birkerød
Tel: (02) 81 66 40
Telex: 37409 hpas dk
Hewlett-Packard A/S
Navervej 1
DK-8600 Silkeborg
Tel: (06) 82 71 66
Telex: 37409 hpas dk

ECUADOR

CYEDE Cia. Ltda.
P.O. Box 6423 CCI
Av. Eloy Alfaro 1749
Quito
Tel: 450-975, 243-052
Telex: 2548 CYEDE ED
Medical Only
Hospital S.A.
Casilla 3590
Robles 625
Quito
Tel: 545-250

EGYPT

I.E.A.
International Engineering Associates
24 Hussein Hegazi Street
Kasr el-Aini
Cairo
Tel: 23 829
Telex: 93830

SAMITRO

Sami Amin Trading Office
18 Abdel Aziz Gawish
Abdine-Cairo
Tel: 24932

EL SALVADOR

IPESA
Bulevar de los Heroes 11-48
Edificio Sarah 1148
San Salvador
Tel: 252787

ETHIOPIA

Abdella Abdulmalik
P.O. Box 2635
Addis Ababa
Tel: 11 93 40

FINLAND

Hewlett-Packard Oy
Revontuliente, 7
SF-02100 Espoo 10
Tel: (90) 455 0211
Telex: 121563 hewpa fi

FRANCE

Hewlett-Packard France
Zone d'activités de
Coulaboéuf
Avenue des Tropiques
Boite Postale 6
91401 Orsay-Cédex
Tel: (1) 907 78 25
TWX: 600048F

Hewlett-Packard France

Chemin des Mouilles
S.P. 182
69130 Ecullly
Tel: (78) 33 81 25
TWX: 310617F

Hewlett-Packard France

20, Chemin de La Cèprière
31081 Toulouse
Le Mirail-Cédex
Tel: (61) 40 11 12

GREECE

Kostas Karayannis
8 Omirou Street
Athens 133
Tel: 32 30 303/32/37 731
Telex: 21 59 62 RKAR GR

Hewlett-Packard France

Le Ligoures
Place Romée de Villeneuve
13100 Aix-en-Provence
Tel: (42) 59 41 02
TWX: 410770F

Hewlett-Packard France

2, Allée de la Bourgonette
35100 Rennes
Tel: (99) 51 42 44
TWX: 740912F

Hewlett-Packard France

18, rue du Canal de la Marne
67300 Schiltigheim
Tel: (88) 83 08 10
TWX: 89014F

Hewlett-Packard France

Immeuble péricentre
rue van Gogh
59650 Villeneuve D'Ascq
Tel: (20) 91 41 25
TWX: 160124F

Hewlett-Packard France

Bâtiment Ampère
Rue de la Commune de Paris
B.P. 300
93153 Le Blanc Mesnil-
Cédex
Tel: (01) 931 88 50
Telex: 211032F

Hewlett-Packard France

Av. du Pdt. Kennedy
33700 Mérignac
Tel: (56) 97 01 81

Hewlett-Packard France

Immeuble Lorraine
Boulevard de France
91035 Evry-Cédex
Tel: 077 96 60
Telex: 692315F

Hewlett-Packard France

23 Rue Lothaire
57000 Metz
Tel: (87) 65 53 50

GERMAN FEDERAL REPUBLIC

Hewlett-Packard GmbH
Vertiebszentrale Frankfurt
Berner Strasse 117
Postfach 560 140
D-6000 Frankfurt 56
Tel: (060) 11 50041
Telex: 04 13249 hpflm d

Hewlett-Packard GmbH

Technisches Büro Böblingen
Herrenberger Strasse 110
D-7030 Böblingen
Tel: (07031) 667-1
Telex: 07265739 bbn

Hewlett-Packard GmbH

Technisches Büro Düsseldorf
Emanuel-Leutze-Str. 1
(Seestern)
D-4000 Düsseldorf
Tel: (0211) 5971-1
Telex: 085/86 533 hpdd d

Hewlett-Packard GmbH

Technisches Büro Hamburg
Kapselndring 5
D-2000 Hamburg 60
Tel: (040) 63804-1
Telex: 21 63 032 hpfd d

Hewlett-Packard GmbH

Technisches Büro Hannover
Am Grossmarkt 6
D-3000 Hannover 91
Tel: (0511) 46 60 01
Telex: 092 3259

Hewlett-Packard GmbH

Technisches Büro Nürnberg
Neumeyersstrasse 90
D-8500 Nürnberg
Tel: (0911) 52 20 83
Telex: 0623 860

GUAM

Guam Medical Supply, Inc.
Suite C, Airport Plaza
P.O. Box 8947
Tamuning 96911
Tel: 646-4513

GUATEMALA

IPESA
Avenida Reforma 3-48
Zona 9
Guatemala City
Tel: 318627, 314786,
66471-5, ext. 9
Telex: 4192 Teletro GU

HONG KONG

Hewlett-Packard Hong Kong
Ltd.
11th Floor, Four Seas Bldg,
212 Nathan Rd.
Kowloon
Tel: 3-697446 (5 lines)
Telex: 36678 HX

Medical/Analytical Only

Schmidt & Co. (Hong Kong)
Ltd.
Wing On Centre, 28th Floor
Connaught Road,
Hong Kong
Tel: 5-455644
Telex: 74766 SCHMX HX

INDIA

Blue Star Ltd.
Sabas
414/2 Vir Savarkar Marg
Pune
Bombay 400 025
Tel: 45 78 87
Telex: 011-4093

Blue Star Ltd.

Band Box House
Prabhaday
Bombay 400 025
Tel: 45 73 01
Telex: 011-3751

Blue Star Ltd.

Bhandari House
91 Nehru Place
New Delhi 110 024
Tel: 682547
Telex: 031-2463

Blue Star Ltd.

T.C. 7/803 'Poornima'
Maruthankuzhi
Trivandrum 695 013
Tel: 65799
Telex: 0884-259

Blue Star Ltd.

11 Magarath Road
Bangalore 560 025
Tel: 55668
Telex: 0845-430

Blue Star Ltd.

Meekashi Mandiram
XXXXV/1379-2 Mahatma
Gandhi Rd.
Cochin 682 016
Tel: 32069
Telex: 085-514

Blue Star Ltd.

1-1-1171/1 Sarojini Devi Road
Secunderabad 500 033
Tel: 70126
Telex: 0155-459

Blue Star Ltd.

133 Kodambakkam High Road
Madras 600 034
Tel: 82057
Telex: 041-379

ICELAND

Medical Only
Eiding Trading Company Inc.
Hafnarvöll - Tryggvagöllu
P.O. Box 895
IS-Reykjavik
Tel: 1 58 20/1 63 03

INDONESIA

BERCA Indonesia P.T.
P.O. Box 496/Jkt.
Jn. Abdul Muis 62
Jakarta
Tel: 349255, 349888
Telex: 46748 BERSIL IA

BERCA Indonesia P.T.

P.O. Box 174/Sby.
23 Jln. Jimerito
Surabaya
Tel: 42027

IRELAND

Hewlett-Packard Ltd.
Kestrel House
Clanwilliam Place
Lower Mount Street
Dublin 2, Eire
Hewlett-Packard Ltd.
2C Avonberg Ind. Est.
Long Mile Road
Dublin 12
Tel: 514322/514224
Telex: 30439

Medical Only

Cardiac Services (Ireland) Ltd.
Kilmore Road
Arlane
Dublin 5, Eire
Tel: (01) 315820

Medical Only

Cardiac Services Co.
95A Finaghy Rd. South
Dublin 12
Tel: 5-455644
Telex: 74766

ISRAEL

Electronics Engineering Div.
of Motorola Israel Ltd.
16, Kremenetski Street
P.O. Box 25016
Tel-Aviv
Tel: 38973
Telex: 33569, 34164

ITALY

Hewlett-Packard Italiana S.p.A.
Via G. Di Vittorio, 9
20063 Carnusco Sui
Naviglio (MI)
Tel: (2) 903691
Telex: 334632 HEWPACIT

Hewlett-Packard Italiana S.p.A.

Via Turazza, 14
35100 Padova
Tel: (49) 664888
Telex: 430315 HEWPACI

Hewlett-Packard Italiana S.p.A.

Via G. Armettini 10
1-00143 Roma
Tel: (06) 54 69 61
Telex: 610514

Hewlett-Packard Italiana S.p.A.

Corso Giovanni Lanza 94
I-10133 Torino
Tel: (011) 659308
Telex: 221079

Hewlett-Packard Italiana S.p.A.

Via Principe Nicola 43 G/C
I-95126 Catania
Tel: (095) 37 05 04
Telex: 970291

Hewlett-Packard Italiana S.p.A.

Via Nuova san Rocco A
Capadimonie, 62A
80131 Napoli
Tel: (081) 710898

Hewlett-Packard Italiana S.p.A.

Via Martin Luther King, 38/111
I-40132 Bologna
Tel: (051) 402394
Telex: 511630

JAPAN

Yokogawa-Hewlett-Packard
Ltd.
29-21, Takaido-Higashi
3-chome
Suginami-ku, Tokyo 168
Tel: 03-331-6111
Telex: 232-2024 YHP-Tokyo
Yokogawa-Hewlett-Packard
Ltd.
Chuo Bldg., 4th Floor
4-20, Nishinakajima 5-chome
Yodogawa-ku, Osaka-shi
Osaka, 532
Tel: 06-304-6021
Telex: 523-3624

Yokogawa-Hewlett-Packard

Suniohime Seimei Nagaya Bldg.
11-2 Shimosasajima-cho
Nakamura-ku, Nagoya, 450
Tel: 052 571-5171
Yokogawa-Hewlett-Packard
Ltd.
Tanigawa Building
2-24-1 Tsuruya-cho
Kanagawa-ku
Yokohama, 221
Tel: 045-312-1252
Telex: 382-3204 YHP YOK

Yokogawa-Hewlett-Packard

Mito Mitsui Building
105, 1-chome, San-no-maru
Mito, Ibaragi 310
Tel: 0292-25-7470

Yokogawa-Hewlett-Packard

inohe Building
1348-3, Asahi-cho, 1-chome
Atsugi, Kanagawa 243
Tel: 0462-24-0452

Yokogawa-Hewlett-Packard

Kumagaya Asahi
Hachijuri Building
4th Floor
3-4, Tsukuba
Kumagaya, Saitama 360
Tel: 0485-24-6563

JORDAN

Mouasher Cousins Co.
P.O. Box 1387
Amman
Tel: 24907/39907
Telex: SABC0 JO 1456

KENYA

ADCOM Ltd., Inc.
P.O. Box 30070
Nairobi
Tel: 22639
Telex: 22639

Medical Only

International Aeradio (E.A.) Ltd.
P.O. Box 19012
Nairobi Airport
Nairobi
Tel: 336055/56
Telex: 22201/22301

International Aeradio (E.A.) Ltd.

