

# Keysight U7108x and U7110x Series Coaxial Multiport Switches

Operating and  
Service Manual

# Notices

## Copyright Notice

© Keysight Technologies 2020

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies as governed by United States and international copyright laws.

## Manual Part Number

U7108-90001

## Edition

Edition 1, October 1, 2020

## Printed in:

Printed in Malaysia

## Published by:

Keysight Technologies  
Bayan Lepas Free Industrial Zone,  
11900 Penang, Malaysia

## Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

## Declaration of Conformity

Declarations of Conformity for this product and for other Keysight products may be downloaded from the Web. Go to <http://www.keysight.com/go/conformity>. You can then search by product number to find the latest Declaration of Conformity.

## U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at <http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

## Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR OF ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT SHALL CONTROL.

## Safety Information

### CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.





### WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

# Certification

Keysight Technologies certifies that this product met its published specifications at the time of shipment from the factory. Keysight Technologies further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology (NIST, formerly NBS), to the extent allowed by the Institute's calibration facility, and to the calibration facilities of the other International Standards Organization members.

# Regulatory Markings

 <p>The CE mark is a registered trademark of the European Community. If it is accompanied by a year, it indicates the year the design was proven.</p>	 <p>This symbol indicates the time period during which no hazardous or toxic substance elements are expected to leak or deteriorate during normal use. Forty years is the expected useful life of the product.</p>
<p><b>ISM 1-A</b></p> <p>This text indicates that the instrument is an Industrial Scientific and Medical Group 1 Class A product (CISPR 11, Clause 4).</p>	<p><b>ICES/NMB-001</b></p> <p>ICES/NMB-001 indicates that this ISM device complies with the Canadian ICES-001. Cet appareil ISM est conforme a la norme NMB-001 du Canada.</p>
 <p>The RCM mark is a registered trademark of the Australian Communications and Media Authority.</p>	
 <p>This symbol is a South Korean Class A EMC Declaration. This equipment is Class A suitable for professional use and is for use in electromagnetic environments outside of the home.</p> <p><b>R-R-Kst-WN206xx</b> 이 기기는 업무용 (A 급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 따라 며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.</p>	

## South Korean Class A EMC Declaration

Information to the user:

This instrument has been conformity assessed for use in business environments. In a residential environment, this equipment may cause radio interference.

This EMC statement applies to the equipment only for use in business environment.

### 사용자안내문

이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전파간섭의 우려가 있습니다.

사용자 안내문은 "업무용 방송통신기자재"에만 적용한다.

## EMC Requirements

This instrument is designed to comply with the following safety and EMC (Electromagnetic Compatibility) requirements:

- EMC Directive 2014/30/EU

## Waste Electrical and Electronic Equipment (WEEE) Directive

This instrument complies with the WEEE Directive marking requirement. This affixed product label indicates that you must not discard this electrical or electronic product in domestic household waste.

Product category:

With reference to the equipment types in the WEEE directive Annex 1, this instrument is classified as a "Monitoring and Control Instrument" product.

The affixed product label is as shown below.



Do not dispose in domestic household waste.

To return this unwanted instrument, contact your nearest Keysight Service Center, or visit

<http://about.keysight.com/en/companyinfo/environment/takeback.shtml> for more information.

## Sales and Technical Support

To contact Keysight for sales and technical support, refer to the support links on the following Keysight websites:

- [www.keysight.com/find/switches](http://www.keysight.com/find/switches)  
(product-specific information and support, software and documentation updates)
- [www.keysight.com/find/assist](http://www.keysight.com/find/assist)  
(worldwide contact information for repair and service)

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

## Table of Contents

Certification	3
Regulatory Markings	3
South Korean Class A EMC Declaration	4
EMC Requirements	4
Waste Electrical and Electronic Equipment (WEEE) Directive	4
Sales and Technical Support	5
<b>1 Introduction</b>	
General Information	14
Key Features	15
<b>2 Switch Configuration</b>	
Driving the Switch	18
Standard Drive (Option 200 and Option 400)	19
TTL Drive (Option 300 and Option 500)	20
Electronic Position Indicators	21
<b>3 Specifications</b>	
Environmental Specifications	24
Physical Specifications	25
<b>4 Installation and Verification</b>	
Installation	28
Operating and Service Instructions	29

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK



List of Figures

Figure 1-1	Keysight U7108x coaxial multiport switches	14
Figure 1-2	Keysight U7110x coaxial multiport switches	14
Figure 2-1	Drive connection diagrams for Options 200, 300, 400 and 500	18
Figure 2-2	Pin configuration for indicator function	21
Figure 3-1	U7108x product outline	25
Figure 3-2	U7110x product outline	26
Figure 4-1	Connection to perform quick check	29

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

List of Tables

Table 1-1	List of Keysight U7108x and U7110x coaxial multiport switches . . . .	15
Table 3-1	U7108x and U7110x environmental specifications . . . . .	24

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

# 1 Introduction

General Information 14

Key Features 15

This chapter provides you an overview of Keysight U7108x and U7110x series coaxial multiport switches.

## General Information

Keysight U7108A/B/C SP8T and U7110A/B/C SP10T terminated switches provide the life and reliability required for automated test and measurement, signal monitoring and routing applications. These switches can be used in various applications as they are available in multiple frequency ranges, up to 26.5 GHz.



**Figure 1-1** Keysight U7108x coaxial multiport switches



**Figure 1-2** Keysight U7110x coaxial multiport switches

Innovative design and careful process control create switches that meet the requirements for highly repeatable switching elements in test instruments and switching interfaces. The switches are designed to operate for more than 1,000,000 cycles. The exceptional insertion loss repeatability reduces sources of random errors in the measurement path and improves measurement uncertainty. Switch life is a critical consideration in production test systems, satellite and antenna monitoring systems, and test instrumentation. The longevity of these switches increases system uptime and lowers the cost of ownership by reducing calibration cycles and switch maintenance.

**Table 1-1** List of Keysight U7108x and U7110x coaxial multiport switches

Model number	Frequency range	Configuration
U7108A	DC to 9 GHz	SP8T
U7108B	DC to 20 GHz	SP8T
U7108C	DC to 26.5 GHz	SP8T
U7110A	DC to 9 GHz	SP10T
U7110B	DC to 20 GHz	SP10T
U7110C	DC to 26.5 GHz	SP10T

## Key Features

- SP8T and SP10T configurations
- Magnetic latching
- Operating life of 1 million cycles, typical to ensure accurate system measurements and reduce calibration intervals
- Excellent isolation, typically > 63 dB at 26.5 GHz
- Opto-electronic indicators and interrupts
- Terminated ports
- TTL/5 V CMOS compatible (optional)

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK



## 2 Switch Configuration


Driving the Switch	18
Standard Drive (Option 200 and Option 400)	19
TTL Drive (Option 300 and Option 500)	20
Electronic Position Indicators	21

This chapter provides you information on how to drive the switches using standard drive and TTL drive. Also included is the configuration to utilize the function of the position indicator.

## Driving the Switch

Each RF path can be closed by applying ground (TTL “High” for option 300 and 500) to the corresponding “drive” pin. In general, all other RF paths are simultaneously opened by internal logic.

See [Figure 2-1](#) for drive connection diagrams.

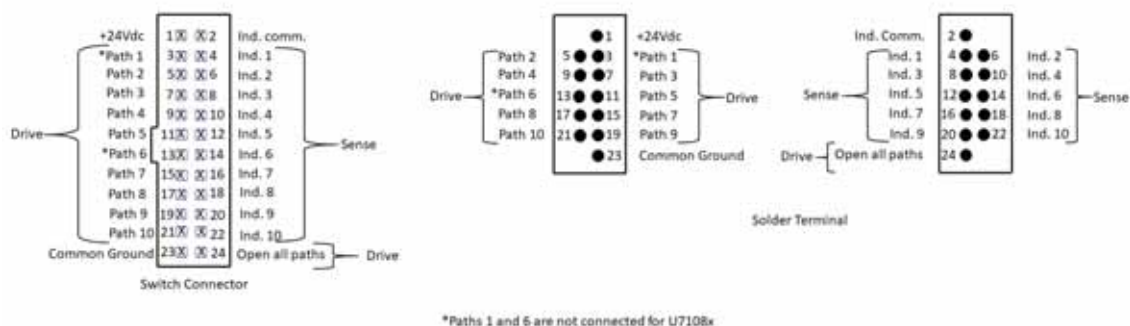

**Figure 2-1** Drive connection diagrams for Options 200, 300, 400 and 500

The default operation of the switches is break-before-make. Make-before-break switching can be accomplished by simultaneously selecting the “drive” pins for old RF path and new RF path. Once the new RF path is closed (20 ms), de-select the old RF path “drive” pin while leaving the new RF path “drive” pin selected. The switch circuitry will automatically open the old RF path while leaving the new RF path engaged.

## Standard Drive (Option 200 and Option 400)

- 1 Connect pin 1 to supply voltage (24 Vdc) and pin 23 to ground.

**NOTE**

Pin 23 must always be connected to ground to enable the electronic position-indicating circuitry and drive logic circuitry.

---

**CAUTION**

If pin 23 is not connected to power supply ground, catastrophic failure will occur.

---

- 2 Select (close) desired RF path by applying ground to the corresponding "drive" pin; for example ground pin 3 to close RF path 1.

**NOTE**

After the RF path is switched and latched, the drive current is interrupted by the electronic position-sensing circuitry. Pulsed control is not necessary, but if implemented, the pulse width must be 20 ms minimum to ensure the switch is fully latched.

---

- 3 To select another RF path, ensure that all unwanted RF path "drive" pins are disconnected from ground (to prevent multiple RF path engagement). Ground the "drive" pin which corresponds to the desired RF path.
- 4 To open all RF paths, ensure that all RF path "drive" pins are disconnected from ground. Then, connect pin 24 to ground.

## TTL Drive (Option 300 and Option 500)

- 1 Connect pin 1 to supply voltage (24 Vdc) and pin 23 to ground.

**NOTE**

Pin 23 must always be connected to ground to enable the electronic position-indicating circuitry and drive logic circuitry.

In addition to the quiescent current supplying the electronic position-sensing circuitry, the drive current flows out of pin 23 (during switching) on TTL drive switches (option 300 and option 500).

---

**CAUTION**

If pin 23 is not connected to power supply ground, catastrophic failure will occur.

---

- 2 Select (close) desired RF path by applying ground to the corresponding "drive" pin; for example apply TTL "High" to pin 3 to close RF path 1.

**NOTE**


After the RF path is switched and latched, the drive current is interrupted by the electronic position-sensing circuitry. Pulsed control is not necessary, but if implemented, the pulse width must be 20 ms minimum to ensure the switch is fully latched.

---

- 3 To select another RF path, ensure that all unwanted RF path "drive" pins are at TTL "Low" (to prevent multiple RF path engagement). Apply TTL "High" to the "drive" pin which corresponds to the desired RF path.
- 4 To open all RF paths, ensure that all RF path drive" pins are at TTL "Low". Then, apply TTL "High" to pin.

## Electronic Position Indicators

The electronic position indicators consist of optically isolated, solid state relays which are driven by photo-electric sensors coupled to the mechanical position of the RF path's moving elements (see [Figure 2-2](#)). The circuitry consists of a common which can be connected to an output corresponding to each RF path. If multiple RF paths are engaged, the position indicator corresponding to each closed RF path will be connected to common. The solid state relays are configured for AC and/or DC operation. The electronic position indicators require that the supply (24 Vdc) be connected to pin 1 and ground connected to pin 23.

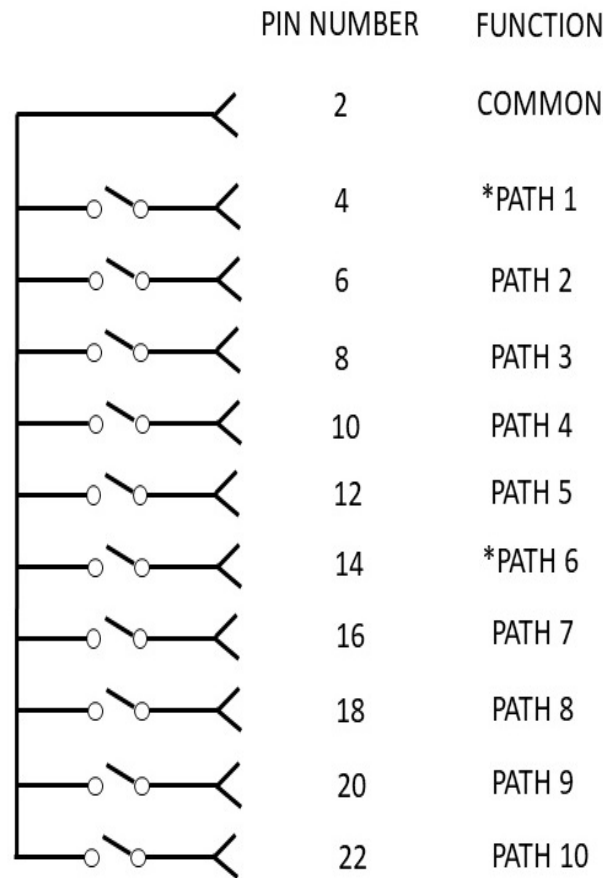

\*Paths 1 and 6 are not connected for U7108x

Figure 2-2 Pin configuration for indicator function

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

## 3 Specifications

Environmental Specifications 24

Physical Specifications 25

This chapter provides you the environmental specifications of Keysight U7108x and U7110x series coaxial multiport switches.

## Environmental Specifications

Keysight U7108x and U7110x series coaxial multiport switches are designed to fully comply with Keysight Technologies' product operating environmental specifications as shown in the table below.

**Table 3-1** U7108x and U7110x environmental specifications

Temperature	
– Operating	-25°C to +55°C
– Storage	-55 °C to +85°C
– Cycling	-55 °C to +85°C, 10 Cycles per MIL-STD-202F
Humidity	
– Operating	95% RH at 40°C
– Resistance	85% RH at 85°C, 10 Days per JEDEC HAST Standard
Shock	
– End-user handling	Delta-V: 3m/s ±5%, Duration <3ms at 6 faces
– Mechanical Survival	Half Sine: 500g, 0.5ms at 6 faces
– Transportation	50g , delta-V: 8m/s ±10% at 6 faces
Vibration	
– Operating (Random)	0.3 Grms, 5-500Hz
– Survival (Random)	7 Grms, 50-2000Hz
Altitude	
– Operating	4,600 meters (15,092 feet)
– Non-operating	15,300 meters (50,197 feet)



## Physical Specifications

The table below lists the weight of the Keysight U7108x and U7110x series coaxial multiport switches.

Model number	Weight
U7108A/B/C	320 gms (0.705 lbs)
U7110A/B/C	325 gms (0.716 lbs)

Figure 3-1 and Figure 3-2 show the dimensions of the Keysight U7108x and U7110x series coaxial multiport switches respectively.

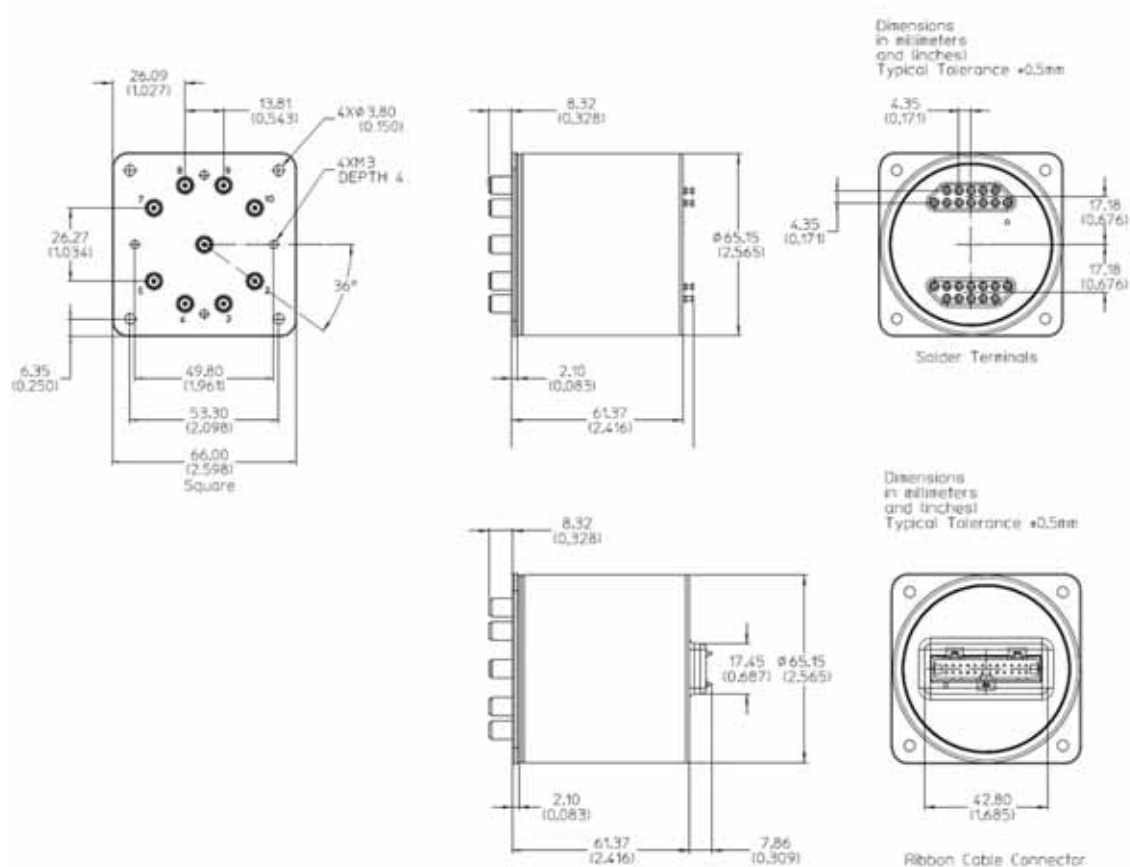


Figure 3-1 U7108x product outline

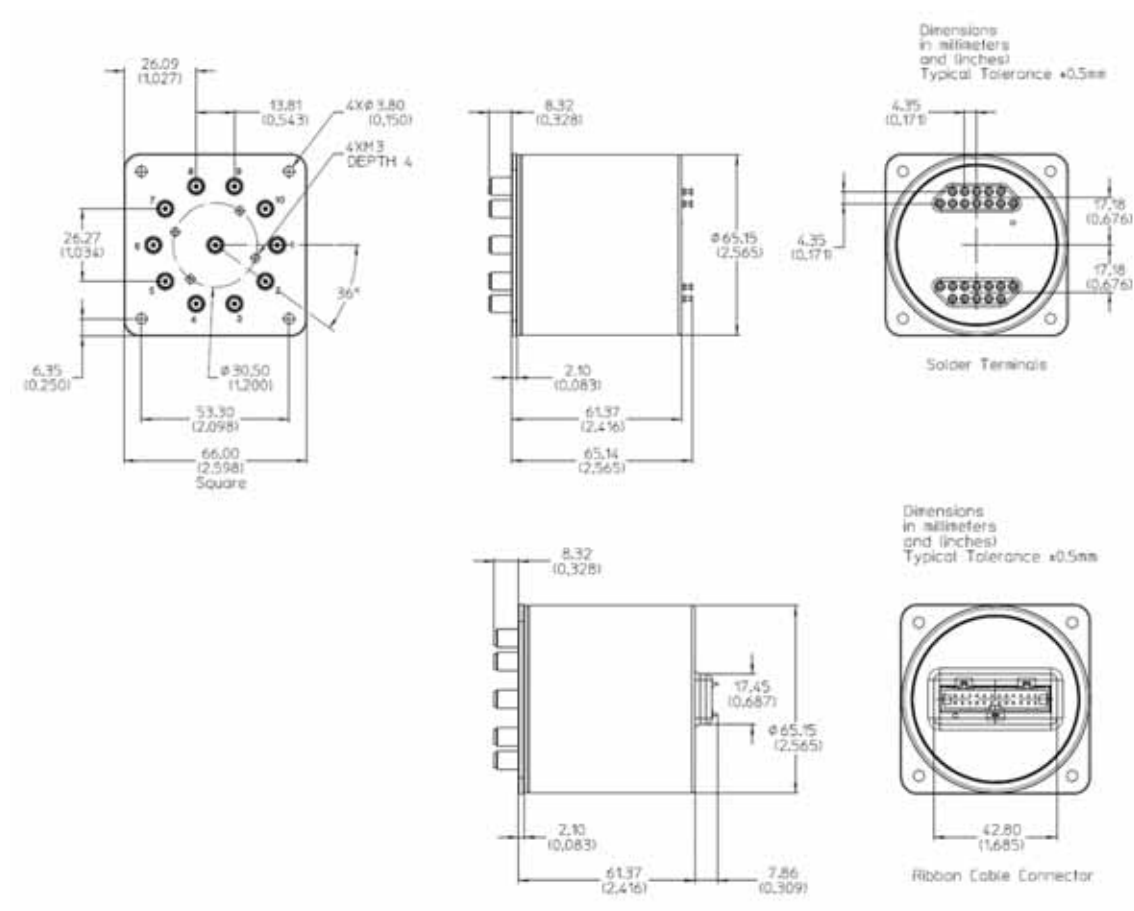


Figure 3-2 U7110x product outline

## 4 Installation and Verification

Installation	28
Operating and Service Instructions	29

This chapter provides you installation information and simple verification steps of the switches.

## Installation

### Initial inspection

- 1 Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked for completeness and the instrument has been checked both mechanically and electrically.
  - Check for mechanical damage such as scratches or dents.
  - Procedures for checking electrical performance are given under “Operator’s check” on page 29 or “Performance test” on page 30.
- 2 If the contents are incomplete, there is mechanical damage or defect, or the instrument does not pass the electrical performance test, contact the nearest Keysight Sales and Service office (refer to “Sales and Technical Support” on page 5). Keysight will arrange for repair or replacement of the damaged or defective equipment. Keep the shipping materials for the carrier’s inspection.
- 3 If you are returning the instrument under warranty or for service, repackaging the instrument requires original shipping containers and materials or their equivalents. Keysight can provide packaging materials identical to the original materials. Refer to “Sales and Technical Support” on page 5 for the Keysight office nearest to you. Attach a tag indicating the type of service required, return address, model number, and serial number. Mark the container *FRAGILE* to insure careful handling. In any correspondence, refer to the instrument by its model number and serial number.


## Operating and Service Instructions

### Operator's check

The operator's check is supplied to allow the operator to make a quick check on the coaxial multiport switches prior to use or if a failure is suspected.

#### Description

The coaxial multiport switch is connected to a network analyzer configured for the S-parameter measurement. The network analyzer may be set to sweep over the whole or selected frequency range of the switch to be verified. The S-parameter measurement is the best way to determine if the switch is working properly.

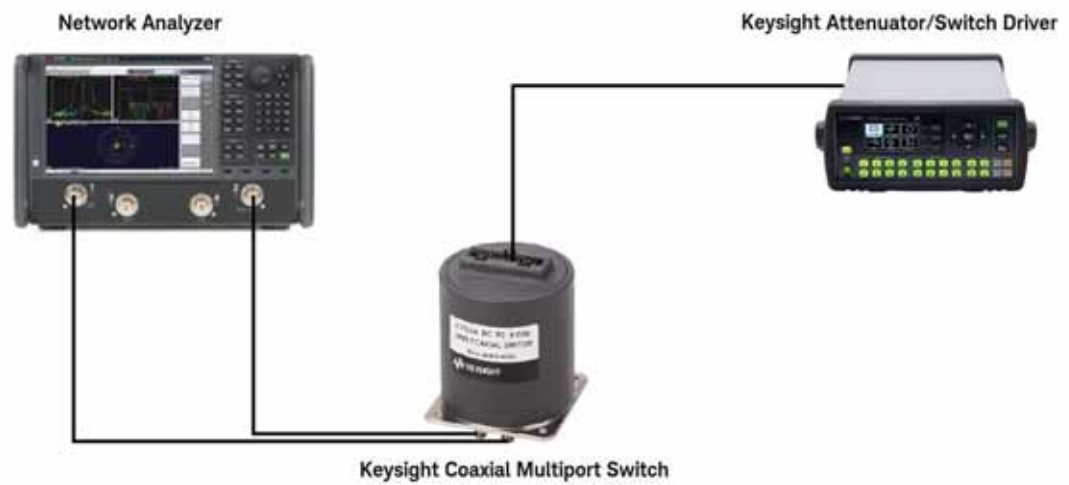

**Figure 4-1** Connection to perform quick check

### Quick check procedure

- 1 Connect the common port of the switch to Port 1 of the network analyzer and one of the outer RF ports to Port 2 of the network analyzer as illustrated in [Figure 4-1](#).
- 2 For standard drive (option 200 and option 400), apply ground to the corresponding "drive" pin to close the selected path. Refer to ["Standard Drive \(Option 200 and Option 400\)"](#) on page 19.
- 3 For TTL drive (option 300 and option 500), apply "High" to the corresponding "drive" pin to close the selected path. Refer to ["TTL Drive \(Option 300 and Option 500\)"](#) on page 20.
- 4 Perform the S-parameter measurement and verify against supplemental specifications (cold switching).
- 5 Repeat steps 1 to 4 until all paths are measured and verified.

### CAUTION

The U7108x and U7110x can be damaged if excessive torque is applied to the connectors. The recommended torque value is 5 in-lb torque for SMA connectors.

---

## Performance test

The coaxial multiport switches can be tested to the accuracy of the specifications with a network analyzer or equivalent equipment of suitable accuracy. If a network analyzer is available, test the instrument using the procedure in the analyzer's operating manual.

## Service instructions

### Adjustment and repair

Keysight U7108x and U7110x series coaxial multiport switches do not require internal adjustments and are not recommended for repair.

### Maintenance

The connectors, particularly the connector faces, must be kept clean. For instructions on connecting and care of your connectors, refer to the Microwave Connector Care Quick Reference Card (08510-90360).



This information is subject to change without notice. Always refer to the Keysight website for the latest revision.

© Keysight Technologies 2020  
Edition 1, October 1, 2020

Printed in Malaysia



U7108-90001

[www.keysight.com](http://www.keysight.com)